

AstonMartin Diagnostics List (Note:For reference only)

model	year	system	function	subfunction
Cygnnet	2011-2018	EMS (Engine Management Module)	Read Fault Code	
Cygnnet	2011-2018	EMS (Engine Management Module)	Clear Fault Memory	
Cygnnet	2011-2018	EMS (Engine Management Module)	Version Information	
Cygnnet	2011-2018	EMS (Engine Management Module)	Read Data Stream	
Cygnnet	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Cygnnet	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Cygnnet	2011-2018	EMS (Engine Management Module)	Special Function	Key Learn/Clear
Cygnnet	2011-2018	EMS (Engine Management Module)	Special Function	OBDII Monitor Results
Cygnnet	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Fault Code	
Cygnnet	2011-2018	EMS-S (Engine Management Module - Secondary)	Clear Fault Memory	
Cygnnet	2011-2018	EMS-S (Engine Management Module - Secondary)	Version Information	
Cygnnet	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Data Stream	
Cygnnet	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Cygnnet	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Cygnnet	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	Key Learn/Clear
Cygnnet	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	OBDII Monitor Results
Cygnnet	2011-2018	BCM (Brake Control Module)	Read Fault Code	
Cygnnet	2011-2018	BCM (Brake Control Module)	Clear Fault Memory	
Cygnnet	2011-2018	BCM (Brake Control Module)	Version Information	
Cygnnet	2011-2018	BCM (Brake Control Module)	Read Data Stream	
Cygnnet	2011-2018	BCM (Brake Control Module)	Special Function	DSC Calibration
Cygnnet	2011-2018	RCM (Restraints Control Module)	Read Fault Code	
Cygnnet	2011-2018	RCM (Restraints Control Module)	Clear Fault Memory	
Cygnnet	2011-2018	RCM (Restraints Control Module)	Version Information	
Cygnnet	2011-2018	RCM (Restraints Control Module)	Read Data Stream	
Cygnnet	2011-2018	RCM (Restraints Control Module)	Special Function	Seat OCS Zero
Cygnnet	2011-2018	RCM (Restraints Control Module)	Special Function	Seat Track Sensor Test
Cygnnet	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Fault Code	
Cygnnet	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Clear Fault Memory	
Cygnnet	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Version Information	
Cygnnet	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Data Stream	
Cygnnet	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	DI Calibration Utility
Cygnnet	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Read Car Config
Cygnnet	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Service Indicator
Cygnnet	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Transport Mode
Cygnnet	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Fault Code	
Cygnnet	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Clear Fault Memory	
Cygnnet	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Version Information	
Cygnnet	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Data Stream	
Cygnnet	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Key Fob Learn/Clear
Cygnnet	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Read Vehicle Alarm Causes
Cygnnet	2011-2018	DIM (Driver Information Module)	Read Fault Code	
Cygnnet	2011-2018	DIM (Driver Information Module)	Clear Fault Memory	
Cygnnet	2011-2018	DIM (Driver Information Module)	Version Information	
Cygnnet	2011-2018	DIM (Driver Information Module)	Read Data Stream	
Cygnnet	2011-2018	DIM (Driver Information Module)	Special Function	Lights On Key Out Warning
Cygnnet	2011-2018	DIM (Driver Information Module)	Special Function	Service Indicator
Cygnnet	2011-2018	PAM (Parking Aid Module)	Read Fault Code	
Cygnnet	2011-2018	PAM (Parking Aid Module)	Clear Fault Memory	
Cygnnet	2011-2018	PAM (Parking Aid Module)	Read Data Stream	
Cygnnet	2011-2018	PAM (Parking Aid Module)	Special Function	PAM Config
Cygnnet	2011-2018	CCM (Centre Console Module)	Read Fault Code	
Cygnnet	2011-2018	CCM (Centre Console Module)	Clear Fault Memory	
Cygnnet	2011-2018	CCM (Centre Console Module)	Version Information	
Cygnnet	2011-2018	AUD5 (Audio Amplifier Module)	Read Fault Code	
Cygnnet	2011-2018	AUD5 (Audio Amplifier Module)	Clear Fault Memory	
Cygnnet	2011-2018	AUD5 (Audio Amplifier Module)	Version Information	
Cygnnet	2011-2018	SUB5 (Sub Woofer Amplifier)	Read Fault Code	
Cygnnet	2011-2018	SUB5 (Sub Woofer Amplifier)	Clear Fault Memory	
Cygnnet	2011-2018	SUB5 (Sub Woofer Amplifier)	Version Information	
Cygnnet	2011-2018	MMM (Multi-Media Module)	Read Fault Code	
Cygnnet	2011-2018	MMM (Multi-Media Module)	Clear Fault Memory	
Cygnnet	2011-2018	MMM (Multi-Media Module)	Version Information	
Cygnnet	2011-2018	MP1 (Media Player Module)	Read Fault Code	
Cygnnet	2011-2018	MP1 (Media Player Module)	Clear Fault Memory	
Cygnnet	2011-2018	MP1 (Media Player Module)	Version Information	
Cygnnet	2011-2018	AFM (AM/FM Tuner Module)	Read Fault Code	
Cygnnet	2011-2018	AFM (AM/FM Tuner Module)	Clear Fault Memory	
Cygnnet	2011-2018	AFM (AM/FM Tuner Module)	Version Information	
Cygnnet	2011-2018	GPS (Global Positioning System)	Read Fault Code	
Cygnnet	2011-2018	GPS (Global Positioning System)	Clear Fault Memory	
Cygnnet	2011-2018	GPS (Global Positioning System)	Version Information	
Cygnnet	2011-2018	TCMZF (Transmission Control Module)	Read Fault Code	
Cygnnet	2011-2018	TCMZF (Transmission Control Module)	Clear Fault Memory	
Cygnnet	2011-2018	TCMZF (Transmission Control Module)	Version Information	
Cygnnet	2011-2018	TCMZF (Transmission Control Module)	Read Data Stream	

model	year	system	function	subfunction
Cygnet	2011-2018	ASM (Marelli Transmission Control Module)	Read Fault Code	
Cygnet	2011-2018	ASM (Marelli Transmission Control Module)	Clear Fault Memory	
Cygnet	2011-2018	ASM (Marelli Transmission Control Module)	Version Information	
Cygnet	2011-2018	ASM (Marelli Transmission Control Module)	Read Data Stream	
Cygnet	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Clutch Bleed
Cygnet	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Self Tune
Cygnet	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Snapshot
Cygnet	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Valve Test
Cygnet	2011-2018	EPB (Parking Brake)	Read Fault Code	
Cygnet	2011-2018	EPB (Parking Brake)	Clear Fault Memory	
Cygnet	2011-2018	EPB (Parking Brake)	Version Information	
Cygnet	2011-2018	EPB (Parking Brake)	Read Data Stream	
Cygnet	2011-2018	EPB (Parking Brake)	Special Function	EPB Utilities
Cygnet	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Fault Code	
Cygnet	2011-2018	ESCL (Electronic Steering Column Lock Module)	Clear Fault Memory	
Cygnet	2011-2018	ESCL (Electronic Steering Column Lock Module)	Version Information	
Cygnet	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Data Stream	
Cygnet	2011-2018	HLM (Headlamp Levelling Module)	Read Fault Code	
Cygnet	2011-2018	HLM (Headlamp Levelling Module)	Clear Fault Memory	
Cygnet	2011-2018	HLM (Headlamp Levelling Module)	Version Information	
Cygnet	2011-2018	HLM (Headlamp Levelling Module)	Read Data Stream	
Cygnet	2011-2018	SAS (Steering Angle Sensor)	Read Fault Code	
Cygnet	2011-2018	SAS (Steering Angle Sensor)	Clear Fault Memory	
Cygnet	2011-2018	SAS (Steering Angle Sensor)	Version Information	
Cygnet	2011-2018	SAS (Steering Angle Sensor)	Read Data Stream	
Cygnet	2011-2018	SAS (Steering Angle Sensor)	Special Function	DSC Calibration
Cygnet	2011-2018	ADM (Adaptive Damping Module)	Read Fault Code	
Cygnet	2011-2018	ADM (Adaptive Damping Module)	Clear Fault Memory	
Cygnet	2011-2018	ADM (Adaptive Damping Module)	Version Information	
Cygnet	2011-2018	ADM (Adaptive Damping Module)	Read Data Stream	
Cygnet	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Fault Code	
Cygnet	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Clear Fault Memory	
Cygnet	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Version Information	
Cygnet	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Data Stream	
Cygnet	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Special Function	TPMS Utilities
Cygnet	2011-2018	DSM+ (Driver Seat Module)	Read Fault Code	
Cygnet	2011-2018	DSM+ (Driver Seat Module)	Clear Fault Memory	
Cygnet	2011-2018	DSM+ (Driver Seat Module)	Version Information	
Cygnet	2011-2018	DSM+ (Driver Seat Module)	Read Data Stream	
Cygnet	2011-2018	DSM+ (Driver Seat Module)	Special Function	Seat Utilities
Cygnet	2011-2018	PSM+ (Passenger Seat Module)	Read Fault Code	
Cygnet	2011-2018	PSM+ (Passenger Seat Module)	Clear Fault Memory	
Cygnet	2011-2018	PSM+ (Passenger Seat Module)	Version Information	
Cygnet	2011-2018	PSM+ (Passenger Seat Module)	Read Data Stream	
Cygnet	2011-2018	PSM+ (Passenger Seat Module)	Special Function	Seat Utilities
Cygnet	2011-2018	DDM+ (Drivers Door Module)	Read Fault Code	
Cygnet	2011-2018	DDM+ (Drivers Door Module)	Clear Fault Memory	
Cygnet	2011-2018	DDM+ (Drivers Door Module)	Version Information	
Cygnet	2011-2018	DDM+ (Drivers Door Module)	Read Data Stream	
Cygnet	2011-2018	DDM+ (Drivers Door Module)	Special Function	Door Utilities
Cygnet	2011-2018	DDM (Drivers Door Module)	Read Fault Code	
Cygnet	2011-2018	DDM (Drivers Door Module)	Clear Fault Memory	
Cygnet	2011-2018	DDM (Drivers Door Module)	Version Information	
Cygnet	2011-2018	DDM (Drivers Door Module)	Read Data Stream	
Cygnet	2011-2018	PDM+ (Passengers Door Module)	Read Fault Code	
Cygnet	2011-2018	PDM+ (Passengers Door Module)	Clear Fault Memory	
Cygnet	2011-2018	PDM+ (Passengers Door Module)	Version Information	
Cygnet	2011-2018	PDM+ (Passengers Door Module)	Read Data Stream	
Cygnet	2011-2018	PDM+ (Passengers Door Module)	Special Function	Door Utilities
Cygnet	2011-2018	PDM (Passengers Door Module)	Read Fault Code	
Cygnet	2011-2018	PDM (Passengers Door Module)	Clear Fault Memory	
Cygnet	2011-2018	PDM (Passengers Door Module)	Version Information	
Cygnet	2011-2018	PDM (Passengers Door Module)	Read Data Stream	
Cygnet	2011-2018	DDMR (Driver Door Module Rear)	Read Fault Code	
Cygnet	2011-2018	DDMR (Driver Door Module Rear)	Clear Fault Memory	
Cygnet	2011-2018	DDMR (Driver Door Module Rear)	Version Information	
Cygnet	2011-2018	DDMR (Driver Door Module Rear)	Read Data Stream	
Cygnet	2011-2018	PDMR (Passenger Door Module Rear)	Read Fault Code	
Cygnet	2011-2018	PDMR (Passenger Door Module Rear)	Clear Fault Memory	
Cygnet	2011-2018	PDMR (Passenger Door Module Rear)	Version Information	
Cygnet	2011-2018	PDMR (Passenger Door Module Rear)	Read Data Stream	
Cygnet	2011-2018	FCIM (Front Console Interface Module)	Read Fault Code	
Cygnet	2011-2018	FCIM (Front Console Interface Module)	Clear Fault Memory	
Cygnet	2011-2018	FCIM (Front Console Interface Module)	Version Information	
Cygnet	2011-2018	RCIM (Rear Console Interface Module)	Read Fault Code	
Cygnet	2011-2018	RCIM (Rear Console Interface Module)	Clear Fault Memory	
Cygnet	2011-2018	RCIM (Rear Console Interface Module)	Version Information	
Cygnet	2011-2018	LCDM (LCD Module)	Read Fault Code	
Cygnet	2011-2018	LCDM (LCD Module)	Clear Fault Memory	

model	year	system	function	subfunction
Cygnnet	2011-2018	LCDM (LCD Module)	Version Information	
Cygnnet	2011-2018	LCDM (LCD Module)	Special Function	Rear HVAC Utilities
Cygnnet	2011-2018	ACCM (Auxiliary CCM)	Read Fault Code	
Cygnnet	2011-2018	ACCM (Auxiliary CCM)	Clear Fault Memory	
Cygnnet	2011-2018	AUO (Auxiliary USB Module)	Read Fault Code	
Cygnnet	2011-2018	AUO (Auxiliary USB Module)	Clear Fault Memory	
Cygnnet	2011-2018	AUO (Auxiliary USB Module)	Read Data Stream	
Cygnnet	2011-2018	B+O (Band0)	Read Fault Code	
Cygnnet	2011-2018	B+O (Band0)	Clear Fault Memory	
Cygnnet	2011-2018	BECC-M (Bosch ECM - Master)	Read Fault Code	
Cygnnet	2011-2018	BECC-M (Bosch ECM - Master)	Clear Fault Memory	
Cygnnet	2011-2018	BECC-M (Bosch ECM - Master)	Read Data Stream	
Cygnnet	2011-2018	BECC-S (Bosch ECM - Slave)	Read Fault Code	
Cygnnet	2011-2018	BECC-S (Bosch ECM - Slave)	Clear Fault Memory	
Cygnnet	2011-2018	BECC-S (Bosch ECM - Slave)	Read Data Stream	
Cygnnet	2011-2018	BPM (Bluetooth Phone Module)	Read Fault Code	
Cygnnet	2011-2018	BPM (Bluetooth Phone Module)	Clear Fault Memory	
Cygnnet	2011-2018	BPM (Bluetooth Phone Module)	Read Data Stream	
Cygnnet	2011-2018	CAT-5 (Cat 5 Immobiliser Module)	Read Fault Code	
Cygnnet	2011-2018	CCM2 (Centre Console module-2)	Read Fault Code	
Cygnnet	2011-2018	CCM2 (Centre Console module-2)	Clear Fault Memory	
Cygnnet	2011-2018	CCM2 (Centre Console module-2)	Read Data Stream	
Cygnnet	2011-2018	CRM (Convertible Roof Module)	Read Fault Code	
Cygnnet	2011-2018	CRM (Convertible Roof Module)	Clear Fault Memory	
Cygnnet	2011-2018	CRM (Convertible Roof Module)	Read Data Stream	
Cygnnet	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Read Fault Code	
Cygnnet	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Clear Fault Memory	
Cygnnet	2011-2018	EBS (Electronic Braking System Module)	Read Fault Code	
Cygnnet	2011-2018	EBS (Electronic Braking System Module)	Clear Fault Memory	
Cygnnet	2011-2018	EBS (Electronic Braking System Module)	Read Data Stream	
Cygnnet	2011-2018	IAM (Integrated Audio Module)	Read Fault Code	
Cygnnet	2011-2018	IAM (Integrated Audio Module)	Clear Fault Memory	
Cygnnet	2011-2018	IAM (Integrated Audio Module)	Read Data Stream	
Cygnnet	2011-2018	ICM (Infotainment Control Module)	Read Fault Code	
Cygnnet	2011-2018	ICM (Infotainment Control Module)	Clear Fault Memory	
Cygnnet	2011-2018	ICM (Infotainment Control Module)	Read Data Stream	
Cygnnet	2011-2018	ICU (Infotainment Control Module)	Read Fault Code	
Cygnnet	2011-2018	ICU (Infotainment Control Module)	Clear Fault Memory	
Cygnnet	2011-2018	ICU (Infotainment Control Module)	Read Data Stream	
Cygnnet	2011-2018	PHM (GSM Phone Module)	Read Fault Code	
Cygnnet	2011-2018	PHM (GSM Phone Module)	Clear Fault Memory	
Cygnnet	2011-2018	PHM (GSM Phone Module)	Read Data Stream	
Cygnnet	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Fault Code	
Cygnnet	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Clear Fault Memory	
Cygnnet	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Data Stream	
Cygnnet	2011-2018	ROPS (Rollover Protection Module)	Read Fault Code	
Cygnnet	2011-2018	ROPS (Rollover Protection Module)	Clear Fault Memory	
Cygnnet	2011-2018	SDAR (Satellite Digital Radio Module)	Read Fault Code	
Cygnnet	2011-2018	SDAR (Satellite Digital Radio Module)	Clear Fault Memory	
Cygnnet	2011-2018	SDAR (Satellite Digital Radio Module)	Read Data Stream	
Cygnnet	2011-2018	SDAR (Satellite Digital Radio Module)	Special Function	SDARS Utilities
Cygnnet	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Fault Code	
Cygnnet	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Clear Fault Memory	
Cygnnet	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Data Stream	
Cygnnet	2011-2018	TMC (Traffic Management Module)	Read Fault Code	
Cygnnet	2011-2018	TMC (Traffic Management Module)	Clear Fault Memory	
Cygnnet	2011-2018	TMC (Traffic Management Module)	Read Data Stream	
Virage	2011-2018	EMS (Engine Management Module)	Read Fault Code	
Virage	2011-2018	EMS (Engine Management Module)	Clear Fault Memory	
Virage	2011-2018	EMS (Engine Management Module)	Version Information	
Virage	2011-2018	EMS (Engine Management Module)	Read Data Stream	
Virage	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Virage	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Virage	2011-2018	EMS (Engine Management Module)	Special Function	Key Learn/Clear
Virage	2011-2018	EMS (Engine Management Module)	Special Function	OBDDII Monitor Results
Virage	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Fault Code	
Virage	2011-2018	EMS-S (Engine Management Module - Secondary)	Clear Fault Memory	
Virage	2011-2018	EMS-S (Engine Management Module - Secondary)	Version Information	
Virage	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Data Stream	
Virage	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Virage	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Virage	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	Key Learn/Clear
Virage	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	OBDDII Monitor Results
Virage	2011-2018	BCM (Brake Control Module)	Read Fault Code	
Virage	2011-2018	BCM (Brake Control Module)	Clear Fault Memory	
Virage	2011-2018	BCM (Brake Control Module)	Version Information	
Virage	2011-2018	BCM (Brake Control Module)	Read Data Stream	
Virage	2011-2018	BCM (Brake Control Module)	Special Function	DSC Calibration
Virage	2011-2018	RCM (Restraints Control Module)	Read Fault Code	

model	year	system	function	subfunction
Virage	2011-2018	RCM (Restraints Control Module)	Clear Fault Memory	
Virage	2011-2018	RCM (Restraints Control Module)	Version Information	
Virage	2011-2018	RCM (Restraints Control Module)	Read Data Stream	
Virage	2011-2018	RCM (Restraints Control Module)	Special Function	Seat OCS Zero
Virage	2011-2018	RCM (Restraints Control Module)	Special Function	Seat Track Sensor Test
Virage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Fault Code	
Virage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Clear Fault Memory	
Virage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Version Information	
Virage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Data Stream	
Virage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	DI Calibration Utility
Virage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Read Car Config
Virage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Service Indicator
Virage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Transport Mode
Virage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Fault Code	
Virage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Clear Fault Memory	
Virage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Version Information	
Virage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Data Stream	
Virage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Key Fob Learn/Clear
Virage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Read Vehicle Alarm Causes
Virage	2011-2018	DIM (Driver Information Module)	Read Fault Code	
Virage	2011-2018	DIM (Driver Information Module)	Clear Fault Memory	
Virage	2011-2018	DIM (Driver Information Module)	Version Information	
Virage	2011-2018	DIM (Driver Information Module)	Read Data Stream	
Virage	2011-2018	DIM (Driver Information Module)	Special Function	Lights On Key Out Warning
Virage	2011-2018	DIM (Driver Information Module)	Special Function	Service Indicator
Virage	2011-2018	PAM (Parking Aid Module)	Read Fault Code	
Virage	2011-2018	PAM (Parking Aid Module)	Clear Fault Memory	
Virage	2011-2018	PAM (Parking Aid Module)	Read Data Stream	
Virage	2011-2018	PAM (Parking Aid Module)	Special Function	PAM Config
Virage	2011-2018	CCM (Centre Console Module)	Read Fault Code	
Virage	2011-2018	CCM (Centre Console Module)	Clear Fault Memory	
Virage	2011-2018	CCM (Centre Console Module)	Version Information	
Virage	2011-2018	AUD5 (Audio Amplifier Module)	Read Fault Code	
Virage	2011-2018	AUD5 (Audio Amplifier Module)	Clear Fault Memory	
Virage	2011-2018	AUD5 (Audio Amplifier Module)	Version Information	
Virage	2011-2018	SUB5 (Sub Woofer Amplifier)	Read Fault Code	
Virage	2011-2018	SUB5 (Sub Woofer Amplifier)	Clear Fault Memory	
Virage	2011-2018	SUB5 (Sub Woofer Amplifier)	Version Information	
Virage	2011-2018	MMM (Multi-Media Module)	Read Fault Code	
Virage	2011-2018	MMM (Multi-Media Module)	Clear Fault Memory	
Virage	2011-2018	MMM (Multi-Media Module)	Version Information	
Virage	2011-2018	MP1 (Media Player Module)	Read Fault Code	
Virage	2011-2018	MP1 (Media Player Module)	Clear Fault Memory	
Virage	2011-2018	MP1 (Media Player Module)	Version Information	
Virage	2011-2018	AFM (AM/FM Tuner Module)	Read Fault Code	
Virage	2011-2018	AFM (AM/FM Tuner Module)	Clear Fault Memory	
Virage	2011-2018	AFM (AM/FM Tuner Module)	Version Information	
Virage	2011-2018	GPS (Global Positioning System)	Read Fault Code	
Virage	2011-2018	GPS (Global Positioning System)	Clear Fault Memory	
Virage	2011-2018	GPS (Global Positioning System)	Version Information	
Virage	2011-2018	TCMZF (Transmission Control Module)	Read Fault Code	
Virage	2011-2018	TCMZF (Transmission Control Module)	Clear Fault Memory	
Virage	2011-2018	TCMZF (Transmission Control Module)	Version Information	
Virage	2011-2018	TCMZF (Transmission Control Module)	Read Data Stream	
Virage	2011-2018	ASM (Marelli Transmission Control Module)	Read Fault Code	
Virage	2011-2018	ASM (Marelli Transmission Control Module)	Clear Fault Memory	
Virage	2011-2018	ASM (Marelli Transmission Control Module)	Version Information	
Virage	2011-2018	ASM (Marelli Transmission Control Module)	Read Data Stream	
Virage	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Clutch Bleed
Virage	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Self Tune
Virage	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Snapshot
Virage	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Valve Test
Virage	2011-2018	EPB (Parking Brake)	Read Fault Code	
Virage	2011-2018	EPB (Parking Brake)	Clear Fault Memory	
Virage	2011-2018	EPB (Parking Brake)	Version Information	
Virage	2011-2018	EPB (Parking Brake)	Read Data Stream	
Virage	2011-2018	EPB (Parking Brake)	Special Function	EPB Utilities
Virage	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Fault Code	
Virage	2011-2018	ESCL (Electronic Steering Column Lock Module)	Clear Fault Memory	
Virage	2011-2018	ESCL (Electronic Steering Column Lock Module)	Version Information	
Virage	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Data Stream	
Virage	2011-2018	HLM (Headlamp Levelling Module)	Read Fault Code	
Virage	2011-2018	HLM (Headlamp Levelling Module)	Clear Fault Memory	
Virage	2011-2018	HLM (Headlamp Levelling Module)	Version Information	
Virage	2011-2018	HLM (Headlamp Levelling Module)	Read Data Stream	
Virage	2011-2018	SAS (Steering Angle Sensor)	Read Fault Code	
Virage	2011-2018	SAS (Steering Angle Sensor)	Clear Fault Memory	
Virage	2011-2018	SAS (Steering Angle Sensor)	Version Information	
Virage	2011-2018	SAS (Steering Angle Sensor)	Read Data Stream	

model	year	system	function	subfunction
Virage	2011-2018	SAS (Steering Angle Sensor)	Special Function	DSC Calibration
Virage	2011-2018	ADM (Adaptive Damping Module)	Read Fault Code	
Virage	2011-2018	ADM (Adaptive Damping Module)	Clear Fault Memory	
Virage	2011-2018	ADM (Adaptive Damping Module)	Version Information	
Virage	2011-2018	ADM (Adaptive Damping Module)	Read Data Stream	
Virage	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Fault Code	
Virage	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Clear Fault Memory	
Virage	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Version Information	
Virage	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Data Stream	
Virage	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Special Function	TPMS Utilities
Virage	2011-2018	DSM+ (Driver Seat Module)	Read Fault Code	
Virage	2011-2018	DSM+ (Driver Seat Module)	Clear Fault Memory	
Virage	2011-2018	DSM+ (Driver Seat Module)	Version Information	
Virage	2011-2018	DSM+ (Driver Seat Module)	Read Data Stream	
Virage	2011-2018	DSM+ (Driver Seat Module)	Special Function	Seat Utilities
Virage	2011-2018	PSM+ (Passenger Seat Module)	Read Fault Code	
Virage	2011-2018	PSM+ (Passenger Seat Module)	Clear Fault Memory	
Virage	2011-2018	PSM+ (Passenger Seat Module)	Version Information	
Virage	2011-2018	PSM+ (Passenger Seat Module)	Read Data Stream	
Virage	2011-2018	PSM+ (Passenger Seat Module)	Special Function	Seat Utilities
Virage	2011-2018	DDM+ (Drivers Door Module)	Read Fault Code	
Virage	2011-2018	DDM+ (Drivers Door Module)	Clear Fault Memory	
Virage	2011-2018	DDM+ (Drivers Door Module)	Version Information	
Virage	2011-2018	DDM+ (Drivers Door Module)	Read Data Stream	
Virage	2011-2018	DDM+ (Drivers Door Module)	Special Function	Door Utilities
Virage	2011-2018	DDM (Drivers Door Module)	Read Fault Code	
Virage	2011-2018	DDM (Drivers Door Module)	Clear Fault Memory	
Virage	2011-2018	DDM (Drivers Door Module)	Version Information	
Virage	2011-2018	DDM (Drivers Door Module)	Read Data Stream	
Virage	2011-2018	PDM+ (Passengers Door Module)	Read Fault Code	
Virage	2011-2018	PDM+ (Passengers Door Module)	Clear Fault Memory	
Virage	2011-2018	PDM+ (Passengers Door Module)	Version Information	
Virage	2011-2018	PDM+ (Passengers Door Module)	Read Data Stream	
Virage	2011-2018	PDM+ (Passengers Door Module)	Special Function	Door Utilities
Virage	2011-2018	PDM (Passengers Door Module)	Read Fault Code	
Virage	2011-2018	PDM (Passengers Door Module)	Clear Fault Memory	
Virage	2011-2018	PDM (Passengers Door Module)	Version Information	
Virage	2011-2018	PDM (Passengers Door Module)	Read Data Stream	
Virage	2011-2018	DDMR (Driver Door Module Rear)	Read Fault Code	
Virage	2011-2018	DDMR (Driver Door Module Rear)	Clear Fault Memory	
Virage	2011-2018	DDMR (Driver Door Module Rear)	Version Information	
Virage	2011-2018	DDMR (Driver Door Module Rear)	Read Data Stream	
Virage	2011-2018	PDMR (Passenger Door Module Rear)	Read Fault Code	
Virage	2011-2018	PDMR (Passenger Door Module Rear)	Clear Fault Memory	
Virage	2011-2018	PDMR (Passenger Door Module Rear)	Version Information	
Virage	2011-2018	PDMR (Passenger Door Module Rear)	Read Data Stream	
Virage	2011-2018	FCIM (Front Console Interface Module)	Read Fault Code	
Virage	2011-2018	FCIM (Front Console Interface Module)	Clear Fault Memory	
Virage	2011-2018	FCIM (Front Console Interface Module)	Version Information	
Virage	2011-2018	RCIM (Rear Console Interface Module)	Read Fault Code	
Virage	2011-2018	RCIM (Rear Console Interface Module)	Clear Fault Memory	
Virage	2011-2018	RCIM (Rear Console Interface Module)	Version Information	
Virage	2011-2018	LCDM (LCD Module)	Read Fault Code	
Virage	2011-2018	LCDM (LCD Module)	Clear Fault Memory	
Virage	2011-2018	LCDM (LCD Module)	Version Information	
Virage	2011-2018	LCDM (LCD Module)	Special Function	Rear HVAC Utilities
Virage	2011-2018	ACCM (Auxiliary CCM)	Read Fault Code	
Virage	2011-2018	ACCM (Auxiliary CCM)	Clear Fault Memory	
Virage	2011-2018	AUU (Auxilliary USB Module)	Read Fault Code	
Virage	2011-2018	AUU (Auxilliary USB Module)	Clear Fault Memory	
Virage	2011-2018	AUU (Auxilliary USB Module)	Read Data Stream	
Virage	2011-2018	B+0 (Band0)	Read Fault Code	
Virage	2011-2018	B+0 (Band0)	Clear Fault Memory	
Virage	2011-2018	BECM-M (Bosch ECM - Master)	Read Fault Code	
Virage	2011-2018	BECM-M (Bosch ECM - Master)	Clear Fault Memory	
Virage	2011-2018	BECM-M (Bosch ECM - Master)	Read Data Stream	
Virage	2011-2018	BECM-S (Bosch ECM - Slave)	Read Fault Code	
Virage	2011-2018	BECM-S (Bosch ECM - Slave)	Clear Fault Memory	
Virage	2011-2018	BECM-S (Bosch ECM - Slave)	Read Data Stream	
Virage	2011-2018	BPM (Bluetooth Phone Module)	Read Fault Code	
Virage	2011-2018	BPM (Bluetooth Phone Module)	Clear Fault Memory	
Virage	2011-2018	BPM (Bluetooth Phone Module)	Read Data Stream	
Virage	2011-2018	CAT-5 (Cat 5 Immobiliser Module)	Read Fault Code	
Virage	2011-2018	CCM2 (Centre Console module-2)	Read Fault Code	
Virage	2011-2018	CCM2 (Centre Console module-2)	Clear Fault Memory	
Virage	2011-2018	CCM2 (Centre Console module-2)	Read Data Stream	
Virage	2011-2018	CRM (Convertible Roof Module)	Read Fault Code	
Virage	2011-2018	CRM (Convertible Roof Module)	Clear Fault Memory	
Virage	2011-2018	CRM (Convertible Roof Module)	Read Data Stream	

model	year	system	function	subfunction
Virage	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Read Fault Code	
Virage	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Clear Fault Memory	
Virage	2011-2018	EBS (Electronic Braking System Module)	Read Fault Code	
Virage	2011-2018	EBS (Electronic Braking System Module)	Clear Fault Memory	
Virage	2011-2018	EBS (Electronic Braking System Module)	Read Data Stream	
Virage	2011-2018	IAM (Integrated Audio Module)	Read Fault Code	
Virage	2011-2018	IAM (Integrated Audio Module)	Clear Fault Memory	
Virage	2011-2018	IAM (Integrated Audio Module)	Read Data Stream	
Virage	2011-2018	ICM (Infotainment Control Module)	Read Fault Code	
Virage	2011-2018	ICM (Infotainment Control Module)	Clear Fault Memory	
Virage	2011-2018	ICM (Infotainment Control Module)	Read Data Stream	
Virage	2011-2018	ICU (Infotainment Control Module)	Read Fault Code	
Virage	2011-2018	ICU (Infotainment Control Module)	Clear Fault Memory	
Virage	2011-2018	ICU (Infotainment Control Module)	Read Data Stream	
Virage	2011-2018	PHM (GSM Phone Module)	Read Fault Code	
Virage	2011-2018	PHM (GSM Phone Module)	Clear Fault Memory	
Virage	2011-2018	PHM (GSM Phone Module)	Read Data Stream	
Virage	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Fault Code	
Virage	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Clear Fault Memory	
Virage	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Data Stream	
Virage	2011-2018	ROPS (Rollover Protection Module)	Read Fault Code	
Virage	2011-2018	ROPS (Rollover Protection Module)	Clear Fault Memory	
Virage	2011-2018	SDAR (Satellite Digital Radio Module)	Read Fault Code	
Virage	2011-2018	SDAR (Satellite Digital Radio Module)	Clear Fault Memory	
Virage	2011-2018	SDAR (Satellite Digital Radio Module)	Read Data Stream	
Virage	2011-2018	SDAR (Satellite Digital Radio Module)	Special Function	SDARS Utilities
Virage	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Fault Code	
Virage	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Clear Fault Memory	
Virage	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Data Stream	
Virage	2011-2018	TMC (Traffic Management Module)	Read Fault Code	
Virage	2011-2018	TMC (Traffic Management Module)	Clear Fault Memory	
Virage	2011-2018	TMC (Traffic Management Module)	Read Data Stream	
Rapide	2011-2018	EMS (Engine Management Module)	Read Fault Code	
Rapide	2011-2018	EMS (Engine Management Module)	Clear Fault Memory	
Rapide	2011-2018	EMS (Engine Management Module)	Version Information	
Rapide	2011-2018	EMS (Engine Management Module)	Read Data Stream	
Rapide	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Rapide	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Rapide	2011-2018	EMS (Engine Management Module)	Special Function	Key Learn/Clear
Rapide	2011-2018	EMS (Engine Management Module)	Special Function	OBDDII Monitor Results
Rapide	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Fault Code	
Rapide	2011-2018	EMS-S (Engine Management Module - Secondary)	Clear Fault Memory	
Rapide	2011-2018	EMS-S (Engine Management Module - Secondary)	Version Information	
Rapide	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Data Stream	
Rapide	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Rapide	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Rapide	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	Key Learn/Clear
Rapide	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	OBDDII Monitor Results
Rapide	2011-2018	BCM (Brake Control Module)	Read Fault Code	
Rapide	2011-2018	BCM (Brake Control Module)	Clear Fault Memory	
Rapide	2011-2018	BCM (Brake Control Module)	Version Information	
Rapide	2011-2018	BCM (Brake Control Module)	Read Data Stream	
Rapide	2011-2018	BCM (Brake Control Module)	Special Function	DSC Calibration
Rapide	2011-2018	RCM (Restraints Control Module)	Read Fault Code	
Rapide	2011-2018	RCM (Restraints Control Module)	Clear Fault Memory	
Rapide	2011-2018	RCM (Restraints Control Module)	Version Information	
Rapide	2011-2018	RCM (Restraints Control Module)	Read Data Stream	
Rapide	2011-2018	RCM (Restraints Control Module)	Special Function	Seat OCS Zero
Rapide	2011-2018	RCM (Restraints Control Module)	Special Function	Seat Track Sensor Test
Rapide	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Fault Code	
Rapide	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Clear Fault Memory	
Rapide	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Version Information	
Rapide	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Data Stream	
Rapide	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	DI Calibration Utility
Rapide	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Read Car Config
Rapide	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Service Indicator
Rapide	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Transport Mode
Rapide	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Fault Code	
Rapide	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Clear Fault Memory	
Rapide	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Version Information	
Rapide	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Data Stream	
Rapide	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Key Fob Learn/Clear
Rapide	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Read Vehicle Alarm Causes
Rapide	2011-2018	DIM (Driver Information Module)	Read Fault Code	
Rapide	2011-2018	DIM (Driver Information Module)	Clear Fault Memory	
Rapide	2011-2018	DIM (Driver Information Module)	Version Information	
Rapide	2011-2018	DIM (Driver Information Module)	Read Data Stream	
Rapide	2011-2018	DIM (Driver Information Module)	Special Function	Lights On Key Out Warning
Rapide	2011-2018	DIM (Driver Information Module)	Special Function	Service Indicator

model	year	system	function	subfunction
Rapide	2011-2018	PAM (Parking Aid Module)	Read Fault Code	
Rapide	2011-2018	PAM (Parking Aid Module)	Clear Fault Memory	
Rapide	2011-2018	PAM (Parking Aid Module)	Read Data Stream	
Rapide	2011-2018	PAM (Parking Aid Module)	Special Function	PAM Config
Rapide	2011-2018	CCM (Centre Console Module)	Read Fault Code	
Rapide	2011-2018	CCM (Centre Console Module)	Clear Fault Memory	
Rapide	2011-2018	CCM (Centre Console Module)	Version Information	
Rapide	2011-2018	AUD5 (Audio Amplifier Module)	Read Fault Code	
Rapide	2011-2018	AUD5 (Audio Amplifier Module)	Clear Fault Memory	
Rapide	2011-2018	AUD5 (Audio Amplifier Module)	Version Information	
Rapide	2011-2018	SUB5 (Sub Woofer Amplifier)	Read Fault Code	
Rapide	2011-2018	SUB5 (Sub Woofer Amplifier)	Clear Fault Memory	
Rapide	2011-2018	SUB5 (Sub Woofer Amplifier)	Version Information	
Rapide	2011-2018	MMM (Multi-Media Module)	Read Fault Code	
Rapide	2011-2018	MMM (Multi-Media Module)	Clear Fault Memory	
Rapide	2011-2018	MMM (Multi-Media Module)	Version Information	
Rapide	2011-2018	MP1 (Media Player Module)	Read Fault Code	
Rapide	2011-2018	MP1 (Media Player Module)	Clear Fault Memory	
Rapide	2011-2018	MP1 (Media Player Module)	Version Information	
Rapide	2011-2018	AFM (AM/FM Tuner Module)	Read Fault Code	
Rapide	2011-2018	AFM (AM/FM Tuner Module)	Clear Fault Memory	
Rapide	2011-2018	AFM (AM/FM Tuner Module)	Version Information	
Rapide	2011-2018	GPS (Global Positioning System)	Read Fault Code	
Rapide	2011-2018	GPS (Global Positioning System)	Clear Fault Memory	
Rapide	2011-2018	GPS (Global Positioning System)	Version Information	
Rapide	2011-2018	TCMZP (Transmission Control Module)	Read Fault Code	
Rapide	2011-2018	TCMZP (Transmission Control Module)	Clear Fault Memory	
Rapide	2011-2018	TCMZP (Transmission Control Module)	Version Information	
Rapide	2011-2018	TCMZP (Transmission Control Module)	Read Data Stream	
Rapide	2011-2018	ASM (Marelli Transmission Control Module)	Read Fault Code	
Rapide	2011-2018	ASM (Marelli Transmission Control Module)	Clear Fault Memory	
Rapide	2011-2018	ASM (Marelli Transmission Control Module)	Version Information	
Rapide	2011-2018	ASM (Marelli Transmission Control Module)	Read Data Stream	
Rapide	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Clutch Bleed
Rapide	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Self Tune
Rapide	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Snapshot
Rapide	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Valve Test
Rapide	2011-2018	EPB (Parking Brake)	Read Fault Code	
Rapide	2011-2018	EPB (Parking Brake)	Clear Fault Memory	
Rapide	2011-2018	EPB (Parking Brake)	Version Information	
Rapide	2011-2018	EPB (Parking Brake)	Read Data Stream	
Rapide	2011-2018	EPB (Parking Brake)	Special Function	EPB Utilities
Rapide	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Fault Code	
Rapide	2011-2018	ESCL (Electronic Steering Column Lock Module)	Clear Fault Memory	
Rapide	2011-2018	ESCL (Electronic Steering Column Lock Module)	Version Information	
Rapide	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Data Stream	
Rapide	2011-2018	HLM (Headlamp Levelling Module)	Read Fault Code	
Rapide	2011-2018	HLM (Headlamp Levelling Module)	Clear Fault Memory	
Rapide	2011-2018	HLM (Headlamp Levelling Module)	Version Information	
Rapide	2011-2018	HLM (Headlamp Levelling Module)	Read Data Stream	
Rapide	2011-2018	SAS (Steering Angle Sensor)	Read Fault Code	
Rapide	2011-2018	SAS (Steering Angle Sensor)	Clear Fault Memory	
Rapide	2011-2018	SAS (Steering Angle Sensor)	Version Information	
Rapide	2011-2018	SAS (Steering Angle Sensor)	Read Data Stream	
Rapide	2011-2018	SAS (Steering Angle Sensor)	Special Function	DSC Calibration
Rapide	2011-2018	ADM (Adaptive Damping Module)	Read Fault Code	
Rapide	2011-2018	ADM (Adaptive Damping Module)	Clear Fault Memory	
Rapide	2011-2018	ADM (Adaptive Damping Module)	Version Information	
Rapide	2011-2018	ADM (Adaptive Damping Module)	Read Data Stream	
Rapide	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Fault Code	
Rapide	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Clear Fault Memory	
Rapide	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Version Information	
Rapide	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Data Stream	
Rapide	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Special Function	TPMS Utilities
Rapide	2011-2018	DSM+ (Driver Seat Module)	Read Fault Code	
Rapide	2011-2018	DSM+ (Driver Seat Module)	Clear Fault Memory	
Rapide	2011-2018	DSM+ (Driver Seat Module)	Version Information	
Rapide	2011-2018	DSM+ (Driver Seat Module)	Read Data Stream	
Rapide	2011-2018	DSM+ (Driver Seat Module)	Special Function	Seat Utilities
Rapide	2011-2018	PSM+ (Passenger Seat Module)	Read Fault Code	
Rapide	2011-2018	PSM+ (Passenger Seat Module)	Clear Fault Memory	
Rapide	2011-2018	PSM+ (Passenger Seat Module)	Version Information	
Rapide	2011-2018	PSM+ (Passenger Seat Module)	Read Data Stream	
Rapide	2011-2018	PSM+ (Passenger Seat Module)	Special Function	Seat Utilities
Rapide	2011-2018	DDM+ (Drivers Door Module)	Read Fault Code	
Rapide	2011-2018	DDM+ (Drivers Door Module)	Clear Fault Memory	
Rapide	2011-2018	DDM+ (Drivers Door Module)	Version Information	
Rapide	2011-2018	DDM+ (Drivers Door Module)	Read Data Stream	
Rapide	2011-2018	DDM+ (Drivers Door Module)	Special Function	Door Utilities

model	year	system	function	subfunction
Rapide	2011-2018	DDM (Drivers Door Module)	Read Fault Code	
Rapide	2011-2018	DDM (Drivers Door Module)	Clear Fault Memory	
Rapide	2011-2018	DDM (Drivers Door Module)	Version Information	
Rapide	2011-2018	DDM (Drivers Door Module)	Read Data Stream	
Rapide	2011-2018	PDM+ (Passengers Door Module)	Read Fault Code	
Rapide	2011-2018	PDM+ (Passengers Door Module)	Clear Fault Memory	
Rapide	2011-2018	PDM+ (Passengers Door Module)	Version Information	
Rapide	2011-2018	PDM+ (Passengers Door Module)	Read Data Stream	
Rapide	2011-2018	PDM+ (Passengers Door Module)	Special Function	Door Utilities
Rapide	2011-2018	PDM (Passengers Door Module)	Read Fault Code	
Rapide	2011-2018	PDM (Passengers Door Module)	Clear Fault Memory	
Rapide	2011-2018	PDM (Passengers Door Module)	Version Information	
Rapide	2011-2018	PDM (Passengers Door Module)	Read Data Stream	
Rapide	2011-2018	DDMR (Driver Door Module Rear)	Read Fault Code	
Rapide	2011-2018	DDMR (Driver Door Module Rear)	Clear Fault Memory	
Rapide	2011-2018	DDMR (Driver Door Module Rear)	Version Information	
Rapide	2011-2018	DDMR (Driver Door Module Rear)	Read Data Stream	
Rapide	2011-2018	PDMR (Passenger Door Module Rear)	Read Fault Code	
Rapide	2011-2018	PDMR (Passenger Door Module Rear)	Clear Fault Memory	
Rapide	2011-2018	PDMR (Passenger Door Module Rear)	Version Information	
Rapide	2011-2018	PDMR (Passenger Door Module Rear)	Read Data Stream	
Rapide	2011-2018	FCIM (Front Console Interface Module)	Read Fault Code	
Rapide	2011-2018	FCIM (Front Console Interface Module)	Clear Fault Memory	
Rapide	2011-2018	FCIM (Front Console Interface Module)	Version Information	
Rapide	2011-2018	RCIM (Rear Console Interface Module)	Read Fault Code	
Rapide	2011-2018	RCIM (Rear Console Interface Module)	Clear Fault Memory	
Rapide	2011-2018	RCIM (Rear Console Interface Module)	Version Information	
Rapide	2011-2018	LCDM (LCD Module)	Read Fault Code	
Rapide	2011-2018	LCDM (LCD Module)	Clear Fault Memory	
Rapide	2011-2018	LCDM (LCD Module)	Version Information	
Rapide	2011-2018	LCDM (LCD Module)	Special Function	Rear HVAC Utilities
Rapide	2011-2018	ACCM (Auxiliary CCM)	Read Fault Code	
Rapide	2011-2018	ACCM (Auxiliary CCM)	Clear Fault Memory	
Rapide	2011-2018	AU (Auxiliary USB Module)	Read Fault Code	
Rapide	2011-2018	AU (Auxiliary USB Module)	Clear Fault Memory	
Rapide	2011-2018	AU (Auxiliary USB Module)	Read Data Stream	
Rapide	2011-2018	B+0 (Band0)	Read Fault Code	
Rapide	2011-2018	B+0 (Band0)	Clear Fault Memory	
Rapide	2011-2018	BECM-M (Bosch ECM - Master)	Read Fault Code	
Rapide	2011-2018	BECM-M (Bosch ECM - Master)	Clear Fault Memory	
Rapide	2011-2018	BECM-M (Bosch ECM - Master)	Read Data Stream	
Rapide	2011-2018	BECM-S (Bosch ECM - Slave)	Read Fault Code	
Rapide	2011-2018	BECM-S (Bosch ECM - Slave)	Clear Fault Memory	
Rapide	2011-2018	BECM-S (Bosch ECM - Slave)	Read Data Stream	
Rapide	2011-2018	BPM (Bluetooth Phone Module)	Read Fault Code	
Rapide	2011-2018	BPM (Bluetooth Phone Module)	Clear Fault Memory	
Rapide	2011-2018	BPM (Bluetooth Phone Module)	Read Data Stream	
Rapide	2011-2018	CAT-5 (Cat 5 Immobiliser Module)	Read Fault Code	
Rapide	2011-2018	CCM2 (Centre Console module-2)	Read Fault Code	
Rapide	2011-2018	CCM2 (Centre Console module-2)	Clear Fault Memory	
Rapide	2011-2018	CCM2 (Centre Console module-2)	Read Data Stream	
Rapide	2011-2018	CRM (Convertible Roof Module)	Read Fault Code	
Rapide	2011-2018	CRM (Convertible Roof Module)	Clear Fault Memory	
Rapide	2011-2018	CRM (Convertible Roof Module)	Read Data Stream	
Rapide	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Read Fault Code	
Rapide	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Clear Fault Memory	
Rapide	2011-2018	EBS (Electronic Braking System Module)	Read Fault Code	
Rapide	2011-2018	EBS (Electronic Braking System Module)	Clear Fault Memory	
Rapide	2011-2018	EBS (Electronic Braking System Module)	Read Data Stream	
Rapide	2011-2018	IAM (Integrated Audio Module)	Read Fault Code	
Rapide	2011-2018	IAM (Integrated Audio Module)	Clear Fault Memory	
Rapide	2011-2018	IAM (Integrated Audio Module)	Read Data Stream	
Rapide	2011-2018	ICM (Infotainment Control Module)	Read Fault Code	
Rapide	2011-2018	ICM (Infotainment Control Module)	Clear Fault Memory	
Rapide	2011-2018	ICM (Infotainment Control Module)	Read Data Stream	
Rapide	2011-2018	ICU (Infotainment Control Module)	Read Fault Code	
Rapide	2011-2018	ICU (Infotainment Control Module)	Clear Fault Memory	
Rapide	2011-2018	ICU (Infotainment Control Module)	Read Data Stream	
Rapide	2011-2018	PHM (GSM Phone Module)	Read Fault Code	
Rapide	2011-2018	PHM (GSM Phone Module)	Clear Fault Memory	
Rapide	2011-2018	PHM (GSM Phone Module)	Read Data Stream	
Rapide	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Fault Code	
Rapide	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Clear Fault Memory	
Rapide	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Data Stream	
Rapide	2011-2018	ROPS (Rollover Protection Module)	Read Fault Code	
Rapide	2011-2018	ROPS (Rollover Protection Module)	Clear Fault Memory	
Rapide	2011-2018	SDAR (Satellite Digital Radio Module)	Read Fault Code	
Rapide	2011-2018	SDAR (Satellite Digital Radio Module)	Clear Fault Memory	
Rapide	2011-2018	SDAR (Satellite Digital Radio Module)	Read Data Stream	
Rapide	2011-2018	SDAR (Satellite Digital Radio Module)	Special Function	SDARS Utilities
Rapide	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Fault Code	
Rapide	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Clear Fault Memory	
Rapide	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Data Stream	
Rapide	2011-2018	TMC (Traffic Management Module)	Read Fault Code	
Rapide	2011-2018	TMC (Traffic Management Module)	Clear Fault Memory	
Rapide	2011-2018	TMC (Traffic Management Module)	Read Data Stream	
DBS	2011-2018	EMS (Engine Management Module)	Read Fault Code	
DBS	2011-2018	EMS (Engine Management Module)	Clear Fault Memory	

model	year	system	function	subfunction
DBS	2011-2018	EMS (Engine Management Module)	Version Information	
DBS	2011-2018	EMS (Engine Management Module)	Read Data Stream	
DBS	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
DBS	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
DBS	2011-2018	EMS (Engine Management Module)	Special Function	Key Learn/Clear
DBS	2011-2018	EMS (Engine Management Module)	Special Function	OBDII Monitor Results
DBS	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Fault Code	
DBS	2011-2018	EMS-S (Engine Management Module - Secondary)	Clear Fault Memory	
DBS	2011-2018	EMS-S (Engine Management Module - Secondary)	Version Information	
DBS	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Data Stream	
DBS	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
DBS	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
DBS	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	Key Learn/Clear
DBS	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	OBDII Monitor Results
DBS	2011-2018	BCM (Brake Control Module)	Read Fault Code	
DBS	2011-2018	BCM (Brake Control Module)	Clear Fault Memory	
DBS	2011-2018	BCM (Brake Control Module)	Version Information	
DBS	2011-2018	BCM (Brake Control Module)	Read Data Stream	
DBS	2011-2018	BCM (Brake Control Module)	Special Function	DSC Calibration
DBS	2011-2018	RCM (Restraints Control Module)	Read Fault Code	
DBS	2011-2018	RCM (Restraints Control Module)	Clear Fault Memory	
DBS	2011-2018	RCM (Restraints Control Module)	Version Information	
DBS	2011-2018	RCM (Restraints Control Module)	Read Data Stream	
DBS	2011-2018	RCM (Restraints Control Module)	Special Function	Seat OCS Zero
DBS	2011-2018	RCM (Restraints Control Module)	Special Function	Seat Track Sensor Test
DBS	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Fault Code	
DBS	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Clear Fault Memory	
DBS	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Version Information	
DBS	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Data Stream	
DBS	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	DI Calibration Utility
DBS	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Read Car Config
DBS	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Service Indicator
DBS	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Transport Mode
DBS	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Fault Code	
DBS	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Clear Fault Memory	
DBS	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Version Information	
DBS	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Data Stream	
DBS	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Key Fob Learn/Clear
DBS	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Read Vehicle Alarm Causes
DBS	2011-2018	DIM (Driver Information Module)	Read Fault Code	
DBS	2011-2018	DIM (Driver Information Module)	Clear Fault Memory	
DBS	2011-2018	DIM (Driver Information Module)	Version Information	
DBS	2011-2018	DIM (Driver Information Module)	Read Data Stream	
DBS	2011-2018	DIM (Driver Information Module)	Special Function	Lights On Key Out Warning
DBS	2011-2018	DIM (Driver Information Module)	Special Function	Service Indicator
DBS	2011-2018	PAM (Parking Aid Module)	Read Fault Code	
DBS	2011-2018	PAM (Parking Aid Module)	Clear Fault Memory	
DBS	2011-2018	PAM (Parking Aid Module)	Read Data Stream	
DBS	2011-2018	PAM (Parking Aid Module)	Special Function	PAM Config
DBS	2011-2018	CCM (Centre Console Module)	Read Fault Code	
DBS	2011-2018	CCM (Centre Console Module)	Clear Fault Memory	
DBS	2011-2018	CCM (Centre Console Module)	Version Information	
DBS	2011-2018	AUD5 (Audio Amplifier Module)	Read Fault Code	
DBS	2011-2018	AUD5 (Audio Amplifier Module)	Clear Fault Memory	
DBS	2011-2018	AUD5 (Audio Amplifier Module)	Version Information	
DBS	2011-2018	SUB5 (Sub Woofer Amplifier)	Read Fault Code	
DBS	2011-2018	SUB5 (Sub Woofer Amplifier)	Clear Fault Memory	
DBS	2011-2018	SUB5 (Sub Woofer Amplifier)	Version Information	
DBS	2011-2018	MMM (Multi-Media Module)	Read Fault Code	
DBS	2011-2018	MMM (Multi-Media Module)	Clear Fault Memory	
DBS	2011-2018	MMM (Multi-Media Module)	Version Information	
DBS	2011-2018	MP1 (Media Player Module)	Read Fault Code	
DBS	2011-2018	MP1 (Media Player Module)	Clear Fault Memory	
DBS	2011-2018	MP1 (Media Player Module)	Version Information	
DBS	2011-2018	AFM (AM/FM Tuner Module)	Read Fault Code	
DBS	2011-2018	AFM (AM/FM Tuner Module)	Clear Fault Memory	
DBS	2011-2018	AFM (AM/FM Tuner Module)	Version Information	
DBS	2011-2018	GPS (Global Positioning System)	Read Fault Code	
DBS	2011-2018	GPS (Global Positioning System)	Clear Fault Memory	
DBS	2011-2018	GPS (Global Positioning System)	Version Information	
DBS	2011-2018	TCMZP (Transmission Control Module)	Read Fault Code	
DBS	2011-2018	TCMZP (Transmission Control Module)	Clear Fault Memory	
DBS	2011-2018	TCMZP (Transmission Control Module)	Version Information	
DBS	2011-2018	TCMZP (Transmission Control Module)	Read Data Stream	
DBS	2011-2018	ASM (Marelli Transmission Control Module)	Read Fault Code	
DBS	2011-2018	ASM (Marelli Transmission Control Module)	Clear Fault Memory	
DBS	2011-2018	ASM (Marelli Transmission Control Module)	Version Information	
DBS	2011-2018	ASM (Marelli Transmission Control Module)	Read Data Stream	
DBS	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Clutch Bleed
DBS	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Self Tune
DBS	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Snapshot
DBS	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Valve Test
DBS	2011-2018	EPB (Parking Brake)	Read Fault Code	
DBS	2011-2018	EPB (Parking Brake)	Clear Fault Memory	
DBS	2011-2018	EPB (Parking Brake)	Version Information	
DBS	2011-2018	EPB (Parking Brake)	Read Data Stream	
DBS	2011-2018	EPB (Parking Brake)	Special Function	EPB Utilities
DBS	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Fault Code	
DBS	2011-2018	ESCL (Electronic Steering Column Lock Module)	Clear Fault Memory	
DBS	2011-2018	ESCL (Electronic Steering Column Lock Module)	Version Information	
DBS	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Data Stream	
DBS	2011-2018	HLM (Headlamp Levelling Module)	Read Fault Code	
DBS	2011-2018	HLM (Headlamp Levelling Module)	Clear Fault Memory	

model	year	system	function	subfunction
DBS	2011-2018	HLM (Headlamp Levelling Module)	Version Information	
DBS	2011-2018	HLM (Headlamp Levelling Module)	Read Data Stream	
DBS	2011-2018	SAS (Steering Angle Sensor)	Read Fault Code	
DBS	2011-2018	SAS (Steering Angle Sensor)	Clear Fault Memory	
DBS	2011-2018	SAS (Steering Angle Sensor)	Version Information	
DBS	2011-2018	SAS (Steering Angle Sensor)	Read Data Stream	
DBS	2011-2018	SAS (Steering Angle Sensor)	Special Function	DSC Calibration
DBS	2011-2018	ADM (Adaptive Damping Module)	Read Fault Code	
DBS	2011-2018	ADM (Adaptive Damping Module)	Clear Fault Memory	
DBS	2011-2018	ADM (Adaptive Damping Module)	Version Information	
DBS	2011-2018	ADM (Adaptive Damping Module)	Read Data Stream	
DBS	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Fault Code	
DBS	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Clear Fault Memory	
DBS	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Version Information	
DBS	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Data Stream	
DBS	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Special Function	TPMS Utilities
DBS	2011-2018	DSM+ (Driver Seat Module)	Read Fault Code	
DBS	2011-2018	DSM+ (Driver Seat Module)	Clear Fault Memory	
DBS	2011-2018	DSM+ (Driver Seat Module)	Version Information	
DBS	2011-2018	DSM+ (Driver Seat Module)	Read Data Stream	
DBS	2011-2018	DSM+ (Driver Seat Module)	Special Function	Seat Utilities
DBS	2011-2018	PSM+ (Passenger Seat Module)	Read Fault Code	
DBS	2011-2018	PSM+ (Passenger Seat Module)	Clear Fault Memory	
DBS	2011-2018	PSM+ (Passenger Seat Module)	Version Information	
DBS	2011-2018	PSM+ (Passenger Seat Module)	Read Data Stream	
DBS	2011-2018	PSM+ (Passenger Seat Module)	Special Function	Seat Utilities
DBS	2011-2018	DDM+ (Drivers Door Module)	Read Fault Code	
DBS	2011-2018	DDM+ (Drivers Door Module)	Clear Fault Memory	
DBS	2011-2018	DDM+ (Drivers Door Module)	Version Information	
DBS	2011-2018	DDM+ (Drivers Door Module)	Read Data Stream	
DBS	2011-2018	DDM+ (Drivers Door Module)	Special Function	Door Utilities
DBS	2011-2018	DDM (Drivers Door Module)	Read Fault Code	
DBS	2011-2018	DDM (Drivers Door Module)	Clear Fault Memory	
DBS	2011-2018	DDM (Drivers Door Module)	Version Information	
DBS	2011-2018	DDM (Drivers Door Module)	Read Data Stream	
DBS	2011-2018	PDM+ (Passengers Door Module)	Read Fault Code	
DBS	2011-2018	PDM+ (Passengers Door Module)	Clear Fault Memory	
DBS	2011-2018	PDM+ (Passengers Door Module)	Version Information	
DBS	2011-2018	PDM+ (Passengers Door Module)	Read Data Stream	
DBS	2011-2018	PDM+ (Passengers Door Module)	Special Function	Door Utilities
DBS	2011-2018	PDM (Passengers Door Module)	Read Fault Code	
DBS	2011-2018	PDM (Passengers Door Module)	Clear Fault Memory	
DBS	2011-2018	PDM (Passengers Door Module)	Version Information	
DBS	2011-2018	PDM (Passengers Door Module)	Read Data Stream	
DBS	2011-2018	DDMR (Driver Door Module Rear)	Read Fault Code	
DBS	2011-2018	DDMR (Driver Door Module Rear)	Clear Fault Memory	
DBS	2011-2018	DDMR (Driver Door Module Rear)	Version Information	
DBS	2011-2018	DDMR (Driver Door Module Rear)	Read Data Stream	
DBS	2011-2018	PDMR (Passenger Door Module Rear)	Read Fault Code	
DBS	2011-2018	PDMR (Passenger Door Module Rear)	Clear Fault Memory	
DBS	2011-2018	PDMR (Passenger Door Module Rear)	Version Information	
DBS	2011-2018	PDMR (Passenger Door Module Rear)	Read Data Stream	
DBS	2011-2018	FCIM (Front Console Interface Module)	Read Fault Code	
DBS	2011-2018	FCIM (Front Console Interface Module)	Clear Fault Memory	
DBS	2011-2018	FCIM (Front Console Interface Module)	Version Information	
DBS	2011-2018	RCIM (Rear Console Interface Module)	Read Fault Code	
DBS	2011-2018	RCIM (Rear Console Interface Module)	Clear Fault Memory	
DBS	2011-2018	RCIM (Rear Console Interface Module)	Version Information	
DBS	2011-2018	LCDM (LCD Module)	Read Fault Code	
DBS	2011-2018	LCDM (LCD Module)	Clear Fault Memory	
DBS	2011-2018	LCDM (LCD Module)	Version Information	
DBS	2011-2018	LCDM (LCD Module)	Special Function	Rear HVAC Utilities
DBS	2011-2018	ACCM (Auxiliary CCM)	Read Fault Code	
DBS	2011-2018	ACCM (Auxiliary CCM)	Clear Fault Memory	
DBS	2011-2018	AUU (Auxiliary USB Module)	Read Fault Code	
DBS	2011-2018	AUU (Auxiliary USB Module)	Clear Fault Memory	
DBS	2011-2018	AUU (Auxiliary USB Module)	Read Data Stream	
DBS	2011-2018	B+0 (Band0)	Read Fault Code	
DBS	2011-2018	B+0 (Band0)	Clear Fault Memory	
DBS	2011-2018	BECM-M (Bosch ECM - Master)	Read Fault Code	
DBS	2011-2018	BECM-M (Bosch ECM - Master)	Clear Fault Memory	
DBS	2011-2018	BECM-M (Bosch ECM - Master)	Read Data Stream	
DBS	2011-2018	BECM-S (Bosch ECM - Slave)	Read Fault Code	
DBS	2011-2018	BECM-S (Bosch ECM - Slave)	Clear Fault Memory	
DBS	2011-2018	BECM-S (Bosch ECM - Slave)	Read Data Stream	
DBS	2011-2018	BPM (Bluetooth Phone Module)	Read Fault Code	
DBS	2011-2018	BPM (Bluetooth Phone Module)	Clear Fault Memory	
DBS	2011-2018	BPM (Bluetooth Phone Module)	Read Data Stream	
DBS	2011-2018	CAT-5 (Cat 5 Immobiliser Module)	Read Fault Code	
DBS	2011-2018	CCM2 (Centre Console module-2)	Read Fault Code	
DBS	2011-2018	CCM2 (Centre Console module-2)	Clear Fault Memory	
DBS	2011-2018	CCM2 (Centre Console module-2)	Read Data Stream	
DBS	2011-2018	CRM (Convertible Roof Module)	Read Fault Code	
DBS	2011-2018	CRM (Convertible Roof Module)	Clear Fault Memory	

model	year	system	function	subfunction
DBS	2011-2018	CRM (Convertible Roof Module)	Read Data Stream	
DBS	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Read Fault Code	
DBS	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Clear Fault Memory	
DBS	2011-2018	EBS (Electronic Braking System Module)	Read Fault Code	
DBS	2011-2018	EBS (Electronic Braking System Module)	Clear Fault Memory	
DBS	2011-2018	EBS (Electronic Braking System Module)	Read Data Stream	
DBS	2011-2018	IAM (Integrated Audio Module)	Read Fault Code	
DBS	2011-2018	IAM (Integrated Audio Module)	Clear Fault Memory	
DBS	2011-2018	IAM (Integrated Audio Module)	Read Data Stream	
DBS	2011-2018	ICM (Infotainment Control Module)	Read Fault Code	
DBS	2011-2018	ICM (Infotainment Control Module)	Clear Fault Memory	
DBS	2011-2018	ICM (Infotainment Control Module)	Read Data Stream	
DBS	2011-2018	ICU (Infotainment Control Module)	Read Fault Code	
DBS	2011-2018	ICU (Infotainment Control Module)	Clear Fault Memory	
DBS	2011-2018	ICU (Infotainment Control Module)	Read Data Stream	
DBS	2011-2018	PHM (GSM Phone Module)	Read Fault Code	
DBS	2011-2018	PHM (GSM Phone Module)	Clear Fault Memory	
DBS	2011-2018	PHM (GSM Phone Module)	Read Data Stream	
DBS	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Fault Code	
DBS	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Clear Fault Memory	
DBS	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Data Stream	
DBS	2011-2018	ROPS (Rollover Protection Module)	Read Fault Code	
DBS	2011-2018	ROPS (Rollover Protection Module)	Clear Fault Memory	
DBS	2011-2018	SDAR (Satellite Digital Radio Module)	Read Fault Code	
DBS	2011-2018	SDAR (Satellite Digital Radio Module)	Clear Fault Memory	
DBS	2011-2018	SDAR (Satellite Digital Radio Module)	Read Data Stream	
DBS	2011-2018	SDAR (Satellite Digital Radio Module)	Special Function	SDARS Utilities
DBS	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Fault Code	
DBS	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Clear Fault Memory	
DBS	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Data Stream	
DBS	2011-2018	TMC (Traffic Management Module)	Read Fault Code	
DBS	2011-2018	TMC (Traffic Management Module)	Clear Fault Memory	
DBS	2011-2018	TMC (Traffic Management Module)	Read Data Stream	
Vantage	2011-2018	EMS (Engine Management Module)	Read Fault Code	
Vantage	2011-2018	EMS (Engine Management Module)	Clear Fault Memory	
Vantage	2011-2018	EMS (Engine Management Module)	Version Information	
Vantage	2011-2018	EMS (Engine Management Module)	Read Data Stream	
Vantage	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Vantage	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Vantage	2011-2018	EMS (Engine Management Module)	Special Function	Key Learn/Clear
Vantage	2011-2018	EMS (Engine Management Module)	Special Function	OBDII Monitor Results
Vantage	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Fault Code	
Vantage	2011-2018	EMS-S (Engine Management Module - Secondary)	Clear Fault Memory	
Vantage	2011-2018	EMS-S (Engine Management Module - Secondary)	Version Information	
Vantage	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Data Stream	
Vantage	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Vantage	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Vantage	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	Key Learn/Clear
Vantage	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	OBDII Monitor Results
Vantage	2011-2018	BCM (Brake Control Module)	Read Fault Code	
Vantage	2011-2018	BCM (Brake Control Module)	Clear Fault Memory	
Vantage	2011-2018	BCM (Brake Control Module)	Version Information	
Vantage	2011-2018	BCM (Brake Control Module)	Read Data Stream	
Vantage	2011-2018	BCM (Brake Control Module)	Special Function	DSC Calibration
Vantage	2011-2018	RCM (Restraints Control Module)	Read Fault Code	
Vantage	2011-2018	RCM (Restraints Control Module)	Clear Fault Memory	
Vantage	2011-2018	RCM (Restraints Control Module)	Version Information	
Vantage	2011-2018	RCM (Restraints Control Module)	Read Data Stream	
Vantage	2011-2018	RCM (Restraints Control Module)	Special Function	Seat OCS Zero
Vantage	2011-2018	RCM (Restraints Control Module)	Special Function	Seat Track Sensor Test
Vantage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Fault Code	
Vantage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Clear Fault Memory	
Vantage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Version Information	
Vantage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Data Stream	
Vantage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	DI Calibration Utility
Vantage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Read Car Config
Vantage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Service Indicator
Vantage	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Transport Mode
Vantage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Fault Code	
Vantage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Clear Fault Memory	
Vantage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Version Information	
Vantage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Data Stream	
Vantage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Key Fob Learn/Clear
Vantage	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Read Vehicle Alarm Causes
Vantage	2011-2018	DIM (Driver Information Module)	Read Fault Code	
Vantage	2011-2018	DIM (Driver Information Module)	Clear Fault Memory	
Vantage	2011-2018	DIM (Driver Information Module)	Version Information	
Vantage	2011-2018	DIM (Driver Information Module)	Read Data Stream	
Vantage	2011-2018	DIM (Driver Information Module)	Special Function	Lights On Key Out Warning

model	year	system	function	subfunction
Vantage	2011-2018	DIM (Driver Information Module)	Special Function	Service Indicator
Vantage	2011-2018	PAM (Parking Aid Module)	Read Fault Code	
Vantage	2011-2018	PAM (Parking Aid Module)	Clear Fault Memory	
Vantage	2011-2018	PAM (Parking Aid Module)	Read Data Stream	
Vantage	2011-2018	PAM (Parking Aid Module)	Special Function	PAM Config
Vantage	2011-2018	CCM (Centre Console Module)	Read Fault Code	
Vantage	2011-2018	CCM (Centre Console Module)	Clear Fault Memory	
Vantage	2011-2018	CCM (Centre Console Module)	Version Information	
Vantage	2011-2018	AUD5 (Audio Amplifier Module)	Read Fault Code	
Vantage	2011-2018	AUD5 (Audio Amplifier Module)	Clear Fault Memory	
Vantage	2011-2018	AUD5 (Audio Amplifier Module)	Version Information	
Vantage	2011-2018	SUB5 (Sub Woofer Amplifier)	Read Fault Code	
Vantage	2011-2018	SUB5 (Sub Woofer Amplifier)	Clear Fault Memory	
Vantage	2011-2018	SUB5 (Sub Woofer Amplifier)	Version Information	
Vantage	2011-2018	MMM (Multi-Media Module)	Read Fault Code	
Vantage	2011-2018	MMM (Multi-Media Module)	Clear Fault Memory	
Vantage	2011-2018	MMM (Multi-Media Module)	Version Information	
Vantage	2011-2018	MP1 (Media Player Module)	Read Fault Code	
Vantage	2011-2018	MP1 (Media Player Module)	Clear Fault Memory	
Vantage	2011-2018	MP1 (Media Player Module)	Version Information	
Vantage	2011-2018	AFM (AM/FM Tuner Module)	Read Fault Code	
Vantage	2011-2018	AFM (AM/FM Tuner Module)	Clear Fault Memory	
Vantage	2011-2018	AFM (AM/FM Tuner Module)	Version Information	
Vantage	2011-2018	GPS (Global Positioning System)	Read Fault Code	
Vantage	2011-2018	GPS (Global Positioning System)	Clear Fault Memory	
Vantage	2011-2018	GPS (Global Positioning System)	Version Information	
Vantage	2011-2018	TCMZ (Transmission Control Module)	Read Fault Code	
Vantage	2011-2018	TCMZ (Transmission Control Module)	Clear Fault Memory	
Vantage	2011-2018	TCMZ (Transmission Control Module)	Version Information	
Vantage	2011-2018	TCMZ (Transmission Control Module)	Read Data Stream	
Vantage	2011-2018	ASM (Marelli Transmission Control Module)	Read Fault Code	
Vantage	2011-2018	ASM (Marelli Transmission Control Module)	Clear Fault Memory	
Vantage	2011-2018	ASM (Marelli Transmission Control Module)	Version Information	
Vantage	2011-2018	ASM (Marelli Transmission Control Module)	Read Data Stream	
Vantage	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Clutch Bleed
Vantage	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Self Tune
Vantage	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Snapshot
Vantage	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Valve Test
Vantage	2011-2018	EPB (Parking Brake)	Read Fault Code	
Vantage	2011-2018	EPB (Parking Brake)	Clear Fault Memory	
Vantage	2011-2018	EPB (Parking Brake)	Version Information	
Vantage	2011-2018	EPB (Parking Brake)	Read Data Stream	
Vantage	2011-2018	EPB (Parking Brake)	Special Function	EPB Utilities
Vantage	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Fault Code	
Vantage	2011-2018	ESCL (Electronic Steering Column Lock Module)	Clear Fault Memory	
Vantage	2011-2018	ESCL (Electronic Steering Column Lock Module)	Version Information	
Vantage	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Data Stream	
Vantage	2011-2018	HLM (Headlamp Levelling Module)	Read Fault Code	
Vantage	2011-2018	HLM (Headlamp Levelling Module)	Clear Fault Memory	
Vantage	2011-2018	HLM (Headlamp Levelling Module)	Version Information	
Vantage	2011-2018	HLM (Headlamp Levelling Module)	Read Data Stream	
Vantage	2011-2018	SAS (Steering Angle Sensor)	Read Fault Code	
Vantage	2011-2018	SAS (Steering Angle Sensor)	Clear Fault Memory	
Vantage	2011-2018	SAS (Steering Angle Sensor)	Version Information	
Vantage	2011-2018	SAS (Steering Angle Sensor)	Read Data Stream	
Vantage	2011-2018	SAS (Steering Angle Sensor)	Special Function	DSC Calibration
Vantage	2011-2018	ADM (Adaptive Damping Module)	Read Fault Code	
Vantage	2011-2018	ADM (Adaptive Damping Module)	Clear Fault Memory	
Vantage	2011-2018	ADM (Adaptive Damping Module)	Version Information	
Vantage	2011-2018	ADM (Adaptive Damping Module)	Read Data Stream	
Vantage	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Fault Code	
Vantage	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Clear Fault Memory	
Vantage	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Version Information	
Vantage	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Data Stream	
Vantage	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Special Function	TPMS Utilities
Vantage	2011-2018	DSM+ (Driver Seat Module)	Read Fault Code	
Vantage	2011-2018	DSM+ (Driver Seat Module)	Clear Fault Memory	
Vantage	2011-2018	DSM+ (Driver Seat Module)	Version Information	
Vantage	2011-2018	DSM+ (Driver Seat Module)	Read Data Stream	
Vantage	2011-2018	DSM+ (Driver Seat Module)	Special Function	Seat Utilities
Vantage	2011-2018	PSM+ (Passenger Seat Module)	Read Fault Code	
Vantage	2011-2018	PSM+ (Passenger Seat Module)	Clear Fault Memory	
Vantage	2011-2018	PSM+ (Passenger Seat Module)	Version Information	
Vantage	2011-2018	PSM+ (Passenger Seat Module)	Read Data Stream	
Vantage	2011-2018	PSM+ (Passenger Seat Module)	Special Function	Seat Utilities
Vantage	2011-2018	DDM+ (Drivers Door Module)	Read Fault Code	
Vantage	2011-2018	DDM+ (Drivers Door Module)	Clear Fault Memory	
Vantage	2011-2018	DDM+ (Drivers Door Module)	Version Information	
Vantage	2011-2018	DDM+ (Drivers Door Module)	Read Data Stream	

model	year	system	function	subfunction
Vantage	2011-2018	DDM+ (Drivers Door Module)	Special Function	Door Utilities
Vantage	2011-2018	DDM (Drivers Door Module)	Read Fault Code	
Vantage	2011-2018	DDM (Drivers Door Module)	Clear Fault Memory	
Vantage	2011-2018	DDM (Drivers Door Module)	Version Information	
Vantage	2011-2018	DDM (Drivers Door Module)	Read Data Stream	
Vantage	2011-2018	PDM+ (Passengers Door Module)	Read Fault Code	
Vantage	2011-2018	PDM+ (Passengers Door Module)	Clear Fault Memory	
Vantage	2011-2018	PDM+ (Passengers Door Module)	Version Information	
Vantage	2011-2018	PDM+ (Passengers Door Module)	Read Data Stream	
Vantage	2011-2018	PDM+ (Passengers Door Module)	Special Function	Door Utilities
Vantage	2011-2018	PDM (Passengers Door Module)	Read Fault Code	
Vantage	2011-2018	PDM (Passengers Door Module)	Clear Fault Memory	
Vantage	2011-2018	PDM (Passengers Door Module)	Version Information	
Vantage	2011-2018	PDM (Passengers Door Module)	Read Data Stream	
Vantage	2011-2018	DDMR (Driver Door Module Rear)	Read Fault Code	
Vantage	2011-2018	DDMR (Driver Door Module Rear)	Clear Fault Memory	
Vantage	2011-2018	DDMR (Driver Door Module Rear)	Version Information	
Vantage	2011-2018	DDMR (Driver Door Module Rear)	Read Data Stream	
Vantage	2011-2018	PDMR (Passenger Door Module Rear)	Read Fault Code	
Vantage	2011-2018	PDMR (Passenger Door Module Rear)	Clear Fault Memory	
Vantage	2011-2018	PDMR (Passenger Door Module Rear)	Version Information	
Vantage	2011-2018	PDMR (Passenger Door Module Rear)	Read Data Stream	
Vantage	2011-2018	FCIM (Front Console Interface Module)	Read Fault Code	
Vantage	2011-2018	FCIM (Front Console Interface Module)	Clear Fault Memory	
Vantage	2011-2018	FCIM (Front Console Interface Module)	Version Information	
Vantage	2011-2018	RCIM (Rear Console Interface Module)	Read Fault Code	
Vantage	2011-2018	RCIM (Rear Console Interface Module)	Clear Fault Memory	
Vantage	2011-2018	RCIM (Rear Console Interface Module)	Version Information	
Vantage	2011-2018	LCDM (LCD Module)	Read Fault Code	
Vantage	2011-2018	LCDM (LCD Module)	Clear Fault Memory	
Vantage	2011-2018	LCDM (LCD Module)	Version Information	
Vantage	2011-2018	LCDM (LCD Module)	Special Function	Rear HVAC Utilities
Vantage	2011-2018	ACCM (Auxiliary CCM)	Read Fault Code	
Vantage	2011-2018	ACCM (Auxiliary CCM)	Clear Fault Memory	
Vantage	2011-2018	AUU (Auxiliary USB Module)	Read Fault Code	
Vantage	2011-2018	AUU (Auxiliary USB Module)	Clear Fault Memory	
Vantage	2011-2018	AUU (Auxiliary USB Module)	Read Data Stream	
Vantage	2011-2018	B+0 (Band0)	Read Fault Code	
Vantage	2011-2018	B+0 (Band0)	Clear Fault Memory	
Vantage	2011-2018	BECM-M (Bosch ECM - Master)	Read Fault Code	
Vantage	2011-2018	BECM-M (Bosch ECM - Master)	Clear Fault Memory	
Vantage	2011-2018	BECM-M (Bosch ECM - Master)	Read Data Stream	
Vantage	2011-2018	BECM-S (Bosch ECM - Slave)	Read Fault Code	
Vantage	2011-2018	BECM-S (Bosch ECM - Slave)	Clear Fault Memory	
Vantage	2011-2018	BECM-S (Bosch ECM - Slave)	Read Data Stream	
Vantage	2011-2018	BPM (Bluetooth Phone Module)	Read Fault Code	
Vantage	2011-2018	BPM (Bluetooth Phone Module)	Clear Fault Memory	
Vantage	2011-2018	BPM (Bluetooth Phone Module)	Read Data Stream	
Vantage	2011-2018	CAT-5 (Cat 5 Immobiliser Module)	Read Fault Code	
Vantage	2011-2018	CCM2 (Centre Console module-2)	Read Fault Code	
Vantage	2011-2018	CCM2 (Centre Console module-2)	Clear Fault Memory	
Vantage	2011-2018	CCM2 (Centre Console module-2)	Read Data Stream	
Vantage	2011-2018	CRM (Convertible Roof Module)	Read Fault Code	
Vantage	2011-2018	CRM (Convertible Roof Module)	Clear Fault Memory	
Vantage	2011-2018	CRM (Convertible Roof Module)	Read Data Stream	
Vantage	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Read Fault Code	
Vantage	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Clear Fault Memory	
Vantage	2011-2018	EBS (Electronic Braking System Module)	Read Fault Code	
Vantage	2011-2018	EBS (Electronic Braking System Module)	Clear Fault Memory	
Vantage	2011-2018	EBS (Electronic Braking System Module)	Read Data Stream	
Vantage	2011-2018	IAM (Integrated Audio Module)	Read Fault Code	
Vantage	2011-2018	IAM (Integrated Audio Module)	Clear Fault Memory	
Vantage	2011-2018	IAM (Integrated Audio Module)	Read Data Stream	
Vantage	2011-2018	ICM (Infotainment Control Module)	Read Fault Code	
Vantage	2011-2018	ICM (Infotainment Control Module)	Clear Fault Memory	
Vantage	2011-2018	ICM (Infotainment Control Module)	Read Data Stream	
Vantage	2011-2018	ICU (Infotainment Control Module)	Read Fault Code	
Vantage	2011-2018	ICU (Infotainment Control Module)	Clear Fault Memory	
Vantage	2011-2018	ICU (Infotainment Control Module)	Read Data Stream	
Vantage	2011-2018	PHM (GSM Phone Module)	Read Fault Code	
Vantage	2011-2018	PHM (GSM Phone Module)	Clear Fault Memory	
Vantage	2011-2018	PHM (GSM Phone Module)	Read Data Stream	
Vantage	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Fault Code	
Vantage	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Clear Fault Memory	
Vantage	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Data Stream	
Vantage	2011-2018	ROPS (Rollover Protection Module)	Read Fault Code	
Vantage	2011-2018	ROPS (Rollover Protection Module)	Clear Fault Memory	
Vantage	2011-2018	SDAR (Satellite Digital Radio Module)	Read Fault Code	
Vantage	2011-2018	SDAR (Satellite Digital Radio Module)	Clear Fault Memory	

model	year	system	function	subfunction
Vantage	2011-2018	SDAR (Satellite Digital Radio Module)	Read Data Stream	
Vantage	2011-2018	SDAR (Satellite Digital Radio Module)	Special Function	SDARS Utilities
Vantage	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Fault Code	
Vantage	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Clear Fault Memory	
Vantage	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Data Stream	
Vantage	2011-2018	TMC (Traffic Management Module)	Read Fault Code	
Vantage	2011-2018	TMC (Traffic Management Module)	Clear Fault Memory	
Vantage	2011-2018	TMC (Traffic Management Module)	Read Data Stream	
DB9	2011-2018	EMS (Engine Management Module)	Read Fault Code	
DB9	2011-2018	EMS (Engine Management Module)	Clear Fault Memory	
DB9	2011-2018	EMS (Engine Management Module)	Version Information	
DB9	2011-2018	EMS (Engine Management Module)	Read Data Stream	
DB9	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
DB9	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
DB9	2011-2018	EMS (Engine Management Module)	Special Function	Key Learn/Clear
DB9	2011-2018	EMS (Engine Management Module)	Special Function	OBDII Monitor Results
DB9	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Fault Code	
DB9	2011-2018	EMS-S (Engine Management Module - Secondary)	Clear Fault Memory	
DB9	2011-2018	EMS-S (Engine Management Module - Secondary)	Version Information	
DB9	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Data Stream	
DB9	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
DB9	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
DB9	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	Key Learn/Clear
DB9	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	OBDII Monitor Results
DB9	2011-2018	BCM (Brake Control Module)	Read Fault Code	
DB9	2011-2018	BCM (Brake Control Module)	Clear Fault Memory	
DB9	2011-2018	BCM (Brake Control Module)	Version Information	
DB9	2011-2018	BCM (Brake Control Module)	Read Data Stream	
DB9	2011-2018	BCM (Brake Control Module)	Special Function	DSC Calibration
DB9	2011-2018	RCM (Restraints Control Module)	Read Fault Code	
DB9	2011-2018	RCM (Restraints Control Module)	Clear Fault Memory	
DB9	2011-2018	RCM (Restraints Control Module)	Version Information	
DB9	2011-2018	RCM (Restraints Control Module)	Read Data Stream	
DB9	2011-2018	RCM (Restraints Control Module)	Special Function	Seat OCS Zero
DB9	2011-2018	RCM (Restraints Control Module)	Special Function	Seat Track Sensor Test
DB9	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Fault Code	
DB9	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Clear Fault Memory	
DB9	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Version Information	
DB9	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Data Stream	
DB9	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	DI Calibration Utility
DB9	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Read Car Config
DB9	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Service Indicator
DB9	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Transport Mode
DB9	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Fault Code	
DB9	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Clear Fault Memory	
DB9	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Version Information	
DB9	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Data Stream	
DB9	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Key Fob Learn/Clear
DB9	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Read Vehicle Alarm Causes
DB9	2011-2018	DIM (Driver Information Module)	Read Fault Code	
DB9	2011-2018	DIM (Driver Information Module)	Clear Fault Memory	
DB9	2011-2018	DIM (Driver Information Module)	Version Information	
DB9	2011-2018	DIM (Driver Information Module)	Read Data Stream	
DB9	2011-2018	DIM (Driver Information Module)	Special Function	Lights On Key Out Warning
DB9	2011-2018	DIM (Driver Information Module)	Special Function	Service Indicator
DB9	2011-2018	PAM (Parking Aid Module)	Read Fault Code	
DB9	2011-2018	PAM (Parking Aid Module)	Clear Fault Memory	
DB9	2011-2018	PAM (Parking Aid Module)	Read Data Stream	
DB9	2011-2018	PAM (Parking Aid Module)	Special Function	PAM Config
DB9	2011-2018	CCM (Centre Console Module)	Read Fault Code	
DB9	2011-2018	CCM (Centre Console Module)	Clear Fault Memory	
DB9	2011-2018	CCM (Centre Console Module)	Version Information	
DB9	2011-2018	AUD5 (Audio Amplifier Module)	Read Fault Code	
DB9	2011-2018	AUD5 (Audio Amplifier Module)	Clear Fault Memory	
DB9	2011-2018	AUD5 (Audio Amplifier Module)	Version Information	
DB9	2011-2018	SUB5 (Sub Woofer Amplifier)	Read Fault Code	
DB9	2011-2018	SUB5 (Sub Woofer Amplifier)	Clear Fault Memory	
DB9	2011-2018	SUB5 (Sub Woofer Amplifier)	Version Information	
DB9	2011-2018	MMM (Multi-Media Module)	Read Fault Code	
DB9	2011-2018	MMM (Multi-Media Module)	Clear Fault Memory	
DB9	2011-2018	MMM (Multi-Media Module)	Version Information	
DB9	2011-2018	MP1 (Media Player Module)	Read Fault Code	
DB9	2011-2018	MP1 (Media Player Module)	Clear Fault Memory	
DB9	2011-2018	MP1 (Media Player Module)	Version Information	
DB9	2011-2018	AFM (AM/FM Tuner Module)	Read Fault Code	
DB9	2011-2018	AFM (AM/FM Tuner Module)	Clear Fault Memory	
DB9	2011-2018	AFM (AM/FM Tuner Module)	Version Information	
DB9	2011-2018	GPS (Global Positioning System)	Read Fault Code	
DB9	2011-2018	GPS (Global Positioning System)	Clear Fault Memory	
DB9	2011-2018	GPS (Global Positioning System)	Version Information	
DB9	2011-2018	TCMZf (Transmission Control Module)	Read Fault Code	
DB9	2011-2018	TCMZf (Transmission Control Module)	Clear Fault Memory	
DB9	2011-2018	TCMZf (Transmission Control Module)	Version Information	
DB9	2011-2018	TCMZf (Transmission Control Module)	Read Data Stream	
DB9	2011-2018	ASM (Marelli Transmission Control Module)	Read Fault Code	
DB9	2011-2018	ASM (Marelli Transmission Control Module)	Clear Fault Memory	

model	year	system	function	subfunction
DB9	2011-2018	ASM (Marelli Transmission Control Module)	Version Information	
DB9	2011-2018	ASM (Marelli Transmission Control Module)	Read Data Stream	
DB9	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Clutch Bleed
DB9	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Self Tune
DB9	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Snapshot
DB9	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Valve Test
DB9	2011-2018	EPB (Parking Brake)	Read Fault Code	
DB9	2011-2018	EPB (Parking Brake)	Clear Fault Memory	
DB9	2011-2018	EPB (Parking Brake)	Version Information	
DB9	2011-2018	EPB (Parking Brake)	Read Data Stream	
DB9	2011-2018	EPB (Parking Brake)	Special Function	EPB Utilities
DB9	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Fault Code	
DB9	2011-2018	ESCL (Electronic Steering Column Lock Module)	Clear Fault Memory	
DB9	2011-2018	ESCL (Electronic Steering Column Lock Module)	Version Information	
DB9	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Data Stream	
DB9	2011-2018	HLM (Headlamp Levelling Module)	Read Fault Code	
DB9	2011-2018	HLM (Headlamp Levelling Module)	Clear Fault Memory	
DB9	2011-2018	HLM (Headlamp Levelling Module)	Version Information	
DB9	2011-2018	HLM (Headlamp Levelling Module)	Read Data Stream	
DB9	2011-2018	SAS (Steering Angle Sensor)	Read Fault Code	
DB9	2011-2018	SAS (Steering Angle Sensor)	Clear Fault Memory	
DB9	2011-2018	SAS (Steering Angle Sensor)	Version Information	
DB9	2011-2018	SAS (Steering Angle Sensor)	Read Data Stream	
DB9	2011-2018	SAS (Steering Angle Sensor)	Special Function	DSC Calibration
DB9	2011-2018	ADM (Adaptive Damping Module)	Read Fault Code	
DB9	2011-2018	ADM (Adaptive Damping Module)	Clear Fault Memory	
DB9	2011-2018	ADM (Adaptive Damping Module)	Version Information	
DB9	2011-2018	ADM (Adaptive Damping Module)	Read Data Stream	
DB9	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Fault Code	
DB9	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Clear Fault Memory	
DB9	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Version Information	
DB9	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Data Stream	
DB9	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Special Function	TPMS Utilities
DB9	2011-2018	DSM+ (Driver Seat Module)	Read Fault Code	
DB9	2011-2018	DSM+ (Driver Seat Module)	Clear Fault Memory	
DB9	2011-2018	DSM+ (Driver Seat Module)	Version Information	
DB9	2011-2018	DSM+ (Driver Seat Module)	Read Data Stream	
DB9	2011-2018	DSM+ (Driver Seat Module)	Special Function	Seat Utilities
DB9	2011-2018	PSM+ (Passenger Seat Module)	Read Fault Code	
DB9	2011-2018	PSM+ (Passenger Seat Module)	Clear Fault Memory	
DB9	2011-2018	PSM+ (Passenger Seat Module)	Version Information	
DB9	2011-2018	PSM+ (Passenger Seat Module)	Read Data Stream	
DB9	2011-2018	PSM+ (Passenger Seat Module)	Special Function	Seat Utilities
DB9	2011-2018	DDM+ (Drivers Door Module)	Read Fault Code	
DB9	2011-2018	DDM+ (Drivers Door Module)	Clear Fault Memory	
DB9	2011-2018	DDM+ (Drivers Door Module)	Version Information	
DB9	2011-2018	DDM+ (Drivers Door Module)	Read Data Stream	
DB9	2011-2018	DDM+ (Drivers Door Module)	Special Function	Door Utilities
DB9	2011-2018	DDM (Drivers Door Module)	Read Fault Code	
DB9	2011-2018	DDM (Drivers Door Module)	Clear Fault Memory	
DB9	2011-2018	DDM (Drivers Door Module)	Version Information	
DB9	2011-2018	DDM (Drivers Door Module)	Read Data Stream	
DB9	2011-2018	PDM+ (Passengers Door Module)	Read Fault Code	
DB9	2011-2018	PDM+ (Passengers Door Module)	Clear Fault Memory	
DB9	2011-2018	PDM+ (Passengers Door Module)	Version Information	
DB9	2011-2018	PDM+ (Passengers Door Module)	Read Data Stream	
DB9	2011-2018	PDM+ (Passengers Door Module)	Special Function	Door Utilities
DB9	2011-2018	PDM (Passengers Door Module)	Read Fault Code	
DB9	2011-2018	PDM (Passengers Door Module)	Clear Fault Memory	
DB9	2011-2018	PDM (Passengers Door Module)	Version Information	
DB9	2011-2018	PDM (Passengers Door Module)	Read Data Stream	
DB9	2011-2018	DDMR (Driver Door Module Rear)	Read Fault Code	
DB9	2011-2018	DDMR (Driver Door Module Rear)	Clear Fault Memory	
DB9	2011-2018	DDMR (Driver Door Module Rear)	Version Information	
DB9	2011-2018	DDMR (Driver Door Module Rear)	Read Data Stream	
DB9	2011-2018	PDMR (Passenger Door Module Rear)	Read Fault Code	
DB9	2011-2018	PDMR (Passenger Door Module Rear)	Clear Fault Memory	
DB9	2011-2018	PDMR (Passenger Door Module Rear)	Version Information	
DB9	2011-2018	PDMR (Passenger Door Module Rear)	Read Data Stream	
DB9	2011-2018	FCIM (Front Console Interface Module)	Read Fault Code	
DB9	2011-2018	FCIM (Front Console Interface Module)	Clear Fault Memory	
DB9	2011-2018	FCIM (Front Console Interface Module)	Version Information	
DB9	2011-2018	RCIM (Rear Console Interface Module)	Read Fault Code	
DB9	2011-2018	RCIM (Rear Console Interface Module)	Clear Fault Memory	
DB9	2011-2018	RCIM (Rear Console Interface Module)	Version Information	
DB9	2011-2018	LCDM (LCD Module)	Read Fault Code	
DB9	2011-2018	LCDM (LCD Module)	Clear Fault Memory	
DB9	2011-2018	LCDM (LCD Module)	Version Information	
DB9	2011-2018	LCDM (LCD Module)	Special Function	Rear HVAC Utilities
DB9	2011-2018	ACCM (Auxiliary CCM)	Read Fault Code	
DB9	2011-2018	ACCM (Auxiliary CCM)	Clear Fault Memory	
DB9	2011-2018	AUU (Auxiliary USB Module)	Read Fault Code	
DB9	2011-2018	AUU (Auxiliary USB Module)	Clear Fault Memory	
DB9	2011-2018	AUU (Auxiliary USB Module)	Read Data Stream	
DB9	2011-2018	B+O (Band0)	Read Fault Code	
DB9	2011-2018	B+O (Band0)	Clear Fault Memory	
DB9	2011-2018	BECCM-M (Bosch ECM - Master)	Read Fault Code	
DB9	2011-2018	BECCM-M (Bosch ECM - Master)	Clear Fault Memory	

model	year	system	function	subfunction
DB9	2011-2018	BECM-M (Bosch ECM - Master)	Read Data Stream	
DB9	2011-2018	BECM-S (Bosch ECM - Slave)	Read Fault Code	
DB9	2011-2018	BECM-S (Bosch ECM - Slave)	Clear Fault Memory	
DB9	2011-2018	BECM-S (Bosch ECM - Slave)	Read Data Stream	
DB9	2011-2018	BPM (Bluetooth Phone Module)	Read Fault Code	
DB9	2011-2018	BPM (Bluetooth Phone Module)	Clear Fault Memory	
DB9	2011-2018	BPM (Bluetooth Phone Module)	Read Data Stream	
DB9	2011-2018	CAT-5 (Cat 5 Immobiliser Module)	Read Fault Code	
DB9	2011-2018	CCM2 (Centre Console module-2)	Read Fault Code	
DB9	2011-2018	CCM2 (Centre Console module-2)	Clear Fault Memory	
DB9	2011-2018	CCM2 (Centre Console module-2)	Read Data Stream	
DB9	2011-2018	CRM (Convertible Roof Module)	Read Fault Code	
DB9	2011-2018	CRM (Convertible Roof Module)	Clear Fault Memory	
DB9	2011-2018	CRM (Convertible Roof Module)	Read Data Stream	
DB9	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Read Fault Code	
DB9	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Clear Fault Memory	
DB9	2011-2018	EBS (Electronic Braking System Module)	Read Fault Code	
DB9	2011-2018	EBS (Electronic Braking System Module)	Clear Fault Memory	
DB9	2011-2018	EBS (Electronic Braking System Module)	Read Data Stream	
DB9	2011-2018	IAM (Integrated Audio Module)	Read Fault Code	
DB9	2011-2018	IAM (Integrated Audio Module)	Clear Fault Memory	
DB9	2011-2018	IAM (Integrated Audio Module)	Read Data Stream	
DB9	2011-2018	ICM (Infotainment Control Module)	Read Fault Code	
DB9	2011-2018	ICM (Infotainment Control Module)	Clear Fault Memory	
DB9	2011-2018	ICM (Infotainment Control Module)	Read Data Stream	
DB9	2011-2018	ICU (Infotainment Control Module)	Read Fault Code	
DB9	2011-2018	ICU (Infotainment Control Module)	Clear Fault Memory	
DB9	2011-2018	ICU (Infotainment Control Module)	Read Data Stream	
DB9	2011-2018	PHM (GSM Phone Module)	Read Fault Code	
DB9	2011-2018	PHM (GSM Phone Module)	Clear Fault Memory	
DB9	2011-2018	PHM (GSM Phone Module)	Read Data Stream	
DB9	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Fault Code	
DB9	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Clear Fault Memory	
DB9	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Data Stream	
DB9	2011-2018	ROPS (Rollover Protection Module)	Read Fault Code	
DB9	2011-2018	ROPS (Rollover Protection Module)	Clear Fault Memory	
DB9	2011-2018	SDAR (Satellite Digital Radio Module)	Read Fault Code	
DB9	2011-2018	SDAR (Satellite Digital Radio Module)	Clear Fault Memory	
DB9	2011-2018	SDAR (Satellite Digital Radio Module)	Read Data Stream	
DB9	2011-2018	SDAR (Satellite Digital Radio Module)	Special Function	SDARS Utilities
DB9	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Fault Code	
DB9	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Clear Fault Memory	
DB9	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Data Stream	
DB9	2011-2018	TMC (Traffic Management Module)	Read Fault Code	
DB9	2011-2018	TMC (Traffic Management Module)	Clear Fault Memory	
DB9	2011-2018	TMC (Traffic Management Module)	Read Data Stream	
Lagonda	2011-2018	EMS (Engine Management Module)	Read Fault Code	
Lagonda	2011-2018	EMS (Engine Management Module)	Clear Fault Memory	
Lagonda	2011-2018	EMS (Engine Management Module)	Version Information	
Lagonda	2011-2018	EMS (Engine Management Module)	Read Data Stream	
Lagonda	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Lagonda	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Lagonda	2011-2018	EMS (Engine Management Module)	Special Function	Key Learn/Clear
Lagonda	2011-2018	EMS (Engine Management Module)	Special Function	OBDDII Monitor Results
Lagonda	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Fault Code	
Lagonda	2011-2018	EMS-S (Engine Management Module - Secondary)	Clear Fault Memory	
Lagonda	2011-2018	EMS-S (Engine Management Module - Secondary)	Version Information	
Lagonda	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Data Stream	
Lagonda	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Lagonda	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Lagonda	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	Key Learn/Clear
Lagonda	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	OBDDII Monitor Results
Lagonda	2011-2018	BCM (Brake Control Module)	Read Fault Code	
Lagonda	2011-2018	BCM (Brake Control Module)	Clear Fault Memory	
Lagonda	2011-2018	BCM (Brake Control Module)	Version Information	
Lagonda	2011-2018	BCM (Brake Control Module)	Read Data Stream	
Lagonda	2011-2018	BCM (Brake Control Module)	Special Function	DSC Calibration
Lagonda	2011-2018	RCM (Restraints Control Module)	Read Fault Code	
Lagonda	2011-2018	RCM (Restraints Control Module)	Clear Fault Memory	
Lagonda	2011-2018	RCM (Restraints Control Module)	Version Information	
Lagonda	2011-2018	RCM (Restraints Control Module)	Read Data Stream	
Lagonda	2011-2018	RCM (Restraints Control Module)	Special Function	Seat OCS Zero
Lagonda	2011-2018	RCM (Restraints Control Module)	Special Function	Seat Track Sensor Test
Lagonda	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Fault Code	
Lagonda	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Clear Fault Memory	
Lagonda	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Version Information	
Lagonda	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Data Stream	
Lagonda	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	DI Calibration Utility
Lagonda	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Read Car Config
Lagonda	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Service Indicator
Lagonda	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Transport Mode
Lagonda	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Fault Code	
Lagonda	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Clear Fault Memory	
Lagonda	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Version Information	
Lagonda	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Data Stream	
Lagonda	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Key Fob Learn/Clear
Lagonda	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Read Vehicle Alarm Causes
Lagonda	2011-2018	DIM (Driver Information Module)	Read Fault Code	

model	year	system	function	subfunction
Lagonda	2011-2018	DIM (Driver Information Module)	Clear Fault Memory	
Lagonda	2011-2018	DIM (Driver Information Module)	Version Information	
Lagonda	2011-2018	DIM (Driver Information Module)	Read Data Stream	
Lagonda	2011-2018	DIM (Driver Information Module)	Special Function	Lights On Key Out Warning
Lagonda	2011-2018	DIM (Driver Information Module)	Special Function	Service Indicator
Lagonda	2011-2018	PAM (Parking Aid Module)	Read Fault Code	
Lagonda	2011-2018	PAM (Parking Aid Module)	Clear Fault Memory	
Lagonda	2011-2018	PAM (Parking Aid Module)	Read Data Stream	
Lagonda	2011-2018	PAM (Parking Aid Module)	Special Function	PAM Config
Lagonda	2011-2018	CCM (Centre Console Module)	Read Fault Code	
Lagonda	2011-2018	CCM (Centre Console Module)	Clear Fault Memory	
Lagonda	2011-2018	CCM (Centre Console Module)	Version Information	
Lagonda	2011-2018	AUD5 (Audio Amplifier Module)	Read Fault Code	
Lagonda	2011-2018	AUD5 (Audio Amplifier Module)	Clear Fault Memory	
Lagonda	2011-2018	AUD5 (Audio Amplifier Module)	Version Information	
Lagonda	2011-2018	SUB5 (Sub Woofer Amplifier)	Read Fault Code	
Lagonda	2011-2018	SUB5 (Sub Woofer Amplifier)	Clear Fault Memory	
Lagonda	2011-2018	SUB5 (Sub Woofer Amplifier)	Version Information	
Lagonda	2011-2018	MMM (Multi-Media Module)	Read Fault Code	
Lagonda	2011-2018	MMM (Multi-Media Module)	Clear Fault Memory	
Lagonda	2011-2018	MMM (Multi-Media Module)	Version Information	
Lagonda	2011-2018	MP1 (Media Player Module)	Read Fault Code	
Lagonda	2011-2018	MP1 (Media Player Module)	Clear Fault Memory	
Lagonda	2011-2018	MP1 (Media Player Module)	Version Information	
Lagonda	2011-2018	AFM (AM/FM Tuner Module)	Read Fault Code	
Lagonda	2011-2018	AFM (AM/FM Tuner Module)	Clear Fault Memory	
Lagonda	2011-2018	AFM (AM/FM Tuner Module)	Version Information	
Lagonda	2011-2018	GPS (Global Positioning System)	Read Fault Code	
Lagonda	2011-2018	GPS (Global Positioning System)	Clear Fault Memory	
Lagonda	2011-2018	GPS (Global Positioning System)	Version Information	
Lagonda	2011-2018	TCMZP (Transmission Control Module)	Read Fault Code	
Lagonda	2011-2018	TCMZP (Transmission Control Module)	Clear Fault Memory	
Lagonda	2011-2018	TCMZP (Transmission Control Module)	Version Information	
Lagonda	2011-2018	TCMZP (Transmission Control Module)	Read Data Stream	
Lagonda	2011-2018	ASM (Marelli Transmission Control Module)	Read Fault Code	
Lagonda	2011-2018	ASM (Marelli Transmission Control Module)	Clear Fault Memory	
Lagonda	2011-2018	ASM (Marelli Transmission Control Module)	Version Information	
Lagonda	2011-2018	ASM (Marelli Transmission Control Module)	Read Data Stream	
Lagonda	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Clutch Bleed
Lagonda	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Self Tune
Lagonda	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Snapshot
Lagonda	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Valve Test
Lagonda	2011-2018	EPB (Parking Brake)	Read Fault Code	
Lagonda	2011-2018	EPB (Parking Brake)	Clear Fault Memory	
Lagonda	2011-2018	EPB (Parking Brake)	Version Information	
Lagonda	2011-2018	EPB (Parking Brake)	Read Data Stream	
Lagonda	2011-2018	EPB (Parking Brake)	Special Function	EPB Utilities
Lagonda	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Fault Code	
Lagonda	2011-2018	ESCL (Electronic Steering Column Lock Module)	Clear Fault Memory	
Lagonda	2011-2018	ESCL (Electronic Steering Column Lock Module)	Version Information	
Lagonda	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Data Stream	
Lagonda	2011-2018	HLM (Headlamp Levelling Module)	Read Fault Code	
Lagonda	2011-2018	HLM (Headlamp Levelling Module)	Clear Fault Memory	
Lagonda	2011-2018	HLM (Headlamp Levelling Module)	Version Information	
Lagonda	2011-2018	HLM (Headlamp Levelling Module)	Read Data Stream	
Lagonda	2011-2018	SAS (Steering Angle Sensor)	Read Fault Code	
Lagonda	2011-2018	SAS (Steering Angle Sensor)	Clear Fault Memory	
Lagonda	2011-2018	SAS (Steering Angle Sensor)	Version Information	
Lagonda	2011-2018	SAS (Steering Angle Sensor)	Read Data Stream	
Lagonda	2011-2018	SAS (Steering Angle Sensor)	Special Function	DSC Calibration
Lagonda	2011-2018	ADM (Adaptive Damping Module)	Read Fault Code	
Lagonda	2011-2018	ADM (Adaptive Damping Module)	Clear Fault Memory	
Lagonda	2011-2018	ADM (Adaptive Damping Module)	Version Information	
Lagonda	2011-2018	ADM (Adaptive Damping Module)	Read Data Stream	
Lagonda	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Fault Code	
Lagonda	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Clear Fault Memory	
Lagonda	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Version Information	
Lagonda	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Data Stream	
Lagonda	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Special Function	TPMS Utilities
Lagonda	2011-2018	DSM+ (Driver Seat Module)	Read Fault Code	
Lagonda	2011-2018	DSM+ (Driver Seat Module)	Clear Fault Memory	
Lagonda	2011-2018	DSM+ (Driver Seat Module)	Version Information	
Lagonda	2011-2018	DSM+ (Driver Seat Module)	Read Data Stream	
Lagonda	2011-2018	DSM+ (Driver Seat Module)	Special Function	Seat Utilities
Lagonda	2011-2018	PSM+ (Passenger Seat Module)	Read Fault Code	
Lagonda	2011-2018	PSM+ (Passenger Seat Module)	Clear Fault Memory	
Lagonda	2011-2018	PSM+ (Passenger Seat Module)	Version Information	
Lagonda	2011-2018	PSM+ (Passenger Seat Module)	Read Data Stream	
Lagonda	2011-2018	PSM+ (Passenger Seat Module)	Special Function	Seat Utilities
Lagonda	2011-2018	DDM+ (Drivers Door Module)	Read Fault Code	
Lagonda	2011-2018	DDM+ (Drivers Door Module)	Clear Fault Memory	
Lagonda	2011-2018	DDM+ (Drivers Door Module)	Version Information	
Lagonda	2011-2018	DDM+ (Drivers Door Module)	Read Data Stream	
Lagonda	2011-2018	DDM+ (Drivers Door Module)	Special Function	Door Utilities
Lagonda	2011-2018	DDM (Drivers Door Module)	Read Fault Code	
Lagonda	2011-2018	DDM (Drivers Door Module)	Clear Fault Memory	
Lagonda	2011-2018	DDM (Drivers Door Module)	Version Information	
Lagonda	2011-2018	DDM (Drivers Door Module)	Read Data Stream	

model	year	system	function	subfunction
Lagonda	2011-2018	PDM+ (Passengers Door Module)	Read Fault Code	
Lagonda	2011-2018	PDM+ (Passengers Door Module)	Clear Fault Memory	
Lagonda	2011-2018	PDM+ (Passengers Door Module)	Version Information	
Lagonda	2011-2018	PDM+ (Passengers Door Module)	Read Data Stream	
Lagonda	2011-2018	PDM+ (Passengers Door Module)	Special Function	Door Utilities
Lagonda	2011-2018	PDM (Passengers Door Module)	Read Fault Code	
Lagonda	2011-2018	PDM (Passengers Door Module)	Clear Fault Memory	
Lagonda	2011-2018	PDM (Passengers Door Module)	Version Information	
Lagonda	2011-2018	PDM (Passengers Door Module)	Read Data Stream	
Lagonda	2011-2018	DDMR (Driver Door Module Rear)	Read Fault Code	
Lagonda	2011-2018	DDMR (Driver Door Module Rear)	Clear Fault Memory	
Lagonda	2011-2018	DDMR (Driver Door Module Rear)	Version Information	
Lagonda	2011-2018	DDMR (Driver Door Module Rear)	Read Data Stream	
Lagonda	2011-2018	PDMR (Passenger Door Module Rear)	Read Fault Code	
Lagonda	2011-2018	PDMR (Passenger Door Module Rear)	Clear Fault Memory	
Lagonda	2011-2018	PDMR (Passenger Door Module Rear)	Version Information	
Lagonda	2011-2018	PDMR (Passenger Door Module Rear)	Read Data Stream	
Lagonda	2011-2018	FCIM (Front Console Interface Module)	Read Fault Code	
Lagonda	2011-2018	FCIM (Front Console Interface Module)	Clear Fault Memory	
Lagonda	2011-2018	FCIM (Front Console Interface Module)	Version Information	
Lagonda	2011-2018	RCIM (Rear Console Interface Module)	Read Fault Code	
Lagonda	2011-2018	RCIM (Rear Console Interface Module)	Clear Fault Memory	
Lagonda	2011-2018	RCIM (Rear Console Interface Module)	Version Information	
Lagonda	2011-2018	LCDM (LCD Module)	Read Fault Code	
Lagonda	2011-2018	LCDM (LCD Module)	Clear Fault Memory	
Lagonda	2011-2018	LCDM (LCD Module)	Version Information	
Lagonda	2011-2018	LCDM (LCD Module)	Special Function	Rear HVAC Utilities
Lagonda	2011-2018	ACCM (Auxiliary CCM)	Read Fault Code	
Lagonda	2011-2018	ACCM (Auxiliary CCM)	Clear Fault Memory	
Lagonda	2011-2018	AUU (Auxiliary USB Module)	Read Fault Code	
Lagonda	2011-2018	AUU (Auxiliary USB Module)	Clear Fault Memory	
Lagonda	2011-2018	AUU (Auxiliary USB Module)	Read Data Stream	
Lagonda	2011-2018	B+O (Band0)	Read Fault Code	
Lagonda	2011-2018	B+O (Band0)	Clear Fault Memory	
Lagonda	2011-2018	BECM-M (Bosch ECM - Master)	Read Fault Code	
Lagonda	2011-2018	BECM-M (Bosch ECM - Master)	Clear Fault Memory	
Lagonda	2011-2018	BECM-M (Bosch ECM - Master)	Read Data Stream	
Lagonda	2011-2018	BECM-S (Bosch ECM - Slave)	Read Fault Code	
Lagonda	2011-2018	BECM-S (Bosch ECM - Slave)	Clear Fault Memory	
Lagonda	2011-2018	BECM-S (Bosch ECM - Slave)	Read Data Stream	
Lagonda	2011-2018	BPM (Bluetooth Phone Module)	Read Fault Code	
Lagonda	2011-2018	BPM (Bluetooth Phone Module)	Clear Fault Memory	
Lagonda	2011-2018	BPM (Bluetooth Phone Module)	Read Data Stream	
Lagonda	2011-2018	CAT-5 (Cat 5 Immobiliser Module)	Read Fault Code	
Lagonda	2011-2018	CCM2 (Centre Console module-2)	Read Fault Code	
Lagonda	2011-2018	CCM2 (Centre Console module-2)	Clear Fault Memory	
Lagonda	2011-2018	CCM2 (Centre Console module-2)	Read Data Stream	
Lagonda	2011-2018	CRM (Convertible Roof Module)	Read Fault Code	
Lagonda	2011-2018	CRM (Convertible Roof Module)	Clear Fault Memory	
Lagonda	2011-2018	CRM (Convertible Roof Module)	Read Data Stream	
Lagonda	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Read Fault Code	
Lagonda	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Clear Fault Memory	
Lagonda	2011-2018	EBS (Electronic Braking System Module)	Read Fault Code	
Lagonda	2011-2018	EBS (Electronic Braking System Module)	Clear Fault Memory	
Lagonda	2011-2018	EBS (Electronic Braking System Module)	Read Data Stream	
Lagonda	2011-2018	IAM (Integrated Audio Module)	Read Fault Code	
Lagonda	2011-2018	IAM (Integrated Audio Module)	Clear Fault Memory	
Lagonda	2011-2018	IAM (Integrated Audio Module)	Read Data Stream	
Lagonda	2011-2018	ICM (Infotainment Control Module)	Read Fault Code	
Lagonda	2011-2018	ICM (Infotainment Control Module)	Clear Fault Memory	
Lagonda	2011-2018	ICM (Infotainment Control Module)	Read Data Stream	
Lagonda	2011-2018	ICU (Infotainment Control Module)	Read Fault Code	
Lagonda	2011-2018	ICU (Infotainment Control Module)	Clear Fault Memory	
Lagonda	2011-2018	ICU (Infotainment Control Module)	Read Data Stream	
Lagonda	2011-2018	PHM (GSM Phone Module)	Read Fault Code	
Lagonda	2011-2018	PHM (GSM Phone Module)	Clear Fault Memory	
Lagonda	2011-2018	PHM (GSM Phone Module)	Read Data Stream	
Lagonda	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Fault Code	
Lagonda	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Clear Fault Memory	
Lagonda	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Data Stream	
Lagonda	2011-2018	ROPS (Rollover Protection Module)	Read Fault Code	
Lagonda	2011-2018	ROPS (Rollover Protection Module)	Clear Fault Memory	
Lagonda	2011-2018	SDAR (Satellite Digital Radio Module)	Read Fault Code	
Lagonda	2011-2018	SDAR (Satellite Digital Radio Module)	Clear Fault Memory	
Lagonda	2011-2018	SDAR (Satellite Digital Radio Module)	Read Data Stream	
Lagonda	2011-2018	SDAR (Satellite Digital Radio Module)	Special Function	SDARS Utilities
Lagonda	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Fault Code	
Lagonda	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Clear Fault Memory	
Lagonda	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Data Stream	
Lagonda	2011-2018	TMC (Traffic Management Module)	Read Fault Code	
Lagonda	2011-2018	TMC (Traffic Management Module)	Clear Fault Memory	
Lagonda	2011-2018	TMC (Traffic Management Module)	Read Data Stream	
One-77	2011-2018	EMS (Engine Management Module)	Read Fault Code	
One-77	2011-2018	EMS (Engine Management Module)	Clear Fault Memory	
One-77	2011-2018	EMS (Engine Management Module)	Version Information	
One-77	2011-2018	EMS (Engine Management Module)	Read Data Stream	
One-77	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
One-77	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)

model	year	system	function	subfunction
One-77	2011-2018	EMS (Engine Management Module)	Special Function	Key Learn/Clear
One-77	2011-2018	EMS (Engine Management Module)	Special Function	OBDII Monitor Results
One-77	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Fault Code	
One-77	2011-2018	EMS-S (Engine Management Module - Secondary)	Clear Fault Memory	
One-77	2011-2018	EMS-S (Engine Management Module - Secondary)	Version Information	
One-77	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Data Stream	
One-77	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
One-77	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
One-77	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	Key Learn/Clear
One-77	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	OBDII Monitor Results
One-77	2011-2018	BCM (Brake Control Module)	Read Fault Code	
One-77	2011-2018	BCM (Brake Control Module)	Clear Fault Memory	
One-77	2011-2018	BCM (Brake Control Module)	Version Information	
One-77	2011-2018	BCM (Brake Control Module)	Read Data Stream	
One-77	2011-2018	BCM (Brake Control Module)	Special Function	DSC Calibration
One-77	2011-2018	RCM (Restraints Control Module)	Read Fault Code	
One-77	2011-2018	RCM (Restraints Control Module)	Clear Fault Memory	
One-77	2011-2018	RCM (Restraints Control Module)	Version Information	
One-77	2011-2018	RCM (Restraints Control Module)	Read Data Stream	
One-77	2011-2018	RCM (Restraints Control Module)	Special Function	Seat OCS Zero
One-77	2011-2018	RCM (Restraints Control Module)	Special Function	Seat Track Sensor Test
One-77	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Fault Code	
One-77	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Clear Fault Memory	
One-77	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Version Information	
One-77	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Data Stream	
One-77	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	DI Calibration Utility
One-77	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Read Car Config
One-77	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Service Indicator
One-77	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Transport Mode
One-77	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Fault Code	
One-77	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Clear Fault Memory	
One-77	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Version Information	
One-77	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Data Stream	
One-77	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Key Fob Learn/Clear
One-77	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Read Vehicle Alarm Causes
One-77	2011-2018	DIM (Driver Information Module)	Read Fault Code	
One-77	2011-2018	DIM (Driver Information Module)	Clear Fault Memory	
One-77	2011-2018	DIM (Driver Information Module)	Version Information	
One-77	2011-2018	DIM (Driver Information Module)	Read Data Stream	
One-77	2011-2018	DIM (Driver Information Module)	Special Function	Lights On Key Out Warning
One-77	2011-2018	DIM (Driver Information Module)	Special Function	Service Indicator
One-77	2011-2018	PAM (Parking Aid Module)	Read Fault Code	
One-77	2011-2018	PAM (Parking Aid Module)	Clear Fault Memory	
One-77	2011-2018	PAM (Parking Aid Module)	Read Data Stream	
One-77	2011-2018	PAM (Parking Aid Module)	Special Function	PAM Config
One-77	2011-2018	CCM (Centre Console Module)	Read Fault Code	
One-77	2011-2018	CCM (Centre Console Module)	Clear Fault Memory	
One-77	2011-2018	CCM (Centre Console Module)	Version Information	
One-77	2011-2018	AUD5 (Audio Amplifier Module)	Read Fault Code	
One-77	2011-2018	AUD5 (Audio Amplifier Module)	Clear Fault Memory	
One-77	2011-2018	AUD5 (Audio Amplifier Module)	Version Information	
One-77	2011-2018	SUB5 (Sub Woofer Amplifier)	Read Fault Code	
One-77	2011-2018	SUB5 (Sub Woofer Amplifier)	Clear Fault Memory	
One-77	2011-2018	SUB5 (Sub Woofer Amplifier)	Version Information	
One-77	2011-2018	MMM (Multi-Media Module)	Read Fault Code	
One-77	2011-2018	MMM (Multi-Media Module)	Clear Fault Memory	
One-77	2011-2018	MMM (Multi-Media Module)	Version Information	
One-77	2011-2018	MP1 (Media Player Module)	Read Fault Code	
One-77	2011-2018	MP1 (Media Player Module)	Clear Fault Memory	
One-77	2011-2018	MP1 (Media Player Module)	Version Information	
One-77	2011-2018	AFM (AM/FM Tuner Module)	Read Fault Code	
One-77	2011-2018	AFM (AM/FM Tuner Module)	Clear Fault Memory	
One-77	2011-2018	AFM (AM/FM Tuner Module)	Version Information	
One-77	2011-2018	GPS (Global Positioning System)	Read Fault Code	
One-77	2011-2018	GPS (Global Positioning System)	Clear Fault Memory	
One-77	2011-2018	GPS (Global Positioning System)	Version Information	
One-77	2011-2018	TCMZP (Transmission Control Module)	Read Fault Code	
One-77	2011-2018	TCMZP (Transmission Control Module)	Clear Fault Memory	
One-77	2011-2018	TCMZP (Transmission Control Module)	Version Information	
One-77	2011-2018	TCMZP (Transmission Control Module)	Read Data Stream	
One-77	2011-2018	ASM (Marelli Transmission Control Module)	Read Fault Code	
One-77	2011-2018	ASM (Marelli Transmission Control Module)	Clear Fault Memory	
One-77	2011-2018	ASM (Marelli Transmission Control Module)	Version Information	
One-77	2011-2018	ASM (Marelli Transmission Control Module)	Read Data Stream	
One-77	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Clutch Bleed
One-77	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Self Tune
One-77	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Snapshot
One-77	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Valve Test
One-77	2011-2018	EPB (Parking Brake)	Read Fault Code	
One-77	2011-2018	EPB (Parking Brake)	Clear Fault Memory	
One-77	2011-2018	EPB (Parking Brake)	Version Information	
One-77	2011-2018	EPB (Parking Brake)	Read Data Stream	
One-77	2011-2018	EPB (Parking Brake)	Special Function	EPB Utilities
One-77	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Fault Code	
One-77	2011-2018	ESCL (Electronic Steering Column Lock Module)	Clear Fault Memory	
One-77	2011-2018	ESCL (Electronic Steering Column Lock Module)	Version Information	
One-77	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Data Stream	
One-77	2011-2018	HLM (Headlamp Levelling Module)	Read Fault Code	

model	year	system	function	subfunction
One-77	2011-2018	HLM (Headlamp Levelling Module)	Clear Fault Memory	
One-77	2011-2018	HLM (Headlamp Levelling Module)	Version Information	
One-77	2011-2018	HLM (Headlamp Levelling Module)	Read Data Stream	
One-77	2011-2018	SAS (Steering Angle Sensor)	Read Fault Code	
One-77	2011-2018	SAS (Steering Angle Sensor)	Clear Fault Memory	
One-77	2011-2018	SAS (Steering Angle Sensor)	Version Information	
One-77	2011-2018	SAS (Steering Angle Sensor)	Read Data Stream	
One-77	2011-2018	SAS (Steering Angle Sensor)	Special Function	DSC Calibration
One-77	2011-2018	ADM (Adaptive Damping Module)	Read Fault Code	
One-77	2011-2018	ADM (Adaptive Damping Module)	Clear Fault Memory	
One-77	2011-2018	ADM (Adaptive Damping Module)	Version Information	
One-77	2011-2018	ADM (Adaptive Damping Module)	Read Data Stream	
One-77	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Fault Code	
One-77	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Clear Fault Memory	
One-77	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Version Information	
One-77	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Data Stream	
One-77	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Special Function	TPMS Utilities
One-77	2011-2018	DSM+ (Driver Seat Module)	Read Fault Code	
One-77	2011-2018	DSM+ (Driver Seat Module)	Clear Fault Memory	
One-77	2011-2018	DSM+ (Driver Seat Module)	Version Information	
One-77	2011-2018	DSM+ (Driver Seat Module)	Read Data Stream	
One-77	2011-2018	DSM+ (Driver Seat Module)	Special Function	Seat Utilities
One-77	2011-2018	PSM+ (Passenger Seat Module)	Read Fault Code	
One-77	2011-2018	PSM+ (Passenger Seat Module)	Clear Fault Memory	
One-77	2011-2018	PSM+ (Passenger Seat Module)	Version Information	
One-77	2011-2018	PSM+ (Passenger Seat Module)	Read Data Stream	
One-77	2011-2018	PSM+ (Passenger Seat Module)	Special Function	Seat Utilities
One-77	2011-2018	DDM+ (Drivers Door Module)	Read Fault Code	
One-77	2011-2018	DDM+ (Drivers Door Module)	Clear Fault Memory	
One-77	2011-2018	DDM+ (Drivers Door Module)	Version Information	
One-77	2011-2018	DDM+ (Drivers Door Module)	Read Data Stream	
One-77	2011-2018	DDM+ (Drivers Door Module)	Special Function	Door Utilities
One-77	2011-2018	DDM (Drivers Door Module)	Read Fault Code	
One-77	2011-2018	DDM (Drivers Door Module)	Clear Fault Memory	
One-77	2011-2018	DDM (Drivers Door Module)	Version Information	
One-77	2011-2018	DDM (Drivers Door Module)	Read Data Stream	
One-77	2011-2018	PDM+ (Passengers Door Module)	Read Fault Code	
One-77	2011-2018	PDM+ (Passengers Door Module)	Clear Fault Memory	
One-77	2011-2018	PDM+ (Passengers Door Module)	Version Information	
One-77	2011-2018	PDM+ (Passengers Door Module)	Read Data Stream	
One-77	2011-2018	PDM+ (Passengers Door Module)	Special Function	Door Utilities
One-77	2011-2018	PDM (Passengers Door Module)	Read Fault Code	
One-77	2011-2018	PDM (Passengers Door Module)	Clear Fault Memory	
One-77	2011-2018	PDM (Passengers Door Module)	Version Information	
One-77	2011-2018	PDM (Passengers Door Module)	Read Data Stream	
One-77	2011-2018	DDMR (Driver Door Module Rear)	Read Fault Code	
One-77	2011-2018	DDMR (Driver Door Module Rear)	Clear Fault Memory	
One-77	2011-2018	DDMR (Driver Door Module Rear)	Version Information	
One-77	2011-2018	DDMR (Driver Door Module Rear)	Read Data Stream	
One-77	2011-2018	PDMR (Passenger Door Module Rear)	Read Fault Code	
One-77	2011-2018	PDMR (Passenger Door Module Rear)	Clear Fault Memory	
One-77	2011-2018	PDMR (Passenger Door Module Rear)	Version Information	
One-77	2011-2018	PDMR (Passenger Door Module Rear)	Read Data Stream	
One-77	2011-2018	FCIM (Front Console Interface Module)	Read Fault Code	
One-77	2011-2018	FCIM (Front Console Interface Module)	Clear Fault Memory	
One-77	2011-2018	FCIM (Front Console Interface Module)	Version Information	
One-77	2011-2018	RCIM (Rear Console Interface Module)	Read Fault Code	
One-77	2011-2018	RCIM (Rear Console Interface Module)	Clear Fault Memory	
One-77	2011-2018	RCIM (Rear Console Interface Module)	Version Information	
One-77	2011-2018	LCDM (LCD Module)	Read Fault Code	
One-77	2011-2018	LCDM (LCD Module)	Clear Fault Memory	
One-77	2011-2018	LCDM (LCD Module)	Version Information	
One-77	2011-2018	LCDM (LCD Module)	Special Function	Rear HVAC Utilities
One-77	2011-2018	ACCM (Auxiliary CCM)	Read Fault Code	
One-77	2011-2018	ACCM (Auxiliary CCM)	Clear Fault Memory	
One-77	2011-2018	AUU (Auxilliary USB Module)	Read Fault Code	
One-77	2011-2018	AUU (Auxilliary USB Module)	Clear Fault Memory	
One-77	2011-2018	AUU (Auxilliary USB Module)	Read Data Stream	
One-77	2011-2018	B+0 (Band0)	Read Fault Code	
One-77	2011-2018	B+0 (Band0)	Clear Fault Memory	
One-77	2011-2018	BECM-M (Bosch ECM - Master)	Read Fault Code	
One-77	2011-2018	BECM-M (Bosch ECM - Master)	Clear Fault Memory	
One-77	2011-2018	BECM-M (Bosch ECM - Master)	Read Data Stream	
One-77	2011-2018	BECM-S (Bosch ECM - Slave)	Read Fault Code	
One-77	2011-2018	BECM-S (Bosch ECM - Slave)	Clear Fault Memory	
One-77	2011-2018	BECM-S (Bosch ECM - Slave)	Read Data Stream	
One-77	2011-2018	BPM (Bluetooth Phone Module)	Read Fault Code	
One-77	2011-2018	BPM (Bluetooth Phone Module)	Clear Fault Memory	
One-77	2011-2018	BPM (Bluetooth Phone Module)	Read Data Stream	
One-77	2011-2018	CAT-5 (Cat 5 Immobiliser Module)	Read Fault Code	
One-77	2011-2018	CCM2 (Centre Console module-2)	Read Fault Code	
One-77	2011-2018	CCM2 (Centre Console module-2)	Clear Fault Memory	
One-77	2011-2018	CCM2 (Centre Console module-2)	Read Data Stream	
One-77	2011-2018	CRM (Convertible Roof Module)	Read Fault Code	
One-77	2011-2018	CRM (Convertible Roof Module)	Clear Fault Memory	
One-77	2011-2018	CRM (Convertible Roof Module)	Read Data Stream	
One-77	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Read Fault Code	
One-77	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Clear Fault Memory	

model	year	system	function	subfunction
One-77	2011-2018	EBS (Electronic Braking System Module)	Read Fault Code	
One-77	2011-2018	EBS (Electronic Braking System Module)	Clear Fault Memory	
One-77	2011-2018	EBS (Electronic Braking System Module)	Read Data Stream	
One-77	2011-2018	IAM (Integrated Audio Module)	Read Fault Code	
One-77	2011-2018	IAM (Integrated Audio Module)	Clear Fault Memory	
One-77	2011-2018	IAM (Integrated Audio Module)	Read Data Stream	
One-77	2011-2018	ICM (Infotainment Control Module)	Read Fault Code	
One-77	2011-2018	ICM (Infotainment Control Module)	Clear Fault Memory	
One-77	2011-2018	ICM (Infotainment Control Module)	Read Data Stream	
One-77	2011-2018	ICU (Infotainment Control Module)	Read Fault Code	
One-77	2011-2018	ICU (Infotainment Control Module)	Clear Fault Memory	
One-77	2011-2018	ICU (Infotainment Control Module)	Read Data Stream	
One-77	2011-2018	PHM (GSM Phone Module)	Read Fault Code	
One-77	2011-2018	PHM (GSM Phone Module)	Clear Fault Memory	
One-77	2011-2018	PHM (GSM Phone Module)	Read Data Stream	
One-77	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Fault Code	
One-77	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Clear Fault Memory	
One-77	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Data Stream	
One-77	2011-2018	ROPS (Rollover Protection Module)	Read Fault Code	
One-77	2011-2018	ROPS (Rollover Protection Module)	Clear Fault Memory	
One-77	2011-2018	SDAR (Satellite Digital Radio Module)	Read Fault Code	
One-77	2011-2018	SDAR (Satellite Digital Radio Module)	Clear Fault Memory	
One-77	2011-2018	SDAR (Satellite Digital Radio Module)	Read Data Stream	
One-77	2011-2018	SDAR (Satellite Digital Radio Module)	Special Function	SDARS Utilities
One-77	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Fault Code	
One-77	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Clear Fault Memory	
One-77	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Data Stream	
One-77	2011-2018	TMC (Traffic Management Module)	Read Fault Code	
One-77	2011-2018	TMC (Traffic Management Module)	Clear Fault Memory	
One-77	2011-2018	TMC (Traffic Management Module)	Read Data Stream	
Zagato	2011-2018	EMS (Engine Management Module)	Read Fault Code	
Zagato	2011-2018	EMS (Engine Management Module)	Clear Fault Memory	
Zagato	2011-2018	EMS (Engine Management Module)	Version Information	
Zagato	2011-2018	EMS (Engine Management Module)	Read Data Stream	
Zagato	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Zagato	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Zagato	2011-2018	EMS (Engine Management Module)	Special Function	Key Learn/Clear
Zagato	2011-2018	EMS (Engine Management Module)	Special Function	OBDDII Monitor Results
Zagato	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Fault Code	
Zagato	2011-2018	EMS-S (Engine Management Module - Secondary)	Clear Fault Memory	
Zagato	2011-2018	EMS-S (Engine Management Module - Secondary)	Version Information	
Zagato	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Data Stream	
Zagato	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Zagato	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Zagato	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	Key Learn/Clear
Zagato	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	OBDDII Monitor Results
Zagato	2011-2018	BCM (Brake Control Module)	Read Fault Code	
Zagato	2011-2018	BCM (Brake Control Module)	Clear Fault Memory	
Zagato	2011-2018	BCM (Brake Control Module)	Version Information	
Zagato	2011-2018	BCM (Brake Control Module)	Read Data Stream	
Zagato	2011-2018	BCM (Brake Control Module)	Special Function	DSC Calibration
Zagato	2011-2018	RCM (Restraints Control Module)	Read Fault Code	
Zagato	2011-2018	RCM (Restraints Control Module)	Clear Fault Memory	
Zagato	2011-2018	RCM (Restraints Control Module)	Version Information	
Zagato	2011-2018	RCM (Restraints Control Module)	Read Data Stream	
Zagato	2011-2018	RCM (Restraints Control Module)	Special Function	Seat OCS Zero
Zagato	2011-2018	RCM (Restraints Control Module)	Special Function	Seat Track Sensor Test
Zagato	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Fault Code	
Zagato	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Clear Fault Memory	
Zagato	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Version Information	
Zagato	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Data Stream	
Zagato	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	DI Calibration Utility
Zagato	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Read Car Config
Zagato	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Service Indicator
Zagato	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Transport Mode
Zagato	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Fault Code	
Zagato	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Clear Fault Memory	
Zagato	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Version Information	
Zagato	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Data Stream	
Zagato	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Key Fob Learn/Clear
Zagato	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Read Vehicle Alarm Causes
Zagato	2011-2018	DIM (Driver Information Module)	Read Fault Code	
Zagato	2011-2018	DIM (Driver Information Module)	Clear Fault Memory	
Zagato	2011-2018	DIM (Driver Information Module)	Version Information	
Zagato	2011-2018	DIM (Driver Information Module)	Read Data Stream	
Zagato	2011-2018	DIM (Driver Information Module)	Special Function	Lights On Key Out Warning
Zagato	2011-2018	DIM (Driver Information Module)	Special Function	Service Indicator
Zagato	2011-2018	PAM (Parking Aid Module)	Read Fault Code	
Zagato	2011-2018	PAM (Parking Aid Module)	Clear Fault Memory	
Zagato	2011-2018	PAM (Parking Aid Module)	Read Data Stream	
Zagato	2011-2018	PAM (Parking Aid Module)	Special Function	PAM Config
Zagato	2011-2018	CCM (Centre Console Module)	Read Fault Code	
Zagato	2011-2018	CCM (Centre Console Module)	Clear Fault Memory	
Zagato	2011-2018	CCM (Centre Console Module)	Version Information	
Zagato	2011-2018	AUD5 (Audio Amplifier Module)	Read Fault Code	
Zagato	2011-2018	AUD5 (Audio Amplifier Module)	Clear Fault Memory	
Zagato	2011-2018	AUD5 (Audio Amplifier Module)	Version Information	
Zagato	2011-2018	SUB5 (Sub Woofer Amplifier)	Read Fault Code	

model	year	system	function	subfunction
Zagato	2011-2018	SUB5 (Sub Woofer Amplifier)	Clear Fault Memory	
Zagato	2011-2018	SUB5 (Sub Woofer Amplifier)	Version Information	
Zagato	2011-2018	MMM (Multi-Media Module)	Read Fault Code	
Zagato	2011-2018	MMM (Multi-Media Module)	Clear Fault Memory	
Zagato	2011-2018	MMM (Multi-Media Module)	Version Information	
Zagato	2011-2018	MP1 (Media Player Module)	Read Fault Code	
Zagato	2011-2018	MP1 (Media Player Module)	Clear Fault Memory	
Zagato	2011-2018	MP1 (Media Player Module)	Version Information	
Zagato	2011-2018	AFM (AM/FM Tuner Module)	Read Fault Code	
Zagato	2011-2018	AFM (AM/FM Tuner Module)	Clear Fault Memory	
Zagato	2011-2018	AFM (AM/FM Tuner Module)	Version Information	
Zagato	2011-2018	GPS (Global Positioning System)	Read Fault Code	
Zagato	2011-2018	GPS (Global Positioning System)	Clear Fault Memory	
Zagato	2011-2018	GPS (Global Positioning System)	Version Information	
Zagato	2011-2018	TCMZP (Transmission Control Module)	Read Fault Code	
Zagato	2011-2018	TCMZP (Transmission Control Module)	Clear Fault Memory	
Zagato	2011-2018	TCMZP (Transmission Control Module)	Version Information	
Zagato	2011-2018	TCMZP (Transmission Control Module)	Read Data Stream	
Zagato	2011-2018	ASM (Marelli Transmission Control Module)	Read Fault Code	
Zagato	2011-2018	ASM (Marelli Transmission Control Module)	Clear Fault Memory	
Zagato	2011-2018	ASM (Marelli Transmission Control Module)	Version Information	
Zagato	2011-2018	ASM (Marelli Transmission Control Module)	Read Data Stream	
Zagato	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Clutch Bleed
Zagato	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Self Tune
Zagato	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Snapshot
Zagato	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Valve Test
Zagato	2011-2018	EPB (Parking Brake)	Read Fault Code	
Zagato	2011-2018	EPB (Parking Brake)	Clear Fault Memory	
Zagato	2011-2018	EPB (Parking Brake)	Version Information	
Zagato	2011-2018	EPB (Parking Brake)	Read Data Stream	
Zagato	2011-2018	EPB (Parking Brake)	Special Function	EPB Utilities
Zagato	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Fault Code	
Zagato	2011-2018	ESCL (Electronic Steering Column Lock Module)	Clear Fault Memory	
Zagato	2011-2018	ESCL (Electronic Steering Column Lock Module)	Version Information	
Zagato	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Data Stream	
Zagato	2011-2018	HLM (Headlamp Levelling Module)	Read Fault Code	
Zagato	2011-2018	HLM (Headlamp Levelling Module)	Clear Fault Memory	
Zagato	2011-2018	HLM (Headlamp Levelling Module)	Version Information	
Zagato	2011-2018	HLM (Headlamp Levelling Module)	Read Data Stream	
Zagato	2011-2018	SAS (Steering Angle Sensor)	Read Fault Code	
Zagato	2011-2018	SAS (Steering Angle Sensor)	Clear Fault Memory	
Zagato	2011-2018	SAS (Steering Angle Sensor)	Version Information	
Zagato	2011-2018	SAS (Steering Angle Sensor)	Read Data Stream	
Zagato	2011-2018	SAS (Steering Angle Sensor)	Special Function	DSC Calibration
Zagato	2011-2018	ADM (Adaptive Damping Module)	Read Fault Code	
Zagato	2011-2018	ADM (Adaptive Damping Module)	Clear Fault Memory	
Zagato	2011-2018	ADM (Adaptive Damping Module)	Version Information	
Zagato	2011-2018	ADM (Adaptive Damping Module)	Read Data Stream	
Zagato	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Fault Code	
Zagato	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Clear Fault Memory	
Zagato	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Version Information	
Zagato	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Data Stream	
Zagato	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Special Function	TPMS Utilities
Zagato	2011-2018	DSM+ (Driver Seat Module)	Read Fault Code	
Zagato	2011-2018	DSM+ (Driver Seat Module)	Clear Fault Memory	
Zagato	2011-2018	DSM+ (Driver Seat Module)	Version Information	
Zagato	2011-2018	DSM+ (Driver Seat Module)	Read Data Stream	
Zagato	2011-2018	DSM+ (Driver Seat Module)	Special Function	Seat Utilities
Zagato	2011-2018	PSM+ (Passenger Seat Module)	Read Fault Code	
Zagato	2011-2018	PSM+ (Passenger Seat Module)	Clear Fault Memory	
Zagato	2011-2018	PSM+ (Passenger Seat Module)	Version Information	
Zagato	2011-2018	PSM+ (Passenger Seat Module)	Read Data Stream	
Zagato	2011-2018	PSM+ (Passenger Seat Module)	Special Function	Seat Utilities
Zagato	2011-2018	DDM+ (Drivers Door Module)	Read Fault Code	
Zagato	2011-2018	DDM+ (Drivers Door Module)	Clear Fault Memory	
Zagato	2011-2018	DDM+ (Drivers Door Module)	Version Information	
Zagato	2011-2018	DDM+ (Drivers Door Module)	Read Data Stream	
Zagato	2011-2018	DDM+ (Drivers Door Module)	Special Function	Door Utilities
Zagato	2011-2018	DDM (Drivers Door Module)	Read Fault Code	
Zagato	2011-2018	DDM (Drivers Door Module)	Clear Fault Memory	
Zagato	2011-2018	DDM (Drivers Door Module)	Version Information	
Zagato	2011-2018	DDM (Drivers Door Module)	Read Data Stream	
Zagato	2011-2018	PDM+ (Passengers Door Module)	Read Fault Code	
Zagato	2011-2018	PDM+ (Passengers Door Module)	Clear Fault Memory	
Zagato	2011-2018	PDM+ (Passengers Door Module)	Version Information	
Zagato	2011-2018	PDM+ (Passengers Door Module)	Read Data Stream	
Zagato	2011-2018	PDM+ (Passengers Door Module)	Special Function	Door Utilities
Zagato	2011-2018	PDM (Passengers Door Module)	Read Fault Code	
Zagato	2011-2018	PDM (Passengers Door Module)	Clear Fault Memory	
Zagato	2011-2018	PDM (Passengers Door Module)	Version Information	
Zagato	2011-2018	PDM (Passengers Door Module)	Read Data Stream	
Zagato	2011-2018	DDMR (Driver Door Module Rear)	Read Fault Code	
Zagato	2011-2018	DDMR (Driver Door Module Rear)	Clear Fault Memory	
Zagato	2011-2018	DDMR (Driver Door Module Rear)	Version Information	
Zagato	2011-2018	DDMR (Driver Door Module Rear)	Read Data Stream	
Zagato	2011-2018	PDMR (Passenger Door Module Rear)	Read Fault Code	
Zagato	2011-2018	PDMR (Passenger Door Module Rear)	Clear Fault Memory	
Zagato	2011-2018	PDMR (Passenger Door Module Rear)	Version Information	

model	year	system	function	subfunction
Zagato	2011-2018	PDMR (Passenger Door Module Rear)	Read Data Stream	
Zagato	2011-2018	FCIM (Front Console Interface Module)	Read Fault Code	
Zagato	2011-2018	FCIM (Front Console Interface Module)	Clear Fault Memory	
Zagato	2011-2018	FCIM (Front Console Interface Module)	Version Information	
Zagato	2011-2018	RCIM (Rear Console Interface Module)	Read Fault Code	
Zagato	2011-2018	RCIM (Rear Console Interface Module)	Clear Fault Memory	
Zagato	2011-2018	RCIM (Rear Console Interface Module)	Version Information	
Zagato	2011-2018	LCDM (LCD Module)	Read Fault Code	
Zagato	2011-2018	LCDM (LCD Module)	Clear Fault Memory	
Zagato	2011-2018	LCDM (LCD Module)	Version Information	
Zagato	2011-2018	LCDM (LCD Module)	Special Function	Rear HVAC Utilities
Zagato	2011-2018	ACCM (Auxiliary CCM)	Read Fault Code	
Zagato	2011-2018	ACCM (Auxiliary CCM)	Clear Fault Memory	
Zagato	2011-2018	AUU (Auxiliary USB Module)	Read Fault Code	
Zagato	2011-2018	AUU (Auxiliary USB Module)	Clear Fault Memory	
Zagato	2011-2018	AUU (Auxiliary USB Module)	Read Data Stream	
Zagato	2011-2018	B+0 (Band0)	Read Fault Code	
Zagato	2011-2018	B+0 (Band0)	Clear Fault Memory	
Zagato	2011-2018	BECM-M (Bosch ECM - Master)	Read Fault Code	
Zagato	2011-2018	BECM-M (Bosch ECM - Master)	Clear Fault Memory	
Zagato	2011-2018	BECM-M (Bosch ECM - Master)	Read Data Stream	
Zagato	2011-2018	BECM-S (Bosch ECM - Slave)	Read Fault Code	
Zagato	2011-2018	BECM-S (Bosch ECM - Slave)	Clear Fault Memory	
Zagato	2011-2018	BECM-S (Bosch ECM - Slave)	Read Data Stream	
Zagato	2011-2018	BPM (Bluetooth Phone Module)	Read Fault Code	
Zagato	2011-2018	BPM (Bluetooth Phone Module)	Clear Fault Memory	
Zagato	2011-2018	BPM (Bluetooth Phone Module)	Read Data Stream	
Zagato	2011-2018	CAT-5 (Cat 5 Immobiliser Module)	Read Fault Code	
Zagato	2011-2018	CCM2 (Centre Console module-2)	Read Fault Code	
Zagato	2011-2018	CCM2 (Centre Console module-2)	Clear Fault Memory	
Zagato	2011-2018	CCM2 (Centre Console module-2)	Read Data Stream	
Zagato	2011-2018	CRM (Convertible Roof Module)	Read Fault Code	
Zagato	2011-2018	CRM (Convertible Roof Module)	Clear Fault Memory	
Zagato	2011-2018	CRM (Convertible Roof Module)	Read Data Stream	
Zagato	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Read Fault Code	
Zagato	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Clear Fault Memory	
Zagato	2011-2018	EBS (Electronic Braking System Module)	Read Fault Code	
Zagato	2011-2018	EBS (Electronic Braking System Module)	Clear Fault Memory	
Zagato	2011-2018	EBS (Electronic Braking System Module)	Read Data Stream	
Zagato	2011-2018	IAM (Integrated Audio Module)	Read Fault Code	
Zagato	2011-2018	IAM (Integrated Audio Module)	Clear Fault Memory	
Zagato	2011-2018	IAM (Integrated Audio Module)	Read Data Stream	
Zagato	2011-2018	ICM (Infotainment Control Module)	Read Fault Code	
Zagato	2011-2018	ICM (Infotainment Control Module)	Clear Fault Memory	
Zagato	2011-2018	ICM (Infotainment Control Module)	Read Data Stream	
Zagato	2011-2018	ICU (Infotainment Control Module)	Read Fault Code	
Zagato	2011-2018	ICU (Infotainment Control Module)	Clear Fault Memory	
Zagato	2011-2018	ICU (Infotainment Control Module)	Read Data Stream	
Zagato	2011-2018	PHM (GSM Phone Module)	Read Fault Code	
Zagato	2011-2018	PHM (GSM Phone Module)	Clear Fault Memory	
Zagato	2011-2018	PHM (GSM Phone Module)	Read Data Stream	
Zagato	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Fault Code	
Zagato	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Clear Fault Memory	
Zagato	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Data Stream	
Zagato	2011-2018	ROPS (Rollover Protection Module)	Read Fault Code	
Zagato	2011-2018	ROPS (Rollover Protection Module)	Clear Fault Memory	
Zagato	2011-2018	SDAR (Satellite Digital Radio Module)	Read Fault Code	
Zagato	2011-2018	SDAR (Satellite Digital Radio Module)	Clear Fault Memory	
Zagato	2011-2018	SDAR (Satellite Digital Radio Module)	Read Data Stream	
Zagato	2011-2018	SDAR (Satellite Digital Radio Module)	Special Function	SDARS Utilities
Zagato	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Fault Code	
Zagato	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Clear Fault Memory	
Zagato	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Data Stream	
Zagato	2011-2018	TMC (Traffic Management Module)	Read Fault Code	
Zagato	2011-2018	TMC (Traffic Management Module)	Clear Fault Memory	
Zagato	2011-2018	TMC (Traffic Management Module)	Read Data Stream	
Vanquish	2011-2018	EMS (Engine Management Module)	Read Fault Code	
Vanquish	2011-2018	EMS (Engine Management Module)	Clear Fault Memory	
Vanquish	2011-2018	EMS (Engine Management Module)	Version Information	
Vanquish	2011-2018	EMS (Engine Management Module)	Read Data Stream	
Vanquish	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Vanquish	2011-2018	EMS (Engine Management Module)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Vanquish	2011-2018	EMS (Engine Management Module)	Special Function	Key Learn/Clear
Vanquish	2011-2018	EMS (Engine Management Module)	Special Function	OBDII Monitor Results
Vanquish	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Fault Code	
Vanquish	2011-2018	EMS-S (Engine Management Module - Secondary)	Clear Fault Memory	
Vanquish	2011-2018	EMS-S (Engine Management Module - Secondary)	Version Information	
Vanquish	2011-2018	EMS-S (Engine Management Module - Secondary)	Read Data Stream	
Vanquish	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOEO(Engine Management Key On Engine Off Test)
Vanquish	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	EMS KOER(Engine Management Key On Engine Running Test)
Vanquish	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	Key Learn/Clear
Vanquish	2011-2018	EMS-S (Engine Management Module - Secondary)	Special Function	OBDII Monitor Results
Vanquish	2011-2018	BCM (Brake Control Module)	Read Fault Code	
Vanquish	2011-2018	BCM (Brake Control Module)	Clear Fault Memory	
Vanquish	2011-2018	BCM (Brake Control Module)	Version Information	
Vanquish	2011-2018	BCM (Brake Control Module)	Read Data Stream	
Vanquish	2011-2018	BCM (Brake Control Module)	Special Function	DSC Calibration
Vanquish	2011-2018	RCM (Restraints Control Module)	Read Fault Code	

model	year	system	function	subfunction
Vanquish	2011-2018	RCM (Restraints Control Module)	Clear Fault Memory	
Vanquish	2011-2018	RCM (Restraints Control Module)	Version Information	
Vanquish	2011-2018	RCM (Restraints Control Module)	Read Data Stream	
Vanquish	2011-2018	RCM (Restraints Control Module)	Special Function	Seat OCS Zero
Vanquish	2011-2018	RCM (Restraints Control Module)	Special Function	Seat Track Sensor Test
Vanquish	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Fault Code	
Vanquish	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Clear Fault Memory	
Vanquish	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Version Information	
Vanquish	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Read Data Stream	
Vanquish	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	DI Calibration Utility
Vanquish	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Read Car Config
Vanquish	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Service Indicator
Vanquish	2011-2018	CEM-HS (Central Electronic Module (High Speed CAN))	Special Function	Transport Mode
Vanquish	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Fault Code	
Vanquish	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Clear Fault Memory	
Vanquish	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Version Information	
Vanquish	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Read Data Stream	
Vanquish	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Key Fob Learn/Clear
Vanquish	2011-2018	CEM-LS (Central Electronic Module (Low Speed CAN))	Special Function	Read Vehicle Alarm Causes
Vanquish	2011-2018	DIM (Driver Information Module)	Read Fault Code	
Vanquish	2011-2018	DIM (Driver Information Module)	Clear Fault Memory	
Vanquish	2011-2018	DIM (Driver Information Module)	Version Information	
Vanquish	2011-2018	DIM (Driver Information Module)	Read Data Stream	
Vanquish	2011-2018	DIM (Driver Information Module)	Special Function	Lights On Key Out Warning
Vanquish	2011-2018	DIM (Driver Information Module)	Special Function	Service Indicator
Vanquish	2011-2018	PAM (Parking Aid Module)	Read Fault Code	
Vanquish	2011-2018	PAM (Parking Aid Module)	Clear Fault Memory	
Vanquish	2011-2018	PAM (Parking Aid Module)	Read Data Stream	
Vanquish	2011-2018	PAM (Parking Aid Module)	Special Function	PAM Config
Vanquish	2011-2018	CCM (Centre Console Module)	Read Fault Code	
Vanquish	2011-2018	CCM (Centre Console Module)	Clear Fault Memory	
Vanquish	2011-2018	CCM (Centre Console Module)	Version Information	
Vanquish	2011-2018	AUD5 (Audio Amplifier Module)	Read Fault Code	
Vanquish	2011-2018	AUD5 (Audio Amplifier Module)	Clear Fault Memory	
Vanquish	2011-2018	AUD5 (Audio Amplifier Module)	Version Information	
Vanquish	2011-2018	SUB5 (Sub Woofer Amplifier)	Read Fault Code	
Vanquish	2011-2018	SUB5 (Sub Woofer Amplifier)	Clear Fault Memory	
Vanquish	2011-2018	SUB5 (Sub Woofer Amplifier)	Version Information	
Vanquish	2011-2018	MMM (Multi-Media Module)	Read Fault Code	
Vanquish	2011-2018	MMM (Multi-Media Module)	Clear Fault Memory	
Vanquish	2011-2018	MMM (Multi-Media Module)	Version Information	
Vanquish	2011-2018	MP1 (Media Player Module)	Read Fault Code	
Vanquish	2011-2018	MP1 (Media Player Module)	Clear Fault Memory	
Vanquish	2011-2018	MP1 (Media Player Module)	Version Information	
Vanquish	2011-2018	AFM (AM/FM Tuner Module)	Read Fault Code	
Vanquish	2011-2018	AFM (AM/FM Tuner Module)	Clear Fault Memory	
Vanquish	2011-2018	AFM (AM/FM Tuner Module)	Version Information	
Vanquish	2011-2018	GPS (Global Positioning System)	Read Fault Code	
Vanquish	2011-2018	GPS (Global Positioning System)	Clear Fault Memory	
Vanquish	2011-2018	GPS (Global Positioning System)	Version Information	
Vanquish	2011-2018	TCMZF (Transmission Control Module)	Read Fault Code	
Vanquish	2011-2018	TCMZF (Transmission Control Module)	Clear Fault Memory	
Vanquish	2011-2018	TCMZF (Transmission Control Module)	Version Information	
Vanquish	2011-2018	TCMZF (Transmission Control Module)	Read Data Stream	
Vanquish	2011-2018	EPB (Parking Brake)	Read Fault Code	
Vanquish	2011-2018	EPB (Parking Brake)	Clear Fault Memory	
Vanquish	2011-2018	EPB (Parking Brake)	Version Information	
Vanquish	2011-2018	EPB (Parking Brake)	Read Data Stream	
Vanquish	2011-2018	EPB (Parking Brake)	Special Function	EPB Utilities
Vanquish	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Fault Code	
Vanquish	2011-2018	ESCL (Electronic Steering Column Lock Module)	Clear Fault Memory	
Vanquish	2011-2018	ESCL (Electronic Steering Column Lock Module)	Version Information	
Vanquish	2011-2018	ESCL (Electronic Steering Column Lock Module)	Read Data Stream	
Vanquish	2011-2018	HLM (Headlamp Levelling Module)	Read Fault Code	
Vanquish	2011-2018	HLM (Headlamp Levelling Module)	Clear Fault Memory	
Vanquish	2011-2018	HLM (Headlamp Levelling Module)	Version Information	
Vanquish	2011-2018	HLM (Headlamp Levelling Module)	Read Data Stream	
Vanquish	2011-2018	SAS (Steering Angle Sensor)	Read Fault Code	
Vanquish	2011-2018	SAS (Steering Angle Sensor)	Clear Fault Memory	
Vanquish	2011-2018	SAS (Steering Angle Sensor)	Version Information	
Vanquish	2011-2018	SAS (Steering Angle Sensor)	Read Data Stream	
Vanquish	2011-2018	SAS (Steering Angle Sensor)	Special Function	DSC Calibration
Vanquish	2011-2018	ADM (Adaptive Damping Module)	Read Fault Code	
Vanquish	2011-2018	ADM (Adaptive Damping Module)	Clear Fault Memory	
Vanquish	2011-2018	ADM (Adaptive Damping Module)	Version Information	
Vanquish	2011-2018	ADM (Adaptive Damping Module)	Read Data Stream	
Vanquish	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Fault Code	
Vanquish	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Clear Fault Memory	
Vanquish	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Version Information	
Vanquish	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Read Data Stream	
Vanquish	2011-2018	TPMS (Beru Tyre Pressure Monitor Module)	Special Function	TPMS Utilities
Vanquish	2011-2018	DSM+ (Driver Seat Module)	Read Fault Code	
Vanquish	2011-2018	DSM+ (Driver Seat Module)	Clear Fault Memory	
Vanquish	2011-2018	DSM+ (Driver Seat Module)	Version Information	
Vanquish	2011-2018	DSM+ (Driver Seat Module)	Read Data Stream	
Vanquish	2011-2018	DSM+ (Driver Seat Module)	Special Function	Seat Utilities
Vanquish	2011-2018	PSM+ (Passenger Seat Module)	Read Fault Code	
Vanquish	2011-2018	PSM+ (Passenger Seat Module)	Clear Fault Memory	

model	year	system	function	subfunction
Vanquish	2011-2018	PSM+ (Passenger Seat Module)	Version Information	
Vanquish	2011-2018	PSM+ (Passenger Seat Module)	Read Data Stream	
Vanquish	2011-2018	PSM+ (Passenger Seat Module)	Special Function	Seat Utilities
Vanquish	2011-2018	DDM+ (Drivers Door Module)	Read Fault Code	
Vanquish	2011-2018	DDM+ (Drivers Door Module)	Clear Fault Memory	
Vanquish	2011-2018	DDM+ (Drivers Door Module)	Version Information	
Vanquish	2011-2018	DDM+ (Drivers Door Module)	Read Data Stream	
Vanquish	2011-2018	DDM+ (Drivers Door Module)	Special Function	Door Utilities
Vanquish	2011-2018	DDM (Drivers Door Module)	Read Fault Code	
Vanquish	2011-2018	DDM (Drivers Door Module)	Clear Fault Memory	
Vanquish	2011-2018	DDM (Drivers Door Module)	Version Information	
Vanquish	2011-2018	DDM (Drivers Door Module)	Read Data Stream	
Vanquish	2011-2018	PDM+ (Passengers Door Module)	Read Fault Code	
Vanquish	2011-2018	PDM+ (Passengers Door Module)	Clear Fault Memory	
Vanquish	2011-2018	PDM+ (Passengers Door Module)	Version Information	
Vanquish	2011-2018	PDM+ (Passengers Door Module)	Read Data Stream	
Vanquish	2011-2018	PDM+ (Passengers Door Module)	Special Function	Door Utilities
Vanquish	2011-2018	PDM (Passengers Door Module)	Read Fault Code	
Vanquish	2011-2018	PDM (Passengers Door Module)	Clear Fault Memory	
Vanquish	2011-2018	PDM (Passengers Door Module)	Version Information	
Vanquish	2011-2018	PDM (Passengers Door Module)	Read Data Stream	
Vanquish	2011-2018	DDMR (Driver Door Module Rear)	Read Fault Code	
Vanquish	2011-2018	DDMR (Driver Door Module Rear)	Clear Fault Memory	
Vanquish	2011-2018	DDMR (Driver Door Module Rear)	Version Information	
Vanquish	2011-2018	DDMR (Driver Door Module Rear)	Read Data Stream	
Vanquish	2011-2018	PDMR (Passenger Door Module Rear)	Read Fault Code	
Vanquish	2011-2018	PDMR (Passenger Door Module Rear)	Clear Fault Memory	
Vanquish	2011-2018	PDMR (Passenger Door Module Rear)	Version Information	
Vanquish	2011-2018	PDMR (Passenger Door Module Rear)	Read Data Stream	
Vanquish	2011-2018	FCIM (Front Console Interface Module)	Read Fault Code	
Vanquish	2011-2018	FCIM (Front Console Interface Module)	Clear Fault Memory	
Vanquish	2011-2018	FCIM (Front Console Interface Module)	Version Information	
Vanquish	2011-2018	RCIM (Rear Console Interface Module)	Read Fault Code	
Vanquish	2011-2018	RCIM (Rear Console Interface Module)	Clear Fault Memory	
Vanquish	2011-2018	RCIM (Rear Console Interface Module)	Version Information	
Vanquish	2011-2018	LCDM (LCD Module)	Read Fault Code	
Vanquish	2011-2018	LCDM (LCD Module)	Clear Fault Memory	
Vanquish	2011-2018	LCDM (LCD Module)	Version Information	
Vanquish	2011-2018	LCDM (LCD Module)	Special Function	Rear HVAC Utilities
Vanquish	2011-2018	ACCM (Auxiliary CCM)	Read Fault Code	
Vanquish	2011-2018	ACCM (Auxiliary CCM)	Clear Fault Memory	
Vanquish	2011-2018	AU (Auxilliary USB Module)	Read Fault Code	
Vanquish	2011-2018	AU (Auxilliary USB Module)	Clear Fault Memory	
Vanquish	2011-2018	AU (Auxilliary USB Module)	Read Data Stream	
Vanquish	2011-2018	B+0 (Band0)	Read Fault Code	
Vanquish	2011-2018	B+0 (Band0)	Clear Fault Memory	
Vanquish	2011-2018	BECM-M (Bosch ECM - Master)	Read Fault Code	
Vanquish	2011-2018	BECM-M (Bosch ECM - Master)	Clear Fault Memory	
Vanquish	2011-2018	BECM-M (Bosch ECM - Master)	Read Data Stream	
Vanquish	2011-2018	BECM-S (Bosch ECM - Slave)	Read Fault Code	
Vanquish	2011-2018	BECM-S (Bosch ECM - Slave)	Clear Fault Memory	
Vanquish	2011-2018	BECM-S (Bosch ECM - Slave)	Read Data Stream	
Vanquish	2011-2018	BPM (Bluetooth Phone Module)	Read Fault Code	
Vanquish	2011-2018	BPM (Bluetooth Phone Module)	Clear Fault Memory	
Vanquish	2011-2018	BPM (Bluetooth Phone Module)	Read Data Stream	
Vanquish	2011-2018	CAT-5 (Cat 5 Immobiliser Module)	Read Fault Code	
Vanquish	2011-2018	CCM2 (Centre Console module-2)	Read Fault Code	
Vanquish	2011-2018	CCM2 (Centre Console module-2)	Clear Fault Memory	
Vanquish	2011-2018	CCM2 (Centre Console module-2)	Read Data Stream	
Vanquish	2011-2018	CRM (Convertible Roof Module)	Read Fault Code	
Vanquish	2011-2018	CRM (Convertible Roof Module)	Clear Fault Memory	
Vanquish	2011-2018	CRM (Convertible Roof Module)	Read Data Stream	
Vanquish	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Read Fault Code	
Vanquish	2011-2018	DAB (Digital Audio Broadcast Receiver Module)	Clear Fault Memory	
Vanquish	2011-2018	EBS (Electronic Braking System Module)	Read Fault Code	
Vanquish	2011-2018	EBS (Electronic Braking System Module)	Clear Fault Memory	
Vanquish	2011-2018	EBS (Electronic Braking System Module)	Read Data Stream	
Vanquish	2011-2018	IAM (Integrated Audio Module)	Read Fault Code	
Vanquish	2011-2018	IAM (Integrated Audio Module)	Clear Fault Memory	
Vanquish	2011-2018	IAM (Integrated Audio Module)	Read Data Stream	
Vanquish	2011-2018	ICM (Infotainment Control Module)	Read Fault Code	
Vanquish	2011-2018	ICM (Infotainment Control Module)	Clear Fault Memory	
Vanquish	2011-2018	ICM (Infotainment Control Module)	Read Data Stream	
Vanquish	2011-2018	ICU (Infotainment Control Module)	Read Fault Code	
Vanquish	2011-2018	ICU (Infotainment Control Module)	Clear Fault Memory	
Vanquish	2011-2018	ICU (Infotainment Control Module)	Read Data Stream	
Vanquish	2011-2018	PHM (GSM Phone Module)	Read Fault Code	
Vanquish	2011-2018	PHM (GSM Phone Module)	Clear Fault Memory	
Vanquish	2011-2018	PHM (GSM Phone Module)	Read Data Stream	
Vanquish	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Fault Code	
Vanquish	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Clear Fault Memory	
Vanquish	2011-2018	RHCM (Ride Height And Aerofoil Control Module)	Read Data Stream	
Vanquish	2011-2018	ROPS (Rollover Protection Module)	Read Fault Code	
Vanquish	2011-2018	ROPS (Rollover Protection Module)	Clear Fault Memory	
Vanquish	2011-2018	SDAR (Satellite Digital Radio Module)	Read Fault Code	
Vanquish	2011-2018	SDAR (Satellite Digital Radio Module)	Clear Fault Memory	
Vanquish	2011-2018	SDAR (Satellite Digital Radio Module)	Read Data Stream	
Vanquish	2011-2018	SDAR (Satellite Digital Radio Module)	Special Function	SDARS Utilities

model	year	system	function	subfunction
Vanquish	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Fault Code	
Vanquish	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Clear Fault Memory	
Vanquish	2011-2018	TCM-ZF8 (8 Speed ZF TCM)	Read Data Stream	
Vanquish	2011-2018	TMC (Traffic Management Module)	Read Fault Code	
Vanquish	2011-2018	TMC (Traffic Management Module)	Clear Fault Memory	
Vanquish	2011-2018	TMC (Traffic Management Module)	Read Data Stream	
Vanquish	2011-2018	ASM (Marelli Transmission Control Module)	Read Fault Code	
Vanquish	2011-2018	ASM (Marelli Transmission Control Module)	Clear Fault Memory	
Vanquish	2011-2018	ASM (Marelli Transmission Control Module)	Version Information	
Vanquish	2011-2018	ASM (Marelli Transmission Control Module)	Read Data Stream	
Vanquish	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Clutch Bleed
Vanquish	2000-2009	ASM (Marelli Transmission Control Module)	Special Function	ASM Select 1st On Key Off
Vanquish	2000-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Self Tune
Vanquish	2000-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Snapshot
Vanquish	2011-2018	ASM (Marelli Transmission Control Module)	Special Function	ASM Valve Test
Vanquish	2000-2009	PATS (PATS Anti-theft Module)	Special Function	Key Fob Learn/Clear
Vanquish	2000-2009	PATS (PATS Anti-theft Module)	Special Function	PATS key learn clear
DB7	1994-2003	EMS (Engine Management Module)	Read Fault Code	
DB7	1994-2003	EMS (Engine Management Module)	Clear Fault Memory	
DB7	1994-2003	EMS (Engine Management Module)	Read Data Stream	
DB7	1994-2003	EMS (Engine Management Module)	Special Function	V12 TP Setup
DB7	1994-2003	EMS-S (Engine Management Module - Secondary)	Read Fault Code	
DB7	1994-2003	EMS-S (Engine Management Module - Secondary)	Clear Fault Memory	
DB7	1994-2003	EMS-S (Engine Management Module - Secondary)	Read Data Stream	
DB7	1994-2003	EMS-S (Engine Management Module - Secondary)	Special Function	V12 TP Setup
DB7	1994-2003	TCM-ZF (ZF Transmission Control Module)	Read Fault Code	
DB7	1994-2003	TCM-ZF (ZF Transmission Control Module)	Clear Fault Memory	
DB7	1994-2003	TCM-ZF (ZF Transmission Control Module)	Read Data Stream	
DB7	1994-2003	ABS (ABS/TC Module)	Read Fault Code	
DB7	1994-2003	ABS (ABS/TC Module)	Clear Fault Memory	
DB7	1994-2003	ABS (ABS/TC Module)	Read Data Stream	
DB7	1994-2003	ABS (ABS/TC Module)	Special Function	Brake Bleed
DB7	1994-2003	RCM (Restraints Control Module)	Read Fault Code	
DB7	1994-2003	RCM (Restraints Control Module)	Clear Fault Memory	
DB7	1994-2003	RCM (Restraints Control Module)	Read Data Stream	
DB7	1994-2003	PATS (PATS Anti-theft Module)	Read Fault Code	
DB7	1994-2003	PATS (PATS Anti-theft Module)	Clear Fault Memory	
DB7	1994-2003	PATS (PATS Anti-theft Module)	Read Data Stream	
DB7	1994-2003	PATS (PATS Anti-theft Module)	Special Function	ALARM Config
DB7	1994-2003	PATS (PATS Anti-theft Module)	Special Function	ALARM FOBS
DB7	1994-2003	PATS (PATS Anti-theft Module)	Special Function	PATS System
DB7	1994-2003	SBPT (Seat Belt Pretensioner Module)	Read Fault Code	
DB7	1994-2003	SBPT (Seat Belt Pretensioner Module)	Clear Fault Memory	