

**HONDA/ACURA Diagnostics List**  
**(Note:For reference only)**

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Read DTC	
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Clear fault memory	
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Read Data Stream	
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Read Freeze Frame	
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		ECM/PCM reset	
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	INJECTOR TEST
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	ALL INJECTORS OFF
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	EGR TEST
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	IMRC TEST
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	FUEL RAIL PRESSURE TEST
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Fuel rail pressure control valve test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	TURBO CHARGER BOOST TEST
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	GLOW ON/OFF
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	ACG ON/OFF
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	FUEL HEATER ON/OFF
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	RADIATOR FAN RELAY TEST
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	INTAKE SHUTTER TEST
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	EGR cooler bypass valve test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	In Tank Pump Activation
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Shutter Grill Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Shutter Grill Relay Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Low Pressure EGR Actuator Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	High Pressure EGR Actuator Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Intake Pressure Control Valve Actuator Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Low Pressure EGR System Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Low Pressure EGR Differential Pressure Sensor Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	2 stage turbo charger boost test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Idle speed adjust
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	VTEC low V/T check
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	O2S Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Compression Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	EVAP Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	IMT (IMRC) test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	VTEC Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	VTEC(VCM) Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	ROCKER ARM OIL CONTROL SOLENOID A ON/OFF
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	ROCKER ARM OIL CONTROL SOLENOID B ON/OFF
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	ROCKER ARM OIL CONTROL SOLENOID C ON/OFF
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	3 cylinder activation test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	4 cylinder activation test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	6 cylinder activation test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	IACV Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	ETCS(TAC) Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	A/C clutch
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Fuel pump on
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Fuel pump off
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	All injectors
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	One injector
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	ACM(Active Control Engine Mount System)
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Cruise control cancel history
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	TC wastegate control sol.v.test

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	TC bypass control sol.v.test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	TC boost control sol.v.test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Subfuel solenoid valve test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	VTC Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Starter test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Radiator fan
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	WGS Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	ABV Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Cylinder AF Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Cylinder Cranking Speed Variation Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Idle Start Stop Counter Check
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	2nd ECU (CNG) Compulsion Drive Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	TMU Electric Oil Pump Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Electric Water Pump Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Flexible Fuel Vehicle Heater Control Unit TEST(FFVHCU)
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Fuel pressure test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	DI Fuel pressure test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Actuation Test	Variable Capacity Engine Oil Pump Solenoid Test
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Replace ECM/PCM
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Write VIN
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Write data
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	IAQ DATA STATUS
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	IQA WRITE DATA
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	DPF REGENERATION
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	DPF DIFFERENTIAL PRESSURE SENSOR INITIAL LEARN
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	RESET CALCULATED PM VALUE
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	MAF Sensor Learning Clear
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	A/F Sensor 1 Learning Clear
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	ISV Forced Learning
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Idle Stop Starter Counter Clear
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Idle Stop Starter Counter Forced Write
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Oil Dilution Estimate Integrated Value Clear
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Intake Pressure Control Valve Learning Clear
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Low Pressure EGR Differential Pressure Sensor Learning Clear
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	CRANK(CKP) Pattern Clear
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	CRANK(CKP) Pattern Learning
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Main Fuel Tank Alcohol Content Write Data
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Throttle Learning
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Motor Rotor Position Calibration
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	TMU Activation
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	E-VTC Learning
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	ECO Score Writing
ALL Mode	1992-2017	PGM-FI/DIESEL(Engine System)		Special Function	Readiness Codes
ALL Mode	1992-2017	AT(Automatic Transmission)		Read DTC	
ALL Mode	1992-2017	AT(Automatic Transmission)		Clear fault memory	
ALL Mode	1992-2017	AT(Automatic Transmission)		Read Data Stream	
ALL Mode	1992-2017	AT(Automatic Transmission)		Read Freeze Frame	
ALL Mode	1992-2017	AT(Automatic Transmission)		PCM/TCM Reset	
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Inhibitor solenoid test
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Shift lock solenoid test

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Start clutch status data clear
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	SHIFT SOLENOID VALVE O/P
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Start Clutch Feedback Learn
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Inclination Sensor Learn
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Oil Pump Activation
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Shift lock solenoid test
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Line Pressure Solenoid Test
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Clutch pressure control solenoid valve A
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Clutch pressure control solenoid valve B
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Clutch pressure control solenoid valve C
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Clutch pressure control solenoid valve D
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Pressure test assistance mode
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Clutch Pressure Control (Linear) Solenoid Valve A
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Clutch Pressure Control (Linear) Solenoid Valve B
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Clutch Pressure Control (Linear) Solenoid Valve C
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Clutch Pressure Control (Linear) Solenoid Valve D
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Forcedly change shift function
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	CAS SOLENOID A (LF)
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	CAS SOLENOID A (RF)
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Shift solenoid test
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	Indicator test
ALL Mode	1992-2017	AT(Automatic Transmission)		Actuation Test	ATFP motor test
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Stroke Sensor Learning
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Valve Body Characteristic Learning
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Oil Pump Activation
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Clutch Assembly By Pressure
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Clutch Filling Check
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	EOL Reference Search(NTL-Ref)
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	EOL Learn Gear
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Clutch Clamp Force Characteristic
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	EOL Learn Synchronizing In Sequence
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Shift Clutch Quality Test
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Open The Refill Orifice
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	TCM Reset
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Clutch Filling Check/Clutch Assembly By Pressure
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Learn Synchronizing
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Clutch Clamp Force Characteristic
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Abnormal Start Check
ALL Mode	1992-2017	AT(Automatic Transmission)		Special Function	Teach In
ALL Mode	1992-2017	SRS(Supplemental Inflatable Restraint System)		Read DTC	
ALL Mode	1992-2017	SRS(Supplemental Inflatable Restraint System)		Clear fault memory	
ALL Mode	1992-2017	SRS(Supplemental Inflatable Restraint System)		Read Data Stream	
ALL Mode	1992-2017	SRS(Supplemental Inflatable Restraint System)		System information	
ALL Mode	1992-2017	SRS(Supplemental Inflatable Restraint System)		Special Function	OPDS Initialization

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	SRS(Supplemental Inflatable Restraint System)		Special Function	SWS initialization
ALL Mode	1992-2017	SRS(Supplemental Inflatable Restraint System)		Special Function	E-Tensioner For CMBS
ALL Mode	1992-2017	SRS(Supplemental Inflatable Restraint System)		Special Function	Blinking Side Airbag Indicator Light
ALL Mode	1992-2017	SRS(Supplemental Inflatable Restraint System)		Special Function	Vehicle Level Position Calibration
ALL Mode	1992-2017	SRS(Supplemental Inflatable Restraint System)		Special Function	ODS Unit initialization
ALL Mode	1992-2017	SRS(Supplemental Inflatable Restraint System)		Special Function	Passenger's Airbag Setting
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Read DTC	
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Clear fault memory	
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Read Data Stream	
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	Left front solenoid
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	Right front solenoid
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	Left rear solenoid
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	Right rear solenoid
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	Left front VSA
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	Right front VSA
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	Left rear VSA
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	Right rear VSA
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	LF TCS solenoid
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	RF TCS solenoid
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	LF apply/dump solenoid
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	RF apply/dump solenoid
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	VSA-TCS control valve
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	TSA relay switch test
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	LF PULSER
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	RF PULSER
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	LR PULSER
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	RR PULSER
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	Modulator Bleed
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	LF CAS SOL
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	RF CAS SOL
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	LR CAS SOL
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	RR CAS SOL
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Actuation Test	ESS Activation
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Special Function	ALL SENSOR
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Special Function	VSA Sensor Neutral Position Memorisation
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Special Function	Brake Pad Maintenance Mode
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Special Function	Deflation Warning System
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Special Function	Steering Angle Sensor Center Point Writing
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Special Function	Brake pressure sensor cluster
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Special Function	TPMS(VSA) threshold
ALL Mode	1992-2017	ABS(Anti-lock Braking System)		Special Function	Sensor cluster
ALL Mode	1992-2017	OPDS(Occupant Position Detection System)		OPDS Initialization	
ALL Mode	1992-2017	SWS(Seat Weight Sensor)		Read DTC	
ALL Mode	1992-2017	SWS(Seat Weight Sensor)		Clear fault memory	
ALL Mode	1992-2017	SWS(Seat Weight Sensor)		Read Data Stream	
ALL Mode	1992-2017	SWS(Seat Weight Sensor)		Special Function	SWS initialization
ALL Mode	1992-2017	SWS(Seat Weight Sensor)		Special Function	Check
ALL Mode	1992-2017	E-TENSIONER		Special Function	E-Tensioner For CMBS
ALL Mode	1992-2017	EPS(Electric Power Steering)		Read DTC	
ALL Mode	1992-2017	EPS(Electric Power Steering)		Clear fault memory	
ALL Mode	1992-2017	EPS(Electric Power Steering)		Read Data Stream	

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	EPS(Electric Power Steering)		Read Freeze Frame	
ALL Mode	1992-2017	EPS(Electric Power Steering)		Actuation Test	Frequency change
ALL Mode	1992-2017	EPS(Electric Power Steering)		Actuation Test	A/C fan minimum
ALL Mode	1992-2017	EPS(Electric Power Steering)		Actuation Test	PS Signal
ALL Mode	1992-2017	EPS(Electric Power Steering)		Special Function	Gear ratio sensor
ALL Mode	1992-2017	EPS(Electric Power Steering)		Special Function	EPS Steering Angle Sensor Value Clear
ALL Mode	1992-2017	EPS(Electric Power Steering)		Special Function	Torque sensor learn
ALL Mode	1992-2017	EPS(Electric Power Steering)		Special Function	STEERING END POSITION LEARNING
ALL Mode	1992-2017	EPS(Electric Power Steering)		Special Function	EPS Steering Angle Sensor Value Clear
ALL Mode	1992-2017	EPS(Electric Power Steering)		Special Function	MA-EPS Control ON/OFF
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Speedometer
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Tachometer
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	VSA/TCS Active Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	VSA/TCS Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	ABS Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	EBD Indicator (Electronic Brake Distribution)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Cruise Control Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	MIL Status
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Windshield Washer Fluid Level Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Daytime Running Lights Indicator(Canada)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	LKAS Off Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	CMBS(CMS) Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	HIDS Warning Lamp
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Keyless Access Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Engine Oil Pressure Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Charging System Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Cruise Control Main SW. Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Maintenance Required Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	High Beam Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Light On Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Low fuel level indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Security Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Trip Meter
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	A/T Gear Position Indicator (P)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	A/T Gear Position Indicator (R)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	A/T Gear Position Indicator (N)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	A/T Gear Position Indicator (D)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	A/T Gear Position Indicator (D3)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	A/T Gear Position Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	A/T Gear Position Indicator (M)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Sequential Sport Shift Mode Indicator(1)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Sequential Sport Shift Mode Indicator(2)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Sequential Sport Shift Mode Indicator(3)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Sequential Sport Shift Mode Indicator(4)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Sequential Sport Shift Mode Indicator(5)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Illumination Brightness Control

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Key Alarm Chime
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Headlight Alarm Chime
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Seatbelt Reminder Chime
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Speed Alarm Chime
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Reverse Chime
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Actuation Test	Front Fog Lamp
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Special Function	Instrument control module replacement
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Special Function	Maintenance Minder(USA)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Special Function	Maintenance Minder(Europe)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Special Function	CVT Fluid Replacement(General)
ALL Mode	1992-2017	BCM(Body Electrical System)	Instrument	Special Function	Customize Reset
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Front Fog Lights
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Daytime Running Light Signal
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Head Light Backup
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Map Light Off
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Ignition Key Cylinder Light Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Interior Light Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Foot Light Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Left Turn Signal Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Right Turn Signal Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Hazard Flasher
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Rear Fog Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Headlight Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Headlight High Beam Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Parking Lights Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Auto Light headlights
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Cargo Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Floor Light(Rear door ashtray light)
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Daytime Running Light Relay Command(Canada)
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Headlight ON Command (Backup line)
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Headlight OFF Command (Backup line)
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Head Light Cleaner
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Memory Switch Illumination Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Trunk & Fuel Opener Switch Illumination Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Driver's LOCK/UNLOCK Switch Illumination Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Driver's Outer Handle Illumination Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Driver's Inner Handle Illumination Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Driver's Door Pocket Illumination Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Driver's Door Courtesy Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Passenger's LOCK/UNLOCK Switch Illumination Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Passenger's Outer Handle Illumination Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Passenger's Inner Handle Illumination Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Passenger's Door Pocket Illumination Light

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Passenger's Door Courtesy Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Rear Left Inner Handle Illumination Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Rear Driver Door Courtesy Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Rear Left Door Courtesy Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Rear Right Inner Handle Illumination Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Rear Assistant Door Courtesy Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Illumination	Actuation Test	Rear Right Door Courtesy Light
ALL Mode	1992-2017	BCM(Body Electrical System)	Door lock	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Door lock	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Door lock	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Door lock	Actuation Test	Lock all doors
ALL Mode	1992-2017	BCM(Body Electrical System)	Door lock	Actuation Test	Unlock driver's side door
ALL Mode	1992-2017	BCM(Body Electrical System)	Door lock	Actuation Test	Unlock all doors
ALL Mode	1992-2017	BCM(Body Electrical System)	Door lock	Actuation Test	Left Sliding Door Lock
ALL Mode	1992-2017	BCM(Body Electrical System)	Door lock	Actuation Test	Left Sliding Door Unlock
ALL Mode	1992-2017	BCM(Body Electrical System)	Door lock	Actuation Test	Fuel fill door open
ALL Mode	1992-2017	BCM(Body Electrical System)	Door lock	Actuation Test	Super Locking (with super locking)
ALL Mode	1992-2017	BCM(Body Electrical System)	Keyless	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Keyless	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Keyless	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Keyless	Actuation Test	Trunk Lid/Tailgate Release Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Keyless	Actuation Test	Keyless Buzzer
ALL Mode	1992-2017	BCM(Body Electrical System)	Keyless	Special Function	Keyless Check
ALL Mode	1992-2017	BCM(Body Electrical System)	Keyless	Special Function	Add Remote
ALL Mode	1992-2017	BCM(Body Electrical System)	Keyless	Special Function	Erase Remote
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Driver's Window Up
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Driver's Window Down
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Front Passenger's Window Up
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Front Passenger's Window Down
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Left Rear Window Up
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Left Rear Window Down
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Right Rear Window Up
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Right Rear Window Down
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Rear Driver's P/W Relay Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Rear Pass's P/W Relay Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	P/W Relay Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Sunroof
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Actuation Test	Glass Hatch Open
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Special Function	Power Window Reset for Driver side
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Special Function	Power Window Reset for Passenger side
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Special Function	Power Window Reset for Left Rear
ALL Mode	1992-2017	BCM(Body Electrical System)	Power windows	Special Function	Power Window Reset for Right Rear
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	Windshield Wiper Motor LOW Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	Windshield Wiper Motor HIGH Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	Windshield Washer Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	Rear wiper motor

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	Rear wiper washer
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	Front Wiper - LOW
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	Front Wiper - HIGH
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	Front Wiper - INT
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	Rear Wiper
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	Fail Wiper Signal
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	No Wiper Signal
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	Rain Condition Signal
ALL Mode	1992-2017	BCM(Body Electrical System)	Wiper	Actuation Test	No Rain Condition Signal
ALL Mode	1992-2017	BCM(Body Electrical System)	Safety system	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Safety system	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Safety system	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Safety system	Actuation Test	Horn Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Safety system	Actuation Test	Security Indicator
ALL Mode	1992-2017	BCM(Body Electrical System)	Safety system	Actuation Test	Hazard Signal Command
ALL Mode	1992-2017	BCM(Body Electrical System)	Safety system	Special Function	History Data
ALL Mode	1992-2017	BCM(Body Electrical System)	Safety system	Special Function	Clear History Data
ALL Mode	1992-2017	BCM(Body Electrical System)	HVAC/Climate Control	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	HVAC/Climate Control	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	HVAC/Climate Control	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	HVAC/Climate Control	Special Function	Climate Control Unit Self Test
ALL Mode	1992-2017	BCM(Body Electrical System)	Front Panel	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Front Panel	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Front Panel	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Front Panel	Actuation Test	TFT-LCD backlight(with NAVI) - Turn on for 5 seconds
ALL Mode	1992-2017	BCM(Body Electrical System)	Front Panel	Actuation Test	Segment LCD(Without NAVI) - Turn on for 5 seconds
ALL Mode	1992-2017	BCM(Body Electrical System)	Front Panel	Actuation Test	SUB display segment LCD(with NAVI) - Turn on for 5 seconds
ALL Mode	1992-2017	BCM(Body Electrical System)	Front Panel	Special Function	Front Panel Check
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Tailgate	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Tailgate	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Tailgate	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Tailgate	Actuation Test	PTG Drive Motor
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Tailgate	Actuation Test	PTG Clutch
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Tailgate	Actuation Test	PTG release motor
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Trunk Lid	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Trunk Lid	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Trunk Lid	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Trunk Lid	Actuation Test	Power Trunk Lid Drive Motor-Full Open
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Trunk Lid	Actuation Test	Power Trunk Lid Drive Motor-Full Close
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Trunk Lid	Actuation Test	Power Trunk Lid Magnetic Clutch
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Trunk Lid	Actuation Test	Power Release Latch Motor-Drive for releasing to Open position and returning to Neutral position
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Trunk Lid	Actuation Test	Power Release Latch Motor-Drive for releasing to Full latch position and returning to Neutral position
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Clear fault memory	

<b>model</b>	<b>year</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Power Seat Indicator-Memory Seat Indicator 1
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Power Seat Indicator-Memory Seat Indicator 2
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Slide Motor - Full Forward
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Slide Motor - Full Backward
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Front UP-DOWN Motor - Full Up
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Front UP-DOWN Motor - Full Down
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Rear UP-DOWN Motor - Full Up
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Rear UP-DOWN Motor - Full Down
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Recline Motor - Full Forward
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Recline Motor - Full Backward
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Memory Buzzer - 5 seconds
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Headrest Motor
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Driver Door Mirror UP
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Driver Door Mirror DOWN
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Driver Door Mirror Left
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Driver Door Mirror Right
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Assistant Door Mirror UP
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Assistant Door Mirror DOWN
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Assistant Door Mirror Left
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Assistant Door Mirror Right
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Column Tilt Motor - Full up position
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Column Tilt Motor - Full down position
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Column Telescopic Motor - Full Pull up position
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Column Telescopic Motor - Full Push down position
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Left Power Mirror - Full Up
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Left Power Mirror - Full Down
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Left Power Mirror - Full Right
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Left Power Mirror - Full Left
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Right Power Mirror - Full Up

<b>model</b>	<b>year</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Right Power Mirror - Full Down
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Right Power Mirror - Full Right
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Seat/Power Mirror	Actuation Test	Right Power Mirror - Full Left
ALL Mode	1992-2017	BCM(Body Electrical System)	Hands Free Link	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Hands Free Link	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Hands Free Link	Special Function	Passcode clear
ALL Mode	1992-2017	BCM(Body Electrical System)	Telematics	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Telematics	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Telematics	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Telematics	Actuation Test	Turn RED LED ON
ALL Mode	1992-2017	BCM(Body Electrical System)	Telematics	Actuation Test	Turn RED LED OFF
ALL Mode	1992-2017	BCM(Body Electrical System)	Adaptive Front Lighting	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Adaptive Front Lighting	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Adaptive Front Lighting	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Adaptive Front Lighting	Actuation Test	Headlight - Left/Right
ALL Mode	1992-2017	BCM(Body Electrical System)	Adaptive Front Lighting	Actuation Test	Headlight - Up/Down
ALL Mode	1992-2017	BCM(Body Electrical System)	Auto Light Leveling	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Auto Light Leveling	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Auto Light Leveling	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Auto Light Leveling	Actuation Test	Auto Leveling Adjust Motor
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Left Power Sliding Door-PSD drive motor open
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Left Power Sliding Door-PSD drive motor close
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Left Power Sliding Door-PSD clutch
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Left Power Sliding Door-Release actuator
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Left Power Sliding Door-Closer motor
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Left Power Sliding Door-Buzzer
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Right Power Sliding Door-PSD drive motor open
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Right Power Sliding Door-PSD drive motor close
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Right Power Sliding Door-PSD clutch
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Right Power Sliding Door-Release actuator
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Right Power Sliding Door-Closer motor
ALL Mode	1992-2017	BCM(Body Electrical System)	Power Sliding Door	Actuation Test	Right Power Sliding Door-Buzzer
ALL Mode	1992-2017	BCM(Body Electrical System)	Parking Sensor	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Parking Sensor	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Parking Sensor	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP Security	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP Security	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP Security	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP Security	Special Function	Clear History Data
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP ECU	Read DTC	

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP ECU	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP ECU	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP R/C ENG Starter	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP R/C ENG Starter	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP R/C ENG Starter	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP R/C ENG Starter	System Check	
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP R/C ENG Starter	History Data	Engine (Doesn't) Run History
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP R/C ENG Starter	History Data	Clear History Data-Engine (Doesn't) Run History
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP R/C ENG Starter	History Data	Engine Stop History
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP R/C ENG Starter	History Data	Clear History Data-Engine Stop History
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP R/C ENG Starter	History Data	Engine Start Count History
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP R/C ENG Starter	Check	Register Remote Control Engine Starter Unit
ALL Mode	1992-2017	BCM(Body Electrical System)	YOP R/C ENG Starter	Check	Register New Transmitter
ALL Mode	1992-2017	BCM(Body Electrical System)	Auto AC SUB display	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Auto AC SUB display	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Auto AC SUB display	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Seat Heater	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Seat Heater	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Seat Heater	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	High Beam Support	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	High Beam Support	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	High Beam Support	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	High Beam Support	Actuation Test	Oncoming Vehicle Detection
ALL Mode	1992-2017	BCM(Body Electrical System)	High Beam Support	Actuation Test	Preceding Vehicle Detection
ALL Mode	1992-2017	BCM(Body Electrical System)	High Beam Support	Special Function	High Beam Support System function
ALL Mode	1992-2017	BCM(Body Electrical System)	High Beam Support	Special Function	Reset Operation
ALL Mode	1992-2017	BCM(Body Electrical System)	High Beam Support	Special Function	Returning Operation
ALL Mode	1992-2017	BCM(Body Electrical System)	High Beam Support	Special Function	Automatic Returning Distance
ALL Mode	1992-2017	BCM(Body Electrical System)	High Beam Support	Special Function	Manual Returning Time
ALL Mode	1992-2017	BCM(Body Electrical System)	High Beam Support	Special Function	Reset to default
ALL Mode	1992-2017	BCM(Body Electrical System)	IRCU(Interactive Remote Control Unit)	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	IRCU(Interactive Remote Control Unit)	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Rear camera	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	Rear camera	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	Rear camera	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	Rear camera	Actuation Test	Monitor and Alarm
ALL Mode	1992-2017	BCM(Body Electrical System)	Rear camera	Actuation Test	Display Rear Camera output image
ALL Mode	1992-2017	BCM(Body Electrical System)	Rear camera	Special Function	Rear camera aiming
ALL Mode	1992-2017	BCM(Body Electrical System)	Rear camera	Special Function	Aiming Data transfer
ALL Mode	1992-2017	BCM(Body Electrical System)	HIP(Honda Information Platform)	Read DTC	
ALL Mode	1992-2017	BCM(Body Electrical System)	HIP(Honda Information Platform)	Clear fault memory	
ALL Mode	1992-2017	BCM(Body Electrical System)	HIP(Honda Information Platform)	Read Data Stream	
ALL Mode	1992-2017	BCM(Body Electrical System)	HIP(Honda Information Platform)	Special Function	Stored DTC Memory Clear

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	BCM(Body Electrical System)	HIP(Honda Information Platform)	Special Function	XM Radio Channel Adjustment
ALL Mode	1992-2017	AVAS(Acoustic Vehicle Alerting System)		Read DTC	
ALL Mode	1992-2017	AVAS(Acoustic Vehicle Alerting System)		Clear fault memory	
ALL Mode	1992-2017	AVAS(Acoustic Vehicle Alerting System)		Read Data Stream	
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Read DTC	
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Clear fault memory	
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Read Data Stream	
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Read Freeze Frame	
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	BM FAN DRIVE
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	MPIM FAN DRIVE
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	IPU module fan drive
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	Battery Fan Test
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	Electric Water Pump Test
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	Coolant Air Bleeding
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	Radiator Fan Test
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	Quick Charge Lid Lock Forced Open
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	Shift Lock Solenoid Test
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	Collision Shutoff History Clear
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	Charger Forced On Mode
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Actuation Test	IPU A/C Cooling Mode
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Special Function	Motor Rotor Position Calibration

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Special Function	SOC PRESET
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Special Function	IMA Battery Replacement
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Special Function	IMA ECU Replacement
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Special Function	Motor Rotor Position Sensor Learning
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Special Function	ECU Clear
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Special Function	High Voltage Battery/Motor-High Voltage Battery ECU Replacement
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Special Function	Twin Motor Unit Motor Rotor Position Sensor Learning
ALL Mode	1992-2017	Electric Powertrain/IMA(Integrated Motor Assist)		Special Function	HV Battery Diagnosis
ALL Mode	1992-2017	Honda Smart Key System		Read DTC	
ALL Mode	1992-2017	Honda Smart Key System		Clear fault memory	
ALL Mode	1992-2017	Honda Smart Key System		Read Data Stream	
ALL Mode	1992-2017	Honda Smart Key System		Check	
ALL Mode	1992-2017	Honda Smart Key System		History Data	
ALL Mode	1992-2017	Honda Smart Key System		System Information	
ALL Mode	1992-2017	Honda Smart Key System		Special Function	ADD a HONDA smart key
ALL Mode	1992-2017	Honda Smart Key System		Special Function	Rewrite HONDA smart keys
ALL Mode	1992-2017	Honda Smart Key System		Special Function	All HONDA smart keys lost
ALL Mode	1992-2017	Honda Smart Key System		Special Function	Replace HONDA smart key ECU
ALL Mode	1992-2017	Honda Smart Key System		Special Function	Replace KNOB IGNITION
ALL Mode	1992-2017	Honda Smart Key System		Customize	
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Read DTC	
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Clear fault memory	
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Read Data Stream	
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Actuation Test	Initiator Operation Check
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Actuation Test	Warning Indicators
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Actuation Test	TPMS Warning light
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Actuation Test	Tire air low indicator
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Actuation Test	LR tire air low indicator
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Actuation Test	RR tire air low indicator
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Actuation Test	LF tire air low indicator
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Actuation Test	RF tire air low indicator
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Actuation Test	

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Special Function	SENSOR ID LEARNING
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Special Function	Reprogramming for accessory tires
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Special Function	Reprogramming for standard tires
ALL Mode	1992-2017	TPMS(Tire Pressure Monitoring System)		Special Function	Threshold Data Check
ALL Mode	1992-2017	ACM(Active Control Engine Mount System)		Read DTC	
ALL Mode	1992-2017	ACM(Active Control Engine Mount System)		Clear fault memory	
ALL Mode	1992-2017	ACM(Active Control Engine Mount System)		Read Data Stream	
ALL Mode	1992-2017	ACM(Active Control Engine Mount System)		Read Freeze Frame	
ALL Mode	1992-2017	ACM(Active Control Engine Mount System)		Actuation Test	Front ACM solenoid
ALL Mode	1992-2017	ACM(Active Control Engine Mount System)		Actuation Test	Rear ACM solenoid
ALL Mode	1992-2017	ACM(Active Control Engine Mount System)		Actuation Test	Front and rear ACM solenoids
ALL Mode	1992-2017	EVPS(Electric Vacuum Pump System)		Read DTC	
ALL Mode	1992-2017	EVPS(Electric Vacuum Pump System)		Clear fault memory	
ALL Mode	1992-2017	EVPS(Electric Vacuum Pump System)		Read Data Stream	
ALL Mode	1992-2017	EVPS(Electric Vacuum Pump System)		Read Freeze Frame	
ALL Mode	1992-2017	EVPS(Electric Vacuum Pump System)		Actuation Test	Vacuum Line Condition Check 1
ALL Mode	1992-2017	EVPS(Electric Vacuum Pump System)		Actuation Test	Vacuum Line Condition Check 2
ALL Mode	1992-2017	VTM-4(Variable Torque Management 4WD)		Read DTC	
ALL Mode	1992-2017	VTM-4(Variable Torque Management 4WD)		Clear fault memory	
ALL Mode	1992-2017	VTM-4(Variable Torque Management 4WD)		Read Data Stream	
ALL Mode	1992-2017	VTM-4(Variable Torque Management 4WD)		Read Freeze Frame	
ALL Mode	1992-2017	VTM-4(Variable Torque Management 4WD)		Actuation Test	Initialized
ALL Mode	1992-2017	VTM-4(Variable Torque Management 4WD)		Actuation Test	Left clutch electromagnetic coil test
ALL Mode	1992-2017	VTM-4(Variable Torque Management 4WD)		Actuation Test	Right clutch electromagnetic coil test
ALL Mode	1992-2017	VTM-4(Variable Torque Management 4WD)		Read DTC	
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Clear fault memory	
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Read Data Stream	
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Read Freeze Frame	
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Actuation Test	Direct electromagnetic clutch Test
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Actuation Test	Clutch coil test

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Actuation Test	Shift Solenoid Test
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Actuation Test	Acceleration Device Test
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Actuation Test	Pressure Test
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Actuation Test	Shift solenoid valve current testing
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Actuation Test	Shift solenoid valve fuel pressure testing
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Actuation Test	Transmission system test
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Actuation Test	Clutch characteristics test
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Special Function	Differential torque
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Special Function	Steering angle sensor
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Special Function	Initialization
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Special Function	All sensor
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Special Function	YAW RATE/LATERAL acceleration sensor
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Special Function	Transmission drive correction
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Special Function	Transmission system correction
ALL Mode	1992-2017	SH-AWD(Super Handling-All Wheel Driving)		Special Function	Transmission oil life reset
ALL Mode	1992-2017	Immobilizer		Immobilizer info	
ALL Mode	1992-2017	Immobilizer		Keys	ADD 1 key
ALL Mode	1992-2017	Immobilizer		Keys	Rewrite keys
ALL Mode	1992-2017	Immobilizer		Keys	All keys lost
ALL Mode	1992-2017	Immobilizer		Replace imm unit	
ALL Mode	1992-2017	Immobilizer		Replace ECM/PCM	
ALL Mode	1992-2017	Immobilizer		REPLACE MPCS/MICU/IMOES	
ALL Mode	1992-2017	Immobilizer		Keyless Transmitter Registration	
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Read DTC	
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Clear fault memory	
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Read Data Stream	
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Actuation Test	THROTTLE opening angle
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Actuation Test	Brake booster 1
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Actuation Test	Brake booster 2
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Actuation Test	Brake booster 3
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Actuation Test	ACC Brake
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Actuation Test	CMBS Brake
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Actuation Test	Brake Light
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Actuation Test	Indicator Light
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Actuation Test	Information Display
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Actuation Test	Alarm Test
ALL Mode	1992-2017	ACC(Adaptive Cruise Control)		Special Function	RADAR AIMING
ALL Mode	1992-2017	E-DPS(Real Time AWD/AWD with Intelligent Control)		Read DTC	
ALL Mode	1992-2017	E-DPS(Real Time AWD/AWD with Intelligent Control)		Clear fault memory	
ALL Mode	1992-2017	E-DPS(Real Time AWD/AWD with Intelligent Control)		Read Data Stream	

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	E-DPS(Real Time AWD/AWD with Intelligent Control)		Actuation Test	Oil Pressure Control Test
ALL Mode	1992-2017	E-DPS(Real Time AWD/AWD with Intelligent Control)		Actuation Test	Solenoid Test
ALL Mode	1992-2017	E-DPS(Real Time AWD/AWD with Intelligent Control)		Special Function	E-DPS Control Module Replacement
ALL Mode	1992-2017	E-DPS(Real Time AWD/AWD with Intelligent Control)		Special Function	Longitudinal G Sensor Learning
ALL Mode	1992-2017	E-DPS(Real Time AWD/AWD with Intelligent Control)		Special Function	Air Bleeding
ALL Mode	1992-2017	EDLC(Electric Double-Layer Capacitor)		Read DTC	
ALL Mode	1992-2017	EDLC(Electric Double-Layer Capacitor)		Clear fault memory	
ALL Mode	1992-2017	EDLC(Electric Double-Layer Capacitor)		Read Data Stream	
ALL Mode	1992-2017	EDLC(Electric Double-Layer Capacitor)		Actuation Test	EDLC Module Discharge and Charge Test
ALL Mode	1992-2017	EDLC(Electric Double-Layer Capacitor)		Actuation Test	EDLC Module Discharge for Removal or Disposal
ALL Mode	1992-2017	EDLC(Electric Double-Layer Capacitor)		Actuation Test	EDLC Module Usage History Clear
ALL Mode	1992-2017	PAWS(Precision All Wheel Steer)		Read DTC	
ALL Mode	1992-2017	PAWS(Precision All Wheel Steer)		Clear fault memory	
ALL Mode	1992-2017	PAWS(Precision All Wheel Steer)		Read Data Stream	
ALL Mode	1992-2017	PAWS(Precision All Wheel Steer)		Actuation Test	ACTUATOR TEST
ALL Mode	1992-2017	PAWS(Precision All Wheel Steer)		Special Function	PAWS Unit Replacement
ALL Mode	1992-2017	ESB(Electric Servo Brake System)		Read DTC	
ALL Mode	1992-2017	ESB(Electric Servo Brake System)		Clear fault memory	
ALL Mode	1992-2017	ESB(Electric Servo Brake System)		Read Data Stream	
ALL Mode	1992-2017	ESB(Electric Servo Brake System)		Actuation Test	Forced non assist mode
ALL Mode	1992-2017	ESB(Electric Servo Brake System)		Actuation Test	Brake Light Relay Test
ALL Mode	1992-2017	ESB(Electric Servo Brake System)		Special Function	SENSOR 0 (ZERO) POSITION MEMORIZATION
ALL Mode	1992-2017	CAN GATEWAY		Read DTC	
ALL Mode	1992-2017	CAN GATEWAY		Clear fault memory	
ALL Mode	1992-2017	CAN GATEWAY		Actuation Test	F-CAN Bus Connected Unit Check
ALL Mode	1992-2017	Hydraulic Booster		Read DTC	
ALL Mode	1992-2017	Hydraulic Booster		Clear fault memory	
ALL Mode	1992-2017	Hydraulic Booster		Read Data Stream	
ALL Mode	1992-2017	Hydraulic Booster		Actuation Test	ACCUMULATING PRESSURE TEST
ALL Mode	1992-2017	Hydraulic Booster		Actuation Test	INCREASING MASTER CYLINDER PRESSURE
ALL Mode	1992-2017	Hydraulic Booster		Actuation Test	REGENERATIVE BRAKE
ALL Mode	1992-2017	Hydraulic Booster		Actuation Test	Hydraulic Booster CAS
ALL Mode	1992-2017	Hydraulic Booster		Actuation Test	BUZZER TEST
ALL Mode	1992-2017	Hydraulic Booster		Special Function	Memorizing 0[zero] Position
ALL Mode	1992-2017	I-SHIFT		Read DTC	
ALL Mode	1992-2017	I-SHIFT		Clear fault memory	
ALL Mode	1992-2017	I-SHIFT		Read Data Stream	
ALL Mode	1992-2017	I-SHIFT		Actuation Test	Engage Gear
ALL Mode	1992-2017	I-SHIFT		Actuation Test	Clutch Actuator Full Stroke Operation Test
ALL Mode	1992-2017	I-SHIFT		Actuation Test	Gear Box Self Test
ALL Mode	1992-2017	I-SHIFT		Special Function	Clutch Fluid Filling

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	I-SHIFT		Special Function	Clutch Fluid Air Bleeding
ALL Mode	1992-2017	I-SHIFT		Special Function	Static Mode Learning
ALL Mode	1992-2017	I-SHIFT		Special Function	Dynamic Mode Learning
ALL Mode	1992-2017	I-SHIFT		Special Function	Shift Motor Calibration
ALL Mode	1992-2017	CMBS(Collision Mitigation Brake System)		Read DTC	
ALL Mode	1992-2017	CMBS(Collision Mitigation Brake System)		Clear fault memory	
ALL Mode	1992-2017	CMBS(Collision Mitigation Brake System)		Read Data Stream	
ALL Mode	1992-2017	CMBS(Collision Mitigation Brake System)		Read Freeze Frame	
ALL Mode	1992-2017	CMBS(Collision Mitigation Brake System)		Actuation Test	Radar aiming
ALL Mode	1992-2017	CMBS(Collision Mitigation Brake System)		Actuation Test	CMBS brake
ALL Mode	1992-2017	LKAS Camera ECU		Read DTC	
ALL Mode	1992-2017	LKAS Camera ECU		Clear fault memory	
ALL Mode	1992-2017	LKAS Camera ECU		Read Data Stream	
ALL Mode	1992-2017	LKAS Camera ECU		Read Freeze Frame	
ALL Mode	1992-2017	LKAS Camera ECU		Actuation Test	Static camera aiming
ALL Mode	1992-2017	LKAS Camera ECU		Actuation Test	DYNAMIC camera aiming
ALL Mode	1992-2017	LKAS Camera ECU		Actuation Test	Video output
ALL Mode	1992-2017	LKAS Control ECU		Read DTC	
ALL Mode	1992-2017	LKAS Control ECU		Clear fault memory	
ALL Mode	1992-2017	LKAS Control ECU		Read Data Stream	
ALL Mode	1992-2017	LKAS Control ECU		Read Freeze Frame	
ALL Mode	1992-2017	LKAS Control ECU		Special Function	STEERING REWRITE
ALL Mode	1992-2017	LKAS Control ECU		Special Function	EPS Dumping
ALL Mode	1992-2017	LKAS Control ECU		Special Function	CUSTOMIZE
ALL Mode	1992-2017	DBW(Drive By Wire)		Read DTC	
ALL Mode	1992-2017	DBW(Drive By Wire)		Clear fault memory	
ALL Mode	1992-2017	DBW(Drive By Wire)		Read Data Stream	
ALL Mode	1992-2017	DBW(Drive By Wire)		ECM/PCM reset	
ALL Mode	1992-2017	DBW(Drive By Wire)		Actuation Test	THROTTLE test
ALL Mode	1992-2017	DBW(Drive By Wire)		Actuation Test	Idle Speed Adjustment
ALL Mode	1992-2017	4WS(Four Wheel Steering)		Read DTC	
ALL Mode	1992-2017	4WS(Four Wheel Steering)		Clear fault memory	
ALL Mode	1992-2017	4WS(Four Wheel Steering)		Read Data Stream	
ALL Mode	1992-2017	4WS(Four Wheel Steering)		Read Freeze Frame	
ALL Mode	1992-2017	4WS(Four Wheel Steering)		Special Function	Neutral rewriting
ALL Mode	1992-2017	4WS(Four Wheel Steering)		Special Function	Check
ALL Mode	1992-2017	HONDA Smart Parking		Read DTC	
ALL Mode	1992-2017	HONDA Smart Parking		Clear fault memory	
ALL Mode	1992-2017	HONDA Smart Parking		Read Data Stream	
ALL Mode	1992-2017	HONDA Smart Parking		Read Freeze Frame	
ALL Mode	1992-2017	HONDA Smart Parking		Actuation Test	Reset PA unit
ALL Mode	1992-2017	HONDA Smart Parking		Actuation Test	Voice guide output test
ALL Mode	1992-2017	Night Vision		Read DTC	
ALL Mode	1992-2017	Night Vision		Clear fault memory	
ALL Mode	1992-2017	Night Vision		Read Data Stream	
ALL Mode	1992-2017	Night Vision		Actuation Test	Open HUD mirror
ALL Mode	1992-2017	Night Vision		Actuation Test	Display HUD message
ALL Mode	1992-2017	Night Vision		Actuation Test	Camera test
ALL Mode	1992-2017	Night Vision		Actuation Test	Heater test
ALL Mode	1992-2017	Night Vision		Special Function	Camera aiming
ALL Mode	1992-2017	Night Vision		Special Function	Transfer camera parameter
ALL Mode	1992-2017	Active Damper System		Read DTC	
ALL Mode	1992-2017	Active Damper System		Clear fault memory	
ALL Mode	1992-2017	Active Damper System		Read Data Stream	

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	Active Damper System		Read Freeze Frame	
ALL Mode	1992-2017	Active Damper System		Actuation Test	Damper force operation test
ALL Mode	1992-2017	Active Damper System		Special Function	Damper Stroke Calibration
ALL Mode	1992-2017	ATTS(Active Torque Transfer System)		Read DTC	
ALL Mode	1992-2017	ATTS(Active Torque Transfer System)		Clear fault memory	
ALL Mode	1992-2017	ATTS(Active Torque Transfer System)		Read Data Stream	
ALL Mode	1992-2017	ATTS(Active Torque Transfer System)		Actuation Test	ATTS test short time mode
ALL Mode	1992-2017	ATTS(Active Torque Transfer System)		Special Function	Steering angle sensor
ALL Mode	1992-2017	ATTS(Active Torque Transfer System)		Special Function	YAW RATE/LATERAL acceleration sensor
ALL Mode	1992-2017	ATTS(Active Torque Transfer System)		Special Function	All sensor
ALL Mode	1992-2017	EPB(Electric Parking Brake)		Read DTC	
ALL Mode	1992-2017	EPB(Electric Parking Brake)		Clear fault memory	
ALL Mode	1992-2017	EPB(Electric Parking Brake)		Read Data Stream	
ALL Mode	1992-2017	EPB(Electric Parking Brake)		Read Freeze Frame	
ALL Mode	1992-2017	EPB(Electric Parking Brake)		Special Function	Sensor calibration
ALL Mode	1992-2017	EPB(Electric Parking Brake)		Special Function	Brake Pad Maintenance Mode
ALL Mode	1992-2017	POPUP HOOD		Read DTC	
ALL Mode	1992-2017	POPUP HOOD		Clear fault memory	
ALL Mode	1992-2017	POPUP HOOD		Read Data Stream	
ALL Mode	1992-2017	POPUP HOOD		Actuation Test	Warning display force activation
ALL Mode	1992-2017	POPUP HOOD		Actuation Test	Vehicle level position calibration
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Read DTC	
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Clear fault memory	
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Read Data Stream	
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Actuation Test	Monitor Output
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Actuation Test	LED Light
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Actuation Test	Front Camera Image
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Actuation Test	Left Side Camera Image
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Actuation Test	Right Side Camera Image
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Actuation Test	Rear Camera Image
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Actuation Test	MVC Function
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Special Function	Auto MULTI camera aiming
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Special Function	Aiming data transfer
ALL Mode	1992-2017	VCS(Multiple-View Camera System)		Special Function	Customization
ALL Mode	1992-2017	AC		Read DTC	
ALL Mode	1992-2017	AC		Clear fault memory	
ALL Mode	1992-2017	AC		Read Data Stream	
ALL Mode	1992-2017	AC		Actuation Test	Climate Control Unit Self Test
ALL Mode	1992-2017	Gauge System		Read DTC	
ALL Mode	1992-2017	Gauge System		Clear fault memory	

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	Gauge System		Read Data Stream	
ALL Mode	1992-2017	Gauge System		Actuation Test	Self-diagnostic Function
ALL Mode	1992-2017	Gauge System		Special Function	Instrument control module replacement
ALL Mode	1992-2017	Gauge System		Special Function	Maintenance Minder(USA)
ALL Mode	1992-2017	Gauge System		Special Function	Maintenance Minder(Europe)
ALL Mode	1992-2017	Gauge System		Special Function	CVT Fluid Replacement(General)
ALL Mode	1992-2017	Gauge System		Special Function	Customize Reset
ALL Mode	1992-2017	One-push start	PCU	Read DTC	
ALL Mode	1992-2017	One-push start	PCU	Clear fault memory	
ALL Mode	1992-2017	One-push start	PCU	Read Data Stream	
ALL Mode	1992-2017	One-push start	Actuation Test	Switch Illumination	
ALL Mode	1992-2017	One-push start	Actuation Test	PCU Key Out	
ALL Mode	1992-2017	One-push start	Actuation Test	LED Indicator	
ALL Mode	1992-2017	One-push start	Replace SLOT Unit	Read DTC	
ALL Mode	1992-2017	One-push start	Replace SLOT Unit	Clear fault memory	
ALL Mode	1992-2017	One-push start	Replace SLOT Unit	Read Data Stream	
ALL Mode	1992-2017	One-push start	Replace SLOT Unit	Self Check	
ALL Mode	1992-2017	One-push start	Replace SLOT Unit	System Information	
ALL Mode	1992-2017	One-push start	Replace SMART Unit	Read DTC	
ALL Mode	1992-2017	One-push start	Replace SMART Unit	Clear fault memory	
ALL Mode	1992-2017	One-push start	Replace SMART Unit	Read Data Stream	
ALL Mode	1992-2017	One-push start	Replace SMART Unit	Check	
ALL Mode	1992-2017	One-push start	Replace SMART Unit	History Data	
ALL Mode	1992-2017	One-push start	Replace SMART Unit	System Information	
ALL Mode	1992-2017	One-push start	Replace SMART Unit	Special Function	ADD a HONDA smart key
ALL Mode	1992-2017	One-push start	Replace SMART Unit	Special Function	Rewrite HONDA smart keys
ALL Mode	1992-2017	One-push start	Replace SMART Unit	Special Function	All HONDA smart keys lost
ALL Mode	1992-2017	One-push start	Replace SMART Unit	Special Function	Replace HONDA smart key ECU
ALL Mode	1992-2017	One-push start	Replace SMART Unit	Special Function	Replace KNOB IGNITION
ALL Mode	1992-2017	One-push start	Registration	Keys	ADD 1 key
ALL Mode	1992-2017	One-push start	Registration	Keys	Rewrite keys
ALL Mode	1992-2017	One-push start	Registration	Keys	All keys lost
ALL Mode	1992-2017	One-push start	Registration	Replace SLOT Unit	
ALL Mode	1992-2017	One-push start	Registration	Replace SMART Unit	
ALL Mode	1992-2017	One-push start	Registration	Replace ECM/PCM	
ALL Mode	1992-2017	One-push start	Registration	Replace MICU	
ALL Mode	1992-2017	Remote Starter		System Check	
ALL Mode	1992-2017	Remote Starter		History Data	Engine (Doesn't) Run History
ALL Mode	1992-2017	Remote Starter		History Data	Clear History Data-Engine (Doesn't) Run History
ALL Mode	1992-2017	Remote Starter		History Data	Engine Stop History
ALL Mode	1992-2017	Remote Starter		History Data	Clear History Data-Engine Stop History
ALL Mode	1992-2017	Remote Starter		History Data	Engine Start Count History
ALL Mode	1992-2017	Remote Starter		Registration	Register Remote Control Engine Starter Unit
ALL Mode	1992-2017	Remote Starter		Registration	Register New Transmitter
ALL Mode	1992-2017	Remote Starter		Customization	Parking Brake
ALL Mode	1992-2017	Remote Starter		Customization	Idling Time
ALL Mode	1992-2017	Remote Starter		Special Function	SP Replace ECM/PCM
ALL Mode	1992-2017	SVT		Read DTC	
ALL Mode	1992-2017	SVT		Clear fault memory	
ALL Mode	1992-2017	SVT		Read Data Stream	
ALL Mode	1992-2017	SVT		Actuation Test	Function test
ALL Mode	1992-2017	SVT		Special Function	Set Maintenance Mode
ALL Mode	1992-2017	SVT		Special Function	Reset Maintenance Mode
ALL Mode	1992-2017	SVT		Special Function	Replace Internal Battery
ALL Mode	1992-2017	SVT		Special Function	Change Mode
ALL Mode	1992-2017	SVT		Special Function	Display Contract Data

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	SVT		Special Function	Activation
ALL Mode	1992-2017	SVT		Special Function	Deactivation
ALL Mode	1992-2017	Blind Spot Information		Read DTC	
ALL Mode	1992-2017	Blind Spot Information		Clear fault memory	
ALL Mode	1992-2017	Blind Spot Information		Read Data Stream	
ALL Mode	1992-2017	Blind Spot Information		Actuation Test	BSI Left Side Alert Indicator ON
ALL Mode	1992-2017	Blind Spot Information		Actuation Test	Flash BSI Left Side Alert Indicator
ALL Mode	1992-2017	Blind Spot Information		Actuation Test	BSI Right Side Alert Indicator ON
ALL Mode	1992-2017	Blind Spot Information		Actuation Test	Flash BSI Right Side Alert Indicator
ALL Mode	1992-2017	Blind Spot Information		Actuation Test	BSI Indicator ON
ALL Mode	1992-2017	Blind Spot Information		Actuation Test	Right Side Blind Spot Not Available Message
ALL Mode	1992-2017	Blind Spot Information		Actuation Test	Left Side Blind Spot Not Available Message
ALL Mode	1992-2017	Blind Spot Information		Actuation Test	BSI On Message
ALL Mode	1992-2017	Blind Spot Information		Actuation Test	Check Blind Spot System Message
ALL Mode	1992-2017	Blind Spot Information		Actuation Test	BSI Buzzer
ALL Mode	1992-2017	Blind Spot Information		Actuation Test	BSI Indicator OFF
ALL Mode	1992-2017	Blind Spot Information		Special Function	Left Side Radar
ALL Mode	1992-2017	Blind Spot Information		Special Function	Right Side Radar
ALL Mode	1992-2017	Blind Spot Information		Special Function	Left BSI Radar Operation Check
ALL Mode	1992-2017	Blind Spot Information		Special Function	Right BSI Radar Operation Check
ALL Mode	1992-2017	City-Brake Active system		Read DTC	
ALL Mode	1992-2017	City-Brake Active system		Clear fault memory	
ALL Mode	1992-2017	City-Brake Active system		Read Data Stream	
ALL Mode	1992-2017	City-Brake Active system		History Data	
ALL Mode	1992-2017	City-Brake Active system		Special Function	Radar Correction for Windshield
ALL Mode	1992-2017	City-Brake Active system		Special Function	City-Brake Active system drive
ALL Mode	1992-2017	FCW/LDW		Read DTC	
ALL Mode	1992-2017	FCW/LDW		Clear fault memory	
ALL Mode	1992-2017	FCW/LDW		Read Data Stream	
ALL Mode	1992-2017	FCW/LDW		Actuation Test	FCW Drive
ALL Mode	1992-2017	FCW/LDW		Actuation Test	LDW Drive
ALL Mode	1992-2017	FCW/LDW		Actuation Test	Indicator Drive
ALL Mode	1992-2017	FCW/LDW		Special Function	High Beam Support System
ALL Mode	1992-2017	FCW/LDW		Special Function	Static Camera Aiming
ALL Mode	1992-2017	FCW/LDW		Special Function	Dynamic Camera Aiming
ALL Mode	1992-2017	HUD		Read DTC	
ALL Mode	1992-2017	HUD		Clear fault memory	
ALL Mode	1992-2017	HUD		Read Data Stream	
ALL Mode	1992-2017	HUD		Actuation Test	
ALL Mode	1992-2017	HUD		Special Function	Rotate Counter Clockwise
ALL Mode	1992-2017	HUD		Special Function	Rotate Clockwise
ALL Mode	1992-2017	HUD		Special Function	Set To Default
ALL Mode	1992-2017	ISC(Intake Sound Creator)		Read DTC	
ALL Mode	1992-2017	ISC(Intake Sound Creator)		Clear fault memory	
ALL Mode	1992-2017	ISC(Intake Sound Creator)		Read Data Stream	
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Read DTC	
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Clear fault memory	
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Read Data Stream	
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Actuation Test	ACC Brake
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Actuation Test	CMBS Brake
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Actuation Test	Brake Light

model	year	system	subitem	function	subfunction
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Actuation Test	Indicator Light
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Actuation Test	Information Display
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Actuation Test	Alarm Test
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Special Function	Radar Aiming
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Special Function	Static Camera Aiming
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Special Function	Dynamic Camera Aiming
ALL Mode	1992-2017	IDAS(Integrated Driver Support System)		Special Function	LKAS Suspend Beep
ALL Mode	1992-2017	Parking Sensor		Read DTC	
ALL Mode	1992-2017	Parking Sensor		Clear fault memory	
ALL Mode	1992-2017	Parking Sensor		Read Data Stream	
ALL Mode	1992-2017	FCVSCM		Read DTC	
ALL Mode	1992-2017	FCVSCM		Clear fault memory	
ALL Mode	1992-2017	FCVSCM		Read Data Stream	
ALL Mode	1992-2017	FCVSCM		Actuation Test	High-Voltage Battery Charge Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	N2 Purge Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	Stack Discharge Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	Anode Leak Check Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	H2 Line Pressure Relief Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	Tank Vent Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	Ion Filter Operating Time Check/Set Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	Bleeding Drive Train Coolant Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	Stack Cross Leak Check Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	High-Voltage Battery Fan Test Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	H2 Sensor Installation Validation Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	Parking Actuator Check Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	Stack And Tank H2 Sensor Operation Test Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	H2 Sensor Response Check Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	Exhaust H2 Sensor Operation Test Mode
ALL Mode	1992-2017	FCVSCM		Actuation Test	Storing/Shipping Mode
ALL Mode	1992-2017	FCVSCM		Special Function	ISU Reset
ALL Mode	1992-2017	FCVSCM		Special Function	Replace ISU
ALL Mode	1992-2017	FC		Read DTC	
ALL Mode	1992-2017	FC		Clear fault memory	
ALL Mode	1992-2017	FC		Read Data Stream	