

Hyundai Diagnostics List (Note:For reference only)

model	year	area	system	function	subfunction
Accent(HC)	2018	General	ECM(Engine Control Module)	Version Information	
Accent(HC)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Accent(HC)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(HC)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Accent(HC)	2018	General	ECM(Engine Control Module)	Actuation Test	
Accent(HC)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent(HC)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent(HC)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(HC)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(HC)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(HC)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(HC)	2018	General	TCM(Transmission Control Module)	Version Information	
Accent(HC)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(HC)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(HC)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(HC)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Accent(HC)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Accent(HC)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(HC)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Accent(HC)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Accent(HC)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(HC)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(HC)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(HC)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(HC)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)

model	year	area	system	function	subfunction
Accent(HC)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(HC)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(HC)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Accent(HC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	Reset(ESP/ESC Only)
Accent(HC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(HC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(HC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(HC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Accent(HC)	2018	General	AC(Air Conditioning)	Version Information	
Accent(HC)	2018	General	AC(Air Conditioning)	Read Fault Code	
Accent(HC)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(HC)	2018	General	AC(Air Conditioning)	Read Data Stream	
Accent(HC)	2018	General	AC(Air Conditioning)	Actuation Test	
Accent(HC)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Accent(HC)	2018	General	BCM(Body Control Module)	Version Information	
Accent(HC)	2018	General	BCM(Body Control Module)	Read Fault Code	
Accent(HC)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Accent(HC)	2018	General	BCM(Body Control Module)	Read Data Stream	
Accent(HC)	2018	General	BCM(Body Control Module)	Actuation Test	
Accent(HC)	2018	General	BCM(Body Control Module)	Special Function	User Option
Accent(HC)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Accent(HC)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Accent(HC)	2018	General	EPS(Electronic Power Steering)	Version Information	
Accent(HC)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(HC)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(HC)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(HC)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Accent(HC)	2018	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Accent(HC)	2018	General	Smart Key Unit	Version Information	
Accent(HC)	2018	General	Smart Key Unit	Read Fault Code	
Accent(HC)	2018	General	Smart Key Unit	Clear Fault Memory	
Accent(HC)	2018	General	Smart Key Unit	Read Data Stream	
Accent(HC)	2018	General	Smart Key Unit	Actuation Test	
Accent(HC)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent(HC)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent(HC)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Accent(HC)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Accent(HC)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Accent(HC)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent(HC)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent(HC)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Accent(HC)	2018	General	Smart Key Unit	Special Function	EcsL Enable Output Check
Accent(HC)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(HC)	2018	General	Parking Guide System	Version Information	
Accent(HC)	2018	General	Parking Guide System	Read Fault Code	
Accent(HC)	2018	General	Parking Guide System	Clear Fault Memory	
Accent(HC)	2018	General	Parking Guide System	Read Data Stream	
Accent(HC)	2018	General	IMM(Immobilizer)	Read Fault Code	
Accent(HC)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Accent(HC)	2018	General	IMM(Immobilizer)	Read Data Stream	
Accent(HC)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(HC)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(HC)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(HC)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Accent(HC)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(HC)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Accent(HCI)	2018	General	ECM(Engine Control Module)	Version Information	
Accent(HCI)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Accent(HCI)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(HCI)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Accent(HCI)	2018	General	ECM(Engine Control Module)	Actuation Test	
Accent(HCI)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent(HCI)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent(HCI)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(HCI)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(HCI)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(HCI)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(HCI)	2018	General	TCM(Transmission Control Module)	Version Information	
Accent(HCI)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(HCI)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(HCI)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(HCI)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Accent(HCI)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Accent(HCI)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(HCI)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Accent(HCI)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Accent(HCI)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(HCI)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(HCI)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(HCI)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(HCI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(HCI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(HCI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(HCI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(HCI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Accent(HCI)	2018	General	AC(Air Conditioning)	Version Information	
Accent(HCI)	2018	General	AC(Air Conditioning)	Read Fault Code	
Accent(HCI)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(HCI)	2018	General	AC(Air Conditioning)	Read Data Stream	
Accent(HCI)	2018	General	AC(Air Conditioning)	Actuation Test	
Accent(HCI)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Accent(HCI)	2018	General	BCM(Body Control Module)	Version Information	
Accent(HCI)	2018	General	BCM(Body Control Module)	Read Fault Code	
Accent(HCI)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Accent(HCI)	2018	General	BCM(Body Control Module)	Read Data Stream	
Accent(HCI)	2018	General	BCM(Body Control Module)	Actuation Test	
Accent(HCI)	2018	General	BCM(Body Control Module)	Special Function	User Option
Accent(HCI)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Accent(HCI)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Accent(HCI)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(HCI)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(HCI)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(HCI)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(HCI)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Variant Coding
Accent(HCI)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Tire Pressure Save(Set)
Accent(HCI)	2018	General	EPS(Electronic Power Steering)	Version Information	
Accent(HCI)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(HCI)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(HCI)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(HCI)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(HCI)	2018	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Accent(HCI)	2018	General	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
Accent(HCI)	2018	General	Smart Key Unit	Read Fault Code	
Accent(HCI)	2018	General	Smart Key Unit	Clear Fault Memory	
Accent(HCI)	2018	General	Smart Key Unit	Read Data Stream	
Accent(HCI)	2018	General	Smart Key Unit	Actuation Test	
Accent(HCI)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent(HCI)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent(HCI)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Accent(HCI)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Accent(HCI)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Accent(HCI)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent(HCI)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent(HCI)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Accent(HCI)	2018	General	Smart Key Unit	Special Function	EcsL Enable Output Check
Accent(HCI)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(HCI)	2018	General	Parking Guide System	Version Information	
Accent(HCI)	2018	General	Parking Guide System	Read Fault Code	
Accent(HCI)	2018	General	Parking Guide System	Clear Fault Memory	
Accent(HCI)	2018	General	Parking Guide System	Read Data Stream	
Accent(HCI)	2018	General	IMM(Immobilizer)	Read Fault Code	
Accent(HCI)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Accent(HCI)	2018	General	IMM(Immobilizer)	Read Data Stream	
Accent(HCI)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(HCI)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(HCI)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(HCI)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Accent(HCI)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Accent(HCI)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Accent(HCI)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(HCI)	2018	General	ECM(Engine Control Module)	Special Function	Injector Specific Data

model	year	area	system	function	subfunction
Accent(HCI)	2018	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Accent(HCI)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Accent(HCI)	2017	General	ECM(Engine Control Module)	Version Information	
Accent(HCI)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Accent(HCI)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(HCI)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Accent(HCI)	2017	General	ECM(Engine Control Module)	Actuation Test	
Accent(HCI)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent(HCI)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent(HCI)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(HCI)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(HCI)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(HCI)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(HCI)	2017	General	TCM(Transmission Control Module)	Version Information	
Accent(HCI)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(HCI)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(HCI)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(HCI)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Accent(HCI)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Accent(HCI)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(HCI)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Accent(HCI)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Accent(HCI)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(HCI)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(HCI)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(HCI)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(HCI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(HCI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(HCI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(HCI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(HCI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Accent(HCI)	2017	General	AC(Air Conditioning)	Version Information	
Accent(HCI)	2017	General	AC(Air Conditioning)	Read Fault Code	
Accent(HCI)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(HCI)	2017	General	AC(Air Conditioning)	Read Data Stream	
Accent(HCI)	2017	General	AC(Air Conditioning)	Actuation Test	
Accent(HCI)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Accent(HCI)	2017	General	BCM(Body Control Module)	Version Information	
Accent(HCI)	2017	General	BCM(Body Control Module)	Read Fault Code	
Accent(HCI)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Accent(HCI)	2017	General	BCM(Body Control Module)	Read Data Stream	
Accent(HCI)	2017	General	BCM(Body Control Module)	Actuation Test	
Accent(HCI)	2017	General	BCM(Body Control Module)	Special Function	User Option
Accent(HCI)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Accent(HCI)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Accent(HCI)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(HCI)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(HCI)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(HCI)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(HCI)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Variant Coding
Accent(HCI)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Tire Pressure Save(Set)
Accent(HCI)	2017	General	EPS(Electronic Power Steering)	Version Information	
Accent(HCI)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(HCI)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(HCI)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(HCI)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(HCI)	2017	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration

model	year	area	system	function	subfunction
Accent(HCI)	2017	General	Smart Key Unit	Version Information	
Accent(HCI)	2017	General	Smart Key Unit	Read Fault Code	
Accent(HCI)	2017	General	Smart Key Unit	Clear Fault Memory	
Accent(HCI)	2017	General	Smart Key Unit	Read Data Stream	
Accent(HCI)	2017	General	Smart Key Unit	Actuation Test	
Accent(HCI)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent(HCI)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent(HCI)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Accent(HCI)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Accent(HCI)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Accent(HCI)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent(HCI)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent(HCI)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Accent(HCI)	2017	General	Smart Key Unit	Special Function	EcsL Enable Output Check
Accent(HCI)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(HCI)	2017	General	Parking Guide System	Version Information	
Accent(HCI)	2017	General	Parking Guide System	Read Fault Code	
Accent(HCI)	2017	General	Parking Guide System	Clear Fault Memory	
Accent(HCI)	2017	General	Parking Guide System	Read Data Stream	
Accent(HCI)	2017	General	IMM(Immobilizer)	Read Fault Code	
Accent(HCI)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Accent(HCI)	2017	General	IMM(Immobilizer)	Read Data Stream	
Accent(HCI)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(HCI)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(HCI)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(HCI)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Accent(HCI)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Accent(HCI)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Accent(HCI)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Accent(HCI)	2017	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Accent(HCI)	2017	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Accent(HCI)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Accent(LC)	2007	General	ECM(Engine Control Module)	Version Information	
Accent(LC)	2007	General	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2007	General	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(LC)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2007	General	ECM(Engine Control Module)	Actuation Test	
Accent(LC)	2007	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2007	General	ABS(Anti-lock Braking System)	Version Information	
Accent(LC)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(LC)	2007	General	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2007	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(LC)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Accent(LC)	2007	General	IMM(Immobilizer)	Special Function	Teaching
Accent(LC)	2007	General	Transmitter Code Saving	Special Function	Code Saving
Accent(LC)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(LC)	2006	General	ECM(Engine Control Module)	Version Information	
Accent(LC)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(LC)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2006	General	ECM(Engine Control Module)	Actuation Test	
Accent(LC)	2006	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Accent(LC)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(LC)	2006	General	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2006	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Accent(LC)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Accent(LC)	2006	General	IMM(Immobilizer)	Special Function	Teaching
Accent(LC)	2006	General	Transmitter Code Saving	Special Function	Code Saving
Accent(LC)	2006	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(LC)	2005	General	ECM(Engine Control Module)	Version Information	
Accent(LC)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(LC)	2005	General	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2005	General	ECM(Engine Control Module)	Actuation Test	
Accent(LC)	2005	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Accent(LC)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(LC)	2005	General	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2005	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(LC)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Accent(LC)	2005	General	IMM(Immobilizer)	Special Function	Teaching
Accent(LC)	2005	General	Transmitter Code Saving	Special Function	Code Saving
Accent(LC)	2005	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(LC)	2004	General	ECM(Engine Control Module)	Version Information	
Accent(LC)	2004	General	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(LC)	2004	General	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2004	General	ECM(Engine Control Module)	Actuation Test	
Accent(LC)	2004	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2004	General	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Accent(LC)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(LC)	2004	General	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2004	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(LC)	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Accent(LC)	2004	General	IMM(Immobilizer)	Special Function	Teaching
Accent(LC)	2004	General	Transmitter Code Saving	Special Function	Code Saving
Accent(LC)	2004	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(LC)	2003	General	ECM(Engine Control Module)	Version Information	
Accent(LC)	2003	General	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(LC)	2003	General	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2003	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Accent(LC)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(LC)	2003	General	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2003	General	IMM(Immobilizer)	Special Function	password Teaching/Changing
Accent(LC)	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(LC)	2003	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Accent(LC)	2003	General	Transmitter Code Saving	Special Function	Code Saving
Accent(LC)	2003	General	ECM(Engine Control Module)	Actuation Test	
Accent(LC)	2003	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(LC)	2002	General	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2002	General	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2002	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(LC)	2002	General	ECM(Engine Control Module)	Version Information	
Accent(LC)	2002	General	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2002	General	TCM(Transmission Control Module)	Version Information	
Accent(LC)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2002	General	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2002	General	ABS(Anti-lock Braking System)	Version Information	
Accent(LC)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2002	General	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2002	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2002	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(LC)	2002	General	IMM(Immobilizer)	Special Function	Password
Accent(LC)	2002	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Accent(LC)	2002	General	IMM(Immobilizer)	Special Function	Teaching
Accent(LC)	2002	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Accent(LC)	2002	General	ECM(Engine Control Module)	Actuation Test	
Accent(LC)	2001	General	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2001	General	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2001	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(LC)	2001	General	ECM(Engine Control Module)	Version Information	
Accent(LC)	2001	General	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2001	General	TCM(Transmission Control Module)	Version Information	
Accent(LC)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2001	General	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2001	General	ABS(Anti-lock Braking System)	Version Information	
Accent(LC)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2001	General	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2001	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2001	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(LC)	2001	General	IMM(Immobilizer)	Special Function	Password
Accent(LC)	2001	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Accent(LC)	2001	General	IMM(Immobilizer)	Special Function	Teaching
Accent(LC)	2001	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2001	General	ECM(Engine Control Module)	Actuation Test	
Accent(LC)	2000	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Accent(LC)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2000	General	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2000	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(LC)	2000	General	ECM(Engine Control Module)	Version Information	
Accent(LC)	2000	General	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2000	General	TCM(Transmission Control Module)	Version Information	
Accent(LC)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2000	General	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2000	General	ABS(Anti-lock Braking System)	Version Information	
Accent(LC)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2000	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2000	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2000	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2000	General	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2000	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2000	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(LC)	2000	General	IMM(Immobilizer)	Special Function	Password
Accent(LC)	2000	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Accent(LC)	2000	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2000	General	ECM(Engine Control Module)	Actuation Test	
Accent(MC)	2011	General	ECM(Engine Control Module)	Version Information	
Accent(MC)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(MC)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Accent(MC)	2011	General	ECM(Engine Control Module)	Actuation Test	
Accent(MC)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(MC)	2011	General	TCM(Transmission Control Module)	Version Information	
Accent(MC)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2011	General	ABS(Anti-lock Braking System)	Version Information	
Accent(MC)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(MC)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(MC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(MC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2011	General	AC(Air Conditioning)	Version Information	
Accent(MC)	2011	General	AC(Air Conditioning)	Read Fault Code	
Accent(MC)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2011	General	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2011	General	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2011	General	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(MC)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(MC)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(MC)	2011	General	IMM(Immobilizer)	Read Data Stream	
Accent(MC)	2011	General	IMM(Immobilizer)	Special Function	Password
Accent(MC)	2011	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Accent(MC)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(MC)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2011	General	Transmitter Code Saving	Special Function	Code Saving
Accent(MC)	2011	General	ECM(Engine Control Module)	Read FreezeData	
Accent(MC)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Accent(MC)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(MC)	2010	General	ECM(Engine Control Module)	Version Information	
Accent(MC)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(MC)	2010	General	ECM(Engine Control Module)	Read Data Stream	
Accent(MC)	2010	General	ECM(Engine Control Module)	Actuation Test	
Accent(MC)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(MC)	2010	General	TCM(Transmission Control Module)	Version Information	
Accent(MC)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2010	General	ABS(Anti-lock Braking System)	Version Information	
Accent(MC)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Accent(MC)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(MC)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(MC)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2010	General	AC(Air Conditioning)	Version Information	
Accent(MC)	2010	General	AC(Air Conditioning)	Read Fault Code	
Accent(MC)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2010	General	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2010	General	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2010	General	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(MC)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(MC)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(MC)	2010	General	IMM(Immobilizer)	Read Data Stream	
Accent(MC)	2010	General	IMM(Immobilizer)	Special Function	Password
Accent(MC)	2010	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Accent(MC)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(MC)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2010	General	Transmitter Code Saving	Special Function	Code Saving
Accent(MC)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Accent(MC)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Accent(MC)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(MC)	2009	General	ECM(Engine Control Module)	Version Information	
Accent(MC)	2009	General	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(MC)	2009	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(MC)	2009	General	ECM(Engine Control Module)	Actuation Test	
Accent(MC)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(MC)	2009	General	TCM(Transmission Control Module)	Version Information	
Accent(MC)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2009	General	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2009	General	ABS(Anti-lock Braking System)	Version Information	
Accent(MC)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(MC)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(MC)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(MC)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2009	General	AC(Air Conditioning)	Version Information	
Accent(MC)	2009	General	AC(Air Conditioning)	Read Fault Code	
Accent(MC)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2009	General	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2009	General	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2009	General	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(MC)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(MC)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(MC)	2009	General	IMM(Immobilizer)	Read Data Stream	
Accent(MC)	2009	General	IMM(Immobilizer)	Special Function	Password
Accent(MC)	2009	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Accent(MC)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(MC)	2009	General	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2009	General	Transmitter Code Saving	Special Function	Code Saving
Accent(MC)	2009	General	ECM(Engine Control Module)	Read FreezeData	
Accent(MC)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Accent(MC)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(MC)	2008	General	ECM(Engine Control Module)	Version Information	
Accent(MC)	2008	General	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(MC)	2008	General	ECM(Engine Control Module)	Read Data Stream	
Accent(MC)	2008	General	ECM(Engine Control Module)	Actuation Test	
Accent(MC)	2008	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(MC)	2008	General	TCM(Transmission Control Module)	Version Information	
Accent(MC)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2008	General	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2008	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2008	General	ABS(Anti-lock Braking System)	Version Information	
Accent(MC)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(MC)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Accent(MC)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(MC)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2008	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2008	General	AC(Air Conditioning)	Version Information	
Accent(MC)	2008	General	AC(Air Conditioning)	Read Fault Code	
Accent(MC)	2008	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2008	General	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2008	General	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2008	General	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2008	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(MC)	2008	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(MC)	2008	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(MC)	2008	General	IMM(Immobilizer)	Read Data Stream	
Accent(MC)	2008	General	IMM(Immobilizer)	Special Function	Password
Accent(MC)	2008	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Accent(MC)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(MC)	2008	General	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2008	General	Transmitter Code Saving	Special Function	Code Saving
Accent(MC)	2008	General	ECM(Engine Control Module)	Read FreezeData	
Accent(MC)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Accent(MC)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(MC)	2007	General	ECM(Engine Control Module)	Version Information	
Accent(MC)	2007	General	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(MC)	2007	General	ECM(Engine Control Module)	Read Data Stream	
Accent(MC)	2007	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Accent(MC)	2007	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(MC)	2007	General	TCM(Transmission Control Module)	Version Information	
Accent(MC)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2007	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2007	General	ABS(Anti-lock Braking System)	Version Information	
Accent(MC)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(MC)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(MC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(MC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2007	General	AC(Air Conditioning)	Version Information	
Accent(MC)	2007	General	AC(Air Conditioning)	Read Fault Code	
Accent(MC)	2007	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2007	General	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2007	General	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2007	General	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2007	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(MC)	2007	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(MC)	2007	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(MC)	2007	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(MC)	2007	General	IMM(Immobilizer)	Special Function	Password
Accent(MC)	2007	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Accent(MC)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2007	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(MC)	2007	General	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2007	General	Transmitter Code Saving	Special Function	Code Saving
Accent(MC)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Accent(MC)	2007	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Accent(MC)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(MC)	2006	General	ECM(Engine Control Module)	Version Information	
Accent(MC)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(MC)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Accent(MC)	2006	General	ECM(Engine Control Module)	Actuation Test	
Accent(MC)	2006	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(MC)	2006	General	TCM(Transmission Control Module)	Version Information	
Accent(MC)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2006	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Accent(MC)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(MC)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(MC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Accent(MC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2006	General	AC(Air Conditioning)	Version Information	
Accent(MC)	2006	General	AC(Air Conditioning)	Read Fault Code	
Accent(MC)	2006	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2006	General	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2006	General	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2006	General	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2006	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(MC)	2006	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(MC)	2006	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(MC)	2006	General	IMM(Immobilizer)	Read Data Stream	
Accent(MC)	2006	General	IMM(Immobilizer)	Special Function	password
Accent(MC)	2006	General	IMM(Immobilizer)	Special Function	Teaching/Charging
Accent(MC)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2006	General	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2006	General	Transmitter Code Saving	Special Function	Code Saving
Accent(MC)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Accent(MC)	2006	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Accent(MC)	2006	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(RB)	2018	General	ECM(Engine Control Module)	Version Information	
Accent(RB)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2018	General	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2018	General	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Accent(RB)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Accent(RB)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Accent(RB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent(RB)	2018	General	AC(Air Conditioning)	Version Information	
Accent(RB)	2018	General	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2018	General	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(RB)	2018	General	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2018	General	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2018	General	BCM(Body Control Module)	Version Information	
Accent(RB)	2018	General	BCM(Body Control Module)	Read Fault Code	
Accent(RB)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Accent(RB)	2018	General	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2018	General	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2018	General	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(RB)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(RB)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(RB)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(RB)	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(RB)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(RB)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(RB)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(RB)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(RB)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Accent(RB)	2018	General	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2018	General	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2018	General	Smart Key Unit	Version Information	
Accent(RB)	2018	General	Smart Key Unit	Read Fault Code	
Accent(RB)	2018	General	Smart Key Unit	Clear Fault Memory	
Accent(RB)	2018	General	Smart Key Unit	Read Data Stream	
Accent(RB)	2018	General	Smart Key Unit	Actuation Test	

model	year	area	system	function	subfunction
Accent(RB)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Accent(RB)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent(RB)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent(RB)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Accent(RB)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent(RB)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Accent(RB)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent(RB)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(RB)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Accent(RB)	2018	General	IMM(Immobilizer)	Read Fault Code	
Accent(RB)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Accent(RB)	2018	General	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Accent(RB)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Accent(RB)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Accent(RB)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Accent(RB)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Accent(RB)	2018	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Erase)
Accent(RB)	2018	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Erase)
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Accent(RB)	2018	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning

model	year	area	system	function	subfunction
Accent(RB)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Accent(RB)	2017	General	ECM(Engine Control Module)	Version Information	
Accent(RB)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2017	General	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2017	General	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Accent(RB)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Accent(RB)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding

model	year	area	system	function	subfunction
Accent(RB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent(RB)	2017	General	AC(Air Conditioning)	Version Information	
Accent(RB)	2017	General	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2017	General	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2017	General	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2017	General	BCM(Body Control Module)	Version Information	
Accent(RB)	2017	General	BCM(Body Control Module)	Read Fault Code	
Accent(RB)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Accent(RB)	2017	General	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2017	General	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2017	General	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(RB)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(RB)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(RB)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(RB)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(RB)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(RB)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(RB)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(RB)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(RB)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Accent(RB)	2017	General	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(RB)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2017	General	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2017	General	Smart Key Unit	Version Information	
Accent(RB)	2017	General	Smart Key Unit	Read Fault Code	
Accent(RB)	2017	General	Smart Key Unit	Clear Fault Memory	
Accent(RB)	2017	General	Smart Key Unit	Read Data Stream	
Accent(RB)	2017	General	Smart Key Unit	Actuation Test	
Accent(RB)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Accent(RB)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent(RB)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent(RB)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Accent(RB)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent(RB)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Accent(RB)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent(RB)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(RB)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Accent(RB)	2017	General	IMM(Immobilizer)	Read Fault Code	
Accent(RB)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Accent(RB)	2017	General	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(RB)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Accent(RB)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Accent(RB)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Accent(RB)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode

model	year	area	system	function	subfunction
Accent(RB)	2017	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU
Accent(RB)	2017	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Input(Transmission Exchange)
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Accent(RB)	2017	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU/Cleaning
Accent(RB)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Accent(RB)	2016	General	ECM(Engine Control Module)	Version Information	
Accent(RB)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2016	General	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU/Cleaning
Accent(RB)	2016	General	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Accent(RB)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Accent(RB)	2016	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Accent(RB)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Accent(RB)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Accent(RB)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Accent(RB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent(RB)	2016	General	AC(Air Conditioning)	Version Information	
Accent(RB)	2016	General	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2016	General	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2016	General	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2016	General	BCM(Body Control Module)	Version Information	
Accent(RB)	2016	General	BCM(Body Control Module)	Read Fault Code	
Accent(RB)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Accent(RB)	2016	General	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2016	General	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2016	General	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Accent(RB)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(RB)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(RB)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(RB)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(RB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(RB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(RB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(RB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(RB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Accent(RB)	2016	General	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2016	General	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2016	General	Smart Key Unit	Version Information	
Accent(RB)	2016	General	Smart Key Unit	Read Fault Code	
Accent(RB)	2016	General	Smart Key Unit	Clear Fault Memory	
Accent(RB)	2016	General	Smart Key Unit	Read Data Stream	
Accent(RB)	2016	General	Smart Key Unit	Actuation Test	
Accent(RB)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Accent(RB)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent(RB)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent(RB)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Accent(RB)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent(RB)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Accent(RB)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent(RB)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(RB)	2016	General	Smart Key Unit	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Accent(RB)	2016	General	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2016	General	IMM(Immobilizer)	Special Function	Password
Accent(RB)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Accent(RB)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(RB)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Accent(RB)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2016	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU
Accent(RB)	2016	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission
Accent(RB)	2016	General	TCM(Transmission Control Module)	Special Function	Exchange) AT Adaptation Mode
Accent(RB)	2015	General	ECM(Engine Control Module)	Version Information	
Accent(RB)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2015	General	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(RB)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
Accent(RB)	2015	General	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Accent(RB)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Accent(RB)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Accent(RB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent(RB)	2015	General	AC(Air Conditioning)	Version Information	
Accent(RB)	2015	General	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2015	General	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2015	General	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2015	General	BCM(Body Control Module)	Version Information	
Accent(RB)	2015	General	BCM(Body Control Module)	Read Fault Code	
Accent(RB)	2015	General	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(RB)	2015	General	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2015	General	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2015	General	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2015	General	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2015	General	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(RB)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(RB)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(RB)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(RB)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(RB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(RB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(RB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(RB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(RB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Accent(RB)	2015	General	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Accent(RB)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(RB)	2015	General	Smart Key Unit	Version Information	
Accent(RB)	2015	General	Smart Key Unit	Read Fault Code	
Accent(RB)	2015	General	Smart Key Unit	Clear Fault Memory	
Accent(RB)	2015	General	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Accent(RB)	2015	General	Smart Key Unit	Actuation Test	
Accent(RB)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(RB)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Accent(RB)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Accent(RB)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Accent(RB)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent(RB)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent(RB)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent(RB)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Accent(RB)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent(RB)	2015	General	Transmitter Code Saving	Read Data Stream	
Accent(RB)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Accent(RB)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Accent(RB)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Accent(RB)	2015	General	Continuously Variable Transmission	Version Information	
Accent(RB)	2015	General	Continuously Variable Transmission	Read Fault Code	
Accent(RB)	2015	General	Continuously Variable Transmission	Clear Fault Memory	
Accent(RB)	2015	General	Continuously Variable Transmission	Read Data Stream	
Accent(RB)	2015	General	Continuously Variable Transmission	Read FreezeData	
Accent(RB)	2015	General	Continuously Variable Transmission	Special Function	Resetting Auto T/A Values
Accent(RB)	2015	General	Continuously Variable Transmission	Special Function	Oil-pressure Characteristics Backup&Input(TCU
Accent(RB)	2015	General	Continuously Variable Transmission	Special Function	Oil-pressure Characteristics Input(Transmission
Accent(RB)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Accent(RB)	2015	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Accent(RB)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Accent(RB)	2015	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement

model	year	area	system	function	subfunction
Accent(RB)	2015	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Accent(RB)	2014	General	ECM(Engine Control Module)	Version Information	
Accent(RB)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2014	General	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(RB)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2014	General	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Accent(RB)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Accent(RB)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2014	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding

model	year	area	system	function	subfunction
Accent(RB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent(RB)	2014	General	AC(Air Conditioning)	Version Information	
Accent(RB)	2014	General	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2014	General	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2014	General	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2014	General	BCM(Body Control Module)	Version Information	
Accent(RB)	2014	General	BCM(Body Control Module)	Read Fault Code	
Accent(RB)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Accent(RB)	2014	General	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2014	General	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2014	General	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2014	General	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2014	General	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2014	General	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Accent(RB)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(RB)	2014	General	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
Accent(RB)	2014	General	Smart Key Unit	Read Fault Code	
Accent(RB)	2014	General	Smart Key Unit	Clear Fault Memory	
Accent(RB)	2014	General	Smart Key Unit	Read Data Stream	
Accent(RB)	2014	General	Smart Key Unit	Actuation Test	
Accent(RB)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(RB)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Accent(RB)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Accent(RB)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Accent(RB)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent(RB)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent(RB)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent(RB)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Accent(RB)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent(RB)	2014	General	Transmitter Code Saving	Read Data Stream	
Accent(RB)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Accent(RB)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Accent(RB)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Accent(RB)	2014	General	Continuously Variable Transmission	Version Information	
Accent(RB)	2014	General	Continuously Variable Transmission	Read Fault Code	
Accent(RB)	2014	General	Continuously Variable Transmission	Clear Fault Memory	
Accent(RB)	2014	General	Continuously Variable Transmission	Read Data Stream	
Accent(RB)	2014	General	Continuously Variable Transmission	Read FreezeData	
Accent(RB)	2014	General	Continuously Variable Transmission	Special Function	Resetting Auto T/A Values
Accent(RB)	2014	General	Continuously Variable Transmission	Special Function	Oil-pressure Characteristics Backup&Input(TCU
Accent(RB)	2014	General	Continuously Variable Transmission	Special Function	Oil-pressure Characteristics Input(Transmission
Accent(RB)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(RB)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data

model	year	area	system	function	subfunction
Accent(RB)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Accent(RB)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Accent(RB)	2013	General	ECM(Engine Control Module)	Version Information	
Accent(RB)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2013	General	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(RB)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2013	General	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2013	General	ABS(Anti-lock Braking System)	Version Information	
Accent(RB)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2013	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Accent(RB)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)

model	year	area	system	function	subfunction
Accent(RB)	2013	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Accent(RB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent(RB)	2013	General	AC(Air Conditioning)	Version Information	
Accent(RB)	2013	General	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2013	General	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2013	General	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2013	General	BCM(Body Control Module)	Version Information	
Accent(RB)	2013	General	BCM(Body Control Module)	Read Fault Code	
Accent(RB)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Accent(RB)	2013	General	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2013	General	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2013	General	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2013	General	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2013	General	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2013	General	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(RB)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Accent(RB)	2013	General	Smart Key Unit	Version Information	
Accent(RB)	2013	General	Smart Key Unit	Read Fault Code	
Accent(RB)	2013	General	Smart Key Unit	Clear Fault Memory	
Accent(RB)	2013	General	Smart Key Unit	Read Data Stream	
Accent(RB)	2013	General	Smart Key Unit	Actuation Test	
Accent(RB)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(RB)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
Accent(RB)	2013	General	Smart Key Unit	Special Function	SMK Status Information
Accent(RB)	2013	General	Smart Key Unit	Special Function	ESCL Status Information
Accent(RB)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent(RB)	2013	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent(RB)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent(RB)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
Accent(RB)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent(RB)	2013	General	Transmitter Code Saving	Read Data Stream	
Accent(RB)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Accent(RB)	2013	General	Continuously Variable Transmission	Version Information	
Accent(RB)	2013	General	Continuously Variable Transmission	Read Fault Code	
Accent(RB)	2013	General	Continuously Variable Transmission	Clear Fault Memory	
Accent(RB)	2013	General	Continuously Variable Transmission	Read Data Stream	
Accent(RB)	2013	General	Continuously Variable Transmission	Read FreezeData	
Accent(RB)	2013	General	Continuously Variable Transmission	Special Function	Resetting Auto T/A Values
Accent(RB)	2013	General	Continuously Variable Transmission	Special Function	Oil-pressure Characteristics Backup&Input(TCU
Accent(RB)	2013	General	Continuously Variable Transmission	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Accent(RB)	2013	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(RB)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Accent(RB)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine

model	year	area	system	function	subfunction
Accent(RB)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Accent(RB)	2012	General	ECM(Engine Control Module)	Version Information	
Accent(RB)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2012	General	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(RB)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2012	General	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2012	General	ABS(Anti-lock Braking System)	Version Information	
Accent(RB)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2012	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Accent(RB)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent(RB)	2012	General	AC(Air Conditioning)	Version Information	
Accent(RB)	2012	General	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2012	General	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2012	General	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2012	General	BCM(Body Control Module)	Version Information	
Accent(RB)	2012	General	BCM(Body Control Module)	Read Fault Code	
Accent(RB)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Accent(RB)	2012	General	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2012	General	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2012	General	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2012	General	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2012	General	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2012	General	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(RB)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(RB)	2012	General	Smart Key Unit	Version Information	
Accent(RB)	2012	General	Smart Key Unit	Read Fault Code	
Accent(RB)	2012	General	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(RB)	2012	General	Smart Key Unit	Read Data Stream	
Accent(RB)	2012	General	Smart Key Unit	Actuation Test	
Accent(RB)	2012	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(RB)	2012	General	Smart Key Unit	Special Function	Neutralization Mode
Accent(RB)	2012	General	Smart Key Unit	Special Function	SMK Status Information
Accent(RB)	2012	General	Smart Key Unit	Special Function	ESCL Status Information
Accent(RB)	2012	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent(RB)	2012	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent(RB)	2012	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent(RB)	2012	General	Smart Key Unit	Special Function	Antenna Status Check
Accent(RB)	2012	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent(RB)	2012	General	Transmitter Code Saving	Read Data Stream	
Accent(RB)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Accent(RB)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(RB)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Accent(RB)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Accent(RB)	2012	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Accent(RB)	2011	General	ECM(Engine Control Module)	Version Information	
Accent(RB)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2011	General	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Accent(RB)	2011	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2011	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2011	General	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
Accent(RB)	2011	General	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2011	General	ABS(Anti-lock Braking System)	Version Information	
Accent(RB)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2011	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent(RB)	2011	General	AC(Air Conditioning)	Version Information	
Accent(RB)	2011	General	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2011	General	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2011	General	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2011	General	BCM(Body Control Module)	Version Information	
Accent(RB)	2011	General	BCM(Body Control Module)	Read Fault Code	
Accent(RB)	2011	General	BCM(Body Control Module)	Clear Fault Memory	
Accent(RB)	2011	General	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2011	General	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Accent(RB)	2011	General	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2011	General	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2011	General	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2011	General	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(RB)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(RB)	2011	General	Smart Key Unit	Version Information	
Accent(RB)	2011	General	Smart Key Unit	Read Fault Code	
Accent(RB)	2011	General	Smart Key Unit	Clear Fault Memory	
Accent(RB)	2011	General	Smart Key Unit	Read Data Stream	
Accent(RB)	2011	General	Smart Key Unit	Actuation Test	
Accent(RB)	2011	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(RB)	2011	General	Smart Key Unit	Special Function	Neutralization Mode
Accent(RB)	2011	General	Smart Key Unit	Special Function	SMK Status Information
Accent(RB)	2011	General	Smart Key Unit	Special Function	ESCL Status Information
Accent(RB)	2011	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent(RB)	2011	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent(RB)	2011	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent(RB)	2011	General	Smart Key Unit	Special Function	Antenna Status Check
Accent(RB)	2011	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent(RB)	2011	General	Transmitter Code Saving	Read Data Stream	
Accent(RB)	2011	General	Transmitter Code Saving	Special Function	Code Saving

model	year	area	system	function	subfunction
Accent(RB)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Accent(RB)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Accent(RB)	2011	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Accent(RB)	2011	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Accent(X3)	1999	General	ECM(Engine Control Module)	Read Fault Code	
Accent(X3)	1999	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(X3)	1999	General	ECM(Engine Control Module)	Read Data Stream	
Accent(X3)	1999	General	ECM(Engine Control Module)	Actuation Test	
Accent(X3)	1999	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(X3)	1999	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(X3)	1999	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(X3)	1999	General	TCM(Transmission Control Module)	Actuation Test	
Accent(X3)	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(X3)	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(X3)	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(X3)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(X3)	1999	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(X3)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(X3)	1999	General	IMM(Immobilizer)	Read Fault Code	
Accent(X3)	1999	General	IMM(Immobilizer)	Clear Fault Memory	
Accent(X3)	1999	General	IMM(Immobilizer)	Read Data Stream	
Accent(X3)	1999	General	IMM(Immobilizer)	Special Function	Password Record/Change
Accent(X3)	1999	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Accent(X3)	1999	General	IMM(Immobilizer)	Special Function	Master Key Delete
Accent(X3)	1999	General	IMM(Immobilizer)	Special Function	Neutral Mode
Accent(X3)	1999	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Accent(X3)	1998	General	ECM(Engine Control Module)	Read Fault Code	
Accent(X3)	1998	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(X3)	1998	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(X3)	1998	General	ECM(Engine Control Module)	Actuation Test	
Accent(X3)	1998	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(X3)	1998	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(X3)	1998	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(X3)	1998	General	TCM(Transmission Control Module)	Actuation Test	
Accent(X3)	1998	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(X3)	1998	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(X3)	1998	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(X3)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(X3)	1998	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(X3)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(X3)	1998	General	IMM(Immobilizer)	Read Fault Code	
Accent(X3)	1998	General	IMM(Immobilizer)	Clear Fault Memory	
Accent(X3)	1998	General	IMM(Immobilizer)	Read Data Stream	
Accent(X3)	1998	General	IMM(Immobilizer)	Special Function	Password Record/Change
Accent(X3)	1998	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Accent(X3)	1998	General	IMM(Immobilizer)	Special Function	Master Key Delete
Accent(X3)	1998	General	IMM(Immobilizer)	Special Function	Neutral Mode
Accent(X3)	1998	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Accent(X3)	1997	General	ECM(Engine Control Module)	Read Fault Code	
Accent(X3)	1997	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(X3)	1997	General	ECM(Engine Control Module)	Read Data Stream	
Accent(X3)	1997	General	ECM(Engine Control Module)	Actuation Test	
Accent(X3)	1997	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(X3)	1997	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(X3)	1997	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(X3)	1997	General	TCM(Transmission Control Module)	Actuation Test	
Accent(X3)	1997	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(X3)	1997	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(X3)	1997	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(X3)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(X3)	1997	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(X3)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(X3)	1997	General	IMM(Immobilizer)	Read Fault Code	
Accent(X3)	1997	General	IMM(Immobilizer)	Clear Fault Memory	
Accent(X3)	1997	General	IMM(Immobilizer)	Read Data Stream	
Accent(X3)	1997	General	IMM(Immobilizer)	Special Function	Password Record/Change
Accent(X3)	1997	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Accent(X3)	1997	General	IMM(Immobilizer)	Special Function	Master Key Delete
Accent(X3)	1997	General	IMM(Immobilizer)	Special Function	Neutral Mode
Accent(X3)	1997	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Accent(X3)	1996	General	ECM(Engine Control Module)	Read Fault Code	
Accent(X3)	1996	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(X3)	1996	General	ECM(Engine Control Module)	Read Data Stream	
Accent(X3)	1996	General	ECM(Engine Control Module)	Actuation Test	
Accent(X3)	1996	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(X3)	1996	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(X3)	1996	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(X3)	1996	General	TCM(Transmission Control Module)	Actuation Test	
Accent(X3)	1996	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(X3)	1996	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(X3)	1996	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(X3)	1996	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(X3)	1996	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(X3)	1996	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(X3)	1996	General	IMM(Immobilizer)	Read Fault Code	
Accent(X3)	1996	General	IMM(Immobilizer)	Clear Fault Memory	
Accent(X3)	1996	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(X3)	1996	General	IMM(Immobilizer)	Special Function	Password Record/Change
Accent(X3)	1996	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Accent(X3)	1996	General	IMM(Immobilizer)	Special Function	Master Key Delete
Accent(X3)	1996	General	IMM(Immobilizer)	Special Function	Neutral Mode
Accent(X3)	1996	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Accent(X3)	1995	General	ECM(Engine Control Module)	Read Fault Code	
Accent(X3)	1995	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent(X3)	1995	General	ECM(Engine Control Module)	Read Data Stream	
Accent(X3)	1995	General	ECM(Engine Control Module)	Actuation Test	
Accent(X3)	1995	General	TCM(Transmission Control Module)	Read Fault Code	
Accent(X3)	1995	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(X3)	1995	General	TCM(Transmission Control Module)	Read Data Stream	
Accent(X3)	1995	General	TCM(Transmission Control Module)	Actuation Test	
Accent(X3)	1995	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(X3)	1995	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(X3)	1995	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(X3)	1995	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(X3)	1995	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(X3)	1995	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(X3)	1995	General	IMM(Immobilizer)	Read Fault Code	
Accent(X3)	1995	General	IMM(Immobilizer)	Clear Fault Memory	
Accent(X3)	1995	General	IMM(Immobilizer)	Read Data Stream	
Accent(X3)	1995	General	IMM(Immobilizer)	Special Function	Password Record/Change
Accent(X3)	1995	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Accent(X3)	1995	General	IMM(Immobilizer)	Special Function	Master Key Delete
Accent(X3)	1995	General	IMM(Immobilizer)	Special Function	Neutral Mode
Accent(X3)	1995	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Accent/Solaris(RBr)	2017	General	ECM(Engine Control Module)	Version Information	
Accent/Solaris(RBr)	2017	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2017	General	ECM(Engine Control Module)	Actuation Test	
Accent/Solaris(RBr)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent/Solaris(RBr)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent/Solaris(RBr)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent/Solaris(RBr)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent/Solaris(RBr)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent/Solaris(RBr)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent/Solaris(RBr)	2017	General	TCM(Transmission Control Module)	Version Information	
Accent/Solaris(RBr)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Accent/Solaris(RBr)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Accent/Solaris(RBr)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent/Solaris(RBr)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Accent/Solaris(RBr)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Accent/Solaris(RBr)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent/Solaris(RBr)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent/Solaris(RBr)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent/Solaris(RBr)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent/Solaris(RBr)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent/Solaris(RBr)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent/Solaris(RBr)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent/Solaris(RBr)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent/Solaris(RBr)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent/Solaris(RBr)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent/Solaris(RBr)	2017	General	AC(Air Conditioning)	Version Information	
Accent/Solaris(RBr)	2017	General	AC(Air Conditioning)	Read Fault Code	
Accent/Solaris(RBr)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Accent/Solaris(RBr)	2017	General	AC(Air Conditioning)	Read Data Stream	
Accent/Solaris(RBr)	2017	General	AC(Air Conditioning)	Actuation Test	
Accent/Solaris(RBr)	2017	General	BCM(Body Control Module)	Version Information	
Accent/Solaris(RBr)	2017	General	BCM(Body Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2017	General	BCM(Body Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2017	General	BCM(Body Control Module)	Actuation Test	
Accent/Solaris(RBr)	2017	General	BCM(Body Control Module)	Special Function	User Option
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Version Information	
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Read Fault Code	
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Clear Fault Memory	
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Read Data Stream	
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Actuation Test	
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent/Solaris(RBr)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Accent/Solaris(RBr)	2017	General	IMM(Immobilizer)	Read Fault Code	
Accent/Solaris(RBr)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Accent/Solaris(RBr)	2017	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2017	General	IMM(Immobilizer)	Special Function	Password
Accent/Solaris(RBr)	2017	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Accent/Solaris(RBr)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent/Solaris(RBr)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent/Solaris(RBr)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Accent/Solaris(RBr)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Accent/Solaris(RBr)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Accent/Solaris(RBr)	2016	General	ECM(Engine Control Module)	Version Information	
Accent/Solaris(RBr)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2016	General	ECM(Engine Control Module)	Actuation Test	
Accent/Solaris(RBr)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent/Solaris(RBr)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent/Solaris(RBr)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent/Solaris(RBr)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent/Solaris(RBr)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent/Solaris(RBr)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent/Solaris(RBr)	2016	General	TCM(Transmission Control Module)	Version Information	
Accent/Solaris(RBr)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Accent/Solaris(RBr)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Accent/Solaris(RBr)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent/Solaris(RBr)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Accent/Solaris(RBr)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Accent/Solaris(RBr)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent/Solaris(RBr)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent/Solaris(RBr)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent/Solaris(RBr)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent/Solaris(RBr)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent/Solaris(RBr)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent/Solaris(RBr)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent/Solaris(RBr)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent/Solaris(RBr)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent/Solaris(RBr)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent/Solaris(RBr)	2016	General	AC(Air Conditioning)	Version Information	
Accent/Solaris(RBr)	2016	General	AC(Air Conditioning)	Read Fault Code	
Accent/Solaris(RBr)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Accent/Solaris(RBr)	2016	General	AC(Air Conditioning)	Read Data Stream	
Accent/Solaris(RBr)	2016	General	AC(Air Conditioning)	Actuation Test	
Accent/Solaris(RBr)	2016	General	BCM(Body Control Module)	Version Information	
Accent/Solaris(RBr)	2016	General	BCM(Body Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2016	General	BCM(Body Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2016	General	BCM(Body Control Module)	Actuation Test	
Accent/Solaris(RBr)	2016	General	BCM(Body Control Module)	Special Function	User Option
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Version Information	
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Read Fault Code	
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Clear Fault Memory	
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Read Data Stream	
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Actuation Test	
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent/Solaris(RBr)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Accent/Solaris(RBr)	2016	General	IMM(Immobilizer)	Read Fault Code	
Accent/Solaris(RBr)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
Accent/Solaris(RBr)	2016	General	IMM(Immobilizer)	Read Data Stream	
Accent/Solaris(RBr)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent/Solaris(RBr)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent/Solaris(RBr)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent/Solaris(RBr)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Accent/Solaris(RBr)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Accent/Solaris(RBr)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Accent/Solaris(RBr)	2015	General	ECM(Engine Control Module)	Version Information	
Accent/Solaris(RBr)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2015	General	ECM(Engine Control Module)	Actuation Test	
Accent/Solaris(RBr)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent/Solaris(RBr)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent/Solaris(RBr)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent/Solaris(RBr)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent/Solaris(RBr)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent/Solaris(RBr)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent/Solaris(RBr)	2015	General	TCM(Transmission Control Module)	Version Information	
Accent/Solaris(RBr)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2015	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Accent/Solaris(RBr)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Accent/Solaris(RBr)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent/Solaris(RBr)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Accent/Solaris(RBr)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Accent/Solaris(RBr)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent/Solaris(RBr)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent/Solaris(RBr)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent/Solaris(RBr)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent/Solaris(RBr)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent/Solaris(RBr)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent/Solaris(RBr)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent/Solaris(RBr)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent/Solaris(RBr)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent/Solaris(RBr)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent/Solaris(RBr)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent/Solaris(RBr)	2015	General	AC(Air Conditioning)	Version Information	
Accent/Solaris(RBr)	2015	General	AC(Air Conditioning)	Read Fault Code	
Accent/Solaris(RBr)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Accent/Solaris(RBr)	2015	General	AC(Air Conditioning)	Read Data Stream	
Accent/Solaris(RBr)	2015	General	AC(Air Conditioning)	Actuation Test	
Accent/Solaris(RBr)	2015	General	BCM(Body Control Module)	Version Information	
Accent/Solaris(RBr)	2015	General	BCM(Body Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2015	General	BCM(Body Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2015	General	BCM(Body Control Module)	Actuation Test	
Accent/Solaris(RBr)	2015	General	BCM(Body Control Module)	Special Function	User Option
Accent/Solaris(RBr)	2015	General	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent/Solaris(RBr)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent/Solaris(RBr)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent/Solaris(RBr)	2015	General	EPS(Electronic Power Steering)	Actuation Test	
Accent/Solaris(RBr)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent/Solaris(RBr)	2015	General	IMM(Immobilizer)	Read Data Stream	
Accent/Solaris(RBr)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent/Solaris(RBr)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent/Solaris(RBr)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent/Solaris(RBr)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Accent/Solaris(RBr)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Version Information	
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Read Fault Code	
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Clear Fault Memory	
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Read Data Stream	
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Actuation Test	
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Accent/Solaris(RBr)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent/Solaris(RBr)	2015	General	Transmitter Code Saving	Read Data Stream	
Accent/Solaris(RBr)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Accent/Solaris(RBr)	2014	General	ECM(Engine Control Module)	Version Information	
Accent/Solaris(RBr)	2014	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2014	General	ECM(Engine Control Module)	Actuation Test	
Accent/Solaris(RBr)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent/Solaris(RBr)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent/Solaris(RBr)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent/Solaris(RBr)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent/Solaris(RBr)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent/Solaris(RBr)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent/Solaris(RBr)	2014	General	TCM(Transmission Control Module)	Version Information	
Accent/Solaris(RBr)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Accent/Solaris(RBr)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Accent/Solaris(RBr)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent/Solaris(RBr)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Accent/Solaris(RBr)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Accent/Solaris(RBr)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent/Solaris(RBr)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent/Solaris(RBr)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent/Solaris(RBr)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent/Solaris(RBr)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent/Solaris(RBr)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent/Solaris(RBr)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent/Solaris(RBr)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent/Solaris(RBr)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent/Solaris(RBr)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent/Solaris(RBr)	2014	General	AC(Air Conditioning)	Version Information	
Accent/Solaris(RBr)	2014	General	AC(Air Conditioning)	Read Fault Code	
Accent/Solaris(RBr)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Accent/Solaris(RBr)	2014	General	AC(Air Conditioning)	Read Data Stream	
Accent/Solaris(RBr)	2014	General	AC(Air Conditioning)	Actuation Test	
Accent/Solaris(RBr)	2014	General	BCM(Body Control Module)	Version Information	
Accent/Solaris(RBr)	2014	General	BCM(Body Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2014	General	BCM(Body Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2014	General	BCM(Body Control Module)	Actuation Test	
Accent/Solaris(RBr)	2014	General	BCM(Body Control Module)	Special Function	User Option
Accent/Solaris(RBr)	2014	General	EPS(Electronic Power Steering)	Version Information	
Accent/Solaris(RBr)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent/Solaris(RBr)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent/Solaris(RBr)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent/Solaris(RBr)	2014	General	EPS(Electronic Power Steering)	Actuation Test	
Accent/Solaris(RBr)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent/Solaris(RBr)	2014	General	IMM(Immobilizer)	Read Data Stream	
Accent/Solaris(RBr)	2014	General	IMM(Immobilizer)	Special Function	Password
Accent/Solaris(RBr)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Accent/Solaris(RBr)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent/Solaris(RBr)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent/Solaris(RBr)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Accent/Solaris(RBr)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Version Information	
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Read Fault Code	
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Clear Fault Memory	
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Read Data Stream	
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Actuation Test	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Accent/Solaris(RBr)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent/Solaris(RBr)	2014	General	Transmitter Code Saving	Read Data Stream	
Accent/Solaris(RBr)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Accent/Solaris(RBr)	2013	General	ECM(Engine Control Module)	Version Information	
Accent/Solaris(RBr)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2013	General	ECM(Engine Control Module)	Actuation Test	
Accent/Solaris(RBr)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent/Solaris(RBr)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent/Solaris(RBr)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent/Solaris(RBr)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent/Solaris(RBr)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent/Solaris(RBr)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent/Solaris(RBr)	2013	General	TCM(Transmission Control Module)	Version Information	
Accent/Solaris(RBr)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Accent/Solaris(RBr)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent/Solaris(RBr)	2013	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent/Solaris(RBr)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent/Solaris(RBr)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent/Solaris(RBr)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent/Solaris(RBr)	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent/Solaris(RBr)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent/Solaris(RBr)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent/Solaris(RBr)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent/Solaris(RBr)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent/Solaris(RBr)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent/Solaris(RBr)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent/Solaris(RBr)	2013	General	AC(Air Conditioning)	Version Information	
Accent/Solaris(RBr)	2013	General	AC(Air Conditioning)	Read Fault Code	
Accent/Solaris(RBr)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Accent/Solaris(RBr)	2013	General	AC(Air Conditioning)	Read Data Stream	
Accent/Solaris(RBr)	2013	General	AC(Air Conditioning)	Actuation Test	
Accent/Solaris(RBr)	2013	General	BCM(Body Control Module)	Version Information	
Accent/Solaris(RBr)	2013	General	BCM(Body Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2013	General	BCM(Body Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2013	General	BCM(Body Control Module)	Actuation Test	
Accent/Solaris(RBr)	2013	General	BCM(Body Control Module)	Special Function	User Option
Accent/Solaris(RBr)	2013	General	EPS(Electronic Power Steering)	Version Information	
Accent/Solaris(RBr)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent/Solaris(RBr)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent/Solaris(RBr)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent/Solaris(RBr)	2013	General	EPS(Electronic Power Steering)	Actuation Test	
Accent/Solaris(RBr)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2013	General	IMM(Immobilizer)	Read Data Stream	
Accent/Solaris(RBr)	2013	General	IMM(Immobilizer)	Special Function	Password
Accent/Solaris(RBr)	2013	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Accent/Solaris(RBr)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent/Solaris(RBr)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent/Solaris(RBr)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Accent/Solaris(RBr)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Version Information	
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Read Fault Code	
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Clear Fault Memory	
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Read Data Stream	
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Actuation Test	
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Special Function	SMK Status Information
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Special Function	ESCL Status Information
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
Accent/Solaris(RBr)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent/Solaris(RBr)	2013	General	Transmitter Code Saving	Read Data Stream	
Accent/Solaris(RBr)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Accent/Solaris(RBr)	2012	General	ECM(Engine Control Module)	Version Information	
Accent/Solaris(RBr)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2012	General	ECM(Engine Control Module)	Actuation Test	
Accent/Solaris(RBr)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent/Solaris(RBr)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent/Solaris(RBr)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent/Solaris(RBr)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent/Solaris(RBr)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent/Solaris(RBr)	2012	General	TCM(Transmission Control Module)	Version Information	
Accent/Solaris(RBr)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Accent/Solaris(RBr)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent/Solaris(RBr)	2012	General	ABS(Anti-lock Braking System)	Version Information	
Accent/Solaris(RBr)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent/Solaris(RBr)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent/Solaris(RBr)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent/Solaris(RBr)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent/Solaris(RBr)	2012	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent/Solaris(RBr)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent/Solaris(RBr)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent/Solaris(RBr)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent/Solaris(RBr)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent/Solaris(RBr)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent/Solaris(RBr)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent/Solaris(RBr)	2012	General	AC(Air Conditioning)	Version Information	
Accent/Solaris(RBr)	2012	General	AC(Air Conditioning)	Read Fault Code	
Accent/Solaris(RBr)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Accent/Solaris(RBr)	2012	General	AC(Air Conditioning)	Read Data Stream	
Accent/Solaris(RBr)	2012	General	AC(Air Conditioning)	Actuation Test	
Accent/Solaris(RBr)	2012	General	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2012	General	BCM(Body Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2012	General	BCM(Body Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2012	General	BCM(Body Control Module)	Actuation Test	
Accent/Solaris(RBr)	2012	General	BCM(Body Control Module)	Special Function	User Option
Accent/Solaris(RBr)	2012	General	EPS(Electronic Power Steering)	Version Information	
Accent/Solaris(RBr)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent/Solaris(RBr)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent/Solaris(RBr)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent/Solaris(RBr)	2012	General	EPS(Electronic Power Steering)	Actuation Test	
Accent/Solaris(RBr)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent/Solaris(RBr)	2012	General	IMM(Immobilizer)	Read Data Stream	
Accent/Solaris(RBr)	2012	General	IMM(Immobilizer)	Special Function	Password
Accent/Solaris(RBr)	2012	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Accent/Solaris(RBr)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent/Solaris(RBr)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent/Solaris(RBr)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Accent/Solaris(RBr)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Version Information	
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Read Fault Code	
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Clear Fault Memory	
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Read Data Stream	
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Actuation Test	
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Special Function	Neutralization Mode
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Special Function	SMK Status Information
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Special Function	ESCL Status Information
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Special Function	Antenna Status Check
Accent/Solaris(RBr)	2012	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent/Solaris(RBr)	2012	General	Transmitter Code Saving	Read Data Stream	
Accent/Solaris(RBr)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Accent/Solaris(RBr)	2011	General	ECM(Engine Control Module)	Version Information	
Accent/Solaris(RBr)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2011	General	ECM(Engine Control Module)	Actuation Test	
Accent/Solaris(RBr)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent/Solaris(RBr)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent/Solaris(RBr)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent/Solaris(RBr)	2011	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent/Solaris(RBr)	2011	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent/Solaris(RBr)	2011	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent/Solaris(RBr)	2011	General	TCM(Transmission Control Module)	Version Information	
Accent/Solaris(RBr)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Accent/Solaris(RBr)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent/Solaris(RBr)	2011	General	ABS(Anti-lock Braking System)	Version Information	
Accent/Solaris(RBr)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent/Solaris(RBr)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent/Solaris(RBr)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent/Solaris(RBr)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent/Solaris(RBr)	2011	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent/Solaris(RBr)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent/Solaris(RBr)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent/Solaris(RBr)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent/Solaris(RBr)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent/Solaris(RBr)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Accent/Solaris(RBr)	2011	General	AC(Air Conditioning)	Version Information	
Accent/Solaris(RBr)	2011	General	AC(Air Conditioning)	Read Fault Code	
Accent/Solaris(RBr)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Accent/Solaris(RBr)	2011	General	AC(Air Conditioning)	Read Data Stream	
Accent/Solaris(RBr)	2011	General	AC(Air Conditioning)	Actuation Test	
Accent/Solaris(RBr)	2011	General	BCM(Body Control Module)	Version Information	
Accent/Solaris(RBr)	2011	General	BCM(Body Control Module)	Read Fault Code	
Accent/Solaris(RBr)	2011	General	BCM(Body Control Module)	Clear Fault Memory	
Accent/Solaris(RBr)	2011	General	BCM(Body Control Module)	Read Data Stream	
Accent/Solaris(RBr)	2011	General	BCM(Body Control Module)	Actuation Test	
Accent/Solaris(RBr)	2011	General	BCM(Body Control Module)	Special Function	User Option
Accent/Solaris(RBr)	2011	General	EPS(Electronic Power Steering)	Version Information	
Accent/Solaris(RBr)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent/Solaris(RBr)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent/Solaris(RBr)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent/Solaris(RBr)	2011	General	EPS(Electronic Power Steering)	Actuation Test	
Accent/Solaris(RBr)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent/Solaris(RBr)	2011	General	IMM(Immobilizer)	Read Data Stream	
Accent/Solaris(RBr)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Accent/Solaris(RBr)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent/Solaris(RBr)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent/Solaris(RBr)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Accent/Solaris(RBr)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Read Fault Code	
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Clear Fault Memory	
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Read Data Stream	
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Actuation Test	
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Special Function	Neutralization Mode
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Special Function	SMK Status Information
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Special Function	ESCL Status Information
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Special Function	Antenna Status Check
Accent/Solaris(RBr)	2011	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent/Solaris(RBr)	2011	General	Transmitter Code Saving	Read Data Stream	
Accent/Solaris(RBr)	2011	General	Transmitter Code Saving	Special Function	Code Saving
Accent/Solaris(HCR)	2018	General	ECM(Engine Control Module)	Version Information	
Accent/Solaris(HCR)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Accent/Solaris(HCR)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Accent/Solaris(HCR)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Accent/Solaris(HCR)	2018	General	ECM(Engine Control Module)	Actuation Test	
Accent/Solaris(HCR)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Accent/Solaris(HCR)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Accent/Solaris(HCR)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent/Solaris(HCR)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent/Solaris(HCR)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent/Solaris(HCR)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent/Solaris(HCR)	2018	General	TCM(Transmission Control Module)	Version Information	
Accent/Solaris(HCR)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Accent/Solaris(HCR)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent/Solaris(HCR)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Accent/Solaris(HCR)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Accent/Solaris(HCR)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Accent/Solaris(HCR)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent/Solaris(HCR)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Accent/Solaris(HCR)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Accent/Solaris(HCR)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Accent/Solaris(HCR)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent/Solaris(HCR)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Accent/Solaris(HCR)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Accent/Solaris(HCR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent/Solaris(HCR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent/Solaris(HCR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent/Solaris(HCR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent/Solaris(HCR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Accent/Solaris(HCR)	2018	General	AC(Air Conditioning)	Version Information	
Accent/Solaris(HCR)	2018	General	AC(Air Conditioning)	Read Fault Code	
Accent/Solaris(HCR)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Accent/Solaris(HCR)	2018	General	AC(Air Conditioning)	Read Data Stream	
Accent/Solaris(HCR)	2018	General	AC(Air Conditioning)	Actuation Test	
Accent/Solaris(HCR)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Accent/Solaris(HCR)	2018	General	BCM(Body Control Module)	Version Information	
Accent/Solaris(HCR)	2018	General	BCM(Body Control Module)	Read Fault Code	
Accent/Solaris(HCR)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Accent/Solaris(HCR)	2018	General	BCM(Body Control Module)	Read Data Stream	
Accent/Solaris(HCR)	2018	General	BCM(Body Control Module)	Actuation Test	
Accent/Solaris(HCR)	2018	General	BCM(Body Control Module)	Special Function	User Option
Accent/Solaris(HCR)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Accent/Solaris(HCR)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting

model	year	area	system	function	subfunction
Accent/Solaris(HCR)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent/Solaris(HCR)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent/Solaris(HCR)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent/Solaris(HCR)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent/Solaris(HCR)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Variant Coding
Accent/Solaris(HCR)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Tire Pressure Save(Set)
Accent/Solaris(HCR)	2018	General	EPS(Electronic Power Steering)	Version Information	
Accent/Solaris(HCR)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Accent/Solaris(HCR)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent/Solaris(HCR)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Accent/Solaris(HCR)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent/Solaris(HCR)	2018	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Version Information	
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Read Fault Code	
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Clear Fault Memory	
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Read Data Stream	
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Actuation Test	
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Special Function	Ecls Enable Output Check
Accent/Solaris(HCR)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Accent/Solaris(HCR)	2018	General	Parking Guide System	Version Information	

model	year	area	system	function	subfunction
Accent/Solaris(HCR)	2018	General	Parking Guide System	Read Fault Code	
Accent/Solaris(HCR)	2018	General	Parking Guide System	Clear Fault Memory	
Accent/Solaris(HCR)	2018	General	Parking Guide System	Read Data Stream	
Accent/Solaris(HCR)	2018	General	Telematics Unit	Version Information	
Accent/Solaris(HCR)	2018	General	Telematics Unit	Read Fault Code	
Accent/Solaris(HCR)	2018	General	Telematics Unit	Clear Fault Memory	
Accent/Solaris(HCR)	2018	General	IMM(Immobilizer)	Read Fault Code	
Accent/Solaris(HCR)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Accent/Solaris(HCR)	2018	General	IMM(Immobilizer)	Read Data Stream	
Accent/Solaris(HCR)	2018	General	IMM(Immobilizer)	Special Function	Password
Accent/Solaris(HCR)	2018	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Accent/Solaris(HCR)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent/Solaris(HCR)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent/Solaris(HCR)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Accent/Solaris(HCR)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Accent/Solaris(HCR)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Atos Prime(MXL)	2004	General	ECM(Engine Control Module)	Version Information	
Atos Prime(MXL)	2004	General	ECM(Engine Control Module)	Read Fault Code	
Atos Prime(MXL)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos Prime(MXL)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Atos Prime(MXL)	2004	General	ECM(Engine Control Module)	Actuation Test	
Atos Prime(MXL)	2004	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos Prime(MXL)	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos Prime(MXL)	2004	General	ECM(Engine Control Module)	Read FreezeData	
Atos Prime(MXL)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Atos Prime(MXL)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos Prime(MXL)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Atos Prime(MXL)	2004	General	TCM(Transmission Control Module)	Actuation Test	
Atos Prime(MXL)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Atos Prime(MXL)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
Atos Prime(MXL)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos Prime(MXL)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos Prime(MXL)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos Prime(MXL)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos Prime(MXL)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos Prime(MXL)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos Prime(MXL)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos Prime(MXL)	2004	General	IMM(Immobilizer)	Read Data Stream	
Atos Prime(MXL)	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos Prime(MXL)	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos Prime(MXL)	2004	General	IMM(Immobilizer)	Special Function	Password
Atos Prime(MXL)	2004	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Atos Prime(MXL)	2004	General	IMM(Immobilizer)	Special Function	Teaching
Atos Prime(MXL)	2003	General	ECM(Engine Control Module)	Version Information	
Atos Prime(MXL)	2003	General	ECM(Engine Control Module)	Read Fault Code	
Atos Prime(MXL)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos Prime(MXL)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Atos Prime(MXL)	2003	General	ECM(Engine Control Module)	Actuation Test	
Atos Prime(MXL)	2003	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos Prime(MXL)	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos Prime(MXL)	2003	General	ECM(Engine Control Module)	Read FreezeData	
Atos Prime(MXL)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Atos Prime(MXL)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos Prime(MXL)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Atos Prime(MXL)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Atos Prime(MXL)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Atos Prime(MXL)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos Prime(MXL)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos Prime(MXL)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos Prime(MXL)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Atos Prime(MXL)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos Prime(MXL)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos Prime(MXL)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos Prime(MXL)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos Prime(MXL)	2003	General	IMM(Immobilizer)	Read Data Stream	
Atos Prime(MXL)	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos Prime(MXL)	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos Prime(MXL)	2003	General	IMM(Immobilizer)	Special Function	Password
Atos Prime(MXL)	2003	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Atos Prime(MXL)	2002	General	ECM(Engine Control Module)	Version Information	
Atos Prime(MXL)	2002	General	ECM(Engine Control Module)	Read Fault Code	
Atos Prime(MXL)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos Prime(MXL)	2002	General	ECM(Engine Control Module)	Read Data Stream	
Atos Prime(MXL)	2002	General	ECM(Engine Control Module)	Actuation Test	
Atos Prime(MXL)	2002	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos Prime(MXL)	2002	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos Prime(MXL)	2002	General	ECM(Engine Control Module)	Read FreezeData	
Atos Prime(MXL)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
Atos Prime(MXL)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos Prime(MXL)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
Atos Prime(MXL)	2002	General	TCM(Transmission Control Module)	Actuation Test	
Atos Prime(MXL)	2002	General	ABS(Anti-lock Braking System)	Version Information	
Atos Prime(MXL)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos Prime(MXL)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos Prime(MXL)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos Prime(MXL)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos Prime(MXL)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos Prime(MXL)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos Prime(MXL)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Atos Prime(MXL)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos Prime(MXL)	2002	General	IMM(Immobilizer)	Read Data Stream	
Atos Prime(MXL)	2002	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos Prime(MXL)	2002	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos Prime(MXL)	2002	General	IMM(Immobilizer)	Special Function	Password
Atos Prime(MXL)	2002	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Atos Prime(MXL)	2001	General	ECM(Engine Control Module)	Version Information	
Atos Prime(MXL)	2001	General	ECM(Engine Control Module)	Read Fault Code	
Atos Prime(MXL)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos Prime(MXL)	2001	General	ECM(Engine Control Module)	Read Data Stream	
Atos Prime(MXL)	2001	General	ECM(Engine Control Module)	Actuation Test	
Atos Prime(MXL)	2001	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos Prime(MXL)	2001	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos Prime(MXL)	2001	General	ECM(Engine Control Module)	Read FreezeData	
Atos Prime(MXL)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
Atos Prime(MXL)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos Prime(MXL)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
Atos Prime(MXL)	2001	General	TCM(Transmission Control Module)	Actuation Test	
Atos Prime(MXL)	2001	General	ABS(Anti-lock Braking System)	Version Information	
Atos Prime(MXL)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos Prime(MXL)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos Prime(MXL)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos Prime(MXL)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos Prime(MXL)	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos Prime(MXL)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos Prime(MXL)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos Prime(MXL)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos Prime(MXL)	2001	General	IMM(Immobilizer)	Read Data Stream	
Atos Prime(MXL)	2001	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Atos Prime(MXL)	2001	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos Prime(MXL)	2001	General	IMM(Immobilizer)	Special Function	Password
Atos Prime(MXL)	2001	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Atos Prime(MXL)	2000	General	ECM(Engine Control Module)	Version Information	
Atos Prime(MXL)	2000	General	ECM(Engine Control Module)	Read Fault Code	
Atos Prime(MXL)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos Prime(MXL)	2000	General	ECM(Engine Control Module)	Read Data Stream	
Atos Prime(MXL)	2000	General	ECM(Engine Control Module)	Actuation Test	
Atos Prime(MXL)	2000	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos Prime(MXL)	2000	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos Prime(MXL)	2000	General	ECM(Engine Control Module)	Read FreezeData	
Atos Prime(MXL)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
Atos Prime(MXL)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos Prime(MXL)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
Atos Prime(MXL)	2000	General	TCM(Transmission Control Module)	Actuation Test	
Atos Prime(MXL)	2000	General	ABS(Anti-lock Braking System)	Version Information	
Atos Prime(MXL)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos Prime(MXL)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos Prime(MXL)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos Prime(MXL)	2000	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos Prime(MXL)	2000	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos Prime(MXL)	2000	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos Prime(MXL)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos Prime(MXL)	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos Prime(MXL)	2000	General	IMM(Immobilizer)	Read Data Stream	
Atos Prime(MXL)	2000	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos Prime(MXL)	2000	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos Prime(MXL)	2000	General	IMM(Immobilizer)	Special Function	Password
Atos Prime(MXL)	2000	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Atos Prime(MXL)	2000	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Atos(MX)	2004	General	ECM(Engine Control Module)	Version Information	
Atos(MX)	2004	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MX)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MX)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MX)	2004	General	ECM(Engine Control Module)	Actuation Test	
Atos(MX)	2004	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MX)	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MX)	2004	General	ECM(Engine Control Module)	Read FreezeData	
Atos(MX)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MX)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MX)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MX)	2004	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MX)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MX)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MX)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MX)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MX)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MX)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MX)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MX)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MX)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MX)	2004	General	IMM(Immobilizer)	Read Data Stream	
Atos(MX)	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MX)	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MX)	2004	General	IMM(Immobilizer)	Special Function	Password
Atos(MX)	2004	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Atos(MX)	2004	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MX)	2003	General	ECM(Engine Control Module)	Version Information	
Atos(MX)	2003	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MX)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Atos(MX)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MX)	2003	General	ECM(Engine Control Module)	Actuation Test	
Atos(MX)	2003	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MX)	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MX)	2003	General	ECM(Engine Control Module)	Read FreezeData	
Atos(MX)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MX)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MX)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MX)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MX)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MX)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MX)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MX)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MX)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MX)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MX)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MX)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MX)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MX)	2003	General	IMM(Immobilizer)	Read Data Stream	
Atos(MX)	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MX)	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MX)	2003	General	IMM(Immobilizer)	Special Function	Password
Atos(MX)	2003	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Atos(MX)	2003	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MX)	2002	General	ECM(Engine Control Module)	Version Information	
Atos(MX)	2002	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MX)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MX)	2002	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MX)	2002	General	ECM(Engine Control Module)	Actuation Test	
Atos(MX)	2002	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Atos(MX)	2002	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MX)	2002	General	ECM(Engine Control Module)	Read FreezeData	
Atos(MX)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MX)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MX)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MX)	2002	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MX)	2002	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MX)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MX)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MX)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MX)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MX)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MX)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MX)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MX)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MX)	2002	General	IMM(Immobilizer)	Read Data Stream	
Atos(MX)	2002	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MX)	2002	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MX)	2002	General	IMM(Immobilizer)	Special Function	Password
Atos(MX)	2002	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Atos(MX)	2002	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MX)	2001	General	ECM(Engine Control Module)	Version Information	
Atos(MX)	2001	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MX)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MX)	2001	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MX)	2001	General	ECM(Engine Control Module)	Actuation Test	
Atos(MX)	2001	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MX)	2001	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MX)	2001	General	ECM(Engine Control Module)	Read FreezeData	
Atos(MX)	2001	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Atos(MX)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MX)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MX)	2001	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MX)	2001	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MX)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MX)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MX)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MX)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MX)	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MX)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MX)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MX)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MX)	2001	General	IMM(Immobilizer)	Read Data Stream	
Atos(MX)	2001	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MX)	2001	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MX)	2001	General	IMM(Immobilizer)	Special Function	Password
Atos(MX)	2001	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Atos(MX)	2001	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MX)	2000	General	ECM(Engine Control Module)	Version Information	
Atos(MX)	2000	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MX)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MX)	2000	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MX)	2000	General	ECM(Engine Control Module)	Actuation Test	
Atos(MX)	2000	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MX)	2000	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MX)	2000	General	ECM(Engine Control Module)	Read FreezeData	
Atos(MX)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MX)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MX)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MX)	2000	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Atos(MX)	2000	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MX)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MX)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MX)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MX)	2000	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MX)	2000	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MX)	2000	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MX)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MX)	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MX)	2000	General	IMM(Immobilizer)	Read Data Stream	
Atos(MX)	2000	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MX)	2000	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MX)	2000	General	IMM(Immobilizer)	Special Function	Password
Atos(MX)	2000	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Atos(MX)	2000	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MX)	1999	General	ECM(Engine Control Module)	Version Information	
Atos(MX)	1999	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MX)	1999	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MX)	1999	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MX)	1999	General	ECM(Engine Control Module)	Actuation Test	
Atos(MX)	1999	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MX)	1999	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MX)	1999	General	ECM(Engine Control Module)	Read FreezeData	
Atos(MX)	1999	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MX)	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MX)	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MX)	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MX)	1999	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MX)	1999	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MX)	1999	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Atos(MX)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MX)	1999	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MX)	1999	General	IMM(Immobilizer)	Read Data Stream	
Atos(MX)	1999	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MX)	1999	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MX)	1999	General	IMM(Immobilizer)	Special Function	Password
Atos(MX)	1999	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Atos(MX)	1999	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MX)	1998	General	ECM(Engine Control Module)	Version Information	
Atos(MX)	1998	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MX)	1998	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MX)	1998	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MX)	1998	General	ECM(Engine Control Module)	Actuation Test	
Atos(MX)	1998	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MX)	1998	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MX)	1998	General	ECM(Engine Control Module)	Read FreezeData	
Atos(MX)	1998	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MX)	1998	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MX)	1998	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MX)	1998	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MX)	1998	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MX)	1998	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MX)	1998	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MX)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MX)	1998	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MX)	1998	General	IMM(Immobilizer)	Read Data Stream	
Atos(MX)	1998	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MX)	1998	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MX)	1998	General	IMM(Immobilizer)	Special Function	Password
Atos(MX)	1998	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Atos(MX)	1998	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Atos(MXI)-PDF	2013	General	ECM(Engine Control Module)	Version Information	
Atos(MXI)-PDF	2013	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MXI)-PDF	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2013	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MXI)-PDF	2013	General	ECM(Engine Control Module)	Actuation Test	
Atos(MXI)-PDF	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MXI)-PDF	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MXI)-PDF	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MXI)-PDF	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MXI)-PDF	2013	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MXI)-PDF	2013	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MXI)-PDF	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MXI)-PDF	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MXI)-PDF	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MXI)-PDF	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MXI)-PDF	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MXI)-PDF	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MXI)-PDF	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MXI)-PDF	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MXI)-PDF	2013	General	IMM(Immobilizer)	Read Data Stream	
Atos(MXI)-PDF	2013	General	IMM(Immobilizer)	Special Function	Password
Atos(MXI)-PDF	2013	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Atos(MXI)-PDF	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MXI)-PDF	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MXI)-PDF	2013	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MXI)-PDF	2012	General	ECM(Engine Control Module)	Version Information	
Atos(MXI)-PDF	2012	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MXI)-PDF	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2012	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Atos(MXI)-PDF	2012	General	ECM(Engine Control Module)	Actuation Test	
Atos(MXI)-PDF	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MXI)-PDF	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MXI)-PDF	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MXI)-PDF	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MXI)-PDF	2012	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MXI)-PDF	2012	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MXI)-PDF	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MXI)-PDF	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MXI)-PDF	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MXI)-PDF	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MXI)-PDF	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MXI)-PDF	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MXI)-PDF	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MXI)-PDF	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MXI)-PDF	2012	General	IMM(Immobilizer)	Read Data Stream	
Atos(MXI)-PDF	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Atos(MXI)-PDF	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MXI)-PDF	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MXI)-PDF	2012	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MXI)-PDF	2011	General	ECM(Engine Control Module)	Version Information	
Atos(MXI)-PDF	2011	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MXI)-PDF	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2011	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MXI)-PDF	2011	General	ECM(Engine Control Module)	Actuation Test	
Atos(MXI)-PDF	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MXI)-PDF	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MXI)-PDF	2011	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Atos(MXI)-PDF	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MXI)-PDF	2011	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MXI)-PDF	2011	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MXI)-PDF	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MXI)-PDF	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MXI)-PDF	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MXI)-PDF	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MXI)-PDF	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MXI)-PDF	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MXI)-PDF	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MXI)-PDF	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MXI)-PDF	2011	General	IMM(Immobilizer)	Read Data Stream	
Atos(MXI)-PDF	2011	General	IMM(Immobilizer)	Special Function	Password
Atos(MXI)-PDF	2011	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Atos(MXI)-PDF	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MXI)-PDF	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MXI)-PDF	2011	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MXI)-PDF	2010	General	ECM(Engine Control Module)	Version Information	
Atos(MXI)-PDF	2010	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MXI)-PDF	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2010	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MXI)-PDF	2010	General	ECM(Engine Control Module)	Actuation Test	
Atos(MXI)-PDF	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MXI)-PDF	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MXI)-PDF	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MXI)-PDF	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MXI)-PDF	2010	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MXI)-PDF	2010	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Atos(MXI)-PDF	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MXI)-PDF	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MXI)-PDF	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MXI)-PDF	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MXI)-PDF	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MXI)-PDF	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MXI)-PDF	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MXI)-PDF	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MXI)-PDF	2010	General	IMM(Immobilizer)	Read Data Stream	
Atos(MXI)-PDF	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Atos(MXI)-PDF	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MXI)-PDF	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MXI)-PDF	2010	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MXI)-PDF	2009	General	ECM(Engine Control Module)	Version Information	
Atos(MXI)-PDF	2009	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MXI)-PDF	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2009	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MXI)-PDF	2009	General	ECM(Engine Control Module)	Actuation Test	
Atos(MXI)-PDF	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MXI)-PDF	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MXI)-PDF	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MXI)-PDF	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MXI)-PDF	2009	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MXI)-PDF	2009	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MXI)-PDF	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MXI)-PDF	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MXI)-PDF	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MXI)-PDF	2009	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Atos(MXI)-PDF	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MXI)-PDF	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MXI)-PDF	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MXI)-PDF	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MXI)-PDF	2009	General	IMM(Immobilizer)	Read Data Stream	
Atos(MXI)-PDF	2009	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Atos(MXI)-PDF	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MXI)-PDF	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MXI)-PDF	2009	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MXI)-PDF	2008	General	ECM(Engine Control Module)	Version Information	
Atos(MXI)-PDF	2008	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MXI)-PDF	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2008	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MXI)-PDF	2008	General	ECM(Engine Control Module)	Actuation Test	
Atos(MXI)-PDF	2008	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MXI)-PDF	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MXI)-PDF	2008	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MXI)-PDF	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2008	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MXI)-PDF	2008	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MXI)-PDF	2008	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MXI)-PDF	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MXI)-PDF	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MXI)-PDF	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MXI)-PDF	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MXI)-PDF	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MXI)-PDF	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MXI)-PDF	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MXI)-PDF	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Atos(MXI)-PDF	2008	General	IMM(Immobilizer)	Read Data Stream	
Atos(MXI)-PDF	2008	General	IMM(Immobilizer)	Special Function	Password
Atos(MXI)-PDF	2008	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Atos(MXI)-PDF	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MXI)-PDF	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MXI)-PDF	2008	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MXI)-PDF	2007	General	ECM(Engine Control Module)	Version Information	
Atos(MXI)-PDF	2007	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MXI)-PDF	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2007	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MXI)-PDF	2007	General	ECM(Engine Control Module)	Actuation Test	
Atos(MXI)-PDF	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MXI)-PDF	2007	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MXI)-PDF	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MXI)-PDF	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MXI)-PDF	2007	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MXI)-PDF	2007	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MXI)-PDF	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MXI)-PDF	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MXI)-PDF	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MXI)-PDF	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MXI)-PDF	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MXI)-PDF	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MXI)-PDF	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MXI)-PDF	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MXI)-PDF	2007	General	IMM(Immobilizer)	Read Data Stream	
Atos(MXI)-PDF	2007	General	IMM(Immobilizer)	Special Function	Password
Atos(MXI)-PDF	2007	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Atos(MXI)-PDF	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MXI)-PDF	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Atos(MXI)-PDF	2007	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MXI)-PDF	2006	General	ECM(Engine Control Module)	Version Information	
Atos(MXI)-PDF	2006	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MXI)-PDF	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2006	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MXI)-PDF	2006	General	ECM(Engine Control Module)	Actuation Test	
Atos(MXI)-PDF	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MXI)-PDF	2006	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MXI)-PDF	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MXI)-PDF	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MXI)-PDF	2006	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MXI)-PDF	2006	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MXI)-PDF	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MXI)-PDF	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MXI)-PDF	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MXI)-PDF	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MXI)-PDF	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MXI)-PDF	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MXI)-PDF	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MXI)-PDF	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MXI)-PDF	2006	General	IMM(Immobilizer)	Read Data Stream	
Atos(MXI)-PDF	2006	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Atos(MXI)-PDF	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MXI)-PDF	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MXI)-PDF	2006	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MXI)-PDF	2005	General	ECM(Engine Control Module)	Version Information	
Atos(MXI)-PDF	2005	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MXI)-PDF	2005	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Atos(MXI)-PDF	2005	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MXI)-PDF	2005	General	ECM(Engine Control Module)	Actuation Test	
Atos(MXI)-PDF	2005	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MXI)-PDF	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MXI)-PDF	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MXI)-PDF	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MXI)-PDF	2005	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MXI)-PDF	2005	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MXI)-PDF	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MXI)-PDF	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MXI)-PDF	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MXI)-PDF	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MXI)-PDF	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MXI)-PDF	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MXI)-PDF	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MXI)-PDF	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MXI)-PDF	2005	General	IMM(Immobilizer)	Read Data Stream	
Atos(MXI)-PDF	2005	General	IMM(Immobilizer)	Special Function	Password
Atos(MXI)-PDF	2005	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Atos(MXI)-PDF	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MXI)-PDF	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MXI)-PDF	2005	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MXI)-PDF	2004	General	ECM(Engine Control Module)	Version Information	
Atos(MXI)-PDF	2004	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MXI)-PDF	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2004	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MXI)-PDF	2004	General	ECM(Engine Control Module)	Actuation Test	
Atos(MXI)-PDF	2004	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MXI)-PDF	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Atos(MXI)-PDF	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MXI)-PDF	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MXI)-PDF	2004	General	TCM(Transmission Control Module)	Actuation Test	
Atos(MXI)-PDF	2004	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MXI)-PDF	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MXI)-PDF	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MXI)-PDF	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MXI)-PDF	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MXI)-PDF	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MXI)-PDF	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MXI)-PDF	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MXI)-PDF	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MXI)-PDF	2004	General	IMM(Immobilizer)	Read Data Stream	
Atos(MXI)-PDF	2004	General	IMM(Immobilizer)	Special Function	password Teaching/Charging
Atos(MXI)-PDF	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MXI)-PDF	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MXI)-PDF	2004	General	IMM(Immobilizer)	Special Function	Teaching
Atos(MXI)-PDF	2003	General	ECM(Engine Control Module)	Version Information	
Atos(MXI)-PDF	2003	General	ECM(Engine Control Module)	Read Fault Code	
Atos(MXI)-PDF	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2003	General	ECM(Engine Control Module)	Read Data Stream	
Atos(MXI)-PDF	2003	General	ECM(Engine Control Module)	Actuation Test	
Atos(MXI)-PDF	2003	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Atos(MXI)-PDF	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Atos(MXI)-PDF	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Atos(MXI)-PDF	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Atos(MXI)-PDF	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Atos(MXI)-PDF	2003	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Atos(MXI)-PDF	2003	General	ABS(Anti-lock Braking System)	Version Information	
Atos(MXI)-PDF	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Atos(MXI)-PDF	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Atos(MXI)-PDF	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Atos(MXI)-PDF	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Atos(MXI)-PDF	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Atos(MXI)-PDF	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Atos(MXI)-PDF	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Atos(MXI)-PDF	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Atos(MXI)-PDF	2003	General	IMM(Immobilizer)	Read Data Stream	
Atos(MXI)-PDF	2003	General	IMM(Immobilizer)	Special Function	Password
Atos(MXI)-PDF	2003	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Atos(MXI)-PDF	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Atos(MXI)-PDF	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Atos(MXI)-PDF	2003	General	IMM(Immobilizer)	Special Function	Teaching
Atos(Old)	2001	General	UNLEAD GEN	Version Information	
Atos(Old)	2001	General	UNLEAD GEN	Read Fault Code	
Atos(Old)	2001	General	UNLEAD GEN	Clear Fault Memory	
Atos(Old)	2001	General	UNLEAD GEN	Read Data Stream	
Atos(Old)	2001	General	UNLEAD GEN	Actuation Test	
Atos(Old)	2001	General	UNLEAD EOBD	Read Fault Code	
Atos(Old)	2001	General	UNLEAD EOBD	Clear Fault Memory	
Atos(Old)	2001	General	UNLEAD EOBD	Read Data Stream	
Atos(Old)	2001	General	UNLEAD MEX	Read Fault Code	
Atos(Old)	2001	General	UNLEAD MEX	Clear Fault Memory	
Atos(Old)	2001	General	UNLEAD MEX	Read Data Stream	
Atos(Old)	2001	General	UNLEAD IMM	Read Fault Code	
Atos(Old)	2001	General	UNLEAD IMM	Clear Fault Memory	
Atos(Old)	2001	General	UNLEAD IMM	Read Data Stream	
Atos(Old)	2001	General	UNLEAD IMM	Actuation Test	

model	year	area	system	function	subfunction
Atos(Old)	2001	General	LEAD ALL	Read Fault Code	
Atos(Old)	2001	General	LEAD ALL	Clear Fault Memory	
Atos(Old)	2001	General	LEAD ALL	Read Data Stream	
Atos(Old)	2001	General	LEAD ALL	Actuation Test	
Atos(Old)	2001	General	UNLEAD GEN(SANTRO)	Read Fault Code	
Atos(Old)	2001	General	UNLEAD GEN(SANTRO)	Clear Fault Memory	
Atos(Old)	2001	General	UNLEAD GEN(SANTRO)	Read Data Stream	
Atos(Old)	2001	General	UNLEAD GEN(SANTRO)	Actuation Test	
Atos(Old)	2001	General	LEAD GEN(SANTRO)	Read Fault Code	
Atos(Old)	2001	General	LEAD GEN(SANTRO)	Clear Fault Memory	
Atos(Old)	2001	General	LEAD GEN(SANTRO)	Read Data Stream	
Atos(Old)	2001	General	LEAD GEN(SANTRO)	Actuation Test	
Atos(Old)	2001	General		Read Fault Code	
Atos(Old)	2001	General		Clear Fault Memory	
Atos(Old)	2001	General		Read Data Stream	
Atos(Old)	2001	General		Actuation Test	
Atos(Old)	2001	General		Version Information	
Atos(Old)	2001	General		Special Function	PASSWORD
Atos(Old)	2001	General		Special Function	TEACHING/CHANGING
Atos(Old)	2001	General		Special Function	TEACHING
Atos(Old)	2001	General		Special Function	NEUTRAL MODE
Atos(Old)	2001	General		Special Function	LIMP HOME MODE
Atos(Old)	2000	General	UNLEAD GEN	Version Information	
Atos(Old)	2000	General	UNLEAD GEN	Read Fault Code	
Atos(Old)	2000	General	UNLEAD GEN	Clear Fault Memory	
Atos(Old)	2000	General	UNLEAD GEN	Read Data Stream	
Atos(Old)	2000	General	UNLEAD GEN	Actuation Test	
Atos(Old)	2000	General	UNLEAD EOBD	Read Fault Code	
Atos(Old)	2000	General	UNLEAD EOBD	Clear Fault Memory	
Atos(Old)	2000	General	UNLEAD EOBD	Read Data Stream	

model	year	area	system	function	subfunction
Atos(Old)	2000	General	UNLEAD MEX	Read Fault Code	
Atos(Old)	2000	General	UNLEAD MEX	Clear Fault Memory	
Atos(Old)	2000	General	UNLEAD MEX	Read Data Stream	
Atos(Old)	2000	General	UNLEAD IMM	Read Fault Code	
Atos(Old)	2000	General	UNLEAD IMM	Clear Fault Memory	
Atos(Old)	2000	General	UNLEAD IMM	Read Data Stream	
Atos(Old)	2000	General	UNLEAD IMM	Actuation Test	
Atos(Old)	2000	General	LEAD ALL	Read Fault Code	
Atos(Old)	2000	General	LEAD ALL	Clear Fault Memory	
Atos(Old)	2000	General	LEAD ALL	Read Data Stream	
Atos(Old)	2000	General	LEAD ALL	Actuation Test	
Atos(Old)	2000	General	UNLEAD GEN(SANTRO)	Read Fault Code	
Atos(Old)	2000	General	UNLEAD GEN(SANTRO)	Clear Fault Memory	
Atos(Old)	2000	General	UNLEAD GEN(SANTRO)	Read Data Stream	
Atos(Old)	2000	General	UNLEAD GEN(SANTRO)	Actuation Test	
Atos(Old)	2000	General	LEAD GEN(SANTRO)	Read Fault Code	
Atos(Old)	2000	General	LEAD GEN(SANTRO)	Clear Fault Memory	
Atos(Old)	2000	General	LEAD GEN(SANTRO)	Read Data Stream	
Atos(Old)	2000	General	LEAD GEN(SANTRO)	Actuation Test	
Atos(Old)	2000	General		Read Fault Code	
Atos(Old)	2000	General		Clear Fault Memory	
Atos(Old)	2000	General		Read Data Stream	
Atos(Old)	2000	General		Actuation Test	
Atos(Old)	2000	General		Version Information	
Atos(Old)	2000	General		Special Function	PASSWORD
Atos(Old)	2000	General		Special Function	TEACHING\CHANGING
Atos(Old)	2000	General		Special Function	TEACHING
Atos(Old)	2000	General		Special Function	NEUTRAL MODE
Atos(Old)	2000	General		Special Function	LIMP HOME MODE
Atos(Old)	1999	General	UNLEAD GEN	Version Information	

model	year	area	system	function	subfunction
Atos(Old)	1999	General	UNLEAD GEN	Read Fault Code	
Atos(Old)	1999	General	UNLEAD GEN	Clear Fault Memory	
Atos(Old)	1999	General	UNLEAD GEN	Read Data Stream	
Atos(Old)	1999	General	UNLEAD GEN	Actuation Test	
Atos(Old)	1999	General	UNLEAD EOBD	Read Fault Code	
Atos(Old)	1999	General	UNLEAD EOBD	Clear Fault Memory	
Atos(Old)	1999	General	UNLEAD EOBD	Read Data Stream	
Atos(Old)	1999	General	UNLEAD MEX	Read Fault Code	
Atos(Old)	1999	General	UNLEAD MEX	Clear Fault Memory	
Atos(Old)	1999	General	UNLEAD MEX	Read Data Stream	
Atos(Old)	1999	General	UNLEAD IMM	Read Fault Code	
Atos(Old)	1999	General	UNLEAD IMM	Clear Fault Memory	
Atos(Old)	1999	General	UNLEAD IMM	Read Data Stream	
Atos(Old)	1999	General	UNLEAD IMM	Actuation Test	
Atos(Old)	1999	General	LEAD ALL	Read Fault Code	
Atos(Old)	1999	General	LEAD ALL	Clear Fault Memory	
Atos(Old)	1999	General	LEAD ALL	Read Data Stream	
Atos(Old)	1999	General	LEAD ALL	Actuation Test	
Atos(Old)	1999	General	UNLEAD GEN(SANTRO)	Read Fault Code	
Atos(Old)	1999	General	UNLEAD GEN(SANTRO)	Clear Fault Memory	
Atos(Old)	1999	General	UNLEAD GEN(SANTRO)	Read Data Stream	
Atos(Old)	1999	General	UNLEAD GEN(SANTRO)	Actuation Test	
Atos(Old)	1999	General	LEAD GEN(SANTRO)	Read Fault Code	
Atos(Old)	1999	General	LEAD GEN(SANTRO)	Clear Fault Memory	
Atos(Old)	1999	General	LEAD GEN(SANTRO)	Read Data Stream	
Atos(Old)	1999	General	LEAD GEN(SANTRO)	Actuation Test	
Atos(Old)	1999	General		Read Fault Code	
Atos(Old)	1999	General		Clear Fault Memory	
Atos(Old)	1999	General		Read Data Stream	

model	year	area	system	function	subfunction
Atos(Old)	1999	General		Actuation Test	
Atos(Old)	1999	General		Version Information	
Atos(Old)	1999	General		Special Function	PASSWORD
Atos(Old)	1999	General		Special Function	TEACHING\CHANGING TEACHING
Atos(Old)	1999	General		Special Function	NEUTRAL MODE
Atos(Old)	1999	General		Special Function	LIMP HOME MODE
Atos(Old)	1998	General	UNLEAD GEN	Version Information	
Atos(Old)	1998	General	UNLEAD GEN	Read Fault Code	
Atos(Old)	1998	General	UNLEAD GEN	Clear Fault Memory	
Atos(Old)	1998	General	UNLEAD GEN	Read Data Stream	
Atos(Old)	1998	General	UNLEAD GEN	Actuation Test	
Atos(Old)	1998	General	UNLEAD EOBD	Read Fault Code	
Atos(Old)	1998	General	UNLEAD EOBD	Clear Fault Memory	
Atos(Old)	1998	General	UNLEAD EOBD	Read Data Stream	
Atos(Old)	1998	General	UNLEAD MEX	Read Fault Code	
Atos(Old)	1998	General	UNLEAD MEX	Clear Fault Memory	
Atos(Old)	1998	General	UNLEAD MEX	Read Data Stream	
Atos(Old)	1998	General	UNLEAD IMM	Read Fault Code	
Atos(Old)	1998	General	UNLEAD IMM	Clear Fault Memory	
Atos(Old)	1998	General	UNLEAD IMM	Read Data Stream	
Atos(Old)	1998	General	UNLEAD IMM	Actuation Test	
Atos(Old)	1998	General	LEAD ALL	Read Fault Code	
Atos(Old)	1998	General	LEAD ALL	Clear Fault Memory	
Atos(Old)	1998	General	LEAD ALL	Read Data Stream	
Atos(Old)	1998	General	LEAD ALL	Actuation Test	
Atos(Old)	1998	General	UNLEAD GEN(SANTRO)	Read Fault Code	
Atos(Old)	1998	General	UNLEAD GEN(SANTRO)	Clear Fault Memory	
Atos(Old)	1998	General	UNLEAD GEN(SANTRO)	Read Data Stream	
Atos(Old)	1998	General	UNLEAD GEN(SANTRO)	Actuation Test	

model	year	area	system	function	subfunction
Atos(Old)	1998	General	LEAD GEN(SANTRO)	Read Fault Code	
Atos(Old)	1998	General	LEAD GEN(SANTRO)	Clear Fault Memory	
Atos(Old)	1998	General	LEAD GEN(SANTRO)	Read Data Stream	
Atos(Old)	1998	General	LEAD GEN(SANTRO)	Actuation Test	
Atos(Old)	1998	General		Read Fault Code	
Atos(Old)	1998	General		Clear Fault Memory	
Atos(Old)	1998	General		Read Data Stream	
Atos(Old)	1998	General		Actuation Test	
Atos(Old)	1998	General		Version Information	
Atos(Old)	1998	General		Special Function	PASSWORD
Atos(Old)	1998	General		Special Function	TEACHING\CHANGING
Atos(Old)	1998	General		Special Function	TEACHING
Atos(Old)	1998	General		Special Function	NEUTRAL MODE
Atos(Old)	1998	General		Special Function	LIMP HOME MODE
Creta(GS)	2018	General	ECM(Engine Control Module)	Version Information	
Creta(GS)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Creta(GS)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Creta(GS)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Creta(GS)	2018	General	ECM(Engine Control Module)	Actuation Test	
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Creta(GS)	2018	General	TCM(Transmission Control Module)	Version Information	
Creta(GS)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Creta(GS)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Creta(GS)	2018	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Creta(GS)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Creta(GS)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Creta(GS)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Creta(GS)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Creta(GS)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Creta(GS)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Creta(GS)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Creta(GS)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Creta(GS)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Creta(GS)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Creta(GS)	2018	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only
Creta(GS)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Creta(GS)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Creta(GS)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Creta(GS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Creta(GS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Creta(GS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Creta(GS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Creta(GS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Creta(GS)	2018	General	AC(Air Conditioning)	Version Information	
Creta(GS)	2018	General	AC(Air Conditioning)	Read Fault Code	
Creta(GS)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Creta(GS)	2018	General	AC(Air Conditioning)	Read Data Stream	
Creta(GS)	2018	General	AC(Air Conditioning)	Actuation Test	
Creta(GS)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Creta(GS)	2018	General	BCM(Body Control Module)	Version Information	
Creta(GS)	2018	General	BCM(Body Control Module)	Read Fault Code	
Creta(GS)	2018	General	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Creta(GS)	2018	General	BCM(Body Control Module)	Read Data Stream	
Creta(GS)	2018	General	BCM(Body Control Module)	Actuation Test	
Creta(GS)	2018	General	BCM(Body Control Module)	Special Function	User Option
Creta(GS)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Creta(GS)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Creta(GS)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Creta(GS)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Creta(GS)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Creta(GS)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Creta(GS)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Creta(GS)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Creta(GS)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Creta(GS)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Creta(GS)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Creta(GS)	2018	General	EPS(Electronic Power Steering)	Version Information	
Creta(GS)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Creta(GS)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Creta(GS)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Creta(GS)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Creta(GS)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Creta(GS)	2018	General	Smart Key Unit	Version Information	
Creta(GS)	2018	General	Smart Key Unit	Read Fault Code	
Creta(GS)	2018	General	Smart Key Unit	Clear Fault Memory	
Creta(GS)	2018	General	Smart Key Unit	Read Data Stream	
Creta(GS)	2018	General	Smart Key Unit	Actuation Test	
Creta(GS)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Creta(GS)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Creta(GS)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Creta(GS)	2018	General	Smart Key Unit	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Creta(GS)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Creta(GS)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Creta(GS)	2018	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Creta(GS)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Creta(GS)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Creta(GS)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Creta(GS)	2018	General	IMM(Immobilizer)	Read Data Stream	
Creta(GS)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Creta(GS)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Creta(GS)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Creta(GS)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Creta(GS)	2018	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Creta(GS)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Creta(GS)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Creta(GS)	2018	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Creta(GS)	2017	General	ECM(Engine Control Module)	Version Information	
Creta(GS)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Creta(GS)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Creta(GS)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Creta(GS)	2017	General	ECM(Engine Control Module)	Actuation Test	
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Creta(GS)	2017	General	TCM(Transmission Control Module)	Version Information	
Creta(GS)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Creta(GS)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Creta(GS)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Creta(GS)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Creta(GS)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Creta(GS)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Creta(GS)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Creta(GS)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Creta(GS)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Creta(GS)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Creta(GS)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Creta(GS)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Creta(GS)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC/Only)
Creta(GS)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Creta(GS)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Creta(GS)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Creta(GS)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Creta(GS)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Creta(GS)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Creta(GS)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Creta(GS)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Creta(GS)	2017	General	AC(Air Conditioning)	Version Information	
Creta(GS)	2017	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Creta(GS)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Creta(GS)	2017	General	AC(Air Conditioning)	Read Data Stream	
Creta(GS)	2017	General	AC(Air Conditioning)	Actuation Test	
Creta(GS)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Creta(GS)	2017	General	BCM(Body Control Module)	Version Information	
Creta(GS)	2017	General	BCM(Body Control Module)	Read Fault Code	
Creta(GS)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Creta(GS)	2017	General	BCM(Body Control Module)	Read Data Stream	
Creta(GS)	2017	General	BCM(Body Control Module)	Actuation Test	
Creta(GS)	2017	General	BCM(Body Control Module)	Special Function	User Option
Creta(GS)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Creta(GS)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Creta(GS)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Creta(GS)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Creta(GS)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Creta(GS)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Creta(GS)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Creta(GS)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Creta(GS)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Creta(GS)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Creta(GS)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Creta(GS)	2017	General	EPS(Electronic Power Steering)	Version Information	
Creta(GS)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Creta(GS)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Creta(GS)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Creta(GS)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Creta(GS)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Creta(GS)	2017	General	Smart Key Unit	Version Information	
Creta(GS)	2017	General	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
Creta(GS)	2017	General	Smart Key Unit	Clear Fault Memory	
Creta(GS)	2017	General	Smart Key Unit	Read Data Stream	
Creta(GS)	2017	General	Smart Key Unit	Actuation Test	
Creta(GS)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Creta(GS)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Creta(GS)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Creta(GS)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Creta(GS)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Creta(GS)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Creta(GS)	2017	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Creta(GS)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Creta(GS)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Creta(GS)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Creta(GS)	2017	General	IMM(Immobilizer)	Read Data Stream	
Creta(GS)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Creta(GS)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Creta(GS)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Creta(GS)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Creta(GS)	2017	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Creta(GS)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Creta(GS)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Creta(GS)	2017	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Creta(GS)	2016	General	ECM(Engine Control Module)	Version Information	
Creta(GS)	2016	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Creta(GS)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Creta(GS)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Creta(GS)	2016	General	ECM(Engine Control Module)	Actuation Test	
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Creta(GS)	2016	General	TCM(Transmission Control Module)	Version Information	
Creta(GS)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Creta(GS)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Creta(GS)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Creta(GS)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Creta(GS)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Creta(GS)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Creta(GS)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Creta(GS)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Creta(GS)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Creta(GS)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Creta(GS)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Creta(GS)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Creta(GS)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Creta(GS)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Creta(GS)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Creta(GS)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)

model	year	area	system	function	subfunction
Creta(GS)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Creta(GS)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Creta(GS)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Creta(GS)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Creta(GS)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Creta(GS)	2016	General	AC(Air Conditioning)	Version Information	
Creta(GS)	2016	General	AC(Air Conditioning)	Read Fault Code	
Creta(GS)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Creta(GS)	2016	General	AC(Air Conditioning)	Read Data Stream	
Creta(GS)	2016	General	AC(Air Conditioning)	Actuation Test	
Creta(GS)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Creta(GS)	2016	General	BCM(Body Control Module)	Version Information	
Creta(GS)	2016	General	BCM(Body Control Module)	Read Fault Code	
Creta(GS)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Creta(GS)	2016	General	BCM(Body Control Module)	Read Data Stream	
Creta(GS)	2016	General	BCM(Body Control Module)	Actuation Test	
Creta(GS)	2016	General	BCM(Body Control Module)	Special Function	User Option
Creta(GS)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Creta(GS)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Creta(GS)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Creta(GS)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Creta(GS)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Creta(GS)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Creta(GS)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Creta(GS)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Creta(GS)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Creta(GS)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Creta(GS)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Creta(GS)	2016	General	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Creta(GS)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Creta(GS)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Creta(GS)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Creta(GS)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Creta(GS)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Creta(GS)	2016	General	Smart Key Unit	Version Information	
Creta(GS)	2016	General	Smart Key Unit	Read Fault Code	
Creta(GS)	2016	General	Smart Key Unit	Clear Fault Memory	
Creta(GS)	2016	General	Smart Key Unit	Read Data Stream	
Creta(GS)	2016	General	Smart Key Unit	Actuation Test	
Creta(GS)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Creta(GS)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Creta(GS)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Creta(GS)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Creta(GS)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Creta(GS)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Creta(GS)	2016	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Creta(GS)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Creta(GS)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Creta(GS)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Creta(GS)	2016	General	IMM(Immobilizer)	Read Data Stream	
Creta(GS)	2016	General	IMM(Immobilizer)	Special Function	Password
Creta(GS)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Creta(GS)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Creta(GS)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Creta(GS)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Creta(GS)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Creta(GS)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Creta(GS)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Creta(GS)	2016	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Creta(GS)	2015	General	ECM(Engine Control Module)	Version Information	
Creta(GS)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Creta(GS)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Creta(GS)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Creta(GS)	2015	General	ECM(Engine Control Module)	Actuation Test	
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Creta(GS)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Creta(GS)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Creta(GS)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Creta(GS)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Creta(GS)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Creta(GS)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC)Only
Creta(GS)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Creta(GS)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Creta(GS)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Creta(GS)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Creta(GS)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Creta(GS)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Creta(GS)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Creta(GS)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Creta(GS)	2015	General	AC(Air Conditioning)	Version Information	
Creta(GS)	2015	General	AC(Air Conditioning)	Read Fault Code	
Creta(GS)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Creta(GS)	2015	General	AC(Air Conditioning)	Read Data Stream	
Creta(GS)	2015	General	AC(Air Conditioning)	Actuation Test	
Creta(GS)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Creta(GS)	2015	General	BCM(Body Control Module)	Version Information	
Creta(GS)	2015	General	BCM(Body Control Module)	Read Fault Code	
Creta(GS)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Creta(GS)	2015	General	BCM(Body Control Module)	Read Data Stream	
Creta(GS)	2015	General	BCM(Body Control Module)	Actuation Test	
Creta(GS)	2015	General	BCM(Body Control Module)	Special Function	User Option
Creta(GS)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Creta(GS)	2015	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Creta(GS)	2015	General	EPS(Electronic Power Steering)	Version Information	
Creta(GS)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Creta(GS)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Creta(GS)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Creta(GS)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Creta(GS)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Creta(GS)	2015	General	Smart Key Unit	Version Information	
Creta(GS)	2015	General	Smart Key Unit	Read Fault Code	
Creta(GS)	2015	General	Smart Key Unit	Clear Fault Memory	
Creta(GS)	2015	General	Smart Key Unit	Read Data Stream	
Creta(GS)	2015	General	Smart Key Unit	Actuation Test	
Creta(GS)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Creta(GS)	2015	General	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Creta(GS)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Creta(GS)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Creta(GS)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Creta(GS)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Creta(GS)	2015	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Creta(GS)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Creta(GS)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Creta(GS)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Creta(GS)	2015	General	IMM(Immobilizer)	Read Data Stream	
Creta(GS)	2015	General	IMM(Immobilizer)	Special Function	Password
Creta(GS)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Creta(GS)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Creta(GS)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Creta(GS)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Creta(GS)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Creta(GS)	2015	General	CODE(Transmitter Code Saving)	Read Data Stream	
Creta(GS)	2015	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Creta(GS)	2015	General	TCM(Transmission Control Module)	Version Information	
Creta(GS)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Creta(GS)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Creta(GS)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Creta(GS)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Creta(GS)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Creta(GS)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Creta(GS)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Creta(GS)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Creta(GSB)	2018	General	ECM(Engine Control Module)	Version Information	
Creta(GSB)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Creta(GSB)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Creta(GSB)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Creta(GSB)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Creta(GSB)	2018	General	ECM(Engine Control Module)	Actuation Test	
Creta(GSB)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Creta(GSB)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Creta(GSB)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Creta(GSB)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Creta(GSB)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Creta(GSB)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Creta(GSB)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Creta(GSB)	2018	General	TCM(Transmission Control Module)	Version Information	
Creta(GSB)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Creta(GSB)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Creta(GSB)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Creta(GSB)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Creta(GSB)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Creta(GSB)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Creta(GSB)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Creta(GSB)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Creta(GSB)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Creta(GSB)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Creta(GSB)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Creta(GSB)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Creta(GSB)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Creta(GSB)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Creta(GSB)	2018	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Creta(GSB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Creta(GSB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Creta(GSB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Creta(GSB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Creta(GSB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Creta(GSB)	2018	General	AC(Air Conditioning)	Version Information	
Creta(GSB)	2018	General	AC(Air Conditioning)	Read Fault Code	
Creta(GSB)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Creta(GSB)	2018	General	AC(Air Conditioning)	Read Data Stream	
Creta(GSB)	2018	General	AC(Air Conditioning)	Actuation Test	
Creta(GSB)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Test)
Creta(GSB)	2018	General	BCM(Body Control Module)	Version Information	
Creta(GSB)	2018	General	BCM(Body Control Module)	Read Fault Code	
Creta(GSB)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Creta(GSB)	2018	General	BCM(Body Control Module)	Read Data Stream	
Creta(GSB)	2018	General	BCM(Body Control Module)	Actuation Test	
Creta(GSB)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Creta(GSB)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Creta(GSB)	2018	General	BCM(Body Control Module)	Special Function	User Option
Creta(GSB)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
Creta(GSB)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
Creta(GSB)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
Creta(GSB)	2018	General	EPS(Electronic Power Steering)	Version Information	
Creta(GSB)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Creta(GSB)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Creta(GSB)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Creta(GSB)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Creta(GSB)	2018	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Creta(GSB)	2018	General	Smart Key Unit	Version Information	
Creta(GSB)	2018	General	Smart Key Unit	Read Fault Code	
Creta(GSB)	2018	General	Smart Key Unit	Clear Fault Memory	
Creta(GSB)	2018	General	Smart Key Unit	Read Data Stream	
Creta(GSB)	2018	General	Smart Key Unit	Actuation Test	
Creta(GSB)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Creta(GSB)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Creta(GSB)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Creta(GSB)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Creta(GSB)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Creta(GSB)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Creta(GSB)	2018	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Creta(GSB)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Creta(GSB)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Creta(GSB)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Creta(GSB)	2018	General	Parking Guide System	Version Information	
Creta(GSB)	2018	General	Parking Guide System	Read Fault Code	
Creta(GSB)	2018	General	Parking Guide System	Clear Fault Memory	
Creta(GSB)	2018	General	Parking Guide System	Read Data Stream	
Creta(GSB)	2018	General	IMM(Immobilizer)	Read Fault Code	
Creta(GSB)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Creta(GSB)	2018	General	IMM(Immobilizer)	Read Data Stream	
Creta(GSB)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Creta(GSB)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Creta(GSB)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Creta(GSB)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Creta(GSB)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Creta(GSB)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Creta(GSB)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Creta(GSB)	2018	General	ECM(Engine Control Module)	Special Function	Ethanol Value Checkentry
Creta(GSB)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Heating Injector Adaptive Value
Creta(GSR)	2018	General	ECM(Engine Control Module)	Version Information	
Creta(GSR)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Creta(GSR)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Creta(GSR)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Creta(GSR)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Creta(GSR)	2018	General	ECM(Engine Control Module)	Actuation Test	
Creta(GSR)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Creta(GSR)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Creta(GSR)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Creta(GSR)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Creta(GSR)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Creta(GSR)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Creta(GSR)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Creta(GSR)	2018	General	TCM(Transmission Control Module)	Version Information	
Creta(GSR)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Creta(GSR)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Creta(GSR)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Creta(GSR)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Creta(GSR)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Creta(GSR)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Creta(GSR)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Creta(GSR)	2018	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Creta(GSR)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Creta(GSR)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Creta(GSR)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Creta(GSR)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Creta(GSR)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Creta(GSR)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Creta(GSR)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Creta(GSR)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Creta(GSR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Creta(GSR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Creta(GSR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Creta(GSR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Creta(GSR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Creta(GSR)	2018	General	AC(Air Conditioning)	Version Information	
Creta(GSR)	2018	General	AC(Air Conditioning)	Read Fault Code	
Creta(GSR)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Creta(GSR)	2018	General	AC(Air Conditioning)	Read Data Stream	
Creta(GSR)	2018	General	AC(Air Conditioning)	Actuation Test	
Creta(GSR)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Creta(GSR)	2018	General	BCM(Body Control Module)	Version Information	
Creta(GSR)	2018	General	BCM(Body Control Module)	Read Fault Code	
Creta(GSR)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Creta(GSR)	2018	General	BCM(Body Control Module)	Read Data Stream	
Creta(GSR)	2018	General	BCM(Body Control Module)	Actuation Test	
Creta(GSR)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Creta(GSR)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Creta(GSR)	2018	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Creta(GSR)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
Creta(GSR)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
Creta(GSR)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
Creta(GSR)	2018	General	EPS(Electronic Power Steering)	Version Information	
Creta(GSR)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Creta(GSR)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Creta(GSR)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Creta(GSR)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Creta(GSR)	2018	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Creta(GSR)	2018	General	Driveshaft	Version Information	
Creta(GSR)	2018	General	Driveshaft	Read Fault Code	
Creta(GSR)	2018	General	Driveshaft	Clear Fault Memory	
Creta(GSR)	2018	General	Driveshaft	Read Data Stream	
Creta(GSR)	2018	General	Driveshaft	Actuation Test	
Creta(GSR)	2018	General	Driveshaft	Special Function	Clutch Learning Read
Creta(GSR)	2018	General	Driveshaft	Special Function	Clutch Learning Reset
Creta(GSR)	2018	General	Driveshaft	Special Function	Clutch Learning Write
Creta(GSR)	2018	General	Smart Key Unit	Version Information	
Creta(GSR)	2018	General	Smart Key Unit	Read Fault Code	
Creta(GSR)	2018	General	Smart Key Unit	Clear Fault Memory	
Creta(GSR)	2018	General	Smart Key Unit	Read Data Stream	
Creta(GSR)	2018	General	Smart Key Unit	Actuation Test	
Creta(GSR)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Creta(GSR)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Creta(GSR)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Creta(GSR)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Creta(GSR)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Creta(GSR)	2018	General	Smart Key Unit	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Creta(GSR)	2018	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Creta(GSR)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Creta(GSR)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Creta(GSR)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Creta(GSR)	2018	General	Parking Guide System	Version Information	
Creta(GSR)	2018	General	Parking Guide System	Read Fault Code	
Creta(GSR)	2018	General	Parking Guide System	Clear Fault Memory	
Creta(GSR)	2018	General	Parking Guide System	Read Data Stream	
Creta(GSR)	2018	General	Telematics Unit	Version Information	
Creta(GSR)	2018	General	Telematics Unit	Read Fault Code	
Creta(GSR)	2018	General	Telematics Unit	Clear Fault Memory	
Creta(GSR)	2018	General	IMM(Immobilizer)	Read Fault Code	
Creta(GSR)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Creta(GSR)	2018	General	IMM(Immobilizer)	Read Data Stream	
Creta(GSR)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Creta(GSR)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Creta(GSR)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Creta(GSR)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Creta(GSR)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Creta(GSR)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Creta(GSR)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Creta(GSR)	2017	General	ECM(Engine Control Module)	Version Information	
Creta(GSR)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Creta(GSR)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Creta(GSR)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Creta(GSR)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Creta(GSR)	2017	General	ECM(Engine Control Module)	Actuation Test	
Creta(GSR)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Creta(GSR)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Creta(GSR)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Creta(GSR)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Creta(GSR)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Creta(GSR)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Creta(GSR)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Creta(GSR)	2017	General	TCM(Transmission Control Module)	Version Information	
Creta(GSR)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Creta(GSR)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Creta(GSR)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Creta(GSR)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Creta(GSR)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Creta(GSR)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Creta(GSR)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Creta(GSR)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Creta(GSR)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Creta(GSR)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Creta(GSR)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Creta(GSR)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Creta(GSR)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Creta(GSR)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Creta(GSR)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Creta(GSR)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Creta(GSR)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Creta(GSR)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Creta(GSR)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Creta(GSR)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Creta(GSR)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Creta(GSR)	2017	General	AC(Air Conditioning)	Version Information	
Creta(GSR)	2017	General	AC(Air Conditioning)	Read Fault Code	
Creta(GSR)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Creta(GSR)	2017	General	AC(Air Conditioning)	Read Data Stream	
Creta(GSR)	2017	General	AC(Air Conditioning)	Actuation Test	
Creta(GSR)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Creta(GSR)	2017	General	BCM(Body Control Module)	Version Information	
Creta(GSR)	2017	General	BCM(Body Control Module)	Read Fault Code	
Creta(GSR)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Creta(GSR)	2017	General	BCM(Body Control Module)	Read Data Stream	
Creta(GSR)	2017	General	BCM(Body Control Module)	Actuation Test	
Creta(GSR)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Creta(GSR)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Creta(GSR)	2017	General	BCM(Body Control Module)	Special Function	User Option
Creta(GSR)	2017	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
Creta(GSR)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
Creta(GSR)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
Creta(GSR)	2017	General	EPS(Electronic Power Steering)	Version Information	
Creta(GSR)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Creta(GSR)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Creta(GSR)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Creta(GSR)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Creta(GSR)	2017	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Creta(GSR)	2017	General	Driveshaft	Version Information	
Creta(GSR)	2017	General	Driveshaft	Read Fault Code	
Creta(GSR)	2017	General	Driveshaft	Clear Fault Memory	
Creta(GSR)	2017	General	Driveshaft	Read Data Stream	
Creta(GSR)	2017	General	Driveshaft	Actuation Test	

model	year	area	system	function	subfunction
Creta(GSR)	2017	General	Driveshaft	Special Function	Clutch Learning Read
Creta(GSR)	2017	General	Driveshaft	Special Function	Clutch Learning Reset
Creta(GSR)	2017	General	Driveshaft	Special Function	Clutch Learning Write
Creta(GSR)	2017	General	Smart Key Unit	Version Information	
Creta(GSR)	2017	General	Smart Key Unit	Read Fault Code	
Creta(GSR)	2017	General	Smart Key Unit	Clear Fault Memory	
Creta(GSR)	2017	General	Smart Key Unit	Read Data Stream	
Creta(GSR)	2017	General	Smart Key Unit	Actuation Test	
Creta(GSR)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Creta(GSR)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Creta(GSR)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Creta(GSR)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Creta(GSR)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Creta(GSR)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Creta(GSR)	2017	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Creta(GSR)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Creta(GSR)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Creta(GSR)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Creta(GSR)	2017	General	Parking Guide System	Version Information	
Creta(GSR)	2017	General	Parking Guide System	Read Fault Code	
Creta(GSR)	2017	General	Parking Guide System	Clear Fault Memory	
Creta(GSR)	2017	General	Parking Guide System	Read Data Stream	
Creta(GSR)	2017	General	Telematics Unit	Version Information	
Creta(GSR)	2017	General	Telematics Unit	Read Fault Code	
Creta(GSR)	2017	General	Telematics Unit	Clear Fault Memory	
Creta(GSR)	2017	General	IMM(Immobilizer)	Read Fault Code	
Creta(GSR)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Creta(GSR)	2017	General	IMM(Immobilizer)	Read Data Stream	
Creta(GSR)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Creta(GSR)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Creta(GSR)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Creta(GSR)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Creta(GSR)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Creta(GSR)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Creta(GSR)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Centennial(LZ)	2008	General	ECM(Engine Control Module)	Read Fault Code	
Centennial(LZ)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
Centennial(LZ)	2008	General	ECM(Engine Control Module)	Read Data Stream	
Centennial(LZ)	2008	General	ECM(Engine Control Module)	Actuation Test	
Centennial(LZ)	2008	General	ECM(Engine Control Module)	Version Information	
Centennial(LZ)	2008	General	ECM(Engine Control Module)	Read FreezeData	
Centennial(LZ)	2008	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Centennial(LZ)	2008	General	TCM(Transmission Control Module)	Version Information	
Centennial(LZ)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
Centennial(LZ)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
Centennial(LZ)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
Centennial(LZ)	2008	General	TCM(Transmission Control Module)	Actuation Test	
Centennial(LZ)	2008	General	ABS(Anti-lock Braking System)	Version Information	
Centennial(LZ)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
Centennial(LZ)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Centennial(LZ)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
Centennial(LZ)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
Centennial(LZ)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Centennial(LZ)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Centennial(LZ)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Centennial(LZ)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Centennial(LZ)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Centennial(LZ)	2008	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Centennial(LZ)	2008	General	AC(Air Conditioning)	Clear Fault Memory	
Centennial(LZ)	2008	General	AC(Air Conditioning)	Read Data Stream	
Centennial(LZ)	2008	General	AC(Air Conditioning)	Actuation Test	
Centennial(LZ)	2008	General	Automatic Headlamp Leveling	Version Information	
Centennial(LZ)	2008	General	Automatic Headlamp Leveling	Read Fault Code	
Centennial(LZ)	2008	General	Automatic Headlamp Leveling	Clear Fault Memory	
Centennial(LZ)	2008	General	Automatic Headlamp Leveling	Read Data Stream	
Centennial(LZ)	2008	General	Automatic Headlamp Leveling	Special Function	Level Initialization
Centennial(LZ)	2008	General	Automatic Headlamp Leveling	Special Function	Headlamp Leveling
Centennial(LZ)	2008	General	IMM(Immobilizer)	Read Fault Code	
Centennial(LZ)	2008	General	IMM(Immobilizer)	Clear Fault Memory	
Centennial(LZ)	2008	General	IMM(Immobilizer)	Read Data Stream	
Centennial(LZ)	2008	General	IMM(Immobilizer)	Special Function	Password Record/Change
Centennial(LZ)	2008	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Centennial(LZ)	2008	General	IMM(Immobilizer)	Special Function	Master Key Delete
Centennial(LZ)	2008	General	IMM(Immobilizer)	Special Function	Neutral Mode
Centennial(LZ)	2008	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Centennial(LZ)	2008	General	Suspension	Clear Fault Memory	
Centennial(LZ)	2008	General	Suspension	Read Data Stream	
Centennial(LZ)	2008	General	Suspension	Actuation Test	
Centennial(LZ)	2008	General	Suspension	Read Fault Code	
Centennial(LZ)	2008	General	LAN	Version Information	
Centennial(LZ)	2008	General	LAN	Read Fault Code	
Centennial(LZ)	2008	General	LAN	Read Data Stream	
Centennial(LZ)	2008	General	LAN	Actuation Test	
Centennial(LZ)	2007	General	ECM(Engine Control Module)	Read Fault Code	
Centennial(LZ)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Centennial(LZ)	2007	General	ECM(Engine Control Module)	Read Data Stream	
Centennial(LZ)	2007	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Centennial(LZ)	2007	General	ECM(Engine Control Module)	Version Information	
Centennial(LZ)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Centennial(LZ)	2007	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Centennial(LZ)	2007	General	TCM(Transmission Control Module)	Version Information	
Centennial(LZ)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Centennial(LZ)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Centennial(LZ)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Centennial(LZ)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Centennial(LZ)	2007	General	ABS(Anti-lock Braking System)	Version Information	
Centennial(LZ)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Centennial(LZ)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Centennial(LZ)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Centennial(LZ)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Centennial(LZ)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Centennial(LZ)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Centennial(LZ)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Centennial(LZ)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Centennial(LZ)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Centennial(LZ)	2007	General	AC(Air Conditioning)	Read Fault Code	
Centennial(LZ)	2007	General	AC(Air Conditioning)	Clear Fault Memory	
Centennial(LZ)	2007	General	AC(Air Conditioning)	Read Data Stream	
Centennial(LZ)	2007	General	AC(Air Conditioning)	Actuation Test	
Centennial(LZ)	2007	General	Automatic Headlamp Leveling	Version Information	
Centennial(LZ)	2007	General	Automatic Headlamp Leveling	Read Fault Code	
Centennial(LZ)	2007	General	Automatic Headlamp Leveling	Clear Fault Memory	
Centennial(LZ)	2007	General	Automatic Headlamp Leveling	Read Data Stream	
Centennial(LZ)	2007	General	Automatic Headlamp Leveling	Special Function	Level Initialization
Centennial(LZ)	2007	General	Automatic Headlamp Leveling	Special Function	Headlamp Leveling
Centennial(LZ)	2007	General	IMM(Immobilizer)	Read Fault Code	

model	year	area	system	function	subfunction
Centennial(LZ)	2007	General	IMM(Immobilizer)	Clear Fault Memory	
Centennial(LZ)	2007	General	IMM(Immobilizer)	Read Data Stream	
Centennial(LZ)	2007	General	IMM(Immobilizer)	Special Function	Password Record/Change
Centennial(LZ)	2007	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Centennial(LZ)	2007	General	IMM(Immobilizer)	Special Function	Master Key Delete
Centennial(LZ)	2007	General	IMM(Immobilizer)	Special Function	Neutral Mode
Centennial(LZ)	2007	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Centennial(LZ)	2007	General	Suspension	Clear Fault Memory	
Centennial(LZ)	2007	General	Suspension	Read Data Stream	
Centennial(LZ)	2007	General	Suspension	Actuation Test	
Centennial(LZ)	2007	General	Suspension	Read Fault Code	
Centennial(LZ)	2007	General	LAN	Version Information	
Centennial(LZ)	2007	General	LAN	Read Fault Code	
Centennial(LZ)	2007	General	LAN	Read Data Stream	
Centennial(LZ)	2007	General	LAN	Actuation Test	
Centennial(LZ)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Centennial(LZ)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Centennial(LZ)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Centennial(LZ)	2006	General	ECM(Engine Control Module)	Actuation Test	
Centennial(LZ)	2006	General	ECM(Engine Control Module)	Version Information	
Centennial(LZ)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Centennial(LZ)	2006	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Centennial(LZ)	2006	General	TCM(Transmission Control Module)	Version Information	
Centennial(LZ)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Centennial(LZ)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Centennial(LZ)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Centennial(LZ)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Centennial(LZ)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Centennial(LZ)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
Centennial(LZ)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Centennial(LZ)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Centennial(LZ)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Centennial(LZ)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Centennial(LZ)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Centennial(LZ)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Centennial(LZ)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Centennial(LZ)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Centennial(LZ)	2006	General	AC(Air Conditioning)	Read Fault Code	
Centennial(LZ)	2006	General	AC(Air Conditioning)	Clear Fault Memory	
Centennial(LZ)	2006	General	AC(Air Conditioning)	Read Data Stream	
Centennial(LZ)	2006	General	AC(Air Conditioning)	Actuation Test	
Centennial(LZ)	2006	General	Automatic Headlamp Leveling	Version Information	
Centennial(LZ)	2006	General	Automatic Headlamp Leveling	Read Fault Code	
Centennial(LZ)	2006	General	Automatic Headlamp Leveling	Clear Fault Memory	
Centennial(LZ)	2006	General	Automatic Headlamp Leveling	Read Data Stream	
Centennial(LZ)	2006	General	Automatic Headlamp Leveling	Special Function	Level Initialization
Centennial(LZ)	2006	General	Automatic Headlamp Leveling	Special Function	Headlamp Leveling
Centennial(LZ)	2006	General	IMM(Immobilizer)	Read Fault Code	
Centennial(LZ)	2006	General	IMM(Immobilizer)	Clear Fault Memory	
Centennial(LZ)	2006	General	IMM(Immobilizer)	Read Data Stream	
Centennial(LZ)	2006	General	IMM(Immobilizer)	Special Function	Password Record/Change
Centennial(LZ)	2006	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Centennial(LZ)	2006	General	IMM(Immobilizer)	Special Function	Master Key Delete
Centennial(LZ)	2006	General	IMM(Immobilizer)	Special Function	Neutral Mode
Centennial(LZ)	2006	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Centennial(LZ)	2006	General	Suspension	Clear Fault Memory	
Centennial(LZ)	2006	General	Suspension	Read Data Stream	
Centennial(LZ)	2006	General	Suspension	Actuation Test	

model	year	area	system	function	subfunction
Centennial(LZ)	2006	General	Suspension	Read Fault Code	
Centennial(LZ)	2006	General	LAN	Version Information	
Centennial(LZ)	2006	General	LAN	Read Fault Code	
Centennial(LZ)	2006	General	LAN	Read Data Stream	
Centennial(LZ)	2006	General	LAN	Actuation Test	
Centennial(LZ)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Centennial(LZ)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
Centennial(LZ)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Centennial(LZ)	2005	General	ECM(Engine Control Module)	Actuation Test	
Centennial(LZ)	2005	General	ECM(Engine Control Module)	Version Information	
Centennial(LZ)	2005	General	ECM(Engine Control Module)	Read FreezeData	
Centennial(LZ)	2005	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Centennial(LZ)	2005	General	TCM(Transmission Control Module)	Version Information	
Centennial(LZ)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Centennial(LZ)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Centennial(LZ)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Centennial(LZ)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Centennial(LZ)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Centennial(LZ)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Centennial(LZ)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Centennial(LZ)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Centennial(LZ)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Centennial(LZ)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Centennial(LZ)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Centennial(LZ)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Centennial(LZ)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Centennial(LZ)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Centennial(LZ)	2005	General	AC(Air Conditioning)	Read Fault Code	
Centennial(LZ)	2005	General	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Centennial(LZ)	2005	General	AC(Air Conditioning)	Read Data Stream	
Centennial(LZ)	2005	General	AC(Air Conditioning)	Actuation Test	
Centennial(LZ)	2005	General	Automatic Headlamp Leveling	Version Information	
Centennial(LZ)	2005	General	Automatic Headlamp Leveling	Read Fault Code	
Centennial(LZ)	2005	General	Automatic Headlamp Leveling	Clear Fault Memory	
Centennial(LZ)	2005	General	Automatic Headlamp Leveling	Read Data Stream	
Centennial(LZ)	2005	General	Automatic Headlamp Leveling	Special Function	Level Initialization
Centennial(LZ)	2005	General	Automatic Headlamp Leveling	Special Function	Headlamp Leveling
Centennial(LZ)	2005	General	IMM(Immobilizer)	Read Fault Code	
Centennial(LZ)	2005	General	IMM(Immobilizer)	Clear Fault Memory	
Centennial(LZ)	2005	General	IMM(Immobilizer)	Read Data Stream	
Centennial(LZ)	2005	General	IMM(Immobilizer)	Special Function	Password Record/Change
Centennial(LZ)	2005	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Centennial(LZ)	2005	General	IMM(Immobilizer)	Special Function	Master Key Delete
Centennial(LZ)	2005	General	IMM(Immobilizer)	Special Function	Neutral Mode
Centennial(LZ)	2005	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Centennial(LZ)	2005	General	Suspension	Clear Fault Memory	
Centennial(LZ)	2005	General	Suspension	Read Data Stream	
Centennial(LZ)	2005	General	Suspension	Actuation Test	
Centennial(LZ)	2005	General	Suspension	Read Fault Code	
Centennial(LZ)	2005	General	LAN	Version Information	
Centennial(LZ)	2005	General	LAN	Read Fault Code	
Centennial(LZ)	2005	General	LAN	Read Data Stream	
Centennial(LZ)	2005	General	LAN	Actuation Test	
Centennial(LZ)	2004	General	ECM(Engine Control Module)	Read Fault Code	
Centennial(LZ)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Centennial(LZ)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Centennial(LZ)	2004	General	ECM(Engine Control Module)	Actuation Test	
Centennial(LZ)	2004	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Centennial(LZ)	2004	General	ECM(Engine Control Module)	Read FreezeData	
Centennial(LZ)	2004	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Centennial(LZ)	2004	General	TCM(Transmission Control Module)	Version Information	
Centennial(LZ)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Centennial(LZ)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Centennial(LZ)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Centennial(LZ)	2004	General	TCM(Transmission Control Module)	Actuation Test	
Centennial(LZ)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Centennial(LZ)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Centennial(LZ)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Centennial(LZ)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Centennial(LZ)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Centennial(LZ)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Centennial(LZ)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Centennial(LZ)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Centennial(LZ)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Centennial(LZ)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Centennial(LZ)	2004	General	AC(Air Conditioning)	Read Fault Code	
Centennial(LZ)	2004	General	AC(Air Conditioning)	Clear Fault Memory	
Centennial(LZ)	2004	General	AC(Air Conditioning)	Read Data Stream	
Centennial(LZ)	2004	General	AC(Air Conditioning)	Actuation Test	
Centennial(LZ)	2004	General	Automatic Headlamp Leveling	Version Information	
Centennial(LZ)	2004	General	Automatic Headlamp Leveling	Read Fault Code	
Centennial(LZ)	2004	General	Automatic Headlamp Leveling	Clear Fault Memory	
Centennial(LZ)	2004	General	Automatic Headlamp Leveling	Read Data Stream	
Centennial(LZ)	2004	General	Automatic Headlamp Leveling	Special Function	Level Initialization
Centennial(LZ)	2004	General	Automatic Headlamp Leveling	Special Function	Headlamp Leveling
Centennial(LZ)	2004	General	IMM(Immobilizer)	Read Fault Code	
Centennial(LZ)	2004	General	IMM(Immobilizer)	Clear Fault Memory	

model	year	area	system	function	subfunction
Centennial(LZ)	2004	General	IMM(Immobilizer)	Read Data Stream	
Centennial(LZ)	2004	General	IMM(Immobilizer)	Special Function	Password Record/Change
Centennial(LZ)	2004	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Centennial(LZ)	2004	General	IMM(Immobilizer)	Special Function	Master Key Delete
Centennial(LZ)	2004	General	IMM(Immobilizer)	Special Function	Neutral Mode
Centennial(LZ)	2004	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Centennial(LZ)	2004	General	Suspension	Clear Fault Memory	
Centennial(LZ)	2004	General	Suspension	Read Data Stream	
Centennial(LZ)	2004	General	Suspension	Actuation Test	
Centennial(LZ)	2004	General	Suspension	Read Fault Code	
Centennial(LZ)	2004	General	LAN	Version Information	
Centennial(LZ)	2004	General	LAN	Read Fault Code	
Centennial(LZ)	2004	General	LAN	Read Data Stream	
Centennial(LZ)	2004	General	LAN	Actuation Test	
Centennial(LZ)	2003	General	ECM(Engine Control Module)	Read Fault Code	
Centennial(LZ)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Centennial(LZ)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Centennial(LZ)	2003	General	ECM(Engine Control Module)	Actuation Test	
Centennial(LZ)	2003	General	ECM(Engine Control Module)	Version Information	
Centennial(LZ)	2003	General	ECM(Engine Control Module)	Read FreezeData	
Centennial(LZ)	2003	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Centennial(LZ)	2003	General	TCM(Transmission Control Module)	Version Information	
Centennial(LZ)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Centennial(LZ)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Centennial(LZ)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Centennial(LZ)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Centennial(LZ)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Centennial(LZ)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Centennial(LZ)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Centennial(LZ)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Centennial(LZ)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Centennial(LZ)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Centennial(LZ)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Centennial(LZ)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Centennial(LZ)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Centennial(LZ)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Centennial(LZ)	2003	General	AC(Air Conditioning)	Read Fault Code	
Centennial(LZ)	2003	General	AC(Air Conditioning)	Clear Fault Memory	
Centennial(LZ)	2003	General	AC(Air Conditioning)	Read Data Stream	
Centennial(LZ)	2003	General	AC(Air Conditioning)	Actuation Test	
Centennial(LZ)	2003	General	Automatic Headlamp Leveling	Version Information	
Centennial(LZ)	2003	General	Automatic Headlamp Leveling	Read Fault Code	
Centennial(LZ)	2003	General	Automatic Headlamp Leveling	Clear Fault Memory	
Centennial(LZ)	2003	General	Automatic Headlamp Leveling	Read Data Stream	
Centennial(LZ)	2003	General	Automatic Headlamp Leveling	Special Function	Level Initialization
Centennial(LZ)	2003	General	Automatic Headlamp Leveling	Special Function	Headlamp Leveling
Centennial(LZ)	2003	General	IMM(Immobilizer)	Read Fault Code	
Centennial(LZ)	2003	General	IMM(Immobilizer)	Clear Fault Memory	
Centennial(LZ)	2003	General	IMM(Immobilizer)	Read Data Stream	
Centennial(LZ)	2003	General	IMM(Immobilizer)	Special Function	Password Record/Change
Centennial(LZ)	2003	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Centennial(LZ)	2003	General	IMM(Immobilizer)	Special Function	Master Key Delete
Centennial(LZ)	2003	General	IMM(Immobilizer)	Special Function	Neutral Mode
Centennial(LZ)	2003	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Centennial(LZ)	2003	General	Suspension	Clear Fault Memory	
Centennial(LZ)	2003	General	Suspension	Read Data Stream	
Centennial(LZ)	2003	General	Suspension	Actuation Test	
Centennial(LZ)	2003	General	Suspension	Read Fault Code	

model	year	area	system	function	subfunction
Centennial(LZ)	2003	General	LAN	Version Information	
Centennial(LZ)	2003	General	LAN	Read Fault Code	
Centennial(LZ)	2003	General	LAN	Read Data Stream	
Centennial(LZ)	2003	General	LAN	Actuation Test	
Centennial(LZ)	2002	General	ECM(Engine Control Module)	Read Fault Code	
Centennial(LZ)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
Centennial(LZ)	2002	General	ECM(Engine Control Module)	Read Data Stream	
Centennial(LZ)	2002	General	ECM(Engine Control Module)	Actuation Test	
Centennial(LZ)	2002	General	ECM(Engine Control Module)	Version Information	
Centennial(LZ)	2002	General	ECM(Engine Control Module)	Read FreezeData	
Centennial(LZ)	2002	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Centennial(LZ)	2002	General	TCM(Transmission Control Module)	Version Information	
Centennial(LZ)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
Centennial(LZ)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Centennial(LZ)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
Centennial(LZ)	2002	General	TCM(Transmission Control Module)	Actuation Test	
Centennial(LZ)	2002	General	ABS(Anti-lock Braking System)	Version Information	
Centennial(LZ)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Centennial(LZ)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Centennial(LZ)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Centennial(LZ)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
Centennial(LZ)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Centennial(LZ)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Centennial(LZ)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Centennial(LZ)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Centennial(LZ)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Centennial(LZ)	2002	General	AC(Air Conditioning)	Read Fault Code	
Centennial(LZ)	2002	General	AC(Air Conditioning)	Clear Fault Memory	
Centennial(LZ)	2002	General	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Centennial(LZ)	2002	General	AC(Air Conditioning)	Actuation Test	
Centennial(LZ)	2002	General	Automatic Headlamp Leveling	Version Information	
Centennial(LZ)	2002	General	Automatic Headlamp Leveling	Read Fault Code	
Centennial(LZ)	2002	General	Automatic Headlamp Leveling	Clear Fault Memory	
Centennial(LZ)	2002	General	Automatic Headlamp Leveling	Read Data Stream	
Centennial(LZ)	2002	General	Automatic Headlamp Leveling	Special Function	Level Initialization
Centennial(LZ)	2002	General	Automatic Headlamp Leveling	Special Function	Headlamp Leveling
Centennial(LZ)	2002	General	IMM(Immobilizer)	Read Fault Code	
Centennial(LZ)	2002	General	IMM(Immobilizer)	Clear Fault Memory	
Centennial(LZ)	2002	General	IMM(Immobilizer)	Read Data Stream	
Centennial(LZ)	2002	General	IMM(Immobilizer)	Special Function	Password Record/Change
Centennial(LZ)	2002	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Centennial(LZ)	2002	General	IMM(Immobilizer)	Special Function	Master Key Delete
Centennial(LZ)	2002	General	IMM(Immobilizer)	Special Function	Neutral Mode
Centennial(LZ)	2002	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Centennial(LZ)	2002	General	Suspension	Clear Fault Memory	
Centennial(LZ)	2002	General	Suspension	Read Data Stream	
Centennial(LZ)	2002	General	Suspension	Actuation Test	
Centennial(LZ)	2002	General	Suspension	Read Fault Code	
Centennial(LZ)	2002	General	LAN	Version Information	
Centennial(LZ)	2002	General	LAN	Read Fault Code	
Centennial(LZ)	2002	General	LAN	Read Data Stream	
Centennial(LZ)	2002	General	LAN	Actuation Test	
Centennial(LZ)	2001	General	ECM(Engine Control Module)	Read Fault Code	
Centennial(LZ)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
Centennial(LZ)	2001	General	ECM(Engine Control Module)	Read Data Stream	
Centennial(LZ)	2001	General	ECM(Engine Control Module)	Actuation Test	
Centennial(LZ)	2001	General	ECM(Engine Control Module)	Version Information	
Centennial(LZ)	2001	General	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Centennial(LZ)	2001	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Centennial(LZ)	2001	General	TCM(Transmission Control Module)	Version Information	
Centennial(LZ)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
Centennial(LZ)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
Centennial(LZ)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
Centennial(LZ)	2001	General	TCM(Transmission Control Module)	Actuation Test	
Centennial(LZ)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
Centennial(LZ)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Centennial(LZ)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
Centennial(LZ)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
Centennial(LZ)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Centennial(LZ)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Centennial(LZ)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Centennial(LZ)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Centennial(LZ)	2001	General	AC(Air Conditioning)	Read Fault Code	
Centennial(LZ)	2001	General	AC(Air Conditioning)	Clear Fault Memory	
Centennial(LZ)	2001	General	AC(Air Conditioning)	Read Data Stream	
Centennial(LZ)	2001	General	AC(Air Conditioning)	Actuation Test	
Centennial(LZ)	2001	General	Automatic Headlamp Leveling	Version Information	
Centennial(LZ)	2001	General	Automatic Headlamp Leveling	Read Fault Code	
Centennial(LZ)	2001	General	Automatic Headlamp Leveling	Clear Fault Memory	
Centennial(LZ)	2001	General	Automatic Headlamp Leveling	Read Data Stream	
Centennial(LZ)	2001	General	Automatic Headlamp Leveling	Special Function	Level Initialization
Centennial(LZ)	2001	General	Automatic Headlamp Leveling	Special Function	Headlamp Leveling
Centennial(LZ)	2001	General	IMM(Immobilizer)	Read Fault Code	
Centennial(LZ)	2001	General	IMM(Immobilizer)	Clear Fault Memory	
Centennial(LZ)	2001	General	IMM(Immobilizer)	Read Data Stream	
Centennial(LZ)	2001	General	IMM(Immobilizer)	Special Function	Password Record/Change
Centennial(LZ)	2001	General	IMM(Immobilizer)	Special Function	Master Key Record/Change

model	year	area	system	function	subfunction
Centennial(LZ)	2001	General	IMM(Immobilizer)	Special Function	Master Key Delete
Centennial(LZ)	2001	General	IMM(Immobilizer)	Special Function	Neutral Mode
Centennial(LZ)	2001	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Centennial(LZ)	2001	General	Suspension	Clear Fault Memory	
Centennial(LZ)	2001	General	Suspension	Read Data Stream	
Centennial(LZ)	2001	General	Suspension	Actuation Test	
Centennial(LZ)	2001	General	Suspension	Read Fault Code	
Centennial(LZ)	2001	General	LAN	Version Information	
Centennial(LZ)	2001	General	LAN	Read Fault Code	
Centennial(LZ)	2001	General	LAN	Read Data Stream	
Centennial(LZ)	2001	General	LAN	Actuation Test	
Centennial(LZ)	2000	General	ECM(Engine Control Module)	Version Information	
Centennial(LZ)	2000	General	ECM(Engine Control Module)	Read Fault Code	
Centennial(LZ)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
Centennial(LZ)	2000	General	ECM(Engine Control Module)	Read Data Stream	
Centennial(LZ)	2000	General	ECM(Engine Control Module)	Actuation Test	
Centennial(LZ)	2000	General	TCM(Transmission Control Module)	Version Information	
Centennial(LZ)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
Centennial(LZ)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
Centennial(LZ)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
Centennial(LZ)	2000	General	TCM(Transmission Control Module)	Actuation Test	
Centennial(LZ)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
Centennial(LZ)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Centennial(LZ)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
Centennial(LZ)	2000	General	ABS(Anti-lock Braking System)	Actuation Test	
Centennial(LZ)	2000	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Centennial(LZ)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Centennial(LZ)	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Centennial(LZ)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Centennial(LZ)	2000	General	AC(Air Conditioning)	Read Fault Code	
Centennial(LZ)	2000	General	AC(Air Conditioning)	Clear Fault Memory	
Centennial(LZ)	2000	General	AC(Air Conditioning)	Read Data Stream	
Centennial(LZ)	2000	General	AC(Air Conditioning)	Actuation Test	
Centennial(LZ)	2000	General	Automatic Headlamp Leveling	Version Information	
Centennial(LZ)	2000	General	Automatic Headlamp Leveling	Read Fault Code	
Centennial(LZ)	2000	General	Automatic Headlamp Leveling	Clear Fault Memory	
Centennial(LZ)	2000	General	Automatic Headlamp Leveling	Read Data Stream	
Centennial(LZ)	2000	General	Automatic Headlamp Leveling	Special Function	Level Initialization
Centennial(LZ)	2000	General	Automatic Headlamp Leveling	Special Function	Headlamp Leveling
Centennial(LZ)	2000	General	IMM(Immobilizer)	Read Fault Code	
Centennial(LZ)	2000	General	IMM(Immobilizer)	Clear Fault Memory	
Centennial(LZ)	2000	General	IMM(Immobilizer)	Read Data Stream	
Centennial(LZ)	2000	General	IMM(Immobilizer)	Special Function	Password Record/Change
Centennial(LZ)	2000	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Centennial(LZ)	2000	General	IMM(Immobilizer)	Special Function	Master Key Delete
Centennial(LZ)	2000	General	IMM(Immobilizer)	Special Function	Neutral Mode
Centennial(LZ)	2000	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Centennial(LZ)	2000	General	Suspension	Clear Fault Memory	
Centennial(LZ)	2000	General	Suspension	Read Data Stream	
Centennial(LZ)	2000	General	Suspension	Actuation Test	
Centennial(LZ)	2000	General	Suspension	Read Fault Code	
Centennial(LZ)	2000	General	LAN	Version Information	
Centennial(LZ)	2000	General	LAN	Read Fault Code	
Centennial(LZ)	2000	General	LAN	Read Data Stream	
Centennial(LZ)	2000	General	LAN	Actuation Test	
Centennial(LZ)	2000	General	ECM(Engine Control Module)	Read FreezeData	
Centennial(LZ)	1999	General	ECM(Engine Control Module)	Version Information	
Centennial(LZ)	1999	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Centennial(LZ)	1999	General	ECM(Engine Control Module)	Clear Fault Memory	
Centennial(LZ)	1999	General	ECM(Engine Control Module)	Read Data Stream	
Centennial(LZ)	1999	General	ECM(Engine Control Module)	Actuation Test	
Centennial(LZ)	1999	General	TCM(Transmission Control Module)	Version Information	
Centennial(LZ)	1999	General	TCM(Transmission Control Module)	Read Fault Code	
Centennial(LZ)	1999	General	TCM(Transmission Control Module)	Clear Fault Memory	
Centennial(LZ)	1999	General	TCM(Transmission Control Module)	Read Data Stream	
Centennial(LZ)	1999	General	TCM(Transmission Control Module)	Actuation Test	
Centennial(LZ)	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	
Centennial(LZ)	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Centennial(LZ)	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
Centennial(LZ)	1999	General	ABS(Anti-lock Braking System)	Actuation Test	
Centennial(LZ)	1999	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Centennial(LZ)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Centennial(LZ)	1999	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Centennial(LZ)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Centennial(LZ)	1999	General	AC(Air Conditioning)	Read Fault Code	
Centennial(LZ)	1999	General	AC(Air Conditioning)	Clear Fault Memory	
Centennial(LZ)	1999	General	AC(Air Conditioning)	Read Data Stream	
Centennial(LZ)	1999	General	AC(Air Conditioning)	Actuation Test	
Centennial(LZ)	1999	General	Automatic Headlamp Leveling	Version Information	
Centennial(LZ)	1999	General	Automatic Headlamp Leveling	Read Fault Code	
Centennial(LZ)	1999	General	Automatic Headlamp Leveling	Clear Fault Memory	
Centennial(LZ)	1999	General	Automatic Headlamp Leveling	Read Data Stream	
Centennial(LZ)	1999	General	Automatic Headlamp Leveling	Special Function	Level Initialization
Centennial(LZ)	1999	General	Automatic Headlamp Leveling	Special Function	Headlamp Leveling
Centennial(LZ)	1999	General	IMM(Immobilizer)	Read Fault Code	
Centennial(LZ)	1999	General	IMM(Immobilizer)	Clear Fault Memory	
Centennial(LZ)	1999	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Centennial(LZ)	1999	General	IMM(Immobilizer)	Special Function	Password Record/Change
Centennial(LZ)	1999	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Centennial(LZ)	1999	General	IMM(Immobilizer)	Special Function	Master Key Delete
Centennial(LZ)	1999	General	IMM(Immobilizer)	Special Function	Neutral Mode
Centennial(LZ)	1999	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Centennial(LZ)	1999	General	Suspension	Clear Fault Memory	
Centennial(LZ)	1999	General	Suspension	Read Data Stream	
Centennial(LZ)	1999	General	Suspension	Actuation Test	
Centennial(LZ)	1999	General	Suspension	Read Fault Code	
Centennial(LZ)	1999	General	LAN	Version Information	
Centennial(LZ)	1999	General	LAN	Read Fault Code	
Centennial(LZ)	1999	General	LAN	Read Data Stream	
Centennial(LZ)	1999	General	LAN	Actuation Test	
Centennial(LZ)	1999	General	ECM(Engine Control Module)	Read FreezeData	
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Version Information	
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Actuation Test	
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Equus/Centennial(VI)	2016	General	TCM(Transmission Control Module)	Version Information	
Equus/Centennial(VI)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Equus/Centennial(VI)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Equus/Centennial(VI)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Equus/Centennial(VI)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus/Centennial(VI)	2016	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU
Equus/Centennial(VI)	2016	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Equus/Centennial(VI)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Equus/Centennial(VI)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Equus/Centennial(VI)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Equus/Centennial(VI)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Equus/Centennial(VI)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Equus/Centennial(VI)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Equus/Centennial(VI)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Equus/Centennial(VI)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Equus/Centennial(VI)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Equus/Centennial(VI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus/Centennial(VI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus/Centennial(VI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus/Centennial(VI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Equus/Centennial(VI)	2016	General	AC(Air Conditioning)	Version Information	
Equus/Centennial(VI)	2016	General	AC(Air Conditioning)	Read Fault Code	
Equus/Centennial(VI)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	AC(Air Conditioning)	Read Data Stream	
Equus/Centennial(VI)	2016	General	AC(Air Conditioning)	Actuation Test	
Equus/Centennial(VI)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2016	General	BCM(Body Control Module)	Version Information	
Equus/Centennial(VI)	2016	General	BCM(Body Control Module)	Read Fault Code	
Equus/Centennial(VI)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	BCM(Body Control Module)	Read Data Stream	
Equus/Centennial(VI)	2016	General	BCM(Body Control Module)	Actuation Test	
Equus/Centennial(VI)	2016	General	BCM(Body Control Module)	Special Function	HUD Calibration
Equus/Centennial(VI)	2016	General	BCM(Body Control Module)	Special Function	User Option
Equus/Centennial(VI)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus/Centennial(VI)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus/Centennial(VI)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus/Centennial(VI)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus/Centennial(VI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus/Centennial(VI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus/Centennial(VI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus/Centennial(VI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus/Centennial(VI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus/Centennial(VI)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Equus/Centennial(VI)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Equus/Centennial(VI)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Equus/Centennial(VI)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Equus/Centennial(VI)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Sensor Initialization
Equus/Centennial(VI)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Equus/Centennial(VI)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Equus/Centennial(VI)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Equus/Centennial(VI)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Equus/Centennial(VI)	2016	General	EPS(Electronic Power Steering)	Version Information	
Equus/Centennial(VI)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Equus/Centennial(VI)	2016	General	EPS(Electronic Power Steering)	Actuation Test	
Equus/Centennial(VI)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Equus/Centennial(VI)	2016	General	Electronic Control Suspension	Version Information	
Equus/Centennial(VI)	2016	General	Electronic Control Suspension	Read Fault Code	
Equus/Centennial(VI)	2016	General	Electronic Control Suspension	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	Electronic Control Suspension	Read Data Stream	
Equus/Centennial(VI)	2016	General	Electronic Control Suspension	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Equus/Centennial(VI)	2016	General	Electronic Control Suspension	Special Function	Height Level Control Select
Equus/Centennial(VI)	2016	General	Electronic Control Suspension	Special Function	Checking Air Pressure System
Equus/Centennial(VI)	2016	General	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Equus/Centennial(VI)	2016	General	Electronic Control Suspension	Special Function	Height Sensor Calibration
Equus/Centennial(VI)	2016	General	Smart Key Unit	Version Information	
Equus/Centennial(VI)	2016	General	Smart Key Unit	Read Fault Code	
Equus/Centennial(VI)	2016	General	Smart Key Unit	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	Smart Key Unit	Read Data Stream	
Equus/Centennial(VI)	2016	General	Smart Key Unit	Actuation Test	
Equus/Centennial(VI)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Equus/Centennial(VI)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Equus/Centennial(VI)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Equus/Centennial(VI)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Equus/Centennial(VI)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Equus/Centennial(VI)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Equus/Centennial(VI)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Equus/Centennial(VI)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Equus/Centennial(VI)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Equus/Centennial(VI)	2016	General	CCS(Cruise Control System)	Version Information	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2016	General	CCS(Cruise Control System)	Read Fault Code	
Equus/Centennial(VI)	2016	General	CCS(Cruise Control System)	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	CCS(Cruise Control System)	Read Data Stream	
Equus/Centennial(VI)	2016	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Equus/Centennial(VI)	2016	General	Blind Spot Detection	Version Information	
Equus/Centennial(VI)	2016	General	Blind Spot Detection	Read Fault Code	
Equus/Centennial(VI)	2016	General	Blind Spot Detection	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	Blind Spot Detection	Read Data Stream	
Equus/Centennial(VI)	2016	General	Blind Spot Detection	Actuation Test	
Equus/Centennial(VI)	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Equus/Centennial(VI)	2016	General	Blind Spot Detection	Special Function	BSD Variant Coding
Equus/Centennial(VI)	2016	General	Lane Departure Warning System	Version Information	
Equus/Centennial(VI)	2016	General	Lane Departure Warning System	Read Fault Code	
Equus/Centennial(VI)	2016	General	Lane Departure Warning System	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	Lane Departure Warning System	Read Data Stream	
Equus/Centennial(VI)	2016	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Equus/Centennial(VI)	2016	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Equus/Centennial(VI)	2016	General	Pre-safe Seat Belt	Version Information	
Equus/Centennial(VI)	2016	General	Pre-safe Seat Belt	Read Fault Code	
Equus/Centennial(VI)	2016	General	Pre-safe Seat Belt	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	Pre-safe Seat Belt	Actuation Test	
Equus/Centennial(VI)	2016	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus/Centennial(VI)	2016	General	E-Shifter	Version Information	
Equus/Centennial(VI)	2016	General	E-Shifter	Read Fault Code	
Equus/Centennial(VI)	2016	General	E-Shifter	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	E-Shifter	Read Data Stream	
Equus/Centennial(VI)	2016	General	E-Shifter	Read FreezeData	
Equus/Centennial(VI)	2016	General	E-Shifter	Actuation Test	
Equus/Centennial(VI)	2016	General	Intelligent Accel Pedal	Version Information	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2016	General	Intelligent Accel Pedal	Read Fault Code	
Equus/Centennial(VI)	2016	General	Intelligent Accel Pedal	Clear Fault Memory	
Equus/Centennial(VI)	2016	General	Intelligent Accel Pedal	Read Data Stream	
Equus/Centennial(VI)	2016	General	Intelligent Accel Pedal	Actuation Test	
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Equus/Centennial(VI)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Version Information	
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Actuation Test	
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Equus/Centennial(VI)	2015	General	TCM(Transmission Control Module)	Version Information	
Equus/Centennial(VI)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Equus/Centennial(VI)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Equus/Centennial(VI)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Equus/Centennial(VI)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Equus/Centennial(VI)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus/Centennial(VI)	2015	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics
Equus/Centennial(VI)	2015	General	TCM(Transmission Control Module)	Special Function	Backup&Input(TCU Exchange)

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2015	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Equus/Centennial(VI)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Equus/Centennial(VI)	2015	General	ESP(Electronic Stability Program)	Version Information	
Equus/Centennial(VI)	2015	General	ESP(Electronic Stability Program)	Read Fault Code	
Equus/Centennial(VI)	2015	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	ESP(Electronic Stability Program)	Read Data Stream	
Equus/Centennial(VI)	2015	General	ESP(Electronic Stability Program)	Actuation Test	
Equus/Centennial(VI)	2015	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Equus/Centennial(VI)	2015	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Equus/Centennial(VI)	2015	General	ESP(Electronic Stability Program)	Special Function	SAS Calibration(CAN-ESP Only)
Equus/Centennial(VI)	2015	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
Equus/Centennial(VI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus/Centennial(VI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus/Centennial(VI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus/Centennial(VI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Equus/Centennial(VI)	2015	General	AC(Air Conditioning)	Version Information	
Equus/Centennial(VI)	2015	General	AC(Air Conditioning)	Read Fault Code	
Equus/Centennial(VI)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	AC(Air Conditioning)	Read Data Stream	
Equus/Centennial(VI)	2015	General	AC(Air Conditioning)	Actuation Test	
Equus/Centennial(VI)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Equus/Centennial(VI)	2015	General	BCM(Body Control Module)	Version Information	
Equus/Centennial(VI)	2015	General	BCM(Body Control Module)	Read Fault Code	
Equus/Centennial(VI)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	BCM(Body Control Module)	Read Data Stream	
Equus/Centennial(VI)	2015	General	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2015	General	BCM(Body Control Module)	Special Function	HUD Calibration
Equus/Centennial(VI)	2015	General	BCM(Body Control Module)	Special Function	User Option
Equus/Centennial(VI)	2015	General	EPB(Electrical Parking Brake)	Version Information	
Equus/Centennial(VI)	2015	General	EPB(Electrical Parking Brake)	Read Fault Code	
Equus/Centennial(VI)	2015	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	EPB(Electrical Parking Brake)	Read Data Stream	
Equus/Centennial(VI)	2015	General	EPB(Electrical Parking Brake)	Actuation Test	
Equus/Centennial(VI)	2015	General	EPS(Electronic Power Steering)	Version Information	
Equus/Centennial(VI)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Equus/Centennial(VI)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Equus/Centennial(VI)	2015	General	EPS(Electronic Power Steering)	Actuation Test	
Equus/Centennial(VI)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Equus/Centennial(VI)	2015	General	Head Lamp	Version Information	
Equus/Centennial(VI)	2015	General	Head Lamp	Read Fault Code	
Equus/Centennial(VI)	2015	General	Head Lamp	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	Head Lamp	Read Data Stream	
Equus/Centennial(VI)	2015	General	Head Lamp	Actuation Test	
Equus/Centennial(VI)	2015	General	Head Lamp	Special Function	Calibration
Equus/Centennial(VI)	2015	General	Head Lamp	Special Function	Parameter Download
Equus/Centennial(VI)	2015	General	Head Lamp	Special Function	Level Initialization
Equus/Centennial(VI)	2015	General	Head Lamp	Special Function	Sensor Initialization
Equus/Centennial(VI)	2015	General	Head Lamp	Special Function	Headlamp Leveling
Equus/Centennial(VI)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus/Centennial(VI)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus/Centennial(VI)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus/Centennial(VI)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus/Centennial(VI)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus/Centennial(VI)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus/Centennial(VI)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus/Centennial(VI)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus/Centennial(VI)	2015	General	Smart Key Unit	Version Information	
Equus/Centennial(VI)	2015	General	Smart Key Unit	Read Fault Code	
Equus/Centennial(VI)	2015	General	Smart Key Unit	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	Smart Key Unit	Read Data Stream	
Equus/Centennial(VI)	2015	General	Smart Key Unit	Actuation Test	
Equus/Centennial(VI)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Equus/Centennial(VI)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Equus/Centennial(VI)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Equus/Centennial(VI)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Equus/Centennial(VI)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Equus/Centennial(VI)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Equus/Centennial(VI)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Equus/Centennial(VI)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Equus/Centennial(VI)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Equus/Centennial(VI)	2015	General	CCS(Cruise Control System)	Version Information	
Equus/Centennial(VI)	2015	General	CCS(Cruise Control System)	Read Fault Code	
Equus/Centennial(VI)	2015	General	CCS(Cruise Control System)	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	CCS(Cruise Control System)	Read Data Stream	
Equus/Centennial(VI)	2015	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Equus/Centennial(VI)	2015	General	Intelligent Accel Pedal	Version Information	
Equus/Centennial(VI)	2015	General	Intelligent Accel Pedal	Read Fault Code	
Equus/Centennial(VI)	2015	General	Intelligent Accel Pedal	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	Intelligent Accel Pedal	Read Data Stream	
Equus/Centennial(VI)	2015	General	Intelligent Accel Pedal	Actuation Test	
Equus/Centennial(VI)	2015	General	Pre-safe Seat Belt	Version Information	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2015	General	Pre-safe Seat Belt	Read Fault Code	
Equus/Centennial(VI)	2015	General	Pre-safe Seat Belt	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	Pre-safe Seat Belt	Actuation Test	
Equus/Centennial(VI)	2015	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus/Centennial(VI)	2015	General	Around View Monitor System	Version Information	
Equus/Centennial(VI)	2015	General	Around View Monitor System	Read Fault Code	
Equus/Centennial(VI)	2015	General	Around View Monitor System	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	Around View Monitor System	Read Data Stream	
Equus/Centennial(VI)	2015	General	Around View Monitor System	Actuation Test	
Equus/Centennial(VI)	2015	General	Suspension	Version Information	
Equus/Centennial(VI)	2015	General	Suspension	Read Fault Code	
Equus/Centennial(VI)	2015	General	Suspension	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	Suspension	Read Data Stream	
Equus/Centennial(VI)	2015	General	Suspension	Special Function	Auto Detected Configuration
Equus/Centennial(VI)	2015	General	Suspension	Special Function	Reset(FSP/FSC)Only
Equus/Centennial(VI)	2015	General	Suspension	Special Function	Height Level Control Select
Equus/Centennial(VI)	2015	General	Suspension	Special Function	Checking Air Pressure
Equus/Centennial(VI)	2015	General	Suspension	Special Function	Custom
Equus/Centennial(VI)	2015	General	Suspension	Special Function	Air Filling Venting Setup
Equus/Centennial(VI)	2015	General	Suspension	Special Function	Height Sensor Calibration
Equus/Centennial(VI)	2015	General	Blind Spot Detection	Version Information	
Equus/Centennial(VI)	2015	General	Blind Spot Detection	Read Fault Code	
Equus/Centennial(VI)	2015	General	Blind Spot Detection	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	Blind Spot Detection	Read Data Stream	
Equus/Centennial(VI)	2015	General	Blind Spot Detection	Actuation Test	
Equus/Centennial(VI)	2015	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Equus/Centennial(VI)	2015	General	Blind Spot Detection	Special Function	BSD Variant Coding
Equus/Centennial(VI)	2015	General	E-Shifter	Version Information	
Equus/Centennial(VI)	2015	General	E-Shifter	Read Fault Code	
Equus/Centennial(VI)	2015	General	E-Shifter	Clear Fault Memory	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2015	General	E-Shifter	Read Data Stream	
Equus/Centennial(VI)	2015	General	E-Shifter	Read FreezeData	
Equus/Centennial(VI)	2015	General	E-Shifter	Actuation Test	
Equus/Centennial(VI)	2015	General	Lane Departure Warning System	Version Information	
Equus/Centennial(VI)	2015	General	Lane Departure Warning System	Read Fault Code	
Equus/Centennial(VI)	2015	General	Lane Departure Warning System	Clear Fault Memory	
Equus/Centennial(VI)	2015	General	Lane Departure Warning System	Read Data Stream	
Equus/Centennial(VI)	2015	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Equus/Centennial(VI)	2015	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Equus/Centennial(VI)	2015	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Version Information	
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Actuation Test	
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Equus/Centennial(VI)	2014	General	TCM(Transmission Control Module)	Version Information	
Equus/Centennial(VI)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Equus/Centennial(VI)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Equus/Centennial(VI)	2014	General	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Equus/Centennial(VI)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus/Centennial(VI)	2014	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU
Equus/Centennial(VI)	2014	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Input(Transmission
Equus/Centennial(VI)	2014	General	TCM(Transmission Control Module)	Special Function	Exchange) AT Adaptation Mode
Equus/Centennial(VI)	2014	General	ESP(Electronic Stability Program)	Version Information	
Equus/Centennial(VI)	2014	General	ESP(Electronic Stability Program)	Read Fault Code	
Equus/Centennial(VI)	2014	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	ESP(Electronic Stability Program)	Read Data Stream	
Equus/Centennial(VI)	2014	General	ESP(Electronic Stability Program)	Actuation Test	
Equus/Centennial(VI)	2014	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Equus/Centennial(VI)	2014	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Equus/Centennial(VI)	2014	General	ESP(Electronic Stability Program)	Special Function	SAS Calibration(CAN-ESP Only)
Equus/Centennial(VI)	2014	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
Equus/Centennial(VI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus/Centennial(VI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus/Centennial(VI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus/Centennial(VI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Equus/Centennial(VI)	2014	General	AC(Air Conditioning)	Version Information	
Equus/Centennial(VI)	2014	General	AC(Air Conditioning)	Read Fault Code	
Equus/Centennial(VI)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	AC(Air Conditioning)	Read Data Stream	
Equus/Centennial(VI)	2014	General	AC(Air Conditioning)	Actuation Test	
Equus/Centennial(VI)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Equus/Centennial(VI)	2014	General	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2014	General	BCM(Body Control Module)	Read Fault Code	
Equus/Centennial(VI)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	BCM(Body Control Module)	Read Data Stream	
Equus/Centennial(VI)	2014	General	BCM(Body Control Module)	Actuation Test	
Equus/Centennial(VI)	2014	General	BCM(Body Control Module)	Special Function	HUD Calibration
Equus/Centennial(VI)	2014	General	BCM(Body Control Module)	Special Function	User Option
Equus/Centennial(VI)	2014	General	EPB(Electrical Parking Brake)	Version Information	
Equus/Centennial(VI)	2014	General	EPB(Electrical Parking Brake)	Read Fault Code	
Equus/Centennial(VI)	2014	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	EPB(Electrical Parking Brake)	Read Data Stream	
Equus/Centennial(VI)	2014	General	EPB(Electrical Parking Brake)	Actuation Test	
Equus/Centennial(VI)	2014	General	EPS(Electronic Power Steering)	Version Information	
Equus/Centennial(VI)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Equus/Centennial(VI)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Equus/Centennial(VI)	2014	General	EPS(Electronic Power Steering)	Actuation Test	
Equus/Centennial(VI)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Equus/Centennial(VI)	2014	General	Head Lamp	Version Information	
Equus/Centennial(VI)	2014	General	Head Lamp	Read Fault Code	
Equus/Centennial(VI)	2014	General	Head Lamp	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	Head Lamp	Read Data Stream	
Equus/Centennial(VI)	2014	General	Head Lamp	Actuation Test	
Equus/Centennial(VI)	2014	General	Head Lamp	Special Function	Calibration
Equus/Centennial(VI)	2014	General	Head Lamp	Special Function	Parameter Download
Equus/Centennial(VI)	2014	General	Head Lamp	Special Function	Level Initialization
Equus/Centennial(VI)	2014	General	Head Lamp	Special Function	Sensor Initialization
Equus/Centennial(VI)	2014	General	Head Lamp	Special Function	Headlamp Leveling
Equus/Centennial(VI)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus/Centennial(VI)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus/Centennial(VI)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus/Centennial(VI)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus/Centennial(VI)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus/Centennial(VI)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus/Centennial(VI)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus/Centennial(VI)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus/Centennial(VI)	2014	General	Smart Key Unit	Version Information	
Equus/Centennial(VI)	2014	General	Smart Key Unit	Read Fault Code	
Equus/Centennial(VI)	2014	General	Smart Key Unit	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	Smart Key Unit	Read Data Stream	
Equus/Centennial(VI)	2014	General	Smart Key Unit	Actuation Test	
Equus/Centennial(VI)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Equus/Centennial(VI)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Equus/Centennial(VI)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Equus/Centennial(VI)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Equus/Centennial(VI)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Equus/Centennial(VI)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Equus/Centennial(VI)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Equus/Centennial(VI)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Equus/Centennial(VI)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Equus/Centennial(VI)	2014	General	CCS(Cruise Control System)	Version Information	
Equus/Centennial(VI)	2014	General	CCS(Cruise Control System)	Read Fault Code	
Equus/Centennial(VI)	2014	General	CCS(Cruise Control System)	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	CCS(Cruise Control System)	Read Data Stream	
Equus/Centennial(VI)	2014	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Equus/Centennial(VI)	2014	General	Intelligent Accel Pedal	Version Information	
Equus/Centennial(VI)	2014	General	Intelligent Accel Pedal	Read Fault Code	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2014	General	Intelligent Accel Pedal	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	Intelligent Accel Pedal	Read Data Stream	
Equus/Centennial(VI)	2014	General	Intelligent Accel Pedal	Actuation Test	
Equus/Centennial(VI)	2014	General	Pre-safe Seat Belt	Version Information	
Equus/Centennial(VI)	2014	General	Pre-safe Seat Belt	Read Fault Code	
Equus/Centennial(VI)	2014	General	Pre-safe Seat Belt	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	Pre-safe Seat Belt	Actuation Test	
Equus/Centennial(VI)	2014	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus/Centennial(VI)	2014	General	Around View Monitor System	Version Information	
Equus/Centennial(VI)	2014	General	Around View Monitor System	Read Fault Code	
Equus/Centennial(VI)	2014	General	Around View Monitor System	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	Around View Monitor System	Read Data Stream	
Equus/Centennial(VI)	2014	General	Around View Monitor System	Actuation Test	
Equus/Centennial(VI)	2014	General	Suspension	Version Information	
Equus/Centennial(VI)	2014	General	Suspension	Read Fault Code	
Equus/Centennial(VI)	2014	General	Suspension	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	Suspension	Read Data Stream	
Equus/Centennial(VI)	2014	General	Suspension	Special Function	Auto Detected Configuration Reset(FSP/ESC)Only
Equus/Centennial(VI)	2014	General	Suspension	Special Function	Height Level Control Select
Equus/Centennial(VI)	2014	General	Suspension	Special Function	Checking Air Pressure System
Equus/Centennial(VI)	2014	General	Suspension	Special Function	Air Filling Venting Setup
Equus/Centennial(VI)	2014	General	Suspension	Special Function	Height Sensor Calibration
Equus/Centennial(VI)	2014	General	Blind Spot Detection	Version Information	
Equus/Centennial(VI)	2014	General	Blind Spot Detection	Read Fault Code	
Equus/Centennial(VI)	2014	General	Blind Spot Detection	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	Blind Spot Detection	Read Data Stream	
Equus/Centennial(VI)	2014	General	Blind Spot Detection	Actuation Test	
Equus/Centennial(VI)	2014	General	Blind Spot Detection	Special Function	BSD Radar Calibration

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2014	General	Blind Spot Detection	Special Function	BSD Variant Coding
Equus/Centennial(VI)	2014	General	E-Shifter	Version Information	
Equus/Centennial(VI)	2014	General	E-Shifter	Read Fault Code	
Equus/Centennial(VI)	2014	General	E-Shifter	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	E-Shifter	Read Data Stream	
Equus/Centennial(VI)	2014	General	E-Shifter	Read FreezeData	
Equus/Centennial(VI)	2014	General	E-Shifter	Actuation Test	
Equus/Centennial(VI)	2014	General	Lane Departure Warning System	Version Information	
Equus/Centennial(VI)	2014	General	Lane Departure Warning System	Read Fault Code	
Equus/Centennial(VI)	2014	General	Lane Departure Warning System	Clear Fault Memory	
Equus/Centennial(VI)	2014	General	Lane Departure Warning System	Read Data Stream	
Equus/Centennial(VI)	2014	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Equus/Centennial(VI)	2014	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Equus/Centennial(VI)	2014	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Version Information	
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Actuation Test	
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Equus/Centennial(VI)	2013	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Equus/Centennial(VI)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Equus/Centennial(VI)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Equus/Centennial(VI)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Equus/Centennial(VI)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus/Centennial(VI)	2013	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU
Equus/Centennial(VI)	2013	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Equus/Centennial(VI)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Version Information	
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Special Function	Long G Sensor Calibration(Only ESP)
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Equus/Centennial(VI)	2013	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
Equus/Centennial(VI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus/Centennial(VI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus/Centennial(VI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus/Centennial(VI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Equus/Centennial(VI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Equus/Centennial(VI)	2013	General	AC(Air Conditioning)	Version Information	
Equus/Centennial(VI)	2013	General	AC(Air Conditioning)	Read Fault Code	
Equus/Centennial(VI)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	AC(Air Conditioning)	Read Data Stream	
Equus/Centennial(VI)	2013	General	AC(Air Conditioning)	Actuation Test	
Equus/Centennial(VI)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Version Information	
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Read Fault Code	
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Read Data Stream	
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Actuation Test	
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Special Function	HUD Calibration
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Special Function	ESCL Status Information
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Special Function	IPM Status Information
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Special Function	PDM Status Information
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Special Function	Escr Open Status Information
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Special Function	User Option
Equus/Centennial(VI)	2013	General	BCM(Body Control Module)	Special Function	Headrest Setting
Equus/Centennial(VI)	2013	General	EPB(Electrical Parking Brake)	Version Information	
Equus/Centennial(VI)	2013	General	EPB(Electrical Parking Brake)	Read Fault Code	
Equus/Centennial(VI)	2013	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	EPB(Electrical Parking Brake)	Read Data Stream	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2013	General	EPB(Electrical Parking Brake)	Actuation Test	
Equus/Centennial(VI)	2013	General	EPS(Electronic Power Steering)	Version Information	
Equus/Centennial(VI)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Equus/Centennial(VI)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Equus/Centennial(VI)	2013	General	EPS(Electronic Power Steering)	Actuation Test	
Equus/Centennial(VI)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Equus/Centennial(VI)	2013	General	Head Lamp	Version Information	
Equus/Centennial(VI)	2013	General	Head Lamp	Read Fault Code	
Equus/Centennial(VI)	2013	General	Head Lamp	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	Head Lamp	Read Data Stream	
Equus/Centennial(VI)	2013	General	Head Lamp	Actuation Test	
Equus/Centennial(VI)	2013	General	Head Lamp	Special Function	Calibration
Equus/Centennial(VI)	2013	General	Head Lamp	Special Function	Parameter Download
Equus/Centennial(VI)	2013	General	Head Lamp	Special Function	Level Initialization
Equus/Centennial(VI)	2013	General	Head Lamp	Special Function	Sensor Initialization
Equus/Centennial(VI)	2013	General	Head Lamp	Special Function	Headlamp Leveling
Equus/Centennial(VI)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus/Centennial(VI)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus/Centennial(VI)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus/Centennial(VI)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus/Centennial(VI)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus/Centennial(VI)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus/Centennial(VI)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus/Centennial(VI)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus/Centennial(VI)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus/Centennial(VI)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Equus/Centennial(VI)	2013	General	Smart Key	Version Information	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2013	General	Smart Key	Read Fault Code	
Equus/Centennial(VI)	2013	General	Smart Key	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	Smart Key	Read Data Stream	
Equus/Centennial(VI)	2013	General	Smart Key	Actuation Test	
Equus/Centennial(VI)	2013	General	Smart Key	Special Function	Smart Key Code Saving
Equus/Centennial(VI)	2013	General	Smart Key	Special Function	Antenna Status Check
Equus/Centennial(VI)	2013	General	Smart Key	Special Function	Current FOB Key Check
Equus/Centennial(VI)	2013	General	Smart Key	Special Function	FOB Key Status Information
Equus/Centennial(VI)	2013	General	Smart Key	Special Function	SMK Status Information
Equus/Centennial(VI)	2013	General	Smart Key	Special Function	ESCL Status Information
Equus/Centennial(VI)	2013	General	Smart Key	Special Function	ESCL Open Status Check
Equus/Centennial(VI)	2013	General	Smart Key	Special Function	Neutralization Mode
Equus/Centennial(VI)	2013	General	Smart Key	Special Function	Serial Communication Line Check
Equus/Centennial(VI)	2013	General	CCS(Cruise Control System)	Version Information	
Equus/Centennial(VI)	2013	General	CCS(Cruise Control System)	Read Fault Code	
Equus/Centennial(VI)	2013	General	CCS(Cruise Control System)	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	CCS(Cruise Control System)	Read Data Stream	
Equus/Centennial(VI)	2013	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Equus/Centennial(VI)	2013	General	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Equus/Centennial(VI)	2013	General	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Equus/Centennial(VI)	2013	General	DIS	Version Information	
Equus/Centennial(VI)	2013	General	DIS	Read Fault Code	
Equus/Centennial(VI)	2013	General	DIS	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	DIS	Read Data Stream	
Equus/Centennial(VI)	2013	General	DIS	Actuation Test	
Equus/Centennial(VI)	2013	General	DIS	Special Function	Get All S/W Version
Equus/Centennial(VI)	2013	General	DIS	Special Function	Ring Break
Equus/Centennial(VI)	2013	General	DIS	Special Function	Update From CD
Equus/Centennial(VI)	2013	General	DIS	Special Function	ECU Serial Number

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2013	General	DIS	Special Function	Wake Up Line
Equus/Centennial(VI)	2013	General	DIS	Special Function	Xdb Test
Equus/Centennial(VI)	2013	General	DIS	Special Function	DVD-Request when Slot is Empty
Equus/Centennial(VI)	2013	General	DIS	Special Function	Variant Coding
Equus/Centennial(VI)	2013	General	Intelligent Accel Pedal	Version Information	
Equus/Centennial(VI)	2013	General	Intelligent Accel Pedal	Read Fault Code	
Equus/Centennial(VI)	2013	General	Intelligent Accel Pedal	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	Intelligent Accel Pedal	Read Data Stream	
Equus/Centennial(VI)	2013	General	Intelligent Accel Pedal	Actuation Test	
Equus/Centennial(VI)	2013	General	LDWS	Version Information	
Equus/Centennial(VI)	2013	General	LDWS	Read Fault Code	
Equus/Centennial(VI)	2013	General	LDWS	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	LDWS	Read Data Stream	
Equus/Centennial(VI)	2013	General	LDWS	Special Function	LDWS Reference Point Calibration
Equus/Centennial(VI)	2013	General	LDWS	Special Function	LKAS/LDWS Variant Coding
Equus/Centennial(VI)	2013	General	LDWS	Special Function	LDWS Region Code
Equus/Centennial(VI)	2013	General	Pre-safe Seat Belt	Version Information	
Equus/Centennial(VI)	2013	General	Pre-safe Seat Belt	Read Fault Code	
Equus/Centennial(VI)	2013	General	Pre-safe Seat Belt	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	Pre-safe Seat Belt	Actuation Test	
Equus/Centennial(VI)	2013	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus/Centennial(VI)	2013	General	Suspension	Version Information	
Equus/Centennial(VI)	2013	General	Suspension	Read Fault Code	
Equus/Centennial(VI)	2013	General	Suspension	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	Suspension	Read Data Stream	
Equus/Centennial(VI)	2013	General	Suspension	Special Function	Auto Detected Configuration Reset(FSP/ESC)Only
Equus/Centennial(VI)	2013	General	Suspension	Special Function	Height Level Control Select
Equus/Centennial(VI)	2013	General	Suspension	Special Function	Checking Air Pressure System

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2013	General	Suspension	Special Function	Air Filling Venting Setup
Equus/Centennial(VI)	2013	General	Suspension	Special Function	Height Sensor Calibration
Equus/Centennial(VI)	2013	General	Blind Spot Detection	Version Information	
Equus/Centennial(VI)	2013	General	Blind Spot Detection	Read Fault Code	
Equus/Centennial(VI)	2013	General	Blind Spot Detection	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	Blind Spot Detection	Read Data Stream	
Equus/Centennial(VI)	2013	General	Blind Spot Detection	Actuation Test	
Equus/Centennial(VI)	2013	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Equus/Centennial(VI)	2013	General	Blind Spot Detection	Special Function	BSD Variant Coding
Equus/Centennial(VI)	2013	General	E-Shifter	Version Information	
Equus/Centennial(VI)	2013	General	E-Shifter	Read Fault Code	
Equus/Centennial(VI)	2013	General	E-Shifter	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	E-Shifter	Read Data Stream	
Equus/Centennial(VI)	2013	General	E-Shifter	Read FreezeData	
Equus/Centennial(VI)	2013	General	E-Shifter	Actuation Test	
Equus/Centennial(VI)	2013	General	ESP(Electronic Stability Program)	Version Information	
Equus/Centennial(VI)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
Equus/Centennial(VI)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
Equus/Centennial(VI)	2013	General	ESP(Electronic Stability Program)	Actuation Test	
Equus/Centennial(VI)	2013	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
Equus/Centennial(VI)	2013	General	ESP(Electronic Stability Program)	Special Function	Long G Sensor Calibration(Only FDD)
Equus/Centennial(VI)	2013	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Equus/Centennial(VI)	2013	General	ESP(Electronic Stability Program)	Special Function	Lateral G Sensor Calibration
Equus/Centennial(VI)	2013	General	ESP(Electronic Stability Program)	Special Function	Pressure Sensor Calibration
Equus/Centennial(VI)	2013	General	ESP(Electronic Stability Program)	Special Function	Valve Flushing
Equus/Centennial(VI)	2013	General	Smart Key Code Saving	Read Data Stream	
Equus/Centennial(VI)	2013	General	Smart Key Code Saving	Special Function	Smart Key Code Saving
Equus/Centennial(VI)	2013	General	Lane Departure Warning System	Version Information	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2013	General	Lane Departure Warning System	Read Fault Code	
Equus/Centennial(VI)	2013	General	Lane Departure Warning System	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	Lane Departure Warning System	Read Data Stream	
Equus/Centennial(VI)	2013	General	Lane Departure Warning System	Special Function	LDWS Region Code
Equus/Centennial(VI)	2013	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Equus/Centennial(VI)	2013	General	Electronic Control Suspension	Version Information	
Equus/Centennial(VI)	2013	General	Electronic Control Suspension	Read Fault Code	
Equus/Centennial(VI)	2013	General	Electronic Control Suspension	Clear Fault Memory	
Equus/Centennial(VI)	2013	General	Electronic Control Suspension	Read Data Stream	
Equus/Centennial(VI)	2013	General	Electronic Control Suspension	Special Function	Auto Detected Configuration
Equus/Centennial(VI)	2013	General	Electronic Control Suspension	Special Function	Reset(FSP/FSC)Only
Equus/Centennial(VI)	2013	General	Electronic Control Suspension	Special Function	Height Level Control Select
Equus/Centennial(VI)	2013	General	Electronic Control Suspension	Special Function	Checking Air Pressure System
Equus/Centennial(VI)	2013	General	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Equus/Centennial(VI)	2013	General	Electronic Control Suspension	Special Function	Height Sensor Calibration
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Equus/Centennial(VI)	2013	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Version Information	
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Actuation Test	
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Equus/Centennial(VI)	2012	General	TCM(Transmission Control Module)	Version Information	
Equus/Centennial(VI)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Equus/Centennial(VI)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Equus/Centennial(VI)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
Equus/Centennial(VI)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Equus/Centennial(VI)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus/Centennial(VI)	2012	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU
Equus/Centennial(VI)	2012	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Equus/Centennial(VI)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Equus/Centennial(VI)	2012	General	ESP(Electronic Stability Program)	Version Information	
Equus/Centennial(VI)	2012	General	ESP(Electronic Stability Program)	Read Fault Code	
Equus/Centennial(VI)	2012	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	ESP(Electronic Stability Program)	Read Data Stream	
Equus/Centennial(VI)	2012	General	ESP(Electronic Stability Program)	Actuation Test	
Equus/Centennial(VI)	2012	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
Equus/Centennial(VI)	2012	General	ESP(Electronic Stability Program)	Special Function	Long G Sensor Calibration(Only ESP)
Equus/Centennial(VI)	2012	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Equus/Centennial(VI)	2012	General	ESP(Electronic Stability Program)	Special Function	Lateral G Sensor Calibration
Equus/Centennial(VI)	2012	General	ESP(Electronic Stability Program)	Special Function	Pressure Sensor Calibration
Equus/Centennial(VI)	2012	General	ESP(Electronic Stability Program)	Special Function	Valve Flushing
Equus/Centennial(VI)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus/Centennial(VI)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus/Centennial(VI)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus/Centennial(VI)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2012	General	AC(Air Conditioning)	Version Information	
Equus/Centennial(VI)	2012	General	AC(Air Conditioning)	Read Fault Code	
Equus/Centennial(VI)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	AC(Air Conditioning)	Read Data Stream	
Equus/Centennial(VI)	2012	General	AC(Air Conditioning)	Actuation Test	
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Version Information	
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Read Fault Code	
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Read Data Stream	
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Actuation Test	
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Special Function	ESCL Status Information
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Special Function	IPM Status Information
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Special Function	PDM Status Information
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Special Function	ESCL Open Status Information
Equus/Centennial(VI)	2012	General	BCM(Body Control Module)	Special Function	Headrest Setting
Equus/Centennial(VI)	2012	General	EPB(Electrical Parking Brake)	Version Information	
Equus/Centennial(VI)	2012	General	EPB(Electrical Parking Brake)	Read Fault Code	
Equus/Centennial(VI)	2012	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	EPB(Electrical Parking Brake)	Read Data Stream	
Equus/Centennial(VI)	2012	General	EPB(Electrical Parking Brake)	Actuation Test	
Equus/Centennial(VI)	2012	General	EPS(Electronic Power Steering)	Version Information	
Equus/Centennial(VI)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
Equus/Centennial(VI)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
Equus/Centennial(VI)	2012	General	EPS(Electronic Power Steering)	Actuation Test	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Equus/Centennial(VI)	2012	General	Head Lamp	Version Information	
Equus/Centennial(VI)	2012	General	Head Lamp	Read Fault Code	
Equus/Centennial(VI)	2012	General	Head Lamp	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	Head Lamp	Read Data Stream	
Equus/Centennial(VI)	2012	General	Head Lamp	Actuation Test	
Equus/Centennial(VI)	2012	General	Head Lamp	Special Function	Calibration
Equus/Centennial(VI)	2012	General	Head Lamp	Special Function	Parameter Download
Equus/Centennial(VI)	2012	General	Head Lamp	Special Function	Level Initialization
Equus/Centennial(VI)	2012	General	Head Lamp	Special Function	Sensor Initialization
Equus/Centennial(VI)	2012	General	Head Lamp	Special Function	Headlamp Leveling
Equus/Centennial(VI)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus/Centennial(VI)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus/Centennial(VI)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus/Centennial(VI)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus/Centennial(VI)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus/Centennial(VI)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus/Centennial(VI)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Equus/Centennial(VI)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus/Centennial(VI)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus/Centennial(VI)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus/Centennial(VI)	2012	General	Smart Key Code Saving	Read Data Stream	
Equus/Centennial(VI)	2012	General	Smart Key Code Saving	Special Function	Smart Key Code Saving
Equus/Centennial(VI)	2012	General	CCS(Cruise Control System)	Version Information	
Equus/Centennial(VI)	2012	General	CCS(Cruise Control System)	Read Fault Code	
Equus/Centennial(VI)	2012	General	CCS(Cruise Control System)	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	CCS(Cruise Control System)	Read Data Stream	
Equus/Centennial(VI)	2012	General	CCS(Cruise Control System)	Special Function	Alignment Driving Mode

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2012	General	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Equus/Centennial(VI)	2012	General	DIS	Version Information	
Equus/Centennial(VI)	2012	General	DIS	Read Fault Code	
Equus/Centennial(VI)	2012	General	DIS	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	DIS	Read Data Stream	
Equus/Centennial(VI)	2012	General	DIS	Actuation Test	
Equus/Centennial(VI)	2012	General	DIS	Special Function	Get All S/W Version
Equus/Centennial(VI)	2012	General	DIS	Special Function	Ring Break
Equus/Centennial(VI)	2012	General	DIS	Special Function	Update From CD
Equus/Centennial(VI)	2012	General	DIS	Special Function	ECU Serial Number
Equus/Centennial(VI)	2012	General	DIS	Special Function	Wake Up Line
Equus/Centennial(VI)	2012	General	DIS	Special Function	Xdb Test
Equus/Centennial(VI)	2012	General	DIS	Special Function	DVD-Request when slot is Empty
Equus/Centennial(VI)	2012	General	DIS	Special Function	Variant Coding
Equus/Centennial(VI)	2012	General	Intelligent Accel Pedal	Version Information	
Equus/Centennial(VI)	2012	General	Intelligent Accel Pedal	Read Fault Code	
Equus/Centennial(VI)	2012	General	Intelligent Accel Pedal	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	Intelligent Accel Pedal	Read Data Stream	
Equus/Centennial(VI)	2012	General	Intelligent Accel Pedal	Actuation Test	
Equus/Centennial(VI)	2012	General	Lane Departure Warning System	Version Information	
Equus/Centennial(VI)	2012	General	Lane Departure Warning System	Read Fault Code	
Equus/Centennial(VI)	2012	General	Lane Departure Warning System	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	Lane Departure Warning System	Read Data Stream	
Equus/Centennial(VI)	2012	General	Lane Departure Warning System	Special Function	LDWS Region Code
Equus/Centennial(VI)	2012	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Equus/Centennial(VI)	2012	General	Pre-safe Seat Belt	Version Information	
Equus/Centennial(VI)	2012	General	Pre-safe Seat Belt	Read Fault Code	
Equus/Centennial(VI)	2012	General	Pre-safe Seat Belt	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	Pre-safe Seat Belt	Actuation Test	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2012	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus/Centennial(VI)	2012	General	Electronic Control Suspension	Version Information	
Equus/Centennial(VI)	2012	General	Electronic Control Suspension	Read Fault Code	
Equus/Centennial(VI)	2012	General	Electronic Control Suspension	Clear Fault Memory	
Equus/Centennial(VI)	2012	General	Electronic Control Suspension	Read Data Stream	
Equus/Centennial(VI)	2012	General	Electronic Control Suspension	Special Function	Auto Detected Configuration Reset(FSP/ESC/Onk)
Equus/Centennial(VI)	2012	General	Electronic Control Suspension	Special Function	Height Level Control Select
Equus/Centennial(VI)	2012	General	Electronic Control Suspension	Special Function	Checking Air Pressure Custom
Equus/Centennial(VI)	2012	General	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Equus/Centennial(VI)	2012	General	Electronic Control Suspension	Special Function	Height Sensor Calibration
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Read FreezeData	
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Equus/Centennial(VI)	2012	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Equus/Centennial(VI)	2011	General	ECM(Engine Control Module)	Version Information	
Equus/Centennial(VI)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Equus/Centennial(VI)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Equus/Centennial(VI)	2011	General	ECM(Engine Control Module)	Actuation Test	
Equus/Centennial(VI)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Equus/Centennial(VI)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
Equus/Centennial(VI)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus/Centennial(VI)	2011	General	TCM(Transmission Control Module)	Version Information	
Equus/Centennial(VI)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Equus/Centennial(VI)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Equus/Centennial(VI)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
Equus/Centennial(VI)	2011	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus/Centennial(VI)	2011	General	TCM(Transmission Control Module)	Special Function	CLEAR CAN LEARNABLE Status
Equus/Centennial(VI)	2011	General	ESP(Electronic Stability Program)	Version Information	
Equus/Centennial(VI)	2011	General	ESP(Electronic Stability Program)	Read Fault Code	
Equus/Centennial(VI)	2011	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	ESP(Electronic Stability Program)	Read Data Stream	
Equus/Centennial(VI)	2011	General	ESP(Electronic Stability Program)	Actuation Test	
Equus/Centennial(VI)	2011	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
Equus/Centennial(VI)	2011	General	ESP(Electronic Stability Program)	Special Function	Long G Sensor Calibration (Only ESP)
Equus/Centennial(VI)	2011	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Equus/Centennial(VI)	2011	General	ESP(Electronic Stability Program)	Special Function	Lateral G Sensor Calibration
Equus/Centennial(VI)	2011	General	ESP(Electronic Stability Program)	Special Function	Pressure Sensor Calibration
Equus/Centennial(VI)	2011	General	ESP(Electronic Stability Program)	Special Function	Valve Flushing
Equus/Centennial(VI)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus/Centennial(VI)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus/Centennial(VI)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus/Centennial(VI)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Equus/Centennial(VI)	2011	General	AC(Air Conditioning)	Version Information	
Equus/Centennial(VI)	2011	General	AC(Air Conditioning)	Read Fault Code	
Equus/Centennial(VI)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	AC(Air Conditioning)	Read Data Stream	
Equus/Centennial(VI)	2011	General	AC(Air Conditioning)	Actuation Test	
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Version Information	
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Read Fault Code	
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Read Data Stream	
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Actuation Test	
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Special Function	IPM Status Information
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Special Function	PDM Status Information
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Special Function	ESC Open Status Information
Equus/Centennial(VI)	2011	General	BCM(Body Control Module)	Special Function	Headrest Setting
Equus/Centennial(VI)	2011	General	EPB(Electrical Parking Brake)	Version Information	
Equus/Centennial(VI)	2011	General	EPB(Electrical Parking Brake)	Read Fault Code	
Equus/Centennial(VI)	2011	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	EPB(Electrical Parking Brake)	Read Data Stream	
Equus/Centennial(VI)	2011	General	EPB(Electrical Parking Brake)	Actuation Test	
Equus/Centennial(VI)	2011	General	EPS(Electronic Power Steering)	Version Information	
Equus/Centennial(VI)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Equus/Centennial(VI)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Equus/Centennial(VI)	2011	General	EPS(Electronic Power Steering)	Actuation Test	
Equus/Centennial(VI)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Equus/Centennial(VI)	2011	General	Head Lamp	Version Information	
Equus/Centennial(VI)	2011	General	Head Lamp	Read Fault Code	
Equus/Centennial(VI)	2011	General	Head Lamp	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	Head Lamp	Read Data Stream	
Equus/Centennial(VI)	2011	General	Head Lamp	Actuation Test	
Equus/Centennial(VI)	2011	General	Head Lamp	Special Function	Calibration
Equus/Centennial(VI)	2011	General	Head Lamp	Special Function	Parameter Download
Equus/Centennial(VI)	2011	General	Head Lamp	Special Function	Level Initialization
Equus/Centennial(VI)	2011	General	Head Lamp	Special Function	Sensor Initialization
Equus/Centennial(VI)	2011	General	Head Lamp	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus/Centennial(VI)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus/Centennial(VI)	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus/Centennial(VI)	2011	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus/Centennial(VI)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus/Centennial(VI)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus/Centennial(VI)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Equus/Centennial(VI)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus/Centennial(VI)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus/Centennial(VI)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus/Centennial(VI)	2011	General	Smart Key Code Saving	Read Data Stream	
Equus/Centennial(VI)	2011	General	Smart Key Code Saving	Special Function	Smart Key Code Saving
Equus/Centennial(VI)	2011	General	CCS(Cruise Control System)	Version Information	
Equus/Centennial(VI)	2011	General	CCS(Cruise Control System)	Read Fault Code	
Equus/Centennial(VI)	2011	General	CCS(Cruise Control System)	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	CCS(Cruise Control System)	Read Data Stream	
Equus/Centennial(VI)	2011	General	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Equus/Centennial(VI)	2011	General	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Equus/Centennial(VI)	2011	General	DIS	Version Information	
Equus/Centennial(VI)	2011	General	DIS	Read Fault Code	
Equus/Centennial(VI)	2011	General	DIS	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	DIS	Read Data Stream	
Equus/Centennial(VI)	2011	General	DIS	Actuation Test	
Equus/Centennial(VI)	2011	General	DIS	Special Function	Get All S/W Version
Equus/Centennial(VI)	2011	General	DIS	Special Function	Ring Break
Equus/Centennial(VI)	2011	General	DIS	Special Function	Update From CD
Equus/Centennial(VI)	2011	General	DIS	Special Function	ECU Serial Number
Equus/Centennial(VI)	2011	General	DIS	Special Function	Wake Up Line

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2011	General	DIS	Special Function	Xdb Test
Equus/Centennial(VI)	2011	General	DIS	Special Function	DVD-Request when slot is empty
Equus/Centennial(VI)	2011	General	DIS	Special Function	Variant Coding
Equus/Centennial(VI)	2011	General	LDWS	Version Information	
Equus/Centennial(VI)	2011	General	LDWS	Read Fault Code	
Equus/Centennial(VI)	2011	General	LDWS	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	LDWS	Read Data Stream	
Equus/Centennial(VI)	2011	General	LDWS	Special Function	LDWS Region Code
Equus/Centennial(VI)	2011	General	LDWS	Special Function	LDWS Reference Point Calibration
Equus/Centennial(VI)	2011	General	Pre-safe Seat Belt	Version Information	
Equus/Centennial(VI)	2011	General	Pre-safe Seat Belt	Read Fault Code	
Equus/Centennial(VI)	2011	General	Pre-safe Seat Belt	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	Pre-safe Seat Belt	Actuation Test	
Equus/Centennial(VI)	2011	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus/Centennial(VI)	2011	General	Electronic Control Suspension	Version Information	
Equus/Centennial(VI)	2011	General	Electronic Control Suspension	Read Fault Code	
Equus/Centennial(VI)	2011	General	Electronic Control Suspension	Clear Fault Memory	
Equus/Centennial(VI)	2011	General	Electronic Control Suspension	Read Data Stream	
Equus/Centennial(VI)	2011	General	Electronic Control Suspension	Special Function	Auto Detected Configuration
Equus/Centennial(VI)	2011	General	Electronic Control Suspension	Special Function	Reset(ESP/ESC)Only
Equus/Centennial(VI)	2011	General	Electronic Control Suspension	Special Function	Height Level Control Select
Equus/Centennial(VI)	2011	General	Electronic Control Suspension	Special Function	Checking Air Pressure
Equus/Centennial(VI)	2011	General	Electronic Control Suspension	Special Function	Custom
Equus/Centennial(VI)	2011	General	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Equus/Centennial(VI)	2011	General	Electronic Control Suspension	Special Function	Height Sensor Calibration
Equus/Centennial(VI)	2011	General	ECM(Engine Control Module)	Read FreezeData	
Equus/Centennial(VI)	2011	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Equus/Centennial(VI)	2011	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Equus/Centennial(VI)	2010	General	ECM(Engine Control Module)	Version Information	
Equus/Centennial(VI)	2010	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	ECM(Engine Control Module)	Read Data Stream	
Equus/Centennial(VI)	2010	General	ECM(Engine Control Module)	Actuation Test	
Equus/Centennial(VI)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
Equus/Centennial(VI)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
Equus/Centennial(VI)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus/Centennial(VI)	2010	General	TCM(Transmission Control Module)	Version Information	
Equus/Centennial(VI)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Equus/Centennial(VI)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Equus/Centennial(VI)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
Equus/Centennial(VI)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Equus/Centennial(VI)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus/Centennial(VI)	2010	General	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Equus/Centennial(VI)	2010	General	ESP(Electronic Stability Program)	Version Information	
Equus/Centennial(VI)	2010	General	ESP(Electronic Stability Program)	Read Fault Code	
Equus/Centennial(VI)	2010	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	ESP(Electronic Stability Program)	Read Data Stream	
Equus/Centennial(VI)	2010	General	ESP(Electronic Stability Program)	Actuation Test	
Equus/Centennial(VI)	2010	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
Equus/Centennial(VI)	2010	General	ESP(Electronic Stability Program)	Special Function	Long G Sensor Calibration(Only ESP)
Equus/Centennial(VI)	2010	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Equus/Centennial(VI)	2010	General	ESP(Electronic Stability Program)	Special Function	Lateral G Sensor Calibration
Equus/Centennial(VI)	2010	General	ESP(Electronic Stability Program)	Special Function	Pressure Sensor Calibration
Equus/Centennial(VI)	2010	General	ESP(Electronic Stability Program)	Special Function	Valve Flushing
Equus/Centennial(VI)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus/Centennial(VI)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus/Centennial(VI)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Equus/Centennial(VI)	2010	General	AC(Air Conditioning)	Version Information	
Equus/Centennial(VI)	2010	General	AC(Air Conditioning)	Read Fault Code	
Equus/Centennial(VI)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	AC(Air Conditioning)	Read Data Stream	
Equus/Centennial(VI)	2010	General	AC(Air Conditioning)	Actuation Test	
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Version Information	
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Read Fault Code	
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Read Data Stream	
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Actuation Test	
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Special Function	ESCL Status Information
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Special Function	IPM Status Information
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Special Function	PDM Status Information
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Special Function	LSCI Open Status Information
Equus/Centennial(VI)	2010	General	BCM(Body Control Module)	Special Function	Headrest Setting
Equus/Centennial(VI)	2010	General	EPB(Electrical Parking Brake)	Version Information	
Equus/Centennial(VI)	2010	General	EPB(Electrical Parking Brake)	Read Fault Code	
Equus/Centennial(VI)	2010	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	EPB(Electrical Parking Brake)	Read Data Stream	
Equus/Centennial(VI)	2010	General	EPB(Electrical Parking Brake)	Actuation Test	
Equus/Centennial(VI)	2010	General	EPS(Electronic Power Steering)	Version Information	
Equus/Centennial(VI)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
Equus/Centennial(VI)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2010	General	EPS(Electronic Power Steering)	Actuation Test	
Equus/Centennial(VI)	2010	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Equus/Centennial(VI)	2010	General	Head Lamp	Version Information	
Equus/Centennial(VI)	2010	General	Head Lamp	Read Fault Code	
Equus/Centennial(VI)	2010	General	Head Lamp	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	Head Lamp	Read Data Stream	
Equus/Centennial(VI)	2010	General	Head Lamp	Actuation Test	
Equus/Centennial(VI)	2010	General	Head Lamp	Special Function	Calibration
Equus/Centennial(VI)	2010	General	Head Lamp	Special Function	Parameter Download
Equus/Centennial(VI)	2010	General	Head Lamp	Special Function	Level Initialization
Equus/Centennial(VI)	2010	General	Head Lamp	Special Function	Sensor Initialization
Equus/Centennial(VI)	2010	General	Head Lamp	Special Function	Headlamp Leveling
Equus/Centennial(VI)	2010	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus/Centennial(VI)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus/Centennial(VI)	2010	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus/Centennial(VI)	2010	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus/Centennial(VI)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus/Centennial(VI)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus/Centennial(VI)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Equus/Centennial(VI)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus/Centennial(VI)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus/Centennial(VI)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus/Centennial(VI)	2010	General	Smart Key Code Saving	Read Data Stream	
Equus/Centennial(VI)	2010	General	Smart Key Code Saving	Special Function	Smart Key Code Saving
Equus/Centennial(VI)	2010	General	CCS(Cruise Control System)	Version Information	
Equus/Centennial(VI)	2010	General	CCS(Cruise Control System)	Read Fault Code	
Equus/Centennial(VI)	2010	General	CCS(Cruise Control System)	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	CCS(Cruise Control System)	Read Data Stream	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2010	General	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Equus/Centennial(VI)	2010	General	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Equus/Centennial(VI)	2010	General	DIS	Version Information	
Equus/Centennial(VI)	2010	General	DIS	Read Fault Code	
Equus/Centennial(VI)	2010	General	DIS	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	DIS	Read Data Stream	
Equus/Centennial(VI)	2010	General	DIS	Actuation Test	
Equus/Centennial(VI)	2010	General	DIS	Special Function	Get All S/W Version
Equus/Centennial(VI)	2010	General	DIS	Special Function	Ring Break
Equus/Centennial(VI)	2010	General	DIS	Special Function	Update From CD
Equus/Centennial(VI)	2010	General	DIS	Special Function	ECU Serial Number
Equus/Centennial(VI)	2010	General	DIS	Special Function	Wake Up Line
Equus/Centennial(VI)	2010	General	DIS	Special Function	Xdb Test
Equus/Centennial(VI)	2010	General	DIS	Special Function	DVD-Request when Slot is Empty
Equus/Centennial(VI)	2010	General	DIS	Special Function	Variant Coding
Equus/Centennial(VI)	2010	General	LDWS	Version Information	
Equus/Centennial(VI)	2010	General	LDWS	Read Fault Code	
Equus/Centennial(VI)	2010	General	LDWS	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	LDWS	Read Data Stream	
Equus/Centennial(VI)	2010	General	LDWS	Special Function	LDWS Region Code
Equus/Centennial(VI)	2010	General	LDWS	Special Function	LDWS Reference Point Calibration
Equus/Centennial(VI)	2010	General	Pre-safe Seat Belt	Version Information	
Equus/Centennial(VI)	2010	General	Pre-safe Seat Belt	Read Fault Code	
Equus/Centennial(VI)	2010	General	Pre-safe Seat Belt	Clear Fault Memory	
Equus/Centennial(VI)	2010	General	Pre-safe Seat Belt	Actuation Test	
Equus/Centennial(VI)	2010	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus/Centennial(VI)	2010	General	Electronic Control Suspension	Version Information	
Equus/Centennial(VI)	2010	General	Electronic Control Suspension	Read Fault Code	
Equus/Centennial(VI)	2010	General	Electronic Control Suspension	Clear Fault Memory	

model	year	area	system	function	subfunction
Equus/Centennial(VI)	2010	General	Electronic Control Suspension	Read Data Stream	
Equus/Centennial(VI)	2010	General	Electronic Control Suspension	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Equus/Centennial(VI)	2010	General	Electronic Control Suspension	Special Function	Height Level Control Select
Equus/Centennial(VI)	2010	General	Electronic Control Suspension	Special Function	Checking Air Pressure Custom
Equus/Centennial(VI)	2010	General	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Equus/Centennial(VI)	2010	General	Electronic Control Suspension	Special Function	Height Sensor Calibration
Equus/Centennial(VI)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Equus/Centennial(VI)	2010	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Equus/Centennial(VI)	2010	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Version Information	
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Actuation Test	
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra Coupe(JK)	2016	General	TCM(Transmission Control Module)	Version Information	
Elantra Coupe(JK)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra Coupe(JK)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra Coupe(JK)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra Coupe(JK)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Elantra Coupe(JK)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra Coupe(JK)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Elantra Coupe(JK)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra Coupe(JK)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra Coupe(JK)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra Coupe(JK)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra Coupe(JK)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Elantra Coupe(JK)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra Coupe(JK)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra Coupe(JK)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra Coupe(JK)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra Coupe(JK)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra Coupe(JK)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra Coupe(JK)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra Coupe(JK)	2016	General	AC(Air Conditioning)	Version Information	
Elantra Coupe(JK)	2016	General	AC(Air Conditioning)	Read Fault Code	
Elantra Coupe(JK)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra Coupe(JK)	2016	General	AC(Air Conditioning)	Read Data Stream	
Elantra Coupe(JK)	2016	General	AC(Air Conditioning)	Actuation Test	
Elantra Coupe(JK)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra Coupe(JK)	2016	General	BCM(Body Control Module)	Version Information	
Elantra Coupe(JK)	2016	General	BCM(Body Control Module)	Read Fault Code	
Elantra Coupe(JK)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2016	General	BCM(Body Control Module)	Read Data Stream	
Elantra Coupe(JK)	2016	General	BCM(Body Control Module)	Actuation Test	
Elantra Coupe(JK)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Elantra Coupe(JK)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Elantra Coupe(JK)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Elantra Coupe(JK)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Elantra Coupe(JK)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Elantra Coupe(JK)	2016	General	EPS(Electronic Power Steering)	Version Information	
Elantra Coupe(JK)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra Coupe(JK)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra Coupe(JK)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra Coupe(JK)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra Coupe(JK)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra Coupe(JK)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra Coupe(JK)	2016	General	Smart Key Unit	Version Information	
Elantra Coupe(JK)	2016	General	Smart Key Unit	Read Fault Code	
Elantra Coupe(JK)	2016	General	Smart Key Unit	Clear Fault Memory	
Elantra Coupe(JK)	2016	General	Smart Key Unit	Read Data Stream	
Elantra Coupe(JK)	2016	General	Smart Key Unit	Actuation Test	
Elantra Coupe(JK)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra Coupe(JK)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra Coupe(JK)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Elantra Coupe(JK)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra Coupe(JK)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra Coupe(JK)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra Coupe(JK)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra Coupe(JK)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra Coupe(JK)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra Coupe(JK)	2016	General	IMM(Immobilizer)	Read Data Stream	
Elantra Coupe(JK)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra Coupe(JK)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra Coupe(JK)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra Coupe(JK)	2016	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra Coupe(JK)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra Coupe(JK)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra Coupe(JK)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Version Information	
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Actuation Test	
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra Coupe(JK)	2015	General	TCM(Transmission Control Module)	Version Information	
Elantra Coupe(JK)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra Coupe(JK)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra Coupe(JK)	2015	General	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Elantra Coupe(JK)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra Coupe(JK)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra Coupe(JK)	2015	General	ESP(Electronic Stability Program)	Version Information	
Elantra Coupe(JK)	2015	General	ESP(Electronic Stability Program)	Read Fault Code	
Elantra Coupe(JK)	2015	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Elantra Coupe(JK)	2015	General	ESP(Electronic Stability Program)	Read Data Stream	
Elantra Coupe(JK)	2015	General	ESP(Electronic Stability Program)	Actuation Test	
Elantra Coupe(JK)	2015	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Elantra Coupe(JK)	2015	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Elantra Coupe(JK)	2015	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
Elantra Coupe(JK)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra Coupe(JK)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra Coupe(JK)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra Coupe(JK)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra Coupe(JK)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra Coupe(JK)	2015	General	AC(Air Conditioning)	Version Information	
Elantra Coupe(JK)	2015	General	AC(Air Conditioning)	Read Fault Code	
Elantra Coupe(JK)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra Coupe(JK)	2015	General	AC(Air Conditioning)	Read Data Stream	
Elantra Coupe(JK)	2015	General	AC(Air Conditioning)	Actuation Test	
Elantra Coupe(JK)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra Coupe(JK)	2015	General	BCM(Body Control Module)	Version Information	
Elantra Coupe(JK)	2015	General	BCM(Body Control Module)	Read Fault Code	
Elantra Coupe(JK)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2015	General	BCM(Body Control Module)	Read Data Stream	
Elantra Coupe(JK)	2015	General	BCM(Body Control Module)	Actuation Test	
Elantra Coupe(JK)	2015	General	EPS(Electronic Power Steering)	Version Information	
Elantra Coupe(JK)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra Coupe(JK)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra Coupe(JK)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra Coupe(JK)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra Coupe(JK)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra Coupe(JK)	2015	General	Auto Headlamp Leveling System	Version Information	
Elantra Coupe(JK)	2015	General	Auto Headlamp Leveling System	Read Fault Code	
Elantra Coupe(JK)	2015	General	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra Coupe(JK)	2015	General	Auto Headlamp Leveling System	Read Data Stream	
Elantra Coupe(JK)	2015	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra Coupe(JK)	2015	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra Coupe(JK)	2015	General	IMM(Immobilizer)	Read Data Stream	
Elantra Coupe(JK)	2015	General	IMM(Immobilizer)	Special Function	Password
Elantra Coupe(JK)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Elantra Coupe(JK)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra Coupe(JK)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra Coupe(JK)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Elantra Coupe(JK)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra Coupe(JK)	2015	General	Smart Key Unit	Version Information	
Elantra Coupe(JK)	2015	General	Smart Key Unit	Read Fault Code	
Elantra Coupe(JK)	2015	General	Smart Key Unit	Clear Fault Memory	
Elantra Coupe(JK)	2015	General	Smart Key Unit	Read Data Stream	
Elantra Coupe(JK)	2015	General	Smart Key Unit	Actuation Test	
Elantra Coupe(JK)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra Coupe(JK)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra Coupe(JK)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Elantra Coupe(JK)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra Coupe(JK)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra Coupe(JK)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra Coupe(JK)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra Coupe(JK)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra Coupe(JK)	2015	General	Transmitter Code Saving	Read Data Stream	
Elantra Coupe(JK)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Elantra Coupe(JK)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Version Information	
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Actuation Test	
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra Coupe(JK)	2014	General	TCM(Transmission Control Module)	Version Information	
Elantra Coupe(JK)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra Coupe(JK)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra Coupe(JK)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra Coupe(JK)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Elantra Coupe(JK)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra Coupe(JK)	2014	General	ESP(Electronic Stability Program)	Version Information	
Elantra Coupe(JK)	2014	General	ESP(Electronic Stability Program)	Read Fault Code	
Elantra Coupe(JK)	2014	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Elantra Coupe(JK)	2014	General	ESP(Electronic Stability Program)	Read Data Stream	
Elantra Coupe(JK)	2014	General	ESP(Electronic Stability Program)	Actuation Test	
Elantra Coupe(JK)	2014	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Elantra Coupe(JK)	2014	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Elantra Coupe(JK)	2014	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
Elantra Coupe(JK)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra Coupe(JK)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra Coupe(JK)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra Coupe(JK)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra Coupe(JK)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra Coupe(JK)	2014	General	AC(Air Conditioning)	Version Information	
Elantra Coupe(JK)	2014	General	AC(Air Conditioning)	Read Fault Code	
Elantra Coupe(JK)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra Coupe(JK)	2014	General	AC(Air Conditioning)	Read Data Stream	
Elantra Coupe(JK)	2014	General	AC(Air Conditioning)	Actuation Test	
Elantra Coupe(JK)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra Coupe(JK)	2014	General	BCM(Body Control Module)	Version Information	
Elantra Coupe(JK)	2014	General	BCM(Body Control Module)	Read Fault Code	
Elantra Coupe(JK)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2014	General	BCM(Body Control Module)	Read Data Stream	
Elantra Coupe(JK)	2014	General	BCM(Body Control Module)	Actuation Test	
Elantra Coupe(JK)	2014	General	EPS(Electronic Power Steering)	Version Information	
Elantra Coupe(JK)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra Coupe(JK)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra Coupe(JK)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra Coupe(JK)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra Coupe(JK)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra Coupe(JK)	2014	General	Auto Headlamp Leveling System	Version Information	
Elantra Coupe(JK)	2014	General	Auto Headlamp Leveling System	Read Fault Code	
Elantra Coupe(JK)	2014	General	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra Coupe(JK)	2014	General	Auto Headlamp Leveling System	Read Data Stream	
Elantra Coupe(JK)	2014	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra Coupe(JK)	2014	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra Coupe(JK)	2014	General	IMM(Immobilizer)	Read Data Stream	
Elantra Coupe(JK)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra Coupe(JK)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra Coupe(JK)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra Coupe(JK)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Elantra Coupe(JK)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra Coupe(JK)	2014	General	Smart Key Unit	Version Information	
Elantra Coupe(JK)	2014	General	Smart Key Unit	Read Fault Code	
Elantra Coupe(JK)	2014	General	Smart Key Unit	Clear Fault Memory	
Elantra Coupe(JK)	2014	General	Smart Key Unit	Read Data Stream	
Elantra Coupe(JK)	2014	General	Smart Key Unit	Actuation Test	
Elantra Coupe(JK)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra Coupe(JK)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra Coupe(JK)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Elantra Coupe(JK)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra Coupe(JK)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra Coupe(JK)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra Coupe(JK)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra Coupe(JK)	2014	General	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra Coupe(JK)	2014	General	Transmitter Code Saving	Read Data Stream	
Elantra Coupe(JK)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Elantra Coupe(JK)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Version Information	
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Actuation Test	
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra Coupe(JK)	2013	General	TCM(Transmission Control Module)	Version Information	
Elantra Coupe(JK)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra Coupe(JK)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra Coupe(JK)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra Coupe(JK)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Elantra Coupe(JK)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra Coupe(JK)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra Coupe(JK)	2013	General	ESP(Electronic Stability Program)	Version Information	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
Elantra Coupe(JK)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Elantra Coupe(JK)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
Elantra Coupe(JK)	2013	General	ESP(Electronic Stability Program)	Actuation Test	
Elantra Coupe(JK)	2013	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Elantra Coupe(JK)	2013	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Elantra Coupe(JK)	2013	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
Elantra Coupe(JK)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra Coupe(JK)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra Coupe(JK)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra Coupe(JK)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra Coupe(JK)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra Coupe(JK)	2013	General	AC(Air Conditioning)	Version Information	
Elantra Coupe(JK)	2013	General	AC(Air Conditioning)	Read Fault Code	
Elantra Coupe(JK)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra Coupe(JK)	2013	General	AC(Air Conditioning)	Read Data Stream	
Elantra Coupe(JK)	2013	General	AC(Air Conditioning)	Actuation Test	
Elantra Coupe(JK)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra Coupe(JK)	2013	General	BCM(Body Control Module)	Version Information	
Elantra Coupe(JK)	2013	General	BCM(Body Control Module)	Read Fault Code	
Elantra Coupe(JK)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2013	General	BCM(Body Control Module)	Read Data Stream	
Elantra Coupe(JK)	2013	General	BCM(Body Control Module)	Actuation Test	
Elantra Coupe(JK)	2013	General	EPS(Electronic Power Steering)	Version Information	
Elantra Coupe(JK)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra Coupe(JK)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra Coupe(JK)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra Coupe(JK)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra Coupe(JK)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra Coupe(JK)	2013	General	Auto Headlamp Leveling System	Version Information	
Elantra Coupe(JK)	2013	General	Auto Headlamp Leveling System	Read Fault Code	
Elantra Coupe(JK)	2013	General	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra Coupe(JK)	2013	General	Auto Headlamp Leveling System	Read Data Stream	
Elantra Coupe(JK)	2013	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra Coupe(JK)	2013	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra Coupe(JK)	2013	General	IMM(Immobilizer)	Read Data Stream	
Elantra Coupe(JK)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra Coupe(JK)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra Coupe(JK)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra Coupe(JK)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Elantra Coupe(JK)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra Coupe(JK)	2013	General	Smart Key Unit	Version Information	
Elantra Coupe(JK)	2013	General	Smart Key Unit	Read Fault Code	
Elantra Coupe(JK)	2013	General	Smart Key Unit	Clear Fault Memory	
Elantra Coupe(JK)	2013	General	Smart Key Unit	Read Data Stream	
Elantra Coupe(JK)	2013	General	Smart Key Unit	Actuation Test	
Elantra Coupe(JK)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra Coupe(JK)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra Coupe(JK)	2013	General	Smart Key Unit	Special Function	SMK Status Information
Elantra Coupe(JK)	2013	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra Coupe(JK)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra Coupe(JK)	2013	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra Coupe(JK)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra Coupe(JK)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra Coupe(JK)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra Coupe(JK)	2013	General	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Elantra Coupe(JK)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(AD)	2018	General	ECM(Engine Control Module)	Version Information	
Elantra(AD)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(AD)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(AD)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(AD)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(AD)	2018	General	ECM(Engine Control Module)	Actuation Test	
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(AD)	2018	General	TCM(Transmission Control Module)	Version Information	
Elantra(AD)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(AD)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(AD)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(AD)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(AD)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(AD)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(AD)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(AD)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(AD)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(AD)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(AD)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(AD)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(AD)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra(AD)	2018	General	ABS(Anti-lock Braking System)	Special Function	Reset(ESP/ESC Only) HCU Air Bleeding Mode
Elantra(AD)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(AD)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(AD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(AD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(AD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(AD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(AD)	2018	General	AC(Air Conditioning)	Version Information	
Elantra(AD)	2018	General	AC(Air Conditioning)	Read Fault Code	
Elantra(AD)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(AD)	2018	General	AC(Air Conditioning)	Read Data Stream	
Elantra(AD)	2018	General	AC(Air Conditioning)	Actuation Test	
Elantra(AD)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(AD)	2018	General	BCM(Body Control Module)	Version Information	
Elantra(AD)	2018	General	BCM(Body Control Module)	Read Fault Code	
Elantra(AD)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(AD)	2018	General	BCM(Body Control Module)	Read Data Stream	
Elantra(AD)	2018	General	BCM(Body Control Module)	Actuation Test	
Elantra(AD)	2018	General	BCM(Body Control Module)	Special Function	User Option
Elantra(AD)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(AD)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(AD)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(AD)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(AD)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(AD)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(AD)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(AD)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(AD)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(AD)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(AD)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(AD)	2018	General	EPS(Electronic Power Steering)	Version Information	
Elantra(AD)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(AD)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(AD)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(AD)	2018	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(AD)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Elantra(AD)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(AD)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(AD)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(AD)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(AD)	2018	General	Smart Key Unit	Version Information	
Elantra(AD)	2018	General	Smart Key Unit	Read Fault Code	
Elantra(AD)	2018	General	Smart Key Unit	Clear Fault Memory	
Elantra(AD)	2018	General	Smart Key Unit	Read Data Stream	
Elantra(AD)	2018	General	Smart Key Unit	Actuation Test	
Elantra(AD)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(AD)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(AD)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(AD)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(AD)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(AD)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(AD)	2018	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Elantra(AD)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Elantra(AD)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(AD)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(AD)	2018	General	Blind Spot Detection	Version Information	
Elantra(AD)	2018	General	Blind Spot Detection	Read Fault Code	
Elantra(AD)	2018	General	Blind Spot Detection	Clear Fault Memory	
Elantra(AD)	2018	General	Blind Spot Detection	Read Data Stream	
Elantra(AD)	2018	General	Blind Spot Detection	Actuation Test	
Elantra(AD)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Elantra(AD)	2018	General	Blind Spot Detection	Special Function	BSD Variant Coding
Elantra(AD)	2018	General	Parking Guide System	Version Information	
Elantra(AD)	2018	General	Parking Guide System	Read Fault Code	
Elantra(AD)	2018	General	Parking Guide System	Clear Fault Memory	
Elantra(AD)	2018	General	Parking Guide System	Read Data Stream	
Elantra(AD)	2018	General	Telematics Unit	Version Information	
Elantra(AD)	2018	General	Telematics Unit	Read Fault Code	
Elantra(AD)	2018	General	Telematics Unit	Clear Fault Memory	
Elantra(AD)	2018	General	IMM(Immobilizer)	Read Fault Code	
Elantra(AD)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(AD)	2018	General	IMM(Immobilizer)	Read Data Stream	
Elantra(AD)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(AD)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(AD)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(AD)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(AD)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(AD)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(AD)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove

model	year	area	system	function	subfunction
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(AD)	2018	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU/Cleaning
Elantra(AD)	2017	General	ECM(Engine Control Module)	Version Information	
Elantra(AD)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(AD)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(AD)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(AD)	2017	General	ECM(Engine Control Module)	Actuation Test	
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU/Cleaning
Elantra(AD)	2017	General	TCM(Transmission Control Module)	Version Information	
Elantra(AD)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(AD)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(AD)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(AD)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(AD)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(AD)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Elantra(AD)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(AD)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(AD)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(AD)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(AD)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(AD)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra(AD)	2017	General	ABS(Anti-lock Braking System)	Special Function	Reset(ESP/ESC Only) HCU Air Bleeding Mode
Elantra(AD)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(AD)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(AD)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(AD)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(AD)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(AD)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(AD)	2017	General	AC(Air Conditioning)	Version Information	
Elantra(AD)	2017	General	AC(Air Conditioning)	Read Fault Code	
Elantra(AD)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(AD)	2017	General	AC(Air Conditioning)	Read Data Stream	
Elantra(AD)	2017	General	AC(Air Conditioning)	Actuation Test	
Elantra(AD)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(AD)	2017	General	BCM(Body Control Module)	Version Information	
Elantra(AD)	2017	General	BCM(Body Control Module)	Read Fault Code	
Elantra(AD)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(AD)	2017	General	BCM(Body Control Module)	Read Data Stream	
Elantra(AD)	2017	General	BCM(Body Control Module)	Actuation Test	
Elantra(AD)	2017	General	BCM(Body Control Module)	Special Function	User Option
Elantra(AD)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(AD)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(AD)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(AD)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(AD)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(AD)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(AD)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(AD)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(AD)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(AD)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(AD)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(AD)	2017	General	EPS(Electronic Power Steering)	Version Information	
Elantra(AD)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(AD)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(AD)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(AD)	2017	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(AD)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Elantra(AD)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(AD)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(AD)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(AD)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(AD)	2017	General	Smart Key Unit	Version Information	
Elantra(AD)	2017	General	Smart Key Unit	Read Fault Code	
Elantra(AD)	2017	General	Smart Key Unit	Clear Fault Memory	
Elantra(AD)	2017	General	Smart Key Unit	Read Data Stream	
Elantra(AD)	2017	General	Smart Key Unit	Actuation Test	
Elantra(AD)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(AD)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(AD)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(AD)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(AD)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(AD)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(AD)	2017	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Elantra(AD)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Elantra(AD)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(AD)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(AD)	2017	General	Blind Spot Detection	Version Information	
Elantra(AD)	2017	General	Blind Spot Detection	Read Fault Code	
Elantra(AD)	2017	General	Blind Spot Detection	Clear Fault Memory	
Elantra(AD)	2017	General	Blind Spot Detection	Read Data Stream	
Elantra(AD)	2017	General	Blind Spot Detection	Actuation Test	
Elantra(AD)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Elantra(AD)	2017	General	Blind Spot Detection	Special Function	BSD Variant Coding
Elantra(AD)	2017	General	PGS(Parking Guide System)	Version Information	
Elantra(AD)	2017	General	PGS(Parking Guide System)	Read Fault Code	
Elantra(AD)	2017	General	PGS(Parking Guide System)	Clear Fault Memory	
Elantra(AD)	2017	General	PGS(Parking Guide System)	Read Data Stream	
Elantra(AD)	2017	General	Telematics Unit	Version Information	
Elantra(AD)	2017	General	Telematics Unit	Read Fault Code	
Elantra(AD)	2017	General	Telematics Unit	Clear Fault Memory	
Elantra(AD)	2017	General	IMM(Immobilizer)	Read Fault Code	
Elantra(AD)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(AD)	2017	General	IMM(Immobilizer)	Read Data Stream	
Elantra(AD)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(AD)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(AD)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(AD)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(AD)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(AD)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(AD)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(AD)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(AD)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(AD)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(AD)	2016	General	ECM(Engine Control Module)	Version Information	
Elantra(AD)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(AD)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(AD)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(AD)	2016	General	ECM(Engine Control Module)	Actuation Test	
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LEU Cleaning
Elantra(AD)	2016	General	TCM(Transmission Control Module)	Version Information	
Elantra(AD)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(AD)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(AD)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(AD)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(AD)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(AD)	2016	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Elantra(AD)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(AD)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(AD)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(AD)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(AD)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(AD)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra(AD)	2016	General	ABS(Anti-lock Braking System)	Special Function	Reset(ESP/ESC Only) HCU Air Bleeding Mode
Elantra(AD)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(AD)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(AD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(AD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(AD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(AD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(AD)	2016	General	AC(Air Conditioning)	Version Information	
Elantra(AD)	2016	General	AC(Air Conditioning)	Read Fault Code	
Elantra(AD)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(AD)	2016	General	AC(Air Conditioning)	Read Data Stream	
Elantra(AD)	2016	General	AC(Air Conditioning)	Actuation Test	
Elantra(AD)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(AD)	2016	General	BCM(Body Control Module)	Version Information	
Elantra(AD)	2016	General	BCM(Body Control Module)	Read Fault Code	
Elantra(AD)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(AD)	2016	General	BCM(Body Control Module)	Read Data Stream	
Elantra(AD)	2016	General	BCM(Body Control Module)	Actuation Test	
Elantra(AD)	2016	General	BCM(Body Control Module)	Special Function	User Option
Elantra(AD)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(AD)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(AD)	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(AD)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(AD)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(AD)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(AD)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(AD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(AD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(AD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(AD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(AD)	2016	General	EPS(Electronic Power Steering)	Version Information	
Elantra(AD)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(AD)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(AD)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(AD)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(AD)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Elantra(AD)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(AD)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(AD)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(AD)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(AD)	2016	General	Smart Key Unit	Version Information	
Elantra(AD)	2016	General	Smart Key Unit	Read Fault Code	
Elantra(AD)	2016	General	Smart Key Unit	Clear Fault Memory	
Elantra(AD)	2016	General	Smart Key Unit	Read Data Stream	
Elantra(AD)	2016	General	Smart Key Unit	Actuation Test	
Elantra(AD)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(AD)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(AD)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(AD)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(AD)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(AD)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(AD)	2016	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Elantra(AD)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Elantra(AD)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(AD)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(AD)	2016	General	Blind Spot Detection	Version Information	
Elantra(AD)	2016	General	Blind Spot Detection	Read Fault Code	
Elantra(AD)	2016	General	Blind Spot Detection	Clear Fault Memory	
Elantra(AD)	2016	General	Blind Spot Detection	Read Data Stream	
Elantra(AD)	2016	General	Blind Spot Detection	Actuation Test	
Elantra(AD)	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Elantra(AD)	2016	General	Blind Spot Detection	Special Function	BSD Variant Coding
Elantra(AD)	2016	General	PGS(Parking Guide System)	Version Information	
Elantra(AD)	2016	General	PGS(Parking Guide System)	Read Fault Code	
Elantra(AD)	2016	General	PGS(Parking Guide System)	Clear Fault Memory	
Elantra(AD)	2016	General	PGS(Parking Guide System)	Read Data Stream	
Elantra(AD)	2016	General	Telematics Unit	Version Information	
Elantra(AD)	2016	General	Telematics Unit	Read Fault Code	
Elantra(AD)	2016	General	Telematics Unit	Clear Fault Memory	
Elantra(AD)	2016	General	IMM(Immobilizer)	Read Data Stream	
Elantra(AD)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Elantra(AD)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(AD)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(AD)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(AD)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(AD)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(AD)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(AD)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Elantra(AD)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(AD)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(AD)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Version Information	
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Actuation Test	
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
Elantra(ADA)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(ADA)	2018	General	TCM(Transmission Control Module)	Version Information	
Elantra(ADA)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(ADA)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(ADA)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(ADA)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(ADA)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(ADA)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(ADA)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(ADA)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(ADA)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(ADA)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(ADA)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(ADA)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(ADA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Elantra(ADA)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(ADA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(ADA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(ADA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(ADA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(ADA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(ADA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(ADA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Elantra(ADA)	2018	General	AC(Air Conditioning)	Version Information	
Elantra(ADA)	2018	General	AC(Air Conditioning)	Read Fault Code	
Elantra(ADA)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(ADA)	2018	General	AC(Air Conditioning)	Read Data Stream	
Elantra(ADA)	2018	General	AC(Air Conditioning)	Actuation Test	
Elantra(ADA)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(ADA)	2018	General	BCM(Body Control Module)	Version Information	
Elantra(ADA)	2018	General	BCM(Body Control Module)	Read Fault Code	
Elantra(ADA)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(ADA)	2018	General	BCM(Body Control Module)	Read Data Stream	
Elantra(ADA)	2018	General	BCM(Body Control Module)	Actuation Test	
Elantra(ADA)	2018	General	BCM(Body Control Module)	Special Function	User Option
Elantra(ADA)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(ADA)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(ADA)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(ADA)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(ADA)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(ADA)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(ADA)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(ADA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(ADA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(ADA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(ADA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(ADA)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Elantra(ADA)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Elantra(ADA)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Elantra(ADA)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Elantra(ADA)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Elantra(ADA)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Elantra(ADA)	2018	General	EPS(Electronic Power Steering)	Version Information	
Elantra(ADA)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(ADA)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(ADA)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(ADA)	2018	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(ADA)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Elantra(ADA)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(ADA)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(ADA)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(ADA)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(ADA)	2018	General	Adaptive Front Lighting System	Version Information	
Elantra(ADA)	2018	General	Adaptive Front Lighting System	Read Fault Code	
Elantra(ADA)	2018	General	Adaptive Front Lighting System	Clear Fault Memory	
Elantra(ADA)	2018	General	Adaptive Front Lighting System	Read Data Stream	
Elantra(ADA)	2018	General	Adaptive Front Lighting System	Actuation Test	
Elantra(ADA)	2018	General	Adaptive Front Lighting System	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Elantra(ADA)	2018	General	Adaptive Front Lighting System	Special Function	Antenna Status Check
Elantra(ADA)	2018	General	Adaptive Front Lighting System	Special Function	Current FOB Key Check
Elantra(ADA)	2018	General	Adaptive Front Lighting System	Special Function	FOB Key Status Information
Elantra(ADA)	2018	General	Adaptive Front Lighting System	Special Function	Neutralization Mode
Elantra(ADA)	2018	General	Adaptive Front Lighting System	Special Function	SMK Status Information
Elantra(ADA)	2018	General	Auto Headlamp Leveling System	Version Information	
Elantra(ADA)	2018	General	Auto Headlamp Leveling System	Read Fault Code	
Elantra(ADA)	2018	General	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(ADA)	2018	General	Auto Headlamp Leveling System	Read Data Stream	
Elantra(ADA)	2018	General	Auto Headlamp Leveling System	Actuation Test	
Elantra(ADA)	2018	General	Auto Headlamp Leveling System	Special Function	BSD Radar Calibration
Elantra(ADA)	2018	General	Auto Headlamp Leveling System	Special Function	BSD Variant Coding
Elantra(ADA)	2018	General	Parking Guide System	Version Information	
Elantra(ADA)	2018	General	Parking Guide System	Read Fault Code	
Elantra(ADA)	2018	General	Parking Guide System	Clear Fault Memory	
Elantra(ADA)	2018	General	Parking Guide System	Read Data Stream	
Elantra(ADA)	2018	General	IMM(Immobilizer)	Read Fault Code	
Elantra(ADA)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(ADA)	2018	General	IMM(Immobilizer)	Read Data Stream	
Elantra(ADA)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(ADA)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(ADA)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(ADA)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(ADA)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(ADA)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Version Information	
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Actuation Test	
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
Elantra(ADA)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(ADA)	2017	General	TCM(Transmission Control Module)	Version Information	
Elantra(ADA)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(ADA)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(ADA)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(ADA)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(ADA)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(ADA)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(ADA)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(ADA)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(ADA)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(ADA)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(ADA)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(ADA)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(ADA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC/Only)
Elantra(ADA)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(ADA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(ADA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(ADA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(ADA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(ADA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(ADA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(ADA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Elantra(ADA)	2017	General	AC(Air Conditioning)	Version Information	
Elantra(ADA)	2017	General	AC(Air Conditioning)	Read Fault Code	
Elantra(ADA)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(ADA)	2017	General	AC(Air Conditioning)	Read Data Stream	
Elantra(ADA)	2017	General	AC(Air Conditioning)	Actuation Test	
Elantra(ADA)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Turn)
Elantra(ADA)	2017	General	BCM(Body Control Module)	Version Information	
Elantra(ADA)	2017	General	BCM(Body Control Module)	Read Fault Code	
Elantra(ADA)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(ADA)	2017	General	BCM(Body Control Module)	Read Data Stream	
Elantra(ADA)	2017	General	BCM(Body Control Module)	Actuation Test	
Elantra(ADA)	2017	General	BCM(Body Control Module)	Special Function	User Option
Elantra(ADA)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(ADA)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(ADA)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(ADA)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(ADA)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(ADA)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(ADA)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(ADA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(ADA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(ADA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(ADA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(ADA)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Elantra(ADA)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Elantra(ADA)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(ADA)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Elantra(ADA)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Elantra(ADA)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Elantra(ADA)	2017	General	EPS(Electronic Power Steering)	Version Information	
Elantra(ADA)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(ADA)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(ADA)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(ADA)	2017	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(ADA)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Elantra(ADA)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(ADA)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(ADA)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(ADA)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(ADA)	2017	General	Adaptive Front Lighting System	Version Information	
Elantra(ADA)	2017	General	Adaptive Front Lighting System	Read Fault Code	
Elantra(ADA)	2017	General	Adaptive Front Lighting System	Clear Fault Memory	
Elantra(ADA)	2017	General	Adaptive Front Lighting System	Read Data Stream	
Elantra(ADA)	2017	General	Adaptive Front Lighting System	Actuation Test	
Elantra(ADA)	2017	General	Adaptive Front Lighting System	Special Function	Smart Key Code Saving
Elantra(ADA)	2017	General	Adaptive Front Lighting System	Special Function	Antenna Status Check
Elantra(ADA)	2017	General	Adaptive Front Lighting System	Special Function	Current FOB Key Check
Elantra(ADA)	2017	General	Adaptive Front Lighting System	Special Function	FOB Key Status Information
Elantra(ADA)	2017	General	Adaptive Front Lighting System	Special Function	Neutralization Mode
Elantra(ADA)	2017	General	Adaptive Front Lighting System	Special Function	SMK Status Information
Elantra(ADA)	2017	General	Auto Headlamp Leveling System	Version Information	
Elantra(ADA)	2017	General	Auto Headlamp Leveling System	Read Fault Code	
Elantra(ADA)	2017	General	Auto Headlamp Leveling System	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(ADA)	2017	General	Auto Headlamp Leveling System	Read Data Stream	
Elantra(ADA)	2017	General	Auto Headlamp Leveling System	Actuation Test	
Elantra(ADA)	2017	General	Auto Headlamp Leveling System	Special Function	BSD Radar Calibration
Elantra(ADA)	2017	General	Auto Headlamp Leveling System	Special Function	BSD Variant Coding
Elantra(ADA)	2017	General	Parking Guide System	Version Information	
Elantra(ADA)	2017	General	Parking Guide System	Read Fault Code	
Elantra(ADA)	2017	General	Parking Guide System	Clear Fault Memory	
Elantra(ADA)	2017	General	Parking Guide System	Read Data Stream	
Elantra(ADA)	2017	General	IMM(Immobilizer)	Read Fault Code	
Elantra(ADA)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(ADA)	2017	General	IMM(Immobilizer)	Read Data Stream	
Elantra(ADA)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(ADA)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(ADA)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(ADA)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(ADA)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(ADA)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Version Information	
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Actuation Test	
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(ADI)	2018	General	TCM(Transmission Control Module)	Version Information	
Elantra(ADI)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(ADI)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(ADI)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(ADI)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(ADI)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(ADI)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(ADI)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(ADI)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(ADI)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(ADI)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(ADI)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(ADI)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(ADI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only)
Elantra(ADI)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(ADI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(ADI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(ADI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(ADI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(ADI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(ADI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(ADI)	2018	General	AC(Air Conditioning)	Version Information	
Elantra(ADI)	2018	General	AC(Air Conditioning)	Read Fault Code	
Elantra(ADI)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(ADI)	2018	General	AC(Air Conditioning)	Read Data Stream	
Elantra(ADI)	2018	General	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(ADI)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(ADI)	2018	General	BCM(Body Control Module)	Version Information	
Elantra(ADI)	2018	General	BCM(Body Control Module)	Read Fault Code	
Elantra(ADI)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(ADI)	2018	General	BCM(Body Control Module)	Read Data Stream	
Elantra(ADI)	2018	General	BCM(Body Control Module)	Actuation Test	
Elantra(ADI)	2018	General	BCM(Body Control Module)	Special Function	User Option
Elantra(ADI)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(ADI)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(ADI)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(ADI)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(ADI)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(ADI)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(ADI)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(ADI)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(ADI)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(ADI)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(ADI)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(ADI)	2018	General	EPS(Electronic Power Steering)	Version Information	
Elantra(ADI)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(ADI)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(ADI)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(ADI)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(ADI)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(ADI)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Elantra(ADI)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(ADI)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)

model	year	area	system	function	subfunction
Elantra(ADI)	2018	General	Smart Key Unit	Version Information	
Elantra(ADI)	2018	General	Smart Key Unit	Read Fault Code	
Elantra(ADI)	2018	General	Smart Key Unit	Clear Fault Memory	
Elantra(ADI)	2018	General	Smart Key Unit	Read Data Stream	
Elantra(ADI)	2018	General	Smart Key Unit	Actuation Test	
Elantra(ADI)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(ADI)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(ADI)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(ADI)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(ADI)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(ADI)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(ADI)	2018	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Elantra(ADI)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(ADI)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(ADI)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(ADI)	2018	General	Blind Spot Detection	Version Information	
Elantra(ADI)	2018	General	Blind Spot Detection	Read Fault Code	
Elantra(ADI)	2018	General	Blind Spot Detection	Clear Fault Memory	
Elantra(ADI)	2018	General	Blind Spot Detection	Read Data Stream	
Elantra(ADI)	2018	General	Blind Spot Detection	Actuation Test	
Elantra(ADI)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Elantra(ADI)	2018	General	Blind Spot Detection	Special Function	BSD Variant Coding
Elantra(ADI)	2018	General	Parking Guide System	Version Information	
Elantra(ADI)	2018	General	Parking Guide System	Read Fault Code	
Elantra(ADI)	2018	General	Parking Guide System	Clear Fault Memory	
Elantra(ADI)	2018	General	Parking Guide System	Read Data Stream	
Elantra(ADI)	2018	General	IMM(Immobilizer)	Read Fault Code	
Elantra(ADI)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(ADI)	2018	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(ADI)	2018	General	IMM(Immobilizer)	Special Function	Password
Elantra(ADI)	2018	General	IMM(Immobilizer)	Special Function	Teaching/Charging
Elantra(ADI)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(ADI)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(ADI)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(ADI)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(ADI)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Elantra(ADI)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Version Information	
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Actuation Test	
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(ADI)	2017	General	TCM(Transmission Control Module)	Version Information	
Elantra(ADI)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(ADI)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(ADI)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(ADI)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(ADI)	2017	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(ADI)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(ADI)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(ADI)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(ADI)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(ADI)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(ADI)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(ADI)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(ADI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC/Only)
Elantra(ADI)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(ADI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(ADI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(ADI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(ADI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(ADI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(ADI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(ADI)	2017	General	AC(Air Conditioning)	Version Information	
Elantra(ADI)	2017	General	AC(Air Conditioning)	Read Fault Code	
Elantra(ADI)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(ADI)	2017	General	AC(Air Conditioning)	Read Data Stream	
Elantra(ADI)	2017	General	AC(Air Conditioning)	Actuation Test	
Elantra(ADI)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Elantra(ADI)	2017	General	BCM(Body Control Module)	Version Information	
Elantra(ADI)	2017	General	BCM(Body Control Module)	Read Fault Code	
Elantra(ADI)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(ADI)	2017	General	BCM(Body Control Module)	Read Data Stream	
Elantra(ADI)	2017	General	BCM(Body Control Module)	Actuation Test	
Elantra(ADI)	2017	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Elantra(ADI)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(ADI)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(ADI)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(ADI)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(ADI)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(ADI)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(ADI)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(ADI)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(ADI)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(ADI)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(ADI)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(ADI)	2017	General	EPS(Electronic Power Steering)	Version Information	
Elantra(ADI)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(ADI)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(ADI)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(ADI)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(ADI)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(ADI)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Elantra(ADI)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(ADI)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(ADI)	2017	General	Smart Key Unit	Version Information	
Elantra(ADI)	2017	General	Smart Key Unit	Read Fault Code	
Elantra(ADI)	2017	General	Smart Key Unit	Clear Fault Memory	
Elantra(ADI)	2017	General	Smart Key Unit	Read Data Stream	
Elantra(ADI)	2017	General	Smart Key Unit	Actuation Test	
Elantra(ADI)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(ADI)	2017	General	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Elantra(ADI)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(ADI)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(ADI)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(ADI)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(ADI)	2017	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Elantra(ADI)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(ADI)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(ADI)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(ADI)	2017	General	Blind Spot Detection	Version Information	
Elantra(ADI)	2017	General	Blind Spot Detection	Read Fault Code	
Elantra(ADI)	2017	General	Blind Spot Detection	Clear Fault Memory	
Elantra(ADI)	2017	General	Blind Spot Detection	Read Data Stream	
Elantra(ADI)	2017	General	Blind Spot Detection	Actuation Test	
Elantra(ADI)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Elantra(ADI)	2017	General	Blind Spot Detection	Special Function	BSD Variant Coding
Elantra(ADI)	2017	General	Parking Guide System	Version Information	
Elantra(ADI)	2017	General	Parking Guide System	Read Fault Code	
Elantra(ADI)	2017	General	Parking Guide System	Clear Fault Memory	
Elantra(ADI)	2017	General	Parking Guide System	Read Data Stream	
Elantra(ADI)	2017	General	IMM(Immobilizer)	Read Fault Code	
Elantra(ADI)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(ADI)	2017	General	IMM(Immobilizer)	Read Data Stream	
Elantra(ADI)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(ADI)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(ADI)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(ADI)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(ADI)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(ADI)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Elantra(ADI)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Version Information	
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Actuation Test	
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(ADI)	2016	General	TCM(Transmission Control Module)	Version Information	
Elantra(ADI)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(ADI)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(ADI)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(ADI)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(ADI)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(ADI)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(ADI)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(ADI)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(ADI)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(ADI)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(ADI)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(ADI)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(ADI)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Elantra(ADI)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(ADI)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(ADI)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(ADI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(ADI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(ADI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(ADI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(ADI)	2016	General	AC(Air Conditioning)	Version Information	
Elantra(ADI)	2016	General	AC(Air Conditioning)	Read Fault Code	
Elantra(ADI)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(ADI)	2016	General	AC(Air Conditioning)	Read Data Stream	
Elantra(ADI)	2016	General	AC(Air Conditioning)	Actuation Test	
Elantra(ADI)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(ADI)	2016	General	BCM(Body Control Module)	Version Information	
Elantra(ADI)	2016	General	BCM(Body Control Module)	Read Fault Code	
Elantra(ADI)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(ADI)	2016	General	BCM(Body Control Module)	Read Data Stream	
Elantra(ADI)	2016	General	BCM(Body Control Module)	Actuation Test	
Elantra(ADI)	2016	General	BCM(Body Control Module)	Special Function	User Option
Elantra(ADI)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(ADI)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(ADI)	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(ADI)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(ADI)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(ADI)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(ADI)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(ADI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(ADI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(ADI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(ADI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(ADI)	2016	General	EPS(Electronic Power Steering)	Version Information	
Elantra(ADI)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(ADI)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(ADI)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(ADI)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(ADI)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(ADI)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Elantra(ADI)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(ADI)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(ADI)	2016	General	Smart Key Unit	Version Information	
Elantra(ADI)	2016	General	Smart Key Unit	Read Fault Code	
Elantra(ADI)	2016	General	Smart Key Unit	Clear Fault Memory	
Elantra(ADI)	2016	General	Smart Key Unit	Read Data Stream	
Elantra(ADI)	2016	General	Smart Key Unit	Actuation Test	
Elantra(ADI)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(ADI)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(ADI)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(ADI)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(ADI)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(ADI)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(ADI)	2016	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Elantra(ADI)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(ADI)	2016	General	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Elantra(ADI)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(ADI)	2016	General	Blind Spot Detection	Version Information	
Elantra(ADI)	2016	General	Blind Spot Detection	Read Fault Code	
Elantra(ADI)	2016	General	Blind Spot Detection	Clear Fault Memory	
Elantra(ADI)	2016	General	Blind Spot Detection	Read Data Stream	
Elantra(ADI)	2016	General	Blind Spot Detection	Actuation Test	
Elantra(ADI)	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Elantra(ADI)	2016	General	Blind Spot Detection	Special Function	BSD Variant Coding
Elantra(ADI)	2016	General	Parking Guide System	Version Information	
Elantra(ADI)	2016	General	Parking Guide System	Read Fault Code	
Elantra(ADI)	2016	General	Parking Guide System	Clear Fault Memory	
Elantra(ADI)	2016	General	Parking Guide System	Read Data Stream	
Elantra(ADI)	2016	General	IMM(Immobilizer)	Read Fault Code	
Elantra(ADI)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(ADI)	2016	General	IMM(Immobilizer)	Read Data Stream	
Elantra(ADI)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Elantra(ADI)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(ADI)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(ADI)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(ADI)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(ADI)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Elantra(ADI)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(HD)	2011	General	ECM(Engine Control Module)	Version Information	
Elantra(HD)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(HD)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(HD)	2011	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(HD)	2011	General	ECM(Engine Control Module)	Actuation Test	
Elantra(HD)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(HD)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(HD)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(HD)	2011	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(HD)	2011	General	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(HD)	2011	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(HD)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(HD)	2011	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(HD)	2011	General	TCM(Transmission Control Module)	Version Information	
Elantra(HD)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(HD)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(HD)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(HD)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(HD)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(HD)	2011	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(HD)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(HD)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(HD)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(HD)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(HD)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(HD)	2011	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra(HD)	2011	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/ESC/Only)
Elantra(HD)	2011	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Elantra(HD)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(HD)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(HD)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(HD)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(HD)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.

model	year	area	system	function	subfunction
Elantra(HD)	2011	General	AC(Air Conditioning)	Version Information	
Elantra(HD)	2011	General	AC(Air Conditioning)	Read Fault Code	
Elantra(HD)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(HD)	2011	General	AC(Air Conditioning)	Read Data Stream	
Elantra(HD)	2011	General	AC(Air Conditioning)	Actuation Test	
Elantra(HD)	2011	General	BCM(Body Control Module)	Version Information	
Elantra(HD)	2011	General	BCM(Body Control Module)	Read Data Stream	
Elantra(HD)	2011	General	BCM(Body Control Module)	Actuation Test	
Elantra(HD)	2011	General	BCM(Body Control Module)	Special Function	User Option
Elantra(HD)	2011	General	EPS(Electronic Power Steering)	Version Information	
Elantra(HD)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(HD)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(HD)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(HD)	2011	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(HD)	2011	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(HD)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(HD)	2011	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(HD)	2011	General	IMM(Immobilizer)	Read Data Stream	
Elantra(HD)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(HD)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(HD)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(HD)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(HD)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(HD)	2011	General	Transmitter Code Saving	Read Data Stream	
Elantra(HD)	2011	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(HD)	2011	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(HD)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(HD)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Elantra(HD)	2010	General	ECM(Engine Control Module)	Version Information	
Elantra(HD)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(HD)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(HD)	2010	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(HD)	2010	General	ECM(Engine Control Module)	Actuation Test	
Elantra(HD)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(HD)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(HD)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(HD)	2010	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(HD)	2010	General	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(HD)	2010	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(HD)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(HD)	2010	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(HD)	2010	General	TCM(Transmission Control Module)	Version Information	
Elantra(HD)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(HD)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(HD)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(HD)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(HD)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(HD)	2010	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(HD)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(HD)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(HD)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(HD)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(HD)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode Auto Detected
Elantra(HD)	2010	General	ABS(Anti-lock Braking System)	Special Function	Configuration Reset(FSP/ESC/Only)
Elantra(HD)	2010	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Elantra(HD)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Elantra(HD)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(HD)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(HD)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(HD)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(HD)	2010	General	AC(Air Conditioning)	Version Information	
Elantra(HD)	2010	General	AC(Air Conditioning)	Read Fault Code	
Elantra(HD)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(HD)	2010	General	AC(Air Conditioning)	Read Data Stream	
Elantra(HD)	2010	General	AC(Air Conditioning)	Actuation Test	
Elantra(HD)	2010	General	BCM(Body Control Module)	Version Information	
Elantra(HD)	2010	General	BCM(Body Control Module)	Read Data Stream	
Elantra(HD)	2010	General	BCM(Body Control Module)	Actuation Test	
Elantra(HD)	2010	General	BCM(Body Control Module)	Special Function	User Option
Elantra(HD)	2010	General	EPS(Electronic Power Steering)	Version Information	
Elantra(HD)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(HD)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(HD)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(HD)	2010	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(HD)	2010	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(HD)	2010	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(HD)	2010	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(HD)	2010	General	IMM(Immobilizer)	Read Data Stream	
Elantra(HD)	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Elantra(HD)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(HD)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(HD)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(HD)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(HD)	2010	General	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(HD)	2010	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(HD)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(HD)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(HD)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(HD)	2009	General	ECM(Engine Control Module)	Version Information	
Elantra(HD)	2009	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(HD)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(HD)	2009	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(HD)	2009	General	ECM(Engine Control Module)	Actuation Test	
Elantra(HD)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(HD)	2009	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(HD)	2009	General	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(HD)	2009	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(HD)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(HD)	2009	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(HD)	2009	General	TCM(Transmission Control Module)	Version Information	
Elantra(HD)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(HD)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(HD)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(HD)	2009	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(HD)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(HD)	2009	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(HD)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(HD)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(HD)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(HD)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(HD)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(HD)	2009	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only

model	year	area	system	function	subfunction
Elantra(HD)	2009	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Elantra(HD)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(HD)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(HD)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(HD)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(HD)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(HD)	2009	General	AC(Air Conditioning)	Version Information	
Elantra(HD)	2009	General	AC(Air Conditioning)	Read Fault Code	
Elantra(HD)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(HD)	2009	General	AC(Air Conditioning)	Read Data Stream	
Elantra(HD)	2009	General	AC(Air Conditioning)	Actuation Test	
Elantra(HD)	2009	General	BCM(Body Control Module)	Version Information	
Elantra(HD)	2009	General	BCM(Body Control Module)	Read Data Stream	
Elantra(HD)	2009	General	BCM(Body Control Module)	Actuation Test	
Elantra(HD)	2009	General	BCM(Body Control Module)	Special Function	User Option
Elantra(HD)	2009	General	EPS(Electronic Power Steering)	Version Information	
Elantra(HD)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(HD)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(HD)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(HD)	2009	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(HD)	2009	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(HD)	2009	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(HD)	2009	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(HD)	2009	General	IMM(Immobilizer)	Read Data Stream	
Elantra(HD)	2009	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(HD)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(HD)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(HD)	2009	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Elantra(HD)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(HD)	2009	General	Transmitter Code Saving	Read Data Stream	
Elantra(HD)	2009	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(HD)	2009	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(HD)	2009	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(HD)	2009	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(HD)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(HD)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(HD)	2008	General	ECM(Engine Control Module)	Version Information	
Elantra(HD)	2008	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(HD)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(HD)	2008	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(HD)	2008	General	ECM(Engine Control Module)	Actuation Test	
Elantra(HD)	2008	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(HD)	2008	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(HD)	2008	General	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(HD)	2008	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(HD)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(HD)	2008	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(HD)	2008	General	TCM(Transmission Control Module)	Version Information	
Elantra(HD)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(HD)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(HD)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(HD)	2008	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(HD)	2008	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(HD)	2008	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(HD)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(HD)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(HD)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(HD)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(HD)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(HD)	2008	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra(HD)	2008	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/ESC/Onk)
Elantra(HD)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(HD)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(HD)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(HD)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(HD)	2008	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(HD)	2008	General	AC(Air Conditioning)	Version Information	
Elantra(HD)	2008	General	AC(Air Conditioning)	Read Fault Code	
Elantra(HD)	2008	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(HD)	2008	General	AC(Air Conditioning)	Read Data Stream	
Elantra(HD)	2008	General	AC(Air Conditioning)	Actuation Test	
Elantra(HD)	2008	General	BCM(Body Control Module)	Version Information	
Elantra(HD)	2008	General	BCM(Body Control Module)	Read Data Stream	
Elantra(HD)	2008	General	BCM(Body Control Module)	Actuation Test	
Elantra(HD)	2008	General	BCM(Body Control Module)	Special Function	User Option
Elantra(HD)	2008	General	EPS(Electronic Power Steering)	Version Information	
Elantra(HD)	2008	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(HD)	2008	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(HD)	2008	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(HD)	2008	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(HD)	2008	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(HD)	2008	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(HD)	2008	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(HD)	2008	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(HD)	2008	General	IMM(Immobilizer)	Special Function	Password
Elantra(HD)	2008	General	IMM(Immobilizer)	Special Function	Teaching/Charging
Elantra(HD)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(HD)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(HD)	2008	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(HD)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(HD)	2008	General	Transmitter Code Saving	Read Data Stream	
Elantra(HD)	2008	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(HD)	2008	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(HD)	2008	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(HD)	2008	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(HD)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(HD)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(HD)	2007	General	ECM(Engine Control Module)	Version Information	
Elantra(HD)	2007	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(HD)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(HD)	2007	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(HD)	2007	General	ECM(Engine Control Module)	Actuation Test	
Elantra(HD)	2007	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(HD)	2007	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(HD)	2007	General	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(HD)	2007	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(HD)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(HD)	2007	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(HD)	2007	General	TCM(Transmission Control Module)	Version Information	
Elantra(HD)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(HD)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(HD)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(HD)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(HD)	2007	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Elantra(HD)	2007	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(HD)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(HD)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(HD)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(HD)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(HD)	2007	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Elantra(HD)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(HD)	2007	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra(HD)	2007	General	ABS(Anti-lock Braking System)	Special Function	Reset/ESP/ESC(Only) Solenoid Valve Test
Elantra(HD)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(HD)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(HD)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(HD)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(HD)	2007	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(HD)	2007	General	AC(Air Conditioning)	Version Information	
Elantra(HD)	2007	General	AC(Air Conditioning)	Read Fault Code	
Elantra(HD)	2007	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(HD)	2007	General	AC(Air Conditioning)	Read Data Stream	
Elantra(HD)	2007	General	AC(Air Conditioning)	Actuation Test	
Elantra(HD)	2007	General	BCM(Body Control Module)	Version Information	
Elantra(HD)	2007	General	BCM(Body Control Module)	Read Data Stream	
Elantra(HD)	2007	General	BCM(Body Control Module)	Actuation Test	
Elantra(HD)	2007	General	BCM(Body Control Module)	Special Function	User Option
Elantra(HD)	2007	General	EPS(Electronic Power Steering)	Version Information	
Elantra(HD)	2007	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(HD)	2007	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(HD)	2007	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(HD)	2007	General	EPS(Electronic Power Steering)	Read FreezeData	

model	year	area	system	function	subfunction
Elantra(HD)	2007	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(HD)	2007	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(HD)	2007	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(HD)	2007	General	IMM(Immobilizer)	Read Data Stream	
Elantra(HD)	2007	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(HD)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(HD)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(HD)	2007	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(HD)	2007	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(HD)	2007	General	Transmitter Code Saving	Read Data Stream	
Elantra(HD)	2007	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(HD)	2007	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(HD)	2007	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(HD)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(HD)	2007	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(HD)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(J1)	1995	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Elantra(J1)	1995	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Elantra(J1)	1995	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Elantra(J1)	1995	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Elantra(J1)	1995	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Elantra(J1)	1995	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Elantra(J1)	1995	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(J1)	1995	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(J1)	1995	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(J1)	1995	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(J1)	1995	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(J1)	1995	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(J1)	1995	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(J1)	1995	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(J1)	1995	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(J1)	1994	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Elantra(J1)	1994	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Elantra(J1)	1994	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Elantra(J1)	1994	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Elantra(J1)	1994	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Elantra(J1)	1994	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Elantra(J1)	1994	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(J1)	1994	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(J1)	1994	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(J1)	1994	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(J1)	1994	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(J1)	1994	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(J1)	1994	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(J1)	1994	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(J1)	1994	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(J1)	1993	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Elantra(J1)	1993	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Elantra(J1)	1993	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Elantra(J1)	1993	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Elantra(J1)	1993	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Elantra(J1)	1993	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Elantra(J1)	1993	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(J1)	1993	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(J1)	1993	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(J1)	1993	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(J1)	1993	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(J1)	1993	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(J1)	1993	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(J1)	1993	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(J1)	1993	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(J1)	1992	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Elantra(J1)	1992	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Elantra(J1)	1992	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Elantra(J1)	1992	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Elantra(J1)	1992	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Elantra(J1)	1992	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Elantra(J1)	1992	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(J1)	1992	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(J1)	1992	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(J1)	1992	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(J1)	1992	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(J1)	1992	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(J1)	1992	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(J1)	1992	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(J1)	1992	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2016	General	ECM(Engine Control Module)	Version Information	
Elantra(MD)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(MD)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MD)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(MD)	2016	General	ECM(Engine Control Module)	Actuation Test	
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(MD)	2016	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Elantra(MD)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MD)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MD)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MD)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MD)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(MD)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MD)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(MD)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(MD)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(MD)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(MD)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(MD)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(MD)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(MD)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(MD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra(MD)	2016	General	AC(Air Conditioning)	Version Information	
Elantra(MD)	2016	General	AC(Air Conditioning)	Read Fault Code	
Elantra(MD)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MD)	2016	General	AC(Air Conditioning)	Read Data Stream	
Elantra(MD)	2016	General	AC(Air Conditioning)	Actuation Test	
Elantra(MD)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(MD)	2016	General	BCM(Body Control Module)	Version Information	
Elantra(MD)	2016	General	BCM(Body Control Module)	Read Fault Code	
Elantra(MD)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MD)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding

model	year	area	system	function	subfunction
Elantra(MD)	2016	General	BCM(Body Control Module)	Read Data Stream	
Elantra(MD)	2016	General	BCM(Body Control Module)	Actuation Test	
Elantra(MD)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(MD)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(MD)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(MD)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(MD)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(MD)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(MD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(MD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(MD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(MD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(MD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(MD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(MD)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Elantra(MD)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Elantra(MD)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Elantra(MD)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Elantra(MD)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Elantra(MD)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Elantra(MD)	2016	General	EPS(Electronic Power Steering)	Version Information	
Elantra(MD)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MD)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MD)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MD)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MD)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MD)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MD)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)

model	year	area	system	function	subfunction
Elantra(MD)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MD)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(MD)	2016	General	Smart Key Unit	Version Information	
Elantra(MD)	2016	General	Smart Key Unit	Read Fault Code	
Elantra(MD)	2016	General	Smart Key Unit	Clear Fault Memory	
Elantra(MD)	2016	General	Smart Key Unit	Read Data Stream	
Elantra(MD)	2016	General	Smart Key Unit	Actuation Test	
Elantra(MD)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MD)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MD)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(MD)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(MD)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MD)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MD)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(MD)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MD)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(MD)	2016	General	IMM(Immobilizer)	Read Data Stream	
Elantra(MD)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(MD)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MD)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MD)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(MD)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MD)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(MD)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(MD)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Release(Optional)
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(MD)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(MD)	2015	General	ECM(Engine Control Module)	Version Information	
Elantra(MD)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(MD)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MD)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(MD)	2015	General	ECM(Engine Control Module)	Actuation Test	
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(MD)	2015	General	TCM(Transmission Control Module)	Version Information	
Elantra(MD)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MD)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MD)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MD)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MD)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(MD)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MD)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(MD)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(MD)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(MD)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(MD)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(MD)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(MD)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(MD)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(MD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra(MD)	2015	General	AC(Air Conditioning)	Version Information	
Elantra(MD)	2015	General	AC(Air Conditioning)	Read Fault Code	
Elantra(MD)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MD)	2015	General	AC(Air Conditioning)	Read Data Stream	
Elantra(MD)	2015	General	AC(Air Conditioning)	Actuation Test	
Elantra(MD)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Turn)
Elantra(MD)	2015	General	BCM(Body Control Module)	Version Information	
Elantra(MD)	2015	General	BCM(Body Control Module)	Read Fault Code	
Elantra(MD)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MD)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(MD)	2015	General	BCM(Body Control Module)	Read Data Stream	
Elantra(MD)	2015	General	BCM(Body Control Module)	Actuation Test	
Elantra(MD)	2015	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(MD)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(MD)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(MD)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(MD)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(MD)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(MD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(MD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(MD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
Elantra(MD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(MD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(MD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(MD)	2015	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Elantra(MD)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Elantra(MD)	2015	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Elantra(MD)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Elantra(MD)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Elantra(MD)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Elantra(MD)	2015	General	EPS(Electronic Power Steering)	Version Information	
Elantra(MD)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MD)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MD)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MD)	2015	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MD)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MD)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MD)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MD)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MD)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(MD)	2015	General	Smart Key Unit	Version Information	
Elantra(MD)	2015	General	Smart Key Unit	Read Fault Code	
Elantra(MD)	2015	General	Smart Key Unit	Clear Fault Memory	
Elantra(MD)	2015	General	Smart Key Unit	Read Data Stream	
Elantra(MD)	2015	General	Smart Key Unit	Actuation Test	
Elantra(MD)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MD)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MD)	2015	General	Smart Key Unit	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Elantra(MD)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(MD)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MD)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MD)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(MD)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MD)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(MD)	2015	General	IMM(Immobilizer)	Read Data Stream	
Elantra(MD)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(MD)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MD)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MD)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(MD)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MD)	2015	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(MD)	2015	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(MD)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(MD)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(MD)	2014	General	ECM(Engine Control Module)	Version Information	
Elantra(MD)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(MD)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(MD)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(MD)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(MD)	2014	General	ECM(Engine Control Module)	Actuation Test	
Elantra(MD)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MD)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MD)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MD)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MD)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MD)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MD)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(MD)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MD)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MD)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MD)	2014	General	TCM(Transmission Control Module)	Version Information	
Elantra(MD)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MD)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MD)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MD)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MD)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(MD)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MD)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(MD)	2014	General	ESP(Electronic Stability Program)	Version Information	
Elantra(MD)	2014	General	ESP(Electronic Stability Program)	Read Fault Code	
Elantra(MD)	2014	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Elantra(MD)	2014	General	ESP(Electronic Stability Program)	Read Data Stream	
Elantra(MD)	2014	General	ESP(Electronic Stability Program)	Actuation Test	
Elantra(MD)	2014	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Elantra(MD)	2014	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
Elantra(MD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Elantra(MD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra(MD)	2014	General	AC(Air Conditioning)	Version Information	
Elantra(MD)	2014	General	AC(Air Conditioning)	Read Fault Code	
Elantra(MD)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MD)	2014	General	AC(Air Conditioning)	Read Data Stream	
Elantra(MD)	2014	General	AC(Air Conditioning)	Actuation Test	
Elantra(MD)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(MD)	2014	General	BCM(Body Control Module)	Version Information	
Elantra(MD)	2014	General	BCM(Body Control Module)	Read Fault Code	
Elantra(MD)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MD)	2014	General	BCM(Body Control Module)	Read Data Stream	
Elantra(MD)	2014	General	BCM(Body Control Module)	Actuation Test	
Elantra(MD)	2014	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(MD)	2014	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(MD)	2014	General	EPS(Electronic Power Steering)	Version Information	
Elantra(MD)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MD)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MD)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MD)	2014	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MD)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MD)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MD)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MD)	2014	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MD)	2014	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)

model	year	area	system	function	subfunction
Elantra(MD)	2014	General	Auto Headlamp Leveling System	Version Information	
Elantra(MD)	2014	General	Auto Headlamp Leveling System	Read Fault Code	
Elantra(MD)	2014	General	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(MD)	2014	General	Auto Headlamp Leveling System	Read Data Stream	
Elantra(MD)	2014	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(MD)	2014	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(MD)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(MD)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(MD)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(MD)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(MD)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(MD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(MD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(MD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(MD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(MD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(MD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(MD)	2014	General	IMM(Immobilizer)	Read Data Stream	
Elantra(MD)	2014	General	IMM(Immobilizer)	Special Function	Password
Elantra(MD)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Elantra(MD)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MD)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MD)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(MD)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MD)	2014	General	Smart Key Unit	Version Information	
Elantra(MD)	2014	General	Smart Key Unit	Read Fault Code	
Elantra(MD)	2014	General	Smart Key Unit	Clear Fault Memory	
Elantra(MD)	2014	General	Smart Key Unit	Read Data Stream	
Elantra(MD)	2014	General	Smart Key Unit	Actuation Test	
Elantra(MD)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Elantra(MD)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MD)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(MD)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(MD)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MD)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MD)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(MD)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MD)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(MD)	2014	General	Transmitter Code Saving	Read Data Stream	
Elantra(MD)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(MD)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(MD)	2013	General	ECM(Engine Control Module)	Version Information	
Elantra(MD)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(MD)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MD)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(MD)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(MD)	2013	General	ECM(Engine Control Module)	Actuation Test	
Elantra(MD)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MD)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MD)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MD)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MD)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MD)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MD)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(MD)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MD)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MD)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MD)	2013	General	TCM(Transmission Control Module)	Version Information	
Elantra(MD)	2013	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(MD)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MD)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MD)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MD)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(MD)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MD)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(MD)	2013	General	ESP(Electronic Stability Program)	Version Information	
Elantra(MD)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
Elantra(MD)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Elantra(MD)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
Elantra(MD)	2013	General	ESP(Electronic Stability Program)	Actuation Test	
Elantra(MD)	2013	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Elantra(MD)	2013	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
Elantra(MD)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MD)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MD)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MD)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra(MD)	2013	General	AC(Air Conditioning)	Version Information	
Elantra(MD)	2013	General	AC(Air Conditioning)	Read Fault Code	
Elantra(MD)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MD)	2013	General	AC(Air Conditioning)	Read Data Stream	
Elantra(MD)	2013	General	AC(Air Conditioning)	Actuation Test	
Elantra(MD)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(MD)	2013	General	BCM(Body Control Module)	Version Information	
Elantra(MD)	2013	General	BCM(Body Control Module)	Read Fault Code	
Elantra(MD)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MD)	2013	General	BCM(Body Control Module)	Read Data Stream	
Elantra(MD)	2013	General	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(MD)	2013	General	EPS(Electronic Power Steering)	Version Information	
Elantra(MD)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MD)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MD)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MD)	2013	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MD)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MD)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MD)	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MD)	2013	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MD)	2013	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(MD)	2013	General	Auto Headlamp Leveling System	Version Information	
Elantra(MD)	2013	General	Auto Headlamp Leveling System	Read Fault Code	
Elantra(MD)	2013	General	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(MD)	2013	General	Auto Headlamp Leveling System	Read Data Stream	
Elantra(MD)	2013	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(MD)	2013	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(MD)	2013	General	IMM(Immobilizer)	Read Data Stream	
Elantra(MD)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(MD)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MD)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MD)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(MD)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MD)	2013	General	Smart Key Unit	Version Information	
Elantra(MD)	2013	General	Smart Key Unit	Read Fault Code	
Elantra(MD)	2013	General	Smart Key Unit	Clear Fault Memory	
Elantra(MD)	2013	General	Smart Key Unit	Read Data Stream	
Elantra(MD)	2013	General	Smart Key Unit	Actuation Test	

model	year	area	system	function	subfunction
Elantra(MD)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MD)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MD)	2013	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(MD)	2013	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(MD)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MD)	2013	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MD)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(MD)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MD)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(MD)	2013	General	Transmitter Code Saving	Read Data Stream	
Elantra(MD)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(MD)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(MD)	2012	General	ECM(Engine Control Module)	Version Information	
Elantra(MD)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(MD)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MD)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(MD)	2012	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(MD)	2012	General	ECM(Engine Control Module)	Actuation Test	
Elantra(MD)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MD)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MD)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MD)	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MD)	2012	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MD)	2012	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MD)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(MD)	2012	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MD)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MD)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MD)	2012	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Elantra(MD)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MD)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MD)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MD)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MD)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(MD)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MD)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(MD)	2012	General	ESP(Electronic Stability Program)	Version Information	
Elantra(MD)	2012	General	ESP(Electronic Stability Program)	Read Fault Code	
Elantra(MD)	2012	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Elantra(MD)	2012	General	ESP(Electronic Stability Program)	Read Data Stream	
Elantra(MD)	2012	General	ESP(Electronic Stability Program)	Actuation Test	
Elantra(MD)	2012	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Elantra(MD)	2012	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
Elantra(MD)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MD)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MD)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MD)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra(MD)	2012	General	AC(Air Conditioning)	Version Information	
Elantra(MD)	2012	General	AC(Air Conditioning)	Read Fault Code	
Elantra(MD)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MD)	2012	General	AC(Air Conditioning)	Read Data Stream	
Elantra(MD)	2012	General	AC(Air Conditioning)	Actuation Test	
Elantra(MD)	2012	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(MD)	2012	General	BCM(Body Control Module)	Version Information	
Elantra(MD)	2012	General	BCM(Body Control Module)	Read Fault Code	
Elantra(MD)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MD)	2012	General	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(MD)	2012	General	BCM(Body Control Module)	Actuation Test	
Elantra(MD)	2012	General	EPS(Electronic Power Steering)	Version Information	
Elantra(MD)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MD)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MD)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MD)	2012	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MD)	2012	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MD)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MD)	2012	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MD)	2012	General	Auto Headlamp Leveling System	Version Information	
Elantra(MD)	2012	General	Auto Headlamp Leveling System	Read Fault Code	
Elantra(MD)	2012	General	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(MD)	2012	General	Auto Headlamp Leveling System	Read Data Stream	
Elantra(MD)	2012	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(MD)	2012	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(MD)	2012	General	IMM(Immobilizer)	Read Data Stream	
Elantra(MD)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(MD)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MD)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MD)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(MD)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MD)	2012	General	Smart Key Unit	Version Information	
Elantra(MD)	2012	General	Smart Key Unit	Read Fault Code	
Elantra(MD)	2012	General	Smart Key Unit	Clear Fault Memory	
Elantra(MD)	2012	General	Smart Key Unit	Read Data Stream	
Elantra(MD)	2012	General	Smart Key Unit	Actuation Test	
Elantra(MD)	2012	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MD)	2012	General	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Elantra(MD)	2012	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(MD)	2012	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(MD)	2012	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MD)	2012	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MD)	2012	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(MD)	2012	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MD)	2012	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(MD)	2012	General	Transmitter Code Saving	Read Data Stream	
Elantra(MD)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(MD)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Version Information	
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Actuation Test	
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(MDI)	2016	General	TCM(Transmission Control Module)	Version Information	
Elantra(MDI)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MDI)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MDI)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MDI)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MDI)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(MDI)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MDI)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(MDI)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(MDI)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(MDI)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(MDI)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(MDI)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(MDI)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Elantra(MDI)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(MDI)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(MDI)	2016	General	ABS(Anti-lock Braking System)	Special Function	Hill Start Assist Control
Elantra(MDI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MDI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MDI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MDI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MDI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra(MDI)	2016	General	AC(Air Conditioning)	Version Information	
Elantra(MDI)	2016	General	AC(Air Conditioning)	Read Fault Code	
Elantra(MDI)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MDI)	2016	General	AC(Air Conditioning)	Read Data Stream	
Elantra(MDI)	2016	General	AC(Air Conditioning)	Actuation Test	
Elantra(MDI)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(MDI)	2016	General	BCM(Body Control Module)	Version Information	
Elantra(MDI)	2016	General	BCM(Body Control Module)	Read Fault Code	
Elantra(MDI)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MDI)	2016	General	BCM(Body Control Module)	Read Data Stream	
Elantra(MDI)	2016	General	BCM(Body Control Module)	Actuation Test	
Elantra(MDI)	2016	General	EPS(Electronic Power Steering)	Version Information	
Elantra(MDI)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MDI)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MDI)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MDI)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	

model	year	area	system	function	subfunction
Elantra(MDI)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MDI)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MDI)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MDI)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MDI)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(MDI)	2016	General	Smart Key Unit	Version Information	
Elantra(MDI)	2016	General	Smart Key Unit	Read Fault Code	
Elantra(MDI)	2016	General	Smart Key Unit	Clear Fault Memory	
Elantra(MDI)	2016	General	Smart Key Unit	Read Data Stream	
Elantra(MDI)	2016	General	Smart Key Unit	Actuation Test	
Elantra(MDI)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MDI)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MDI)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(MDI)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(MDI)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MDI)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MDI)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(MDI)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MDI)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(MDI)	2016	General	IMM(Immobilizer)	Read Data Stream	
Elantra(MDI)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(MDI)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MDI)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MDI)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(MDI)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MDI)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(MDI)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MDI)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Version Information	
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Actuation Test	
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(MDI)	2015	General	TCM(Transmission Control Module)	Version Information	
Elantra(MDI)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MDI)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MDI)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MDI)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MDI)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(MDI)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MDI)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(MDI)	2015	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Elantra(MDI)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(MDI)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(MDI)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(MDI)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(MDI)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Elantra(MDI)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(MDI)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(MDI)	2015	General	ABS(Anti-lock Braking System)	Special Function	Hill Start Assist Control
Elantra(MDI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MDI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MDI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MDI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MDI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra(MDI)	2015	General	AC(Air Conditioning)	Version Information	
Elantra(MDI)	2015	General	AC(Air Conditioning)	Read Fault Code	
Elantra(MDI)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MDI)	2015	General	AC(Air Conditioning)	Read Data Stream	
Elantra(MDI)	2015	General	AC(Air Conditioning)	Actuation Test	
Elantra(MDI)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(MDI)	2015	General	BCM(Body Control Module)	Version Information	
Elantra(MDI)	2015	General	BCM(Body Control Module)	Read Fault Code	
Elantra(MDI)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MDI)	2015	General	BCM(Body Control Module)	Read Data Stream	
Elantra(MDI)	2015	General	BCM(Body Control Module)	Actuation Test	
Elantra(MDI)	2015	General	EPS(Electronic Power Steering)	Version Information	
Elantra(MDI)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MDI)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MDI)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(MDI)	2015	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MDI)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MDI)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MDI)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MDI)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MDI)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(MDI)	2015	General	Smart Key Unit	Version Information	
Elantra(MDI)	2015	General	Smart Key Unit	Read Fault Code	
Elantra(MDI)	2015	General	Smart Key Unit	Clear Fault Memory	
Elantra(MDI)	2015	General	Smart Key Unit	Read Data Stream	
Elantra(MDI)	2015	General	Smart Key Unit	Actuation Test	
Elantra(MDI)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MDI)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MDI)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(MDI)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(MDI)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MDI)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MDI)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(MDI)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MDI)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(MDI)	2015	General	IMM(Immobilizer)	Read Data Stream	
Elantra(MDI)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Checking
Elantra(MDI)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MDI)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MDI)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(MDI)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MDI)	2015	General	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(MDI)	2015	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MDI)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Version Information	
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Actuation Test	
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(MDI)	2014	General	TCM(Transmission Control Module)	Version Information	
Elantra(MDI)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MDI)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MDI)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MDI)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MDI)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(MDI)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MDI)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode

model	year	area	system	function	subfunction
Elantra(MDI)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(MDI)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(MDI)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(MDI)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(MDI)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(MDI)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Elantra(MDI)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(MDI)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(MDI)	2014	General	ABS(Anti-lock Braking System)	Special Function	Hill Start Assist Control
Elantra(MDI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MDI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MDI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MDI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MDI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra(MDI)	2014	General	AC(Air Conditioning)	Version Information	
Elantra(MDI)	2014	General	AC(Air Conditioning)	Read Fault Code	
Elantra(MDI)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MDI)	2014	General	AC(Air Conditioning)	Read Data Stream	
Elantra(MDI)	2014	General	AC(Air Conditioning)	Actuation Test	
Elantra(MDI)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(MDI)	2014	General	BCM(Body Control Module)	Version Information	
Elantra(MDI)	2014	General	BCM(Body Control Module)	Read Fault Code	
Elantra(MDI)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MDI)	2014	General	BCM(Body Control Module)	Read Data Stream	
Elantra(MDI)	2014	General	BCM(Body Control Module)	Actuation Test	
Elantra(MDI)	2014	General	EPS(Electronic Power Steering)	Version Information	
Elantra(MDI)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MDI)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(MDI)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MDI)	2014	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MDI)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MDI)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MDI)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MDI)	2014	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MDI)	2014	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(MDI)	2014	General	Smart Key Unit	Version Information	
Elantra(MDI)	2014	General	Smart Key Unit	Read Fault Code	
Elantra(MDI)	2014	General	Smart Key Unit	Clear Fault Memory	
Elantra(MDI)	2014	General	Smart Key Unit	Read Data Stream	
Elantra(MDI)	2014	General	Smart Key Unit	Actuation Test	
Elantra(MDI)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MDI)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MDI)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(MDI)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(MDI)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MDI)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MDI)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(MDI)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MDI)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(MDI)	2014	General	IMM(Immobilizer)	Read Data Stream	
Elantra(MDI)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(MDI)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MDI)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MDI)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(MDI)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Elantra(MDI)	2014	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(MDI)	2014	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MDI)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Version Information	
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Actuation Test	
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
Elantra(MDI)	2013	General	TCM(Transmission Control Module)	Version Information	
Elantra(MDI)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MDI)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MDI)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MDI)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MDI)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(MDI)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MDI)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(MDI)	2013	General	ESP(Electronic Stability Program)	Version Information	
Elantra(MDI)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
Elantra(MDI)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Elantra(MDI)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
Elantra(MDI)	2013	General	ESP(Electronic Stability Program)	Actuation Test	
Elantra(MDI)	2013	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Elantra(MDI)	2013	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Elantra(MDI)	2013	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(MDI)	2013	General	ESP(Electronic Stability Program)	Special Function	Hill Start Assist Control
Elantra(MDI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MDI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MDI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MDI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MDI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Elantra(MDI)	2013	General	AC(Air Conditioning)	Version Information	
Elantra(MDI)	2013	General	AC(Air Conditioning)	Read Fault Code	
Elantra(MDI)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MDI)	2013	General	AC(Air Conditioning)	Read Data Stream	
Elantra(MDI)	2013	General	AC(Air Conditioning)	Actuation Test	
Elantra(MDI)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)

model	year	area	system	function	subfunction
Elantra(MDI)	2013	General	BCM(Body Control Module)	Version Information	
Elantra(MDI)	2013	General	BCM(Body Control Module)	Read Fault Code	
Elantra(MDI)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MDI)	2013	General	BCM(Body Control Module)	Read Data Stream	
Elantra(MDI)	2013	General	BCM(Body Control Module)	Actuation Test	
Elantra(MDI)	2013	General	EPS(Electronic Power Steering)	Version Information	
Elantra(MDI)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MDI)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MDI)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MDI)	2013	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MDI)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MDI)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MDI)	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MDI)	2013	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MDI)	2013	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(MDI)	2013	General	IMM(Immobilizer)	Read Data Stream	
Elantra(MDI)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(MDI)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MDI)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MDI)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(MDI)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MDI)	2013	General	Smart Key Unit	Version Information	
Elantra(MDI)	2013	General	Smart Key Unit	Read Fault Code	
Elantra(MDI)	2013	General	Smart Key Unit	Clear Fault Memory	
Elantra(MDI)	2013	General	Smart Key Unit	Read Data Stream	
Elantra(MDI)	2013	General	Smart Key Unit	Actuation Test	
Elantra(MDI)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Elantra(MDI)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MDI)	2013	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(MDI)	2013	General	Smart Key Unit	Special Function	ESCL Status Information
Elantra(MDI)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MDI)	2013	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MDI)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
Elantra(MDI)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MDI)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check
Elantra(MDI)	2013	General	Transmitter Code Saving	Read Data Stream	
Elantra(MDI)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Elantra(MDI)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Elantra(UD)	2016	General	ECM(Engine Control Module)	Version Information	
Elantra(UD)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(UD)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(UD)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(UD)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(UD)	2016	General	ECM(Engine Control Module)	Actuation Test	
Elantra(UD)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(UD)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(UD)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(UD)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(UD)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(UD)	2016	General	ECM(Engine Control Module)	Special Function	CVT Test
Elantra(UD)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(UD)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(UD)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
Elantra(UD)	2016	General	TCM(Transmission Control Module)	Version Information	
Elantra(UD)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(UD)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(UD)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(UD)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(UD)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(UD)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(UD)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(UD)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(UD)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(UD)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(UD)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(UD)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(UD)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(UD)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(UD)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra(UD)	2016	General	ABS(Anti-lock Braking System)	Special Function	Bas+ESP/ESC/CAN-ESP
Elantra(UD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(UD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(UD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(UD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(UD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(UD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra(UD)	2016	General	AC(Air Conditioning)	Version Information	
Elantra(UD)	2016	General	AC(Air Conditioning)	Read Fault Code	
Elantra(UD)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(UD)	2016	General	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(UD)	2016	General	AC(Air Conditioning)	Actuation Test	
Elantra(UD)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecv Type)
Elantra(UD)	2016	General	BCM(Body Control Module)	Version Information	
Elantra(UD)	2016	General	BCM(Body Control Module)	Read Fault Code	
Elantra(UD)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(UD)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(UD)	2016	General	BCM(Body Control Module)	Read Data Stream	
Elantra(UD)	2016	General	BCM(Body Control Module)	Actuation Test	
Elantra(UD)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(UD)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(UD)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(UD)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(UD)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(UD)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(UD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(UD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(UD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(UD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(UD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(UD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(UD)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Elantra(UD)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Elantra(UD)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Elantra(UD)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Elantra(UD)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Elantra(UD)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Elantra(UD)	2016	General	EPS(Electronic Power Steering)	Version Information	
Elantra(UD)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(UD)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(UD)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(UD)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(UD)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(UD)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(UD)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(UD)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(UD)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(UD)	2016	General	Smart Key Unit	Version Information	
Elantra(UD)	2016	General	Smart Key Unit	Read Fault Code	
Elantra(UD)	2016	General	Smart Key Unit	Clear Fault Memory	
Elantra(UD)	2016	General	Smart Key Unit	Read Data Stream	
Elantra(UD)	2016	General	Smart Key Unit	Actuation Test	
Elantra(UD)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(UD)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(UD)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(UD)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(UD)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(UD)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(UD)	2016	General	Telematics Unit	Version Information	
Elantra(UD)	2016	General	Telematics Unit	Read Fault Code	
Elantra(UD)	2016	General	Telematics Unit	Clear Fault Memory	
Elantra(UD)	2016	General	IMM(Immobilizer)	Read Data Stream	
Elantra(UD)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(UD)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(UD)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(UD)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(UD)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Elantra(UD)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(UD)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(UD)	2015	General	ECM(Engine Control Module)	Version Information	
Elantra(UD)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(UD)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(UD)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(UD)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(UD)	2015	General	ECM(Engine Control Module)	Actuation Test	
Elantra(UD)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(UD)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(UD)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(UD)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(UD)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(UD)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(UD)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(UD)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(UD)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(UD)	2015	General	TCM(Transmission Control Module)	Version Information	
Elantra(UD)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(UD)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(UD)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(UD)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(UD)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(UD)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(UD)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(UD)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(UD)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(UD)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(UD)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(UD)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(UD)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(UD)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(UD)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra(UD)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-LSF Only)
Elantra(UD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(UD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(UD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(UD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(UD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(UD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra(UD)	2015	General	AC(Air Conditioning)	Version Information	
Elantra(UD)	2015	General	AC(Air Conditioning)	Read Fault Code	
Elantra(UD)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(UD)	2015	General	AC(Air Conditioning)	Read Data Stream	
Elantra(UD)	2015	General	AC(Air Conditioning)	Actuation Test	
Elantra(UD)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecv Type)
Elantra(UD)	2015	General	BCM(Body Control Module)	Version Information	
Elantra(UD)	2015	General	BCM(Body Control Module)	Read Fault Code	
Elantra(UD)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(UD)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(UD)	2015	General	BCM(Body Control Module)	Read Data Stream	
Elantra(UD)	2015	General	BCM(Body Control Module)	Actuation Test	
Elantra(UD)	2015	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(UD)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(UD)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(UD)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(UD)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(UD)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(UD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(UD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(UD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(UD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(UD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(UD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(UD)	2015	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Elantra(UD)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Elantra(UD)	2015	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Elantra(UD)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Elantra(UD)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Elantra(UD)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Elantra(UD)	2015	General	EPS(Electronic Power Steering)	Version Information	
Elantra(UD)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(UD)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(UD)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(UD)	2015	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(UD)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(UD)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(UD)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(UD)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(UD)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(UD)	2015	General	Smart Key Unit	Version Information	
Elantra(UD)	2015	General	Smart Key Unit	Read Fault Code	
Elantra(UD)	2015	General	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(UD)	2015	General	Smart Key Unit	Read Data Stream	
Elantra(UD)	2015	General	Smart Key Unit	Actuation Test	
Elantra(UD)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(UD)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(UD)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(UD)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(UD)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(UD)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Elantra(UD)	2015	General	Telematics Unit	Version Information	
Elantra(UD)	2015	General	Telematics Unit	Read Fault Code	
Elantra(UD)	2015	General	Telematics Unit	Clear Fault Memory	
Elantra(UD)	2015	General	IMM(Immobilizer)	Read Data Stream	
Elantra(UD)	2015	General	IMM(Immobilizer)	Special Function	Password
Elantra(UD)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Elantra(UD)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(UD)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(UD)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(UD)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(UD)	2015	General	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(UD)	2015	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(UD)	2014	General	ECM(Engine Control Module)	Version Information	
Elantra(UD)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(UD)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(UD)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(UD)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(UD)	2014	General	ECM(Engine Control Module)	Actuation Test	
Elantra(UD)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(UD)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(UD)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(UD)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Elantra(UD)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(UD)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(UD)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(UD)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(UD)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(UD)	2014	General	TCM(Transmission Control Module)	Version Information	
Elantra(UD)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(UD)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(UD)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(UD)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Elantra(UD)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(UD)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(UD)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(UD)	2014	General	Electronic Stability Control	Version Information	
Elantra(UD)	2014	General	Electronic Stability Control	Read Fault Code	
Elantra(UD)	2014	General	Electronic Stability Control	Clear Fault Memory	
Elantra(UD)	2014	General	Electronic Stability Control	Read Data Stream	
Elantra(UD)	2014	General	Electronic Stability Control	Actuation Test	
Elantra(UD)	2014	General	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(UD)	2014	General	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra(UD)	2014	General	Electronic Stability Control	Special Function	Auto Detected Configuration
Elantra(UD)	2014	General	Electronic Stability Control	Special Function	SAS Calibration(CAN-LSF Only)
Elantra(UD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(UD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(UD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(UD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(UD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding

model	year	area	system	function	subfunction
Elantra(UD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra(UD)	2014	General	AC(Air Conditioning)	Version Information	
Elantra(UD)	2014	General	AC(Air Conditioning)	Read Fault Code	
Elantra(UD)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Elantra(UD)	2014	General	AC(Air Conditioning)	Read Data Stream	
Elantra(UD)	2014	General	AC(Air Conditioning)	Actuation Test	
Elantra(UD)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(UD)	2014	General	BCM(Body Control Module)	Version Information	
Elantra(UD)	2014	General	BCM(Body Control Module)	Read Fault Code	
Elantra(UD)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Elantra(UD)	2014	General	BCM(Body Control Module)	Read Data Stream	
Elantra(UD)	2014	General	BCM(Body Control Module)	Actuation Test	
Elantra(UD)	2014	General	EPS(Electronic Power Steering)	Version Information	
Elantra(UD)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(UD)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(UD)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(UD)	2014	General	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(UD)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(UD)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(UD)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(UD)	2014	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(UD)	2014	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(UD)	2014	General	Auto Headlamp Leveling System	Version Information	
Elantra(UD)	2014	General	Auto Headlamp Leveling System	Read Fault Code	
Elantra(UD)	2014	General	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(UD)	2014	General	Auto Headlamp Leveling System	Read Data Stream	
Elantra(UD)	2014	General	Auto Headlamp Leveling System	Special Function	Level Initialization

model	year	area	system	function	subfunction
Elantra(UD)	2014	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(UD)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(UD)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(UD)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(UD)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(UD)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(UD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(UD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(UD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(UD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(UD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(UD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(UD)	2014	General	IMM(Immobilizer)	Read Data Stream	
Elantra(UD)	2014	General	IMM(Immobilizer)	Special Function	Password
Elantra(UD)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Elantra(UD)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(UD)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(UD)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(UD)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(UD)	2014	General	Smart Key Unit	Version Information	
Elantra(UD)	2014	General	Smart Key Unit	Read Fault Code	
Elantra(UD)	2014	General	Smart Key Unit	Clear Fault Memory	
Elantra(UD)	2014	General	Smart Key Unit	Read Data Stream	
Elantra(UD)	2014	General	Smart Key Unit	Actuation Test	
Elantra(UD)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(UD)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Elantra(UD)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Elantra(UD)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(UD)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(UD)	2014	General	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Elantra(UD)	2014	General	Transmitter Code Saving	Read Data Stream	
Elantra(UD)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(UD)	2014	General	Cluster Module	Version Information	
Elantra(UD)	2014	General	Cluster Module	Read Fault Code	
Elantra(UD)	2014	General	Cluster Module	Clear Fault Memory	
Elantra(UD)	2014	General	Cluster Module	Read Data Stream	
Elantra(UD)	2014	General	Cluster Module	Actuation Test	
Elantra(UD)	2014	General	Cluster Module	Special Function	CLU Variant Coding
Elantra(UD)	2014	General	Service Reminder	Special Function	Service Reminder Setting
Elantra(UD)	2014	General	Smart Junction Block	Version Information	
Elantra(UD)	2014	General	Smart Junction Block	Read Fault Code	
Elantra(UD)	2014	General	Smart Junction Block	Clear Fault Memory	
Elantra(UD)	2014	General	Smart Junction Block	Read Data Stream	
Elantra(UD)	2014	General	Smart Junction Block	Actuation Test	
Elantra(UD)	2014	General	Telematics Unit	Version Information	
Elantra(UD)	2014	General	Telematics Unit	Read Fault Code	
Elantra(UD)	2014	General	Telematics Unit	Clear Fault Memory	
Elantra(RD)	2000	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(RD)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(RD)	2000	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(RD)	2000	General	ECM(Engine Control Module)	Actuation Test	
Elantra(RD)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(RD)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(RD)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(RD)	2000	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(RD)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(RD)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(RD)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(RD)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(RD)	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(RD)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(RD)	2000	General	IMM(Immobilizer)	Read Fault Code	
Elantra(RD)	2000	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(RD)	2000	General	IMM(Immobilizer)	Read Data Stream	
Elantra(RD)	2000	General	IMM(Immobilizer)	Special Function	Password Record/Change
Elantra(RD)	2000	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Elantra(RD)	2000	General	IMM(Immobilizer)	Special Function	Master Key Delete
Elantra(RD)	2000	General	IMM(Immobilizer)	Special Function	Neutral Mode
Elantra(RD)	2000	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Elantra(RD)	1999	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(RD)	1999	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(RD)	1999	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(RD)	1999	General	ECM(Engine Control Module)	Actuation Test	
Elantra(RD)	1999	General	TCM(Transmission Control Module)	Version Information	
Elantra(RD)	1999	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(RD)	1999	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(RD)	1999	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(RD)	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(RD)	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(RD)	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(RD)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(RD)	1999	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(RD)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(RD)	1999	General	IMM(Immobilizer)	Read Fault Code	
Elantra(RD)	1999	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(RD)	1999	General	IMM(Immobilizer)	Read Data Stream	
Elantra(RD)	1999	General	IMM(Immobilizer)	Special Function	Password Record/Change
Elantra(RD)	1999	General	IMM(Immobilizer)	Special Function	Master Key Record/Change

model	year	area	system	function	subfunction
Elantra(RD)	1999	General	IMM(Immobilizer)	Special Function	Master Key Delete
Elantra(RD)	1999	General	IMM(Immobilizer)	Special Function	Neutral Mode
Elantra(RD)	1999	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Elantra(RD)	1998	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(RD)	1998	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(RD)	1998	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(RD)	1998	General	ECM(Engine Control Module)	Actuation Test	
Elantra(RD)	1998	General	TCM(Transmission Control Module)	Version Information	
Elantra(RD)	1998	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(RD)	1998	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(RD)	1998	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(RD)	1998	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(RD)	1998	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(RD)	1998	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(RD)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(RD)	1998	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(RD)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(RD)	1998	General	IMM(Immobilizer)	Read Fault Code	
Elantra(RD)	1998	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(RD)	1998	General	IMM(Immobilizer)	Read Data Stream	
Elantra(RD)	1998	General	IMM(Immobilizer)	Special Function	Password Record/Change
Elantra(RD)	1998	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Elantra(RD)	1998	General	IMM(Immobilizer)	Special Function	Master Key Delete
Elantra(RD)	1998	General	IMM(Immobilizer)	Special Function	Neutral Mode
Elantra(RD)	1998	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Elantra(RD)	1997	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(RD)	1997	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(RD)	1997	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(RD)	1997	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(RD)	1997	General	TCM(Transmission Control Module)	Version Information	
Elantra(RD)	1997	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(RD)	1997	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(RD)	1997	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(RD)	1997	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(RD)	1997	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(RD)	1997	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(RD)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(RD)	1997	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(RD)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(RD)	1997	General	IMM(Immobilizer)	Read Fault Code	
Elantra(RD)	1997	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(RD)	1997	General	IMM(Immobilizer)	Read Data Stream	
Elantra(RD)	1997	General	IMM(Immobilizer)	Special Function	Password Record/Change
Elantra(RD)	1997	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Elantra(RD)	1997	General	IMM(Immobilizer)	Special Function	Master Key Delete
Elantra(RD)	1997	General	IMM(Immobilizer)	Special Function	Neutral Mode
Elantra(RD)	1997	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Elantra(RD)	1996	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(RD)	1996	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(RD)	1996	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(RD)	1996	General	ECM(Engine Control Module)	Actuation Test	
Elantra(RD)	1996	General	TCM(Transmission Control Module)	Version Information	
Elantra(RD)	1996	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(RD)	1996	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(RD)	1996	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(RD)	1996	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(RD)	1996	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(RD)	1996	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(RD)	1996	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(RD)	1996	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(RD)	1996	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(RD)	1996	General	IMM(Immobilizer)	Read Fault Code	
Elantra(RD)	1996	General	IMM(Immobilizer)	Clear Fault Memory	
Elantra(RD)	1996	General	IMM(Immobilizer)	Read Data Stream	
Elantra(RD)	1996	General	IMM(Immobilizer)	Special Function	Password Record/Change
Elantra(RD)	1996	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Elantra(RD)	1996	General	IMM(Immobilizer)	Special Function	Master Key Delete
Elantra(RD)	1996	General	IMM(Immobilizer)	Special Function	Neutral Mode
Elantra(RD)	1996	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Elantra(XD)	2006	General	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2006	General	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2006	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(XD)	2006	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(XD)	2006	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(XD)	2006	General	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2006	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(XD)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2006	General	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2006	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(XD)	2006	General	TCM(Transmission Control Module)	Version Information	
Elantra(XD)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(XD)	2006	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(XD)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2006	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(XD)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(XD)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(XD)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(XD)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(XD)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(XD)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2006	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(XD)	2006	General	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2006	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(XD)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2006	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(XD)	2006	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(XD)	2006	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(XD)	2006	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(XD)	2005	General	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2005	General	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2005	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(XD)	2005	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(XD)	2005	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test

model	year	area	system	function	subfunction
Elantra(XD)	2005	General	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2005	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(XD)	2005	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2005	General	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2005	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(XD)	2005	General	TCM(Transmission Control Module)	Version Information	
Elantra(XD)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(XD)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(XD)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2005	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(XD)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(XD)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(XD)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(XD)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(XD)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(XD)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2005	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(XD)	2005	General	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2005	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(XD)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2005	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(XD)	2005	General	Transmitter Code Saving	Special Function	Code Saving

model	year	area	system	function	subfunction
Elantra(XD)	2005	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(XD)	2005	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(XD)	2004	General	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2004	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2004	General	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2004	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(XD)	2004	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(XD)	2004	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(XD)	2004	General	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2004	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(XD)	2004	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2004	General	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2004	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(XD)	2004	General	TCM(Transmission Control Module)	Version Information	
Elantra(XD)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(XD)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(XD)	2004	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2004	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(XD)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(XD)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(XD)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(XD)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Elantra(XD)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(XD)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2004	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(XD)	2004	General	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2004	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(XD)	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2004	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(XD)	2004	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(XD)	2004	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(XD)	2004	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(XD)	2003	General	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2003	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2003	General	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2003	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(XD)	2003	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(XD)	2003	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(XD)	2003	General	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2003	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(XD)	2003	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2003	General	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2003	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(XD)	2003	General	TCM(Transmission Control Module)	Version Information	
Elantra(XD)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(XD)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(XD)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2003	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(XD)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(XD)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(XD)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(XD)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(XD)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(XD)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2003	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(XD)	2003	General	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2003	General	IMM(Immobilizer)	Special Function	Password
Elantra(XD)	2003	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Elantra(XD)	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2003	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(XD)	2003	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(XD)	2003	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(XD)	2003	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(XD)	2002	General	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2002	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2002	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2002	General	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2002	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(XD)	2002	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Elantra(XD)	2002	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(XD)	2002	General	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2002	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2002	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(XD)	2002	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2002	General	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2002	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(XD)	2002	General	TCM(Transmission Control Module)	Version Information	
Elantra(XD)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(XD)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(XD)	2002	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2002	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(XD)	2002	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(XD)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(XD)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(XD)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(XD)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(XD)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2002	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(XD)	2002	General	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2002	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(XD)	2002	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2002	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2002	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Elantra(XD)	2002	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(XD)	2002	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(XD)	2002	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Elantra(XD)	2001	General	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2001	General	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2001	General	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2001	General	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2001	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(XD)	2001	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(XD)	2001	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(XD)	2001	General	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2001	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2001	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Elantra(XD)	2001	General	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2001	General	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2001	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(XD)	2001	General	TCM(Transmission Control Module)	Version Information	
Elantra(XD)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(XD)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
Elantra(XD)	2001	General	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2001	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(XD)	2001	General	ABS(Anti-lock Braking System)	Version Information	
Elantra(XD)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(XD)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Elantra(XD)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(XD)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(XD)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2001	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(XD)	2001	General	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2001	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Elantra(XD)	2001	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2001	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2001	General	IMM(Immobilizer)	Special Function	Teaching
Elantra(XD)	2001	General	Transmitter Code Saving	Special Function	Code Saving
Elantra(XD)	2001	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Elantra(XD)	2001	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Eon(HA)	2018	General	ECM(Engine Control Module)	Version Information	
Eon(HA)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Eon(HA)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Eon(HA)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Eon(HA)	2018	General	ECM(Engine Control Module)	Actuation Test	
Eon(HA)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Eon(HA)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Eon(HA)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Eon(HA)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Eon(HA)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Eon(HA)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Eon(HA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Eon(HA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Eon(HA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Eon(HA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Eon(HA)	2018	General	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Eon(HA)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Eon(HA)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Eon(HA)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Eon(HA)	2018	General	IMM(Immobilizer)	Read Fault Code	
Eon(HA)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Eon(HA)	2018	General	IMM(Immobilizer)	Read Data Stream	
Eon(HA)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Eon(HA)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Eon(HA)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Eon(HA)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Eon(HA)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Eon(HA)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Eon(HA)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Eon(HA)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Eon(HA)	2018	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Eon(HA)	2017	General	ECM(Engine Control Module)	Version Information	
Eon(HA)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Eon(HA)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Eon(HA)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Eon(HA)	2017	General	ECM(Engine Control Module)	Actuation Test	
Eon(HA)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Eon(HA)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Eon(HA)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Eon(HA)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Eon(HA)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Eon(HA)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Eon(HA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Eon(HA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Eon(HA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Eon(HA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Eon(HA)	2017	General	EPS(Electronic Power Steering)	Version Information	
Eon(HA)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Eon(HA)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Eon(HA)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Eon(HA)	2017	General	IMM(Immobilizer)	Read Fault Code	
Eon(HA)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Eon(HA)	2017	General	IMM(Immobilizer)	Read Data Stream	
Eon(HA)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Eon(HA)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Eon(HA)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Eon(HA)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Eon(HA)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Eon(HA)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Eon(HA)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Eon(HA)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Eon(HA)	2017	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Eon(HA)	2016	General	ECM(Engine Control Module)	Version Information	
Eon(HA)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Eon(HA)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Eon(HA)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Eon(HA)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Eon(HA)	2016	General	ECM(Engine Control Module)	Actuation Test	
Eon(HA)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Eon(HA)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Eon(HA)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Eon(HA)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Eon(HA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Eon(HA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Eon(HA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Eon(HA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Eon(HA)	2016	General	EPS(Electronic Power Steering)	Version Information	
Eon(HA)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Eon(HA)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Eon(HA)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Eon(HA)	2016	General	IMM(Immobilizer)	Read Fault Code	
Eon(HA)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
Eon(HA)	2016	General	IMM(Immobilizer)	Read Data Stream	
Eon(HA)	2016	General	IMM(Immobilizer)	Special Function	Password
Eon(HA)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Eon(HA)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Eon(HA)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Eon(HA)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Eon(HA)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Eon(HA)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Eon(HA)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Eon(HA)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Eon(HA)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Eon(HA)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Eon(HA)	2015	General	ECM(Engine Control Module)	Version Information	
Eon(HA)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Eon(HA)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Eon(HA)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Eon(HA)	2015	General	ECM(Engine Control Module)	Actuation Test	
Eon(HA)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Eon(HA)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Eon(HA)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Eon(HA)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Eon(HA)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)

model	year	area	system	function	subfunction
Eon(HA)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Eon(HA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Eon(HA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Eon(HA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Eon(HA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Eon(HA)	2015	General	EPS(Electronic Power Steering)	Version Information	
Eon(HA)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Eon(HA)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Eon(HA)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Eon(HA)	2015	General	IMM(Immobilizer)	Read Fault Code	
Eon(HA)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
Eon(HA)	2015	General	IMM(Immobilizer)	Read Data Stream	
Eon(HA)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Eon(HA)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Eon(HA)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Eon(HA)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Eon(HA)	2015	General	Transmitter Code Saving	Read Data Stream	
Eon(HA)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Eon(HA)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Eon(HA)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Eon(HA)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Eon(HA)	2014	General	ECM(Engine Control Module)	Version Information	
Eon(HA)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Eon(HA)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Eon(HA)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Eon(HA)	2014	General	ECM(Engine Control Module)	Actuation Test	
Eon(HA)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Eon(HA)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Eon(HA)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Eon(HA)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Eon(HA)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Eon(HA)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Eon(HA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Eon(HA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Eon(HA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Eon(HA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Eon(HA)	2014	General	EPS(Electronic Power Steering)	Version Information	
Eon(HA)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Eon(HA)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Eon(HA)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Eon(HA)	2014	General	IMM(Immobilizer)	Read Fault Code	
Eon(HA)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
Eon(HA)	2014	General	IMM(Immobilizer)	Read Data Stream	
Eon(HA)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Eon(HA)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Eon(HA)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Eon(HA)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Eon(HA)	2014	General	Transmitter Code Saving	Read Data Stream	
Eon(HA)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Eon(HA)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Eon(HA)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Eon(HA)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Eon(HA)	2013	General	ECM(Engine Control Module)	Version Information	
Eon(HA)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Eon(HA)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Eon(HA)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Eon(HA)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Eon(HA)	2013	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Eon(HA)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Eon(HA)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Eon(HA)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Eon(HA)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Eon(HA)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Eon(HA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Eon(HA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Eon(HA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Eon(HA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Eon(HA)	2013	General	EPS(Electronic Power Steering)	Version Information	
Eon(HA)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Eon(HA)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Eon(HA)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Eon(HA)	2013	General	IMM(Immobilizer)	Read Fault Code	
Eon(HA)	2013	General	IMM(Immobilizer)	Clear Fault Memory	
Eon(HA)	2013	General	IMM(Immobilizer)	Read Data Stream	
Eon(HA)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Eon(HA)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Eon(HA)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Eon(HA)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Eon(HA)	2013	General	Transmitter Code Saving	Read Data Stream	
Eon(HA)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Eon(HA)	2012	General	ECM(Engine Control Module)	Version Information	
Eon(HA)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Eon(HA)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Eon(HA)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Eon(HA)	2012	General	ECM(Engine Control Module)	Read FreezeData	
Eon(HA)	2012	General	ECM(Engine Control Module)	Actuation Test	
Eon(HA)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Eon(HA)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Eon(HA)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Eon(HA)	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Eon(HA)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Eon(HA)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Eon(HA)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Eon(HA)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Eon(HA)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Eon(HA)	2012	General	EPS(Electronic Power Steering)	Version Information	
Eon(HA)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
Eon(HA)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Eon(HA)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
Eon(HA)	2012	General	IMM(Immobilizer)	Read Fault Code	
Eon(HA)	2012	General	IMM(Immobilizer)	Clear Fault Memory	
Eon(HA)	2012	General	IMM(Immobilizer)	Read Data Stream	
Eon(HA)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Eon(HA)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Eon(HA)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Eon(HA)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Eon(HA)	2012	General	Transmitter Code Saving	Read Data Stream	
Eon(HA)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Excel(X2)	1994	General	ECM(Engine Control Module)	Read Fault Code	
Excel(X2)	1994	General	ECM(Engine Control Module)	Clear Fault Memory	
Excel(X2)	1994	General	ECM(Engine Control Module)	Read Data Stream	
Excel(X2)	1994	General	TCM(Transmission Control Module)	Read Fault Code	
Excel(X2)	1994	General	TCM(Transmission Control Module)	Clear Fault Memory	
Excel(X2)	1994	General	TCM(Transmission Control Module)	Read Data Stream	
Excel(X2)	1993	General	ECM(Engine Control Module)	Read Fault Code	
Excel(X2)	1993	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Excel(X2)	1993	General	ECM(Engine Control Module)	Read Data Stream	
Excel(X2)	1993	General	TCM(Transmission Control Module)	Read Fault Code	
Excel(X2)	1993	General	TCM(Transmission Control Module)	Clear Fault Memory	
Excel(X2)	1993	General	TCM(Transmission Control Module)	Read Data Stream	
Excel(X2)	1992	General	ECM(Engine Control Module)	Read Fault Code	
Excel(X2)	1992	General	ECM(Engine Control Module)	Clear Fault Memory	
Excel(X2)	1992	General	ECM(Engine Control Module)	Read Data Stream	
Excel(X2)	1992	General	TCM(Transmission Control Module)	Read Fault Code	
Excel(X2)	1992	General	TCM(Transmission Control Module)	Clear Fault Memory	
Excel(X2)	1992	General	TCM(Transmission Control Module)	Read Data Stream	
Excel(X2)	1991	General	ECM(Engine Control Module)	Read Fault Code	
Excel(X2)	1991	General	ECM(Engine Control Module)	Clear Fault Memory	
Excel(X2)	1991	General	ECM(Engine Control Module)	Read Data Stream	
Excel(X2)	1991	General	TCM(Transmission Control Module)	Read Fault Code	
Excel(X2)	1991	General	TCM(Transmission Control Module)	Clear Fault Memory	
Excel(X2)	1991	General	TCM(Transmission Control Module)	Read Data Stream	
Excel(X2)	1990	General	ECM(Engine Control Module)	Read Fault Code	
Excel(X2)	1990	General	ECM(Engine Control Module)	Clear Fault Memory	
Excel(X2)	1990	General	ECM(Engine Control Module)	Read Data Stream	
Excel(X2)	1990	General	TCM(Transmission Control Module)	Read Fault Code	
Excel(X2)	1990	General	TCM(Transmission Control Module)	Clear Fault Memory	
Excel(X2)	1990	General	TCM(Transmission Control Module)	Read Data Stream	
G70(IK)	2018	General	ECM(Engine Control Module)	Version Information	
G70(IK)	2018	General	ECM(Engine Control Module)	Read Fault Code	
G70(IK)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
G70(IK)	2018	General	ECM(Engine Control Module)	Read Data Stream	
G70(IK)	2018	General	ECM(Engine Control Module)	Actuation Test	
G70(IK)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
G70(IK)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
G70(IK)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
G70(IK)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
G70(IK)	2018	General	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
G70(IK)	2018	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
G70(IK)	2018	General	TCM(Transmission Control Module)	Version Information	
G70(IK)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
G70(IK)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
G70(IK)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
G70(IK)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
G70(IK)	2018	General	TCM(Transmission Control Module)	Actuation Test	
G70(IK)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
G70(IK)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode Oil-pressure Characteristics
G70(IK)	2018	General	TCM(Transmission Control Module)	Special Function	Backup&Input(TCU Replacement)
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Version Information	
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only)
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(ECU Replacement)
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Special Function	Deactivate Factory Mode

model	year	area	system	function	subfunction
G70(IK)	2018	General	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCC/AEB)
G70(IK)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
G70(IK)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
G70(IK)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
G70(IK)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
G70(IK)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
G70(IK)	2018	General	AC(Air Conditioning)	Version Information	
G70(IK)	2018	General	AC(Air Conditioning)	Read Fault Code	
G70(IK)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
G70(IK)	2018	General	AC(Air Conditioning)	Read Data Stream	
G70(IK)	2018	General	AC(Air Conditioning)	Actuation Test	
G70(IK)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
G70(IK)	2018	General	BCM(Body Control Module)	Version Information	
G70(IK)	2018	General	BCM(Body Control Module)	Read Fault Code	
G70(IK)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
G70(IK)	2018	General	BCM(Body Control Module)	Read Data Stream	
G70(IK)	2018	General	BCM(Body Control Module)	Actuation Test	
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	User Option
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	HUD Calibration
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	Current FOB Key Check
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	Neutralization Mode
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	SMK Status Information
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	ESCL Status Information
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	Antenna Status Check
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	Smart Key Code Saving
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
G70(IK)	2018	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
G70(IK)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
G70(IK)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
G70(IK)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
G70(IK)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
G70(IK)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
G70(IK)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
G70(IK)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
G70(IK)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
G70(IK)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
G70(IK)	2018	General	EPS(Electronic Power Steering)	Version Information	
G70(IK)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
G70(IK)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
G70(IK)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
G70(IK)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
G70(IK)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
G70(IK)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
G70(IK)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
G70(IK)	2018	General	Electronic Control Suspension	Version Information	
G70(IK)	2018	General	Electronic Control Suspension	Read Fault Code	
G70(IK)	2018	General	Electronic Control Suspension	Clear Fault Memory	
G70(IK)	2018	General	Electronic Control Suspension	Read Data Stream	

model	year	area	system	function	subfunction
G70(IK)	2018	General	Electronic Control Suspension	Special Function	ECS Variant Coding
G70(IK)	2018	General	4WD Control	Version Information	
G70(IK)	2018	General	4WD Control	Read Fault Code	
G70(IK)	2018	General	4WD Control	Clear Fault Memory	
G70(IK)	2018	General	4WD Control	Read Data Stream	
G70(IK)	2018	General	4WD Control	Actuation Test	
G70(IK)	2018	General	4WD Control	Special Function	Clutch Learning Reset
G70(IK)	2018	General	4WD Control	Special Function	Air Bleeding Mode
G70(IK)	2018	General	Blind Spot Detection	Version Information	
G70(IK)	2018	General	Blind Spot Detection	Read Fault Code	
G70(IK)	2018	General	Blind Spot Detection	Clear Fault Memory	
G70(IK)	2018	General	Blind Spot Detection	Read Data Stream	
G70(IK)	2018	General	Blind Spot Detection	Actuation Test	
G70(IK)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
G70(IK)	2018	General	Multi Function Camera	Version Information	
G70(IK)	2018	General	Multi Function Camera	Read Fault Code	
G70(IK)	2018	General	Multi Function Camera	Clear Fault Memory	
G70(IK)	2018	General	Multi Function Camera	Read Data Stream	
G70(IK)	2018	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
G70(IK)	2018	General	Around View Monitor System	Version Information	
G70(IK)	2018	General	Around View Monitor System	Read Fault Code	
G70(IK)	2018	General	Around View Monitor System	Clear Fault Memory	
G70(IK)	2018	General	Around View Monitor System	Read Data Stream	
G70(IK)	2018	General	Around View Monitor System	Actuation Test	
G70(IK)	2018	General	Parking Guide System	Version Information	
G70(IK)	2018	General	Parking Guide System	Read Fault Code	
G70(IK)	2018	General	Parking Guide System	Clear Fault Memory	
G70(IK)	2018	General	Parking Guide System	Read Data Stream	
G70(IK)	2018	General	Active Air Flap	Version Information	

model	year	area	system	function	subfunction
G70(IK)	2018	General	Active Air Flap	Read Fault Code	
G70(IK)	2018	General	Active Air Flap	Clear Fault Memory	
G70(IK)	2018	General	Active Air Flap	Read Data Stream	
G70(IK)	2018	General	Active Air Flap	Actuation Test	
G70(IK)	2018	General	Active Hood System	Version Information	
G70(IK)	2018	General	Active Hood System	Read Fault Code	
G70(IK)	2018	General	Active Hood System	Clear Fault Memory	
G70(IK)	2018	General	Active Hood System	Read Data Stream	
G70(IK)	2018	General	Active Hood System	Actuation Test	
G70(IK)	2018	General	Amplifier	Special Function	AMP Operation Test
G70(IK)	2018	General	E-Shifter	Version Information	
G70(IK)	2018	General	E-Shifter	Read Fault Code	
G70(IK)	2018	General	E-Shifter	Clear Fault Memory	
G70(IK)	2018	General	E-Shifter	Read Data Stream	
G70(IK)	2018	General	E-Shifter	Actuation Test	
G70(IK)	2018	General	e-Call	Version Information	
G70(IK)	2018	General	e-Call	Read Fault Code	
G70(IK)	2018	General	e-Call	Clear Fault Memory	
G70(IK)	2018	General	Integrated Central Control Unit	Version Information	
G70(IK)	2018	General	Integrated Central Control Unit	Read Fault Code	
G70(IK)	2018	General	Integrated Central Control Unit	Clear Fault Memory	
G70(IK)	2018	General	Integrated Central Control Unit	Read Data Stream	
G70(IK)	2018	General	Integrated Central Control Unit	Actuation Test	
G70(IK)	2018	General	Integrated Central Control Unit	Special Function	Erase Network Configuration
G70(IK)	2018	General	Integrated Central Control Unit	Special Function	Battery Discharge Warning History Check
G70(IK)	2018	General	ECM(Engine Control Module)	Read FreezeData	
G70(IK)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
G70(IK)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
G70(IK)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
G80(DH)	2018	General	ECM(Engine Control Module)	Version Information	
G80(DH)	2018	General	ECM(Engine Control Module)	Read Fault Code	
G80(DH)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
G80(DH)	2018	General	ECM(Engine Control Module)	Read Data Stream	
G80(DH)	2018	General	ECM(Engine Control Module)	Actuation Test	
G80(DH)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
G80(DH)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
G80(DH)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
G80(DH)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
G80(DH)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
G80(DH)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
G80(DH)	2018	General	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
G80(DH)	2018	General	TCM(Transmission Control Module)	Version Information	
G80(DH)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
G80(DH)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
G80(DH)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
G80(DH)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
G80(DH)	2018	General	TCM(Transmission Control Module)	Actuation Test	
G80(DH)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
G80(DH)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
G80(DH)	2018	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Replacement)
G80(DH)	2018	General	Electronic Stability Program	Version Information	
G80(DH)	2018	General	Electronic Stability Program	Read Fault Code	
G80(DH)	2018	General	Electronic Stability Program	Clear Fault Memory	
G80(DH)	2018	General	Electronic Stability Program	Read Data Stream	
G80(DH)	2018	General	Electronic Stability Program	Actuation Test	
G80(DH)	2018	General	Electronic Stability Program	Special Function	Variant Coding

model	year	area	system	function	subfunction
G80(DH)	2018	General	Electronic Stability Program	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
G80(DH)	2018	General	Electronic Stability Program	Special Function	HCU Air Bleeding Mode
G80(DH)	2018	General	Electronic Stability Program	Special Function	Auto Detected Configuration
G80(DH)	2018	General	Electronic Stability Program	Special Function	Reset(ESP/ESC Only)
G80(DH)	2018	General	Electronic Stability Program	Special Function	Intelligent Driving Mode Integrated Control
G80(DH)	2018	General	Electronic Stability Program	Special Function	Steering Angle Sensor Calibration
G80(DH)	2018	General	Parking Brake	Version Information	
G80(DH)	2018	General	Parking Brake	Read Fault Code	
G80(DH)	2018	General	Parking Brake	Clear Fault Memory	
G80(DH)	2018	General	Parking Brake	Read Data Stream	
G80(DH)	2018	General	Parking Brake	Actuation Test	
G80(DH)	2018	General	SCC/AEB	Version Information	
G80(DH)	2018	General	SCC/AEB	Read Fault Code	
G80(DH)	2018	General	SCC/AEB	Clear Fault Memory	
G80(DH)	2018	General	SCC/AEB	Read Data Stream	
G80(DH)	2018	General	SCC/AEB	Special Function	Radar Sensor Alignment(SCC/AEB)
G80(DH)	2018	General	SCC/AEB	Special Function	Variant Coding
G80(DH)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
G80(DH)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
G80(DH)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
G80(DH)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
G80(DH)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
G80(DH)	2018	General	AC(Air Conditioning)	Version Information	
G80(DH)	2018	General	AC(Air Conditioning)	Read Fault Code	
G80(DH)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
G80(DH)	2018	General	AC(Air Conditioning)	Read Data Stream	
G80(DH)	2018	General	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
G80(DH)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
G80(DH)	2018	General	BCM(Body Control Module)	Version Information	
G80(DH)	2018	General	BCM(Body Control Module)	Read Fault Code	
G80(DH)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
G80(DH)	2018	General	BCM(Body Control Module)	Read Data Stream	
G80(DH)	2018	General	BCM(Body Control Module)	Actuation Test	
G80(DH)	2018	General	BCM(Body Control Module)	Special Function	User Option
G80(DH)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
G80(DH)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
G80(DH)	2018	General	BCM(Body Control Module)	Special Function	HUD Calibration
G80(DH)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
G80(DH)	2018	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
G80(DH)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
G80(DH)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
G80(DH)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
G80(DH)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
G80(DH)	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
G80(DH)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
G80(DH)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
G80(DH)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
G80(DH)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
G80(DH)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
G80(DH)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
G80(DH)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
G80(DH)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
G80(DH)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
G80(DH)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
G80(DH)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
G80(DH)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download

model	year	area	system	function	subfunction
G80(DH)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
G80(DH)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
G80(DH)	2018	General	EPS(Electronic Power Steering)	Version Information	
G80(DH)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
G80(DH)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
G80(DH)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
G80(DH)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
G80(DH)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
G80(DH)	2018	General	Electronic Control Suspension	Version Information	
G80(DH)	2018	General	Electronic Control Suspension	Read Fault Code	
G80(DH)	2018	General	Electronic Control Suspension	Clear Fault Memory	
G80(DH)	2018	General	Electronic Control Suspension	Read Data Stream	
G80(DH)	2018	General	Electronic Control Suspension	Actuation Test	
G80(DH)	2018	General	Electronic Control Suspension	Special Function	ECS Variant Coding
G80(DH)	2018	General	Smart Key Unit	Version Information	
G80(DH)	2018	General	Smart Key Unit	Read Fault Code	
G80(DH)	2018	General	Smart Key Unit	Clear Fault Memory	
G80(DH)	2018	General	Smart Key Unit	Read Data Stream	
G80(DH)	2018	General	Smart Key Unit	Actuation Test	
G80(DH)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
G80(DH)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
G80(DH)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
G80(DH)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
G80(DH)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
G80(DH)	2018	General	Smart Key Unit	Special Function	SMK Status Information
G80(DH)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
G80(DH)	2018	General	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
G80(DH)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
G80(DH)	2018	General	Blind Spot Detection	Version Information	
G80(DH)	2018	General	Blind Spot Detection	Read Fault Code	
G80(DH)	2018	General	Blind Spot Detection	Clear Fault Memory	
G80(DH)	2018	General	Blind Spot Detection	Read Data Stream	
G80(DH)	2018	General	Blind Spot Detection	Actuation Test	
G80(DH)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
G80(DH)	2018	General	Blind Spot Detection	Special Function	BSD Variant Coding
G80(DH)	2018	General	Lane Keeping Assist System	Version Information	
G80(DH)	2018	General	Lane Keeping Assist System	Read Fault Code	
G80(DH)	2018	General	Lane Keeping Assist System	Clear Fault Memory	
G80(DH)	2018	General	Lane Keeping Assist System	Read Data Stream	
G80(DH)	2018	General	Lane Keeping Assist System	Special Function	LKAS/LDWS Variant Coding
G80(DH)	2018	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
G80(DH)	2018	General	Smart Parking Assist System	Version Information	
G80(DH)	2018	General	Smart Parking Assist System	Read Fault Code	
G80(DH)	2018	General	Smart Parking Assist System	Clear Fault Memory	
G80(DH)	2018	General	Smart Parking Assist System	Read Data Stream	
G80(DH)	2018	General	Smart Parking Assist System	Actuation Test	
G80(DH)	2018	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
G80(DH)	2018	General	Around View Monitor System	Version Information	
G80(DH)	2018	General	Around View Monitor System	Read Fault Code	
G80(DH)	2018	General	Around View Monitor System	Clear Fault Memory	
G80(DH)	2018	General	Around View Monitor System	Read Data Stream	
G80(DH)	2018	General	Around View Monitor System	Actuation Test	
G80(DH)	2018	General	Parking Guide System	Version Information	
G80(DH)	2018	General	Parking Guide System	Read Fault Code	
G80(DH)	2018	General	Parking Guide System	Clear Fault Memory	
G80(DH)	2018	General	Parking Guide System	Read Data Stream	

model	year	area	system	function	subfunction
G80(DH)	2018	General	Pre-safe Seat Belt	Version Information	
G80(DH)	2018	General	Pre-safe Seat Belt	Read Fault Code	
G80(DH)	2018	General	Pre-safe Seat Belt	Clear Fault Memory	
G80(DH)	2018	General	Pre-safe Seat Belt	Read Data Stream	
G80(DH)	2018	General	Pre-safe Seat Belt	Actuation Test	
G80(DH)	2018	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
G80(DH)	2018	General	Active Air Flap	Version Information	
G80(DH)	2018	General	Active Air Flap	Read Fault Code	
G80(DH)	2018	General	Active Air Flap	Clear Fault Memory	
G80(DH)	2018	General	Active Air Flap	Read Data Stream	
G80(DH)	2018	General	Active Air Flap	Actuation Test	
G80(DH)	2018	General	Active Hood System	Version Information	
G80(DH)	2018	General	Active Hood System	Read Fault Code	
G80(DH)	2018	General	Active Hood System	Clear Fault Memory	
G80(DH)	2018	General	Amplifier	Read Fault Code	
G80(DH)	2018	General	Amplifier	Clear Fault Memory	
G80(DH)	2018	General	Audio Video Navigation	Version Information	
G80(DH)	2018	General	Audio Video Navigation	Read Data Stream	
G80(DH)	2018	General	Audio Video Navigation	Special Function	Ring Break
G80(DH)	2018	General	Audio Video Navigation	Special Function	User Option
G80(DH)	2018	General	E-Shifter	Version Information	
G80(DH)	2018	General	E-Shifter	Read Fault Code	
G80(DH)	2018	General	E-Shifter	Clear Fault Memory	
G80(DH)	2018	General	E-Shifter	Read Data Stream	
G80(DH)	2018	General	E-Shifter	Actuation Test	
G80(DH)	2018	General	Telematics Unit	Version Information	
G80(DH)	2018	General	Telematics Unit	Read Fault Code	
G80(DH)	2018	General	Telematics Unit	Clear Fault Memory	
G80(DH)	2018	General	Integrated Gateway Power Module	Version Information	

model	year	area	system	function	subfunction
G80(DH)	2018	General	Integrated Gateway Power Module	Read Fault Code	
G80(DH)	2018	General	Integrated Gateway Power Module	Clear Fault Memory	
G80(DH)	2018	General	Integrated Gateway Power Module	Read Data Stream	
G80(DH)	2018	General	Integrated Gateway Power Module	Actuation Test	
G80(DH)	2018	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
G80(DH)	2018	General	Integrated Gateway Power Module	Special Function	User Option
G80(DH)	2018	General	ECM(Engine Control Module)	Read FreezeData	
G80(DH)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
G80(DH)	2018	General	Driveshaft	Version Information	
G80(DH)	2018	General	Driveshaft	Read Fault Code	
G80(DH)	2018	General	Driveshaft	Clear Fault Memory	
G80(DH)	2018	General	Driveshaft	Read Data Stream	
G80(DH)	2018	General	Driveshaft	Actuation Test	
G80(DH)	2018	General	Driveshaft	Special Function	ECU Data Back-up&Writing
G80(DH)	2018	General	Driveshaft	Special Function	HW Characteristics
G80(DH)	2018	General	Driveshaft	Special Function	Power Down Calibration
G80(DH)	2018	General	Driveshaft	Special Function	T\C Clutch Calibration
G80(DH)	2018	General	Driveshaft	Special Function	Variant Coding
G80(DH)	2018	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
G80(DH)	2017	General	ECM(Engine Control Module)	Version Information	
G80(DH)	2017	General	ECM(Engine Control Module)	Read Fault Code	
G80(DH)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
G80(DH)	2017	General	ECM(Engine Control Module)	Read Data Stream	
G80(DH)	2017	General	ECM(Engine Control Module)	Actuation Test	
G80(DH)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
G80(DH)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
G80(DH)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
G80(DH)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
G80(DH)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
G80(DH)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
G80(DH)	2017	General	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
G80(DH)	2017	General	TCM(Transmission Control Module)	Version Information	
G80(DH)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
G80(DH)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
G80(DH)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
G80(DH)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
G80(DH)	2017	General	TCM(Transmission Control Module)	Actuation Test	
G80(DH)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
G80(DH)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
G80(DH)	2017	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Replacement)
G80(DH)	2017	General	Electronic Stability Program	Version Information	
G80(DH)	2017	General	Electronic Stability Program	Read Fault Code	
G80(DH)	2017	General	Electronic Stability Program	Clear Fault Memory	
G80(DH)	2017	General	Electronic Stability Program	Read Data Stream	
G80(DH)	2017	General	Electronic Stability Program	Actuation Test	
G80(DH)	2017	General	Electronic Stability Program	Special Function	Variant Coding
G80(DH)	2017	General	Electronic Stability Program	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
G80(DH)	2017	General	Electronic Stability Program	Special Function	HCU Air Bleeding Mode
G80(DH)	2017	General	Electronic Stability Program	Special Function	Auto Detected Configuration Reset(FSP/FSC Only)
G80(DH)	2017	General	Electronic Stability Program	Special Function	Intelligent Driving Mode Integrated Control
G80(DH)	2017	General	Electronic Stability Program	Special Function	Steering Angle Sensor Calibration
G80(DH)	2017	General	Parking Brake	Version Information	
G80(DH)	2017	General	Parking Brake	Read Fault Code	
G80(DH)	2017	General	Parking Brake	Clear Fault Memory	

model	year	area	system	function	subfunction
G80(DH)	2017	General	Parking Brake	Read Data Stream	
G80(DH)	2017	General	Parking Brake	Actuation Test	
G80(DH)	2017	General	SCC/AEB	Version Information	
G80(DH)	2017	General	SCC/AEB	Read Fault Code	
G80(DH)	2017	General	SCC/AEB	Clear Fault Memory	
G80(DH)	2017	General	SCC/AEB	Read Data Stream	
G80(DH)	2017	General	SCC/AEB	Special Function	Radar Sensor Alignment(SCC/AEB)
G80(DH)	2017	General	SCC/AEB	Special Function	Variant Coding
G80(DH)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
G80(DH)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
G80(DH)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
G80(DH)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
G80(DH)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
G80(DH)	2017	General	AC(Air Conditioning)	Version Information	
G80(DH)	2017	General	AC(Air Conditioning)	Read Fault Code	
G80(DH)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
G80(DH)	2017	General	AC(Air Conditioning)	Read Data Stream	
G80(DH)	2017	General	AC(Air Conditioning)	Actuation Test	
G80(DH)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
G80(DH)	2017	General	BCM(Body Control Module)	Version Information	
G80(DH)	2017	General	BCM(Body Control Module)	Read Fault Code	
G80(DH)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
G80(DH)	2017	General	BCM(Body Control Module)	Read Data Stream	
G80(DH)	2017	General	BCM(Body Control Module)	Actuation Test	
G80(DH)	2017	General	BCM(Body Control Module)	Special Function	User Option
G80(DH)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
G80(DH)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
G80(DH)	2017	General	BCM(Body Control Module)	Special Function	HUD Calibration
G80(DH)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting

model	year	area	system	function	subfunction
G80(DH)	2017	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
G80(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
G80(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
G80(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
G80(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
G80(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
G80(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
G80(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
G80(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
G80(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
G80(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
G80(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
G80(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
G80(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
G80(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
G80(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
G80(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
G80(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
G80(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
G80(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
G80(DH)	2017	General	EPS(Electronic Power Steering)	Version Information	
G80(DH)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
G80(DH)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
G80(DH)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
G80(DH)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
G80(DH)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
G80(DH)	2017	General	Electronic Control Suspension	Version Information	

model	year	area	system	function	subfunction
G80(DH)	2017	General	Electronic Control Suspension	Read Fault Code	
G80(DH)	2017	General	Electronic Control Suspension	Clear Fault Memory	
G80(DH)	2017	General	Electronic Control Suspension	Read Data Stream	
G80(DH)	2017	General	Electronic Control Suspension	Actuation Test	
G80(DH)	2017	General	Electronic Control Suspension	Special Function	ECS Variant Coding
G80(DH)	2017	General	Smart Key Unit	Version Information	
G80(DH)	2017	General	Smart Key Unit	Read Fault Code	
G80(DH)	2017	General	Smart Key Unit	Clear Fault Memory	
G80(DH)	2017	General	Smart Key Unit	Read Data Stream	
G80(DH)	2017	General	Smart Key Unit	Actuation Test	
G80(DH)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
G80(DH)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
G80(DH)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
G80(DH)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
G80(DH)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
G80(DH)	2017	General	Smart Key Unit	Special Function	SMK Status Information
G80(DH)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
G80(DH)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
G80(DH)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
G80(DH)	2017	General	Blind Spot Detection	Version Information	
G80(DH)	2017	General	Blind Spot Detection	Read Fault Code	
G80(DH)	2017	General	Blind Spot Detection	Clear Fault Memory	
G80(DH)	2017	General	Blind Spot Detection	Read Data Stream	
G80(DH)	2017	General	Blind Spot Detection	Actuation Test	
G80(DH)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
G80(DH)	2017	General	Blind Spot Detection	Special Function	BSD Variant Coding
G80(DH)	2017	General	Lane Keeping Assist System	Version Information	
G80(DH)	2017	General	Lane Keeping Assist System	Read Fault Code	
G80(DH)	2017	General	Lane Keeping Assist System	Clear Fault Memory	

model	year	area	system	function	subfunction
G80(DH)	2017	General	Lane Keeping Assist System	Read Data Stream	
G80(DH)	2017	General	Lane Keeping Assist System	Special Function	LKAS/LDWS Variant Coding
G80(DH)	2017	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
G80(DH)	2017	General	Smart Parking Assist System	Version Information	
G80(DH)	2017	General	Smart Parking Assist System	Read Fault Code	
G80(DH)	2017	General	Smart Parking Assist System	Clear Fault Memory	
G80(DH)	2017	General	Smart Parking Assist System	Read Data Stream	
G80(DH)	2017	General	Smart Parking Assist System	Actuation Test	
G80(DH)	2017	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
G80(DH)	2017	General	Around View Monitor System	Version Information	
G80(DH)	2017	General	Around View Monitor System	Read Fault Code	
G80(DH)	2017	General	Around View Monitor System	Clear Fault Memory	
G80(DH)	2017	General	Around View Monitor System	Read Data Stream	
G80(DH)	2017	General	Around View Monitor System	Actuation Test	
G80(DH)	2017	General	Parking Guide System	Version Information	
G80(DH)	2017	General	Parking Guide System	Read Fault Code	
G80(DH)	2017	General	Parking Guide System	Clear Fault Memory	
G80(DH)	2017	General	Parking Guide System	Read Data Stream	
G80(DH)	2017	General	Pre-safe Seat Belt	Version Information	
G80(DH)	2017	General	Pre-safe Seat Belt	Read Fault Code	
G80(DH)	2017	General	Pre-safe Seat Belt	Clear Fault Memory	
G80(DH)	2017	General	Pre-safe Seat Belt	Read Data Stream	
G80(DH)	2017	General	Pre-safe Seat Belt	Actuation Test	
G80(DH)	2017	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
G80(DH)	2017	General	Active Air Flap	Version Information	
G80(DH)	2017	General	Active Air Flap	Read Fault Code	
G80(DH)	2017	General	Active Air Flap	Clear Fault Memory	
G80(DH)	2017	General	Active Air Flap	Read Data Stream	
G80(DH)	2017	General	Active Air Flap	Actuation Test	

model	year	area	system	function	subfunction
G80(DH)	2017	General	Active Hood System	Version Information	
G80(DH)	2017	General	Active Hood System	Read Fault Code	
G80(DH)	2017	General	Active Hood System	Clear Fault Memory	
G80(DH)	2017	General	Amplifier	Read Fault Code	
G80(DH)	2017	General	Amplifier	Clear Fault Memory	
G80(DH)	2017	General	Audio Video Navigation	Version Information	
G80(DH)	2017	General	Audio Video Navigation	Read Data Stream	
G80(DH)	2017	General	Audio Video Navigation	Special Function	Ring Break
G80(DH)	2017	General	Audio Video Navigation	Special Function	User Option
G80(DH)	2017	General	E-Shifter	Version Information	
G80(DH)	2017	General	E-Shifter	Read Fault Code	
G80(DH)	2017	General	E-Shifter	Clear Fault Memory	
G80(DH)	2017	General	E-Shifter	Read Data Stream	
G80(DH)	2017	General	E-Shifter	Actuation Test	
G80(DH)	2017	General	Telematics Unit	Version Information	
G80(DH)	2017	General	Telematics Unit	Read Fault Code	
G80(DH)	2017	General	Telematics Unit	Clear Fault Memory	
G80(DH)	2017	General	Integrated Gateway Power Module	Version Information	
G80(DH)	2017	General	Integrated Gateway Power Module	Read Fault Code	
G80(DH)	2017	General	Integrated Gateway Power Module	Clear Fault Memory	
G80(DH)	2017	General	Integrated Gateway Power Module	Read Data Stream	
G80(DH)	2017	General	Integrated Gateway Power Module	Actuation Test	
G80(DH)	2017	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
G80(DH)	2017	General	Integrated Gateway Power Module	Special Function	User Option
G80(DH)	2017	General	ECM(Engine Control Module)	Read FreezeData	
G80(DH)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
G80(DH)	2017	General	Driveshaft	Version Information	
G80(DH)	2017	General	Driveshaft	Read Fault Code	
G80(DH)	2017	General	Driveshaft	Clear Fault Memory	

model	year	area	system	function	subfunction
G80(DH)	2017	General	Driveshaft	Read Data Stream	
G80(DH)	2017	General	Driveshaft	Actuation Test	
G80(DH)	2017	General	Driveshaft	Special Function	ECU Data Back-up&Writing
G80(DH)	2017	General	Driveshaft	Special Function	HW Characteristics
G80(DH)	2017	General	Driveshaft	Special Function	Power Down Calibration
G80(DH)	2017	General	Driveshaft	Special Function	T\C Clutch Calibration
G80(DH)	2017	General	Driveshaft	Special Function	Variant Coding
G80(DH)	2017	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
G90(HI)	2018	General	ECM(Engine Control Module)	Version Information	
G90(HI)	2018	General	ECM(Engine Control Module)	Read Fault Code	
G90(HI)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
G90(HI)	2018	General	ECM(Engine Control Module)	Read Data Stream	
G90(HI)	2018	General	ECM(Engine Control Module)	Actuation Test	
G90(HI)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
G90(HI)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
G90(HI)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
G90(HI)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
G90(HI)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
G90(HI)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
G90(HI)	2018	General	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
G90(HI)	2018	General	TCM(Transmission Control Module)	Version Information	
G90(HI)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
G90(HI)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
G90(HI)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
G90(HI)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
G90(HI)	2018	General	TCM(Transmission Control Module)	Actuation Test	
G90(HI)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
G90(HI)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode

model	year	area	system	function	subfunction
G90(HI)	2018	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
G90(HI)	2018	General	ABS(Anti-lock Braking System)	Version Information	
G90(HI)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
G90(HI)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
G90(HI)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
G90(HI)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
G90(HI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
G90(HI)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
G90(HI)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
G90(HI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
G90(HI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
G90(HI)	2018	General	Electric Parking Brake	Version Information	
G90(HI)	2018	General	Electric Parking Brake	Read Fault Code	
G90(HI)	2018	General	Electric Parking Brake	Clear Fault Memory	
G90(HI)	2018	General	Electric Parking Brake	Read Data Stream	
G90(HI)	2018	General	Electric Parking Brake	Actuation Test	
G90(HI)	2018	General	SCC/AEB	Version Information	
G90(HI)	2018	General	SCC/AEB	Read Fault Code	
G90(HI)	2018	General	SCC/AEB	Clear Fault Memory	
G90(HI)	2018	General	SCC/AEB	Read Data Stream	
G90(HI)	2018	General	SCC/AEB	Special Function	Radar Sensor Alignment(SCC/AEB)
G90(HI)	2018	General	SCC/AEB	Special Function	Variant Coding
G90(HI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
G90(HI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
G90(HI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
G90(HI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
G90(HI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
G90(HI)	2018	General	AC(Air Conditioning)	Version Information	
G90(HI)	2018	General	AC(Air Conditioning)	Read Fault Code	
G90(HI)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
G90(HI)	2018	General	AC(Air Conditioning)	Read Data Stream	
G90(HI)	2018	General	AC(Air Conditioning)	Actuation Test	
G90(HI)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
G90(HI)	2018	General	BCM(Body Control Module)	Version Information	
G90(HI)	2018	General	BCM(Body Control Module)	Read Fault Code	
G90(HI)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
G90(HI)	2018	General	BCM(Body Control Module)	Read Data Stream	
G90(HI)	2018	General	BCM(Body Control Module)	Actuation Test	
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	User Option
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	HUD Calibration
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	Current FOB Key Check
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	Neutralization Mode
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	SMK Status Information
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	ESCL Status Information
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	ESCL Open Status Check
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	Antenna Status Check
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	Smart Key Code Saving
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	TPMS TEST
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
G90(HI)	2018	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
G90(HI)	2018	General	Power Tailgate	Version Information	
G90(HI)	2018	General	Power Tailgate	Read Fault Code	
G90(HI)	2018	General	Power Tailgate	Clear Fault Memory	
G90(HI)	2018	General	Power Tailgate	Read Data Stream	
G90(HI)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
G90(HI)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
G90(HI)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
G90(HI)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
G90(HI)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
G90(HI)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
G90(HI)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
G90(HI)	2018	General	EPS(Electronic Power Steering)	Version Information	
G90(HI)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
G90(HI)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
G90(HI)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
G90(HI)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
G90(HI)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
G90(HI)	2018	General	Electronic Control Suspension	Version Information	
G90(HI)	2018	General	Electronic Control Suspension	Read Fault Code	
G90(HI)	2018	General	Electronic Control Suspension	Clear Fault Memory	
G90(HI)	2018	General	Electronic Control Suspension	Read Data Stream	
G90(HI)	2018	General	Driveshaft	Version Information	
G90(HI)	2018	General	Driveshaft	Read Fault Code	
G90(HI)	2018	General	Driveshaft	Clear Fault Memory	
G90(HI)	2018	General	Driveshaft	Read Data Stream	
G90(HI)	2018	General	Driveshaft	Actuation Test	

model	year	area	system	function	subfunction
G90(HI)	2018	General	Driveshaft	Special Function	Power Down Calibration
G90(HI)	2018	General	Driveshaft	Special Function	ECU Data Back-up&Writing
G90(HI)	2018	General	Driveshaft	Special Function	HW Characteristics
G90(HI)	2018	General	Driveshaft	Special Function	T\C Clutch Calibration
G90(HI)	2018	General	Driveshaft	Special Function	Variant Coding
G90(HI)	2018	General	Blind Spot Detection	Version Information	
G90(HI)	2018	General	Blind Spot Detection	Read Fault Code	
G90(HI)	2018	General	Blind Spot Detection	Clear Fault Memory	
G90(HI)	2018	General	Blind Spot Detection	Read Data Stream	
G90(HI)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
G90(HI)	2018	General	Blind Spot Detection	Special Function	BSD Variant Coding
G90(HI)	2018	General	Lane Keeping Assist System	Version Information	
G90(HI)	2018	General	Lane Keeping Assist System	Read Fault Code	
G90(HI)	2018	General	Lane Keeping Assist System	Clear Fault Memory	
G90(HI)	2018	General	Lane Keeping Assist System	Read Data Stream	
G90(HI)	2018	General	Lane Keeping Assist System	Special Function	SPC Calibration
G90(HI)	2018	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
G90(HI)	2018	General	Lane Keeping Assist System	Special Function	LDWS Variant Coding
G90(HI)	2018	General	Around View Monitor System	Version Information	
G90(HI)	2018	General	Around View Monitor System	Read Fault Code	
G90(HI)	2018	General	Around View Monitor System	Clear Fault Memory	
G90(HI)	2018	General	Around View Monitor System	Read Data Stream	
G90(HI)	2018	General	Around View Monitor System	Actuation Test	
G90(HI)	2018	General	Around View Monitor System	Special Function	SVM Calibration
G90(HI)	2018	General	Parking Guide System	Version Information	
G90(HI)	2018	General	Parking Guide System	Read Fault Code	
G90(HI)	2018	General	Parking Guide System	Clear Fault Memory	
G90(HI)	2018	General	Parking Guide System	Read Data Stream	
G90(HI)	2018	General	Pre-safe Seat Belt	Version Information	

model	year	area	system	function	subfunction
G90(HI)	2018	General	Pre-safe Seat Belt	Read Fault Code	
G90(HI)	2018	General	Pre-safe Seat Belt	Clear Fault Memory	
G90(HI)	2018	General	Pre-safe Seat Belt	Read Data Stream	
G90(HI)	2018	General	Pre-safe Seat Belt	Actuation Test	
G90(HI)	2018	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
G90(HI)	2018	General	Amplifier	Version Information	
G90(HI)	2018	General	Amplifier	Special Function	AMP Operation Test
G90(HI)	2018	General	Audio Video Navigation	Version Information	
G90(HI)	2018	General	Audio Video Navigation	Read Fault Code	
G90(HI)	2018	General	Audio Video Navigation	Clear Fault Memory	
G90(HI)	2018	General	Audio Video Navigation	Read Data Stream	
G90(HI)	2018	General	Audio Video Navigation	Special Function	Variant Coding
G90(HI)	2018	General	E-Shifter	Version Information	
G90(HI)	2018	General	E-Shifter	Read Fault Code	
G90(HI)	2018	General	E-Shifter	Clear Fault Memory	
G90(HI)	2018	General	E-Shifter	Read Data Stream	
G90(HI)	2018	General	E-Shifter	Actuation Test	
G90(HI)	2018	General	Telematics Unit	Version Information	
G90(HI)	2018	General	Telematics Unit	Read Fault Code	
G90(HI)	2018	General	Telematics Unit	Clear Fault Memory	
G90(HI)	2018	General	Central Gateway	Version Information	
G90(HI)	2018	General	Central Gateway	Read Fault Code	
G90(HI)	2018	General	Central Gateway	Clear Fault Memory	
G90(HI)	2018	General	Central Gateway	Read Data Stream	
G90(HI)	2018	General	Central Gateway	Special Function	Erase Network Configuration
G90(HI)	2018	General	Rear Armrest Switch	Version Information	
G90(HI)	2018	General	Rear Armrest Switch	Read Fault Code	
G90(HI)	2018	General	Rear Armrest Switch	Clear Fault Memory	
G90(HI)	2018	General	Rear Armrest Switch	Read Data Stream	

model	year	area	system	function	subfunction
G90(HI)	2018	General	Rear Armrest Switch	Actuation Test	
G90(HI)	2018	General	Rear Armrest Switch	Special Function	Seat Limit Position Setting
G90(HI)	2018	General	ECM(Engine Control Module)	Read FreezeData	
G90(HI)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
G90(HI)	2017	General	ECM(Engine Control Module)	Version Information	
G90(HI)	2017	General	ECM(Engine Control Module)	Read Fault Code	
G90(HI)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
G90(HI)	2017	General	ECM(Engine Control Module)	Read Data Stream	
G90(HI)	2017	General	ECM(Engine Control Module)	Read FreezeData	
G90(HI)	2017	General	ECM(Engine Control Module)	Actuation Test	
G90(HI)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
G90(HI)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
G90(HI)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
G90(HI)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
G90(HI)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
G90(HI)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
G90(HI)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
G90(HI)	2017	General	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
G90(HI)	2017	General	TCM(Transmission Control Module)	Version Information	
G90(HI)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
G90(HI)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
G90(HI)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
G90(HI)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
G90(HI)	2017	General	TCM(Transmission Control Module)	Actuation Test	
G90(HI)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
G90(HI)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
G90(HI)	2017	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
G90(HI)	2017	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
G90(HI)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
G90(HI)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
G90(HI)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
G90(HI)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
G90(HI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC/Only)
G90(HI)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
G90(HI)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
G90(HI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
G90(HI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
G90(HI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Roll Sensor Alignment(SCG/AFB)
G90(HI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
G90(HI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
G90(HI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
G90(HI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
G90(HI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
G90(HI)	2017	General	AC(Air Conditioning)	Version Information	
G90(HI)	2017	General	AC(Air Conditioning)	Read Fault Code	
G90(HI)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
G90(HI)	2017	General	AC(Air Conditioning)	Read Data Stream	
G90(HI)	2017	General	AC(Air Conditioning)	Actuation Test	
G90(HI)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
G90(HI)	2017	General	BCM(Body Control Module)	Version Information	
G90(HI)	2017	General	BCM(Body Control Module)	Read Fault Code	
G90(HI)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
G90(HI)	2017	General	BCM(Body Control Module)	Read Data Stream	
G90(HI)	2017	General	BCM(Body Control Module)	Actuation Test	
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting

model	year	area	system	function	subfunction
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	User Option
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	HUD Calibration
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	Current FOB Key Check
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	Neutralization Mode
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	SMK Status Information
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	ESCL Status Information
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	ESCL Open Status Check
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	Antenna Status Check
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	Smart Key Code Saving
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	TPMS TEST
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
G90(HI)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
G90(HI)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
G90(HI)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
G90(HI)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
G90(HI)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
G90(HI)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
G90(HI)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
G90(HI)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
G90(HI)	2017	General	EPS(Electronic Power Steering)	Version Information	
G90(HI)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
G90(HI)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
G90(HI)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
G90(HI)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
G90(HI)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
G90(HI)	2017	General	Electronic Control Suspension	Version Information	
G90(HI)	2017	General	Electronic Control Suspension	Read Fault Code	
G90(HI)	2017	General	Electronic Control Suspension	Clear Fault Memory	
G90(HI)	2017	General	Electronic Control Suspension	Read Data Stream	
G90(HI)	2017	General	Driveshaft	Version Information	
G90(HI)	2017	General	Driveshaft	Read Fault Code	
G90(HI)	2017	General	Driveshaft	Clear Fault Memory	
G90(HI)	2017	General	Driveshaft	Read Data Stream	
G90(HI)	2017	General	Driveshaft	Actuation Test	
G90(HI)	2017	General	Driveshaft	Special Function	Power Down Calibration
G90(HI)	2017	General	Driveshaft	Special Function	ECU Data Back-up&Writing
G90(HI)	2017	General	Driveshaft	Special Function	HW Characteristics
G90(HI)	2017	General	Driveshaft	Special Function	T\C Clutch Calibration
G90(HI)	2017	General	Driveshaft	Special Function	Variant Coding
G90(HI)	2017	General	Blind Spot Detection	Version Information	
G90(HI)	2017	General	Blind Spot Detection	Read Fault Code	
G90(HI)	2017	General	Blind Spot Detection	Clear Fault Memory	
G90(HI)	2017	General	Blind Spot Detection	Read Data Stream	
G90(HI)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
G90(HI)	2017	General	Blind Spot Detection	Special Function	BSD Variant Coding
G90(HI)	2017	General	Lane Keeping Assist System	Version Information	
G90(HI)	2017	General	Lane Keeping Assist System	Read Fault Code	
G90(HI)	2017	General	Lane Keeping Assist System	Clear Fault Memory	
G90(HI)	2017	General	Lane Keeping Assist System	Read Data Stream	
G90(HI)	2017	General	Lane Keeping Assist System	Special Function	SPC Calibration
G90(HI)	2017	General	Lane Keeping Assist System	Special Function	SPTAC Calibration

model	year	area	system	function	subfunction
G90(HI)	2017	General	Lane Keeping Assist System	Special Function	LDWS Variant Coding
G90(HI)	2017	General	Around View Monitor Systeming	Version Information	
G90(HI)	2017	General	Around View Monitor Systeming	Read Fault Code	
G90(HI)	2017	General	Around View Monitor Systeming	Clear Fault Memory	
G90(HI)	2017	General	Around View Monitor Systeming	Read Data Stream	
G90(HI)	2017	General	Around View Monitor Systeming	Actuation Test	
G90(HI)	2017	General	Around View Monitor Systeming	Special Function	SVM Calibration
G90(HI)	2017	General	PGS(Parking Guide System)	Version Information	
G90(HI)	2017	General	PGS(Parking Guide System)	Read Fault Code	
G90(HI)	2017	General	PGS(Parking Guide System)	Clear Fault Memory	
G90(HI)	2017	General	PGS(Parking Guide System)	Read Data Stream	
G90(HI)	2017	General	Pre-safe Seat Belt	Version Information	
G90(HI)	2017	General	Pre-safe Seat Belt	Read Fault Code	
G90(HI)	2017	General	Pre-safe Seat Belt	Clear Fault Memory	
G90(HI)	2017	General	Pre-safe Seat Belt	Read Data Stream	
G90(HI)	2017	General	Pre-safe Seat Belt	Actuation Test	
G90(HI)	2017	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
G90(HI)	2017	General	Amplifier	Version Information	
G90(HI)	2017	General	Amplifier	Special Function	AMP Operation Test
G90(HI)	2017	General	Audio Video Navigation	Version Information	
G90(HI)	2017	General	Audio Video Navigation	Read Fault Code	
G90(HI)	2017	General	Audio Video Navigation	Clear Fault Memory	
G90(HI)	2017	General	Audio Video Navigation	Read Data Stream	
G90(HI)	2017	General	Audio Video Navigation	Special Function	Variant Coding
G90(HI)	2017	General	E-Shifter	Version Information	
G90(HI)	2017	General	E-Shifter	Read Fault Code	
G90(HI)	2017	General	E-Shifter	Clear Fault Memory	
G90(HI)	2017	General	E-Shifter	Read Data Stream	
G90(HI)	2017	General	E-Shifter	Actuation Test	

model	year	area	system	function	subfunction
G90(HI)	2017	General	Telematics Unit	Version Information	
G90(HI)	2017	General	Telematics Unit	Read Fault Code	
G90(HI)	2017	General	Telematics Unit	Clear Fault Memory	
G90(HI)	2017	General	Central Gateway	Version Information	
G90(HI)	2017	General	Central Gateway	Read Fault Code	
G90(HI)	2017	General	Central Gateway	Clear Fault Memory	
G90(HI)	2017	General	Central Gateway	Read Data Stream	
G90(HI)	2017	General	Central Gateway	Special Function	Erase Network Configuration
G90(HI)	2017	General	Rear Armrest Switch	Version Information	
G90(HI)	2017	General	Rear Armrest Switch	Read Fault Code	
G90(HI)	2017	General	Rear Armrest Switch	Clear Fault Memory	
G90(HI)	2017	General	Rear Armrest Switch	Read Data Stream	
G90(HI)	2017	General	Rear Armrest Switch	Actuation Test	
G90(HI)	2017	General	Rear Armrest Switch	Special Function	Seat Limit Position Setting
GALLOPER-II(M1)-PDF	2003	General	ECM(Engine Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2003	General	ECM(Engine Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	2003	General	ECM(Engine Control Module)	Version Information	
GALLOPER-II(M1)-PDF	2003	General	ECM(Engine Control Module)	Read FreezeData	
GALLOPER-II(M1)-PDF	2003	General	ECM(Engine Control Module)	Actuation Test	
GALLOPER-II(M1)-PDF	2003	General	TCM(Transmission Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2003	General	TCM(Transmission Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
GALLOPER-II(M1)-PDF	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
GALLOPER-II(M1)-PDF	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
GALLOPER-II(M1)-PDF	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
GALLOPER-II(M1)-PDF	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
GALLOPER-II(M1)-PDF	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
GALLOPER-II(M1)-PDF	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2003	General	Immobilizer(Leaded)	Read Fault Code	
GALLOPER-II(M1)-PDF	2003	General	Immobilizer(Leaded)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2003	General	Immobilizer(Leaded)	Read Data Stream	
GALLOPER-II(M1)-PDF	2003	General	Immobilizer(Leaded)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	2003	General	Immobilizer(Leaded)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	2003	General	Immobilizer(Leaded)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	2003	General	Immobilizer(Leaded)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	2003	General	Immobilizer(Leaded)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	2003	General	IMM(Immobilizer)	Read Fault Code	
GALLOPER-II(M1)-PDF	2003	General	IMM(Immobilizer)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2003	General	IMM(Immobilizer)	Read Data Stream	
GALLOPER-II(M1)-PDF	2003	General	IMM(Immobilizer)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	2003	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	2003	General	IMM(Immobilizer)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	2003	General	IMM(Immobilizer)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	2003	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	2002	General	ECM(Engine Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2002	General	ECM(Engine Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	2002	General	ECM(Engine Control Module)	Version Information	
GALLOPER-II(M1)-PDF	2002	General	ECM(Engine Control Module)	Read FreezeData	
GALLOPER-II(M1)-PDF	2002	General	ECM(Engine Control Module)	Actuation Test	
GALLOPER-II(M1)-PDF	2002	General	TCM(Transmission Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2002	General	TCM(Transmission Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
GALLOPER-II(M1)-PDF	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
GALLOPER-II(M1)-PDF	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
GALLOPER-II(M1)-PDF	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
GALLOPER-II(M1)-PDF	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
GALLOPER-II(M1)-PDF	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
GALLOPER-II(M1)-PDF	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
GALLOPER-II(M1)-PDF	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2002	General	Immobilizer(Leaded)	Read Fault Code	
GALLOPER-II(M1)-PDF	2002	General	Immobilizer(Leaded)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2002	General	Immobilizer(Leaded)	Read Data Stream	
GALLOPER-II(M1)-PDF	2002	General	Immobilizer(Leaded)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	2002	General	Immobilizer(Leaded)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	2002	General	Immobilizer(Leaded)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	2002	General	Immobilizer(Leaded)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	2002	General	Immobilizer(Leaded)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	2002	General	IMM(Immobilizer)	Read Fault Code	
GALLOPER-II(M1)-PDF	2002	General	IMM(Immobilizer)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2002	General	IMM(Immobilizer)	Read Data Stream	
GALLOPER-II(M1)-PDF	2002	General	IMM(Immobilizer)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	2002	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	2002	General	IMM(Immobilizer)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	2002	General	IMM(Immobilizer)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	2002	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	2001	General	ECM(Engine Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2001	General	ECM(Engine Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	2001	General	ECM(Engine Control Module)	Version Information	
GALLOPER-II(M1)-PDF	2001	General	ECM(Engine Control Module)	Read FreezeData	
GALLOPER-II(M1)-PDF	2001	General	ECM(Engine Control Module)	Actuation Test	
GALLOPER-II(M1)-PDF	2001	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
GALLOPER-II(M1)-PDF	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2001	General	TCM(Transmission Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
GALLOPER-II(M1)-PDF	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
GALLOPER-II(M1)-PDF	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
GALLOPER-II(M1)-PDF	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
GALLOPER-II(M1)-PDF	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
GALLOPER-II(M1)-PDF	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
GALLOPER-II(M1)-PDF	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2001	General	Immobilizer(Leaded)	Read Fault Code	
GALLOPER-II(M1)-PDF	2001	General	Immobilizer(Leaded)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2001	General	Immobilizer(Leaded)	Read Data Stream	
GALLOPER-II(M1)-PDF	2001	General	Immobilizer(Leaded)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	2001	General	Immobilizer(Leaded)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	2001	General	Immobilizer(Leaded)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	2001	General	Immobilizer(Leaded)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	2001	General	Immobilizer(Leaded)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	2001	General	IMM(Immobilizer)	Read Fault Code	
GALLOPER-II(M1)-PDF	2001	General	IMM(Immobilizer)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2001	General	IMM(Immobilizer)	Read Data Stream	
GALLOPER-II(M1)-PDF	2001	General	IMM(Immobilizer)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	2001	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	2001	General	IMM(Immobilizer)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	2001	General	IMM(Immobilizer)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	2001	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	2000	General	ECM(Engine Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2000	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
GALLOPER-II(M1)-PDF	2000	General	ECM(Engine Control Module)	Version Information	
GALLOPER-II(M1)-PDF	2000	General	ECM(Engine Control Module)	Read FreezeData	
GALLOPER-II(M1)-PDF	2000	General	ECM(Engine Control Module)	Actuation Test	
GALLOPER-II(M1)-PDF	2000	General	TCM(Transmission Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2000	General	TCM(Transmission Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	2000	General	ABS(Anti-lock Braking System)	Version Information	
GALLOPER-II(M1)-PDF	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
GALLOPER-II(M1)-PDF	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
GALLOPER-II(M1)-PDF	2000	General	ABS(Anti-lock Braking System)	Actuation Test	
GALLOPER-II(M1)-PDF	2000	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
GALLOPER-II(M1)-PDF	2000	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
GALLOPER-II(M1)-PDF	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
GALLOPER-II(M1)-PDF	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2000	General	Immobilizer(Leaded)	Read Fault Code	
GALLOPER-II(M1)-PDF	2000	General	Immobilizer(Leaded)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2000	General	Immobilizer(Leaded)	Read Data Stream	
GALLOPER-II(M1)-PDF	2000	General	Immobilizer(Leaded)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	2000	General	Immobilizer(Leaded)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	2000	General	Immobilizer(Leaded)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	2000	General	Immobilizer(Leaded)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	2000	General	Immobilizer(Leaded)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	2000	General	IMM(Immobilizer)	Read Fault Code	
GALLOPER-II(M1)-PDF	2000	General	IMM(Immobilizer)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	2000	General	IMM(Immobilizer)	Read Data Stream	
GALLOPER-II(M1)-PDF	2000	General	IMM(Immobilizer)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	2000	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	2000	General	IMM(Immobilizer)	Special Function	Master Key Delete

model	year	area	system	function	subfunction
GALLOPER-II(M1)-PDF	2000	General	IMM(Immobilizer)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	2000	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	1999	General	ECM(Engine Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	1999	General	ECM(Engine Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1999	General	ECM(Engine Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	1999	General	ECM(Engine Control Module)	Version Information	
GALLOPER-II(M1)-PDF	1999	General	ECM(Engine Control Module)	Read FreezeData	
GALLOPER-II(M1)-PDF	1999	General	ECM(Engine Control Module)	Actuation Test	
GALLOPER-II(M1)-PDF	1999	General	TCM(Transmission Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	1999	General	TCM(Transmission Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1999	General	TCM(Transmission Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	1999	General	ABS(Anti-lock Braking System)	Version Information	
GALLOPER-II(M1)-PDF	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	
GALLOPER-II(M1)-PDF	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
GALLOPER-II(M1)-PDF	1999	General	ABS(Anti-lock Braking System)	Actuation Test	
GALLOPER-II(M1)-PDF	1999	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
GALLOPER-II(M1)-PDF	1999	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
GALLOPER-II(M1)-PDF	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
GALLOPER-II(M1)-PDF	1999	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1999	General	Immobilizer(Leaded)	Read Fault Code	
GALLOPER-II(M1)-PDF	1999	General	Immobilizer(Leaded)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1999	General	Immobilizer(Leaded)	Read Data Stream	
GALLOPER-II(M1)-PDF	1999	General	Immobilizer(Leaded)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	1999	General	Immobilizer(Leaded)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	1999	General	Immobilizer(Leaded)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	1999	General	Immobilizer(Leaded)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	1999	General	Immobilizer(Leaded)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	1999	General	IMM(Immobilizer)	Read Fault Code	

model	year	area	system	function	subfunction
GALLOPER-II(M1)-PDF	1999	General	IMM(Immobilizer)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1999	General	IMM(Immobilizer)	Read Data Stream	
GALLOPER-II(M1)-PDF	1999	General	IMM(Immobilizer)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	1999	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	1999	General	IMM(Immobilizer)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	1999	General	IMM(Immobilizer)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	1999	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	1998	General	ECM(Engine Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	1998	General	ECM(Engine Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1998	General	ECM(Engine Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	1998	General	ECM(Engine Control Module)	Version Information	
GALLOPER-II(M1)-PDF	1998	General	ECM(Engine Control Module)	Read FreezeData	
GALLOPER-II(M1)-PDF	1998	General	ECM(Engine Control Module)	Actuation Test	
GALLOPER-II(M1)-PDF	1998	General	TCM(Transmission Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	1998	General	TCM(Transmission Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1998	General	TCM(Transmission Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	1998	General	ABS(Anti-lock Braking System)	Version Information	
GALLOPER-II(M1)-PDF	1998	General	ABS(Anti-lock Braking System)	Read Fault Code	
GALLOPER-II(M1)-PDF	1998	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1998	General	ABS(Anti-lock Braking System)	Read Data Stream	
GALLOPER-II(M1)-PDF	1998	General	ABS(Anti-lock Braking System)	Actuation Test	
GALLOPER-II(M1)-PDF	1998	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
GALLOPER-II(M1)-PDF	1998	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
GALLOPER-II(M1)-PDF	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
GALLOPER-II(M1)-PDF	1998	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1998	General	Immobilizer(Leaded)	Read Fault Code	
GALLOPER-II(M1)-PDF	1998	General	Immobilizer(Leaded)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1998	General	Immobilizer(Leaded)	Read Data Stream	
GALLOPER-II(M1)-PDF	1998	General	Immobilizer(Leaded)	Special Function	Password Record/Change

model	year	area	system	function	subfunction
GALLOPER-II(M1)-PDF	1998	General	Immobilizer(Leaded)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	1998	General	Immobilizer(Leaded)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	1998	General	Immobilizer(Leaded)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	1998	General	Immobilizer(Leaded)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	1998	General	IMM(Immobilizer)	Read Fault Code	
GALLOPER-II(M1)-PDF	1998	General	IMM(Immobilizer)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1998	General	IMM(Immobilizer)	Read Data Stream	
GALLOPER-II(M1)-PDF	1998	General	IMM(Immobilizer)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	1998	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	1998	General	IMM(Immobilizer)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	1998	General	IMM(Immobilizer)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	1998	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	1997	General	ECM(Engine Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	1997	General	ECM(Engine Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1997	General	ECM(Engine Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	1997	General	ECM(Engine Control Module)	Version Information	
GALLOPER-II(M1)-PDF	1997	General	ECM(Engine Control Module)	Read FreezeData	
GALLOPER-II(M1)-PDF	1997	General	ECM(Engine Control Module)	Actuation Test	
GALLOPER-II(M1)-PDF	1997	General	TCM(Transmission Control Module)	Read Fault Code	
GALLOPER-II(M1)-PDF	1997	General	TCM(Transmission Control Module)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1997	General	TCM(Transmission Control Module)	Read Data Stream	
GALLOPER-II(M1)-PDF	1997	General	ABS(Anti-lock Braking System)	Version Information	
GALLOPER-II(M1)-PDF	1997	General	ABS(Anti-lock Braking System)	Read Fault Code	
GALLOPER-II(M1)-PDF	1997	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1997	General	ABS(Anti-lock Braking System)	Read Data Stream	
GALLOPER-II(M1)-PDF	1997	General	ABS(Anti-lock Braking System)	Actuation Test	
GALLOPER-II(M1)-PDF	1997	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
GALLOPER-II(M1)-PDF	1997	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
GALLOPER-II(M1)-PDF	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
GALLOPER-II(M1)-PDF	1997	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1997	General	Immobilizer(Leaded)	Read Fault Code	
GALLOPER-II(M1)-PDF	1997	General	Immobilizer(Leaded)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1997	General	Immobilizer(Leaded)	Read Data Stream	
GALLOPER-II(M1)-PDF	1997	General	Immobilizer(Leaded)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	1997	General	Immobilizer(Leaded)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	1997	General	Immobilizer(Leaded)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	1997	General	Immobilizer(Leaded)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	1997	General	Immobilizer(Leaded)	Special Function	IMMOBILIZER RESET
GALLOPER-II(M1)-PDF	1997	General	IMM(Immobilizer)	Read Fault Code	
GALLOPER-II(M1)-PDF	1997	General	IMM(Immobilizer)	Clear Fault Memory	
GALLOPER-II(M1)-PDF	1997	General	IMM(Immobilizer)	Read Data Stream	
GALLOPER-II(M1)-PDF	1997	General	IMM(Immobilizer)	Special Function	Password Record/Change
GALLOPER-II(M1)-PDF	1997	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
GALLOPER-II(M1)-PDF	1997	General	IMM(Immobilizer)	Special Function	Master Key Delete
GALLOPER-II(M1)-PDF	1997	General	IMM(Immobilizer)	Special Function	Neutral Mode
GALLOPER-II(M1)-PDF	1997	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2017	General	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2017	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU
Genesis Coupe(BK)	2017	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Input(Transmission Exchange)
Genesis Coupe(BK)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis Coupe(BK)	2017	General	Electronic Stability Program	Version Information	
Genesis Coupe(BK)	2017	General	Electronic Stability Program	Read Fault Code	
Genesis Coupe(BK)	2017	General	Electronic Stability Program	Clear Fault Memory	
Genesis Coupe(BK)	2017	General	Electronic Stability Program	Read Data Stream	
Genesis Coupe(BK)	2017	General	Electronic Stability Program	Actuation Test	
Genesis Coupe(BK)	2017	General	Electronic Stability Program	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis Coupe(BK)	2017	General	Electronic Stability Program	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2017	General	Electronic Stability Program	Special Function	SAS Calibration(CAN-ESP Only)
Genesis Coupe(BK)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis Coupe(BK)	2017	General	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2017	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2017	General	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2017	General	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis Coupe(BK)	2017	General	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2017	General	BCM(Body Control Module)	Read Fault Code	
Genesis Coupe(BK)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2017	General	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2017	General	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2017	General	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Genesis Coupe(BK)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Genesis Coupe(BK)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Genesis Coupe(BK)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Genesis Coupe(BK)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Genesis Coupe(BK)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Sensor Initialization
Genesis Coupe(BK)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2017	General	Smart Key Unit	Version Information	
Genesis Coupe(BK)	2017	General	Smart Key Unit	Read Fault Code	
Genesis Coupe(BK)	2017	General	Smart Key Unit	Clear Fault Memory	
Genesis Coupe(BK)	2017	General	Smart Key Unit	Read Data Stream	
Genesis Coupe(BK)	2017	General	Smart Key Unit	Actuation Test	
Genesis Coupe(BK)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Genesis Coupe(BK)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Genesis Coupe(BK)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Genesis Coupe(BK)	2017	General	Smart Key Unit	Special Function	PDM Status Information
Genesis Coupe(BK)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Genesis Coupe(BK)	2017	General	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis Coupe(BK)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2017	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Genesis Coupe(BK)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK)	2017	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2016	General	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2016	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU
Genesis Coupe(BK)	2016	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Input(Transmission
Genesis Coupe(BK)	2016	General	TCM(Transmission Control Module)	Special Function	Exchange) AT Adaptation Mode
Genesis Coupe(BK)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Genesis Coupe(BK)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Genesis Coupe(BK)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Genesis Coupe(BK)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Genesis Coupe(BK)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Genesis Coupe(BK)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis Coupe(BK)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP
Genesis Coupe(BK)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis Coupe(BK)	2016	General	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2016	General	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2016	General	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2016	General	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2016	General	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Turn)
Genesis Coupe(BK)	2016	General	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2016	General	BCM(Body Control Module)	Read Fault Code	
Genesis Coupe(BK)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2016	General	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2016	General	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2016	General	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2016	General	Auto Headlamp Leveling System	Version Information	
Genesis Coupe(BK)	2016	General	Auto Headlamp Leveling System	Read Fault Code	
Genesis Coupe(BK)	2016	General	Auto Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK)	2016	General	Auto Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK)	2016	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK)	2016	General	Auto Headlamp Leveling System	Special Function	Sensor Initialization
Genesis Coupe(BK)	2016	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2016	General	Smart Key Unit	Read Data Stream	
Genesis Coupe(BK)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2016	General	Smart Key Unit	Version Information	
Genesis Coupe(BK)	2016	General	Smart Key Unit	Read Fault Code	
Genesis Coupe(BK)	2016	General	Smart Key Unit	Clear Fault Memory	
Genesis Coupe(BK)	2016	General	Smart Key Unit	Actuation Test	
Genesis Coupe(BK)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Genesis Coupe(BK)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Genesis Coupe(BK)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Genesis Coupe(BK)	2016	General	Smart Key Unit	Special Function	PDM Status Information
Genesis Coupe(BK)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2016	General	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2016	General	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2016	General	IMM(Immobilizer)	Special Function	Password
Genesis Coupe(BK)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Genesis Coupe(BK)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Genesis Coupe(BK)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2016	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2015	General	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2015	General	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2015	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU
Genesis Coupe(BK)	2015	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Input(Transmission Exchange)
Genesis Coupe(BK)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis Coupe(BK)	2015	General	ESP(Electronic Stability Program)	Version Information	
Genesis Coupe(BK)	2015	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis Coupe(BK)	2015	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis Coupe(BK)	2015	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis Coupe(BK)	2015	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis Coupe(BK)	2015	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis Coupe(BK)	2015	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2015	General	ESP(Electronic Stability Program)	Special Function	SAS Calibration(CAN-ESP Only)
Genesis Coupe(BK)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis Coupe(BK)	2015	General	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2015	General	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2015	General	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2015	General	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis Coupe(BK)	2015	General	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2015	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2015	General	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2015	General	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2015	General	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2015	General	Auto Headlamp Leveling System	Version Information	
Genesis Coupe(BK)	2015	General	Auto Headlamp Leveling System	Read Fault Code	
Genesis Coupe(BK)	2015	General	Auto Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK)	2015	General	Auto Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK)	2015	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK)	2015	General	Auto Headlamp Leveling System	Special Function	Sensor Initialization
Genesis Coupe(BK)	2015	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2015	General	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2015	General	IMM(Immobilizer)	Special Function	Password
Genesis Coupe(BK)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Genesis Coupe(BK)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2015	General	Smart Key	Version Information	
Genesis Coupe(BK)	2015	General	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2015	General	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2015	General	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2015	General	Smart Key	Actuation Test	
Genesis Coupe(BK)	2015	General	Smart Key	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2015	General	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2015	General	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2015	General	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2015	General	Smart Key	Special Function	ESCL Status Information
Genesis Coupe(BK)	2015	General	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2015	General	Smart Key	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2015	General	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2015	General	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2015	General	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2014	General	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2014	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU)
Genesis Coupe(BK)	2014	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Input(Transmission Exchange)
Genesis Coupe(BK)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis Coupe(BK)	2014	General	ESP(Electronic Stability Program)	Version Information	
Genesis Coupe(BK)	2014	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis Coupe(BK)	2014	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis Coupe(BK)	2014	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis Coupe(BK)	2014	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis Coupe(BK)	2014	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis Coupe(BK)	2014	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2014	General	ESP(Electronic Stability Program)	Special Function	SAS Calibration(CAN-ESP Only)
Genesis Coupe(BK)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis Coupe(BK)	2014	General	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2014	General	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2014	General	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2014	General	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis Coupe(BK)	2014	General	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2014	General	BCM(Body Control Module)	Read Fault Code	
Genesis Coupe(BK)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2014	General	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2014	General	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2014	General	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2014	General	Auto Headlamp Leveling System	Version Information	
Genesis Coupe(BK)	2014	General	Auto Headlamp Leveling System	Read Fault Code	
Genesis Coupe(BK)	2014	General	Auto Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK)	2014	General	Auto Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK)	2014	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK)	2014	General	Auto Headlamp Leveling System	Special Function	Sensor Initialization
Genesis Coupe(BK)	2014	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2014	General	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2014	General	IMM(Immobilizer)	Special Function	Password
Genesis Coupe(BK)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Genesis Coupe(BK)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2014	General	Smart Key	Version Information	
Genesis Coupe(BK)	2014	General	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2014	General	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2014	General	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2014	General	Smart Key	Actuation Test	
Genesis Coupe(BK)	2014	General	Smart Key	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2014	General	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2014	General	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2014	General	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2014	General	Smart Key	Special Function	ESCL Status Information
Genesis Coupe(BK)	2014	General	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2014	General	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2014	General	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2014	General	Smart Key	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2014	General	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2013	General	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2013	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Exchange)

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2013	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Genesis Coupe(BK)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis Coupe(BK)	2013	General	ESP(Electronic Stability Program)	Version Information	
Genesis Coupe(BK)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis Coupe(BK)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis Coupe(BK)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis Coupe(BK)	2013	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis Coupe(BK)	2013	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2013	General	ESP(Electronic Stability Program)	Special Function	SAS Calibration(CAN-ESP Only)
Genesis Coupe(BK)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis Coupe(BK)	2013	General	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2013	General	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2013	General	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2013	General	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis Coupe(BK)	2013	General	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2013	General	BCM(Body Control Module)	Read Fault Code	
Genesis Coupe(BK)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2013	General	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2013	General	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2013	General	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2013	General	Auto Headlamp Leveling System	Version Information	
Genesis Coupe(BK)	2013	General	Auto Headlamp Leveling System	Read Fault Code	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2013	General	Auto Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK)	2013	General	Auto Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK)	2013	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK)	2013	General	Auto Headlamp Leveling System	Special Function	Sensor Initialization
Genesis Coupe(BK)	2013	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2013	General	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis Coupe(BK)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2013	General	Smart Key	Version Information	
Genesis Coupe(BK)	2013	General	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2013	General	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2013	General	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2013	General	Smart Key	Actuation Test	
Genesis Coupe(BK)	2013	General	Smart Key	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2013	General	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2013	General	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2013	General	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2013	General	Smart Key	Special Function	ESCL Status Information
Genesis Coupe(BK)	2013	General	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2013	General	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2013	General	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2013	General	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2013	General	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2012	General	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2012	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU
Genesis Coupe(BK)	2012	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Genesis Coupe(BK)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis Coupe(BK)	2012	General	ESP(Electronic Stability Program)	Version Information	
Genesis Coupe(BK)	2012	General	ESP(Electronic Stability Program)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2012	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis Coupe(BK)	2012	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis Coupe(BK)	2012	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis Coupe(BK)	2012	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2012	General	ESP(Electronic Stability Program)	Special Function	SAS Calibration(CAN-ESP Only)
Genesis Coupe(BK)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis Coupe(BK)	2012	General	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2012	General	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2012	General	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2012	General	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2012	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Genesis Coupe(BK)	2012	General	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2012	General	BCM(Body Control Module)	Read Fault Code	
Genesis Coupe(BK)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2012	General	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2012	General	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2012	General	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2012	General	Auto Headlamp Leveling System	Version Information	
Genesis Coupe(BK)	2012	General	Auto Headlamp Leveling System	Read Fault Code	
Genesis Coupe(BK)	2012	General	Auto Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK)	2012	General	Auto Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK)	2012	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK)	2012	General	Auto Headlamp Leveling System	Special Function	Sensor Initialization
Genesis Coupe(BK)	2012	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2012	General	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2012	General	IMM(Immobilizer)	Special Function	Password
Genesis Coupe(BK)	2012	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Genesis Coupe(BK)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2012	General	Smart Key	Version Information	
Genesis Coupe(BK)	2012	General	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2012	General	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2012	General	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2012	General	Smart Key	Actuation Test	
Genesis Coupe(BK)	2012	General	Smart Key	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2012	General	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2012	General	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2012	General	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2012	General	Smart Key	Special Function	ESCL Status Information
Genesis Coupe(BK)	2012	General	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2012	General	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2012	General	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2012	General	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2012	General	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK)	2012	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Genesis Coupe(BK)	2011	General	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2011	General	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Genesis Coupe(BK)	2011	General	ABS(Anti-lock Braking System)	Version Information	
Genesis Coupe(BK)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Genesis Coupe(BK)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Genesis Coupe(BK)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Genesis Coupe(BK)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Genesis Coupe(BK)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2011	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Data)
Genesis Coupe(BK)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis Coupe(BK)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2011	General	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2011	General	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2011	General	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2011	General	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2011	General	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2011	General	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2011	General	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2011	General	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2011	General	Auto Headlamp Leveling	Version Information	
Genesis Coupe(BK)	2011	General	Auto Headlamp Leveling	Read Fault Code	
Genesis Coupe(BK)	2011	General	Auto Headlamp Leveling	Clear Fault Memory	
Genesis Coupe(BK)	2011	General	Auto Headlamp Leveling	Read Data Stream	
Genesis Coupe(BK)	2011	General	Auto Headlamp Leveling	Special Function	Level Initialization
Genesis Coupe(BK)	2011	General	Auto Headlamp Leveling	Special Function	Sensor Initialization
Genesis Coupe(BK)	2011	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2011	General	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Genesis Coupe(BK)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2011	General	Smart Key	Version Information	
Genesis Coupe(BK)	2011	General	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2011	General	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2011	General	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2011	General	Smart Key	Actuation Test	
Genesis Coupe(BK)	2011	General	Smart Key	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2011	General	Smart Key	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2011	General	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2011	General	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2011	General	Smart Key	Special Function	ESCL Status Information
Genesis Coupe(BK)	2011	General	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2011	General	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2011	General	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2011	General	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2011	General	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2011	General	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK)	2011	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2011	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Genesis Coupe(BK)	2010	General	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2010	General	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Genesis Coupe(BK)	2010	General	ESP(Electronic Stability Program)	Version Information	
Genesis Coupe(BK)	2010	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis Coupe(BK)	2010	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis Coupe(BK)	2010	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis Coupe(BK)	2010	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis Coupe(BK)	2010	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis Coupe(BK)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis Coupe(BK)	2010	General	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2010	General	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2010	General	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2010	General	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2010	General	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2010	General	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2010	General	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2010	General	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2010	General	Auto Headlamp Leveling	Version Information	
Genesis Coupe(BK)	2010	General	Auto Headlamp Leveling	Read Fault Code	
Genesis Coupe(BK)	2010	General	Auto Headlamp Leveling	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2010	General	Auto Headlamp Leveling	Read Data Stream	
Genesis Coupe(BK)	2010	General	Auto Headlamp Leveling	Special Function	Level Initialization
Genesis Coupe(BK)	2010	General	Auto Headlamp Leveling	Special Function	Sensor Initialization
Genesis Coupe(BK)	2010	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2010	General	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis Coupe(BK)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2010	General	Smart Key	Version Information	
Genesis Coupe(BK)	2010	General	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2010	General	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2010	General	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2010	General	Smart Key	Actuation Test	
Genesis Coupe(BK)	2010	General	Smart Key	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2010	General	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2010	General	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2010	General	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2010	General	Smart Key	Special Function	ESCL Status Information
Genesis Coupe(BK)	2010	General	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2010	General	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2010	General	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2010	General	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2010	General	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2010	General	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK)	2010	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2010	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Genesis Coupe(BK)	2009	General	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2009	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2009	General	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2009	General	TCM(Transmission Control Module)	Special Function	CLLAR CAN Learnable Status
Genesis Coupe(BK)	2009	General	ESP(Electronic Stability Program)	Version Information	
Genesis Coupe(BK)	2009	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis Coupe(BK)	2009	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis Coupe(BK)	2009	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis Coupe(BK)	2009	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis Coupe(BK)	2009	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis Coupe(BK)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis Coupe(BK)	2009	General	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2009	General	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2009	General	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2009	General	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2009	General	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2009	General	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2009	General	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2009	General	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2009	General	Auto Headlamp Leveling	Version Information	
Genesis Coupe(BK)	2009	General	Auto Headlamp Leveling	Read Fault Code	
Genesis Coupe(BK)	2009	General	Auto Headlamp Leveling	Clear Fault Memory	
Genesis Coupe(BK)	2009	General	Auto Headlamp Leveling	Read Data Stream	
Genesis Coupe(BK)	2009	General	Auto Headlamp Leveling	Special Function	Level Initialization
Genesis Coupe(BK)	2009	General	Auto Headlamp Leveling	Special Function	Sensor Initialization
Genesis Coupe(BK)	2009	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2009	General	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2009	General	IMM(Immobilizer)	Special Function	Password
Genesis Coupe(BK)	2009	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Genesis Coupe(BK)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2009	General	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2009	General	Smart Key	Version Information	
Genesis Coupe(BK)	2009	General	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2009	General	Smart Key	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2009	General	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2009	General	Smart Key	Actuation Test	
Genesis Coupe(BK)	2009	General	Smart Key	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2009	General	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2009	General	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2009	General	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2009	General	Smart Key	Special Function	ESCL Status Information
Genesis Coupe(BK)	2009	General	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2009	General	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2009	General	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2009	General	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2009	General	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2009	General	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Genesis Coupe(BK)	2009	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2009	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK US)-U.S.	2013	General	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK US)-U.S.	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK US)-U.S.	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK US)-U.S.	2013	General	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Genesis Coupe(BK US)-U.S.	2013	General	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK US)-U.S.	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK US)-U.S.	2013	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU
Genesis Coupe(BK US)-U.S.	2013	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Genesis Coupe(BK US)-U.S.	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis Coupe(BK US)-U.S.	2013	General	Electronic Stability Control	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	Electronic Stability Control	Read Fault Code	
Genesis Coupe(BK US)-U.S.	2013	General	Electronic Stability Control	Clear Fault Memory	
Genesis Coupe(BK US)-U.S.	2013	General	Electronic Stability Control	Read Data Stream	
Genesis Coupe(BK US)-U.S.	2013	General	Electronic Stability Control	Actuation Test	
Genesis Coupe(BK US)-U.S.	2013	General	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK US)-U.S.	2013	General	Electronic Stability Control	Special Function	SAS Calibration(CAN-ESP Only)
Genesis Coupe(BK US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis Coupe(BK US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis Coupe(BK US)-U.S.	2013	General	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK US)-U.S.	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK US)-U.S.	2013	General	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK US)-U.S.	2013	General	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK US)-U.S.	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecv Type)
Genesis Coupe(BK US)-U.S.	2013	General	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	BCM(Body Control Module)	Read Fault Code	
Genesis Coupe(BK US)-U.S.	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis Coupe(BK US)-U.S.	2013	General	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK US)-U.S.	2013	General	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Genesis Coupe(BK US)-U.S.	2013	General	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK US)-U.S.	2013	General	Automatic Headlamp Leveling System	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	Automatic Headlamp Leveling System	Read Fault Code	
Genesis Coupe(BK US)-U.S.	2013	General	Automatic Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK US)-U.S.	2013	General	Automatic Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK US)-U.S.	2013	General	Automatic Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK US)-U.S.	2013	General	Automatic Headlamp Leveling System	Special Function	Sensor Initialization
Genesis Coupe(BK US)-U.S.	2013	General	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis Coupe(BK US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis Coupe(BK US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis Coupe(BK US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis Coupe(BK US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis Coupe(BK US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
Genesis Coupe(BK US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis Coupe(BK US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis Coupe(BK US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis Coupe(BK US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis Coupe(BK US)-U.S.	2013	General	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis Coupe(BK US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Read Fault Code	
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Clear Fault Memory	
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Read Data Stream	

model	year	area	system	function	subfunction
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Actuation Test	
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Special Function	TP Status Information
Genesis Coupe(BK US)-U.S.	2013	General	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK US)-U.S.	2013	General	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK US)-U.S.	2013	General	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK US)-U.S.	2013	General	Cluster Module	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	Cluster Module	Read Data Stream	
Genesis Coupe(BK US)-U.S.	2013	General	Cluster Module	Actuation Test	

model	year	area	system	function	subfunction
Genesis Coupe(BK US)-U.S.	2013	General	Smart Junction Block	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	Smart Junction Block	Read Fault Code	
Genesis Coupe(BK US)-U.S.	2013	General	Smart Junction Block	Clear Fault Memory	
Genesis Coupe(BK US)-U.S.	2013	General	Smart Junction Block	Read Data Stream	
Genesis Coupe(BK US)-U.S.	2013	General	Smart Junction Block	Actuation Test	
Genesis Coupe(BK US)-U.S.	2013	General	Telematics Unit	Version Information	
Genesis Coupe(BK US)-U.S.	2013	General	Telematics Unit	Read Fault Code	
Genesis Coupe(BK US)-U.S.	2013	General	Telematics Unit	Clear Fault Memory	
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis(BH)	2014	General	ECM(Engine Control Module)	Version Information	
Genesis(BH)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Genesis(BH)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH)	2014	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Genesis(BH)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(BH)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(BH)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(BH)	2014	General	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2014	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU
Genesis(BH)	2014	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Input(Transmission Exchange)
Genesis(BH)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Version Information	
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Read FreezeData	
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Special Function	Long G Sensor Calibration(Only FDD)
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Special Function	Pressure Sensor Calibration

model	year	area	system	function	subfunction
Genesis(BH)	2014	General	ESP(Electronic Stability Program)	Special Function	Valve Flushing
Genesis(BH)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(BH)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis(BH)	2014	General	AC(Air Conditioning)	Version Information	
Genesis(BH)	2014	General	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2014	General	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2014	General	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2014	General	BCM(Body Control Module)	Version Information	
Genesis(BH)	2014	General	BCM(Body Control Module)	Read Fault Code	
Genesis(BH)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis(BH)	2014	General	BCM(Body Control Module)	Read Data Stream	
Genesis(BH)	2014	General	BCM(Body Control Module)	Actuation Test	
Genesis(BH)	2014	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Genesis(BH)	2014	General	BCM(Body Control Module)	Special Function	ESCL Status Information
Genesis(BH)	2014	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
Genesis(BH)	2014	General	BCM(Body Control Module)	Special Function	IPM Status Information
Genesis(BH)	2014	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Genesis(BH)	2014	General	BCM(Body Control Module)	Special Function	PDM Status Information
Genesis(BH)	2014	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Genesis(BH)	2014	General	BCM(Body Control Module)	Special Function	ESC Open Status Information
Genesis(BH)	2014	General	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2014	General	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH)	2014	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH)	2014	General	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2014	General	EPB(Electrical Parking Brake)	Actuation Test	

model	year	area	system	function	subfunction
Genesis(BH)	2014	General	EPS(Electronic Power Steering)	Version Information	
Genesis(BH)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(BH)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Genesis(BH)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Genesis(BH)	2014	General	EPS(Electronic Power Steering)	Actuation Test	
Genesis(BH)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(BH)	2014	General	Head Lamp	Version Information	
Genesis(BH)	2014	General	Head Lamp	Read Fault Code	
Genesis(BH)	2014	General	Head Lamp	Clear Fault Memory	
Genesis(BH)	2014	General	Head Lamp	Read Data Stream	
Genesis(BH)	2014	General	Head Lamp	Actuation Test	
Genesis(BH)	2014	General	Head Lamp	Special Function	Calibration
Genesis(BH)	2014	General	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2014	General	Head Lamp	Special Function	AFLS Aming Mode
Genesis(BH)	2014	General	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2014	General	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(BH)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2014	General	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Genesis(BH)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2014	General	Smart Key Code Saving	Version Information	
Genesis(BH)	2014	General	Smart Key Code Saving	Read Fault Code	
Genesis(BH)	2014	General	Smart Key Code Saving	Clear Fault Memory	
Genesis(BH)	2014	General	Smart Key Code Saving	Read Data Stream	
Genesis(BH)	2014	General	Smart Key Code Saving	Actuation Test	
Genesis(BH)	2014	General	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH)	2014	General	Smart Key Code Saving	Special Function	Neutralization Mode
Genesis(BH)	2014	General	Smart Key Code Saving	Special Function	SMK Status Information
Genesis(BH)	2014	General	Smart Key Code Saving	Special Function	ESCL Status Information
Genesis(BH)	2014	General	Smart Key Code Saving	Special Function	FOB Key Status Information
Genesis(BH)	2014	General	Smart Key Code Saving	Special Function	Current FOB Key Check
Genesis(BH)	2014	General	Smart Key Code Saving	Special Function	Serial Communication Line Check
Genesis(BH)	2014	General	Smart Key Code Saving	Special Function	Antenna Status Check
Genesis(BH)	2014	General	Smart Key Code Saving	Special Function	ESCL Open Status Check
Genesis(BH)	2014	General	CCS(Cruise Control System)	Version Information	
Genesis(BH)	2014	General	CCS(Cruise Control System)	Read Fault Code	
Genesis(BH)	2014	General	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH)	2014	General	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH)	2014	General	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH)	2014	General	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Genesis(BH)	2014	General	DIS	Version Information	
Genesis(BH)	2014	General	DIS	Read Fault Code	
Genesis(BH)	2014	General	DIS	Clear Fault Memory	
Genesis(BH)	2014	General	DIS	Read Data Stream	
Genesis(BH)	2014	General	DIS	Actuation Test	

model	year	area	system	function	subfunction
Genesis(BH)	2014	General	DIS	Special Function	ECU Serial Number
Genesis(BH)	2014	General	DIS	Special Function	Get All S/W Version
Genesis(BH)	2014	General	DIS	Special Function	Update From CD
Genesis(BH)	2014	General	DIS	Special Function	Ring Break
Genesis(BH)	2014	General	DIS	Special Function	DVD-Request when slot is Empty
Genesis(BH)	2014	General	DIS	Special Function	Wake Up Line
Genesis(BH)	2014	General	DIS	Special Function	Xdb Test
Genesis(BH)	2014	General	DIS	Special Function	Variant Coding
Genesis(BH)	2014	General	Intelligent Accel Pedal	Version Information	
Genesis(BH)	2014	General	Intelligent Accel Pedal	Read Fault Code	
Genesis(BH)	2014	General	Intelligent Accel Pedal	Clear Fault Memory	
Genesis(BH)	2014	General	Intelligent Accel Pedal	Read Data Stream	
Genesis(BH)	2014	General	Intelligent Accel Pedal	Actuation Test	
Genesis(BH)	2014	General	Lane Departure Warning System	Version Information	
Genesis(BH)	2014	General	Lane Departure Warning System	Read Fault Code	
Genesis(BH)	2014	General	Lane Departure Warning System	Clear Fault Memory	
Genesis(BH)	2014	General	Lane Departure Warning System	Read Data Stream	
Genesis(BH)	2014	General	Lane Departure Warning System	Special Function	LDWS Region Code
Genesis(BH)	2014	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Genesis(BH)	2014	General	PSB	Version Information	
Genesis(BH)	2014	General	PSB	Read Fault Code	
Genesis(BH)	2014	General	PSB	Clear Fault Memory	
Genesis(BH)	2014	General	PSB	Actuation Test	
Genesis(BH)	2014	General	PSB	Special Function	PSB Variant Coding
Genesis(BH)	2014	General	Electronic Control Suspension	Version Information	
Genesis(BH)	2014	General	Electronic Control Suspension	Read Fault Code	
Genesis(BH)	2014	General	Electronic Control Suspension	Clear Fault Memory	
Genesis(BH)	2014	General	Electronic Control Suspension	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2014	General	Electronic Control Suspension	Special Function	Auto Detected Configuration
Genesis(BH)	2014	General	Electronic Control Suspension	Special Function	Reset(ESP/ESC)Only Height Level Control Select
Genesis(BH)	2014	General	Electronic Control Suspension	Special Function	Checking Air Pressure System
Genesis(BH)	2014	General	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Genesis(BH)	2014	General	Electronic Control Suspension	Special Function	Height Sensor Calibration
Genesis(BH)	2014	General	Transmitter Code Saving	Read Data Stream	
Genesis(BH)	2014	General	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2014	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH)	2014	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Genesis(BH)	2014	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(BH)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Genesis(BH)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Genesis(BH)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Genesis(BH)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Genesis(BH)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Genesis(BH)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2014	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Genesis(BH)	2014	General	ABS(Anti-lock Braking System)	Special Function	Long G Sensor Calibration(Only FR)
Genesis(BH)	2014	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2014	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Genesis(BH)	2014	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
Genesis(BH)	2014	General	BCM(Body Control Module)	Special Function	Neutral Mode
Genesis(BH)	2014	General	BCM(Body Control Module)	Special Function	ESCL Open Status Check
Genesis(BH)	2014	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Genesis(BH)	2014	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Genesis(BH)	2014	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(BH)	2014	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Genesis(BH)	2014	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Genesis(BH)	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Genesis(BH)	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Genesis(BH)	2014	General	Smart key teaching	Version Information	
Genesis(BH)	2014	General	Smart key teaching	Read Fault Code	
Genesis(BH)	2014	General	Smart key teaching	Clear Fault Memory	
Genesis(BH)	2014	General	Smart key teaching	Read Data Stream	
Genesis(BH)	2014	General	Smart key teaching	Actuation Test	
Genesis(BH)	2014	General	Smart key teaching	Special Function	ESCL Open Status Check
Genesis(BH)	2014	General	Smart key teaching	Special Function	SMK Status Information
Genesis(BH)	2014	General	Smart key teaching	Special Function	FOB Key Status Information
Genesis(BH)	2014	General	Smart key teaching	Special Function	Serial Communication Line Check
Genesis(BH)	2014	General	Smart key teaching	Special Function	Antenna Status Check
Genesis(BH)	2014	General	Smart key teaching	Special Function	Neutralization Mode
Genesis(BH)	2014	General	Smart key teaching	Special Function	Smart Key Code Saving
Genesis(BH)	2014	General	Smart key teaching	Special Function	ESCL Status Information
Genesis(BH)	2014	General	Smart key teaching	Special Function	Current FOB Key Check
Genesis(BH)	2014	General	Pre-safe Seat Belt	Version Information	
Genesis(BH)	2014	General	Pre-safe Seat Belt	Read Fault Code	
Genesis(BH)	2014	General	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(BH)	2014	General	Pre-safe Seat Belt	Actuation Test	
Genesis(BH)	2014	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(BH)	2014	General	Telematics Unit	Version Information	
Genesis(BH)	2014	General	Telematics Unit	Read Fault Code	
Genesis(BH)	2014	General	Telematics Unit	Clear Fault Memory	
Genesis(BH)	2014	General	IMM(Immobilizer)	Special Function	Password Record/Change
Genesis(BH)	2014	General	IMM(Immobilizer)	Special Function	Learnt Keys
Genesis(BH)	2014	General	IMM(Immobilizer)	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Genesis(BH)	2013	General	ECM(Engine Control Module)	Version Information	
Genesis(BH)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Genesis(BH)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH)	2013	General	ECM(Engine Control Module)	Actuation Test	
Genesis(BH)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(BH)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(BH)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(BH)	2013	General	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2013	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU
Genesis(BH)	2013	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Input(Transmission Exchange)
Genesis(BH)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Version Information	
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Read FreezeData	
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Actuation Test	

model	year	area	system	function	subfunction
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Special Function	Long G Sensor Calibration (Only EPP)
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Special Function	Pressure Sensor Calibration
Genesis(BH)	2013	General	ESP(Electronic Stability Program)	Special Function	Valve Flushing
Genesis(BH)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(BH)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis(BH)	2013	General	AC(Air Conditioning)	Version Information	
Genesis(BH)	2013	General	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2013	General	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2013	General	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2013	General	BCM(Body Control Module)	Version Information	
Genesis(BH)	2013	General	BCM(Body Control Module)	Read Fault Code	
Genesis(BH)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis(BH)	2013	General	BCM(Body Control Module)	Read Data Stream	
Genesis(BH)	2013	General	BCM(Body Control Module)	Actuation Test	
Genesis(BH)	2013	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Genesis(BH)	2013	General	BCM(Body Control Module)	Special Function	ESCL Status Information
Genesis(BH)	2013	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
Genesis(BH)	2013	General	BCM(Body Control Module)	Special Function	IPM Status Information
Genesis(BH)	2013	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Genesis(BH)	2013	General	BCM(Body Control Module)	Special Function	PDM Status Information
Genesis(BH)	2013	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Genesis(BH)	2013	General	BCM(Body Control Module)	Special Function	Escr Open Status Information

model	year	area	system	function	subfunction
Genesis(BH)	2013	General	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2013	General	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH)	2013	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH)	2013	General	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2013	General	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH)	2013	General	EPS(Electronic Power Steering)	Version Information	
Genesis(BH)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(BH)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Genesis(BH)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Genesis(BH)	2013	General	EPS(Electronic Power Steering)	Actuation Test	
Genesis(BH)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(BH)	2013	General	Head Lamp	Version Information	
Genesis(BH)	2013	General	Head Lamp	Read Fault Code	
Genesis(BH)	2013	General	Head Lamp	Clear Fault Memory	
Genesis(BH)	2013	General	Head Lamp	Read Data Stream	
Genesis(BH)	2013	General	Head Lamp	Actuation Test	
Genesis(BH)	2013	General	Head Lamp	Special Function	Calibration
Genesis(BH)	2013	General	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2013	General	Head Lamp	Special Function	AFLS Aming Mode
Genesis(BH)	2013	General	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2013	General	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration

model	year	area	system	function	subfunction
Genesis(BH)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(BH)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2013	General	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis(BH)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2013	General	Smart Key Code Saving	Version Information	
Genesis(BH)	2013	General	Smart Key Code Saving	Read Fault Code	
Genesis(BH)	2013	General	Smart Key Code Saving	Clear Fault Memory	
Genesis(BH)	2013	General	Smart Key Code Saving	Read Data Stream	
Genesis(BH)	2013	General	Smart Key Code Saving	Actuation Test	
Genesis(BH)	2013	General	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH)	2013	General	Smart Key Code Saving	Special Function	Neutralization Mode
Genesis(BH)	2013	General	Smart Key Code Saving	Special Function	SMK Status Information
Genesis(BH)	2013	General	Smart Key Code Saving	Special Function	ESCL Status Information
Genesis(BH)	2013	General	Smart Key Code Saving	Special Function	FOB Key Status Information
Genesis(BH)	2013	General	Smart Key Code Saving	Special Function	Current FOB Key Check
Genesis(BH)	2013	General	Smart Key Code Saving	Special Function	Serial Communication Line Check
Genesis(BH)	2013	General	Smart Key Code Saving	Special Function	Antenna Status Check
Genesis(BH)	2013	General	Smart Key Code Saving	Special Function	ESCL Open Status Check
Genesis(BH)	2013	General	CCS(Cruise Control System)	Version Information	
Genesis(BH)	2013	General	CCS(Cruise Control System)	Read Fault Code	
Genesis(BH)	2013	General	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH)	2013	General	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH)	2013	General	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH)	2013	General	CCS(Cruise Control System)	Special Function	Alignment Parking Mode

model	year	area	system	function	subfunction
Genesis(BH)	2013	General	DIS	Version Information	
Genesis(BH)	2013	General	DIS	Read Fault Code	
Genesis(BH)	2013	General	DIS	Clear Fault Memory	
Genesis(BH)	2013	General	DIS	Read Data Stream	
Genesis(BH)	2013	General	DIS	Actuation Test	
Genesis(BH)	2013	General	DIS	Special Function	ECU Serial Number
Genesis(BH)	2013	General	DIS	Special Function	Get All S/W Version
Genesis(BH)	2013	General	DIS	Special Function	Update From CD
Genesis(BH)	2013	General	DIS	Special Function	Ring Break
Genesis(BH)	2013	General	DIS	Special Function	DVD-Request when slot is Empty
Genesis(BH)	2013	General	DIS	Special Function	Wake Up Line
Genesis(BH)	2013	General	DIS	Special Function	Xdb Test
Genesis(BH)	2013	General	DIS	Special Function	Variant Coding
Genesis(BH)	2013	General	Intelligent Accel Pedal	Version Information	
Genesis(BH)	2013	General	Intelligent Accel Pedal	Read Fault Code	
Genesis(BH)	2013	General	Intelligent Accel Pedal	Clear Fault Memory	
Genesis(BH)	2013	General	Intelligent Accel Pedal	Read Data Stream	
Genesis(BH)	2013	General	Intelligent Accel Pedal	Actuation Test	
Genesis(BH)	2013	General	Lane Departure Warning System	Version Information	
Genesis(BH)	2013	General	Lane Departure Warning System	Read Fault Code	
Genesis(BH)	2013	General	Lane Departure Warning System	Clear Fault Memory	
Genesis(BH)	2013	General	Lane Departure Warning System	Read Data Stream	
Genesis(BH)	2013	General	Lane Departure Warning System	Special Function	LDWS Region Code
Genesis(BH)	2013	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Genesis(BH)	2013	General	PSB	Version Information	
Genesis(BH)	2013	General	PSB	Read Fault Code	
Genesis(BH)	2013	General	PSB	Clear Fault Memory	
Genesis(BH)	2013	General	PSB	Actuation Test	
Genesis(BH)	2013	General	PSB	Special Function	PSB Variant Coding

model	year	area	system	function	subfunction
Genesis(BH)	2013	General	Electronic Control Suspension	Version Information	
Genesis(BH)	2013	General	Electronic Control Suspension	Read Fault Code	
Genesis(BH)	2013	General	Electronic Control Suspension	Clear Fault Memory	
Genesis(BH)	2013	General	Electronic Control Suspension	Read Data Stream	
Genesis(BH)	2013	General	Electronic Control Suspension	Special Function	Auto Detected Configuration Reset(FSP/ESC/ESC)Only)
Genesis(BH)	2013	General	Electronic Control Suspension	Special Function	Height Level Control Select
Genesis(BH)	2013	General	Electronic Control Suspension	Special Function	Checking Air Pressure Custom
Genesis(BH)	2013	General	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Genesis(BH)	2013	General	Electronic Control Suspension	Special Function	Height Sensor Calibration
Genesis(BH)	2013	General	Transmitter Code Saving	Read Data Stream	
Genesis(BH)	2013	General	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2013	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH)	2013	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Genesis(BH)	2013	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(BH)	2013	General	ABS(Anti-lock Braking System)	Version Information	
Genesis(BH)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Genesis(BH)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Genesis(BH)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Genesis(BH)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Genesis(BH)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2013	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Genesis(BH)	2013	General	ABS(Anti-lock Braking System)	Special Function	Long G Sensor Calibration(Only FDD)
Genesis(BH)	2013	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2013	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Genesis(BH)	2013	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
Genesis(BH)	2013	General	BCM(Body Control Module)	Special Function	Neutral Mode

model	year	area	system	function	subfunction
Genesis(BH)	2013	General	BCM(Body Control Module)	Special Function	ESCL Open Status Check
Genesis(BH)	2013	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Genesis(BH)	2013	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Genesis(BH)	2013	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Genesis(BH)	2013	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Genesis(BH)	2013	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Genesis(BH)	2013	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Genesis(BH)	2013	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Genesis(BH)	2013	General	Smart key teaching	Version Information	
Genesis(BH)	2013	General	Smart key teaching	Read Fault Code	
Genesis(BH)	2013	General	Smart key teaching	Clear Fault Memory	
Genesis(BH)	2013	General	Smart key teaching	Read Data Stream	
Genesis(BH)	2013	General	Smart key teaching	Actuation Test	
Genesis(BH)	2013	General	Smart key teaching	Special Function	ESCL Open Status Check
Genesis(BH)	2013	General	Smart key teaching	Special Function	SMK Status Information
Genesis(BH)	2013	General	Smart key teaching	Special Function	FOB Key Status Information
Genesis(BH)	2013	General	Smart key teaching	Special Function	Serial Communication Line Check
Genesis(BH)	2013	General	Smart key teaching	Special Function	Antenna Status Check
Genesis(BH)	2013	General	Smart key teaching	Special Function	Neutralization Mode
Genesis(BH)	2013	General	Smart key teaching	Special Function	Smart Key Code Saving
Genesis(BH)	2013	General	Smart key teaching	Special Function	ESCL Status Information
Genesis(BH)	2013	General	Smart key teaching	Special Function	Current FOB Key Check
Genesis(BH)	2013	General	Pre-safe Seat Belt	Version Information	
Genesis(BH)	2013	General	Pre-safe Seat Belt	Read Fault Code	
Genesis(BH)	2013	General	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(BH)	2013	General	Pre-safe Seat Belt	Actuation Test	
Genesis(BH)	2013	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(BH)	2013	General	Telematics Unit	Version Information	
Genesis(BH)	2013	General	Telematics Unit	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(BH)	2013	General	Telematics Unit	Clear Fault Memory	
Genesis(BH)	2013	General	IMM(Immobilizer)	Special Function	Password Record/Change
Genesis(BH)	2013	General	IMM(Immobilizer)	Special Function	Learnt Keys
Genesis(BH)	2013	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Genesis(BH)	2012	General	ECM(Engine Control Module)	Version Information	
Genesis(BH)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Genesis(BH)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH)	2012	General	ECM(Engine Control Module)	Actuation Test	
Genesis(BH)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(BH)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(BH)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(BH)	2012	General	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2012	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics
Genesis(BH)	2012	General	TCM(Transmission Control Module)	Special Function	Backup&Input(TCU Oil-pressure Characteristics)
Genesis(BH)	2012	General	TCM(Transmission Control Module)	Special Function	Input(Transmission Exchange)
Genesis(BH)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Version Information	
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Read FreezeData	
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Special Function	Long G Sensor Calibration(Only ESP)
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Special Function	Pressure Sensor Calibration
Genesis(BH)	2012	General	ESP(Electronic Stability Program)	Special Function	Valve Flushing
Genesis(BH)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(BH)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis(BH)	2012	General	AC(Air Conditioning)	Version Information	
Genesis(BH)	2012	General	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2012	General	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2012	General	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2012	General	BCM(Body Control Module)	Version Information	
Genesis(BH)	2012	General	BCM(Body Control Module)	Read Fault Code	
Genesis(BH)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis(BH)	2012	General	BCM(Body Control Module)	Read Data Stream	
Genesis(BH)	2012	General	BCM(Body Control Module)	Actuation Test	
Genesis(BH)	2012	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Genesis(BH)	2012	General	BCM(Body Control Module)	Special Function	ESCL Status Information
Genesis(BH)	2012	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
Genesis(BH)	2012	General	BCM(Body Control Module)	Special Function	IPM Status Information

model	year	area	system	function	subfunction
Genesis(BH)	2012	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Genesis(BH)	2012	General	BCM(Body Control Module)	Special Function	PDM Status Information
Genesis(BH)	2012	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Genesis(BH)	2012	General	BCM(Body Control Module)	Special Function	Lscf Open Status Information
Genesis(BH)	2012	General	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2012	General	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH)	2012	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH)	2012	General	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2012	General	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH)	2012	General	EPS(Electronic Power Steering)	Version Information	
Genesis(BH)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(BH)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Genesis(BH)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
Genesis(BH)	2012	General	EPS(Electronic Power Steering)	Actuation Test	
Genesis(BH)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(BH)	2012	General	Head Lamp	Version Information	
Genesis(BH)	2012	General	Head Lamp	Read Fault Code	
Genesis(BH)	2012	General	Head Lamp	Clear Fault Memory	
Genesis(BH)	2012	General	Head Lamp	Read Data Stream	
Genesis(BH)	2012	General	Head Lamp	Actuation Test	
Genesis(BH)	2012	General	Head Lamp	Special Function	Calibration
Genesis(BH)	2012	General	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2012	General	Head Lamp	Special Function	AFLS Aming Mode
Genesis(BH)	2012	General	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2012	General	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(BH)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2012	General	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis(BH)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2012	General	Smart Key Code Saving	Read Data Stream	
Genesis(BH)	2012	General	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH)	2012	General	CCS(Cruise Control System)	Version Information	
Genesis(BH)	2012	General	CCS(Cruise Control System)	Read Fault Code	
Genesis(BH)	2012	General	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH)	2012	General	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH)	2012	General	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH)	2012	General	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Genesis(BH)	2012	General	DIS	Version Information	
Genesis(BH)	2012	General	DIS	Read Fault Code	
Genesis(BH)	2012	General	DIS	Clear Fault Memory	
Genesis(BH)	2012	General	DIS	Read Data Stream	
Genesis(BH)	2012	General	DIS	Actuation Test	
Genesis(BH)	2012	General	DIS	Special Function	ECU Serial Number
Genesis(BH)	2012	General	DIS	Special Function	Get All S/W Version
Genesis(BH)	2012	General	DIS	Special Function	Update From CD

model	year	area	system	function	subfunction
Genesis(BH)	2012	General	DIS	Special Function	Ring Break
Genesis(BH)	2012	General	DIS	Special Function	DVD-Request when slot is Empty
Genesis(BH)	2012	General	DIS	Special Function	Wake Up Line
Genesis(BH)	2012	General	DIS	Special Function	Xdb Test
Genesis(BH)	2012	General	DIS	Special Function	Variant Coding
Genesis(BH)	2012	General	Intelligent Accel Pedal	Version Information	
Genesis(BH)	2012	General	Intelligent Accel Pedal	Read Fault Code	
Genesis(BH)	2012	General	Intelligent Accel Pedal	Clear Fault Memory	
Genesis(BH)	2012	General	Intelligent Accel Pedal	Read Data Stream	
Genesis(BH)	2012	General	Intelligent Accel Pedal	Actuation Test	
Genesis(BH)	2012	General	Lane Departure Warning System	Version Information	
Genesis(BH)	2012	General	Lane Departure Warning System	Read Fault Code	
Genesis(BH)	2012	General	Lane Departure Warning System	Clear Fault Memory	
Genesis(BH)	2012	General	Lane Departure Warning System	Read Data Stream	
Genesis(BH)	2012	General	Lane Departure Warning System	Special Function	LDWS Region Code
Genesis(BH)	2012	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Genesis(BH)	2012	General	PSB	Version Information	
Genesis(BH)	2012	General	PSB	Read Fault Code	
Genesis(BH)	2012	General	PSB	Clear Fault Memory	
Genesis(BH)	2012	General	PSB	Actuation Test	
Genesis(BH)	2012	General	PSB	Special Function	PSB Variant Coding
Genesis(BH)	2012	General	Electronic Control Suspension	Version Information	
Genesis(BH)	2012	General	Electronic Control Suspension	Read Fault Code	
Genesis(BH)	2012	General	Electronic Control Suspension	Clear Fault Memory	
Genesis(BH)	2012	General	Electronic Control Suspension	Read Data Stream	
Genesis(BH)	2012	General	Electronic Control Suspension	Special Function	Auto Detected Configuration
Genesis(BH)	2012	General	Electronic Control Suspension	Special Function	Reset(FSP/ESC)Only
Genesis(BH)	2012	General	Electronic Control Suspension	Special Function	Height Level Control Select
Genesis(BH)	2012	General	Electronic Control Suspension	Special Function	Checking Air Pressure System

model	year	area	system	function	subfunction
Genesis(BH)	2012	General	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Genesis(BH)	2012	General	Electronic Control Suspension	Special Function	Height Sensor Calibration
Genesis(BH)	2012	General	Transmitter Code Saving	Read Data Stream	
Genesis(BH)	2012	General	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH)	2012	General	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2012	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH)	2012	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Genesis(BH)	2012	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(BH)	2012	General	ABS(Anti-lock Braking System)	Version Information	
Genesis(BH)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
Genesis(BH)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Genesis(BH)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
Genesis(BH)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
Genesis(BH)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2012	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Genesis(BH)	2012	General	ABS(Anti-lock Braking System)	Special Function	Long G Sensor Calibration(Only FDD)
Genesis(BH)	2012	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2012	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Genesis(BH)	2012	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
Genesis(BH)	2012	General	BCM(Body Control Module)	Special Function	Neutral Mode
Genesis(BH)	2012	General	BCM(Body Control Module)	Special Function	ESCL Open Status Check
Genesis(BH)	2012	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Genesis(BH)	2012	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Genesis(BH)	2012	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Genesis(BH)	2012	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Genesis(BH)	2012	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Genesis(BH)	2012	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Genesis(BH)	2012	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download

model	year	area	system	function	subfunction
Genesis(BH)	2012	General	Smart key teaching	Read Data Stream	
Genesis(BH)	2012	General	Smart key teaching	Special Function	Smart Key Code Saving
Genesis(BH)	2012	General	Pre-safe Seat Belt	Version Information	
Genesis(BH)	2012	General	Pre-safe Seat Belt	Read Fault Code	
Genesis(BH)	2012	General	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(BH)	2012	General	Pre-safe Seat Belt	Actuation Test	
Genesis(BH)	2012	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(BH)	2012	General	Head Unit	Version Information	
Genesis(BH)	2012	General	Head Unit	Read Fault Code	
Genesis(BH)	2012	General	Head Unit	Clear Fault Memory	
Genesis(BH)	2012	General	Head Unit	Read Data Stream	
Genesis(BH)	2012	General	Head Unit	Actuation Test	
Genesis(BH)	2012	General	Head Unit	Special Function	Variant Coding
Genesis(BH)	2012	General	Head Unit	Special Function	Temperature Rise Circuit
Genesis(BH)	2012	General	Head Unit	Special Function	ECU Serial Number
Genesis(BH)	2012	General	Head Unit	Special Function	Get All S/W Version
Genesis(BH)	2012	General	Head Unit	Special Function	Update From CD
Genesis(BH)	2012	General	Head Unit	Special Function	Ring Break
Genesis(BH)	2012	General	Head Unit	Special Function	Xdb Test
Genesis(BH)	2012	General	Head Unit	Special Function	DVD-Request when Slot is Empty
Genesis(BH)	2012	General	Tuner/Amplifier	Version Information	
Genesis(BH)	2012	General	Tuner/Amplifier	Read Fault Code	
Genesis(BH)	2012	General	Tuner/Amplifier	Clear Fault Memory	
Genesis(BH)	2012	General	Tuner/Amplifier	Special Function	ECU Serial Number
Genesis(BH)	2012	General	IMM(Immobilizer)	Special Function	Password Record/Change
Genesis(BH)	2012	General	IMM(Immobilizer)	Special Function	Learnt Keys
Genesis(BH)	2012	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Genesis(BH)	2011	General	ECM(Engine Control Module)	Version Information	
Genesis(BH)	2011	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(BH)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH)	2011	General	ECM(Engine Control Module)	Actuation Test	
Genesis(BH)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2011	General	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2011	General	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Version Information	
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Read FreezeData	
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Special Function	Long G Sensor Calibration (Only ESP)
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Special Function	Pressure Sensor Calibration
Genesis(BH)	2011	General	ESP(Electronic Stability Program)	Special Function	Valve Flushing
Genesis(BH)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(BH)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(BH)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis(BH)	2011	General	AC(Air Conditioning)	Version Information	
Genesis(BH)	2011	General	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2011	General	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2011	General	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2011	General	BCM(Body Control Module)	Version Information	
Genesis(BH)	2011	General	BCM(Body Control Module)	Read Fault Code	
Genesis(BH)	2011	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis(BH)	2011	General	BCM(Body Control Module)	Read Data Stream	
Genesis(BH)	2011	General	BCM(Body Control Module)	Actuation Test	
Genesis(BH)	2011	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Genesis(BH)	2011	General	BCM(Body Control Module)	Special Function	ESCL Status Information
Genesis(BH)	2011	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
Genesis(BH)	2011	General	BCM(Body Control Module)	Special Function	IPM Status Information
Genesis(BH)	2011	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Genesis(BH)	2011	General	BCM(Body Control Module)	Special Function	PDM Status Information
Genesis(BH)	2011	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Genesis(BH)	2011	General	BCM(Body Control Module)	Special Function	Escr Open Status Information
Genesis(BH)	2011	General	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2011	General	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH)	2011	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH)	2011	General	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2011	General	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH)	2011	General	EPS(Electronic Power Steering)	Version Information	
Genesis(BH)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(BH)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Genesis(BH)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2011	General	EPS(Electronic Power Steering)	Actuation Test	
Genesis(BH)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(BH)	2011	General	Head Lamp	Version Information	
Genesis(BH)	2011	General	Head Lamp	Read Fault Code	
Genesis(BH)	2011	General	Head Lamp	Clear Fault Memory	
Genesis(BH)	2011	General	Head Lamp	Read Data Stream	
Genesis(BH)	2011	General	Head Lamp	Actuation Test	
Genesis(BH)	2011	General	Head Lamp	Special Function	Calibration
Genesis(BH)	2011	General	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2011	General	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2011	General	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH)	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH)	2011	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(BH)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2011	General	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Genesis(BH)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2011	General	Smart Key Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2011	General	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH)	2011	General	CCS(Cruise Control System)	Version Information	
Genesis(BH)	2011	General	CCS(Cruise Control System)	Read Fault Code	
Genesis(BH)	2011	General	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH)	2011	General	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH)	2011	General	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH)	2011	General	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Genesis(BH)	2011	General	DIS	Version Information	
Genesis(BH)	2011	General	DIS	Read Fault Code	
Genesis(BH)	2011	General	DIS	Clear Fault Memory	
Genesis(BH)	2011	General	DIS	Read Data Stream	
Genesis(BH)	2011	General	DIS	Actuation Test	
Genesis(BH)	2011	General	DIS	Special Function	ECU Serial Number
Genesis(BH)	2011	General	DIS	Special Function	Get All S/W Version
Genesis(BH)	2011	General	DIS	Special Function	Update From CD
Genesis(BH)	2011	General	DIS	Special Function	Ring Break
Genesis(BH)	2011	General	DIS	Special Function	DVD-Request when Slot is Empty
Genesis(BH)	2011	General	DIS	Special Function	Wake Up Line
Genesis(BH)	2011	General	DIS	Special Function	Xdb Test
Genesis(BH)	2011	General	DIS	Special Function	Variant Coding
Genesis(BH)	2011	General	Lane Departure Warning System	Version Information	
Genesis(BH)	2011	General	Lane Departure Warning System	Read Fault Code	
Genesis(BH)	2011	General	Lane Departure Warning System	Clear Fault Memory	
Genesis(BH)	2011	General	Lane Departure Warning System	Read Data Stream	
Genesis(BH)	2011	General	Lane Departure Warning System	Special Function	LDWS Region Code
Genesis(BH)	2011	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Genesis(BH)	2011	General	Electronic Control Suspension	Version Information	
Genesis(BH)	2011	General	Electronic Control Suspension	Read Fault Code	
Genesis(BH)	2011	General	Electronic Control Suspension	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(BH)	2011	General	Electronic Control Suspension	Read Data Stream	
Genesis(BH)	2011	General	Electronic Control Suspension	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Genesis(BH)	2011	General	Electronic Control Suspension	Special Function	Height Level Control Select
Genesis(BH)	2011	General	Electronic Control Suspension	Special Function	Checking Air Pressure Custom
Genesis(BH)	2011	General	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Genesis(BH)	2011	General	Electronic Control Suspension	Special Function	Height Sensor Calibration
Genesis(BH)	2011	General	Transmitter Code Saving	Read Data Stream	
Genesis(BH)	2011	General	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH)	2011	General	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2011	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(BH)	2011	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Genesis(BH)	2011	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH)	2010	General	ECM(Engine Control Module)	Version Information	
Genesis(BH)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Genesis(BH)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2010	General	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH)	2010	General	ECM(Engine Control Module)	Actuation Test	
Genesis(BH)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2010	General	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2010	General	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status

model	year	area	system	function	subfunction
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Version Information	
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Read FreezeData	
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Special Function	Long G Sensor Calibration(Only EBP)
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Special Function	Pressure Sensor Calibration
Genesis(BH)	2010	General	ESP(Electronic Stability Program)	Special Function	Valve Flushing
Genesis(BH)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(BH)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis(BH)	2010	General	AC(Air Conditioning)	Version Information	
Genesis(BH)	2010	General	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2010	General	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2010	General	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2010	General	BCM(Body Control Module)	Version Information	
Genesis(BH)	2010	General	BCM(Body Control Module)	Read Fault Code	
Genesis(BH)	2010	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis(BH)	2010	General	BCM(Body Control Module)	Read Data Stream	
Genesis(BH)	2010	General	BCM(Body Control Module)	Actuation Test	
Genesis(BH)	2010	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Genesis(BH)	2010	General	BCM(Body Control Module)	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Genesis(BH)	2010	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
Genesis(BH)	2010	General	BCM(Body Control Module)	Special Function	IPM Status Information
Genesis(BH)	2010	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Genesis(BH)	2010	General	BCM(Body Control Module)	Special Function	PDM Status Information
Genesis(BH)	2010	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Genesis(BH)	2010	General	BCM(Body Control Module)	Special Function	Escr Open Status Information
Genesis(BH)	2010	General	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2010	General	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH)	2010	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH)	2010	General	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2010	General	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH)	2010	General	EPS(Electronic Power Steering)	Version Information	
Genesis(BH)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(BH)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Genesis(BH)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
Genesis(BH)	2010	General	EPS(Electronic Power Steering)	Actuation Test	
Genesis(BH)	2010	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(BH)	2010	General	Head Lamp	Version Information	
Genesis(BH)	2010	General	Head Lamp	Read Fault Code	
Genesis(BH)	2010	General	Head Lamp	Clear Fault Memory	
Genesis(BH)	2010	General	Head Lamp	Read Data Stream	
Genesis(BH)	2010	General	Head Lamp	Actuation Test	
Genesis(BH)	2010	General	Head Lamp	Special Function	Calibration
Genesis(BH)	2010	General	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2010	General	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2010	General	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH)	2010	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2010	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(BH)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH)	2010	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(BH)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2010	General	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2010	General	IMM(Immobilizer)	Special Function	Password
Genesis(BH)	2010	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Genesis(BH)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2010	General	Smart Key Code Saving	Read Data Stream	
Genesis(BH)	2010	General	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH)	2010	General	CCS(Cruise Control System)	Version Information	
Genesis(BH)	2010	General	CCS(Cruise Control System)	Read Fault Code	
Genesis(BH)	2010	General	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH)	2010	General	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH)	2010	General	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH)	2010	General	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Genesis(BH)	2010	General	DIS	Version Information	
Genesis(BH)	2010	General	DIS	Read Fault Code	
Genesis(BH)	2010	General	DIS	Clear Fault Memory	
Genesis(BH)	2010	General	DIS	Read Data Stream	
Genesis(BH)	2010	General	DIS	Actuation Test	
Genesis(BH)	2010	General	DIS	Special Function	ECU Serial Number
Genesis(BH)	2010	General	DIS	Special Function	Get All S/W Version

model	year	area	system	function	subfunction
Genesis(BH)	2010	General	DIS	Special Function	Update From CD
Genesis(BH)	2010	General	DIS	Special Function	Ring Break
Genesis(BH)	2010	General	DIS	Special Function	DVD-Request when Slot is Empty
Genesis(BH)	2010	General	DIS	Special Function	Wake Up Line
Genesis(BH)	2010	General	DIS	Special Function	Xdb Test
Genesis(BH)	2010	General	DIS	Special Function	Variant Coding
Genesis(BH)	2010	General	Lane Departure Warning System	Version Information	
Genesis(BH)	2010	General	Lane Departure Warning System	Read Fault Code	
Genesis(BH)	2010	General	Lane Departure Warning System	Clear Fault Memory	
Genesis(BH)	2010	General	Lane Departure Warning System	Read Data Stream	
Genesis(BH)	2010	General	Lane Departure Warning System	Special Function	LDWS Region Code
Genesis(BH)	2010	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Genesis(BH)	2010	General	Electronic Control Suspension	Version Information	
Genesis(BH)	2010	General	Electronic Control Suspension	Read Fault Code	
Genesis(BH)	2010	General	Electronic Control Suspension	Clear Fault Memory	
Genesis(BH)	2010	General	Electronic Control Suspension	Read Data Stream	
Genesis(BH)	2010	General	Electronic Control Suspension	Special Function	Auto Detected Configuration
Genesis(BH)	2010	General	Electronic Control Suspension	Special Function	Reset(FSP/FSC)Only
Genesis(BH)	2010	General	Electronic Control Suspension	Special Function	Height Level Control Select
Genesis(BH)	2010	General	Electronic Control Suspension	Special Function	Checking Air Pressure
Genesis(BH)	2010	General	Electronic Control Suspension	Special Function	Custom
Genesis(BH)	2010	General	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Genesis(BH)	2010	General	Electronic Control Suspension	Special Function	Height Sensor Calibration
Genesis(BH)	2010	General	Transmitter Code Saving	Read Data Stream	
Genesis(BH)	2010	General	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2010	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(BH)	2010	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Genesis(BH)	2010	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH)	2009	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Genesis(BH)	2009	General	ECM(Engine Control Module)	Read Fault Code	
Genesis(BH)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2009	General	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH)	2009	General	ECM(Engine Control Module)	Actuation Test	
Genesis(BH)	2009	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2009	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2009	General	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH)	2009	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2009	General	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2009	General	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Version Information	
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Read FreezeData	
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Special Function	Long G Sensor Calibration(Only FDD)
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Special Function	Pressure Sensor Calibration
Genesis(BH)	2009	General	ESP(Electronic Stability Program)	Special Function	Valve Flushing
Genesis(BH)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(BH)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH)	2009	General	AC(Air Conditioning)	Version Information	
Genesis(BH)	2009	General	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2009	General	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2009	General	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2009	General	BCM(Body Control Module)	Version Information	
Genesis(BH)	2009	General	BCM(Body Control Module)	Read Fault Code	
Genesis(BH)	2009	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis(BH)	2009	General	BCM(Body Control Module)	Read Data Stream	
Genesis(BH)	2009	General	BCM(Body Control Module)	Actuation Test	
Genesis(BH)	2009	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Genesis(BH)	2009	General	BCM(Body Control Module)	Special Function	ESCL Status Information
Genesis(BH)	2009	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
Genesis(BH)	2009	General	BCM(Body Control Module)	Special Function	IPM Status Information
Genesis(BH)	2009	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Genesis(BH)	2009	General	BCM(Body Control Module)	Special Function	PDM Status Information
Genesis(BH)	2009	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Genesis(BH)	2009	General	BCM(Body Control Module)	Special Function	Lsci Open Status Information
Genesis(BH)	2009	General	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2009	General	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH)	2009	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH)	2009	General	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2009	General	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH)	2009	General	EPS(Electronic Power Steering)	Version Information	
Genesis(BH)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(BH)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Genesis(BH)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	
Genesis(BH)	2009	General	EPS(Electronic Power Steering)	Actuation Test	

model	year	area	system	function	subfunction
Genesis(BH)	2009	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(BH)	2009	General	Head Lamp	Version Information	
Genesis(BH)	2009	General	Head Lamp	Read Fault Code	
Genesis(BH)	2009	General	Head Lamp	Clear Fault Memory	
Genesis(BH)	2009	General	Head Lamp	Read Data Stream	
Genesis(BH)	2009	General	Head Lamp	Actuation Test	
Genesis(BH)	2009	General	Head Lamp	Special Function	Calibration
Genesis(BH)	2009	General	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2009	General	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2009	General	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH)	2009	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2009	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH)	2009	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(BH)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2009	General	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2009	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis(BH)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2009	General	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2009	General	Smart Key Code Saving	Read Data Stream	
Genesis(BH)	2009	General	Smart Key Code Saving	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Genesis(BH)	2009	General	CCS(Cruise Control System)	Version Information	
Genesis(BH)	2009	General	CCS(Cruise Control System)	Read Fault Code	
Genesis(BH)	2009	General	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH)	2009	General	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH)	2009	General	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH)	2009	General	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Genesis(BH)	2009	General	DIS	Version Information	
Genesis(BH)	2009	General	DIS	Read Fault Code	
Genesis(BH)	2009	General	DIS	Clear Fault Memory	
Genesis(BH)	2009	General	DIS	Read Data Stream	
Genesis(BH)	2009	General	DIS	Actuation Test	
Genesis(BH)	2009	General	DIS	Special Function	ECU Serial Number
Genesis(BH)	2009	General	DIS	Special Function	Get All S/W Version
Genesis(BH)	2009	General	DIS	Special Function	Update From CD
Genesis(BH)	2009	General	DIS	Special Function	Ring Break
Genesis(BH)	2009	General	DIS	Special Function	DVD-Request when slot is Empty
Genesis(BH)	2009	General	DIS	Special Function	Wake Up Line
Genesis(BH)	2009	General	DIS	Special Function	Xdb Test
Genesis(BH)	2009	General	DIS	Special Function	Variant Coding
Genesis(BH)	2009	General	Electronic Control Suspension	Version Information	
Genesis(BH)	2009	General	Electronic Control Suspension	Read Fault Code	
Genesis(BH)	2009	General	Electronic Control Suspension	Clear Fault Memory	
Genesis(BH)	2009	General	Electronic Control Suspension	Read Data Stream	
Genesis(BH)	2009	General	Electronic Control Suspension	Special Function	Auto Detected Configuration
Genesis(BH)	2009	General	Electronic Control Suspension	Special Function	Reset(FSP/FSC)Only
Genesis(BH)	2009	General	Electronic Control Suspension	Special Function	Height Level Control Select
Genesis(BH)	2009	General	Electronic Control Suspension	Special Function	Checking Air Pressure System
Genesis(BH)	2009	General	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Genesis(BH)	2009	General	Electronic Control Suspension	Special Function	Height Sensor Calibration

model	year	area	system	function	subfunction
Genesis(BH)	2009	General	Transmitter Code Saving	Read Data Stream	
Genesis(BH)	2009	General	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH)	2009	General	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2009	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(BH)	2009	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Genesis(BH)	2009	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Version Information	
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Actuation Test	
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(BH US)-U.S.	2013	General	TCM(Transmission Control Module)	Version Information	
Genesis(BH US)-U.S.	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH US)-U.S.	2013	General	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH US)-U.S.	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH US)-U.S.	2013	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU
Genesis(BH US)-U.S.	2013	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Input(Transmission
Genesis(BH US)-U.S.	2013	General	TCM(Transmission Control Module)	Special Function	Exchange) AT Adaptation Mode

model	year	area	system	function	subfunction
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Version Information	
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Read FreezeData	
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Actuation Test	
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Special Function	Long G Sensor Calibration(Only FRP)
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Special Function	Steering Angle Learning
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Special Function	Lateral G Sensor Calibration
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Special Function	Pressure Sensor Calibration
Genesis(BH US)-U.S.	2013	General	Electronic Stability Control	Special Function	Valve Flushing
Genesis(BH US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Genesis(BH US)-U.S.	2013	General	AC(Air Conditioning)	Version Information	
Genesis(BH US)-U.S.	2013	General	AC(Air Conditioning)	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	AC(Air Conditioning)	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	AC(Air Conditioning)	Actuation Test	
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Version Information	
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Actuation Test	
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Special Function	ESCL Status Information
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Special Function	IPM Status Information
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Special Function	PDM Status Information
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Genesis(BH US)-U.S.	2013	General	BCM(Body Control Module)	Special Function	Escr Open Status Information
Genesis(BH US)-U.S.	2013	General	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH US)-U.S.	2013	General	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH US)-U.S.	2013	General	Electric Hydraulic Power Steering	Version Information	
Genesis(BH US)-U.S.	2013	General	Electric Hydraulic Power Steering	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	Electric Hydraulic Power Steering	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	Electric Hydraulic Power Steering	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	Electric Hydraulic Power Steering	Actuation Test	
Genesis(BH US)-U.S.	2013	General	Electric Hydraulic Power Steering	Special Function	EPS Type Recognition
Genesis(BH US)-U.S.	2013	General	Head Lamp	Version Information	
Genesis(BH US)-U.S.	2013	General	Head Lamp	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	Head Lamp	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	Head Lamp	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	Head Lamp	Actuation Test	
Genesis(BH US)-U.S.	2013	General	Head Lamp	Special Function	Calibration
Genesis(BH US)-U.S.	2013	General	Head Lamp	Special Function	Parameter Download
Genesis(BH US)-U.S.	2013	General	Head Lamp	Special Function	AFLS Aming Mode
Genesis(BH US)-U.S.	2013	General	Head Lamp	Special Function	Sensor Initialization
Genesis(BH US)-U.S.	2013	General	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(BH US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(BH US)-U.S.	2013	General	IMM(Immobilizer)	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Password
Genesis(BH US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Genesis(BH US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Version Information	
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Actuation Test	
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Special Function	Antenna Status Check
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Special Function	Current FOB Key Check
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Special Function	FOB Key Status Information
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Special Function	Serial Communication Line Check
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Special Function	SMK Status Information
Genesis(BH US)-U.S.	2013	General	Smart Key Code Saving	Special Function	Neutralization Mode
Genesis(BH US)-U.S.	2013	General	Transmitter Code Saving	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH US)-U.S.	2013	General	CCS(Cruise Control System)	Version Information	

model	year	area	system	function	subfunction
Genesis(BH US)-U.S.	2013	General	CCS(Cruise Control System)	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH US)-U.S.	2013	General	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Genesis(BH US)-U.S.	2013	General	Lane Departure Warning System	Version Information	
Genesis(BH US)-U.S.	2013	General	Lane Departure Warning System	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	Lane Departure Warning System	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	Lane Departure Warning System	Read Data Stream	
Genesis(BH US)-U.S.	2013	General	Lane Departure Warning System	Special Function	LDWS Region Code
Genesis(BH US)-U.S.	2013	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Genesis(BH US)-U.S.	2013	General	Pre-safe Seat Belt	Version Information	
Genesis(BH US)-U.S.	2013	General	Pre-safe Seat Belt	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	Pre-safe Seat Belt	Actuation Test	
Genesis(BH US)-U.S.	2013	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(BH US)-U.S.	2013	General	Telematics Unit	Version Information	
Genesis(BH US)-U.S.	2013	General	Telematics Unit	Read Fault Code	
Genesis(BH US)-U.S.	2013	General	Telematics Unit	Clear Fault Memory	
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Genesis(BH US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(DH)	2017	General	ECM(Engine Control Module)	Version Information	
Genesis(DH)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Genesis(DH)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(DH)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Genesis(DH)	2017	General	ECM(Engine Control Module)	Actuation Test	
Genesis(DH)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Genesis(DH)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(DH)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(DH)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(DH)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(DH)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(DH)	2017	General	TCM(Transmission Control Module)	Version Information	
Genesis(DH)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis(DH)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(DH)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis(DH)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis(DH)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Genesis(DH)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(DH)	2017	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU
Genesis(DH)	2017	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Genesis(DH)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis(DH)	2017	General	Electronic Stability Program	Version Information	
Genesis(DH)	2017	General	Electronic Stability Program	Read Fault Code	
Genesis(DH)	2017	General	Electronic Stability Program	Clear Fault Memory	
Genesis(DH)	2017	General	Electronic Stability Program	Read Data Stream	
Genesis(DH)	2017	General	Electronic Stability Program	Actuation Test	
Genesis(DH)	2017	General	Electronic Stability Program	Special Function	Auto Detected Configuration Reset
Genesis(DH)	2017	General	Electronic Stability Program	Special Function	HCU Air Bleeding Mode
Genesis(DH)	2017	General	Electronic Stability Program	Special Function	Intelligent Driving Mode Integrated Control
Genesis(DH)	2017	General	Electronic Stability Program	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis(DH)	2017	General	Electronic Stability Program	Special Function	SAS Calibration(CAN-ESP Only)

model	year	area	system	function	subfunction
Genesis(DH)	2017	General	Electronic Stability Program	Special Function	Variant Coding
Genesis(DH)	2017	General	Electric Parking Brake	Version Information	
Genesis(DH)	2017	General	Electric Parking Brake	Read Fault Code	
Genesis(DH)	2017	General	Electric Parking Brake	Clear Fault Memory	
Genesis(DH)	2017	General	Electric Parking Brake	Read Data Stream	
Genesis(DH)	2017	General	Electric Parking Brake	Actuation Test	
Genesis(DH)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(DH)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(DH)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(DH)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(DH)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(DH)	2017	General	AC(Air Conditioning)	Version Information	
Genesis(DH)	2017	General	AC(Air Conditioning)	Read Fault Code	
Genesis(DH)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis(DH)	2017	General	AC(Air Conditioning)	Read Data Stream	
Genesis(DH)	2017	General	AC(Air Conditioning)	Actuation Test	
Genesis(DH)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis(DH)	2017	General	BCM(Body Control Module)	Version Information	
Genesis(DH)	2017	General	BCM(Body Control Module)	Read Fault Code	
Genesis(DH)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis(DH)	2017	General	BCM(Body Control Module)	Read Data Stream	
Genesis(DH)	2017	General	BCM(Body Control Module)	Actuation Test	
Genesis(DH)	2017	General	BCM(Body Control Module)	Special Function	User Option
Genesis(DH)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Genesis(DH)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Genesis(DH)	2017	General	BCM(Body Control Module)	Special Function	HUD Calibration
Genesis(DH)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Genesis(DH)	2017	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Genesis(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Genesis(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(DH)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Genesis(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Genesis(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Genesis(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Genesis(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Genesis(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Genesis(DH)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Genesis(DH)	2017	General	EPS(Electronic Power Steering)	Version Information	
Genesis(DH)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(DH)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Genesis(DH)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Genesis(DH)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(DH)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Genesis(DH)	2017	General	Electronic Control Suspension	Version Information	
Genesis(DH)	2017	General	Electronic Control Suspension	Read Fault Code	
Genesis(DH)	2017	General	Electronic Control Suspension	Clear Fault Memory	
Genesis(DH)	2017	General	Electronic Control Suspension	Read Data Stream	
Genesis(DH)	2017	General	Electronic Control Suspension	Actuation Test	

model	year	area	system	function	subfunction
Genesis(DH)	2017	General	Electronic Control Suspension	Special Function	ECS Variant Coding
Genesis(DH)	2017	General	Driveshaft	Version Information	
Genesis(DH)	2017	General	Driveshaft	Read Fault Code	
Genesis(DH)	2017	General	Driveshaft	Clear Fault Memory	
Genesis(DH)	2017	General	Driveshaft	Read Data Stream	
Genesis(DH)	2017	General	Driveshaft	Actuation Test	
Genesis(DH)	2017	General	Driveshaft	Special Function	4WD Lamp Actuation Test
Genesis(DH)	2017	General	Driveshaft	Special Function	Torque Coupling Actuation Test
Genesis(DH)	2017	General	Driveshaft	Special Function	Oil Data Initialization
Genesis(DH)	2017	General	Driveshaft	Special Function	Power Down Calibration
Genesis(DH)	2017	General	Driveshaft	Special Function	T\C Clutch Calibration
Genesis(DH)	2017	General	Driveshaft	Special Function	Clutch Learning Reset
Genesis(DH)	2017	General	Driveshaft	Special Function	HW Characteristics
Genesis(DH)	2017	General	Driveshaft	Special Function	ECU Data Back-up&Writing
Genesis(DH)	2017	General	Smart Key Unit	Version Information	
Genesis(DH)	2017	General	Smart Key Unit	Read Fault Code	
Genesis(DH)	2017	General	Smart Key Unit	Clear Fault Memory	
Genesis(DH)	2017	General	Smart Key Unit	Read Data Stream	
Genesis(DH)	2017	General	Smart Key Unit	Actuation Test	
Genesis(DH)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Genesis(DH)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Genesis(DH)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Genesis(DH)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Genesis(DH)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Genesis(DH)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Genesis(DH)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Genesis(DH)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Genesis(DH)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Genesis(DH)	2017	General	CCS(Cruise Control System)	Version Information	

model	year	area	system	function	subfunction
Genesis(DH)	2017	General	CCS(Cruise Control System)	Read Fault Code	
Genesis(DH)	2017	General	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(DH)	2017	General	CCS(Cruise Control System)	Read Data Stream	
Genesis(DH)	2017	General	CCS(Cruise Control System)	Special Function	SCC Variant Coding
Genesis(DH)	2017	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Genesis(DH)	2017	General	Blind Spot Detection	Version Information	
Genesis(DH)	2017	General	Blind Spot Detection	Read Fault Code	
Genesis(DH)	2017	General	Blind Spot Detection	Clear Fault Memory	
Genesis(DH)	2017	General	Blind Spot Detection	Read Data Stream	
Genesis(DH)	2017	General	Blind Spot Detection	Actuation Test	
Genesis(DH)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Genesis(DH)	2017	General	Blind Spot Detection	Special Function	BSD Variant Coding
Genesis(DH)	2017	General	Lane Keeping Assist System	Version Information	
Genesis(DH)	2017	General	Lane Keeping Assist System	Read Fault Code	
Genesis(DH)	2017	General	Lane Keeping Assist System	Clear Fault Memory	
Genesis(DH)	2017	General	Lane Keeping Assist System	Read Data Stream	
Genesis(DH)	2017	General	Lane Keeping Assist System	Special Function	SPC Calibration
Genesis(DH)	2017	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
Genesis(DH)	2017	General	Lane Keeping Assist System	Special Function	LKAS/LDWS Variant Coding
Genesis(DH)	2017	General	Smart Parking Assist System	Version Information	
Genesis(DH)	2017	General	Smart Parking Assist System	Read Fault Code	
Genesis(DH)	2017	General	Smart Parking Assist System	Clear Fault Memory	
Genesis(DH)	2017	General	Smart Parking Assist System	Read Data Stream	
Genesis(DH)	2017	General	Smart Parking Assist System	Actuation Test	
Genesis(DH)	2017	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Genesis(DH)	2017	General	Around View Monitor System	Version Information	
Genesis(DH)	2017	General	Around View Monitor System	Read Fault Code	
Genesis(DH)	2017	General	Around View Monitor System	Clear Fault Memory	
Genesis(DH)	2017	General	Around View Monitor System	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(DH)	2017	General	Around View Monitor System	Actuation Test	
Genesis(DH)	2017	General	Around View Monitor System	Special Function	AVM Tolerance Compensation
Genesis(DH)	2017	General	Parking Guide System	Version Information	
Genesis(DH)	2017	General	Parking Guide System	Read Fault Code	
Genesis(DH)	2017	General	Parking Guide System	Clear Fault Memory	
Genesis(DH)	2017	General	Parking Guide System	Read Data Stream	
Genesis(DH)	2017	General	Parking Guide System	Actuation Test	
Genesis(DH)	2017	General	Pre-safe Seat Belt	Version Information	
Genesis(DH)	2017	General	Pre-safe Seat Belt	Read Fault Code	
Genesis(DH)	2017	General	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(DH)	2017	General	Pre-safe Seat Belt	Read Data Stream	
Genesis(DH)	2017	General	Pre-safe Seat Belt	Actuation Test	
Genesis(DH)	2017	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(DH)	2017	General	Active Hood System	Version Information	
Genesis(DH)	2017	General	Active Hood System	Read Fault Code	
Genesis(DH)	2017	General	Active Hood System	Clear Fault Memory	
Genesis(DH)	2017	General	Amplifier	Special Function	AMP Operation Test
Genesis(DH)	2017	General	Audio Video Navigation	Version Information	
Genesis(DH)	2017	General	Audio Video Navigation	Read Data Stream	
Genesis(DH)	2017	General	Audio Video Navigation	Special Function	User Option
Genesis(DH)	2017	General	Audio Video Navigation	Special Function	Ring Break
Genesis(DH)	2017	General	Central Gateway	Version Information	
Genesis(DH)	2017	General	Central Gateway	Read Fault Code	
Genesis(DH)	2017	General	Central Gateway	Clear Fault Memory	
Genesis(DH)	2017	General	Central Gateway	Special Function	Erase Network Configuration
Genesis(DH)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Genesis(DH)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(DH)	2017	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Genesis(DH)	2017	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting

model	year	area	system	function	subfunction
Genesis(DH)	2016	General	ECM(Engine Control Module)	Version Information	
Genesis(DH)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Genesis(DH)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(DH)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Genesis(DH)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Genesis(DH)	2016	General	ECM(Engine Control Module)	Actuation Test	
Genesis(DH)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(DH)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(DH)	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(DH)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Genesis(DH)	2016	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(DH)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(DH)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Version Information	
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Special Function	Backup&Input(TCU
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Special Function	Input(Transmission
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Special Function	Exchange)
Genesis(DH)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis(DH)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Genesis(DH)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Genesis(DH)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Genesis(DH)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(DH)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Genesis(DH)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Genesis(DH)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Genesis(DH)	2016	General	ABS(Anti-lock Braking System)	Special Function	Intelligent Driving Mode Integrated Control
Genesis(DH)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis(DH)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Genesis(DH)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Genesis(DH)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(DH)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(DH)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(DH)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(DH)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(DH)	2016	General	AC(Air Conditioning)	Version Information	
Genesis(DH)	2016	General	AC(Air Conditioning)	Read Fault Code	
Genesis(DH)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis(DH)	2016	General	AC(Air Conditioning)	Read Data Stream	
Genesis(DH)	2016	General	AC(Air Conditioning)	Actuation Test	
Genesis(DH)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis(DH)	2016	General	BCM(Body Control Module)	Version Information	
Genesis(DH)	2016	General	BCM(Body Control Module)	Read Fault Code	
Genesis(DH)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis(DH)	2016	General	BCM(Body Control Module)	Read Data Stream	
Genesis(DH)	2016	General	BCM(Body Control Module)	Actuation Test	
Genesis(DH)	2016	General	BCM(Body Control Module)	Special Function	User Option
Genesis(DH)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Genesis(DH)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Genesis(DH)	2016	General	BCM(Body Control Module)	Special Function	HUD Calibration

model	year	area	system	function	subfunction
Genesis(DH)	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Genesis(DH)	2016	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Genesis(DH)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(DH)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(DH)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(DH)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(DH)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(DH)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(DH)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(DH)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(DH)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(DH)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(DH)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Genesis(DH)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Genesis(DH)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Genesis(DH)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Genesis(DH)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Genesis(DH)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Genesis(DH)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Genesis(DH)	2016	General	EPS(Electronic Power Steering)	Version Information	
Genesis(DH)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(DH)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Genesis(DH)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Genesis(DH)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(DH)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Genesis(DH)	2016	General	Electronic Control Suspension	Version Information	
Genesis(DH)	2016	General	Electronic Control Suspension	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(DH)	2016	General	Electronic Control Suspension	Clear Fault Memory	
Genesis(DH)	2016	General	Electronic Control Suspension	Read Data Stream	
Genesis(DH)	2016	General	Electronic Control Suspension	Actuation Test	
Genesis(DH)	2016	General	Electronic Control Suspension	Special Function	ECS Variant Coding
Genesis(DH)	2016	General	Driveshaft	Version Information	
Genesis(DH)	2016	General	Driveshaft	Read Fault Code	
Genesis(DH)	2016	General	Driveshaft	Clear Fault Memory	
Genesis(DH)	2016	General	Driveshaft	Read Data Stream	
Genesis(DH)	2016	General	Driveshaft	Actuation Test	
Genesis(DH)	2016	General	Driveshaft	Special Function	4WD Lamp Actuation Test
Genesis(DH)	2016	General	Driveshaft	Special Function	Torque Coupling Actuation Test
Genesis(DH)	2016	General	Driveshaft	Special Function	Oil Data Initialization
Genesis(DH)	2016	General	Driveshaft	Special Function	Power Down Calibration
Genesis(DH)	2016	General	Driveshaft	Special Function	T\C Clutch Calibration
Genesis(DH)	2016	General	Driveshaft	Special Function	Clutch Learning Reset
Genesis(DH)	2016	General	Driveshaft	Special Function	HW Characteristics
Genesis(DH)	2016	General	Driveshaft	Special Function	ECU Data Back-up&Writing
Genesis(DH)	2016	General	Smart Key Unit	Version Information	
Genesis(DH)	2016	General	Smart Key Unit	Read Fault Code	
Genesis(DH)	2016	General	Smart Key Unit	Clear Fault Memory	
Genesis(DH)	2016	General	Smart Key Unit	Read Data Stream	
Genesis(DH)	2016	General	Smart Key Unit	Actuation Test	
Genesis(DH)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Genesis(DH)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Genesis(DH)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Genesis(DH)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Genesis(DH)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Genesis(DH)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Genesis(DH)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Genesis(DH)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Genesis(DH)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Genesis(DH)	2016	General	CCS(Cruise Control System)	Version Information	
Genesis(DH)	2016	General	CCS(Cruise Control System)	Read Fault Code	
Genesis(DH)	2016	General	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(DH)	2016	General	CCS(Cruise Control System)	Read Data Stream	
Genesis(DH)	2016	General	CCS(Cruise Control System)	Special Function	SCC Variant Coding
Genesis(DH)	2016	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Genesis(DH)	2016	General	Blind Spot Detection	Version Information	
Genesis(DH)	2016	General	Blind Spot Detection	Read Fault Code	
Genesis(DH)	2016	General	Blind Spot Detection	Clear Fault Memory	
Genesis(DH)	2016	General	Blind Spot Detection	Read Data Stream	
Genesis(DH)	2016	General	Blind Spot Detection	Actuation Test	
Genesis(DH)	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Genesis(DH)	2016	General	Blind Spot Detection	Special Function	BSD Variant Coding
Genesis(DH)	2016	General	Lane Keeping Assist System	Version Information	
Genesis(DH)	2016	General	Lane Keeping Assist System	Read Fault Code	
Genesis(DH)	2016	General	Lane Keeping Assist System	Clear Fault Memory	
Genesis(DH)	2016	General	Lane Keeping Assist System	Read Data Stream	
Genesis(DH)	2016	General	Lane Keeping Assist System	Special Function	SPC Calibration
Genesis(DH)	2016	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
Genesis(DH)	2016	General	Lane Keeping Assist System	Special Function	LKAS/LDWS Variant Coding
Genesis(DH)	2016	General	Smart Parking Assist System	Version Information	
Genesis(DH)	2016	General	Smart Parking Assist System	Read Fault Code	
Genesis(DH)	2016	General	Smart Parking Assist System	Clear Fault Memory	
Genesis(DH)	2016	General	Smart Parking Assist System	Read Data Stream	
Genesis(DH)	2016	General	Smart Parking Assist System	Actuation Test	
Genesis(DH)	2016	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Genesis(DH)	2016	General	Parking Guide	Version Information	

model	year	area	system	function	subfunction
Genesis(DH)	2016	General	Parking Guide	Read Fault Code	
Genesis(DH)	2016	General	Parking Guide	Clear Fault Memory	
Genesis(DH)	2016	General	Parking Guide	Read Data Stream	
Genesis(DH)	2016	General	Parking Guide	Actuation Test	
Genesis(DH)	2016	General	Pre-safe Seat Belt	Version Information	
Genesis(DH)	2016	General	Pre-safe Seat Belt	Read Fault Code	
Genesis(DH)	2016	General	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(DH)	2016	General	Pre-safe Seat Belt	Read Data Stream	
Genesis(DH)	2016	General	Pre-safe Seat Belt	Actuation Test	
Genesis(DH)	2016	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(DH)	2016	General	Active Hood System	Version Information	
Genesis(DH)	2016	General	Active Hood System	Read Fault Code	
Genesis(DH)	2016	General	Active Hood System	Clear Fault Memory	
Genesis(DH)	2016	General	Audio Video Navigation	Version Information	
Genesis(DH)	2016	General	Audio Video Navigation	Read Data Stream	
Genesis(DH)	2016	General	Audio Video Navigation	Special Function	Ring Break
Genesis(DH)	2016	General	Audio Video Navigation	Special Function	User Option
Genesis(DH)	2016	General	Central Gateway	Version Information	
Genesis(DH)	2016	General	Central Gateway	Read Fault Code	
Genesis(DH)	2016	General	Central Gateway	Clear Fault Memory	
Genesis(DH)	2016	General	Central Gateway	Special Function	Erase Network Configuration
Genesis(DH)	2016	General	Around View Monitor System	Version Information	
Genesis(DH)	2016	General	Around View Monitor System	Read Fault Code	
Genesis(DH)	2016	General	Around View Monitor System	Clear Fault Memory	
Genesis(DH)	2016	General	Around View Monitor System	Read Data Stream	
Genesis(DH)	2016	General	Around View Monitor System	Actuation Test	
Genesis(DH)	2016	General	Around View Monitor System	Special Function	AVM Tolerance Compensation
Genesis(DH)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(DH)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)

model	year	area	system	function	subfunction
Genesis(DH)	2015	General	ECM(Engine Control Module)	Version Information	
Genesis(DH)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Genesis(DH)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(DH)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Genesis(DH)	2015	General	ECM(Engine Control Module)	Actuation Test	
Genesis(DH)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(DH)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(DH)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(DH)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(DH)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(DH)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(DH)	2015	General	TCM(Transmission Control Module)	Version Information	
Genesis(DH)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis(DH)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(DH)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis(DH)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis(DH)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Genesis(DH)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(DH)	2015	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU
Genesis(DH)	2015	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Input(Transmission Exchange)
Genesis(DH)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis(DH)	2015	General	ESP(Electronic Stability Program)	Version Information	
Genesis(DH)	2015	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis(DH)	2015	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis(DH)	2015	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis(DH)	2015	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis(DH)	2015	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Genesis(DH)	2015	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis(DH)	2015	General	ESP(Electronic Stability Program)	Special Function	Intelligent Driving Mode Integrated Control
Genesis(DH)	2015	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis(DH)	2015	General	ESP(Electronic Stability Program)	Special Function	SAS Calibration(CAN-ESP Only)
Genesis(DH)	2015	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
Genesis(DH)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(DH)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(DH)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(DH)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(DH)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(DH)	2015	General	AC(Air Conditioning)	Version Information	
Genesis(DH)	2015	General	AC(Air Conditioning)	Read Fault Code	
Genesis(DH)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis(DH)	2015	General	AC(Air Conditioning)	Read Data Stream	
Genesis(DH)	2015	General	AC(Air Conditioning)	Actuation Test	
Genesis(DH)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Genesis(DH)	2015	General	BCM(Body Control Module)	Version Information	
Genesis(DH)	2015	General	BCM(Body Control Module)	Read Fault Code	
Genesis(DH)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis(DH)	2015	General	BCM(Body Control Module)	Read Data Stream	
Genesis(DH)	2015	General	BCM(Body Control Module)	Actuation Test	
Genesis(DH)	2015	General	BCM(Body Control Module)	Special Function	User Option
Genesis(DH)	2015	General	EPB(Electrical Parking Brake)	Version Information	
Genesis(DH)	2015	General	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(DH)	2015	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(DH)	2015	General	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(DH)	2015	General	EPB(Electrical Parking Brake)	Actuation Test	

model	year	area	system	function	subfunction
Genesis(DH)	2015	General	EPS(Electronic Power Steering)	Version Information	
Genesis(DH)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(DH)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Genesis(DH)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Genesis(DH)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(DH)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Genesis(DH)	2015	General	4WD Control	Version Information	
Genesis(DH)	2015	General	4WD Control	Read Fault Code	
Genesis(DH)	2015	General	4WD Control	Clear Fault Memory	
Genesis(DH)	2015	General	4WD Control	Read Data Stream	
Genesis(DH)	2015	General	4WD Control	Actuation Test	
Genesis(DH)	2015	General	4WD Control	Special Function	4WD Lamp Actuation Test
Genesis(DH)	2015	General	4WD Control	Special Function	Torque Coupling Actuation Test
Genesis(DH)	2015	General	4WD Control	Special Function	Oil Data Initialization
Genesis(DH)	2015	General	4WD Control	Special Function	Power Down Calibration
Genesis(DH)	2015	General	4WD Control	Special Function	T\C Clutch Calibration
Genesis(DH)	2015	General	4WD Control	Special Function	Clutch Learning Reset
Genesis(DH)	2015	General	4WD Control	Special Function	HW Characteristics
Genesis(DH)	2015	General	4WD Control	Special Function	ECU Data Back-up&Writing
Genesis(DH)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(DH)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(DH)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(DH)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(DH)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(DH)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(DH)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(DH)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(DH)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Genesis(DH)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(DH)	2015	General	Smart Key Unit	Version Information	
Genesis(DH)	2015	General	Smart Key Unit	Read Fault Code	
Genesis(DH)	2015	General	Smart Key Unit	Clear Fault Memory	
Genesis(DH)	2015	General	Smart Key Unit	Read Data Stream	
Genesis(DH)	2015	General	Smart Key Unit	Actuation Test	
Genesis(DH)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Genesis(DH)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Genesis(DH)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Genesis(DH)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Genesis(DH)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Genesis(DH)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Genesis(DH)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Genesis(DH)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Genesis(DH)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Genesis(DH)	2015	General	CCS(Cruise Control System)	Version Information	
Genesis(DH)	2015	General	CCS(Cruise Control System)	Read Fault Code	
Genesis(DH)	2015	General	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(DH)	2015	General	CCS(Cruise Control System)	Read Data Stream	
Genesis(DH)	2015	General	CCS(Cruise Control System)	Special Function	SCC Variant Coding
Genesis(DH)	2015	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Genesis(DH)	2015	General	Pre-safe Seat Belt	Version Information	
Genesis(DH)	2015	General	Pre-safe Seat Belt	Read Fault Code	
Genesis(DH)	2015	General	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(DH)	2015	General	Pre-safe Seat Belt	Read Data Stream	
Genesis(DH)	2015	General	Pre-safe Seat Belt	Actuation Test	
Genesis(DH)	2015	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(DH)	2015	General	Electronic Control Suspension	Version Information	
Genesis(DH)	2015	General	Electronic Control Suspension	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(DH)	2015	General	Electronic Control Suspension	Clear Fault Memory	
Genesis(DH)	2015	General	Electronic Control Suspension	Read Data Stream	
Genesis(DH)	2015	General	Electronic Control Suspension	Actuation Test	
Genesis(DH)	2015	General	Electronic Control Suspension	Special Function	ECS Variant Coding
Genesis(DH)	2015	General	Active Hood System	Version Information	
Genesis(DH)	2015	General	Active Hood System	Read Fault Code	
Genesis(DH)	2015	General	Active Hood System	Clear Fault Memory	
Genesis(DH)	2015	General	Around View Monitor System	Version Information	
Genesis(DH)	2015	General	Around View Monitor System	Read Fault Code	
Genesis(DH)	2015	General	Around View Monitor System	Clear Fault Memory	
Genesis(DH)	2015	General	Around View Monitor System	Read Data Stream	
Genesis(DH)	2015	General	Around View Monitor System	Actuation Test	
Genesis(DH)	2015	General	Around View Monitor System	Special Function	AVM Tolerance Compensation
Genesis(DH)	2015	General	Assist Door Module	Version Information	
Genesis(DH)	2015	General	Assist Door Module	Read Fault Code	
Genesis(DH)	2015	General	Assist Door Module	Clear Fault Memory	
Genesis(DH)	2015	General	Assist Door Module	Read Data Stream	
Genesis(DH)	2015	General	Assist Door Module	Actuation Test	
Genesis(DH)	2015	General	Audio Video Navigation	Version Information	
Genesis(DH)	2015	General	Audio Video Navigation	Read Data Stream	
Genesis(DH)	2015	General	Audio Video Navigation	Special Function	User Option
Genesis(DH)	2015	General	Audio Video Navigation	Special Function	Ring Break
Genesis(DH)	2015	General	Auto Headlamp Leveling System	Version Information	
Genesis(DH)	2015	General	Auto Headlamp Leveling System	Read Fault Code	
Genesis(DH)	2015	General	Auto Headlamp Leveling System	Clear Fault Memory	
Genesis(DH)	2015	General	Auto Headlamp Leveling System	Read Data Stream	
Genesis(DH)	2015	General	Auto Headlamp Leveling System	Actuation Test	
Genesis(DH)	2015	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Genesis(DH)	2015	General	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Genesis(DH)	2015	General	Blind Spot Detection	Version Information	
Genesis(DH)	2015	General	Blind Spot Detection	Read Fault Code	
Genesis(DH)	2015	General	Blind Spot Detection	Clear Fault Memory	
Genesis(DH)	2015	General	Blind Spot Detection	Read Data Stream	
Genesis(DH)	2015	General	Blind Spot Detection	Actuation Test	
Genesis(DH)	2015	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Genesis(DH)	2015	General	Blind Spot Detection	Special Function	BSD Variant Coding
Genesis(DH)	2015	General	Central Gateway	Version Information	
Genesis(DH)	2015	General	Central Gateway	Read Fault Code	
Genesis(DH)	2015	General	Central Gateway	Clear Fault Memory	
Genesis(DH)	2015	General	Central Gateway	Special Function	Erase Network Configuration
Genesis(DH)	2015	General	Cluster Module	Version Information	
Genesis(DH)	2015	General	Cluster Module	Read Fault Code	
Genesis(DH)	2015	General	Cluster Module	Clear Fault Memory	
Genesis(DH)	2015	General	Cluster Module	Read Data Stream	
Genesis(DH)	2015	General	Cluster Module	Actuation Test	
Genesis(DH)	2015	General	Cluster Module	Special Function	CLU Variant Coding
Genesis(DH)	2015	General	Cluster Module	Special Function	Service Reminder Setting
Genesis(DH)	2015	General	Driver Door Module	Version Information	
Genesis(DH)	2015	General	Driver Door Module	Read Fault Code	
Genesis(DH)	2015	General	Driver Door Module	Clear Fault Memory	
Genesis(DH)	2015	General	Driver Door Module	Read Data Stream	
Genesis(DH)	2015	General	Driver Door Module	Actuation Test	
Genesis(DH)	2015	General	Driver Door Module	Special Function	User Option
Genesis(DH)	2015	General	Driver Seat Switch	Version Information	
Genesis(DH)	2015	General	Driver Seat Switch	Read Fault Code	
Genesis(DH)	2015	General	Driver Seat Switch	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(DH)	2015	General	Driver Seat Switch	Read Data Stream	
Genesis(DH)	2015	General	Haptic Steering Warning System	Version Information	
Genesis(DH)	2015	General	Haptic Steering Warning System	Read Fault Code	
Genesis(DH)	2015	General	Haptic Steering Warning System	Clear Fault Memory	
Genesis(DH)	2015	General	Head Up Display	Version Information	
Genesis(DH)	2015	General	Head Up Display	Read Fault Code	
Genesis(DH)	2015	General	Head Up Display	Clear Fault Memory	
Genesis(DH)	2015	General	Head Up Display	Read Data Stream	
Genesis(DH)	2015	General	Head Up Display	Special Function	HUD Calibration
Genesis(DH)	2015	General	Lane Keeping Assist System	Version Information	
Genesis(DH)	2015	General	Lane Keeping Assist System	Read Fault Code	
Genesis(DH)	2015	General	Lane Keeping Assist System	Clear Fault Memory	
Genesis(DH)	2015	General	Lane Keeping Assist System	Read Data Stream	
Genesis(DH)	2015	General	Lane Keeping Assist System	Special Function	SPC Calibration
Genesis(DH)	2015	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
Genesis(DH)	2015	General	Lane Keeping Assist System	Special Function	LKAS/LDWS Variant Coding
Genesis(DH)	2015	General	Multi Function Switch	Version Information	
Genesis(DH)	2015	General	Multi Function Switch	Read Fault Code	
Genesis(DH)	2015	General	Multi Function Switch	Clear Fault Memory	
Genesis(DH)	2015	General	Multi Function Switch	Read Data Stream	
Genesis(DH)	2015	General	Smart Parking Assist System	Version Information	
Genesis(DH)	2015	General	Smart Parking Assist System	Read Fault Code	
Genesis(DH)	2015	General	Smart Parking Assist System	Clear Fault Memory	
Genesis(DH)	2015	General	Smart Parking Assist System	Read Data Stream	
Genesis(DH)	2015	General	Smart Parking Assist System	Actuation Test	
Genesis(DH)	2015	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Genesis(DH)	2015	General	Parking Guide System	Version Information	
Genesis(DH)	2015	General	Parking Guide System	Read Fault Code	
Genesis(DH)	2015	General	Parking Guide System	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(DH)	2015	General	Parking Guide System	Read Data Stream	
Genesis(DH)	2015	General	Parking Guide System	Actuation Test	
Genesis(DH)	2015	General	Power Seat Module	Version Information	
Genesis(DH)	2015	General	Power Seat Module	Read Fault Code	
Genesis(DH)	2015	General	Power Seat Module	Clear Fault Memory	
Genesis(DH)	2015	General	Power Seat Module	Read Data Stream	
Genesis(DH)	2015	General	Power Seat Module	Actuation Test	
Genesis(DH)	2015	General	Power Seat Module	Special Function	User Option
Genesis(DH)	2015	General	Power Seat Module	Special Function	Seat Limit Position Setting
Genesis(DH)	2015	General	Power Trunk Module	Version Information	
Genesis(DH)	2015	General	Power Trunk Module	Read Fault Code	
Genesis(DH)	2015	General	Power Trunk Module	Clear Fault Memory	
Genesis(DH)	2015	General	Power Trunk Module	Read Data Stream	
Genesis(DH)	2015	General	Seat Lumbar Bolster	Version Information	
Genesis(DH)	2015	General	Seat Lumbar Bolster	Read Fault Code	
Genesis(DH)	2015	General	Seat Lumbar Bolster	Clear Fault Memory	
Genesis(DH)	2015	General	Seat Lumbar Bolster	Read Data Stream	
Genesis(DH)	2015	General	Seat Lumbar Bolster	Actuation Test	
Genesis(DH)	2015	General	Smart Junction Block	Version Information	
Genesis(DH)	2015	General	Smart Junction Block	Read Fault Code	
Genesis(DH)	2015	General	Smart Junction Block	Clear Fault Memory	
Genesis(DH)	2015	General	Smart Junction Block	Read Data Stream	
Genesis(DH)	2015	General	Smart Junction Block	Actuation Test	
Genesis(DH)	2015	General	Smart Junction Block	Special Function	User Option
Genesis(DH)	2015	General	Steering Column Module	Version Information	
Genesis(DH)	2015	General	Steering Column Module	Read Fault Code	
Genesis(DH)	2015	General	Steering Column Module	Clear Fault Memory	
Genesis(DH)	2015	General	Steering Column Module	Read Data Stream	
Genesis(DH)	2015	General	Steering Column Module	Actuation Test	

model	year	area	system	function	subfunction
Genesis(DH)	2015	General	Steering Column Module	Special Function	User Option
Genesis(DH)	2015	General	Steering Column Module	Special Function	Steering Limit Position Setting
Genesis(DH)	2015	General	Steering Wheel Remote Control	Version Information	
Genesis(DH)	2015	General	Steering Wheel Remote Control	Read Fault Code	
Genesis(DH)	2015	General	Steering Wheel Remote Control	Clear Fault Memory	
Genesis(DH)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Genesis(DH)	2015	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(DH)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Genesis(DH)	2015	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(DH)	2014	General	ECM(Engine Control Module)	Version Information	
Genesis(DH)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Genesis(DH)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(DH)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Genesis(DH)	2014	General	ECM(Engine Control Module)	Actuation Test	
Genesis(DH)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(DH)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(DH)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(DH)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(DH)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(DH)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(DH)	2014	General	TCM(Transmission Control Module)	Version Information	
Genesis(DH)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Genesis(DH)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(DH)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Genesis(DH)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Genesis(DH)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Genesis(DH)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(DH)	2014	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Exchange)

model	year	area	system	function	subfunction
Genesis(DH)	2014	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Genesis(DH)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Genesis(DH)	2014	General	ESP(Electronic Stability Program)	Version Information	
Genesis(DH)	2014	General	ESP(Electronic Stability Program)	Read Fault Code	
Genesis(DH)	2014	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Genesis(DH)	2014	General	ESP(Electronic Stability Program)	Read Data Stream	
Genesis(DH)	2014	General	ESP(Electronic Stability Program)	Actuation Test	
Genesis(DH)	2014	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Genesis(DH)	2014	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Genesis(DH)	2014	General	ESP(Electronic Stability Program)	Special Function	Intelligent Driving Mode Integrated Control
Genesis(DH)	2014	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis(DH)	2014	General	ESP(Electronic Stability Program)	Special Function	SAS Calibration(CAN-ESP Only)
Genesis(DH)	2014	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
Genesis(DH)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(DH)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(DH)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(DH)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(DH)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(DH)	2014	General	AC(Air Conditioning)	Version Information	
Genesis(DH)	2014	General	AC(Air Conditioning)	Read Fault Code	
Genesis(DH)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Genesis(DH)	2014	General	AC(Air Conditioning)	Read Data Stream	
Genesis(DH)	2014	General	AC(Air Conditioning)	Actuation Test	
Genesis(DH)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis(DH)	2014	General	BCM(Body Control Module)	Version Information	
Genesis(DH)	2014	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(DH)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Genesis(DH)	2014	General	BCM(Body Control Module)	Read Data Stream	
Genesis(DH)	2014	General	BCM(Body Control Module)	Actuation Test	
Genesis(DH)	2014	General	BCM(Body Control Module)	Special Function	User Option
Genesis(DH)	2014	General	EPB(Electrical Parking Brake)	Version Information	
Genesis(DH)	2014	General	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(DH)	2014	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(DH)	2014	General	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(DH)	2014	General	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(DH)	2014	General	EPS(Electronic Power Steering)	Version Information	
Genesis(DH)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(DH)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Genesis(DH)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Genesis(DH)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(DH)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Genesis(DH)	2014	General	4WD Control	Version Information	
Genesis(DH)	2014	General	4WD Control	Read Fault Code	
Genesis(DH)	2014	General	4WD Control	Clear Fault Memory	
Genesis(DH)	2014	General	4WD Control	Read Data Stream	
Genesis(DH)	2014	General	4WD Control	Actuation Test	
Genesis(DH)	2014	General	4WD Control	Special Function	4WD Lamp Actuation Test
Genesis(DH)	2014	General	4WD Control	Special Function	Torque Coupling Actuation Test
Genesis(DH)	2014	General	4WD Control	Special Function	Oil Data Initialization
Genesis(DH)	2014	General	4WD Control	Special Function	Power Down Calibration
Genesis(DH)	2014	General	4WD Control	Special Function	T\C Clutch Calibration
Genesis(DH)	2014	General	4WD Control	Special Function	Clutch Learning Reset
Genesis(DH)	2014	General	4WD Control	Special Function	HW Characteristics
Genesis(DH)	2014	General	4WD Control	Special Function	ECU Data Back-up&Writing

model	year	area	system	function	subfunction
Genesis(DH)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(DH)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(DH)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(DH)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(DH)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(DH)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(DH)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(DH)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(DH)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(DH)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(DH)	2014	General	Smart Key Unit	Version Information	
Genesis(DH)	2014	General	Smart Key Unit	Read Fault Code	
Genesis(DH)	2014	General	Smart Key Unit	Clear Fault Memory	
Genesis(DH)	2014	General	Smart Key Unit	Read Data Stream	
Genesis(DH)	2014	General	Smart Key Unit	Actuation Test	
Genesis(DH)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Genesis(DH)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Genesis(DH)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Genesis(DH)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Genesis(DH)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Genesis(DH)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Genesis(DH)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Genesis(DH)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Genesis(DH)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Genesis(DH)	2014	General	CCS(Cruise Control System)	Version Information	
Genesis(DH)	2014	General	CCS(Cruise Control System)	Read Fault Code	
Genesis(DH)	2014	General	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(DH)	2014	General	CCS(Cruise Control System)	Read Data Stream	
Genesis(DH)	2014	General	CCS(Cruise Control System)	Special Function	SCC Variant Coding

model	year	area	system	function	subfunction
Genesis(DH)	2014	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Genesis(DH)	2014	General	Pre-safe Seat Belt	Version Information	
Genesis(DH)	2014	General	Pre-safe Seat Belt	Read Fault Code	
Genesis(DH)	2014	General	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(DH)	2014	General	Pre-safe Seat Belt	Read Data Stream	
Genesis(DH)	2014	General	Pre-safe Seat Belt	Actuation Test	
Genesis(DH)	2014	General	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(DH)	2014	General	Electronic Control Suspension	Version Information	
Genesis(DH)	2014	General	Electronic Control Suspension	Read Fault Code	
Genesis(DH)	2014	General	Electronic Control Suspension	Clear Fault Memory	
Genesis(DH)	2014	General	Electronic Control Suspension	Read Data Stream	
Genesis(DH)	2014	General	Electronic Control Suspension	Actuation Test	
Genesis(DH)	2014	General	Electronic Control Suspension	Special Function	ECS Variant Coding
Genesis(DH)	2014	General	Active Hood System	Version Information	
Genesis(DH)	2014	General	Active Hood System	Read Fault Code	
Genesis(DH)	2014	General	Active Hood System	Clear Fault Memory	
Genesis(DH)	2014	General	Around View Monitor System	Version Information	
Genesis(DH)	2014	General	Around View Monitor System	Read Fault Code	
Genesis(DH)	2014	General	Around View Monitor System	Clear Fault Memory	
Genesis(DH)	2014	General	Around View Monitor System	Read Data Stream	
Genesis(DH)	2014	General	Around View Monitor System	Actuation Test	
Genesis(DH)	2014	General	Around View Monitor System	Special Function	AVM Tolerance Compensation
Genesis(DH)	2014	General	Assist Door Module	Version Information	
Genesis(DH)	2014	General	Assist Door Module	Read Fault Code	
Genesis(DH)	2014	General	Assist Door Module	Clear Fault Memory	
Genesis(DH)	2014	General	Assist Door Module	Read Data Stream	
Genesis(DH)	2014	General	Assist Door Module	Actuation Test	
Genesis(DH)	2014	General	Audio Video Navigation	Version Information	
Genesis(DH)	2014	General	Audio Video Navigation	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(DH)	2014	General	Audio Video Navigation	Special Function	User Option
Genesis(DH)	2014	General	Audio Video Navigation	Special Function	Ring Break
Genesis(DH)	2014	General	Auto Headlamp Leveling System	Version Information	
Genesis(DH)	2014	General	Auto Headlamp Leveling System	Read Fault Code	
Genesis(DH)	2014	General	Auto Headlamp Leveling System	Clear Fault Memory	
Genesis(DH)	2014	General	Auto Headlamp Leveling System	Read Data Stream	
Genesis(DH)	2014	General	Auto Headlamp Leveling System	Actuation Test	
Genesis(DH)	2014	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis(DH)	2014	General	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Genesis(DH)	2014	General	Blind Spot Detection	Version Information	
Genesis(DH)	2014	General	Blind Spot Detection	Read Fault Code	
Genesis(DH)	2014	General	Blind Spot Detection	Clear Fault Memory	
Genesis(DH)	2014	General	Blind Spot Detection	Read Data Stream	
Genesis(DH)	2014	General	Blind Spot Detection	Actuation Test	
Genesis(DH)	2014	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Genesis(DH)	2014	General	Blind Spot Detection	Special Function	BSD Variant Coding
Genesis(DH)	2014	General	Central Gateway	Version Information	
Genesis(DH)	2014	General	Central Gateway	Read Fault Code	
Genesis(DH)	2014	General	Central Gateway	Clear Fault Memory	
Genesis(DH)	2014	General	Central Gateway	Special Function	Erase Network Configuration
Genesis(DH)	2014	General	Cluster Module	Version Information	
Genesis(DH)	2014	General	Cluster Module	Read Fault Code	
Genesis(DH)	2014	General	Cluster Module	Clear Fault Memory	
Genesis(DH)	2014	General	Cluster Module	Read Data Stream	
Genesis(DH)	2014	General	Cluster Module	Actuation Test	
Genesis(DH)	2014	General	Cluster Module	Special Function	CLU Variant Coding
Genesis(DH)	2014	General	Cluster Module	Special Function	Service Reminder Setting
Genesis(DH)	2014	General	Driver Door Module	Version Information	

model	year	area	system	function	subfunction
Genesis(DH)	2014	General	Driver Door Module	Read Fault Code	
Genesis(DH)	2014	General	Driver Door Module	Clear Fault Memory	
Genesis(DH)	2014	General	Driver Door Module	Read Data Stream	
Genesis(DH)	2014	General	Driver Door Module	Actuation Test	
Genesis(DH)	2014	General	Driver Door Module	Special Function	User Option
Genesis(DH)	2014	General	Driver Seat Switch	Version Information	
Genesis(DH)	2014	General	Driver Seat Switch	Read Fault Code	
Genesis(DH)	2014	General	Driver Seat Switch	Clear Fault Memory	
Genesis(DH)	2014	General	Driver Seat Switch	Read Data Stream	
Genesis(DH)	2014	General	Haptic Steering Warning System	Version Information	
Genesis(DH)	2014	General	Haptic Steering Warning System	Read Fault Code	
Genesis(DH)	2014	General	Haptic Steering Warning System	Clear Fault Memory	
Genesis(DH)	2014	General	Head Up Display	Version Information	
Genesis(DH)	2014	General	Head Up Display	Read Fault Code	
Genesis(DH)	2014	General	Head Up Display	Clear Fault Memory	
Genesis(DH)	2014	General	Head Up Display	Read Data Stream	
Genesis(DH)	2014	General	Head Up Display	Special Function	HUD Calibration
Genesis(DH)	2014	General	Lane Keeping Assist System	Version Information	
Genesis(DH)	2014	General	Lane Keeping Assist System	Read Fault Code	
Genesis(DH)	2014	General	Lane Keeping Assist System	Clear Fault Memory	
Genesis(DH)	2014	General	Lane Keeping Assist System	Read Data Stream	
Genesis(DH)	2014	General	Lane Keeping Assist System	Special Function	SPC Calibration
Genesis(DH)	2014	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
Genesis(DH)	2014	General	Lane Keeping Assist System	Special Function	LKAS/LDWS Variant Coding
Genesis(DH)	2014	General	Multi Function Switch	Version Information	
Genesis(DH)	2014	General	Multi Function Switch	Read Fault Code	
Genesis(DH)	2014	General	Multi Function Switch	Clear Fault Memory	
Genesis(DH)	2014	General	Multi Function Switch	Read Data Stream	
Genesis(DH)	2014	General	Smart Parking Assist System	Version Information	

model	year	area	system	function	subfunction
Genesis(DH)	2014	General	Smart Parking Assist System	Read Fault Code	
Genesis(DH)	2014	General	Smart Parking Assist System	Clear Fault Memory	
Genesis(DH)	2014	General	Smart Parking Assist System	Read Data Stream	
Genesis(DH)	2014	General	Smart Parking Assist System	Actuation Test	
Genesis(DH)	2014	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Genesis(DH)	2014	General	Parking Guide System	Version Information	
Genesis(DH)	2014	General	Parking Guide System	Read Fault Code	
Genesis(DH)	2014	General	Parking Guide System	Clear Fault Memory	
Genesis(DH)	2014	General	Parking Guide System	Read Data Stream	
Genesis(DH)	2014	General	Parking Guide System	Actuation Test	
Genesis(DH)	2014	General	Power Seat Module	Version Information	
Genesis(DH)	2014	General	Power Seat Module	Read Fault Code	
Genesis(DH)	2014	General	Power Seat Module	Clear Fault Memory	
Genesis(DH)	2014	General	Power Seat Module	Read Data Stream	
Genesis(DH)	2014	General	Power Seat Module	Actuation Test	
Genesis(DH)	2014	General	Power Seat Module	Special Function	User Option
Genesis(DH)	2014	General	Power Seat Module	Special Function	Seat Limit Position Setting
Genesis(DH)	2014	General	Power Trunk Module	Version Information	
Genesis(DH)	2014	General	Power Trunk Module	Read Fault Code	
Genesis(DH)	2014	General	Power Trunk Module	Clear Fault Memory	
Genesis(DH)	2014	General	Power Trunk Module	Read Data Stream	
Genesis(DH)	2014	General	Seat Lumbar Bolster	Version Information	
Genesis(DH)	2014	General	Seat Lumbar Bolster	Read Fault Code	
Genesis(DH)	2014	General	Seat Lumbar Bolster	Clear Fault Memory	
Genesis(DH)	2014	General	Seat Lumbar Bolster	Read Data Stream	
Genesis(DH)	2014	General	Seat Lumbar Bolster	Actuation Test	
Genesis(DH)	2014	General	Smart Junction Block	Version Information	
Genesis(DH)	2014	General	Smart Junction Block	Read Fault Code	
Genesis(DH)	2014	General	Smart Junction Block	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(DH)	2014	General	Smart Junction Block	Read Data Stream	
Genesis(DH)	2014	General	Smart Junction Block	Actuation Test	
Genesis(DH)	2014	General	Smart Junction Block	Special Function	User Option
Genesis(DH)	2014	General	Steering Column Module	Version Information	
Genesis(DH)	2014	General	Steering Column Module	Read Fault Code	
Genesis(DH)	2014	General	Steering Column Module	Clear Fault Memory	
Genesis(DH)	2014	General	Steering Column Module	Read Data Stream	
Genesis(DH)	2014	General	Steering Column Module	Actuation Test	
Genesis(DH)	2014	General	Steering Column Module	Special Function	User Option
Genesis(DH)	2014	General	Steering Column Module	Special Function	Steering Limit Position Setting
Genesis(DH)	2014	General	Steering Wheel Remote Control	Version Information	
Genesis(DH)	2014	General	Steering Wheel Remote Control	Read Fault Code	
Genesis(DH)	2014	General	Steering Wheel Remote Control	Clear Fault Memory	
Genesis(DH)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Genesis(DH)	2014	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(DH)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Genesis(DH)	2014	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Getz(TB)	2011	General	ECM(Engine Control Module)	Version Information	
Getz(TB)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Getz(TB)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Getz(TB)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Getz(TB)	2011	General	ECM(Engine Control Module)	Actuation Test	
Getz(TB)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Getz(TB)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Getz(TB)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Getz(TB)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Getz(TB)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Getz(TB)	2011	General	ABS(Anti-lock Braking System)	Version Information	
Getz(TB)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
Getz(TB)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Getz(TB)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Getz(TB)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Getz(TB)	2011	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Getz(TB)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Getz(TB)	2011	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Getz(TB)	2011	General	ABS(Anti-lock Braking System)	Special Function	Reset(ESP/ESC)Only
Getz(TB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	Solenoid Valve Test
Getz(TB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Getz(TB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Getz(TB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Getz(TB)	2011	General	EPS(Electronic Power Steering)	Version Information	
Getz(TB)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Getz(TB)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Getz(TB)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Getz(TB)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Getz(TB)	2011	General	IMM(Immobilizer)	Read Data Stream	
Getz(TB)	2011	General	IMM(Immobilizer)	Special Function	Password
Getz(TB)	2011	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Getz(TB)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Getz(TB)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Getz(TB)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Getz(TB)	2011	General	Transmitter Code Saving	Special Function	Code Saving
Getz(TB)	2011	General	ECM(Engine Control Module)	Read FreezeData	
Getz(TB)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Getz(TB)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Getz(TB)	2010	General	ECM(Engine Control Module)	Version Information	
Getz(TB)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Getz(TB)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Getz(TB)	2010	General	ECM(Engine Control Module)	Read Data Stream	
Getz(TB)	2010	General	ECM(Engine Control Module)	Actuation Test	
Getz(TB)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Getz(TB)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Getz(TB)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Getz(TB)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Getz(TB)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Getz(TB)	2010	General	ABS(Anti-lock Braking System)	Version Information	
Getz(TB)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
Getz(TB)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Getz(TB)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
Getz(TB)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
Getz(TB)	2010	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Getz(TB)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Getz(TB)	2010	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Getz(TB)	2010	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Getz(TB)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Getz(TB)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Getz(TB)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Getz(TB)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Getz(TB)	2010	General	EPS(Electronic Power Steering)	Version Information	
Getz(TB)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
Getz(TB)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Getz(TB)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
Getz(TB)	2010	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Getz(TB)	2010	General	IMM(Immobilizer)	Read Data Stream	
Getz(TB)	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Getz(TB)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Getz(TB)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Getz(TB)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Getz(TB)	2010	General	Transmitter Code Saving	Special Function	Code Saving
Getz(TB)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Getz(TB)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Getz(TB)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Getz(TB)	2009	General	ECM(Engine Control Module)	Version Information	
Getz(TB)	2009	General	ECM(Engine Control Module)	Read Fault Code	
Getz(TB)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Getz(TB)	2009	General	ECM(Engine Control Module)	Read Data Stream	
Getz(TB)	2009	General	ECM(Engine Control Module)	Actuation Test	
Getz(TB)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Getz(TB)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Getz(TB)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Getz(TB)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Getz(TB)	2009	General	TCM(Transmission Control Module)	Actuation Test	
Getz(TB)	2009	General	ABS(Anti-lock Braking System)	Version Information	
Getz(TB)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
Getz(TB)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Getz(TB)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
Getz(TB)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
Getz(TB)	2009	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Getz(TB)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Getz(TB)	2009	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Getz(TB)	2009	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Getz(TB)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Getz(TB)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Getz(TB)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Getz(TB)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Getz(TB)	2009	General	EPS(Electronic Power Steering)	Version Information	
Getz(TB)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
Getz(TB)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Getz(TB)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	
Getz(TB)	2009	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Getz(TB)	2009	General	IMM(Immobilizer)	Read Data Stream	
Getz(TB)	2009	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Getz(TB)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Getz(TB)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Getz(TB)	2009	General	IMM(Immobilizer)	Special Function	Teaching
Getz(TB)	2009	General	Transmitter Code Saving	Special Function	Code Saving
Getz(TB)	2009	General	ECM(Engine Control Module)	Read FreezeData	
Getz(TB)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Getz(TB)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Getz(TB)	2008	General	ECM(Engine Control Module)	Version Information	
Getz(TB)	2008	General	ECM(Engine Control Module)	Read Fault Code	
Getz(TB)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
Getz(TB)	2008	General	ECM(Engine Control Module)	Read Data Stream	
Getz(TB)	2008	General	ECM(Engine Control Module)	Actuation Test	
Getz(TB)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Getz(TB)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
Getz(TB)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
Getz(TB)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
Getz(TB)	2008	General	TCM(Transmission Control Module)	Actuation Test	
Getz(TB)	2008	General	ABS(Anti-lock Braking System)	Version Information	
Getz(TB)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
Getz(TB)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Getz(TB)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Getz(TB)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
Getz(TB)	2008	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Getz(TB)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Getz(TB)	2008	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Getz(TB)	2008	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/ESC/Only) Solenoid Valve Test
Getz(TB)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Getz(TB)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Getz(TB)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Getz(TB)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Getz(TB)	2008	General	EPS(Electronic Power Steering)	Version Information	
Getz(TB)	2008	General	EPS(Electronic Power Steering)	Read Fault Code	
Getz(TB)	2008	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Getz(TB)	2008	General	EPS(Electronic Power Steering)	Read Data Stream	
Getz(TB)	2008	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Getz(TB)	2008	General	IMM(Immobilizer)	Read Data Stream	
Getz(TB)	2008	General	IMM(Immobilizer)	Special Function	Password
Getz(TB)	2008	General	IMM(Immobilizer)	Special Function	Teaching/Changing EMS Neutral Mode
Getz(TB)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Getz(TB)	2008	General	IMM(Immobilizer)	Special Function	Teaching
Getz(TB)	2008	General	Transmitter Code Saving	Special Function	Code Saving
Getz(TB)	2008	General	ECM(Engine Control Module)	Read FreezeData	
Getz(TB)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Getz(TB)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Getz(TB)	2007	General	ECM(Engine Control Module)	Version Information	
Getz(TB)	2007	General	ECM(Engine Control Module)	Read Fault Code	
Getz(TB)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Getz(TB)	2007	General	ECM(Engine Control Module)	Read Data Stream	
Getz(TB)	2007	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Getz(TB)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Getz(TB)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Getz(TB)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Getz(TB)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Getz(TB)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Getz(TB)	2007	General	ABS(Anti-lock Braking System)	Version Information	
Getz(TB)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Getz(TB)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Getz(TB)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Getz(TB)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Getz(TB)	2007	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Getz(TB)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode Auto Detected
Getz(TB)	2007	General	ABS(Anti-lock Braking System)	Special Function	Configuration Reset(FSP/FSC)Only
Getz(TB)	2007	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Getz(TB)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Getz(TB)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Getz(TB)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Getz(TB)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Getz(TB)	2007	General	EPS(Electronic Power Steering)	Version Information	
Getz(TB)	2007	General	EPS(Electronic Power Steering)	Read Fault Code	
Getz(TB)	2007	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Getz(TB)	2007	General	EPS(Electronic Power Steering)	Read Data Stream	
Getz(TB)	2007	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Getz(TB)	2007	General	IMM(Immobilizer)	Read Data Stream	
Getz(TB)	2007	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Getz(TB)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Getz(TB)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Getz(TB)	2007	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Getz(TB)	2007	General	Transmitter Code Saving	Special Function	Code Saving
Getz(TB)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Getz(TB)	2007	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Getz(TB)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Getz(TB)	2006	General	ECM(Engine Control Module)	Version Information	
Getz(TB)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Getz(TB)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Getz(TB)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Getz(TB)	2006	General	ECM(Engine Control Module)	Actuation Test	
Getz(TB)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Getz(TB)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Getz(TB)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Getz(TB)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Getz(TB)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Getz(TB)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Getz(TB)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Getz(TB)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Getz(TB)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Getz(TB)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Getz(TB)	2006	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Getz(TB)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Getz(TB)	2006	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Getz(TB)	2006	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/ESC)Only Solenoid Valve Test
Getz(TB)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Getz(TB)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Getz(TB)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Getz(TB)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Getz(TB)	2006	General	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Getz(TB)	2006	General	EPS(Electronic Power Steering)	Read Fault Code	
Getz(TB)	2006	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Getz(TB)	2006	General	EPS(Electronic Power Steering)	Read Data Stream	
Getz(TB)	2006	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Getz(TB)	2006	General	IMM(Immobilizer)	Read Data Stream	
Getz(TB)	2006	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Getz(TB)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Getz(TB)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Getz(TB)	2006	General	IMM(Immobilizer)	Special Function	Teaching
Getz(TB)	2006	General	Transmitter Code Saving	Special Function	Code Saving
Getz(TB)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Getz(TB)	2006	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Getz(TB)	2006	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Getz(TB)	2005	General	ECM(Engine Control Module)	Version Information	
Getz(TB)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Getz(TB)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
Getz(TB)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Getz(TB)	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Getz(TB)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Getz(TB)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Getz(TB)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Getz(TB)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Getz(TB)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Getz(TB)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Getz(TB)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Getz(TB)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Getz(TB)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Getz(TB)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Getz(TB)	2005	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test

model	year	area	system	function	subfunction
Getz(TB)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Getz(TB)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Getz(TB)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Getz(TB)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Getz(TB)	2005	General	EPS(Electronic Power Steering)	Version Information	
Getz(TB)	2005	General	EPS(Electronic Power Steering)	Read Fault Code	
Getz(TB)	2005	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Getz(TB)	2005	General	EPS(Electronic Power Steering)	Read Data Stream	
Getz(TB)	2005	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Getz(TB)	2005	General	IMM(Immobilizer)	Read Data Stream	
Getz(TB)	2005	General	IMM(Immobilizer)	Special Function	Password
Getz(TB)	2005	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Getz(TB)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Getz(TB)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Getz(TB)	2005	General	IMM(Immobilizer)	Special Function	Teaching
Getz(TB)	2005	General	Transmitter Code Saving	Special Function	Code Saving
Getz(TB)	2005	General	ECM(Engine Control Module)	Actuation Test	
Getz(TB)	2005	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Getz(TB)	2005	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Getz(TB)	2005	General	ECM(Engine Control Module)	Special Function	Reset(ESP/ESC)Only
Getz(TB)	2005	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Getz(TB)	2004	General	ECM(Engine Control Module)	Version Information	
Getz(TB)	2004	General	ECM(Engine Control Module)	Read Fault Code	
Getz(TB)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Getz(TB)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Getz(TB)	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Getz(TB)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Getz(TB)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Getz(TB)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Getz(TB)	2004	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Getz(TB)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Getz(TB)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Getz(TB)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Getz(TB)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Getz(TB)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Getz(TB)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Getz(TB)	2004	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Getz(TB)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Getz(TB)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Getz(TB)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Getz(TB)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Getz(TB)	2004	General	EPS(Electronic Power Steering)	Version Information	
Getz(TB)	2004	General	EPS(Electronic Power Steering)	Read Fault Code	
Getz(TB)	2004	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Getz(TB)	2004	General	EPS(Electronic Power Steering)	Read Data Stream	
Getz(TB)	2004	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Getz(TB)	2004	General	IMM(Immobilizer)	Read Data Stream	
Getz(TB)	2004	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Getz(TB)	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Getz(TB)	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Getz(TB)	2004	General	IMM(Immobilizer)	Special Function	Teaching
Getz(TB)	2004	General	Transmitter Code Saving	Special Function	Code Saving
Getz(TB)	2004	General	ECM(Engine Control Module)	Actuation Test	
Getz(TB)	2004	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Getz(TB)	2003	General	ECM(Engine Control Module)	Version Information	
Getz(TB)	2003	General	ECM(Engine Control Module)	Read Fault Code	
Getz(TB)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Getz(TB)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Getz(TB)	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Getz(TB)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Getz(TB)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Getz(TB)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Getz(TB)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Getz(TB)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Getz(TB)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Getz(TB)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Getz(TB)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Getz(TB)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Getz(TB)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Getz(TB)	2003	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Getz(TB)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Getz(TB)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Getz(TB)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Getz(TB)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Getz(TB)	2003	General	EPS(Electronic Power Steering)	Version Information	
Getz(TB)	2003	General	EPS(Electronic Power Steering)	Read Fault Code	
Getz(TB)	2003	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Getz(TB)	2003	General	EPS(Electronic Power Steering)	Read Data Stream	
Getz(TB)	2003	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Getz(TB)	2003	General	IMM(Immobilizer)	Read Data Stream	
Getz(TB)	2003	General	IMM(Immobilizer)	Special Function	Password
Getz(TB)	2003	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Getz(TB)	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Getz(TB)	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Getz(TB)	2003	General	IMM(Immobilizer)	Special Function	Teaching
Getz(TB)	2003	General	Transmitter Code Saving	Special Function	Code Saving
Getz(TB)	2003	General	ECM(Engine Control Module)	Actuation Test	
Getz(TB)	2003	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grand i10/Xcent(BA)	2018	General	TCM(Transmission Control Module)	Version Information	
Grand i10/Xcent(BA)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Grand i10/Xcent(BA)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grand i10/Xcent(BA)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Grand i10/Xcent(BA)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grand i10/Xcent(BA)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grand i10/Xcent(BA)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grand i10/Xcent(BA)	2018	General	ABS(Anti-lock Braking System)	Read FreezeData	
Grand i10/Xcent(BA)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Grand i10/Xcent(BA)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grand i10/Xcent(BA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
Grand i10/Xcent(BA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grand i10/Xcent(BA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Grand i10/Xcent(BA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
Grand i10/Xcent(BA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grand i10/Xcent(BA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grand i10/Xcent(BA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grand i10/Xcent(BA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Grand i10/Xcent(BA)	2018	General	AC(Air Conditioning)	Version Information	
Grand i10/Xcent(BA)	2018	General	AC(Air Conditioning)	Read Fault Code	
Grand i10/Xcent(BA)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Grand i10/Xcent(BA)	2018	General	AC(Air Conditioning)	Read Data Stream	
Grand i10/Xcent(BA)	2018	General	AC(Air Conditioning)	Actuation Test	
Grand i10/Xcent(BA)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Grand i10/Xcent(BA)	2018	General	BCM(Body Control Module)	Version Information	
Grand i10/Xcent(BA)	2018	General	BCM(Body Control Module)	Read Fault Code	
Grand i10/Xcent(BA)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2018	General	BCM(Body Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2018	General	BCM(Body Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grand i10/Xcent(BA)	2018	General	BCM(Body Control Module)	Special Function	User Option
Grand i10/Xcent(BA)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grand i10/Xcent(BA)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grand i10/Xcent(BA)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grand i10/Xcent(BA)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grand i10/Xcent(BA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Grand i10/Xcent(BA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grand i10/Xcent(BA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grand i10/Xcent(BA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grand i10/Xcent(BA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Grand i10/Xcent(BA)	2018	General	EPS(Electronic Power Steering)	Version Information	
Grand i10/Xcent(BA)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Grand i10/Xcent(BA)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Grand i10/Xcent(BA)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Grand i10/Xcent(BA)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Version Information	
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Read Fault Code	
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Clear Fault Memory	
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Read Data Stream	
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Actuation Test	
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Grand i10/Xcent(BA)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grand i10/Xcent(BA)	2018	General	IMM(Immobilizer)	Read Data Stream	
Grand i10/Xcent(BA)	2018	General	IMM(Immobilizer)	Special Function	Password
Grand i10/Xcent(BA)	2018	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Grand i10/Xcent(BA)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grand i10/Xcent(BA)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grand i10/Xcent(BA)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Grand i10/Xcent(BA)	2018	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Grand i10/Xcent(BA)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Grand i10/Xcent(BA)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Special Function	Component Change Routine

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2018	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Version Information	
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grand i10/Xcent(BA)	2017	General	TCM(Transmission Control Module)	Version Information	
Grand i10/Xcent(BA)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Grand i10/Xcent(BA)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grand i10/Xcent(BA)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Grand i10/Xcent(BA)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grand i10/Xcent(BA)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grand i10/Xcent(BA)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grand i10/Xcent(BA)	2017	General	ABS(Anti-lock Braking System)	Read FreezeData	
Grand i10/Xcent(BA)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Grand i10/Xcent(BA)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grand i10/Xcent(BA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
Grand i10/Xcent(BA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grand i10/Xcent(BA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
Grand i10/Xcent(BA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grand i10/Xcent(BA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grand i10/Xcent(BA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grand i10/Xcent(BA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grand i10/Xcent(BA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Grand i10/Xcent(BA)	2017	General	AC(Air Conditioning)	Version Information	
Grand i10/Xcent(BA)	2017	General	AC(Air Conditioning)	Read Fault Code	
Grand i10/Xcent(BA)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Grand i10/Xcent(BA)	2017	General	AC(Air Conditioning)	Read Data Stream	
Grand i10/Xcent(BA)	2017	General	AC(Air Conditioning)	Actuation Test	
Grand i10/Xcent(BA)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Grand i10/Xcent(BA)	2017	General	BCM(Body Control Module)	Version Information	
Grand i10/Xcent(BA)	2017	General	BCM(Body Control Module)	Read Fault Code	
Grand i10/Xcent(BA)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2017	General	BCM(Body Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2017	General	BCM(Body Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2017	General	BCM(Body Control Module)	Special Function	User Option
Grand i10/Xcent(BA)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grand i10/Xcent(BA)	2017	General	EPS(Electronic Power Steering)	Version Information	
Grand i10/Xcent(BA)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Grand i10/Xcent(BA)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grand i10/Xcent(BA)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Grand i10/Xcent(BA)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Grand i10/Xcent(BA)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Version Information	
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Read Fault Code	
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Clear Fault Memory	
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Actuation Test	
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Grand i10/Xcent(BA)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grand i10/Xcent(BA)	2017	General	IMM(Immobilizer)	Read Data Stream	
Grand i10/Xcent(BA)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Grand i10/Xcent(BA)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grand i10/Xcent(BA)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grand i10/Xcent(BA)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Grand i10/Xcent(BA)	2017	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Grand i10/Xcent(BA)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Grand i10/Xcent(BA)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Grand i10/Xcent(BA)	2017	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Version Information	
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grand i10/Xcent(BA)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Grand i10/Xcent(BA)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grand i10/Xcent(BA)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grand i10/Xcent(BA)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grand i10/Xcent(BA)	2016	General	ABS(Anti-lock Braking System)	Read FreezeData	
Grand i10/Xcent(BA)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Grand i10/Xcent(BA)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grand i10/Xcent(BA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
Grand i10/Xcent(BA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grand i10/Xcent(BA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Grand i10/Xcent(BA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
Grand i10/Xcent(BA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grand i10/Xcent(BA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grand i10/Xcent(BA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grand i10/Xcent(BA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grand i10/Xcent(BA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Grand i10/Xcent(BA)	2016	General	AC(Air Conditioning)	Version Information	
Grand i10/Xcent(BA)	2016	General	AC(Air Conditioning)	Read Fault Code	
Grand i10/Xcent(BA)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Grand i10/Xcent(BA)	2016	General	AC(Air Conditioning)	Read Data Stream	
Grand i10/Xcent(BA)	2016	General	AC(Air Conditioning)	Actuation Test	
Grand i10/Xcent(BA)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Grand i10/Xcent(BA)	2016	General	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2016	General	BCM(Body Control Module)	Read Fault Code	
Grand i10/Xcent(BA)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2016	General	BCM(Body Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2016	General	BCM(Body Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2016	General	BCM(Body Control Module)	Special Function	User Option
Grand i10/Xcent(BA)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grand i10/Xcent(BA)	2016	General	EPS(Electronic Power Steering)	Version Information	
Grand i10/Xcent(BA)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Grand i10/Xcent(BA)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grand i10/Xcent(BA)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Grand i10/Xcent(BA)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Grand i10/Xcent(BA)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Version Information	
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Read Fault Code	
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Clear Fault Memory	
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Read Data Stream	
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Actuation Test	
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Grand i10/Xcent(BA)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grand i10/Xcent(BA)	2016	General	IMM(Immobilizer)	Read Data Stream	
Grand i10/Xcent(BA)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Grand i10/Xcent(BA)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grand i10/Xcent(BA)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Grand i10/Xcent(BA)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Grand i10/Xcent(BA)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Grand i10/Xcent(BA)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Grand i10/Xcent(BA)	2016	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Grand i10/Xcent(BA)	2016	General	TCM(Transmission Control Module)	Version Information	
Grand i10/Xcent(BA)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Grand i10/Xcent(BA)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Version Information	
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grand i10/Xcent(BA)	2015	General	TCM(Transmission Control Module)	Version Information	
Grand i10/Xcent(BA)	2015	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grand i10/Xcent(BA)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Grand i10/Xcent(BA)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grand i10/Xcent(BA)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grand i10/Xcent(BA)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	ABS(Anti-lock Braking System)	Read FreezeData	
Grand i10/Xcent(BA)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Grand i10/Xcent(BA)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grand i10/Xcent(BA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
Grand i10/Xcent(BA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grand i10/Xcent(BA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Grand i10/Xcent(BA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
Grand i10/Xcent(BA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grand i10/Xcent(BA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grand i10/Xcent(BA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grand i10/Xcent(BA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Grand i10/Xcent(BA)	2015	General	AC(Air Conditioning)	Version Information	
Grand i10/Xcent(BA)	2015	General	AC(Air Conditioning)	Read Fault Code	
Grand i10/Xcent(BA)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Grand i10/Xcent(BA)	2015	General	AC(Air Conditioning)	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	AC(Air Conditioning)	Actuation Test	
Grand i10/Xcent(BA)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Grand i10/Xcent(BA)	2015	General	BCM(Body Control Module)	Version Information	
Grand i10/Xcent(BA)	2015	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Grand i10/Xcent(BA)	2015	General	BCM(Body Control Module)	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	BCM(Body Control Module)	Actuation Test	
Grand i10/Xcent(BA)	2015	General	BCM(Body Control Module)	Special Function	User Option
Grand i10/Xcent(BA)	2015	General	EPS(Electronic Power Steering)	Version Information	
Grand i10/Xcent(BA)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Grand i10/Xcent(BA)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grand i10/Xcent(BA)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Grand i10/Xcent(BA)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grand i10/Xcent(BA)	2015	General	IMM(Immobilizer)	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Grand i10/Xcent(BA)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grand i10/Xcent(BA)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grand i10/Xcent(BA)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Grand i10/Xcent(BA)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Version Information	
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Read Fault Code	
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Clear Fault Memory	
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Actuation Test	
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Grand i10/Xcent(BA)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grand i10/Xcent(BA)	2015	General	Cluster Module	Version Information	
Grand i10/Xcent(BA)	2015	General	Cluster Module	Read Fault Code	
Grand i10/Xcent(BA)	2015	General	Cluster Module	Clear Fault Memory	
Grand i10/Xcent(BA)	2015	General	Cluster Module	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	Cluster Module	Actuation Test	
Grand i10/Xcent(BA)	2015	General	Cluster Module	Special Function	CLU Variant Coding
Grand i10/Xcent(BA)	2015	General	Smart Junction Block	Version Information	
Grand i10/Xcent(BA)	2015	General	Smart Junction Block	Read Fault Code	
Grand i10/Xcent(BA)	2015	General	Smart Junction Block	Clear Fault Memory	
Grand i10/Xcent(BA)	2015	General	Smart Junction Block	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	Smart Junction Block	Actuation Test	
Grand i10/Xcent(BA)	2015	General	Smart Junction Block	Special Function	User Option
Grand i10/Xcent(BA)	2015	General	Transmitter Code Saving	Read Data Stream	
Grand i10/Xcent(BA)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Grand i10/Xcent(BA)	2015	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Version Information	
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Actuation Test	
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting

model	year	area	system	function	subfunction
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grand Santafe(NC)	2018	General	TCM(Transmission Control Module)	Version Information	
Grand Santafe(NC)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Grand Santafe(NC)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Grand Santafe(NC)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Grand Santafe(NC)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Grand Santafe(NC)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grand Santafe(NC)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC)Only
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Grand Santafe(NC)	2018	General	Electric Parking Brake	Version Information	
Grand Santafe(NC)	2018	General	Electric Parking Brake	Read Fault Code	
Grand Santafe(NC)	2018	General	Electric Parking Brake	Clear Fault Memory	
Grand Santafe(NC)	2018	General	Electric Parking Brake	Read Data Stream	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2018	General	Electric Parking Brake	Actuation Test	
Grand Santafe(NC)	2018	General	Electric Parking Brake	Special Function	EPB Variant Coding
Grand Santafe(NC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grand Santafe(NC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grand Santafe(NC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grand Santafe(NC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grand Santafe(NC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Grand Santafe(NC)	2018	General	AC(Air Conditioning)	Version Information	
Grand Santafe(NC)	2018	General	AC(Air Conditioning)	Read Fault Code	
Grand Santafe(NC)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Grand Santafe(NC)	2018	General	AC(Air Conditioning)	Read Data Stream	
Grand Santafe(NC)	2018	General	AC(Air Conditioning)	Actuation Test	
Grand Santafe(NC)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Grand Santafe(NC)	2018	General	BCM(Body Control Module)	Version Information	
Grand Santafe(NC)	2018	General	BCM(Body Control Module)	Read Fault Code	
Grand Santafe(NC)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2018	General	BCM(Body Control Module)	Read Data Stream	
Grand Santafe(NC)	2018	General	BCM(Body Control Module)	Actuation Test	
Grand Santafe(NC)	2018	General	BCM(Body Control Module)	Special Function	User Option
Grand Santafe(NC)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Grand Santafe(NC)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grand Santafe(NC)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Grand Santafe(NC)	2018	General	BCM(Body Control Module)	Special Function	Power Tailgate Mode Configuration
Grand Santafe(NC)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grand Santafe(NC)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grand Santafe(NC)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grand Santafe(NC)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grand Santafe(NC)	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Grand Santafe(NC)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
Grand Santafe(NC)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grand Santafe(NC)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grand Santafe(NC)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grand Santafe(NC)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Grand Santafe(NC)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Grand Santafe(NC)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Grand Santafe(NC)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Grand Santafe(NC)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Grand Santafe(NC)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Grand Santafe(NC)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Grand Santafe(NC)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Grand Santafe(NC)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Grand Santafe(NC)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Grand Santafe(NC)	2018	General	EPS(Electronic Power Steering)	Version Information	
Grand Santafe(NC)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Grand Santafe(NC)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grand Santafe(NC)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Grand Santafe(NC)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Grand Santafe(NC)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Grand Santafe(NC)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Grand Santafe(NC)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grand Santafe(NC)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Grand Santafe(NC)	2018	General	Driveshaft	Version Information	
Grand Santafe(NC)	2018	General	Driveshaft	Read Fault Code	
Grand Santafe(NC)	2018	General	Driveshaft	Clear Fault Memory	
Grand Santafe(NC)	2018	General	Driveshaft	Read Data Stream	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2018	General	Driveshaft	Actuation Test	
Grand Santafe(NC)	2018	General	Driveshaft	Special Function	Clutch Learning Read
Grand Santafe(NC)	2018	General	Driveshaft	Special Function	Clutch Learning Reset
Grand Santafe(NC)	2018	General	Driveshaft	Special Function	Clutch Learning Write
Grand Santafe(NC)	2018	General	Smart Key Unit	Version Information	
Grand Santafe(NC)	2018	General	Smart Key Unit	Read Fault Code	
Grand Santafe(NC)	2018	General	Smart Key Unit	Clear Fault Memory	
Grand Santafe(NC)	2018	General	Smart Key Unit	Read Data Stream	
Grand Santafe(NC)	2018	General	Smart Key Unit	Actuation Test	
Grand Santafe(NC)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grand Santafe(NC)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Grand Santafe(NC)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Grand Santafe(NC)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Grand Santafe(NC)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Grand Santafe(NC)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Grand Santafe(NC)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grand Santafe(NC)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Grand Santafe(NC)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grand Santafe(NC)	2018	General	Smart Cruise Control	Version Information	
Grand Santafe(NC)	2018	General	Smart Cruise Control	Read Fault Code	
Grand Santafe(NC)	2018	General	Smart Cruise Control	Clear Fault Memory	
Grand Santafe(NC)	2018	General	Smart Cruise Control	Read Data Stream	
Grand Santafe(NC)	2018	General	Smart Cruise Control	Special Function	Radar Sensor Alignment(SCG/AFD)
Grand Santafe(NC)	2018	General	Smart Cruise Control	Special Function	Variant Coding
Grand Santafe(NC)	2018	General	Blind Spot Detection	Version Information	
Grand Santafe(NC)	2018	General	Blind Spot Detection	Read Fault Code	
Grand Santafe(NC)	2018	General	Blind Spot Detection	Clear Fault Memory	
Grand Santafe(NC)	2018	General	Blind Spot Detection	Read Data Stream	
Grand Santafe(NC)	2018	General	Blind Spot Detection	Actuation Test	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Grand Santafe(NC)	2018	General	Lane Departure Warning System	Version Information	
Grand Santafe(NC)	2018	General	Lane Departure Warning System	Read Fault Code	
Grand Santafe(NC)	2018	General	Lane Departure Warning System	Clear Fault Memory	
Grand Santafe(NC)	2018	General	Lane Departure Warning System	Read Data Stream	
Grand Santafe(NC)	2018	General	Lane Departure Warning System	Special Function	SPC Calibration
Grand Santafe(NC)	2018	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Grand Santafe(NC)	2018	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Grand Santafe(NC)	2018	General	Smart Parking Assist System	Version Information	
Grand Santafe(NC)	2018	General	Smart Parking Assist System	Read Fault Code	
Grand Santafe(NC)	2018	General	Smart Parking Assist System	Clear Fault Memory	
Grand Santafe(NC)	2018	General	Smart Parking Assist System	Read Data Stream	
Grand Santafe(NC)	2018	General	Smart Parking Assist System	Actuation Test	
Grand Santafe(NC)	2018	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Grand Santafe(NC)	2018	General	Around View Monitor System	Version Information	
Grand Santafe(NC)	2018	General	Around View Monitor System	Read Fault Code	
Grand Santafe(NC)	2018	General	Around View Monitor System	Clear Fault Memory	
Grand Santafe(NC)	2018	General	Around View Monitor System	Read Data Stream	
Grand Santafe(NC)	2018	General	Around View Monitor System	Actuation Test	
Grand Santafe(NC)	2018	General	Active Hood System	Version Information	
Grand Santafe(NC)	2018	General	Active Hood System	Read Fault Code	
Grand Santafe(NC)	2018	General	Active Hood System	Clear Fault Memory	
Grand Santafe(NC)	2018	General	Active Hood System	Read Data Stream	
Grand Santafe(NC)	2018	General	Active Hood System	Actuation Test	
Grand Santafe(NC)	2018	General	Telematics Unit	Version Information	
Grand Santafe(NC)	2018	General	Telematics Unit	Read Fault Code	
Grand Santafe(NC)	2018	General	Telematics Unit	Clear Fault Memory	
Grand Santafe(NC)	2018	General	IMM(Immobilizer)	Read Fault Code	
Grand Santafe(NC)	2018	General	IMM(Immobilizer)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2018	General	IMM(Immobilizer)	Read Data Stream	
Grand Santafe(NC)	2018	General	IMM(Immobilizer)	Special Function	Password
Grand Santafe(NC)	2018	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Grand Santafe(NC)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grand Santafe(NC)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grand Santafe(NC)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Grand Santafe(NC)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Grand Santafe(NC)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Grand Santafe(NC)	2018	General	TCM(Transmission Control Module)	Special Function	Automatic-Learning Mode
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Grand Santafe(NC)	2018	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Grand Santafe(NC)	2018	General	Power Tail Gate	Version Information	
Grand Santafe(NC)	2018	General	Power Tail Gate	Read Fault Code	
Grand Santafe(NC)	2018	General	Power Tail Gate	Clear Fault Memory	
Grand Santafe(NC)	2018	General	Power Tail Gate	Read Data Stream	
Grand Santafe(NC)	2018	General	Power Tail Gate	Special Function	Power Trunk Mode Configuration
Grand Santafe(NC)	2018	General	Power Tail Gate	Special Function	User Option
Grand Santafe(NC)	2018	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Grand Santafe(NC)	2018	General	Smart Key	Version Information	
Grand Santafe(NC)	2018	General	Smart Key	Read Fault Code	
Grand Santafe(NC)	2018	General	Smart Key	Clear Fault Memory	
Grand Santafe(NC)	2018	General	Smart Key	Read Data Stream	
Grand Santafe(NC)	2018	General	Smart Key	Actuation Test	
Grand Santafe(NC)	2018	General	Smart Key	Special Function	User Option
Grand Santafe(NC)	2018	General	Smart Key	Special Function	ESCL Open Status Check
Grand Santafe(NC)	2018	General	Smart Key	Special Function	ESCL Status Information
Grand Santafe(NC)	2018	General	Smart Key	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
Grand Santafe(NC)	2018	General	Smart Key	Special Function	Serial Communication Line Check
Grand Santafe(NC)	2018	General	Smart Key	Special Function	Antenna Status Check
Grand Santafe(NC)	2018	General	Smart Key	Special Function	Neutralization Mode
Grand Santafe(NC)	2018	General	Smart Key	Special Function	SMK Status Information
Grand Santafe(NC)	2018	General	Smart Key	Special Function	Smart Key Code Saving
Grand Santafe(NC)	2018	General	Smart Key	Special Function	Current FOB Key Check
Grand Santafe(NC)	2018	General	CCS(Cruise Control System)	Version Information	
Grand Santafe(NC)	2018	General	CCS(Cruise Control System)	Read Fault Code	
Grand Santafe(NC)	2018	General	CCS(Cruise Control System)	Clear Fault Memory	
Grand Santafe(NC)	2018	General	CCS(Cruise Control System)	Read Data Stream	
Grand Santafe(NC)	2018	General	CCS(Cruise Control System)	Special Function	Variant Coding
Grand Santafe(NC)	2018	General	CCS(Cruise Control System)	Special Function	Radial Sensor Alignment(SCC/AFD)
Grand Santafe(NC)	2018	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Grand Santafe(NC)	2018	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grand Santafe(NC)	2018	General	IMM(Immobilizer)	Special Function	Learnt Keys
Grand Santafe(NC)	2018	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Grand Santafe(NC)	2018	General	Transmitter Code Saving	Read Data Stream	
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grand Santafe(NC)	2018	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Grand Santafe(NC)	2018	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Version Information	
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Actuation Test	
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grand Santafe(NC)	2017	General	TCM(Transmission Control Module)	Version Information	
Grand Santafe(NC)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Grand Santafe(NC)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Grand Santafe(NC)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Grand Santafe(NC)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Grand Santafe(NC)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grand Santafe(NC)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset/(ESP/ESC)Only)
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)

model	year	area	system	function	subfunction
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Grand Santafe(NC)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grand Santafe(NC)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grand Santafe(NC)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grand Santafe(NC)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grand Santafe(NC)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Grand Santafe(NC)	2017	General	AC(Air Conditioning)	Version Information	
Grand Santafe(NC)	2017	General	AC(Air Conditioning)	Read Fault Code	
Grand Santafe(NC)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Grand Santafe(NC)	2017	General	AC(Air Conditioning)	Read Data Stream	
Grand Santafe(NC)	2017	General	AC(Air Conditioning)	Actuation Test	
Grand Santafe(NC)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Grand Santafe(NC)	2017	General	BCM(Body Control Module)	Version Information	
Grand Santafe(NC)	2017	General	BCM(Body Control Module)	Read Fault Code	
Grand Santafe(NC)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2017	General	BCM(Body Control Module)	Read Data Stream	
Grand Santafe(NC)	2017	General	BCM(Body Control Module)	Actuation Test	
Grand Santafe(NC)	2017	General	BCM(Body Control Module)	Special Function	User Option
Grand Santafe(NC)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Grand Santafe(NC)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grand Santafe(NC)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Grand Santafe(NC)	2017	General	BCM(Body Control Module)	Special Function	Power Tailgate Mode Configuration
Grand Santafe(NC)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grand Santafe(NC)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grand Santafe(NC)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grand Santafe(NC)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grand Santafe(NC)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Grand Santafe(NC)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
Grand Santafe(NC)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grand Santafe(NC)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grand Santafe(NC)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grand Santafe(NC)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Grand Santafe(NC)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Grand Santafe(NC)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Grand Santafe(NC)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Grand Santafe(NC)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Grand Santafe(NC)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Grand Santafe(NC)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Grand Santafe(NC)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Grand Santafe(NC)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Grand Santafe(NC)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Grand Santafe(NC)	2017	General	EPS(Electronic Power Steering)	Version Information	
Grand Santafe(NC)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Grand Santafe(NC)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grand Santafe(NC)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Grand Santafe(NC)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Grand Santafe(NC)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Grand Santafe(NC)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Grand Santafe(NC)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grand Santafe(NC)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Grand Santafe(NC)	2017	General	Driveshaft	Version Information	
Grand Santafe(NC)	2017	General	Driveshaft	Read Fault Code	
Grand Santafe(NC)	2017	General	Driveshaft	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Driveshaft	Read Data Stream	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2017	General	Driveshaft	Actuation Test	
Grand Santafe(NC)	2017	General	Driveshaft	Special Function	Clutch Learning Read
Grand Santafe(NC)	2017	General	Driveshaft	Special Function	Clutch Learning Reset
Grand Santafe(NC)	2017	General	Driveshaft	Special Function	Clutch Learning Write
Grand Santafe(NC)	2017	General	Smart Key Unit	Version Information	
Grand Santafe(NC)	2017	General	Smart Key Unit	Read Fault Code	
Grand Santafe(NC)	2017	General	Smart Key Unit	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Smart Key Unit	Read Data Stream	
Grand Santafe(NC)	2017	General	Smart Key Unit	Actuation Test	
Grand Santafe(NC)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grand Santafe(NC)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Grand Santafe(NC)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Grand Santafe(NC)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Grand Santafe(NC)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Grand Santafe(NC)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Grand Santafe(NC)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grand Santafe(NC)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Grand Santafe(NC)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grand Santafe(NC)	2017	General	Blind Spot Detection	Version Information	
Grand Santafe(NC)	2017	General	Blind Spot Detection	Read Fault Code	
Grand Santafe(NC)	2017	General	Blind Spot Detection	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Blind Spot Detection	Read Data Stream	
Grand Santafe(NC)	2017	General	Blind Spot Detection	Actuation Test	
Grand Santafe(NC)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Version Information	
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Read Fault Code	
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Read Data Stream	
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Special Function	SPC Calibration

model	year	area	system	function	subfunction
Grand Santafe(NC)	2017	General	Lane Depature Warning System	Special Function	SPTAC Calibration
Grand Santafe(NC)	2017	General	Lane Depature Warning System	Special Function	LDWS Variant Coding
Grand Santafe(NC)	2017	General	Smart Parking Assist System	Version Information	
Grand Santafe(NC)	2017	General	Smart Parking Assist System	Read Fault Code	
Grand Santafe(NC)	2017	General	Smart Parking Assist System	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Smart Parking Assist System	Read Data Stream	
Grand Santafe(NC)	2017	General	Smart Parking Assist System	Actuation Test	
Grand Santafe(NC)	2017	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Grand Santafe(NC)	2017	General	Around View Monitor Systeming	Version Information	
Grand Santafe(NC)	2017	General	Around View Monitor Systeming	Read Fault Code	
Grand Santafe(NC)	2017	General	Around View Monitor Systeming	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Around View Monitor Systeming	Read Data Stream	
Grand Santafe(NC)	2017	General	Around View Monitor Systeming	Actuation Test	
Grand Santafe(NC)	2017	General	Active Hood System	Version Information	
Grand Santafe(NC)	2017	General	Active Hood System	Read Fault Code	
Grand Santafe(NC)	2017	General	Active Hood System	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Active Hood System	Read Data Stream	
Grand Santafe(NC)	2017	General	Active Hood System	Actuation Test	
Grand Santafe(NC)	2017	General	Smart Cruise Control	Version Information	
Grand Santafe(NC)	2017	General	Smart Cruise Control	Read Fault Code	
Grand Santafe(NC)	2017	General	Smart Cruise Control	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Smart Cruise Control	Read Data Stream	
Grand Santafe(NC)	2017	General	Smart Cruise Control	Special Function	radar sensor Alignment(SCC/AFD)
Grand Santafe(NC)	2017	General	Smart Cruise Control	Special Function	Variant Coding
Grand Santafe(NC)	2017	General	Telematics Unit	Version Information	
Grand Santafe(NC)	2017	General	Telematics Unit	Read Fault Code	
Grand Santafe(NC)	2017	General	Telematics Unit	Clear Fault Memory	
Grand Santafe(NC)	2017	General	IMM(Immobilizer)	Read Fault Code	
Grand Santafe(NC)	2017	General	IMM(Immobilizer)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2017	General	IMM(Immobilizer)	Read Data Stream	
Grand Santafe(NC)	2017	General	IMM(Immobilizer)	Special Function	Password
Grand Santafe(NC)	2017	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Grand Santafe(NC)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grand Santafe(NC)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grand Santafe(NC)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Grand Santafe(NC)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Grand Santafe(NC)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Version Information	
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Read Fault Code	
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Read Data Stream	
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Special Function	SPC Calibration
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Grand Santafe(NC)	2017	General	TCM(Transmission Control Module)	Special Function	Automatic-Learning Mode
Grand Santafe(NC)	2017	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Grand Santafe(NC)	2017	General	Power Tail Gate	Version Information	
Grand Santafe(NC)	2017	General	Power Tail Gate	Read Fault Code	
Grand Santafe(NC)	2017	General	Power Tail Gate	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Power Tail Gate	Read Data Stream	
Grand Santafe(NC)	2017	General	Power Tail Gate	Special Function	Power Trunk Mode Configuration

model	year	area	system	function	subfunction
Grand Santafe(NC)	2017	General	Power Tail Gate	Special Function	User Option
Grand Santafe(NC)	2017	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Grand Santafe(NC)	2017	General	Smart Key	Version Information	
Grand Santafe(NC)	2017	General	Smart Key	Read Fault Code	
Grand Santafe(NC)	2017	General	Smart Key	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Smart Key	Read Data Stream	
Grand Santafe(NC)	2017	General	Smart Key	Actuation Test	
Grand Santafe(NC)	2017	General	Smart Key	Special Function	User Option
Grand Santafe(NC)	2017	General	Smart Key	Special Function	ESCL Open Status Check
Grand Santafe(NC)	2017	General	Smart Key	Special Function	ESCL Status Information
Grand Santafe(NC)	2017	General	Smart Key	Special Function	FOB Key Status Information
Grand Santafe(NC)	2017	General	Smart Key	Special Function	Serial Communication Line Check
Grand Santafe(NC)	2017	General	Smart Key	Special Function	Antenna Status Check
Grand Santafe(NC)	2017	General	Smart Key	Special Function	Neutralization Mode
Grand Santafe(NC)	2017	General	Smart Key	Special Function	SMK Status Information
Grand Santafe(NC)	2017	General	Smart Key	Special Function	Smart Key Code Saving
Grand Santafe(NC)	2017	General	Smart Key	Special Function	Current FOB Key Check
Grand Santafe(NC)	2017	General	CCS(Cruise Control System)	Version Information	
Grand Santafe(NC)	2017	General	CCS(Cruise Control System)	Read Fault Code	
Grand Santafe(NC)	2017	General	CCS(Cruise Control System)	Clear Fault Memory	
Grand Santafe(NC)	2017	General	CCS(Cruise Control System)	Read Data Stream	
Grand Santafe(NC)	2017	General	CCS(Cruise Control System)	Special Function	Variant Coding
Grand Santafe(NC)	2017	General	CCS(Cruise Control System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Grand Santafe(NC)	2017	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Grand Santafe(NC)	2017	General	Around View Monitor System	Version Information	
Grand Santafe(NC)	2017	General	Around View Monitor System	Read Fault Code	
Grand Santafe(NC)	2017	General	Around View Monitor System	Clear Fault Memory	
Grand Santafe(NC)	2017	General	Around View Monitor System	Read Data Stream	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2017	General	Around View Monitor System	Actuation Test	
Grand Santafe(NC)	2017	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grand Santafe(NC)	2017	General	IMM(Immobilizer)	Special Function	Learnt Keys
Grand Santafe(NC)	2017	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Grand Santafe(NC)	2017	General	Transmitter Code Saving	Read Data Stream	
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grand Santafe(NC)	2017	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Grand Santafe(NC)	2017	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Replacement)
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Version Information	
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Actuation Test	
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grand Santafe(NC)	2016	General	TCM(Transmission Control Module)	Version Information	
Grand Santafe(NC)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Grand Santafe(NC)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Grand Santafe(NC)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Grand Santafe(NC)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Grand Santafe(NC)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Grand Santafe(NC)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Grand Santafe(NC)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grand Santafe(NC)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grand Santafe(NC)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grand Santafe(NC)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grand Santafe(NC)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Grand Santafe(NC)	2016	General	AC(Air Conditioning)	Version Information	
Grand Santafe(NC)	2016	General	AC(Air Conditioning)	Read Fault Code	
Grand Santafe(NC)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Grand Santafe(NC)	2016	General	AC(Air Conditioning)	Read Data Stream	
Grand Santafe(NC)	2016	General	AC(Air Conditioning)	Actuation Test	
Grand Santafe(NC)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Grand Santafe(NC)	2016	General	BCM(Body Control Module)	Version Information	
Grand Santafe(NC)	2016	General	BCM(Body Control Module)	Read Fault Code	
Grand Santafe(NC)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2016	General	BCM(Body Control Module)	Read Data Stream	
Grand Santafe(NC)	2016	General	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2016	General	BCM(Body Control Module)	Special Function	User Option
Grand Santafe(NC)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Grand Santafe(NC)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grand Santafe(NC)	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Grand Santafe(NC)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grand Santafe(NC)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grand Santafe(NC)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grand Santafe(NC)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grand Santafe(NC)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Grand Santafe(NC)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Grand Santafe(NC)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grand Santafe(NC)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grand Santafe(NC)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grand Santafe(NC)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Grand Santafe(NC)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Grand Santafe(NC)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Grand Santafe(NC)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Grand Santafe(NC)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Grand Santafe(NC)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Grand Santafe(NC)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Grand Santafe(NC)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Grand Santafe(NC)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Grand Santafe(NC)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Grand Santafe(NC)	2016	General	EPS(Electronic Power Steering)	Version Information	
Grand Santafe(NC)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Grand Santafe(NC)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grand Santafe(NC)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Grand Santafe(NC)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Grand Santafe(NC)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)

model	year	area	system	function	subfunction
Grand Santafe(NC)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Grand Santafe(NC)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grand Santafe(NC)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Grand Santafe(NC)	2016	General	Driveshaft	Version Information	
Grand Santafe(NC)	2016	General	Driveshaft	Read Fault Code	
Grand Santafe(NC)	2016	General	Driveshaft	Clear Fault Memory	
Grand Santafe(NC)	2016	General	Driveshaft	Read Data Stream	
Grand Santafe(NC)	2016	General	Driveshaft	Actuation Test	
Grand Santafe(NC)	2016	General	Driveshaft	Special Function	Clutch Learning Read
Grand Santafe(NC)	2016	General	Driveshaft	Special Function	Clutch Learning Reset
Grand Santafe(NC)	2016	General	Driveshaft	Special Function	Clutch Learning Write
Grand Santafe(NC)	2016	General	Smart Key Unit	Version Information	
Grand Santafe(NC)	2016	General	Smart Key Unit	Read Fault Code	
Grand Santafe(NC)	2016	General	Smart Key Unit	Clear Fault Memory	
Grand Santafe(NC)	2016	General	Smart Key Unit	Read Data Stream	
Grand Santafe(NC)	2016	General	Smart Key Unit	Actuation Test	
Grand Santafe(NC)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grand Santafe(NC)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Grand Santafe(NC)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Grand Santafe(NC)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Grand Santafe(NC)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Grand Santafe(NC)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Grand Santafe(NC)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grand Santafe(NC)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Grand Santafe(NC)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grand Santafe(NC)	2016	General	Lane Departure Warning System	Version Information	
Grand Santafe(NC)	2016	General	Lane Departure Warning System	Read Fault Code	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2016	General	Lane Depature Warning System	Clear Fault Memory	
Grand Santafe(NC)	2016	General	Lane Depature Warning System	Read Data Stream	
Grand Santafe(NC)	2016	General	Lane Depature Warning System	Special Function	LDWS Region Code
Grand Santafe(NC)	2016	General	Lane Depature Warning System	Special Function	LDWS Reference Point Calibration
Grand Santafe(NC)	2016	General	Smart Parking Assist System	Version Information	
Grand Santafe(NC)	2016	General	Smart Parking Assist System	Read Fault Code	
Grand Santafe(NC)	2016	General	Smart Parking Assist System	Clear Fault Memory	
Grand Santafe(NC)	2016	General	Smart Parking Assist System	Read Data Stream	
Grand Santafe(NC)	2016	General	Smart Parking Assist System	Actuation Test	
Grand Santafe(NC)	2016	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Grand Santafe(NC)	2016	General	Active Hood System	Version Information	
Grand Santafe(NC)	2016	General	Active Hood System	Read Fault Code	
Grand Santafe(NC)	2016	General	Active Hood System	Clear Fault Memory	
Grand Santafe(NC)	2016	General	Active Hood System	Read Data Stream	
Grand Santafe(NC)	2016	General	Active Hood System	Actuation Test	
Grand Santafe(NC)	2016	General	IMM(Immobilizer)	Read Fault Code	
Grand Santafe(NC)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
Grand Santafe(NC)	2016	General	IMM(Immobilizer)	Read Data Stream	
Grand Santafe(NC)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Grand Santafe(NC)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grand Santafe(NC)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grand Santafe(NC)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Grand Santafe(NC)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Grand Santafe(NC)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Grand Santafe(NC)	2016	General	TCM(Transmission Control Module)	Special Function	Automatic-Learning Mode
Grand Santafe(NC)	2016	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Grand Santafe(NC)	2016	General	Power Tail Gate	Version Information	
Grand Santafe(NC)	2016	General	Power Tail Gate	Read Fault Code	
Grand Santafe(NC)	2016	General	Power Tail Gate	Clear Fault Memory	
Grand Santafe(NC)	2016	General	Power Tail Gate	Read Data Stream	
Grand Santafe(NC)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Grand Santafe(NC)	2016	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Grand Santafe(NC)	2016	General	Smart Key	Version Information	
Grand Santafe(NC)	2016	General	Smart Key	Read Fault Code	
Grand Santafe(NC)	2016	General	Smart Key	Clear Fault Memory	
Grand Santafe(NC)	2016	General	Smart Key	Read Data Stream	
Grand Santafe(NC)	2016	General	Smart Key	Actuation Test	
Grand Santafe(NC)	2016	General	Smart Key	Special Function	User Option
Grand Santafe(NC)	2016	General	Smart Key	Special Function	ESCL Open Status Check
Grand Santafe(NC)	2016	General	Smart Key	Special Function	ESCL Status Information
Grand Santafe(NC)	2016	General	Smart Key	Special Function	FOB Key Status Information
Grand Santafe(NC)	2016	General	Smart Key	Special Function	Serial Communication Line Check
Grand Santafe(NC)	2016	General	Smart Key	Special Function	Antenna Status Check
Grand Santafe(NC)	2016	General	Smart Key	Special Function	Neutralization Mode
Grand Santafe(NC)	2016	General	Smart Key	Special Function	SMK Status Information
Grand Santafe(NC)	2016	General	Smart Key	Special Function	Smart Key Code Saving
Grand Santafe(NC)	2016	General	Smart Key	Special Function	Current FOB Key Check
Grand Santafe(NC)	2016	General	CCS(Cruise Control System)	Version Information	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2016	General	CCS(Cruise Control System)	Read Fault Code	
Grand Santafe(NC)	2016	General	CCS(Cruise Control System)	Clear Fault Memory	
Grand Santafe(NC)	2016	General	CCS(Cruise Control System)	Read Data Stream	
Grand Santafe(NC)	2016	General	CCS(Cruise Control System)	Special Function	Variant Coding
Grand Santafe(NC)	2016	General	CCS(Cruise Control System)	Special Function	Radar Sensor Alignment(SCC/AFD)
Grand Santafe(NC)	2016	General	Lane Departure Warning System	Version Information	
Grand Santafe(NC)	2016	General	Lane Departure Warning System	Read Fault Code	
Grand Santafe(NC)	2016	General	Lane Departure Warning System	Clear Fault Memory	
Grand Santafe(NC)	2016	General	Lane Departure Warning System	Read Data Stream	
Grand Santafe(NC)	2016	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Grand Santafe(NC)	2016	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Grand Santafe(NC)	2016	General	Around View Monitor System	Version Information	
Grand Santafe(NC)	2016	General	Around View Monitor System	Read Fault Code	
Grand Santafe(NC)	2016	General	Around View Monitor System	Clear Fault Memory	
Grand Santafe(NC)	2016	General	Around View Monitor System	Read Data Stream	
Grand Santafe(NC)	2016	General	Around View Monitor System	Actuation Test	
Grand Santafe(NC)	2016	General	Telematics Unit	Version Information	
Grand Santafe(NC)	2016	General	Telematics Unit	Read Fault Code	
Grand Santafe(NC)	2016	General	Telematics Unit	Clear Fault Memory	
Grand Santafe(NC)	2016	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grand Santafe(NC)	2016	General	IMM(Immobilizer)	Special Function	Learnt Keys
Grand Santafe(NC)	2016	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grand Santafe(NC)	2016	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Grand Santafe(NC)	2016	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Version Information	
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Actuation Test	
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grand Santafe(NC)	2015	General	TCM(Transmission Control Module)	Version Information	
Grand Santafe(NC)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Grand Santafe(NC)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Grand Santafe(NC)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Grand Santafe(NC)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Grand Santafe(NC)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grand Santafe(NC)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)

model	year	area	system	function	subfunction
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Grand Santafe(NC)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grand Santafe(NC)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grand Santafe(NC)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grand Santafe(NC)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grand Santafe(NC)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Grand Santafe(NC)	2015	General	AC(Air Conditioning)	Version Information	
Grand Santafe(NC)	2015	General	AC(Air Conditioning)	Read Fault Code	
Grand Santafe(NC)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Grand Santafe(NC)	2015	General	AC(Air Conditioning)	Read Data Stream	
Grand Santafe(NC)	2015	General	AC(Air Conditioning)	Actuation Test	
Grand Santafe(NC)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Grand Santafe(NC)	2015	General	BCM(Body Control Module)	Version Information	
Grand Santafe(NC)	2015	General	BCM(Body Control Module)	Read Fault Code	
Grand Santafe(NC)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2015	General	BCM(Body Control Module)	Read Data Stream	
Grand Santafe(NC)	2015	General	BCM(Body Control Module)	Actuation Test	
Grand Santafe(NC)	2015	General	BCM(Body Control Module)	Special Function	User Option
Grand Santafe(NC)	2015	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Grand Santafe(NC)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grand Santafe(NC)	2015	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Grand Santafe(NC)	2015	General	EPB(Electrical Parking Brake)	Version Information	
Grand Santafe(NC)	2015	General	EPB(Electrical Parking Brake)	Read Fault Code	
Grand Santafe(NC)	2015	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Grand Santafe(NC)	2015	General	EPB(Electrical Parking Brake)	Read Data Stream	
Grand Santafe(NC)	2015	General	EPB(Electrical Parking Brake)	Actuation Test	
Grand Santafe(NC)	2015	General	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Grand Santafe(NC)	2015	General	EPS(Electronic Power Steering)	Version Information	
Grand Santafe(NC)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grand Santafe(NC)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Grand Santafe(NC)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Grand Santafe(NC)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Grand Santafe(NC)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Grand Santafe(NC)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grand Santafe(NC)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Grand Santafe(NC)	2015	General	4WD Control	Version Information	
Grand Santafe(NC)	2015	General	4WD Control	Read Fault Code	
Grand Santafe(NC)	2015	General	4WD Control	Clear Fault Memory	
Grand Santafe(NC)	2015	General	4WD Control	Read Data Stream	
Grand Santafe(NC)	2015	General	4WD Control	Actuation Test	
Grand Santafe(NC)	2015	General	4WD Control	Special Function	Clutch Learning Read
Grand Santafe(NC)	2015	General	4WD Control	Special Function	Clutch Learning Reset
Grand Santafe(NC)	2015	General	4WD Control	Special Function	Clutch Learning Write
Grand Santafe(NC)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grand Santafe(NC)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grand Santafe(NC)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grand Santafe(NC)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grand Santafe(NC)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Grand Santafe(NC)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Grand Santafe(NC)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grand Santafe(NC)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grand Santafe(NC)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grand Santafe(NC)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Grand Santafe(NC)	2015	General	IMM(Immobilizer)	Read Fault Code	
Grand Santafe(NC)	2015	General	IMM(Immobilizer)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2015	General	IMM(Immobilizer)	Read Data Stream	
Grand Santafe(NC)	2015	General	IMM(Immobilizer)	Special Function	Password
Grand Santafe(NC)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Grand Santafe(NC)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grand Santafe(NC)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grand Santafe(NC)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Grand Santafe(NC)	2015	General	Smart Key Unit	Version Information	
Grand Santafe(NC)	2015	General	Smart Key Unit	Read Fault Code	
Grand Santafe(NC)	2015	General	Smart Key Unit	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Smart Key Unit	Read Data Stream	
Grand Santafe(NC)	2015	General	Smart Key Unit	Actuation Test	
Grand Santafe(NC)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grand Santafe(NC)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Grand Santafe(NC)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Grand Santafe(NC)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Grand Santafe(NC)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Grand Santafe(NC)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Grand Santafe(NC)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grand Santafe(NC)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Grand Santafe(NC)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grand Santafe(NC)	2015	General	Active Hood System	Version Information	
Grand Santafe(NC)	2015	General	Active Hood System	Read Fault Code	
Grand Santafe(NC)	2015	General	Active Hood System	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Active Hood System	Read Data Stream	
Grand Santafe(NC)	2015	General	Active Hood System	Actuation Test	
Grand Santafe(NC)	2015	General	Adaptive Front Lighting System	Version Information	
Grand Santafe(NC)	2015	General	Adaptive Front Lighting System	Read Fault Code	
Grand Santafe(NC)	2015	General	Adaptive Front Lighting System	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Adaptive Front Lighting System	Read Data Stream	
Grand Santafe(NC)	2015	General	Adaptive Front Lighting System	Actuation Test	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2015	General	Adaptive Front Lighting System	Special Function	Calibration
Grand Santafe(NC)	2015	General	Adaptive Front Lighting System	Special Function	Parameter Download
Grand Santafe(NC)	2015	General	Auto Headlamp Leveling System	Version Information	
Grand Santafe(NC)	2015	General	Auto Headlamp Leveling System	Read Fault Code	
Grand Santafe(NC)	2015	General	Auto Headlamp Leveling System	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Auto Headlamp Leveling System	Read Data Stream	
Grand Santafe(NC)	2015	General	Auto Headlamp Leveling System	Actuation Test	
Grand Santafe(NC)	2015	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grand Santafe(NC)	2015	General	Auto Headlamp Leveling System	Special Function	Parameter Setting
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Version Information	
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Read Fault Code	
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Read Data Stream	
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Special Function	LDWS Region Code
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Grand Santafe(NC)	2015	General	Smart Parking Assist System	Version Information	
Grand Santafe(NC)	2015	General	Smart Parking Assist System	Read Fault Code	
Grand Santafe(NC)	2015	General	Smart Parking Assist System	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Smart Parking Assist System	Read Data Stream	
Grand Santafe(NC)	2015	General	Smart Parking Assist System	Actuation Test	
Grand Santafe(NC)	2015	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Grand Santafe(NC)	2015	General	Transmitter Code Saving	Read Data Stream	
Grand Santafe(NC)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Grand Santafe(NC)	2015	General	TCM(Transmission Control Module)	Special Function	Automatic-Learning Mode Auto Detected
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Special Function	Configuration Reset(ESP/ESC)Only
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration

model	year	area	system	function	subfunction
Grand Santafe(NC)	2015	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Grand Santafe(NC)	2015	General	Power Tail Gate	Version Information	
Grand Santafe(NC)	2015	General	Power Tail Gate	Read Fault Code	
Grand Santafe(NC)	2015	General	Power Tail Gate	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Power Tail Gate	Read Data Stream	
Grand Santafe(NC)	2015	General	Head Lamp	Version Information	
Grand Santafe(NC)	2015	General	Head Lamp	Read Fault Code	
Grand Santafe(NC)	2015	General	Head Lamp	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Head Lamp	Read Data Stream	
Grand Santafe(NC)	2015	General	Head Lamp	Actuation Test	
Grand Santafe(NC)	2015	General	Head Lamp	Special Function	Parameter Setting
Grand Santafe(NC)	2015	General	Head Lamp	Special Function	Headlamp Leveling
Grand Santafe(NC)	2015	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Grand Santafe(NC)	2015	General	Driveshaft	Version Information	
Grand Santafe(NC)	2015	General	Driveshaft	Read Fault Code	
Grand Santafe(NC)	2015	General	Driveshaft	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Driveshaft	Read Data Stream	
Grand Santafe(NC)	2015	General	Driveshaft	Actuation Test	
Grand Santafe(NC)	2015	General	Driveshaft	Special Function	Clutch Learning Read
Grand Santafe(NC)	2015	General	Driveshaft	Special Function	Clutch Learning Reset
Grand Santafe(NC)	2015	General	Driveshaft	Special Function	Clutch Learning Write
Grand Santafe(NC)	2015	General	Smart Key Unit	Special Function	User Option
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Version Information	
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Read Fault Code	
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Read Data Stream	
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Grand Santafe(NC)	2015	General	Lane Departure Warning System	Special Function	LDWS Region Code

model	year	area	system	function	subfunction
Grand Santafe(NC)	2015	General	Parking Assist	Version Information	
Grand Santafe(NC)	2015	General	Parking Assist	Read Fault Code	
Grand Santafe(NC)	2015	General	Parking Assist	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Parking Assist	Read Data Stream	
Grand Santafe(NC)	2015	General	Parking Assist	Actuation Test	
Grand Santafe(NC)	2015	General	Parking Assist	Special Function	SPAS Variant Coding
Grand Santafe(NC)	2015	General	Telematics	Version Information	
Grand Santafe(NC)	2015	General	Telematics	Read Fault Code	
Grand Santafe(NC)	2015	General	Telematics	Clear Fault Memory	
Grand Santafe(NC)	2015	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grand Santafe(NC)	2015	General	IMM(Immobilizer)	Special Function	Learnt Keys
Grand Santafe(NC)	2015	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Grand Santafe(NC)	2015	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Grand Santafe(NC)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Grand Santafe(NC)	2015	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Grand Santafe(NC)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Grand Santafe(NC)	2015	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Grand Santafe(NC)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Grand Santafe(NC)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Grand Santafe(NC)	2015	General	Smart Key	Version Information	
Grand Santafe(NC)	2015	General	Smart Key	Read Fault Code	
Grand Santafe(NC)	2015	General	Smart Key	Clear Fault Memory	
Grand Santafe(NC)	2015	General	Smart Key	Read Data Stream	
Grand Santafe(NC)	2015	General	Smart Key	Actuation Test	
Grand Santafe(NC)	2015	General	Smart Key	Special Function	User Option
Grand Santafe(NC)	2015	General	Smart Key	Special Function	ESCL Open Status Check
Grand Santafe(NC)	2015	General	Smart Key	Special Function	ESCL Status Information
Grand Santafe(NC)	2015	General	Smart Key	Special Function	FOB Key Status Information
Grand Santafe(NC)	2015	General	Smart Key	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Grand Santafe(NC)	2015	General	Smart Key	Special Function	Antenna Status Check
Grand Santafe(NC)	2015	General	Smart Key	Special Function	Neutralization Mode
Grand Santafe(NC)	2015	General	Smart Key	Special Function	SMK Status Information
Grand Santafe(NC)	2015	General	Smart Key	Special Function	Smart Key Code Saving
Grand Santafe(NC)	2015	General	Smart Key	Special Function	Current FOB Key Check
Grand Santafe(NC)	2015	General	Telematics Unit	Version Information	
Grand Santafe(NC)	2015	General	Telematics Unit	Read Fault Code	
Grand Santafe(NC)	2015	General	Telematics Unit	Clear Fault Memory	
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Grand Santafe(NC)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Version Information	
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Actuation Test	
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grand Santafe(NC)	2014	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Grand Santafe(NC)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Grand Santafe(NC)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Grand Santafe(NC)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Grand Santafe(NC)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grand Santafe(NC)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Grand Santafe(NC)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grand Santafe(NC)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grand Santafe(NC)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grand Santafe(NC)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grand Santafe(NC)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Grand Santafe(NC)	2014	General	AC(Air Conditioning)	Version Information	
Grand Santafe(NC)	2014	General	AC(Air Conditioning)	Read Fault Code	
Grand Santafe(NC)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Grand Santafe(NC)	2014	General	AC(Air Conditioning)	Read Data Stream	
Grand Santafe(NC)	2014	General	AC(Air Conditioning)	Actuation Test	
Grand Santafe(NC)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)

model	year	area	system	function	subfunction
Grand Santafe(NC)	2014	General	BCM(Body Control Module)	Version Information	
Grand Santafe(NC)	2014	General	BCM(Body Control Module)	Read Fault Code	
Grand Santafe(NC)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Grand Santafe(NC)	2014	General	BCM(Body Control Module)	Read Data Stream	
Grand Santafe(NC)	2014	General	BCM(Body Control Module)	Actuation Test	
Grand Santafe(NC)	2014	General	BCM(Body Control Module)	Special Function	User Option
Grand Santafe(NC)	2014	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Grand Santafe(NC)	2014	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grand Santafe(NC)	2014	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Grand Santafe(NC)	2014	General	EPB(Electrical Parking Brake)	Version Information	
Grand Santafe(NC)	2014	General	EPB(Electrical Parking Brake)	Read Fault Code	
Grand Santafe(NC)	2014	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Grand Santafe(NC)	2014	General	EPB(Electrical Parking Brake)	Read Data Stream	
Grand Santafe(NC)	2014	General	EPB(Electrical Parking Brake)	Actuation Test	
Grand Santafe(NC)	2014	General	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Grand Santafe(NC)	2014	General	EPS(Electronic Power Steering)	Version Information	
Grand Santafe(NC)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Grand Santafe(NC)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grand Santafe(NC)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Grand Santafe(NC)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Grand Santafe(NC)	2014	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Grand Santafe(NC)	2014	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Grand Santafe(NC)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grand Santafe(NC)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Grand Santafe(NC)	2014	General	4WD Control	Version Information	
Grand Santafe(NC)	2014	General	4WD Control	Read Fault Code	
Grand Santafe(NC)	2014	General	4WD Control	Clear Fault Memory	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2014	General	4WD Control	Read Data Stream	
Grand Santafe(NC)	2014	General	4WD Control	Actuation Test	
Grand Santafe(NC)	2014	General	4WD Control	Special Function	Clutch Learning Read
Grand Santafe(NC)	2014	General	4WD Control	Special Function	Clutch Learning Reset
Grand Santafe(NC)	2014	General	4WD Control	Special Function	Clutch Learning Write
Grand Santafe(NC)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grand Santafe(NC)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grand Santafe(NC)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grand Santafe(NC)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grand Santafe(NC)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Grand Santafe(NC)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Grand Santafe(NC)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grand Santafe(NC)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grand Santafe(NC)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grand Santafe(NC)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Grand Santafe(NC)	2014	General	IMM(Immobilizer)	Read Fault Code	
Grand Santafe(NC)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
Grand Santafe(NC)	2014	General	IMM(Immobilizer)	Read Data Stream	
Grand Santafe(NC)	2014	General	IMM(Immobilizer)	Special Function	Password
Grand Santafe(NC)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Grand Santafe(NC)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grand Santafe(NC)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grand Santafe(NC)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Grand Santafe(NC)	2014	General	Smart Key Unit	Version Information	
Grand Santafe(NC)	2014	General	Smart Key Unit	Read Fault Code	
Grand Santafe(NC)	2014	General	Smart Key Unit	Clear Fault Memory	
Grand Santafe(NC)	2014	General	Smart Key Unit	Read Data Stream	
Grand Santafe(NC)	2014	General	Smart Key Unit	Actuation Test	
Grand Santafe(NC)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grand Santafe(NC)	2014	General	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Grand Santafe(NC)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Grand Santafe(NC)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Grand Santafe(NC)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Grand Santafe(NC)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Grand Santafe(NC)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grand Santafe(NC)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Grand Santafe(NC)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grand Santafe(NC)	2014	General	Active Hood System	Version Information	
Grand Santafe(NC)	2014	General	Active Hood System	Read Fault Code	
Grand Santafe(NC)	2014	General	Active Hood System	Clear Fault Memory	
Grand Santafe(NC)	2014	General	Active Hood System	Read Data Stream	
Grand Santafe(NC)	2014	General	Active Hood System	Actuation Test	
Grand Santafe(NC)	2014	General	Adaptive Front Lighting System	Version Information	
Grand Santafe(NC)	2014	General	Adaptive Front Lighting System	Read Fault Code	
Grand Santafe(NC)	2014	General	Adaptive Front Lighting System	Clear Fault Memory	
Grand Santafe(NC)	2014	General	Adaptive Front Lighting System	Read Data Stream	
Grand Santafe(NC)	2014	General	Adaptive Front Lighting System	Actuation Test	
Grand Santafe(NC)	2014	General	Adaptive Front Lighting System	Special Function	Calibration
Grand Santafe(NC)	2014	General	Adaptive Front Lighting System	Special Function	Parameter Download
Grand Santafe(NC)	2014	General	Auto Headlamp Leveling System	Version Information	
Grand Santafe(NC)	2014	General	Auto Headlamp Leveling System	Read Fault Code	
Grand Santafe(NC)	2014	General	Auto Headlamp Leveling System	Clear Fault Memory	
Grand Santafe(NC)	2014	General	Auto Headlamp Leveling System	Read Data Stream	
Grand Santafe(NC)	2014	General	Auto Headlamp Leveling System	Actuation Test	
Grand Santafe(NC)	2014	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grand Santafe(NC)	2014	General	Auto Headlamp Leveling System	Special Function	Parameter Setting
Grand Santafe(NC)	2014	General	Lane Departure Warning System	Version Information	
Grand Santafe(NC)	2014	General	Lane Departure Warning System	Read Fault Code	
Grand Santafe(NC)	2014	General	Lane Departure Warning System	Clear Fault Memory	

model	year	area	system	function	subfunction
Grand Santafe(NC)	2014	General	Lane Departure Warning System	Read Data Stream	
Grand Santafe(NC)	2014	General	Lane Departure Warning System	Special Function	LDWS Region Code
Grand Santafe(NC)	2014	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Grand Santafe(NC)	2014	General	Smart Parking Assist System	Version Information	
Grand Santafe(NC)	2014	General	Smart Parking Assist System	Read Fault Code	
Grand Santafe(NC)	2014	General	Smart Parking Assist System	Clear Fault Memory	
Grand Santafe(NC)	2014	General	Smart Parking Assist System	Read Data Stream	
Grand Santafe(NC)	2014	General	Smart Parking Assist System	Actuation Test	
Grand Santafe(NC)	2014	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Grand Santafe(NC)	2014	General	Transmitter Code Saving	Read Data Stream	
Grand Santafe(NC)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Grand Santafe(NC)	2014	General	TCM(Transmission Control Module)	Special Function	Automatic-Learning Mode Auto Detected
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Special Function	Configuration Reset(ESP/ESC/Onk)
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Grand Santafe(NC)	2014	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Grand Santafe(NC)	2014	General	Power Tail Gate	Version Information	
Grand Santafe(NC)	2014	General	Power Tail Gate	Read Fault Code	
Grand Santafe(NC)	2014	General	Power Tail Gate	Clear Fault Memory	
Grand Santafe(NC)	2014	General	Power Tail Gate	Read Data Stream	
Grand Santafe(NC)	2014	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Grand Santafe(NC)	2014	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Grand Santafe(NC)	2014	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Grand Santafe(NC)	2014	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Grand Santafe(NC)	2014	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Grand Santafe(NC)	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Grand Santafe(NC)	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Grand Santafe(NC)	2014	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Grand Santafe(NC)	2014	General	Driveshaft	Version Information	
Grand Santafe(NC)	2014	General	Driveshaft	Read Fault Code	
Grand Santafe(NC)	2014	General	Driveshaft	Clear Fault Memory	
Grand Santafe(NC)	2014	General	Driveshaft	Read Data Stream	
Grand Santafe(NC)	2014	General	Driveshaft	Actuation Test	
Grand Santafe(NC)	2014	General	Driveshaft	Special Function	Clutch Learning Read
Grand Santafe(NC)	2014	General	Driveshaft	Special Function	Clutch Learning Reset
Grand Santafe(NC)	2014	General	Driveshaft	Special Function	Clutch Learning Write
Grand Santafe(NC)	2014	General	Smart Key	Version Information	
Grand Santafe(NC)	2014	General	Smart Key	Read Fault Code	
Grand Santafe(NC)	2014	General	Smart Key	Clear Fault Memory	
Grand Santafe(NC)	2014	General	Smart Key	Read Data Stream	
Grand Santafe(NC)	2014	General	Smart Key	Actuation Test	
Grand Santafe(NC)	2014	General	Smart Key	Special Function	User Option
Grand Santafe(NC)	2014	General	Smart Key	Special Function	ESCL Open Status Check
Grand Santafe(NC)	2014	General	Smart Key	Special Function	ESCL Status Information
Grand Santafe(NC)	2014	General	Smart Key	Special Function	FOB Key Status Information
Grand Santafe(NC)	2014	General	Smart Key	Special Function	Serial Communication Line Check
Grand Santafe(NC)	2014	General	Smart Key	Special Function	Antenna Status Check
Grand Santafe(NC)	2014	General	Smart Key	Special Function	Neutralization Mode
Grand Santafe(NC)	2014	General	Smart Key	Special Function	SMK Status Information
Grand Santafe(NC)	2014	General	Smart Key	Special Function	Smart Key Code Saving
Grand Santafe(NC)	2014	General	Smart Key	Special Function	Current FOB Key Check
Grand Santafe(NC)	2014	General	Telematics Unit	Version Information	
Grand Santafe(NC)	2014	General	Telematics Unit	Read Fault Code	
Grand Santafe(NC)	2014	General	Telematics Unit	Clear Fault Memory	
Grand Santafe(NC)	2014	General	IMM(Immobilizer)	Special Function	Password Record/Change

model	year	area	system	function	subfunction
Grand Santafe(NC)	2014	General	IMM(Immobilizer)	Special Function	Learnt Keys
Grand Santafe(NC)	2014	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Grand Santafe(NC)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Version Information	
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Actuation Test	
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur(XG)	2005	General	TCM(Transmission Control Module)	Version Information	
Grandeur(XG)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(XG)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(XG)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(XG)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur(XG)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur(XG)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(XG)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur(XG)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur(XG)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur(XG)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur(XG)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur(XG)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(XG)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur(XG)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur(XG)	2005	General	AFS(Adaptive Front Lighting System)	Version Information	
Grandeur(XG)	2005	General	AFS(Adaptive Front Lighting System)	Read Fault Code	
Grandeur(XG)	2005	General	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Grandeur(XG)	2005	General	AFS(Adaptive Front Lighting System)	Read Data Stream	
Grandeur(XG)	2005	General	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Grandeur(XG)	2005	General	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Grandeur(XG)	2005	General	IMM(Immobilizer)	Read Fault Code	
Grandeur(XG)	2005	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur(XG)	2005	General	IMM(Immobilizer)	Read Data Stream	
Grandeur(XG)	2005	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grandeur(XG)	2005	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Grandeur(XG)	2005	General	IMM(Immobilizer)	Special Function	Master Key Delete
Grandeur(XG)	2005	General	IMM(Immobilizer)	Special Function	Neutral Mode
Grandeur(XG)	2005	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Grandeur(XG)	2005	General	Electronic Control Suspension	Read Fault Code	
Grandeur(XG)	2005	General	Electronic Control Suspension	Clear Fault Memory	
Grandeur(XG)	2005	General	Electronic Control Suspension	Read Data Stream	
Grandeur(XG)	2005	General	Electronic Control Suspension	Actuation Test	
Grandeur(XG)	2005	General	Transmitter Code Saving	Special Function	Code Saving
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	Ignition Test
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test

model	year	area	system	function	subfunction
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	Read VIN
Grandeur(XG)	2005	General	ECM(Engine Control Module)	Special Function	Write VIN
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Version Information	
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Actuation Test	
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur(XG)	2004	General	TCM(Transmission Control Module)	Version Information	
Grandeur(XG)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(XG)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(XG)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(XG)	2004	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur(XG)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur(XG)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(XG)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur(XG)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur(XG)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur(XG)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur(XG)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur(XG)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(XG)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur(XG)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur(XG)	2004	General	AFS(Adaptive Front Lighting System)	Version Information	
Grandeur(XG)	2004	General	AFS(Adaptive Front Lighting System)	Read Fault Code	
Grandeur(XG)	2004	General	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Grandeur(XG)	2004	General	AFS(Adaptive Front Lighting System)	Read Data Stream	

model	year	area	system	function	subfunction
Grandeur(XG)	2004	General	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Grandeur(XG)	2004	General	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Grandeur(XG)	2004	General	IMM(Immobilizer)	Read Fault Code	
Grandeur(XG)	2004	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur(XG)	2004	General	IMM(Immobilizer)	Read Data Stream	
Grandeur(XG)	2004	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grandeur(XG)	2004	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Grandeur(XG)	2004	General	IMM(Immobilizer)	Special Function	Master Key Delete
Grandeur(XG)	2004	General	IMM(Immobilizer)	Special Function	Neutral Mode
Grandeur(XG)	2004	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Grandeur(XG)	2004	General	Electronic Control Suspension	Read Fault Code	
Grandeur(XG)	2004	General	Electronic Control Suspension	Clear Fault Memory	
Grandeur(XG)	2004	General	Electronic Control Suspension	Read Data Stream	
Grandeur(XG)	2004	General	Electronic Control Suspension	Actuation Test	
Grandeur(XG)	2004	General	Transmitter Code Saving	Special Function	Code Saving
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	Ignition Test
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	Read VIN
Grandeur(XG)	2004	General	ECM(Engine Control Module)	Special Function	Write VIN
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Version Information	
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Actuation Test	
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur(XG)	2003	General	TCM(Transmission Control Module)	Version Information	
Grandeur(XG)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(XG)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(XG)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(XG)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur(XG)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur(XG)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(XG)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur(XG)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur(XG)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur(XG)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur(XG)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur(XG)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(XG)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur(XG)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur(XG)	2003	General	AFS(Adaptive Front Lighting System)	Version Information	
Grandeur(XG)	2003	General	AFS(Adaptive Front Lighting System)	Read Fault Code	
Grandeur(XG)	2003	General	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Grandeur(XG)	2003	General	AFS(Adaptive Front Lighting System)	Read Data Stream	
Grandeur(XG)	2003	General	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Grandeur(XG)	2003	General	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Grandeur(XG)	2003	General	IMM(Immobilizer)	Read Fault Code	
Grandeur(XG)	2003	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur(XG)	2003	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Grandeur(XG)	2003	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grandeur(XG)	2003	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Grandeur(XG)	2003	General	IMM(Immobilizer)	Special Function	Master Key Delete
Grandeur(XG)	2003	General	IMM(Immobilizer)	Special Function	Neutral Mode
Grandeur(XG)	2003	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Grandeur(XG)	2003	General	Electronic Control Suspension	Read Fault Code	
Grandeur(XG)	2003	General	Electronic Control Suspension	Clear Fault Memory	
Grandeur(XG)	2003	General	Electronic Control Suspension	Read Data Stream	
Grandeur(XG)	2003	General	Electronic Control Suspension	Actuation Test	
Grandeur(XG)	2003	General	Transmitter Code Saving	Special Function	Code Saving
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	Ignition Test
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	Read VIN
Grandeur(XG)	2003	General	ECM(Engine Control Module)	Special Function	Write VIN
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Version Information	
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Actuation Test	
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Grandeur(XG)	2002	General	TCM(Transmission Control Module)	Version Information	
Grandeur(XG)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(XG)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(XG)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(XG)	2002	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur(XG)	2002	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur(XG)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(XG)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur(XG)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur(XG)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur(XG)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur(XG)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur(XG)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(XG)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur(XG)	2002	General	AFS(Adaptive Front Lighting System)	Version Information	
Grandeur(XG)	2002	General	AFS(Adaptive Front Lighting System)	Read Fault Code	
Grandeur(XG)	2002	General	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Grandeur(XG)	2002	General	AFS(Adaptive Front Lighting System)	Read Data Stream	
Grandeur(XG)	2002	General	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Grandeur(XG)	2002	General	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Grandeur(XG)	2002	General	IMM(Immobilizer)	Read Fault Code	
Grandeur(XG)	2002	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur(XG)	2002	General	IMM(Immobilizer)	Read Data Stream	
Grandeur(XG)	2002	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grandeur(XG)	2002	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Grandeur(XG)	2002	General	IMM(Immobilizer)	Special Function	Master Key Delete
Grandeur(XG)	2002	General	IMM(Immobilizer)	Special Function	Neutral Mode
Grandeur(XG)	2002	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Grandeur(XG)	2002	General	Electronic Control Suspension	Read Fault Code	

model	year	area	system	function	subfunction
Grandeur(XG)	2002	General	Electronic Control Suspension	Clear Fault Memory	
Grandeur(XG)	2002	General	Electronic Control Suspension	Read Data Stream	
Grandeur(XG)	2002	General	Electronic Control Suspension	Actuation Test	
Grandeur(XG)	2002	General	Transmitter Code Saving	Special Function	Code Saving
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Special Function	Ignition Test
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Grandeur(XG)	2002	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Version Information	
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Actuation Test	
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur(XG)	2001	General	TCM(Transmission Control Module)	Version Information	
Grandeur(XG)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(XG)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(XG)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(XG)	2001	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur(XG)	2001	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur(XG)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(XG)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur(XG)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur(XG)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur(XG)	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur(XG)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur(XG)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(XG)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur(XG)	2001	General	AFS(Adaptive Front Lighting System)	Version Information	
Grandeur(XG)	2001	General	AFS(Adaptive Front Lighting System)	Read Fault Code	
Grandeur(XG)	2001	General	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Grandeur(XG)	2001	General	AFS(Adaptive Front Lighting System)	Read Data Stream	
Grandeur(XG)	2001	General	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Grandeur(XG)	2001	General	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Grandeur(XG)	2001	General	IMM(Immobilizer)	Read Fault Code	
Grandeur(XG)	2001	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur(XG)	2001	General	IMM(Immobilizer)	Read Data Stream	
Grandeur(XG)	2001	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grandeur(XG)	2001	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Grandeur(XG)	2001	General	IMM(Immobilizer)	Special Function	Master Key Delete
Grandeur(XG)	2001	General	IMM(Immobilizer)	Special Function	Neutral Mode
Grandeur(XG)	2001	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Grandeur(XG)	2001	General	Electronic Control Suspension	Read Fault Code	
Grandeur(XG)	2001	General	Electronic Control Suspension	Clear Fault Memory	
Grandeur(XG)	2001	General	Electronic Control Suspension	Read Data Stream	
Grandeur(XG)	2001	General	Electronic Control Suspension	Actuation Test	
Grandeur(XG)	2001	General	Transmitter Code Saving	Special Function	Code Saving
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test

model	year	area	system	function	subfunction
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Special Function	Ignition Test
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Grandeur(XG)	2001	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Version Information	
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Actuation Test	
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Special Function	Ignition Test
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur(XG)	2000	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur(XG)	2000	General	TCM(Transmission Control Module)	Version Information	
Grandeur(XG)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(XG)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(XG)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(XG)	2000	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur(XG)	2000	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Grandeur(XG)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(XG)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur(XG)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur(XG)	2000	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur(XG)	2000	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur(XG)	2000	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur(XG)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(XG)	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur(XG)	2000	General	AFS(Adaptive Front Lighting System)	Version Information	
Grandeur(XG)	2000	General	AFS(Adaptive Front Lighting System)	Read Fault Code	
Grandeur(XG)	2000	General	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Grandeur(XG)	2000	General	AFS(Adaptive Front Lighting System)	Read Data Stream	
Grandeur(XG)	2000	General	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Grandeur(XG)	2000	General	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Grandeur(XG)	2000	General	IMM(Immobilizer)	Read Fault Code	
Grandeur(XG)	2000	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur(XG)	2000	General	IMM(Immobilizer)	Read Data Stream	
Grandeur(XG)	2000	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grandeur(XG)	2000	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Grandeur(XG)	2000	General	IMM(Immobilizer)	Special Function	Master Key Delete
Grandeur(XG)	2000	General	IMM(Immobilizer)	Special Function	Neutral Mode
Grandeur(XG)	2000	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Grandeur(XG)	2000	General	Electronic Control Suspension	Read Fault Code	
Grandeur(XG)	2000	General	Electronic Control Suspension	Clear Fault Memory	
Grandeur(XG)	2000	General	Electronic Control Suspension	Read Data Stream	
Grandeur(XG)	2000	General	Electronic Control Suspension	Actuation Test	
Grandeur(XG)	2000	General	Transmitter Code Saving	Special Function	Code Saving
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Version Information	
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Actuation Test	
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Special Function	Ignition Test
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur(XG)	1999	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur(XG)	1999	General	TCM(Transmission Control Module)	Version Information	
Grandeur(XG)	1999	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(XG)	1999	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(XG)	1999	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(XG)	1999	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur(XG)	1999	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur(XG)	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(XG)	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur(XG)	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur(XG)	1999	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur(XG)	1999	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur(XG)	1999	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur(XG)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(XG)	1999	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur(XG)	1999	General	AFS(Adaptive Front Lighting System)	Version Information	
Grandeur(XG)	1999	General	AFS(Adaptive Front Lighting System)	Read Fault Code	
Grandeur(XG)	1999	General	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Grandeur(XG)	1999	General	AFS(Adaptive Front Lighting System)	Read Data Stream	
Grandeur(XG)	1999	General	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Grandeur(XG)	1999	General	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Grandeur(XG)	1999	General	IMM(Immobilizer)	Read Fault Code	
Grandeur(XG)	1999	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur(XG)	1999	General	IMM(Immobilizer)	Read Data Stream	
Grandeur(XG)	1999	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grandeur(XG)	1999	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Grandeur(XG)	1999	General	IMM(Immobilizer)	Special Function	Master Key Delete
Grandeur(XG)	1999	General	IMM(Immobilizer)	Special Function	Neutral Mode
Grandeur(XG)	1999	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Grandeur(XG)	1999	General	Electronic Control Suspension	Read Fault Code	
Grandeur(XG)	1999	General	Electronic Control Suspension	Clear Fault Memory	
Grandeur(XG)	1999	General	Electronic Control Suspension	Read Data Stream	
Grandeur(XG)	1999	General	Electronic Control Suspension	Actuation Test	
Grandeur(XG)	1999	General	Transmitter Code Saving	Special Function	Code Saving
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur/Azera(HG)	2017	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(HG)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(HG)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(HG)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Grandeur/Azera(HG)	2017	General	Electronic Stability Program	Version Information	
Grandeur/Azera(HG)	2017	General	Electronic Stability Program	Read Fault Code	
Grandeur/Azera(HG)	2017	General	Electronic Stability Program	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	Electronic Stability Program	Read Data Stream	
Grandeur/Azera(HG)	2017	General	Electronic Stability Program	Actuation Test	
Grandeur/Azera(HG)	2017	General	Electronic Stability Program	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grandeur/Azera(HG)	2017	General	Electronic Stability Program	Special Function	HCU Air Bleeding Mode
Grandeur/Azera(HG)	2017	General	Electronic Stability Program	Special Function	Auto Detected Configuration
Grandeur/Azera(HG)	2017	General	Electronic Stability Program	Special Function	Basic Configuration(CAN-LSP Only)
Grandeur/Azera(HG)	2017	General	Electric Parking Brake	Version Information	
Grandeur/Azera(HG)	2017	General	Electric Parking Brake	Read Fault Code	
Grandeur/Azera(HG)	2017	General	Electric Parking Brake	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	Electric Parking Brake	Read Data Stream	
Grandeur/Azera(HG)	2017	General	Electric Parking Brake	Actuation Test	
Grandeur/Azera(HG)	2017	General	Electric Parking Brake	Special Function	Assembly Check
Grandeur/Azera(HG)	2017	General	Electric Parking Brake	Special Function	EPB Variant Coding

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2017	General	Electric Parking Brake	Special Function	G-Sensor Calibration
Grandeur/Azera(HG)	2017	General	Electric Parking Brake	Special Function	PAD Change Mode(After Change)
Grandeur/Azera(HG)	2017	General	Electric Parking Brake	Special Function	PAD Change Mode(Before Change)
Grandeur/Azera(HG)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(HG)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(HG)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(HG)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Grandeur/Azera(HG)	2017	General	AC(Air Conditioning)	Version Information	
Grandeur/Azera(HG)	2017	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(HG)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(HG)	2017	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(HG)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Test)
Grandeur/Azera(HG)	2017	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(HG)	2017	General	BCM(Body Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2017	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(HG)	2017	General	BCM(Body Control Module)	Special Function	User Option
Grandeur/Azera(HG)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grandeur/Azera(HG)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Grandeur/Azera(HG)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Grandeur/Azera(HG)	2017	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Grandeur/Azera(HG)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grandeur/Azera(HG)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grandeur/Azera(HG)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grandeur/Azera(HG)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Grandeur/Azera(HG)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grandeur/Azera(HG)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Grandeur/Azera(HG)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grandeur/Azera(HG)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grandeur/Azera(HG)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Grandeur/Azera(HG)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Grandeur/Azera(HG)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Grandeur/Azera(HG)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Grandeur/Azera(HG)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Grandeur/Azera(HG)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Grandeur/Azera(HG)	2017	General	EPS(Electronic Power Steering)	Version Information	
Grandeur/Azera(HG)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Grandeur/Azera(HG)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Grandeur/Azera(HG)	2017	General	EPS(Electronic Power Steering)	Read FreezeData	
Grandeur/Azera(HG)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Grandeur/Azera(HG)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grandeur/Azera(HG)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Grandeur/Azera(HG)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Grandeur/Azera(HG)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Version Information	
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Read Fault Code	
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Read Data Stream	
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Actuation Test	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Grandeur/Azera(HG)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Grandeur/Azera(HG)	2017	General	CCS(Cruise Control System)	Version Information	
Grandeur/Azera(HG)	2017	General	CCS(Cruise Control System)	Read Fault Code	
Grandeur/Azera(HG)	2017	General	CCS(Cruise Control System)	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	CCS(Cruise Control System)	Read Data Stream	
Grandeur/Azera(HG)	2017	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Grandeur/Azera(HG)	2017	General	Blind Spot Detection	Version Information	
Grandeur/Azera(HG)	2017	General	Blind Spot Detection	Read Fault Code	
Grandeur/Azera(HG)	2017	General	Blind Spot Detection	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	Blind Spot Detection	Read Data Stream	
Grandeur/Azera(HG)	2017	General	Blind Spot Detection	Actuation Test	
Grandeur/Azera(HG)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Grandeur/Azera(HG)	2017	General	Blind Spot Detection	Special Function	BSD Variant Coding
Grandeur/Azera(HG)	2017	General	Blind Spot Detection	Special Function	BSD Variant Coding Reading
Grandeur/Azera(HG)	2017	General	Lane Departure Warning System	Version Information	
Grandeur/Azera(HG)	2017	General	Lane Departure Warning System	Read Fault Code	
Grandeur/Azera(HG)	2017	General	Lane Departure Warning System	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	Lane Departure Warning System	Read Data Stream	
Grandeur/Azera(HG)	2017	General	Lane Departure Warning System	Special Function	SPC Calibration
Grandeur/Azera(HG)	2017	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Grandeur/Azera(HG)	2017	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Grandeur/Azera(HG)	2017	General	IMM(Immobilizer)	Read Fault Code	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur/Azera(HG)	2017	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(HG)	2017	General	IMM(Immobilizer)	Special Function	Password
Grandeur/Azera(HG)	2017	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Grandeur/Azera(HG)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grandeur/Azera(HG)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(HG)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(HG)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Grandeur/Azera(HG)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	CVVT Test
Grandeur/Azera(HG)	2017	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grandeur/Azera(HG)	2016	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(HG)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(HG)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Special Function	Basic Calibration(CAN-ESP Only)
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Special Function	TPAD Change Mode(After Change)
Grandeur/Azera(HG)	2016	General	ABS(Anti-lock Braking System)	Special Function	TPAD Change Mode(before Change)
Grandeur/Azera(HG)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(HG)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(HG)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Grandeur/Azera(HG)	2016	General	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2016	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(HG)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(HG)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Turn)
Grandeur/Azera(HG)	2016	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(HG)	2016	General	BCM(Body Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(HG)	2016	General	BCM(Body Control Module)	Special Function	User Option
Grandeur/Azera(HG)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grandeur/Azera(HG)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Grandeur/Azera(HG)	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Grandeur/Azera(HG)	2016	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Grandeur/Azera(HG)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grandeur/Azera(HG)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grandeur/Azera(HG)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Grandeur/Azera(HG)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Grandeur/Azera(HG)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grandeur/Azera(HG)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Grandeur/Azera(HG)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grandeur/Azera(HG)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grandeur/Azera(HG)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Grandeur/Azera(HG)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Grandeur/Azera(HG)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Grandeur/Azera(HG)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Grandeur/Azera(HG)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Version Information	
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Read Fault Code	
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Read Data Stream	
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Actuation Test	
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Grandeur/Azera(HG)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Grandeur/Azera(HG)	2016	General	Blind Spot Detection	Version Information	
Grandeur/Azera(HG)	2016	General	Blind Spot Detection	Read Fault Code	
Grandeur/Azera(HG)	2016	General	Blind Spot Detection	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	Blind Spot Detection	Read Data Stream	
Grandeur/Azera(HG)	2016	General	Blind Spot Detection	Actuation Test	
Grandeur/Azera(HG)	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Grandeur/Azera(HG)	2016	General	Blind Spot Detection	Special Function	BSD Variant Coding
Grandeur/Azera(HG)	2016	General	Blind Spot Detection	Special Function	BSD Variant Coding Reading
Grandeur/Azera(HG)	2016	General	Lane Departure Warning System	Version Information	
Grandeur/Azera(HG)	2016	General	Lane Departure Warning System	Read Fault Code	
Grandeur/Azera(HG)	2016	General	Lane Departure Warning System	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	Lane Departure Warning System	Read Data Stream	
Grandeur/Azera(HG)	2016	General	Lane Departure Warning System	Special Function	SPC Calibration

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2016	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Grandeur/Azera(HG)	2016	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Grandeur/Azera(HG)	2016	General	CCS(Cruise Control System)	Version Information	
Grandeur/Azera(HG)	2016	General	CCS(Cruise Control System)	Read Fault Code	
Grandeur/Azera(HG)	2016	General	CCS(Cruise Control System)	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	CCS(Cruise Control System)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Grandeur/Azera(HG)	2016	General	IMM(Immobilizer)	Read Fault Code	
Grandeur/Azera(HG)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	IMM(Immobilizer)	Special Function	Password
Grandeur/Azera(HG)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Grandeur/Azera(HG)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grandeur/Azera(HG)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(HG)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(HG)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur/Azera(HG)	2016	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Grandeur/Azera(HG)	2016	General	EPS(Electronic Power Steering)	Version Information	
Grandeur/Azera(HG)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Grandeur/Azera(HG)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grandeur/Azera(HG)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Grandeur/Azera(HG)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
Grandeur/Azera(HG)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Grandeur/Azera(HG)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grandeur/Azera(HG)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Grandeur/Azera(HG)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grandeur/Azera(HG)	2015	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(HG)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(HG)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(HG)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Grandeur/Azera(HG)	2015	General	ESP(Electronic Stability Program)	Version Information	
Grandeur/Azera(HG)	2015	General	ESP(Electronic Stability Program)	Read Fault Code	
Grandeur/Azera(HG)	2015	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	ESP(Electronic Stability Program)	Read Data Stream	
Grandeur/Azera(HG)	2015	General	ESP(Electronic Stability Program)	Actuation Test	
Grandeur/Azera(HG)	2015	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grandeur/Azera(HG)	2015	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2015	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Grandeur/Azera(HG)	2015	General	ESP(Electronic Stability Program)	Special Function	Basic Function(CAN-LSP Only)
Grandeur/Azera(HG)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(HG)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(HG)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(HG)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Grandeur/Azera(HG)	2015	General	AC(Air Conditioning)	Version Information	
Grandeur/Azera(HG)	2015	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(HG)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(HG)	2015	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(HG)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Grandeur/Azera(HG)	2015	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(HG)	2015	General	BCM(Body Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2015	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(HG)	2015	General	BCM(Body Control Module)	Special Function	User Option
Grandeur/Azera(HG)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grandeur/Azera(HG)	2015	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Grandeur/Azera(HG)	2015	General	EPB(Electrical Parking Brake)	Version Information	
Grandeur/Azera(HG)	2015	General	EPB(Electrical Parking Brake)	Read Fault Code	
Grandeur/Azera(HG)	2015	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	EPB(Electrical Parking Brake)	Read Data Stream	
Grandeur/Azera(HG)	2015	General	EPB(Electrical Parking Brake)	Actuation Test	
Grandeur/Azera(HG)	2015	General	EPB(Electrical Parking Brake)	Special Function	Assembly Check
Grandeur/Azera(HG)	2015	General	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2015	General	EPB(Electrical Parking Brake)	Special Function	G-Sensor Calibration
Grandeur/Azera(HG)	2015	General	EPB(Electrical Parking Brake)	Special Function	PAD Change Mode(After Change)
Grandeur/Azera(HG)	2015	General	EPB(Electrical Parking Brake)	Special Function	PAD Change Mode(Before Change)
Grandeur/Azera(HG)	2015	General	Auto Headlamp Leveling System	Version Information	
Grandeur/Azera(HG)	2015	General	Auto Headlamp Leveling System	Read Fault Code	
Grandeur/Azera(HG)	2015	General	Auto Headlamp Leveling System	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	Auto Headlamp Leveling System	Read Data Stream	
Grandeur/Azera(HG)	2015	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Grandeur/Azera(HG)	2015	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grandeur/Azera(HG)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grandeur/Azera(HG)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grandeur/Azera(HG)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grandeur/Azera(HG)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Grandeur/Azera(HG)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Grandeur/Azera(HG)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grandeur/Azera(HG)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Grandeur/Azera(HG)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grandeur/Azera(HG)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grandeur/Azera(HG)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Grandeur/Azera(HG)	2015	General	IMM(Immobilizer)	Read Fault Code	
Grandeur/Azera(HG)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(HG)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Grandeur/Azera(HG)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grandeur/Azera(HG)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(HG)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(HG)	2015	General	Smart Key	Version Information	
Grandeur/Azera(HG)	2015	General	Smart Key	Read Fault Code	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2015	General	Smart Key	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	Smart Key	Read Data Stream	
Grandeur/Azera(HG)	2015	General	Smart Key	Actuation Test	
Grandeur/Azera(HG)	2015	General	Smart Key	Special Function	Smart Key Code Saving
Grandeur/Azera(HG)	2015	General	Smart Key	Special Function	Neutralization Mode
Grandeur/Azera(HG)	2015	General	Smart Key	Special Function	SMK Status Information
Grandeur/Azera(HG)	2015	General	Smart Key	Special Function	ESCL Status Information
Grandeur/Azera(HG)	2015	General	Smart Key	Special Function	FOB Key Status Information
Grandeur/Azera(HG)	2015	General	Smart Key	Special Function	Serial Communication Line Check
Grandeur/Azera(HG)	2015	General	Smart Key	Special Function	Antenna Status Check
Grandeur/Azera(HG)	2015	General	Smart Key	Special Function	ESCL Open Status Check
Grandeur/Azera(HG)	2015	General	Transmitter Code Saving	Read Data Stream	
Grandeur/Azera(HG)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Grandeur/Azera(HG)	2015	General	Blind Spot Detection	Version Information	
Grandeur/Azera(HG)	2015	General	Blind Spot Detection	Read Fault Code	
Grandeur/Azera(HG)	2015	General	Blind Spot Detection	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	Blind Spot Detection	Read Data Stream	
Grandeur/Azera(HG)	2015	General	Blind Spot Detection	Actuation Test	
Grandeur/Azera(HG)	2015	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Grandeur/Azera(HG)	2015	General	Blind Spot Detection	Special Function	BSD Variant Coding
Grandeur/Azera(HG)	2015	General	Blind Spot Detection	Special Function	BSD Variant Coding Reading
Grandeur/Azera(HG)	2015	General	CCS(Cruise Control System)	Version Information	
Grandeur/Azera(HG)	2015	General	CCS(Cruise Control System)	Read Fault Code	
Grandeur/Azera(HG)	2015	General	CCS(Cruise Control System)	Clear Fault Memory	
Grandeur/Azera(HG)	2015	General	CCS(Cruise Control System)	Read Data Stream	
Grandeur/Azera(HG)	2015	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Grandeur/Azera(HG)	2015	General	Lane Departure Warning System	Version Information	
Grandeur/Azera(HG)	2015	General	Lane Departure Warning System	Read Fault Code	
Grandeur/Azera(HG)	2015	General	Lane Departure Warning System	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2015	General	Lane Departure Warning System	Read Data Stream	
Grandeur/Azera(HG)	2015	General	Lane Departure Warning System	Special Function	SPC Calibration
Grandeur/Azera(HG)	2015	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Grandeur/Azera(HG)	2015	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Grandeur/Azera(HG)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grandeur/Azera(HG)	2014	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(HG)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(HG)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(HG)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2014	General	ESP(Electronic Stability Program)	Version Information	
Grandeur/Azera(HG)	2014	General	ESP(Electronic Stability Program)	Read Fault Code	
Grandeur/Azera(HG)	2014	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	ESP(Electronic Stability Program)	Read Data Stream	
Grandeur/Azera(HG)	2014	General	ESP(Electronic Stability Program)	Actuation Test	
Grandeur/Azera(HG)	2014	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grandeur/Azera(HG)	2014	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Grandeur/Azera(HG)	2014	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Grandeur/Azera(HG)	2014	General	ESP(Electronic Stability Program)	Special Function	Base Calibration(CAN-ESP Only)
Grandeur/Azera(HG)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(HG)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(HG)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(HG)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Grandeur/Azera(HG)	2014	General	AC(Air Conditioning)	Version Information	
Grandeur/Azera(HG)	2014	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(HG)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(HG)	2014	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(HG)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Grandeur/Azera(HG)	2014	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(HG)	2014	General	BCM(Body Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2014	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(HG)	2014	General	BCM(Body Control Module)	Special Function	User Option
Grandeur/Azera(HG)	2014	General	BCM(Body Control Module)	Special Function	CLU Variant Coding

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2014	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Grandeur/Azera(HG)	2014	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Grandeur/Azera(HG)	2014	General	EPB(Electrical Parking Brake)	Version Information	
Grandeur/Azera(HG)	2014	General	EPB(Electrical Parking Brake)	Read Fault Code	
Grandeur/Azera(HG)	2014	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	EPB(Electrical Parking Brake)	Read Data Stream	
Grandeur/Azera(HG)	2014	General	EPB(Electrical Parking Brake)	Actuation Test	
Grandeur/Azera(HG)	2014	General	EPB(Electrical Parking Brake)	Special Function	Assembly Check
Grandeur/Azera(HG)	2014	General	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Grandeur/Azera(HG)	2014	General	EPB(Electrical Parking Brake)	Special Function	G-Sensor Calibration
Grandeur/Azera(HG)	2014	General	EPB(Electrical Parking Brake)	Special Function	PAD Change Mode(After Change)
Grandeur/Azera(HG)	2014	General	EPB(Electrical Parking Brake)	Special Function	PAD Change Mode(before Change)
Grandeur/Azera(HG)	2014	General	Auto Headlamp Leveling System	Version Information	
Grandeur/Azera(HG)	2014	General	Auto Headlamp Leveling System	Read Fault Code	
Grandeur/Azera(HG)	2014	General	Auto Headlamp Leveling System	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	Auto Headlamp Leveling System	Read Data Stream	
Grandeur/Azera(HG)	2014	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Grandeur/Azera(HG)	2014	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grandeur/Azera(HG)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grandeur/Azera(HG)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grandeur/Azera(HG)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grandeur/Azera(HG)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Grandeur/Azera(HG)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Grandeur/Azera(HG)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grandeur/Azera(HG)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Grandeur/Azera(HG)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grandeur/Azera(HG)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grandeur/Azera(HG)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2014	General	IMM(Immobilizer)	Read Fault Code	
Grandeur/Azera(HG)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(HG)	2014	General	IMM(Immobilizer)	Special Function	Password
Grandeur/Azera(HG)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Changing EMS Neutral Mode
Grandeur/Azera(HG)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(HG)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Version Information	
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Read Fault Code	
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Read Data Stream	
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Actuation Test	
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Grandeur/Azera(HG)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grandeur/Azera(HG)	2014	General	Transmitter Code Saving	Read Data Stream	
Grandeur/Azera(HG)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Grandeur/Azera(HG)	2014	General	CCS(Cruise Control System)	Version Information	
Grandeur/Azera(HG)	2014	General	CCS(Cruise Control System)	Read Fault Code	
Grandeur/Azera(HG)	2014	General	CCS(Cruise Control System)	Clear Fault Memory	
Grandeur/Azera(HG)	2014	General	CCS(Cruise Control System)	Read Data Stream	
Grandeur/Azera(HG)	2014	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur/Azera(HG)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Release(Optional)
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grandeur/Azera(HG)	2013	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(HG)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(HG)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(HG)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Grandeur/Azera(HG)	2013	General	ESP(Electronic Stability Program)	Version Information	
Grandeur/Azera(HG)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
Grandeur/Azera(HG)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Grandeur/Azera(HG)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
Grandeur/Azera(HG)	2013	General	ESP(Electronic Stability Program)	Actuation Test	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2013	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grandeur/Azera(HG)	2013	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Grandeur/Azera(HG)	2013	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Grandeur/Azera(HG)	2013	General	ESP(Electronic Stability Program)	Special Function	Base Configuration(CAN-LSP Only)
Grandeur/Azera(HG)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(HG)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(HG)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(HG)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(HG)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Grandeur/Azera(HG)	2013	General	AC(Air Conditioning)	Version Information	
Grandeur/Azera(HG)	2013	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(HG)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(HG)	2013	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(HG)	2013	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(HG)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Grandeur/Azera(HG)	2013	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(HG)	2013	General	BCM(Body Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2013	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2013	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(HG)	2013	General	BCM(Body Control Module)	Special Function	User Option
Grandeur/Azera(HG)	2013	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grandeur/Azera(HG)	2013	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Grandeur/Azera(HG)	2013	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Grandeur/Azera(HG)	2013	General	EPB(Electrical Parking Brake)	Version Information	
Grandeur/Azera(HG)	2013	General	EPB(Electrical Parking Brake)	Read Fault Code	
Grandeur/Azera(HG)	2013	General	EPB(Electrical Parking Brake)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2013	General	EPB(Electrical Parking Brake)	Read Data Stream	
Grandeur/Azera(HG)	2013	General	EPB(Electrical Parking Brake)	Actuation Test	
Grandeur/Azera(HG)	2013	General	EPB(Electrical Parking Brake)	Special Function	Assembly Check
Grandeur/Azera(HG)	2013	General	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Grandeur/Azera(HG)	2013	General	EPB(Electrical Parking Brake)	Special Function	G-Sensor Calibration
Grandeur/Azera(HG)	2013	General	EPB(Electrical Parking Brake)	Special Function	PAD Change mode(After
Grandeur/Azera(HG)	2013	General	EPB(Electrical Parking Brake)	Special Function	PAD Change mode(before
Grandeur/Azera(HG)	2013	General	Auto Headlamp Leveling System	Version Information	Change)
Grandeur/Azera(HG)	2013	General	Auto Headlamp Leveling System	Read Fault Code	
Grandeur/Azera(HG)	2013	General	Auto Headlamp Leveling System	Clear Fault Memory	
Grandeur/Azera(HG)	2013	General	Auto Headlamp Leveling System	Read Data Stream	
Grandeur/Azera(HG)	2013	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Grandeur/Azera(HG)	2013	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grandeur/Azera(HG)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grandeur/Azera(HG)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grandeur/Azera(HG)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grandeur/Azera(HG)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grandeur/Azera(HG)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Grandeur/Azera(HG)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Grandeur/Azera(HG)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grandeur/Azera(HG)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Grandeur/Azera(HG)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grandeur/Azera(HG)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grandeur/Azera(HG)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Grandeur/Azera(HG)	2013	General	IMM(Immobilizer)	Read Fault Code	
Grandeur/Azera(HG)	2013	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur/Azera(HG)	2013	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(HG)	2013	General	IMM(Immobilizer)	Special Function	Password
Grandeur/Azera(HG)	2013	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Grandeur/Azera(HG)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(HG)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Version Information	
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Read Fault Code	
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Clear Fault Memory	
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Read Data Stream	
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Actuation Test	
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Special Function	SMK Status Information
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Special Function	ESCL Status Information
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
Grandeur/Azera(HG)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grandeur/Azera(HG)	2013	General	Transmitter Code Saving	Read Data Stream	
Grandeur/Azera(HG)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Grandeur/Azera(HG)	2013	General	CCS(Cruise Control System)	Version Information	
Grandeur/Azera(HG)	2013	General	CCS(Cruise Control System)	Read Fault Code	
Grandeur/Azera(HG)	2013	General	CCS(Cruise Control System)	Clear Fault Memory	
Grandeur/Azera(HG)	2013	General	CCS(Cruise Control System)	Read Data Stream	
Grandeur/Azera(HG)	2013	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur/Azera(HG)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Grandeur/Azera(HG)	2012	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(HG)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(HG)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(HG)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Grandeur/Azera(HG)	2012	General	ESP(Electronic Stability Program)	Version Information	
Grandeur/Azera(HG)	2012	General	ESP(Electronic Stability Program)	Read Fault Code	
Grandeur/Azera(HG)	2012	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	ESP(Electronic Stability Program)	Read Data Stream	
Grandeur/Azera(HG)	2012	General	ESP(Electronic Stability Program)	Actuation Test	
Grandeur/Azera(HG)	2012	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grandeur/Azera(HG)	2012	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode Auto Detected
Grandeur/Azera(HG)	2012	General	ESP(Electronic Stability Program)	Special Function	Configuration
Grandeur/Azera(HG)	2012	General	ESP(Electronic Stability Program)	Special Function	Base Calibration(CAN-ESP Only)

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(HG)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(HG)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(HG)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Grandeur/Azera(HG)	2012	General	AC(Air Conditioning)	Version Information	
Grandeur/Azera(HG)	2012	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(HG)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(HG)	2012	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(HG)	2012	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Grandeur/Azera(HG)	2012	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(HG)	2012	General	BCM(Body Control Module)	Read Fault Code	
Grandeur/Azera(HG)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(HG)	2012	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(HG)	2012	General	BCM(Body Control Module)	Special Function	User Option
Grandeur/Azera(HG)	2012	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grandeur/Azera(HG)	2012	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Grandeur/Azera(HG)	2012	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Grandeur/Azera(HG)	2012	General	EPB(Electrical Parking Brake)	Version Information	
Grandeur/Azera(HG)	2012	General	EPB(Electrical Parking Brake)	Read Fault Code	
Grandeur/Azera(HG)	2012	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	EPB(Electrical Parking Brake)	Read Data Stream	
Grandeur/Azera(HG)	2012	General	EPB(Electrical Parking Brake)	Actuation Test	
Grandeur/Azera(HG)	2012	General	EPB(Electrical Parking Brake)	Special Function	Assembly Check
Grandeur/Azera(HG)	2012	General	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Grandeur/Azera(HG)	2012	General	EPB(Electrical Parking Brake)	Special Function	G-Sensor Calibration
Grandeur/Azera(HG)	2012	General	EPB(Electrical Parking Brake)	Special Function	PAD Change Mode(After Change)

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2012	General	EPB(Electrical Parking Brake)	Special Function	PAD Change mode(before Change)
Grandeur/Azera(HG)	2012	General	Auto Headlamp Leveling System	Version Information	
Grandeur/Azera(HG)	2012	General	Auto Headlamp Leveling System	Read Fault Code	
Grandeur/Azera(HG)	2012	General	Auto Headlamp Leveling System	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	Auto Headlamp Leveling System	Read Data Stream	
Grandeur/Azera(HG)	2012	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Grandeur/Azera(HG)	2012	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grandeur/Azera(HG)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Grandeur/Azera(HG)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Grandeur/Azera(HG)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Grandeur/Azera(HG)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Grandeur/Azera(HG)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Grandeur/Azera(HG)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Grandeur/Azera(HG)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Grandeur/Azera(HG)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Grandeur/Azera(HG)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Grandeur/Azera(HG)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Grandeur/Azera(HG)	2012	General	IMM(Immobilizer)	Read Fault Code	
Grandeur/Azera(HG)	2012	General	IMM(Immobilizer)	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(HG)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Grandeur/Azera(HG)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grandeur/Azera(HG)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(HG)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Version Information	
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Read Fault Code	
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Actuation Test	
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Special Function	Smart Key Code Saving
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Special Function	Neutralization Mode
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Special Function	SMK Status Information
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Special Function	ESCL Status Information
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Special Function	FOB Key Status Information
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Special Function	Serial Communication Line Check
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Special Function	Antenna Status Check
Grandeur/Azera(HG)	2012	General	Smart Key Unit	Special Function	ESCL Open Status Check
Grandeur/Azera(HG)	2012	General	Transmitter Code Saving	Read Data Stream	
Grandeur/Azera(HG)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Grandeur/Azera(HG)	2012	General	CCS(Cruise Control System)	Version Information	
Grandeur/Azera(HG)	2012	General	CCS(Cruise Control System)	Read Fault Code	
Grandeur/Azera(HG)	2012	General	CCS(Cruise Control System)	Clear Fault Memory	
Grandeur/Azera(HG)	2012	General	CCS(Cruise Control System)	Read Data Stream	
Grandeur/Azera(HG)	2012	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Special Function	CVVT Test
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur/Azera(HG)	2012	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Grandeur/Azera(IG)	2018	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(IG)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(IG)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(IG)	2018	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(IG)	2018	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(IG)	2018	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Grandeur/Azera(IG)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(IG)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(IG)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(IG)	2018	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Grandeur/Azera(IG)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur/Azera(IG)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur/Azera(IG)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur/Azera(IG)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur/Azera(IG)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Grandeur/Azera(IG)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Grandeur/Azera(IG)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur/Azera(IG)	2018	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Grandeur/Azera(IG)	2018	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(ECU Replacement)
Grandeur/Azera(IG)	2018	General	SCC/AEB	Version Information	
Grandeur/Azera(IG)	2018	General	SCC/AEB	Read Fault Code	
Grandeur/Azera(IG)	2018	General	SCC/AEB	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	SCC/AEB	Read Data Stream	
Grandeur/Azera(IG)	2018	General	SCC/AEB	Special Function	Variant Coding
Grandeur/Azera(IG)	2018	General	SCC/AEB	Special Function	Radar Sensor Alignment(SCC/AEB)
Grandeur/Azera(IG)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(IG)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(IG)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(IG)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Grandeur/Azera(IG)	2018	General	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Grandeur/Azera(IG)	2018	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(IG)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(IG)	2018	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(IG)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Turn)
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Read Fault Code	
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	User Option
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	HUD Calibration
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Password Teaching/Changing
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Neutral Mode
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Limp Home Mode
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Learnt Keys
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Current FOB Key Check
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Neutralization Mode
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	SMK Status Information
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	ESCL Status Information
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	ESCL Open Status Check
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	FOB Key Status Information
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Antenna Status Check
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Smart Key Code Saving
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Power Trunk Mode
Grandeur/Azera(IG)	2018	General	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Grandeur/Azera(IG)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Grandeur/Azera(IG)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Grandeur/Azera(IG)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Grandeur/Azera(IG)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Grandeur/Azera(IG)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Grandeur/Azera(IG)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Grandeur/Azera(IG)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Grandeur/Azera(IG)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Grandeur/Azera(IG)	2018	General	EPS(Electronic Power Steering)	Version Information	
Grandeur/Azera(IG)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Grandeur/Azera(IG)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Grandeur/Azera(IG)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Grandeur/Azera(IG)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Grandeur/Azera(IG)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Grandeur/Azera(IG)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Grandeur/Azera(IG)	2018	General	Blind Spot Detection	Version Information	
Grandeur/Azera(IG)	2018	General	Blind Spot Detection	Read Fault Code	
Grandeur/Azera(IG)	2018	General	Blind Spot Detection	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	Blind Spot Detection	Read Data Stream	
Grandeur/Azera(IG)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Grandeur/Azera(IG)	2018	General	Blind Spot Detection	Special Function	BSD Variant Coding

model	year	area	system	function	subfunction
Grandeur/Azera(IG)	2018	General	Multi Function Camera	Version Information	
Grandeur/Azera(IG)	2018	General	Multi Function Camera	Read Fault Code	
Grandeur/Azera(IG)	2018	General	Multi Function Camera	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	Multi Function Camera	Read Data Stream	
Grandeur/Azera(IG)	2018	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
Grandeur/Azera(IG)	2018	General	Multi Function Camera	Special Function	SPTAC Calibration
Grandeur/Azera(IG)	2018	General	Multi Function Camera	Special Function	SPC Calibration
Grandeur/Azera(IG)	2018	General	Around View Monitor System	Version Information	
Grandeur/Azera(IG)	2018	General	Around View Monitor System	Read Fault Code	
Grandeur/Azera(IG)	2018	General	Around View Monitor System	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	Around View Monitor System	Read Data Stream	
Grandeur/Azera(IG)	2018	General	Around View Monitor System	Actuation Test	
Grandeur/Azera(IG)	2018	General	Around View Monitor System	Special Function	SVM Calibration
Grandeur/Azera(IG)	2018	General	Parking Guide System	Version Information	
Grandeur/Azera(IG)	2018	General	Parking Guide System	Read Fault Code	
Grandeur/Azera(IG)	2018	General	Parking Guide System	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	Parking Guide System	Read Data Stream	
Grandeur/Azera(IG)	2018	General	Parking Guide System	Special Function	Camera Image Correction Function
Grandeur/Azera(IG)	2018	General	Amplifier	Version Information	
Grandeur/Azera(IG)	2018	General	Amplifier	Special Function	AMP Operation Test
Grandeur/Azera(IG)	2018	General	Amplifier	Read Fault Code	
Grandeur/Azera(IG)	2018	General	Amplifier	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	Amplifier	Actuation Test	
Grandeur/Azera(IG)	2018	General	Integrated Central Control Unit	Version Information	
Grandeur/Azera(IG)	2018	General	Integrated Central Control Unit	Read Fault Code	
Grandeur/Azera(IG)	2018	General	Integrated Central Control Unit	Clear Fault Memory	
Grandeur/Azera(IG)	2018	General	Integrated Central Control Unit	Read Data Stream	
Grandeur/Azera(IG)	2018	General	Integrated Central Control Unit	Actuation Test	

model	year	area	system	function	subfunction
Grandeur/Azera(IG)	2018	General	Integrated Central Control Unit	Special Function	Battery Discharge Warning History Check
Grandeur/Azera(IG)	2018	General	Integrated Central Control Unit	Special Function	Erase Network Configuration
Grandeur/Azera(IG)	2018	General	Integrated Central Control Unit	Special Function	User Option
Grandeur/Azera(IG)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Grandeur/Azera(IG)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2011	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(TG)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(TG)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(TG)	2011	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Grandeur/Azera(TG)	2011	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur/Azera(TG)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur/Azera(TG)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur/Azera(TG)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur/Azera(TG)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur/Azera(TG)	2011	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Grandeur/Azera(TG)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode Auto Detected
Grandeur/Azera(TG)	2011	General	ABS(Anti-lock Braking System)	Special Function	Configuration Reset(FSP/FSC)Only

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2011	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Grandeur/Azera(TG)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(TG)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(TG)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(TG)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(TG)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Grandeur/Azera(TG)	2011	General	AC(Air Conditioning)	Version Information	
Grandeur/Azera(TG)	2011	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(TG)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(TG)	2011	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(TG)	2011	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(TG)	2011	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(TG)	2011	General	BCM(Body Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2011	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2011	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2011	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(TG)	2011	General	EPS(Electronic Power Steering)	Version Information	
Grandeur/Azera(TG)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Grandeur/Azera(TG)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grandeur/Azera(TG)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling System	Version Information	
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling System	Read Fault Code	
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling System	Clear Fault Memory	
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling System	Read Data Stream	
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grandeur/Azera(TG)	2011	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(TG)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Grandeur/Azera(TG)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(TG)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(TG)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Grandeur/Azera(TG)	2011	General	Smart Key	Version Information	
Grandeur/Azera(TG)	2011	General	Smart Key	Read Fault Code	
Grandeur/Azera(TG)	2011	General	Smart Key	Clear Fault Memory	
Grandeur/Azera(TG)	2011	General	Smart Key	Read Data Stream	
Grandeur/Azera(TG)	2011	General	Smart Key	Actuation Test	
Grandeur/Azera(TG)	2011	General	Smart Key	Special Function	ECM Neutralization
Grandeur/Azera(TG)	2011	General	Smart Key	Special Function	IFU Neutralization
Grandeur/Azera(TG)	2011	General	Smart Key	Special Function	Smart Key Code Saving
Grandeur/Azera(TG)	2011	General	Smart Key	Special Function	Serial Communication Line Check
Grandeur/Azera(TG)	2011	General	Smart Key	Special Function	Antenna Status Check
Grandeur/Azera(TG)	2011	General	Transmitter Code Saving	Read Data Stream	
Grandeur/Azera(TG)	2011	General	Transmitter Code Saving	Special Function	Register Transmitter
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	VERSION CONFIGURATION
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Grandeur/Azera(TG)	2011	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling	Version Information	
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling	Read Fault Code	
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling	Read Data Stream	
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling	Special Function	Level Initialization
Grandeur/Azera(TG)	2011	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Grandeur/Azera(TG)	2011	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grandeur/Azera(TG)	2011	General	IMM(Immobilizer)	Special Function	Learnt Keys
Grandeur/Azera(TG)	2011	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Grandeur/Azera(TG)	2011	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grandeur/Azera(TG)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Grandeur/Azera(TG)	2010	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(TG)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(TG)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(TG)	2010	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur/Azera(TG)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur/Azera(TG)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur/Azera(TG)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur/Azera(TG)	2010	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Grandeur/Azera(TG)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur/Azera(TG)	2010	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Grandeur/Azera(TG)	2010	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Grandeur/Azera(TG)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(TG)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(TG)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(TG)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(TG)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Grandeur/Azera(TG)	2010	General	AC(Air Conditioning)	Version Information	
Grandeur/Azera(TG)	2010	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(TG)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(TG)	2010	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(TG)	2010	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(TG)	2010	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(TG)	2010	General	BCM(Body Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2010	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2010	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2010	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(TG)	2010	General	BCM(Body Control Module)	Special Function	User Option
Grandeur/Azera(TG)	2010	General	EPS(Electronic Power Steering)	Version Information	
Grandeur/Azera(TG)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
Grandeur/Azera(TG)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grandeur/Azera(TG)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling System	Version Information	
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling System	Read Fault Code	

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling System	Clear Fault Memory	
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling System	Read Data Stream	
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grandeur/Azera(TG)	2010	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(TG)	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Grandeur/Azera(TG)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grandeur/Azera(TG)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(TG)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(TG)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Grandeur/Azera(TG)	2010	General	Smart Key	Version Information	
Grandeur/Azera(TG)	2010	General	Smart Key	Read Fault Code	
Grandeur/Azera(TG)	2010	General	Smart Key	Clear Fault Memory	
Grandeur/Azera(TG)	2010	General	Smart Key	Read Data Stream	
Grandeur/Azera(TG)	2010	General	Smart Key	Actuation Test	
Grandeur/Azera(TG)	2010	General	Smart Key	Special Function	ESCL Open Status Check
Grandeur/Azera(TG)	2010	General	Smart Key	Special Function	Smart Key Code Saving
Grandeur/Azera(TG)	2010	General	Smart Key	Special Function	Neutralization Mode
Grandeur/Azera(TG)	2010	General	Smart Key	Special Function	SMK Status Information
Grandeur/Azera(TG)	2010	General	Smart Key	Special Function	PDM Status Information
Grandeur/Azera(TG)	2010	General	Smart Key	Special Function	FOB Key Status Information
Grandeur/Azera(TG)	2010	General	Smart Key	Special Function	Serial Communication Line Check
Grandeur/Azera(TG)	2010	General	Smart Key	Special Function	Antenna Status Check
Grandeur/Azera(TG)	2010	General	Transmitter Code Saving	Read Data Stream	
Grandeur/Azera(TG)	2010	General	Transmitter Code Saving	Special Function	Register Transmitter
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur/Azera(TG)	2010	General	Smart Key	Special Function	ECM Neutralization
Grandeur/Azera(TG)	2010	General	Smart Key	Special Function	IFU Neutralization
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	VERSION CONFIGURATION
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Grandeur/Azera(TG)	2010	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling	Version Information	
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling	Read Fault Code	
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling	Clear Fault Memory	
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling	Read Data Stream	
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling	Special Function	Level Initialization
Grandeur/Azera(TG)	2010	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Grandeur/Azera(TG)	2010	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grandeur/Azera(TG)	2010	General	IMM(Immobilizer)	Special Function	Learnt Keys
Grandeur/Azera(TG)	2010	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Grandeur/Azera(TG)	2010	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grandeur/Azera(TG)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2009	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(TG)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2009	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2009	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(TG)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(TG)	2009	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur/Azera(TG)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur/Azera(TG)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur/Azera(TG)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur/Azera(TG)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur/Azera(TG)	2009	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Grandeur/Azera(TG)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur/Azera(TG)	2009	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Grandeur/Azera(TG)	2009	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Grandeur/Azera(TG)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(TG)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(TG)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(TG)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(TG)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Grandeur/Azera(TG)	2009	General	AC(Air Conditioning)	Version Information	
Grandeur/Azera(TG)	2009	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(TG)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(TG)	2009	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(TG)	2009	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(TG)	2009	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(TG)	2009	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2009	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2009	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2009	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(TG)	2009	General	BCM(Body Control Module)	Special Function	User Option
Grandeur/Azera(TG)	2009	General	EPS(Electronic Power Steering)	Version Information	
Grandeur/Azera(TG)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
Grandeur/Azera(TG)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grandeur/Azera(TG)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling System	Version Information	
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling System	Read Fault Code	
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling System	Clear Fault Memory	
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling System	Read Data Stream	
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grandeur/Azera(TG)	2009	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(TG)	2009	General	IMM(Immobilizer)	Special Function	Password
Grandeur/Azera(TG)	2009	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Grandeur/Azera(TG)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grandeur/Azera(TG)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(TG)	2009	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(TG)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Grandeur/Azera(TG)	2009	General	Smart Key	Version Information	
Grandeur/Azera(TG)	2009	General	Smart Key	Read Fault Code	
Grandeur/Azera(TG)	2009	General	Smart Key	Clear Fault Memory	
Grandeur/Azera(TG)	2009	General	Smart Key	Read Data Stream	
Grandeur/Azera(TG)	2009	General	Smart Key	Actuation Test	
Grandeur/Azera(TG)	2009	General	Smart Key	Special Function	ECM Neutralization
Grandeur/Azera(TG)	2009	General	Smart Key	Special Function	IFU Neutralization
Grandeur/Azera(TG)	2009	General	Smart Key	Special Function	Serial Communication Line Check
Grandeur/Azera(TG)	2009	General	Smart Key	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2009	General	Smart Key	Special Function	ESCL Open Status Check
Grandeur/Azera(TG)	2009	General	Smart Key	Special Function	Smart Key Code Saving
Grandeur/Azera(TG)	2009	General	Smart Key	Special Function	Neutralization Mode
Grandeur/Azera(TG)	2009	General	Smart Key	Special Function	SMK Status Information
Grandeur/Azera(TG)	2009	General	Smart Key	Special Function	PDM Status Information
Grandeur/Azera(TG)	2009	General	Smart Key	Special Function	FOB Key Status Information
Grandeur/Azera(TG)	2009	General	CODE	Read Data Stream	
Grandeur/Azera(TG)	2009	General	CODE	Special Function	Register Transmitter
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	VERSION CONFIGURATION
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Grandeur/Azera(TG)	2009	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling	Version Information	
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling	Read Fault Code	
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling	Clear Fault Memory	
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling	Read Data Stream	
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling	Special Function	Level Initialization
Grandeur/Azera(TG)	2009	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Grandeur/Azera(TG)	2009	General	IMM(Immobilizer)	Special Function	Password Record/Change
Grandeur/Azera(TG)	2009	General	IMM(Immobilizer)	Special Function	Learnt Keys
Grandeur/Azera(TG)	2009	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Grandeur/Azera(TG)	2009	General	Transmitter Code Saving	Read Data Stream	
Grandeur/Azera(TG)	2009	General	Transmitter Code Saving	Special Function	Register Transmitter
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Grandeur/Azera(TG)	2009	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grandeur/Azera(TG)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Grandeur/Azera(TG)	2008	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(TG)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2008	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2008	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(TG)	2008	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(TG)	2008	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur/Azera(TG)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur/Azera(TG)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur/Azera(TG)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur/Azera(TG)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur/Azera(TG)	2008	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Grandeur/Azera(TG)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur/Azera(TG)	2008	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Grandeur/Azera(TG)	2008	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only
Grandeur/Azera(TG)	2008	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(TG)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(TG)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(TG)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(TG)	2008	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Grandeur/Azera(TG)	2008	General	AC(Air Conditioning)	Version Information	
Grandeur/Azera(TG)	2008	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(TG)	2008	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(TG)	2008	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(TG)	2008	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(TG)	2008	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(TG)	2008	General	BCM(Body Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2008	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2008	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2008	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(TG)	2008	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(TG)	2008	General	IMM(Immobilizer)	Special Function	Password
Grandeur/Azera(TG)	2008	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Grandeur/Azera(TG)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grandeur/Azera(TG)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(TG)	2008	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(TG)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Grandeur/Azera(TG)	2008	General	Transmitter Code Saving	Read Data Stream	
Grandeur/Azera(TG)	2008	General	Transmitter Code Saving	Special Function	Register Transmitter
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur/Azera(TG)	2008	General	EPS(Electronic Power Steering)	Version Information	
Grandeur/Azera(TG)	2008	General	EPS(Electronic Power Steering)	Read Fault Code	
Grandeur/Azera(TG)	2008	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grandeur/Azera(TG)	2008	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2008	General	Auto Headlamp Leveling System	Version Information	
Grandeur/Azera(TG)	2008	General	Auto Headlamp Leveling System	Read Fault Code	
Grandeur/Azera(TG)	2008	General	Auto Headlamp Leveling System	Clear Fault Memory	
Grandeur/Azera(TG)	2008	General	Auto Headlamp Leveling System	Read Data Stream	
Grandeur/Azera(TG)	2008	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Grandeur/Azera(TG)	2008	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grandeur/Azera(TG)	2008	General	Smart Key	Version Information	
Grandeur/Azera(TG)	2008	General	Smart Key	Read Fault Code	
Grandeur/Azera(TG)	2008	General	Smart Key	Clear Fault Memory	
Grandeur/Azera(TG)	2008	General	Smart Key	Read Data Stream	
Grandeur/Azera(TG)	2008	General	Smart Key	Actuation Test	
Grandeur/Azera(TG)	2008	General	Smart Key	Special Function	ECM Neutralization
Grandeur/Azera(TG)	2008	General	Smart Key	Special Function	IFU Neutralization
Grandeur/Azera(TG)	2008	General	Smart Key	Special Function	Smart Key Code Saving
Grandeur/Azera(TG)	2008	General	Smart Key	Special Function	Serial Communication Line Check
Grandeur/Azera(TG)	2008	General	Smart Key	Special Function	Antenna Status Check
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Grandeur/Azera(TG)	2008	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grandeur/Azera(TG)	2008	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2007	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(TG)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2007	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(TG)	2007	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(TG)	2007	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur/Azera(TG)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur/Azera(TG)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur/Azera(TG)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur/Azera(TG)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur/Azera(TG)	2007	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Grandeur/Azera(TG)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur/Azera(TG)	2007	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Grandeur/Azera(TG)	2007	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Grandeur/Azera(TG)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(TG)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(TG)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(TG)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(TG)	2007	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Grandeur/Azera(TG)	2007	General	AC(Air Conditioning)	Version Information	
Grandeur/Azera(TG)	2007	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(TG)	2007	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(TG)	2007	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(TG)	2007	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(TG)	2007	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(TG)	2007	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2007	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2007	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2007	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(TG)	2007	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(TG)	2007	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Grandeur/Azera(TG)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grandeur/Azera(TG)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(TG)	2007	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(TG)	2007	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Grandeur/Azera(TG)	2007	General	Transmitter Code Saving	Read Data Stream	
Grandeur/Azera(TG)	2007	General	Transmitter Code Saving	Special Function	Register Transmitter
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur/Azera(TG)	2007	General	EPS(Electronic Power Steering)	Version Information	
Grandeur/Azera(TG)	2007	General	EPS(Electronic Power Steering)	Read Fault Code	
Grandeur/Azera(TG)	2007	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grandeur/Azera(TG)	2007	General	EPS(Electronic Power Steering)	Read Data Stream	
Grandeur/Azera(TG)	2007	General	Auto Headlamp Leveling System	Version Information	
Grandeur/Azera(TG)	2007	General	Auto Headlamp Leveling System	Read Fault Code	
Grandeur/Azera(TG)	2007	General	Auto Headlamp Leveling System	Clear Fault Memory	
Grandeur/Azera(TG)	2007	General	Auto Headlamp Leveling System	Read Data Stream	
Grandeur/Azera(TG)	2007	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Grandeur/Azera(TG)	2007	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grandeur/Azera(TG)	2007	General	Smart Key	Version Information	
Grandeur/Azera(TG)	2007	General	Smart Key	Read Fault Code	
Grandeur/Azera(TG)	2007	General	Smart Key	Clear Fault Memory	
Grandeur/Azera(TG)	2007	General	Smart Key	Read Data Stream	
Grandeur/Azera(TG)	2007	General	Smart Key	Actuation Test	
Grandeur/Azera(TG)	2007	General	Smart Key	Special Function	ECM Neutralization

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2007	General	Smart Key	Special Function	IFU Neutralization
Grandeur/Azera(TG)	2007	General	Smart Key	Special Function	Smart Key Code Saving
Grandeur/Azera(TG)	2007	General	Smart Key	Special Function	Serial Communication Line Check
Grandeur/Azera(TG)	2007	General	Smart Key	Special Function	Antenna Status Check
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Grandeur/Azera(TG)	2007	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Grandeur/Azera(TG)	2007	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Grandeur/Azera(TG)	2006	General	ECM(Engine Control Module)	Version Information	
Grandeur/Azera(TG)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2006	General	ECM(Engine Control Module)	Actuation Test	
Grandeur/Azera(TG)	2006	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Grandeur/Azera(TG)	2006	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Grandeur/Azera(TG)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Grandeur/Azera(TG)	2006	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Grandeur/Azera(TG)	2006	General	TCM(Transmission Control Module)	Version Information	
Grandeur/Azera(TG)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2006	General	TCM(Transmission Control Module)	Read FreezeData	
Grandeur/Azera(TG)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Grandeur/Azera(TG)	2006	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Grandeur/Azera(TG)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Grandeur/Azera(TG)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur/Azera(TG)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur/Azera(TG)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Grandeur/Azera(TG)	2006	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Grandeur/Azera(TG)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Grandeur/Azera(TG)	2006	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Grandeur/Azera(TG)	2006	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Grandeur/Azera(TG)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Grandeur/Azera(TG)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur/Azera(TG)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur/Azera(TG)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur/Azera(TG)	2006	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Grandeur/Azera(TG)	2006	General	AC(Air Conditioning)	Version Information	
Grandeur/Azera(TG)	2006	General	AC(Air Conditioning)	Read Fault Code	
Grandeur/Azera(TG)	2006	General	AC(Air Conditioning)	Clear Fault Memory	
Grandeur/Azera(TG)	2006	General	AC(Air Conditioning)	Read Data Stream	
Grandeur/Azera(TG)	2006	General	AC(Air Conditioning)	Actuation Test	
Grandeur/Azera(TG)	2006	General	BCM(Body Control Module)	Version Information	
Grandeur/Azera(TG)	2006	General	BCM(Body Control Module)	Read Fault Code	
Grandeur/Azera(TG)	2006	General	BCM(Body Control Module)	Clear Fault Memory	
Grandeur/Azera(TG)	2006	General	BCM(Body Control Module)	Read Data Stream	
Grandeur/Azera(TG)	2006	General	BCM(Body Control Module)	Actuation Test	
Grandeur/Azera(TG)	2006	General	EPS(Electronic Power Steering)	Version Information	
Grandeur/Azera(TG)	2006	General	EPS(Electronic Power Steering)	Read Fault Code	
Grandeur/Azera(TG)	2006	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Grandeur/Azera(TG)	2006	General	EPS(Electronic Power Steering)	Read Data Stream	
Grandeur/Azera(TG)	2006	General	Auto Headlamp Leveling System	Version Information	
Grandeur/Azera(TG)	2006	General	Auto Headlamp Leveling System	Read Fault Code	
Grandeur/Azera(TG)	2006	General	Auto Headlamp Leveling System	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur/Azera(TG)	2006	General	Auto Headlamp Leveling System	Read Data Stream	
Grandeur/Azera(TG)	2006	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Grandeur/Azera(TG)	2006	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Grandeur/Azera(TG)	2006	General	IMM(Immobilizer)	Read Data Stream	
Grandeur/Azera(TG)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Grandeur/Azera(TG)	2006	General	IMM(Immobilizer)	Special Function	Password
Grandeur/Azera(TG)	2006	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Grandeur/Azera(TG)	2006	General	IMM(Immobilizer)	Special Function	Teaching
Grandeur/Azera(TG)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Grandeur/Azera(TG)	2006	General	Smart Key	Version Information	
Grandeur/Azera(TG)	2006	General	Smart Key	Read Fault Code	
Grandeur/Azera(TG)	2006	General	Smart Key	Clear Fault Memory	
Grandeur/Azera(TG)	2006	General	Smart Key	Read Data Stream	
Grandeur/Azera(TG)	2006	General	Smart Key	Actuation Test	
Grandeur/Azera(TG)	2006	General	Smart Key	Special Function	ECM Neutralization
Grandeur/Azera(TG)	2006	General	Smart Key	Special Function	IFU Neutralization
Grandeur/Azera(TG)	2006	General	Smart Key	Special Function	Smart Key Code Saving
Grandeur/Azera(TG)	2006	General	Smart Key	Special Function	Serial Communication Line
Grandeur/Azera(TG)	2006	General	Smart Key	Special Function	Check
Grandeur/Azera(TG)	2006	General	Smart Key	Special Function	Antenna Status Check
Grandeur/Azera(TG)	2006	General	Transmitter Code Saving	Read Data Stream	
Grandeur/Azera(TG)	2006	General	Transmitter Code Saving	Special Function	Register Transmitter
Grandeur(LX)	1998	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Grandeur(LX)	1998	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Grandeur(LX)	1998	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Grandeur(LX)	1998	General	ECM(Engine Control Module)V6-DOHC	Read Fault Code	
Grandeur(LX)	1998	General	ECM(Engine Control Module)V6-DOHC	Clear Fault Memory	
Grandeur(LX)	1998	General	ECM(Engine Control Module)V6-DOHC	Read Data Stream	
Grandeur(LX)	1998	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(LX)	1998	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(LX)	1998	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Grandeur(LX)	1998	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(LX)	1998	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur(LX)	1998	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur(LX)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(LX)	1998	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur(LX)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur(LX)	1998	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Grandeur(LX)	1998	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Grandeur(LX)	1998	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Grandeur(LX)	1998	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Grandeur(LX)	1998	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Grandeur(LX)	1998	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Grandeur(LX)	1997	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Grandeur(LX)	1997	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Grandeur(LX)	1997	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Grandeur(LX)	1997	General	ECM(Engine Control Module)V6-DOHC	Read Fault Code	
Grandeur(LX)	1997	General	ECM(Engine Control Module)V6-DOHC	Clear Fault Memory	
Grandeur(LX)	1997	General	ECM(Engine Control Module)V6-DOHC	Read Data Stream	
Grandeur(LX)	1997	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(LX)	1997	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(LX)	1997	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(LX)	1997	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(LX)	1997	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur(LX)	1997	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur(LX)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(LX)	1997	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur(LX)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur(LX)	1997	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Grandeur(LX)	1997	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur(LX)	1997	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Grandeur(LX)	1997	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Grandeur(LX)	1997	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Grandeur(LX)	1997	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Grandeur(LX)	1996	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Grandeur(LX)	1996	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Grandeur(LX)	1996	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Grandeur(LX)	1996	General	ECM(Engine Control Module)V6-DOHC	Read Fault Code	
Grandeur(LX)	1996	General	ECM(Engine Control Module)V6-DOHC	Clear Fault Memory	
Grandeur(LX)	1996	General	ECM(Engine Control Module)V6-DOHC	Read Data Stream	
Grandeur(LX)	1996	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(LX)	1996	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(LX)	1996	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(LX)	1996	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(LX)	1996	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur(LX)	1996	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur(LX)	1996	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(LX)	1996	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur(LX)	1996	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur(LX)	1996	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Grandeur(LX)	1996	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Grandeur(LX)	1996	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Grandeur(LX)	1996	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Grandeur(LX)	1996	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Grandeur(LX)	1996	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Grandeur(LX)	1995	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Grandeur(LX)	1995	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Grandeur(LX)	1995	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Grandeur(LX)	1995	General	ECM(Engine Control Module)V6-DOHC	Read Fault Code	

model	year	area	system	function	subfunction
Grandeur(LX)	1995	General	ECM(Engine Control Module)V6-DOHC	Clear Fault Memory	
Grandeur(LX)	1995	General	ECM(Engine Control Module)V6-DOHC	Read Data Stream	
Grandeur(LX)	1995	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(LX)	1995	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(LX)	1995	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(LX)	1995	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(LX)	1995	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur(LX)	1995	General	ABS(Anti-lock Braking System)	Read Data Stream	
Grandeur(LX)	1995	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(LX)	1995	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur(LX)	1995	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur(LX)	1995	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Grandeur(LX)	1995	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Grandeur(LX)	1995	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Grandeur(LX)	1995	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Grandeur(LX)	1995	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Grandeur(LX)	1995	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Grandeur(LX)	1994	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Grandeur(LX)	1994	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Grandeur(LX)	1994	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Grandeur(LX)	1994	General	ECM(Engine Control Module)V6-DOHC	Read Fault Code	
Grandeur(LX)	1994	General	ECM(Engine Control Module)V6-DOHC	Clear Fault Memory	
Grandeur(LX)	1994	General	ECM(Engine Control Module)V6-DOHC	Read Data Stream	
Grandeur(LX)	1994	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(LX)	1994	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(LX)	1994	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(LX)	1994	General	ABS(Anti-lock Braking System)	Read Fault Code	
Grandeur(LX)	1994	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Grandeur(LX)	1994	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Grandeur(LX)	1994	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Grandeur(LX)	1994	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Grandeur(LX)	1994	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Grandeur(LX)	1994	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Grandeur(LX)	1994	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Grandeur(LX)	1994	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Grandeur(LX)	1994	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Grandeur(LX)	1994	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Grandeur(LX)	1994	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Grandeur(LX)	1993	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Grandeur(LX)	1993	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Grandeur(LX)	1993	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Grandeur(LX)	1993	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Grandeur(LX)	1993	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Grandeur(LX)	1993	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Grandeur(LX)	1993	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(LX)	1993	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(LX)	1993	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(LX)	1992	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Grandeur(LX)	1992	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Grandeur(LX)	1992	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Grandeur(LX)	1992	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Grandeur(LX)	1992	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Grandeur(LX)	1992	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Grandeur(LX)	1992	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(LX)	1992	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(LX)	1992	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(LX)	1991	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Grandeur(LX)	1991	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	

model	year	area	system	function	subfunction
Grandeur(LX)	1991	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Grandeur(LX)	1991	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Grandeur(LX)	1991	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Grandeur(LX)	1991	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Grandeur(LX)	1991	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(LX)	1991	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(LX)	1991	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(LX)	1990	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Grandeur(LX)	1990	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Grandeur(LX)	1990	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Grandeur(LX)	1990	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Grandeur(LX)	1990	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Grandeur(LX)	1990	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Grandeur(LX)	1990	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(LX)	1990	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(LX)	1990	General	TCM(Transmission Control Module)	Read Data Stream	
Grandeur(LX)	1989	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Grandeur(LX)	1989	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Grandeur(LX)	1989	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Grandeur(LX)	1989	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Grandeur(LX)	1989	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Grandeur(LX)	1989	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Grandeur(LX)	1989	General	TCM(Transmission Control Module)	Read Fault Code	
Grandeur(LX)	1989	General	TCM(Transmission Control Module)	Clear Fault Memory	
Grandeur(LX)	1989	General	TCM(Transmission Control Module)	Read Data Stream	
H-1 Truck(SR)	2009	General	ECM(Engine Control Module)	Read Fault Code	
H-1 Truck(SR)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2009	General	ECM(Engine Control Module)	Read Data Stream	
H-1 Truck(SR)	2009	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
H-1 Truck(SR)	2009	General	TCM(Transmission Control Module)	Version Information	
H-1 Truck(SR)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
H-1 Truck(SR)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
H-1 Truck(SR)	2009	General	TCM(Transmission Control Module)	Actuation Test	
H-1 Truck(SR)	2009	General	ABS(Anti-lock Braking System)	Version Information	
H-1 Truck(SR)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1 Truck(SR)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1 Truck(SR)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1 Truck(SR)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1 Truck(SR)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1 Truck(SR)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1 Truck(SR)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1 Truck(SR)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1 Truck(SR)	2008	General	ECM(Engine Control Module)	Read Fault Code	
H-1 Truck(SR)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2008	General	ECM(Engine Control Module)	Read Data Stream	
H-1 Truck(SR)	2008	General	ECM(Engine Control Module)	Actuation Test	
H-1 Truck(SR)	2008	General	TCM(Transmission Control Module)	Version Information	
H-1 Truck(SR)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
H-1 Truck(SR)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
H-1 Truck(SR)	2008	General	TCM(Transmission Control Module)	Actuation Test	
H-1 Truck(SR)	2008	General	ABS(Anti-lock Braking System)	Version Information	
H-1 Truck(SR)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1 Truck(SR)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1 Truck(SR)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1 Truck(SR)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1 Truck(SR)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
H-1 Truck(SR)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1 Truck(SR)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1 Truck(SR)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1 Truck(SR)	2007	General	ECM(Engine Control Module)	Read Fault Code	
H-1 Truck(SR)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2007	General	ECM(Engine Control Module)	Read Data Stream	
H-1 Truck(SR)	2007	General	ECM(Engine Control Module)	Actuation Test	
H-1 Truck(SR)	2007	General	TCM(Transmission Control Module)	Version Information	
H-1 Truck(SR)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
H-1 Truck(SR)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
H-1 Truck(SR)	2007	General	TCM(Transmission Control Module)	Actuation Test	
H-1 Truck(SR)	2007	General	ABS(Anti-lock Braking System)	Version Information	
H-1 Truck(SR)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1 Truck(SR)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1 Truck(SR)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1 Truck(SR)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1 Truck(SR)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1 Truck(SR)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1 Truck(SR)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1 Truck(SR)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1 Truck(SR)	2006	General	ECM(Engine Control Module)	Read Fault Code	
H-1 Truck(SR)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2006	General	ECM(Engine Control Module)	Read Data Stream	
H-1 Truck(SR)	2006	General	ECM(Engine Control Module)	Actuation Test	
H-1 Truck(SR)	2006	General	TCM(Transmission Control Module)	Version Information	
H-1 Truck(SR)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
H-1 Truck(SR)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2006	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
H-1 Truck(SR)	2006	General	TCM(Transmission Control Module)	Actuation Test	
H-1 Truck(SR)	2006	General	ABS(Anti-lock Braking System)	Version Information	
H-1 Truck(SR)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1 Truck(SR)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1 Truck(SR)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1 Truck(SR)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1 Truck(SR)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1 Truck(SR)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1 Truck(SR)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1 Truck(SR)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1 Truck(SR)	2005	General	ECM(Engine Control Module)	Read Fault Code	
H-1 Truck(SR)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2005	General	ECM(Engine Control Module)	Read Data Stream	
H-1 Truck(SR)	2005	General	ECM(Engine Control Module)	Actuation Test	
H-1 Truck(SR)	2005	General	TCM(Transmission Control Module)	Version Information	
H-1 Truck(SR)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
H-1 Truck(SR)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
H-1 Truck(SR)	2005	General	TCM(Transmission Control Module)	Actuation Test	
H-1 Truck(SR)	2005	General	ABS(Anti-lock Braking System)	Version Information	
H-1 Truck(SR)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1 Truck(SR)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1 Truck(SR)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1 Truck(SR)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1 Truck(SR)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1 Truck(SR)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1 Truck(SR)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1 Truck(SR)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1 Truck(SR)	2004	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
H-1 Truck(SR)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2004	General	ECM(Engine Control Module)	Read Data Stream	
H-1 Truck(SR)	2004	General	ECM(Engine Control Module)	Actuation Test	
H-1 Truck(SR)	2004	General	TCM(Transmission Control Module)	Version Information	
H-1 Truck(SR)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
H-1 Truck(SR)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
H-1 Truck(SR)	2004	General	TCM(Transmission Control Module)	Actuation Test	
H-1 Truck(SR)	2004	General	ABS(Anti-lock Braking System)	Version Information	
H-1 Truck(SR)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1 Truck(SR)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1 Truck(SR)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1 Truck(SR)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1 Truck(SR)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1 Truck(SR)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1 Truck(SR)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1 Truck(SR)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1 Truck(SR)	2003	General	ECM(Engine Control Module)	Read Fault Code	
H-1 Truck(SR)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2003	General	ECM(Engine Control Module)	Read Data Stream	
H-1 Truck(SR)	2003	General	ECM(Engine Control Module)	Actuation Test	
H-1 Truck(SR)	2003	General	TCM(Transmission Control Module)	Version Information	
H-1 Truck(SR)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
H-1 Truck(SR)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
H-1 Truck(SR)	2003	General	TCM(Transmission Control Module)	Actuation Test	
H-1 Truck(SR)	2003	General	ABS(Anti-lock Braking System)	Version Information	
H-1 Truck(SR)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1 Truck(SR)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
H-1 Truck(SR)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1 Truck(SR)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1 Truck(SR)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1 Truck(SR)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1 Truck(SR)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1 Truck(SR)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1 Truck(SR)	2002	General	ECM(Engine Control Module)	Read Fault Code	
H-1 Truck(SR)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2002	General	ECM(Engine Control Module)	Read Data Stream	
H-1 Truck(SR)	2002	General	ECM(Engine Control Module)	Actuation Test	
H-1 Truck(SR)	2002	General	TCM(Transmission Control Module)	Version Information	
H-1 Truck(SR)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
H-1 Truck(SR)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
H-1 Truck(SR)	2002	General	TCM(Transmission Control Module)	Actuation Test	
H-1 Truck(SR)	2002	General	ABS(Anti-lock Braking System)	Version Information	
H-1 Truck(SR)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1 Truck(SR)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1 Truck(SR)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1 Truck(SR)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1 Truck(SR)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1 Truck(SR)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1 Truck(SR)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1 Truck(SR)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1 Truck(SR)	2001	General	ECM(Engine Control Module)	Read Fault Code	
H-1 Truck(SR)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2001	General	ECM(Engine Control Module)	Read Data Stream	
H-1 Truck(SR)	2001	General	ECM(Engine Control Module)	Actuation Test	
H-1 Truck(SR)	2001	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
H-1 Truck(SR)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
H-1 Truck(SR)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1 Truck(SR)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
H-1 Truck(SR)	2001	General	TCM(Transmission Control Module)	Actuation Test	
H-1 Truck(SR)	2001	General	ABS(Anti-lock Braking System)	Version Information	
H-1 Truck(SR)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1 Truck(SR)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1 Truck(SR)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1 Truck(SR)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1 Truck(SR)	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1 Truck(SR)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1 Truck(SR)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1 Truck(SR)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	2009	General	ECM(Engine Control Module)	Version Information	
H-1(A1)	2009	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	2009	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	2009	General	ECM(Engine Control Module)	Actuation Test	
H-1(A1)	2009	General	ECM(Engine Control Module)	Read FreezeData	
H-1(A1)	2009	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	2009	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	2009	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
H-1(A1)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	2009	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	2009	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	2009	General	IMM(Immobilizer)	Read Data Stream	
H-1(A1)	2009	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	2009	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	2009	General	IMM(Immobilizer)	Special Function	Master Key Delete
H-1(A1)	2009	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	2009	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	2009	General	Transmitter Code Saving	Special Function	Code Saving
H-1(A1)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1(A1)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1(A1)	2009	General	ECM(Engine Control Module)	Special Function	Component Change
H-1(A1)	2009	General	IMM(Immobilizer)	Special Function	Passive
H-1(A1)	2009	General	IMM(Immobilizer)	Special Function	Teaching/Changing
H-1(A1)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1(A1)	2009	General	IMM(Immobilizer)	Special Function	Teaching
H-1(A1)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1(A1)	2009	General	Fuel Fired Heater	Read Fault Code	
H-1(A1)	2009	General	Fuel Fired Heater	Clear Fault Memory	
H-1(A1)	2009	General	Fuel Fired Heater	Read Data Stream	
H-1(A1)	2009	General	Fuel Fired Heater	Actuation Test	
H-1(A1)	2008	General	ECM(Engine Control Module)	Version Information	
H-1(A1)	2008	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	2008	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	2008	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
H-1(A1)	2008	General	ECM(Engine Control Module)	Read FreezeData	
H-1(A1)	2008	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	2008	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	2008	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	2008	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	2008	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	2008	General	IMM(Immobilizer)	Read Data Stream	
H-1(A1)	2008	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	2008	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	2008	General	IMM(Immobilizer)	Special Function	Master Key Delete
H-1(A1)	2008	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	2008	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	2008	General	Transmitter Code Saving	Special Function	Code Saving
H-1(A1)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1(A1)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1(A1)	2008	General	ECM(Engine Control Module)	Special Function	Component Change
H-1(A1)	2008	General	IMM(Immobilizer)	Special Function	Password
H-1(A1)	2008	General	IMM(Immobilizer)	Special Function	Teaching/Changing
H-1(A1)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
H-1(A1)	2008	General	IMM(Immobilizer)	Special Function	Teaching
H-1(A1)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1(A1)	2008	General	Fuel Fired Heater	Read Fault Code	
H-1(A1)	2008	General	Fuel Fired Heater	Clear Fault Memory	
H-1(A1)	2008	General	Fuel Fired Heater	Read Data Stream	
H-1(A1)	2008	General	Fuel Fired Heater	Actuation Test	
H-1(A1)	2007	General	ECM(Engine Control Module)	Version Information	
H-1(A1)	2007	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	2007	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	2007	General	ECM(Engine Control Module)	Actuation Test	
H-1(A1)	2007	General	ECM(Engine Control Module)	Read FreezeData	
H-1(A1)	2007	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	2007	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	2007	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	2007	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	2007	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	2007	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
H-1(A1)	2007	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	2007	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	2007	General	IMM(Immobilizer)	Special Function	Master Key Delete
H-1(A1)	2007	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	2007	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	2007	General	Transmitter Code Saving	Special Function	Code Saving
H-1(A1)	2007	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1(A1)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1(A1)	2007	General	ECM(Engine Control Module)	Special Function	Component Change
H-1(A1)	2007	General	IMM(Immobilizer)	Special Function	Password
H-1(A1)	2007	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
H-1(A1)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1(A1)	2007	General	IMM(Immobilizer)	Special Function	Teaching
H-1(A1)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1(A1)	2007	General	Fuel Fired Heater	Read Fault Code	
H-1(A1)	2007	General	Fuel Fired Heater	Clear Fault Memory	
H-1(A1)	2007	General	Fuel Fired Heater	Read Data Stream	
H-1(A1)	2007	General	Fuel Fired Heater	Actuation Test	
H-1(A1)	2006	General	ECM(Engine Control Module)	Version Information	
H-1(A1)	2006	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	2006	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	2006	General	ECM(Engine Control Module)	Actuation Test	
H-1(A1)	2006	General	ECM(Engine Control Module)	Read FreezeData	
H-1(A1)	2006	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	2006	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	2006	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
H-1(A1)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	2006	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	2006	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	2006	General	IMM(Immobilizer)	Read Data Stream	
H-1(A1)	2006	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	2006	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	2006	General	IMM(Immobilizer)	Special Function	Master Key Delete
H-1(A1)	2006	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	2006	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	2006	General	Transmitter Code Saving	Special Function	Code Saving
H-1(A1)	2006	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1(A1)	2006	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1(A1)	2006	General	ECM(Engine Control Module)	Special Function	AT MT Recognition
H-1(A1)	2006	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
H-1(A1)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1(A1)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1(A1)	2006	General	IMM(Immobilizer)	Special Function	Teaching
H-1(A1)	2006	General	Fuel Fired Heater	Read Fault Code	
H-1(A1)	2006	General	Fuel Fired Heater	Clear Fault Memory	
H-1(A1)	2006	General	Fuel Fired Heater	Read Data Stream	
H-1(A1)	2006	General	Fuel Fired Heater	Actuation Test	
H-1(A1)	2005	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
H-1(A1)	2005	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	2005	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	2005	General	ECM(Engine Control Module)	Actuation Test	
H-1(A1)	2005	General	ECM(Engine Control Module)	Read FreezeData	
H-1(A1)	2005	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	2005	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	2005	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	2005	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	2005	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	2005	General	IMM(Immobilizer)	Read Data Stream	
H-1(A1)	2005	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	2005	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	2005	General	IMM(Immobilizer)	Special Function	Master Key Delete
H-1(A1)	2005	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	2005	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	2005	General	Transmitter Code Saving	Special Function	Code Saving
H-1(A1)	2005	General	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
H-1(A1)	2005	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1(A1)	2005	General	ECM(Engine Control Module)	Special Function	AT MT Recognition
H-1(A1)	2005	General	IMM(Immobilizer)	Special Function	Password
H-1(A1)	2005	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
H-1(A1)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1(A1)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1(A1)	2005	General	IMM(Immobilizer)	Special Function	Teaching
H-1(A1)	2005	General	Fuel Fired Heater	Read Fault Code	
H-1(A1)	2005	General	Fuel Fired Heater	Clear Fault Memory	
H-1(A1)	2005	General	Fuel Fired Heater	Read Data Stream	
H-1(A1)	2005	General	Fuel Fired Heater	Actuation Test	
H-1(A1)	2004	General	ECM(Engine Control Module)	Version Information	
H-1(A1)	2004	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	2004	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	2004	General	ECM(Engine Control Module)	Actuation Test	
H-1(A1)	2004	General	ECM(Engine Control Module)	Read FreezeData	
H-1(A1)	2004	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	2004	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	2004	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
H-1(A1)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	2004	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	2004	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	2004	General	IMM(Immobilizer)	Read Data Stream	
H-1(A1)	2004	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	2004	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	2004	General	IMM(Immobilizer)	Special Function	Master Key Delete
H-1(A1)	2004	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	2004	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	2004	General	Transmitter Code Saving	Special Function	Code Saving
H-1(A1)	2004	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1(A1)	2004	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1(A1)	2004	General	ECM(Engine Control Module)	Special Function	AT MT Recognition
H-1(A1)	2004	General	IMM(Immobilizer)	Special Function	Password
H-1(A1)	2004	General	IMM(Immobilizer)	Special Function	Teaching/Changing
H-1(A1)	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1(A1)	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1(A1)	2004	General	IMM(Immobilizer)	Special Function	Teaching
H-1(A1)	2004	General	Fuel Fired Heater	Read Fault Code	
H-1(A1)	2004	General	Fuel Fired Heater	Clear Fault Memory	
H-1(A1)	2004	General	Fuel Fired Heater	Read Data Stream	
H-1(A1)	2004	General	Fuel Fired Heater	Actuation Test	
H-1(A1)	2003	General	ECM(Engine Control Module)	Version Information	
H-1(A1)	2003	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	2003	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	2003	General	ECM(Engine Control Module)	Actuation Test	
H-1(A1)	2003	General	ECM(Engine Control Module)	Read FreezeData	
H-1(A1)	2003	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	2003	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
H-1(A1)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	2003	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	2003	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	2003	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	2003	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	2003	General	IMM(Immobilizer)	Read Data Stream	
H-1(A1)	2003	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	2003	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	2003	General	IMM(Immobilizer)	Special Function	Master Key Delete
H-1(A1)	2003	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	2003	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	2003	General	Transmitter Code Saving	Special Function	Code Saving
H-1(A1)	2003	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1(A1)	2003	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1(A1)	2003	General	ECM(Engine Control Module)	Special Function	AT MT Recognition
H-1(A1)	2003	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
H-1(A1)	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1(A1)	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1(A1)	2003	General	IMM(Immobilizer)	Special Function	Teaching
H-1(A1)	2003	General	Fuel Fired Heater	Read Fault Code	

model	year	area	system	function	subfunction
H-1(A1)	2003	General	Fuel Fired Heater	Clear Fault Memory	
H-1(A1)	2003	General	Fuel Fired Heater	Read Data Stream	
H-1(A1)	2003	General	Fuel Fired Heater	Actuation Test	
H-1(A1)	2002	General	ECM(Engine Control Module)	Version Information	
H-1(A1)	2002	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	2002	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	2002	General	ECM(Engine Control Module)	Actuation Test	
H-1(A1)	2002	General	ECM(Engine Control Module)	Read FreezeData	
H-1(A1)	2002	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	2002	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	2002	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	2002	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	2002	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	2002	General	IMM(Immobilizer)	Read Data Stream	
H-1(A1)	2002	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	2002	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	2002	General	IMM(Immobilizer)	Special Function	Master Key Delete

model	year	area	system	function	subfunction
H-1(A1)	2002	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	2002	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	2002	General	Transmitter Code Saving	Special Function	Code Saving
H-1(A1)	2002	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1(A1)	2002	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1(A1)	2002	General	ECM(Engine Control Module)	Special Function	AT MT Recognition
H-1(A1)	2002	General	IMM(Immobilizer)	Special Function	Password
H-1(A1)	2002	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
H-1(A1)	2002	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1(A1)	2002	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1(A1)	2002	General	IMM(Immobilizer)	Special Function	Teaching
H-1(A1)	2002	General	Fuel Fired Heater	Read Fault Code	
H-1(A1)	2002	General	Fuel Fired Heater	Clear Fault Memory	
H-1(A1)	2002	General	Fuel Fired Heater	Read Data Stream	
H-1(A1)	2002	General	Fuel Fired Heater	Actuation Test	
H-1(A1)	2001	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	2001	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	2001	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	2001	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	2001	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
H-1(A1)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	2001	General	ECM(Engine Control Module)	Actuation Test	
H-1(A1)	2001	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	2001	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	2001	General	IMM(Immobilizer)	Read Data Stream	
H-1(A1)	2001	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	2001	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	2001	General	IMM(Immobilizer)	Special Function	Master Key Delete
H-1(A1)	2001	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	2001	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	2000	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	2000	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	2000	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	2000	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	2000	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	2000	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	2000	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	2000	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	2000	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
H-1(A1)	2000	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	2000	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	2000	General	IMM(Immobilizer)	Read Data Stream	
H-1(A1)	2000	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	2000	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	2000	General	IMM(Immobilizer)	Special Function	Master Key Delete
H-1(A1)	2000	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	2000	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	1999	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	1999	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	1999	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	1999	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	1999	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	1999	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	1999	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	1999	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	1999	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	1999	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	1999	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	1999	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	1999	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	1999	General	ECM(Engine Control Module)	Actuation Test	
H-1(A1)	1999	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	1999	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	1999	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
H-1(A1)	1999	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	1999	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	1999	General	IMM(Immobilizer)	Special Function	Master Key Delete
H-1(A1)	1999	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	1999	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	1998	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	1998	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	1998	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	1998	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	1998	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	1998	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	1998	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	1998	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	1998	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	1998	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	1998	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	1998	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	1998	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	1998	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	1998	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	1998	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	1998	General	ECM(Engine Control Module)	Actuation Test	
H-1(A1)	1998	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	1998	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	1998	General	IMM(Immobilizer)	Read Data Stream	
H-1(A1)	1998	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	1998	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	1998	General	IMM(Immobilizer)	Special Function	Master Key Delete

model	year	area	system	function	subfunction
H-1(A1)	1998	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	1998	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1(A1)	1997	General	ECM(Engine Control Module)	Read Fault Code	
H-1(A1)	1997	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1(A1)	1997	General	ECM(Engine Control Module)	Read Data Stream	
H-1(A1)	1997	General	TCM(Transmission Control Module)	Version Information	
H-1(A1)	1997	General	TCM(Transmission Control Module)	Read Fault Code	
H-1(A1)	1997	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1(A1)	1997	General	TCM(Transmission Control Module)	Read Data Stream	
H-1(A1)	1997	General	TCM(Transmission Control Module)	Actuation Test	
H-1(A1)	1997	General	ABS(Anti-lock Braking System)	Version Information	
H-1(A1)	1997	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1(A1)	1997	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1(A1)	1997	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1(A1)	1997	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1(A1)	1997	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1(A1)	1997	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1(A1)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1(A1)	1997	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1(A1)	1997	General	ECM(Engine Control Module)	Actuation Test	
H-1(A1)	1997	General	IMM(Immobilizer)	Read Fault Code	
H-1(A1)	1997	General	IMM(Immobilizer)	Clear Fault Memory	
H-1(A1)	1997	General	IMM(Immobilizer)	Read Data Stream	
H-1(A1)	1997	General	IMM(Immobilizer)	Special Function	Password Record/Change
H-1(A1)	1997	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
H-1(A1)	1997	General	IMM(Immobilizer)	Special Function	Master Key Delete
H-1(A1)	1997	General	IMM(Immobilizer)	Special Function	Neutral Mode
H-1(A1)	1997	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	CVVT Test
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
H-1/iMAX/iLOAD(TQ)	2018	General	TCM(Transmission Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2018	General	TCM(Transmission Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2018	General	ABS(Anti-lock Braking System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1/iMAX/iLOAD(TQ)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
H-1/iMAX/iLOAD(TQ)	2018	General	AC(Air Conditioning)	Version Information	
H-1/iMAX/iLOAD(TQ)	2018	General	AC(Air Conditioning)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2018	General	AC(Air Conditioning)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2018	General	AC(Air Conditioning)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
H-1/iMAX/iLOAD(TQ)	2018	General	Body Control Module	Version Information	
H-1/iMAX/iLOAD(TQ)	2018	General	Body Control Module	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2018	General	Body Control Module	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2018	General	Body Control Module	Special Function	User Option
H-1/iMAX/iLOAD(TQ)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
H-1/iMAX/iLOAD(TQ)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
H-1/iMAX/iLOAD(TQ)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
H-1/iMAX/iLOAD(TQ)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
H-1/iMAX/iLOAD(TQ)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
H-1/iMAX/iLOAD(TQ)	2018	General	IMM(Immobilizer)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
H-1/iMAX/iLOAD(TQ)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1/iMAX/iLOAD(TQ)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1/iMAX/iLOAD(TQ)	2018	General	IMM(Immobilizer)	Special Function	Teaching
H-1/iMAX/iLOAD(TQ)	2018	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-1/iMAX/iLOAD(TQ)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	SCR Restarting Temporary Unrestricting Function
H-1/iMAX/iLOAD(TQ)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-1/iMAX/iLOAD(TQ)	2018	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-1/iMAX/iLOAD(TQ)	2018	General	Selective Catalytic Reduction	Version Information	
H-1/iMAX/iLOAD(TQ)	2018	General	Selective Catalytic Reduction	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2018	General	Selective Catalytic Reduction	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2018	General	Selective Catalytic Reduction	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2018	General	Selective Catalytic Reduction	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2018	General	Fuel Fired Heater	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2018	General	Fuel Fired Heater	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2018	General	Fuel Fired Heater	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2018	General	Fuel Fired Heater	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-1/iMAX/iLOAD(TQ)	2018	General	ECM(Engine Control Module)	Special Function	ECU Initialization
H-1/iMAX/iLOAD(TQ)	2018	General	IMM(Immobilizer)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	CVVT Test
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
H-1/iMAX/iLOAD(TQ)	2017	General	TCM(Transmission Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2017	General	TCM(Transmission Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2017	General	ABS(Anti-lock Braking System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1/iMAX/iLOAD(TQ)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
H-1/iMAX/iLOAD(TQ)	2017	General	AC(Air Conditioning)	Version Information	
H-1/iMAX/iLOAD(TQ)	2017	General	AC(Air Conditioning)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2017	General	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2017	General	AC(Air Conditioning)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2017	General	AC(Air Conditioning)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Tune)
H-1/iMAX/iLOAD(TQ)	2017	General	Body Control Module	Version Information	
H-1/iMAX/iLOAD(TQ)	2017	General	Body Control Module	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2017	General	Body Control Module	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2017	General	Body Control Module	Special Function	User Option
H-1/iMAX/iLOAD(TQ)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
H-1/iMAX/iLOAD(TQ)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
H-1/iMAX/iLOAD(TQ)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
H-1/iMAX/iLOAD(TQ)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
H-1/iMAX/iLOAD(TQ)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
H-1/iMAX/iLOAD(TQ)	2017	General	IMM(Immobilizer)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
H-1/iMAX/iLOAD(TQ)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1/iMAX/iLOAD(TQ)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1/iMAX/iLOAD(TQ)	2017	General	IMM(Immobilizer)	Special Function	Teaching
H-1/iMAX/iLOAD(TQ)	2017	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-1/iMAX/iLOAD(TQ)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	SCR Restarting Temporary Unrestricting Function
H-1/iMAX/iLOAD(TQ)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-1/iMAX/iLOAD(TQ)	2017	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-1/iMAX/iLOAD(TQ)	2017	General	Selective Catalytic Reduction	Version Information	
H-1/iMAX/iLOAD(TQ)	2017	General	Selective Catalytic Reduction	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2017	General	Selective Catalytic Reduction	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2017	General	Selective Catalytic Reduction	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2017	General	Selective Catalytic Reduction	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2017	General	Fuel Fired Heater	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2017	General	Fuel Fired Heater	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2017	General	Fuel Fired Heater	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2017	General	Fuel Fired Heater	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-1/iMAX/iLOAD(TQ)	2017	General	ECM(Engine Control Module)	Special Function	ECU Initialization
H-1/iMAX/iLOAD(TQ)	2017	General	IMM(Immobilizer)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2016	General	TCM(Transmission Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2016	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2016	General	ABS(Anti-lock Braking System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1/iMAX/iLOAD(TQ)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2016	General	AC(Air Conditioning)	Version Information	
H-1/iMAX/iLOAD(TQ)	2016	General	AC(Air Conditioning)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2016	General	AC(Air Conditioning)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2016	General	AC(Air Conditioning)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2016	General	BCM(Body Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2016	General	BCM(Body Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2016	General	BCM(Body Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2016	General	BCM(Body Control Module)	Special Function	User Option
H-1/iMAX/iLOAD(TQ)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
H-1/iMAX/iLOAD(TQ)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
H-1/iMAX/iLOAD(TQ)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
H-1/iMAX/iLOAD(TQ)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
H-1/iMAX/iLOAD(TQ)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2016	General	Fuel Fired Heater	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2016	General	Fuel Fired Heater	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2016	General	Fuel Fired Heater	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2016	General	Fuel Fired Heater	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2016	General	IMM(Immobilizer)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2016	General	IMM(Immobilizer)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1/iMAX/iLOAD(TQ)	2016	General	IMM(Immobilizer)	Special Function	Password
H-1/iMAX/iLOAD(TQ)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Changing
H-1/iMAX/iLOAD(TQ)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1/iMAX/iLOAD(TQ)	2016	General	IMM(Immobilizer)	Special Function	Teaching
H-1/iMAX/iLOAD(TQ)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Component Change
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Routine
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	ECU Initialization
H-1/iMAX/iLOAD(TQ)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-1/iMAX/iLOAD(TQ)	2016	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-1/iMAX/iLOAD(TQ)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
H-1/iMAX/iLOAD(TQ)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV
H-1/iMAX/iLOAD(TQ)	2016	General	IMM(Immobilizer)	Special Function	Type)
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Smatra Neutral Mode
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	SCR Restarting Temporary Unrestricting Function

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2016	General	Selective Catalytic Reduction	Version Information	
H-1/iMAX/iLOAD(TQ)	2016	General	Selective Catalytic Reduction	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2016	General	Selective Catalytic Reduction	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2016	General	Selective Catalytic Reduction	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2016	General	Selective Catalytic Reduction	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
H-1/iMAX/iLOAD(TQ)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
H-1/iMAX/iLOAD(TQ)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
H-1/iMAX/iLOAD(TQ)	2015	General	TCM(Transmission Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2015	General	TCM(Transmission Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-1/iMAX/iLOAD(TQ)	2015	General	ABS(Anti-lock Braking System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1/iMAX/iLOAD(TQ)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2015	General	AC(Air Conditioning)	Version Information	
H-1/iMAX/iLOAD(TQ)	2015	General	AC(Air Conditioning)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2015	General	AC(Air Conditioning)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2015	General	AC(Air Conditioning)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2015	General	BCM(Body Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2015	General	BCM(Body Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2015	General	BCM(Body Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2015	General	BCM(Body Control Module)	Special Function	User Option
H-1/iMAX/iLOAD(TQ)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
H-1/iMAX/iLOAD(TQ)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
H-1/iMAX/iLOAD(TQ)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
H-1/iMAX/iLOAD(TQ)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
H-1/iMAX/iLOAD(TQ)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
H-1/iMAX/iLOAD(TQ)	2015	General	IMM(Immobilizer)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2015	General	IMM(Immobilizer)	Special Function	Password
H-1/iMAX/iLOAD(TQ)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
H-1/iMAX/iLOAD(TQ)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1/iMAX/iLOAD(TQ)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1/iMAX/iLOAD(TQ)	2015	General	IMM(Immobilizer)	Special Function	Teaching
H-1/iMAX/iLOAD(TQ)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-1/iMAX/iLOAD(TQ)	2015	General	Transmitter Code Saving	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2015	General	Transmitter Code Saving	Special Function	Code Saving
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-1/iMAX/iLOAD(TQ)	2015	General	ECM(Engine Control Module)	Special Function	ECU Initialization
H-1/iMAX/iLOAD(TQ)	2015	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-1/iMAX/iLOAD(TQ)	2015	General	Fuel Fired Heater	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2015	General	Fuel Fired Heater	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2015	General	Fuel Fired Heater	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2015	General	Fuel Fired Heater	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2015	General	IMM(Immobilizer)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
H-1/iMAX/iLOAD(TQ)	2014	General	TCM(Transmission Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2014	General	TCM(Transmission Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-1/iMAX/iLOAD(TQ)	2014	General	ABS(Anti-lock Braking System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1/iMAX/iLOAD(TQ)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2014	General	AC(Air Conditioning)	Version Information	
H-1/iMAX/iLOAD(TQ)	2014	General	AC(Air Conditioning)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2014	General	AC(Air Conditioning)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2014	General	AC(Air Conditioning)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2014	General	BCM(Body Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2014	General	BCM(Body Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2014	General	BCM(Body Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2014	General	BCM(Body Control Module)	Special Function	User Option
H-1/iMAX/iLOAD(TQ)	2014	General	IMM(Immobilizer)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2014	General	IMM(Immobilizer)	Special Function	Password
H-1/iMAX/iLOAD(TQ)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Changing
H-1/iMAX/iLOAD(TQ)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1/iMAX/iLOAD(TQ)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1/iMAX/iLOAD(TQ)	2014	General	IMM(Immobilizer)	Special Function	Teaching
H-1/iMAX/iLOAD(TQ)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-1/iMAX/iLOAD(TQ)	2014	General	Transmitter Code Saving	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2014	General	Transmitter Code Saving	Special Function	Code Saving
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-1/iMAX/iLOAD(TQ)	2014	General	ECM(Engine Control Module)	Special Function	ECU Initialization
H-1/iMAX/iLOAD(TQ)	2014	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-1/iMAX/iLOAD(TQ)	2014	General	Fuel Fired Heater	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2014	General	Fuel Fired Heater	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2014	General	Fuel Fired Heater	Read Data Stream	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2014	General	Fuel Fired Heater	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2014	General	IMM(Immobilizer)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Configuration Reset
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
H-1/iMAX/iLOAD(TQ)	2013	General	TCM(Transmission Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2013	General	TCM(Transmission Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-1/iMAX/iLOAD(TQ)	2013	General	ABS(Anti-lock Braking System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1/iMAX/iLOAD(TQ)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2013	General	AC(Air Conditioning)	Version Information	
H-1/iMAX/iLOAD(TQ)	2013	General	AC(Air Conditioning)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2013	General	AC(Air Conditioning)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2013	General	AC(Air Conditioning)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2013	General	BCM(Body Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2013	General	BCM(Body Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2013	General	BCM(Body Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2013	General	BCM(Body Control Module)	Special Function	User Option
H-1/iMAX/iLOAD(TQ)	2013	General	IMM(Immobilizer)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
H-1/iMAX/iLOAD(TQ)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1/iMAX/iLOAD(TQ)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1/iMAX/iLOAD(TQ)	2013	General	IMM(Immobilizer)	Special Function	Teaching
H-1/iMAX/iLOAD(TQ)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-1/iMAX/iLOAD(TQ)	2013	General	Transmitter Code Saving	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2013	General	Transmitter Code Saving	Special Function	Code Saving
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-1/iMAX/iLOAD(TQ)	2013	General	ECM(Engine Control Module)	Special Function	ECU Initialization

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2013	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-1/iMAX/iLOAD(TQ)	2013	General	Fuel Fired Heater	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2013	General	Fuel Fired Heater	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2013	General	Fuel Fired Heater	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2013	General	Fuel Fired Heater	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2013	General	IMM(Immobilizer)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2013	General	IMM(Immobilizer)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Configuration Reset
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	CVVT Test
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Cylinder Power
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
H-1/iMAX/iLOAD(TQ)	2012	General	TCM(Transmission Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2012	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-1/iMAX/iLOAD(TQ)	2012	General	ABS(Anti-lock Braking System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1/iMAX/iLOAD(TQ)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2012	General	AC(Air Conditioning)	Version Information	
H-1/iMAX/iLOAD(TQ)	2012	General	AC(Air Conditioning)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2012	General	AC(Air Conditioning)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2012	General	AC(Air Conditioning)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2012	General	BCM(Body Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2012	General	BCM(Body Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2012	General	BCM(Body Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2012	General	BCM(Body Control Module)	Special Function	User Option
H-1/iMAX/iLOAD(TQ)	2012	General	IMM(Immobilizer)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2012	General	IMM(Immobilizer)	Special Function	Password
H-1/iMAX/iLOAD(TQ)	2012	General	IMM(Immobilizer)	Special Function	Teaching/Changing
H-1/iMAX/iLOAD(TQ)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1/iMAX/iLOAD(TQ)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1/iMAX/iLOAD(TQ)	2012	General	IMM(Immobilizer)	Special Function	Teaching
H-1/iMAX/iLOAD(TQ)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-1/iMAX/iLOAD(TQ)	2012	General	Transmitter Code Saving	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2012	General	Transmitter Code Saving	Special Function	Code Saving
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	ECU Initialization
H-1/iMAX/iLOAD(TQ)	2012	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-1/iMAX/iLOAD(TQ)	2012	General	Fuel Fired Heater	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2012	General	Fuel Fired Heater	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2012	General	Fuel Fired Heater	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2012	General	Fuel Fired Heater	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1/iMAX/iLOAD(TQ)	2012	General	IMM(Immobilizer)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2012	General	IMM(Immobilizer)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	CVVT Test
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	ECT Circuit Test
H-1/iMAX/iLOAD(TQ)	2011	General	TCM(Transmission Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2011	General	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2011	General	TCM(Transmission Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-1/iMAX/iLOAD(TQ)	2011	General	ABS(Anti-lock Braking System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1/iMAX/iLOAD(TQ)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2011	General	AC(Air Conditioning)	Version Information	
H-1/iMAX/iLOAD(TQ)	2011	General	AC(Air Conditioning)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2011	General	AC(Air Conditioning)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2011	General	AC(Air Conditioning)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2011	General	BCM(Body Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2011	General	BCM(Body Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2011	General	BCM(Body Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2011	General	BCM(Body Control Module)	Special Function	User Option
H-1/iMAX/iLOAD(TQ)	2011	General	IMM(Immobilizer)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
H-1/iMAX/iLOAD(TQ)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1/iMAX/iLOAD(TQ)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1/iMAX/iLOAD(TQ)	2011	General	IMM(Immobilizer)	Special Function	Teaching
H-1/iMAX/iLOAD(TQ)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-1/iMAX/iLOAD(TQ)	2011	General	Transmitter Code Saving	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2011	General	Transmitter Code Saving	Special Function	Code Saving

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	ECU Initialization
H-1/iMAX/iLOAD(TQ)	2011	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-1/iMAX/iLOAD(TQ)	2011	General	Fuel Fired Heater	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2011	General	Fuel Fired Heater	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2011	General	Fuel Fired Heater	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2011	General	Fuel Fired Heater	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1/iMAX/iLOAD(TQ)	2011	General	IMM(Immobilizer)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2011	General	IMM(Immobilizer)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Special Function	CVVT Test
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Special Function	ECT Circuit Test
H-1/iMAX/iLOAD(TQ)	2010	General	TCM(Transmission Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2010	General	TCM(Transmission Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-1/iMAX/iLOAD(TQ)	2010	General	ABS(Anti-lock Braking System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1/iMAX/iLOAD(TQ)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2010	General	AC(Air Conditioning)	Version Information	
H-1/iMAX/iLOAD(TQ)	2010	General	AC(Air Conditioning)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2010	General	AC(Air Conditioning)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2010	General	AC(Air Conditioning)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2010	General	BCM(Body Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2010	General	BCM(Body Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2010	General	BCM(Body Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2010	General	BCM(Body Control Module)	Special Function	User Option
H-1/iMAX/iLOAD(TQ)	2010	General	IMM(Immobilizer)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
H-1/iMAX/iLOAD(TQ)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1/iMAX/iLOAD(TQ)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1/iMAX/iLOAD(TQ)	2010	General	IMM(Immobilizer)	Special Function	Teaching
H-1/iMAX/iLOAD(TQ)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2010	General	Transmitter Code Saving	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2010	General	Transmitter Code Saving	Special Function	Code Saving
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1/iMAX/iLOAD(TQ)	2010	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-1/iMAX/iLOAD(TQ)	2010	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-1/iMAX/iLOAD(TQ)	2010	General	Fuel Fired Heater	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2010	General	Fuel Fired Heater	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2010	General	Fuel Fired Heater	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2010	General	Fuel Fired Heater	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2010	General	IMM(Immobilizer)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2010	General	IMM(Immobilizer)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Special Function	CVVT Test
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Special Function	ECT Circuit Test
H-1/iMAX/iLOAD(TQ)	2009	General	TCM(Transmission Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2009	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2009	General	TCM(Transmission Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2009	General	TCM(Transmission Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-1/iMAX/iLOAD(TQ)	2009	General	ABS(Anti-lock Braking System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1/iMAX/iLOAD(TQ)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2009	General	AC(Air Conditioning)	Version Information	
H-1/iMAX/iLOAD(TQ)	2009	General	AC(Air Conditioning)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2009	General	AC(Air Conditioning)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2009	General	AC(Air Conditioning)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2009	General	BCM(Body Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2009	General	BCM(Body Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2009	General	BCM(Body Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2009	General	BCM(Body Control Module)	Special Function	User Option
H-1/iMAX/iLOAD(TQ)	2009	General	IMM(Immobilizer)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2009	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
H-1/iMAX/iLOAD(TQ)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1/iMAX/iLOAD(TQ)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1/iMAX/iLOAD(TQ)	2009	General	IMM(Immobilizer)	Special Function	Teaching
H-1/iMAX/iLOAD(TQ)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-1/iMAX/iLOAD(TQ)	2009	General	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2009	General	Transmitter Code Saving	Special Function	Code Saving
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1/iMAX/iLOAD(TQ)	2009	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-1/iMAX/iLOAD(TQ)	2009	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-1/iMAX/iLOAD(TQ)	2009	General	Fuel Fired Heater	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2009	General	Fuel Fired Heater	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2009	General	Fuel Fired Heater	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2009	General	Fuel Fired Heater	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2009	General	IMM(Immobilizer)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2009	General	IMM(Immobilizer)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Special Function	CVVT Test
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Special Function	ECT Circuit Test
H-1/iMAX/iLOAD(TQ)	2008	General	TCM(Transmission Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2008	General	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2008	General	TCM(Transmission Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2008	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-1/iMAX/iLOAD(TQ)	2008	General	ABS(Anti-lock Braking System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-1/iMAX/iLOAD(TQ)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-1/iMAX/iLOAD(TQ)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2008	General	AC(Air Conditioning)	Version Information	
H-1/iMAX/iLOAD(TQ)	2008	General	AC(Air Conditioning)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2008	General	AC(Air Conditioning)	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2008	General	AC(Air Conditioning)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2008	General	AC(Air Conditioning)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2008	General	BCM(Body Control Module)	Version Information	
H-1/iMAX/iLOAD(TQ)	2008	General	BCM(Body Control Module)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2008	General	BCM(Body Control Module)	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2008	General	BCM(Body Control Module)	Special Function	User Option
H-1/iMAX/iLOAD(TQ)	2008	General	IMM(Immobilizer)	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2008	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
H-1/iMAX/iLOAD(TQ)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-1/iMAX/iLOAD(TQ)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-1/iMAX/iLOAD(TQ)	2008	General	IMM(Immobilizer)	Special Function	Teaching
H-1/iMAX/iLOAD(TQ)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-1/iMAX/iLOAD(TQ)	2008	General	Transmitter Code Saving	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2008	General	Transmitter Code Saving	Special Function	Code Saving

model	year	area	system	function	subfunction
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Read FreezeData	
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-1/iMAX/iLOAD(TQ)	2008	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-1/iMAX/iLOAD(TQ)	2008	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-1/iMAX/iLOAD(TQ)	2008	General	Fuel Fired Heater	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2008	General	Fuel Fired Heater	Clear Fault Memory	
H-1/iMAX/iLOAD(TQ)	2008	General	Fuel Fired Heater	Read Data Stream	
H-1/iMAX/iLOAD(TQ)	2008	General	Fuel Fired Heater	Actuation Test	
H-1/iMAX/iLOAD(TQ)	2008	General	IMM(Immobilizer)	Read Fault Code	
H-1/iMAX/iLOAD(TQ)	2008	General	IMM(Immobilizer)	Clear Fault Memory	
H-100 Truck(AU)	2004	General	ECM(Engine Control Module)	Read Fault Code	
H-100 Truck(AU)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 Truck(AU)	2004	General	ECM(Engine Control Module)	Read Data Stream	
H-100 Truck(AU)	2004	General	ECM(Engine Control Module)	Actuation Test	
H-100 Truck(AU)	2004	General	ABS(Anti-lock Braking System)	Version Information	
H-100 Truck(AU)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 Truck(AU)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 Truck(AU)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 Truck(AU)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 Truck(AU)	2003	General	ECM(Engine Control Module)	Read Fault Code	
H-100 Truck(AU)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 Truck(AU)	2003	General	ECM(Engine Control Module)	Read Data Stream	
H-100 Truck(AU)	2003	General	ECM(Engine Control Module)	Actuation Test	
H-100 Truck(AU)	2003	General	ABS(Anti-lock Braking System)	Version Information	
H-100 Truck(AU)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 Truck(AU)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 Truck(AU)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 Truck(AU)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
H-100 Truck(AU)	2002	General	ECM(Engine Control Module)	Read Fault Code	
H-100 Truck(AU)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 Truck(AU)	2002	General	ECM(Engine Control Module)	Read Data Stream	
H-100 Truck(AU)	2002	General	ECM(Engine Control Module)	Actuation Test	
H-100 Truck(AU)	2002	General	ABS(Anti-lock Braking System)	Version Information	
H-100 Truck(AU)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 Truck(AU)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 Truck(AU)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 Truck(AU)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 Truck(AU)	2001	General	ECM(Engine Control Module)	Read Fault Code	
H-100 Truck(AU)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 Truck(AU)	2001	General	ECM(Engine Control Module)	Read Data Stream	
H-100 Truck(AU)	2001	General	ECM(Engine Control Module)	Actuation Test	
H-100 Truck(AU)	2001	General	ABS(Anti-lock Braking System)	Version Information	
H-100 Truck(AU)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 Truck(AU)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 Truck(AU)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 Truck(AU)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 Truck(AU)	2000	General	ECM(Engine Control Module)	Read Fault Code	
H-100 Truck(AU)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 Truck(AU)	2000	General	ECM(Engine Control Module)	Read Data Stream	
H-100 Truck(AU)	2000	General	ECM(Engine Control Module)	Actuation Test	
H-100 Truck(AU)	2000	General	ABS(Anti-lock Braking System)	Version Information	
H-100 Truck(AU)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 Truck(AU)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 Truck(AU)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 Truck(AU)	2000	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 Truck(AU)	1999	General	ECM(Engine Control Module)	Read Fault Code	
H-100 Truck(AU)	1999	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
H-100 Truck(AU)	1999	General	ECM(Engine Control Module)	Read Data Stream	
H-100 Truck(AU)	1999	General	ECM(Engine Control Module)	Actuation Test	
H-100 Truck(AU)	1999	General	ABS(Anti-lock Braking System)	Version Information	
H-100 Truck(AU)	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 Truck(AU)	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 Truck(AU)	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 Truck(AU)	1999	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 Truck(AU)	1998	General	ECM(Engine Control Module)	Read Fault Code	
H-100 Truck(AU)	1998	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 Truck(AU)	1998	General	ECM(Engine Control Module)	Read Data Stream	
H-100 Truck(AU)	1998	General	ECM(Engine Control Module)	Actuation Test	
H-100 Truck(AU)	1998	General	ABS(Anti-lock Braking System)	Version Information	
H-100 Truck(AU)	1998	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 Truck(AU)	1998	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 Truck(AU)	1998	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 Truck(AU)	1998	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 Truck(AU)	1997	General	ECM(Engine Control Module)	Read Fault Code	
H-100 Truck(AU)	1997	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 Truck(AU)	1997	General	ECM(Engine Control Module)	Read Data Stream	
H-100 Truck(AU)	1997	General	ECM(Engine Control Module)	Actuation Test	
H-100 Truck(AU)	1997	General	ABS(Anti-lock Braking System)	Version Information	
H-100 Truck(AU)	1997	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 Truck(AU)	1997	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 Truck(AU)	1997	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 Truck(AU)	1997	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2018	General	ECM(Engine Control Module)	Version Information	
H-100 TRUCK(HR)	2018	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2018	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2018	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
H-100 TRUCK(HR)	2018	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
H-100 TRUCK(HR)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-100 TRUCK(HR)	2018	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2018	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-100 TRUCK(HR)	2018	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-100 TRUCK(HR)	2018	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
H-100 TRUCK(HR)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
H-100 TRUCK(HR)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
H-100 TRUCK(HR)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
H-100 TRUCK(HR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-100 TRUCK(HR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-100 TRUCK(HR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-100 TRUCK(HR)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-100 TRUCK(HR)	2018	General	AC(Air Conditioning)	Version Information	
H-100 TRUCK(HR)	2018	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
H-100 TRUCK(HR)	2018	General	AC(Air Conditioning)	Read Data Stream	
H-100 TRUCK(HR)	2018	General	AC(Air Conditioning)	Actuation Test	
H-100 TRUCK(HR)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
H-100 TRUCK(HR)	2018	General	IMM(Immobilizer)	Read Data Stream	
H-100 TRUCK(HR)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
H-100 TRUCK(HR)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-100 TRUCK(HR)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-100 TRUCK(HR)	2018	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-100 TRUCK(HR)	2018	General	IMM(Immobilizer)	Special Function	Teaching
H-100 TRUCK(HR)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
H-100 TRUCK(HR)	2017	General	ECM(Engine Control Module)	Version Information	
H-100 TRUCK(HR)	2017	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2017	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2017	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
H-100 TRUCK(HR)	2017	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
H-100 TRUCK(HR)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-100 TRUCK(HR)	2017	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2017	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-100 TRUCK(HR)	2017	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-100 TRUCK(HR)	2017	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
H-100 TRUCK(HR)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
H-100 TRUCK(HR)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
H-100 TRUCK(HR)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
H-100 TRUCK(HR)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-100 TRUCK(HR)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-100 TRUCK(HR)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-100 TRUCK(HR)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-100 TRUCK(HR)	2017	General	AC(Air Conditioning)	Version Information	
H-100 TRUCK(HR)	2017	General	AC(Air Conditioning)	Read Fault Code	
H-100 TRUCK(HR)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
H-100 TRUCK(HR)	2017	General	AC(Air Conditioning)	Read Data Stream	
H-100 TRUCK(HR)	2017	General	AC(Air Conditioning)	Actuation Test	
H-100 TRUCK(HR)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
H-100 TRUCK(HR)	2017	General	IMM(Immobilizer)	Read Data Stream	
H-100 TRUCK(HR)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
H-100 TRUCK(HR)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-100 TRUCK(HR)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-100 TRUCK(HR)	2017	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-100 TRUCK(HR)	2017	General	IMM(Immobilizer)	Special Function	Teaching
H-100 TRUCK(HR)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
H-100 TRUCK(HR)	2016	General	ECM(Engine Control Module)	Version Information	
H-100 TRUCK(HR)	2016	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2016	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2016	General	ECM(Engine Control Module)	Read FreezeData	
H-100 TRUCK(HR)	2016	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-100 TRUCK(HR)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-100 TRUCK(HR)	2016	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-100 TRUCK(HR)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-100 TRUCK(HR)	2016	General	ECM(Engine Control Module)	Special Function	ECU Initialization
H-100 TRUCK(HR)	2016	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2016	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-100 TRUCK(HR)	2016	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-100 TRUCK(HR)	2016	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
H-100 TRUCK(HR)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
H-100 TRUCK(HR)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
H-100 TRUCK(HR)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
H-100 TRUCK(HR)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-100 TRUCK(HR)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-100 TRUCK(HR)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-100 TRUCK(HR)	2016	General	IMM(Immobilizer)	Read Data Stream	
H-100 TRUCK(HR)	2016	General	IMM(Immobilizer)	Special Function	Password
H-100 TRUCK(HR)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
H-100 TRUCK(HR)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-100 TRUCK(HR)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-100 TRUCK(HR)	2016	General	IMM(Immobilizer)	Special Function	Teaching
H-100 TRUCK(HR)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-100 TRUCK(HR)	2015	General	ECM(Engine Control Module)	Version Information	
H-100 TRUCK(HR)	2015	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2015	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2015	General	ECM(Engine Control Module)	Read FreezeData	
H-100 TRUCK(HR)	2015	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-100 TRUCK(HR)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-100 TRUCK(HR)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-100 TRUCK(HR)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-100 TRUCK(HR)	2015	General	ECM(Engine Control Module)	Special Function	ECU Initialization
H-100 TRUCK(HR)	2015	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2015	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-100 TRUCK(HR)	2015	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-100 TRUCK(HR)	2015	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
H-100 TRUCK(HR)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
H-100 TRUCK(HR)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
H-100 TRUCK(HR)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
H-100 TRUCK(HR)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-100 TRUCK(HR)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-100 TRUCK(HR)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-100 TRUCK(HR)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-100 TRUCK(HR)	2015	General	IMM(Immobilizer)	Read Data Stream	
H-100 TRUCK(HR)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
H-100 TRUCK(HR)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-100 TRUCK(HR)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-100 TRUCK(HR)	2015	General	IMM(Immobilizer)	Special Function	Teaching
H-100 TRUCK(HR)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-100 TRUCK(HR)	2015	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2014	General	ECM(Engine Control Module)	Version Information	
H-100 TRUCK(HR)	2014	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2014	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2014	General	ECM(Engine Control Module)	Read FreezeData	
H-100 TRUCK(HR)	2014	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-100 TRUCK(HR)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-100 TRUCK(HR)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-100 TRUCK(HR)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-100 TRUCK(HR)	2014	General	ECM(Engine Control Module)	Special Function	ECU Initialization

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2014	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2014	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-100 TRUCK(HR)	2014	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-100 TRUCK(HR)	2014	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-100 TRUCK(HR)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-100 TRUCK(HR)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-100 TRUCK(HR)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-100 TRUCK(HR)	2014	General	IMM(Immobilizer)	Read Data Stream	
H-100 TRUCK(HR)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
H-100 TRUCK(HR)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-100 TRUCK(HR)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-100 TRUCK(HR)	2014	General	IMM(Immobilizer)	Special Function	Teaching
H-100 TRUCK(HR)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
H-100 TRUCK(HR)	2014	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2013	General	ECM(Engine Control Module)	Version Information	
H-100 TRUCK(HR)	2013	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2013	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2013	General	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2013	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-100 TRUCK(HR)	2013	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
H-100 TRUCK(HR)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-100 TRUCK(HR)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
H-100 TRUCK(HR)	2013	General	ECM(Engine Control Module)	Special Function	ECU Initialization
H-100 TRUCK(HR)	2013	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2013	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
H-100 TRUCK(HR)	2013	General	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
H-100 TRUCK(HR)	2013	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H-100 TRUCK(HR)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H-100 TRUCK(HR)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H-100 TRUCK(HR)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H-100 TRUCK(HR)	2013	General	IMM(Immobilizer)	Read Data Stream	
H-100 TRUCK(HR)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
H-100 TRUCK(HR)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
H-100 TRUCK(HR)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H-100 TRUCK(HR)	2013	General	IMM(Immobilizer)	Special Function	Teaching
H-100 TRUCK(HR)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2013	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2012	General	ECM(Engine Control Module)	Version Information	
H-100 TRUCK(HR)	2012	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2012	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2012	General	ECM(Engine Control Module)	Read FreezeData	
H-100 TRUCK(HR)	2012	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-100 TRUCK(HR)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-100 TRUCK(HR)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-100 TRUCK(HR)	2012	General	ECM(Engine Control Module)	Special Function	ECU MAPPING
H-100 TRUCK(HR)	2012	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2012	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2012	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2012	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2011	General	ECM(Engine Control Module)	Version Information	
H-100 TRUCK(HR)	2011	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2011	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2011	General	ECM(Engine Control Module)	Read FreezeData	
H-100 TRUCK(HR)	2011	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-100 TRUCK(HR)	2011	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-100 TRUCK(HR)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-100 TRUCK(HR)	2011	General	ECM(Engine Control Module)	Special Function	ECU MAPPING
H-100 TRUCK(HR)	2011	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2011	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2011	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2011	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2010	General	ECM(Engine Control Module)	Version Information	
H-100 TRUCK(HR)	2010	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2010	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2010	General	ECM(Engine Control Module)	Read FreezeData	
H-100 TRUCK(HR)	2010	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-100 TRUCK(HR)	2010	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-100 TRUCK(HR)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-100 TRUCK(HR)	2010	General	ECM(Engine Control Module)	Special Function	ECU MAPPING
H-100 TRUCK(HR)	2010	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2010	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2010	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2010	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2009	General	ECM(Engine Control Module)	Version Information	
H-100 TRUCK(HR)	2009	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2009	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2009	General	ECM(Engine Control Module)	Read FreezeData	
H-100 TRUCK(HR)	2009	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-100 TRUCK(HR)	2009	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-100 TRUCK(HR)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-100 TRUCK(HR)	2009	General	ECM(Engine Control Module)	Special Function	ECU MAPPING
H-100 TRUCK(HR)	2009	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2009	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2009	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2009	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2008	General	ECM(Engine Control Module)	Version Information	
H-100 TRUCK(HR)	2008	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2008	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2008	General	ECM(Engine Control Module)	Read FreezeData	
H-100 TRUCK(HR)	2008	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
H-100 TRUCK(HR)	2008	General	ECM(Engine Control Module)	Special Function	Component Change Routine
H-100 TRUCK(HR)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
H-100 TRUCK(HR)	2008	General	ECM(Engine Control Module)	Special Function	ECU MAPPING
H-100 TRUCK(HR)	2008	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2008	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2008	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2008	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2007	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2007	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2007	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2007	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2007	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2007	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2007	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2006	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2006	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2006	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2006	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2006	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2006	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2006	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2005	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2005	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2005	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2005	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2005	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2005	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2005	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2004	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2004	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2004	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2004	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2004	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2004	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
H-100 TRUCK(HR)	2004	General	Transmitter Code Saving	Special Function	Code Saving
H-100 TRUCK(HR)	2003	General	ECM(Engine Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2003	General	ECM(Engine Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2003	General	ECM(Engine Control Module)	Actuation Test	
H-100 TRUCK(HR)	2003	General	TCM(Transmission Control Module)	Version Information	
H-100 TRUCK(HR)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
H-100 TRUCK(HR)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100 TRUCK(HR)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
H-100 TRUCK(HR)	2003	General	TCM(Transmission Control Module)	Actuation Test	
H-100 TRUCK(HR)	2003	General	ABS(Anti-lock Braking System)	Version Information	
H-100 TRUCK(HR)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
H-100 TRUCK(HR)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H-100 TRUCK(HR)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
H-100 TRUCK(HR)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
H-100 TRUCK(HR)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
H-100 TRUCK(HR)	2003	General	Transmitter Code Saving	Special Function	Code Saving
H-100(AH)	2001	General	ECM(Engine Control Module)	Version Information	
H-100(AH)	2001	General	ECM(Engine Control Module)	Read Fault Code	
H-100(AH)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100(AH)	2001	General	ECM(Engine Control Module)	Read Data Stream	
H-100(AH)	2001	General	ECM(Engine Control Module)	Actuation Test	
H-100(AH)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
H-100(AH)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100(AH)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
H-100(AH)	2000	General	ECM(Engine Control Module)	Version Information	
H-100(AH)	2000	General	ECM(Engine Control Module)	Read Fault Code	
H-100(AH)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100(AH)	2000	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
H-100(AH)	2000	General	ECM(Engine Control Module)	Actuation Test	
H-100(AH)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
H-100(AH)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100(AH)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
H-100(AH)	1999	General	ECM(Engine Control Module)	Version Information	
H-100(AH)	1999	General	ECM(Engine Control Module)	Read Fault Code	
H-100(AH)	1999	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100(AH)	1999	General	ECM(Engine Control Module)	Read Data Stream	
H-100(AH)	1999	General	ECM(Engine Control Module)	Actuation Test	
H-100(AH)	1999	General	TCM(Transmission Control Module)	Read Fault Code	
H-100(AH)	1999	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100(AH)	1999	General	TCM(Transmission Control Module)	Read Data Stream	
H-100(AH)	1998	General	ECM(Engine Control Module)	Version Information	
H-100(AH)	1998	General	ECM(Engine Control Module)	Read Fault Code	
H-100(AH)	1998	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100(AH)	1998	General	ECM(Engine Control Module)	Read Data Stream	
H-100(AH)	1998	General	ECM(Engine Control Module)	Actuation Test	
H-100(AH)	1998	General	TCM(Transmission Control Module)	Read Fault Code	
H-100(AH)	1998	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100(AH)	1998	General	TCM(Transmission Control Module)	Read Data Stream	
H-100(AH)	1997	General	ECM(Engine Control Module)	Version Information	
H-100(AH)	1997	General	ECM(Engine Control Module)	Read Fault Code	
H-100(AH)	1997	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100(AH)	1997	General	ECM(Engine Control Module)	Read Data Stream	
H-100(AH)	1997	General	ECM(Engine Control Module)	Actuation Test	
H-100(AH)	1997	General	TCM(Transmission Control Module)	Read Fault Code	
H-100(AH)	1997	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100(AH)	1997	General	TCM(Transmission Control Module)	Read Data Stream	
H-100(AH)	1996	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
H-100(AH)	1996	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100(AH)	1996	General	ECM(Engine Control Module)	Read Data Stream	
H-100(AH)	1996	General	ECM(Engine Control Module)	Actuation Test	
H-100(AH)	1996	General	TCM(Transmission Control Module)	Read Fault Code	
H-100(AH)	1996	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100(AH)	1996	General	TCM(Transmission Control Module)	Read Data Stream	
H-100(AH)	1995	General	ECM(Engine Control Module)	Read Fault Code	
H-100(AH)	1995	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100(AH)	1995	General	ECM(Engine Control Module)	Read Data Stream	
H-100(AH)	1995	General	ECM(Engine Control Module)	Actuation Test	
H-100(AH)	1995	General	TCM(Transmission Control Module)	Read Fault Code	
H-100(AH)	1995	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100(AH)	1995	General	TCM(Transmission Control Module)	Read Data Stream	
H-100(AH)	1994	General	ECM(Engine Control Module)	Read Fault Code	
H-100(AH)	1994	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100(AH)	1994	General	ECM(Engine Control Module)	Read Data Stream	
H-100(AH)	1994	General	ECM(Engine Control Module)	Actuation Test	
H-100(AH)	1994	General	TCM(Transmission Control Module)	Read Fault Code	
H-100(AH)	1994	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100(AH)	1994	General	TCM(Transmission Control Module)	Read Data Stream	
H-100(AH)	1993	General	ECM(Engine Control Module)	Read Fault Code	
H-100(AH)	1993	General	ECM(Engine Control Module)	Clear Fault Memory	
H-100(AH)	1993	General	ECM(Engine Control Module)	Read Data Stream	
H-100(AH)	1993	General	ECM(Engine Control Module)	Actuation Test	
H-100(AH)	1993	General	TCM(Transmission Control Module)	Read Fault Code	
H-100(AH)	1993	General	TCM(Transmission Control Module)	Clear Fault Memory	
H-100(AH)	1993	General	TCM(Transmission Control Module)	Read Data Stream	
H350(EU)	2018	General	ECM(Engine Control Module)	Version Information	
H350(EU)	2018	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
H350(EU)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
H350(EU)	2018	General	ECM(Engine Control Module)	Read Data Stream	
H350(EU)	2018	General	ECM(Engine Control Module)	Actuation Test	
H350(EU)	2018	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
H350(EU)	2018	General	ABS(Anti-lock Braking System)	Version Information	
H350(EU)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
H350(EU)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H350(EU)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
H350(EU)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
H350(EU)	2018	General	ABS(Anti-lock Braking System)	Special Function	Calibration Of AX Sensor-Only ESC
H350(EU)	2018	General	ABS(Anti-lock Braking System)	Special Function	Calibration Of The Steering Angle Sensor-Only ESC
H350(EU)	2018	General	ABS(Anti-lock Braking System)	Special Function	Repair Bleeding
H350(EU)	2018	General	Airbag Control	Version Information	
H350(EU)	2018	General	Airbag Control	Read Fault Code	
H350(EU)	2018	General	Airbag Control	Clear Fault Memory	
H350(EU)	2018	General	Airbag Control	Read Data Stream	
H350(EU)	2018	General	Airbag Control	Special Function	ACU Variant Coding
H350(EU)	2018	General	AC(Air Conditioning)	Version Information	
H350(EU)	2018	General	AC(Air Conditioning)	Read Fault Code	
H350(EU)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
H350(EU)	2018	General	AC(Air Conditioning)	Read Data Stream	
H350(EU)	2018	General	BCM(Body Control Module)	Version Information	
H350(EU)	2018	General	BCM(Body Control Module)	Read Fault Code	
H350(EU)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
H350(EU)	2018	General	BCM(Body Control Module)	Read Data Stream	
H350(EU)	2018	General	BCM(Body Control Module)	Actuation Test	
H350(EU)	2018	General	Lane Departure Warning System	Version Information	

model	year	area	system	function	subfunction
H350(EU)	2018	General	Lane Departure Warning System	Read Fault Code	
H350(EU)	2018	General	Lane Departure Warning System	Clear Fault Memory	
H350(EU)	2018	General	Lane Departure Warning System	Read Data Stream	
H350(EU)	2018	General	Lane Departure Warning System	Actuation Test	
H350(EU)	2018	General	Lane Departure Warning System	Special Function	LDWS RP Calibration
H350(EU)	2018	General	Selective Catalytic Reduction	Version Information	
H350(EU)	2018	General	Selective Catalytic Reduction	Read Fault Code	
H350(EU)	2018	General	Selective Catalytic Reduction	Clear Fault Memory	
H350(EU)	2018	General	Selective Catalytic Reduction	Read Data Stream	
H350(EU)	2018	General	Selective Catalytic Reduction	Actuation Test	
H350(EU)	2018	General	Selective Catalytic Reduction	Special Function	VIN Input
H350(EU)	2018	General	Central Gateway	Version Information	
H350(EU)	2018	General	Central Gateway	Read Fault Code	
H350(EU)	2018	General	Central Gateway	Clear Fault Memory	
H350(EU)	2018	General	Central Gateway	Read Data Stream	
H350(EU)	2018	General	Central Gateway	Actuation Test	
H350(EU)	2018	General	DTG/DIS	Version Information	
H350(EU)	2018	General	DTG/DIS	Read Fault Code	
H350(EU)	2018	General	DTG/DIS	Clear Fault Memory	
H350(EU)	2018	General	IMM(Immobilizer)	Read Fault Code	
H350(EU)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
H350(EU)	2018	General	IMM(Immobilizer)	Read Data Stream	
H350(EU)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H350(EU)	2018	General	IMM(Immobilizer)	Special Function	Neutral Mode
H350(EU)	2018	General	IMM(Immobilizer)	Special Function	Password
H350(EU)	2018	General	IMM(Immobilizer)	Special Function	Teaching/Changing
H350(EU)	2018	General	IMM(Immobilizer)	Special Function	Teaching
H350(EU)	2017	General	ECM(Engine Control Module)	Version Information	
H350(EU)	2017	General	ECM(Engine Control Module)	Read Fault Code	
H350(EU)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
H350(EU)	2017	General	ECM(Engine Control Module)	Read Data Stream	
H350(EU)	2017	General	ECM(Engine Control Module)	Actuation Test	
H350(EU)	2017	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
H350(EU)	2017	General	ABS(Anti-lock Braking System)	Version Information	
H350(EU)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
H350(EU)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H350(EU)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
H350(EU)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
H350(EU)	2017	General	ABS(Anti-lock Braking System)	Special Function	Calibration Of Ax Sensor-Only ESC
H350(EU)	2017	General	ABS(Anti-lock Braking System)	Special Function	Calibration Of The Steering Angle Sensor-Only ESC
H350(EU)	2017	General	ABS(Anti-lock Braking System)	Special Function	Repair Bleeding
H350(EU)	2017	General	Airbag Control	Version Information	
H350(EU)	2017	General	Airbag Control	Read Fault Code	
H350(EU)	2017	General	Airbag Control	Clear Fault Memory	
H350(EU)	2017	General	Airbag Control	Read Data Stream	
H350(EU)	2017	General	Airbag Control	Special Function	ACU Variant Coding
H350(EU)	2017	General	AC(Air Conditioning)	Version Information	
H350(EU)	2017	General	AC(Air Conditioning)	Read Fault Code	
H350(EU)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
H350(EU)	2017	General	AC(Air Conditioning)	Read Data Stream	
H350(EU)	2017	General	BCM(Body Control Module)	Version Information	
H350(EU)	2017	General	BCM(Body Control Module)	Read Fault Code	
H350(EU)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
H350(EU)	2017	General	BCM(Body Control Module)	Read Data Stream	
H350(EU)	2017	General	BCM(Body Control Module)	Actuation Test	
H350(EU)	2017	General	Lane Departure Warning System	Version Information	
H350(EU)	2017	General	Lane Departure Warning System	Read Fault Code	

model	year	area	system	function	subfunction
H350(EU)	2017	General	Lane Departure Warning System	Clear Fault Memory	
H350(EU)	2017	General	Lane Departure Warning System	Read Data Stream	
H350(EU)	2017	General	Lane Departure Warning System	Actuation Test	
H350(EU)	2017	General	Lane Departure Warning System	Special Function	LDWS RP Calibration
H350(EU)	2017	General	Selective Catalytic Reduction	Version Information	
H350(EU)	2017	General	Selective Catalytic Reduction	Read Fault Code	
H350(EU)	2017	General	Selective Catalytic Reduction	Clear Fault Memory	
H350(EU)	2017	General	Selective Catalytic Reduction	Read Data Stream	
H350(EU)	2017	General	Selective Catalytic Reduction	Actuation Test	
H350(EU)	2017	General	Selective Catalytic Reduction	Special Function	VIN Input
H350(EU)	2017	General	Central Gateway	Version Information	
H350(EU)	2017	General	Central Gateway	Read Fault Code	
H350(EU)	2017	General	Central Gateway	Clear Fault Memory	
H350(EU)	2017	General	Central Gateway	Read Data Stream	
H350(EU)	2017	General	Central Gateway	Actuation Test	
H350(EU)	2017	General	DTG/DIS	Version Information	
H350(EU)	2017	General	DTG/DIS	Read Fault Code	
H350(EU)	2017	General	DTG/DIS	Clear Fault Memory	
H350(EU)	2017	General	IMM(Immobilizer)	Read Fault Code	
H350(EU)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
H350(EU)	2017	General	IMM(Immobilizer)	Read Data Stream	
H350(EU)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H350(EU)	2017	General	IMM(Immobilizer)	Special Function	Neutral Mode
H350(EU)	2017	General	IMM(Immobilizer)	Special Function	Password
H350(EU)	2017	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
H350(EU)	2017	General	IMM(Immobilizer)	Special Function	Teaching
H350(EU)	2016	General	ECM(Engine Control Module)	Version Information	
H350(EU)	2016	General	ECM(Engine Control Module)	Read Fault Code	
H350(EU)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
H350(EU)	2016	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
H350(EU)	2016	General	ECM(Engine Control Module)	Actuation Test	
H350(EU)	2016	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
H350(EU)	2016	General	ABS(Anti-lock Braking System)	Version Information	
H350(EU)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
H350(EU)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H350(EU)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
H350(EU)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
H350(EU)	2016	General	ABS(Anti-lock Braking System)	Special Function	Calibration Of AX Sensor-Only ESC
H350(EU)	2016	General	ABS(Anti-lock Braking System)	Special Function	Calibration Of The Steering Angle Sensor-Only ESC
H350(EU)	2016	General	ABS(Anti-lock Braking System)	Special Function	Repair Bleeding
H350(EU)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H350(EU)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H350(EU)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H350(EU)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H350(EU)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
H350(EU)	2016	General	AC(Air Conditioning)	Version Information	
H350(EU)	2016	General	AC(Air Conditioning)	Read Fault Code	
H350(EU)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
H350(EU)	2016	General	AC(Air Conditioning)	Read Data Stream	
H350(EU)	2016	General	BCM(Body Control Module)	Version Information	
H350(EU)	2016	General	BCM(Body Control Module)	Read Fault Code	
H350(EU)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
H350(EU)	2016	General	BCM(Body Control Module)	Read Data Stream	
H350(EU)	2016	General	BCM(Body Control Module)	Actuation Test	
H350(EU)	2016	General	Lane Departure Warning System	Version Information	
H350(EU)	2016	General	Lane Departure Warning System	Read Fault Code	
H350(EU)	2016	General	Lane Departure Warning System	Clear Fault Memory	

model	year	area	system	function	subfunction
H350(EU)	2016	General	Lane Departure Warning System	Read Data Stream	
H350(EU)	2016	General	Lane Departure Warning System	Actuation Test	
H350(EU)	2016	General	Lane Departure Warning System	Special Function	LDWS RP Calibration
H350(EU)	2016	General	Selective Catalytic Reduction	Version Information	
H350(EU)	2016	General	Selective Catalytic Reduction	Read Fault Code	
H350(EU)	2016	General	Selective Catalytic Reduction	Clear Fault Memory	
H350(EU)	2016	General	Selective Catalytic Reduction	Read Data Stream	
H350(EU)	2016	General	Selective Catalytic Reduction	Actuation Test	
H350(EU)	2016	General	Selective Catalytic Reduction	Special Function	VIN Input
H350(EU)	2016	General	Central Gateway	Version Information	
H350(EU)	2016	General	Central Gateway	Read Fault Code	
H350(EU)	2016	General	Central Gateway	Clear Fault Memory	
H350(EU)	2016	General	Central Gateway	Read Data Stream	
H350(EU)	2016	General	Central Gateway	Actuation Test	
H350(EU)	2016	General	DTG/DIS	Version Information	
H350(EU)	2016	General	DTG/DIS	Read Fault Code	
H350(EU)	2016	General	DTG/DIS	Clear Fault Memory	
H350(EU)	2016	General	IMM(Immobilizer)	Read Fault Code	
H350(EU)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
H350(EU)	2016	General	IMM(Immobilizer)	Read Data Stream	
H350(EU)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H350(EU)	2016	General	IMM(Immobilizer)	Special Function	Neutral Mode
H350(EU)	2016	General	IMM(Immobilizer)	Special Function	Password
H350(EU)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Changing
H350(EU)	2016	General	IMM(Immobilizer)	Special Function	Teaching
H350(EU)	2015	General	ECM(Engine Control Module)	Version Information	
H350(EU)	2015	General	ECM(Engine Control Module)	Read Fault Code	
H350(EU)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
H350(EU)	2015	General	ECM(Engine Control Module)	Read Data Stream	
H350(EU)	2015	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
H350(EU)	2015	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
H350(EU)	2015	General	ABS(Anti-lock Braking System)	Version Information	
H350(EU)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
H350(EU)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
H350(EU)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
H350(EU)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
H350(EU)	2015	General	ABS(Anti-lock Braking System)	Special Function	Calibration Of AX Sensor-Only ESC
H350(EU)	2015	General	ABS(Anti-lock Braking System)	Special Function	Calibration Of The Steering Angle Sensor-Only ESC
H350(EU)	2015	General	ABS(Anti-lock Braking System)	Special Function	Repair Bleeding
H350(EU)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
H350(EU)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
H350(EU)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
H350(EU)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
H350(EU)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
H350(EU)	2015	General	AC(Air Conditioning)	Version Information	
H350(EU)	2015	General	AC(Air Conditioning)	Read Fault Code	
H350(EU)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
H350(EU)	2015	General	AC(Air Conditioning)	Read Data Stream	
H350(EU)	2015	General	BCM(Body Control Module)	Version Information	
H350(EU)	2015	General	BCM(Body Control Module)	Read Fault Code	
H350(EU)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
H350(EU)	2015	General	BCM(Body Control Module)	Read Data Stream	
H350(EU)	2015	General	BCM(Body Control Module)	Actuation Test	
H350(EU)	2015	General	Lane Departure Warning System	Version Information	
H350(EU)	2015	General	Lane Departure Warning System	Read Fault Code	
H350(EU)	2015	General	Lane Departure Warning System	Clear Fault Memory	
H350(EU)	2015	General	Lane Departure Warning System	Read Data Stream	

model	year	area	system	function	subfunction
H350(EU)	2015	General	Lane Departure Warning System	Actuation Test	
H350(EU)	2015	General	Lane Departure Warning System	Special Function	LDWS RP Calibration
H350(EU)	2015	General	Selective Catalytic Reduction	Version Information	
H350(EU)	2015	General	Selective Catalytic Reduction	Read Fault Code	
H350(EU)	2015	General	Selective Catalytic Reduction	Clear Fault Memory	
H350(EU)	2015	General	Selective Catalytic Reduction	Read Data Stream	
H350(EU)	2015	General	Selective Catalytic Reduction	Actuation Test	
H350(EU)	2015	General	Selective Catalytic Reduction	Special Function	VIN Input
H350(EU)	2015	General	Central Gateway	Version Information	
H350(EU)	2015	General	Central Gateway	Read Fault Code	
H350(EU)	2015	General	Central Gateway	Clear Fault Memory	
H350(EU)	2015	General	Central Gateway	Read Data Stream	
H350(EU)	2015	General	Central Gateway	Actuation Test	
H350(EU)	2015	General	DTG/DIS	Version Information	
H350(EU)	2015	General	DTG/DIS	Read Fault Code	
H350(EU)	2015	General	DTG/DIS	Clear Fault Memory	
H350(EU)	2015	General	IMM(Immobilizer)	Read Fault Code	
H350(EU)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
H350(EU)	2015	General	IMM(Immobilizer)	Read Data Stream	
H350(EU)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
H350(EU)	2015	General	IMM(Immobilizer)	Special Function	Neutral Mode
H350(EU)	2015	General	IMM(Immobilizer)	Special Function	Password
H350(EU)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Changing
H350(EU)	2015	General	IMM(Immobilizer)	Special Function	Teaching
HB20(HB)	2018	General	ECM(Engine Control Module)	Version Information	
HB20(HB)	2018	General	ECM(Engine Control Module)	Read Fault Code	
HB20(HB)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
HB20(HB)	2018	General	ECM(Engine Control Module)	Read Data Stream	
HB20(HB)	2018	General	ECM(Engine Control Module)	Actuation Test	
HB20(HB)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
HB20(HB)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
HB20(HB)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
HB20(HB)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
HB20(HB)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
HB20(HB)	2018	General	ECM(Engine Control Module)	Special Function	Ethanol Value Checkentry
HB20(HB)	2018	General	ECM(Engine Control Module)	Special Function	Reseting Heating Injector Adaptive Value
HB20(HB)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
HB20(HB)	2018	General	TCM(Transmission Control Module)	Version Information	
HB20(HB)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
HB20(HB)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
HB20(HB)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
HB20(HB)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
HB20(HB)	2018	General	TCM(Transmission Control Module)	Actuation Test	
HB20(HB)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
HB20(HB)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
HB20(HB)	2018	General	ABS(Anti-lock Braking System)	Version Information	
HB20(HB)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
HB20(HB)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HB20(HB)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
HB20(HB)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
HB20(HB)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HB20(HB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HB20(HB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HB20(HB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HB20(HB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HB20(HB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
HB20(HB)	2018	General	AC(Air Conditioning)	Version Information	
HB20(HB)	2018	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
HB20(HB)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
HB20(HB)	2018	General	AC(Air Conditioning)	Read Data Stream	
HB20(HB)	2018	General	AC(Air Conditioning)	Actuation Test	
HB20(HB)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
HB20(HB)	2018	General	BCM(Body Control Module)	Version Information	
HB20(HB)	2018	General	BCM(Body Control Module)	Read Fault Code	
HB20(HB)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
HB20(HB)	2018	General	BCM(Body Control Module)	Read Data Stream	
HB20(HB)	2018	General	BCM(Body Control Module)	Actuation Test	
HB20(HB)	2018	General	BCM(Body Control Module)	Special Function	User Option
HB20(HB)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
HB20(HB)	2018	General	EPS(Electronic Power Steering)	Version Information	
HB20(HB)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
HB20(HB)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
HB20(HB)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
HB20(HB)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
HB20(HB)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
HB20(HB)	2018	General	Telematics Unit	Version Information	
HB20(HB)	2018	General	Telematics Unit	Read Fault Code	
HB20(HB)	2018	General	Telematics Unit	Clear Fault Memory	
HB20(HB)	2018	General	IMM(Immobilizer)	Read Fault Code	
HB20(HB)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
HB20(HB)	2018	General	IMM(Immobilizer)	Read Data Stream	
HB20(HB)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
HB20(HB)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HB20(HB)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HB20(HB)	2018	General	IMM(Immobilizer)	Special Function	Teaching
HB20(HB)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
HB20(HB)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
HB20(HB)	2017	General	ECM(Engine Control Module)	Version Information	
HB20(HB)	2017	General	ECM(Engine Control Module)	Read Fault Code	
HB20(HB)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
HB20(HB)	2017	General	ECM(Engine Control Module)	Read Data Stream	
HB20(HB)	2017	General	ECM(Engine Control Module)	Actuation Test	
HB20(HB)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HB20(HB)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
HB20(HB)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
HB20(HB)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
HB20(HB)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
HB20(HB)	2017	General	ECM(Engine Control Module)	Special Function	Ethanol Value Checkentry
HB20(HB)	2017	General	ECM(Engine Control Module)	Special Function	Reseting Heating Injector Adaptive Value
HB20(HB)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
HB20(HB)	2017	General	TCM(Transmission Control Module)	Version Information	
HB20(HB)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
HB20(HB)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
HB20(HB)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
HB20(HB)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
HB20(HB)	2017	General	TCM(Transmission Control Module)	Actuation Test	
HB20(HB)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
HB20(HB)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
HB20(HB)	2017	General	ABS(Anti-lock Braking System)	Version Information	
HB20(HB)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
HB20(HB)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HB20(HB)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
HB20(HB)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
HB20(HB)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HB20(HB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
HB20(HB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HB20(HB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HB20(HB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HB20(HB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
HB20(HB)	2017	General	AC(Air Conditioning)	Version Information	
HB20(HB)	2017	General	AC(Air Conditioning)	Read Fault Code	
HB20(HB)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
HB20(HB)	2017	General	AC(Air Conditioning)	Read Data Stream	
HB20(HB)	2017	General	AC(Air Conditioning)	Actuation Test	
HB20(HB)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
HB20(HB)	2017	General	BCM(Body Control Module)	Version Information	
HB20(HB)	2017	General	BCM(Body Control Module)	Read Fault Code	
HB20(HB)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
HB20(HB)	2017	General	BCM(Body Control Module)	Read Data Stream	
HB20(HB)	2017	General	BCM(Body Control Module)	Actuation Test	
HB20(HB)	2017	General	BCM(Body Control Module)	Special Function	User Option
HB20(HB)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
HB20(HB)	2017	General	EPS(Electronic Power Steering)	Version Information	
HB20(HB)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
HB20(HB)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
HB20(HB)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
HB20(HB)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
HB20(HB)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
HB20(HB)	2017	General	Telematics Unit	Version Information	
HB20(HB)	2017	General	Telematics Unit	Read Fault Code	
HB20(HB)	2017	General	Telematics Unit	Clear Fault Memory	
HB20(HB)	2017	General	IMM(Immobilizer)	Read Fault Code	
HB20(HB)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
HB20(HB)	2017	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
HB20(HB)	2017	General	IMM(Immobilizer)	Special Function	Password
HB20(HB)	2017	General	IMM(Immobilizer)	Special Function	Teaching/Changing
HB20(HB)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HB20(HB)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HB20(HB)	2017	General	IMM(Immobilizer)	Special Function	Teaching
HB20(HB)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
HB20(HB)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
HB20(HB)	2016	General	ECM(Engine Control Module)	Version Information	
HB20(HB)	2016	General	ECM(Engine Control Module)	Read Fault Code	
HB20(HB)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
HB20(HB)	2016	General	ECM(Engine Control Module)	Read Data Stream	
HB20(HB)	2016	General	ECM(Engine Control Module)	Actuation Test	
HB20(HB)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HB20(HB)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
HB20(HB)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
HB20(HB)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
HB20(HB)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
HB20(HB)	2016	General	ECM(Engine Control Module)	Special Function	Ethanol Value Checkentry
HB20(HB)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
HB20(HB)	2016	General	ABS(Anti-lock Braking System)	Version Information	
HB20(HB)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
HB20(HB)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HB20(HB)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
HB20(HB)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
HB20(HB)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HB20(HB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HB20(HB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HB20(HB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HB20(HB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HB20(HB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding

model	year	area	system	function	subfunction
HB20(HB)	2016	General	AC(Air Conditioning)	Version Information	
HB20(HB)	2016	General	AC(Air Conditioning)	Read Fault Code	
HB20(HB)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
HB20(HB)	2016	General	AC(Air Conditioning)	Read Data Stream	
HB20(HB)	2016	General	AC(Air Conditioning)	Actuation Test	
HB20(HB)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
HB20(HB)	2016	General	BCM(Body Control Module)	Version Information	
HB20(HB)	2016	General	BCM(Body Control Module)	Read Fault Code	
HB20(HB)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
HB20(HB)	2016	General	BCM(Body Control Module)	Read Data Stream	
HB20(HB)	2016	General	BCM(Body Control Module)	Actuation Test	
HB20(HB)	2016	General	BCM(Body Control Module)	Special Function	User Option
HB20(HB)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
HB20(HB)	2016	General	EPS(Electronic Power Steering)	Version Information	
HB20(HB)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
HB20(HB)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
HB20(HB)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
HB20(HB)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
HB20(HB)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
HB20(HB)	2016	General	Telematics Unit	Version Information	
HB20(HB)	2016	General	Telematics Unit	Read Fault Code	
HB20(HB)	2016	General	Telematics Unit	Clear Fault Memory	
HB20(HB)	2016	General	IMM(Immobilizer)	Read Fault Code	
HB20(HB)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
HB20(HB)	2016	General	IMM(Immobilizer)	Read Data Stream	
HB20(HB)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
HB20(HB)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HB20(HB)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HB20(HB)	2016	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
HB20(HB)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
HB20(HB)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
HB20(HB)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Heating Injector Adaptive Value
HB20(HB)	2016	General	TCM(Transmission Control Module)	Version Information	
HB20(HB)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
HB20(HB)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
HB20(HB)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
HB20(HB)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
HB20(HB)	2016	General	TCM(Transmission Control Module)	Actuation Test	
HB20(HB)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
HB20(HB)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
HB20(HB)	2015	General	ECM(Engine Control Module)	Version Information	
HB20(HB)	2015	General	ECM(Engine Control Module)	Read Fault Code	
HB20(HB)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
HB20(HB)	2015	General	ECM(Engine Control Module)	Read Data Stream	
HB20(HB)	2015	General	ECM(Engine Control Module)	Actuation Test	
HB20(HB)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
HB20(HB)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
HB20(HB)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HB20(HB)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
HB20(HB)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
HB20(HB)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
HB20(HB)	2015	General	TCM(Transmission Control Module)	Version Information	
HB20(HB)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
HB20(HB)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
HB20(HB)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
HB20(HB)	2015	General	TCM(Transmission Control Module)	Actuation Test	
HB20(HB)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
HB20(HB)	2015	General	ABS(Anti-lock Braking System)	Version Information	
HB20(HB)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
HB20(HB)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HB20(HB)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
HB20(HB)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
HB20(HB)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HB20(HB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HB20(HB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HB20(HB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HB20(HB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HB20(HB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
HB20(HB)	2015	General	BCM(Body Control Module)	Version Information	
HB20(HB)	2015	General	BCM(Body Control Module)	Read Fault Code	
HB20(HB)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
HB20(HB)	2015	General	BCM(Body Control Module)	Read Data Stream	
HB20(HB)	2015	General	BCM(Body Control Module)	Actuation Test	
HB20(HB)	2015	General	BCM(Body Control Module)	Special Function	User Option
HB20(HB)	2015	General	BCM(Body Control Module)	Special Function	Oil System Identification (Only UK)
HB20(HB)	2015	General	IMM(Immobilizer)	Read Fault Code	
HB20(HB)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
HB20(HB)	2015	General	IMM(Immobilizer)	Read Data Stream	
HB20(HB)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
HB20(HB)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HB20(HB)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HB20(HB)	2015	General	IMM(Immobilizer)	Special Function	Teaching
HB20(HB)	2015	General	Transmitter Code Saving	Read Data Stream	
HB20(HB)	2015	General	Transmitter Code Saving	Special Function	Code Saving
HB20(HB)	2015	General	Telematics Unit	Version Information	
HB20(HB)	2015	General	Telematics Unit	Read Fault Code	

model	year	area	system	function	subfunction
HB20(HB)	2015	General	Telematics Unit	Clear Fault Memory	
HB20(HB)	2014	General	ECM(Engine Control Module)	Version Information	
HB20(HB)	2014	General	ECM(Engine Control Module)	Read Fault Code	
HB20(HB)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
HB20(HB)	2014	General	ECM(Engine Control Module)	Read Data Stream	
HB20(HB)	2014	General	ECM(Engine Control Module)	Actuation Test	
HB20(HB)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
HB20(HB)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
HB20(HB)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HB20(HB)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
HB20(HB)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
HB20(HB)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
HB20(HB)	2014	General	TCM(Transmission Control Module)	Version Information	
HB20(HB)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
HB20(HB)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
HB20(HB)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
HB20(HB)	2014	General	TCM(Transmission Control Module)	Actuation Test	
HB20(HB)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
HB20(HB)	2014	General	ABS(Anti-lock Braking System)	Version Information	
HB20(HB)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
HB20(HB)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HB20(HB)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
HB20(HB)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
HB20(HB)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HB20(HB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HB20(HB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HB20(HB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HB20(HB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HB20(HB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding

model	year	area	system	function	subfunction
HB20(HB)	2014	General	BCM(Body Control Module)	Version Information	
HB20(HB)	2014	General	BCM(Body Control Module)	Read Fault Code	
HB20(HB)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
HB20(HB)	2014	General	BCM(Body Control Module)	Read Data Stream	
HB20(HB)	2014	General	BCM(Body Control Module)	Actuation Test	
HB20(HB)	2014	General	BCM(Body Control Module)	Special Function	User Option
HB20(HB)	2014	General	BCM(Body Control Module)	Special Function	Oil System Identification(Only UK)
HB20(HB)	2014	General	IMM(Immobilizer)	Read Fault Code	
HB20(HB)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
HB20(HB)	2014	General	IMM(Immobilizer)	Read Data Stream	
HB20(HB)	2014	General	IMM(Immobilizer)	Special Function	Password
HB20(HB)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Changing
HB20(HB)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HB20(HB)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HB20(HB)	2014	General	IMM(Immobilizer)	Special Function	Teaching
HB20(HB)	2014	General	Transmitter Code Saving	Read Data Stream	
HB20(HB)	2014	General	Transmitter Code Saving	Special Function	Code Saving
HB20(HB)	2014	General	Telematics Unit	Version Information	
HB20(HB)	2014	General	Telematics Unit	Read Fault Code	
HB20(HB)	2014	General	Telematics Unit	Clear Fault Memory	
HB20(HB)	2013	General	ECM(Engine Control Module)	Version Information	
HB20(HB)	2013	General	ECM(Engine Control Module)	Read Fault Code	
HB20(HB)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
HB20(HB)	2013	General	ECM(Engine Control Module)	Read Data Stream	
HB20(HB)	2013	General	ECM(Engine Control Module)	Actuation Test	
HB20(HB)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
HB20(HB)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
HB20(HB)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HB20(HB)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
HB20(HB)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)

model	year	area	system	function	subfunction
HB20(HB)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
HB20(HB)	2013	General	TCM(Transmission Control Module)	Version Information	
HB20(HB)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
HB20(HB)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
HB20(HB)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
HB20(HB)	2013	General	TCM(Transmission Control Module)	Actuation Test	
HB20(HB)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
HB20(HB)	2013	General	ABS(Anti-lock Braking System)	Version Information	
HB20(HB)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
HB20(HB)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HB20(HB)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
HB20(HB)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
HB20(HB)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HB20(HB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HB20(HB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HB20(HB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HB20(HB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HB20(HB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
HB20(HB)	2013	General	BCM(Body Control Module)	Version Information	
HB20(HB)	2013	General	BCM(Body Control Module)	Read Fault Code	
HB20(HB)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
HB20(HB)	2013	General	BCM(Body Control Module)	Read Data Stream	
HB20(HB)	2013	General	BCM(Body Control Module)	Actuation Test	
HB20(HB)	2013	General	BCM(Body Control Module)	Special Function	User Option
HB20(HB)	2013	General	BCM(Body Control Module)	Special Function	OTF System Identification(Only LUX)
HB20(HB)	2013	General	IMM(Immobilizer)	Read Fault Code	
HB20(HB)	2013	General	IMM(Immobilizer)	Clear Fault Memory	
HB20(HB)	2013	General	IMM(Immobilizer)	Read Data Stream	
HB20(HB)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
HB20(HB)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HB20(HB)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HB20(HB)	2013	General	IMM(Immobilizer)	Special Function	Teaching
HB20(HB)	2013	General	Transmitter Code Saving	Read Data Stream	
HB20(HB)	2013	General	Transmitter Code Saving	Special Function	Code Saving
HB20(HB)	2013	General	Telematics Unit	Version Information	
HB20(HB)	2013	General	Telematics Unit	Read Fault Code	
HB20(HB)	2013	General	Telematics Unit	Clear Fault Memory	
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Version Information	
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Read Fault Code	
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Actuation Test	
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	Ignition Test
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Read FreezeData	
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	Read VIN
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	Write VIN
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
HD Coupe(GK)	2008	General	ECM(Engine Control Module)	Special Function	Readiness Test
HD Coupe(GK)	2008	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
HD Coupe(GK)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
HD Coupe(GK)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(GK)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(GK)	2008	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(GK)	2008	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
HD Coupe(GK)	2008	General	ABS(Anti-lock Braking System)	Version Information	
HD Coupe(GK)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
HD Coupe(GK)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(GK)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(GK)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
HD Coupe(GK)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HD Coupe(GK)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HD Coupe(GK)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(GK)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(GK)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HD Coupe(GK)	2008	General	BCM(Body Control Module)	Read Data Stream	
HD Coupe(GK)	2008	General	BCM(Body Control Module)	Actuation Test	
HD Coupe(GK)	2008	General	Auto Headlamp Leveling	Version Information	
HD Coupe(GK)	2008	General	Auto Headlamp Leveling	Read Fault Code	
HD Coupe(GK)	2008	General	Auto Headlamp Leveling	Clear Fault Memory	
HD Coupe(GK)	2008	General	Auto Headlamp Leveling	Read Data Stream	
HD Coupe(GK)	2008	General	Auto Headlamp Leveling	Special Function	Level Initialization
HD Coupe(GK)	2008	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
HD Coupe(GK)	2008	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(GK)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HD Coupe(GK)	2008	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(GK)	2008	General	Transmitter Code Saving	Read Data Stream	
HD Coupe(GK)	2008	General	Transmitter Code Saving	Special Function	Code Saving
HD Coupe(GK)	2008	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
HD Coupe(GK)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HD Coupe(GK)	2008	General	IMM(Immobilizer)	Special Function	Teaching
HD Coupe(GK)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Version Information	
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Read Fault Code	
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Actuation Test	
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	Ignition Test
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Read FreezeData	
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	Read VIN
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	Write VIN
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
HD Coupe(GK)	2007	General	ECM(Engine Control Module)	Special Function	Readiness Test
HD Coupe(GK)	2007	General	TCM(Transmission Control Module)	Version Information	
HD Coupe(GK)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
HD Coupe(GK)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(GK)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(GK)	2007	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(GK)	2007	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
HD Coupe(GK)	2007	General	ABS(Anti-lock Braking System)	Version Information	
HD Coupe(GK)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
HD Coupe(GK)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(GK)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(GK)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
HD Coupe(GK)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HD Coupe(GK)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HD Coupe(GK)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(GK)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(GK)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HD Coupe(GK)	2007	General	BCM(Body Control Module)	Read Data Stream	
HD Coupe(GK)	2007	General	BCM(Body Control Module)	Actuation Test	
HD Coupe(GK)	2007	General	Auto Headlamp Leveling	Version Information	
HD Coupe(GK)	2007	General	Auto Headlamp Leveling	Read Fault Code	
HD Coupe(GK)	2007	General	Auto Headlamp Leveling	Clear Fault Memory	
HD Coupe(GK)	2007	General	Auto Headlamp Leveling	Read Data Stream	
HD Coupe(GK)	2007	General	Auto Headlamp Leveling	Special Function	Level Initialization
HD Coupe(GK)	2007	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
HD Coupe(GK)	2007	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(GK)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HD Coupe(GK)	2007	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(GK)	2007	General	Transmitter Code Saving	Read Data Stream	
HD Coupe(GK)	2007	General	Transmitter Code Saving	Special Function	Code Saving
HD Coupe(GK)	2007	General	IMM(Immobilizer)	Special Function	Password
HD Coupe(GK)	2007	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
HD Coupe(GK)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HD Coupe(GK)	2007	General	IMM(Immobilizer)	Special Function	Teaching
HD Coupe(GK)	2007	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Version Information	
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Actuation Test	
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	Ignition Test
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Read FreezeData	
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	Read VIN
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	Write VIN
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
HD Coupe(GK)	2006	General	ECM(Engine Control Module)	Special Function	Readiness Test
HD Coupe(GK)	2006	General	TCM(Transmission Control Module)	Version Information	
HD Coupe(GK)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
HD Coupe(GK)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(GK)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(GK)	2006	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(GK)	2006	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
HD Coupe(GK)	2006	General	ABS(Anti-lock Braking System)	Version Information	
HD Coupe(GK)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
HD Coupe(GK)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(GK)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(GK)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
HD Coupe(GK)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HD Coupe(GK)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HD Coupe(GK)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(GK)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(GK)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HD Coupe(GK)	2006	General	BCM(Body Control Module)	Read Data Stream	
HD Coupe(GK)	2006	General	BCM(Body Control Module)	Actuation Test	
HD Coupe(GK)	2006	General	Auto Headlamp Leveling	Version Information	
HD Coupe(GK)	2006	General	Auto Headlamp Leveling	Read Fault Code	
HD Coupe(GK)	2006	General	Auto Headlamp Leveling	Clear Fault Memory	
HD Coupe(GK)	2006	General	Auto Headlamp Leveling	Read Data Stream	
HD Coupe(GK)	2006	General	Auto Headlamp Leveling	Special Function	Level Initialization
HD Coupe(GK)	2006	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
HD Coupe(GK)	2006	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(GK)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HD Coupe(GK)	2006	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(GK)	2006	General	Transmitter Code Saving	Read Data Stream	
HD Coupe(GK)	2006	General	Transmitter Code Saving	Special Function	Code Saving
HD Coupe(GK)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HD Coupe(GK)	2006	General	IMM(Immobilizer)	Special Function	Password
HD Coupe(GK)	2006	General	IMM(Immobilizer)	Special Function	Teaching/Changing
HD Coupe(GK)	2006	General	IMM(Immobilizer)	Special Function	Teaching
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Version Information	
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Read Fault Code	
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Actuation Test	
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	Auto Detected
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	Configuration Reset
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test

model	year	area	system	function	subfunction
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	Ignition Test
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Read FreezeData	
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	Read VIN
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	Write VIN
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
HD Coupe(GK)	2005	General	ECM(Engine Control Module)	Special Function	Readiness Test
HD Coupe(GK)	2005	General	TCM(Transmission Control Module)	Version Information	
HD Coupe(GK)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
HD Coupe(GK)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(GK)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(GK)	2005	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(GK)	2005	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
HD Coupe(GK)	2005	General	ABS(Anti-lock Braking System)	Version Information	
HD Coupe(GK)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
HD Coupe(GK)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(GK)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(GK)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
HD Coupe(GK)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HD Coupe(GK)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HD Coupe(GK)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(GK)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(GK)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HD Coupe(GK)	2005	General	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
HD Coupe(GK)	2005	General	BCM(Body Control Module)	Actuation Test	
HD Coupe(GK)	2005	General	Auto Headlamp Leveling	Version Information	
HD Coupe(GK)	2005	General	Auto Headlamp Leveling	Read Fault Code	
HD Coupe(GK)	2005	General	Auto Headlamp Leveling	Clear Fault Memory	
HD Coupe(GK)	2005	General	Auto Headlamp Leveling	Read Data Stream	
HD Coupe(GK)	2005	General	Auto Headlamp Leveling	Special Function	Level Initialization
HD Coupe(GK)	2005	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
HD Coupe(GK)	2005	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(GK)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HD Coupe(GK)	2005	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(GK)	2005	General	Transmitter Code Saving	Read Data Stream	
HD Coupe(GK)	2005	General	Transmitter Code Saving	Special Function	Code Saving
HD Coupe(GK)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HD Coupe(GK)	2005	General	IMM(Immobilizer)	Special Function	Password
HD Coupe(GK)	2005	General	IMM(Immobilizer)	Special Function	Teaching/Changing
HD Coupe(GK)	2005	General	IMM(Immobilizer)	Special Function	Teaching
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Version Information	
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Read Fault Code	
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Actuation Test	
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	Auto Detected
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	Configuration Reset
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	Ignition Test
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test

model	year	area	system	function	subfunction
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Read FreezeData	
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	Read VIN
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	Write VIN
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
HD Coupe(GK)	2004	General	ECM(Engine Control Module)	Special Function	Readiness Test
HD Coupe(GK)	2004	General	TCM(Transmission Control Module)	Version Information	
HD Coupe(GK)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
HD Coupe(GK)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(GK)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(GK)	2004	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(GK)	2004	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
HD Coupe(GK)	2004	General	ABS(Anti-lock Braking System)	Version Information	
HD Coupe(GK)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
HD Coupe(GK)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(GK)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(GK)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
HD Coupe(GK)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HD Coupe(GK)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HD Coupe(GK)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(GK)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(GK)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HD Coupe(GK)	2004	General	BCM(Body Control Module)	Read Data Stream	
HD Coupe(GK)	2004	General	BCM(Body Control Module)	Actuation Test	
HD Coupe(GK)	2004	General	Auto Headlamp Leveling	Version Information	
HD Coupe(GK)	2004	General	Auto Headlamp Leveling	Read Fault Code	
HD Coupe(GK)	2004	General	Auto Headlamp Leveling	Clear Fault Memory	
HD Coupe(GK)	2004	General	Auto Headlamp Leveling	Read Data Stream	
HD Coupe(GK)	2004	General	Auto Headlamp Leveling	Special Function	Level Initialization

model	year	area	system	function	subfunction
HD Coupe(GK)	2004	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
HD Coupe(GK)	2004	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(GK)	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HD Coupe(GK)	2004	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(GK)	2004	General	Transmitter Code Saving	Read Data Stream	
HD Coupe(GK)	2004	General	Transmitter Code Saving	Special Function	Code Saving
HD Coupe(GK)	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HD Coupe(GK)	2004	General	IMM(Immobilizer)	Special Function	Password
HD Coupe(GK)	2004	General	IMM(Immobilizer)	Special Function	Teaching/Changing
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Version Information	
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Read Fault Code	
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Actuation Test	
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	Auto Detected
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	Configuration Reset
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	Ignition Test
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Read FreezeData	
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	Readiness Test
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	Read VIN
HD Coupe(GK)	2003	General	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
HD Coupe(GK)	2003	General	TCM(Transmission Control Module)	Version Information	
HD Coupe(GK)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
HD Coupe(GK)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(GK)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(GK)	2003	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(GK)	2003	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
HD Coupe(GK)	2003	General	ABS(Anti-lock Braking System)	Version Information	
HD Coupe(GK)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
HD Coupe(GK)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(GK)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(GK)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
HD Coupe(GK)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HD Coupe(GK)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HD Coupe(GK)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(GK)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(GK)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HD Coupe(GK)	2003	General	BCM(Body Control Module)	Read Data Stream	
HD Coupe(GK)	2003	General	BCM(Body Control Module)	Actuation Test	
HD Coupe(GK)	2003	General	Auto Headlamp Leveling	Version Information	
HD Coupe(GK)	2003	General	Auto Headlamp Leveling	Read Fault Code	
HD Coupe(GK)	2003	General	Auto Headlamp Leveling	Clear Fault Memory	
HD Coupe(GK)	2003	General	Auto Headlamp Leveling	Read Data Stream	
HD Coupe(GK)	2003	General	Auto Headlamp Leveling	Special Function	Level Initialization
HD Coupe(GK)	2003	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
HD Coupe(GK)	2003	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(GK)	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HD Coupe(GK)	2003	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(GK)	2003	General	Transmitter Code Saving	Read Data Stream	
HD Coupe(GK)	2003	General	Transmitter Code Saving	Special Function	Code Saving

model	year	area	system	function	subfunction
HD Coupe(GK)	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HD Coupe(GK)	2003	General	IMM(Immobilizer)	Special Function	Password
HD Coupe(GK)	2003	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Version Information	
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Read Fault Code	
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Actuation Test	
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	Auto Detected
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	Configuration Reset
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	Ignition Test
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Read FreezeData	
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	Readiness Test
HD Coupe(GK)	2002	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
HD Coupe(GK)	2002	General	TCM(Transmission Control Module)	Version Information	
HD Coupe(GK)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
HD Coupe(GK)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(GK)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(GK)	2002	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(GK)	2002	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
HD Coupe(GK)	2002	General	ABS(Anti-lock Braking System)	Version Information	
HD Coupe(GK)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
HD Coupe(GK)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(GK)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(GK)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
HD Coupe(GK)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
HD Coupe(GK)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HD Coupe(GK)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(GK)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(GK)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HD Coupe(GK)	2002	General	BCM(Body Control Module)	Read Data Stream	
HD Coupe(GK)	2002	General	BCM(Body Control Module)	Actuation Test	
HD Coupe(GK)	2002	General	Auto Headlamp Leveling	Version Information	
HD Coupe(GK)	2002	General	Auto Headlamp Leveling	Read Fault Code	
HD Coupe(GK)	2002	General	Auto Headlamp Leveling	Clear Fault Memory	
HD Coupe(GK)	2002	General	Auto Headlamp Leveling	Read Data Stream	
HD Coupe(GK)	2002	General	Auto Headlamp Leveling	Special Function	Level Initialization
HD Coupe(GK)	2002	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
HD Coupe(GK)	2002	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(GK)	2002	General	IMM(Immobilizer)	Special Function	Limp Home Mode
HD Coupe(GK)	2002	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(GK)	2002	General	Transmitter Code Saving	Read Data Stream	
HD Coupe(GK)	2002	General	Transmitter Code Saving	Special Function	Code Saving
HD Coupe(GK)	2002	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
HD Coupe(GK)	2002	General	IMM(Immobilizer)	Special Function	Password
HD Coupe(GK)	2002	General	IMM(Immobilizer)	Special Function	Teaching/Changing
HD Coupe(RC)	2001	General	ECM(Engine Control Module)	Read Fault Code	
HD Coupe(RC)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(RC)	2001	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(RC)	2001	General	ECM(Engine Control Module)	Actuation Test	
HD Coupe(RC)	2001	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
HD Coupe(RC)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(RC)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(RC)	2001	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(RC)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
HD Coupe(RC)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(RC)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(RC)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
HD Coupe(RC)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(RC)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(RC)	2001	General	IMM(Immobilizer)	Read Fault Code	
HD Coupe(RC)	2001	General	IMM(Immobilizer)	Clear Fault Memory	
HD Coupe(RC)	2001	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(RC)	2001	General	IMM(Immobilizer)	Special Function	Password Record/Change
HD Coupe(RC)	2001	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
HD Coupe(RC)	2001	General	IMM(Immobilizer)	Special Function	Master Key Delete
HD Coupe(RC)	2001	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(RC)	2001	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
HD Coupe(RC)	2000	General	ECM(Engine Control Module)	Read Fault Code	
HD Coupe(RC)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(RC)	2000	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(RC)	2000	General	ECM(Engine Control Module)	Actuation Test	
HD Coupe(RC)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
HD Coupe(RC)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(RC)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(RC)	2000	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(RC)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
HD Coupe(RC)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(RC)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(RC)	2000	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
HD Coupe(RC)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(RC)	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(RC)	2000	General	IMM(Immobilizer)	Read Fault Code	
HD Coupe(RC)	2000	General	IMM(Immobilizer)	Clear Fault Memory	
HD Coupe(RC)	2000	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(RC)	2000	General	IMM(Immobilizer)	Special Function	Password Record/Change
HD Coupe(RC)	2000	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
HD Coupe(RC)	2000	General	IMM(Immobilizer)	Special Function	Master Key Delete
HD Coupe(RC)	2000	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(RC)	2000	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
HD Coupe(RC)	1999	General	ECM(Engine Control Module)	Read Fault Code	
HD Coupe(RC)	1999	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(RC)	1999	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(RC)	1999	General	ECM(Engine Control Module)	Actuation Test	
HD Coupe(RC)	1999	General	TCM(Transmission Control Module)	Read Fault Code	
HD Coupe(RC)	1999	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(RC)	1999	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(RC)	1999	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(RC)	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	
HD Coupe(RC)	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(RC)	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(RC)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(RC)	1999	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(RC)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HD Coupe(RC)	1999	General	IMM(Immobilizer)	Read Fault Code	
HD Coupe(RC)	1999	General	IMM(Immobilizer)	Clear Fault Memory	
HD Coupe(RC)	1999	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(RC)	1999	General	IMM(Immobilizer)	Special Function	Password Record/Change
HD Coupe(RC)	1999	General	IMM(Immobilizer)	Special Function	Master Key Record/Change

model	year	area	system	function	subfunction
HD Coupe(RC)	1999	General	IMM(Immobilizer)	Special Function	Master Key Delete
HD Coupe(RC)	1999	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(RC)	1999	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
HD Coupe(RC)	1998	General	ECM(Engine Control Module)	Read Fault Code	
HD Coupe(RC)	1998	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(RC)	1998	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(RC)	1998	General	ECM(Engine Control Module)	Actuation Test	
HD Coupe(RC)	1998	General	TCM(Transmission Control Module)	Read Fault Code	
HD Coupe(RC)	1998	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(RC)	1998	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(RC)	1998	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(RC)	1998	General	ABS(Anti-lock Braking System)	Read Fault Code	
HD Coupe(RC)	1998	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(RC)	1998	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(RC)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(RC)	1998	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(RC)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HD Coupe(RC)	1998	General	IMM(Immobilizer)	Read Fault Code	
HD Coupe(RC)	1998	General	IMM(Immobilizer)	Clear Fault Memory	
HD Coupe(RC)	1998	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(RC)	1998	General	IMM(Immobilizer)	Special Function	Password Record/Change
HD Coupe(RC)	1998	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
HD Coupe(RC)	1998	General	IMM(Immobilizer)	Special Function	Master Key Delete
HD Coupe(RC)	1998	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(RC)	1998	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
HD Coupe(RC)	1997	General	ECM(Engine Control Module)	Read Fault Code	
HD Coupe(RC)	1997	General	ECM(Engine Control Module)	Clear Fault Memory	
HD Coupe(RC)	1997	General	ECM(Engine Control Module)	Read Data Stream	
HD Coupe(RC)	1997	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
HD Coupe(RC)	1997	General	TCM(Transmission Control Module)	Read Fault Code	
HD Coupe(RC)	1997	General	TCM(Transmission Control Module)	Clear Fault Memory	
HD Coupe(RC)	1997	General	TCM(Transmission Control Module)	Read Data Stream	
HD Coupe(RC)	1997	General	TCM(Transmission Control Module)	Actuation Test	
HD Coupe(RC)	1997	General	ABS(Anti-lock Braking System)	Read Fault Code	
HD Coupe(RC)	1997	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
HD Coupe(RC)	1997	General	ABS(Anti-lock Braking System)	Read Data Stream	
HD Coupe(RC)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
HD Coupe(RC)	1997	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
HD Coupe(RC)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
HD Coupe(RC)	1997	General	IMM(Immobilizer)	Read Fault Code	
HD Coupe(RC)	1997	General	IMM(Immobilizer)	Clear Fault Memory	
HD Coupe(RC)	1997	General	IMM(Immobilizer)	Read Data Stream	
HD Coupe(RC)	1997	General	IMM(Immobilizer)	Special Function	Password Record/Change
HD Coupe(RC)	1997	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
HD Coupe(RC)	1997	General	IMM(Immobilizer)	Special Function	Master Key Delete
HD Coupe(RC)	1997	General	IMM(Immobilizer)	Special Function	Neutral Mode
HD Coupe(RC)	1997	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
i10(IA)	2018	General	ECM(Engine Control Module)	Version Information	
i10(IA)	2018	General	ECM(Engine Control Module)	Read Fault Code	
i10(IA)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(IA)	2018	General	ECM(Engine Control Module)	Read Data Stream	
i10(IA)	2018	General	ECM(Engine Control Module)	Actuation Test	
i10(IA)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(IA)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(IA)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(IA)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(IA)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(IA)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
i10(IA)	2018	General	TCM(Transmission Control Module)	Version Information	
i10(IA)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
i10(IA)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(IA)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
i10(IA)	2018	General	TCM(Transmission Control Module)	Actuation Test	
i10(IA)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(IA)	2018	General	ABS(Anti-lock Braking System)	Version Information	
i10(IA)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(IA)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(IA)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(IA)	2018	General	ABS(Anti-lock Braking System)	Read FreezeData	
i10(IA)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(IA)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(IA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
i10(IA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i10(IA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
i10(IA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
i10(IA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(IA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(IA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(IA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(IA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i10(IA)	2018	General	AC(Air Conditioning)	Version Information	
i10(IA)	2018	General	AC(Air Conditioning)	Read Fault Code	
i10(IA)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
i10(IA)	2018	General	AC(Air Conditioning)	Read Data Stream	
i10(IA)	2018	General	AC(Air Conditioning)	Actuation Test	
i10(IA)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecv Type)

model	year	area	system	function	subfunction
i10(IA)	2018	General	BCM(Body Control Module)	Version Information	
i10(IA)	2018	General	BCM(Body Control Module)	Read Fault Code	
i10(IA)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
i10(IA)	2018	General	BCM(Body Control Module)	Read Data Stream	
i10(IA)	2018	General	BCM(Body Control Module)	Actuation Test	
i10(IA)	2018	General	BCM(Body Control Module)	Special Function	User Option
i10(IA)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i10(IA)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i10(IA)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i10(IA)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i10(IA)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i10(IA)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i10(IA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i10(IA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i10(IA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i10(IA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i10(IA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i10(IA)	2018	General	EPS(Electronic Power Steering)	Version Information	
i10(IA)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(IA)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(IA)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(IA)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i10(IA)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i10(IA)	2018	General	Smart Key Unit	Version Information	
i10(IA)	2018	General	Smart Key Unit	Read Fault Code	
i10(IA)	2018	General	Smart Key Unit	Clear Fault Memory	
i10(IA)	2018	General	Smart Key Unit	Read Data Stream	
i10(IA)	2018	General	Smart Key Unit	Actuation Test	
i10(IA)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
i10(IA)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
i10(IA)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
i10(IA)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
i10(IA)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
i10(IA)	2018	General	Smart Key Unit	Special Function	SMK Status Information
i10(IA)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
i10(IA)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
i10(IA)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
i10(IA)	2018	General	Multi Function Camera	Version Information	
i10(IA)	2018	General	Multi Function Camera	Read Fault Code	
i10(IA)	2018	General	Multi Function Camera	Clear Fault Memory	
i10(IA)	2018	General	Multi Function Camera	Read Data Stream	
i10(IA)	2018	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
i10(IA)	2018	General	Multi Function Camera	Special Function	SPTAC Calibration
i10(IA)	2018	General	IMM(Immobilizer)	Read Data Stream	
i10(IA)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Checking
i10(IA)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(IA)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(IA)	2018	General	IMM(Immobilizer)	Special Function	Teaching
i10(IA)	2018	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(IA)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
i10(IA)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i10(IA)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i10(IA)	2017	General	ECM(Engine Control Module)	Version Information	
i10(IA)	2017	General	ECM(Engine Control Module)	Read Fault Code	
i10(IA)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(IA)	2017	General	ECM(Engine Control Module)	Read Data Stream	
i10(IA)	2017	General	ECM(Engine Control Module)	Actuation Test	
i10(IA)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
i10(IA)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(IA)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(IA)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(IA)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(IA)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i10(IA)	2017	General	TCM(Transmission Control Module)	Version Information	
i10(IA)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
i10(IA)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(IA)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
i10(IA)	2017	General	TCM(Transmission Control Module)	Actuation Test	
i10(IA)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(IA)	2017	General	ABS(Anti-lock Braking System)	Version Information	
i10(IA)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(IA)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(IA)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(IA)	2017	General	ABS(Anti-lock Braking System)	Read FreezeData	
i10(IA)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(IA)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(IA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
i10(IA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i10(IA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
i10(IA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
i10(IA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(IA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(IA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(IA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(IA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i10(IA)	2017	General	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
i10(IA)	2017	General	AC(Air Conditioning)	Read Fault Code	
i10(IA)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
i10(IA)	2017	General	AC(Air Conditioning)	Read Data Stream	
i10(IA)	2017	General	AC(Air Conditioning)	Actuation Test	
i10(IA)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i10(IA)	2017	General	BCM(Body Control Module)	Version Information	
i10(IA)	2017	General	BCM(Body Control Module)	Read Fault Code	
i10(IA)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
i10(IA)	2017	General	BCM(Body Control Module)	Read Data Stream	
i10(IA)	2017	General	BCM(Body Control Module)	Actuation Test	
i10(IA)	2017	General	BCM(Body Control Module)	Special Function	User Option
i10(IA)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i10(IA)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i10(IA)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i10(IA)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i10(IA)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i10(IA)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i10(IA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i10(IA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i10(IA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i10(IA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i10(IA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i10(IA)	2017	General	EPS(Electronic Power Steering)	Version Information	
i10(IA)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(IA)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(IA)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(IA)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i10(IA)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i10(IA)	2017	General	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
i10(IA)	2017	General	Smart Key Unit	Read Fault Code	
i10(IA)	2017	General	Smart Key Unit	Clear Fault Memory	
i10(IA)	2017	General	Smart Key Unit	Read Data Stream	
i10(IA)	2017	General	Smart Key Unit	Actuation Test	
i10(IA)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
i10(IA)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
i10(IA)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
i10(IA)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
i10(IA)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
i10(IA)	2017	General	Smart Key Unit	Special Function	SMK Status Information
i10(IA)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
i10(IA)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
i10(IA)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
i10(IA)	2017	General	Multi Function Camera	Version Information	
i10(IA)	2017	General	Multi Function Camera	Read Fault Code	
i10(IA)	2017	General	Multi Function Camera	Clear Fault Memory	
i10(IA)	2017	General	Multi Function Camera	Read Data Stream	
i10(IA)	2017	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
i10(IA)	2017	General	Multi Function Camera	Special Function	SPTAC Calibration
i10(IA)	2017	General	IMM(Immobilizer)	Read Data Stream	
i10(IA)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i10(IA)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(IA)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(IA)	2017	General	IMM(Immobilizer)	Special Function	Teaching
i10(IA)	2017	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(IA)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
i10(IA)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i10(IA)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i10(IA)	2016	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
i10(IA)	2016	General	ECM(Engine Control Module)	Read Fault Code	
i10(IA)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(IA)	2016	General	ECM(Engine Control Module)	Read Data Stream	
i10(IA)	2016	General	ECM(Engine Control Module)	Actuation Test	
i10(IA)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(IA)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(IA)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(IA)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(IA)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(IA)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i10(IA)	2016	General	ABS(Anti-lock Braking System)	Version Information	
i10(IA)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(IA)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(IA)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(IA)	2016	General	ABS(Anti-lock Braking System)	Read FreezeData	
i10(IA)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(IA)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(IA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
i10(IA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i10(IA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
i10(IA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
i10(IA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(IA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(IA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(IA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(IA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i10(IA)	2016	General	AC(Air Conditioning)	Version Information	
i10(IA)	2016	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
i10(IA)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
i10(IA)	2016	General	AC(Air Conditioning)	Read Data Stream	
i10(IA)	2016	General	AC(Air Conditioning)	Actuation Test	
i10(IA)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i10(IA)	2016	General	BCM(Body Control Module)	Version Information	
i10(IA)	2016	General	BCM(Body Control Module)	Read Fault Code	
i10(IA)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
i10(IA)	2016	General	BCM(Body Control Module)	Read Data Stream	
i10(IA)	2016	General	BCM(Body Control Module)	Actuation Test	
i10(IA)	2016	General	BCM(Body Control Module)	Special Function	User Option
i10(IA)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i10(IA)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i10(IA)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i10(IA)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i10(IA)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i10(IA)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i10(IA)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i10(IA)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i10(IA)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i10(IA)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i10(IA)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i10(IA)	2016	General	EPS(Electronic Power Steering)	Version Information	
i10(IA)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(IA)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(IA)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(IA)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i10(IA)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i10(IA)	2016	General	Smart Key Unit	Version Information	
i10(IA)	2016	General	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
i10(IA)	2016	General	Smart Key Unit	Clear Fault Memory	
i10(IA)	2016	General	Smart Key Unit	Read Data Stream	
i10(IA)	2016	General	Smart Key Unit	Actuation Test	
i10(IA)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
i10(IA)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
i10(IA)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
i10(IA)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
i10(IA)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
i10(IA)	2016	General	Smart Key Unit	Special Function	SMK Status Information
i10(IA)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
i10(IA)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
i10(IA)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
i10(IA)	2016	General	IMM(Immobilizer)	Read Data Stream	
i10(IA)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i10(IA)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(IA)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(IA)	2016	General	IMM(Immobilizer)	Special Function	Teaching
i10(IA)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(IA)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
i10(IA)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i10(IA)	2016	General	TCM(Transmission Control Module)	Version Information	
i10(IA)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
i10(IA)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(IA)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
i10(IA)	2016	General	TCM(Transmission Control Module)	Actuation Test	
i10(IA)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(IA)	2016	General	Tire Pressure Monitoring	Version Information	
i10(IA)	2016	General	Tire Pressure Monitoring	Read Fault Code	
i10(IA)	2016	General	Tire Pressure Monitoring	Clear Fault Memory	

model	year	area	system	function	subfunction
i10(IA)	2016	General	Tire Pressure Monitoring	Read Data Stream	
i10(IA)	2016	General	Tire Pressure Monitoring	Special Function	Wheel Sensor ID Writing
i10(IA)	2016	General	Tire Pressure Monitoring	Special Function	Write VIN
i10(IA)	2016	General	Tire Pressure Monitoring	Special Function	Vehicle Name Code Reading
i10(IA)	2016	General	Tire Pressure Monitoring	Special Function	Vehicle Name Code Writing
i10(IA)	2016	General	Tire Pressure Monitoring	Special Function	TPMS TEST
i10(IA)	2016	General	Electronic Power Steering	Version Information	
i10(IA)	2016	General	Electronic Power Steering	Read Fault Code	
i10(IA)	2016	General	Electronic Power Steering	Clear Fault Memory	
i10(IA)	2016	General	Electronic Power Steering	Read Data Stream	
i10(IA)	2016	General	Electronic Power Steering	Special Function	ASP Calibration
i10(IA)	2016	General	Electronic Power Steering	Special Function	EPS Type Recognition
i10(IA)	2015	General	ECM(Engine Control Module)	Version Information	
i10(IA)	2015	General	ECM(Engine Control Module)	Read Fault Code	
i10(IA)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(IA)	2015	General	ECM(Engine Control Module)	Read Data Stream	
i10(IA)	2015	General	ECM(Engine Control Module)	Actuation Test	
i10(IA)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(IA)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(IA)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(IA)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(IA)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(IA)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i10(IA)	2015	General	TCM(Transmission Control Module)	Version Information	
i10(IA)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
i10(IA)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(IA)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
i10(IA)	2015	General	TCM(Transmission Control Module)	Actuation Test	
i10(IA)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
i10(IA)	2015	General	ABS(Anti-lock Braking System)	Version Information	
i10(IA)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(IA)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(IA)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(IA)	2015	General	ABS(Anti-lock Braking System)	Read FreezeData	
i10(IA)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(IA)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(IA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
i10(IA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i10(IA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
i10(IA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
i10(IA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(IA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(IA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(IA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(IA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i10(IA)	2015	General	AC(Air Conditioning)	Version Information	
i10(IA)	2015	General	AC(Air Conditioning)	Read Fault Code	
i10(IA)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
i10(IA)	2015	General	AC(Air Conditioning)	Read Data Stream	
i10(IA)	2015	General	AC(Air Conditioning)	Actuation Test	
i10(IA)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i10(IA)	2015	General	BCM(Body Control Module)	Version Information	
i10(IA)	2015	General	BCM(Body Control Module)	Read Fault Code	
i10(IA)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
i10(IA)	2015	General	BCM(Body Control Module)	Read Data Stream	
i10(IA)	2015	General	BCM(Body Control Module)	Actuation Test	
i10(IA)	2015	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
i10(IA)	2015	General	EPS(Electronic Power Steering)	Version Information	
i10(IA)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(IA)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(IA)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(IA)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i10(IA)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i10(IA)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i10(IA)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i10(IA)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i10(IA)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i10(IA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i10(IA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i10(IA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i10(IA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i10(IA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i10(IA)	2015	General	IMM(Immobilizer)	Read Data Stream	
i10(IA)	2015	General	IMM(Immobilizer)	Special Function	Password
i10(IA)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Changing
i10(IA)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(IA)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(IA)	2015	General	IMM(Immobilizer)	Special Function	Teaching
i10(IA)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(IA)	2015	General	Smart Key Unit	Version Information	
i10(IA)	2015	General	Smart Key Unit	Read Fault Code	
i10(IA)	2015	General	Smart Key Unit	Clear Fault Memory	
i10(IA)	2015	General	Smart Key Unit	Read Data Stream	
i10(IA)	2015	General	Smart Key Unit	Actuation Test	
i10(IA)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
i10(IA)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
i10(IA)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
i10(IA)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
i10(IA)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
i10(IA)	2015	General	Smart Key Unit	Special Function	SMK Status Information
i10(IA)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
i10(IA)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
i10(IA)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
i10(IA)	2015	General	Cluster Module	Version Information	
i10(IA)	2015	General	Cluster Module	Read Fault Code	
i10(IA)	2015	General	Cluster Module	Clear Fault Memory	
i10(IA)	2015	General	Cluster Module	Read Data Stream	
i10(IA)	2015	General	Cluster Module	Actuation Test	
i10(IA)	2015	General	Cluster Module	Special Function	CLU Variant Coding
i10(IA)	2015	General	Cluster Module	Special Function	Service Reminder Setting
i10(IA)	2015	General	Smart Junction Block	Version Information	
i10(IA)	2015	General	Smart Junction Block	Read Fault Code	
i10(IA)	2015	General	Smart Junction Block	Clear Fault Memory	
i10(IA)	2015	General	Smart Junction Block	Read Data Stream	
i10(IA)	2015	General	Smart Junction Block	Actuation Test	
i10(IA)	2015	General	Smart Junction Block	Special Function	User Option
i10(IA)	2015	General	Transmitter Code Saving	Read Data Stream	
i10(IA)	2015	General	Transmitter Code Saving	Special Function	Code Saving
i10(IA)	2014	General	ECM(Engine Control Module)	Version Information	
i10(IA)	2014	General	ECM(Engine Control Module)	Read Fault Code	
i10(IA)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(IA)	2014	General	ECM(Engine Control Module)	Read Data Stream	
i10(IA)	2014	General	ECM(Engine Control Module)	Actuation Test	
i10(IA)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(IA)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(IA)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
i10(IA)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(IA)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(IA)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i10(IA)	2014	General	TCM(Transmission Control Module)	Version Information	
i10(IA)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
i10(IA)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(IA)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
i10(IA)	2014	General	TCM(Transmission Control Module)	Actuation Test	
i10(IA)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(IA)	2014	General	ABS(Anti-lock Braking System)	Version Information	
i10(IA)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(IA)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(IA)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(IA)	2014	General	ABS(Anti-lock Braking System)	Read FreezeData	
i10(IA)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(IA)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(IA)	2014	General	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
i10(IA)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i10(IA)	2014	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
i10(IA)	2014	General	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
i10(IA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(IA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(IA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(IA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(IA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i10(IA)	2014	General	AC(Air Conditioning)	Version Information	
i10(IA)	2014	General	AC(Air Conditioning)	Read Fault Code	
i10(IA)	2014	General	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
i10(IA)	2014	General	AC(Air Conditioning)	Read Data Stream	
i10(IA)	2014	General	AC(Air Conditioning)	Actuation Test	
i10(IA)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i10(IA)	2014	General	BCM(Body Control Module)	Version Information	
i10(IA)	2014	General	BCM(Body Control Module)	Read Fault Code	
i10(IA)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
i10(IA)	2014	General	BCM(Body Control Module)	Read Data Stream	
i10(IA)	2014	General	BCM(Body Control Module)	Actuation Test	
i10(IA)	2014	General	BCM(Body Control Module)	Special Function	User Option
i10(IA)	2014	General	EPS(Electronic Power Steering)	Version Information	
i10(IA)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(IA)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(IA)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(IA)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i10(IA)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i10(IA)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i10(IA)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i10(IA)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i10(IA)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i10(IA)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i10(IA)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i10(IA)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i10(IA)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i10(IA)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i10(IA)	2014	General	IMM(Immobilizer)	Read Data Stream	
i10(IA)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i10(IA)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(IA)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(IA)	2014	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
i10(IA)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(IA)	2014	General	Smart Key Unit	Version Information	
i10(IA)	2014	General	Smart Key Unit	Read Fault Code	
i10(IA)	2014	General	Smart Key Unit	Clear Fault Memory	
i10(IA)	2014	General	Smart Key Unit	Read Data Stream	
i10(IA)	2014	General	Smart Key Unit	Actuation Test	
i10(IA)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
i10(IA)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
i10(IA)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
i10(IA)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
i10(IA)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
i10(IA)	2014	General	Smart Key Unit	Special Function	SMK Status Information
i10(IA)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
i10(IA)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
i10(IA)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
i10(IA)	2014	General	Cluster Module	Version Information	
i10(IA)	2014	General	Cluster Module	Read Fault Code	
i10(IA)	2014	General	Cluster Module	Clear Fault Memory	
i10(IA)	2014	General	Cluster Module	Read Data Stream	
i10(IA)	2014	General	Cluster Module	Actuation Test	
i10(IA)	2014	General	Cluster Module	Special Function	CLU Variant Coding
i10(IA)	2014	General	Cluster Module	Special Function	Service Reminder Setting
i10(IA)	2014	General	Smart Junction Block	Version Information	
i10(IA)	2014	General	Smart Junction Block	Read Fault Code	
i10(IA)	2014	General	Smart Junction Block	Clear Fault Memory	
i10(IA)	2014	General	Smart Junction Block	Read Data Stream	
i10(IA)	2014	General	Smart Junction Block	Actuation Test	
i10(IA)	2014	General	Smart Junction Block	Special Function	User Option
i10(IA)	2014	General	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
i10(IA)	2014	General	Transmitter Code Saving	Special Function	Code Saving
i10(PA)	2017	General	ECM(Engine Control Module)	Version Information	
i10(PA)	2017	General	ECM(Engine Control Module)	Read Fault Code	
i10(PA)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(PA)	2017	General	ECM(Engine Control Module)	Read Data Stream	
i10(PA)	2017	General	ECM(Engine Control Module)	Actuation Test	
i10(PA)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(PA)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(PA)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(PA)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(PA)	2017	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i10(PA)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i10(PA)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(PA)	2017	General	TCM(Transmission Control Module)	Version Information	
i10(PA)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
i10(PA)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(PA)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
i10(PA)	2017	General	TCM(Transmission Control Module)	Actuation Test	
i10(PA)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(PA)	2017	General	ABS(Anti-lock Braking System)	Version Information	
i10(PA)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(PA)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(PA)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(PA)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(PA)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(PA)	2017	General	Airbag Control	Version Information	
i10(PA)	2017	General	Airbag Control	Read Fault Code	
i10(PA)	2017	General	Airbag Control	Clear Fault Memory	
i10(PA)	2017	General	Airbag Control	Read Data Stream	

model	year	area	system	function	subfunction
i10(PA)	2017	General	Airbag Control	Special Function	Pass.Airbag Status with Battery
i10(PA)	2017	General	EPS(Electronic Power Steering)	Version Information	
i10(PA)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(PA)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(PA)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(PA)	2017	General	IMM(Immobilizer)	Read Data Stream	
i10(PA)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i10(PA)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(PA)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(PA)	2017	General	IMM(Immobilizer)	Special Function	Teaching
i10(PA)	2017	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(PA)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i10(PA)	2016	General	ECM(Engine Control Module)	Version Information	
i10(PA)	2016	General	ECM(Engine Control Module)	Read Fault Code	
i10(PA)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(PA)	2016	General	ECM(Engine Control Module)	Read Data Stream	
i10(PA)	2016	General	ECM(Engine Control Module)	Actuation Test	
i10(PA)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(PA)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(PA)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(PA)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(PA)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i10(PA)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i10(PA)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(PA)	2016	General	TCM(Transmission Control Module)	Version Information	
i10(PA)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
i10(PA)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(PA)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
i10(PA)	2016	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
i10(PA)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(PA)	2016	General	ABS(Anti-lock Braking System)	Version Information	
i10(PA)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(PA)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(PA)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(PA)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(PA)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(PA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(PA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(PA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(PA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(PA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Status with Battery
i10(PA)	2016	General	EPS(Electronic Power Steering)	Version Information	
i10(PA)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(PA)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(PA)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(PA)	2016	General	IMM(Immobilizer)	Read Data Stream	
i10(PA)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
i10(PA)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(PA)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(PA)	2016	General	IMM(Immobilizer)	Special Function	Teaching
i10(PA)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(PA)	2015	General	ECM(Engine Control Module)	Version Information	
i10(PA)	2015	General	ECM(Engine Control Module)	Read Fault Code	
i10(PA)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(PA)	2015	General	ECM(Engine Control Module)	Read Data Stream	
i10(PA)	2015	General	ECM(Engine Control Module)	Actuation Test	
i10(PA)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(PA)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
i10(PA)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(PA)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(PA)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i10(PA)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i10(PA)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(PA)	2015	General	TCM(Transmission Control Module)	Version Information	
i10(PA)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
i10(PA)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(PA)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
i10(PA)	2015	General	TCM(Transmission Control Module)	Actuation Test	
i10(PA)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(PA)	2015	General	ABS(Anti-lock Braking System)	Version Information	
i10(PA)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(PA)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(PA)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(PA)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(PA)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(PA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(PA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(PA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(PA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(PA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Status with Battery
i10(PA)	2015	General	EPS(Electronic Power Steering)	Version Information	
i10(PA)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(PA)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(PA)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(PA)	2015	General	IMM(Immobilizer)	Read Data Stream	
i10(PA)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i10(PA)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
i10(PA)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(PA)	2015	General	IMM(Immobilizer)	Special Function	Teaching
i10(PA)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(PA)	2015	General	Transmitter Code Saving	Special Function	Code Saving
i10(PA)	2014	General	ECM(Engine Control Module)	Version Information	
i10(PA)	2014	General	ECM(Engine Control Module)	Read Fault Code	
i10(PA)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(PA)	2014	General	ECM(Engine Control Module)	Read Data Stream	
i10(PA)	2014	General	ECM(Engine Control Module)	Actuation Test	
i10(PA)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(PA)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(PA)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(PA)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(PA)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i10(PA)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i10(PA)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(PA)	2014	General	TCM(Transmission Control Module)	Version Information	
i10(PA)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
i10(PA)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(PA)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
i10(PA)	2014	General	TCM(Transmission Control Module)	Actuation Test	
i10(PA)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(PA)	2014	General	ABS(Anti-lock Braking System)	Version Information	
i10(PA)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(PA)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(PA)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(PA)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(PA)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(PA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
i10(PA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(PA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(PA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(PA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Status with Battery
i10(PA)	2014	General	EPS(Electronic Power Steering)	Version Information	
i10(PA)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(PA)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(PA)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(PA)	2014	General	IMM(Immobilizer)	Read Data Stream	
i10(PA)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
i10(PA)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(PA)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(PA)	2014	General	IMM(Immobilizer)	Special Function	Teaching
i10(PA)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(PA)	2014	General	Transmitter Code Saving	Special Function	Code Saving
i10(PA)	2013	General	ECM(Engine Control Module)	Version Information	
i10(PA)	2013	General	ECM(Engine Control Module)	Read Fault Code	
i10(PA)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(PA)	2013	General	ECM(Engine Control Module)	Read Data Stream	
i10(PA)	2013	General	ECM(Engine Control Module)	Actuation Test	
i10(PA)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(PA)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(PA)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(PA)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(PA)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i10(PA)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i10(PA)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(PA)	2013	General	TCM(Transmission Control Module)	Version Information	
i10(PA)	2013	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
i10(PA)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(PA)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
i10(PA)	2013	General	TCM(Transmission Control Module)	Actuation Test	
i10(PA)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(PA)	2013	General	ABS(Anti-lock Braking System)	Version Information	
i10(PA)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(PA)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(PA)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(PA)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(PA)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(PA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(PA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(PA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(PA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(PA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Status with Battery
i10(PA)	2013	General	EPS(Electronic Power Steering)	Version Information	
i10(PA)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(PA)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(PA)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(PA)	2013	General	IMM(Immobilizer)	Read Data Stream	
i10(PA)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i10(PA)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(PA)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(PA)	2013	General	IMM(Immobilizer)	Special Function	Teaching
i10(PA)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(PA)	2013	General	Transmitter Code Saving	Special Function	Code Saving
i10(PA)	2012	General	ECM(Engine Control Module)	Version Information	
i10(PA)	2012	General	ECM(Engine Control Module)	Read Fault Code	
i10(PA)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
i10(PA)	2012	General	ECM(Engine Control Module)	Read Data Stream	
i10(PA)	2012	General	ECM(Engine Control Module)	Actuation Test	
i10(PA)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(PA)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(PA)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(PA)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(PA)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i10(PA)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i10(PA)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(PA)	2012	General	TCM(Transmission Control Module)	Version Information	
i10(PA)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
i10(PA)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(PA)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
i10(PA)	2012	General	TCM(Transmission Control Module)	Actuation Test	
i10(PA)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(PA)	2012	General	ABS(Anti-lock Braking System)	Version Information	
i10(PA)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(PA)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(PA)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(PA)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(PA)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(PA)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(PA)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(PA)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(PA)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(PA)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass Airbag Status with Battery
i10(PA)	2012	General	EPS(Electronic Power Steering)	Version Information	
i10(PA)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(PA)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
i10(PA)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(PA)	2012	General	IMM(Immobilizer)	Read Data Stream	
i10(PA)	2012	General	IMM(Immobilizer)	Special Function	Password
i10(PA)	2012	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
i10(PA)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(PA)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(PA)	2012	General	IMM(Immobilizer)	Special Function	Teaching
i10(PA)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(PA)	2012	General	Transmitter Code Saving	Special Function	Code Saving
i10(PA)	2011	General	ECM(Engine Control Module)	Version Information	
i10(PA)	2011	General	ECM(Engine Control Module)	Read Fault Code	
i10(PA)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(PA)	2011	General	ECM(Engine Control Module)	Read Data Stream	
i10(PA)	2011	General	ECM(Engine Control Module)	Actuation Test	
i10(PA)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(PA)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(PA)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(PA)	2011	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i10(PA)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i10(PA)	2011	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i10(PA)	2011	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i10(PA)	2011	General	TCM(Transmission Control Module)	Version Information	
i10(PA)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
i10(PA)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(PA)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
i10(PA)	2011	General	TCM(Transmission Control Module)	Actuation Test	
i10(PA)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(PA)	2011	General	ABS(Anti-lock Braking System)	Version Information	
i10(PA)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(PA)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
i10(PA)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(PA)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(PA)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(PA)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(PA)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(PA)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(PA)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(PA)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Status with Battery
i10(PA)	2011	General	EPS(Electronic Power Steering)	Version Information	
i10(PA)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(PA)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(PA)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(PA)	2011	General	IMM(Immobilizer)	Read Data Stream	
i10(PA)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i10(PA)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(PA)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(PA)	2011	General	IMM(Immobilizer)	Special Function	Teaching
i10(PA)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(PA)	2011	General	Transmitter Code Saving	Special Function	Code Saving
i10(PA)	2010	General	ECM(Engine Control Module)	Version Information	
i10(PA)	2010	General	ECM(Engine Control Module)	Read Fault Code	
i10(PA)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(PA)	2010	General	ECM(Engine Control Module)	Read Data Stream	
i10(PA)	2010	General	ECM(Engine Control Module)	Actuation Test	
i10(PA)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(PA)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(PA)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(PA)	2010	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i10(PA)	2010	General	ECM(Engine Control Module)	Special Function	Ignition Test

model	year	area	system	function	subfunction
i10(PA)	2010	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i10(PA)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i10(PA)	2010	General	TCM(Transmission Control Module)	Version Information	
i10(PA)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
i10(PA)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(PA)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
i10(PA)	2010	General	TCM(Transmission Control Module)	Actuation Test	
i10(PA)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(PA)	2010	General	ABS(Anti-lock Braking System)	Version Information	
i10(PA)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(PA)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(PA)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(PA)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(PA)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(PA)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(PA)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(PA)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(PA)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(PA)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Status with Bottom
i10(PA)	2010	General	EPS(Electronic Power Steering)	Version Information	
i10(PA)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(PA)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(PA)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(PA)	2010	General	IMM(Immobilizer)	Read Data Stream	
i10(PA)	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i10(PA)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(PA)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(PA)	2010	General	IMM(Immobilizer)	Special Function	Teaching
i10(PA)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
i10(PA)	2010	General	Transmitter Code Saving	Special Function	Code Saving
i10(PA)	2010	General	ECM(Engine Control Module)	Read FreezeData	
i10(PA)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i10(PA)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i10(PA)	2009	General	ECM(Engine Control Module)	Version Information	
i10(PA)	2009	General	ECM(Engine Control Module)	Read Fault Code	
i10(PA)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(PA)	2009	General	ECM(Engine Control Module)	Read Data Stream	
i10(PA)	2009	General	ECM(Engine Control Module)	Actuation Test	
i10(PA)	2009	General	ECM(Engine Control Module)	Special Function	Read VIN
i10(PA)	2009	General	ECM(Engine Control Module)	Special Function	Write VIN
i10(PA)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(PA)	2009	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i10(PA)	2009	General	ECM(Engine Control Module)	Special Function	Ignition Test
i10(PA)	2009	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i10(PA)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i10(PA)	2009	General	TCM(Transmission Control Module)	Version Information	
i10(PA)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
i10(PA)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(PA)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
i10(PA)	2009	General	TCM(Transmission Control Module)	Actuation Test	
i10(PA)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(PA)	2009	General	ABS(Anti-lock Braking System)	Version Information	
i10(PA)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(PA)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(PA)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(PA)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(PA)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(PA)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
i10(PA)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(PA)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(PA)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(PA)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Status with Battery
i10(PA)	2009	General	EPS(Electronic Power Steering)	Version Information	
i10(PA)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(PA)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(PA)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(PA)	2009	General	IMM(Immobilizer)	Read Data Stream	
i10(PA)	2009	General	IMM(Immobilizer)	Special Function	Password
i10(PA)	2009	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
i10(PA)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(PA)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(PA)	2009	General	IMM(Immobilizer)	Special Function	Teaching
i10(PA)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(PA)	2009	General	Transmitter Code Saving	Special Function	Code Saving
i10(PA)	2009	General	ECM(Engine Control Module)	Read FreezeData	
i10(PA)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i10(PA)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i10(PA)	2008	General	ECM(Engine Control Module)	Version Information	
i10(PA)	2008	General	ECM(Engine Control Module)	Read Fault Code	
i10(PA)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
i10(PA)	2008	General	ECM(Engine Control Module)	Read Data Stream	
i10(PA)	2008	General	ECM(Engine Control Module)	Actuation Test	
i10(PA)	2008	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i10(PA)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i10(PA)	2008	General	TCM(Transmission Control Module)	Version Information	
i10(PA)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
i10(PA)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
i10(PA)	2008	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
i10(PA)	2008	General	TCM(Transmission Control Module)	Actuation Test	
i10(PA)	2008	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i10(PA)	2008	General	ABS(Anti-lock Braking System)	Version Information	
i10(PA)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
i10(PA)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i10(PA)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
i10(PA)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
i10(PA)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i10(PA)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i10(PA)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i10(PA)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i10(PA)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i10(PA)	2008	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Status with Battery
i10(PA)	2008	General	EPS(Electronic Power Steering)	Version Information	
i10(PA)	2008	General	EPS(Electronic Power Steering)	Read Fault Code	
i10(PA)	2008	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i10(PA)	2008	General	EPS(Electronic Power Steering)	Read Data Stream	
i10(PA)	2008	General	IMM(Immobilizer)	Read Data Stream	
i10(PA)	2008	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
i10(PA)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i10(PA)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i10(PA)	2008	General	IMM(Immobilizer)	Special Function	Teaching
i10(PA)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i10(PA)	2008	General	Transmitter Code Saving	Special Function	Code Saving
i10(PA)	2008	General	ECM(Engine Control Module)	Read FreezeData	
i10(PA)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i10(PA)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i20(GB)	2018	General	ECM(Engine Control Module)	Version Information	
i20(GB)	2018	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
i20(GB)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(GB)	2018	General	ECM(Engine Control Module)	Read Data Stream	
i20(GB)	2018	General	ECM(Engine Control Module)	Actuation Test	
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(GB)	2018	General	TCM(Transmission Control Module)	Version Information	
i20(GB)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
i20(GB)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(GB)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
i20(GB)	2018	General	TCM(Transmission Control Module)	Actuation Test	
i20(GB)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(GB)	2018	General	ABS(Anti-lock Braking System)	Version Information	
i20(GB)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(GB)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(GB)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
i20(GB)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(GB)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(GB)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(GB)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i20(GB)	2018	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(GB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(GB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(GB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(GB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
i20(GB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
i20(GB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i20(GB)	2018	General	AC(Air Conditioning)	Version Information	
i20(GB)	2018	General	AC(Air Conditioning)	Read Fault Code	
i20(GB)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
i20(GB)	2018	General	AC(Air Conditioning)	Read Data Stream	
i20(GB)	2018	General	AC(Air Conditioning)	Actuation Test	
i20(GB)	2018	General	BCM(Body Control Module)	Version Information	
i20(GB)	2018	General	BCM(Body Control Module)	Read Fault Code	
i20(GB)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
i20(GB)	2018	General	BCM(Body Control Module)	Read Data Stream	
i20(GB)	2018	General	BCM(Body Control Module)	Actuation Test	
i20(GB)	2018	General	BCM(Body Control Module)	Special Function	User Option
i20(GB)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i20(GB)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i20(GB)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(GB)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(GB)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(GB)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(GB)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(GB)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(GB)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(GB)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(GB)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i20(GB)	2018	General	EPS(Electronic Power Steering)	Version Information	
i20(GB)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(GB)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(GB)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(GB)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
i20(GB)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(GB)	2018	General	Smart Key Unit	Version Information	
i20(GB)	2018	General	Smart Key Unit	Read Fault Code	
i20(GB)	2018	General	Smart Key Unit	Clear Fault Memory	
i20(GB)	2018	General	Smart Key Unit	Read Data Stream	
i20(GB)	2018	General	Smart Key Unit	Actuation Test	
i20(GB)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
i20(GB)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
i20(GB)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
i20(GB)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
i20(GB)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(GB)	2018	General	Smart Key Unit	Special Function	SMK Status Information
i20(GB)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(GB)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
i20(GB)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(GB)	2018	General	Lane Departure Warning System	Version Information	
i20(GB)	2018	General	Lane Departure Warning System	Read Fault Code	
i20(GB)	2018	General	Lane Departure Warning System	Clear Fault Memory	
i20(GB)	2018	General	Lane Departure Warning System	Read Data Stream	
i20(GB)	2018	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
i20(GB)	2018	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
i20(GB)	2018	General	Parking Guide System	Version Information	
i20(GB)	2018	General	Parking Guide System	Read Fault Code	
i20(GB)	2018	General	Parking Guide System	Clear Fault Memory	
i20(GB)	2018	General	Parking Guide System	Read Data Stream	
i20(GB)	2018	General	IMM(Immobilizer)	Read Data Stream	
i20(GB)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(GB)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(GB)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
i20(GB)	2018	General	IMM(Immobilizer)	Special Function	Teaching
i20(GB)	2018	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(GB)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
i20(GB)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/ECU Cleaning
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	ECU Learning Value
i20(GB)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(GB)	2017	General	ECM(Engine Control Module)	Version Information	
i20(GB)	2017	General	ECM(Engine Control Module)	Read Fault Code	
i20(GB)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(GB)	2017	General	ECM(Engine Control Module)	Read Data Stream	
i20(GB)	2017	General	ECM(Engine Control Module)	Actuation Test	
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(GB)	2017	General	TCM(Transmission Control Module)	Version Information	
i20(GB)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
i20(GB)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(GB)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
i20(GB)	2017	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
i20(GB)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(GB)	2017	General	ABS(Anti-lock Braking System)	Version Information	
i20(GB)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(GB)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(GB)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
i20(GB)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(GB)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(GB)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(GB)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i20(GB)	2017	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(GB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(GB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(GB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(GB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(GB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
i20(GB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i20(GB)	2017	General	AC(Air Conditioning)	Version Information	
i20(GB)	2017	General	AC(Air Conditioning)	Read Fault Code	
i20(GB)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
i20(GB)	2017	General	AC(Air Conditioning)	Read Data Stream	
i20(GB)	2017	General	AC(Air Conditioning)	Actuation Test	
i20(GB)	2017	General	BCM(Body Control Module)	Version Information	
i20(GB)	2017	General	BCM(Body Control Module)	Read Fault Code	
i20(GB)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
i20(GB)	2017	General	BCM(Body Control Module)	Read Data Stream	
i20(GB)	2017	General	BCM(Body Control Module)	Actuation Test	
i20(GB)	2017	General	BCM(Body Control Module)	Special Function	User Option
i20(GB)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding

model	year	area	system	function	subfunction
i20(GB)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i20(GB)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(GB)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(GB)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(GB)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(GB)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(GB)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(GB)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(GB)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(GB)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i20(GB)	2017	General	EPS(Electronic Power Steering)	Version Information	
i20(GB)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(GB)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(GB)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(GB)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i20(GB)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(GB)	2017	General	Smart Key Unit	Version Information	
i20(GB)	2017	General	Smart Key Unit	Read Fault Code	
i20(GB)	2017	General	Smart Key Unit	Clear Fault Memory	
i20(GB)	2017	General	Smart Key Unit	Read Data Stream	
i20(GB)	2017	General	Smart Key Unit	Actuation Test	
i20(GB)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
i20(GB)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
i20(GB)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
i20(GB)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
i20(GB)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(GB)	2017	General	Smart Key Unit	Special Function	SMK Status Information
i20(GB)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(GB)	2017	General	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
i20(GB)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(GB)	2017	General	Lane Departure Warning System	Version Information	
i20(GB)	2017	General	Lane Departure Warning System	Read Fault Code	
i20(GB)	2017	General	Lane Departure Warning System	Clear Fault Memory	
i20(GB)	2017	General	Lane Departure Warning System	Read Data Stream	
i20(GB)	2017	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
i20(GB)	2017	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
i20(GB)	2017	General	Parking Guide System	Version Information	
i20(GB)	2017	General	Parking Guide System	Read Fault Code	
i20(GB)	2017	General	Parking Guide System	Clear Fault Memory	
i20(GB)	2017	General	Parking Guide System	Read Data Stream	
i20(GB)	2017	General	IMM(Immobilizer)	Read Data Stream	
i20(GB)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(GB)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(GB)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(GB)	2017	General	IMM(Immobilizer)	Special Function	Teaching
i20(GB)	2017	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(GB)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
i20(GB)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	ECU Learning Value
i20(GB)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(GB)	2016	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
i20(GB)	2016	General	ECM(Engine Control Module)	Read Fault Code	
i20(GB)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(GB)	2016	General	ECM(Engine Control Module)	Read Data Stream	
i20(GB)	2016	General	ECM(Engine Control Module)	Actuation Test	
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	ECU Learning Value
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(GB)	2016	General	ABS(Anti-lock Braking System)	Version Information	
i20(GB)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(GB)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(GB)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
i20(GB)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(GB)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(GB)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(GB)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i20(GB)	2016	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(GB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(GB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(GB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(GB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(GB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i20(GB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
i20(GB)	2016	General	AC(Air Conditioning)	Version Information	
i20(GB)	2016	General	AC(Air Conditioning)	Read Fault Code	
i20(GB)	2016	General	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
i20(GB)	2016	General	AC(Air Conditioning)	Read Data Stream	
i20(GB)	2016	General	AC(Air Conditioning)	Actuation Test	
i20(GB)	2016	General	BCM(Body Control Module)	Version Information	
i20(GB)	2016	General	BCM(Body Control Module)	Read Fault Code	
i20(GB)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
i20(GB)	2016	General	BCM(Body Control Module)	Read Data Stream	
i20(GB)	2016	General	BCM(Body Control Module)	Actuation Test	
i20(GB)	2016	General	BCM(Body Control Module)	Special Function	User Option
i20(GB)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i20(GB)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i20(GB)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(GB)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(GB)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(GB)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(GB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(GB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(GB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(GB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(GB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i20(GB)	2016	General	EPS(Electronic Power Steering)	Version Information	
i20(GB)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(GB)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(GB)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(GB)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i20(GB)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(GB)	2016	General	Smart Key Unit	Version Information	
i20(GB)	2016	General	Smart Key Unit	Read Fault Code	
i20(GB)	2016	General	Smart Key Unit	Clear Fault Memory	
i20(GB)	2016	General	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
i20(GB)	2016	General	Smart Key Unit	Actuation Test	
i20(GB)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
i20(GB)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
i20(GB)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
i20(GB)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
i20(GB)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(GB)	2016	General	Smart Key Unit	Special Function	SMK Status Information
i20(GB)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(GB)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
i20(GB)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(GB)	2016	General	Lane Departure Warning System	Version Information	
i20(GB)	2016	General	Lane Departure Warning System	Read Fault Code	
i20(GB)	2016	General	Lane Departure Warning System	Clear Fault Memory	
i20(GB)	2016	General	Lane Departure Warning System	Read Data Stream	
i20(GB)	2016	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
i20(GB)	2016	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
i20(GB)	2016	General	Parking Guide	Version Information	
i20(GB)	2016	General	Parking Guide	Read Fault Code	
i20(GB)	2016	General	Parking Guide	Clear Fault Memory	
i20(GB)	2016	General	Parking Guide	Read Data Stream	
i20(GB)	2016	General	IMM(Immobilizer)	Read Data Stream	
i20(GB)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(GB)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(GB)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(GB)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(GB)	2016	General	IMM(Immobilizer)	Special Function	Teaching
i20(GB)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
i20(GB)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LEU/Cleaning
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i20(GB)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(GB)	2016	General	TCM(Transmission Control Module)	Version Information	
i20(GB)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
i20(GB)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(GB)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
i20(GB)	2016	General	TCM(Transmission Control Module)	Actuation Test	
i20(GB)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(GB)	2015	General	ECM(Engine Control Module)	Version Information	
i20(GB)	2015	General	ECM(Engine Control Module)	Read Fault Code	
i20(GB)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(GB)	2015	General	ECM(Engine Control Module)	Read Data Stream	
i20(GB)	2015	General	ECM(Engine Control Module)	Actuation Test	
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(GB)	2015	General	TCM(Transmission Control Module)	Version Information	
i20(GB)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
i20(GB)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(GB)	2015	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
i20(GB)	2015	General	TCM(Transmission Control Module)	Actuation Test	
i20(GB)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(GB)	2015	General	ABS(Anti-lock Braking System)	Version Information	
i20(GB)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(GB)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(GB)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
i20(GB)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(GB)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(GB)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(GB)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i20(GB)	2015	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(GB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(GB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(GB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(GB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(GB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
i20(GB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i20(GB)	2015	General	AC(Air Conditioning)	Version Information	
i20(GB)	2015	General	AC(Air Conditioning)	Read Fault Code	
i20(GB)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
i20(GB)	2015	General	AC(Air Conditioning)	Read Data Stream	
i20(GB)	2015	General	AC(Air Conditioning)	Actuation Test	
i20(GB)	2015	General	BCM(Body Control Module)	Version Information	
i20(GB)	2015	General	BCM(Body Control Module)	Read Fault Code	
i20(GB)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
i20(GB)	2015	General	BCM(Body Control Module)	Read Data Stream	
i20(GB)	2015	General	BCM(Body Control Module)	Actuation Test	
i20(GB)	2015	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
i20(GB)	2015	General	EPS(Electronic Power Steering)	Version Information	
i20(GB)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(GB)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(GB)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(GB)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i20(GB)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(GB)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(GB)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(GB)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(GB)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(GB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(GB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(GB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(GB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(GB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i20(GB)	2015	General	IMM(Immobilizer)	Read Data Stream	
i20(GB)	2015	General	IMM(Immobilizer)	Special Function	Password
i20(GB)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Changing
i20(GB)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(GB)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(GB)	2015	General	IMM(Immobilizer)	Special Function	Teaching
i20(GB)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(GB)	2015	General	Smart Key Unit	Version Information	
i20(GB)	2015	General	Smart Key Unit	Read Fault Code	
i20(GB)	2015	General	Smart Key Unit	Clear Fault Memory	
i20(GB)	2015	General	Smart Key Unit	Read Data Stream	
i20(GB)	2015	General	Smart Key Unit	Actuation Test	
i20(GB)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
i20(GB)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
i20(GB)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
i20(GB)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
i20(GB)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(GB)	2015	General	Smart Key Unit	Special Function	SMK Status Information
i20(GB)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(GB)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
i20(GB)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(GB)	2015	General	Cluster Module	Version Information	
i20(GB)	2015	General	Cluster Module	Read Fault Code	
i20(GB)	2015	General	Cluster Module	Clear Fault Memory	
i20(GB)	2015	General	Cluster Module	Read Data Stream	
i20(GB)	2015	General	Cluster Module	Actuation Test	
i20(GB)	2015	General	Cluster Module	Special Function	CLU Variant Coding
i20(GB)	2015	General	Cluster Module	Special Function	Service Reminder Setting
i20(GB)	2015	General	Lane Departure Warning System	Version Information	
i20(GB)	2015	General	Lane Departure Warning System	Read Fault Code	
i20(GB)	2015	General	Lane Departure Warning System	Clear Fault Memory	
i20(GB)	2015	General	Lane Departure Warning System	Read Data Stream	
i20(GB)	2015	General	Lane Departure Warning System	Special Function	LDWS Region Code
i20(GB)	2015	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
i20(GB)	2015	General	Parking Guide System	Version Information	
i20(GB)	2015	General	Parking Guide System	Read Fault Code	
i20(GB)	2015	General	Parking Guide System	Clear Fault Memory	
i20(GB)	2015	General	Parking Guide System	Read Data Stream	
i20(GB)	2015	General	Smart Junction Block	Version Information	
i20(GB)	2015	General	Smart Junction Block	Read Fault Code	
i20(GB)	2015	General	Smart Junction Block	Clear Fault Memory	
i20(GB)	2015	General	Smart Junction Block	Read Data Stream	
i20(GB)	2015	General	Smart Junction Block	Actuation Test	
i20(GB)	2015	General	Smart Junction Block	Special Function	User Option

model	year	area	system	function	subfunction
i20(GB)	2015	General	Transmitter Code Saving	Read Data Stream	
i20(GB)	2015	General	Transmitter Code Saving	Special Function	Code Saving
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i20(GB)	2015	General	Cluster Module	Special Function	User Option
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	ECU Learning Value
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(GB)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(GB)	2014	General	ECM(Engine Control Module)	Version Information	
i20(GB)	2014	General	ECM(Engine Control Module)	Read Fault Code	
i20(GB)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(GB)	2014	General	ECM(Engine Control Module)	Read Data Stream	
i20(GB)	2014	General	ECM(Engine Control Module)	Actuation Test	
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(GB)	2014	General	TCM(Transmission Control Module)	Version Information	
i20(GB)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
i20(GB)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(GB)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
i20(GB)	2014	General	TCM(Transmission Control Module)	Actuation Test	
i20(GB)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(GB)	2014	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
i20(GB)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(GB)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(GB)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
i20(GB)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(GB)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(GB)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(GB)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i20(GB)	2014	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(GB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(GB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(GB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(GB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(GB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
i20(GB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i20(GB)	2014	General	AC(Air Conditioning)	Version Information	
i20(GB)	2014	General	AC(Air Conditioning)	Read Fault Code	
i20(GB)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
i20(GB)	2014	General	AC(Air Conditioning)	Read Data Stream	
i20(GB)	2014	General	AC(Air Conditioning)	Actuation Test	
i20(GB)	2014	General	BCM(Body Control Module)	Version Information	
i20(GB)	2014	General	BCM(Body Control Module)	Read Fault Code	
i20(GB)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
i20(GB)	2014	General	BCM(Body Control Module)	Read Data Stream	
i20(GB)	2014	General	BCM(Body Control Module)	Actuation Test	
i20(GB)	2014	General	BCM(Body Control Module)	Special Function	User Option
i20(GB)	2014	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i20(GB)	2014	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i20(GB)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
i20(GB)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(GB)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(GB)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(GB)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(GB)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(GB)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(GB)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(GB)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i20(GB)	2014	General	EPS(Electronic Power Steering)	Version Information	
i20(GB)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(GB)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(GB)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(GB)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i20(GB)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(GB)	2014	General	Smart Key Unit	Version Information	
i20(GB)	2014	General	Smart Key Unit	Read Fault Code	
i20(GB)	2014	General	Smart Key Unit	Clear Fault Memory	
i20(GB)	2014	General	Smart Key Unit	Read Data Stream	
i20(GB)	2014	General	Smart Key Unit	Actuation Test	
i20(GB)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
i20(GB)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
i20(GB)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
i20(GB)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
i20(GB)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(GB)	2014	General	Smart Key Unit	Special Function	SMK Status Information
i20(GB)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(GB)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
i20(GB)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(GB)	2014	General	Lane Departure Warning System	Version Information	

model	year	area	system	function	subfunction
i20(GB)	2014	General	Lane Departure Warning System	Read Fault Code	
i20(GB)	2014	General	Lane Departure Warning System	Clear Fault Memory	
i20(GB)	2014	General	Lane Departure Warning System	Read Data Stream	
i20(GB)	2014	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
i20(GB)	2014	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
i20(GB)	2014	General	Parking Guide System	Version Information	
i20(GB)	2014	General	Parking Guide System	Read Fault Code	
i20(GB)	2014	General	Parking Guide System	Clear Fault Memory	
i20(GB)	2014	General	Parking Guide System	Read Data Stream	
i20(GB)	2014	General	IMM(Immobilizer)	Read Data Stream	
i20(GB)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(GB)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(GB)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(GB)	2014	General	IMM(Immobilizer)	Special Function	Teaching
i20(GB)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(GB)	2014	General	CODE(Transmitter Code Saving)	Read Data Stream	
i20(GB)	2014	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	ECU Learning Value
i20(GB)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(IB)	2019	General	ECM(Engine Control Module)	Version Information	
i20(IB)	2019	General	ECM(Engine Control Module)	Read Fault Code	
i20(IB)	2019	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(IB)	2019	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
i20(IB)	2019	General	ECM(Engine Control Module)	Actuation Test	
i20(IB)	2019	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(IB)	2019	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(IB)	2019	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(IB)	2019	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(IB)	2019	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(IB)	2019	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(IB)	2019	General	TCM(Transmission Control Module)	Version Information	
i20(IB)	2019	General	TCM(Transmission Control Module)	Read Fault Code	
i20(IB)	2019	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(IB)	2019	General	TCM(Transmission Control Module)	Read Data Stream	
i20(IB)	2019	General	TCM(Transmission Control Module)	Actuation Test	
i20(IB)	2019	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(IB)	2019	General	ABS(Anti-lock Braking System)	Version Information	
i20(IB)	2019	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(IB)	2019	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(IB)	2019	General	ABS(Anti-lock Braking System)	Read Data Stream	
i20(IB)	2019	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(IB)	2019	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(IB)	2019	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(IB)	2019	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i20(IB)	2019	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(IB)	2019	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(IB)	2019	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(IB)	2019	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(IB)	2019	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(IB)	2019	General	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
i20(IB)	2019	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
i20(IB)	2019	General	AC(Air Conditioning)	Version Information	
i20(IB)	2019	General	AC(Air Conditioning)	Read Fault Code	
i20(IB)	2019	General	AC(Air Conditioning)	Clear Fault Memory	
i20(IB)	2019	General	AC(Air Conditioning)	Read Data Stream	
i20(IB)	2019	General	AC(Air Conditioning)	Actuation Test	
i20(IB)	2019	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i20(IB)	2019	General	BCM(Body Control Module)	Version Information	
i20(IB)	2019	General	BCM(Body Control Module)	Read Fault Code	
i20(IB)	2019	General	BCM(Body Control Module)	Clear Fault Memory	
i20(IB)	2019	General	BCM(Body Control Module)	Read Data Stream	
i20(IB)	2019	General	BCM(Body Control Module)	Actuation Test	
i20(IB)	2019	General	BCM(Body Control Module)	Special Function	User Option
i20(IB)	2019	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i20(IB)	2019	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i20(IB)	2019	General	EPS(Electronic Power Steering)	Version Information	
i20(IB)	2019	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(IB)	2019	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(IB)	2019	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(IB)	2019	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i20(IB)	2019	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(IB)	2019	General	Smart Key Unit	Version Information	
i20(IB)	2019	General	Smart Key Unit	Read Fault Code	
i20(IB)	2019	General	Smart Key Unit	Clear Fault Memory	
i20(IB)	2019	General	Smart Key Unit	Read Data Stream	
i20(IB)	2019	General	Smart Key Unit	Actuation Test	
i20(IB)	2019	General	Smart Key Unit	Special Function	Smart Key Code Saving
i20(IB)	2019	General	Smart Key Unit	Special Function	Antenna Status Check
i20(IB)	2019	General	Smart Key Unit	Special Function	Current FOB Key Check
i20(IB)	2019	General	Smart Key Unit	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
i20(IB)	2019	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(IB)	2019	General	Smart Key Unit	Special Function	SMK Status Information
i20(IB)	2019	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(IB)	2019	General	Smart Key Unit	Special Function	Neutralization Mode
i20(IB)	2019	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(IB)	2019	General	Parking Guide System	Version Information	
i20(IB)	2019	General	Parking Guide System	Read Fault Code	
i20(IB)	2019	General	Parking Guide System	Clear Fault Memory	
i20(IB)	2019	General	Parking Guide System	Read Data Stream	
i20(IB)	2019	General	IMM(Immobilizer)	Read Data Stream	
i20(IB)	2019	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(IB)	2019	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(IB)	2019	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(IB)	2019	General	IMM(Immobilizer)	Special Function	Teaching
i20(IB)	2019	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(IB)	2019	General	CODE(Transmitter Code Saving)	Read Data Stream	
i20(IB)	2019	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i20(IB)	2019	General	TCM(Transmission Control Module)	Read FreezeData	
i20(IB)	2019	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU)
i20(IB)	2019	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
i20(IB)	2019	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(IB)	2019	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(IB)	2019	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(IB)	2019	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(IB)	2019	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i20(IB)	2018	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
i20(IB)	2018	General	ECM(Engine Control Module)	Read Fault Code	
i20(IB)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(IB)	2018	General	ECM(Engine Control Module)	Read Data Stream	
i20(IB)	2018	General	ECM(Engine Control Module)	Actuation Test	
i20(IB)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(IB)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(IB)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(IB)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(IB)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(IB)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(IB)	2018	General	TCM(Transmission Control Module)	Version Information	
i20(IB)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
i20(IB)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(IB)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
i20(IB)	2018	General	TCM(Transmission Control Module)	Actuation Test	
i20(IB)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(IB)	2018	General	ABS(Anti-lock Braking System)	Version Information	
i20(IB)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(IB)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(IB)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
i20(IB)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(IB)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(IB)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(IB)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i20(IB)	2018	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(IB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(IB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(IB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
i20(IB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(IB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
i20(IB)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i20(IB)	2018	General	AC(Air Conditioning)	Version Information	
i20(IB)	2018	General	AC(Air Conditioning)	Read Fault Code	
i20(IB)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
i20(IB)	2018	General	AC(Air Conditioning)	Read Data Stream	
i20(IB)	2018	General	AC(Air Conditioning)	Actuation Test	
i20(IB)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
i20(IB)	2018	General	BCM(Body Control Module)	Version Information	
i20(IB)	2018	General	BCM(Body Control Module)	Read Fault Code	
i20(IB)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
i20(IB)	2018	General	BCM(Body Control Module)	Read Data Stream	
i20(IB)	2018	General	BCM(Body Control Module)	Actuation Test	
i20(IB)	2018	General	BCM(Body Control Module)	Special Function	User Option
i20(IB)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i20(IB)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i20(IB)	2018	General	EPS(Electronic Power Steering)	Version Information	
i20(IB)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(IB)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(IB)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(IB)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i20(IB)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(IB)	2018	General	Smart Key Unit	Version Information	
i20(IB)	2018	General	Smart Key Unit	Read Fault Code	
i20(IB)	2018	General	Smart Key Unit	Clear Fault Memory	
i20(IB)	2018	General	Smart Key Unit	Read Data Stream	
i20(IB)	2018	General	Smart Key Unit	Actuation Test	
i20(IB)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
i20(IB)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
i20(IB)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
i20(IB)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
i20(IB)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(IB)	2018	General	Smart Key Unit	Special Function	SMK Status Information
i20(IB)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(IB)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
i20(IB)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(IB)	2018	General	Parking Guide System	Version Information	
i20(IB)	2018	General	Parking Guide System	Read Fault Code	
i20(IB)	2018	General	Parking Guide System	Clear Fault Memory	
i20(IB)	2018	General	Parking Guide System	Read Data Stream	
i20(IB)	2018	General	IMM(Immobilizer)	Read Data Stream	
i20(IB)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(IB)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(IB)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(IB)	2018	General	IMM(Immobilizer)	Special Function	Teaching
i20(IB)	2018	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(IB)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
i20(IB)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i20(IB)	2018	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(IB)	2018	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(IB)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(IB)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(IB)	2018	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i20(IB)	2017	General	ECM(Engine Control Module)	Version Information	
i20(IB)	2017	General	ECM(Engine Control Module)	Read Fault Code	
i20(IB)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
i20(IB)	2017	General	ECM(Engine Control Module)	Read Data Stream	
i20(IB)	2017	General	ECM(Engine Control Module)	Actuation Test	
i20(IB)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(IB)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(IB)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(IB)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(IB)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(IB)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(IB)	2017	General	TCM(Transmission Control Module)	Version Information	
i20(IB)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
i20(IB)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(IB)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
i20(IB)	2017	General	TCM(Transmission Control Module)	Actuation Test	
i20(IB)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(IB)	2017	General	ABS(Anti-lock Braking System)	Version Information	
i20(IB)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(IB)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(IB)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
i20(IB)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(IB)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(IB)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(IB)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i20(IB)	2017	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(IB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(IB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(IB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(IB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(IB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Actuation Test	

model	year	area	system	function	subfunction
i20(IB)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i20(IB)	2017	General	AC(Air Conditioning)	Version Information	
i20(IB)	2017	General	AC(Air Conditioning)	Read Fault Code	
i20(IB)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
i20(IB)	2017	General	AC(Air Conditioning)	Read Data Stream	
i20(IB)	2017	General	AC(Air Conditioning)	Actuation Test	
i20(IB)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
i20(IB)	2017	General	BCM(Body Control Module)	Version Information	
i20(IB)	2017	General	BCM(Body Control Module)	Read Fault Code	
i20(IB)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
i20(IB)	2017	General	BCM(Body Control Module)	Read Data Stream	
i20(IB)	2017	General	BCM(Body Control Module)	Actuation Test	
i20(IB)	2017	General	BCM(Body Control Module)	Special Function	User Option
i20(IB)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i20(IB)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i20(IB)	2017	General	EPS(Electronic Power Steering)	Version Information	
i20(IB)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(IB)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(IB)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(IB)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i20(IB)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(IB)	2017	General	Smart Key Unit	Version Information	
i20(IB)	2017	General	Smart Key Unit	Read Fault Code	
i20(IB)	2017	General	Smart Key Unit	Clear Fault Memory	
i20(IB)	2017	General	Smart Key Unit	Read Data Stream	
i20(IB)	2017	General	Smart Key Unit	Actuation Test	
i20(IB)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
i20(IB)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
i20(IB)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
i20(IB)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
i20(IB)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(IB)	2017	General	Smart Key Unit	Special Function	SMK Status Information
i20(IB)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(IB)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
i20(IB)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(IB)	2017	General	Parking Guide System	Version Information	
i20(IB)	2017	General	Parking Guide System	Read Fault Code	
i20(IB)	2017	General	Parking Guide System	Clear Fault Memory	
i20(IB)	2017	General	Parking Guide System	Read Data Stream	
i20(IB)	2017	General	IMM(Immobilizer)	Read Data Stream	
i20(IB)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(IB)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(IB)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(IB)	2017	General	IMM(Immobilizer)	Special Function	Teaching
i20(IB)	2017	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(IB)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
i20(IB)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i20(IB)	2017	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(IB)	2017	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(IB)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(IB)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(IB)	2017	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i20(IB)	2016	General	ECM(Engine Control Module)	Version Information	
i20(IB)	2016	General	ECM(Engine Control Module)	Read Fault Code	
i20(IB)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(IB)	2016	General	ECM(Engine Control Module)	Read Data Stream	
i20(IB)	2016	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
i20(IB)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(IB)	2016	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(IB)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(IB)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(IB)	2016	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i20(IB)	2016	General	ABS(Anti-lock Braking System)	Version Information	
i20(IB)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(IB)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(IB)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
i20(IB)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(IB)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(IB)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(IB)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i20(IB)	2016	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(IB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(IB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(IB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(IB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(IB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i20(IB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
i20(IB)	2016	General	AC(Air Conditioning)	Version Information	
i20(IB)	2016	General	AC(Air Conditioning)	Read Fault Code	
i20(IB)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
i20(IB)	2016	General	AC(Air Conditioning)	Read Data Stream	
i20(IB)	2016	General	AC(Air Conditioning)	Actuation Test	
i20(IB)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i20(IB)	2016	General	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
i20(IB)	2016	General	BCM(Body Control Module)	Read Fault Code	
i20(IB)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
i20(IB)	2016	General	BCM(Body Control Module)	Read Data Stream	
i20(IB)	2016	General	BCM(Body Control Module)	Actuation Test	
i20(IB)	2016	General	BCM(Body Control Module)	Special Function	User Option
i20(IB)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i20(IB)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i20(IB)	2016	General	EPS(Electronic Power Steering)	Version Information	
i20(IB)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(IB)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(IB)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(IB)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i20(IB)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(IB)	2016	General	Smart Key Unit	Version Information	
i20(IB)	2016	General	Smart Key Unit	Read Fault Code	
i20(IB)	2016	General	Smart Key Unit	Clear Fault Memory	
i20(IB)	2016	General	Smart Key Unit	Read Data Stream	
i20(IB)	2016	General	Smart Key Unit	Actuation Test	
i20(IB)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
i20(IB)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
i20(IB)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
i20(IB)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
i20(IB)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(IB)	2016	General	Smart Key Unit	Special Function	SMK Status Information
i20(IB)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(IB)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
i20(IB)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(IB)	2016	General	Parking Guide	Version Information	
i20(IB)	2016	General	Parking Guide	Read Fault Code	

model	year	area	system	function	subfunction
i20(IB)	2016	General	Parking Guide	Clear Fault Memory	
i20(IB)	2016	General	Parking Guide	Read Data Stream	
i20(IB)	2016	General	IMM(Immobilizer)	Read Data Stream	
i20(IB)	2016	General	IMM(Immobilizer)	Special Function	Password
i20(IB)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
i20(IB)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(IB)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(IB)	2016	General	IMM(Immobilizer)	Special Function	Teaching
i20(IB)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(IB)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
i20(IB)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i20(IB)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(IB)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(IB)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(IB)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(IB)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(IB)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(IB)	2016	General	TCM(Transmission Control Module)	Version Information	
i20(IB)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
i20(IB)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(IB)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
i20(IB)	2016	General	TCM(Transmission Control Module)	Actuation Test	
i20(IB)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(IB)	2015	General	ECM(Engine Control Module)	Version Information	
i20(IB)	2015	General	ECM(Engine Control Module)	Read Fault Code	
i20(IB)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(IB)	2015	General	ECM(Engine Control Module)	Read Data Stream	
i20(IB)	2015	General	ECM(Engine Control Module)	Actuation Test	
i20(IB)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(IB)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
i20(IB)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(IB)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(IB)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(IB)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(IB)	2015	General	TCM(Transmission Control Module)	Version Information	
i20(IB)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
i20(IB)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(IB)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
i20(IB)	2015	General	TCM(Transmission Control Module)	Actuation Test	
i20(IB)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(IB)	2015	General	ABS(Anti-lock Braking System)	Version Information	
i20(IB)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(IB)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(IB)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
i20(IB)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(IB)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(IB)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(IB)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i20(IB)	2015	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(IB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(IB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(IB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(IB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(IB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
i20(IB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i20(IB)	2015	General	AC(Air Conditioning)	Version Information	
i20(IB)	2015	General	AC(Air Conditioning)	Read Fault Code	
i20(IB)	2015	General	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
i20(IB)	2015	General	AC(Air Conditioning)	Read Data Stream	
i20(IB)	2015	General	AC(Air Conditioning)	Actuation Test	
i20(IB)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i20(IB)	2015	General	BCM(Body Control Module)	Version Information	
i20(IB)	2015	General	BCM(Body Control Module)	Read Fault Code	
i20(IB)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
i20(IB)	2015	General	BCM(Body Control Module)	Read Data Stream	
i20(IB)	2015	General	BCM(Body Control Module)	Actuation Test	
i20(IB)	2015	General	BCM(Body Control Module)	Special Function	User Option
i20(IB)	2015	General	EPS(Electronic Power Steering)	Version Information	
i20(IB)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(IB)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(IB)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(IB)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i20(IB)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(IB)	2015	General	IMM(Immobilizer)	Read Data Stream	
i20(IB)	2015	General	IMM(Immobilizer)	Special Function	Password
i20(IB)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Changing
i20(IB)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(IB)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(IB)	2015	General	IMM(Immobilizer)	Special Function	Teaching
i20(IB)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(IB)	2015	General	Smart Key Unit	Version Information	
i20(IB)	2015	General	Smart Key Unit	Read Fault Code	
i20(IB)	2015	General	Smart Key Unit	Clear Fault Memory	
i20(IB)	2015	General	Smart Key Unit	Read Data Stream	
i20(IB)	2015	General	Smart Key Unit	Actuation Test	
i20(IB)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
i20(IB)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
i20(IB)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
i20(IB)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
i20(IB)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(IB)	2015	General	Smart Key Unit	Special Function	SMK Status Information
i20(IB)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(IB)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
i20(IB)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(IB)	2015	General	Cluster Module	Version Information	
i20(IB)	2015	General	Cluster Module	Read Fault Code	
i20(IB)	2015	General	Cluster Module	Clear Fault Memory	
i20(IB)	2015	General	Cluster Module	Read Data Stream	
i20(IB)	2015	General	Cluster Module	Actuation Test	
i20(IB)	2015	General	Cluster Module	Special Function	CLU Variant Coding
i20(IB)	2015	General	Cluster Module	Special Function	Service Reminder Setting
i20(IB)	2015	General	Transmitter Code Saving	Read Data Stream	
i20(IB)	2015	General	Transmitter Code Saving	Special Function	Code Saving
i20(IB)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(IB)	2015	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(IB)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(IB)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(IB)	2015	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i20(IB)	2014	General	ECM(Engine Control Module)	Version Information	
i20(IB)	2014	General	ECM(Engine Control Module)	Read Fault Code	
i20(IB)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(IB)	2014	General	ECM(Engine Control Module)	Read Data Stream	
i20(IB)	2014	General	ECM(Engine Control Module)	Actuation Test	
i20(IB)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(IB)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(IB)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
i20(IB)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(IB)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(IB)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(IB)	2014	General	TCM(Transmission Control Module)	Version Information	
i20(IB)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
i20(IB)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(IB)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
i20(IB)	2014	General	TCM(Transmission Control Module)	Actuation Test	
i20(IB)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(IB)	2014	General	ABS(Anti-lock Braking System)	Version Information	
i20(IB)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(IB)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(IB)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
i20(IB)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(IB)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(IB)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(IB)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i20(IB)	2014	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(IB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(IB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(IB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(IB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(IB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
i20(IB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
i20(IB)	2014	General	AC(Air Conditioning)	Version Information	
i20(IB)	2014	General	AC(Air Conditioning)	Read Fault Code	
i20(IB)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
i20(IB)	2014	General	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
i20(IB)	2014	General	AC(Air Conditioning)	Actuation Test	
i20(IB)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i20(IB)	2014	General	BCM(Body Control Module)	Version Information	
i20(IB)	2014	General	BCM(Body Control Module)	Read Fault Code	
i20(IB)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
i20(IB)	2014	General	BCM(Body Control Module)	Read Data Stream	
i20(IB)	2014	General	BCM(Body Control Module)	Actuation Test	
i20(IB)	2014	General	BCM(Body Control Module)	Special Function	User Option
i20(IB)	2014	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i20(IB)	2014	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i20(IB)	2014	General	EPS(Electronic Power Steering)	Version Information	
i20(IB)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(IB)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(IB)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(IB)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i20(IB)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(IB)	2014	General	Smart Key Unit	Version Information	
i20(IB)	2014	General	Smart Key Unit	Read Fault Code	
i20(IB)	2014	General	Smart Key Unit	Clear Fault Memory	
i20(IB)	2014	General	Smart Key Unit	Read Data Stream	
i20(IB)	2014	General	Smart Key Unit	Actuation Test	
i20(IB)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
i20(IB)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
i20(IB)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
i20(IB)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
i20(IB)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(IB)	2014	General	Smart Key Unit	Special Function	SMK Status Information
i20(IB)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(IB)	2014	General	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
i20(IB)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(IB)	2014	General	IMM(Immobilizer)	Read Data Stream	
i20(IB)	2014	General	IMM(Immobilizer)	Special Function	Password
i20(IB)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
i20(IB)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(IB)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(IB)	2014	General	IMM(Immobilizer)	Special Function	Teaching
i20(IB)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(IB)	2014	General	CODE(Transmitter Code Saving)	Read Data Stream	
i20(IB)	2014	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i20(IB)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(IB)	2014	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(IB)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(IB)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(IB)	2014	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i20(PB)	2016	General	ECM(Engine Control Module)	Version Information	
i20(PB)	2016	General	ECM(Engine Control Module)	Read Fault Code	
i20(PB)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(PB)	2016	General	ECM(Engine Control Module)	Read Data Stream	
i20(PB)	2016	General	ECM(Engine Control Module)	Actuation Test	
i20(PB)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(PB)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(PB)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(PB)	2016	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i20(PB)	2016	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(PB)	2016	General	ABS(Anti-lock Braking System)	Version Information	
i20(PB)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
i20(PB)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i20(PB)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
i20(PB)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
i20(PB)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i20(PB)	2016	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i20(PB)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i20(PB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(PB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(PB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(PB)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(PB)	2016	General	AC(Air Conditioning)	Version Information	
i20(PB)	2016	General	AC(Air Conditioning)	Read Fault Code	
i20(PB)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
i20(PB)	2016	General	AC(Air Conditioning)	Read Data Stream	
i20(PB)	2016	General	AC(Air Conditioning)	Actuation Test	
i20(PB)	2016	General	BCM(Body Control Module)	Version Information	
i20(PB)	2016	General	BCM(Body Control Module)	Read Fault Code	
i20(PB)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
i20(PB)	2016	General	BCM(Body Control Module)	Read Data Stream	
i20(PB)	2016	General	BCM(Body Control Module)	Actuation Test	
i20(PB)	2016	General	BCM(Body Control Module)	Special Function	User Option
i20(PB)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(PB)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(PB)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(PB)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(PB)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i20(PB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(PB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(PB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(PB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(PB)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST

model	year	area	system	function	subfunction
i20(PB)	2016	General	EPS(Electronic Power Steering)	Version Information	
i20(PB)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(PB)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(PB)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(PB)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(PB)	2016	General	Smart Key Unit	Version Information	
i20(PB)	2016	General	Smart Key Unit	Read Fault Code	
i20(PB)	2016	General	Smart Key Unit	Clear Fault Memory	
i20(PB)	2016	General	Smart Key Unit	Read Data Stream	
i20(PB)	2016	General	Smart Key Unit	Actuation Test	
i20(PB)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
i20(PB)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
i20(PB)	2016	General	Smart Key Unit	Special Function	SMK Status Information
i20(PB)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
i20(PB)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
i20(PB)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
i20(PB)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
i20(PB)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
i20(PB)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
i20(PB)	2016	General	IMM(Immobilizer)	Read Data Stream	
i20(PB)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(PB)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(PB)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(PB)	2016	General	IMM(Immobilizer)	Special Function	Teaching
i20(PB)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(PB)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
i20(PB)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i20(PB)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(PB)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
i20(PB)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(PB)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(PB)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(PB)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(PB)	2016	General	TCM(Transmission Control Module)	Version Information	
i20(PB)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
i20(PB)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(PB)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
i20(PB)	2016	General	TCM(Transmission Control Module)	Actuation Test	
i20(PB)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(PB)	2015	General	ECM(Engine Control Module)	Version Information	
i20(PB)	2015	General	ECM(Engine Control Module)	Read Fault Code	
i20(PB)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(PB)	2015	General	ECM(Engine Control Module)	Read Data Stream	
i20(PB)	2015	General	ECM(Engine Control Module)	Actuation Test	
i20(PB)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(PB)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(PB)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(PB)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(PB)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(PB)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(PB)	2015	General	TCM(Transmission Control Module)	Version Information	
i20(PB)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
i20(PB)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(PB)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
i20(PB)	2015	General	TCM(Transmission Control Module)	Actuation Test	
i20(PB)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(PB)	2015	General	ESP(Electronic Stability Program)	Version Information	
i20(PB)	2015	General	ESP(Electronic Stability Program)	Read Fault Code	

model	year	area	system	function	subfunction
i20(PB)	2015	General	ESP(Electronic Stability Program)	Clear Fault Memory	
i20(PB)	2015	General	ESP(Electronic Stability Program)	Read Data Stream	
i20(PB)	2015	General	ESP(Electronic Stability Program)	Actuation Test	
i20(PB)	2015	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
i20(PB)	2015	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
i20(PB)	2015	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
i20(PB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(PB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(PB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(PB)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(PB)	2015	General	AC(Air Conditioning)	Version Information	
i20(PB)	2015	General	AC(Air Conditioning)	Read Fault Code	
i20(PB)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
i20(PB)	2015	General	AC(Air Conditioning)	Read Data Stream	
i20(PB)	2015	General	AC(Air Conditioning)	Actuation Test	
i20(PB)	2015	General	BCM(Body Control Module)	Version Information	
i20(PB)	2015	General	BCM(Body Control Module)	Read Fault Code	
i20(PB)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
i20(PB)	2015	General	BCM(Body Control Module)	Read Data Stream	
i20(PB)	2015	General	BCM(Body Control Module)	Actuation Test	
i20(PB)	2015	General	BCM(Body Control Module)	Special Function	User Option
i20(PB)	2015	General	EPS(Electronic Power Steering)	Version Information	
i20(PB)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(PB)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(PB)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(PB)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(PB)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(PB)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(PB)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
i20(PB)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(PB)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i20(PB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(PB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(PB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(PB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(PB)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i20(PB)	2015	General	IMM(Immobilizer)	Read Data Stream	
i20(PB)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(PB)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(PB)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(PB)	2015	General	IMM(Immobilizer)	Special Function	Teaching
i20(PB)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(PB)	2015	General	Smart Key	Version Information	
i20(PB)	2015	General	Smart Key	Read Fault Code	
i20(PB)	2015	General	Smart Key	Clear Fault Memory	
i20(PB)	2015	General	Smart Key	Read Data Stream	
i20(PB)	2015	General	Smart Key	Actuation Test	
i20(PB)	2015	General	Smart Key	Special Function	Smart Key Code Saving
i20(PB)	2015	General	Smart Key	Special Function	Neutralization Mode
i20(PB)	2015	General	Smart Key	Special Function	SMK Status Information
i20(PB)	2015	General	Smart Key	Special Function	ESCL Status Information
i20(PB)	2015	General	Smart Key	Special Function	FOB Key Status Information
i20(PB)	2015	General	Smart Key	Special Function	Current FOB Key Check
i20(PB)	2015	General	Smart Key	Special Function	Serial Communication Line Check
i20(PB)	2015	General	Smart Key	Special Function	Antenna Status Check
i20(PB)	2015	General	Smart Key	Special Function	ESCL Open Status Check
i20(PB)	2015	General	Transmitter Code Saving	Read Data Stream	
i20(PB)	2015	General	Transmitter Code Saving	Special Function	Code Saving

model	year	area	system	function	subfunction
i20(PB)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(PB)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(PB)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(PB)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i20(PB)	2015	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(PB)	2014	General	ECM(Engine Control Module)	Version Information	
i20(PB)	2014	General	ECM(Engine Control Module)	Read Fault Code	
i20(PB)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(PB)	2014	General	ECM(Engine Control Module)	Read Data Stream	
i20(PB)	2014	General	ECM(Engine Control Module)	Actuation Test	
i20(PB)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(PB)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(PB)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(PB)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(PB)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(PB)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(PB)	2014	General	TCM(Transmission Control Module)	Version Information	
i20(PB)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
i20(PB)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(PB)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
i20(PB)	2014	General	TCM(Transmission Control Module)	Actuation Test	
i20(PB)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(PB)	2014	General	ESP(Electronic Stability Program)	Version Information	
i20(PB)	2014	General	ESP(Electronic Stability Program)	Read Fault Code	
i20(PB)	2014	General	ESP(Electronic Stability Program)	Clear Fault Memory	
i20(PB)	2014	General	ESP(Electronic Stability Program)	Read Data Stream	
i20(PB)	2014	General	ESP(Electronic Stability Program)	Actuation Test	
i20(PB)	2014	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
i20(PB)	2014	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning

model	year	area	system	function	subfunction
i20(PB)	2014	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
i20(PB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(PB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(PB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(PB)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(PB)	2014	General	AC(Air Conditioning)	Version Information	
i20(PB)	2014	General	AC(Air Conditioning)	Read Fault Code	
i20(PB)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
i20(PB)	2014	General	AC(Air Conditioning)	Read Data Stream	
i20(PB)	2014	General	AC(Air Conditioning)	Actuation Test	
i20(PB)	2014	General	BCM(Body Control Module)	Version Information	
i20(PB)	2014	General	BCM(Body Control Module)	Read Fault Code	
i20(PB)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
i20(PB)	2014	General	BCM(Body Control Module)	Read Data Stream	
i20(PB)	2014	General	BCM(Body Control Module)	Actuation Test	
i20(PB)	2014	General	BCM(Body Control Module)	Special Function	User Option
i20(PB)	2014	General	EPS(Electronic Power Steering)	Version Information	
i20(PB)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(PB)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(PB)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(PB)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(PB)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(PB)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(PB)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(PB)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(PB)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i20(PB)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(PB)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(PB)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
i20(PB)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(PB)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i20(PB)	2014	General	IMM(Immobilizer)	Read Data Stream	
i20(PB)	2014	General	IMM(Immobilizer)	Special Function	Password
i20(PB)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Changing
i20(PB)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(PB)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(PB)	2014	General	IMM(Immobilizer)	Special Function	Teaching
i20(PB)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(PB)	2014	General	Smart Key	Version Information	
i20(PB)	2014	General	Smart Key	Read Fault Code	
i20(PB)	2014	General	Smart Key	Clear Fault Memory	
i20(PB)	2014	General	Smart Key	Read Data Stream	
i20(PB)	2014	General	Smart Key	Actuation Test	
i20(PB)	2014	General	Smart Key	Special Function	Smart Key Code Saving
i20(PB)	2014	General	Smart Key	Special Function	Neutralization Mode
i20(PB)	2014	General	Smart Key	Special Function	SMK Status Information
i20(PB)	2014	General	Smart Key	Special Function	ESCL Status Information
i20(PB)	2014	General	Smart Key	Special Function	FOB Key Status Information
i20(PB)	2014	General	Smart Key	Special Function	Current FOB Key Check
i20(PB)	2014	General	Smart Key	Special Function	Serial Communication Line Check
i20(PB)	2014	General	Smart Key	Special Function	Antenna Status Check
i20(PB)	2014	General	Smart Key	Special Function	ESCL Open Status Check
i20(PB)	2014	General	Transmitter Code Saving	Read Data Stream	
i20(PB)	2014	General	Transmitter Code Saving	Special Function	Code Saving
i20(PB)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(PB)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(PB)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(PB)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i20(PB)	2014	General	ECM(Engine Control Module)	Special Function	ECU Initialization

model	year	area	system	function	subfunction
i20(PB)	2013	General	ECM(Engine Control Module)	Version Information	
i20(PB)	2013	General	ECM(Engine Control Module)	Read Fault Code	
i20(PB)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(PB)	2013	General	ECM(Engine Control Module)	Read Data Stream	
i20(PB)	2013	General	ECM(Engine Control Module)	Actuation Test	
i20(PB)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(PB)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(PB)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(PB)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i20(PB)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i20(PB)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i20(PB)	2013	General	TCM(Transmission Control Module)	Version Information	
i20(PB)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
i20(PB)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(PB)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
i20(PB)	2013	General	TCM(Transmission Control Module)	Actuation Test	
i20(PB)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(PB)	2013	General	ESP(Electronic Stability Program)	Version Information	
i20(PB)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
i20(PB)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	
i20(PB)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
i20(PB)	2013	General	ESP(Electronic Stability Program)	Actuation Test	
i20(PB)	2013	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
i20(PB)	2013	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
i20(PB)	2013	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
i20(PB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(PB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(PB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(PB)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
i20(PB)	2013	General	AC(Air Conditioning)	Version Information	
i20(PB)	2013	General	AC(Air Conditioning)	Read Fault Code	
i20(PB)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
i20(PB)	2013	General	AC(Air Conditioning)	Read Data Stream	
i20(PB)	2013	General	AC(Air Conditioning)	Actuation Test	
i20(PB)	2013	General	BCM(Body Control Module)	Version Information	
i20(PB)	2013	General	BCM(Body Control Module)	Read Fault Code	
i20(PB)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
i20(PB)	2013	General	BCM(Body Control Module)	Read Data Stream	
i20(PB)	2013	General	BCM(Body Control Module)	Actuation Test	
i20(PB)	2013	General	BCM(Body Control Module)	Special Function	User Option
i20(PB)	2013	General	EPS(Electronic Power Steering)	Version Information	
i20(PB)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(PB)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(PB)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(PB)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i20(PB)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(PB)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(PB)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(PB)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(PB)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i20(PB)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(PB)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(PB)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(PB)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(PB)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i20(PB)	2013	General	IMM(Immobilizer)	Read Data Stream	
i20(PB)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(PB)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
i20(PB)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(PB)	2013	General	IMM(Immobilizer)	Special Function	Teaching
i20(PB)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(PB)	2013	General	Smart Key	Version Information	
i20(PB)	2013	General	Smart Key	Read Fault Code	
i20(PB)	2013	General	Smart Key	Clear Fault Memory	
i20(PB)	2013	General	Smart Key	Read Data Stream	
i20(PB)	2013	General	Smart Key	Actuation Test	
i20(PB)	2013	General	Smart Key	Special Function	Smart Key Code Saving
i20(PB)	2013	General	Smart Key	Special Function	Neutralization Mode
i20(PB)	2013	General	Smart Key	Special Function	SMK Status Information
i20(PB)	2013	General	Smart Key	Special Function	ESCL Status Information
i20(PB)	2013	General	Smart Key	Special Function	FOB Key Status Information
i20(PB)	2013	General	Smart Key	Special Function	Current FOB Key Check
i20(PB)	2013	General	Smart Key	Special Function	Serial Communication Line Check
i20(PB)	2013	General	Smart Key	Special Function	Antenna Status Check
i20(PB)	2013	General	Smart Key	Special Function	ESCL Open Status Check
i20(PB)	2013	General	Transmitter Code Saving	Read Data Stream	
i20(PB)	2013	General	Transmitter Code Saving	Special Function	Code Saving
i20(PB)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(PB)	2013	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(PB)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(PB)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i20(PB)	2013	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(PB)	2012	General	ECM(Engine Control Module)	Version Information	
i20(PB)	2012	General	ECM(Engine Control Module)	Read Fault Code	
i20(PB)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(PB)	2012	General	ECM(Engine Control Module)	Read Data Stream	
i20(PB)	2012	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	Ignition Test
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i20(PB)	2012	General	TCM(Transmission Control Module)	Version Information	
i20(PB)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
i20(PB)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(PB)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
i20(PB)	2012	General	TCM(Transmission Control Module)	Actuation Test	
i20(PB)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(PB)	2012	General	ESP(Electronic Stability Program)	Version Information	
i20(PB)	2012	General	ESP(Electronic Stability Program)	Read Fault Code	
i20(PB)	2012	General	ESP(Electronic Stability Program)	Clear Fault Memory	
i20(PB)	2012	General	ESP(Electronic Stability Program)	Read Data Stream	
i20(PB)	2012	General	ESP(Electronic Stability Program)	Actuation Test	
i20(PB)	2012	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
i20(PB)	2012	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
i20(PB)	2012	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
i20(PB)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(PB)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(PB)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(PB)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(PB)	2012	General	AC(Air Conditioning)	Version Information	
i20(PB)	2012	General	AC(Air Conditioning)	Read Fault Code	
i20(PB)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
i20(PB)	2012	General	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
i20(PB)	2012	General	AC(Air Conditioning)	Actuation Test	
i20(PB)	2012	General	BCM(Body Control Module)	Version Information	
i20(PB)	2012	General	BCM(Body Control Module)	Read Data Stream	
i20(PB)	2012	General	BCM(Body Control Module)	Actuation Test	
i20(PB)	2012	General	BCM(Body Control Module)	Special Function	User Option
i20(PB)	2012	General	EPS(Electronic Power Steering)	Version Information	
i20(PB)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(PB)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(PB)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(PB)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(PB)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(PB)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(PB)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(PB)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i20(PB)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(PB)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(PB)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(PB)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(PB)	2012	General	IMM(Immobilizer)	Read Data Stream	
i20(PB)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(PB)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(PB)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(PB)	2012	General	IMM(Immobilizer)	Special Function	Teaching
i20(PB)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(PB)	2012	General	Transmitter Code Saving	Read Data Stream	
i20(PB)	2012	General	Transmitter Code Saving	Special Function	Code Saving
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine

model	year	area	system	function	subfunction
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(PB)	2012	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(PB)	2011	General	ECM(Engine Control Module)	Version Information	
i20(PB)	2011	General	ECM(Engine Control Module)	Read Fault Code	
i20(PB)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(PB)	2011	General	ECM(Engine Control Module)	Read Data Stream	
i20(PB)	2011	General	ECM(Engine Control Module)	Actuation Test	
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	Ignition Test
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i20(PB)	2011	General	TCM(Transmission Control Module)	Version Information	
i20(PB)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
i20(PB)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(PB)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
i20(PB)	2011	General	TCM(Transmission Control Module)	Actuation Test	
i20(PB)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(PB)	2011	General	ESP(Electronic Stability Program)	Version Information	
i20(PB)	2011	General	ESP(Electronic Stability Program)	Read Fault Code	
i20(PB)	2011	General	ESP(Electronic Stability Program)	Clear Fault Memory	
i20(PB)	2011	General	ESP(Electronic Stability Program)	Read Data Stream	
i20(PB)	2011	General	ESP(Electronic Stability Program)	Actuation Test	
i20(PB)	2011	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
i20(PB)	2011	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
i20(PB)	2011	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
i20(PB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(PB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(PB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(PB)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(PB)	2011	General	AC(Air Conditioning)	Version Information	
i20(PB)	2011	General	AC(Air Conditioning)	Read Fault Code	
i20(PB)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
i20(PB)	2011	General	AC(Air Conditioning)	Read Data Stream	
i20(PB)	2011	General	AC(Air Conditioning)	Actuation Test	
i20(PB)	2011	General	BCM(Body Control Module)	Version Information	
i20(PB)	2011	General	BCM(Body Control Module)	Read Data Stream	
i20(PB)	2011	General	BCM(Body Control Module)	Actuation Test	
i20(PB)	2011	General	BCM(Body Control Module)	Special Function	User Option
i20(PB)	2011	General	EPS(Electronic Power Steering)	Version Information	
i20(PB)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(PB)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(PB)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(PB)	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(PB)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(PB)	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(PB)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(PB)	2011	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i20(PB)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(PB)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(PB)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(PB)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(PB)	2011	General	IMM(Immobilizer)	Read Data Stream	
i20(PB)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(PB)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
i20(PB)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(PB)	2011	General	IMM(Immobilizer)	Special Function	Teaching
i20(PB)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(PB)	2011	General	Transmitter Code Saving	Read Data Stream	
i20(PB)	2011	General	Transmitter Code Saving	Special Function	Code Saving
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(PB)	2011	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(PB)	2010	General	ECM(Engine Control Module)	Version Information	
i20(PB)	2010	General	ECM(Engine Control Module)	Read Fault Code	
i20(PB)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(PB)	2010	General	ECM(Engine Control Module)	Read Data Stream	
i20(PB)	2010	General	ECM(Engine Control Module)	Actuation Test	
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	Ignition Test
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i20(PB)	2010	General	TCM(Transmission Control Module)	Version Information	
i20(PB)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
i20(PB)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(PB)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
i20(PB)	2010	General	TCM(Transmission Control Module)	Actuation Test	
i20(PB)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
i20(PB)	2010	General	ESP(Electronic Stability Program)	Version Information	
i20(PB)	2010	General	ESP(Electronic Stability Program)	Read Fault Code	
i20(PB)	2010	General	ESP(Electronic Stability Program)	Clear Fault Memory	
i20(PB)	2010	General	ESP(Electronic Stability Program)	Read Data Stream	
i20(PB)	2010	General	ESP(Electronic Stability Program)	Actuation Test	
i20(PB)	2010	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
i20(PB)	2010	General	ESP(Electronic Stability Program)	Special Function	Air Bleeding Mode
i20(PB)	2010	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
i20(PB)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(PB)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(PB)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(PB)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(PB)	2010	General	AC(Air Conditioning)	Version Information	
i20(PB)	2010	General	AC(Air Conditioning)	Read Fault Code	
i20(PB)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
i20(PB)	2010	General	AC(Air Conditioning)	Read Data Stream	
i20(PB)	2010	General	AC(Air Conditioning)	Actuation Test	
i20(PB)	2010	General	BCM(Body Control Module)	Version Information	
i20(PB)	2010	General	BCM(Body Control Module)	Read Data Stream	
i20(PB)	2010	General	BCM(Body Control Module)	Actuation Test	
i20(PB)	2010	General	BCM(Body Control Module)	Special Function	User Option
i20(PB)	2010	General	EPS(Electronic Power Steering)	Version Information	
i20(PB)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(PB)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(PB)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(PB)	2010	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(PB)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(PB)	2010	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(PB)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
i20(PB)	2010	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i20(PB)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(PB)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(PB)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(PB)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(PB)	2010	General	IMM(Immobilizer)	Read Data Stream	
i20(PB)	2010	General	IMM(Immobilizer)	Special Function	Password
i20(PB)	2010	General	IMM(Immobilizer)	Special Function	Teaching/Changing
i20(PB)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(PB)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(PB)	2010	General	IMM(Immobilizer)	Special Function	Teaching
i20(PB)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(PB)	2010	General	Transmitter Code Saving	Read Data Stream	
i20(PB)	2010	General	Transmitter Code Saving	Special Function	Code Saving
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	Component Change
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	Routine
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i20(PB)	2010	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i20(PB)	2009	General	ECM(Engine Control Module)	Version Information	
i20(PB)	2009	General	ECM(Engine Control Module)	Read Fault Code	
i20(PB)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
i20(PB)	2009	General	ECM(Engine Control Module)	Read Data Stream	
i20(PB)	2009	General	ECM(Engine Control Module)	Actuation Test	
i20(PB)	2009	General	ECM(Engine Control Module)	Special Function	Read VIN
i20(PB)	2009	General	ECM(Engine Control Module)	Special Function	Write VIN
i20(PB)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i20(PB)	2009	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i20(PB)	2009	General	ECM(Engine Control Module)	Special Function	Ignition Test

model	year	area	system	function	subfunction
i20(PB)	2009	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i20(PB)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i20(PB)	2009	General	TCM(Transmission Control Module)	Version Information	
i20(PB)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
i20(PB)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
i20(PB)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
i20(PB)	2009	General	TCM(Transmission Control Module)	Actuation Test	
i20(PB)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i20(PB)	2009	General	ESP(Electronic Stability Program)	Version Information	
i20(PB)	2009	General	ESP(Electronic Stability Program)	Read Fault Code	
i20(PB)	2009	General	ESP(Electronic Stability Program)	Clear Fault Memory	
i20(PB)	2009	General	ESP(Electronic Stability Program)	Read Data Stream	
i20(PB)	2009	General	ESP(Electronic Stability Program)	Actuation Test	
i20(PB)	2009	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
i20(PB)	2009	General	ESP(Electronic Stability Program)	Special Function	Air Bleeding Mode
i20(PB)	2009	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
i20(PB)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i20(PB)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i20(PB)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i20(PB)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i20(PB)	2009	General	AC(Air Conditioning)	Version Information	
i20(PB)	2009	General	AC(Air Conditioning)	Read Fault Code	
i20(PB)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
i20(PB)	2009	General	AC(Air Conditioning)	Read Data Stream	
i20(PB)	2009	General	AC(Air Conditioning)	Actuation Test	
i20(PB)	2009	General	BCM(Body Control Module)	Version Information	
i20(PB)	2009	General	BCM(Body Control Module)	Read Data Stream	
i20(PB)	2009	General	BCM(Body Control Module)	Actuation Test	
i20(PB)	2009	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
i20(PB)	2009	General	EPS(Electronic Power Steering)	Version Information	
i20(PB)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
i20(PB)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i20(PB)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	
i20(PB)	2009	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i20(PB)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i20(PB)	2009	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i20(PB)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i20(PB)	2009	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i20(PB)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i20(PB)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i20(PB)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i20(PB)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i20(PB)	2009	General	IMM(Immobilizer)	Read Data Stream	
i20(PB)	2009	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i20(PB)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i20(PB)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i20(PB)	2009	General	IMM(Immobilizer)	Special Function	Teaching
i20(PB)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i20(PB)	2009	General	Transmitter Code Saving	Read Data Stream	
i20(PB)	2009	General	Transmitter Code Saving	Special Function	Code Saving
i20(PB)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i20(PB)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i20(PB)	2009	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i20(PB)	2009	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(FDe)	2012	General	ECM(Engine Control Module)	Version Information	
i30(FDe)	2012	General	ECM(Engine Control Module)	Read Fault Code	
i30(FDe)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(FDe)	2012	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
i30(FDe)	2012	General	ECM(Engine Control Module)	Actuation Test	
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	Ignition Test
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30(FDe)	2012	General	TCM(Transmission Control Module)	Version Information	
i30(FDe)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
i30(FDe)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(FDe)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
i30(FDe)	2012	General	TCM(Transmission Control Module)	Actuation Test	
i30(FDe)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(FDe)	2012	General	ABS(Anti-lock Braking System)	Version Information	
i30(FDe)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(FDe)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(FDe)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(FDe)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(FDe)	2012	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i30(FDe)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(FDe)	2012	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i30(FDe)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(FDe)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(FDe)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(FDe)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(FDe)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
i30(FDe)	2012	General	AC(Air Conditioning)	Version Information	
i30(FDe)	2012	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
i30(FDe)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
i30(FDe)	2012	General	AC(Air Conditioning)	Read Data Stream	
i30(FDe)	2012	General	AC(Air Conditioning)	Actuation Test	
i30(FDe)	2012	General	BCM(Body Control Module)	Version Information	
i30(FDe)	2012	General	BCM(Body Control Module)	Read Data Stream	
i30(FDe)	2012	General	BCM(Body Control Module)	Actuation Test	
i30(FDe)	2012	General	BCM(Body Control Module)	Special Function	User Option
i30(FDe)	2012	General	EPS(Electronic Power Steering)	Version Information	
i30(FDe)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(FDe)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(FDe)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(FDe)	2012	General	EPS(Electronic Power Steering)	Read FreezeData	
i30(FDe)	2012	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(FDe)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(FDe)	2012	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30(FDe)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(FDe)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(FDe)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(FDe)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(FDe)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(FDe)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(FDe)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(FDe)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(FDe)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(FDe)	2012	General	IMM(Immobilizer)	Read Data Stream	
i30(FDe)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30(FDe)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(FDe)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
i30(FDe)	2012	General	IMM(Immobilizer)	Special Function	Teaching
i30(FDe)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i30(FDe)	2012	General	Transmitter Code Saving	Read Data Stream	
i30(FDe)	2012	General	Transmitter Code Saving	Special Function	Code Saving
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(FDe)	2012	General	ECM(Engine Control Module)	Read FreezeData	
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30(FDe)	2012	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(FDe)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
i30(FDe)	2011	General	ECM(Engine Control Module)	Version Information	
i30(FDe)	2011	General	ECM(Engine Control Module)	Read Fault Code	
i30(FDe)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(FDe)	2011	General	ECM(Engine Control Module)	Read Data Stream	
i30(FDe)	2011	General	ECM(Engine Control Module)	Actuation Test	
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Ignition Test
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30(FDe)	2011	General	TCM(Transmission Control Module)	Version Information	
i30(FDe)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
i30(FDe)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(FDe)	2011	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
i30(FDe)	2011	General	TCM(Transmission Control Module)	Actuation Test	
i30(FDe)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(FDe)	2011	General	ABS(Anti-lock Braking System)	Version Information	
i30(FDe)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(FDe)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(FDe)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(FDe)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(FDe)	2011	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i30(FDe)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(FDe)	2011	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i30(FDe)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(FDe)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(FDe)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(FDe)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(FDe)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
i30(FDe)	2011	General	AC(Air Conditioning)	Version Information	
i30(FDe)	2011	General	AC(Air Conditioning)	Read Fault Code	
i30(FDe)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
i30(FDe)	2011	General	AC(Air Conditioning)	Read Data Stream	
i30(FDe)	2011	General	AC(Air Conditioning)	Actuation Test	
i30(FDe)	2011	General	BCM(Body Control Module)	Version Information	
i30(FDe)	2011	General	BCM(Body Control Module)	Read Data Stream	
i30(FDe)	2011	General	BCM(Body Control Module)	Actuation Test	
i30(FDe)	2011	General	BCM(Body Control Module)	Special Function	User Option
i30(FDe)	2011	General	EPS(Electronic Power Steering)	Version Information	
i30(FDe)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(FDe)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(FDe)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(FDe)	2011	General	EPS(Electronic Power Steering)	Read FreezeData	

model	year	area	system	function	subfunction
i30(FDe)	2011	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(FDe)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(FDe)	2011	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30(FDe)	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(FDe)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(FDe)	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(FDe)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(FDe)	2011	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(FDe)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(FDe)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(FDe)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(FDe)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(FDe)	2011	General	IMM(Immobilizer)	Read Data Stream	
i30(FDe)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30(FDe)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(FDe)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(FDe)	2011	General	IMM(Immobilizer)	Special Function	Teaching
i30(FDe)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i30(FDe)	2011	General	Transmitter Code Saving	Read Data Stream	
i30(FDe)	2011	General	Transmitter Code Saving	Special Function	Code Saving
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(FDe)	2011	General	ECM(Engine Control Module)	Read FreezeData	
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration

model	year	area	system	function	subfunction
i30(FDe)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Component Replacement Routine
i30(FDe)	2011	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i30(FDe)	2010	General	ECM(Engine Control Module)	Version Information	
i30(FDe)	2010	General	ECM(Engine Control Module)	Read Fault Code	
i30(FDe)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(FDe)	2010	General	ECM(Engine Control Module)	Read Data Stream	
i30(FDe)	2010	General	ECM(Engine Control Module)	Actuation Test	
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	Ignition Test
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30(FDe)	2010	General	TCM(Transmission Control Module)	Version Information	
i30(FDe)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
i30(FDe)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(FDe)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
i30(FDe)	2010	General	TCM(Transmission Control Module)	Actuation Test	
i30(FDe)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(FDe)	2010	General	ABS(Anti-lock Braking System)	Version Information	
i30(FDe)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(FDe)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(FDe)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(FDe)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(FDe)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
i30(FDe)	2010	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
i30(FDe)	2010	General	ABS(Anti-lock Braking System)	Special Function	Reset(ESP/ESC)Only Solenoid Valve Test
i30(FDe)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(FDe)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(FDe)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(FDe)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(FDe)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
i30(FDe)	2010	General	AC(Air Conditioning)	Version Information	
i30(FDe)	2010	General	AC(Air Conditioning)	Read Fault Code	
i30(FDe)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
i30(FDe)	2010	General	AC(Air Conditioning)	Read Data Stream	
i30(FDe)	2010	General	AC(Air Conditioning)	Actuation Test	
i30(FDe)	2010	General	BCM(Body Control Module)	Version Information	
i30(FDe)	2010	General	BCM(Body Control Module)	Read Data Stream	
i30(FDe)	2010	General	BCM(Body Control Module)	Actuation Test	
i30(FDe)	2010	General	BCM(Body Control Module)	Special Function	User Option
i30(FDe)	2010	General	EPS(Electronic Power Steering)	Version Information	
i30(FDe)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(FDe)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(FDe)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(FDe)	2010	General	EPS(Electronic Power Steering)	Read FreezeData	
i30(FDe)	2010	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(FDe)	2010	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(FDe)	2010	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30(FDe)	2010	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(FDe)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(FDe)	2010	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
i30(FDe)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(FDe)	2010	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(FDe)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(FDe)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(FDe)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(FDe)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(FDe)	2010	General	IMM(Immobilizer)	Read Data Stream	
i30(FDe)	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30(FDe)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(FDe)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(FDe)	2010	General	IMM(Immobilizer)	Special Function	Teaching
i30(FDe)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i30(FDe)	2010	General	Transmitter Code Saving	Read Data Stream	
i30(FDe)	2010	General	Transmitter Code Saving	Special Function	Code Saving
i30(FDe)	2010	General	ECM(Engine Control Module)	Read FreezeData	
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(FDe)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	Component Replacement Routine
i30(FDe)	2010	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i30(FDe)	2009	General	ECM(Engine Control Module)	Version Information	
i30(FDe)	2009	General	ECM(Engine Control Module)	Read Fault Code	
i30(FDe)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(FDe)	2009	General	ECM(Engine Control Module)	Read Data Stream	
i30(FDe)	2009	General	ECM(Engine Control Module)	Actuation Test	
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	Ignition Test
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30(FDe)	2009	General	TCM(Transmission Control Module)	Version Information	
i30(FDe)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
i30(FDe)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(FDe)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
i30(FDe)	2009	General	TCM(Transmission Control Module)	Actuation Test	
i30(FDe)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(FDe)	2009	General	ABS(Anti-lock Braking System)	Version Information	
i30(FDe)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(FDe)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(FDe)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(FDe)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(FDe)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(FDe)	2009	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
i30(FDe)	2009	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only
i30(FDe)	2009	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
i30(FDe)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(FDe)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(FDe)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(FDe)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(FDe)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
i30(FDe)	2009	General	AC(Air Conditioning)	Version Information	
i30(FDe)	2009	General	AC(Air Conditioning)	Read Fault Code	
i30(FDe)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
i30(FDe)	2009	General	AC(Air Conditioning)	Read Data Stream	
i30(FDe)	2009	General	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
i30(FDe)	2009	General	BCM(Body Control Module)	Version Information	
i30(FDe)	2009	General	BCM(Body Control Module)	Read Data Stream	
i30(FDe)	2009	General	BCM(Body Control Module)	Actuation Test	
i30(FDe)	2009	General	BCM(Body Control Module)	Special Function	User Option
i30(FDe)	2009	General	EPS(Electronic Power Steering)	Version Information	
i30(FDe)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(FDe)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(FDe)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(FDe)	2009	General	EPS(Electronic Power Steering)	Read FreezeData	
i30(FDe)	2009	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(FDe)	2009	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(FDe)	2009	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30(FDe)	2009	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(FDe)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(FDe)	2009	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(FDe)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(FDe)	2009	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(FDe)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(FDe)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(FDe)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(FDe)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(FDe)	2009	General	IMM(Immobilizer)	Read Data Stream	
i30(FDe)	2009	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30(FDe)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(FDe)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(FDe)	2009	General	IMM(Immobilizer)	Special Function	Teaching
i30(FDe)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i30(FDe)	2009	General	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
i30(FDe)	2009	General	Transmitter Code Saving	Special Function	Code Saving
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(FDe)	2009	General	ECM(Engine Control Module)	Read FreezeData	
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(FDe)	2009	General	TCM(Transmission Control Module)	Read FreezeData	
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	Component Replacement Routine
i30(FDe)	2009	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i30(GD)	2018	General	ECM(Engine Control Module)	Version Information	
i30(GD)	2018	General	ECM(Engine Control Module)	Read Fault Code	
i30(GD)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(GD)	2018	General	ECM(Engine Control Module)	Read Data Stream	
i30(GD)	2018	General	ECM(Engine Control Module)	Actuation Test	
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(GD)	2018	General	TCM(Transmission Control Module)	Version Information	
i30(GD)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
i30(GD)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(GD)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
i30(GD)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
i30(GD)	2018	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
i30(GD)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(GD)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(GD)	2018	General	Electronic Stability Program	Version Information	
i30(GD)	2018	General	Electronic Stability Program	Read Fault Code	
i30(GD)	2018	General	Electronic Stability Program	Clear Fault Memory	
i30(GD)	2018	General	Electronic Stability Program	Read Data Stream	
i30(GD)	2018	General	Electronic Stability Program	Actuation Test	
i30(GD)	2018	General	Electronic Stability Program	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
i30(GD)	2018	General	Electronic Stability Program	Special Function	HCU Air Bleeding Mode
i30(GD)	2018	General	Electronic Stability Program	Special Function	Variant Coding
i30(GD)	2018	General	Electric Parking Brake	Version Information	
i30(GD)	2018	General	Electric Parking Brake	Read Fault Code	
i30(GD)	2018	General	Electric Parking Brake	Clear Fault Memory	
i30(GD)	2018	General	Electric Parking Brake	Read Data Stream	
i30(GD)	2018	General	Electric Parking Brake	Actuation Test	
i30(GD)	2018	General	Electric Parking Brake	Special Function	EPB Variant Coding
i30(GD)	2018	General	Electric Parking Brake	Special Function	G-Sensor Calibration
i30(GD)	2018	General	Electric Parking Brake	Special Function	Brake Pad Change
i30(GD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(GD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(GD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(GD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(GD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i30(GD)	2018	General	AC(Air Conditioning)	Version Information	
i30(GD)	2018	General	AC(Air Conditioning)	Read Fault Code	
i30(GD)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
i30(GD)	2018	General	AC(Air Conditioning)	Read Data Stream	
i30(GD)	2018	General	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
i30(GD)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30(GD)	2018	General	BCM(Body Control Module)	Version Information	
i30(GD)	2018	General	BCM(Body Control Module)	Read Fault Code	
i30(GD)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
i30(GD)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(GD)	2018	General	BCM(Body Control Module)	Read Data Stream	
i30(GD)	2018	General	BCM(Body Control Module)	Actuation Test	
i30(GD)	2018	General	BCM(Body Control Module)	Special Function	User Option
i30(GD)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30(GD)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(GD)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(GD)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(GD)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(GD)	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(GD)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(GD)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(GD)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(GD)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(GD)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i30(GD)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i30(GD)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i30(GD)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i30(GD)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
i30(GD)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
i30(GD)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
i30(GD)	2018	General	EPS(Electronic Power Steering)	Version Information	
i30(GD)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(GD)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(GD)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
i30(GD)	2018	General	EPS(Electronic Power Steering)	Read FreezeData	
i30(GD)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
i30(GD)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(GD)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
i30(GD)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
i30(GD)	2018	General	Smart Key Unit	Version Information	
i30(GD)	2018	General	Smart Key Unit	Read Fault Code	
i30(GD)	2018	General	Smart Key Unit	Clear Fault Memory	
i30(GD)	2018	General	Smart Key Unit	Read Data Stream	
i30(GD)	2018	General	Smart Key Unit	Actuation Test	
i30(GD)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(GD)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
i30(GD)	2018	General	Smart Key Unit	Special Function	SMK Status Information
i30(GD)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
i30(GD)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(GD)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(GD)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(GD)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
i30(GD)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(GD)	2018	General	Smart Parking Assist System	Version Information	
i30(GD)	2018	General	Smart Parking Assist System	Read Fault Code	
i30(GD)	2018	General	Smart Parking Assist System	Clear Fault Memory	
i30(GD)	2018	General	Smart Parking Assist System	Read Data Stream	
i30(GD)	2018	General	Smart Parking Assist System	Actuation Test	
i30(GD)	2018	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i30(GD)	2018	General	IMM(Immobilizer)	Read Fault Code	
i30(GD)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
i30(GD)	2018	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
i30(GD)	2018	General	IMM(Immobilizer)	Special Function	Password
i30(GD)	2018	General	IMM(Immobilizer)	Special Function	Teaching/Charging
i30(GD)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(GD)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(GD)	2018	General	IMM(Immobilizer)	Special Function	Teaching
i30(GD)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
i30(GD)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i30(GD)	2018	General	ECM(Engine Control Module)	Read FreezeData	
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	CVVT Test
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(GD)	2018	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning
i30(GD)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
i30(GD)	2017	General	ECM(Engine Control Module)	Version Information	
i30(GD)	2017	General	ECM(Engine Control Module)	Read Fault Code	
i30(GD)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(GD)	2017	General	ECM(Engine Control Module)	Read Data Stream	
i30(GD)	2017	General	ECM(Engine Control Module)	Actuation Test	
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
i30(GD)	2017	General	TCM(Transmission Control Module)	Version Information	
i30(GD)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
i30(GD)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(GD)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
i30(GD)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
i30(GD)	2017	General	TCM(Transmission Control Module)	Actuation Test	
i30(GD)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(GD)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(GD)	2017	General	Electronic Stability Program	Version Information	
i30(GD)	2017	General	Electronic Stability Program	Read Fault Code	
i30(GD)	2017	General	Electronic Stability Program	Clear Fault Memory	
i30(GD)	2017	General	Electronic Stability Program	Read Data Stream	
i30(GD)	2017	General	Electronic Stability Program	Actuation Test	
i30(GD)	2017	General	Electronic Stability Program	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
i30(GD)	2017	General	Electronic Stability Program	Special Function	HCU Air Bleeding Mode
i30(GD)	2017	General	Electronic Stability Program	Special Function	Variant Coding
i30(GD)	2017	General	Electric Parking Brake	Version Information	
i30(GD)	2017	General	Electric Parking Brake	Read Fault Code	
i30(GD)	2017	General	Electric Parking Brake	Clear Fault Memory	
i30(GD)	2017	General	Electric Parking Brake	Read Data Stream	
i30(GD)	2017	General	Electric Parking Brake	Actuation Test	
i30(GD)	2017	General	Electric Parking Brake	Special Function	EPB Variant Coding
i30(GD)	2017	General	Electric Parking Brake	Special Function	G-Sensor Calibration
i30(GD)	2017	General	Electric Parking Brake	Special Function	Brake Pad Change
i30(GD)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(GD)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(GD)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(GD)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
i30(GD)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i30(GD)	2017	General	AC(Air Conditioning)	Version Information	
i30(GD)	2017	General	AC(Air Conditioning)	Read Fault Code	
i30(GD)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
i30(GD)	2017	General	AC(Air Conditioning)	Read Data Stream	
i30(GD)	2017	General	AC(Air Conditioning)	Actuation Test	
i30(GD)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30(GD)	2017	General	BCM(Body Control Module)	Version Information	
i30(GD)	2017	General	BCM(Body Control Module)	Read Fault Code	
i30(GD)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
i30(GD)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(GD)	2017	General	BCM(Body Control Module)	Read Data Stream	
i30(GD)	2017	General	BCM(Body Control Module)	Actuation Test	
i30(GD)	2017	General	BCM(Body Control Module)	Special Function	User Option
i30(GD)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30(GD)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(GD)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(GD)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(GD)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(GD)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(GD)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(GD)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(GD)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(GD)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(GD)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i30(GD)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i30(GD)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i30(GD)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i30(GD)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
i30(GD)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
i30(GD)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
i30(GD)	2017	General	EPS(Electronic Power Steering)	Version Information	
i30(GD)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(GD)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(GD)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(GD)	2017	General	EPS(Electronic Power Steering)	Read FreezeData	
i30(GD)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
i30(GD)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(GD)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
i30(GD)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
i30(GD)	2017	General	Smart Key Unit	Version Information	
i30(GD)	2017	General	Smart Key Unit	Read Fault Code	
i30(GD)	2017	General	Smart Key Unit	Clear Fault Memory	
i30(GD)	2017	General	Smart Key Unit	Read Data Stream	
i30(GD)	2017	General	Smart Key Unit	Actuation Test	
i30(GD)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(GD)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
i30(GD)	2017	General	Smart Key Unit	Special Function	SMK Status Information
i30(GD)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
i30(GD)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(GD)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(GD)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(GD)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
i30(GD)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(GD)	2017	General	Smart Parking Assist System	Version Information	
i30(GD)	2017	General	Smart Parking Assist System	Read Fault Code	
i30(GD)	2017	General	Smart Parking Assist System	Clear Fault Memory	

model	year	area	system	function	subfunction
i30(GD)	2017	General	Smart Parking Assist System	Read Data Stream	
i30(GD)	2017	General	Smart Parking Assist System	Actuation Test	
i30(GD)	2017	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i30(GD)	2017	General	IMM(Immobilizer)	Read Fault Code	
i30(GD)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
i30(GD)	2017	General	IMM(Immobilizer)	Read Data Stream	
i30(GD)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30(GD)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(GD)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(GD)	2017	General	IMM(Immobilizer)	Special Function	Teaching
i30(GD)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
i30(GD)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i30(GD)	2017	General	ECM(Engine Control Module)	Read FreezeData	
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	CVVT Test
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(GD)	2017	General	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
i30(GD)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
i30(GD)	2016	General	ECM(Engine Control Module)	Version Information	
i30(GD)	2016	General	ECM(Engine Control Module)	Read Fault Code	
i30(GD)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(GD)	2016	General	ECM(Engine Control Module)	Read Data Stream	
i30(GD)	2016	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning
i30(GD)	2016	General	TCM(Transmission Control Module)	Version Information	
i30(GD)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
i30(GD)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(GD)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
i30(GD)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
i30(GD)	2016	General	TCM(Transmission Control Module)	Actuation Test	
i30(GD)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(GD)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(GD)	2016	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
i30(GD)	2016	General	ABS(Anti-lock Braking System)	Version Information	
i30(GD)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(GD)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(GD)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(GD)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(GD)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
i30(GD)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(GD)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i30(GD)	2016	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
i30(GD)	2016	General	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
i30(GD)	2016	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change

model	year	area	system	function	subfunction
i30(GD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(GD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(GD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(GD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(GD)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i30(GD)	2016	General	AC(Air Conditioning)	Version Information	
i30(GD)	2016	General	AC(Air Conditioning)	Read Fault Code	
i30(GD)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
i30(GD)	2016	General	AC(Air Conditioning)	Read Data Stream	
i30(GD)	2016	General	AC(Air Conditioning)	Actuation Test	
i30(GD)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30(GD)	2016	General	BCM(Body Control Module)	Version Information	
i30(GD)	2016	General	BCM(Body Control Module)	Read Fault Code	
i30(GD)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
i30(GD)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(GD)	2016	General	BCM(Body Control Module)	Read Data Stream	
i30(GD)	2016	General	BCM(Body Control Module)	Actuation Test	
i30(GD)	2016	General	BCM(Body Control Module)	Special Function	User Option
i30(GD)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30(GD)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(GD)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(GD)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(GD)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(GD)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(GD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(GD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(GD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(GD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(GD)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST

model	year	area	system	function	subfunction
i30(GD)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i30(GD)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i30(GD)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i30(GD)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
i30(GD)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
i30(GD)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
i30(GD)	2016	General	EPS(Electronic Power Steering)	Version Information	
i30(GD)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(GD)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(GD)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(GD)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
i30(GD)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
i30(GD)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(GD)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
i30(GD)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
i30(GD)	2016	General	Smart Key Unit	Version Information	
i30(GD)	2016	General	Smart Key Unit	Read Fault Code	
i30(GD)	2016	General	Smart Key Unit	Clear Fault Memory	
i30(GD)	2016	General	Smart Key Unit	Read Data Stream	
i30(GD)	2016	General	Smart Key Unit	Actuation Test	
i30(GD)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(GD)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
i30(GD)	2016	General	Smart Key Unit	Special Function	SMK Status Information
i30(GD)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
i30(GD)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(GD)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(GD)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(GD)	2016	General	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
i30(GD)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(GD)	2016	General	Smart Parking Assist System	Version Information	
i30(GD)	2016	General	Smart Parking Assist System	Read Fault Code	
i30(GD)	2016	General	Smart Parking Assist System	Clear Fault Memory	
i30(GD)	2016	General	Smart Parking Assist System	Read Data Stream	
i30(GD)	2016	General	Smart Parking Assist System	Actuation Test	
i30(GD)	2016	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i30(GD)	2016	General	IMM(Immobilizer)	Read Fault Code	
i30(GD)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
i30(GD)	2016	General	IMM(Immobilizer)	Read Data Stream	
i30(GD)	2016	General	IMM(Immobilizer)	Special Function	Password
i30(GD)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Changing
i30(GD)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(GD)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(GD)	2016	General	IMM(Immobilizer)	Special Function	Teaching
i30(GD)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
i30(GD)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30(GD)	2016	General	ECM(Engine Control Module)	Read FreezeData	
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	Configuration Reset
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
i30(GD)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power
i30(GD)	2015	General	ECM(Engine Control Module)	Version Information	Balance(Optional)
i30(GD)	2015	General	ECM(Engine Control Module)	Read Fault Code	
i30(GD)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(GD)	2015	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
i30(GD)	2015	General	ECM(Engine Control Module)	Actuation Test	
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(GD)	2015	General	TCM(Transmission Control Module)	Version Information	
i30(GD)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
i30(GD)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(GD)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
i30(GD)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
i30(GD)	2015	General	TCM(Transmission Control Module)	Actuation Test	
i30(GD)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(GD)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(GD)	2015	General	ABS(Anti-lock Braking System)	Version Information	
i30(GD)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(GD)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(GD)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(GD)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(GD)	2015	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
i30(GD)	2015	General	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
i30(GD)	2015	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change
i30(GD)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(GD)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i30(GD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(GD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(GD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(GD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
i30(GD)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i30(GD)	2015	General	AC(Air Conditioning)	Version Information	
i30(GD)	2015	General	AC(Air Conditioning)	Read Fault Code	
i30(GD)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
i30(GD)	2015	General	AC(Air Conditioning)	Read Data Stream	
i30(GD)	2015	General	AC(Air Conditioning)	Actuation Test	
i30(GD)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30(GD)	2015	General	BCM(Body Control Module)	Version Information	
i30(GD)	2015	General	BCM(Body Control Module)	Read Fault Code	
i30(GD)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
i30(GD)	2015	General	BCM(Body Control Module)	Read Data Stream	
i30(GD)	2015	General	BCM(Body Control Module)	Actuation Test	
i30(GD)	2015	General	BCM(Body Control Module)	Special Function	User Option
i30(GD)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(GD)	2015	General	EPS(Electronic Power Steering)	Version Information	
i30(GD)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(GD)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(GD)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(GD)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(GD)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(GD)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30(GD)	2015	General	AFS(Adaptive Front Lighting System)	Version Information	
i30(GD)	2015	General	AFS(Adaptive Front Lighting System)	Read Fault Code	
i30(GD)	2015	General	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
i30(GD)	2015	General	AFS(Adaptive Front Lighting System)	Read Data Stream	
i30(GD)	2015	General	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
i30(GD)	2015	General	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
i30(GD)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
i30(GD)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(GD)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(GD)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(GD)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(GD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(GD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(GD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(GD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(GD)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i30(GD)	2015	General	IMM(Immobilizer)	Read Fault Code	
i30(GD)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
i30(GD)	2015	General	IMM(Immobilizer)	Read Data Stream	
i30(GD)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
i30(GD)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(GD)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(GD)	2015	General	IMM(Immobilizer)	Special Function	Teaching
i30(GD)	2015	General	Smart Key Unit	Version Information	
i30(GD)	2015	General	Smart Key Unit	Read Fault Code	
i30(GD)	2015	General	Smart Key Unit	Clear Fault Memory	
i30(GD)	2015	General	Smart Key Unit	Read Data Stream	
i30(GD)	2015	General	Smart Key Unit	Actuation Test	
i30(GD)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(GD)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
i30(GD)	2015	General	Smart Key Unit	Special Function	SMK Status Information
i30(GD)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
i30(GD)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(GD)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(GD)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(GD)	2015	General	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
i30(GD)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(GD)	2015	General	Transmitter Code Saving	Read Data Stream	
i30(GD)	2015	General	Transmitter Code Saving	Special Function	Code Saving
i30(GD)	2015	General	ECM(Engine Control Module)	Read FreezeData	
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i30(GD)	2015	General	ESP(Electronic Stability Program)	Version Information	
i30(GD)	2015	General	ESP(Electronic Stability Program)	Read Fault Code	
i30(GD)	2015	General	ESP(Electronic Stability Program)	Clear Fault Memory	
i30(GD)	2015	General	ESP(Electronic Stability Program)	Read Data Stream	
i30(GD)	2015	General	ESP(Electronic Stability Program)	Actuation Test	
i30(GD)	2015	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
i30(GD)	2015	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
i30(GD)	2015	General	EPB(Electrical Parking Brake)	Version Information	
i30(GD)	2015	General	EPB(Electrical Parking Brake)	Read Fault Code	
i30(GD)	2015	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
i30(GD)	2015	General	EPB(Electrical Parking Brake)	Read Data Stream	
i30(GD)	2015	General	EPB(Electrical Parking Brake)	Actuation Test	
i30(GD)	2015	General	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
i30(GD)	2015	General	EPB(Electrical Parking Brake)	Special Function	G-Sensor Calibration
i30(GD)	2015	General	EPB(Electrical Parking Brake)	Special Function	Brake Pad Change
i30(GD)	2015	General	TCM(Transmission Control Module)(ISG+)	Version Information	
i30(GD)	2015	General	TCM(Transmission Control Module)(ISG+)	Read Fault Code	
i30(GD)	2015	General	TCM(Transmission Control Module)(ISG+)	Clear Fault Memory	
i30(GD)	2015	General	TCM(Transmission Control Module)(ISG+)	Read Data Stream	
i30(GD)	2015	General	TCM(Transmission Control Module)(ISG+)	Read FreezeData	

model	year	area	system	function	subfunction
i30(GD)	2015	General	TCM(Transmission Control Module)(ISG+)	Actuation Test	
i30(GD)	2015	General	TCM(Transmission Control Module)(ISG+)	Special Function	Resetting Auto T/A Values
i30(GD)	2015	General	TCM(Transmission Control Module)(ISG+)	Special Function	AT Adaptation Mode
i30(GD)	2015	General	Airbag(Event #1)	Version Information	
i30(GD)	2015	General	Airbag(Event #1)	Read Fault Code	
i30(GD)	2015	General	Airbag(Event #1)	Clear Fault Memory	
i30(GD)	2015	General	Airbag(Event #1)	Read Data Stream	
i30(GD)	2015	General	Airbag(Event #1)	Special Function	ACU Variant Coding
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30(GD)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(GD)	2014	General	ECM(Engine Control Module)	Version Information	
i30(GD)	2014	General	ECM(Engine Control Module)	Read Fault Code	
i30(GD)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(GD)	2014	General	ECM(Engine Control Module)	Read Data Stream	
i30(GD)	2014	General	ECM(Engine Control Module)	Actuation Test	
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(GD)	2014	General	TCM(Transmission Control Module)	Version Information	
i30(GD)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
i30(GD)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(GD)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
i30(GD)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
i30(GD)	2014	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
i30(GD)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(GD)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(GD)	2014	General	ABS(Anti-lock Braking System)	Version Information	
i30(GD)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(GD)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(GD)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(GD)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(GD)	2014	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
i30(GD)	2014	General	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
i30(GD)	2014	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change
i30(GD)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(GD)	2014	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i30(GD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(GD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(GD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(GD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(GD)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i30(GD)	2014	General	AC(Air Conditioning)	Version Information	
i30(GD)	2014	General	AC(Air Conditioning)	Read Fault Code	
i30(GD)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
i30(GD)	2014	General	AC(Air Conditioning)	Read Data Stream	
i30(GD)	2014	General	AC(Air Conditioning)	Actuation Test	
i30(GD)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecu Type)
i30(GD)	2014	General	BCM(Body Control Module)	Version Information	
i30(GD)	2014	General	BCM(Body Control Module)	Read Fault Code	
i30(GD)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
i30(GD)	2014	General	BCM(Body Control Module)	Read Data Stream	
i30(GD)	2014	General	BCM(Body Control Module)	Actuation Test	
i30(GD)	2014	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
i30(GD)	2014	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(GD)	2014	General	EPS(Electronic Power Steering)	Version Information	
i30(GD)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(GD)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(GD)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(GD)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(GD)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(GD)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30(GD)	2014	General	AFS(Adaptive Front Lighting System)	Version Information	
i30(GD)	2014	General	AFS(Adaptive Front Lighting System)	Read Fault Code	
i30(GD)	2014	General	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
i30(GD)	2014	General	AFS(Adaptive Front Lighting System)	Read Data Stream	
i30(GD)	2014	General	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
i30(GD)	2014	General	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
i30(GD)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(GD)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(GD)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(GD)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(GD)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(GD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(GD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(GD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(GD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(GD)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i30(GD)	2014	General	IMM(Immobilizer)	Read Fault Code	
i30(GD)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
i30(GD)	2014	General	IMM(Immobilizer)	Read Data Stream	
i30(GD)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
i30(GD)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(GD)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(GD)	2014	General	IMM(Immobilizer)	Special Function	Teaching
i30(GD)	2014	General	Smart Key Unit	Version Information	
i30(GD)	2014	General	Smart Key Unit	Read Fault Code	
i30(GD)	2014	General	Smart Key Unit	Clear Fault Memory	
i30(GD)	2014	General	Smart Key Unit	Read Data Stream	
i30(GD)	2014	General	Smart Key Unit	Actuation Test	
i30(GD)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(GD)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
i30(GD)	2014	General	Smart Key Unit	Special Function	SMK Status Information
i30(GD)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
i30(GD)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(GD)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(GD)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(GD)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
i30(GD)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(GD)	2014	General	Transmitter Code Saving	Read Data Stream	
i30(GD)	2014	General	Transmitter Code Saving	Special Function	Code Saving
i30(GD)	2014	General	ECM(Engine Control Module)	Read FreezeData	
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i30(GD)	2014	General	ESP(Electronic Stability Program)	Version Information	
i30(GD)	2014	General	ESP(Electronic Stability Program)	Read Fault Code	
i30(GD)	2014	General	ESP(Electronic Stability Program)	Clear Fault Memory	
i30(GD)	2014	General	ESP(Electronic Stability Program)	Read Data Stream	

model	year	area	system	function	subfunction
i30(GD)	2014	General	ESP(Electronic Stability Program)	Actuation Test	
i30(GD)	2014	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
i30(GD)	2014	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
i30(GD)	2014	General	EPB(Electrical Parking Brake)	Version Information	
i30(GD)	2014	General	EPB(Electrical Parking Brake)	Read Fault Code	
i30(GD)	2014	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
i30(GD)	2014	General	EPB(Electrical Parking Brake)	Read Data Stream	
i30(GD)	2014	General	EPB(Electrical Parking Brake)	Actuation Test	
i30(GD)	2014	General	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
i30(GD)	2014	General	EPB(Electrical Parking Brake)	Special Function	G-Sensor Calibration
i30(GD)	2014	General	EPB(Electrical Parking Brake)	Special Function	Brake Pad Change
i30(GD)	2014	General	TCM(Transmission Control Module)(ISG+)	Version Information	
i30(GD)	2014	General	TCM(Transmission Control Module)(ISG+)	Read Fault Code	
i30(GD)	2014	General	TCM(Transmission Control Module)(ISG+)	Clear Fault Memory	
i30(GD)	2014	General	TCM(Transmission Control Module)(ISG+)	Read Data Stream	
i30(GD)	2014	General	TCM(Transmission Control Module)(ISG+)	Read FreezeData	
i30(GD)	2014	General	TCM(Transmission Control Module)(ISG+)	Actuation Test	
i30(GD)	2014	General	TCM(Transmission Control Module)(ISG+)	Special Function	Resetting Auto T/A Values
i30(GD)	2014	General	TCM(Transmission Control Module)(ISG+)	Special Function	AT Adaptation Mode
i30(GD)	2014	General	Airbag(Event #1)	Version Information	
i30(GD)	2014	General	Airbag(Event #1)	Read Fault Code	
i30(GD)	2014	General	Airbag(Event #1)	Clear Fault Memory	
i30(GD)	2014	General	Airbag(Event #1)	Read Data Stream	
i30(GD)	2014	General	Airbag(Event #1)	Special Function	ACU Variant Coding
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30(GD)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(GD)	2013	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
i30(GD)	2013	General	ECM(Engine Control Module)	Read Fault Code	
i30(GD)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(GD)	2013	General	ECM(Engine Control Module)	Read Data Stream	
i30(GD)	2013	General	ECM(Engine Control Module)	Actuation Test	
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(GD)	2013	General	TCM(Transmission Control Module)	Version Information	
i30(GD)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
i30(GD)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(GD)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
i30(GD)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
i30(GD)	2013	General	TCM(Transmission Control Module)	Actuation Test	
i30(GD)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(GD)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(GD)	2013	General	ABS(Anti-lock Braking System)	Version Information	
i30(GD)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(GD)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(GD)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(GD)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(GD)	2013	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
i30(GD)	2013	General	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
i30(GD)	2013	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change
i30(GD)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(GD)	2013	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i30(GD)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
i30(GD)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(GD)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(GD)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(GD)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i30(GD)	2013	General	AC(Air Conditioning)	Version Information	
i30(GD)	2013	General	AC(Air Conditioning)	Read Fault Code	
i30(GD)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
i30(GD)	2013	General	AC(Air Conditioning)	Read Data Stream	
i30(GD)	2013	General	AC(Air Conditioning)	Actuation Test	
i30(GD)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30(GD)	2013	General	BCM(Body Control Module)	Version Information	
i30(GD)	2013	General	BCM(Body Control Module)	Read Fault Code	
i30(GD)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
i30(GD)	2013	General	BCM(Body Control Module)	Read Data Stream	
i30(GD)	2013	General	BCM(Body Control Module)	Actuation Test	
i30(GD)	2013	General	BCM(Body Control Module)	Special Function	User Option
i30(GD)	2013	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(GD)	2013	General	EPS(Electronic Power Steering)	Version Information	
i30(GD)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(GD)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(GD)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(GD)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(GD)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(GD)	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30(GD)	2013	General	AFS(Adaptive Front Lighting System)	Version Information	
i30(GD)	2013	General	AFS(Adaptive Front Lighting System)	Read Fault Code	
i30(GD)	2013	General	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
i30(GD)	2013	General	AFS(Adaptive Front Lighting System)	Read Data Stream	

model	year	area	system	function	subfunction
i30(GD)	2013	General	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
i30(GD)	2013	General	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
i30(GD)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(GD)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(GD)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(GD)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(GD)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(GD)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(GD)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(GD)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(GD)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(GD)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i30(GD)	2013	General	IMM(Immobilizer)	Read Fault Code	
i30(GD)	2013	General	IMM(Immobilizer)	Clear Fault Memory	
i30(GD)	2013	General	IMM(Immobilizer)	Read Data Stream	
i30(GD)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
i30(GD)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(GD)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(GD)	2013	General	IMM(Immobilizer)	Special Function	Teaching
i30(GD)	2013	General	Smart Key Unit	Version Information	
i30(GD)	2013	General	Smart Key Unit	Read Fault Code	
i30(GD)	2013	General	Smart Key Unit	Clear Fault Memory	
i30(GD)	2013	General	Smart Key Unit	Read Data Stream	
i30(GD)	2013	General	Smart Key Unit	Actuation Test	
i30(GD)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(GD)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
i30(GD)	2013	General	Smart Key Unit	Special Function	SMK Status Information
i30(GD)	2013	General	Smart Key Unit	Special Function	ESCL Status Information
i30(GD)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
i30(GD)	2013	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(GD)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(GD)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
i30(GD)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(GD)	2013	General	Transmitter Code Saving	Read Data Stream	
i30(GD)	2013	General	Transmitter Code Saving	Special Function	Code Saving
i30(GD)	2013	General	ECM(Engine Control Module)	Read FreezeData	
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i30(GD)	2013	General	ESP(Electronic Stability Program)	Version Information	
i30(GD)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
i30(GD)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	
i30(GD)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
i30(GD)	2013	General	ESP(Electronic Stability Program)	Actuation Test	
i30(GD)	2013	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
i30(GD)	2013	General	ESP(Electronic Stability Program)	Special Function	Variant Coding
i30(GD)	2013	General	EPB(Electrical Parking Brake)	Version Information	
i30(GD)	2013	General	EPB(Electrical Parking Brake)	Read Fault Code	
i30(GD)	2013	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
i30(GD)	2013	General	EPB(Electrical Parking Brake)	Read Data Stream	
i30(GD)	2013	General	EPB(Electrical Parking Brake)	Actuation Test	
i30(GD)	2013	General	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
i30(GD)	2013	General	EPB(Electrical Parking Brake)	Special Function	G-Sensor Calibration
i30(GD)	2013	General	EPB(Electrical Parking Brake)	Special Function	Brake Pad Change
i30(GD)	2013	General	TCM(Transmission Control Module)(ISG+)	Version Information	
i30(GD)	2013	General	TCM(Transmission Control Module)(ISG+)	Read Fault Code	

model	year	area	system	function	subfunction
i30(GD)	2013	General	TCM(Transmission Control Module)(ISG+)	Clear Fault Memory	
i30(GD)	2013	General	TCM(Transmission Control Module)(ISG+)	Read Data Stream	
i30(GD)	2013	General	TCM(Transmission Control Module)(ISG+)	Read FreezeData	
i30(GD)	2013	General	TCM(Transmission Control Module)(ISG+)	Actuation Test	
i30(GD)	2013	General	TCM(Transmission Control Module)(ISG+)	Special Function	Resetting Auto T/A Values
i30(GD)	2013	General	TCM(Transmission Control Module)(ISG+)	Special Function	AT Adaptation Mode
i30(GD)	2013	General	Airbag(Event #1)	Version Information	
i30(GD)	2013	General	Airbag(Event #1)	Read Fault Code	
i30(GD)	2013	General	Airbag(Event #1)	Clear Fault Memory	
i30(GD)	2013	General	Airbag(Event #1)	Read Data Stream	
i30(GD)	2013	General	Airbag(Event #1)	Special Function	ACU Variant Coding
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30(GD)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(GDe)	2017	General	ECM(Engine Control Module)	Version Information	
i30(GDe)	2017	General	ECM(Engine Control Module)	Read Fault Code	
i30(GDe)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(GDe)	2017	General	ECM(Engine Control Module)	Read Data Stream	
i30(GDe)	2017	General	ECM(Engine Control Module)	Actuation Test	
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(GDe)	2017	General	Electronic Stability Program	Version Information	
i30(GDe)	2017	General	Electronic Stability Program	Read Fault Code	
i30(GDe)	2017	General	Electronic Stability Program	Clear Fault Memory	

model	year	area	system	function	subfunction
i30(GDe)	2017	General	Electronic Stability Program	Read Data Stream	
i30(GDe)	2017	General	Electronic Stability Program	Actuation Test	
i30(GDe)	2017	General	Electronic Stability Program	Special Function	Auto Detected Configuration Reset(FSP/ESC/Only)
i30(GDe)	2017	General	Electronic Stability Program	Special Function	HCU Air Bleeding Mode
i30(GDe)	2017	General	Electronic Stability Program	Special Function	Variant Coding
i30(GDe)	2017	General	Electric Parking Brake	Version Information	
i30(GDe)	2017	General	Electric Parking Brake	Read Fault Code	
i30(GDe)	2017	General	Electric Parking Brake	Clear Fault Memory	
i30(GDe)	2017	General	Electric Parking Brake	Read Data Stream	
i30(GDe)	2017	General	Electric Parking Brake	Actuation Test	
i30(GDe)	2017	General	Electric Parking Brake	Special Function	EPB Variant Coding
i30(GDe)	2017	General	Electric Parking Brake	Special Function	G-Sensor Calibration
i30(GDe)	2017	General	Electric Parking Brake	Special Function	Brake Pad Change
i30(GDe)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(GDe)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(GDe)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(GDe)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(GDe)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i30(GDe)	2017	General	AC(Air Conditioning)	Version Information	
i30(GDe)	2017	General	AC(Air Conditioning)	Read Fault Code	
i30(GDe)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
i30(GDe)	2017	General	AC(Air Conditioning)	Read Data Stream	
i30(GDe)	2017	General	AC(Air Conditioning)	Actuation Test	
i30(GDe)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30(GDe)	2017	General	BCM(Body Control Module)	Version Information	
i30(GDe)	2017	General	BCM(Body Control Module)	Read Fault Code	
i30(GDe)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
i30(GDe)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding

model	year	area	system	function	subfunction
i30(GDe)	2017	General	BCM(Body Control Module)	Read Data Stream	
i30(GDe)	2017	General	BCM(Body Control Module)	Actuation Test	
i30(GDe)	2017	General	BCM(Body Control Module)	Special Function	User Option
i30(GDe)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30(GDe)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(GDe)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(GDe)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(GDe)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(GDe)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(GDe)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(GDe)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(GDe)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(GDe)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(GDe)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i30(GDe)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i30(GDe)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i30(GDe)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
i30(GDe)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
i30(GDe)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
i30(GDe)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
i30(GDe)	2017	General	EPS(Electronic Power Steering)	Version Information	
i30(GDe)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(GDe)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(GDe)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(GDe)	2017	General	EPS(Electronic Power Steering)	Read FreezeData	
i30(GDe)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
i30(GDe)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(GDe)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)

model	year	area	system	function	subfunction
i30(GDe)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
i30(GDe)	2017	General	Smart Key Unit	Version Information	
i30(GDe)	2017	General	Smart Key Unit	Read Fault Code	
i30(GDe)	2017	General	Smart Key Unit	Clear Fault Memory	
i30(GDe)	2017	General	Smart Key Unit	Read Data Stream	
i30(GDe)	2017	General	Smart Key Unit	Actuation Test	
i30(GDe)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(GDe)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
i30(GDe)	2017	General	Smart Key Unit	Special Function	SMK Status Information
i30(GDe)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
i30(GDe)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(GDe)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(GDe)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(GDe)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
i30(GDe)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(GDe)	2017	General	Lane Departure Warning System	Version Information	
i30(GDe)	2017	General	Lane Departure Warning System	Read Fault Code	
i30(GDe)	2017	General	Lane Departure Warning System	Clear Fault Memory	
i30(GDe)	2017	General	Lane Departure Warning System	Read Data Stream	
i30(GDe)	2017	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
i30(GDe)	2017	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
i30(GDe)	2017	General	Smart Parking Assist System	Version Information	
i30(GDe)	2017	General	Smart Parking Assist System	Read Fault Code	
i30(GDe)	2017	General	Smart Parking Assist System	Clear Fault Memory	
i30(GDe)	2017	General	Smart Parking Assist System	Read Data Stream	
i30(GDe)	2017	General	Smart Parking Assist System	Actuation Test	
i30(GDe)	2017	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i30(GDe)	2017	General	IMM(Immobilizer)	Read Fault Code	

model	year	area	system	function	subfunction
i30(GDe)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
i30(GDe)	2017	General	IMM(Immobilizer)	Read Data Stream	
i30(GDe)	2017	General	IMM(Immobilizer)	Special Function	Password
i30(GDe)	2017	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
i30(GDe)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(GDe)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(GDe)	2017	General	IMM(Immobilizer)	Special Function	Teaching
i30(GDe)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
i30(GDe)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i30(GDe)	2017	General	TCM(Transmission Control Module)	Version Information	
i30(GDe)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
i30(GDe)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(GDe)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
i30(GDe)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
i30(GDe)	2017	General	TCM(Transmission Control Module)	Actuation Test	
i30(GDe)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(GDe)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(GDe)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	Lambda
i30(GDe)	2017	General	ECM(Engine Control Module)	Special Function	Sensor/LSU Cleaning
i30(GDe)	2016	General	ECM(Engine Control Module)	Version Information	
i30(GDe)	2016	General	ECM(Engine Control Module)	Read Fault Code	
i30(GDe)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(GDe)	2016	General	ECM(Engine Control Module)	Read Data Stream	
i30(GDe)	2016	General	ECM(Engine Control Module)	Actuation Test	
i30(GDe)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(GDe)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove

model	year	area	system	function	subfunction
i30(GDe)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(GDe)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(GDe)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i30(GDe)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(GDe)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(GDe)	2016	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning
i30(GDe)	2016	General	ABS(Anti-lock Braking System)	Version Information	
i30(GDe)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(GDe)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(GDe)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(GDe)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(GDe)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
i30(GDe)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(GDe)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i30(GDe)	2016	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
i30(GDe)	2016	General	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
i30(GDe)	2016	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change
i30(GDe)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(GDe)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(GDe)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(GDe)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(GDe)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i30(GDe)	2016	General	AC(Air Conditioning)	Version Information	
i30(GDe)	2016	General	AC(Air Conditioning)	Read Fault Code	
i30(GDe)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
i30(GDe)	2016	General	AC(Air Conditioning)	Read Data Stream	
i30(GDe)	2016	General	AC(Air Conditioning)	Actuation Test	
i30(GDe)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)

model	year	area	system	function	subfunction
i30(GDe)	2016	General	BCM(Body Control Module)	Version Information	
i30(GDe)	2016	General	BCM(Body Control Module)	Read Fault Code	
i30(GDe)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
i30(GDe)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(GDe)	2016	General	BCM(Body Control Module)	Read Data Stream	
i30(GDe)	2016	General	BCM(Body Control Module)	Actuation Test	
i30(GDe)	2016	General	BCM(Body Control Module)	Special Function	User Option
i30(GDe)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30(GDe)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(GDe)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(GDe)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(GDe)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(GDe)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(GDe)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(GDe)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(GDe)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(GDe)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(GDe)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i30(GDe)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i30(GDe)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i30(GDe)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
i30(GDe)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
i30(GDe)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
i30(GDe)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
i30(GDe)	2016	General	EPS(Electronic Power Steering)	Version Information	
i30(GDe)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(GDe)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(GDe)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(GDe)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	

model	year	area	system	function	subfunction
i30(GDe)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
i30(GDe)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(GDe)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
i30(GDe)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
i30(GDe)	2016	General	Smart Key Unit	Version Information	
i30(GDe)	2016	General	Smart Key Unit	Read Fault Code	
i30(GDe)	2016	General	Smart Key Unit	Clear Fault Memory	
i30(GDe)	2016	General	Smart Key Unit	Read Data Stream	
i30(GDe)	2016	General	Smart Key Unit	Actuation Test	
i30(GDe)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(GDe)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
i30(GDe)	2016	General	Smart Key Unit	Special Function	SMK Status Information
i30(GDe)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
i30(GDe)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(GDe)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(GDe)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(GDe)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
i30(GDe)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(GDe)	2016	General	Lane Departure Warning System	Version Information	
i30(GDe)	2016	General	Lane Departure Warning System	Read Fault Code	
i30(GDe)	2016	General	Lane Departure Warning System	Clear Fault Memory	
i30(GDe)	2016	General	Lane Departure Warning System	Read Data Stream	
i30(GDe)	2016	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
i30(GDe)	2016	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
i30(GDe)	2016	General	Smart Parking Assist System	Version Information	
i30(GDe)	2016	General	Smart Parking Assist System	Read Fault Code	
i30(GDe)	2016	General	Smart Parking Assist System	Clear Fault Memory	
i30(GDe)	2016	General	Smart Parking Assist System	Read Data Stream	

model	year	area	system	function	subfunction
i30(GDe)	2016	General	Smart Parking Assist System	Actuation Test	
i30(GDe)	2016	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i30(GDe)	2016	General	IMM(Immobilizer)	Read Fault Code	
i30(GDe)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
i30(GDe)	2016	General	IMM(Immobilizer)	Read Data Stream	
i30(GDe)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30(GDe)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(GDe)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(GDe)	2016	General	IMM(Immobilizer)	Special Function	Teaching
i30(GDe)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
i30(GDe)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i30(GDe)	2016	General	TCM(Transmission Control Module)	Version Information	
i30(GDe)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
i30(GDe)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(GDe)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
i30(GDe)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
i30(GDe)	2016	General	TCM(Transmission Control Module)	Actuation Test	
i30(GDe)	2016	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
i30(GDe)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(GDe)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(GDe)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(GDe)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(GDe)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(GDe)	2015	General	ECM(Engine Control Module)	Version Information	
i30(GDe)	2015	General	ECM(Engine Control Module)	Read Fault Code	
i30(GDe)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(GDe)	2015	General	ECM(Engine Control Module)	Read Data Stream	
i30(GDe)	2015	General	ECM(Engine Control Module)	Actuation Test	
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(GDe)	2015	General	TCM(Transmission Control Module)	Version Information	
i30(GDe)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
i30(GDe)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(GDe)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
i30(GDe)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
i30(GDe)	2015	General	TCM(Transmission Control Module)	Actuation Test	
i30(GDe)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(GDe)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(GDe)	2015	General	ABS(Anti-lock Braking System)	Version Information	
i30(GDe)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(GDe)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(GDe)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(GDe)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(GDe)	2015	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
i30(GDe)	2015	General	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
i30(GDe)	2015	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change
i30(GDe)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i30(GDe)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i30(GDe)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(GDe)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(GDe)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(GDe)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(GDe)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
i30(GDe)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i30(GDe)	2015	General	AC(Air Conditioning)	Version Information	
i30(GDe)	2015	General	AC(Air Conditioning)	Read Fault Code	
i30(GDe)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
i30(GDe)	2015	General	AC(Air Conditioning)	Read Data Stream	
i30(GDe)	2015	General	AC(Air Conditioning)	Actuation Test	
i30(GDe)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30(GDe)	2015	General	BCM(Body Control Module)	Version Information	
i30(GDe)	2015	General	BCM(Body Control Module)	Read Fault Code	
i30(GDe)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
i30(GDe)	2015	General	BCM(Body Control Module)	Read Data Stream	
i30(GDe)	2015	General	BCM(Body Control Module)	Actuation Test	
i30(GDe)	2015	General	BCM(Body Control Module)	Special Function	User Option
i30(GDe)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(GDe)	2015	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30(GDe)	2015	General	EPS(Electronic Power Steering)	Version Information	
i30(GDe)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(GDe)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(GDe)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(GDe)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(GDe)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(GDe)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30(GDe)	2015	General	Adaptive Front Lighting System	Version Information	
i30(GDe)	2015	General	Adaptive Front Lighting System	Read Fault Code	
i30(GDe)	2015	General	Adaptive Front Lighting System	Clear Fault Memory	
i30(GDe)	2015	General	Adaptive Front Lighting System	Read Data Stream	
i30(GDe)	2015	General	Adaptive Front Lighting System	Actuation Test	
i30(GDe)	2015	General	Adaptive Front Lighting System	Special Function	Calibration

model	year	area	system	function	subfunction
i30(GDe)	2015	General	Adaptive Front Lighting System	Special Function	Parameter Download
i30(GDe)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(GDe)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(GDe)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(GDe)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(GDe)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(GDe)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(GDe)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(GDe)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(GDe)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(GDe)	2015	General	IMM(Immobilizer)	Read Fault Code	
i30(GDe)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
i30(GDe)	2015	General	IMM(Immobilizer)	Read Data Stream	
i30(GDe)	2015	General	IMM(Immobilizer)	Special Function	Password
i30(GDe)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Changing
i30(GDe)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(GDe)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(GDe)	2015	General	IMM(Immobilizer)	Special Function	Teaching
i30(GDe)	2015	General	Smart Key Unit	Version Information	
i30(GDe)	2015	General	Smart Key Unit	Read Fault Code	
i30(GDe)	2015	General	Smart Key Unit	Clear Fault Memory	
i30(GDe)	2015	General	Smart Key Unit	Read Data Stream	
i30(GDe)	2015	General	Smart Key Unit	Actuation Test	
i30(GDe)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(GDe)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
i30(GDe)	2015	General	Smart Key Unit	Special Function	SMK Status Information
i30(GDe)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
i30(GDe)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(GDe)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(GDe)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
i30(GDe)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
i30(GDe)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(GDe)	2015	General	Transmitter Code Saving	Read Data Stream	
i30(GDe)	2015	General	Transmitter Code Saving	Special Function	Code Saving
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i30(GDe)	2015	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i30(GDe)	2014	General	ECM(Engine Control Module)	Version Information	
i30(GDe)	2014	General	ECM(Engine Control Module)	Read Fault Code	
i30(GDe)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(GDe)	2014	General	ECM(Engine Control Module)	Read Data Stream	
i30(GDe)	2014	General	ECM(Engine Control Module)	Actuation Test	
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(GDe)	2014	General	TCM(Transmission Control Module)	Version Information	
i30(GDe)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
i30(GDe)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(GDe)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
i30(GDe)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
i30(GDe)	2014	General	TCM(Transmission Control Module)	Actuation Test	
i30(GDe)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(GDe)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode

model	year	area	system	function	subfunction
i30(GDe)	2014	General	ABS(Anti-lock Braking System)	Version Information	
i30(GDe)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(GDe)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(GDe)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(GDe)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(GDe)	2014	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
i30(GDe)	2014	General	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
i30(GDe)	2014	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change
i30(GDe)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i30(GDe)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i30(GDe)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(GDe)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(GDe)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(GDe)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(GDe)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(GDe)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i30(GDe)	2014	General	AC(Air Conditioning)	Version Information	
i30(GDe)	2014	General	AC(Air Conditioning)	Read Fault Code	
i30(GDe)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
i30(GDe)	2014	General	AC(Air Conditioning)	Read Data Stream	
i30(GDe)	2014	General	AC(Air Conditioning)	Actuation Test	
i30(GDe)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30(GDe)	2014	General	BCM(Body Control Module)	Version Information	
i30(GDe)	2014	General	BCM(Body Control Module)	Read Fault Code	
i30(GDe)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
i30(GDe)	2014	General	BCM(Body Control Module)	Read Data Stream	
i30(GDe)	2014	General	BCM(Body Control Module)	Actuation Test	
i30(GDe)	2014	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
i30(GDe)	2014	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(GDe)	2014	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30(GDe)	2014	General	EPS(Electronic Power Steering)	Version Information	
i30(GDe)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(GDe)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(GDe)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(GDe)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(GDe)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(GDe)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30(GDe)	2014	General	Adaptive Front Lighting System	Version Information	
i30(GDe)	2014	General	Adaptive Front Lighting System	Read Fault Code	
i30(GDe)	2014	General	Adaptive Front Lighting System	Clear Fault Memory	
i30(GDe)	2014	General	Adaptive Front Lighting System	Read Data Stream	
i30(GDe)	2014	General	Adaptive Front Lighting System	Actuation Test	
i30(GDe)	2014	General	Adaptive Front Lighting System	Special Function	Calibration
i30(GDe)	2014	General	Adaptive Front Lighting System	Special Function	Parameter Download
i30(GDe)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(GDe)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(GDe)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(GDe)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(GDe)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(GDe)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(GDe)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(GDe)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(GDe)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(GDe)	2014	General	IMM(Immobilizer)	Read Fault Code	
i30(GDe)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
i30(GDe)	2014	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
i30(GDe)	2014	General	IMM(Immobilizer)	Special Function	Password
i30(GDe)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Changing
i30(GDe)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(GDe)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(GDe)	2014	General	IMM(Immobilizer)	Special Function	Teaching
i30(GDe)	2014	General	Smart Key Unit	Version Information	
i30(GDe)	2014	General	Smart Key Unit	Read Fault Code	
i30(GDe)	2014	General	Smart Key Unit	Clear Fault Memory	
i30(GDe)	2014	General	Smart Key Unit	Read Data Stream	
i30(GDe)	2014	General	Smart Key Unit	Actuation Test	
i30(GDe)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(GDe)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
i30(GDe)	2014	General	Smart Key Unit	Special Function	SMK Status Information
i30(GDe)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
i30(GDe)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(GDe)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(GDe)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(GDe)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
i30(GDe)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(GDe)	2014	General	Transmitter Code Saving	Read Data Stream	
i30(GDe)	2014	General	Transmitter Code Saving	Special Function	Code Saving
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i30(GDe)	2014	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i30(GDe)	2013	General	ECM(Engine Control Module)	Version Information	
i30(GDe)	2013	General	ECM(Engine Control Module)	Read Fault Code	
i30(GDe)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
i30(GDe)	2013	General	ECM(Engine Control Module)	Read Data Stream	
i30(GDe)	2013	General	ECM(Engine Control Module)	Actuation Test	
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(GDe)	2013	General	TCM(Transmission Control Module)	Version Information	
i30(GDe)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
i30(GDe)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(GDe)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
i30(GDe)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
i30(GDe)	2013	General	TCM(Transmission Control Module)	Actuation Test	
i30(GDe)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(GDe)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(GDe)	2013	General	ABS(Anti-lock Braking System)	Version Information	
i30(GDe)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(GDe)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(GDe)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(GDe)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(GDe)	2013	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
i30(GDe)	2013	General	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
i30(GDe)	2013	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change
i30(GDe)	2013	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i30(GDe)	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i30(GDe)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(GDe)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
i30(GDe)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(GDe)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(GDe)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(GDe)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i30(GDe)	2013	General	AC(Air Conditioning)	Version Information	
i30(GDe)	2013	General	AC(Air Conditioning)	Read Fault Code	
i30(GDe)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
i30(GDe)	2013	General	AC(Air Conditioning)	Read Data Stream	
i30(GDe)	2013	General	AC(Air Conditioning)	Actuation Test	
i30(GDe)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30(GDe)	2013	General	BCM(Body Control Module)	Version Information	
i30(GDe)	2013	General	BCM(Body Control Module)	Read Fault Code	
i30(GDe)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
i30(GDe)	2013	General	BCM(Body Control Module)	Read Data Stream	
i30(GDe)	2013	General	BCM(Body Control Module)	Actuation Test	
i30(GDe)	2013	General	BCM(Body Control Module)	Special Function	User Option
i30(GDe)	2013	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(GDe)	2013	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30(GDe)	2013	General	EPS(Electronic Power Steering)	Version Information	
i30(GDe)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(GDe)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(GDe)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(GDe)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(GDe)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(GDe)	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30(GDe)	2013	General	Adaptive Front Lighting System	Version Information	
i30(GDe)	2013	General	Adaptive Front Lighting System	Read Fault Code	
i30(GDe)	2013	General	Adaptive Front Lighting System	Clear Fault Memory	

model	year	area	system	function	subfunction
i30(GDe)	2013	General	Adaptive Front Lighting System	Read Data Stream	
i30(GDe)	2013	General	Adaptive Front Lighting System	Actuation Test	
i30(GDe)	2013	General	Adaptive Front Lighting System	Special Function	Calibration
i30(GDe)	2013	General	Adaptive Front Lighting System	Special Function	Parameter Download
i30(GDe)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30(GDe)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30(GDe)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30(GDe)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30(GDe)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30(GDe)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30(GDe)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30(GDe)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30(GDe)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30(GDe)	2013	General	IMM(Immobilizer)	Read Fault Code	
i30(GDe)	2013	General	IMM(Immobilizer)	Clear Fault Memory	
i30(GDe)	2013	General	IMM(Immobilizer)	Read Data Stream	
i30(GDe)	2013	General	IMM(Immobilizer)	Special Function	Password
i30(GDe)	2013	General	IMM(Immobilizer)	Special Function	Teaching/Changing
i30(GDe)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(GDe)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(GDe)	2013	General	IMM(Immobilizer)	Special Function	Teaching
i30(GDe)	2013	General	Smart Key Unit	Version Information	
i30(GDe)	2013	General	Smart Key Unit	Read Fault Code	
i30(GDe)	2013	General	Smart Key Unit	Clear Fault Memory	
i30(GDe)	2013	General	Smart Key Unit	Read Data Stream	
i30(GDe)	2013	General	Smart Key Unit	Actuation Test	
i30(GDe)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(GDe)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
i30(GDe)	2013	General	Smart Key Unit	Special Function	SMK Status Information
i30(GDe)	2013	General	Smart Key Unit	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
i30(GDe)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(GDe)	2013	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(GDe)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(GDe)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
i30(GDe)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(GDe)	2013	General	Transmitter Code Saving	Read Data Stream	
i30(GDe)	2013	General	Transmitter Code Saving	Special Function	Code Saving
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
i30(GDe)	2013	General	ECM(Engine Control Module)	Special Function	ECU Initialization
i30(PD)	2018	General	ECM(Engine Control Module)	Version Information	
i30(PD)	2018	General	ECM(Engine Control Module)	Read Fault Code	
i30(PD)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(PD)	2018	General	ECM(Engine Control Module)	Read Data Stream	
i30(PD)	2018	General	ECM(Engine Control Module)	Actuation Test	
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(PD)	2018	General	TCM(Transmission Control Module)	Version Information	
i30(PD)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
i30(PD)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(PD)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
i30(PD)	2018	General	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
i30(PD)	2018	General	TCM(Transmission Control Module)	Actuation Test	
i30(PD)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(PD)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(PD)	2018	General	ABS(Anti-lock Braking System)	Version Information	
i30(PD)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(PD)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(PD)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(PD)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(PD)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i30(PD)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i30(PD)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(PD)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
i30(PD)	2018	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
i30(PD)	2018	General	Electric Parking Brake	Version Information	
i30(PD)	2018	General	Electric Parking Brake	Read Fault Code	
i30(PD)	2018	General	Electric Parking Brake	Clear Fault Memory	
i30(PD)	2018	General	Electric Parking Brake	Read Data Stream	
i30(PD)	2018	General	Electric Parking Brake	Actuation Test	
i30(PD)	2018	General	SCC/AEB	Version Information	
i30(PD)	2018	General	SCC/AEB	Read Fault Code	
i30(PD)	2018	General	SCC/AEB	Clear Fault Memory	
i30(PD)	2018	General	SCC/AEB	Read Data Stream	
i30(PD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(PD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(PD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(PD)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(PD)	2018	General	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
i30(PD)	2018	General	AC(Air Conditioning)	Read Fault Code	
i30(PD)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
i30(PD)	2018	General	AC(Air Conditioning)	Read Data Stream	
i30(PD)	2018	General	AC(Air Conditioning)	Actuation Test	
i30(PD)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30(PD)	2018	General	BCM(Body Control Module)	Version Information	
i30(PD)	2018	General	BCM(Body Control Module)	Read Fault Code	
i30(PD)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
i30(PD)	2018	General	BCM(Body Control Module)	Read Data Stream	
i30(PD)	2018	General	BCM(Body Control Module)	Actuation Test	
i30(PD)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(PD)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30(PD)	2018	General	BCM(Body Control Module)	Special Function	User Option
i30(PD)	2018	General	BCM(Body Control Module)	Special Function	TPMS TEST
i30(PD)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
i30(PD)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
i30(PD)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
i30(PD)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i30(PD)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i30(PD)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i30(PD)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
i30(PD)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
i30(PD)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
i30(PD)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
i30(PD)	2018	General	EPS(Electronic Power Steering)	Version Information	
i30(PD)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(PD)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(PD)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
i30(PD)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(PD)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(PD)	2018	General	Smart Key Unit	Version Information	
i30(PD)	2018	General	Smart Key Unit	Read Fault Code	
i30(PD)	2018	General	Smart Key Unit	Clear Fault Memory	
i30(PD)	2018	General	Smart Key Unit	Read Data Stream	
i30(PD)	2018	General	Smart Key Unit	Actuation Test	
i30(PD)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(PD)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(PD)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
i30(PD)	2018	General	Smart Key Unit	Special Function	SMK Status Information
i30(PD)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
i30(PD)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(PD)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(PD)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
i30(PD)	2018	General	Smart Key Unit	Special Function	EcsL Enable Output Check
i30(PD)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(PD)	2018	General	Blind Spot Detection	Version Information	
i30(PD)	2018	General	Blind Spot Detection	Read Fault Code	
i30(PD)	2018	General	Blind Spot Detection	Clear Fault Memory	
i30(PD)	2018	General	Blind Spot Detection	Read Data Stream	
i30(PD)	2018	General	Blind Spot Detection	Actuation Test	
i30(PD)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
i30(PD)	2018	General	Multi Function Camera	Version Information	
i30(PD)	2018	General	Multi Function Camera	Read Fault Code	
i30(PD)	2018	General	Multi Function Camera	Clear Fault Memory	
i30(PD)	2018	General	Multi Function Camera	Read Data Stream	
i30(PD)	2018	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
i30(PD)	2018	General	Multi Function Camera	Special Function	SPTAC Calibration

model	year	area	system	function	subfunction
i30(PD)	2018	General	Parking Guide System	Version Information	
i30(PD)	2018	General	Parking Guide System	Read Fault Code	
i30(PD)	2018	General	Parking Guide System	Clear Fault Memory	
i30(PD)	2018	General	Parking Guide System	Read Data Stream	
i30(PD)	2018	General	Amplifier	Special Function	AMP Operation Test
i30(PD)	2018	General	Telematics Unit	Version Information	
i30(PD)	2018	General	Telematics Unit	Read Fault Code	
i30(PD)	2018	General	Telematics Unit	Clear Fault Memory	
i30(PD)	2018	General	Integrated Gateway Power Module	Version Information	
i30(PD)	2018	General	Integrated Gateway Power Module	Read Fault Code	
i30(PD)	2018	General	Integrated Gateway Power Module	Clear Fault Memory	
i30(PD)	2018	General	Integrated Gateway Power Module	Read Data Stream	
i30(PD)	2018	General	Integrated Gateway Power Module	Actuation Test	
i30(PD)	2018	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
i30(PD)	2018	General	Integrated Gateway Power Module	Special Function	User Option
i30(PD)	2018	General	IMM(Immobilizer)	Read Fault Code	
i30(PD)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
i30(PD)	2018	General	IMM(Immobilizer)	Read Data Stream	
i30(PD)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30(PD)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(PD)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(PD)	2018	General	IMM(Immobilizer)	Special Function	Teaching
i30(PD)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
i30(PD)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i30(PD)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm

model	year	area	system	function	subfunction
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(PD)	2018	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/ECU Cleaning
i30(PDE)	2018	General	ECM(Engine Control Module)	Version Information	
i30(PDE)	2018	General	ECM(Engine Control Module)	Read Fault Code	
i30(PDE)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(PDE)	2018	General	ECM(Engine Control Module)	Read Data Stream	
i30(PDE)	2018	General	ECM(Engine Control Module)	Actuation Test	
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(PDE)	2018	General	TCM(Transmission Control Module)	Version Information	
i30(PDE)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
i30(PDE)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(PDE)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
i30(PDE)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
i30(PDE)	2018	General	TCM(Transmission Control Module)	Actuation Test	
i30(PDE)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(PDE)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(PDE)	2018	General	ABS(Anti-lock Braking System)	Version Information	
i30(PDE)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(PDE)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(PDE)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(PDE)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(PDE)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i30(PDE)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)

model	year	area	system	function	subfunction
i30(PDE)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(PDE)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
i30(PDE)	2018	General	ABS(Anti-lock Braking System)	Special Function	Steering/FSP/ESC Sensor Calibration
i30(PDE)	2018	General	Electric Parking Brake	Version Information	
i30(PDE)	2018	General	Electric Parking Brake	Read Fault Code	
i30(PDE)	2018	General	Electric Parking Brake	Clear Fault Memory	
i30(PDE)	2018	General	Electric Parking Brake	Read Data Stream	
i30(PDE)	2018	General	Electric Parking Brake	Actuation Test	
i30(PDE)	2018	General	SCC/AEB	Version Information	
i30(PDE)	2018	General	SCC/AEB	Read Fault Code	
i30(PDE)	2018	General	SCC/AEB	Clear Fault Memory	
i30(PDE)	2018	General	SCC/AEB	Read Data Stream	
i30(PDE)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(PDE)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(PDE)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(PDE)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(PDE)	2018	General	AC(Air Conditioning)	Version Information	
i30(PDE)	2018	General	AC(Air Conditioning)	Read Fault Code	
i30(PDE)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
i30(PDE)	2018	General	AC(Air Conditioning)	Read Data Stream	
i30(PDE)	2018	General	AC(Air Conditioning)	Actuation Test	
i30(PDE)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Turn)
i30(PDE)	2018	General	BCM(Body Control Module)	Version Information	
i30(PDE)	2018	General	BCM(Body Control Module)	Read Fault Code	
i30(PDE)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
i30(PDE)	2018	General	BCM(Body Control Module)	Read Data Stream	
i30(PDE)	2018	General	BCM(Body Control Module)	Actuation Test	
i30(PDE)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding

model	year	area	system	function	subfunction
i30(PDE)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30(PDE)	2018	General	BCM(Body Control Module)	Special Function	User Option
i30(PDE)	2018	General	BCM(Body Control Module)	Special Function	TPMS TEST
i30(PDE)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
i30(PDE)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
i30(PDE)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
i30(PDE)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
i30(PDE)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i30(PDE)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i30(PDE)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i30(PDE)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
i30(PDE)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
i30(PDE)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
i30(PDE)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
i30(PDE)	2018	General	EPS(Electronic Power Steering)	Version Information	
i30(PDE)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(PDE)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(PDE)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(PDE)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(PDE)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(PDE)	2018	General	Smart Key Unit	Version Information	
i30(PDE)	2018	General	Smart Key Unit	Read Fault Code	
i30(PDE)	2018	General	Smart Key Unit	Clear Fault Memory	
i30(PDE)	2018	General	Smart Key Unit	Read Data Stream	
i30(PDE)	2018	General	Smart Key Unit	Actuation Test	
i30(PDE)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(PDE)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(PDE)	2018	General	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
i30(PDE)	2018	General	Smart Key Unit	Special Function	SMK Status Information
i30(PDE)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
i30(PDE)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(PDE)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(PDE)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
i30(PDE)	2018	General	Smart Key Unit	Special Function	Ecls Enable Output Check
i30(PDE)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(PDE)	2018	General	Blind Spot Detection	Version Information	
i30(PDE)	2018	General	Blind Spot Detection	Read Fault Code	
i30(PDE)	2018	General	Blind Spot Detection	Clear Fault Memory	
i30(PDE)	2018	General	Blind Spot Detection	Read Data Stream	
i30(PDE)	2018	General	Blind Spot Detection	Actuation Test	
i30(PDE)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
i30(PDE)	2018	General	Multi Function Camera	Version Information	
i30(PDE)	2018	General	Multi Function Camera	Read Fault Code	
i30(PDE)	2018	General	Multi Function Camera	Clear Fault Memory	
i30(PDE)	2018	General	Multi Function Camera	Read Data Stream	
i30(PDE)	2018	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
i30(PDE)	2018	General	Multi Function Camera	Special Function	SPTAC Calibration
i30(PDE)	2018	General	Parking Guide System	Version Information	
i30(PDE)	2018	General	Parking Guide System	Read Fault Code	
i30(PDE)	2018	General	Parking Guide System	Clear Fault Memory	
i30(PDE)	2018	General	Parking Guide System	Read Data Stream	
i30(PDE)	2018	General	Active Air Flap	Version Information	
i30(PDE)	2018	General	Active Air Flap	Read Fault Code	
i30(PDE)	2018	General	Active Air Flap	Clear Fault Memory	
i30(PDE)	2018	General	Active Air Flap	Read Data Stream	
i30(PDE)	2018	General	Active Air Flap	Actuation Test	
i30(PDE)	2018	General	Telematics Unit	Version Information	

model	year	area	system	function	subfunction
i30(PDE)	2018	General	Telematics Unit	Read Fault Code	
i30(PDE)	2018	General	Telematics Unit	Clear Fault Memory	
i30(PDE)	2018	General	Integrated Gateway Power Module	Version Information	
i30(PDE)	2018	General	Integrated Gateway Power Module	Read Fault Code	
i30(PDE)	2018	General	Integrated Gateway Power Module	Clear Fault Memory	
i30(PDE)	2018	General	Integrated Gateway Power Module	Read Data Stream	
i30(PDE)	2018	General	Integrated Gateway Power Module	Actuation Test	
i30(PDE)	2018	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
i30(PDE)	2018	General	Integrated Gateway Power Module	Special Function	User Option
i30(PDE)	2018	General	IMM(Immobilizer)	Read Fault Code	
i30(PDE)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
i30(PDE)	2018	General	IMM(Immobilizer)	Read Data Stream	
i30(PDE)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
i30(PDE)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(PDE)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(PDE)	2018	General	IMM(Immobilizer)	Special Function	Teaching
i30(PDE)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
i30(PDE)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i30(PDE)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(PDE)	2018	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning
i30(PDE)	2017	General	ECM(Engine Control Module)	Version Information	
i30(PDE)	2017	General	ECM(Engine Control Module)	Read Fault Code	
i30(PDE)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
i30(PDE)	2017	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
i30(PDE)	2017	General	ECM(Engine Control Module)	Actuation Test	
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30(PDE)	2017	General	TCM(Transmission Control Module)	Version Information	
i30(PDE)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
i30(PDE)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30(PDE)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
i30(PDE)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
i30(PDE)	2017	General	TCM(Transmission Control Module)	Actuation Test	
i30(PDE)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30(PDE)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i30(PDE)	2017	General	ABS(Anti-lock Braking System)	Version Information	
i30(PDE)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30(PDE)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30(PDE)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30(PDE)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
i30(PDE)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i30(PDE)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i30(PDE)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30(PDE)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
i30(PDE)	2017	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
i30(PDE)	2017	General	Electric Parking Brake	Version Information	
i30(PDE)	2017	General	Electric Parking Brake	Read Fault Code	

model	year	area	system	function	subfunction
i30(PDE)	2017	General	Electric Parking Brake	Clear Fault Memory	
i30(PDE)	2017	General	Electric Parking Brake	Read Data Stream	
i30(PDE)	2017	General	Electric Parking Brake	Actuation Test	
i30(PDE)	2017	General	SCC/AEB	Version Information	
i30(PDE)	2017	General	SCC/AEB	Read Fault Code	
i30(PDE)	2017	General	SCC/AEB	Clear Fault Memory	
i30(PDE)	2017	General	SCC/AEB	Read Data Stream	
i30(PDE)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30(PDE)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30(PDE)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30(PDE)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30(PDE)	2017	General	AC(Air Conditioning)	Version Information	
i30(PDE)	2017	General	AC(Air Conditioning)	Read Fault Code	
i30(PDE)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
i30(PDE)	2017	General	AC(Air Conditioning)	Read Data Stream	
i30(PDE)	2017	General	AC(Air Conditioning)	Actuation Test	
i30(PDE)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30(PDE)	2017	General	BCM(Body Control Module)	Version Information	
i30(PDE)	2017	General	BCM(Body Control Module)	Read Fault Code	
i30(PDE)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
i30(PDE)	2017	General	BCM(Body Control Module)	Read Data Stream	
i30(PDE)	2017	General	BCM(Body Control Module)	Actuation Test	
i30(PDE)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30(PDE)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30(PDE)	2017	General	BCM(Body Control Module)	Special Function	User Option
i30(PDE)	2017	General	BCM(Body Control Module)	Special Function	TPMS TEST
i30(PDE)	2017	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
i30(PDE)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
i30(PDE)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
i30(PDE)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
i30(PDE)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i30(PDE)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i30(PDE)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i30(PDE)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
i30(PDE)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
i30(PDE)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
i30(PDE)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
i30(PDE)	2017	General	EPS(Electronic Power Steering)	Version Information	
i30(PDE)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
i30(PDE)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30(PDE)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
i30(PDE)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30(PDE)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30(PDE)	2017	General	Smart Key Unit	Version Information	
i30(PDE)	2017	General	Smart Key Unit	Read Fault Code	
i30(PDE)	2017	General	Smart Key Unit	Clear Fault Memory	
i30(PDE)	2017	General	Smart Key Unit	Read Data Stream	
i30(PDE)	2017	General	Smart Key Unit	Actuation Test	
i30(PDE)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
i30(PDE)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30(PDE)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
i30(PDE)	2017	General	Smart Key Unit	Special Function	SMK Status Information
i30(PDE)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
i30(PDE)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30(PDE)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
i30(PDE)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
i30(PDE)	2017	General	Smart Key Unit	Special Function	Ecls Enable Output Check

model	year	area	system	function	subfunction
i30(PDE)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30(PDE)	2017	General	Blind Spot Detection	Version Information	
i30(PDE)	2017	General	Blind Spot Detection	Read Fault Code	
i30(PDE)	2017	General	Blind Spot Detection	Clear Fault Memory	
i30(PDE)	2017	General	Blind Spot Detection	Read Data Stream	
i30(PDE)	2017	General	Blind Spot Detection	Actuation Test	
i30(PDE)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
i30(PDE)	2017	General	Multi Function Camera	Version Information	
i30(PDE)	2017	General	Multi Function Camera	Read Fault Code	
i30(PDE)	2017	General	Multi Function Camera	Clear Fault Memory	
i30(PDE)	2017	General	Multi Function Camera	Read Data Stream	
i30(PDE)	2017	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
i30(PDE)	2017	General	Multi Function Camera	Special Function	SPTAC Calibration
i30(PDE)	2017	General	Parking Guide System	Version Information	
i30(PDE)	2017	General	Parking Guide System	Read Fault Code	
i30(PDE)	2017	General	Parking Guide System	Clear Fault Memory	
i30(PDE)	2017	General	Parking Guide System	Read Data Stream	
i30(PDE)	2017	General	Active Air Flap	Version Information	
i30(PDE)	2017	General	Active Air Flap	Read Fault Code	
i30(PDE)	2017	General	Active Air Flap	Clear Fault Memory	
i30(PDE)	2017	General	Active Air Flap	Read Data Stream	
i30(PDE)	2017	General	Active Air Flap	Actuation Test	
i30(PDE)	2017	General	Telematics Unit	Version Information	
i30(PDE)	2017	General	Telematics Unit	Read Fault Code	
i30(PDE)	2017	General	Telematics Unit	Clear Fault Memory	
i30(PDE)	2017	General	Integrated Gateway Power Module	Version Information	
i30(PDE)	2017	General	Integrated Gateway Power Module	Read Fault Code	
i30(PDE)	2017	General	Integrated Gateway Power Module	Clear Fault Memory	
i30(PDE)	2017	General	Integrated Gateway Power Module	Read Data Stream	

model	year	area	system	function	subfunction
i30(PDE)	2017	General	Integrated Gateway Power Module	Actuation Test	
i30(PDE)	2017	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
i30(PDE)	2017	General	Integrated Gateway Power Module	Special Function	User Option
i30(PDE)	2017	General	IMM(Immobilizer)	Read Fault Code	
i30(PDE)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
i30(PDE)	2017	General	IMM(Immobilizer)	Read Data Stream	
i30(PDE)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30(PDE)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30(PDE)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30(PDE)	2017	General	IMM(Immobilizer)	Special Function	Teaching
i30(PDE)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
i30(PDE)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i30(PDE)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30(PDE)	2017	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/ECU Cleaning
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Version Information	
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Read Fault Code	
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Read Data Stream	
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Read FreezeData	
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Actuation Test	
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30N(PDEN)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30N(PDEN)	2018	General	ABS(Anti-lock Braking System)	Version Information	
i30N(PDEN)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30N(PDEN)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30N(PDEN)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30N(PDEN)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
i30N(PDEN)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i30N(PDEN)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i30N(PDEN)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30N(PDEN)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
i30N(PDEN)	2018	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
i30N(PDEN)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30N(PDEN)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30N(PDEN)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30N(PDEN)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30N(PDEN)	2018	General	AC(Air Conditioning)	Version Information	
i30N(PDEN)	2018	General	AC(Air Conditioning)	Read Fault Code	
i30N(PDEN)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
i30N(PDEN)	2018	General	AC(Air Conditioning)	Read Data Stream	
i30N(PDEN)	2018	General	AC(Air Conditioning)	Actuation Test	
i30N(PDEN)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i30N(PDEN)	2018	General	BCM(Body Control Module)	Version Information	
i30N(PDEN)	2018	General	BCM(Body Control Module)	Read Fault Code	
i30N(PDEN)	2018	General	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
i30N(PDEN)	2018	General	BCM(Body Control Module)	Read Data Stream	
i30N(PDEN)	2018	General	BCM(Body Control Module)	Actuation Test	
i30N(PDEN)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
i30N(PDEN)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i30N(PDEN)	2018	General	BCM(Body Control Module)	Special Function	User Option
i30N(PDEN)	2018	General	BCM(Body Control Module)	Special Function	TPMS TEST
i30N(PDEN)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
i30N(PDEN)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
i30N(PDEN)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
i30N(PDEN)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
i30N(PDEN)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i30N(PDEN)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i30N(PDEN)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i30N(PDEN)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
i30N(PDEN)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
i30N(PDEN)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
i30N(PDEN)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
i30N(PDEN)	2018	General	EPS(Electronic Power Steering)	Version Information	
i30N(PDEN)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
i30N(PDEN)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30N(PDEN)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
i30N(PDEN)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30N(PDEN)	2018	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
i30N(PDEN)	2018	General	Electronic Control Suspension	Version Information	
i30N(PDEN)	2018	General	Electronic Control Suspension	Read Fault Code	
i30N(PDEN)	2018	General	Electronic Control Suspension	Clear Fault Memory	
i30N(PDEN)	2018	General	Electronic Control Suspension	Read Data Stream	

model	year	area	system	function	subfunction
i30N(PDEN)	2018	General	Smart Key Unit	Version Information	
i30N(PDEN)	2018	General	Smart Key Unit	Read Fault Code	
i30N(PDEN)	2018	General	Smart Key Unit	Clear Fault Memory	
i30N(PDEN)	2018	General	Smart Key Unit	Read Data Stream	
i30N(PDEN)	2018	General	Smart Key Unit	Actuation Test	
i30N(PDEN)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
i30N(PDEN)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
i30N(PDEN)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
i30N(PDEN)	2018	General	Smart Key Unit	Special Function	SMK Status Information
i30N(PDEN)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
i30N(PDEN)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
i30N(PDEN)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
i30N(PDEN)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
i30N(PDEN)	2018	General	Smart Key Unit	Special Function	EcsL Enable Output Check
i30N(PDEN)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
i30N(PDEN)	2018	General	Multi Function Camera	Version Information	
i30N(PDEN)	2018	General	Multi Function Camera	Read Fault Code	
i30N(PDEN)	2018	General	Multi Function Camera	Clear Fault Memory	
i30N(PDEN)	2018	General	Multi Function Camera	Read Data Stream	
i30N(PDEN)	2018	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
i30N(PDEN)	2018	General	Multi Function Camera	Special Function	SPTAC Calibration
i30N(PDEN)	2018	General	Parking Guide System	Version Information	
i30N(PDEN)	2018	General	Parking Guide System	Read Fault Code	
i30N(PDEN)	2018	General	Parking Guide System	Clear Fault Memory	
i30N(PDEN)	2018	General	Parking Guide System	Read Data Stream	
i30N(PDEN)	2018	General	Telematics Unit	Version Information	
i30N(PDEN)	2018	General	Telematics Unit	Read Fault Code	
i30N(PDEN)	2018	General	Telematics Unit	Clear Fault Memory	
i30N(PDEN)	2018	General	Electronic Sound Generator	Version Information	

model	year	area	system	function	subfunction
i30N(PDEN)	2018	General	Electronic Sound Generator	Read Fault Code	
i30N(PDEN)	2018	General	Electronic Sound Generator	Clear Fault Memory	
i30N(PDEN)	2018	General	Integrated Gateway Power Module	Version Information	
i30N(PDEN)	2018	General	Integrated Gateway Power Module	Read Fault Code	
i30N(PDEN)	2018	General	Integrated Gateway Power Module	Clear Fault Memory	
i30N(PDEN)	2018	General	Integrated Gateway Power Module	Read Data Stream	
i30N(PDEN)	2018	General	Integrated Gateway Power Module	Actuation Test	
i30N(PDEN)	2018	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
i30N(PDEN)	2018	General	Integrated Gateway Power Module	Special Function	User Option
i30N(PDEN)	2018	General	IMM(Immobilizer)	Read Fault Code	
i30N(PDEN)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
i30N(PDEN)	2018	General	IMM(Immobilizer)	Read Data Stream	
i30N(PDEN)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
i30N(PDEN)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30N(PDEN)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30N(PDEN)	2018	General	IMM(Immobilizer)	Special Function	Teaching
i30N(PDEN)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
i30N(PDEN)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i30N(PDEN)	2018	General	Electronic Limited Slip Differential	Version Information	
i30N(PDEN)	2018	General	Electronic Limited Slip Differential	Read Fault Code	
i30N(PDEN)	2018	General	Electronic Limited Slip Differential	Clear Fault Memory	
i30N(PDEN)	2018	General	Electronic Limited Slip Differential	Read Data Stream	
i30N(PDEN)	2018	General	Electronic Limited Slip Differential	Actuation Test	
i30N(PDEN)	2018	General	Electronic Limited Slip Differential	Special Function	Air Bleeding Mode
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Version Information	
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Read Fault Code	
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Ignition Test
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30/Elantra Neos(FD)	2012	General	TCM(Transmission Control Module)	Version Information	
i30/Elantra Neos(FD)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
i30/Elantra Neos(FD)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30/Elantra Neos(FD)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2012	General	TCM(Transmission Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30/Elantra Neos(FD)	2012	General	ABS(Anti-lock Braking System)	Version Information	
i30/Elantra Neos(FD)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30/Elantra Neos(FD)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30/Elantra Neos(FD)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
i30/Elantra Neos(FD)	2012	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i30/Elantra Neos(FD)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30/Elantra Neos(FD)	2012	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i30/Elantra Neos(FD)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30/Elantra Neos(FD)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30/Elantra Neos(FD)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30/Elantra Neos(FD)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
i30/Elantra Neos(FD)	2012	General	AC(Air Conditioning)	Version Information	
i30/Elantra Neos(FD)	2012	General	AC(Air Conditioning)	Read Fault Code	
i30/Elantra Neos(FD)	2012	General	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2012	General	AC(Air Conditioning)	Read Data Stream	
i30/Elantra Neos(FD)	2012	General	AC(Air Conditioning)	Actuation Test	
i30/Elantra Neos(FD)	2012	General	BCM(Body Control Module)	Version Information	
i30/Elantra Neos(FD)	2012	General	BCM(Body Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2012	General	BCM(Body Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2012	General	BCM(Body Control Module)	Special Function	User Option
i30/Elantra Neos(FD)	2012	General	EPS(Electronic Power Steering)	Version Information	
i30/Elantra Neos(FD)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
i30/Elantra Neos(FD)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30/Elantra Neos(FD)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
i30/Elantra Neos(FD)	2012	General	EPS(Electronic Power Steering)	Read FreezeData	
i30/Elantra Neos(FD)	2012	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30/Elantra Neos(FD)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30/Elantra Neos(FD)	2012	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30/Elantra Neos(FD)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30/Elantra Neos(FD)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30/Elantra Neos(FD)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30/Elantra Neos(FD)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30/Elantra Neos(FD)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30/Elantra Neos(FD)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30/Elantra Neos(FD)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30/Elantra Neos(FD)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30/Elantra Neos(FD)	2012	General	IMM(Immobilizer)	Read Data Stream	
i30/Elantra Neos(FD)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30/Elantra Neos(FD)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30/Elantra Neos(FD)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30/Elantra Neos(FD)	2012	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i30/Elantra Neos(FD)	2012	General	Transmitter Code Saving	Read Data Stream	
i30/Elantra Neos(FD)	2012	General	Transmitter Code Saving	Special Function	Code Saving
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Read FreezeData	
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30/Elantra Neos(FD)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Component Replacement Routine
i30/Elantra Neos(FD)	2012	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Version Information	
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Read Fault Code	
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Ignition Test
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30/Elantra Neos(FD)	2011	General	TCM(Transmission Control Module)	Version Information	
i30/Elantra Neos(FD)	2011	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30/Elantra Neos(FD)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2011	General	TCM(Transmission Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30/Elantra Neos(FD)	2011	General	ABS(Anti-lock Braking System)	Version Information	
i30/Elantra Neos(FD)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30/Elantra Neos(FD)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30/Elantra Neos(FD)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
i30/Elantra Neos(FD)	2011	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i30/Elantra Neos(FD)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30/Elantra Neos(FD)	2011	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
i30/Elantra Neos(FD)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30/Elantra Neos(FD)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30/Elantra Neos(FD)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30/Elantra Neos(FD)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
i30/Elantra Neos(FD)	2011	General	AC(Air Conditioning)	Version Information	
i30/Elantra Neos(FD)	2011	General	AC(Air Conditioning)	Read Fault Code	
i30/Elantra Neos(FD)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
i30/Elantra Neos(FD)	2011	General	AC(Air Conditioning)	Read Data Stream	
i30/Elantra Neos(FD)	2011	General	AC(Air Conditioning)	Actuation Test	
i30/Elantra Neos(FD)	2011	General	BCM(Body Control Module)	Version Information	
i30/Elantra Neos(FD)	2011	General	BCM(Body Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2011	General	BCM(Body Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2011	General	BCM(Body Control Module)	Special Function	User Option
i30/Elantra Neos(FD)	2011	General	EPS(Electronic Power Steering)	Version Information	
i30/Elantra Neos(FD)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
i30/Elantra Neos(FD)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
i30/Elantra Neos(FD)	2011	General	EPS(Electronic Power Steering)	Read FreezeData	
i30/Elantra Neos(FD)	2011	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30/Elantra Neos(FD)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30/Elantra Neos(FD)	2011	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30/Elantra Neos(FD)	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30/Elantra Neos(FD)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30/Elantra Neos(FD)	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30/Elantra Neos(FD)	2011	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30/Elantra Neos(FD)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30/Elantra Neos(FD)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30/Elantra Neos(FD)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30/Elantra Neos(FD)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30/Elantra Neos(FD)	2011	General	IMM(Immobilizer)	Read Data Stream	
i30/Elantra Neos(FD)	2011	General	IMM(Immobilizer)	Special Function	Password
i30/Elantra Neos(FD)	2011	General	IMM(Immobilizer)	Special Function	Teaching/Changing
i30/Elantra Neos(FD)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30/Elantra Neos(FD)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30/Elantra Neos(FD)	2011	General	IMM(Immobilizer)	Special Function	Teaching
i30/Elantra Neos(FD)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i30/Elantra Neos(FD)	2011	General	Transmitter Code Saving	Read Data Stream	
i30/Elantra Neos(FD)	2011	General	Transmitter Code Saving	Special Function	Code Saving
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Read FreezeData	
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30/Elantra Neos(FD)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Component Replacement Routine
i30/Elantra Neos(FD)	2011	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Version Information	
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Read Fault Code	
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	Ignition Test
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30/Elantra Neos(FD)	2010	General	TCM(Transmission Control Module)	Version Information	
i30/Elantra Neos(FD)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
i30/Elantra Neos(FD)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30/Elantra Neos(FD)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2010	General	TCM(Transmission Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30/Elantra Neos(FD)	2010	General	ABS(Anti-lock Braking System)	Version Information	
i30/Elantra Neos(FD)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30/Elantra Neos(FD)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30/Elantra Neos(FD)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30/Elantra Neos(FD)	2010	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
i30/Elantra Neos(FD)	2010	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only Solenoid Valve Test
i30/Elantra Neos(FD)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30/Elantra Neos(FD)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30/Elantra Neos(FD)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30/Elantra Neos(FD)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
i30/Elantra Neos(FD)	2010	General	AC(Air Conditioning)	Version Information	
i30/Elantra Neos(FD)	2010	General	AC(Air Conditioning)	Read Fault Code	
i30/Elantra Neos(FD)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
i30/Elantra Neos(FD)	2010	General	AC(Air Conditioning)	Read Data Stream	
i30/Elantra Neos(FD)	2010	General	AC(Air Conditioning)	Actuation Test	
i30/Elantra Neos(FD)	2010	General	BCM(Body Control Module)	Version Information	
i30/Elantra Neos(FD)	2010	General	BCM(Body Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2010	General	BCM(Body Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2010	General	BCM(Body Control Module)	Special Function	User Option
i30/Elantra Neos(FD)	2010	General	EPS(Electronic Power Steering)	Version Information	
i30/Elantra Neos(FD)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
i30/Elantra Neos(FD)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30/Elantra Neos(FD)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
i30/Elantra Neos(FD)	2010	General	EPS(Electronic Power Steering)	Read FreezeData	
i30/Elantra Neos(FD)	2010	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30/Elantra Neos(FD)	2010	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30/Elantra Neos(FD)	2010	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30/Elantra Neos(FD)	2010	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30/Elantra Neos(FD)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2010	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30/Elantra Neos(FD)	2010	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30/Elantra Neos(FD)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30/Elantra Neos(FD)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30/Elantra Neos(FD)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30/Elantra Neos(FD)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30/Elantra Neos(FD)	2010	General	IMM(Immobilizer)	Read Data Stream	
i30/Elantra Neos(FD)	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30/Elantra Neos(FD)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30/Elantra Neos(FD)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30/Elantra Neos(FD)	2010	General	IMM(Immobilizer)	Special Function	Teaching
i30/Elantra Neos(FD)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i30/Elantra Neos(FD)	2010	General	Transmitter Code Saving	Read Data Stream	
i30/Elantra Neos(FD)	2010	General	Transmitter Code Saving	Special Function	Code Saving
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Read FreezeData	
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30/Elantra Neos(FD)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	Component Replacement Routine
i30/Elantra Neos(FD)	2010	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Version Information	
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Read Fault Code	
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	Ignition Test
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30/Elantra Neos(FD)	2009	General	TCM(Transmission Control Module)	Version Information	
i30/Elantra Neos(FD)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
i30/Elantra Neos(FD)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30/Elantra Neos(FD)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2009	General	TCM(Transmission Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i30/Elantra Neos(FD)	2009	General	ABS(Anti-lock Braking System)	Version Information	
i30/Elantra Neos(FD)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30/Elantra Neos(FD)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30/Elantra Neos(FD)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
i30/Elantra Neos(FD)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30/Elantra Neos(FD)	2009	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
i30/Elantra Neos(FD)	2009	General	ABS(Anti-lock Braking System)	Special Function	Reset(ESP/ESC)Only
i30/Elantra Neos(FD)	2009	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
i30/Elantra Neos(FD)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30/Elantra Neos(FD)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30/Elantra Neos(FD)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30/Elantra Neos(FD)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
i30/Elantra Neos(FD)	2009	General	AC(Air Conditioning)	Version Information	
i30/Elantra Neos(FD)	2009	General	AC(Air Conditioning)	Read Fault Code	
i30/Elantra Neos(FD)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
i30/Elantra Neos(FD)	2009	General	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2009	General	AC(Air Conditioning)	Actuation Test	
i30/Elantra Neos(FD)	2009	General	BCM(Body Control Module)	Version Information	
i30/Elantra Neos(FD)	2009	General	BCM(Body Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2009	General	BCM(Body Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2009	General	BCM(Body Control Module)	Special Function	User Option
i30/Elantra Neos(FD)	2009	General	EPS(Electronic Power Steering)	Version Information	
i30/Elantra Neos(FD)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
i30/Elantra Neos(FD)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30/Elantra Neos(FD)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	
i30/Elantra Neos(FD)	2009	General	EPS(Electronic Power Steering)	Read FreezeData	
i30/Elantra Neos(FD)	2009	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i30/Elantra Neos(FD)	2009	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30/Elantra Neos(FD)	2009	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30/Elantra Neos(FD)	2009	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30/Elantra Neos(FD)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30/Elantra Neos(FD)	2009	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30/Elantra Neos(FD)	2009	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30/Elantra Neos(FD)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30/Elantra Neos(FD)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30/Elantra Neos(FD)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30/Elantra Neos(FD)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30/Elantra Neos(FD)	2009	General	IMM(Immobilizer)	Read Data Stream	
i30/Elantra Neos(FD)	2009	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30/Elantra Neos(FD)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30/Elantra Neos(FD)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30/Elantra Neos(FD)	2009	General	IMM(Immobilizer)	Special Function	Teaching
i30/Elantra Neos(FD)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2009	General	Transmitter Code Saving	Read Data Stream	
i30/Elantra Neos(FD)	2009	General	Transmitter Code Saving	Special Function	Code Saving
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	Read VIN
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	Write VIN
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Read FreezeData	
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30/Elantra Neos(FD)	2009	General	TCM(Transmission Control Module)	Read FreezeData	
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	Component Replacement Routine
i30/Elantra Neos(FD)	2009	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Version Information	
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Read Fault Code	
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	Ignition Test
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i30/Elantra Neos(FD)	2008	General	TCM(Transmission Control Module)	Version Information	
i30/Elantra Neos(FD)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
i30/Elantra Neos(FD)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
i30/Elantra Neos(FD)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2008	General	TCM(Transmission Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2008	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2008	General	ABS(Anti-lock Braking System)	Version Information	
i30/Elantra Neos(FD)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
i30/Elantra Neos(FD)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
i30/Elantra Neos(FD)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
i30/Elantra Neos(FD)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i30/Elantra Neos(FD)	2008	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
i30/Elantra Neos(FD)	2008	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only Solenoid Valve Test
i30/Elantra Neos(FD)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i30/Elantra Neos(FD)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i30/Elantra Neos(FD)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i30/Elantra Neos(FD)	2008	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
i30/Elantra Neos(FD)	2008	General	AC(Air Conditioning)	Version Information	
i30/Elantra Neos(FD)	2008	General	AC(Air Conditioning)	Read Fault Code	
i30/Elantra Neos(FD)	2008	General	AC(Air Conditioning)	Clear Fault Memory	
i30/Elantra Neos(FD)	2008	General	AC(Air Conditioning)	Read Data Stream	
i30/Elantra Neos(FD)	2008	General	AC(Air Conditioning)	Actuation Test	
i30/Elantra Neos(FD)	2008	General	BCM(Body Control Module)	Version Information	
i30/Elantra Neos(FD)	2008	General	BCM(Body Control Module)	Read Data Stream	
i30/Elantra Neos(FD)	2008	General	BCM(Body Control Module)	Actuation Test	
i30/Elantra Neos(FD)	2008	General	BCM(Body Control Module)	Special Function	User Option
i30/Elantra Neos(FD)	2008	General	EPS(Electronic Power Steering)	Version Information	
i30/Elantra Neos(FD)	2008	General	EPS(Electronic Power Steering)	Read Fault Code	
i30/Elantra Neos(FD)	2008	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i30/Elantra Neos(FD)	2008	General	EPS(Electronic Power Steering)	Read Data Stream	
i30/Elantra Neos(FD)	2008	General	EPS(Electronic Power Steering)	Read FreezeData	
i30/Elantra Neos(FD)	2008	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2008	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i30/Elantra Neos(FD)	2008	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i30/Elantra Neos(FD)	2008	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i30/Elantra Neos(FD)	2008	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i30/Elantra Neos(FD)	2008	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i30/Elantra Neos(FD)	2008	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i30/Elantra Neos(FD)	2008	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i30/Elantra Neos(FD)	2008	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i30/Elantra Neos(FD)	2008	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i30/Elantra Neos(FD)	2008	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i30/Elantra Neos(FD)	2008	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i30/Elantra Neos(FD)	2008	General	IMM(Immobilizer)	Read Data Stream	
i30/Elantra Neos(FD)	2008	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i30/Elantra Neos(FD)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i30/Elantra Neos(FD)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i30/Elantra Neos(FD)	2008	General	IMM(Immobilizer)	Special Function	Teaching
i30/Elantra Neos(FD)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
i30/Elantra Neos(FD)	2008	General	Transmitter Code Saving	Read Data Stream	
i30/Elantra Neos(FD)	2008	General	Transmitter Code Saving	Special Function	Code Saving
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	Read VIN
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	Write VIN
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Read FreezeData	
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i30/Elantra Neos(FD)	2008	General	TCM(Transmission Control Module)	Read FreezeData	
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	Component Replacement Routine

model	year	area	system	function	subfunction
i30/Elantra Neos(FD)	2008	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
i40(VF)	2018	General	ECM(Engine Control Module)	Version Information	
i40(VF)	2018	General	ECM(Engine Control Module)	Read Fault Code	
i40(VF)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
i40(VF)	2018	General	ECM(Engine Control Module)	Read Data Stream	
i40(VF)	2018	General	ECM(Engine Control Module)	Read FreezeData	
i40(VF)	2018	General	ECM(Engine Control Module)	Actuation Test	
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	CVVT Test
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i40(VF)	2018	General	TCM(Transmission Control Module)	Version Information	
i40(VF)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
i40(VF)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
i40(VF)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
i40(VF)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
i40(VF)	2018	General	TCM(Transmission Control Module)	Actuation Test	
i40(VF)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i40(VF)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i40(VF)	2018	General	ABS(Anti-lock Braking System)	Version Information	
i40(VF)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
i40(VF)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
i40(VF)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
i40(VF)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
i40(VF)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i40(VF)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
i40(VF)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i40(VF)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i40(VF)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
i40(VF)	2018	General	Electric Parking Brake	Version Information	
i40(VF)	2018	General	Electric Parking Brake	Read Fault Code	
i40(VF)	2018	General	Electric Parking Brake	Clear Fault Memory	
i40(VF)	2018	General	Electric Parking Brake	Read Data Stream	
i40(VF)	2018	General	Electric Parking Brake	Actuation Test	
i40(VF)	2018	General	Electric Parking Brake	Special Function	EPB Change mode(before Change)
i40(VF)	2018	General	Electric Parking Brake	Special Function	EPB Change mode(after Change)
i40(VF)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i40(VF)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i40(VF)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i40(VF)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i40(VF)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i40(VF)	2018	General	AC(Air Conditioning)	Version Information	
i40(VF)	2018	General	AC(Air Conditioning)	Read Fault Code	
i40(VF)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
i40(VF)	2018	General	AC(Air Conditioning)	Read Data Stream	
i40(VF)	2018	General	AC(Air Conditioning)	Actuation Test	
i40(VF)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i40(VF)	2018	General	BCM(Body Control Module)	Version Information	
i40(VF)	2018	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
i40(VF)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
i40(VF)	2018	General	BCM(Body Control Module)	Read Data Stream	
i40(VF)	2018	General	BCM(Body Control Module)	Actuation Test	
i40(VF)	2018	General	BCM(Body Control Module)	Special Function	User Option
i40(VF)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
i40(VF)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i40(VF)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i40(VF)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i40(VF)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i40(VF)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i40(VF)	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i40(VF)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
i40(VF)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i40(VF)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i40(VF)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i40(VF)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i40(VF)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i40(VF)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i40(VF)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i40(VF)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i40(VF)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
i40(VF)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
i40(VF)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
i40(VF)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
i40(VF)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
i40(VF)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
i40(VF)	2018	General	EPS(Electronic Power Steering)	Version Information	
i40(VF)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
i40(VF)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i40(VF)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
i40(VF)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i40(VF)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i40(VF)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
i40(VF)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
i40(VF)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
i40(VF)	2018	General	EPS(Electronic Power Steering)	Special Function	Torque Offset Calibration
i40(VF)	2018	General	Electronic Control Suspension	Version Information	
i40(VF)	2018	General	Electronic Control Suspension	Read Fault Code	
i40(VF)	2018	General	Electronic Control Suspension	Clear Fault Memory	
i40(VF)	2018	General	Electronic Control Suspension	Read Data Stream	
i40(VF)	2018	General	Smart Key Unit	Version Information	
i40(VF)	2018	General	Smart Key Unit	Read Fault Code	
i40(VF)	2018	General	Smart Key Unit	Clear Fault Memory	
i40(VF)	2018	General	Smart Key Unit	Read Data Stream	
i40(VF)	2018	General	Smart Key Unit	Actuation Test	
i40(VF)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
i40(VF)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
i40(VF)	2018	General	Smart Key Unit	Special Function	SMK Status Information
i40(VF)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
i40(VF)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
i40(VF)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
i40(VF)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
i40(VF)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
i40(VF)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
i40(VF)	2018	General	Lane Keeping Assist System	Version Information	

model	year	area	system	function	subfunction
i40(VF)	2018	General	Lane Keeping Assist System	Read Fault Code	
i40(VF)	2018	General	Lane Keeping Assist System	Clear Fault Memory	
i40(VF)	2018	General	Lane Keeping Assist System	Read Data Stream	
i40(VF)	2018	General	Lane Keeping Assist System	Special Function	SPC Calibration
i40(VF)	2018	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
i40(VF)	2018	General	Lane Keeping Assist System	Special Function	LDWS Variant Coding
i40(VF)	2018	General	Smart Parking Assist System	Version Information	
i40(VF)	2018	General	Smart Parking Assist System	Read Fault Code	
i40(VF)	2018	General	Smart Parking Assist System	Clear Fault Memory	
i40(VF)	2018	General	Smart Parking Assist System	Read Data Stream	
i40(VF)	2018	General	Smart Parking Assist System	Actuation Test	
i40(VF)	2018	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i40(VF)	2018	General	Active Air Flap	Version Information	
i40(VF)	2018	General	Active Air Flap	Read Fault Code	
i40(VF)	2018	General	Active Air Flap	Clear Fault Memory	
i40(VF)	2018	General	Active Air Flap	Read Data Stream	
i40(VF)	2018	General	Active Air Flap	Actuation Test	
i40(VF)	2018	General	IMM(Immobilizer)	Read Fault Code	
i40(VF)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
i40(VF)	2018	General	IMM(Immobilizer)	Read Data Stream	
i40(VF)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i40(VF)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i40(VF)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i40(VF)	2018	General	IMM(Immobilizer)	Special Function	Teaching
i40(VF)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
i40(VF)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove

model	year	area	system	function	subfunction
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i40(VF)	2018	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/ECU Cleaning
i40(VF)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
i40(VF)	2017	General	ECM(Engine Control Module)	Version Information	
i40(VF)	2017	General	ECM(Engine Control Module)	Read Fault Code	
i40(VF)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
i40(VF)	2017	General	ECM(Engine Control Module)	Read Data Stream	
i40(VF)	2017	General	ECM(Engine Control Module)	Read FreezeData	
i40(VF)	2017	General	ECM(Engine Control Module)	Actuation Test	
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	CVVT Test
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i40(VF)	2017	General	TCM(Transmission Control Module)	Version Information	
i40(VF)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
i40(VF)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
i40(VF)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
i40(VF)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
i40(VF)	2017	General	TCM(Transmission Control Module)	Actuation Test	
i40(VF)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i40(VF)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i40(VF)	2017	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
i40(VF)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
i40(VF)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i40(VF)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
i40(VF)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
i40(VF)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i40(VF)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
i40(VF)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i40(VF)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode Auto Detected
i40(VF)	2017	General	ABS(Anti-lock Braking System)	Special Function	Configuration Reset(ESP/ESC Only)
i40(VF)	2017	General	Electric Parking Brake	Version Information	
i40(VF)	2017	General	Electric Parking Brake	Read Fault Code	
i40(VF)	2017	General	Electric Parking Brake	Clear Fault Memory	
i40(VF)	2017	General	Electric Parking Brake	Read Data Stream	
i40(VF)	2017	General	Electric Parking Brake	Actuation Test	
i40(VF)	2017	General	Electric Parking Brake	Special Function	PAD Change Mode(Before PAD Change)
i40(VF)	2017	General	Electric Parking Brake	Special Function	PAD Change Mode(After Change)
i40(VF)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i40(VF)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i40(VF)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i40(VF)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i40(VF)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i40(VF)	2017	General	AC(Air Conditioning)	Version Information	
i40(VF)	2017	General	AC(Air Conditioning)	Read Fault Code	
i40(VF)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
i40(VF)	2017	General	AC(Air Conditioning)	Read Data Stream	
i40(VF)	2017	General	AC(Air Conditioning)	Actuation Test	
i40(VF)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)

model	year	area	system	function	subfunction
i40(VF)	2017	General	BCM(Body Control Module)	Version Information	
i40(VF)	2017	General	BCM(Body Control Module)	Read Fault Code	
i40(VF)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
i40(VF)	2017	General	BCM(Body Control Module)	Read Data Stream	
i40(VF)	2017	General	BCM(Body Control Module)	Actuation Test	
i40(VF)	2017	General	BCM(Body Control Module)	Special Function	User Option
i40(VF)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
i40(VF)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i40(VF)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i40(VF)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i40(VF)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i40(VF)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i40(VF)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i40(VF)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
i40(VF)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i40(VF)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i40(VF)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i40(VF)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i40(VF)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i40(VF)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i40(VF)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i40(VF)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i40(VF)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
i40(VF)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
i40(VF)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
i40(VF)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
i40(VF)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
i40(VF)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial

model	year	area	system	function	subfunction
i40(VF)	2017	General	EPS(Electronic Power Steering)	Version Information	
i40(VF)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
i40(VF)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i40(VF)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
i40(VF)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i40(VF)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i40(VF)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
i40(VF)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
i40(VF)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
i40(VF)	2017	General	EPS(Electronic Power Steering)	Special Function	Torque Offset Calibration
i40(VF)	2017	General	Electronic Control Suspension	Version Information	
i40(VF)	2017	General	Electronic Control Suspension	Read Fault Code	
i40(VF)	2017	General	Electronic Control Suspension	Clear Fault Memory	
i40(VF)	2017	General	Electronic Control Suspension	Read Data Stream	
i40(VF)	2017	General	Smart Key Unit	Version Information	
i40(VF)	2017	General	Smart Key Unit	Read Fault Code	
i40(VF)	2017	General	Smart Key Unit	Clear Fault Memory	
i40(VF)	2017	General	Smart Key Unit	Read Data Stream	
i40(VF)	2017	General	Smart Key Unit	Actuation Test	
i40(VF)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
i40(VF)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
i40(VF)	2017	General	Smart Key Unit	Special Function	SMK Status Information
i40(VF)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
i40(VF)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
i40(VF)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
i40(VF)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
i40(VF)	2017	General	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
i40(VF)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
i40(VF)	2017	General	Lane Keeping Assist System	Version Information	
i40(VF)	2017	General	Lane Keeping Assist System	Read Fault Code	
i40(VF)	2017	General	Lane Keeping Assist System	Clear Fault Memory	
i40(VF)	2017	General	Lane Keeping Assist System	Read Data Stream	
i40(VF)	2017	General	Lane Keeping Assist System	Special Function	SPC Calibration
i40(VF)	2017	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
i40(VF)	2017	General	Lane Keeping Assist System	Special Function	LDWS Variant Coding
i40(VF)	2017	General	Smart Parking Assist System	Version Information	
i40(VF)	2017	General	Smart Parking Assist System	Read Fault Code	
i40(VF)	2017	General	Smart Parking Assist System	Clear Fault Memory	
i40(VF)	2017	General	Smart Parking Assist System	Read Data Stream	
i40(VF)	2017	General	Smart Parking Assist System	Actuation Test	
i40(VF)	2017	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i40(VF)	2017	General	Active Air Flap	Version Information	
i40(VF)	2017	General	Active Air Flap	Read Fault Code	
i40(VF)	2017	General	Active Air Flap	Clear Fault Memory	
i40(VF)	2017	General	Active Air Flap	Read Data Stream	
i40(VF)	2017	General	Active Air Flap	Actuation Test	
i40(VF)	2017	General	IMM(Immobilizer)	Read Fault Code	
i40(VF)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
i40(VF)	2017	General	IMM(Immobilizer)	Read Data Stream	
i40(VF)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i40(VF)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i40(VF)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i40(VF)	2017	General	IMM(Immobilizer)	Special Function	Teaching
i40(VF)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
i40(VF)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)

model	year	area	system	function	subfunction
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i40(VF)	2017	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU/Cleaning
i40(VF)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
i40(VF)	2016	General	ECM(Engine Control Module)	Version Information	
i40(VF)	2016	General	ECM(Engine Control Module)	Read Fault Code	
i40(VF)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
i40(VF)	2016	General	ECM(Engine Control Module)	Read Data Stream	
i40(VF)	2016	General	ECM(Engine Control Module)	Actuation Test	
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU/Cleaning
i40(VF)	2016	General	TCM(Transmission Control Module)	Version Information	
i40(VF)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
i40(VF)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
i40(VF)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
i40(VF)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
i40(VF)	2016	General	TCM(Transmission Control Module)	Actuation Test	
i40(VF)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i40(VF)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i40(VF)	2016	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Special Function	FAD Change Mode(Before Change)
i40(VF)	2016	General	ABS(Anti-lock Braking System)	Special Function	FAD Change Mode(After Change)
i40(VF)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i40(VF)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i40(VF)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i40(VF)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i40(VF)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i40(VF)	2016	General	AC(Air Conditioning)	Version Information	
i40(VF)	2016	General	AC(Air Conditioning)	Read Fault Code	
i40(VF)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
i40(VF)	2016	General	AC(Air Conditioning)	Read Data Stream	
i40(VF)	2016	General	AC(Air Conditioning)	Actuation Test	
i40(VF)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Test)
i40(VF)	2016	General	BCM(Body Control Module)	Version Information	
i40(VF)	2016	General	BCM(Body Control Module)	Read Fault Code	
i40(VF)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
i40(VF)	2016	General	BCM(Body Control Module)	Read Data Stream	
i40(VF)	2016	General	BCM(Body Control Module)	Actuation Test	
i40(VF)	2016	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
i40(VF)	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
i40(VF)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
i40(VF)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i40(VF)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i40(VF)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i40(VF)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i40(VF)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i40(VF)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
i40(VF)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i40(VF)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i40(VF)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i40(VF)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i40(VF)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i40(VF)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
i40(VF)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
i40(VF)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
i40(VF)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
i40(VF)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
i40(VF)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
i40(VF)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
i40(VF)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
i40(VF)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
i40(VF)	2016	General	EPS(Electronic Power Steering)	Version Information	
i40(VF)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
i40(VF)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i40(VF)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
i40(VF)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
i40(VF)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
i40(VF)	2016	General	EPS(Electronic Power Steering)	Special Function	Torque Offset Calibration
i40(VF)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i40(VF)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
i40(VF)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
i40(VF)	2016	General	Electronic Control Suspension	Version Information	
i40(VF)	2016	General	Electronic Control Suspension	Read Fault Code	
i40(VF)	2016	General	Electronic Control Suspension	Clear Fault Memory	
i40(VF)	2016	General	Electronic Control Suspension	Read Data Stream	
i40(VF)	2016	General	Smart Key Unit	Version Information	
i40(VF)	2016	General	Smart Key Unit	Read Fault Code	
i40(VF)	2016	General	Smart Key Unit	Clear Fault Memory	
i40(VF)	2016	General	Smart Key Unit	Read Data Stream	
i40(VF)	2016	General	Smart Key Unit	Actuation Test	
i40(VF)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
i40(VF)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
i40(VF)	2016	General	Smart Key Unit	Special Function	SMK Status Information
i40(VF)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
i40(VF)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
i40(VF)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
i40(VF)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
i40(VF)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
i40(VF)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
i40(VF)	2016	General	Lane Keeping Assist System	Version Information	
i40(VF)	2016	General	Lane Keeping Assist System	Read Fault Code	
i40(VF)	2016	General	Lane Keeping Assist System	Clear Fault Memory	
i40(VF)	2016	General	Lane Keeping Assist System	Read Data Stream	
i40(VF)	2016	General	Lane Keeping Assist System	Special Function	SPC Calibration

model	year	area	system	function	subfunction
i40(VF)	2016	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
i40(VF)	2016	General	Lane Keeping Assist System	Special Function	LDWS Variant Coding
i40(VF)	2016	General	Smart Parking Assist System	Version Information	
i40(VF)	2016	General	Smart Parking Assist System	Read Fault Code	
i40(VF)	2016	General	Smart Parking Assist System	Clear Fault Memory	
i40(VF)	2016	General	Smart Parking Assist System	Read Data Stream	
i40(VF)	2016	General	Smart Parking Assist System	Actuation Test	
i40(VF)	2016	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i40(VF)	2016	General	Active Air Flap	Version Information	
i40(VF)	2016	General	Active Air Flap	Read Fault Code	
i40(VF)	2016	General	Active Air Flap	Clear Fault Memory	
i40(VF)	2016	General	Active Air Flap	Read Data Stream	
i40(VF)	2016	General	Active Air Flap	Actuation Test	
i40(VF)	2016	General	IMM(Immobilizer)	Read Fault Code	
i40(VF)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
i40(VF)	2016	General	IMM(Immobilizer)	Read Data Stream	
i40(VF)	2016	General	IMM(Immobilizer)	Special Function	Password
i40(VF)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Changing
i40(VF)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i40(VF)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i40(VF)	2016	General	IMM(Immobilizer)	Special Function	Teaching
i40(VF)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
i40(VF)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i40(VF)	2016	General	ECM(Engine Control Module)	Read FreezeData	
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	Configuration Reset
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test

model	year	area	system	function	subfunction
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
i40(VF)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i40(VF)	2015	General	ECM(Engine Control Module)	Version Information	
i40(VF)	2015	General	ECM(Engine Control Module)	Read Fault Code	
i40(VF)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
i40(VF)	2015	General	ECM(Engine Control Module)	Read Data Stream	
i40(VF)	2015	General	ECM(Engine Control Module)	Read FreezeData	
i40(VF)	2015	General	ECM(Engine Control Module)	Actuation Test	
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i40(VF)	2015	General	TCM(Transmission Control Module)	Version Information	
i40(VF)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
i40(VF)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
i40(VF)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
i40(VF)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
i40(VF)	2015	General	TCM(Transmission Control Module)	Actuation Test	
i40(VF)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i40(VF)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i40(VF)	2015	General	ABS(Anti-lock Braking System)	Version Information	
i40(VF)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
i40(VF)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
i40(VF)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
i40(VF)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
i40(VF)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i40(VF)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i40(VF)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
i40(VF)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i40(VF)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i40(VF)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i40(VF)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i40(VF)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i40(VF)	2015	General	AC(Air Conditioning)	Version Information	
i40(VF)	2015	General	AC(Air Conditioning)	Read Fault Code	
i40(VF)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
i40(VF)	2015	General	AC(Air Conditioning)	Read Data Stream	
i40(VF)	2015	General	AC(Air Conditioning)	Actuation Test	
i40(VF)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i40(VF)	2015	General	BCM(Body Control Module)	Version Information	
i40(VF)	2015	General	BCM(Body Control Module)	Read Fault Code	
i40(VF)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
i40(VF)	2015	General	BCM(Body Control Module)	Read Data Stream	
i40(VF)	2015	General	BCM(Body Control Module)	Actuation Test	
i40(VF)	2015	General	BCM(Body Control Module)	Special Function	User Option
i40(VF)	2015	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
i40(VF)	2015	General	EPB(Electrical Parking Brake)	Version Information	
i40(VF)	2015	General	EPB(Electrical Parking Brake)	Read Fault Code	
i40(VF)	2015	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
i40(VF)	2015	General	EPB(Electrical Parking Brake)	Read Data Stream	
i40(VF)	2015	General	EPB(Electrical Parking Brake)	Actuation Test	

model	year	area	system	function	subfunction
i40(VF)	2015	General	EPB(Electrical Parking Brake)	Special Function	FAD Change mode(Before Change)
i40(VF)	2015	General	EPB(Electrical Parking Brake)	Special Function	FAD Change mode(After Change)
i40(VF)	2015	General	EPS(Electronic Power Steering)	Version Information	
i40(VF)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
i40(VF)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i40(VF)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
i40(VF)	2015	General	EPS(Electronic Power Steering)	Read FreezeData	
i40(VF)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i40(VF)	2015	General	EPS(Electronic Power Steering)	Special Function	Torque Offset Calibration
i40(VF)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i40(VF)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i40(VF)	2015	General	Head Lamp	Version Information	
i40(VF)	2015	General	Head Lamp	Read Fault Code	
i40(VF)	2015	General	Head Lamp	Clear Fault Memory	
i40(VF)	2015	General	Head Lamp	Read Data Stream	
i40(VF)	2015	General	Head Lamp	Actuation Test	
i40(VF)	2015	General	Head Lamp	Special Function	Calibration
i40(VF)	2015	General	Head Lamp	Special Function	Parameter Download
i40(VF)	2015	General	Head Lamp	Special Function	Headlamp Leveling
i40(VF)	2015	General	Head Lamp	Special Function	Parameter Setting
i40(VF)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i40(VF)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i40(VF)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i40(VF)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i40(VF)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i40(VF)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
i40(VF)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i40(VF)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
i40(VF)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i40(VF)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i40(VF)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i40(VF)	2015	General	IMM(Immobilizer)	Read Fault Code	
i40(VF)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
i40(VF)	2015	General	IMM(Immobilizer)	Read Data Stream	
i40(VF)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i40(VF)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i40(VF)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i40(VF)	2015	General	IMM(Immobilizer)	Special Function	Teaching
i40(VF)	2015	General	Smart Key Unit	Version Information	
i40(VF)	2015	General	Smart Key Unit	Read Fault Code	
i40(VF)	2015	General	Smart Key Unit	Clear Fault Memory	
i40(VF)	2015	General	Smart Key Unit	Read Data Stream	
i40(VF)	2015	General	Smart Key Unit	Actuation Test	
i40(VF)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
i40(VF)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
i40(VF)	2015	General	Smart Key Unit	Special Function	SMK Status Information
i40(VF)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
i40(VF)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
i40(VF)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
i40(VF)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
i40(VF)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
i40(VF)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
i40(VF)	2015	General	Transmitter Code Saving	Read Data Stream	
i40(VF)	2015	General	Transmitter Code Saving	Special Function	Code Saving
i40(VF)	2015	General	Lane Keeping Assist System	Version Information	
i40(VF)	2015	General	Lane Keeping Assist System	Read Fault Code	
i40(VF)	2015	General	Lane Keeping Assist System	Clear Fault Memory	

model	year	area	system	function	subfunction
i40(VF)	2015	General	Lane Keeping Assist System	Read Data Stream	
i40(VF)	2015	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
i40(VF)	2015	General	Lane Keeping Assist System	Special Function	LKAS Variant Coding
i40(VF)	2015	General	Smart Parking Assist System	Version Information	
i40(VF)	2015	General	Smart Parking Assist System	Read Fault Code	
i40(VF)	2015	General	Smart Parking Assist System	Clear Fault Memory	
i40(VF)	2015	General	Smart Parking Assist System	Read Data Stream	
i40(VF)	2015	General	Smart Parking Assist System	Actuation Test	
i40(VF)	2015	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i40(VF)	2015	General	Active Air Flap	Version Information	
i40(VF)	2015	General	Active Air Flap	Read Fault Code	
i40(VF)	2015	General	Active Air Flap	Clear Fault Memory	
i40(VF)	2015	General	Active Air Flap	Read Data Stream	
i40(VF)	2015	General	Active Air Flap	Actuation Test	
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i40(VF)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i40(VF)	2014	General	ECM(Engine Control Module)	Version Information	
i40(VF)	2014	General	ECM(Engine Control Module)	Read Fault Code	
i40(VF)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
i40(VF)	2014	General	ECM(Engine Control Module)	Read Data Stream	
i40(VF)	2014	General	ECM(Engine Control Module)	Read FreezeData	
i40(VF)	2014	General	ECM(Engine Control Module)	Actuation Test	
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i40(VF)	2014	General	TCM(Transmission Control Module)	Version Information	
i40(VF)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
i40(VF)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
i40(VF)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
i40(VF)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
i40(VF)	2014	General	TCM(Transmission Control Module)	Actuation Test	
i40(VF)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i40(VF)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i40(VF)	2014	General	ABS(Anti-lock Braking System)	Version Information	
i40(VF)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
i40(VF)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i40(VF)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
i40(VF)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
i40(VF)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i40(VF)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i40(VF)	2014	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
i40(VF)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i40(VF)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i40(VF)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i40(VF)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i40(VF)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i40(VF)	2014	General	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
i40(VF)	2014	General	AC(Air Conditioning)	Read Fault Code	
i40(VF)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
i40(VF)	2014	General	AC(Air Conditioning)	Read Data Stream	
i40(VF)	2014	General	AC(Air Conditioning)	Actuation Test	
i40(VF)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i40(VF)	2014	General	BCM(Body Control Module)	Version Information	
i40(VF)	2014	General	BCM(Body Control Module)	Read Fault Code	
i40(VF)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
i40(VF)	2014	General	BCM(Body Control Module)	Read Data Stream	
i40(VF)	2014	General	BCM(Body Control Module)	Actuation Test	
i40(VF)	2014	General	BCM(Body Control Module)	Special Function	User Option
i40(VF)	2014	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
i40(VF)	2014	General	EPB(Electrical Parking Brake)	Version Information	
i40(VF)	2014	General	EPB(Electrical Parking Brake)	Read Fault Code	
i40(VF)	2014	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
i40(VF)	2014	General	EPB(Electrical Parking Brake)	Read Data Stream	
i40(VF)	2014	General	EPB(Electrical Parking Brake)	Actuation Test	
i40(VF)	2014	General	EPB(Electrical Parking Brake)	Special Function	FAD Change mode(before Change)
i40(VF)	2014	General	EPB(Electrical Parking Brake)	Special Function	FAD Change mode(After Change)
i40(VF)	2014	General	EPS(Electronic Power Steering)	Version Information	
i40(VF)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
i40(VF)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i40(VF)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
i40(VF)	2014	General	EPS(Electronic Power Steering)	Read FreezeData	
i40(VF)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i40(VF)	2014	General	EPS(Electronic Power Steering)	Special Function	Torque Offset Calibration
i40(VF)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i40(VF)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)

model	year	area	system	function	subfunction
i40(VF)	2014	General	Head Lamp	Version Information	
i40(VF)	2014	General	Head Lamp	Read Fault Code	
i40(VF)	2014	General	Head Lamp	Clear Fault Memory	
i40(VF)	2014	General	Head Lamp	Read Data Stream	
i40(VF)	2014	General	Head Lamp	Actuation Test	
i40(VF)	2014	General	Head Lamp	Special Function	Calibration
i40(VF)	2014	General	Head Lamp	Special Function	Parameter Download
i40(VF)	2014	General	Head Lamp	Special Function	Headlamp Leveling
i40(VF)	2014	General	Head Lamp	Special Function	Parameter Setting
i40(VF)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i40(VF)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i40(VF)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i40(VF)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i40(VF)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i40(VF)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
i40(VF)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i40(VF)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i40(VF)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i40(VF)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i40(VF)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i40(VF)	2014	General	IMM(Immobilizer)	Read Fault Code	
i40(VF)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
i40(VF)	2014	General	IMM(Immobilizer)	Read Data Stream	
i40(VF)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
i40(VF)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i40(VF)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i40(VF)	2014	General	IMM(Immobilizer)	Special Function	Teaching
i40(VF)	2014	General	Smart Key Unit	Version Information	
i40(VF)	2014	General	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
i40(VF)	2014	General	Smart Key Unit	Clear Fault Memory	
i40(VF)	2014	General	Smart Key Unit	Read Data Stream	
i40(VF)	2014	General	Smart Key Unit	Actuation Test	
i40(VF)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
i40(VF)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
i40(VF)	2014	General	Smart Key Unit	Special Function	SMK Status Information
i40(VF)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
i40(VF)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
i40(VF)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
i40(VF)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
i40(VF)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
i40(VF)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
i40(VF)	2014	General	Transmitter Code Saving	Read Data Stream	
i40(VF)	2014	General	Transmitter Code Saving	Special Function	Code Saving
i40(VF)	2014	General	Lane Keeping Assist System	Version Information	
i40(VF)	2014	General	Lane Keeping Assist System	Read Fault Code	
i40(VF)	2014	General	Lane Keeping Assist System	Clear Fault Memory	
i40(VF)	2014	General	Lane Keeping Assist System	Read Data Stream	
i40(VF)	2014	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
i40(VF)	2014	General	Lane Keeping Assist System	Special Function	LKAS Variant Coding
i40(VF)	2014	General	Smart Parking Assist System	Version Information	
i40(VF)	2014	General	Smart Parking Assist System	Read Fault Code	
i40(VF)	2014	General	Smart Parking Assist System	Clear Fault Memory	
i40(VF)	2014	General	Smart Parking Assist System	Read Data Stream	
i40(VF)	2014	General	Smart Parking Assist System	Actuation Test	
i40(VF)	2014	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i40(VF)	2014	General	Active Air Flap	Version Information	
i40(VF)	2014	General	Active Air Flap	Read Fault Code	
i40(VF)	2014	General	Active Air Flap	Clear Fault Memory	

model	year	area	system	function	subfunction
i40(VF)	2014	General	Active Air Flap	Read Data Stream	
i40(VF)	2014	General	Active Air Flap	Actuation Test	
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i40(VF)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i40(VF)	2013	General	ECM(Engine Control Module)	Version Information	
i40(VF)	2013	General	ECM(Engine Control Module)	Read Fault Code	
i40(VF)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
i40(VF)	2013	General	ECM(Engine Control Module)	Read Data Stream	
i40(VF)	2013	General	ECM(Engine Control Module)	Read FreezeData	
i40(VF)	2013	General	ECM(Engine Control Module)	Actuation Test	
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i40(VF)	2013	General	TCM(Transmission Control Module)	Version Information	
i40(VF)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
i40(VF)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
i40(VF)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
i40(VF)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
i40(VF)	2013	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
i40(VF)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i40(VF)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i40(VF)	2013	General	ABS(Anti-lock Braking System)	Version Information	
i40(VF)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
i40(VF)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i40(VF)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
i40(VF)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
i40(VF)	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i40(VF)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i40(VF)	2013	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
i40(VF)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
i40(VF)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i40(VF)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i40(VF)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i40(VF)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i40(VF)	2013	General	AC(Air Conditioning)	Version Information	
i40(VF)	2013	General	AC(Air Conditioning)	Read Fault Code	
i40(VF)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
i40(VF)	2013	General	AC(Air Conditioning)	Read Data Stream	
i40(VF)	2013	General	AC(Air Conditioning)	Actuation Test	
i40(VF)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i40(VF)	2013	General	BCM(Body Control Module)	Version Information	
i40(VF)	2013	General	BCM(Body Control Module)	Read Fault Code	
i40(VF)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
i40(VF)	2013	General	BCM(Body Control Module)	Read Data Stream	
i40(VF)	2013	General	BCM(Body Control Module)	Actuation Test	
i40(VF)	2013	General	BCM(Body Control Module)	Special Function	User Option
i40(VF)	2013	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting

model	year	area	system	function	subfunction
i40(VF)	2013	General	EPB(Electrical Parking Brake)	Version Information	
i40(VF)	2013	General	EPB(Electrical Parking Brake)	Read Fault Code	
i40(VF)	2013	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
i40(VF)	2013	General	EPB(Electrical Parking Brake)	Read Data Stream	
i40(VF)	2013	General	EPB(Electrical Parking Brake)	Actuation Test	
i40(VF)	2013	General	EPB(Electrical Parking Brake)	Special Function	PAD Change mode(before
i40(VF)	2013	General	EPB(Electrical Parking Brake)	Special Function	PAD Change mode(after
i40(VF)	2013	General	EPS(Electronic Power Steering)	Version Information	Change)
i40(VF)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
i40(VF)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i40(VF)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
i40(VF)	2013	General	EPS(Electronic Power Steering)	Read FreezeData	
i40(VF)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i40(VF)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i40(VF)	2013	General	EPS(Electronic Power Steering)	Special Function	Torque Offset Calibration
i40(VF)	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i40(VF)	2013	General	Head Lamp	Version Information	
i40(VF)	2013	General	Head Lamp	Read Fault Code	
i40(VF)	2013	General	Head Lamp	Clear Fault Memory	
i40(VF)	2013	General	Head Lamp	Read Data Stream	
i40(VF)	2013	General	Head Lamp	Actuation Test	
i40(VF)	2013	General	Head Lamp	Special Function	Calibration
i40(VF)	2013	General	Head Lamp	Special Function	Parameter Download
i40(VF)	2013	General	Head Lamp	Special Function	Headlamp Leveling
i40(VF)	2013	General	Head Lamp	Special Function	Parameter Setting
i40(VF)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i40(VF)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i40(VF)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
i40(VF)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i40(VF)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i40(VF)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
i40(VF)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i40(VF)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i40(VF)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i40(VF)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i40(VF)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i40(VF)	2013	General	IMM(Immobilizer)	Read Fault Code	
i40(VF)	2013	General	IMM(Immobilizer)	Clear Fault Memory	
i40(VF)	2013	General	IMM(Immobilizer)	Read Data Stream	
i40(VF)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
i40(VF)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i40(VF)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i40(VF)	2013	General	IMM(Immobilizer)	Special Function	Teaching
i40(VF)	2013	General	Smart Key Unit	Version Information	
i40(VF)	2013	General	Smart Key Unit	Read Fault Code	
i40(VF)	2013	General	Smart Key Unit	Clear Fault Memory	
i40(VF)	2013	General	Smart Key Unit	Read Data Stream	
i40(VF)	2013	General	Smart Key Unit	Actuation Test	
i40(VF)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
i40(VF)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
i40(VF)	2013	General	Smart Key Unit	Special Function	SMK Status Information
i40(VF)	2013	General	Smart Key Unit	Special Function	ESCL Status Information
i40(VF)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
i40(VF)	2013	General	Smart Key Unit	Special Function	Current FOB Key Check
i40(VF)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
i40(VF)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
i40(VF)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
i40(VF)	2013	General	Transmitter Code Saving	Read Data Stream	
i40(VF)	2013	General	Transmitter Code Saving	Special Function	Code Saving
i40(VF)	2013	General	Lane Keeping Assist System	Version Information	
i40(VF)	2013	General	Lane Keeping Assist System	Read Fault Code	
i40(VF)	2013	General	Lane Keeping Assist System	Clear Fault Memory	
i40(VF)	2013	General	Lane Keeping Assist System	Read Data Stream	
i40(VF)	2013	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
i40(VF)	2013	General	Lane Keeping Assist System	Special Function	LKAS Variant Coding
i40(VF)	2013	General	Smart Parking Assist System	Version Information	
i40(VF)	2013	General	Smart Parking Assist System	Read Fault Code	
i40(VF)	2013	General	Smart Parking Assist System	Clear Fault Memory	
i40(VF)	2013	General	Smart Parking Assist System	Read Data Stream	
i40(VF)	2013	General	Smart Parking Assist System	Actuation Test	
i40(VF)	2013	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i40(VF)	2013	General	Active Air Flap	Version Information	
i40(VF)	2013	General	Active Air Flap	Read Fault Code	
i40(VF)	2013	General	Active Air Flap	Clear Fault Memory	
i40(VF)	2013	General	Active Air Flap	Read Data Stream	
i40(VF)	2013	General	Active Air Flap	Actuation Test	
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i40(VF)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
i40(VF)	2012	General	ECM(Engine Control Module)	Version Information	
i40(VF)	2012	General	ECM(Engine Control Module)	Read Fault Code	
i40(VF)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
i40(VF)	2012	General	ECM(Engine Control Module)	Read Data Stream	
i40(VF)	2012	General	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
i40(VF)	2012	General	ECM(Engine Control Module)	Actuation Test	
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	CVVT Test
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
i40(VF)	2012	General	TCM(Transmission Control Module)	Version Information	
i40(VF)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
i40(VF)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
i40(VF)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
i40(VF)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
i40(VF)	2012	General	TCM(Transmission Control Module)	Actuation Test	
i40(VF)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
i40(VF)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
i40(VF)	2012	General	ABS(Anti-lock Braking System)	Version Information	
i40(VF)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
i40(VF)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
i40(VF)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
i40(VF)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
i40(VF)	2012	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
i40(VF)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
i40(VF)	2012	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
i40(VF)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
i40(VF)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
i40(VF)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
i40(VF)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
i40(VF)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
i40(VF)	2012	General	AC(Air Conditioning)	Version Information	
i40(VF)	2012	General	AC(Air Conditioning)	Read Fault Code	
i40(VF)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
i40(VF)	2012	General	AC(Air Conditioning)	Read Data Stream	
i40(VF)	2012	General	AC(Air Conditioning)	Actuation Test	
i40(VF)	2012	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
i40(VF)	2012	General	BCM(Body Control Module)	Version Information	
i40(VF)	2012	General	BCM(Body Control Module)	Read Fault Code	
i40(VF)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
i40(VF)	2012	General	BCM(Body Control Module)	Read Data Stream	
i40(VF)	2012	General	BCM(Body Control Module)	Actuation Test	
i40(VF)	2012	General	BCM(Body Control Module)	Special Function	User Option
i40(VF)	2012	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
i40(VF)	2012	General	EPB(Electrical Parking Brake)	Version Information	
i40(VF)	2012	General	EPB(Electrical Parking Brake)	Read Fault Code	
i40(VF)	2012	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
i40(VF)	2012	General	EPB(Electrical Parking Brake)	Read Data Stream	
i40(VF)	2012	General	EPB(Electrical Parking Brake)	Actuation Test	
i40(VF)	2012	General	EPB(Electrical Parking Brake)	Special Function	FAD Change mode(before Change)
i40(VF)	2012	General	EPB(Electrical Parking Brake)	Special Function	FAD Change mode(After Change)
i40(VF)	2012	General	EPS(Electronic Power Steering)	Version Information	
i40(VF)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
i40(VF)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
i40(VF)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
i40(VF)	2012	General	EPS(Electronic Power Steering)	Read FreezeData	

model	year	area	system	function	subfunction
i40(VF)	2012	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
i40(VF)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
i40(VF)	2012	General	EPS(Electronic Power Steering)	Special Function	Torque Offset Calibration
i40(VF)	2012	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
i40(VF)	2012	General	Head Lamp	Version Information	
i40(VF)	2012	General	Head Lamp	Read Fault Code	
i40(VF)	2012	General	Head Lamp	Clear Fault Memory	
i40(VF)	2012	General	Head Lamp	Read Data Stream	
i40(VF)	2012	General	Head Lamp	Actuation Test	
i40(VF)	2012	General	Head Lamp	Special Function	Calibration
i40(VF)	2012	General	Head Lamp	Special Function	Parameter Download
i40(VF)	2012	General	Head Lamp	Special Function	Headlamp Leveling
i40(VF)	2012	General	Head Lamp	Special Function	Parameter Setting
i40(VF)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
i40(VF)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
i40(VF)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
i40(VF)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
i40(VF)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
i40(VF)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
i40(VF)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
i40(VF)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
i40(VF)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
i40(VF)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
i40(VF)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
i40(VF)	2012	General	IMM(Immobilizer)	Read Fault Code	
i40(VF)	2012	General	IMM(Immobilizer)	Clear Fault Memory	
i40(VF)	2012	General	IMM(Immobilizer)	Read Data Stream	
i40(VF)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
i40(VF)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
i40(VF)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
i40(VF)	2012	General	IMM(Immobilizer)	Special Function	Teaching
i40(VF)	2012	General	Smart Key Unit	Version Information	
i40(VF)	2012	General	Smart Key Unit	Read Fault Code	
i40(VF)	2012	General	Smart Key Unit	Clear Fault Memory	
i40(VF)	2012	General	Smart Key Unit	Read Data Stream	
i40(VF)	2012	General	Smart Key Unit	Actuation Test	
i40(VF)	2012	General	Smart Key Unit	Special Function	Smart Key Code Saving
i40(VF)	2012	General	Smart Key Unit	Special Function	Neutralization Mode
i40(VF)	2012	General	Smart Key Unit	Special Function	SMK Status Information
i40(VF)	2012	General	Smart Key Unit	Special Function	ESCL Status Information
i40(VF)	2012	General	Smart Key Unit	Special Function	FOB Key Status Information
i40(VF)	2012	General	Smart Key Unit	Special Function	Current FOB Key Check
i40(VF)	2012	General	Smart Key Unit	Special Function	Serial Communication Line Check
i40(VF)	2012	General	Smart Key Unit	Special Function	Antenna Status Check
i40(VF)	2012	General	Smart Key Unit	Special Function	ESCL Open Status Check
i40(VF)	2012	General	Transmitter Code Saving	Read Data Stream	
i40(VF)	2012	General	Transmitter Code Saving	Special Function	Code Saving
i40(VF)	2012	General	Lane Keeping Assist System	Version Information	
i40(VF)	2012	General	Lane Keeping Assist System	Read Fault Code	
i40(VF)	2012	General	Lane Keeping Assist System	Clear Fault Memory	
i40(VF)	2012	General	Lane Keeping Assist System	Read Data Stream	
i40(VF)	2012	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
i40(VF)	2012	General	Lane Keeping Assist System	Special Function	LKAS Variant Coding
i40(VF)	2012	General	Smart Parking Assist System	Version Information	
i40(VF)	2012	General	Smart Parking Assist System	Read Fault Code	
i40(VF)	2012	General	Smart Parking Assist System	Clear Fault Memory	
i40(VF)	2012	General	Smart Parking Assist System	Read Data Stream	

model	year	area	system	function	subfunction
i40(VF)	2012	General	Smart Parking Assist System	Actuation Test	
i40(VF)	2012	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
i40(VF)	2012	General	Active Air Flap	Version Information	
i40(VF)	2012	General	Active Air Flap	Read Fault Code	
i40(VF)	2012	General	Active Air Flap	Clear Fault Memory	
i40(VF)	2012	General	Active Air Flap	Read Data Stream	
i40(VF)	2012	General	Active Air Flap	Actuation Test	
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
i40(VF)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine
IONIQ Electric(AE EV)	2018	General	Electric Parking Brake	Version Information	
IONIQ Electric(AE EV)	2018	General	Electric Parking Brake	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	Electric Parking Brake	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	Electric Parking Brake	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	Electric Parking Brake	Actuation Test	
IONIQ Electric(AE EV)	2018	General	Electric Parking Brake	Special Function	Brake Pad Change Mode
IONIQ Electric(AE EV)	2018	General	Electric Parking Brake	Special Function	Assembly Check(Ecu Replacement)
IONIQ Electric(AE EV)	2018	General	Active Hydraulic Booster	Version Information	
IONIQ Electric(AE EV)	2018	General	Active Hydraulic Booster	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	Active Hydraulic Booster	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	Active Hydraulic Booster	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	Active Hydraulic Booster	Actuation Test	
IONIQ Electric(AE EV)	2018	General	Active Hydraulic Booster	Special Function	Variant Coding
IONIQ Electric(AE EV)	2018	General	Active Hydraulic Booster	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
IONIQ Electric(AE EV)	2018	General	Active Hydraulic Booster	Special Function	Auto Detected Reset(FSP/FSC)Only

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2018	General	Active Hydraulic Booster	Special Function	Pressure Sensor Calibration
IONIQ Electric(AE EV)	2018	General	Active Hydraulic Booster	Special Function	Pressure Sensor Calibration
IONIQ Electric(AE EV)	2018	General	Active Hydraulic Booster	Special Function	High Pressure Release Mode
IONIQ Electric(AE EV)	2018	General	SCC/AEB	Version Information	
IONIQ Electric(AE EV)	2018	General	SCC/AEB	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	SCC/AEB	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	SCC/AEB	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	SCC/AEB	Special Function	Variant Coding
IONIQ Electric(AE EV)	2018	General	SCC/AEB	Special Function	Radial Sensor Alignment(SCC/AEB)
IONIQ Electric(AE EV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
IONIQ Electric(AE EV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	AC(Air Conditioning)	Version Information	
IONIQ Electric(AE EV)	2018	General	AC(Air Conditioning)	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	AC(Air Conditioning)	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	AC(Air Conditioning)	Actuation Test	
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Version Information	
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Actuation Test	
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Special Function	User Option
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Special Function	TPMS TEST
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
IONIQ Electric(AE EV)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
IONIQ Electric(AE EV)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
IONIQ Electric(AE EV)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
IONIQ Electric(AE EV)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
IONIQ Electric(AE EV)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
IONIQ Electric(AE EV)	2018	General	EPS(Electronic Power Steering)	Version Information	
IONIQ Electric(AE EV)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
IONIQ Electric(AE EV)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Version Information	
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Actuation Test	
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Special Function	SMK Status Information
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
IONIQ Electric(AE EV)	2018	General	Blind Spot Detection	Version Information	
IONIQ Electric(AE EV)	2018	General	Blind Spot Detection	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	Blind Spot Detection	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	Blind Spot Detection	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	Blind Spot Detection	Actuation Test	
IONIQ Electric(AE EV)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
IONIQ Electric(AE EV)	2018	General	Blind Spot Detection	Special Function	BSD Variant Coding
IONIQ Electric(AE EV)	2018	General	Multi Function Camera	Version Information	
IONIQ Electric(AE EV)	2018	General	Multi Function Camera	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	Multi Function Camera	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	Multi Function Camera	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
IONIQ Electric(AE EV)	2018	General	Multi Function Camera	Special Function	SPTAC Calibration
IONIQ Electric(AE EV)	2018	General	Multi Function Camera	Special Function	SPC Calibration
IONIQ Electric(AE EV)	2018	General	Parking Guide System	Version Information	
IONIQ Electric(AE EV)	2018	General	Parking Guide System	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	Parking Guide System	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	Parking Guide System	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	Active Air Flap	Version Information	
IONIQ Electric(AE EV)	2018	General	Active Air Flap	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	Active Air Flap	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	Active Air Flap	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	Active Air Flap	Actuation Test	
IONIQ Electric(AE EV)	2018	General	Amplifier	Special Function	AMP Operation Test
IONIQ Electric(AE EV)	2018	General	EV Battery System	Version Information	
IONIQ Electric(AE EV)	2018	General	EV Battery System	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	EV Battery System	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	EV Battery System	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2018	General	EV Battery System	Actuation Test	
IONIQ Electric(AE EV)	2018	General	EV Battery System	Special Function	SOC Calibration
IONIQ Electric(AE EV)	2018	General	EV Battery System	Special Function	Isolation Breakdown Detection Function
IONIQ Electric(AE EV)	2018	General	E-Shifter	Version Information	
IONIQ Electric(AE EV)	2018	General	E-Shifter	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	E-Shifter	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	E-Shifter	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	E-Shifter	Actuation Test	
IONIQ Electric(AE EV)	2018	General	EV Motor Control System	Version Information	
IONIQ Electric(AE EV)	2018	General	EV Motor Control System	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	EV Motor Control System	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	EV Motor Control System	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	EV Motor Control System	Actuation Test	
IONIQ Electric(AE EV)	2018	General	EV Motor Control System	Special Function	Electric water Pump Control
IONIQ Electric(AE EV)	2018	General	EV Motor Control System	Special Function	Initialization Of Automatic Resolver Offset Calibration
IONIQ Electric(AE EV)	2018	General	Telematics Unit	Version Information	
IONIQ Electric(AE EV)	2018	General	Telematics Unit	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	Telematics Unit	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	Virtual Engine Sound System	Version Information	
IONIQ Electric(AE EV)	2018	General	Virtual Engine Sound System	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	Virtual Engine Sound System	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	Virtual Engine Sound System	Actuation Test	
IONIQ Electric(AE EV)	2018	General	Integrated Gateway Power Module	Version Information	
IONIQ Electric(AE EV)	2018	General	Integrated Gateway Power Module	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	Integrated Gateway Power Module	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	Integrated Gateway Power Module	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	Integrated Gateway Power Module	Actuation Test	

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2018	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
IONIQ Electric(AE EV)	2018	General	Integrated Gateway Power Module	Special Function	User Option
IONIQ Electric(AE EV)	2018	General	Charging Control Module	Version Information	
IONIQ Electric(AE EV)	2018	General	Charging Control Module	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	Charging Control Module	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	Charging Control Module	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	On Board Charger	Version Information	
IONIQ Electric(AE EV)	2018	General	On Board Charger	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	On Board Charger	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	On Board Charger	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	VCULDC	Version Information	
IONIQ Electric(AE EV)	2018	General	VCULDC	Read Fault Code	
IONIQ Electric(AE EV)	2018	General	VCULDC	Clear Fault Memory	
IONIQ Electric(AE EV)	2018	General	VCULDC	Read Data Stream	
IONIQ Electric(AE EV)	2018	General	VCULDC	Actuation Test	
IONIQ Electric(AE EV)	2018	General	VCULDC	Special Function	Read VIN
IONIQ Electric(AE EV)	2018	General	VCULDC	Special Function	Write VIN
IONIQ Electric(AE EV)	2018	General	VCULDC	Special Function	Reset Or Learning Data Or Available Distance For Driving
IONIQ Electric(AE EV)	2018	General	VCULDC	Special Function	LDC Activation Test
IONIQ Electric(AE EV)	2018	General	VCULDC	Special Function	SCU Parking Application Test
IONIQ Electric(AE EV)	2018	General	VCULDC	Special Function	SCU Parking Canceling Test
IONIQ Electric(AE EV)	2017	General	Electric Parking Brake	Version Information	
IONIQ Electric(AE EV)	2017	General	Electric Parking Brake	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	Electric Parking Brake	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	Electric Parking Brake	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	Electric Parking Brake	Actuation Test	
IONIQ Electric(AE EV)	2017	General	Electric Parking Brake	Special Function	Brake Pad Change Mode
IONIQ Electric(AE EV)	2017	General	Electric Parking Brake	Special Function	Assembly Check(Ecu Replacement)

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Version Information	
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Actuation Test	
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Special Function	Variant Coding
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Special Function	Auto Detected Configuration
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Special Function	Reset(ESP/ESC/Only)
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Special Function	Pressure Sensor Calibration
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Special Function	Rear Travel
IONIQ Electric(AE EV)	2017	General	Active Hydraulic Booster	Special Function	High Pressure Release Mode
IONIQ Electric(AE EV)	2017	General	SCC/AEB	Version Information	
IONIQ Electric(AE EV)	2017	General	SCC/AEB	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	SCC/AEB	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	SCC/AEB	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	SCC/AEB	Special Function	Variant Coding
IONIQ Electric(AE EV)	2017	General	SCC/AEB	Special Function	Radar Sensor Alignment(SCC/AEB)
IONIQ Electric(AE EV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
IONIQ Electric(AE EV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	AC(Air Conditioning)	Version Information	
IONIQ Electric(AE EV)	2017	General	AC(Air Conditioning)	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	AC(Air Conditioning)	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	AC(Air Conditioning)	Actuation Test	
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Actuation Test	
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Special Function	User Option
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Special Function	TPMS TEST
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
IONIQ Electric(AE EV)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
IONIQ Electric(AE EV)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
IONIQ Electric(AE EV)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
IONIQ Electric(AE EV)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
IONIQ Electric(AE EV)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
IONIQ Electric(AE EV)	2017	General	EPS(Electronic Power Steering)	Version Information	
IONIQ Electric(AE EV)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
IONIQ Electric(AE EV)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Version Information	
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Actuation Test	
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Special Function	SMK Status Information
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
IONIQ Electric(AE EV)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
IONIQ Electric(AE EV)	2017	General	Blind Spot Detection	Version Information	
IONIQ Electric(AE EV)	2017	General	Blind Spot Detection	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	Blind Spot Detection	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	Blind Spot Detection	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	Blind Spot Detection	Actuation Test	
IONIQ Electric(AE EV)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
IONIQ Electric(AE EV)	2017	General	Blind Spot Detection	Special Function	BSD Variant Coding
IONIQ Electric(AE EV)	2017	General	Multi Function Camera	Version Information	
IONIQ Electric(AE EV)	2017	General	Multi Function Camera	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	Multi Function Camera	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	Multi Function Camera	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
IONIQ Electric(AE EV)	2017	General	Multi Function Camera	Special Function	SPTAC Calibration
IONIQ Electric(AE EV)	2017	General	Multi Function Camera	Special Function	SPC Calibration
IONIQ Electric(AE EV)	2017	General	Parking Guide System	Version Information	
IONIQ Electric(AE EV)	2017	General	Parking Guide System	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	Parking Guide System	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	Parking Guide System	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2017	General	Active Air Flap	Version Information	
IONIQ Electric(AE EV)	2017	General	Active Air Flap	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	Active Air Flap	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	Active Air Flap	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	Active Air Flap	Actuation Test	
IONIQ Electric(AE EV)	2017	General	Amplifier	Special Function	AMP Operation Test
IONIQ Electric(AE EV)	2017	General	EV Battery System	Version Information	
IONIQ Electric(AE EV)	2017	General	EV Battery System	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	EV Battery System	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	EV Battery System	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	EV Battery System	Actuation Test	
IONIQ Electric(AE EV)	2017	General	EV Battery System	Special Function	SOC Calibration
IONIQ Electric(AE EV)	2017	General	EV Battery System	Special Function	Isolation Breakdown Detection Function
IONIQ Electric(AE EV)	2017	General	E-Shifter	Version Information	
IONIQ Electric(AE EV)	2017	General	E-Shifter	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	E-Shifter	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	E-Shifter	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	E-Shifter	Actuation Test	
IONIQ Electric(AE EV)	2017	General	EV Motor Control System	Version Information	
IONIQ Electric(AE EV)	2017	General	EV Motor Control System	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	EV Motor Control System	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	EV Motor Control System	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	EV Motor Control System	Actuation Test	
IONIQ Electric(AE EV)	2017	General	EV Motor Control System	Special Function	Electric water Pump Control
IONIQ Electric(AE EV)	2017	General	EV Motor Control System	Special Function	Initialization Of Automatic Resolver Offset Calibration
IONIQ Electric(AE EV)	2017	General	Telematics Unit	Version Information	
IONIQ Electric(AE EV)	2017	General	Telematics Unit	Read Fault Code	

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2017	General	Telematics Unit	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	Virtual Engine Sound System	Version Information	
IONIQ Electric(AE EV)	2017	General	Virtual Engine Sound System	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	Virtual Engine Sound System	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	Virtual Engine Sound System	Actuation Test	
IONIQ Electric(AE EV)	2017	General	Integrated Gateway Power Module	Version Information	
IONIQ Electric(AE EV)	2017	General	Integrated Gateway Power Module	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	Integrated Gateway Power Module	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	Integrated Gateway Power Module	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	Integrated Gateway Power Module	Actuation Test	
IONIQ Electric(AE EV)	2017	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
IONIQ Electric(AE EV)	2017	General	Integrated Gateway Power Module	Special Function	User Option
IONIQ Electric(AE EV)	2017	General	Charging Control Module	Version Information	
IONIQ Electric(AE EV)	2017	General	Charging Control Module	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	Charging Control Module	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	Charging Control Module	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	On Board Charger	Version Information	
IONIQ Electric(AE EV)	2017	General	On Board Charger	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	On Board Charger	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	On Board Charger	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	VCULDC	Version Information	
IONIQ Electric(AE EV)	2017	General	VCULDC	Read Fault Code	
IONIQ Electric(AE EV)	2017	General	VCULDC	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	General	VCULDC	Read Data Stream	
IONIQ Electric(AE EV)	2017	General	VCULDC	Actuation Test	
IONIQ Electric(AE EV)	2017	General	VCULDC	Special Function	Read VIN
IONIQ Electric(AE EV)	2017	General	VCULDC	Special Function	Write VIN
IONIQ Electric(AE EV)	2017	General	VCULDC	Special Function	Reset Of Learning Data Or Available Distance For Driving

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2017	General	VCULDC	Special Function	LDC Activation Test
IONIQ Electric(AE EV)	2017	General	VCULDC	Special Function	SCU Parking Application Test
IONIQ Electric(AE EV)	2017	General	VCULDC	Special Function	SCU Parking Canceling Test
IONIQ Hybrid(AE HEV)	2018	General	ECM(Engine Control Module)	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	ECM(Engine Control Module)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	ECM(Engine Control Module)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	ECM(Engine Control Module)	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
IONIQ Hybrid(AE HEV)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
IONIQ Hybrid(AE HEV)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
IONIQ Hybrid(AE HEV)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
IONIQ Hybrid(AE HEV)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
IONIQ Hybrid(AE HEV)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
IONIQ Hybrid(AE HEV)	2018	General	TCM(Transmission Control Module)	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	TCM(Transmission Control Module)	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
IONIQ Hybrid(AE HEV)	2018	General	ESP/AHB	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	ESP/AHB	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	ESP/AHB	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	ESP/AHB	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	ESP/AHB	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	ESP/AHB	Special Function	Variant Coding
IONIQ Hybrid(AE HEV)	2018	General	ESP/AHB	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2018	General	ESP/AHB	Special Function	Auto Detected Configuration
IONIQ Hybrid(AE HEV)	2018	General	ESP/AHB	Special Function	Reset(ESP/ESC)Only Pressure Sensor Calibration
IONIQ Hybrid(AE HEV)	2018	General	ESP/AHB	Special Function	Reduce Travel Front Pressure Release
IONIQ Hybrid(AE HEV)	2018	General	ESP/AHB	Special Function	Mode
IONIQ Hybrid(AE HEV)	2018	General	SCC/AEB	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	SCC/AEB	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	SCC/AEB	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	SCC/AEB	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	SCC/AEB	Special Function	Variant Coding
IONIQ Hybrid(AE HEV)	2018	General	SCC/AEB	Special Function	Radar Sensor Alignment(SCC/AEB)
IONIQ Hybrid(AE HEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	AC(Air Conditioning)	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	AC(Air Conditioning)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	AC(Air Conditioning)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	AC(Air Conditioning)	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Special Function	User Option
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Special Function	TPMS TEST

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
IONIQ Hybrid(AE HEV)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
IONIQ Hybrid(AE HEV)	2018	General	EPS(Electronic Power Steering)	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
IONIQ Hybrid(AE HEV)	2018	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Special Function	SMK Status Information
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
IONIQ Hybrid(AE HEV)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
IONIQ Hybrid(AE HEV)	2018	General	Blind Spot Detection	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	Blind Spot Detection	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	Blind Spot Detection	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	Blind Spot Detection	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2018	General	Blind Spot Detection	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
IONIQ Hybrid(AE HEV)	2018	General	Blind Spot Detection	Special Function	BSD Variant Coding
IONIQ Hybrid(AE HEV)	2018	General	Multi Function Camera	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	Multi Function Camera	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	Multi Function Camera	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	Multi Function Camera	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
IONIQ Hybrid(AE HEV)	2018	General	Multi Function Camera	Special Function	SPTAC Calibration
IONIQ Hybrid(AE HEV)	2018	General	Multi Function Camera	Special Function	SPC Calibration
IONIQ Hybrid(AE HEV)	2018	General	Parking Guide System	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	Parking Guide System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	Parking Guide System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	Parking Guide System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	Active Air Flap	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	Active Air Flap	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	Active Air Flap	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	Active Air Flap	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	Active Air Flap	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	Amplifier	Special Function	AMP Operation Test
IONIQ Hybrid(AE HEV)	2018	General	Battery Management System	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	Battery Management System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	Battery Management System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	Battery Management System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	Battery Management System	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	Battery Management System	Special Function	SOC Calibration
IONIQ Hybrid(AE HEV)	2018	General	Battery Management System	Special Function	12V Current Sensor Offset Correction Function
IONIQ Hybrid(AE HEV)	2018	General	Battery Management System	Special Function	Inspection Of 12V Battery Status

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2018	General	Battery Management System	Special Function	Isolation Breakdown Detection Function
IONIQ Hybrid(AE HEV)	2018	General	Motor Control System	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	Motor Control System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	Motor Control System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	Motor Control System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	Motor Control System	Special Function	Electric water Pump Control
IONIQ Hybrid(AE HEV)	2018	General	Motor Control System	Special Function	HPCU(MCU/GCU)Self- diagnosis Function
IONIQ Hybrid(AE HEV)	2018	General	Telematics Unit	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	Telematics Unit	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	Telematics Unit	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	Virtual Engine Sound System	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	Virtual Engine Sound System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	Virtual Engine Sound System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	Virtual Engine Sound System	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	Integrated Gateway Power Module	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	Integrated Gateway Power Module	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	Integrated Gateway Power Module	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	Integrated Gateway Power Module	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	Integrated Gateway Power Module	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
IONIQ Hybrid(AE HEV)	2018	General	Integrated Gateway Power Module	Special Function	User Option
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Version Information	
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Special Function	Engine Test On

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Special Function	Engine Test Off
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Special Function	LDC Activation Test
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Special Function	Compression Pressure Test Of Engine Cylinder
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Special Function	Initialization Of The Engine Clutch Inspection Line Learning And Diagnostic
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Special Function	Renovation Of Air From Engine Clutch Hydraulic Pressure Line
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Special Function	Engine Clutch/Motor Resolver Adaptation
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Special Function	Stabilization Of The Engine Clutch Hardware Transfer Torque
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Special Function	HCU Variant Coding
IONIQ Hybrid(AE HEV)	2018	General	HCU/Low DC-DC Converter	Special Function	Stabilization Of Hydraulic Oil Flow Of Engine Clutch
IONIQ Hybrid(AE HEV)	2018	General	IMM(Immobilizer)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	General	IMM(Immobilizer)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
IONIQ Hybrid(AE HEV)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
IONIQ Hybrid(AE HEV)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
IONIQ Hybrid(AE HEV)	2018	General	IMM(Immobilizer)	Special Function	Teaching
IONIQ Hybrid(AE HEV)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
IONIQ Hybrid(AE HEV)	2017	General	ECM(Engine Control Module)	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	ECM(Engine Control Module)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2017	General	ECM(Engine Control Module)	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
IONIQ Hybrid(AE HEV)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
IONIQ Hybrid(AE HEV)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
IONIQ Hybrid(AE HEV)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
IONIQ Hybrid(AE HEV)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
IONIQ Hybrid(AE HEV)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
IONIQ Hybrid(AE HEV)	2017	General	TCM(Transmission Control Module)	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	TCM(Transmission Control Module)	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
IONIQ Hybrid(AE HEV)	2017	General	ESP/AHB	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	ESP/AHB	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	ESP/AHB	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	ESP/AHB	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	ESP/AHB	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	ESP/AHB	Special Function	Variant Coding
IONIQ Hybrid(AE HEV)	2017	General	ESP/AHB	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
IONIQ Hybrid(AE HEV)	2017	General	ESP/AHB	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
IONIQ Hybrid(AE HEV)	2017	General	ESP/AHB	Special Function	Pressure Sensor Calibration Pedal Travel
IONIQ Hybrid(AE HEV)	2017	General	ESP/AHB	Special Function	High Pressure Release Mode
IONIQ Hybrid(AE HEV)	2017	General	SCC/AEB	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	SCC/AEB	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	SCC/AEB	Clear Fault Memory	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2017	General	SCC/AEB	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	SCC/AEB	Special Function	Variant Coding
IONIQ Hybrid(AE HEV)	2017	General	SCC/AEB	Special Function	Radar Sensor Alignment(SCC/AEB)
IONIQ Hybrid(AE HEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	AC(Air Conditioning)	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	AC(Air Conditioning)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	AC(Air Conditioning)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	AC(Air Conditioning)	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Special Function	User Option
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Special Function	TPMS TEST
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
IONIQ Hybrid(AE HEV)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
IONIQ Hybrid(AE HEV)	2017	General	EPS(Electronic Power Steering)	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
IONIQ Hybrid(AE HEV)	2017	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Special Function	SMK Status Information
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
IONIQ Hybrid(AE HEV)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
IONIQ Hybrid(AE HEV)	2017	General	Blind Spot Detection	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	Blind Spot Detection	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	Blind Spot Detection	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	Blind Spot Detection	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	Blind Spot Detection	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
IONIQ Hybrid(AE HEV)	2017	General	Blind Spot Detection	Special Function	BSD Variant Coding
IONIQ Hybrid(AE HEV)	2017	General	Multi Function Camera	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	Multi Function Camera	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	Multi Function Camera	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	Multi Function Camera	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2017	General	Multi Function Camera	Special Function	SPTAC Calibration
IONIQ Hybrid(AE HEV)	2017	General	Multi Function Camera	Special Function	SPC Calibration
IONIQ Hybrid(AE HEV)	2017	General	Parking Guide System	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	Parking Guide System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	Parking Guide System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	Parking Guide System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	Active Air Flap	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	Active Air Flap	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	Active Air Flap	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	Active Air Flap	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	Active Air Flap	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	Amplifier	Special Function	AMP Operation Test
IONIQ Hybrid(AE HEV)	2017	General	Battery Management System	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	Battery Management System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	Battery Management System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	Battery Management System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	Battery Management System	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	Battery Management System	Special Function	SOC Calibration
IONIQ Hybrid(AE HEV)	2017	General	Battery Management System	Special Function	Isolation Breakdown Detection Function
IONIQ Hybrid(AE HEV)	2017	General	Motor Control System	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	Motor Control System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	Motor Control System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	Motor Control System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	Motor Control System	Special Function	Electric water Pump Control
IONIQ Hybrid(AE HEV)	2017	General	Motor Control System	Special Function	HPCU(MCU/GCU)Self- diagnosis Function
IONIQ Hybrid(AE HEV)	2017	General	Telematics Unit	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	Telematics Unit	Read Fault Code	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2017	General	Telematics Unit	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	Virtual Engine Sound System	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	Virtual Engine Sound System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	Virtual Engine Sound System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	Virtual Engine Sound System	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	Integrated Gateway Power Module	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	Integrated Gateway Power Module	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	Integrated Gateway Power Module	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	Integrated Gateway Power Module	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	Integrated Gateway Power Module	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
IONIQ Hybrid(AE HEV)	2017	General	Integrated Gateway Power Module	Special Function	User Option
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Version Information	
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Special Function	Engine Test On
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Special Function	Engine Test Off
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Special Function	LDC Activation Test
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Special Function	Compression Pressure Test Of Engine Cylinder
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Special Function	Initialization Of The Engine Clutch Inspection Line Learning And Diagnostic Information
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Special Function	Removal Of Air From Engine Clutch Hydraulic Pressure Line
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Special Function	Engine Clutch/Motor Resolver Adaptation

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Special Function	Stabilization Of The Engine Clutch Hardware Transfer Torque
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Special Function	HCU Variant Coding
IONIQ Hybrid(AE HEV)	2017	General	HCU/Low DC-DC Converter	Special Function	Stabilization Of Hydraulic Oil Flow Of Engine Clutch
IONIQ Hybrid(AE HEV)	2017	General	IMM(Immobilizer)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	General	IMM(Immobilizer)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	IMM(Immobilizer)	Special Function	Password
IONIQ Hybrid(AE HEV)	2017	General	IMM(Immobilizer)	Special Function	Teaching/Changing
IONIQ Hybrid(AE HEV)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
IONIQ Hybrid(AE HEV)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
IONIQ Hybrid(AE HEV)	2017	General	IMM(Immobilizer)	Special Function	Teaching
IONIQ Hybrid(AE HEV)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
IONIQ Phev(AE PHEV)	2018	General	ECM(Engine Control Module)	Version Information	
IONIQ Phev(AE PHEV)	2018	General	ECM(Engine Control Module)	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	ECM(Engine Control Module)	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	ECM(Engine Control Module)	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
IONIQ Phev(AE PHEV)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
IONIQ Phev(AE PHEV)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
IONIQ Phev(AE PHEV)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
IONIQ Phev(AE PHEV)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
IONIQ Phev(AE PHEV)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
IONIQ Phev(AE PHEV)	2018	General	TCM(Transmission Control Module)	Version Information	
IONIQ Phev(AE PHEV)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2018	General	TCM(Transmission Control Module)	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Version Information	
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Special Function	Variant Coding
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Special Function	Auto Detected Configuration
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Special Function	Reset(ESP/ESC)Only
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Special Function	Pressure Sensor Calibration
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Special Function	Pedal Travel
IONIQ Phev(AE PHEV)	2018	General	ESP/AHB	Special Function	High Pressure Release Mode
IONIQ Phev(AE PHEV)	2018	General	SCC/AEB	Version Information	
IONIQ Phev(AE PHEV)	2018	General	SCC/AEB	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	SCC/AEB	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	SCC/AEB	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	SCC/AEB	Special Function	Variant Coding
IONIQ Phev(AE PHEV)	2018	General	SCC/AEB	Special Function	Radar Sensor Alignment(SCC/AEB)
IONIQ Phev(AE PHEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
IONIQ Phev(AE PHEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	AC(Air Conditioning)	Version Information	
IONIQ Phev(AE PHEV)	2018	General	AC(Air Conditioning)	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2018	General	AC(Air Conditioning)	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Version Information	
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Special Function	User Option
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Special Function	TPMS TEST
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
IONIQ Phev(AE PHEV)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
IONIQ Phev(AE PHEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
IONIQ Phev(AE PHEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
IONIQ Phev(AE PHEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
IONIQ Phev(AE PHEV)	2018	General	EPS(Electronic Power Steering)	Version Information	
IONIQ Phev(AE PHEV)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
IONIQ Phev(AE PHEV)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Special Function	SMK Status Information
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
IONIQ Phev(AE PHEV)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
IONIQ Phev(AE PHEV)	2018	General	Blind Spot Detection	Version Information	
IONIQ Phev(AE PHEV)	2018	General	Blind Spot Detection	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	Blind Spot Detection	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	Blind Spot Detection	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	Blind Spot Detection	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
IONIQ Phev(AE PHEV)	2018	General	Blind Spot Detection	Special Function	BSD Variant Coding
IONIQ Phev(AE PHEV)	2018	General	Multi Function Camera	Version Information	
IONIQ Phev(AE PHEV)	2018	General	Multi Function Camera	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	Multi Function Camera	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	Multi Function Camera	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
IONIQ Phev(AE PHEV)	2018	General	Multi Function Camera	Special Function	SPTAC Calibration
IONIQ Phev(AE PHEV)	2018	General	Multi Function Camera	Special Function	SPC Calibration
IONIQ Phev(AE PHEV)	2018	General	Parking Guide System	Version Information	
IONIQ Phev(AE PHEV)	2018	General	Parking Guide System	Read Fault Code	

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2018	General	Parking Guide System	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	Parking Guide System	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	Active Air Flap	Version Information	
IONIQ Phev(AE PHEV)	2018	General	Active Air Flap	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	Active Air Flap	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	Active Air Flap	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	Active Air Flap	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	Amplifier	Special Function	AMP Operation Test
IONIQ Phev(AE PHEV)	2018	General	Battery Management System	Version Information	
IONIQ Phev(AE PHEV)	2018	General	Battery Management System	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	Battery Management System	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	Battery Management System	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	Battery Management System	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	Battery Management System	Special Function	SOC Calibration
IONIQ Phev(AE PHEV)	2018	General	Battery Management System	Special Function	Isolation Breakdown Detection Function
IONIQ Phev(AE PHEV)	2018	General	Motor Control System	Version Information	
IONIQ Phev(AE PHEV)	2018	General	Motor Control System	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	Motor Control System	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	Motor Control System	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	Motor Control System	Special Function	Motor HCU Resolver Calibration
IONIQ Phev(AE PHEV)	2018	General	Motor Control System	Special Function	Electric Water Pump Control
IONIQ Phev(AE PHEV)	2018	General	Motor Control System	Special Function	HPCU(MCU/GCU)Self-diagnosis Function
IONIQ Phev(AE PHEV)	2018	General	Motor Control System	Special Function	HPCU(MCU,GCU)Diagnosis Parameter Initialization
IONIQ Phev(AE PHEV)	2018	General	Telematics Unit	Version Information	
IONIQ Phev(AE PHEV)	2018	General	Telematics Unit	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	Telematics Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2018	General	Virtual Engine Sound System	Version Information	
IONIQ Phev(AE PHEV)	2018	General	Virtual Engine Sound System	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	Virtual Engine Sound System	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	Virtual Engine Sound System	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	Integrated Gateway Power Module	Version Information	
IONIQ Phev(AE PHEV)	2018	General	Integrated Gateway Power Module	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	Integrated Gateway Power Module	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	Integrated Gateway Power Module	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	Integrated Gateway Power Module	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
IONIQ Phev(AE PHEV)	2018	General	Integrated Gateway Power Module	Special Function	User Option
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Version Information	
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Actuation Test	
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Special Function	Engine Test On
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Special Function	Engine Test Off
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Special Function	LDC Activation Test
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Special Function	Compression Pressure Test Of Engine Cylinder
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Special Function	Initialization Of The Engine Clutch Inspection Line Learning And Diagnostic Removal Of Air From Engine
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Special Function	Clutch Hydraulic Pressure Line
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Special Function	Engine Clutch/Motor Resolver Adaptation

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Special Function	Stabilization Of The Engine Clutch Hardware Transfer Torque
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Special Function	HCU Variant Coding
IONIQ Phev(AE PHEV)	2018	General	HCU/LDC	Special Function	Stabilization Of Hydraulic Oil Flow Of Engine Clutch
IONIQ Phev(AE PHEV)	2018	General	IMM(Immobilizer)	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	IMM(Immobilizer)	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
IONIQ Phev(AE PHEV)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
IONIQ Phev(AE PHEV)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
IONIQ Phev(AE PHEV)	2018	General	IMM(Immobilizer)	Special Function	Teaching
IONIQ Phev(AE PHEV)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
IONIQ Phev(AE PHEV)	2018	General	On Board Charger	Version Information	
IONIQ Phev(AE PHEV)	2018	General	On Board Charger	Read Fault Code	
IONIQ Phev(AE PHEV)	2018	General	On Board Charger	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2018	General	On Board Charger	Read Data Stream	
IONIQ Phev(AE PHEV)	2018	General	On Board Charger	Special Function	variant Coding For Charging Port
IONIQ Phev(AE PHEV)	2017	General	ECM(Engine Control Module)	Version Information	
IONIQ Phev(AE PHEV)	2017	General	ECM(Engine Control Module)	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	ECM(Engine Control Module)	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	ECM(Engine Control Module)	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
IONIQ Phev(AE PHEV)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
IONIQ Phev(AE PHEV)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
IONIQ Phev(AE PHEV)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
IONIQ Phev(AE PHEV)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
IONIQ Phev(AE PHEV)	2017	General	TCM(Transmission Control Module)	Version Information	
IONIQ Phev(AE PHEV)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	TCM(Transmission Control Module)	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Version Information	
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Special Function	Variant Coding
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Special Function	Auto Detected Configuration
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Special Function	Reset(ESP/ESC)Only
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Special Function	Pressure Sensor Calibration
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Special Function	Pedal Travel
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Special Function	High Pressure Release
IONIQ Phev(AE PHEV)	2017	General	ESP/AHB	Special Function	Mode
IONIQ Phev(AE PHEV)	2017	General	SCC/AEB	Version Information	
IONIQ Phev(AE PHEV)	2017	General	SCC/AEB	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	SCC/AEB	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	SCC/AEB	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	SCC/AEB	Special Function	Variant Coding
IONIQ Phev(AE PHEV)	2017	General	SCC/AEB	Special Function	Radial Sensor
IONIQ Phev(AE PHEV)	2017	General	SCC/AEB	Special Function	Alignment(SCC/AEB)
IONIQ Phev(AE PHEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
IONIQ Phev(AE PHEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	AC(Air Conditioning)	Version Information	
IONIQ Phev(AE PHEV)	2017	General	AC(Air Conditioning)	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	AC(Air Conditioning)	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	AC(Air Conditioning)	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Version Information	
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Special Function	User Option
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Special Function	TPMS TEST
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
IONIQ Phev(AE PHEV)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
IONIQ Phev(AE PHEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
IONIQ Phev(AE PHEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
IONIQ Phev(AE PHEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
IONIQ Phev(AE PHEV)	2017	General	EPS(Electronic Power Steering)	Version Information	
IONIQ Phev(AE PHEV)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
IONIQ Phev(AE PHEV)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Version Information	
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Special Function	SMK Status Information
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
IONIQ Phev(AE PHEV)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
IONIQ Phev(AE PHEV)	2017	General	Blind Spot Detection	Version Information	
IONIQ Phev(AE PHEV)	2017	General	Blind Spot Detection	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	Blind Spot Detection	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	Blind Spot Detection	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	Blind Spot Detection	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
IONIQ Phev(AE PHEV)	2017	General	Blind Spot Detection	Special Function	BSD Variant Coding
IONIQ Phev(AE PHEV)	2017	General	Multi Function Camera	Version Information	
IONIQ Phev(AE PHEV)	2017	General	Multi Function Camera	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	Multi Function Camera	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	Multi Function Camera	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2017	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
IONIQ Phev(AE PHEV)	2017	General	Multi Function Camera	Special Function	SPTAC Calibration
IONIQ Phev(AE PHEV)	2017	General	Multi Function Camera	Special Function	SPC Calibration
IONIQ Phev(AE PHEV)	2017	General	Parking Guide System	Version Information	
IONIQ Phev(AE PHEV)	2017	General	Parking Guide System	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	Parking Guide System	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	Parking Guide System	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	Active Air Flap	Version Information	
IONIQ Phev(AE PHEV)	2017	General	Active Air Flap	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	Active Air Flap	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	Active Air Flap	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	Active Air Flap	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	Amplifier	Special Function	AMP Operation Test
IONIQ Phev(AE PHEV)	2017	General	Battery Management System	Version Information	
IONIQ Phev(AE PHEV)	2017	General	Battery Management System	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	Battery Management System	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	Battery Management System	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	Battery Management System	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	Battery Management System	Special Function	SOC Calibration
IONIQ Phev(AE PHEV)	2017	General	Battery Management System	Special Function	Isolation Breakdown Detection Function
IONIQ Phev(AE PHEV)	2017	General	Motor Control System	Version Information	
IONIQ Phev(AE PHEV)	2017	General	Motor Control System	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	Motor Control System	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	Motor Control System	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	Motor Control System	Special Function	Motor HSG Resolver Calibration
IONIQ Phev(AE PHEV)	2017	General	Motor Control System	Special Function	Electric Water Pump Control
IONIQ Phev(AE PHEV)	2017	General	Motor Control System	Special Function	HPCU(MCU/GCU)Self- diagnosis Function

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2017	General	Motor Control System	Special Function	HPCU(MCU,GCU)Diagnosis Parameter Initialization
IONIQ Phev(AE PHEV)	2017	General	Telematics Unit	Version Information	
IONIQ Phev(AE PHEV)	2017	General	Telematics Unit	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	Telematics Unit	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	Virtual Engine Sound System	Version Information	
IONIQ Phev(AE PHEV)	2017	General	Virtual Engine Sound System	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	Virtual Engine Sound System	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	Virtual Engine Sound System	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	Integrated Gateway Power Module	Version Information	
IONIQ Phev(AE PHEV)	2017	General	Integrated Gateway Power Module	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	Integrated Gateway Power Module	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	Integrated Gateway Power Module	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	Integrated Gateway Power Module	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
IONIQ Phev(AE PHEV)	2017	General	Integrated Gateway Power Module	Special Function	User Option
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Version Information	
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Actuation Test	
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Special Function	Engine Test On
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Special Function	Engine Test Off
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Special Function	LDC Activation Test
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Special Function	Compression Pressure Test Of Engine Cylinder Initialization Of The Engine
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Special Function	Clutch Inspection Line Learning And Diagnostic Information

model	year	area	system	function	subfunction
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Special Function	Removal Of Air From Engine Clutch Hydraulic Pressure Line
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Special Function	Engine Clutch/Motor Resolver Adaptation
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Special Function	Stabilization Of The Engine Clutch Hardware Transfer Torque
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Special Function	HCU Variant Coding
IONIQ Phev(AE PHEV)	2017	General	HCU/LDC	Special Function	Stabilization Of Hydraulic Oil Flow Of Engine Clutch
IONIQ Phev(AE PHEV)	2017	General	IMM(Immobilizer)	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	IMM(Immobilizer)	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
IONIQ Phev(AE PHEV)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
IONIQ Phev(AE PHEV)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
IONIQ Phev(AE PHEV)	2017	General	IMM(Immobilizer)	Special Function	Teaching
IONIQ Phev(AE PHEV)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
IONIQ Phev(AE PHEV)	2017	General	On Board Charger	Version Information	
IONIQ Phev(AE PHEV)	2017	General	On Board Charger	Read Fault Code	
IONIQ Phev(AE PHEV)	2017	General	On Board Charger	Clear Fault Memory	
IONIQ Phev(AE PHEV)	2017	General	On Board Charger	Read Data Stream	
IONIQ Phev(AE PHEV)	2017	General	On Board Charger	Special Function	variant coding for charging port
ix20(JC)	2018	General	ECM(Engine Control Module)	Version Information	
ix20(JC)	2018	General	ECM(Engine Control Module)	Read Fault Code	
ix20(JC)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
ix20(JC)	2018	General	ECM(Engine Control Module)	Read Data Stream	
ix20(JC)	2018	General	ECM(Engine Control Module)	Actuation Test	
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix20(JC)	2018	General	TCM(Transmission Control Module)	Version Information	
ix20(JC)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
ix20(JC)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix20(JC)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
ix20(JC)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
ix20(JC)	2018	General	TCM(Transmission Control Module)	Actuation Test	
ix20(JC)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix20(JC)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
ix20(JC)	2018	General	ABS(Anti-lock Braking System)	Version Information	
ix20(JC)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix20(JC)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix20(JC)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix20(JC)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
ix20(JC)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
ix20(JC)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix20(JC)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix20(JC)	2018	General	ABS(Anti-lock Braking System)	Special Function	Hill Start Assist Control
ix20(JC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix20(JC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix20(JC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix20(JC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix20(JC)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding

model	year	area	system	function	subfunction
ix20(JC)	2018	General	AC(Air Conditioning)	Version Information	
ix20(JC)	2018	General	AC(Air Conditioning)	Read Fault Code	
ix20(JC)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
ix20(JC)	2018	General	AC(Air Conditioning)	Read Data Stream	
ix20(JC)	2018	General	AC(Air Conditioning)	Actuation Test	
ix20(JC)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
ix20(JC)	2018	General	Body Control Module	Version Information	
ix20(JC)	2018	General	Body Control Module	Read Fault Code	
ix20(JC)	2018	General	Body Control Module	Clear Fault Memory	
ix20(JC)	2018	General	Body Control Module	Read Data Stream	
ix20(JC)	2018	General	Body Control Module	Actuation Test	
ix20(JC)	2018	General	Body Control Module	Special Function	User Option
ix20(JC)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix20(JC)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix20(JC)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix20(JC)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix20(JC)	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix20(JC)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix20(JC)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix20(JC)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix20(JC)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix20(JC)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix20(JC)	2018	General	EPS(Electronic Power Steering)	Version Information	
ix20(JC)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
ix20(JC)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix20(JC)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
ix20(JC)	2018	General	EPS(Electronic Power Steering)	Read FreezeData	
ix20(JC)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix20(JC)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
ix20(JC)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
ix20(JC)	2018	General	Smart Key Unit	Version Information	
ix20(JC)	2018	General	Smart Key Unit	Read Fault Code	
ix20(JC)	2018	General	Smart Key Unit	Clear Fault Memory	
ix20(JC)	2018	General	Smart Key Unit	Read Data Stream	
ix20(JC)	2018	General	Smart Key Unit	Actuation Test	
ix20(JC)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix20(JC)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
ix20(JC)	2018	General	Smart Key Unit	Special Function	SMK Status Information
ix20(JC)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
ix20(JC)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
ix20(JC)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix20(JC)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
ix20(JC)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix20(JC)	2018	General	IMM(Immobilizer)	Read Fault Code	
ix20(JC)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
ix20(JC)	2018	General	IMM(Immobilizer)	Read Data Stream	
ix20(JC)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
ix20(JC)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix20(JC)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix20(JC)	2018	General	IMM(Immobilizer)	Special Function	Teaching
ix20(JC)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
ix20(JC)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix20(JC)	2018	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning

model	year	area	system	function	subfunction
ix20(JC)	2017	General	ECM(Engine Control Module)	Version Information	
ix20(JC)	2017	General	ECM(Engine Control Module)	Read Fault Code	
ix20(JC)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
ix20(JC)	2017	General	ECM(Engine Control Module)	Read Data Stream	
ix20(JC)	2017	General	ECM(Engine Control Module)	Actuation Test	
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix20(JC)	2017	General	TCM(Transmission Control Module)	Version Information	
ix20(JC)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
ix20(JC)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix20(JC)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
ix20(JC)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
ix20(JC)	2017	General	TCM(Transmission Control Module)	Actuation Test	
ix20(JC)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix20(JC)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
ix20(JC)	2017	General	ABS(Anti-lock Braking System)	Version Information	
ix20(JC)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix20(JC)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix20(JC)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix20(JC)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
ix20(JC)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
ix20(JC)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix20(JC)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
ix20(JC)	2017	General	ABS(Anti-lock Braking System)	Special Function	Hill Start Assist Control
ix20(JC)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix20(JC)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix20(JC)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix20(JC)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix20(JC)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
ix20(JC)	2017	General	AC(Air Conditioning)	Version Information	
ix20(JC)	2017	General	AC(Air Conditioning)	Read Fault Code	
ix20(JC)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
ix20(JC)	2017	General	AC(Air Conditioning)	Read Data Stream	
ix20(JC)	2017	General	AC(Air Conditioning)	Actuation Test	
ix20(JC)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
ix20(JC)	2017	General	Body Control Module	Version Information	
ix20(JC)	2017	General	Body Control Module	Read Fault Code	
ix20(JC)	2017	General	Body Control Module	Clear Fault Memory	
ix20(JC)	2017	General	Body Control Module	Read Data Stream	
ix20(JC)	2017	General	Body Control Module	Actuation Test	
ix20(JC)	2017	General	Body Control Module	Special Function	User Option
ix20(JC)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix20(JC)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix20(JC)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix20(JC)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix20(JC)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix20(JC)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix20(JC)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix20(JC)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix20(JC)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix20(JC)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix20(JC)	2017	General	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
ix20(JC)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
ix20(JC)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix20(JC)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
ix20(JC)	2017	General	EPS(Electronic Power Steering)	Read FreezeData	
ix20(JC)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix20(JC)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix20(JC)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
ix20(JC)	2017	General	Smart Key Unit	Version Information	
ix20(JC)	2017	General	Smart Key Unit	Read Fault Code	
ix20(JC)	2017	General	Smart Key Unit	Clear Fault Memory	
ix20(JC)	2017	General	Smart Key Unit	Read Data Stream	
ix20(JC)	2017	General	Smart Key Unit	Actuation Test	
ix20(JC)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix20(JC)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
ix20(JC)	2017	General	Smart Key Unit	Special Function	SMK Status Information
ix20(JC)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
ix20(JC)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
ix20(JC)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix20(JC)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
ix20(JC)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix20(JC)	2017	General	IMM(Immobilizer)	Read Fault Code	
ix20(JC)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
ix20(JC)	2017	General	IMM(Immobilizer)	Read Data Stream	
ix20(JC)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
ix20(JC)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix20(JC)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix20(JC)	2017	General	IMM(Immobilizer)	Special Function	Teaching
ix20(JC)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
ix20(JC)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix20(JC)	2017	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU/Cleaning
ix20(JC)	2016	General	ECM(Engine Control Module)	Version Information	
ix20(JC)	2016	General	ECM(Engine Control Module)	Read Fault Code	
ix20(JC)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
ix20(JC)	2016	General	ECM(Engine Control Module)	Read Data Stream	
ix20(JC)	2016	General	ECM(Engine Control Module)	Actuation Test	
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU/Cleaning
ix20(JC)	2016	General	ABS(Anti-lock Braking System)	Version Information	
ix20(JC)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix20(JC)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix20(JC)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix20(JC)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
ix20(JC)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
ix20(JC)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix20(JC)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix20(JC)	2016	General	ABS(Anti-lock Braking System)	Special Function	Hill Start Assist Control

model	year	area	system	function	subfunction
ix20(JC)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix20(JC)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix20(JC)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix20(JC)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix20(JC)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
ix20(JC)	2016	General	AC(Air Conditioning)	Version Information	
ix20(JC)	2016	General	AC(Air Conditioning)	Read Fault Code	
ix20(JC)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
ix20(JC)	2016	General	AC(Air Conditioning)	Read Data Stream	
ix20(JC)	2016	General	AC(Air Conditioning)	Actuation Test	
ix20(JC)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
ix20(JC)	2016	General	BCM(Body Control Module)	Version Information	
ix20(JC)	2016	General	BCM(Body Control Module)	Read Fault Code	
ix20(JC)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
ix20(JC)	2016	General	BCM(Body Control Module)	Read Data Stream	
ix20(JC)	2016	General	BCM(Body Control Module)	Actuation Test	
ix20(JC)	2016	General	BCM(Body Control Module)	Special Function	User Option
ix20(JC)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix20(JC)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix20(JC)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix20(JC)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix20(JC)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix20(JC)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix20(JC)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix20(JC)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix20(JC)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix20(JC)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix20(JC)	2016	General	EPS(Electronic Power Steering)	Version Information	
ix20(JC)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
ix20(JC)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix20(JC)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
ix20(JC)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
ix20(JC)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix20(JC)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix20(JC)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
ix20(JC)	2016	General	Smart Key Unit	Version Information	
ix20(JC)	2016	General	Smart Key Unit	Read Fault Code	
ix20(JC)	2016	General	Smart Key Unit	Clear Fault Memory	
ix20(JC)	2016	General	Smart Key Unit	Read Data Stream	
ix20(JC)	2016	General	Smart Key Unit	Actuation Test	
ix20(JC)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix20(JC)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
ix20(JC)	2016	General	Smart Key Unit	Special Function	SMK Status Information
ix20(JC)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
ix20(JC)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
ix20(JC)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix20(JC)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
ix20(JC)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix20(JC)	2016	General	IMM(Immobilizer)	Read Fault Code	
ix20(JC)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
ix20(JC)	2016	General	IMM(Immobilizer)	Read Data Stream	
ix20(JC)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
ix20(JC)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix20(JC)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix20(JC)	2016	General	IMM(Immobilizer)	Special Function	Teaching
ix20(JC)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
ix20(JC)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix20(JC)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix20(JC)	2016	General	TCM(Transmission Control Module)	Version Information	
ix20(JC)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
ix20(JC)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix20(JC)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
ix20(JC)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
ix20(JC)	2016	General	TCM(Transmission Control Module)	Actuation Test	
ix20(JC)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix20(JC)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
ix20(JC)	2015	General	ECM(Engine Control Module)	Version Information	
ix20(JC)	2015	General	ECM(Engine Control Module)	Read Fault Code	
ix20(JC)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
ix20(JC)	2015	General	ECM(Engine Control Module)	Read Data Stream	
ix20(JC)	2015	General	ECM(Engine Control Module)	Actuation Test	
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	ECU Initialization
ix20(JC)	2015	General	ABS(Anti-lock Braking System)	Version Information	
ix20(JC)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix20(JC)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix20(JC)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix20(JC)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
ix20(JC)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
ix20(JC)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix20(JC)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix20(JC)	2015	General	ABS(Anti-lock Braking System)	Special Function	Hill Start Assist Control
ix20(JC)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix20(JC)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix20(JC)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix20(JC)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix20(JC)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
ix20(JC)	2015	General	AC(Air Conditioning)	Version Information	
ix20(JC)	2015	General	AC(Air Conditioning)	Read Fault Code	
ix20(JC)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
ix20(JC)	2015	General	AC(Air Conditioning)	Read Data Stream	
ix20(JC)	2015	General	AC(Air Conditioning)	Actuation Test	
ix20(JC)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Test)
ix20(JC)	2015	General	BCM(Body Control Module)	Version Information	
ix20(JC)	2015	General	BCM(Body Control Module)	Read Fault Code	
ix20(JC)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
ix20(JC)	2015	General	BCM(Body Control Module)	Read Data Stream	
ix20(JC)	2015	General	BCM(Body Control Module)	Actuation Test	
ix20(JC)	2015	General	BCM(Body Control Module)	Special Function	User Option
ix20(JC)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix20(JC)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix20(JC)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix20(JC)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix20(JC)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix20(JC)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix20(JC)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix20(JC)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
ix20(JC)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix20(JC)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix20(JC)	2015	General	EPS(Electronic Power Steering)	Version Information	
ix20(JC)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
ix20(JC)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix20(JC)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
ix20(JC)	2015	General	EPS(Electronic Power Steering)	Read FreezeData	
ix20(JC)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix20(JC)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix20(JC)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
ix20(JC)	2015	General	Smart Key Unit	Version Information	
ix20(JC)	2015	General	Smart Key Unit	Read Fault Code	
ix20(JC)	2015	General	Smart Key Unit	Clear Fault Memory	
ix20(JC)	2015	General	Smart Key Unit	Read Data Stream	
ix20(JC)	2015	General	Smart Key Unit	Actuation Test	
ix20(JC)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix20(JC)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
ix20(JC)	2015	General	Smart Key Unit	Special Function	SMK Status Information
ix20(JC)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
ix20(JC)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
ix20(JC)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix20(JC)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
ix20(JC)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix20(JC)	2015	General	IMM(Immobilizer)	Read Fault Code	
ix20(JC)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
ix20(JC)	2015	General	IMM(Immobilizer)	Read Data Stream	
ix20(JC)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
ix20(JC)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
ix20(JC)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix20(JC)	2015	General	IMM(Immobilizer)	Special Function	Teaching
ix20(JC)	2015	General	CODE(Transmitter Code Saving)	Read Data Stream	
ix20(JC)	2015	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix20(JC)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix20(JC)	2015	General	TCM(Transmission Control Module)	Version Information	
ix20(JC)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
ix20(JC)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix20(JC)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
ix20(JC)	2015	General	TCM(Transmission Control Module)	Actuation Test	
ix20(JC)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix20(JC)	2014	General	ECM(Engine Control Module)	Version Information	
ix20(JC)	2014	General	ECM(Engine Control Module)	Read Fault Code	
ix20(JC)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
ix20(JC)	2014	General	ECM(Engine Control Module)	Read Data Stream	
ix20(JC)	2014	General	ECM(Engine Control Module)	Actuation Test	
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)

model	year	area	system	function	subfunction
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix20(JC)	2014	General	TCM(Transmission Control Module)	Version Information	
ix20(JC)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
ix20(JC)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix20(JC)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
ix20(JC)	2014	General	TCM(Transmission Control Module)	Actuation Test	
ix20(JC)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix20(JC)	2014	General	ABS(Anti-lock Braking System)	Version Information	
ix20(JC)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix20(JC)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix20(JC)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix20(JC)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
ix20(JC)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
ix20(JC)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix20(JC)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix20(JC)	2014	General	ABS(Anti-lock Braking System)	Special Function	Hill Start Assist Control
ix20(JC)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix20(JC)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix20(JC)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix20(JC)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix20(JC)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
ix20(JC)	2014	General	AC(Air Conditioning)	Version Information	
ix20(JC)	2014	General	AC(Air Conditioning)	Read Fault Code	
ix20(JC)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
ix20(JC)	2014	General	AC(Air Conditioning)	Read Data Stream	
ix20(JC)	2014	General	AC(Air Conditioning)	Actuation Test	
ix20(JC)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
ix20(JC)	2014	General	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
ix20(JC)	2014	General	BCM(Body Control Module)	Read Fault Code	
ix20(JC)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
ix20(JC)	2014	General	BCM(Body Control Module)	Read Data Stream	
ix20(JC)	2014	General	BCM(Body Control Module)	Actuation Test	
ix20(JC)	2014	General	BCM(Body Control Module)	Special Function	User Option
ix20(JC)	2014	General	EPS(Electronic Power Steering)	Version Information	
ix20(JC)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
ix20(JC)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix20(JC)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
ix20(JC)	2014	General	EPS(Electronic Power Steering)	Read FreezeData	
ix20(JC)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix20(JC)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix20(JC)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
ix20(JC)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix20(JC)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix20(JC)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix20(JC)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix20(JC)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix20(JC)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix20(JC)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix20(JC)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix20(JC)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix20(JC)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix20(JC)	2014	General	IMM(Immobilizer)	Read Fault Code	
ix20(JC)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
ix20(JC)	2014	General	IMM(Immobilizer)	Read Data Stream	
ix20(JC)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
ix20(JC)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
ix20(JC)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix20(JC)	2014	General	IMM(Immobilizer)	Special Function	Teaching
ix20(JC)	2014	General	Smart Key Unit	Version Information	
ix20(JC)	2014	General	Smart Key Unit	Read Fault Code	
ix20(JC)	2014	General	Smart Key Unit	Clear Fault Memory	
ix20(JC)	2014	General	Smart Key Unit	Read Data Stream	
ix20(JC)	2014	General	Smart Key Unit	Actuation Test	
ix20(JC)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix20(JC)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
ix20(JC)	2014	General	Smart Key Unit	Special Function	SMK Status Information
ix20(JC)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
ix20(JC)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
ix20(JC)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix20(JC)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
ix20(JC)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix20(JC)	2014	General	Transmitter Code Saving	Read Data Stream	
ix20(JC)	2014	General	Transmitter Code Saving	Special Function	Code Saving
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
ix20(JC)	2014	General	ECM(Engine Control Module)	Special Function	ECU Initialization
ix20(JC)	2013	General	ECM(Engine Control Module)	Version Information	
ix20(JC)	2013	General	ECM(Engine Control Module)	Read Fault Code	
ix20(JC)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
ix20(JC)	2013	General	ECM(Engine Control Module)	Read Data Stream	
ix20(JC)	2013	General	ECM(Engine Control Module)	Actuation Test	
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix20(JC)	2013	General	TCM(Transmission Control Module)	Version Information	
ix20(JC)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
ix20(JC)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix20(JC)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
ix20(JC)	2013	General	TCM(Transmission Control Module)	Actuation Test	
ix20(JC)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix20(JC)	2013	General	ABS(Anti-lock Braking System)	Version Information	
ix20(JC)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix20(JC)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix20(JC)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix20(JC)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
ix20(JC)	2013	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
ix20(JC)	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix20(JC)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix20(JC)	2013	General	ABS(Anti-lock Braking System)	Special Function	Hill Start Assist Control
ix20(JC)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix20(JC)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix20(JC)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix20(JC)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix20(JC)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
ix20(JC)	2013	General	AC(Air Conditioning)	Version Information	
ix20(JC)	2013	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
ix20(JC)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
ix20(JC)	2013	General	AC(Air Conditioning)	Read Data Stream	
ix20(JC)	2013	General	AC(Air Conditioning)	Actuation Test	
ix20(JC)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
ix20(JC)	2013	General	BCM(Body Control Module)	Version Information	
ix20(JC)	2013	General	BCM(Body Control Module)	Read Fault Code	
ix20(JC)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
ix20(JC)	2013	General	BCM(Body Control Module)	Read Data Stream	
ix20(JC)	2013	General	BCM(Body Control Module)	Actuation Test	
ix20(JC)	2013	General	BCM(Body Control Module)	Special Function	User Option
ix20(JC)	2013	General	EPS(Electronic Power Steering)	Version Information	
ix20(JC)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
ix20(JC)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix20(JC)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
ix20(JC)	2013	General	EPS(Electronic Power Steering)	Read FreezeData	
ix20(JC)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix20(JC)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix20(JC)	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
ix20(JC)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix20(JC)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix20(JC)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix20(JC)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix20(JC)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix20(JC)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix20(JC)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix20(JC)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix20(JC)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix20(JC)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST

model	year	area	system	function	subfunction
ix20(JC)	2013	General	IMM(Immobilizer)	Read Fault Code	
ix20(JC)	2013	General	IMM(Immobilizer)	Clear Fault Memory	
ix20(JC)	2013	General	IMM(Immobilizer)	Read Data Stream	
ix20(JC)	2013	General	IMM(Immobilizer)	Special Function	Password
ix20(JC)	2013	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
ix20(JC)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix20(JC)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix20(JC)	2013	General	IMM(Immobilizer)	Special Function	Teaching
ix20(JC)	2013	General	Smart Key Unit	Version Information	
ix20(JC)	2013	General	Smart Key Unit	Read Fault Code	
ix20(JC)	2013	General	Smart Key Unit	Clear Fault Memory	
ix20(JC)	2013	General	Smart Key Unit	Read Data Stream	
ix20(JC)	2013	General	Smart Key Unit	Actuation Test	
ix20(JC)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix20(JC)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
ix20(JC)	2013	General	Smart Key Unit	Special Function	SMK Status Information
ix20(JC)	2013	General	Smart Key Unit	Special Function	ESCL Status Information
ix20(JC)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
ix20(JC)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix20(JC)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
ix20(JC)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix20(JC)	2013	General	Transmitter Code Saving	Read Data Stream	
ix20(JC)	2013	General	Transmitter Code Saving	Special Function	Code Saving
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
ix20(JC)	2013	General	ECM(Engine Control Module)	Special Function	ECU Initialization
ix20(JC)	2012	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
ix20(JC)	2012	General	ECM(Engine Control Module)	Read Fault Code	
ix20(JC)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
ix20(JC)	2012	General	ECM(Engine Control Module)	Read Data Stream	
ix20(JC)	2012	General	ECM(Engine Control Module)	Actuation Test	
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix20(JC)	2012	General	TCM(Transmission Control Module)	Version Information	
ix20(JC)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
ix20(JC)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix20(JC)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
ix20(JC)	2012	General	TCM(Transmission Control Module)	Actuation Test	
ix20(JC)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix20(JC)	2012	General	ABS(Anti-lock Braking System)	Version Information	
ix20(JC)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix20(JC)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix20(JC)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix20(JC)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
ix20(JC)	2012	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
ix20(JC)	2012	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix20(JC)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix20(JC)	2012	General	ABS(Anti-lock Braking System)	Special Function	Hill Start Assist Control
ix20(JC)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix20(JC)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
ix20(JC)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix20(JC)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix20(JC)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
ix20(JC)	2012	General	AC(Air Conditioning)	Version Information	
ix20(JC)	2012	General	AC(Air Conditioning)	Read Fault Code	
ix20(JC)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
ix20(JC)	2012	General	AC(Air Conditioning)	Read Data Stream	
ix20(JC)	2012	General	AC(Air Conditioning)	Actuation Test	
ix20(JC)	2012	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
ix20(JC)	2012	General	BCM(Body Control Module)	Version Information	
ix20(JC)	2012	General	BCM(Body Control Module)	Read Fault Code	
ix20(JC)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
ix20(JC)	2012	General	BCM(Body Control Module)	Read Data Stream	
ix20(JC)	2012	General	BCM(Body Control Module)	Actuation Test	
ix20(JC)	2012	General	BCM(Body Control Module)	Special Function	User Option
ix20(JC)	2012	General	EPS(Electronic Power Steering)	Version Information	
ix20(JC)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
ix20(JC)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix20(JC)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
ix20(JC)	2012	General	EPS(Electronic Power Steering)	Read FreezeData	
ix20(JC)	2012	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix20(JC)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix20(JC)	2012	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
ix20(JC)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix20(JC)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix20(JC)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix20(JC)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix20(JC)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
ix20(JC)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix20(JC)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix20(JC)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix20(JC)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix20(JC)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix20(JC)	2012	General	IMM(Immobilizer)	Read Fault Code	
ix20(JC)	2012	General	IMM(Immobilizer)	Clear Fault Memory	
ix20(JC)	2012	General	IMM(Immobilizer)	Read Data Stream	
ix20(JC)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
ix20(JC)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix20(JC)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix20(JC)	2012	General	IMM(Immobilizer)	Special Function	Teaching
ix20(JC)	2012	General	Smart Key Unit	Version Information	
ix20(JC)	2012	General	Smart Key Unit	Read Fault Code	
ix20(JC)	2012	General	Smart Key Unit	Clear Fault Memory	
ix20(JC)	2012	General	Smart Key Unit	Read Data Stream	
ix20(JC)	2012	General	Smart Key Unit	Actuation Test	
ix20(JC)	2012	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix20(JC)	2012	General	Smart Key Unit	Special Function	Neutralization Mode
ix20(JC)	2012	General	Smart Key Unit	Special Function	SMK Status Information
ix20(JC)	2012	General	Smart Key Unit	Special Function	ESCL Status Information
ix20(JC)	2012	General	Smart Key Unit	Special Function	FOB Key Status Information
ix20(JC)	2012	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix20(JC)	2012	General	Smart Key Unit	Special Function	Antenna Status Check
ix20(JC)	2012	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix20(JC)	2012	General	Transmitter Code Saving	Read Data Stream	
ix20(JC)	2012	General	Transmitter Code Saving	Special Function	Code Saving
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data

model	year	area	system	function	subfunction
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
ix20(JC)	2012	General	ECM(Engine Control Module)	Special Function	ECU Initialization
ix20(JC)	2011	General	ECM(Engine Control Module)	Version Information	
ix20(JC)	2011	General	ECM(Engine Control Module)	Read Fault Code	
ix20(JC)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
ix20(JC)	2011	General	ECM(Engine Control Module)	Read Data Stream	
ix20(JC)	2011	General	ECM(Engine Control Module)	Actuation Test	
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix20(JC)	2011	General	TCM(Transmission Control Module)	Version Information	
ix20(JC)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
ix20(JC)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix20(JC)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
ix20(JC)	2011	General	TCM(Transmission Control Module)	Actuation Test	
ix20(JC)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix20(JC)	2011	General	ABS(Anti-lock Braking System)	Version Information	
ix20(JC)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix20(JC)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix20(JC)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix20(JC)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
ix20(JC)	2011	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
ix20(JC)	2011	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix20(JC)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix20(JC)	2011	General	ABS(Anti-lock Braking System)	Special Function	Hill Start Assist Control
ix20(JC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix20(JC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix20(JC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix20(JC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix20(JC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
ix20(JC)	2011	General	AC(Air Conditioning)	Version Information	
ix20(JC)	2011	General	AC(Air Conditioning)	Read Fault Code	
ix20(JC)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
ix20(JC)	2011	General	AC(Air Conditioning)	Read Data Stream	
ix20(JC)	2011	General	AC(Air Conditioning)	Actuation Test	
ix20(JC)	2011	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
ix20(JC)	2011	General	BCM(Body Control Module)	Version Information	
ix20(JC)	2011	General	BCM(Body Control Module)	Read Fault Code	
ix20(JC)	2011	General	BCM(Body Control Module)	Clear Fault Memory	
ix20(JC)	2011	General	BCM(Body Control Module)	Read Data Stream	
ix20(JC)	2011	General	BCM(Body Control Module)	Actuation Test	
ix20(JC)	2011	General	BCM(Body Control Module)	Special Function	User Option
ix20(JC)	2011	General	EPS(Electronic Power Steering)	Version Information	
ix20(JC)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
ix20(JC)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix20(JC)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
ix20(JC)	2011	General	EPS(Electronic Power Steering)	Read FreezeData	
ix20(JC)	2011	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix20(JC)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
ix20(JC)	2011	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
ix20(JC)	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix20(JC)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix20(JC)	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix20(JC)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix20(JC)	2011	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix20(JC)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix20(JC)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix20(JC)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix20(JC)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix20(JC)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix20(JC)	2011	General	IMM(Immobilizer)	Read Fault Code	
ix20(JC)	2011	General	IMM(Immobilizer)	Clear Fault Memory	
ix20(JC)	2011	General	IMM(Immobilizer)	Read Data Stream	
ix20(JC)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
ix20(JC)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix20(JC)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix20(JC)	2011	General	IMM(Immobilizer)	Special Function	Teaching
ix20(JC)	2011	General	Smart Key Unit	Version Information	
ix20(JC)	2011	General	Smart Key Unit	Read Fault Code	
ix20(JC)	2011	General	Smart Key Unit	Clear Fault Memory	
ix20(JC)	2011	General	Smart Key Unit	Read Data Stream	
ix20(JC)	2011	General	Smart Key Unit	Actuation Test	
ix20(JC)	2011	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix20(JC)	2011	General	Smart Key Unit	Special Function	Neutralization Mode
ix20(JC)	2011	General	Smart Key Unit	Special Function	SMK Status Information
ix20(JC)	2011	General	Smart Key Unit	Special Function	ESCL Status Information
ix20(JC)	2011	General	Smart Key Unit	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
ix20(JC)	2011	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix20(JC)	2011	General	Smart Key Unit	Special Function	Antenna Status Check
ix20(JC)	2011	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix20(JC)	2011	General	Transmitter Code Saving	Read Data Stream	
ix20(JC)	2011	General	Transmitter Code Saving	Special Function	Code Saving
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	Component Change Routine
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix20(JC)	2011	General	ECM(Engine Control Module)	Special Function	ECU Initialization
ix35 FCEV(LM FCEV)	2018	General	ABS(Anti-lock Braking System)	Version Information	
ix35 FCEV(LM FCEV)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
ix35 FCEV(LM FCEV)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix35 FCEV(LM FCEV)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35 FCEV(LM FCEV)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
ix35 FCEV(LM FCEV)	2018	General	Active Hydraulic Booster	Version Information	
ix35 FCEV(LM FCEV)	2018	General	Active Hydraulic Booster	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	Active Hydraulic Booster	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	Active Hydraulic Booster	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	Active Hydraulic Booster	Actuation Test	
ix35 FCEV(LM FCEV)	2018	General	Active Hydraulic Booster	Special Function	Pedal Travel Sensor(DTC)Calibration
ix35 FCEV(LM FCEV)	2018	General	Active Hydraulic Booster	Special Function	Pressure Sensor Calibration
ix35 FCEV(LM FCEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix35 FCEV(LM FCEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
ix35 FCEV(LM FCEV)	2018	General	AC(Air Conditioning)	Version Information	
ix35 FCEV(LM FCEV)	2018	General	AC(Air Conditioning)	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	AC(Air Conditioning)	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	AC(Air Conditioning)	Actuation Test	
ix35 FCEV(LM FCEV)	2018	General	BCM(Body Control Module)	Version Information	
ix35 FCEV(LM FCEV)	2018	General	BCM(Body Control Module)	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	BCM(Body Control Module)	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	BCM(Body Control Module)	Actuation Test	
ix35 FCEV(LM FCEV)	2018	General	BCM(Body Control Module)	Special Function	User Option
ix35 FCEV(LM FCEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35 FCEV(LM FCEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35 FCEV(LM FCEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
ix35 FCEV(LM FCEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35 FCEV(LM FCEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35 FCEV(LM FCEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35 FCEV(LM FCEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35 FCEV(LM FCEV)	2018	General	EPS(Electronic Power Steering)	Version Information	
ix35 FCEV(LM FCEV)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35 FCEV(LM FCEV)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Version Information	
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Actuation Test	
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Special Function	SMK Status Information
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Special Function	PDM Status Information
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix35 FCEV(LM FCEV)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
ix35 FCEV(LM FCEV)	2018	General	Low DC/DC Converter	Version Information	
ix35 FCEV(LM FCEV)	2018	General	Low DC/DC Converter	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	Low DC/DC Converter	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	Low DC/DC Converter	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	Low DC/DC Converter	Read FreezeData	
ix35 FCEV(LM FCEV)	2018	General	Low DC/DC Converter	Actuation Test	
ix35 FCEV(LM FCEV)	2018	General	EV Battery System	Version Information	
ix35 FCEV(LM FCEV)	2018	General	EV Battery System	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	EV Battery System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	EV Battery System	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	EV Battery System	Read FreezeData	
ix35 FCEV(LM FCEV)	2018	General	EV Battery System	Actuation Test	
ix35 FCEV(LM FCEV)	2018	General	FCEV Motor Control System	Version Information	
ix35 FCEV(LM FCEV)	2018	General	FCEV Motor Control System	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	FCEV Motor Control System	Clear Fault Memory	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2018	General	FCEV Motor Control System	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	FCEV Motor Control System	Read FreezeData	
ix35 FCEV(LM FCEV)	2018	General	Blower Pump Control Unit	Version Information	
ix35 FCEV(LM FCEV)	2018	General	Blower Pump Control Unit	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	Blower Pump Control Unit	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	Blower Pump Control Unit	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	Blower Pump Control Unit	Read FreezeData	
ix35 FCEV(LM FCEV)	2018	General	Fuel Cell System	Version Information	
ix35 FCEV(LM FCEV)	2018	General	Fuel Cell System	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	Fuel Cell System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	Fuel Cell System	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	Fuel Cell System	Read FreezeData	
ix35 FCEV(LM FCEV)	2018	General	Fuel Cell System	Actuation Test	
ix35 FCEV(LM FCEV)	2018	General	Fuel Cell System	Special Function	EWP Actuating
ix35 FCEV(LM FCEV)	2018	General	Fuel Cell System	Special Function	Air Cut Off Valve Open Mode
ix35 FCEV(LM FCEV)	2018	General	Fuel Cell System	Special Function	Solenoid Valve Inspection
ix35 FCEV(LM FCEV)	2018	General	Fuel Cell System	Special Function	Stack Coolant Pump Actuating
ix35 FCEV(LM FCEV)	2018	General	Fuel Cell System	Special Function	FC Run Stop
ix35 FCEV(LM FCEV)	2018	General	Fuel Processing Driver	Version Information	
ix35 FCEV(LM FCEV)	2018	General	Fuel Processing Driver	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	Fuel Processing Driver	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	Fuel Processing Driver	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	Fuel Processing Driver	Read FreezeData	
ix35 FCEV(LM FCEV)	2018	General	Fuel Processing Driver	Actuation Test	
ix35 FCEV(LM FCEV)	2018	General	High DC/DC Convertor	Version Information	
ix35 FCEV(LM FCEV)	2018	General	High DC/DC Convertor	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	High DC/DC Convertor	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	High DC/DC Convertor	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	High DC/DC Convertor	Read FreezeData	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2018	General	Hydrogen Storage System	Version Information	
ix35 FCEV(LM FCEV)	2018	General	Hydrogen Storage System	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	Hydrogen Storage System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	Hydrogen Storage System	Read Data Stream	
ix35 FCEV(LM FCEV)	2018	General	Hydrogen Storage System	Actuation Test	
ix35 FCEV(LM FCEV)	2018	General	Hydrogen Storage System	Special Function	Read the number of Refueling
ix35 FCEV(LM FCEV)	2018	General	Hydrogen Storage System	Special Function	Reset the number of Refueling
ix35 FCEV(LM FCEV)	2018	General	Hydrogen Storage System	Special Function	Write the number of Refueling
ix35 FCEV(LM FCEV)	2018	General	Stack Volt Monitor	Version Information	
ix35 FCEV(LM FCEV)	2018	General	Stack Volt Monitor	Read Fault Code	
ix35 FCEV(LM FCEV)	2018	General	Stack Volt Monitor	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2018	General	Stack Volt Monitor	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	ABS(Anti-lock Braking System)	Version Information	
ix35 FCEV(LM FCEV)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
ix35 FCEV(LM FCEV)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix35 FCEV(LM FCEV)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35 FCEV(LM FCEV)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
ix35 FCEV(LM FCEV)	2017	General	Active Hydraulic Booster	Version Information	
ix35 FCEV(LM FCEV)	2017	General	Active Hydraulic Booster	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	Active Hydraulic Booster	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	Active Hydraulic Booster	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	Active Hydraulic Booster	Actuation Test	
ix35 FCEV(LM FCEV)	2017	General	Active Hydraulic Booster	Special Function	Pedal Travel Sensor(BTC)Calibration
ix35 FCEV(LM FCEV)	2017	General	Active Hydraulic Booster	Special Function	Pressure Sensor Calibration
ix35 FCEV(LM FCEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
ix35 FCEV(LM FCEV)	2017	General	AC(Air Conditioning)	Version Information	
ix35 FCEV(LM FCEV)	2017	General	AC(Air Conditioning)	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	AC(Air Conditioning)	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	AC(Air Conditioning)	Actuation Test	
ix35 FCEV(LM FCEV)	2017	General	BCM(Body Control Module)	Version Information	
ix35 FCEV(LM FCEV)	2017	General	BCM(Body Control Module)	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	BCM(Body Control Module)	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	BCM(Body Control Module)	Actuation Test	
ix35 FCEV(LM FCEV)	2017	General	BCM(Body Control Module)	Special Function	User Option
ix35 FCEV(LM FCEV)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35 FCEV(LM FCEV)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35 FCEV(LM FCEV)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
ix35 FCEV(LM FCEV)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35 FCEV(LM FCEV)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35 FCEV(LM FCEV)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35 FCEV(LM FCEV)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35 FCEV(LM FCEV)	2017	General	EPS(Electronic Power Steering)	Version Information	
ix35 FCEV(LM FCEV)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35 FCEV(LM FCEV)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Version Information	
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Actuation Test	
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Special Function	SMK Status Information
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Special Function	PDM Status Information
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix35 FCEV(LM FCEV)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
ix35 FCEV(LM FCEV)	2017	General	Low DC/DC Converter	Version Information	
ix35 FCEV(LM FCEV)	2017	General	Low DC/DC Converter	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	Low DC/DC Converter	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	Low DC/DC Converter	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	Low DC/DC Converter	Read FreezeData	
ix35 FCEV(LM FCEV)	2017	General	Low DC/DC Converter	Actuation Test	
ix35 FCEV(LM FCEV)	2017	General	EV Battery System	Version Information	
ix35 FCEV(LM FCEV)	2017	General	EV Battery System	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	EV Battery System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	EV Battery System	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	EV Battery System	Read FreezeData	
ix35 FCEV(LM FCEV)	2017	General	EV Battery System	Actuation Test	
ix35 FCEV(LM FCEV)	2017	General	FCEV Motor Control System	Version Information	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2017	General	FCEV Motor Control System	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	FCEV Motor Control System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	FCEV Motor Control System	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	FCEV Motor Control System	Read FreezeData	
ix35 FCEV(LM FCEV)	2017	General	Blower Pump Control Unit	Version Information	
ix35 FCEV(LM FCEV)	2017	General	Blower Pump Control Unit	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	Blower Pump Control Unit	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	Blower Pump Control Unit	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	Blower Pump Control Unit	Read FreezeData	
ix35 FCEV(LM FCEV)	2017	General	Fuel Cell System	Version Information	
ix35 FCEV(LM FCEV)	2017	General	Fuel Cell System	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	Fuel Cell System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	Fuel Cell System	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	Fuel Cell System	Read FreezeData	
ix35 FCEV(LM FCEV)	2017	General	Fuel Cell System	Actuation Test	
ix35 FCEV(LM FCEV)	2017	General	Fuel Cell System	Special Function	EWP Actuating
ix35 FCEV(LM FCEV)	2017	General	Fuel Cell System	Special Function	Air Cut Off Valve Open Mode
ix35 FCEV(LM FCEV)	2017	General	Fuel Cell System	Special Function	Solenoid Valve Inspection
ix35 FCEV(LM FCEV)	2017	General	Fuel Cell System	Special Function	Stack Coolant Pump Actuating
ix35 FCEV(LM FCEV)	2017	General	Fuel Cell System	Special Function	FC Run Stop
ix35 FCEV(LM FCEV)	2017	General	Fuel Processing Driver	Version Information	
ix35 FCEV(LM FCEV)	2017	General	Fuel Processing Driver	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	Fuel Processing Driver	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	Fuel Processing Driver	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	Fuel Processing Driver	Read FreezeData	
ix35 FCEV(LM FCEV)	2017	General	Fuel Processing Driver	Actuation Test	
ix35 FCEV(LM FCEV)	2017	General	High DC/DC Convertor	Version Information	
ix35 FCEV(LM FCEV)	2017	General	High DC/DC Convertor	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	High DC/DC Convertor	Clear Fault Memory	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2017	General	High DC/DC Convertor	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	High DC/DC Convertor	Read FreezeData	
ix35 FCEV(LM FCEV)	2017	General	Hydrogen Storage System	Version Information	
ix35 FCEV(LM FCEV)	2017	General	Hydrogen Storage System	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	Hydrogen Storage System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	Hydrogen Storage System	Read Data Stream	
ix35 FCEV(LM FCEV)	2017	General	Hydrogen Storage System	Actuation Test	
ix35 FCEV(LM FCEV)	2017	General	Hydrogen Storage System	Special Function	Read the number of Refueling
ix35 FCEV(LM FCEV)	2017	General	Hydrogen Storage System	Special Function	Reset the number of Refueling
ix35 FCEV(LM FCEV)	2017	General	Hydrogen Storage System	Special Function	Write the number of Refueling
ix35 FCEV(LM FCEV)	2017	General	Stack Volt Monitor	Version Information	
ix35 FCEV(LM FCEV)	2017	General	Stack Volt Monitor	Read Fault Code	
ix35 FCEV(LM FCEV)	2017	General	Stack Volt Monitor	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2017	General	Stack Volt Monitor	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	ABS(Anti-lock Braking System)	Version Information	
ix35 FCEV(LM FCEV)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
ix35 FCEV(LM FCEV)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix35 FCEV(LM FCEV)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35 FCEV(LM FCEV)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
ix35 FCEV(LM FCEV)	2016	General	Active Hydraulic Booster	Version Information	
ix35 FCEV(LM FCEV)	2016	General	Active Hydraulic Booster	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	Active Hydraulic Booster	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	Active Hydraulic Booster	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	Active Hydraulic Booster	Actuation Test	
ix35 FCEV(LM FCEV)	2016	General	Active Hydraulic Booster	Special Function	Pedal Travel Sensor(DTC)Calibration

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2016	General	Active Hydraulic Booster	Special Function	Pressure Sensor Calibration
ix35 FCEV(LM FCEV)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix35 FCEV(LM FCEV)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
ix35 FCEV(LM FCEV)	2016	General	AC(Air Conditioning)	Version Information	
ix35 FCEV(LM FCEV)	2016	General	AC(Air Conditioning)	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	AC(Air Conditioning)	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	AC(Air Conditioning)	Actuation Test	
ix35 FCEV(LM FCEV)	2016	General	BCM(Body Control Module)	Version Information	
ix35 FCEV(LM FCEV)	2016	General	BCM(Body Control Module)	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	BCM(Body Control Module)	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	BCM(Body Control Module)	Actuation Test	
ix35 FCEV(LM FCEV)	2016	General	BCM(Body Control Module)	Special Function	User Option
ix35 FCEV(LM FCEV)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35 FCEV(LM FCEV)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35 FCEV(LM FCEV)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
ix35 FCEV(LM FCEV)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35 FCEV(LM FCEV)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35 FCEV(LM FCEV)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35 FCEV(LM FCEV)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35 FCEV(LM FCEV)	2016	General	EPS(Electronic Power Steering)	Version Information	
ix35 FCEV(LM FCEV)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35 FCEV(LM FCEV)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Version Information	
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Actuation Test	
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Special Function	SMK Status Information
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Special Function	PDM Status Information
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
ix35 FCEV(LM FCEV)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix35 FCEV(LM FCEV)	2016	General	Low DC/DC Converter	Version Information	
ix35 FCEV(LM FCEV)	2016	General	Low DC/DC Converter	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	Low DC/DC Converter	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	Low DC/DC Converter	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	Low DC/DC Converter	Read FreezeData	
ix35 FCEV(LM FCEV)	2016	General	Low DC/DC Converter	Actuation Test	
ix35 FCEV(LM FCEV)	2016	General	Battery Management System	Version Information	
ix35 FCEV(LM FCEV)	2016	General	Battery Management System	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	Battery Management System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	Battery Management System	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	Battery Management System	Read FreezeData	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2016	General	Battery Management System	Actuation Test	
ix35 FCEV(LM FCEV)	2016	General	Motor Control System	Version Information	
ix35 FCEV(LM FCEV)	2016	General	Motor Control System	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	Motor Control System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	Motor Control System	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	Motor Control System	Read FreezeData	
ix35 FCEV(LM FCEV)	2016	General	Blower Pump Control Unit	Version Information	
ix35 FCEV(LM FCEV)	2016	General	Blower Pump Control Unit	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	Blower Pump Control Unit	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	Blower Pump Control Unit	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	Blower Pump Control Unit	Read FreezeData	
ix35 FCEV(LM FCEV)	2016	General	Fuel Cell System	Version Information	
ix35 FCEV(LM FCEV)	2016	General	Fuel Cell System	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	Fuel Cell System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	Fuel Cell System	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	Fuel Cell System	Read FreezeData	
ix35 FCEV(LM FCEV)	2016	General	Fuel Cell System	Actuation Test	
ix35 FCEV(LM FCEV)	2016	General	Fuel Cell System	Special Function	EWP Actuating
ix35 FCEV(LM FCEV)	2016	General	Fuel Cell System	Special Function	Air Cut Off Valve Open Mode
ix35 FCEV(LM FCEV)	2016	General	Fuel Cell System	Special Function	Solenoid Valve Inspection
ix35 FCEV(LM FCEV)	2016	General	Fuel Cell System	Special Function	Stack Coolant Pump Actuating
ix35 FCEV(LM FCEV)	2016	General	Fuel Cell System	Special Function	FC Run Stop
ix35 FCEV(LM FCEV)	2016	General	Fuel Processing Driver	Version Information	
ix35 FCEV(LM FCEV)	2016	General	Fuel Processing Driver	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	Fuel Processing Driver	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	Fuel Processing Driver	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	Fuel Processing Driver	Read FreezeData	
ix35 FCEV(LM FCEV)	2016	General	Fuel Processing Driver	Actuation Test	
ix35 FCEV(LM FCEV)	2016	General	High DC/DC Convertor	Version Information	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2016	General	High DC/DC Convertor	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	High DC/DC Convertor	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	High DC/DC Convertor	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	High DC/DC Convertor	Read FreezeData	
ix35 FCEV(LM FCEV)	2016	General	Hydrogen Storage System	Version Information	
ix35 FCEV(LM FCEV)	2016	General	Hydrogen Storage System	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	Hydrogen Storage System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	Hydrogen Storage System	Read Data Stream	
ix35 FCEV(LM FCEV)	2016	General	Hydrogen Storage System	Actuation Test	
ix35 FCEV(LM FCEV)	2016	General	Hydrogen Storage System	Special Function	Read the number of Refueling
ix35 FCEV(LM FCEV)	2016	General	Hydrogen Storage System	Special Function	Reset the number of Refueling
ix35 FCEV(LM FCEV)	2016	General	Hydrogen Storage System	Special Function	Write the number of Refueling
ix35 FCEV(LM FCEV)	2016	General	Stack Volt Monitor	Version Information	
ix35 FCEV(LM FCEV)	2016	General	Stack Volt Monitor	Read Fault Code	
ix35 FCEV(LM FCEV)	2016	General	Stack Volt Monitor	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2016	General	Stack Volt Monitor	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	ABS(Anti-lock Braking System)	Version Information	
ix35 FCEV(LM FCEV)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
ix35 FCEV(LM FCEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix35 FCEV(LM FCEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35 FCEV(LM FCEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP)
ix35 FCEV(LM FCEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	Pedal Travel Sensor(DTC)Calibration
ix35 FCEV(LM FCEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
ix35 FCEV(LM FCEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix35 FCEV(LM FCEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
ix35 FCEV(LM FCEV)	2015	General	AC(Air Conditioning)	Version Information	
ix35 FCEV(LM FCEV)	2015	General	AC(Air Conditioning)	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	AC(Air Conditioning)	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	AC(Air Conditioning)	Actuation Test	
ix35 FCEV(LM FCEV)	2015	General	BCM(Body Control Module)	Version Information	
ix35 FCEV(LM FCEV)	2015	General	BCM(Body Control Module)	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	BCM(Body Control Module)	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	BCM(Body Control Module)	Actuation Test	
ix35 FCEV(LM FCEV)	2015	General	BCM(Body Control Module)	Special Function	User Option
ix35 FCEV(LM FCEV)	2015	General	EPS(Electronic Power Steering)	Version Information	
ix35 FCEV(LM FCEV)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35 FCEV(LM FCEV)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix35 FCEV(LM FCEV)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35 FCEV(LM FCEV)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35 FCEV(LM FCEV)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
ix35 FCEV(LM FCEV)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35 FCEV(LM FCEV)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35 FCEV(LM FCEV)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Special Function	Smart Key Code Saving
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Version Information	
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Actuation Test	
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Special Function	Antenna Status Check
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Special Function	SMK Status Information
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Special Function	ESCL Status Information
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Special Function	FOB Key Status Information
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Special Function	PDM Status Information
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Special Function	Serial Communication Line Check
ix35 FCEV(LM FCEV)	2015	General	Smart Key	Special Function	Neutralization Mode
ix35 FCEV(LM FCEV)	2015	General	Low DC/DC Converter	Version Information	
ix35 FCEV(LM FCEV)	2015	General	Low DC/DC Converter	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	Low DC/DC Converter	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	Low DC/DC Converter	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	Low DC/DC Converter	Read FreezeData	
ix35 FCEV(LM FCEV)	2015	General	Low DC/DC Converter	Actuation Test	
ix35 FCEV(LM FCEV)	2015	General	EV Battery System	Version Information	
ix35 FCEV(LM FCEV)	2015	General	EV Battery System	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	EV Battery System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	EV Battery System	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	EV Battery System	Read FreezeData	
ix35 FCEV(LM FCEV)	2015	General	EV Battery System	Actuation Test	
ix35 FCEV(LM FCEV)	2015	General	Blower Pump Control Unit	Version Information	
ix35 FCEV(LM FCEV)	2015	General	Blower Pump Control Unit	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	Blower Pump Control Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2015	General	Blower Pump Control Unit	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	Blower Pump Control Unit	Read FreezeData	
ix35 FCEV(LM FCEV)	2015	General	Fuel Cell System	Version Information	
ix35 FCEV(LM FCEV)	2015	General	Fuel Cell System	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	Fuel Cell System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	Fuel Cell System	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	Fuel Cell System	Read FreezeData	
ix35 FCEV(LM FCEV)	2015	General	Fuel Cell System	Actuation Test	
ix35 FCEV(LM FCEV)	2015	General	Fuel Cell System	Special Function	EWP Actuating
ix35 FCEV(LM FCEV)	2015	General	Fuel Cell System	Special Function	Air Cut Off Valve Open Mode
ix35 FCEV(LM FCEV)	2015	General	Fuel Cell System	Special Function	Solenoid Valve Inspection
ix35 FCEV(LM FCEV)	2015	General	Fuel Cell System	Special Function	Stack Coolant Pump Actuating
ix35 FCEV(LM FCEV)	2015	General	Fuel Cell System	Special Function	FC Run Stop
ix35 FCEV(LM FCEV)	2015	General	Fuel Processing Driver	Version Information	
ix35 FCEV(LM FCEV)	2015	General	Fuel Processing Driver	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	Fuel Processing Driver	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	Fuel Processing Driver	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	Fuel Processing Driver	Read FreezeData	
ix35 FCEV(LM FCEV)	2015	General	Fuel Processing Driver	Actuation Test	
ix35 FCEV(LM FCEV)	2015	General	High DC/DC Convertor	Version Information	
ix35 FCEV(LM FCEV)	2015	General	High DC/DC Convertor	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	High DC/DC Convertor	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	High DC/DC Convertor	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	High DC/DC Convertor	Read FreezeData	
ix35 FCEV(LM FCEV)	2015	General	Hydrogen Storage System	Version Information	
ix35 FCEV(LM FCEV)	2015	General	Hydrogen Storage System	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	Hydrogen Storage System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	Hydrogen Storage System	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	Hydrogen Storage System	Actuation Test	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2015	General	Hydrogen Storage System	Special Function	Read the number of Refueling
ix35 FCEV(LM FCEV)	2015	General	Hydrogen Storage System	Special Function	Reset the number of Refueling
ix35 FCEV(LM FCEV)	2015	General	Hydrogen Storage System	Special Function	Write the number of Refueling
ix35 FCEV(LM FCEV)	2015	General	FCEV Motor Control System	Version Information	
ix35 FCEV(LM FCEV)	2015	General	FCEV Motor Control System	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	FCEV Motor Control System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	FCEV Motor Control System	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	FCEV Motor Control System	Read FreezeData	
ix35 FCEV(LM FCEV)	2015	General	Power Distribution Module	Version Information	
ix35 FCEV(LM FCEV)	2015	General	Power Distribution Module	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	Power Distribution Module	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	Power Distribution Module	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	Power Distribution Module	Actuation Test	
ix35 FCEV(LM FCEV)	2015	General	Power Distribution Module	Special Function	ESCL Open Status Check
ix35 FCEV(LM FCEV)	2015	General	Smart Junction Block	Version Information	
ix35 FCEV(LM FCEV)	2015	General	Smart Junction Block	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	Smart Junction Block	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	Smart Junction Block	Read Data Stream	
ix35 FCEV(LM FCEV)	2015	General	Smart Junction Block	Actuation Test	
ix35 FCEV(LM FCEV)	2015	General	Stack Volt Monitor	Version Information	
ix35 FCEV(LM FCEV)	2015	General	Stack Volt Monitor	Read Fault Code	
ix35 FCEV(LM FCEV)	2015	General	Stack Volt Monitor	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2015	General	Stack Volt Monitor	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	ABS(Anti-lock Braking System)	Version Information	
ix35 FCEV(LM FCEV)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35 FCEV(LM FCEV)	2014	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP)
ix35 FCEV(LM FCEV)	2014	General	ABS(Anti-lock Braking System)	Special Function	Pedal Travel
ix35 FCEV(LM FCEV)	2014	General	ABS(Anti-lock Braking System)	Special Function	Corner/DTC Calibration
ix35 FCEV(LM FCEV)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	Pressure Sensor Calibration
ix35 FCEV(LM FCEV)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
ix35 FCEV(LM FCEV)	2014	General	AC(Air Conditioning)	Version Information	
ix35 FCEV(LM FCEV)	2014	General	AC(Air Conditioning)	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	AC(Air Conditioning)	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	AC(Air Conditioning)	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	BCM(Body Control Module)	Version Information	
ix35 FCEV(LM FCEV)	2014	General	BCM(Body Control Module)	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	BCM(Body Control Module)	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	BCM(Body Control Module)	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	BCM(Body Control Module)	Special Function	User Option
ix35 FCEV(LM FCEV)	2014	General	EPS(Electronic Power Steering)	Version Information	
ix35 FCEV(LM FCEV)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35 FCEV(LM FCEV)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix35 FCEV(LM FCEV)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35 FCEV(LM FCEV)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
ix35 FCEV(LM FCEV)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35 FCEV(LM FCEV)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35 FCEV(LM FCEV)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35 FCEV(LM FCEV)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Special Function	Smart Key Code Saving
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Version Information	
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Special Function	Antenna Status Check
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Special Function	SMK Status Information
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Special Function	ESCL Status Information
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Special Function	FOB Key Status Information
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Special Function	PDM Status Information
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Special Function	Serial Communication Line Check
ix35 FCEV(LM FCEV)	2014	General	Smart Key	Special Function	Neutralization Mode
ix35 FCEV(LM FCEV)	2014	General	Low DC/DC Converter	Version Information	
ix35 FCEV(LM FCEV)	2014	General	Low DC/DC Converter	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	Low DC/DC Converter	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	Low DC/DC Converter	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	Low DC/DC Converter	Read FreezeData	
ix35 FCEV(LM FCEV)	2014	General	Low DC/DC Converter	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	EV Battery System	Version Information	
ix35 FCEV(LM FCEV)	2014	General	EV Battery System	Read Fault Code	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2014	General	EV Battery System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	EV Battery System	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	EV Battery System	Read FreezeData	
ix35 FCEV(LM FCEV)	2014	General	EV Battery System	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	Blower Pump Control Unit	Version Information	
ix35 FCEV(LM FCEV)	2014	General	Blower Pump Control Unit	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	Blower Pump Control Unit	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	Blower Pump Control Unit	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	Blower Pump Control Unit	Read FreezeData	
ix35 FCEV(LM FCEV)	2014	General	Fuel Cell System	Version Information	
ix35 FCEV(LM FCEV)	2014	General	Fuel Cell System	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	Fuel Cell System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	Fuel Cell System	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	Fuel Cell System	Read FreezeData	
ix35 FCEV(LM FCEV)	2014	General	Fuel Cell System	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	Fuel Cell System	Special Function	EWP Actuating
ix35 FCEV(LM FCEV)	2014	General	Fuel Cell System	Special Function	Air Cut Off Valve Open Mode
ix35 FCEV(LM FCEV)	2014	General	Fuel Cell System	Special Function	Solenoid Valve Inspection
ix35 FCEV(LM FCEV)	2014	General	Fuel Cell System	Special Function	Stack Coolant Pump Actuating
ix35 FCEV(LM FCEV)	2014	General	Fuel Cell System	Special Function	FC Run Stop
ix35 FCEV(LM FCEV)	2014	General	Fuel Processing Driver	Version Information	
ix35 FCEV(LM FCEV)	2014	General	Fuel Processing Driver	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	Fuel Processing Driver	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	Fuel Processing Driver	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	Fuel Processing Driver	Read FreezeData	
ix35 FCEV(LM FCEV)	2014	General	Fuel Processing Driver	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	High DC/DC Convertor	Version Information	
ix35 FCEV(LM FCEV)	2014	General	High DC/DC Convertor	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	High DC/DC Convertor	Clear Fault Memory	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2014	General	High DC/DC Convertor	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	High DC/DC Convertor	Read FreezeData	
ix35 FCEV(LM FCEV)	2014	General	Hydrogen Storage System	Version Information	
ix35 FCEV(LM FCEV)	2014	General	Hydrogen Storage System	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	Hydrogen Storage System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	Hydrogen Storage System	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	Hydrogen Storage System	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	Hydrogen Storage System	Special Function	Read the number of Refueling
ix35 FCEV(LM FCEV)	2014	General	Hydrogen Storage System	Special Function	Reset the number of Refueling
ix35 FCEV(LM FCEV)	2014	General	Hydrogen Storage System	Special Function	Write the number of Refueling
ix35 FCEV(LM FCEV)	2014	General	FCEV Motor Control System	Version Information	
ix35 FCEV(LM FCEV)	2014	General	FCEV Motor Control System	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	FCEV Motor Control System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	FCEV Motor Control System	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	FCEV Motor Control System	Read FreezeData	
ix35 FCEV(LM FCEV)	2014	General	Power Distribution Module	Version Information	
ix35 FCEV(LM FCEV)	2014	General	Power Distribution Module	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	Power Distribution Module	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	Power Distribution Module	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	Power Distribution Module	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	Power Distribution Module	Special Function	ESCL Open Status Check
ix35 FCEV(LM FCEV)	2014	General	Smart Junction Block	Version Information	
ix35 FCEV(LM FCEV)	2014	General	Smart Junction Block	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	Smart Junction Block	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2014	General	Smart Junction Block	Read Data Stream	
ix35 FCEV(LM FCEV)	2014	General	Smart Junction Block	Actuation Test	
ix35 FCEV(LM FCEV)	2014	General	Stack Volt Monitor	Version Information	
ix35 FCEV(LM FCEV)	2014	General	Stack Volt Monitor	Read Fault Code	
ix35 FCEV(LM FCEV)	2014	General	Stack Volt Monitor	Clear Fault Memory	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2014	General	Stack Volt Monitor	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	ABS(Anti-lock Braking System)	Version Information	
ix35 FCEV(LM FCEV)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix35 FCEV(LM FCEV)	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35 FCEV(LM FCEV)	2013	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP)
ix35 FCEV(LM FCEV)	2013	General	ABS(Anti-lock Braking System)	Special Function	Pedal Travel
ix35 FCEV(LM FCEV)	2013	General	ABS(Anti-lock Braking System)	Special Function	Corner(DTC)Calibration
ix35 FCEV(LM FCEV)	2013	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
ix35 FCEV(LM FCEV)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix35 FCEV(LM FCEV)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
ix35 FCEV(LM FCEV)	2013	General	AC(Air Conditioning)	Version Information	
ix35 FCEV(LM FCEV)	2013	General	AC(Air Conditioning)	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	AC(Air Conditioning)	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	AC(Air Conditioning)	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	BCM(Body Control Module)	Version Information	
ix35 FCEV(LM FCEV)	2013	General	BCM(Body Control Module)	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	BCM(Body Control Module)	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	BCM(Body Control Module)	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	BCM(Body Control Module)	Special Function	User Option
ix35 FCEV(LM FCEV)	2013	General	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35 FCEV(LM FCEV)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix35 FCEV(LM FCEV)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35 FCEV(LM FCEV)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
ix35 FCEV(LM FCEV)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35 FCEV(LM FCEV)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35 FCEV(LM FCEV)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35 FCEV(LM FCEV)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Special Function	Smart Key Code Saving
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Version Information	
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Special Function	Antenna Status Check
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Special Function	SMK Status Information
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Special Function	ESCL Status Information
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Special Function	FOB Key Status Information
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Special Function	PDM Status Information
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Special Function	Serial Communication Line Check
ix35 FCEV(LM FCEV)	2013	General	Smart Key	Special Function	Neutralization Mode
ix35 FCEV(LM FCEV)	2013	General	Low DC/DC Converter	Version Information	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2013	General	Low DC/DC Converter	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	Low DC/DC Converter	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	Low DC/DC Converter	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	Low DC/DC Converter	Read FreezeData	
ix35 FCEV(LM FCEV)	2013	General	Low DC/DC Converter	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	EV Battery System	Version Information	
ix35 FCEV(LM FCEV)	2013	General	EV Battery System	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	EV Battery System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	EV Battery System	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	EV Battery System	Read FreezeData	
ix35 FCEV(LM FCEV)	2013	General	EV Battery System	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	Blower Pump Control Unit	Version Information	
ix35 FCEV(LM FCEV)	2013	General	Blower Pump Control Unit	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	Blower Pump Control Unit	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	Blower Pump Control Unit	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	Blower Pump Control Unit	Read FreezeData	
ix35 FCEV(LM FCEV)	2013	General	Fuel Cell System	Version Information	
ix35 FCEV(LM FCEV)	2013	General	Fuel Cell System	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	Fuel Cell System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	Fuel Cell System	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	Fuel Cell System	Read FreezeData	
ix35 FCEV(LM FCEV)	2013	General	Fuel Cell System	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	Fuel Cell System	Special Function	EWP Actuating
ix35 FCEV(LM FCEV)	2013	General	Fuel Cell System	Special Function	Air Cut Off Valve Open Mode
ix35 FCEV(LM FCEV)	2013	General	Fuel Cell System	Special Function	Solenoid Valve Inspection
ix35 FCEV(LM FCEV)	2013	General	Fuel Cell System	Special Function	Stack Coolant Pump Actuating
ix35 FCEV(LM FCEV)	2013	General	Fuel Cell System	Special Function	FC Run Stop
ix35 FCEV(LM FCEV)	2013	General	Fuel Processing Driver	Version Information	
ix35 FCEV(LM FCEV)	2013	General	Fuel Processing Driver	Read Fault Code	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2013	General	Fuel Processing Driver	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	Fuel Processing Driver	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	Fuel Processing Driver	Read FreezeData	
ix35 FCEV(LM FCEV)	2013	General	Fuel Processing Driver	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	High DC/DC Convertor	Version Information	
ix35 FCEV(LM FCEV)	2013	General	High DC/DC Convertor	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	High DC/DC Convertor	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	High DC/DC Convertor	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	High DC/DC Convertor	Read FreezeData	
ix35 FCEV(LM FCEV)	2013	General	Hydrogen Storage System	Version Information	
ix35 FCEV(LM FCEV)	2013	General	Hydrogen Storage System	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	Hydrogen Storage System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	Hydrogen Storage System	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	Hydrogen Storage System	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	Hydrogen Storage System	Special Function	read the number of
ix35 FCEV(LM FCEV)	2013	General	Hydrogen Storage System	Special Function	Reset the number of
ix35 FCEV(LM FCEV)	2013	General	Hydrogen Storage System	Special Function	Write the number of
ix35 FCEV(LM FCEV)	2013	General	Hydrogen Storage System	Special Function	Defueling
ix35 FCEV(LM FCEV)	2013	General	FCEV Motor Control System	Version Information	
ix35 FCEV(LM FCEV)	2013	General	FCEV Motor Control System	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	FCEV Motor Control System	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	FCEV Motor Control System	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	FCEV Motor Control System	Read FreezeData	
ix35 FCEV(LM FCEV)	2013	General	Power Distribution Module	Version Information	
ix35 FCEV(LM FCEV)	2013	General	Power Distribution Module	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	Power Distribution Module	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	Power Distribution Module	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	Power Distribution Module	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	Power Distribution Module	Special Function	ESCL Open Status Check
ix35 FCEV(LM FCEV)	2013	General	Smart Junction Block	Version Information	

model	year	area	system	function	subfunction
ix35 FCEV(LM FCEV)	2013	General	Smart Junction Block	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	Smart Junction Block	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	Smart Junction Block	Read Data Stream	
ix35 FCEV(LM FCEV)	2013	General	Smart Junction Block	Actuation Test	
ix35 FCEV(LM FCEV)	2013	General	Stack Volt Monitor	Version Information	
ix35 FCEV(LM FCEV)	2013	General	Stack Volt Monitor	Read Fault Code	
ix35 FCEV(LM FCEV)	2013	General	Stack Volt Monitor	Clear Fault Memory	
ix35 FCEV(LM FCEV)	2013	General	Stack Volt Monitor	Read Data Stream	
ix35(EL)	2016	General	ECM(Engine Control Module)	Version Information	
ix35(EL)	2016	General	ECM(Engine Control Module)	Read Fault Code	
ix35(EL)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
ix35(EL)	2016	General	ECM(Engine Control Module)	Read Data Stream	
ix35(EL)	2016	General	ECM(Engine Control Module)	Actuation Test	
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
ix35(EL)	2016	General	ABS(Anti-lock Braking System)	Version Information	
ix35(EL)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix35(EL)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix35(EL)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix35(EL)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
ix35(EL)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
ix35(EL)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix35(EL)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35(EL)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
ix35(EL)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding

model	year	area	system	function	subfunction
ix35(EL)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix35(EL)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35(EL)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix35(EL)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35(EL)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
ix35(EL)	2016	General	AC(Air Conditioning)	Version Information	
ix35(EL)	2016	General	AC(Air Conditioning)	Read Fault Code	
ix35(EL)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
ix35(EL)	2016	General	AC(Air Conditioning)	Read Data Stream	
ix35(EL)	2016	General	AC(Air Conditioning)	Actuation Test	
ix35(EL)	2016	General	BCM(Body Control Module)	Version Information	
ix35(EL)	2016	General	BCM(Body Control Module)	Read Fault Code	
ix35(EL)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
ix35(EL)	2016	General	BCM(Body Control Module)	Read Data Stream	
ix35(EL)	2016	General	BCM(Body Control Module)	Actuation Test	
ix35(EL)	2016	General	BCM(Body Control Module)	Special Function	User Option
ix35(EL)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35(EL)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35(EL)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35(EL)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35(EL)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35(EL)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
ix35(EL)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35(EL)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35(EL)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35(EL)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35(EL)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix35(EL)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
ix35(EL)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	

model	year	area	system	function	subfunction
ix35(EL)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
ix35(EL)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
ix35(EL)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
ix35(EL)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
ix35(EL)	2016	General	EPS(Electronic Power Steering)	Version Information	
ix35(EL)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35(EL)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35(EL)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35(EL)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35(EL)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix35(EL)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
ix35(EL)	2016	General	Driveshaft	Version Information	
ix35(EL)	2016	General	Driveshaft	Read Fault Code	
ix35(EL)	2016	General	Driveshaft	Clear Fault Memory	
ix35(EL)	2016	General	Driveshaft	Read Data Stream	
ix35(EL)	2016	General	Driveshaft	Actuation Test	
ix35(EL)	2016	General	Driveshaft	Special Function	Clutch Learning Read
ix35(EL)	2016	General	Driveshaft	Special Function	Clutch Learning Reset
ix35(EL)	2016	General	Driveshaft	Special Function	Clutch Learning Write
ix35(EL)	2016	General	Smart Key Unit	Version Information	
ix35(EL)	2016	General	Smart Key Unit	Read Fault Code	
ix35(EL)	2016	General	Smart Key Unit	Clear Fault Memory	
ix35(EL)	2016	General	Smart Key Unit	Read Data Stream	
ix35(EL)	2016	General	Smart Key Unit	Actuation Test	
ix35(EL)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix35(EL)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
ix35(EL)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
ix35(EL)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
ix35(EL)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
ix35(EL)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
ix35(EL)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix35(EL)	2016	General	Smart Key Unit	Special Function	SMK Status Information
ix35(EL)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
ix35(EL)	2016	General	Smart Parking Assist System	Version Information	
ix35(EL)	2016	General	Smart Parking Assist System	Read Fault Code	
ix35(EL)	2016	General	Smart Parking Assist System	Clear Fault Memory	
ix35(EL)	2016	General	Smart Parking Assist System	Read Data Stream	
ix35(EL)	2016	General	Smart Parking Assist System	Actuation Test	
ix35(EL)	2016	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
ix35(EL)	2016	General	IMM(Immobilizer)	Read Data Stream	
ix35(EL)	2016	General	IMM(Immobilizer)	Special Function	Password
ix35(EL)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
ix35(EL)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix35(EL)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix35(EL)	2016	General	IMM(Immobilizer)	Special Function	Teaching
ix35(EL)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
ix35(EL)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
ix35(EL)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
ix35(EL)	2016	General	ECM(Engine Control Module)	Read FreezeData	
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	Turbo Actuator Setting
ix35(EL)	2016	General	TCM(Transmission Control Module)	Version Information	
ix35(EL)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
ix35(EL)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix35(EL)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
ix35(EL)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
ix35(EL)	2016	General	TCM(Transmission Control Module)	Actuation Test	
ix35(EL)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
ix35(EL)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
ix35(EL)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
ix35(EL)	2015	General	ECM(Engine Control Module)	Version Information	
ix35(EL)	2015	General	ECM(Engine Control Module)	Read Fault Code	
ix35(EL)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
ix35(EL)	2015	General	ECM(Engine Control Module)	Read Data Stream	
ix35(EL)	2015	General	ECM(Engine Control Module)	Read FreezeData	
ix35(EL)	2015	General	ECM(Engine Control Module)	Actuation Test	
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix35(EL)	2015	General	TCM(Transmission Control Module)	Version Information	
ix35(EL)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
ix35(EL)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
ix35(EL)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
ix35(EL)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
ix35(EL)	2015	General	TCM(Transmission Control Module)	Actuation Test	
ix35(EL)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix35(EL)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
ix35(EL)	2015	General	ABS(Anti-lock Braking System)	Version Information	
ix35(EL)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix35(EL)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix35(EL)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix35(EL)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
ix35(EL)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
ix35(EL)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix35(EL)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35(EL)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
ix35(EL)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
ix35(EL)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix35(EL)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35(EL)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix35(EL)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35(EL)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
ix35(EL)	2015	General	AC(Air Conditioning)	Version Information	
ix35(EL)	2015	General	AC(Air Conditioning)	Read Fault Code	
ix35(EL)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
ix35(EL)	2015	General	AC(Air Conditioning)	Read Data Stream	
ix35(EL)	2015	General	AC(Air Conditioning)	Actuation Test	
ix35(EL)	2015	General	BCM(Body Control Module)	Version Information	
ix35(EL)	2015	General	BCM(Body Control Module)	Read Fault Code	
ix35(EL)	2015	General	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
ix35(EL)	2015	General	BCM(Body Control Module)	Read Data Stream	
ix35(EL)	2015	General	BCM(Body Control Module)	Actuation Test	
ix35(EL)	2015	General	BCM(Body Control Module)	Special Function	User Option
ix35(EL)	2015	General	EPS(Electronic Power Steering)	Version Information	
ix35(EL)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35(EL)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35(EL)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35(EL)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35(EL)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix35(EL)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
ix35(EL)	2015	General	4WD Control	Version Information	
ix35(EL)	2015	General	4WD Control	Read Fault Code	
ix35(EL)	2015	General	4WD Control	Clear Fault Memory	
ix35(EL)	2015	General	4WD Control	Read Data Stream	
ix35(EL)	2015	General	4WD Control	Actuation Test	
ix35(EL)	2015	General	4WD Control	Special Function	Clutch Learning Read
ix35(EL)	2015	General	4WD Control	Special Function	Clutch Learning Reset
ix35(EL)	2015	General	4WD Control	Special Function	Clutch Learning Write
ix35(EL)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35(EL)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35(EL)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35(EL)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35(EL)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35(EL)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
ix35(EL)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35(EL)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35(EL)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35(EL)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
ix35(EL)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix35(EL)	2015	General	IMM(Immobilizer)	Read Data Stream	
ix35(EL)	2015	General	IMM(Immobilizer)	Special Function	Password
ix35(EL)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
ix35(EL)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix35(EL)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix35(EL)	2015	General	IMM(Immobilizer)	Special Function	Teaching
ix35(EL)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
ix35(EL)	2015	General	Smart Key Unit	Version Information	
ix35(EL)	2015	General	Smart Key Unit	Read Fault Code	
ix35(EL)	2015	General	Smart Key Unit	Clear Fault Memory	
ix35(EL)	2015	General	Smart Key Unit	Read Data Stream	
ix35(EL)	2015	General	Smart Key Unit	Actuation Test	
ix35(EL)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix35(EL)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
ix35(EL)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
ix35(EL)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix35(EL)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
ix35(EL)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
ix35(EL)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix35(EL)	2015	General	Smart Key Unit	Special Function	SMK Status Information
ix35(EL)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
ix35(EL)	2015	General	Auto Headlamp Leveling System	Version Information	
ix35(EL)	2015	General	Auto Headlamp Leveling System	Read Fault Code	
ix35(EL)	2015	General	Auto Headlamp Leveling System	Clear Fault Memory	
ix35(EL)	2015	General	Auto Headlamp Leveling System	Read Data Stream	
ix35(EL)	2015	General	Auto Headlamp Leveling System	Special Function	Level Initialization
ix35(EL)	2015	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
ix35(EL)	2015	General	Smart Parking Assist System	Version Information	
ix35(EL)	2015	General	Smart Parking Assist System	Read Fault Code	

model	year	area	system	function	subfunction
ix35(EL)	2015	General	Smart Parking Assist System	Clear Fault Memory	
ix35(EL)	2015	General	Smart Parking Assist System	Read Data Stream	
ix35(EL)	2015	General	Smart Parking Assist System	Actuation Test	
ix35(EL)	2015	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
ix35(EL)	2015	General	Transmitter Code Saving	Read Data Stream	
ix35(EL)	2015	General	Transmitter Code Saving	Special Function	Code Saving
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix35(EL)	2015	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
ix35(EL)	2014	General	ECM(Engine Control Module)	Version Information	
ix35(EL)	2014	General	ECM(Engine Control Module)	Read Fault Code	
ix35(EL)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
ix35(EL)	2014	General	ECM(Engine Control Module)	Read Data Stream	
ix35(EL)	2014	General	ECM(Engine Control Module)	Read FreezeData	
ix35(EL)	2014	General	ECM(Engine Control Module)	Actuation Test	
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)

model	year	area	system	function	subfunction
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix35(EL)	2014	General	TCM(Transmission Control Module)	Version Information	
ix35(EL)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
ix35(EL)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix35(EL)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
ix35(EL)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
ix35(EL)	2014	General	TCM(Transmission Control Module)	Actuation Test	
ix35(EL)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix35(EL)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
ix35(EL)	2014	General	ABS(Anti-lock Braking System)	Version Information	
ix35(EL)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
ix35(EL)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
ix35(EL)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
ix35(EL)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
ix35(EL)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
ix35(EL)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
ix35(EL)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35(EL)	2014	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
ix35(EL)	2014	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
ix35(EL)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix35(EL)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35(EL)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix35(EL)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35(EL)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
ix35(EL)	2014	General	AC(Air Conditioning)	Version Information	
ix35(EL)	2014	General	AC(Air Conditioning)	Read Fault Code	
ix35(EL)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
ix35(EL)	2014	General	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
ix35(EL)	2014	General	AC(Air Conditioning)	Actuation Test	
ix35(EL)	2014	General	BCM(Body Control Module)	Version Information	
ix35(EL)	2014	General	BCM(Body Control Module)	Read Fault Code	
ix35(EL)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
ix35(EL)	2014	General	BCM(Body Control Module)	Read Data Stream	
ix35(EL)	2014	General	BCM(Body Control Module)	Actuation Test	
ix35(EL)	2014	General	BCM(Body Control Module)	Special Function	User Option
ix35(EL)	2014	General	EPS(Electronic Power Steering)	Version Information	
ix35(EL)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35(EL)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35(EL)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35(EL)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35(EL)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
ix35(EL)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
ix35(EL)	2014	General	4WD Control	Version Information	
ix35(EL)	2014	General	4WD Control	Read Fault Code	
ix35(EL)	2014	General	4WD Control	Clear Fault Memory	
ix35(EL)	2014	General	4WD Control	Read Data Stream	
ix35(EL)	2014	General	4WD Control	Actuation Test	
ix35(EL)	2014	General	4WD Control	Special Function	Clutch Learning Read
ix35(EL)	2014	General	4WD Control	Special Function	Clutch Learning Reset
ix35(EL)	2014	General	4WD Control	Special Function	Clutch Learning Write
ix35(EL)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35(EL)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35(EL)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35(EL)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35(EL)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35(EL)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration

model	year	area	system	function	subfunction
ix35(EL)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35(EL)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35(EL)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35(EL)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35(EL)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix35(EL)	2014	General	IMM(Immobilizer)	Read Data Stream	
ix35(EL)	2014	General	IMM(Immobilizer)	Special Function	Password
ix35(EL)	2014	General	IMM(Immobilizer)	Special Function	Teaching/Changing
ix35(EL)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix35(EL)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix35(EL)	2014	General	IMM(Immobilizer)	Special Function	Teaching
ix35(EL)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
ix35(EL)	2014	General	Smart Key Unit	Version Information	
ix35(EL)	2014	General	Smart Key Unit	Read Fault Code	
ix35(EL)	2014	General	Smart Key Unit	Clear Fault Memory	
ix35(EL)	2014	General	Smart Key Unit	Read Data Stream	
ix35(EL)	2014	General	Smart Key Unit	Actuation Test	
ix35(EL)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
ix35(EL)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
ix35(EL)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
ix35(EL)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
ix35(EL)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
ix35(EL)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
ix35(EL)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
ix35(EL)	2014	General	Smart Key Unit	Special Function	SMK Status Information
ix35(EL)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
ix35(EL)	2014	General	Auto Headlamp Leveling System	Version Information	
ix35(EL)	2014	General	Auto Headlamp Leveling System	Read Fault Code	
ix35(EL)	2014	General	Auto Headlamp Leveling System	Clear Fault Memory	
ix35(EL)	2014	General	Auto Headlamp Leveling System	Read Data Stream	

model	year	area	system	function	subfunction
ix35(EL)	2014	General	Auto Headlamp Leveling System	Special Function	Level Initialization
ix35(EL)	2014	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
ix35(EL)	2014	General	Smart Parking Assist System	Version Information	
ix35(EL)	2014	General	Smart Parking Assist System	Read Fault Code	
ix35(EL)	2014	General	Smart Parking Assist System	Clear Fault Memory	
ix35(EL)	2014	General	Smart Parking Assist System	Read Data Stream	
ix35(EL)	2014	General	Smart Parking Assist System	Actuation Test	
ix35(EL)	2014	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
ix35(EL)	2014	General	Transmitter Code Saving	Read Data Stream	
ix35(EL)	2014	General	Transmitter Code Saving	Special Function	Code Saving
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix35(EL)	2014	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
ix35(EL)	2013	General	ECM(Engine Control Module)	Version Information	
ix35(EL)	2013	General	ECM(Engine Control Module)	Read Fault Code	
ix35(EL)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
ix35(EL)	2013	General	ECM(Engine Control Module)	Read Data Stream	
ix35(EL)	2013	General	ECM(Engine Control Module)	Read FreezeData	
ix35(EL)	2013	General	ECM(Engine Control Module)	Actuation Test	
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix35(EL)	2013	General	TCM(Transmission Control Module)	Version Information	
ix35(EL)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
ix35(EL)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix35(EL)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
ix35(EL)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
ix35(EL)	2013	General	TCM(Transmission Control Module)	Actuation Test	
ix35(EL)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix35(EL)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
ix35(EL)	2013	General	ESP(Electronic Stability Program)	Version Information	
ix35(EL)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
ix35(EL)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	
ix35(EL)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
ix35(EL)	2013	General	ESP(Electronic Stability Program)	Actuation Test	
ix35(EL)	2013	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35(EL)	2013	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode Auto Detected
ix35(EL)	2013	General	ESP(Electronic Stability Program)	Special Function	Configuration Base Configuration(CAN-LSP Only)
ix35(EL)	2013	General	ESP(Electronic Stability Program)	Special Function	Base Configuration(CAN-LSP Only)
ix35(EL)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix35(EL)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35(EL)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix35(EL)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
ix35(EL)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
ix35(EL)	2013	General	AC(Air Conditioning)	Version Information	
ix35(EL)	2013	General	AC(Air Conditioning)	Read Fault Code	
ix35(EL)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
ix35(EL)	2013	General	AC(Air Conditioning)	Read Data Stream	
ix35(EL)	2013	General	AC(Air Conditioning)	Actuation Test	
ix35(EL)	2013	General	BCM(Body Control Module)	Version Information	
ix35(EL)	2013	General	BCM(Body Control Module)	Read Fault Code	
ix35(EL)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
ix35(EL)	2013	General	BCM(Body Control Module)	Read Data Stream	
ix35(EL)	2013	General	BCM(Body Control Module)	Actuation Test	
ix35(EL)	2013	General	EPS(Electronic Power Steering)	Version Information	
ix35(EL)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35(EL)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35(EL)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35(EL)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35(EL)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding
ix35(EL)	2013	General	4WD Control	Version Information	
ix35(EL)	2013	General	4WD Control	Read Fault Code	
ix35(EL)	2013	General	4WD Control	Clear Fault Memory	
ix35(EL)	2013	General	4WD Control	Read Data Stream	
ix35(EL)	2013	General	4WD Control	Special Function	AWD Mode Selection
ix35(EL)	2013	General	4WD Control	Special Function	Torque Coupling Control
ix35(EL)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35(EL)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35(EL)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35(EL)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35(EL)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35(EL)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration

model	year	area	system	function	subfunction
ix35(EL)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35(EL)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35(EL)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35(EL)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35(EL)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix35(EL)	2013	General	IMM(Immobilizer)	Read Data Stream	
ix35(EL)	2013	General	IMM(Immobilizer)	Special Function	Password
ix35(EL)	2013	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
ix35(EL)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix35(EL)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix35(EL)	2013	General	IMM(Immobilizer)	Special Function	Teaching
ix35(EL)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
ix35(EL)	2013	General	Smart Key	Version Information	
ix35(EL)	2013	General	Smart Key	Read Fault Code	
ix35(EL)	2013	General	Smart Key	Clear Fault Memory	
ix35(EL)	2013	General	Smart Key	Read Data Stream	
ix35(EL)	2013	General	Smart Key	Actuation Test	
ix35(EL)	2013	General	Smart Key	Special Function	ESCL Open Status Check
ix35(EL)	2013	General	Smart Key	Special Function	Smart Key Code Saving
ix35(EL)	2013	General	Smart Key	Special Function	Neutralization Mode
ix35(EL)	2013	General	Smart Key	Special Function	SMK Status Information
ix35(EL)	2013	General	Smart Key	Special Function	ESCL Status Information
ix35(EL)	2013	General	Smart Key	Special Function	PDM Status Information
ix35(EL)	2013	General	Smart Key	Special Function	FOB Key Status Information
ix35(EL)	2013	General	Smart Key	Special Function	Serial Communication Line Check
ix35(EL)	2013	General	Smart Key	Special Function	Antenna Status Check
ix35(EL)	2013	General	Transmitter Code Saving	Read Data Stream	
ix35(EL)	2013	General	Transmitter Code Saving	Special Function	Code Saving
ix35(EL)	2013	General	Smart Parking Assist System	Version Information	
ix35(EL)	2013	General	Smart Parking Assist System	Read Fault Code	

model	year	area	system	function	subfunction
ix35(EL)	2013	General	Smart Parking Assist System	Clear Fault Memory	
ix35(EL)	2013	General	Smart Parking Assist System	Read Data Stream	
ix35(EL)	2013	General	Smart Parking Assist System	Actuation Test	
ix35(EL)	2013	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
ix35(EL)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix35(EL)	2012	General	ECM(Engine Control Module)	Version Information	
ix35(EL)	2012	General	ECM(Engine Control Module)	Read Fault Code	
ix35(EL)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
ix35(EL)	2012	General	ECM(Engine Control Module)	Read Data Stream	
ix35(EL)	2012	General	ECM(Engine Control Module)	Read FreezeData	
ix35(EL)	2012	General	ECM(Engine Control Module)	Actuation Test	
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	CVVT Test
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix35(EL)	2012	General	TCM(Transmission Control Module)	Version Information	
ix35(EL)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
ix35(EL)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
ix35(EL)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
ix35(EL)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
ix35(EL)	2012	General	TCM(Transmission Control Module)	Actuation Test	
ix35(EL)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix35(EL)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
ix35(EL)	2012	General	ESP(Electronic Stability Program)	Version Information	
ix35(EL)	2012	General	ESP(Electronic Stability Program)	Read Fault Code	
ix35(EL)	2012	General	ESP(Electronic Stability Program)	Clear Fault Memory	
ix35(EL)	2012	General	ESP(Electronic Stability Program)	Read Data Stream	
ix35(EL)	2012	General	ESP(Electronic Stability Program)	Actuation Test	
ix35(EL)	2012	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35(EL)	2012	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
ix35(EL)	2012	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
ix35(EL)	2012	General	ESP(Electronic Stability Program)	Special Function	SAS Calibration(CAN-LSP Only)
ix35(EL)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix35(EL)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35(EL)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix35(EL)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35(EL)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
ix35(EL)	2012	General	AC(Air Conditioning)	Version Information	
ix35(EL)	2012	General	AC(Air Conditioning)	Read Fault Code	
ix35(EL)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
ix35(EL)	2012	General	AC(Air Conditioning)	Read Data Stream	
ix35(EL)	2012	General	AC(Air Conditioning)	Actuation Test	
ix35(EL)	2012	General	BCM(Body Control Module)	Version Information	
ix35(EL)	2012	General	BCM(Body Control Module)	Read Fault Code	
ix35(EL)	2012	General	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
ix35(EL)	2012	General	BCM(Body Control Module)	Read Data Stream	
ix35(EL)	2012	General	BCM(Body Control Module)	Actuation Test	
ix35(EL)	2012	General	EPS(Electronic Power Steering)	Version Information	
ix35(EL)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35(EL)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35(EL)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35(EL)	2012	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35(EL)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding
ix35(EL)	2012	General	4WD Control	Version Information	
ix35(EL)	2012	General	4WD Control	Read Fault Code	
ix35(EL)	2012	General	4WD Control	Clear Fault Memory	
ix35(EL)	2012	General	4WD Control	Read Data Stream	
ix35(EL)	2012	General	4WD Control	Special Function	AWD Mode Selection
ix35(EL)	2012	General	4WD Control	Special Function	Torque Coupling Control
ix35(EL)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35(EL)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35(EL)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35(EL)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35(EL)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35(EL)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
ix35(EL)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35(EL)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35(EL)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35(EL)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35(EL)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix35(EL)	2012	General	IMM(Immobilizer)	Read Data Stream	
ix35(EL)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
ix35(EL)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix35(EL)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
ix35(EL)	2012	General	IMM(Immobilizer)	Special Function	Teaching
ix35(EL)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
ix35(EL)	2012	General	Smart Key	Version Information	
ix35(EL)	2012	General	Smart Key	Read Fault Code	
ix35(EL)	2012	General	Smart Key	Clear Fault Memory	
ix35(EL)	2012	General	Smart Key	Read Data Stream	
ix35(EL)	2012	General	Smart Key	Actuation Test	
ix35(EL)	2012	General	Smart Key	Special Function	ESCL Open Status Check
ix35(EL)	2012	General	Smart Key	Special Function	Smart Key Code Saving
ix35(EL)	2012	General	Smart Key	Special Function	Neutralization Mode
ix35(EL)	2012	General	Smart Key	Special Function	SMK Status Information
ix35(EL)	2012	General	Smart Key	Special Function	ESCL Status Information
ix35(EL)	2012	General	Smart Key	Special Function	PDM Status Information
ix35(EL)	2012	General	Smart Key	Special Function	FOB Key Status Information
ix35(EL)	2012	General	Smart Key	Special Function	Serial Communication Line Check
ix35(EL)	2012	General	Smart Key	Special Function	Antenna Status Check
ix35(EL)	2012	General	Transmitter Code Saving	Read Data Stream	
ix35(EL)	2012	General	Transmitter Code Saving	Special Function	Code Saving
ix35(EL)	2012	General	Smart Parking Assist System	Version Information	
ix35(EL)	2012	General	Smart Parking Assist System	Read Fault Code	
ix35(EL)	2012	General	Smart Parking Assist System	Clear Fault Memory	
ix35(EL)	2012	General	Smart Parking Assist System	Read Data Stream	
ix35(EL)	2012	General	Smart Parking Assist System	Actuation Test	
ix35(EL)	2012	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine

model	year	area	system	function	subfunction
ix35(EL)	2012	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix35(EL)	2011	General	ECM(Engine Control Module)	Version Information	
ix35(EL)	2011	General	ECM(Engine Control Module)	Read Fault Code	
ix35(EL)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
ix35(EL)	2011	General	ECM(Engine Control Module)	Read Data Stream	
ix35(EL)	2011	General	ECM(Engine Control Module)	Read FreezeData	
ix35(EL)	2011	General	ECM(Engine Control Module)	Actuation Test	
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	CVVT Test
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
ix35(EL)	2011	General	TCM(Transmission Control Module)	Version Information	
ix35(EL)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
ix35(EL)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix35(EL)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
ix35(EL)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
ix35(EL)	2011	General	TCM(Transmission Control Module)	Actuation Test	
ix35(EL)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix35(EL)	2011	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
ix35(EL)	2011	General	ESP(Electronic Stability Program)	Version Information	
ix35(EL)	2011	General	ESP(Electronic Stability Program)	Read Fault Code	
ix35(EL)	2011	General	ESP(Electronic Stability Program)	Clear Fault Memory	
ix35(EL)	2011	General	ESP(Electronic Stability Program)	Read Data Stream	
ix35(EL)	2011	General	ESP(Electronic Stability Program)	Actuation Test	

model	year	area	system	function	subfunction
ix35(EL)	2011	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35(EL)	2011	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
ix35(EL)	2011	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
ix35(EL)	2011	General	ESP(Electronic Stability Program)	Special Function	Base Configuration(CAN-ESP Only)
ix35(EL)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix35(EL)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35(EL)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
ix35(EL)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35(EL)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
ix35(EL)	2011	General	AC(Air Conditioning)	Version Information	
ix35(EL)	2011	General	AC(Air Conditioning)	Read Fault Code	
ix35(EL)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
ix35(EL)	2011	General	AC(Air Conditioning)	Read Data Stream	
ix35(EL)	2011	General	AC(Air Conditioning)	Actuation Test	
ix35(EL)	2011	General	BCM(Body Control Module)	Version Information	
ix35(EL)	2011	General	BCM(Body Control Module)	Read Fault Code	
ix35(EL)	2011	General	BCM(Body Control Module)	Clear Fault Memory	
ix35(EL)	2011	General	BCM(Body Control Module)	Read Data Stream	
ix35(EL)	2011	General	BCM(Body Control Module)	Actuation Test	
ix35(EL)	2011	General	EPS(Electronic Power Steering)	Version Information	
ix35(EL)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35(EL)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35(EL)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35(EL)	2011	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35(EL)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding
ix35(EL)	2011	General	4WD Control	Version Information	
ix35(EL)	2011	General	4WD Control	Read Fault Code	

model	year	area	system	function	subfunction
ix35(EL)	2011	General	4WD Control	Clear Fault Memory	
ix35(EL)	2011	General	4WD Control	Read Data Stream	
ix35(EL)	2011	General	4WD Control	Special Function	AWD Mode Selection
ix35(EL)	2011	General	4WD Control	Special Function	Torque Coupling Control
ix35(EL)	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35(EL)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35(EL)	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35(EL)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35(EL)	2011	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
ix35(EL)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
ix35(EL)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35(EL)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35(EL)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35(EL)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35(EL)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix35(EL)	2011	General	IMM(Immobilizer)	Read Data Stream	
ix35(EL)	2011	General	IMM(Immobilizer)	Special Function	Password
ix35(EL)	2011	General	IMM(Immobilizer)	Special Function	Teaching/Changing
ix35(EL)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix35(EL)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix35(EL)	2011	General	IMM(Immobilizer)	Special Function	Teaching
ix35(EL)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
ix35(EL)	2011	General	Smart Key	Version Information	
ix35(EL)	2011	General	Smart Key	Read Fault Code	
ix35(EL)	2011	General	Smart Key	Clear Fault Memory	
ix35(EL)	2011	General	Smart Key	Read Data Stream	
ix35(EL)	2011	General	Smart Key	Actuation Test	
ix35(EL)	2011	General	Smart Key	Special Function	ESCL Open Status Check
ix35(EL)	2011	General	Smart Key	Special Function	Smart Key Code Saving
ix35(EL)	2011	General	Smart Key	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
ix35(EL)	2011	General	Smart Key	Special Function	SMK Status Information
ix35(EL)	2011	General	Smart Key	Special Function	ESCL Status Information
ix35(EL)	2011	General	Smart Key	Special Function	PDM Status Information
ix35(EL)	2011	General	Smart Key	Special Function	FOB Key Status Information
ix35(EL)	2011	General	Smart Key	Special Function	Serial Communication Line Check
ix35(EL)	2011	General	Smart Key	Special Function	Antenna Status Check
ix35(EL)	2011	General	Transmitter Code Saving	Read Data Stream	
ix35(EL)	2011	General	Transmitter Code Saving	Special Function	Code Saving
ix35(EL)	2011	General	Smart Parking Assist System	Version Information	
ix35(EL)	2011	General	Smart Parking Assist System	Read Fault Code	
ix35(EL)	2011	General	Smart Parking Assist System	Clear Fault Memory	
ix35(EL)	2011	General	Smart Parking Assist System	Read Data Stream	
ix35(EL)	2011	General	Smart Parking Assist System	Actuation Test	
ix35(EL)	2011	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	Alternator TEST
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	Component Change Routine
ix35(EL)	2011	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
ix35(EL)	2010	General	ECM(Engine Control Module)	Version Information	
ix35(EL)	2010	General	ECM(Engine Control Module)	Read Fault Code	
ix35(EL)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
ix35(EL)	2010	General	ECM(Engine Control Module)	Read Data Stream	
ix35(EL)	2010	General	ECM(Engine Control Module)	Read FreezeData	
ix35(EL)	2010	General	ECM(Engine Control Module)	Actuation Test	
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	CVVT Test
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
ix35(EL)	2010	General	TCM(Transmission Control Module)	Version Information	
ix35(EL)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
ix35(EL)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
ix35(EL)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
ix35(EL)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
ix35(EL)	2010	General	TCM(Transmission Control Module)	Actuation Test	
ix35(EL)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
ix35(EL)	2010	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
ix35(EL)	2010	General	ESP(Electronic Stability Program)	Version Information	
ix35(EL)	2010	General	ESP(Electronic Stability Program)	Read Fault Code	
ix35(EL)	2010	General	ESP(Electronic Stability Program)	Clear Fault Memory	
ix35(EL)	2010	General	ESP(Electronic Stability Program)	Read Data Stream	
ix35(EL)	2010	General	ESP(Electronic Stability Program)	Actuation Test	
ix35(EL)	2010	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
ix35(EL)	2010	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
ix35(EL)	2010	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
ix35(EL)	2010	General	ESP(Electronic Stability Program)	Special Function	Base Calibration(CAN-ESP Only)
ix35(EL)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
ix35(EL)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
ix35(EL)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
ix35(EL)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
ix35(EL)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
ix35(EL)	2010	General	AC(Air Conditioning)	Version Information	
ix35(EL)	2010	General	AC(Air Conditioning)	Read Fault Code	
ix35(EL)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
ix35(EL)	2010	General	AC(Air Conditioning)	Read Data Stream	
ix35(EL)	2010	General	AC(Air Conditioning)	Actuation Test	
ix35(EL)	2010	General	BCM(Body Control Module)	Version Information	
ix35(EL)	2010	General	BCM(Body Control Module)	Read Fault Code	
ix35(EL)	2010	General	BCM(Body Control Module)	Clear Fault Memory	
ix35(EL)	2010	General	BCM(Body Control Module)	Read Data Stream	
ix35(EL)	2010	General	BCM(Body Control Module)	Actuation Test	
ix35(EL)	2010	General	EPS(Electronic Power Steering)	Version Information	
ix35(EL)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
ix35(EL)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
ix35(EL)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
ix35(EL)	2010	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
ix35(EL)	2010	General	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding
ix35(EL)	2010	General	4WD Control	Version Information	
ix35(EL)	2010	General	4WD Control	Read Fault Code	
ix35(EL)	2010	General	4WD Control	Clear Fault Memory	
ix35(EL)	2010	General	4WD Control	Read Data Stream	
ix35(EL)	2010	General	4WD Control	Special Function	AWD Mode Selection
ix35(EL)	2010	General	4WD Control	Special Function	Torque Coupling Control
ix35(EL)	2010	General	TPMS(Tire Pressure Monitoring System)	Version Information	
ix35(EL)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
ix35(EL)	2010	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
ix35(EL)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
ix35(EL)	2010	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
ix35(EL)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
ix35(EL)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
ix35(EL)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
ix35(EL)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
ix35(EL)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
ix35(EL)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
ix35(EL)	2010	General	IMM(Immobilizer)	Read Data Stream	
ix35(EL)	2010	General	IMM(Immobilizer)	Special Function	Password
ix35(EL)	2010	General	IMM(Immobilizer)	Special Function	Teaching/Changing
ix35(EL)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
ix35(EL)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
ix35(EL)	2010	General	IMM(Immobilizer)	Special Function	Teaching
ix35(EL)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
ix35(EL)	2010	General	Smart Key	Version Information	
ix35(EL)	2010	General	Smart Key	Read Fault Code	
ix35(EL)	2010	General	Smart Key	Clear Fault Memory	
ix35(EL)	2010	General	Smart Key	Read Data Stream	
ix35(EL)	2010	General	Smart Key	Actuation Test	
ix35(EL)	2010	General	Smart Key	Special Function	ESCL Open Status Check
ix35(EL)	2010	General	Smart Key	Special Function	Smart Key Code Saving
ix35(EL)	2010	General	Smart Key	Special Function	Neutralization Mode
ix35(EL)	2010	General	Smart Key	Special Function	SMK Status Information
ix35(EL)	2010	General	Smart Key	Special Function	ESCL Status Information
ix35(EL)	2010	General	Smart Key	Special Function	PDM Status Information
ix35(EL)	2010	General	Smart Key	Special Function	FOB Key Status Information
ix35(EL)	2010	General	Smart Key	Special Function	Serial Communication Line Check
ix35(EL)	2010	General	Smart Key	Special Function	Antenna Status Check
ix35(EL)	2010	General	Transmitter Code Saving	Read Data Stream	
ix35(EL)	2010	General	Transmitter Code Saving	Special Function	Code Saving
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	Component Change Routine
ix35(EL)	2010	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Kona(OS)	2018	General	ECM(Engine Control Module)	Version Information	
Kona(OS)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Kona(OS)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Kona(OS)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Kona(OS)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Kona(OS)	2018	General	ECM(Engine Control Module)	Actuation Test	
Kona(OS)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Kona(OS)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Kona(OS)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Kona(OS)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Kona(OS)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Kona(OS)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Kona(OS)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Kona(OS)	2018	General	TCM(Transmission Control Module)	Version Information	
Kona(OS)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Kona(OS)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Kona(OS)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Kona(OS)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Kona(OS)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Kona(OS)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Kona(OS)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Kona(OS)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Kona(OS)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Kona(OS)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Kona(OS)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Kona(OS)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Kona(OS)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Kona(OS)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Kona(OS)	2018	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Kona(OS)	2018	General	Forward Collision-Avoidance Assist	Version Information	
Kona(OS)	2018	General	Forward Collision-Avoidance Assist	Read Fault Code	
Kona(OS)	2018	General	Forward Collision-Avoidance Assist	Clear Fault Memory	
Kona(OS)	2018	General	Forward Collision-Avoidance Assist	Read Data Stream	
Kona(OS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Kona(OS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Kona(OS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Kona(OS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Kona(OS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Kona(OS)	2018	General	AC(Air Conditioning)	Version Information	
Kona(OS)	2018	General	AC(Air Conditioning)	Read Fault Code	
Kona(OS)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Kona(OS)	2018	General	AC(Air Conditioning)	Read Data Stream	
Kona(OS)	2018	General	AC(Air Conditioning)	Actuation Test	
Kona(OS)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Kona(OS)	2018	General	BCM(Body Control Module)	Version Information	
Kona(OS)	2018	General	BCM(Body Control Module)	Read Fault Code	
Kona(OS)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Kona(OS)	2018	General	BCM(Body Control Module)	Read Data Stream	
Kona(OS)	2018	General	BCM(Body Control Module)	Actuation Test	
Kona(OS)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Kona(OS)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Kona(OS)	2018	General	BCM(Body Control Module)	Special Function	HUD Calibration
Kona(OS)	2018	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Kona(OS)	2018	General	BCM(Body Control Module)	Special Function	TPMS TEST
Kona(OS)	2018	General	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
Kona(OS)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
Kona(OS)	2018	General	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
Kona(OS)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Kona(OS)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Kona(OS)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Kona(OS)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Kona(OS)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Kona(OS)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Kona(OS)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Kona(OS)	2018	General	EPS(Electronic Power Steering)	Version Information	
Kona(OS)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Kona(OS)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Kona(OS)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Kona(OS)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Kona(OS)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Kona(OS)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Kona(OS)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Kona(OS)	2018	General	Smart Key Unit	Version Information	
Kona(OS)	2018	General	Smart Key Unit	Read Fault Code	
Kona(OS)	2018	General	Smart Key Unit	Clear Fault Memory	
Kona(OS)	2018	General	Smart Key Unit	Read Data Stream	
Kona(OS)	2018	General	Smart Key Unit	Actuation Test	
Kona(OS)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Kona(OS)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Kona(OS)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Kona(OS)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Kona(OS)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Kona(OS)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Kona(OS)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Kona(OS)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Kona(OS)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Kona(OS)	2018	General	Blind-Spot Collision Warning	Version Information	
Kona(OS)	2018	General	Blind-Spot Collision Warning	Read Fault Code	
Kona(OS)	2018	General	Blind-Spot Collision Warning	Clear Fault Memory	
Kona(OS)	2018	General	Blind-Spot Collision Warning	Read Data Stream	
Kona(OS)	2018	General	Blind-Spot Collision Warning	Actuation Test	
Kona(OS)	2018	General	Blind-Spot Collision Warning	Special Function	BSD Radar Calibration
Kona(OS)	2018	General	Lane Keeping Assist	Version Information	
Kona(OS)	2018	General	Lane Keeping Assist	Read Fault Code	
Kona(OS)	2018	General	Lane Keeping Assist	Clear Fault Memory	
Kona(OS)	2018	General	Lane Keeping Assist	Read Data Stream	
Kona(OS)	2018	General	Parking Guide System	Version Information	
Kona(OS)	2018	General	Parking Guide System	Read Fault Code	
Kona(OS)	2018	General	Parking Guide System	Clear Fault Memory	
Kona(OS)	2018	General	Parking Guide System	Read Data Stream	
Kona(OS)	2018	General	Active Air Flap	Version Information	
Kona(OS)	2018	General	Active Air Flap	Read Fault Code	
Kona(OS)	2018	General	Active Air Flap	Clear Fault Memory	
Kona(OS)	2018	General	Active Air Flap	Read Data Stream	
Kona(OS)	2018	General	Active Air Flap	Actuation Test	
Kona(OS)	2018	General	Amplifier	Special Function	AMP Operation Test
Kona(OS)	2018	General	Integrated Gateway Power Module	Version Information	
Kona(OS)	2018	General	Integrated Gateway Power Module	Read Fault Code	
Kona(OS)	2018	General	Integrated Gateway Power Module	Clear Fault Memory	

model	year	area	system	function	subfunction
Kona(OS)	2018	General	Integrated Gateway Power Module	Read Data Stream	
Kona(OS)	2018	General	Integrated Gateway Power Module	Actuation Test	
Kona(OS)	2018	General	Integrated Gateway Power Module	Special Function	Erase Network Configuration
Kona(OS)	2018	General	Integrated Gateway Power Module	Special Function	User Option
Kona(OS)	2018	General	IMM(Immobilizer)	Read Fault Code	
Kona(OS)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Kona(OS)	2018	General	IMM(Immobilizer)	Read Data Stream	
Kona(OS)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Kona(OS)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Kona(OS)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Kona(OS)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Kona(OS)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Kona(OS)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Kona(OS)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Kona(OS)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Kona(OS)	2018	General	Driveshaft	Version Information	
Kona(OS)	2018	General	Driveshaft	Read Fault Code	
Kona(OS)	2018	General	Driveshaft	Clear Fault Memory	
Kona(OS)	2018	General	Driveshaft	Read Data Stream	
Kona(OS)	2018	General	Driveshaft	Actuation Test	
Kona(OS)	2018	General	Driveshaft	Special Function	Clutch Learning Read
Kona(OS)	2018	General	Driveshaft	Special Function	Clutch Learning Reset
Kona(OS)	2018	General	Driveshaft	Special Function	Clutch Learning Write
Marcia(H1)	1998	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Marcia(H1)	1998	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Marcia(H1)	1998	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Marcia(H1)	1998	General	ECM(Engine Control Module)V6-DOHC	Read Fault Code	
Marcia(H1)	1998	General	ECM(Engine Control Module)V6-DOHC	Clear Fault Memory	
Marcia(H1)	1998	General	ECM(Engine Control Module)V6-DOHC	Read Data Stream	

model	year	area	system	function	subfunction
Marcia(H1)	1998	General	TCM(Transmission Control Module)	Read Fault Code	
Marcia(H1)	1998	General	TCM(Transmission Control Module)	Clear Fault Memory	
Marcia(H1)	1998	General	TCM(Transmission Control Module)	Read Data Stream	
Marcia(H1)	1998	General	ABS(Anti-lock Braking System)	Read Fault Code	
Marcia(H1)	1998	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Marcia(H1)	1998	General	ABS(Anti-lock Braking System)	Read Data Stream	
Marcia(H1)	1998	General	ABS(Anti-lock Braking System)	Actuation Test	
Marcia(H1)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Marcia(H1)	1998	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Marcia(H1)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Marcia(H1)	1997	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Marcia(H1)	1997	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Marcia(H1)	1997	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Marcia(H1)	1997	General	ECM(Engine Control Module)V6-DOHC	Read Fault Code	
Marcia(H1)	1997	General	ECM(Engine Control Module)V6-DOHC	Clear Fault Memory	
Marcia(H1)	1997	General	ECM(Engine Control Module)V6-DOHC	Read Data Stream	
Marcia(H1)	1997	General	TCM(Transmission Control Module)	Read Fault Code	
Marcia(H1)	1997	General	TCM(Transmission Control Module)	Clear Fault Memory	
Marcia(H1)	1997	General	TCM(Transmission Control Module)	Read Data Stream	
Marcia(H1)	1997	General	ABS(Anti-lock Braking System)	Read Fault Code	
Marcia(H1)	1997	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Marcia(H1)	1997	General	ABS(Anti-lock Braking System)	Read Data Stream	
Marcia(H1)	1997	General	ABS(Anti-lock Braking System)	Actuation Test	
Marcia(H1)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Marcia(H1)	1997	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Marcia(H1)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Marcia(H1)	1996	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Marcia(H1)	1996	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Marcia(H1)	1996	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	

model	year	area	system	function	subfunction
Marcia(H1)	1996	General	ECM(Engine Control Module)V6-DOHC	Read Fault Code	
Marcia(H1)	1996	General	ECM(Engine Control Module)V6-DOHC	Clear Fault Memory	
Marcia(H1)	1996	General	ECM(Engine Control Module)V6-DOHC	Read Data Stream	
Marcia(H1)	1996	General	TCM(Transmission Control Module)	Read Fault Code	
Marcia(H1)	1996	General	TCM(Transmission Control Module)	Clear Fault Memory	
Marcia(H1)	1996	General	TCM(Transmission Control Module)	Read Data Stream	
Marcia(H1)	1996	General	ABS(Anti-lock Braking System)	Read Fault Code	
Marcia(H1)	1996	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Marcia(H1)	1996	General	ABS(Anti-lock Braking System)	Read Data Stream	
Marcia(H1)	1996	General	ABS(Anti-lock Braking System)	Actuation Test	
Marcia(H1)	1996	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Marcia(H1)	1996	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Marcia(H1)	1996	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Matrix(FC)	2011	General	ECM(Engine Control Module)	Version Information	
Matrix(FC)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Matrix(FC)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Matrix(FC)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Matrix(FC)	2011	General	ECM(Engine Control Module)	Actuation Test	
Matrix(FC)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Matrix(FC)	2011	General	ECM(Engine Control Module)	Special Function	Auto Detected
Matrix(FC)	2011	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Matrix(FC)	2011	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Matrix(FC)	2011	General	ECM(Engine Control Module)	Special Function	Ignition Test
Matrix(FC)	2011	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Matrix(FC)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Matrix(FC)	2011	General	TCM(Transmission Control Module)	Version Information	
Matrix(FC)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Matrix(FC)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Matrix(FC)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Matrix(FC)	2011	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Matrix(FC)	2011	General	ABS(Anti-lock Braking System)	Version Information	
Matrix(FC)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Matrix(FC)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Matrix(FC)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Matrix(FC)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Matrix(FC)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Matrix(FC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Matrix(FC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Matrix(FC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Matrix(FC)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Matrix(FC)	2011	General	AC(Air Conditioning)	Version Information	
Matrix(FC)	2011	General	AC(Air Conditioning)	Read Fault Code	
Matrix(FC)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Matrix(FC)	2011	General	AC(Air Conditioning)	Read Data Stream	
Matrix(FC)	2011	General	AC(Air Conditioning)	Actuation Test	
Matrix(FC)	2011	General	IMM(Immobilizer)	Read Data Stream	
Matrix(FC)	2011	General	IMM(Immobilizer)	Special Function	Password
Matrix(FC)	2011	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Matrix(FC)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Matrix(FC)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Matrix(FC)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Matrix(FC)	2011	General	Transmitter Code Saving	Special Function	Code Saving
Matrix(FC)	2011	General	ECM(Engine Control Module)	Read FreezeData	
Matrix(FC)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Matrix(FC)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Matrix(FC)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Matrix(FC)	2010	General	ECM(Engine Control Module)	Version Information	
Matrix(FC)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Matrix(FC)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Matrix(FC)	2010	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Matrix(FC)	2010	General	ECM(Engine Control Module)	Actuation Test	
Matrix(FC)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Matrix(FC)	2010	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Matrix(FC)	2010	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Matrix(FC)	2010	General	ECM(Engine Control Module)	Special Function	Ignition Test
Matrix(FC)	2010	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Matrix(FC)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Matrix(FC)	2010	General	TCM(Transmission Control Module)	Version Information	
Matrix(FC)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Matrix(FC)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Matrix(FC)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Matrix(FC)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Matrix(FC)	2010	General	ABS(Anti-lock Braking System)	Version Information	
Matrix(FC)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
Matrix(FC)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Matrix(FC)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
Matrix(FC)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
Matrix(FC)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Matrix(FC)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Matrix(FC)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Matrix(FC)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Matrix(FC)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Matrix(FC)	2010	General	AC(Air Conditioning)	Version Information	
Matrix(FC)	2010	General	AC(Air Conditioning)	Read Fault Code	
Matrix(FC)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
Matrix(FC)	2010	General	AC(Air Conditioning)	Read Data Stream	
Matrix(FC)	2010	General	AC(Air Conditioning)	Actuation Test	
Matrix(FC)	2010	General	IMM(Immobilizer)	Read Data Stream	
Matrix(FC)	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping

model	year	area	system	function	subfunction
Matrix(FC)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Matrix(FC)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Matrix(FC)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Matrix(FC)	2010	General	Transmitter Code Saving	Special Function	Code Saving
Matrix(FC)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Matrix(FC)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Matrix(FC)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Matrix(FC)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Matrix(FC)	2009	General	ECM(Engine Control Module)	Version Information	
Matrix(FC)	2009	General	ECM(Engine Control Module)	Read Fault Code	
Matrix(FC)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Matrix(FC)	2009	General	ECM(Engine Control Module)	Read Data Stream	
Matrix(FC)	2009	General	ECM(Engine Control Module)	Actuation Test	
Matrix(FC)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Matrix(FC)	2009	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Matrix(FC)	2009	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Matrix(FC)	2009	General	ECM(Engine Control Module)	Special Function	Ignition Test
Matrix(FC)	2009	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Matrix(FC)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Matrix(FC)	2009	General	TCM(Transmission Control Module)	Version Information	
Matrix(FC)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Matrix(FC)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Matrix(FC)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Matrix(FC)	2009	General	TCM(Transmission Control Module)	Actuation Test	
Matrix(FC)	2009	General	ABS(Anti-lock Braking System)	Version Information	
Matrix(FC)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
Matrix(FC)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Matrix(FC)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
Matrix(FC)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Matrix(FC)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Matrix(FC)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Matrix(FC)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Matrix(FC)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Matrix(FC)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Matrix(FC)	2009	General	AC(Air Conditioning)	Version Information	
Matrix(FC)	2009	General	AC(Air Conditioning)	Read Fault Code	
Matrix(FC)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
Matrix(FC)	2009	General	AC(Air Conditioning)	Read Data Stream	
Matrix(FC)	2009	General	AC(Air Conditioning)	Actuation Test	
Matrix(FC)	2009	General	IMM(Immobilizer)	Read Data Stream	
Matrix(FC)	2009	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Matrix(FC)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Matrix(FC)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Matrix(FC)	2009	General	IMM(Immobilizer)	Special Function	Teaching
Matrix(FC)	2009	General	Transmitter Code Saving	Special Function	Code Saving
Matrix(FC)	2009	General	ECM(Engine Control Module)	Read FreezeData	
Matrix(FC)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Matrix(FC)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Matrix(FC)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Matrix(FC)	2008	General	ECM(Engine Control Module)	Version Information	
Matrix(FC)	2008	General	ECM(Engine Control Module)	Read Fault Code	
Matrix(FC)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
Matrix(FC)	2008	General	ECM(Engine Control Module)	Read Data Stream	
Matrix(FC)	2008	General	ECM(Engine Control Module)	Actuation Test	
Matrix(FC)	2008	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Matrix(FC)	2008	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Matrix(FC)	2008	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Matrix(FC)	2008	General	ECM(Engine Control Module)	Special Function	Ignition Test

model	year	area	system	function	subfunction
Matrix(FC)	2008	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Matrix(FC)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Matrix(FC)	2008	General	TCM(Transmission Control Module)	Version Information	
Matrix(FC)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
Matrix(FC)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
Matrix(FC)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
Matrix(FC)	2008	General	TCM(Transmission Control Module)	Actuation Test	
Matrix(FC)	2008	General	ABS(Anti-lock Braking System)	Version Information	
Matrix(FC)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
Matrix(FC)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Matrix(FC)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
Matrix(FC)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
Matrix(FC)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Matrix(FC)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Matrix(FC)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Matrix(FC)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Matrix(FC)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Matrix(FC)	2008	General	AC(Air Conditioning)	Version Information	
Matrix(FC)	2008	General	AC(Air Conditioning)	Read Fault Code	
Matrix(FC)	2008	General	AC(Air Conditioning)	Clear Fault Memory	
Matrix(FC)	2008	General	AC(Air Conditioning)	Read Data Stream	
Matrix(FC)	2008	General	AC(Air Conditioning)	Actuation Test	
Matrix(FC)	2008	General	IMM(Immobilizer)	Read Data Stream	
Matrix(FC)	2008	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Matrix(FC)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Matrix(FC)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Matrix(FC)	2008	General	IMM(Immobilizer)	Special Function	Teaching
Matrix(FC)	2008	General	Transmitter Code Saving	Special Function	Code Saving
Matrix(FC)	2008	General	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Matrix(FC)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Matrix(FC)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Matrix(FC)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Matrix(FC)	2007	General	ECM(Engine Control Module)	Version Information	
Matrix(FC)	2007	General	ECM(Engine Control Module)	Read Fault Code	
Matrix(FC)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Matrix(FC)	2007	General	ECM(Engine Control Module)	Read Data Stream	
Matrix(FC)	2007	General	ECM(Engine Control Module)	Actuation Test	
Matrix(FC)	2007	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Matrix(FC)	2007	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Matrix(FC)	2007	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Matrix(FC)	2007	General	ECM(Engine Control Module)	Special Function	Ignition Test
Matrix(FC)	2007	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Matrix(FC)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Matrix(FC)	2007	General	TCM(Transmission Control Module)	Version Information	
Matrix(FC)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Matrix(FC)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Matrix(FC)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Matrix(FC)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Matrix(FC)	2007	General	ABS(Anti-lock Braking System)	Version Information	
Matrix(FC)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Matrix(FC)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Matrix(FC)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Matrix(FC)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Matrix(FC)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Matrix(FC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Matrix(FC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Matrix(FC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Matrix(FC)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Matrix(FC)	2007	General	AC(Air Conditioning)	Version Information	
Matrix(FC)	2007	General	AC(Air Conditioning)	Read Fault Code	
Matrix(FC)	2007	General	AC(Air Conditioning)	Clear Fault Memory	
Matrix(FC)	2007	General	AC(Air Conditioning)	Read Data Stream	
Matrix(FC)	2007	General	AC(Air Conditioning)	Actuation Test	
Matrix(FC)	2007	General	IMM(Immobilizer)	Read Data Stream	
Matrix(FC)	2007	General	IMM(Immobilizer)	Special Function	Password
Matrix(FC)	2007	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Matrix(FC)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Matrix(FC)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Matrix(FC)	2007	General	IMM(Immobilizer)	Special Function	Teaching
Matrix(FC)	2007	General	Transmitter Code Saving	Special Function	Code Saving
Matrix(FC)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Matrix(FC)	2007	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Matrix(FC)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Matrix(FC)	2007	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Matrix(FC)	2006	General	ECM(Engine Control Module)	Version Information	
Matrix(FC)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Matrix(FC)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Matrix(FC)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Matrix(FC)	2006	General	ECM(Engine Control Module)	Actuation Test	
Matrix(FC)	2006	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Matrix(FC)	2006	General	ECM(Engine Control Module)	Special Function	Auto Detected
Matrix(FC)	2006	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Matrix(FC)	2006	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Matrix(FC)	2006	General	ECM(Engine Control Module)	Special Function	Ignition Test
Matrix(FC)	2006	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Matrix(FC)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Matrix(FC)	2006	General	TCM(Transmission Control Module)	Version Information	
Matrix(FC)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Matrix(FC)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Matrix(FC)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Matrix(FC)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Matrix(FC)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Matrix(FC)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Matrix(FC)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Matrix(FC)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Matrix(FC)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Matrix(FC)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Matrix(FC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Matrix(FC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Matrix(FC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Matrix(FC)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Matrix(FC)	2006	General	IMM(Immobilizer)	Read Data Stream	
Matrix(FC)	2006	General	IMM(Immobilizer)	Special Function	Password
Matrix(FC)	2006	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Matrix(FC)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Matrix(FC)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Matrix(FC)	2006	General	IMM(Immobilizer)	Special Function	Teaching
Matrix(FC)	2006	General	Transmitter Code Saving	Special Function	Code Saving
Matrix(FC)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Matrix(FC)	2006	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Matrix(FC)	2006	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Matrix(FC)	2005	General	ECM(Engine Control Module)	Version Information	
Matrix(FC)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Matrix(FC)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
Matrix(FC)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Matrix(FC)	2005	General	ECM(Engine Control Module)	Actuation Test	
Matrix(FC)	2005	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Matrix(FC)	2005	General	ECM(Engine Control Module)	Special Function	Auto Detected
Matrix(FC)	2005	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Matrix(FC)	2005	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test

model	year	area	system	function	subfunction
Matrix(FC)	2005	General	ECM(Engine Control Module)	Special Function	Ignition Test
Matrix(FC)	2005	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Matrix(FC)	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Matrix(FC)	2005	General	TCM(Transmission Control Module)	Version Information	
Matrix(FC)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Matrix(FC)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Matrix(FC)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Matrix(FC)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Matrix(FC)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Matrix(FC)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Matrix(FC)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Matrix(FC)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Matrix(FC)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Matrix(FC)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Matrix(FC)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Matrix(FC)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Matrix(FC)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Matrix(FC)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Matrix(FC)	2005	General	IMM(Immobilizer)	Read Data Stream	
Matrix(FC)	2005	General	IMM(Immobilizer)	Special Function	Password
Matrix(FC)	2005	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Matrix(FC)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Matrix(FC)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Matrix(FC)	2005	General	IMM(Immobilizer)	Special Function	Teaching
Matrix(FC)	2005	General	Transmitter Code Saving	Special Function	Code Saving
Matrix(FC)	2005	General	ECM(Engine Control Module)	Read FreezeData	
Matrix(FC)	2005	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Matrix(FC)	2005	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Matrix(FC)	2004	General	ECM(Engine Control Module)	Version Information	
Matrix(FC)	2004	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Matrix(FC)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Matrix(FC)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Matrix(FC)	2004	General	ECM(Engine Control Module)	Actuation Test	
Matrix(FC)	2004	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Matrix(FC)	2004	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Matrix(FC)	2004	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Matrix(FC)	2004	General	ECM(Engine Control Module)	Special Function	Ignition Test
Matrix(FC)	2004	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Matrix(FC)	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Matrix(FC)	2004	General	TCM(Transmission Control Module)	Version Information	
Matrix(FC)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Matrix(FC)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Matrix(FC)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Matrix(FC)	2004	General	TCM(Transmission Control Module)	Actuation Test	
Matrix(FC)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Matrix(FC)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Matrix(FC)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Matrix(FC)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Matrix(FC)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Matrix(FC)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Matrix(FC)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Matrix(FC)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Matrix(FC)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Matrix(FC)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Matrix(FC)	2004	General	IMM(Immobilizer)	Read Data Stream	
Matrix(FC)	2004	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Matrix(FC)	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Matrix(FC)	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Matrix(FC)	2004	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Matrix(FC)	2004	General	Transmitter Code Saving	Special Function	Code Saving
Matrix(FC)	2004	General	ECM(Engine Control Module)	Read FreezeData	
Matrix(FC)	2004	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Matrix(FC)	2003	General	ECM(Engine Control Module)	Version Information	
Matrix(FC)	2003	General	ECM(Engine Control Module)	Read Fault Code	
Matrix(FC)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Matrix(FC)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Matrix(FC)	2003	General	ECM(Engine Control Module)	Actuation Test	
Matrix(FC)	2003	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Matrix(FC)	2003	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Matrix(FC)	2003	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Matrix(FC)	2003	General	ECM(Engine Control Module)	Special Function	Ignition Test
Matrix(FC)	2003	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Matrix(FC)	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Matrix(FC)	2003	General	TCM(Transmission Control Module)	Version Information	
Matrix(FC)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Matrix(FC)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Matrix(FC)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Matrix(FC)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Matrix(FC)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Matrix(FC)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Matrix(FC)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Matrix(FC)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Matrix(FC)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Matrix(FC)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Matrix(FC)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Matrix(FC)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Matrix(FC)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Matrix(FC)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Matrix(FC)	2003	General	IMM(Immobilizer)	Read Data Stream	
Matrix(FC)	2003	General	IMM(Immobilizer)	Special Function	Password
Matrix(FC)	2003	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Matrix(FC)	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Matrix(FC)	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Matrix(FC)	2003	General	IMM(Immobilizer)	Special Function	Teaching
Matrix(FC)	2003	General	Transmitter Code Saving	Special Function	Code Saving
Matrix(FC)	2003	General	ECM(Engine Control Module)	Read FreezeData	
Matrix(FC)	2003	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Matrix(FC)	2002	General	ECM(Engine Control Module)	Version Information	
Matrix(FC)	2002	General	ECM(Engine Control Module)	Read Fault Code	
Matrix(FC)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
Matrix(FC)	2002	General	ECM(Engine Control Module)	Read Data Stream	
Matrix(FC)	2002	General	ECM(Engine Control Module)	Actuation Test	
Matrix(FC)	2002	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Matrix(FC)	2002	General	ECM(Engine Control Module)	Special Function	Auto Detected
Matrix(FC)	2002	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Matrix(FC)	2002	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Matrix(FC)	2002	General	ECM(Engine Control Module)	Special Function	Ignition Test
Matrix(FC)	2002	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Matrix(FC)	2002	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Matrix(FC)	2002	General	TCM(Transmission Control Module)	Version Information	
Matrix(FC)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
Matrix(FC)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Matrix(FC)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
Matrix(FC)	2002	General	TCM(Transmission Control Module)	Actuation Test	
Matrix(FC)	2002	General	ABS(Anti-lock Braking System)	Version Information	
Matrix(FC)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Matrix(FC)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Matrix(FC)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Matrix(FC)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Matrix(FC)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Matrix(FC)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Matrix(FC)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Matrix(FC)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Matrix(FC)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Matrix(FC)	2002	General	IMM(Immobilizer)	Read Data Stream	
Matrix(FC)	2002	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Matrix(FC)	2002	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Matrix(FC)	2002	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Matrix(FC)	2002	General	IMM(Immobilizer)	Special Function	Teaching
Matrix(FC)	2002	General	Transmitter Code Saving	Special Function	Code Saving
Matrix(FC)	2002	General	ECM(Engine Control Module)	Read FreezeData	
Matrix(FC)	2002	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe Sport(DMA)	2018	General	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2018	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe Sport(DMA)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2018	General	Electric Parking Brake	Version Information	
Santafe Sport(DMA)	2018	General	Electric Parking Brake	Read Fault Code	
Santafe Sport(DMA)	2018	General	Electric Parking Brake	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	Electric Parking Brake	Read Data Stream	
Santafe Sport(DMA)	2018	General	Electric Parking Brake	Actuation Test	
Santafe Sport(DMA)	2018	General	Electric Parking Brake	Special Function	EPB Variant Coding
Santafe Sport(DMA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe Sport(DMA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe Sport(DMA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Santafe Sport(DMA)	2018	General	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2018	General	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2018	General	AC(Air Conditioning)	Actuation Test	
Santafe Sport(DMA)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe Sport(DMA)	2018	General	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2018	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	BCM(Body Control Module)	Read Data Stream	
Santafe Sport(DMA)	2018	General	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2018	General	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe Sport(DMA)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2018	General	Power Tail Gate	Version Information	
Santafe Sport(DMA)	2018	General	Power Tail Gate	Read Fault Code	
Santafe Sport(DMA)	2018	General	Power Tail Gate	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	Power Tail Gate	Read Data Stream	
Santafe Sport(DMA)	2018	General	Power Tail Gate	Special Function	Power Tailgate Mode Configuration
Santafe Sport(DMA)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe Sport(DMA)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe Sport(DMA)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe Sport(DMA)	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe Sport(DMA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe Sport(DMA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe Sport(DMA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe Sport(DMA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe Sport(DMA)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe Sport(DMA)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe Sport(DMA)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe Sport(DMA)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe Sport(DMA)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe Sport(DMA)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe Sport(DMA)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe Sport(DMA)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2018	General	EPS(Electronic Power Steering)	Version Information	
Santafe Sport(DMA)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe Sport(DMA)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe Sport(DMA)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe Sport(DMA)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe Sport(DMA)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2018	General	Driveshaft	Version Information	
Santafe Sport(DMA)	2018	General	Driveshaft	Read Fault Code	
Santafe Sport(DMA)	2018	General	Driveshaft	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	Driveshaft	Read Data Stream	
Santafe Sport(DMA)	2018	General	Driveshaft	Actuation Test	
Santafe Sport(DMA)	2018	General	Driveshaft	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2018	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2018	General	Driveshaft	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2018	General	Smart Key Unit	Version Information	
Santafe Sport(DMA)	2018	General	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2018	General	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2018	General	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe Sport(DMA)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe Sport(DMA)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2018	General	Smart Cruise Control	Version Information	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2018	General	Smart Cruise Control	Read Fault Code	
Santafe Sport(DMA)	2018	General	Smart Cruise Control	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	Smart Cruise Control	Read Data Stream	
Santafe Sport(DMA)	2018	General	Smart Cruise Control	Special Function	Radar Sensor
Santafe Sport(DMA)	2018	General	Smart Cruise Control	Special Function	Alignment(SCC/AEB) Variant Coding
Santafe Sport(DMA)	2018	General	Blind Spot Detection	Version Information	
Santafe Sport(DMA)	2018	General	Blind Spot Detection	Read Fault Code	
Santafe Sport(DMA)	2018	General	Blind Spot Detection	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	Blind Spot Detection	Read Data Stream	
Santafe Sport(DMA)	2018	General	Blind Spot Detection	Actuation Test	
Santafe Sport(DMA)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe Sport(DMA)	2018	General	Lane Departure Warning System	Version Information	
Santafe Sport(DMA)	2018	General	Lane Departure Warning System	Read Fault Code	
Santafe Sport(DMA)	2018	General	Lane Departure Warning System	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	Lane Departure Warning System	Read Data Stream	
Santafe Sport(DMA)	2018	General	Lane Departure Warning System	Special Function	SPC Calibration
Santafe Sport(DMA)	2018	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Santafe Sport(DMA)	2018	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Santafe Sport(DMA)	2018	General	Multi-View Camera System	Version Information	
Santafe Sport(DMA)	2018	General	Multi-View Camera System	Read Fault Code	
Santafe Sport(DMA)	2018	General	Multi-View Camera System	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	Multi-View Camera System	Read Data Stream	
Santafe Sport(DMA)	2018	General	Multi-View Camera System	Actuation Test	
Santafe Sport(DMA)	2018	General	IMM(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe Sport(DMA)	2018	General	IMM(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Santafe Sport(DMA)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Santafe Sport(DMA)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe Sport(DMA)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe Sport(DMA)	2017	General	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe Sport(DMA)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe Sport(DMA)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2017	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe Sport(DMA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe Sport(DMA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Santafe Sport(DMA)	2017	General	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2017	General	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2017	General	AC(Air Conditioning)	Actuation Test	
Santafe Sport(DMA)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Santafe Sport(DMA)	2017	General	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2017	General	BCM(Body Control Module)	Read Fault Code	
Santafe Sport(DMA)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	BCM(Body Control Module)	Read Data Stream	
Santafe Sport(DMA)	2017	General	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2017	General	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe Sport(DMA)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2017	General	BCM(Body Control Module)	Special Function	Power Targate mode Configuration
Santafe Sport(DMA)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe Sport(DMA)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe Sport(DMA)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe Sport(DMA)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe Sport(DMA)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe Sport(DMA)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe Sport(DMA)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe Sport(DMA)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe Sport(DMA)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe Sport(DMA)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe Sport(DMA)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe Sport(DMA)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe Sport(DMA)	2017	General	EPS(Electronic Power Steering)	Version Information	
Santafe Sport(DMA)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe Sport(DMA)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe Sport(DMA)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe Sport(DMA)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe Sport(DMA)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2017	General	Driveshaft	Version Information	
Santafe Sport(DMA)	2017	General	Driveshaft	Read Fault Code	
Santafe Sport(DMA)	2017	General	Driveshaft	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	Driveshaft	Read Data Stream	
Santafe Sport(DMA)	2017	General	Driveshaft	Actuation Test	
Santafe Sport(DMA)	2017	General	Driveshaft	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2017	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2017	General	Driveshaft	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2017	General	Smart Key Unit	Version Information	
Santafe Sport(DMA)	2017	General	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2017	General	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2017	General	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe Sport(DMA)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2017	General	Blind Spot Detection	Version Information	
Santafe Sport(DMA)	2017	General	Blind Spot Detection	Read Fault Code	
Santafe Sport(DMA)	2017	General	Blind Spot Detection	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	Blind Spot Detection	Read Data Stream	
Santafe Sport(DMA)	2017	General	Blind Spot Detection	Actuation Test	
Santafe Sport(DMA)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe Sport(DMA)	2017	General	Lane Departure Warning System	Version Information	
Santafe Sport(DMA)	2017	General	Lane Departure Warning System	Read Fault Code	
Santafe Sport(DMA)	2017	General	Lane Departure Warning System	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	Lane Departure Warning System	Read Data Stream	
Santafe Sport(DMA)	2017	General	Lane Departure Warning System	Special Function	SPC Calibration
Santafe Sport(DMA)	2017	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Santafe Sport(DMA)	2017	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Santafe Sport(DMA)	2017	General	Multi-View Camera System	Version Information	
Santafe Sport(DMA)	2017	General	Multi-View Camera System	Read Fault Code	
Santafe Sport(DMA)	2017	General	Multi-View Camera System	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	Multi-View Camera System	Read Data Stream	
Santafe Sport(DMA)	2017	General	Multi-View Camera System	Actuation Test	
Santafe Sport(DMA)	2017	General	Smart Cruise Control	Version Information	
Santafe Sport(DMA)	2017	General	Smart Cruise Control	Read Fault Code	
Santafe Sport(DMA)	2017	General	Smart Cruise Control	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	Smart Cruise Control	Read Data Stream	
Santafe Sport(DMA)	2017	General	Smart Cruise Control	Special Function	Radar Sensor Alignment(SCC/AFD)
Santafe Sport(DMA)	2017	General	Smart Cruise Control	Special Function	Variant Coding

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2017	General	IMM(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe Sport(DMA)	2017	General	IMM(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2017	General	IMM(Immobilizer)	Special Function	Password
Santafe Sport(DMA)	2017	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Santafe Sport(DMA)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe Sport(DMA)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe Sport(DMA)	2016	General	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe Sport(DMA)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe Sport(DMA)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe Sport(DMA)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe Sport(DMA)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe Sport(DMA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Configuration
Santafe Sport(DMA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Base Configuration(CAN-LSP Only)
Santafe Sport(DMA)	2016	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe Sport(DMA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe Sport(DMA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe Sport(DMA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe Sport(DMA)	2016	General	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2016	General	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2016	General	AC(Air Conditioning)	Actuation Test	
Santafe Sport(DMA)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe Sport(DMA)	2016	General	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2016	General	BCM(Body Control Module)	Read Fault Code	
Santafe Sport(DMA)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2016	General	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2016	General	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe Sport(DMA)	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2016	General	BCM(Body Control Module)	Special Function	Power Targate mode Configuration
Santafe Sport(DMA)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe Sport(DMA)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe Sport(DMA)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe Sport(DMA)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe Sport(DMA)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe Sport(DMA)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe Sport(DMA)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe Sport(DMA)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe Sport(DMA)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe Sport(DMA)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe Sport(DMA)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe Sport(DMA)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe Sport(DMA)	2016	General	EPS(Electronic Power Steering)	Version Information	
Santafe Sport(DMA)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe Sport(DMA)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe Sport(DMA)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe Sport(DMA)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe Sport(DMA)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2016	General	Driveshaft	Version Information	
Santafe Sport(DMA)	2016	General	Driveshaft	Read Fault Code	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2016	General	Driveshaft	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	Driveshaft	Read Data Stream	
Santafe Sport(DMA)	2016	General	Driveshaft	Actuation Test	
Santafe Sport(DMA)	2016	General	Driveshaft	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2016	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2016	General	Driveshaft	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2016	General	Smart Key Unit	Version Information	
Santafe Sport(DMA)	2016	General	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2016	General	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2016	General	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe Sport(DMA)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe Sport(DMA)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2016	General	Blind Spot Detection	Version Information	
Santafe Sport(DMA)	2016	General	Blind Spot Detection	Read Fault Code	
Santafe Sport(DMA)	2016	General	Blind Spot Detection	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	Blind Spot Detection	Read Data Stream	
Santafe Sport(DMA)	2016	General	Blind Spot Detection	Actuation Test	
Santafe Sport(DMA)	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe Sport(DMA)	2016	General	Telematics Unit	Version Information	
Santafe Sport(DMA)	2016	General	Telematics Unit	Read Fault Code	
Santafe Sport(DMA)	2016	General	Telematics Unit	Clear Fault Memory	
Santafe Sport(DMA)	2016	General	IMM(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2016	General	IMM(Immobilizer)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2016	General	IMM(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2016	General	IMM(Immobilizer)	Special Function	Password
Santafe Sport(DMA)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Santafe Sport(DMA)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe Sport(DMA)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Santafe Sport(DMA)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe Sport(DMA)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe Sport(DMA)	2015	General	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe Sport(DMA)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe Sport(DMA)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe Sport(DMA)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe Sport(DMA)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe Sport(DMA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Configuration
Santafe Sport(DMA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Base Configuration(CAN-LSP Only)
Santafe Sport(DMA)	2015	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe Sport(DMA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe Sport(DMA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe Sport(DMA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe Sport(DMA)	2015	General	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2015	General	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2015	General	AC(Air Conditioning)	Actuation Test	
Santafe Sport(DMA)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe Sport(DMA)	2015	General	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2015	General	BCM(Body Control Module)	Read Fault Code	
Santafe Sport(DMA)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2015	General	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2015	General	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2015	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe Sport(DMA)	2015	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2015	General	BCM(Body Control Module)	Special Function	Power Tailgate mode Configuration
Santafe Sport(DMA)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe Sport(DMA)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe Sport(DMA)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe Sport(DMA)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe Sport(DMA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe Sport(DMA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe Sport(DMA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe Sport(DMA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe Sport(DMA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe Sport(DMA)	2015	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe Sport(DMA)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe Sport(DMA)	2015	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe Sport(DMA)	2015	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe Sport(DMA)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe Sport(DMA)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe Sport(DMA)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe Sport(DMA)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe Sport(DMA)	2015	General	EPS(Electronic Power Steering)	Version Information	
Santafe Sport(DMA)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe Sport(DMA)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe Sport(DMA)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe Sport(DMA)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2015	General	Driveshaft	Version Information	
Santafe Sport(DMA)	2015	General	Driveshaft	Read Fault Code	
Santafe Sport(DMA)	2015	General	Driveshaft	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	Driveshaft	Read Data Stream	
Santafe Sport(DMA)	2015	General	Driveshaft	Actuation Test	
Santafe Sport(DMA)	2015	General	Driveshaft	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2015	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2015	General	Driveshaft	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2015	General	Smart Key Unit	Version Information	
Santafe Sport(DMA)	2015	General	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2015	General	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2015	General	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe Sport(DMA)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe Sport(DMA)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2015	General	Blind Spot Detection	Version Information	
Santafe Sport(DMA)	2015	General	Blind Spot Detection	Read Fault Code	
Santafe Sport(DMA)	2015	General	Blind Spot Detection	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	Blind Spot Detection	Read Data Stream	
Santafe Sport(DMA)	2015	General	Blind Spot Detection	Actuation Test	
Santafe Sport(DMA)	2015	General	Blind Spot Detection	Special Function	BSD Radar Calibration

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2015	General	Telematics Unit	Version Information	
Santafe Sport(DMA)	2015	General	Telematics Unit	Read Fault Code	
Santafe Sport(DMA)	2015	General	Telematics Unit	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	IMM(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe Sport(DMA)	2015	General	IMM(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe Sport(DMA)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe Sport(DMA)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Santafe Sport(DMA)	2015	General	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe Sport(DMA)	2015	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe Sport(DMA)	2014	General	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2014	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe Sport(DMA)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe Sport(DMA)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe Sport(DMA)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe Sport(DMA)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe Sport(DMA)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Santafe Sport(DMA)	2014	General	ABS(Anti-lock Braking System)	Special Function	Base Configuration(CAN-ESP Only)
Santafe Sport(DMA)	2014	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe Sport(DMA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe Sport(DMA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe Sport(DMA)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe Sport(DMA)	2014	General	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2014	General	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2014	General	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe Sport(DMA)	2014	General	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2014	General	BCM(Body Control Module)	Read Fault Code	
Santafe Sport(DMA)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	BCM(Body Control Module)	Read Data Stream	
Santafe Sport(DMA)	2014	General	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2014	General	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2014	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe Sport(DMA)	2014	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2014	General	BCM(Body Control Module)	Special Function	Power Targate mode Configuration
Santafe Sport(DMA)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe Sport(DMA)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe Sport(DMA)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe Sport(DMA)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe Sport(DMA)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe Sport(DMA)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe Sport(DMA)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe Sport(DMA)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe Sport(DMA)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe Sport(DMA)	2014	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe Sport(DMA)	2014	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe Sport(DMA)	2014	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe Sport(DMA)	2014	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe Sport(DMA)	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe Sport(DMA)	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe Sport(DMA)	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe Sport(DMA)	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2014	General	EPS(Electronic Power Steering)	Version Information	
Santafe Sport(DMA)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe Sport(DMA)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe Sport(DMA)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe Sport(DMA)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe Sport(DMA)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2014	General	Driveshaft	Version Information	
Santafe Sport(DMA)	2014	General	Driveshaft	Read Fault Code	
Santafe Sport(DMA)	2014	General	Driveshaft	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	Driveshaft	Read Data Stream	
Santafe Sport(DMA)	2014	General	Driveshaft	Actuation Test	
Santafe Sport(DMA)	2014	General	Driveshaft	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2014	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2014	General	Driveshaft	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2014	General	Smart Key Unit	Version Information	
Santafe Sport(DMA)	2014	General	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2014	General	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2014	General	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe Sport(DMA)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe Sport(DMA)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2014	General	Blind Spot Detection	Version Information	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2014	General	Blind Spot Detection	Read Fault Code	
Santafe Sport(DMA)	2014	General	Blind Spot Detection	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	Blind Spot Detection	Read Data Stream	
Santafe Sport(DMA)	2014	General	Blind Spot Detection	Actuation Test	
Santafe Sport(DMA)	2014	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe Sport(DMA)	2014	General	Telematics Unit	Version Information	
Santafe Sport(DMA)	2014	General	Telematics Unit	Read Fault Code	
Santafe Sport(DMA)	2014	General	Telematics Unit	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	IMM(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe Sport(DMA)	2014	General	IMM(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe Sport(DMA)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe Sport(DMA)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Santafe Sport(DMA)	2014	General	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe Sport(DMA)	2014	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Special Function	CVT Test

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe Sport(DMA)	2013	General	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe Sport(DMA)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe Sport(DMA)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe Sport(DMA)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe Sport(DMA)	2013	General	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe Sport(DMA)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode Auto Detected
Santafe Sport(DMA)	2013	General	ABS(Anti-lock Braking System)	Special Function	Configuration Base Calibration(CAN-LSP Only)
Santafe Sport(DMA)	2013	General	ABS(Anti-lock Braking System)	Special Function	Base Calibration(CAN-LSP Only)
Santafe Sport(DMA)	2013	General	Electric Parking Brake	Version Information	
Santafe Sport(DMA)	2013	General	Electric Parking Brake	Read Fault Code	
Santafe Sport(DMA)	2013	General	Electric Parking Brake	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	Electric Parking Brake	Read Data Stream	
Santafe Sport(DMA)	2013	General	Electric Parking Brake	Actuation Test	
Santafe Sport(DMA)	2013	General	Electric Parking Brake	Special Function	EPB Variant Coding
Santafe Sport(DMA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe Sport(DMA)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe Sport(DMA)	2013	General	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2013	General	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2013	General	AC(Air Conditioning)	Actuation Test	
Santafe Sport(DMA)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe Sport(DMA)	2013	General	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2013	General	BCM(Body Control Module)	Read Fault Code	
Santafe Sport(DMA)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	BCM(Body Control Module)	Read Data Stream	
Santafe Sport(DMA)	2013	General	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2013	General	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2013	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe Sport(DMA)	2013	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2013	General	Power Tail Gate	Version Information	
Santafe Sport(DMA)	2013	General	Power Tail Gate	Read Fault Code	
Santafe Sport(DMA)	2013	General	Power Tail Gate	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	Power Tail Gate	Read Data Stream	
Santafe Sport(DMA)	2013	General	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Santafe Sport(DMA)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe Sport(DMA)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe Sport(DMA)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe Sport(DMA)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe Sport(DMA)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe Sport(DMA)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe Sport(DMA)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe Sport(DMA)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe Sport(DMA)	2013	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe Sport(DMA)	2013	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe Sport(DMA)	2013	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe Sport(DMA)	2013	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe Sport(DMA)	2013	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe Sport(DMA)	2013	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe Sport(DMA)	2013	General	EPS(Electronic Power Steering)	Version Information	
Santafe Sport(DMA)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe Sport(DMA)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe Sport(DMA)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe Sport(DMA)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe Sport(DMA)	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2013	General	Driveshaft	Version Information	
Santafe Sport(DMA)	2013	General	Driveshaft	Read Fault Code	
Santafe Sport(DMA)	2013	General	Driveshaft	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	Driveshaft	Read Data Stream	
Santafe Sport(DMA)	2013	General	Driveshaft	Actuation Test	
Santafe Sport(DMA)	2013	General	Driveshaft	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2013	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2013	General	Driveshaft	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2013	General	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2013	General	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2013	General	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2013	General	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2013	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe Sport(DMA)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe Sport(DMA)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2013	General	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2013	General	Blind Spot Detection	Version Information	
Santafe Sport(DMA)	2013	General	Blind Spot Detection	Read Fault Code	
Santafe Sport(DMA)	2013	General	Blind Spot Detection	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	Blind Spot Detection	Read Data Stream	
Santafe Sport(DMA)	2013	General	Blind Spot Detection	Actuation Test	
Santafe Sport(DMA)	2013	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe Sport(DMA)	2013	General	Telematics Unit	Version Information	
Santafe Sport(DMA)	2013	General	Telematics Unit	Read Fault Code	
Santafe Sport(DMA)	2013	General	Telematics Unit	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	IMM(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2013	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe Sport(DMA)	2013	General	IMM(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe Sport(DMA)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe Sport(DMA)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Santafe Sport(DMA)	2013	General	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe Sport(DMA)	2013	General	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
Santafe(CM)	2013	General	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2013	General	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(CM)	2013	General	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(CM)	2013	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2013	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Santafe(CM)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode Auto Detected
Santafe(CM)	2013	General	ABS(Anti-lock Braking System)	Special Function	Configuration Reset(FSP/FSC)Only
Santafe(CM)	2013	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test

model	year	area	system	function	subfunction
Santafe(CM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe(CM)	2013	General	AC(Air Conditioning)	Version Information	
Santafe(CM)	2013	General	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2013	General	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2013	General	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2013	General	BCM(Body Control Module)	Version Information	
Santafe(CM)	2013	General	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2013	General	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2013	General	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2013	General	4WD Control	Version Information	
Santafe(CM)	2013	General	4WD Control	Read Fault Code	
Santafe(CM)	2013	General	4WD Control	Clear Fault Memory	
Santafe(CM)	2013	General	4WD Control	Read Data Stream	
Santafe(CM)	2013	General	Auto Headlamp Leveling	Version Information	
Santafe(CM)	2013	General	Auto Headlamp Leveling	Read Fault Code	
Santafe(CM)	2013	General	Auto Headlamp Leveling	Clear Fault Memory	
Santafe(CM)	2013	General	Auto Headlamp Leveling	Read Data Stream	
Santafe(CM)	2013	General	Auto Headlamp Leveling	Special Function	Level Initialization
Santafe(CM)	2013	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Santafe(CM)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(CM)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(CM)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(CM)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(CM)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Santafe(CM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(CM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(CM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(CM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(CM)	2013	General	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2013	General	IMM(Immobilizer)	Special Function	Password
Santafe(CM)	2013	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Santafe(CM)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2013	General	Smart Key	Version Information	
Santafe(CM)	2013	General	Smart Key	Read Fault Code	
Santafe(CM)	2013	General	Smart Key	Clear Fault Memory	
Santafe(CM)	2013	General	Smart Key	Read Data Stream	
Santafe(CM)	2013	General	Smart Key	Actuation Test	
Santafe(CM)	2013	General	Smart Key	Special Function	ESCL Open Status Check
Santafe(CM)	2013	General	Smart Key	Special Function	Smart Key Code Saving
Santafe(CM)	2013	General	Smart Key	Special Function	Neutralization Mode
Santafe(CM)	2013	General	Smart Key	Special Function	SMK Status Information
Santafe(CM)	2013	General	Smart Key	Special Function	ESCL Status Information
Santafe(CM)	2013	General	Smart Key	Special Function	PDM Status Information
Santafe(CM)	2013	General	Smart Key	Special Function	FOB Key Status Information
Santafe(CM)	2013	General	Smart Key	Special Function	Serial Communication Line Check
Santafe(CM)	2013	General	Smart Key	Special Function	Antenna Status Check
Santafe(CM)	2013	General	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test

model	year	area	system	function	subfunction
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(CM)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(CM)	2012	General	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2012	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2012	General	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(CM)	2012	General	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(CM)	2012	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(CM)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2012	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Santafe(CM)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2012	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC/Only)
Santafe(CM)	2012	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Santafe(CM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe(CM)	2012	General	AC(Air Conditioning)	Version Information	
Santafe(CM)	2012	General	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2012	General	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2012	General	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2012	General	BCM(Body Control Module)	Version Information	
Santafe(CM)	2012	General	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2012	General	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2012	General	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2012	General	4WD Control	Version Information	
Santafe(CM)	2012	General	4WD Control	Read Fault Code	
Santafe(CM)	2012	General	4WD Control	Clear Fault Memory	
Santafe(CM)	2012	General	4WD Control	Read Data Stream	
Santafe(CM)	2012	General	Auto Headlamp Leveling	Version Information	
Santafe(CM)	2012	General	Auto Headlamp Leveling	Read Fault Code	
Santafe(CM)	2012	General	Auto Headlamp Leveling	Clear Fault Memory	
Santafe(CM)	2012	General	Auto Headlamp Leveling	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(CM)	2012	General	Auto Headlamp Leveling	Special Function	Level Initialization
Santafe(CM)	2012	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Santafe(CM)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(CM)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(CM)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(CM)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(CM)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(CM)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(CM)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(CM)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(CM)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(CM)	2012	General	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2012	General	IMM(Immobilizer)	Special Function	Password
Santafe(CM)	2012	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Santafe(CM)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2012	General	Smart Key	Version Information	
Santafe(CM)	2012	General	Smart Key	Read Fault Code	
Santafe(CM)	2012	General	Smart Key	Clear Fault Memory	
Santafe(CM)	2012	General	Smart Key	Read Data Stream	
Santafe(CM)	2012	General	Smart Key	Actuation Test	
Santafe(CM)	2012	General	Smart Key	Special Function	ESCL Open Status Check
Santafe(CM)	2012	General	Smart Key	Special Function	Smart Key Code Saving
Santafe(CM)	2012	General	Smart Key	Special Function	Neutralization Mode
Santafe(CM)	2012	General	Smart Key	Special Function	SMK Status Information
Santafe(CM)	2012	General	Smart Key	Special Function	ESCL Status Information
Santafe(CM)	2012	General	Smart Key	Special Function	PDM Status Information
Santafe(CM)	2012	General	Smart Key	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
Santafe(CM)	2012	General	Smart Key	Special Function	Serial Communication Line Check
Santafe(CM)	2012	General	Smart Key	Special Function	Antenna Status Check
Santafe(CM)	2012	General	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2012	General	ABS/ESP	Version Information	
Santafe(CM)	2012	General	ABS/ESP	Read Fault Code	
Santafe(CM)	2012	General	ABS/ESP	Clear Fault Memory	
Santafe(CM)	2012	General	ABS/ESP	Read Data Stream	
Santafe(CM)	2012	General	ABS/ESP	Actuation Test	
Santafe(CM)	2012	General	ABS/ESP	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2012	General	ABS/ESP	Special Function	Auto Detected Configuration
Santafe(CM)	2012	General	ABS/ESP	Special Function	Reset(ESP/ESC)Only
Santafe(CM)	2012	General	ABS/ESP	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(CM)	2012	General	ABS/ESP	Special Function	Solenoid Valve Test
Santafe(CM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(CM)	2012	General	Body Control Module	Version Information	
Santafe(CM)	2012	General	Body Control Module	Read Data Stream	
Santafe(CM)	2012	General	Body Control Module	Actuation Test	
Santafe(CM)	2012	General	EPS(Electronic Power Steering)	Version Information	
Santafe(CM)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(CM)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(CM)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(CM)	2012	General	Driveshaft	Version Information	
Santafe(CM)	2012	General	Driveshaft	Read Fault Code	
Santafe(CM)	2012	General	Driveshaft	Clear Fault Memory	
Santafe(CM)	2012	General	Driveshaft	Read Data Stream	
Santafe(CM)	2012	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(CM)	2012	General	IMM(Immobilizer)	Special Function	Learnt Keys

model	year	area	system	function	subfunction
Santafe(CM)	2012	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(CM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(CM)	2012	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(CM)	2011	General	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2011	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2011	General	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(CM)	2011	General	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2011	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Santafe(CM)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2011	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(CM)	2011	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2011	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Santafe(CM)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2011	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Santafe(CM)	2011	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/ESC/ESC)Only Solenoid Valve Test
Santafe(CM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe(CM)	2011	General	AC(Air Conditioning)	Version Information	
Santafe(CM)	2011	General	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2011	General	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2011	General	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2011	General	BCM(Body Control Module)	Version Information	
Santafe(CM)	2011	General	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2011	General	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2011	General	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2011	General	4WD Control	Version Information	
Santafe(CM)	2011	General	4WD Control	Read Fault Code	
Santafe(CM)	2011	General	4WD Control	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(CM)	2011	General	4WD Control	Read Data Stream	
Santafe(CM)	2011	General	Auto Headlamp Leveling	Version Information	
Santafe(CM)	2011	General	Auto Headlamp Leveling	Read Fault Code	
Santafe(CM)	2011	General	Auto Headlamp Leveling	Clear Fault Memory	
Santafe(CM)	2011	General	Auto Headlamp Leveling	Read Data Stream	
Santafe(CM)	2011	General	Auto Headlamp Leveling	Special Function	Level Initialization
Santafe(CM)	2011	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Santafe(CM)	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(CM)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(CM)	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(CM)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(CM)	2011	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(CM)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(CM)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(CM)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(CM)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(CM)	2011	General	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Santafe(CM)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2011	General	Smart Key	Version Information	
Santafe(CM)	2011	General	Smart Key	Read Fault Code	
Santafe(CM)	2011	General	Smart Key	Clear Fault Memory	
Santafe(CM)	2011	General	Smart Key	Read Data Stream	
Santafe(CM)	2011	General	Smart Key	Actuation Test	
Santafe(CM)	2011	General	Smart Key	Special Function	ESCL Open Status Check
Santafe(CM)	2011	General	Smart Key	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Santafe(CM)	2011	General	Smart Key	Special Function	Neutralization Mode
Santafe(CM)	2011	General	Smart Key	Special Function	SMK Status Information
Santafe(CM)	2011	General	Smart Key	Special Function	ESCL Status Information
Santafe(CM)	2011	General	Smart Key	Special Function	PDM Status Information
Santafe(CM)	2011	General	Smart Key	Special Function	FOB Key Status Information
Santafe(CM)	2011	General	Smart Key	Special Function	Serial Communication Line Check
Santafe(CM)	2011	General	Smart Key	Special Function	Antenna Status Check
Santafe(CM)	2011	General	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2011	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2011	General	ABS/ESP	Version Information	
Santafe(CM)	2011	General	ABS/ESP	Read Fault Code	
Santafe(CM)	2011	General	ABS/ESP	Clear Fault Memory	
Santafe(CM)	2011	General	ABS/ESP	Read Data Stream	
Santafe(CM)	2011	General	ABS/ESP	Actuation Test	
Santafe(CM)	2011	General	ABS/ESP	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2011	General	ABS/ESP	Special Function	Auto Detected Configuration
Santafe(CM)	2011	General	ABS/ESP	Special Function	Reset(ESP/ESC)Only
Santafe(CM)	2011	General	ABS/ESP	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(CM)	2011	General	ABS/ESP	Special Function	Solenoid Valve Test
Santafe(CM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(CM)	2011	General	Body Control Module	Version Information	
Santafe(CM)	2011	General	Body Control Module	Read Data Stream	
Santafe(CM)	2011	General	Body Control Module	Actuation Test	
Santafe(CM)	2011	General	EPS(Electronic Power Steering)	Version Information	
Santafe(CM)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(CM)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(CM)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(CM)	2011	General	Driveshaft	Version Information	

model	year	area	system	function	subfunction
Santafe(CM)	2011	General	Driveshaft	Read Fault Code	
Santafe(CM)	2011	General	Driveshaft	Clear Fault Memory	
Santafe(CM)	2011	General	Driveshaft	Read Data Stream	
Santafe(CM)	2011	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(CM)	2011	General	IMM(Immobilizer)	Special Function	Learnt Keys
Santafe(CM)	2011	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Auto Detected
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Cylinder Power
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Component Change
Santafe(CM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Routine
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	PODS Reset
Santafe(CM)	2011	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(CM)	2010	General	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2010	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2010	General	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(CM)	2010	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Santafe(CM)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2010	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(CM)	2010	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2010	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Santafe(CM)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2010	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC)Only
Santafe(CM)	2010	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Santafe(CM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe(CM)	2010	General	AC(Air Conditioning)	Version Information	
Santafe(CM)	2010	General	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2010	General	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2010	General	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2010	General	BCM(Body Control Module)	Version Information	
Santafe(CM)	2010	General	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(CM)	2010	General	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2010	General	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2010	General	4WD Control	Version Information	
Santafe(CM)	2010	General	4WD Control	Read Fault Code	
Santafe(CM)	2010	General	4WD Control	Clear Fault Memory	
Santafe(CM)	2010	General	4WD Control	Read Data Stream	
Santafe(CM)	2010	General	Auto Headlamp Leveling	Version Information	
Santafe(CM)	2010	General	Auto Headlamp Leveling	Read Fault Code	
Santafe(CM)	2010	General	Auto Headlamp Leveling	Clear Fault Memory	
Santafe(CM)	2010	General	Auto Headlamp Leveling	Read Data Stream	
Santafe(CM)	2010	General	Auto Headlamp Leveling	Special Function	Level Initialization
Santafe(CM)	2010	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Santafe(CM)	2010	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(CM)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(CM)	2010	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(CM)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(CM)	2010	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(CM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(CM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(CM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(CM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(CM)	2010	General	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(CM)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2010	General	Smart Key	Version Information	
Santafe(CM)	2010	General	Smart Key	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(CM)	2010	General	Smart Key	Clear Fault Memory	
Santafe(CM)	2010	General	Smart Key	Read Data Stream	
Santafe(CM)	2010	General	Smart Key	Actuation Test	
Santafe(CM)	2010	General	Smart Key	Special Function	ESCL Open Status Check
Santafe(CM)	2010	General	Smart Key	Special Function	Smart Key Code Saving
Santafe(CM)	2010	General	Smart Key	Special Function	Neutralization Mode
Santafe(CM)	2010	General	Smart Key	Special Function	SMK Status Information
Santafe(CM)	2010	General	Smart Key	Special Function	ESCL Status Information
Santafe(CM)	2010	General	Smart Key	Special Function	PDM Status Information
Santafe(CM)	2010	General	Smart Key	Special Function	FOB Key Status Information
Santafe(CM)	2010	General	Smart Key	Special Function	Serial Communication Line Check
Santafe(CM)	2010	General	Smart Key	Special Function	Antenna Status Check
Santafe(CM)	2010	General	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2010	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2010	General	ABS/ESP	Version Information	
Santafe(CM)	2010	General	ABS/ESP	Read Fault Code	
Santafe(CM)	2010	General	ABS/ESP	Clear Fault Memory	
Santafe(CM)	2010	General	ABS/ESP	Read Data Stream	
Santafe(CM)	2010	General	ABS/ESP	Actuation Test	
Santafe(CM)	2010	General	ABS/ESP	Special Function	HCU Air Bleeding Mode Auto Detected
Santafe(CM)	2010	General	ABS/ESP	Special Function	Configuration Reset(ESP/ESC)Only
Santafe(CM)	2010	General	ABS/ESP	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(CM)	2010	General	ABS/ESP	Special Function	Solenoid Valve Test
Santafe(CM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(CM)	2010	General	Body Control Module	Version Information	
Santafe(CM)	2010	General	Body Control Module	Read Data Stream	
Santafe(CM)	2010	General	Body Control Module	Actuation Test	

model	year	area	system	function	subfunction
Santafe(CM)	2010	General	EPS(Electronic Power Steering)	Version Information	
Santafe(CM)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(CM)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(CM)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(CM)	2010	General	Driveshaft	Version Information	
Santafe(CM)	2010	General	Driveshaft	Read Fault Code	
Santafe(CM)	2010	General	Driveshaft	Clear Fault Memory	
Santafe(CM)	2010	General	Driveshaft	Read Data Stream	
Santafe(CM)	2010	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(CM)	2010	General	IMM(Immobilizer)	Special Function	Learnt Keys
Santafe(CM)	2010	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(CM)	2010	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(CM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(CM)	2009	General	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2009	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2009	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2009	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2009	General	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2009	General	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Santafe(CM)	2009	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2009	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(CM)	2009	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(CM)	2009	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(CM)	2009	General	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2009	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2009	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2009	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2009	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Santafe(CM)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2009	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Santafe(CM)	2009	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Santafe(CM)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(CM)	2009	General	AC(Air Conditioning)	Version Information	
Santafe(CM)	2009	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(CM)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2009	General	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2009	General	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2009	General	BCM(Body Control Module)	Version Information	
Santafe(CM)	2009	General	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2009	General	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2009	General	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2009	General	EPS(Electronic Power Steering)	Version Information	
Santafe(CM)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(CM)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(CM)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(CM)	2009	General	4WD Control	Version Information	
Santafe(CM)	2009	General	4WD Control	Read Fault Code	
Santafe(CM)	2009	General	4WD Control	Clear Fault Memory	
Santafe(CM)	2009	General	4WD Control	Read Data Stream	
Santafe(CM)	2009	General	Auto Headlamp Leveling	Version Information	
Santafe(CM)	2009	General	Auto Headlamp Leveling	Read Fault Code	
Santafe(CM)	2009	General	Auto Headlamp Leveling	Clear Fault Memory	
Santafe(CM)	2009	General	Auto Headlamp Leveling	Read Data Stream	
Santafe(CM)	2009	General	Auto Headlamp Leveling	Special Function	Level Initialization
Santafe(CM)	2009	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Santafe(CM)	2009	General	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2009	General	IMM(Immobilizer)	Special Function	Password
Santafe(CM)	2009	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Santafe(CM)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2009	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2009	General	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2009	General	Transmitter Code Saving	Special Function	Code Saving

model	year	area	system	function	subfunction
Santafe(CM)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(CM)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(CM)	2009	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(CM)	2009	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(CM)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(CM)	2008	General	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2008	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2008	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2008	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2008	General	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2008	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(CM)	2008	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2008	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(CM)	2008	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(CM)	2008	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(CM)	2008	General	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2008	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2008	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2008	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2008	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Santafe(CM)	2008	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Santafe(CM)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2008	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Santafe(CM)	2008	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/ESC/Onk) Solenoid Valve Test
Santafe(CM)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2008	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(CM)	2008	General	AC(Air Conditioning)	Version Information	
Santafe(CM)	2008	General	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2008	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2008	General	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2008	General	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2008	General	BCM(Body Control Module)	Version Information	
Santafe(CM)	2008	General	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2008	General	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2008	General	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2008	General	EPS(Electronic Power Steering)	Version Information	
Santafe(CM)	2008	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(CM)	2008	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(CM)	2008	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(CM)	2008	General	4WD Control	Version Information	
Santafe(CM)	2008	General	4WD Control	Read Fault Code	
Santafe(CM)	2008	General	4WD Control	Clear Fault Memory	
Santafe(CM)	2008	General	4WD Control	Read Data Stream	
Santafe(CM)	2008	General	Auto Headlamp Leveling	Version Information	
Santafe(CM)	2008	General	Auto Headlamp Leveling	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(CM)	2008	General	Auto Headlamp Leveling	Clear Fault Memory	
Santafe(CM)	2008	General	Auto Headlamp Leveling	Read Data Stream	
Santafe(CM)	2008	General	Auto Headlamp Leveling	Special Function	Level Initialization
Santafe(CM)	2008	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Santafe(CM)	2008	General	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2008	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(CM)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2008	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2008	General	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2008	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(CM)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(CM)	2008	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(CM)	2008	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(CM)	2008	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(CM)	2007	General	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2007	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2007	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2007	General	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2007	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(CM)	2007	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2007	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(CM)	2007	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(CM)	2007	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Santafe(CM)	2007	General	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2007	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2007	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2007	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2007	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Santafe(CM)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2007	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Santafe(CM)	2007	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Santafe(CM)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2007	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(CM)	2007	General	AC(Air Conditioning)	Version Information	
Santafe(CM)	2007	General	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2007	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2007	General	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2007	General	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2007	General	BCM(Body Control Module)	Version Information	
Santafe(CM)	2007	General	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(CM)	2007	General	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2007	General	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2007	General	EPS(Electronic Power Steering)	Version Information	
Santafe(CM)	2007	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(CM)	2007	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(CM)	2007	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(CM)	2007	General	4WD Control	Version Information	
Santafe(CM)	2007	General	4WD Control	Read Fault Code	
Santafe(CM)	2007	General	4WD Control	Clear Fault Memory	
Santafe(CM)	2007	General	4WD Control	Read Data Stream	
Santafe(CM)	2007	General	Auto Headlamp Leveling	Version Information	
Santafe(CM)	2007	General	Auto Headlamp Leveling	Read Fault Code	
Santafe(CM)	2007	General	Auto Headlamp Leveling	Clear Fault Memory	
Santafe(CM)	2007	General	Auto Headlamp Leveling	Read Data Stream	
Santafe(CM)	2007	General	Auto Headlamp Leveling	Special Function	Level Initialization
Santafe(CM)	2007	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Santafe(CM)	2007	General	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2007	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Santafe(CM)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2007	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2007	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2007	General	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2007	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2007	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(CM)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(CM)	2007	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(CM)	2007	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(CM)	2007	General	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset

model	year	area	system	function	subfunction
Santafe(CM)	2006	General	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2006	General	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2006	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2006	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(CM)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(CM)	2006	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(CM)	2006	General	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2006	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2006	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2006	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Santafe(CM)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode Auto Detected
Santafe(CM)	2006	General	ABS(Anti-lock Braking System)	Special Function	Configuration Reset(FSP/FSC)Only
Santafe(CM)	2006	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Santafe(CM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(CM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(CM)	2006	General	AC(Air Conditioning)	Version Information	
Santafe(CM)	2006	General	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2006	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2006	General	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2006	General	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2006	General	BCM(Body Control Module)	Version Information	
Santafe(CM)	2006	General	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2006	General	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2006	General	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2006	General	EPS(Electronic Power Steering)	Version Information	
Santafe(CM)	2006	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(CM)	2006	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(CM)	2006	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(CM)	2006	General	4WD Control	Version Information	
Santafe(CM)	2006	General	4WD Control	Read Fault Code	
Santafe(CM)	2006	General	4WD Control	Clear Fault Memory	
Santafe(CM)	2006	General	Auto Headlamp Leveling	Version Information	
Santafe(CM)	2006	General	Auto Headlamp Leveling	Read Fault Code	
Santafe(CM)	2006	General	Auto Headlamp Leveling	Clear Fault Memory	
Santafe(CM)	2006	General	Auto Headlamp Leveling	Read Data Stream	
Santafe(CM)	2006	General	Auto Headlamp Leveling	Special Function	Level Initialization
Santafe(CM)	2006	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Santafe(CM)	2006	General	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2006	General	IMM(Immobilizer)	Special Function	Password
Santafe(CM)	2006	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Santafe(CM)	2006	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Santafe(CM)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2006	General	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2006	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2006	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(CM)	2006	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(DM)	2018	General	ECM(Engine Control Module)	Version Information	
Santafe(DM)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(DM)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(DM)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(DM)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(DM)	2018	General	ECM(Engine Control Module)	Actuation Test	
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(DM)	2018	General	TCM(Transmission Control Module)	Version Information	
Santafe(DM)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(DM)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(DM)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(DM)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(DM)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(DM)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(DM)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(DM)	2018	General	Electric Parking Brake	Version Information	
Santafe(DM)	2018	General	Electric Parking Brake	Read Fault Code	
Santafe(DM)	2018	General	Electric Parking Brake	Clear Fault Memory	
Santafe(DM)	2018	General	Electric Parking Brake	Read Data Stream	
Santafe(DM)	2018	General	Electric Parking Brake	Actuation Test	
Santafe(DM)	2018	General	Electric Parking Brake	Special Function	EPB Variant Coding
Santafe(DM)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(DM)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(DM)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(DM)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(DM)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(DM)	2018	General	AC(Air Conditioning)	Version Information	
Santafe(DM)	2018	General	AC(Air Conditioning)	Read Fault Code	
Santafe(DM)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(DM)	2018	General	AC(Air Conditioning)	Read Data Stream	
Santafe(DM)	2018	General	AC(Air Conditioning)	Actuation Test	
Santafe(DM)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Santafe(DM)	2018	General	BCM(Body Control Module)	Version Information	
Santafe(DM)	2018	General	BCM(Body Control Module)	Read Fault Code	
Santafe(DM)	2018	General	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(DM)	2018	General	BCM(Body Control Module)	Read Data Stream	
Santafe(DM)	2018	General	BCM(Body Control Module)	Actuation Test	
Santafe(DM)	2018	General	BCM(Body Control Module)	Special Function	User Option
Santafe(DM)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe(DM)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(DM)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(DM)	2018	General	Power Tail Gate	Version Information	
Santafe(DM)	2018	General	Power Tail Gate	Read Fault Code	
Santafe(DM)	2018	General	Power Tail Gate	Clear Fault Memory	
Santafe(DM)	2018	General	Power Tail Gate	Read Data Stream	
Santafe(DM)	2018	General	Power Tail Gate	Special Function	User Option
Santafe(DM)	2018	General	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Santafe(DM)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(DM)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(DM)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(DM)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(DM)	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(DM)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(DM)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(DM)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(DM)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(DM)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(DM)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe(DM)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe(DM)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe(DM)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe(DM)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe(DM)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe(DM)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download

model	year	area	system	function	subfunction
Santafe(DM)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe(DM)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Santafe(DM)	2018	General	EPS(Electronic Power Steering)	Version Information	
Santafe(DM)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(DM)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(DM)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(DM)	2018	General	EPS(Electronic Power Steering)	Read FreezeData	
Santafe(DM)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(DM)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(DM)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Santafe(DM)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Santafe(DM)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(DM)	2018	General	Driveshaft	Version Information	
Santafe(DM)	2018	General	Driveshaft	Read Fault Code	
Santafe(DM)	2018	General	Driveshaft	Clear Fault Memory	
Santafe(DM)	2018	General	Driveshaft	Read Data Stream	
Santafe(DM)	2018	General	Driveshaft	Actuation Test	
Santafe(DM)	2018	General	Driveshaft	Special Function	Clutch Learning Read
Santafe(DM)	2018	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe(DM)	2018	General	Driveshaft	Special Function	Clutch Learning Write
Santafe(DM)	2018	General	Smart Key Unit	Version Information	
Santafe(DM)	2018	General	Smart Key Unit	Read Fault Code	
Santafe(DM)	2018	General	Smart Key Unit	Clear Fault Memory	
Santafe(DM)	2018	General	Smart Key Unit	Read Data Stream	
Santafe(DM)	2018	General	Smart Key Unit	Actuation Test	
Santafe(DM)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Santafe(DM)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe(DM)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(DM)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Santafe(DM)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(DM)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Santafe(DM)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Santafe(DM)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe(DM)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(DM)	2018	General	Smart Cruise Control	Version Information	
Santafe(DM)	2018	General	Smart Cruise Control	Read Fault Code	
Santafe(DM)	2018	General	Smart Cruise Control	Clear Fault Memory	
Santafe(DM)	2018	General	Smart Cruise Control	Read Data Stream	
Santafe(DM)	2018	General	Smart Cruise Control	Special Function	Radar Sensor Alignment(SCC/AEB)
Santafe(DM)	2018	General	Smart Cruise Control	Special Function	Variant Coding
Santafe(DM)	2018	General	Blind Spot Detection	Version Information	
Santafe(DM)	2018	General	Blind Spot Detection	Read Fault Code	
Santafe(DM)	2018	General	Blind Spot Detection	Clear Fault Memory	
Santafe(DM)	2018	General	Blind Spot Detection	Read Data Stream	
Santafe(DM)	2018	General	Blind Spot Detection	Actuation Test	
Santafe(DM)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe(DM)	2018	General	Lane Departure Warning System	Version Information	
Santafe(DM)	2018	General	Lane Departure Warning System	Read Fault Code	
Santafe(DM)	2018	General	Lane Departure Warning System	Clear Fault Memory	
Santafe(DM)	2018	General	Lane Departure Warning System	Read Data Stream	
Santafe(DM)	2018	General	Lane Departure Warning System	Special Function	SPC Calibration
Santafe(DM)	2018	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Santafe(DM)	2018	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Santafe(DM)	2018	General	Smart Parking Assist System	Version Information	
Santafe(DM)	2018	General	Smart Parking Assist System	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(DM)	2018	General	Smart Parking Assist System	Clear Fault Memory	
Santafe(DM)	2018	General	Smart Parking Assist System	Read Data Stream	
Santafe(DM)	2018	General	Smart Parking Assist System	Actuation Test	
Santafe(DM)	2018	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Santafe(DM)	2018	General	Around View Monitor System	Version Information	
Santafe(DM)	2018	General	Around View Monitor System	Read Fault Code	
Santafe(DM)	2018	General	Around View Monitor System	Clear Fault Memory	
Santafe(DM)	2018	General	Around View Monitor System	Read Data Stream	
Santafe(DM)	2018	General	Around View Monitor System	Actuation Test	
Santafe(DM)	2018	General	Active Hood System	Version Information	
Santafe(DM)	2018	General	Active Hood System	Read Fault Code	
Santafe(DM)	2018	General	Active Hood System	Clear Fault Memory	
Santafe(DM)	2018	General	Active Hood System	Read Data Stream	
Santafe(DM)	2018	General	Active Hood System	Actuation Test	
Santafe(DM)	2018	General	Telematics Unit	Version Information	
Santafe(DM)	2018	General	Telematics Unit	Read Fault Code	
Santafe(DM)	2018	General	Telematics Unit	Clear Fault Memory	
Santafe(DM)	2018	General	IMM(Immobilizer)	Read Fault Code	
Santafe(DM)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(DM)	2018	General	IMM(Immobilizer)	Read Data Stream	
Santafe(DM)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(DM)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(DM)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(DM)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(DM)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe(DM)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(DM)	2018	General	TCM(Transmission Control Module)	Special Function	Automatic-Learning Mode

model	year	area	system	function	subfunction
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(DM)	2018	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe(DM)	2018	General	Power Tail Gate	Special Function	Power Trunk Mode Configuration
Santafe(DM)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe(DM)	2018	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(DM)	2018	General	Smart Key	Version Information	
Santafe(DM)	2018	General	Smart Key	Read Fault Code	
Santafe(DM)	2018	General	Smart Key	Clear Fault Memory	
Santafe(DM)	2018	General	Smart Key	Read Data Stream	
Santafe(DM)	2018	General	Smart Key	Actuation Test	
Santafe(DM)	2018	General	Smart Key	Special Function	User Option
Santafe(DM)	2018	General	Smart Key	Special Function	ESCL Open Status Check
Santafe(DM)	2018	General	Smart Key	Special Function	ESCL Status Information
Santafe(DM)	2018	General	Smart Key	Special Function	FOB Key Status Information
Santafe(DM)	2018	General	Smart Key	Special Function	Serial Communication Line Check
Santafe(DM)	2018	General	Smart Key	Special Function	Antenna Status Check
Santafe(DM)	2018	General	Smart Key	Special Function	Neutralization Mode
Santafe(DM)	2018	General	Smart Key	Special Function	SMK Status Information
Santafe(DM)	2018	General	Smart Key	Special Function	Smart Key Code Saving
Santafe(DM)	2018	General	Smart Key	Special Function	Current FOB Key Check
Santafe(DM)	2018	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Santafe(DM)	2018	General	Lane Departure Warning System	Special Function	LDWS Region Code
Santafe(DM)	2018	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(DM)	2018	General	IMM(Immobilizer)	Special Function	Learnt Keys
Santafe(DM)	2018	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Santafe(DM)	2018	General	Transmitter Code Saving	Read Data Stream	
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/ECU Cleaning
Santafe(DM)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(DM)	2017	General	ECM(Engine Control Module)	Version Information	
Santafe(DM)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(DM)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(DM)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(DM)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(DM)	2017	General	ECM(Engine Control Module)	Actuation Test	
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(DM)	2017	General	TCM(Transmission Control Module)	Version Information	
Santafe(DM)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(DM)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(DM)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(DM)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(DM)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(DM)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Santafe(DM)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC/Only)
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(DM)	2017	General	Electric Parking Brake	Version Information	
Santafe(DM)	2017	General	Electric Parking Brake	Read Fault Code	
Santafe(DM)	2017	General	Electric Parking Brake	Clear Fault Memory	
Santafe(DM)	2017	General	Electric Parking Brake	Read Data Stream	
Santafe(DM)	2017	General	Electric Parking Brake	Actuation Test	
Santafe(DM)	2017	General	Electric Parking Brake	Special Function	EPB Variant Coding
Santafe(DM)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(DM)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(DM)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(DM)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(DM)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(DM)	2017	General	AC(Air Conditioning)	Version Information	
Santafe(DM)	2017	General	AC(Air Conditioning)	Read Fault Code	
Santafe(DM)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(DM)	2017	General	AC(Air Conditioning)	Read Data Stream	
Santafe(DM)	2017	General	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Santafe(DM)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(DM)	2017	General	BCM(Body Control Module)	Version Information	
Santafe(DM)	2017	General	BCM(Body Control Module)	Read Fault Code	
Santafe(DM)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe(DM)	2017	General	BCM(Body Control Module)	Read Data Stream	
Santafe(DM)	2017	General	BCM(Body Control Module)	Actuation Test	
Santafe(DM)	2017	General	BCM(Body Control Module)	Special Function	User Option
Santafe(DM)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe(DM)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(DM)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(DM)	2017	General	Power Tail Gate	Version Information	
Santafe(DM)	2017	General	Power Tail Gate	Read Fault Code	
Santafe(DM)	2017	General	Power Tail Gate	Clear Fault Memory	
Santafe(DM)	2017	General	Power Tail Gate	Read Data Stream	
Santafe(DM)	2017	General	Power Tail Gate	Special Function	User Option
Santafe(DM)	2017	General	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Santafe(DM)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(DM)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(DM)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(DM)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(DM)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(DM)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(DM)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(DM)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(DM)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(DM)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(DM)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe(DM)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe(DM)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(DM)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe(DM)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe(DM)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe(DM)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe(DM)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe(DM)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Santafe(DM)	2017	General	EPS(Electronic Power Steering)	Version Information	
Santafe(DM)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(DM)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(DM)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(DM)	2017	General	EPS(Electronic Power Steering)	Read FreezeData	
Santafe(DM)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(DM)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(DM)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Santafe(DM)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Santafe(DM)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(DM)	2017	General	Driveshaft	Version Information	
Santafe(DM)	2017	General	Driveshaft	Read Fault Code	
Santafe(DM)	2017	General	Driveshaft	Clear Fault Memory	
Santafe(DM)	2017	General	Driveshaft	Read Data Stream	
Santafe(DM)	2017	General	Driveshaft	Actuation Test	
Santafe(DM)	2017	General	Driveshaft	Special Function	Clutch Learning Read
Santafe(DM)	2017	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe(DM)	2017	General	Driveshaft	Special Function	Clutch Learning Write
Santafe(DM)	2017	General	Smart Key Unit	Version Information	
Santafe(DM)	2017	General	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(DM)	2017	General	Smart Key Unit	Clear Fault Memory	
Santafe(DM)	2017	General	Smart Key Unit	Read Data Stream	
Santafe(DM)	2017	General	Smart Key Unit	Actuation Test	
Santafe(DM)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(DM)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe(DM)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(DM)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Santafe(DM)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(DM)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Santafe(DM)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Santafe(DM)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe(DM)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(DM)	2017	General	Smart Cruise Control	Version Information	
Santafe(DM)	2017	General	Smart Cruise Control	Read Fault Code	
Santafe(DM)	2017	General	Smart Cruise Control	Clear Fault Memory	
Santafe(DM)	2017	General	Smart Cruise Control	Read Data Stream	
Santafe(DM)	2017	General	Smart Cruise Control	Special Function	Radar Sensor Alignment(SCC/AFD)
Santafe(DM)	2017	General	Smart Cruise Control	Special Function	Variant Coding
Santafe(DM)	2017	General	Blind Spot Detection	Version Information	
Santafe(DM)	2017	General	Blind Spot Detection	Read Fault Code	
Santafe(DM)	2017	General	Blind Spot Detection	Clear Fault Memory	
Santafe(DM)	2017	General	Blind Spot Detection	Read Data Stream	
Santafe(DM)	2017	General	Blind Spot Detection	Actuation Test	
Santafe(DM)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe(DM)	2017	General	Lane Departure Warning System	Version Information	
Santafe(DM)	2017	General	Lane Departure Warning System	Read Fault Code	
Santafe(DM)	2017	General	Lane Departure Warning System	Clear Fault Memory	
Santafe(DM)	2017	General	Lane Departure Warning System	Read Data Stream	
Santafe(DM)	2017	General	Lane Departure Warning System	Special Function	SPC Calibration

model	year	area	system	function	subfunction
Santafe(DM)	2017	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Santafe(DM)	2017	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Santafe(DM)	2017	General	Smart Parking Assist System	Version Information	
Santafe(DM)	2017	General	Smart Parking Assist System	Read Fault Code	
Santafe(DM)	2017	General	Smart Parking Assist System	Clear Fault Memory	
Santafe(DM)	2017	General	Smart Parking Assist System	Read Data Stream	
Santafe(DM)	2017	General	Smart Parking Assist System	Actuation Test	
Santafe(DM)	2017	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Santafe(DM)	2017	General	Around View Monitor System	Version Information	
Santafe(DM)	2017	General	Around View Monitor System	Read Fault Code	
Santafe(DM)	2017	General	Around View Monitor System	Clear Fault Memory	
Santafe(DM)	2017	General	Around View Monitor System	Read Data Stream	
Santafe(DM)	2017	General	Around View Monitor System	Actuation Test	
Santafe(DM)	2017	General	Active Hood System	Version Information	
Santafe(DM)	2017	General	Active Hood System	Read Fault Code	
Santafe(DM)	2017	General	Active Hood System	Clear Fault Memory	
Santafe(DM)	2017	General	Active Hood System	Read Data Stream	
Santafe(DM)	2017	General	Active Hood System	Actuation Test	
Santafe(DM)	2017	General	Telematics Unit	Version Information	
Santafe(DM)	2017	General	Telematics Unit	Read Fault Code	
Santafe(DM)	2017	General	Telematics Unit	Clear Fault Memory	
Santafe(DM)	2017	General	IMM(Immobilizer)	Read Fault Code	
Santafe(DM)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(DM)	2017	General	IMM(Immobilizer)	Read Data Stream	
Santafe(DM)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(DM)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(DM)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(DM)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(DM)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(DM)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(DM)	2017	General	TCM(Transmission Control Module)	Special Function	Automatic-Learning Mode
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(DM)	2017	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe(DM)	2017	General	Power Tail Gate	Special Function	Power Trunk Mode Configuration
Santafe(DM)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe(DM)	2017	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(DM)	2017	General	Smart Key	Version Information	
Santafe(DM)	2017	General	Smart Key	Read Fault Code	
Santafe(DM)	2017	General	Smart Key	Clear Fault Memory	
Santafe(DM)	2017	General	Smart Key	Read Data Stream	
Santafe(DM)	2017	General	Smart Key	Actuation Test	
Santafe(DM)	2017	General	Smart Key	Special Function	User Option
Santafe(DM)	2017	General	Smart Key	Special Function	ESCL Open Status Check
Santafe(DM)	2017	General	Smart Key	Special Function	ESCL Status Information
Santafe(DM)	2017	General	Smart Key	Special Function	FOB Key Status Information
Santafe(DM)	2017	General	Smart Key	Special Function	Serial Communication Line Check
Santafe(DM)	2017	General	Smart Key	Special Function	Antenna Status Check
Santafe(DM)	2017	General	Smart Key	Special Function	Neutralization Mode
Santafe(DM)	2017	General	Smart Key	Special Function	SMK Status Information
Santafe(DM)	2017	General	Smart Key	Special Function	Smart Key Code Saving
Santafe(DM)	2017	General	Smart Key	Special Function	Current FOB Key Check
Santafe(DM)	2017	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Santafe(DM)	2017	General	Lane Departure Warning System	Special Function	LDWS Region Code
Santafe(DM)	2017	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(DM)	2017	General	IMM(Immobilizer)	Special Function	Learnt Keys

model	year	area	system	function	subfunction
Santafe(DM)	2017	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Santafe(DM)	2017	General	Transmitter Code Saving	Read Data Stream	
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning
Santafe(DM)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(DM)	2016	General	ECM(Engine Control Module)	Version Information	
Santafe(DM)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(DM)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(DM)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(DM)	2016	General	ECM(Engine Control Module)	Actuation Test	
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe(DM)	2016	General	TCM(Transmission Control Module)	Version Information	
Santafe(DM)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(DM)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(DM)	2016	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(DM)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(DM)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(DM)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(DM)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/ESC/ESC Only) HCU Air Bleeding Mode
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe(DM)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(DM)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(DM)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(DM)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(DM)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe(DM)	2016	General	AC(Air Conditioning)	Version Information	
Santafe(DM)	2016	General	AC(Air Conditioning)	Read Fault Code	
Santafe(DM)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(DM)	2016	General	AC(Air Conditioning)	Read Data Stream	
Santafe(DM)	2016	General	AC(Air Conditioning)	Actuation Test	
Santafe(DM)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(DM)	2016	General	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Santafe(DM)	2016	General	BCM(Body Control Module)	Read Fault Code	
Santafe(DM)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe(DM)	2016	General	BCM(Body Control Module)	Read Data Stream	
Santafe(DM)	2016	General	BCM(Body Control Module)	Actuation Test	
Santafe(DM)	2016	General	BCM(Body Control Module)	Special Function	User Option
Santafe(DM)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe(DM)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(DM)	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(DM)	2016	General	BCM(Body Control Module)	Special Function	Power Tailgate Mode Configuration
Santafe(DM)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(DM)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(DM)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(DM)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(DM)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(DM)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(DM)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(DM)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(DM)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(DM)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(DM)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe(DM)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe(DM)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe(DM)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe(DM)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe(DM)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe(DM)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe(DM)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe(DM)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial

model	year	area	system	function	subfunction
Santafe(DM)	2016	General	EPS(Electronic Power Steering)	Version Information	
Santafe(DM)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(DM)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(DM)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(DM)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
Santafe(DM)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(DM)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(DM)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Santafe(DM)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Santafe(DM)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(DM)	2016	General	Driveshaft	Version Information	
Santafe(DM)	2016	General	Driveshaft	Read Fault Code	
Santafe(DM)	2016	General	Driveshaft	Clear Fault Memory	
Santafe(DM)	2016	General	Driveshaft	Read Data Stream	
Santafe(DM)	2016	General	Driveshaft	Actuation Test	
Santafe(DM)	2016	General	Driveshaft	Special Function	Clutch Learning Read
Santafe(DM)	2016	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe(DM)	2016	General	Driveshaft	Special Function	Clutch Learning Write
Santafe(DM)	2016	General	Smart Key Unit	Version Information	
Santafe(DM)	2016	General	Smart Key Unit	Read Fault Code	
Santafe(DM)	2016	General	Smart Key Unit	Clear Fault Memory	
Santafe(DM)	2016	General	Smart Key Unit	Read Data Stream	
Santafe(DM)	2016	General	Smart Key Unit	Actuation Test	
Santafe(DM)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(DM)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe(DM)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(DM)	2016	General	Smart Key Unit	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Santafe(DM)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(DM)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Santafe(DM)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Santafe(DM)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe(DM)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(DM)	2016	General	Lane Departure Warning System	Version Information	
Santafe(DM)	2016	General	Lane Departure Warning System	Read Fault Code	
Santafe(DM)	2016	General	Lane Departure Warning System	Clear Fault Memory	
Santafe(DM)	2016	General	Lane Departure Warning System	Read Data Stream	
Santafe(DM)	2016	General	Lane Departure Warning System	Special Function	SPC Calibration
Santafe(DM)	2016	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Santafe(DM)	2016	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Santafe(DM)	2016	General	Blind Spot Detection	Version Information	
Santafe(DM)	2016	General	Blind Spot Detection	Read Fault Code	
Santafe(DM)	2016	General	Blind Spot Detection	Clear Fault Memory	
Santafe(DM)	2016	General	Blind Spot Detection	Read Data Stream	
Santafe(DM)	2016	General	Blind Spot Detection	Actuation Test	
Santafe(DM)	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe(DM)	2016	General	Smart Parking Assist System	Version Information	
Santafe(DM)	2016	General	Smart Parking Assist System	Read Fault Code	
Santafe(DM)	2016	General	Smart Parking Assist System	Clear Fault Memory	
Santafe(DM)	2016	General	Smart Parking Assist System	Read Data Stream	
Santafe(DM)	2016	General	Smart Parking Assist System	Actuation Test	
Santafe(DM)	2016	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Santafe(DM)	2016	General	Around View Monitor Systeming	Version Information	
Santafe(DM)	2016	General	Around View Monitor Systeming	Read Fault Code	
Santafe(DM)	2016	General	Around View Monitor Systeming	Clear Fault Memory	
Santafe(DM)	2016	General	Around View Monitor Systeming	Read Data Stream	
Santafe(DM)	2016	General	Around View Monitor Systeming	Actuation Test	

model	year	area	system	function	subfunction
Santafe(DM)	2016	General	Active Hood System	Version Information	
Santafe(DM)	2016	General	Active Hood System	Read Fault Code	
Santafe(DM)	2016	General	Active Hood System	Clear Fault Memory	
Santafe(DM)	2016	General	Active Hood System	Read Data Stream	
Santafe(DM)	2016	General	Active Hood System	Actuation Test	
Santafe(DM)	2016	General	Smart Cruise Control	Version Information	
Santafe(DM)	2016	General	Smart Cruise Control	Read Fault Code	
Santafe(DM)	2016	General	Smart Cruise Control	Clear Fault Memory	
Santafe(DM)	2016	General	Smart Cruise Control	Read Data Stream	
Santafe(DM)	2016	General	Smart Cruise Control	Special Function	Radar Sensor Alignment(SCC/AFB)
Santafe(DM)	2016	General	Smart Cruise Control	Special Function	Variant Coding
Santafe(DM)	2016	General	Telematics Unit	Version Information	
Santafe(DM)	2016	General	Telematics Unit	Read Fault Code	
Santafe(DM)	2016	General	Telematics Unit	Clear Fault Memory	
Santafe(DM)	2016	General	IMM(Immobilizer)	Read Fault Code	
Santafe(DM)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(DM)	2016	General	IMM(Immobilizer)	Read Data Stream	
Santafe(DM)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Santafe(DM)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(DM)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(DM)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(DM)	2016	General	Lane Keeping Assist System	Version Information	
Santafe(DM)	2016	General	Lane Keeping Assist System	Read Fault Code	
Santafe(DM)	2016	General	Lane Keeping Assist System	Clear Fault Memory	
Santafe(DM)	2016	General	Lane Keeping Assist System	Read Data Stream	
Santafe(DM)	2016	General	Lane Keeping Assist System	Special Function	SPC Calibration
Santafe(DM)	2016	General	Lane Keeping Assist System	Special Function	SPTAC Calibration
Santafe(DM)	2016	General	Lane Keeping Assist System	Special Function	LDWS Variant Coding
Santafe(DM)	2016	General	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(DM)	2016	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(DM)	2016	General	TCM(Transmission Control Module)	Special Function	Automatic-Learning Mode
Santafe(DM)	2016	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle
					Sensor(Sas)Calibration
Santafe(DM)	2016	General	Power Tail Gate	Version Information	
Santafe(DM)	2016	General	Power Tail Gate	Read Fault Code	
Santafe(DM)	2016	General	Power Tail Gate	Clear Fault Memory	
Santafe(DM)	2016	General	Power Tail Gate	Read Data Stream	
Santafe(DM)	2016	General	Power Tail Gate	Special Function	Power Trunk Mode
Santafe(DM)	2016	General	Power Tail Gate	Special Function	Configuration
Santafe(DM)	2016	General	Power Tail Gate	Special Function	User Option
Santafe(DM)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe(DM)	2016	General	EPS(Electronic Power Steering)	Special Function	Steering Angle
					Sensor(Sas)Calibration
Santafe(DM)	2016	General	Smart Key	Version Information	
Santafe(DM)	2016	General	Smart Key	Read Fault Code	
Santafe(DM)	2016	General	Smart Key	Clear Fault Memory	
Santafe(DM)	2016	General	Smart Key	Read Data Stream	
Santafe(DM)	2016	General	Smart Key	Actuation Test	
Santafe(DM)	2016	General	Smart Key	Special Function	User Option
Santafe(DM)	2016	General	Smart Key	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Santafe(DM)	2016	General	Smart Key	Special Function	ESCL Status Information
Santafe(DM)	2016	General	Smart Key	Special Function	FOB Key Status Information
Santafe(DM)	2016	General	Smart Key	Special Function	Serial Communication Line Check
Santafe(DM)	2016	General	Smart Key	Special Function	Antenna Status Check
Santafe(DM)	2016	General	Smart Key	Special Function	Neutralization Mode
Santafe(DM)	2016	General	Smart Key	Special Function	SMK Status Information
Santafe(DM)	2016	General	Smart Key	Special Function	Smart Key Code Saving
Santafe(DM)	2016	General	Smart Key	Special Function	Current FOB Key Check
Santafe(DM)	2016	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Santafe(DM)	2016	General	Lane Departure Warning System	Special Function	LDWS Region Code
Santafe(DM)	2016	General	Around View Monitor System	Version Information	
Santafe(DM)	2016	General	Around View Monitor System	Read Fault Code	
Santafe(DM)	2016	General	Around View Monitor System	Clear Fault Memory	
Santafe(DM)	2016	General	Around View Monitor System	Read Data Stream	
Santafe(DM)	2016	General	Around View Monitor System	Actuation Test	
Santafe(DM)	2016	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(DM)	2016	General	IMM(Immobilizer)	Special Function	Learnt Keys
Santafe(DM)	2016	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Santafe(DM)	2016	General	Transmitter Code Saving	Read Data Stream	
Santafe(DM)	2015	General	ECM(Engine Control Module)	Version Information	
Santafe(DM)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(DM)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(DM)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(DM)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(DM)	2015	General	ECM(Engine Control Module)	Actuation Test	
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(DM)	2015	General	TCM(Transmission Control Module)	Version Information	
Santafe(DM)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(DM)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(DM)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(DM)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(DM)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(DM)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(DM)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe(DM)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(DM)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(DM)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(DM)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(DM)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding

model	year	area	system	function	subfunction
Santafe(DM)	2015	General	AC(Air Conditioning)	Version Information	
Santafe(DM)	2015	General	AC(Air Conditioning)	Read Fault Code	
Santafe(DM)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(DM)	2015	General	AC(Air Conditioning)	Read Data Stream	
Santafe(DM)	2015	General	AC(Air Conditioning)	Actuation Test	
Santafe(DM)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(DM)	2015	General	BCM(Body Control Module)	Version Information	
Santafe(DM)	2015	General	BCM(Body Control Module)	Read Fault Code	
Santafe(DM)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe(DM)	2015	General	BCM(Body Control Module)	Read Data Stream	
Santafe(DM)	2015	General	BCM(Body Control Module)	Actuation Test	
Santafe(DM)	2015	General	BCM(Body Control Module)	Special Function	User Option
Santafe(DM)	2015	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe(DM)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(DM)	2015	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(DM)	2015	General	Power Tail Gate	Version Information	
Santafe(DM)	2015	General	Power Tail Gate	Read Fault Code	
Santafe(DM)	2015	General	Power Tail Gate	Clear Fault Memory	
Santafe(DM)	2015	General	Power Tail Gate	Read Data Stream	
Santafe(DM)	2015	General	EPS(Electronic Power Steering)	Version Information	
Santafe(DM)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(DM)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(DM)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(DM)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(DM)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(DM)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Santafe(DM)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)

model	year	area	system	function	subfunction
Santafe(DM)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(DM)	2015	General	4WD Control	Version Information	
Santafe(DM)	2015	General	4WD Control	Read Fault Code	
Santafe(DM)	2015	General	4WD Control	Clear Fault Memory	
Santafe(DM)	2015	General	4WD Control	Read Data Stream	
Santafe(DM)	2015	General	4WD Control	Actuation Test	
Santafe(DM)	2015	General	4WD Control	Special Function	Clutch Learning Read
Santafe(DM)	2015	General	4WD Control	Special Function	Clutch Learning Reset
Santafe(DM)	2015	General	4WD Control	Special Function	Clutch Learning Write
Santafe(DM)	2015	General	Head Lamp	Version Information	
Santafe(DM)	2015	General	Head Lamp	Read Fault Code	
Santafe(DM)	2015	General	Head Lamp	Clear Fault Memory	
Santafe(DM)	2015	General	Head Lamp	Read Data Stream	
Santafe(DM)	2015	General	Head Lamp	Actuation Test	
Santafe(DM)	2015	General	Head Lamp	Special Function	Calibration
Santafe(DM)	2015	General	Head Lamp	Special Function	Parameter Download
Santafe(DM)	2015	General	Head Lamp	Special Function	Headlamp Leveling
Santafe(DM)	2015	General	Head Lamp	Special Function	Parameter Setting
Santafe(DM)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(DM)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(DM)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(DM)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(DM)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(DM)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(DM)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(DM)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(DM)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(DM)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST

model	year	area	system	function	subfunction
Santafe(DM)	2015	General	IMM(Immobilizer)	Read Fault Code	
Santafe(DM)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(DM)	2015	General	IMM(Immobilizer)	Read Data Stream	
Santafe(DM)	2015	General	IMM(Immobilizer)	Special Function	Password
Santafe(DM)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Santafe(DM)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(DM)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(DM)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(DM)	2015	General	Smart Key Unit	Version Information	
Santafe(DM)	2015	General	Smart Key Unit	Read Fault Code	
Santafe(DM)	2015	General	Smart Key Unit	Clear Fault Memory	
Santafe(DM)	2015	General	Smart Key Unit	Read Data Stream	
Santafe(DM)	2015	General	Smart Key Unit	Actuation Test	
Santafe(DM)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(DM)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe(DM)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(DM)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Santafe(DM)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(DM)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Santafe(DM)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Santafe(DM)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe(DM)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(DM)	2015	General	Transmitter Code Saving	Read Data Stream	
Santafe(DM)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(DM)	2015	General	CCS(Cruise Control System)	Version Information	
Santafe(DM)	2015	General	CCS(Cruise Control System)	Read Fault Code	
Santafe(DM)	2015	General	CCS(Cruise Control System)	Clear Fault Memory	
Santafe(DM)	2015	General	CCS(Cruise Control System)	Read Data Stream	
Santafe(DM)	2015	General	CCS(Cruise Control System)	Special Function	SCC Variant Coding
Santafe(DM)	2015	General	CCS(Cruise Control System)	Special Function	SCC Alignment

model	year	area	system	function	subfunction
Santafe(DM)	2015	General	Lane Departure Warning System	Version Information	
Santafe(DM)	2015	General	Lane Departure Warning System	Read Fault Code	
Santafe(DM)	2015	General	Lane Departure Warning System	Clear Fault Memory	
Santafe(DM)	2015	General	Lane Departure Warning System	Read Data Stream	
Santafe(DM)	2015	General	Lane Departure Warning System	Special Function	LDWS Region Code
Santafe(DM)	2015	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Santafe(DM)	2015	General	Smart Parking Assist System	Version Information	
Santafe(DM)	2015	General	Smart Parking Assist System	Read Fault Code	
Santafe(DM)	2015	General	Smart Parking Assist System	Clear Fault Memory	
Santafe(DM)	2015	General	Smart Parking Assist System	Read Data Stream	
Santafe(DM)	2015	General	Smart Parking Assist System	Actuation Test	
Santafe(DM)	2015	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Santafe(DM)	2015	General	Active Hood System	Version Information	
Santafe(DM)	2015	General	Active Hood System	Read Fault Code	
Santafe(DM)	2015	General	Active Hood System	Clear Fault Memory	
Santafe(DM)	2015	General	Active Hood System	Read Data Stream	
Santafe(DM)	2015	General	Active Hood System	Actuation Test	
Santafe(DM)	2015	General	Around View Monitor System	Version Information	
Santafe(DM)	2015	General	Around View Monitor System	Read Fault Code	
Santafe(DM)	2015	General	Around View Monitor System	Clear Fault Memory	
Santafe(DM)	2015	General	Around View Monitor System	Read Data Stream	
Santafe(DM)	2015	General	Around View Monitor System	Actuation Test	
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(DM)	2015	General	TCM(Transmission Control Module)	Special Function	Automatic-Learning Mode Auto Detected
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Special Function	Configuration Reset(FSP/FSC)Only
Santafe(DM)	2015	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(DM)	2015	General	Power Tail Gate	Special Function	Power Trunk Mode Configuration

model	year	area	system	function	subfunction
Santafe(DM)	2015	General	Power Tail Gate	Special Function	User Option
Santafe(DM)	2015	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe(DM)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe(DM)	2015	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe(DM)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe(DM)	2015	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe(DM)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe(DM)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe(DM)	2015	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(DM)	2015	General	Driveshaft	Version Information	
Santafe(DM)	2015	General	Driveshaft	Read Fault Code	
Santafe(DM)	2015	General	Driveshaft	Clear Fault Memory	
Santafe(DM)	2015	General	Driveshaft	Read Data Stream	
Santafe(DM)	2015	General	Driveshaft	Actuation Test	
Santafe(DM)	2015	General	Driveshaft	Special Function	Clutch Learning Read
Santafe(DM)	2015	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe(DM)	2015	General	Driveshaft	Special Function	Clutch Learning Write
Santafe(DM)	2015	General	Smart Key	Version Information	
Santafe(DM)	2015	General	Smart Key	Read Fault Code	
Santafe(DM)	2015	General	Smart Key	Clear Fault Memory	
Santafe(DM)	2015	General	Smart Key	Read Data Stream	
Santafe(DM)	2015	General	Smart Key	Actuation Test	
Santafe(DM)	2015	General	Smart Key	Special Function	User Option
Santafe(DM)	2015	General	Smart Key	Special Function	ESCL Open Status Check
Santafe(DM)	2015	General	Smart Key	Special Function	ESCL Status Information
Santafe(DM)	2015	General	Smart Key	Special Function	FOB Key Status Information
Santafe(DM)	2015	General	Smart Key	Special Function	Serial Communication Line Check
Santafe(DM)	2015	General	Smart Key	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Santafe(DM)	2015	General	Smart Key	Special Function	Neutralization Mode
Santafe(DM)	2015	General	Smart Key	Special Function	SMK Status Information
Santafe(DM)	2015	General	Smart Key	Special Function	Smart Key Code Saving
Santafe(DM)	2015	General	Smart Key	Special Function	Current FOB Key Check
Santafe(DM)	2015	General	Telematics Unit	Version Information	
Santafe(DM)	2015	General	Telematics Unit	Read Fault Code	
Santafe(DM)	2015	General	Telematics Unit	Clear Fault Memory	
Santafe(DM)	2015	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(DM)	2015	General	IMM(Immobilizer)	Special Function	Learnt Keys
Santafe(DM)	2015	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(DM)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(DM)	2014	General	ECM(Engine Control Module)	Version Information	
Santafe(DM)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(DM)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(DM)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(DM)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(DM)	2014	General	ECM(Engine Control Module)	Actuation Test	
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting

model	year	area	system	function	subfunction
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(DM)	2014	General	TCM(Transmission Control Module)	Version Information	
Santafe(DM)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(DM)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(DM)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(DM)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(DM)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(DM)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(DM)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe(DM)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(DM)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(DM)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(DM)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(DM)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe(DM)	2014	General	AC(Air Conditioning)	Version Information	
Santafe(DM)	2014	General	AC(Air Conditioning)	Read Fault Code	
Santafe(DM)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(DM)	2014	General	AC(Air Conditioning)	Read Data Stream	
Santafe(DM)	2014	General	AC(Air Conditioning)	Actuation Test	
Santafe(DM)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(DM)	2014	General	BCM(Body Control Module)	Version Information	
Santafe(DM)	2014	General	BCM(Body Control Module)	Read Fault Code	
Santafe(DM)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe(DM)	2014	General	BCM(Body Control Module)	Read Data Stream	
Santafe(DM)	2014	General	BCM(Body Control Module)	Actuation Test	
Santafe(DM)	2014	General	BCM(Body Control Module)	Special Function	User Option
Santafe(DM)	2014	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe(DM)	2014	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(DM)	2014	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(DM)	2014	General	EPS(Electronic Power Steering)	Version Information	
Santafe(DM)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(DM)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(DM)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(DM)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(DM)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(DM)	2014	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Santafe(DM)	2014	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Santafe(DM)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(DM)	2014	General	4WD Control	Version Information	
Santafe(DM)	2014	General	4WD Control	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(DM)	2014	General	4WD Control	Clear Fault Memory	
Santafe(DM)	2014	General	4WD Control	Read Data Stream	
Santafe(DM)	2014	General	4WD Control	Actuation Test	
Santafe(DM)	2014	General	4WD Control	Special Function	Clutch Learning Read
Santafe(DM)	2014	General	4WD Control	Special Function	Clutch Learning Reset
Santafe(DM)	2014	General	4WD Control	Special Function	Clutch Learning Write
Santafe(DM)	2014	General	Head Lamp	Version Information	
Santafe(DM)	2014	General	Head Lamp	Read Fault Code	
Santafe(DM)	2014	General	Head Lamp	Clear Fault Memory	
Santafe(DM)	2014	General	Head Lamp	Read Data Stream	
Santafe(DM)	2014	General	Head Lamp	Actuation Test	
Santafe(DM)	2014	General	Head Lamp	Special Function	Calibration
Santafe(DM)	2014	General	Head Lamp	Special Function	Parameter Download
Santafe(DM)	2014	General	Head Lamp	Special Function	Headlamp Leveling
Santafe(DM)	2014	General	Head Lamp	Special Function	Parameter Setting
Santafe(DM)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(DM)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(DM)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(DM)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(DM)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(DM)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(DM)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(DM)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(DM)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(DM)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(DM)	2014	General	IMM(Immobilizer)	Read Fault Code	
Santafe(DM)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(DM)	2014	General	IMM(Immobilizer)	Read Data Stream	
Santafe(DM)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Santafe(DM)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(DM)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(DM)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(DM)	2014	General	Smart Key Unit	Version Information	
Santafe(DM)	2014	General	Smart Key Unit	Read Fault Code	
Santafe(DM)	2014	General	Smart Key Unit	Clear Fault Memory	
Santafe(DM)	2014	General	Smart Key Unit	Read Data Stream	
Santafe(DM)	2014	General	Smart Key Unit	Actuation Test	
Santafe(DM)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(DM)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe(DM)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(DM)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Santafe(DM)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(DM)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Santafe(DM)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Santafe(DM)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe(DM)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(DM)	2014	General	Transmitter Code Saving	Read Data Stream	
Santafe(DM)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(DM)	2014	General	Lane Departure Warning System	Version Information	
Santafe(DM)	2014	General	Lane Departure Warning System	Read Fault Code	
Santafe(DM)	2014	General	Lane Departure Warning System	Clear Fault Memory	
Santafe(DM)	2014	General	Lane Departure Warning System	Read Data Stream	
Santafe(DM)	2014	General	Lane Departure Warning System	Special Function	LDWS Region Code
Santafe(DM)	2014	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Santafe(DM)	2014	General	Smart Parking Assist System	Version Information	
Santafe(DM)	2014	General	Smart Parking Assist System	Read Fault Code	
Santafe(DM)	2014	General	Smart Parking Assist System	Clear Fault Memory	
Santafe(DM)	2014	General	Smart Parking Assist System	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(DM)	2014	General	Smart Parking Assist System	Actuation Test	
Santafe(DM)	2014	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Santafe(DM)	2014	General	Active Hood System	Version Information	
Santafe(DM)	2014	General	Active Hood System	Read Fault Code	
Santafe(DM)	2014	General	Active Hood System	Clear Fault Memory	
Santafe(DM)	2014	General	Active Hood System	Read Data Stream	
Santafe(DM)	2014	General	Active Hood System	Actuation Test	
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(DM)	2014	General	TCM(Transmission Control Module)	Special Function	Automatic-Learning Mode
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC/Only)
Santafe(DM)	2014	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(DM)	2014	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe(DM)	2014	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe(DM)	2014	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe(DM)	2014	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe(DM)	2014	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe(DM)	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe(DM)	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe(DM)	2014	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(DM)	2014	General	Driveshaft	Version Information	
Santafe(DM)	2014	General	Driveshaft	Read Fault Code	
Santafe(DM)	2014	General	Driveshaft	Clear Fault Memory	
Santafe(DM)	2014	General	Driveshaft	Read Data Stream	
Santafe(DM)	2014	General	Driveshaft	Actuation Test	
Santafe(DM)	2014	General	Driveshaft	Special Function	Clutch Learning Read
Santafe(DM)	2014	General	Driveshaft	Special Function	Clutch Learning Reset

model	year	area	system	function	subfunction
Santafe(DM)	2014	General	Driveshaft	Special Function	Clutch Learning Write
Santafe(DM)	2014	General	Smart Key	Version Information	
Santafe(DM)	2014	General	Smart Key	Read Fault Code	
Santafe(DM)	2014	General	Smart Key	Clear Fault Memory	
Santafe(DM)	2014	General	Smart Key	Read Data Stream	
Santafe(DM)	2014	General	Smart Key	Actuation Test	
Santafe(DM)	2014	General	Smart Key	Special Function	User Option
Santafe(DM)	2014	General	Smart Key	Special Function	ESCL Open Status Check
Santafe(DM)	2014	General	Smart Key	Special Function	ESCL Status Information
Santafe(DM)	2014	General	Smart Key	Special Function	FOB Key Status Information
Santafe(DM)	2014	General	Smart Key	Special Function	Serial Communication Line Check
Santafe(DM)	2014	General	Smart Key	Special Function	Antenna Status Check
Santafe(DM)	2014	General	Smart Key	Special Function	Neutralization Mode
Santafe(DM)	2014	General	Smart Key	Special Function	SMK Status Information
Santafe(DM)	2014	General	Smart Key	Special Function	Smart Key Code Saving
Santafe(DM)	2014	General	Smart Key	Special Function	Current FOB Key Check
Santafe(DM)	2014	General	Telematics Unit	Version Information	
Santafe(DM)	2014	General	Telematics Unit	Read Fault Code	
Santafe(DM)	2014	General	Telematics Unit	Clear Fault Memory	
Santafe(DM)	2014	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(DM)	2014	General	IMM(Immobilizer)	Special Function	Learnt Keys
Santafe(DM)	2014	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove

model	year	area	system	function	subfunction
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(DM)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(DM)	2013	General	ECM(Engine Control Module)	Version Information	
Santafe(DM)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(DM)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(DM)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(DM)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(DM)	2013	General	ECM(Engine Control Module)	Actuation Test	
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(DM)	2013	General	TCM(Transmission Control Module)	Version Information	
Santafe(DM)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(DM)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(DM)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(DM)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(DM)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(DM)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(DM)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe(DM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(DM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(DM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(DM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(DM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe(DM)	2013	General	AC(Air Conditioning)	Version Information	
Santafe(DM)	2013	General	AC(Air Conditioning)	Read Fault Code	
Santafe(DM)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(DM)	2013	General	AC(Air Conditioning)	Read Data Stream	
Santafe(DM)	2013	General	AC(Air Conditioning)	Actuation Test	
Santafe(DM)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(DM)	2013	General	BCM(Body Control Module)	Version Information	
Santafe(DM)	2013	General	BCM(Body Control Module)	Read Fault Code	
Santafe(DM)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe(DM)	2013	General	BCM(Body Control Module)	Read Data Stream	
Santafe(DM)	2013	General	BCM(Body Control Module)	Actuation Test	
Santafe(DM)	2013	General	BCM(Body Control Module)	Special Function	User Option
Santafe(DM)	2013	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe(DM)	2013	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(DM)	2013	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(DM)	2013	General	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Santafe(DM)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(DM)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(DM)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(DM)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(DM)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(DM)	2013	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Santafe(DM)	2013	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Santafe(DM)	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(DM)	2013	General	4WD Control	Version Information	
Santafe(DM)	2013	General	4WD Control	Read Fault Code	
Santafe(DM)	2013	General	4WD Control	Clear Fault Memory	
Santafe(DM)	2013	General	4WD Control	Read Data Stream	
Santafe(DM)	2013	General	4WD Control	Actuation Test	
Santafe(DM)	2013	General	4WD Control	Special Function	Clutch Learning Read
Santafe(DM)	2013	General	4WD Control	Special Function	Clutch Learning Reset
Santafe(DM)	2013	General	4WD Control	Special Function	Clutch Learning Write
Santafe(DM)	2013	General	Head Lamp	Version Information	
Santafe(DM)	2013	General	Head Lamp	Read Fault Code	
Santafe(DM)	2013	General	Head Lamp	Clear Fault Memory	
Santafe(DM)	2013	General	Head Lamp	Read Data Stream	
Santafe(DM)	2013	General	Head Lamp	Actuation Test	
Santafe(DM)	2013	General	Head Lamp	Special Function	Calibration
Santafe(DM)	2013	General	Head Lamp	Special Function	Parameter Download
Santafe(DM)	2013	General	Head Lamp	Special Function	Headlamp Leveling
Santafe(DM)	2013	General	Head Lamp	Special Function	Parameter Setting
Santafe(DM)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(DM)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(DM)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(DM)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(DM)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(DM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(DM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(DM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(DM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(DM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(DM)	2013	General	IMM(Immobilizer)	Read Fault Code	
Santafe(DM)	2013	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(DM)	2013	General	IMM(Immobilizer)	Read Data Stream	
Santafe(DM)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(DM)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(DM)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(DM)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(DM)	2013	General	Smart Key Unit	Version Information	
Santafe(DM)	2013	General	Smart Key Unit	Read Fault Code	
Santafe(DM)	2013	General	Smart Key Unit	Clear Fault Memory	
Santafe(DM)	2013	General	Smart Key Unit	Read Data Stream	
Santafe(DM)	2013	General	Smart Key Unit	Actuation Test	
Santafe(DM)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(DM)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe(DM)	2013	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(DM)	2013	General	Smart Key Unit	Special Function	ESCL Status Information
Santafe(DM)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(DM)	2013	General	Smart Key Unit	Special Function	SMK Status Information
Santafe(DM)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check
Santafe(DM)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe(DM)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Santafe(DM)	2013	General	Transmitter Code Saving	Read Data Stream	
Santafe(DM)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(DM)	2013	General	Lane Departure Warning System	Version Information	
Santafe(DM)	2013	General	Lane Departure Warning System	Read Fault Code	
Santafe(DM)	2013	General	Lane Departure Warning System	Clear Fault Memory	
Santafe(DM)	2013	General	Lane Departure Warning System	Read Data Stream	
Santafe(DM)	2013	General	Lane Departure Warning System	Special Function	LDWS Region Code
Santafe(DM)	2013	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Santafe(DM)	2013	General	Smart Parking Assist System	Version Information	
Santafe(DM)	2013	General	Smart Parking Assist System	Read Fault Code	
Santafe(DM)	2013	General	Smart Parking Assist System	Clear Fault Memory	
Santafe(DM)	2013	General	Smart Parking Assist System	Read Data Stream	
Santafe(DM)	2013	General	Smart Parking Assist System	Actuation Test	
Santafe(DM)	2013	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Santafe(DM)	2013	General	Active Hood System	Version Information	
Santafe(DM)	2013	General	Active Hood System	Read Fault Code	
Santafe(DM)	2013	General	Active Hood System	Clear Fault Memory	
Santafe(DM)	2013	General	Active Hood System	Read Data Stream	
Santafe(DM)	2013	General	Active Hood System	Actuation Test	
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Santafe(DM)	2013	General	TCM(Transmission Control Module)	Special Function	Automatic-Learning Mode Auto Detected
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Special Function	Configuration Reset(FSP/ESC/Only)
Santafe(DM)	2013	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(DM)	2013	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe(DM)	2013	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe(DM)	2013	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe(DM)	2013	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(DM)	2013	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe(DM)	2013	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe(DM)	2013	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe(DM)	2013	General	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe(DM)	2013	General	Driveshaft	Version Information	
Santafe(DM)	2013	General	Driveshaft	Read Fault Code	
Santafe(DM)	2013	General	Driveshaft	Clear Fault Memory	
Santafe(DM)	2013	General	Driveshaft	Read Data Stream	
Santafe(DM)	2013	General	Driveshaft	Actuation Test	
Santafe(DM)	2013	General	Driveshaft	Special Function	Clutch Learning Read
Santafe(DM)	2013	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe(DM)	2013	General	Driveshaft	Special Function	Clutch Learning Write
Santafe(DM)	2013	General	Smart Key	Version Information	
Santafe(DM)	2013	General	Smart Key	Read Fault Code	
Santafe(DM)	2013	General	Smart Key	Clear Fault Memory	
Santafe(DM)	2013	General	Smart Key	Read Data Stream	
Santafe(DM)	2013	General	Smart Key	Actuation Test	
Santafe(DM)	2013	General	Smart Key	Special Function	User Option
Santafe(DM)	2013	General	Smart Key	Special Function	ESCL Open Status Check
Santafe(DM)	2013	General	Smart Key	Special Function	ESCL Status Information
Santafe(DM)	2013	General	Smart Key	Special Function	FOB Key Status Information
Santafe(DM)	2013	General	Smart Key	Special Function	Serial Communication Line Check
Santafe(DM)	2013	General	Smart Key	Special Function	Antenna Status Check
Santafe(DM)	2013	General	Smart Key	Special Function	Neutralization Mode
Santafe(DM)	2013	General	Smart Key	Special Function	SMK Status Information
Santafe(DM)	2013	General	Smart Key	Special Function	Smart Key Code Saving
Santafe(DM)	2013	General	Smart Key	Special Function	Current FOB Key Check
Santafe(DM)	2013	General	Telematics Unit	Version Information	

model	year	area	system	function	subfunction
Santafe(DM)	2013	General	Telematics Unit	Read Fault Code	
Santafe(DM)	2013	General	Telematics Unit	Clear Fault Memory	
Santafe(DM)	2013	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(DM)	2013	General	IMM(Immobilizer)	Special Function	Learnt Keys
Santafe(DM)	2013	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(DM)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Version Information	
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Actuation Test	
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(DMI)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(DMI)	2018	General	TCM(Transmission Control Module)	Version Information	
Santafe(DMI)	2018	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(DMI)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(DMI)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(DMI)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(DMI)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(DMI)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(DMI)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(DMI)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(DMI)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(DMI)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(DMI)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(DMI)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(DMI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Santafe(DMI)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(DMI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(DMI)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(DMI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(DMI)	2018	General	Electric Parking Brake	Version Information	
Santafe(DMI)	2018	General	Electric Parking Brake	Read Fault Code	
Santafe(DMI)	2018	General	Electric Parking Brake	Clear Fault Memory	
Santafe(DMI)	2018	General	Electric Parking Brake	Read Data Stream	
Santafe(DMI)	2018	General	Electric Parking Brake	Actuation Test	
Santafe(DMI)	2018	General	Electric Parking Brake	Special Function	EPB Variant Coding
Santafe(DMI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(DMI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(DMI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(DMI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(DMI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(DMI)	2018	General	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Santafe(DMI)	2018	General	AC(Air Conditioning)	Read Fault Code	
Santafe(DMI)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(DMI)	2018	General	AC(Air Conditioning)	Read Data Stream	
Santafe(DMI)	2018	General	AC(Air Conditioning)	Actuation Test	
Santafe(DMI)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(DMI)	2018	General	BCM(Body Control Module)	Version Information	
Santafe(DMI)	2018	General	BCM(Body Control Module)	Read Fault Code	
Santafe(DMI)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe(DMI)	2018	General	BCM(Body Control Module)	Read Data Stream	
Santafe(DMI)	2018	General	BCM(Body Control Module)	Actuation Test	
Santafe(DMI)	2018	General	BCM(Body Control Module)	Special Function	User Option
Santafe(DMI)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe(DMI)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(DMI)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(DMI)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(DMI)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(DMI)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(DMI)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(DMI)	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(DMI)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(DMI)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(DMI)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(DMI)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(DMI)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(DMI)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe(DMI)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe(DMI)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe(DMI)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe(DMI)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	

model	year	area	system	function	subfunction
Santafe(DMI)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe(DMI)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe(DMI)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe(DMI)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe(DMI)	2018	General	EPS(Electronic Power Steering)	Version Information	
Santafe(DMI)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(DMI)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(DMI)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(DMI)	2018	General	EPS(Electronic Power Steering)	Read FreezeData	
Santafe(DMI)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(DMI)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(DMI)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(DMI)	2018	General	Driveshaft	Version Information	
Santafe(DMI)	2018	General	Driveshaft	Read Fault Code	
Santafe(DMI)	2018	General	Driveshaft	Clear Fault Memory	
Santafe(DMI)	2018	General	Driveshaft	Read Data Stream	
Santafe(DMI)	2018	General	Driveshaft	Actuation Test	
Santafe(DMI)	2018	General	Driveshaft	Special Function	Clutch Learning Read
Santafe(DMI)	2018	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe(DMI)	2018	General	Driveshaft	Special Function	Clutch Learning Write
Santafe(DMI)	2018	General	Smart Key Unit	Version Information	
Santafe(DMI)	2018	General	Smart Key Unit	Read Fault Code	
Santafe(DMI)	2018	General	Smart Key Unit	Clear Fault Memory	
Santafe(DMI)	2018	General	Smart Key Unit	Read Data Stream	
Santafe(DMI)	2018	General	Smart Key Unit	Actuation Test	
Santafe(DMI)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(DMI)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe(DMI)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Santafe(DMI)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Santafe(DMI)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(DMI)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Santafe(DMI)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Santafe(DMI)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe(DMI)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(DMI)	2018	General	Lane Departure Warning System	Version Information	
Santafe(DMI)	2018	General	Lane Departure Warning System	Read Fault Code	
Santafe(DMI)	2018	General	Lane Departure Warning System	Clear Fault Memory	
Santafe(DMI)	2018	General	Lane Departure Warning System	Read Data Stream	
Santafe(DMI)	2018	General	Lane Departure Warning System	Special Function	LDWS Region Code
Santafe(DMI)	2018	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Santafe(DMI)	2018	General	Smart Parking Assist System	Version Information	
Santafe(DMI)	2018	General	Smart Parking Assist System	Read Fault Code	
Santafe(DMI)	2018	General	Smart Parking Assist System	Clear Fault Memory	
Santafe(DMI)	2018	General	Smart Parking Assist System	Read Data Stream	
Santafe(DMI)	2018	General	Smart Parking Assist System	Actuation Test	
Santafe(DMI)	2018	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Santafe(DMI)	2018	General	Active Hood System	Version Information	
Santafe(DMI)	2018	General	Active Hood System	Read Fault Code	
Santafe(DMI)	2018	General	Active Hood System	Clear Fault Memory	
Santafe(DMI)	2018	General	Active Hood System	Read Data Stream	
Santafe(DMI)	2018	General	Active Hood System	Actuation Test	
Santafe(DMI)	2018	General	IMM(Immobilizer)	Read Fault Code	
Santafe(DMI)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(DMI)	2018	General	IMM(Immobilizer)	Read Data Stream	
Santafe(DMI)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(DMI)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(DMI)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Santafe(DMI)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(DMI)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe(DMI)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Version Information	
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Actuation Test	
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(DMI)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(DMI)	2017	General	TCM(Transmission Control Module)	Version Information	
Santafe(DMI)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(DMI)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(DMI)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(DMI)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(DMI)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(DMI)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(DMI)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(DMI)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(DMI)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(DMI)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(DMI)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(DMI)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(DMI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Santafe(DMI)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(DMI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(DMI)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(DMI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(DMI)	2017	General	Electric Parking Brake	Version Information	
Santafe(DMI)	2017	General	Electric Parking Brake	Read Fault Code	
Santafe(DMI)	2017	General	Electric Parking Brake	Clear Fault Memory	
Santafe(DMI)	2017	General	Electric Parking Brake	Read Data Stream	
Santafe(DMI)	2017	General	Electric Parking Brake	Actuation Test	
Santafe(DMI)	2017	General	Electric Parking Brake	Special Function	EPB Variant Coding
Santafe(DMI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(DMI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(DMI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(DMI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(DMI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(DMI)	2017	General	AC(Air Conditioning)	Version Information	
Santafe(DMI)	2017	General	AC(Air Conditioning)	Read Fault Code	
Santafe(DMI)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(DMI)	2017	General	AC(Air Conditioning)	Read Data Stream	
Santafe(DMI)	2017	General	AC(Air Conditioning)	Actuation Test	
Santafe(DMI)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(DMI)	2017	General	BCM(Body Control Module)	Version Information	
Santafe(DMI)	2017	General	BCM(Body Control Module)	Read Fault Code	
Santafe(DMI)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe(DMI)	2017	General	BCM(Body Control Module)	Read Data Stream	
Santafe(DMI)	2017	General	BCM(Body Control Module)	Actuation Test	
Santafe(DMI)	2017	General	BCM(Body Control Module)	Special Function	User Option
Santafe(DMI)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting

model	year	area	system	function	subfunction
Santafe(DMI)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(DMI)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(DMI)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(DMI)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(DMI)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(DMI)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(DMI)	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(DMI)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(DMI)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(DMI)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(DMI)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(DMI)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(DMI)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe(DMI)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe(DMI)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe(DMI)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe(DMI)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe(DMI)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe(DMI)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe(DMI)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe(DMI)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe(DMI)	2017	General	EPS(Electronic Power Steering)	Version Information	
Santafe(DMI)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(DMI)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(DMI)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(DMI)	2017	General	EPS(Electronic Power Steering)	Read FreezeData	
Santafe(DMI)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(DMI)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Santafe(DMI)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(DMI)	2017	General	Driveshaft	Version Information	
Santafe(DMI)	2017	General	Driveshaft	Read Fault Code	
Santafe(DMI)	2017	General	Driveshaft	Clear Fault Memory	
Santafe(DMI)	2017	General	Driveshaft	Read Data Stream	
Santafe(DMI)	2017	General	Driveshaft	Actuation Test	
Santafe(DMI)	2017	General	Driveshaft	Special Function	Clutch Learning Read
Santafe(DMI)	2017	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe(DMI)	2017	General	Driveshaft	Special Function	Clutch Learning Write
Santafe(DMI)	2017	General	Smart Key Unit	Version Information	
Santafe(DMI)	2017	General	Smart Key Unit	Read Fault Code	
Santafe(DMI)	2017	General	Smart Key Unit	Clear Fault Memory	
Santafe(DMI)	2017	General	Smart Key Unit	Read Data Stream	
Santafe(DMI)	2017	General	Smart Key Unit	Actuation Test	
Santafe(DMI)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(DMI)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe(DMI)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(DMI)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Santafe(DMI)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(DMI)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Santafe(DMI)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Santafe(DMI)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe(DMI)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(DMI)	2017	General	Lane Departure Warning System	Version Information	
Santafe(DMI)	2017	General	Lane Departure Warning System	Read Fault Code	
Santafe(DMI)	2017	General	Lane Departure Warning System	Clear Fault Memory	
Santafe(DMI)	2017	General	Lane Departure Warning System	Read Data Stream	
Santafe(DMI)	2017	General	Lane Departure Warning System	Special Function	LDWS Region Code

model	year	area	system	function	subfunction
Santafe(DMI)	2017	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Santafe(DMI)	2017	General	Smart Parking Assist System	Version Information	
Santafe(DMI)	2017	General	Smart Parking Assist System	Read Fault Code	
Santafe(DMI)	2017	General	Smart Parking Assist System	Clear Fault Memory	
Santafe(DMI)	2017	General	Smart Parking Assist System	Read Data Stream	
Santafe(DMI)	2017	General	Smart Parking Assist System	Actuation Test	
Santafe(DMI)	2017	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Santafe(DMI)	2017	General	Active Hood System	Version Information	
Santafe(DMI)	2017	General	Active Hood System	Read Fault Code	
Santafe(DMI)	2017	General	Active Hood System	Clear Fault Memory	
Santafe(DMI)	2017	General	Active Hood System	Read Data Stream	
Santafe(DMI)	2017	General	Active Hood System	Actuation Test	
Santafe(DMI)	2017	General	IMM(Immobilizer)	Read Fault Code	
Santafe(DMI)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(DMI)	2017	General	IMM(Immobilizer)	Read Data Stream	
Santafe(DMI)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Checking
Santafe(DMI)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(DMI)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(DMI)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(DMI)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe(DMI)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Version Information	
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Actuation Test	
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data

model	year	area	system	function	subfunction
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(DMI)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(DMI)	2016	General	TCM(Transmission Control Module)	Version Information	
Santafe(DMI)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(DMI)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(DMI)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(DMI)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(DMI)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(DMI)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(DMI)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(DMI)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(DMI)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(DMI)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(DMI)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(DMI)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(DMI)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Santafe(DMI)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(DMI)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(DMI)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(DMI)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(DMI)	2016	General	Electric Parking Brake	Version Information	
Santafe(DMI)	2016	General	Electric Parking Brake	Read Fault Code	
Santafe(DMI)	2016	General	Electric Parking Brake	Clear Fault Memory	
Santafe(DMI)	2016	General	Electric Parking Brake	Read Data Stream	
Santafe(DMI)	2016	General	Electric Parking Brake	Actuation Test	
Santafe(DMI)	2016	General	Electric Parking Brake	Special Function	EPB Variant Coding

model	year	area	system	function	subfunction
Santafe(DMI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(DMI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(DMI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(DMI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(DMI)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(DMI)	2016	General	AC(Air Conditioning)	Version Information	
Santafe(DMI)	2016	General	AC(Air Conditioning)	Read Fault Code	
Santafe(DMI)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(DMI)	2016	General	AC(Air Conditioning)	Read Data Stream	
Santafe(DMI)	2016	General	AC(Air Conditioning)	Actuation Test	
Santafe(DMI)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(DMI)	2016	General	BCM(Body Control Module)	Version Information	
Santafe(DMI)	2016	General	BCM(Body Control Module)	Read Fault Code	
Santafe(DMI)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe(DMI)	2016	General	BCM(Body Control Module)	Read Data Stream	
Santafe(DMI)	2016	General	BCM(Body Control Module)	Actuation Test	
Santafe(DMI)	2016	General	BCM(Body Control Module)	Special Function	User Option
Santafe(DMI)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe(DMI)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(DMI)	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(DMI)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(DMI)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(DMI)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(DMI)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(DMI)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(DMI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(DMI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(DMI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(DMI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Santafe(DMI)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(DMI)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe(DMI)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe(DMI)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe(DMI)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe(DMI)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe(DMI)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe(DMI)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe(DMI)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe(DMI)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe(DMI)	2016	General	EPS(Electronic Power Steering)	Version Information	
Santafe(DMI)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(DMI)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(DMI)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(DMI)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
Santafe(DMI)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(DMI)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(DMI)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(DMI)	2016	General	Driveshaft	Version Information	
Santafe(DMI)	2016	General	Driveshaft	Read Fault Code	
Santafe(DMI)	2016	General	Driveshaft	Clear Fault Memory	
Santafe(DMI)	2016	General	Driveshaft	Read Data Stream	
Santafe(DMI)	2016	General	Driveshaft	Actuation Test	
Santafe(DMI)	2016	General	Driveshaft	Special Function	Clutch Learning Read
Santafe(DMI)	2016	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe(DMI)	2016	General	Driveshaft	Special Function	Clutch Learning Write
Santafe(DMI)	2016	General	Smart Key Unit	Version Information	
Santafe(DMI)	2016	General	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(DMI)	2016	General	Smart Key Unit	Clear Fault Memory	
Santafe(DMI)	2016	General	Smart Key Unit	Read Data Stream	
Santafe(DMI)	2016	General	Smart Key Unit	Actuation Test	
Santafe(DMI)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(DMI)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe(DMI)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(DMI)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Santafe(DMI)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(DMI)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Santafe(DMI)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Santafe(DMI)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe(DMI)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(DMI)	2016	General	Lane Departure Warning System	Version Information	
Santafe(DMI)	2016	General	Lane Departure Warning System	Read Fault Code	
Santafe(DMI)	2016	General	Lane Departure Warning System	Clear Fault Memory	
Santafe(DMI)	2016	General	Lane Departure Warning System	Read Data Stream	
Santafe(DMI)	2016	General	Lane Departure Warning System	Special Function	LDWS Region Code
Santafe(DMI)	2016	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Santafe(DMI)	2016	General	Smart Parking Assist System	Version Information	
Santafe(DMI)	2016	General	Smart Parking Assist System	Read Fault Code	
Santafe(DMI)	2016	General	Smart Parking Assist System	Clear Fault Memory	
Santafe(DMI)	2016	General	Smart Parking Assist System	Read Data Stream	
Santafe(DMI)	2016	General	Smart Parking Assist System	Actuation Test	
Santafe(DMI)	2016	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Santafe(DMI)	2016	General	Active Hood System	Version Information	
Santafe(DMI)	2016	General	Active Hood System	Read Fault Code	
Santafe(DMI)	2016	General	Active Hood System	Clear Fault Memory	
Santafe(DMI)	2016	General	Active Hood System	Read Data Stream	
Santafe(DMI)	2016	General	Active Hood System	Actuation Test	

model	year	area	system	function	subfunction
Santafe(DMI)	2016	General	IMM(Immobilizer)	Read Fault Code	
Santafe(DMI)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(DMI)	2016	General	IMM(Immobilizer)	Read Data Stream	
Santafe(DMI)	2016	General	IMM(Immobilizer)	Special Function	Password
Santafe(DMI)	2016	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Santafe(DMI)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(DMI)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(DMI)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(DMI)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe(DMI)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Version Information	
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Actuation Test	
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Special Function	Component Change
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Special Function	Routine
Santafe(DMI)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(DMI)	2015	General	TCM(Transmission Control Module)	Version Information	
Santafe(DMI)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(DMI)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(DMI)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(DMI)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(DMI)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(DMI)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(DMI)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode

model	year	area	system	function	subfunction
Santafe(DMI)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(DMI)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(DMI)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(DMI)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(DMI)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(DMI)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Santafe(DMI)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(DMI)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(DMI)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(DMI)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(DMI)	2015	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe(DMI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(DMI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(DMI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(DMI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(DMI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Santafe(DMI)	2015	General	AC(Air Conditioning)	Version Information	
Santafe(DMI)	2015	General	AC(Air Conditioning)	Read Fault Code	
Santafe(DMI)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(DMI)	2015	General	AC(Air Conditioning)	Read Data Stream	
Santafe(DMI)	2015	General	AC(Air Conditioning)	Actuation Test	
Santafe(DMI)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Santafe(DMI)	2015	General	BCM(Body Control Module)	Version Information	
Santafe(DMI)	2015	General	BCM(Body Control Module)	Read Fault Code	
Santafe(DMI)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe(DMI)	2015	General	BCM(Body Control Module)	Read Data Stream	
Santafe(DMI)	2015	General	BCM(Body Control Module)	Actuation Test	
Santafe(DMI)	2015	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Santafe(DMI)	2015	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Santafe(DMI)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(DMI)	2015	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(DMI)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(DMI)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(DMI)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(DMI)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(DMI)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(DMI)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(DMI)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(DMI)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(DMI)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(DMI)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(DMI)	2015	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe(DMI)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe(DMI)	2015	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe(DMI)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe(DMI)	2015	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe(DMI)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe(DMI)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe(DMI)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe(DMI)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting
Santafe(DMI)	2015	General	EPS(Electronic Power Steering)	Version Information	
Santafe(DMI)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(DMI)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(DMI)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(DMI)	2015	General	EPS(Electronic Power Steering)	Read FreezeData	
Santafe(DMI)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(DMI)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Santafe(DMI)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(DMI)	2015	General	Driveshaft	Version Information	
Santafe(DMI)	2015	General	Driveshaft	Read Fault Code	
Santafe(DMI)	2015	General	Driveshaft	Clear Fault Memory	
Santafe(DMI)	2015	General	Driveshaft	Read Data Stream	
Santafe(DMI)	2015	General	Driveshaft	Actuation Test	
Santafe(DMI)	2015	General	Driveshaft	Special Function	Clutch Learning Read
Santafe(DMI)	2015	General	Driveshaft	Special Function	Clutch Learning Reset
Santafe(DMI)	2015	General	Driveshaft	Special Function	Clutch Learning Write
Santafe(DMI)	2015	General	Smart Key Unit	Version Information	
Santafe(DMI)	2015	General	Smart Key Unit	Read Fault Code	
Santafe(DMI)	2015	General	Smart Key Unit	Clear Fault Memory	
Santafe(DMI)	2015	General	Smart Key Unit	Read Data Stream	
Santafe(DMI)	2015	General	Smart Key Unit	Actuation Test	
Santafe(DMI)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(DMI)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe(DMI)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(DMI)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Santafe(DMI)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(DMI)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Santafe(DMI)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Santafe(DMI)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe(DMI)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(DMI)	2015	General	Lane Keeping Assist System	Version Information	
Santafe(DMI)	2015	General	Lane Keeping Assist System	Read Fault Code	
Santafe(DMI)	2015	General	Lane Keeping Assist System	Clear Fault Memory	
Santafe(DMI)	2015	General	Lane Keeping Assist System	Read Data Stream	
Santafe(DMI)	2015	General	Lane Keeping Assist System	Special Function	LDWS Region Code

model	year	area	system	function	subfunction
Santafe(DMI)	2015	General	Lane Keeping Assist System	Special Function	LDWS Reference Point Calibration
Santafe(DMI)	2015	General	Smart Parking Assist System	Version Information	
Santafe(DMI)	2015	General	Smart Parking Assist System	Read Fault Code	
Santafe(DMI)	2015	General	Smart Parking Assist System	Clear Fault Memory	
Santafe(DMI)	2015	General	Smart Parking Assist System	Read Data Stream	
Santafe(DMI)	2015	General	Smart Parking Assist System	Actuation Test	
Santafe(DMI)	2015	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Santafe(DMI)	2015	General	Active Hood System	Version Information	
Santafe(DMI)	2015	General	Active Hood System	Read Fault Code	
Santafe(DMI)	2015	General	Active Hood System	Clear Fault Memory	
Santafe(DMI)	2015	General	Active Hood System	Read Data Stream	
Santafe(DMI)	2015	General	Active Hood System	Actuation Test	
Santafe(DMI)	2015	General	IMM(Immobilizer)	Read Fault Code	
Santafe(DMI)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(DMI)	2015	General	IMM(Immobilizer)	Read Data Stream	
Santafe(DMI)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Santafe(DMI)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(DMI)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(DMI)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(DMI)	2015	General	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe(DMI)	2015	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Version Information	
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Actuation Test	
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data

model	year	area	system	function	subfunction
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Santafe(DMI)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Santafe(DMI)	2014	General	TCM(Transmission Control Module)	Version Information	
Santafe(DMI)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(DMI)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(DMI)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(DMI)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Santafe(DMI)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(DMI)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(DMI)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe(DMI)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(DMI)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(DMI)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(DMI)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(DMI)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(DMI)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Santafe(DMI)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(DMI)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(DMI)	2014	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(DMI)	2014	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(DMI)	2014	General	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe(DMI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(DMI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(DMI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(DMI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(DMI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding

model	year	area	system	function	subfunction
Santafe(DMI)	2014	General	AC(Air Conditioning)	Version Information	
Santafe(DMI)	2014	General	AC(Air Conditioning)	Read Fault Code	
Santafe(DMI)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Santafe(DMI)	2014	General	AC(Air Conditioning)	Read Data Stream	
Santafe(DMI)	2014	General	AC(Air Conditioning)	Actuation Test	
Santafe(DMI)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(DMI)	2014	General	BCM(Body Control Module)	Version Information	
Santafe(DMI)	2014	General	BCM(Body Control Module)	Read Fault Code	
Santafe(DMI)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Santafe(DMI)	2014	General	BCM(Body Control Module)	Read Data Stream	
Santafe(DMI)	2014	General	BCM(Body Control Module)	Actuation Test	
Santafe(DMI)	2014	General	BCM(Body Control Module)	Special Function	User Option
Santafe(DMI)	2014	General	EPS(Electronic Power Steering)	Version Information	
Santafe(DMI)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(DMI)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(DMI)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(DMI)	2014	General	EPS(Electronic Power Steering)	Read FreezeData	
Santafe(DMI)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(DMI)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(DMI)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(DMI)	2014	General	4WD Control	Version Information	
Santafe(DMI)	2014	General	4WD Control	Read Fault Code	
Santafe(DMI)	2014	General	4WD Control	Clear Fault Memory	
Santafe(DMI)	2014	General	4WD Control	Read Data Stream	
Santafe(DMI)	2014	General	4WD Control	Actuation Test	
Santafe(DMI)	2014	General	4WD Control	Special Function	Clutch Learning Read
Santafe(DMI)	2014	General	4WD Control	Special Function	Clutch Learning Reset
Santafe(DMI)	2014	General	4WD Control	Special Function	Clutch Learning Write

model	year	area	system	function	subfunction
Santafe(DMI)	2014	General	Head Lamp	Version Information	
Santafe(DMI)	2014	General	Head Lamp	Read Fault Code	
Santafe(DMI)	2014	General	Head Lamp	Clear Fault Memory	
Santafe(DMI)	2014	General	Head Lamp	Read Data Stream	
Santafe(DMI)	2014	General	Head Lamp	Actuation Test	
Santafe(DMI)	2014	General	Head Lamp	Special Function	Calibration
Santafe(DMI)	2014	General	Head Lamp	Special Function	Parameter Download
Santafe(DMI)	2014	General	Head Lamp	Special Function	Headlamp Leveling
Santafe(DMI)	2014	General	Head Lamp	Special Function	Parameter Setting
Santafe(DMI)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(DMI)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(DMI)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(DMI)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(DMI)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(DMI)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(DMI)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(DMI)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(DMI)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(DMI)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(DMI)	2014	General	IMM(Immobilizer)	Read Fault Code	
Santafe(DMI)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(DMI)	2014	General	IMM(Immobilizer)	Read Data Stream	
Santafe(DMI)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(DMI)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(DMI)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(DMI)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(DMI)	2014	General	Smart Key Unit	Version Information	
Santafe(DMI)	2014	General	Smart Key Unit	Read Fault Code	
Santafe(DMI)	2014	General	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(DMI)	2014	General	Smart Key Unit	Read Data Stream	
Santafe(DMI)	2014	General	Smart Key Unit	Actuation Test	
Santafe(DMI)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(DMI)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Santafe(DMI)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(DMI)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Santafe(DMI)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(DMI)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Santafe(DMI)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Santafe(DMI)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Santafe(DMI)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(DMI)	2014	General	Transmitter Code Saving	Read Data Stream	
Santafe(DMI)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(DMI)	2014	General	Lane Departure Warning System	Version Information	
Santafe(DMI)	2014	General	Lane Departure Warning System	Read Fault Code	
Santafe(DMI)	2014	General	Lane Departure Warning System	Clear Fault Memory	
Santafe(DMI)	2014	General	Lane Departure Warning System	Read Data Stream	
Santafe(DMI)	2014	General	Lane Departure Warning System	Special Function	LDWS Region Code
Santafe(DMI)	2014	General	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Santafe(DMI)	2014	General	Smart Parking Assist System	Version Information	
Santafe(DMI)	2014	General	Smart Parking Assist System	Read Fault Code	
Santafe(DMI)	2014	General	Smart Parking Assist System	Clear Fault Memory	
Santafe(DMI)	2014	General	Smart Parking Assist System	Read Data Stream	
Santafe(DMI)	2014	General	Smart Parking Assist System	Actuation Test	
Santafe(DMI)	2014	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Santafe(DMI)	2014	General	Active Hood System	Version Information	
Santafe(DMI)	2014	General	Active Hood System	Read Fault Code	
Santafe(DMI)	2014	General	Active Hood System	Clear Fault Memory	
Santafe(DMI)	2014	General	Active Hood System	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(DMI)	2014	General	Active Hood System	Actuation Test	
Santafe(DMI)	2014	General	Assist Door Module	Version Information	
Santafe(DMI)	2014	General	Assist Door Module	Read Fault Code	
Santafe(DMI)	2014	General	Assist Door Module	Clear Fault Memory	
Santafe(DMI)	2014	General	Assist Door Module	Read Data Stream	
Santafe(DMI)	2014	General	Assist Door Module	Actuation Test	
Santafe(DMI)	2014	General	Cluster Module	Version Information	
Santafe(DMI)	2014	General	Cluster Module	Read Fault Code	
Santafe(DMI)	2014	General	Cluster Module	Clear Fault Memory	
Santafe(DMI)	2014	General	Cluster Module	Read Data Stream	
Santafe(DMI)	2014	General	Cluster Module	Actuation Test	
Santafe(DMI)	2014	General	Cluster Module	Special Function	Service Reminder Setting
Santafe(DMI)	2014	General	Cluster Module	Special Function	CLU Variant Coding
Santafe(DMI)	2014	General	Driver Door Module	Version Information	
Santafe(DMI)	2014	General	Driver Door Module	Read Fault Code	
Santafe(DMI)	2014	General	Driver Door Module	Clear Fault Memory	
Santafe(DMI)	2014	General	Driver Door Module	Read Data Stream	
Santafe(DMI)	2014	General	Driver Door Module	Actuation Test	
Santafe(DMI)	2014	General	Power Seat Module	Version Information	
Santafe(DMI)	2014	General	Power Seat Module	Read Fault Code	
Santafe(DMI)	2014	General	Power Seat Module	Clear Fault Memory	
Santafe(DMI)	2014	General	Power Seat Module	Read Data Stream	
Santafe(DMI)	2014	General	Power Seat Module	Actuation Test	
Santafe(DMI)	2014	General	Power Seat Module	Special Function	User Option
Santafe(DMI)	2014	General	Power Seat Module	Special Function	Seat Limit Position Setting
Santafe(DMI)	2014	General	Smart Junction Block	Version Information	
Santafe(DMI)	2014	General	Smart Junction Block	Read Fault Code	
Santafe(DMI)	2014	General	Smart Junction Block	Clear Fault Memory	
Santafe(DMI)	2014	General	Smart Junction Block	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(DMI)	2014	General	Smart Junction Block	Actuation Test	
Santafe(DMI)	2014	General	Smart Junction Block	Special Function	User Option
Santafe(SM)	2006	General	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(SM)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(SM)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2006	General	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2006	General	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(SM)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(SM)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(SM)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(SM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(SM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(SM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(SM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(SM)	2006	General	4WD Control	Read Fault Code	
Santafe(SM)	2006	General	4WD Control	Clear Fault Memory	
Santafe(SM)	2006	General	IMM(Immobilizer)	Read Fault Code	
Santafe(SM)	2006	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(SM)	2006	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(SM)	2006	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(SM)	2006	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Santafe(SM)	2006	General	IMM(Immobilizer)	Special Function	Master Key Delete
Santafe(SM)	2006	General	IMM(Immobilizer)	Special Function	Neutral Mode
Santafe(SM)	2006	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Santafe(SM)	2006	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(SM)	2006	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(SM)	2006	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(SM)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(SM)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(SM)	2006	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(SM)	2005	General	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(SM)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(SM)	2005	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2005	General	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2005	General	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(SM)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(SM)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(SM)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(SM)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(SM)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(SM)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(SM)	2005	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(SM)	2005	General	4WD Control	Read Fault Code	
Santafe(SM)	2005	General	4WD Control	Clear Fault Memory	
Santafe(SM)	2005	General	IMM(Immobilizer)	Read Fault Code	
Santafe(SM)	2005	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(SM)	2005	General	IMM(Immobilizer)	Read Data Stream	
Santafe(SM)	2005	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(SM)	2005	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Santafe(SM)	2005	General	IMM(Immobilizer)	Special Function	Master Key Delete
Santafe(SM)	2005	General	IMM(Immobilizer)	Special Function	Neutral Mode
Santafe(SM)	2005	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET

model	year	area	system	function	subfunction
Santafe(SM)	2005	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(SM)	2005	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(SM)	2005	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Santafe(SM)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(SM)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(SM)	2005	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(SM)	2004	General	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2004	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(SM)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(SM)	2004	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2004	General	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2004	General	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2004	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(SM)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(SM)	2004	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(SM)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(SM)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(SM)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(SM)	2004	General	4WD Control	Read Fault Code	
Santafe(SM)	2004	General	4WD Control	Clear Fault Memory	
Santafe(SM)	2004	General	IMM(Immobilizer)	Read Fault Code	
Santafe(SM)	2004	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(SM)	2004	General	IMM(Immobilizer)	Read Data Stream	
Santafe(SM)	2004	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(SM)	2004	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Santafe(SM)	2004	General	IMM(Immobilizer)	Special Function	Master Key Delete
Santafe(SM)	2004	General	IMM(Immobilizer)	Special Function	Neutral Mode
Santafe(SM)	2004	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Santafe(SM)	2004	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode

model	year	area	system	function	subfunction
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(SM)	2004	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(SM)	2004	General	IMM(Immobilizer)	Special Function	Password
Santafe(SM)	2004	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Santafe(SM)	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(SM)	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(SM)	2004	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(SM)	2003	General	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2003	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(SM)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(SM)	2003	General	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Auto Detected
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Belt Timing Test

model	year	area	system	function	subfunction
Santafe(SM)	2003	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2003	General	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(SM)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(SM)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(SM)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(SM)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(SM)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(SM)	2003	General	4WD Control	Read Fault Code	
Santafe(SM)	2003	General	4WD Control	Clear Fault Memory	
Santafe(SM)	2003	General	IMM(Immobilizer)	Read Fault Code	
Santafe(SM)	2003	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(SM)	2003	General	IMM(Immobilizer)	Read Data Stream	
Santafe(SM)	2003	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(SM)	2003	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Santafe(SM)	2003	General	IMM(Immobilizer)	Special Function	Master Key Delete
Santafe(SM)	2003	General	IMM(Immobilizer)	Special Function	Neutral Mode
Santafe(SM)	2003	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET

model	year	area	system	function	subfunction
Santafe(SM)	2003	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(SM)	2003	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Santafe(SM)	2003	General	IMM(Immobilizer)	Special Function	Password
Santafe(SM)	2003	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Santafe(SM)	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(SM)	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(SM)	2003	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(SM)	2002	General	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2002	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(SM)	2002	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(SM)	2002	General	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	Auto Detected
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Santafe(SM)	2002	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2002	General	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(SM)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2002	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(SM)	2002	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2002	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(SM)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(SM)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(SM)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(SM)	2002	General	4WD Control	Read Fault Code	
Santafe(SM)	2002	General	4WD Control	Clear Fault Memory	
Santafe(SM)	2002	General	IMM(Immobilizer)	Read Fault Code	
Santafe(SM)	2002	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(SM)	2002	General	IMM(Immobilizer)	Read Data Stream	
Santafe(SM)	2002	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(SM)	2002	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Santafe(SM)	2002	General	IMM(Immobilizer)	Special Function	Master Key Delete
Santafe(SM)	2002	General	IMM(Immobilizer)	Special Function	Neutral Mode
Santafe(SM)	2002	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Santafe(SM)	2002	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(SM)	2002	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Santafe(SM)	2002	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(SM)	2002	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(SM)	2002	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(SM)	2002	General	IMM(Immobilizer)	Special Function	Teaching
Santafe(SM)	2001	General	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2001	General	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(SM)	2001	General	ECM(Engine Control Module)	Read Data Stream	
Santafe(SM)	2001	General	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Santafe(SM)	2001	General	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2001	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2001	General	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
Santafe(SM)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
Santafe(SM)	2001	General	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2001	General	ABS(Anti-lock Braking System)	Version Information	
Santafe(SM)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(SM)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(SM)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(SM)	2001	General	4WD Control	Read Fault Code	
Santafe(SM)	2001	General	4WD Control	Clear Fault Memory	
Santafe(SM)	2001	General	IMM(Immobilizer)	Read Fault Code	
Santafe(SM)	2001	General	IMM(Immobilizer)	Clear Fault Memory	
Santafe(SM)	2001	General	IMM(Immobilizer)	Read Data Stream	
Santafe(SM)	2001	General	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(SM)	2001	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Santafe(SM)	2001	General	IMM(Immobilizer)	Special Function	Master Key Delete
Santafe(SM)	2001	General	IMM(Immobilizer)	Special Function	Neutral Mode
Santafe(SM)	2001	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Santafe(SM)	2001	General	Transmitter Code Saving	Special Function	Code Saving
Santafe(SM)	2001	General	D 2.0 TCI-D(WGT)	Version Information	
Santafe(SM)	2001	General	D 2.0 TCI-D(WGT)	Read Fault Code	
Santafe(SM)	2001	General	D 2.0 TCI-D(WGT)	Clear Fault Memory	
Santafe(SM)	2001	General	D 2.0 TCI-D(WGT)	Read Data Stream	
Santafe(SM)	2001	General	D 2.0 TCI-D(WGT)	Read FreezeData	
Santafe(SM)	2001	General	D 2.0 TCI-D(WGT)	Actuation Test	
Santafe(SM)	2001	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(SM)	2001	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(SM)	2001	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(SM)	2001	General	IMM(Immobilizer)	Special Function	Teaching
Santamo(M2)	2003	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Santamo(M2)	2003	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Santamo(M2)	2003	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Santamo(M2)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Santamo(M2)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santamo(M2)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Santamo(M2)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santamo(M2)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santamo(M2)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santamo(M2)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Santamo(M2)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santamo(M2)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santamo(M2)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santamo(M2)	2003	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Santamo(M2)	2003	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Santamo(M2)	2003	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Santamo(M2)	2003	General	ECM(Engine Control Module)LPG	Version Information	
Santamo(M2)	2003	General	ECM(Engine Control Module)LPG	Read Fault Code	
Santamo(M2)	2003	General	ECM(Engine Control Module)LPG	Clear Fault Memory	
Santamo(M2)	2003	General	ECM(Engine Control Module)LPG	Read Data Stream	
Santamo(M2)	2003	General	ECM(Engine Control Module)LPG	Actuation Test	
Santamo(M2)	2002	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Santamo(M2)	2002	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Santamo(M2)	2002	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Santamo(M2)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
Santamo(M2)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santamo(M2)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
Santamo(M2)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santamo(M2)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santamo(M2)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santamo(M2)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
Santamo(M2)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santamo(M2)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santamo(M2)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santamo(M2)	2002	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Santamo(M2)	2002	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Santamo(M2)	2002	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	

model	year	area	system	function	subfunction
Santamo(M2)	2002	General	ECM(Engine Control Module)LPG	Version Information	
Santamo(M2)	2002	General	ECM(Engine Control Module)LPG	Read Fault Code	
Santamo(M2)	2002	General	ECM(Engine Control Module)LPG	Clear Fault Memory	
Santamo(M2)	2002	General	ECM(Engine Control Module)LPG	Read Data Stream	
Santamo(M2)	2002	General	ECM(Engine Control Module)LPG	Actuation Test	
Santamo(M2)	2001	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Santamo(M2)	2001	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Santamo(M2)	2001	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Santamo(M2)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
Santamo(M2)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santamo(M2)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
Santamo(M2)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santamo(M2)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santamo(M2)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santamo(M2)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
Santamo(M2)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santamo(M2)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santamo(M2)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santamo(M2)	2001	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Santamo(M2)	2001	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Santamo(M2)	2001	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Santamo(M2)	2001	General	ECM(Engine Control Module)LPG	Version Information	
Santamo(M2)	2001	General	ECM(Engine Control Module)LPG	Read Fault Code	
Santamo(M2)	2001	General	ECM(Engine Control Module)LPG	Clear Fault Memory	
Santamo(M2)	2001	General	ECM(Engine Control Module)LPG	Read Data Stream	
Santamo(M2)	2001	General	ECM(Engine Control Module)LPG	Actuation Test	
Santamo(M2)	2000	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Santamo(M2)	2000	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Santamo(M2)	2000	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	

model	year	area	system	function	subfunction
Santamo(M2)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
Santamo(M2)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santamo(M2)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
Santamo(M2)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santamo(M2)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santamo(M2)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santamo(M2)	2000	General	ABS(Anti-lock Braking System)	Actuation Test	
Santamo(M2)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santamo(M2)	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santamo(M2)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santamo(M2)	2000	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Santamo(M2)	2000	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Santamo(M2)	2000	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Santamo(M2)	2000	General	ECM(Engine Control Module)LPG	Version Information	
Santamo(M2)	2000	General	ECM(Engine Control Module)LPG	Read Fault Code	
Santamo(M2)	2000	General	ECM(Engine Control Module)LPG	Clear Fault Memory	
Santamo(M2)	2000	General	ECM(Engine Control Module)LPG	Read Data Stream	
Santamo(M2)	2000	General	ECM(Engine Control Module)LPG	Actuation Test	
Santamo(M2)	1999	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Santamo(M2)	1999	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Santamo(M2)	1999	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Santamo(M2)	1999	General	TCM(Transmission Control Module)	Read Fault Code	
Santamo(M2)	1999	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santamo(M2)	1999	General	TCM(Transmission Control Module)	Read Data Stream	
Santamo(M2)	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santamo(M2)	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santamo(M2)	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santamo(M2)	1999	General	ABS(Anti-lock Braking System)	Actuation Test	
Santamo(M2)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Santamo(M2)	1999	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santamo(M2)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santamo(M2)	1999	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Santamo(M2)	1999	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Santamo(M2)	1999	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Santamo(M2)	1999	General	ECM(Engine Control Module)LPG	Version Information	
Santamo(M2)	1999	General	ECM(Engine Control Module)LPG	Read Fault Code	
Santamo(M2)	1999	General	ECM(Engine Control Module)LPG	Clear Fault Memory	
Santamo(M2)	1999	General	ECM(Engine Control Module)LPG	Read Data Stream	
Santamo(M2)	1999	General	ECM(Engine Control Module)LPG	Actuation Test	
Santamo(M2)	1998	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Santamo(M2)	1998	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Santamo(M2)	1998	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Santamo(M2)	1998	General	TCM(Transmission Control Module)	Read Fault Code	
Santamo(M2)	1998	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santamo(M2)	1998	General	TCM(Transmission Control Module)	Read Data Stream	
Santamo(M2)	1998	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santamo(M2)	1998	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santamo(M2)	1998	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santamo(M2)	1998	General	ABS(Anti-lock Braking System)	Actuation Test	
Santamo(M2)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santamo(M2)	1998	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santamo(M2)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santamo(M2)	1998	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Santamo(M2)	1998	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Santamo(M2)	1998	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Santamo(M2)	1998	General	ECM(Engine Control Module)LPG	Version Information	
Santamo(M2)	1998	General	ECM(Engine Control Module)LPG	Read Fault Code	
Santamo(M2)	1998	General	ECM(Engine Control Module)LPG	Clear Fault Memory	

model	year	area	system	function	subfunction
Santamo(M2)	1998	General	ECM(Engine Control Module)LPG	Read Data Stream	
Santamo(M2)	1998	General	ECM(Engine Control Module)LPG	Actuation Test	
Santamo(M2)	1997	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Santamo(M2)	1997	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Santamo(M2)	1997	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Santamo(M2)	1997	General	TCM(Transmission Control Module)	Read Fault Code	
Santamo(M2)	1997	General	TCM(Transmission Control Module)	Clear Fault Memory	
Santamo(M2)	1997	General	TCM(Transmission Control Module)	Read Data Stream	
Santamo(M2)	1997	General	ABS(Anti-lock Braking System)	Read Fault Code	
Santamo(M2)	1997	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santamo(M2)	1997	General	ABS(Anti-lock Braking System)	Read Data Stream	
Santamo(M2)	1997	General	ABS(Anti-lock Braking System)	Actuation Test	
Santamo(M2)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santamo(M2)	1997	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santamo(M2)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santamo(M2)	1997	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Santamo(M2)	1997	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Santamo(M2)	1997	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Santamo(M2)	1997	General	ECM(Engine Control Module)LPG	Version Information	
Santamo(M2)	1997	General	ECM(Engine Control Module)LPG	Read Fault Code	
Santamo(M2)	1997	General	ECM(Engine Control Module)LPG	Clear Fault Memory	
Santamo(M2)	1997	General	ECM(Engine Control Module)LPG	Read Data Stream	
Santamo(M2)	1997	General	ECM(Engine Control Module)LPG	Actuation Test	
Scoupe(L1)	1996	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Scoupe(L1)	1996	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Scoupe(L1)	1996	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Scoupe(L1)	1996	General	ECM(Engine Control Module)L4-SOHC	Actuation Test	
Scoupe(L1)	1996	General	ENGINE L4-SOHC TURBO	Read Fault Code	
Scoupe(L1)	1996	General	ENGINE L4-SOHC TURBO	Clear Fault Memory	

model	year	area	system	function	subfunction
Scoupe(L1)	1996	General	ENGINE L4-SOHC TURBO	Read Data Stream	
Scoupe(L1)	1996	General	ENGINE L4-SOHC TURBO	Actuation Test	
Scoupe(L1)	1996	General	TCM(Transmission Control Module)	Read Fault Code	
Scoupe(L1)	1996	General	TCM(Transmission Control Module)	Clear Fault Memory	
Scoupe(L1)	1996	General	TCM(Transmission Control Module)	Read Data Stream	
Scoupe(L1)	1995	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Scoupe(L1)	1995	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Scoupe(L1)	1995	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Scoupe(L1)	1995	General	ECM(Engine Control Module)L4-SOHC	Actuation Test	
Scoupe(L1)	1995	General	ENGINE L4-SOHC TURBO	Read Fault Code	
Scoupe(L1)	1995	General	ENGINE L4-SOHC TURBO	Clear Fault Memory	
Scoupe(L1)	1995	General	ENGINE L4-SOHC TURBO	Read Data Stream	
Scoupe(L1)	1995	General	ENGINE L4-SOHC TURBO	Actuation Test	
Scoupe(L1)	1995	General	TCM(Transmission Control Module)	Read Fault Code	
Scoupe(L1)	1995	General	TCM(Transmission Control Module)	Clear Fault Memory	
Scoupe(L1)	1995	General	TCM(Transmission Control Module)	Read Data Stream	
Scoupe(L1)	1994	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Scoupe(L1)	1994	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Scoupe(L1)	1994	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Scoupe(L1)	1994	General	ECM(Engine Control Module)L4-SOHC	Actuation Test	
Scoupe(L1)	1994	General	ENGINE L4-SOHC TURBO	Read Fault Code	
Scoupe(L1)	1994	General	ENGINE L4-SOHC TURBO	Clear Fault Memory	
Scoupe(L1)	1994	General	ENGINE L4-SOHC TURBO	Read Data Stream	
Scoupe(L1)	1994	General	ENGINE L4-SOHC TURBO	Actuation Test	
Scoupe(L1)	1994	General	TCM(Transmission Control Module)	Read Fault Code	
Scoupe(L1)	1994	General	TCM(Transmission Control Module)	Clear Fault Memory	
Scoupe(L1)	1994	General	TCM(Transmission Control Module)	Read Data Stream	
Scoupe(L1)	1993	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Scoupe(L1)	1993	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	

model	year	area	system	function	subfunction
Scoupe(L1)	1993	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Scoupe(L1)	1993	General	ECM(Engine Control Module)L4-SOHC	Actuation Test	
Scoupe(L1)	1993	General	ENGINE L4-SOHC TURBO	Read Fault Code	
Scoupe(L1)	1993	General	ENGINE L4-SOHC TURBO	Clear Fault Memory	
Scoupe(L1)	1993	General	ENGINE L4-SOHC TURBO	Read Data Stream	
Scoupe(L1)	1993	General	ENGINE L4-SOHC TURBO	Actuation Test	
Scoupe(L1)	1993	General	TCM(Transmission Control Module)	Read Fault Code	
Scoupe(L1)	1993	General	TCM(Transmission Control Module)	Clear Fault Memory	
Scoupe(L1)	1993	General	TCM(Transmission Control Module)	Read Data Stream	
Scoupe(L1)	1992	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Scoupe(L1)	1992	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Scoupe(L1)	1992	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Scoupe(L1)	1992	General	ECM(Engine Control Module)L4-SOHC	Actuation Test	
Scoupe(L1)	1992	General	ENGINE L4-SOHC TURBO	Read Fault Code	
Scoupe(L1)	1992	General	ENGINE L4-SOHC TURBO	Clear Fault Memory	
Scoupe(L1)	1992	General	ENGINE L4-SOHC TURBO	Read Data Stream	
Scoupe(L1)	1992	General	ENGINE L4-SOHC TURBO	Actuation Test	
Scoupe(L1)	1992	General	TCM(Transmission Control Module)	Read Fault Code	
Scoupe(L1)	1992	General	TCM(Transmission Control Module)	Clear Fault Memory	
Scoupe(L1)	1992	General	TCM(Transmission Control Module)	Read Data Stream	
Scoupe(L1)	1991	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Scoupe(L1)	1991	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Scoupe(L1)	1991	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Scoupe(L1)	1991	General	ECM(Engine Control Module)L4-SOHC	Actuation Test	
Scoupe(L1)	1991	General	ENGINE L4-SOHC TURBO	Read Fault Code	
Scoupe(L1)	1991	General	ENGINE L4-SOHC TURBO	Clear Fault Memory	
Scoupe(L1)	1991	General	ENGINE L4-SOHC TURBO	Read Data Stream	
Scoupe(L1)	1991	General	ENGINE L4-SOHC TURBO	Actuation Test	
Scoupe(L1)	1991	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Scoupe(L1)	1991	General	TCM(Transmission Control Module)	Clear Fault Memory	
Scoupe(L1)	1991	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Version Information	
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Sonata Hybrid(LF HEV)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Hybrid(LF HEV)	2018	General	TCM(Transmission Control Module)	Version Information	
Sonata Hybrid(LF HEV)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hybrid(LF HEV)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Sonata Hybrid(LF HEV)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(LF HEV)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(LF HEV)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(LF HEV)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Sonata Hybrid(LF HEV)	2018	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC/Only)
Sonata Hybrid(LF HEV)	2018	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(LF HEV)	2018	General	ABS(Anti-lock Braking System)	Special Function	Learn Pressure Increase Mode
Sonata Hybrid(LF HEV)	2018	General	Electric Parking Brake	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Electric Parking Brake	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Electric Parking Brake	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Electric Parking Brake	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	Electric Parking Brake	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(LF HEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hybrid(LF HEV)	2018	General	AC(Air Conditioning)	Version Information	
Sonata Hybrid(LF HEV)	2018	General	AC(Air Conditioning)	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	BCM(Body Control Module)	Version Information	
Sonata Hybrid(LF HEV)	2018	General	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	BCM(Body Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata Hybrid(LF HEV)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2018	General	BCM(Body Control Module)	Special Function	User Option
Sonata Hybrid(LF HEV)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata Hybrid(LF HEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Hybrid(LF HEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Hybrid(LF HEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Hybrid(LF HEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Hybrid(LF HEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Hybrid(LF HEV)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata Hybrid(LF HEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata Hybrid(LF HEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Sonata Hybrid(LF HEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sonata Hybrid(LF HEV)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata Hybrid(LF HEV)	2018	General	EPS(Electronic Power Steering)	Version Information	
Sonata Hybrid(LF HEV)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata Hybrid(LF HEV)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata Hybrid(LF HEV)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(LF HEV)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata Hybrid(LF HEV)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata Hybrid(LF HEV)	2018	General	Smart Cruise Control	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Smart Cruise Control	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Smart Cruise Control	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Smart Cruise Control	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	Smart Cruise Control	Special Function	Radar Sensor Alignment(SCC/AFD)
Sonata Hybrid(LF HEV)	2018	General	Blind Spot Detection	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Blind Spot Detection	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Blind Spot Detection	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Blind Spot Detection	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	Blind Spot Detection	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata Hybrid(LF HEV)	2018	General	Multi Function Camera	Version Information	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2018	General	Multi Function Camera	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Multi Function Camera	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Multi Function Camera	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	Multi Function Camera	Special Function	SPTAC Calibration
Sonata Hybrid(LF HEV)	2018	General	Smart Parking Assist System	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Smart Parking Assist System	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Smart Parking Assist System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Smart Parking Assist System	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	Smart Parking Assist System	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	Parking Guide System	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Parking Guide System	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Parking Guide System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Parking Guide System	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	Parking Guide System	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	Parking Guide System	Special Function	SVM Calibration
Sonata Hybrid(LF HEV)	2018	General	Active Air Flap	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Active Air Flap	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Active Air Flap	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Active Air Flap	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	Active Air Flap	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	Amplifier	Special Function	AMP Operation Test
Sonata Hybrid(LF HEV)	2018	General	Amplifier	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Amplifier	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Amplifier	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Amplifier	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	Battery Management System	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Battery Management System	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Battery Management System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Battery Management System	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2018	General	Battery Management System	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	Battery Management System	Special Function	SOC Calibration
Sonata Hybrid(LF HEV)	2018	General	Battery Management System	Special Function	Isolation Breakdown Detection Function
Sonata Hybrid(LF HEV)	2018	General	Motor Control System	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Motor Control System	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Motor Control System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Motor Control System	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	Motor Control System	Read FreezeData	
Sonata Hybrid(LF HEV)	2018	General	Motor Control System	Special Function	Electric water Pump
Sonata Hybrid(LF HEV)	2018	General	Motor Control System	Special Function	Motor HCU resolver Calibration
Sonata Hybrid(LF HEV)	2018	General	Telematics Unit	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Telematics Unit	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Telematics Unit	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Virtual Engine Sound System	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Virtual Engine Sound System	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Virtual Engine Sound System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Virtual Engine Sound System	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	Central Gateway	Version Information	
Sonata Hybrid(LF HEV)	2018	General	Central Gateway	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	Central Gateway	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	Central Gateway	Special Function	Erase Network Configuration
Sonata Hybrid(LF HEV)	2018	General	HCU/LDC	Version Information	
Sonata Hybrid(LF HEV)	2018	General	HCU/LDC	Read Fault Code	
Sonata Hybrid(LF HEV)	2018	General	HCU/LDC	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2018	General	HCU/LDC	Read Data Stream	
Sonata Hybrid(LF HEV)	2018	General	HCU/LDC	Actuation Test	
Sonata Hybrid(LF HEV)	2018	General	HCU/LDC	Special Function	Engine Test On
Sonata Hybrid(LF HEV)	2018	General	HCU/LDC	Special Function	Engine Test Off

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2018	General	HCU/LDC	Special Function	LDC Activation Test
Sonata Hybrid(LF HEV)	2018	General	HCU/LDC	Special Function	Compression Pressure Test Of Engine Cylinder
Sonata Hybrid(LF HEV)	2017	General	ECM(Engine Control Module)	Version Information	
Sonata Hybrid(LF HEV)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	ECM(Engine Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Hybrid(LF HEV)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata Hybrid(LF HEV)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata Hybrid(LF HEV)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Hybrid(LF HEV)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Hybrid(LF HEV)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Hybrid(LF HEV)	2017	General	TCM(Transmission Control Module)	Version Information	
Sonata Hybrid(LF HEV)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hybrid(LF HEV)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Sonata Hybrid(LF HEV)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC/Only)

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Special Function	High Pressure Release
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Special Function	Modular Travel
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Special Function	Corner/DTC Calibration
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Sonata Hybrid(LF HEV)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(LF HEV)	2017	General	Electric Parking Brake	Version Information	
Sonata Hybrid(LF HEV)	2017	General	Electric Parking Brake	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	Electric Parking Brake	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	Electric Parking Brake	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	Electric Parking Brake	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(LF HEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hybrid(LF HEV)	2017	General	AC(Air Conditioning)	Version Information	
Sonata Hybrid(LF HEV)	2017	General	AC(Air Conditioning)	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	BCM(Body Control Module)	Version Information	
Sonata Hybrid(LF HEV)	2017	General	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	BCM(Body Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata Hybrid(LF HEV)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2017	General	BCM(Body Control Module)	Special Function	User Option
Sonata Hybrid(LF HEV)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata Hybrid(LF HEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata Hybrid(LF HEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata Hybrid(LF HEV)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sonata Hybrid(LF HEV)	2017	General	EPS(Electronic Power Steering)	Version Information	
Sonata Hybrid(LF HEV)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Hybrid(LF HEV)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Sonata Hybrid(LF HEV)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(LF HEV)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(LF HEV)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata Hybrid(LF HEV)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Version Information	
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata Hybrid(LF HEV)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata Hybrid(LF HEV)	2017	General	Smart Cruise Control	Version Information	
Sonata Hybrid(LF HEV)	2017	General	Smart Cruise Control	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	Smart Cruise Control	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	Smart Cruise Control	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	Smart Cruise Control	Special Function	Radar Sensor Alignment(SCC/AFB)
Sonata Hybrid(LF HEV)	2017	General	Smart Cruise Control	Special Function	Variant Coding
Sonata Hybrid(LF HEV)	2017	General	Blind Spot Detection	Version Information	
Sonata Hybrid(LF HEV)	2017	General	Blind Spot Detection	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	Blind Spot Detection	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	Blind Spot Detection	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	Blind Spot Detection	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata Hybrid(LF HEV)	2017	General	Lane Departure Warning System	Version Information	
Sonata Hybrid(LF HEV)	2017	General	Lane Departure Warning System	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	Lane Departure Warning System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	Lane Departure Warning System	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Sonata Hybrid(LF HEV)	2017	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Sonata Hybrid(LF HEV)	2017	General	Smart Parking Assist System	Version Information	
Sonata Hybrid(LF HEV)	2017	General	Smart Parking Assist System	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	Smart Parking Assist System	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2017	General	Smart Parking Assist System	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	Smart Parking Assist System	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	Active Air Flap	Version Information	
Sonata Hybrid(LF HEV)	2017	General	Active Air Flap	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	Active Air Flap	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	Active Air Flap	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	Active Air Flap	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	Amplifier	Special Function	AMP Operation Test
Sonata Hybrid(LF HEV)	2017	General	Battery Management System	Version Information	
Sonata Hybrid(LF HEV)	2017	General	Battery Management System	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	Battery Management System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	Battery Management System	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	Battery Management System	Read FreezeData	
Sonata Hybrid(LF HEV)	2017	General	Battery Management System	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	Battery Management System	Special Function	SOC Calibration
Sonata Hybrid(LF HEV)	2017	General	Battery Management System	Special Function	Isolation Breakdown Detection Function
Sonata Hybrid(LF HEV)	2017	General	Motor Control System	Version Information	
Sonata Hybrid(LF HEV)	2017	General	Motor Control System	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	Motor Control System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	Motor Control System	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	Motor Control System	Read FreezeData	
Sonata Hybrid(LF HEV)	2017	General	Motor Control System	Special Function	Electric water Pump motor ISO resolver
Sonata Hybrid(LF HEV)	2017	General	Motor Control System	Special Function	Calibration
Sonata Hybrid(LF HEV)	2017	General	Virtual Engine Sound System	Version Information	
Sonata Hybrid(LF HEV)	2017	General	Virtual Engine Sound System	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	Virtual Engine Sound System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	Virtual Engine Sound System	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	Central Gateway	Version Information	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2017	General	Central Gateway	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	Central Gateway	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	Central Gateway	Special Function	Erase Network Configuration
Sonata Hybrid(LF HEV)	2017	General	HCU/LDC	Version Information	
Sonata Hybrid(LF HEV)	2017	General	HCU/LDC	Read Fault Code	
Sonata Hybrid(LF HEV)	2017	General	HCU/LDC	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2017	General	HCU/LDC	Read Data Stream	
Sonata Hybrid(LF HEV)	2017	General	HCU/LDC	Read FreezeData	
Sonata Hybrid(LF HEV)	2017	General	HCU/LDC	Actuation Test	
Sonata Hybrid(LF HEV)	2017	General	HCU/LDC	Special Function	Compression Pressure Test Of Engine Cylinder
Sonata Hybrid(LF HEV)	2017	General	HCU/LDC	Special Function	E/C Fluid Pressure Cal.
Sonata Hybrid(LF HEV)	2017	General	HCU/LDC	Special Function	Engine Test Off
Sonata Hybrid(LF HEV)	2017	General	HCU/LDC	Special Function	Engine Test On
Sonata Hybrid(LF HEV)	2017	General	HCU/LDC	Special Function	LDC Activation Test
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Version Information	
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata Hybrid(LF HEV)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Hybrid(LF HEV)	2016	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hybrid(LF HEV)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Sonata Hybrid(LF HEV)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only)
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Special Function	High Pressure Release Mode
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Special Function	Motor Travel Sensor(DTC)Calibration
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Sonata Hybrid(LF HEV)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(LF HEV)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(LF HEV)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hybrid(LF HEV)	2016	General	AC(Air Conditioning)	Version Information	
Sonata Hybrid(LF HEV)	2016	General	AC(Air Conditioning)	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2016	General	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	BCM(Body Control Module)	Version Information	
Sonata Hybrid(LF HEV)	2016	General	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	BCM(Body Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata Hybrid(LF HEV)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sonata Hybrid(LF HEV)	2016	General	BCM(Body Control Module)	Special Function	User Option
Sonata Hybrid(LF HEV)	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata Hybrid(LF HEV)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata Hybrid(LF HEV)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata Hybrid(LF HEV)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sonata Hybrid(LF HEV)	2016	General	EPS(Electronic Power Steering)	Version Information	
Sonata Hybrid(LF HEV)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Hybrid(LF HEV)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Sonata Hybrid(LF HEV)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(LF HEV)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(LF HEV)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Version Information	
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata Hybrid(LF HEV)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata Hybrid(LF HEV)	2016	General	Blind Spot Detection	Version Information	
Sonata Hybrid(LF HEV)	2016	General	Blind Spot Detection	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	Blind Spot Detection	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	Blind Spot Detection	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	Blind Spot Detection	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata Hybrid(LF HEV)	2016	General	Lane Departure Warning System	Version Information	
Sonata Hybrid(LF HEV)	2016	General	Lane Departure Warning System	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	Lane Departure Warning System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	Lane Departure Warning System	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Sonata Hybrid(LF HEV)	2016	General	Lane Departure Warning System	Special Function	LDWS Variant Coding

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2016	General	Smart Parking Assist System	Version Information	
Sonata Hybrid(LF HEV)	2016	General	Smart Parking Assist System	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	Smart Parking Assist System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	Smart Parking Assist System	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	Smart Parking Assist System	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	Active Air Flap	Version Information	
Sonata Hybrid(LF HEV)	2016	General	Active Air Flap	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	Active Air Flap	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	Active Air Flap	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	Active Air Flap	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	Battery Management System	Version Information	
Sonata Hybrid(LF HEV)	2016	General	Battery Management System	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	Battery Management System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	Battery Management System	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	Battery Management System	Read FreezeData	
Sonata Hybrid(LF HEV)	2016	General	Battery Management System	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	Battery Management System	Special Function	SOC Calibration
Sonata Hybrid(LF HEV)	2016	General	Battery Management System	Special Function	Isolation Breakdown Detection Function
Sonata Hybrid(LF HEV)	2016	General	Motor Control System	Version Information	
Sonata Hybrid(LF HEV)	2016	General	Motor Control System	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	Motor Control System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	Motor Control System	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	Motor Control System	Read FreezeData	
Sonata Hybrid(LF HEV)	2016	General	Motor Control System	Special Function	Electric water Pump
Sonata Hybrid(LF HEV)	2016	General	Motor Control System	Special Function	Motor HSB resolver Calibration
Sonata Hybrid(LF HEV)	2016	General	Smart Cruise Control	Version Information	
Sonata Hybrid(LF HEV)	2016	General	Smart Cruise Control	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	Smart Cruise Control	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2016	General	Smart Cruise Control	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	Smart Cruise Control	Special Function	Radar Sensor
Sonata Hybrid(LF HEV)	2016	General	Smart Cruise Control	Special Function	Alignment(CCC/AFB)
Sonata Hybrid(LF HEV)	2016	General	Smart Cruise Control	Special Function	Variant Coding
Sonata Hybrid(LF HEV)	2016	General	Virtual Engine Sound System	Version Information	
Sonata Hybrid(LF HEV)	2016	General	Virtual Engine Sound System	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	Virtual Engine Sound System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	Virtual Engine Sound System	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	Central Gateway	Version Information	
Sonata Hybrid(LF HEV)	2016	General	Central Gateway	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	Central Gateway	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	Central Gateway	Special Function	Erase Network Configuration
Sonata Hybrid(LF HEV)	2016	General	HEV Control System	Version Information	
Sonata Hybrid(LF HEV)	2016	General	HEV Control System	Read Fault Code	
Sonata Hybrid(LF HEV)	2016	General	HEV Control System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2016	General	HEV Control System	Read Data Stream	
Sonata Hybrid(LF HEV)	2016	General	HEV Control System	Read FreezeData	
Sonata Hybrid(LF HEV)	2016	General	HEV Control System	Actuation Test	
Sonata Hybrid(LF HEV)	2016	General	HEV Control System	Special Function	Compression Pressure Test Of Engine Cylinder
Sonata Hybrid(LF HEV)	2016	General	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Sonata Hybrid(LF HEV)	2016	General	HEV Control System	Special Function	Engine Test Off
Sonata Hybrid(LF HEV)	2016	General	HEV Control System	Special Function	Engine Test On
Sonata Hybrid(LF HEV)	2016	General	HEV Control System	Special Function	LDC Activation Test
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Version Information	
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata Hybrid(LF HEV)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Hybrid(LF HEV)	2015	General	TCM(Transmission Control Module)	Version Information	
Sonata Hybrid(LF HEV)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hybrid(LF HEV)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Sonata Hybrid(LF HEV)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	High Pressure Release
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	Modular Travel
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	Corner(DTC)Calibration
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Sonata Hybrid(LF HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(LF HEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hybrid(LF HEV)	2015	General	AC(Air Conditioning)	Version Information	
Sonata Hybrid(LF HEV)	2015	General	AC(Air Conditioning)	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	BCM(Body Control Module)	Version Information	
Sonata Hybrid(LF HEV)	2015	General	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	BCM(Body Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata Hybrid(LF HEV)	2015	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sonata Hybrid(LF HEV)	2015	General	BCM(Body Control Module)	Special Function	User Option
Sonata Hybrid(LF HEV)	2015	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata Hybrid(LF HEV)	2015	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata Hybrid(LF HEV)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata Hybrid(LF HEV)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sonata Hybrid(LF HEV)	2015	General	EPS(Electronic Power Steering)	Version Information	
Sonata Hybrid(LF HEV)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Hybrid(LF HEV)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Sonata Hybrid(LF HEV)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(LF HEV)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(LF HEV)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata Hybrid(LF HEV)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Version Information	
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata Hybrid(LF HEV)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata Hybrid(LF HEV)	2015	General	Blind Spot Detection	Version Information	
Sonata Hybrid(LF HEV)	2015	General	Blind Spot Detection	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	Blind Spot Detection	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	Blind Spot Detection	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2015	General	Blind Spot Detection	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata Hybrid(LF HEV)	2015	General	Lane Departure Warning System	Version Information	
Sonata Hybrid(LF HEV)	2015	General	Lane Departure Warning System	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	Lane Departure Warning System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	Lane Departure Warning System	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Sonata Hybrid(LF HEV)	2015	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Sonata Hybrid(LF HEV)	2015	General	Smart Parking Assist System	Version Information	
Sonata Hybrid(LF HEV)	2015	General	Smart Parking Assist System	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	Smart Parking Assist System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	Smart Parking Assist System	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	Smart Parking Assist System	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	Active Air Flap	Version Information	
Sonata Hybrid(LF HEV)	2015	General	Active Air Flap	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	Active Air Flap	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	Active Air Flap	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	Active Air Flap	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	Battery Management System	Version Information	
Sonata Hybrid(LF HEV)	2015	General	Battery Management System	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	Battery Management System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	Battery Management System	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	Battery Management System	Read FreezeData	
Sonata Hybrid(LF HEV)	2015	General	Battery Management System	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	Battery Management System	Special Function	SOC Calibration
Sonata Hybrid(LF HEV)	2015	General	Battery Management System	Special Function	Isolation Breakdown Detection Function
Sonata Hybrid(LF HEV)	2015	General	Motor Control System	Version Information	
Sonata Hybrid(LF HEV)	2015	General	Motor Control System	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2015	General	Motor Control System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	Motor Control System	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	Motor Control System	Read FreezeData	
Sonata Hybrid(LF HEV)	2015	General	Motor Control System	Special Function	Electric water Pump
Sonata Hybrid(LF HEV)	2015	General	Motor Control System	Special Function	Motor HSG Resolver Calibration
Sonata Hybrid(LF HEV)	2015	General	Smart Cruise Control	Version Information	
Sonata Hybrid(LF HEV)	2015	General	Smart Cruise Control	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	Smart Cruise Control	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	Smart Cruise Control	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	Smart Cruise Control	Special Function	Radar Sensor Alignment(SCC/AFB)
Sonata Hybrid(LF HEV)	2015	General	Smart Cruise Control	Special Function	Variant Coding
Sonata Hybrid(LF HEV)	2015	General	Virtual Engine Sound System	Version Information	
Sonata Hybrid(LF HEV)	2015	General	Virtual Engine Sound System	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	Virtual Engine Sound System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	Virtual Engine Sound System	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	Central Gateway	Version Information	
Sonata Hybrid(LF HEV)	2015	General	Central Gateway	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	Central Gateway	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	Central Gateway	Special Function	Erase Network Configuration
Sonata Hybrid(LF HEV)	2015	General	HEV Control System	Version Information	
Sonata Hybrid(LF HEV)	2015	General	HEV Control System	Read Fault Code	
Sonata Hybrid(LF HEV)	2015	General	HEV Control System	Clear Fault Memory	
Sonata Hybrid(LF HEV)	2015	General	HEV Control System	Read Data Stream	
Sonata Hybrid(LF HEV)	2015	General	HEV Control System	Read FreezeData	
Sonata Hybrid(LF HEV)	2015	General	HEV Control System	Actuation Test	
Sonata Hybrid(LF HEV)	2015	General	HEV Control System	Special Function	Compression Pressure Test Of Engine Cylinder
Sonata Hybrid(LF HEV)	2015	General	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Sonata Hybrid(LF HEV)	2015	General	HEV Control System	Special Function	Engine Test Off

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)	2015	General	HEV Control System	Special Function	Engine Test On
Sonata Hybrid(LF HEV)	2015	General	HEV Control System	Special Function	LDC Activation Test
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Read FreezeData	
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata Hybrid(LF HEV)-U.S.	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)-U.S.	2016	General	TCM(Transmission Control Module)	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hybrid(LF HEV)-U.S.	2016	General	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2016	General	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Sonata Hybrid(LF HEV)-U.S.	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Special Function	High Pressure Release Mode
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Sonata Hybrid(LF HEV)-U.S.	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(LF HEV)-U.S.	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hybrid(LF HEV)-U.S.	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Sonata Hybrid(LF HEV)-U.S.	2016	General	AC(Air Conditioning)	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)-U.S.	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2016	General	BCM(Body Control Module)	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	BCM(Body Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2016	General	BCM(Body Control Module)	Special Function	User Option
Sonata Hybrid(LF HEV)-U.S.	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata Hybrid(LF HEV)-U.S.	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata Hybrid(LF HEV)-U.S.	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)-U.S.	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Hybrid(LF HEV)-U.S.	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Hybrid(LF HEV)-U.S.	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Hybrid(LF HEV)-U.S.	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Hybrid(LF HEV)-U.S.	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata Hybrid(LF HEV)-U.S.	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata Hybrid(LF HEV)-U.S.	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sonata Hybrid(LF HEV)-U.S.	2016	General	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)-U.S.	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Hybrid(LF HEV)-U.S.	2016	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Sonata Hybrid(LF HEV)-U.S.	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(LF HEV)-U.S.	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(LF HEV)-U.S.	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata Hybrid(LF HEV)-U.S.	2016	General	Smart Key Unit	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Smart Key Unit	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Smart Key Unit	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Smart Key Unit	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Smart Key Unit	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)-U.S.	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata Hybrid(LF HEV)-U.S.	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Sonata Hybrid(LF HEV)-U.S.	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Hybrid(LF HEV)-U.S.	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata Hybrid(LF HEV)-U.S.	2016	General	Smart Key Unit	Special Function	SMK Status Information
Sonata Hybrid(LF HEV)-U.S.	2016	General	CCS(Cruise Control System)	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	CCS(Cruise Control System)	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	CCS(Cruise Control System)	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	CCS(Cruise Control System)	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	CCS(Cruise Control System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Sonata Hybrid(LF HEV)-U.S.	2016	General	CCS(Cruise Control System)	Special Function	Variant Coding
Sonata Hybrid(LF HEV)-U.S.	2016	General	Blind Spot Detection	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Blind Spot Detection	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Blind Spot Detection	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)-U.S.	2016	General	Blind Spot Detection	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Blind Spot Detection	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata Hybrid(LF HEV)-U.S.	2016	General	Lane Departure Warning System	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Lane Departure Warning System	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Lane Departure Warning System	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Lane Departure Warning System	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Sonata Hybrid(LF HEV)-U.S.	2016	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Sonata Hybrid(LF HEV)-U.S.	2016	General	Active Air Flap	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Active Air Flap	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Active Air Flap	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Active Air Flap	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Active Air Flap	Actuation Test	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)-U.S.	2016	General	Battery Management System	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Battery Management System	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Battery Management System	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Battery Management System	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Battery Management System	Read FreezeData	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Battery Management System	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Battery Management System	Special Function	SOC Calibration
Sonata Hybrid(LF HEV)-U.S.	2016	General	Battery Management System	Special Function	Isolation Breakdown Detection Function
Sonata Hybrid(LF HEV)-U.S.	2016	General	Motor Control System	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Motor Control System	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Motor Control System	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Motor Control System	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Motor Control System	Read FreezeData	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Motor Control System	Special Function	Electric Water Pump Control

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)-U.S.	2016	General	Motor Control System	Special Function	Motor HSG Resolver Calibration
Sonata Hybrid(LF HEV)-U.S.	2016	General	Telematics Unit	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Telematics Unit	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Telematics Unit	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Virtual Engine Sound System	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Virtual Engine Sound System	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Virtual Engine Sound System	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Virtual Engine Sound System	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Central Gateway	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Central Gateway	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Central Gateway	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	Central Gateway	Special Function	Erase Network Configuration
Sonata Hybrid(LF HEV)-U.S.	2016	General	HEV Control System	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2016	General	HEV Control System	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Hybrid(LF HEV)-U.S.	2016	General	HEV Control System	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2016	General	HEV Control System	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2016	General	HEV Control System	Read FreezeData	
Sonata Hybrid(LF HEV)-U.S.	2016	General	HEV Control System	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2016	General	HEV Control System	Special Function	Compression Pressure Test Of Engine Cylinder
Sonata Hybrid(LF HEV)-U.S.	2016	General	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Sonata Hybrid(LF HEV)-U.S.	2016	General	HEV Control System	Special Function	Engine Test Off
Sonata Hybrid(LF HEV)-U.S.	2016	General	HEV Control System	Special Function	Engine Test On
Sonata Hybrid(LF HEV)-U.S.	2016	General	HEV Control System	Special Function	LDC Activation Test
Sonata Hybrid(LF HEV)-U.S.	2015	General	ECM(Engine Control Module)	Version Information	
Sonata Hybrid(LF HEV)-U.S.	2015	General	ECM(Engine Control Module)	Read Fault Code	
Sonata Hybrid(LF HEV)-U.S.	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Hybrid(LF HEV)-U.S.	2015	General	ECM(Engine Control Module)	Read Data Stream	
Sonata Hybrid(LF HEV)-U.S.	2015	General	ECM(Engine Control Module)	Read FreezeData	
Sonata Hybrid(LF HEV)-U.S.	2015	General	ECM(Engine Control Module)	Actuation Test	
Sonata Hybrid(LF HEV)-U.S.	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Hybrid(LF HEV)-U.S.	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Hybrid(LF HEV)-U.S.	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Hybrid(LF HEV)-U.S.	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata Hybrid(LF HEV)-U.S.	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Sonata Hybrid(1.8 HEV)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata Hybrid(1.8 HEV)	2015	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test HEV
Sonata Hybrid(1.8 HEV)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata Hybrid(1.8 HEV)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Hybrid(1.8 HEV)	2015	General	TCM(Transmission Control Module)	Version Information	
Sonata Hybrid(1.8 HEV)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hybrid(1.8 HEV)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hybrid(1.8 HEV)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(1.8 HEV)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hybrid(1.8 HEV)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(1.8 HEV)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(1.8 HEV)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(1.8 HEV)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(1.8 HEV)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(1.8 HEV)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(1.8 HEV)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(1.8 HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(YF HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(1.8 HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	AHB Variant Coding
Sonata Hybrid(1.8 HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	Brake Travel Sensor(BTC)Calibration
Sonata Hybrid(1.8 HEV)	2015	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(1.8 HEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(1.8 HEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(1.8 HEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(1.8 HEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(1.8 HEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata Hybrid(1.8 HEV)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Sonata Hybrid(1.8 HEV)	2015	General	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Subaru Legacy	2015	General	AC(Air Conditioning)	Read Fault Code	
Subaru Legacy	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Subaru Legacy	2015	General	AC(Air Conditioning)	Read Data Stream	
Subaru Legacy	2015	General	AC(Air Conditioning)	Actuation Test	
Subaru Legacy	2015	General	BCM(Body Control Module)	Version Information	
Subaru Legacy	2015	General	BCM(Body Control Module)	Read Fault Code	
Subaru Legacy	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Subaru Legacy	2015	General	BCM(Body Control Module)	Read Data Stream	
Subaru Legacy	2015	General	BCM(Body Control Module)	Actuation Test	
Subaru Legacy	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Subaru Legacy	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Subaru Legacy	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Subaru Legacy	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Subaru Legacy	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Subaru Legacy	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Subaru Legacy	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Subaru Legacy	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Subaru Legacy	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Subaru Legacy	2015	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Subaru Legacy	2015	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Subaru Legacy	2015	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Subaru Legacy	2015	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Subaru Legacy	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Subaru Legacy	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Subaru Legacy	2015	General	EPS(Electronic Power Steering)	Version Information	
Subaru Legacy	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Subaru Legacy	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Subaru Legacy	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Subaru Legacy	2015	General	EPS(Electronic Power Steering)	Read FreezeData	

model	year	area	system	function	subfunction
Sonata Hybrid(II HEV)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata Hybrid(II HEV)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(YF HEV)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Version Information	
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Read Fault Code	
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Clear Fault Memory	
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Read Data Stream	
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Actuation Test	
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Special Function	PDM Status Information
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata Hybrid(II HEV)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Sonata Hybrid(II HEV)	2015	General	Low DC/DC Converter	Version Information	
Sonata Hybrid(II HEV)	2015	General	Low DC/DC Converter	Read Fault Code	
Sonata Hybrid(II HEV)	2015	General	Low DC/DC Converter	Clear Fault Memory	
Sonata Hybrid(II HEV)	2015	General	Low DC/DC Converter	Read Data Stream	
Sonata Hybrid(II HEV)	2015	General	Low DC/DC Converter	Read FreezeData	
Sonata Hybrid(II HEV)	2015	General	Active Air Flap	Version Information	
Sonata Hybrid(II HEV)	2015	General	Active Air Flap	Read Fault Code	
Sonata Hybrid(II HEV)	2015	General	Active Air Flap	Clear Fault Memory	
Sonata Hybrid(II HEV)	2015	General	Active Air Flap	Read Data Stream	
Sonata Hybrid(II HEV)	2015	General	Active Air Flap	Actuation Test	
Sonata Hybrid(II HEV)	2015	General	Battery Management System	Version Information	

model	year	area	system	function	subfunction
35HATA HYUNDAI	2015	General	Battery Management System	Read Fault Code	
35HATA HYUNDAI	2015	General	Battery Management System	Clear Fault Memory	
35HATA HYUNDAI	2015	General	Battery Management System	Read Data Stream	
35HATA HYUNDAI	2015	General	Battery Management System	Read FreezeData	
35HATA HYUNDAI	2015	General	Battery Management System	Actuation Test	
35HATA HYUNDAI	2015	General	Motor Control System	Version Information	
35HATA HYUNDAI	2015	General	Motor Control System	Read Fault Code	
35HATA HYUNDAI	2015	General	Motor Control System	Clear Fault Memory	
35HATA HYUNDAI	2015	General	Motor Control System	Read Data Stream	
35HATA HYUNDAI	2015	General	Motor Control System	Read FreezeData	
35HATA HYUNDAI	2015	General	Motor Control System	Actuation Test	
35HATA HYUNDAI	2015	General	Motor Control System	Special Function	Electric water Pump
35HATA HYUNDAI	2015	General	Motor Control System	Special Function	Motor ISO resolver Calibration
35HATA HYUNDAI	2015	General	Telematics Unit	Version Information	
35HATA HYUNDAI	2015	General	Telematics Unit	Read Fault Code	
35HATA HYUNDAI	2015	General	Telematics Unit	Clear Fault Memory	
35HATA HYUNDAI	2015	General	HEV Control System	Version Information	
35HATA HYUNDAI	2015	General	HEV Control System	Read Fault Code	
35HATA HYUNDAI	2015	General	HEV Control System	Clear Fault Memory	
35HATA HYUNDAI	2015	General	HEV Control System	Read Data Stream	
35HATA HYUNDAI	2015	General	HEV Control System	Read FreezeData	
35HATA HYUNDAI	2015	General	HEV Control System	Special Function	E/C Fluid Pressure Cal.
35HATA HYUNDAI	2015	General	HEV Control System	Special Function	Engine Test Off
35HATA HYUNDAI	2015	General	HEV Control System	Special Function	Engine Test On
35HATA HYUNDAI	2015	General	HEV Control System	Special Function	LDC Activation Test
35HATA HYUNDAI	2015	General	IMM(Immobilizer)	Read Data Stream	
35HATA HYUNDAI	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
35HATA HYUNDAI	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
35HATA HYUNDAI	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
35Hata nybna(11 45H)	2015	General	IMM(Immobilizer)	Special Function	Teaching
35Hata nybna(11 45H)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
35Hata nybna(11 45H)	2015	General	CODE(Transmitter Code Saving)	Read Data Stream	
35Hata nybna(11 45H)	2015	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
35Hata nybna(11 45H)	2015	General	Power Distribution Module	Version Information	
35Hata nybna(11 45H)	2015	General	Power Distribution Module	Read Fault Code	
35Hata nybna(11 45H)	2015	General	Power Distribution Module	Clear Fault Memory	
35Hata nybna(11 45H)	2015	General	Power Distribution Module	Read Data Stream	
35Hata nybna(11 45H)	2015	General	Power Distribution Module	Actuation Test	
35Hata nybna(11 45H)	2015	General	Low DC/DC Converte	Version Information	
35Hata nybna(11 45H)	2015	General	Low DC/DC Converte	Read Fault Code	
35Hata nybna(11 45H)	2015	General	Low DC/DC Converte	Clear Fault Memory	
35Hata nybna(11 45H)	2015	General	Low DC/DC Converte	Read Data Stream	
35Hata nybna(11 45H)	2015	General	IMM(Immobilizer)	Special Function	Password Record/Change
35Hata nybna(11 45H)	2015	General	IMM(Immobilizer)	Special Function	Learnt Keys
35Hata nybna(11 45H)	2015	General	IMM(Immobilizer)	Special Function	Neutralization Mode
35Hata nybna(11 45H)	2015	General	Transmitter Code Saving	Read Data Stream	
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Version Information	
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Read Fault Code	
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Read Data Stream	
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Read FreezeData	
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Actuation Test	
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
35Hata nybna(11 45H)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test

model	year	area	system	function	subfunction
Sonata Hybrid(1.8 HEV)	2014	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test HEV
Sonata Hybrid(1.8 HEV)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata Hybrid(1.8 HEV)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Hybrid(1.8 HEV)	2014	General	TCM(Transmission Control Module)	Version Information	
Sonata Hybrid(1.8 HEV)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hybrid(1.8 HEV)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hybrid(1.8 HEV)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(1.8 HEV)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hybrid(1.8 HEV)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(1.8 HEV)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(1.8 HEV)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(1.8 HEV)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(1.8 HEV)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(1.8 HEV)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(1.8 HEV)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(1.8 HEV)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(YF HEV)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(1.8 HEV)	2014	General	ABS(Anti-lock Braking System)	Special Function	AHB Variant Coding
Sonata Hybrid(1.8 HEV)	2014	General	ABS(Anti-lock Braking System)	Special Function	Pedal Travel Sensor(DTC)Calibration
Sonata Hybrid(1.8 HEV)	2014	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(1.8 HEV)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(1.8 HEV)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(1.8 HEV)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(1.8 HEV)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(1.8 HEV)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata Hybrid(1.8 HEV)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Sonata Hybrid(1.8 HEV)	2014	General	AC(Air Conditioning)	Version Information	
Sonata Hybrid(1.8 HEV)	2014	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Сonata Hyundai	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Сonata Hyundai	2014	General	AC(Air Conditioning)	Read Data Stream	
Сonata Hyundai	2014	General	AC(Air Conditioning)	Actuation Test	
Сonata Hyundai	2014	General	BCM(Body Control Module)	Version Information	
Сonata Hyundai	2014	General	BCM(Body Control Module)	Read Fault Code	
Сonata Hyundai	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Сonata Hyundai	2014	General	BCM(Body Control Module)	Read Data Stream	
Сonata Hyundai	2014	General	BCM(Body Control Module)	Actuation Test	
Сonata Hyundai	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Сonata Hyundai	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Сonata Hyundai	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Сonata Hyundai	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Сonata Hyundai	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Сonata Hyundai	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Сonata Hyundai	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Сonata Hyundai	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Сonata Hyundai	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Сonata Hyundai	2014	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Сonata Hyundai	2014	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Сonata Hyundai	2014	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Сonata Hyundai	2014	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Сonata Hyundai	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Сonata Hyundai	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Сonata Hyundai	2014	General	EPS(Electronic Power Steering)	Version Information	
Сonata Hyundai	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Сonata Hyundai	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Сonata Hyundai	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Сonata Hyundai	2014	General	EPS(Electronic Power Steering)	Read FreezeData	
Сonata Hyundai	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
Sonata Hybrid(1.8T HEV)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(YF HEV)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Version Information	
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Actuation Test	
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Special Function	PDM Status Information
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata Hybrid(1.8T HEV)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Sonata Hybrid(1.8T HEV)	2014	General	Low DC/DC Converter	Version Information	
Sonata Hybrid(1.8T HEV)	2014	General	Low DC/DC Converter	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2014	General	Low DC/DC Converter	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2014	General	Low DC/DC Converter	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2014	General	Low DC/DC Converter	Read FreezeData	
Sonata Hybrid(1.8T HEV)	2014	General	Active Air Flap	Version Information	
Sonata Hybrid(1.8T HEV)	2014	General	Active Air Flap	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2014	General	Active Air Flap	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2014	General	Active Air Flap	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2014	General	Active Air Flap	Actuation Test	
Sonata Hybrid(1.8T HEV)	2014	General	Battery Management System	Version Information	
Sonata Hybrid(1.8T HEV)	2014	General	Battery Management System	Read Fault Code	

model	year	area	system	function	subfunction
Сonata Hyundai	2014	General	Battery Management System	Clear Fault Memory	
Сonata Hyundai	2014	General	Battery Management System	Read Data Stream	
Сonata Hyundai	2014	General	Battery Management System	Read FreezeData	
Сonata Hyundai	2014	General	Battery Management System	Actuation Test	
Сonata Hyundai	2014	General	Motor Control System	Version Information	
Сonata Hyundai	2014	General	Motor Control System	Read Fault Code	
Сonata Hyundai	2014	General	Motor Control System	Clear Fault Memory	
Сonata Hyundai	2014	General	Motor Control System	Read Data Stream	
Сonata Hyundai	2014	General	Motor Control System	Read FreezeData	
Сonata Hyundai	2014	General	Motor Control System	Actuation Test	
Сonata Hyundai	2014	General	Motor Control System	Special Function	Electric water Pump
Сonata Hyundai	2014	General	Motor Control System	Special Function	motor HCU resolver Calibration
Сonata Hyundai	2014	General	Telematics Unit	Version Information	
Сonata Hyundai	2014	General	Telematics Unit	Read Fault Code	
Сonata Hyundai	2014	General	Telematics Unit	Clear Fault Memory	
Сonata Hyundai	2014	General	HEV Control System	Version Information	
Сonata Hyundai	2014	General	HEV Control System	Read Fault Code	
Сonata Hyundai	2014	General	HEV Control System	Clear Fault Memory	
Сonata Hyundai	2014	General	HEV Control System	Read Data Stream	
Сonata Hyundai	2014	General	HEV Control System	Read FreezeData	
Сonata Hyundai	2014	General	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Сonata Hyundai	2014	General	HEV Control System	Special Function	Engine Test Off
Сonata Hyundai	2014	General	HEV Control System	Special Function	Engine Test On
Сonata Hyundai	2014	General	HEV Control System	Special Function	LDC Activation Test
Сonata Hyundai	2014	General	IMM(Immobilizer)	Read Data Stream	
Сonata Hyundai	2014	General	IMM(Immobilizer)	Special Function	password Teaching/Changing
Сonata Hyundai	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Сonata Hyundai	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Сonata Hyundai	2014	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
350nata nyctua(ri 451A)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
350nata nyctua(ri 451A)	2014	General	CODE(Transmitter Code Saving)	Read Data Stream	
350nata nyctua(ri 451A)	2014	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
350nata nyctua(ri 451A)	2014	General	Power Distribution Module	Version Information	
350nata nyctua(ri 451A)	2014	General	Power Distribution Module	Read Fault Code	
350nata nyctua(ri 451A)	2014	General	Power Distribution Module	Clear Fault Memory	
350nata nyctua(ri 451A)	2014	General	Power Distribution Module	Read Data Stream	
350nata nyctua(ri 451A)	2014	General	Power Distribution Module	Actuation Test	
350nata nyctua(ri 451A)	2014	General	Low DC/DC Converte	Version Information	
350nata nyctua(ri 451A)	2014	General	Low DC/DC Converte	Read Fault Code	
350nata nyctua(ri 451A)	2014	General	Low DC/DC Converte	Clear Fault Memory	
350nata nyctua(ri 451A)	2014	General	Low DC/DC Converte	Read Data Stream	
350nata nyctua(ri 451A)	2014	General	IMM(Immobilizer)	Special Function	Password Record/Change
350nata nyctua(ri 451A)	2014	General	IMM(Immobilizer)	Special Function	Learnt Keys
350nata nyctua(ri 451A)	2014	General	IMM(Immobilizer)	Special Function	Neutralization Mode
350nata nyctua(ri 451A)	2014	General	Transmitter Code Saving	Read Data Stream	
350nata nyctua(ri 451A)	2013	General	ECM(Engine Control Module)	Version Information	
350nata nyctua(ri 451A)	2013	General	ECM(Engine Control Module)	Read Fault Code	
350nata nyctua(ri 451A)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
350nata nyctua(ri 451A)	2013	General	ECM(Engine Control Module)	Read Data Stream	
350nata nyctua(ri 451A)	2013	General	ECM(Engine Control Module)	Actuation Test	
350nata nyctua(ri 451A)	2013	General	TCM(Transmission Control Module)	Version Information	
350nata nyctua(ri 451A)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
350nata nyctua(ri 451A)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
350nata nyctua(ri 451A)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
350nata nyctua(ri 451A)	2013	General	TCM(Transmission Control Module)	Actuation Test	
350nata nyctua(ri 451A)	2013	General	ABS(Anti-lock Braking System)	Version Information	
350nata nyctua(ri 451A)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
350nata nyctua(ri 451A)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Subaru Legacy	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Subaru Legacy	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Subaru Legacy	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Subaru Legacy	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Subaru Legacy	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Subaru Legacy	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Subaru Legacy	2013	General	AC(Air Conditioning)	Version Information	
Subaru Legacy	2013	General	AC(Air Conditioning)	Read Fault Code	
Subaru Legacy	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Subaru Legacy	2013	General	AC(Air Conditioning)	Read Data Stream	
Subaru Legacy	2013	General	AC(Air Conditioning)	Actuation Test	
Subaru Legacy	2013	General	BCM(Body Control Module)	Version Information	
Subaru Legacy	2013	General	BCM(Body Control Module)	Read Fault Code	
Subaru Legacy	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Subaru Legacy	2013	General	BCM(Body Control Module)	Read Data Stream	
Subaru Legacy	2013	General	BCM(Body Control Module)	Actuation Test	
Subaru Legacy	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Subaru Legacy	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Subaru Legacy	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Subaru Legacy	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Subaru Legacy	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Subaru Legacy	2013	General	EPS(Electronic Power Steering)	Version Information	
Subaru Legacy	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Subaru Legacy	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Subaru Legacy	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Subaru Legacy	2013	General	Power Distribution Module	Version Information	
Subaru Legacy	2013	General	Power Distribution Module	Read Fault Code	
Subaru Legacy	2013	General	Power Distribution Module	Clear Fault Memory	
Subaru Legacy	2013	General	Power Distribution Module	Read Data Stream	

model	year	area	system	function	subfunction
30hata nybna(ri 45hA	2013	General	Power Distribution Module	Actuation Test	
30hata nybna(ri 45hA	2013	General	Smart Key Unit	Version Information	
30hata nybna(ri 45hA	2013	General	Smart Key Unit	Read Fault Code	
30hata nybna(ri 45hA	2013	General	Smart Key Unit	Clear Fault Memory	
30hata nybna(ri 45hA	2013	General	Smart Key Unit	Read Data Stream	
30hata nybna(ri 45hA	2013	General	Smart Key Unit	Actuation Test	
30hata nybna(ri 45hA	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
30hata nybna(ri 45hA	2013	General	Low DC/DC Converte	Version Information	
30hata nybna(ri 45hA	2013	General	Low DC/DC Converte	Read Fault Code	
30hata nybna(ri 45hA	2013	General	Low DC/DC Converte	Clear Fault Memory	
30hata nybna(ri 45hA	2013	General	Low DC/DC Converte	Read Data Stream	
30hata nybna(ri 45hA	2013	General	Active Air Flap	Version Information	
30hata nybna(ri 45hA	2013	General	Active Air Flap	Read Fault Code	
30hata nybna(ri 45hA	2013	General	Active Air Flap	Clear Fault Memory	
30hata nybna(ri 45hA	2013	General	Active Air Flap	Read Data Stream	
30hata nybna(ri 45hA	2013	General	Active Air Flap	Actuation Test	
30hata nybna(ri 45hA	2013	General	Battery Management System	Version Information	
30hata nybna(ri 45hA	2013	General	Battery Management System	Read Fault Code	
30hata nybna(ri 45hA	2013	General	Battery Management System	Clear Fault Memory	
30hata nybna(ri 45hA	2013	General	Battery Management System	Read Data Stream	
30hata nybna(ri 45hA	2013	General	Battery Management System	Actuation Test	
30hata nybna(ri 45hA	2013	General	Motor Control System	Version Information	
30hata nybna(ri 45hA	2013	General	Motor Control System	Read Fault Code	
30hata nybna(ri 45hA	2013	General	Motor Control System	Clear Fault Memory	
30hata nybna(ri 45hA	2013	General	Motor Control System	Read Data Stream	
30hata nybna(ri 45hA	2013	General	Motor Control System	Actuation Test	
30hata nybna(ri 45hA	2013	General	HEV Control System	Version Information	
30hata nybna(ri 45hA	2013	General	HEV Control System	Read Fault Code	
30hata nybna(ri 45hA	2013	General	HEV Control System	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Hybrid(PI HEV)	2013	General	HEV Control System	Read Data Stream	
Sonata Hybrid(PI HEV)	2013	General	IMM(Immobilizer)	Read Data Stream	
Sonata Hybrid(PI HEV)	2013	General	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata Hybrid(PI HEV)	2013	General	IMM(Immobilizer)	Special Function	Learnt Keys
Sonata Hybrid(PI HEV)	2013	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Sonata Hybrid(PI HEV)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata Hybrid(PI HEV)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata Hybrid(PI HEV)	2013	General	Transmitter Code Saving	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Read FreezeData	
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Actuation Test	
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test HEV
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata Hybrid(YF HEV)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Hybrid(YF HEV)-U.S.	2014	General	TCM(Transmission Control Module)	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hybrid(YF HEV)-U.S.	2014	General	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(YF HEV)-U.S.	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(YF HEV)-U.S.	2014	General	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV)-U.S.	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(YF HEV)-U.S.	2014	General	ABS(Anti-lock Braking System)	Special Function	AHB Variant Coding
Sonata Hybrid(YF HEV)-U.S.	2014	General	ABS(Anti-lock Braking System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Sonata Hybrid(YF HEV)-U.S.	2014	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(YF HEV)-U.S.	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(YF HEV)-U.S.	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(YF HEV)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata Hybrid(YF HEV)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV)-U.S.	2014	General	AC(Air Conditioning)	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	AC(Air Conditioning)	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(YF HEV)-U.S.	2014	General	BCM(Body Control Module)	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	BCM(Body Control Module)	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(YF HEV)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata Hybrid(YF HEV)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Hybrid(YF HEV)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Hybrid(YF HEV)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Hybrid(YF HEV)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Hybrid(YF HEV)-U.S.	2014	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sonata Hybrid(YF HEV)-U.S.	2014	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata Hybrid(YF HEV)-U.S.	2014	General	EPS(Electronic Power Steering)	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV)-U.S.	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Hybrid(YF HEV)-U.S.	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata Hybrid(YF HEV)-U.S.	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(YF HEV)-U.S.	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Actuation Test	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Special Function	PDM Status Information

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Special Function	SMK Status Information
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Special Function	TP Status Information
Sonata Hybrid(YF HEV)-U.S.	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata Hybrid(YF HEV)-U.S.	2014	General	Low DC/DC Converter	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Low DC/DC Converter	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Low DC/DC Converter	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Low DC/DC Converter	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Low DC/DC Converter	Read FreezeData	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Active Air Flap	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Active Air Flap	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Active Air Flap	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Active Air Flap	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Active Air Flap	Actuation Test	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV)-U.S.	2014	General	Battery Management System	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Battery Management System	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Battery Management System	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Battery Management System	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Battery Management System	Read FreezeData	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Battery Management System	Actuation Test	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Motor Control System	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Motor Control System	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Motor Control System	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Motor Control System	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Motor Control System	Read FreezeData	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Motor Control System	Actuation Test	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Motor Control System	Special Function	Electric Water Pump Control
Sonata Hybrid(YF HEV)-U.S.	2014	General	Motor Control System	Special Function	Motor HSG Resolver Calibration

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV)-U.S.	2014	General	Telematics Unit	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Telematics Unit	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	Telematics Unit	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	HEV Control System	Version Information	
Sonata Hybrid(YF HEV)-U.S.	2014	General	HEV Control System	Read Fault Code	
Sonata Hybrid(YF HEV)-U.S.	2014	General	HEV Control System	Clear Fault Memory	
Sonata Hybrid(YF HEV)-U.S.	2014	General	HEV Control System	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	HEV Control System	Read FreezeData	
Sonata Hybrid(YF HEV)-U.S.	2014	General	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Sonata Hybrid(YF HEV)-U.S.	2014	General	HEV Control System	Special Function	Engine Test Off
Sonata Hybrid(YF HEV)-U.S.	2014	General	HEV Control System	Special Function	Engine Test On
Sonata Hybrid(YF HEV)-U.S.	2014	General	HEV Control System	Special Function	LDC Activation Test
Sonata Hybrid(YF HEV)-U.S.	2014	General	IMM(Immobilizer)	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV)-U.S.	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata Hybrid(YF HEV)-U.S.	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata Hybrid(YF HEV)-U.S.	2014	General	IMM(Immobilizer)	Special Function	Teaching
Sonata Hybrid(YF HEV)-U.S.	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata Hybrid(YF HEV)-U.S.	2014	General	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata Hybrid(YF HEV)-U.S.	2014	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Actuation Test	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test HEV
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TCM(Transmission Control Module)	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ABS(Anti-lock Braking System)	Special Function	AHB Variant Coding
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ABS(Anti-lock Braking System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Sonata Hybrid(YF HEV US)-U.S.	2013	General	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(YF HEV US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV US)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata Hybrid(YF HEV US)-U.S.	2013	General	AC(Air Conditioning)	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	AC(Air Conditioning)	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	BCM(Body Control Module)	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	BCM(Body Control Module)	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	EPS(Electronic Power Steering)	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV US)-U.S.	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata Hybrid(YF HEV US)-U.S.	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(YF HEV US)-U.S.	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Auto Headlamp Leveling System	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Auto Headlamp Leveling System	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Auto Headlamp Leveling System	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Auto Headlamp Leveling System	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Hybrid(YF HEV US)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Hybrid(YF HEV US)-U.S.	2013	General	IMM(Immobilizer)	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata Hybrid(YF HEV US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata Hybrid(YF HEV US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata Hybrid(YF HEV US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Teaching
Sonata Hybrid(YF HEV US)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Actuation Test	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Special Function	Smart Key Code Saving
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Special Function	Neutralization Mode
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Special Function	Antenna Status Check
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Special Function	FOB Key Status Information
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Special Function	PDM Status Information
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Special Function	Serial Communication Line Check
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Special Function	SMK Status Information
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Key	Special Function	TP Status Information
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Transmitter Code Saving	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Transmitter Code Saving	Special Function	Code Saving
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Control System	Version Information	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Control System	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Control System	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Control System	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Control System	Special Function	Engine Test On
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Control System	Special Function	Engine Test Off
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Control System	Special Function	LDC Activation Test
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Low DC/DC Converter	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Low DC/DC Converter	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Low DC/DC Converter	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Low DC/DC Converter	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Low DC/DC Converter	Read FreezeData	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Active Air Flap	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Active Air Flap	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Active Air Flap	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Active Air Flap	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Active Air Flap	Actuation Test	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Battery System	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Battery System	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Battery System	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Battery System	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Battery System	Read FreezeData	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Battery System	Actuation Test	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Cluster Module	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Cluster Module	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Cluster Module	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Cluster Module	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Cluster Module	Actuation Test	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Motor System	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Motor System	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Motor System	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Motor System	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Motor System	Read FreezeData	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Motor System	Actuation Test	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Motor System	Special Function	Electric Water Pump Control
Sonata Hybrid(YF HEV US)-U.S.	2013	General	HEV Motor System	Special Function	Motor HSG Resolver Calibration
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Junction Block	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Junction Block	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Junction Block	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Junction Block	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Smart Junction Block	Actuation Test	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Telematics Unit	Version Information	

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Telematics Unit	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Telematics Unit	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Weight Classification System	Version Information	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Weight Classification System	Read Fault Code	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Weight Classification System	Clear Fault Memory	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Weight Classification System	Read Data Stream	
Sonata Hybrid(YF HEV US)-U.S.	2013	General	Weight Classification System	Special Function	WCS Reset
Sonata(EF)	2006	General	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	2006	General	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2006	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2006	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	2006	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2006	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2006	General	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2006	General	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2006	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(EF)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(EF)	2006	General	Auto Headlamp Leveling	Version Information	
Sonata(EF)	2006	General	Auto Headlamp Leveling	Read Fault Code	
Sonata(EF)	2006	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata(EF)	2006	General	Auto Headlamp Leveling	Read Data Stream	
Sonata(EF)	2006	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata(EF)	2006	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata(EF)	2006	General	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2006	General	IMM(Immobilizer)	Special Function	Password
Sonata(EF)	2006	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Sonata(EF)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(EF)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(EF)	2006	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(EF)	2006	General	CODE	Special Function	Code Saving
Sonata(EF)	2005	General	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2005	General	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	Auto Detected
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2005	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	2005	General	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2005	General	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(EF)	2005	General	Auto Headlamp Leveling	Version Information	
Sonata(EF)	2005	General	Auto Headlamp Leveling	Read Fault Code	
Sonata(EF)	2005	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata(EF)	2005	General	Auto Headlamp Leveling	Read Data Stream	
Sonata(EF)	2005	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata(EF)	2005	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata(EF)	2005	General	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2005	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2005	General	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2005	General	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2005	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	2005	General	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	2005	General	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	2005	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2005	General	CODE	Special Function	Code Saving
Sonata(EF)	2005	General	IMM(Immobilizer)	Special Function	Password
Sonata(EF)	2005	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Sonata(EF)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(EF)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(EF)	2005	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(EF)	2004	General	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2004	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2004	General	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	Auto Detected
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	Ignition Test

model	year	area	system	function	subfunction
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2004	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	2004	General	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2004	General	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2004	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(EF)	2004	General	Auto Headlamp Leveling	Version Information	
Sonata(EF)	2004	General	Auto Headlamp Leveling	Read Fault Code	
Sonata(EF)	2004	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata(EF)	2004	General	Auto Headlamp Leveling	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(EF)	2004	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata(EF)	2004	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata(EF)	2004	General	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2004	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2004	General	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2004	General	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2004	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	2004	General	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	2004	General	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	2004	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2004	General	CODE	Special Function	Code Saving
Sonata(EF)	2003	General	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2003	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2003	General	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2003	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(EF)	2003	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(EF)	2003	General	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(EF)	2003	General	Auto Headlamp Leveling	Version Information	
Sonata(EF)	2003	General	Auto Headlamp Leveling	Read Fault Code	
Sonata(EF)	2003	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata(EF)	2003	General	Auto Headlamp Leveling	Read Data Stream	
Sonata(EF)	2003	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata(EF)	2003	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata(EF)	2003	General	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2003	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2003	General	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2003	General	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2003	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	2003	General	IMM(Immobilizer)	Special Function	Master Key Delete

model	year	area	system	function	subfunction
Sonata(EF)	2003	General	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	2003	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2003	General	CODE	Special Function	Code Saving
Sonata(EF)	2003	General	Head Lamp	Version Information	
Sonata(EF)	2003	General	Head Lamp	Read Fault Code	
Sonata(EF)	2003	General	Head Lamp	Clear Fault Memory	
Sonata(EF)	2003	General	Head Lamp	Read Data Stream	
Sonata(EF)	2003	General	Head Lamp	Special Function	Level Initialization
Sonata(EF)	2003	General	Head Lamp	Special Function	Headlamp Leveling
Sonata(EF)	2002	General	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2002	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2002	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2002	General	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2002	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2002	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	2002	General	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2002	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(EF)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2002	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2002	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(EF)	2002	General	Auto Headlamp Leveling	Version Information	
Sonata(EF)	2002	General	Auto Headlamp Leveling	Read Fault Code	
Sonata(EF)	2002	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata(EF)	2002	General	Auto Headlamp Leveling	Read Data Stream	
Sonata(EF)	2002	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata(EF)	2002	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata(EF)	2002	General	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2002	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2002	General	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2002	General	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2002	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	2002	General	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	2002	General	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	2002	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2002	General	CODE	Special Function	Code Saving
Sonata(EF)	2001	General	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Sonata(EF)	2001	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2001	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2001	General	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2001	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2001	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	2001	General	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2001	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2001	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Sonata(EF)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2001	General	Auto Headlamp Leveling	Version Information	
Sonata(EF)	2001	General	Auto Headlamp Leveling	Read Fault Code	
Sonata(EF)	2001	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata(EF)	2001	General	Auto Headlamp Leveling	Read Data Stream	
Sonata(EF)	2001	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata(EF)	2001	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata(EF)	2001	General	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2001	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2001	General	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2001	General	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2001	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	2001	General	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	2001	General	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	2001	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2001	General	CODE	Special Function	Code Saving
Sonata(EF)	2000	General	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2000	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2000	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2000	General	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test

model	year	area	system	function	subfunction
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2000	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2000	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	2000	General	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2000	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2000	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2000	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2000	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2000	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2000	General	Auto Headlamp Leveling	Version Information	
Sonata(EF)	2000	General	Auto Headlamp Leveling	Read Fault Code	
Sonata(EF)	2000	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata(EF)	2000	General	Auto Headlamp Leveling	Read Data Stream	
Sonata(EF)	2000	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata(EF)	2000	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata(EF)	2000	General	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2000	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2000	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(EF)	2000	General	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2000	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	2000	General	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	2000	General	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	2000	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2000	General	CODE	Special Function	Code Saving
Sonata(EF)	1999	General	ECM(Engine Control Module)	Version Information	
Sonata(EF)	1999	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	1999	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	1999	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	1999	General	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	1999	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	1999	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	1999	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(EF)	1999	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	1999	General	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	1999	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	1999	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	1999	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	1999	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	1999	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	1999	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	1999	General	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	1999	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	1999	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	1999	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	1999	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	1999	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(EF)	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	1999	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	1999	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	1999	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	1999	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	1999	General	Auto Headlamp Leveling	Version Information	
Sonata(EF)	1999	General	Auto Headlamp Leveling	Read Fault Code	
Sonata(EF)	1999	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata(EF)	1999	General	Auto Headlamp Leveling	Read Data Stream	
Sonata(EF)	1999	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata(EF)	1999	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata(EF)	1999	General	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	1999	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	1999	General	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	1999	General	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	1999	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	1999	General	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	1999	General	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	1999	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	1999	General	CODE	Special Function	Code Saving
Sonata(EF)	1999	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(LF)	2018	General	ECM(Engine Control Module)	Version Information	
Sonata(LF)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(LF)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(LF)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(LF)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(LF)	2018	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sonata(LF)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(LF)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(LF)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(LF)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(LF)	2018	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(LF)	2018	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(LF)	2018	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(LF)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(LF)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(LF)	2018	General	TCM(Transmission Control Module)	Version Information	
Sonata(LF)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(LF)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(LF)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(LF)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(LF)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(LF)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(LF)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(LF)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(LF)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(LF)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(LF)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(LF)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(LF)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata(LF)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(LF)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata(LF)	2018	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(LF)	2018	General	Electric Parking Brake	Version Information	
Sonata(LF)	2018	General	Electric Parking Brake	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(LF)	2018	General	Electric Parking Brake	Clear Fault Memory	
Sonata(LF)	2018	General	Electric Parking Brake	Read Data Stream	
Sonata(LF)	2018	General	Electric Parking Brake	Actuation Test	
Sonata(LF)	2018	General	Autonomous Emergency Braking System	Version Information	
Sonata(LF)	2018	General	Autonomous Emergency Braking System	Read Fault Code	
Sonata(LF)	2018	General	Autonomous Emergency Braking System	Clear Fault Memory	
Sonata(LF)	2018	General	Autonomous Emergency Braking System	Read Data Stream	
Sonata(LF)	2018	General	Autonomous Emergency Braking System	Special Function	Variant Coding
Sonata(LF)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(LF)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(LF)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(LF)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(LF)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(LF)	2018	General	AC(Air Conditioning)	Version Information	
Sonata(LF)	2018	General	AC(Air Conditioning)	Read Fault Code	
Sonata(LF)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(LF)	2018	General	AC(Air Conditioning)	Read Data Stream	
Sonata(LF)	2018	General	AC(Air Conditioning)	Actuation Test	
Sonata(LF)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Sonata(LF)	2018	General	BCM(Body Control Module)	Version Information	
Sonata(LF)	2018	General	BCM(Body Control Module)	Read Fault Code	
Sonata(LF)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(LF)	2018	General	BCM(Body Control Module)	Read Data Stream	
Sonata(LF)	2018	General	BCM(Body Control Module)	Actuation Test	
Sonata(LF)	2018	General	BCM(Body Control Module)	Special Function	User Option
Sonata(LF)	2018	General	BCM(Body Control Module)	Special Function	OTF System Identification(Only UK)
Sonata(LF)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata(LF)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sonata(LF)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting

model	year	area	system	function	subfunction
Sonata(LF)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(LF)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(LF)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(LF)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(LF)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(LF)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(LF)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(LF)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(LF)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(LF)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata(LF)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata(LF)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata(LF)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata(LF)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata(LF)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Sonata(LF)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Sonata(LF)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sonata(LF)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata(LF)	2018	General	EPS(Electronic Power Steering)	Version Information	
Sonata(LF)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(LF)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(LF)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(LF)	2018	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(LF)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata(LF)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata(LF)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata(LF)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Sonata(LF)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(LF)	2018	General	Smart Key Unit	Version Information	
Sonata(LF)	2018	General	Smart Key Unit	Read Fault Code	
Sonata(LF)	2018	General	Smart Key Unit	Clear Fault Memory	
Sonata(LF)	2018	General	Smart Key Unit	Read Data Stream	
Sonata(LF)	2018	General	Smart Key Unit	Actuation Test	
Sonata(LF)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(LF)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata(LF)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Sonata(LF)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Sonata(LF)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(LF)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Sonata(LF)	2018	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Sonata(LF)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Sonata(LF)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata(LF)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata(LF)	2018	General	CCS(Cruise Control System)	Version Information	
Sonata(LF)	2018	General	CCS(Cruise Control System)	Read Fault Code	
Sonata(LF)	2018	General	CCS(Cruise Control System)	Clear Fault Memory	
Sonata(LF)	2018	General	CCS(Cruise Control System)	Read Data Stream	
Sonata(LF)	2018	General	CCS(Cruise Control System)	Special Function	Radar Sensor Alignment(SCC/AFD)
Sonata(LF)	2018	General	Blind Spot Detection	Version Information	
Sonata(LF)	2018	General	Blind Spot Detection	Read Fault Code	
Sonata(LF)	2018	General	Blind Spot Detection	Clear Fault Memory	
Sonata(LF)	2018	General	Blind Spot Detection	Read Data Stream	
Sonata(LF)	2018	General	Blind Spot Detection	Actuation Test	
Sonata(LF)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata(LF)	2018	General	Multi Function Camera	Version Information	

model	year	area	system	function	subfunction
Sonata(LF)	2018	General	Multi Function Camera	Read Fault Code	
Sonata(LF)	2018	General	Multi Function Camera	Clear Fault Memory	
Sonata(LF)	2018	General	Multi Function Camera	Read Data Stream	
Sonata(LF)	2018	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
Sonata(LF)	2018	General	Multi Function Camera	Special Function	SPTAC Calibration
Sonata(LF)	2018	General	Parking Guide System	Version Information	
Sonata(LF)	2018	General	Parking Guide System	Read Fault Code	
Sonata(LF)	2018	General	Parking Guide System	Clear Fault Memory	
Sonata(LF)	2018	General	Parking Guide System	Read Data Stream	
Sonata(LF)	2018	General	Parking Guide System	Actuation Test	
Sonata(LF)	2018	General	Parking Guide System	Special Function	SVM Calibration
Sonata(LF)	2018	General	CD Player	Version Information	
Sonata(LF)	2018	General	CD Player	Read Fault Code	
Sonata(LF)	2018	General	CD Player	Clear Fault Memory	
Sonata(LF)	2018	General	CD Player	Actuation Test	
Sonata(LF)	2018	General	Telematics Unit	Version Information	
Sonata(LF)	2018	General	Telematics Unit	Read Fault Code	
Sonata(LF)	2018	General	Telematics Unit	Clear Fault Memory	
Sonata(LF)	2018	General	IMM(Immobilizer)	Read Fault Code	
Sonata(LF)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(LF)	2018	General	IMM(Immobilizer)	Read Data Stream	
Sonata(LF)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(LF)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(LF)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(LF)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(LF)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata(LF)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata(LF)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(LF)	2018	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values

model	year	area	system	function	subfunction
Sonata(LF)	2018	General	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Replacement)
Sonata(LF)	2017	General	ECM(Engine Control Module)	Version Information	
Sonata(LF)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(LF)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(LF)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(LF)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(LF)	2017	General	ECM(Engine Control Module)	Actuation Test	
Sonata(LF)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(LF)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(LF)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(LF)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(LF)	2017	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(LF)	2017	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(LF)	2017	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(LF)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(LF)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(LF)	2017	General	TCM(Transmission Control Module)	Version Information	
Sonata(LF)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(LF)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(LF)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(LF)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(LF)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(LF)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(LF)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(LF)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(LF)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(LF)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(LF)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(LF)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(LF)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Sonata(LF)	2017	General	ABS(Anti-lock Braking System)	Special Function	Reset(ECP/ESC)Only
Sonata(LF)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(LF)	2017	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Sonata(LF)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata(LF)	2017	General	Electric Parking Brake	Version Information	
Sonata(LF)	2017	General	Electric Parking Brake	Read Fault Code	
Sonata(LF)	2017	General	Electric Parking Brake	Clear Fault Memory	
Sonata(LF)	2017	General	Electric Parking Brake	Read Data Stream	
Sonata(LF)	2017	General	Electric Parking Brake	Actuation Test	
Sonata(LF)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(LF)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(LF)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(LF)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(LF)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(LF)	2017	General	AC(Air Conditioning)	Version Information	
Sonata(LF)	2017	General	AC(Air Conditioning)	Read Fault Code	
Sonata(LF)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(LF)	2017	General	AC(Air Conditioning)	Read Data Stream	
Sonata(LF)	2017	General	AC(Air Conditioning)	Actuation Test	
Sonata(LF)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Sonata(LF)	2017	General	BCM(Body Control Module)	Version Information	
Sonata(LF)	2017	General	BCM(Body Control Module)	Read Fault Code	
Sonata(LF)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(LF)	2017	General	BCM(Body Control Module)	Read Data Stream	
Sonata(LF)	2017	General	BCM(Body Control Module)	Actuation Test	
Sonata(LF)	2017	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Sonata(LF)	2017	General	BCM(Body Control Module)	Special Function	On System Identification(Only UK)
Sonata(LF)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata(LF)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sonata(LF)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata(LF)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(LF)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(LF)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(LF)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(LF)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(LF)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(LF)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(LF)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(LF)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(LF)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata(LF)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata(LF)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata(LF)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata(LF)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata(LF)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata(LF)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sonata(LF)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Password Teaching/Changing
Sonata(LF)	2017	General	EPS(Electronic Power Steering)	Version Information	
Sonata(LF)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(LF)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(LF)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(LF)	2017	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(LF)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata(LF)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)

model	year	area	system	function	subfunction
Sonata(LF)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata(LF)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(LF)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(LF)	2017	General	Smart Key Unit	Version Information	
Sonata(LF)	2017	General	Smart Key Unit	Read Fault Code	
Sonata(LF)	2017	General	Smart Key Unit	Clear Fault Memory	
Sonata(LF)	2017	General	Smart Key Unit	Read Data Stream	
Sonata(LF)	2017	General	Smart Key Unit	Actuation Test	
Sonata(LF)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(LF)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata(LF)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Sonata(LF)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Sonata(LF)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(LF)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Sonata(LF)	2017	General	Smart Key Unit	Special Function	ESCL Enable Output Check
Sonata(LF)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Sonata(LF)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata(LF)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata(LF)	2017	General	CCS(Cruise Control System)	Version Information	
Sonata(LF)	2017	General	CCS(Cruise Control System)	Read Fault Code	
Sonata(LF)	2017	General	CCS(Cruise Control System)	Clear Fault Memory	
Sonata(LF)	2017	General	CCS(Cruise Control System)	Read Data Stream	
Sonata(LF)	2017	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Sonata(LF)	2017	General	Blind Spot Detection	Version Information	
Sonata(LF)	2017	General	Blind Spot Detection	Read Fault Code	
Sonata(LF)	2017	General	Blind Spot Detection	Clear Fault Memory	
Sonata(LF)	2017	General	Blind Spot Detection	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(LF)	2017	General	Blind Spot Detection	Actuation Test	
Sonata(LF)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata(LF)	2017	General	IMM(Immobilizer)	Read Fault Code	
Sonata(LF)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(LF)	2017	General	IMM(Immobilizer)	Read Data Stream	
Sonata(LF)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(LF)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(LF)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(LF)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(LF)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata(LF)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata(LF)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(LF)	2017	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Version Information	
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Actuation Test	
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(LFA)	2018	General	TCM(Transmission Control Module)	Version Information	
Sonata(LFA)	2018	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(LFA)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(LFA)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(LFA)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(LFA)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(LFA)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(LFA)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(LFA)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(LFA)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(LFA)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(LFA)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(LFA)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(LFA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(LFA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata(LFA)	2018	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(LFA)	2018	General	Autonomous Emergency Braking System	Version Information	
Sonata(LFA)	2018	General	Autonomous Emergency Braking System	Read Fault Code	
Sonata(LFA)	2018	General	Autonomous Emergency Braking System	Clear Fault Memory	
Sonata(LFA)	2018	General	Autonomous Emergency Braking System	Read Data Stream	
Sonata(LFA)	2018	General	Autonomous Emergency Braking System	Special Function	Variant Coding
Sonata(LFA)	2018	General	Electronic Parking Brake	Version Information	
Sonata(LFA)	2018	General	Electronic Parking Brake	Read Fault Code	
Sonata(LFA)	2018	General	Electronic Parking Brake	Clear Fault Memory	
Sonata(LFA)	2018	General	Electronic Parking Brake	Read Data Stream	
Sonata(LFA)	2018	General	Electronic Parking Brake	Actuation Test	
Sonata(LFA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(LFA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(LFA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(LFA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(LFA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(LFA)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Sonata(LFA)	2018	General	AC(Air Conditioning)	Version Information	
Sonata(LFA)	2018	General	AC(Air Conditioning)	Read Fault Code	
Sonata(LFA)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(LFA)	2018	General	AC(Air Conditioning)	Read Data Stream	
Sonata(LFA)	2018	General	AC(Air Conditioning)	Actuation Test	
Sonata(LFA)	2018	General	BCM(Body Control Module)	Version Information	
Sonata(LFA)	2018	General	BCM(Body Control Module)	Read Fault Code	
Sonata(LFA)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(LFA)	2018	General	BCM(Body Control Module)	Read Data Stream	
Sonata(LFA)	2018	General	BCM(Body Control Module)	Actuation Test	
Sonata(LFA)	2018	General	BCM(Body Control Module)	Special Function	User Option
Sonata(LFA)	2018	General	BCM(Body Control Module)	Special Function	Oil System Identification(Only LFA)
Sonata(LFA)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata(LFA)	2018	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata(LFA)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(LFA)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(LFA)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(LFA)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(LFA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(LFA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(LFA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(LFA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(LFA)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(LFA)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata(LFA)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata(LFA)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(LFA)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata(LFA)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata(LFA)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Sonata(LFA)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Sonata(LFA)	2018	General	EPS(Electronic Power Steering)	Version Information	
Sonata(LFA)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(LFA)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(LFA)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(LFA)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata(LFA)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata(LFA)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(LFA)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(LFA)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Sonata(LFA)	2018	General	Smart Key Unit	Version Information	
Sonata(LFA)	2018	General	Smart Key Unit	Read Fault Code	
Sonata(LFA)	2018	General	Smart Key Unit	Clear Fault Memory	
Sonata(LFA)	2018	General	Smart Key Unit	Read Data Stream	
Sonata(LFA)	2018	General	Smart Key Unit	Actuation Test	
Sonata(LFA)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(LFA)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata(LFA)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Sonata(LFA)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(LFA)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata(LFA)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Sonata(LFA)	2018	General	CCS(Cruise Control System)	Version Information	
Sonata(LFA)	2018	General	CCS(Cruise Control System)	Read Fault Code	
Sonata(LFA)	2018	General	CCS(Cruise Control System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(LFA)	2018	General	CCS(Cruise Control System)	Read Data Stream	
Sonata(LFA)	2018	General	CCS(Cruise Control System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Sonata(LFA)	2018	General	Blind Spot Detection	Version Information	
Sonata(LFA)	2018	General	Blind Spot Detection	Read Fault Code	
Sonata(LFA)	2018	General	Blind Spot Detection	Clear Fault Memory	
Sonata(LFA)	2018	General	Blind Spot Detection	Read Data Stream	
Sonata(LFA)	2018	General	Blind Spot Detection	Actuation Test	
Sonata(LFA)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata(LFA)	2018	General	Multi Function Camera	Version Information	
Sonata(LFA)	2018	General	Multi Function Camera	Read Fault Code	
Sonata(LFA)	2018	General	Multi Function Camera	Clear Fault Memory	
Sonata(LFA)	2018	General	Multi Function Camera	Read Data Stream	
Sonata(LFA)	2018	General	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
Sonata(LFA)	2018	General	Multi Function Camera	Special Function	SPTAC Calibration
Sonata(LFA)	2018	General	Parking Guide System	Version Information	
Sonata(LFA)	2018	General	Parking Guide System	Read Fault Code	
Sonata(LFA)	2018	General	Parking Guide System	Clear Fault Memory	
Sonata(LFA)	2018	General	Parking Guide System	Read Data Stream	
Sonata(LFA)	2018	General	Parking Guide System	Actuation Test	
Sonata(LFA)	2018	General	Parking Guide System	Special Function	SVM Calibration
Sonata(LFA)	2018	General	CD Player	Read Fault Code	
Sonata(LFA)	2018	General	CD Player	Clear Fault Memory	
Sonata(LFA)	2018	General	CD Player	Read Data Stream	
Sonata(LFA)	2018	General	CD Player	Actuation Test	
Sonata(LFA)	2018	General	IMM(Immobilizer)	Read Fault Code	
Sonata(LFA)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(LFA)	2018	General	IMM(Immobilizer)	Read Data Stream	
Sonata(LFA)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(LFA)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Sonata(LFA)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(LFA)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(LFA)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata(LFA)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata(LFA)	2018	General	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Sonata(LFA)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sonata(LFA)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Version Information	
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Actuation Test	
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(LFA)	2017	General	TCM(Transmission Control Module)	Version Information	
Sonata(LFA)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(LFA)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(LFA)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(LFA)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(LFA)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(LFA)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Sonata(LFA)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(LFA)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(LFA)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(LFA)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(LFA)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(LFA)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(LFA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(LFA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata(LFA)	2017	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(LFA)	2017	General	Electric Parking Brake	Version Information	
Sonata(LFA)	2017	General	Electric Parking Brake	Read Fault Code	
Sonata(LFA)	2017	General	Electric Parking Brake	Clear Fault Memory	
Sonata(LFA)	2017	General	Electric Parking Brake	Read Data Stream	
Sonata(LFA)	2017	General	Electric Parking Brake	Actuation Test	
Sonata(LFA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(LFA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(LFA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(LFA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(LFA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(LFA)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Sonata(LFA)	2017	General	AC(Air Conditioning)	Version Information	
Sonata(LFA)	2017	General	AC(Air Conditioning)	Read Fault Code	
Sonata(LFA)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(LFA)	2017	General	AC(Air Conditioning)	Read Data Stream	
Sonata(LFA)	2017	General	AC(Air Conditioning)	Actuation Test	
Sonata(LFA)	2017	General	BCM(Body Control Module)	Version Information	
Sonata(LFA)	2017	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(LFA)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(LFA)	2017	General	BCM(Body Control Module)	Read Data Stream	
Sonata(LFA)	2017	General	BCM(Body Control Module)	Actuation Test	
Sonata(LFA)	2017	General	BCM(Body Control Module)	Special Function	User Option
Sonata(LFA)	2017	General	BCM(Body Control Module)	Special Function	On System
Sonata(LFA)	2017	General	BCM(Body Control Module)	Special Function	Identification(Only UK)
Sonata(LFA)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata(LFA)	2017	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata(LFA)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(LFA)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(LFA)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(LFA)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(LFA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(LFA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(LFA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(LFA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(LFA)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(LFA)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata(LFA)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata(LFA)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata(LFA)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata(LFA)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata(LFA)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata(LFA)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sonata(LFA)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Password Teaching/Changing
Sonata(LFA)	2017	General	EPS(Electronic Power Steering)	Version Information	
Sonata(LFA)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(LFA)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(LFA)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(LFA)	2017	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(LFA)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata(LFA)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata(LFA)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata(LFA)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(LFA)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(LFA)	2017	General	Smart Key Unit	Version Information	
Sonata(LFA)	2017	General	Smart Key Unit	Read Fault Code	
Sonata(LFA)	2017	General	Smart Key Unit	Clear Fault Memory	
Sonata(LFA)	2017	General	Smart Key Unit	Read Data Stream	
Sonata(LFA)	2017	General	Smart Key Unit	Actuation Test	
Sonata(LFA)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(LFA)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata(LFA)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Sonata(LFA)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(LFA)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata(LFA)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Sonata(LFA)	2017	General	CCS(Cruise Control System)	Version Information	
Sonata(LFA)	2017	General	CCS(Cruise Control System)	Read Fault Code	
Sonata(LFA)	2017	General	CCS(Cruise Control System)	Clear Fault Memory	
Sonata(LFA)	2017	General	CCS(Cruise Control System)	Read Data Stream	
Sonata(LFA)	2017	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Sonata(LFA)	2017	General	Blind Spot Detection	Version Information	
Sonata(LFA)	2017	General	Blind Spot Detection	Read Fault Code	
Sonata(LFA)	2017	General	Blind Spot Detection	Clear Fault Memory	
Sonata(LFA)	2017	General	Blind Spot Detection	Read Data Stream	
Sonata(LFA)	2017	General	Blind Spot Detection	Actuation Test	

model	year	area	system	function	subfunction
Sonata(LFA)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata(LFA)	2017	General	Lane Departure Warning System	Version Information	
Sonata(LFA)	2017	General	Lane Departure Warning System	Read Fault Code	
Sonata(LFA)	2017	General	Lane Departure Warning System	Clear Fault Memory	
Sonata(LFA)	2017	General	Lane Departure Warning System	Read Data Stream	
Sonata(LFA)	2017	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Sonata(LFA)	2017	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Sonata(LFA)	2017	General	Telematics Unit	Version Information	
Sonata(LFA)	2017	General	Telematics Unit	Read Fault Code	
Sonata(LFA)	2017	General	Telematics Unit	Clear Fault Memory	
Sonata(LFA)	2017	General	IMM(Immobilizer)	Read Fault Code	
Sonata(LFA)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(LFA)	2017	General	IMM(Immobilizer)	Read Data Stream	
Sonata(LFA)	2017	General	IMM(Immobilizer)	Special Function	Password
Sonata(LFA)	2017	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Sonata(LFA)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(LFA)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(LFA)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(LFA)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata(LFA)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata(LFA)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sonata(LFA)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Version Information	
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Actuation Test	
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(LFA)	2016	General	TCM(Transmission Control Module)	Version Information	
Sonata(LFA)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(LFA)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(LFA)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(LFA)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(LFA)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(LFA)	2016	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Sonata(LFA)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(LFA)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(LFA)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(LFA)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(LFA)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(LFA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(LFA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata(LFA)	2016	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(LFA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(LFA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(LFA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(LFA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(LFA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(LFA)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Sonata(LFA)	2016	General	AC(Air Conditioning)	Version Information	
Sonata(LFA)	2016	General	AC(Air Conditioning)	Read Fault Code	
Sonata(LFA)	2016	General	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(LFA)	2016	General	AC(Air Conditioning)	Read Data Stream	
Sonata(LFA)	2016	General	AC(Air Conditioning)	Actuation Test	
Sonata(LFA)	2016	General	BCM(Body Control Module)	Version Information	
Sonata(LFA)	2016	General	BCM(Body Control Module)	Read Fault Code	
Sonata(LFA)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(LFA)	2016	General	BCM(Body Control Module)	Read Data Stream	
Sonata(LFA)	2016	General	BCM(Body Control Module)	Actuation Test	
Sonata(LFA)	2016	General	BCM(Body Control Module)	Special Function	User Option
Sonata(LFA)	2016	General	BCM(Body Control Module)	Special Function	OTR System
Sonata(LFA)	2016	General	BCM(Body Control Module)	Special Function	Identification(Only LFA)
Sonata(LFA)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata(LFA)	2016	General	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata(LFA)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(LFA)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(LFA)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(LFA)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(LFA)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(LFA)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(LFA)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(LFA)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(LFA)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(LFA)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata(LFA)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata(LFA)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata(LFA)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata(LFA)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata(LFA)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata(LFA)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sonata(LFA)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Password Teaching/Charging

model	year	area	system	function	subfunction
Sonata(LFA)	2016	General	EPS(Electronic Power Steering)	Version Information	
Sonata(LFA)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(LFA)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(LFA)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(LFA)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(LFA)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata(LFA)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata(LFA)	2016	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata(LFA)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(LFA)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(LFA)	2016	General	Smart Key Unit	Version Information	
Sonata(LFA)	2016	General	Smart Key Unit	Read Fault Code	
Sonata(LFA)	2016	General	Smart Key Unit	Clear Fault Memory	
Sonata(LFA)	2016	General	Smart Key Unit	Read Data Stream	
Sonata(LFA)	2016	General	Smart Key Unit	Actuation Test	
Sonata(LFA)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(LFA)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata(LFA)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Sonata(LFA)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(LFA)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata(LFA)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Sonata(LFA)	2016	General	CCS(Cruise Control System)	Version Information	
Sonata(LFA)	2016	General	CCS(Cruise Control System)	Read Fault Code	
Sonata(LFA)	2016	General	CCS(Cruise Control System)	Clear Fault Memory	
Sonata(LFA)	2016	General	CCS(Cruise Control System)	Read Data Stream	
Sonata(LFA)	2016	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Sonata(LFA)	2016	General	Blind Spot Detection	Version Information	

model	year	area	system	function	subfunction
Sonata(LFA)	2016	General	Blind Spot Detection	Read Fault Code	
Sonata(LFA)	2016	General	Blind Spot Detection	Clear Fault Memory	
Sonata(LFA)	2016	General	Blind Spot Detection	Read Data Stream	
Sonata(LFA)	2016	General	Blind Spot Detection	Actuation Test	
Sonata(LFA)	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata(LFA)	2016	General	Lane Departure Warning System	Version Information	
Sonata(LFA)	2016	General	Lane Departure Warning System	Read Fault Code	
Sonata(LFA)	2016	General	Lane Departure Warning System	Clear Fault Memory	
Sonata(LFA)	2016	General	Lane Departure Warning System	Read Data Stream	
Sonata(LFA)	2016	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Sonata(LFA)	2016	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Sonata(LFA)	2016	General	Telematics Unit	Version Information	
Sonata(LFA)	2016	General	Telematics Unit	Read Fault Code	
Sonata(LFA)	2016	General	Telematics Unit	Clear Fault Memory	
Sonata(LFA)	2016	General	IMM(Immobilizer)	Read Fault Code	
Sonata(LFA)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(LFA)	2016	General	IMM(Immobilizer)	Read Data Stream	
Sonata(LFA)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Sonata(LFA)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(LFA)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(LFA)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(LFA)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata(LFA)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(LFA)	2016	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sonata(LFA)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(LFA)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode

model	year	area	system	function	subfunction
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Version Information	
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Actuation Test	
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(LFA)	2015	General	TCM(Transmission Control Module)	Version Information	
Sonata(LFA)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(LFA)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(LFA)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(LFA)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(LFA)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(LFA)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(LFA)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(LFA)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(LFA)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(LFA)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(LFA)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(LFA)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(LFA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Sonata(LFA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata(LFA)	2015	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(LFA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(LFA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(LFA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(LFA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(LFA)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(LFA)	2015	General	FATC/MTC	Version Information	
Sonata(LFA)	2015	General	FATC/MTC	Read Fault Code	
Sonata(LFA)	2015	General	FATC/MTC	Clear Fault Memory	
Sonata(LFA)	2015	General	FATC/MTC	Read Data Stream	
Sonata(LFA)	2015	General	FATC/MTC	Actuation Test	
Sonata(LFA)	2015	General	FATC/MTC	Special Function	AC Compressor Test(ECV Type)
Sonata(LFA)	2015	General	EPS(Electronic Power Steering)	Version Information	
Sonata(LFA)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(LFA)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(LFA)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(LFA)	2015	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(LFA)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata(LFA)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata(LFA)	2015	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata(LFA)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(LFA)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(LFA)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(LFA)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(LFA)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(LFA)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(LFA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(LFA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(LFA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(LFA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(LFA)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(LFA)	2015	General	IMM(Immobilizer)	Read Data Stream	
Sonata(LFA)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(LFA)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(LFA)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(LFA)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(LFA)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(LFA)	2015	General	Smart Key Unit	Version Information	
Sonata(LFA)	2015	General	Smart Key Unit	Read Fault Code	
Sonata(LFA)	2015	General	Smart Key Unit	Clear Fault Memory	
Sonata(LFA)	2015	General	Smart Key Unit	Read Data Stream	
Sonata(LFA)	2015	General	Smart Key Unit	Actuation Test	
Sonata(LFA)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(LFA)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata(LFA)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Sonata(LFA)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(LFA)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata(LFA)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Sonata(LFA)	2015	General	CCS(Cruise Control System)	Version Information	
Sonata(LFA)	2015	General	CCS(Cruise Control System)	Read Fault Code	
Sonata(LFA)	2015	General	CCS(Cruise Control System)	Clear Fault Memory	
Sonata(LFA)	2015	General	CCS(Cruise Control System)	Read Data Stream	
Sonata(LFA)	2015	General	CCS(Cruise Control System)	Special Function	SCC Alignment
Sonata(LFA)	2015	General	Assist Door Module	Version Information	

model	year	area	system	function	subfunction
Sonata(LFA)	2015	General	Assist Door Module	Read Fault Code	
Sonata(LFA)	2015	General	Assist Door Module	Clear Fault Memory	
Sonata(LFA)	2015	General	Assist Door Module	Read Data Stream	
Sonata(LFA)	2015	General	Assist Door Module	Actuation Test	
Sonata(LFA)	2015	General	Auto Headlamp Leveling System	Version Information	
Sonata(LFA)	2015	General	Auto Headlamp Leveling System	Read Fault Code	
Sonata(LFA)	2015	General	Auto Headlamp Leveling System	Clear Fault Memory	
Sonata(LFA)	2015	General	Auto Headlamp Leveling System	Read Data Stream	
Sonata(LFA)	2015	General	Auto Headlamp Leveling System	Actuation Test	
Sonata(LFA)	2015	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Sonata(LFA)	2015	General	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Sonata(LFA)	2015	General	Auto Headlamp Leveling System	Special Function	Password Teaching/Chopping
Sonata(LFA)	2015	General	Blind Spot Detection	Version Information	
Sonata(LFA)	2015	General	Blind Spot Detection	Read Fault Code	
Sonata(LFA)	2015	General	Blind Spot Detection	Clear Fault Memory	
Sonata(LFA)	2015	General	Blind Spot Detection	Read Data Stream	
Sonata(LFA)	2015	General	Blind Spot Detection	Actuation Test	
Sonata(LFA)	2015	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata(LFA)	2015	General	BCM(Body Control Module)	Version Information	
Sonata(LFA)	2015	General	BCM(Body Control Module)	Read Fault Code	
Sonata(LFA)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(LFA)	2015	General	BCM(Body Control Module)	Read Data Stream	
Sonata(LFA)	2015	General	BCM(Body Control Module)	Actuation Test	
Sonata(LFA)	2015	General	BCM(Body Control Module)	Special Function	User Option
Sonata(LFA)	2015	General	BCM(Body Control Module)	Special Function	OTF System Identification(Only UK)
Sonata(LFA)	2015	General	Cluster Module	Version Information	
Sonata(LFA)	2015	General	Cluster Module	Read Fault Code	
Sonata(LFA)	2015	General	Cluster Module	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(LFA)	2015	General	Cluster Module	Read Data Stream	
Sonata(LFA)	2015	General	Cluster Module	Actuation Test	
Sonata(LFA)	2015	General	Cluster Module	Special Function	CLU Variant Coding
Sonata(LFA)	2015	General	Driver Door Module	Version Information	
Sonata(LFA)	2015	General	Driver Door Module	Read Fault Code	
Sonata(LFA)	2015	General	Driver Door Module	Clear Fault Memory	
Sonata(LFA)	2015	General	Driver Door Module	Read Data Stream	
Sonata(LFA)	2015	General	Driver Door Module	Actuation Test	
Sonata(LFA)	2015	General	Driver Door Module	Special Function	User Option
Sonata(LFA)	2015	General	EPB(Electrical Parking Brake)	Version Information	
Sonata(LFA)	2015	General	EPB(Electrical Parking Brake)	Read Fault Code	
Sonata(LFA)	2015	General	EPB(Electrical Parking Brake)	Clear Fault Memory	
Sonata(LFA)	2015	General	EPB(Electrical Parking Brake)	Read Data Stream	
Sonata(LFA)	2015	General	EPB(Electrical Parking Brake)	Actuation Test	
Sonata(LFA)	2015	General	Lane Departure Warning System	Version Information	
Sonata(LFA)	2015	General	Lane Departure Warning System	Read Fault Code	
Sonata(LFA)	2015	General	Lane Departure Warning System	Clear Fault Memory	
Sonata(LFA)	2015	General	Lane Departure Warning System	Read Data Stream	
Sonata(LFA)	2015	General	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Sonata(LFA)	2015	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Sonata(LFA)	2015	General	Occupant Classification Sensor	Version Information	
Sonata(LFA)	2015	General	Occupant Classification Sensor	Read Fault Code	
Sonata(LFA)	2015	General	Occupant Classification Sensor	Clear Fault Memory	
Sonata(LFA)	2015	General	Occupant Classification Sensor	Read Data Stream	
Sonata(LFA)	2015	General	Occupant Classification Sensor	Special Function	Body Sensor Reset
Sonata(LFA)	2015	General	Power Seat Module	Version Information	
Sonata(LFA)	2015	General	Power Seat Module	Read Fault Code	
Sonata(LFA)	2015	General	Power Seat Module	Clear Fault Memory	
Sonata(LFA)	2015	General	Power Seat Module	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(LFA)	2015	General	Power Seat Module	Actuation Test	
Sonata(LFA)	2015	General	Power Seat Module	Special Function	User Option
Sonata(LFA)	2015	General	Power Seat Module	Special Function	Seat Limit Position Setting
Sonata(LFA)	2015	General	Smart Junction Block	Version Information	
Sonata(LFA)	2015	General	Smart Junction Block	Read Fault Code	
Sonata(LFA)	2015	General	Smart Junction Block	Clear Fault Memory	
Sonata(LFA)	2015	General	Smart Junction Block	Read Data Stream	
Sonata(LFA)	2015	General	Smart Junction Block	Actuation Test	
Sonata(LFA)	2015	General	Smart Junction Block	Special Function	User Option
Sonata(LFA)	2015	General	Telematics Unit	Version Information	
Sonata(LFA)	2015	General	Telematics Unit	Read Fault Code	
Sonata(LFA)	2015	General	Telematics Unit	Clear Fault Memory	
Sonata(LFA)	2015	General	Transmitter Code Saving	Read Data Stream	
Sonata(LFA)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Sonata(LFA)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sonata(LFA)	2015	General	Dual Clutch Transmission	Version Information	
Sonata(LFA)	2015	General	Dual Clutch Transmission	Read Fault Code	
Sonata(LFA)	2015	General	Dual Clutch Transmission	Clear Fault Memory	
Sonata(LFA)	2015	General	Dual Clutch Transmission	Read Data Stream	
Sonata(LFA)	2015	General	Dual Clutch Transmission	Read FreezeData	
Sonata(LFA)	2015	General	Dual Clutch Transmission	Actuation Test	
Sonata(LFA)	2015	General	Dual Clutch Transmission	Special Function	DCT Learning Function
Sonata(LFA)	2015	General	IMM(Immobilizer)	Read Fault Code	
Sonata(LFA)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
Sonata(NF)	2010	General	ECM(Engine Control Module)	Version Information	
Sonata(NF)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(NF)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(NF)	2010	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(NF)	2010	General	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Sonata(NF)	2010	General	ECM(Engine Control Module)	Actuation Test	
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(NF)	2010	General	TCM(Transmission Control Module)	Version Information	
Sonata(NF)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(NF)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(NF)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(NF)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(NF)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(NF)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(NF)	2010	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(NF)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(NF)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(NF)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(NF)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(NF)	2010	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(NF)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(NF)	2010	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Sonata(NF)	2010	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Sonata(NF)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(NF)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(NF)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(NF)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(NF)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Sonata(NF)	2010	General	AC(Air Conditioning)	Version Information	
Sonata(NF)	2010	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(NF)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(NF)	2010	General	AC(Air Conditioning)	Read Data Stream	
Sonata(NF)	2010	General	AC(Air Conditioning)	Actuation Test	
Sonata(NF)	2010	General	BCM(Body Control Module)	Version Information	
Sonata(NF)	2010	General	BCM(Body Control Module)	Read Data Stream	
Sonata(NF)	2010	General	BCM(Body Control Module)	Actuation Test	
Sonata(NF)	2010	General	BCM(Body Control Module)	Special Function	User Option
Sonata(NF)	2010	General	EPS(Electronic Power Steering)	Version Information	
Sonata(NF)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(NF)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(NF)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(NF)	2010	General	IMM(Immobilizer)	Read Data Stream	
Sonata(NF)	2010	General	IMM(Immobilizer)	Special Function	Password
Sonata(NF)	2010	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Sonata(NF)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(NF)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(NF)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(NF)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(NF)	2010	General	Smart Key	Version Information	
Sonata(NF)	2010	General	Smart Key	Read Fault Code	
Sonata(NF)	2010	General	Smart Key	Clear Fault Memory	
Sonata(NF)	2010	General	Smart Key	Read Data Stream	
Sonata(NF)	2010	General	Smart Key	Actuation Test	
Sonata(NF)	2010	General	Smart Key	Special Function	ESCL Open Status Check
Sonata(NF)	2010	General	Smart Key	Special Function	Smart Key Code Saving
Sonata(NF)	2010	General	Smart Key	Special Function	Neutralization Mode
Sonata(NF)	2010	General	Smart Key	Special Function	Antenna Status Check
Sonata(NF)	2010	General	Smart Key	Special Function	ESCL Status Information
Sonata(NF)	2010	General	Smart Key	Special Function	FOB Key Status Information
Sonata(NF)	2010	General	Smart Key	Special Function	PDM Status Information

model	year	area	system	function	subfunction
Sonata(NF)	2010	General	Smart Key	Special Function	Serial Communication Line Check
Sonata(NF)	2010	General	Smart Key	Special Function	SMK Status Information
Sonata(NF)	2010	General	Transmitter Code Saving	Read Data Stream	
Sonata(NF)	2010	General	Transmitter Code Saving	Special Function	Code Saving
Sonata(NF)	2010	General	AGCS	Version Information	
Sonata(NF)	2010	General	AGCS	Read Fault Code	
Sonata(NF)	2010	General	AGCS	Clear Fault Memory	
Sonata(NF)	2010	General	AGCS	Read Data Stream	
Sonata(NF)	2010	General	AGCS	Actuation Test	
Sonata(NF)	2010	General	Electronic Control Suspension	Version Information	
Sonata(NF)	2010	General	Electronic Control Suspension	Read Fault Code	
Sonata(NF)	2010	General	Electronic Control Suspension	Clear Fault Memory	
Sonata(NF)	2010	General	Electronic Control Suspension	Read Data Stream	
Sonata(NF)	2010	General	Electronic Control Suspension	Actuation Test	
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Sonata(NF)	2010	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sonata(NF)	2009	General	ECM(Engine Control Module)	Version Information	
Sonata(NF)	2009	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(NF)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(NF)	2009	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(NF)	2009	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(NF)	2009	General	ECM(Engine Control Module)	Actuation Test	
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(NF)	2009	General	TCM(Transmission Control Module)	Version Information	
Sonata(NF)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(NF)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(NF)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(NF)	2009	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(NF)	2009	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(NF)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(NF)	2009	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(NF)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(NF)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(NF)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(NF)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(NF)	2009	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(NF)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(NF)	2009	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Sonata(NF)	2009	General	ABS(Anti-lock Braking System)	Special Function	Reset(ESP/ESC)Only
Sonata(NF)	2009	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Sonata(NF)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(NF)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(NF)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(NF)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(NF)	2009	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Sonata(NF)	2009	General	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Sonata(NF)	2009	General	AC(Air Conditioning)	Read Fault Code	
Sonata(NF)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(NF)	2009	General	AC(Air Conditioning)	Read Data Stream	
Sonata(NF)	2009	General	AC(Air Conditioning)	Actuation Test	
Sonata(NF)	2009	General	BCM(Body Control Module)	Version Information	
Sonata(NF)	2009	General	BCM(Body Control Module)	Read Data Stream	
Sonata(NF)	2009	General	BCM(Body Control Module)	Actuation Test	
Sonata(NF)	2009	General	BCM(Body Control Module)	Special Function	User Option
Sonata(NF)	2009	General	EPS(Electronic Power Steering)	Version Information	
Sonata(NF)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(NF)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(NF)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(NF)	2009	General	IMM(Immobilizer)	Read Data Stream	
Sonata(NF)	2009	General	IMM(Immobilizer)	Special Function	Password
Sonata(NF)	2009	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Sonata(NF)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(NF)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(NF)	2009	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(NF)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(NF)	2009	General	Smart Key	Version Information	
Sonata(NF)	2009	General	Smart Key	Read Fault Code	
Sonata(NF)	2009	General	Smart Key	Clear Fault Memory	
Sonata(NF)	2009	General	Smart Key	Read Data Stream	
Sonata(NF)	2009	General	Smart Key	Actuation Test	
Sonata(NF)	2009	General	Smart Key	Special Function	ESCL Open Status Check
Sonata(NF)	2009	General	Smart Key	Special Function	Smart Key Code Saving
Sonata(NF)	2009	General	Smart Key	Special Function	Neutralization Mode
Sonata(NF)	2009	General	Smart Key	Special Function	Antenna Status Check
Sonata(NF)	2009	General	Smart Key	Special Function	ESCL Status Information
Sonata(NF)	2009	General	Smart Key	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
Sonata(NF)	2009	General	Smart Key	Special Function	PDM Status Information
Sonata(NF)	2009	General	Smart Key	Special Function	Serial Communication Line Check
Sonata(NF)	2009	General	Smart Key	Special Function	SMK Status Information
Sonata(NF)	2009	General	Transmitter Code Saving	Read Data Stream	
Sonata(NF)	2009	General	Transmitter Code Saving	Special Function	Code Saving
Sonata(NF)	2009	General	AGCS	Version Information	
Sonata(NF)	2009	General	AGCS	Read Fault Code	
Sonata(NF)	2009	General	AGCS	Clear Fault Memory	
Sonata(NF)	2009	General	AGCS	Read Data Stream	
Sonata(NF)	2009	General	AGCS	Actuation Test	
Sonata(NF)	2009	General	Electronic Control Suspension	Version Information	
Sonata(NF)	2009	General	Electronic Control Suspension	Read Fault Code	
Sonata(NF)	2009	General	Electronic Control Suspension	Clear Fault Memory	
Sonata(NF)	2009	General	Electronic Control Suspension	Read Data Stream	
Sonata(NF)	2009	General	Electronic Control Suspension	Actuation Test	
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Sonata(NF)	2009	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sonata(NF)	2008	General	ECM(Engine Control Module)	Version Information	
Sonata(NF)	2008	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(NF)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(NF)	2008	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(NF)	2008	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(NF)	2008	General	ECM(Engine Control Module)	Actuation Test	
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(NF)	2008	General	TCM(Transmission Control Module)	Version Information	
Sonata(NF)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(NF)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(NF)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(NF)	2008	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(NF)	2008	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(NF)	2008	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(NF)	2008	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(NF)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(NF)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(NF)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(NF)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(NF)	2008	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(NF)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(NF)	2008	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Sonata(NF)	2008	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only
Sonata(NF)	2008	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Sonata(NF)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(NF)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(NF)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(NF)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(NF)	2008	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.

model	year	area	system	function	subfunction
Sonata(NF)	2008	General	AC(Air Conditioning)	Version Information	
Sonata(NF)	2008	General	AC(Air Conditioning)	Read Fault Code	
Sonata(NF)	2008	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(NF)	2008	General	AC(Air Conditioning)	Read Data Stream	
Sonata(NF)	2008	General	AC(Air Conditioning)	Actuation Test	
Sonata(NF)	2008	General	BCM(Body Control Module)	Version Information	
Sonata(NF)	2008	General	BCM(Body Control Module)	Read Data Stream	
Sonata(NF)	2008	General	BCM(Body Control Module)	Actuation Test	
Sonata(NF)	2008	General	BCM(Body Control Module)	Special Function	User Option
Sonata(NF)	2008	General	EPS(Electronic Power Steering)	Version Information	
Sonata(NF)	2008	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(NF)	2008	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(NF)	2008	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(NF)	2008	General	IMM(Immobilizer)	Read Data Stream	
Sonata(NF)	2008	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(NF)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(NF)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(NF)	2008	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(NF)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(NF)	2008	General	Smart Key	Version Information	
Sonata(NF)	2008	General	Smart Key	Read Fault Code	
Sonata(NF)	2008	General	Smart Key	Clear Fault Memory	
Sonata(NF)	2008	General	Smart Key	Read Data Stream	
Sonata(NF)	2008	General	Smart Key	Actuation Test	
Sonata(NF)	2008	General	Smart Key	Special Function	ESCL Open Status Check
Sonata(NF)	2008	General	Smart Key	Special Function	Smart Key Code Saving
Sonata(NF)	2008	General	Smart Key	Special Function	Neutralization Mode
Sonata(NF)	2008	General	Smart Key	Special Function	Antenna Status Check
Sonata(NF)	2008	General	Smart Key	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Sonata(NF)	2008	General	Smart Key	Special Function	FOB Key Status Information
Sonata(NF)	2008	General	Smart Key	Special Function	PDM Status Information
Sonata(NF)	2008	General	Smart Key	Special Function	Serial Communication Line Check
Sonata(NF)	2008	General	Smart Key	Special Function	SMK Status Information
Sonata(NF)	2008	General	AGCS	Version Information	
Sonata(NF)	2008	General	AGCS	Read Fault Code	
Sonata(NF)	2008	General	AGCS	Clear Fault Memory	
Sonata(NF)	2008	General	AGCS	Read Data Stream	
Sonata(NF)	2008	General	AGCS	Actuation Test	
Sonata(NF)	2008	General	Electronic Control Suspension	Version Information	
Sonata(NF)	2008	General	Electronic Control Suspension	Read Fault Code	
Sonata(NF)	2008	General	Electronic Control Suspension	Clear Fault Memory	
Sonata(NF)	2008	General	Electronic Control Suspension	Read Data Stream	
Sonata(NF)	2008	General	Electronic Control Suspension	Actuation Test	
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Sonata(NF)	2008	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sonata(NF)	2007	General	ECM(Engine Control Module)	Version Information	
Sonata(NF)	2007	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(NF)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(NF)	2007	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(NF)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(NF)	2007	General	ECM(Engine Control Module)	Actuation Test	
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(NF)	2007	General	TCM(Transmission Control Module)	Version Information	
Sonata(NF)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(NF)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(NF)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(NF)	2007	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(NF)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(NF)	2007	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(NF)	2007	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(NF)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(NF)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(NF)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(NF)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(NF)	2007	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(NF)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(NF)	2007	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Sonata(NF)	2007	General	ABS(Anti-lock Braking System)	Special Function	Reset(ESP/ESC)Only
Sonata(NF)	2007	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Sonata(NF)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(NF)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(NF)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(NF)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(NF)	2007	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Sonata(NF)	2007	General	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Sonata(NF)	2007	General	AC(Air Conditioning)	Read Fault Code	
Sonata(NF)	2007	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(NF)	2007	General	AC(Air Conditioning)	Read Data Stream	
Sonata(NF)	2007	General	AC(Air Conditioning)	Actuation Test	
Sonata(NF)	2007	General	BCM(Body Control Module)	Version Information	
Sonata(NF)	2007	General	BCM(Body Control Module)	Read Data Stream	
Sonata(NF)	2007	General	BCM(Body Control Module)	Actuation Test	
Sonata(NF)	2007	General	BCM(Body Control Module)	Special Function	User Option
Sonata(NF)	2007	General	EPS(Electronic Power Steering)	Version Information	
Sonata(NF)	2007	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(NF)	2007	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(NF)	2007	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(NF)	2007	General	IMM(Immobilizer)	Read Data Stream	
Sonata(NF)	2007	General	IMM(Immobilizer)	Special Function	Password
Sonata(NF)	2007	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Sonata(NF)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(NF)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(NF)	2007	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(NF)	2007	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(NF)	2007	General	Electronic Control Suspension	Version Information	
Sonata(NF)	2007	General	Electronic Control Suspension	Read Fault Code	
Sonata(NF)	2007	General	Electronic Control Suspension	Clear Fault Memory	
Sonata(NF)	2007	General	Electronic Control Suspension	Read Data Stream	
Sonata(NF)	2007	General	Electronic Control Suspension	Actuation Test	
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Auto Detected
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Cylinder Power
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	ECT Circuit Test

model	year	area	system	function	subfunction
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	TPS Circuit Test
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Sonata(NF)	2007	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sonata(NF)	2006	General	ECM(Engine Control Module)	Version Information	
Sonata(NF)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(NF)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(NF)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(NF)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(NF)	2006	General	ECM(Engine Control Module)	Actuation Test	
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(NF)	2006	General	TCM(Transmission Control Module)	Version Information	
Sonata(NF)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(NF)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(NF)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(NF)	2006	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(NF)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(NF)	2006	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(NF)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(NF)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(NF)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(NF)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(NF)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(NF)	2006	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(NF)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(NF)	2006	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Sonata(NF)	2006	General	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Sonata(NF)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(NF)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(NF)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(NF)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(NF)	2006	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Sonata(NF)	2006	General	AC(Air Conditioning)	Version Information	
Sonata(NF)	2006	General	AC(Air Conditioning)	Read Fault Code	
Sonata(NF)	2006	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(NF)	2006	General	AC(Air Conditioning)	Read Data Stream	
Sonata(NF)	2006	General	AC(Air Conditioning)	Actuation Test	
Sonata(NF)	2006	General	BCM(Body Control Module)	Version Information	
Sonata(NF)	2006	General	BCM(Body Control Module)	Read Data Stream	
Sonata(NF)	2006	General	BCM(Body Control Module)	Actuation Test	
Sonata(NF)	2006	General	BCM(Body Control Module)	Special Function	User Option
Sonata(NF)	2006	General	EPS(Electronic Power Steering)	Version Information	
Sonata(NF)	2006	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(NF)	2006	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(NF)	2006	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(NF)	2006	General	IMM(Immobilizer)	Read Data Stream	
Sonata(NF)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(NF)	2006	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(NF)	2006	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Sonata(NF)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(NF)	2006	General	Electronic Control Suspension	Version Information	
Sonata(NF)	2006	General	Electronic Control Suspension	Read Fault Code	
Sonata(NF)	2006	General	Electronic Control Suspension	Clear Fault Memory	
Sonata(NF)	2006	General	Electronic Control Suspension	Read Data Stream	
Sonata(NF)	2006	General	Electronic Control Suspension	Actuation Test	
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	TPS Circuit Test
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Sonata(NF)	2006	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sonata(NF)	2005	General	ECM(Engine Control Module)	Version Information	
Sonata(NF)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(NF)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(NF)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(NF)	2005	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(NF)	2005	General	ECM(Engine Control Module)	Actuation Test	
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting

model	year	area	system	function	subfunction
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(NF)	2005	General	TCM(Transmission Control Module)	Version Information	
Sonata(NF)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(NF)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(NF)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(NF)	2005	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(NF)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(NF)	2005	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(NF)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(NF)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(NF)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(NF)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(NF)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(NF)	2005	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(NF)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(NF)	2005	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Sonata(NF)	2005	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only
Sonata(NF)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(NF)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(NF)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(NF)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(NF)	2005	General	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Sonata(NF)	2005	General	AC(Air Conditioning)	Version Information	
Sonata(NF)	2005	General	AC(Air Conditioning)	Read Fault Code	
Sonata(NF)	2005	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(NF)	2005	General	AC(Air Conditioning)	Read Data Stream	
Sonata(NF)	2005	General	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Sonata(NF)	2005	General	BCM(Body Control Module)	Version Information	
Sonata(NF)	2005	General	BCM(Body Control Module)	Read Data Stream	
Sonata(NF)	2005	General	BCM(Body Control Module)	Actuation Test	
Sonata(NF)	2005	General	BCM(Body Control Module)	Special Function	User Option
Sonata(NF)	2005	General	EPS(Electronic Power Steering)	Version Information	
Sonata(NF)	2005	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(NF)	2005	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(NF)	2005	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(NF)	2005	General	IMM(Immobilizer)	Read Data Stream	
Sonata(NF)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(NF)	2005	General	IMM(Immobilizer)	Special Function	Password
Sonata(NF)	2005	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Sonata(NF)	2005	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(NF)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(NF)	2005	General	Electronic Control Suspension	Version Information	
Sonata(NF)	2005	General	Electronic Control Suspension	Read Fault Code	
Sonata(NF)	2005	General	Electronic Control Suspension	Clear Fault Memory	
Sonata(NF)	2005	General	Electronic Control Suspension	Read Data Stream	
Sonata(NF)	2005	General	Electronic Control Suspension	Actuation Test	
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	Auto Detected
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	Cylinder Power
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(NF)	2005	General	ECM(Engine Control Module)	Special Function	TPS Circuit Test

model	year	area	system	function	subfunction
Sonata(Y2)	1993	General		Read Fault Code	
Sonata(Y2)	1993	General		Clear Fault Memory	
Sonata(Y2)	1993	General		Read Data Stream	
Sonata(Y2)	1992	General		Read Fault Code	
Sonata(Y2)	1992	General		Clear Fault Memory	
Sonata(Y2)	1992	General		Read Data Stream	
Sonata(Y2)	1991	General		Read Fault Code	
Sonata(Y2)	1991	General		Clear Fault Memory	
Sonata(Y2)	1991	General		Read Data Stream	
Sonata(Y2)	1990	General		Read Fault Code	
Sonata(Y2)	1990	General		Clear Fault Memory	
Sonata(Y2)	1990	General		Read Data Stream	
Sonata(Y2)	1989	General		Read Fault Code	
Sonata(Y2)	1989	General		Clear Fault Memory	
Sonata(Y2)	1989	General		Read Data Stream	
Sonata(Y3)	1998	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Sonata(Y3)	1998	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Sonata(Y3)	1998	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Sonata(Y3)	1998	General	ECM(Engine Control Module)L4-DOHC	Actuation Test	
Sonata(Y3)	1998	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y3)	1998	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y3)	1998	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y3)	1998	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(Y3)	1998	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(Y3)	1998	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(Y3)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(Y3)	1998	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(Y3)	1998	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(Y3)	1998	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(Y3)	1998	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Sonata(Y3)	1998	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Sonata(Y3)	1998	General	ECM(Engine Control Module)L4-SOHC	Actuation Test	
Sonata(Y3)	1998	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Sonata(Y3)	1998	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Sonata(Y3)	1998	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Sonata(Y3)	1998	General	ECM(Engine Control Module)V6-SOHC	Actuation Test	
Sonata(Y3)	1997	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Sonata(Y3)	1997	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Sonata(Y3)	1997	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Sonata(Y3)	1997	General	ECM(Engine Control Module)L4-DOHC	Actuation Test	
Sonata(Y3)	1997	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y3)	1997	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y3)	1997	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y3)	1997	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(Y3)	1997	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(Y3)	1997	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(Y3)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(Y3)	1997	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(Y3)	1997	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(Y3)	1997	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Sonata(Y3)	1997	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Sonata(Y3)	1997	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Sonata(Y3)	1997	General	ECM(Engine Control Module)L4-SOHC	Actuation Test	
Sonata(Y3)	1997	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Sonata(Y3)	1997	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Sonata(Y3)	1997	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Sonata(Y3)	1997	General	ECM(Engine Control Module)V6-SOHC	Actuation Test	
Sonata(Y3)	1996	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(Y3)	1996	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Sonata(Y3)	1996	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Sonata(Y3)	1996	General	ECM(Engine Control Module)L4-DOHC	Actuation Test	
Sonata(Y3)	1996	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y3)	1996	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y3)	1996	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y3)	1996	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(Y3)	1996	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(Y3)	1996	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(Y3)	1996	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(Y3)	1996	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(Y3)	1996	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(Y3)	1996	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Sonata(Y3)	1996	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Sonata(Y3)	1996	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Sonata(Y3)	1996	General	ECM(Engine Control Module)L4-SOHC	Actuation Test	
Sonata(Y3)	1996	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Sonata(Y3)	1996	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Sonata(Y3)	1996	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Sonata(Y3)	1996	General	ECM(Engine Control Module)V6-SOHC	Actuation Test	
Sonata(Y3)	1995	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Sonata(Y3)	1995	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Sonata(Y3)	1995	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Sonata(Y3)	1995	General	ECM(Engine Control Module)L4-DOHC	Actuation Test	
Sonata(Y3)	1995	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y3)	1995	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y3)	1995	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y3)	1995	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(Y3)	1995	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(Y3)	1995	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(Y3)	1995	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(Y3)	1995	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(Y3)	1995	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(Y3)	1995	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Sonata(Y3)	1995	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Sonata(Y3)	1995	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Sonata(Y3)	1995	General	ECM(Engine Control Module)L4-SOHC	Actuation Test	
Sonata(Y3)	1995	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Sonata(Y3)	1995	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Sonata(Y3)	1995	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Sonata(Y3)	1995	General	ECM(Engine Control Module)V6-SOHC	Actuation Test	
Sonata(Y3)	1994	General	ECM(Engine Control Module)L4-DOHC	Read Fault Code	
Sonata(Y3)	1994	General	ECM(Engine Control Module)L4-DOHC	Clear Fault Memory	
Sonata(Y3)	1994	General	ECM(Engine Control Module)L4-DOHC	Read Data Stream	
Sonata(Y3)	1994	General	ECM(Engine Control Module)L4-DOHC	Actuation Test	
Sonata(Y3)	1994	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y3)	1994	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y3)	1994	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y3)	1994	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(Y3)	1994	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(Y3)	1994	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(Y3)	1994	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(Y3)	1994	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(Y3)	1994	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(Y3)	1994	General	ECM(Engine Control Module)L4-SOHC	Read Fault Code	
Sonata(Y3)	1994	General	ECM(Engine Control Module)L4-SOHC	Clear Fault Memory	
Sonata(Y3)	1994	General	ECM(Engine Control Module)L4-SOHC	Read Data Stream	
Sonata(Y3)	1994	General	ECM(Engine Control Module)L4-SOHC	Actuation Test	

model	year	area	system	function	subfunction
Sonata(Y3)	1994	General	ECM(Engine Control Module)V6-SOHC	Read Fault Code	
Sonata(Y3)	1994	General	ECM(Engine Control Module)V6-SOHC	Clear Fault Memory	
Sonata(Y3)	1994	General	ECM(Engine Control Module)V6-SOHC	Read Data Stream	
Sonata(Y3)	1994	General	ECM(Engine Control Module)V6-SOHC	Actuation Test	
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Version Information	
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Actuation Test	
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(YFI)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(YFI)	2015	General	TCM(Transmission Control Module)	Version Information	
Sonata(YFI)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFI)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFI)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(YFI)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFI)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFI)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFI)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(YFI)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(YFI)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(YFI)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(YFI)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(YFI)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(YFI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFI)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata(YFI)	2015	General	AC(Air Conditioning)	Version Information	
Sonata(YFI)	2015	General	AC(Air Conditioning)	Read Fault Code	
Sonata(YFI)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFI)	2015	General	AC(Air Conditioning)	Read Data Stream	
Sonata(YFI)	2015	General	AC(Air Conditioning)	Actuation Test	
Sonata(YFI)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Sonata(YFI)	2015	General	BCM(Body Control Module)	Version Information	
Sonata(YFI)	2015	General	BCM(Body Control Module)	Read Fault Code	
Sonata(YFI)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFI)	2015	General	BCM(Body Control Module)	Read Data Stream	
Sonata(YFI)	2015	General	BCM(Body Control Module)	Actuation Test	
Sonata(YFI)	2015	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata(YFI)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata(YFI)	2015	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata(YFI)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata(YFI)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sonata(YFI)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata(YFI)	2015	General	Smart Key Unit	Read Data Stream	
Sonata(YFI)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(YFI)	2015	General	Smart Key Unit	Version Information	
Sonata(YFI)	2015	General	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(YFI)	2015	General	Smart Key Unit	Clear Fault Memory	
Sonata(YFI)	2015	General	Smart Key Unit	Actuation Test	
Sonata(YFI)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata(YFI)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Sonata(YFI)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Sonata(YFI)	2015	General	Smart Key Unit	Special Function	PDM Status Information
Sonata(YFI)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(YFI)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata(YFI)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata(YFI)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Sonata(YFI)	2015	General	IMM(Immobilizer)	Read Data Stream	
Sonata(YFI)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(YFI)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(YFI)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(YFI)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(YFI)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFI)	2015	General	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata(YFI)	2015	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Version Information	
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Actuation Test	
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test

model	year	area	system	function	subfunction
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(YFI)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(YFI)	2014	General	TCM(Transmission Control Module)	Version Information	
Sonata(YFI)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFI)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFI)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(YFI)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFI)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFI)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFI)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(YFI)	2014	General	ESP(Electronic Stability Program)	Version Information	
Sonata(YFI)	2014	General	ESP(Electronic Stability Program)	Read Fault Code	
Sonata(YFI)	2014	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Sonata(YFI)	2014	General	ESP(Electronic Stability Program)	Read Data Stream	
Sonata(YFI)	2014	General	ESP(Electronic Stability Program)	Actuation Test	
Sonata(YFI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFI)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata(YFI)	2014	General	AC(Air Conditioning)	Version Information	
Sonata(YFI)	2014	General	AC(Air Conditioning)	Read Fault Code	
Sonata(YFI)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFI)	2014	General	AC(Air Conditioning)	Read Data Stream	
Sonata(YFI)	2014	General	AC(Air Conditioning)	Actuation Test	
Sonata(YFI)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Sonata(YFI)	2014	General	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Sonata(YFI)	2014	General	BCM(Body Control Module)	Read Fault Code	
Sonata(YFI)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFI)	2014	General	BCM(Body Control Module)	Read Data Stream	
Sonata(YFI)	2014	General	BCM(Body Control Module)	Actuation Test	
Sonata(YFI)	2014	General	Auto Headlamp Leveling System	Version Information	
Sonata(YFI)	2014	General	Auto Headlamp Leveling System	Read Fault Code	
Sonata(YFI)	2014	General	Auto Headlamp Leveling System	Clear Fault Memory	
Sonata(YFI)	2014	General	Auto Headlamp Leveling System	Read Data Stream	
Sonata(YFI)	2014	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Sonata(YFI)	2014	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Sonata(YFI)	2014	General	IMM(Immobilizer)	Read Data Stream	
Sonata(YFI)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(YFI)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(YFI)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(YFI)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(YFI)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFI)	2014	General	Smart Key	Version Information	
Sonata(YFI)	2014	General	Smart Key	Read Fault Code	
Sonata(YFI)	2014	General	Smart Key	Clear Fault Memory	
Sonata(YFI)	2014	General	Smart Key	Read Data Stream	
Sonata(YFI)	2014	General	Smart Key	Actuation Test	
Sonata(YFI)	2014	General	Smart Key	Special Function	ESCL Open Status Check
Sonata(YFI)	2014	General	Smart Key	Special Function	Smart Key Code Saving
Sonata(YFI)	2014	General	Smart Key	Special Function	Neutralization Mode
Sonata(YFI)	2014	General	Smart Key	Special Function	SMK Status Information
Sonata(YFI)	2014	General	Smart Key	Special Function	ESCL Status Information
Sonata(YFI)	2014	General	Smart Key	Special Function	PDM Status Information
Sonata(YFI)	2014	General	Smart Key	Special Function	FOB Key Status Information
Sonata(YFI)	2014	General	Smart Key	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Sonata(YFI)	2014	General	Smart Key	Special Function	Antenna Status Check
Sonata(YFI)	2014	General	Transmitter Code Saving	Read Data Stream	
Sonata(YFI)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Version Information	
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Actuation Test	
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(YFI)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(YFI)	2013	General	TCM(Transmission Control Module)	Version Information	
Sonata(YFI)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFI)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFI)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(YFI)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFI)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFI)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFI)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(YFI)	2013	General	ESP(Electronic Stability Program)	Version Information	
Sonata(YFI)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
Sonata(YFI)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(YFI)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
Sonata(YFI)	2013	General	ESP(Electronic Stability Program)	Actuation Test	
Sonata(YFI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFI)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata(YFI)	2013	General	AC(Air Conditioning)	Version Information	
Sonata(YFI)	2013	General	AC(Air Conditioning)	Read Fault Code	
Sonata(YFI)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFI)	2013	General	AC(Air Conditioning)	Read Data Stream	
Sonata(YFI)	2013	General	AC(Air Conditioning)	Actuation Test	
Sonata(YFI)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Sonata(YFI)	2013	General	BCM(Body Control Module)	Version Information	
Sonata(YFI)	2013	General	BCM(Body Control Module)	Read Fault Code	
Sonata(YFI)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFI)	2013	General	BCM(Body Control Module)	Read Data Stream	
Sonata(YFI)	2013	General	BCM(Body Control Module)	Actuation Test	
Sonata(YFI)	2013	General	Auto Headlamp Leveling System	Version Information	
Sonata(YFI)	2013	General	Auto Headlamp Leveling System	Read Fault Code	
Sonata(YFI)	2013	General	Auto Headlamp Leveling System	Clear Fault Memory	
Sonata(YFI)	2013	General	Auto Headlamp Leveling System	Read Data Stream	
Sonata(YFI)	2013	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Sonata(YFI)	2013	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Sonata(YFI)	2013	General	IMM(Immobilizer)	Read Data Stream	
Sonata(YFI)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(YFI)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(YFI)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(YFI)	2013	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Sonata(YFI)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFI)	2013	General	Smart Key	Version Information	
Sonata(YFI)	2013	General	Smart Key	Read Fault Code	
Sonata(YFI)	2013	General	Smart Key	Clear Fault Memory	
Sonata(YFI)	2013	General	Smart Key	Read Data Stream	
Sonata(YFI)	2013	General	Smart Key	Actuation Test	
Sonata(YFI)	2013	General	Smart Key	Special Function	ESCL Open Status Check
Sonata(YFI)	2013	General	Smart Key	Special Function	Smart Key Code Saving
Sonata(YFI)	2013	General	Smart Key	Special Function	Neutralization Mode
Sonata(YFI)	2013	General	Smart Key	Special Function	SMK Status Information
Sonata(YFI)	2013	General	Smart Key	Special Function	ESCL Status Information
Sonata(YFI)	2013	General	Smart Key	Special Function	PDM Status Information
Sonata(YFI)	2013	General	Smart Key	Special Function	FOB Key Status Information
Sonata(YFI)	2013	General	Smart Key	Special Function	Serial Communication Line Check
Sonata(YFI)	2013	General	Smart Key	Special Function	Antenna Status Check
Sonata(YFI)	2013	General	Transmitter Code Saving	Read Data Stream	
Sonata(YFI)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Version Information	
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Actuation Test	
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Special Function	CVVT Test

model	year	area	system	function	subfunction
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(YFI)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(YFI)	2012	General	TCM(Transmission Control Module)	Version Information	
Sonata(YFI)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFI)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFI)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(YFI)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFI)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFI)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFI)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(YFI)	2012	General	ESP(Electronic Stability Program)	Version Information	
Sonata(YFI)	2012	General	ESP(Electronic Stability Program)	Read Fault Code	
Sonata(YFI)	2012	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Sonata(YFI)	2012	General	ESP(Electronic Stability Program)	Read Data Stream	
Sonata(YFI)	2012	General	ESP(Electronic Stability Program)	Actuation Test	
Sonata(YFI)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFI)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFI)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFI)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFI)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata(YFI)	2012	General	AC(Air Conditioning)	Version Information	
Sonata(YFI)	2012	General	AC(Air Conditioning)	Read Fault Code	
Sonata(YFI)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFI)	2012	General	AC(Air Conditioning)	Read Data Stream	
Sonata(YFI)	2012	General	AC(Air Conditioning)	Actuation Test	
Sonata(YFI)	2012	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Sonata(YFI)	2012	General	BCM(Body Control Module)	Version Information	
Sonata(YFI)	2012	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(YFI)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFI)	2012	General	BCM(Body Control Module)	Read Data Stream	
Sonata(YFI)	2012	General	BCM(Body Control Module)	Actuation Test	
Sonata(YFI)	2012	General	Auto Headlamp Leveling System	Version Information	
Sonata(YFI)	2012	General	Auto Headlamp Leveling System	Read Fault Code	
Sonata(YFI)	2012	General	Auto Headlamp Leveling System	Clear Fault Memory	
Sonata(YFI)	2012	General	Auto Headlamp Leveling System	Read Data Stream	
Sonata(YFI)	2012	General	Auto Headlamp Leveling System	Special Function	Level Initialization
Sonata(YFI)	2012	General	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Sonata(YFI)	2012	General	IMM(Immobilizer)	Read Data Stream	
Sonata(YFI)	2012	General	IMM(Immobilizer)	Special Function	Password
Sonata(YFI)	2012	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Sonata(YFI)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(YFI)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(YFI)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(YFI)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFI)	2012	General	Smart Key	Version Information	
Sonata(YFI)	2012	General	Smart Key	Read Fault Code	
Sonata(YFI)	2012	General	Smart Key	Clear Fault Memory	
Sonata(YFI)	2012	General	Smart Key	Read Data Stream	
Sonata(YFI)	2012	General	Smart Key	Actuation Test	
Sonata(YFI)	2012	General	Smart Key	Special Function	ESCL Open Status Check
Sonata(YFI)	2012	General	Smart Key	Special Function	Smart Key Code Saving
Sonata(YFI)	2012	General	Smart Key	Special Function	Neutralization Mode
Sonata(YFI)	2012	General	Smart Key	Special Function	SMK Status Information
Sonata(YFI)	2012	General	Smart Key	Special Function	ESCL Status Information
Sonata(YFI)	2012	General	Smart Key	Special Function	PDM Status Information
Sonata(YFI)	2012	General	Smart Key	Special Function	FOB Key Status Information
Sonata(YFI)	2012	General	Smart Key	Special Function	Serial Communication Line Check
Sonata(YFI)	2012	General	Smart Key	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Sonata(YFI)	2012	General	Transmitter Code Saving	Read Data Stream	
Sonata(YFI)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Version Information	
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(YFA)-U.S.	2014	General	TCM(Transmission Control Module)	Version Information	
Sonata(YFA)-U.S.	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFA)-U.S.	2014	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFA)-U.S.	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(YFA)-U.S.	2014	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(YFA)-U.S.	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(YFA)-U.S.	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(YFA)-U.S.	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2014	General	ABS(Anti-lock Braking System)	Special Function	Air Bleeding Mode
Sonata(YFA)-U.S.	2014	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(YFA)-U.S.	2014	General	ABS(Anti-lock Braking System)	Special Function	IMAC/BLA/G Sensor Calibration
Sonata(YFA)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFA)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFA)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata(YFA)-U.S.	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Sonata(YFA)-U.S.	2014	General	AC(Air Conditioning)	Version Information	
Sonata(YFA)-U.S.	2014	General	AC(Air Conditioning)	Read Fault Code	
Sonata(YFA)-U.S.	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFA)-U.S.	2014	General	AC(Air Conditioning)	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	AC(Air Conditioning)	Actuation Test	
Sonata(YFA)-U.S.	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Test)
Sonata(YFA)-U.S.	2014	General	BCM(Body Control Module)	Version Information	
Sonata(YFA)-U.S.	2014	General	BCM(Body Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2014	General	BCM(Body Control Module)	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	BCM(Body Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(YFA)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(YFA)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(YFA)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(YFA)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(YFA)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(YFA)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(YFA)-U.S.	2014	General	EPS(Electronic Power Steering)	Version Information	
Sonata(YFA)-U.S.	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(YFA)-U.S.	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(YFA)-U.S.	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(YFA)-U.S.	2014	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Sonata(YFA)-U.S.	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(YFA)-U.S.	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Version Information	
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Read Fault Code	
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Clear Fault Memory	
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Actuation Test	
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Special Function	PDM Status Information
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Special Function	SMK Status Information
Sonata(YFA)-U.S.	2014	General	Smart Key Unit	Special Function	TP Status Information
Sonata(YFA)-U.S.	2014	General	Blind Spot Detection	Version Information	
Sonata(YFA)-U.S.	2014	General	Blind Spot Detection	Read Fault Code	
Sonata(YFA)-U.S.	2014	General	Blind Spot Detection	Clear Fault Memory	
Sonata(YFA)-U.S.	2014	General	Blind Spot Detection	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	Blind Spot Detection	Actuation Test	
Sonata(YFA)-U.S.	2014	General	Blind Spot Detection	Special Function	BSD Radar Calibration

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2014	General	Telematics Unit	Version Information	
Sonata(YFA)-U.S.	2014	General	Telematics Unit	Read Fault Code	
Sonata(YFA)-U.S.	2014	General	Telematics Unit	Clear Fault Memory	
Sonata(YFA)-U.S.	2014	General	IMM(Immobilizer)	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(YFA)-U.S.	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(YFA)-U.S.	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(YFA)-U.S.	2014	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(YFA)-U.S.	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFA)-U.S.	2014	General	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata(YFA)-U.S.	2014	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata(YFA)-U.S.	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Version Information	
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(YFA)-U.S.	2013	General	TCM(Transmission Control Module)	Version Information	
Sonata(YFA)-U.S.	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2013	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFA)-U.S.	2013	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFA)-U.S.	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(YFA)-U.S.	2013	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(YFA)-U.S.	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(YFA)-U.S.	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(YFA)-U.S.	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(YFA)-U.S.	2013	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata(YFA)-U.S.	2013	General	ABS(Anti-lock Braking System)	Special Function	Air Bleeding Mode
Sonata(YFA)-U.S.	2013	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(YFA)-U.S.	2013	General	ABS(Anti-lock Braking System)	Special Function	ITAC/BLA/G SENSOR Calibration
Sonata(YFA)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFA)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFA)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFA)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata(YFA)-U.S.	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Sonata(YFA)-U.S.	2013	General	AC(Air Conditioning)	Version Information	
Sonata(YFA)-U.S.	2013	General	AC(Air Conditioning)	Read Fault Code	
Sonata(YFA)-U.S.	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFA)-U.S.	2013	General	AC(Air Conditioning)	Read Data Stream	
Sonata(YFA)-U.S.	2013	General	AC(Air Conditioning)	Actuation Test	
Sonata(YFA)-U.S.	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Sonata(YFA)-U.S.	2013	General	BCM(Body Control Module)	Version Information	
Sonata(YFA)-U.S.	2013	General	BCM(Body Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2013	General	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2013	General	BCM(Body Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(YFA)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(YFA)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(YFA)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(YFA)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(YFA)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(YFA)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(YFA)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(YFA)-U.S.	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(YFA)-U.S.	2013	General	EPS(Electronic Power Steering)	Version Information	
Sonata(YFA)-U.S.	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(YFA)-U.S.	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(YFA)-U.S.	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(YFA)-U.S.	2013	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(YFA)-U.S.	2013	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Sonata(YFA)-U.S.	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(YFA)-U.S.	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Version Information	
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Read Fault Code	
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Clear Fault Memory	
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Read Data Stream	
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Actuation Test	
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Special Function	PDM Status Information

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Special Function	SMK Status Information
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Special Function	TP Status Information
Sonata(YFA)-U.S.	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(YFA)-U.S.	2013	General	Telematics Unit	Version Information	
Sonata(YFA)-U.S.	2013	General	Telematics Unit	Read Fault Code	
Sonata(YFA)-U.S.	2013	General	Telematics Unit	Clear Fault Memory	
Sonata(YFA)-U.S.	2013	General	IMM(Immobilizer)	Read Data Stream	
Sonata(YFA)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(YFA)-U.S.	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(YFA)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(YFA)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(YFA)-U.S.	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFA)-U.S.	2013	General	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata(YFA)-U.S.	2013	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata(YFA)-U.S.	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Version Information	
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2012	General	TCM(Transmission Control Module)	Version Information	
Sonata(YFA)-U.S.	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(YFA)-U.S.	2012	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFA)-U.S.	2012	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFA)-U.S.	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(YFA)-U.S.	2012	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(YFA)-U.S.	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(YFA)-U.S.	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(YFA)-U.S.	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(YFA)-U.S.	2012	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Sonata(YFA)-U.S.	2012	General	ABS(Anti-lock Braking System)	Special Function	Configuration Reset
Sonata(YFA)-U.S.	2012	General	ABS(Anti-lock Braking System)	Special Function	Air Bleeding Mode
Sonata(YFA)-U.S.	2012	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(YFA)-U.S.	2012	General	ABS(Anti-lock Braking System)	Special Function	IMAC/BLA/G Sensor Calibration
Sonata(YFA)-U.S.	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFA)-U.S.	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFA)-U.S.	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFA)-U.S.	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata(YFA)-U.S.	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Sonata(YFA)-U.S.	2012	General	AC(Air Conditioning)	Version Information	
Sonata(YFA)-U.S.	2012	General	AC(Air Conditioning)	Read Fault Code	
Sonata(YFA)-U.S.	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFA)-U.S.	2012	General	AC(Air Conditioning)	Read Data Stream	
Sonata(YFA)-U.S.	2012	General	AC(Air Conditioning)	Actuation Test	
Sonata(YFA)-U.S.	2012	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2012	General	BCM(Body Control Module)	Version Information	
Sonata(YFA)-U.S.	2012	General	BCM(Body Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2012	General	BCM(Body Control Module)	Read Data Stream	
Sonata(YFA)-U.S.	2012	General	BCM(Body Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(YFA)-U.S.	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(YFA)-U.S.	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(YFA)-U.S.	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(YFA)-U.S.	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(YFA)-U.S.	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(YFA)-U.S.	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(YFA)-U.S.	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(YFA)-U.S.	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(YFA)-U.S.	2012	General	EPS(Electronic Power Steering)	Version Information	
Sonata(YFA)-U.S.	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(YFA)-U.S.	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(YFA)-U.S.	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(YFA)-U.S.	2012	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(YFA)-U.S.	2012	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Sonata(YFA)-U.S.	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(YFA)-U.S.	2012	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Read Data Stream	
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Version Information	
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Read Fault Code	
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Actuation Test	
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Special Function	PDM Status Information
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Special Function	SMK Status Information
Sonata(YFA)-U.S.	2012	General	Smart Key Unit	Special Function	TP Status Information
Sonata(YFA)-U.S.	2012	General	Telematics Unit	Version Information	
Sonata(YFA)-U.S.	2012	General	Telematics Unit	Read Fault Code	
Sonata(YFA)-U.S.	2012	General	Telematics Unit	Clear Fault Memory	
Sonata(YFA)-U.S.	2012	General	IMM(Immobilizer)	Read Data Stream	
Sonata(YFA)-U.S.	2012	General	IMM(Immobilizer)	Special Function	Password
Sonata(YFA)-U.S.	2012	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Sonata(YFA)-U.S.	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(YFA)-U.S.	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(YFA)-U.S.	2012	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(YFA)-U.S.	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFA)-U.S.	2012	General	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata(YFA)-U.S.	2012	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata(YFA)-U.S.	2012	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Version Information	
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(YFA)-U.S.	2011	General	TCM(Transmission Control Module)	Version Information	
Sonata(YFA)-U.S.	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata(YFA)-U.S.	2011	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFA)-U.S.	2011	General	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFA)-U.S.	2011	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(YFA)-U.S.	2011	General	ABS(Anti-lock Braking System)	Version Information	
Sonata(YFA)-U.S.	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(YFA)-U.S.	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(YFA)-U.S.	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(YFA)-U.S.	2011	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata(YFA)-U.S.	2011	General	ABS(Anti-lock Braking System)	Special Function	Air Bleeding Mode
Sonata(YFA)-U.S.	2011	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(YFA)-U.S.	2011	General	ABS(Anti-lock Braking System)	Special Function	HAC/DLA/G SENSOR Calibration
Sonata(YFA)-U.S.	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFA)-U.S.	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFA)-U.S.	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFA)-U.S.	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata(YFA)-U.S.	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Sonata(YFA)-U.S.	2011	General	AC(Air Conditioning)	Version Information	
Sonata(YFA)-U.S.	2011	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFA)-U.S.	2011	General	AC(Air Conditioning)	Read Data Stream	
Sonata(YFA)-U.S.	2011	General	AC(Air Conditioning)	Actuation Test	
Sonata(YFA)-U.S.	2011	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Sonata(YFA)-U.S.	2011	General	BCM(Body Control Module)	Version Information	
Sonata(YFA)-U.S.	2011	General	BCM(Body Control Module)	Read Fault Code	
Sonata(YFA)-U.S.	2011	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFA)-U.S.	2011	General	BCM(Body Control Module)	Read Data Stream	
Sonata(YFA)-U.S.	2011	General	BCM(Body Control Module)	Actuation Test	
Sonata(YFA)-U.S.	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(YFA)-U.S.	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(YFA)-U.S.	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(YFA)-U.S.	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(YFA)-U.S.	2011	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(YFA)-U.S.	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(YFA)-U.S.	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(YFA)-U.S.	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(YFA)-U.S.	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(YFA)-U.S.	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(YFA)-U.S.	2011	General	EPS(Electronic Power Steering)	Version Information	
Sonata(YFA)-U.S.	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(YFA)-U.S.	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(YFA)-U.S.	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(YFA)-U.S.	2011	General	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(YFA)-U.S.	2011	General	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Sonata(YFA)-U.S.	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(YFA)-U.S.	2011	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Read Fault Code	
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Clear Fault Memory	
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Read Data Stream	
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Actuation Test	
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Special Function	Neutralization Mode
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Special Function	Antenna Status Check
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Special Function	PDM Status Information
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Special Function	Serial Communication Line Check
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Special Function	SMK Status Information
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Special Function	TP Status Information
Sonata(YFA)-U.S.	2011	General	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(YFA)-U.S.	2011	General	Telematics Unit	Version Information	
Sonata(YFA)-U.S.	2011	General	Telematics Unit	Read Fault Code	
Sonata(YFA)-U.S.	2011	General	Telematics Unit	Clear Fault Memory	
Sonata(YFA)-U.S.	2011	General	IMM(Immobilizer)	Read Data Stream	
Sonata(YFA)-U.S.	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(YFA)-U.S.	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(YFA)-U.S.	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(YFA)-U.S.	2011	General	IMM(Immobilizer)	Special Function	Teaching
Sonata(YFA)-U.S.	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFA)-U.S.	2011	General	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata(YFA)-U.S.	2011	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata(YFA)-U.S.	2011	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Version Information	
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Actuation Test	
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata/i45(YF)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata/i45(YF)	2015	General	TCM(Transmission Control Module)	Version Information	
Sonata/i45(YF)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata/i45(YF)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata/i45(YF)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata/i45(YF)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Sonata/i45(YF)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata/i45(YF)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata/i45(YF)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Sonata/i45(YF)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata/i45(YF)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata/i45(YF)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata/i45(YF)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata/i45(YF)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata/i45(YF)	2015	General	ABS(Anti-lock Braking System)	Special Function	Air Bleeding Mode
Sonata/i45(YF)	2015	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata/i45(YF)	2015	General	ABS(Anti-lock Braking System)	Special Function	IMAC/BLA/G Sensor Calibration

model	year	area	system	function	subfunction
Sonata/i45(YF)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata/i45(YF)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata/i45(YF)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata/i45(YF)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata/i45(YF)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata/i45(YF)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata/i45(YF)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata/i45(YF)	2015	General	AC(Air Conditioning)	Version Information	
Sonata/i45(YF)	2015	General	AC(Air Conditioning)	Read Fault Code	
Sonata/i45(YF)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata/i45(YF)	2015	General	AC(Air Conditioning)	Read Data Stream	
Sonata/i45(YF)	2015	General	AC(Air Conditioning)	Actuation Test	
Sonata/i45(YF)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Sonata/i45(YF)	2015	General	BCM(Body Control Module)	Version Information	
Sonata/i45(YF)	2015	General	BCM(Body Control Module)	Read Fault Code	
Sonata/i45(YF)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2015	General	BCM(Body Control Module)	Read Data Stream	
Sonata/i45(YF)	2015	General	BCM(Body Control Module)	Actuation Test	
Sonata/i45(YF)	2015	General	Auto Headlamp Leveling	Version Information	
Sonata/i45(YF)	2015	General	Auto Headlamp Leveling	Read Fault Code	
Sonata/i45(YF)	2015	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata/i45(YF)	2015	General	Auto Headlamp Leveling	Read Data Stream	
Sonata/i45(YF)	2015	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata/i45(YF)	2015	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata/i45(YF)	2015	General	IMM(Immobilizer)	Read Data Stream	
Sonata/i45(YF)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata/i45(YF)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata/i45(YF)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Sonata/i45(YF)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Sonata/i45(YF)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata/i45(YF)	2015	General	Smart Key	Version Information	
Sonata/i45(YF)	2015	General	Smart Key	Read Fault Code	
Sonata/i45(YF)	2015	General	Smart Key	Clear Fault Memory	
Sonata/i45(YF)	2015	General	Smart Key	Read Data Stream	
Sonata/i45(YF)	2015	General	Smart Key	Actuation Test	
Sonata/i45(YF)	2015	General	Smart Key	Special Function	ESCL Open Status Check
Sonata/i45(YF)	2015	General	Smart Key	Special Function	Smart Key Code Saving
Sonata/i45(YF)	2015	General	Smart Key	Special Function	Neutralization Mode
Sonata/i45(YF)	2015	General	Smart Key	Special Function	SMK Status Information
Sonata/i45(YF)	2015	General	Smart Key	Special Function	ESCL Status Information
Sonata/i45(YF)	2015	General	Smart Key	Special Function	PDM Status Information
Sonata/i45(YF)	2015	General	Smart Key	Special Function	FOB Key Status Information
Sonata/i45(YF)	2015	General	Smart Key	Special Function	Serial Communication Line Check
Sonata/i45(YF)	2015	General	Smart Key	Special Function	Antenna Status Check
Sonata/i45(YF)	2015	General	Transmitter Code Saving	Read Data Stream	
Sonata/i45(YF)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Version Information	
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Actuation Test	
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test

model	year	area	system	function	subfunction
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata/i45(YF)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata/i45(YF)	2014	General	TCM(Transmission Control Module)	Version Information	
Sonata/i45(YF)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata/i45(YF)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata/i45(YF)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata/i45(YF)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Sonata/i45(YF)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata/i45(YF)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata/i45(YF)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Sonata/i45(YF)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata/i45(YF)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata/i45(YF)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata/i45(YF)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata/i45(YF)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata/i45(YF)	2014	General	ABS(Anti-lock Braking System)	Special Function	Air Bleeding Mode
Sonata/i45(YF)	2014	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata/i45(YF)	2014	General	ABS(Anti-lock Braking System)	Special Function	HAC/DBC/G Sensor Calibration
Sonata/i45(YF)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata/i45(YF)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata/i45(YF)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata/i45(YF)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata/i45(YF)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata/i45(YF)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata/i45(YF)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata/i45(YF)	2014	General	AC(Air Conditioning)	Version Information	
Sonata/i45(YF)	2014	General	AC(Air Conditioning)	Read Fault Code	
Sonata/i45(YF)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata/i45(YF)	2014	General	AC(Air Conditioning)	Read Data Stream	
Sonata/i45(YF)	2014	General	AC(Air Conditioning)	Actuation Test	
Sonata/i45(YF)	2014	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Sonata/i45(YF)	2014	General	BCM(Body Control Module)	Version Information	
Sonata/i45(YF)	2014	General	BCM(Body Control Module)	Read Fault Code	
Sonata/i45(YF)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2014	General	BCM(Body Control Module)	Read Data Stream	
Sonata/i45(YF)	2014	General	BCM(Body Control Module)	Actuation Test	
Sonata/i45(YF)	2014	General	Auto Headlamp Leveling	Version Information	
Sonata/i45(YF)	2014	General	Auto Headlamp Leveling	Read Fault Code	
Sonata/i45(YF)	2014	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata/i45(YF)	2014	General	Auto Headlamp Leveling	Read Data Stream	
Sonata/i45(YF)	2014	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata/i45(YF)	2014	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata/i45(YF)	2014	General	IMM(Immobilizer)	Read Data Stream	
Sonata/i45(YF)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata/i45(YF)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata/i45(YF)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata/i45(YF)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Sonata/i45(YF)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata/i45(YF)	2014	General	Smart Key	Version Information	
Sonata/i45(YF)	2014	General	Smart Key	Read Fault Code	
Sonata/i45(YF)	2014	General	Smart Key	Clear Fault Memory	
Sonata/i45(YF)	2014	General	Smart Key	Read Data Stream	
Sonata/i45(YF)	2014	General	Smart Key	Actuation Test	

model	year	area	system	function	subfunction
Sonata/i45(YF)	2014	General	Smart Key	Special Function	ESCL Open Status Check
Sonata/i45(YF)	2014	General	Smart Key	Special Function	Smart Key Code Saving
Sonata/i45(YF)	2014	General	Smart Key	Special Function	Neutralization Mode
Sonata/i45(YF)	2014	General	Smart Key	Special Function	SMK Status Information
Sonata/i45(YF)	2014	General	Smart Key	Special Function	ESCL Status Information
Sonata/i45(YF)	2014	General	Smart Key	Special Function	PDM Status Information
Sonata/i45(YF)	2014	General	Smart Key	Special Function	FOB Key Status Information
Sonata/i45(YF)	2014	General	Smart Key	Special Function	Serial Communication Line Check
Sonata/i45(YF)	2014	General	Smart Key	Special Function	Antenna Status Check
Sonata/i45(YF)	2014	General	Transmitter Code Saving	Read Data Stream	
Sonata/i45(YF)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Version Information	
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Actuation Test	
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata/i45(YF)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata/i45(YF)	2013	General	TCM(Transmission Control Module)	Version Information	
Sonata/i45(YF)	2013	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata/i45(YF)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata/i45(YF)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata/i45(YF)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Sonata/i45(YF)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata/i45(YF)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata/i45(YF)	2013	General	ABS(Anti-lock Braking System)	Version Information	
Sonata/i45(YF)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata/i45(YF)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata/i45(YF)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata/i45(YF)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata/i45(YF)	2013	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata/i45(YF)	2013	General	ABS(Anti-lock Braking System)	Special Function	Air Bleeding Mode
Sonata/i45(YF)	2013	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata/i45(YF)	2013	General	ABS(Anti-lock Braking System)	Special Function	HAC/DBC Sensor Calibration
Sonata/i45(YF)	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata/i45(YF)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata/i45(YF)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata/i45(YF)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata/i45(YF)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata/i45(YF)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata/i45(YF)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata/i45(YF)	2013	General	AC(Air Conditioning)	Version Information	
Sonata/i45(YF)	2013	General	AC(Air Conditioning)	Read Fault Code	
Sonata/i45(YF)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata/i45(YF)	2013	General	AC(Air Conditioning)	Read Data Stream	
Sonata/i45(YF)	2013	General	AC(Air Conditioning)	Actuation Test	
Sonata/i45(YF)	2013	General	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecv Type)

model	year	area	system	function	subfunction
Sonata/i45(YF)	2013	General	BCM(Body Control Module)	Version Information	
Sonata/i45(YF)	2013	General	BCM(Body Control Module)	Read Fault Code	
Sonata/i45(YF)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2013	General	BCM(Body Control Module)	Read Data Stream	
Sonata/i45(YF)	2013	General	BCM(Body Control Module)	Actuation Test	
Sonata/i45(YF)	2013	General	Auto Headlamp Leveling	Version Information	
Sonata/i45(YF)	2013	General	Auto Headlamp Leveling	Read Fault Code	
Sonata/i45(YF)	2013	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata/i45(YF)	2013	General	Auto Headlamp Leveling	Read Data Stream	
Sonata/i45(YF)	2013	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata/i45(YF)	2013	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata/i45(YF)	2013	General	IMM(Immobilizer)	Read Data Stream	
Sonata/i45(YF)	2013	General	IMM(Immobilizer)	Special Function	Password
Sonata/i45(YF)	2013	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Sonata/i45(YF)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata/i45(YF)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata/i45(YF)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Sonata/i45(YF)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata/i45(YF)	2013	General	Smart Key	Version Information	
Sonata/i45(YF)	2013	General	Smart Key	Read Fault Code	
Sonata/i45(YF)	2013	General	Smart Key	Clear Fault Memory	
Sonata/i45(YF)	2013	General	Smart Key	Read Data Stream	
Sonata/i45(YF)	2013	General	Smart Key	Actuation Test	
Sonata/i45(YF)	2013	General	Smart Key	Special Function	ESCL Open Status Check
Sonata/i45(YF)	2013	General	Smart Key	Special Function	Smart Key Code Saving
Sonata/i45(YF)	2013	General	Smart Key	Special Function	Neutralization Mode
Sonata/i45(YF)	2013	General	Smart Key	Special Function	SMK Status Information
Sonata/i45(YF)	2013	General	Smart Key	Special Function	ESCL Status Information
Sonata/i45(YF)	2013	General	Smart Key	Special Function	PDM Status Information
Sonata/i45(YF)	2013	General	Smart Key	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
Sonata/i45(YF)	2013	General	Smart Key	Special Function	Serial Communication Line Check
Sonata/i45(YF)	2013	General	Smart Key	Special Function	Antenna Status Check
Sonata/i45(YF)	2013	General	Transmitter Code Saving	Read Data Stream	
Sonata/i45(YF)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Version Information	
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Read FreezeData	
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Actuation Test	
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata/i45(YF)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata/i45(YF)	2012	General	TCM(Transmission Control Module)	Version Information	
Sonata/i45(YF)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata/i45(YF)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata/i45(YF)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata/i45(YF)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Sonata/i45(YF)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata/i45(YF)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata/i45(YF)	2012	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Sonata/i45(YF)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata/i45(YF)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata/i45(YF)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata/i45(YF)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
Sonata/i45(YF)	2012	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata/i45(YF)	2012	General	ABS(Anti-lock Braking System)	Special Function	Air Bleeding Mode
Sonata/i45(YF)	2012	General	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata/i45(YF)	2012	General	ABS(Anti-lock Braking System)	Special Function	HAC/DBA/G Sensor Calibration
Sonata/i45(YF)	2012	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata/i45(YF)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata/i45(YF)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata/i45(YF)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata/i45(YF)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata/i45(YF)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata/i45(YF)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata/i45(YF)	2012	General	AC(Air Conditioning)	Version Information	
Sonata/i45(YF)	2012	General	AC(Air Conditioning)	Read Fault Code	
Sonata/i45(YF)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata/i45(YF)	2012	General	AC(Air Conditioning)	Read Data Stream	
Sonata/i45(YF)	2012	General	AC(Air Conditioning)	Actuation Test	
Sonata/i45(YF)	2012	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Test)
Sonata/i45(YF)	2012	General	BCM(Body Control Module)	Version Information	
Sonata/i45(YF)	2012	General	BCM(Body Control Module)	Read Fault Code	
Sonata/i45(YF)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2012	General	BCM(Body Control Module)	Read Data Stream	
Sonata/i45(YF)	2012	General	BCM(Body Control Module)	Actuation Test	
Sonata/i45(YF)	2012	General	Auto Headlamp Leveling	Version Information	
Sonata/i45(YF)	2012	General	Auto Headlamp Leveling	Read Fault Code	

model	year	area	system	function	subfunction
Sonata/i45(YF)	2012	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata/i45(YF)	2012	General	Auto Headlamp Leveling	Read Data Stream	
Sonata/i45(YF)	2012	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata/i45(YF)	2012	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata/i45(YF)	2012	General	IMM(Immobilizer)	Read Data Stream	
Sonata/i45(YF)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata/i45(YF)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata/i45(YF)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata/i45(YF)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Sonata/i45(YF)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata/i45(YF)	2012	General	Smart Key	Version Information	
Sonata/i45(YF)	2012	General	Smart Key	Read Fault Code	
Sonata/i45(YF)	2012	General	Smart Key	Clear Fault Memory	
Sonata/i45(YF)	2012	General	Smart Key	Read Data Stream	
Sonata/i45(YF)	2012	General	Smart Key	Actuation Test	
Sonata/i45(YF)	2012	General	Smart Key	Special Function	ESCL Open Status Check
Sonata/i45(YF)	2012	General	Smart Key	Special Function	Smart Key Code Saving
Sonata/i45(YF)	2012	General	Smart Key	Special Function	Neutralization Mode
Sonata/i45(YF)	2012	General	Smart Key	Special Function	SMK Status Information
Sonata/i45(YF)	2012	General	Smart Key	Special Function	ESCL Status Information
Sonata/i45(YF)	2012	General	Smart Key	Special Function	PDM Status Information
Sonata/i45(YF)	2012	General	Smart Key	Special Function	FOB Key Status Information
Sonata/i45(YF)	2012	General	Smart Key	Special Function	Serial Communication Line Check
Sonata/i45(YF)	2012	General	Smart Key	Special Function	Antenna Status Check
Sonata/i45(YF)	2012	General	Transmitter Code Saving	Read Data Stream	
Sonata/i45(YF)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Version Information	
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Read FreezeData	
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Actuation Test	
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sonata/i45(YF)	2011	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance (Option)
Sonata/i45(YF)	2011	General	TCM(Transmission Control Module)	Version Information	
Sonata/i45(YF)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Sonata/i45(YF)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Sonata/i45(YF)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
Sonata/i45(YF)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Sonata/i45(YF)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata/i45(YF)	2011	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata/i45(YF)	2011	General	ESP(Electronic Stability Program)	Version Information	
Sonata/i45(YF)	2011	General	ESP(Electronic Stability Program)	Read Fault Code	
Sonata/i45(YF)	2011	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Sonata/i45(YF)	2011	General	ESP(Electronic Stability Program)	Read Data Stream	
Sonata/i45(YF)	2011	General	ESP(Electronic Stability Program)	Actuation Test	
Sonata/i45(YF)	2011	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Sonata/i45(YF)	2011	General	ESP(Electronic Stability Program)	Special Function	Air Bleeding Mode
Sonata/i45(YF)	2011	General	ESP(Electronic Stability Program)	Special Function	Steering Angle Learning
Sonata/i45(YF)	2011	General	ESP(Electronic Stability Program)	Special Function	HAC/BLA/G Sensor Calibration
Sonata/i45(YF)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Sonata/i45(YF)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata/i45(YF)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata/i45(YF)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata/i45(YF)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Sonata/i45(YF)	2011	General	AC(Air Conditioning)	Version Information	
Sonata/i45(YF)	2011	General	AC(Air Conditioning)	Read Fault Code	
Sonata/i45(YF)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Sonata/i45(YF)	2011	General	AC(Air Conditioning)	Read Data Stream	
Sonata/i45(YF)	2011	General	AC(Air Conditioning)	Actuation Test	
Sonata/i45(YF)	2011	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Sonata/i45(YF)	2011	General	BCM(Body Control Module)	Version Information	
Sonata/i45(YF)	2011	General	BCM(Body Control Module)	Read Fault Code	
Sonata/i45(YF)	2011	General	BCM(Body Control Module)	Clear Fault Memory	
Sonata/i45(YF)	2011	General	BCM(Body Control Module)	Read Data Stream	
Sonata/i45(YF)	2011	General	BCM(Body Control Module)	Actuation Test	
Sonata/i45(YF)	2011	General	Auto Headlamp Leveling	Version Information	
Sonata/i45(YF)	2011	General	Auto Headlamp Leveling	Read Fault Code	
Sonata/i45(YF)	2011	General	Auto Headlamp Leveling	Clear Fault Memory	
Sonata/i45(YF)	2011	General	Auto Headlamp Leveling	Read Data Stream	
Sonata/i45(YF)	2011	General	Auto Headlamp Leveling	Special Function	Level Initialization
Sonata/i45(YF)	2011	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Sonata/i45(YF)	2011	General	IMM(Immobilizer)	Read Data Stream	
Sonata/i45(YF)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata/i45(YF)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata/i45(YF)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata/i45(YF)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Sonata/i45(YF)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata/i45(YF)	2011	General	Smart Key	Version Information	
Sonata/i45(YF)	2011	General	Smart Key	Read Fault Code	

model	year	area	system	function	subfunction
Sonata/i45(YF)	2011	General	Smart Key	Clear Fault Memory	
Sonata/i45(YF)	2011	General	Smart Key	Read Data Stream	
Sonata/i45(YF)	2011	General	Smart Key	Actuation Test	
Sonata/i45(YF)	2011	General	Smart Key	Special Function	ESCL Open Status Check
Sonata/i45(YF)	2011	General	Smart Key	Special Function	Smart Key Code Saving
Sonata/i45(YF)	2011	General	Smart Key	Special Function	Neutralization Mode
Sonata/i45(YF)	2011	General	Smart Key	Special Function	SMK Status Information
Sonata/i45(YF)	2011	General	Smart Key	Special Function	ESCL Status Information
Sonata/i45(YF)	2011	General	Smart Key	Special Function	PDM Status Information
Sonata/i45(YF)	2011	General	Smart Key	Special Function	FOB Key Status Information
Sonata/i45(YF)	2011	General	Smart Key	Special Function	Serial Communication Line Check
Sonata/i45(YF)	2011	General	Smart Key	Special Function	Antenna Status Check
Sonata/i45(YF)	2011	General	Transmitter Code Saving	Read Data Stream	
Sonata/i45(YF)	2011	General	Transmitter Code Saving	Special Function	Code Saving
Taxi(Old)	2001	General		Read Fault Code	
Taxi(Old)	2001	General		Clear Fault Memory	
Taxi(Old)	2001	General		Read Data Stream	
Taxi(Old)	2000	General		Read Fault Code	
Taxi(Old)	2000	General		Clear Fault Memory	
Taxi(Old)	2000	General		Read Data Stream	
Taxi(Old)	1999	General		Read Fault Code	
Taxi(Old)	1999	General		Clear Fault Memory	
Taxi(Old)	1999	General		Read Data Stream	
Taxi(Old)	1998	General		Read Fault Code	
Taxi(Old)	1998	General		Clear Fault Memory	
Taxi(Old)	1998	General		Read Data Stream	
Taxi(Old)	1997	General		Read Fault Code	
Taxi(Old)	1997	General		Clear Fault Memory	
Taxi(Old)	1997	General		Read Data Stream	

model	year	area	system	function	subfunction
Taxi(Old)	1996	General		Read Fault Code	
Taxi(Old)	1996	General		Clear Fault Memory	
Taxi(Old)	1996	General		Read Data Stream	
Taxi(Old)	1995	General		Read Fault Code	
Taxi(Old)	1995	General		Clear Fault Memory	
Taxi(Old)	1995	General		Read Data Stream	
Taxi(Old)	1994	General		Read Fault Code	
Taxi(Old)	1994	General		Clear Fault Memory	
Taxi(Old)	1994	General		Read Data Stream	
Terracan(HP)	2006	General	ECM(Engine Control Module)	Version Information	
Terracan(HP)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Terracan(HP)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Terracan(HP)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Terracan(HP)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Terracan(HP)	2006	General	ECM(Engine Control Module)	Actuation Test	
Terracan(HP)	2006	General	TCM(Transmission Control Module)	Version Information	
Terracan(HP)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Terracan(HP)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Terracan(HP)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Terracan(HP)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Terracan(HP)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Terracan(HP)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Terracan(HP)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Terracan(HP)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Terracan(HP)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Terracan(HP)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Terracan(HP)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Terracan(HP)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Terracan(HP)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Terracan(HP)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Terracan(HP)	2006	General	TOD	Version Information	
Terracan(HP)	2006	General	TOD	Read Fault Code	
Terracan(HP)	2006	General	TOD	Clear Fault Memory	
Terracan(HP)	2006	General	IMM(Immobilizer)	Read Fault Code	
Terracan(HP)	2006	General	IMM(Immobilizer)	Clear Fault Memory	
Terracan(HP)	2006	General	IMM(Immobilizer)	Read Data Stream	
Terracan(HP)	2006	General	IMM(Immobilizer)	Special Function	Password Record/Change
Terracan(HP)	2006	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Terracan(HP)	2006	General	IMM(Immobilizer)	Special Function	Master Key Delete
Terracan(HP)	2006	General	IMM(Immobilizer)	Special Function	Neutral Mode
Terracan(HP)	2006	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Terracan(HP)	2006	General	CODE	Special Function	Code Saving
Terracan(HP)	2006	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Terracan(HP)	2006	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Terracan(HP)	2006	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Terracan(HP)	2006	General	IMM(Immobilizer)	Special Function	Password
Terracan(HP)	2006	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Terracan(HP)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Terracan(HP)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Terracan(HP)	2006	General	IMM(Immobilizer)	Special Function	Teaching
Terracan(HP)	2005	General	ECM(Engine Control Module)	Version Information	
Terracan(HP)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Terracan(HP)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
Terracan(HP)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Terracan(HP)	2005	General	ECM(Engine Control Module)	Read FreezeData	
Terracan(HP)	2005	General	ECM(Engine Control Module)	Actuation Test	
Terracan(HP)	2005	General	TCM(Transmission Control Module)	Version Information	
Terracan(HP)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Terracan(HP)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Terracan(HP)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Terracan(HP)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Terracan(HP)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Terracan(HP)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Terracan(HP)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Terracan(HP)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Terracan(HP)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Terracan(HP)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Terracan(HP)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Terracan(HP)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Terracan(HP)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Terracan(HP)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Terracan(HP)	2005	General	TOD	Version Information	
Terracan(HP)	2005	General	TOD	Read Fault Code	
Terracan(HP)	2005	General	TOD	Clear Fault Memory	
Terracan(HP)	2005	General	IMM(Immobilizer)	Read Fault Code	
Terracan(HP)	2005	General	IMM(Immobilizer)	Clear Fault Memory	
Terracan(HP)	2005	General	IMM(Immobilizer)	Read Data Stream	
Terracan(HP)	2005	General	IMM(Immobilizer)	Special Function	Password Record/Change
Terracan(HP)	2005	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Terracan(HP)	2005	General	IMM(Immobilizer)	Special Function	Master Key Delete
Terracan(HP)	2005	General	IMM(Immobilizer)	Special Function	Neutral Mode
Terracan(HP)	2005	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Terracan(HP)	2005	General	CODE	Special Function	Code Saving
Terracan(HP)	2005	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Terracan(HP)	2005	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Terracan(HP)	2005	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Terracan(HP)	2005	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Terracan(HP)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Terracan(HP)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Terracan(HP)	2005	General	IMM(Immobilizer)	Special Function	Teaching
Terracan(HP)	2004	General	ECM(Engine Control Module)	Version Information	
Terracan(HP)	2004	General	ECM(Engine Control Module)	Read Fault Code	
Terracan(HP)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Terracan(HP)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Terracan(HP)	2004	General	ECM(Engine Control Module)	Read FreezeData	
Terracan(HP)	2004	General	ECM(Engine Control Module)	Actuation Test	
Terracan(HP)	2004	General	TCM(Transmission Control Module)	Version Information	
Terracan(HP)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Terracan(HP)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Terracan(HP)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Terracan(HP)	2004	General	TCM(Transmission Control Module)	Actuation Test	
Terracan(HP)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Terracan(HP)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Terracan(HP)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Terracan(HP)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Terracan(HP)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Terracan(HP)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Terracan(HP)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Terracan(HP)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Terracan(HP)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Terracan(HP)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Terracan(HP)	2004	General	TOD	Version Information	
Terracan(HP)	2004	General	TOD	Read Fault Code	
Terracan(HP)	2004	General	TOD	Clear Fault Memory	
Terracan(HP)	2004	General	IMM(Immobilizer)	Read Fault Code	
Terracan(HP)	2004	General	IMM(Immobilizer)	Clear Fault Memory	
Terracan(HP)	2004	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Terracan(HP)	2004	General	IMM(Immobilizer)	Special Function	Password Record/Change
Terracan(HP)	2004	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Terracan(HP)	2004	General	IMM(Immobilizer)	Special Function	Master Key Delete
Terracan(HP)	2004	General	IMM(Immobilizer)	Special Function	Neutral Mode
Terracan(HP)	2004	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Terracan(HP)	2004	General	CODE	Special Function	Code Saving
Terracan(HP)	2004	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Terracan(HP)	2004	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Terracan(HP)	2004	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Terracan(HP)	2004	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Terracan(HP)	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Terracan(HP)	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Terracan(HP)	2004	General	IMM(Immobilizer)	Special Function	Teaching
Terracan(HP)	2003	General	ECM(Engine Control Module)	Version Information	
Terracan(HP)	2003	General	ECM(Engine Control Module)	Read Fault Code	
Terracan(HP)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Terracan(HP)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Terracan(HP)	2003	General	ECM(Engine Control Module)	Read FreezeData	
Terracan(HP)	2003	General	ECM(Engine Control Module)	Actuation Test	
Terracan(HP)	2003	General	TCM(Transmission Control Module)	Version Information	
Terracan(HP)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Terracan(HP)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Terracan(HP)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Terracan(HP)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Terracan(HP)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Terracan(HP)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Terracan(HP)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Terracan(HP)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Terracan(HP)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Terracan(HP)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Terracan(HP)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Terracan(HP)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Terracan(HP)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Terracan(HP)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Terracan(HP)	2003	General	TOD	Version Information	
Terracan(HP)	2003	General	TOD	Read Fault Code	
Terracan(HP)	2003	General	TOD	Clear Fault Memory	
Terracan(HP)	2003	General	IMM(Immobilizer)	Read Fault Code	
Terracan(HP)	2003	General	IMM(Immobilizer)	Clear Fault Memory	
Terracan(HP)	2003	General	IMM(Immobilizer)	Read Data Stream	
Terracan(HP)	2003	General	IMM(Immobilizer)	Special Function	Password Record/Change
Terracan(HP)	2003	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Terracan(HP)	2003	General	IMM(Immobilizer)	Special Function	Master Key Delete
Terracan(HP)	2003	General	IMM(Immobilizer)	Special Function	Neutral Mode
Terracan(HP)	2003	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Terracan(HP)	2003	General	CODE	Special Function	Code Saving
Terracan(HP)	2003	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Terracan(HP)	2003	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Terracan(HP)	2003	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Terracan(HP)	2003	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Terracan(HP)	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Terracan(HP)	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Terracan(HP)	2003	General	IMM(Immobilizer)	Special Function	Teaching
Terracan(HP)	2002	General	ECM(Engine Control Module)	Version Information	
Terracan(HP)	2002	General	ECM(Engine Control Module)	Read Fault Code	
Terracan(HP)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
Terracan(HP)	2002	General	ECM(Engine Control Module)	Read Data Stream	
Terracan(HP)	2002	General	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Terracan(HP)	2002	General	ECM(Engine Control Module)	Actuation Test	
Terracan(HP)	2002	General	TCM(Transmission Control Module)	Version Information	
Terracan(HP)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
Terracan(HP)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Terracan(HP)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
Terracan(HP)	2002	General	TCM(Transmission Control Module)	Actuation Test	
Terracan(HP)	2002	General	ABS(Anti-lock Braking System)	Version Information	
Terracan(HP)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Terracan(HP)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Terracan(HP)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Terracan(HP)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
Terracan(HP)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Terracan(HP)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Terracan(HP)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Terracan(HP)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Terracan(HP)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Terracan(HP)	2002	General	TOD	Version Information	
Terracan(HP)	2002	General	TOD	Read Fault Code	
Terracan(HP)	2002	General	TOD	Clear Fault Memory	
Terracan(HP)	2002	General	IMM(Immobilizer)	Read Fault Code	
Terracan(HP)	2002	General	IMM(Immobilizer)	Clear Fault Memory	
Terracan(HP)	2002	General	IMM(Immobilizer)	Read Data Stream	
Terracan(HP)	2002	General	IMM(Immobilizer)	Special Function	Password Record/Change
Terracan(HP)	2002	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Terracan(HP)	2002	General	IMM(Immobilizer)	Special Function	Master Key Delete
Terracan(HP)	2002	General	IMM(Immobilizer)	Special Function	Neutral Mode
Terracan(HP)	2002	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Terracan(HP)	2002	General	CODE	Special Function	Code Saving
Terracan(HP)	2002	General	ECM(Engine Control Module)	Special Function	Injector Specific Data

model	year	area	system	function	subfunction
Terracan(HP)	2002	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Terracan(HP)	2002	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Terracan(HP)	2002	General	IMM(Immobilizer)	Special Function	Password
Terracan(HP)	2002	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Terracan(HP)	2002	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Terracan(HP)	2002	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Terracan(HP)	2002	General	IMM(Immobilizer)	Special Function	Teaching
Terracan(HP)	2001	General	ECM(Engine Control Module)	Version Information	
Terracan(HP)	2001	General	ECM(Engine Control Module)	Read Fault Code	
Terracan(HP)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
Terracan(HP)	2001	General	ECM(Engine Control Module)	Read Data Stream	
Terracan(HP)	2001	General	ECM(Engine Control Module)	Read FreezeData	
Terracan(HP)	2001	General	ECM(Engine Control Module)	Actuation Test	
Terracan(HP)	2001	General	TCM(Transmission Control Module)	Version Information	
Terracan(HP)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
Terracan(HP)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
Terracan(HP)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
Terracan(HP)	2001	General	TCM(Transmission Control Module)	Actuation Test	
Terracan(HP)	2001	General	ABS(Anti-lock Braking System)	Version Information	
Terracan(HP)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
Terracan(HP)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Terracan(HP)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
Terracan(HP)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
Terracan(HP)	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Terracan(HP)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Terracan(HP)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Terracan(HP)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Terracan(HP)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Terracan(HP)	2001	General	TOD	Version Information	
Terracan(HP)	2001	General	TOD	Read Fault Code	

model	year	area	system	function	subfunction
Terracan(HP)	2001	General	TOD	Clear Fault Memory	
Terracan(HP)	2001	General	IMM(Immobilizer)	Read Fault Code	
Terracan(HP)	2001	General	IMM(Immobilizer)	Clear Fault Memory	
Terracan(HP)	2001	General	IMM(Immobilizer)	Read Data Stream	
Terracan(HP)	2001	General	IMM(Immobilizer)	Special Function	Password Record/Change
Terracan(HP)	2001	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Terracan(HP)	2001	General	IMM(Immobilizer)	Special Function	Master Key Delete
Terracan(HP)	2001	General	IMM(Immobilizer)	Special Function	Neutral Mode
Terracan(HP)	2001	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Terracan(HP)	2001	General	CODE	Special Function	Code Saving
Terracan(HP)	2001	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Terracan(HP)	2001	General	ECM(Engine Control Module)	Special Function	ECU Initialization
Terracan(HP)	2001	General	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Terracan(HP)	2001	General	IMM(Immobilizer)	Special Function	Password
Terracan(HP)	2001	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Terracan(HP)	2001	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Terracan(HP)	2001	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Terracan(HP)	2001	General	IMM(Immobilizer)	Special Function	Teaching
Tiburon(RD/RD2)	2001	General		Read Fault Code	
Tiburon(RD/RD2)	2001	General		Clear Fault Memory	
Tiburon(RD/RD2)	2001	General		Read Data Stream	
Tiburon(RD/RD2)	2001	General		Actuation Test	
Tiburon(RD/RD2)	2001	General		Version Information	
Tiburon(RD/RD2)	2000	General		Read Fault Code	
Tiburon(RD/RD2)	2000	General		Clear Fault Memory	
Tiburon(RD/RD2)	2000	General		Read Data Stream	
Tiburon(RD/RD2)	2000	General		Actuation Test	
Tiburon(RD/RD2)	2000	General		Version Information	
Tiburon(RD/RD2)	1999	General		Read Fault Code	
Tiburon(RD/RD2)	1999	General		Clear Fault Memory	

model	year	area	system	function	subfunction
Tiburon(RD/RD2)	1999	General		Read Data Stream	
Tiburon(RD/RD2)	1999	General		Actuation Test	
Tiburon(RD/RD2)	1999	General		Version Information	
Tiburon(RD/RD2)	1998	General		Read Fault Code	
Tiburon(RD/RD2)	1998	General		Clear Fault Memory	
Tiburon(RD/RD2)	1998	General		Read Data Stream	
Tiburon(RD/RD2)	1998	General		Actuation Test	
Tiburon(RD/RD2)	1998	General		Version Information	
Tiburon(RD/RD2)	1997	General		Read Fault Code	
Tiburon(RD/RD2)	1997	General		Clear Fault Memory	
Tiburon(RD/RD2)	1997	General		Read Data Stream	
Tiburon(RD/RD2)	1997	General		Actuation Test	
Tiburon(RD/RD2)	1997	General		Version Information	
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Version Information	
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Read Fault Code	
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Read Data Stream	
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Actuation Test	
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	Read VIN
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	Write VIN
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	Ignition Test
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test

model	year	area	system	function	subfunction
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Trajeto XG(FO)	2007	General	TCM(Transmission Control Module)	Version Information	
Trajeto XG(FO)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Trajeto XG(FO)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Trajeto XG(FO)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Trajeto XG(FO)	2007	General	ABS(Anti-lock Braking System)	Version Information	
Trajeto XG(FO)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Trajeto XG(FO)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Trajeto XG(FO)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Trajeto XG(FO)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Trajeto XG(FO)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Trajeto XG(FO)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Trajeto XG(FO)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Trajeto XG(FO)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Trajeto XG(FO)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Read Fault Code	
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Clear Fault Memory	
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Read Data Stream	
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Special Function	Password Record/Change
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Special Function	Master Key Delete
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Special Function	Neutral Mode
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Trajeto XG(FO)	2007	General	Transmitter Code Saving	Special Function	Code Saving
Trajeto XG(FO)	2007	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Trajeto XG(FO)	2007	General	IMM(Immobilizer)	Special Function	Teaching
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Trajeto XG(FO)	2007	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Trajeto XG(FO)	2007	General	Fuel Fired Heater	Read Fault Code	
Trajeto XG(FO)	2007	General	Fuel Fired Heater	Clear Fault Memory	
Trajeto XG(FO)	2007	General	Fuel Fired Heater	Read Data Stream	
Trajeto XG(FO)	2007	General	Fuel Fired Heater	Actuation Test	
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Version Information	
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Actuation Test	
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	Read VIN
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	Write VIN
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	Auto Detected
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	Ignition Test
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Trajeto XG(FO)	2006	General	TCM(Transmission Control Module)	Version Information	
Trajeto XG(FO)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Trajeto XG(FO)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Trajeto XG(FO)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Trajeto XG(FO)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Trajeto XG(FO)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Trajeto XG(FO)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Trajeto XG(FO)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Trajeto XG(FO)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Trajeto XG(FO)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Trajeto XG(FO)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Trajeto XG(FO)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Trajeto XG(FO)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Trajeto XG(FO)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Trajeto XG(FO)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Read Fault Code	
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Clear Fault Memory	
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Read Data Stream	
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Special Function	Password Record/Change
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Special Function	Master Key Delete
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Special Function	Neutral Mode
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Trajeto XG(FO)	2006	General	Transmitter Code Saving	Special Function	Code Saving
Trajeto XG(FO)	2006	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Trajeto XG(FO)	2006	General	IMM(Immobilizer)	Special Function	Teaching
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Trajeto XG(FO)	2006	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Trajeto XG(FO)	2006	General	Fuel Fired Heater	Read Fault Code	

model	year	area	system	function	subfunction
Trajeto XG(FO)	2006	General	Fuel Fired Heater	Clear Fault Memory	
Trajeto XG(FO)	2006	General	Fuel Fired Heater	Read Data Stream	
Trajeto XG(FO)	2006	General	Fuel Fired Heater	Actuation Test	
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Version Information	
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Actuation Test	
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	Read VIN
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	Write VIN
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	Ignition Test
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Read FreezeData	
Trajeto XG(FO)	2005	General	TCM(Transmission Control Module)	Version Information	
Trajeto XG(FO)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Trajeto XG(FO)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Trajeto XG(FO)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Trajeto XG(FO)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Trajeto XG(FO)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Trajeto XG(FO)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Trajeto XG(FO)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Trajeto XG(FO)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Trajeto XG(FO)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Trajeto XG(FO)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Trajeto XG(FO)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Trajeto XG(FO)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Trajeto XG(FO)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Read Fault Code	
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Clear Fault Memory	
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Read Data Stream	
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Special Function	Password Record/Change
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Special Function	Master Key Delete
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Special Function	Neutral Mode
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Trajeto XG(FO)	2005	General	Transmitter Code Saving	Special Function	Code Saving
Trajeto XG(FO)	2005	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Trajeto XG(FO)	2005	General	IMM(Immobilizer)	Special Function	Teaching
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Trajeto XG(FO)	2005	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Trajeto XG(FO)	2005	General	Fuel Fired Heater	Read Fault Code	
Trajeto XG(FO)	2005	General	Fuel Fired Heater	Clear Fault Memory	
Trajeto XG(FO)	2005	General	Fuel Fired Heater	Read Data Stream	
Trajeto XG(FO)	2005	General	Fuel Fired Heater	Actuation Test	
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Version Information	
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Read Data Stream	
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Actuation Test	
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	Read VIN
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	Write VIN
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	Ignition Test
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Read FreezeData	
Trajeto XG(FO)	2004	General	TCM(Transmission Control Module)	Version Information	
Trajeto XG(FO)	2004	General	TCM(Transmission Control Module)	Read Fault Code	
Trajeto XG(FO)	2004	General	TCM(Transmission Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2004	General	TCM(Transmission Control Module)	Read Data Stream	
Trajeto XG(FO)	2004	General	TCM(Transmission Control Module)	Actuation Test	
Trajeto XG(FO)	2004	General	ABS(Anti-lock Braking System)	Version Information	
Trajeto XG(FO)	2004	General	ABS(Anti-lock Braking System)	Read Fault Code	
Trajeto XG(FO)	2004	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Trajeto XG(FO)	2004	General	ABS(Anti-lock Braking System)	Read Data Stream	
Trajeto XG(FO)	2004	General	ABS(Anti-lock Braking System)	Actuation Test	
Trajeto XG(FO)	2004	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Trajeto XG(FO)	2004	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Trajeto XG(FO)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Trajeto XG(FO)	2004	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Trajeto XG(FO)	2004	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Read Fault Code	
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Clear Fault Memory	
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Read Data Stream	
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Special Function	Password Record/Change
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Special Function	Master Key Delete
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Special Function	Neutral Mode
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Trajeto XG(FO)	2004	General	Transmitter Code Saving	Special Function	Code Saving
Trajeto XG(FO)	2004	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Special Function	Password
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Trajeto XG(FO)	2004	General	IMM(Immobilizer)	Special Function	Teaching
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Trajeto XG(FO)	2004	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Trajeto XG(FO)	2004	General	Fuel Fired Heater	Read Fault Code	
Trajeto XG(FO)	2004	General	Fuel Fired Heater	Clear Fault Memory	
Trajeto XG(FO)	2004	General	Fuel Fired Heater	Read Data Stream	
Trajeto XG(FO)	2004	General	Fuel Fired Heater	Actuation Test	
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Version Information	
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Read Fault Code	
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Read Data Stream	
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Actuation Test	
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Readiness Test
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Read FreezeData	
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Read VIN
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Write VIN
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Ignition Test
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Trajeto XG(FO)	2003	General	TCM(Transmission Control Module)	Version Information	
Trajeto XG(FO)	2003	General	TCM(Transmission Control Module)	Read Fault Code	
Trajeto XG(FO)	2003	General	TCM(Transmission Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2003	General	TCM(Transmission Control Module)	Read Data Stream	
Trajeto XG(FO)	2003	General	TCM(Transmission Control Module)	Actuation Test	
Trajeto XG(FO)	2003	General	ABS(Anti-lock Braking System)	Version Information	
Trajeto XG(FO)	2003	General	ABS(Anti-lock Braking System)	Read Fault Code	
Trajeto XG(FO)	2003	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Trajeto XG(FO)	2003	General	ABS(Anti-lock Braking System)	Read Data Stream	
Trajeto XG(FO)	2003	General	ABS(Anti-lock Braking System)	Actuation Test	
Trajeto XG(FO)	2003	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Trajeto XG(FO)	2003	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Trajeto XG(FO)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Trajeto XG(FO)	2003	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Trajeto XG(FO)	2003	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Read Fault Code	

model	year	area	system	function	subfunction
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Clear Fault Memory	
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Read Data Stream	
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Special Function	Password Record/Change
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Special Function	Master Key Delete
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Special Function	Neutral Mode
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Trajeto XG(FO)	2003	General	Transmitter Code Saving	Special Function	Code Saving
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Trajeto XG(FO)	2003	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Special Function	Password
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Trajeto XG(FO)	2003	General	IMM(Immobilizer)	Special Function	Teaching
Trajeto XG(FO)	2003	General	Fuel Fired Heater	Read Fault Code	
Trajeto XG(FO)	2003	General	Fuel Fired Heater	Clear Fault Memory	
Trajeto XG(FO)	2003	General	Fuel Fired Heater	Read Data Stream	
Trajeto XG(FO)	2003	General	Fuel Fired Heater	Actuation Test	
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Version Information	
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Read Fault Code	
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Read Data Stream	
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Actuation Test	
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Special Function	Auto Detected
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Special Function	Readiness Test
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Trajeto XG(FO)	2002	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Trajeto XG(FO)	2002	General	TCM(Transmission Control Module)	Read Fault Code	
Trajeto XG(FO)	2002	General	TCM(Transmission Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2002	General	TCM(Transmission Control Module)	Read Data Stream	
Trajeto XG(FO)	2002	General	TCM(Transmission Control Module)	Actuation Test	
Trajeto XG(FO)	2002	General	ABS(Anti-lock Braking System)	Version Information	
Trajeto XG(FO)	2002	General	ABS(Anti-lock Braking System)	Read Fault Code	
Trajeto XG(FO)	2002	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Trajeto XG(FO)	2002	General	ABS(Anti-lock Braking System)	Read Data Stream	
Trajeto XG(FO)	2002	General	ABS(Anti-lock Braking System)	Actuation Test	
Trajeto XG(FO)	2002	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Trajeto XG(FO)	2002	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Trajeto XG(FO)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Trajeto XG(FO)	2002	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Trajeto XG(FO)	2002	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Read Fault Code	
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Clear Fault Memory	
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Read Data Stream	
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Special Function	Password Record/Change
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Special Function	Master Key Delete
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Special Function	Neutral Mode
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Trajeto XG(FO)	2002	General	Transmitter Code Saving	Special Function	Code Saving
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Read FreezeData	
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Trajeto XG(FO)	2002	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Trajeto XG(FO)	2002	General	IMM(Immobilizer)	Special Function	Teaching
Trajeto XG(FO)	2002	General	Fuel Fired Heater	Read Fault Code	
Trajeto XG(FO)	2002	General	Fuel Fired Heater	Clear Fault Memory	
Trajeto XG(FO)	2002	General	Fuel Fired Heater	Read Data Stream	
Trajeto XG(FO)	2002	General	Fuel Fired Heater	Actuation Test	
Trajeto XG(FO)	2001	General	ECM(Engine Control Module)	Version Information	
Trajeto XG(FO)	2001	General	ECM(Engine Control Module)	Read Fault Code	
Trajeto XG(FO)	2001	General	ECM(Engine Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2001	General	ECM(Engine Control Module)	Read Data Stream	
Trajeto XG(FO)	2001	General	ECM(Engine Control Module)	Actuation Test	
Trajeto XG(FO)	2001	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Trajeto XG(FO)	2001	General	ECM(Engine Control Module)	Special Function	Auto Detected
Trajeto XG(FO)	2001	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Trajeto XG(FO)	2001	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Trajeto XG(FO)	2001	General	ECM(Engine Control Module)	Special Function	Readiness Test
Trajeto XG(FO)	2001	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Trajeto XG(FO)	2001	General	TCM(Transmission Control Module)	Version Information	
Trajeto XG(FO)	2001	General	TCM(Transmission Control Module)	Read Fault Code	
Trajeto XG(FO)	2001	General	TCM(Transmission Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2001	General	TCM(Transmission Control Module)	Read Data Stream	
Trajeto XG(FO)	2001	General	TCM(Transmission Control Module)	Actuation Test	
Trajeto XG(FO)	2001	General	ABS(Anti-lock Braking System)	Version Information	
Trajeto XG(FO)	2001	General	ABS(Anti-lock Braking System)	Read Fault Code	
Trajeto XG(FO)	2001	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Trajeto XG(FO)	2001	General	ABS(Anti-lock Braking System)	Read Data Stream	
Trajeto XG(FO)	2001	General	ABS(Anti-lock Braking System)	Actuation Test	
Trajeto XG(FO)	2001	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Trajeto XG(FO)	2001	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Trajeto XG(FO)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Trajeto XG(FO)	2001	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Trajjet XG(FO)	2001	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Read Fault Code	
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Clear Fault Memory	
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Read Data Stream	
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Special Function	Password Record/Change
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Special Function	Master Key Delete
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Special Function	Neutral Mode
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Trajjet XG(FO)	2001	General	Transmitter Code Saving	Special Function	Code Saving
Trajjet XG(FO)	2001	General	ECM(Engine Control Module)	Read FreezeData	
Trajjet XG(FO)	2001	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Trajjet XG(FO)	2001	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Special Function	Password
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Trajjet XG(FO)	2001	General	IMM(Immobilizer)	Special Function	Teaching
Trajjet XG(FO)	2001	General	Fuel Fired Heater	Read Fault Code	
Trajjet XG(FO)	2001	General	Fuel Fired Heater	Clear Fault Memory	
Trajjet XG(FO)	2001	General	Fuel Fired Heater	Read Data Stream	
Trajjet XG(FO)	2001	General	Fuel Fired Heater	Actuation Test	
Trajjet XG(FO)	2000	General	ECM(Engine Control Module)	Version Information	
Trajjet XG(FO)	2000	General	ECM(Engine Control Module)	Read Fault Code	
Trajjet XG(FO)	2000	General	ECM(Engine Control Module)	Clear Fault Memory	
Trajjet XG(FO)	2000	General	ECM(Engine Control Module)	Read Data Stream	
Trajjet XG(FO)	2000	General	ECM(Engine Control Module)	Actuation Test	
Trajjet XG(FO)	2000	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Trajjet XG(FO)	2000	General	ECM(Engine Control Module)	Special Function	Auto Detected
Trajjet XG(FO)	2000	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Trajjet XG(FO)	2000	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Trajeto XG(FO)	2000	General	ECM(Engine Control Module)	Special Function	Readiness Test
Trajeto XG(FO)	2000	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Trajeto XG(FO)	2000	General	TCM(Transmission Control Module)	Version Information	
Trajeto XG(FO)	2000	General	TCM(Transmission Control Module)	Read Fault Code	
Trajeto XG(FO)	2000	General	TCM(Transmission Control Module)	Clear Fault Memory	
Trajeto XG(FO)	2000	General	TCM(Transmission Control Module)	Read Data Stream	
Trajeto XG(FO)	2000	General	TCM(Transmission Control Module)	Actuation Test	
Trajeto XG(FO)	2000	General	ABS(Anti-lock Braking System)	Version Information	
Trajeto XG(FO)	2000	General	ABS(Anti-lock Braking System)	Read Fault Code	
Trajeto XG(FO)	2000	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Trajeto XG(FO)	2000	General	ABS(Anti-lock Braking System)	Read Data Stream	
Trajeto XG(FO)	2000	General	ABS(Anti-lock Braking System)	Actuation Test	
Trajeto XG(FO)	2000	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Trajeto XG(FO)	2000	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Trajeto XG(FO)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Trajeto XG(FO)	2000	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Trajeto XG(FO)	2000	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Trajeto XG(FO)	2000	General	IMM(Immobilizer)	Read Fault Code	
Trajeto XG(FO)	2000	General	IMM(Immobilizer)	Clear Fault Memory	
Trajeto XG(FO)	2000	General	IMM(Immobilizer)	Read Data Stream	
Trajeto XG(FO)	2000	General	IMM(Immobilizer)	Special Function	Password Record/Change
Trajeto XG(FO)	2000	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Trajeto XG(FO)	2000	General	IMM(Immobilizer)	Special Function	Master Key Delete
Trajeto XG(FO)	2000	General	IMM(Immobilizer)	Special Function	Neutral Mode
Trajeto XG(FO)	2000	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Trajeto XG(FO)	2000	General	Transmitter Code Saving	Special Function	Code Saving
Trajeto XG(FO)	2000	General	ECM(Engine Control Module)	Read FreezeData	
Trajeto XG(FO)	2000	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Trajeto XG(FO)	2000	General	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Trajjet XG(FO)	2000	General	IMM(Immobilizer)	Special Function	Password
Trajjet XG(FO)	2000	General	IMM(Immobilizer)	Special Function	Teaching/Charging
Trajjet XG(FO)	2000	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Trajjet XG(FO)	2000	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Trajjet XG(FO)	2000	General	IMM(Immobilizer)	Special Function	Teaching
Trajjet XG(FO)	2000	General	Fuel Fired Heater	Read Fault Code	
Trajjet XG(FO)	2000	General	Fuel Fired Heater	Clear Fault Memory	
Trajjet XG(FO)	2000	General	Fuel Fired Heater	Read Data Stream	
Trajjet XG(FO)	2000	General	Fuel Fired Heater	Actuation Test	
Trajjet XG(FO)	1999	General	ECM(Engine Control Module)	Version Information	
Trajjet XG(FO)	1999	General	ECM(Engine Control Module)	Read Fault Code	
Trajjet XG(FO)	1999	General	ECM(Engine Control Module)	Clear Fault Memory	
Trajjet XG(FO)	1999	General	ECM(Engine Control Module)	Read Data Stream	
Trajjet XG(FO)	1999	General	ECM(Engine Control Module)	Actuation Test	
Trajjet XG(FO)	1999	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Trajjet XG(FO)	1999	General	ECM(Engine Control Module)	Special Function	Auto Detected
Trajjet XG(FO)	1999	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Trajjet XG(FO)	1999	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Trajjet XG(FO)	1999	General	ECM(Engine Control Module)	Special Function	Readiness Test
Trajjet XG(FO)	1999	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Trajjet XG(FO)	1999	General	TCM(Transmission Control Module)	Version Information	
Trajjet XG(FO)	1999	General	TCM(Transmission Control Module)	Read Fault Code	
Trajjet XG(FO)	1999	General	TCM(Transmission Control Module)	Clear Fault Memory	
Trajjet XG(FO)	1999	General	TCM(Transmission Control Module)	Read Data Stream	
Trajjet XG(FO)	1999	General	TCM(Transmission Control Module)	Actuation Test	
Trajjet XG(FO)	1999	General	ABS(Anti-lock Braking System)	Version Information	
Trajjet XG(FO)	1999	General	ABS(Anti-lock Braking System)	Read Fault Code	
Trajjet XG(FO)	1999	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Trajjet XG(FO)	1999	General	ABS(Anti-lock Braking System)	Read Data Stream	
Trajjet XG(FO)	1999	General	ABS(Anti-lock Braking System)	Actuation Test	
Trajjet XG(FO)	1999	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Trajeto XG(FO)	1999	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Trajeto XG(FO)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Trajeto XG(FO)	1999	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Trajeto XG(FO)	1999	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Trajeto XG(FO)	1999	General	IMM(Immobilizer)	Read Fault Code	
Trajeto XG(FO)	1999	General	IMM(Immobilizer)	Clear Fault Memory	
Trajeto XG(FO)	1999	General	IMM(Immobilizer)	Read Data Stream	
Trajeto XG(FO)	1999	General	IMM(Immobilizer)	Special Function	Password Record/Change
Trajeto XG(FO)	1999	General	IMM(Immobilizer)	Special Function	Master Key Record/Change
Trajeto XG(FO)	1999	General	IMM(Immobilizer)	Special Function	Master Key Delete
Trajeto XG(FO)	1999	General	IMM(Immobilizer)	Special Function	Neutral Mode
Trajeto XG(FO)	1999	General	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Trajeto XG(FO)	1999	General	Transmitter Code Saving	Special Function	Code Saving
Tucson FFV(JM FFV)	2013	General	ECM(Engine Control Module)	Version Information	
Tucson FFV(JM FFV)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Tucson FFV(JM FFV)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson FFV(JM FFV)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Tucson FFV(JM FFV)	2013	General	ECM(Engine Control Module)	Actuation Test	
Tucson FFV(JM FFV)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson FFV(JM FFV)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson FFV(JM FFV)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson FFV(JM FFV)	2013	General	ECM(Engine Control Module)	Special Function	A/F Learning
Tucson FFV(JM FFV)	2013	General	ECM(Engine Control Module)	Special Function	A/F Value Imposing
Tucson FFV(JM FFV)	2013	General	TCM(Transmission Control Module)	Version Information	
Tucson FFV(JM FFV)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson FFV(JM FFV)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson FFV(JM FFV)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson FFV(JM FFV)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Tucson FFV(JM FFV)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Tucson FFV(JM FFV)	2013	General	ABS(Anti-lock Braking System)	Version Information	
Tucson FFV(JM FFV)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson FFV(JM FFV)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson FFV(JM FFV)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson FFV(JM FFV)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson FFV(JM FFV)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson FFV(JM FFV)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson FFV(JM FFV)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson FFV(JM FFV)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson FFV(JM FFV)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson FFV(JM FFV)	2013	General	AC(Air Conditioning)	Version Information	
Tucson FFV(JM FFV)	2013	General	AC(Air Conditioning)	Read Fault Code	
Tucson FFV(JM FFV)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson FFV(JM FFV)	2013	General	AC(Air Conditioning)	Read Data Stream	
Tucson FFV(JM FFV)	2013	General	AC(Air Conditioning)	Actuation Test	
Tucson FFV(JM FFV)	2013	General	BCM(Body Control Module)	Version Information	
Tucson FFV(JM FFV)	2013	General	BCM(Body Control Module)	Read Data Stream	
Tucson FFV(JM FFV)	2013	General	BCM(Body Control Module)	Actuation Test	
Tucson FFV(JM FFV)	2013	General	4WD Control	Version Information	
Tucson FFV(JM FFV)	2013	General	4WD Control	Read Fault Code	
Tucson FFV(JM FFV)	2013	General	4WD Control	Clear Fault Memory	
Tucson FFV(JM FFV)	2013	General	4WD Control	Read Data Stream	
Tucson FFV(JM FFV)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson FFV(JM FFV)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson FFV(JM FFV)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson FFV(JM FFV)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson FFV(JM FFV)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson FFV(JM FFV)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson FFV(JM FFV)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
Tucson FFV(JM FFV)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson FFV(JM FFV)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson FFV(JM FFV)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson FFV(JM FFV)	2013	General	IMM(Immobilizer)	Read Data Stream	
Tucson FFV(JM FFV)	2013	General	IMM(Immobilizer)	Special Function	Password
Tucson FFV(JM FFV)	2013	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Tucson FFV(JM FFV)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson FFV(JM FFV)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson FFV(JM FFV)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Tucson FFV(JM FFV)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson FFV(JM FFV)	2013	General	Transmitter Code Saving	Read Data Stream	
Tucson FFV(JM FFV)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Tucson FFV(JM FFV)	2012	General	ECM(Engine Control Module)	Version Information	
Tucson FFV(JM FFV)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Tucson FFV(JM FFV)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson FFV(JM FFV)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Tucson FFV(JM FFV)	2012	General	ECM(Engine Control Module)	Actuation Test	
Tucson FFV(JM FFV)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson FFV(JM FFV)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson FFV(JM FFV)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson FFV(JM FFV)	2012	General	ECM(Engine Control Module)	Special Function	A/F Learning
Tucson FFV(JM FFV)	2012	General	ECM(Engine Control Module)	Special Function	A/F Value Imposing
Tucson FFV(JM FFV)	2012	General	TCM(Transmission Control Module)	Version Information	
Tucson FFV(JM FFV)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson FFV(JM FFV)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson FFV(JM FFV)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson FFV(JM FFV)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Tucson FFV(JM FFV)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson FFV(JM FFV)	2012	General	ABS(Anti-lock Braking System)	Version Information	
Tucson FFV(JM FFV)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson FFV(JM FFV)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson FFV(JM FFV)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson FFV(JM FFV)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson FFV(JM FFV)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson FFV(JM FFV)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson FFV(JM FFV)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson FFV(JM FFV)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson FFV(JM FFV)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson FFV(JM FFV)	2012	General	AC(Air Conditioning)	Version Information	
Tucson FFV(JM FFV)	2012	General	AC(Air Conditioning)	Read Fault Code	
Tucson FFV(JM FFV)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson FFV(JM FFV)	2012	General	AC(Air Conditioning)	Read Data Stream	
Tucson FFV(JM FFV)	2012	General	AC(Air Conditioning)	Actuation Test	
Tucson FFV(JM FFV)	2012	General	BCM(Body Control Module)	Version Information	
Tucson FFV(JM FFV)	2012	General	BCM(Body Control Module)	Read Data Stream	
Tucson FFV(JM FFV)	2012	General	BCM(Body Control Module)	Actuation Test	
Tucson FFV(JM FFV)	2012	General	4WD Control	Version Information	
Tucson FFV(JM FFV)	2012	General	4WD Control	Read Fault Code	
Tucson FFV(JM FFV)	2012	General	4WD Control	Clear Fault Memory	
Tucson FFV(JM FFV)	2012	General	4WD Control	Read Data Stream	
Tucson FFV(JM FFV)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson FFV(JM FFV)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson FFV(JM FFV)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson FFV(JM FFV)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson FFV(JM FFV)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson FFV(JM FFV)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson FFV(JM FFV)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson FFV(JM FFV)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson FFV(JM FFV)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Tucson FFV(JM FFV)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson FFV(JM FFV)	2012	General	IMM(Immobilizer)	Read Data Stream	
Tucson FFV(JM FFV)	2012	General	IMM(Immobilizer)	Special Function	Password
Tucson FFV(JM FFV)	2012	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Tucson FFV(JM FFV)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson FFV(JM FFV)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson FFV(JM FFV)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Tucson FFV(JM FFV)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson FFV(JM FFV)	2012	General	Transmitter Code Saving	Read Data Stream	
Tucson FFV(JM FFV)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2010	General	ECM(Engine Control Module)	Version Information	
Tucson(JM)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(JM)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(JM)	2010	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(JM)	2010	General	ECM(Engine Control Module)	Actuation Test	
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Ignition Test
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tucson(JM)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Readiness Test

model	year	area	system	function	subfunction
Tucson(JM)	2010	General	TCM(Transmission Control Module)	Version Information	
Tucson(JM)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(JM)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(JM)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(JM)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(JM)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(JM)	2010	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(JM)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(JM)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(JM)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(JM)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(JM)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(JM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(JM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(JM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(JM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(JM)	2010	General	AC(Air Conditioning)	Version Information	
Tucson(JM)	2010	General	AC(Air Conditioning)	Read Fault Code	
Tucson(JM)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(JM)	2010	General	AC(Air Conditioning)	Read Data Stream	
Tucson(JM)	2010	General	AC(Air Conditioning)	Actuation Test	
Tucson(JM)	2010	General	ETACS	Version Information	
Tucson(JM)	2010	General	ETACS	Read Data Stream	
Tucson(JM)	2010	General	ETACS	Actuation Test	
Tucson(JM)	2010	General	4WD Control	Version Information	
Tucson(JM)	2010	General	4WD Control	Read Fault Code	
Tucson(JM)	2010	General	4WD Control	Clear Fault Memory	
Tucson(JM)	2010	General	4WD Control	Read Data Stream	
Tucson(JM)	2010	General	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Tucson(JM)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(JM)	2010	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(JM)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(JM)	2010	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(JM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(JM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(JM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(JM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(JM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(JM)	2010	General	IMM(Immobilizer)	Read Fault Code	
Tucson(JM)	2010	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(JM)	2010	General	IMM(Immobilizer)	Read Data Stream	
Tucson(JM)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(JM)	2010	General	IMM(Immobilizer)	Special Function	Password
Tucson(JM)	2010	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Tucson(JM)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(JM)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(JM)	2010	General	Transmitter Code Saving	Read Data Stream	
Tucson(JM)	2010	General	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Tucson(JM)	2010	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(JM)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(JM)	2009	General	ECM(Engine Control Module)	Version Information	
Tucson(JM)	2009	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(JM)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(JM)	2009	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(JM)	2009	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Ignition Test
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tucson(JM)	2009	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Readiness Test
Tucson(JM)	2009	General	TCM(Transmission Control Module)	Version Information	
Tucson(JM)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(JM)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(JM)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(JM)	2009	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(JM)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(JM)	2009	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(JM)	2009	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(JM)	2009	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(JM)	2009	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(JM)	2009	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(JM)	2009	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(JM)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(JM)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(JM)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(JM)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(JM)	2009	General	AC(Air Conditioning)	Version Information	
Tucson(JM)	2009	General	AC(Air Conditioning)	Read Fault Code	
Tucson(JM)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(JM)	2009	General	AC(Air Conditioning)	Read Data Stream	
Tucson(JM)	2009	General	AC(Air Conditioning)	Actuation Test	
Tucson(JM)	2009	General	ETACS	Version Information	
Tucson(JM)	2009	General	ETACS	Read Data Stream	
Tucson(JM)	2009	General	ETACS	Actuation Test	
Tucson(JM)	2009	General	4WD Control	Version Information	
Tucson(JM)	2009	General	4WD Control	Read Fault Code	
Tucson(JM)	2009	General	4WD Control	Clear Fault Memory	
Tucson(JM)	2009	General	4WD Control	Read Data Stream	
Tucson(JM)	2009	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(JM)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(JM)	2009	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(JM)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(JM)	2009	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(JM)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(JM)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(JM)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(JM)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(JM)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(JM)	2009	General	IMM(Immobilizer)	Read Fault Code	
Tucson(JM)	2009	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(JM)	2009	General	IMM(Immobilizer)	Read Data Stream	
Tucson(JM)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(JM)	2009	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping

model	year	area	system	function	subfunction
Tucson(JM)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(JM)	2009	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(JM)	2009	General	Transmitter Code Saving	Read Data Stream	
Tucson(JM)	2009	General	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Tucson(JM)	2009	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(JM)	2009	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(JM)	2008	General	ECM(Engine Control Module)	Version Information	
Tucson(JM)	2008	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(JM)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(JM)	2008	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(JM)	2008	General	ECM(Engine Control Module)	Actuation Test	
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Ignition Test
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tucson(JM)	2008	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Readiness Test
Tucson(JM)	2008	General	TCM(Transmission Control Module)	Version Information	
Tucson(JM)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(JM)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(JM)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(JM)	2008	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(JM)	2008	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(JM)	2008	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(JM)	2008	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(JM)	2008	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(JM)	2008	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(JM)	2008	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(JM)	2008	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(JM)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(JM)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(JM)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(JM)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(JM)	2008	General	AC(Air Conditioning)	Version Information	
Tucson(JM)	2008	General	AC(Air Conditioning)	Read Fault Code	
Tucson(JM)	2008	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(JM)	2008	General	AC(Air Conditioning)	Read Data Stream	
Tucson(JM)	2008	General	AC(Air Conditioning)	Actuation Test	
Tucson(JM)	2008	General	ETACS	Version Information	
Tucson(JM)	2008	General	ETACS	Read Data Stream	
Tucson(JM)	2008	General	ETACS	Actuation Test	
Tucson(JM)	2008	General	4WD Control	Version Information	
Tucson(JM)	2008	General	4WD Control	Read Fault Code	
Tucson(JM)	2008	General	4WD Control	Clear Fault Memory	
Tucson(JM)	2008	General	4WD Control	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(JM)	2008	General	IMM(Immobilizer)	Read Fault Code	
Tucson(JM)	2008	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(JM)	2008	General	IMM(Immobilizer)	Read Data Stream	
Tucson(JM)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(JM)	2008	General	IMM(Immobilizer)	Special Function	Password
Tucson(JM)	2008	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Tucson(JM)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(JM)	2008	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(JM)	2008	General	Transmitter Code Saving	Read Data Stream	
Tucson(JM)	2008	General	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Component Change
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	Routine
Tucson(JM)	2008	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(JM)	2008	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(JM)	2007	General	ECM(Engine Control Module)	Version Information	
Tucson(JM)	2007	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(JM)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(JM)	2007	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(JM)	2007	General	ECM(Engine Control Module)	Actuation Test	
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Auto Detected
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Ignition Test

model	year	area	system	function	subfunction
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tucson(JM)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Readiness Test
Tucson(JM)	2007	General	TCM(Transmission Control Module)	Version Information	
Tucson(JM)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(JM)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(JM)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(JM)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(JM)	2007	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(JM)	2007	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(JM)	2007	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(JM)	2007	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(JM)	2007	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(JM)	2007	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(JM)	2007	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(JM)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(JM)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(JM)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(JM)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(JM)	2007	General	AC(Air Conditioning)	Version Information	
Tucson(JM)	2007	General	AC(Air Conditioning)	Read Fault Code	
Tucson(JM)	2007	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(JM)	2007	General	AC(Air Conditioning)	Read Data Stream	
Tucson(JM)	2007	General	AC(Air Conditioning)	Actuation Test	
Tucson(JM)	2007	General	ETACS	Version Information	
Tucson(JM)	2007	General	ETACS	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(JM)	2007	General	ETACS	Actuation Test	
Tucson(JM)	2007	General	4WD Control	Version Information	
Tucson(JM)	2007	General	4WD Control	Read Fault Code	
Tucson(JM)	2007	General	4WD Control	Clear Fault Memory	
Tucson(JM)	2007	General	4WD Control	Read Data Stream	
Tucson(JM)	2007	General	IMM(Immobilizer)	Read Fault Code	
Tucson(JM)	2007	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(JM)	2007	General	IMM(Immobilizer)	Read Data Stream	
Tucson(JM)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(JM)	2007	General	IMM(Immobilizer)	Special Function	Password
Tucson(JM)	2007	General	IMM(Immobilizer)	Special Function	Teaching/Chopping
Tucson(JM)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(JM)	2007	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(JM)	2007	General	Transmitter Code Saving	Read Data Stream	
Tucson(JM)	2007	General	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2007	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Tucson(JM)	2007	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(JM)	2007	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(JM)	2006	General	ECM(Engine Control Module)	Version Information	
Tucson(JM)	2006	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(JM)	2006	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(JM)	2006	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(JM)	2006	General	ECM(Engine Control Module)	Actuation Test	
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Ignition Test
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tucson(JM)	2006	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Readiness Test
Tucson(JM)	2006	General	TCM(Transmission Control Module)	Version Information	
Tucson(JM)	2006	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(JM)	2006	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(JM)	2006	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(JM)	2006	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(JM)	2006	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(JM)	2006	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(JM)	2006	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(JM)	2006	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(JM)	2006	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(JM)	2006	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(JM)	2006	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(JM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(JM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(JM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(JM)	2006	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(JM)	2006	General	AC(Air Conditioning)	Version Information	
Tucson(JM)	2006	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(JM)	2006	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(JM)	2006	General	AC(Air Conditioning)	Read Data Stream	
Tucson(JM)	2006	General	AC(Air Conditioning)	Actuation Test	
Tucson(JM)	2006	General	ETACS	Version Information	
Tucson(JM)	2006	General	ETACS	Read Data Stream	
Tucson(JM)	2006	General	ETACS	Actuation Test	
Tucson(JM)	2006	General	4WD Control	Version Information	
Tucson(JM)	2006	General	4WD Control	Read Fault Code	
Tucson(JM)	2006	General	4WD Control	Clear Fault Memory	
Tucson(JM)	2006	General	IMM(Immobilizer)	Read Fault Code	
Tucson(JM)	2006	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(JM)	2006	General	IMM(Immobilizer)	Read Data Stream	
Tucson(JM)	2006	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(JM)	2006	General	IMM(Immobilizer)	Special Function	Password
Tucson(JM)	2006	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Tucson(JM)	2006	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(JM)	2006	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(JM)	2006	General	Transmitter Code Saving	Read Data Stream	
Tucson(JM)	2006	General	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Tucson(JM)	2006	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(JM)	2006	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(JM)	2005	General	ECM(Engine Control Module)	Version Information	
Tucson(JM)	2005	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(JM)	2005	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(JM)	2005	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(JM)	2005	General	ECM(Engine Control Module)	Actuation Test	
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	Ignition Test
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tucson(JM)	2005	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	Readiness Test
Tucson(JM)	2005	General	TCM(Transmission Control Module)	Version Information	
Tucson(JM)	2005	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(JM)	2005	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(JM)	2005	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(JM)	2005	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(JM)	2005	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(JM)	2005	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(JM)	2005	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(JM)	2005	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(JM)	2005	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(JM)	2005	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(JM)	2005	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(JM)	2005	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(JM)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(JM)	2005	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(JM)	2005	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(JM)	2005	General	AC(Air Conditioning)	Version Information	
Tucson(JM)	2005	General	AC(Air Conditioning)	Read Fault Code	
Tucson(JM)	2005	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(JM)	2005	General	AC(Air Conditioning)	Read Data Stream	
Tucson(JM)	2005	General	AC(Air Conditioning)	Actuation Test	
Tucson(JM)	2005	General	ETACS	Version Information	
Tucson(JM)	2005	General	ETACS	Read Data Stream	
Tucson(JM)	2005	General	ETACS	Actuation Test	
Tucson(JM)	2005	General	4WD Control	Version Information	
Tucson(JM)	2005	General	4WD Control	Read Fault Code	
Tucson(JM)	2005	General	4WD Control	Clear Fault Memory	
Tucson(JM)	2005	General	IMM(Immobilizer)	Read Fault Code	
Tucson(JM)	2005	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(JM)	2005	General	IMM(Immobilizer)	Read Data Stream	
Tucson(JM)	2005	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(JM)	2005	General	IMM(Immobilizer)	Special Function	Password
Tucson(JM)	2005	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Tucson(JM)	2005	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(JM)	2005	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(JM)	2005	General	Transmitter Code Saving	Read Data Stream	
Tucson(JM)	2005	General	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(JM)	2005	General	ECM(Engine Control Module)	Special Function	AT MT Recognition
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Version Information	
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(LM)-BRAZIL	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(LM)-BRAZIL	2018	General	TCM(Transmission Control Module)	Version Information	
Tucson(LM)-BRAZIL	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(LM)-BRAZIL	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(LM)-BRAZIL	2018	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(LM)-BRAZIL	2018	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(LM)-BRAZIL	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(LM)-BRAZIL	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(LM)-BRAZIL	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Tucson(LM)-BRAZIL	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(LM)-BRAZIL	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(LM)-BRAZIL	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(LM)-BRAZIL	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(LM)-BRAZIL	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(LM)-BRAZIL	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(LM)-BRAZIL	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(LM)-BRAZIL	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(LM)-BRAZIL	2018	General	AC(Air Conditioning)	Version Information	
Tucson(LM)-BRAZIL	2018	General	AC(Air Conditioning)	Read Fault Code	
Tucson(LM)-BRAZIL	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2018	General	AC(Air Conditioning)	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	AC(Air Conditioning)	Actuation Test	
Tucson(LM)-BRAZIL	2018	General	BCM(Body Control Module)	Version Information	
Tucson(LM)-BRAZIL	2018	General	BCM(Body Control Module)	Read Fault Code	
Tucson(LM)-BRAZIL	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2018	General	BCM(Body Control Module)	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	BCM(Body Control Module)	Actuation Test	
Tucson(LM)-BRAZIL	2018	General	BCM(Body Control Module)	Special Function	User Option
Tucson(LM)-BRAZIL	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(LM)-BRAZIL	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(LM)-BRAZIL	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(LM)-BRAZIL	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(LM)-BRAZIL	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(LM)-BRAZIL	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(LM)-BRAZIL	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(LM)-BRAZIL	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(LM)-BRAZIL	2018	General	EPS(Electronic Power Steering)	Version Information	
Tucson(LM)-BRAZIL	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(LM)-BRAZIL	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(LM)-BRAZIL	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Tucson(LM)-BRAZIL	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(LM)-BRAZIL	2018	General	Driveshaft	Version Information	
Tucson(LM)-BRAZIL	2018	General	Driveshaft	Read Fault Code	
Tucson(LM)-BRAZIL	2018	General	Driveshaft	Clear Fault Memory	
Tucson(LM)-BRAZIL	2018	General	Driveshaft	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	Driveshaft	Actuation Test	
Tucson(LM)-BRAZIL	2018	General	Driveshaft	Special Function	Clutch Learning Read
Tucson(LM)-BRAZIL	2018	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson(LM)-BRAZIL	2018	General	Driveshaft	Special Function	Clutch Learning Write
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Version Information	
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Read Fault Code	
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Clear Fault Memory	
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Actuation Test	
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Special Function	SMK Status Information
Tucson(LM)-BRAZIL	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(LM)-BRAZIL	2018	General	Smart Parking Assist System	Version Information	
Tucson(LM)-BRAZIL	2018	General	Smart Parking Assist System	Read Fault Code	
Tucson(LM)-BRAZIL	2018	General	Smart Parking Assist System	Clear Fault Memory	
Tucson(LM)-BRAZIL	2018	General	Smart Parking Assist System	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	Smart Parking Assist System	Actuation Test	

model	year	area	system	function	subfunction
Tucson(LM)-BRAZIL	2018	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson(LM)-BRAZIL	2018	General	IMM(Immobilizer)	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	IMM(Immobilizer)	Special Function	Password
Tucson(LM)-BRAZIL	2018	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Tucson(LM)-BRAZIL	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(LM)-BRAZIL	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(LM)-BRAZIL	2018	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(LM)-BRAZIL	2018	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(LM)-BRAZIL	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(LM)-BRAZIL	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Version Information	
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Actuation Test	
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(LM)-BRAZIL	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(LM)-BRAZIL	2017	General	TCM(Transmission Control Module)	Version Information	
Tucson(LM)-BRAZIL	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(LM)-BRAZIL	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Tucson(LM)-BRAZIL	2017	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(LM)-BRAZIL	2017	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(LM)-BRAZIL	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(LM)-BRAZIL	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(LM)-BRAZIL	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Tucson(LM)-BRAZIL	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(LM)-BRAZIL	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(LM)-BRAZIL	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(LM)-BRAZIL	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(LM)-BRAZIL	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(LM)-BRAZIL	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(LM)-BRAZIL	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(LM)-BRAZIL	2017	General	AC(Air Conditioning)	Version Information	
Tucson(LM)-BRAZIL	2017	General	AC(Air Conditioning)	Read Fault Code	
Tucson(LM)-BRAZIL	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2017	General	AC(Air Conditioning)	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	AC(Air Conditioning)	Actuation Test	
Tucson(LM)-BRAZIL	2017	General	BCM(Body Control Module)	Version Information	
Tucson(LM)-BRAZIL	2017	General	BCM(Body Control Module)	Read Fault Code	
Tucson(LM)-BRAZIL	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2017	General	BCM(Body Control Module)	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	BCM(Body Control Module)	Actuation Test	
Tucson(LM)-BRAZIL	2017	General	BCM(Body Control Module)	Special Function	User Option
Tucson(LM)-BRAZIL	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Tucson(LM)-BRAZIL	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(LM)-BRAZIL	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(LM)-BRAZIL	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(LM)-BRAZIL	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(LM)-BRAZIL	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(LM)-BRAZIL	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(LM)-BRAZIL	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(LM)-BRAZIL	2017	General	EPS(Electronic Power Steering)	Version Information	
Tucson(LM)-BRAZIL	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(LM)-BRAZIL	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(LM)-BRAZIL	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(LM)-BRAZIL	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(LM)-BRAZIL	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(LM)-BRAZIL	2017	General	Driveshaft	Version Information	
Tucson(LM)-BRAZIL	2017	General	Driveshaft	Read Fault Code	
Tucson(LM)-BRAZIL	2017	General	Driveshaft	Clear Fault Memory	
Tucson(LM)-BRAZIL	2017	General	Driveshaft	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	Driveshaft	Actuation Test	
Tucson(LM)-BRAZIL	2017	General	Driveshaft	Special Function	Clutch Learning Read
Tucson(LM)-BRAZIL	2017	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson(LM)-BRAZIL	2017	General	Driveshaft	Special Function	Clutch Learning Write
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Version Information	
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Read Fault Code	
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Clear Fault Memory	
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Actuation Test	
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Special Function	SMK Status Information
Tucson(LM)-BRAZIL	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(LM)-BRAZIL	2017	General	Smart Parking Assist System	Version Information	
Tucson(LM)-BRAZIL	2017	General	Smart Parking Assist System	Read Fault Code	
Tucson(LM)-BRAZIL	2017	General	Smart Parking Assist System	Clear Fault Memory	
Tucson(LM)-BRAZIL	2017	General	Smart Parking Assist System	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	Smart Parking Assist System	Actuation Test	
Tucson(LM)-BRAZIL	2017	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson(LM)-BRAZIL	2017	General	IMM(Immobilizer)	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Tucson(LM)-BRAZIL	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(LM)-BRAZIL	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(LM)-BRAZIL	2017	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(LM)-BRAZIL	2017	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(LM)-BRAZIL	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(LM)-BRAZIL	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Version Information	
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Actuation Test	
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	Turbo Actuator Setting
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson/ix35(LM)	2016	General	TCM(Transmission Control Module)	Version Information	
Tucson/ix35(LM)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson/ix35(LM)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson/ix35(LM)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson/ix35(LM)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Tucson/ix35(LM)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson/ix35(LM)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson/ix35(LM)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Tucson/ix35(LM)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson/ix35(LM)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson/ix35(LM)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson/ix35(LM)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson/ix35(LM)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Tucson/ix35(LM)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson/ix35(LM)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson/ix35(LM)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson/ix35(LM)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson/ix35(LM)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson/ix35(LM)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson/ix35(LM)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson/ix35(LM)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson/ix35(LM)	2016	General	AC(Air Conditioning)	Version Information	
Tucson/ix35(LM)	2016	General	AC(Air Conditioning)	Read Fault Code	
Tucson/ix35(LM)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson/ix35(LM)	2016	General	AC(Air Conditioning)	Read Data Stream	
Tucson/ix35(LM)	2016	General	AC(Air Conditioning)	Actuation Test	
Tucson/ix35(LM)	2016	General	BCM(Body Control Module)	Version Information	
Tucson/ix35(LM)	2016	General	BCM(Body Control Module)	Read Fault Code	
Tucson/ix35(LM)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2016	General	BCM(Body Control Module)	Read Data Stream	
Tucson/ix35(LM)	2016	General	BCM(Body Control Module)	Actuation Test	
Tucson/ix35(LM)	2016	General	BCM(Body Control Module)	Special Function	User Option
Tucson/ix35(LM)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson/ix35(LM)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson/ix35(LM)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson/ix35(LM)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson/ix35(LM)	2016	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson/ix35(LM)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson/ix35(LM)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson/ix35(LM)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson/ix35(LM)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson/ix35(LM)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson/ix35(LM)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson/ix35(LM)	2016	General	EPS(Electronic Power Steering)	Version Information	
Tucson/ix35(LM)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson/ix35(LM)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson/ix35(LM)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson/ix35(LM)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson/ix35(LM)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson/ix35(LM)	2016	General	Driveshaft	Version Information	
Tucson/ix35(LM)	2016	General	Driveshaft	Read Fault Code	
Tucson/ix35(LM)	2016	General	Driveshaft	Clear Fault Memory	
Tucson/ix35(LM)	2016	General	Driveshaft	Read Data Stream	
Tucson/ix35(LM)	2016	General	Driveshaft	Actuation Test	
Tucson/ix35(LM)	2016	General	Driveshaft	Special Function	Clutch Learning Read
Tucson/ix35(LM)	2016	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson/ix35(LM)	2016	General	Driveshaft	Special Function	Clutch Learning Write
Tucson/ix35(LM)	2016	General	Smart Key Unit	Version Information	
Tucson/ix35(LM)	2016	General	Smart Key Unit	Read Fault Code	
Tucson/ix35(LM)	2016	General	Smart Key Unit	Clear Fault Memory	
Tucson/ix35(LM)	2016	General	Smart Key Unit	Read Data Stream	
Tucson/ix35(LM)	2016	General	Smart Key Unit	Actuation Test	
Tucson/ix35(LM)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson/ix35(LM)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson/ix35(LM)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson/ix35(LM)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson/ix35(LM)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson/ix35(LM)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson/ix35(LM)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson/ix35(LM)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Tucson/ix35(LM)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson/ix35(LM)	2016	General	Smart Parking Assist System	Version Information	
Tucson/ix35(LM)	2016	General	Smart Parking Assist System	Read Fault Code	
Tucson/ix35(LM)	2016	General	Smart Parking Assist System	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2016	General	Smart Parking Assist System	Read Data Stream	
Tucson/ix35(LM)	2016	General	Smart Parking Assist System	Actuation Test	
Tucson/ix35(LM)	2016	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson/ix35(LM)	2016	General	IMM(Immobilizer)	Read Data Stream	
Tucson/ix35(LM)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Tucson/ix35(LM)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson/ix35(LM)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson/ix35(LM)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Tucson/ix35(LM)	2016	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson/ix35(LM)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson/ix35(LM)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson/ix35(LM)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Version Information	
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Actuation Test	
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson/ix35(LM)	2015	General	TCM(Transmission Control Module)	Version Information	
Tucson/ix35(LM)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson/ix35(LM)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson/ix35(LM)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson/ix35(LM)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Tucson/ix35(LM)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson/ix35(LM)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson/ix35(LM)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Tucson/ix35(LM)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson/ix35(LM)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson/ix35(LM)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson/ix35(LM)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson/ix35(LM)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Tucson/ix35(LM)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson/ix35(LM)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson/ix35(LM)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson/ix35(LM)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson/ix35(LM)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson/ix35(LM)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson/ix35(LM)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson/ix35(LM)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson/ix35(LM)	2015	General	AC(Air Conditioning)	Version Information	
Tucson/ix35(LM)	2015	General	AC(Air Conditioning)	Read Fault Code	
Tucson/ix35(LM)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson/ix35(LM)	2015	General	AC(Air Conditioning)	Read Data Stream	
Tucson/ix35(LM)	2015	General	AC(Air Conditioning)	Actuation Test	
Tucson/ix35(LM)	2015	General	BCM(Body Control Module)	Version Information	
Tucson/ix35(LM)	2015	General	BCM(Body Control Module)	Read Fault Code	
Tucson/ix35(LM)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2015	General	BCM(Body Control Module)	Read Data Stream	
Tucson/ix35(LM)	2015	General	BCM(Body Control Module)	Actuation Test	
Tucson/ix35(LM)	2015	General	BCM(Body Control Module)	Special Function	User Option
Tucson/ix35(LM)	2015	General	EPS(Electronic Power Steering)	Version Information	
Tucson/ix35(LM)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson/ix35(LM)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson/ix35(LM)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson/ix35(LM)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson/ix35(LM)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson/ix35(LM)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson/ix35(LM)	2015	General	4WD Control	Version Information	
Tucson/ix35(LM)	2015	General	4WD Control	Read Fault Code	
Tucson/ix35(LM)	2015	General	4WD Control	Clear Fault Memory	
Tucson/ix35(LM)	2015	General	4WD Control	Read Data Stream	
Tucson/ix35(LM)	2015	General	4WD Control	Actuation Test	
Tucson/ix35(LM)	2015	General	4WD Control	Special Function	Clutch Learning Read
Tucson/ix35(LM)	2015	General	4WD Control	Special Function	Clutch Learning Reset
Tucson/ix35(LM)	2015	General	4WD Control	Special Function	Clutch Learning Write

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson/ix35(LM)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson/ix35(LM)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson/ix35(LM)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson/ix35(LM)	2015	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson/ix35(LM)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson/ix35(LM)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson/ix35(LM)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson/ix35(LM)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson/ix35(LM)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson/ix35(LM)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson/ix35(LM)	2015	General	IMM(Immobilizer)	Read Data Stream	
Tucson/ix35(LM)	2015	General	IMM(Immobilizer)	Special Function	Password
Tucson/ix35(LM)	2015	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Tucson/ix35(LM)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson/ix35(LM)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson/ix35(LM)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Tucson/ix35(LM)	2015	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson/ix35(LM)	2015	General	Smart Key Unit	Version Information	
Tucson/ix35(LM)	2015	General	Smart Key Unit	Read Fault Code	
Tucson/ix35(LM)	2015	General	Smart Key Unit	Clear Fault Memory	
Tucson/ix35(LM)	2015	General	Smart Key Unit	Read Data Stream	
Tucson/ix35(LM)	2015	General	Smart Key Unit	Actuation Test	
Tucson/ix35(LM)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson/ix35(LM)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson/ix35(LM)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson/ix35(LM)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson/ix35(LM)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson/ix35(LM)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson/ix35(LM)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Tucson/ix35(LM)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson/ix35(LM)	2015	General	Transmitter Code Saving	Read Data Stream	
Tucson/ix35(LM)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Tucson/ix35(LM)	2015	General	Smart Parking Assist System	Version Information	
Tucson/ix35(LM)	2015	General	Smart Parking Assist System	Read Fault Code	
Tucson/ix35(LM)	2015	General	Smart Parking Assist System	Clear Fault Memory	
Tucson/ix35(LM)	2015	General	Smart Parking Assist System	Read Data Stream	
Tucson/ix35(LM)	2015	General	Smart Parking Assist System	Actuation Test	
Tucson/ix35(LM)	2015	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Tucson/ix35(LM)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Version Information	
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Read FreezeData	
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Actuation Test	
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	CVT Test

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson/ix35(LM)	2014	General	TCM(Transmission Control Module)	Version Information	
Tucson/ix35(LM)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson/ix35(LM)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson/ix35(LM)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson/ix35(LM)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Tucson/ix35(LM)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson/ix35(LM)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson/ix35(LM)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Tucson/ix35(LM)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson/ix35(LM)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson/ix35(LM)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson/ix35(LM)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson/ix35(LM)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Tucson/ix35(LM)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson/ix35(LM)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson/ix35(LM)	2014	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson/ix35(LM)	2014	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson/ix35(LM)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson/ix35(LM)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson/ix35(LM)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson/ix35(LM)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson/ix35(LM)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson/ix35(LM)	2014	General	AC(Air Conditioning)	Version Information	
Tucson/ix35(LM)	2014	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson/ix35(LM)	2014	General	AC(Air Conditioning)	Read Data Stream	
Tucson/ix35(LM)	2014	General	AC(Air Conditioning)	Actuation Test	
Tucson/ix35(LM)	2014	General	BCM(Body Control Module)	Version Information	
Tucson/ix35(LM)	2014	General	BCM(Body Control Module)	Read Fault Code	
Tucson/ix35(LM)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2014	General	BCM(Body Control Module)	Read Data Stream	
Tucson/ix35(LM)	2014	General	BCM(Body Control Module)	Actuation Test	
Tucson/ix35(LM)	2014	General	BCM(Body Control Module)	Special Function	User Option
Tucson/ix35(LM)	2014	General	EPS(Electronic Power Steering)	Version Information	
Tucson/ix35(LM)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson/ix35(LM)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson/ix35(LM)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson/ix35(LM)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson/ix35(LM)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson/ix35(LM)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson/ix35(LM)	2014	General	4WD Control	Version Information	
Tucson/ix35(LM)	2014	General	4WD Control	Read Fault Code	
Tucson/ix35(LM)	2014	General	4WD Control	Clear Fault Memory	
Tucson/ix35(LM)	2014	General	4WD Control	Read Data Stream	
Tucson/ix35(LM)	2014	General	4WD Control	Actuation Test	
Tucson/ix35(LM)	2014	General	4WD Control	Special Function	Clutch Learning Read
Tucson/ix35(LM)	2014	General	4WD Control	Special Function	Clutch Learning Reset
Tucson/ix35(LM)	2014	General	4WD Control	Special Function	Clutch Learning Write
Tucson/ix35(LM)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson/ix35(LM)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson/ix35(LM)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson/ix35(LM)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2014	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson/ix35(LM)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson/ix35(LM)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson/ix35(LM)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson/ix35(LM)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson/ix35(LM)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson/ix35(LM)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson/ix35(LM)	2014	General	IMM(Immobilizer)	Read Data Stream	
Tucson/ix35(LM)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Tucson/ix35(LM)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson/ix35(LM)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson/ix35(LM)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Tucson/ix35(LM)	2014	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson/ix35(LM)	2014	General	Smart Key Unit	Version Information	
Tucson/ix35(LM)	2014	General	Smart Key Unit	Read Fault Code	
Tucson/ix35(LM)	2014	General	Smart Key Unit	Clear Fault Memory	
Tucson/ix35(LM)	2014	General	Smart Key Unit	Read Data Stream	
Tucson/ix35(LM)	2014	General	Smart Key Unit	Actuation Test	
Tucson/ix35(LM)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson/ix35(LM)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson/ix35(LM)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson/ix35(LM)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson/ix35(LM)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson/ix35(LM)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson/ix35(LM)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson/ix35(LM)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Tucson/ix35(LM)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson/ix35(LM)	2014	General	Transmitter Code Saving	Read Data Stream	
Tucson/ix35(LM)	2014	General	Transmitter Code Saving	Special Function	Code Saving

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2014	General	Smart Parking Assist System	Version Information	
Tucson/ix35(LM)	2014	General	Smart Parking Assist System	Read Fault Code	
Tucson/ix35(LM)	2014	General	Smart Parking Assist System	Clear Fault Memory	
Tucson/ix35(LM)	2014	General	Smart Parking Assist System	Read Data Stream	
Tucson/ix35(LM)	2014	General	Smart Parking Assist System	Actuation Test	
Tucson/ix35(LM)	2014	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Tucson/ix35(LM)	2014	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Version Information	
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Actuation Test	
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	CVT Test
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2013	General	TCM(Transmission Control Module)	Version Information	
Tucson/ix35(LM)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson/ix35(LM)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson/ix35(LM)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson/ix35(LM)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Tucson/ix35(LM)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson/ix35(LM)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson/ix35(LM)	2013	General	ESP(Electronic Stability Program)	Version Information	
Tucson/ix35(LM)	2013	General	ESP(Electronic Stability Program)	Read Fault Code	
Tucson/ix35(LM)	2013	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Tucson/ix35(LM)	2013	General	ESP(Electronic Stability Program)	Read Data Stream	
Tucson/ix35(LM)	2013	General	ESP(Electronic Stability Program)	Actuation Test	
Tucson/ix35(LM)	2013	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson/ix35(LM)	2013	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Tucson/ix35(LM)	2013	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Tucson/ix35(LM)	2013	General	ESP(Electronic Stability Program)	Special Function	Base Configuration(CAN-ESP Only)
Tucson/ix35(LM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson/ix35(LM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson/ix35(LM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson/ix35(LM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson/ix35(LM)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Tucson/ix35(LM)	2013	General	AC(Air Conditioning)	Version Information	
Tucson/ix35(LM)	2013	General	AC(Air Conditioning)	Read Fault Code	
Tucson/ix35(LM)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson/ix35(LM)	2013	General	AC(Air Conditioning)	Read Data Stream	
Tucson/ix35(LM)	2013	General	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2013	General	BCM(Body Control Module)	Version Information	
Tucson/ix35(LM)	2013	General	BCM(Body Control Module)	Read Fault Code	
Tucson/ix35(LM)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2013	General	BCM(Body Control Module)	Read Data Stream	
Tucson/ix35(LM)	2013	General	BCM(Body Control Module)	Actuation Test	
Tucson/ix35(LM)	2013	General	EPS(Electronic Power Steering)	Version Information	
Tucson/ix35(LM)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson/ix35(LM)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson/ix35(LM)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson/ix35(LM)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson/ix35(LM)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding
Tucson/ix35(LM)	2013	General	4WD Control	Version Information	
Tucson/ix35(LM)	2013	General	4WD Control	Read Fault Code	
Tucson/ix35(LM)	2013	General	4WD Control	Clear Fault Memory	
Tucson/ix35(LM)	2013	General	4WD Control	Read Data Stream	
Tucson/ix35(LM)	2013	General	4WD Control	Special Function	AWD Mode Selection
Tucson/ix35(LM)	2013	General	4WD Control	Special Function	Torque Coupling Control
Tucson/ix35(LM)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson/ix35(LM)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson/ix35(LM)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson/ix35(LM)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson/ix35(LM)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson/ix35(LM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson/ix35(LM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson/ix35(LM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson/ix35(LM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson/ix35(LM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson/ix35(LM)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson/ix35(LM)	2013	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2013	General	IMM(Immobilizer)	Special Function	Password
Tucson/ix35(LM)	2013	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Tucson/ix35(LM)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson/ix35(LM)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson/ix35(LM)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Tucson/ix35(LM)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson/ix35(LM)	2013	General	Smart Key	Version Information	
Tucson/ix35(LM)	2013	General	Smart Key	Read Fault Code	
Tucson/ix35(LM)	2013	General	Smart Key	Clear Fault Memory	
Tucson/ix35(LM)	2013	General	Smart Key	Read Data Stream	
Tucson/ix35(LM)	2013	General	Smart Key	Actuation Test	
Tucson/ix35(LM)	2013	General	Smart Key	Special Function	ESCL Open Status Check
Tucson/ix35(LM)	2013	General	Smart Key	Special Function	Smart Key Code Saving
Tucson/ix35(LM)	2013	General	Smart Key	Special Function	Neutralization Mode
Tucson/ix35(LM)	2013	General	Smart Key	Special Function	SMK Status Information
Tucson/ix35(LM)	2013	General	Smart Key	Special Function	ESCL Status Information
Tucson/ix35(LM)	2013	General	Smart Key	Special Function	PDM Status Information
Tucson/ix35(LM)	2013	General	Smart Key	Special Function	FOB Key Status Information
Tucson/ix35(LM)	2013	General	Smart Key	Special Function	Serial Communication Line Check
Tucson/ix35(LM)	2013	General	Smart Key	Special Function	Antenna Status Check
Tucson/ix35(LM)	2013	General	Transmitter Code Saving	Read Data Stream	
Tucson/ix35(LM)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Tucson/ix35(LM)	2013	General	Smart Parking Assist System	Version Information	
Tucson/ix35(LM)	2013	General	Smart Parking Assist System	Read Fault Code	
Tucson/ix35(LM)	2013	General	Smart Parking Assist System	Clear Fault Memory	
Tucson/ix35(LM)	2013	General	Smart Parking Assist System	Read Data Stream	
Tucson/ix35(LM)	2013	General	Smart Parking Assist System	Actuation Test	
Tucson/ix35(LM)	2013	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Tucson/ix35(LM)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Version Information	
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Read FreezeData	
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Actuation Test	
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson/ix35(LM)	2012	General	TCM(Transmission Control Module)	Version Information	
Tucson/ix35(LM)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson/ix35(LM)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson/ix35(LM)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson/ix35(LM)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Tucson/ix35(LM)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson/ix35(LM)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson/ix35(LM)	2012	General	ESP(Electronic Stability Program)	Version Information	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2012	General	ESP(Electronic Stability Program)	Read Fault Code	
Tucson/ix35(LM)	2012	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Tucson/ix35(LM)	2012	General	ESP(Electronic Stability Program)	Read Data Stream	
Tucson/ix35(LM)	2012	General	ESP(Electronic Stability Program)	Actuation Test	
Tucson/ix35(LM)	2012	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson/ix35(LM)	2012	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Tucson/ix35(LM)	2012	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Tucson/ix35(LM)	2012	General	ESP(Electronic Stability Program)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson/ix35(LM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson/ix35(LM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson/ix35(LM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson/ix35(LM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson/ix35(LM)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Tucson/ix35(LM)	2012	General	AC(Air Conditioning)	Version Information	
Tucson/ix35(LM)	2012	General	AC(Air Conditioning)	Read Fault Code	
Tucson/ix35(LM)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson/ix35(LM)	2012	General	AC(Air Conditioning)	Read Data Stream	
Tucson/ix35(LM)	2012	General	AC(Air Conditioning)	Actuation Test	
Tucson/ix35(LM)	2012	General	BCM(Body Control Module)	Version Information	
Tucson/ix35(LM)	2012	General	BCM(Body Control Module)	Read Fault Code	
Tucson/ix35(LM)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2012	General	BCM(Body Control Module)	Read Data Stream	
Tucson/ix35(LM)	2012	General	BCM(Body Control Module)	Actuation Test	
Tucson/ix35(LM)	2012	General	EPS(Electronic Power Steering)	Version Information	
Tucson/ix35(LM)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson/ix35(LM)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson/ix35(LM)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2012	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson/ix35(LM)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding
Tucson/ix35(LM)	2012	General	4WD Control	Version Information	
Tucson/ix35(LM)	2012	General	4WD Control	Read Fault Code	
Tucson/ix35(LM)	2012	General	4WD Control	Clear Fault Memory	
Tucson/ix35(LM)	2012	General	4WD Control	Read Data Stream	
Tucson/ix35(LM)	2012	General	4WD Control	Special Function	AWD Mode Selection
Tucson/ix35(LM)	2012	General	4WD Control	Special Function	Torque Coupling Control
Tucson/ix35(LM)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson/ix35(LM)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson/ix35(LM)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson/ix35(LM)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson/ix35(LM)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson/ix35(LM)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson/ix35(LM)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson/ix35(LM)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson/ix35(LM)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson/ix35(LM)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson/ix35(LM)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson/ix35(LM)	2012	General	IMM(Immobilizer)	Read Data Stream	
Tucson/ix35(LM)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Tucson/ix35(LM)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson/ix35(LM)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson/ix35(LM)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Tucson/ix35(LM)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson/ix35(LM)	2012	General	Smart Key	Version Information	
Tucson/ix35(LM)	2012	General	Smart Key	Read Fault Code	
Tucson/ix35(LM)	2012	General	Smart Key	Clear Fault Memory	
Tucson/ix35(LM)	2012	General	Smart Key	Read Data Stream	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2012	General	Smart Key	Actuation Test	
Tucson/ix35(LM)	2012	General	Smart Key	Special Function	ESCL Open Status Check
Tucson/ix35(LM)	2012	General	Smart Key	Special Function	Smart Key Code Saving
Tucson/ix35(LM)	2012	General	Smart Key	Special Function	Neutralization Mode
Tucson/ix35(LM)	2012	General	Smart Key	Special Function	SMK Status Information
Tucson/ix35(LM)	2012	General	Smart Key	Special Function	ESCL Status Information
Tucson/ix35(LM)	2012	General	Smart Key	Special Function	PDM Status Information
Tucson/ix35(LM)	2012	General	Smart Key	Special Function	FOB Key Status Information
Tucson/ix35(LM)	2012	General	Smart Key	Special Function	Serial Communication Line Check
Tucson/ix35(LM)	2012	General	Smart Key	Special Function	Antenna Status Check
Tucson/ix35(LM)	2012	General	Transmitter Code Saving	Read Data Stream	
Tucson/ix35(LM)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Tucson/ix35(LM)	2012	General	Smart Parking Assist System	Version Information	
Tucson/ix35(LM)	2012	General	Smart Parking Assist System	Read Fault Code	
Tucson/ix35(LM)	2012	General	Smart Parking Assist System	Clear Fault Memory	
Tucson/ix35(LM)	2012	General	Smart Parking Assist System	Read Data Stream	
Tucson/ix35(LM)	2012	General	Smart Parking Assist System	Actuation Test	
Tucson/ix35(LM)	2012	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Tucson/ix35(LM)	2012	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Version Information	
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Actuation Test	
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson/ix35(LM)	2011	General	TCM(Transmission Control Module)	Version Information	
Tucson/ix35(LM)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson/ix35(LM)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson/ix35(LM)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson/ix35(LM)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Tucson/ix35(LM)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson/ix35(LM)	2011	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson/ix35(LM)	2011	General	ESP(Electronic Stability Program)	Version Information	
Tucson/ix35(LM)	2011	General	ESP(Electronic Stability Program)	Read Fault Code	
Tucson/ix35(LM)	2011	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Tucson/ix35(LM)	2011	General	ESP(Electronic Stability Program)	Read Data Stream	
Tucson/ix35(LM)	2011	General	ESP(Electronic Stability Program)	Actuation Test	
Tucson/ix35(LM)	2011	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson/ix35(LM)	2011	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Tucson/ix35(LM)	2011	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Tucson/ix35(LM)	2011	General	ESP(Electronic Stability Program)	Special Function	Base Calibration(CAN-ESP Only)
Tucson/ix35(LM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson/ix35(LM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson/ix35(LM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson/ix35(LM)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Tucson/ix35(LM)	2011	General	AC(Air Conditioning)	Version Information	
Tucson/ix35(LM)	2011	General	AC(Air Conditioning)	Read Fault Code	
Tucson/ix35(LM)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson/ix35(LM)	2011	General	AC(Air Conditioning)	Read Data Stream	
Tucson/ix35(LM)	2011	General	AC(Air Conditioning)	Actuation Test	
Tucson/ix35(LM)	2011	General	BCM(Body Control Module)	Version Information	
Tucson/ix35(LM)	2011	General	BCM(Body Control Module)	Read Fault Code	
Tucson/ix35(LM)	2011	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2011	General	BCM(Body Control Module)	Read Data Stream	
Tucson/ix35(LM)	2011	General	BCM(Body Control Module)	Actuation Test	
Tucson/ix35(LM)	2011	General	EPS(Electronic Power Steering)	Version Information	
Tucson/ix35(LM)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson/ix35(LM)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson/ix35(LM)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson/ix35(LM)	2011	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson/ix35(LM)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding
Tucson/ix35(LM)	2011	General	4WD Control	Version Information	
Tucson/ix35(LM)	2011	General	4WD Control	Read Fault Code	
Tucson/ix35(LM)	2011	General	4WD Control	Clear Fault Memory	
Tucson/ix35(LM)	2011	General	4WD Control	Read Data Stream	
Tucson/ix35(LM)	2011	General	4WD Control	Special Function	AWD Mode Selection
Tucson/ix35(LM)	2011	General	4WD Control	Special Function	Torque Coupling Control
Tucson/ix35(LM)	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson/ix35(LM)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson/ix35(LM)	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson/ix35(LM)	2011	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson/ix35(LM)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson/ix35(LM)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson/ix35(LM)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson/ix35(LM)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson/ix35(LM)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson/ix35(LM)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson/ix35(LM)	2011	General	IMM(Immobilizer)	Read Data Stream	
Tucson/ix35(LM)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Tucson/ix35(LM)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson/ix35(LM)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson/ix35(LM)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Tucson/ix35(LM)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson/ix35(LM)	2011	General	Smart Key	Version Information	
Tucson/ix35(LM)	2011	General	Smart Key	Read Fault Code	
Tucson/ix35(LM)	2011	General	Smart Key	Clear Fault Memory	
Tucson/ix35(LM)	2011	General	Smart Key	Read Data Stream	
Tucson/ix35(LM)	2011	General	Smart Key	Actuation Test	
Tucson/ix35(LM)	2011	General	Smart Key	Special Function	ESCL Open Status Check
Tucson/ix35(LM)	2011	General	Smart Key	Special Function	Smart Key Code Saving
Tucson/ix35(LM)	2011	General	Smart Key	Special Function	Neutralization Mode
Tucson/ix35(LM)	2011	General	Smart Key	Special Function	SMK Status Information
Tucson/ix35(LM)	2011	General	Smart Key	Special Function	ESCL Status Information
Tucson/ix35(LM)	2011	General	Smart Key	Special Function	PDM Status Information
Tucson/ix35(LM)	2011	General	Smart Key	Special Function	FOB Key Status Information
Tucson/ix35(LM)	2011	General	Smart Key	Special Function	Serial Communication Line Check
Tucson/ix35(LM)	2011	General	Smart Key	Special Function	Antenna Status Check
Tucson/ix35(LM)	2011	General	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2011	General	Transmitter Code Saving	Special Function	Code Saving
Tucson/ix35(LM)	2011	General	Smart Parking Assist System	Version Information	
Tucson/ix35(LM)	2011	General	Smart Parking Assist System	Read Fault Code	
Tucson/ix35(LM)	2011	General	Smart Parking Assist System	Clear Fault Memory	
Tucson/ix35(LM)	2011	General	Smart Parking Assist System	Read Data Stream	
Tucson/ix35(LM)	2011	General	Smart Parking Assist System	Actuation Test	
Tucson/ix35(LM)	2011	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Tucson/ix35(LM)	2011	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Version Information	
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Read Data Stream	
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Actuation Test	
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2010	General	TCM(Transmission Control Module)	Version Information	
Tucson/ix35(LM)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson/ix35(LM)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson/ix35(LM)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson/ix35(LM)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Tucson/ix35(LM)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson/ix35(LM)	2010	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson/ix35(LM)	2010	General	ESP(Electronic Stability Program)	Version Information	
Tucson/ix35(LM)	2010	General	ESP(Electronic Stability Program)	Read Fault Code	
Tucson/ix35(LM)	2010	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Tucson/ix35(LM)	2010	General	ESP(Electronic Stability Program)	Read Data Stream	
Tucson/ix35(LM)	2010	General	ESP(Electronic Stability Program)	Actuation Test	
Tucson/ix35(LM)	2010	General	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson/ix35(LM)	2010	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Tucson/ix35(LM)	2010	General	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Tucson/ix35(LM)	2010	General	ESP(Electronic Stability Program)	Special Function	Base Configuration(CAN-ESP Only)
Tucson/ix35(LM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson/ix35(LM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson/ix35(LM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson/ix35(LM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson/ix35(LM)	2010	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Tucson/ix35(LM)	2010	General	AC(Air Conditioning)	Version Information	
Tucson/ix35(LM)	2010	General	AC(Air Conditioning)	Read Fault Code	
Tucson/ix35(LM)	2010	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson/ix35(LM)	2010	General	AC(Air Conditioning)	Read Data Stream	
Tucson/ix35(LM)	2010	General	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2010	General	BCM(Body Control Module)	Version Information	
Tucson/ix35(LM)	2010	General	BCM(Body Control Module)	Read Fault Code	
Tucson/ix35(LM)	2010	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson/ix35(LM)	2010	General	BCM(Body Control Module)	Read Data Stream	
Tucson/ix35(LM)	2010	General	BCM(Body Control Module)	Actuation Test	
Tucson/ix35(LM)	2010	General	EPS(Electronic Power Steering)	Version Information	
Tucson/ix35(LM)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson/ix35(LM)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson/ix35(LM)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson/ix35(LM)	2010	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson/ix35(LM)	2010	General	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding
Tucson/ix35(LM)	2010	General	4WD Control	Version Information	
Tucson/ix35(LM)	2010	General	4WD Control	Read Fault Code	
Tucson/ix35(LM)	2010	General	4WD Control	Clear Fault Memory	
Tucson/ix35(LM)	2010	General	4WD Control	Read Data Stream	
Tucson/ix35(LM)	2010	General	4WD Control	Special Function	AWD Mode Selection
Tucson/ix35(LM)	2010	General	4WD Control	Special Function	Torque Coupling Control
Tucson/ix35(LM)	2010	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson/ix35(LM)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson/ix35(LM)	2010	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson/ix35(LM)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson/ix35(LM)	2010	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson/ix35(LM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson/ix35(LM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson/ix35(LM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson/ix35(LM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson/ix35(LM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson/ix35(LM)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson/ix35(LM)	2010	General	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson/ix35(LM)	2010	General	IMM(Immobilizer)	Special Function	Password
Tucson/ix35(LM)	2010	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Tucson/ix35(LM)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson/ix35(LM)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson/ix35(LM)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Tucson/ix35(LM)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson/ix35(LM)	2010	General	Smart Key	Version Information	
Tucson/ix35(LM)	2010	General	Smart Key	Read Fault Code	
Tucson/ix35(LM)	2010	General	Smart Key	Clear Fault Memory	
Tucson/ix35(LM)	2010	General	Smart Key	Read Data Stream	
Tucson/ix35(LM)	2010	General	Smart Key	Actuation Test	
Tucson/ix35(LM)	2010	General	Smart Key	Special Function	ESCL Open Status Check
Tucson/ix35(LM)	2010	General	Smart Key	Special Function	Smart Key Code Saving
Tucson/ix35(LM)	2010	General	Smart Key	Special Function	Neutralization Mode
Tucson/ix35(LM)	2010	General	Smart Key	Special Function	SMK Status Information
Tucson/ix35(LM)	2010	General	Smart Key	Special Function	ESCL Status Information
Tucson/ix35(LM)	2010	General	Smart Key	Special Function	PDM Status Information
Tucson/ix35(LM)	2010	General	Smart Key	Special Function	FOB Key Status Information
Tucson/ix35(LM)	2010	General	Smart Key	Special Function	Serial Communication Line Check
Tucson/ix35(LM)	2010	General	Smart Key	Special Function	Antenna Status Check
Tucson/ix35(LM)	2010	General	Transmitter Code Saving	Read Data Stream	
Tucson/ix35(LM)	2010	General	Transmitter Code Saving	Special Function	Code Saving
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Tucson/ix35(LM)	2010	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(TL)	2018	General	ECM(Engine Control Module)	Version Information	
Tucson(TL)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(TL)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(TL)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(TL)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(TL)	2018	General	ECM(Engine Control Module)	Actuation Test	
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TL)	2018	General	TCM(Transmission Control Module)	Version Information	
Tucson(TL)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TL)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TL)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TL)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TL)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(TL)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TL)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(Ecu Replacement)
Tucson(TL)	2018	General	Autonomous Emergency Braking System	Version Information	
Tucson(TL)	2018	General	Autonomous Emergency Braking System	Read Fault Code	
Tucson(TL)	2018	General	Autonomous Emergency Braking System	Clear Fault Memory	
Tucson(TL)	2018	General	Autonomous Emergency Braking System	Read Data Stream	
Tucson(TL)	2018	General	Autonomous Emergency Braking System	Special Function	AEB Variant Coding
Tucson(TL)	2018	General	Autonomous Emergency Braking System	Special Function	Radar Sensor Alignment(SCC/AEP)
Tucson(TL)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TL)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TL)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TL)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TL)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TL)	2018	General	AC(Air Conditioning)	Version Information	
Tucson(TL)	2018	General	AC(Air Conditioning)	Read Fault Code	
Tucson(TL)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TL)	2018	General	AC(Air Conditioning)	Read Data Stream	
Tucson(TL)	2018	General	AC(Air Conditioning)	Actuation Test	
Tucson(TL)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecu Tuned)
Tucson(TL)	2018	General	BCM(Body Control Module)	Version Information	
Tucson(TL)	2018	General	BCM(Body Control Module)	Read Fault Code	
Tucson(TL)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TL)	2018	General	BCM(Body Control Module)	Read Data Stream	
Tucson(TL)	2018	General	BCM(Body Control Module)	Actuation Test	
Tucson(TL)	2018	General	BCM(Body Control Module)	Special Function	User Option
Tucson(TL)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding

model	year	area	system	function	subfunction
Tucson(TL)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TL)	2018	General	Power Tail Gate	Version Information	
Tucson(TL)	2018	General	Power Tail Gate	Read Fault Code	
Tucson(TL)	2018	General	Power Tail Gate	Clear Fault Memory	
Tucson(TL)	2018	General	Power Tail Gate	Read Data Stream	
Tucson(TL)	2018	General	Power Tail Gate	Special Function	User Option
Tucson(TL)	2018	General	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Tucson(TL)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(TL)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(TL)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(TL)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(TL)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(TL)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(TL)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(TL)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(TL)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(TL)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Tucson(TL)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Tucson(TL)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Tucson(TL)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Tucson(TL)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Tucson(TL)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Tucson(TL)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Tucson(TL)	2018	General	EPS(Electronic Power Steering)	Version Information	
Tucson(TL)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(TL)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(TL)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(TL)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
Tucson(TL)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(TL)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(TL)	2018	General	Driveshaft	Version Information	
Tucson(TL)	2018	General	Driveshaft	Read Fault Code	
Tucson(TL)	2018	General	Driveshaft	Clear Fault Memory	
Tucson(TL)	2018	General	Driveshaft	Read Data Stream	
Tucson(TL)	2018	General	Driveshaft	Actuation Test	
Tucson(TL)	2018	General	Driveshaft	Special Function	Clutch Learning Read
Tucson(TL)	2018	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson(TL)	2018	General	Driveshaft	Special Function	Clutch Learning Write
Tucson(TL)	2018	General	Smart Key Unit	Version Information	
Tucson(TL)	2018	General	Smart Key Unit	Read Fault Code	
Tucson(TL)	2018	General	Smart Key Unit	Clear Fault Memory	
Tucson(TL)	2018	General	Smart Key Unit	Read Data Stream	
Tucson(TL)	2018	General	Smart Key Unit	Actuation Test	
Tucson(TL)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TL)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TL)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TL)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(TL)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TL)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Tucson(TL)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(TL)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TL)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(TL)	2018	General	Blind Spot Detection	Version Information	
Tucson(TL)	2018	General	Blind Spot Detection	Read Fault Code	
Tucson(TL)	2018	General	Blind Spot Detection	Clear Fault Memory	
Tucson(TL)	2018	General	Blind Spot Detection	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(TL)	2018	General	Blind Spot Detection	Actuation Test	
Tucson(TL)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Tucson(TL)	2018	General	Lane Departure Warning System	Version Information	
Tucson(TL)	2018	General	Lane Departure Warning System	Read Fault Code	
Tucson(TL)	2018	General	Lane Departure Warning System	Clear Fault Memory	
Tucson(TL)	2018	General	Lane Departure Warning System	Read Data Stream	
Tucson(TL)	2018	General	Lane Departure Warning System	Special Function	SPC Calibration
Tucson(TL)	2018	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Tucson(TL)	2018	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Tucson(TL)	2018	General	Smart Parking Assist System	Version Information	
Tucson(TL)	2018	General	Smart Parking Assist System	Read Fault Code	
Tucson(TL)	2018	General	Smart Parking Assist System	Clear Fault Memory	
Tucson(TL)	2018	General	Smart Parking Assist System	Read Data Stream	
Tucson(TL)	2018	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson(TL)	2018	General	IMM(Immobilizer)	Read Fault Code	
Tucson(TL)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TL)	2018	General	IMM(Immobilizer)	Read Data Stream	
Tucson(TL)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Tucson(TL)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TL)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TL)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(TL)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(TL)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Special Function	AEB Variant Coding
Tucson(TL)	2018	General	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Tucson(TL)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove

model	year	area	system	function	subfunction
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	Lambda
Tucson(TL)	2018	General	ECM(Engine Control Module)	Special Function	Control/ECU Cleaning
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(TL)	2017	General	ECM(Engine Control Module)	Version Information	
Tucson(TL)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(TL)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TL)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(TL)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(TL)	2017	General	ECM(Engine Control Module)	Actuation Test	
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Cylinder Power
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TL)	2017	General	TCM(Transmission Control Module)	Version Information	
Tucson(TL)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TL)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TL)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TL)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TL)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(TL)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TL)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/ESC/Only)
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(ECU Replacement)
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Special Function	AEB Variant Coding
Tucson(TL)	2017	General	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Tucson(TL)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TL)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TL)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TL)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TL)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TL)	2017	General	AC(Air Conditioning)	Version Information	
Tucson(TL)	2017	General	AC(Air Conditioning)	Read Fault Code	
Tucson(TL)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TL)	2017	General	AC(Air Conditioning)	Read Data Stream	
Tucson(TL)	2017	General	AC(Air Conditioning)	Actuation Test	
Tucson(TL)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Tucson(TL)	2017	General	BCM(Body Control Module)	Version Information	
Tucson(TL)	2017	General	BCM(Body Control Module)	Read Fault Code	
Tucson(TL)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TL)	2017	General	BCM(Body Control Module)	Read Data Stream	
Tucson(TL)	2017	General	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Tucson(TL)	2017	General	BCM(Body Control Module)	Special Function	User Option
Tucson(TL)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Tucson(TL)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TL)	2017	General	Power Tail Gate	Version Information	
Tucson(TL)	2017	General	Power Tail Gate	Read Fault Code	
Tucson(TL)	2017	General	Power Tail Gate	Clear Fault Memory	
Tucson(TL)	2017	General	Power Tail Gate	Read Data Stream	
Tucson(TL)	2017	General	Power Tail Gate	Special Function	User Option
Tucson(TL)	2017	General	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Tucson(TL)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(TL)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(TL)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(TL)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(TL)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(TL)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(TL)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(TL)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(TL)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(TL)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Tucson(TL)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Tucson(TL)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Tucson(TL)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Tucson(TL)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Tucson(TL)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Tucson(TL)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Tucson(TL)	2017	General	EPS(Electronic Power Steering)	Version Information	
Tucson(TL)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(TL)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(TL)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(TL)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(TL)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(TL)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(TL)	2017	General	Driveshaft	Version Information	
Tucson(TL)	2017	General	Driveshaft	Read Fault Code	
Tucson(TL)	2017	General	Driveshaft	Clear Fault Memory	
Tucson(TL)	2017	General	Driveshaft	Read Data Stream	
Tucson(TL)	2017	General	Driveshaft	Actuation Test	
Tucson(TL)	2017	General	Driveshaft	Special Function	Clutch Learning Read
Tucson(TL)	2017	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson(TL)	2017	General	Driveshaft	Special Function	Clutch Learning Write
Tucson(TL)	2017	General	Smart Key Unit	Version Information	
Tucson(TL)	2017	General	Smart Key Unit	Read Fault Code	
Tucson(TL)	2017	General	Smart Key Unit	Clear Fault Memory	
Tucson(TL)	2017	General	Smart Key Unit	Read Data Stream	
Tucson(TL)	2017	General	Smart Key Unit	Actuation Test	
Tucson(TL)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TL)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TL)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TL)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(TL)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TL)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Tucson(TL)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(TL)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TL)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(TL)	2017	General	Blind Spot Detection	Version Information	
Tucson(TL)	2017	General	Blind Spot Detection	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(TL)	2017	General	Blind Spot Detection	Clear Fault Memory	
Tucson(TL)	2017	General	Blind Spot Detection	Read Data Stream	
Tucson(TL)	2017	General	Blind Spot Detection	Actuation Test	
Tucson(TL)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Tucson(TL)	2017	General	Lane Departure Warning System	Version Information	
Tucson(TL)	2017	General	Lane Departure Warning System	Read Fault Code	
Tucson(TL)	2017	General	Lane Departure Warning System	Clear Fault Memory	
Tucson(TL)	2017	General	Lane Departure Warning System	Read Data Stream	
Tucson(TL)	2017	General	Lane Departure Warning System	Special Function	SPC Calibration
Tucson(TL)	2017	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Tucson(TL)	2017	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Tucson(TL)	2017	General	Smart Parking Assist System	Version Information	
Tucson(TL)	2017	General	Smart Parking Assist System	Read Fault Code	
Tucson(TL)	2017	General	Smart Parking Assist System	Clear Fault Memory	
Tucson(TL)	2017	General	Smart Parking Assist System	Read Data Stream	
Tucson(TL)	2017	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson(TL)	2017	General	IMM(Immobilizer)	Read Fault Code	
Tucson(TL)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TL)	2017	General	IMM(Immobilizer)	Read Data Stream	
Tucson(TL)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Tucson(TL)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TL)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TL)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(TL)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(TL)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(TL)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove

model	year	area	system	function	subfunction
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Lambda
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	Sensor/ECU/Cleaning
Tucson(TL)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(TL)	2016	General	ECM(Engine Control Module)	Version Information	
Tucson(TL)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(TL)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TL)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(TL)	2016	General	ECM(Engine Control Module)	Actuation Test	
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	Lambda
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	Sensor/ECU/Cleaning
Tucson(TL)	2016	General	TCM(Transmission Control Module)	Version Information	
Tucson(TL)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TL)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TL)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TL)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TL)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(TL)	2016	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TL)	2016	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(Ecu Replacement)
Tucson(TL)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TL)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TL)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TL)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TL)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TL)	2016	General	AC(Air Conditioning)	Version Information	
Tucson(TL)	2016	General	AC(Air Conditioning)	Read Fault Code	
Tucson(TL)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TL)	2016	General	AC(Air Conditioning)	Read Data Stream	
Tucson(TL)	2016	General	AC(Air Conditioning)	Actuation Test	
Tucson(TL)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecu Type)
Tucson(TL)	2016	General	BCM(Body Control Module)	Version Information	
Tucson(TL)	2016	General	BCM(Body Control Module)	Read Fault Code	
Tucson(TL)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TL)	2016	General	BCM(Body Control Module)	Read Data Stream	
Tucson(TL)	2016	General	BCM(Body Control Module)	Actuation Test	
Tucson(TL)	2016	General	BCM(Body Control Module)	Special Function	User Option
Tucson(TL)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Tucson(TL)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TL)	2016	General	BCM(Body Control Module)	Special Function	Power Targate mode Configuration

model	year	area	system	function	subfunction
Tucson(TL)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(TL)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(TL)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(TL)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(TL)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(TL)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(TL)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(TL)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(TL)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(TL)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Tucson(TL)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Tucson(TL)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Tucson(TL)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Tucson(TL)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Tucson(TL)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Tucson(TL)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Tucson(TL)	2016	General	EPS(Electronic Power Steering)	Version Information	
Tucson(TL)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(TL)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(TL)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(TL)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(TL)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(TL)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(TL)	2016	General	Driveshaft	Version Information	
Tucson(TL)	2016	General	Driveshaft	Read Fault Code	
Tucson(TL)	2016	General	Driveshaft	Clear Fault Memory	
Tucson(TL)	2016	General	Driveshaft	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(TL)	2016	General	Driveshaft	Actuation Test	
Tucson(TL)	2016	General	Driveshaft	Special Function	Clutch Learning Read
Tucson(TL)	2016	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson(TL)	2016	General	Driveshaft	Special Function	Clutch Learning Write
Tucson(TL)	2016	General	Smart Key Unit	Version Information	
Tucson(TL)	2016	General	Smart Key Unit	Read Fault Code	
Tucson(TL)	2016	General	Smart Key Unit	Clear Fault Memory	
Tucson(TL)	2016	General	Smart Key Unit	Read Data Stream	
Tucson(TL)	2016	General	Smart Key Unit	Actuation Test	
Tucson(TL)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TL)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TL)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TL)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(TL)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TL)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Tucson(TL)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(TL)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TL)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(TL)	2016	General	Blind Spot Detection	Version Information	
Tucson(TL)	2016	General	Blind Spot Detection	Read Fault Code	
Tucson(TL)	2016	General	Blind Spot Detection	Clear Fault Memory	
Tucson(TL)	2016	General	Blind Spot Detection	Read Data Stream	
Tucson(TL)	2016	General	Blind Spot Detection	Actuation Test	
Tucson(TL)	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Tucson(TL)	2016	General	Lane Departure Warning System	Version Information	
Tucson(TL)	2016	General	Lane Departure Warning System	Read Fault Code	
Tucson(TL)	2016	General	Lane Departure Warning System	Clear Fault Memory	
Tucson(TL)	2016	General	Lane Departure Warning System	Read Data Stream	
Tucson(TL)	2016	General	Lane Departure Warning System	Special Function	SPC Calibration

model	year	area	system	function	subfunction
Tucson(TL)	2016	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Tucson(TL)	2016	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Tucson(TL)	2016	General	Smart Parking Assist System	Version Information	
Tucson(TL)	2016	General	Smart Parking Assist System	Read Fault Code	
Tucson(TL)	2016	General	Smart Parking Assist System	Clear Fault Memory	
Tucson(TL)	2016	General	Smart Parking Assist System	Read Data Stream	
Tucson(TL)	2016	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson(TL)	2016	General	Active Hood System	Version Information	
Tucson(TL)	2016	General	Active Hood System	Read Fault Code	
Tucson(TL)	2016	General	Active Hood System	Clear Fault Memory	
Tucson(TL)	2016	General	Autonomous Emergency Braking System	Version Information	
Tucson(TL)	2016	General	Autonomous Emergency Braking System	Read Fault Code	
Tucson(TL)	2016	General	Autonomous Emergency Braking System	Clear Fault Memory	
Tucson(TL)	2016	General	Autonomous Emergency Braking System	Read Data Stream	
Tucson(TL)	2016	General	Autonomous Emergency Braking System	Special Function	AEB Variant Coding
Tucson(TL)	2016	General	Autonomous Emergency Braking System	Special Function	Radar Sensor Alignment(SCC/AEB)
Tucson(TL)	2016	General	IMM(Immobilizer)	Read Fault Code	
Tucson(TL)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TL)	2016	General	IMM(Immobilizer)	Read Data Stream	
Tucson(TL)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Tucson(TL)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TL)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TL)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(TL)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(TL)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(TL)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TL)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson(TL)	2016	General	Engine Control	Version Information	
Tucson(TL)	2016	General	Engine Control	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(TL)	2016	General	Engine Control	Clear Fault Memory	
Tucson(TL)	2016	General	Engine Control	Read Data Stream	
Tucson(TL)	2016	General	Engine Control	Read FreezeData	
Tucson(TL)	2016	General	Engine Control	Actuation Test	
Tucson(TL)	2016	General	Engine Control	Special Function	Read VIN
Tucson(TL)	2016	General	Engine Control	Special Function	Write VIN
Tucson(TL)	2016	General	Engine Control	Special Function	Resetting Adaptive Values
Tucson(TL)	2016	General	Engine Control	Special Function	Auto Detected Configuration Reset
Tucson(TL)	2016	General	Engine Control	Special Function	CKP CMP Signal Test
Tucson(TL)	2016	General	Engine Control	Special Function	CVVT Test
Tucson(TL)	2016	General	Engine Control	Special Function	Cylinder Power Balance(Optional)
Tucson(TL)	2016	General	Engine Control	Special Function	ETC Test(Optional)
Tucson(TL)	2016	General	Engine Control	Special Function	Alternator TEST
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TL)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(TL)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(TL)	2015	General	ECM(Engine Control Module)	Version Information	
Tucson(TL)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(TL)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TL)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(TL)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(TL)	2015	General	ECM(Engine Control Module)	Actuation Test	
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TL)	2015	General	TCM(Transmission Control Module)	Version Information	
Tucson(TL)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TL)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TL)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TL)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TL)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(TL)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TL)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC)Only)
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(ECU Replacement)

model	year	area	system	function	subfunction
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Special Function	AEB Variant Coding
Tucson(TL)	2015	General	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Tucson(TL)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TL)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TL)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TL)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TL)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TL)	2015	General	AC(Air Conditioning)	Version Information	
Tucson(TL)	2015	General	AC(Air Conditioning)	Read Fault Code	
Tucson(TL)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TL)	2015	General	AC(Air Conditioning)	Read Data Stream	
Tucson(TL)	2015	General	AC(Air Conditioning)	Actuation Test	
Tucson(TL)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Tucson(TL)	2015	General	BCM(Body Control Module)	Version Information	
Tucson(TL)	2015	General	BCM(Body Control Module)	Read Fault Code	
Tucson(TL)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TL)	2015	General	BCM(Body Control Module)	Read Data Stream	
Tucson(TL)	2015	General	BCM(Body Control Module)	Actuation Test	
Tucson(TL)	2015	General	BCM(Body Control Module)	Special Function	User Option
Tucson(TL)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Tucson(TL)	2015	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TL)	2015	General	Power Tail Gate	Version Information	
Tucson(TL)	2015	General	Power Tail Gate	Read Fault Code	
Tucson(TL)	2015	General	Power Tail Gate	Clear Fault Memory	
Tucson(TL)	2015	General	Power Tail Gate	Read Data Stream	
Tucson(TL)	2015	General	Power Tail Gate	Special Function	User Option
Tucson(TL)	2015	General	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Tucson(TL)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(TL)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(TL)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(TL)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(TL)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(TL)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(TL)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(TL)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(TL)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(TL)	2015	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Tucson(TL)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Tucson(TL)	2015	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Tucson(TL)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Tucson(TL)	2015	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Tucson(TL)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Tucson(TL)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Tucson(TL)	2015	General	EPS(Electronic Power Steering)	Version Information	
Tucson(TL)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(TL)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(TL)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(TL)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(TL)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(TL)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(TL)	2015	General	Driveshaft	Version Information	
Tucson(TL)	2015	General	Driveshaft	Read Fault Code	
Tucson(TL)	2015	General	Driveshaft	Clear Fault Memory	
Tucson(TL)	2015	General	Driveshaft	Read Data Stream	
Tucson(TL)	2015	General	Driveshaft	Actuation Test	
Tucson(TL)	2015	General	Driveshaft	Special Function	Clutch Learning Read

model	year	area	system	function	subfunction
Tucson(TL)	2015	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson(TL)	2015	General	Driveshaft	Special Function	Clutch Learning Write
Tucson(TL)	2015	General	Smart Key Unit	Version Information	
Tucson(TL)	2015	General	Smart Key Unit	Read Fault Code	
Tucson(TL)	2015	General	Smart Key Unit	Clear Fault Memory	
Tucson(TL)	2015	General	Smart Key Unit	Read Data Stream	
Tucson(TL)	2015	General	Smart Key Unit	Actuation Test	
Tucson(TL)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TL)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TL)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TL)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(TL)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TL)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Tucson(TL)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(TL)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TL)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(TL)	2015	General	Blind Spot Detection	Version Information	
Tucson(TL)	2015	General	Blind Spot Detection	Read Fault Code	
Tucson(TL)	2015	General	Blind Spot Detection	Clear Fault Memory	
Tucson(TL)	2015	General	Blind Spot Detection	Read Data Stream	
Tucson(TL)	2015	General	Blind Spot Detection	Actuation Test	
Tucson(TL)	2015	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Tucson(TL)	2015	General	Lane Departure Warning System	Version Information	
Tucson(TL)	2015	General	Lane Departure Warning System	Read Fault Code	
Tucson(TL)	2015	General	Lane Departure Warning System	Clear Fault Memory	
Tucson(TL)	2015	General	Lane Departure Warning System	Read Data Stream	
Tucson(TL)	2015	General	Lane Departure Warning System	Special Function	SPC Calibration
Tucson(TL)	2015	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Tucson(TL)	2015	General	Lane Departure Warning System	Special Function	LDWS Variant Coding

model	year	area	system	function	subfunction
Tucson(TL)	2015	General	Smart Parking Assist System	Version Information	
Tucson(TL)	2015	General	Smart Parking Assist System	Read Fault Code	
Tucson(TL)	2015	General	Smart Parking Assist System	Clear Fault Memory	
Tucson(TL)	2015	General	Smart Parking Assist System	Read Data Stream	
Tucson(TL)	2015	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson(TL)	2015	General	IMM(Immobilizer)	Read Fault Code	
Tucson(TL)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TL)	2015	General	IMM(Immobilizer)	Read Data Stream	
Tucson(TL)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Tucson(TL)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TL)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TL)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(TL)	2015	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(TL)	2015	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(TL)	2015	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU Cleaning
Tucson(TL)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Version Information	
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Actuation Test	
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TLe)	2018	General	TCM(Transmission Control Module)	Version Information	
Tucson(TLe)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TLe)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TLe)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TLe)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TLe)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(TLe)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TLe)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(ECU Replacement)
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Special Function	AEB Variant Coding

model	year	area	system	function	subfunction
Tucson(TLe)	2018	General	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Tucson(TLe)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TLe)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TLe)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TLe)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TLe)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TLe)	2018	General	AC(Air Conditioning)	Version Information	
Tucson(TLe)	2018	General	AC(Air Conditioning)	Read Fault Code	
Tucson(TLe)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TLe)	2018	General	AC(Air Conditioning)	Read Data Stream	
Tucson(TLe)	2018	General	AC(Air Conditioning)	Actuation Test	
Tucson(TLe)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Tucson(TLe)	2018	General	BCM(Body Control Module)	Version Information	
Tucson(TLe)	2018	General	BCM(Body Control Module)	Read Fault Code	
Tucson(TLe)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TLe)	2018	General	BCM(Body Control Module)	Read Data Stream	
Tucson(TLe)	2018	General	BCM(Body Control Module)	Actuation Test	
Tucson(TLe)	2018	General	BCM(Body Control Module)	Special Function	User Option
Tucson(TLe)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Tucson(TLe)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TLe)	2018	General	Power Tail Gate	Version Information	
Tucson(TLe)	2018	General	Power Tail Gate	Read Fault Code	
Tucson(TLe)	2018	General	Power Tail Gate	Clear Fault Memory	
Tucson(TLe)	2018	General	Power Tail Gate	Read Data Stream	
Tucson(TLe)	2018	General	Power Tail Gate	Special Function	User Option
Tucson(TLe)	2018	General	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Tucson(TLe)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(TLe)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(TLe)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(TLe)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(TLe)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(TLe)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(TLe)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(TLe)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(TLe)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(TLe)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Tucson(TLe)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Tucson(TLe)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Tucson(TLe)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Tucson(TLe)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Tucson(TLe)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Tucson(TLe)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Tucson(TLe)	2018	General	EPS(Electronic Power Steering)	Version Information	
Tucson(TLe)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(TLe)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(TLe)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(TLe)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(TLe)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(TLe)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(TLe)	2018	General	Driveshaft	Version Information	
Tucson(TLe)	2018	General	Driveshaft	Read Fault Code	
Tucson(TLe)	2018	General	Driveshaft	Clear Fault Memory	
Tucson(TLe)	2018	General	Driveshaft	Read Data Stream	
Tucson(TLe)	2018	General	Driveshaft	Actuation Test	
Tucson(TLe)	2018	General	Driveshaft	Special Function	Clutch Learning Read
Tucson(TLe)	2018	General	Driveshaft	Special Function	Clutch Learning Reset

model	year	area	system	function	subfunction
Tucson(TLe)	2018	General	Driveshaft	Special Function	Clutch Learning Write
Tucson(TLe)	2018	General	Smart Key Unit	Version Information	
Tucson(TLe)	2018	General	Smart Key Unit	Read Fault Code	
Tucson(TLe)	2018	General	Smart Key Unit	Clear Fault Memory	
Tucson(TLe)	2018	General	Smart Key Unit	Read Data Stream	
Tucson(TLe)	2018	General	Smart Key Unit	Actuation Test	
Tucson(TLe)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TLe)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TLe)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TLe)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(TLe)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TLe)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Tucson(TLe)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(TLe)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TLe)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(TLe)	2018	General	Blind Spot Detection	Version Information	
Tucson(TLe)	2018	General	Blind Spot Detection	Read Fault Code	
Tucson(TLe)	2018	General	Blind Spot Detection	Clear Fault Memory	
Tucson(TLe)	2018	General	Blind Spot Detection	Read Data Stream	
Tucson(TLe)	2018	General	Blind Spot Detection	Actuation Test	
Tucson(TLe)	2018	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Tucson(TLe)	2018	General	Lane Departure Warning System	Version Information	
Tucson(TLe)	2018	General	Lane Departure Warning System	Read Fault Code	
Tucson(TLe)	2018	General	Lane Departure Warning System	Clear Fault Memory	
Tucson(TLe)	2018	General	Lane Departure Warning System	Read Data Stream	
Tucson(TLe)	2018	General	Lane Departure Warning System	Special Function	SPC Calibration
Tucson(TLe)	2018	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Tucson(TLe)	2018	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Tucson(TLe)	2018	General	Smart Parking Assist System	Version Information	

model	year	area	system	function	subfunction
Tucson(TLe)	2018	General	Smart Parking Assist System	Read Fault Code	
Tucson(TLe)	2018	General	Smart Parking Assist System	Clear Fault Memory	
Tucson(TLe)	2018	General	Smart Parking Assist System	Read Data Stream	
Tucson(TLe)	2018	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson(TLe)	2018	General	Active Hood System	Version Information	
Tucson(TLe)	2018	General	Active Hood System	Read Fault Code	
Tucson(TLe)	2018	General	Active Hood System	Clear Fault Memory	
Tucson(TLe)	2018	General	Telematics Unit	Version Information	
Tucson(TLe)	2018	General	Telematics Unit	Read Fault Code	
Tucson(TLe)	2018	General	Telematics Unit	Clear Fault Memory	
Tucson(TLe)	2018	General	IMM(Immobilizer)	Read Fault Code	
Tucson(TLe)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TLe)	2018	General	IMM(Immobilizer)	Read Data Stream	
Tucson(TLe)	2018	General	IMM(Immobilizer)	Special Function	Password
Tucson(TLe)	2018	General	IMM(Immobilizer)	Special Function	Teaching/Changing
Tucson(TLe)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TLe)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TLe)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(TLe)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(TLe)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Cylinder Power
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(TLe)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Lambda
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	Cancer/LSU Cleaning
Tucson(TLe)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration

model	year	area	system	function	subfunction
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Version Information	
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Actuation Test	
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TLe)	2017	General	TCM(Transmission Control Module)	Version Information	
Tucson(TLe)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TLe)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TLe)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TLe)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TLe)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(TLe)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TLe)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC/Only)

model	year	area	system	function	subfunction
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(Ecu Replacement)
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Special Function	AEB Variant Coding
Tucson(TLe)	2017	General	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCG/AEP)
Tucson(TLe)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TLe)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TLe)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TLe)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TLe)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TLe)	2017	General	AC(Air Conditioning)	Version Information	
Tucson(TLe)	2017	General	AC(Air Conditioning)	Read Fault Code	
Tucson(TLe)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TLe)	2017	General	AC(Air Conditioning)	Read Data Stream	
Tucson(TLe)	2017	General	AC(Air Conditioning)	Actuation Test	
Tucson(TLe)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecu Tune)
Tucson(TLe)	2017	General	BCM(Body Control Module)	Version Information	
Tucson(TLe)	2017	General	BCM(Body Control Module)	Read Fault Code	
Tucson(TLe)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TLe)	2017	General	BCM(Body Control Module)	Read Data Stream	
Tucson(TLe)	2017	General	BCM(Body Control Module)	Actuation Test	
Tucson(TLe)	2017	General	BCM(Body Control Module)	Special Function	User Option
Tucson(TLe)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Tucson(TLe)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TLe)	2017	General	Power Tail Gate	Version Information	

model	year	area	system	function	subfunction
Tucson(TLe)	2017	General	Power Tail Gate	Read Fault Code	
Tucson(TLe)	2017	General	Power Tail Gate	Clear Fault Memory	
Tucson(TLe)	2017	General	Power Tail Gate	Read Data Stream	
Tucson(TLe)	2017	General	Power Tail Gate	Special Function	User Option
Tucson(TLe)	2017	General	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Tucson(TLe)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(TLe)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(TLe)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(TLe)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(TLe)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(TLe)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(TLe)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(TLe)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(TLe)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(TLe)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Tucson(TLe)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Tucson(TLe)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Tucson(TLe)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Tucson(TLe)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Tucson(TLe)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Tucson(TLe)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Tucson(TLe)	2017	General	Motor Driven Power Steering	Version Information	
Tucson(TLe)	2017	General	Motor Driven Power Steering	Read Fault Code	
Tucson(TLe)	2017	General	Motor Driven Power Steering	Clear Fault Memory	
Tucson(TLe)	2017	General	Motor Driven Power Steering	Read Data Stream	
Tucson(TLe)	2017	General	Motor Driven Power Steering	Special Function	ASP Calibration
Tucson(TLe)	2017	General	Motor Driven Power Steering	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Tucson(TLe)	2017	General	Motor Driven Power Steering	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(TLe)	2017	General	Driveshaft	Version Information	
Tucson(TLe)	2017	General	Driveshaft	Read Fault Code	
Tucson(TLe)	2017	General	Driveshaft	Clear Fault Memory	
Tucson(TLe)	2017	General	Driveshaft	Read Data Stream	
Tucson(TLe)	2017	General	Driveshaft	Actuation Test	
Tucson(TLe)	2017	General	Driveshaft	Special Function	Clutch Learning Read
Tucson(TLe)	2017	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson(TLe)	2017	General	Driveshaft	Special Function	Clutch Learning Write
Tucson(TLe)	2017	General	Smart Key Unit	Version Information	
Tucson(TLe)	2017	General	Smart Key Unit	Read Fault Code	
Tucson(TLe)	2017	General	Smart Key Unit	Clear Fault Memory	
Tucson(TLe)	2017	General	Smart Key Unit	Read Data Stream	
Tucson(TLe)	2017	General	Smart Key Unit	Actuation Test	
Tucson(TLe)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TLe)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TLe)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TLe)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(TLe)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TLe)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Tucson(TLe)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(TLe)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TLe)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(TLe)	2017	General	Blind Spot Detection	Version Information	
Tucson(TLe)	2017	General	Blind Spot Detection	Read Fault Code	
Tucson(TLe)	2017	General	Blind Spot Detection	Clear Fault Memory	
Tucson(TLe)	2017	General	Blind Spot Detection	Read Data Stream	
Tucson(TLe)	2017	General	Blind Spot Detection	Actuation Test	

model	year	area	system	function	subfunction
Tucson(TLe)	2017	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Tucson(TLe)	2017	General	Lane Departure Warning System	Version Information	
Tucson(TLe)	2017	General	Lane Departure Warning System	Read Fault Code	
Tucson(TLe)	2017	General	Lane Departure Warning System	Clear Fault Memory	
Tucson(TLe)	2017	General	Lane Departure Warning System	Read Data Stream	
Tucson(TLe)	2017	General	Lane Departure Warning System	Special Function	SPC Calibration
Tucson(TLe)	2017	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Tucson(TLe)	2017	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Tucson(TLe)	2017	General	Smart Parking Assist System	Version Information	
Tucson(TLe)	2017	General	Smart Parking Assist System	Read Fault Code	
Tucson(TLe)	2017	General	Smart Parking Assist System	Clear Fault Memory	
Tucson(TLe)	2017	General	Smart Parking Assist System	Read Data Stream	
Tucson(TLe)	2017	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson(TLe)	2017	General	Active Hood System	Version Information	
Tucson(TLe)	2017	General	Active Hood System	Read Fault Code	
Tucson(TLe)	2017	General	Active Hood System	Clear Fault Memory	
Tucson(TLe)	2017	General	Telematics Unit	Version Information	
Tucson(TLe)	2017	General	Telematics Unit	Read Fault Code	
Tucson(TLe)	2017	General	Telematics Unit	Clear Fault Memory	
Tucson(TLe)	2017	General	IMM(Immobilizer)	Read Fault Code	
Tucson(TLe)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TLe)	2017	General	IMM(Immobilizer)	Read Data Stream	
Tucson(TLe)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Tucson(TLe)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TLe)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TLe)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(TLe)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(TLe)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test

model	year	area	system	function	subfunction
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(TLe)	2017	General	EPS(Electronic Power Steering)	Version Information	
Tucson(TLe)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(TLe)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(TLe)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(TLe)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(TLe)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(TLe)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(TLe)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/ECU Cleaning
Tucson(TLe)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Version Information	
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Actuation Test	
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LSU/Cleaning
Tucson(TLe)	2016	General	TCM(Transmission Control Module)	Version Information	
Tucson(TLe)	2016	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TLe)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TLe)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TLe)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TLe)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(TLe)	2016	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TLe)	2016	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(ECU Replacement)
Tucson(TLe)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TLe)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TLe)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TLe)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TLe)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TLe)	2016	General	AC(Air Conditioning)	Version Information	
Tucson(TLe)	2016	General	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(TLe)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TLe)	2016	General	AC(Air Conditioning)	Read Data Stream	
Tucson(TLe)	2016	General	AC(Air Conditioning)	Actuation Test	
Tucson(TLe)	2016	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Tucson(TLe)	2016	General	BCM(Body Control Module)	Version Information	
Tucson(TLe)	2016	General	BCM(Body Control Module)	Read Fault Code	
Tucson(TLe)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TLe)	2016	General	BCM(Body Control Module)	Read Data Stream	
Tucson(TLe)	2016	General	BCM(Body Control Module)	Actuation Test	
Tucson(TLe)	2016	General	BCM(Body Control Module)	Special Function	User Option
Tucson(TLe)	2016	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Tucson(TLe)	2016	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TLe)	2016	General	BCM(Body Control Module)	Special Function	Power Targate mode Configuration
Tucson(TLe)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(TLe)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(TLe)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(TLe)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(TLe)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(TLe)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(TLe)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(TLe)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(TLe)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(TLe)	2016	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Tucson(TLe)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Tucson(TLe)	2016	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Tucson(TLe)	2016	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Tucson(TLe)	2016	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Tucson(TLe)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Tucson(TLe)	2016	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Tucson(TLe)	2016	General	EPS(Electronic Power Steering)	Version Information	
Tucson(TLe)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(TLe)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(TLe)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(TLe)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(TLe)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(TLe)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(TLe)	2016	General	Driveshaft	Version Information	
Tucson(TLe)	2016	General	Driveshaft	Read Fault Code	
Tucson(TLe)	2016	General	Driveshaft	Clear Fault Memory	
Tucson(TLe)	2016	General	Driveshaft	Read Data Stream	
Tucson(TLe)	2016	General	Driveshaft	Actuation Test	
Tucson(TLe)	2016	General	Driveshaft	Special Function	Clutch Learning Read
Tucson(TLe)	2016	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson(TLe)	2016	General	Driveshaft	Special Function	Clutch Learning Write
Tucson(TLe)	2016	General	Smart Key Unit	Version Information	
Tucson(TLe)	2016	General	Smart Key Unit	Read Fault Code	
Tucson(TLe)	2016	General	Smart Key Unit	Clear Fault Memory	
Tucson(TLe)	2016	General	Smart Key Unit	Read Data Stream	
Tucson(TLe)	2016	General	Smart Key Unit	Actuation Test	
Tucson(TLe)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TLe)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TLe)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TLe)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(TLe)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TLe)	2016	General	Smart Key Unit	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Tucson(TLe)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(TLe)	2016	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TLe)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(TLe)	2016	General	Blind Spot Detection	Version Information	
Tucson(TLe)	2016	General	Blind Spot Detection	Read Fault Code	
Tucson(TLe)	2016	General	Blind Spot Detection	Clear Fault Memory	
Tucson(TLe)	2016	General	Blind Spot Detection	Read Data Stream	
Tucson(TLe)	2016	General	Blind Spot Detection	Actuation Test	
Tucson(TLe)	2016	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Tucson(TLe)	2016	General	Lane Departure Warning System	Version Information	
Tucson(TLe)	2016	General	Lane Departure Warning System	Read Fault Code	
Tucson(TLe)	2016	General	Lane Departure Warning System	Clear Fault Memory	
Tucson(TLe)	2016	General	Lane Departure Warning System	Read Data Stream	
Tucson(TLe)	2016	General	Lane Departure Warning System	Special Function	SPC Calibration
Tucson(TLe)	2016	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Tucson(TLe)	2016	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Tucson(TLe)	2016	General	Smart Parking Assist System	Version Information	
Tucson(TLe)	2016	General	Smart Parking Assist System	Read Fault Code	
Tucson(TLe)	2016	General	Smart Parking Assist System	Clear Fault Memory	
Tucson(TLe)	2016	General	Smart Parking Assist System	Read Data Stream	
Tucson(TLe)	2016	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson(TLe)	2016	General	Active Hood System	Version Information	
Tucson(TLe)	2016	General	Active Hood System	Read Fault Code	
Tucson(TLe)	2016	General	Active Hood System	Clear Fault Memory	
Tucson(TLe)	2016	General	Telematics Unit	Version Information	
Tucson(TLe)	2016	General	Telematics Unit	Read Fault Code	
Tucson(TLe)	2016	General	Telematics Unit	Clear Fault Memory	
Tucson(TLe)	2016	General	Autonomous Emergency Braking System	Version Information	
Tucson(TLe)	2016	General	Autonomous Emergency Braking System	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(TLe)	2016	General	Autonomous Emergency Braking System	Clear Fault Memory	
Tucson(TLe)	2016	General	Autonomous Emergency Braking System	Read Data Stream	
Tucson(TLe)	2016	General	Autonomous Emergency Braking System	Special Function	AEB Variant Coding
Tucson(TLe)	2016	General	Autonomous Emergency Braking System	Special Function	Radar Sensor Alignment(SCC/AEB)
Tucson(TLe)	2016	General	IMM(Immobilizer)	Read Fault Code	
Tucson(TLe)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TLe)	2016	General	IMM(Immobilizer)	Read Data Stream	
Tucson(TLe)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Tucson(TLe)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TLe)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TLe)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(TLe)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(TLe)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(TLe)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TLe)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(TLe)	2016	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Version Information	
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Actuation Test	
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TLe)	2015	General	TCM(Transmission Control Module)	Version Information	
Tucson(TLe)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TLe)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TLe)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TLe)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TLe)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(TLe)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TLe)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset/(ESP/ESC)Only)
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding

model	year	area	system	function	subfunction
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(Ecu Replacement)
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Special Function	AEB Variant Coding
Tucson(TLe)	2015	General	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Tucson(TLe)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TLe)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TLe)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TLe)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TLe)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TLe)	2015	General	AC(Air Conditioning)	Version Information	
Tucson(TLe)	2015	General	AC(Air Conditioning)	Read Fault Code	
Tucson(TLe)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TLe)	2015	General	AC(Air Conditioning)	Read Data Stream	
Tucson(TLe)	2015	General	AC(Air Conditioning)	Actuation Test	
Tucson(TLe)	2015	General	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecv Type)
Tucson(TLe)	2015	General	BCM(Body Control Module)	Version Information	
Tucson(TLe)	2015	General	BCM(Body Control Module)	Read Fault Code	
Tucson(TLe)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TLe)	2015	General	BCM(Body Control Module)	Read Data Stream	
Tucson(TLe)	2015	General	BCM(Body Control Module)	Actuation Test	
Tucson(TLe)	2015	General	BCM(Body Control Module)	Special Function	User Option
Tucson(TLe)	2015	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Tucson(TLe)	2015	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TLe)	2015	General	Power Tail Gate	Version Information	
Tucson(TLe)	2015	General	Power Tail Gate	Read Fault Code	
Tucson(TLe)	2015	General	Power Tail Gate	Clear Fault Memory	
Tucson(TLe)	2015	General	Power Tail Gate	Read Data Stream	
Tucson(TLe)	2015	General	Power Tail Gate	Special Function	User Option

model	year	area	system	function	subfunction
Tucson(TLe)	2015	General	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Tucson(TLe)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(TLe)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(TLe)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(TLe)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(TLe)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(TLe)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(TLe)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(TLe)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(TLe)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(TLe)	2015	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Tucson(TLe)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Tucson(TLe)	2015	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Tucson(TLe)	2015	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Tucson(TLe)	2015	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Tucson(TLe)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Tucson(TLe)	2015	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Tucson(TLe)	2015	General	Motor Driven Power Steering	Version Information	
Tucson(TLe)	2015	General	Motor Driven Power Steering	Read Fault Code	
Tucson(TLe)	2015	General	Motor Driven Power Steering	Clear Fault Memory	
Tucson(TLe)	2015	General	Motor Driven Power Steering	Read Data Stream	
Tucson(TLe)	2015	General	Motor Driven Power Steering	Special Function	ASP Calibration
Tucson(TLe)	2015	General	Motor Driven Power Steering	Special Function	EPS Type Recognition
Tucson(TLe)	2015	General	Motor Driven Power Steering	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(TLe)	2015	General	Driveshaft	Version Information	
Tucson(TLe)	2015	General	Driveshaft	Read Fault Code	
Tucson(TLe)	2015	General	Driveshaft	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(TLe)	2015	General	Driveshaft	Read Data Stream	
Tucson(TLe)	2015	General	Driveshaft	Actuation Test	
Tucson(TLe)	2015	General	Driveshaft	Special Function	Clutch Learning Read
Tucson(TLe)	2015	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson(TLe)	2015	General	Driveshaft	Special Function	Clutch Learning Write
Tucson(TLe)	2015	General	Smart Key Unit	Version Information	
Tucson(TLe)	2015	General	Smart Key Unit	Read Fault Code	
Tucson(TLe)	2015	General	Smart Key Unit	Clear Fault Memory	
Tucson(TLe)	2015	General	Smart Key Unit	Read Data Stream	
Tucson(TLe)	2015	General	Smart Key Unit	Actuation Test	
Tucson(TLe)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TLe)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TLe)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TLe)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(TLe)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TLe)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Tucson(TLe)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(TLe)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TLe)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(TLe)	2015	General	Blind Spot Detection	Version Information	
Tucson(TLe)	2015	General	Blind Spot Detection	Read Fault Code	
Tucson(TLe)	2015	General	Blind Spot Detection	Clear Fault Memory	
Tucson(TLe)	2015	General	Blind Spot Detection	Read Data Stream	
Tucson(TLe)	2015	General	Blind Spot Detection	Actuation Test	
Tucson(TLe)	2015	General	Blind Spot Detection	Special Function	BSD Radar Calibration
Tucson(TLe)	2015	General	Lane Departure Warning System	Version Information	
Tucson(TLe)	2015	General	Lane Departure Warning System	Read Fault Code	
Tucson(TLe)	2015	General	Lane Departure Warning System	Clear Fault Memory	
Tucson(TLe)	2015	General	Lane Departure Warning System	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(TLe)	2015	General	Lane Departure Warning System	Special Function	SPC Calibration
Tucson(TLe)	2015	General	Lane Departure Warning System	Special Function	SPTAC Calibration
Tucson(TLe)	2015	General	Lane Departure Warning System	Special Function	LDWS Variant Coding
Tucson(TLe)	2015	General	Smart Parking Assist System	Version Information	
Tucson(TLe)	2015	General	Smart Parking Assist System	Read Fault Code	
Tucson(TLe)	2015	General	Smart Parking Assist System	Clear Fault Memory	
Tucson(TLe)	2015	General	Smart Parking Assist System	Read Data Stream	
Tucson(TLe)	2015	General	Smart Parking Assist System	Special Function	SPAS Variant Coding
Tucson(TLe)	2015	General	Active Hood System	Version Information	
Tucson(TLe)	2015	General	Active Hood System	Read Fault Code	
Tucson(TLe)	2015	General	Active Hood System	Clear Fault Memory	
Tucson(TLe)	2015	General	Telematics Unit	Version Information	
Tucson(TLe)	2015	General	Telematics Unit	Read Fault Code	
Tucson(TLe)	2015	General	Telematics Unit	Clear Fault Memory	
Tucson(TLe)	2015	General	IMM(Immobilizer)	Read Fault Code	
Tucson(TLe)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TLe)	2015	General	IMM(Immobilizer)	Read Data Stream	
Tucson(TLe)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Tucson(TLe)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TLe)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TLe)	2015	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(TLe)	2015	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(TLe)	2015	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(TLe)	2015	General	EPS(Electronic Power Steering)	Version Information	
Tucson(TLe)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(TLe)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(TLe)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(TLe)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(TLe)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(TLe)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(TLe)	2015	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	Lambda
Tucson(TLe)	2015	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Version Information	
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Actuation Test	
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Auto Detected
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Cylinder Power
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TLI)	2018	General	TCM(Transmission Control Module)	Version Information	
Tucson(TLI)	2018	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(TLI)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TLI)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TLI)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TLI)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(TLI)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TLI)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only)
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TLI)	2018	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(Ecu Replacement)
Tucson(TLI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TLI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TLI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TLI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TLI)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TLI)	2018	General	AC(Air Conditioning)	Version Information	
Tucson(TLI)	2018	General	AC(Air Conditioning)	Read Fault Code	
Tucson(TLI)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TLI)	2018	General	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(TLI)	2018	General	AC(Air Conditioning)	Actuation Test	
Tucson(TLI)	2018	General	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Tucson)
Tucson(TLI)	2018	General	BCM(Body Control Module)	Version Information	
Tucson(TLI)	2018	General	BCM(Body Control Module)	Read Fault Code	
Tucson(TLI)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TLI)	2018	General	BCM(Body Control Module)	Read Data Stream	
Tucson(TLI)	2018	General	BCM(Body Control Module)	Actuation Test	
Tucson(TLI)	2018	General	BCM(Body Control Module)	Special Function	User Option
Tucson(TLI)	2018	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Tucson(TLI)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TLI)	2018	General	Power Tail Gate	Version Information	
Tucson(TLI)	2018	General	Power Tail Gate	Read Fault Code	
Tucson(TLI)	2018	General	Power Tail Gate	Clear Fault Memory	
Tucson(TLI)	2018	General	Power Tail Gate	Read Data Stream	
Tucson(TLI)	2018	General	Power Tail Gate	Special Function	User Option
Tucson(TLI)	2018	General	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Tucson(TLI)	2018	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Tucson(TLI)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Tucson(TLI)	2018	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Tucson(TLI)	2018	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Tucson(TLI)	2018	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Tucson(TLI)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Tucson(TLI)	2018	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Tucson(TLI)	2018	General	EPS(Electronic Power Steering)	Version Information	
Tucson(TLI)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(TLI)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(TLI)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(TLI)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Tucson(TLI)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(TLI)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(TLI)	2018	General	Smart Key Unit	Version Information	
Tucson(TLI)	2018	General	Smart Key Unit	Read Fault Code	
Tucson(TLI)	2018	General	Smart Key Unit	Clear Fault Memory	
Tucson(TLI)	2018	General	Smart Key Unit	Read Data Stream	
Tucson(TLI)	2018	General	Smart Key Unit	Actuation Test	
Tucson(TLI)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TLI)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TLI)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TLI)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(TLI)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TLI)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Tucson(TLI)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(TLI)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TLI)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(TLI)	2018	General	IMM(Immobilizer)	Read Fault Code	
Tucson(TLI)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TLI)	2018	General	IMM(Immobilizer)	Read Data Stream	
Tucson(TLI)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Tucson(TLI)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TLI)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TLI)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(TLI)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(TLI)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm

model	year	area	system	function	subfunction
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Lambda
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	Catalyst/LSU/Cleaning
Tucson(TLI)	2018	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Tucson(TLI)	2018	General	Driveshaft	Version Information	
Tucson(TLI)	2018	General	Driveshaft	Read Fault Code	
Tucson(TLI)	2018	General	Driveshaft	Clear Fault Memory	
Tucson(TLI)	2018	General	Driveshaft	Read Data Stream	
Tucson(TLI)	2018	General	Driveshaft	Actuation Test	
Tucson(TLI)	2018	General	Driveshaft	Special Function	Clutch Learning Read
Tucson(TLI)	2018	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson(TLI)	2018	General	Driveshaft	Special Function	Clutch Learning Write
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Version Information	
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Read FreezeData	
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Actuation Test	
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	Auto Detected
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	Configuration Reset
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	Cylinder Power
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	Balance(Optional)
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TLI)	2017	General	TCM(Transmission Control Module)	Version Information	
Tucson(TLI)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TLI)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TLI)	2017	General	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(TLI)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TLI)	2017	General	TCM(Transmission Control Module)	Actuation Test	
Tucson(TLI)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TLI)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/ESC)Only
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TLI)	2017	General	ABS(Anti-lock Braking System)	Special Function	Assembly Check(ECU Replacement)
Tucson(TLI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TLI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TLI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TLI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TLI)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TLI)	2017	General	AC(Air Conditioning)	Version Information	
Tucson(TLI)	2017	General	AC(Air Conditioning)	Read Fault Code	
Tucson(TLI)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TLI)	2017	General	AC(Air Conditioning)	Read Data Stream	
Tucson(TLI)	2017	General	AC(Air Conditioning)	Actuation Test	
Tucson(TLI)	2017	General	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)

model	year	area	system	function	subfunction
Tucson(TLI)	2017	General	BCM(Body Control Module)	Version Information	
Tucson(TLI)	2017	General	BCM(Body Control Module)	Read Fault Code	
Tucson(TLI)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TLI)	2017	General	BCM(Body Control Module)	Read Data Stream	
Tucson(TLI)	2017	General	BCM(Body Control Module)	Actuation Test	
Tucson(TLI)	2017	General	BCM(Body Control Module)	Special Function	User Option
Tucson(TLI)	2017	General	BCM(Body Control Module)	Special Function	CLU Variant Coding
Tucson(TLI)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TLI)	2017	General	Power Tail Gate	Version Information	
Tucson(TLI)	2017	General	Power Tail Gate	Read Fault Code	
Tucson(TLI)	2017	General	Power Tail Gate	Clear Fault Memory	
Tucson(TLI)	2017	General	Power Tail Gate	Read Data Stream	
Tucson(TLI)	2017	General	Power Tail Gate	Special Function	User Option
Tucson(TLI)	2017	General	Power Tail Gate	Special Function	Power Tailgate Module Configuration
Tucson(TLI)	2017	General	AHLS(Auto Headlamp Leveling System)	Version Information	
Tucson(TLI)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Tucson(TLI)	2017	General	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Tucson(TLI)	2017	General	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Tucson(TLI)	2017	General	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Tucson(TLI)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Tucson(TLI)	2017	General	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Tucson(TLI)	2017	General	EPS(Electronic Power Steering)	Version Information	
Tucson(TLI)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(TLI)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(TLI)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(TLI)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(TLI)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)

model	year	area	system	function	subfunction
Tucson(TLI)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(TLI)	2017	General	Smart Key Unit	Version Information	
Tucson(TLI)	2017	General	Smart Key Unit	Read Fault Code	
Tucson(TLI)	2017	General	Smart Key Unit	Clear Fault Memory	
Tucson(TLI)	2017	General	Smart Key Unit	Read Data Stream	
Tucson(TLI)	2017	General	Smart Key Unit	Actuation Test	
Tucson(TLI)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TLI)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TLI)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TLI)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Tucson(TLI)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TLI)	2017	General	Smart Key Unit	Special Function	SMK Status Information
Tucson(TLI)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Tucson(TLI)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TLI)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Tucson(TLI)	2017	General	IMM(Immobilizer)	Read Fault Code	
Tucson(TLI)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TLI)	2017	General	IMM(Immobilizer)	Read Data Stream	
Tucson(TLI)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Checking
Tucson(TLI)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TLI)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TLI)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Tucson(TLI)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(TLI)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	Lambda Sensor/LEU Cleaning
Tucson(TLI)	2017	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration

model	year	area	system	function	subfunction
Tucson(TLI)	2017	General	Driveshaft	Version Information	
Tucson(TLI)	2017	General	Driveshaft	Read Fault Code	
Tucson(TLI)	2017	General	Driveshaft	Clear Fault Memory	
Tucson(TLI)	2017	General	Driveshaft	Read Data Stream	
Tucson(TLI)	2017	General	Driveshaft	Actuation Test	
Tucson(TLI)	2017	General	Driveshaft	Special Function	Clutch Learning Read
Tucson(TLI)	2017	General	Driveshaft	Special Function	Clutch Learning Reset
Tucson(TLI)	2017	General	Driveshaft	Special Function	Clutch Learning Write
Veloster(FS)	2018	General	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2018	General	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2018	General	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2018	General	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2018	General	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2018	General	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2018	General	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2018	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2018	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2018	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2018	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2018	General	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2018	General	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2018	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2018	General	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2018	General	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2018	General	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2018	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2018	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Veloster(FS)	2018	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2018	General	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Veloster(FS)	2018	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2018	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2018	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2018	General	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2018	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Veloster(FS)	2018	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2018	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2018	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Veloster(FS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2018	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Veloster(FS)	2018	General	AC(Air Conditioning)	Version Information	
Veloster(FS)	2018	General	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2018	General	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2018	General	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2018	General	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2018	General	BCM(Body Control Module)	Version Information	
Veloster(FS)	2018	General	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2018	General	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2018	General	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2018	General	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2018	General	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2018	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Veloster(FS)	2018	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2018	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Veloster(FS)	2018	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2018	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2018	General	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2018	General	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2018	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2018	General	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2018	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2018	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2018	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Veloster(FS)	2018	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Veloster(FS)	2018	General	Smart Key Unit	Version Information	
Veloster(FS)	2018	General	Smart Key Unit	Read Fault Code	
Veloster(FS)	2018	General	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2018	General	Smart Key Unit	Read Data Stream	
Veloster(FS)	2018	General	Smart Key Unit	Actuation Test	
Veloster(FS)	2018	General	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2018	General	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2018	General	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2018	General	Smart Key Unit	Special Function	ESCL Status Information
Veloster(FS)	2018	General	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2018	General	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2018	General	Smart Key Unit	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Veloster(FS)	2018	General	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2018	General	Smart Key Unit	Special Function	ESCL Open Status Check
Veloster(FS)	2018	General	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2018	General	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2018	General	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2018	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veloster(FS)	2018	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2018	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2018	General	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2018	General	CODE(Transmitter Code Saving)	Read Data Stream	
Veloster(FS)	2018	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Veloster(FS)	2018	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veloster(FS)	2017	General	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2017	General	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2017	General	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2017	General	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2017	General	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2017	General	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2017	General	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2017	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2017	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2017	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2017	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2017	General	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2017	General	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2017	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2017	General	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2017	General	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2017	General	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Veloster(FS)	2017	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2017	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Veloster(FS)	2017	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2017	General	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2017	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2017	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2017	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2017	General	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2017	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Veloster(FS)	2017	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2017	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2017	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Veloster(FS)	2017	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2017	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2017	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2017	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Veloster(FS)	2017	General	AC(Air Conditioning)	Version Information	
Veloster(FS)	2017	General	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2017	General	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2017	General	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2017	General	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2017	General	BCM(Body Control Module)	Version Information	
Veloster(FS)	2017	General	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2017	General	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2017	General	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2017	General	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2017	General	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Veloster(FS)	2017	General	BCM(Body Control Module)	Special Function	Service Reminder Setting
Veloster(FS)	2017	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2017	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2017	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2017	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2017	General	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2017	General	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2017	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2017	General	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2017	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2017	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2017	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Veloster(FS)	2017	General	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Veloster(FS)	2017	General	Smart Key Unit	Version Information	
Veloster(FS)	2017	General	Smart Key Unit	Read Fault Code	
Veloster(FS)	2017	General	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2017	General	Smart Key Unit	Read Data Stream	
Veloster(FS)	2017	General	Smart Key Unit	Actuation Test	
Veloster(FS)	2017	General	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2017	General	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2017	General	Smart Key Unit	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Veloster(FS)	2017	General	Smart Key Unit	Special Function	ESCL Status Information
Veloster(FS)	2017	General	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2017	General	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2017	General	Smart Key Unit	Special Function	Serial Communication Line Check
Veloster(FS)	2017	General	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2017	General	Smart Key Unit	Special Function	ESCL Open Status Check
Veloster(FS)	2017	General	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2017	General	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2017	General	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2017	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veloster(FS)	2017	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2017	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2017	General	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2017	General	CODE(Transmitter Code Saving)	Read Data Stream	
Veloster(FS)	2017	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Veloster(FS)	2017	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veloster(FS)	2016	General	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2016	General	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2016	General	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2016	General	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2016	General	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2016	General	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2016	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2016	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2016	General	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2016	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2016	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2016	General	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2016	General	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Veloster(FS)	2016	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2016	General	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2016	General	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2016	General	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2016	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2016	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Veloster(FS)	2016	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2016	General	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2016	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2016	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2016	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2016	General	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2016	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Veloster(FS)	2016	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2016	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2016	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Veloster(FS)	2016	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2016	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2016	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2016	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Veloster(FS)	2016	General	AC(Air Conditioning)	Version Information	
Veloster(FS)	2016	General	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2016	General	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2016	General	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2016	General	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2016	General	BCM(Body Control Module)	Version Information	
Veloster(FS)	2016	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Veloster(FS)	2016	General	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2016	General	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2016	General	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2016	General	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2016	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2016	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2016	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2016	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2016	General	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2016	General	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2016	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2016	General	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2016	General	EPS(Electronic Power Steering)	Read FreezeData	
Veloster(FS)	2016	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2016	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2016	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2016	General	Smart Key Unit	Version Information	
Veloster(FS)	2016	General	Smart Key Unit	Read Fault Code	
Veloster(FS)	2016	General	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2016	General	Smart Key Unit	Read Data Stream	
Veloster(FS)	2016	General	Smart Key Unit	Actuation Test	
Veloster(FS)	2016	General	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2016	General	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Veloster(FS)	2016	General	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2016	General	Smart Key Unit	Special Function	ESCL Status Information
Veloster(FS)	2016	General	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2016	General	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2016	General	Smart Key Unit	Special Function	Serial Communication Line Check
Veloster(FS)	2016	General	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2016	General	Smart Key Unit	Special Function	ESCL Open Status Check
Veloster(FS)	2016	General	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2016	General	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2016	General	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2016	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veloster(FS)	2016	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2016	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2016	General	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2016	General	CODE(Transmitter Code Saving)	Read Data Stream	
Veloster(FS)	2016	General	CODE(Transmitter Code Saving)	Special Function	Code Saving
Veloster(FS)	2016	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veloster(FS)	2015	General	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2015	General	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2015	General	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2015	General	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2015	General	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2015	General	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2015	General	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2015	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2015	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2015	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2015	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2015	General	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Veloster(FS)	2015	General	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2015	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2015	General	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2015	General	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2015	General	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2015	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2015	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Veloster(FS)	2015	General	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2015	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2015	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2015	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2015	General	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2015	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Veloster(FS)	2015	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2015	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2015	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Veloster(FS)	2015	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2015	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2015	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2015	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Veloster(FS)	2015	General	AC(Air Conditioning)	Version Information	
Veloster(FS)	2015	General	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2015	General	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2015	General	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2015	General	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2015	General	BCM(Body Control Module)	Version Information	
Veloster(FS)	2015	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Veloster(FS)	2015	General	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2015	General	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2015	General	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2015	General	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2015	General	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2015	General	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2015	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2015	General	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2015	General	EPS(Electronic Power Steering)	Read FreezeData	
Veloster(FS)	2015	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2015	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2015	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2015	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2015	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2015	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2015	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2015	General	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2015	General	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2015	General	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2015	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veloster(FS)	2015	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2015	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2015	General	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Veloster(FS)	2015	General	Smart Key Unit	Version Information	
Veloster(FS)	2015	General	Smart Key Unit	Read Fault Code	
Veloster(FS)	2015	General	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2015	General	Smart Key Unit	Read Data Stream	
Veloster(FS)	2015	General	Smart Key Unit	Actuation Test	
Veloster(FS)	2015	General	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2015	General	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2015	General	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2015	General	Smart Key Unit	Special Function	ESCL Status Information
Veloster(FS)	2015	General	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2015	General	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2015	General	Smart Key Unit	Special Function	Serial Communication Line Check
Veloster(FS)	2015	General	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2015	General	Smart Key Unit	Special Function	ESCL Open Status Check
Veloster(FS)	2015	General	Transmitter Code Saving	Read Data Stream	
Veloster(FS)	2015	General	Transmitter Code Saving	Special Function	Code Saving
Veloster(FS)	2015	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veloster(FS)	2015	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2014	General	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2014	General	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2014	General	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2014	General	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2014	General	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2014	General	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2014	General	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2014	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2014	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2014	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2014	General	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
Veloster(FS)	2014	General	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2014	General	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2014	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2014	General	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2014	General	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2014	General	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2014	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2014	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Veloster(FS)	2014	General	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2014	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2014	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2014	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2014	General	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2014	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Veloster(FS)	2014	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2014	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2014	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Veloster(FS)	2014	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2014	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2014	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2014	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Veloster(FS)	2014	General	AC(Air Conditioning)	Version Information	
Veloster(FS)	2014	General	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2014	General	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2014	General	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2014	General	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2014	General	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Veloster(FS)	2014	General	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2014	General	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2014	General	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2014	General	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2014	General	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2014	General	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2014	General	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2014	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2014	General	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2014	General	EPS(Electronic Power Steering)	Read FreezeData	
Veloster(FS)	2014	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2014	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2014	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2014	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2014	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2014	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2014	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2014	General	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2014	General	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2014	General	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2014	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veloster(FS)	2014	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2014	General	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Veloster(FS)	2014	General	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2014	General	Smart Key Unit	Version Information	
Veloster(FS)	2014	General	Smart Key Unit	Read Fault Code	
Veloster(FS)	2014	General	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2014	General	Smart Key Unit	Read Data Stream	
Veloster(FS)	2014	General	Smart Key Unit	Actuation Test	
Veloster(FS)	2014	General	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2014	General	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2014	General	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2014	General	Smart Key Unit	Special Function	ESCL Status Information
Veloster(FS)	2014	General	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2014	General	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2014	General	Smart Key Unit	Special Function	Serial Communication Line Check
Veloster(FS)	2014	General	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2014	General	Smart Key Unit	Special Function	ESCL Open Status Check
Veloster(FS)	2014	General	Transmitter Code Saving	Read Data Stream	
Veloster(FS)	2014	General	Transmitter Code Saving	Special Function	Code Saving
Veloster(FS)	2014	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veloster(FS)	2014	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2013	General	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2013	General	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2013	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2013	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2013	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)

model	year	area	system	function	subfunction
Veloster(FS)	2013	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2013	General	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Veloster(FS)	2013	General	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2013	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Veloster(FS)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2013	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2013	General	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Veloster(FS)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2013	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Veloster(FS)	2013	General	AC(Air Conditioning)	Version Information	
Veloster(FS)	2013	General	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2013	General	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2013	General	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Veloster(FS)	2013	General	BCM(Body Control Module)	Version Information	
Veloster(FS)	2013	General	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2013	General	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2013	General	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2013	General	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2013	General	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2013	General	EPS(Electronic Power Steering)	Read FreezeData	
Veloster(FS)	2013	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2013	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2013	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2013	General	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2013	General	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2013	General	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2013	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veloster(FS)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Veloster(FS)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2013	General	Smart Key Unit	Version Information	
Veloster(FS)	2013	General	Smart Key Unit	Read Fault Code	
Veloster(FS)	2013	General	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2013	General	Smart Key Unit	Read Data Stream	
Veloster(FS)	2013	General	Smart Key Unit	Actuation Test	
Veloster(FS)	2013	General	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2013	General	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2013	General	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2013	General	Smart Key Unit	Special Function	ESCL Status Information
Veloster(FS)	2013	General	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2013	General	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2013	General	Smart Key Unit	Special Function	Serial Communication Line Check
Veloster(FS)	2013	General	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2013	General	Smart Key Unit	Special Function	ESCL Open Status Check
Veloster(FS)	2013	General	Transmitter Code Saving	Read Data Stream	
Veloster(FS)	2013	General	Transmitter Code Saving	Special Function	Code Saving
Veloster(FS)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veloster(FS)	2013	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2012	General	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2012	General	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2012	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Veloster(FS)	2012	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2012	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2012	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2012	General	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2012	General	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Veloster(FS)	2012	General	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2012	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Veloster(FS)	2012	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2012	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Veloster(FS)	2012	General	AC(Air Conditioning)	Version Information	
Veloster(FS)	2012	General	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2012	General	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Veloster(FS)	2012	General	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2012	General	BCM(Body Control Module)	Version Information	
Veloster(FS)	2012	General	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2012	General	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2012	General	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2012	General	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2012	General	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2012	General	EPS(Electronic Power Steering)	Read FreezeData	
Veloster(FS)	2012	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2012	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2012	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2012	General	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2012	General	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2012	General	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Veloster(FS)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2012	General	Smart Key Unit	Version Information	
Veloster(FS)	2012	General	Smart Key Unit	Read Fault Code	
Veloster(FS)	2012	General	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2012	General	Smart Key Unit	Read Data Stream	
Veloster(FS)	2012	General	Smart Key Unit	Actuation Test	
Veloster(FS)	2012	General	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2012	General	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2012	General	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2012	General	Smart Key Unit	Special Function	ESCL Status Information
Veloster(FS)	2012	General	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2012	General	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2012	General	Smart Key Unit	Special Function	Serial Communication Line Check
Veloster(FS)	2012	General	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2012	General	Smart Key Unit	Special Function	ESCL Open Status Check
Veloster(FS)	2012	General	Transmitter Code Saving	Read Data Stream	
Veloster(FS)	2012	General	Transmitter Code Saving	Special Function	Code Saving
Veloster(FS)	2012	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2012	General	ABS/ESP	Version Information	
Veloster(FS)	2012	General	ABS/ESP	Read Fault Code	
Veloster(FS)	2012	General	ABS/ESP	Clear Fault Memory	
Veloster(FS)	2012	General	ABS/ESP	Read Data Stream	
Veloster(FS)	2012	General	ABS/ESP	Actuation Test	
Veloster(FS)	2012	General	Telematics	Version Information	
Veloster(FS)	2012	General	Telematics	Read Fault Code	
Veloster(FS)	2012	General	Telematics	Clear Fault Memory	
Veloster(FS)	2012	General	IMM(Immobilizer)	Special Function	Password Record/Change

model	year	area	system	function	subfunction
Veloster(FS)	2012	General	IMM(Immobilizer)	Special Function	Learnt Keys
Veloster(FS)	2012	General	IMM(Immobilizer)	Special Function	Neutralization Mode
Veloster(FS)	2011	General	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2011	General	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2011	General	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veloster(FS)	2011	General	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2011	General	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2011	General	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2011	General	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2011	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Veloster(FS)	2011	General	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2011	General	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Veloster(FS)	2011	General	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2011	General	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU Variant Coding
Veloster(FS)	2011	General	AC(Air Conditioning)	Version Information	
Veloster(FS)	2011	General	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2011	General	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2011	General	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2011	General	BCM(Body Control Module)	Version Information	
Veloster(FS)	2011	General	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2011	General	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2011	General	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2011	General	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2011	General	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2011	General	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2011	General	EPS(Electronic Power Steering)	Read FreezeData	
Veloster(FS)	2011	General	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2011	General	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2011	General	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Veloster(FS)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2011	General	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2011	General	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2011	General	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veloster(FS)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2011	General	Smart Key Unit	Version Information	
Veloster(FS)	2011	General	Smart Key Unit	Read Fault Code	
Veloster(FS)	2011	General	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2011	General	Smart Key Unit	Read Data Stream	
Veloster(FS)	2011	General	Smart Key Unit	Actuation Test	
Veloster(FS)	2011	General	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2011	General	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2011	General	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2011	General	Smart Key Unit	Special Function	ESCL Status Information
Veloster(FS)	2011	General	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2011	General	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2011	General	Smart Key Unit	Special Function	Serial Communication Line Check
Veloster(FS)	2011	General	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2011	General	Smart Key Unit	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Veloster(FS)	2011	General	Transmitter Code Saving	Read Data Stream	
Veloster(FS)	2011	General	Transmitter Code Saving	Special Function	Code Saving
Veloster(FS)	2011	General	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Version Information	
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Actuation Test	
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz/ix55(EN)	2013	General	TCM(Transmission Control Module)	Version Information	
Veracruz/ix55(EN)	2013	General	TCM(Transmission Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2013	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	TCM(Transmission Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2013	General	TCM(Transmission Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2013	General	TCM(Transmission Control Module)	Actuation Test	
Veracruz/ix55(EN)	2013	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz/ix55(EN)	2013	General	TCM(Transmission Control Module)	Special Function	[N] Position The Adaptive
Veracruz/ix55(EN)	2013	General	ABS(Anti-lock Braking System)	Version Information	
Veracruz/ix55(EN)	2013	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veracruz/ix55(EN)	2013	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veracruz/ix55(EN)	2013	General	ABS(Anti-lock Braking System)	Actuation Test	
Veracruz/ix55(EN)	2013	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2013	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz/ix55(EN)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz/ix55(EN)	2013	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz/ix55(EN)	2013	General	AC(Air Conditioning)	Version Information	
Veracruz/ix55(EN)	2013	General	AC(Air Conditioning)	Read Fault Code	
Veracruz/ix55(EN)	2013	General	AC(Air Conditioning)	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	AC(Air Conditioning)	Read Data Stream	
Veracruz/ix55(EN)	2013	General	AC(Air Conditioning)	Actuation Test	
Veracruz/ix55(EN)	2013	General	BCM(Body Control Module)	Version Information	
Veracruz/ix55(EN)	2013	General	BCM(Body Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2013	General	BCM(Body Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	BCM(Body Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2013	General	BCM(Body Control Module)	Actuation Test	
Veracruz/ix55(EN)	2013	General	Power Tailgate	Version Information	
Veracruz/ix55(EN)	2013	General	Power Tailgate	Read Fault Code	
Veracruz/ix55(EN)	2013	General	Power Tailgate	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	Power Tailgate	Read Data Stream	
Veracruz/ix55(EN)	2013	General	EPS(Electronic Power Steering)	Version Information	
Veracruz/ix55(EN)	2013	General	EPS(Electronic Power Steering)	Read Fault Code	
Veracruz/ix55(EN)	2013	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	EPS(Electronic Power Steering)	Read Data Stream	
Veracruz/ix55(EN)	2013	General	4WD Control	Version Information	
Veracruz/ix55(EN)	2013	General	4WD Control	Read Fault Code	
Veracruz/ix55(EN)	2013	General	4WD Control	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	4WD Control	Read Data Stream	
Veracruz/ix55(EN)	2013	General	4WD Control	Actuation Test	
Veracruz/ix55(EN)	2013	General	Auto Headlamp Leveling	Version Information	
Veracruz/ix55(EN)	2013	General	Auto Headlamp Leveling	Read Fault Code	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2013	General	Auto Headlamp Leveling	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	Auto Headlamp Leveling	Read Data Stream	
Veracruz/ix55(EN)	2013	General	Auto Headlamp Leveling	Special Function	Sensor Initialization
Veracruz/ix55(EN)	2013	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Veracruz/ix55(EN)	2013	General	Auto Headlamp Leveling	Special Function	Level Initialization
Veracruz/ix55(EN)	2013	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz/ix55(EN)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veracruz/ix55(EN)	2013	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz/ix55(EN)	2013	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz/ix55(EN)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veracruz/ix55(EN)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veracruz/ix55(EN)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz/ix55(EN)	2013	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veracruz/ix55(EN)	2013	General	IMM(Immobilizer)	Read Data Stream	
Veracruz/ix55(EN)	2013	General	IMM(Immobilizer)	Special Function	Password
Veracruz/ix55(EN)	2013	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Veracruz/ix55(EN)	2013	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz/ix55(EN)	2013	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz/ix55(EN)	2013	General	IMM(Immobilizer)	Special Function	Teaching
Veracruz/ix55(EN)	2013	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz/ix55(EN)	2013	General	Smart Key	Read Data Stream	
Veracruz/ix55(EN)	2013	General	Smart Key	Special Function	Smart Key Code Saving
Veracruz/ix55(EN)	2013	General	Smart Key	Version Information	
Veracruz/ix55(EN)	2013	General	Smart Key	Read Fault Code	
Veracruz/ix55(EN)	2013	General	Smart Key	Clear Fault Memory	
Veracruz/ix55(EN)	2013	General	Smart Key	Actuation Test	
Veracruz/ix55(EN)	2013	General	Smart Key	Special Function	Neutralization Mode
Veracruz/ix55(EN)	2013	General	Smart Key	Special Function	IMM/Immobilizer Key Status
Veracruz/ix55(EN)	2013	General	Smart Key	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2013	General	Smart Key	Special Function	Antenna Status Check
Veracruz/ix55(EN)	2013	General	Transmitter Code Saving	Read Data Stream	
Veracruz/ix55(EN)	2013	General	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Veracruz/ix55(EN)	2013	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Veracruz/ix55(EN)	2013	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Veracruz/ix55(EN)	2013	General	4WD Control	Special Function	AWD Mode Selection
Veracruz/ix55(EN)	2013	General	4WD Control	Special Function	Torque Coupling Control
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Version Information	
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Actuation Test	
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz/ix55(EN)	2012	General	TCM(Transmission Control Module)	Version Information	
Veracruz/ix55(EN)	2012	General	TCM(Transmission Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2012	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	TCM(Transmission Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2012	General	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2012	General	TCM(Transmission Control Module)	Actuation Test	
Veracruz/ix55(EN)	2012	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz/ix55(EN)	2012	General	TCM(Transmission Control Module)	Special Function	[N] Position The Adaptive
Veracruz/ix55(EN)	2012	General	ABS(Anti-lock Braking System)	Version Information	
Veracruz/ix55(EN)	2012	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veracruz/ix55(EN)	2012	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veracruz/ix55(EN)	2012	General	ABS(Anti-lock Braking System)	Actuation Test	
Veracruz/ix55(EN)	2012	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veracruz/ix55(EN)	2012	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz/ix55(EN)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz/ix55(EN)	2012	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz/ix55(EN)	2012	General	AC(Air Conditioning)	Version Information	
Veracruz/ix55(EN)	2012	General	AC(Air Conditioning)	Read Fault Code	
Veracruz/ix55(EN)	2012	General	AC(Air Conditioning)	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	AC(Air Conditioning)	Read Data Stream	
Veracruz/ix55(EN)	2012	General	AC(Air Conditioning)	Actuation Test	
Veracruz/ix55(EN)	2012	General	BCM(Body Control Module)	Version Information	
Veracruz/ix55(EN)	2012	General	BCM(Body Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2012	General	BCM(Body Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	BCM(Body Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2012	General	BCM(Body Control Module)	Actuation Test	
Veracruz/ix55(EN)	2012	General	Power Tailgate	Version Information	
Veracruz/ix55(EN)	2012	General	Power Tailgate	Read Fault Code	
Veracruz/ix55(EN)	2012	General	Power Tailgate	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	Power Tailgate	Read Data Stream	
Veracruz/ix55(EN)	2012	General	EPS(Electronic Power Steering)	Version Information	
Veracruz/ix55(EN)	2012	General	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2012	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	EPS(Electronic Power Steering)	Read Data Stream	
Veracruz/ix55(EN)	2012	General	4WD Control	Version Information	
Veracruz/ix55(EN)	2012	General	4WD Control	Read Fault Code	
Veracruz/ix55(EN)	2012	General	4WD Control	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	4WD Control	Read Data Stream	
Veracruz/ix55(EN)	2012	General	4WD Control	Actuation Test	
Veracruz/ix55(EN)	2012	General	Auto Headlamp Leveling	Version Information	
Veracruz/ix55(EN)	2012	General	Auto Headlamp Leveling	Read Fault Code	
Veracruz/ix55(EN)	2012	General	Auto Headlamp Leveling	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	Auto Headlamp Leveling	Read Data Stream	
Veracruz/ix55(EN)	2012	General	Auto Headlamp Leveling	Special Function	Sensor Initialization
Veracruz/ix55(EN)	2012	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Veracruz/ix55(EN)	2012	General	Auto Headlamp Leveling	Special Function	Level Initialization
Veracruz/ix55(EN)	2012	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz/ix55(EN)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veracruz/ix55(EN)	2012	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz/ix55(EN)	2012	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz/ix55(EN)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veracruz/ix55(EN)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veracruz/ix55(EN)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz/ix55(EN)	2012	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veracruz/ix55(EN)	2012	General	IMM(Immobilizer)	Read Data Stream	
Veracruz/ix55(EN)	2012	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veracruz/ix55(EN)	2012	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz/ix55(EN)	2012	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz/ix55(EN)	2012	General	IMM(Immobilizer)	Special Function	Teaching
Veracruz/ix55(EN)	2012	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2012	General	Smart Key	Read Data Stream	
Veracruz/ix55(EN)	2012	General	Smart Key	Special Function	Smart Key Code Saving
Veracruz/ix55(EN)	2012	General	Smart Key	Version Information	
Veracruz/ix55(EN)	2012	General	Smart Key	Read Fault Code	
Veracruz/ix55(EN)	2012	General	Smart Key	Clear Fault Memory	
Veracruz/ix55(EN)	2012	General	Smart Key	Actuation Test	
Veracruz/ix55(EN)	2012	General	Smart Key	Special Function	Neutralization Mode
Veracruz/ix55(EN)	2012	General	Smart Key	Special Function	IMSE IIVIMIO Key Status
Veracruz/ix55(EN)	2012	General	Smart Key	Special Function	Separation Communication Line Check
Veracruz/ix55(EN)	2012	General	Smart Key	Special Function	Antenna Status Check
Veracruz/ix55(EN)	2012	General	Transmitter Code Saving	Read Data Stream	
Veracruz/ix55(EN)	2012	General	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Veracruz/ix55(EN)	2012	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Veracruz/ix55(EN)	2012	General	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Veracruz/ix55(EN)	2012	General	4WD Control	Special Function	AWD Mode Selection
Veracruz/ix55(EN)	2012	General	4WD Control	Special Function	Torque Coupling Control
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Version Information	
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Actuation Test	
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz/ix55(EN)	2011	General	TCM(Transmission Control Module)	Version Information	
Veracruz/ix55(EN)	2011	General	TCM(Transmission Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2011	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	TCM(Transmission Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2011	General	TCM(Transmission Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2011	General	TCM(Transmission Control Module)	Actuation Test	
Veracruz/ix55(EN)	2011	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz/ix55(EN)	2011	General	TCM(Transmission Control Module)	Special Function	[N] Position The Adaptive
Veracruz/ix55(EN)	2011	General	ABS(Anti-lock Braking System)	Version Information	
Veracruz/ix55(EN)	2011	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veracruz/ix55(EN)	2011	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veracruz/ix55(EN)	2011	General	ABS(Anti-lock Braking System)	Actuation Test	
Veracruz/ix55(EN)	2011	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veracruz/ix55(EN)	2011	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz/ix55(EN)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz/ix55(EN)	2011	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz/ix55(EN)	2011	General	AC(Air Conditioning)	Version Information	
Veracruz/ix55(EN)	2011	General	AC(Air Conditioning)	Read Fault Code	
Veracruz/ix55(EN)	2011	General	AC(Air Conditioning)	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	AC(Air Conditioning)	Read Data Stream	
Veracruz/ix55(EN)	2011	General	AC(Air Conditioning)	Actuation Test	
Veracruz/ix55(EN)	2011	General	BCM(Body Control Module)	Version Information	
Veracruz/ix55(EN)	2011	General	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2011	General	BCM(Body Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	BCM(Body Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2011	General	BCM(Body Control Module)	Actuation Test	
Veracruz/ix55(EN)	2011	General	Power Tailgate	Version Information	
Veracruz/ix55(EN)	2011	General	Power Tailgate	Read Fault Code	
Veracruz/ix55(EN)	2011	General	Power Tailgate	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	Power Tailgate	Read Data Stream	
Veracruz/ix55(EN)	2011	General	EPS(Electronic Power Steering)	Version Information	
Veracruz/ix55(EN)	2011	General	EPS(Electronic Power Steering)	Read Fault Code	
Veracruz/ix55(EN)	2011	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	EPS(Electronic Power Steering)	Read Data Stream	
Veracruz/ix55(EN)	2011	General	4WD Control	Version Information	
Veracruz/ix55(EN)	2011	General	4WD Control	Read Fault Code	
Veracruz/ix55(EN)	2011	General	4WD Control	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	4WD Control	Read Data Stream	
Veracruz/ix55(EN)	2011	General	4WD Control	Actuation Test	
Veracruz/ix55(EN)	2011	General	Auto Headlamp Leveling	Version Information	
Veracruz/ix55(EN)	2011	General	Auto Headlamp Leveling	Read Fault Code	
Veracruz/ix55(EN)	2011	General	Auto Headlamp Leveling	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	Auto Headlamp Leveling	Read Data Stream	
Veracruz/ix55(EN)	2011	General	Auto Headlamp Leveling	Special Function	Sensor Initialization
Veracruz/ix55(EN)	2011	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Veracruz/ix55(EN)	2011	General	Auto Headlamp Leveling	Special Function	Level Initialization
Veracruz/ix55(EN)	2011	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz/ix55(EN)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veracruz/ix55(EN)	2011	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz/ix55(EN)	2011	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz/ix55(EN)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veracruz/ix55(EN)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz/ix55(EN)	2011	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veracruz/ix55(EN)	2011	General	IMM(Immobilizer)	Read Data Stream	
Veracruz/ix55(EN)	2011	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veracruz/ix55(EN)	2011	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz/ix55(EN)	2011	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz/ix55(EN)	2011	General	IMM(Immobilizer)	Special Function	Teaching
Veracruz/ix55(EN)	2011	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz/ix55(EN)	2011	General	Smart Key	Read Data Stream	
Veracruz/ix55(EN)	2011	General	Smart Key	Special Function	Smart Key Code Saving
Veracruz/ix55(EN)	2011	General	Smart Key	Version Information	
Veracruz/ix55(EN)	2011	General	Smart Key	Read Fault Code	
Veracruz/ix55(EN)	2011	General	Smart Key	Clear Fault Memory	
Veracruz/ix55(EN)	2011	General	Smart Key	Actuation Test	
Veracruz/ix55(EN)	2011	General	Smart Key	Special Function	Neutralization Mode
Veracruz/ix55(EN)	2011	General	Smart Key	Special Function	IMM/Immobilizer Key Status
Veracruz/ix55(EN)	2011	General	Smart Key	Special Function	Serial Communication Line Check
Veracruz/ix55(EN)	2011	General	Smart Key	Special Function	Antenna Status Check
Veracruz/ix55(EN)	2011	General	Transmitter Code Saving	Read Data Stream	
Veracruz/ix55(EN)	2011	General	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Veracruz/ix55(EN)	2011	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Version Information	
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Actuation Test	
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz/ix55(EN)	2010	General	TCM(Transmission Control Module)	Version Information	
Veracruz/ix55(EN)	2010	General	TCM(Transmission Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2010	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2010	General	TCM(Transmission Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2010	General	TCM(Transmission Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2010	General	TCM(Transmission Control Module)	Actuation Test	
Veracruz/ix55(EN)	2010	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz/ix55(EN)	2010	General	TCM(Transmission Control Module)	Special Function	[N] Position The Adaptive
Veracruz/ix55(EN)	2010	General	ABS(Anti-lock Braking System)	Version Information	
Veracruz/ix55(EN)	2010	General	ABS(Anti-lock Braking System)	Read Fault Code	
Veracruz/ix55(EN)	2010	General	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veracruz/ix55(EN)	2010	General	ABS(Anti-lock Braking System)	Read Data Stream	
Veracruz/ix55(EN)	2010	General	ABS(Anti-lock Braking System)	Actuation Test	
Veracruz/ix55(EN)	2010	General	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veracruz/ix55(EN)	2010	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz/ix55(EN)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz/ix55(EN)	2010	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz/ix55(EN)	2010	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz/ix55(EN)	2010	General	AC(Air Conditioning)	Version Information	
Veracruz/ix55(EN)	2010	General	AC(Air Conditioning)	Read Fault Code	
Veracruz/ix55(EN)	2010	General	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2010	General	AC(Air Conditioning)	Read Data Stream	
Veracruz/ix55(EN)	2010	General	AC(Air Conditioning)	Actuation Test	
Veracruz/ix55(EN)	2010	General	BCM(Body Control Module)	Version Information	
Veracruz/ix55(EN)	2010	General	BCM(Body Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2010	General	BCM(Body Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2010	General	BCM(Body Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2010	General	BCM(Body Control Module)	Actuation Test	
Veracruz/ix55(EN)	2010	General	Power Tailgate	Version Information	
Veracruz/ix55(EN)	2010	General	Power Tailgate	Read Fault Code	
Veracruz/ix55(EN)	2010	General	Power Tailgate	Clear Fault Memory	
Veracruz/ix55(EN)	2010	General	Power Tailgate	Read Data Stream	
Veracruz/ix55(EN)	2010	General	EPS(Electronic Power Steering)	Version Information	
Veracruz/ix55(EN)	2010	General	EPS(Electronic Power Steering)	Read Fault Code	
Veracruz/ix55(EN)	2010	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veracruz/ix55(EN)	2010	General	EPS(Electronic Power Steering)	Read Data Stream	
Veracruz/ix55(EN)	2010	General	4WD Control	Version Information	
Veracruz/ix55(EN)	2010	General	4WD Control	Read Fault Code	
Veracruz/ix55(EN)	2010	General	4WD Control	Clear Fault Memory	
Veracruz/ix55(EN)	2010	General	4WD Control	Read Data Stream	
Veracruz/ix55(EN)	2010	General	4WD Control	Actuation Test	
Veracruz/ix55(EN)	2010	General	Auto Headlamp Leveling	Version Information	
Veracruz/ix55(EN)	2010	General	Auto Headlamp Leveling	Read Fault Code	
Veracruz/ix55(EN)	2010	General	Auto Headlamp Leveling	Clear Fault Memory	
Veracruz/ix55(EN)	2010	General	Auto Headlamp Leveling	Read Data Stream	
Veracruz/ix55(EN)	2010	General	Auto Headlamp Leveling	Special Function	Sensor Initialization
Veracruz/ix55(EN)	2010	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Veracruz/ix55(EN)	2010	General	Auto Headlamp Leveling	Special Function	Level Initialization
Veracruz/ix55(EN)	2010	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz/ix55(EN)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2010	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz/ix55(EN)	2010	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz/ix55(EN)	2010	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz/ix55(EN)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veracruz/ix55(EN)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veracruz/ix55(EN)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz/ix55(EN)	2010	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veracruz/ix55(EN)	2010	General	IMM(Immobilizer)	Read Data Stream	
Veracruz/ix55(EN)	2010	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veracruz/ix55(EN)	2010	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz/ix55(EN)	2010	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz/ix55(EN)	2010	General	IMM(Immobilizer)	Special Function	Teaching
Veracruz/ix55(EN)	2010	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz/ix55(EN)	2010	General	Smart Key	Read Data Stream	
Veracruz/ix55(EN)	2010	General	Smart Key	Special Function	Smart Key Code Saving
Veracruz/ix55(EN)	2010	General	Smart Key	Version Information	
Veracruz/ix55(EN)	2010	General	Smart Key	Read Fault Code	
Veracruz/ix55(EN)	2010	General	Smart Key	Clear Fault Memory	
Veracruz/ix55(EN)	2010	General	Smart Key	Actuation Test	
Veracruz/ix55(EN)	2010	General	Smart Key	Special Function	Neutralization Mode
Veracruz/ix55(EN)	2010	General	Smart Key	Special Function	IMM/Immobilizer Key Status
Veracruz/ix55(EN)	2010	General	Smart Key	Special Function	Repair Communication Line Check
Veracruz/ix55(EN)	2010	General	Smart Key	Special Function	Antenna Status Check
Veracruz/ix55(EN)	2010	General	Transmitter Code Saving	Read Data Stream	
Veracruz/ix55(EN)	2010	General	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Veracruz/ix55(EN)	2010	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Version Information	
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Actuation Test	
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz/ix55(EN)	2009	General	TCM(Transmission Control Module)	Version Information	
Veracruz/ix55(EN)	2009	General	TCM(Transmission Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2009	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2009	General	TCM(Transmission Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2009	General	TCM(Transmission Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2009	General	TCM(Transmission Control Module)	Actuation Test	
Veracruz/ix55(EN)	2009	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz/ix55(EN)	2009	General	TCM(Transmission Control Module)	Special Function	[N] Position The Adaptive
Veracruz/ix55(EN)	2009	General	ESP(Electronic Stability Program)	Version Information	
Veracruz/ix55(EN)	2009	General	ESP(Electronic Stability Program)	Read Fault Code	
Veracruz/ix55(EN)	2009	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Veracruz/ix55(EN)	2009	General	ESP(Electronic Stability Program)	Read Data Stream	
Veracruz/ix55(EN)	2009	General	ESP(Electronic Stability Program)	Actuation Test	
Veracruz/ix55(EN)	2009	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Veracruz/ix55(EN)	2009	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz/ix55(EN)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz/ix55(EN)	2009	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2009	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz/ix55(EN)	2009	General	AC(Air Conditioning)	Version Information	
Veracruz/ix55(EN)	2009	General	AC(Air Conditioning)	Read Fault Code	
Veracruz/ix55(EN)	2009	General	AC(Air Conditioning)	Clear Fault Memory	
Veracruz/ix55(EN)	2009	General	AC(Air Conditioning)	Read Data Stream	
Veracruz/ix55(EN)	2009	General	AC(Air Conditioning)	Actuation Test	
Veracruz/ix55(EN)	2009	General	BCM(Body Control Module)	Version Information	
Veracruz/ix55(EN)	2009	General	BCM(Body Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2009	General	BCM(Body Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2009	General	BCM(Body Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2009	General	BCM(Body Control Module)	Actuation Test	
Veracruz/ix55(EN)	2009	General	Power Tailgate	Version Information	
Veracruz/ix55(EN)	2009	General	Power Tailgate	Read Fault Code	
Veracruz/ix55(EN)	2009	General	Power Tailgate	Clear Fault Memory	
Veracruz/ix55(EN)	2009	General	Power Tailgate	Read Data Stream	
Veracruz/ix55(EN)	2009	General	EPS(Electronic Power Steering)	Version Information	
Veracruz/ix55(EN)	2009	General	EPS(Electronic Power Steering)	Read Fault Code	
Veracruz/ix55(EN)	2009	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veracruz/ix55(EN)	2009	General	EPS(Electronic Power Steering)	Read Data Stream	
Veracruz/ix55(EN)	2009	General	4WD Control	Version Information	
Veracruz/ix55(EN)	2009	General	4WD Control	Read Fault Code	
Veracruz/ix55(EN)	2009	General	4WD Control	Clear Fault Memory	
Veracruz/ix55(EN)	2009	General	4WD Control	Read Data Stream	
Veracruz/ix55(EN)	2009	General	4WD Control	Actuation Test	
Veracruz/ix55(EN)	2009	General	Auto Headlamp Leveling	Version Information	
Veracruz/ix55(EN)	2009	General	Auto Headlamp Leveling	Read Fault Code	
Veracruz/ix55(EN)	2009	General	Auto Headlamp Leveling	Clear Fault Memory	
Veracruz/ix55(EN)	2009	General	Auto Headlamp Leveling	Read Data Stream	
Veracruz/ix55(EN)	2009	General	Auto Headlamp Leveling	Special Function	Sensor Initialization

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2009	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Veracruz/ix55(EN)	2009	General	Auto Headlamp Leveling	Special Function	Level Initialization
Veracruz/ix55(EN)	2009	General	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz/ix55(EN)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veracruz/ix55(EN)	2009	General	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz/ix55(EN)	2009	General	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz/ix55(EN)	2009	General	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz/ix55(EN)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veracruz/ix55(EN)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veracruz/ix55(EN)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz/ix55(EN)	2009	General	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veracruz/ix55(EN)	2009	General	IMM(Immobilizer)	Read Data Stream	
Veracruz/ix55(EN)	2009	General	IMM(Immobilizer)	Special Function	Password
Veracruz/ix55(EN)	2009	General	IMM(Immobilizer)	Special Function	Teaching/Chipping
Veracruz/ix55(EN)	2009	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz/ix55(EN)	2009	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz/ix55(EN)	2009	General	IMM(Immobilizer)	Special Function	Teaching
Veracruz/ix55(EN)	2009	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz/ix55(EN)	2009	General	Smart Key	Read Data Stream	
Veracruz/ix55(EN)	2009	General	Smart Key	Special Function	Smart Key Code Saving
Veracruz/ix55(EN)	2009	General	Smart Key	Version Information	
Veracruz/ix55(EN)	2009	General	Smart Key	Read Fault Code	
Veracruz/ix55(EN)	2009	General	Smart Key	Clear Fault Memory	
Veracruz/ix55(EN)	2009	General	Smart Key	Actuation Test	
Veracruz/ix55(EN)	2009	General	Smart Key	Special Function	Neutralization Mode
Veracruz/ix55(EN)	2009	General	Smart Key	Special Function	IMM/Immobilizer Key Status
Veracruz/ix55(EN)	2009	General	Smart Key	Special Function	Identification Communication Line Check
Veracruz/ix55(EN)	2009	General	Smart Key	Special Function	Antenna Status Check
Veracruz/ix55(EN)	2009	General	Transmitter Code Saving	Read Data Stream	
Veracruz/ix55(EN)	2009	General	Transmitter Code Saving	Special Function	Register Transmitter

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Veracruz/ix55(EN)	2009	General	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Version Information	
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Actuation Test	
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz/ix55(EN)	2008	General	TCM(Transmission Control Module)	Version Information	
Veracruz/ix55(EN)	2008	General	TCM(Transmission Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2008	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2008	General	TCM(Transmission Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2008	General	TCM(Transmission Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2008	General	TCM(Transmission Control Module)	Actuation Test	
Veracruz/ix55(EN)	2008	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz/ix55(EN)	2008	General	TCM(Transmission Control Module)	Special Function	[N] Position The Adaptive
Veracruz/ix55(EN)	2008	General	ESP(Electronic Stability Program)	Version Information	
Veracruz/ix55(EN)	2008	General	ESP(Electronic Stability Program)	Read Fault Code	
Veracruz/ix55(EN)	2008	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Veracruz/ix55(EN)	2008	General	ESP(Electronic Stability Program)	Read Data Stream	
Veracruz/ix55(EN)	2008	General	ESP(Electronic Stability Program)	Actuation Test	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2008	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Veracruz/ix55(EN)	2008	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz/ix55(EN)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz/ix55(EN)	2008	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz/ix55(EN)	2008	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz/ix55(EN)	2008	General	AC(Air Conditioning)	Version Information	
Veracruz/ix55(EN)	2008	General	AC(Air Conditioning)	Read Fault Code	
Veracruz/ix55(EN)	2008	General	AC(Air Conditioning)	Clear Fault Memory	
Veracruz/ix55(EN)	2008	General	AC(Air Conditioning)	Read Data Stream	
Veracruz/ix55(EN)	2008	General	AC(Air Conditioning)	Actuation Test	
Veracruz/ix55(EN)	2008	General	BCM(Body Control Module)	Version Information	
Veracruz/ix55(EN)	2008	General	BCM(Body Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2008	General	BCM(Body Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2008	General	BCM(Body Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2008	General	BCM(Body Control Module)	Actuation Test	
Veracruz/ix55(EN)	2008	General	Power Tailgate	Version Information	
Veracruz/ix55(EN)	2008	General	Power Tailgate	Read Fault Code	
Veracruz/ix55(EN)	2008	General	Power Tailgate	Clear Fault Memory	
Veracruz/ix55(EN)	2008	General	Power Tailgate	Read Data Stream	
Veracruz/ix55(EN)	2008	General	EPS(Electronic Power Steering)	Version Information	
Veracruz/ix55(EN)	2008	General	EPS(Electronic Power Steering)	Read Fault Code	
Veracruz/ix55(EN)	2008	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veracruz/ix55(EN)	2008	General	EPS(Electronic Power Steering)	Read Data Stream	
Veracruz/ix55(EN)	2008	General	4WD Control	Version Information	
Veracruz/ix55(EN)	2008	General	4WD Control	Read Fault Code	
Veracruz/ix55(EN)	2008	General	4WD Control	Clear Fault Memory	
Veracruz/ix55(EN)	2008	General	4WD Control	Read Data Stream	
Veracruz/ix55(EN)	2008	General	4WD Control	Actuation Test	
Veracruz/ix55(EN)	2008	General	Auto Headlamp Leveling	Version Information	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2008	General	Auto Headlamp Leveling	Read Fault Code	
Veracruz/ix55(EN)	2008	General	Auto Headlamp Leveling	Clear Fault Memory	
Veracruz/ix55(EN)	2008	General	Auto Headlamp Leveling	Read Data Stream	
Veracruz/ix55(EN)	2008	General	Auto Headlamp Leveling	Special Function	Sensor Initialization
Veracruz/ix55(EN)	2008	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Veracruz/ix55(EN)	2008	General	Auto Headlamp Leveling	Special Function	Level Initialization
Veracruz/ix55(EN)	2008	General	IMM(Immobilizer)	Read Data Stream	
Veracruz/ix55(EN)	2008	General	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veracruz/ix55(EN)	2008	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz/ix55(EN)	2008	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz/ix55(EN)	2008	General	IMM(Immobilizer)	Special Function	Teaching
Veracruz/ix55(EN)	2008	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz/ix55(EN)	2008	General	Smart Key	Read Data Stream	
Veracruz/ix55(EN)	2008	General	Smart Key	Special Function	Smart Key Code Saving
Veracruz/ix55(EN)	2008	General	Smart Key	Version Information	
Veracruz/ix55(EN)	2008	General	Smart Key	Read Fault Code	
Veracruz/ix55(EN)	2008	General	Smart Key	Clear Fault Memory	
Veracruz/ix55(EN)	2008	General	Smart Key	Actuation Test	
Veracruz/ix55(EN)	2008	General	Smart Key	Special Function	Neutralization Mode
Veracruz/ix55(EN)	2008	General	Smart Key	Special Function	IMM/Immobilizer Key Status
Veracruz/ix55(EN)	2008	General	Smart Key	Special Function	Serial Communication Line Check
Veracruz/ix55(EN)	2008	General	Smart Key	Special Function	Antenna Status Check
Veracruz/ix55(EN)	2008	General	Transmitter Code Saving	Read Data Stream	
Veracruz/ix55(EN)	2008	General	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Veracruz/ix55(EN)	2008	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Version Information	
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Actuation Test	
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz/ix55(EN)	2007	General	TCM(Transmission Control Module)	Version Information	
Veracruz/ix55(EN)	2007	General	TCM(Transmission Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2007	General	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2007	General	TCM(Transmission Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2007	General	TCM(Transmission Control Module)	Read FreezeData	
Veracruz/ix55(EN)	2007	General	TCM(Transmission Control Module)	Actuation Test	
Veracruz/ix55(EN)	2007	General	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz/ix55(EN)	2007	General	TCM(Transmission Control Module)	Special Function	[N] Position The Adaptive
Veracruz/ix55(EN)	2007	General	ESP(Electronic Stability Program)	Version Information	
Veracruz/ix55(EN)	2007	General	ESP(Electronic Stability Program)	Read Fault Code	
Veracruz/ix55(EN)	2007	General	ESP(Electronic Stability Program)	Clear Fault Memory	
Veracruz/ix55(EN)	2007	General	ESP(Electronic Stability Program)	Read Data Stream	
Veracruz/ix55(EN)	2007	General	ESP(Electronic Stability Program)	Actuation Test	
Veracruz/ix55(EN)	2007	General	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Veracruz/ix55(EN)	2007	General	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz/ix55(EN)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz/ix55(EN)	2007	General	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz/ix55(EN)	2007	General	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz/ix55(EN)	2007	General	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2007	General	AC(Air Conditioning)	Read Fault Code	
Veracruz/ix55(EN)	2007	General	AC(Air Conditioning)	Clear Fault Memory	
Veracruz/ix55(EN)	2007	General	AC(Air Conditioning)	Read Data Stream	
Veracruz/ix55(EN)	2007	General	AC(Air Conditioning)	Actuation Test	
Veracruz/ix55(EN)	2007	General	BCM(Body Control Module)	Version Information	
Veracruz/ix55(EN)	2007	General	BCM(Body Control Module)	Read Fault Code	
Veracruz/ix55(EN)	2007	General	BCM(Body Control Module)	Clear Fault Memory	
Veracruz/ix55(EN)	2007	General	BCM(Body Control Module)	Read Data Stream	
Veracruz/ix55(EN)	2007	General	BCM(Body Control Module)	Actuation Test	
Veracruz/ix55(EN)	2007	General	Power Tailgate	Version Information	
Veracruz/ix55(EN)	2007	General	Power Tailgate	Read Fault Code	
Veracruz/ix55(EN)	2007	General	Power Tailgate	Clear Fault Memory	
Veracruz/ix55(EN)	2007	General	Power Tailgate	Read Data Stream	
Veracruz/ix55(EN)	2007	General	EPS(Electronic Power Steering)	Version Information	
Veracruz/ix55(EN)	2007	General	EPS(Electronic Power Steering)	Read Fault Code	
Veracruz/ix55(EN)	2007	General	EPS(Electronic Power Steering)	Clear Fault Memory	
Veracruz/ix55(EN)	2007	General	EPS(Electronic Power Steering)	Read Data Stream	
Veracruz/ix55(EN)	2007	General	4WD Control	Version Information	
Veracruz/ix55(EN)	2007	General	4WD Control	Read Fault Code	
Veracruz/ix55(EN)	2007	General	4WD Control	Clear Fault Memory	
Veracruz/ix55(EN)	2007	General	4WD Control	Read Data Stream	
Veracruz/ix55(EN)	2007	General	4WD Control	Actuation Test	
Veracruz/ix55(EN)	2007	General	Auto Headlamp Leveling	Version Information	
Veracruz/ix55(EN)	2007	General	Auto Headlamp Leveling	Read Fault Code	
Veracruz/ix55(EN)	2007	General	Auto Headlamp Leveling	Clear Fault Memory	
Veracruz/ix55(EN)	2007	General	Auto Headlamp Leveling	Read Data Stream	
Veracruz/ix55(EN)	2007	General	Auto Headlamp Leveling	Special Function	Sensor Initialization
Veracruz/ix55(EN)	2007	General	Auto Headlamp Leveling	Special Function	Headlamp Leveling
Veracruz/ix55(EN)	2007	General	Auto Headlamp Leveling	Special Function	Level Initialization

model	year	area	system	function	subfunction
Veracruz/ix55(EN)	2007	General	IMM(Immobilizer)	Read Data Stream	
Veracruz/ix55(EN)	2007	General	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Veracruz/ix55(EN)	2007	General	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz/ix55(EN)	2007	General	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz/ix55(EN)	2007	General	IMM(Immobilizer)	Special Function	Teaching
Veracruz/ix55(EN)	2007	General	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz/ix55(EN)	2007	General	Smart Key	Read Data Stream	
Veracruz/ix55(EN)	2007	General	Smart Key	Special Function	Smart Key Code Saving
Veracruz/ix55(EN)	2007	General	Smart Key	Version Information	
Veracruz/ix55(EN)	2007	General	Smart Key	Read Fault Code	
Veracruz/ix55(EN)	2007	General	Smart Key	Clear Fault Memory	
Veracruz/ix55(EN)	2007	General	Smart Key	Actuation Test	
Veracruz/ix55(EN)	2007	General	Smart Key	Special Function	Neutralization Mode
Veracruz/ix55(EN)	2007	General	Smart Key	Special Function	IMM(Immobilizer) Key Status
Veracruz/ix55(EN)	2007	General	Smart Key	Special Function	Defeat Communication Line Check
Veracruz/ix55(EN)	2007	General	Smart Key	Special Function	Antenna Status Check
Veracruz/ix55(EN)	2007	General	Transmitter Code Saving	Read Data Stream	
Veracruz/ix55(EN)	2007	General	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Special Function	Engine Test Function
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Special Function	Injector Specific Data
Veracruz/ix55(EN)	2007	General	ECM(Engine Control Module)	Special Function	Component Change Routine
Accent(HC)	2018	USA	ECM(Engine Control Module)	Version Information	
Accent(HC)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(HC)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(HC)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(HC)	2018	USA	ECM(Engine Control Module)	Actuation Test	
Accent(HC)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Accent(HC)	2018	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(HC)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Accent(HC)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(HC)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(HC)	2018	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(HC)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(HC)	2018	USA	TCM(Transmission Control Module)	Version Information	
Accent(HC)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(HC)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(HC)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(HC)	2018	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(HC)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(HC)	2018	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(A/T Replacement)
Accent(HC)	2018	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Accent(HC)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
Accent(HC)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(HC)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(HC)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(HC)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(HC)	2018	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(HC)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(HC)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Accent(HC)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Base Calibration(CAN-LSP Only)
Accent(HC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(HC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(HC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(HC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(HC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Accent(HC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Accent(HC)	2018	USA	AC(Air Conditioning)	Version Information	
Accent(HC)	2018	USA	AC(Air Conditioning)	Read Fault Code	
Accent(HC)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(HC)	2018	USA	AC(Air Conditioning)	Read Data Stream	
Accent(HC)	2018	USA	AC(Air Conditioning)	Actuation Test	
Accent(HC)	2018	USA	BCM(Body Control Module)	Version Information	
Accent(HC)	2018	USA	BCM(Body Control Module)	Read Fault Code	
Accent(HC)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
Accent(HC)	2018	USA	BCM(Body Control Module)	Read Data Stream	
Accent(HC)	2018	USA	BCM(Body Control Module)	Actuation Test	
Accent(HC)	2018	USA	BCM(Body Control Module)	Special Function	User Option
Accent(HC)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Accent(HC)	2018	USA	Tire Pressure Monitoring	Version Information	
Accent(HC)	2018	USA	Tire Pressure Monitoring	Read Fault Code	
Accent(HC)	2018	USA	Tire Pressure Monitoring	Clear Fault Memory	
Accent(HC)	2018	USA	Tire Pressure Monitoring	Read Data Stream	
Accent(HC)	2018	USA	Tire Pressure Monitoring	Actuation Test	
Accent(HC)	2018	USA	Tire Pressure Monitoring	Special Function	Wheel Sensor ID Writing
Accent(HC)	2018	USA	Tire Pressure Monitoring	Special Function	Write VIN
Accent(HC)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Reading
Accent(HC)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Writing
Accent(HC)	2018	USA	Motor Driven Power Steering	Version Information	
Accent(HC)	2018	USA	Motor Driven Power Steering	Read Fault Code	
Accent(HC)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
Accent(HC)	2018	USA	Motor Driven Power Steering	Read Data Stream	
Accent(HC)	2018	USA	Motor Driven Power Steering	Special Function	Steering Angle Sensor(Sas)Calibration

model	year	area	system	function	subfunction
Accent(HC)	2018	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
Accent(HC)	2018	USA	Smart Key Unit	Version Information	
Accent(HC)	2018	USA	Smart Key Unit	Read Fault Code	
Accent(HC)	2018	USA	Smart Key Unit	Clear Fault Memory	
Accent(HC)	2018	USA	Smart Key Unit	Read Data Stream	
Accent(HC)	2018	USA	Smart Key Unit	Actuation Test	
Accent(HC)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
Accent(HC)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
Accent(HC)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
Accent(HC)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
Accent(HC)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode
Accent(HC)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Accent(HC)	2018	USA	Parking Guide System	Version Information	
Accent(HC)	2018	USA	Parking Guide System	Read Fault Code	
Accent(HC)	2018	USA	Parking Guide System	Clear Fault Memory	
Accent(HC)	2018	USA	Parking Guide System	Read Data Stream	
Accent(HC)	2018	USA	IMM(Immobilizer)	Read Fault Code	
Accent(HC)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
Accent(HC)	2018	USA	IMM(Immobilizer)	Read Data Stream	
Accent(HC)	2018	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(HC)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(HC)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(HC)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(HC)	2018	USA	Transmitter Code Saving	Read Data Stream	
Accent(HC)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(RB)	2017	USA	ECM(Engine Control Module)	Version Information	
Accent(RB)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2017	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(RB)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(RB)	2017	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2017	USA	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2017	USA	TCM(Transmission Control Module)	Read FreezeData	
Accent(RB)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2017	USA	ABS/ESC	Version Information	
Accent(RB)	2017	USA	ABS/ESC	Read Fault Code	
Accent(RB)	2017	USA	ABS/ESC	Clear Fault Memory	
Accent(RB)	2017	USA	ABS/ESC	Read Data Stream	
Accent(RB)	2017	USA	ABS/ESC	Actuation Test	
Accent(RB)	2017	USA	ABS/ESC	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Accent(RB)	2017	USA	ABS/ESC	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2017	USA	ABS/ESC	Special Function	HCU Air Bleeding Mode
Accent(RB)	2017	USA	ABS/ESC	Special Function	Variant Coding
Accent(RB)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(RB)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Accent(RB)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Accent(RB)	2017	USA	AC(Air Conditioning)	Version Information	
Accent(RB)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2017	USA	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2017	USA	BCM(Body Control Module)	Version Information	
Accent(RB)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Accent(RB)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Accent(RB)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2017	USA	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2017	USA	Power Steering	Version Information	
Accent(RB)	2017	USA	Power Steering	Read Fault Code	
Accent(RB)	2017	USA	Power Steering	Clear Fault Memory	
Accent(RB)	2017	USA	Power Steering	Read Data Stream	
Accent(RB)	2017	USA	Power Steering	Actuation Test	
Accent(RB)	2017	USA	Power Steering	Special Function	EPS Type Recognition
Accent(RB)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(RB)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(RB)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(RB)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(RB)	2017	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(RB)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(RB)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(RB)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(RB)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Accent(RB)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Accent(RB)	2017	USA	IMMO(Immobilizer)	Read Fault Code	
Accent(RB)	2017	USA	IMMO(Immobilizer)	Clear Fault Memory	
Accent(RB)	2017	USA	IMMO(Immobilizer)	Read Data Stream	
Accent(RB)	2017	USA	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Accent(RB)	2017	USA	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2017	USA	IMMO(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching
Accent(RB)	2017	USA	CODE(Transmitter Code Saving)	Read Data Stream	
Accent(RB)	2017	USA	CODE(Transmitter Code Saving)	Special Function	Code Saving
Accent(RB)	2016	USA	ECM(Engine Control Module)	Version Information	
Accent(RB)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(RB)	2016	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2016	USA	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Accent(RB)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Accent(RB)	2016	USA	ABS(Anti-lock Braking System)	Version Information	
Accent(RB)	2016	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2016	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2016	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2016	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Accent(RB)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Reset(ESP/ESC Only)
Accent(RB)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2016	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Accent(RB)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Accent(RB)	2016	USA	PODS-F	Version Information	
Accent(RB)	2016	USA	PODS-F	Read Fault Code	
Accent(RB)	2016	USA	PODS-F	Clear Fault Memory	
Accent(RB)	2016	USA	PODS-F	Special Function	PODS Reset
Accent(RB)	2016	USA	AC(Air Conditioning)	Version Information	
Accent(RB)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2016	USA	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2016	USA	BCM(Body Control Module)	Version Information	
Accent(RB)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2016	USA	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2016	USA	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Accent(RB)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2016	USA	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(RB)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(RB)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(RB)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(RB)	2016	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(RB)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(RB)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(RB)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(RB)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(RB)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Accent(RB)	2016	USA	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2016	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Accent(RB)	2016	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2016	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2016	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2016	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(RB)	2016	USA	Transmitter Code Saving	Read Data Stream	
Accent(RB)	2016	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(RB)	2015	USA	ECM(Engine Control Module)	Version Information	
Accent(RB)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2015	USA	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Accent(RB)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(RB)	2015	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2015	USA	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Accent(RB)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2015	USA	ABS(Anti-lock Braking System)	Version Information	
Accent(RB)	2015	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2015	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2015	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2015	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Accent(RB)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2015	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Accent(RB)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(RB)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Accent(RB)	2015	USA	AC(Air Conditioning)	Version Information	
Accent(RB)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2015	USA	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2015	USA	BCM(Body Control Module)	Version Information	
Accent(RB)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2015	USA	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2015	USA	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(RB)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(RB)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(RB)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(RB)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(RB)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(RB)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(RB)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(RB)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(RB)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Accent(RB)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2015	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(RB)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Accent(RB)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2015	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2015	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(RB)	2015	USA	Transmitter Code Saving	Read Data Stream	
Accent(RB)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(RB)	2015	USA	PODS-F	Version Information	
Accent(RB)	2015	USA	PODS-F	Read Fault Code	
Accent(RB)	2015	USA	PODS-F	Clear Fault Memory	
Accent(RB)	2015	USA	PODS-F	Special Function	PODS Reset
Accent(RB)	2014	USA	ECM(Engine Control Module)	Version Information	
Accent(RB)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(RB)	2014	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2014	USA	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Accent(RB)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2014	USA	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Accent(RB)	2014	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2014	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2014	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2014	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC Only)
Accent(RB)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2014	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Accent(RB)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Accent(RB)	2014	USA	AC(Air Conditioning)	Version Information	
Accent(RB)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2014	USA	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2014	USA	BCM(Body Control Module)	Version Information	
Accent(RB)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2014	USA	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2014	USA	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2014	USA	EPS(Electronic Power Steering)	Actuation Test	

model	year	area	system	function	subfunction
Accent(RB)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(RB)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(RB)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(RB)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(RB)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(RB)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(RB)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(RB)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(RB)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(RB)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Accent(RB)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2014	USA	IMM(Immobilizer)	Special Function	Password
Accent(RB)	2014	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Accent(RB)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2014	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(RB)	2014	USA	Transmitter Code Saving	Read Data Stream	
Accent(RB)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(RB)	2014	USA	PODS-F	Version Information	
Accent(RB)	2014	USA	PODS-F	Read Fault Code	
Accent(RB)	2014	USA	PODS-F	Clear Fault Memory	
Accent(RB)	2014	USA	PODS-F	Special Function	PODS Reset
Accent(RB)	2013	USA	ECM(Engine Control Module)	Version Information	
Accent(RB)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Accent(RB)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(RB)	2013	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2013	USA	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Accent(RB)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2013	USA	ABS(Anti-lock Braking System)	Version Information	
Accent(RB)	2013	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2013	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2013	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2013	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Accent(RB)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2013	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Accent(RB)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Accent(RB)	2013	USA	AC(Air Conditioning)	Version Information	
Accent(RB)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2013	USA	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2013	USA	BCM(Body Control Module)	Version Information	
Accent(RB)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Accent(RB)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2013	USA	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2013	USA	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2013	USA	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Accent(RB)	2013	USA	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(RB)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(RB)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(RB)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(RB)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(RB)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(RB)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(RB)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(RB)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(RB)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Accent(RB)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2013	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(RB)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Accent(RB)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2013	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(RB)	2013	USA	Transmitter Code Saving	Read Data Stream	
Accent(RB)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(RB)	2013	USA	PODS-F	Version Information	
Accent(RB)	2013	USA	PODS-F	Read Fault Code	
Accent(RB)	2013	USA	PODS-F	Clear Fault Memory	
Accent(RB)	2013	USA	PODS-F	Special Function	PODS Reset
Accent(RB)	2012	USA	ECM(Engine Control Module)	Version Information	
Accent(RB)	2012	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(RB)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(RB)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(RB)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Accent(RB)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(RB)	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(RB)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(RB)	2012	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Accent(RB)	2012	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Accent(RB)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(RB)	2012	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Accent(RB)	2012	USA	TCM(Transmission Control Module)	Version Information	
Accent(RB)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(RB)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(RB)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(RB)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Accent(RB)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(RB)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(RB)	2012	USA	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Accent(RB)	2012	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(RB)	2012	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(RB)	2012	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(RB)	2012	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(RB)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Accent(RB)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC Only)
Accent(RB)	2012	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(RB)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(RB)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(RB)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(RB)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(RB)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Accent(RB)	2012	USA	AC(Air Conditioning)	Version Information	
Accent(RB)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Accent(RB)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(RB)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Accent(RB)	2012	USA	AC(Air Conditioning)	Actuation Test	
Accent(RB)	2012	USA	BCM(Body Control Module)	Version Information	
Accent(RB)	2012	USA	BCM(Body Control Module)	Read Fault Code	
Accent(RB)	2012	USA	BCM(Body Control Module)	Clear Fault Memory	
Accent(RB)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Accent(RB)	2012	USA	BCM(Body Control Module)	Actuation Test	
Accent(RB)	2012	USA	BCM(Body Control Module)	Special Function	User Option
Accent(RB)	2012	USA	EPS(Electronic Power Steering)	Version Information	
Accent(RB)	2012	USA	EPS(Electronic Power Steering)	Read Fault Code	
Accent(RB)	2012	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(RB)	2012	USA	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(RB)	2012	USA	EPS(Electronic Power Steering)	Actuation Test	
Accent(RB)	2012	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Accent(RB)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(RB)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(RB)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(RB)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(RB)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(RB)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(RB)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(RB)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(RB)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(RB)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Accent(RB)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Accent(RB)	2012	USA	IMM(Immobilizer)	Special Function	Password
Accent(RB)	2012	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Accent(RB)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(RB)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(RB)	2012	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(RB)	2012	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Accent(RB)	2012	USA	Transmitter Code Saving	Read Data Stream	
Accent(RB)	2012	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(RB)	2012	USA	PODS-F	Version Information	
Accent(RB)	2012	USA	PODS-F	Read Fault Code	
Accent(RB)	2012	USA	PODS-F	Clear Fault Memory	
Accent(RB)	2012	USA	PODS-F	Special Function	PODS Reset
Accent(MC)	2011	USA	ECM(Engine Control Module)	Version Information	
Accent(MC)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(MC)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(MC)	2011	USA	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Accent(MC)	2011	USA	ECM(Engine Control Module)	Actuation Test	
Accent(MC)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(MC)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(MC)	2011	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(MC)	2011	USA	TCM(Transmission Control Module)	Version Information	
Accent(MC)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2011	USA	ABS(Anti-lock Braking System)	Version Information	
Accent(MC)	2011	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2011	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2011	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2011	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(MC)	2011	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(MC)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(MC)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2011	USA	AC(Air Conditioning)	Version Information	
Accent(MC)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Accent(MC)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2011	USA	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2011	USA	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2011	USA	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Accent(MC)	2011	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(MC)	2011	USA	EPS(Electronic Power Steering)	Read Data Stream	
Accent(MC)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(MC)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(MC)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(MC)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(MC)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(MC)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(MC)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(MC)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Accent(MC)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(MC)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(MC)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Accent(MC)	2011	USA	IMM(Immobilizer)	Special Function	Password
Accent(MC)	2011	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Accent(MC)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2011	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2011	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(MC)	2010	USA	ECM(Engine Control Module)	Version Information	
Accent(MC)	2010	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2010	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(MC)	2010	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(MC)	2010	USA	ECM(Engine Control Module)	Read FreezeData	
Accent(MC)	2010	USA	ECM(Engine Control Module)	Actuation Test	
Accent(MC)	2010	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(MC)	2010	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(MC)	2010	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2010	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(MC)	2010	USA	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Accent(MC)	2010	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2010	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2010	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2010	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2010	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2010	USA	ABS(Anti-lock Braking System)	Version Information	
Accent(MC)	2010	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2010	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2010	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2010	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(MC)	2010	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(MC)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(MC)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2010	USA	AC(Air Conditioning)	Version Information	
Accent(MC)	2010	USA	AC(Air Conditioning)	Read Fault Code	
Accent(MC)	2010	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2010	USA	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2010	USA	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2010	USA	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2010	USA	EPS(Electronic Power Steering)	Read Fault Code	
Accent(MC)	2010	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(MC)	2010	USA	EPS(Electronic Power Steering)	Read Data Stream	
Accent(MC)	2010	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(MC)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(MC)	2010	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(MC)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Accent(MC)	2010	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(MC)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(MC)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(MC)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Accent(MC)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(MC)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(MC)	2010	USA	IMM(Immobilizer)	Read Data Stream	
Accent(MC)	2010	USA	IMM(Immobilizer)	Special Function	Password
Accent(MC)	2010	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Accent(MC)	2010	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2010	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2010	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2010	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(MC)	2009	USA	ECM(Engine Control Module)	Version Information	
Accent(MC)	2009	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2009	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(MC)	2009	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(MC)	2009	USA	ECM(Engine Control Module)	Read FreezeData	
Accent(MC)	2009	USA	ECM(Engine Control Module)	Actuation Test	
Accent(MC)	2009	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(MC)	2009	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(MC)	2009	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2009	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(MC)	2009	USA	TCM(Transmission Control Module)	Version Information	
Accent(MC)	2009	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2009	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2009	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2009	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2009	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2009	USA	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Accent(MC)	2009	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2009	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2009	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2009	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(MC)	2009	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(MC)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(MC)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2009	USA	AC(Air Conditioning)	Version Information	
Accent(MC)	2009	USA	AC(Air Conditioning)	Read Fault Code	
Accent(MC)	2009	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2009	USA	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2009	USA	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2009	USA	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2009	USA	EPS(Electronic Power Steering)	Read Fault Code	
Accent(MC)	2009	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(MC)	2009	USA	EPS(Electronic Power Steering)	Read Data Stream	
Accent(MC)	2009	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(MC)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(MC)	2009	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(MC)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(MC)	2009	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(MC)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(MC)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(MC)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Accent(MC)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(MC)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Accent(MC)	2009	USA	IMM(Immobilizer)	Read Data Stream	
Accent(MC)	2009	USA	IMM(Immobilizer)	Special Function	Password
Accent(MC)	2009	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Accent(MC)	2009	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2009	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2009	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2009	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(MC)	2008	USA	ECM(Engine Control Module)	Version Information	
Accent(MC)	2008	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2008	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(MC)	2008	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(MC)	2008	USA	ECM(Engine Control Module)	Read FreezeData	
Accent(MC)	2008	USA	ECM(Engine Control Module)	Actuation Test	
Accent(MC)	2008	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(MC)	2008	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(MC)	2008	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2008	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(MC)	2008	USA	TCM(Transmission Control Module)	Version Information	
Accent(MC)	2008	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2008	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2008	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2008	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2008	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2008	USA	ABS(Anti-lock Braking System)	Version Information	
Accent(MC)	2008	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2008	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2008	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2008	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(MC)	2008	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(MC)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Accent(MC)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2008	USA	AC(Air Conditioning)	Version Information	
Accent(MC)	2008	USA	AC(Air Conditioning)	Read Fault Code	
Accent(MC)	2008	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2008	USA	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2008	USA	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2008	USA	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2008	USA	EPS(Electronic Power Steering)	Read Fault Code	
Accent(MC)	2008	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(MC)	2008	USA	EPS(Electronic Power Steering)	Read Data Stream	
Accent(MC)	2008	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(MC)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(MC)	2008	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(MC)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(MC)	2008	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(MC)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(MC)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(MC)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Accent(MC)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(MC)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(MC)	2008	USA	IMM(Immobilizer)	Read Data Stream	
Accent(MC)	2008	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(MC)	2008	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2008	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2008	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2008	USA	Transmitter Code Saving	Special Function	Code Saving

model	year	area	system	function	subfunction
Accent(MC)	2007	USA	ECM(Engine Control Module)	Version Information	
Accent(MC)	2007	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2007	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(MC)	2007	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(MC)	2007	USA	ECM(Engine Control Module)	Read FreezeData	
Accent(MC)	2007	USA	ECM(Engine Control Module)	Actuation Test	
Accent(MC)	2007	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(MC)	2007	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(MC)	2007	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2007	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(MC)	2007	USA	TCM(Transmission Control Module)	Version Information	
Accent(MC)	2007	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2007	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2007	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2007	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2007	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2007	USA	ABS(Anti-lock Braking System)	Version Information	
Accent(MC)	2007	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2007	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2007	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2007	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(MC)	2007	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(MC)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(MC)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2007	USA	AC(Air Conditioning)	Version Information	
Accent(MC)	2007	USA	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Accent(MC)	2007	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2007	USA	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2007	USA	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2007	USA	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2007	USA	EPS(Electronic Power Steering)	Read Fault Code	
Accent(MC)	2007	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Accent(MC)	2007	USA	EPS(Electronic Power Steering)	Read Data Stream	
Accent(MC)	2007	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Accent(MC)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Accent(MC)	2007	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Accent(MC)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Accent(MC)	2007	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Accent(MC)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Accent(MC)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Accent(MC)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Accent(MC)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Accent(MC)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Accent(MC)	2007	USA	IMM(Immobilizer)	Read Data Stream	
Accent(MC)	2007	USA	IMM(Immobilizer)	Special Function	Password
Accent(MC)	2007	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Accent(MC)	2007	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2007	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2007	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2007	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(MC)	2006	USA	ECM(Engine Control Module)	Version Information	
Accent(MC)	2006	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(MC)	2006	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(MC)	2006	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(MC)	2006	USA	ECM(Engine Control Module)	Read FreezeData	
Accent(MC)	2006	USA	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Accent(MC)	2006	USA	ECM(Engine Control Module)	Special Function	Read VIN
Accent(MC)	2006	USA	ECM(Engine Control Module)	Special Function	Write VIN
Accent(MC)	2006	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Accent(MC)	2006	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(MC)	2006	USA	TCM(Transmission Control Module)	Version Information	
Accent(MC)	2006	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(MC)	2006	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(MC)	2006	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(MC)	2006	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(MC)	2006	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Accent(MC)	2006	USA	ABS(Anti-lock Braking System)	Version Information	
Accent(MC)	2006	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(MC)	2006	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(MC)	2006	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(MC)	2006	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(MC)	2006	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(MC)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(MC)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(MC)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(MC)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(MC)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Accent(MC)	2006	USA	AC(Air Conditioning)	Version Information	
Accent(MC)	2006	USA	AC(Air Conditioning)	Read Fault Code	
Accent(MC)	2006	USA	AC(Air Conditioning)	Clear Fault Memory	
Accent(MC)	2006	USA	AC(Air Conditioning)	Read Data Stream	
Accent(MC)	2006	USA	AC(Air Conditioning)	Actuation Test	
Accent(MC)	2006	USA	EPS(Electronic Power Steering)	Version Information	
Accent(MC)	2006	USA	EPS(Electronic Power Steering)	Read Fault Code	
Accent(MC)	2006	USA	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(MC)	2006	USA	EPS(Electronic Power Steering)	Read Data Stream	
Accent(MC)	2006	USA	IMM(Immobilizer)	Read Data Stream	
Accent(MC)	2006	USA	IMM(Immobilizer)	Special Function	Password
Accent(MC)	2006	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Accent(MC)	2006	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(MC)	2006	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(MC)	2006	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(MC)	2006	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(LC)	2005	USA	ECM(Engine Control Module)	Version Information	
Accent(LC)	2005	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2005	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2005	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2005	USA	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2005	USA	ECM(Engine Control Module)	Actuation Test	
Accent(LC)	2005	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2005	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2005	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2005	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2005	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2005	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2005	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2005	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2005	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2005	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(LC)	2005	USA	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2005	USA	IMM(Immobilizer)	Special Function	Password
					Teaching/Chipping

model	year	area	system	function	subfunction
Accent(LC)	2005	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2005	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(LC)	2005	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(LC)	2005	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(LC)	2004	USA	ECM(Engine Control Module)	Version Information	
Accent(LC)	2004	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2004	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2004	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2004	USA	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2004	USA	ECM(Engine Control Module)	Actuation Test	
Accent(LC)	2004	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2004	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2004	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2004	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2004	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2004	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2004	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2004	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2004	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2004	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(LC)	2004	USA	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2004	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(LC)	2004	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2004	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(LC)	2004	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Accent(LC)	2004	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(LC)	2003	USA	ECM(Engine Control Module)	Version Information	
Accent(LC)	2003	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2003	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2003	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2003	USA	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2003	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2003	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2003	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2003	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2003	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2003	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2003	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2003	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2003	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2003	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(LC)	2003	USA	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2003	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Accent(LC)	2003	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2003	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(LC)	2003	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(LC)	2003	USA	Transmitter Code Saving	Special Function	Code Saving
Accent(LC)	2002	USA	ECM(Engine Control Module)	Version Information	
Accent(LC)	2002	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2002	USA	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(LC)	2002	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2002	USA	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2002	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2002	USA	TCM(Transmission Control Module)	Version Information	
Accent(LC)	2002	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2002	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2002	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2002	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2002	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2002	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2002	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2002	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2002	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2002	USA	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2002	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Accent(LC)	2002	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2002	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(LC)	2002	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(LC)	2001	USA	ECM(Engine Control Module)	Version Information	
Accent(LC)	2001	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2001	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2001	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2001	USA	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2001	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2001	USA	TCM(Transmission Control Module)	Version Information	
Accent(LC)	2001	USA	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Accent(LC)	2001	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2001	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2001	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2001	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2001	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(LC)	2001	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2001	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2001	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2001	USA	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2001	USA	IMM(Immobilizer)	Special Function	Password
Accent(LC)	2001	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Accent(LC)	2001	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2001	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(LC)	2001	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(LC)	2000	USA	ECM(Engine Control Module)	Version Information	
Accent(LC)	2000	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(LC)	2000	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(LC)	2000	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(LC)	2000	USA	ECM(Engine Control Module)	Read FreezeData	
Accent(LC)	2000	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Accent(LC)	2000	USA	TCM(Transmission Control Module)	Version Information	
Accent(LC)	2000	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(LC)	2000	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(LC)	2000	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(LC)	2000	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(LC)	2000	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(LC)	2000	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Accent(LC)	2000	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(LC)	2000	USA	ABS(Anti-lock Braking System)	Actuation Test	
Accent(LC)	2000	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Accent(LC)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Accent(LC)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(LC)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(LC)	2000	USA	IMM(Immobilizer)	Read Data Stream	
Accent(LC)	2000	USA	IMM(Immobilizer)	Special Function	Password
Accent(LC)	2000	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Accent(LC)	2000	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Accent(LC)	2000	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Accent(LC)	2000	USA	IMM(Immobilizer)	Special Function	Teaching
Accent(X3)	1999	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(X3)	1999	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(X3)	1999	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(X3)	1999	USA	ECM(Engine Control Module)	Actuation Test	
Accent(X3)	1999	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(X3)	1999	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(X3)	1999	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(X3)	1999	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(X3)	1999	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(X3)	1999	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(X3)	1999	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(X3)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(X3)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(X3)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(X3)	1998	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(X3)	1998	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(X3)	1998	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(X3)	1998	USA	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Accent(X3)	1998	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(X3)	1998	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(X3)	1998	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(X3)	1998	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(X3)	1998	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(X3)	1998	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(X3)	1998	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(X3)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(X3)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(X3)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(X3)	1997	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(X3)	1997	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(X3)	1997	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(X3)	1997	USA	ECM(Engine Control Module)	Actuation Test	
Accent(X3)	1997	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(X3)	1997	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(X3)	1997	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(X3)	1997	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(X3)	1997	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(X3)	1997	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(X3)	1997	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(X3)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(X3)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(X3)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(X3)	1996	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(X3)	1996	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(X3)	1996	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(X3)	1996	USA	ECM(Engine Control Module)	Actuation Test	
Accent(X3)	1996	USA	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Accent(X3)	1996	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(X3)	1996	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(X3)	1996	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(X3)	1996	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(X3)	1996	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(X3)	1996	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(X3)	1996	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(X3)	1996	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(X3)	1996	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Accent(X3)	1995	USA	ECM(Engine Control Module)	Read Fault Code	
Accent(X3)	1995	USA	ECM(Engine Control Module)	Clear Fault Memory	
Accent(X3)	1995	USA	ECM(Engine Control Module)	Read Data Stream	
Accent(X3)	1995	USA	ECM(Engine Control Module)	Actuation Test	
Accent(X3)	1995	USA	TCM(Transmission Control Module)	Read Fault Code	
Accent(X3)	1995	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Accent(X3)	1995	USA	TCM(Transmission Control Module)	Read Data Stream	
Accent(X3)	1995	USA	TCM(Transmission Control Module)	Actuation Test	
Accent(X3)	1995	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Accent(X3)	1995	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Accent(X3)	1995	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Accent(X3)	1995	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Accent(X3)	1995	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Accent(X3)	1995	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(HG)	2017	USA	ECM(Engine Control Module)	Version Information	
Azera(HG)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(HG)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(HG)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
Azera(HG)	2017	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(HG)	2017	USA	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Azera(HG)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(HG)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(HG)	2017	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Azera(HG)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(HG)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Azera(HG)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Azera(HG)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Azera(HG)	2017	USA	TCM(Transmission Control Module)	Version Information	
Azera(HG)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Azera(HG)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Azera(HG)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(HG)	2017	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(HG)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(HG)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Assembly Check
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Special Function	FAD Change mode(before Change)
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Special Function	FAD Change mode(After Change)
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Screen(FSP/FSC) Only Sensor Calibration

model	year	area	system	function	subfunction
Azera(HG)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(HG)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(HG)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Azera(HG)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(HG)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(HG)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Azera(HG)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Azera(HG)	2017	USA	AC(Air Conditioning)	Version Information	
Azera(HG)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Azera(HG)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Azera(HG)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Azera(HG)	2017	USA	AC(Air Conditioning)	Actuation Test	
Azera(HG)	2017	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Azera(HG)	2017	USA	BCM(Body Control Module)	Version Information	
Azera(HG)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Azera(HG)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Azera(HG)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Azera(HG)	2017	USA	BCM(Body Control Module)	Actuation Test	
Azera(HG)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Azera(HG)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Azera(HG)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Azera(HG)	2017	USA	Motor Driven Power Steering	Version Information	
Azera(HG)	2017	USA	Motor Driven Power Steering	Read Fault Code	
Azera(HG)	2017	USA	Motor Driven Power Steering	Clear Fault Memory	
Azera(HG)	2017	USA	Motor Driven Power Steering	Read Data Stream	
Azera(HG)	2017	USA	Motor Driven Power Steering	Read FreezeData	
Azera(HG)	2017	USA	Motor Driven Power Steering	Special Function	ASP Calibration
Azera(HG)	2017	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
Azera(HG)	2017	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering ECU)

model	year	area	system	function	subfunction
Azera(HG)	2017	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering Motor)
Azera(HG)	2017	USA	Motor Driven Power Steering	Special Function	MDPS TEST(Motor Driven Power Steering)
Azera(HG)	2017	USA	Smart Key Unit	Version Information	
Azera(HG)	2017	USA	Smart Key Unit	Read Fault Code	
Azera(HG)	2017	USA	Smart Key Unit	Clear Fault Memory	
Azera(HG)	2017	USA	Smart Key Unit	Read Data Stream	
Azera(HG)	2017	USA	Smart Key Unit	Actuation Test	
Azera(HG)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Azera(HG)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Azera(HG)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Azera(HG)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
Azera(HG)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Azera(HG)	2017	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Azera(HG)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
Azera(HG)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Azera(HG)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Azera(HG)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Azera(HG)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Azera(HG)	2017	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Azera(HG)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Azera(HG)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Azera(HG)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Azera(HG)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Azera(HG)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Azera(HG)	2017	USA	AHLS(Auto Headlamp Leveling System)	Version Information	
Azera(HG)	2017	USA	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Azera(HG)	2017	USA	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Azera(HG)	2017	USA	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Azera(HG)	2017	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Azera(HG)	2017	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Azera(HG)	2017	USA	IMMO(Immobilizer)	Read Fault Code	
Azera(HG)	2017	USA	IMMO(Immobilizer)	Clear Fault Memory	
Azera(HG)	2017	USA	IMMO(Immobilizer)	Read Data Stream	
Azera(HG)	2017	USA	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Azera(HG)	2017	USA	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Azera(HG)	2017	USA	IMMO(Immobilizer)	Special Function	Limp Home Mode
Azera(HG)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching
Azera(HG)	2017	USA	CODE(Transmitter Code Saving)	Read Data Stream	
Azera(HG)	2017	USA	CODE(Transmitter Code Saving)	Special Function	Code Saving
Azera(HG)	2017	USA	BSD(Blind Spot Detection)	Version Information	
Azera(HG)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
Azera(HG)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
Azera(HG)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	
Azera(HG)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
Azera(HG)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Azera(HG)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
Azera(HG)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Variant Code Reading
Azera(HG)	2017	USA	LDWS(Lane Departure Warning System)	Version Information	
Azera(HG)	2017	USA	LDWS(Lane Departure Warning System)	Read Fault Code	
Azera(HG)	2017	USA	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Azera(HG)	2017	USA	LDWS(Lane Departure Warning System)	Read Data Stream	
Azera(HG)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Azera(HG)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Azera(HG)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Azera(HG)	2017	USA	SCC(Smart Cruise Control)	Version Information	
Azera(HG)	2017	USA	SCC(Smart Cruise Control)	Read Fault Code	

model	year	area	system	function	subfunction
Azera(HG)	2017	USA	SCC(Smart Cruise Control)	Clear Fault Memory	
Azera(HG)	2017	USA	SCC(Smart Cruise Control)	Read Data Stream	
Azera(HG)	2017	USA	SCC(Smart Cruise Control)	Special Function	SCC Alignment
Azera(HG)	2017	USA	Amplifier	Version Information	
Azera(HG)	2017	USA	Amplifier	Special Function	AMP Operation Test
Azera(HG)	2017	USA	Multi-View Camera System	Version Information	
Azera(HG)	2017	USA	Multi-View Camera System	Read Fault Code	
Azera(HG)	2017	USA	Multi-View Camera System	Clear Fault Memory	
Azera(HG)	2017	USA	Multi-View Camera System	Read Data Stream	
Azera(HG)	2017	USA	Multi-View Camera System	Actuation Test	
Azera(HG)	2017	USA	Telematics Unit	Version Information	
Azera(HG)	2017	USA	Telematics Unit	Read Fault Code	
Azera(HG)	2017	USA	Telematics Unit	Clear Fault Memory	
Azera(HG)	2016	USA	ECM(Engine Control Module)	Version Information	
Azera(HG)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(HG)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(HG)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Azera(HG)	2016	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(HG)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Azera(HG)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(HG)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(HG)	2016	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Azera(HG)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(HG)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Azera(HG)	2016	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Azera(HG)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Azera(HG)	2016	USA	TCM(Transmission Control Module)	Version Information	
Azera(HG)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Azera(HG)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Azera(HG)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(HG)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(HG)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(HG)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Actuation Test	
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Assembly Check
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Special Function	PAD Change Mode(Before Change)
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Special Function	PAD Change Mode(After Change)
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Screening Angle Sensor Calibration
Azera(HG)	2016	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(HG)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(HG)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Azera(HG)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(HG)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(HG)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Azera(HG)	2016	USA	AC(Air Conditioning)	Version Information	
Azera(HG)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Azera(HG)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Azera(HG)	2016	USA	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Azera(HG)	2016	USA	AC(Air Conditioning)	Actuation Test	
Azera(HG)	2016	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecv Type)
Azera(HG)	2016	USA	BCM(Body Control Module)	Version Information	
Azera(HG)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Azera(HG)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Azera(HG)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Azera(HG)	2016	USA	BCM(Body Control Module)	Actuation Test	
Azera(HG)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Azera(HG)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Azera(HG)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Azera(HG)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Azera(HG)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Azera(HG)	2016	USA	EPS(Electronic Power Steering)	Read FreezeData	
Azera(HG)	2016	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Azera(HG)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Azera(HG)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Azera(HG)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Azera(HG)	2016	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Azera(HG)	2016	USA	AFS(Adaptive Front Lighting System)	Version Information	
Azera(HG)	2016	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Azera(HG)	2016	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Azera(HG)	2016	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Azera(HG)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Azera(HG)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Azera(HG)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Azera(HG)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Azera(HG)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Azera(HG)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Azera(HG)	2016	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Azera(HG)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Azera(HG)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Azera(HG)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Azera(HG)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Azera(HG)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Azera(HG)	2016	USA	IMM(Immobilizer)	Read Fault Code	
Azera(HG)	2016	USA	IMM(Immobilizer)	Clear Fault Memory	
Azera(HG)	2016	USA	IMM(Immobilizer)	Read Data Stream	
Azera(HG)	2016	USA	IMM(Immobilizer)	Special Function	Password
Azera(HG)	2016	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Azera(HG)	2016	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Azera(HG)	2016	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Azera(HG)	2016	USA	IMM(Immobilizer)	Special Function	Teaching
Azera(HG)	2016	USA	Smart Key Unit	Version Information	
Azera(HG)	2016	USA	Smart Key Unit	Read Fault Code	
Azera(HG)	2016	USA	Smart Key Unit	Clear Fault Memory	
Azera(HG)	2016	USA	Smart Key Unit	Read Data Stream	
Azera(HG)	2016	USA	Smart Key Unit	Actuation Test	
Azera(HG)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Azera(HG)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check
Azera(HG)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check
Azera(HG)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Azera(HG)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Azera(HG)	2016	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Azera(HG)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Azera(HG)	2016	USA	Transmitter Code Saving	Read Data Stream	
Azera(HG)	2016	USA	Transmitter Code Saving	Special Function	Code Saving
Azera(HG)	2016	USA	CCS(Cruise Control System)	Version Information	

model	year	area	system	function	subfunction
Azera(HG)	2016	USA	CCS(Cruise Control System)	Read Fault Code	
Azera(HG)	2016	USA	CCS(Cruise Control System)	Clear Fault Memory	
Azera(HG)	2016	USA	CCS(Cruise Control System)	Read Data Stream	
Azera(HG)	2016	USA	CCS(Cruise Control System)	Special Function	SCC Alignment
Azera(HG)	2016	USA	Assist Door Module	Version Information	
Azera(HG)	2016	USA	Assist Door Module	Read Fault Code	
Azera(HG)	2016	USA	Assist Door Module	Clear Fault Memory	
Azera(HG)	2016	USA	Assist Door Module	Read Data Stream	
Azera(HG)	2016	USA	Assist Door Module	Actuation Test	
Azera(HG)	2016	USA	Blind Spot Detection	Version Information	
Azera(HG)	2016	USA	Blind Spot Detection	Read Fault Code	
Azera(HG)	2016	USA	Blind Spot Detection	Clear Fault Memory	
Azera(HG)	2016	USA	Blind Spot Detection	Read Data Stream	
Azera(HG)	2016	USA	Blind Spot Detection	Actuation Test	
Azera(HG)	2016	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Azera(HG)	2016	USA	Blind Spot Detection	Special Function	BSD Variant Coding
Azera(HG)	2016	USA	Blind Spot Detection	Special Function	BSD Variant Code Reading
Azera(HG)	2016	USA	Cluster Module	Version Information	
Azera(HG)	2016	USA	Cluster Module	Read Fault Code	
Azera(HG)	2016	USA	Cluster Module	Clear Fault Memory	
Azera(HG)	2016	USA	Cluster Module	Read Data Stream	
Azera(HG)	2016	USA	Cluster Module	Actuation Test	
Azera(HG)	2016	USA	Cluster Module	Special Function	CLU Variant Coding
Azera(HG)	2016	USA	Driver Door Module	Version Information	
Azera(HG)	2016	USA	Driver Door Module	Read Fault Code	
Azera(HG)	2016	USA	Driver Door Module	Clear Fault Memory	
Azera(HG)	2016	USA	Driver Door Module	Read Data Stream	
Azera(HG)	2016	USA	Driver Door Module	Actuation Test	
Azera(HG)	2016	USA	Lane Departure Warning System	Version Information	

model	year	area	system	function	subfunction
Azera(HG)	2016	USA	Lane Departure Warning System	Read Fault Code	
Azera(HG)	2016	USA	Lane Departure Warning System	Clear Fault Memory	
Azera(HG)	2016	USA	Lane Departure Warning System	Read Data Stream	
Azera(HG)	2016	USA	Lane Departure Warning System	Special Function	SPC Calibration
Azera(HG)	2016	USA	Lane Departure Warning System	Special Function	SPTAC Calibration
Azera(HG)	2016	USA	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Azera(HG)	2016	USA	Multi Function Switch	Version Information	
Azera(HG)	2016	USA	Multi Function Switch	Read Fault Code	
Azera(HG)	2016	USA	Multi Function Switch	Clear Fault Memory	
Azera(HG)	2016	USA	Multi Function Switch	Read Data Stream	
Azera(HG)	2016	USA	Multi-View Camera System	Version Information	
Azera(HG)	2016	USA	Multi-View Camera System	Read Fault Code	
Azera(HG)	2016	USA	Multi-View Camera System	Clear Fault Memory	
Azera(HG)	2016	USA	Multi-View Camera System	Read Data Stream	
Azera(HG)	2016	USA	Multi-View Camera System	Actuation Test	
Azera(HG)	2016	USA	PODS-F	Version Information	
Azera(HG)	2016	USA	PODS-F	Read Fault Code	
Azera(HG)	2016	USA	PODS-F	Clear Fault Memory	
Azera(HG)	2016	USA	PODS-F	Special Function	PODS Reset
Azera(HG)	2016	USA	Steering Column Module	Version Information	
Azera(HG)	2016	USA	Steering Column Module	Read Fault Code	
Azera(HG)	2016	USA	Steering Column Module	Clear Fault Memory	
Azera(HG)	2016	USA	Steering Column Module	Read Data Stream	
Azera(HG)	2016	USA	Steering Column Module	Actuation Test	
Azera(HG)	2016	USA	Steering Column Module	Special Function	User Option
Azera(HG)	2016	USA	Steering Column Module	Special Function	Seat Limit Position Setting
Azera(HG)	2016	USA	Steering Wheel Remote Control	Version Information	
Azera(HG)	2016	USA	Steering Wheel Remote Control	Read Fault Code	
Azera(HG)	2016	USA	Steering Wheel Remote Control	Clear Fault Memory	

model	year	area	system	function	subfunction
Azera(HG)	2016	USA	Steering Wheel Remote Control	Read Data Stream	
Azera(HG)	2016	USA	Telematics Unit	Version Information	
Azera(HG)	2016	USA	Telematics Unit	Read Fault Code	
Azera(HG)	2016	USA	Telematics Unit	Clear Fault Memory	
Azera(HG)	2015	USA	ECM(Engine Control Module)	Version Information	
Azera(HG)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(HG)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(HG)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Azera(HG)	2015	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(HG)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Azera(HG)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(HG)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(HG)	2015	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Azera(HG)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(HG)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Azera(HG)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Azera(HG)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Azera(HG)	2015	USA	TCM(Transmission Control Module)	Version Information	
Azera(HG)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Azera(HG)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Azera(HG)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(HG)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(HG)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(HG)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Assembly Check
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Special Function	FAD Change Mode(Before Change)
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Special Function	FAD Change Mode(After Change)
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Azera(HG)	2015	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(HG)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(HG)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Azera(HG)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(HG)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(HG)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Azera(HG)	2015	USA	AC(Air Conditioning)	Version Information	
Azera(HG)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Azera(HG)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Azera(HG)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Azera(HG)	2015	USA	AC(Air Conditioning)	Actuation Test	
Azera(HG)	2015	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(Low Temp)
Azera(HG)	2015	USA	BCM(Body Control Module)	Version Information	
Azera(HG)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Azera(HG)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Azera(HG)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Azera(HG)	2015	USA	BCM(Body Control Module)	Actuation Test	
Azera(HG)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Azera(HG)	2015	USA	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Azera(HG)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Azera(HG)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Azera(HG)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Azera(HG)	2015	USA	EPS(Electronic Power Steering)	Read FreezeData	
Azera(HG)	2015	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Azera(HG)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Azera(HG)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Azera(HG)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Azera(HG)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Azera(HG)	2015	USA	Auto Headlamp Leveling System	Version Information	
Azera(HG)	2015	USA	Auto Headlamp Leveling System	Read Fault Code	
Azera(HG)	2015	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Azera(HG)	2015	USA	Auto Headlamp Leveling System	Read Data Stream	
Azera(HG)	2015	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Azera(HG)	2015	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Azera(HG)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Azera(HG)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Azera(HG)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Azera(HG)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Azera(HG)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Azera(HG)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Azera(HG)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Azera(HG)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Azera(HG)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Azera(HG)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Azera(HG)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Azera(HG)	2015	USA	IMM(Immobilizer)	Read Fault Code	

model	year	area	system	function	subfunction
Azera(HG)	2015	USA	IMM(Immobilizer)	Clear Fault Memory	
Azera(HG)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Azera(HG)	2015	USA	IMM(Immobilizer)	Special Function	Password
Azera(HG)	2015	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Azera(HG)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Azera(HG)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Azera(HG)	2015	USA	IMM(Immobilizer)	Special Function	Teaching
Azera(HG)	2015	USA	Smart Key Unit	Version Information	
Azera(HG)	2015	USA	Smart Key Unit	Read Fault Code	
Azera(HG)	2015	USA	Smart Key Unit	Clear Fault Memory	
Azera(HG)	2015	USA	Smart Key Unit	Read Data Stream	
Azera(HG)	2015	USA	Smart Key Unit	Actuation Test	
Azera(HG)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Azera(HG)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check
Azera(HG)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check
Azera(HG)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information
Azera(HG)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Azera(HG)	2015	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Azera(HG)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Azera(HG)	2015	USA	Transmitter Code Saving	Read Data Stream	
Azera(HG)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Azera(HG)	2015	USA	CCS(Cruise Control System)	Version Information	
Azera(HG)	2015	USA	CCS(Cruise Control System)	Read Fault Code	
Azera(HG)	2015	USA	CCS(Cruise Control System)	Clear Fault Memory	
Azera(HG)	2015	USA	CCS(Cruise Control System)	Read Data Stream	
Azera(HG)	2015	USA	CCS(Cruise Control System)	Special Function	SCC Alignment
Azera(HG)	2015	USA	Assist Door Module	Version Information	
Azera(HG)	2015	USA	Assist Door Module	Read Fault Code	
Azera(HG)	2015	USA	Assist Door Module	Clear Fault Memory	
Azera(HG)	2015	USA	Assist Door Module	Read Data Stream	

model	year	area	system	function	subfunction
Azera(HG)	2015	USA	Assist Door Module	Actuation Test	
Azera(HG)	2015	USA	Blind Spot Detection	Version Information	
Azera(HG)	2015	USA	Blind Spot Detection	Read Fault Code	
Azera(HG)	2015	USA	Blind Spot Detection	Clear Fault Memory	
Azera(HG)	2015	USA	Blind Spot Detection	Read Data Stream	
Azera(HG)	2015	USA	Blind Spot Detection	Actuation Test	
Azera(HG)	2015	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Azera(HG)	2015	USA	Blind Spot Detection	Special Function	BSD Variant Coding
Azera(HG)	2015	USA	Blind Spot Detection	Special Function	BSD Variant Code Reading
Azera(HG)	2015	USA	Cluster Module	Version Information	
Azera(HG)	2015	USA	Cluster Module	Read Fault Code	
Azera(HG)	2015	USA	Cluster Module	Clear Fault Memory	
Azera(HG)	2015	USA	Cluster Module	Read Data Stream	
Azera(HG)	2015	USA	Cluster Module	Actuation Test	
Azera(HG)	2015	USA	Cluster Module	Special Function	CLU Variant Coding
Azera(HG)	2015	USA	Driver Door Module	Version Information	
Azera(HG)	2015	USA	Driver Door Module	Read Fault Code	
Azera(HG)	2015	USA	Driver Door Module	Clear Fault Memory	
Azera(HG)	2015	USA	Driver Door Module	Read Data Stream	
Azera(HG)	2015	USA	Driver Door Module	Actuation Test	
Azera(HG)	2015	USA	Lane Departure Warning System	Version Information	
Azera(HG)	2015	USA	Lane Departure Warning System	Read Fault Code	
Azera(HG)	2015	USA	Lane Departure Warning System	Clear Fault Memory	
Azera(HG)	2015	USA	Lane Departure Warning System	Read Data Stream	
Azera(HG)	2015	USA	Lane Departure Warning System	Special Function	SPC Calibration
Azera(HG)	2015	USA	Lane Departure Warning System	Special Function	SPTAC Calibration
Azera(HG)	2015	USA	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Azera(HG)	2015	USA	Multi Function Switch	Version Information	
Azera(HG)	2015	USA	Multi Function Switch	Read Fault Code	

model	year	area	system	function	subfunction
Azera(HG)	2015	USA	Multi Function Switch	Clear Fault Memory	
Azera(HG)	2015	USA	Multi Function Switch	Read Data Stream	
Azera(HG)	2015	USA	Multi-View Camera System	Version Information	
Azera(HG)	2015	USA	Multi-View Camera System	Read Fault Code	
Azera(HG)	2015	USA	Multi-View Camera System	Clear Fault Memory	
Azera(HG)	2015	USA	Multi-View Camera System	Read Data Stream	
Azera(HG)	2015	USA	Multi-View Camera System	Actuation Test	
Azera(HG)	2015	USA	PODS-F	Version Information	
Azera(HG)	2015	USA	PODS-F	Read Fault Code	
Azera(HG)	2015	USA	PODS-F	Clear Fault Memory	
Azera(HG)	2015	USA	PODS-F	Special Function	PODS Reset
Azera(HG)	2015	USA	Steering Column Module	Version Information	
Azera(HG)	2015	USA	Steering Column Module	Read Fault Code	
Azera(HG)	2015	USA	Steering Column Module	Clear Fault Memory	
Azera(HG)	2015	USA	Steering Column Module	Read Data Stream	
Azera(HG)	2015	USA	Steering Column Module	Actuation Test	
Azera(HG)	2015	USA	Steering Column Module	Special Function	User Option
Azera(HG)	2015	USA	Steering Column Module	Special Function	Seat Limit Position Setting
Azera(HG)	2015	USA	Steering Wheel Remote Control	Version Information	
Azera(HG)	2015	USA	Steering Wheel Remote Control	Read Fault Code	
Azera(HG)	2015	USA	Steering Wheel Remote Control	Clear Fault Memory	
Azera(HG)	2015	USA	Steering Wheel Remote Control	Read Data Stream	
Azera(HG)	2015	USA	Telematics Unit	Version Information	
Azera(HG)	2015	USA	Telematics Unit	Read Fault Code	
Azera(HG)	2015	USA	Telematics Unit	Clear Fault Memory	
Azera(HG)	2014	USA	ECM(Engine Control Module)	Version Information	
Azera(HG)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(HG)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(HG)	2014	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Azera(HG)	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(HG)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Azera(HG)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(HG)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(HG)	2014	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Azera(HG)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(HG)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Azera(HG)	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Azera(HG)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Azera(HG)	2014	USA	TCM(Transmission Control Module)	Version Information	
Azera(HG)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Azera(HG)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Azera(HG)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(HG)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(HG)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(HG)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Actuation Test	
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Assembly Check
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Special Function	PAF Change mode(Before Change)
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Special Function	PAF Change mode(After Change)
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)

model	year	area	system	function	subfunction
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Steer/FSP Angle Sensor Calibration
Azera(HG)	2014	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(HG)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(HG)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Azera(HG)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(HG)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(HG)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Azera(HG)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Azera(HG)	2014	USA	AC(Air Conditioning)	Version Information	
Azera(HG)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Azera(HG)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Azera(HG)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Azera(HG)	2014	USA	AC(Air Conditioning)	Actuation Test	
Azera(HG)	2014	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Azera(HG)	2014	USA	BCM(Body Control Module)	Version Information	
Azera(HG)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Azera(HG)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Azera(HG)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Azera(HG)	2014	USA	BCM(Body Control Module)	Actuation Test	
Azera(HG)	2014	USA	BCM(Body Control Module)	Special Function	User Option
Azera(HG)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Azera(HG)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Azera(HG)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Azera(HG)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	
Azera(HG)	2014	USA	EPS(Electronic Power Steering)	Read FreezeData	
Azera(HG)	2014	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Azera(HG)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Azera(HG)	2014	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Azera(HG)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Azera(HG)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Azera(HG)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Azera(HG)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Azera(HG)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Azera(HG)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Azera(HG)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Azera(HG)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Azera(HG)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Azera(HG)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Azera(HG)	2014	USA	IMM(Immobilizer)	Read Fault Code	
Azera(HG)	2014	USA	IMM(Immobilizer)	Clear Fault Memory	
Azera(HG)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Azera(HG)	2014	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Azera(HG)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Azera(HG)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Azera(HG)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Azera(HG)	2014	USA	Smart Key Unit	Version Information	
Azera(HG)	2014	USA	Smart Key Unit	Read Fault Code	
Azera(HG)	2014	USA	Smart Key Unit	Clear Fault Memory	
Azera(HG)	2014	USA	Smart Key Unit	Read Data Stream	
Azera(HG)	2014	USA	Smart Key Unit	Actuation Test	
Azera(HG)	2014	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Azera(HG)	2014	USA	Smart Key Unit	Special Function	Antenna Status Check
Azera(HG)	2014	USA	Smart Key Unit	Special Function	Current FOB Key Check
Azera(HG)	2014	USA	Smart Key Unit	Special Function	FOB Key Status Information
Azera(HG)	2014	USA	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Azera(HG)	2014	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Azera(HG)	2014	USA	Smart Key Unit	Special Function	SMK Status Information
Azera(HG)	2014	USA	Transmitter Code Saving	Read Data Stream	
Azera(HG)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Azera(HG)	2014	USA	Assist Door Module	Version Information	
Azera(HG)	2014	USA	Assist Door Module	Read Fault Code	
Azera(HG)	2014	USA	Assist Door Module	Clear Fault Memory	
Azera(HG)	2014	USA	Assist Door Module	Read Data Stream	
Azera(HG)	2014	USA	Assist Door Module	Actuation Test	
Azera(HG)	2014	USA	Cluster Module	Version Information	
Azera(HG)	2014	USA	Cluster Module	Read Fault Code	
Azera(HG)	2014	USA	Cluster Module	Clear Fault Memory	
Azera(HG)	2014	USA	Cluster Module	Special Function	CLU Variant Coding
Azera(HG)	2014	USA	Driver Door Module	Version Information	
Azera(HG)	2014	USA	Driver Door Module	Read Fault Code	
Azera(HG)	2014	USA	Driver Door Module	Clear Fault Memory	
Azera(HG)	2014	USA	Driver Door Module	Read Data Stream	
Azera(HG)	2014	USA	Driver Door Module	Actuation Test	
Azera(HG)	2014	USA	Multi Function Switch	Version Information	
Azera(HG)	2014	USA	Multi Function Switch	Read Fault Code	
Azera(HG)	2014	USA	Multi Function Switch	Clear Fault Memory	
Azera(HG)	2014	USA	Multi Function Switch	Read Data Stream	
Azera(HG)	2014	USA	Power Seat Module	Version Information	
Azera(HG)	2014	USA	Power Seat Module	Read Fault Code	
Azera(HG)	2014	USA	Power Seat Module	Clear Fault Memory	
Azera(HG)	2014	USA	Power Seat Module	Read Data Stream	
Azera(HG)	2014	USA	Power Seat Module	Actuation Test	
Azera(HG)	2014	USA	Power Seat Module	Special Function	User Option
Azera(HG)	2014	USA	Power Seat Module	Special Function	Seat Limit Position Setting

model	year	area	system	function	subfunction
Azera(HG)	2014	USA	Steering Column Module	Version Information	
Azera(HG)	2014	USA	Steering Column Module	Read Fault Code	
Azera(HG)	2014	USA	Steering Column Module	Clear Fault Memory	
Azera(HG)	2014	USA	Steering Column Module	Read Data Stream	
Azera(HG)	2014	USA	Steering Column Module	Actuation Test	
Azera(HG)	2014	USA	Steering Column Module	Special Function	User Option
Azera(HG)	2014	USA	Steering Column Module	Special Function	Seat Limit Position Setting
Azera(HG)	2014	USA	Steering Wheel Remote Control	Version Information	
Azera(HG)	2014	USA	Steering Wheel Remote Control	Read Fault Code	
Azera(HG)	2014	USA	Steering Wheel Remote Control	Clear Fault Memory	
Azera(HG)	2014	USA	Steering Wheel Remote Control	Read Data Stream	
Azera(HG)	2014	USA	Telematics Unit	Version Information	
Azera(HG)	2014	USA	Telematics Unit	Read Fault Code	
Azera(HG)	2014	USA	Telematics Unit	Clear Fault Memory	
Azera(HG)	2013	USA	ECM(Engine Control Module)	Version Information	
Azera(HG)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(HG)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(HG)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Azera(HG)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(HG)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Azera(HG)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(HG)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(HG)	2013	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Azera(HG)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(HG)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Azera(HG)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Azera(HG)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Azera(HG)	2013	USA	TCM(Transmission Control Module)	Version Information	
Azera(HG)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Azera(HG)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Azera(HG)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(HG)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(HG)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(HG)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Actuation Test	
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Assembly Check
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	FAD Change Mode(Before
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	FAD Change Mode(After
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Change)
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Calibration(HAC/DBC Only)
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Configuration
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Steer/Hg Angle Sensor
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Calibration
Azera(HG)	2013	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(HG)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(HG)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Azera(HG)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(HG)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(HG)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Azera(HG)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Azera(HG)	2013	USA	AC(Air Conditioning)	Version Information	
Azera(HG)	2013	USA	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Azera(HG)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Azera(HG)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Azera(HG)	2013	USA	AC(Air Conditioning)	Actuation Test	
Azera(HG)	2013	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Azera(HG)	2013	USA	BCM(Body Control Module)	Version Information	
Azera(HG)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Azera(HG)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Azera(HG)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Azera(HG)	2013	USA	BCM(Body Control Module)	Actuation Test	
Azera(HG)	2013	USA	BCM(Body Control Module)	Special Function	User Option
Azera(HG)	2013	USA	EPS(Electronic Power Steering)	Version Information	
Azera(HG)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	
Azera(HG)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Azera(HG)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Azera(HG)	2013	USA	EPS(Electronic Power Steering)	Read FreezeData	
Azera(HG)	2013	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Azera(HG)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Azera(HG)	2013	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Azera(HG)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Azera(HG)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Azera(HG)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Azera(HG)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Azera(HG)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Azera(HG)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Azera(HG)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Azera(HG)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Azera(HG)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Azera(HG)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Azera(HG)	2013	USA	IMM(Immobilizer)	Read Fault Code	
Azera(HG)	2013	USA	IMM(Immobilizer)	Clear Fault Memory	
Azera(HG)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Azera(HG)	2013	USA	IMM(Immobilizer)	Special Function	Password
Azera(HG)	2013	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Azera(HG)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Azera(HG)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Azera(HG)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Azera(HG)	2013	USA	Smart Key Unit	Version Information	
Azera(HG)	2013	USA	Smart Key Unit	Read Fault Code	
Azera(HG)	2013	USA	Smart Key Unit	Clear Fault Memory	
Azera(HG)	2013	USA	Smart Key Unit	Read Data Stream	
Azera(HG)	2013	USA	Smart Key Unit	Actuation Test	
Azera(HG)	2013	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Azera(HG)	2013	USA	Smart Key Unit	Special Function	Antenna Status Check
Azera(HG)	2013	USA	Smart Key Unit	Special Function	Current FOB Key Check
Azera(HG)	2013	USA	Smart Key Unit	Special Function	FOB Key Status Information
Azera(HG)	2013	USA	Smart Key Unit	Special Function	Neutralization Mode
Azera(HG)	2013	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Azera(HG)	2013	USA	Smart Key Unit	Special Function	SMK Status Information
Azera(HG)	2013	USA	Transmitter Code Saving	Read Data Stream	
Azera(HG)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Azera(HG)	2013	USA	Assist Door Module	Version Information	
Azera(HG)	2013	USA	Assist Door Module	Read Fault Code	
Azera(HG)	2013	USA	Assist Door Module	Clear Fault Memory	
Azera(HG)	2013	USA	Assist Door Module	Read Data Stream	
Azera(HG)	2013	USA	Assist Door Module	Actuation Test	
Azera(HG)	2013	USA	Cluster Module	Version Information	
Azera(HG)	2013	USA	Cluster Module	Read Fault Code	
Azera(HG)	2013	USA	Cluster Module	Clear Fault Memory	

model	year	area	system	function	subfunction
Azera(HG)	2013	USA	Cluster Module	Special Function	CLU Variant Coding
Azera(HG)	2013	USA	Driver Door Module	Version Information	
Azera(HG)	2013	USA	Driver Door Module	Read Fault Code	
Azera(HG)	2013	USA	Driver Door Module	Clear Fault Memory	
Azera(HG)	2013	USA	Driver Door Module	Read Data Stream	
Azera(HG)	2013	USA	Driver Door Module	Actuation Test	
Azera(HG)	2013	USA	Multi Function Switch	Version Information	
Azera(HG)	2013	USA	Multi Function Switch	Read Fault Code	
Azera(HG)	2013	USA	Multi Function Switch	Clear Fault Memory	
Azera(HG)	2013	USA	Multi Function Switch	Read Data Stream	
Azera(HG)	2013	USA	Power Seat Module	Version Information	
Azera(HG)	2013	USA	Power Seat Module	Read Fault Code	
Azera(HG)	2013	USA	Power Seat Module	Clear Fault Memory	
Azera(HG)	2013	USA	Power Seat Module	Read Data Stream	
Azera(HG)	2013	USA	Power Seat Module	Actuation Test	
Azera(HG)	2013	USA	Power Seat Module	Special Function	User Option
Azera(HG)	2013	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Azera(HG)	2013	USA	Steering Column Module	Version Information	
Azera(HG)	2013	USA	Steering Column Module	Read Fault Code	
Azera(HG)	2013	USA	Steering Column Module	Clear Fault Memory	
Azera(HG)	2013	USA	Steering Column Module	Read Data Stream	
Azera(HG)	2013	USA	Steering Column Module	Actuation Test	
Azera(HG)	2013	USA	Steering Column Module	Special Function	User Option
Azera(HG)	2013	USA	Steering Column Module	Special Function	Seat Limit Position Setting
Azera(HG)	2013	USA	Steering Wheel Remote Control	Version Information	
Azera(HG)	2013	USA	Steering Wheel Remote Control	Read Fault Code	
Azera(HG)	2013	USA	Steering Wheel Remote Control	Clear Fault Memory	
Azera(HG)	2013	USA	Steering Wheel Remote Control	Read Data Stream	
Azera(HG)	2013	USA	Telematics Unit	Version Information	

model	year	area	system	function	subfunction
Azera(HG)	2013	USA	Telematics Unit	Read Fault Code	
Azera(HG)	2013	USA	Telematics Unit	Clear Fault Memory	
Azera(HG)	2012	USA	ECM(Engine Control Module)	Version Information	
Azera(HG)	2012	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(HG)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(HG)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Azera(HG)	2012	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(HG)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Azera(HG)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(HG)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(HG)	2012	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Azera(HG)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(HG)	2012	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Azera(HG)	2012	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Azera(HG)	2012	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Azera(HG)	2012	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Azera(HG)	2012	USA	TCM(Transmission Control Module)	Version Information	
Azera(HG)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Azera(HG)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Azera(HG)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(HG)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(HG)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(HG)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Actuation Test	
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Assembly Check

model	year	area	system	function	subfunction
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Special Function	PAD Change Mode(Before Change)
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Special Function	PAD Change Mode(After Change)
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Azera(HG)	2012	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(HG)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(HG)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Azera(HG)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(HG)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(HG)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Azera(HG)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Azera(HG)	2012	USA	AC(Air Conditioning)	Version Information	
Azera(HG)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Azera(HG)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Azera(HG)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Azera(HG)	2012	USA	AC(Air Conditioning)	Actuation Test	
Azera(HG)	2012	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Azera(HG)	2012	USA	BCM(Body Control Module)	Version Information	
Azera(HG)	2012	USA	BCM(Body Control Module)	Read Fault Code	
Azera(HG)	2012	USA	BCM(Body Control Module)	Clear Fault Memory	
Azera(HG)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Azera(HG)	2012	USA	BCM(Body Control Module)	Actuation Test	
Azera(HG)	2012	USA	BCM(Body Control Module)	Special Function	User Option
Azera(HG)	2012	USA	EPS(Electronic Power Steering)	Version Information	
Azera(HG)	2012	USA	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Azera(HG)	2012	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Azera(HG)	2012	USA	EPS(Electronic Power Steering)	Read Data Stream	
Azera(HG)	2012	USA	EPS(Electronic Power Steering)	Read FreezeData	
Azera(HG)	2012	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Azera(HG)	2012	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Azera(HG)	2012	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Azera(HG)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Azera(HG)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Azera(HG)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Azera(HG)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Azera(HG)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Azera(HG)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Azera(HG)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Azera(HG)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Azera(HG)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Azera(HG)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Azera(HG)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Azera(HG)	2012	USA	IMM(Immobilizer)	Read Fault Code	
Azera(HG)	2012	USA	IMM(Immobilizer)	Clear Fault Memory	
Azera(HG)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Azera(HG)	2012	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Azera(HG)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Azera(HG)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Azera(HG)	2012	USA	IMM(Immobilizer)	Special Function	Teaching
Azera(HG)	2012	USA	Smart Key Unit	Version Information	
Azera(HG)	2012	USA	Smart Key Unit	Read Fault Code	
Azera(HG)	2012	USA	Smart Key Unit	Clear Fault Memory	
Azera(HG)	2012	USA	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Azera(HG)	2012	USA	Smart Key Unit	Actuation Test	
Azera(HG)	2012	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Azera(HG)	2012	USA	Smart Key Unit	Special Function	Antenna Status Check
Azera(HG)	2012	USA	Smart Key Unit	Special Function	Current FOB Key Check
Azera(HG)	2012	USA	Smart Key Unit	Special Function	FOB Key Status Information
Azera(HG)	2012	USA	Smart Key Unit	Special Function	Neutralization Mode
Azera(HG)	2012	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Azera(HG)	2012	USA	Smart Key Unit	Special Function	SMK Status Information
Azera(HG)	2012	USA	Transmitter Code Saving	Read Data Stream	
Azera(HG)	2012	USA	Transmitter Code Saving	Special Function	Code Saving
Azera(HG)	2012	USA	Assist Door Module	Version Information	
Azera(HG)	2012	USA	Assist Door Module	Read Fault Code	
Azera(HG)	2012	USA	Assist Door Module	Clear Fault Memory	
Azera(HG)	2012	USA	Assist Door Module	Read Data Stream	
Azera(HG)	2012	USA	Assist Door Module	Actuation Test	
Azera(HG)	2012	USA	Cluster Module	Version Information	
Azera(HG)	2012	USA	Cluster Module	Read Fault Code	
Azera(HG)	2012	USA	Cluster Module	Clear Fault Memory	
Azera(HG)	2012	USA	Cluster Module	Special Function	CLU Variant Coding
Azera(HG)	2012	USA	Driver Door Module	Version Information	
Azera(HG)	2012	USA	Driver Door Module	Read Fault Code	
Azera(HG)	2012	USA	Driver Door Module	Clear Fault Memory	
Azera(HG)	2012	USA	Driver Door Module	Read Data Stream	
Azera(HG)	2012	USA	Driver Door Module	Actuation Test	
Azera(HG)	2012	USA	Multi Function Switch	Version Information	
Azera(HG)	2012	USA	Multi Function Switch	Read Fault Code	
Azera(HG)	2012	USA	Multi Function Switch	Clear Fault Memory	
Azera(HG)	2012	USA	Multi Function Switch	Read Data Stream	
Azera(HG)	2012	USA	Power Seat Module	Version Information	

model	year	area	system	function	subfunction
Azera(HG)	2012	USA	Power Seat Module	Read Fault Code	
Azera(HG)	2012	USA	Power Seat Module	Clear Fault Memory	
Azera(HG)	2012	USA	Power Seat Module	Read Data Stream	
Azera(HG)	2012	USA	Power Seat Module	Actuation Test	
Azera(HG)	2012	USA	Power Seat Module	Special Function	User Option
Azera(HG)	2012	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Azera(HG)	2012	USA	Steering Column Module	Version Information	
Azera(HG)	2012	USA	Steering Column Module	Read Fault Code	
Azera(HG)	2012	USA	Steering Column Module	Clear Fault Memory	
Azera(HG)	2012	USA	Steering Column Module	Read Data Stream	
Azera(HG)	2012	USA	Steering Column Module	Actuation Test	
Azera(HG)	2012	USA	Steering Column Module	Special Function	User Option
Azera(HG)	2012	USA	Steering Column Module	Special Function	Seat Limit Position Setting
Azera(HG)	2012	USA	Steering Wheel Remote Control	Version Information	
Azera(HG)	2012	USA	Steering Wheel Remote Control	Read Fault Code	
Azera(HG)	2012	USA	Steering Wheel Remote Control	Clear Fault Memory	
Azera(HG)	2012	USA	Steering Wheel Remote Control	Read Data Stream	
Azera(HG)	2012	USA	Telematics Unit	Version Information	
Azera(HG)	2012	USA	Telematics Unit	Read Fault Code	
Azera(HG)	2012	USA	Telematics Unit	Clear Fault Memory	
Azera(TG)	2011	USA	ECM(Engine Control Module)	Version Information	
Azera(TG)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(TG)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(TG)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Azera(TG)	2011	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(TG)	2011	USA	ECM(Engine Control Module)	Actuation Test	
Azera(TG)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(TG)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(TG)	2011	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting

model	year	area	system	function	subfunction
Azera(TG)	2011	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Azera(TG)	2011	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Azera(TG)	2011	USA	ECM(Engine Control Module)	Special Function	VCM Learning
Azera(TG)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(TG)	2011	USA	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Azera(TG)	2011	USA	TCM(Transmission Control Module)	Version Information	
Azera(TG)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Azera(TG)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Azera(TG)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(TG)	2011	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(TG)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(TG)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(TG)	2011	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(TG)	2011	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(TG)	2011	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(TG)	2011	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Azera(TG)	2011	USA	ABS(Anti-lock Braking System)	Actuation Test	
Azera(TG)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Azera(TG)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Azera(TG)	2011	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(TG)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Azera(TG)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(TG)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Azera(TG)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(TG)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(TG)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Azera(TG)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Azera(TG)	2011	USA	AC(Air Conditioning)	Version Information	
Azera(TG)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Azera(TG)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Azera(TG)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Azera(TG)	2011	USA	AC(Air Conditioning)	Actuation Test	
Azera(TG)	2011	USA	BCM(Body Control Module)	Version Information	
Azera(TG)	2011	USA	BCM(Body Control Module)	Read Fault Code	
Azera(TG)	2011	USA	BCM(Body Control Module)	Clear Fault Memory	
Azera(TG)	2011	USA	BCM(Body Control Module)	Read Data Stream	
Azera(TG)	2011	USA	BCM(Body Control Module)	Actuation Test	
Azera(TG)	2011	USA	EPS(Electronic Power Steering)	Version Information	
Azera(TG)	2011	USA	EPS(Electronic Power Steering)	Read Fault Code	
Azera(TG)	2011	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Azera(TG)	2011	USA	EPS(Electronic Power Steering)	Read Data Stream	
Azera(TG)	2011	USA	Automatic Headlamp Leveling System	Version Information	
Azera(TG)	2011	USA	Automatic Headlamp Leveling System	Read Fault Code	
Azera(TG)	2011	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Azera(TG)	2011	USA	Automatic Headlamp Leveling System	Read Data Stream	
Azera(TG)	2011	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Azera(TG)	2011	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Azera(TG)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Azera(TG)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Azera(TG)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Azera(TG)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Azera(TG)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Azera(TG)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Azera(TG)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Azera(TG)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Azera(TG)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Azera(TG)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Azera(TG)	2011	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Azera(TG)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Azera(TG)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Azera(TG)	2011	USA	IMM(Immobilizer)	Special Function	Teaching
Azera(TG)	2011	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Azera(TG)	2011	USA	Transmitter Code Saving	Read Data Stream	
Azera(TG)	2011	USA	Transmitter Code Saving	Special Function	Register Transmitter
Azera(TG)	2010	USA	ECM(Engine Control Module)	Version Information	
Azera(TG)	2010	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(TG)	2010	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(TG)	2010	USA	ECM(Engine Control Module)	Read Data Stream	
Azera(TG)	2010	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(TG)	2010	USA	ECM(Engine Control Module)	Actuation Test	
Azera(TG)	2010	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(TG)	2010	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(TG)	2010	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Azera(TG)	2010	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Azera(TG)	2010	USA	ECM(Engine Control Module)	Special Function	VCM Learning
Azera(TG)	2010	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(TG)	2010	USA	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Azera(TG)	2010	USA	TCM(Transmission Control Module)	Version Information	
Azera(TG)	2010	USA	TCM(Transmission Control Module)	Read Fault Code	
Azera(TG)	2010	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Azera(TG)	2010	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(TG)	2010	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(TG)	2010	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(TG)	2010	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(TG)	2010	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(TG)	2010	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(TG)	2010	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(TG)	2010	USA	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Azera(TG)	2010	USA	ABS(Anti-lock Braking System)	Actuation Test	
Azera(TG)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Azera(TG)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Azera(TG)	2010	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(TG)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Azera(TG)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(TG)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Azera(TG)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(TG)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(TG)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Azera(TG)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Azera(TG)	2010	USA	AC(Air Conditioning)	Version Information	
Azera(TG)	2010	USA	AC(Air Conditioning)	Read Fault Code	
Azera(TG)	2010	USA	AC(Air Conditioning)	Clear Fault Memory	
Azera(TG)	2010	USA	AC(Air Conditioning)	Read Data Stream	
Azera(TG)	2010	USA	AC(Air Conditioning)	Actuation Test	
Azera(TG)	2010	USA	BCM(Body Control Module)	Version Information	
Azera(TG)	2010	USA	BCM(Body Control Module)	Read Fault Code	
Azera(TG)	2010	USA	BCM(Body Control Module)	Clear Fault Memory	
Azera(TG)	2010	USA	BCM(Body Control Module)	Read Data Stream	
Azera(TG)	2010	USA	BCM(Body Control Module)	Actuation Test	
Azera(TG)	2010	USA	EPS(Electronic Power Steering)	Version Information	
Azera(TG)	2010	USA	EPS(Electronic Power Steering)	Read Fault Code	
Azera(TG)	2010	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Azera(TG)	2010	USA	EPS(Electronic Power Steering)	Read Data Stream	
Azera(TG)	2010	USA	Automatic Headlamp Leveling System	Version Information	
Azera(TG)	2010	USA	Automatic Headlamp Leveling System	Read Fault Code	
Azera(TG)	2010	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Azera(TG)	2010	USA	Automatic Headlamp Leveling System	Read Data Stream	

model	year	area	system	function	subfunction
Azera(TG)	2010	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Azera(TG)	2010	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Azera(TG)	2010	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Azera(TG)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Azera(TG)	2010	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Azera(TG)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Azera(TG)	2010	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Azera(TG)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Azera(TG)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Azera(TG)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Azera(TG)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Azera(TG)	2010	USA	IMM(Immobilizer)	Read Data Stream	
Azera(TG)	2010	USA	IMM(Immobilizer)	Special Function	Password
Azera(TG)	2010	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Azera(TG)	2010	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Azera(TG)	2010	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Azera(TG)	2010	USA	IMM(Immobilizer)	Special Function	Teaching
Azera(TG)	2010	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Azera(TG)	2010	USA	Transmitter Code Saving	Read Data Stream	
Azera(TG)	2010	USA	Transmitter Code Saving	Special Function	Register Transmitter
Azera(TG)	2009	USA	ECM(Engine Control Module)	Version Information	
Azera(TG)	2009	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(TG)	2009	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(TG)	2009	USA	ECM(Engine Control Module)	Read Data Stream	
Azera(TG)	2009	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(TG)	2009	USA	ECM(Engine Control Module)	Actuation Test	
Azera(TG)	2009	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(TG)	2009	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(TG)	2009	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Azera(TG)	2009	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Azera(TG)	2009	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(TG)	2009	USA	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Azera(TG)	2009	USA	TCM(Transmission Control Module)	Version Information	
Azera(TG)	2009	USA	TCM(Transmission Control Module)	Read Fault Code	
Azera(TG)	2009	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Azera(TG)	2009	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(TG)	2009	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(TG)	2009	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(TG)	2009	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(TG)	2009	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(TG)	2009	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(TG)	2009	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(TG)	2009	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Azera(TG)	2009	USA	ABS(Anti-lock Braking System)	Actuation Test	
Azera(TG)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Azera(TG)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor
Azera(TG)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Calibration
Azera(TG)	2009	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(TG)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Azera(TG)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(TG)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Azera(TG)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(TG)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(TG)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Azera(TG)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Azera(TG)	2009	USA	AC(Air Conditioning)	Version Information	
Azera(TG)	2009	USA	AC(Air Conditioning)	Read Fault Code	
Azera(TG)	2009	USA	AC(Air Conditioning)	Clear Fault Memory	
Azera(TG)	2009	USA	AC(Air Conditioning)	Read Data Stream	
Azera(TG)	2009	USA	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Azera(TG)	2009	USA	BCM(Body Control Module)	Version Information	
Azera(TG)	2009	USA	BCM(Body Control Module)	Read Fault Code	
Azera(TG)	2009	USA	BCM(Body Control Module)	Clear Fault Memory	
Azera(TG)	2009	USA	BCM(Body Control Module)	Read Data Stream	
Azera(TG)	2009	USA	BCM(Body Control Module)	Actuation Test	
Azera(TG)	2009	USA	EPS(Electronic Power Steering)	Version Information	
Azera(TG)	2009	USA	EPS(Electronic Power Steering)	Read Fault Code	
Azera(TG)	2009	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Azera(TG)	2009	USA	EPS(Electronic Power Steering)	Read Data Stream	
Azera(TG)	2009	USA	Automatic Headlamp Leveling System	Version Information	
Azera(TG)	2009	USA	Automatic Headlamp Leveling System	Read Fault Code	
Azera(TG)	2009	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Azera(TG)	2009	USA	Automatic Headlamp Leveling System	Read Data Stream	
Azera(TG)	2009	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Azera(TG)	2009	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Azera(TG)	2009	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Azera(TG)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Azera(TG)	2009	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Azera(TG)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Azera(TG)	2009	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Azera(TG)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Azera(TG)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Azera(TG)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Azera(TG)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Azera(TG)	2009	USA	IMM(Immobilizer)	Read Data Stream	
Azera(TG)	2009	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Azera(TG)	2009	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Azera(TG)	2009	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Azera(TG)	2009	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Azera(TG)	2009	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Azera(TG)	2009	USA	CODE	Read Data Stream	
Azera(TG)	2009	USA	CODE	Special Function	Register Transmitter
Azera(TG)	2008	USA	ECM(Engine Control Module)	Version Information	
Azera(TG)	2008	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(TG)	2008	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(TG)	2008	USA	ECM(Engine Control Module)	Read Data Stream	
Azera(TG)	2008	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(TG)	2008	USA	ECM(Engine Control Module)	Actuation Test	
Azera(TG)	2008	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(TG)	2008	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(TG)	2008	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Azera(TG)	2008	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Azera(TG)	2008	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(TG)	2008	USA	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Azera(TG)	2008	USA	TCM(Transmission Control Module)	Version Information	
Azera(TG)	2008	USA	TCM(Transmission Control Module)	Read Fault Code	
Azera(TG)	2008	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Azera(TG)	2008	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(TG)	2008	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(TG)	2008	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(TG)	2008	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(TG)	2008	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(TG)	2008	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(TG)	2008	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(TG)	2008	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Azera(TG)	2008	USA	ABS(Anti-lock Braking System)	Actuation Test	
Azera(TG)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Steering Angle Sensor Calibration
Azera(TG)	2008	USA	ABS(Anti-lock Braking System)	Special Function	

model	year	area	system	function	subfunction
Azera(TG)	2008	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(TG)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Azera(TG)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(TG)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Azera(TG)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(TG)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(TG)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Azera(TG)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Azera(TG)	2008	USA	AC(Air Conditioning)	Version Information	
Azera(TG)	2008	USA	AC(Air Conditioning)	Read Fault Code	
Azera(TG)	2008	USA	AC(Air Conditioning)	Clear Fault Memory	
Azera(TG)	2008	USA	AC(Air Conditioning)	Read Data Stream	
Azera(TG)	2008	USA	AC(Air Conditioning)	Actuation Test	
Azera(TG)	2008	USA	BCM(Body Control Module)	Version Information	
Azera(TG)	2008	USA	BCM(Body Control Module)	Read Fault Code	
Azera(TG)	2008	USA	BCM(Body Control Module)	Clear Fault Memory	
Azera(TG)	2008	USA	BCM(Body Control Module)	Read Data Stream	
Azera(TG)	2008	USA	BCM(Body Control Module)	Actuation Test	
Azera(TG)	2008	USA	EPS(Electronic Power Steering)	Version Information	
Azera(TG)	2008	USA	EPS(Electronic Power Steering)	Read Fault Code	
Azera(TG)	2008	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Azera(TG)	2008	USA	EPS(Electronic Power Steering)	Read Data Stream	
Azera(TG)	2008	USA	Automatic Headlamp Leveling System	Version Information	
Azera(TG)	2008	USA	Automatic Headlamp Leveling System	Read Fault Code	
Azera(TG)	2008	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Azera(TG)	2008	USA	Automatic Headlamp Leveling System	Read Data Stream	
Azera(TG)	2008	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Azera(TG)	2008	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Azera(TG)	2008	USA	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Azera(TG)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Azera(TG)	2008	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Azera(TG)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Azera(TG)	2008	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Azera(TG)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Azera(TG)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Azera(TG)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Azera(TG)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Azera(TG)	2008	USA	IMM(Immobilizer)	Read Data Stream	
Azera(TG)	2008	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Azera(TG)	2008	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Azera(TG)	2008	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Azera(TG)	2008	USA	IMM(Immobilizer)	Special Function	Teaching
Azera(TG)	2008	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Azera(TG)	2008	USA	Transmitter Code Saving	Read Data Stream	
Azera(TG)	2008	USA	Transmitter Code Saving	Special Function	Register Transmitter
Azera(TG)	2007	USA	ECM(Engine Control Module)	Version Information	
Azera(TG)	2007	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(TG)	2007	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(TG)	2007	USA	ECM(Engine Control Module)	Read Data Stream	
Azera(TG)	2007	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(TG)	2007	USA	ECM(Engine Control Module)	Actuation Test	
Azera(TG)	2007	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(TG)	2007	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(TG)	2007	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Azera(TG)	2007	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Azera(TG)	2007	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(TG)	2007	USA	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Azera(TG)	2007	USA	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Azera(TG)	2007	USA	TCM(Transmission Control Module)	Read Fault Code	
Azera(TG)	2007	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Azera(TG)	2007	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(TG)	2007	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(TG)	2007	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(TG)	2007	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(TG)	2007	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(TG)	2007	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(TG)	2007	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(TG)	2007	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Azera(TG)	2007	USA	ABS(Anti-lock Braking System)	Actuation Test	
Azera(TG)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Azera(TG)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Azera(TG)	2007	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(TG)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Azera(TG)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(TG)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Azera(TG)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(TG)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(TG)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Azera(TG)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Azera(TG)	2007	USA	AC(Air Conditioning)	Version Information	
Azera(TG)	2007	USA	AC(Air Conditioning)	Read Fault Code	
Azera(TG)	2007	USA	AC(Air Conditioning)	Clear Fault Memory	
Azera(TG)	2007	USA	AC(Air Conditioning)	Read Data Stream	
Azera(TG)	2007	USA	AC(Air Conditioning)	Actuation Test	
Azera(TG)	2007	USA	BCM(Body Control Module)	Version Information	
Azera(TG)	2007	USA	BCM(Body Control Module)	Read Fault Code	
Azera(TG)	2007	USA	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Azera(TG)	2007	USA	BCM(Body Control Module)	Read Data Stream	
Azera(TG)	2007	USA	BCM(Body Control Module)	Actuation Test	
Azera(TG)	2007	USA	EPS(Electronic Power Steering)	Version Information	
Azera(TG)	2007	USA	EPS(Electronic Power Steering)	Read Fault Code	
Azera(TG)	2007	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Azera(TG)	2007	USA	EPS(Electronic Power Steering)	Read Data Stream	
Azera(TG)	2007	USA	Automatic Headlamp Leveling System	Version Information	
Azera(TG)	2007	USA	Automatic Headlamp Leveling System	Read Fault Code	
Azera(TG)	2007	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Azera(TG)	2007	USA	Automatic Headlamp Leveling System	Read Data Stream	
Azera(TG)	2007	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Azera(TG)	2007	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Azera(TG)	2007	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Azera(TG)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Azera(TG)	2007	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Azera(TG)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Azera(TG)	2007	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Azera(TG)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Azera(TG)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Azera(TG)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Azera(TG)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Azera(TG)	2007	USA	IMM(Immobilizer)	Read Data Stream	
Azera(TG)	2007	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Azera(TG)	2007	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Azera(TG)	2007	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Azera(TG)	2007	USA	IMM(Immobilizer)	Special Function	Teaching
Azera(TG)	2007	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Azera(TG)	2007	USA	Transmitter Code Saving	Read Data Stream	
Azera(TG)	2007	USA	Transmitter Code Saving	Special Function	Register Transmitter

model	year	area	system	function	subfunction
Azera(TG)	2006	USA	ECM(Engine Control Module)	Version Information	
Azera(TG)	2006	USA	ECM(Engine Control Module)	Read Fault Code	
Azera(TG)	2006	USA	ECM(Engine Control Module)	Clear Fault Memory	
Azera(TG)	2006	USA	ECM(Engine Control Module)	Read Data Stream	
Azera(TG)	2006	USA	ECM(Engine Control Module)	Read FreezeData	
Azera(TG)	2006	USA	ECM(Engine Control Module)	Actuation Test	
Azera(TG)	2006	USA	ECM(Engine Control Module)	Special Function	Read VIN
Azera(TG)	2006	USA	ECM(Engine Control Module)	Special Function	Write VIN
Azera(TG)	2006	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Azera(TG)	2006	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Azera(TG)	2006	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Azera(TG)	2006	USA	TCM(Transmission Control Module)	Version Information	
Azera(TG)	2006	USA	TCM(Transmission Control Module)	Read Fault Code	
Azera(TG)	2006	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Azera(TG)	2006	USA	TCM(Transmission Control Module)	Read Data Stream	
Azera(TG)	2006	USA	TCM(Transmission Control Module)	Read FreezeData	
Azera(TG)	2006	USA	TCM(Transmission Control Module)	Actuation Test	
Azera(TG)	2006	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Azera(TG)	2006	USA	ABS(Anti-lock Braking System)	Version Information	
Azera(TG)	2006	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Azera(TG)	2006	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Azera(TG)	2006	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Azera(TG)	2006	USA	ABS(Anti-lock Braking System)	Actuation Test	
Azera(TG)	2006	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Steering Angle Sensor Calibration
Azera(TG)	2006	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Azera(TG)	2006	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Azera(TG)	2006	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Azera(TG)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Azera(TG)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Azera(TG)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Azera(TG)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Azera(TG)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Azera(TG)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Azera(TG)	2006	USA	AC(Air Conditioning)	Version Information	
Azera(TG)	2006	USA	AC(Air Conditioning)	Read Fault Code	
Azera(TG)	2006	USA	AC(Air Conditioning)	Clear Fault Memory	
Azera(TG)	2006	USA	AC(Air Conditioning)	Read Data Stream	
Azera(TG)	2006	USA	AC(Air Conditioning)	Actuation Test	
Azera(TG)	2006	USA	BCM(Body Control Module)	Version Information	
Azera(TG)	2006	USA	BCM(Body Control Module)	Read Fault Code	
Azera(TG)	2006	USA	BCM(Body Control Module)	Clear Fault Memory	
Azera(TG)	2006	USA	BCM(Body Control Module)	Read Data Stream	
Azera(TG)	2006	USA	BCM(Body Control Module)	Actuation Test	
Azera(TG)	2006	USA	EPS(Electronic Power Steering)	Version Information	
Azera(TG)	2006	USA	EPS(Electronic Power Steering)	Read Fault Code	
Azera(TG)	2006	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Azera(TG)	2006	USA	EPS(Electronic Power Steering)	Read Data Stream	
Azera(TG)	2006	USA	Automatic Headlamp Leveling System	Version Information	
Azera(TG)	2006	USA	Automatic Headlamp Leveling System	Read Fault Code	
Azera(TG)	2006	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Azera(TG)	2006	USA	Automatic Headlamp Leveling System	Read Data Stream	
Azera(TG)	2006	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Azera(TG)	2006	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Azera(TG)	2006	USA	IMM(Immobilizer)	Read Data Stream	
Azera(TG)	2006	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Azera(TG)	2006	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Azera(TG)	2006	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Azera(TG)	2006	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Azera(TG)	2006	USA	Transmitter Code Saving	Read Data Stream	
Azera(TG)	2006	USA	Transmitter Code Saving	Special Function	Register Transmitter
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Version Information	
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(AD)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(AD)	2018	USA	Dual Clutch Transmission	Version Information	
Elantra(AD)	2018	USA	Dual Clutch Transmission	Read Fault Code	
Elantra(AD)	2018	USA	Dual Clutch Transmission	Clear Fault Memory	
Elantra(AD)	2018	USA	Dual Clutch Transmission	Read Data Stream	
Elantra(AD)	2018	USA	Dual Clutch Transmission	Actuation Test	
Elantra(AD)	2018	USA	Dual Clutch Transmission	Special Function	DCT Learning Function
Elantra(AD)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra(AD)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(AD)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(AD)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(AD)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(AD)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Elantra(AD)	2018	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Elantra(AD)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(AD)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(AD)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(AD)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(AD)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(AD)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(AD)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Elantra(AD)	2018	USA	AC(Air Conditioning)	Version Information	
Elantra(AD)	2018	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(AD)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(AD)	2018	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(AD)	2018	USA	AC(Air Conditioning)	Actuation Test	
Elantra(AD)	2018	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Elantra(AD)	2018	USA	BCM(Body Control Module)	Version Information	
Elantra(AD)	2018	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(AD)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(AD)	2018	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(AD)	2018	USA	BCM(Body Control Module)	Actuation Test	
Elantra(AD)	2018	USA	BCM(Body Control Module)	Special Function	User Option
Elantra(AD)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(AD)	2018	USA	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(AD)	2018	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(AD)	2018	USA	BCM(Body Control Module)	Read FreezeData	
Elantra(AD)	2018	USA	BCM(Body Control Module)	Special Function	Read VIN
Elantra(AD)	2018	USA	BCM(Body Control Module)	Special Function	Write VIN
Elantra(AD)	2018	USA	BCM(Body Control Module)	Special Function	PCM Lock(MEC)Setting
Elantra(AD)	2018	USA	BCM(Body Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(AD)	2018	USA	BCM(Body Control Module)	Special Function	VCM Learning

model	year	area	system	function	subfunction
Elantra(AD)	2018	USA	BCM(Body Control Module)	Special Function	Evap.Leakage Test
Elantra(AD)	2018	USA	BCM(Body Control Module)	Special Function	ETC Motor Cleaning
Elantra(AD)	2018	USA	Tire Pressure Monitoring	Version Information	
Elantra(AD)	2018	USA	Tire Pressure Monitoring	Read Fault Code	
Elantra(AD)	2018	USA	Tire Pressure Monitoring	Clear Fault Memory	
Elantra(AD)	2018	USA	Tire Pressure Monitoring	Read Data Stream	
Elantra(AD)	2018	USA	Tire Pressure Monitoring	Special Function	Wheel Sensor ID Writing
Elantra(AD)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Reading
Elantra(AD)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Writing
Elantra(AD)	2018	USA	Adaptive Front Lighting System	Version Information	
Elantra(AD)	2018	USA	Adaptive Front Lighting System	Read Fault Code	
Elantra(AD)	2018	USA	Adaptive Front Lighting System	Clear Fault Memory	
Elantra(AD)	2018	USA	Adaptive Front Lighting System	Read Data Stream	
Elantra(AD)	2018	USA	Adaptive Front Lighting System	Actuation Test	
Elantra(AD)	2018	USA	Adaptive Front Lighting System	Special Function	Parameter Download
Elantra(AD)	2018	USA	Adaptive Front Lighting System	Special Function	Calibration
Elantra(AD)	2018	USA	Motor Driven Power Steering	Version Information	
Elantra(AD)	2018	USA	Motor Driven Power Steering	Read Fault Code	
Elantra(AD)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
Elantra(AD)	2018	USA	Motor Driven Power Steering	Read Data Stream	
Elantra(AD)	2018	USA	Motor Driven Power Steering	Special Function	ASP CALIBRATION
Elantra(AD)	2018	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
Elantra(AD)	2018	USA	Motor Driven Power Steering	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(AD)	2018	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering ECU)
Elantra(AD)	2018	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering Motor)
Elantra(AD)	2018	USA	Smart Key Unit	Version Information	
Elantra(AD)	2018	USA	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(AD)	2018	USA	Smart Key Unit	Clear Fault Memory	
Elantra(AD)	2018	USA	Smart Key Unit	Read Data Stream	
Elantra(AD)	2018	USA	Smart Key Unit	Actuation Test	
Elantra(AD)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(AD)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(AD)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(AD)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(AD)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(AD)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(AD)	2018	USA	Blind Spot Detection	Version Information	
Elantra(AD)	2018	USA	Blind Spot Detection	Read Fault Code	
Elantra(AD)	2018	USA	Blind Spot Detection	Clear Fault Memory	
Elantra(AD)	2018	USA	Blind Spot Detection	Read Data Stream	
Elantra(AD)	2018	USA	Blind Spot Detection	Actuation Test	
Elantra(AD)	2018	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Elantra(AD)	2018	USA	Blind Spot Detection	Special Function	BSD Variant Coding
Elantra(AD)	2018	USA	Multi Function Camera	Version Information	
Elantra(AD)	2018	USA	Multi Function Camera	Read Fault Code	
Elantra(AD)	2018	USA	Multi Function Camera	Clear Fault Memory	
Elantra(AD)	2018	USA	Multi Function Camera	Read Data Stream	
Elantra(AD)	2018	USA	Multi Function Camera	Special Function	SPC Calibration
Elantra(AD)	2018	USA	Multi Function Camera	Special Function	SPTAC Calibration
Elantra(AD)	2018	USA	Parking Guide System	Version Information	
Elantra(AD)	2018	USA	Parking Guide System	Read Fault Code	
Elantra(AD)	2018	USA	Parking Guide System	Clear Fault Memory	
Elantra(AD)	2018	USA	Parking Guide System	Read Data Stream	
Elantra(AD)	2018	USA	IMM(Immobilizer)	Read Fault Code	
Elantra(AD)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
Elantra(AD)	2018	USA	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(AD)	2018	USA	IMM(Immobilizer)	Special Function	Password
Elantra(AD)	2018	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Elantra(AD)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(AD)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(AD)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(AD)	2018	USA	Transmitter Code Saving	Read Data Stream	
Elantra(AD)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(AD)	2018	USA	TCM(Transmission Control Module)	Version Information	
Elantra(AD)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(AD)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(AD)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(AD)	2018	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(AD)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(AD)	2018	USA	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Version Information	
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(AD)	2017	USA	TCM(Transmission Control Module)	Version Information	
Elantra(AD)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(AD)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(AD)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(AD)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(AD)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Elantra(AD)	2017	USA	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(AD)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra(AD)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(AD)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(AD)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(AD)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(AD)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC/Only)
Elantra(AD)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(AD)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(AD)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(AD)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(AD)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(AD)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(AD)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(AD)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Elantra(AD)	2017	USA	AC(Air Conditioning)	Version Information	
Elantra(AD)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(AD)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(AD)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(AD)	2017	USA	AC(Air Conditioning)	Actuation Test	
Elantra(AD)	2017	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LEV Type)
Elantra(AD)	2017	USA	BCM(Body Control Module)	Version Information	
Elantra(AD)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(AD)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(AD)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(AD)	2017	USA	BCM(Body Control Module)	Actuation Test	
Elantra(AD)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding

model	year	area	system	function	subfunction
Elantra(AD)	2017	USA	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(AD)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Elantra(AD)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(AD)	2017	USA	MDPS(Motor Driven Power Steering)	Version Information	
Elantra(AD)	2017	USA	MDPS(Motor Driven Power Steering)	Read Fault Code	
Elantra(AD)	2017	USA	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Elantra(AD)	2017	USA	MDPS(Motor Driven Power Steering)	Read Data Stream	
Elantra(AD)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	ASP CALIBRATION
Elantra(AD)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Elantra(AD)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(AD)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(AD)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(AD)	2017	USA	Smart Key Unit	Version Information	
Elantra(AD)	2017	USA	Smart Key Unit	Read Fault Code	
Elantra(AD)	2017	USA	Smart Key Unit	Clear Fault Memory	
Elantra(AD)	2017	USA	Smart Key Unit	Read Data Stream	
Elantra(AD)	2017	USA	Smart Key Unit	Actuation Test	
Elantra(AD)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(AD)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(AD)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(AD)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(AD)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(AD)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(AD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(AD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(AD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(AD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(AD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(AD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(AD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(AD)	2017	USA	AFS(Adaptive Front Lighting System)	Version Information	
Elantra(AD)	2017	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Elantra(AD)	2017	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Elantra(AD)	2017	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Elantra(AD)	2017	USA	AFS(Adaptive Front Lighting System)	Actuation Test	
Elantra(AD)	2017	USA	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Elantra(AD)	2017	USA	AFS(Adaptive Front Lighting System)	Special Function	Calibration
Elantra(AD)	2017	USA	IMMO(Immobilizer)	Read Fault Code	
Elantra(AD)	2017	USA	IMMO(Immobilizer)	Clear Fault Memory	
Elantra(AD)	2017	USA	IMMO(Immobilizer)	Read Data Stream	
Elantra(AD)	2017	USA	IMMO(Immobilizer)	Special Function	Password
Elantra(AD)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching/Changing
Elantra(AD)	2017	USA	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(AD)	2017	USA	IMMO(Immobilizer)	Special Function	Limp Home Mode
Elantra(AD)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching
Elantra(AD)	2017	USA	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(AD)	2017	USA	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(AD)	2017	USA	MFC(Multi Function Camera)	Version Information	
Elantra(AD)	2017	USA	MFC(Multi Function Camera)	Read Fault Code	
Elantra(AD)	2017	USA	MFC(Multi Function Camera)	Clear Fault Memory	
Elantra(AD)	2017	USA	MFC(Multi Function Camera)	Read Data Stream	
Elantra(AD)	2017	USA	MFC(Multi Function Camera)	Special Function	SPC Calibration
Elantra(AD)	2017	USA	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Elantra(AD)	2017	USA	BSD(Blind Spot Detection)	Version Information	
Elantra(AD)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
Elantra(AD)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
Elantra(AD)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(AD)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
Elantra(AD)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Elantra(AD)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
Elantra(AD)	2017	USA	PGS(Parking Guide System)	Version Information	
Elantra(AD)	2017	USA	PGS(Parking Guide System)	Read Fault Code	
Elantra(AD)	2017	USA	PGS(Parking Guide System)	Clear Fault Memory	
Elantra(AD)	2017	USA	PGS(Parking Guide System)	Read Data Stream	
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(AD)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(AD)	2017	USA	DCT(Dual Clutch Transmission)	Version Information	
Elantra(AD)	2017	USA	DCT(Dual Clutch Transmission)	Read Fault Code	
Elantra(AD)	2017	USA	DCT(Dual Clutch Transmission)	Clear Fault Memory	
Elantra(AD)	2017	USA	DCT(Dual Clutch Transmission)	Read Data Stream	
Elantra(AD)	2017	USA	DCT(Dual Clutch Transmission)	Actuation Test	
Elantra(AD)	2017	USA	DCT(Dual Clutch Transmission)	Special Function	DCT Learning Function
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Version Information	
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(ADA)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(ADA)	2018	USA	Dual Clutch Transmission	Version Information	
Elantra(ADA)	2018	USA	Dual Clutch Transmission	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(ADA)	2018	USA	Dual Clutch Transmission	Clear Fault Memory	
Elantra(ADA)	2018	USA	Dual Clutch Transmission	Read Data Stream	
Elantra(ADA)	2018	USA	Dual Clutch Transmission	Actuation Test	
Elantra(ADA)	2018	USA	Dual Clutch Transmission	Special Function	DCT Learning Function
Elantra(ADA)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra(ADA)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(ADA)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(ADA)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(ADA)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(ADA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC/ESC Only)
Elantra(ADA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(ADA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(ADA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(ADA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(ADA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(ADA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(ADA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(ADA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Elantra(ADA)	2018	USA	AC(Air Conditioning)	Version Information	
Elantra(ADA)	2018	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(ADA)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(ADA)	2018	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(ADA)	2018	USA	AC(Air Conditioning)	Actuation Test	
Elantra(ADA)	2018	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Version Information	
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Actuation Test	
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Special Function	User Option
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Read FreezeData	
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Special Function	Read VIN
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Special Function	Write VIN
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Special Function	PCM Lock(MEC)Setting
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Special Function	VCM Learning
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Special Function	Evap.Leakage Test
Elantra(ADA)	2018	USA	BCM(Body Control Module)	Special Function	ETC Motor Cleaning
Elantra(ADA)	2018	USA	Tire Pressure Monitoring	Version Information	
Elantra(ADA)	2018	USA	Tire Pressure Monitoring	Read Fault Code	
Elantra(ADA)	2018	USA	Tire Pressure Monitoring	Clear Fault Memory	
Elantra(ADA)	2018	USA	Tire Pressure Monitoring	Read Data Stream	
Elantra(ADA)	2018	USA	Tire Pressure Monitoring	Special Function	Wheel Sensor ID Writing
Elantra(ADA)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Reading
Elantra(ADA)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Writing
Elantra(ADA)	2018	USA	Adaptive Front Lighting System	Version Information	
Elantra(ADA)	2018	USA	Adaptive Front Lighting System	Read Fault Code	
Elantra(ADA)	2018	USA	Adaptive Front Lighting System	Clear Fault Memory	
Elantra(ADA)	2018	USA	Adaptive Front Lighting System	Read Data Stream	
Elantra(ADA)	2018	USA	Adaptive Front Lighting System	Actuation Test	
Elantra(ADA)	2018	USA	Adaptive Front Lighting System	Special Function	Parameter Download
Elantra(ADA)	2018	USA	Adaptive Front Lighting System	Special Function	Calibration
Elantra(ADA)	2018	USA	Motor Driven Power Steering	Version Information	

model	year	area	system	function	subfunction
Elantra(ADA)	2018	USA	Motor Driven Power Steering	Read Fault Code	
Elantra(ADA)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
Elantra(ADA)	2018	USA	Motor Driven Power Steering	Read Data Stream	
Elantra(ADA)	2018	USA	Motor Driven Power Steering	Special Function	ASP CALIBRATION
Elantra(ADA)	2018	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
Elantra(ADA)	2018	USA	Motor Driven Power Steering	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(ADA)	2018	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering ECU)
Elantra(ADA)	2018	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering Motor)
Elantra(ADA)	2018	USA	Smart Key Unit	Version Information	
Elantra(ADA)	2018	USA	Smart Key Unit	Read Fault Code	
Elantra(ADA)	2018	USA	Smart Key Unit	Clear Fault Memory	
Elantra(ADA)	2018	USA	Smart Key Unit	Read Data Stream	
Elantra(ADA)	2018	USA	Smart Key Unit	Actuation Test	
Elantra(ADA)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(ADA)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(ADA)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(ADA)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(ADA)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(ADA)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(ADA)	2018	USA	Blind Spot Detection	Version Information	
Elantra(ADA)	2018	USA	Blind Spot Detection	Read Fault Code	
Elantra(ADA)	2018	USA	Blind Spot Detection	Clear Fault Memory	
Elantra(ADA)	2018	USA	Blind Spot Detection	Read Data Stream	
Elantra(ADA)	2018	USA	Blind Spot Detection	Actuation Test	
Elantra(ADA)	2018	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Elantra(ADA)	2018	USA	Blind Spot Detection	Special Function	BSD Variant Coding
Elantra(ADA)	2018	USA	Multi Function Camera	Version Information	

model	year	area	system	function	subfunction
Elantra(ADA)	2018	USA	Multi Function Camera	Read Fault Code	
Elantra(ADA)	2018	USA	Multi Function Camera	Clear Fault Memory	
Elantra(ADA)	2018	USA	Multi Function Camera	Read Data Stream	
Elantra(ADA)	2018	USA	Multi Function Camera	Special Function	SPC Calibration
Elantra(ADA)	2018	USA	Multi Function Camera	Special Function	SPTAC Calibration
Elantra(ADA)	2018	USA	Parking Guide System	Version Information	
Elantra(ADA)	2018	USA	Parking Guide System	Read Fault Code	
Elantra(ADA)	2018	USA	Parking Guide System	Clear Fault Memory	
Elantra(ADA)	2018	USA	Parking Guide System	Read Data Stream	
Elantra(ADA)	2018	USA	IMM(Immobilizer)	Read Fault Code	
Elantra(ADA)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
Elantra(ADA)	2018	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(ADA)	2018	USA	IMM(Immobilizer)	Special Function	Password
Elantra(ADA)	2018	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Elantra(ADA)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(ADA)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(ADA)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(ADA)	2018	USA	Transmitter Code Saving	Read Data Stream	
Elantra(ADA)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(ADA)	2018	USA	TCM(Transmission Control Module)	Version Information	
Elantra(ADA)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(ADA)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(ADA)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(ADA)	2018	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(ADA)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(ADA)	2018	USA	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Version Information	
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(ADA)	2017	USA	TCM(Transmission Control Module)	Version Information	
Elantra(ADA)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(ADA)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(ADA)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(ADA)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(ADA)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(ADA)	2017	USA	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Elantra(ADA)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra(ADA)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(ADA)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(ADA)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(ADA)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(ADA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Elantra(ADA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(ADA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(ADA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra(ADA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(ADA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(ADA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(ADA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(ADA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset

model	year	area	system	function	subfunction
Elantra(ADA)	2017	USA	AC(Air Conditioning)	Version Information	
Elantra(ADA)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(ADA)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(ADA)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(ADA)	2017	USA	AC(Air Conditioning)	Actuation Test	
Elantra(ADA)	2017	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(ADA)	2017	USA	BCM(Body Control Module)	Version Information	
Elantra(ADA)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(ADA)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(ADA)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(ADA)	2017	USA	BCM(Body Control Module)	Actuation Test	
Elantra(ADA)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Elantra(ADA)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra(ADA)	2017	USA	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra(ADA)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Elantra(ADA)	2017	USA	MDPS(Motor Driven Power Steering)	Version Information	
Elantra(ADA)	2017	USA	MDPS(Motor Driven Power Steering)	Read Fault Code	
Elantra(ADA)	2017	USA	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Elantra(ADA)	2017	USA	MDPS(Motor Driven Power Steering)	Read Data Stream	
Elantra(ADA)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	ASP CALIBRATION
Elantra(ADA)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Elantra(ADA)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(ADA)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(ADA)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(ADA)	2017	USA	Smart Key Unit	Version Information	
Elantra(ADA)	2017	USA	Smart Key Unit	Read Fault Code	
Elantra(ADA)	2017	USA	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(ADA)	2017	USA	Smart Key Unit	Read Data Stream	
Elantra(ADA)	2017	USA	Smart Key Unit	Actuation Test	
Elantra(ADA)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(ADA)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(ADA)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(ADA)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(ADA)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(ADA)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(ADA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(ADA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(ADA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(ADA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(ADA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(ADA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(ADA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(ADA)	2017	USA	AFS(Adaptive Front Lighting System)	Version Information	
Elantra(ADA)	2017	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Elantra(ADA)	2017	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Elantra(ADA)	2017	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Elantra(ADA)	2017	USA	AFS(Adaptive Front Lighting System)	Actuation Test	
Elantra(ADA)	2017	USA	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Elantra(ADA)	2017	USA	AFS(Adaptive Front Lighting System)	Special Function	Calibration
Elantra(ADA)	2017	USA	IMMO(Immobilizer)	Read Fault Code	
Elantra(ADA)	2017	USA	IMMO(Immobilizer)	Clear Fault Memory	
Elantra(ADA)	2017	USA	IMMO(Immobilizer)	Read Data Stream	
Elantra(ADA)	2017	USA	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(ADA)	2017	USA	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(ADA)	2017	USA	IMMO(Immobilizer)	Special Function	Limp Home Mode
Elantra(ADA)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Elantra(ADA)	2017	USA	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra(ADA)	2017	USA	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra(ADA)	2017	USA	BSD(Blind Spot Detection)	Version Information	
Elantra(ADA)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
Elantra(ADA)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
Elantra(ADA)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	
Elantra(ADA)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
Elantra(ADA)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Elantra(ADA)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
Elantra(ADA)	2017	USA	MFC(Multi Function Camera)	Version Information	
Elantra(ADA)	2017	USA	MFC(Multi Function Camera)	Read Fault Code	
Elantra(ADA)	2017	USA	MFC(Multi Function Camera)	Clear Fault Memory	
Elantra(ADA)	2017	USA	MFC(Multi Function Camera)	Read Data Stream	
Elantra(ADA)	2017	USA	MFC(Multi Function Camera)	Special Function	SPC Calibration
Elantra(ADA)	2017	USA	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Elantra(ADA)	2017	USA	PGS(Parking Guide System)	Version Information	
Elantra(ADA)	2017	USA	PGS(Parking Guide System)	Read Fault Code	
Elantra(ADA)	2017	USA	PGS(Parking Guide System)	Clear Fault Memory	
Elantra(ADA)	2017	USA	PGS(Parking Guide System)	Read Data Stream	
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(ADA)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(ADA)	2017	USA	DCT(Dual Clutch Transmission)	Version Information	
Elantra(ADA)	2017	USA	DCT(Dual Clutch Transmission)	Read Fault Code	
Elantra(ADA)	2017	USA	DCT(Dual Clutch Transmission)	Clear Fault Memory	
Elantra(ADA)	2017	USA	DCT(Dual Clutch Transmission)	Read Data Stream	
Elantra(ADA)	2017	USA	DCT(Dual Clutch Transmission)	Actuation Test	
Elantra(ADA)	2017	USA	DCT(Dual Clutch Transmission)	Special Function	DCT Learning Function
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Version Information	
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Actuation Test	
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra GT(PD)	2018	USA	Dual Clutch Transmission	Version Information	
Elantra GT(PD)	2018	USA	Dual Clutch Transmission	Read Fault Code	
Elantra GT(PD)	2018	USA	Dual Clutch Transmission	Clear Fault Memory	
Elantra GT(PD)	2018	USA	Dual Clutch Transmission	Read Data Stream	
Elantra GT(PD)	2018	USA	Dual Clutch Transmission	Actuation Test	
Elantra GT(PD)	2018	USA	Dual Clutch Transmission	Special Function	DCT Learning Function
Elantra GT(PD)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra GT(PD)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra GT(PD)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra GT(PD)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra GT(PD)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra GT(PD)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra GT(PD)	2018	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra GT(PD)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra GT(PD)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra GT(PD)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Resetting ESP(FSC) Only Calibration
Elantra GT(PD)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Elantra GT(PD)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra GT(PD)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra GT(PD)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra GT(PD)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Elantra GT(PD)	2018	USA	AC(Air Conditioning)	Version Information	
Elantra GT(PD)	2018	USA	AC(Air Conditioning)	Read Fault Code	
Elantra GT(PD)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra GT(PD)	2018	USA	AC(Air Conditioning)	Read Data Stream	
Elantra GT(PD)	2018	USA	AC(Air Conditioning)	Actuation Test	
Elantra GT(PD)	2018	USA	BCM(Body Control Module)	Version Information	
Elantra GT(PD)	2018	USA	BCM(Body Control Module)	Read Fault Code	
Elantra GT(PD)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra GT(PD)	2018	USA	BCM(Body Control Module)	Read Data Stream	
Elantra GT(PD)	2018	USA	BCM(Body Control Module)	Actuation Test	
Elantra GT(PD)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra GT(PD)	2018	USA	BCM(Body Control Module)	Special Function	User Option
Elantra GT(PD)	2018	USA	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
Elantra GT(PD)	2018	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
Elantra GT(PD)	2018	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
Elantra GT(PD)	2018	USA	Motor Driven Power Steering	Version Information	
Elantra GT(PD)	2018	USA	Motor Driven Power Steering	Read Fault Code	
Elantra GT(PD)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
Elantra GT(PD)	2018	USA	Motor Driven Power Steering	Read Data Stream	
Elantra GT(PD)	2018	USA	Motor Driven Power Steering	Special Function	ASP Calibration
Elantra GT(PD)	2018	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
Elantra GT(PD)	2018	USA	Smart Key Unit	Version Information	
Elantra GT(PD)	2018	USA	Smart Key Unit	Read Fault Code	
Elantra GT(PD)	2018	USA	Smart Key Unit	Clear Fault Memory	
Elantra GT(PD)	2018	USA	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Elantra GT(PD)	2018	USA	Smart Key Unit	Actuation Test	
Elantra GT(PD)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra GT(PD)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra GT(PD)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra GT(PD)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra GT(PD)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra GT(PD)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra GT(PD)	2018	USA	Blind Spot Detection	Version Information	
Elantra GT(PD)	2018	USA	Blind Spot Detection	Read Fault Code	
Elantra GT(PD)	2018	USA	Blind Spot Detection	Clear Fault Memory	
Elantra GT(PD)	2018	USA	Blind Spot Detection	Read Data Stream	
Elantra GT(PD)	2018	USA	Blind Spot Detection	Actuation Test	
Elantra GT(PD)	2018	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Elantra GT(PD)	2018	USA	Multi Function Camera	Version Information	
Elantra GT(PD)	2018	USA	Multi Function Camera	Read Fault Code	
Elantra GT(PD)	2018	USA	Multi Function Camera	Clear Fault Memory	
Elantra GT(PD)	2018	USA	Multi Function Camera	Read Data Stream	
Elantra GT(PD)	2018	USA	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
Elantra GT(PD)	2018	USA	Parking Guide System	Version Information	
Elantra GT(PD)	2018	USA	Parking Guide System	Read Fault Code	
Elantra GT(PD)	2018	USA	Parking Guide System	Clear Fault Memory	
Elantra GT(PD)	2018	USA	Parking Guide System	Read Data Stream	
Elantra GT(PD)	2018	USA	Amplifier	Version Information	
Elantra GT(PD)	2018	USA	Amplifier	Special Function	AMP Operation Test
Elantra GT(PD)	2018	USA	Integrated Gateway Power Control Module	Version Information	
Elantra GT(PD)	2018	USA	Integrated Gateway Power Control Module	Read Fault Code	
Elantra GT(PD)	2018	USA	Integrated Gateway Power Control Module	Clear Fault Memory	
Elantra GT(PD)	2018	USA	Integrated Gateway Power Control Module	Read Data Stream	
Elantra GT(PD)	2018	USA	Integrated Gateway Power Control Module	Actuation Test	

model	year	area	system	function	subfunction
Elantra GT(PD)	2018	USA	Integrated Gateway Power Control Module	Special Function	Erase Network Configuration
Elantra GT(PD)	2018	USA	Integrated Gateway Power Control Module	Special Function	User Option
Elantra GT(PD)	2018	USA	IMM(Immobilizer)	Read Fault Code	
Elantra GT(PD)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
Elantra GT(PD)	2018	USA	IMM(Immobilizer)	Read Data Stream	
Elantra GT(PD)	2018	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra GT(PD)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra GT(PD)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra GT(PD)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra GT(PD)	2018	USA	Transmitter Code Saving	Read Data Stream	
Elantra GT(PD)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra GT(PD)	2018	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra GT(PD)	2018	USA	TCM(Transmission Control Module)	Version Information	
Elantra GT(PD)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra GT(PD)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra GT(PD)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra GT(PD)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra GT(PD)	2018	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(A/T Replacement)
Elantra GT(PD)	2018	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Version Information	
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MD)	2016	USA	TCM(Transmission Control Module)	Version Information	
Elantra(MD)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MD)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MD)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MD)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MD)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(MD)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MD)	2016	USA	Electronic Stability Control	Version Information	
Elantra(MD)	2016	USA	Electronic Stability Control	Read Fault Code	
Elantra(MD)	2016	USA	Electronic Stability Control	Clear Fault Memory	
Elantra(MD)	2016	USA	Electronic Stability Control	Read Data Stream	
Elantra(MD)	2016	USA	Electronic Stability Control	Actuation Test	
Elantra(MD)	2016	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(MD)	2016	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Elantra(MD)	2016	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration
Elantra(MD)	2016	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra(MD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(MD)	2016	USA	AC(Air Conditioning)	Version Information	
Elantra(MD)	2016	USA	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(MD)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MD)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(MD)	2016	USA	AC(Air Conditioning)	Actuation Test	
Elantra(MD)	2016	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(MD)	2016	USA	BCM(Body Control Module)	Version Information	
Elantra(MD)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(MD)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MD)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(MD)	2016	USA	BCM(Body Control Module)	Actuation Test	
Elantra(MD)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(MD)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MD)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MD)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MD)	2016	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MD)	2016	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MD)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MD)	2016	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MD)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MD)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(MD)	2016	USA	AFS(Adaptive Front Lighting System)	Version Information	
Elantra(MD)	2016	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Elantra(MD)	2016	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Elantra(MD)	2016	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Elantra(MD)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Elantra(MD)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Elantra(MD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(MD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(MD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(MD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(MD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(MD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(MD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(MD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(MD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(MD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(MD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(MD)	2016	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(MD)	2016	USA	IMM(Immobilizer)	Special Function	Password
Elantra(MD)	2016	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Elantra(MD)	2016	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MD)	2016	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MD)	2016	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(MD)	2016	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MD)	2016	USA	Smart Key Unit	Version Information	
Elantra(MD)	2016	USA	Smart Key Unit	Read Fault Code	
Elantra(MD)	2016	USA	Smart Key Unit	Clear Fault Memory	
Elantra(MD)	2016	USA	Smart Key Unit	Read Data Stream	
Elantra(MD)	2016	USA	Smart Key Unit	Actuation Test	
Elantra(MD)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MD)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MD)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MD)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MD)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MD)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(MD)	2016	USA	Transmitter Code Saving	Read Data Stream	
Elantra(MD)	2016	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(MD)	2016	USA	Cluster Module	Version Information	

model	year	area	system	function	subfunction
Elantra(MD)	2016	USA	Cluster Module	Read Fault Code	
Elantra(MD)	2016	USA	Cluster Module	Clear Fault Memory	
Elantra(MD)	2016	USA	Cluster Module	Read Data Stream	
Elantra(MD)	2016	USA	Cluster Module	Actuation Test	
Elantra(MD)	2016	USA	Cluster Variant Coding	Version Information	
Elantra(MD)	2016	USA	Cluster Variant Coding	Read Fault Code	
Elantra(MD)	2016	USA	Cluster Variant Coding	Clear Fault Memory	
Elantra(MD)	2016	USA	Cluster Variant Coding	Special Function	CLU Variant Coding
Elantra(MD)	2016	USA	Occupant Detection Sensor	Version Information	
Elantra(MD)	2016	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(MD)	2016	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra(MD)	2016	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(MD)	2016	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(MD)	2016	USA	Service Reminder	Special Function	Service Reminder Setting
Elantra(MD)	2016	USA	Smart Junction Block	Version Information	
Elantra(MD)	2016	USA	Smart Junction Block	Read Fault Code	
Elantra(MD)	2016	USA	Smart Junction Block	Clear Fault Memory	
Elantra(MD)	2016	USA	Smart Junction Block	Read Data Stream	
Elantra(MD)	2016	USA	Smart Junction Block	Actuation Test	
Elantra(MD)	2016	USA	Telematics Unit	Version Information	
Elantra(MD)	2016	USA	Telematics Unit	Read Fault Code	
Elantra(MD)	2016	USA	Telematics Unit	Clear Fault Memory	
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MD)	2016	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Version Information	
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MD)	2015	USA	TCM(Transmission Control Module)	Version Information	
Elantra(MD)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MD)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MD)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MD)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MD)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(MD)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MD)	2015	USA	Electronic Stability Control	Version Information	
Elantra(MD)	2015	USA	Electronic Stability Control	Read Fault Code	
Elantra(MD)	2015	USA	Electronic Stability Control	Clear Fault Memory	
Elantra(MD)	2015	USA	Electronic Stability Control	Read Data Stream	
Elantra(MD)	2015	USA	Electronic Stability Control	Actuation Test	
Elantra(MD)	2015	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(MD)	2015	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Elantra(MD)	2015	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration
Elantra(MD)	2015	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra(MD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Elantra(MD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(MD)	2015	USA	AC(Air Conditioning)	Version Information	
Elantra(MD)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(MD)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MD)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(MD)	2015	USA	AC(Air Conditioning)	Actuation Test	
Elantra(MD)	2015	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(MD)	2015	USA	BCM(Body Control Module)	Version Information	
Elantra(MD)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(MD)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MD)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(MD)	2015	USA	BCM(Body Control Module)	Actuation Test	
Elantra(MD)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(MD)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MD)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MD)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MD)	2015	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MD)	2015	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MD)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MD)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MD)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MD)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(MD)	2015	USA	Auto Headlamp Leveling System	Version Information	
Elantra(MD)	2015	USA	Auto Headlamp Leveling System	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(MD)	2015	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(MD)	2015	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra(MD)	2015	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(MD)	2015	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(MD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(MD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(MD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(MD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(MD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(MD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(MD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(MD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(MD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(MD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(MD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(MD)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(MD)	2015	USA	IMM(Immobilizer)	Special Function	Password
Elantra(MD)	2015	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Elantra(MD)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MD)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MD)	2015	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(MD)	2015	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MD)	2015	USA	Smart Key Unit	Version Information	
Elantra(MD)	2015	USA	Smart Key Unit	Read Fault Code	
Elantra(MD)	2015	USA	Smart Key Unit	Clear Fault Memory	
Elantra(MD)	2015	USA	Smart Key Unit	Read Data Stream	
Elantra(MD)	2015	USA	Smart Key Unit	Actuation Test	
Elantra(MD)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MD)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MD)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Elantra(MD)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MD)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MD)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(MD)	2015	USA	Transmitter Code Saving	Read Data Stream	
Elantra(MD)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(MD)	2015	USA	Cluster Module	Version Information	
Elantra(MD)	2015	USA	Cluster Module	Read Fault Code	
Elantra(MD)	2015	USA	Cluster Module	Clear Fault Memory	
Elantra(MD)	2015	USA	Cluster Module	Read Data Stream	
Elantra(MD)	2015	USA	Cluster Module	Actuation Test	
Elantra(MD)	2015	USA	Cluster Variant Coding	Version Information	
Elantra(MD)	2015	USA	Cluster Variant Coding	Read Fault Code	
Elantra(MD)	2015	USA	Cluster Variant Coding	Clear Fault Memory	
Elantra(MD)	2015	USA	Cluster Variant Coding	Special Function	CLU Variant Coding
Elantra(MD)	2015	USA	Occupant Detection Sensor	Version Information	
Elantra(MD)	2015	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(MD)	2015	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra(MD)	2015	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(MD)	2015	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(MD)	2015	USA	Service Reminder	Special Function	Service Reminder Setting
Elantra(MD)	2015	USA	Smart Junction Block	Version Information	
Elantra(MD)	2015	USA	Smart Junction Block	Read Fault Code	
Elantra(MD)	2015	USA	Smart Junction Block	Clear Fault Memory	
Elantra(MD)	2015	USA	Smart Junction Block	Read Data Stream	
Elantra(MD)	2015	USA	Smart Junction Block	Actuation Test	
Elantra(MD)	2015	USA	Telematics Unit	Version Information	
Elantra(MD)	2015	USA	Telematics Unit	Read Fault Code	
Elantra(MD)	2015	USA	Telematics Unit	Clear Fault Memory	
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MD)	2015	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Release(Optional)
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Version Information	
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MD)	2014	USA	TCM(Transmission Control Module)	Version Information	
Elantra(MD)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MD)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MD)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MD)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MD)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(MD)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MD)	2014	USA	Electronic Stability Control	Version Information	
Elantra(MD)	2014	USA	Electronic Stability Control	Read Fault Code	
Elantra(MD)	2014	USA	Electronic Stability Control	Clear Fault Memory	
Elantra(MD)	2014	USA	Electronic Stability Control	Read Data Stream	
Elantra(MD)	2014	USA	Electronic Stability Control	Actuation Test	

model	year	area	system	function	subfunction
Elantra(MD)	2014	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(MD)	2014	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Elantra(MD)	2014	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration
Elantra(MD)	2014	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra(MD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(MD)	2014	USA	AC(Air Conditioning)	Version Information	
Elantra(MD)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(MD)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MD)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(MD)	2014	USA	AC(Air Conditioning)	Actuation Test	
Elantra(MD)	2014	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(MD)	2014	USA	BCM(Body Control Module)	Version Information	
Elantra(MD)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(MD)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MD)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(MD)	2014	USA	BCM(Body Control Module)	Actuation Test	
Elantra(MD)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(MD)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MD)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MD)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MD)	2014	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MD)	2014	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MD)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Elantra(MD)	2014	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MD)	2014	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MD)	2014	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(MD)	2014	USA	Auto Headlamp Leveling System	Version Information	
Elantra(MD)	2014	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra(MD)	2014	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(MD)	2014	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra(MD)	2014	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(MD)	2014	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(MD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(MD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(MD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(MD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(MD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(MD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(MD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(MD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(MD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(MD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(MD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(MD)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(MD)	2014	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(MD)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MD)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MD)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(MD)	2014	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MD)	2014	USA	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
Elantra(MD)	2014	USA	Smart Key Unit	Read Fault Code	
Elantra(MD)	2014	USA	Smart Key Unit	Clear Fault Memory	
Elantra(MD)	2014	USA	Smart Key Unit	Read Data Stream	
Elantra(MD)	2014	USA	Smart Key Unit	Actuation Test	
Elantra(MD)	2014	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MD)	2014	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MD)	2014	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MD)	2014	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MD)	2014	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MD)	2014	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(MD)	2014	USA	Transmitter Code Saving	Read Data Stream	
Elantra(MD)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(MD)	2014	USA	Cluster Module	Version Information	
Elantra(MD)	2014	USA	Cluster Module	Read Fault Code	
Elantra(MD)	2014	USA	Cluster Module	Clear Fault Memory	
Elantra(MD)	2014	USA	Cluster Module	Read Data Stream	
Elantra(MD)	2014	USA	Cluster Module	Actuation Test	
Elantra(MD)	2014	USA	Cluster Variant Coding	Version Information	
Elantra(MD)	2014	USA	Cluster Variant Coding	Read Fault Code	
Elantra(MD)	2014	USA	Cluster Variant Coding	Clear Fault Memory	
Elantra(MD)	2014	USA	Cluster Variant Coding	Special Function	CLU Variant Coding
Elantra(MD)	2014	USA	Occupant Detection Sensor	Version Information	
Elantra(MD)	2014	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(MD)	2014	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra(MD)	2014	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(MD)	2014	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(MD)	2014	USA	Service Reminder	Special Function	Service Reminder Setting
Elantra(MD)	2014	USA	Smart Junction Block	Version Information	
Elantra(MD)	2014	USA	Smart Junction Block	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(MD)	2014	USA	Smart Junction Block	Clear Fault Memory	
Elantra(MD)	2014	USA	Smart Junction Block	Read Data Stream	
Elantra(MD)	2014	USA	Smart Junction Block	Actuation Test	
Elantra(MD)	2014	USA	Telematics Unit	Version Information	
Elantra(MD)	2014	USA	Telematics Unit	Read Fault Code	
Elantra(MD)	2014	USA	Telematics Unit	Clear Fault Memory	
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MD)	2014	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Version Information	
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MD)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MD)	2013	USA	TCM(Transmission Control Module)	Version Information	
Elantra(MD)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(MD)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MD)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MD)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MD)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(MD)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MD)	2013	USA	Electronic Stability Control	Version Information	
Elantra(MD)	2013	USA	Electronic Stability Control	Read Fault Code	
Elantra(MD)	2013	USA	Electronic Stability Control	Clear Fault Memory	
Elantra(MD)	2013	USA	Electronic Stability Control	Read Data Stream	
Elantra(MD)	2013	USA	Electronic Stability Control	Actuation Test	
Elantra(MD)	2013	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(MD)	2013	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Elantra(MD)	2013	USA	Electronic Stability Control	Special Function	Steer/FSP/FSC Sensor Calibration
Elantra(MD)	2013	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra(MD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(MD)	2013	USA	AC(Air Conditioning)	Version Information	
Elantra(MD)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(MD)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MD)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(MD)	2013	USA	AC(Air Conditioning)	Actuation Test	
Elantra(MD)	2013	USA	BCM(Body Control Module)	Version Information	
Elantra(MD)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(MD)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(MD)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(MD)	2013	USA	BCM(Body Control Module)	Actuation Test	
Elantra(MD)	2013	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(MD)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MD)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MD)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MD)	2013	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MD)	2013	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MD)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MD)	2013	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MD)	2013	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(MD)	2013	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(MD)	2013	USA	Auto Headlamp Leveling System	Version Information	
Elantra(MD)	2013	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra(MD)	2013	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(MD)	2013	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra(MD)	2013	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(MD)	2013	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(MD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(MD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(MD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(MD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(MD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(MD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(MD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(MD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(MD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Elantra(MD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(MD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(MD)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(MD)	2013	USA	IMM(Immobilizer)	Special Function	password
Elantra(MD)	2013	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Elantra(MD)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MD)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MD)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(MD)	2013	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MD)	2013	USA	Smart Key Unit	Version Information	
Elantra(MD)	2013	USA	Smart Key Unit	Read Fault Code	
Elantra(MD)	2013	USA	Smart Key Unit	Clear Fault Memory	
Elantra(MD)	2013	USA	Smart Key Unit	Read Data Stream	
Elantra(MD)	2013	USA	Smart Key Unit	Actuation Test	
Elantra(MD)	2013	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MD)	2013	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MD)	2013	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MD)	2013	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MD)	2013	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MD)	2013	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(MD)	2013	USA	Transmitter Code Saving	Read Data Stream	
Elantra(MD)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(MD)	2013	USA	Cluster Module	Version Information	
Elantra(MD)	2013	USA	Cluster Module	Read Fault Code	
Elantra(MD)	2013	USA	Cluster Module	Clear Fault Memory	
Elantra(MD)	2013	USA	Cluster Module	Read Data Stream	
Elantra(MD)	2013	USA	Cluster Module	Actuation Test	
Elantra(MD)	2013	USA	Occupant Detection Sensor	Version Information	
Elantra(MD)	2013	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(MD)	2013	USA	Occupant Detection Sensor	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(MD)	2013	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(MD)	2013	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(MD)	2013	USA	Smart Junction Block	Version Information	
Elantra(MD)	2013	USA	Smart Junction Block	Read Fault Code	
Elantra(MD)	2013	USA	Smart Junction Block	Clear Fault Memory	
Elantra(MD)	2013	USA	Smart Junction Block	Read Data Stream	
Elantra(MD)	2013	USA	Smart Junction Block	Actuation Test	
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Version Information	
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MD)	2012	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MD)	2012	USA	TCM(Transmission Control Module)	Version Information	
Elantra(MD)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MD)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MD)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MD)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MD)	2012	USA	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(MD)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MD)	2012	USA	Electronic Stability Control	Version Information	
Elantra(MD)	2012	USA	Electronic Stability Control	Read Fault Code	
Elantra(MD)	2012	USA	Electronic Stability Control	Clear Fault Memory	
Elantra(MD)	2012	USA	Electronic Stability Control	Read Data Stream	
Elantra(MD)	2012	USA	Electronic Stability Control	Actuation Test	
Elantra(MD)	2012	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(MD)	2012	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Elantra(MD)	2012	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration
Elantra(MD)	2012	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra(MD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(MD)	2012	USA	AC(Air Conditioning)	Version Information	
Elantra(MD)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(MD)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MD)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(MD)	2012	USA	AC(Air Conditioning)	Actuation Test	
Elantra(MD)	2012	USA	BCM(Body Control Module)	Version Information	
Elantra(MD)	2012	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(MD)	2012	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MD)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(MD)	2012	USA	BCM(Body Control Module)	Actuation Test	
Elantra(MD)	2012	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(MD)	2012	USA	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(MD)	2012	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MD)	2012	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MD)	2012	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MD)	2012	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MD)	2012	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(MD)	2012	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MD)	2012	USA	Auto Headlamp Leveling System	Version Information	
Elantra(MD)	2012	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra(MD)	2012	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(MD)	2012	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra(MD)	2012	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(MD)	2012	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(MD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(MD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(MD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(MD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(MD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(MD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(MD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(MD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(MD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(MD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(MD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(MD)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(MD)	2012	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(MD)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MD)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MD)	2012	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Elantra(MD)	2012	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MD)	2012	USA	Smart Key Unit	Version Information	
Elantra(MD)	2012	USA	Smart Key Unit	Read Fault Code	
Elantra(MD)	2012	USA	Smart Key Unit	Clear Fault Memory	
Elantra(MD)	2012	USA	Smart Key Unit	Read Data Stream	
Elantra(MD)	2012	USA	Smart Key Unit	Actuation Test	
Elantra(MD)	2012	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MD)	2012	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MD)	2012	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MD)	2012	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MD)	2012	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MD)	2012	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(MD)	2012	USA	Transmitter Code Saving	Read Data Stream	
Elantra(MD)	2012	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(MD)	2012	USA	Cluster Module	Version Information	
Elantra(MD)	2012	USA	Cluster Module	Read Fault Code	
Elantra(MD)	2012	USA	Cluster Module	Clear Fault Memory	
Elantra(MD)	2012	USA	Cluster Module	Read Data Stream	
Elantra(MD)	2012	USA	Cluster Module	Actuation Test	
Elantra(MD)	2012	USA	Occupant Detection Sensor	Version Information	
Elantra(MD)	2012	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(MD)	2012	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra(MD)	2012	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(MD)	2012	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(MD)	2012	USA	Smart Junction Block	Version Information	
Elantra(MD)	2012	USA	Smart Junction Block	Read Fault Code	
Elantra(MD)	2012	USA	Smart Junction Block	Clear Fault Memory	
Elantra(MD)	2012	USA	Smart Junction Block	Read Data Stream	
Elantra(MD)	2012	USA	Smart Junction Block	Actuation Test	

model	year	area	system	function	subfunction
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Version Information	
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(MD)	2011	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(MD)	2011	USA	TCM(Transmission Control Module)	Version Information	
Elantra(MD)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(MD)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(MD)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(MD)	2011	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(MD)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(MD)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(MD)	2011	USA	Electronic Stability Control	Version Information	
Elantra(MD)	2011	USA	Electronic Stability Control	Read Fault Code	
Elantra(MD)	2011	USA	Electronic Stability Control	Clear Fault Memory	
Elantra(MD)	2011	USA	Electronic Stability Control	Read Data Stream	
Elantra(MD)	2011	USA	Electronic Stability Control	Actuation Test	

model	year	area	system	function	subfunction
Elantra(MD)	2011	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(MD)	2011	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Elantra(MD)	2011	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration
Elantra(MD)	2011	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra(MD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(MD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(MD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(MD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(MD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(MD)	2011	USA	AC(Air Conditioning)	Version Information	
Elantra(MD)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(MD)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(MD)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(MD)	2011	USA	AC(Air Conditioning)	Actuation Test	
Elantra(MD)	2011	USA	BCM(Body Control Module)	Version Information	
Elantra(MD)	2011	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(MD)	2011	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(MD)	2011	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(MD)	2011	USA	BCM(Body Control Module)	Actuation Test	
Elantra(MD)	2011	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(MD)	2011	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(MD)	2011	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(MD)	2011	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(MD)	2011	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(MD)	2011	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(MD)	2011	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Elantra(MD)	2011	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(MD)	2011	USA	Auto Headlamp Leveling System	Version Information	
Elantra(MD)	2011	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra(MD)	2011	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(MD)	2011	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra(MD)	2011	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(MD)	2011	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(MD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(MD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(MD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(MD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(MD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(MD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(MD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(MD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(MD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(MD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(MD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(MD)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(MD)	2011	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Elantra(MD)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(MD)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(MD)	2011	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(MD)	2011	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(MD)	2011	USA	Smart Key Unit	Version Information	
Elantra(MD)	2011	USA	Smart Key Unit	Read Fault Code	
Elantra(MD)	2011	USA	Smart Key Unit	Clear Fault Memory	
Elantra(MD)	2011	USA	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(MD)	2011	USA	Smart Key Unit	Actuation Test	
Elantra(MD)	2011	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(MD)	2011	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(MD)	2011	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(MD)	2011	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(MD)	2011	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(MD)	2011	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(MD)	2011	USA	Transmitter Code Saving	Read Data Stream	
Elantra(MD)	2011	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(MD)	2011	USA	Cluster Module	Version Information	
Elantra(MD)	2011	USA	Cluster Module	Read Fault Code	
Elantra(MD)	2011	USA	Cluster Module	Clear Fault Memory	
Elantra(MD)	2011	USA	Cluster Module	Read Data Stream	
Elantra(MD)	2011	USA	Cluster Module	Actuation Test	
Elantra(MD)	2011	USA	Occupant Detection Sensor	Version Information	
Elantra(MD)	2011	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(MD)	2011	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra(MD)	2011	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(MD)	2011	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(MD)	2011	USA	Smart Junction Block	Version Information	
Elantra(MD)	2011	USA	Smart Junction Block	Read Fault Code	
Elantra(MD)	2011	USA	Smart Junction Block	Clear Fault Memory	
Elantra(MD)	2011	USA	Smart Junction Block	Read Data Stream	
Elantra(MD)	2011	USA	Smart Junction Block	Actuation Test	
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Version Information	
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(UD)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(UD)	2016	USA	TCM(Transmission Control Module)	Version Information	
Elantra(UD)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(UD)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(UD)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(UD)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(UD)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(UD)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(UD)	2016	USA	Electronic Stability Control	Version Information	
Elantra(UD)	2016	USA	Electronic Stability Control	Read Fault Code	
Elantra(UD)	2016	USA	Electronic Stability Control	Clear Fault Memory	
Elantra(UD)	2016	USA	Electronic Stability Control	Read Data Stream	
Elantra(UD)	2016	USA	Electronic Stability Control	Actuation Test	
Elantra(UD)	2016	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(UD)	2016	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Elantra(UD)	2016	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration
Elantra(UD)	2016	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Elantra(UD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(UD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(UD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(UD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(UD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(UD)	2016	USA	AC(Air Conditioning)	Version Information	
Elantra(UD)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(UD)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(UD)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(UD)	2016	USA	AC(Air Conditioning)	Actuation Test	
Elantra(UD)	2016	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(UD)	2016	USA	BCM(Body Control Module)	Version Information	
Elantra(UD)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(UD)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(UD)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(UD)	2016	USA	BCM(Body Control Module)	Actuation Test	
Elantra(UD)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(UD)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(UD)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(UD)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(UD)	2016	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(UD)	2016	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(UD)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(UD)	2016	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(UD)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(UD)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(UD)	2016	USA	AFS(Adaptive Front Lighting System)	Version Information	

model	year	area	system	function	subfunction
Elantra(UD)	2016	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Elantra(UD)	2016	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Elantra(UD)	2016	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Elantra(UD)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Elantra(UD)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Elantra(UD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(UD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(UD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(UD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(UD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(UD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(UD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(UD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(UD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(UD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(UD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(UD)	2016	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(UD)	2016	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Elantra(UD)	2016	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(UD)	2016	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(UD)	2016	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(UD)	2016	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(UD)	2016	USA	Smart Key Unit	Version Information	
Elantra(UD)	2016	USA	Smart Key Unit	Read Fault Code	
Elantra(UD)	2016	USA	Smart Key Unit	Clear Fault Memory	
Elantra(UD)	2016	USA	Smart Key Unit	Read Data Stream	
Elantra(UD)	2016	USA	Smart Key Unit	Actuation Test	
Elantra(UD)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(UD)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Elantra(UD)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(UD)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(UD)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(UD)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(UD)	2016	USA	Transmitter Code Saving	Read Data Stream	
Elantra(UD)	2016	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(UD)	2016	USA	Cluster Module	Version Information	
Elantra(UD)	2016	USA	Cluster Module	Read Fault Code	
Elantra(UD)	2016	USA	Cluster Module	Clear Fault Memory	
Elantra(UD)	2016	USA	Cluster Module	Read Data Stream	
Elantra(UD)	2016	USA	Cluster Module	Actuation Test	
Elantra(UD)	2016	USA	Occupant Detection Sensor	Version Information	
Elantra(UD)	2016	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(UD)	2016	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra(UD)	2016	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(UD)	2016	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(UD)	2016	USA	Service Reminder	Special Function	Service Reminder Setting
Elantra(UD)	2016	USA	Smart Junction Block	Version Information	
Elantra(UD)	2016	USA	Smart Junction Block	Read Fault Code	
Elantra(UD)	2016	USA	Smart Junction Block	Clear Fault Memory	
Elantra(UD)	2016	USA	Smart Junction Block	Read Data Stream	
Elantra(UD)	2016	USA	Smart Junction Block	Actuation Test	
Elantra(UD)	2016	USA	Telematics Unit	Version Information	
Elantra(UD)	2016	USA	Telematics Unit	Read Fault Code	
Elantra(UD)	2016	USA	Telematics Unit	Clear Fault Memory	
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Version Information	
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(UD)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(UD)	2015	USA	TCM(Transmission Control Module)	Version Information	
Elantra(UD)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(UD)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(UD)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(UD)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(UD)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(UD)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(UD)	2015	USA	Electronic Stability Control	Version Information	
Elantra(UD)	2015	USA	Electronic Stability Control	Read Fault Code	
Elantra(UD)	2015	USA	Electronic Stability Control	Clear Fault Memory	
Elantra(UD)	2015	USA	Electronic Stability Control	Read Data Stream	
Elantra(UD)	2015	USA	Electronic Stability Control	Actuation Test	
Elantra(UD)	2015	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(UD)	2015	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Elantra(UD)	2015	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration

model	year	area	system	function	subfunction
Elantra(UD)	2015	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra(UD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(UD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(UD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(UD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(UD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(UD)	2015	USA	AC(Air Conditioning)	Version Information	
Elantra(UD)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(UD)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(UD)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(UD)	2015	USA	AC(Air Conditioning)	Actuation Test	
Elantra(UD)	2015	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Elantra(UD)	2015	USA	BCM(Body Control Module)	Version Information	
Elantra(UD)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(UD)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(UD)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(UD)	2015	USA	BCM(Body Control Module)	Actuation Test	
Elantra(UD)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(UD)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(UD)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(UD)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(UD)	2015	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(UD)	2015	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(UD)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(UD)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(UD)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra(UD)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)

model	year	area	system	function	subfunction
Elantra(UD)	2015	USA	Auto Headlamp Leveling System	Version Information	
Elantra(UD)	2015	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra(UD)	2015	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(UD)	2015	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra(UD)	2015	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(UD)	2015	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(UD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(UD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(UD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(UD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(UD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(UD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(UD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(UD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(UD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(UD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(UD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(UD)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(UD)	2015	USA	IMM(Immobilizer)	Special Function	Password
Elantra(UD)	2015	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Elantra(UD)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(UD)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(UD)	2015	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(UD)	2015	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(UD)	2015	USA	Smart Key Unit	Version Information	
Elantra(UD)	2015	USA	Smart Key Unit	Read Fault Code	
Elantra(UD)	2015	USA	Smart Key Unit	Clear Fault Memory	
Elantra(UD)	2015	USA	Smart Key Unit	Read Data Stream	
Elantra(UD)	2015	USA	Smart Key Unit	Actuation Test	
Elantra(UD)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Elantra(UD)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(UD)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(UD)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(UD)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(UD)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(UD)	2015	USA	Transmitter Code Saving	Read Data Stream	
Elantra(UD)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(UD)	2015	USA	Cluster Module	Version Information	
Elantra(UD)	2015	USA	Cluster Module	Read Fault Code	
Elantra(UD)	2015	USA	Cluster Module	Clear Fault Memory	
Elantra(UD)	2015	USA	Cluster Module	Read Data Stream	
Elantra(UD)	2015	USA	Cluster Module	Actuation Test	
Elantra(UD)	2015	USA	Occupant Detection Sensor	Version Information	
Elantra(UD)	2015	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(UD)	2015	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra(UD)	2015	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(UD)	2015	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(UD)	2015	USA	Service Reminder	Special Function	Service Reminder Setting
Elantra(UD)	2015	USA	Smart Junction Block	Version Information	
Elantra(UD)	2015	USA	Smart Junction Block	Read Fault Code	
Elantra(UD)	2015	USA	Smart Junction Block	Clear Fault Memory	
Elantra(UD)	2015	USA	Smart Junction Block	Read Data Stream	
Elantra(UD)	2015	USA	Smart Junction Block	Actuation Test	
Elantra(UD)	2015	USA	Telematics Unit	Version Information	
Elantra(UD)	2015	USA	Telematics Unit	Read Fault Code	
Elantra(UD)	2015	USA	Telematics Unit	Clear Fault Memory	
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Version Information	
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(UD)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(UD)	2014	USA	TCM(Transmission Control Module)	Version Information	
Elantra(UD)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(UD)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(UD)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(UD)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(UD)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(UD)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(UD)	2014	USA	Electronic Stability Control	Version Information	
Elantra(UD)	2014	USA	Electronic Stability Control	Read Fault Code	
Elantra(UD)	2014	USA	Electronic Stability Control	Clear Fault Memory	
Elantra(UD)	2014	USA	Electronic Stability Control	Read Data Stream	
Elantra(UD)	2014	USA	Electronic Stability Control	Actuation Test	
Elantra(UD)	2014	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(UD)	2014	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)

model	year	area	system	function	subfunction
Elantra(UD)	2014	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration
Elantra(UD)	2014	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra(UD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(UD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(UD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(UD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(UD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(UD)	2014	USA	AC(Air Conditioning)	Version Information	
Elantra(UD)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(UD)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(UD)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(UD)	2014	USA	AC(Air Conditioning)	Actuation Test	
Elantra(UD)	2014	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra(UD)	2014	USA	BCM(Body Control Module)	Version Information	
Elantra(UD)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(UD)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(UD)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(UD)	2014	USA	BCM(Body Control Module)	Actuation Test	
Elantra(UD)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(UD)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(UD)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(UD)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(UD)	2014	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(UD)	2014	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(UD)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(UD)	2014	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(UD)	2014	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)

model	year	area	system	function	subfunction
Elantra(UD)	2014	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(UD)	2014	USA	Auto Headlamp Leveling System	Version Information	
Elantra(UD)	2014	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra(UD)	2014	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(UD)	2014	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra(UD)	2014	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(UD)	2014	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(UD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(UD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(UD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(UD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(UD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(UD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(UD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(UD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(UD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(UD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(UD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(UD)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(UD)	2014	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Elantra(UD)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(UD)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(UD)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(UD)	2014	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(UD)	2014	USA	Smart Key Unit	Version Information	
Elantra(UD)	2014	USA	Smart Key Unit	Read Fault Code	
Elantra(UD)	2014	USA	Smart Key Unit	Clear Fault Memory	
Elantra(UD)	2014	USA	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(UD)	2014	USA	Smart Key Unit	Actuation Test	
Elantra(UD)	2014	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(UD)	2014	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(UD)	2014	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(UD)	2014	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(UD)	2014	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(UD)	2014	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(UD)	2014	USA	Transmitter Code Saving	Read Data Stream	
Elantra(UD)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(UD)	2014	USA	Cluster Module	Version Information	
Elantra(UD)	2014	USA	Cluster Module	Read Fault Code	
Elantra(UD)	2014	USA	Cluster Module	Clear Fault Memory	
Elantra(UD)	2014	USA	Cluster Module	Read Data Stream	
Elantra(UD)	2014	USA	Cluster Module	Actuation Test	
Elantra(UD)	2014	USA	Occupant Detection Sensor	Version Information	
Elantra(UD)	2014	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(UD)	2014	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra(UD)	2014	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(UD)	2014	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(UD)	2014	USA	Service Reminder	Special Function	Service Reminder Setting
Elantra(UD)	2014	USA	Smart Junction Block	Version Information	
Elantra(UD)	2014	USA	Smart Junction Block	Read Fault Code	
Elantra(UD)	2014	USA	Smart Junction Block	Clear Fault Memory	
Elantra(UD)	2014	USA	Smart Junction Block	Read Data Stream	
Elantra(UD)	2014	USA	Smart Junction Block	Actuation Test	
Elantra(UD)	2014	USA	Telematics Unit	Version Information	
Elantra(UD)	2014	USA	Telematics Unit	Read Fault Code	
Elantra(UD)	2014	USA	Telematics Unit	Clear Fault Memory	
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(UD)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(UD)	2013	USA	TCM(Transmission Control Module)	Version Information	
Elantra(UD)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(UD)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(UD)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(UD)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(UD)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(UD)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(UD)	2013	USA	Electronic Stability Control	Version Information	
Elantra(UD)	2013	USA	Electronic Stability Control	Read Fault Code	
Elantra(UD)	2013	USA	Electronic Stability Control	Clear Fault Memory	
Elantra(UD)	2013	USA	Electronic Stability Control	Read Data Stream	
Elantra(UD)	2013	USA	Electronic Stability Control	Actuation Test	
Elantra(UD)	2013	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)

model	year	area	system	function	subfunction
Elantra(UD)	2013	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Elantra(UD)	2013	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration
Elantra(UD)	2013	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra(UD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(UD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(UD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(UD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(UD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(UD)	2013	USA	AC(Air Conditioning)	Version Information	
Elantra(UD)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(UD)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(UD)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(UD)	2013	USA	AC(Air Conditioning)	Actuation Test	
Elantra(UD)	2013	USA	BCM(Body Control Module)	Version Information	
Elantra(UD)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(UD)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(UD)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(UD)	2013	USA	BCM(Body Control Module)	Actuation Test	
Elantra(UD)	2013	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(UD)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(UD)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(UD)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(UD)	2013	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(UD)	2013	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(UD)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(UD)	2013	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(UD)	2013	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)

model	year	area	system	function	subfunction
Elantra(UD)	2013	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra(UD)	2013	USA	Auto Headlamp Leveling System	Version Information	
Elantra(UD)	2013	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra(UD)	2013	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(UD)	2013	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra(UD)	2013	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(UD)	2013	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(UD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(UD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(UD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(UD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(UD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(UD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(UD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(UD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(UD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(UD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(UD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(UD)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(UD)	2013	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Elantra(UD)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(UD)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(UD)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(UD)	2013	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(UD)	2013	USA	Smart Key Unit	Version Information	
Elantra(UD)	2013	USA	Smart Key Unit	Read Fault Code	
Elantra(UD)	2013	USA	Smart Key Unit	Clear Fault Memory	
Elantra(UD)	2013	USA	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(UD)	2013	USA	Smart Key Unit	Actuation Test	
Elantra(UD)	2013	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(UD)	2013	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(UD)	2013	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(UD)	2013	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(UD)	2013	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(UD)	2013	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(UD)	2013	USA	Transmitter Code Saving	Read Data Stream	
Elantra(UD)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(UD)	2013	USA	Cluster Module	Version Information	
Elantra(UD)	2013	USA	Cluster Module	Read Fault Code	
Elantra(UD)	2013	USA	Cluster Module	Clear Fault Memory	
Elantra(UD)	2013	USA	Cluster Module	Read Data Stream	
Elantra(UD)	2013	USA	Cluster Module	Actuation Test	
Elantra(UD)	2013	USA	Occupant Detection Sensor	Version Information	
Elantra(UD)	2013	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(UD)	2013	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra(UD)	2013	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(UD)	2013	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(UD)	2013	USA	Smart Junction Block	Version Information	
Elantra(UD)	2013	USA	Smart Junction Block	Read Fault Code	
Elantra(UD)	2013	USA	Smart Junction Block	Clear Fault Memory	
Elantra(UD)	2013	USA	Smart Junction Block	Read Data Stream	
Elantra(UD)	2013	USA	Smart Junction Block	Actuation Test	
Elantra(UD)	2013	USA	Telematics Unit	Version Information	
Elantra(UD)	2013	USA	Telematics Unit	Read Fault Code	
Elantra(UD)	2013	USA	Telematics Unit	Clear Fault Memory	
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Version Information	
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(UD)	2012	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(UD)	2012	USA	TCM(Transmission Control Module)	Version Information	
Elantra(UD)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(UD)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(UD)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(UD)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(UD)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(UD)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(UD)	2012	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra(UD)	2012	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(UD)	2012	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(UD)	2012	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(UD)	2012	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(UD)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)

model	year	area	system	function	subfunction
Elantra(UD)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra(UD)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Elantra(UD)	2012	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(UD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(UD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(UD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(UD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(UD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(UD)	2012	USA	AC(Air Conditioning)	Version Information	
Elantra(UD)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(UD)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(UD)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(UD)	2012	USA	AC(Air Conditioning)	Actuation Test	
Elantra(UD)	2012	USA	BCM(Body Control Module)	Version Information	
Elantra(UD)	2012	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(UD)	2012	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(UD)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(UD)	2012	USA	BCM(Body Control Module)	Actuation Test	
Elantra(UD)	2012	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(UD)	2012	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(UD)	2012	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(UD)	2012	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(UD)	2012	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(UD)	2012	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(UD)	2012	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(UD)	2012	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(UD)	2012	USA	Auto Headlamp Leveling System	Version Information	

model	year	area	system	function	subfunction
Elantra(UD)	2012	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra(UD)	2012	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(UD)	2012	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra(UD)	2012	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(UD)	2012	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(UD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(UD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(UD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(UD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(UD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(UD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(UD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(UD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(UD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(UD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(UD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(UD)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(UD)	2012	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Elantra(UD)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(UD)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(UD)	2012	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(UD)	2012	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(UD)	2012	USA	Smart Key Unit	Version Information	
Elantra(UD)	2012	USA	Smart Key Unit	Read Fault Code	
Elantra(UD)	2012	USA	Smart Key Unit	Clear Fault Memory	
Elantra(UD)	2012	USA	Smart Key Unit	Read Data Stream	
Elantra(UD)	2012	USA	Smart Key Unit	Actuation Test	
Elantra(UD)	2012	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(UD)	2012	USA	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Elantra(UD)	2012	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(UD)	2012	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(UD)	2012	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(UD)	2012	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(UD)	2012	USA	Transmitter Code Saving	Read Data Stream	
Elantra(UD)	2012	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(UD)	2012	USA	Cluster Module	Version Information	
Elantra(UD)	2012	USA	Cluster Module	Read Fault Code	
Elantra(UD)	2012	USA	Cluster Module	Clear Fault Memory	
Elantra(UD)	2012	USA	Cluster Module	Read Data Stream	
Elantra(UD)	2012	USA	Cluster Module	Actuation Test	
Elantra(UD)	2012	USA	Occupant Detection Sensor	Version Information	
Elantra(UD)	2012	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(UD)	2012	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra(UD)	2012	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(UD)	2012	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(UD)	2012	USA	Smart Junction Block	Version Information	
Elantra(UD)	2012	USA	Smart Junction Block	Read Fault Code	
Elantra(UD)	2012	USA	Smart Junction Block	Clear Fault Memory	
Elantra(UD)	2012	USA	Smart Junction Block	Read Data Stream	
Elantra(UD)	2012	USA	Smart Junction Block	Actuation Test	
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Version Information	
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	Cylinder Power
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	Balance(Optional)
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra(UD)	2011	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra(UD)	2011	USA	TCM(Transmission Control Module)	Version Information	
Elantra(UD)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(UD)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(UD)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(UD)	2011	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra(UD)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(UD)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(UD)	2011	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra(UD)	2011	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(UD)	2011	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(UD)	2011	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(UD)	2011	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(UD)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra(UD)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Elantra(UD)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Configuration
Elantra(UD)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Screening ESP/ESC Sensors
Elantra(UD)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Calibration
Elantra(UD)	2011	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(UD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(UD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(UD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(UD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(UD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra(UD)	2011	USA	AC(Air Conditioning)	Version Information	
Elantra(UD)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(UD)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(UD)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(UD)	2011	USA	AC(Air Conditioning)	Actuation Test	
Elantra(UD)	2011	USA	BCM(Body Control Module)	Version Information	
Elantra(UD)	2011	USA	BCM(Body Control Module)	Read Fault Code	
Elantra(UD)	2011	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra(UD)	2011	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(UD)	2011	USA	BCM(Body Control Module)	Actuation Test	
Elantra(UD)	2011	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(UD)	2011	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(UD)	2011	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(UD)	2011	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(UD)	2011	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(UD)	2011	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(UD)	2011	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(UD)	2011	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(UD)	2011	USA	Auto Headlamp Leveling System	Version Information	
Elantra(UD)	2011	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra(UD)	2011	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra(UD)	2011	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra(UD)	2011	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra(UD)	2011	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra(UD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(UD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(UD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(UD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(UD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(UD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(UD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(UD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra(UD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(UD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(UD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra(UD)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(UD)	2011	USA	IMM(Immobilizer)	Special Function	Password
Elantra(UD)	2011	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Elantra(UD)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(UD)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(UD)	2011	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(UD)	2011	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(UD)	2011	USA	Smart Key Unit	Version Information	
Elantra(UD)	2011	USA	Smart Key Unit	Read Fault Code	
Elantra(UD)	2011	USA	Smart Key Unit	Clear Fault Memory	
Elantra(UD)	2011	USA	Smart Key Unit	Read Data Stream	
Elantra(UD)	2011	USA	Smart Key Unit	Actuation Test	
Elantra(UD)	2011	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra(UD)	2011	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra(UD)	2011	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra(UD)	2011	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra(UD)	2011	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra(UD)	2011	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra(UD)	2011	USA	Transmitter Code Saving	Read Data Stream	
Elantra(UD)	2011	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(UD)	2011	USA	Cluster Module	Version Information	

model	year	area	system	function	subfunction
Elantra(UD)	2011	USA	Cluster Module	Read Fault Code	
Elantra(UD)	2011	USA	Cluster Module	Clear Fault Memory	
Elantra(UD)	2011	USA	Cluster Module	Read Data Stream	
Elantra(UD)	2011	USA	Cluster Module	Actuation Test	
Elantra(UD)	2011	USA	Occupant Detection Sensor	Version Information	
Elantra(UD)	2011	USA	Occupant Detection Sensor	Read Fault Code	
Elantra(UD)	2011	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra(UD)	2011	USA	Occupant Detection Sensor	Read Data Stream	
Elantra(UD)	2011	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra(UD)	2011	USA	Smart Junction Block	Version Information	
Elantra(UD)	2011	USA	Smart Junction Block	Read Fault Code	
Elantra(UD)	2011	USA	Smart Junction Block	Clear Fault Memory	
Elantra(UD)	2011	USA	Smart Junction Block	Read Data Stream	
Elantra(UD)	2011	USA	Smart Junction Block	Actuation Test	
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Version Information	
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(HD)	2010	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(HD)	2010	USA	TCM(Transmission Control Module)	Version Information	
Elantra(HD)	2010	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(HD)	2010	USA	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(HD)	2010	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(HD)	2010	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(HD)	2010	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(HD)	2010	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra(HD)	2010	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(HD)	2010	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(HD)	2010	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(HD)	2010	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(HD)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Elantra(HD)	2010	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(HD)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Elantra(HD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(HD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(HD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(HD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(HD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(HD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra(HD)	2010	USA	AC(Air Conditioning)	Version Information	
Elantra(HD)	2010	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(HD)	2010	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(HD)	2010	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(HD)	2010	USA	AC(Air Conditioning)	Actuation Test	
Elantra(HD)	2010	USA	BCM(Body Control Module)	Version Information	
Elantra(HD)	2010	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(HD)	2010	USA	BCM(Body Control Module)	Actuation Test	
Elantra(HD)	2010	USA	BCM(Body Control Module)	Special Function	User Option
Elantra(HD)	2010	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(HD)	2010	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(HD)	2010	USA	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(HD)	2010	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(HD)	2010	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(HD)	2010	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(HD)	2010	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(HD)	2010	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(HD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(HD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(HD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(HD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(HD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(HD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(HD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(HD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(HD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(HD)	2010	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(HD)	2010	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(HD)	2010	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(HD)	2010	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(HD)	2010	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(HD)	2010	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(HD)	2010	USA	Transmitter Code Saving	Read Data Stream	
Elantra(HD)	2010	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Version Information	
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(HD)	2009	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(HD)	2009	USA	TCM(Transmission Control Module)	Version Information	
Elantra(HD)	2009	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(HD)	2009	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(HD)	2009	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(HD)	2009	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(HD)	2009	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(HD)	2009	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra(HD)	2009	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(HD)	2009	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(HD)	2009	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(HD)	2009	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(HD)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Elantra(HD)	2009	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(HD)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Elantra(HD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(HD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(HD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(HD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(HD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(HD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra(HD)	2009	USA	AC(Air Conditioning)	Version Information	
Elantra(HD)	2009	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(HD)	2009	USA	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(HD)	2009	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(HD)	2009	USA	AC(Air Conditioning)	Actuation Test	
Elantra(HD)	2009	USA	BCM(Body Control Module)	Version Information	
Elantra(HD)	2009	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(HD)	2009	USA	BCM(Body Control Module)	Actuation Test	
Elantra(HD)	2009	USA	BCM(Body Control Module)	Special Function	User Option
Elantra(HD)	2009	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(HD)	2009	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(HD)	2009	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(HD)	2009	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(HD)	2009	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(HD)	2009	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(HD)	2009	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(HD)	2009	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(HD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(HD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(HD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(HD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(HD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(HD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(HD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(HD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(HD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(HD)	2009	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(HD)	2009	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(HD)	2009	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(HD)	2009	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(HD)	2009	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Elantra(HD)	2009	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(HD)	2009	USA	Transmitter Code Saving	Read Data Stream	
Elantra(HD)	2009	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Version Information	
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(HD)	2008	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(HD)	2008	USA	TCM(Transmission Control Module)	Version Information	
Elantra(HD)	2008	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(HD)	2008	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(HD)	2008	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(HD)	2008	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(HD)	2008	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(HD)	2008	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra(HD)	2008	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(HD)	2008	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(HD)	2008	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(HD)	2008	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(HD)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Elantra(HD)	2008	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(HD)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test

model	year	area	system	function	subfunction
Elantra(HD)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(HD)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(HD)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(HD)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(HD)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(HD)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra(HD)	2008	USA	AC(Air Conditioning)	Version Information	
Elantra(HD)	2008	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(HD)	2008	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(HD)	2008	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(HD)	2008	USA	AC(Air Conditioning)	Actuation Test	
Elantra(HD)	2008	USA	BCM(Body Control Module)	Version Information	
Elantra(HD)	2008	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(HD)	2008	USA	BCM(Body Control Module)	Actuation Test	
Elantra(HD)	2008	USA	BCM(Body Control Module)	Special Function	User Option
Elantra(HD)	2008	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(HD)	2008	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(HD)	2008	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(HD)	2008	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra(HD)	2008	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(HD)	2008	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(HD)	2008	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(HD)	2008	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(HD)	2008	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(HD)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(HD)	2008	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(HD)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(HD)	2008	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(HD)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(HD)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(HD)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(HD)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(HD)	2008	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(HD)	2008	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(HD)	2008	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(HD)	2008	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(HD)	2008	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(HD)	2008	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(HD)	2008	USA	Transmitter Code Saving	Read Data Stream	
Elantra(HD)	2008	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Version Information	
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(HD)	2007	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(HD)	2007	USA	TCM(Transmission Control Module)	Version Information	
Elantra(HD)	2007	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(HD)	2007	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(HD)	2007	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(HD)	2007	USA	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(HD)	2007	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(HD)	2007	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra(HD)	2007	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(HD)	2007	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(HD)	2007	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(HD)	2007	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(HD)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Elantra(HD)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Elantra(HD)	2007	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(HD)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Elantra(HD)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(HD)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(HD)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(HD)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(HD)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(HD)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra(HD)	2007	USA	AC(Air Conditioning)	Version Information	
Elantra(HD)	2007	USA	AC(Air Conditioning)	Read Fault Code	
Elantra(HD)	2007	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra(HD)	2007	USA	AC(Air Conditioning)	Read Data Stream	
Elantra(HD)	2007	USA	AC(Air Conditioning)	Actuation Test	
Elantra(HD)	2007	USA	BCM(Body Control Module)	Version Information	
Elantra(HD)	2007	USA	BCM(Body Control Module)	Read Data Stream	
Elantra(HD)	2007	USA	BCM(Body Control Module)	Actuation Test	
Elantra(HD)	2007	USA	BCM(Body Control Module)	Special Function	User Option
Elantra(HD)	2007	USA	EPS(Electronic Power Steering)	Version Information	
Elantra(HD)	2007	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra(HD)	2007	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra(HD)	2007	USA	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(HD)	2007	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra(HD)	2007	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra(HD)	2007	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra(HD)	2007	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra(HD)	2007	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra(HD)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra(HD)	2007	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra(HD)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra(HD)	2007	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra(HD)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra(HD)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra(HD)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra(HD)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra(HD)	2007	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(HD)	2007	USA	IMM(Immobilizer)	Special Function	Password Teaching/Checking
Elantra(HD)	2007	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(HD)	2007	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(HD)	2007	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(HD)	2007	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra(HD)	2007	USA	Transmitter Code Saving	Read Data Stream	
Elantra(HD)	2007	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2006	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2006	USA	TCM(Transmission Control Module)	Version Information	
Elantra(XD)	2006	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2006	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(XD)	2006	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(XD)	2006	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2006	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(XD)	2006	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(XD)	2006	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2006	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2006	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2006	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(XD)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(XD)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(XD)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(XD)	2006	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2006	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(XD)	2006	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2006	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2006	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Elantra(XD)	2006	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2005	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2005	USA	TCM(Transmission Control Module)	Version Information	
Elantra(XD)	2005	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2005	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(XD)	2005	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(XD)	2005	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2005	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(XD)	2005	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(XD)	2005	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2005	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2005	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2005	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(XD)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(XD)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(XD)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(XD)	2005	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2005	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra(XD)	2005	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2005	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2005	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(XD)	2005	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2004	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2004	USA	TCM(Transmission Control Module)	Version Information	
Elantra(XD)	2004	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2004	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(XD)	2004	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(XD)	2004	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2004	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(XD)	2004	USA	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(XD)	2004	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2004	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2004	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2004	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(XD)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra(XD)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(XD)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra(XD)	2004	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2004	USA	IMM(Immobilizer)	Special Function	Password
Elantra(XD)	2004	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Elantra(XD)	2004	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2004	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2004	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(XD)	2004	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2003	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2003	USA	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Elantra(XD)	2003	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2003	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(XD)	2003	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(XD)	2003	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2003	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra(XD)	2003	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(XD)	2003	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2003	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2003	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2003	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(XD)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(XD)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2003	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2003	USA	IMM(Immobilizer)	Special Function	password Teaching/Changing
Elantra(XD)	2003	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2003	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2003	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(XD)	2003	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2002	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2002	USA	TCM(Transmission Control Module)	Version Information	
Elantra(XD)	2002	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2002	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(XD)	2002	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(XD)	2002	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2002	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(XD)	2002	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2002	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2002	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2002	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(XD)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(XD)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2002	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2002	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Elantra(XD)	2002	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2002	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2002	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(XD)	2002	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Version Information	
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra(XD)	2001	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra(XD)	2001	USA	TCM(Transmission Control Module)	Version Information	
Elantra(XD)	2001	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(XD)	2001	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(XD)	2001	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(XD)	2001	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(XD)	2001	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(XD)	2001	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(XD)	2001	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(XD)	2001	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra(XD)	2001	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra(XD)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(XD)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(XD)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(XD)	2001	USA	IMM(Immobilizer)	Read Data Stream	
Elantra(XD)	2001	USA	IMM(Immobilizer)	Special Function	Password
Elantra(XD)	2001	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Elantra(XD)	2001	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra(XD)	2001	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra(XD)	2001	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra(XD)	2001	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra(RD)	2000	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(RD)	2000	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(RD)	2000	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(RD)	2000	USA	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Elantra(RD)	2000	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(RD)	2000	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(RD)	2000	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(RD)	2000	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(RD)	2000	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(RD)	2000	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(RD)	2000	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(RD)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(RD)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(RD)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(RD)	1999	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(RD)	1999	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(RD)	1999	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(RD)	1999	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(RD)	1999	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(RD)	1999	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(RD)	1999	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(RD)	1999	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(RD)	1999	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(RD)	1999	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(RD)	1999	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(RD)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(RD)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(RD)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(RD)	1998	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(RD)	1998	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(RD)	1998	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(RD)	1998	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(RD)	1998	USA	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra(RD)	1998	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(RD)	1998	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(RD)	1998	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(RD)	1998	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(RD)	1998	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(RD)	1998	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(RD)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(RD)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(RD)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(RD)	1997	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(RD)	1997	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(RD)	1997	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(RD)	1997	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(RD)	1997	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(RD)	1997	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(RD)	1997	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(RD)	1997	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(RD)	1997	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(RD)	1997	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(RD)	1997	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(RD)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(RD)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(RD)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(RD)	1996	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(RD)	1996	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(RD)	1996	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(RD)	1996	USA	ECM(Engine Control Module)	Actuation Test	
Elantra(RD)	1996	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(RD)	1996	USA	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra(RD)	1996	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(RD)	1996	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra(RD)	1996	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(RD)	1996	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(RD)	1996	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(RD)	1996	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(RD)	1996	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(RD)	1996	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(J1)	1995	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(J1)	1995	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(J1)	1995	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(J1)	1995	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(J1)	1995	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(J1)	1995	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(J1)	1995	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(J1)	1995	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(J1)	1995	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(J1)	1995	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(J1)	1995	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(J1)	1995	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(J1)	1994	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(J1)	1994	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(J1)	1994	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(J1)	1994	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(J1)	1994	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(J1)	1994	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(J1)	1994	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(J1)	1994	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(J1)	1994	USA	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra(J1)	1994	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(J1)	1994	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(J1)	1994	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(J1)	1993	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(J1)	1993	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(J1)	1993	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(J1)	1993	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(J1)	1993	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(J1)	1993	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(J1)	1993	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(J1)	1993	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(J1)	1993	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(J1)	1993	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(J1)	1993	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(J1)	1993	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra(J1)	1992	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra(J1)	1992	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra(J1)	1992	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra(J1)	1992	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra(J1)	1992	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra(J1)	1992	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra(J1)	1992	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra(J1)	1992	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra(J1)	1992	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra(J1)	1992	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra(J1)	1992	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra(J1)	1992	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Version Information	
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra Coupe(JK)	2015	USA	TCM(Transmission Control Module)	Version Information	
Elantra Coupe(JK)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra Coupe(JK)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra Coupe(JK)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra Coupe(JK)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra Coupe(JK)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra Coupe(JK)	2015	USA	Electronic Stability Control	Version Information	
Elantra Coupe(JK)	2015	USA	Electronic Stability Control	Read Fault Code	
Elantra Coupe(JK)	2015	USA	Electronic Stability Control	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	Electronic Stability Control	Read Data Stream	
Elantra Coupe(JK)	2015	USA	Electronic Stability Control	Actuation Test	
Elantra Coupe(JK)	2015	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra Coupe(JK)	2015	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra Coupe(JK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra Coupe(JK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra Coupe(JK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra Coupe(JK)	2015	USA	AC(Air Conditioning)	Version Information	
Elantra Coupe(JK)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Elantra Coupe(JK)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Elantra Coupe(JK)	2015	USA	AC(Air Conditioning)	Actuation Test	
Elantra Coupe(JK)	2015	USA	BCM(Body Control Module)	Version Information	
Elantra Coupe(JK)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Elantra Coupe(JK)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Elantra Coupe(JK)	2015	USA	BCM(Body Control Module)	Actuation Test	
Elantra Coupe(JK)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Elantra Coupe(JK)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra Coupe(JK)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra Coupe(JK)	2015	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra Coupe(JK)	2015	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra Coupe(JK)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra Coupe(JK)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra Coupe(JK)	2015	USA	Auto Headlamp Leveling System	Version Information	
Elantra Coupe(JK)	2015	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra Coupe(JK)	2015	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra Coupe(JK)	2015	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra Coupe(JK)	2015	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra Coupe(JK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra Coupe(JK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra Coupe(JK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra Coupe(JK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra Coupe(JK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra Coupe(JK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra Coupe(JK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra Coupe(JK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra Coupe(JK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra Coupe(JK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra Coupe(JK)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Elantra Coupe(JK)	2015	USA	IMM(Immobilizer)	Special Function	Password
Elantra Coupe(JK)	2015	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Elantra Coupe(JK)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra Coupe(JK)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra Coupe(JK)	2015	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra Coupe(JK)	2015	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra Coupe(JK)	2015	USA	Smart Key Unit	Version Information	
Elantra Coupe(JK)	2015	USA	Smart Key Unit	Read Fault Code	
Elantra Coupe(JK)	2015	USA	Smart Key Unit	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	Smart Key Unit	Read Data Stream	
Elantra Coupe(JK)	2015	USA	Smart Key Unit	Actuation Test	
Elantra Coupe(JK)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra Coupe(JK)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra Coupe(JK)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra Coupe(JK)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra Coupe(JK)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra Coupe(JK)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra Coupe(JK)	2015	USA	Transmitter Code Saving	Read Data Stream	
Elantra Coupe(JK)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra Coupe(JK)	2015	USA	Cluster Module	Version Information	
Elantra Coupe(JK)	2015	USA	Cluster Module	Read Fault Code	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2015	USA	Cluster Module	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	Cluster Module	Read Data Stream	
Elantra Coupe(JK)	2015	USA	Cluster Module	Actuation Test	
Elantra Coupe(JK)	2015	USA	Occupant Detection Sensor	Version Information	
Elantra Coupe(JK)	2015	USA	Occupant Detection Sensor	Read Fault Code	
Elantra Coupe(JK)	2015	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	Occupant Detection Sensor	Read Data Stream	
Elantra Coupe(JK)	2015	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra Coupe(JK)	2015	USA	Smart Junction Block	Version Information	
Elantra Coupe(JK)	2015	USA	Smart Junction Block	Read Fault Code	
Elantra Coupe(JK)	2015	USA	Smart Junction Block	Clear Fault Memory	
Elantra Coupe(JK)	2015	USA	Smart Junction Block	Read Data Stream	
Elantra Coupe(JK)	2015	USA	Smart Junction Block	Actuation Test	
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra Coupe(JK)	2015	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Version Information	
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra Coupe(JK)	2014	USA	TCM(Transmission Control Module)	Version Information	
Elantra Coupe(JK)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra Coupe(JK)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra Coupe(JK)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra Coupe(JK)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra Coupe(JK)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra Coupe(JK)	2014	USA	Electronic Stability Control	Version Information	
Elantra Coupe(JK)	2014	USA	Electronic Stability Control	Read Fault Code	
Elantra Coupe(JK)	2014	USA	Electronic Stability Control	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	Electronic Stability Control	Read Data Stream	
Elantra Coupe(JK)	2014	USA	Electronic Stability Control	Actuation Test	
Elantra Coupe(JK)	2014	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra Coupe(JK)	2014	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra Coupe(JK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra Coupe(JK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra Coupe(JK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra Coupe(JK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra Coupe(JK)	2014	USA	AC(Air Conditioning)	Version Information	
Elantra Coupe(JK)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Elantra Coupe(JK)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Elantra Coupe(JK)	2014	USA	AC(Air Conditioning)	Actuation Test	
Elantra Coupe(JK)	2014	USA	BCM(Body Control Module)	Version Information	
Elantra Coupe(JK)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Elantra Coupe(JK)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Elantra Coupe(JK)	2014	USA	BCM(Body Control Module)	Actuation Test	
Elantra Coupe(JK)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Elantra Coupe(JK)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra Coupe(JK)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra Coupe(JK)	2014	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra Coupe(JK)	2014	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra Coupe(JK)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra Coupe(JK)	2014	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra Coupe(JK)	2014	USA	Auto Headlamp Leveling System	Version Information	
Elantra Coupe(JK)	2014	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra Coupe(JK)	2014	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra Coupe(JK)	2014	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra Coupe(JK)	2014	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra Coupe(JK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra Coupe(JK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra Coupe(JK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra Coupe(JK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra Coupe(JK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra Coupe(JK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra Coupe(JK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra Coupe(JK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra Coupe(JK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra Coupe(JK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra Coupe(JK)	2014	USA	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2014	USA	IMM(Immobilizer)	Special Function	Password
Elantra Coupe(JK)	2014	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Elantra Coupe(JK)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra Coupe(JK)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra Coupe(JK)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra Coupe(JK)	2014	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra Coupe(JK)	2014	USA	Smart Key Unit	Version Information	
Elantra Coupe(JK)	2014	USA	Smart Key Unit	Read Fault Code	
Elantra Coupe(JK)	2014	USA	Smart Key Unit	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	Smart Key Unit	Read Data Stream	
Elantra Coupe(JK)	2014	USA	Smart Key Unit	Actuation Test	
Elantra Coupe(JK)	2014	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra Coupe(JK)	2014	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra Coupe(JK)	2014	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra Coupe(JK)	2014	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra Coupe(JK)	2014	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra Coupe(JK)	2014	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra Coupe(JK)	2014	USA	Transmitter Code Saving	Read Data Stream	
Elantra Coupe(JK)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra Coupe(JK)	2014	USA	Cluster Module	Version Information	
Elantra Coupe(JK)	2014	USA	Cluster Module	Read Fault Code	
Elantra Coupe(JK)	2014	USA	Cluster Module	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	Cluster Module	Read Data Stream	
Elantra Coupe(JK)	2014	USA	Cluster Module	Actuation Test	
Elantra Coupe(JK)	2014	USA	Occupant Detection Sensor	Version Information	
Elantra Coupe(JK)	2014	USA	Occupant Detection Sensor	Read Fault Code	
Elantra Coupe(JK)	2014	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	Occupant Detection Sensor	Read Data Stream	
Elantra Coupe(JK)	2014	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra Coupe(JK)	2014	USA	Smart Junction Block	Version Information	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2014	USA	Smart Junction Block	Read Fault Code	
Elantra Coupe(JK)	2014	USA	Smart Junction Block	Clear Fault Memory	
Elantra Coupe(JK)	2014	USA	Smart Junction Block	Read Data Stream	
Elantra Coupe(JK)	2014	USA	Smart Junction Block	Actuation Test	
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra Coupe(JK)	2014	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Version Information	
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra Coupe(JK)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra Coupe(JK)	2013	USA	TCM(Transmission Control Module)	Version Information	
Elantra Coupe(JK)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra Coupe(JK)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra Coupe(JK)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra Coupe(JK)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra Coupe(JK)	2013	USA	Electronic Stability Control	Version Information	
Elantra Coupe(JK)	2013	USA	Electronic Stability Control	Read Fault Code	
Elantra Coupe(JK)	2013	USA	Electronic Stability Control	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	Electronic Stability Control	Read Data Stream	
Elantra Coupe(JK)	2013	USA	Electronic Stability Control	Actuation Test	
Elantra Coupe(JK)	2013	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Elantra Coupe(JK)	2013	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra Coupe(JK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra Coupe(JK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra Coupe(JK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra Coupe(JK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra Coupe(JK)	2013	USA	AC(Air Conditioning)	Version Information	
Elantra Coupe(JK)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Elantra Coupe(JK)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Elantra Coupe(JK)	2013	USA	AC(Air Conditioning)	Actuation Test	
Elantra Coupe(JK)	2013	USA	BCM(Body Control Module)	Version Information	
Elantra Coupe(JK)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Elantra Coupe(JK)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Elantra Coupe(JK)	2013	USA	BCM(Body Control Module)	Actuation Test	
Elantra Coupe(JK)	2013	USA	EPS(Electronic Power Steering)	Version Information	
Elantra Coupe(JK)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra Coupe(JK)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra Coupe(JK)	2013	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra Coupe(JK)	2013	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra Coupe(JK)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra Coupe(JK)	2013	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra Coupe(JK)	2013	USA	Auto Headlamp Leveling System	Version Information	
Elantra Coupe(JK)	2013	USA	Auto Headlamp Leveling System	Read Fault Code	
Elantra Coupe(JK)	2013	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	Auto Headlamp Leveling System	Read Data Stream	
Elantra Coupe(JK)	2013	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Elantra Coupe(JK)	2013	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Elantra Coupe(JK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra Coupe(JK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra Coupe(JK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra Coupe(JK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra Coupe(JK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra Coupe(JK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra Coupe(JK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Elantra Coupe(JK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra Coupe(JK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra Coupe(JK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra Coupe(JK)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Elantra Coupe(JK)	2013	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra Coupe(JK)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra Coupe(JK)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra Coupe(JK)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra Coupe(JK)	2013	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Elantra Coupe(JK)	2013	USA	Smart Key Unit	Version Information	
Elantra Coupe(JK)	2013	USA	Smart Key Unit	Read Fault Code	
Elantra Coupe(JK)	2013	USA	Smart Key Unit	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	Smart Key Unit	Read Data Stream	
Elantra Coupe(JK)	2013	USA	Smart Key Unit	Actuation Test	
Elantra Coupe(JK)	2013	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra Coupe(JK)	2013	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra Coupe(JK)	2013	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra Coupe(JK)	2013	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra Coupe(JK)	2013	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra Coupe(JK)	2013	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra Coupe(JK)	2013	USA	Transmitter Code Saving	Read Data Stream	
Elantra Coupe(JK)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra Coupe(JK)	2013	USA	Cluster Module	Version Information	
Elantra Coupe(JK)	2013	USA	Cluster Module	Read Fault Code	
Elantra Coupe(JK)	2013	USA	Cluster Module	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	Cluster Module	Read Data Stream	
Elantra Coupe(JK)	2013	USA	Cluster Module	Actuation Test	
Elantra Coupe(JK)	2013	USA	Occupant Detection Sensor	Version Information	
Elantra Coupe(JK)	2013	USA	Occupant Detection Sensor	Read Fault Code	
Elantra Coupe(JK)	2013	USA	Occupant Detection Sensor	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	Occupant Detection Sensor	Read Data Stream	
Elantra Coupe(JK)	2013	USA	Occupant Detection Sensor	Special Function	WCS Reset
Elantra Coupe(JK)	2013	USA	Smart Junction Block	Version Information	
Elantra Coupe(JK)	2013	USA	Smart Junction Block	Read Fault Code	
Elantra Coupe(JK)	2013	USA	Smart Junction Block	Clear Fault Memory	
Elantra Coupe(JK)	2013	USA	Smart Junction Block	Read Data Stream	
Elantra Coupe(JK)	2013	USA	Smart Junction Block	Actuation Test	
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra GT(GD)	2017	USA	TCM(Transmission Control Module)	Version Information	
Elantra GT(GD)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra GT(GD)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra GT(GD)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra GT(GD)	2017	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra GT(GD)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra GT(GD)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra GT(GD)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra GT(GD)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra GT(GD)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra GT(GD)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra GT(GD)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra GT(GD)	2017	USA	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
Elantra GT(GD)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change
Elantra GT(GD)	2017	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Elantra GT(GD)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Elantra GT(GD)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra GT(GD)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding

model	year	area	system	function	subfunction
Elantra GT(GD)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra GT(GD)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra GT(GD)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra GT(GD)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra GT(GD)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra GT(GD)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra GT(GD)	2017	USA	AC(Air Conditioning)	Version Information	
Elantra GT(GD)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Elantra GT(GD)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra GT(GD)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Elantra GT(GD)	2017	USA	AC(Air Conditioning)	Actuation Test	
Elantra GT(GD)	2017	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra GT(GD)	2017	USA	BCM(Body Control Module)	Version Information	
Elantra GT(GD)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Elantra GT(GD)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra GT(GD)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Elantra GT(GD)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Elantra GT(GD)	2017	USA	BCM(Body Control Module)	Actuation Test	
Elantra GT(GD)	2017	USA	BCM(Body Control Module)	Special Function	Service Reminder Setting
Elantra GT(GD)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Elantra GT(GD)	2017	USA	Motor Driven Power Steering	Version Information	
Elantra GT(GD)	2017	USA	Motor Driven Power Steering	Read Fault Code	
Elantra GT(GD)	2017	USA	Motor Driven Power Steering	Clear Fault Memory	
Elantra GT(GD)	2017	USA	Motor Driven Power Steering	Read Data Stream	
Elantra GT(GD)	2017	USA	Motor Driven Power Steering	Read FreezeData	
Elantra GT(GD)	2017	USA	Motor Driven Power Steering	Special Function	ASP Calibration
Elantra GT(GD)	2017	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
Elantra GT(GD)	2017	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering ECU)

model	year	area	system	function	subfunction
Elantra GT(GD)	2017	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering Motor)
Elantra GT(GD)	2017	USA	Smart Key Unit	Version Information	
Elantra GT(GD)	2017	USA	Smart Key Unit	Read Fault Code	
Elantra GT(GD)	2017	USA	Smart Key Unit	Clear Fault Memory	
Elantra GT(GD)	2017	USA	Smart Key Unit	Read Data Stream	
Elantra GT(GD)	2017	USA	Smart Key Unit	Actuation Test	
Elantra GT(GD)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra GT(GD)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra GT(GD)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra GT(GD)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra GT(GD)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra GT(GD)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra GT(GD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra GT(GD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra GT(GD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra GT(GD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra GT(GD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra GT(GD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra GT(GD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra GT(GD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra GT(GD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra GT(GD)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra GT(GD)	2017	USA	Adaptive Headlamp Lighting System	Version Information	
Elantra GT(GD)	2017	USA	Adaptive Headlamp Lighting System	Read Fault Code	
Elantra GT(GD)	2017	USA	Adaptive Headlamp Lighting System	Clear Fault Memory	
Elantra GT(GD)	2017	USA	Adaptive Headlamp Lighting System	Read Data Stream	
Elantra GT(GD)	2017	USA	Adaptive Headlamp Lighting System	Special Function	Level Initialization
Elantra GT(GD)	2017	USA	IMMO(Immobilizer)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra GT(GD)	2017	USA	IMMO(Immobilizer)	Clear Fault Memory	
Elantra GT(GD)	2017	USA	IMMO(Immobilizer)	Read Data Stream	
Elantra GT(GD)	2017	USA	IMMO(Immobilizer)	Special Function	Password
Elantra GT(GD)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching/Changing
Elantra GT(GD)	2017	USA	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Elantra GT(GD)	2017	USA	IMMO(Immobilizer)	Special Function	Limp Home Mode
Elantra GT(GD)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching
Elantra GT(GD)	2017	USA	CODE(Transmitter Code Saving)	Read Data Stream	
Elantra GT(GD)	2017	USA	CODE(Transmitter Code Saving)	Special Function	Code Saving
Elantra GT(GD)	2017	USA	Telematics Unit	Version Information	
Elantra GT(GD)	2017	USA	Telematics Unit	Read Fault Code	
Elantra GT(GD)	2017	USA	Telematics Unit	Clear Fault Memory	
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra GT(GD)	2017	USA	ECM(Engine Control Module)	Special Function	Cylinder Power
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Version Information	Balance(Optional)
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra GT(GD)	2016	USA	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Elantra GT(GD)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra GT(GD)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra GT(GD)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra GT(GD)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra GT(GD)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra GT(GD)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra GT(GD)	2016	USA	Electronic Stability Control	Version Information	
Elantra GT(GD)	2016	USA	Electronic Stability Control	Read Fault Code	
Elantra GT(GD)	2016	USA	Electronic Stability Control	Clear Fault Memory	
Elantra GT(GD)	2016	USA	Electronic Stability Control	Read Data Stream	
Elantra GT(GD)	2016	USA	Electronic Stability Control	Actuation Test	
Elantra GT(GD)	2016	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset
Elantra GT(GD)	2016	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra GT(GD)	2016	USA	Electronic Stability Control	Special Function	Variant Coding
Elantra GT(GD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra GT(GD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra GT(GD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra GT(GD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra GT(GD)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra GT(GD)	2016	USA	AC(Air Conditioning)	Version Information	
Elantra GT(GD)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Elantra GT(GD)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra GT(GD)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Elantra GT(GD)	2016	USA	AC(Air Conditioning)	Actuation Test	
Elantra GT(GD)	2016	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra GT(GD)	2016	USA	BCM(Body Control Module)	Version Information	
Elantra GT(GD)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Elantra GT(GD)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra GT(GD)	2016	USA	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra GT(GD)	2016	USA	BCM(Body Control Module)	Actuation Test	
Elantra GT(GD)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Elantra GT(GD)	2016	USA	EPB(Electrical Parking Brake)	Version Information	
Elantra GT(GD)	2016	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Elantra GT(GD)	2016	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Elantra GT(GD)	2016	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Elantra GT(GD)	2016	USA	EPB(Electrical Parking Brake)	Actuation Test	
Elantra GT(GD)	2016	USA	EPB(Electrical Parking Brake)	Special Function	G-Sensor Calibration
Elantra GT(GD)	2016	USA	EPB(Electrical Parking Brake)	Special Function	Brake Pad Change
Elantra GT(GD)	2016	USA	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Elantra GT(GD)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Elantra GT(GD)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra GT(GD)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra GT(GD)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra GT(GD)	2016	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra GT(GD)	2016	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra GT(GD)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra GT(GD)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra GT(GD)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Elantra GT(GD)	2016	USA	AFS(Adaptive Front Lighting System)	Version Information	
Elantra GT(GD)	2016	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Elantra GT(GD)	2016	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Elantra GT(GD)	2016	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Elantra GT(GD)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Elantra GT(GD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra GT(GD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra GT(GD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra GT(GD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Elantra GT(GD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra GT(GD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra GT(GD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra GT(GD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra GT(GD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra GT(GD)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra GT(GD)	2016	USA	IMM(Immobilizer)	Read Fault Code	
Elantra GT(GD)	2016	USA	IMM(Immobilizer)	Clear Fault Memory	
Elantra GT(GD)	2016	USA	IMM(Immobilizer)	Read Data Stream	
Elantra GT(GD)	2016	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Elantra GT(GD)	2016	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra GT(GD)	2016	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra GT(GD)	2016	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra GT(GD)	2016	USA	Smart Key Unit	Version Information	
Elantra GT(GD)	2016	USA	Smart Key Unit	Read Fault Code	
Elantra GT(GD)	2016	USA	Smart Key Unit	Clear Fault Memory	
Elantra GT(GD)	2016	USA	Smart Key Unit	Read Data Stream	
Elantra GT(GD)	2016	USA	Smart Key Unit	Actuation Test	
Elantra GT(GD)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra GT(GD)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra GT(GD)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra GT(GD)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra GT(GD)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra GT(GD)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra GT(GD)	2016	USA	Transmitter Code Saving	Read Data Stream	
Elantra GT(GD)	2016	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra GT(GD)	2016	USA	Cluster Module	Version Information	
Elantra GT(GD)	2016	USA	Cluster Module	Read Fault Code	
Elantra GT(GD)	2016	USA	Cluster Module	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra GT(GD)	2016	USA	Cluster Module	Read Data Stream	
Elantra GT(GD)	2016	USA	Cluster Module	Actuation Test	
Elantra GT(GD)	2016	USA	Cluster Variant Coding	Version Information	
Elantra GT(GD)	2016	USA	Cluster Variant Coding	Read Fault Code	
Elantra GT(GD)	2016	USA	Cluster Variant Coding	Clear Fault Memory	
Elantra GT(GD)	2016	USA	Cluster Variant Coding	Special Function	CLU Variant Coding
Elantra GT(GD)	2016	USA	Service Reminder	Version Information	
Elantra GT(GD)	2016	USA	Service Reminder	Special Function	Service Reminder Setting
Elantra GT(GD)	2016	USA	Smart Junction Block	Version Information	
Elantra GT(GD)	2016	USA	Smart Junction Block	Read Fault Code	
Elantra GT(GD)	2016	USA	Smart Junction Block	Clear Fault Memory	
Elantra GT(GD)	2016	USA	Smart Junction Block	Read Data Stream	
Elantra GT(GD)	2016	USA	Smart Junction Block	Actuation Test	
Elantra GT(GD)	2016	USA	Telematics Unit	Version Information	
Elantra GT(GD)	2016	USA	Telematics Unit	Read Fault Code	
Elantra GT(GD)	2016	USA	Telematics Unit	Clear Fault Memory	
Elantra GT(GD)	2016	USA	Weight Classification System	Version Information	
Elantra GT(GD)	2016	USA	Weight Classification System	Read Fault Code	
Elantra GT(GD)	2016	USA	Weight Classification System	Clear Fault Memory	
Elantra GT(GD)	2016	USA	Weight Classification System	Read Data Stream	
Elantra GT(GD)	2016	USA	Weight Classification System	Special Function	WCS Reset
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra GT(GD)	2016	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Version Information	
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra GT(GD)	2015	USA	TCM(Transmission Control Module)	Version Information	
Elantra GT(GD)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra GT(GD)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra GT(GD)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra GT(GD)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra GT(GD)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra GT(GD)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Reset(ESP/ESC)(Only)
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra GT(GD)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Elantra GT(GD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra GT(GD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra GT(GD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra GT(GD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra GT(GD)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra GT(GD)	2015	USA	AC(Air Conditioning)	Version Information	
Elantra GT(GD)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Elantra GT(GD)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra GT(GD)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Elantra GT(GD)	2015	USA	AC(Air Conditioning)	Actuation Test	
Elantra GT(GD)	2015	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra GT(GD)	2015	USA	BCM(Body Control Module)	Version Information	
Elantra GT(GD)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Elantra GT(GD)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra GT(GD)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Elantra GT(GD)	2015	USA	BCM(Body Control Module)	Actuation Test	
Elantra GT(GD)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Elantra GT(GD)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Elantra GT(GD)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra GT(GD)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra GT(GD)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra GT(GD)	2015	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra GT(GD)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra GT(GD)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra GT(GD)	2015	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra GT(GD)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Elantra GT(GD)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)

model	year	area	system	function	subfunction
Elantra GT(GD)	2015	USA	AFS(Adaptive Front Lighting System)	Version Information	
Elantra GT(GD)	2015	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Elantra GT(GD)	2015	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Elantra GT(GD)	2015	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Elantra GT(GD)	2015	USA	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Elantra GT(GD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra GT(GD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra GT(GD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra GT(GD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra GT(GD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra GT(GD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra GT(GD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra GT(GD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra GT(GD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra GT(GD)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra GT(GD)	2015	USA	IMM(Immobilizer)	Read Fault Code	
Elantra GT(GD)	2015	USA	IMM(Immobilizer)	Clear Fault Memory	
Elantra GT(GD)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Elantra GT(GD)	2015	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Elantra GT(GD)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra GT(GD)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra GT(GD)	2015	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra GT(GD)	2015	USA	Smart Key Unit	Version Information	
Elantra GT(GD)	2015	USA	Smart Key Unit	Read Fault Code	
Elantra GT(GD)	2015	USA	Smart Key Unit	Clear Fault Memory	
Elantra GT(GD)	2015	USA	Smart Key Unit	Read Data Stream	
Elantra GT(GD)	2015	USA	Smart Key Unit	Actuation Test	
Elantra GT(GD)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra GT(GD)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Elantra GT(GD)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra GT(GD)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra GT(GD)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra GT(GD)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra GT(GD)	2015	USA	Transmitter Code Saving	Read Data Stream	
Elantra GT(GD)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra GT(GD)	2015	USA	Cluster Module	Version Information	
Elantra GT(GD)	2015	USA	Cluster Module	Read Fault Code	
Elantra GT(GD)	2015	USA	Cluster Module	Clear Fault Memory	
Elantra GT(GD)	2015	USA	Cluster Module	Read Data Stream	
Elantra GT(GD)	2015	USA	Cluster Module	Actuation Test	
Elantra GT(GD)	2015	USA	Cluster Variant Coding	Version Information	
Elantra GT(GD)	2015	USA	Cluster Variant Coding	Read Fault Code	
Elantra GT(GD)	2015	USA	Cluster Variant Coding	Clear Fault Memory	
Elantra GT(GD)	2015	USA	Cluster Variant Coding	Special Function	CLU Variant Coding
Elantra GT(GD)	2015	USA	Smart Junction Block	Version Information	
Elantra GT(GD)	2015	USA	Smart Junction Block	Read Fault Code	
Elantra GT(GD)	2015	USA	Smart Junction Block	Clear Fault Memory	
Elantra GT(GD)	2015	USA	Smart Junction Block	Read Data Stream	
Elantra GT(GD)	2015	USA	Smart Junction Block	Actuation Test	
Elantra GT(GD)	2015	USA	Telematics Unit	Version Information	
Elantra GT(GD)	2015	USA	Telematics Unit	Read Fault Code	
Elantra GT(GD)	2015	USA	Telematics Unit	Clear Fault Memory	
Elantra GT(GD)	2015	USA	Weight Classification System	Version Information	
Elantra GT(GD)	2015	USA	Weight Classification System	Read Fault Code	
Elantra GT(GD)	2015	USA	Weight Classification System	Clear Fault Memory	
Elantra GT(GD)	2015	USA	Weight Classification System	Read Data Stream	
Elantra GT(GD)	2015	USA	Weight Classification System	Special Function	WCS Reset
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra GT(GD)	2015	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Release(Optional)
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Version Information	
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra GT(GD)	2014	USA	TCM(Transmission Control Module)	Version Information	
Elantra GT(GD)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra GT(GD)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra GT(GD)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra GT(GD)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra GT(GD)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra GT(GD)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra GT(GD)	2014	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra GT(GD)	2014	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra GT(GD)	2014	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra GT(GD)	2014	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra GT(GD)	2014	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra GT(GD)	2014	USA	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration

model	year	area	system	function	subfunction
Elantra GT(GD)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change
Elantra GT(GD)	2014	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Elantra GT(GD)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Elantra GT(GD)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Reset(ESP/ESC/ABS)
Elantra GT(GD)	2014	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra GT(GD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra GT(GD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra GT(GD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra GT(GD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra GT(GD)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra GT(GD)	2014	USA	AC(Air Conditioning)	Version Information	
Elantra GT(GD)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Elantra GT(GD)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra GT(GD)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Elantra GT(GD)	2014	USA	AC(Air Conditioning)	Actuation Test	
Elantra GT(GD)	2014	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra GT(GD)	2014	USA	BCM(Body Control Module)	Version Information	
Elantra GT(GD)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Elantra GT(GD)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra GT(GD)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Elantra GT(GD)	2014	USA	BCM(Body Control Module)	Actuation Test	
Elantra GT(GD)	2014	USA	BCM(Body Control Module)	Special Function	User Option
Elantra GT(GD)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Elantra GT(GD)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra GT(GD)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra GT(GD)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra GT(GD)	2014	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra GT(GD)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Elantra GT(GD)	2014	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra GT(GD)	2014	USA	AFS(Adaptive Front Lighting System)	Version Information	
Elantra GT(GD)	2014	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Elantra GT(GD)	2014	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Elantra GT(GD)	2014	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Elantra GT(GD)	2014	USA	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Elantra GT(GD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra GT(GD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra GT(GD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra GT(GD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra GT(GD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra GT(GD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra GT(GD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra GT(GD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra GT(GD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra GT(GD)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra GT(GD)	2014	USA	IMM(Immobilizer)	Read Fault Code	
Elantra GT(GD)	2014	USA	IMM(Immobilizer)	Clear Fault Memory	
Elantra GT(GD)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Elantra GT(GD)	2014	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Elantra GT(GD)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra GT(GD)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra GT(GD)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra GT(GD)	2014	USA	Smart Key Unit	Version Information	
Elantra GT(GD)	2014	USA	Smart Key Unit	Read Fault Code	
Elantra GT(GD)	2014	USA	Smart Key Unit	Clear Fault Memory	
Elantra GT(GD)	2014	USA	Smart Key Unit	Read Data Stream	
Elantra GT(GD)	2014	USA	Smart Key Unit	Actuation Test	

model	year	area	system	function	subfunction
Elantra GT(GD)	2014	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra GT(GD)	2014	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra GT(GD)	2014	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra GT(GD)	2014	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra GT(GD)	2014	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra GT(GD)	2014	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra GT(GD)	2014	USA	Transmitter Code Saving	Read Data Stream	
Elantra GT(GD)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra GT(GD)	2014	USA	Cluster Module	Version Information	
Elantra GT(GD)	2014	USA	Cluster Module	Read Fault Code	
Elantra GT(GD)	2014	USA	Cluster Module	Clear Fault Memory	
Elantra GT(GD)	2014	USA	Cluster Module	Read Data Stream	
Elantra GT(GD)	2014	USA	Cluster Module	Actuation Test	
Elantra GT(GD)	2014	USA	Cluster Variant Coding	Version Information	
Elantra GT(GD)	2014	USA	Cluster Variant Coding	Read Fault Code	
Elantra GT(GD)	2014	USA	Cluster Variant Coding	Clear Fault Memory	
Elantra GT(GD)	2014	USA	Cluster Variant Coding	Special Function	CLU Variant Coding
Elantra GT(GD)	2014	USA	Smart Junction Block	Version Information	
Elantra GT(GD)	2014	USA	Smart Junction Block	Read Fault Code	
Elantra GT(GD)	2014	USA	Smart Junction Block	Clear Fault Memory	
Elantra GT(GD)	2014	USA	Smart Junction Block	Read Data Stream	
Elantra GT(GD)	2014	USA	Smart Junction Block	Actuation Test	
Elantra GT(GD)	2014	USA	Telematics Unit	Version Information	
Elantra GT(GD)	2014	USA	Telematics Unit	Read Fault Code	
Elantra GT(GD)	2014	USA	Telematics Unit	Clear Fault Memory	
Elantra GT(GD)	2014	USA	Weight Classification System	Version Information	
Elantra GT(GD)	2014	USA	Weight Classification System	Read Fault Code	
Elantra GT(GD)	2014	USA	Weight Classification System	Clear Fault Memory	
Elantra GT(GD)	2014	USA	Weight Classification System	Read Data Stream	

model	year	area	system	function	subfunction
Elantra GT(GD)	2014	USA	Weight Classification System	Special Function	WCS Reset
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra GT(GD)	2014	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Version Information	
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Elantra GT(GD)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Elantra GT(GD)	2013	USA	TCM(Transmission Control Module)	Version Information	
Elantra GT(GD)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra GT(GD)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra GT(GD)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra GT(GD)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra GT(GD)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra GT(GD)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Elantra GT(GD)	2013	USA	ABS(Anti-lock Braking System)	Version Information	
Elantra GT(GD)	2013	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Elantra GT(GD)	2013	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Elantra GT(GD)	2013	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Elantra GT(GD)	2013	USA	ABS(Anti-lock Braking System)	Actuation Test	
Elantra GT(GD)	2013	USA	ABS(Anti-lock Braking System)	Special Function	G-Sensor Calibration
Elantra GT(GD)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change
Elantra GT(GD)	2013	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Elantra GT(GD)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Elantra GT(GD)	2013	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Elantra GT(GD)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Elantra GT(GD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra GT(GD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra GT(GD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra GT(GD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra GT(GD)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Elantra GT(GD)	2013	USA	AC(Air Conditioning)	Version Information	
Elantra GT(GD)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Elantra GT(GD)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra GT(GD)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Elantra GT(GD)	2013	USA	AC(Air Conditioning)	Actuation Test	
Elantra GT(GD)	2013	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Elantra GT(GD)	2013	USA	BCM(Body Control Module)	Version Information	
Elantra GT(GD)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Elantra GT(GD)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Elantra GT(GD)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Elantra GT(GD)	2013	USA	BCM(Body Control Module)	Actuation Test	
Elantra GT(GD)	2013	USA	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Elantra GT(GD)	2013	USA	EPS(Electronic Power Steering)	Version Information	
Elantra GT(GD)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra GT(GD)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra GT(GD)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra GT(GD)	2013	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra GT(GD)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra GT(GD)	2013	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra GT(GD)	2013	USA	AFS(Adaptive Front Lighting System)	Version Information	
Elantra GT(GD)	2013	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Elantra GT(GD)	2013	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Elantra GT(GD)	2013	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Elantra GT(GD)	2013	USA	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Elantra GT(GD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra GT(GD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra GT(GD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra GT(GD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra GT(GD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra GT(GD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra GT(GD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra GT(GD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra GT(GD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra GT(GD)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Elantra GT(GD)	2013	USA	IMM(Immobilizer)	Read Fault Code	
Elantra GT(GD)	2013	USA	IMM(Immobilizer)	Clear Fault Memory	
Elantra GT(GD)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Elantra GT(GD)	2013	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra GT(GD)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra GT(GD)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Elantra GT(GD)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra GT(GD)	2013	USA	Smart Key Unit	Version Information	
Elantra GT(GD)	2013	USA	Smart Key Unit	Read Fault Code	
Elantra GT(GD)	2013	USA	Smart Key Unit	Clear Fault Memory	
Elantra GT(GD)	2013	USA	Smart Key Unit	Read Data Stream	
Elantra GT(GD)	2013	USA	Smart Key Unit	Actuation Test	
Elantra GT(GD)	2013	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Elantra GT(GD)	2013	USA	Smart Key Unit	Special Function	Antenna Status Check
Elantra GT(GD)	2013	USA	Smart Key Unit	Special Function	Current FOB Key Check
Elantra GT(GD)	2013	USA	Smart Key Unit	Special Function	FOB Key Status Information
Elantra GT(GD)	2013	USA	Smart Key Unit	Special Function	Neutralization Mode
Elantra GT(GD)	2013	USA	Smart Key Unit	Special Function	SMK Status Information
Elantra GT(GD)	2013	USA	Cluster Module	Version Information	
Elantra GT(GD)	2013	USA	Cluster Module	Read Fault Code	
Elantra GT(GD)	2013	USA	Cluster Module	Clear Fault Memory	
Elantra GT(GD)	2013	USA	Cluster Module	Read Data Stream	
Elantra GT(GD)	2013	USA	Cluster Module	Actuation Test	
Elantra GT(GD)	2013	USA	Cluster Variant Coding	Version Information	
Elantra GT(GD)	2013	USA	Cluster Variant Coding	Read Fault Code	
Elantra GT(GD)	2013	USA	Cluster Variant Coding	Clear Fault Memory	
Elantra GT(GD)	2013	USA	Cluster Variant Coding	Special Function	CLU Variant Coding
Elantra GT(GD)	2013	USA	Smart Junction Block	Version Information	
Elantra GT(GD)	2013	USA	Smart Junction Block	Read Fault Code	
Elantra GT(GD)	2013	USA	Smart Junction Block	Clear Fault Memory	
Elantra GT(GD)	2013	USA	Smart Junction Block	Read Data Stream	
Elantra GT(GD)	2013	USA	Smart Junction Block	Actuation Test	
Elantra GT(GD)	2013	USA	Telematics Unit	Version Information	
Elantra GT(GD)	2013	USA	Telematics Unit	Read Fault Code	
Elantra GT(GD)	2013	USA	Telematics Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra GT(GD)	2013	USA	Transmitter Code Saving	Read Data Stream	
Elantra GT(GD)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra GT(GD)	2013	USA	Weight Classification System	Version Information	
Elantra GT(GD)	2013	USA	Weight Classification System	Read Fault Code	
Elantra GT(GD)	2013	USA	Weight Classification System	Clear Fault Memory	
Elantra GT(GD)	2013	USA	Weight Classification System	Read Data Stream	
Elantra GT(GD)	2013	USA	Weight Classification System	Special Function	WCS Reset
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Version Information	
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra Touring(FD)	2012	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra Touring(FD)	2012	USA	TCM(Transmission Control Module)	Version Information	
Elantra Touring(FD)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra Touring(FD)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra Touring(FD)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra Touring(FD)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Elantra Touring(FD)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra Touring(FD)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra Touring(FD)	2012	USA	Electronic Stability Control	Version Information	
Elantra Touring(FD)	2012	USA	Electronic Stability Control	Read Fault Code	
Elantra Touring(FD)	2012	USA	Electronic Stability Control	Clear Fault Memory	

model	year	area	system	function	subfunction
Elantra Touring(FD)	2012	USA	Electronic Stability Control	Read Data Stream	
Elantra Touring(FD)	2012	USA	Electronic Stability Control	Actuation Test	
Elantra Touring(FD)	2012	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Elantra Touring(FD)	2012	USA	Electronic Stability Control	Special Function	Reset(FSP/ESC/OnLk)
Elantra Touring(FD)	2012	USA	Electronic Stability Control	Special Function	Steering Angle Learning
Elantra Touring(FD)	2012	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra Touring(FD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra Touring(FD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra Touring(FD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra Touring(FD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra Touring(FD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra Touring(FD)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra Touring(FD)	2012	USA	AC(Air Conditioning)	Version Information	
Elantra Touring(FD)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Elantra Touring(FD)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra Touring(FD)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Elantra Touring(FD)	2012	USA	AC(Air Conditioning)	Actuation Test	
Elantra Touring(FD)	2012	USA	BCM(Body Control Module)	Version Information	
Elantra Touring(FD)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Elantra Touring(FD)	2012	USA	BCM(Body Control Module)	Actuation Test	
Elantra Touring(FD)	2012	USA	BCM(Body Control Module)	Special Function	User Option
Elantra Touring(FD)	2012	USA	EPS(Electronic Power Steering)	Version Information	
Elantra Touring(FD)	2012	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra Touring(FD)	2012	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra Touring(FD)	2012	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra Touring(FD)	2012	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra Touring(FD)	2012	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra Touring(FD)	2012	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Elantra Touring(FD)	2012	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra Touring(FD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra Touring(FD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra Touring(FD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra Touring(FD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra Touring(FD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra Touring(FD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra Touring(FD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra Touring(FD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra Touring(FD)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra Touring(FD)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Elantra Touring(FD)	2012	USA	IMM(Immobilizer)	Special Function	Password
Elantra Touring(FD)	2012	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Elantra Touring(FD)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra Touring(FD)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra Touring(FD)	2012	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra Touring(FD)	2012	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra Touring(FD)	2012	USA	Transmitter Code Saving	Read Data Stream	
Elantra Touring(FD)	2012	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Version Information	
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Actuation Test	
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test

model	year	area	system	function	subfunction
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra Touring(FD)	2011	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra Touring(FD)	2011	USA	TCM(Transmission Control Module)	Version Information	
Elantra Touring(FD)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra Touring(FD)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra Touring(FD)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra Touring(FD)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra Touring(FD)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra Touring(FD)	2011	USA	Electronic Stability Control	Version Information	
Elantra Touring(FD)	2011	USA	Electronic Stability Control	Read Fault Code	
Elantra Touring(FD)	2011	USA	Electronic Stability Control	Clear Fault Memory	
Elantra Touring(FD)	2011	USA	Electronic Stability Control	Read Data Stream	
Elantra Touring(FD)	2011	USA	Electronic Stability Control	Actuation Test	
Elantra Touring(FD)	2011	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Elantra Touring(FD)	2011	USA	Electronic Stability Control	Special Function	Steering Angle Learning
Elantra Touring(FD)	2011	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra Touring(FD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra Touring(FD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra Touring(FD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra Touring(FD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra Touring(FD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra Touring(FD)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra Touring(FD)	2011	USA	AC(Air Conditioning)	Version Information	
Elantra Touring(FD)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Elantra Touring(FD)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra Touring(FD)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Elantra Touring(FD)	2011	USA	AC(Air Conditioning)	Actuation Test	
Elantra Touring(FD)	2011	USA	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Elantra Touring(FD)	2011	USA	BCM(Body Control Module)	Read Data Stream	
Elantra Touring(FD)	2011	USA	BCM(Body Control Module)	Actuation Test	
Elantra Touring(FD)	2011	USA	BCM(Body Control Module)	Special Function	User Option
Elantra Touring(FD)	2011	USA	EPS(Electronic Power Steering)	Version Information	
Elantra Touring(FD)	2011	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra Touring(FD)	2011	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra Touring(FD)	2011	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra Touring(FD)	2011	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra Touring(FD)	2011	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra Touring(FD)	2011	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra Touring(FD)	2011	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra Touring(FD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra Touring(FD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra Touring(FD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra Touring(FD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra Touring(FD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra Touring(FD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra Touring(FD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra Touring(FD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra Touring(FD)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra Touring(FD)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Elantra Touring(FD)	2011	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Elantra Touring(FD)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra Touring(FD)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra Touring(FD)	2011	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra Touring(FD)	2011	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra Touring(FD)	2011	USA	Transmitter Code Saving	Read Data Stream	
Elantra Touring(FD)	2011	USA	Transmitter Code Saving	Special Function	Code Saving

model	year	area	system	function	subfunction
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Version Information	
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Actuation Test	
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra Touring(FD)	2010	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra Touring(FD)	2010	USA	TCM(Transmission Control Module)	Version Information	
Elantra Touring(FD)	2010	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra Touring(FD)	2010	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra Touring(FD)	2010	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra Touring(FD)	2010	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra Touring(FD)	2010	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra Touring(FD)	2010	USA	Electronic Stability Control	Version Information	
Elantra Touring(FD)	2010	USA	Electronic Stability Control	Read Fault Code	
Elantra Touring(FD)	2010	USA	Electronic Stability Control	Clear Fault Memory	
Elantra Touring(FD)	2010	USA	Electronic Stability Control	Read Data Stream	
Elantra Touring(FD)	2010	USA	Electronic Stability Control	Actuation Test	
Elantra Touring(FD)	2010	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Elantra Touring(FD)	2010	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra Touring(FD)	2010	USA	Electronic Stability Control	Special Function	Solenoid Valve Test
Elantra Touring(FD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra Touring(FD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Elantra Touring(FD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra Touring(FD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra Touring(FD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra Touring(FD)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra Touring(FD)	2010	USA	AC(Air Conditioning)	Version Information	
Elantra Touring(FD)	2010	USA	AC(Air Conditioning)	Read Fault Code	
Elantra Touring(FD)	2010	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra Touring(FD)	2010	USA	AC(Air Conditioning)	Read Data Stream	
Elantra Touring(FD)	2010	USA	AC(Air Conditioning)	Actuation Test	
Elantra Touring(FD)	2010	USA	BCM(Body Control Module)	Version Information	
Elantra Touring(FD)	2010	USA	BCM(Body Control Module)	Read Data Stream	
Elantra Touring(FD)	2010	USA	BCM(Body Control Module)	Actuation Test	
Elantra Touring(FD)	2010	USA	BCM(Body Control Module)	Special Function	User Option
Elantra Touring(FD)	2010	USA	EPS(Electronic Power Steering)	Version Information	
Elantra Touring(FD)	2010	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra Touring(FD)	2010	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra Touring(FD)	2010	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra Touring(FD)	2010	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra Touring(FD)	2010	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Elantra Touring(FD)	2010	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra Touring(FD)	2010	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra Touring(FD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra Touring(FD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra Touring(FD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra Touring(FD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra Touring(FD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra Touring(FD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra Touring(FD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
Elantra Touring(FD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra Touring(FD)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra Touring(FD)	2010	USA	IMM(Immobilizer)	Read Data Stream	
Elantra Touring(FD)	2010	USA	IMM(Immobilizer)	Special Function	Password
Elantra Touring(FD)	2010	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Elantra Touring(FD)	2010	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra Touring(FD)	2010	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra Touring(FD)	2010	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra Touring(FD)	2010	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra Touring(FD)	2010	USA	Transmitter Code Saving	Read Data Stream	
Elantra Touring(FD)	2010	USA	Transmitter Code Saving	Special Function	Code Saving
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Version Information	
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Read Fault Code	
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Clear Fault Memory	
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Read Data Stream	
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Actuation Test	
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Special Function	Read VIN
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Special Function	Write VIN
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Elantra Touring(FD)	2009	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Elantra Touring(FD)	2009	USA	TCM(Transmission Control Module)	Version Information	
Elantra Touring(FD)	2009	USA	TCM(Transmission Control Module)	Read Fault Code	
Elantra Touring(FD)	2009	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Elantra Touring(FD)	2009	USA	TCM(Transmission Control Module)	Read Data Stream	
Elantra Touring(FD)	2009	USA	TCM(Transmission Control Module)	Actuation Test	
Elantra Touring(FD)	2009	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Elantra Touring(FD)	2009	USA	Electronic Stability Control	Version Information	

model	year	area	system	function	subfunction
Elantra Touring(FD)	2009	USA	Electronic Stability Control	Read Fault Code	
Elantra Touring(FD)	2009	USA	Electronic Stability Control	Clear Fault Memory	
Elantra Touring(FD)	2009	USA	Electronic Stability Control	Read Data Stream	
Elantra Touring(FD)	2009	USA	Electronic Stability Control	Actuation Test	
Elantra Touring(FD)	2009	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset(FSP/ESC/Only)
Elantra Touring(FD)	2009	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Elantra Touring(FD)	2009	USA	Electronic Stability Control	Special Function	Solenoid Valve Test
Elantra Touring(FD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Elantra Touring(FD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Elantra Touring(FD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Elantra Touring(FD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Elantra Touring(FD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Elantra Touring(FD)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Elantra Touring(FD)	2009	USA	AC(Air Conditioning)	Version Information	
Elantra Touring(FD)	2009	USA	AC(Air Conditioning)	Read Fault Code	
Elantra Touring(FD)	2009	USA	AC(Air Conditioning)	Clear Fault Memory	
Elantra Touring(FD)	2009	USA	AC(Air Conditioning)	Read Data Stream	
Elantra Touring(FD)	2009	USA	AC(Air Conditioning)	Actuation Test	
Elantra Touring(FD)	2009	USA	BCM(Body Control Module)	Version Information	
Elantra Touring(FD)	2009	USA	BCM(Body Control Module)	Read Data Stream	
Elantra Touring(FD)	2009	USA	BCM(Body Control Module)	Actuation Test	
Elantra Touring(FD)	2009	USA	BCM(Body Control Module)	Special Function	User Option
Elantra Touring(FD)	2009	USA	EPS(Electronic Power Steering)	Version Information	
Elantra Touring(FD)	2009	USA	EPS(Electronic Power Steering)	Read Fault Code	
Elantra Touring(FD)	2009	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Elantra Touring(FD)	2009	USA	EPS(Electronic Power Steering)	Read Data Stream	
Elantra Touring(FD)	2009	USA	EPS(Electronic Power Steering)	Read FreezeData	
Elantra Touring(FD)	2009	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
Elantra Touring(FD)	2009	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Elantra Touring(FD)	2009	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Elantra Touring(FD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Elantra Touring(FD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Elantra Touring(FD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Elantra Touring(FD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Elantra Touring(FD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Elantra Touring(FD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Elantra Touring(FD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Elantra Touring(FD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Elantra Touring(FD)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Elantra Touring(FD)	2009	USA	IMM(Immobilizer)	Read Data Stream	
Elantra Touring(FD)	2009	USA	IMM(Immobilizer)	Special Function	Password
Elantra Touring(FD)	2009	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Elantra Touring(FD)	2009	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Elantra Touring(FD)	2009	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Elantra Touring(FD)	2009	USA	IMM(Immobilizer)	Special Function	Teaching
Elantra Touring(FD)	2009	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Elantra Touring(FD)	2009	USA	Transmitter Code Saving	Read Data Stream	
Elantra Touring(FD)	2009	USA	Transmitter Code Saving	Special Function	Code Saving
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Version Information	
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Read Fault Code	
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Clear Fault Memory	
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Read Data Stream	
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Read FreezeData	
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Actuation Test	
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Special Function	Read VIN
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Special Function	Write VIN
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting

model	year	area	system	function	subfunction
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Entourage(EP)	2010	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Entourage(EP)	2010	USA	TCM(Transmission Control Module)	Version Information	
Entourage(EP)	2010	USA	TCM(Transmission Control Module)	Read Fault Code	
Entourage(EP)	2010	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Entourage(EP)	2010	USA	TCM(Transmission Control Module)	Read Data Stream	
Entourage(EP)	2010	USA	TCM(Transmission Control Module)	Read FreezeData	
Entourage(EP)	2010	USA	TCM(Transmission Control Module)	Actuation Test	
Entourage(EP)	2010	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Entourage(EP)	2010	USA	ABS(Anti-lock Braking System)	Version Information	
Entourage(EP)	2010	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Entourage(EP)	2010	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Entourage(EP)	2010	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Entourage(EP)	2010	USA	ABS(Anti-lock Braking System)	Actuation Test	
Entourage(EP)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Entourage(EP)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Entourage(EP)	2010	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Entourage(EP)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Entourage(EP)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Entourage(EP)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Entourage(EP)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Entourage(EP)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Entourage(EP)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Entourage(EP)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Entourage(EP)	2010	USA	AC(Air Conditioning)	Version Information	
Entourage(EP)	2010	USA	AC(Air Conditioning)	Read Fault Code	
Entourage(EP)	2010	USA	AC(Air Conditioning)	Clear Fault Memory	
Entourage(EP)	2010	USA	AC(Air Conditioning)	Read Data Stream	
Entourage(EP)	2010	USA	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Entourage(EP)	2010	USA	BCM(Body Control Module)	Version Information	
Entourage(EP)	2010	USA	BCM(Body Control Module)	Read Fault Code	
Entourage(EP)	2010	USA	BCM(Body Control Module)	Clear Fault Memory	
Entourage(EP)	2010	USA	BCM(Body Control Module)	Read Data Stream	
Entourage(EP)	2010	USA	BCM(Body Control Module)	Actuation Test	
Entourage(EP)	2010	USA	Power Tailgate	Version Information	
Entourage(EP)	2010	USA	Power Tailgate	Read Fault Code	
Entourage(EP)	2010	USA	Power Tailgate	Clear Fault Memory	
Entourage(EP)	2010	USA	Power Tailgate	Read Data Stream	
Entourage(EP)	2010	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Entourage(EP)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Entourage(EP)	2010	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Entourage(EP)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Entourage(EP)	2010	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Entourage(EP)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Entourage(EP)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Entourage(EP)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Entourage(EP)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Entourage(EP)	2010	USA	IMM(Immobilizer)	Read Data Stream	
Entourage(EP)	2010	USA	IMM(Immobilizer)	Special Function	Password
Entourage(EP)	2010	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Entourage(EP)	2010	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Entourage(EP)	2010	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Entourage(EP)	2010	USA	IMM(Immobilizer)	Special Function	Teaching
Entourage(EP)	2010	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Entourage(EP)	2010	USA	Power Sliding Door	Version Information	
Entourage(EP)	2010	USA	Power Sliding Door	Read Fault Code	
Entourage(EP)	2010	USA	Power Sliding Door	Clear Fault Memory	
Entourage(EP)	2010	USA	Power Sliding Door	Read Data Stream	
Entourage(EP)	2010	USA	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
Entourage(EP)	2010	USA	Transmitter Code Saving	Special Function	Code Saving
Entourage(EP)	2009	USA	ECM(Engine Control Module)	Version Information	
Entourage(EP)	2009	USA	ECM(Engine Control Module)	Read Fault Code	
Entourage(EP)	2009	USA	ECM(Engine Control Module)	Clear Fault Memory	
Entourage(EP)	2009	USA	ECM(Engine Control Module)	Read Data Stream	
Entourage(EP)	2009	USA	ECM(Engine Control Module)	Read FreezeData	
Entourage(EP)	2009	USA	ECM(Engine Control Module)	Actuation Test	
Entourage(EP)	2009	USA	ECM(Engine Control Module)	Special Function	Read VIN
Entourage(EP)	2009	USA	ECM(Engine Control Module)	Special Function	Write VIN
Entourage(EP)	2009	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Entourage(EP)	2009	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Entourage(EP)	2009	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Entourage(EP)	2009	USA	TCM(Transmission Control Module)	Version Information	
Entourage(EP)	2009	USA	TCM(Transmission Control Module)	Read Fault Code	
Entourage(EP)	2009	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Entourage(EP)	2009	USA	TCM(Transmission Control Module)	Read Data Stream	
Entourage(EP)	2009	USA	TCM(Transmission Control Module)	Read FreezeData	
Entourage(EP)	2009	USA	TCM(Transmission Control Module)	Actuation Test	
Entourage(EP)	2009	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Entourage(EP)	2009	USA	ABS(Anti-lock Braking System)	Version Information	
Entourage(EP)	2009	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Entourage(EP)	2009	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Entourage(EP)	2009	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Entourage(EP)	2009	USA	ABS(Anti-lock Braking System)	Actuation Test	
Entourage(EP)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Steering Angle Sensor Calibration
Entourage(EP)	2009	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Entourage(EP)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Entourage(EP)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Entourage(EP)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Entourage(EP)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Entourage(EP)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Entourage(EP)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Entourage(EP)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Entourage(EP)	2009	USA	AC(Air Conditioning)	Version Information	
Entourage(EP)	2009	USA	AC(Air Conditioning)	Read Fault Code	
Entourage(EP)	2009	USA	AC(Air Conditioning)	Clear Fault Memory	
Entourage(EP)	2009	USA	AC(Air Conditioning)	Read Data Stream	
Entourage(EP)	2009	USA	AC(Air Conditioning)	Actuation Test	
Entourage(EP)	2009	USA	BCM(Body Control Module)	Version Information	
Entourage(EP)	2009	USA	BCM(Body Control Module)	Read Fault Code	
Entourage(EP)	2009	USA	BCM(Body Control Module)	Clear Fault Memory	
Entourage(EP)	2009	USA	BCM(Body Control Module)	Read Data Stream	
Entourage(EP)	2009	USA	BCM(Body Control Module)	Actuation Test	
Entourage(EP)	2009	USA	Power Tailgate	Version Information	
Entourage(EP)	2009	USA	Power Tailgate	Read Fault Code	
Entourage(EP)	2009	USA	Power Tailgate	Clear Fault Memory	
Entourage(EP)	2009	USA	Power Tailgate	Read Data Stream	
Entourage(EP)	2009	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Entourage(EP)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Entourage(EP)	2009	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Entourage(EP)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Entourage(EP)	2009	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Entourage(EP)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Entourage(EP)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Entourage(EP)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Entourage(EP)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Entourage(EP)	2009	USA	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Entourage(EP)	2009	USA	IMM(Immobilizer)	Special Function	Password
Entourage(EP)	2009	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Entourage(EP)	2009	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Entourage(EP)	2009	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Entourage(EP)	2009	USA	IMM(Immobilizer)	Special Function	Teaching
Entourage(EP)	2009	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Entourage(EP)	2009	USA	Power Sliding Door	Version Information	
Entourage(EP)	2009	USA	Power Sliding Door	Read Fault Code	
Entourage(EP)	2009	USA	Power Sliding Door	Clear Fault Memory	
Entourage(EP)	2009	USA	Power Sliding Door	Read Data Stream	
Entourage(EP)	2009	USA	Transmitter Code Saving	Read Data Stream	
Entourage(EP)	2009	USA	Transmitter Code Saving	Special Function	Code Saving
Entourage(EP)	2008	USA	ECM(Engine Control Module)	Version Information	
Entourage(EP)	2008	USA	ECM(Engine Control Module)	Read Fault Code	
Entourage(EP)	2008	USA	ECM(Engine Control Module)	Clear Fault Memory	
Entourage(EP)	2008	USA	ECM(Engine Control Module)	Read Data Stream	
Entourage(EP)	2008	USA	ECM(Engine Control Module)	Read FreezeData	
Entourage(EP)	2008	USA	ECM(Engine Control Module)	Actuation Test	
Entourage(EP)	2008	USA	ECM(Engine Control Module)	Special Function	Read VIN
Entourage(EP)	2008	USA	ECM(Engine Control Module)	Special Function	Write VIN
Entourage(EP)	2008	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Entourage(EP)	2008	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Entourage(EP)	2008	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Entourage(EP)	2008	USA	TCM(Transmission Control Module)	Version Information	
Entourage(EP)	2008	USA	TCM(Transmission Control Module)	Read Fault Code	
Entourage(EP)	2008	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Entourage(EP)	2008	USA	TCM(Transmission Control Module)	Read Data Stream	
Entourage(EP)	2008	USA	TCM(Transmission Control Module)	Read FreezeData	
Entourage(EP)	2008	USA	TCM(Transmission Control Module)	Actuation Test	
Entourage(EP)	2008	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Entourage(EP)	2008	USA	ABS(Anti-lock Braking System)	Version Information	
Entourage(EP)	2008	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Entourage(EP)	2008	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Entourage(EP)	2008	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Entourage(EP)	2008	USA	ABS(Anti-lock Braking System)	Actuation Test	
Entourage(EP)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Entourage(EP)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Entourage(EP)	2008	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Entourage(EP)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Entourage(EP)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Entourage(EP)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Entourage(EP)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Entourage(EP)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Entourage(EP)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Entourage(EP)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Entourage(EP)	2008	USA	AC(Air Conditioning)	Version Information	
Entourage(EP)	2008	USA	AC(Air Conditioning)	Read Fault Code	
Entourage(EP)	2008	USA	AC(Air Conditioning)	Clear Fault Memory	
Entourage(EP)	2008	USA	AC(Air Conditioning)	Read Data Stream	
Entourage(EP)	2008	USA	AC(Air Conditioning)	Actuation Test	
Entourage(EP)	2008	USA	BCM(Body Control Module)	Version Information	
Entourage(EP)	2008	USA	BCM(Body Control Module)	Read Fault Code	
Entourage(EP)	2008	USA	BCM(Body Control Module)	Clear Fault Memory	
Entourage(EP)	2008	USA	BCM(Body Control Module)	Read Data Stream	
Entourage(EP)	2008	USA	BCM(Body Control Module)	Actuation Test	
Entourage(EP)	2008	USA	Power Tailgate	Version Information	
Entourage(EP)	2008	USA	Power Tailgate	Read Fault Code	
Entourage(EP)	2008	USA	Power Tailgate	Clear Fault Memory	
Entourage(EP)	2008	USA	Power Tailgate	Read Data Stream	

model	year	area	system	function	subfunction
Entourage(EP)	2008	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Entourage(EP)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Entourage(EP)	2008	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Entourage(EP)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Entourage(EP)	2008	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Entourage(EP)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Entourage(EP)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Entourage(EP)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Entourage(EP)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Entourage(EP)	2008	USA	IMM(Immobilizer)	Read Data Stream	
Entourage(EP)	2008	USA	IMM(Immobilizer)	Special Function	Password
Entourage(EP)	2008	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Entourage(EP)	2008	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Entourage(EP)	2008	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Entourage(EP)	2008	USA	IMM(Immobilizer)	Special Function	Teaching
Entourage(EP)	2008	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Entourage(EP)	2008	USA	Power Sliding Door	Version Information	
Entourage(EP)	2008	USA	Power Sliding Door	Read Fault Code	
Entourage(EP)	2008	USA	Power Sliding Door	Clear Fault Memory	
Entourage(EP)	2008	USA	Power Sliding Door	Read Data Stream	
Entourage(EP)	2008	USA	Transmitter Code Saving	Read Data Stream	
Entourage(EP)	2008	USA	Transmitter Code Saving	Special Function	Code Saving
Entourage(EP)	2007	USA	ECM(Engine Control Module)	Version Information	
Entourage(EP)	2007	USA	ECM(Engine Control Module)	Read Fault Code	
Entourage(EP)	2007	USA	ECM(Engine Control Module)	Clear Fault Memory	
Entourage(EP)	2007	USA	ECM(Engine Control Module)	Read Data Stream	
Entourage(EP)	2007	USA	ECM(Engine Control Module)	Read FreezeData	
Entourage(EP)	2007	USA	ECM(Engine Control Module)	Actuation Test	
Entourage(EP)	2007	USA	ECM(Engine Control Module)	Special Function	Read VIN
Entourage(EP)	2007	USA	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Entourage(EP)	2007	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Entourage(EP)	2007	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Entourage(EP)	2007	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Entourage(EP)	2007	USA	TCM(Transmission Control Module)	Version Information	
Entourage(EP)	2007	USA	TCM(Transmission Control Module)	Read Fault Code	
Entourage(EP)	2007	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Entourage(EP)	2007	USA	TCM(Transmission Control Module)	Read Data Stream	
Entourage(EP)	2007	USA	TCM(Transmission Control Module)	Read FreezeData	
Entourage(EP)	2007	USA	TCM(Transmission Control Module)	Actuation Test	
Entourage(EP)	2007	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Entourage(EP)	2007	USA	ABS(Anti-lock Braking System)	Version Information	
Entourage(EP)	2007	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Entourage(EP)	2007	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Entourage(EP)	2007	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Entourage(EP)	2007	USA	ABS(Anti-lock Braking System)	Actuation Test	
Entourage(EP)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Steering Angle Sensor Calibration
Entourage(EP)	2007	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Entourage(EP)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Entourage(EP)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Entourage(EP)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Entourage(EP)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Entourage(EP)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Entourage(EP)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Entourage(EP)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Entourage(EP)	2007	USA	AC(Air Conditioning)	Version Information	
Entourage(EP)	2007	USA	AC(Air Conditioning)	Read Fault Code	
Entourage(EP)	2007	USA	AC(Air Conditioning)	Clear Fault Memory	
Entourage(EP)	2007	USA	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Entourage(EP)	2007	USA	AC(Air Conditioning)	Actuation Test	
Entourage(EP)	2007	USA	BCM(Body Control Module)	Version Information	
Entourage(EP)	2007	USA	BCM(Body Control Module)	Read Fault Code	
Entourage(EP)	2007	USA	BCM(Body Control Module)	Clear Fault Memory	
Entourage(EP)	2007	USA	BCM(Body Control Module)	Read Data Stream	
Entourage(EP)	2007	USA	BCM(Body Control Module)	Actuation Test	
Entourage(EP)	2007	USA	Power Tailgate	Version Information	
Entourage(EP)	2007	USA	Power Tailgate	Read Fault Code	
Entourage(EP)	2007	USA	Power Tailgate	Clear Fault Memory	
Entourage(EP)	2007	USA	Power Tailgate	Read Data Stream	
Entourage(EP)	2007	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Entourage(EP)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Entourage(EP)	2007	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Entourage(EP)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Entourage(EP)	2007	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Entourage(EP)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Entourage(EP)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Entourage(EP)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Entourage(EP)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Entourage(EP)	2007	USA	IMM(Immobilizer)	Read Data Stream	
Entourage(EP)	2007	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Entourage(EP)	2007	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Entourage(EP)	2007	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Entourage(EP)	2007	USA	IMM(Immobilizer)	Special Function	Teaching
Entourage(EP)	2007	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Entourage(EP)	2007	USA	Power Sliding Door	Version Information	
Entourage(EP)	2007	USA	Power Sliding Door	Read Fault Code	
Entourage(EP)	2007	USA	Power Sliding Door	Clear Fault Memory	
Entourage(EP)	2007	USA	Power Sliding Door	Read Data Stream	

model	year	area	system	function	subfunction
Entourage(EP)	2007	USA	Transmitter Code Saving	Read Data Stream	
Entourage(EP)	2007	USA	Transmitter Code Saving	Special Function	Code Saving
Equus(VI)	2016	USA	ECM(Engine Control Module)	Version Information	
Equus(VI)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Equus(VI)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Equus(VI)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Equus(VI)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Equus(VI)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Equus(VI)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus(VI)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Equus(VI)	2016	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Equus(VI)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Equus(VI)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Equus(VI)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Equus(VI)	2016	USA	TCM(Transmission Control Module)	Version Information	
Equus(VI)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Equus(VI)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Equus(VI)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Equus(VI)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Equus(VI)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Equus(VI)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus(VI)	2016	USA	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Replacement)
Equus(VI)	2016	USA	Electronic Stability Control	Version Information	
Equus(VI)	2016	USA	Electronic Stability Control	Read Fault Code	
Equus(VI)	2016	USA	Electronic Stability Control	Clear Fault Memory	
Equus(VI)	2016	USA	Electronic Stability Control	Read Data Stream	
Equus(VI)	2016	USA	Electronic Stability Control	Actuation Test	

model	year	area	system	function	subfunction
Equus(VI)	2016	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Equus(VI)	2016	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Equus(VI)	2016	USA	Electronic Stability Control	Special Function	SAS Calibration(CAN-ESP Only)
Equus(VI)	2016	USA	Electronic Stability Control	Special Function	Variant Coding
Equus(VI)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus(VI)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus(VI)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus(VI)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus(VI)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Equus(VI)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Equus(VI)	2016	USA	AC(Air Conditioning)	Version Information	
Equus(VI)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Equus(VI)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Equus(VI)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Equus(VI)	2016	USA	AC(Air Conditioning)	Actuation Test	
Equus(VI)	2016	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Equus(VI)	2016	USA	BCM(Body Control Module)	Version Information	
Equus(VI)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Equus(VI)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Equus(VI)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Equus(VI)	2016	USA	BCM(Body Control Module)	Actuation Test	
Equus(VI)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Equus(VI)	2016	USA	EPB(Electrical Parking Brake)	Version Information	
Equus(VI)	2016	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Equus(VI)	2016	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Equus(VI)	2016	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Equus(VI)	2016	USA	EPB(Electrical Parking Brake)	Actuation Test	
Equus(VI)	2016	USA	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Equus(VI)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Equus(VI)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Equus(VI)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Equus(VI)	2016	USA	EPS(Electronic Power Steering)	Actuation Test	
Equus(VI)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Equus(VI)	2016	USA	AFS(Adaptive Front Lighting System)	Version Information	
Equus(VI)	2016	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Equus(VI)	2016	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Equus(VI)	2016	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Equus(VI)	2016	USA	AFS(Adaptive Front Lighting System)	Actuation Test	
Equus(VI)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Equus(VI)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Calibration
Equus(VI)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus(VI)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus(VI)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus(VI)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus(VI)	2016	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus(VI)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus(VI)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus(VI)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus(VI)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus(VI)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus(VI)	2016	USA	Smart Key Unit	Version Information	
Equus(VI)	2016	USA	Smart Key Unit	Read Fault Code	
Equus(VI)	2016	USA	Smart Key Unit	Clear Fault Memory	
Equus(VI)	2016	USA	Smart Key Unit	Read Data Stream	
Equus(VI)	2016	USA	Smart Key Unit	Actuation Test	
Equus(VI)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check
Equus(VI)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Equus(VI)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Equus(VI)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Equus(VI)	2016	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Equus(VI)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Equus(VI)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Equus(VI)	2016	USA	CCS(Cruise Control System)	Version Information	
Equus(VI)	2016	USA	CCS(Cruise Control System)	Read Fault Code	
Equus(VI)	2016	USA	CCS(Cruise Control System)	Clear Fault Memory	
Equus(VI)	2016	USA	CCS(Cruise Control System)	Read Data Stream	
Equus(VI)	2016	USA	CCS(Cruise Control System)	Special Function	SCC Alignment
Equus(VI)	2016	USA	Lane Departure Warning System	Version Information	
Equus(VI)	2016	USA	Lane Departure Warning System	Read Fault Code	
Equus(VI)	2016	USA	Lane Departure Warning System	Clear Fault Memory	
Equus(VI)	2016	USA	Lane Departure Warning System	Read Data Stream	
Equus(VI)	2016	USA	Lane Departure Warning System	Special Function	LDWS Variant Coding
Equus(VI)	2016	USA	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Equus(VI)	2016	USA	Pre-safe Seat Belt	Version Information	
Equus(VI)	2016	USA	Pre-safe Seat Belt	Read Fault Code	
Equus(VI)	2016	USA	Pre-safe Seat Belt	Clear Fault Memory	
Equus(VI)	2016	USA	Pre-safe Seat Belt	Actuation Test	
Equus(VI)	2016	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus(VI)	2016	USA	Electronic Control Suspension	Version Information	
Equus(VI)	2016	USA	Electronic Control Suspension	Read Fault Code	
Equus(VI)	2016	USA	Electronic Control Suspension	Clear Fault Memory	
Equus(VI)	2016	USA	Electronic Control Suspension	Read Data Stream	
Equus(VI)	2016	USA	Electronic Control Suspension	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Equus(VI)	2016	USA	Electronic Control Suspension	Special Function	Height Level Control Select
Equus(VI)	2016	USA	Electronic Control Suspension	Special Function	Checking Air Pressure System

model	year	area	system	function	subfunction
Equus(VI)	2016	USA	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Equus(VI)	2016	USA	Electronic Control Suspension	Special Function	Height Sensor Calibration
Equus(VI)	2016	USA	Assist Door Module	Version Information	
Equus(VI)	2016	USA	Assist Door Module	Read Fault Code	
Equus(VI)	2016	USA	Assist Door Module	Clear Fault Memory	
Equus(VI)	2016	USA	Assist Door Module	Read Data Stream	
Equus(VI)	2016	USA	Assist Door Module	Actuation Test	
Equus(VI)	2016	USA	Assist Power Seat Module	Version Information	
Equus(VI)	2016	USA	Assist Power Seat Module	Read Fault Code	
Equus(VI)	2016	USA	Assist Power Seat Module	Clear Fault Memory	
Equus(VI)	2016	USA	Assist Power Seat Module	Read Data Stream	
Equus(VI)	2016	USA	Assist Power Seat Module	Actuation Test	
Equus(VI)	2016	USA	Blind Spot Detection	Version Information	
Equus(VI)	2016	USA	Blind Spot Detection	Read Fault Code	
Equus(VI)	2016	USA	Blind Spot Detection	Clear Fault Memory	
Equus(VI)	2016	USA	Blind Spot Detection	Read Data Stream	
Equus(VI)	2016	USA	Blind Spot Detection	Actuation Test	
Equus(VI)	2016	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Equus(VI)	2016	USA	Blind Spot Detection	Special Function	BSD Variant Coding
Equus(VI)	2016	USA	Cluster Module	Version Information	
Equus(VI)	2016	USA	Cluster Module	Read Data Stream	
Equus(VI)	2016	USA	Cluster Module	Actuation Test	
Equus(VI)	2016	USA	Driver Door Module	Version Information	
Equus(VI)	2016	USA	Driver Door Module	Read Fault Code	
Equus(VI)	2016	USA	Driver Door Module	Clear Fault Memory	
Equus(VI)	2016	USA	Driver Door Module	Read Data Stream	
Equus(VI)	2016	USA	Driver Door Module	Actuation Test	
Equus(VI)	2016	USA	Driver Door Module	Special Function	User Option
Equus(VI)	2016	USA	Electric Control Wiper	Version Information	

model	year	area	system	function	subfunction
Equus(VI)	2016	USA	Electric Control Wiper	Read Fault Code	
Equus(VI)	2016	USA	Electric Control Wiper	Clear Fault Memory	
Equus(VI)	2016	USA	Electric Control Wiper	Read Data Stream	
Equus(VI)	2016	USA	Front Area Module	Version Information	
Equus(VI)	2016	USA	Front Area Module	Read Fault Code	
Equus(VI)	2016	USA	Front Area Module	Clear Fault Memory	
Equus(VI)	2016	USA	Front Area Module	Read Data Stream	
Equus(VI)	2016	USA	Front Area Module	Actuation Test	
Equus(VI)	2016	USA	Front Area Module	Special Function	User Option
Equus(VI)	2016	USA	Head Up Display	Version Information	
Equus(VI)	2016	USA	Head Up Display	Read Fault Code	
Equus(VI)	2016	USA	Head Up Display	Clear Fault Memory	
Equus(VI)	2016	USA	Head Up Display	Read Data Stream	
Equus(VI)	2016	USA	Head Up Display	Special Function	HUD Calibration
Equus(VI)	2016	USA	Multi Function Switch	Version Information	
Equus(VI)	2016	USA	Multi Function Switch	Read Fault Code	
Equus(VI)	2016	USA	Multi Function Switch	Clear Fault Memory	
Equus(VI)	2016	USA	Multi Function Switch	Read Data Stream	
Equus(VI)	2016	USA	Multi-View Camera System	Version Information	
Equus(VI)	2016	USA	Multi-View Camera System	Read Fault Code	
Equus(VI)	2016	USA	Multi-View Camera System	Clear Fault Memory	
Equus(VI)	2016	USA	Multi-View Camera System	Read Data Stream	
Equus(VI)	2016	USA	Multi-View Camera System	Actuation Test	
Equus(VI)	2016	USA	Power Seat Module	Version Information	
Equus(VI)	2016	USA	Power Seat Module	Read Fault Code	
Equus(VI)	2016	USA	Power Seat Module	Clear Fault Memory	
Equus(VI)	2016	USA	Power Seat Module	Read Data Stream	
Equus(VI)	2016	USA	Power Seat Module	Actuation Test	
Equus(VI)	2016	USA	Power Seat Module	Special Function	User Option

model	year	area	system	function	subfunction
Equus(VI)	2016	USA	Power Trunk Module	Version Information	
Equus(VI)	2016	USA	Power Trunk Module	Read Fault Code	
Equus(VI)	2016	USA	Power Trunk Module	Clear Fault Memory	
Equus(VI)	2016	USA	Power Trunk Module	Read Data Stream	
Equus(VI)	2016	USA	Smart Junction Block	Version Information	
Equus(VI)	2016	USA	Smart Junction Block	Read Fault Code	
Equus(VI)	2016	USA	Smart Junction Block	Clear Fault Memory	
Equus(VI)	2016	USA	Smart Junction Block	Read Data Stream	
Equus(VI)	2016	USA	Smart Junction Block	Actuation Test	
Equus(VI)	2016	USA	Steering Column Module	Version Information	
Equus(VI)	2016	USA	Steering Column Module	Read Fault Code	
Equus(VI)	2016	USA	Steering Column Module	Clear Fault Memory	
Equus(VI)	2016	USA	Steering Column Module	Read Data Stream	
Equus(VI)	2016	USA	Steering Column Module	Actuation Test	
Equus(VI)	2016	USA	Steering Column Module	Special Function	User Option
Equus(VI)	2016	USA	Steering Wheel Remote Control	Version Information	
Equus(VI)	2016	USA	Steering Wheel Remote Control	Read Fault Code	
Equus(VI)	2016	USA	Steering Wheel Remote Control	Clear Fault Memory	
Equus(VI)	2016	USA	Steering Wheel Remote Control	Read Data Stream	
Equus(VI)	2016	USA	Telematics Unit	Version Information	
Equus(VI)	2016	USA	Telematics Unit	Read Fault Code	
Equus(VI)	2016	USA	Telematics Unit	Clear Fault Memory	
Equus(VI)	2015	USA	ECM(Engine Control Module)	Version Information	
Equus(VI)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Equus(VI)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Equus(VI)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Equus(VI)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Equus(VI)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Equus(VI)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Equus(VI)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Equus(VI)	2015	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Equus(VI)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Equus(VI)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Equus(VI)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Equus(VI)	2015	USA	TCM(Transmission Control Module)	Version Information	
Equus(VI)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Equus(VI)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Equus(VI)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Equus(VI)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Equus(VI)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Equus(VI)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus(VI)	2015	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Equus(VI)	2015	USA	Electronic Stability Control	Version Information	
Equus(VI)	2015	USA	Electronic Stability Control	Read Fault Code	
Equus(VI)	2015	USA	Electronic Stability Control	Clear Fault Memory	
Equus(VI)	2015	USA	Electronic Stability Control	Read Data Stream	
Equus(VI)	2015	USA	Electronic Stability Control	Actuation Test	
Equus(VI)	2015	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Equus(VI)	2015	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Equus(VI)	2015	USA	Electronic Stability Control	Special Function	SAS Calibration(CAN-EST Only)
Equus(VI)	2015	USA	Electronic Stability Control	Special Function	Variant Coding
Equus(VI)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus(VI)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus(VI)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus(VI)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus(VI)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Equus(VI)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Equus(VI)	2015	USA	AC(Air Conditioning)	Version Information	
Equus(VI)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Equus(VI)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Equus(VI)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Equus(VI)	2015	USA	AC(Air Conditioning)	Actuation Test	
Equus(VI)	2015	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Equus(VI)	2015	USA	BCM(Body Control Module)	Version Information	
Equus(VI)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Equus(VI)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Equus(VI)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Equus(VI)	2015	USA	BCM(Body Control Module)	Actuation Test	
Equus(VI)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Equus(VI)	2015	USA	BCM(Body Control Module)	Special Function	HUD Calibration
Equus(VI)	2015	USA	EPB(Electrical Parking Brake)	Version Information	
Equus(VI)	2015	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Equus(VI)	2015	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Equus(VI)	2015	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Equus(VI)	2015	USA	EPB(Electrical Parking Brake)	Actuation Test	
Equus(VI)	2015	USA	Electronic Hydraulic Power Steering System	Version Information	
Equus(VI)	2015	USA	Electronic Hydraulic Power Steering System	Read Fault Code	
Equus(VI)	2015	USA	Electronic Hydraulic Power Steering System	Clear Fault Memory	
Equus(VI)	2015	USA	Electronic Hydraulic Power Steering System	Read Data Stream	
Equus(VI)	2015	USA	Electronic Hydraulic Power Steering System	Actuation Test	
Equus(VI)	2015	USA	Electronic Hydraulic Power Steering System	Special Function	EPS Type Recognition
Equus(VI)	2015	USA	Adaptive Front Lighting System	Version Information	
Equus(VI)	2015	USA	Adaptive Front Lighting System	Read Fault Code	
Equus(VI)	2015	USA	Adaptive Front Lighting System	Clear Fault Memory	
Equus(VI)	2015	USA	Adaptive Front Lighting System	Read Data Stream	

model	year	area	system	function	subfunction
Equus(VI)	2015	USA	Adaptive Front Lighting System	Actuation Test	
Equus(VI)	2015	USA	Adaptive Front Lighting System	Special Function	Parameter Download
Equus(VI)	2015	USA	Adaptive Front Lighting System	Special Function	Calibration
Equus(VI)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus(VI)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus(VI)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus(VI)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus(VI)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus(VI)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus(VI)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus(VI)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus(VI)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus(VI)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus(VI)	2015	USA	Smart Key Unit	Version Information	
Equus(VI)	2015	USA	Smart Key Unit	Read Fault Code	
Equus(VI)	2015	USA	Smart Key Unit	Clear Fault Memory	
Equus(VI)	2015	USA	Smart Key Unit	Read Data Stream	
Equus(VI)	2015	USA	Smart Key Unit	Actuation Test	
Equus(VI)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check
Equus(VI)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check
Equus(VI)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information
Equus(VI)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Equus(VI)	2015	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Equus(VI)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Equus(VI)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Equus(VI)	2015	USA	CCS(Cruise Control System)	Version Information	
Equus(VI)	2015	USA	CCS(Cruise Control System)	Read Fault Code	
Equus(VI)	2015	USA	CCS(Cruise Control System)	Clear Fault Memory	
Equus(VI)	2015	USA	CCS(Cruise Control System)	Read Data Stream	

model	year	area	system	function	subfunction
Equus(VI)	2015	USA	CCS(Cruise Control System)	Special Function	SCC Alignment
Equus(VI)	2015	USA	Lane Departure Warning System	Version Information	
Equus(VI)	2015	USA	Lane Departure Warning System	Read Fault Code	
Equus(VI)	2015	USA	Lane Departure Warning System	Clear Fault Memory	
Equus(VI)	2015	USA	Lane Departure Warning System	Read Data Stream	
Equus(VI)	2015	USA	Lane Departure Warning System	Special Function	LDWS Variant Coding
Equus(VI)	2015	USA	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Equus(VI)	2015	USA	Pre-safe Seat Belt	Version Information	
Equus(VI)	2015	USA	Pre-safe Seat Belt	Read Fault Code	
Equus(VI)	2015	USA	Pre-safe Seat Belt	Clear Fault Memory	
Equus(VI)	2015	USA	Pre-safe Seat Belt	Actuation Test	
Equus(VI)	2015	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus(VI)	2015	USA	Electronic Control Suspension	Version Information	
Equus(VI)	2015	USA	Electronic Control Suspension	Read Fault Code	
Equus(VI)	2015	USA	Electronic Control Suspension	Clear Fault Memory	
Equus(VI)	2015	USA	Electronic Control Suspension	Read Data Stream	
Equus(VI)	2015	USA	Electronic Control Suspension	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Equus(VI)	2015	USA	Electronic Control Suspension	Special Function	Height Level Control Select
Equus(VI)	2015	USA	Electronic Control Suspension	Special Function	Checking Air Pressure Systems
Equus(VI)	2015	USA	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Equus(VI)	2015	USA	Electronic Control Suspension	Special Function	Height Sensor Calibration
Equus(VI)	2015	USA	Blind Spot Detection	Version Information	
Equus(VI)	2015	USA	Blind Spot Detection	Read Fault Code	
Equus(VI)	2015	USA	Blind Spot Detection	Clear Fault Memory	
Equus(VI)	2015	USA	Blind Spot Detection	Read Data Stream	
Equus(VI)	2015	USA	Blind Spot Detection	Actuation Test	
Equus(VI)	2015	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Equus(VI)	2015	USA	Blind Spot Detection	Special Function	BSD Variant Coding

model	year	area	system	function	subfunction
Equus(VI)	2015	USA	Multi-View Camera System	Version Information	
Equus(VI)	2015	USA	Multi-View Camera System	Read Fault Code	
Equus(VI)	2015	USA	Multi-View Camera System	Clear Fault Memory	
Equus(VI)	2015	USA	Multi-View Camera System	Read Data Stream	
Equus(VI)	2015	USA	Multi-View Camera System	Actuation Test	
Equus(VI)	2015	USA	Telematics Unit	Version Information	
Equus(VI)	2015	USA	Telematics Unit	Read Fault Code	
Equus(VI)	2015	USA	Telematics Unit	Clear Fault Memory	
Equus(VI)	2014	USA	ECM(Engine Control Module)	Version Information	
Equus(VI)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Equus(VI)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Equus(VI)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Equus(VI)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Equus(VI)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Equus(VI)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus(VI)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Equus(VI)	2014	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Equus(VI)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Equus(VI)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Equus(VI)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Equus(VI)	2014	USA	TCM(Transmission Control Module)	Version Information	
Equus(VI)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Equus(VI)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Equus(VI)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Equus(VI)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Equus(VI)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Equus(VI)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus(VI)	2014	USA	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Replacement)

model	year	area	system	function	subfunction
Equus(VI)	2014	USA	Electronic Stability Control	Version Information	
Equus(VI)	2014	USA	Electronic Stability Control	Read Fault Code	
Equus(VI)	2014	USA	Electronic Stability Control	Clear Fault Memory	
Equus(VI)	2014	USA	Electronic Stability Control	Read Data Stream	
Equus(VI)	2014	USA	Electronic Stability Control	Actuation Test	
Equus(VI)	2014	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Equus(VI)	2014	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Equus(VI)	2014	USA	Electronic Stability Control	Special Function	SAS Calibration(CAN-ESP Only)
Equus(VI)	2014	USA	Electronic Stability Control	Special Function	Variant Coding
Equus(VI)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus(VI)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus(VI)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus(VI)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus(VI)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Equus(VI)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Equus(VI)	2014	USA	AC(Air Conditioning)	Version Information	
Equus(VI)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Equus(VI)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Equus(VI)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Equus(VI)	2014	USA	AC(Air Conditioning)	Actuation Test	
Equus(VI)	2014	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Equus(VI)	2014	USA	BCM(Body Control Module)	Version Information	
Equus(VI)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Equus(VI)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Equus(VI)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Equus(VI)	2014	USA	BCM(Body Control Module)	Actuation Test	
Equus(VI)	2014	USA	BCM(Body Control Module)	Special Function	User Option
Equus(VI)	2014	USA	BCM(Body Control Module)	Special Function	HUD Calibration

model	year	area	system	function	subfunction
Equus(VI)	2014	USA	EPB(Electrical Parking Brake)	Version Information	
Equus(VI)	2014	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Equus(VI)	2014	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Equus(VI)	2014	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Equus(VI)	2014	USA	EPB(Electrical Parking Brake)	Actuation Test	
Equus(VI)	2014	USA	Electronic Hydraulic Power Steering System	Version Information	
Equus(VI)	2014	USA	Electronic Hydraulic Power Steering System	Read Fault Code	
Equus(VI)	2014	USA	Electronic Hydraulic Power Steering System	Clear Fault Memory	
Equus(VI)	2014	USA	Electronic Hydraulic Power Steering System	Read Data Stream	
Equus(VI)	2014	USA	Electronic Hydraulic Power Steering System	Actuation Test	
Equus(VI)	2014	USA	Electronic Hydraulic Power Steering System	Special Function	EPS Type Recognition
Equus(VI)	2014	USA	Adaptive Front Lighting System	Version Information	
Equus(VI)	2014	USA	Adaptive Front Lighting System	Read Fault Code	
Equus(VI)	2014	USA	Adaptive Front Lighting System	Clear Fault Memory	
Equus(VI)	2014	USA	Adaptive Front Lighting System	Read Data Stream	
Equus(VI)	2014	USA	Adaptive Front Lighting System	Actuation Test	
Equus(VI)	2014	USA	Adaptive Front Lighting System	Special Function	Parameter Download
Equus(VI)	2014	USA	Adaptive Front Lighting System	Special Function	Calibration
Equus(VI)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus(VI)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus(VI)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus(VI)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus(VI)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus(VI)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus(VI)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus(VI)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus(VI)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus(VI)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus(VI)	2014	USA	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
Equus(VI)	2014	USA	Smart Key Unit	Read Fault Code	
Equus(VI)	2014	USA	Smart Key Unit	Clear Fault Memory	
Equus(VI)	2014	USA	Smart Key Unit	Read Data Stream	
Equus(VI)	2014	USA	Smart Key Unit	Actuation Test	
Equus(VI)	2014	USA	Smart Key Unit	Special Function	Antenna Status Check
Equus(VI)	2014	USA	Smart Key Unit	Special Function	Current FOB Key Check
Equus(VI)	2014	USA	Smart Key Unit	Special Function	FOB Key Status Information
Equus(VI)	2014	USA	Smart Key Unit	Special Function	Neutralization Mode
Equus(VI)	2014	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Equus(VI)	2014	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Equus(VI)	2014	USA	Smart Key Unit	Special Function	SMK Status Information
Equus(VI)	2014	USA	CCS(Cruise Control System)	Version Information	
Equus(VI)	2014	USA	CCS(Cruise Control System)	Read Fault Code	
Equus(VI)	2014	USA	CCS(Cruise Control System)	Clear Fault Memory	
Equus(VI)	2014	USA	CCS(Cruise Control System)	Read Data Stream	
Equus(VI)	2014	USA	CCS(Cruise Control System)	Special Function	SCC Alignment
Equus(VI)	2014	USA	Lane Departure Warning System	Version Information	
Equus(VI)	2014	USA	Lane Departure Warning System	Read Fault Code	
Equus(VI)	2014	USA	Lane Departure Warning System	Clear Fault Memory	
Equus(VI)	2014	USA	Lane Departure Warning System	Read Data Stream	
Equus(VI)	2014	USA	Lane Departure Warning System	Special Function	LDWS Variant Coding
Equus(VI)	2014	USA	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Equus(VI)	2014	USA	Pre-safe Seat Belt	Version Information	
Equus(VI)	2014	USA	Pre-safe Seat Belt	Read Fault Code	
Equus(VI)	2014	USA	Pre-safe Seat Belt	Clear Fault Memory	
Equus(VI)	2014	USA	Pre-safe Seat Belt	Actuation Test	
Equus(VI)	2014	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus(VI)	2014	USA	Electronic Control Suspension	Version Information	
Equus(VI)	2014	USA	Electronic Control Suspension	Read Fault Code	

model	year	area	system	function	subfunction
Equus(VI)	2014	USA	Electronic Control Suspension	Clear Fault Memory	
Equus(VI)	2014	USA	Electronic Control Suspension	Read Data Stream	
Equus(VI)	2014	USA	Electronic Control Suspension	Special Function	Auto Detected Configuration
Equus(VI)	2014	USA	Electronic Control Suspension	Special Function	Reset(FSP/FSC/Only)
Equus(VI)	2014	USA	Electronic Control Suspension	Special Function	Height Level Control Select
Equus(VI)	2014	USA	Electronic Control Suspension	Special Function	Checking Air Pressure
Equus(VI)	2014	USA	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Equus(VI)	2014	USA	Electronic Control Suspension	Special Function	Height Sensor Calibration
Equus(VI)	2014	USA	Blind Spot Detection	Version Information	
Equus(VI)	2014	USA	Blind Spot Detection	Read Fault Code	
Equus(VI)	2014	USA	Blind Spot Detection	Clear Fault Memory	
Equus(VI)	2014	USA	Blind Spot Detection	Read Data Stream	
Equus(VI)	2014	USA	Blind Spot Detection	Actuation Test	
Equus(VI)	2014	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Equus(VI)	2014	USA	Blind Spot Detection	Special Function	BSD Variant Coding
Equus(VI)	2014	USA	Multi-View Camera System	Version Information	
Equus(VI)	2014	USA	Multi-View Camera System	Read Fault Code	
Equus(VI)	2014	USA	Multi-View Camera System	Clear Fault Memory	
Equus(VI)	2014	USA	Multi-View Camera System	Read Data Stream	
Equus(VI)	2014	USA	Multi-View Camera System	Actuation Test	
Equus(VI)	2014	USA	Telematics Unit	Version Information	
Equus(VI)	2014	USA	Telematics Unit	Read Fault Code	
Equus(VI)	2014	USA	Telematics Unit	Clear Fault Memory	
Equus(VI)	2013	USA	ECM(Engine Control Module)	Version Information	
Equus(VI)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Equus(VI)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Equus(VI)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Equus(VI)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Equus(VI)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Equus(VI)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus(VI)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Equus(VI)	2013	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Equus(VI)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Equus(VI)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Equus(VI)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Equus(VI)	2013	USA	TCM(Transmission Control Module)	Version Information	
Equus(VI)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Equus(VI)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Equus(VI)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Equus(VI)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Equus(VI)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Equus(VI)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus(VI)	2013	USA	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Replacement)
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Version Information	
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Actuation Test	
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Read FreezeData	
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Colig G Sensor Calibration(Only FR)
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Equus(VI)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
Equus(VI)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus(VI)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Equus(VI)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus(VI)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus(VI)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Equus(VI)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Equus(VI)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Equus(VI)	2013	USA	AC(Air Conditioning)	Version Information	
Equus(VI)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Equus(VI)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Equus(VI)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Equus(VI)	2013	USA	AC(Air Conditioning)	Actuation Test	
Equus(VI)	2013	USA	BCM(Body Control Module)	Version Information	
Equus(VI)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Equus(VI)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Equus(VI)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Equus(VI)	2013	USA	BCM(Body Control Module)	Actuation Test	
Equus(VI)	2013	USA	BCM(Body Control Module)	Special Function	Antenna Status Check
Equus(VI)	2013	USA	BCM(Body Control Module)	Special Function	FOB Key Status Information
Equus(VI)	2013	USA	BCM(Body Control Module)	Special Function	IPM Status Information
Equus(VI)	2013	USA	BCM(Body Control Module)	Special Function	Neutralization Mode
Equus(VI)	2013	USA	BCM(Body Control Module)	Special Function	PDM Status Information
Equus(VI)	2013	USA	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Equus(VI)	2013	USA	BCM(Body Control Module)	Special Function	Headrest Setting
Equus(VI)	2013	USA	Electronic Hydraulic Power Steering System	Version Information	
Equus(VI)	2013	USA	Electronic Hydraulic Power Steering System	Read Fault Code	
Equus(VI)	2013	USA	Electronic Hydraulic Power Steering System	Clear Fault Memory	
Equus(VI)	2013	USA	Electronic Hydraulic Power Steering System	Read Data Stream	
Equus(VI)	2013	USA	Electronic Hydraulic Power Steering System	Actuation Test	
Equus(VI)	2013	USA	Electronic Hydraulic Power Steering System	Special Function	EPS Type Recognition
Equus(VI)	2013	USA	Adaptive Front Lighting System	Version Information	

model	year	area	system	function	subfunction
Equus(VI)	2013	USA	Adaptive Front Lighting System	Read Fault Code	
Equus(VI)	2013	USA	Adaptive Front Lighting System	Clear Fault Memory	
Equus(VI)	2013	USA	Adaptive Front Lighting System	Read Data Stream	
Equus(VI)	2013	USA	Adaptive Front Lighting System	Actuation Test	
Equus(VI)	2013	USA	Adaptive Front Lighting System	Special Function	Parameter Download
Equus(VI)	2013	USA	Adaptive Front Lighting System	Special Function	Calibration
Equus(VI)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus(VI)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus(VI)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus(VI)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus(VI)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus(VI)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus(VI)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus(VI)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Equus(VI)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus(VI)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus(VI)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus(VI)	2013	USA	Smart Key Code Saving	Read Data Stream	
Equus(VI)	2013	USA	Smart Key Code Saving	Special Function	Smart Key Code Saving
Equus(VI)	2013	USA	CCS(Cruise Control System)	Version Information	
Equus(VI)	2013	USA	CCS(Cruise Control System)	Read Fault Code	
Equus(VI)	2013	USA	CCS(Cruise Control System)	Clear Fault Memory	
Equus(VI)	2013	USA	CCS(Cruise Control System)	Read Data Stream	
Equus(VI)	2013	USA	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Equus(VI)	2013	USA	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Equus(VI)	2013	USA	DIS	Version Information	
Equus(VI)	2013	USA	DIS	Read Fault Code	
Equus(VI)	2013	USA	DIS	Clear Fault Memory	
Equus(VI)	2013	USA	DIS	Read Data Stream	

model	year	area	system	function	subfunction
Equus(VI)	2013	USA	DIS	Actuation Test	
Equus(VI)	2013	USA	DIS	Special Function	DVD-Request when slot is Empty
Equus(VI)	2013	USA	DIS	Special Function	Variant Coding
Equus(VI)	2013	USA	DIS	Special Function	Wake Up Line
Equus(VI)	2013	USA	DIS	Special Function	Xdb Test
Equus(VI)	2013	USA	DIS	Special Function	ECU Serial Number
Equus(VI)	2013	USA	DIS	Special Function	Update From CD
Equus(VI)	2013	USA	DIS	Special Function	Ring Break
Equus(VI)	2013	USA	DIS	Special Function	Get All S/W Version
Equus(VI)	2013	USA	Lane Departure Warning System	Version Information	
Equus(VI)	2013	USA	Lane Departure Warning System	Read Fault Code	
Equus(VI)	2013	USA	Lane Departure Warning System	Clear Fault Memory	
Equus(VI)	2013	USA	Lane Departure Warning System	Read Data Stream	
Equus(VI)	2013	USA	Lane Departure Warning System	Special Function	LDWS Region Code
Equus(VI)	2013	USA	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Equus(VI)	2013	USA	Pre-safe Seat Belt	Version Information	
Equus(VI)	2013	USA	Pre-safe Seat Belt	Read Fault Code	
Equus(VI)	2013	USA	Pre-safe Seat Belt	Clear Fault Memory	
Equus(VI)	2013	USA	Pre-safe Seat Belt	Actuation Test	
Equus(VI)	2013	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus(VI)	2013	USA	Electronic Control Suspension	Version Information	
Equus(VI)	2013	USA	Electronic Control Suspension	Read Fault Code	
Equus(VI)	2013	USA	Electronic Control Suspension	Clear Fault Memory	
Equus(VI)	2013	USA	Electronic Control Suspension	Read Data Stream	
Equus(VI)	2013	USA	Electronic Control Suspension	Special Function	Auto Detected Configuration Reset(FSP/ESC/Only)
Equus(VI)	2013	USA	Electronic Control Suspension	Special Function	Height Level Control Select
Equus(VI)	2013	USA	Electronic Control Suspension	Special Function	Checking Air Pressure System
Equus(VI)	2013	USA	Electronic Control Suspension	Special Function	Air Filling Venting Setup

model	year	area	system	function	subfunction
Equus(VI)	2013	USA	Electronic Control Suspension	Special Function	Height Sensor Calibration
Equus(VI)	2012	USA	ECM(Engine Control Module)	Version Information	
Equus(VI)	2012	USA	ECM(Engine Control Module)	Read Fault Code	
Equus(VI)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Equus(VI)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Equus(VI)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Equus(VI)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Equus(VI)	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus(VI)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Equus(VI)	2012	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Equus(VI)	2012	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Equus(VI)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Equus(VI)	2012	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Equus(VI)	2012	USA	TCM(Transmission Control Module)	Version Information	
Equus(VI)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Equus(VI)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Equus(VI)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Equus(VI)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Equus(VI)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Equus(VI)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus(VI)	2012	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Version Information	
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Actuation Test	
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Read FreezeData	
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration

model	year	area	system	function	subfunction
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Long G Sensor Calibration (Only FDR)
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Equus(VI)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
Equus(VI)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus(VI)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus(VI)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus(VI)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus(VI)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Equus(VI)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Equus(VI)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Equus(VI)	2012	USA	AC(Air Conditioning)	Version Information	
Equus(VI)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Equus(VI)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Equus(VI)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Equus(VI)	2012	USA	AC(Air Conditioning)	Actuation Test	
Equus(VI)	2012	USA	BCM(Body Control Module)	Version Information	
Equus(VI)	2012	USA	BCM(Body Control Module)	Read Fault Code	
Equus(VI)	2012	USA	BCM(Body Control Module)	Clear Fault Memory	
Equus(VI)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Equus(VI)	2012	USA	BCM(Body Control Module)	Actuation Test	
Equus(VI)	2012	USA	BCM(Body Control Module)	Special Function	Antenna Status Check
Equus(VI)	2012	USA	BCM(Body Control Module)	Special Function	FOB Key Status Information
Equus(VI)	2012	USA	BCM(Body Control Module)	Special Function	IPM Status Information
Equus(VI)	2012	USA	BCM(Body Control Module)	Special Function	Neutralization Mode
Equus(VI)	2012	USA	BCM(Body Control Module)	Special Function	PDM Status Information
Equus(VI)	2012	USA	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Equus(VI)	2012	USA	BCM(Body Control Module)	Special Function	Headrest Setting

model	year	area	system	function	subfunction
Equus(VI)	2012	USA	Electronic Hydraulic Power Steering System	Version Information	
Equus(VI)	2012	USA	Electronic Hydraulic Power Steering System	Read Fault Code	
Equus(VI)	2012	USA	Electronic Hydraulic Power Steering System	Clear Fault Memory	
Equus(VI)	2012	USA	Electronic Hydraulic Power Steering System	Read Data Stream	
Equus(VI)	2012	USA	Electronic Hydraulic Power Steering System	Actuation Test	
Equus(VI)	2012	USA	Electronic Hydraulic Power Steering System	Special Function	EPS Type Recognition
Equus(VI)	2012	USA	Adaptive Front Lighting System	Version Information	
Equus(VI)	2012	USA	Adaptive Front Lighting System	Read Fault Code	
Equus(VI)	2012	USA	Adaptive Front Lighting System	Clear Fault Memory	
Equus(VI)	2012	USA	Adaptive Front Lighting System	Read Data Stream	
Equus(VI)	2012	USA	Adaptive Front Lighting System	Actuation Test	
Equus(VI)	2012	USA	Adaptive Front Lighting System	Special Function	Parameter Download
Equus(VI)	2012	USA	Adaptive Front Lighting System	Special Function	Calibration
Equus(VI)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus(VI)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus(VI)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus(VI)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus(VI)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus(VI)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus(VI)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus(VI)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Equus(VI)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus(VI)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus(VI)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus(VI)	2012	USA	Smart Key Code Saving	Read Data Stream	
Equus(VI)	2012	USA	Smart Key Code Saving	Special Function	Smart Key Code Saving
Equus(VI)	2012	USA	CCS(Cruise Control System)	Version Information	
Equus(VI)	2012	USA	CCS(Cruise Control System)	Read Fault Code	
Equus(VI)	2012	USA	CCS(Cruise Control System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Equus(VI)	2012	USA	CCS(Cruise Control System)	Read Data Stream	
Equus(VI)	2012	USA	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Equus(VI)	2012	USA	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Equus(VI)	2012	USA	DIS	Version Information	
Equus(VI)	2012	USA	DIS	Read Fault Code	
Equus(VI)	2012	USA	DIS	Clear Fault Memory	
Equus(VI)	2012	USA	DIS	Read Data Stream	
Equus(VI)	2012	USA	DIS	Actuation Test	
Equus(VI)	2012	USA	DIS	Special Function	DVD-Request when slot is empty
Equus(VI)	2012	USA	DIS	Special Function	Variant Coding
Equus(VI)	2012	USA	DIS	Special Function	Wake Up Line
Equus(VI)	2012	USA	DIS	Special Function	Xdb Test
Equus(VI)	2012	USA	DIS	Special Function	ECU Serial Number
Equus(VI)	2012	USA	DIS	Special Function	Update From CD
Equus(VI)	2012	USA	DIS	Special Function	Ring Break
Equus(VI)	2012	USA	DIS	Special Function	Get All S/W Version
Equus(VI)	2012	USA	Lane Departure Warning System	Version Information	
Equus(VI)	2012	USA	Lane Departure Warning System	Read Fault Code	
Equus(VI)	2012	USA	Lane Departure Warning System	Clear Fault Memory	
Equus(VI)	2012	USA	Lane Departure Warning System	Read Data Stream	
Equus(VI)	2012	USA	Lane Departure Warning System	Special Function	LDWS Region Code
Equus(VI)	2012	USA	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Equus(VI)	2012	USA	Pre-safe Seat Belt	Version Information	
Equus(VI)	2012	USA	Pre-safe Seat Belt	Read Fault Code	
Equus(VI)	2012	USA	Pre-safe Seat Belt	Clear Fault Memory	
Equus(VI)	2012	USA	Pre-safe Seat Belt	Actuation Test	
Equus(VI)	2012	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Equus(VI)	2012	USA	Electronic Control Suspension	Version Information	
Equus(VI)	2012	USA	Electronic Control Suspension	Read Fault Code	

model	year	area	system	function	subfunction
Equus(VI)	2012	USA	Electronic Control Suspension	Clear Fault Memory	
Equus(VI)	2012	USA	Electronic Control Suspension	Read Data Stream	
Equus(VI)	2012	USA	Electronic Control Suspension	Special Function	Auto Detected Configuration
Equus(VI)	2012	USA	Electronic Control Suspension	Special Function	Reset(FSP/FSC)Only
Equus(VI)	2012	USA	Electronic Control Suspension	Special Function	Height Level Control Select
Equus(VI)	2012	USA	Electronic Control Suspension	Special Function	Checking Air Pressure
Equus(VI)	2012	USA	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Equus(VI)	2012	USA	Electronic Control Suspension	Special Function	Height Sensor Calibration
Equus(VI)	2011	USA	ECM(Engine Control Module)	Version Information	
Equus(VI)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Equus(VI)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Equus(VI)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Equus(VI)	2011	USA	ECM(Engine Control Module)	Actuation Test	
Equus(VI)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Equus(VI)	2011	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Equus(VI)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Equus(VI)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Equus(VI)	2011	USA	TCM(Transmission Control Module)	Version Information	
Equus(VI)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Equus(VI)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Equus(VI)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Equus(VI)	2011	USA	TCM(Transmission Control Module)	Read FreezeData	
Equus(VI)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Equus(VI)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Equus(VI)	2011	USA	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable
Equus(VI)	2011	USA	TCM(Transmission Control Module)	Special Function	Status
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Version Information	
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Read Data Stream	

model	year	area	system	function	subfunction
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Actuation Test	
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Read FreezeData	
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Collig. Sensor
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Calibration (Only EPB)
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Lateral G Sensor Calibration
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Equus(VI)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Valve Flushing
Equus(VI)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Equus(VI)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Equus(VI)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Equus(VI)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Equus(VI)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Equus(VI)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Equus(VI)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Equus(VI)	2011	USA	AC(Air Conditioning)	Version Information	
Equus(VI)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Equus(VI)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Equus(VI)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Equus(VI)	2011	USA	AC(Air Conditioning)	Actuation Test	
Equus(VI)	2011	USA	BCM(Body Control Module)	Version Information	
Equus(VI)	2011	USA	BCM(Body Control Module)	Read Fault Code	
Equus(VI)	2011	USA	BCM(Body Control Module)	Clear Fault Memory	
Equus(VI)	2011	USA	BCM(Body Control Module)	Read Data Stream	
Equus(VI)	2011	USA	BCM(Body Control Module)	Actuation Test	
Equus(VI)	2011	USA	BCM(Body Control Module)	Special Function	Antenna Status Check
Equus(VI)	2011	USA	BCM(Body Control Module)	Special Function	FOB Key Status Information
Equus(VI)	2011	USA	BCM(Body Control Module)	Special Function	IPM Status Information
Equus(VI)	2011	USA	BCM(Body Control Module)	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Equus(VI)	2011	USA	BCM(Body Control Module)	Special Function	PDM Status Information
Equus(VI)	2011	USA	BCM(Body Control Module)	Special Function	Serial Communication Line Check
Equus(VI)	2011	USA	BCM(Body Control Module)	Special Function	Headrest Setting
Equus(VI)	2011	USA	Electronic Hydraulic Power Steering System	Version Information	
Equus(VI)	2011	USA	Electronic Hydraulic Power Steering System	Read Fault Code	
Equus(VI)	2011	USA	Electronic Hydraulic Power Steering System	Clear Fault Memory	
Equus(VI)	2011	USA	Electronic Hydraulic Power Steering System	Read Data Stream	
Equus(VI)	2011	USA	Electronic Hydraulic Power Steering System	Actuation Test	
Equus(VI)	2011	USA	Electronic Hydraulic Power Steering System	Special Function	EPS Type Recognition
Equus(VI)	2011	USA	Adaptive Front Lighting System	Version Information	
Equus(VI)	2011	USA	Adaptive Front Lighting System	Read Fault Code	
Equus(VI)	2011	USA	Adaptive Front Lighting System	Clear Fault Memory	
Equus(VI)	2011	USA	Adaptive Front Lighting System	Read Data Stream	
Equus(VI)	2011	USA	Adaptive Front Lighting System	Actuation Test	
Equus(VI)	2011	USA	Adaptive Front Lighting System	Special Function	Calibration
Equus(VI)	2011	USA	Adaptive Front Lighting System	Special Function	Parameter Download
Equus(VI)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Equus(VI)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Equus(VI)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Equus(VI)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Equus(VI)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Equus(VI)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Equus(VI)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Equus(VI)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Equus(VI)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Equus(VI)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Equus(VI)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Equus(VI)	2011	USA	Smart Key Code Saving	Read Data Stream	
Equus(VI)	2011	USA	Smart Key Code Saving	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Equus(VI)	2011	USA	CCS(Cruise Control System)	Version Information	
Equus(VI)	2011	USA	CCS(Cruise Control System)	Read Fault Code	
Equus(VI)	2011	USA	CCS(Cruise Control System)	Clear Fault Memory	
Equus(VI)	2011	USA	CCS(Cruise Control System)	Read Data Stream	
Equus(VI)	2011	USA	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Equus(VI)	2011	USA	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Equus(VI)	2011	USA	DIS	Version Information	
Equus(VI)	2011	USA	DIS	Read Fault Code	
Equus(VI)	2011	USA	DIS	Clear Fault Memory	
Equus(VI)	2011	USA	DIS	Read Data Stream	
Equus(VI)	2011	USA	DIS	Actuation Test	
Equus(VI)	2011	USA	DIS	Special Function	DVD-Request when Slot is Empty
Equus(VI)	2011	USA	DIS	Special Function	Variant Coding
Equus(VI)	2011	USA	DIS	Special Function	Wake Up Line
Equus(VI)	2011	USA	DIS	Special Function	Xdb Test
Equus(VI)	2011	USA	DIS	Special Function	ECU Serial Number
Equus(VI)	2011	USA	DIS	Special Function	Update From CD
Equus(VI)	2011	USA	DIS	Special Function	Ring Break
Equus(VI)	2011	USA	DIS	Special Function	Get All S/W Version
Equus(VI)	2011	USA	Lane Departure Warning System	Version Information	
Equus(VI)	2011	USA	Lane Departure Warning System	Read Fault Code	
Equus(VI)	2011	USA	Lane Departure Warning System	Clear Fault Memory	
Equus(VI)	2011	USA	Lane Departure Warning System	Read Data Stream	
Equus(VI)	2011	USA	Lane Departure Warning System	Special Function	LDWS Region Code
Equus(VI)	2011	USA	Pre-safe Seat Belt	Version Information	
Equus(VI)	2011	USA	Pre-safe Seat Belt	Read Fault Code	
Equus(VI)	2011	USA	Pre-safe Seat Belt	Clear Fault Memory	
Equus(VI)	2011	USA	Pre-safe Seat Belt	Actuation Test	
Equus(VI)	2011	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding

model	year	area	system	function	subfunction
Equus(VI)	2011	USA	Electronic Control Suspension	Version Information	
Equus(VI)	2011	USA	Electronic Control Suspension	Read Fault Code	
Equus(VI)	2011	USA	Electronic Control Suspension	Clear Fault Memory	
Equus(VI)	2011	USA	Electronic Control Suspension	Read Data Stream	
Equus(VI)	2011	USA	Electronic Control Suspension	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Equus(VI)	2011	USA	Electronic Control Suspension	Special Function	Height Level Control Select
Equus(VI)	2011	USA	Electronic Control Suspension	Special Function	Checking Air Pressure Custom
Equus(VI)	2011	USA	Electronic Control Suspension	Special Function	Air Filling Venting Setup
Equus(VI)	2011	USA	Electronic Control Suspension	Special Function	Height Sensor Calibration
Excel(X2)	1994	USA	ECM(Engine Control Module)	Read Fault Code	
Excel(X2)	1994	USA	ECM(Engine Control Module)	Clear Fault Memory	
Excel(X2)	1994	USA	ECM(Engine Control Module)	Read Data Stream	
Excel(X2)	1994	USA	TCM(Transmission Control Module)	Read Fault Code	
Excel(X2)	1994	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Excel(X2)	1994	USA	TCM(Transmission Control Module)	Read Data Stream	
Excel(X2)	1993	USA	ECM(Engine Control Module)	Read Fault Code	
Excel(X2)	1993	USA	ECM(Engine Control Module)	Clear Fault Memory	
Excel(X2)	1993	USA	ECM(Engine Control Module)	Read Data Stream	
Excel(X2)	1993	USA	TCM(Transmission Control Module)	Read Fault Code	
Excel(X2)	1993	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Excel(X2)	1993	USA	TCM(Transmission Control Module)	Read Data Stream	
Excel(X2)	1992	USA	ECM(Engine Control Module)	Read Fault Code	
Excel(X2)	1992	USA	ECM(Engine Control Module)	Clear Fault Memory	
Excel(X2)	1992	USA	ECM(Engine Control Module)	Read Data Stream	
Excel(X2)	1992	USA	TCM(Transmission Control Module)	Read Fault Code	
Excel(X2)	1992	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Excel(X2)	1992	USA	TCM(Transmission Control Module)	Read Data Stream	
Excel(X2)	1991	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Excel(X2)	1991	USA	ECM(Engine Control Module)	Clear Fault Memory	
Excel(X2)	1991	USA	ECM(Engine Control Module)	Read Data Stream	
Excel(X2)	1991	USA	TCM(Transmission Control Module)	Read Fault Code	
Excel(X2)	1991	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Excel(X2)	1991	USA	TCM(Transmission Control Module)	Read Data Stream	
Excel(X2)	1990	USA	ECM(Engine Control Module)	Read Fault Code	
Excel(X2)	1990	USA	ECM(Engine Control Module)	Clear Fault Memory	
Excel(X2)	1990	USA	ECM(Engine Control Module)	Read Data Stream	
Excel(X2)	1990	USA	TCM(Transmission Control Module)	Read Fault Code	
Excel(X2)	1990	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Excel(X2)	1990	USA	TCM(Transmission Control Module)	Read Data Stream	
G80(DH)	2018	USA	ECM(Engine Control Module)	Version Information	
G80(DH)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
G80(DH)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
G80(DH)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
G80(DH)	2018	USA	ECM(Engine Control Module)	Actuation Test	
G80(DH)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
G80(DH)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
G80(DH)	2018	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
G80(DH)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
G80(DH)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
G80(DH)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
G80(DH)	2018	USA	TCM(Transmission Control Module)	Version Information	
G80(DH)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
G80(DH)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	
G80(DH)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	
G80(DH)	2018	USA	TCM(Transmission Control Module)	Actuation Test	
G80(DH)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
G80(DH)	2018	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Intelligent Driving Mode Integrated Control
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
G80(DH)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Roller Sensor Alignment(SCC/AFD)
G80(DH)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
G80(DH)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
G80(DH)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
G80(DH)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
G80(DH)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
G80(DH)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
G80(DH)	2018	USA	AC(Air Conditioning)	Version Information	
G80(DH)	2018	USA	AC(Air Conditioning)	Read Fault Code	
G80(DH)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
G80(DH)	2018	USA	AC(Air Conditioning)	Read Data Stream	
G80(DH)	2018	USA	AC(Air Conditioning)	Actuation Test	
G80(DH)	2018	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)

model	year	area	system	function	subfunction
G80(DH)	2018	USA	BCM(Body Control Module)	Version Information	
G80(DH)	2018	USA	BCM(Body Control Module)	Read Fault Code	
G80(DH)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
G80(DH)	2018	USA	BCM(Body Control Module)	Read Data Stream	
G80(DH)	2018	USA	BCM(Body Control Module)	Actuation Test	
G80(DH)	2018	USA	BCM(Body Control Module)	Special Function	User Option
G80(DH)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
G80(DH)	2018	USA	BCM(Body Control Module)	Special Function	HUD Calibration
G80(DH)	2018	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
G80(DH)	2018	USA	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
G80(DH)	2018	USA	Tire Pressure Monitoring	Version Information	
G80(DH)	2018	USA	Tire Pressure Monitoring	Read Fault Code	
G80(DH)	2018	USA	Tire Pressure Monitoring	Clear Fault Memory	
G80(DH)	2018	USA	Tire Pressure Monitoring	Read Data Stream	
G80(DH)	2018	USA	Tire Pressure Monitoring	Actuation Test	
G80(DH)	2018	USA	Tire Pressure Monitoring	Special Function	Wheel Sensor ID Writing
G80(DH)	2018	USA	Tire Pressure Monitoring	Special Function	Write VIN
G80(DH)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Reading
G80(DH)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Writing
G80(DH)	2018	USA	AHLS(Auto Headlamp Leveling System)	Version Information	
G80(DH)	2018	USA	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
G80(DH)	2018	USA	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
G80(DH)	2018	USA	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
G80(DH)	2018	USA	AHLS(Auto Headlamp Leveling System)	Actuation Test	
G80(DH)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
G80(DH)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
G80(DH)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
G80(DH)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
G80(DH)	2018	USA	Motor Driven Power Steering	Version Information	
G80(DH)	2018	USA	Motor Driven Power Steering	Read Fault Code	
G80(DH)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
G80(DH)	2018	USA	Motor Driven Power Steering	Read Data Stream	
G80(DH)	2018	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
G80(DH)	2018	USA	Electronic Control Suspension	Version Information	
G80(DH)	2018	USA	Electronic Control Suspension	Read Fault Code	
G80(DH)	2018	USA	Electronic Control Suspension	Clear Fault Memory	
G80(DH)	2018	USA	Electronic Control Suspension	Read Data Stream	
G80(DH)	2018	USA	Electronic Control Suspension	Actuation Test	
G80(DH)	2018	USA	Electronic Control Suspension	Special Function	ECS Variant Coding
G80(DH)	2018	USA	4WD Control	Version Information	
G80(DH)	2018	USA	4WD Control	Read Fault Code	
G80(DH)	2018	USA	4WD Control	Clear Fault Memory	
G80(DH)	2018	USA	4WD Control	Read Data Stream	
G80(DH)	2018	USA	4WD Control	Actuation Test	
G80(DH)	2018	USA	4WD Control	Special Function	Power Down Calibration
G80(DH)	2018	USA	4WD Control	Special Function	T\C Clutch Calibration
G80(DH)	2018	USA	4WD Control	Special Function	HW Characteristics
G80(DH)	2018	USA	4WD Control	Special Function	Variant Coding
G80(DH)	2018	USA	4WD Control	Special Function	Adaptive value
G80(DH)	2018	USA	4WD Control	Special Function	Backup&Input(ECU Replacement)
G80(DH)	2018	USA	Smart Key Unit	Version Information	
G80(DH)	2018	USA	Smart Key Unit	Read Fault Code	
G80(DH)	2018	USA	Smart Key Unit	Clear Fault Memory	
G80(DH)	2018	USA	Smart Key Unit	Read Data Stream	
G80(DH)	2018	USA	Smart Key Unit	Actuation Test	
G80(DH)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
G80(DH)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
G80(DH)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
G80(DH)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
G80(DH)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode
G80(DH)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
G80(DH)	2018	USA	Blind Spot Detection	Version Information	
G80(DH)	2018	USA	Blind Spot Detection	Read Fault Code	
G80(DH)	2018	USA	Blind Spot Detection	Clear Fault Memory	
G80(DH)	2018	USA	Blind Spot Detection	Read Data Stream	
G80(DH)	2018	USA	Blind Spot Detection	Actuation Test	
G80(DH)	2018	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
G80(DH)	2018	USA	Blind Spot Detection	Special Function	BSD Variant Coding
G80(DH)	2018	USA	Multi Function Camera	Version Information	
G80(DH)	2018	USA	Multi Function Camera	Read Fault Code	
G80(DH)	2018	USA	Multi Function Camera	Clear Fault Memory	
G80(DH)	2018	USA	Multi Function Camera	Read Data Stream	
G80(DH)	2018	USA	Multi Function Camera	Special Function	SPTAC Calibration
G80(DH)	2018	USA	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
G80(DH)	2018	USA	Multi-View Camera System	Version Information	
G80(DH)	2018	USA	Multi-View Camera System	Read Fault Code	
G80(DH)	2018	USA	Multi-View Camera System	Clear Fault Memory	
G80(DH)	2018	USA	Multi-View Camera System	Read Data Stream	
G80(DH)	2018	USA	Multi-View Camera System	Actuation Test	
G80(DH)	2018	USA	Parking Guide System	Version Information	
G80(DH)	2018	USA	Parking Guide System	Read Fault Code	
G80(DH)	2018	USA	Parking Guide System	Clear Fault Memory	
G80(DH)	2018	USA	Parking Guide System	Read Data Stream	
G80(DH)	2018	USA	Pre-safe Seat Belt	Version Information	
G80(DH)	2018	USA	Pre-safe Seat Belt	Read Fault Code	
G80(DH)	2018	USA	Pre-safe Seat Belt	Clear Fault Memory	

model	year	area	system	function	subfunction
G80(DH)	2018	USA	Pre-safe Seat Belt	Read Data Stream	
G80(DH)	2018	USA	Pre-safe Seat Belt	Actuation Test	
G80(DH)	2018	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
G80(DH)	2018	USA	Active Air Flap	Version Information	
G80(DH)	2018	USA	Active Air Flap	Read Fault Code	
G80(DH)	2018	USA	Active Air Flap	Clear Fault Memory	
G80(DH)	2018	USA	Active Air Flap	Read Data Stream	
G80(DH)	2018	USA	Active Air Flap	Actuation Test	
G80(DH)	2018	USA	Amplifier	Read Fault Code	
G80(DH)	2018	USA	Amplifier	Clear Fault Memory	
G80(DH)	2018	USA	Audio Video Navigation	Version Information	
G80(DH)	2018	USA	Audio Video Navigation	Read Data Stream	
G80(DH)	2018	USA	Audio Video Navigation	Special Function	Ring Break
G80(DH)	2018	USA	E-Shifter	Version Information	
G80(DH)	2018	USA	E-Shifter	Read Fault Code	
G80(DH)	2018	USA	E-Shifter	Clear Fault Memory	
G80(DH)	2018	USA	E-Shifter	Read Data Stream	
G80(DH)	2018	USA	E-Shifter	Actuation Test	
G80(DH)	2018	USA	Integrated Gateway Power Control Module	Version Information	
G80(DH)	2018	USA	Integrated Gateway Power Control Module	Read Fault Code	
G80(DH)	2018	USA	Integrated Gateway Power Control Module	Clear Fault Memory	
G80(DH)	2018	USA	Integrated Gateway Power Control Module	Read Data Stream	
G80(DH)	2018	USA	Integrated Gateway Power Control Module	Actuation Test	
G80(DH)	2018	USA	Integrated Gateway Power Control Module	Special Function	Erase Network Configuration
G80(DH)	2018	USA	Integrated Gateway Power Control Module	Special Function	User Option
G80(DH)	2018	USA	I-BOX	Version Information	
G80(DH)	2018	USA	I-BOX	Read Fault Code	
G80(DH)	2018	USA	I-BOX	Clear Fault Memory	
G80(DH)	2017	USA	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
G80(DH)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
G80(DH)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
G80(DH)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
G80(DH)	2017	USA	ECM(Engine Control Module)	Actuation Test	
G80(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
G80(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
G80(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
G80(DH)	2017	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
G80(DH)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
G80(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
G80(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
G80(DH)	2017	USA	TCM(Transmission Control Module)	Version Information	
G80(DH)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
G80(DH)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
G80(DH)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
G80(DH)	2017	USA	TCM(Transmission Control Module)	Read FreezeData	
G80(DH)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
G80(DH)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
G80(DH)	2017	USA	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Replacement)
G80(DH)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
G80(DH)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
G80(DH)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
G80(DH)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
G80(DH)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
G80(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
G80(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
G80(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)

model	year	area	system	function	subfunction
G80(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
G80(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
G80(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Intelligent Driving Mode Integrated Control
G80(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
G80(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
G80(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
G80(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
G80(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
G80(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
G80(DH)	2017	USA	AC(Air Conditioning)	Version Information	
G80(DH)	2017	USA	AC(Air Conditioning)	Read Fault Code	
G80(DH)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
G80(DH)	2017	USA	AC(Air Conditioning)	Read Data Stream	
G80(DH)	2017	USA	AC(Air Conditioning)	Actuation Test	
G80(DH)	2017	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
G80(DH)	2017	USA	BCM(Body Control Module)	Version Information	
G80(DH)	2017	USA	BCM(Body Control Module)	Read Fault Code	
G80(DH)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
G80(DH)	2017	USA	BCM(Body Control Module)	Read Data Stream	
G80(DH)	2017	USA	BCM(Body Control Module)	Special Function	HUD Calibration
G80(DH)	2017	USA	BCM(Body Control Module)	Actuation Test	
G80(DH)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
G80(DH)	2017	USA	BCM(Body Control Module)	Special Function	User Option
G80(DH)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
G80(DH)	2017	USA	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
G80(DH)	2017	USA	MDPS(Motor Driven Power Steering)	Version Information	
G80(DH)	2017	USA	MDPS(Motor Driven Power Steering)	Read Fault Code	
G80(DH)	2017	USA	MDPS(Motor Driven Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
G80(DH)	2017	USA	MDPS(Motor Driven Power Steering)	Read Data Stream	
G80(DH)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
G80(DH)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
G80(DH)	2017	USA	Smart Key Unit	Version Information	
G80(DH)	2017	USA	Smart Key Unit	Read Fault Code	
G80(DH)	2017	USA	Smart Key Unit	Clear Fault Memory	
G80(DH)	2017	USA	Smart Key Unit	Read Data Stream	
G80(DH)	2017	USA	Smart Key Unit	Actuation Test	
G80(DH)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
G80(DH)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
G80(DH)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
G80(DH)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
G80(DH)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
G80(DH)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
G80(DH)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
G80(DH)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
G80(DH)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
G80(DH)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
G80(DH)	2017	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
G80(DH)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
G80(DH)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
G80(DH)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
G80(DH)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
G80(DH)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
G80(DH)	2017	USA	AHLS(Auto Headlamp Leveling System)	Version Information	
G80(DH)	2017	USA	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
G80(DH)	2017	USA	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
G80(DH)	2017	USA	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
G80(DH)	2017	USA	AHLS(Auto Headlamp Leveling System)	Actuation Test	
G80(DH)	2017	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
G80(DH)	2017	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
G80(DH)	2017	USA	Electronic Control Suspension	Version Information	
G80(DH)	2017	USA	Electronic Control Suspension	Read Fault Code	
G80(DH)	2017	USA	Electronic Control Suspension	Clear Fault Memory	
G80(DH)	2017	USA	Electronic Control Suspension	Read Data Stream	
G80(DH)	2017	USA	Electronic Control Suspension	Actuation Test	
G80(DH)	2017	USA	4WD Control	Version Information	
G80(DH)	2017	USA	4WD Control	Read Fault Code	
G80(DH)	2017	USA	4WD Control	Clear Fault Memory	
G80(DH)	2017	USA	4WD Control	Read Data Stream	
G80(DH)	2017	USA	4WD Control	Special Function	ECU Data Back-up&Writing
G80(DH)	2017	USA	4WD Control	Special Function	4WD Lamp Actuation Test
G80(DH)	2017	USA	4WD Control	Special Function	Torque Coupling Actuation Test
G80(DH)	2017	USA	4WD Control	Special Function	Oil Data Initialization
G80(DH)	2017	USA	4WD Control	Special Function	Power Down Calibration
G80(DH)	2017	USA	4WD Control	Special Function	T\C Clutch Calibration
G80(DH)	2017	USA	4WD Control	Special Function	Clutch Learning Reset
G80(DH)	2017	USA	4WD Control	Special Function	HW Characteristics
G80(DH)	2017	USA	LKAS(Lane Keeping Assist System)	Version Information	
G80(DH)	2017	USA	LKAS(Lane Keeping Assist System)	Read Fault Code	
G80(DH)	2017	USA	LKAS(Lane Keeping Assist System)	Clear Fault Memory	
G80(DH)	2017	USA	LKAS(Lane Keeping Assist System)	Read Data Stream	
G80(DH)	2017	USA	LKAS(Lane Keeping Assist System)	Special Function	SPC Calibration
G80(DH)	2017	USA	LKAS(Lane Keeping Assist System)	Special Function	SPTAC Calibration
G80(DH)	2017	USA	LKAS(Lane Keeping Assist System)	Special Function	LKAS/LDWS Variant Coding
G80(DH)	2017	USA	BSD(Blind Spot Detection)	Version Information	

model	year	area	system	function	subfunction
G80(DH)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
G80(DH)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
G80(DH)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	
G80(DH)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
G80(DH)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
G80(DH)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
G80(DH)	2017	USA	SCC(Smart Cruise Control)	Version Information	
G80(DH)	2017	USA	SCC(Smart Cruise Control)	Read Fault Code	
G80(DH)	2017	USA	SCC(Smart Cruise Control)	Clear Fault Memory	
G80(DH)	2017	USA	SCC(Smart Cruise Control)	Read Data Stream	
G80(DH)	2017	USA	SCC(Smart Cruise Control)	Special Function	SCC Variant Coding
G80(DH)	2017	USA	SCC(Smart Cruise Control)	Special Function	SCC Alignment
G80(DH)	2017	USA	Amplifier	Version Information	
G80(DH)	2017	USA	Amplifier	Special Function	AMP Operation Test
G80(DH)	2017	USA	Audio Video Navigation	Version Information	
G80(DH)	2017	USA	Audio Video Navigation	Read Data Stream	
G80(DH)	2017	USA	Audio Video Navigation	Special Function	Ring Break
G80(DH)	2017	USA	AAF(Active Air Flap)	Version Information	
G80(DH)	2017	USA	AAF(Active Air Flap)	Read Fault Code	
G80(DH)	2017	USA	AAF(Active Air Flap)	Clear Fault Memory	
G80(DH)	2017	USA	AAF(Active Air Flap)	Read Data Stream	
G80(DH)	2017	USA	AAF(Active Air Flap)	Actuation Test	
G80(DH)	2017	USA	Central Gateway	Version Information	
G80(DH)	2017	USA	Central Gateway	Read Fault Code	
G80(DH)	2017	USA	Central Gateway	Clear Fault Memory	
G80(DH)	2017	USA	Central Gateway	Special Function	Erase Network Configuration
G80(DH)	2017	USA	PGS(Parking Guide System)	Version Information	
G80(DH)	2017	USA	PGS(Parking Guide System)	Read Fault Code	
G80(DH)	2017	USA	PGS(Parking Guide System)	Clear Fault Memory	

model	year	area	system	function	subfunction
G80(DH)	2017	USA	PGS(Parking Guide System)	Read Data Stream	
G80(DH)	2017	USA	PGS(Parking Guide System)	Actuation Test	
G80(DH)	2017	USA	PSB(Pre-safe Seat Belt)	Version Information	
G80(DH)	2017	USA	PSB(Pre-safe Seat Belt)	Read Fault Code	
G80(DH)	2017	USA	PSB(Pre-safe Seat Belt)	Clear Fault Memory	
G80(DH)	2017	USA	PSB(Pre-safe Seat Belt)	Read Data Stream	
G80(DH)	2017	USA	PSB(Pre-safe Seat Belt)	Actuation Test	
G80(DH)	2017	USA	PSB(Pre-safe Seat Belt)	Special Function	PSB Variant Coding
G80(DH)	2017	USA	I-BOX	Version Information	
G80(DH)	2017	USA	I-BOX	Read Fault Code	
G80(DH)	2017	USA	I-BOX	Clear Fault Memory	
G80(DH)	2017	USA	ECM(Engine Control Module)	Read FreezeData	
G80(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
G80(DH)	2017	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
G90(HI)	2018	USA	ECM(Engine Control Module)	Version Information	
G90(HI)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
G90(HI)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
G90(HI)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
G90(HI)	2018	USA	ECM(Engine Control Module)	Actuation Test	
G90(HI)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
G90(HI)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
G90(HI)	2018	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
G90(HI)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
G90(HI)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
G90(HI)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
G90(HI)	2018	USA	TCM(Transmission Control Module)	Version Information	
G90(HI)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
G90(HI)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	
G90(HI)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
G90(HI)	2018	USA	TCM(Transmission Control Module)	Actuation Test	
G90(HI)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
G90(HI)	2018	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
G90(HI)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
G90(HI)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
G90(HI)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
G90(HI)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
G90(HI)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
G90(HI)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC/Only)
G90(HI)	2018	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
G90(HI)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
G90(HI)	2018	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
G90(HI)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
G90(HI)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCG/AFD)
G90(HI)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
G90(HI)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
G90(HI)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
G90(HI)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
G90(HI)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
G90(HI)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
G90(HI)	2018	USA	AC(Air Conditioning)	Version Information	
G90(HI)	2018	USA	AC(Air Conditioning)	Read Fault Code	
G90(HI)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
G90(HI)	2018	USA	AC(Air Conditioning)	Read Data Stream	
G90(HI)	2018	USA	AC(Air Conditioning)	Actuation Test	
G90(HI)	2018	USA	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
G90(HI)	2018	USA	BCM(Body Control Module)	Read Fault Code	
G90(HI)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
G90(HI)	2018	USA	BCM(Body Control Module)	Read Data Stream	
G90(HI)	2018	USA	BCM(Body Control Module)	Actuation Test	
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	Initialization Of Rear Door Curtains
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	User Option
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	Antenna Status Check
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	Current FOB Key Check
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	FOB Key Status Information
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	Neutralization Mode
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	Smart Key Code Saving
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	SMK Status Information
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
G90(HI)	2018	USA	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
G90(HI)	2018	USA	Adaptive Front Lighting System	Version Information	
G90(HI)	2018	USA	Adaptive Front Lighting System	Read Fault Code	
G90(HI)	2018	USA	Adaptive Front Lighting System	Clear Fault Memory	
G90(HI)	2018	USA	Adaptive Front Lighting System	Read Data Stream	
G90(HI)	2018	USA	Adaptive Front Lighting System	Actuation Test	
G90(HI)	2018	USA	Adaptive Front Lighting System	Special Function	Parameter Download
G90(HI)	2018	USA	Adaptive Front Lighting System	Special Function	Calibration
G90(HI)	2018	USA	Motor Driven Power Steering	Version Information	
G90(HI)	2018	USA	Motor Driven Power Steering	Read Fault Code	
G90(HI)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
G90(HI)	2018	USA	Motor Driven Power Steering	Read Data Stream	

model	year	area	system	function	subfunction
G90(HI)	2018	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
G90(HI)	2018	USA	Electronic Control Suspension	Version Information	
G90(HI)	2018	USA	Electronic Control Suspension	Read Fault Code	
G90(HI)	2018	USA	Electronic Control Suspension	Clear Fault Memory	
G90(HI)	2018	USA	Electronic Control Suspension	Read Data Stream	
G90(HI)	2018	USA	4WD Control	Version Information	
G90(HI)	2018	USA	4WD Control	Read Fault Code	
G90(HI)	2018	USA	4WD Control	Clear Fault Memory	
G90(HI)	2018	USA	4WD Control	Read Data Stream	
G90(HI)	2018	USA	4WD Control	Actuation Test	
G90(HI)	2018	USA	4WD Control	Special Function	ECU Data Back-up&Writing
G90(HI)	2018	USA	4WD Control	Special Function	HW Characteristics
G90(HI)	2018	USA	4WD Control	Special Function	Power Down Calibration
G90(HI)	2018	USA	4WD Control	Special Function	T\C Clutch Calibration
G90(HI)	2018	USA	4WD Control	Special Function	Variant Coding
G90(HI)	2018	USA	Blind Spot Detection	Version Information	
G90(HI)	2018	USA	Blind Spot Detection	Read Fault Code	
G90(HI)	2018	USA	Blind Spot Detection	Clear Fault Memory	
G90(HI)	2018	USA	Blind Spot Detection	Read Data Stream	
G90(HI)	2018	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
G90(HI)	2018	USA	Blind Spot Detection	Special Function	BSD Variant Coding
G90(HI)	2018	USA	Lane Keeping Assist System	Version Information	
G90(HI)	2018	USA	Lane Keeping Assist System	Read Fault Code	
G90(HI)	2018	USA	Lane Keeping Assist System	Clear Fault Memory	
G90(HI)	2018	USA	Lane Keeping Assist System	Read Data Stream	
G90(HI)	2018	USA	Lane Keeping Assist System	Special Function	LDWS Variant Coding
G90(HI)	2018	USA	Lane Keeping Assist System	Special Function	SPTAC Calibration
G90(HI)	2018	USA	Lane Keeping Assist System	Special Function	SPC Calibration
G90(HI)	2018	USA	Multi-View Camera System	Version Information	

model	year	area	system	function	subfunction
G90(HI)	2018	USA	Multi-View Camera System	Read Fault Code	
G90(HI)	2018	USA	Multi-View Camera System	Clear Fault Memory	
G90(HI)	2018	USA	Multi-View Camera System	Read Data Stream	
G90(HI)	2018	USA	Multi-View Camera System	Actuation Test	
G90(HI)	2018	USA	Parking Guide System	Version Information	
G90(HI)	2018	USA	Parking Guide System	Read Fault Code	
G90(HI)	2018	USA	Parking Guide System	Clear Fault Memory	
G90(HI)	2018	USA	Parking Guide System	Read Data Stream	
G90(HI)	2018	USA	Pre-safe Seat Belt	Version Information	
G90(HI)	2018	USA	Pre-safe Seat Belt	Read Fault Code	
G90(HI)	2018	USA	Pre-safe Seat Belt	Clear Fault Memory	
G90(HI)	2018	USA	Pre-safe Seat Belt	Read Data Stream	
G90(HI)	2018	USA	Pre-safe Seat Belt	Actuation Test	
G90(HI)	2018	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
G90(HI)	2018	USA	Active Air Flap	Version Information	
G90(HI)	2018	USA	Active Air Flap	Read Fault Code	
G90(HI)	2018	USA	Active Air Flap	Clear Fault Memory	
G90(HI)	2018	USA	Active Air Flap	Read Data Stream	
G90(HI)	2018	USA	Active Air Flap	Actuation Test	
G90(HI)	2018	USA	Amplifier	Version Information	
G90(HI)	2018	USA	Amplifier	Special Function	AMP Operation Test
G90(HI)	2018	USA	Audio Video Navigation	Version Information	
G90(HI)	2018	USA	Audio Video Navigation	Read Fault Code	
G90(HI)	2018	USA	Audio Video Navigation	Clear Fault Memory	
G90(HI)	2018	USA	Audio Video Navigation	Read Data Stream	
G90(HI)	2018	USA	Audio Video Navigation	Special Function	Variant Coding
G90(HI)	2018	USA	E-Shifter	Version Information	
G90(HI)	2018	USA	E-Shifter	Read Fault Code	
G90(HI)	2018	USA	E-Shifter	Clear Fault Memory	

model	year	area	system	function	subfunction
G90(HI)	2018	USA	E-Shifter	Read Data Stream	
G90(HI)	2018	USA	E-Shifter	Actuation Test	
G90(HI)	2018	USA	Central Gateway	Version Information	
G90(HI)	2018	USA	Central Gateway	Read Fault Code	
G90(HI)	2018	USA	Central Gateway	Clear Fault Memory	
G90(HI)	2018	USA	Central Gateway	Read Data Stream	
G90(HI)	2018	USA	Central Gateway	Special Function	Erase Network Configuration
G90(HI)	2018	USA	Rear Armrest Switch	Version Information	
G90(HI)	2018	USA	Rear Armrest Switch	Read Fault Code	
G90(HI)	2018	USA	Rear Armrest Switch	Clear Fault Memory	
G90(HI)	2018	USA	Rear Armrest Switch	Read Data Stream	
G90(HI)	2018	USA	Rear Armrest Switch	Actuation Test	
G90(HI)	2018	USA	Rear Armrest Switch	Special Function	Seat Limit Position Setting
G90(HI)	2017	USA	ECM(Engine Control Module)	Version Information	
G90(HI)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
G90(HI)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
G90(HI)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
G90(HI)	2017	USA	ECM(Engine Control Module)	Actuation Test	
G90(HI)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
G90(HI)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
G90(HI)	2017	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
G90(HI)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
G90(HI)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
G90(HI)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
G90(HI)	2017	USA	TCM(Transmission Control Module)	Version Information	
G90(HI)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
G90(HI)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
G90(HI)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
G90(HI)	2017	USA	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
G90(HI)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
G90(HI)	2017	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
G90(HI)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
G90(HI)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
G90(HI)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
G90(HI)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
G90(HI)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Rear Sensor Alignment(SCC/AFB)
G90(HI)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
G90(HI)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
G90(HI)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only)
G90(HI)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
G90(HI)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
G90(HI)	2017	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
G90(HI)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
G90(HI)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
G90(HI)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
G90(HI)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
G90(HI)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
G90(HI)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
G90(HI)	2017	USA	AC(Air Conditioning)	Version Information	
G90(HI)	2017	USA	AC(Air Conditioning)	Read Fault Code	
G90(HI)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
G90(HI)	2017	USA	AC(Air Conditioning)	Read Data Stream	
G90(HI)	2017	USA	AC(Air Conditioning)	Actuation Test	
G90(HI)	2017	USA	BCM(Body Control Module)	Version Information	
G90(HI)	2017	USA	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
G90(HI)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
G90(HI)	2017	USA	BCM(Body Control Module)	Read Data Stream	
G90(HI)	2017	USA	BCM(Body Control Module)	Actuation Test	
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	Initialization Of Rear Door Curtains
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	User Option
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	Antenna Status Check
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	Current FOB Key Check
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	FOB Key Status Information
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	Neutralization Mode
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	Smart Key Code Saving
G90(HI)	2017	USA	BCM(Body Control Module)	Special Function	SMK Status Information
G90(HI)	2017	USA	AHLS(Auto Headlamp Leveling System)	Version Information	
G90(HI)	2017	USA	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
G90(HI)	2017	USA	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
G90(HI)	2017	USA	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
G90(HI)	2017	USA	AHLS(Auto Headlamp Leveling System)	Actuation Test	
G90(HI)	2017	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
G90(HI)	2017	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
G90(HI)	2017	USA	EPS(Electronic Power Steering)	Version Information	
G90(HI)	2017	USA	EPS(Electronic Power Steering)	Read Fault Code	
G90(HI)	2017	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
G90(HI)	2017	USA	EPS(Electronic Power Steering)	Read Data Stream	
G90(HI)	2017	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
G90(HI)	2017	USA	Electronic Control Suspension	Version Information	
G90(HI)	2017	USA	Electronic Control Suspension	Read Fault Code	
G90(HI)	2017	USA	Electronic Control Suspension	Clear Fault Memory	
G90(HI)	2017	USA	Electronic Control Suspension	Read Data Stream	
G90(HI)	2017	USA	Driveshaft	Version Information	
G90(HI)	2017	USA	Driveshaft	Read Fault Code	
G90(HI)	2017	USA	Driveshaft	Clear Fault Memory	
G90(HI)	2017	USA	Driveshaft	Read Data Stream	
G90(HI)	2017	USA	Driveshaft	Actuation Test	
G90(HI)	2017	USA	Driveshaft	Special Function	ECU Data Back-up&Writing
G90(HI)	2017	USA	Driveshaft	Special Function	HW Characteristics
G90(HI)	2017	USA	Driveshaft	Special Function	Power Down Calibration
G90(HI)	2017	USA	Driveshaft	Special Function	T\C Clutch Calibration
G90(HI)	2017	USA	Driveshaft	Special Function	Variant Coding
G90(HI)	2017	USA	Blind Spot Detection	Version Information	
G90(HI)	2017	USA	Blind Spot Detection	Read Fault Code	
G90(HI)	2017	USA	Blind Spot Detection	Clear Fault Memory	
G90(HI)	2017	USA	Blind Spot Detection	Read Data Stream	
G90(HI)	2017	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
G90(HI)	2017	USA	Blind Spot Detection	Special Function	BSD Variant Coding
G90(HI)	2017	USA	Lane Keeping Assist System	Version Information	
G90(HI)	2017	USA	Lane Keeping Assist System	Read Fault Code	
G90(HI)	2017	USA	Lane Keeping Assist System	Clear Fault Memory	
G90(HI)	2017	USA	Lane Keeping Assist System	Read Data Stream	
G90(HI)	2017	USA	Lane Keeping Assist System	Special Function	LDWS Variant Coding
G90(HI)	2017	USA	Lane Keeping Assist System	Special Function	SPTAC Calibration
G90(HI)	2017	USA	Lane Keeping Assist System	Special Function	SPC Calibration
G90(HI)	2017	USA	Multi-View Camera System	Version Information	
G90(HI)	2017	USA	Multi-View Camera System	Read Fault Code	

model	year	area	system	function	subfunction
G90(HI)	2017	USA	Multi-View Camera System	Clear Fault Memory	
G90(HI)	2017	USA	Multi-View Camera System	Read Data Stream	
G90(HI)	2017	USA	Multi-View Camera System	Actuation Test	
G90(HI)	2017	USA	Parking Guide System	Version Information	
G90(HI)	2017	USA	Parking Guide System	Read Fault Code	
G90(HI)	2017	USA	Parking Guide System	Clear Fault Memory	
G90(HI)	2017	USA	Parking Guide System	Read Data Stream	
G90(HI)	2017	USA	Pre-safe Seat Belt	Version Information	
G90(HI)	2017	USA	Pre-safe Seat Belt	Read Fault Code	
G90(HI)	2017	USA	Pre-safe Seat Belt	Clear Fault Memory	
G90(HI)	2017	USA	Pre-safe Seat Belt	Read Data Stream	
G90(HI)	2017	USA	Pre-safe Seat Belt	Actuation Test	
G90(HI)	2017	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
G90(HI)	2017	USA	Active Air Flap	Version Information	
G90(HI)	2017	USA	Active Air Flap	Read Fault Code	
G90(HI)	2017	USA	Active Air Flap	Clear Fault Memory	
G90(HI)	2017	USA	Active Air Flap	Read Data Stream	
G90(HI)	2017	USA	Active Air Flap	Actuation Test	
G90(HI)	2017	USA	Amplifier	Version Information	
G90(HI)	2017	USA	Amplifier	Read Fault Code	
G90(HI)	2017	USA	Amplifier	Clear Fault Memory	
G90(HI)	2017	USA	Amplifier	Read Data Stream	
G90(HI)	2017	USA	Amplifier	Special Function	Variant Coding
G90(HI)	2017	USA	Amplifier	Special Function	AMP Operation Test
G90(HI)	2017	USA	E-Shifter	Version Information	
G90(HI)	2017	USA	E-Shifter	Read Fault Code	
G90(HI)	2017	USA	E-Shifter	Clear Fault Memory	
G90(HI)	2017	USA	E-Shifter	Read Data Stream	
G90(HI)	2017	USA	E-Shifter	Actuation Test	

model	year	area	system	function	subfunction
G90(HI)	2017	USA	Central Gateway	Version Information	
G90(HI)	2017	USA	Central Gateway	Read Fault Code	
G90(HI)	2017	USA	Central Gateway	Clear Fault Memory	
G90(HI)	2017	USA	Central Gateway	Read Data Stream	
G90(HI)	2017	USA	Central Gateway	Special Function	Erase Network Configuration
G90(HI)	2017	USA	Rear Armrest Switch	Version Information	
G90(HI)	2017	USA	Rear Armrest Switch	Read Fault Code	
G90(HI)	2017	USA	Rear Armrest Switch	Clear Fault Memory	
G90(HI)	2017	USA	Rear Armrest Switch	Read Data Stream	
G90(HI)	2017	USA	Rear Armrest Switch	Actuation Test	
G90(HI)	2017	USA	Rear Armrest Switch	Special Function	Seat Limit Position Setting
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Version Information	
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(BH)	2014	USA	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2014	USA	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Genesis(BH)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2014	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Genesis(BH)	2014	USA	Electronic Stability Control	Version Information	
Genesis(BH)	2014	USA	Electronic Stability Control	Read Fault Code	
Genesis(BH)	2014	USA	Electronic Stability Control	Clear Fault Memory	
Genesis(BH)	2014	USA	Electronic Stability Control	Read Data Stream	
Genesis(BH)	2014	USA	Electronic Stability Control	Actuation Test	
Genesis(BH)	2014	USA	Electronic Stability Control	Special Function	Steering Angle Learning
Genesis(BH)	2014	USA	Electronic Stability Control	Special Function	Long G Sensor Calibration(Only EPB)
Genesis(BH)	2014	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2014	USA	Electronic Stability Control	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2014	USA	Electronic Stability Control	Special Function	Pressure Sensor Calibration
Genesis(BH)	2014	USA	Electronic Stability Control	Special Function	Valve Flushing
Genesis(BH)	2014	USA	Electronic Stability Control	Special Function	Valve Test
Genesis(BH)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(BH)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(BH)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis(BH)	2014	USA	AC(Air Conditioning)	Version Information	
Genesis(BH)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2014	USA	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2014	USA	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2014	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH)	2014	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(BH)	2014	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2014	USA	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH)	2014	USA	Electric Hydraulic Power Steering	Version Information	
Genesis(BH)	2014	USA	Electric Hydraulic Power Steering	Read Fault Code	
Genesis(BH)	2014	USA	Electric Hydraulic Power Steering	Clear Fault Memory	
Genesis(BH)	2014	USA	Electric Hydraulic Power Steering	Read Data Stream	
Genesis(BH)	2014	USA	Electric Hydraulic Power Steering	Actuation Test	
Genesis(BH)	2014	USA	Electric Hydraulic Power Steering	Special Function	EPS Type Recognition
Genesis(BH)	2014	USA	Head Lamp	Version Information	
Genesis(BH)	2014	USA	Head Lamp	Read Fault Code	
Genesis(BH)	2014	USA	Head Lamp	Clear Fault Memory	
Genesis(BH)	2014	USA	Head Lamp	Read Data Stream	
Genesis(BH)	2014	USA	Head Lamp	Actuation Test	
Genesis(BH)	2014	USA	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2014	USA	Head Lamp	Special Function	Calibration
Genesis(BH)	2014	USA	Head Lamp	Special Function	AFLS Aming Mode
Genesis(BH)	2014	USA	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2014	USA	Head Lamp	Special Function	Level Initialization
Genesis(BH)	2014	USA	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Genesis(BH)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2014	USA	IMM(Immobilizer)	Special Function	Password
Genesis(BH)	2014	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Genesis(BH)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2014	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2014	USA	Smart Key Code Saving	Version Information	
Genesis(BH)	2014	USA	Smart Key Code Saving	Read Fault Code	
Genesis(BH)	2014	USA	Smart Key Code Saving	Clear Fault Memory	
Genesis(BH)	2014	USA	Smart Key Code Saving	Read Data Stream	
Genesis(BH)	2014	USA	Smart Key Code Saving	Actuation Test	
Genesis(BH)	2014	USA	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH)	2014	USA	Smart Key Code Saving	Special Function	Antenna Status Check
Genesis(BH)	2014	USA	Smart Key Code Saving	Special Function	Current FOB Key Check
Genesis(BH)	2014	USA	Smart Key Code Saving	Special Function	FOB Key Status Information
Genesis(BH)	2014	USA	Smart Key Code Saving	Special Function	Neutralization Mode
Genesis(BH)	2014	USA	Smart Key Code Saving	Special Function	SMK Status Information
Genesis(BH)	2014	USA	Transmitter Code Saving	Read Data Stream	
Genesis(BH)	2014	USA	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH)	2014	USA	CCS(Cruise Control System)	Version Information	
Genesis(BH)	2014	USA	CCS(Cruise Control System)	Read Fault Code	
Genesis(BH)	2014	USA	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH)	2014	USA	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH)	2014	USA	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH)	2014	USA	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Genesis(BH)	2014	USA	Pre-safe Seat Belt	Version Information	
Genesis(BH)	2014	USA	Pre-safe Seat Belt	Read Fault Code	
Genesis(BH)	2014	USA	Pre-safe Seat Belt	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(BH)	2014	USA	Pre-safe Seat Belt	Actuation Test	
Genesis(BH)	2014	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(BH)	2014	USA	Assist Door Module	Version Information	
Genesis(BH)	2014	USA	Assist Door Module	Read Fault Code	
Genesis(BH)	2014	USA	Assist Door Module	Clear Fault Memory	
Genesis(BH)	2014	USA	Assist Door Module	Read Data Stream	
Genesis(BH)	2014	USA	Assist Door Module	Actuation Test	
Genesis(BH)	2014	USA	Cluster Module	Version Information	
Genesis(BH)	2014	USA	Cluster Module	Read Fault Code	
Genesis(BH)	2014	USA	Cluster Module	Clear Fault Memory	
Genesis(BH)	2014	USA	Cluster Module	Read Data Stream	
Genesis(BH)	2014	USA	Cluster Module	Actuation Test	
Genesis(BH)	2014	USA	Driver Door Module	Version Information	
Genesis(BH)	2014	USA	Driver Door Module	Read Fault Code	
Genesis(BH)	2014	USA	Driver Door Module	Clear Fault Memory	
Genesis(BH)	2014	USA	Driver Door Module	Read Data Stream	
Genesis(BH)	2014	USA	Driver Door Module	Actuation Test	
Genesis(BH)	2014	USA	Electric Control Wiper	Version Information	
Genesis(BH)	2014	USA	Electric Control Wiper	Read Fault Code	
Genesis(BH)	2014	USA	Electric Control Wiper	Clear Fault Memory	
Genesis(BH)	2014	USA	Electric Control Wiper	Read Data Stream	
Genesis(BH)	2014	USA	Front Area Module	Version Information	
Genesis(BH)	2014	USA	Front Area Module	Read Fault Code	
Genesis(BH)	2014	USA	Front Area Module	Clear Fault Memory	
Genesis(BH)	2014	USA	Front Area Module	Read Data Stream	
Genesis(BH)	2014	USA	Front Area Module	Actuation Test	
Genesis(BH)	2014	USA	Front Back Warning System	Version Information	
Genesis(BH)	2014	USA	Front Back Warning System	Read Fault Code	
Genesis(BH)	2014	USA	Front Back Warning System	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(BH)	2014	USA	Front Back Warning System	Read Data Stream	
Genesis(BH)	2014	USA	Inter Panel Module	Version Information	
Genesis(BH)	2014	USA	Inter Panel Module	Read Fault Code	
Genesis(BH)	2014	USA	Inter Panel Module	Clear Fault Memory	
Genesis(BH)	2014	USA	Inter Panel Module	Read Data Stream	
Genesis(BH)	2014	USA	Inter Panel Module	Actuation Test	
Genesis(BH)	2014	USA	Inter Panel Module	Special Function	Serial Communication Line Check
Genesis(BH)	2014	USA	Inter Panel Module	Special Function	Antenna Status Check
Genesis(BH)	2014	USA	Inter Panel Module	Special Function	ESCL Status Information
Genesis(BH)	2014	USA	Inter Panel Module	Special Function	FOB Key Status Information
Genesis(BH)	2014	USA	Inter Panel Module	Special Function	IPM Status Information
Genesis(BH)	2014	USA	Inter Panel Module	Special Function	Neutralization Mode
Genesis(BH)	2014	USA	Inter Panel Module	Special Function	PDM Status Information
Genesis(BH)	2014	USA	Lane Departure Warning System	Version Information	
Genesis(BH)	2014	USA	Lane Departure Warning System	Read Fault Code	
Genesis(BH)	2014	USA	Lane Departure Warning System	Clear Fault Memory	
Genesis(BH)	2014	USA	Lane Departure Warning System	Read Data Stream	
Genesis(BH)	2014	USA	Lane Departure Warning System	Special Function	LDWS Region Code
Genesis(BH)	2014	USA	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Genesis(BH)	2014	USA	Multi Function Switch	Version Information	
Genesis(BH)	2014	USA	Multi Function Switch	Read Fault Code	
Genesis(BH)	2014	USA	Multi Function Switch	Clear Fault Memory	
Genesis(BH)	2014	USA	Multi Function Switch	Read Data Stream	
Genesis(BH)	2014	USA	Power Distribution Module	Version Information	
Genesis(BH)	2014	USA	Power Distribution Module	Read Fault Code	
Genesis(BH)	2014	USA	Power Distribution Module	Clear Fault Memory	
Genesis(BH)	2014	USA	Power Distribution Module	Read Data Stream	
Genesis(BH)	2014	USA	Power Distribution Module	Actuation Test	
Genesis(BH)	2014	USA	Power Distribution Module	Special Function	ESCL Open Status Information

model	year	area	system	function	subfunction
Genesis(BH)	2014	USA	Power Seat Module	Version Information	
Genesis(BH)	2014	USA	Power Seat Module	Read Fault Code	
Genesis(BH)	2014	USA	Power Seat Module	Clear Fault Memory	
Genesis(BH)	2014	USA	Power Seat Module	Read Data Stream	
Genesis(BH)	2014	USA	Power Seat Module	Actuation Test	
Genesis(BH)	2014	USA	Power Trunk Module	Version Information	
Genesis(BH)	2014	USA	Power Trunk Module	Read Fault Code	
Genesis(BH)	2014	USA	Power Trunk Module	Clear Fault Memory	
Genesis(BH)	2014	USA	Power Trunk Module	Read Data Stream	
Genesis(BH)	2014	USA	Steering Column Module	Version Information	
Genesis(BH)	2014	USA	Steering Column Module	Read Fault Code	
Genesis(BH)	2014	USA	Steering Column Module	Clear Fault Memory	
Genesis(BH)	2014	USA	Steering Column Module	Read Data Stream	
Genesis(BH)	2014	USA	Steering Column Module	Actuation Test	
Genesis(BH)	2014	USA	Telematics Unit	Version Information	
Genesis(BH)	2014	USA	Telematics Unit	Read Fault Code	
Genesis(BH)	2014	USA	Telematics Unit	Clear Fault Memory	
Genesis(BH)	2014	USA	User Option	Read Data Stream	
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(BH)	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Version Information	
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(BH)	2013	USA	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2013	USA	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Replacement)
Genesis(BH)	2013	USA	Electronic Stability Control	Version Information	
Genesis(BH)	2013	USA	Electronic Stability Control	Read Fault Code	
Genesis(BH)	2013	USA	Electronic Stability Control	Clear Fault Memory	
Genesis(BH)	2013	USA	Electronic Stability Control	Read Data Stream	
Genesis(BH)	2013	USA	Electronic Stability Control	Actuation Test	
Genesis(BH)	2013	USA	Electronic Stability Control	Special Function	Steering Angle Learning
Genesis(BH)	2013	USA	Electronic Stability Control	Special Function	Long G Sensor Calibration(Only FR)
Genesis(BH)	2013	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2013	USA	Electronic Stability Control	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2013	USA	Electronic Stability Control	Special Function	Pressure Sensor Calibration
Genesis(BH)	2013	USA	Electronic Stability Control	Special Function	Valve Flushing
Genesis(BH)	2013	USA	Electronic Stability Control	Special Function	Valve Test
Genesis(BH)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(BH)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis(BH)	2013	USA	AC(Air Conditioning)	Version Information	
Genesis(BH)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2013	USA	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2013	USA	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2013	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH)	2013	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH)	2013	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2013	USA	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH)	2013	USA	Electric Hydraulic Power Steering	Version Information	
Genesis(BH)	2013	USA	Electric Hydraulic Power Steering	Read Fault Code	
Genesis(BH)	2013	USA	Electric Hydraulic Power Steering	Clear Fault Memory	
Genesis(BH)	2013	USA	Electric Hydraulic Power Steering	Read Data Stream	
Genesis(BH)	2013	USA	Electric Hydraulic Power Steering	Actuation Test	
Genesis(BH)	2013	USA	Electric Hydraulic Power Steering	Special Function	EPS Type Recognition
Genesis(BH)	2013	USA	Head Lamp	Version Information	
Genesis(BH)	2013	USA	Head Lamp	Read Fault Code	
Genesis(BH)	2013	USA	Head Lamp	Clear Fault Memory	
Genesis(BH)	2013	USA	Head Lamp	Read Data Stream	
Genesis(BH)	2013	USA	Head Lamp	Actuation Test	
Genesis(BH)	2013	USA	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2013	USA	Head Lamp	Special Function	Calibration
Genesis(BH)	2013	USA	Head Lamp	Special Function	AFLS Aming Mode
Genesis(BH)	2013	USA	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2013	USA	Head Lamp	Special Function	Level Initialization
Genesis(BH)	2013	USA	Head Lamp	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Genesis(BH)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(BH)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2013	USA	IMM(Immobilizer)	Special Function	Password
Genesis(BH)	2013	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Genesis(BH)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2013	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2013	USA	Smart Key Code Saving	Version Information	
Genesis(BH)	2013	USA	Smart Key Code Saving	Read Fault Code	
Genesis(BH)	2013	USA	Smart Key Code Saving	Clear Fault Memory	
Genesis(BH)	2013	USA	Smart Key Code Saving	Read Data Stream	
Genesis(BH)	2013	USA	Smart Key Code Saving	Actuation Test	
Genesis(BH)	2013	USA	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH)	2013	USA	Smart Key Code Saving	Special Function	Antenna Status Check
Genesis(BH)	2013	USA	Smart Key Code Saving	Special Function	Current FOB Key Check
Genesis(BH)	2013	USA	Smart Key Code Saving	Special Function	FOB Key Status Information
Genesis(BH)	2013	USA	Smart Key Code Saving	Special Function	Neutralization Mode
Genesis(BH)	2013	USA	Smart Key Code Saving	Special Function	SMK Status Information
Genesis(BH)	2013	USA	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2013	USA	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH)	2013	USA	CCS(Cruise Control System)	Version Information	
Genesis(BH)	2013	USA	CCS(Cruise Control System)	Read Fault Code	
Genesis(BH)	2013	USA	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH)	2013	USA	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH)	2013	USA	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH)	2013	USA	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Genesis(BH)	2013	USA	Pre-safe Seat Belt	Version Information	
Genesis(BH)	2013	USA	Pre-safe Seat Belt	Read Fault Code	
Genesis(BH)	2013	USA	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(BH)	2013	USA	Pre-safe Seat Belt	Actuation Test	
Genesis(BH)	2013	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(BH)	2013	USA	Assist Door Module	Version Information	
Genesis(BH)	2013	USA	Assist Door Module	Read Fault Code	
Genesis(BH)	2013	USA	Assist Door Module	Clear Fault Memory	
Genesis(BH)	2013	USA	Assist Door Module	Read Data Stream	
Genesis(BH)	2013	USA	Assist Door Module	Actuation Test	
Genesis(BH)	2013	USA	Cluster Module	Version Information	
Genesis(BH)	2013	USA	Cluster Module	Read Fault Code	
Genesis(BH)	2013	USA	Cluster Module	Clear Fault Memory	
Genesis(BH)	2013	USA	Cluster Module	Read Data Stream	
Genesis(BH)	2013	USA	Cluster Module	Actuation Test	
Genesis(BH)	2013	USA	Driver Door Module	Version Information	
Genesis(BH)	2013	USA	Driver Door Module	Read Fault Code	
Genesis(BH)	2013	USA	Driver Door Module	Clear Fault Memory	
Genesis(BH)	2013	USA	Driver Door Module	Read Data Stream	
Genesis(BH)	2013	USA	Driver Door Module	Actuation Test	
Genesis(BH)	2013	USA	Electric Control Wiper	Version Information	
Genesis(BH)	2013	USA	Electric Control Wiper	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(BH)	2013	USA	Electric Control Wiper	Clear Fault Memory	
Genesis(BH)	2013	USA	Electric Control Wiper	Read Data Stream	
Genesis(BH)	2013	USA	Front Area Module	Version Information	
Genesis(BH)	2013	USA	Front Area Module	Read Fault Code	
Genesis(BH)	2013	USA	Front Area Module	Clear Fault Memory	
Genesis(BH)	2013	USA	Front Area Module	Read Data Stream	
Genesis(BH)	2013	USA	Front Area Module	Actuation Test	
Genesis(BH)	2013	USA	Front Back Warning System	Version Information	
Genesis(BH)	2013	USA	Front Back Warning System	Read Fault Code	
Genesis(BH)	2013	USA	Front Back Warning System	Clear Fault Memory	
Genesis(BH)	2013	USA	Front Back Warning System	Read Data Stream	
Genesis(BH)	2013	USA	Inter Panel Module	Version Information	
Genesis(BH)	2013	USA	Inter Panel Module	Read Fault Code	
Genesis(BH)	2013	USA	Inter Panel Module	Clear Fault Memory	
Genesis(BH)	2013	USA	Inter Panel Module	Read Data Stream	
Genesis(BH)	2013	USA	Inter Panel Module	Actuation Test	
Genesis(BH)	2013	USA	Inter Panel Module	Special Function	Serial Communication Line Check
Genesis(BH)	2013	USA	Inter Panel Module	Special Function	Antenna Status Check
Genesis(BH)	2013	USA	Inter Panel Module	Special Function	ESCL Status Information
Genesis(BH)	2013	USA	Inter Panel Module	Special Function	FOB Key Status Information
Genesis(BH)	2013	USA	Inter Panel Module	Special Function	IPM Status Information
Genesis(BH)	2013	USA	Inter Panel Module	Special Function	Neutralization Mode
Genesis(BH)	2013	USA	Inter Panel Module	Special Function	PDM Status Information
Genesis(BH)	2013	USA	Lane Departure Warning System	Version Information	
Genesis(BH)	2013	USA	Lane Departure Warning System	Read Fault Code	
Genesis(BH)	2013	USA	Lane Departure Warning System	Clear Fault Memory	
Genesis(BH)	2013	USA	Lane Departure Warning System	Read Data Stream	
Genesis(BH)	2013	USA	Lane Departure Warning System	Special Function	LDWS Region Code
Genesis(BH)	2013	USA	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration

model	year	area	system	function	subfunction
Genesis(BH)	2013	USA	Multi Function Switch	Version Information	
Genesis(BH)	2013	USA	Multi Function Switch	Read Fault Code	
Genesis(BH)	2013	USA	Multi Function Switch	Clear Fault Memory	
Genesis(BH)	2013	USA	Multi Function Switch	Read Data Stream	
Genesis(BH)	2013	USA	Power Distribution Module	Version Information	
Genesis(BH)	2013	USA	Power Distribution Module	Read Fault Code	
Genesis(BH)	2013	USA	Power Distribution Module	Clear Fault Memory	
Genesis(BH)	2013	USA	Power Distribution Module	Read Data Stream	
Genesis(BH)	2013	USA	Power Distribution Module	Actuation Test	
Genesis(BH)	2013	USA	Power Distribution Module	Special Function	ESCI Open Status Information
Genesis(BH)	2013	USA	Power Seat Module	Version Information	
Genesis(BH)	2013	USA	Power Seat Module	Read Fault Code	
Genesis(BH)	2013	USA	Power Seat Module	Clear Fault Memory	
Genesis(BH)	2013	USA	Power Seat Module	Read Data Stream	
Genesis(BH)	2013	USA	Power Seat Module	Actuation Test	
Genesis(BH)	2013	USA	Steering Column Module	Version Information	
Genesis(BH)	2013	USA	Steering Column Module	Read Fault Code	
Genesis(BH)	2013	USA	Steering Column Module	Clear Fault Memory	
Genesis(BH)	2013	USA	Steering Column Module	Read Data Stream	
Genesis(BH)	2013	USA	Steering Column Module	Actuation Test	
Genesis(BH)	2013	USA	Telematics Unit	Version Information	
Genesis(BH)	2013	USA	Telematics Unit	Read Fault Code	
Genesis(BH)	2013	USA	Telematics Unit	Clear Fault Memory	
Genesis(BH)	2013	USA	User Option	Read Data Stream	
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(BH)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Version Information	
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(BH)	2012	USA	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2012	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Genesis(BH)	2012	USA	Electronic Stability Control	Version Information	
Genesis(BH)	2012	USA	Electronic Stability Control	Read Fault Code	
Genesis(BH)	2012	USA	Electronic Stability Control	Clear Fault Memory	
Genesis(BH)	2012	USA	Electronic Stability Control	Read Data Stream	
Genesis(BH)	2012	USA	Electronic Stability Control	Actuation Test	
Genesis(BH)	2012	USA	Electronic Stability Control	Special Function	Steering Angle Learning
Genesis(BH)	2012	USA	Electronic Stability Control	Special Function	Long G Sensor Calibration(Only FDR)
Genesis(BH)	2012	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2012	USA	Electronic Stability Control	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2012	USA	Electronic Stability Control	Special Function	Pressure Sensor Calibration

model	year	area	system	function	subfunction
Genesis(BH)	2012	USA	Electronic Stability Control	Special Function	Valve Flushing
Genesis(BH)	2012	USA	Electronic Stability Control	Special Function	Valve Test
Genesis(BH)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(BH)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(BH)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis(BH)	2012	USA	AC(Air Conditioning)	Version Information	
Genesis(BH)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2012	USA	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2012	USA	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2012	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH)	2012	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH)	2012	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2012	USA	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH)	2012	USA	Electric Hydraulic Power Steering	Version Information	
Genesis(BH)	2012	USA	Electric Hydraulic Power Steering	Read Fault Code	
Genesis(BH)	2012	USA	Electric Hydraulic Power Steering	Clear Fault Memory	
Genesis(BH)	2012	USA	Electric Hydraulic Power Steering	Read Data Stream	
Genesis(BH)	2012	USA	Electric Hydraulic Power Steering	Actuation Test	
Genesis(BH)	2012	USA	Electric Hydraulic Power Steering	Special Function	EPS Type Recognition
Genesis(BH)	2012	USA	Head Lamp	Version Information	
Genesis(BH)	2012	USA	Head Lamp	Read Fault Code	
Genesis(BH)	2012	USA	Head Lamp	Clear Fault Memory	
Genesis(BH)	2012	USA	Head Lamp	Read Data Stream	
Genesis(BH)	2012	USA	Head Lamp	Actuation Test	

model	year	area	system	function	subfunction
Genesis(BH)	2012	USA	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2012	USA	Head Lamp	Special Function	Calibration
Genesis(BH)	2012	USA	Head Lamp	Special Function	AFLS Aming Mode
Genesis(BH)	2012	USA	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2012	USA	Head Lamp	Special Function	Level Initialization
Genesis(BH)	2012	USA	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(BH)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2012	USA	IMM(Immobilizer)	Special Function	Password Teaching/Checking
Genesis(BH)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2012	USA	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2012	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2012	USA	Smart Key Code Saving	Read Data Stream	
Genesis(BH)	2012	USA	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH)	2012	USA	Transmitter Code Saving	Read Data Stream	
Genesis(BH)	2012	USA	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH)	2012	USA	CCS(Cruise Control System)	Version Information	
Genesis(BH)	2012	USA	CCS(Cruise Control System)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(BH)	2012	USA	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH)	2012	USA	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH)	2012	USA	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH)	2012	USA	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Genesis(BH)	2012	USA	Pre-safe Seat Belt	Version Information	
Genesis(BH)	2012	USA	Pre-safe Seat Belt	Read Fault Code	
Genesis(BH)	2012	USA	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(BH)	2012	USA	Pre-safe Seat Belt	Actuation Test	
Genesis(BH)	2012	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(BH)	2012	USA	Assist Door Module	Version Information	
Genesis(BH)	2012	USA	Assist Door Module	Read Fault Code	
Genesis(BH)	2012	USA	Assist Door Module	Clear Fault Memory	
Genesis(BH)	2012	USA	Assist Door Module	Read Data Stream	
Genesis(BH)	2012	USA	Assist Door Module	Actuation Test	
Genesis(BH)	2012	USA	Cluster Module	Version Information	
Genesis(BH)	2012	USA	Cluster Module	Read Fault Code	
Genesis(BH)	2012	USA	Cluster Module	Clear Fault Memory	
Genesis(BH)	2012	USA	Cluster Module	Read Data Stream	
Genesis(BH)	2012	USA	Cluster Module	Actuation Test	
Genesis(BH)	2012	USA	Driver Door Module	Version Information	
Genesis(BH)	2012	USA	Driver Door Module	Read Fault Code	
Genesis(BH)	2012	USA	Driver Door Module	Clear Fault Memory	
Genesis(BH)	2012	USA	Driver Door Module	Read Data Stream	
Genesis(BH)	2012	USA	Driver Door Module	Actuation Test	
Genesis(BH)	2012	USA	Driver Information System	Version Information	
Genesis(BH)	2012	USA	Driver Information System	Read Fault Code	
Genesis(BH)	2012	USA	Driver Information System	Clear Fault Memory	
Genesis(BH)	2012	USA	Driver Information System	Read Data Stream	
Genesis(BH)	2012	USA	Driver Information System	Actuation Test	

model	year	area	system	function	subfunction
Genesis(BH)	2012	USA	Driver Information System	Special Function	ECU Serial Number
Genesis(BH)	2012	USA	Driver Information System	Special Function	Get All S/W Version
Genesis(BH)	2012	USA	Driver Information System	Special Function	Update From CD
Genesis(BH)	2012	USA	Driver Information System	Special Function	Ring Break
Genesis(BH)	2012	USA	Driver Information System	Special Function	DVD-Request when slot is Empty
Genesis(BH)	2012	USA	Driver Information System	Special Function	Variant Coding
Genesis(BH)	2012	USA	Driver Information System	Special Function	Wake Up Line
Genesis(BH)	2012	USA	Driver Information System	Special Function	Xdb Test
Genesis(BH)	2012	USA	Electric Control Wiper	Version Information	
Genesis(BH)	2012	USA	Electric Control Wiper	Read Fault Code	
Genesis(BH)	2012	USA	Electric Control Wiper	Clear Fault Memory	
Genesis(BH)	2012	USA	Electric Control Wiper	Read Data Stream	
Genesis(BH)	2012	USA	Front Area Module	Version Information	
Genesis(BH)	2012	USA	Front Area Module	Read Fault Code	
Genesis(BH)	2012	USA	Front Area Module	Clear Fault Memory	
Genesis(BH)	2012	USA	Front Area Module	Read Data Stream	
Genesis(BH)	2012	USA	Front Area Module	Actuation Test	
Genesis(BH)	2012	USA	Front Back Warning System	Version Information	
Genesis(BH)	2012	USA	Front Back Warning System	Read Fault Code	
Genesis(BH)	2012	USA	Front Back Warning System	Clear Fault Memory	
Genesis(BH)	2012	USA	Front Back Warning System	Read Data Stream	
Genesis(BH)	2012	USA	Inter Panel Module	Version Information	
Genesis(BH)	2012	USA	Inter Panel Module	Read Fault Code	
Genesis(BH)	2012	USA	Inter Panel Module	Clear Fault Memory	
Genesis(BH)	2012	USA	Inter Panel Module	Read Data Stream	
Genesis(BH)	2012	USA	Inter Panel Module	Actuation Test	
Genesis(BH)	2012	USA	Inter Panel Module	Special Function	Serial Communication Line Check
Genesis(BH)	2012	USA	Inter Panel Module	Special Function	Antenna Status Check
Genesis(BH)	2012	USA	Inter Panel Module	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Genesis(BH)	2012	USA	Inter Panel Module	Special Function	FOB Key Status Information
Genesis(BH)	2012	USA	Inter Panel Module	Special Function	IPM Status Information
Genesis(BH)	2012	USA	Inter Panel Module	Special Function	Neutralization Mode
Genesis(BH)	2012	USA	Inter Panel Module	Special Function	PDM Status Information
Genesis(BH)	2012	USA	Lane Departure Warning System	Version Information	
Genesis(BH)	2012	USA	Lane Departure Warning System	Read Fault Code	
Genesis(BH)	2012	USA	Lane Departure Warning System	Clear Fault Memory	
Genesis(BH)	2012	USA	Lane Departure Warning System	Read Data Stream	
Genesis(BH)	2012	USA	Lane Departure Warning System	Special Function	LDWS Region Code
Genesis(BH)	2012	USA	Lane Departure Warning System	Special Function	LDWS Reference Point Calibration
Genesis(BH)	2012	USA	Multi Function Switch	Version Information	
Genesis(BH)	2012	USA	Multi Function Switch	Read Fault Code	
Genesis(BH)	2012	USA	Multi Function Switch	Clear Fault Memory	
Genesis(BH)	2012	USA	Multi Function Switch	Read Data Stream	
Genesis(BH)	2012	USA	Power Distribution Module	Version Information	
Genesis(BH)	2012	USA	Power Distribution Module	Read Fault Code	
Genesis(BH)	2012	USA	Power Distribution Module	Clear Fault Memory	
Genesis(BH)	2012	USA	Power Distribution Module	Read Data Stream	
Genesis(BH)	2012	USA	Power Distribution Module	Actuation Test	
Genesis(BH)	2012	USA	Power Distribution Module	Special Function	Lscr Open Status Information
Genesis(BH)	2012	USA	Power Seat Module	Version Information	
Genesis(BH)	2012	USA	Power Seat Module	Read Fault Code	
Genesis(BH)	2012	USA	Power Seat Module	Clear Fault Memory	
Genesis(BH)	2012	USA	Power Seat Module	Read Data Stream	
Genesis(BH)	2012	USA	Power Seat Module	Actuation Test	
Genesis(BH)	2012	USA	Steering Column Module	Version Information	
Genesis(BH)	2012	USA	Steering Column Module	Read Fault Code	
Genesis(BH)	2012	USA	Steering Column Module	Clear Fault Memory	
Genesis(BH)	2012	USA	Steering Column Module	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2012	USA	Steering Column Module	Actuation Test	
Genesis(BH)	2012	USA	User Option	Read Data Stream	
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(BH)	2012	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Version Information	
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Actuation Test	
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2011	USA	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH)	2011	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2011	USA	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Genesis(BH)	2011	USA	Electronic Stability Control	Version Information	
Genesis(BH)	2011	USA	Electronic Stability Control	Read Fault Code	
Genesis(BH)	2011	USA	Electronic Stability Control	Clear Fault Memory	
Genesis(BH)	2011	USA	Electronic Stability Control	Read Data Stream	
Genesis(BH)	2011	USA	Electronic Stability Control	Actuation Test	
Genesis(BH)	2011	USA	Electronic Stability Control	Special Function	Steering Angle Learning
Genesis(BH)	2011	USA	Electronic Stability Control	Special Function	Long G Sensor Calibration(Only FDD)

model	year	area	system	function	subfunction
Genesis(BH)	2011	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2011	USA	Electronic Stability Control	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2011	USA	Electronic Stability Control	Special Function	Pressure Sensor Calibration
Genesis(BH)	2011	USA	Electronic Stability Control	Special Function	Valve Flushing
Genesis(BH)	2011	USA	Electronic Stability Control	Special Function	Valve Test
Genesis(BH)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(BH)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(BH)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis(BH)	2011	USA	AC(Air Conditioning)	Version Information	
Genesis(BH)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2011	USA	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2011	USA	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2011	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH)	2011	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH)	2011	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2011	USA	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH)	2011	USA	Electric Hydraulic Power Steering	Version Information	
Genesis(BH)	2011	USA	Electric Hydraulic Power Steering	Read Fault Code	
Genesis(BH)	2011	USA	Electric Hydraulic Power Steering	Clear Fault Memory	
Genesis(BH)	2011	USA	Electric Hydraulic Power Steering	Read Data Stream	
Genesis(BH)	2011	USA	Electric Hydraulic Power Steering	Actuation Test	
Genesis(BH)	2011	USA	Electric Hydraulic Power Steering	Special Function	EPS Type Recognition
Genesis(BH)	2011	USA	Head Lamp	Version Information	
Genesis(BH)	2011	USA	Head Lamp	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(BH)	2011	USA	Head Lamp	Clear Fault Memory	
Genesis(BH)	2011	USA	Head Lamp	Read Data Stream	
Genesis(BH)	2011	USA	Head Lamp	Actuation Test	
Genesis(BH)	2011	USA	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2011	USA	Head Lamp	Special Function	Calibration
Genesis(BH)	2011	USA	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2011	USA	Head Lamp	Special Function	Level Initialization
Genesis(BH)	2011	USA	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(BH)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2011	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Genesis(BH)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2011	USA	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2011	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2011	USA	Smart Key Code Saving	Read Data Stream	
Genesis(BH)	2011	USA	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH)	2011	USA	Transmitter Code Saving	Read Data Stream	
Genesis(BH)	2011	USA	Transmitter Code Saving	Special Function	Register Transmitter

model	year	area	system	function	subfunction
Genesis(BH)	2011	USA	CCS(Cruise Control System)	Version Information	
Genesis(BH)	2011	USA	CCS(Cruise Control System)	Read Fault Code	
Genesis(BH)	2011	USA	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH)	2011	USA	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH)	2011	USA	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH)	2011	USA	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Genesis(BH)	2011	USA	Assist Door Module	Version Information	
Genesis(BH)	2011	USA	Assist Door Module	Read Fault Code	
Genesis(BH)	2011	USA	Assist Door Module	Clear Fault Memory	
Genesis(BH)	2011	USA	Assist Door Module	Read Data Stream	
Genesis(BH)	2011	USA	Assist Door Module	Actuation Test	
Genesis(BH)	2011	USA	Cluster Module	Version Information	
Genesis(BH)	2011	USA	Cluster Module	Read Fault Code	
Genesis(BH)	2011	USA	Cluster Module	Clear Fault Memory	
Genesis(BH)	2011	USA	Cluster Module	Read Data Stream	
Genesis(BH)	2011	USA	Cluster Module	Actuation Test	
Genesis(BH)	2011	USA	Driver Door Module	Version Information	
Genesis(BH)	2011	USA	Driver Door Module	Read Fault Code	
Genesis(BH)	2011	USA	Driver Door Module	Clear Fault Memory	
Genesis(BH)	2011	USA	Driver Door Module	Read Data Stream	
Genesis(BH)	2011	USA	Driver Door Module	Actuation Test	
Genesis(BH)	2011	USA	Driver Information System	Version Information	
Genesis(BH)	2011	USA	Driver Information System	Read Fault Code	
Genesis(BH)	2011	USA	Driver Information System	Clear Fault Memory	
Genesis(BH)	2011	USA	Driver Information System	Read Data Stream	
Genesis(BH)	2011	USA	Driver Information System	Actuation Test	
Genesis(BH)	2011	USA	Driver Information System	Special Function	ECU Serial Number
Genesis(BH)	2011	USA	Driver Information System	Special Function	Get All S/W Version
Genesis(BH)	2011	USA	Driver Information System	Special Function	Update From CD

model	year	area	system	function	subfunction
Genesis(BH)	2011	USA	Driver Information System	Special Function	Ring Break
Genesis(BH)	2011	USA	Driver Information System	Special Function	DVD-Request when slot is Empty
Genesis(BH)	2011	USA	Driver Information System	Special Function	Variant Coding
Genesis(BH)	2011	USA	Driver Information System	Special Function	Wake Up Line
Genesis(BH)	2011	USA	Driver Information System	Special Function	Xdb Test
Genesis(BH)	2011	USA	Electric Control Wiper	Version Information	
Genesis(BH)	2011	USA	Electric Control Wiper	Read Fault Code	
Genesis(BH)	2011	USA	Electric Control Wiper	Clear Fault Memory	
Genesis(BH)	2011	USA	Electric Control Wiper	Read Data Stream	
Genesis(BH)	2011	USA	Front Area Module	Version Information	
Genesis(BH)	2011	USA	Front Area Module	Read Fault Code	
Genesis(BH)	2011	USA	Front Area Module	Clear Fault Memory	
Genesis(BH)	2011	USA	Front Area Module	Read Data Stream	
Genesis(BH)	2011	USA	Front Area Module	Actuation Test	
Genesis(BH)	2011	USA	Front Back Warning System	Version Information	
Genesis(BH)	2011	USA	Front Back Warning System	Read Fault Code	
Genesis(BH)	2011	USA	Front Back Warning System	Clear Fault Memory	
Genesis(BH)	2011	USA	Front Back Warning System	Read Data Stream	
Genesis(BH)	2011	USA	Inter Panel Module	Version Information	
Genesis(BH)	2011	USA	Inter Panel Module	Read Fault Code	
Genesis(BH)	2011	USA	Inter Panel Module	Clear Fault Memory	
Genesis(BH)	2011	USA	Inter Panel Module	Read Data Stream	
Genesis(BH)	2011	USA	Inter Panel Module	Actuation Test	
Genesis(BH)	2011	USA	Inter Panel Module	Special Function	Serial Communication Line Check
Genesis(BH)	2011	USA	Inter Panel Module	Special Function	Antenna Status Check
Genesis(BH)	2011	USA	Inter Panel Module	Special Function	ESCL Status Information
Genesis(BH)	2011	USA	Inter Panel Module	Special Function	FOB Key Status Information
Genesis(BH)	2011	USA	Inter Panel Module	Special Function	IPM Status Information
Genesis(BH)	2011	USA	Inter Panel Module	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Genesis(BH)	2011	USA	Inter Panel Module	Special Function	PDM Status Information
Genesis(BH)	2011	USA	Multi Function Switch	Version Information	
Genesis(BH)	2011	USA	Multi Function Switch	Read Fault Code	
Genesis(BH)	2011	USA	Multi Function Switch	Clear Fault Memory	
Genesis(BH)	2011	USA	Multi Function Switch	Read Data Stream	
Genesis(BH)	2011	USA	Power Distribution Module	Version Information	
Genesis(BH)	2011	USA	Power Distribution Module	Read Fault Code	
Genesis(BH)	2011	USA	Power Distribution Module	Clear Fault Memory	
Genesis(BH)	2011	USA	Power Distribution Module	Read Data Stream	
Genesis(BH)	2011	USA	Power Distribution Module	Actuation Test	
Genesis(BH)	2011	USA	Power Distribution Module	Special Function	Escr Open Status Information
Genesis(BH)	2011	USA	Power Seat Module	Version Information	
Genesis(BH)	2011	USA	Power Seat Module	Read Fault Code	
Genesis(BH)	2011	USA	Power Seat Module	Clear Fault Memory	
Genesis(BH)	2011	USA	Power Seat Module	Read Data Stream	
Genesis(BH)	2011	USA	Power Seat Module	Actuation Test	
Genesis(BH)	2011	USA	Steering Column Module	Version Information	
Genesis(BH)	2011	USA	Steering Column Module	Read Fault Code	
Genesis(BH)	2011	USA	Steering Column Module	Clear Fault Memory	
Genesis(BH)	2011	USA	Steering Column Module	Read Data Stream	
Genesis(BH)	2011	USA	Steering Column Module	Actuation Test	
Genesis(BH)	2011	USA	User Option	Read Data Stream	
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(BH)	2011	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Version Information	
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Actuation Test	
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2010	USA	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2010	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2010	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2010	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis(BH)	2010	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2010	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH)	2010	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2010	USA	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Genesis(BH)	2010	USA	Electronic Stability Control	Version Information	
Genesis(BH)	2010	USA	Electronic Stability Control	Read Fault Code	
Genesis(BH)	2010	USA	Electronic Stability Control	Clear Fault Memory	
Genesis(BH)	2010	USA	Electronic Stability Control	Read Data Stream	
Genesis(BH)	2010	USA	Electronic Stability Control	Actuation Test	
Genesis(BH)	2010	USA	Electronic Stability Control	Special Function	Steering Angle Learning
Genesis(BH)	2010	USA	Electronic Stability Control	Special Function	Long G Sensor Calibration(Only FR)
Genesis(BH)	2010	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2010	USA	Electronic Stability Control	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2010	USA	Electronic Stability Control	Special Function	Pressure Sensor Calibration
Genesis(BH)	2010	USA	Electronic Stability Control	Special Function	Valve Flushing
Genesis(BH)	2010	USA	Electronic Stability Control	Special Function	Valve Test
Genesis(BH)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(BH)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis(BH)	2010	USA	AC(Air Conditioning)	Version Information	
Genesis(BH)	2010	USA	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2010	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2010	USA	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2010	USA	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2010	USA	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2010	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(BH)	2010	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH)	2010	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2010	USA	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH)	2010	USA	Electric Hydraulic Power Steering	Version Information	
Genesis(BH)	2010	USA	Electric Hydraulic Power Steering	Read Fault Code	
Genesis(BH)	2010	USA	Electric Hydraulic Power Steering	Clear Fault Memory	
Genesis(BH)	2010	USA	Electric Hydraulic Power Steering	Read Data Stream	
Genesis(BH)	2010	USA	Electric Hydraulic Power Steering	Actuation Test	
Genesis(BH)	2010	USA	Electric Hydraulic Power Steering	Special Function	EPS Type Recognition
Genesis(BH)	2010	USA	Head Lamp	Version Information	
Genesis(BH)	2010	USA	Head Lamp	Read Fault Code	
Genesis(BH)	2010	USA	Head Lamp	Clear Fault Memory	
Genesis(BH)	2010	USA	Head Lamp	Read Data Stream	
Genesis(BH)	2010	USA	Head Lamp	Actuation Test	
Genesis(BH)	2010	USA	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2010	USA	Head Lamp	Special Function	Calibration
Genesis(BH)	2010	USA	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2010	USA	Head Lamp	Special Function	Level Initialization
Genesis(BH)	2010	USA	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH)	2010	USA	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Genesis(BH)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2010	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH)	2010	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(BH)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2010	USA	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2010	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis(BH)	2010	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2010	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2010	USA	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2010	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2010	USA	Smart Key Code Saving	Read Data Stream	
Genesis(BH)	2010	USA	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH)	2010	USA	Transmitter Code Saving	Read Data Stream	
Genesis(BH)	2010	USA	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH)	2010	USA	CCS(Cruise Control System)	Version Information	
Genesis(BH)	2010	USA	CCS(Cruise Control System)	Read Fault Code	
Genesis(BH)	2010	USA	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(BH)	2010	USA	CCS(Cruise Control System)	Read Data Stream	
Genesis(BH)	2010	USA	CCS(Cruise Control System)	Special Function	Alignment Driving Mode
Genesis(BH)	2010	USA	CCS(Cruise Control System)	Special Function	Alignment Parking Mode
Genesis(BH)	2010	USA	Assist Door Module	Version Information	
Genesis(BH)	2010	USA	Assist Door Module	Read Fault Code	
Genesis(BH)	2010	USA	Assist Door Module	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(BH)	2010	USA	Assist Door Module	Read Data Stream	
Genesis(BH)	2010	USA	Assist Door Module	Actuation Test	
Genesis(BH)	2010	USA	Cluster Module	Version Information	
Genesis(BH)	2010	USA	Cluster Module	Read Fault Code	
Genesis(BH)	2010	USA	Cluster Module	Clear Fault Memory	
Genesis(BH)	2010	USA	Cluster Module	Read Data Stream	
Genesis(BH)	2010	USA	Cluster Module	Actuation Test	
Genesis(BH)	2010	USA	Driver Door Module	Version Information	
Genesis(BH)	2010	USA	Driver Door Module	Read Fault Code	
Genesis(BH)	2010	USA	Driver Door Module	Clear Fault Memory	
Genesis(BH)	2010	USA	Driver Door Module	Read Data Stream	
Genesis(BH)	2010	USA	Driver Door Module	Actuation Test	
Genesis(BH)	2010	USA	Driver Information System	Version Information	
Genesis(BH)	2010	USA	Driver Information System	Read Fault Code	
Genesis(BH)	2010	USA	Driver Information System	Clear Fault Memory	
Genesis(BH)	2010	USA	Driver Information System	Read Data Stream	
Genesis(BH)	2010	USA	Driver Information System	Actuation Test	
Genesis(BH)	2010	USA	Driver Information System	Special Function	ECU Serial Number
Genesis(BH)	2010	USA	Driver Information System	Special Function	Get All S/W Version
Genesis(BH)	2010	USA	Driver Information System	Special Function	Update From CD
Genesis(BH)	2010	USA	Driver Information System	Special Function	Ring Break
Genesis(BH)	2010	USA	Driver Information System	Special Function	DVD-Request when slot is Empty
Genesis(BH)	2010	USA	Driver Information System	Special Function	Variant Coding
Genesis(BH)	2010	USA	Driver Information System	Special Function	Wake Up Line
Genesis(BH)	2010	USA	Driver Information System	Special Function	Xdb Test
Genesis(BH)	2010	USA	Electric Control Wiper	Version Information	
Genesis(BH)	2010	USA	Electric Control Wiper	Read Fault Code	
Genesis(BH)	2010	USA	Electric Control Wiper	Clear Fault Memory	
Genesis(BH)	2010	USA	Electric Control Wiper	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2010	USA	Front Area Module	Version Information	
Genesis(BH)	2010	USA	Front Area Module	Read Fault Code	
Genesis(BH)	2010	USA	Front Area Module	Clear Fault Memory	
Genesis(BH)	2010	USA	Front Area Module	Read Data Stream	
Genesis(BH)	2010	USA	Front Area Module	Actuation Test	
Genesis(BH)	2010	USA	Front Back Warning System	Version Information	
Genesis(BH)	2010	USA	Front Back Warning System	Read Fault Code	
Genesis(BH)	2010	USA	Front Back Warning System	Clear Fault Memory	
Genesis(BH)	2010	USA	Front Back Warning System	Read Data Stream	
Genesis(BH)	2010	USA	Inter Panel Module	Version Information	
Genesis(BH)	2010	USA	Inter Panel Module	Read Fault Code	
Genesis(BH)	2010	USA	Inter Panel Module	Clear Fault Memory	
Genesis(BH)	2010	USA	Inter Panel Module	Read Data Stream	
Genesis(BH)	2010	USA	Inter Panel Module	Actuation Test	
Genesis(BH)	2010	USA	Inter Panel Module	Special Function	Serial Communication Line Check
Genesis(BH)	2010	USA	Inter Panel Module	Special Function	Antenna Status Check
Genesis(BH)	2010	USA	Inter Panel Module	Special Function	ESCL Status Information
Genesis(BH)	2010	USA	Inter Panel Module	Special Function	FOB Key Status Information
Genesis(BH)	2010	USA	Inter Panel Module	Special Function	IPM Status Information
Genesis(BH)	2010	USA	Inter Panel Module	Special Function	Neutralization Mode
Genesis(BH)	2010	USA	Inter Panel Module	Special Function	PDM Status Information
Genesis(BH)	2010	USA	Multi Function Switch	Version Information	
Genesis(BH)	2010	USA	Multi Function Switch	Read Fault Code	
Genesis(BH)	2010	USA	Multi Function Switch	Clear Fault Memory	
Genesis(BH)	2010	USA	Multi Function Switch	Read Data Stream	
Genesis(BH)	2010	USA	Power Distribution Module	Version Information	
Genesis(BH)	2010	USA	Power Distribution Module	Read Fault Code	
Genesis(BH)	2010	USA	Power Distribution Module	Clear Fault Memory	
Genesis(BH)	2010	USA	Power Distribution Module	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2010	USA	Power Distribution Module	Actuation Test	
Genesis(BH)	2010	USA	Power Distribution Module	Special Function	ESCI Open Status Information
Genesis(BH)	2010	USA	Power Seat Module	Version Information	
Genesis(BH)	2010	USA	Power Seat Module	Read Fault Code	
Genesis(BH)	2010	USA	Power Seat Module	Clear Fault Memory	
Genesis(BH)	2010	USA	Power Seat Module	Read Data Stream	
Genesis(BH)	2010	USA	Power Seat Module	Actuation Test	
Genesis(BH)	2010	USA	Steering Column Module	Version Information	
Genesis(BH)	2010	USA	Steering Column Module	Read Fault Code	
Genesis(BH)	2010	USA	Steering Column Module	Clear Fault Memory	
Genesis(BH)	2010	USA	Steering Column Module	Read Data Stream	
Genesis(BH)	2010	USA	Steering Column Module	Actuation Test	
Genesis(BH)	2010	USA	User Option	Read Data Stream	
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(BH)	2010	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Version Information	
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Actuation Test	
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(BH)	2009	USA	TCM(Transmission Control Module)	Version Information	
Genesis(BH)	2009	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis(BH)	2009	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(BH)	2009	USA	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(BH)	2009	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis(BH)	2009	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis(BH)	2009	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(BH)	2009	USA	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Genesis(BH)	2009	USA	Electronic Stability Control	Version Information	
Genesis(BH)	2009	USA	Electronic Stability Control	Read Fault Code	
Genesis(BH)	2009	USA	Electronic Stability Control	Clear Fault Memory	
Genesis(BH)	2009	USA	Electronic Stability Control	Read Data Stream	
Genesis(BH)	2009	USA	Electronic Stability Control	Actuation Test	
Genesis(BH)	2009	USA	Electronic Stability Control	Special Function	Steering Angle Learning
Genesis(BH)	2009	USA	Electronic Stability Control	Special Function	Long G Sensor Calibration (Only EPB)
Genesis(BH)	2009	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis(BH)	2009	USA	Electronic Stability Control	Special Function	Lateral G Sensor Calibration
Genesis(BH)	2009	USA	Electronic Stability Control	Special Function	Pressure Sensor Calibration
Genesis(BH)	2009	USA	Electronic Stability Control	Special Function	Valve Flushing
Genesis(BH)	2009	USA	Electronic Stability Control	Special Function	Valve Test
Genesis(BH)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(BH)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(BH)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(BH)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(BH)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis(BH)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Genesis(BH)	2009	USA	AC(Air Conditioning)	Version Information	
Genesis(BH)	2009	USA	AC(Air Conditioning)	Read Fault Code	
Genesis(BH)	2009	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis(BH)	2009	USA	AC(Air Conditioning)	Read Data Stream	
Genesis(BH)	2009	USA	AC(Air Conditioning)	Actuation Test	
Genesis(BH)	2009	USA	EPB(Electrical Parking Brake)	Version Information	
Genesis(BH)	2009	USA	EPB(Electrical Parking Brake)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(BH)	2009	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(BH)	2009	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(BH)	2009	USA	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(BH)	2009	USA	Electric Hydraulic Power Steering	Version Information	
Genesis(BH)	2009	USA	Electric Hydraulic Power Steering	Read Fault Code	
Genesis(BH)	2009	USA	Electric Hydraulic Power Steering	Clear Fault Memory	
Genesis(BH)	2009	USA	Electric Hydraulic Power Steering	Read Data Stream	
Genesis(BH)	2009	USA	Electric Hydraulic Power Steering	Actuation Test	
Genesis(BH)	2009	USA	Electric Hydraulic Power Steering	Special Function	EPS Type Recognition
Genesis(BH)	2009	USA	Head Lamp	Version Information	
Genesis(BH)	2009	USA	Head Lamp	Read Fault Code	
Genesis(BH)	2009	USA	Head Lamp	Clear Fault Memory	
Genesis(BH)	2009	USA	Head Lamp	Read Data Stream	
Genesis(BH)	2009	USA	Head Lamp	Actuation Test	
Genesis(BH)	2009	USA	Head Lamp	Special Function	Parameter Download
Genesis(BH)	2009	USA	Head Lamp	Special Function	Calibration
Genesis(BH)	2009	USA	Head Lamp	Special Function	Sensor Initialization
Genesis(BH)	2009	USA	Head Lamp	Special Function	Level Initialization
Genesis(BH)	2009	USA	Head Lamp	Special Function	Headlamp Leveling
Genesis(BH)	2009	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(BH)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(BH)	2009	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(BH)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(BH)	2009	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(BH)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(BH)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(BH)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Genesis(BH)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(BH)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Genesis(BH)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(BH)	2009	USA	IMM(Immobilizer)	Read Data Stream	
Genesis(BH)	2009	USA	IMM(Immobilizer)	Special Function	Password
Genesis(BH)	2009	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Genesis(BH)	2009	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis(BH)	2009	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis(BH)	2009	USA	IMM(Immobilizer)	Special Function	Teaching
Genesis(BH)	2009	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis(BH)	2009	USA	Smart Key Code Saving	Read Data Stream	
Genesis(BH)	2009	USA	Smart Key Code Saving	Special Function	Smart Key Code Saving
Genesis(BH)	2009	USA	Transmitter Code Saving	Read Data Stream	
Genesis(BH)	2009	USA	Transmitter Code Saving	Special Function	Register Transmitter
Genesis(BH)	2009	USA	Assist Door Module	Version Information	
Genesis(BH)	2009	USA	Assist Door Module	Read Fault Code	
Genesis(BH)	2009	USA	Assist Door Module	Clear Fault Memory	
Genesis(BH)	2009	USA	Assist Door Module	Read Data Stream	
Genesis(BH)	2009	USA	Assist Door Module	Actuation Test	
Genesis(BH)	2009	USA	Cluster Module	Version Information	
Genesis(BH)	2009	USA	Cluster Module	Read Fault Code	
Genesis(BH)	2009	USA	Cluster Module	Clear Fault Memory	
Genesis(BH)	2009	USA	Cluster Module	Read Data Stream	
Genesis(BH)	2009	USA	Cluster Module	Actuation Test	
Genesis(BH)	2009	USA	Driver Door Module	Version Information	
Genesis(BH)	2009	USA	Driver Door Module	Read Fault Code	
Genesis(BH)	2009	USA	Driver Door Module	Clear Fault Memory	
Genesis(BH)	2009	USA	Driver Door Module	Read Data Stream	
Genesis(BH)	2009	USA	Driver Door Module	Actuation Test	
Genesis(BH)	2009	USA	Driver Information System	Version Information	
Genesis(BH)	2009	USA	Driver Information System	Read Fault Code	
Genesis(BH)	2009	USA	Driver Information System	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(BH)	2009	USA	Driver Information System	Read Data Stream	
Genesis(BH)	2009	USA	Driver Information System	Actuation Test	
Genesis(BH)	2009	USA	Driver Information System	Special Function	ECU Serial Number
Genesis(BH)	2009	USA	Driver Information System	Special Function	Get All S/W Version
Genesis(BH)	2009	USA	Driver Information System	Special Function	Update From CD
Genesis(BH)	2009	USA	Driver Information System	Special Function	Ring Break
Genesis(BH)	2009	USA	Driver Information System	Special Function	DVD-Request when Slot is Empty
Genesis(BH)	2009	USA	Driver Information System	Special Function	Variant Coding
Genesis(BH)	2009	USA	Driver Information System	Special Function	Wake Up Line
Genesis(BH)	2009	USA	Driver Information System	Special Function	Xdb Test
Genesis(BH)	2009	USA	Electric Control Wiper	Version Information	
Genesis(BH)	2009	USA	Electric Control Wiper	Read Fault Code	
Genesis(BH)	2009	USA	Electric Control Wiper	Clear Fault Memory	
Genesis(BH)	2009	USA	Electric Control Wiper	Read Data Stream	
Genesis(BH)	2009	USA	Front Area Module	Version Information	
Genesis(BH)	2009	USA	Front Area Module	Read Fault Code	
Genesis(BH)	2009	USA	Front Area Module	Clear Fault Memory	
Genesis(BH)	2009	USA	Front Area Module	Read Data Stream	
Genesis(BH)	2009	USA	Front Area Module	Actuation Test	
Genesis(BH)	2009	USA	Front Back Warning System	Version Information	
Genesis(BH)	2009	USA	Front Back Warning System	Read Fault Code	
Genesis(BH)	2009	USA	Front Back Warning System	Clear Fault Memory	
Genesis(BH)	2009	USA	Front Back Warning System	Read Data Stream	
Genesis(BH)	2009	USA	Inter Panel Module	Version Information	
Genesis(BH)	2009	USA	Inter Panel Module	Read Fault Code	
Genesis(BH)	2009	USA	Inter Panel Module	Clear Fault Memory	
Genesis(BH)	2009	USA	Inter Panel Module	Read Data Stream	
Genesis(BH)	2009	USA	Inter Panel Module	Actuation Test	
Genesis(BH)	2009	USA	Inter Panel Module	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Genesis(BH)	2009	USA	Inter Panel Module	Special Function	Antenna Status Check
Genesis(BH)	2009	USA	Inter Panel Module	Special Function	ESCL Status Information
Genesis(BH)	2009	USA	Inter Panel Module	Special Function	FOB Key Status Information
Genesis(BH)	2009	USA	Inter Panel Module	Special Function	IPM Status Information
Genesis(BH)	2009	USA	Inter Panel Module	Special Function	Neutralization Mode
Genesis(BH)	2009	USA	Inter Panel Module	Special Function	PDM Status Information
Genesis(BH)	2009	USA	Multi Function Switch	Version Information	
Genesis(BH)	2009	USA	Multi Function Switch	Read Fault Code	
Genesis(BH)	2009	USA	Multi Function Switch	Clear Fault Memory	
Genesis(BH)	2009	USA	Multi Function Switch	Read Data Stream	
Genesis(BH)	2009	USA	Power Distribution Module	Version Information	
Genesis(BH)	2009	USA	Power Distribution Module	Read Fault Code	
Genesis(BH)	2009	USA	Power Distribution Module	Clear Fault Memory	
Genesis(BH)	2009	USA	Power Distribution Module	Read Data Stream	
Genesis(BH)	2009	USA	Power Distribution Module	Actuation Test	
Genesis(BH)	2009	USA	Power Distribution Module	Special Function	ESCL Open Status Information
Genesis(BH)	2009	USA	Power Seat Module	Version Information	
Genesis(BH)	2009	USA	Power Seat Module	Read Fault Code	
Genesis(BH)	2009	USA	Power Seat Module	Clear Fault Memory	
Genesis(BH)	2009	USA	Power Seat Module	Read Data Stream	
Genesis(BH)	2009	USA	Power Seat Module	Actuation Test	
Genesis(BH)	2009	USA	Steering Column Module	Version Information	
Genesis(BH)	2009	USA	Steering Column Module	Read Fault Code	
Genesis(BH)	2009	USA	Steering Column Module	Clear Fault Memory	
Genesis(BH)	2009	USA	Steering Column Module	Read Data Stream	
Genesis(BH)	2009	USA	Steering Column Module	Actuation Test	
Genesis(BH)	2009	USA	User Option	Read Data Stream	
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting

model	year	area	system	function	subfunction
Genesis(BH)	2009	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Version Information	
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(DH)	2017	USA	TCM(Transmission Control Module)	Version Information	
Genesis(DH)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis(DH)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(DH)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis(DH)	2017	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis(DH)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis(DH)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(DH)	2017	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Genesis(DH)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Genesis(DH)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Genesis(DH)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Genesis(DH)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Genesis(DH)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
Genesis(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Genesis(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Genesis(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Genesis(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Genesis(DH)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Intelligent Driving Mode Integrated Control
Genesis(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(DH)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Genesis(DH)	2017	USA	AC(Air Conditioning)	Version Information	
Genesis(DH)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Genesis(DH)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis(DH)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Genesis(DH)	2017	USA	AC(Air Conditioning)	Actuation Test	
Genesis(DH)	2017	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis(DH)	2017	USA	BCM(Body Control Module)	Version Information	
Genesis(DH)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Genesis(DH)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Genesis(DH)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Genesis(DH)	2017	USA	BCM(Body Control Module)	Actuation Test	
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	HUD Calibration
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Genesis(DH)	2017	USA	BCM(Body Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	Read VIN
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	Write VIN
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	Auto Detected Configuration Reset
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	VCM Learning
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	Evap.Leakage Test
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	ETC Motor Cleaning
Genesis(DH)	2017	USA	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Genesis(DH)	2017	USA	Tire Pressure Monitoring	Version Information	
Genesis(DH)	2017	USA	Tire Pressure Monitoring	Read Fault Code	
Genesis(DH)	2017	USA	Tire Pressure Monitoring	Clear Fault Memory	
Genesis(DH)	2017	USA	Tire Pressure Monitoring	Read Data Stream	
Genesis(DH)	2017	USA	Tire Pressure Monitoring	Actuation Test	
Genesis(DH)	2017	USA	Tire Pressure Monitoring	Special Function	Write VIN
Genesis(DH)	2017	USA	Tire Pressure Monitoring	Special Function	Wheel Sensor ID Writing
Genesis(DH)	2017	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Reading
Genesis(DH)	2017	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Writing
Genesis(DH)	2017	USA	Tire Pressure Monitoring	Special Function	TPMS TEST
Genesis(DH)	2017	USA	Auto Headlamp Leveling System	Version Information	
Genesis(DH)	2017	USA	Auto Headlamp Leveling System	Read Fault Code	
Genesis(DH)	2017	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Genesis(DH)	2017	USA	Auto Headlamp Leveling System	Read Data Stream	
Genesis(DH)	2017	USA	Auto Headlamp Leveling System	Actuation Test	
Genesis(DH)	2017	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis(DH)	2017	USA	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Genesis(DH)	2017	USA	Motor Driven Power Steering	Version Information	
Genesis(DH)	2017	USA	Motor Driven Power Steering	Read Fault Code	
Genesis(DH)	2017	USA	Motor Driven Power Steering	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(DH)	2017	USA	Motor Driven Power Steering	Read Data Stream	
Genesis(DH)	2017	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
Genesis(DH)	2017	USA	Motor Driven Power Steering	Special Function	MDPS TEST(Motor Driven Power Steering)
Genesis(DH)	2017	USA	Electronic Control Suspension	Version Information	
Genesis(DH)	2017	USA	Electronic Control Suspension	Read Fault Code	
Genesis(DH)	2017	USA	Electronic Control Suspension	Clear Fault Memory	
Genesis(DH)	2017	USA	Electronic Control Suspension	Read Data Stream	
Genesis(DH)	2017	USA	Electronic Control Suspension	Actuation Test	
Genesis(DH)	2017	USA	4WD Control	Version Information	
Genesis(DH)	2017	USA	4WD Control	Read Fault Code	
Genesis(DH)	2017	USA	4WD Control	Clear Fault Memory	
Genesis(DH)	2017	USA	4WD Control	Read Data Stream	
Genesis(DH)	2017	USA	4WD Control	Special Function	ECU Data Back-up&Writing
Genesis(DH)	2017	USA	4WD Control	Special Function	4WD Lamp Actuation Test
Genesis(DH)	2017	USA	4WD Control	Special Function	Torque Coupling Actuation Test
Genesis(DH)	2017	USA	4WD Control	Special Function	Oil Data Initialization
Genesis(DH)	2017	USA	4WD Control	Special Function	Power Down Calibration
Genesis(DH)	2017	USA	4WD Control	Special Function	T\C Clutch Calibration
Genesis(DH)	2017	USA	4WD Control	Special Function	Clutch Learning Reset
Genesis(DH)	2017	USA	4WD Control	Special Function	HW Characteristics
Genesis(DH)	2017	USA	Smart Key Unit	Version Information	
Genesis(DH)	2017	USA	Smart Key Unit	Read Fault Code	
Genesis(DH)	2017	USA	Smart Key Unit	Clear Fault Memory	
Genesis(DH)	2017	USA	Smart Key Unit	Read Data Stream	
Genesis(DH)	2017	USA	Smart Key Unit	Actuation Test	
Genesis(DH)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Genesis(DH)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Genesis(DH)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
Genesis(DH)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
Genesis(DH)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Genesis(DH)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Genesis(DH)	2017	USA	Smart Cruise Control	Version Information	
Genesis(DH)	2017	USA	Smart Cruise Control	Read Fault Code	
Genesis(DH)	2017	USA	Smart Cruise Control	Clear Fault Memory	
Genesis(DH)	2017	USA	Smart Cruise Control	Read Data Stream	
Genesis(DH)	2017	USA	Smart Cruise Control	Special Function	SCC Variant Coding
Genesis(DH)	2017	USA	Smart Cruise Control	Special Function	SCC Alignment
Genesis(DH)	2017	USA	Blind Spot Detection	Version Information	
Genesis(DH)	2017	USA	Blind Spot Detection	Read Fault Code	
Genesis(DH)	2017	USA	Blind Spot Detection	Clear Fault Memory	
Genesis(DH)	2017	USA	Blind Spot Detection	Read Data Stream	
Genesis(DH)	2017	USA	Blind Spot Detection	Actuation Test	
Genesis(DH)	2017	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Genesis(DH)	2017	USA	Blind Spot Detection	Special Function	BSD Variant Coding
Genesis(DH)	2017	USA	Lane Keeping Assist System	Version Information	
Genesis(DH)	2017	USA	Lane Keeping Assist System	Read Fault Code	
Genesis(DH)	2017	USA	Lane Keeping Assist System	Clear Fault Memory	
Genesis(DH)	2017	USA	Lane Keeping Assist System	Read Data Stream	
Genesis(DH)	2017	USA	Lane Keeping Assist System	Special Function	SPC Calibration
Genesis(DH)	2017	USA	Lane Keeping Assist System	Special Function	SPTAC Calibration
Genesis(DH)	2017	USA	Lane Keeping Assist System	Special Function	LKAS/LDWS Variant Coding
Genesis(DH)	2017	USA	Parking Guide System	Version Information	
Genesis(DH)	2017	USA	Parking Guide System	Read Fault Code	
Genesis(DH)	2017	USA	Parking Guide System	Clear Fault Memory	
Genesis(DH)	2017	USA	Parking Guide System	Read Data Stream	
Genesis(DH)	2017	USA	Parking Guide System	Actuation Test	
Genesis(DH)	2017	USA	Pre-safe Seat Belt	Version Information	

model	year	area	system	function	subfunction
Genesis(DH)	2017	USA	Pre-safe Seat Belt	Read Fault Code	
Genesis(DH)	2017	USA	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(DH)	2017	USA	Pre-safe Seat Belt	Read Data Stream	
Genesis(DH)	2017	USA	Pre-safe Seat Belt	Actuation Test	
Genesis(DH)	2017	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(DH)	2017	USA	Active Air Flap	Version Information	
Genesis(DH)	2017	USA	Active Air Flap	Read Fault Code	
Genesis(DH)	2017	USA	Active Air Flap	Clear Fault Memory	
Genesis(DH)	2017	USA	Active Air Flap	Read Data Stream	
Genesis(DH)	2017	USA	Active Air Flap	Actuation Test	
Genesis(DH)	2017	USA	Amplifier	Version Information	
Genesis(DH)	2017	USA	Amplifier	Special Function	AMP Operation Test
Genesis(DH)	2017	USA	Audio Video Navigation	Version Information	
Genesis(DH)	2017	USA	Audio Video Navigation	Read Data Stream	
Genesis(DH)	2017	USA	Audio Video Navigation	Special Function	Ring Break
Genesis(DH)	2017	USA	Central Gateway	Version Information	
Genesis(DH)	2017	USA	Central Gateway	Read Fault Code	
Genesis(DH)	2017	USA	Central Gateway	Clear Fault Memory	
Genesis(DH)	2017	USA	Central Gateway	Special Function	Erase Network Configuration
Genesis(DH)	2017	USA	I-BOX	Version Information	
Genesis(DH)	2017	USA	I-BOX	Read Fault Code	
Genesis(DH)	2017	USA	I-BOX	Clear Fault Memory	
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(DH)	2017	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Version Information	
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(DH)	2016	USA	TCM(Transmission Control Module)	Version Information	
Genesis(DH)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis(DH)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(DH)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis(DH)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis(DH)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis(DH)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(DH)	2016	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics
Genesis(DH)	2016	USA	TCM(Transmission Control Module)	Special Function	Backup&Input(TCU Replacement)
Genesis(DH)	2016	USA	Electronic Stability Control	Version Information	
Genesis(DH)	2016	USA	Electronic Stability Control	Read Fault Code	
Genesis(DH)	2016	USA	Electronic Stability Control	Clear Fault Memory	
Genesis(DH)	2016	USA	Electronic Stability Control	Read Data Stream	
Genesis(DH)	2016	USA	Electronic Stability Control	Actuation Test	
Genesis(DH)	2016	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset
Genesis(DH)	2016	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis(DH)	2016	USA	Electronic Stability Control	Special Function	SAS Calibration(CAN-ESP Only)
Genesis(DH)	2016	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis(DH)	2016	USA	Electronic Stability Control	Special Function	Variant Coding
Genesis(DH)	2016	USA	Electronic Stability Control	Special Function	Intelligent Driving Mode Integrated Control

model	year	area	system	function	subfunction
Genesis(DH)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(DH)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(DH)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(DH)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(DH)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(DH)	2016	USA	AC(Air Conditioning)	Version Information	
Genesis(DH)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Genesis(DH)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis(DH)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Genesis(DH)	2016	USA	AC(Air Conditioning)	Actuation Test	
Genesis(DH)	2016	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis(DH)	2016	USA	BCM(Body Control Module)	Version Information	
Genesis(DH)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Genesis(DH)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Genesis(DH)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Genesis(DH)	2016	USA	BCM(Body Control Module)	Actuation Test	
Genesis(DH)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Genesis(DH)	2016	USA	EPB(Electrical Parking Brake)	Version Information	
Genesis(DH)	2016	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(DH)	2016	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(DH)	2016	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(DH)	2016	USA	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(DH)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Genesis(DH)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(DH)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Genesis(DH)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Genesis(DH)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(DH)	2016	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)

model	year	area	system	function	subfunction
Genesis(DH)	2016	USA	4WD Control	Version Information	
Genesis(DH)	2016	USA	4WD Control	Read Fault Code	
Genesis(DH)	2016	USA	4WD Control	Clear Fault Memory	
Genesis(DH)	2016	USA	4WD Control	Read Data Stream	
Genesis(DH)	2016	USA	4WD Control	Special Function	ECU Data Back-up&Writing
Genesis(DH)	2016	USA	4WD Control	Special Function	4WD Lamp Actuation Test
Genesis(DH)	2016	USA	4WD Control	Special Function	Torque Coupling Actuation Test
Genesis(DH)	2016	USA	4WD Control	Special Function	Oil Data Initialization
Genesis(DH)	2016	USA	4WD Control	Special Function	Power Down Calibration
Genesis(DH)	2016	USA	4WD Control	Special Function	T\C Clutch Calibration
Genesis(DH)	2016	USA	4WD Control	Special Function	Clutch Learning Reset
Genesis(DH)	2016	USA	4WD Control	Special Function	HW Characteristics
Genesis(DH)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(DH)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(DH)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(DH)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(DH)	2016	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(DH)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(DH)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(DH)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(DH)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(DH)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(DH)	2016	USA	Smart Key Unit	Version Information	
Genesis(DH)	2016	USA	Smart Key Unit	Read Fault Code	
Genesis(DH)	2016	USA	Smart Key Unit	Clear Fault Memory	
Genesis(DH)	2016	USA	Smart Key Unit	Read Data Stream	
Genesis(DH)	2016	USA	Smart Key Unit	Actuation Test	
Genesis(DH)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check
Genesis(DH)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Genesis(DH)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Genesis(DH)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Genesis(DH)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Genesis(DH)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Genesis(DH)	2016	USA	I-BOX	Version Information	
Genesis(DH)	2016	USA	I-BOX	Read Fault Code	
Genesis(DH)	2016	USA	I-BOX	Clear Fault Memory	
Genesis(DH)	2016	USA	CCS(Cruise Control System)	Version Information	
Genesis(DH)	2016	USA	CCS(Cruise Control System)	Read Fault Code	
Genesis(DH)	2016	USA	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(DH)	2016	USA	CCS(Cruise Control System)	Read Data Stream	
Genesis(DH)	2016	USA	CCS(Cruise Control System)	Special Function	SCC Variant Coding
Genesis(DH)	2016	USA	CCS(Cruise Control System)	Special Function	SCC Alignment
Genesis(DH)	2016	USA	Pre-safe Seat Belt	Version Information	
Genesis(DH)	2016	USA	Pre-safe Seat Belt	Read Fault Code	
Genesis(DH)	2016	USA	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(DH)	2016	USA	Pre-safe Seat Belt	Read Data Stream	
Genesis(DH)	2016	USA	Pre-safe Seat Belt	Actuation Test	
Genesis(DH)	2016	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(DH)	2016	USA	Electronic Control Suspension	Version Information	
Genesis(DH)	2016	USA	Electronic Control Suspension	Read Fault Code	
Genesis(DH)	2016	USA	Electronic Control Suspension	Clear Fault Memory	
Genesis(DH)	2016	USA	Electronic Control Suspension	Read Data Stream	
Genesis(DH)	2016	USA	Electronic Control Suspension	Actuation Test	
Genesis(DH)	2016	USA	Active Air Flap	Version Information	
Genesis(DH)	2016	USA	Active Air Flap	Read Fault Code	
Genesis(DH)	2016	USA	Active Air Flap	Clear Fault Memory	
Genesis(DH)	2016	USA	Active Air Flap	Read Data Stream	
Genesis(DH)	2016	USA	Active Air Flap	Actuation Test	

model	year	area	system	function	subfunction
Genesis(DH)	2016	USA	Assist Door Module	Version Information	
Genesis(DH)	2016	USA	Assist Door Module	Read Fault Code	
Genesis(DH)	2016	USA	Assist Door Module	Clear Fault Memory	
Genesis(DH)	2016	USA	Assist Door Module	Read Data Stream	
Genesis(DH)	2016	USA	Assist Door Module	Actuation Test	
Genesis(DH)	2016	USA	Audio Video Navigation	Version Information	
Genesis(DH)	2016	USA	Audio Video Navigation	Read Data Stream	
Genesis(DH)	2016	USA	Audio Video Navigation	Special Function	Ring Break
Genesis(DH)	2016	USA	AFS(Adaptive Front Lighting System)	Version Information	
Genesis(DH)	2016	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Genesis(DH)	2016	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Genesis(DH)	2016	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Genesis(DH)	2016	USA	AFS(Adaptive Front Lighting System)	Actuation Test	
Genesis(DH)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Genesis(DH)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Parameter Setting&Zero Position Initial
Genesis(DH)	2016	USA	Blind Spot Detection	Version Information	
Genesis(DH)	2016	USA	Blind Spot Detection	Read Fault Code	
Genesis(DH)	2016	USA	Blind Spot Detection	Clear Fault Memory	
Genesis(DH)	2016	USA	Blind Spot Detection	Read Data Stream	
Genesis(DH)	2016	USA	Blind Spot Detection	Actuation Test	
Genesis(DH)	2016	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Genesis(DH)	2016	USA	Blind Spot Detection	Special Function	BSD Variant Coding
Genesis(DH)	2016	USA	Central Gateway	Version Information	
Genesis(DH)	2016	USA	Central Gateway	Read Fault Code	
Genesis(DH)	2016	USA	Central Gateway	Clear Fault Memory	
Genesis(DH)	2016	USA	Central Gateway	Special Function	Erase Network Configuration
Genesis(DH)	2016	USA	Cluster Module	Version Information	
Genesis(DH)	2016	USA	Cluster Module	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(DH)	2016	USA	Cluster Module	Clear Fault Memory	
Genesis(DH)	2016	USA	Cluster Module	Read Data Stream	
Genesis(DH)	2016	USA	Cluster Module	Actuation Test	
Genesis(DH)	2016	USA	Cluster Module	Special Function	CLU Variant Coding
Genesis(DH)	2016	USA	Driver Door Module	Version Information	
Genesis(DH)	2016	USA	Driver Door Module	Read Fault Code	
Genesis(DH)	2016	USA	Driver Door Module	Clear Fault Memory	
Genesis(DH)	2016	USA	Driver Door Module	Read Data Stream	
Genesis(DH)	2016	USA	Driver Door Module	Actuation Test	
Genesis(DH)	2016	USA	Driver Door Module	Special Function	User Option
Genesis(DH)	2016	USA	Driver Seat Switch	Version Information	
Genesis(DH)	2016	USA	Driver Seat Switch	Read Fault Code	
Genesis(DH)	2016	USA	Driver Seat Switch	Clear Fault Memory	
Genesis(DH)	2016	USA	Driver Seat Switch	Read Data Stream	
Genesis(DH)	2016	USA	Haptic Steering Warning System	Version Information	
Genesis(DH)	2016	USA	Haptic Steering Warning System	Read Fault Code	
Genesis(DH)	2016	USA	Haptic Steering Warning System	Clear Fault Memory	
Genesis(DH)	2016	USA	Head Up Display	Version Information	
Genesis(DH)	2016	USA	Head Up Display	Read Fault Code	
Genesis(DH)	2016	USA	Head Up Display	Clear Fault Memory	
Genesis(DH)	2016	USA	Head Up Display	Read Data Stream	
Genesis(DH)	2016	USA	Head Up Display	Special Function	HUD Calibration
Genesis(DH)	2016	USA	Lane Keeping Assist System	Version Information	
Genesis(DH)	2016	USA	Lane Keeping Assist System	Read Fault Code	
Genesis(DH)	2016	USA	Lane Keeping Assist System	Clear Fault Memory	
Genesis(DH)	2016	USA	Lane Keeping Assist System	Read Data Stream	
Genesis(DH)	2016	USA	Lane Keeping Assist System	Special Function	SPC Calibration
Genesis(DH)	2016	USA	Lane Keeping Assist System	Special Function	SPTAC Calibration
Genesis(DH)	2016	USA	Lane Keeping Assist System	Special Function	LKAS/LDWS Variant Coding

model	year	area	system	function	subfunction
Genesis(DH)	2016	USA	Multi Function Switch	Version Information	
Genesis(DH)	2016	USA	Multi Function Switch	Read Fault Code	
Genesis(DH)	2016	USA	Multi Function Switch	Clear Fault Memory	
Genesis(DH)	2016	USA	Multi Function Switch	Read Data Stream	
Genesis(DH)	2016	USA	Occupant Classification Sensor	Version Information	
Genesis(DH)	2016	USA	Occupant Classification Sensor	Read Fault Code	
Genesis(DH)	2016	USA	Occupant Classification Sensor	Clear Fault Memory	
Genesis(DH)	2016	USA	Occupant Classification Sensor	Read Data Stream	
Genesis(DH)	2016	USA	Occupant Classification Sensor	Special Function	Body Sensor Reset
Genesis(DH)	2016	USA	Parking Guide System	Version Information	
Genesis(DH)	2016	USA	Parking Guide System	Read Fault Code	
Genesis(DH)	2016	USA	Parking Guide System	Clear Fault Memory	
Genesis(DH)	2016	USA	Parking Guide System	Read Data Stream	
Genesis(DH)	2016	USA	Parking Guide System	Actuation Test	
Genesis(DH)	2016	USA	Power Seat Module	Version Information	
Genesis(DH)	2016	USA	Power Seat Module	Read Fault Code	
Genesis(DH)	2016	USA	Power Seat Module	Clear Fault Memory	
Genesis(DH)	2016	USA	Power Seat Module	Read Data Stream	
Genesis(DH)	2016	USA	Power Seat Module	Actuation Test	
Genesis(DH)	2016	USA	Power Seat Module	Special Function	User Option
Genesis(DH)	2016	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Genesis(DH)	2016	USA	Power Trunk Module	Version Information	
Genesis(DH)	2016	USA	Power Trunk Module	Read Fault Code	
Genesis(DH)	2016	USA	Power Trunk Module	Clear Fault Memory	
Genesis(DH)	2016	USA	Power Trunk Module	Read Data Stream	
Genesis(DH)	2016	USA	Seat Lumbar Bolster	Version Information	
Genesis(DH)	2016	USA	Seat Lumbar Bolster	Read Fault Code	
Genesis(DH)	2016	USA	Seat Lumbar Bolster	Clear Fault Memory	
Genesis(DH)	2016	USA	Seat Lumbar Bolster	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(DH)	2016	USA	Seat Lumbar Bolster	Actuation Test	
Genesis(DH)	2016	USA	Smart Junction Block	Version Information	
Genesis(DH)	2016	USA	Smart Junction Block	Read Fault Code	
Genesis(DH)	2016	USA	Smart Junction Block	Clear Fault Memory	
Genesis(DH)	2016	USA	Smart Junction Block	Read Data Stream	
Genesis(DH)	2016	USA	Smart Junction Block	Actuation Test	
Genesis(DH)	2016	USA	Smart Junction Block	Special Function	User Option
Genesis(DH)	2016	USA	Steering Column Module	Version Information	
Genesis(DH)	2016	USA	Steering Column Module	Read Fault Code	
Genesis(DH)	2016	USA	Steering Column Module	Clear Fault Memory	
Genesis(DH)	2016	USA	Steering Column Module	Read Data Stream	
Genesis(DH)	2016	USA	Steering Column Module	Actuation Test	
Genesis(DH)	2016	USA	Steering Column Module	Special Function	User Option
Genesis(DH)	2016	USA	Steering Column Module	Special Function	Steering Limit Position Setting
Genesis(DH)	2016	USA	Steering Wheel Remote Control	Version Information	
Genesis(DH)	2016	USA	Steering Wheel Remote Control	Read Fault Code	
Genesis(DH)	2016	USA	Steering Wheel Remote Control	Clear Fault Memory	
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis(DH)	2016	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis(DH)	2016	USA	Smart Junction Block	Read FreezeData	
Genesis(DH)	2016	USA	Smart Junction Block	Special Function	Read VIN
Genesis(DH)	2016	USA	Smart Junction Block	Special Function	Write VIN
Genesis(DH)	2016	USA	Smart Junction Block	Special Function	PCM Lock(MEC)Setting
Genesis(DH)	2016	USA	Smart Junction Block	Special Function	Auto Detected Configuration Reset
Genesis(DH)	2016	USA	Smart Junction Block	Special Function	VCM Learning
Genesis(DH)	2016	USA	Smart Junction Block	Special Function	Evap.Leakage Test
Genesis(DH)	2016	USA	Smart Junction Block	Special Function	ETC Motor Cleaning
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis(DH)	2015	USA	TCM(Transmission Control Module)	Version Information	
Genesis(DH)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis(DH)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis(DH)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis(DH)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis(DH)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis(DH)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis(DH)	2015	USA	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Replacement)
Genesis(DH)	2015	USA	Electronic Stability Control	Version Information	
Genesis(DH)	2015	USA	Electronic Stability Control	Read Fault Code	
Genesis(DH)	2015	USA	Electronic Stability Control	Clear Fault Memory	
Genesis(DH)	2015	USA	Electronic Stability Control	Read Data Stream	
Genesis(DH)	2015	USA	Electronic Stability Control	Actuation Test	
Genesis(DH)	2015	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset
Genesis(DH)	2015	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis(DH)	2015	USA	Electronic Stability Control	Special Function	SAS Calibration(CAN-ESP Only)

model	year	area	system	function	subfunction
Genesis(DH)	2015	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis(DH)	2015	USA	Electronic Stability Control	Special Function	Variant Coding
Genesis(DH)	2015	USA	Electronic Stability Control	Special Function	Intelligent Driving Mode Integrated Control
Genesis(DH)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis(DH)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis(DH)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis(DH)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis(DH)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis(DH)	2015	USA	AC(Air Conditioning)	Version Information	
Genesis(DH)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Genesis(DH)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis(DH)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Genesis(DH)	2015	USA	AC(Air Conditioning)	Actuation Test	
Genesis(DH)	2015	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Genesis(DH)	2015	USA	BCM(Body Control Module)	Version Information	
Genesis(DH)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Genesis(DH)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Genesis(DH)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Genesis(DH)	2015	USA	BCM(Body Control Module)	Actuation Test	
Genesis(DH)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Genesis(DH)	2015	USA	EPB(Electrical Parking Brake)	Version Information	
Genesis(DH)	2015	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Genesis(DH)	2015	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Genesis(DH)	2015	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Genesis(DH)	2015	USA	EPB(Electrical Parking Brake)	Actuation Test	
Genesis(DH)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Genesis(DH)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Genesis(DH)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(DH)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Genesis(DH)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Genesis(DH)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Genesis(DH)	2015	USA	4WD Control	Version Information	
Genesis(DH)	2015	USA	4WD Control	Read Fault Code	
Genesis(DH)	2015	USA	4WD Control	Clear Fault Memory	
Genesis(DH)	2015	USA	4WD Control	Read Data Stream	
Genesis(DH)	2015	USA	4WD Control	Special Function	ECU Data Back-up&Writing
Genesis(DH)	2015	USA	4WD Control	Special Function	4WD Lamp Actuation Test
Genesis(DH)	2015	USA	4WD Control	Special Function	Torque Coupling Actuation Test
Genesis(DH)	2015	USA	4WD Control	Special Function	Oil Data Initialization
Genesis(DH)	2015	USA	4WD Control	Special Function	Power Down Calibration
Genesis(DH)	2015	USA	4WD Control	Special Function	T\C Clutch Calibration
Genesis(DH)	2015	USA	4WD Control	Special Function	Clutch Learning Reset
Genesis(DH)	2015	USA	4WD Control	Special Function	HW Characteristics
Genesis(DH)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis(DH)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis(DH)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis(DH)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis(DH)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis(DH)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis(DH)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis(DH)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis(DH)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis(DH)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis(DH)	2015	USA	Smart Key Unit	Version Information	
Genesis(DH)	2015	USA	Smart Key Unit	Read Fault Code	
Genesis(DH)	2015	USA	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(DH)	2015	USA	Smart Key Unit	Read Data Stream	
Genesis(DH)	2015	USA	Smart Key Unit	Actuation Test	
Genesis(DH)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check
Genesis(DH)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check
Genesis(DH)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information
Genesis(DH)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Genesis(DH)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Genesis(DH)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Genesis(DH)	2015	USA	I-BOX	Version Information	
Genesis(DH)	2015	USA	I-BOX	Read Fault Code	
Genesis(DH)	2015	USA	I-BOX	Clear Fault Memory	
Genesis(DH)	2015	USA	CCS(Cruise Control System)	Version Information	
Genesis(DH)	2015	USA	CCS(Cruise Control System)	Read Fault Code	
Genesis(DH)	2015	USA	CCS(Cruise Control System)	Clear Fault Memory	
Genesis(DH)	2015	USA	CCS(Cruise Control System)	Read Data Stream	
Genesis(DH)	2015	USA	CCS(Cruise Control System)	Special Function	SCC Variant Coding
Genesis(DH)	2015	USA	CCS(Cruise Control System)	Special Function	SCC Alignment
Genesis(DH)	2015	USA	Pre-safe Seat Belt	Version Information	
Genesis(DH)	2015	USA	Pre-safe Seat Belt	Read Fault Code	
Genesis(DH)	2015	USA	Pre-safe Seat Belt	Clear Fault Memory	
Genesis(DH)	2015	USA	Pre-safe Seat Belt	Read Data Stream	
Genesis(DH)	2015	USA	Pre-safe Seat Belt	Actuation Test	
Genesis(DH)	2015	USA	Pre-safe Seat Belt	Special Function	PSB Variant Coding
Genesis(DH)	2015	USA	Electronic Control Suspension	Version Information	
Genesis(DH)	2015	USA	Electronic Control Suspension	Read Fault Code	
Genesis(DH)	2015	USA	Electronic Control Suspension	Clear Fault Memory	
Genesis(DH)	2015	USA	Electronic Control Suspension	Read Data Stream	
Genesis(DH)	2015	USA	Electronic Control Suspension	Actuation Test	
Genesis(DH)	2015	USA	Active Air Flap	Version Information	

model	year	area	system	function	subfunction
Genesis(DH)	2015	USA	Active Air Flap	Read Fault Code	
Genesis(DH)	2015	USA	Active Air Flap	Clear Fault Memory	
Genesis(DH)	2015	USA	Active Air Flap	Read Data Stream	
Genesis(DH)	2015	USA	Active Air Flap	Actuation Test	
Genesis(DH)	2015	USA	Assist Door Module	Version Information	
Genesis(DH)	2015	USA	Assist Door Module	Read Fault Code	
Genesis(DH)	2015	USA	Assist Door Module	Clear Fault Memory	
Genesis(DH)	2015	USA	Assist Door Module	Read Data Stream	
Genesis(DH)	2015	USA	Assist Door Module	Actuation Test	
Genesis(DH)	2015	USA	Audio Video Navigation	Version Information	
Genesis(DH)	2015	USA	Audio Video Navigation	Read Data Stream	
Genesis(DH)	2015	USA	Audio Video Navigation	Special Function	Ring Break
Genesis(DH)	2015	USA	Auto Headlamp Leveling System	Version Information	
Genesis(DH)	2015	USA	Auto Headlamp Leveling System	Read Fault Code	
Genesis(DH)	2015	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Genesis(DH)	2015	USA	Auto Headlamp Leveling System	Read Data Stream	
Genesis(DH)	2015	USA	Auto Headlamp Leveling System	Actuation Test	
Genesis(DH)	2015	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis(DH)	2015	USA	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Genesis(DH)	2015	USA	Blind Spot Detection	Version Information	
Genesis(DH)	2015	USA	Blind Spot Detection	Read Fault Code	
Genesis(DH)	2015	USA	Blind Spot Detection	Clear Fault Memory	
Genesis(DH)	2015	USA	Blind Spot Detection	Read Data Stream	
Genesis(DH)	2015	USA	Blind Spot Detection	Actuation Test	
Genesis(DH)	2015	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Genesis(DH)	2015	USA	Blind Spot Detection	Special Function	BSD Variant Coding
Genesis(DH)	2015	USA	Central Gateway	Version Information	
Genesis(DH)	2015	USA	Central Gateway	Read Fault Code	

model	year	area	system	function	subfunction
Genesis(DH)	2015	USA	Central Gateway	Clear Fault Memory	
Genesis(DH)	2015	USA	Central Gateway	Special Function	Erase Network Configuration
Genesis(DH)	2015	USA	Cluster Module	Version Information	
Genesis(DH)	2015	USA	Cluster Module	Read Fault Code	
Genesis(DH)	2015	USA	Cluster Module	Clear Fault Memory	
Genesis(DH)	2015	USA	Cluster Module	Read Data Stream	
Genesis(DH)	2015	USA	Cluster Module	Actuation Test	
Genesis(DH)	2015	USA	Cluster Module	Special Function	CLU Variant Coding
Genesis(DH)	2015	USA	Driver Door Module	Version Information	
Genesis(DH)	2015	USA	Driver Door Module	Read Fault Code	
Genesis(DH)	2015	USA	Driver Door Module	Clear Fault Memory	
Genesis(DH)	2015	USA	Driver Door Module	Read Data Stream	
Genesis(DH)	2015	USA	Driver Door Module	Actuation Test	
Genesis(DH)	2015	USA	Driver Door Module	Special Function	User Option
Genesis(DH)	2015	USA	Driver Seat Switch	Version Information	
Genesis(DH)	2015	USA	Driver Seat Switch	Read Fault Code	
Genesis(DH)	2015	USA	Driver Seat Switch	Clear Fault Memory	
Genesis(DH)	2015	USA	Driver Seat Switch	Read Data Stream	
Genesis(DH)	2015	USA	Haptic Steering Warning System	Version Information	
Genesis(DH)	2015	USA	Haptic Steering Warning System	Read Fault Code	
Genesis(DH)	2015	USA	Haptic Steering Warning System	Clear Fault Memory	
Genesis(DH)	2015	USA	Head Up Display	Version Information	
Genesis(DH)	2015	USA	Head Up Display	Read Fault Code	
Genesis(DH)	2015	USA	Head Up Display	Clear Fault Memory	
Genesis(DH)	2015	USA	Head Up Display	Read Data Stream	
Genesis(DH)	2015	USA	Head Up Display	Special Function	HUD Calibration
Genesis(DH)	2015	USA	Lane Keeping Assist System	Version Information	
Genesis(DH)	2015	USA	Lane Keeping Assist System	Read Fault Code	
Genesis(DH)	2015	USA	Lane Keeping Assist System	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis(DH)	2015	USA	Lane Keeping Assist System	Read Data Stream	
Genesis(DH)	2015	USA	Lane Keeping Assist System	Special Function	SPC Calibration
Genesis(DH)	2015	USA	Lane Keeping Assist System	Special Function	SPTAC Calibration
Genesis(DH)	2015	USA	Lane Keeping Assist System	Special Function	LKAS/LDWS Variant Coding
Genesis(DH)	2015	USA	Multi Function Switch	Version Information	
Genesis(DH)	2015	USA	Multi Function Switch	Read Fault Code	
Genesis(DH)	2015	USA	Multi Function Switch	Clear Fault Memory	
Genesis(DH)	2015	USA	Multi Function Switch	Read Data Stream	
Genesis(DH)	2015	USA	Occupant Classification Sensor	Version Information	
Genesis(DH)	2015	USA	Occupant Classification Sensor	Read Fault Code	
Genesis(DH)	2015	USA	Occupant Classification Sensor	Clear Fault Memory	
Genesis(DH)	2015	USA	Occupant Classification Sensor	Read Data Stream	
Genesis(DH)	2015	USA	Occupant Classification Sensor	Special Function	Body Sensor Reset
Genesis(DH)	2015	USA	Parking Guide System	Version Information	
Genesis(DH)	2015	USA	Parking Guide System	Read Fault Code	
Genesis(DH)	2015	USA	Parking Guide System	Clear Fault Memory	
Genesis(DH)	2015	USA	Parking Guide System	Read Data Stream	
Genesis(DH)	2015	USA	Parking Guide System	Actuation Test	
Genesis(DH)	2015	USA	Power Seat Module	Version Information	
Genesis(DH)	2015	USA	Power Seat Module	Read Fault Code	
Genesis(DH)	2015	USA	Power Seat Module	Clear Fault Memory	
Genesis(DH)	2015	USA	Power Seat Module	Read Data Stream	
Genesis(DH)	2015	USA	Power Seat Module	Actuation Test	
Genesis(DH)	2015	USA	Power Seat Module	Special Function	User Option
Genesis(DH)	2015	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Genesis(DH)	2015	USA	Power Trunk Module	Version Information	
Genesis(DH)	2015	USA	Power Trunk Module	Read Fault Code	
Genesis(DH)	2015	USA	Power Trunk Module	Clear Fault Memory	
Genesis(DH)	2015	USA	Power Trunk Module	Read Data Stream	

model	year	area	system	function	subfunction
Genesis(DH)	2015	USA	Seat Lumbar Bolster	Version Information	
Genesis(DH)	2015	USA	Seat Lumbar Bolster	Read Fault Code	
Genesis(DH)	2015	USA	Seat Lumbar Bolster	Clear Fault Memory	
Genesis(DH)	2015	USA	Seat Lumbar Bolster	Read Data Stream	
Genesis(DH)	2015	USA	Seat Lumbar Bolster	Actuation Test	
Genesis(DH)	2015	USA	Smart Junction Block	Version Information	
Genesis(DH)	2015	USA	Smart Junction Block	Read Fault Code	
Genesis(DH)	2015	USA	Smart Junction Block	Clear Fault Memory	
Genesis(DH)	2015	USA	Smart Junction Block	Read Data Stream	
Genesis(DH)	2015	USA	Smart Junction Block	Actuation Test	
Genesis(DH)	2015	USA	Smart Junction Block	Special Function	User Option
Genesis(DH)	2015	USA	Steering Column Module	Version Information	
Genesis(DH)	2015	USA	Steering Column Module	Read Fault Code	
Genesis(DH)	2015	USA	Steering Column Module	Clear Fault Memory	
Genesis(DH)	2015	USA	Steering Column Module	Read Data Stream	
Genesis(DH)	2015	USA	Steering Column Module	Actuation Test	
Genesis(DH)	2015	USA	Steering Column Module	Special Function	User Option
Genesis(DH)	2015	USA	Steering Column Module	Special Function	Steering Limit Position Setting
Genesis(DH)	2015	USA	Steering Wheel Remote Control	Version Information	
Genesis(DH)	2015	USA	Steering Wheel Remote Control	Read Fault Code	
Genesis(DH)	2015	USA	Steering Wheel Remote Control	Clear Fault Memory	
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis(DH)	2015	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Option)
Genesis Coupe(BK)	2016	USA	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values Oil-pressure Characteristics
Genesis Coupe(BK)	2016	USA	TCM(Transmission Control Module)	Special Function	Backup&Input(TCU Replacement)
Genesis Coupe(BK)	2016	USA	Electronic Stability Control	Version Information	
Genesis Coupe(BK)	2016	USA	Electronic Stability Control	Read Fault Code	
Genesis Coupe(BK)	2016	USA	Electronic Stability Control	Clear Fault Memory	
Genesis Coupe(BK)	2016	USA	Electronic Stability Control	Read Data Stream	
Genesis Coupe(BK)	2016	USA	Electronic Stability Control	Actuation Test	
Genesis Coupe(BK)	2016	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis Coupe(BK)	2016	USA	Electronic Stability Control	Special Function	SAS Calibration(CAN-ESP Only)
Genesis Coupe(BK)	2016	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis Coupe(BK)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis Coupe(BK)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Genesis Coupe(BK)	2016	USA	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2016	USA	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2016	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis Coupe(BK)	2016	USA	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Genesis Coupe(BK)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2016	USA	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2016	USA	AFS(Adaptive Front Lighting System)	Version Information	
Genesis Coupe(BK)	2016	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Genesis Coupe(BK)	2016	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Genesis Coupe(BK)	2016	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Genesis Coupe(BK)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Level Initialization
Genesis Coupe(BK)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Sensor Initialization
Genesis Coupe(BK)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis Coupe(BK)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis Coupe(BK)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis Coupe(BK)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis Coupe(BK)	2016	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis Coupe(BK)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis Coupe(BK)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis Coupe(BK)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis Coupe(BK)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis Coupe(BK)	2016	USA	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2016	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis Coupe(BK)	2016	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2016	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2016	USA	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2016	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2016	USA	Smart Key	Version Information	
Genesis Coupe(BK)	2016	USA	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2016	USA	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2016	USA	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2016	USA	Smart Key	Actuation Test	
Genesis Coupe(BK)	2016	USA	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2016	USA	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2016	USA	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2016	USA	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2016	USA	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2016	USA	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2016	USA	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2016	USA	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2016	USA	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2016	USA	Cluster Module	Version Information	
Genesis Coupe(BK)	2016	USA	Cluster Module	Read Data Stream	
Genesis Coupe(BK)	2016	USA	Cluster Module	Actuation Test	
Genesis Coupe(BK)	2016	USA	Power Distribution Module	Version Information	
Genesis Coupe(BK)	2016	USA	Power Distribution Module	Read Fault Code	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2016	USA	Power Distribution Module	Clear Fault Memory	
Genesis Coupe(BK)	2016	USA	Power Distribution Module	Read Data Stream	
Genesis Coupe(BK)	2016	USA	Power Distribution Module	Actuation Test	
Genesis Coupe(BK)	2016	USA	Smart Junction Block	Version Information	
Genesis Coupe(BK)	2016	USA	Smart Junction Block	Read Fault Code	
Genesis Coupe(BK)	2016	USA	Smart Junction Block	Clear Fault Memory	
Genesis Coupe(BK)	2016	USA	Smart Junction Block	Read Data Stream	
Genesis Coupe(BK)	2016	USA	Smart Junction Block	Actuation Test	
Genesis Coupe(BK)	2016	USA	Telematics Unit	Version Information	
Genesis Coupe(BK)	2016	USA	Telematics Unit	Read Fault Code	
Genesis Coupe(BK)	2016	USA	Telematics Unit	Clear Fault Memory	
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK)	2016	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis Coupe(BK)	2015	USA	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2015	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Genesis Coupe(BK)	2015	USA	Electronic Stability Control	Version Information	
Genesis Coupe(BK)	2015	USA	Electronic Stability Control	Read Fault Code	
Genesis Coupe(BK)	2015	USA	Electronic Stability Control	Clear Fault Memory	
Genesis Coupe(BK)	2015	USA	Electronic Stability Control	Read Data Stream	
Genesis Coupe(BK)	2015	USA	Electronic Stability Control	Actuation Test	
Genesis Coupe(BK)	2015	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis Coupe(BK)	2015	USA	Electronic Stability Control	Special Function	SAS Calibration(CAN-ESP Only)
Genesis Coupe(BK)	2015	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis Coupe(BK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis Coupe(BK)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Genesis Coupe(BK)	2015	USA	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2015	USA	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2015	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis Coupe(BK)	2015	USA	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Genesis Coupe(BK)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2015	USA	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2015	USA	Automatic Headlamp Leveling System	Version Information	
Genesis Coupe(BK)	2015	USA	Automatic Headlamp Leveling System	Read Fault Code	
Genesis Coupe(BK)	2015	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK)	2015	USA	Automatic Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK)	2015	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK)	2015	USA	Automatic Headlamp Leveling System	Special Function	Sensor Initialization
Genesis Coupe(BK)	2015	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis Coupe(BK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis Coupe(BK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis Coupe(BK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis Coupe(BK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis Coupe(BK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis Coupe(BK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis Coupe(BK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis Coupe(BK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis Coupe(BK)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis Coupe(BK)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2015	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis Coupe(BK)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2015	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2015	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2015	USA	Smart Key	Version Information	
Genesis Coupe(BK)	2015	USA	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2015	USA	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2015	USA	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2015	USA	Smart Key	Actuation Test	
Genesis Coupe(BK)	2015	USA	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2015	USA	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2015	USA	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2015	USA	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2015	USA	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2015	USA	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2015	USA	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2015	USA	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2015	USA	Cluster Module	Version Information	
Genesis Coupe(BK)	2015	USA	Cluster Module	Read Data Stream	
Genesis Coupe(BK)	2015	USA	Cluster Module	Actuation Test	
Genesis Coupe(BK)	2015	USA	Smart Junction Block	Version Information	
Genesis Coupe(BK)	2015	USA	Smart Junction Block	Read Fault Code	
Genesis Coupe(BK)	2015	USA	Smart Junction Block	Clear Fault Memory	
Genesis Coupe(BK)	2015	USA	Smart Junction Block	Read Data Stream	
Genesis Coupe(BK)	2015	USA	Smart Junction Block	Actuation Test	
Genesis Coupe(BK)	2015	USA	Telematics Unit	Version Information	
Genesis Coupe(BK)	2015	USA	Telematics Unit	Read Fault Code	
Genesis Coupe(BK)	2015	USA	Telematics Unit	Clear Fault Memory	
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Special Function	CVVT Test

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2015	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis Coupe(BK)	2014	USA	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2014	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Genesis Coupe(BK)	2014	USA	Electronic Stability Control	Version Information	
Genesis Coupe(BK)	2014	USA	Electronic Stability Control	Read Fault Code	
Genesis Coupe(BK)	2014	USA	Electronic Stability Control	Clear Fault Memory	
Genesis Coupe(BK)	2014	USA	Electronic Stability Control	Read Data Stream	
Genesis Coupe(BK)	2014	USA	Electronic Stability Control	Actuation Test	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2014	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Genesis Coupe(BK)	2014	USA	Electronic Stability Control	Special Function	SAS Calibration(CAN-ESP Only)
Genesis Coupe(BK)	2014	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis Coupe(BK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis Coupe(BK)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Genesis Coupe(BK)	2014	USA	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2014	USA	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2014	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis Coupe(BK)	2014	USA	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Genesis Coupe(BK)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2014	USA	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2014	USA	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2014	USA	Automatic Headlamp Leveling System	Version Information	
Genesis Coupe(BK)	2014	USA	Automatic Headlamp Leveling System	Read Fault Code	
Genesis Coupe(BK)	2014	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK)	2014	USA	Automatic Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK)	2014	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK)	2014	USA	Automatic Headlamp Leveling System	Special Function	Sensor Initialization

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2014	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis Coupe(BK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis Coupe(BK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis Coupe(BK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis Coupe(BK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis Coupe(BK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis Coupe(BK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis Coupe(BK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis Coupe(BK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis Coupe(BK)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis Coupe(BK)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2014	USA	IMM(Immobilizer)	Special Function	Password
Genesis Coupe(BK)	2014	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Genesis Coupe(BK)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2014	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2014	USA	Smart Key	Version Information	
Genesis Coupe(BK)	2014	USA	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2014	USA	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2014	USA	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2014	USA	Smart Key	Actuation Test	
Genesis Coupe(BK)	2014	USA	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2014	USA	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2014	USA	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2014	USA	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2014	USA	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2014	USA	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2014	USA	Smart Key	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2014	USA	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2014	USA	Cluster Module	Version Information	
Genesis Coupe(BK)	2014	USA	Cluster Module	Read Data Stream	
Genesis Coupe(BK)	2014	USA	Cluster Module	Actuation Test	
Genesis Coupe(BK)	2014	USA	Smart Junction Block	Version Information	
Genesis Coupe(BK)	2014	USA	Smart Junction Block	Read Fault Code	
Genesis Coupe(BK)	2014	USA	Smart Junction Block	Clear Fault Memory	
Genesis Coupe(BK)	2014	USA	Smart Junction Block	Read Data Stream	
Genesis Coupe(BK)	2014	USA	Smart Junction Block	Actuation Test	
Genesis Coupe(BK)	2014	USA	Telematics Unit	Version Information	
Genesis Coupe(BK)	2014	USA	Telematics Unit	Read Fault Code	
Genesis Coupe(BK)	2014	USA	Telematics Unit	Clear Fault Memory	
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Genesis Coupe(BK)	2014	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Genesis Coupe(BK)	2013	USA	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2013	USA	TCM(Transmission Control Module)	Special Function	On-pressure Characteristics Backup&Input(TCU Replacement)
Genesis Coupe(BK)	2013	USA	Electronic Stability Control	Version Information	
Genesis Coupe(BK)	2013	USA	Electronic Stability Control	Read Fault Code	
Genesis Coupe(BK)	2013	USA	Electronic Stability Control	Clear Fault Memory	
Genesis Coupe(BK)	2013	USA	Electronic Stability Control	Read Data Stream	
Genesis Coupe(BK)	2013	USA	Electronic Stability Control	Actuation Test	
Genesis Coupe(BK)	2013	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2013	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration
Genesis Coupe(BK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis Coupe(BK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis Coupe(BK)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Genesis Coupe(BK)	2013	USA	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2013	USA	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2013	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Genesis Coupe(BK)	2013	USA	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Genesis Coupe(BK)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2013	USA	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2013	USA	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2013	USA	Automatic Headlamp Leveling System	Version Information	
Genesis Coupe(BK)	2013	USA	Automatic Headlamp Leveling System	Read Fault Code	
Genesis Coupe(BK)	2013	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK)	2013	USA	Automatic Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK)	2013	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK)	2013	USA	Automatic Headlamp Leveling System	Special Function	Sensor Initialization
Genesis Coupe(BK)	2013	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis Coupe(BK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis Coupe(BK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis Coupe(BK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis Coupe(BK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis Coupe(BK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis Coupe(BK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis Coupe(BK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis Coupe(BK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis Coupe(BK)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis Coupe(BK)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2013	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis Coupe(BK)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2013	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2013	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2013	USA	Smart Key	Version Information	
Genesis Coupe(BK)	2013	USA	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2013	USA	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2013	USA	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2013	USA	Smart Key	Actuation Test	
Genesis Coupe(BK)	2013	USA	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2013	USA	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2013	USA	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2013	USA	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2013	USA	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2013	USA	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2013	USA	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2013	USA	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2013	USA	Cluster Module	Version Information	
Genesis Coupe(BK)	2013	USA	Cluster Module	Read Data Stream	
Genesis Coupe(BK)	2013	USA	Cluster Module	Actuation Test	
Genesis Coupe(BK)	2013	USA	Smart Junction Block	Version Information	
Genesis Coupe(BK)	2013	USA	Smart Junction Block	Read Fault Code	
Genesis Coupe(BK)	2013	USA	Smart Junction Block	Clear Fault Memory	
Genesis Coupe(BK)	2013	USA	Smart Junction Block	Read Data Stream	
Genesis Coupe(BK)	2013	USA	Smart Junction Block	Actuation Test	
Genesis Coupe(BK)	2013	USA	Telematics Unit	Version Information	
Genesis Coupe(BK)	2013	USA	Telematics Unit	Read Fault Code	
Genesis Coupe(BK)	2013	USA	Telematics Unit	Clear Fault Memory	
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Special Function	CVVT Test

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2013	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Genesis Coupe(BK)	2012	USA	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2012	USA	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Genesis Coupe(BK)	2012	USA	Electronic Stability Control	Version Information	
Genesis Coupe(BK)	2012	USA	Electronic Stability Control	Read Fault Code	
Genesis Coupe(BK)	2012	USA	Electronic Stability Control	Clear Fault Memory	
Genesis Coupe(BK)	2012	USA	Electronic Stability Control	Read Data Stream	
Genesis Coupe(BK)	2012	USA	Electronic Stability Control	Actuation Test	
Genesis Coupe(BK)	2012	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis Coupe(BK)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis Coupe(BK)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Genesis Coupe(BK)	2012	USA	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2012	USA	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2012	USA	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2012	USA	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2012	USA	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2012	USA	Automatic Headlamp Leveling System	Version Information	
Genesis Coupe(BK)	2012	USA	Automatic Headlamp Leveling System	Read Fault Code	
Genesis Coupe(BK)	2012	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK)	2012	USA	Automatic Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK)	2012	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK)	2012	USA	Automatic Headlamp Leveling System	Special Function	Sensor Initialization
Genesis Coupe(BK)	2012	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis Coupe(BK)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis Coupe(BK)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis Coupe(BK)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis Coupe(BK)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis Coupe(BK)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis Coupe(BK)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis Coupe(BK)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis Coupe(BK)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis Coupe(BK)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2012	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis Coupe(BK)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2012	USA	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2012	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2012	USA	Smart Key	Version Information	
Genesis Coupe(BK)	2012	USA	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2012	USA	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2012	USA	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2012	USA	Smart Key	Actuation Test	
Genesis Coupe(BK)	2012	USA	Smart Key	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2012	USA	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2012	USA	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2012	USA	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2012	USA	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2012	USA	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2012	USA	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2012	USA	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2012	USA	Smart Key	Special Function	ESCL Status Information
Genesis Coupe(BK)	2012	USA	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2012	USA	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2012	USA	ECM(Engine Control Module)	Special Function	PCSV Test(Optional)
Genesis Coupe(BK)	2012	USA	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Version Information	
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Genesis Coupe(BK)	2011	USA	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2011	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2011	USA	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Genesis Coupe(BK)	2011	USA	Electronic Stability Control	Version Information	
Genesis Coupe(BK)	2011	USA	Electronic Stability Control	Read Fault Code	
Genesis Coupe(BK)	2011	USA	Electronic Stability Control	Clear Fault Memory	
Genesis Coupe(BK)	2011	USA	Electronic Stability Control	Read Data Stream	
Genesis Coupe(BK)	2011	USA	Electronic Stability Control	Actuation Test	
Genesis Coupe(BK)	2011	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Genesis Coupe(BK)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis Coupe(BK)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis Coupe(BK)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Genesis Coupe(BK)	2011	USA	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2011	USA	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2011	USA	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2011	USA	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2011	USA	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2011	USA	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2011	USA	Automatic Headlamp Leveling System	Version Information	
Genesis Coupe(BK)	2011	USA	Automatic Headlamp Leveling System	Read Fault Code	
Genesis Coupe(BK)	2011	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK)	2011	USA	Automatic Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK)	2011	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK)	2011	USA	Automatic Headlamp Leveling System	Special Function	Sensor Initialization
Genesis Coupe(BK)	2011	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis Coupe(BK)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis Coupe(BK)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis Coupe(BK)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis Coupe(BK)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis Coupe(BK)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis Coupe(BK)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis Coupe(BK)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis Coupe(BK)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Genesis Coupe(BK)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2011	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Genesis Coupe(BK)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2011	USA	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2011	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2011	USA	Smart Key	Version Information	
Genesis Coupe(BK)	2011	USA	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2011	USA	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2011	USA	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2011	USA	Smart Key	Actuation Test	
Genesis Coupe(BK)	2011	USA	Smart Key	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2011	USA	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2011	USA	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2011	USA	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2011	USA	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2011	USA	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2011	USA	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2011	USA	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2011	USA	Smart Key	Special Function	ESCL Status Information
Genesis Coupe(BK)	2011	USA	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2011	USA	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2011	USA	ECM(Engine Control Module)	Special Function	PCSV Test(Optional)
Genesis Coupe(BK)	2011	USA	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Read Fault Code	
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Read Data Stream	
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Read FreezeData	
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Actuation Test	
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Special Function	Read VIN
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Special Function	Write VIN
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Genesis Coupe(BK)	2010	USA	TCM(Transmission Control Module)	Version Information	
Genesis Coupe(BK)	2010	USA	TCM(Transmission Control Module)	Read Fault Code	
Genesis Coupe(BK)	2010	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Genesis Coupe(BK)	2010	USA	TCM(Transmission Control Module)	Read Data Stream	
Genesis Coupe(BK)	2010	USA	TCM(Transmission Control Module)	Read FreezeData	
Genesis Coupe(BK)	2010	USA	TCM(Transmission Control Module)	Actuation Test	
Genesis Coupe(BK)	2010	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Genesis Coupe(BK)	2010	USA	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable
Genesis Coupe(BK)	2010	USA	Electronic Stability Control	Version Information	Status
Genesis Coupe(BK)	2010	USA	Electronic Stability Control	Read Fault Code	
Genesis Coupe(BK)	2010	USA	Electronic Stability Control	Clear Fault Memory	
Genesis Coupe(BK)	2010	USA	Electronic Stability Control	Read Data Stream	
Genesis Coupe(BK)	2010	USA	Electronic Stability Control	Actuation Test	
Genesis Coupe(BK)	2010	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Genesis Coupe(BK)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Genesis Coupe(BK)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Genesis Coupe(BK)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Genesis Coupe(BK)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Genesis Coupe(BK)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Genesis Coupe(BK)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Genesis Coupe(BK)	2010	USA	AC(Air Conditioning)	Version Information	
Genesis Coupe(BK)	2010	USA	AC(Air Conditioning)	Read Fault Code	
Genesis Coupe(BK)	2010	USA	AC(Air Conditioning)	Clear Fault Memory	
Genesis Coupe(BK)	2010	USA	AC(Air Conditioning)	Read Data Stream	
Genesis Coupe(BK)	2010	USA	AC(Air Conditioning)	Actuation Test	
Genesis Coupe(BK)	2010	USA	BCM(Body Control Module)	Version Information	
Genesis Coupe(BK)	2010	USA	BCM(Body Control Module)	Read Data Stream	
Genesis Coupe(BK)	2010	USA	BCM(Body Control Module)	Actuation Test	
Genesis Coupe(BK)	2010	USA	BCM(Body Control Module)	Special Function	User Option
Genesis Coupe(BK)	2010	USA	Automatic Headlamp Leveling System	Version Information	
Genesis Coupe(BK)	2010	USA	Automatic Headlamp Leveling System	Read Fault Code	
Genesis Coupe(BK)	2010	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Genesis Coupe(BK)	2010	USA	Automatic Headlamp Leveling System	Read Data Stream	
Genesis Coupe(BK)	2010	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Genesis Coupe(BK)	2010	USA	Automatic Headlamp Leveling System	Special Function	Sensor Initialization
Genesis Coupe(BK)	2010	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Genesis Coupe(BK)	2010	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Genesis Coupe(BK)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Genesis Coupe(BK)	2010	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Genesis Coupe(BK)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Genesis Coupe(BK)	2010	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Genesis Coupe(BK)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Genesis Coupe(BK)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Genesis Coupe(BK)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Genesis Coupe(BK)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Genesis Coupe(BK)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST

model	year	area	system	function	subfunction
Genesis Coupe(BK)	2010	USA	IMM(Immobilizer)	Read Data Stream	
Genesis Coupe(BK)	2010	USA	IMM(Immobilizer)	Special Function	Password
Genesis Coupe(BK)	2010	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Genesis Coupe(BK)	2010	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Genesis Coupe(BK)	2010	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Genesis Coupe(BK)	2010	USA	IMM(Immobilizer)	Special Function	Teaching
Genesis Coupe(BK)	2010	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Genesis Coupe(BK)	2010	USA	Smart Key	Version Information	
Genesis Coupe(BK)	2010	USA	Smart Key	Read Fault Code	
Genesis Coupe(BK)	2010	USA	Smart Key	Clear Fault Memory	
Genesis Coupe(BK)	2010	USA	Smart Key	Read Data Stream	
Genesis Coupe(BK)	2010	USA	Smart Key	Actuation Test	
Genesis Coupe(BK)	2010	USA	Smart Key	Special Function	ESCL Open Status Check
Genesis Coupe(BK)	2010	USA	Smart Key	Special Function	Smart Key Code Saving
Genesis Coupe(BK)	2010	USA	Smart Key	Special Function	Antenna Status Check
Genesis Coupe(BK)	2010	USA	Smart Key	Special Function	FOB Key Status Information
Genesis Coupe(BK)	2010	USA	Smart Key	Special Function	Neutralization Mode
Genesis Coupe(BK)	2010	USA	Smart Key	Special Function	PDM Status Information
Genesis Coupe(BK)	2010	USA	Smart Key	Special Function	Serial Communication Line Check
Genesis Coupe(BK)	2010	USA	Smart Key	Special Function	SMK Status Information
Genesis Coupe(BK)	2010	USA	Smart Key	Special Function	ESCL Status Information
Genesis Coupe(BK)	2010	USA	Transmitter Code Saving	Read Data Stream	
Genesis Coupe(BK)	2010	USA	Transmitter Code Saving	Special Function	Code Saving
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Genesis Coupe(BK)	2010	USA	ECM(Engine Control Module)	Special Function	PCSV Test(Optional)
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Assembly Check(Ecu Replacement)
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Print Pressure Release Mode
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Wheel Travel Sensor(DTC)Calibration
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
IONIQ Electric(AE EV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Radial Sensor Alignment(SCG/AEP)
IONIQ Electric(AE EV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
IONIQ Electric(AE EV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
IONIQ Electric(AE EV)	2017	USA	AC(Air Conditioning)	Version Information	
IONIQ Electric(AE EV)	2017	USA	AC(Air Conditioning)	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	AC(Air Conditioning)	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	AC(Air Conditioning)	Actuation Test	
IONIQ Electric(AE EV)	2017	USA	BCM(Body Control Module)	Version Information	
IONIQ Electric(AE EV)	2017	USA	BCM(Body Control Module)	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	BCM(Body Control Module)	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2017	USA	BCM(Body Control Module)	Special Function	User Option
IONIQ Electric(AE EV)	2017	USA	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
IONIQ Electric(AE EV)	2017	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
IONIQ Electric(AE EV)	2017	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
IONIQ Electric(AE EV)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
IONIQ Electric(AE EV)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
IONIQ Electric(AE EV)	2017	USA	MDPS(Motor Driven Power Steering)	Version Information	
IONIQ Electric(AE EV)	2017	USA	MDPS(Motor Driven Power Steering)	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	MDPS(Motor Driven Power Steering)	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
IONIQ Electric(AE EV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
IONIQ Electric(AE EV)	2017	USA	Smart Key Unit	Version Information	
IONIQ Electric(AE EV)	2017	USA	Smart Key Unit	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	Smart Key Unit	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	Smart Key Unit	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	Smart Key Unit	Actuation Test	
IONIQ Electric(AE EV)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
IONIQ Electric(AE EV)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
IONIQ Electric(AE EV)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
IONIQ Electric(AE EV)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
IONIQ Electric(AE EV)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
IONIQ Electric(AE EV)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
IONIQ Electric(AE EV)	2017	USA	AFS(Adaptive Front Lighting System)	Version Information	
IONIQ Electric(AE EV)	2017	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	AFS(Adaptive Front Lighting System)	Actuation Test	
IONIQ Electric(AE EV)	2017	USA	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2017	USA	AFS(Adaptive Front Lighting System)	Special Function	Calibration
IONIQ Electric(AE EV)	2017	USA	BSD(Blind Spot Detection)	Version Information	
IONIQ Electric(AE EV)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
IONIQ Electric(AE EV)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
IONIQ Electric(AE EV)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
IONIQ Electric(AE EV)	2017	USA	MFC(Multi Function Camera)	Version Information	
IONIQ Electric(AE EV)	2017	USA	MFC(Multi Function Camera)	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	MFC(Multi Function Camera)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	MFC(Multi Function Camera)	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	MFC(Multi Function Camera)	Special Function	SPC Calibration
IONIQ Electric(AE EV)	2017	USA	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
IONIQ Electric(AE EV)	2017	USA	MFC(Multi Function Camera)	Special Function	LKAS/LDWS Variant Coding
IONIQ Electric(AE EV)	2017	USA	Amplifier	Version Information	
IONIQ Electric(AE EV)	2017	USA	Amplifier	Special Function	AMP Operation Test
IONIQ Electric(AE EV)	2017	USA	AAF(Active Air Flap)	Version Information	
IONIQ Electric(AE EV)	2017	USA	AAF(Active Air Flap)	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	AAF(Active Air Flap)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	AAF(Active Air Flap)	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	AAF(Active Air Flap)	Actuation Test	
IONIQ Electric(AE EV)	2017	USA	Charging Control Module	Version Information	
IONIQ Electric(AE EV)	2017	USA	Charging Control Module	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	Charging Control Module	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	Charging Control Module	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	Intergrated Gateway Power Module	Version Information	
IONIQ Electric(AE EV)	2017	USA	Intergrated Gateway Power Module	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	Intergrated Gateway Power Module	Clear Fault Memory	

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2017	USA	Intergrated Gateway Power Module	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	Intergrated Gateway Power Module	Actuation Test	
IONIQ Electric(AE EV)	2017	USA	Intergrated Gateway Power Module	Special Function	Erase Network Configuration
IONIQ Electric(AE EV)	2017	USA	Intergrated Gateway Power Module	Special Function	User Option
IONIQ Electric(AE EV)	2017	USA	E-Shifter	Version Information	
IONIQ Electric(AE EV)	2017	USA	E-Shifter	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	E-Shifter	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	E-Shifter	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	E-Shifter	Actuation Test	
IONIQ Electric(AE EV)	2017	USA	EV Battery System	Version Information	
IONIQ Electric(AE EV)	2017	USA	EV Battery System	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	EV Battery System	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	EV Battery System	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	EV Battery System	Actuation Test	
IONIQ Electric(AE EV)	2017	USA	EV Battery System	Special Function	Isolation Breakdown Detection Function
IONIQ Electric(AE EV)	2017	USA	EV Battery System	Special Function	SOC Calibration
IONIQ Electric(AE EV)	2017	USA	EV Motor Control System	Version Information	
IONIQ Electric(AE EV)	2017	USA	EV Motor Control System	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	EV Motor Control System	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	EV Motor Control System	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	EV Motor Control System	Actuation Test	
IONIQ Electric(AE EV)	2017	USA	EV Motor Control System	Special Function	Initialization Of Automatic Resolver Offset Calibration
IONIQ Electric(AE EV)	2017	USA	EV Motor Control System	Special Function	Electric water Pump Control
IONIQ Electric(AE EV)	2017	USA	On Board Charger	Version Information	
IONIQ Electric(AE EV)	2017	USA	On Board Charger	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	On Board Charger	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	On Board Charger	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Electric(AE EV)	2017	USA	PGS(Parking Guide System)	Version Information	
IONIQ Electric(AE EV)	2017	USA	PGS(Parking Guide System)	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	PGS(Parking Guide System)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	PGS(Parking Guide System)	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	VCULDC	Version Information	
IONIQ Electric(AE EV)	2017	USA	VCULDC	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	VCULDC	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	VCULDC	Read Data Stream	
IONIQ Electric(AE EV)	2017	USA	VCULDC	Actuation Test	
IONIQ Electric(AE EV)	2017	USA	VCULDC	Special Function	Read VIN
IONIQ Electric(AE EV)	2017	USA	VCULDC	Special Function	Write VIN
IONIQ Electric(AE EV)	2017	USA	VCULDC	Special Function	Reset Of Learning Data Or Available Distance For Driving
IONIQ Electric(AE EV)	2017	USA	VCULDC	Special Function	LDC Activation Test
IONIQ Electric(AE EV)	2017	USA	VCULDC	Special Function	SCU Parking Application Test
IONIQ Electric(AE EV)	2017	USA	VCULDC	Special Function	SCU Parking Canceling Test
IONIQ Electric(AE EV)	2017	USA	VESS(Virtual Engine Sound System)	Version Information	
IONIQ Electric(AE EV)	2017	USA	VESS(Virtual Engine Sound System)	Read Fault Code	
IONIQ Electric(AE EV)	2017	USA	VESS(Virtual Engine Sound System)	Clear Fault Memory	
IONIQ Electric(AE EV)	2017	USA	VESS(Virtual Engine Sound System)	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	ECM(Engine Control Module)	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	ECM(Engine Control Module)	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
IONIQ Hybrid(AE HEV)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
IONIQ Hybrid(AE HEV)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
IONIQ Hybrid(AE HEV)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2018	USA	Dual Clutch Transmission	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	Dual Clutch Transmission	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	Dual Clutch Transmission	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	Dual Clutch Transmission	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	Dual Clutch Transmission	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	Dual Clutch Transmission	Special Function	DCT Learning Function
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	High Pressure Release Mode
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Pedal Travel Sensor(DTC)Calibration
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
IONIQ Hybrid(AE HEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCC/AEB)
IONIQ Hybrid(AE HEV)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
IONIQ Hybrid(AE HEV)	2018	USA	AC(Air Conditioning)	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	AC(Air Conditioning)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2018	USA	AC(Air Conditioning)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	AC(Air Conditioning)	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	BCM(Body Control Module)	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	BCM(Body Control Module)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	BCM(Body Control Module)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	BCM(Body Control Module)	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
IONIQ Hybrid(AE HEV)	2018	USA	BCM(Body Control Module)	Special Function	User Option
IONIQ Hybrid(AE HEV)	2018	USA	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
IONIQ Hybrid(AE HEV)	2018	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
IONIQ Hybrid(AE HEV)	2018	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
IONIQ Hybrid(AE HEV)	2018	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
IONIQ Hybrid(AE HEV)	2018	USA	Adaptive Front Lighting System	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	Adaptive Front Lighting System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	Adaptive Front Lighting System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	Adaptive Front Lighting System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	Adaptive Front Lighting System	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	Adaptive Front Lighting System	Special Function	Parameter Download
IONIQ Hybrid(AE HEV)	2018	USA	Adaptive Front Lighting System	Special Function	Calibration
IONIQ Hybrid(AE HEV)	2018	USA	Motor Driven Power Steering	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	Motor Driven Power Steering	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	Motor Driven Power Steering	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
IONIQ Hybrid(AE HEV)	2018	USA	Motor Driven Power Steering	Special Function	Steering Angle Sensor(Sas)Calibration
IONIQ Hybrid(AE HEV)	2018	USA	Smart Key Unit	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2018	USA	Smart Key Unit	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	Smart Key Unit	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	Smart Key Unit	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
IONIQ Hybrid(AE HEV)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
IONIQ Hybrid(AE HEV)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
IONIQ Hybrid(AE HEV)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode
IONIQ Hybrid(AE HEV)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
IONIQ Hybrid(AE HEV)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
IONIQ Hybrid(AE HEV)	2018	USA	Blind Spot Detection	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	Blind Spot Detection	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	Blind Spot Detection	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	Blind Spot Detection	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	Blind Spot Detection	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
IONIQ Hybrid(AE HEV)	2018	USA	Blind Spot Detection	Special Function	BSD Variant Coding
IONIQ Hybrid(AE HEV)	2018	USA	Multi Function Camera	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	Multi Function Camera	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	Multi Function Camera	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	Multi Function Camera	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	Multi Function Camera	Special Function	SPC Calibration
IONIQ Hybrid(AE HEV)	2018	USA	Multi Function Camera	Special Function	SPTAC Calibration
IONIQ Hybrid(AE HEV)	2018	USA	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
IONIQ Hybrid(AE HEV)	2018	USA	Parking Guide System	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	Parking Guide System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	Parking Guide System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	Parking Guide System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	Active Air Flap	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	Active Air Flap	Read Fault Code	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2018	USA	Active Air Flap	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	Active Air Flap	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	Active Air Flap	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	Amplifier	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	Amplifier	Special Function	AMP Operation Test
IONIQ Hybrid(AE HEV)	2018	USA	HEV Battery System	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	HEV Battery System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	HEV Battery System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	HEV Battery System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	HEV Battery System	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	HEV Motor Control System	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	HEV Motor Control System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	HEV Motor Control System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	HEV Motor Control System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	HEV Motor Control System	Special Function	Electric water Pump Control
IONIQ Hybrid(AE HEV)	2018	USA	HEV Motor Control System	Special Function	HPCU(MCU/GCU)Self-diagnosis Function
IONIQ Hybrid(AE HEV)	2018	USA	Virtual Engine Sound System	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	Virtual Engine Sound System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	Virtual Engine Sound System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	Virtual Engine Sound System	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	Integrated Gateway Power Control Module	Version Information	
IONIQ Hybrid(AE HEV)	2018	USA	Integrated Gateway Power Control Module	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	Integrated Gateway Power Control Module	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	Integrated Gateway Power Control Module	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	Integrated Gateway Power Control Module	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	Integrated Gateway Power Control Module	Special Function	Erase network Configuration
IONIQ Hybrid(AE HEV)	2018	USA	Integrated Gateway Power Control Module	Special Function	User Option
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Version Information	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Actuation Test	
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Compression Pressure Test Of Engine Cylinder
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Engine Clutch/Motor Resolver Adaptation
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Engine Test Off
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Engine Test On
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	HCU Variant Coding
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Initialization Of The Engine Clutch Inspection Line Learning And Diagnostic Information
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	LDC Activation Test
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Removal Of Air From Engine Clutch Hydraulic Pressure Line
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Stabilization Of Hydraulic Oil Flow Of Engine Clutch
IONIQ Hybrid(AE HEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Stabilization Of The Engine Clutch Hardware Transfer Torque
IONIQ Hybrid(AE HEV)	2018	USA	IMM(Immobilizer)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2018	USA	IMM(Immobilizer)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2018	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
IONIQ Hybrid(AE HEV)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
IONIQ Hybrid(AE HEV)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
IONIQ Hybrid(AE HEV)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
IONIQ Hybrid(AE HEV)	2018	USA	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Read FreezeData	
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
IONIQ Hybrid(AE HEV)	2017	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
IONIQ Hybrid(AE HEV)	2017	USA	DCT(Dual Clutch Transmission)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	DCT(Dual Clutch Transmission)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	DCT(Dual Clutch Transmission)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	DCT(Dual Clutch Transmission)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	DCT(Dual Clutch Transmission)	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	USA	DCT(Dual Clutch Transmission)	Special Function	DCT Learning Function
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCC/AEP)
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	High/FESB/EFC Release Mode
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Pedal Travel Sensor(DTC)Calibration
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
IONIQ Hybrid(AE HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
IONIQ Hybrid(AE HEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
IONIQ Hybrid(AE HEV)	2017	USA	AC(Air Conditioning)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	AC(Air Conditioning)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	AC(Air Conditioning)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	AC(Air Conditioning)	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	USA	BCM(Body Control Module)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	BCM(Body Control Module)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	BCM(Body Control Module)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	BCM(Body Control Module)	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	USA	BCM(Body Control Module)	Special Function	User Option
IONIQ Hybrid(AE HEV)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
IONIQ Hybrid(AE HEV)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
IONIQ Hybrid(AE HEV)	2017	USA	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
IONIQ Hybrid(AE HEV)	2017	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
IONIQ Hybrid(AE HEV)	2017	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
IONIQ Hybrid(AE HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
IONIQ Hybrid(AE HEV)	2017	USA	Smart Key Unit	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	Smart Key Unit	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	Smart Key Unit	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	Smart Key Unit	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	Smart Key Unit	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
IONIQ Hybrid(AE HEV)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
IONIQ Hybrid(AE HEV)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
IONIQ Hybrid(AE HEV)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
IONIQ Hybrid(AE HEV)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
IONIQ Hybrid(AE HEV)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
IONIQ Hybrid(AE HEV)	2017	USA	AFS(Adaptive Front Lighting System)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	AFS(Adaptive Front Lighting System)	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	USA	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
IONIQ Hybrid(AE HEV)	2017	USA	AFS(Adaptive Front Lighting System)	Special Function	Calibration
IONIQ Hybrid(AE HEV)	2017	USA	IMMO(Immobilizer)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	IMMO(Immobilizer)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	IMMO(Immobilizer)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	IMMO(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2017	USA	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
IONIQ Hybrid(AE HEV)	2017	USA	IMMO(Immobilizer)	Special Function	Limp Home Mode
IONIQ Hybrid(AE HEV)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching
IONIQ Hybrid(AE HEV)	2017	USA	CODE(Transmitter Code Saving)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	CODE(Transmitter Code Saving)	Special Function	Code Saving
IONIQ Hybrid(AE HEV)	2017	USA	BSD(Blind Spot Detection)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
IONIQ Hybrid(AE HEV)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
IONIQ Hybrid(AE HEV)	2017	USA	MFC(Multi Function Camera)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	MFC(Multi Function Camera)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	MFC(Multi Function Camera)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	MFC(Multi Function Camera)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	MFC(Multi Function Camera)	Special Function	SPC Calibration
IONIQ Hybrid(AE HEV)	2017	USA	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
IONIQ Hybrid(AE HEV)	2017	USA	MFC(Multi Function Camera)	Special Function	LKAS/LDWS Variant Coding
IONIQ Hybrid(AE HEV)	2017	USA	Amplifier	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	Amplifier	Special Function	AMP Operation Test
IONIQ Hybrid(AE HEV)	2017	USA	AAF(Active Air Flap)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	AAF(Active Air Flap)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	AAF(Active Air Flap)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	AAF(Active Air Flap)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	AAF(Active Air Flap)	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	USA	Intergrated Gateway Power Control Module	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	Intergrated Gateway Power Control Module	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	Intergrated Gateway Power Control Module	Clear Fault Memory	

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2017	USA	Intergrated Gateway Power Control Module	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	Intergrated Gateway Power Control Module	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	USA	Intergrated Gateway Power Control Module	Special Function	Erase Network Configuration
IONIQ Hybrid(AE HEV)	2017	USA	Intergrated Gateway Power Control Module	Special Function	User Option
IONIQ Hybrid(AE HEV)	2017	USA	HEV Battery System	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	HEV Battery System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	HEV Battery System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	HEV Battery System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	HEV Battery System	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	USA	HEV Battery System	Special Function	Inspection Of 12V Battery Status
IONIQ Hybrid(AE HEV)	2017	USA	HEV Battery System	Special Function	Isolation Breakdown Detection Function
IONIQ Hybrid(AE HEV)	2017	USA	HEV Battery System	Special Function	SOC Calibration
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Actuation Test	
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Special Function	Compression Pressure Test Of Engine Cylinder
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Special Function	Engine Clutch/Motor Resolver Adaptation
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Special Function	Engine Test Off
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Special Function	Engine Test On
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Special Function	HCU Variant Coding
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Special Function	Initialization Of The Engine Clutch Inspection Line Learning And Diagnostic Information
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Special Function	LDC Activation Test

model	year	area	system	function	subfunction
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Special Function	Removal Of Air From Engine Clutch Hydraulic Pressure Line
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Special Function	Stabilization Of Hydraulic Oil Flow Of Engine Clutch
IONIQ Hybrid(AE HEV)	2017	USA	HCU/Low DC-DC Converter	Special Function	Stabilization Of The Engine Clutch Hardware Transfer Torque
IONIQ Hybrid(AE HEV)	2017	USA	HEV Motor Control System	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	HEV Motor Control System	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	HEV Motor Control System	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	HEV Motor Control System	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	HEV Motor Control System	Special Function	Electric water Pump Control
IONIQ Hybrid(AE HEV)	2017	USA	HEV Motor Control System	Special Function	HPCU(MCU/GCU)Self- diagnosis Function
IONIQ Hybrid(AE HEV)	2017	USA	PGS(Parking Guide System)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	PGS(Parking Guide System)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	PGS(Parking Guide System)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	PGS(Parking Guide System)	Read Data Stream	
IONIQ Hybrid(AE HEV)	2017	USA	VESS(Virtual Engine Sound System)	Version Information	
IONIQ Hybrid(AE HEV)	2017	USA	VESS(Virtual Engine Sound System)	Read Fault Code	
IONIQ Hybrid(AE HEV)	2017	USA	VESS(Virtual Engine Sound System)	Clear Fault Memory	
IONIQ Hybrid(AE HEV)	2017	USA	VESS(Virtual Engine Sound System)	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Read FreezeData	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Dual Clutch Transmission	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Dual Clutch Transmission	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Dual Clutch Transmission	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Dual Clutch Transmission	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Dual Clutch Transmission	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Dual Clutch Transmission	Special Function	DCT Learning Function
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	High Pressure Release Mode
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Pedal Travel Sensor(PTS)Calibration
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCC/AEB)
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	AC(Air Conditioning)	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	AC(Air Conditioning)	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	AC(Air Conditioning)	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	AC(Air Conditioning)	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	BCM(Body Control Module)	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	BCM(Body Control Module)	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	BCM(Body Control Module)	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	BCM(Body Control Module)	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	BCM(Body Control Module)	Special Function	User Option
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Auto Headlamp Leveling System	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Auto Headlamp Leveling System	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Auto Headlamp Leveling System	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Auto Headlamp Leveling System	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Auto Headlamp Leveling System	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Motor Driven Power Steering	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Motor Driven Power Steering	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Motor Driven Power Steering	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Motor Driven Power Steering	Special Function	ASP Calibration
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Smart Key Unit	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Smart Key Unit	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Smart Key Unit	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Smart Key Unit	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Smart Key Unit	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Blind Spot Detection	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Blind Spot Detection	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Blind Spot Detection	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Blind Spot Detection	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Blind Spot Detection	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Blind Spot Detection	Special Function	BSD Variant Coding
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Multi Function Camera	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Multi Function Camera	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Multi Function Camera	Clear Fault Memory	

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Multi Function Camera	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Multi Function Camera	Special Function	SPC Calibration
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Multi Function Camera	Special Function	SPTAC Calibration
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Parking Guide System	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Parking Guide System	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Parking Guide System	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Parking Guide System	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Active Air Flap-Left	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Active Air Flap-Left	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Active Air Flap-Left	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Active Air Flap-Left	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Active Air Flap-Left	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Active Air Flap-Right	Version Information	

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Active Air Flap-Right	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Amplifier	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Amplifier	Special Function	AMP Operation Test
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	PHEV Battery System	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	PHEV Battery System	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	PHEV Battery System	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	PHEV Battery System	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	PHEV Battery System	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	PHEV Battery System	Special Function	Isolation Breakdown Detection Function
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	PHEV Battery System	Special Function	SOC Calibration
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HEV Motor Control System	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HEV Motor Control System	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HEV Motor Control System	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HEV Motor Control System	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HEV Motor Control System	Special Function	HPCU(MCU,GCU)Diagnosis Parameter Initialization
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HEV Motor Control System	Special Function	Electric Water Pump Control
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HEV Motor Control System	Special Function	HPCU(MCU/GCU)Self- diagnosis Function
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Virtual Engine Sound System	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Virtual Engine Sound System	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Virtual Engine Sound System	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Virtual Engine Sound System	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Integrated Gateway Power Module	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Integrated Gateway Power Module	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Integrated Gateway Power Module	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Integrated Gateway Power Module	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Integrated Gateway Power Module	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Integrated Gateway Power Module	Special Function	Erase Network Configuration
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Integrated Gateway Power Module	Special Function	User Option

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Actuation Test	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Compression Pressure Test Of Engine Cylinder
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Engine Clutch/Motor Resolver Adaptation
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Engine Test Off
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Engine Test On
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Initialization Of The Engine Clutch Inspection Line Learning And Diagnostic Information
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	LDC Activation Test
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Removal Of Air From Engine Clutch Hydraulic Pressure Line
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Stabilization Of Hydraulic Oil Flow Of Engine Clutch
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	Stabilization Of The Engine Clutch Hardware Transfer Torque

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	HCU/Low DC-DC Converter	Special Function	HCU Variant Coding
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	IMM(Immobilizer)	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	IMM(Immobilizer)	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Transmitter Code Saving	Read Data Stream	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	On Board Charger	Version Information	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	On Board Charger	Read Fault Code	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	On Board Charger	Clear Fault Memory	
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	On Board Charger	Read Data Stream	

model	year	area	system	function	subfunction
IONIQ Plug-in Hybrid(AE PHEV)	2018	USA	On Board Charger	Special Function	Variant Coding For Charging Port
Kona(OS)	2018	USA	ECM(Engine Control Module)	Version Information	
Kona(OS)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
Kona(OS)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
Kona(OS)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
Kona(OS)	2018	USA	ECM(Engine Control Module)	Actuation Test	
Kona(OS)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Kona(OS)	2018	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Kona(OS)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Kona(OS)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
Kona(OS)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
Kona(OS)	2018	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Kona(OS)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Kona(OS)	2018	USA	Dual Clutch Transmission	Version Information	
Kona(OS)	2018	USA	Dual Clutch Transmission	Read Fault Code	
Kona(OS)	2018	USA	Dual Clutch Transmission	Clear Fault Memory	
Kona(OS)	2018	USA	Dual Clutch Transmission	Read Data Stream	
Kona(OS)	2018	USA	Dual Clutch Transmission	Actuation Test	
Kona(OS)	2018	USA	Dual Clutch Transmission	Special Function	DCT Learning Function
Kona(OS)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
Kona(OS)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Kona(OS)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Kona(OS)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Kona(OS)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
Kona(OS)	2018	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Kona(OS)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Kona(OS)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration

model	year	area	system	function	subfunction
Kona(OS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Kona(OS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Kona(OS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Kona(OS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Kona(OS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Kona(OS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Zero Re-Calibration Of Occupant Classification Sensor
Kona(OS)	2018	USA	AC(Air Conditioning)	Version Information	
Kona(OS)	2018	USA	AC(Air Conditioning)	Read Fault Code	
Kona(OS)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
Kona(OS)	2018	USA	AC(Air Conditioning)	Read Data Stream	
Kona(OS)	2018	USA	AC(Air Conditioning)	Actuation Test	
Kona(OS)	2018	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Kona(OS)	2018	USA	BCM(Body Control Module)	Version Information	
Kona(OS)	2018	USA	BCM(Body Control Module)	Read Fault Code	
Kona(OS)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
Kona(OS)	2018	USA	BCM(Body Control Module)	Read Data Stream	
Kona(OS)	2018	USA	BCM(Body Control Module)	Actuation Test	
Kona(OS)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Kona(OS)	2018	USA	BCM(Body Control Module)	Special Function	HUD Calibration
Kona(OS)	2018	USA	BCM(Body Control Module)	Special Function	User Option
Kona(OS)	2018	USA	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
Kona(OS)	2018	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Reading
Kona(OS)	2018	USA	BCM(Body Control Module)	Special Function	Vehicle Name Code Writing
Kona(OS)	2018	USA	Motor Driven Power Steering	Version Information	
Kona(OS)	2018	USA	Motor Driven Power Steering	Read Fault Code	
Kona(OS)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
Kona(OS)	2018	USA	Motor Driven Power Steering	Read Data Stream	
Kona(OS)	2018	USA	4WD Control	Version Information	

model	year	area	system	function	subfunction
Kona(OS)	2018	USA	4WD Control	Read Fault Code	
Kona(OS)	2018	USA	4WD Control	Clear Fault Memory	
Kona(OS)	2018	USA	4WD Control	Read Data Stream	
Kona(OS)	2018	USA	4WD Control	Actuation Test	
Kona(OS)	2018	USA	4WD Control	Special Function	Clutch Learning Read
Kona(OS)	2018	USA	4WD Control	Special Function	Clutch Learning Reset
Kona(OS)	2018	USA	4WD Control	Special Function	Clutch Learning Write
Kona(OS)	2018	USA	Smart Key Unit	Version Information	
Kona(OS)	2018	USA	Smart Key Unit	Read Fault Code	
Kona(OS)	2018	USA	Smart Key Unit	Clear Fault Memory	
Kona(OS)	2018	USA	Smart Key Unit	Read Data Stream	
Kona(OS)	2018	USA	Smart Key Unit	Actuation Test	
Kona(OS)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
Kona(OS)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Kona(OS)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
Kona(OS)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode
Kona(OS)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
Kona(OS)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
Kona(OS)	2018	USA	Blind-Spot Collision Warning	Version Information	
Kona(OS)	2018	USA	Blind-Spot Collision Warning	Read Fault Code	
Kona(OS)	2018	USA	Blind-Spot Collision Warning	Clear Fault Memory	
Kona(OS)	2018	USA	Blind-Spot Collision Warning	Read Data Stream	
Kona(OS)	2018	USA	Blind-Spot Collision Warning	Actuation Test	
Kona(OS)	2018	USA	Blind-Spot Collision Warning	Special Function	BSD Radar Calibration
Kona(OS)	2018	USA	Blind-Spot Collision Warning	Special Function	IG-KEY OFF (V) Engine Off (No) DTC
Kona(OS)	2018	USA	Lane Keeping Assist	Version Information	
Kona(OS)	2018	USA	Lane Keeping Assist	Read Fault Code	
Kona(OS)	2018	USA	Lane Keeping Assist	Clear Fault Memory	
Kona(OS)	2018	USA	Lane Keeping Assist	Read Data Stream	

model	year	area	system	function	subfunction
Kona(OS)	2018	USA	Lane Keeping Assist	Special Function	LKAS/LDWS Variant Coding
Kona(OS)	2018	USA	Rear View Monitor with Parking Guidance	Version Information	
Kona(OS)	2018	USA	Rear View Monitor with Parking Guidance	Read Fault Code	
Kona(OS)	2018	USA	Rear View Monitor with Parking Guidance	Clear Fault Memory	
Kona(OS)	2018	USA	Rear View Monitor with Parking Guidance	Read Data Stream	
Kona(OS)	2018	USA	Rear View Monitor with Parking Guidance	Actuation Test	
Kona(OS)	2018	USA	Amplifier	Version Information	
Kona(OS)	2018	USA	Amplifier	Special Function	AMP Operation Test
Kona(OS)	2018	USA	Integrated Gateway Power Control Module	Version Information	
Kona(OS)	2018	USA	Integrated Gateway Power Control Module	Read Fault Code	
Kona(OS)	2018	USA	Integrated Gateway Power Control Module	Clear Fault Memory	
Kona(OS)	2018	USA	Integrated Gateway Power Control Module	Read Data Stream	
Kona(OS)	2018	USA	Integrated Gateway Power Control Module	Actuation Test	
Kona(OS)	2018	USA	Integrated Gateway Power Control Module	Special Function	Erase Network Configuration
Kona(OS)	2018	USA	Integrated Gateway Power Control Module	Special Function	User Option
Kona(OS)	2018	USA	Integrated Gateway Power Control Module	Special Function	Battery Discharge Warning History Check
Kona(OS)	2018	USA	IMM(Immobilizer)	Read Fault Code	
Kona(OS)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
Kona(OS)	2018	USA	IMM(Immobilizer)	Read Data Stream	
Kona(OS)	2018	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chopping
Kona(OS)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Kona(OS)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Kona(OS)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
Kona(OS)	2018	USA	Transmitter Code Saving	Read Data Stream	
Kona(OS)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
Kona(OS)	2018	USA	ECM(Engine Control Module)	Read FreezeData	
Kona(OS)	2018	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Kona(OS)	2018	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode

model	year	area	system	function	subfunction
Kona(OS)	2018	USA	TCM(Transmission Control Module)	Version Information	
Kona(OS)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
Kona(OS)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Kona(OS)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	
Kona(OS)	2018	USA	TCM(Transmission Control Module)	Actuation Test	
Kona(OS)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Kona(OS)	2018	USA	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Kona(OS)	2018	USA	Active Air Flap	Version Information	
Kona(OS)	2018	USA	Active Air Flap	Read Fault Code	
Kona(OS)	2018	USA	Active Air Flap	Clear Fault Memory	
Kona(OS)	2018	USA	Active Air Flap	Read Data Stream	
Kona(OS)	2018	USA	Active Air Flap	Actuation Test	
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Version Information	
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(NC)	2018	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe(NC)	2018	USA	TCM(Transmission Control Module)	Version Information	
Santafe(NC)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(NC)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(NC)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(NC)	2018	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(NC)	2018	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(NC)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(NC)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(NC)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(NC)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(NC)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(NC)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(NC)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Santafe(NC)	2018	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(NC)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(NC)	2018	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(NC)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(NC)	2018	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe(NC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(NC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(NC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(NC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(NC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(NC)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(NC)	2018	USA	AC(Air Conditioning)	Version Information	
Santafe(NC)	2018	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(NC)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe(NC)	2018	USA	AC(Air Conditioning)	Read Data Stream	
Santafe(NC)	2018	USA	AC(Air Conditioning)	Actuation Test	
Santafe(NC)	2018	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(NC)	2018	USA	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Santafe(NC)	2018	USA	BCM(Body Control Module)	Read Fault Code	
Santafe(NC)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe(NC)	2018	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(NC)	2018	USA	BCM(Body Control Module)	Actuation Test	
Santafe(NC)	2018	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(NC)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(NC)	2018	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(NC)	2018	USA	Power Tail Gate	Version Information	
Santafe(NC)	2018	USA	Power Tail Gate	Read Fault Code	
Santafe(NC)	2018	USA	Power Tail Gate	Clear Fault Memory	
Santafe(NC)	2018	USA	Power Tail Gate	Read Data Stream	
Santafe(NC)	2018	USA	Power Tail Gate	Special Function	User Option
Santafe(NC)	2018	USA	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Santafe(NC)	2018	USA	Tire Pressure Monitoring	Version Information	
Santafe(NC)	2018	USA	Tire Pressure Monitoring	Read Fault Code	
Santafe(NC)	2018	USA	Tire Pressure Monitoring	Clear Fault Memory	
Santafe(NC)	2018	USA	Tire Pressure Monitoring	Read Data Stream	
Santafe(NC)	2018	USA	Tire Pressure Monitoring	Actuation Test	
Santafe(NC)	2018	USA	Tire Pressure Monitoring	Special Function	Write VIN
Santafe(NC)	2018	USA	Tire Pressure Monitoring	Special Function	Wheel Sensor ID Writing
Santafe(NC)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Reading
Santafe(NC)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Writing
Santafe(NC)	2018	USA	Tire Pressure Monitoring	Special Function	TPMS TEST
Santafe(NC)	2018	USA	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe(NC)	2018	USA	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe(NC)	2018	USA	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe(NC)	2018	USA	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe(NC)	2018	USA	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe(NC)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download

model	year	area	system	function	subfunction
Santafe(NC)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe(NC)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe(NC)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Santafe(NC)	2018	USA	Motor Driven Power Steering	Version Information	
Santafe(NC)	2018	USA	Motor Driven Power Steering	Read Fault Code	
Santafe(NC)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
Santafe(NC)	2018	USA	Motor Driven Power Steering	Read Data Stream	
Santafe(NC)	2018	USA	Motor Driven Power Steering	Special Function	ASP Calibration
Santafe(NC)	2018	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
Santafe(NC)	2018	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering ECU)
Santafe(NC)	2018	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering Motor)
Santafe(NC)	2018	USA	Motor Driven Power Steering	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(NC)	2018	USA	4WD Control	Version Information	
Santafe(NC)	2018	USA	4WD Control	Read Fault Code	
Santafe(NC)	2018	USA	4WD Control	Clear Fault Memory	
Santafe(NC)	2018	USA	4WD Control	Read Data Stream	
Santafe(NC)	2018	USA	4WD Control	Actuation Test	
Santafe(NC)	2018	USA	4WD Control	Special Function	Clutch Learning Read
Santafe(NC)	2018	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe(NC)	2018	USA	4WD Control	Special Function	Clutch Learning Write
Santafe(NC)	2018	USA	Smart Key Unit	Version Information	
Santafe(NC)	2018	USA	Smart Key Unit	Read Fault Code	
Santafe(NC)	2018	USA	Smart Key Unit	Clear Fault Memory	
Santafe(NC)	2018	USA	Smart Key Unit	Read Data Stream	
Santafe(NC)	2018	USA	Smart Key Unit	Actuation Test	
Santafe(NC)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Santafe(NC)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(NC)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(NC)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe(NC)	2018	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(NC)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(NC)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe(NC)	2018	USA	Smart Cruise Control	Version Information	
Santafe(NC)	2018	USA	Smart Cruise Control	Read Fault Code	
Santafe(NC)	2018	USA	Smart Cruise Control	Clear Fault Memory	
Santafe(NC)	2018	USA	Smart Cruise Control	Read Data Stream	
Santafe(NC)	2018	USA	Smart Cruise Control	Special Function	Variant Coding
Santafe(NC)	2018	USA	Smart Cruise Control	Special Function	Radar Sensor Alignment(SCC/AEB)
Santafe(NC)	2018	USA	Blind Spot Detection	Version Information	
Santafe(NC)	2018	USA	Blind Spot Detection	Read Fault Code	
Santafe(NC)	2018	USA	Blind Spot Detection	Clear Fault Memory	
Santafe(NC)	2018	USA	Blind Spot Detection	Read Data Stream	
Santafe(NC)	2018	USA	Blind Spot Detection	Actuation Test	
Santafe(NC)	2018	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe(NC)	2018	USA	Lane Departure Warning System	Version Information	
Santafe(NC)	2018	USA	Lane Departure Warning System	Read Fault Code	
Santafe(NC)	2018	USA	Lane Departure Warning System	Clear Fault Memory	
Santafe(NC)	2018	USA	Lane Departure Warning System	Read Data Stream	
Santafe(NC)	2018	USA	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Santafe(NC)	2018	USA	Lane Departure Warning System	Special Function	SPC Calibration
Santafe(NC)	2018	USA	Lane Departure Warning System	Special Function	SPTAC Calibration
Santafe(NC)	2018	USA	Multi-View Camera System	Version Information	
Santafe(NC)	2018	USA	Multi-View Camera System	Read Fault Code	
Santafe(NC)	2018	USA	Multi-View Camera System	Clear Fault Memory	
Santafe(NC)	2018	USA	Multi-View Camera System	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(NC)	2018	USA	Multi-View Camera System	Actuation Test	
Santafe(NC)	2018	USA	Amplifier	Version Information	
Santafe(NC)	2018	USA	Amplifier	Special Function	AMP Operation Test
Santafe(NC)	2018	USA	Telematics Unit	Version Information	
Santafe(NC)	2018	USA	Telematics Unit	Read Fault Code	
Santafe(NC)	2018	USA	Telematics Unit	Clear Fault Memory	
Santafe(NC)	2018	USA	IMM(Immobilizer)	Read Fault Code	
Santafe(NC)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
Santafe(NC)	2018	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(NC)	2018	USA	IMM(Immobilizer)	Special Function	Password
Santafe(NC)	2018	USA	IMM(Immobilizer)	Special Function	Teaching/Chopping
Santafe(NC)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(NC)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(NC)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe(NC)	2018	USA	Transmitter Code Saving	Read Data Stream	
Santafe(NC)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Version Information	
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Santafe(NC)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe(NC)	2017	USA	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Santafe(NC)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(NC)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(NC)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(NC)	2017	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(NC)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(NC)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(NC)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(NC)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(NC)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(NC)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(NC)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(NC)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(NC)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(NC)	2017	USA	AC(Air Conditioning)	Version Information	
Santafe(NC)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(NC)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe(NC)	2017	USA	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(NC)	2017	USA	AC(Air Conditioning)	Actuation Test	
Santafe(NC)	2017	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(NC)	2017	USA	BCM(Body Control Module)	Version Information	
Santafe(NC)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Santafe(NC)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe(NC)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(NC)	2017	USA	BCM(Body Control Module)	Actuation Test	
Santafe(NC)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(NC)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Santafe(NC)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe(NC)	2017	USA	MDPS(Motor Driven Power Steering)	Version Information	
Santafe(NC)	2017	USA	MDPS(Motor Driven Power Steering)	Read Fault Code	
Santafe(NC)	2017	USA	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Santafe(NC)	2017	USA	MDPS(Motor Driven Power Steering)	Read Data Stream	
Santafe(NC)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Santafe(NC)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Santafe(NC)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Santafe(NC)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Santafe(NC)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(NC)	2017	USA	Smart Key Unit	Version Information	
Santafe(NC)	2017	USA	Smart Key Unit	Read Fault Code	
Santafe(NC)	2017	USA	Smart Key Unit	Clear Fault Memory	
Santafe(NC)	2017	USA	Smart Key Unit	Read Data Stream	
Santafe(NC)	2017	USA	Smart Key Unit	Actuation Test	
Santafe(NC)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Santafe(NC)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(NC)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
Santafe(NC)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe(NC)	2017	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(NC)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(NC)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe(NC)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(NC)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(NC)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(NC)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(NC)	2017	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(NC)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(NC)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(NC)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(NC)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(NC)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(NC)	2017	USA	Head Lamp	Version Information	
Santafe(NC)	2017	USA	Head Lamp	Read Fault Code	
Santafe(NC)	2017	USA	Head Lamp	Clear Fault Memory	
Santafe(NC)	2017	USA	Head Lamp	Read Data Stream	
Santafe(NC)	2017	USA	Head Lamp	Actuation Test	
Santafe(NC)	2017	USA	Head Lamp	Special Function	Parameter Download
Santafe(NC)	2017	USA	Head Lamp	Special Function	Calibration
Santafe(NC)	2017	USA	Head Lamp	Special Function	Headlamp Leveling
Santafe(NC)	2017	USA	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Santafe(NC)	2017	USA	IMMO(Immobilizer)	Read Fault Code	
Santafe(NC)	2017	USA	IMMO(Immobilizer)	Clear Fault Memory	
Santafe(NC)	2017	USA	IMMO(Immobilizer)	Read Data Stream	
Santafe(NC)	2017	USA	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(NC)	2017	USA	IMMO(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Santafe(NC)	2017	USA	IMMO(Immobilizer)	Special Function	Limp Home Mode
Santafe(NC)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching
Santafe(NC)	2017	USA	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe(NC)	2017	USA	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe(NC)	2017	USA	4WD Control	Version Information	
Santafe(NC)	2017	USA	4WD Control	Read Fault Code	
Santafe(NC)	2017	USA	4WD Control	Clear Fault Memory	
Santafe(NC)	2017	USA	4WD Control	Read Data Stream	
Santafe(NC)	2017	USA	4WD Control	Actuation Test	
Santafe(NC)	2017	USA	4WD Control	Special Function	Clutch Learning Read
Santafe(NC)	2017	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe(NC)	2017	USA	4WD Control	Special Function	Clutch Learning Write
Santafe(NC)	2017	USA	PTG(Power Tail Gate)	Version Information	
Santafe(NC)	2017	USA	PTG(Power Tail Gate)	Read Fault Code	
Santafe(NC)	2017	USA	PTG(Power Tail Gate)	Clear Fault Memory	
Santafe(NC)	2017	USA	PTG(Power Tail Gate)	Read Data Stream	
Santafe(NC)	2017	USA	PTG(Power Tail Gate)	Special Function	User Option
Santafe(NC)	2017	USA	PTG(Power Tail Gate)	Special Function	Power Tailgate mode Configuration
Santafe(NC)	2017	USA	LDWS(Lane Departure Warning System)	Version Information	
Santafe(NC)	2017	USA	LDWS(Lane Departure Warning System)	Read Fault Code	
Santafe(NC)	2017	USA	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Santafe(NC)	2017	USA	LDWS(Lane Departure Warning System)	Read Data Stream	
Santafe(NC)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Santafe(NC)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Santafe(NC)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Santafe(NC)	2017	USA	BSD(Blind Spot Detection)	Version Information	
Santafe(NC)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
Santafe(NC)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
Santafe(NC)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(NC)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
Santafe(NC)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Santafe(NC)	2017	USA	SCC(Smart Cruise Control)	Version Information	
Santafe(NC)	2017	USA	SCC(Smart Cruise Control)	Read Fault Code	
Santafe(NC)	2017	USA	SCC(Smart Cruise Control)	Clear Fault Memory	
Santafe(NC)	2017	USA	SCC(Smart Cruise Control)	Read Data Stream	
Santafe(NC)	2017	USA	SCC(Smart Cruise Control)	Special Function	Variant Coding
Santafe(NC)	2017	USA	SCC(Smart Cruise Control)	Special Function	Radar Sensor Alignment(SCC/AFD)
Santafe(NC)	2017	USA	Amplifier	Version Information	
Santafe(NC)	2017	USA	Amplifier	Special Function	AMP Operation Test
Santafe(NC)	2017	USA	Multi-View Camera System	Version Information	
Santafe(NC)	2017	USA	Multi-View Camera System	Read Fault Code	
Santafe(NC)	2017	USA	Multi-View Camera System	Clear Fault Memory	
Santafe(NC)	2017	USA	Multi-View Camera System	Read Data Stream	
Santafe(NC)	2017	USA	Multi-View Camera System	Actuation Test	
Santafe(NC)	2017	USA	Telematics Unit	Version Information	
Santafe(NC)	2017	USA	Telematics Unit	Read Fault Code	
Santafe(NC)	2017	USA	Telematics Unit	Clear Fault Memory	
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Version Information	
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Santafe(NC)	2016	USA	ECM(Engine Control Module)	Special Function	Configuration Reset ETC Test(Optional)
Santafe(NC)	2016	USA	TCM(Transmission Control Module)	Version Information	
Santafe(NC)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(NC)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(NC)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(NC)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(NC)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(NC)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(NC)	2016	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(NC)	2016	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(NC)	2016	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(NC)	2016	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(NC)	2016	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(NC)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Santafe(NC)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(NC)	2016	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(NC)	2016	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(NC)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(NC)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(NC)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(NC)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(NC)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(NC)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(NC)	2016	USA	AC(Air Conditioning)	Version Information	
Santafe(NC)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(NC)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(NC)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Santafe(NC)	2016	USA	AC(Air Conditioning)	Actuation Test	
Santafe(NC)	2016	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(NC)	2016	USA	BCM(Body Control Module)	Version Information	
Santafe(NC)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Santafe(NC)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe(NC)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(NC)	2016	USA	BCM(Body Control Module)	Actuation Test	
Santafe(NC)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(NC)	2016	USA	Power Tail Gate	Version Information	
Santafe(NC)	2016	USA	Power Tail Gate	Read Fault Code	
Santafe(NC)	2016	USA	Power Tail Gate	Clear Fault Memory	
Santafe(NC)	2016	USA	Power Tail Gate	Read Data Stream	
Santafe(NC)	2016	USA	EPB(Electrical Parking Brake)	Version Information	
Santafe(NC)	2016	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Santafe(NC)	2016	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Santafe(NC)	2016	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Santafe(NC)	2016	USA	EPB(Electrical Parking Brake)	Actuation Test	
Santafe(NC)	2016	USA	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Santafe(NC)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Santafe(NC)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(NC)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(NC)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(NC)	2016	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(NC)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(NC)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Santafe(NC)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)

model	year	area	system	function	subfunction
Santafe(NC)	2016	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(NC)	2016	USA	4WD Control	Version Information	
Santafe(NC)	2016	USA	4WD Control	Read Fault Code	
Santafe(NC)	2016	USA	4WD Control	Clear Fault Memory	
Santafe(NC)	2016	USA	4WD Control	Read Data Stream	
Santafe(NC)	2016	USA	4WD Control	Actuation Test	
Santafe(NC)	2016	USA	4WD Control	Special Function	Clutch Learning Read
Santafe(NC)	2016	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe(NC)	2016	USA	4WD Control	Special Function	Clutch Learning Write
Santafe(NC)	2016	USA	AFS(Adaptive Front Lighting System)	Version Information	
Santafe(NC)	2016	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Santafe(NC)	2016	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Santafe(NC)	2016	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Santafe(NC)	2016	USA	AFS(Adaptive Front Lighting System)	Actuation Test	
Santafe(NC)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Santafe(NC)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Parameter Setting&Zero Position Initial
Santafe(NC)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(NC)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(NC)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(NC)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(NC)	2016	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(NC)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(NC)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(NC)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(NC)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(NC)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(NC)	2016	USA	IMM(Immobilizer)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(NC)	2016	USA	IMM(Immobilizer)	Clear Fault Memory	
Santafe(NC)	2016	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(NC)	2016	USA	IMM(Immobilizer)	Special Function	Password
Santafe(NC)	2016	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Santafe(NC)	2016	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(NC)	2016	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(NC)	2016	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe(NC)	2016	USA	Smart Key Unit	Version Information	
Santafe(NC)	2016	USA	Smart Key Unit	Read Fault Code	
Santafe(NC)	2016	USA	Smart Key Unit	Clear Fault Memory	
Santafe(NC)	2016	USA	Smart Key Unit	Read Data Stream	
Santafe(NC)	2016	USA	Smart Key Unit	Actuation Test	
Santafe(NC)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check
Santafe(NC)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(NC)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(NC)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe(NC)	2016	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(NC)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(NC)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe(NC)	2016	USA	Assist Door Module	Version Information	
Santafe(NC)	2016	USA	Assist Door Module	Read Fault Code	
Santafe(NC)	2016	USA	Assist Door Module	Clear Fault Memory	
Santafe(NC)	2016	USA	Assist Door Module	Read Data Stream	
Santafe(NC)	2016	USA	Assist Door Module	Actuation Test	
Santafe(NC)	2016	USA	Blind Spot Detection	Version Information	
Santafe(NC)	2016	USA	Blind Spot Detection	Read Fault Code	
Santafe(NC)	2016	USA	Blind Spot Detection	Clear Fault Memory	
Santafe(NC)	2016	USA	Blind Spot Detection	Read Data Stream	
Santafe(NC)	2016	USA	Blind Spot Detection	Actuation Test	
Santafe(NC)	2016	USA	Blind Spot Detection	Special Function	BSD Radar Calibration

model	year	area	system	function	subfunction
Santafe(NC)	2016	USA	Cluster Module	Version Information	
Santafe(NC)	2016	USA	Cluster Module	Read Fault Code	
Santafe(NC)	2016	USA	Cluster Module	Clear Fault Memory	
Santafe(NC)	2016	USA	Cluster Module	Read Data Stream	
Santafe(NC)	2016	USA	Cluster Module	Actuation Test	
Santafe(NC)	2016	USA	Cluster Module	Special Function	CLU Variant Coding
Santafe(NC)	2016	USA	Driver Door Module	Version Information	
Santafe(NC)	2016	USA	Driver Door Module	Read Fault Code	
Santafe(NC)	2016	USA	Driver Door Module	Clear Fault Memory	
Santafe(NC)	2016	USA	Driver Door Module	Read Data Stream	
Santafe(NC)	2016	USA	Driver Door Module	Actuation Test	
Santafe(NC)	2016	USA	PODS-F	Version Information	
Santafe(NC)	2016	USA	PODS-F	Read Fault Code	
Santafe(NC)	2016	USA	PODS-F	Clear Fault Memory	
Santafe(NC)	2016	USA	PODS-F	Special Function	PODS Reset
Santafe(NC)	2016	USA	Power Seat Module	Version Information	
Santafe(NC)	2016	USA	Power Seat Module	Read Fault Code	
Santafe(NC)	2016	USA	Power Seat Module	Clear Fault Memory	
Santafe(NC)	2016	USA	Power Seat Module	Read Data Stream	
Santafe(NC)	2016	USA	Power Seat Module	Actuation Test	
Santafe(NC)	2016	USA	Power Seat Module	Special Function	User Option
Santafe(NC)	2016	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Santafe(NC)	2016	USA	Smart Junction Block	Version Information	
Santafe(NC)	2016	USA	Smart Junction Block	Read Fault Code	
Santafe(NC)	2016	USA	Smart Junction Block	Clear Fault Memory	
Santafe(NC)	2016	USA	Smart Junction Block	Read Data Stream	
Santafe(NC)	2016	USA	Smart Junction Block	Actuation Test	
Santafe(NC)	2016	USA	Smart Junction Block	Special Function	User Option
Santafe(NC)	2016	USA	Telematics Unit	Version Information	

model	year	area	system	function	subfunction
Santafe(NC)	2016	USA	Telematics Unit	Read Fault Code	
Santafe(NC)	2016	USA	Telematics Unit	Clear Fault Memory	
Santafe(NC)	2016	USA	Transmitter Code Saving	Read Data Stream	
Santafe(NC)	2016	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Version Information	
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(NC)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe(NC)	2015	USA	TCM(Transmission Control Module)	Version Information	
Santafe(NC)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(NC)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(NC)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(NC)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(NC)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(NC)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(NC)	2015	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(NC)	2015	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(NC)	2015	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(NC)	2015	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(NC)	2015	USA	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Santafe(NC)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Santafe(NC)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(NC)	2015	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(NC)	2015	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(NC)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(NC)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(NC)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(NC)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(NC)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(NC)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(NC)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(NC)	2015	USA	AC(Air Conditioning)	Version Information	
Santafe(NC)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(NC)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe(NC)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Santafe(NC)	2015	USA	AC(Air Conditioning)	Actuation Test	
Santafe(NC)	2015	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(EV Type)
Santafe(NC)	2015	USA	BCM(Body Control Module)	Version Information	
Santafe(NC)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Santafe(NC)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe(NC)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(NC)	2015	USA	BCM(Body Control Module)	Actuation Test	
Santafe(NC)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(NC)	2015	USA	Power Tail Gate	Version Information	
Santafe(NC)	2015	USA	Power Tail Gate	Read Fault Code	
Santafe(NC)	2015	USA	Power Tail Gate	Clear Fault Memory	
Santafe(NC)	2015	USA	Power Tail Gate	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(NC)	2015	USA	EPB(Electrical Parking Brake)	Version Information	
Santafe(NC)	2015	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Santafe(NC)	2015	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Santafe(NC)	2015	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Santafe(NC)	2015	USA	EPB(Electrical Parking Brake)	Actuation Test	
Santafe(NC)	2015	USA	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Santafe(NC)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Santafe(NC)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(NC)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(NC)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(NC)	2015	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(NC)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(NC)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Santafe(NC)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Santafe(NC)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(NC)	2015	USA	4WD Control	Version Information	
Santafe(NC)	2015	USA	4WD Control	Read Fault Code	
Santafe(NC)	2015	USA	4WD Control	Clear Fault Memory	
Santafe(NC)	2015	USA	4WD Control	Read Data Stream	
Santafe(NC)	2015	USA	4WD Control	Actuation Test	
Santafe(NC)	2015	USA	4WD Control	Special Function	Clutch Learning Read
Santafe(NC)	2015	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe(NC)	2015	USA	4WD Control	Special Function	Clutch Learning Write
Santafe(NC)	2015	USA	Auto Headlamp Leveling System	Version Information	
Santafe(NC)	2015	USA	Auto Headlamp Leveling System	Read Fault Code	
Santafe(NC)	2015	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Santafe(NC)	2015	USA	Auto Headlamp Leveling System	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(NC)	2015	USA	Auto Headlamp Leveling System	Actuation Test	
Santafe(NC)	2015	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Santafe(NC)	2015	USA	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Santafe(NC)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(NC)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(NC)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(NC)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(NC)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(NC)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(NC)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(NC)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(NC)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(NC)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(NC)	2015	USA	IMM(Immobilizer)	Read Fault Code	
Santafe(NC)	2015	USA	IMM(Immobilizer)	Clear Fault Memory	
Santafe(NC)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(NC)	2015	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Santafe(NC)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(NC)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(NC)	2015	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe(NC)	2015	USA	Smart Key Unit	Version Information	
Santafe(NC)	2015	USA	Smart Key Unit	Read Fault Code	
Santafe(NC)	2015	USA	Smart Key Unit	Clear Fault Memory	
Santafe(NC)	2015	USA	Smart Key Unit	Read Data Stream	
Santafe(NC)	2015	USA	Smart Key Unit	Actuation Test	
Santafe(NC)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check
Santafe(NC)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(NC)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
Santafe(NC)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe(NC)	2015	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(NC)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(NC)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe(NC)	2015	USA	Assist Door Module	Version Information	
Santafe(NC)	2015	USA	Assist Door Module	Read Fault Code	
Santafe(NC)	2015	USA	Assist Door Module	Clear Fault Memory	
Santafe(NC)	2015	USA	Assist Door Module	Read Data Stream	
Santafe(NC)	2015	USA	Assist Door Module	Actuation Test	
Santafe(NC)	2015	USA	Blind Spot Detection	Version Information	
Santafe(NC)	2015	USA	Blind Spot Detection	Read Fault Code	
Santafe(NC)	2015	USA	Blind Spot Detection	Clear Fault Memory	
Santafe(NC)	2015	USA	Blind Spot Detection	Read Data Stream	
Santafe(NC)	2015	USA	Blind Spot Detection	Actuation Test	
Santafe(NC)	2015	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe(NC)	2015	USA	Cluster Module	Version Information	
Santafe(NC)	2015	USA	Cluster Module	Read Fault Code	
Santafe(NC)	2015	USA	Cluster Module	Clear Fault Memory	
Santafe(NC)	2015	USA	Cluster Module	Read Data Stream	
Santafe(NC)	2015	USA	Cluster Module	Actuation Test	
Santafe(NC)	2015	USA	Cluster Module	Special Function	CLU Variant Coding
Santafe(NC)	2015	USA	Driver Door Module	Version Information	
Santafe(NC)	2015	USA	Driver Door Module	Read Fault Code	
Santafe(NC)	2015	USA	Driver Door Module	Clear Fault Memory	
Santafe(NC)	2015	USA	Driver Door Module	Read Data Stream	
Santafe(NC)	2015	USA	Driver Door Module	Actuation Test	
Santafe(NC)	2015	USA	Power Seat Module	Version Information	
Santafe(NC)	2015	USA	Power Seat Module	Read Fault Code	
Santafe(NC)	2015	USA	Power Seat Module	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(NC)	2015	USA	Power Seat Module	Read Data Stream	
Santafe(NC)	2015	USA	Power Seat Module	Actuation Test	
Santafe(NC)	2015	USA	Power Seat Module	Special Function	User Option
Santafe(NC)	2015	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Santafe(NC)	2015	USA	Smart Junction Block	Version Information	
Santafe(NC)	2015	USA	Smart Junction Block	Read Fault Code	
Santafe(NC)	2015	USA	Smart Junction Block	Clear Fault Memory	
Santafe(NC)	2015	USA	Smart Junction Block	Read Data Stream	
Santafe(NC)	2015	USA	Smart Junction Block	Actuation Test	
Santafe(NC)	2015	USA	Smart Junction Block	Special Function	User Option
Santafe(NC)	2015	USA	Telematics Unit	Version Information	
Santafe(NC)	2015	USA	Telematics Unit	Read Fault Code	
Santafe(NC)	2015	USA	Telematics Unit	Clear Fault Memory	
Santafe(NC)	2015	USA	Transmitter Code Saving	Read Data Stream	
Santafe(NC)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Version Information	
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(NC)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe(NC)	2014	USA	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Santafe(NC)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(NC)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(NC)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(NC)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(NC)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(NC)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(NC)	2014	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(NC)	2014	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(NC)	2014	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(NC)	2014	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(NC)	2014	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(NC)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Santafe(NC)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(NC)	2014	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(NC)	2014	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(NC)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe(NC)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(NC)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(NC)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(NC)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(NC)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(NC)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(NC)	2014	USA	AC(Air Conditioning)	Version Information	
Santafe(NC)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(NC)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe(NC)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Santafe(NC)	2014	USA	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Santafe(NC)	2014	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(NC)	2014	USA	BCM(Body Control Module)	Version Information	
Santafe(NC)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Santafe(NC)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe(NC)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(NC)	2014	USA	BCM(Body Control Module)	Actuation Test	
Santafe(NC)	2014	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(NC)	2014	USA	Power Tail Gate	Version Information	
Santafe(NC)	2014	USA	Power Tail Gate	Read Fault Code	
Santafe(NC)	2014	USA	Power Tail Gate	Clear Fault Memory	
Santafe(NC)	2014	USA	Power Tail Gate	Read Data Stream	
Santafe(NC)	2014	USA	EPB(Electrical Parking Brake)	Version Information	
Santafe(NC)	2014	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Santafe(NC)	2014	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Santafe(NC)	2014	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Santafe(NC)	2014	USA	EPB(Electrical Parking Brake)	Actuation Test	
Santafe(NC)	2014	USA	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Santafe(NC)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Santafe(NC)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(NC)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(NC)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(NC)	2014	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(NC)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(NC)	2014	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Santafe(NC)	2014	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Santafe(NC)	2014	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(NC)	2014	USA	4WD Control	Version Information	

model	year	area	system	function	subfunction
Santafe(NC)	2014	USA	4WD Control	Read Fault Code	
Santafe(NC)	2014	USA	4WD Control	Clear Fault Memory	
Santafe(NC)	2014	USA	4WD Control	Read Data Stream	
Santafe(NC)	2014	USA	4WD Control	Actuation Test	
Santafe(NC)	2014	USA	4WD Control	Special Function	Clutch Learning Read
Santafe(NC)	2014	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe(NC)	2014	USA	4WD Control	Special Function	Clutch Learning Write
Santafe(NC)	2014	USA	Auto Headlamp Leveling System	Version Information	
Santafe(NC)	2014	USA	Auto Headlamp Leveling System	Read Fault Code	
Santafe(NC)	2014	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Santafe(NC)	2014	USA	Auto Headlamp Leveling System	Read Data Stream	
Santafe(NC)	2014	USA	Auto Headlamp Leveling System	Actuation Test	
Santafe(NC)	2014	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Santafe(NC)	2014	USA	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Santafe(NC)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(NC)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(NC)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(NC)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(NC)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(NC)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(NC)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(NC)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(NC)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(NC)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(NC)	2014	USA	IMM(Immobilizer)	Read Fault Code	
Santafe(NC)	2014	USA	IMM(Immobilizer)	Clear Fault Memory	
Santafe(NC)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(NC)	2014	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Santafe(NC)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(NC)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(NC)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe(NC)	2014	USA	Smart Key Unit	Version Information	
Santafe(NC)	2014	USA	Smart Key Unit	Read Fault Code	
Santafe(NC)	2014	USA	Smart Key Unit	Clear Fault Memory	
Santafe(NC)	2014	USA	Smart Key Unit	Read Data Stream	
Santafe(NC)	2014	USA	Smart Key Unit	Actuation Test	
Santafe(NC)	2014	USA	Smart Key Unit	Special Function	Antenna Status Check
Santafe(NC)	2014	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(NC)	2014	USA	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(NC)	2014	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe(NC)	2014	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(NC)	2014	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(NC)	2014	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe(NC)	2014	USA	Assist Door Module	Version Information	
Santafe(NC)	2014	USA	Assist Door Module	Read Fault Code	
Santafe(NC)	2014	USA	Assist Door Module	Clear Fault Memory	
Santafe(NC)	2014	USA	Assist Door Module	Read Data Stream	
Santafe(NC)	2014	USA	Assist Door Module	Actuation Test	
Santafe(NC)	2014	USA	Blind Spot Detection	Version Information	
Santafe(NC)	2014	USA	Blind Spot Detection	Read Fault Code	
Santafe(NC)	2014	USA	Blind Spot Detection	Clear Fault Memory	
Santafe(NC)	2014	USA	Blind Spot Detection	Read Data Stream	
Santafe(NC)	2014	USA	Blind Spot Detection	Actuation Test	
Santafe(NC)	2014	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe(NC)	2014	USA	Cluster Module	Version Information	
Santafe(NC)	2014	USA	Cluster Module	Read Fault Code	
Santafe(NC)	2014	USA	Cluster Module	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(NC)	2014	USA	Cluster Module	Read Data Stream	
Santafe(NC)	2014	USA	Cluster Module	Actuation Test	
Santafe(NC)	2014	USA	Cluster Module	Special Function	CLU Variant Coding
Santafe(NC)	2014	USA	Driver Door Module	Version Information	
Santafe(NC)	2014	USA	Driver Door Module	Read Fault Code	
Santafe(NC)	2014	USA	Driver Door Module	Clear Fault Memory	
Santafe(NC)	2014	USA	Driver Door Module	Read Data Stream	
Santafe(NC)	2014	USA	Driver Door Module	Actuation Test	
Santafe(NC)	2014	USA	Power Seat Module	Version Information	
Santafe(NC)	2014	USA	Power Seat Module	Read Fault Code	
Santafe(NC)	2014	USA	Power Seat Module	Clear Fault Memory	
Santafe(NC)	2014	USA	Power Seat Module	Read Data Stream	
Santafe(NC)	2014	USA	Power Seat Module	Actuation Test	
Santafe(NC)	2014	USA	Power Seat Module	Special Function	User Option
Santafe(NC)	2014	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Santafe(NC)	2014	USA	Smart Junction Block	Version Information	
Santafe(NC)	2014	USA	Smart Junction Block	Read Fault Code	
Santafe(NC)	2014	USA	Smart Junction Block	Clear Fault Memory	
Santafe(NC)	2014	USA	Smart Junction Block	Read Data Stream	
Santafe(NC)	2014	USA	Smart Junction Block	Actuation Test	
Santafe(NC)	2014	USA	Smart Junction Block	Special Function	User Option
Santafe(NC)	2014	USA	Telematics Unit	Version Information	
Santafe(NC)	2014	USA	Telematics Unit	Read Fault Code	
Santafe(NC)	2014	USA	Telematics Unit	Clear Fault Memory	
Santafe(NC)	2014	USA	Transmitter Code Saving	Read Data Stream	
Santafe(NC)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Version Information	
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(NC)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe(NC)	2013	USA	TCM(Transmission Control Module)	Version Information	
Santafe(NC)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(NC)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(NC)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(NC)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(NC)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(NC)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(NC)	2013	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(NC)	2013	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(NC)	2013	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(NC)	2013	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(NC)	2013	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(NC)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Santafe(NC)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe(NC)	2013	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(NC)	2013	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe(NC)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding

model	year	area	system	function	subfunction
Santafe(NC)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(NC)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(NC)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(NC)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(NC)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(NC)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(NC)	2013	USA	AC(Air Conditioning)	Version Information	
Santafe(NC)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(NC)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe(NC)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Santafe(NC)	2013	USA	AC(Air Conditioning)	Actuation Test	
Santafe(NC)	2013	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe(NC)	2013	USA	BCM(Body Control Module)	Version Information	
Santafe(NC)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Santafe(NC)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe(NC)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(NC)	2013	USA	BCM(Body Control Module)	Actuation Test	
Santafe(NC)	2013	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(NC)	2013	USA	Power Tail Gate	Version Information	
Santafe(NC)	2013	USA	Power Tail Gate	Read Fault Code	
Santafe(NC)	2013	USA	Power Tail Gate	Clear Fault Memory	
Santafe(NC)	2013	USA	Power Tail Gate	Read Data Stream	
Santafe(NC)	2013	USA	EPB(Electrical Parking Brake)	Version Information	
Santafe(NC)	2013	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Santafe(NC)	2013	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Santafe(NC)	2013	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Santafe(NC)	2013	USA	EPB(Electrical Parking Brake)	Actuation Test	
Santafe(NC)	2013	USA	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Santafe(NC)	2013	USA	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Santafe(NC)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(NC)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(NC)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(NC)	2013	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Santafe(NC)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe(NC)	2013	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Santafe(NC)	2013	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Santafe(NC)	2013	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe(NC)	2013	USA	4WD Control	Version Information	
Santafe(NC)	2013	USA	4WD Control	Read Fault Code	
Santafe(NC)	2013	USA	4WD Control	Clear Fault Memory	
Santafe(NC)	2013	USA	4WD Control	Read Data Stream	
Santafe(NC)	2013	USA	4WD Control	Actuation Test	
Santafe(NC)	2013	USA	4WD Control	Special Function	Clutch Learning Read
Santafe(NC)	2013	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe(NC)	2013	USA	4WD Control	Special Function	Clutch Learning Write
Santafe(NC)	2013	USA	Auto Headlamp Leveling System	Version Information	
Santafe(NC)	2013	USA	Auto Headlamp Leveling System	Read Fault Code	
Santafe(NC)	2013	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Santafe(NC)	2013	USA	Auto Headlamp Leveling System	Read Data Stream	
Santafe(NC)	2013	USA	Auto Headlamp Leveling System	Actuation Test	
Santafe(NC)	2013	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Santafe(NC)	2013	USA	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Santafe(NC)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(NC)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(NC)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(NC)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(NC)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(NC)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(NC)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(NC)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(NC)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(NC)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe(NC)	2013	USA	IMM(Immobilizer)	Read Fault Code	
Santafe(NC)	2013	USA	IMM(Immobilizer)	Clear Fault Memory	
Santafe(NC)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(NC)	2013	USA	IMM(Immobilizer)	Special Function	Password
Santafe(NC)	2013	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Santafe(NC)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(NC)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(NC)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe(NC)	2013	USA	Smart Key Unit	Version Information	
Santafe(NC)	2013	USA	Smart Key Unit	Read Fault Code	
Santafe(NC)	2013	USA	Smart Key Unit	Clear Fault Memory	
Santafe(NC)	2013	USA	Smart Key Unit	Read Data Stream	
Santafe(NC)	2013	USA	Smart Key Unit	Actuation Test	
Santafe(NC)	2013	USA	Smart Key Unit	Special Function	Antenna Status Check
Santafe(NC)	2013	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe(NC)	2013	USA	Smart Key Unit	Special Function	FOB Key Status Information
Santafe(NC)	2013	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe(NC)	2013	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe(NC)	2013	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe(NC)	2013	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe(NC)	2013	USA	Assist Door Module	Version Information	
Santafe(NC)	2013	USA	Assist Door Module	Read Fault Code	
Santafe(NC)	2013	USA	Assist Door Module	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(NC)	2013	USA	Assist Door Module	Read Data Stream	
Santafe(NC)	2013	USA	Assist Door Module	Actuation Test	
Santafe(NC)	2013	USA	Blind Spot Detection	Version Information	
Santafe(NC)	2013	USA	Blind Spot Detection	Read Fault Code	
Santafe(NC)	2013	USA	Blind Spot Detection	Clear Fault Memory	
Santafe(NC)	2013	USA	Blind Spot Detection	Read Data Stream	
Santafe(NC)	2013	USA	Blind Spot Detection	Actuation Test	
Santafe(NC)	2013	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe(NC)	2013	USA	Cluster Module	Version Information	
Santafe(NC)	2013	USA	Cluster Module	Read Fault Code	
Santafe(NC)	2013	USA	Cluster Module	Clear Fault Memory	
Santafe(NC)	2013	USA	Cluster Module	Read Data Stream	
Santafe(NC)	2013	USA	Cluster Module	Actuation Test	
Santafe(NC)	2013	USA	Cluster Module	Special Function	CLU Variant Coding
Santafe(NC)	2013	USA	Driver Door Module	Version Information	
Santafe(NC)	2013	USA	Driver Door Module	Read Fault Code	
Santafe(NC)	2013	USA	Driver Door Module	Clear Fault Memory	
Santafe(NC)	2013	USA	Driver Door Module	Read Data Stream	
Santafe(NC)	2013	USA	Driver Door Module	Actuation Test	
Santafe(NC)	2013	USA	Power Seat Module	Version Information	
Santafe(NC)	2013	USA	Power Seat Module	Read Fault Code	
Santafe(NC)	2013	USA	Power Seat Module	Clear Fault Memory	
Santafe(NC)	2013	USA	Power Seat Module	Read Data Stream	
Santafe(NC)	2013	USA	Power Seat Module	Actuation Test	
Santafe(NC)	2013	USA	Power Seat Module	Special Function	User Option
Santafe(NC)	2013	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Santafe(NC)	2013	USA	Smart Junction Block	Version Information	
Santafe(NC)	2013	USA	Smart Junction Block	Read Fault Code	
Santafe(NC)	2013	USA	Smart Junction Block	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(NC)	2013	USA	Smart Junction Block	Read Data Stream	
Santafe(NC)	2013	USA	Smart Junction Block	Actuation Test	
Santafe(NC)	2013	USA	Smart Junction Block	Special Function	User Option
Santafe(NC)	2013	USA	Telematics Unit	Version Information	
Santafe(NC)	2013	USA	Telematics Unit	Read Fault Code	
Santafe(NC)	2013	USA	Telematics Unit	Clear Fault Memory	
Santafe(NC)	2013	USA	Transmitter Code Saving	Read Data Stream	
Santafe(NC)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Special Function	VCM Learning
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Santafe(CM)	2012	USA	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2012	USA	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Santafe(CM)	2012	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2012	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2012	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2012	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Santafe(CM)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Confirmation
Santafe(CM)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Calibration
Santafe(CM)	2012	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Santafe(CM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(CM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(CM)	2012	USA	AC(Air Conditioning)	Version Information	
Santafe(CM)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2012	USA	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2012	USA	BCM(Body Control Module)	Version Information	
Santafe(CM)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2012	USA	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2012	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2012	USA	EPS(Electronic Power Steering)	Version Information	
Santafe(CM)	2012	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(CM)	2012	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(CM)	2012	USA	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(CM)	2012	USA	4WD Control	Version Information	
Santafe(CM)	2012	USA	4WD Control	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(CM)	2012	USA	4WD Control	Clear Fault Memory	
Santafe(CM)	2012	USA	4WD Control	Read Data Stream	
Santafe(CM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(CM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(CM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(CM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(CM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(CM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(CM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(CM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(CM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(CM)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2012	USA	IMM(Immobilizer)	Special Function	Password
Santafe(CM)	2012	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Santafe(CM)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2012	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2012	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2012	USA	Smart Key	Version Information	
Santafe(CM)	2012	USA	Smart Key	Read Fault Code	
Santafe(CM)	2012	USA	Smart Key	Clear Fault Memory	
Santafe(CM)	2012	USA	Smart Key	Read Data Stream	
Santafe(CM)	2012	USA	Smart Key	Actuation Test	
Santafe(CM)	2012	USA	Smart Key	Special Function	Smart Key Code Saving
Santafe(CM)	2012	USA	Smart Key	Special Function	Antenna Status Check
Santafe(CM)	2012	USA	Smart Key	Special Function	FOB Key Status Information
Santafe(CM)	2012	USA	Smart Key	Special Function	Neutralization Mode
Santafe(CM)	2012	USA	Smart Key	Special Function	PDM Status Information
Santafe(CM)	2012	USA	Smart Key	Special Function	Serial Communication Line Check
Santafe(CM)	2012	USA	Smart Key	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Santafe(CM)	2012	USA	Smart Key	Special Function	TP Status Information
Santafe(CM)	2012	USA	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2012	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe(CM)	2012	USA	ECM(Engine Control Module)	Special Function	PCSV Test(Optional)
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Special Function	VCM Learning
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Santafe(CM)	2011	USA	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2011	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2011	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2011	USA	ABS(Anti-lock Braking System)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(CM)	2011	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2011	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2011	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Santafe(CM)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Santafe(CM)	2011	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Santafe(CM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(CM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(CM)	2011	USA	AC(Air Conditioning)	Version Information	
Santafe(CM)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2011	USA	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2011	USA	BCM(Body Control Module)	Version Information	
Santafe(CM)	2011	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2011	USA	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2011	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2011	USA	EPS(Electronic Power Steering)	Version Information	
Santafe(CM)	2011	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(CM)	2011	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(CM)	2011	USA	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(CM)	2011	USA	4WD Control	Version Information	
Santafe(CM)	2011	USA	4WD Control	Read Fault Code	
Santafe(CM)	2011	USA	4WD Control	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(CM)	2011	USA	4WD Control	Read Data Stream	
Santafe(CM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(CM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(CM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(CM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(CM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(CM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(CM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(CM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(CM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(CM)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2011	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(CM)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2011	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2011	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2011	USA	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2011	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe(CM)	2011	USA	ECM(Engine Control Module)	Special Function	PCSV Test(Optional)
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Special Function	VCM Learning
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Santafe(CM)	2010	USA	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2010	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2010	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2010	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2010	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2010	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2010	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2010	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2010	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2010	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2010	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2010	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Steering Angle Sensor Calibration
Santafe(CM)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Santafe(CM)	2010	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Santafe(CM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe(CM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(CM)	2010	USA	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Santafe(CM)	2010	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2010	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2010	USA	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2010	USA	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2010	USA	BCM(Body Control Module)	Version Information	
Santafe(CM)	2010	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2010	USA	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2010	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2010	USA	EPS(Electronic Power Steering)	Version Information	
Santafe(CM)	2010	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(CM)	2010	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(CM)	2010	USA	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(CM)	2010	USA	4WD Control	Version Information	
Santafe(CM)	2010	USA	4WD Control	Read Fault Code	
Santafe(CM)	2010	USA	4WD Control	Clear Fault Memory	
Santafe(CM)	2010	USA	4WD Control	Read Data Stream	
Santafe(CM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(CM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(CM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(CM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(CM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(CM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(CM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(CM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(CM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(CM)	2010	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2010	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(CM)	2010	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2010	USA	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Santafe(CM)	2010	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2010	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2010	USA	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2010	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe(CM)	2010	USA	ECM(Engine Control Module)	Special Function	PCSV Test(Optional)
Santafe(CM)	2009	USA	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2009	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2009	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2009	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2009	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2009	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2009	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(CM)	2009	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2009	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2009	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(CM)	2009	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(CM)	2009	USA	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2009	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2009	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2009	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2009	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2009	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2009	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2009	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2009	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2009	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(CM)	2009	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2009	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Santafe(CM)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Santafe(CM)	2009	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Santafe(CM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(CM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(CM)	2009	USA	AC(Air Conditioning)	Version Information	
Santafe(CM)	2009	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2009	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2009	USA	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2009	USA	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2009	USA	BCM(Body Control Module)	Version Information	
Santafe(CM)	2009	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2009	USA	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2009	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2009	USA	EPS(Electronic Power Steering)	Version Information	
Santafe(CM)	2009	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe(CM)	2009	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe(CM)	2009	USA	EPS(Electronic Power Steering)	Read Data Stream	
Santafe(CM)	2009	USA	4WD Control	Version Information	
Santafe(CM)	2009	USA	4WD Control	Read Fault Code	
Santafe(CM)	2009	USA	4WD Control	Clear Fault Memory	
Santafe(CM)	2009	USA	4WD Control	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(CM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(CM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(CM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(CM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(CM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(CM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(CM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(CM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(CM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(CM)	2009	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2009	USA	IMM(Immobilizer)	Special Function	Password
Santafe(CM)	2009	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Santafe(CM)	2009	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2009	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2009	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2009	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2009	USA	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2009	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2008	USA	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2008	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2008	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(CM)	2008	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2008	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2008	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2008	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(CM)	2008	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2008	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2008	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(CM)	2008	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(CM)	2008	USA	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Santafe(CM)	2008	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2008	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2008	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2008	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2008	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2008	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2008	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2008	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2008	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2008	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2008	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Santafe(CM)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor
Santafe(CM)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Calibration
Santafe(CM)	2008	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Santafe(CM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Santafe(CM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(CM)	2008	USA	AC(Air Conditioning)	Version Information	
Santafe(CM)	2008	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2008	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2008	USA	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2008	USA	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2008	USA	BCM(Body Control Module)	Version Information	
Santafe(CM)	2008	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2008	USA	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Santafe(CM)	2008	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2008	USA	4WD Control	Version Information	
Santafe(CM)	2008	USA	4WD Control	Read Fault Code	
Santafe(CM)	2008	USA	4WD Control	Clear Fault Memory	
Santafe(CM)	2008	USA	4WD Control	Read Data Stream	
Santafe(CM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(CM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(CM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(CM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(CM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(CM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(CM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(CM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(CM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(CM)	2008	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2008	USA	IMM(Immobilizer)	Special Function	Password
Santafe(CM)	2008	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Santafe(CM)	2008	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2008	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2008	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2008	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Santafe(CM)	2008	USA	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2008	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2008	USA	Electronic Control Suspension	Version Information	
Santafe(CM)	2008	USA	Electronic Control Suspension	Read Fault Code	
Santafe(CM)	2008	USA	Electronic Control Suspension	Clear Fault Memory	
Santafe(CM)	2008	USA	Electronic Control Suspension	Read Data Stream	
Santafe(CM)	2007	USA	ECM(Engine Control Module)	Version Information	
Santafe(CM)	2007	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(CM)	2007	USA	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(CM)	2007	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(CM)	2007	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(CM)	2007	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(CM)	2007	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(CM)	2007	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(CM)	2007	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Santafe(CM)	2007	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(CM)	2007	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(CM)	2007	USA	TCM(Transmission Control Module)	Version Information	
Santafe(CM)	2007	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(CM)	2007	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(CM)	2007	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(CM)	2007	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe(CM)	2007	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(CM)	2007	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(CM)	2007	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(CM)	2007	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(CM)	2007	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(CM)	2007	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(CM)	2007	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(CM)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Steering Angle Sensor Calibration
Santafe(CM)	2007	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(CM)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Santafe(CM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(CM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(CM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(CM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(CM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset

model	year	area	system	function	subfunction
Santafe(CM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(CM)	2007	USA	AC(Air Conditioning)	Version Information	
Santafe(CM)	2007	USA	AC(Air Conditioning)	Read Fault Code	
Santafe(CM)	2007	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe(CM)	2007	USA	AC(Air Conditioning)	Read Data Stream	
Santafe(CM)	2007	USA	AC(Air Conditioning)	Actuation Test	
Santafe(CM)	2007	USA	BCM(Body Control Module)	Version Information	
Santafe(CM)	2007	USA	BCM(Body Control Module)	Read Data Stream	
Santafe(CM)	2007	USA	BCM(Body Control Module)	Actuation Test	
Santafe(CM)	2007	USA	BCM(Body Control Module)	Special Function	User Option
Santafe(CM)	2007	USA	4WD Control	Version Information	
Santafe(CM)	2007	USA	4WD Control	Read Fault Code	
Santafe(CM)	2007	USA	4WD Control	Clear Fault Memory	
Santafe(CM)	2007	USA	4WD Control	Read Data Stream	
Santafe(CM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe(CM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe(CM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe(CM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe(CM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe(CM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe(CM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe(CM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe(CM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe(CM)	2007	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(CM)	2007	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe(CM)	2007	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe(CM)	2007	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe(CM)	2007	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe(CM)	2007	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Santafe(CM)	2007	USA	Transmitter Code Saving	Read Data Stream	
Santafe(CM)	2007	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(CM)	2007	USA	Electronic Control Suspension	Version Information	
Santafe(CM)	2007	USA	Electronic Control Suspension	Read Fault Code	
Santafe(CM)	2007	USA	Electronic Control Suspension	Clear Fault Memory	
Santafe(CM)	2007	USA	Electronic Control Suspension	Read Data Stream	
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2006	USA	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2006	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(SM)	2006	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2006	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(SM)	2006	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2006	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(SM)	2006	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(SM)	2006	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2006	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2006	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2006	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2006	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(SM)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe(SM)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(SM)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(SM)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(SM)	2006	USA	4WD Control	Read Fault Code	
Santafe(SM)	2006	USA	4WD Control	Clear Fault Memory	
Santafe(SM)	2006	USA	IMM(Immobilizer)	Read Fault Code	
Santafe(SM)	2006	USA	IMM(Immobilizer)	Clear Fault Memory	
Santafe(SM)	2006	USA	IMM(Immobilizer)	Read Data Stream	
Santafe(SM)	2006	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Santafe(SM)	2006	USA	IMM(Immobilizer)	Special Function	Password Record/Change
Santafe(SM)	2006	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Santafe(SM)	2006	USA	IMM(Immobilizer)	Special Function	Master Key Delete
Santafe(SM)	2006	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
Santafe(SM)	2006	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-Trip Test
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2006	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2005	USA	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2005	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(SM)	2005	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2005	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(SM)	2005	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2005	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe(SM)	2005	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe(SM)	2005	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2005	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2005	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2005	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2005	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(SM)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(SM)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(SM)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe(SM)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Santafe(SM)	2005	USA	4WD Control	Read Fault Code	
Santafe(SM)	2005	USA	4WD Control	Clear Fault Memory	
Santafe(SM)	2005	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test

model	year	area	system	function	subfunction
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2005	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2004	USA	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2004	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(SM)	2004	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2004	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(SM)	2004	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2004	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2004	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2004	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2004	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2004	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(SM)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(SM)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(SM)	2004	USA	4WD Control	Read Fault Code	
Santafe(SM)	2004	USA	4WD Control	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe(SM)	2004	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2004	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2003	USA	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2003	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(SM)	2003	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2003	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(SM)	2003	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2003	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2003	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2003	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2003	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2003	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Santafe(SM)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(SM)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(SM)	2003	USA	4WD Control	Read Fault Code	
Santafe(SM)	2003	USA	4WD Control	Clear Fault Memory	
Santafe(SM)	2003	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2003	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test

model	year	area	system	function	subfunction
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2002	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2002	USA	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2002	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(SM)	2002	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2002	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(SM)	2002	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2002	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2002	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2002	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2002	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2002	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(SM)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(SM)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(SM)	2002	USA	4WD Control	Read Fault Code	
Santafe(SM)	2002	USA	4WD Control	Clear Fault Memory	
Santafe(SM)	2002	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Version Information	
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Actuation Test	
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Santafe(SM)	2001	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Santafe(SM)	2001	USA	TCM(Transmission Control Module)	Version Information	
Santafe(SM)	2001	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe(SM)	2001	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe(SM)	2001	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe(SM)	2001	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe(SM)	2001	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe(SM)	2001	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe(SM)	2001	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe(SM)	2001	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe(SM)	2001	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe(SM)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe(SM)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe(SM)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe(SM)	2001	USA	4WD Control	Read Fault Code	
Santafe(SM)	2001	USA	4WD Control	Clear Fault Memory	
Santafe(SM)	2001	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe Sport(DMA)	2018	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
Santafe Sport(DMA)	2018	USA	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe Sport(DMA)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2018	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe Sport(DMA)	2018	USA	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe Sport(DMA)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC)Only
Santafe Sport(DMA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe Sport(DMA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Santafe Sport(DMA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe Sport(DMA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe Sport(DMA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe Sport(DMA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe Sport(DMA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Santafe Sport(DMA)	2018	USA	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2018	USA	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2018	USA	AC(Air Conditioning)	Actuation Test	
Santafe Sport(DMA)	2018	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe Sport(DMA)	2018	USA	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2018	USA	BCM(Body Control Module)	Read Fault Code	
Santafe Sport(DMA)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	BCM(Body Control Module)	Read Data Stream	
Santafe Sport(DMA)	2018	USA	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2018	USA	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2018	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2018	USA	Power Tail Gate	Version Information	
Santafe Sport(DMA)	2018	USA	Power Tail Gate	Read Fault Code	
Santafe Sport(DMA)	2018	USA	Power Tail Gate	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	Power Tail Gate	Read Data Stream	
Santafe Sport(DMA)	2018	USA	Power Tail Gate	Special Function	Power Tailgate mode Configuration

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2018	USA	Tire Pressure Monitoring	Version Information	
Santafe Sport(DMA)	2018	USA	Tire Pressure Monitoring	Read Fault Code	
Santafe Sport(DMA)	2018	USA	Tire Pressure Monitoring	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	Tire Pressure Monitoring	Read Data Stream	
Santafe Sport(DMA)	2018	USA	Tire Pressure Monitoring	Actuation Test	
Santafe Sport(DMA)	2018	USA	Tire Pressure Monitoring	Special Function	Wheel Sensor ID Writing
Santafe Sport(DMA)	2018	USA	Tire Pressure Monitoring	Special Function	Write VIN
Santafe Sport(DMA)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Reading
Santafe Sport(DMA)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Writing
Santafe Sport(DMA)	2018	USA	AHLS(Auto Headlamp Leveling System)	Version Information	
Santafe Sport(DMA)	2018	USA	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Santafe Sport(DMA)	2018	USA	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Santafe Sport(DMA)	2018	USA	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Santafe Sport(DMA)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Santafe Sport(DMA)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Santafe Sport(DMA)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Santafe Sport(DMA)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Santafe Sport(DMA)	2018	USA	Motor driven Power Steering	Version Information	
Santafe Sport(DMA)	2018	USA	Motor driven Power Steering	Read Fault Code	
Santafe Sport(DMA)	2018	USA	Motor driven Power Steering	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	Motor driven Power Steering	Read Data Stream	
Santafe Sport(DMA)	2018	USA	Motor driven Power Steering	Special Function	ASP Calibration
Santafe Sport(DMA)	2018	USA	Motor driven Power Steering	Special Function	EPS Type Recognition
Santafe Sport(DMA)	2018	USA	Motor driven Power Steering	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2018	USA	4WD Control	Version Information	
Santafe Sport(DMA)	2018	USA	4WD Control	Read Fault Code	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2018	USA	4WD Control	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	4WD Control	Read Data Stream	
Santafe Sport(DMA)	2018	USA	4WD Control	Actuation Test	
Santafe Sport(DMA)	2018	USA	4WD Control	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2018	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2018	USA	4WD Control	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Version Information	
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2018	USA	Smart Cruise Control	Version Information	
Santafe Sport(DMA)	2018	USA	Smart Cruise Control	Read Fault Code	
Santafe Sport(DMA)	2018	USA	Smart Cruise Control	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	Smart Cruise Control	Read Data Stream	
Santafe Sport(DMA)	2018	USA	Smart Cruise Control	Special Function	Variant Coding
Santafe Sport(DMA)	2018	USA	Smart Cruise Control	Special Function	Radar Sensor Alignment(SCC/AEB)
Santafe Sport(DMA)	2018	USA	Blind Spot Detection	Version Information	
Santafe Sport(DMA)	2018	USA	Blind Spot Detection	Read Fault Code	
Santafe Sport(DMA)	2018	USA	Blind Spot Detection	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	Blind Spot Detection	Read Data Stream	
Santafe Sport(DMA)	2018	USA	Blind Spot Detection	Actuation Test	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2018	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe Sport(DMA)	2018	USA	Lane Departure Warning System	Version Information	
Santafe Sport(DMA)	2018	USA	Lane Departure Warning System	Read Fault Code	
Santafe Sport(DMA)	2018	USA	Lane Departure Warning System	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	Lane Departure Warning System	Read Data Stream	
Santafe Sport(DMA)	2018	USA	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Santafe Sport(DMA)	2018	USA	Lane Departure Warning System	Special Function	SPC Calibration
Santafe Sport(DMA)	2018	USA	Lane Departure Warning System	Special Function	SPTAC Calibration
Santafe Sport(DMA)	2018	USA	Multi-View Camera System	Version Information	
Santafe Sport(DMA)	2018	USA	Multi-View Camera System	Read Fault Code	
Santafe Sport(DMA)	2018	USA	Multi-View Camera System	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	Multi-View Camera System	Read Data Stream	
Santafe Sport(DMA)	2018	USA	Multi-View Camera System	Actuation Test	
Santafe Sport(DMA)	2018	USA	Amplifier	Version Information	
Santafe Sport(DMA)	2018	USA	Amplifier	Special Function	AMP Operation Test
Santafe Sport(DMA)	2018	USA	Telematics Unit	Version Information	
Santafe Sport(DMA)	2018	USA	Telematics Unit	Read Fault Code	
Santafe Sport(DMA)	2018	USA	Telematics Unit	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	IMM(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
Santafe Sport(DMA)	2018	USA	IMM(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2018	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe Sport(DMA)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe Sport(DMA)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe Sport(DMA)	2018	USA	Transmitter Code Saving	Read Data Stream	
Santafe Sport(DMA)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe Sport(DMA)	2017	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
Santafe Sport(DMA)	2017	USA	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe Sport(DMA)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe Sport(DMA)	2017	USA	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Santafe Sport(DMA)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	EPB Variant Coding
Santafe Sport(DMA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Santafe Sport(DMA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe Sport(DMA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	ESP Calibration(CAN-ESP Only)
Santafe Sport(DMA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Santafe Sport(DMA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe Sport(DMA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe Sport(DMA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Santafe Sport(DMA)	2017	USA	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	AC(Air Conditioning)	Actuation Test	
Santafe Sport(DMA)	2017	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(EV Type)
Santafe Sport(DMA)	2017	USA	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Santafe Sport(DMA)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2017	USA	Motor Driven Power Steering	Version Information	
Santafe Sport(DMA)	2017	USA	Motor Driven Power Steering	Read Fault Code	
Santafe Sport(DMA)	2017	USA	Motor Driven Power Steering	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	Motor Driven Power Steering	Read Data Stream	
Santafe Sport(DMA)	2017	USA	Motor Driven Power Steering	Special Function	ASP Calibration
Santafe Sport(DMA)	2017	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2017	USA	Motor Driven Power Steering	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Version Information	
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe Sport(DMA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe Sport(DMA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe Sport(DMA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe Sport(DMA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe Sport(DMA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe Sport(DMA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe Sport(DMA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe Sport(DMA)	2017	USA	Head Lamp	Version Information	
Santafe Sport(DMA)	2017	USA	Head Lamp	Read Fault Code	
Santafe Sport(DMA)	2017	USA	Head Lamp	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	Head Lamp	Read Data Stream	
Santafe Sport(DMA)	2017	USA	Head Lamp	Actuation Test	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2017	USA	Head Lamp	Special Function	Headlamp Leveling
Santafe Sport(DMA)	2017	USA	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Santafe Sport(DMA)	2017	USA	Head Lamp	Special Function	Calibration
Santafe Sport(DMA)	2017	USA	Head Lamp	Special Function	Parameter Download
Santafe Sport(DMA)	2017	USA	IMMO(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2017	USA	IMMO(Immobilizer)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	IMMO(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Santafe Sport(DMA)	2017	USA	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2017	USA	IMMO(Immobilizer)	Special Function	Limp Home Mode
Santafe Sport(DMA)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching
Santafe Sport(DMA)	2017	USA	CODE(Transmitter Code Saving)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	CODE(Transmitter Code Saving)	Special Function	Code Saving
Santafe Sport(DMA)	2017	USA	4WD Control	Version Information	
Santafe Sport(DMA)	2017	USA	4WD Control	Read Fault Code	
Santafe Sport(DMA)	2017	USA	4WD Control	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	4WD Control	Read Data Stream	
Santafe Sport(DMA)	2017	USA	4WD Control	Actuation Test	
Santafe Sport(DMA)	2017	USA	4WD Control	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2017	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2017	USA	4WD Control	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2017	USA	PTG(Power Tail Gate)	Version Information	
Santafe Sport(DMA)	2017	USA	PTG(Power Tail Gate)	Read Fault Code	
Santafe Sport(DMA)	2017	USA	PTG(Power Tail Gate)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	PTG(Power Tail Gate)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	PTG(Power Tail Gate)	Special Function	Power Tailgate mode Configuration
Santafe Sport(DMA)	2017	USA	LDWS(Lane Departure Warning System)	Version Information	
Santafe Sport(DMA)	2017	USA	LDWS(Lane Departure Warning System)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2017	USA	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	LDWS(Lane Departure Warning System)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Santafe Sport(DMA)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Santafe Sport(DMA)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Santafe Sport(DMA)	2017	USA	BSD(Blind Spot Detection)	Version Information	
Santafe Sport(DMA)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
Santafe Sport(DMA)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
Santafe Sport(DMA)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Santafe Sport(DMA)	2017	USA	SCC(Smart Cruise Control)	Version Information	
Santafe Sport(DMA)	2017	USA	SCC(Smart Cruise Control)	Read Fault Code	
Santafe Sport(DMA)	2017	USA	SCC(Smart Cruise Control)	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	SCC(Smart Cruise Control)	Read Data Stream	
Santafe Sport(DMA)	2017	USA	SCC(Smart Cruise Control)	Special Function	Variant Coding
Santafe Sport(DMA)	2017	USA	SCC(Smart Cruise Control)	Special Function	Radar Sensor Alignment(SCC/AFD)
Santafe Sport(DMA)	2017	USA	Amplifier	Version Information	
Santafe Sport(DMA)	2017	USA	Amplifier	Special Function	AMP Operation Test
Santafe Sport(DMA)	2017	USA	Multi-View Camera System	Version Information	
Santafe Sport(DMA)	2017	USA	Multi-View Camera System	Read Fault Code	
Santafe Sport(DMA)	2017	USA	Multi-View Camera System	Clear Fault Memory	
Santafe Sport(DMA)	2017	USA	Multi-View Camera System	Read Data Stream	
Santafe Sport(DMA)	2017	USA	Multi-View Camera System	Actuation Test	
Santafe Sport(DMA)	2017	USA	Telematics Unit	Version Information	
Santafe Sport(DMA)	2017	USA	Telematics Unit	Read Fault Code	
Santafe Sport(DMA)	2017	USA	Telematics Unit	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe Sport(DMA)	2016	USA	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe Sport(DMA)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe Sport(DMA)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe Sport(DMA)	2016	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2016	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2016	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2016	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Santafe Sport(DMA)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Steer/ESP/ESC Sensor Calibration
Santafe Sport(DMA)	2016	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe Sport(DMA)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe Sport(DMA)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe Sport(DMA)	2016	USA	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2016	USA	AC(Air Conditioning)	Actuation Test	
Santafe Sport(DMA)	2016	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Santafe Sport(DMA)	2016	USA	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Santafe Sport(DMA)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Santafe Sport(DMA)	2016	USA	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2016	USA	Power Tail Gate	Version Information	
Santafe Sport(DMA)	2016	USA	Power Tail Gate	Read Fault Code	
Santafe Sport(DMA)	2016	USA	Power Tail Gate	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	Power Tail Gate	Read Data Stream	
Santafe Sport(DMA)	2016	USA	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Santafe Sport(DMA)	2016	USA	EPB(Electrical Parking Brake)	Version Information	
Santafe Sport(DMA)	2016	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Santafe Sport(DMA)	2016	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2016	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Santafe Sport(DMA)	2016	USA	EPB(Electrical Parking Brake)	Actuation Test	
Santafe Sport(DMA)	2016	USA	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Santafe Sport(DMA)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Santafe Sport(DMA)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe Sport(DMA)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Santafe Sport(DMA)	2016	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe Sport(DMA)	2016	USA	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe Sport(DMA)	2016	USA	4WD Control	Version Information	
Santafe Sport(DMA)	2016	USA	4WD Control	Read Fault Code	
Santafe Sport(DMA)	2016	USA	4WD Control	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	4WD Control	Read Data Stream	
Santafe Sport(DMA)	2016	USA	4WD Control	Actuation Test	
Santafe Sport(DMA)	2016	USA	4WD Control	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2016	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2016	USA	4WD Control	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2016	USA	AFS(Adaptive Front Lighting System)	Version Information	
Santafe Sport(DMA)	2016	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Santafe Sport(DMA)	2016	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Santafe Sport(DMA)	2016	USA	AFS(Adaptive Front Lighting System)	Actuation Test	
Santafe Sport(DMA)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Santafe Sport(DMA)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Parameter Setting&Zero Position Initial
Santafe Sport(DMA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe Sport(DMA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe Sport(DMA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe Sport(DMA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe Sport(DMA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe Sport(DMA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe Sport(DMA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe Sport(DMA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe Sport(DMA)	2016	USA	IMM(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2016	USA	IMM(Immobilizer)	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	IMM(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2016	USA	IMM(Immobilizer)	Special Function	Password
Santafe Sport(DMA)	2016	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Santafe Sport(DMA)	2016	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2016	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe Sport(DMA)	2016	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Version Information	
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2016	USA	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2016	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe Sport(DMA)	2016	USA	Assist Door Module	Version Information	
Santafe Sport(DMA)	2016	USA	Assist Door Module	Read Fault Code	
Santafe Sport(DMA)	2016	USA	Assist Door Module	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	Assist Door Module	Read Data Stream	
Santafe Sport(DMA)	2016	USA	Assist Door Module	Actuation Test	
Santafe Sport(DMA)	2016	USA	Blind Spot Detection	Version Information	
Santafe Sport(DMA)	2016	USA	Blind Spot Detection	Read Fault Code	
Santafe Sport(DMA)	2016	USA	Blind Spot Detection	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	Blind Spot Detection	Read Data Stream	
Santafe Sport(DMA)	2016	USA	Blind Spot Detection	Actuation Test	
Santafe Sport(DMA)	2016	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe Sport(DMA)	2016	USA	Cluster Module	Version Information	
Santafe Sport(DMA)	2016	USA	Cluster Module	Read Fault Code	
Santafe Sport(DMA)	2016	USA	Cluster Module	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	Cluster Module	Read Data Stream	
Santafe Sport(DMA)	2016	USA	Cluster Module	Actuation Test	
Santafe Sport(DMA)	2016	USA	Driver Door Module	Version Information	
Santafe Sport(DMA)	2016	USA	Driver Door Module	Read Fault Code	
Santafe Sport(DMA)	2016	USA	Driver Door Module	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	Driver Door Module	Read Data Stream	
Santafe Sport(DMA)	2016	USA	Driver Door Module	Actuation Test	
Santafe Sport(DMA)	2016	USA	PODS-F	Version Information	
Santafe Sport(DMA)	2016	USA	PODS-F	Read Fault Code	
Santafe Sport(DMA)	2016	USA	PODS-F	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	PODS-F	Special Function	PODS Reset
Santafe Sport(DMA)	2016	USA	Power Seat Module	Version Information	
Santafe Sport(DMA)	2016	USA	Power Seat Module	Read Fault Code	
Santafe Sport(DMA)	2016	USA	Power Seat Module	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2016	USA	Power Seat Module	Read Data Stream	
Santafe Sport(DMA)	2016	USA	Power Seat Module	Actuation Test	
Santafe Sport(DMA)	2016	USA	Power Seat Module	Special Function	User Option
Santafe Sport(DMA)	2016	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2016	USA	Smart Junction Block	Version Information	
Santafe Sport(DMA)	2016	USA	Smart Junction Block	Read Fault Code	
Santafe Sport(DMA)	2016	USA	Smart Junction Block	Clear Fault Memory	
Santafe Sport(DMA)	2016	USA	Smart Junction Block	Read Data Stream	
Santafe Sport(DMA)	2016	USA	Smart Junction Block	Actuation Test	
Santafe Sport(DMA)	2016	USA	Smart Junction Block	Special Function	User Option
Santafe Sport(DMA)	2016	USA	Telematics Unit	Version Information	
Santafe Sport(DMA)	2016	USA	Telematics Unit	Read Fault Code	
Santafe Sport(DMA)	2016	USA	Telematics Unit	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2015	USA	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe Sport(DMA)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe Sport(DMA)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe Sport(DMA)	2015	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2015	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2015	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2015	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe Sport(DMA)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Santafe Sport(DMA)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Santafe Sport(DMA)	2015	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe Sport(DMA)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe Sport(DMA)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe Sport(DMA)	2015	USA	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2015	USA	AC(Air Conditioning)	Actuation Test	
Santafe Sport(DMA)	2015	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2015	USA	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Santafe Sport(DMA)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Santafe Sport(DMA)	2015	USA	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2015	USA	Power Tail Gate	Version Information	
Santafe Sport(DMA)	2015	USA	Power Tail Gate	Read Fault Code	
Santafe Sport(DMA)	2015	USA	Power Tail Gate	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	Power Tail Gate	Read Data Stream	
Santafe Sport(DMA)	2015	USA	EPB(Electrical Parking Brake)	Version Information	
Santafe Sport(DMA)	2015	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Santafe Sport(DMA)	2015	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Santafe Sport(DMA)	2015	USA	EPB(Electrical Parking Brake)	Actuation Test	
Santafe Sport(DMA)	2015	USA	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Santafe Sport(DMA)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Santafe Sport(DMA)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe Sport(DMA)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Santafe Sport(DMA)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe Sport(DMA)	2015	USA	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe Sport(DMA)	2015	USA	4WD Control	Version Information	
Santafe Sport(DMA)	2015	USA	4WD Control	Read Fault Code	
Santafe Sport(DMA)	2015	USA	4WD Control	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	4WD Control	Read Data Stream	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2015	USA	4WD Control	Actuation Test	
Santafe Sport(DMA)	2015	USA	4WD Control	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2015	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2015	USA	4WD Control	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2015	USA	Auto Headlamp Leveling System	Version Information	
Santafe Sport(DMA)	2015	USA	Auto Headlamp Leveling System	Read Fault Code	
Santafe Sport(DMA)	2015	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	Auto Headlamp Leveling System	Read Data Stream	
Santafe Sport(DMA)	2015	USA	Auto Headlamp Leveling System	Actuation Test	
Santafe Sport(DMA)	2015	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Santafe Sport(DMA)	2015	USA	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Santafe Sport(DMA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe Sport(DMA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe Sport(DMA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe Sport(DMA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe Sport(DMA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe Sport(DMA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe Sport(DMA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe Sport(DMA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe Sport(DMA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe Sport(DMA)	2015	USA	IMM(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2015	USA	IMM(Immobilizer)	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2015	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe Sport(DMA)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe Sport(DMA)	2015	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Version Information	
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2015	USA	Transmitter Code Saving	Read Data Stream	
Santafe Sport(DMA)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe Sport(DMA)	2015	USA	Assist Door Module	Version Information	
Santafe Sport(DMA)	2015	USA	Assist Door Module	Read Fault Code	
Santafe Sport(DMA)	2015	USA	Assist Door Module	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	Assist Door Module	Read Data Stream	
Santafe Sport(DMA)	2015	USA	Assist Door Module	Actuation Test	
Santafe Sport(DMA)	2015	USA	Blind Spot Detection	Version Information	
Santafe Sport(DMA)	2015	USA	Blind Spot Detection	Read Fault Code	
Santafe Sport(DMA)	2015	USA	Blind Spot Detection	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	Blind Spot Detection	Read Data Stream	
Santafe Sport(DMA)	2015	USA	Blind Spot Detection	Actuation Test	
Santafe Sport(DMA)	2015	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe Sport(DMA)	2015	USA	Cluster Module	Version Information	
Santafe Sport(DMA)	2015	USA	Cluster Module	Read Fault Code	
Santafe Sport(DMA)	2015	USA	Cluster Module	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	Cluster Module	Read Data Stream	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2015	USA	Cluster Module	Actuation Test	
Santafe Sport(DMA)	2015	USA	Driver Door Module	Version Information	
Santafe Sport(DMA)	2015	USA	Driver Door Module	Read Fault Code	
Santafe Sport(DMA)	2015	USA	Driver Door Module	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	Driver Door Module	Read Data Stream	
Santafe Sport(DMA)	2015	USA	Driver Door Module	Actuation Test	
Santafe Sport(DMA)	2015	USA	PODS-F	Version Information	
Santafe Sport(DMA)	2015	USA	PODS-F	Read Fault Code	
Santafe Sport(DMA)	2015	USA	PODS-F	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	PODS-F	Special Function	PODS Reset
Santafe Sport(DMA)	2015	USA	Power Seat Module	Version Information	
Santafe Sport(DMA)	2015	USA	Power Seat Module	Read Fault Code	
Santafe Sport(DMA)	2015	USA	Power Seat Module	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	Power Seat Module	Read Data Stream	
Santafe Sport(DMA)	2015	USA	Power Seat Module	Actuation Test	
Santafe Sport(DMA)	2015	USA	Power Seat Module	Special Function	User Option
Santafe Sport(DMA)	2015	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2015	USA	Smart Junction Block	Version Information	
Santafe Sport(DMA)	2015	USA	Smart Junction Block	Read Fault Code	
Santafe Sport(DMA)	2015	USA	Smart Junction Block	Clear Fault Memory	
Santafe Sport(DMA)	2015	USA	Smart Junction Block	Read Data Stream	
Santafe Sport(DMA)	2015	USA	Smart Junction Block	Actuation Test	
Santafe Sport(DMA)	2015	USA	Smart Junction Block	Special Function	User Option
Santafe Sport(DMA)	2015	USA	Telematics Unit	Version Information	
Santafe Sport(DMA)	2015	USA	Telematics Unit	Read Fault Code	
Santafe Sport(DMA)	2015	USA	Telematics Unit	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe Sport(DMA)	2014	USA	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe Sport(DMA)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe Sport(DMA)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Santafe Sport(DMA)	2014	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2014	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2014	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2014	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe Sport(DMA)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Santafe Sport(DMA)	2014	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe Sport(DMA)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe Sport(DMA)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe Sport(DMA)	2014	USA	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2014	USA	AC(Air Conditioning)	Actuation Test	
Santafe Sport(DMA)	2014	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe Sport(DMA)	2014	USA	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Santafe Sport(DMA)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Santafe Sport(DMA)	2014	USA	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2014	USA	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2014	USA	EPB(Electrical Parking Brake)	Version Information	
Santafe Sport(DMA)	2014	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Santafe Sport(DMA)	2014	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Santafe Sport(DMA)	2014	USA	EPB(Electrical Parking Brake)	Actuation Test	
Santafe Sport(DMA)	2014	USA	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Santafe Sport(DMA)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Santafe Sport(DMA)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe Sport(DMA)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2014	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe Sport(DMA)	2014	USA	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe Sport(DMA)	2014	USA	4WD Control	Version Information	
Santafe Sport(DMA)	2014	USA	4WD Control	Read Fault Code	
Santafe Sport(DMA)	2014	USA	4WD Control	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	4WD Control	Read Data Stream	
Santafe Sport(DMA)	2014	USA	4WD Control	Actuation Test	
Santafe Sport(DMA)	2014	USA	4WD Control	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2014	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2014	USA	4WD Control	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2014	USA	Auto Headlamp Leveling System	Version Information	
Santafe Sport(DMA)	2014	USA	Auto Headlamp Leveling System	Read Fault Code	
Santafe Sport(DMA)	2014	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	Auto Headlamp Leveling System	Read Data Stream	
Santafe Sport(DMA)	2014	USA	Auto Headlamp Leveling System	Actuation Test	
Santafe Sport(DMA)	2014	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Santafe Sport(DMA)	2014	USA	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Santafe Sport(DMA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe Sport(DMA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe Sport(DMA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe Sport(DMA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe Sport(DMA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe Sport(DMA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe Sport(DMA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe Sport(DMA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe Sport(DMA)	2014	USA	IMM(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2014	USA	IMM(Immobilizer)	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2014	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Santafe Sport(DMA)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe Sport(DMA)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Version Information	
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Special Function	Serial Communication Line Check
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2014	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2014	USA	Transmitter Code Saving	Read Data Stream	
Santafe Sport(DMA)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe Sport(DMA)	2014	USA	Assist Door Module	Version Information	
Santafe Sport(DMA)	2014	USA	Assist Door Module	Read Fault Code	
Santafe Sport(DMA)	2014	USA	Assist Door Module	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	Assist Door Module	Read Data Stream	
Santafe Sport(DMA)	2014	USA	Assist Door Module	Actuation Test	
Santafe Sport(DMA)	2014	USA	Blind Spot Detection	Version Information	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2014	USA	Blind Spot Detection	Read Fault Code	
Santafe Sport(DMA)	2014	USA	Blind Spot Detection	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	Blind Spot Detection	Read Data Stream	
Santafe Sport(DMA)	2014	USA	Blind Spot Detection	Actuation Test	
Santafe Sport(DMA)	2014	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe Sport(DMA)	2014	USA	Cluster Module	Version Information	
Santafe Sport(DMA)	2014	USA	Cluster Module	Read Fault Code	
Santafe Sport(DMA)	2014	USA	Cluster Module	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	Cluster Module	Read Data Stream	
Santafe Sport(DMA)	2014	USA	Cluster Module	Actuation Test	
Santafe Sport(DMA)	2014	USA	Driver Door Module	Version Information	
Santafe Sport(DMA)	2014	USA	Driver Door Module	Read Fault Code	
Santafe Sport(DMA)	2014	USA	Driver Door Module	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	Driver Door Module	Read Data Stream	
Santafe Sport(DMA)	2014	USA	Driver Door Module	Actuation Test	
Santafe Sport(DMA)	2014	USA	PODS-F	Version Information	
Santafe Sport(DMA)	2014	USA	PODS-F	Read Fault Code	
Santafe Sport(DMA)	2014	USA	PODS-F	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	PODS-F	Special Function	PODS Reset
Santafe Sport(DMA)	2014	USA	Power Seat Module	Version Information	
Santafe Sport(DMA)	2014	USA	Power Seat Module	Read Fault Code	
Santafe Sport(DMA)	2014	USA	Power Seat Module	Clear Fault Memory	
Santafe Sport(DMA)	2014	USA	Power Seat Module	Read Data Stream	
Santafe Sport(DMA)	2014	USA	Power Seat Module	Actuation Test	
Santafe Sport(DMA)	2014	USA	Power Seat Module	Special Function	User Option
Santafe Sport(DMA)	2014	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2014	USA	Smart Junction Block	Version Information	
Santafe Sport(DMA)	2014	USA	Smart Junction Block	Read Fault Code	
Santafe Sport(DMA)	2014	USA	Smart Junction Block	Clear Fault Memory	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2014	USA	Smart Junction Block	Read Data Stream	
Santafe Sport(DMA)	2014	USA	Smart Junction Block	Actuation Test	
Santafe Sport(DMA)	2014	USA	Smart Junction Block	Special Function	User Option
Santafe Sport(DMA)	2014	USA	Telematics Unit	Version Information	
Santafe Sport(DMA)	2014	USA	Telematics Unit	Read Fault Code	
Santafe Sport(DMA)	2014	USA	Telematics Unit	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Version Information	
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Santafe Sport(DMA)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Santafe Sport(DMA)	2013	USA	TCM(Transmission Control Module)	Version Information	
Santafe Sport(DMA)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Santafe Sport(DMA)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Santafe Sport(DMA)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Santafe Sport(DMA)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Santafe Sport(DMA)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2013	USA	ABS(Anti-lock Braking System)	Version Information	
Santafe Sport(DMA)	2013	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Santafe Sport(DMA)	2013	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Santafe Sport(DMA)	2013	USA	ABS(Anti-lock Braking System)	Actuation Test	
Santafe Sport(DMA)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Santafe Sport(DMA)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Santafe Sport(DMA)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Santafe Sport(DMA)	2013	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Santafe Sport(DMA)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Santafe Sport(DMA)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Santafe Sport(DMA)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Santafe Sport(DMA)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Santafe Sport(DMA)	2013	USA	AC(Air Conditioning)	Version Information	
Santafe Sport(DMA)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Santafe Sport(DMA)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Santafe Sport(DMA)	2013	USA	AC(Air Conditioning)	Actuation Test	
Santafe Sport(DMA)	2013	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Santafe Sport(DMA)	2013	USA	BCM(Body Control Module)	Version Information	
Santafe Sport(DMA)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Santafe Sport(DMA)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Santafe Sport(DMA)	2013	USA	BCM(Body Control Module)	Actuation Test	
Santafe Sport(DMA)	2013	USA	BCM(Body Control Module)	Special Function	User Option
Santafe Sport(DMA)	2013	USA	EPB(Electrical Parking Brake)	Version Information	

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2013	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Santafe Sport(DMA)	2013	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Santafe Sport(DMA)	2013	USA	EPB(Electrical Parking Brake)	Actuation Test	
Santafe Sport(DMA)	2013	USA	EPB(Electrical Parking Brake)	Special Function	EPB Variant Coding
Santafe Sport(DMA)	2013	USA	EPS(Electronic Power Steering)	Version Information	
Santafe Sport(DMA)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	
Santafe Sport(DMA)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Santafe Sport(DMA)	2013	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Santafe Sport(DMA)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Santafe Sport(DMA)	2013	USA	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Santafe Sport(DMA)	2013	USA	4WD Control	Version Information	
Santafe Sport(DMA)	2013	USA	4WD Control	Read Fault Code	
Santafe Sport(DMA)	2013	USA	4WD Control	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	4WD Control	Read Data Stream	
Santafe Sport(DMA)	2013	USA	4WD Control	Actuation Test	
Santafe Sport(DMA)	2013	USA	4WD Control	Special Function	Clutch Learning Read
Santafe Sport(DMA)	2013	USA	4WD Control	Special Function	Clutch Learning Reset
Santafe Sport(DMA)	2013	USA	4WD Control	Special Function	Clutch Learning Write
Santafe Sport(DMA)	2013	USA	Auto Headlamp Leveling System	Version Information	
Santafe Sport(DMA)	2013	USA	Auto Headlamp Leveling System	Read Fault Code	
Santafe Sport(DMA)	2013	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	Auto Headlamp Leveling System	Read Data Stream	
Santafe Sport(DMA)	2013	USA	Auto Headlamp Leveling System	Actuation Test	
Santafe Sport(DMA)	2013	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2013	USA	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Santafe Sport(DMA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Santafe Sport(DMA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Santafe Sport(DMA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Santafe Sport(DMA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Santafe Sport(DMA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Santafe Sport(DMA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Santafe Sport(DMA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Santafe Sport(DMA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Santafe Sport(DMA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Santafe Sport(DMA)	2013	USA	IMM(Immobilizer)	Read Fault Code	
Santafe Sport(DMA)	2013	USA	IMM(Immobilizer)	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Santafe Sport(DMA)	2013	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Santafe Sport(DMA)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Santafe Sport(DMA)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Santafe Sport(DMA)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Version Information	
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Read Fault Code	
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Read Data Stream	
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Actuation Test	
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Special Function	Antenna Status Check
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Special Function	Current FOB Key Check
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Special Function	FOB Key Status Information
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Special Function	Neutralization Mode
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Santafe Sport(DMA)	2013	USA	Smart Key Unit	Special Function	SMK Status Information
Santafe Sport(DMA)	2013	USA	Transmitter Code Saving	Read Data Stream	
Santafe Sport(DMA)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Santafe Sport(DMA)	2013	USA	Assist Door Module	Version Information	
Santafe Sport(DMA)	2013	USA	Assist Door Module	Read Fault Code	
Santafe Sport(DMA)	2013	USA	Assist Door Module	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	Assist Door Module	Read Data Stream	
Santafe Sport(DMA)	2013	USA	Assist Door Module	Actuation Test	
Santafe Sport(DMA)	2013	USA	Blind Spot Detection	Version Information	
Santafe Sport(DMA)	2013	USA	Blind Spot Detection	Read Fault Code	
Santafe Sport(DMA)	2013	USA	Blind Spot Detection	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	Blind Spot Detection	Read Data Stream	
Santafe Sport(DMA)	2013	USA	Blind Spot Detection	Actuation Test	
Santafe Sport(DMA)	2013	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Santafe Sport(DMA)	2013	USA	Cluster Module	Version Information	
Santafe Sport(DMA)	2013	USA	Cluster Module	Read Fault Code	
Santafe Sport(DMA)	2013	USA	Cluster Module	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	Cluster Module	Read Data Stream	
Santafe Sport(DMA)	2013	USA	Cluster Module	Actuation Test	
Santafe Sport(DMA)	2013	USA	Driver Door Module	Version Information	
Santafe Sport(DMA)	2013	USA	Driver Door Module	Read Fault Code	
Santafe Sport(DMA)	2013	USA	Driver Door Module	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	Driver Door Module	Read Data Stream	
Santafe Sport(DMA)	2013	USA	Driver Door Module	Actuation Test	
Santafe Sport(DMA)	2013	USA	PODS-F	Version Information	
Santafe Sport(DMA)	2013	USA	PODS-F	Read Fault Code	
Santafe Sport(DMA)	2013	USA	PODS-F	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	PODS-F	Special Function	PODS Reset

model	year	area	system	function	subfunction
Santafe Sport(DMA)	2013	USA	Power Seat Module	Version Information	
Santafe Sport(DMA)	2013	USA	Power Seat Module	Read Fault Code	
Santafe Sport(DMA)	2013	USA	Power Seat Module	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	Power Seat Module	Read Data Stream	
Santafe Sport(DMA)	2013	USA	Power Seat Module	Actuation Test	
Santafe Sport(DMA)	2013	USA	Power Seat Module	Special Function	User Option
Santafe Sport(DMA)	2013	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Santafe Sport(DMA)	2013	USA	Smart Junction Block	Version Information	
Santafe Sport(DMA)	2013	USA	Smart Junction Block	Read Fault Code	
Santafe Sport(DMA)	2013	USA	Smart Junction Block	Clear Fault Memory	
Santafe Sport(DMA)	2013	USA	Smart Junction Block	Read Data Stream	
Santafe Sport(DMA)	2013	USA	Smart Junction Block	Actuation Test	
Santafe Sport(DMA)	2013	USA	Smart Junction Block	Special Function	User Option
Santafe Sport(DMA)	2013	USA	Telematics Unit	Version Information	
Santafe Sport(DMA)	2013	USA	Telematics Unit	Read Fault Code	
Santafe Sport(DMA)	2013	USA	Telematics Unit	Clear Fault Memory	
Scoupe(L1)	1996	USA	ECM(Engine Control Module)	Read Fault Code	
Scoupe(L1)	1996	USA	ECM(Engine Control Module)	Clear Fault Memory	
Scoupe(L1)	1996	USA	ECM(Engine Control Module)	Read Data Stream	
Scoupe(L1)	1996	USA	ECM(Engine Control Module)	Actuation Test	
Scoupe(L1)	1996	USA	TCM(Transmission Control Module)	Read Fault Code	
Scoupe(L1)	1996	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Scoupe(L1)	1996	USA	TCM(Transmission Control Module)	Read Data Stream	
Scoupe(L1)	1995	USA	ECM(Engine Control Module)	Read Fault Code	
Scoupe(L1)	1995	USA	ECM(Engine Control Module)	Clear Fault Memory	
Scoupe(L1)	1995	USA	ECM(Engine Control Module)	Read Data Stream	
Scoupe(L1)	1995	USA	ECM(Engine Control Module)	Actuation Test	
Scoupe(L1)	1995	USA	TCM(Transmission Control Module)	Read Fault Code	
Scoupe(L1)	1995	USA	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Scoupe(L1)	1995	USA	TCM(Transmission Control Module)	Read Data Stream	
Scoupe(L1)	1994	USA	ECM(Engine Control Module)	Read Fault Code	
Scoupe(L1)	1994	USA	ECM(Engine Control Module)	Clear Fault Memory	
Scoupe(L1)	1994	USA	ECM(Engine Control Module)	Read Data Stream	
Scoupe(L1)	1994	USA	ECM(Engine Control Module)	Actuation Test	
Scoupe(L1)	1994	USA	TCM(Transmission Control Module)	Read Fault Code	
Scoupe(L1)	1994	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Scoupe(L1)	1994	USA	TCM(Transmission Control Module)	Read Data Stream	
Scoupe(L1)	1993	USA	ECM(Engine Control Module)	Read Fault Code	
Scoupe(L1)	1993	USA	ECM(Engine Control Module)	Clear Fault Memory	
Scoupe(L1)	1993	USA	ECM(Engine Control Module)	Read Data Stream	
Scoupe(L1)	1993	USA	ECM(Engine Control Module)	Actuation Test	
Scoupe(L1)	1993	USA	TCM(Transmission Control Module)	Read Fault Code	
Scoupe(L1)	1993	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Scoupe(L1)	1993	USA	TCM(Transmission Control Module)	Read Data Stream	
Scoupe(L1)	1992	USA	ECM(Engine Control Module)	Read Fault Code	
Scoupe(L1)	1992	USA	ECM(Engine Control Module)	Clear Fault Memory	
Scoupe(L1)	1992	USA	ECM(Engine Control Module)	Read Data Stream	
Scoupe(L1)	1992	USA	ECM(Engine Control Module)	Actuation Test	
Scoupe(L1)	1992	USA	TCM(Transmission Control Module)	Read Fault Code	
Scoupe(L1)	1992	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Scoupe(L1)	1992	USA	TCM(Transmission Control Module)	Read Data Stream	
Scoupe(L1)	1991	USA	ECM(Engine Control Module)	Read Fault Code	
Scoupe(L1)	1991	USA	ECM(Engine Control Module)	Clear Fault Memory	
Scoupe(L1)	1991	USA	ECM(Engine Control Module)	Read Data Stream	
Scoupe(L1)	1991	USA	ECM(Engine Control Module)	Actuation Test	
Scoupe(L1)	1991	USA	TCM(Transmission Control Module)	Read Fault Code	
Scoupe(L1)	1991	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Scoupe(L1)	1991	USA	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2017	USA	ECM(Engine Control Module)	Version Information	
Sonata Hev(LF HEV)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Sonata Hev(LF HEV)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Hev(LF HEV)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Hev(LF HEV)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Hev(LF HEV)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata Hev(LF HEV)	2017	USA	TCM(Transmission Control Module)	Version Information	
Sonata Hev(LF HEV)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hev(LF HEV)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata Hev(LF HEV)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hev(LF HEV)	2017	USA	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Regular Travel
Sonata Hev(LF HEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	High Pressure Release Mode
Sonata Hev(LF HEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hev(LF HEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hev(LF HEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Sonata Hev(LF HEV)	2017	USA	AC(Air Conditioning)	Version Information	
Sonata Hev(LF HEV)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	AC(Air Conditioning)	Actuation Test	
Sonata Hev(LF HEV)	2017	USA	BCM(Body Control Module)	Version Information	
Sonata Hev(LF HEV)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	BCM(Body Control Module)	Actuation Test	
Sonata Hev(LF HEV)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata Hev(LF HEV)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Sonata Hev(LF HEV)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata Hev(LF HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Version Information	
Sonata Hev(LF HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Read FreezeData	
Sonata Hev(LF HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Sonata Hev(LF HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hev(LF HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata Hev(LF HEV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata Hev(LF HEV)	2017	USA	Smart Key Unit	Version Information	
Sonata Hev(LF HEV)	2017	USA	Smart Key Unit	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	Smart Key Unit	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	Smart Key Unit	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	Smart Key Unit	Actuation Test	
Sonata Hev(LF HEV)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Sonata Hev(LF HEV)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Sonata Hev(LF HEV)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Hev(LF HEV)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
Sonata Hev(LF HEV)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Sonata Hev(LF HEV)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata Hev(LF HEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Hev(LF HEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Hev(LF HEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Hev(LF HEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Hev(LF HEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Hev(LF HEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata Hev(LF HEV)	2017	USA	LDWS(Lane Departure Warning System)	Version Information	
Sonata Hev(LF HEV)	2017	USA	LDWS(Lane Departure Warning System)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	LDWS(Lane Departure Warning System)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sonata Hev(LF HEV)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Sonata Hev(LF HEV)	2017	USA	BSD(Blind Spot Detection)	Version Information	
Sonata Hev(LF HEV)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
Sonata Hev(LF HEV)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Sonata Hev(LF HEV)	2017	USA	SCC(Smart Cruise Control)	Version Information	
Sonata Hev(LF HEV)	2017	USA	SCC(Smart Cruise Control)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	SCC(Smart Cruise Control)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	SCC(Smart Cruise Control)	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	SCC(Smart Cruise Control)	Special Function	Variant Coding
Sonata Hev(LF HEV)	2017	USA	SCC(Smart Cruise Control)	Special Function	Radar Sensor Alignment(SCC/AFD)
Sonata Hev(LF HEV)	2017	USA	Amplifier	Version Information	
Sonata Hev(LF HEV)	2017	USA	Amplifier	Special Function	AMP Operation Test
Sonata Hev(LF HEV)	2017	USA	AAF(Active Air Flap)	Version Information	
Sonata Hev(LF HEV)	2017	USA	AAF(Active Air Flap)	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	AAF(Active Air Flap)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	AAF(Active Air Flap)	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	AAF(Active Air Flap)	Actuation Test	
Sonata Hev(LF HEV)	2017	USA	Central Gateway	Version Information	
Sonata Hev(LF HEV)	2017	USA	Central Gateway	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	Central Gateway	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	Central Gateway	Special Function	Erase Network Configuration
Sonata Hev(LF HEV)	2017	USA	HEV Battery System	Version Information	
Sonata Hev(LF HEV)	2017	USA	HEV Battery System	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	HEV Battery System	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	HEV Battery System	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2017	USA	HEV Battery System	Read FreezeData	
Sonata Hev(LF HEV)	2017	USA	HEV Battery System	Actuation Test	
Sonata Hev(LF HEV)	2017	USA	HEV Battery System	Special Function	SOC Calibration
Sonata Hev(LF HEV)	2017	USA	HEV Battery System	Special Function	Isolation Breakdown Detection Function
Sonata Hev(LF HEV)	2017	USA	HCU/LDC	Version Information	
Sonata Hev(LF HEV)	2017	USA	HCU/LDC	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	HCU/LDC	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	HCU/LDC	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	HCU/LDC	Read FreezeData	
Sonata Hev(LF HEV)	2017	USA	HCU/LDC	Actuation Test	
Sonata Hev(LF HEV)	2017	USA	HCU/LDC	Special Function	E/C Fluid Pressure Cal.
Sonata Hev(LF HEV)	2017	USA	HCU/LDC	Special Function	Engine Test On
Sonata Hev(LF HEV)	2017	USA	HCU/LDC	Special Function	Engine Test Off
Sonata Hev(LF HEV)	2017	USA	HCU/LDC	Special Function	LDC Activation Test
Sonata Hev(LF HEV)	2017	USA	HCU/LDC	Special Function	Compression Pressure Test Of Engine Cylinder
Sonata Hev(LF HEV)	2017	USA	HEV Motor Control System	Version Information	
Sonata Hev(LF HEV)	2017	USA	HEV Motor Control System	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	HEV Motor Control System	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	HEV Motor Control System	Read Data Stream	
Sonata Hev(LF HEV)	2017	USA	HEV Motor Control System	Read FreezeData	
Sonata Hev(LF HEV)	2017	USA	HEV Motor Control System	Special Function	Electric Water Pump Motor ISO Resolver
Sonata Hev(LF HEV)	2017	USA	HEV Motor Control System	Special Function	Calibration
Sonata Hev(LF HEV)	2017	USA	Telematics Unit	Version Information	
Sonata Hev(LF HEV)	2017	USA	Telematics Unit	Read Fault Code	
Sonata Hev(LF HEV)	2017	USA	Telematics Unit	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	VESS(Virtual Engine Sound System)	Version Information	
Sonata Hev(LF HEV)	2017	USA	VESS(Virtual Engine Sound System)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2017	USA	VESS(Virtual Engine Sound System)	Clear Fault Memory	
Sonata Hev(LF HEV)	2017	USA	VESS(Virtual Engine Sound System)	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Version Information	
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Hev(LF HEV)	2016	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
Sonata Hev(LF HEV)	2016	USA	TCM(Transmission Control Module)	Version Information	
Sonata Hev(LF HEV)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hev(LF HEV)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hev(LF HEV)	2016	USA	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Sonata Hev(LF HEV)	2016	USA	ESC/AHB	Version Information	
Sonata Hev(LF HEV)	2016	USA	ESC/AHB	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	ESC/AHB	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	ESC/AHB	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	ESC/AHB	Actuation Test	

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2016	USA	ESC/AHB	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Sonata Hev(LF HEV)	2016	USA	ESC/AHB	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hev(LF HEV)	2016	USA	ESC/AHB	Special Function	SAS Calibration(CAN-ESP Only)
Sonata Hev(LF HEV)	2016	USA	ESC/AHB	Special Function	HCU Air Bleeding Mode
Sonata Hev(LF HEV)	2016	USA	ESC/AHB	Special Function	Pressure Sensor Calibration
Sonata Hev(LF HEV)	2016	USA	ESC/AHB	Special Function	Pedal Travel Function(DTC) Calibration Mode
Sonata Hev(LF HEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hev(LF HEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hev(LF HEV)	2016	USA	AC(Air Conditioning)	Version Information	
Sonata Hev(LF HEV)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	AC(Air Conditioning)	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	BCM(Body Control Module)	Version Information	
Sonata Hev(LF HEV)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	BCM(Body Control Module)	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Sonata Hev(LF HEV)	2016	USA	EPB(Electrical Parking Brake)	Version Information	
Sonata Hev(LF HEV)	2016	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	EPB(Electrical Parking Brake)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2016	USA	EPB(Electrical Parking Brake)	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Sonata Hev(LF HEV)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Hev(LF HEV)	2016	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata Hev(LF HEV)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hev(LF HEV)	2016	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hev(LF HEV)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata Hev(LF HEV)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata Hev(LF HEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Hev(LF HEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Hev(LF HEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Hev(LF HEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Hev(LF HEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Hev(LF HEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata Hev(LF HEV)	2016	USA	Smart Key Unit	Version Information	
Sonata Hev(LF HEV)	2016	USA	Smart Key Unit	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Smart Key Unit	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Smart Key Unit	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	Smart Key Unit	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check
Sonata Hev(LF HEV)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Hev(LF HEV)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Sonata Hev(LF HEV)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Sonata Hev(LF HEV)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata Hev(LF HEV)	2016	USA	CCS(Cruise Control System)	Version Information	
Sonata Hev(LF HEV)	2016	USA	CCS(Cruise Control System)	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	CCS(Cruise Control System)	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	CCS(Cruise Control System)	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	CCS(Cruise Control System)	Special Function	Variant Coding
Sonata Hev(LF HEV)	2016	USA	CCS(Cruise Control System)	Special Function	Radar Sensor Alignment(SCC/AFB)
Sonata Hev(LF HEV)	2016	USA	HCU/LDC	Version Information	
Sonata Hev(LF HEV)	2016	USA	HCU/LDC	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	HCU/LDC	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	HCU/LDC	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	HCU/LDC	Read FreezeData	
Sonata Hev(LF HEV)	2016	USA	HCU/LDC	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	HCU/LDC	Special Function	E/C Fluid Pressure Cal.
Sonata Hev(LF HEV)	2016	USA	HCU/LDC	Special Function	Engine Test On
Sonata Hev(LF HEV)	2016	USA	HCU/LDC	Special Function	Engine Test Off
Sonata Hev(LF HEV)	2016	USA	HCU/LDC	Special Function	LDC Activation Test
Sonata Hev(LF HEV)	2016	USA	HCU/LDC	Special Function	Compression Pressure Test Of Engine Cylinder
Sonata Hev(LF HEV)	2016	USA	Active Air Flap	Version Information	
Sonata Hev(LF HEV)	2016	USA	Active Air Flap	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Active Air Flap	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Active Air Flap	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	Active Air Flap	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	Assist Door Module	Version Information	
Sonata Hev(LF HEV)	2016	USA	Assist Door Module	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2016	USA	Assist Door Module	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Assist Door Module	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	Assist Door Module	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	HEV Battery System	Version Information	
Sonata Hev(LF HEV)	2016	USA	HEV Battery System	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	HEV Battery System	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	HEV Battery System	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	HEV Battery System	Read FreezeData	
Sonata Hev(LF HEV)	2016	USA	HEV Battery System	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	HEV Battery System	Special Function	SOC Calibration
Sonata Hev(LF HEV)	2016	USA	HEV Battery System	Special Function	Isolation Breakdown Detection Function
Sonata Hev(LF HEV)	2016	USA	Blind Spot Detection	Version Information	
Sonata Hev(LF HEV)	2016	USA	Blind Spot Detection	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Blind Spot Detection	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Blind Spot Detection	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	Blind Spot Detection	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata Hev(LF HEV)	2016	USA	Central Gateway	Version Information	
Sonata Hev(LF HEV)	2016	USA	Central Gateway	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Central Gateway	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Central Gateway	Special Function	Erase Network Configuration
Sonata Hev(LF HEV)	2016	USA	Cluster Module	Version Information	
Sonata Hev(LF HEV)	2016	USA	Cluster Module	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Cluster Module	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Cluster Module	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	Cluster Module	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	Cluster Module	Special Function	CLU Variant Coding
Sonata Hev(LF HEV)	2016	USA	Driver Door Module	Version Information	

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2016	USA	Driver Door Module	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Driver Door Module	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Driver Door Module	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	Driver Door Module	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	Driver Door Module	Special Function	User Option
Sonata Hev(LF HEV)	2016	USA	Lane Departure Warning System	Version Information	
Sonata Hev(LF HEV)	2016	USA	Lane Departure Warning System	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Lane Departure Warning System	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Lane Departure Warning System	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	Lane Departure Warning System	Special Function	SPTAC Calibration
Sonata Hev(LF HEV)	2016	USA	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Sonata Hev(LF HEV)	2016	USA	HEV Motor Control System	Version Information	
Sonata Hev(LF HEV)	2016	USA	HEV Motor Control System	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	HEV Motor Control System	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	HEV Motor Control System	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	HEV Motor Control System	Read FreezeData	
Sonata Hev(LF HEV)	2016	USA	HEV Motor Control System	Special Function	Electric water Pump
Sonata Hev(LF HEV)	2016	USA	HEV Motor Control System	Special Function	motor HSB resolver Calibration
Sonata Hev(LF HEV)	2016	USA	Weight Classification System	Version Information	
Sonata Hev(LF HEV)	2016	USA	Weight Classification System	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Weight Classification System	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Weight Classification System	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	Weight Classification System	Special Function	Body Sensor Reset
Sonata Hev(LF HEV)	2016	USA	Power Seat Module	Version Information	
Sonata Hev(LF HEV)	2016	USA	Power Seat Module	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Power Seat Module	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Power Seat Module	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	Power Seat Module	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	Power Seat Module	Special Function	User Option

model	year	area	system	function	subfunction
Sonata Hev(LF HEV)	2016	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Sonata Hev(LF HEV)	2016	USA	Smart Junction Block	Version Information	
Sonata Hev(LF HEV)	2016	USA	Smart Junction Block	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Smart Junction Block	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Smart Junction Block	Read Data Stream	
Sonata Hev(LF HEV)	2016	USA	Smart Junction Block	Actuation Test	
Sonata Hev(LF HEV)	2016	USA	Smart Junction Block	Special Function	User Option
Sonata Hev(LF HEV)	2016	USA	Telematics Unit	Version Information	
Sonata Hev(LF HEV)	2016	USA	Telematics Unit	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Telematics Unit	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Virtual Engine Sound System	Version Information	
Sonata Hev(LF HEV)	2016	USA	Virtual Engine Sound System	Read Fault Code	
Sonata Hev(LF HEV)	2016	USA	Virtual Engine Sound System	Clear Fault Memory	
Sonata Hev(LF HEV)	2016	USA	Virtual Engine Sound System	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Phev(LF PHEV)	2017	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
Sonata Phev(LF PHEV)	2017	USA	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata Phev(LF PHEV)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Phev(LF PHEV)	2017	USA	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Pedal Travel
Sonata Phev(LF PHEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	High Pressure Release Mode
Sonata Phev(LF PHEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Phev(LF PHEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Sonata Phev(LF PHEV)	2017	USA	AC(Air Conditioning)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	AC(Air Conditioning)	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	BCM(Body Control Module)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	BCM(Body Control Module)	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata Phev(LF PHEV)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Sonata Phev(LF PHEV)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata Phev(LF PHEV)	2017	USA	MDPS(Motor Driven Power Steering)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	MDPS(Motor Driven Power Steering)	Read FreezeData	
Sonata Phev(LF PHEV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Sonata Phev(LF PHEV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sonata Phev(LF PHEV)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Phev(LF PHEV)	2017	USA	Smart Key Unit	Version Information	
Sonata Phev(LF PHEV)	2017	USA	Smart Key Unit	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	Smart Key Unit	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	Smart Key Unit	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	Smart Key Unit	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Sonata Phev(LF PHEV)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Sonata Phev(LF PHEV)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Phev(LF PHEV)	2017	USA	Smart Key Unit	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Sonata Phev(LF PHEV)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata Phev(LF PHEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Phev(LF PHEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Phev(LF PHEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Phev(LF PHEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Phev(LF PHEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata Phev(LF PHEV)	2017	USA	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata Phev(LF PHEV)	2017	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sonata Phev(LF PHEV)	2017	USA	LDWS(Lane Departure Warning System)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	LDWS(Lane Departure Warning System)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	LDWS(Lane Departure Warning System)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sonata Phev(LF PHEV)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Sonata Phev(LF PHEV)	2017	USA	BSD(Blind Spot Detection)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Sonata Phev(LF PHEV)	2017	USA	SCC(Smart Cruise Control)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	SCC(Smart Cruise Control)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	SCC(Smart Cruise Control)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	SCC(Smart Cruise Control)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	SCC(Smart Cruise Control)	Special Function	Variant Coding
Sonata Phev(LF PHEV)	2017	USA	SCC(Smart Cruise Control)	Special Function	Radar Sensor Alignment(SCC/AFD)
Sonata Phev(LF PHEV)	2017	USA	Amplifier	Version Information	
Sonata Phev(LF PHEV)	2017	USA	Amplifier	Special Function	AMP Operation Test
Sonata Phev(LF PHEV)	2017	USA	AAF(Active Air Flap)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	AAF(Active Air Flap)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	AAF(Active Air Flap)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	AAF(Active Air Flap)	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	AAF(Active Air Flap)	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	Central Gateway	Version Information	
Sonata Phev(LF PHEV)	2017	USA	Central Gateway	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	Central Gateway	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	Central Gateway	Special Function	Erase Network Configuration
Sonata Phev(LF PHEV)	2017	USA	HEV Battery System	Version Information	
Sonata Phev(LF PHEV)	2017	USA	HEV Battery System	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	HEV Battery System	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	HEV Battery System	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	HEV Battery System	Read FreezeData	
Sonata Phev(LF PHEV)	2017	USA	HEV Battery System	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	HEV Battery System	Special Function	SOC Calibration
Sonata Phev(LF PHEV)	2017	USA	HEV Battery System	Special Function	Isolation Breakdown Detection Function
Sonata Phev(LF PHEV)	2017	USA	HCU/LDC	Version Information	

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2017	USA	HCU/LDC	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	HCU/LDC	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	HCU/LDC	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	HCU/LDC	Read FreezeData	
Sonata Phev(LF PHEV)	2017	USA	HCU/LDC	Actuation Test	
Sonata Phev(LF PHEV)	2017	USA	HCU/LDC	Special Function	E/C Fluid Pressure Cal.
Sonata Phev(LF PHEV)	2017	USA	HCU/LDC	Special Function	Engine Test On
Sonata Phev(LF PHEV)	2017	USA	HCU/LDC	Special Function	Engine Test Off
Sonata Phev(LF PHEV)	2017	USA	HCU/LDC	Special Function	LDC Activation Test
Sonata Phev(LF PHEV)	2017	USA	HCU/LDC	Special Function	Compression Pressure Test Of Engine Cylinder
Sonata Phev(LF PHEV)	2017	USA	HEV Motor Control System	Version Information	
Sonata Phev(LF PHEV)	2017	USA	HEV Motor Control System	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	HEV Motor Control System	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	HEV Motor Control System	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	HEV Motor Control System	Read FreezeData	
Sonata Phev(LF PHEV)	2017	USA	HEV Motor Control System	Special Function	Electric water Pump
Sonata Phev(LF PHEV)	2017	USA	HEV Motor Control System	Special Function	motor HCU resolver Calibration
Sonata Phev(LF PHEV)	2017	USA	On Board Charger	Version Information	
Sonata Phev(LF PHEV)	2017	USA	On Board Charger	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	On Board Charger	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	On Board Charger	Read Data Stream	
Sonata Phev(LF PHEV)	2017	USA	On Board Charger	Read FreezeData	
Sonata Phev(LF PHEV)	2017	USA	Telematics Unit	Version Information	
Sonata Phev(LF PHEV)	2017	USA	Telematics Unit	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	Telematics Unit	Clear Fault Memory	
Sonata Phev(LF PHEV)	2017	USA	VESS(Virtual Engine Sound System)	Version Information	
Sonata Phev(LF PHEV)	2017	USA	VESS(Virtual Engine Sound System)	Read Fault Code	
Sonata Phev(LF PHEV)	2017	USA	VESS(Virtual Engine Sound System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2017	USA	VESS(Virtual Engine Sound System)	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Version Information	
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Phev(LF PHEV)	2016	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
Sonata Phev(LF PHEV)	2016	USA	TCM(Transmission Control Module)	Version Information	
Sonata Phev(LF PHEV)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata Phev(LF PHEV)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Phev(LF PHEV)	2016	USA	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Version Information	
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Actuation Test	

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Special Function	Auto Detected Configuration
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Special Function	Reset(ESP/ESC)Only
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Special Function	SAS Calibration(CAN-ESP Only)
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Special Function	HCU Air Bleeding Mode
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Special Function	Pressure Sensor Calibration
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Special Function	Pedal Travel
Sonata Phev(LF PHEV)	2016	USA	ESP/AHB	Special Function	Engine Pressure Release Mode
Sonata Phev(LF PHEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Phev(LF PHEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Phev(LF PHEV)	2016	USA	AC(Air Conditioning)	Version Information	
Sonata Phev(LF PHEV)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	AC(Air Conditioning)	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	BCM(Body Control Module)	Version Information	
Sonata Phev(LF PHEV)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	BCM(Body Control Module)	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Sonata Phev(LF PHEV)	2016	USA	EPB(Electrical Parking Brake)	Version Information	
Sonata Phev(LF PHEV)	2016	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	EPB(Electrical Parking Brake)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2016	USA	EPB(Electrical Parking Brake)	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Sonata Phev(LF PHEV)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Phev(LF PHEV)	2016	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata Phev(LF PHEV)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Phev(LF PHEV)	2016	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Phev(LF PHEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Phev(LF PHEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Phev(LF PHEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Phev(LF PHEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Phev(LF PHEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Phev(LF PHEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata Phev(LF PHEV)	2016	USA	Smart Key Unit	Version Information	
Sonata Phev(LF PHEV)	2016	USA	Smart Key Unit	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Smart Key Unit	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Smart Key Unit	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	Smart Key Unit	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check
Sonata Phev(LF PHEV)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check
Sonata Phev(LF PHEV)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Sonata Phev(LF PHEV)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Sonata Phev(LF PHEV)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata Phev(LF PHEV)	2016	USA	CCS(Cruise Control System)	Version Information	
Sonata Phev(LF PHEV)	2016	USA	CCS(Cruise Control System)	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	CCS(Cruise Control System)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	CCS(Cruise Control System)	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	CCS(Cruise Control System)	Special Function	Variant Coding
Sonata Phev(LF PHEV)	2016	USA	CCS(Cruise Control System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Sonata Phev(LF PHEV)	2016	USA	HCU/LDC	Version Information	
Sonata Phev(LF PHEV)	2016	USA	HCU/LDC	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	HCU/LDC	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	HCU/LDC	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	HCU/LDC	Read FreezeData	
Sonata Phev(LF PHEV)	2016	USA	HCU/LDC	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	HCU/LDC	Special Function	E/C Fluid Pressure Cal.
Sonata Phev(LF PHEV)	2016	USA	HCU/LDC	Special Function	Engine Test On
Sonata Phev(LF PHEV)	2016	USA	HCU/LDC	Special Function	Engine Test Off
Sonata Phev(LF PHEV)	2016	USA	HCU/LDC	Special Function	LDC Activation Test
Sonata Phev(LF PHEV)	2016	USA	HCU/LDC	Special Function	Compression Pressure Test Of Engine Cylinder
Sonata Phev(LF PHEV)	2016	USA	On Board Charger	Version Information	
Sonata Phev(LF PHEV)	2016	USA	On Board Charger	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	On Board Charger	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	On Board Charger	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	On Board Charger	Read FreezeData	
Sonata Phev(LF PHEV)	2016	USA	Active Air Flap	Version Information	
Sonata Phev(LF PHEV)	2016	USA	Active Air Flap	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Active Air Flap	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Active Air Flap	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	Active Air Flap	Actuation Test	

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2016	USA	Assist Door Module	Version Information	
Sonata Phev(LF PHEV)	2016	USA	Assist Door Module	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Assist Door Module	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Assist Door Module	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	Assist Door Module	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	AFS(Adaptive Front Lighting System)	Version Information	
Sonata Phev(LF PHEV)	2016	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	AFS(Adaptive Front Lighting System)	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Sonata Phev(LF PHEV)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Parameter Setting&Zero Position Initial
Sonata Phev(LF PHEV)	2016	USA	HEV Battery System	Version Information	
Sonata Phev(LF PHEV)	2016	USA	HEV Battery System	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	HEV Battery System	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	HEV Battery System	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	HEV Battery System	Read FreezeData	
Sonata Phev(LF PHEV)	2016	USA	HEV Battery System	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	HEV Battery System	Special Function	SOC Calibration
Sonata Phev(LF PHEV)	2016	USA	HEV Battery System	Special Function	Isolation Breakdown Detection Function
Sonata Phev(LF PHEV)	2016	USA	Blind Spot Detection	Version Information	
Sonata Phev(LF PHEV)	2016	USA	Blind Spot Detection	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Blind Spot Detection	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Blind Spot Detection	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	Blind Spot Detection	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata Phev(LF PHEV)	2016	USA	Central Gateway	Version Information	

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2016	USA	Central Gateway	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Central Gateway	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Central Gateway	Special Function	Erase Network Configuration
Sonata Phev(LF PHEV)	2016	USA	Cluster Module	Version Information	
Sonata Phev(LF PHEV)	2016	USA	Cluster Module	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Cluster Module	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Cluster Module	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	Cluster Module	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	Cluster Module	Special Function	CLU Variant Coding
Sonata Phev(LF PHEV)	2016	USA	Driver Door Module	Version Information	
Sonata Phev(LF PHEV)	2016	USA	Driver Door Module	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Driver Door Module	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Driver Door Module	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	Driver Door Module	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	Driver Door Module	Special Function	User Option
Sonata Phev(LF PHEV)	2016	USA	Lane Departure Warning System	Version Information	
Sonata Phev(LF PHEV)	2016	USA	Lane Departure Warning System	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Lane Departure Warning System	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Lane Departure Warning System	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	Lane Departure Warning System	Special Function	SPTAC Calibration
Sonata Phev(LF PHEV)	2016	USA	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Sonata Phev(LF PHEV)	2016	USA	HEV Motor Control System	Version Information	
Sonata Phev(LF PHEV)	2016	USA	HEV Motor Control System	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	HEV Motor Control System	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	HEV Motor Control System	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	HEV Motor Control System	Read FreezeData	
Sonata Phev(LF PHEV)	2016	USA	HEV Motor Control System	Special Function	Electric water pump motor hsu resolver
Sonata Phev(LF PHEV)	2016	USA	HEV Motor Control System	Special Function	Calibration
Sonata Phev(LF PHEV)	2016	USA	Power Seat Module	Version Information	

model	year	area	system	function	subfunction
Sonata Phev(LF PHEV)	2016	USA	Power Seat Module	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Power Seat Module	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Power Seat Module	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	Power Seat Module	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	Power Seat Module	Special Function	User Option
Sonata Phev(LF PHEV)	2016	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Sonata Phev(LF PHEV)	2016	USA	Smart Junction Block	Version Information	
Sonata Phev(LF PHEV)	2016	USA	Smart Junction Block	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Smart Junction Block	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Smart Junction Block	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	Smart Junction Block	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	Smart Junction Block	Special Function	User Option
Sonata Phev(LF PHEV)	2016	USA	Telematics Unit	Version Information	
Sonata Phev(LF PHEV)	2016	USA	Telematics Unit	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Telematics Unit	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Virtual Engine Sound System	Version Information	
Sonata Phev(LF PHEV)	2016	USA	Virtual Engine Sound System	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Virtual Engine Sound System	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Virtual Engine Sound System	Actuation Test	
Sonata Phev(LF PHEV)	2016	USA	Weight Classification System	Version Information	
Sonata Phev(LF PHEV)	2016	USA	Weight Classification System	Read Fault Code	
Sonata Phev(LF PHEV)	2016	USA	Weight Classification System	Clear Fault Memory	
Sonata Phev(LF PHEV)	2016	USA	Weight Classification System	Read Data Stream	
Sonata Phev(LF PHEV)	2016	USA	Weight Classification System	Special Function	Body Sensor Reset
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Version Information	
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(LFA)	2018	USA	Dual Clutch Transmission	Version Information	
Sonata(LFA)	2018	USA	Dual Clutch Transmission	Read Fault Code	
Sonata(LFA)	2018	USA	Dual Clutch Transmission	Clear Fault Memory	
Sonata(LFA)	2018	USA	Dual Clutch Transmission	Read Data Stream	
Sonata(LFA)	2018	USA	Dual Clutch Transmission	Read FreezeData	
Sonata(LFA)	2018	USA	Dual Clutch Transmission	Actuation Test	
Sonata(LFA)	2018	USA	Dual Clutch Transmission	Special Function	DCT Learning Function
Sonata(LFA)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(LFA)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(LFA)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(LFA)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(LFA)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(LFA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(LFA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata(LFA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(LFA)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Sonata(LFA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(LFA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(LFA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(LFA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(LFA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(LFA)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Sonata(LFA)	2018	USA	FATC/MTC	Version Information	
Sonata(LFA)	2018	USA	FATC/MTC	Read Fault Code	
Sonata(LFA)	2018	USA	FATC/MTC	Clear Fault Memory	
Sonata(LFA)	2018	USA	FATC/MTC	Read Data Stream	
Sonata(LFA)	2018	USA	FATC/MTC	Actuation Test	
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Version Information	
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Read Fault Code	
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Actuation Test	
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Special Function	User Option
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Read FreezeData	
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Special Function	Read VIN
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Special Function	Write VIN
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Special Function	PCM Lock(MEC)Setting
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Special Function	VCM Learning
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Special Function	Evap.Leakage Test
Sonata(LFA)	2018	USA	BCM(Body Control Module)	Special Function	ETC Motor Cleaning
Sonata(LFA)	2018	USA	Tire Pressure Monitoring	Version Information	
Sonata(LFA)	2018	USA	Tire Pressure Monitoring	Read Fault Code	
Sonata(LFA)	2018	USA	Tire Pressure Monitoring	Clear Fault Memory	
Sonata(LFA)	2018	USA	Tire Pressure Monitoring	Read Data Stream	
Sonata(LFA)	2018	USA	Tire Pressure Monitoring	Special Function	Write VIN
Sonata(LFA)	2018	USA	Tire Pressure Monitoring	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
Sonata(LFA)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Reading
Sonata(LFA)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Writing
Sonata(LFA)	2018	USA	Tire Pressure Monitoring	Special Function	TPMS TEST
Sonata(LFA)	2018	USA	Adaptive Front Lighting System	Version Information	
Sonata(LFA)	2018	USA	Adaptive Front Lighting System	Read Fault Code	
Sonata(LFA)	2018	USA	Adaptive Front Lighting System	Clear Fault Memory	
Sonata(LFA)	2018	USA	Adaptive Front Lighting System	Read Data Stream	
Sonata(LFA)	2018	USA	Adaptive Front Lighting System	Actuation Test	
Sonata(LFA)	2018	USA	Adaptive Front Lighting System	Special Function	Parameter Download
Sonata(LFA)	2018	USA	Adaptive Front Lighting System	Special Function	Calibration
Sonata(LFA)	2018	USA	Motor Driven Power Steering	Version Information	
Sonata(LFA)	2018	USA	Motor Driven Power Steering	Read Fault Code	
Sonata(LFA)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
Sonata(LFA)	2018	USA	Motor Driven Power Steering	Read Data Stream	
Sonata(LFA)	2018	USA	Motor Driven Power Steering	Special Function	Steering Angle Sensor(Sas)Calibration
Sonata(LFA)	2018	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
Sonata(LFA)	2018	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering Motor)
Sonata(LFA)	2018	USA	Smart Key Unit	Version Information	
Sonata(LFA)	2018	USA	Smart Key Unit	Read Fault Code	
Sonata(LFA)	2018	USA	Smart Key Unit	Clear Fault Memory	
Sonata(LFA)	2018	USA	Smart Key Unit	Read Data Stream	
Sonata(LFA)	2018	USA	Smart Key Unit	Actuation Test	
Sonata(LFA)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
Sonata(LFA)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
Sonata(LFA)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(LFA)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
Sonata(LFA)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Sonata(LFA)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(LFA)	2018	USA	Smart Cruise Control	Version Information	
Sonata(LFA)	2018	USA	Smart Cruise Control	Read Fault Code	
Sonata(LFA)	2018	USA	Smart Cruise Control	Clear Fault Memory	
Sonata(LFA)	2018	USA	Smart Cruise Control	Read Data Stream	
Sonata(LFA)	2018	USA	Smart Cruise Control	Special Function	Radar Sensor Alignment(SCC/AFD)
Sonata(LFA)	2018	USA	Blind Spot Detection	Version Information	
Sonata(LFA)	2018	USA	Blind Spot Detection	Read Fault Code	
Sonata(LFA)	2018	USA	Blind Spot Detection	Clear Fault Memory	
Sonata(LFA)	2018	USA	Blind Spot Detection	Read Data Stream	
Sonata(LFA)	2018	USA	Blind Spot Detection	Actuation Test	
Sonata(LFA)	2018	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata(LFA)	2018	USA	Multi Function Camera	Version Information	
Sonata(LFA)	2018	USA	Multi Function Camera	Read Fault Code	
Sonata(LFA)	2018	USA	Multi Function Camera	Clear Fault Memory	
Sonata(LFA)	2018	USA	Multi Function Camera	Read Data Stream	
Sonata(LFA)	2018	USA	Multi Function Camera	Special Function	LKAS/LDWS Variant Coding
Sonata(LFA)	2018	USA	Parking Guide System	Version Information	
Sonata(LFA)	2018	USA	Parking Guide System	Read Fault Code	
Sonata(LFA)	2018	USA	Parking Guide System	Clear Fault Memory	
Sonata(LFA)	2018	USA	Parking Guide System	Read Data Stream	
Sonata(LFA)	2018	USA	Amplifier	Version Information	
Sonata(LFA)	2018	USA	Amplifier	Special Function	AMP Operation Test
Sonata(LFA)	2018	USA	IMM(Immobilizer)	Read Fault Code	
Sonata(LFA)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
Sonata(LFA)	2018	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(LFA)	2018	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Sonata(LFA)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(LFA)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Sonata(LFA)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(LFA)	2018	USA	Transmitter Code Saving	Read Data Stream	
Sonata(LFA)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(LFA)	2018	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
Sonata(LFA)	2018	USA	TCM(Transmission Control Module)	Version Information	
Sonata(LFA)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(LFA)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(LFA)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(LFA)	2018	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(LFA)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(LFA)	2018	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(A/T Replacement)
Sonata(LFA)	2018	USA	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Replacement)
Sonata(LFA)	2018	USA	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Version Information	
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
Sonata(LFA)	2017	USA	TCM(Transmission Control Module)	Version Information	
Sonata(LFA)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(LFA)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(LFA)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(LFA)	2017	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata(LFA)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(LFA)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(LFA)	2017	USA	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(LFA)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(LFA)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(LFA)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(LFA)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(LFA)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(LFA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(LFA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata(LFA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(LFA)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Sonata(LFA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(LFA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(LFA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(LFA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(LFA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(LFA)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset

model	year	area	system	function	subfunction
Sonata(LFA)	2017	USA	AC(Air Conditioning)	Version Information	
Sonata(LFA)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Sonata(LFA)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata(LFA)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Sonata(LFA)	2017	USA	AC(Air Conditioning)	Actuation Test	
Sonata(LFA)	2017	USA	BCM(Body Control Module)	Version Information	
Sonata(LFA)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Sonata(LFA)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata(LFA)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(LFA)	2017	USA	BCM(Body Control Module)	Actuation Test	
Sonata(LFA)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sonata(LFA)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Sonata(LFA)	2017	USA	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sonata(LFA)	2017	USA	MDPS(Motor Driven Power Steering)	Version Information	
Sonata(LFA)	2017	USA	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sonata(LFA)	2017	USA	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sonata(LFA)	2017	USA	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sonata(LFA)	2017	USA	MDPS(Motor Driven Power Steering)	Read FreezeData	
Sonata(LFA)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Sonata(LFA)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sonata(LFA)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata(LFA)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata(LFA)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(LFA)	2017	USA	Smart Key Unit	Version Information	
Sonata(LFA)	2017	USA	Smart Key Unit	Read Fault Code	
Sonata(LFA)	2017	USA	Smart Key Unit	Clear Fault Memory	
Sonata(LFA)	2017	USA	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(LFA)	2017	USA	Smart Key Unit	Actuation Test	
Sonata(LFA)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Sonata(LFA)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Sonata(LFA)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(LFA)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
Sonata(LFA)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Sonata(LFA)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(LFA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(LFA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(LFA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(LFA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(LFA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(LFA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(LFA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(LFA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(LFA)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(LFA)	2017	USA	AHLS(Auto Headlamp Leveling System)	Version Information	
Sonata(LFA)	2017	USA	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sonata(LFA)	2017	USA	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sonata(LFA)	2017	USA	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sonata(LFA)	2017	USA	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sonata(LFA)	2017	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sonata(LFA)	2017	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sonata(LFA)	2017	USA	IMMO(Immobilizer)	Read Fault Code	
Sonata(LFA)	2017	USA	IMMO(Immobilizer)	Clear Fault Memory	
Sonata(LFA)	2017	USA	IMMO(Immobilizer)	Read Data Stream	
Sonata(LFA)	2017	USA	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(LFA)	2017	USA	IMMO(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Sonata(LFA)	2017	USA	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sonata(LFA)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching
Sonata(LFA)	2017	USA	CODE(Transmitter Code Saving)	Read Data Stream	
Sonata(LFA)	2017	USA	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sonata(LFA)	2017	USA	BSD(Blind Spot Detection)	Version Information	
Sonata(LFA)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
Sonata(LFA)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
Sonata(LFA)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	
Sonata(LFA)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
Sonata(LFA)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Sonata(LFA)	2017	USA	LDWS(Lane Departure Warning System)	Version Information	
Sonata(LFA)	2017	USA	LDWS(Lane Departure Warning System)	Read Fault Code	
Sonata(LFA)	2017	USA	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sonata(LFA)	2017	USA	LDWS(Lane Departure Warning System)	Read Data Stream	
Sonata(LFA)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Sonata(LFA)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sonata(LFA)	2017	USA	SCC(Smart Cruise Control)	Version Information	
Sonata(LFA)	2017	USA	SCC(Smart Cruise Control)	Read Fault Code	
Sonata(LFA)	2017	USA	SCC(Smart Cruise Control)	Clear Fault Memory	
Sonata(LFA)	2017	USA	SCC(Smart Cruise Control)	Read Data Stream	
Sonata(LFA)	2017	USA	SCC(Smart Cruise Control)	Special Function	Radar Sensor Alignment(SCC/AFB)
Sonata(LFA)	2017	USA	Amplifier	Version Information	
Sonata(LFA)	2017	USA	Amplifier	Special Function	AMP Operation Test
Sonata(LFA)	2017	USA	Telematics Unit	Version Information	
Sonata(LFA)	2017	USA	Telematics Unit	Read Fault Code	
Sonata(LFA)	2017	USA	Telematics Unit	Clear Fault Memory	
Sonata(LFA)	2017	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sonata(LFA)	2017	USA	DCT(Dual Clutch Transmission)	Version Information	
Sonata(LFA)	2017	USA	DCT(Dual Clutch Transmission)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(LFA)	2017	USA	DCT(Dual Clutch Transmission)	Clear Fault Memory	
Sonata(LFA)	2017	USA	DCT(Dual Clutch Transmission)	Read Data Stream	
Sonata(LFA)	2017	USA	DCT(Dual Clutch Transmission)	Read FreezeData	
Sonata(LFA)	2017	USA	DCT(Dual Clutch Transmission)	Actuation Test	
Sonata(LFA)	2017	USA	DCT(Dual Clutch Transmission)	Special Function	DCT Learning Function
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Version Information	
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
Sonata(LFA)	2016	USA	TCM(Transmission Control Module)	Version Information	
Sonata(LFA)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(LFA)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(LFA)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(LFA)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata(LFA)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(LFA)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(LFA)	2016	USA	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(LFA)	2016	USA	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Sonata(LFA)	2016	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(LFA)	2016	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(LFA)	2016	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(LFA)	2016	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(LFA)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(LFA)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata(LFA)	2016	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(LFA)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(LFA)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(LFA)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(LFA)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(LFA)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(LFA)	2016	USA	FATC/MTC	Version Information	
Sonata(LFA)	2016	USA	FATC/MTC	Read Fault Code	
Sonata(LFA)	2016	USA	FATC/MTC	Clear Fault Memory	
Sonata(LFA)	2016	USA	FATC/MTC	Read Data Stream	
Sonata(LFA)	2016	USA	FATC/MTC	Actuation Test	
Sonata(LFA)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Sonata(LFA)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(LFA)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(LFA)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(LFA)	2016	USA	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(LFA)	2016	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata(LFA)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(LFA)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata(LFA)	2016	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)

model	year	area	system	function	subfunction
Sonata(LFA)	2016	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(LFA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(LFA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(LFA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(LFA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(LFA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(LFA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(LFA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(LFA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(LFA)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(LFA)	2016	USA	IMM(Immobilizer)	Read Fault Code	
Sonata(LFA)	2016	USA	IMM(Immobilizer)	Clear Fault Memory	
Sonata(LFA)	2016	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(LFA)	2016	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(LFA)	2016	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(LFA)	2016	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(LFA)	2016	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(LFA)	2016	USA	Smart Key Unit	Version Information	
Sonata(LFA)	2016	USA	Smart Key Unit	Read Fault Code	
Sonata(LFA)	2016	USA	Smart Key Unit	Clear Fault Memory	
Sonata(LFA)	2016	USA	Smart Key Unit	Read Data Stream	
Sonata(LFA)	2016	USA	Smart Key Unit	Actuation Test	
Sonata(LFA)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check
Sonata(LFA)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check
Sonata(LFA)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(LFA)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Sonata(LFA)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Sonata(LFA)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Sonata(LFA)	2016	USA	CCS(Cruise Control System)	Version Information	
Sonata(LFA)	2016	USA	CCS(Cruise Control System)	Read Fault Code	
Sonata(LFA)	2016	USA	CCS(Cruise Control System)	Clear Fault Memory	
Sonata(LFA)	2016	USA	CCS(Cruise Control System)	Read Data Stream	
Sonata(LFA)	2016	USA	CCS(Cruise Control System)	Special Function	Radar Sensor Alignment(SCC/AFD)
Sonata(LFA)	2016	USA	Assist Door Module	Version Information	
Sonata(LFA)	2016	USA	Assist Door Module	Read Fault Code	
Sonata(LFA)	2016	USA	Assist Door Module	Clear Fault Memory	
Sonata(LFA)	2016	USA	Assist Door Module	Read Data Stream	
Sonata(LFA)	2016	USA	Assist Door Module	Actuation Test	
Sonata(LFA)	2016	USA	AFS(Adaptive Front Lighting System)	Version Information	
Sonata(LFA)	2016	USA	AFS(Adaptive Front Lighting System)	Read Fault Code	
Sonata(LFA)	2016	USA	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Sonata(LFA)	2016	USA	AFS(Adaptive Front Lighting System)	Read Data Stream	
Sonata(LFA)	2016	USA	AFS(Adaptive Front Lighting System)	Actuation Test	
Sonata(LFA)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Headlamp Leveling
Sonata(LFA)	2016	USA	AFS(Adaptive Front Lighting System)	Special Function	Parameter Setting&Zero Position Initial
Sonata(LFA)	2016	USA	Autonomous Emergency Braking	Version Information	
Sonata(LFA)	2016	USA	Autonomous Emergency Braking	Read Fault Code	
Sonata(LFA)	2016	USA	Autonomous Emergency Braking	Clear Fault Memory	
Sonata(LFA)	2016	USA	Autonomous Emergency Braking	Read Data Stream	
Sonata(LFA)	2016	USA	Autonomous Emergency Braking	Special Function	Variant Coding
Sonata(LFA)	2016	USA	Blind Spot Detection	Version Information	
Sonata(LFA)	2016	USA	Blind Spot Detection	Read Fault Code	
Sonata(LFA)	2016	USA	Blind Spot Detection	Clear Fault Memory	
Sonata(LFA)	2016	USA	Blind Spot Detection	Read Data Stream	
Sonata(LFA)	2016	USA	Blind Spot Detection	Actuation Test	
Sonata(LFA)	2016	USA	Blind Spot Detection	Special Function	BSD Radar Calibration

model	year	area	system	function	subfunction
Sonata(LFA)	2016	USA	BCM(Body Control Module)	Version Information	
Sonata(LFA)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Sonata(LFA)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata(LFA)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(LFA)	2016	USA	BCM(Body Control Module)	Actuation Test	
Sonata(LFA)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Sonata(LFA)	2016	USA	Cluster Module	Version Information	
Sonata(LFA)	2016	USA	Cluster Module	Read Fault Code	
Sonata(LFA)	2016	USA	Cluster Module	Clear Fault Memory	
Sonata(LFA)	2016	USA	Cluster Module	Read Data Stream	
Sonata(LFA)	2016	USA	Cluster Module	Actuation Test	
Sonata(LFA)	2016	USA	Cluster Module	Special Function	CLU Variant Coding
Sonata(LFA)	2016	USA	Driver Door Module	Version Information	
Sonata(LFA)	2016	USA	Driver Door Module	Read Fault Code	
Sonata(LFA)	2016	USA	Driver Door Module	Clear Fault Memory	
Sonata(LFA)	2016	USA	Driver Door Module	Read Data Stream	
Sonata(LFA)	2016	USA	Driver Door Module	Actuation Test	
Sonata(LFA)	2016	USA	Driver Door Module	Special Function	User Option
Sonata(LFA)	2016	USA	EPB(Electrical Parking Brake)	Version Information	
Sonata(LFA)	2016	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Sonata(LFA)	2016	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Sonata(LFA)	2016	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Sonata(LFA)	2016	USA	EPB(Electrical Parking Brake)	Actuation Test	
Sonata(LFA)	2016	USA	Lane Departure Warning System	Version Information	
Sonata(LFA)	2016	USA	Lane Departure Warning System	Read Fault Code	
Sonata(LFA)	2016	USA	Lane Departure Warning System	Clear Fault Memory	
Sonata(LFA)	2016	USA	Lane Departure Warning System	Read Data Stream	
Sonata(LFA)	2016	USA	Lane Departure Warning System	Special Function	Variant Coding
Sonata(LFA)	2016	USA	Lane Departure Warning System	Special Function	SPTAC Calibration

model	year	area	system	function	subfunction
Sonata(LFA)	2016	USA	Occupant Classification Sensor	Version Information	
Sonata(LFA)	2016	USA	Occupant Classification Sensor	Read Fault Code	
Sonata(LFA)	2016	USA	Occupant Classification Sensor	Clear Fault Memory	
Sonata(LFA)	2016	USA	Occupant Classification Sensor	Read Data Stream	
Sonata(LFA)	2016	USA	Occupant Classification Sensor	Special Function	Body Sensor Reset
Sonata(LFA)	2016	USA	Power Seat Module	Version Information	
Sonata(LFA)	2016	USA	Power Seat Module	Read Fault Code	
Sonata(LFA)	2016	USA	Power Seat Module	Clear Fault Memory	
Sonata(LFA)	2016	USA	Power Seat Module	Read Data Stream	
Sonata(LFA)	2016	USA	Power Seat Module	Actuation Test	
Sonata(LFA)	2016	USA	Power Seat Module	Special Function	User Option
Sonata(LFA)	2016	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Sonata(LFA)	2016	USA	Smart Junction Block	Version Information	
Sonata(LFA)	2016	USA	Smart Junction Block	Read Fault Code	
Sonata(LFA)	2016	USA	Smart Junction Block	Clear Fault Memory	
Sonata(LFA)	2016	USA	Smart Junction Block	Read Data Stream	
Sonata(LFA)	2016	USA	Smart Junction Block	Actuation Test	
Sonata(LFA)	2016	USA	Smart Junction Block	Special Function	User Option
Sonata(LFA)	2016	USA	Telematics Unit	Version Information	
Sonata(LFA)	2016	USA	Telematics Unit	Read Fault Code	
Sonata(LFA)	2016	USA	Telematics Unit	Clear Fault Memory	
Sonata(LFA)	2016	USA	Transmitter Code Saving	Read Data Stream	
Sonata(LFA)	2016	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(LFA)	2016	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sonata(LFA)	2016	USA	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Version Information	
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Special Function	Engine Coolant Filling Mode
Sonata(LFA)	2015	USA	TCM(Transmission Control Module)	Version Information	
Sonata(LFA)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(LFA)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(LFA)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(LFA)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata(LFA)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(LFA)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(LFA)	2015	USA	TCM(Transmission Control Module)	Special Function	AT Adaptation Mode
Sonata(LFA)	2015	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(LFA)	2015	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(LFA)	2015	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(LFA)	2015	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(LFA)	2015	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(LFA)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset
Sonata(LFA)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Learning
Sonata(LFA)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata(LFA)	2015	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Sonata(LFA)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(LFA)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(LFA)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(LFA)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(LFA)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(LFA)	2015	USA	FATC/MTC	Version Information	
Sonata(LFA)	2015	USA	FATC/MTC	Read Fault Code	
Sonata(LFA)	2015	USA	FATC/MTC	Clear Fault Memory	
Sonata(LFA)	2015	USA	FATC/MTC	Read Data Stream	
Sonata(LFA)	2015	USA	FATC/MTC	Actuation Test	
Sonata(LFA)	2015	USA	FATC/MTC	Special Function	AC Compressor Test(LCV Type)
Sonata(LFA)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Sonata(LFA)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(LFA)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(LFA)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(LFA)	2015	USA	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(LFA)	2015	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata(LFA)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(LFA)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering ECU)
Sonata(LFA)	2015	USA	EPS(Electronic Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Sonata(LFA)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(LFA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(LFA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(LFA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(LFA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(LFA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(LFA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
Sonata(LFA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(LFA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(LFA)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(LFA)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(LFA)	2015	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(LFA)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(LFA)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(LFA)	2015	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(LFA)	2015	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(LFA)	2015	USA	Smart Key Unit	Version Information	
Sonata(LFA)	2015	USA	Smart Key Unit	Read Fault Code	
Sonata(LFA)	2015	USA	Smart Key Unit	Clear Fault Memory	
Sonata(LFA)	2015	USA	Smart Key Unit	Read Data Stream	
Sonata(LFA)	2015	USA	Smart Key Unit	Actuation Test	
Sonata(LFA)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check
Sonata(LFA)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check
Sonata(LFA)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information
Sonata(LFA)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Sonata(LFA)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Sonata(LFA)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Sonata(LFA)	2015	USA	CCS(Cruise Control System)	Version Information	
Sonata(LFA)	2015	USA	CCS(Cruise Control System)	Read Fault Code	
Sonata(LFA)	2015	USA	CCS(Cruise Control System)	Clear Fault Memory	
Sonata(LFA)	2015	USA	CCS(Cruise Control System)	Read Data Stream	
Sonata(LFA)	2015	USA	CCS(Cruise Control System)	Special Function	SCC Alignment
Sonata(LFA)	2015	USA	Assist Door Module	Version Information	
Sonata(LFA)	2015	USA	Assist Door Module	Read Fault Code	
Sonata(LFA)	2015	USA	Assist Door Module	Clear Fault Memory	
Sonata(LFA)	2015	USA	Assist Door Module	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(LFA)	2015	USA	Assist Door Module	Actuation Test	
Sonata(LFA)	2015	USA	Auto Headlamp Leveling System	Version Information	
Sonata(LFA)	2015	USA	Auto Headlamp Leveling System	Read Fault Code	
Sonata(LFA)	2015	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Sonata(LFA)	2015	USA	Auto Headlamp Leveling System	Read Data Stream	
Sonata(LFA)	2015	USA	Auto Headlamp Leveling System	Actuation Test	
Sonata(LFA)	2015	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Sonata(LFA)	2015	USA	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Sonata(LFA)	2015	USA	Blind Spot Detection	Version Information	
Sonata(LFA)	2015	USA	Blind Spot Detection	Read Fault Code	
Sonata(LFA)	2015	USA	Blind Spot Detection	Clear Fault Memory	
Sonata(LFA)	2015	USA	Blind Spot Detection	Read Data Stream	
Sonata(LFA)	2015	USA	Blind Spot Detection	Actuation Test	
Sonata(LFA)	2015	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata(LFA)	2015	USA	BCM(Body Control Module)	Version Information	
Sonata(LFA)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Sonata(LFA)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata(LFA)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(LFA)	2015	USA	BCM(Body Control Module)	Actuation Test	
Sonata(LFA)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Sonata(LFA)	2015	USA	Cluster Module	Version Information	
Sonata(LFA)	2015	USA	Cluster Module	Read Fault Code	
Sonata(LFA)	2015	USA	Cluster Module	Clear Fault Memory	
Sonata(LFA)	2015	USA	Cluster Module	Read Data Stream	
Sonata(LFA)	2015	USA	Cluster Module	Actuation Test	
Sonata(LFA)	2015	USA	Cluster Module	Special Function	CLU Variant Coding
Sonata(LFA)	2015	USA	Driver Door Module	Version Information	
Sonata(LFA)	2015	USA	Driver Door Module	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(LFA)	2015	USA	Driver Door Module	Clear Fault Memory	
Sonata(LFA)	2015	USA	Driver Door Module	Read Data Stream	
Sonata(LFA)	2015	USA	Driver Door Module	Actuation Test	
Sonata(LFA)	2015	USA	Driver Door Module	Special Function	User Option
Sonata(LFA)	2015	USA	EPB(Electrical Parking Brake)	Version Information	
Sonata(LFA)	2015	USA	EPB(Electrical Parking Brake)	Read Fault Code	
Sonata(LFA)	2015	USA	EPB(Electrical Parking Brake)	Clear Fault Memory	
Sonata(LFA)	2015	USA	EPB(Electrical Parking Brake)	Read Data Stream	
Sonata(LFA)	2015	USA	EPB(Electrical Parking Brake)	Actuation Test	
Sonata(LFA)	2015	USA	Lane Departure Warning System	Version Information	
Sonata(LFA)	2015	USA	Lane Departure Warning System	Read Fault Code	
Sonata(LFA)	2015	USA	Lane Departure Warning System	Clear Fault Memory	
Sonata(LFA)	2015	USA	Lane Departure Warning System	Read Data Stream	
Sonata(LFA)	2015	USA	Lane Departure Warning System	Special Function	SPTAC Calibration
Sonata(LFA)	2015	USA	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Sonata(LFA)	2015	USA	Occupant Classification Sensor	Version Information	
Sonata(LFA)	2015	USA	Occupant Classification Sensor	Read Fault Code	
Sonata(LFA)	2015	USA	Occupant Classification Sensor	Clear Fault Memory	
Sonata(LFA)	2015	USA	Occupant Classification Sensor	Read Data Stream	
Sonata(LFA)	2015	USA	Occupant Classification Sensor	Special Function	Body Sensor Reset
Sonata(LFA)	2015	USA	Power Seat Module	Version Information	
Sonata(LFA)	2015	USA	Power Seat Module	Read Fault Code	
Sonata(LFA)	2015	USA	Power Seat Module	Clear Fault Memory	
Sonata(LFA)	2015	USA	Power Seat Module	Read Data Stream	
Sonata(LFA)	2015	USA	Power Seat Module	Actuation Test	
Sonata(LFA)	2015	USA	Power Seat Module	Special Function	User Option
Sonata(LFA)	2015	USA	Power Seat Module	Special Function	Seat Limit Position Setting
Sonata(LFA)	2015	USA	Smart Junction Block	Version Information	
Sonata(LFA)	2015	USA	Smart Junction Block	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(LFA)	2015	USA	Smart Junction Block	Clear Fault Memory	
Sonata(LFA)	2015	USA	Smart Junction Block	Read Data Stream	
Sonata(LFA)	2015	USA	Smart Junction Block	Actuation Test	
Sonata(LFA)	2015	USA	Smart Junction Block	Special Function	User Option
Sonata(LFA)	2015	USA	Telematics Unit	Version Information	
Sonata(LFA)	2015	USA	Telematics Unit	Read Fault Code	
Sonata(LFA)	2015	USA	Telematics Unit	Clear Fault Memory	
Sonata(LFA)	2015	USA	Transmitter Code Saving	Read Data Stream	
Sonata(LFA)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(LFA)	2015	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sonata(LFA)	2015	USA	Dual Clutch Transmission	Version Information	
Sonata(LFA)	2015	USA	Dual Clutch Transmission	Read Fault Code	
Sonata(LFA)	2015	USA	Dual Clutch Transmission	Clear Fault Memory	
Sonata(LFA)	2015	USA	Dual Clutch Transmission	Read Data Stream	
Sonata(LFA)	2015	USA	Dual Clutch Transmission	Read FreezeData	
Sonata(LFA)	2015	USA	Dual Clutch Transmission	Actuation Test	
Sonata(LFA)	2015	USA	Dual Clutch Transmission	Special Function	DCT Learning Function
Sonata(LFA)	2015	USA	IMM(Immobilizer)	Read Fault Code	
Sonata(LFA)	2015	USA	IMM(Immobilizer)	Clear Fault Memory	
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Version Information	
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Special Function	GDI FUEL LEAK Test(Optional)
Sonata(YFA)	2014	USA	ECM(Engine Control Module)	Special Function	PCSV Test(Optional)
Sonata(YFA)	2014	USA	TCM(Transmission Control Module)	Version Information	
Sonata(YFA)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFA)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFA)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(YFA)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFA)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFA)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFA)	2014	USA	Electronic Stability Control	Version Information	
Sonata(YFA)	2014	USA	Electronic Stability Control	Read Fault Code	
Sonata(YFA)	2014	USA	Electronic Stability Control	Clear Fault Memory	
Sonata(YFA)	2014	USA	Electronic Stability Control	Read Data Stream	
Sonata(YFA)	2014	USA	Electronic Stability Control	Actuation Test	
Sonata(YFA)	2014	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Sonata(YFA)	2014	USA	Electronic Stability Control	Special Function	Air Bleeding Mode
Sonata(YFA)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFA)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFA)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFA)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFA)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(YFA)	2014	USA	AC(Air Conditioning)	Version Information	
Sonata(YFA)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Sonata(YFA)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFA)	2014	USA	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(YFA)	2014	USA	AC(Air Conditioning)	Actuation Test	
Sonata(YFA)	2014	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecv Type)
Sonata(YFA)	2014	USA	BCM(Body Control Module)	Version Information	
Sonata(YFA)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Sonata(YFA)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFA)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(YFA)	2014	USA	BCM(Body Control Module)	Actuation Test	
Sonata(YFA)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Sonata(YFA)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(YFA)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(YFA)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(YFA)	2014	USA	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(YFA)	2014	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata(YFA)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(YFA)	2014	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(YFA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(YFA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(YFA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(YFA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(YFA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(YFA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(YFA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(YFA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(YFA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(YFA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(YFA)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(YFA)	2014	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(YFA)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Sonata(YFA)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(YFA)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(YFA)	2014	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFA)	2014	USA	Smart Key	Version Information	
Sonata(YFA)	2014	USA	Smart Key	Read Fault Code	
Sonata(YFA)	2014	USA	Smart Key	Clear Fault Memory	
Sonata(YFA)	2014	USA	Smart Key	Read Data Stream	
Sonata(YFA)	2014	USA	Smart Key	Actuation Test	
Sonata(YFA)	2014	USA	Smart Key	Special Function	Smart Key Code Saving
Sonata(YFA)	2014	USA	Smart Key	Special Function	Antenna Status Check
Sonata(YFA)	2014	USA	Smart Key	Special Function	FOB Key Status Information
Sonata(YFA)	2014	USA	Smart Key	Special Function	Neutralization Mode
Sonata(YFA)	2014	USA	Smart Key	Special Function	PDM Status Information
Sonata(YFA)	2014	USA	Smart Key	Special Function	Serial Communication Line Check
Sonata(YFA)	2014	USA	Smart Key	Special Function	SMK Status Information
Sonata(YFA)	2014	USA	Smart Key	Special Function	TP Status Information
Sonata(YFA)	2014	USA	Transmitter Code Saving	Read Data Stream	
Sonata(YFA)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(YFA)	2014	USA	Blind Spot Detection	Version Information	
Sonata(YFA)	2014	USA	Blind Spot Detection	Read Fault Code	
Sonata(YFA)	2014	USA	Blind Spot Detection	Clear Fault Memory	
Sonata(YFA)	2014	USA	Blind Spot Detection	Read Data Stream	
Sonata(YFA)	2014	USA	Blind Spot Detection	Actuation Test	
Sonata(YFA)	2014	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Sonata(YFA)	2014	USA	Cluster Module	Version Information	
Sonata(YFA)	2014	USA	Cluster Module	Read Fault Code	
Sonata(YFA)	2014	USA	Cluster Module	Clear Fault Memory	
Sonata(YFA)	2014	USA	Cluster Module	Read Data Stream	
Sonata(YFA)	2014	USA	Cluster Module	Actuation Test	

model	year	area	system	function	subfunction
Sonata(YFA)	2014	USA	Smart Junction Block	Version Information	
Sonata(YFA)	2014	USA	Smart Junction Block	Read Fault Code	
Sonata(YFA)	2014	USA	Smart Junction Block	Clear Fault Memory	
Sonata(YFA)	2014	USA	Smart Junction Block	Read Data Stream	
Sonata(YFA)	2014	USA	Smart Junction Block	Actuation Test	
Sonata(YFA)	2014	USA	Telematics Unit	Version Information	
Sonata(YFA)	2014	USA	Telematics Unit	Read Fault Code	
Sonata(YFA)	2014	USA	Telematics Unit	Clear Fault Memory	
Sonata(YFA)	2014	USA	Weight Classification System	Version Information	
Sonata(YFA)	2014	USA	Weight Classification System	Read Fault Code	
Sonata(YFA)	2014	USA	Weight Classification System	Clear Fault Memory	
Sonata(YFA)	2014	USA	Weight Classification System	Read Data Stream	
Sonata(YFA)	2014	USA	Weight Classification System	Special Function	WCS Reset
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Version Information	
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Special Function	GDI FUEL LEAK Test(Optional)
Sonata(YFA)	2013	USA	ECM(Engine Control Module)	Special Function	PCSV Test(Optional)
Sonata(YFA)	2013	USA	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Sonata(YFA)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFA)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFA)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(YFA)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFA)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFA)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFA)	2013	USA	Electronic Stability Control	Version Information	
Sonata(YFA)	2013	USA	Electronic Stability Control	Read Fault Code	
Sonata(YFA)	2013	USA	Electronic Stability Control	Clear Fault Memory	
Sonata(YFA)	2013	USA	Electronic Stability Control	Read Data Stream	
Sonata(YFA)	2013	USA	Electronic Stability Control	Actuation Test	
Sonata(YFA)	2013	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Sonata(YFA)	2013	USA	Electronic Stability Control	Special Function	Air Bleeding Mode
Sonata(YFA)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFA)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFA)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFA)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFA)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(YFA)	2013	USA	AC(Air Conditioning)	Version Information	
Sonata(YFA)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Sonata(YFA)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFA)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Sonata(YFA)	2013	USA	AC(Air Conditioning)	Actuation Test	
Sonata(YFA)	2013	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Sonata(YFA)	2013	USA	BCM(Body Control Module)	Version Information	
Sonata(YFA)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Sonata(YFA)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFA)	2013	USA	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(YFA)	2013	USA	BCM(Body Control Module)	Actuation Test	
Sonata(YFA)	2013	USA	EPS(Electronic Power Steering)	Version Information	
Sonata(YFA)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(YFA)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(YFA)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(YFA)	2013	USA	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(YFA)	2013	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata(YFA)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(YFA)	2013	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(YFA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(YFA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(YFA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(YFA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(YFA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(YFA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(YFA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(YFA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(YFA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(YFA)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(YFA)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(YFA)	2013	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(YFA)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(YFA)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(YFA)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(YFA)	2013	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFA)	2013	USA	Smart Key	Version Information	
Sonata(YFA)	2013	USA	Smart Key	Read Fault Code	
Sonata(YFA)	2013	USA	Smart Key	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(YFA)	2013	USA	Smart Key	Read Data Stream	
Sonata(YFA)	2013	USA	Smart Key	Actuation Test	
Sonata(YFA)	2013	USA	Smart Key	Special Function	Smart Key Code Saving
Sonata(YFA)	2013	USA	Smart Key	Special Function	Antenna Status Check
Sonata(YFA)	2013	USA	Smart Key	Special Function	FOB Key Status Information
Sonata(YFA)	2013	USA	Smart Key	Special Function	Neutralization Mode
Sonata(YFA)	2013	USA	Smart Key	Special Function	PDM Status Information
Sonata(YFA)	2013	USA	Smart Key	Special Function	Serial Communication Line Check
Sonata(YFA)	2013	USA	Smart Key	Special Function	SMK Status Information
Sonata(YFA)	2013	USA	Smart Key	Special Function	TP Status Information
Sonata(YFA)	2013	USA	Transmitter Code Saving	Read Data Stream	
Sonata(YFA)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(YFA)	2013	USA	Cluster Module	Version Information	
Sonata(YFA)	2013	USA	Cluster Module	Read Fault Code	
Sonata(YFA)	2013	USA	Cluster Module	Clear Fault Memory	
Sonata(YFA)	2013	USA	Cluster Module	Read Data Stream	
Sonata(YFA)	2013	USA	Cluster Module	Actuation Test	
Sonata(YFA)	2013	USA	Smart Junction Block	Version Information	
Sonata(YFA)	2013	USA	Smart Junction Block	Read Fault Code	
Sonata(YFA)	2013	USA	Smart Junction Block	Clear Fault Memory	
Sonata(YFA)	2013	USA	Smart Junction Block	Read Data Stream	
Sonata(YFA)	2013	USA	Smart Junction Block	Actuation Test	
Sonata(YFA)	2013	USA	Telematics Unit	Version Information	
Sonata(YFA)	2013	USA	Telematics Unit	Read Fault Code	
Sonata(YFA)	2013	USA	Telematics Unit	Clear Fault Memory	
Sonata(YFA)	2013	USA	Weight Classification System	Version Information	
Sonata(YFA)	2013	USA	Weight Classification System	Read Fault Code	
Sonata(YFA)	2013	USA	Weight Classification System	Clear Fault Memory	
Sonata(YFA)	2013	USA	Weight Classification System	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(YFA)	2013	USA	Weight Classification System	Special Function	WCS Reset
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Version Information	
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Special Function	GDI FUEL LEAK Test(Optional)
Sonata(YFA)	2012	USA	ECM(Engine Control Module)	Special Function	PCSV Test(Optional)
Sonata(YFA)	2012	USA	TCM(Transmission Control Module)	Version Information	
Sonata(YFA)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFA)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFA)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(YFA)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFA)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFA)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFA)	2012	USA	Electronic Stability Control	Version Information	
Sonata(YFA)	2012	USA	Electronic Stability Control	Read Fault Code	
Sonata(YFA)	2012	USA	Electronic Stability Control	Clear Fault Memory	
Sonata(YFA)	2012	USA	Electronic Stability Control	Read Data Stream	
Sonata(YFA)	2012	USA	Electronic Stability Control	Actuation Test	

model	year	area	system	function	subfunction
Sonata(YFA)	2012	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Sonata(YFA)	2012	USA	Electronic Stability Control	Special Function	Reset(ESP/ESC)Only Air Bleeding Mode
Sonata(YFA)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFA)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFA)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFA)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFA)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(YFA)	2012	USA	AC(Air Conditioning)	Version Information	
Sonata(YFA)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Sonata(YFA)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFA)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Sonata(YFA)	2012	USA	AC(Air Conditioning)	Actuation Test	
Sonata(YFA)	2012	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Sonata(YFA)	2012	USA	BCM(Body Control Module)	Version Information	
Sonata(YFA)	2012	USA	BCM(Body Control Module)	Read Fault Code	
Sonata(YFA)	2012	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFA)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(YFA)	2012	USA	BCM(Body Control Module)	Actuation Test	
Sonata(YFA)	2012	USA	EPS(Electronic Power Steering)	Version Information	
Sonata(YFA)	2012	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(YFA)	2012	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(YFA)	2012	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(YFA)	2012	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata(YFA)	2012	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(YFA)	2012	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(YFA)	2012	USA	EPS(Electronic Power Steering)	Read FreezeData	
Sonata(YFA)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Sonata(YFA)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(YFA)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(YFA)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(YFA)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(YFA)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(YFA)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(YFA)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(YFA)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(YFA)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(YFA)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(YFA)	2012	USA	IMM(Immobilizer)	Special Function	Password
Sonata(YFA)	2012	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Sonata(YFA)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(YFA)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(YFA)	2012	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(YFA)	2012	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFA)	2012	USA	Smart Key	Version Information	
Sonata(YFA)	2012	USA	Smart Key	Read Fault Code	
Sonata(YFA)	2012	USA	Smart Key	Clear Fault Memory	
Sonata(YFA)	2012	USA	Smart Key	Read Data Stream	
Sonata(YFA)	2012	USA	Smart Key	Actuation Test	
Sonata(YFA)	2012	USA	Smart Key	Special Function	Smart Key Code Saving
Sonata(YFA)	2012	USA	Smart Key	Special Function	Antenna Status Check
Sonata(YFA)	2012	USA	Smart Key	Special Function	FOB Key Status Information
Sonata(YFA)	2012	USA	Smart Key	Special Function	Neutralization Mode
Sonata(YFA)	2012	USA	Smart Key	Special Function	PDM Status Information
Sonata(YFA)	2012	USA	Smart Key	Special Function	Serial Communication Line Check
Sonata(YFA)	2012	USA	Smart Key	Special Function	SMK Status Information
Sonata(YFA)	2012	USA	Smart Key	Special Function	TP Status Information
Sonata(YFA)	2012	USA	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(YFA)	2012	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(YFA)	2012	USA	Cluster Module	Version Information	
Sonata(YFA)	2012	USA	Cluster Module	Read Fault Code	
Sonata(YFA)	2012	USA	Cluster Module	Clear Fault Memory	
Sonata(YFA)	2012	USA	Cluster Module	Read Data Stream	
Sonata(YFA)	2012	USA	Cluster Module	Actuation Test	
Sonata(YFA)	2012	USA	Smart Junction Block	Version Information	
Sonata(YFA)	2012	USA	Smart Junction Block	Read Fault Code	
Sonata(YFA)	2012	USA	Smart Junction Block	Clear Fault Memory	
Sonata(YFA)	2012	USA	Smart Junction Block	Read Data Stream	
Sonata(YFA)	2012	USA	Smart Junction Block	Actuation Test	
Sonata(YFA)	2012	USA	Telematics Unit	Version Information	
Sonata(YFA)	2012	USA	Telematics Unit	Read Fault Code	
Sonata(YFA)	2012	USA	Telematics Unit	Clear Fault Memory	
Sonata(YFA)	2012	USA	Weight Classification System	Version Information	
Sonata(YFA)	2012	USA	Weight Classification System	Read Fault Code	
Sonata(YFA)	2012	USA	Weight Classification System	Clear Fault Memory	
Sonata(YFA)	2012	USA	Weight Classification System	Read Data Stream	
Sonata(YFA)	2012	USA	Weight Classification System	Special Function	WCS Reset
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Version Information	
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Special Function	GDI FUEL LEAK Test(Optional)
Sonata(YFA)	2011	USA	ECM(Engine Control Module)	Special Function	PCSV Test(Optional)
Sonata(YFA)	2011	USA	TCM(Transmission Control Module)	Version Information	
Sonata(YFA)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(YFA)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(YFA)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(YFA)	2011	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata(YFA)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(YFA)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(YFA)	2011	USA	Electronic Stability Control	Version Information	
Sonata(YFA)	2011	USA	Electronic Stability Control	Read Fault Code	
Sonata(YFA)	2011	USA	Electronic Stability Control	Clear Fault Memory	
Sonata(YFA)	2011	USA	Electronic Stability Control	Read Data Stream	
Sonata(YFA)	2011	USA	Electronic Stability Control	Actuation Test	
Sonata(YFA)	2011	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Sonata(YFA)	2011	USA	Electronic Stability Control	Special Function	Air Bleeding Mode
Sonata(YFA)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(YFA)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(YFA)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(YFA)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(YFA)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata(YFA)	2011	USA	AC(Air Conditioning)	Version Information	
Sonata(YFA)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Sonata(YFA)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata(YFA)	2011	USA	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(YFA)	2011	USA	AC(Air Conditioning)	Actuation Test	
Sonata(YFA)	2011	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(Ecv Type)
Sonata(YFA)	2011	USA	BCM(Body Control Module)	Version Information	
Sonata(YFA)	2011	USA	BCM(Body Control Module)	Read Fault Code	
Sonata(YFA)	2011	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata(YFA)	2011	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(YFA)	2011	USA	BCM(Body Control Module)	Actuation Test	
Sonata(YFA)	2011	USA	EPS(Electronic Power Steering)	Version Information	
Sonata(YFA)	2011	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(YFA)	2011	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(YFA)	2011	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(YFA)	2011	USA	EPS(Electronic Power Steering)	Special Function	ASP CALIBRATION
Sonata(YFA)	2011	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata(YFA)	2011	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata(YFA)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(YFA)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(YFA)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(YFA)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(YFA)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(YFA)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(YFA)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(YFA)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(YFA)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(YFA)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata(YFA)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(YFA)	2011	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(YFA)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(YFA)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Sonata(YFA)	2011	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(YFA)	2011	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(YFA)	2011	USA	Smart Key	Version Information	
Sonata(YFA)	2011	USA	Smart Key	Read Fault Code	
Sonata(YFA)	2011	USA	Smart Key	Clear Fault Memory	
Sonata(YFA)	2011	USA	Smart Key	Read Data Stream	
Sonata(YFA)	2011	USA	Smart Key	Actuation Test	
Sonata(YFA)	2011	USA	Smart Key	Special Function	Smart Key Code Saving
Sonata(YFA)	2011	USA	Smart Key	Special Function	Antenna Status Check
Sonata(YFA)	2011	USA	Smart Key	Special Function	FOB Key Status Information
Sonata(YFA)	2011	USA	Smart Key	Special Function	Neutralization Mode
Sonata(YFA)	2011	USA	Smart Key	Special Function	PDM Status Information
Sonata(YFA)	2011	USA	Smart Key	Special Function	Serial Communication Line Check
Sonata(YFA)	2011	USA	Smart Key	Special Function	SMK Status Information
Sonata(YFA)	2011	USA	Smart Key	Special Function	TP Status Information
Sonata(YFA)	2011	USA	Transmitter Code Saving	Read Data Stream	
Sonata(YFA)	2011	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(YFA)	2011	USA	Cluster Module	Version Information	
Sonata(YFA)	2011	USA	Cluster Module	Read Fault Code	
Sonata(YFA)	2011	USA	Cluster Module	Clear Fault Memory	
Sonata(YFA)	2011	USA	Cluster Module	Read Data Stream	
Sonata(YFA)	2011	USA	Cluster Module	Actuation Test	
Sonata(YFA)	2011	USA	Smart Junction Block	Version Information	
Sonata(YFA)	2011	USA	Smart Junction Block	Read Fault Code	
Sonata(YFA)	2011	USA	Smart Junction Block	Clear Fault Memory	
Sonata(YFA)	2011	USA	Smart Junction Block	Read Data Stream	
Sonata(YFA)	2011	USA	Smart Junction Block	Actuation Test	
Sonata(YFA)	2011	USA	Weight Classification System	Version Information	
Sonata(YFA)	2011	USA	Weight Classification System	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(YFA)	2011	USA	Weight Classification System	Clear Fault Memory	
Sonata(YFA)	2011	USA	Weight Classification System	Read Data Stream	
Sonata(YFA)	2011	USA	Weight Classification System	Special Function	WCS Reset
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Version Information	
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(NF)	2010	USA	TCM(Transmission Control Module)	Version Information	
Sonata(NF)	2010	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(NF)	2010	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(NF)	2010	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(NF)	2010	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata(NF)	2010	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(NF)	2010	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(NF)	2010	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(NF)	2010	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(NF)	2010	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(NF)	2010	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(NF)	2010	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(NF)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Steering Angle Sensor Calibration
Sonata(NF)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Calibration
Sonata(NF)	2010	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Sonata(NF)	2010	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Sonata(NF)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(NF)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(NF)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(NF)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(NF)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Sonata(NF)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Sonata(NF)	2010	USA	AC(Air Conditioning)	Version Information	
Sonata(NF)	2010	USA	AC(Air Conditioning)	Read Fault Code	
Sonata(NF)	2010	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata(NF)	2010	USA	AC(Air Conditioning)	Read Data Stream	
Sonata(NF)	2010	USA	AC(Air Conditioning)	Actuation Test	
Sonata(NF)	2010	USA	BCM(Body Control Module)	Version Information	
Sonata(NF)	2010	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(NF)	2010	USA	BCM(Body Control Module)	Actuation Test	
Sonata(NF)	2010	USA	BCM(Body Control Module)	Special Function	User Option
Sonata(NF)	2010	USA	EPS(Electronic Power Steering)	Version Information	
Sonata(NF)	2010	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(NF)	2010	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(NF)	2010	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(NF)	2010	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(NF)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(NF)	2010	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(NF)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(NF)	2010	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(NF)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(NF)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(NF)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sonata(NF)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Sonata(NF)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(NF)	2010	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(NF)	2010	USA	IMM(Immobilizer)	Special Function	Password
Sonata(NF)	2010	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Sonata(NF)	2010	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(NF)	2010	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(NF)	2010	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(NF)	2010	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(NF)	2010	USA	Transmitter Code Saving	Read Data Stream	
Sonata(NF)	2010	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(NF)	2010	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Version Information	
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(NF)	2009	USA	TCM(Transmission Control Module)	Version Information	
Sonata(NF)	2009	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(NF)	2009	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(NF)	2009	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(NF)	2009	USA	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Sonata(NF)	2009	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(NF)	2009	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(NF)	2009	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(NF)	2009	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(NF)	2009	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(NF)	2009	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(NF)	2009	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(NF)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Sonata(NF)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Confirmation
Sonata(NF)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Calibration
Sonata(NF)	2009	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(NF)	2009	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Sonata(NF)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(NF)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(NF)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(NF)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(NF)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Sonata(NF)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Sonata(NF)	2009	USA	AC(Air Conditioning)	Version Information	
Sonata(NF)	2009	USA	AC(Air Conditioning)	Read Fault Code	
Sonata(NF)	2009	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata(NF)	2009	USA	AC(Air Conditioning)	Read Data Stream	
Sonata(NF)	2009	USA	AC(Air Conditioning)	Actuation Test	
Sonata(NF)	2009	USA	BCM(Body Control Module)	Version Information	
Sonata(NF)	2009	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(NF)	2009	USA	BCM(Body Control Module)	Actuation Test	
Sonata(NF)	2009	USA	BCM(Body Control Module)	Special Function	User Option
Sonata(NF)	2009	USA	EPS(Electronic Power Steering)	Version Information	
Sonata(NF)	2009	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(NF)	2009	USA	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(NF)	2009	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(NF)	2009	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(NF)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(NF)	2009	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(NF)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(NF)	2009	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(NF)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(NF)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(NF)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sonata(NF)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(NF)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(NF)	2009	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(NF)	2009	USA	IMM(Immobilizer)	Special Function	Password
Sonata(NF)	2009	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Sonata(NF)	2009	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(NF)	2009	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(NF)	2009	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(NF)	2009	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(NF)	2009	USA	Transmitter Code Saving	Read Data Stream	
Sonata(NF)	2009	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(NF)	2009	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Version Information	
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(NF)	2008	USA	TCM(Transmission Control Module)	Version Information	
Sonata(NF)	2008	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(NF)	2008	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(NF)	2008	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(NF)	2008	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata(NF)	2008	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(NF)	2008	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(NF)	2008	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(NF)	2008	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(NF)	2008	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(NF)	2008	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(NF)	2008	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(NF)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Sonata(NF)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Sonata(NF)	2008	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(NF)	2008	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Sonata(NF)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(NF)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(NF)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(NF)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(NF)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Sonata(NF)	2008	USA	AC(Air Conditioning)	Version Information	
Sonata(NF)	2008	USA	AC(Air Conditioning)	Read Fault Code	
Sonata(NF)	2008	USA	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(NF)	2008	USA	AC(Air Conditioning)	Read Data Stream	
Sonata(NF)	2008	USA	AC(Air Conditioning)	Actuation Test	
Sonata(NF)	2008	USA	BCM(Body Control Module)	Version Information	
Sonata(NF)	2008	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(NF)	2008	USA	BCM(Body Control Module)	Actuation Test	
Sonata(NF)	2008	USA	BCM(Body Control Module)	Special Function	User Option
Sonata(NF)	2008	USA	EPS(Electronic Power Steering)	Version Information	
Sonata(NF)	2008	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(NF)	2008	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(NF)	2008	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(NF)	2008	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(NF)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(NF)	2008	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(NF)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(NF)	2008	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(NF)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(NF)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(NF)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sonata(NF)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(NF)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(NF)	2008	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(NF)	2008	USA	IMM(Immobilizer)	Special Function	Password
Sonata(NF)	2008	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Sonata(NF)	2008	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(NF)	2008	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(NF)	2008	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(NF)	2008	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(NF)	2008	USA	Transmitter Code Saving	Read Data Stream	
Sonata(NF)	2008	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Sonata(NF)	2008	USA	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Version Information	
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(NF)	2007	USA	TCM(Transmission Control Module)	Version Information	
Sonata(NF)	2007	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(NF)	2007	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(NF)	2007	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(NF)	2007	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata(NF)	2007	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(NF)	2007	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(NF)	2007	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(NF)	2007	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(NF)	2007	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(NF)	2007	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(NF)	2007	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(NF)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Sonata(NF)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Sonata(NF)	2007	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(NF)	2007	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Sonata(NF)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(NF)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(NF)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(NF)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(NF)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Sonata(NF)	2007	USA	AC(Air Conditioning)	Version Information	
Sonata(NF)	2007	USA	AC(Air Conditioning)	Read Fault Code	
Sonata(NF)	2007	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata(NF)	2007	USA	AC(Air Conditioning)	Read Data Stream	
Sonata(NF)	2007	USA	AC(Air Conditioning)	Actuation Test	
Sonata(NF)	2007	USA	BCM(Body Control Module)	Version Information	
Sonata(NF)	2007	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(NF)	2007	USA	BCM(Body Control Module)	Actuation Test	
Sonata(NF)	2007	USA	BCM(Body Control Module)	Special Function	User Option
Sonata(NF)	2007	USA	EPS(Electronic Power Steering)	Version Information	
Sonata(NF)	2007	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(NF)	2007	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(NF)	2007	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(NF)	2007	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(NF)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(NF)	2007	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(NF)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(NF)	2007	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(NF)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(NF)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(NF)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration

model	year	area	system	function	subfunction
Sonata(NF)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(NF)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(NF)	2007	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(NF)	2007	USA	IMM(Immobilizer)	Special Function	Password
Sonata(NF)	2007	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Sonata(NF)	2007	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(NF)	2007	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(NF)	2007	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(NF)	2007	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(NF)	2007	USA	Transmitter Code Saving	Read Data Stream	
Sonata(NF)	2007	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	Cylinder Power
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	Balance(Optional)
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Sonata(NF)	2007	USA	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Version Information	
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(NF)	2006	USA	TCM(Transmission Control Module)	Version Information	
Sonata(NF)	2006	USA	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(NF)	2006	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(NF)	2006	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(NF)	2006	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata(NF)	2006	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(NF)	2006	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(NF)	2006	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(NF)	2006	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(NF)	2006	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(NF)	2006	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(NF)	2006	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(NF)	2006	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected
Sonata(NF)	2006	USA	ABS(Anti-lock Braking System)	Special Function	Steering Angle Sensor Calibration
Sonata(NF)	2006	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(NF)	2006	USA	ABS(Anti-lock Braking System)	Special Function	Solenoid Valve Test
Sonata(NF)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(NF)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(NF)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(NF)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(NF)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Sonata(NF)	2006	USA	AC(Air Conditioning)	Version Information	
Sonata(NF)	2006	USA	AC(Air Conditioning)	Read Fault Code	
Sonata(NF)	2006	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata(NF)	2006	USA	AC(Air Conditioning)	Read Data Stream	
Sonata(NF)	2006	USA	AC(Air Conditioning)	Actuation Test	
Sonata(NF)	2006	USA	BCM(Body Control Module)	Version Information	
Sonata(NF)	2006	USA	BCM(Body Control Module)	Read Data Stream	
Sonata(NF)	2006	USA	BCM(Body Control Module)	Actuation Test	
Sonata(NF)	2006	USA	BCM(Body Control Module)	Special Function	User Option
Sonata(NF)	2006	USA	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Sonata(NF)	2006	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata(NF)	2006	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata(NF)	2006	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata(NF)	2006	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata(NF)	2006	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata(NF)	2006	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata(NF)	2006	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata(NF)	2006	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata(NF)	2006	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata(NF)	2006	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata(NF)	2006	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sonata(NF)	2006	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata(NF)	2006	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata(NF)	2006	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(NF)	2006	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata(NF)	2006	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata(NF)	2006	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata(NF)	2006	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata(NF)	2006	USA	Transmitter Code Saving	Read Data Stream	
Sonata(NF)	2006	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Sonata(NF)	2006	USA	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Sonata(NF)	2006	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-Trip Test
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	2005	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2005	USA	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2005	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	2005	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2005	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2005	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2005	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata(EF)	2005	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	2005	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2005	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2005	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2005	USA	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Sonata(EF)	2005	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(EF)	2005	USA	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2005	USA	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2005	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2005	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2005	USA	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2005	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	2005	USA	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	2005	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	2005	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode

model	year	area	system	function	subfunction
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	2004	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2004	USA	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2004	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	2004	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2004	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2004	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2004	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	2004	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2004	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2004	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2004	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2004	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(EF)	2004	USA	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2004	USA	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2004	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2004	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2004	USA	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2004	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	2004	USA	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	2004	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	2004	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	2003	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2003	USA	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2003	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	2003	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2003	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2003	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2003	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	2003	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2003	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2003	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2003	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2003	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(EF)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(EF)	2003	USA	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2003	USA	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2003	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2003	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2003	USA	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2003	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	2003	USA	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	2003	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	2003	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2002	USA	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2002	USA	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(EF)	2002	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2002	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2002	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2002	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2002	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2002	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2002	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2002	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2002	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata(EF)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(EF)	2002	USA	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2002	USA	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2002	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2002	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2002	USA	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2002	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	2002	USA	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	2002	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	2002	USA	Transmitter Code Saving	Special Function	Code Saving
Sonata(EF)	2002	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2001	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2001	USA	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2001	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	2001	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2001	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2001	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2001	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2001	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2001	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2001	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2001	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2001	USA	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2001	USA	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2001	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2001	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2001	USA	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2001	USA	IMM(Immobilizer)	Special Function	Neutral Mode

model	year	area	system	function	subfunction
Sonata(EF)	2001	USA	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	2001	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Version Information	
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	2000	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	2000	USA	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	2000	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	2000	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(EF)	2000	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	2000	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	2000	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	2000	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	2000	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	2000	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	2000	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Sonata(EF)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	2000	USA	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	2000	USA	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	2000	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	2000	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	2000	USA	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	2000	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	2000	USA	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	2000	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Version Information	
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sonata(EF)	1999	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Sonata(EF)	1999	USA	TCM(Transmission Control Module)	Version Information	
Sonata(EF)	1999	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(EF)	1999	USA	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata(EF)	1999	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(EF)	1999	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata(EF)	1999	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(EF)	1999	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(EF)	1999	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(EF)	1999	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata(EF)	1999	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata(EF)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata(EF)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(EF)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(EF)	1999	USA	IMM(Immobilizer)	Read Fault Code	
Sonata(EF)	1999	USA	IMM(Immobilizer)	Clear Fault Memory	
Sonata(EF)	1999	USA	IMM(Immobilizer)	Read Data Stream	
Sonata(EF)	1999	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
Sonata(EF)	1999	USA	IMM(Immobilizer)	Special Function	Password Record/Change
Sonata(EF)	1999	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Sonata(EF)	1999	USA	IMM(Immobilizer)	Special Function	Master Key Delete
Sonata(EF)	1999	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
Sonata(Y3)	1998	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(Y3)	1998	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(Y3)	1998	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(Y3)	1998	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(Y3)	1998	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y3)	1998	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y3)	1998	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y3)	1998	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(Y3)	1998	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(Y3)	1998	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(Y3)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(Y3)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(Y3)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(Y3)	1997	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(Y3)	1997	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(Y3)	1997	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(Y3)	1997	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(Y3)	1997	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y3)	1997	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y3)	1997	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y3)	1997	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(Y3)	1997	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(Y3)	1997	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(Y3)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(Y3)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(Y3)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(Y3)	1996	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(Y3)	1996	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(Y3)	1996	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(Y3)	1996	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(Y3)	1996	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y3)	1996	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y3)	1996	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y3)	1996	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(Y3)	1996	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(Y3)	1996	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(Y3)	1996	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(Y3)	1996	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(Y3)	1996	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(Y3)	1995	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(Y3)	1995	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(Y3)	1995	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(Y3)	1995	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(Y3)	1995	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y3)	1995	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y3)	1995	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y3)	1995	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(Y3)	1995	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(Y3)	1995	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(Y3)	1995	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(Y3)	1995	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(Y3)	1995	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(Y3)	1994	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(Y3)	1994	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(Y3)	1994	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(Y3)	1994	USA	ECM(Engine Control Module)	Actuation Test	
Sonata(Y3)	1994	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y3)	1994	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y3)	1994	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y3)	1994	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata(Y3)	1994	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata(Y3)	1994	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata(Y3)	1994	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata(Y3)	1994	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata(Y3)	1994	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata(Y2)	1994	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(Y2)	1994	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(Y2)	1994	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(Y2)	1994	USA	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata(Y2)	1994	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y2)	1994	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y2)	1993	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(Y2)	1993	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(Y2)	1993	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(Y2)	1993	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y2)	1993	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y2)	1993	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y2)	1992	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(Y2)	1992	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(Y2)	1992	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(Y2)	1992	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y2)	1992	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y2)	1992	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y2)	1991	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(Y2)	1991	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(Y2)	1991	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(Y2)	1991	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y2)	1991	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y2)	1991	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y2)	1990	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(Y2)	1990	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(Y2)	1990	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata(Y2)	1990	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y2)	1990	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y2)	1990	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata(Y2)	1989	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata(Y2)	1989	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata(Y2)	1989	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata(Y2)	1989	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata(Y2)	1989	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata(Y2)	1989	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Version Information	
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Read FreezeData	
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Sonata Hybrid(11-15Y)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Sonata Hybrid(11-15Y)	2015	USA	TCM(Transmission Control Module)	Version Information	
Sonata Hybrid(11-15Y)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Sonata Hybrid(11-15Y)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Sonata Hybrid(11-15Y)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(11-15Y)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hybrid(11-15Y)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(11-15Y)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(11-15Y)	2015	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(11-15Y)	2015	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(11-15Y)	2015	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Hybrid(1.4T HEV)	2015	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(1.4T HEV)	2015	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(YF HEV)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(1.4T HEV)	2015	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(1.4T HEV)	2015	USA	ABS(Anti-lock Braking System)	Special Function	AHB Variant Coding
Sonata Hybrid(1.4T HEV)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(1.4T HEV)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(1.4T HEV)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(1.4T HEV)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(1.4T HEV)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(1.4T HEV)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hybrid(1.4T HEV)	2015	USA	AC(Air Conditioning)	Version Information	
Sonata Hybrid(1.4T HEV)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Sonata Hybrid(1.4T HEV)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hybrid(1.4T HEV)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(1.4T HEV)	2015	USA	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(1.4T HEV)	2015	USA	BCM(Body Control Module)	Version Information	
Sonata Hybrid(1.4T HEV)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(1.4T HEV)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(1.4T HEV)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Sonata Hybrid(1.4T HEV)	2015	USA	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(1.4T HEV)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Sonata Hybrid(1.4T HEV)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Hybrid(1.4T HEV)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Hybrid(1.4T HEV)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hybrid(1.4T HEV)	2015	USA	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Hybrid(1.4T HEV)	2015	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
Sonata Hybrid(YF HEV)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(YF HEV)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(YF HEV)	2015	USA	Auto Headlamp Leveling System	Version Information	
Sonata Hybrid(YF HEV)	2015	USA	Auto Headlamp Leveling System	Read Fault Code	
Sonata Hybrid(YF HEV)	2015	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Sonata Hybrid(YF HEV)	2015	USA	Auto Headlamp Leveling System	Read Data Stream	
Sonata Hybrid(YF HEV)	2015	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Sonata Hybrid(YF HEV)	2015	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Sonata Hybrid(YF HEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Hybrid(YF HEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Hybrid(YF HEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata Hybrid(YF HEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Hybrid(YF HEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata Hybrid(YF HEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Hybrid(YF HEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Hybrid(YF HEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Hybrid(YF HEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Hybrid(YF HEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata Hybrid(YF HEV)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Sonata Hybrid(YF HEV)	2015	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Sonata Hybrid(YF HEV)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata Hybrid(YF HEV)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata Hybrid(YF HEV)	2015	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata Hybrid(YF HEV)	2015	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata Hybrid(YF HEV)	2015	USA	Smart Key	Version Information	
Sonata Hybrid(YF HEV)	2015	USA	Smart Key	Read Fault Code	
Sonata Hybrid(YF HEV)	2015	USA	Smart Key	Clear Fault Memory	
Sonata Hybrid(YF HEV)	2015	USA	Smart Key	Read Data Stream	

model	year	area	system	function	subfunction
2015 USA	2015	USA	Smart Key	Actuation Test	
2015 USA	2015	USA	Smart Key	Special Function	Smart Key Code Saving
2015 USA	2015	USA	Smart Key	Special Function	Antenna Status Check
2015 USA	2015	USA	Smart Key	Special Function	FOB Key Status Information
2015 USA	2015	USA	Smart Key	Special Function	Neutralization Mode
2015 USA	2015	USA	Smart Key	Special Function	PDM Status Information
2015 USA	2015	USA	Smart Key	Special Function	Serial Communication Line Check
2015 USA	2015	USA	Smart Key	Special Function	SMK Status Information
2015 USA	2015	USA	Smart Key	Special Function	TP Status Information
2015 USA	2015	USA	Transmitter Code Saving	Read Data Stream	
2015 USA	2015	USA	Transmitter Code Saving	Special Function	Code Saving
2015 USA	2015	USA	HEV Control System	Version Information	
2015 USA	2015	USA	HEV Control System	Read Fault Code	
2015 USA	2015	USA	HEV Control System	Clear Fault Memory	
2015 USA	2015	USA	HEV Control System	Read Data Stream	
2015 USA	2015	USA	HEV Control System	Read FreezeData	
2015 USA	2015	USA	HEV Control System	Special Function	E/C Fluid Pressure Cal.
2015 USA	2015	USA	HEV Control System	Special Function	Engine Test On
2015 USA	2015	USA	HEV Control System	Special Function	Engine Test Off
2015 USA	2015	USA	HEV Control System	Special Function	LDC Activation Test
2015 USA	2015	USA	Low DC/DC Converter	Version Information	
2015 USA	2015	USA	Low DC/DC Converter	Read Fault Code	
2015 USA	2015	USA	Low DC/DC Converter	Clear Fault Memory	
2015 USA	2015	USA	Low DC/DC Converter	Read Data Stream	
2015 USA	2015	USA	Low DC/DC Converter	Read FreezeData	
2015 USA	2015	USA	Active Air Flap	Version Information	
2015 USA	2015	USA	Active Air Flap	Read Fault Code	
2015 USA	2015	USA	Active Air Flap	Clear Fault Memory	
2015 USA	2015	USA	Active Air Flap	Read Data Stream	

model	year	area	system	function	subfunction
Subaru Legacy	2015	USA	Active Air Flap	Actuation Test	
Subaru Legacy	2015	USA	HEV Battery System	Version Information	
Subaru Legacy	2015	USA	HEV Battery System	Read Fault Code	
Subaru Legacy	2015	USA	HEV Battery System	Clear Fault Memory	
Subaru Legacy	2015	USA	HEV Battery System	Read Data Stream	
Subaru Legacy	2015	USA	HEV Battery System	Read FreezeData	
Subaru Legacy	2015	USA	HEV Battery System	Actuation Test	
Subaru Legacy	2015	USA	HEV Battery System	Special Function	Battery Inspection
Subaru Legacy	2015	USA	Cluster Module	Version Information	
Subaru Legacy	2015	USA	Cluster Module	Read Fault Code	
Subaru Legacy	2015	USA	Cluster Module	Clear Fault Memory	
Subaru Legacy	2015	USA	Cluster Module	Read Data Stream	
Subaru Legacy	2015	USA	Cluster Module	Actuation Test	
Subaru Legacy	2015	USA	HEV Motor System	Version Information	
Subaru Legacy	2015	USA	HEV Motor System	Read Fault Code	
Subaru Legacy	2015	USA	HEV Motor System	Clear Fault Memory	
Subaru Legacy	2015	USA	HEV Motor System	Read Data Stream	
Subaru Legacy	2015	USA	HEV Motor System	Read FreezeData	
Subaru Legacy	2015	USA	HEV Motor System	Actuation Test	
Subaru Legacy	2015	USA	HEV Motor System	Special Function	Electric water Pump motor ISO resolver Calibration
Subaru Legacy	2015	USA	HEV Motor System	Special Function	
Subaru Legacy	2015	USA	Smart Junction Block	Version Information	
Subaru Legacy	2015	USA	Smart Junction Block	Read Fault Code	
Subaru Legacy	2015	USA	Smart Junction Block	Clear Fault Memory	
Subaru Legacy	2015	USA	Smart Junction Block	Read Data Stream	
Subaru Legacy	2015	USA	Smart Junction Block	Actuation Test	
Subaru Legacy	2015	USA	Telematics Unit	Version Information	
Subaru Legacy	2015	USA	Telematics Unit	Read Fault Code	
Subaru Legacy	2015	USA	Telematics Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Subaru Legacy	2015	USA	Weight Classification System	Version Information	
Subaru Legacy	2015	USA	Weight Classification System	Read Fault Code	
Subaru Legacy	2015	USA	Weight Classification System	Clear Fault Memory	
Subaru Legacy	2015	USA	Weight Classification System	Read Data Stream	
Subaru Legacy	2015	USA	Weight Classification System	Special Function	WCS Reset
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Version Information	
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Actuation Test	
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Subaru Legacy	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Subaru Legacy	2014	USA	TCM(Transmission Control Module)	Version Information	
Subaru Legacy	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Subaru Legacy	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Subaru Legacy	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Subaru Legacy	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Subaru Legacy	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Subaru Legacy	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Subaru Legacy	2014	USA	ABS(Anti-lock Braking System)	Version Information	

model	year	area	system	function	subfunction
Sonata Hybrid(1.8T HEV)	2014	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2014	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2014	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2014	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(YF HEV)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(1.8T HEV)	2014	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(1.8T HEV)	2014	USA	ABS(Anti-lock Braking System)	Special Function	AHB Variant Coding
Sonata Hybrid(1.8T HEV)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Regular Travel
Sonata Hybrid(1.8T HEV)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Corner(DTC)Calibration
Sonata Hybrid(1.8T HEV)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(1.8T HEV)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(1.8T HEV)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hybrid(1.8T HEV)	2014	USA	AC(Air Conditioning)	Version Information	
Sonata Hybrid(1.8T HEV)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2014	USA	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(1.8T HEV)	2014	USA	BCM(Body Control Module)	Version Information	
Sonata Hybrid(1.8T HEV)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2014	USA	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(1.8T HEV)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Sonata Hybrid(1.8T HEV)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Hybrid(11U5YA)	2014	USA	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Hybrid(11U5YA)	2014	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata Hybrid(11U5YA)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(YF HEV)	2014	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(11U5YA)	2014	USA	Auto Headlamp Leveling System	Version Information	
Sonata Hybrid(11U5YA)	2014	USA	Auto Headlamp Leveling System	Read Fault Code	
Sonata Hybrid(11U5YA)	2014	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Sonata Hybrid(11U5YA)	2014	USA	Auto Headlamp Leveling System	Read Data Stream	
Sonata Hybrid(11U5YA)	2014	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Sonata Hybrid(11U5YA)	2014	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Sonata Hybrid(11U5YA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Hybrid(11U5YA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Hybrid(11U5YA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata Hybrid(11U5YA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Hybrid(11U5YA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata Hybrid(11U5YA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Hybrid(11U5YA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Hybrid(11U5YA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Hybrid(11U5YA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Hybrid(11U5YA)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata Hybrid(11U5YA)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Sonata Hybrid(11U5YA)	2014	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata Hybrid(11U5YA)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata Hybrid(11U5YA)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata Hybrid(11U5YA)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata Hybrid(11U5YA)	2014	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Sonata Hybrid(11U5YA)	2014	USA	Smart Key	Version Information	
Sonata Hybrid(11U5YA)	2014	USA	Smart Key	Read Fault Code	

model	year	area	system	function	subfunction
2014 USA	2014	USA	Smart Key	Clear Fault Memory	
2014 USA	2014	USA	Smart Key	Read Data Stream	
2014 USA	2014	USA	Smart Key	Actuation Test	
2014 USA	2014	USA	Smart Key	Special Function	Smart Key Code Saving
2014 USA	2014	USA	Smart Key	Special Function	Antenna Status Check
2014 USA	2014	USA	Smart Key	Special Function	FOB Key Status Information
2014 USA	2014	USA	Smart Key	Special Function	Neutralization Mode
2014 USA	2014	USA	Smart Key	Special Function	PDM Status Information
2014 USA	2014	USA	Smart Key	Special Function	Serial Communication Line Check
2014 USA	2014	USA	Smart Key	Special Function	SMK Status Information
2014 USA	2014	USA	Smart Key	Special Function	TP Status Information
2014 USA	2014	USA	Transmitter Code Saving	Read Data Stream	
2014 USA	2014	USA	Transmitter Code Saving	Special Function	Code Saving
2014 USA	2014	USA	HEV Control System	Version Information	
2014 USA	2014	USA	HEV Control System	Read Fault Code	
2014 USA	2014	USA	HEV Control System	Clear Fault Memory	
2014 USA	2014	USA	HEV Control System	Read Data Stream	
2014 USA	2014	USA	HEV Control System	Read FreezeData	
2014 USA	2014	USA	HEV Control System	Special Function	E/C Fluid Pressure Cal.
2014 USA	2014	USA	HEV Control System	Special Function	Engine Test On
2014 USA	2014	USA	HEV Control System	Special Function	Engine Test Off
2014 USA	2014	USA	HEV Control System	Special Function	LDC Activation Test
2014 USA	2014	USA	Low DC/DC Converter	Version Information	
2014 USA	2014	USA	Low DC/DC Converter	Read Fault Code	
2014 USA	2014	USA	Low DC/DC Converter	Clear Fault Memory	
2014 USA	2014	USA	Low DC/DC Converter	Read Data Stream	
2014 USA	2014	USA	Low DC/DC Converter	Read FreezeData	
2014 USA	2014	USA	Active Air Flap	Version Information	
2014 USA	2014	USA	Active Air Flap	Read Fault Code	

model	year	area	system	function	subfunction
3514ta nyctna(11	2014	USA	Active Air Flap	Clear Fault Memory	
3514ta nyctna(11	2014	USA	Active Air Flap	Read Data Stream	
3514ta nyctna(11	2014	USA	Active Air Flap	Actuation Test	
3514ta nyctna(11	2014	USA	HEV Battery System	Version Information	
3514ta nyctna(11	2014	USA	HEV Battery System	Read Fault Code	
3514ta nyctna(11	2014	USA	HEV Battery System	Clear Fault Memory	
3514ta nyctna(11	2014	USA	HEV Battery System	Read Data Stream	
3514ta nyctna(11	2014	USA	HEV Battery System	Read FreezeData	
3514ta nyctna(11	2014	USA	HEV Battery System	Actuation Test	
3514ta nyctna(11	2014	USA	HEV Battery System	Special Function	Battery Inspection
3514ta nyctna(11	2014	USA	Cluster Module	Version Information	
3514ta nyctna(11	2014	USA	Cluster Module	Read Fault Code	
3514ta nyctna(11	2014	USA	Cluster Module	Clear Fault Memory	
3514ta nyctna(11	2014	USA	Cluster Module	Read Data Stream	
3514ta nyctna(11	2014	USA	Cluster Module	Actuation Test	
3514ta nyctna(11	2014	USA	HEV Motor System	Version Information	
3514ta nyctna(11	2014	USA	HEV Motor System	Read Fault Code	
3514ta nyctna(11	2014	USA	HEV Motor System	Clear Fault Memory	
3514ta nyctna(11	2014	USA	HEV Motor System	Read Data Stream	
3514ta nyctna(11	2014	USA	HEV Motor System	Read FreezeData	
3514ta nyctna(11	2014	USA	HEV Motor System	Actuation Test	
3514ta nyctna(11	2014	USA	HEV Motor System	Special Function	Electric water Pump
3514ta nyctna(11	2014	USA	HEV Motor System	Special Function	motor h30 resolver
3514ta nyctna(11	2014	USA	Smart Junction Block	Version Information	Calibration
3514ta nyctna(11	2014	USA	Smart Junction Block	Read Fault Code	
3514ta nyctna(11	2014	USA	Smart Junction Block	Clear Fault Memory	
3514ta nyctna(11	2014	USA	Smart Junction Block	Read Data Stream	
3514ta nyctna(11	2014	USA	Smart Junction Block	Actuation Test	
3514ta nyctna(11	2014	USA	Telematics Unit	Version Information	

model	year	area	system	function	subfunction
Subaru Legacy	2014	USA	Telematics Unit	Read Fault Code	
Subaru Legacy	2014	USA	Telematics Unit	Clear Fault Memory	
Subaru Legacy	2014	USA	Weight Classification System	Version Information	
Subaru Legacy	2014	USA	Weight Classification System	Read Fault Code	
Subaru Legacy	2014	USA	Weight Classification System	Clear Fault Memory	
Subaru Legacy	2014	USA	Weight Classification System	Read Data Stream	
Subaru Legacy	2014	USA	Weight Classification System	Special Function	WCS Reset
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Version Information	
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Actuation Test	
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Subaru Legacy	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Subaru Legacy	2013	USA	TCM(Transmission Control Module)	Version Information	
Subaru Legacy	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Subaru Legacy	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Subaru Legacy	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Subaru Legacy	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Subaru Legacy	2013	USA	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sonata Hybrid(1.8T HEV)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(1.8T HEV)	2013	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(1.8T HEV)	2013	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2013	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2013	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2013	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(YF HEV)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(1.8T HEV)	2013	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(1.8T HEV)	2013	USA	ABS(Anti-lock Braking System)	Special Function	AHB Variant Coding
Sonata Hybrid(1.8T HEV)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Pedal Travel
Sonata Hybrid(1.8T HEV)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Corner(DTC)Calibration
Sonata Hybrid(1.8T HEV)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(1.8T HEV)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(1.8T HEV)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hybrid(1.8T HEV)	2013	USA	AC(Air Conditioning)	Version Information	
Sonata Hybrid(1.8T HEV)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2013	USA	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(1.8T HEV)	2013	USA	BCM(Body Control Module)	Version Information	
Sonata Hybrid(1.8T HEV)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2013	USA	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(1.8T HEV)	2013	USA	EPS(Electronic Power Steering)	Version Information	
Sonata Hybrid(1.8T HEV)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Hybrid(11U51A)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Hybrid(11U51A)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hybrid(11U51A)	2013	USA	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Hybrid(11U51A)	2013	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata Hybrid(11U51A)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(YF HEV)	2013	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(11U51A)	2013	USA	Auto Headlamp Leveling System	Version Information	
Sonata Hybrid(11U51A)	2013	USA	Auto Headlamp Leveling System	Read Fault Code	
Sonata Hybrid(11U51A)	2013	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Sonata Hybrid(11U51A)	2013	USA	Auto Headlamp Leveling System	Read Data Stream	
Sonata Hybrid(11U51A)	2013	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Sonata Hybrid(11U51A)	2013	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Sonata Hybrid(11U51A)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Hybrid(11U51A)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Hybrid(11U51A)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata Hybrid(11U51A)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Hybrid(11U51A)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata Hybrid(11U51A)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Hybrid(11U51A)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Hybrid(11U51A)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Hybrid(11U51A)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Hybrid(11U51A)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata Hybrid(11U51A)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Sonata Hybrid(11U51A)	2013	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata Hybrid(11U51A)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata Hybrid(11U51A)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata Hybrid(11U51A)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Sonata Hybrid(11U51A)	2013	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
3514ta nyctna(11	2013	USA	Smart Key	Version Information	
3514ta nyctna(11	2013	USA	Smart Key	Read Fault Code	
3514ta nyctna(11	2013	USA	Smart Key	Clear Fault Memory	
3514ta nyctna(11	2013	USA	Smart Key	Read Data Stream	
3514ta nyctna(11	2013	USA	Smart Key	Actuation Test	
3514ta nyctna(11	2013	USA	Smart Key	Special Function	Smart Key Code Saving
3514ta nyctna(11	2013	USA	Smart Key	Special Function	Antenna Status Check
3514ta nyctna(11	2013	USA	Smart Key	Special Function	FOB Key Status Information
3514ta nyctna(11	2013	USA	Smart Key	Special Function	Neutralization Mode
3514ta nyctna(11	2013	USA	Smart Key	Special Function	PDM Status Information
3514ta nyctna(11	2013	USA	Smart Key	Special Function	Serial Communication Line Check
3514ta nyctna(11	2013	USA	Smart Key	Special Function	SMK Status Information
3514ta nyctna(11	2013	USA	Smart Key	Special Function	TP Status Information
3514ta nyctna(11	2013	USA	Transmitter Code Saving	Read Data Stream	
3514ta nyctna(11	2013	USA	Transmitter Code Saving	Special Function	Code Saving
3514ta nyctna(11	2013	USA	HEV Control System	Version Information	
3514ta nyctna(11	2013	USA	HEV Control System	Read Fault Code	
3514ta nyctna(11	2013	USA	HEV Control System	Clear Fault Memory	
3514ta nyctna(11	2013	USA	HEV Control System	Read Data Stream	
3514ta nyctna(11	2013	USA	HEV Control System	Read FreezeData	
3514ta nyctna(11	2013	USA	HEV Control System	Special Function	E/C Fluid Pressure Cal.
3514ta nyctna(11	2013	USA	HEV Control System	Special Function	Engine Test On
3514ta nyctna(11	2013	USA	HEV Control System	Special Function	Engine Test Off
3514ta nyctna(11	2013	USA	HEV Control System	Special Function	LDC Activation Test
3514ta nyctna(11	2013	USA	Low DC/DC Converter	Version Information	
3514ta nyctna(11	2013	USA	Low DC/DC Converter	Read Fault Code	
3514ta nyctna(11	2013	USA	Low DC/DC Converter	Clear Fault Memory	
3514ta nyctna(11	2013	USA	Low DC/DC Converter	Read Data Stream	
3514ta nyctna(11	2013	USA	Low DC/DC Converter	Read FreezeData	

model	year	area	system	function	subfunction
2013 USA	2013	USA	Active Air Flap	Version Information	
2013 USA	2013	USA	Active Air Flap	Read Fault Code	
2013 USA	2013	USA	Active Air Flap	Clear Fault Memory	
2013 USA	2013	USA	Active Air Flap	Read Data Stream	
2013 USA	2013	USA	Active Air Flap	Actuation Test	
2013 USA	2013	USA	HEV Battery System	Version Information	
2013 USA	2013	USA	HEV Battery System	Read Fault Code	
2013 USA	2013	USA	HEV Battery System	Clear Fault Memory	
2013 USA	2013	USA	HEV Battery System	Read Data Stream	
2013 USA	2013	USA	HEV Battery System	Read FreezeData	
2013 USA	2013	USA	HEV Battery System	Actuation Test	
2013 USA	2013	USA	HEV Battery System	Special Function	Battery Inspection
2013 USA	2013	USA	Cluster Module	Version Information	
2013 USA	2013	USA	Cluster Module	Read Fault Code	
2013 USA	2013	USA	Cluster Module	Clear Fault Memory	
2013 USA	2013	USA	Cluster Module	Read Data Stream	
2013 USA	2013	USA	Cluster Module	Actuation Test	
2013 USA	2013	USA	HEV Motor System	Version Information	
2013 USA	2013	USA	HEV Motor System	Read Fault Code	
2013 USA	2013	USA	HEV Motor System	Clear Fault Memory	
2013 USA	2013	USA	HEV Motor System	Read Data Stream	
2013 USA	2013	USA	HEV Motor System	Read FreezeData	
2013 USA	2013	USA	HEV Motor System	Actuation Test	
2013 USA	2013	USA	HEV Motor System	Special Function	Electric water Pump
2013 USA	2013	USA	HEV Motor System	Special Function	motor IISU resolver
2013 USA	2013	USA	HEV Motor System	Special Function	Calibration
2013 USA	2013	USA	Smart Junction Block	Version Information	
2013 USA	2013	USA	Smart Junction Block	Read Fault Code	
2013 USA	2013	USA	Smart Junction Block	Clear Fault Memory	
2013 USA	2013	USA	Smart Junction Block	Read Data Stream	

model	year	area	system	function	subfunction
Subaru Legacy	2013	USA	Smart Junction Block	Actuation Test	
Subaru Legacy	2013	USA	Telematics Unit	Version Information	
Subaru Legacy	2013	USA	Telematics Unit	Read Fault Code	
Subaru Legacy	2013	USA	Telematics Unit	Clear Fault Memory	
Subaru Legacy	2013	USA	Weight Classification System	Version Information	
Subaru Legacy	2013	USA	Weight Classification System	Read Fault Code	
Subaru Legacy	2013	USA	Weight Classification System	Clear Fault Memory	
Subaru Legacy	2013	USA	Weight Classification System	Read Data Stream	
Subaru Legacy	2013	USA	Weight Classification System	Special Function	WCS Reset
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Version Information	
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Read Fault Code	
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Actuation Test	
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test HEV
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Subaru Legacy	2012	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Subaru Legacy	2012	USA	TCM(Transmission Control Module)	Version Information	
Subaru Legacy	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Subaru Legacy	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Subaru Legacy	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Subaru Legacy	2012	USA	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Sonata Hybrid(1.8T HEV)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(1.8T HEV)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(1.8T HEV)	2012	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(1.8T HEV)	2012	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2012	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2012	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2012	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(YF HEV)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(1.8T HEV)	2012	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(1.8T HEV)	2012	USA	ABS(Anti-lock Braking System)	Special Function	AHB Variant Coding
Sonata Hybrid(1.8T HEV)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Brake Travel Sensor(DTC)Calibration
Sonata Hybrid(1.8T HEV)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(1.8T HEV)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(1.8T HEV)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hybrid(1.8T HEV)	2012	USA	AC(Air Conditioning)	Version Information	
Sonata Hybrid(1.8T HEV)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2012	USA	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(1.8T HEV)	2012	USA	BCM(Body Control Module)	Version Information	
Sonata Hybrid(1.8T HEV)	2012	USA	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(1.8T HEV)	2012	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(1.8T HEV)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Sonata Hybrid(1.8T HEV)	2012	USA	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(1.8T HEV)	2012	USA	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Sonata Hybrid(11U51A)	2012	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Hybrid(11U51A)	2012	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Hybrid(11U51A)	2012	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hybrid(11U51A)	2012	USA	EPS(Electronic Power Steering)	Read FreezeData	
Sonata Hybrid(11U51A)	2012	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata Hybrid(11U51A)	2012	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(YF HEV)	2012	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(11U51A)	2012	USA	Auto Headlamp Leveling System	Version Information	
Sonata Hybrid(11U51A)	2012	USA	Auto Headlamp Leveling System	Read Fault Code	
Sonata Hybrid(11U51A)	2012	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Sonata Hybrid(11U51A)	2012	USA	Auto Headlamp Leveling System	Read Data Stream	
Sonata Hybrid(11U51A)	2012	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Sonata Hybrid(11U51A)	2012	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Sonata Hybrid(11U51A)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Hybrid(11U51A)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Hybrid(11U51A)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata Hybrid(11U51A)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Hybrid(11U51A)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata Hybrid(11U51A)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Hybrid(11U51A)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Hybrid(11U51A)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Hybrid(11U51A)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Hybrid(11U51A)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata Hybrid(11U51A)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Sonata Hybrid(11U51A)	2012	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata Hybrid(11U51A)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata Hybrid(11U51A)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Sonata Hybrid(11U51A)	2012	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
2012 USA	2012	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
2012 USA	2012	USA	Smart Key	Version Information	
2012 USA	2012	USA	Smart Key	Read Fault Code	
2012 USA	2012	USA	Smart Key	Clear Fault Memory	
2012 USA	2012	USA	Smart Key	Read Data Stream	
2012 USA	2012	USA	Smart Key	Actuation Test	
2012 USA	2012	USA	Smart Key	Special Function	Smart Key Code Saving
2012 USA	2012	USA	Smart Key	Special Function	Antenna Status Check
2012 USA	2012	USA	Smart Key	Special Function	FOB Key Status Information
2012 USA	2012	USA	Smart Key	Special Function	Neutralization Mode
2012 USA	2012	USA	Smart Key	Special Function	PDM Status Information
2012 USA	2012	USA	Smart Key	Special Function	Serial Communication Line Check
2012 USA	2012	USA	Smart Key	Special Function	SMK Status Information
2012 USA	2012	USA	Smart Key	Special Function	TP Status Information
2012 USA	2012	USA	Transmitter Code Saving	Read Data Stream	
2012 USA	2012	USA	Transmitter Code Saving	Special Function	Code Saving
2012 USA	2012	USA	HEV Control System	Version Information	
2012 USA	2012	USA	HEV Control System	Read Fault Code	
2012 USA	2012	USA	HEV Control System	Clear Fault Memory	
2012 USA	2012	USA	HEV Control System	Read Data Stream	
2012 USA	2012	USA	HEV Control System	Read FreezeData	
2012 USA	2012	USA	HEV Control System	Special Function	E/C Fluid Pressure Cal.
2012 USA	2012	USA	HEV Control System	Special Function	Engine Test On
2012 USA	2012	USA	HEV Control System	Special Function	Engine Test Off
2012 USA	2012	USA	HEV Control System	Special Function	LDC Activation Test
2012 USA	2012	USA	Low DC/DC Converter	Version Information	
2012 USA	2012	USA	Low DC/DC Converter	Read Fault Code	
2012 USA	2012	USA	Low DC/DC Converter	Clear Fault Memory	
2012 USA	2012	USA	Low DC/DC Converter	Read Data Stream	

model	year	area	system	function	subfunction
3514ta nyctna(11	2012	USA	Low DC/DC Converter	Read FreezeData	
3514ta nyctna(11	2012	USA	Active Air Flap	Version Information	
3514ta nyctna(11	2012	USA	Active Air Flap	Read Fault Code	
3514ta nyctna(11	2012	USA	Active Air Flap	Clear Fault Memory	
3514ta nyctna(11	2012	USA	Active Air Flap	Read Data Stream	
3514ta nyctna(11	2012	USA	Active Air Flap	Actuation Test	
3514ta nyctna(11	2012	USA	HEV Battery System	Version Information	
3514ta nyctna(11	2012	USA	HEV Battery System	Read Fault Code	
3514ta nyctna(11	2012	USA	HEV Battery System	Clear Fault Memory	
3514ta nyctna(11	2012	USA	HEV Battery System	Read Data Stream	
3514ta nyctna(11	2012	USA	HEV Battery System	Read FreezeData	
3514ta nyctna(11	2012	USA	HEV Battery System	Actuation Test	
3514ta nyctna(11	2012	USA	HEV Battery System	Special Function	Battery Inspection
3514ta nyctna(11	2012	USA	Cluster Module	Version Information	
3514ta nyctna(11	2012	USA	Cluster Module	Read Fault Code	
3514ta nyctna(11	2012	USA	Cluster Module	Clear Fault Memory	
3514ta nyctna(11	2012	USA	Cluster Module	Read Data Stream	
3514ta nyctna(11	2012	USA	Cluster Module	Actuation Test	
3514ta nyctna(11	2012	USA	HEV Motor System	Version Information	
3514ta nyctna(11	2012	USA	HEV Motor System	Read Fault Code	
3514ta nyctna(11	2012	USA	HEV Motor System	Clear Fault Memory	
3514ta nyctna(11	2012	USA	HEV Motor System	Read Data Stream	
3514ta nyctna(11	2012	USA	HEV Motor System	Read FreezeData	
3514ta nyctna(11	2012	USA	HEV Motor System	Actuation Test	
3514ta nyctna(11	2012	USA	HEV Motor System	Special Function	Electric water Pump
3514ta nyctna(11	2012	USA	HEV Motor System	Special Function	motor HCU resolver
3514ta nyctna(11	2012	USA	Smart Junction Block	Version Information	Calibration
3514ta nyctna(11	2012	USA	Smart Junction Block	Read Fault Code	
3514ta nyctna(11	2012	USA	Smart Junction Block	Clear Fault Memory	

model	year	area	system	function	subfunction
Subaru Legacy	2012	USA	Smart Junction Block	Read Data Stream	
Subaru Legacy	2012	USA	Smart Junction Block	Actuation Test	
Subaru Legacy	2012	USA	Telematics Unit	Version Information	
Subaru Legacy	2012	USA	Telematics Unit	Read Fault Code	
Subaru Legacy	2012	USA	Telematics Unit	Clear Fault Memory	
Subaru Legacy	2012	USA	Weight Classification System	Version Information	
Subaru Legacy	2012	USA	Weight Classification System	Read Fault Code	
Subaru Legacy	2012	USA	Weight Classification System	Clear Fault Memory	
Subaru Legacy	2012	USA	Weight Classification System	Read Data Stream	
Subaru Legacy	2012	USA	Weight Classification System	Special Function	WCS Reset
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Version Information	
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Read FreezeData	
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Actuation Test	
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test HEV
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Subaru Legacy	2011	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Subaru Legacy	2011	USA	TCM(Transmission Control Module)	Version Information	
Subaru Legacy	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Subaru Legacy	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sonata Hybrid(1.8T)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Sonata Hybrid(1.8T)	2011	USA	TCM(Transmission Control Module)	Read FreezeData	
Sonata Hybrid(1.8T)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Sonata Hybrid(1.8T)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sonata Hybrid(1.8T)	2011	USA	ABS(Anti-lock Braking System)	Version Information	
Sonata Hybrid(1.8T)	2011	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Sonata Hybrid(1.8T)	2011	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Sonata Hybrid(1.8T)	2011	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Sonata Hybrid(1.8T)	2011	USA	ABS(Anti-lock Braking System)	Actuation Test	
Sonata Hybrid(YF HEV)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Sonata Hybrid(1.8T)	2011	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Sonata Hybrid(1.8T)	2011	USA	ABS(Anti-lock Braking System)	Special Function	AHB Variant Coding
Sonata Hybrid(1.8T)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Rear Travel Sensor(DTC)Calibration
Sonata Hybrid(1.8T)	2011	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Sonata Hybrid(1.8T)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Sonata Hybrid(1.8T)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sonata Hybrid(1.8T)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sonata Hybrid(1.8T)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sonata Hybrid(1.8T)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sonata Hybrid(1.8T)	2011	USA	AC(Air Conditioning)	Version Information	
Sonata Hybrid(1.8T)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Sonata Hybrid(1.8T)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Sonata Hybrid(1.8T)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Sonata Hybrid(1.8T)	2011	USA	AC(Air Conditioning)	Actuation Test	
Sonata Hybrid(1.8T)	2011	USA	BCM(Body Control Module)	Version Information	
Sonata Hybrid(1.8T)	2011	USA	BCM(Body Control Module)	Read Fault Code	
Sonata Hybrid(1.8T)	2011	USA	BCM(Body Control Module)	Clear Fault Memory	
Sonata Hybrid(1.8T)	2011	USA	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sonata Hybrid(11U51A)	2011	USA	BCM(Body Control Module)	Actuation Test	
Sonata Hybrid(11U51A)	2011	USA	EPS(Electronic Power Steering)	Version Information	
Sonata Hybrid(11U51A)	2011	USA	EPS(Electronic Power Steering)	Read Fault Code	
Sonata Hybrid(11U51A)	2011	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Sonata Hybrid(11U51A)	2011	USA	EPS(Electronic Power Steering)	Read Data Stream	
Sonata Hybrid(11U51A)	2011	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Sonata Hybrid(11U51A)	2011	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Sonata Hybrid(YF HEV)	2011	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Sonata Hybrid(11U51A)	2011	USA	Auto Headlamp Leveling System	Version Information	
Sonata Hybrid(11U51A)	2011	USA	Auto Headlamp Leveling System	Read Fault Code	
Sonata Hybrid(11U51A)	2011	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Sonata Hybrid(11U51A)	2011	USA	Auto Headlamp Leveling System	Read Data Stream	
Sonata Hybrid(11U51A)	2011	USA	Auto Headlamp Leveling System	Special Function	Level Initialization
Sonata Hybrid(11U51A)	2011	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Sonata Hybrid(11U51A)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Sonata Hybrid(11U51A)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sonata Hybrid(11U51A)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sonata Hybrid(11U51A)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sonata Hybrid(11U51A)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sonata Hybrid(11U51A)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sonata Hybrid(11U51A)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sonata Hybrid(11U51A)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sonata Hybrid(11U51A)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sonata Hybrid(11U51A)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Sonata Hybrid(11U51A)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Sonata Hybrid(11U51A)	2011	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Sonata Hybrid(11U51A)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Sonata Hybrid(11U51A)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
351Aata nybna(11	2011	USA	IMM(Immobilizer)	Special Function	Teaching
351Aata nybna(11	2011	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
351Aata nybna(11	2011	USA	Smart Key	Version Information	
351Aata nybna(11	2011	USA	Smart Key	Read Fault Code	
351Aata nybna(11	2011	USA	Smart Key	Clear Fault Memory	
351Aata nybna(11	2011	USA	Smart Key	Read Data Stream	
351Aata nybna(11	2011	USA	Smart Key	Actuation Test	
351Aata nybna(11	2011	USA	Smart Key	Special Function	Smart Key Code Saving
351Aata nybna(11	2011	USA	Smart Key	Special Function	Antenna Status Check
351Aata nybna(11	2011	USA	Smart Key	Special Function	FOB Key Status Information
351Aata nybna(11	2011	USA	Smart Key	Special Function	Neutralization Mode
351Aata nybna(11	2011	USA	Smart Key	Special Function	PDM Status Information
351Aata nybna(11	2011	USA	Smart Key	Special Function	Serial Communication Line Check
351Aata nybna(11	2011	USA	Smart Key	Special Function	SMK Status Information
351Aata nybna(11	2011	USA	Smart Key	Special Function	TP Status Information
351Aata nybna(11	2011	USA	Transmitter Code Saving	Read Data Stream	
351Aata nybna(11	2011	USA	Transmitter Code Saving	Special Function	Code Saving
351Aata nybna(11	2011	USA	HEV Control System	Version Information	
351Aata nybna(11	2011	USA	HEV Control System	Read Fault Code	
351Aata nybna(11	2011	USA	HEV Control System	Clear Fault Memory	
351Aata nybna(11	2011	USA	HEV Control System	Read Data Stream	
351Aata nybna(11	2011	USA	HEV Control System	Read FreezeData	
351Aata nybna(11	2011	USA	HEV Control System	Special Function	E/C Fluid Pressure Cal.
351Aata nybna(11	2011	USA	HEV Control System	Special Function	Engine Test On
351Aata nybna(11	2011	USA	HEV Control System	Special Function	Engine Test Off
351Aata nybna(11	2011	USA	HEV Control System	Special Function	LDC Activation Test
351Aata nybna(11	2011	USA	Low DC/DC Converter	Version Information	
351Aata nybna(11	2011	USA	Low DC/DC Converter	Read Fault Code	
351Aata nybna(11	2011	USA	Low DC/DC Converter	Clear Fault Memory	

model	year	area	system	function	subfunction
Subaru Legacy (11)	2011	USA	Low DC/DC Converter	Read Data Stream	
Subaru Legacy (11)	2011	USA	Low DC/DC Converter	Read FreezeData	
Subaru Legacy (11)	2011	USA	Active Air Flap	Version Information	
Subaru Legacy (11)	2011	USA	Active Air Flap	Read Fault Code	
Subaru Legacy (11)	2011	USA	Active Air Flap	Clear Fault Memory	
Subaru Legacy (11)	2011	USA	Active Air Flap	Read Data Stream	
Subaru Legacy (11)	2011	USA	Active Air Flap	Actuation Test	
Subaru Legacy (11)	2011	USA	HEV Battery System	Version Information	
Subaru Legacy (11)	2011	USA	HEV Battery System	Read Fault Code	
Subaru Legacy (11)	2011	USA	HEV Battery System	Clear Fault Memory	
Subaru Legacy (11)	2011	USA	HEV Battery System	Read Data Stream	
Subaru Legacy (11)	2011	USA	HEV Battery System	Read FreezeData	
Subaru Legacy (11)	2011	USA	HEV Battery System	Actuation Test	
Subaru Legacy (11)	2011	USA	HEV Battery System	Special Function	Battery Inspection
Subaru Legacy (11)	2011	USA	Cluster Module	Version Information	
Subaru Legacy (11)	2011	USA	Cluster Module	Read Fault Code	
Subaru Legacy (11)	2011	USA	Cluster Module	Clear Fault Memory	
Subaru Legacy (11)	2011	USA	Cluster Module	Read Data Stream	
Subaru Legacy (11)	2011	USA	Cluster Module	Actuation Test	
Subaru Legacy (11)	2011	USA	HEV Motor System	Version Information	
Subaru Legacy (11)	2011	USA	HEV Motor System	Read Fault Code	
Subaru Legacy (11)	2011	USA	HEV Motor System	Clear Fault Memory	
Subaru Legacy (11)	2011	USA	HEV Motor System	Read Data Stream	
Subaru Legacy (11)	2011	USA	HEV Motor System	Read FreezeData	
Subaru Legacy (11)	2011	USA	HEV Motor System	Actuation Test	
Subaru Legacy (11)	2011	USA	HEV Motor System	Special Function	Electric water Pump motor ISO resolver
Subaru Legacy (11)	2011	USA	HEV Motor System	Special Function	Calibration
Subaru Legacy (11)	2011	USA	Smart Junction Block	Version Information	
Subaru Legacy (11)	2011	USA	Smart Junction Block	Read Fault Code	

model	year	area	system	function	subfunction
Sonata Hybrid(1.7T)	2011	USA	Smart Junction Block	Clear Fault Memory	
Sonata Hybrid(1.7T)	2011	USA	Smart Junction Block	Read Data Stream	
Sonata Hybrid(1.7T)	2011	USA	Smart Junction Block	Actuation Test	
Sonata Hybrid(1.7T)	2011	USA	Weight Classification System	Version Information	
Sonata Hybrid(1.7T)	2011	USA	Weight Classification System	Read Fault Code	
Sonata Hybrid(1.7T)	2011	USA	Weight Classification System	Clear Fault Memory	
Sonata Hybrid(1.7T)	2011	USA	Weight Classification System	Read Data Stream	
Sonata Hybrid(1.7T)	2011	USA	Weight Classification System	Special Function	WCS Reset
Tucson Fcev(LM FCEV)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tucson Fcev(LM FCEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson Fcev(LM FCEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson Fcev(LM FCEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson Fcev(LM FCEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Tucson Fcev(LM FCEV)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Wheel Travel Sensor(DTC)Calibration
Tucson Fcev(LM FCEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson Fcev(LM FCEV)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson Fcev(LM FCEV)	2017	USA	AC(Air Conditioning)	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2017	USA	AC(Air Conditioning)	Actuation Test	
Tucson Fcev(LM FCEV)	2017	USA	BCM(Body Control Module)	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	BCM(Body Control Module)	Actuation Test	
Tucson Fcev(LM FCEV)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Tucson Fcev(LM FCEV)	2017	USA	EPS(Electronic Power Steering)	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	EPS(Electronic Power Steering)	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	EPS(Electronic Power Steering)	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson Fcev(LM FCEV)	2017	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Special Function	Smart Key Code Saving
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Actuation Test	
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Special Function	Antenna Status Check
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Special Function	Serial Communication Line Check
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Special Function	Neutralization Mode
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Special Function	SMK Status Information
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Special Function	TP Status Information
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Special Function	FOB Key Status Information
Tucson Fcev(LM FCEV)	2017	USA	Smart Key	Special Function	PDM Status Information
Tucson Fcev(LM FCEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson Fcev(LM FCEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson Fcev(LM FCEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson Fcev(LM FCEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson Fcev(LM FCEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson Fcev(LM FCEV)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson Fcev(LM FCEV)	2017	USA	Blower Pump Control Unit	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	Blower Pump Control Unit	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	Blower Pump Control Unit	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	Blower Pump Control Unit	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	Blower Pump Control Unit	Read FreezeData	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Cell System	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Cell System	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Cell System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Cell System	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Cell System	Read FreezeData	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Cell System	Actuation Test	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Cell System	Special Function	EWP Actuating
Tucson Fcev(LM FCEV)	2017	USA	Fuel Cell System	Special Function	Air Cut Off Valve Open Mode
Tucson Fcev(LM FCEV)	2017	USA	Fuel Cell System	Special Function	Solenoid Valve Inspection
Tucson Fcev(LM FCEV)	2017	USA	Fuel Cell System	Special Function	Stack Coolant Pump Actuating
Tucson Fcev(LM FCEV)	2017	USA	Fuel Cell System	Special Function	FC Run Stop
Tucson Fcev(LM FCEV)	2017	USA	Fuel Processing Driver	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Processing Driver	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Processing Driver	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Processing Driver	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Processing Driver	Read FreezeData	
Tucson Fcev(LM FCEV)	2017	USA	Fuel Processing Driver	Actuation Test	

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2017	USA	EV Battery System	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	EV Battery System	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	EV Battery System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	EV Battery System	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	EV Battery System	Read FreezeData	
Tucson Fcev(LM FCEV)	2017	USA	EV Battery System	Actuation Test	
Tucson Fcev(LM FCEV)	2017	USA	High DC/DC Converter	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	High DC/DC Converter	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	High DC/DC Converter	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	High DC/DC Converter	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	High DC/DC Converter	Read FreezeData	
Tucson Fcev(LM FCEV)	2017	USA	FCEV Motor Control System	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	FCEV Motor Control System	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	FCEV Motor Control System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	FCEV Motor Control System	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	FCEV Motor Control System	Read FreezeData	
Tucson Fcev(LM FCEV)	2017	USA	Hydrogen Storage System	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	Hydrogen Storage System	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	Hydrogen Storage System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	Hydrogen Storage System	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	Hydrogen Storage System	Actuation Test	
Tucson Fcev(LM FCEV)	2017	USA	Hydrogen Storage System	Special Function	Read The Number Of Refueling
Tucson Fcev(LM FCEV)	2017	USA	Low DC/DC Converter	Version Information	
Tucson Fcev(LM FCEV)	2017	USA	Low DC/DC Converter	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	Low DC/DC Converter	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	Low DC/DC Converter	Read Data Stream	
Tucson Fcev(LM FCEV)	2017	USA	Low DC/DC Converter	Read FreezeData	
Tucson Fcev(LM FCEV)	2017	USA	Low DC/DC Converter	Actuation Test	
Tucson Fcev(LM FCEV)	2017	USA	Stack Volt Monitor	Version Information	

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2017	USA	Stack Volt Monitor	Read Fault Code	
Tucson Fcev(LM FCEV)	2017	USA	Stack Volt Monitor	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2017	USA	Stack Volt Monitor	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	ABS(Anti-lock Braking System)	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson Fcev(LM FCEV)	2016	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson Fcev(LM FCEV)	2016	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson Fcev(LM FCEV)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Tucson Fcev(LM FCEV)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Pedal Travel Sensor(DTC)Calibration
Tucson Fcev(LM FCEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson Fcev(LM FCEV)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson Fcev(LM FCEV)	2016	USA	AC(Air Conditioning)	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	AC(Air Conditioning)	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	BCM(Body Control Module)	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2016	USA	BCM(Body Control Module)	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Tucson Fcev(LM FCEV)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson Fcev(LM FCEV)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson Fcev(LM FCEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson Fcev(LM FCEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson Fcev(LM FCEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson Fcev(LM FCEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson Fcev(LM FCEV)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Special Function	Antenna Status Check
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Special Function	Serial Communication Line Check
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Special Function	Neutralization Mode
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Special Function	SMK Status Information
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Special Function	TP Status Information
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Special Function	FOB Key Status Information

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Special Function	PDM Status Information
Tucson Fcev(LM FCEV)	2016	USA	Smart Key	Special Function	Smart Key Code Saving
Tucson Fcev(LM FCEV)	2016	USA	Low DC/DC Converter	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	Low DC/DC Converter	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	Low DC/DC Converter	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	Low DC/DC Converter	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	Low DC/DC Converter	Read FreezeData	
Tucson Fcev(LM FCEV)	2016	USA	Low DC/DC Converter	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	EV Battery System	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	EV Battery System	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	EV Battery System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	EV Battery System	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	EV Battery System	Read FreezeData	
Tucson Fcev(LM FCEV)	2016	USA	EV Battery System	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	Blower Pump Control Unit	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	Blower Pump Control Unit	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	Blower Pump Control Unit	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	Blower Pump Control Unit	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	Blower Pump Control Unit	Read FreezeData	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Cell System	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Cell System	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Cell System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Cell System	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Cell System	Read FreezeData	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Cell System	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Cell System	Special Function	EWP Actuating
Tucson Fcev(LM FCEV)	2016	USA	Fuel Cell System	Special Function	Air Cut Off Valve Open Mode
Tucson Fcev(LM FCEV)	2016	USA	Fuel Cell System	Special Function	Solenoid Valve Inspection
Tucson Fcev(LM FCEV)	2016	USA	Fuel Cell System	Special Function	Stack Coolant Pump Actuating

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2016	USA	Fuel Cell System	Special Function	FC Run Stop
Tucson Fcev(LM FCEV)	2016	USA	Fuel Processing Driver	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Processing Driver	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Processing Driver	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Processing Driver	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Processing Driver	Read FreezeData	
Tucson Fcev(LM FCEV)	2016	USA	Fuel Processing Driver	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	High DC/DC Convertor	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	High DC/DC Convertor	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	High DC/DC Convertor	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	High DC/DC Convertor	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	High DC/DC Convertor	Read FreezeData	
Tucson Fcev(LM FCEV)	2016	USA	Hydrogen Storage System	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	Hydrogen Storage System	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	Hydrogen Storage System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	Hydrogen Storage System	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	Hydrogen Storage System	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	Hydrogen Storage System	Special Function	read the number of Refueling
Tucson Fcev(LM FCEV)	2016	USA	FCEV Motor Control System	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	FCEV Motor Control System	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	FCEV Motor Control System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	FCEV Motor Control System	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	FCEV Motor Control System	Read FreezeData	
Tucson Fcev(LM FCEV)	2016	USA	Power Distribution Module	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	Power Distribution Module	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	Power Distribution Module	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	Power Distribution Module	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	Power Distribution Module	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	Smart Junction Block	Version Information	

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2016	USA	Smart Junction Block	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	Smart Junction Block	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	Smart Junction Block	Read Data Stream	
Tucson Fcev(LM FCEV)	2016	USA	Smart Junction Block	Actuation Test	
Tucson Fcev(LM FCEV)	2016	USA	Stack Volt Monitor	Version Information	
Tucson Fcev(LM FCEV)	2016	USA	Stack Volt Monitor	Read Fault Code	
Tucson Fcev(LM FCEV)	2016	USA	Stack Volt Monitor	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2016	USA	Stack Volt Monitor	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	ABS(Anti-lock Braking System)	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson Fcev(LM FCEV)	2015	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson Fcev(LM FCEV)	2015	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson Fcev(LM FCEV)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Pressure Sensor Calibration
Tucson Fcev(LM FCEV)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Pedal Travel Sensor(DTC)Calibration
Tucson Fcev(LM FCEV)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson Fcev(LM FCEV)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson Fcev(LM FCEV)	2015	USA	AC(Air Conditioning)	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2015	USA	AC(Air Conditioning)	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	BCM(Body Control Module)	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	BCM(Body Control Module)	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Tucson Fcev(LM FCEV)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson Fcev(LM FCEV)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson Fcev(LM FCEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson Fcev(LM FCEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson Fcev(LM FCEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson Fcev(LM FCEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson Fcev(LM FCEV)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Special Function	Serial Communication Line Check
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Special Function	Neutralization Mode
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Special Function	SMK Status Information
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Special Function	TP Status Information
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Special Function	FOB Key Status Information
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Special Function	PDM Status Information
Tucson Fcev(LM FCEV)	2015	USA	Smart Key	Special Function	Smart Key Code Saving
Tucson Fcev(LM FCEV)	2015	USA	Low DC/DC Converter	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	Low DC/DC Converter	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	Low DC/DC Converter	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	Low DC/DC Converter	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	Low DC/DC Converter	Read FreezeData	
Tucson Fcev(LM FCEV)	2015	USA	Low DC/DC Converter	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	EV Battery System	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	EV Battery System	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	EV Battery System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	EV Battery System	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	EV Battery System	Read FreezeData	
Tucson Fcev(LM FCEV)	2015	USA	EV Battery System	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	Blower Pump Control Unit	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	Blower Pump Control Unit	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	Blower Pump Control Unit	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	Blower Pump Control Unit	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	Blower Pump Control Unit	Read FreezeData	
Tucson Fcev(LM FCEV)	2015	USA	Fuel Cell System	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	Fuel Cell System	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	Fuel Cell System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	Fuel Cell System	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	Fuel Cell System	Read FreezeData	

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2015	USA	Fuel Cell System	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	Fuel Cell System	Special Function	EWP Actuating
Tucson Fcev(LM FCEV)	2015	USA	Fuel Cell System	Special Function	Air Cut Off Valve Open Mode
Tucson Fcev(LM FCEV)	2015	USA	Fuel Cell System	Special Function	Solenoid Valve Inspection
Tucson Fcev(LM FCEV)	2015	USA	Fuel Cell System	Special Function	Stack Coolant Pump Actuating
Tucson Fcev(LM FCEV)	2015	USA	Fuel Cell System	Special Function	FC Run Stop
Tucson Fcev(LM FCEV)	2015	USA	Fuel Processing Driver	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	Fuel Processing Driver	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	Fuel Processing Driver	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	Fuel Processing Driver	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	Fuel Processing Driver	Read FreezeData	
Tucson Fcev(LM FCEV)	2015	USA	Fuel Processing Driver	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	High DC/DC Convertor	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	High DC/DC Convertor	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	High DC/DC Convertor	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	High DC/DC Convertor	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	High DC/DC Convertor	Read FreezeData	
Tucson Fcev(LM FCEV)	2015	USA	Hydrogen Storage System	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	Hydrogen Storage System	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	Hydrogen Storage System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	Hydrogen Storage System	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	Hydrogen Storage System	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	Hydrogen Storage System	Special Function	read the number of Refueling
Tucson Fcev(LM FCEV)	2015	USA	FCEV Motor Control System	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	FCEV Motor Control System	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	FCEV Motor Control System	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	FCEV Motor Control System	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	FCEV Motor Control System	Read FreezeData	
Tucson Fcev(LM FCEV)	2015	USA	Power Distribution Module	Version Information	

model	year	area	system	function	subfunction
Tucson Fcev(LM FCEV)	2015	USA	Power Distribution Module	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	Power Distribution Module	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	Power Distribution Module	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	Power Distribution Module	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	Smart Junction Block	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	Smart Junction Block	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	Smart Junction Block	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	Smart Junction Block	Read Data Stream	
Tucson Fcev(LM FCEV)	2015	USA	Smart Junction Block	Actuation Test	
Tucson Fcev(LM FCEV)	2015	USA	Stack Volt Monitor	Version Information	
Tucson Fcev(LM FCEV)	2015	USA	Stack Volt Monitor	Read Fault Code	
Tucson Fcev(LM FCEV)	2015	USA	Stack Volt Monitor	Clear Fault Memory	
Tucson Fcev(LM FCEV)	2015	USA	Stack Volt Monitor	Read Data Stream	
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Version Information	
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(TL)	2018	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TL)	2018	USA	Dual Clutch Transmission	Version Information	
Tucson(TL)	2018	USA	Dual Clutch Transmission	Read Fault Code	
Tucson(TL)	2018	USA	Dual Clutch Transmission	Clear Fault Memory	
Tucson(TL)	2018	USA	Dual Clutch Transmission	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(TL)	2018	USA	Dual Clutch Transmission	Read FreezeData	
Tucson(TL)	2018	USA	Dual Clutch Transmission	Actuation Test	
Tucson(TL)	2018	USA	Dual Clutch Transmission	Special Function	DCT Learning Function
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Version Information	
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only)
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Assembly Check(ECU Replacement)
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Special Function	AEB Variant Coding
Tucson(TL)	2018	USA	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Tucson(TL)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TL)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TL)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TL)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TL)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TL)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Tucson(TL)	2018	USA	AC(Air Conditioning)	Version Information	
Tucson(TL)	2018	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(TL)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TL)	2018	USA	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(TL)	2018	USA	AC(Air Conditioning)	Actuation Test	
Tucson(TL)	2018	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Tucson)
Tucson(TL)	2018	USA	BCM(Body Control Module)	Version Information	
Tucson(TL)	2018	USA	BCM(Body Control Module)	Read Fault Code	
Tucson(TL)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TL)	2018	USA	BCM(Body Control Module)	Read Data Stream	
Tucson(TL)	2018	USA	BCM(Body Control Module)	Actuation Test	
Tucson(TL)	2018	USA	BCM(Body Control Module)	Special Function	User Option
Tucson(TL)	2018	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding
Tucson(TL)	2018	USA	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TL)	2018	USA	Power Tail Gate	Version Information	
Tucson(TL)	2018	USA	Power Tail Gate	Read Fault Code	
Tucson(TL)	2018	USA	Power Tail Gate	Clear Fault Memory	
Tucson(TL)	2018	USA	Power Tail Gate	Read Data Stream	
Tucson(TL)	2018	USA	Power Tail Gate	Special Function	User Option
Tucson(TL)	2018	USA	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Tucson(TL)	2018	USA	Tire Pressure Monitoring	Version Information	
Tucson(TL)	2018	USA	Tire Pressure Monitoring	Read Fault Code	
Tucson(TL)	2018	USA	Tire Pressure Monitoring	Clear Fault Memory	
Tucson(TL)	2018	USA	Tire Pressure Monitoring	Read Data Stream	
Tucson(TL)	2018	USA	Tire Pressure Monitoring	Special Function	Write VIN
Tucson(TL)	2018	USA	Tire Pressure Monitoring	Special Function	Wheel Sensor ID Writing
Tucson(TL)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Reading
Tucson(TL)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Writing
Tucson(TL)	2018	USA	Tire Pressure Monitoring	Special Function	TPMS TEST
Tucson(TL)	2018	USA	AHLS(Auto Headlamp Leveling System)	Version Information	
Tucson(TL)	2018	USA	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Tucson(TL)	2018	USA	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Tucson(TL)	2018	USA	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(TL)	2018	USA	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Tucson(TL)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Tucson(TL)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Tucson(TL)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Tucson(TL)	2018	USA	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Tucson(TL)	2018	USA	Motor Driven Power Steering	Version Information	
Tucson(TL)	2018	USA	Motor Driven Power Steering	Read Fault Code	
Tucson(TL)	2018	USA	Motor Driven Power Steering	Clear Fault Memory	
Tucson(TL)	2018	USA	Motor Driven Power Steering	Read Data Stream	
Tucson(TL)	2018	USA	Motor Driven Power Steering	Special Function	ASP Calibration
Tucson(TL)	2018	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
Tucson(TL)	2018	USA	4WD Control	Version Information	
Tucson(TL)	2018	USA	4WD Control	Read Fault Code	
Tucson(TL)	2018	USA	4WD Control	Clear Fault Memory	
Tucson(TL)	2018	USA	4WD Control	Read Data Stream	
Tucson(TL)	2018	USA	4WD Control	Actuation Test	
Tucson(TL)	2018	USA	4WD Control	Special Function	Clutch Learning Read
Tucson(TL)	2018	USA	4WD Control	Special Function	Clutch Learning Reset
Tucson(TL)	2018	USA	4WD Control	Special Function	Clutch Learning Write
Tucson(TL)	2018	USA	Smart Key Unit	Version Information	
Tucson(TL)	2018	USA	Smart Key Unit	Read Fault Code	
Tucson(TL)	2018	USA	Smart Key Unit	Clear Fault Memory	
Tucson(TL)	2018	USA	Smart Key Unit	Read Data Stream	
Tucson(TL)	2018	USA	Smart Key Unit	Actuation Test	
Tucson(TL)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TL)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TL)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TL)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Tucson(TL)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
Tucson(TL)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TL)	2018	USA	Blind Spot Detection	Version Information	
Tucson(TL)	2018	USA	Blind Spot Detection	Read Fault Code	
Tucson(TL)	2018	USA	Blind Spot Detection	Clear Fault Memory	
Tucson(TL)	2018	USA	Blind Spot Detection	Read Data Stream	
Tucson(TL)	2018	USA	Blind Spot Detection	Actuation Test	
Tucson(TL)	2018	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Tucson(TL)	2018	USA	Lane Departure Warning System	Version Information	
Tucson(TL)	2018	USA	Lane Departure Warning System	Read Fault Code	
Tucson(TL)	2018	USA	Lane Departure Warning System	Clear Fault Memory	
Tucson(TL)	2018	USA	Lane Departure Warning System	Read Data Stream	
Tucson(TL)	2018	USA	Lane Departure Warning System	Special Function	SPTAC Calibration
Tucson(TL)	2018	USA	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Tucson(TL)	2018	USA	Lane Departure Warning System	Special Function	SPC Calibration
Tucson(TL)	2018	USA	Amplifier	Version Information	
Tucson(TL)	2018	USA	Amplifier	Special Function	AMP Operation Test
Tucson(TL)	2018	USA	IMM(Immobilizer)	Read Fault Code	
Tucson(TL)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TL)	2018	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(TL)	2018	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Tucson(TL)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TL)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TL)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
Tucson(TL)	2018	USA	Transmitter Code Saving	Read Data Stream	
Tucson(TL)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(TL)	2018	USA	TCM(Transmission Control Module)	Version Information	
Tucson(TL)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TL)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(TL)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TL)	2018	USA	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TL)	2018	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(TL)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Version Information	
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(TL)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TL)	2017	USA	TCM(Transmission Control Module)	Version Information	
Tucson(TL)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TL)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TL)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TL)	2017	USA	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TL)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(TL)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Version Information	
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only)
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Assembly Check(ECU Replacement)
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Special Function	AEB Variant Coding
Tucson(TL)	2017	USA	ABS(Anti-lock Braking System)	Special Function	Radar Sensor Alignment(SCG/AFB)
Tucson(TL)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TL)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TL)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TL)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TL)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TL)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Tucson(TL)	2017	USA	AC(Air Conditioning)	Version Information	
Tucson(TL)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(TL)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TL)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(TL)	2017	USA	AC(Air Conditioning)	Actuation Test	
Tucson(TL)	2017	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(ECV Type)
Tucson(TL)	2017	USA	BCM(Body Control Module)	Version Information	
Tucson(TL)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Tucson(TL)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TL)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Tucson(TL)	2017	USA	BCM(Body Control Module)	Actuation Test	
Tucson(TL)	2017	USA	BCM(Body Control Module)	Special Function	CLU Variant Coding

model	year	area	system	function	subfunction
Tucson(TL)	2017	USA	BCM(Body Control Module)	Special Function	Service Reminder Setting
Tucson(TL)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Tucson(TL)	2017	USA	MDPS(Motor Driven Power Steering)	Version Information	
Tucson(TL)	2017	USA	MDPS(Motor Driven Power Steering)	Read Fault Code	
Tucson(TL)	2017	USA	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Tucson(TL)	2017	USA	MDPS(Motor Driven Power Steering)	Read Data Stream	
Tucson(TL)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Tucson(TL)	2017	USA	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Tucson(TL)	2017	USA	Smart Key Unit	Version Information	
Tucson(TL)	2017	USA	Smart Key Unit	Read Fault Code	
Tucson(TL)	2017	USA	Smart Key Unit	Clear Fault Memory	
Tucson(TL)	2017	USA	Smart Key Unit	Read Data Stream	
Tucson(TL)	2017	USA	Smart Key Unit	Actuation Test	
Tucson(TL)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Tucson(TL)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TL)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TL)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TL)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
Tucson(TL)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TL)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(TL)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(TL)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(TL)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(TL)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(TL)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(TL)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(TL)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(TL)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(TL)	2017	USA	Head Lamp	Version Information	

model	year	area	system	function	subfunction
Tucson(TL)	2017	USA	Head Lamp	Read Fault Code	
Tucson(TL)	2017	USA	Head Lamp	Clear Fault Memory	
Tucson(TL)	2017	USA	Head Lamp	Read Data Stream	
Tucson(TL)	2017	USA	Head Lamp	Actuation Test	
Tucson(TL)	2017	USA	Head Lamp	Special Function	Headlamp Leveling
Tucson(TL)	2017	USA	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Tucson(TL)	2017	USA	Head Lamp	Special Function	Calibration
Tucson(TL)	2017	USA	Head Lamp	Special Function	Parameter Download
Tucson(TL)	2017	USA	IMMO(Immobilizer)	Read Fault Code	
Tucson(TL)	2017	USA	IMMO(Immobilizer)	Clear Fault Memory	
Tucson(TL)	2017	USA	IMMO(Immobilizer)	Read Data Stream	
Tucson(TL)	2017	USA	IMMO(Immobilizer)	Special Function	Password Teaching/Chopping
Tucson(TL)	2017	USA	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TL)	2017	USA	IMMO(Immobilizer)	Special Function	Limp Home Mode
Tucson(TL)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching
Tucson(TL)	2017	USA	CODE(Transmitter Code Saving)	Read Data Stream	
Tucson(TL)	2017	USA	CODE(Transmitter Code Saving)	Special Function	Code Saving
Tucson(TL)	2017	USA	4WD Control	Version Information	
Tucson(TL)	2017	USA	4WD Control	Read Fault Code	
Tucson(TL)	2017	USA	4WD Control	Clear Fault Memory	
Tucson(TL)	2017	USA	4WD Control	Read Data Stream	
Tucson(TL)	2017	USA	4WD Control	Actuation Test	
Tucson(TL)	2017	USA	4WD Control	Special Function	Clutch Learning Read
Tucson(TL)	2017	USA	4WD Control	Special Function	Clutch Learning Reset
Tucson(TL)	2017	USA	4WD Control	Special Function	Clutch Learning Write
Tucson(TL)	2017	USA	PTG(Power Tail Gate)	Version Information	
Tucson(TL)	2017	USA	PTG(Power Tail Gate)	Read Fault Code	
Tucson(TL)	2017	USA	PTG(Power Tail Gate)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(TL)	2017	USA	PTG(Power Tail Gate)	Read Data Stream	
Tucson(TL)	2017	USA	PTG(Power Tail Gate)	Special Function	User Option
Tucson(TL)	2017	USA	PTG(Power Tail Gate)	Special Function	Power Tailgate mode Configuration
Tucson(TL)	2017	USA	LDWS(Lane Departure Warning System)	Version Information	
Tucson(TL)	2017	USA	LDWS(Lane Departure Warning System)	Read Fault Code	
Tucson(TL)	2017	USA	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Tucson(TL)	2017	USA	LDWS(Lane Departure Warning System)	Read Data Stream	
Tucson(TL)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Tucson(TL)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Tucson(TL)	2017	USA	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Tucson(TL)	2017	USA	BSD(Blind Spot Detection)	Version Information	
Tucson(TL)	2017	USA	BSD(Blind Spot Detection)	Read Fault Code	
Tucson(TL)	2017	USA	BSD(Blind Spot Detection)	Clear Fault Memory	
Tucson(TL)	2017	USA	BSD(Blind Spot Detection)	Read Data Stream	
Tucson(TL)	2017	USA	BSD(Blind Spot Detection)	Actuation Test	
Tucson(TL)	2017	USA	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Tucson(TL)	2017	USA	Amplifier	Version Information	
Tucson(TL)	2017	USA	Amplifier	Special Function	AMP Operation Test
Tucson(TL)	2017	USA	DCT(Dual Clutch Transmission)	Version Information	
Tucson(TL)	2017	USA	DCT(Dual Clutch Transmission)	Read Fault Code	
Tucson(TL)	2017	USA	DCT(Dual Clutch Transmission)	Clear Fault Memory	
Tucson(TL)	2017	USA	DCT(Dual Clutch Transmission)	Read Data Stream	
Tucson(TL)	2017	USA	DCT(Dual Clutch Transmission)	Read FreezeData	
Tucson(TL)	2017	USA	DCT(Dual Clutch Transmission)	Actuation Test	
Tucson(TL)	2017	USA	DCT(Dual Clutch Transmission)	Special Function	DCT Learning Function
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Version Information	
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(TL)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(TL)	2016	USA	TCM(Transmission Control Module)	Version Information	
Tucson(TL)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(TL)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(TL)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(TL)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	
Tucson(TL)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(TL)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Version Information	
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC)Only)
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Assembly Check(ECU Replacement)
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Brake Pad Change Mode
Tucson(TL)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding

model	year	area	system	function	subfunction
Tucson(TL)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(TL)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(TL)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(TL)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(TL)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(TL)	2016	USA	AC(Air Conditioning)	Version Information	
Tucson(TL)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(TL)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(TL)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(TL)	2016	USA	AC(Air Conditioning)	Actuation Test	
Tucson(TL)	2016	USA	AC(Air Conditioning)	Special Function	AC Compressor Test(LCV Type)
Tucson(TL)	2016	USA	BCM(Body Control Module)	Version Information	
Tucson(TL)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Tucson(TL)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson(TL)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Tucson(TL)	2016	USA	BCM(Body Control Module)	Actuation Test	
Tucson(TL)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Tucson(TL)	2016	USA	Power Tail Gate	Version Information	
Tucson(TL)	2016	USA	Power Tail Gate	Read Fault Code	
Tucson(TL)	2016	USA	Power Tail Gate	Clear Fault Memory	
Tucson(TL)	2016	USA	Power Tail Gate	Read Data Stream	
Tucson(TL)	2016	USA	Power Tail Gate	Special Function	Power Tailgate mode Configuration
Tucson(TL)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Tucson(TL)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(TL)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(TL)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(TL)	2016	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(TL)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(TL)	2016	USA	4WD Control	Version Information	

model	year	area	system	function	subfunction
Tucson(TL)	2016	USA	4WD Control	Read Fault Code	
Tucson(TL)	2016	USA	4WD Control	Clear Fault Memory	
Tucson(TL)	2016	USA	4WD Control	Read Data Stream	
Tucson(TL)	2016	USA	4WD Control	Actuation Test	
Tucson(TL)	2016	USA	4WD Control	Special Function	Clutch Learning Read
Tucson(TL)	2016	USA	4WD Control	Special Function	Clutch Learning Reset
Tucson(TL)	2016	USA	4WD Control	Special Function	Clutch Learning Write
Tucson(TL)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(TL)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(TL)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(TL)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(TL)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(TL)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(TL)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(TL)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(TL)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(TL)	2016	USA	IMM(Immobilizer)	Read Fault Code	
Tucson(TL)	2016	USA	IMM(Immobilizer)	Clear Fault Memory	
Tucson(TL)	2016	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(TL)	2016	USA	IMM(Immobilizer)	Special Function	Password
Tucson(TL)	2016	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Tucson(TL)	2016	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(TL)	2016	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(TL)	2016	USA	IMM(Immobilizer)	Special Function	Teaching
Tucson(TL)	2016	USA	Smart Key Unit	Version Information	
Tucson(TL)	2016	USA	Smart Key Unit	Read Fault Code	
Tucson(TL)	2016	USA	Smart Key Unit	Clear Fault Memory	
Tucson(TL)	2016	USA	Smart Key Unit	Read Data Stream	
Tucson(TL)	2016	USA	Smart Key Unit	Actuation Test	
Tucson(TL)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Tucson(TL)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(TL)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(TL)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Tucson(TL)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Tucson(TL)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(TL)	2016	USA	Adaptive Front Lighting System	Version Information	
Tucson(TL)	2016	USA	Adaptive Front Lighting System	Read Fault Code	
Tucson(TL)	2016	USA	Adaptive Front Lighting System	Clear Fault Memory	
Tucson(TL)	2016	USA	Adaptive Front Lighting System	Read Data Stream	
Tucson(TL)	2016	USA	Adaptive Front Lighting System	Actuation Test	
Tucson(TL)	2016	USA	Adaptive Front Lighting System	Special Function	Calibration
Tucson(TL)	2016	USA	Adaptive Front Lighting System	Special Function	Parameter Download
Tucson(TL)	2016	USA	Auto Headlamp Leveling System	Version Information	
Tucson(TL)	2016	USA	Auto Headlamp Leveling System	Read Fault Code	
Tucson(TL)	2016	USA	Auto Headlamp Leveling System	Clear Fault Memory	
Tucson(TL)	2016	USA	Auto Headlamp Leveling System	Read Data Stream	
Tucson(TL)	2016	USA	Auto Headlamp Leveling System	Actuation Test	
Tucson(TL)	2016	USA	Auto Headlamp Leveling System	Special Function	Headlamp Leveling
Tucson(TL)	2016	USA	Auto Headlamp Leveling System	Special Function	Parameter Setting&Zero Position Initial
Tucson(TL)	2016	USA	Autonomous Emergency Braking	Version Information	
Tucson(TL)	2016	USA	Autonomous Emergency Braking	Read Fault Code	
Tucson(TL)	2016	USA	Autonomous Emergency Braking	Clear Fault Memory	
Tucson(TL)	2016	USA	Autonomous Emergency Braking	Read Data Stream	
Tucson(TL)	2016	USA	Autonomous Emergency Braking	Special Function	AEB Variant Coding
Tucson(TL)	2016	USA	Autonomous Emergency Braking	Special Function	Radar Sensor Alignment(SCC/AEB)
Tucson(TL)	2016	USA	Blind Spot Detection	Version Information	
Tucson(TL)	2016	USA	Blind Spot Detection	Read Fault Code	
Tucson(TL)	2016	USA	Blind Spot Detection	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(TL)	2016	USA	Blind Spot Detection	Read Data Stream	
Tucson(TL)	2016	USA	Blind Spot Detection	Actuation Test	
Tucson(TL)	2016	USA	Blind Spot Detection	Special Function	BSD Radar Calibration
Tucson(TL)	2016	USA	Cluster Module	Version Information	
Tucson(TL)	2016	USA	Cluster Module	Read Fault Code	
Tucson(TL)	2016	USA	Cluster Module	Clear Fault Memory	
Tucson(TL)	2016	USA	Cluster Module	Read Data Stream	
Tucson(TL)	2016	USA	Cluster Module	Actuation Test	
Tucson(TL)	2016	USA	Cluster Module	Special Function	CLU Variant Coding
Tucson(TL)	2016	USA	Cluster Module	Special Function	Service Reminder Setting
Tucson(TL)	2016	USA	Lane Departure Warning System	Version Information	
Tucson(TL)	2016	USA	Lane Departure Warning System	Read Fault Code	
Tucson(TL)	2016	USA	Lane Departure Warning System	Clear Fault Memory	
Tucson(TL)	2016	USA	Lane Departure Warning System	Read Data Stream	
Tucson(TL)	2016	USA	Lane Departure Warning System	Special Function	SPTAC Calibration
Tucson(TL)	2016	USA	Lane Departure Warning System	Special Function	LKAS/LDWS Variant Coding
Tucson(TL)	2016	USA	Lane Departure Warning System	Special Function	SPC Calibration
Tucson(TL)	2016	USA	Occupant Classification System	Version Information	
Tucson(TL)	2016	USA	Occupant Classification System	Read Fault Code	
Tucson(TL)	2016	USA	Occupant Classification System	Clear Fault Memory	
Tucson(TL)	2016	USA	Occupant Classification System	Read Data Stream	
Tucson(TL)	2016	USA	Occupant Classification System	Special Function	Body Sensor Reset
Tucson(TL)	2016	USA	Smart Junction Block	Version Information	
Tucson(TL)	2016	USA	Smart Junction Block	Read Fault Code	
Tucson(TL)	2016	USA	Smart Junction Block	Clear Fault Memory	
Tucson(TL)	2016	USA	Smart Junction Block	Read Data Stream	
Tucson(TL)	2016	USA	Smart Junction Block	Actuation Test	
Tucson(TL)	2016	USA	Smart Junction Block	Special Function	User Option
Tucson(TL)	2016	USA	Transmitter Code Saving	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(TL)	2016	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(TL)	2016	USA	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Version Information	
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Read Fault Code	
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Read Data Stream	
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Read FreezeData	
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Actuation Test	
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tiburon(GK)	2008	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tiburon(GK)	2008	USA	TCM(Transmission Control Module)	Version Information	
Tiburon(GK)	2008	USA	TCM(Transmission Control Module)	Read Fault Code	
Tiburon(GK)	2008	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tiburon(GK)	2008	USA	TCM(Transmission Control Module)	Read Data Stream	
Tiburon(GK)	2008	USA	TCM(Transmission Control Module)	Actuation Test	
Tiburon(GK)	2008	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tiburon(GK)	2008	USA	Electronic Stability Control	Version Information	
Tiburon(GK)	2008	USA	Electronic Stability Control	Read Fault Code	

model	year	area	system	function	subfunction
Tiburon(GK)	2008	USA	Electronic Stability Control	Clear Fault Memory	
Tiburon(GK)	2008	USA	Electronic Stability Control	Read Data Stream	
Tiburon(GK)	2008	USA	Electronic Stability Control	Actuation Test	
Tiburon(GK)	2008	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Tiburon(GK)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tiburon(GK)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tiburon(GK)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tiburon(GK)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tiburon(GK)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tiburon(GK)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Tiburon(GK)	2008	USA	BCM(Body Control Module)	Read Data Stream	
Tiburon(GK)	2008	USA	BCM(Body Control Module)	Actuation Test	
Tiburon(GK)	2008	USA	Automatic Headlamp Leveling System	Version Information	
Tiburon(GK)	2008	USA	Automatic Headlamp Leveling System	Read Fault Code	
Tiburon(GK)	2008	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Tiburon(GK)	2008	USA	Automatic Headlamp Leveling System	Read Data Stream	
Tiburon(GK)	2008	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Tiburon(GK)	2008	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Tiburon(GK)	2008	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tiburon(GK)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tiburon(GK)	2008	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tiburon(GK)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tiburon(GK)	2008	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tiburon(GK)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tiburon(GK)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tiburon(GK)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tiburon(GK)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tiburon(GK)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tiburon(GK)	2008	USA	IMM(Immobilizer)	Read Fault Code	

model	year	area	system	function	subfunction
Tiburon(GK)	2008	USA	IMM(Immobilizer)	Clear Fault Memory	
Tiburon(GK)	2008	USA	IMM(Immobilizer)	Read Data Stream	
Tiburon(GK)	2008	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tiburon(GK)	2008	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Tiburon(GK)	2008	USA	Transmitter Code Saving	Read Data Stream	
Tiburon(GK)	2008	USA	Transmitter Code Saving	Special Function	Code Saving
Tiburon(GK)	2008	USA	ABS(Anti-lock Braking System)	Version Information	
Tiburon(GK)	2008	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tiburon(GK)	2008	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tiburon(GK)	2008	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tiburon(GK)	2008	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tiburon(GK)	2008	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tiburon(GK)	2008	USA	IMM(Immobilizer)	Special Function	Teaching/Chopping
Tiburon(GK)	2008	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tiburon(GK)	2008	USA	IMM(Immobilizer)	Special Function	Teaching
Tiburon(GK)	2008	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Version Information	
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Read Fault Code	
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Read Data Stream	
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Read FreezeData	
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Actuation Test	
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tiburon(GK)	2007	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tiburon(GK)	2007	USA	TCM(Transmission Control Module)	Version Information	
Tiburon(GK)	2007	USA	TCM(Transmission Control Module)	Read Fault Code	
Tiburon(GK)	2007	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tiburon(GK)	2007	USA	TCM(Transmission Control Module)	Read Data Stream	
Tiburon(GK)	2007	USA	TCM(Transmission Control Module)	Actuation Test	
Tiburon(GK)	2007	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tiburon(GK)	2007	USA	Electronic Stability Control	Version Information	
Tiburon(GK)	2007	USA	Electronic Stability Control	Read Fault Code	
Tiburon(GK)	2007	USA	Electronic Stability Control	Clear Fault Memory	
Tiburon(GK)	2007	USA	Electronic Stability Control	Read Data Stream	
Tiburon(GK)	2007	USA	Electronic Stability Control	Actuation Test	
Tiburon(GK)	2007	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Tiburon(GK)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tiburon(GK)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tiburon(GK)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tiburon(GK)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tiburon(GK)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tiburon(GK)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Tiburon(GK)	2007	USA	BCM(Body Control Module)	Read Data Stream	
Tiburon(GK)	2007	USA	BCM(Body Control Module)	Actuation Test	
Tiburon(GK)	2007	USA	Automatic Headlamp Leveling System	Version Information	
Tiburon(GK)	2007	USA	Automatic Headlamp Leveling System	Read Fault Code	

model	year	area	system	function	subfunction
Tiburon(GK)	2007	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Tiburon(GK)	2007	USA	Automatic Headlamp Leveling System	Read Data Stream	
Tiburon(GK)	2007	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Tiburon(GK)	2007	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Tiburon(GK)	2007	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tiburon(GK)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tiburon(GK)	2007	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tiburon(GK)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tiburon(GK)	2007	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tiburon(GK)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tiburon(GK)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tiburon(GK)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tiburon(GK)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tiburon(GK)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tiburon(GK)	2007	USA	IMM(Immobilizer)	Read Fault Code	
Tiburon(GK)	2007	USA	IMM(Immobilizer)	Clear Fault Memory	
Tiburon(GK)	2007	USA	IMM(Immobilizer)	Read Data Stream	
Tiburon(GK)	2007	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tiburon(GK)	2007	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Tiburon(GK)	2007	USA	Transmitter Code Saving	Read Data Stream	
Tiburon(GK)	2007	USA	Transmitter Code Saving	Special Function	Code Saving
Tiburon(GK)	2007	USA	ABS(Anti-lock Braking System)	Version Information	
Tiburon(GK)	2007	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tiburon(GK)	2007	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tiburon(GK)	2007	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tiburon(GK)	2007	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tiburon(GK)	2007	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tiburon(GK)	2007	USA	IMM(Immobilizer)	Special Function	Password
Tiburon(GK)	2007	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Tiburon(GK)	2007	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Tiburon(GK)	2007	USA	IMM(Immobilizer)	Special Function	Teaching
Tiburon(GK)	2007	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Version Information	
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Read Fault Code	
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Read Data Stream	
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Read FreezeData	
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Actuation Test	
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tiburon(GK)	2006	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tiburon(GK)	2006	USA	TCM(Transmission Control Module)	Version Information	
Tiburon(GK)	2006	USA	TCM(Transmission Control Module)	Read Fault Code	
Tiburon(GK)	2006	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tiburon(GK)	2006	USA	TCM(Transmission Control Module)	Read Data Stream	
Tiburon(GK)	2006	USA	TCM(Transmission Control Module)	Actuation Test	
Tiburon(GK)	2006	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tiburon(GK)	2006	USA	Electronic Stability Control	Version Information	

model	year	area	system	function	subfunction
Tiburon(GK)	2006	USA	Electronic Stability Control	Read Fault Code	
Tiburon(GK)	2006	USA	Electronic Stability Control	Clear Fault Memory	
Tiburon(GK)	2006	USA	Electronic Stability Control	Read Data Stream	
Tiburon(GK)	2006	USA	Electronic Stability Control	Actuation Test	
Tiburon(GK)	2006	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Tiburon(GK)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tiburon(GK)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tiburon(GK)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tiburon(GK)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tiburon(GK)	2006	USA	BCM(Body Control Module)	Read Data Stream	
Tiburon(GK)	2006	USA	BCM(Body Control Module)	Actuation Test	
Tiburon(GK)	2006	USA	Automatic Headlamp Leveling System	Version Information	
Tiburon(GK)	2006	USA	Automatic Headlamp Leveling System	Read Fault Code	
Tiburon(GK)	2006	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Tiburon(GK)	2006	USA	Automatic Headlamp Leveling System	Read Data Stream	
Tiburon(GK)	2006	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Tiburon(GK)	2006	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Tiburon(GK)	2006	USA	IMM(Immobilizer)	Read Fault Code	
Tiburon(GK)	2006	USA	IMM(Immobilizer)	Clear Fault Memory	
Tiburon(GK)	2006	USA	IMM(Immobilizer)	Read Data Stream	
Tiburon(GK)	2006	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tiburon(GK)	2006	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Tiburon(GK)	2006	USA	Transmitter Code Saving	Read Data Stream	
Tiburon(GK)	2006	USA	Transmitter Code Saving	Special Function	Code Saving
Tiburon(GK)	2006	USA	IMM(Immobilizer)	Special Function	Password
Tiburon(GK)	2006	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Tiburon(GK)	2006	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tiburon(GK)	2006	USA	IMM(Immobilizer)	Special Function	Teaching
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Version Information	
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Read Data Stream	
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Read FreezeData	
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Actuation Test	
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-Trip Test
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tiburon(GK)	2005	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tiburon(GK)	2005	USA	TCM(Transmission Control Module)	Version Information	
Tiburon(GK)	2005	USA	TCM(Transmission Control Module)	Read Fault Code	
Tiburon(GK)	2005	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tiburon(GK)	2005	USA	TCM(Transmission Control Module)	Read Data Stream	
Tiburon(GK)	2005	USA	TCM(Transmission Control Module)	Actuation Test	
Tiburon(GK)	2005	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tiburon(GK)	2005	USA	Electronic Stability Control	Version Information	
Tiburon(GK)	2005	USA	Electronic Stability Control	Read Fault Code	
Tiburon(GK)	2005	USA	Electronic Stability Control	Clear Fault Memory	
Tiburon(GK)	2005	USA	Electronic Stability Control	Read Data Stream	
Tiburon(GK)	2005	USA	Electronic Stability Control	Actuation Test	

model	year	area	system	function	subfunction
Tiburon(GK)	2005	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Tiburon(GK)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tiburon(GK)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tiburon(GK)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tiburon(GK)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tiburon(GK)	2005	USA	BCM(Body Control Module)	Read Data Stream	
Tiburon(GK)	2005	USA	BCM(Body Control Module)	Actuation Test	
Tiburon(GK)	2005	USA	Automatic Headlamp Leveling System	Version Information	
Tiburon(GK)	2005	USA	Automatic Headlamp Leveling System	Read Fault Code	
Tiburon(GK)	2005	USA	Automatic Headlamp Leveling System	Clear Fault Memory	
Tiburon(GK)	2005	USA	Automatic Headlamp Leveling System	Read Data Stream	
Tiburon(GK)	2005	USA	Automatic Headlamp Leveling System	Special Function	Level Initialization
Tiburon(GK)	2005	USA	Automatic Headlamp Leveling System	Special Function	Headlamp Leveling
Tiburon(GK)	2005	USA	IMM(Immobilizer)	Read Fault Code	
Tiburon(GK)	2005	USA	IMM(Immobilizer)	Clear Fault Memory	
Tiburon(GK)	2005	USA	IMM(Immobilizer)	Read Data Stream	
Tiburon(GK)	2005	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tiburon(GK)	2005	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Tiburon(GK)	2005	USA	Transmitter Code Saving	Read Data Stream	
Tiburon(GK)	2005	USA	Transmitter Code Saving	Special Function	Code Saving
Tiburon(GK)	2005	USA	IMM(Immobilizer)	Special Function	Password
Tiburon(GK)	2005	USA	IMM(Immobilizer)	Special Function	Teaching/Chopping
Tiburon(GK)	2005	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tiburon(GK)	2005	USA	IMM(Immobilizer)	Special Function	Teaching
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Version Information	
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Read Fault Code	
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Read Data Stream	
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Read FreezeData	
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tiburon(GK)	2004	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tiburon(GK)	2004	USA	TCM(Transmission Control Module)	Version Information	
Tiburon(GK)	2004	USA	TCM(Transmission Control Module)	Read Fault Code	
Tiburon(GK)	2004	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tiburon(GK)	2004	USA	TCM(Transmission Control Module)	Read Data Stream	
Tiburon(GK)	2004	USA	TCM(Transmission Control Module)	Actuation Test	
Tiburon(GK)	2004	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tiburon(GK)	2004	USA	ABS(Anti-lock Braking System)	Version Information	
Tiburon(GK)	2004	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tiburon(GK)	2004	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tiburon(GK)	2004	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tiburon(GK)	2004	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tiburon(GK)	2004	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tiburon(GK)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tiburon(GK)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tiburon(GK)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tiburon(GK)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tiburon(GK)	2004	USA	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Tiburon(GK)	2004	USA	BCM(Body Control Module)	Actuation Test	
Tiburon(GK)	2004	USA	IMM(Immobilizer)	Read Fault Code	
Tiburon(GK)	2004	USA	IMM(Immobilizer)	Clear Fault Memory	
Tiburon(GK)	2004	USA	IMM(Immobilizer)	Read Data Stream	
Tiburon(GK)	2004	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tiburon(GK)	2004	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Tiburon(GK)	2004	USA	Transmitter Code Saving	Read Data Stream	
Tiburon(GK)	2004	USA	Transmitter Code Saving	Special Function	Code Saving
Tiburon(GK)	2004	USA	IMM(Immobilizer)	Special Function	Password
Tiburon(GK)	2004	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Tiburon(GK)	2004	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tiburon(GK)	2004	USA	IMM(Immobilizer)	Special Function	Teaching
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Version Information	
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Read Fault Code	
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Read Data Stream	
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Read FreezeData	
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Actuation Test	
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tiburon(GK)	2003	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test

model	year	area	system	function	subfunction
Tiburon(GK)	2003	USA	TCM(Transmission Control Module)	Version Information	
Tiburon(GK)	2003	USA	TCM(Transmission Control Module)	Read Fault Code	
Tiburon(GK)	2003	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tiburon(GK)	2003	USA	TCM(Transmission Control Module)	Read Data Stream	
Tiburon(GK)	2003	USA	TCM(Transmission Control Module)	Actuation Test	
Tiburon(GK)	2003	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tiburon(GK)	2003	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tiburon(GK)	2003	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tiburon(GK)	2003	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tiburon(GK)	2003	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tiburon(GK)	2003	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tiburon(GK)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tiburon(GK)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tiburon(GK)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tiburon(GK)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tiburon(GK)	2003	USA	BCM(Body Control Module)	Read Data Stream	
Tiburon(GK)	2003	USA	BCM(Body Control Module)	Actuation Test	
Tiburon(GK)	2003	USA	IMM(Immobilizer)	Read Fault Code	
Tiburon(GK)	2003	USA	IMM(Immobilizer)	Clear Fault Memory	
Tiburon(GK)	2003	USA	IMM(Immobilizer)	Read Data Stream	
Tiburon(GK)	2003	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tiburon(GK)	2003	USA	IMM(Immobilizer)	Special Function	Neutral Mode
Tiburon(GK)	2003	USA	Transmitter Code Saving	Read Data Stream	
Tiburon(GK)	2003	USA	Transmitter Code Saving	Special Function	Code Saving
Tiburon(GK)	2003	USA	IMM(Immobilizer)	Special Function	Password
Tiburon(GK)	2003	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Tiburon(GK)	2003	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tiburon(GK)	2003	USA	IMM(Immobilizer)	Special Function	Teaching
Tiburon(RC)	2001	USA	ECM(Engine Control Module)	Read Fault Code	
Tiburon(RC)	2001	USA	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tiburon(RC)	2001	USA	ECM(Engine Control Module)	Read Data Stream	
Tiburon(RC)	2001	USA	ECM(Engine Control Module)	Actuation Test	
Tiburon(RC)	2001	USA	TCM(Transmission Control Module)	Version Information	
Tiburon(RC)	2001	USA	TCM(Transmission Control Module)	Read Fault Code	
Tiburon(RC)	2001	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tiburon(RC)	2001	USA	TCM(Transmission Control Module)	Read Data Stream	
Tiburon(RC)	2001	USA	TCM(Transmission Control Module)	Actuation Test	
Tiburon(RC)	2001	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tiburon(RC)	2001	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tiburon(RC)	2001	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tiburon(RC)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tiburon(RC)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tiburon(RC)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tiburon(RC)	2000	USA	ECM(Engine Control Module)	Read Fault Code	
Tiburon(RC)	2000	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tiburon(RC)	2000	USA	ECM(Engine Control Module)	Read Data Stream	
Tiburon(RC)	2000	USA	ECM(Engine Control Module)	Actuation Test	
Tiburon(RC)	2000	USA	TCM(Transmission Control Module)	Version Information	
Tiburon(RC)	2000	USA	TCM(Transmission Control Module)	Read Fault Code	
Tiburon(RC)	2000	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tiburon(RC)	2000	USA	TCM(Transmission Control Module)	Read Data Stream	
Tiburon(RC)	2000	USA	TCM(Transmission Control Module)	Actuation Test	
Tiburon(RC)	2000	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tiburon(RC)	2000	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tiburon(RC)	2000	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tiburon(RC)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tiburon(RC)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tiburon(RC)	2000	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tiburon(RC)	1999	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Tiburon(RC)	1999	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tiburon(RC)	1999	USA	ECM(Engine Control Module)	Read Data Stream	
Tiburon(RC)	1999	USA	ECM(Engine Control Module)	Actuation Test	
Tiburon(RC)	1999	USA	TCM(Transmission Control Module)	Version Information	
Tiburon(RC)	1999	USA	TCM(Transmission Control Module)	Read Fault Code	
Tiburon(RC)	1999	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tiburon(RC)	1999	USA	TCM(Transmission Control Module)	Read Data Stream	
Tiburon(RC)	1999	USA	TCM(Transmission Control Module)	Actuation Test	
Tiburon(RC)	1999	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tiburon(RC)	1999	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tiburon(RC)	1999	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tiburon(RC)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tiburon(RC)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tiburon(RC)	1999	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tiburon(RC)	1998	USA	ECM(Engine Control Module)	Read Fault Code	
Tiburon(RC)	1998	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tiburon(RC)	1998	USA	ECM(Engine Control Module)	Read Data Stream	
Tiburon(RC)	1998	USA	ECM(Engine Control Module)	Actuation Test	
Tiburon(RC)	1998	USA	TCM(Transmission Control Module)	Version Information	
Tiburon(RC)	1998	USA	TCM(Transmission Control Module)	Read Fault Code	
Tiburon(RC)	1998	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tiburon(RC)	1998	USA	TCM(Transmission Control Module)	Read Data Stream	
Tiburon(RC)	1998	USA	TCM(Transmission Control Module)	Actuation Test	
Tiburon(RC)	1998	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tiburon(RC)	1998	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tiburon(RC)	1998	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tiburon(RC)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tiburon(RC)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tiburon(RC)	1998	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tiburon(RC)	1997	USA	ECM(Engine Control Module)	Read Fault Code	
Tiburon(RC)	1997	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tiburon(RC)	1997	USA	ECM(Engine Control Module)	Read Data Stream	
Tiburon(RC)	1997	USA	ECM(Engine Control Module)	Actuation Test	
Tiburon(RC)	1997	USA	TCM(Transmission Control Module)	Version Information	
Tiburon(RC)	1997	USA	TCM(Transmission Control Module)	Read Fault Code	
Tiburon(RC)	1997	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tiburon(RC)	1997	USA	TCM(Transmission Control Module)	Read Data Stream	
Tiburon(RC)	1997	USA	TCM(Transmission Control Module)	Actuation Test	
Tiburon(RC)	1997	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tiburon(RC)	1997	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tiburon(RC)	1997	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tiburon(RC)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tiburon(RC)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tiburon(RC)	1997	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Version Information	
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Read FreezeData	
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)

model	year	area	system	function	subfunction
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(LM)	2015	USA	TCM(Transmission Control Module)	Version Information	
Tucson(LM)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(LM)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(LM)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(LM)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Tucson(LM)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(LM)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(LM)	2015	USA	Electronic Stability Control	Version Information	
Tucson(LM)	2015	USA	Electronic Stability Control	Read Fault Code	
Tucson(LM)	2015	USA	Electronic Stability Control	Clear Fault Memory	
Tucson(LM)	2015	USA	Electronic Stability Control	Read Data Stream	
Tucson(LM)	2015	USA	Electronic Stability Control	Actuation Test	
Tucson(LM)	2015	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Tucson(LM)	2015	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(LM)	2015	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Tucson(LM)	2015	USA	Electronic Stability Control	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(LM)	2015	USA	Electronic Stability Control	Special Function	Variant Coding
Tucson(LM)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(LM)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(LM)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(LM)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(LM)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(LM)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson(LM)	2015	USA	AC(Air Conditioning)	Version Information	
Tucson(LM)	2015	USA	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(LM)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(LM)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(LM)	2015	USA	AC(Air Conditioning)	Actuation Test	
Tucson(LM)	2015	USA	BCM(Body Control Module)	Version Information	
Tucson(LM)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Tucson(LM)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson(LM)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Tucson(LM)	2015	USA	BCM(Body Control Module)	Actuation Test	
Tucson(LM)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Tucson(LM)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Tucson(LM)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(LM)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(LM)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(LM)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(LM)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(LM)	2015	USA	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Tucson(LM)	2015	USA	4WD Control	Version Information	
Tucson(LM)	2015	USA	4WD Control	Read Fault Code	
Tucson(LM)	2015	USA	4WD Control	Clear Fault Memory	
Tucson(LM)	2015	USA	4WD Control	Read Data Stream	
Tucson(LM)	2015	USA	4WD Control	Actuation Test	
Tucson(LM)	2015	USA	4WD Control	Special Function	Clutch Learning Read
Tucson(LM)	2015	USA	4WD Control	Special Function	Clutch Learning Reset
Tucson(LM)	2015	USA	4WD Control	Special Function	Clutch Learning Write
Tucson(LM)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(LM)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(LM)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(LM)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(LM)	2015	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(LM)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(LM)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(LM)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(LM)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(LM)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(LM)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(LM)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(LM)	2015	USA	IMM(Immobilizer)	Special Function	Password
Tucson(LM)	2015	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Tucson(LM)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(LM)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(LM)	2015	USA	IMM(Immobilizer)	Special Function	Teaching
Tucson(LM)	2015	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(LM)	2015	USA	Smart Key Unit	Version Information	
Tucson(LM)	2015	USA	Smart Key Unit	Read Fault Code	
Tucson(LM)	2015	USA	Smart Key Unit	Clear Fault Memory	
Tucson(LM)	2015	USA	Smart Key Unit	Read Data Stream	
Tucson(LM)	2015	USA	Smart Key Unit	Actuation Test	
Tucson(LM)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(LM)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check
Tucson(LM)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(LM)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(LM)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Tucson(LM)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Tucson(LM)	2015	USA	Transmitter Code Saving	Read Data Stream	
Tucson(LM)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(LM)	2015	USA	Smart Junction Block	Version Information	
Tucson(LM)	2015	USA	Smart Junction Block	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(LM)	2015	USA	Smart Junction Block	Clear Fault Memory	
Tucson(LM)	2015	USA	Smart Junction Block	Read Data Stream	
Tucson(LM)	2015	USA	Smart Junction Block	Actuation Test	
Tucson(LM)	2015	USA	Telematics Unit	Version Information	
Tucson(LM)	2015	USA	Telematics Unit	Read Fault Code	
Tucson(LM)	2015	USA	Telematics Unit	Clear Fault Memory	
Tucson(LM)	2015	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Version Information	
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Read FreezeData	
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(LM)	2014	USA	TCM(Transmission Control Module)	Version Information	
Tucson(LM)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(LM)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(LM)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(LM)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Tucson(LM)	2014	USA	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Tucson(LM)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(LM)	2014	USA	Electronic Stability Control	Version Information	
Tucson(LM)	2014	USA	Electronic Stability Control	Read Fault Code	
Tucson(LM)	2014	USA	Electronic Stability Control	Clear Fault Memory	
Tucson(LM)	2014	USA	Electronic Stability Control	Read Data Stream	
Tucson(LM)	2014	USA	Electronic Stability Control	Actuation Test	
Tucson(LM)	2014	USA	Electronic Stability Control	Special Function	Auto Detected Configuration Reset(FSP/ESC/ESC Only)
Tucson(LM)	2014	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(LM)	2014	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Tucson(LM)	2014	USA	Electronic Stability Control	Special Function	SAS Calibration(CAN-ESP Only)
Tucson(LM)	2014	USA	Electronic Stability Control	Special Function	Variant Coding
Tucson(LM)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(LM)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(LM)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(LM)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(LM)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(LM)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson(LM)	2014	USA	AC(Air Conditioning)	Version Information	
Tucson(LM)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(LM)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(LM)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(LM)	2014	USA	AC(Air Conditioning)	Actuation Test	
Tucson(LM)	2014	USA	BCM(Body Control Module)	Version Information	
Tucson(LM)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Tucson(LM)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson(LM)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Tucson(LM)	2014	USA	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Tucson(LM)	2014	USA	BCM(Body Control Module)	Special Function	User Option
Tucson(LM)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Tucson(LM)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(LM)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(LM)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(LM)	2014	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Tucson(LM)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Tucson(LM)	2014	USA	EPS(Electronic Power Steering)	Special Function	Steering Angle Sensor(Sas)Calibration
Tucson(LM)	2014	USA	4WD Control	Version Information	
Tucson(LM)	2014	USA	4WD Control	Read Fault Code	
Tucson(LM)	2014	USA	4WD Control	Clear Fault Memory	
Tucson(LM)	2014	USA	4WD Control	Read Data Stream	
Tucson(LM)	2014	USA	4WD Control	Actuation Test	
Tucson(LM)	2014	USA	4WD Control	Special Function	Clutch Learning Read
Tucson(LM)	2014	USA	4WD Control	Special Function	Clutch Learning Reset
Tucson(LM)	2014	USA	4WD Control	Special Function	Clutch Learning Write
Tucson(LM)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(LM)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(LM)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(LM)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(LM)	2014	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(LM)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(LM)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(LM)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(LM)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(LM)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(LM)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST

model	year	area	system	function	subfunction
Tucson(LM)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(LM)	2014	USA	IMM(Immobilizer)	Special Function	Password
Tucson(LM)	2014	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Tucson(LM)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(LM)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(LM)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Tucson(LM)	2014	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(LM)	2014	USA	Smart Key Unit	Version Information	
Tucson(LM)	2014	USA	Smart Key Unit	Read Fault Code	
Tucson(LM)	2014	USA	Smart Key Unit	Clear Fault Memory	
Tucson(LM)	2014	USA	Smart Key Unit	Read Data Stream	
Tucson(LM)	2014	USA	Smart Key Unit	Actuation Test	
Tucson(LM)	2014	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Tucson(LM)	2014	USA	Smart Key Unit	Special Function	Antenna Status Check
Tucson(LM)	2014	USA	Smart Key Unit	Special Function	Current FOB Key Check
Tucson(LM)	2014	USA	Smart Key Unit	Special Function	FOB Key Status Information
Tucson(LM)	2014	USA	Smart Key Unit	Special Function	Neutralization Mode
Tucson(LM)	2014	USA	Smart Key Unit	Special Function	SMK Status Information
Tucson(LM)	2014	USA	Transmitter Code Saving	Read Data Stream	
Tucson(LM)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(LM)	2014	USA	Smart Junction Block	Version Information	
Tucson(LM)	2014	USA	Smart Junction Block	Read Fault Code	
Tucson(LM)	2014	USA	Smart Junction Block	Clear Fault Memory	
Tucson(LM)	2014	USA	Smart Junction Block	Read Data Stream	
Tucson(LM)	2014	USA	Smart Junction Block	Actuation Test	
Tucson(LM)	2014	USA	Telematics Unit	Version Information	
Tucson(LM)	2014	USA	Telematics Unit	Read Fault Code	
Tucson(LM)	2014	USA	Telematics Unit	Clear Fault Memory	
Tucson(LM)	2014	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(LM)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(LM)	2013	USA	TCM(Transmission Control Module)	Version Information	
Tucson(LM)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(LM)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(LM)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(LM)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Tucson(LM)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(LM)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(LM)	2013	USA	Electronic Stability Control	Version Information	
Tucson(LM)	2013	USA	Electronic Stability Control	Read Fault Code	
Tucson(LM)	2013	USA	Electronic Stability Control	Clear Fault Memory	
Tucson(LM)	2013	USA	Electronic Stability Control	Read Data Stream	
Tucson(LM)	2013	USA	Electronic Stability Control	Actuation Test	
Tucson(LM)	2013	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)

model	year	area	system	function	subfunction
Tucson(LM)	2013	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Tucson(LM)	2013	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration
Tucson(LM)	2013	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Tucson(LM)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(LM)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(LM)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(LM)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(LM)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(LM)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson(LM)	2013	USA	AC(Air Conditioning)	Version Information	
Tucson(LM)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(LM)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(LM)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(LM)	2013	USA	AC(Air Conditioning)	Actuation Test	
Tucson(LM)	2013	USA	BCM(Body Control Module)	Version Information	
Tucson(LM)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Tucson(LM)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson(LM)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Tucson(LM)	2013	USA	BCM(Body Control Module)	Actuation Test	
Tucson(LM)	2013	USA	EPS(Electronic Power Steering)	Version Information	
Tucson(LM)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(LM)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(LM)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(LM)	2013	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(LM)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding
Tucson(LM)	2013	USA	4WD Control	Version Information	
Tucson(LM)	2013	USA	4WD Control	Read Fault Code	
Tucson(LM)	2013	USA	4WD Control	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(LM)	2013	USA	4WD Control	Read Data Stream	
Tucson(LM)	2013	USA	4WD Control	Special Function	AWD Mode Selection
Tucson(LM)	2013	USA	4WD Control	Special Function	Torque Coupling Control
Tucson(LM)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(LM)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(LM)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(LM)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(LM)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(LM)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(LM)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(LM)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(LM)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(LM)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(LM)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(LM)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(LM)	2013	USA	IMM(Immobilizer)	Special Function	Password
Tucson(LM)	2013	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Tucson(LM)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(LM)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(LM)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Tucson(LM)	2013	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(LM)	2013	USA	Smart Key	Version Information	
Tucson(LM)	2013	USA	Smart Key	Read Fault Code	
Tucson(LM)	2013	USA	Smart Key	Clear Fault Memory	
Tucson(LM)	2013	USA	Smart Key	Read Data Stream	
Tucson(LM)	2013	USA	Smart Key	Actuation Test	
Tucson(LM)	2013	USA	Smart Key	Special Function	Smart Key Code Saving
Tucson(LM)	2013	USA	Smart Key	Special Function	Antenna Status Check
Tucson(LM)	2013	USA	Smart Key	Special Function	Neutralization Mode
Tucson(LM)	2013	USA	Smart Key	Special Function	PDM Status Information

model	year	area	system	function	subfunction
Tucson(LM)	2013	USA	Smart Key	Special Function	Serial Communication Line Check
Tucson(LM)	2013	USA	Smart Key	Special Function	SMK Status Information
Tucson(LM)	2013	USA	Smart Key	Special Function	TP Status Information
Tucson(LM)	2013	USA	Smart Key	Special Function	FOB Key Status Information
Tucson(LM)	2013	USA	Transmitter Code Saving	Read Data Stream	
Tucson(LM)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(LM)	2013	USA	Smart Junction Block	Version Information	
Tucson(LM)	2013	USA	Smart Junction Block	Read Fault Code	
Tucson(LM)	2013	USA	Smart Junction Block	Clear Fault Memory	
Tucson(LM)	2013	USA	Smart Junction Block	Read Data Stream	
Tucson(LM)	2013	USA	Smart Junction Block	Actuation Test	
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Version Information	
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Read FreezeData	
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Tucson(LM)	2012	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Tucson(LM)	2012	USA	TCM(Transmission Control Module)	Version Information	
Tucson(LM)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(LM)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(LM)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(LM)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Tucson(LM)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(LM)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(LM)	2012	USA	Electronic Stability Control	Version Information	
Tucson(LM)	2012	USA	Electronic Stability Control	Read Fault Code	
Tucson(LM)	2012	USA	Electronic Stability Control	Clear Fault Memory	
Tucson(LM)	2012	USA	Electronic Stability Control	Read Data Stream	
Tucson(LM)	2012	USA	Electronic Stability Control	Actuation Test	
Tucson(LM)	2012	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(LM)	2012	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Tucson(LM)	2012	USA	Electronic Stability Control	Special Function	Steering/FSP/FSC Sensor Calibration
Tucson(LM)	2012	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Tucson(LM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(LM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(LM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(LM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(LM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(LM)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson(LM)	2012	USA	AC(Air Conditioning)	Version Information	
Tucson(LM)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(LM)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(LM)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(LM)	2012	USA	AC(Air Conditioning)	Actuation Test	
Tucson(LM)	2012	USA	BCM(Body Control Module)	Version Information	
Tucson(LM)	2012	USA	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(LM)	2012	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson(LM)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Tucson(LM)	2012	USA	BCM(Body Control Module)	Actuation Test	
Tucson(LM)	2012	USA	EPS(Electronic Power Steering)	Version Information	
Tucson(LM)	2012	USA	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(LM)	2012	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(LM)	2012	USA	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(LM)	2012	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(LM)	2012	USA	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding
Tucson(LM)	2012	USA	4WD Control	Version Information	
Tucson(LM)	2012	USA	4WD Control	Read Fault Code	
Tucson(LM)	2012	USA	4WD Control	Clear Fault Memory	
Tucson(LM)	2012	USA	4WD Control	Read Data Stream	
Tucson(LM)	2012	USA	4WD Control	Special Function	AWD Mode Selection
Tucson(LM)	2012	USA	4WD Control	Special Function	Torque Coupling Control
Tucson(LM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(LM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(LM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(LM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(LM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(LM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(LM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(LM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(LM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(LM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(LM)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(LM)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(LM)	2012	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Tucson(LM)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Tucson(LM)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(LM)	2012	USA	IMM(Immobilizer)	Special Function	Teaching
Tucson(LM)	2012	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(LM)	2012	USA	Smart Key	Version Information	
Tucson(LM)	2012	USA	Smart Key	Read Fault Code	
Tucson(LM)	2012	USA	Smart Key	Clear Fault Memory	
Tucson(LM)	2012	USA	Smart Key	Read Data Stream	
Tucson(LM)	2012	USA	Smart Key	Actuation Test	
Tucson(LM)	2012	USA	Smart Key	Special Function	Smart Key Code Saving
Tucson(LM)	2012	USA	Smart Key	Special Function	Antenna Status Check
Tucson(LM)	2012	USA	Smart Key	Special Function	Neutralization Mode
Tucson(LM)	2012	USA	Smart Key	Special Function	PDM Status Information
Tucson(LM)	2012	USA	Smart Key	Special Function	Serial Communication Line Check
Tucson(LM)	2012	USA	Smart Key	Special Function	SMK Status Information
Tucson(LM)	2012	USA	Smart Key	Special Function	TP Status Information
Tucson(LM)	2012	USA	Smart Key	Special Function	FOB Key Status Information
Tucson(LM)	2012	USA	Transmitter Code Saving	Read Data Stream	
Tucson(LM)	2012	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(LM)	2012	USA	Smart Junction Block	Version Information	
Tucson(LM)	2012	USA	Smart Junction Block	Read Fault Code	
Tucson(LM)	2012	USA	Smart Junction Block	Clear Fault Memory	
Tucson(LM)	2012	USA	Smart Junction Block	Read Data Stream	
Tucson(LM)	2012	USA	Smart Junction Block	Actuation Test	
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Version Information	
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Read FreezeData	
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(LM)	2011	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(LM)	2011	USA	TCM(Transmission Control Module)	Version Information	
Tucson(LM)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(LM)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(LM)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(LM)	2011	USA	TCM(Transmission Control Module)	Read FreezeData	
Tucson(LM)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(LM)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(LM)	2011	USA	Electronic Stability Control	Version Information	
Tucson(LM)	2011	USA	Electronic Stability Control	Read Fault Code	
Tucson(LM)	2011	USA	Electronic Stability Control	Clear Fault Memory	
Tucson(LM)	2011	USA	Electronic Stability Control	Read Data Stream	
Tucson(LM)	2011	USA	Electronic Stability Control	Actuation Test	
Tucson(LM)	2011	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(LM)	2011	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Tucson(LM)	2011	USA	Electronic Stability Control	Special Function	Steering Angle Sensor Calibration
Tucson(LM)	2011	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Tucson(LM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(LM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(LM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(LM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(LM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(LM)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson(LM)	2011	USA	AC(Air Conditioning)	Version Information	
Tucson(LM)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(LM)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(LM)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(LM)	2011	USA	AC(Air Conditioning)	Actuation Test	
Tucson(LM)	2011	USA	BCM(Body Control Module)	Version Information	
Tucson(LM)	2011	USA	BCM(Body Control Module)	Read Fault Code	
Tucson(LM)	2011	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson(LM)	2011	USA	BCM(Body Control Module)	Read Data Stream	
Tucson(LM)	2011	USA	BCM(Body Control Module)	Actuation Test	
Tucson(LM)	2011	USA	EPS(Electronic Power Steering)	Version Information	
Tucson(LM)	2011	USA	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(LM)	2011	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(LM)	2011	USA	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(LM)	2011	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(LM)	2011	USA	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding
Tucson(LM)	2011	USA	4WD Control	Version Information	
Tucson(LM)	2011	USA	4WD Control	Read Fault Code	
Tucson(LM)	2011	USA	4WD Control	Clear Fault Memory	
Tucson(LM)	2011	USA	4WD Control	Read Data Stream	
Tucson(LM)	2011	USA	4WD Control	Special Function	AWD Mode Selection
Tucson(LM)	2011	USA	4WD Control	Special Function	Torque Coupling Control
Tucson(LM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(LM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(LM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(LM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(LM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(LM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(LM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(LM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(LM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(LM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(LM)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(LM)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(LM)	2011	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Tucson(LM)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(LM)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(LM)	2011	USA	IMM(Immobilizer)	Special Function	Teaching
Tucson(LM)	2011	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(LM)	2011	USA	Smart Key	Version Information	
Tucson(LM)	2011	USA	Smart Key	Read Fault Code	
Tucson(LM)	2011	USA	Smart Key	Clear Fault Memory	
Tucson(LM)	2011	USA	Smart Key	Read Data Stream	
Tucson(LM)	2011	USA	Smart Key	Actuation Test	
Tucson(LM)	2011	USA	Smart Key	Special Function	Smart Key Code Saving
Tucson(LM)	2011	USA	Smart Key	Special Function	Antenna Status Check
Tucson(LM)	2011	USA	Smart Key	Special Function	Neutralization Mode
Tucson(LM)	2011	USA	Smart Key	Special Function	PDM Status Information
Tucson(LM)	2011	USA	Smart Key	Special Function	Serial Communication Line Check
Tucson(LM)	2011	USA	Smart Key	Special Function	SMK Status Information
Tucson(LM)	2011	USA	Smart Key	Special Function	TP Status Information
Tucson(LM)	2011	USA	Smart Key	Special Function	FOB Key Status Information
Tucson(LM)	2011	USA	Transmitter Code Saving	Read Data Stream	
Tucson(LM)	2011	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(LM)	2011	USA	Smart Junction Block	Version Information	

model	year	area	system	function	subfunction
Tucson(LM)	2011	USA	Smart Junction Block	Read Fault Code	
Tucson(LM)	2011	USA	Smart Junction Block	Clear Fault Memory	
Tucson(LM)	2011	USA	Smart Junction Block	Read Data Stream	
Tucson(LM)	2011	USA	Smart Junction Block	Actuation Test	
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Version Information	
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Read FreezeData	
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Special Function	CVVT Test
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(LM)	2010	USA	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Tucson(LM)	2010	USA	TCM(Transmission Control Module)	Version Information	
Tucson(LM)	2010	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(LM)	2010	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(LM)	2010	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(LM)	2010	USA	TCM(Transmission Control Module)	Read FreezeData	
Tucson(LM)	2010	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(LM)	2010	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(LM)	2010	USA	Electronic Stability Control	Version Information	
Tucson(LM)	2010	USA	Electronic Stability Control	Read Fault Code	
Tucson(LM)	2010	USA	Electronic Stability Control	Clear Fault Memory	
Tucson(LM)	2010	USA	Electronic Stability Control	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(LM)	2010	USA	Electronic Stability Control	Actuation Test	
Tucson(LM)	2010	USA	Electronic Stability Control	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Tucson(LM)	2010	USA	Electronic Stability Control	Special Function	Auto Detected Configuration
Tucson(LM)	2010	USA	Electronic Stability Control	Special Function	Steer/FSP Angle Sensor Calibration
Tucson(LM)	2010	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Tucson(LM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(LM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(LM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(LM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(LM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Tucson(LM)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson(LM)	2010	USA	AC(Air Conditioning)	Version Information	
Tucson(LM)	2010	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(LM)	2010	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(LM)	2010	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(LM)	2010	USA	AC(Air Conditioning)	Actuation Test	
Tucson(LM)	2010	USA	BCM(Body Control Module)	Version Information	
Tucson(LM)	2010	USA	BCM(Body Control Module)	Read Fault Code	
Tucson(LM)	2010	USA	BCM(Body Control Module)	Clear Fault Memory	
Tucson(LM)	2010	USA	BCM(Body Control Module)	Read Data Stream	
Tucson(LM)	2010	USA	BCM(Body Control Module)	Actuation Test	
Tucson(LM)	2010	USA	EPS(Electronic Power Steering)	Version Information	
Tucson(LM)	2010	USA	EPS(Electronic Power Steering)	Read Fault Code	
Tucson(LM)	2010	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Tucson(LM)	2010	USA	EPS(Electronic Power Steering)	Read Data Stream	
Tucson(LM)	2010	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Tucson(LM)	2010	USA	EPS(Electronic Power Steering)	Special Function	EPS Variant Coding

model	year	area	system	function	subfunction
Tucson(LM)	2010	USA	4WD Control	Version Information	
Tucson(LM)	2010	USA	4WD Control	Read Fault Code	
Tucson(LM)	2010	USA	4WD Control	Clear Fault Memory	
Tucson(LM)	2010	USA	4WD Control	Read Data Stream	
Tucson(LM)	2010	USA	4WD Control	Special Function	AWD Mode Selection
Tucson(LM)	2010	USA	4WD Control	Special Function	Torque Coupling Control
Tucson(LM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(LM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(LM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(LM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(LM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(LM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(LM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(LM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(LM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(LM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(LM)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Tucson(LM)	2010	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(LM)	2010	USA	IMM(Immobilizer)	Special Function	Password
Tucson(LM)	2010	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Tucson(LM)	2010	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(LM)	2010	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(LM)	2010	USA	IMM(Immobilizer)	Special Function	Teaching
Tucson(LM)	2010	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(LM)	2010	USA	Smart Key	Version Information	
Tucson(LM)	2010	USA	Smart Key	Read Fault Code	
Tucson(LM)	2010	USA	Smart Key	Clear Fault Memory	
Tucson(LM)	2010	USA	Smart Key	Read Data Stream	
Tucson(LM)	2010	USA	Smart Key	Actuation Test	
Tucson(LM)	2010	USA	Smart Key	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Tucson(LM)	2010	USA	Smart Key	Special Function	Antenna Status Check
Tucson(LM)	2010	USA	Smart Key	Special Function	Neutralization Mode
Tucson(LM)	2010	USA	Smart Key	Special Function	PDM Status Information
Tucson(LM)	2010	USA	Smart Key	Special Function	Serial Communication Line Check
Tucson(LM)	2010	USA	Smart Key	Special Function	SMK Status Information
Tucson(LM)	2010	USA	Smart Key	Special Function	TP Status Information
Tucson(LM)	2010	USA	Smart Key	Special Function	FOB Key Status Information
Tucson(LM)	2010	USA	Transmitter Code Saving	Read Data Stream	
Tucson(LM)	2010	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(LM)	2010	USA	Smart Junction Block	Version Information	
Tucson(LM)	2010	USA	Smart Junction Block	Read Fault Code	
Tucson(LM)	2010	USA	Smart Junction Block	Clear Fault Memory	
Tucson(LM)	2010	USA	Smart Junction Block	Read Data Stream	
Tucson(LM)	2010	USA	Smart Junction Block	Actuation Test	
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Version Information	
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Read FreezeData	
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	Ignition Test

model	year	area	system	function	subfunction
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tucson(JM)	2009	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tucson(JM)	2009	USA	TCM(Transmission Control Module)	Version Information	
Tucson(JM)	2009	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(JM)	2009	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(JM)	2009	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(JM)	2009	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(JM)	2009	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(JM)	2009	USA	ABS(Anti-lock Braking System)	Version Information	
Tucson(JM)	2009	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(JM)	2009	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(JM)	2009	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(JM)	2009	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(JM)	2009	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(JM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(JM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(JM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(JM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(JM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson(JM)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Tucson(JM)	2009	USA	AC(Air Conditioning)	Version Information	
Tucson(JM)	2009	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(JM)	2009	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(JM)	2009	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(JM)	2009	USA	AC(Air Conditioning)	Actuation Test	
Tucson(JM)	2009	USA	ETACS	Version Information	
Tucson(JM)	2009	USA	ETACS	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(JM)	2009	USA	ETACS	Actuation Test	
Tucson(JM)	2009	USA	4WD Control	Version Information	
Tucson(JM)	2009	USA	4WD Control	Read Fault Code	
Tucson(JM)	2009	USA	4WD Control	Clear Fault Memory	
Tucson(JM)	2009	USA	4WD Control	Read Data Stream	
Tucson(JM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(JM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(JM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(JM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(JM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(JM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(JM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(JM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(JM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(JM)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(JM)	2009	USA	IMM(Immobilizer)	Read Fault Code	
Tucson(JM)	2009	USA	IMM(Immobilizer)	Clear Fault Memory	
Tucson(JM)	2009	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(JM)	2009	USA	IMM(Immobilizer)	Special Function	Password
Tucson(JM)	2009	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Tucson(JM)	2009	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(JM)	2009	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(JM)	2009	USA	Transmitter Code Saving	Read Data Stream	
Tucson(JM)	2009	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2009	USA	IMM(Immobilizer)	Special Function	Teaching
Tucson(JM)	2009	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Version Information	
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Read FreezeData	
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tucson(JM)	2008	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tucson(JM)	2008	USA	TCM(Transmission Control Module)	Version Information	
Tucson(JM)	2008	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(JM)	2008	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(JM)	2008	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(JM)	2008	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(JM)	2008	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(JM)	2008	USA	ABS(Anti-lock Braking System)	Version Information	
Tucson(JM)	2008	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(JM)	2008	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(JM)	2008	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(JM)	2008	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(JM)	2008	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(JM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(JM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(JM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(JM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(JM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson(JM)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Tucson(JM)	2008	USA	AC(Air Conditioning)	Version Information	
Tucson(JM)	2008	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(JM)	2008	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(JM)	2008	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(JM)	2008	USA	AC(Air Conditioning)	Actuation Test	
Tucson(JM)	2008	USA	ETACS	Version Information	
Tucson(JM)	2008	USA	ETACS	Read Data Stream	
Tucson(JM)	2008	USA	ETACS	Actuation Test	
Tucson(JM)	2008	USA	4WD Control	Version Information	
Tucson(JM)	2008	USA	4WD Control	Read Fault Code	
Tucson(JM)	2008	USA	4WD Control	Clear Fault Memory	
Tucson(JM)	2008	USA	4WD Control	Read Data Stream	
Tucson(JM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(JM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(JM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(JM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(JM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(JM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(JM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(JM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(JM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(JM)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(JM)	2008	USA	IMM(Immobilizer)	Read Fault Code	
Tucson(JM)	2008	USA	IMM(Immobilizer)	Clear Fault Memory	
Tucson(JM)	2008	USA	IMM(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Tucson(JM)	2008	USA	IMM(Immobilizer)	Special Function	Password
Tucson(JM)	2008	USA	IMM(Immobilizer)	Special Function	Teaching/Charging
Tucson(JM)	2008	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(JM)	2008	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(JM)	2008	USA	Transmitter Code Saving	Read Data Stream	
Tucson(JM)	2008	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2008	USA	IMM(Immobilizer)	Special Function	Teaching
Tucson(JM)	2008	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Version Information	
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Read FreezeData	
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tucson(JM)	2007	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tucson(JM)	2007	USA	TCM(Transmission Control Module)	Version Information	
Tucson(JM)	2007	USA	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Tucson(JM)	2007	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(JM)	2007	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(JM)	2007	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(JM)	2007	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(JM)	2007	USA	ABS(Anti-lock Braking System)	Version Information	
Tucson(JM)	2007	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(JM)	2007	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(JM)	2007	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(JM)	2007	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(JM)	2007	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(JM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(JM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(JM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(JM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(JM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson(JM)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Tucson(JM)	2007	USA	AC(Air Conditioning)	Version Information	
Tucson(JM)	2007	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(JM)	2007	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(JM)	2007	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(JM)	2007	USA	AC(Air Conditioning)	Actuation Test	
Tucson(JM)	2007	USA	ETACS	Version Information	
Tucson(JM)	2007	USA	ETACS	Read Data Stream	
Tucson(JM)	2007	USA	ETACS	Actuation Test	
Tucson(JM)	2007	USA	4WD Control	Version Information	
Tucson(JM)	2007	USA	4WD Control	Read Fault Code	
Tucson(JM)	2007	USA	4WD Control	Clear Fault Memory	
Tucson(JM)	2007	USA	4WD Control	Read Data Stream	
Tucson(JM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Tucson(JM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(JM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(JM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(JM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(JM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(JM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(JM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(JM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(JM)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(JM)	2007	USA	IMM(Immobilizer)	Read Fault Code	
Tucson(JM)	2007	USA	IMM(Immobilizer)	Clear Fault Memory	
Tucson(JM)	2007	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(JM)	2007	USA	IMM(Immobilizer)	Special Function	Password
Tucson(JM)	2007	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Tucson(JM)	2007	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(JM)	2007	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(JM)	2007	USA	Transmitter Code Saving	Read Data Stream	
Tucson(JM)	2007	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2007	USA	IMM(Immobilizer)	Special Function	Teaching
Tucson(JM)	2007	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Version Information	
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Read FreezeData	
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tucson(JM)	2006	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tucson(JM)	2006	USA	TCM(Transmission Control Module)	Version Information	
Tucson(JM)	2006	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(JM)	2006	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(JM)	2006	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(JM)	2006	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(JM)	2006	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(JM)	2006	USA	ABS(Anti-lock Braking System)	Version Information	
Tucson(JM)	2006	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(JM)	2006	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Tucson(JM)	2006	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(JM)	2006	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(JM)	2006	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(JM)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(JM)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(JM)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(JM)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(JM)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson(JM)	2006	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Tucson(JM)	2006	USA	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Tucson(JM)	2006	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(JM)	2006	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(JM)	2006	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(JM)	2006	USA	AC(Air Conditioning)	Actuation Test	
Tucson(JM)	2006	USA	ETACS	Version Information	
Tucson(JM)	2006	USA	ETACS	Read Data Stream	
Tucson(JM)	2006	USA	ETACS	Actuation Test	
Tucson(JM)	2006	USA	4WD Control	Version Information	
Tucson(JM)	2006	USA	4WD Control	Read Fault Code	
Tucson(JM)	2006	USA	4WD Control	Clear Fault Memory	
Tucson(JM)	2006	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Tucson(JM)	2006	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Tucson(JM)	2006	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Tucson(JM)	2006	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Tucson(JM)	2006	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Tucson(JM)	2006	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Tucson(JM)	2006	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Tucson(JM)	2006	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Tucson(JM)	2006	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Tucson(JM)	2006	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Tucson(JM)	2006	USA	IMM(Immobilizer)	Read Fault Code	
Tucson(JM)	2006	USA	IMM(Immobilizer)	Clear Fault Memory	
Tucson(JM)	2006	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(JM)	2006	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Tucson(JM)	2006	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(JM)	2006	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(JM)	2006	USA	Transmitter Code Saving	Read Data Stream	
Tucson(JM)	2006	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2006	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Version Information	
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Read Fault Code	
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Clear Fault Memory	
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Read Data Stream	
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Read FreezeData	
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Actuation Test	
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	Read VIN
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	Write VIN
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	Readiness Test
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	Front Oxygen Short-Trip Test
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	Idle RPM Control Test
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	Ignition Test
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	Belt Timing Test
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Tucson(JM)	2005	USA	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Tucson(JM)	2005	USA	TCM(Transmission Control Module)	Version Information	
Tucson(JM)	2005	USA	TCM(Transmission Control Module)	Read Fault Code	
Tucson(JM)	2005	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Tucson(JM)	2005	USA	TCM(Transmission Control Module)	Read Data Stream	
Tucson(JM)	2005	USA	TCM(Transmission Control Module)	Actuation Test	
Tucson(JM)	2005	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Tucson(JM)	2005	USA	ABS(Anti-lock Braking System)	Version Information	
Tucson(JM)	2005	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Tucson(JM)	2005	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Tucson(JM)	2005	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Tucson(JM)	2005	USA	ABS(Anti-lock Braking System)	Actuation Test	
Tucson(JM)	2005	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Tucson(JM)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Tucson(JM)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Tucson(JM)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Tucson(JM)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Tucson(JM)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Tucson(JM)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Tucson(JM)	2005	USA	AC(Air Conditioning)	Version Information	
Tucson(JM)	2005	USA	AC(Air Conditioning)	Read Fault Code	
Tucson(JM)	2005	USA	AC(Air Conditioning)	Clear Fault Memory	
Tucson(JM)	2005	USA	AC(Air Conditioning)	Read Data Stream	
Tucson(JM)	2005	USA	AC(Air Conditioning)	Actuation Test	
Tucson(JM)	2005	USA	ETACS	Version Information	
Tucson(JM)	2005	USA	ETACS	Read Data Stream	
Tucson(JM)	2005	USA	ETACS	Actuation Test	
Tucson(JM)	2005	USA	4WD Control	Version Information	
Tucson(JM)	2005	USA	4WD Control	Read Fault Code	
Tucson(JM)	2005	USA	4WD Control	Clear Fault Memory	
Tucson(JM)	2005	USA	IMM(Immobilizer)	Read Fault Code	
Tucson(JM)	2005	USA	IMM(Immobilizer)	Clear Fault Memory	
Tucson(JM)	2005	USA	IMM(Immobilizer)	Read Data Stream	
Tucson(JM)	2005	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Tucson(JM)	2005	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Tucson(JM)	2005	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Tucson(JM)	2005	USA	Transmitter Code Saving	Read Data Stream	
Tucson(JM)	2005	USA	Transmitter Code Saving	Special Function	Code Saving
Tucson(JM)	2005	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2018	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2018	USA	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2018	USA	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2018	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2018	USA	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2018	USA	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2018	USA	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2018	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2018	USA	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2018	USA	ABS/ESC	Version Information	
Veloster(FS)	2018	USA	ABS/ESC	Read Fault Code	
Veloster(FS)	2018	USA	ABS/ESC	Clear Fault Memory	
Veloster(FS)	2018	USA	ABS/ESC	Read Data Stream	
Veloster(FS)	2018	USA	ABS/ESC	Actuation Test	
Veloster(FS)	2018	USA	ABS/ESC	Special Function	Auto Detected Configuration Reset(ESP/ESC)Only
Veloster(FS)	2018	USA	ABS/ESC	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)

model	year	area	system	function	subfunction
Veloster(FS)	2018	USA	ABS/ESC	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2018	USA	ABS/ESC	Special Function	Variant Coding
Veloster(FS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Veloster(FS)	2018	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Veloster(FS)	2018	USA	AC(Air Conditioning)	Version Information	
Veloster(FS)	2018	USA	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2018	USA	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2018	USA	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2018	USA	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2018	USA	BCM(Body Control Module)	Version Information	
Veloster(FS)	2018	USA	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2018	USA	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2018	USA	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2018	USA	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2018	USA	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2018	USA	Tire Pressure Monitoring	Version Information	
Veloster(FS)	2018	USA	Tire Pressure Monitoring	Read Fault Code	
Veloster(FS)	2018	USA	Tire Pressure Monitoring	Clear Fault Memory	
Veloster(FS)	2018	USA	Tire Pressure Monitoring	Read Data Stream	
Veloster(FS)	2018	USA	Tire Pressure Monitoring	Special Function	Write VIN
Veloster(FS)	2018	USA	Tire Pressure Monitoring	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Reading
Veloster(FS)	2018	USA	Tire Pressure Monitoring	Special Function	Vehicle Name Code Writing
Veloster(FS)	2018	USA	Tire Pressure Monitoring	Special Function	TPMS TEST
Veloster(FS)	2018	USA	Motor driven Power Steering	Version Information	

model	year	area	system	function	subfunction
Veloster(FS)	2018	USA	Motor driven Power Steering	Read Fault Code	
Veloster(FS)	2018	USA	Motor driven Power Steering	Clear Fault Memory	
Veloster(FS)	2018	USA	Motor driven Power Steering	Read Data Stream	
Veloster(FS)	2018	USA	Motor driven Power Steering	Special Function	ASP Calibration
Veloster(FS)	2018	USA	Motor driven Power Steering	Special Function	EPS Type Recognition
Veloster(FS)	2018	USA	Motor driven Power Steering	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2018	USA	Motor driven Power Steering	Special Function	Part Exchange(Power Steering ECU)
Veloster(FS)	2018	USA	Motor driven Power Steering	Special Function	Part Exchange(Power Steering Motor)
Veloster(FS)	2018	USA	Smart Key Unit	Version Information	
Veloster(FS)	2018	USA	Smart Key Unit	Read Fault Code	
Veloster(FS)	2018	USA	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2018	USA	Smart Key Unit	Read Data Stream	
Veloster(FS)	2018	USA	Smart Key Unit	Actuation Test	
Veloster(FS)	2018	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2018	USA	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2018	USA	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2018	USA	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2018	USA	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2018	USA	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2018	USA	Smart Key Unit	Special Function	User Option
Veloster(FS)	2018	USA	Telematics Unit	Version Information	
Veloster(FS)	2018	USA	Telematics Unit	Read Fault Code	
Veloster(FS)	2018	USA	Telematics Unit	Clear Fault Memory	
Veloster(FS)	2018	USA	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2018	USA	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2018	USA	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2018	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Veloster(FS)	2018	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2018	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2018	USA	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2018	USA	Transmitter Code Saving	Read Data Stream	
Veloster(FS)	2018	USA	Transmitter Code Saving	Special Function	Code Saving
Veloster(FS)	2018	USA	BCM(Body Control Module)	Special Function	Service Reminder Setting
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2017	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2017	USA	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2017	USA	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2017	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2017	USA	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2017	USA	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2017	USA	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2017	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2017	USA	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2017	USA	ABS/ESC	Version Information	
Veloster(FS)	2017	USA	ABS/ESC	Read Fault Code	
Veloster(FS)	2017	USA	ABS/ESC	Clear Fault Memory	

model	year	area	system	function	subfunction
Veloster(FS)	2017	USA	ABS/ESC	Read Data Stream	
Veloster(FS)	2017	USA	ABS/ESC	Actuation Test	
Veloster(FS)	2017	USA	ABS/ESC	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Veloster(FS)	2017	USA	ABS/ESC	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2017	USA	ABS/ESC	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2017	USA	ABS/ESC	Special Function	Variant Coding
Veloster(FS)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Veloster(FS)	2017	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	PODS Reset
Veloster(FS)	2017	USA	AC(Air Conditioning)	Version Information	
Veloster(FS)	2017	USA	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2017	USA	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2017	USA	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2017	USA	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2017	USA	BCM(Body Control Module)	Version Information	
Veloster(FS)	2017	USA	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2017	USA	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2017	USA	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2017	USA	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2017	USA	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2017	USA	BCM(Body Control Module)	Special Function	Service Reminder Setting
Veloster(FS)	2017	USA	Motor Driven Power Steering	Version Information	
Veloster(FS)	2017	USA	Motor Driven Power Steering	Read Fault Code	
Veloster(FS)	2017	USA	Motor Driven Power Steering	Clear Fault Memory	

model	year	area	system	function	subfunction
Veloster(FS)	2017	USA	Motor Driven Power Steering	Read Data Stream	
Veloster(FS)	2017	USA	Motor Driven Power Steering	Special Function	ASP Calibration
Veloster(FS)	2017	USA	Motor Driven Power Steering	Special Function	EPS Type Recognition
Veloster(FS)	2017	USA	Motor Driven Power Steering	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2017	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering ECU)
Veloster(FS)	2017	USA	Motor Driven Power Steering	Special Function	Part Exchange(Power Steering Motor)
Veloster(FS)	2017	USA	Smart Key Unit	Version Information	
Veloster(FS)	2017	USA	Smart Key Unit	Read Fault Code	
Veloster(FS)	2017	USA	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2017	USA	Smart Key Unit	Read Data Stream	
Veloster(FS)	2017	USA	Smart Key Unit	Actuation Test	
Veloster(FS)	2017	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2017	USA	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2017	USA	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2017	USA	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2017	USA	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2017	USA	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2017	USA	Smart Key Unit	Special Function	User Option
Veloster(FS)	2017	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2017	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2017	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2017	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST

model	year	area	system	function	subfunction
Veloster(FS)	2017	USA	IMMO(Immobilizer)	Read Fault Code	
Veloster(FS)	2017	USA	IMMO(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2017	USA	IMMO(Immobilizer)	Read Data Stream	
Veloster(FS)	2017	USA	IMMO(Immobilizer)	Special Function	Password
Veloster(FS)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching/Chipping
Veloster(FS)	2017	USA	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2017	USA	IMMO(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2017	USA	IMMO(Immobilizer)	Special Function	Teaching
Veloster(FS)	2017	USA	CODE(Transmitter Code Saving)	Read Data Stream	
Veloster(FS)	2017	USA	CODE(Transmitter Code Saving)	Special Function	Code Saving
Veloster(FS)	2017	USA	Telematics Unit	Version Information	
Veloster(FS)	2017	USA	Telematics Unit	Read Fault Code	
Veloster(FS)	2017	USA	Telematics Unit	Clear Fault Memory	
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2016	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2016	USA	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2016	USA	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2016	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2016	USA	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2016	USA	TCM(Transmission Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
Veloster(FS)	2016	USA	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2016	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2016	USA	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2016	USA	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2016	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2016	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2016	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2016	USA	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Veloster(FS)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2016	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2016	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Veloster(FS)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2016	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Veloster(FS)	2016	USA	AC(Air Conditioning)	Version Information	
Veloster(FS)	2016	USA	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2016	USA	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2016	USA	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2016	USA	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2016	USA	BCM(Body Control Module)	Version Information	
Veloster(FS)	2016	USA	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2016	USA	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2016	USA	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2016	USA	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Veloster(FS)	2016	USA	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2016	USA	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2016	USA	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2016	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2016	USA	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2016	USA	EPS(Electronic Power Steering)	Read FreezeData	
Veloster(FS)	2016	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2016	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2016	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2016	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2016	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2016	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2016	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2016	USA	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2016	USA	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2016	USA	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2016	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veloster(FS)	2016	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2016	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2016	USA	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2016	USA	Smart Key Unit	Version Information	
Veloster(FS)	2016	USA	Smart Key Unit	Read Fault Code	
Veloster(FS)	2016	USA	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Veloster(FS)	2016	USA	Smart Key Unit	Read Data Stream	
Veloster(FS)	2016	USA	Smart Key Unit	Actuation Test	
Veloster(FS)	2016	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2016	USA	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2016	USA	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2016	USA	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2016	USA	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2016	USA	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2016	USA	Smart Key Unit	Special Function	User Option
Veloster(FS)	2016	USA	Cluster Module	Version Information	
Veloster(FS)	2016	USA	Cluster Module	Read Fault Code	
Veloster(FS)	2016	USA	Cluster Module	Clear Fault Memory	
Veloster(FS)	2016	USA	Cluster Module	Read Data Stream	
Veloster(FS)	2016	USA	Cluster Module	Actuation Test	
Veloster(FS)	2016	USA	PODS-F	Version Information	
Veloster(FS)	2016	USA	PODS-F	Read Fault Code	
Veloster(FS)	2016	USA	PODS-F	Clear Fault Memory	
Veloster(FS)	2016	USA	PODS-F	Special Function	PODS Reset
Veloster(FS)	2016	USA	Telematics Unit	Version Information	
Veloster(FS)	2016	USA	Telematics Unit	Read Fault Code	
Veloster(FS)	2016	USA	Telematics Unit	Clear Fault Memory	
Veloster(FS)	2016	USA	Transmitter Code Saving	Read Data Stream	
Veloster(FS)	2016	USA	Transmitter Code Saving	Special Function	Code Saving
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2015	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2015	USA	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2015	USA	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2015	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2015	USA	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2015	USA	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2015	USA	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2015	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2015	USA	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2015	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2015	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2015	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2015	USA	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/FSC)Only
Veloster(FS)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2015	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2015	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Veloster(FS)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2015	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Veloster(FS)	2015	USA	AC(Air Conditioning)	Version Information	
Veloster(FS)	2015	USA	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2015	USA	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2015	USA	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2015	USA	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2015	USA	BCM(Body Control Module)	Version Information	
Veloster(FS)	2015	USA	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2015	USA	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2015	USA	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2015	USA	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2015	USA	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2015	USA	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2015	USA	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2015	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2015	USA	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2015	USA	EPS(Electronic Power Steering)	Read FreezeData	
Veloster(FS)	2015	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2015	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2015	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2015	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2015	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2015	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2015	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST

model	year	area	system	function	subfunction
Veloster(FS)	2015	USA	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2015	USA	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2015	USA	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2015	USA	IMM(Immobilizer)	Special Function	Password
Veloster(FS)	2015	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Veloster(FS)	2015	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2015	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2015	USA	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2015	USA	Smart Key Unit	Version Information	
Veloster(FS)	2015	USA	Smart Key Unit	Read Fault Code	
Veloster(FS)	2015	USA	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2015	USA	Smart Key Unit	Read Data Stream	
Veloster(FS)	2015	USA	Smart Key Unit	Actuation Test	
Veloster(FS)	2015	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2015	USA	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2015	USA	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2015	USA	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2015	USA	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2015	USA	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2015	USA	Smart Key Unit	Special Function	User Option
Veloster(FS)	2015	USA	Cluster Module	Version Information	
Veloster(FS)	2015	USA	Cluster Module	Read Fault Code	
Veloster(FS)	2015	USA	Cluster Module	Clear Fault Memory	
Veloster(FS)	2015	USA	Cluster Module	Read Data Stream	
Veloster(FS)	2015	USA	Cluster Module	Actuation Test	
Veloster(FS)	2015	USA	PODS-F	Version Information	
Veloster(FS)	2015	USA	PODS-F	Read Fault Code	
Veloster(FS)	2015	USA	PODS-F	Clear Fault Memory	
Veloster(FS)	2015	USA	PODS-F	Special Function	PODS Reset
Veloster(FS)	2015	USA	Telematics Unit	Version Information	

model	year	area	system	function	subfunction
Veloster(FS)	2015	USA	Telematics Unit	Read Fault Code	
Veloster(FS)	2015	USA	Telematics Unit	Clear Fault Memory	
Veloster(FS)	2015	USA	Transmitter Code Saving	Read Data Stream	
Veloster(FS)	2015	USA	Transmitter Code Saving	Special Function	Code Saving
Veloster(FS)	2015	USA	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2014	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2014	USA	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2014	USA	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2014	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2014	USA	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2014	USA	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2014	USA	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2014	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2014	USA	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2014	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2014	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2014	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2014	USA	ABS(Anti-lock Braking System)	Actuation Test	

model	year	area	system	function	subfunction
Veloster(FS)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(ESP/ESC Only)
Veloster(FS)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2014	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2014	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Veloster(FS)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2014	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Veloster(FS)	2014	USA	AC(Air Conditioning)	Version Information	
Veloster(FS)	2014	USA	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2014	USA	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2014	USA	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2014	USA	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2014	USA	BCM(Body Control Module)	Version Information	
Veloster(FS)	2014	USA	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2014	USA	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2014	USA	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2014	USA	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2014	USA	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2014	USA	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2014	USA	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2014	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2014	USA	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2014	USA	EPS(Electronic Power Steering)	Read FreezeData	
Veloster(FS)	2014	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2014	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Veloster(FS)	2014	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2014	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2014	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2014	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2014	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2014	USA	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2014	USA	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2014	USA	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2014	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veloster(FS)	2014	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2014	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2014	USA	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2014	USA	Smart Key Unit	Version Information	
Veloster(FS)	2014	USA	Smart Key Unit	Read Fault Code	
Veloster(FS)	2014	USA	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2014	USA	Smart Key Unit	Read Data Stream	
Veloster(FS)	2014	USA	Smart Key Unit	Actuation Test	
Veloster(FS)	2014	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2014	USA	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2014	USA	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2014	USA	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2014	USA	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2014	USA	Smart Key Unit	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Veloster(FS)	2014	USA	Smart Key Unit	Special Function	User Option
Veloster(FS)	2014	USA	Cluster Module	Version Information	
Veloster(FS)	2014	USA	Cluster Module	Read Fault Code	
Veloster(FS)	2014	USA	Cluster Module	Clear Fault Memory	
Veloster(FS)	2014	USA	Cluster Module	Read Data Stream	
Veloster(FS)	2014	USA	Cluster Module	Actuation Test	
Veloster(FS)	2014	USA	PODS-F	Version Information	
Veloster(FS)	2014	USA	PODS-F	Read Fault Code	
Veloster(FS)	2014	USA	PODS-F	Clear Fault Memory	
Veloster(FS)	2014	USA	PODS-F	Special Function	PODS Reset
Veloster(FS)	2014	USA	Telematics Unit	Version Information	
Veloster(FS)	2014	USA	Telematics Unit	Read Fault Code	
Veloster(FS)	2014	USA	Telematics Unit	Clear Fault Memory	
Veloster(FS)	2014	USA	Transmitter Code Saving	Read Data Stream	
Veloster(FS)	2014	USA	Transmitter Code Saving	Special Function	Code Saving
Veloster(FS)	2014	USA	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2013	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2013	USA	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Veloster(FS)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2013	USA	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2013	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2013	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2013	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2013	USA	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration Reset(FSP/ESC Only)
Veloster(FS)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2013	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2013	USA	ABS(Anti-lock Braking System)	Special Function	Variant Coding
Veloster(FS)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veloster(FS)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Veloster(FS)	2013	USA	AC(Air Conditioning)	Version Information	
Veloster(FS)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2013	USA	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2013	USA	BCM(Body Control Module)	Version Information	
Veloster(FS)	2013	USA	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Veloster(FS)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2013	USA	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2013	USA	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2013	USA	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2013	USA	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2013	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2013	USA	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2013	USA	EPS(Electronic Power Steering)	Read FreezeData	
Veloster(FS)	2013	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2013	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2013	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veloster(FS)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2013	USA	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2013	USA	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2013	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veloster(FS)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2013	USA	IMM(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Veloster(FS)	2013	USA	Smart Key Unit	Version Information	
Veloster(FS)	2013	USA	Smart Key Unit	Read Fault Code	
Veloster(FS)	2013	USA	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2013	USA	Smart Key Unit	Read Data Stream	
Veloster(FS)	2013	USA	Smart Key Unit	Actuation Test	
Veloster(FS)	2013	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2013	USA	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2013	USA	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2013	USA	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2013	USA	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2013	USA	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2013	USA	Smart Key Unit	Special Function	User Option
Veloster(FS)	2013	USA	Cluster Module	Version Information	
Veloster(FS)	2013	USA	Cluster Module	Read Fault Code	
Veloster(FS)	2013	USA	Cluster Module	Clear Fault Memory	
Veloster(FS)	2013	USA	Cluster Module	Read Data Stream	
Veloster(FS)	2013	USA	Cluster Module	Actuation Test	
Veloster(FS)	2013	USA	PODS-F	Version Information	
Veloster(FS)	2013	USA	PODS-F	Read Fault Code	
Veloster(FS)	2013	USA	PODS-F	Clear Fault Memory	
Veloster(FS)	2013	USA	PODS-F	Special Function	PODS Reset
Veloster(FS)	2013	USA	Telematics Unit	Version Information	
Veloster(FS)	2013	USA	Telematics Unit	Read Fault Code	
Veloster(FS)	2013	USA	Telematics Unit	Clear Fault Memory	
Veloster(FS)	2013	USA	Transmitter Code Saving	Read Data Stream	
Veloster(FS)	2013	USA	Transmitter Code Saving	Special Function	Code Saving
Veloster(FS)	2013	USA	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Version Information	
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Special Function	ETC Test(Optional)
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veloster(FS)	2012	USA	ECM(Engine Control Module)	Special Function	Alternator TEST
Veloster(FS)	2012	USA	TCM(Transmission Control Module)	Version Information	
Veloster(FS)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Veloster(FS)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veloster(FS)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Veloster(FS)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Veloster(FS)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Veloster(FS)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veloster(FS)	2012	USA	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Veloster(FS)	2012	USA	ABS(Anti-lock Braking System)	Version Information	
Veloster(FS)	2012	USA	ABS(Anti-lock Braking System)	Read Fault Code	
Veloster(FS)	2012	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
Veloster(FS)	2012	USA	ABS(Anti-lock Braking System)	Read Data Stream	
Veloster(FS)	2012	USA	ABS(Anti-lock Braking System)	Actuation Test	
Veloster(FS)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Longitudinal G Sensor Calibration(HAC/DBC Only)
Veloster(FS)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Auto Detected Configuration
Veloster(FS)	2012	USA	ABS(Anti-lock Braking System)	Special Function	Reset(FSP/FSC)Only
Veloster(FS)	2012	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
Veloster(FS)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Veloster(FS)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veloster(FS)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veloster(FS)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veloster(FS)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Veloster(FS)	2012	USA	AC(Air Conditioning)	Version Information	
Veloster(FS)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Veloster(FS)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Veloster(FS)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Veloster(FS)	2012	USA	AC(Air Conditioning)	Actuation Test	
Veloster(FS)	2012	USA	BCM(Body Control Module)	Version Information	
Veloster(FS)	2012	USA	BCM(Body Control Module)	Read Fault Code	
Veloster(FS)	2012	USA	BCM(Body Control Module)	Clear Fault Memory	
Veloster(FS)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Veloster(FS)	2012	USA	BCM(Body Control Module)	Actuation Test	
Veloster(FS)	2012	USA	BCM(Body Control Module)	Special Function	User Option
Veloster(FS)	2012	USA	EPS(Electronic Power Steering)	Version Information	
Veloster(FS)	2012	USA	EPS(Electronic Power Steering)	Read Fault Code	
Veloster(FS)	2012	USA	EPS(Electronic Power Steering)	Clear Fault Memory	
Veloster(FS)	2012	USA	EPS(Electronic Power Steering)	Read Data Stream	
Veloster(FS)	2012	USA	EPS(Electronic Power Steering)	Read FreezeData	
Veloster(FS)	2012	USA	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Veloster(FS)	2012	USA	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Veloster(FS)	2012	USA	EPS(Electronic Power Steering)	Special Function	MDPS TEST(Motor Driven Power Steering)
Veloster(FS)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veloster(FS)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veloster(FS)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veloster(FS)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veloster(FS)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
Veloster(FS)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veloster(FS)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veloster(FS)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veloster(FS)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS TEST
Veloster(FS)	2012	USA	IMM(Immobilizer)	Read Fault Code	
Veloster(FS)	2012	USA	IMM(Immobilizer)	Clear Fault Memory	
Veloster(FS)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Veloster(FS)	2012	USA	IMM(Immobilizer)	Special Function	Password
Veloster(FS)	2012	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Veloster(FS)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veloster(FS)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veloster(FS)	2012	USA	IMM(Immobilizer)	Special Function	Teaching
Veloster(FS)	2012	USA	Smart Key Unit	Version Information	
Veloster(FS)	2012	USA	Smart Key Unit	Read Fault Code	
Veloster(FS)	2012	USA	Smart Key Unit	Clear Fault Memory	
Veloster(FS)	2012	USA	Smart Key Unit	Read Data Stream	
Veloster(FS)	2012	USA	Smart Key Unit	Actuation Test	
Veloster(FS)	2012	USA	Smart Key Unit	Special Function	Smart Key Code Saving
Veloster(FS)	2012	USA	Smart Key Unit	Special Function	Antenna Status Check
Veloster(FS)	2012	USA	Smart Key Unit	Special Function	Current FOB Key Check
Veloster(FS)	2012	USA	Smart Key Unit	Special Function	FOB Key Status Information
Veloster(FS)	2012	USA	Smart Key Unit	Special Function	Neutralization Mode
Veloster(FS)	2012	USA	Smart Key Unit	Special Function	SMK Status Information
Veloster(FS)	2012	USA	Smart Key Unit	Special Function	User Option
Veloster(FS)	2012	USA	Cluster Module	Version Information	
Veloster(FS)	2012	USA	Cluster Module	Read Fault Code	
Veloster(FS)	2012	USA	Cluster Module	Clear Fault Memory	
Veloster(FS)	2012	USA	Cluster Module	Read Data Stream	
Veloster(FS)	2012	USA	Cluster Module	Actuation Test	
Veloster(FS)	2012	USA	PODS-F	Version Information	

model	year	area	system	function	subfunction
Veloster(FS)	2012	USA	PODS-F	Read Fault Code	
Veloster(FS)	2012	USA	PODS-F	Clear Fault Memory	
Veloster(FS)	2012	USA	PODS-F	Special Function	PODS Reset
Veloster(FS)	2012	USA	Telematics Unit	Version Information	
Veloster(FS)	2012	USA	Telematics Unit	Read Fault Code	
Veloster(FS)	2012	USA	Telematics Unit	Clear Fault Memory	
Veloster(FS)	2012	USA	Transmitter Code Saving	Read Data Stream	
Veloster(FS)	2012	USA	Transmitter Code Saving	Special Function	Code Saving
Veracruz(EN)	2013	USA	ECM(Engine Control Module)	Version Information	
Veracruz(EN)	2013	USA	ECM(Engine Control Module)	Read Fault Code	
Veracruz(EN)	2013	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz(EN)	2013	USA	ECM(Engine Control Module)	Read Data Stream	
Veracruz(EN)	2013	USA	ECM(Engine Control Module)	Read FreezeData	
Veracruz(EN)	2013	USA	ECM(Engine Control Module)	Actuation Test	
Veracruz(EN)	2013	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz(EN)	2013	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz(EN)	2013	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz(EN)	2013	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Veracruz(EN)	2013	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz(EN)	2013	USA	TCM(Transmission Control Module)	Version Information	
Veracruz(EN)	2013	USA	TCM(Transmission Control Module)	Read Fault Code	
Veracruz(EN)	2013	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz(EN)	2013	USA	TCM(Transmission Control Module)	Read Data Stream	
Veracruz(EN)	2013	USA	TCM(Transmission Control Module)	Read FreezeData	
Veracruz(EN)	2013	USA	TCM(Transmission Control Module)	Actuation Test	
Veracruz(EN)	2013	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz(EN)	2013	USA	TCM(Transmission Control Module)	Special Function	N Position The Adaptive
Veracruz(EN)	2013	USA	Electronic Stability Control	Version Information	
Veracruz(EN)	2013	USA	Electronic Stability Control	Read Fault Code	

model	year	area	system	function	subfunction
Veracruz(EN)	2013	USA	Electronic Stability Control	Clear Fault Memory	
Veracruz(EN)	2013	USA	Electronic Stability Control	Read Data Stream	
Veracruz(EN)	2013	USA	Electronic Stability Control	Actuation Test	
Veracruz(EN)	2013	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Veracruz(EN)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz(EN)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz(EN)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz(EN)	2013	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz(EN)	2013	USA	AC(Air Conditioning)	Version Information	
Veracruz(EN)	2013	USA	AC(Air Conditioning)	Read Fault Code	
Veracruz(EN)	2013	USA	AC(Air Conditioning)	Clear Fault Memory	
Veracruz(EN)	2013	USA	AC(Air Conditioning)	Read Data Stream	
Veracruz(EN)	2013	USA	AC(Air Conditioning)	Actuation Test	
Veracruz(EN)	2013	USA	BCM(Body Control Module)	Version Information	
Veracruz(EN)	2013	USA	BCM(Body Control Module)	Read Fault Code	
Veracruz(EN)	2013	USA	BCM(Body Control Module)	Clear Fault Memory	
Veracruz(EN)	2013	USA	BCM(Body Control Module)	Read Data Stream	
Veracruz(EN)	2013	USA	BCM(Body Control Module)	Actuation Test	
Veracruz(EN)	2013	USA	Power Tailgate	Version Information	
Veracruz(EN)	2013	USA	Power Tailgate	Read Fault Code	
Veracruz(EN)	2013	USA	Power Tailgate	Clear Fault Memory	
Veracruz(EN)	2013	USA	Power Tailgate	Read Data Stream	
Veracruz(EN)	2013	USA	4WD Control	Version Information	
Veracruz(EN)	2013	USA	4WD Control	Read Fault Code	
Veracruz(EN)	2013	USA	4WD Control	Clear Fault Memory	
Veracruz(EN)	2013	USA	4WD Control	Read Data Stream	
Veracruz(EN)	2013	USA	4WD Control	Actuation Test	
Veracruz(EN)	2013	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz(EN)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Veracruz(EN)	2013	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz(EN)	2013	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz(EN)	2013	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz(EN)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veracruz(EN)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veracruz(EN)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz(EN)	2013	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veracruz(EN)	2013	USA	IMM(Immobilizer)	Read Data Stream	
Veracruz(EN)	2013	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veracruz(EN)	2013	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz(EN)	2013	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz(EN)	2013	USA	IMM(Immobilizer)	Special Function	Teaching
Veracruz(EN)	2013	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz(EN)	2013	USA	Smart Key	Read Data Stream	
Veracruz(EN)	2013	USA	Smart Key	Special Function	Smart Key Code Saving
Veracruz(EN)	2013	USA	Smart Key	Version Information	
Veracruz(EN)	2013	USA	Smart Key	Read Fault Code	
Veracruz(EN)	2013	USA	Smart Key	Clear Fault Memory	
Veracruz(EN)	2013	USA	Smart Key	Actuation Test	
Veracruz(EN)	2013	USA	Smart Key	Special Function	Antenna Status Check
Veracruz(EN)	2013	USA	Smart Key	Special Function	Neutralization Mode
Veracruz(EN)	2013	USA	Smart Key	Special Function	Serial Communication Line Check
Veracruz(EN)	2013	USA	Smart Key	Special Function	MSL/Immobilizer key status information
Veracruz(EN)	2013	USA	Transmitter Code Saving	Read Data Stream	
Veracruz(EN)	2013	USA	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz(EN)	2013	USA	Weight Classification System	Version Information	
Veracruz(EN)	2013	USA	Weight Classification System	Read Fault Code	
Veracruz(EN)	2013	USA	Weight Classification System	Clear Fault Memory	
Veracruz(EN)	2013	USA	Weight Classification System	Read Data Stream	

model	year	area	system	function	subfunction
Veracruz(EN)	2013	USA	Weight Classification System	Special Function	WCS Reset
Veracruz(EN)	2012	USA	ECM(Engine Control Module)	Version Information	
Veracruz(EN)	2012	USA	ECM(Engine Control Module)	Read Fault Code	
Veracruz(EN)	2012	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz(EN)	2012	USA	ECM(Engine Control Module)	Read Data Stream	
Veracruz(EN)	2012	USA	ECM(Engine Control Module)	Read FreezeData	
Veracruz(EN)	2012	USA	ECM(Engine Control Module)	Actuation Test	
Veracruz(EN)	2012	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz(EN)	2012	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz(EN)	2012	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz(EN)	2012	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Veracruz(EN)	2012	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz(EN)	2012	USA	TCM(Transmission Control Module)	Version Information	
Veracruz(EN)	2012	USA	TCM(Transmission Control Module)	Read Fault Code	
Veracruz(EN)	2012	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz(EN)	2012	USA	TCM(Transmission Control Module)	Read Data Stream	
Veracruz(EN)	2012	USA	TCM(Transmission Control Module)	Read FreezeData	
Veracruz(EN)	2012	USA	TCM(Transmission Control Module)	Actuation Test	
Veracruz(EN)	2012	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz(EN)	2012	USA	TCM(Transmission Control Module)	Special Function	N Position The Adaptive
Veracruz(EN)	2012	USA	Electronic Stability Control	Version Information	
Veracruz(EN)	2012	USA	Electronic Stability Control	Read Fault Code	
Veracruz(EN)	2012	USA	Electronic Stability Control	Clear Fault Memory	
Veracruz(EN)	2012	USA	Electronic Stability Control	Read Data Stream	
Veracruz(EN)	2012	USA	Electronic Stability Control	Actuation Test	
Veracruz(EN)	2012	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Veracruz(EN)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz(EN)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz(EN)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Veracruz(EN)	2012	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz(EN)	2012	USA	AC(Air Conditioning)	Version Information	
Veracruz(EN)	2012	USA	AC(Air Conditioning)	Read Fault Code	
Veracruz(EN)	2012	USA	AC(Air Conditioning)	Clear Fault Memory	
Veracruz(EN)	2012	USA	AC(Air Conditioning)	Read Data Stream	
Veracruz(EN)	2012	USA	AC(Air Conditioning)	Actuation Test	
Veracruz(EN)	2012	USA	BCM(Body Control Module)	Version Information	
Veracruz(EN)	2012	USA	BCM(Body Control Module)	Read Fault Code	
Veracruz(EN)	2012	USA	BCM(Body Control Module)	Clear Fault Memory	
Veracruz(EN)	2012	USA	BCM(Body Control Module)	Read Data Stream	
Veracruz(EN)	2012	USA	BCM(Body Control Module)	Actuation Test	
Veracruz(EN)	2012	USA	Power Tailgate	Version Information	
Veracruz(EN)	2012	USA	Power Tailgate	Read Fault Code	
Veracruz(EN)	2012	USA	Power Tailgate	Clear Fault Memory	
Veracruz(EN)	2012	USA	Power Tailgate	Read Data Stream	
Veracruz(EN)	2012	USA	4WD Control	Version Information	
Veracruz(EN)	2012	USA	4WD Control	Read Fault Code	
Veracruz(EN)	2012	USA	4WD Control	Clear Fault Memory	
Veracruz(EN)	2012	USA	4WD Control	Read Data Stream	
Veracruz(EN)	2012	USA	4WD Control	Actuation Test	
Veracruz(EN)	2012	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz(EN)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veracruz(EN)	2012	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz(EN)	2012	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz(EN)	2012	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz(EN)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veracruz(EN)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veracruz(EN)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz(EN)	2012	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Veracruz(EN)	2012	USA	IMM(Immobilizer)	Read Data Stream	
Veracruz(EN)	2012	USA	IMM(Immobilizer)	Special Function	Password
Veracruz(EN)	2012	USA	IMM(Immobilizer)	Special Function	Teaching/Chipping
Veracruz(EN)	2012	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz(EN)	2012	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz(EN)	2012	USA	IMM(Immobilizer)	Special Function	Teaching
Veracruz(EN)	2012	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz(EN)	2012	USA	Smart Key	Read Data Stream	
Veracruz(EN)	2012	USA	Smart Key	Special Function	Smart Key Code Saving
Veracruz(EN)	2012	USA	Smart Key	Version Information	
Veracruz(EN)	2012	USA	Smart Key	Read Fault Code	
Veracruz(EN)	2012	USA	Smart Key	Clear Fault Memory	
Veracruz(EN)	2012	USA	Smart Key	Actuation Test	
Veracruz(EN)	2012	USA	Smart Key	Special Function	Antenna Status Check
Veracruz(EN)	2012	USA	Smart Key	Special Function	Neutralization Mode
Veracruz(EN)	2012	USA	Smart Key	Special Function	Serial Communication Line
Veracruz(EN)	2012	USA	Smart Key	Special Function	Close Immobilizer Key Status Information
Veracruz(EN)	2012	USA	Transmitter Code Saving	Read Data Stream	
Veracruz(EN)	2012	USA	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz(EN)	2012	USA	Weight Classification System	Version Information	
Veracruz(EN)	2012	USA	Weight Classification System	Read Fault Code	
Veracruz(EN)	2012	USA	Weight Classification System	Clear Fault Memory	
Veracruz(EN)	2012	USA	Weight Classification System	Read Data Stream	
Veracruz(EN)	2012	USA	Weight Classification System	Special Function	WCS Reset
Veracruz(EN)	2011	USA	ECM(Engine Control Module)	Version Information	
Veracruz(EN)	2011	USA	ECM(Engine Control Module)	Read Fault Code	
Veracruz(EN)	2011	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz(EN)	2011	USA	ECM(Engine Control Module)	Read Data Stream	
Veracruz(EN)	2011	USA	ECM(Engine Control Module)	Read FreezeData	
Veracruz(EN)	2011	USA	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Veracruz(EN)	2011	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz(EN)	2011	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz(EN)	2011	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz(EN)	2011	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Veracruz(EN)	2011	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz(EN)	2011	USA	TCM(Transmission Control Module)	Version Information	
Veracruz(EN)	2011	USA	TCM(Transmission Control Module)	Read Fault Code	
Veracruz(EN)	2011	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz(EN)	2011	USA	TCM(Transmission Control Module)	Read Data Stream	
Veracruz(EN)	2011	USA	TCM(Transmission Control Module)	Read FreezeData	
Veracruz(EN)	2011	USA	TCM(Transmission Control Module)	Actuation Test	
Veracruz(EN)	2011	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz(EN)	2011	USA	TCM(Transmission Control Module)	Special Function	N Position The Adaptive
Veracruz(EN)	2011	USA	Electronic Stability Control	Version Information	
Veracruz(EN)	2011	USA	Electronic Stability Control	Read Fault Code	
Veracruz(EN)	2011	USA	Electronic Stability Control	Clear Fault Memory	
Veracruz(EN)	2011	USA	Electronic Stability Control	Read Data Stream	
Veracruz(EN)	2011	USA	Electronic Stability Control	Actuation Test	
Veracruz(EN)	2011	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Veracruz(EN)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz(EN)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz(EN)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz(EN)	2011	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz(EN)	2011	USA	AC(Air Conditioning)	Version Information	
Veracruz(EN)	2011	USA	AC(Air Conditioning)	Read Fault Code	
Veracruz(EN)	2011	USA	AC(Air Conditioning)	Clear Fault Memory	
Veracruz(EN)	2011	USA	AC(Air Conditioning)	Read Data Stream	
Veracruz(EN)	2011	USA	AC(Air Conditioning)	Actuation Test	
Veracruz(EN)	2011	USA	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Veracruz(EN)	2011	USA	BCM(Body Control Module)	Read Fault Code	
Veracruz(EN)	2011	USA	BCM(Body Control Module)	Clear Fault Memory	
Veracruz(EN)	2011	USA	BCM(Body Control Module)	Read Data Stream	
Veracruz(EN)	2011	USA	BCM(Body Control Module)	Actuation Test	
Veracruz(EN)	2011	USA	Power Tailgate	Version Information	
Veracruz(EN)	2011	USA	Power Tailgate	Read Fault Code	
Veracruz(EN)	2011	USA	Power Tailgate	Clear Fault Memory	
Veracruz(EN)	2011	USA	Power Tailgate	Read Data Stream	
Veracruz(EN)	2011	USA	4WD Control	Version Information	
Veracruz(EN)	2011	USA	4WD Control	Read Fault Code	
Veracruz(EN)	2011	USA	4WD Control	Clear Fault Memory	
Veracruz(EN)	2011	USA	4WD Control	Read Data Stream	
Veracruz(EN)	2011	USA	4WD Control	Actuation Test	
Veracruz(EN)	2011	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz(EN)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veracruz(EN)	2011	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz(EN)	2011	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz(EN)	2011	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz(EN)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veracruz(EN)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veracruz(EN)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz(EN)	2011	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veracruz(EN)	2011	USA	IMM(Immobilizer)	Read Data Stream	
Veracruz(EN)	2011	USA	IMM(Immobilizer)	Special Function	Password Teaching/Chipping
Veracruz(EN)	2011	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz(EN)	2011	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz(EN)	2011	USA	IMM(Immobilizer)	Special Function	Teaching
Veracruz(EN)	2011	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz(EN)	2011	USA	Smart Key	Read Data Stream	

model	year	area	system	function	subfunction
Veracruz(EN)	2011	USA	Smart Key	Special Function	Smart Key Code Saving
Veracruz(EN)	2011	USA	Smart Key	Version Information	
Veracruz(EN)	2011	USA	Smart Key	Read Fault Code	
Veracruz(EN)	2011	USA	Smart Key	Clear Fault Memory	
Veracruz(EN)	2011	USA	Smart Key	Actuation Test	
Veracruz(EN)	2011	USA	Smart Key	Special Function	Antenna Status Check
Veracruz(EN)	2011	USA	Smart Key	Special Function	Neutralization Mode
Veracruz(EN)	2011	USA	Smart Key	Special Function	Serial Communication Line
Veracruz(EN)	2011	USA	Smart Key	Special Function	Check Smart Key Status Information
Veracruz(EN)	2011	USA	Transmitter Code Saving	Read Data Stream	
Veracruz(EN)	2011	USA	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz(EN)	2011	USA	Weight Classification System	Version Information	
Veracruz(EN)	2011	USA	Weight Classification System	Read Fault Code	
Veracruz(EN)	2011	USA	Weight Classification System	Clear Fault Memory	
Veracruz(EN)	2011	USA	Weight Classification System	Read Data Stream	
Veracruz(EN)	2011	USA	Weight Classification System	Special Function	WCS Reset
Veracruz(EN)	2010	USA	ECM(Engine Control Module)	Version Information	
Veracruz(EN)	2010	USA	ECM(Engine Control Module)	Read Fault Code	
Veracruz(EN)	2010	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz(EN)	2010	USA	ECM(Engine Control Module)	Read Data Stream	
Veracruz(EN)	2010	USA	ECM(Engine Control Module)	Read FreezeData	
Veracruz(EN)	2010	USA	ECM(Engine Control Module)	Actuation Test	
Veracruz(EN)	2010	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz(EN)	2010	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz(EN)	2010	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz(EN)	2010	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Veracruz(EN)	2010	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz(EN)	2010	USA	TCM(Transmission Control Module)	Version Information	
Veracruz(EN)	2010	USA	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Veracruz(EN)	2010	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz(EN)	2010	USA	TCM(Transmission Control Module)	Read Data Stream	
Veracruz(EN)	2010	USA	TCM(Transmission Control Module)	Read FreezeData	
Veracruz(EN)	2010	USA	TCM(Transmission Control Module)	Actuation Test	
Veracruz(EN)	2010	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz(EN)	2010	USA	TCM(Transmission Control Module)	Special Function	N Position The Adaptive
Veracruz(EN)	2010	USA	Electronic Stability Control	Version Information	
Veracruz(EN)	2010	USA	Electronic Stability Control	Read Fault Code	
Veracruz(EN)	2010	USA	Electronic Stability Control	Clear Fault Memory	
Veracruz(EN)	2010	USA	Electronic Stability Control	Read Data Stream	
Veracruz(EN)	2010	USA	Electronic Stability Control	Actuation Test	
Veracruz(EN)	2010	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Veracruz(EN)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz(EN)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz(EN)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz(EN)	2010	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz(EN)	2010	USA	AC(Air Conditioning)	Version Information	
Veracruz(EN)	2010	USA	AC(Air Conditioning)	Read Fault Code	
Veracruz(EN)	2010	USA	AC(Air Conditioning)	Clear Fault Memory	
Veracruz(EN)	2010	USA	AC(Air Conditioning)	Read Data Stream	
Veracruz(EN)	2010	USA	AC(Air Conditioning)	Actuation Test	
Veracruz(EN)	2010	USA	BCM(Body Control Module)	Version Information	
Veracruz(EN)	2010	USA	BCM(Body Control Module)	Read Fault Code	
Veracruz(EN)	2010	USA	BCM(Body Control Module)	Clear Fault Memory	
Veracruz(EN)	2010	USA	BCM(Body Control Module)	Read Data Stream	
Veracruz(EN)	2010	USA	BCM(Body Control Module)	Actuation Test	
Veracruz(EN)	2010	USA	Power Tailgate	Version Information	
Veracruz(EN)	2010	USA	Power Tailgate	Read Fault Code	
Veracruz(EN)	2010	USA	Power Tailgate	Clear Fault Memory	

model	year	area	system	function	subfunction
Veracruz(EN)	2010	USA	Power Tailgate	Read Data Stream	
Veracruz(EN)	2010	USA	4WD Control	Version Information	
Veracruz(EN)	2010	USA	4WD Control	Read Fault Code	
Veracruz(EN)	2010	USA	4WD Control	Clear Fault Memory	
Veracruz(EN)	2010	USA	4WD Control	Read Data Stream	
Veracruz(EN)	2010	USA	4WD Control	Actuation Test	
Veracruz(EN)	2010	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz(EN)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veracruz(EN)	2010	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz(EN)	2010	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz(EN)	2010	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz(EN)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veracruz(EN)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veracruz(EN)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz(EN)	2010	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veracruz(EN)	2010	USA	IMM(Immobilizer)	Read Data Stream	
Veracruz(EN)	2010	USA	IMM(Immobilizer)	Special Function	Password
Veracruz(EN)	2010	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Veracruz(EN)	2010	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz(EN)	2010	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz(EN)	2010	USA	IMM(Immobilizer)	Special Function	Teaching
Veracruz(EN)	2010	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz(EN)	2010	USA	Smart Key	Read Data Stream	
Veracruz(EN)	2010	USA	Smart Key	Special Function	Smart Key Code Saving
Veracruz(EN)	2010	USA	Smart Key	Version Information	
Veracruz(EN)	2010	USA	Smart Key	Read Fault Code	
Veracruz(EN)	2010	USA	Smart Key	Clear Fault Memory	
Veracruz(EN)	2010	USA	Smart Key	Actuation Test	
Veracruz(EN)	2010	USA	Smart Key	Special Function	Antenna Status Check
Veracruz(EN)	2010	USA	Smart Key	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Veracruz(EN)	2010	USA	Smart Key	Special Function	Serial Communication Line
Veracruz(EN)	2010	USA	Smart Key	Special Function	Close In-Vehicle Key Status Information
Veracruz(EN)	2010	USA	Transmitter Code Saving	Read Data Stream	
Veracruz(EN)	2010	USA	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz(EN)	2010	USA	Weight Classification System	Version Information	
Veracruz(EN)	2010	USA	Weight Classification System	Read Fault Code	
Veracruz(EN)	2010	USA	Weight Classification System	Clear Fault Memory	
Veracruz(EN)	2010	USA	Weight Classification System	Read Data Stream	
Veracruz(EN)	2010	USA	Weight Classification System	Special Function	WCS Reset
Veracruz(EN)	2009	USA	ECM(Engine Control Module)	Version Information	
Veracruz(EN)	2009	USA	ECM(Engine Control Module)	Read Fault Code	
Veracruz(EN)	2009	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz(EN)	2009	USA	ECM(Engine Control Module)	Read Data Stream	
Veracruz(EN)	2009	USA	ECM(Engine Control Module)	Read FreezeData	
Veracruz(EN)	2009	USA	ECM(Engine Control Module)	Actuation Test	
Veracruz(EN)	2009	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz(EN)	2009	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz(EN)	2009	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz(EN)	2009	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Veracruz(EN)	2009	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz(EN)	2009	USA	TCM(Transmission Control Module)	Version Information	
Veracruz(EN)	2009	USA	TCM(Transmission Control Module)	Read Fault Code	
Veracruz(EN)	2009	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz(EN)	2009	USA	TCM(Transmission Control Module)	Read Data Stream	
Veracruz(EN)	2009	USA	TCM(Transmission Control Module)	Read FreezeData	
Veracruz(EN)	2009	USA	TCM(Transmission Control Module)	Actuation Test	
Veracruz(EN)	2009	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz(EN)	2009	USA	TCM(Transmission Control Module)	Special Function	N Position The Adaptive
Veracruz(EN)	2009	USA	Electronic Stability Control	Version Information	

model	year	area	system	function	subfunction
Veracruz(EN)	2009	USA	Electronic Stability Control	Read Fault Code	
Veracruz(EN)	2009	USA	Electronic Stability Control	Clear Fault Memory	
Veracruz(EN)	2009	USA	Electronic Stability Control	Read Data Stream	
Veracruz(EN)	2009	USA	Electronic Stability Control	Actuation Test	
Veracruz(EN)	2009	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Veracruz(EN)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz(EN)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz(EN)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz(EN)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz(EN)	2009	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Veracruz(EN)	2009	USA	AC(Air Conditioning)	Version Information	
Veracruz(EN)	2009	USA	AC(Air Conditioning)	Read Fault Code	
Veracruz(EN)	2009	USA	AC(Air Conditioning)	Clear Fault Memory	
Veracruz(EN)	2009	USA	AC(Air Conditioning)	Read Data Stream	
Veracruz(EN)	2009	USA	AC(Air Conditioning)	Actuation Test	
Veracruz(EN)	2009	USA	BCM(Body Control Module)	Version Information	
Veracruz(EN)	2009	USA	BCM(Body Control Module)	Read Fault Code	
Veracruz(EN)	2009	USA	BCM(Body Control Module)	Clear Fault Memory	
Veracruz(EN)	2009	USA	BCM(Body Control Module)	Read Data Stream	
Veracruz(EN)	2009	USA	BCM(Body Control Module)	Actuation Test	
Veracruz(EN)	2009	USA	Power Tailgate	Version Information	
Veracruz(EN)	2009	USA	Power Tailgate	Read Fault Code	
Veracruz(EN)	2009	USA	Power Tailgate	Clear Fault Memory	
Veracruz(EN)	2009	USA	Power Tailgate	Read Data Stream	
Veracruz(EN)	2009	USA	4WD Control	Version Information	
Veracruz(EN)	2009	USA	4WD Control	Read Fault Code	
Veracruz(EN)	2009	USA	4WD Control	Clear Fault Memory	
Veracruz(EN)	2009	USA	4WD Control	Read Data Stream	
Veracruz(EN)	2009	USA	4WD Control	Actuation Test	

model	year	area	system	function	subfunction
Veracruz(EN)	2009	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz(EN)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veracruz(EN)	2009	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz(EN)	2009	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz(EN)	2009	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz(EN)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veracruz(EN)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veracruz(EN)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz(EN)	2009	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veracruz(EN)	2009	USA	IMM(Immobilizer)	Read Data Stream	
Veracruz(EN)	2009	USA	IMM(Immobilizer)	Special Function	Password
Veracruz(EN)	2009	USA	IMM(Immobilizer)	Special Function	Teaching/Changing
Veracruz(EN)	2009	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz(EN)	2009	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz(EN)	2009	USA	IMM(Immobilizer)	Special Function	Teaching
Veracruz(EN)	2009	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz(EN)	2009	USA	Smart Key	Read Data Stream	
Veracruz(EN)	2009	USA	Smart Key	Special Function	Smart Key Code Saving
Veracruz(EN)	2009	USA	Smart Key	Version Information	
Veracruz(EN)	2009	USA	Smart Key	Read Fault Code	
Veracruz(EN)	2009	USA	Smart Key	Clear Fault Memory	
Veracruz(EN)	2009	USA	Smart Key	Actuation Test	
Veracruz(EN)	2009	USA	Smart Key	Special Function	Antenna Status Check
Veracruz(EN)	2009	USA	Smart Key	Special Function	Neutralization Mode
Veracruz(EN)	2009	USA	Smart Key	Special Function	Serial Communication Line
Veracruz(EN)	2009	USA	Smart Key	Special Function	Check Immobilizer Key Status
Veracruz(EN)	2009	USA	Smart Key	Special Function	Information
Veracruz(EN)	2009	USA	Transmitter Code Saving	Read Data Stream	
Veracruz(EN)	2009	USA	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz(EN)	2009	USA	Weight Classification System	Version Information	
Veracruz(EN)	2009	USA	Weight Classification System	Read Fault Code	

model	year	area	system	function	subfunction
Veracruz(EN)	2009	USA	Weight Classification System	Clear Fault Memory	
Veracruz(EN)	2009	USA	Weight Classification System	Read Data Stream	
Veracruz(EN)	2009	USA	Weight Classification System	Special Function	WCS Reset
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Version Information	
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Read Fault Code	
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Clear Fault Memory	
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Read Data Stream	
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Read FreezeData	
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Actuation Test	
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Special Function	Auto Detected
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Special Function	Configuration Reset
Veracruz(EN)	2008	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz(EN)	2008	USA	TCM(Transmission Control Module)	Version Information	
Veracruz(EN)	2008	USA	TCM(Transmission Control Module)	Read Fault Code	
Veracruz(EN)	2008	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz(EN)	2008	USA	TCM(Transmission Control Module)	Read Data Stream	
Veracruz(EN)	2008	USA	TCM(Transmission Control Module)	Read FreezeData	
Veracruz(EN)	2008	USA	TCM(Transmission Control Module)	Actuation Test	
Veracruz(EN)	2008	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz(EN)	2008	USA	TCM(Transmission Control Module)	Special Function	N Position The Adaptive
Veracruz(EN)	2008	USA	Electronic Stability Control	Version Information	
Veracruz(EN)	2008	USA	Electronic Stability Control	Read Fault Code	
Veracruz(EN)	2008	USA	Electronic Stability Control	Clear Fault Memory	
Veracruz(EN)	2008	USA	Electronic Stability Control	Read Data Stream	
Veracruz(EN)	2008	USA	Electronic Stability Control	Actuation Test	
Veracruz(EN)	2008	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Veracruz(EN)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Veracruz(EN)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz(EN)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz(EN)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz(EN)	2008	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Veracruz(EN)	2008	USA	AC(Air Conditioning)	Version Information	
Veracruz(EN)	2008	USA	AC(Air Conditioning)	Read Fault Code	
Veracruz(EN)	2008	USA	AC(Air Conditioning)	Clear Fault Memory	
Veracruz(EN)	2008	USA	AC(Air Conditioning)	Read Data Stream	
Veracruz(EN)	2008	USA	AC(Air Conditioning)	Actuation Test	
Veracruz(EN)	2008	USA	BCM(Body Control Module)	Version Information	
Veracruz(EN)	2008	USA	BCM(Body Control Module)	Read Fault Code	
Veracruz(EN)	2008	USA	BCM(Body Control Module)	Clear Fault Memory	
Veracruz(EN)	2008	USA	BCM(Body Control Module)	Read Data Stream	
Veracruz(EN)	2008	USA	BCM(Body Control Module)	Actuation Test	
Veracruz(EN)	2008	USA	Power Tailgate	Version Information	
Veracruz(EN)	2008	USA	Power Tailgate	Read Fault Code	
Veracruz(EN)	2008	USA	Power Tailgate	Clear Fault Memory	
Veracruz(EN)	2008	USA	Power Tailgate	Read Data Stream	
Veracruz(EN)	2008	USA	4WD Control	Version Information	
Veracruz(EN)	2008	USA	4WD Control	Read Fault Code	
Veracruz(EN)	2008	USA	4WD Control	Clear Fault Memory	
Veracruz(EN)	2008	USA	4WD Control	Read Data Stream	
Veracruz(EN)	2008	USA	4WD Control	Actuation Test	
Veracruz(EN)	2008	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz(EN)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veracruz(EN)	2008	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz(EN)	2008	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz(EN)	2008	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz(EN)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
Veracruz(EN)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veracruz(EN)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz(EN)	2008	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veracruz(EN)	2008	USA	IMM(Immobilizer)	Read Data Stream	
Veracruz(EN)	2008	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veracruz(EN)	2008	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode
Veracruz(EN)	2008	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz(EN)	2008	USA	IMM(Immobilizer)	Special Function	Teaching
Veracruz(EN)	2008	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz(EN)	2008	USA	Smart Key	Read Data Stream	
Veracruz(EN)	2008	USA	Smart Key	Special Function	Smart Key Code Saving
Veracruz(EN)	2008	USA	Smart Key	Version Information	
Veracruz(EN)	2008	USA	Smart Key	Read Fault Code	
Veracruz(EN)	2008	USA	Smart Key	Clear Fault Memory	
Veracruz(EN)	2008	USA	Smart Key	Actuation Test	
Veracruz(EN)	2008	USA	Smart Key	Special Function	Antenna Status Check
Veracruz(EN)	2008	USA	Smart Key	Special Function	Neutralization Mode
Veracruz(EN)	2008	USA	Smart Key	Special Function	Serial Communication Line
Veracruz(EN)	2008	USA	Smart Key	Special Function	Close Immobilizer key status information
Veracruz(EN)	2008	USA	Transmitter Code Saving	Read Data Stream	
Veracruz(EN)	2008	USA	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz(EN)	2008	USA	Weight Classification System	Version Information	
Veracruz(EN)	2008	USA	Weight Classification System	Read Fault Code	
Veracruz(EN)	2008	USA	Weight Classification System	Clear Fault Memory	
Veracruz(EN)	2008	USA	Weight Classification System	Read Data Stream	
Veracruz(EN)	2008	USA	Weight Classification System	Special Function	WCS Reset
Veracruz(EN)	2007	USA	ECM(Engine Control Module)	Version Information	
Veracruz(EN)	2007	USA	ECM(Engine Control Module)	Read Fault Code	
Veracruz(EN)	2007	USA	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Veracruz(EN)	2007	USA	ECM(Engine Control Module)	Read Data Stream	
Veracruz(EN)	2007	USA	ECM(Engine Control Module)	Read FreezeData	
Veracruz(EN)	2007	USA	ECM(Engine Control Module)	Actuation Test	
Veracruz(EN)	2007	USA	ECM(Engine Control Module)	Special Function	Read VIN
Veracruz(EN)	2007	USA	ECM(Engine Control Module)	Special Function	Write VIN
Veracruz(EN)	2007	USA	ECM(Engine Control Module)	Special Function	PCM Lock(MEC)Setting
Veracruz(EN)	2007	USA	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Veracruz(EN)	2007	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Veracruz(EN)	2007	USA	TCM(Transmission Control Module)	Version Information	
Veracruz(EN)	2007	USA	TCM(Transmission Control Module)	Read Fault Code	
Veracruz(EN)	2007	USA	TCM(Transmission Control Module)	Clear Fault Memory	
Veracruz(EN)	2007	USA	TCM(Transmission Control Module)	Read Data Stream	
Veracruz(EN)	2007	USA	TCM(Transmission Control Module)	Read FreezeData	
Veracruz(EN)	2007	USA	TCM(Transmission Control Module)	Actuation Test	
Veracruz(EN)	2007	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Veracruz(EN)	2007	USA	TCM(Transmission Control Module)	Special Function	N Position The Adaptive
Veracruz(EN)	2007	USA	Electronic Stability Control	Version Information	
Veracruz(EN)	2007	USA	Electronic Stability Control	Read Fault Code	
Veracruz(EN)	2007	USA	Electronic Stability Control	Clear Fault Memory	
Veracruz(EN)	2007	USA	Electronic Stability Control	Read Data Stream	
Veracruz(EN)	2007	USA	Electronic Stability Control	Actuation Test	
Veracruz(EN)	2007	USA	Electronic Stability Control	Special Function	HCU Air Bleeding Mode
Veracruz(EN)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
Veracruz(EN)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Veracruz(EN)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Veracruz(EN)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Veracruz(EN)	2007	USA	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Veracruz(EN)	2007	USA	AC(Air Conditioning)	Version Information	
Veracruz(EN)	2007	USA	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Veracruz(EN)	2007	USA	AC(Air Conditioning)	Clear Fault Memory	
Veracruz(EN)	2007	USA	AC(Air Conditioning)	Read Data Stream	
Veracruz(EN)	2007	USA	AC(Air Conditioning)	Actuation Test	
Veracruz(EN)	2007	USA	BCM(Body Control Module)	Version Information	
Veracruz(EN)	2007	USA	BCM(Body Control Module)	Read Fault Code	
Veracruz(EN)	2007	USA	BCM(Body Control Module)	Clear Fault Memory	
Veracruz(EN)	2007	USA	BCM(Body Control Module)	Read Data Stream	
Veracruz(EN)	2007	USA	BCM(Body Control Module)	Actuation Test	
Veracruz(EN)	2007	USA	Power Tailgate	Version Information	
Veracruz(EN)	2007	USA	Power Tailgate	Read Fault Code	
Veracruz(EN)	2007	USA	Power Tailgate	Clear Fault Memory	
Veracruz(EN)	2007	USA	Power Tailgate	Read Data Stream	
Veracruz(EN)	2007	USA	4WD Control	Version Information	
Veracruz(EN)	2007	USA	4WD Control	Read Fault Code	
Veracruz(EN)	2007	USA	4WD Control	Clear Fault Memory	
Veracruz(EN)	2007	USA	4WD Control	Read Data Stream	
Veracruz(EN)	2007	USA	4WD Control	Actuation Test	
Veracruz(EN)	2007	USA	TPMS(Tire Pressure Monitoring System)	Version Information	
Veracruz(EN)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Veracruz(EN)	2007	USA	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Veracruz(EN)	2007	USA	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Veracruz(EN)	2007	USA	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Veracruz(EN)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Veracruz(EN)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Veracruz(EN)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Veracruz(EN)	2007	USA	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Veracruz(EN)	2007	USA	IMM(Immobilizer)	Read Data Stream	
Veracruz(EN)	2007	USA	IMM(Immobilizer)	Special Function	Password Teaching/Changing
Veracruz(EN)	2007	USA	IMM(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Veracruz(EN)	2007	USA	IMM(Immobilizer)	Special Function	Limp Home Mode
Veracruz(EN)	2007	USA	IMM(Immobilizer)	Special Function	Teaching
Veracruz(EN)	2007	USA	IMM(Immobilizer)	Special Function	Smatra Neutral Mode
Veracruz(EN)	2007	USA	Smart Key	Read Data Stream	
Veracruz(EN)	2007	USA	Smart Key	Special Function	Smart Key Code Saving
Veracruz(EN)	2007	USA	Smart Key	Version Information	
Veracruz(EN)	2007	USA	Smart Key	Read Fault Code	
Veracruz(EN)	2007	USA	Smart Key	Clear Fault Memory	
Veracruz(EN)	2007	USA	Smart Key	Actuation Test	
Veracruz(EN)	2007	USA	Smart Key	Special Function	Antenna Status Check
Veracruz(EN)	2007	USA	Smart Key	Special Function	Neutralization Mode
Veracruz(EN)	2007	USA	Smart Key	Special Function	Serial Communication Line Check
Veracruz(EN)	2007	USA	Smart Key	Special Function	Smart Key Status Information
Veracruz(EN)	2007	USA	Transmitter Code Saving	Read Data Stream	
Veracruz(EN)	2007	USA	Transmitter Code Saving	Special Function	Register Transmitter
Veracruz(EN)	2007	USA	Weight Classification System	Version Information	
Veracruz(EN)	2007	USA	Weight Classification System	Read Fault Code	
Veracruz(EN)	2007	USA	Weight Classification System	Clear Fault Memory	
Veracruz(EN)	2007	USA	Weight Classification System	Read Data Stream	
Veracruz(EN)	2007	USA	Weight Classification System	Special Function	WCS Reset
XG(XG)	2005	USA	ECM(Engine Control Module)	Version Information	
XG(XG)	2005	USA	ECM(Engine Control Module)	Read Fault Code	
XG(XG)	2005	USA	ECM(Engine Control Module)	Clear Fault Memory	
XG(XG)	2005	USA	ECM(Engine Control Module)	Read Data Stream	
XG(XG)	2005	USA	ECM(Engine Control Module)	Read FreezeData	
XG(XG)	2005	USA	ECM(Engine Control Module)	Actuation Test	
XG(XG)	2005	USA	ECM(Engine Control Module)	Special Function	Read VIN
XG(XG)	2005	USA	ECM(Engine Control Module)	Special Function	Write VIN
XG(XG)	2005	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
XG(XG)	2005	USA	TCM(Transmission Control Module)	Version Information	
XG(XG)	2005	USA	TCM(Transmission Control Module)	Read Fault Code	
XG(XG)	2005	USA	TCM(Transmission Control Module)	Clear Fault Memory	
XG(XG)	2005	USA	TCM(Transmission Control Module)	Read Data Stream	
XG(XG)	2005	USA	TCM(Transmission Control Module)	Actuation Test	
XG(XG)	2005	USA	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
XG(XG)	2005	USA	ABS(Anti-lock Braking System)	Read Fault Code	
XG(XG)	2005	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
XG(XG)	2005	USA	ABS(Anti-lock Braking System)	Read Data Stream	
XG(XG)	2005	USA	ABS(Anti-lock Braking System)	Actuation Test	
XG(XG)	2005	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
XG(XG)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
XG(XG)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
XG(XG)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
XG(XG)	2005	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
XG(XG)	2005	USA	IMM(Immobilizer)	Read Fault Code	
XG(XG)	2005	USA	IMM(Immobilizer)	Clear Fault Memory	
XG(XG)	2005	USA	IMM(Immobilizer)	Read Data Stream	
XG(XG)	2005	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
XG(XG)	2005	USA	IMM(Immobilizer)	Special Function	Password Record/Change
XG(XG)	2005	USA	IMM(Immobilizer)	Special Function	Neutral Mode
XG(XG)	2005	USA	IMM(Immobilizer)	Special Function	Master Key Delete
XG(XG)	2005	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
XG(XG)	2005	USA	Transmitter Code Saving	Special Function	Code Saving
XG(XG)	2004	USA	ECM(Engine Control Module)	Version Information	
XG(XG)	2004	USA	ECM(Engine Control Module)	Read Fault Code	
XG(XG)	2004	USA	ECM(Engine Control Module)	Clear Fault Memory	
XG(XG)	2004	USA	ECM(Engine Control Module)	Read Data Stream	
XG(XG)	2004	USA	ECM(Engine Control Module)	Read FreezeData	

model	year	area	system	function	subfunction
XG(XG)	2004	USA	ECM(Engine Control Module)	Actuation Test	
XG(XG)	2004	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
XG(XG)	2004	USA	TCM(Transmission Control Module)	Version Information	
XG(XG)	2004	USA	TCM(Transmission Control Module)	Read Fault Code	
XG(XG)	2004	USA	TCM(Transmission Control Module)	Clear Fault Memory	
XG(XG)	2004	USA	TCM(Transmission Control Module)	Read Data Stream	
XG(XG)	2004	USA	TCM(Transmission Control Module)	Actuation Test	
XG(XG)	2004	USA	ABS(Anti-lock Braking System)	Read Fault Code	
XG(XG)	2004	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
XG(XG)	2004	USA	ABS(Anti-lock Braking System)	Read Data Stream	
XG(XG)	2004	USA	ABS(Anti-lock Braking System)	Actuation Test	
XG(XG)	2004	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
XG(XG)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
XG(XG)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
XG(XG)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
XG(XG)	2004	USA	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
XG(XG)	2004	USA	IMM(Immobilizer)	Read Fault Code	
XG(XG)	2004	USA	IMM(Immobilizer)	Clear Fault Memory	
XG(XG)	2004	USA	IMM(Immobilizer)	Read Data Stream	
XG(XG)	2004	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
XG(XG)	2004	USA	IMM(Immobilizer)	Special Function	Password Record/Change
XG(XG)	2004	USA	IMM(Immobilizer)	Special Function	Neutral Mode
XG(XG)	2004	USA	IMM(Immobilizer)	Special Function	Master Key Delete
XG(XG)	2004	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
XG(XG)	2004	USA	Transmitter Code Saving	Special Function	Code Saving
XG(XG)	2003	USA	ECM(Engine Control Module)	Version Information	
XG(XG)	2003	USA	ECM(Engine Control Module)	Read Fault Code	
XG(XG)	2003	USA	ECM(Engine Control Module)	Clear Fault Memory	
XG(XG)	2003	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
XG(XG)	2003	USA	ECM(Engine Control Module)	Read FreezeData	
XG(XG)	2003	USA	ECM(Engine Control Module)	Actuation Test	
XG(XG)	2003	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
XG(XG)	2003	USA	TCM(Transmission Control Module)	Version Information	
XG(XG)	2003	USA	TCM(Transmission Control Module)	Read Fault Code	
XG(XG)	2003	USA	TCM(Transmission Control Module)	Clear Fault Memory	
XG(XG)	2003	USA	TCM(Transmission Control Module)	Read Data Stream	
XG(XG)	2003	USA	TCM(Transmission Control Module)	Actuation Test	
XG(XG)	2003	USA	ABS(Anti-lock Braking System)	Read Fault Code	
XG(XG)	2003	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
XG(XG)	2003	USA	ABS(Anti-lock Braking System)	Read Data Stream	
XG(XG)	2003	USA	ABS(Anti-lock Braking System)	Actuation Test	
XG(XG)	2003	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
XG(XG)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
XG(XG)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
XG(XG)	2003	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
XG(XG)	2003	USA	IMM(Immobilizer)	Read Fault Code	
XG(XG)	2003	USA	IMM(Immobilizer)	Clear Fault Memory	
XG(XG)	2003	USA	IMM(Immobilizer)	Read Data Stream	
XG(XG)	2003	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
XG(XG)	2003	USA	IMM(Immobilizer)	Special Function	Password Record/Change
XG(XG)	2003	USA	IMM(Immobilizer)	Special Function	Neutral Mode
XG(XG)	2003	USA	IMM(Immobilizer)	Special Function	Master Key Delete
XG(XG)	2003	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
XG(XG)	2003	USA	Transmitter Code Saving	Special Function	Code Saving
XG(XG)	2002	USA	ECM(Engine Control Module)	Version Information	
XG(XG)	2002	USA	ECM(Engine Control Module)	Read Fault Code	
XG(XG)	2002	USA	ECM(Engine Control Module)	Clear Fault Memory	
XG(XG)	2002	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
XG(XG)	2002	USA	ECM(Engine Control Module)	Read FreezeData	
XG(XG)	2002	USA	ECM(Engine Control Module)	Actuation Test	
XG(XG)	2002	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
XG(XG)	2002	USA	TCM(Transmission Control Module)	Version Information	
XG(XG)	2002	USA	TCM(Transmission Control Module)	Read Fault Code	
XG(XG)	2002	USA	TCM(Transmission Control Module)	Clear Fault Memory	
XG(XG)	2002	USA	TCM(Transmission Control Module)	Read Data Stream	
XG(XG)	2002	USA	TCM(Transmission Control Module)	Actuation Test	
XG(XG)	2002	USA	ABS(Anti-lock Braking System)	Read Fault Code	
XG(XG)	2002	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
XG(XG)	2002	USA	ABS(Anti-lock Braking System)	Read Data Stream	
XG(XG)	2002	USA	ABS(Anti-lock Braking System)	Actuation Test	
XG(XG)	2002	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
XG(XG)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
XG(XG)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
XG(XG)	2002	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
XG(XG)	2002	USA	IMM(Immobilizer)	Read Fault Code	
XG(XG)	2002	USA	IMM(Immobilizer)	Clear Fault Memory	
XG(XG)	2002	USA	IMM(Immobilizer)	Read Data Stream	
XG(XG)	2002	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
XG(XG)	2002	USA	IMM(Immobilizer)	Special Function	Password Record/Change
XG(XG)	2002	USA	IMM(Immobilizer)	Special Function	Neutral Mode
XG(XG)	2002	USA	IMM(Immobilizer)	Special Function	Master Key Delete
XG(XG)	2002	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
XG(XG)	2002	USA	Transmitter Code Saving	Special Function	Code Saving
XG(XG)	2001	USA	ECM(Engine Control Module)	Version Information	
XG(XG)	2001	USA	ECM(Engine Control Module)	Read Fault Code	
XG(XG)	2001	USA	ECM(Engine Control Module)	Clear Fault Memory	
XG(XG)	2001	USA	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
XG(XG)	2001	USA	ECM(Engine Control Module)	Read FreezeData	
XG(XG)	2001	USA	ECM(Engine Control Module)	Actuation Test	
XG(XG)	2001	USA	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
XG(XG)	2001	USA	TCM(Transmission Control Module)	Version Information	
XG(XG)	2001	USA	TCM(Transmission Control Module)	Read Fault Code	
XG(XG)	2001	USA	TCM(Transmission Control Module)	Clear Fault Memory	
XG(XG)	2001	USA	TCM(Transmission Control Module)	Read Data Stream	
XG(XG)	2001	USA	TCM(Transmission Control Module)	Actuation Test	
XG(XG)	2001	USA	ABS(Anti-lock Braking System)	Read Fault Code	
XG(XG)	2001	USA	ABS(Anti-lock Braking System)	Clear Fault Memory	
XG(XG)	2001	USA	ABS(Anti-lock Braking System)	Read Data Stream	
XG(XG)	2001	USA	ABS(Anti-lock Braking System)	Actuation Test	
XG(XG)	2001	USA	ABS(Anti-lock Braking System)	Special Function	HCU Air Bleeding Mode
XG(XG)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Version Information	
XG(XG)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
XG(XG)	2001	USA	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
XG(XG)	2001	USA	IMM(Immobilizer)	Read Fault Code	
XG(XG)	2001	USA	IMM(Immobilizer)	Clear Fault Memory	
XG(XG)	2001	USA	IMM(Immobilizer)	Read Data Stream	
XG(XG)	2001	USA	IMM(Immobilizer)	Special Function	IMMOBILIZER RESET
XG(XG)	2001	USA	IMM(Immobilizer)	Special Function	Password Record/Change
XG(XG)	2001	USA	IMM(Immobilizer)	Special Function	Neutral Mode
XG(XG)	2001	USA	IMM(Immobilizer)	Special Function	Master Key Delete
XG(XG)	2001	USA	IMM(Immobilizer)	Special Function	Master Key Record/Change
XG(XG)	2001	USA	Transmitter Code Saving	Special Function	Code Saving