

Kia Diagnostics List (Note:For reference only)

model	year	area	system	function	subfunction
Avella(FV)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Avella(FV)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Avella(FV)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Avella(FV)	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Avella(FV)	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Avella(FV)	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Avella(FV)	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Avella(FV)	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Avella(FV)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Avella(FV)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Avella(FV)	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Avella(FV)	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	
Avella(FV)	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Avella(FV)	1999	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Avella(FV)	1999	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Avella(FV)	1999	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Avella(FV)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Avella(FV)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Avella(FV)	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Avella(FV)	1998	General Area	TCM(Transmission Control Module)	Read Fault Code	
Avella(FV)	1998	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Avella(FV)	1998	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Avella(FV)	1998	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Avella(FV)	1998	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Avella(FV)	1997	General Area	ECM(Engine Control Module)	Read Fault Code	
Avella(FV)	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Avella(FV)	1997	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Avella(FV)	1997	General Area	TCM(Transmission Control Module)	Read Fault Code	
Avella(FV)	1997	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Avella(FV)	1997	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Avella(FV)	1997	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Avella(FV)	1997	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Avella(FV)	1996	General Area	ECM(Engine Control Module)	Read Fault Code	
Avella(FV)	1996	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Avella(FV)	1996	General Area	ECM(Engine Control Module)	Read Data Stream	
Avella(FV)	1996	General Area	TCM(Transmission Control Module)	Read Fault Code	
Avella(FV)	1996	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Avella(FV)	1996	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Avella(FV)	1996	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Avella(FV)	1996	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Avella(FV)	1995	General Area	ECM(Engine Control Module)	Read Fault Code	
Avella(FV)	1995	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Avella(FV)	1995	General Area	ECM(Engine Control Module)	Read Data Stream	
Avella(FV)	1995	General Area	TCM(Transmission Control Module)	Read Fault Code	
Avella(FV)	1995	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Avella(FV)	1995	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Avella(FV)	1995	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Avella(FV)	1995	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Avella(FV)	1994	General Area	ECM(Engine Control Module)	Read Fault Code	
Avella(FV)	1994	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Avella(FV)	1994	General Area	ECM(Engine Control Module)	Read Data Stream	
Avella(FV)	1994	General Area	TCM(Transmission Control Module)	Read Fault Code	
Avella(FV)	1994	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Avella(FV)	1994	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Avella(FV)	1994	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Avella(FV)	1994	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Besta(TP)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Besta(TP)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Besta(TP)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Besta(TP)	2003	General Area	ECM(Engine Control Module)	Actuation Test	
Besta(TP)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Besta(TP)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Besta(TP)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Besta(TP)	2002	General Area	ECM(Engine Control Module)	Actuation Test	
Besta(TP)	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	
Besta(TP)	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Besta(TP)	2002	General Area	TCM(Transmission Control Module)	Read Data Stream	
Besta(TP)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Besta(TP)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Besta(TP)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Besta(TP)	2001	General Area	ECM(Engine Control Module)	Actuation Test	
Besta(TP)	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Besta(TP)	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Besta(TP)	2001	General Area	TCM(Transmission Control Module)	Read Data Stream	
Besta(TP)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Besta(TP)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Besta(TP)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Besta(TP)	2000	General Area	ECM(Engine Control Module)	Actuation Test	
Besta(TP)	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Besta(TP)	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Besta(TP)	2000	General Area	TCM(Transmission Control Module)	Read Data Stream	
Besta(TP)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Besta(TP)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Besta(TP)	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Besta(TP)	1999	General Area	ECM(Engine Control Module)	Actuation Test	
Besta(TP)	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	
Besta(TP)	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Besta(TP)	1999	General Area	TCM(Transmission Control Module)	Read Data Stream	
Besta(TP)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Besta(TP)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Besta(TP)	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Besta(TP)	1998	General Area	ECM(Engine Control Module)	Actuation Test	
Besta(TP)	1998	General Area	TCM(Transmission Control Module)	Read Fault Code	
Besta(TP)	1998	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Besta(TP)	1998	General Area	TCM(Transmission Control Module)	Read Data Stream	
Besta(TP)	1997	General Area	ECM(Engine Control Module)	Read Fault Code	
Besta(TP)	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Besta(TP)	1997	General Area	ECM(Engine Control Module)	Read Data Stream	
Besta(TP)	1997	General Area	ECM(Engine Control Module)	Actuation Test	
Besta(TP)	1997	General Area	TCM(Transmission Control Module)	Read Fault Code	
Besta(TP)	1997	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Besta(TP)	1997	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Version Information	
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cadenza(VG)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Cadenza(VG)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cadenza(VG)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cadenza(VG)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(VG)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cadenza(VG)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Cadenza(VG)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor
Cadenza(VG)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Cadenza(VG)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cadenza(VG)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cadenza(VG)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cadenza(VG)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cadenza(VG)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cadenza(VG)	2016	General Area	AC(Air Conditioning)	Version Information	
Cadenza(VG)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Cadenza(VG)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cadenza(VG)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Cadenza(VG)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Cadenza(VG)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cadenza(VG)	2016	General Area	BCM(Body Control Module)	Version Information	
Cadenza(VG)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Cadenza(VG)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cadenza(VG)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Cadenza(VG)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Cadenza(VG)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cadenza(VG)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Cadenza(VG)	2016	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting

model	year	area	system	function	subfunction
Cadenza(VG)	2016	General Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Cadenza(VG)	2016	General Area	Head Lamp	Version Information	
Cadenza(VG)	2016	General Area	Head Lamp	Read Fault Code	
Cadenza(VG)	2016	General Area	Head Lamp	Clear Fault Memory	
Cadenza(VG)	2016	General Area	Head Lamp	Read Data Stream	
Cadenza(VG)	2016	General Area	Head Lamp	Actuation Test	
Cadenza(VG)	2016	General Area	Head Lamp	Special Function	Calibration
Cadenza(VG)	2016	General Area	Head Lamp	Special Function	Parameter Download
Cadenza(VG)	2016	General Area	Head Lamp	Special Function	Headlamp Leveling
Cadenza(VG)	2016	General Area	Head Lamp	Special Function	Parameter Setting&Zero Position
Cadenza(VG)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cadenza(VG)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cadenza(VG)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cadenza(VG)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cadenza(VG)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cadenza(VG)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cadenza(VG)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cadenza(VG)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cadenza(VG)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cadenza(VG)	2016	General Area	Smart Key Unit	Version Information	
Cadenza(VG)	2016	General Area	Smart Key Unit	Read Fault Code	
Cadenza(VG)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Cadenza(VG)	2016	General Area	Smart Key Unit	Read Data Stream	
Cadenza(VG)	2016	General Area	Smart Key Unit	Actuation Test	
Cadenza(VG)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cadenza(VG)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cadenza(VG)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Cadenza(VG)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cadenza(VG)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cadenza(VG)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cadenza(VG)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Cadenza(VG)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cadenza(VG)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cadenza(VG)	2016	General Area	SCC(Smart Cruise Control)	Version Information	
Cadenza(VG)	2016	General Area	SCC(Smart Cruise Control)	Read Fault Code	
Cadenza(VG)	2016	General Area	SCC(Smart Cruise Control)	Clear Fault Memory	
Cadenza(VG)	2016	General Area	SCC(Smart Cruise Control)	Read Data Stream	
Cadenza(VG)	2016	General Area	SCC(Smart Cruise Control)	Special Function	SCC Alignment(Calibration)
Cadenza(VG)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Cadenza(VG)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Cadenza(VG)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cadenza(VG)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cadenza(VG)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Cadenza(VG)	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Cadenza(VG)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Cadenza(VG)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Cadenza(VG)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Code Reading
Cadenza(VG)	2016	General Area	SPAS(Smart Parking Assist System)	Version Information	
Cadenza(VG)	2016	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Cadenza(VG)	2016	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Cadenza(VG)	2016	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Cadenza(VG)	2016	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Cadenza(VG)	2016	General Area	SVMS(Surround View Monitor System)	Version Information	
Cadenza(VG)	2016	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Cadenza(VG)	2016	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Cadenza(VG)	2016	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Cadenza(VG)	2016	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Cadenza(VG)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Cadenza(VG)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cadenza(VG)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cadenza(VG)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cadenza(VG)	2016	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Cadenza(VG)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cadenza(VG)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cadenza(VG)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cadenza(VG)	2016	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cadenza(VG)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Cadenza(VG)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Cadenza(VG)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Cadenza(VG)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Cadenza(VG)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Cadenza(VG)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Cadenza(VG)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position
Cadenza(VG)	2016	General Area	Telematics Unit	Version Information	
Cadenza(VG)	2016	General Area	Telematics Unit	Read Fault Code	
Cadenza(VG)	2016	General Area	Telematics Unit	Clear Fault Memory	
Cadenza(VG)	2016	General Area	Immobilizer	Read Data Stream	
Cadenza(VG)	2016	General Area	Immobilizer	Special Function	Password Teaching/Changing
Cadenza(VG)	2016	General Area	Immobilizer	Special Function	Neutral Mode
Cadenza(VG)	2016	General Area	Immobilizer	Special Function	Limp Home Mode
Cadenza(VG)	2016	General Area	Immobilizer	Special Function	Smatra Neutral Mode
Cadenza(VG)	2016	General Area	Immobilizer	Special Function	Teaching
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Version Information	
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cadenza(VG)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Cadenza(VG)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cadenza(VG)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cadenza(VG)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(VG)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cadenza(VG)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Cadenza(VG)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Cadenza(VG)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cadenza(VG)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cadenza(VG)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cadenza(VG)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cadenza(VG)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cadenza(VG)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cadenza(VG)	2015	General Area	AC(Air Conditioning)	Version Information	
Cadenza(VG)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Cadenza(VG)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Cadenza(VG)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Cadenza(VG)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Cadenza(VG)	2015	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cadenza(VG)	2015	General Area	BCM(Body Control Module)	Version Information	
Cadenza(VG)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Cadenza(VG)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cadenza(VG)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Cadenza(VG)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Cadenza(VG)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Cadenza(VG)	2015	General Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Cadenza(VG)	2015	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cadenza(VG)	2015	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cadenza(VG)	2015	General Area	Smart Key Unit	Version Information	
Cadenza(VG)	2015	General Area	Smart Key Unit	Read Fault Code	
Cadenza(VG)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Cadenza(VG)	2015	General Area	Smart Key Unit	Read Data Stream	
Cadenza(VG)	2015	General Area	Smart Key Unit	Actuation Test	
Cadenza(VG)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cadenza(VG)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cadenza(VG)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Cadenza(VG)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cadenza(VG)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cadenza(VG)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cadenza(VG)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cadenza(VG)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cadenza(VG)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cadenza(VG)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cadenza(VG)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cadenza(VG)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cadenza(VG)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cadenza(VG)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Cadenza(VG)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cadenza(VG)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cadenza(VG)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cadenza(VG)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cadenza(VG)	2015	General Area	Head Lamp	Version Information	
Cadenza(VG)	2015	General Area	Head Lamp	Read Fault Code	
Cadenza(VG)	2015	General Area	Head Lamp	Clear Fault Memory	
Cadenza(VG)	2015	General Area	Head Lamp	Read Data Stream	
Cadenza(VG)	2015	General Area	Head Lamp	Actuation Test	
Cadenza(VG)	2015	General Area	Head Lamp	Special Function	Headlamp Leveling
Cadenza(VG)	2015	General Area	Head Lamp	Special Function	Parameter Setting&Zero Position
Cadenza(VG)	2015	General Area	Head Lamp	Special Function	Calibration
Cadenza(VG)	2015	General Area	Head Lamp	Special Function	Parameter Download
Cadenza(VG)	2015	General Area	LDWS(Lane Departure Warning System)	Version Information	
Cadenza(VG)	2015	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Cadenza(VG)	2015	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cadenza(VG)	2015	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cadenza(VG)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Cadenza(VG)	2015	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Cadenza(VG)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Cadenza(VG)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Cadenza(VG)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Code Reading
Cadenza(VG)	2015	General Area	SPAS(Smart Parking Assist System)	Version Information	
Cadenza(VG)	2015	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Cadenza(VG)	2015	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Cadenza(VG)	2015	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Cadenza(VG)	2015	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Cadenza(VG)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Cadenza(VG)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cadenza(VG)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cadenza(VG)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Cadenza(VG)	2015	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cadenza(VG)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cadenza(VG)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cadenza(VG)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cadenza(VG)	2015	General Area	CCS(Cruise Control System)	Version Information	
Cadenza(VG)	2015	General Area	CCS(Cruise Control System)	Read Fault Code	
Cadenza(VG)	2015	General Area	CCS(Cruise Control System)	Clear Fault Memory	
Cadenza(VG)	2015	General Area	CCS(Cruise Control System)	Read Data Stream	
Cadenza(VG)	2015	General Area	CCS(Cruise Control System)	Special Function	SCC Alignment(Calibration)
Cadenza(VG)	2015	General Area	SVMS(Surround View Monitor System)	Version Information	
Cadenza(VG)	2015	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Cadenza(VG)	2015	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Cadenza(VG)	2015	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Cadenza(VG)	2015	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cadenza(VG)	2015	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cadenza(VG)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Cadenza(VG)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Cadenza(VG)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Cadenza(VG)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Cadenza(VG)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Cadenza(VG)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Cadenza(VG)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Cadenza(VG)	2015	General Area	SCC(Smart Cruise Control)	Version Information	
Cadenza(VG)	2015	General Area	SCC(Smart Cruise Control)	Read Fault Code	
Cadenza(VG)	2015	General Area	SCC(Smart Cruise Control)	Clear Fault Memory	

model	year	area	system	function	subfunction
Cadenza(VG)	2015	General Area	SCC(Smart Cruise Control)	Read Data Stream	
Cadenza(VG)	2015	General Area	SCC(Smart Cruise Control)	Special Function	SCC Alignment(Calibration)
Cadenza(VG)	2015	General Area	Telematics Unit	Version Information	
Cadenza(VG)	2015	General Area	Telematics Unit	Read Fault Code	
Cadenza(VG)	2015	General Area	Telematics Unit	Clear Fault Memory	
Cadenza(VG)	2015	General Area	Immobilizer	Read Data Stream	
Cadenza(VG)	2015	General Area	Immobilizer	Special Function	Password Teaching/Changing
Cadenza(VG)	2015	General Area	Immobilizer	Special Function	Neutral Mode
Cadenza(VG)	2015	General Area	Immobilizer	Special Function	Limp Home Mode
Cadenza(VG)	2015	General Area	Immobilizer	Special Function	Smatra Neutral Mode
Cadenza(VG)	2015	General Area	Immobilizer	Special Function	Teaching
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Version Information	
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cadenza(VG)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Cadenza(VG)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cadenza(VG)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(VG)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cadenza(VG)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Cadenza(VG)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Cadenza(VG)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cadenza(VG)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cadenza(VG)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cadenza(VG)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cadenza(VG)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cadenza(VG)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cadenza(VG)	2014	General Area	AC(Air Conditioning)	Version Information	
Cadenza(VG)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Cadenza(VG)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Cadenza(VG)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Cadenza(VG)	2014	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cadenza(VG)	2014	General Area	BCM(Body Control Module)	Version Information	
Cadenza(VG)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Cadenza(VG)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Cadenza(VG)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Cadenza(VG)	2014	General Area	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Cadenza(VG)	2014	General Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Cadenza(VG)	2014	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cadenza(VG)	2014	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cadenza(VG)	2014	General Area	Smart Key	Version Information	
Cadenza(VG)	2014	General Area	Smart Key	Read Fault Code	
Cadenza(VG)	2014	General Area	Smart Key	Clear Fault Memory	
Cadenza(VG)	2014	General Area	Smart Key	Read Data Stream	
Cadenza(VG)	2014	General Area	Smart Key	Actuation Test	
Cadenza(VG)	2014	General Area	Smart Key	Special Function	ESCL Open Status Check
Cadenza(VG)	2014	General Area	Smart Key	Special Function	Smart Key Code Saving
Cadenza(VG)	2014	General Area	Smart Key	Special Function	Neutralization Mode
Cadenza(VG)	2014	General Area	Smart Key	Special Function	SMK Status Information
Cadenza(VG)	2014	General Area	Smart Key	Special Function	ESCL Status Information
Cadenza(VG)	2014	General Area	Smart Key	Special Function	FOB KEY Status Information
Cadenza(VG)	2014	General Area	Smart Key	Special Function	Current FOB Key Check
Cadenza(VG)	2014	General Area	Smart Key	Special Function	Serial Communication Line Check
Cadenza(VG)	2014	General Area	Smart Key	Special Function	Antenna Status Check
Cadenza(VG)	2014	General Area	Power Steering	Version Information	
Cadenza(VG)	2014	General Area	Power Steering	Read Fault Code	
Cadenza(VG)	2014	General Area	Power Steering	Clear Fault Memory	
Cadenza(VG)	2014	General Area	Power Steering	Read Data Stream	
Cadenza(VG)	2014	General Area	Power Steering	Special Function	ASP Calibration
Cadenza(VG)	2014	General Area	Power Steering	Special Function	EPS Type Recognition
Cadenza(VG)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cadenza(VG)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cadenza(VG)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cadenza(VG)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cadenza(VG)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cadenza(VG)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
Cadenza(VG)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cadenza(VG)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cadenza(VG)	2014	General Area	Head Lamp	Version Information	
Cadenza(VG)	2014	General Area	Head Lamp	Read Fault Code	
Cadenza(VG)	2014	General Area	Head Lamp	Clear Fault Memory	
Cadenza(VG)	2014	General Area	Head Lamp	Read Data Stream	
Cadenza(VG)	2014	General Area	Head Lamp	Actuation Test	
Cadenza(VG)	2014	General Area	Head Lamp	Special Function	Headlamp Leveling
Cadenza(VG)	2014	General Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Cadenza(VG)	2014	General Area	Head Lamp	Special Function	Calibration
Cadenza(VG)	2014	General Area	Head Lamp	Special Function	Parameter Download
Cadenza(VG)	2014	General Area	LDWS(Lane Departure Warning System)	Version Information	
Cadenza(VG)	2014	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Cadenza(VG)	2014	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cadenza(VG)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Cadenza(VG)	2014	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Cadenza(VG)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Cadenza(VG)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Cadenza(VG)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Code Reading
Cadenza(VG)	2014	General Area	SPAS(Smart Parking Assist System)	Version Information	
Cadenza(VG)	2014	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Cadenza(VG)	2014	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Cadenza(VG)	2014	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Cadenza(VG)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Cadenza(VG)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cadenza(VG)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cadenza(VG)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Cadenza(VG)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cadenza(VG)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cadenza(VG)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cadenza(VG)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cadenza(VG)	2014	General Area	CCS(Cruise Control System)	Version Information	
Cadenza(VG)	2014	General Area	CCS(Cruise Control System)	Read Fault Code	
Cadenza(VG)	2014	General Area	CCS(Cruise Control System)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	CCS(Cruise Control System)	Read Data Stream	
Cadenza(VG)	2014	General Area	CCS(Cruise Control System)	Special Function	SCC Alignment(Calibration)
Cadenza(VG)	2014	General Area	SVMS(Surround View Monitor System)	Version Information	
Cadenza(VG)	2014	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Cadenza(VG)	2014	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Cadenza(VG)	2014	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cadenza(VG)	2014	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cadenza(VG)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Cadenza(VG)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Cadenza(VG)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Cadenza(VG)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Cadenza(VG)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Cadenza(VG)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Cadenza(VG)	2014	General Area	Smart Key Unit	Version Information	
Cadenza(VG)	2014	General Area	Smart Key Unit	Read Fault Code	
Cadenza(VG)	2014	General Area	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Cadenza(VG)	2014	General Area	Smart Key Unit	Read Data Stream	
Cadenza(VG)	2014	General Area	Smart Key Unit	Actuation Test	
Cadenza(VG)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cadenza(VG)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cadenza(VG)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Cadenza(VG)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cadenza(VG)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cadenza(VG)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cadenza(VG)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cadenza(VG)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cadenza(VG)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cadenza(VG)	2014	General Area	SCC(Smart Cruise Control)	Version Information	
Cadenza(VG)	2014	General Area	SCC(Smart Cruise Control)	Read Fault Code	
Cadenza(VG)	2014	General Area	SCC(Smart Cruise Control)	Clear Fault Memory	
Cadenza(VG)	2014	General Area	SCC(Smart Cruise Control)	Read Data Stream	
Cadenza(VG)	2014	General Area	SCC(Smart Cruise Control)	Special Function	SCC Alignment(Calibration)
Cadenza(VG)	2014	General Area	Telematics Unit	Version Information	
Cadenza(VG)	2014	General Area	Telematics Unit	Read Fault Code	
Cadenza(VG)	2014	General Area	Telematics Unit	Clear Fault Memory	
Cadenza(VG)	2014	General Area	Immobilizer	Read Data Stream	
Cadenza(VG)	2014	General Area	Immobilizer	Special Function	Password Teaching/Changing
Cadenza(VG)	2014	General Area	Immobilizer	Special Function	Neutral Mode
Cadenza(VG)	2014	General Area	Immobilizer	Special Function	Limp Home Mode
Cadenza(VG)	2014	General Area	Immobilizer	Special Function	Smatra Neutral Mode
Cadenza(VG)	2014	General Area	Immobilizer	Special Function	Teaching
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Version Information	
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cadenza(VG)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Cadenza(VG)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cadenza(VG)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(VG)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cadenza(VG)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Cadenza(VG)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cadenza(VG)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cadenza(VG)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cadenza(VG)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	

model	year	area	system	function	subfunction
Cadenza(VG)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cadenza(VG)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cadenza(VG)	2013	General Area	AC(Air Conditioning)	Version Information	
Cadenza(VG)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Cadenza(VG)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Cadenza(VG)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Cadenza(VG)	2013	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cadenza(VG)	2013	General Area	BCM(Body Control Module)	Version Information	
Cadenza(VG)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Cadenza(VG)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Cadenza(VG)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Cadenza(VG)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Cadenza(VG)	2013	General Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Cadenza(VG)	2013	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cadenza(VG)	2013	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cadenza(VG)	2013	General Area	Smart Key	Version Information	
Cadenza(VG)	2013	General Area	Smart Key	Read Fault Code	
Cadenza(VG)	2013	General Area	Smart Key	Clear Fault Memory	
Cadenza(VG)	2013	General Area	Smart Key	Read Data Stream	
Cadenza(VG)	2013	General Area	Smart Key	Actuation Test	
Cadenza(VG)	2013	General Area	Smart Key	Special Function	ESCL Open Status Check
Cadenza(VG)	2013	General Area	Smart Key	Special Function	Smart Key Code Saving
Cadenza(VG)	2013	General Area	Smart Key	Special Function	Neutralization Mode
Cadenza(VG)	2013	General Area	Smart Key	Special Function	SMK Status Information
Cadenza(VG)	2013	General Area	Smart Key	Special Function	ESCL Status Information
Cadenza(VG)	2013	General Area	Smart Key	Special Function	FOB KEY Status Information
Cadenza(VG)	2013	General Area	Smart Key	Special Function	Current FOB Key Check
Cadenza(VG)	2013	General Area	Smart Key	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Cadenza(VG)	2013	General Area	Smart Key	Special Function	Antenna Status Check
Cadenza(VG)	2013	General Area	Power Steering	Version Information	
Cadenza(VG)	2013	General Area	Power Steering	Read Fault Code	
Cadenza(VG)	2013	General Area	Power Steering	Clear Fault Memory	
Cadenza(VG)	2013	General Area	Power Steering	Read Data Stream	
Cadenza(VG)	2013	General Area	Power Steering	Special Function	ASP Calibration
Cadenza(VG)	2013	General Area	Power Steering	Special Function	EPS Type Recognition
Cadenza(VG)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cadenza(VG)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cadenza(VG)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cadenza(VG)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cadenza(VG)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cadenza(VG)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cadenza(VG)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cadenza(VG)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cadenza(VG)	2013	General Area	Head Lamp	Version Information	
Cadenza(VG)	2013	General Area	Head Lamp	Read Fault Code	
Cadenza(VG)	2013	General Area	Head Lamp	Clear Fault Memory	
Cadenza(VG)	2013	General Area	Head Lamp	Read Data Stream	
Cadenza(VG)	2013	General Area	Head Lamp	Actuation Test	
Cadenza(VG)	2013	General Area	Head Lamp	Special Function	Headlamp Leveling
Cadenza(VG)	2013	General Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Cadenza(VG)	2013	General Area	Head Lamp	Special Function	Calibration
Cadenza(VG)	2013	General Area	Head Lamp	Special Function	Parameter Download
Cadenza(VG)	2013	General Area	LDWS(Lane Departure Warning System)	Version Information	
Cadenza(VG)	2013	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Cadenza(VG)	2013	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	

model	year	area	system	function	subfunction
Cadenza(VG)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Cadenza(VG)	2013	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Cadenza(VG)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Cadenza(VG)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Cadenza(VG)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Code Reading
Cadenza(VG)	2013	General Area	SPAS(Smart Parking Assist System)	Version Information	
Cadenza(VG)	2013	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Cadenza(VG)	2013	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Cadenza(VG)	2013	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Cadenza(VG)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Cadenza(VG)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cadenza(VG)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cadenza(VG)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cadenza(VG)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cadenza(VG)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cadenza(VG)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cadenza(VG)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cadenza(VG)	2013	General Area	CCS(Cruise Control System)	Version Information	
Cadenza(VG)	2013	General Area	CCS(Cruise Control System)	Read Fault Code	
Cadenza(VG)	2013	General Area	CCS(Cruise Control System)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	CCS(Cruise Control System)	Read Data Stream	
Cadenza(VG)	2013	General Area	CCS(Cruise Control System)	Special Function	SCC Alignment(Calibration)
Cadenza(VG)	2013	General Area	SVMS(Surround View Monitor System)	Version Information	
Cadenza(VG)	2013	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Cadenza(VG)	2013	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Cadenza(VG)	2013	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)

model	year	area	system	function	subfunction
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Cadenza(VG)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
Cadenza(VG)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Cadenza(VG)	2013	General Area	Smart Key	Special Function	PDM Status Information
Cadenza(VG)	2013	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cadenza(VG)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cadenza(VG)	2013	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cadenza(VG)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cadenza(VG)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cadenza(VG)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Cadenza(VG)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Cadenza(VG)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Cadenza(VG)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Cadenza(VG)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Cadenza(VG)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cadenza(VG)	2013	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cadenza(VG)	2013	General Area	AVMS(Around View Monitor System)	Version Information	
Cadenza(VG)	2013	General Area	AVMS(Around View Monitor System)	Read Fault Code	
Cadenza(VG)	2013	General Area	AVMS(Around View Monitor System)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	AVMS(Around View Monitor System)	Read Data Stream	
Cadenza(VG)	2013	General Area	AVMS(Around View Monitor System)	Actuation Test	
Cadenza(VG)	2013	General Area	Smart Key Unit	Version Information	
Cadenza(VG)	2013	General Area	Smart Key Unit	Read Fault Code	
Cadenza(VG)	2013	General Area	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Cadenza(VG)	2013	General Area	Smart Key Unit	Read Data Stream	
Cadenza(VG)	2013	General Area	Smart Key Unit	Actuation Test	
Cadenza(VG)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cadenza(VG)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cadenza(VG)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information
Cadenza(VG)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cadenza(VG)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cadenza(VG)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cadenza(VG)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cadenza(VG)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cadenza(VG)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cadenza(VG)	2013	General Area	SCC(Smart Cruise Control)	Version Information	
Cadenza(VG)	2013	General Area	SCC(Smart Cruise Control)	Read Fault Code	
Cadenza(VG)	2013	General Area	SCC(Smart Cruise Control)	Clear Fault Memory	
Cadenza(VG)	2013	General Area	SCC(Smart Cruise Control)	Read Data Stream	
Cadenza(VG)	2013	General Area	SCC(Smart Cruise Control)	Special Function	SCC Alignment(Calibration)
Cadenza(VG)	2013	General Area	Telematics Unit	Version Information	
Cadenza(VG)	2013	General Area	Telematics Unit	Read Fault Code	
Cadenza(VG)	2013	General Area	Telematics Unit	Clear Fault Memory	
Cadenza(VG)	2013	General Area	Immobilizer	Read Data Stream	
Cadenza(VG)	2013	General Area	Immobilizer	Special Function	Password Teaching/Changing
Cadenza(VG)	2013	General Area	Immobilizer	Special Function	Neutral Mode
Cadenza(VG)	2013	General Area	Immobilizer	Special Function	Limp Home Mode
Cadenza(VG)	2013	General Area	Immobilizer	Special Function	Smatra Neutral Mode
Cadenza(VG)	2013	General Area	Immobilizer	Special Function	Teaching
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Version Information	
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cadenza(VG)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Cadenza(VG)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cadenza(VG)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cadenza(VG)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(VG)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cadenza(VG)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Cadenza(VG)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cadenza(VG)	2012	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cadenza(VG)	2012	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cadenza(VG)	2012	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cadenza(VG)	2012	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cadenza(VG)	2012	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cadenza(VG)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Cadenza(VG)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cadenza(VG)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Cadenza(VG)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
Cadenza(VG)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cadenza(VG)	2012	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Cadenza(VG)	2012	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Cadenza(VG)	2012	General Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Cadenza(VG)	2012	General Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	

model	year	area	system	function	subfunction
Cadenza(VG)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Cadenza(VG)	2012	General Area	AC(Air Conditioning)	Version Information	
Cadenza(VG)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Cadenza(VG)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cadenza(VG)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Cadenza(VG)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Cadenza(VG)	2012	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cadenza(VG)	2012	General Area	BCM(Body Control Module)	Version Information	
Cadenza(VG)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
Cadenza(VG)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cadenza(VG)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Cadenza(VG)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Cadenza(VG)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
Cadenza(VG)	2012	General Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Cadenza(VG)	2012	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cadenza(VG)	2012	General Area	Smart Key	Version Information	
Cadenza(VG)	2012	General Area	Smart Key	Read Fault Code	
Cadenza(VG)	2012	General Area	Smart Key	Clear Fault Memory	
Cadenza(VG)	2012	General Area	Smart Key	Read Data Stream	
Cadenza(VG)	2012	General Area	Smart Key	Actuation Test	
Cadenza(VG)	2012	General Area	Smart Key	Special Function	ESCL Open Status Check
Cadenza(VG)	2012	General Area	Smart Key	Special Function	Neutralization Mode
Cadenza(VG)	2012	General Area	Smart Key	Special Function	SMK Status Information
Cadenza(VG)	2012	General Area	Smart Key	Special Function	ESCL Status Information
Cadenza(VG)	2012	General Area	Smart Key	Special Function	PDM Status Information
Cadenza(VG)	2012	General Area	Smart Key	Special Function	FOB KEY Status Information
Cadenza(VG)	2012	General Area	Smart Key	Special Function	Serial Communication Line Check
Cadenza(VG)	2012	General Area	Smart Key	Special Function	Antenna Status Check
Cadenza(VG)	2012	General Area	Smart Key	Special Function	Smart Key Code Saving
Cadenza(VG)	2012	General Area	Power Steering	Version Information	

model	year	area	system	function	subfunction
Cadenza(VG)	2012	General Area	Power Steering	Read Fault Code	
Cadenza(VG)	2012	General Area	Power Steering	Clear Fault Memory	
Cadenza(VG)	2012	General Area	Power Steering	Read Data Stream	
Cadenza(VG)	2012	General Area	Power Steering	Special Function	ASP Calibration
Cadenza(VG)	2012	General Area	Power Steering	Special Function	EPS Type Recognition
Cadenza(VG)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Cadenza(VG)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Cadenza(VG)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Cadenza(VG)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Cadenza(VG)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Cadenza(VG)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Cadenza(VG)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Cadenza(VG)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Cadenza(VG)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cadenza(VG)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cadenza(VG)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cadenza(VG)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cadenza(VG)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cadenza(VG)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cadenza(VG)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cadenza(VG)	2012	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cadenza(VG)	2012	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cadenza(VG)	2012	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cadenza(VG)	2012	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cadenza(VG)	2012	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cadenza(VG)	2012	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Cadenza(VG)	2012	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting

model	year	area	system	function	subfunction
Cadenza(VG)	2011	General Area	ECM(Engine Control Module)	Version Information	
Cadenza(VG)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Cadenza(VG)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cadenza(VG)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Cadenza(VG)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Cadenza(VG)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Cadenza(VG)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cadenza(VG)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cadenza(VG)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(VG)	2011	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cadenza(VG)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Cadenza(VG)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cadenza(VG)	2011	General Area	ESP(Electronic Stability Program)	Version Information	
Cadenza(VG)	2011	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cadenza(VG)	2011	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cadenza(VG)	2011	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cadenza(VG)	2011	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cadenza(VG)	2011	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Cadenza(VG)	2011	General Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Cadenza(VG)	2011	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cadenza(VG)	2011	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cadenza(VG)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cadenza(VG)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cadenza(VG)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cadenza(VG)	2011	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Cadenza(VG)	2011	General Area	AC(Air Conditioning)	Version Information	
Cadenza(VG)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Cadenza(VG)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cadenza(VG)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Cadenza(VG)	2011	General Area	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Cadenza(VG)	2011	General Area	BCM(Body Control Module)	Version Information	
Cadenza(VG)	2011	General Area	BCM(Body Control Module)	Read Fault Code	
Cadenza(VG)	2011	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cadenza(VG)	2011	General Area	BCM(Body Control Module)	Read Data Stream	
Cadenza(VG)	2011	General Area	BCM(Body Control Module)	Actuation Test	
Cadenza(VG)	2011	General Area	BCM(Body Control Module)	Special Function	User Option
Cadenza(VG)	2011	General Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Cadenza(VG)	2011	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cadenza(VG)	2011	General Area	Smart Key	Version Information	
Cadenza(VG)	2011	General Area	Smart Key	Read Fault Code	
Cadenza(VG)	2011	General Area	Smart Key	Clear Fault Memory	
Cadenza(VG)	2011	General Area	Smart Key	Read Data Stream	
Cadenza(VG)	2011	General Area	Smart Key	Actuation Test	
Cadenza(VG)	2011	General Area	Smart Key	Special Function	ESCL Open Status Check
Cadenza(VG)	2011	General Area	Smart Key	Special Function	Neutralization Mode
Cadenza(VG)	2011	General Area	Smart Key	Special Function	SMK Status Information
Cadenza(VG)	2011	General Area	Smart Key	Special Function	ESCL Status Information
Cadenza(VG)	2011	General Area	Smart Key	Special Function	PDM Status Information
Cadenza(VG)	2011	General Area	Smart Key	Special Function	FOB KEY Status Information
Cadenza(VG)	2011	General Area	Smart Key	Special Function	Serial Communication Line Check
Cadenza(VG)	2011	General Area	Smart Key	Special Function	Antenna Status Check
Cadenza(VG)	2011	General Area	ECS(Electronic Control Suspension)	Version Information	
Cadenza(VG)	2011	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Cadenza(VG)	2011	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Cadenza(VG)	2011	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Cadenza(VG)	2011	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Cadenza(VG)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Cadenza(VG)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Cadenza(VG)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Cadenza(VG)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
Cadenza(VG)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Cadenza(VG)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Cadenza(VG)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Cadenza(VG)	2011	General Area	LDWS(Lane Departure Warning System)	Version Information	
Cadenza(VG)	2011	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Cadenza(VG)	2011	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cadenza(VG)	2011	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cadenza(VG)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Cadenza(VG)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cadenza(VG)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cadenza(VG)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cadenza(VG)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cadenza(VG)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cadenza(VG)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cadenza(VG)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cadenza(VG)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cadenza(VG)	2011	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Cadenza(VG)	2011	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Cadenza(VG)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cadenza(VG)	2011	General Area	Smart Key	Special Function	Smart Key Code Saving
Cadenza(VG)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cadenza(VG)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cadenza(VG)	2010	General Area	ECM(Engine Control Module)	Version Information	
Cadenza(VG)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Cadenza(VG)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cadenza(VG)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Cadenza(VG)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Cadenza(VG)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Cadenza(VG)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Cadenza(VG)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cadenza(VG)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(VG)	2010	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cadenza(VG)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Cadenza(VG)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cadenza(VG)	2010	General Area	ESP(Electronic Stability Program)	Version Information	
Cadenza(VG)	2010	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cadenza(VG)	2010	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cadenza(VG)	2010	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cadenza(VG)	2010	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cadenza(VG)	2010	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Cadenza(VG)	2010	General Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Cadenza(VG)	2010	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cadenza(VG)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cadenza(VG)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cadenza(VG)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cadenza(VG)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cadenza(VG)	2010	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Cadenza(VG)	2010	General Area	AC(Air Conditioning)	Version Information	
Cadenza(VG)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Cadenza(VG)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cadenza(VG)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Cadenza(VG)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Cadenza(VG)	2010	General Area	BCM(Body Control Module)	Version Information	
Cadenza(VG)	2010	General Area	BCM(Body Control Module)	Read Fault Code	
Cadenza(VG)	2010	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cadenza(VG)	2010	General Area	BCM(Body Control Module)	Read Data Stream	
Cadenza(VG)	2010	General Area	BCM(Body Control Module)	Actuation Test	
Cadenza(VG)	2010	General Area	BCM(Body Control Module)	Special Function	User Option
Cadenza(VG)	2010	General Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting

model	year	area	system	function	subfunction
Cadenza(VG)	2010	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cadenza(VG)	2010	General Area	Smart Key	Version Information	
Cadenza(VG)	2010	General Area	Smart Key	Read Fault Code	
Cadenza(VG)	2010	General Area	Smart Key	Clear Fault Memory	
Cadenza(VG)	2010	General Area	Smart Key	Read Data Stream	
Cadenza(VG)	2010	General Area	Smart Key	Actuation Test	
Cadenza(VG)	2010	General Area	Smart Key	Special Function	ESCL Open Status Check
Cadenza(VG)	2010	General Area	Smart Key	Special Function	Neutralization Mode
Cadenza(VG)	2010	General Area	Smart Key	Special Function	SMK Status Information
Cadenza(VG)	2010	General Area	Smart Key	Special Function	ESCL Status Information
Cadenza(VG)	2010	General Area	Smart Key	Special Function	PDM Status Information
Cadenza(VG)	2010	General Area	Smart Key	Special Function	FOB KEY Status Information
Cadenza(VG)	2010	General Area	Smart Key	Special Function	Serial Communication Line Check
Cadenza(VG)	2010	General Area	Smart Key	Special Function	Antenna Status Check
Cadenza(VG)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Cadenza(VG)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Cadenza(VG)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Cadenza(VG)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Cadenza(VG)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Cadenza(VG)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Cadenza(VG)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Cadenza(VG)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Cadenza(VG)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cadenza(VG)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cadenza(VG)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cadenza(VG)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cadenza(VG)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cadenza(VG)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cadenza(VG)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Cadenza(VG)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cadenza(VG)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Cadenza(VG)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Cadenza(VG)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cadenza(VG)	2010	General Area	Smart Key	Special Function	Smart Key Code Saving
Cadenza(VG)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cadenza(VG)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Version Information	
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Actuation Test	
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Carens(FJ)	2007	General Area	TCM(Transmission Control Module)	Version Information	
Carens(FJ)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(FJ)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(FJ)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(FJ)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(FJ)	2007	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens(FJ)	2007	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carens(FJ)	2007	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens(FJ)	2007	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carens(FJ)	2007	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens(FJ)	2007	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens(FJ)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Carens(FJ)	2007	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens(FJ)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(FJ)	2007	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(FJ)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(FJ)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(FJ)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens(FJ)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(FJ)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens(FJ)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(FJ)	2007	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens(FJ)	2007	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Version Information	
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens(FJ)	2006	General Area	TCM(Transmission Control Module)	Version Information	
Carens(FJ)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(FJ)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(FJ)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(FJ)	2006	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens(FJ)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
Carens(FJ)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens(FJ)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carens(FJ)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens(FJ)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens(FJ)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carens(FJ)	2006	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens(FJ)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(FJ)	2006	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(FJ)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(FJ)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(FJ)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens(FJ)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(FJ)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens(FJ)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(FJ)	2006	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(FJ)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Carens(FJ)	2006	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Version Information	
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Actuation Test	
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens(FJ)	2005	General Area	TCM(Transmission Control Module)	Version Information	
Carens(FJ)	2005	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Carens(FJ)	2005	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(FJ)	2005	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(FJ)	2005	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(FJ)	2005	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carens(FJ)	2005	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens(FJ)	2005	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carens(FJ)	2005	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens(FJ)	2005	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens(FJ)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carens(FJ)	2005	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens(FJ)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(FJ)	2005	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(FJ)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(FJ)	2005	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(FJ)	2005	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens(FJ)	2005	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(FJ)	2005	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens(FJ)	2005	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(FJ)	2005	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(FJ)	2005	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Carens(FJ)	2005	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Carens(FJ)	2004	General Area	ECM(Engine Control Module)	Version Information	
Carens(FJ)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(FJ)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(FJ)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Carens(FJ)	2004	General Area	ECM(Engine Control Module)	Actuation Test	
Carens(FJ)	2004	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Carens(FJ)	2004	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens(FJ)	2004	General Area	TCM(Transmission Control Module)	Version Information	
Carens(FJ)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(FJ)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(FJ)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(FJ)	2004	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(FJ)	2004	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carens(FJ)	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens(FJ)	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carens(FJ)	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens(FJ)	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens(FJ)	2004	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carens(FJ)	2004	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens(FJ)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(FJ)	2004	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(FJ)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(FJ)	2004	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(FJ)	2004	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens(FJ)	2004	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(FJ)	2004	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens(FJ)	2004	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(FJ)	2004	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(FJ)	2004	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(FJ)	2003	General Area	ECM(Engine Control Module)	Version Information	
Carens(FJ)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(FJ)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(FJ)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(FJ)	2003	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Carens(FJ)	2003	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Carens(FJ)	2003	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens(FJ)	2003	General Area	TCM(Transmission Control Module)	Version Information	
Carens(FJ)	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(FJ)	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(FJ)	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(FJ)	2003	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(FJ)	2003	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carens(FJ)	2003	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens(FJ)	2003	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carens(FJ)	2003	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens(FJ)	2003	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens(FJ)	2003	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carens(FJ)	2003	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens(FJ)	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(FJ)	2003	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(FJ)	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(FJ)	2003	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(FJ)	2003	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens(FJ)	2003	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(FJ)	2003	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens(FJ)	2003	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(FJ)	2003	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(FJ)	2003	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(FJ)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(FJ)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(FJ)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(FJ)	2002	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(FJ)	2002	General Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Carens(FJ)	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Carens(FJ)	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(FJ)	2002	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(FJ)	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens(FJ)	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carens(FJ)	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens(FJ)	2002	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens(FJ)	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(FJ)	2002	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(FJ)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(FJ)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(FJ)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(FJ)	2001	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(FJ)	2001	General Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Carens(FJ)	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(FJ)	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(FJ)	2001	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(FJ)	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens(FJ)	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carens(FJ)	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens(FJ)	2001	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens(FJ)	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(FJ)	2001	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(FJ)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(FJ)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(FJ)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(FJ)	2000	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(FJ)	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(FJ)	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(FJ)	2000	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(FJ)	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	

model	year	area	system	function	subfunction
Carens(FJ)	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carens(FJ)	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens(FJ)	2000	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens(FJ)	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(FJ)	2000	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Version Information	
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	EVAP Test
Carens(UN)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Carens(UN)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(UN)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(UN)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(UN)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(UN)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens(UN)	2013	General Area	ESP(Electronic Stability Program)	Version Information	
Carens(UN)	2013	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Carens(UN)	2013	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carens(UN)	2013	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Carens(UN)	2013	General Area	ESP(Electronic Stability Program)	Actuation Test	
Carens(UN)	2013	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Carens(UN)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens(UN)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(UN)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(UN)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(UN)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Carens(UN)	2013	General Area	AC(Air Conditioning)	Version Information	
Carens(UN)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Carens(UN)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carens(UN)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Carens(UN)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Carens(UN)	2013	General Area	BCM(Body Control Module)	Version Information	
Carens(UN)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Carens(UN)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Carens(UN)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(UN)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens(UN)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(UN)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens(UN)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carens(UN)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(UN)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carens(UN)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens(UN)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens(UN)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Version Information	
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens(UN)	2012	General Area	ESP(Electronic Stability Program)	Version Information	
Carens(UN)	2012	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Carens(UN)	2012	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Carens(UN)	2012	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Carens(UN)	2012	General Area	ESP(Electronic Stability Program)	Actuation Test	
Carens(UN)	2012	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Carens(UN)	2012	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens(UN)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(UN)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(UN)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(UN)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Carens(UN)	2012	General Area	AC(Air Conditioning)	Version Information	
Carens(UN)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Carens(UN)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carens(UN)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Carens(UN)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Carens(UN)	2012	General Area	BCM(Body Control Module)	Version Information	
Carens(UN)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Carens(UN)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Carens(UN)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(UN)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Carens(UN)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(UN)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens(UN)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carens(UN)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(UN)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carens(UN)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(UN)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Carens(UN)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(UN)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(UN)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(UN)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carens(UN)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(UN)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Carens(UN)	2012	General Area	ECM(Engine Control Module)	Special Function	EVAP Test
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Version Information	
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens(UN)	2011	General Area	ESP(Electronic Stability Program)	Version Information	
Carens(UN)	2011	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Carens(UN)	2011	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Carens(UN)	2011	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Carens(UN)	2011	General Area	ESP(Electronic Stability Program)	Actuation Test	
Carens(UN)	2011	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Carens(UN)	2011	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens(UN)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(UN)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(UN)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(UN)	2011	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Carens(UN)	2011	General Area	AC(Air Conditioning)	Version Information	
Carens(UN)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Carens(UN)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carens(UN)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Carens(UN)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Carens(UN)	2011	General Area	BCM(Body Control Module)	Version Information	
Carens(UN)	2011	General Area	BCM(Body Control Module)	Read Data Stream	
Carens(UN)	2011	General Area	BCM(Body Control Module)	Actuation Test	
Carens(UN)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(UN)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens(UN)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(UN)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens(UN)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carens(UN)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(UN)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Carens(UN)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(UN)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Carens(UN)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(UN)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(UN)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(UN)	2011	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carens(UN)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(UN)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Carens(UN)	2011	General Area	ECM(Engine Control Module)	Special Function	EVAP Test
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Version Information	
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Carens(UN)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Carens(UN)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(UN)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(UN)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(UN)	2010	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carens(UN)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(UN)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens(UN)	2010	General Area	ESP(Electronic Stability Program)	Version Information	
Carens(UN)	2010	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Carens(UN)	2010	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Carens(UN)	2010	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Carens(UN)	2010	General Area	ESP(Electronic Stability Program)	Actuation Test	
Carens(UN)	2010	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Carens(UN)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens(UN)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(UN)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(UN)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(UN)	2010	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Carens(UN)	2010	General Area	AC(Air Conditioning)	Version Information	
Carens(UN)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Carens(UN)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carens(UN)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Carens(UN)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Carens(UN)	2010	General Area	BCM(Body Control Module)	Version Information	
Carens(UN)	2010	General Area	BCM(Body Control Module)	Read Data Stream	
Carens(UN)	2010	General Area	BCM(Body Control Module)	Actuation Test	
Carens(UN)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(UN)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens(UN)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(UN)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Carens(UN)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carens(UN)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(UN)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carens(UN)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type)
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Carens(UN)	2010	General Area	ECM(Engine Control Module)	Special Function	EVAP Test
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Version Information	
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens(UN)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Carens(UN)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(UN)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(UN)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(UN)	2009	General Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Carens(UN)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(UN)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens(UN)	2009	General Area	ESP(Electronic Stability Program)	Version Information	
Carens(UN)	2009	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Carens(UN)	2009	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Carens(UN)	2009	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Carens(UN)	2009	General Area	ESP(Electronic Stability Program)	Actuation Test	
Carens(UN)	2009	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Carens(UN)	2009	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens(UN)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(UN)	2009	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(UN)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(UN)	2009	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Carens(UN)	2009	General Area	AC(Air Conditioning)	Version Information	
Carens(UN)	2009	General Area	AC(Air Conditioning)	Read Fault Code	
Carens(UN)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carens(UN)	2009	General Area	AC(Air Conditioning)	Read Data Stream	
Carens(UN)	2009	General Area	AC(Air Conditioning)	Actuation Test	
Carens(UN)	2009	General Area	BCM(Body Control Module)	Version Information	
Carens(UN)	2009	General Area	BCM(Body Control Module)	Read Data Stream	
Carens(UN)	2009	General Area	BCM(Body Control Module)	Actuation Test	
Carens(UN)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(UN)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens(UN)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(UN)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens(UN)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carens(UN)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(UN)	2009	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carens(UN)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Carens(UN)	2009	General Area	ECM(Engine Control Module)	Special Function	EVAP Test
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Version Information	
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Actuation Test	
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens(UN)	2008	General Area	TCM(Transmission Control Module)	Version Information	
Carens(UN)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(UN)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(UN)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(UN)	2008	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carens(UN)	2008	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(UN)	2008	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens(UN)	2008	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carens(UN)	2008	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens(UN)	2008	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carens(UN)	2008	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens(UN)	2008	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens(UN)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carens(UN)	2008	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens(UN)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens(UN)	2008	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(UN)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(UN)	2008	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Carens(UN)	2008	General Area	AC(Air Conditioning)	Version Information	
Carens(UN)	2008	General Area	AC(Air Conditioning)	Read Fault Code	
Carens(UN)	2008	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carens(UN)	2008	General Area	AC(Air Conditioning)	Read Data Stream	
Carens(UN)	2008	General Area	AC(Air Conditioning)	Actuation Test	
Carens(UN)	2008	General Area	BCM(Body Control Module)	Version Information	
Carens(UN)	2008	General Area	BCM(Body Control Module)	Read Data Stream	
Carens(UN)	2008	General Area	BCM(Body Control Module)	Actuation Test	
Carens(UN)	2008	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(UN)	2008	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens(UN)	2008	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(UN)	2008	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens(UN)	2008	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carens(UN)	2008	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(UN)	2008	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carens(UN)	2008	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type

model	year	area	system	function	subfunction
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Carens(UN)	2008	General Area	ECM(Engine Control Module)	Special Function	EVAP Test
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Version Information	
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Actuation Test	
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens(UN)	2007	General Area	TCM(Transmission Control Module)	Version Information	
Carens(UN)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens(UN)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens(UN)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens(UN)	2007	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carens(UN)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens(UN)	2007	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens(UN)	2007	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carens(UN)	2007	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens(UN)	2007	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carens(UN)	2007	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens(UN)	2007	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens(UN)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carens(UN)	2007	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Carens(UN)	2007	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	

model	year	area	system	function	subfunction
Carens(UN)	2007	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens(UN)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens(UN)	2007	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Carens(UN)	2007	General Area	AC(Air Conditioning)	Version Information	
Carens(UN)	2007	General Area	AC(Air Conditioning)	Read Fault Code	
Carens(UN)	2007	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carens(UN)	2007	General Area	AC(Air Conditioning)	Read Data Stream	
Carens(UN)	2007	General Area	AC(Air Conditioning)	Actuation Test	
Carens(UN)	2007	General Area	BCM(Body Control Module)	Version Information	
Carens(UN)	2007	General Area	BCM(Body Control Module)	Read Data Stream	
Carens(UN)	2007	General Area	BCM(Body Control Module)	Actuation Test	
Carens(UN)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens(UN)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens(UN)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens(UN)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens(UN)	2007	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carens(UN)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens(UN)	2007	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carens(UN)	2007	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Carens(UN)	2007	General Area	ECM(Engine Control Module)	Special Function	EVAP Test

model	year	area	system	function	subfunction
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Version Information	
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Carens/Rondo(RP	2016	General Area	TCM(Transmission Control Module)	Version Information	
Carens/Rondo(RP	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens/Rondo(RP	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carens/Rondo(RP	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens/Rondo(RP	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens/Rondo(RP	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carens/Rondo(RP	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens/Rondo(RP	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens/Rondo(RP	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Carens/Rondo(RP	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	G-Sensor Calibration
Carens/Rondo(RP	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode

model	year	area	system	function	subfunction
Carens/Rondo(RP	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carens/Rondo(RP)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Carens/Rondo(RP	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Carens/Rondo(RP	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens/Rondo(RP	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens/Rondo(RP	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens/Rondo(RP	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Carens/Rondo(RP	2016	General Area	AC(Air Conditioning)	Version Information	
Carens/Rondo(RP	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Carens/Rondo(RP	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	AC(Air Conditioning)	Actuation Test	
Carens/Rondo(RP	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Carens/Rondo(RP	2016	General Area	BCM(Body Control Module)	Version Information	
Carens/Rondo(RP	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Carens/Rondo(RP	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	BCM(Body Control Module)	Actuation Test	
Carens/Rondo(RP	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Carens/Rondo(RP	2016	General Area	BCM(Body Control Module)	Special Function	Siren System Identification(Only
Carens/Rondo(RP)	2016	General Area	BCM(Body Control Module)	Special Function	Wiper Setting Position Calibration Mode
Carens/Rondo(RP	2016	General Area	BCM(Body Control Module)	Special Function	UIP System Identification
Carens/Rondo(RP	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Carens/Rondo(RP	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Carens/Rondo(RP	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Carens/Rondo(RP	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Carens/Rondo(RP	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carens/Rondo(RP	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Carens/Rondo(RP	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Carens/Rondo(RP	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Carens/Rondo(RP	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Carens/Rondo(RP	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Carens/Rondo(RP)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Carens/Rondo(RP	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Carens/Rondo(RP	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Carens/Rondo(RP	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Carens/Rondo(RP	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Carens/Rondo(RP	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Carens/Rondo(RP	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Carens/Rondo(RP	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Carens/Rondo(RP	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Version Information	
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Read Fault Code	
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Read Data Stream	
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Actuation Test	
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information

model	year	area	system	function	subfunction
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Carens/Rondo(RP	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Carens/Rondo(RP	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Carens/Rondo(RP	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Carens/Rondo(RP	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Carens/Rondo(RP	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Carens/Rondo(RP	2016	General Area	SPAS(Smart Parking Assist System)	Version Information	
Carens/Rondo(RP	2016	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Carens/Rondo(RP	2016	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Carens/Rondo(RP	2016	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Carens/Rondo(RP	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
Carens/Rondo(RP	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Carens/Rondo(RP	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens/Rondo(RP	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens/Rondo(RP	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens/Rondo(RP	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens/Rondo(RP	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carens/Rondo(RP	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Carens/Rondo(RP)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement

model	year	area	system	function	subfunction
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Carens/Rondo(RP	2016	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens/Rondo(RP	2016	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Version Information	
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carens/Rondo(RP	2015	General Area	TCM(Transmission Control Module)	Version Information	
Carens/Rondo(RP	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens/Rondo(RP	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens/Rondo(RP	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens/Rondo(RP	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carens/Rondo(RP	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens/Rondo(RP	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens/Rondo(RP	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carens/Rondo(RP	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens/Rondo(RP	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carens/Rondo(RP	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens/Rondo(RP	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens/Rondo(RP	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Carens/Rondo(RP	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	G-Sensor Calibration
Carens/Rondo(RP	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Carens/Rondo(RP	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carens/Rondo(RP)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dhc Only)
Carens/Rondo(RP	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Carens/Rondo(RP	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens/Rondo(RP	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens/Rondo(RP	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens/Rondo(RP	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens/Rondo(RP	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Carens/Rondo(RP	2015	General Area	AC(Air Conditioning)	Version Information	
Carens/Rondo(RP	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Carens/Rondo(RP	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carens/Rondo(RP	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Carens/Rondo(RP	2015	General Area	AC(Air Conditioning)	Actuation Test	
Carens/Rondo(RP	2015	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Carens/Rondo(RP	2015	General Area	BCM(Body Control Module)	Version Information	
Carens/Rondo(RP	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Carens/Rondo(RP	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carens/Rondo(RP	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Carens/Rondo(RP	2015	General Area	BCM(Body Control Module)	Actuation Test	
Carens/Rondo(RP	2015	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Carens/Rondo(RP	2015	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Carens/Rondo(RP	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Carens/Rondo(RP	2015	General Area	BCM(Body Control Module)	Special Function	Siren System Identification(Only

model	year	area	system	function	subfunction
Carens/Rondo(RP)	2015	General Area	BCM(Body Control Module)	Special Function	Wiper Setting Position Calibration Mode
Carens/Rondo(RP)	2015	General Area	BCM(Body Control Module)	Special Function	UIP System Identification
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Version Information	
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Read Fault Code	
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Read Data Stream	
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Actuation Test	
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Carens/Rondo(RP)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Carens/Rondo(RP)	2015	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Carens/Rondo(RP)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Carens/Rondo(RP)	2015	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Carens/Rondo(RP)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Carens/Rondo(RP)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Carens/Rondo(RP)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Carens/Rondo(RP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Carens/Rondo(RP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Carens/Rondo(RP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Carens/Rondo(RP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Carens/Rondo(RP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Carens/Rondo(RP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Carens/Rondo(RP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
Carens/Rondo(RP	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Carens/Rondo(RP	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Carens/Rondo(RP	2015	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Carens/Rondo(RP	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Carens/Rondo(RP	2015	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Carens/Rondo(RP	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Carens/Rondo(RP	2015	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Carens/Rondo(RP)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Carens/Rondo(RP	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Carens/Rondo(RP	2015	General Area	LDWS(Lane Departure Warning System)	Version Information	
Carens/Rondo(RP	2015	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Carens/Rondo(RP	2015	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Carens/Rondo(RP	2015	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Carens/Rondo(RP	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Carens/Rondo(RP	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Carens/Rondo(RP	2015	General Area	SPAS(Smart Parking Assist System)	Version Information	
Carens/Rondo(RP	2015	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Carens/Rondo(RP	2015	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Carens/Rondo(RP	2015	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Carens/Rondo(RP	2015	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Carens/Rondo(RP	2015	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Carens/Rondo(RP	2015	General Area	IMMO(Immobilizer)	Read Fault Code	
Carens/Rondo(RP	2015	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Carens/Rondo(RP	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens/Rondo(RP	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carens/Rondo(RP	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens/Rondo(RP	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens/Rondo(RP	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens/Rondo(RP	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Carens/Rondo(RP	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Carens/Rondo(RP)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Carens/Rondo(RP	2015	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Version Information	
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carens/Rondo(RP	2014	General Area	TCM(Transmission Control Module)	Version Information	
Carens/Rondo(RP	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carens/Rondo(RP	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Carens/Rondo(RP	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Carens/Rondo(RP	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carens/Rondo(RP	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carens/Rondo(RP	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carens/Rondo(RP	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carens/Rondo(RP	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Carens/Rondo(RP	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	G-Sensor Calibration
Carens/Rondo(RP	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Carens/Rondo(RP	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carens/Rondo(RP)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Carens/Rondo(RP	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Carens/Rondo(RP	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Carens/Rondo(RP	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carens/Rondo(RP	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carens/Rondo(RP	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Carens/Rondo(RP	2014	General Area	AC(Air Conditioning)	Version Information	
Carens/Rondo(RP	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Carens/Rondo(RP	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	AC(Air Conditioning)	Actuation Test	
Carens/Rondo(RP	2014	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Carens/Rondo(RP	2014	General Area	BCM(Body Control Module)	Version Information	
Carens/Rondo(RP	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Carens/Rondo(RP	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Carens/Rondo(RP	2014	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Carens/Rondo(RP	2014	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Carens/Rondo(RP	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Carens/Rondo(RP	2014	General Area	BCM(Body Control Module)	Special Function	Siren System Identification(Only
Carens/Rondo(RP)	2014	General Area	BCM(Body Control Module)	Special Function	Wiper Setting Position Calibration Mode
Carens/Rondo(RP	2014	General Area	BCM(Body Control Module)	Special Function	UIP System Identification
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Version Information	
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Read Fault Code	
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Read Data Stream	
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Actuation Test	
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Carens/Rondo(RP	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Carens/Rondo(RP	2014	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Carens/Rondo(RP	2014	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Carens/Rondo(RP	2014	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Carens/Rondo(RP	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Carens/Rondo(RP	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Carens/Rondo(RP	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Carens/Rondo(RP	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carens/Rondo(RP	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Carens/Rondo(RP	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Carens/Rondo(RP	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Carens/Rondo(RP	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Carens/Rondo(RP	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Carens/Rondo(RP	2014	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Carens/Rondo(RP	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Carens/Rondo(RP	2014	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Carens/Rondo(RP)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Carens/Rondo(RP	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Carens/Rondo(RP	2014	General Area	LDWS(Lane Departure Warning System)	Version Information	
Carens/Rondo(RP	2014	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Carens/Rondo(RP	2014	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Carens/Rondo(RP	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Carens/Rondo(RP	2014	General Area	SPAS(Smart Parking Assist System)	Version Information	
Carens/Rondo(RP	2014	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Carens/Rondo(RP	2014	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Carens/Rondo(RP	2014	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Carens/Rondo(RP	2014	General Area	IMMO(Immobilizer)	Read Fault Code	
Carens/Rondo(RP	2014	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Carens/Rondo(RP	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Carens/Rondo(RP	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carens/Rondo(RP	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carens/Rondo(RP	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carens/Rondo(RP	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carens/Rondo(RP	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carens/Rondo(RP)	2014	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Carens/Rondo(RP	2014	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carnival/Sedona(GQ)	2006	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(GQ)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2006	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(GQ)	2006	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(GQ)	2006	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(GQ)	2006	General Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(GQ)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(GQ)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(GQ)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(GQ)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(GQ)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(GQ)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(GQ)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(GQ)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(GQ)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(GQ)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(GQ)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(GQ)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Carnival/Sedona(GQ)	2005	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(GQ)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2005	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2005	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(GQ)	2005	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(GQ)	2005	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(GQ)	2005	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(GQ)	2005	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2005	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2005	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2005	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2005	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(GQ)	2005	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(GQ)	2005	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2005	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(GQ)	2005	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(GQ)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(GQ)	2005	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(GQ)	2005	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2005	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(GQ)	2005	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(GQ)	2005	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(GQ)	2005	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2005	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(GQ)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(GQ)	2005	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(GQ)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Carnival/Sedona(GQ)	2004	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(GQ)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2004	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2004	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(GQ)	2004	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(GQ)	2004	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(GQ)	2004	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(GQ)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2004	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2004	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(GQ)	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(GQ)	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(GQ)	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(GQ)	2004	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(GQ)	2004	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(GQ)	2004	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2004	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(GQ)	2004	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(GQ)	2004	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(GQ)	2004	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(GQ)	2004	General Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2004	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(GQ)	2004	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(GQ)	2004	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Carnival/Sedona(GQ)	2003	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(GQ)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2003	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2003	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(GQ)	2003	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(GQ)	2003	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(GQ)	2003	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(GQ)	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2003	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2003	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(GQ)	2003	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(GQ)	2003	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2003	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(GQ)	2003	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(GQ)	2003	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(GQ)	2003	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(GQ)	2003	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2003	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(GQ)	2003	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(GQ)	2003	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(GQ)	2003	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(GQ)	2003	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(GQ)	2003	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2003	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(GQ)	2003	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Carnival/Sedona(GQ)	2002	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(GQ)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2002	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2002	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(GQ)	2002	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(GQ)	2002	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(GQ)	2002	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(GQ)	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2002	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2002	General Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2002	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(GQ)	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(GQ)	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(GQ)	2002	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(GQ)	2002	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(GQ)	2002	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(GQ)	2002	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2002	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(GQ)	2002	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(GQ)	2002	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(GQ)	2002	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(GQ)	2002	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(GQ)	2002	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(GQ)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2001	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2001	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(GQ)	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(GQ)	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(GQ)	2001	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(GQ)	2001	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(GQ)	2001	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(GQ)	2001	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2001	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(GQ)	2001	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(GQ)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2001	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2001	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(GQ)	2001	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(GQ)	2001	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	2000	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2000	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(GQ)	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(GQ)	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(GQ)	2000	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(GQ)	2000	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	2000	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(GQ)	2000	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(GQ)	2000	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(GQ)	2000	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(GQ)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	2000	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(GQ)	2000	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(GQ)	2000	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(GQ)	2000	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(GQ)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	1999	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	1999	General Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	1999	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(GQ)	1999	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(GQ)	1999	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(GQ)	1999	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(GQ)	1999	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(GQ)	1999	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(GQ)	1999	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(GQ)	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	1999	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(GQ)	1999	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(GQ)	1999	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(GQ)	1999	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(GQ)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(GQ)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	1998	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Carnival/Sedona(GQ)	1998	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(GQ)	1998	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	1998	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(GQ)	1998	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(GQ)	1998	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(GQ)	1998	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(GQ)	1998	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(GQ)	1998	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(GQ)	1998	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(GQ)	1998	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(GQ)	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(GQ)	1998	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(GQ)	1998	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(GQ)	1998	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(GQ)	1998	General Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(VQ)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(VQ)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carnival/Sedona(VQ)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(VQ)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(VQ)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(VQ)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(VQ)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(VQ)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset
Carnival/Sedona(VQ)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Carnival/Sedona(VQ)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Carnival/Sedona(VQ)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(VQ)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Carnival/Sedona(VQ)	2014	General Area	AC(Air Conditioning)	Version Information	
Carnival/Sedona(VQ)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Carnival/Sedona(VQ)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carnival/Sedona(VQ)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Carnival/Sedona(VQ)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Carnival/Sedona(VQ)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2014	General Area	PSD(Power Sliding Door)	Version Information	
Carnival/Sedona(VQ)	2014	General Area	PSD(Power Sliding Door)	Read Fault Code	
Carnival/Sedona(VQ)	2014	General Area	PSD(Power Sliding Door)	Clear Fault Memory	
Carnival/Sedona(VQ)	2014	General Area	PSD(Power Sliding Door)	Read Data Stream	
Carnival/Sedona(VQ)	2014	General Area	PTG(Power Tail Gate)	Version Information	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2014	General Area	PTG(Power Tail Gate)	Read Fault Code	
Carnival/Sedona(VQ)	2014	General Area	PTG(Power Tail Gate)	Clear Fault Memory	
Carnival/Sedona(VQ)	2014	General Area	PTG(Power Tail Gate)	Read Data Stream	
Carnival/Sedona(VQ)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(VQ)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(VQ)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(VQ)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(VQ)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carnival/Sedona(VQ)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(VQ)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carnival/Sedona(VQ)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(VQ)	2014	General Area	FFH(Fuel Fired Heater)	Read Fault Code	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2014	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Carnival/Sedona(VQ)	2014	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Carnival/Sedona(VQ)	2014	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carnival/Sedona(VQ)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(VQ)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(VQ)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carnival/Sedona(VQ)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(VQ)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(VQ)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(VQ)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(VQ)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset
Carnival/Sedona(VQ)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Carnival/Sedona(VQ)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Carnival/Sedona(VQ)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(VQ)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(VQ)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Carnival/Sedona(VQ)	2013	General Area	AC(Air Conditioning)	Version Information	
Carnival/Sedona(VQ)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Carnival/Sedona(VQ)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carnival/Sedona(VQ)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Carnival/Sedona(VQ)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Carnival/Sedona(VQ)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2013	General Area	PSD(Power Sliding Door)	Version Information	
Carnival/Sedona(VQ)	2013	General Area	PSD(Power Sliding Door)	Read Fault Code	
Carnival/Sedona(VQ)	2013	General Area	PSD(Power Sliding Door)	Clear Fault Memory	
Carnival/Sedona(VQ)	2013	General Area	PSD(Power Sliding Door)	Read Data Stream	
Carnival/Sedona(VQ)	2013	General Area	PTG(Power Tail Gate)	Version Information	
Carnival/Sedona(VQ)	2013	General Area	PTG(Power Tail Gate)	Read Fault Code	
Carnival/Sedona(VQ)	2013	General Area	PTG(Power Tail Gate)	Clear Fault Memory	
Carnival/Sedona(VQ)	2013	General Area	PTG(Power Tail Gate)	Read Data Stream	
Carnival/Sedona(VQ)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(VQ)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(VQ)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(VQ)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(VQ)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(VQ)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carnival/Sedona(VQ)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(VQ)	2013	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Carnival/Sedona(VQ)	2013	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Carnival/Sedona(VQ)	2013	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Carnival/Sedona(VQ)	2013	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Carnival/Sedona(VQ)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carnival/Sedona(VQ)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(VQ)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carnival/Sedona(VQ)	2012	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(VQ)	2012	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(VQ)	2012	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2012	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(VQ)	2012	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(VQ)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(VQ)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset
Carnival/Sedona(VQ)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Carnival/Sedona(VQ)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Carnival/Sedona(VQ)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(VQ)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(VQ)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2012	General Area	AC(Air Conditioning)	Version Information	
Carnival/Sedona(VQ)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Carnival/Sedona(VQ)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carnival/Sedona(VQ)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Carnival/Sedona(VQ)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Carnival/Sedona(VQ)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2012	General Area	PSD(Power Sliding Door)	Version Information	
Carnival/Sedona(VQ)	2012	General Area	PSD(Power Sliding Door)	Read Fault Code	
Carnival/Sedona(VQ)	2012	General Area	PSD(Power Sliding Door)	Clear Fault Memory	
Carnival/Sedona(VQ)	2012	General Area	PSD(Power Sliding Door)	Read Data Stream	
Carnival/Sedona(VQ)	2012	General Area	PTG(Power Tail Gate)	Version Information	
Carnival/Sedona(VQ)	2012	General Area	PTG(Power Tail Gate)	Read Fault Code	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2012	General Area	PTG(Power Tail Gate)	Clear Fault Memory	
Carnival/Sedona(VQ)	2012	General Area	PTG(Power Tail Gate)	Read Data Stream	
Carnival/Sedona(VQ)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(VQ)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(VQ)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(VQ)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(VQ)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carnival/Sedona(VQ)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(VQ)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carnival/Sedona(VQ)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(VQ)	2012	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Carnival/Sedona(VQ)	2012	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Carnival/Sedona(VQ)	2012	General Area	FFH(Fuel Fired Heater)	Read Data Stream	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2012	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Carnival/Sedona(VQ)	2012	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carnival/Sedona(VQ)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(VQ)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2011	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carnival/Sedona(VQ)	2011	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(VQ)	2011	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(VQ)	2011	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2011	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(VQ)	2011	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(VQ)	2011	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2011	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset
Carnival/Sedona(VQ)	2011	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Carnival/Sedona(VQ)	2011	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Carnival/Sedona(VQ)	2011	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(VQ)	2011	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2011	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(VQ)	2011	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Carnival/Sedona(VQ)	2011	General Area	AC(Air Conditioning)	Version Information	
Carnival/Sedona(VQ)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Carnival/Sedona(VQ)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carnival/Sedona(VQ)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Carnival/Sedona(VQ)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Carnival/Sedona(VQ)	2011	General Area	BCM(Body Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2011	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2011	General Area	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2011	General Area	BCM(Body Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2011	General Area	PSD(Power Sliding Door)	Version Information	
Carnival/Sedona(VQ)	2011	General Area	PSD(Power Sliding Door)	Read Fault Code	
Carnival/Sedona(VQ)	2011	General Area	PSD(Power Sliding Door)	Clear Fault Memory	
Carnival/Sedona(VQ)	2011	General Area	PSD(Power Sliding Door)	Read Data Stream	
Carnival/Sedona(VQ)	2011	General Area	PTG(Power Tail Gate)	Version Information	
Carnival/Sedona(VQ)	2011	General Area	PTG(Power Tail Gate)	Read Fault Code	
Carnival/Sedona(VQ)	2011	General Area	PTG(Power Tail Gate)	Clear Fault Memory	
Carnival/Sedona(VQ)	2011	General Area	PTG(Power Tail Gate)	Read Data Stream	
Carnival/Sedona(VQ)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(VQ)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(VQ)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(VQ)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(VQ)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carnival/Sedona(VQ)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carnival/Sedona(VQ)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(VQ)	2011	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Carnival/Sedona(VQ)	2011	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Carnival/Sedona(VQ)	2011	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Carnival/Sedona(VQ)	2011	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Carnival/Sedona(VQ)	2011	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carnival/Sedona(VQ)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(VQ)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2010	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carnival/Sedona(VQ)	2010	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(VQ)	2010	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(VQ)	2010	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2010	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(VQ)	2010	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(VQ)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(VQ)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset
Carnival/Sedona(VQ)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Carnival/Sedona(VQ)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Carnival/Sedona(VQ)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(VQ)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(VQ)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Carnival/Sedona(VQ)	2010	General Area	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Carnival/Sedona(VQ)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carnival/Sedona(VQ)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Carnival/Sedona(VQ)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Carnival/Sedona(VQ)	2010	General Area	BCM(Body Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2010	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2010	General Area	BCM(Body Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2010	General Area	BCM(Body Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2010	General Area	PSD(Power Sliding Door)	Version Information	
Carnival/Sedona(VQ)	2010	General Area	PSD(Power Sliding Door)	Read Fault Code	
Carnival/Sedona(VQ)	2010	General Area	PSD(Power Sliding Door)	Clear Fault Memory	
Carnival/Sedona(VQ)	2010	General Area	PSD(Power Sliding Door)	Read Data Stream	
Carnival/Sedona(VQ)	2010	General Area	PTG(Power Tail Gate)	Version Information	
Carnival/Sedona(VQ)	2010	General Area	PTG(Power Tail Gate)	Read Fault Code	
Carnival/Sedona(VQ)	2010	General Area	PTG(Power Tail Gate)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2010	General Area	PTG(Power Tail Gate)	Read Data Stream	
Carnival/Sedona(VQ)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(VQ)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(VQ)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(VQ)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(VQ)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carnival/Sedona(VQ)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(VQ)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carnival/Sedona(VQ)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(VQ)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Carnival/Sedona(VQ)	2010	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Carnival/Sedona(VQ)	2010	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Carnival/Sedona(VQ)	2010	General Area	FFH(Fuel Fired Heater)	Read Data Stream	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2010	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Carnival/Sedona(VQ)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(VQ)	2009	General Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carnival/Sedona(VQ)	2009	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(VQ)	2009	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(VQ)	2009	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2009	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(VQ)	2009	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(VQ)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset
Carnival/Sedona(VQ)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Carnival/Sedona(VQ)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Carnival/Sedona(VQ)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(VQ)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Carnival/Sedona(VQ)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(VQ)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Carnival/Sedona(VQ)	2009	General Area	AC(Air Conditioning)	Version Information	
Carnival/Sedona(VQ)	2009	General Area	AC(Air Conditioning)	Read Fault Code	
Carnival/Sedona(VQ)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carnival/Sedona(VQ)	2009	General Area	AC(Air Conditioning)	Read Data Stream	
Carnival/Sedona(VQ)	2009	General Area	AC(Air Conditioning)	Actuation Test	
Carnival/Sedona(VQ)	2009	General Area	BCM(Body Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2009	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2009	General Area	BCM(Body Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2009	General Area	BCM(Body Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2009	General Area	PSD(Power Sliding Door)	Version Information	
Carnival/Sedona(VQ)	2009	General Area	PSD(Power Sliding Door)	Read Fault Code	
Carnival/Sedona(VQ)	2009	General Area	PSD(Power Sliding Door)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2009	General Area	PSD(Power Sliding Door)	Read Data Stream	
Carnival/Sedona(VQ)	2009	General Area	PTG(Power Tail Gate)	Version Information	
Carnival/Sedona(VQ)	2009	General Area	PTG(Power Tail Gate)	Read Fault Code	
Carnival/Sedona(VQ)	2009	General Area	PTG(Power Tail Gate)	Clear Fault Memory	
Carnival/Sedona(VQ)	2009	General Area	PTG(Power Tail Gate)	Read Data Stream	
Carnival/Sedona(VQ)	2009	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Carnival/Sedona(VQ)	2009	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Carnival/Sedona(VQ)	2009	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Carnival/Sedona(VQ)	2009	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Carnival/Sedona(VQ)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(VQ)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(VQ)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(VQ)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(VQ)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carnival/Sedona(VQ)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2009	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carnival/Sedona(VQ)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carnival/Sedona(VQ)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Carnival/Sedona(VQ)	2009	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Carnival/Sedona(VQ)	2009	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(VQ)	2008	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(VQ)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2008	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carnival/Sedona(VQ)	2008	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(VQ)	2008	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(VQ)	2008	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2008	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(VQ)	2008	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(VQ)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset
Carnival/Sedona(VQ)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Carnival/Sedona(VQ)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(VQ)	2008	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Carnival/Sedona(VQ)	2008	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(VQ)	2008	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2008	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(VQ)	2008	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Carnival/Sedona(VQ)	2008	General Area	AC(Air Conditioning)	Version Information	
Carnival/Sedona(VQ)	2008	General Area	AC(Air Conditioning)	Read Fault Code	
Carnival/Sedona(VQ)	2008	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carnival/Sedona(VQ)	2008	General Area	AC(Air Conditioning)	Read Data Stream	
Carnival/Sedona(VQ)	2008	General Area	AC(Air Conditioning)	Actuation Test	
Carnival/Sedona(VQ)	2008	General Area	BCM(Body Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2008	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2008	General Area	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2008	General Area	BCM(Body Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2008	General Area	PSD(Power Sliding Door)	Version Information	
Carnival/Sedona(VQ)	2008	General Area	PSD(Power Sliding Door)	Read Fault Code	
Carnival/Sedona(VQ)	2008	General Area	PSD(Power Sliding Door)	Clear Fault Memory	
Carnival/Sedona(VQ)	2008	General Area	PSD(Power Sliding Door)	Read Data Stream	
Carnival/Sedona(VQ)	2008	General Area	PTG(Power Tail Gate)	Version Information	
Carnival/Sedona(VQ)	2008	General Area	PTG(Power Tail Gate)	Read Fault Code	
Carnival/Sedona(VQ)	2008	General Area	PTG(Power Tail Gate)	Clear Fault Memory	
Carnival/Sedona(VQ)	2008	General Area	PTG(Power Tail Gate)	Read Data Stream	
Carnival/Sedona(VQ)	2008	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Carnival/Sedona(VQ)	2008	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Carnival/Sedona(VQ)	2008	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Carnival/Sedona(VQ)	2008	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Carnival/Sedona(VQ)	2008	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(VQ)	2008	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2008	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(VQ)	2008	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(VQ)	2008	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carnival/Sedona(VQ)	2008	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(VQ)	2008	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carnival/Sedona(VQ)	2008	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carnival/Sedona(VQ)	2008	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Carnival/Sedona(VQ)	2008	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Carnival/Sedona(VQ)	2008	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(VQ)	2007	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(VQ)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2007	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carnival/Sedona(VQ)	2007	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(VQ)	2007	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(VQ)	2007	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2007	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(VQ)	2007	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(VQ)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset
Carnival/Sedona(VQ)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Carnival/Sedona(VQ)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Carnival/Sedona(VQ)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(VQ)	2007	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Carnival/Sedona(VQ)	2007	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(VQ)	2007	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2007	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(VQ)	2007	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Carnival/Sedona(VQ)	2007	General Area	AC(Air Conditioning)	Version Information	
Carnival/Sedona(VQ)	2007	General Area	AC(Air Conditioning)	Read Fault Code	
Carnival/Sedona(VQ)	2007	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carnival/Sedona(VQ)	2007	General Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2007	General Area	AC(Air Conditioning)	Actuation Test	
Carnival/Sedona(VQ)	2007	General Area	BCM(Body Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2007	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2007	General Area	BCM(Body Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2007	General Area	BCM(Body Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2007	General Area	PSD(Power Sliding Door)	Version Information	
Carnival/Sedona(VQ)	2007	General Area	PSD(Power Sliding Door)	Read Fault Code	
Carnival/Sedona(VQ)	2007	General Area	PSD(Power Sliding Door)	Clear Fault Memory	
Carnival/Sedona(VQ)	2007	General Area	PSD(Power Sliding Door)	Read Data Stream	
Carnival/Sedona(VQ)	2007	General Area	PTG(Power Tail Gate)	Version Information	
Carnival/Sedona(VQ)	2007	General Area	PTG(Power Tail Gate)	Read Fault Code	
Carnival/Sedona(VQ)	2007	General Area	PTG(Power Tail Gate)	Clear Fault Memory	
Carnival/Sedona(VQ)	2007	General Area	PTG(Power Tail Gate)	Read Data Stream	
Carnival/Sedona(VQ)	2007	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Carnival/Sedona(VQ)	2007	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2007	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Carnival/Sedona(VQ)	2007	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Carnival/Sedona(VQ)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(VQ)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(VQ)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(VQ)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(VQ)	2007	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carnival/Sedona(VQ)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(VQ)	2007	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carnival/Sedona(VQ)	2007	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carnival/Sedona(VQ)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Carnival/Sedona(VQ)	2007	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Carnival/Sedona(VQ)	2007	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Carnival/Sedona(VQ)	2006	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(VQ)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2006	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carnival/Sedona(VQ)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	
Carnival/Sedona(VQ)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carnival/Sedona(VQ)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carnival/Sedona(VQ)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carnival/Sedona(VQ)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset
Carnival/Sedona(VQ)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Carnival/Sedona(VQ)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Carnival/Sedona(VQ)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(VQ)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Carnival/Sedona(VQ)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(VQ)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(VQ)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(VQ)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2006	General Area	AC(Air Conditioning)	Version Information	
Carnival/Sedona(VQ)	2006	General Area	AC(Air Conditioning)	Read Fault Code	
Carnival/Sedona(VQ)	2006	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carnival/Sedona(VQ)	2006	General Area	AC(Air Conditioning)	Read Data Stream	
Carnival/Sedona(VQ)	2006	General Area	AC(Air Conditioning)	Actuation Test	
Carnival/Sedona(VQ)	2006	General Area	BCM(Body Control Module)	Read Fault Code	
Carnival/Sedona(VQ)	2006	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carnival/Sedona(VQ)	2006	General Area	BCM(Body Control Module)	Read Data Stream	
Carnival/Sedona(VQ)	2006	General Area	BCM(Body Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2006	General Area	PSD(Power Sliding Door)	Version Information	
Carnival/Sedona(VQ)	2006	General Area	PSD(Power Sliding Door)	Read Fault Code	
Carnival/Sedona(VQ)	2006	General Area	PSD(Power Sliding Door)	Clear Fault Memory	
Carnival/Sedona(VQ)	2006	General Area	PSD(Power Sliding Door)	Read Data Stream	
Carnival/Sedona(VQ)	2006	General Area	PTG(Power Tail Gate)	Version Information	
Carnival/Sedona(VQ)	2006	General Area	PTG(Power Tail Gate)	Read Fault Code	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2006	General Area	PTG(Power Tail Gate)	Clear Fault Memory	
Carnival/Sedona(VQ)	2006	General Area	PTG(Power Tail Gate)	Read Data Stream	
Carnival/Sedona(VQ)	2006	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Carnival/Sedona(VQ)	2006	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Carnival/Sedona(VQ)	2006	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Carnival/Sedona(VQ)	2006	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Carnival/Sedona(VQ)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(VQ)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(VQ)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(VQ)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(VQ)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(VQ)	2006	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carnival/Sedona(VQ)	2006	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carnival/Sedona(VQ)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Carnival/Sedona(VQ)	2006	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Carnival/Sedona(VQ)	2006	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Version Information	
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(YP)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Carnival/Sedona(YP)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(YP)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carnival/Sedona(YP)	2016	General Area	ESP(Electronic Stability Program)	Version Information	
Carnival/Sedona(YP)	2016	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	ESP(Electronic Stability Program)	Actuation Test	
Carnival/Sedona(YP)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Carnival/Sedona(YP)	2016	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(YP)	2016	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Carnival/Sedona(YP)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Carnival/Sedona(YP)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Carnival/Sedona(YP)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Carnival/Sedona(YP)	2016	General Area	AC(Air Conditioning)	Version Information	
Carnival/Sedona(YP)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Carnival/Sedona(YP)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Carnival/Sedona(YP)	2016	General Area	BCM(Body Control Module)	Version Information	
Carnival/Sedona(YP)	2016	General Area	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Carnival/Sedona(YP)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Carnival/Sedona(YP)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Carnival/Sedona(YP)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Carnival/Sedona(YP)	2016	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Carnival/Sedona(YP)	2016	General Area	BCM(Body Control Module)	Special Function	Power Tailgate Mode Configuration
Carnival/Sedona(YP)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Carnival/Sedona(YP)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Carnival/Sedona(YP)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Carnival/Sedona(YP)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Carnival/Sedona(YP)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Carnival/Sedona(YP)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Carnival/Sedona(YP)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Carnival/Sedona(YP)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Version Information	
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Actuation Test	
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Carnival/Sedona(YP)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Carnival/Sedona(YP)	2016	General Area	CCS(Cruise Control System)	Version Information	
Carnival/Sedona(YP)	2016	General Area	CCS(Cruise Control System)	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	CCS(Cruise Control System)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	CCS(Cruise Control System)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	CCS(Cruise Control System)	Special Function	SCC Alignment
Carnival/Sedona(YP)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Carnival/Sedona(YP)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Carnival/Sedona(YP)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Carnival/Sedona(YP)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Carnival/Sedona(YP)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Carnival/Sedona(YP)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Carnival/Sedona(YP)	2016	General Area	SVMS(Surround View Monitor System)	Version Information	
Carnival/Sedona(YP)	2016	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Carnival/Sedona(YP)	2016	General Area	AHS(Active Hood System)	Version Information	
Carnival/Sedona(YP)	2016	General Area	AHS(Active Hood System)	Read Fault Code	
Carnival/Sedona(YP)	2016	General Area	AHS(Active Hood System)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	IMMO(Immobilizer)	Read Fault Code	

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Carnival/Sedona(YP)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(YP)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(YP)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(YP)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(YP)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carnival/Sedona(YP)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Carnival/Sedona(YP)	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Carnival/Sedona(YP)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Carnival/Sedona(YP)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Carnival/Sedona(YP)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Carnival/Sedona(YP)	2015	General Area	ESP(Electronic Stability Program)	Version Information	
Carnival/Sedona(YP)	2015	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	ESP(Electronic Stability Program)	Actuation Test	
Carnival/Sedona(YP)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Carnival/Sedona(YP)	2015	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Carnival/Sedona(YP)	2015	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Carnival/Sedona(YP)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Carnival/Sedona(YP)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Carnival/Sedona(YP)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Carnival/Sedona(YP)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Carnival/Sedona(YP)	2015	General Area	Dual Auto Temperature Control(DATC)	Version Information	
Carnival/Sedona(YP)	2015	General Area	Dual Auto Temperature Control(DATC)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	Dual Auto Temperature Control(DATC)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	Dual Auto Temperature Control(DATC)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	Dual Auto Temperature Control(DATC)	Actuation Test	
Carnival/Sedona(YP)	2015	General Area	Dual Auto Temperature Control(DATC)	Special Function	A/C Compressor Test(ECV Type)
Carnival/Sedona(YP)	2015	General Area	BCM(Body Control Module)	Version Information	
Carnival/Sedona(YP)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Carnival/Sedona(YP)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Carnival/Sedona(YP)	2015	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2015	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Version Information	
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Actuation Test	
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Carnival/Sedona(YP)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Carnival/Sedona(YP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Carnival/Sedona(YP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Carnival/Sedona(YP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Carnival/Sedona(YP)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Carnival/Sedona(YP)	2015	General Area	AHS(Active Hood System)	Version Information	
Carnival/Sedona(YP)	2015	General Area	AHS(Active Hood System)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	AHS(Active Hood System)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Carnival/Sedona(YP)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Carnival/Sedona(YP)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Carnival/Sedona(YP)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Carnival/Sedona(YP)	2015	General Area	LDWS(Lane Departure Warning System)	Version Information	
Carnival/Sedona(YP)	2015	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Carnival/Sedona(YP)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Carnival/Sedona(YP)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Carnival/Sedona(YP)	2015	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Carnival/Sedona(YP)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Carnival/Sedona(YP)	2015	General Area	PSD(Power Sliding Door)	Version Information	
Carnival/Sedona(YP)	2015	General Area	PSD(Power Sliding Door)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	PSD(Power Sliding Door)	Clear Fault Memory	

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2015	General Area	PSD(Power Sliding Door)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	PSD(Power Sliding Door)	Special Function	User Option
Carnival/Sedona(YP)	2015	General Area	PTG(Power Tail Gate)	Version Information	
Carnival/Sedona(YP)	2015	General Area	PTG(Power Tail Gate)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	PTG(Power Tail Gate)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	PTG(Power Tail Gate)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	IMMO(Immobilizer)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Carnival/Sedona(YP)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Carnival/Sedona(YP)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Carnival/Sedona(YP)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Carnival/Sedona(YP)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2015	General Area	CCS(Cruise Control System)	Version Information	
Carnival/Sedona(YP)	2015	General Area	CCS(Cruise Control System)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	CCS(Cruise Control System)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	CCS(Cruise Control System)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	CCS(Cruise Control System)	Special Function	SCC Alignment
Carnival/Sedona(YP)	2015	General Area	SVMS(Surround View Monitor System)	Version Information	
Carnival/Sedona(YP)	2015	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Carnival/Sedona(YP)	2015	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Carnival/Sedona(YP)	2015	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Carnival/Sedona(YP)	2015	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data

model	year	area	system	function	subfunction
Carnival/Sedona(YP)	2015	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Carnival/Sedona(YP)	2015	General Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Carnival/Sedona(YP)	2015	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Carstar	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Carstar	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carstar	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Carstar	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carstar	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carstar	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carstar	2002	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carstar	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carstar	2002	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carstar	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carstar	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Carstar	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carstar	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Carstar	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carstar	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carstar	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carstar	2001	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carstar	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carstar	2001	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carstar	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carstar	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Carstar	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carstar	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Carstar	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	

model	year	area	system	function	subfunction
Carstar	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carstar	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carstar	2000	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carstar	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carstar	2000	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carstar	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Carstar	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Carstar	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Carstar	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Carstar	1999	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Carstar	1999	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Carstar	1999	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Carstar	1999	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Carstar	1999	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Carstar	1999	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Carstar	1999	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Version Information	
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cee'd(ED)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Cee'd(ED)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cee'd(ED)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(ED)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(ED)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Cee'd(ED)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(ED)	2013	General Area	ESP(Electronic Stability Program)	Version Information	
Cee'd(ED)	2013	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cee'd(ED)	2013	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cee'd(ED)	2013	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cee'd(ED)	2013	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cee'd(ED)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Cee'd(ED)	2013	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cee'd(ED)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Cee'd(ED)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cee'd(ED)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(ED)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(ED)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(ED)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Cee'd(ED)	2013	General Area	AC(Air Conditioning)	Version Information	
Cee'd(ED)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Cee'd(ED)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(ED)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Cee'd(ED)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(ED)	2013	General Area	BCM(Body Control Module)	Version Information	
Cee'd(ED)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(ED)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(ED)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(ED)	2013	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cee'd(ED)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cee'd(ED)	2013	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cee'd(ED)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cee'd(ED)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Cee'd(ED)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cee'd(ED)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Cee'd(ED)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cee'd(ED)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cee'd(ED)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cee'd(ED)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cee'd(ED)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cee'd(ED)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cee'd(ED)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cee'd(ED)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cee'd(ED)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cee'd(ED)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Cee'd(ED)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(ED)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(ED)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(ED)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cee'd(ED)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(ED)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cee'd(ED)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cee'd(ED)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(ED)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Version Information	
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(ED)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Cee'd(ED)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cee'd(ED)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(ED)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(ED)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Cee'd(ED)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(ED)	2012	General Area	ESP(Electronic Stability Program)	Version Information	
Cee'd(ED)	2012	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cee'd(ED)	2012	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cee'd(ED)	2012	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cee'd(ED)	2012	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cee'd(ED)	2012	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Cee'd(ED)	2012	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cee'd(ED)	2012	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Cee'd(ED)	2012	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cee'd(ED)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(ED)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(ED)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(ED)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Cee'd(ED)	2012	General Area	AC(Air Conditioning)	Version Information	
Cee'd(ED)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Cee'd(ED)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(ED)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Cee'd(ED)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(ED)	2012	General Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Cee'd(ED)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(ED)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(ED)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(ED)	2012	General Area	EPS(Electronic Power Steering)	Version Information	
Cee'd(ED)	2012	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Cee'd(ED)	2012	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Cee'd(ED)	2012	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Cee'd(ED)	2012	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Cee'd(ED)	2012	General Area	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Cee'd(ED)	2012	General Area	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Cee'd(ED)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cee'd(ED)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cee'd(ED)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cee'd(ED)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cee'd(ED)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cee'd(ED)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cee'd(ED)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cee'd(ED)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cee'd(ED)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cee'd(ED)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Cee'd(ED)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(ED)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(ED)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(ED)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cee'd(ED)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(ED)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cee'd(ED)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cee'd(ED)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type)
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cee'd(ED)	2012	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Version Information	
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(ED)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Cee'd(ED)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cee'd(ED)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(ED)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(ED)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Cee'd(ED)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(ED)	2011	General Area	ESP(Electronic Stability Program)	Version Information	
Cee'd(ED)	2011	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cee'd(ED)	2011	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cee'd(ED)	2011	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cee'd(ED)	2011	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cee'd(ED)	2011	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Cee'd(ED)	2011	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cee'd(ED)	2011	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Cee'd(ED)	2011	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	

model	year	area	system	function	subfunction
Cee'd(ED)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(ED)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(ED)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(ED)	2011	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Cee'd(ED)	2011	General Area	AC(Air Conditioning)	Version Information	
Cee'd(ED)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Cee'd(ED)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(ED)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Cee'd(ED)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(ED)	2011	General Area	BCM(Body Control Module)	Version Information	
Cee'd(ED)	2011	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(ED)	2011	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(ED)	2011	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(ED)	2011	General Area	EPS(Electronic Power Steering)	Version Information	
Cee'd(ED)	2011	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Cee'd(ED)	2011	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Cee'd(ED)	2011	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Cee'd(ED)	2011	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Cee'd(ED)	2011	General Area	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Cee'd(ED)	2011	General Area	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Cee'd(ED)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cee'd(ED)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cee'd(ED)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cee'd(ED)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cee'd(ED)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cee'd(ED)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cee'd(ED)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cee'd(ED)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cee'd(ED)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cee'd(ED)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Cee'd(ED)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(ED)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(ED)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(ED)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cee'd(ED)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(ED)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cee'd(ED)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cee'd(ED)	2011	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type)
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cee'd(ED)	2011	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Version Information	
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(ED)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Cee'd(ED)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cee'd(ED)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(ED)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(ED)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Cee'd(ED)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(ED)	2010	General Area	ESP(Electronic Stability Program)	Version Information	
Cee'd(ED)	2010	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cee'd(ED)	2010	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cee'd(ED)	2010	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cee'd(ED)	2010	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cee'd(ED)	2010	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Cee'd(ED)	2010	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Cee'd(ED)	2010	General Area	ESP(Electronic Stability Program)	Special Function	Solenoid Valve Test
Cee'd(ED)	2010	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cee'd(ED)	2010	General Area	ESP(Electronic Stability Program)	Special Function	Hill Assist Control
Cee'd(ED)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cee'd(ED)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(ED)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(ED)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(ED)	2010	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Cee'd(ED)	2010	General Area	AC(Air Conditioning)	Version Information	
Cee'd(ED)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Cee'd(ED)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(ED)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Cee'd(ED)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(ED)	2010	General Area	BCM(Body Control Module)	Version Information	
Cee'd(ED)	2010	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(ED)	2010	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(ED)	2010	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(ED)	2010	General Area	EPS(Electronic Power Steering)	Version Information	
Cee'd(ED)	2010	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Cee'd(ED)	2010	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Cee'd(ED)	2010	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Cee'd(ED)	2010	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	

model	year	area	system	function	subfunction
Cee'd(ED)	2010	General Area	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Cee'd(ED)	2010	General Area	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Cee'd(ED)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cee'd(ED)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cee'd(ED)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cee'd(ED)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cee'd(ED)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cee'd(ED)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cee'd(ED)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cee'd(ED)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cee'd(ED)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cee'd(ED)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Cee'd(ED)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(ED)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(ED)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(ED)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cee'd(ED)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(ED)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cee'd(ED)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cee'd(ED)	2010	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type)
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cee'd(ED)	2010	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Version Information	
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Cee'd(ED)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Cee'd(ED)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cee'd(ED)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(ED)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(ED)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Cee'd(ED)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(ED)	2009	General Area	ESP(Electronic Stability Program)	Version Information	
Cee'd(ED)	2009	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cee'd(ED)	2009	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cee'd(ED)	2009	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cee'd(ED)	2009	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cee'd(ED)	2009	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Cee'd(ED)	2009	General Area	ESP(Electronic Stability Program)	Special Function	Solenoid Valve Test
Cee'd(ED)	2009	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cee'd(ED)	2009	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cee'd(ED)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(ED)	2009	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(ED)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(ED)	2009	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Cee'd(ED)	2009	General Area	AC(Air Conditioning)	Version Information	
Cee'd(ED)	2009	General Area	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Cee'd(ED)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(ED)	2009	General Area	AC(Air Conditioning)	Read Data Stream	
Cee'd(ED)	2009	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(ED)	2009	General Area	BCM(Body Control Module)	Version Information	
Cee'd(ED)	2009	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(ED)	2009	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(ED)	2009	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(ED)	2009	General Area	EPS(Electronic Power Steering)	Version Information	
Cee'd(ED)	2009	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Cee'd(ED)	2009	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Cee'd(ED)	2009	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Cee'd(ED)	2009	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Cee'd(ED)	2009	General Area	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Cee'd(ED)	2009	General Area	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Cee'd(ED)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cee'd(ED)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cee'd(ED)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cee'd(ED)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cee'd(ED)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cee'd(ED)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cee'd(ED)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cee'd(ED)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cee'd(ED)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cee'd(ED)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Cee'd(ED)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(ED)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(ED)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(ED)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cee'd(ED)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(ED)	2009	General Area	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Cee'd(ED)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Cee'd(ED)	2009	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cee'd(ED)	2009	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Version Information	
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Cee'd(ED)	2008	General Area	TCM(Transmission Control Module)	Version Information	
Cee'd(ED)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cee'd(ED)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(ED)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(ED)	2008	General Area	TCM(Transmission Control Module)	Actuation Test	
Cee'd(ED)	2008	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(ED)	2008	General Area	ESP(Electronic Stability Program)	Version Information	
Cee'd(ED)	2008	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cee'd(ED)	2008	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cee'd(ED)	2008	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cee'd(ED)	2008	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cee'd(ED)	2008	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration

model	year	area	system	function	subfunction
Cee'd(ED)	2008	General Area	ESP(Electronic Stability Program)	Special Function	Solenoid Valve Test
Cee'd(ED)	2008	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cee'd(ED)	2008	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cee'd(ED)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(ED)	2008	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(ED)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(ED)	2008	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Cee'd(ED)	2008	General Area	AC(Air Conditioning)	Version Information	
Cee'd(ED)	2008	General Area	AC(Air Conditioning)	Read Fault Code	
Cee'd(ED)	2008	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(ED)	2008	General Area	AC(Air Conditioning)	Read Data Stream	
Cee'd(ED)	2008	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(ED)	2008	General Area	BCM(Body Control Module)	Version Information	
Cee'd(ED)	2008	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(ED)	2008	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(ED)	2008	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(ED)	2008	General Area	EPS(Electronic Power Steering)	Version Information	
Cee'd(ED)	2008	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Cee'd(ED)	2008	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Cee'd(ED)	2008	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Cee'd(ED)	2008	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Cee'd(ED)	2008	General Area	EPS(Electronic Power Steering)	Special Function	ASP Calibration
Cee'd(ED)	2008	General Area	EPS(Electronic Power Steering)	Special Function	EPS Type Recognition
Cee'd(ED)	2008	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cee'd(ED)	2008	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cee'd(ED)	2008	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cee'd(ED)	2008	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cee'd(ED)	2008	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cee'd(ED)	2008	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cee'd(ED)	2008	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
Cee'd(ED)	2008	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cee'd(ED)	2008	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cee'd(ED)	2008	General Area	IMMO(Immobilizer)	Read Data Stream	
Cee'd(ED)	2008	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(ED)	2008	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(ED)	2008	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(ED)	2008	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cee'd(ED)	2008	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(ED)	2008	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cee'd(ED)	2008	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Cee'd(ED)	2008	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cee'd(ED)	2008	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Version Information	
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Cee'd(ED)	2007	General Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Cee'd(ED)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cee'd(ED)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(ED)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(ED)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
Cee'd(ED)	2007	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(ED)	2007	General Area	ESP(Electronic Stability Program)	Version Information	
Cee'd(ED)	2007	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cee'd(ED)	2007	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cee'd(ED)	2007	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cee'd(ED)	2007	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cee'd(ED)	2007	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Cee'd(ED)	2007	General Area	ESP(Electronic Stability Program)	Special Function	Solenoid Valve Test
Cee'd(ED)	2007	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cee'd(ED)	2007	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cee'd(ED)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(ED)	2007	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(ED)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(ED)	2007	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Cee'd(ED)	2007	General Area	AC(Air Conditioning)	Version Information	
Cee'd(ED)	2007	General Area	AC(Air Conditioning)	Read Fault Code	
Cee'd(ED)	2007	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(ED)	2007	General Area	AC(Air Conditioning)	Read Data Stream	
Cee'd(ED)	2007	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(ED)	2007	General Area	BCM(Body Control Module)	Version Information	
Cee'd(ED)	2007	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(ED)	2007	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(ED)	2007	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(ED)	2007	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cee'd(ED)	2007	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cee'd(ED)	2007	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Cee'd(ED)	2007	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cee'd(ED)	2007	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Cee'd(ED)	2007	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cee'd(ED)	2007	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cee'd(ED)	2007	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cee'd(ED)	2007	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cee'd(ED)	2007	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cee'd(ED)	2007	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cee'd(ED)	2007	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cee'd(ED)	2007	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cee'd(ED)	2007	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cee'd(ED)	2007	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cee'd(ED)	2007	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cee'd(ED)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
Cee'd(ED)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(ED)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(ED)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(ED)	2007	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cee'd(ED)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(ED)	2007	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cee'd(ED)	2007	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Cee'd(ED)	2007	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type)
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cee'd(ED)	2007	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Cee'd(ED)	2006	General Area	TCM(Transmission Control Module)	Version Information	
Cee'd(ED)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cee'd(ED)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(ED)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(ED)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	
Cee'd(ED)	2006	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(ED)	2006	General Area	ESP(Electronic Stability Program)	Version Information	
Cee'd(ED)	2006	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cee'd(ED)	2006	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cee'd(ED)	2006	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cee'd(ED)	2006	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cee'd(ED)	2006	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Cee'd(ED)	2006	General Area	ESP(Electronic Stability Program)	Special Function	Solenoid Valve Test
Cee'd(ED)	2006	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cee'd(ED)	2006	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cee'd(ED)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(ED)	2006	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(ED)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(ED)	2006	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Cee'd(ED)	2006	General Area	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Cee'd(ED)	2006	General Area	AC(Air Conditioning)	Read Fault Code	
Cee'd(ED)	2006	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(ED)	2006	General Area	AC(Air Conditioning)	Read Data Stream	
Cee'd(ED)	2006	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(ED)	2006	General Area	BCM(Body Control Module)	Version Information	
Cee'd(ED)	2006	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(ED)	2006	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(ED)	2006	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(ED)	2006	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cee'd(ED)	2006	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cee'd(ED)	2006	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cee'd(ED)	2006	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cee'd(ED)	2006	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Cee'd(ED)	2006	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cee'd(ED)	2006	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cee'd(ED)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
Cee'd(ED)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(ED)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(ED)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(ED)	2006	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cee'd(ED)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(ED)	2006	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cee'd(ED)	2006	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Cee'd(ED)	2006	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Special Function	Ignition Test

model	year	area	system	function	subfunction
Cee'd(ED)	2006	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Version Information	
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cee'd(JD)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Cee'd(JD)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cee'd(JD)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(JD)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(JD)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(JD)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Cee'd(JD)	2016	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding

model	year	area	system	function	subfunction
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	G-Sensor Calibration
Cee'd(JD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cee'd(JD)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cee'd(JD)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(JD)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(JD)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(JD)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cee'd(JD)	2016	General Area	AC(Air Conditioning)	Version Information	
Cee'd(JD)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Cee'd(JD)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(JD)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Cee'd(JD)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(JD)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cee'd(JD)	2016	General Area	BCM(Body Control Module)	Version Information	
Cee'd(JD)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Cee'd(JD)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cee'd(JD)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(JD)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(JD)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(JD)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Cee'd(JD)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cee'd(JD)	2016	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cee'd(JD)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cee'd(JD)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cee'd(JD)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cee'd(JD)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cee'd(JD)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cee'd(JD)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cee'd(JD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cee'd(JD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Cee'd(JD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cee'd(JD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cee'd(JD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cee'd(JD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cee'd(JD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cee'd(JD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cee'd(JD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cee'd(JD)	2016	General Area	AFS(Adaptive Front Lighting System)	Version Information	
Cee'd(JD)	2016	General Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
Cee'd(JD)	2016	General Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Cee'd(JD)	2016	General Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
Cee'd(JD)	2016	General Area	AFS(Adaptive Front Lighting System)	Actuation Test	
Cee'd(JD)	2016	General Area	AFS(Adaptive Front Lighting System)	Special Function	Calibration
Cee'd(JD)	2016	General Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Cee'd(JD)	2016	General Area	Smart Key Unit	Version Information	
Cee'd(JD)	2016	General Area	Smart Key Unit	Read Fault Code	
Cee'd(JD)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Cee'd(JD)	2016	General Area	Smart Key Unit	Read Data Stream	
Cee'd(JD)	2016	General Area	Smart Key Unit	Actuation Test	
Cee'd(JD)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cee'd(JD)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cee'd(JD)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Cee'd(JD)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cee'd(JD)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cee'd(JD)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cee'd(JD)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cee'd(JD)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cee'd(JD)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cee'd(JD)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Cee'd(JD)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	

model	year	area	system	function	subfunction
Cee'd(JD)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cee'd(JD)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cee'd(JD)	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Cee'd(JD)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Cee'd(JD)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Cee'd(JD)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Cee'd(JD)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Cee'd(JD)	2016	General Area	SPAS(Smart Parking Assist System)	Version Information	
Cee'd(JD)	2016	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Cee'd(JD)	2016	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Cee'd(JD)	2016	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Cee'd(JD)	2016	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Cee'd(JD)	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
Cee'd(JD)	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Cee'd(JD)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Cee'd(JD)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(JD)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(JD)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(JD)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(JD)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cee'd(JD)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(JD)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning

model	year	area	system	function	subfunction
Cee'd(JD)	2016	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Version Information	
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cee'd(JD)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cee'd(JD)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cee'd(JD)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cee'd(JD)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cee'd(JD)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cee'd(JD)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cee'd(JD)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cee'd(JD)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Cee'd(JD)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	G-Sensor Calibration
Cee'd(JD)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cee'd(JD)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cee'd(JD)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(JD)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(JD)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(JD)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cee'd(JD)	2015	General Area	AC(Air Conditioning)	Version Information	
Cee'd(JD)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Cee'd(JD)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(JD)	2015	General Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Cee'd(JD)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(JD)	2015	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cee'd(JD)	2015	General Area	BCM(Body Control Module)	Version Information	
Cee'd(JD)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Cee'd(JD)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cee'd(JD)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(JD)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(JD)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(JD)	2015	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cee'd(JD)	2015	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cee'd(JD)	2015	General Area	Smart Key Unit	Version Information	
Cee'd(JD)	2015	General Area	Smart Key Unit	Read Fault Code	
Cee'd(JD)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Cee'd(JD)	2015	General Area	Smart Key Unit	Read Data Stream	
Cee'd(JD)	2015	General Area	Smart Key Unit	Actuation Test	
Cee'd(JD)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cee'd(JD)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cee'd(JD)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Cee'd(JD)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cee'd(JD)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cee'd(JD)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cee'd(JD)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cee'd(JD)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cee'd(JD)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cee'd(JD)	2015	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cee'd(JD)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cee'd(JD)	2015	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cee'd(JD)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cee'd(JD)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cee'd(JD)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Cee'd(JD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cee'd(JD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cee'd(JD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cee'd(JD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cee'd(JD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cee'd(JD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cee'd(JD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cee'd(JD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cee'd(JD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cee'd(JD)	2015	General Area	AFS(Adaptive Front Lighting System)	Version Information	
Cee'd(JD)	2015	General Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
Cee'd(JD)	2015	General Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Cee'd(JD)	2015	General Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
Cee'd(JD)	2015	General Area	AFS(Adaptive Front Lighting System)	Actuation Test	
Cee'd(JD)	2015	General Area	AFS(Adaptive Front Lighting System)	Special Function	Calibration
Cee'd(JD)	2015	General Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Cee'd(JD)	2015	General Area	LDWS(Lane Departure Warning System)	Version Information	
Cee'd(JD)	2015	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Cee'd(JD)	2015	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cee'd(JD)	2015	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cee'd(JD)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Cee'd(JD)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Cee'd(JD)	2015	General Area	SPAS(Smart Parking Assist System)	Version Information	
Cee'd(JD)	2015	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Cee'd(JD)	2015	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Cee'd(JD)	2015	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Cee'd(JD)	2015	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Cee'd(JD)	2015	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Cee'd(JD)	2015	General Area	IMMO(Immobilizer)	Read Fault Code	
Cee'd(JD)	2015	General Area	IMMO(Immobilizer)	Clear Fault Memory	

model	year	area	system	function	subfunction
Cee'd(JD)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Cee'd(JD)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(JD)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(JD)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(JD)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(JD)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cee'd(JD)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(JD)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Cee'd(JD)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cee'd(JD)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(JD)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(JD)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(JD)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Cee'd(JD)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(JD)	2015	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Cee'd(JD)	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Version Information	
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)

model	year	area	system	function	subfunction
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cee'd(JD)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cee'd(JD)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cee'd(JD)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cee'd(JD)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cee'd(JD)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cee'd(JD)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cee'd(JD)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cee'd(JD)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Cee'd(JD)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	G-Sensor Calibration
Cee'd(JD)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cee'd(JD)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cee'd(JD)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(JD)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(JD)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(JD)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cee'd(JD)	2014	General Area	AC(Air Conditioning)	Version Information	
Cee'd(JD)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Cee'd(JD)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(JD)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Cee'd(JD)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(JD)	2014	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cee'd(JD)	2014	General Area	BCM(Body Control Module)	Version Information	
Cee'd(JD)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Cee'd(JD)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cee'd(JD)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(JD)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(JD)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(JD)	2014	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting

model	year	area	system	function	subfunction
Cee'd(JD)	2014	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cee'd(JD)	2014	General Area	Smart Key Unit	Version Information	
Cee'd(JD)	2014	General Area	Smart Key Unit	Read Fault Code	
Cee'd(JD)	2014	General Area	Smart Key Unit	Clear Fault Memory	
Cee'd(JD)	2014	General Area	Smart Key Unit	Read Data Stream	
Cee'd(JD)	2014	General Area	Smart Key Unit	Actuation Test	
Cee'd(JD)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cee'd(JD)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cee'd(JD)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Cee'd(JD)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cee'd(JD)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cee'd(JD)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cee'd(JD)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cee'd(JD)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cee'd(JD)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cee'd(JD)	2014	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cee'd(JD)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cee'd(JD)	2014	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cee'd(JD)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cee'd(JD)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cee'd(JD)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cee'd(JD)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cee'd(JD)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cee'd(JD)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cee'd(JD)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cee'd(JD)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cee'd(JD)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cee'd(JD)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cee'd(JD)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cee'd(JD)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Cee'd(JD)	2014	General Area	AFS(Adaptive Front Lighting System)	Version Information	
Cee'd(JD)	2014	General Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
Cee'd(JD)	2014	General Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Cee'd(JD)	2014	General Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
Cee'd(JD)	2014	General Area	AFS(Adaptive Front Lighting System)	Actuation Test	
Cee'd(JD)	2014	General Area	AFS(Adaptive Front Lighting System)	Special Function	Calibration
Cee'd(JD)	2014	General Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Cee'd(JD)	2014	General Area	LDWS(Lane Departure Warning System)	Version Information	
Cee'd(JD)	2014	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Cee'd(JD)	2014	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cee'd(JD)	2014	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cee'd(JD)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Cee'd(JD)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Cee'd(JD)	2014	General Area	SPAS(Smart Parking Assist System)	Version Information	
Cee'd(JD)	2014	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Cee'd(JD)	2014	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Cee'd(JD)	2014	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Cee'd(JD)	2014	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Cee'd(JD)	2014	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Cee'd(JD)	2014	General Area	IMMO(Immobilizer)	Read Fault Code	
Cee'd(JD)	2014	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Cee'd(JD)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Cee'd(JD)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(JD)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(JD)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(JD)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(JD)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cee'd(JD)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(JD)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Cee'd(JD)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Cee'd(JD)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(JD)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(JD)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(JD)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Cee'd(JD)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(JD)	2014	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Cee'd(JD)	2014	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Version Information	
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cee'd(JD)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cee'd(JD)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cee'd(JD)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cee'd(JD)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cee'd(JD)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cee'd(JD)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cee'd(JD)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Cee'd(JD)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Cee'd(JD)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	G-Sensor Calibration
Cee'd(JD)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cee'd(JD)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cee'd(JD)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cee'd(JD)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cee'd(JD)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cee'd(JD)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cee'd(JD)	2013	General Area	AC(Air Conditioning)	Version Information	
Cee'd(JD)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Cee'd(JD)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cee'd(JD)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Cee'd(JD)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Cee'd(JD)	2013	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cee'd(JD)	2013	General Area	BCM(Body Control Module)	Version Information	
Cee'd(JD)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Cee'd(JD)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cee'd(JD)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Cee'd(JD)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Cee'd(JD)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Cee'd(JD)	2013	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cee'd(JD)	2013	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cee'd(JD)	2013	General Area	Smart Key Unit	Version Information	
Cee'd(JD)	2013	General Area	Smart Key Unit	Read Fault Code	
Cee'd(JD)	2013	General Area	Smart Key Unit	Clear Fault Memory	
Cee'd(JD)	2013	General Area	Smart Key Unit	Read Data Stream	
Cee'd(JD)	2013	General Area	Smart Key Unit	Actuation Test	
Cee'd(JD)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cee'd(JD)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cee'd(JD)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Cee'd(JD)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cee'd(JD)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cee'd(JD)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cee'd(JD)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cee'd(JD)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cee'd(JD)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cee'd(JD)	2013	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cee'd(JD)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cee'd(JD)	2013	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cee'd(JD)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cee'd(JD)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cee'd(JD)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cee'd(JD)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cee'd(JD)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cee'd(JD)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cee'd(JD)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cee'd(JD)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cee'd(JD)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cee'd(JD)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cee'd(JD)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cee'd(JD)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cee'd(JD)	2013	General Area	AFS(Adaptive Front Lighting System)	Version Information	
Cee'd(JD)	2013	General Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
Cee'd(JD)	2013	General Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Cee'd(JD)	2013	General Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
Cee'd(JD)	2013	General Area	AFS(Adaptive Front Lighting System)	Actuation Test	
Cee'd(JD)	2013	General Area	AFS(Adaptive Front Lighting System)	Special Function	Calibration
Cee'd(JD)	2013	General Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Cee'd(JD)	2013	General Area	LDWS(Lane Departure Warning System)	Version Information	
Cee'd(JD)	2013	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	

model	year	area	system	function	subfunction
Cee'd(JD)	2013	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cee'd(JD)	2013	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cee'd(JD)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Cee'd(JD)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Cee'd(JD)	2013	General Area	SPAS(Smart Parking Assist System)	Version Information	
Cee'd(JD)	2013	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Cee'd(JD)	2013	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Cee'd(JD)	2013	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Cee'd(JD)	2013	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Cee'd(JD)	2013	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Cee'd(JD)	2013	General Area	IMMO(Immobilizer)	Read Fault Code	
Cee'd(JD)	2013	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Cee'd(JD)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Cee'd(JD)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cee'd(JD)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cee'd(JD)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cee'd(JD)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cee'd(JD)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cee'd(JD)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cee'd(JD)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Cee'd(JD)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cee'd(JD)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cee'd(JD)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cee'd(JD)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cee'd(JD)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Cee'd(JD)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cee'd(JD)	2013	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration

model	year	area	system	function	subfunction
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Cee'd(JD)	2013	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Version Information	
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cerato(LD)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Cerato(LD)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato(LD)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato(LD)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato(LD)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato(LD)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato(LD)	2009	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cerato(LD)	2009	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato(LD)	2009	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato(LD)	2009	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato(LD)	2009	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato(LD)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato(LD)	2009	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Cerato(LD)	2009	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Cerato(LD)	2009	General Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Cerato(LD)	2009	General Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Cerato(LD)	2009	General Area	SRS(Supplemental Inflatable Restraint)	Special Function	Pass.Airbag Realtime Info.

model	year	area	system	function	subfunction
Cerato(LD)	2009	General Area	AC(Air Conditioning)	Version Information	
Cerato(LD)	2009	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato(LD)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato(LD)	2009	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato(LD)	2009	General Area	AC(Air Conditioning)	Actuation Test	
Cerato(LD)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato(LD)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato(LD)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato(LD)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato(LD)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cerato(LD)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cerato(LD)	2009	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Version Information	
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cerato(LD)	2008	General Area	TCM(Transmission Control Module)	Version Information	
Cerato(LD)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato(LD)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato(LD)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Cerato(LD)	2008	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato(LD)	2008	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato(LD)	2008	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cerato(LD)	2008	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato(LD)	2008	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato(LD)	2008	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato(LD)	2008	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato(LD)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato(LD)	2008	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato(LD)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato(LD)	2008	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato(LD)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato(LD)	2008	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Cerato(LD)	2008	General Area	AC(Air Conditioning)	Version Information	
Cerato(LD)	2008	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato(LD)	2008	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato(LD)	2008	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato(LD)	2008	General Area	AC(Air Conditioning)	Actuation Test	
Cerato(LD)	2008	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato(LD)	2008	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato(LD)	2008	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato(LD)	2008	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato(LD)	2008	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cerato(LD)	2008	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Special Function	Ignition Test

model	year	area	system	function	subfunction
Cerato(LD)	2008	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Version Information	
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cerato(LD)	2007	General Area	TCM(Transmission Control Module)	Version Information	
Cerato(LD)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato(LD)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato(LD)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato(LD)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato(LD)	2007	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato(LD)	2007	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cerato(LD)	2007	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato(LD)	2007	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato(LD)	2007	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato(LD)	2007	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato(LD)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato(LD)	2007	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato(LD)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato(LD)	2007	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato(LD)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato(LD)	2007	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Cerato(LD)	2007	General Area	AC(Air Conditioning)	Version Information	
Cerato(LD)	2007	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato(LD)	2007	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato(LD)	2007	General Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Cerato(LD)	2007	General Area	AC(Air Conditioning)	Actuation Test	
Cerato(LD)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato(LD)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato(LD)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato(LD)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato(LD)	2007	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cerato(LD)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cerato(LD)	2007	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato(LD)	2006	General Area	TCM(Transmission Control Module)	Version Information	
Cerato(LD)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato(LD)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato(LD)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato(LD)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato(LD)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cerato(LD)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato(LD)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato(LD)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato(LD)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato(LD)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato(LD)	2006	General Area	SRS(Supplemental Inflatable Restraint	Version Information	

model	year	area	system	function	subfunction
Cerato(LD)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato(LD)	2006	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato(LD)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato(LD)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato(LD)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato(LD)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato(LD)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato(LD)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato(LD)	2006	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Version Information	
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cerato(LD)	2006	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato(LD)	2005	General Area	TCM(Transmission Control Module)	Version Information	
Cerato(LD)	2005	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato(LD)	2005	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato(LD)	2005	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato(LD)	2005	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato(LD)	2005	General Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
Cerato(LD)	2005	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato(LD)	2005	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato(LD)	2005	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato(LD)	2005	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato(LD)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato(LD)	2005	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato(LD)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato(LD)	2005	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato(LD)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato(LD)	2005	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato(LD)	2005	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato(LD)	2005	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato(LD)	2005	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato(LD)	2005	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato(LD)	2005	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Version Information	
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cerato(LD)	2005	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Version Information	
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cerato(LD)	2004	General Area	TCM(Transmission Control Module)	Version Information	
Cerato(LD)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato(LD)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato(LD)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato(LD)	2004	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato(LD)	2004	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cerato(LD)	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato(LD)	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato(LD)	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato(LD)	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato(LD)	2004	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato(LD)	2004	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato(LD)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato(LD)	2004	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato(LD)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato(LD)	2004	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato(LD)	2004	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato(LD)	2004	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato(LD)	2004	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato(LD)	2004	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato(LD)	2004	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Cerato(LD)	2004	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode

model	year	area	system	function	subfunction
Cerato(LD)	2003	General Area	ECM(Engine Control Module)	Version Information	
Cerato(LD)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato(LD)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato(LD)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato(LD)	2003	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato(LD)	2003	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato(LD)	2003	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato(LD)	2003	General Area	TCM(Transmission Control Module)	Version Information	
Cerato(LD)	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato(LD)	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato(LD)	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato(LD)	2003	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato(LD)	2003	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cerato(LD)	2003	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato(LD)	2003	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato(LD)	2003	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato(LD)	2003	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato(LD)	2003	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato(LD)	2003	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato(LD)	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato(LD)	2003	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato(LD)	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato(LD)	2003	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato(LD)	2003	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato(LD)	2003	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato(LD)	2003	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato(LD)	2003	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato(LD)	2003	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Version Information	
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato/Forte(TD)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Cerato/Forte(TD)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato/Forte(TD)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato/Forte(TD)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato/Forte(TD)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato/Forte(TD)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato/Forte(TD)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cerato/Forte(TD)	2013	General Area	ESP(Electronic Stability Program)	Version Information	
Cerato/Forte(TD)	2013	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cerato/Forte(TD)	2013	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cerato/Forte(TD)	2013	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cerato/Forte(TD)	2013	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cerato/Forte(TD)	2013	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Cerato/Forte(TD)	2013	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(TD)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato/Forte(TD)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato/Forte(TD)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato/Forte(TD)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Cerato/Forte(TD)	2013	General Area	AC(Air Conditioning)	Version Information	
Cerato/Forte(TD)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato/Forte(TD)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato/Forte(TD)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato/Forte(TD)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Cerato/Forte(TD)	2013	General Area	BCM(Body Control Module)	Version Information	
Cerato/Forte(TD)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Cerato/Forte(TD)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Cerato/Forte(TD)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Cerato/Forte(TD)	2013	General Area	Smart Key	Version Information	
Cerato/Forte(TD)	2013	General Area	Smart Key	Read Fault Code	
Cerato/Forte(TD)	2013	General Area	Smart Key	Clear Fault Memory	
Cerato/Forte(TD)	2013	General Area	Smart Key	Read Data Stream	
Cerato/Forte(TD)	2013	General Area	Smart Key	Actuation Test	
Cerato/Forte(TD)	2013	General Area	Smart Key	Special Function	Neutralization Mode
Cerato/Forte(TD)	2013	General Area	Smart Key	Special Function	SMK Status Information
Cerato/Forte(TD)	2013	General Area	Smart Key	Special Function	ESCL Status Information
Cerato/Forte(TD)	2013	General Area	Smart Key	Special Function	PDM Status Information
Cerato/Forte(TD)	2013	General Area	Smart Key	Special Function	FOB KEY Status Information
Cerato/Forte(TD)	2013	General Area	Smart Key	Special Function	Serial Communication Line Check
Cerato/Forte(TD)	2013	General Area	Smart Key	Special Function	Antenna Status Check
Cerato/Forte(TD)	2013	General Area	Smart Key	Special Function	Smart Key Code Saving
Cerato/Forte(TD)	2013	General Area	Smart Key	Special Function	ESCL Open Status Check
Cerato/Forte(TD)	2013	General Area	Steering	Version Information	
Cerato/Forte(TD)	2013	General Area	Steering	Read Fault Code	
Cerato/Forte(TD)	2013	General Area	Steering	Clear Fault Memory	
Cerato/Forte(TD)	2013	General Area	Steering	Read Data Stream	
Cerato/Forte(TD)	2013	General Area	Steering	Special Function	ASP Calibration

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2013	General Area	Steering	Special Function	EPS Type Recognition
Cerato/Forte(TD)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato/Forte(TD)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato/Forte(TD)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato/Forte(TD)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato/Forte(TD)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cerato/Forte(TD)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato/Forte(TD)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cerato/Forte(TD)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato/Forte(TD)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Version Information	
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato/Forte(TD)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Cerato/Forte(TD)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato/Forte(TD)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato/Forte(TD)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato/Forte(TD)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cerato/Forte(TD)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato/Forte(TD)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato/Forte(TD)	2012	General Area	ESP(Electronic Stability Program)	Version Information	
Cerato/Forte(TD)	2012	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cerato/Forte(TD)	2012	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2012	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cerato/Forte(TD)	2012	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cerato/Forte(TD)	2012	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Cerato/Forte(TD)	2012	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(TD)	2012	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato/Forte(TD)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato/Forte(TD)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato/Forte(TD)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato/Forte(TD)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Cerato/Forte(TD)	2012	General Area	AC(Air Conditioning)	Version Information	
Cerato/Forte(TD)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato/Forte(TD)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato/Forte(TD)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato/Forte(TD)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Cerato/Forte(TD)	2012	General Area	BCM(Body Control Module)	Version Information	
Cerato/Forte(TD)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Cerato/Forte(TD)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Cerato/Forte(TD)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
Cerato/Forte(TD)	2012	General Area	Smart Key	Version Information	
Cerato/Forte(TD)	2012	General Area	Smart Key	Read Fault Code	
Cerato/Forte(TD)	2012	General Area	Smart Key	Clear Fault Memory	
Cerato/Forte(TD)	2012	General Area	Smart Key	Read Data Stream	
Cerato/Forte(TD)	2012	General Area	Smart Key	Actuation Test	
Cerato/Forte(TD)	2012	General Area	Smart Key	Special Function	Neutralization Mode
Cerato/Forte(TD)	2012	General Area	Smart Key	Special Function	SMK Status Information
Cerato/Forte(TD)	2012	General Area	Smart Key	Special Function	ESCL Status Information
Cerato/Forte(TD)	2012	General Area	Smart Key	Special Function	PDM Status Information
Cerato/Forte(TD)	2012	General Area	Smart Key	Special Function	FOB KEY Status Information
Cerato/Forte(TD)	2012	General Area	Smart Key	Special Function	Serial Communication Line Check
Cerato/Forte(TD)	2012	General Area	Smart Key	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2012	General Area	Smart Key	Special Function	Smart Key Code Saving
Cerato/Forte(TD)	2012	General Area	Smart Key	Special Function	ESCL Open Status Check
Cerato/Forte(TD)	2012	General Area	Steering	Version Information	
Cerato/Forte(TD)	2012	General Area	Steering	Read Fault Code	
Cerato/Forte(TD)	2012	General Area	Steering	Clear Fault Memory	
Cerato/Forte(TD)	2012	General Area	Steering	Read Data Stream	
Cerato/Forte(TD)	2012	General Area	Steering	Special Function	ASP Calibration
Cerato/Forte(TD)	2012	General Area	Steering	Special Function	EPS Type Recognition
Cerato/Forte(TD)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato/Forte(TD)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato/Forte(TD)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato/Forte(TD)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato/Forte(TD)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cerato/Forte(TD)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato/Forte(TD)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cerato/Forte(TD)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cerato/Forte(TD)	2012	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Version Information	
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato/Forte(TD)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Cerato/Forte(TD)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato/Forte(TD)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato/Forte(TD)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato/Forte(TD)	2011	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cerato/Forte(TD)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato/Forte(TD)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato/Forte(TD)	2011	General Area	ESP(Electronic Stability Program)	Version Information	
Cerato/Forte(TD)	2011	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cerato/Forte(TD)	2011	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cerato/Forte(TD)	2011	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cerato/Forte(TD)	2011	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cerato/Forte(TD)	2011	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Cerato/Forte(TD)	2011	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(TD)	2011	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato/Forte(TD)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato/Forte(TD)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato/Forte(TD)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato/Forte(TD)	2011	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Cerato/Forte(TD)	2011	General Area	AC(Air Conditioning)	Version Information	
Cerato/Forte(TD)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato/Forte(TD)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato/Forte(TD)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato/Forte(TD)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Cerato/Forte(TD)	2011	General Area	BCM(Body Control Module)	Version Information	
Cerato/Forte(TD)	2011	General Area	BCM(Body Control Module)	Read Data Stream	
Cerato/Forte(TD)	2011	General Area	BCM(Body Control Module)	Actuation Test	
Cerato/Forte(TD)	2011	General Area	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2011	General Area	Smart Key	Version Information	
Cerato/Forte(TD)	2011	General Area	Smart Key	Read Fault Code	
Cerato/Forte(TD)	2011	General Area	Smart Key	Clear Fault Memory	
Cerato/Forte(TD)	2011	General Area	Smart Key	Read Data Stream	
Cerato/Forte(TD)	2011	General Area	Smart Key	Actuation Test	
Cerato/Forte(TD)	2011	General Area	Smart Key	Special Function	Neutralization Mode
Cerato/Forte(TD)	2011	General Area	Smart Key	Special Function	SMK Status Information
Cerato/Forte(TD)	2011	General Area	Smart Key	Special Function	ESCL Status Information
Cerato/Forte(TD)	2011	General Area	Smart Key	Special Function	PDM Status Information
Cerato/Forte(TD)	2011	General Area	Smart Key	Special Function	FOB KEY Status Information
Cerato/Forte(TD)	2011	General Area	Smart Key	Special Function	Serial Communication Line Check
Cerato/Forte(TD)	2011	General Area	Smart Key	Special Function	Antenna Status Check
Cerato/Forte(TD)	2011	General Area	Smart Key	Special Function	Smart Key Code Saving
Cerato/Forte(TD)	2011	General Area	Smart Key	Special Function	ESCL Open Status Check
Cerato/Forte(TD)	2011	General Area	Steering	Version Information	
Cerato/Forte(TD)	2011	General Area	Steering	Read Fault Code	
Cerato/Forte(TD)	2011	General Area	Steering	Clear Fault Memory	
Cerato/Forte(TD)	2011	General Area	Steering	Read Data Stream	
Cerato/Forte(TD)	2011	General Area	Steering	Special Function	ASP Calibration
Cerato/Forte(TD)	2011	General Area	Steering	Special Function	EPS Type Recognition
Cerato/Forte(TD)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato/Forte(TD)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato/Forte(TD)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato/Forte(TD)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato/Forte(TD)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cerato/Forte(TD)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato/Forte(TD)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cerato/Forte(TD)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cerato/Forte(TD)	2011	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Version Information	
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato/Forte(TD)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Cerato/Forte(TD)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato/Forte(TD)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato/Forte(TD)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato/Forte(TD)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato/Forte(TD)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato/Forte(TD)	2010	General Area	ESP(Electronic Stability Program)	Version Information	
Cerato/Forte(TD)	2010	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cerato/Forte(TD)	2010	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cerato/Forte(TD)	2010	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cerato/Forte(TD)	2010	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cerato/Forte(TD)	2010	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Cerato/Forte(TD)	2010	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(TD)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato/Forte(TD)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato/Forte(TD)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato/Forte(TD)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2010	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Cerato/Forte(TD)	2010	General Area	AC(Air Conditioning)	Version Information	
Cerato/Forte(TD)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato/Forte(TD)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato/Forte(TD)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato/Forte(TD)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Cerato/Forte(TD)	2010	General Area	BCM(Body Control Module)	Version Information	
Cerato/Forte(TD)	2010	General Area	BCM(Body Control Module)	Read Data Stream	
Cerato/Forte(TD)	2010	General Area	BCM(Body Control Module)	Actuation Test	
Cerato/Forte(TD)	2010	General Area	BCM(Body Control Module)	Special Function	User Option
Cerato/Forte(TD)	2010	General Area	Smart Key	Version Information	
Cerato/Forte(TD)	2010	General Area	Smart Key	Read Fault Code	
Cerato/Forte(TD)	2010	General Area	Smart Key	Clear Fault Memory	
Cerato/Forte(TD)	2010	General Area	Smart Key	Read Data Stream	
Cerato/Forte(TD)	2010	General Area	Smart Key	Actuation Test	
Cerato/Forte(TD)	2010	General Area	Smart Key	Special Function	Neutralization Mode
Cerato/Forte(TD)	2010	General Area	Smart Key	Special Function	SMK Status Information
Cerato/Forte(TD)	2010	General Area	Smart Key	Special Function	ESCL Status Information
Cerato/Forte(TD)	2010	General Area	Smart Key	Special Function	PDM Status Information
Cerato/Forte(TD)	2010	General Area	Smart Key	Special Function	FOB KEY Status Information
Cerato/Forte(TD)	2010	General Area	Smart Key	Special Function	Serial Communication Line Check
Cerato/Forte(TD)	2010	General Area	Smart Key	Special Function	Antenna Status Check
Cerato/Forte(TD)	2010	General Area	Smart Key	Special Function	Smart Key Code Saving
Cerato/Forte(TD)	2010	General Area	Smart Key	Special Function	ESCL Open Status Check
Cerato/Forte(TD)	2010	General Area	Steering	Version Information	
Cerato/Forte(TD)	2010	General Area	Steering	Read Fault Code	
Cerato/Forte(TD)	2010	General Area	Steering	Clear Fault Memory	
Cerato/Forte(TD)	2010	General Area	Steering	Read Data Stream	
Cerato/Forte(TD)	2010	General Area	Steering	Special Function	ASP Calibration
Cerato/Forte(TD)	2010	General Area	Steering	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2010	General Area	Steering	Special Function	EPS Type Recognition(Koup)
Cerato/Forte(TD)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato/Forte(TD)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato/Forte(TD)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato/Forte(TD)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato/Forte(TD)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cerato/Forte(TD)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato/Forte(TD)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cerato/Forte(TD)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cerato/Forte(TD)	2010	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Version Information	
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato/Forte(TD)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Cerato/Forte(TD)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato/Forte(TD)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato/Forte(TD)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato/Forte(TD)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato/Forte(TD)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2009	General Area	ESP(Electronic Stability Program)	Version Information	
Cerato/Forte(TD)	2009	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cerato/Forte(TD)	2009	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cerato/Forte(TD)	2009	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cerato/Forte(TD)	2009	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cerato/Forte(TD)	2009	General Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Cerato/Forte(TD)	2009	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(TD)	2009	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato/Forte(TD)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato/Forte(TD)	2009	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato/Forte(TD)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato/Forte(TD)	2009	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Cerato/Forte(TD)	2009	General Area	AC(Air Conditioning)	Version Information	
Cerato/Forte(TD)	2009	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato/Forte(TD)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato/Forte(TD)	2009	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato/Forte(TD)	2009	General Area	AC(Air Conditioning)	Actuation Test	
Cerato/Forte(TD)	2009	General Area	BCM(Body Control Module)	Version Information	
Cerato/Forte(TD)	2009	General Area	BCM(Body Control Module)	Read Data Stream	
Cerato/Forte(TD)	2009	General Area	BCM(Body Control Module)	Actuation Test	
Cerato/Forte(TD)	2009	General Area	BCM(Body Control Module)	Special Function	User Option
Cerato/Forte(TD)	2009	General Area	Smart Key	Read Data Stream	
Cerato/Forte(TD)	2009	General Area	Smart Key	Special Function	Smart Key Code Saving
Cerato/Forte(TD)	2009	General Area	Smart Key	Version Information	
Cerato/Forte(TD)	2009	General Area	Smart Key	Read Fault Code	
Cerato/Forte(TD)	2009	General Area	Smart Key	Clear Fault Memory	
Cerato/Forte(TD)	2009	General Area	Smart Key	Actuation Test	
Cerato/Forte(TD)	2009	General Area	Smart Key	Special Function	ESCL Open Status Check
Cerato/Forte(TD)	2009	General Area	Smart Key	Special Function	Neutralization Mode
Cerato/Forte(TD)	2009	General Area	Smart Key	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Cerato/Forte(TD)	2009	General Area	Smart Key	Special Function	ESCL Status Information
Cerato/Forte(TD)	2009	General Area	Smart Key	Special Function	PDM Status Information
Cerato/Forte(TD)	2009	General Area	Smart Key	Special Function	FOB KEY Status Information
Cerato/Forte(TD)	2009	General Area	Smart Key	Special Function	Serial Communication Line Check
Cerato/Forte(TD)	2009	General Area	Smart Key	Special Function	Antenna Status Check
Cerato/Forte(TD)	2009	General Area	Power Steering	Version Information	
Cerato/Forte(TD)	2009	General Area	Power Steering	Read Fault Code	
Cerato/Forte(TD)	2009	General Area	Power Steering	Clear Fault Memory	
Cerato/Forte(TD)	2009	General Area	Power Steering	Read Data Stream	
Cerato/Forte(TD)	2009	General Area	Power Steering	Special Function	ASP Calibration
Cerato/Forte(TD)	2009	General Area	Power Steering	Special Function	EPS Type Recognition
Cerato/Forte(TD)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato/Forte(TD)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato/Forte(TD)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato/Forte(TD)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato/Forte(TD)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cerato/Forte(TD)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato/Forte(TD)	2009	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cerato/Forte(TD)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cerato/Forte(TD)	2009	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Version Information	
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato/Forte(YD)	2017	General Area	TCM(Transmission Control Module)	Version Information	
Cerato/Forte(YD)	2017	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cerato/Forte(YD)	2017	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato/Forte(YD)	2017	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Cerato/Forte(YD)	2017	General Area	ESP(Electronic Stability Program)	Version Information	
Cerato/Forte(YD)	2017	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cerato/Forte(YD)	2017	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cerato/Forte(YD)	2017	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(YD)	2017	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Cerato/Forte(YD)	2017	General Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Cerato/Forte(YD)	2017	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Cerato/Forte(YD)	2017	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato/Forte(YD)	2017	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cerato/Forte(YD)	2017	General Area	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2017	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	AC(Air Conditioning)	Actuation Test	
Cerato/Forte(YD)	2017	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cerato/Forte(YD)	2017	General Area	BCM(Body Control Module)	Version Information	
Cerato/Forte(YD)	2017	General Area	BCM(Body Control Module)	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	BCM(Body Control Module)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	BCM(Body Control Module)	Actuation Test	
Cerato/Forte(YD)	2017	General Area	BCM(Body Control Module)	Special Function	User Option
Cerato/Forte(YD)	2017	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Cerato/Forte(YD)	2017	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cerato/Forte(YD)	2017	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cerato/Forte(YD)	2017	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cerato/Forte(YD)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Cerato/Forte(YD)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cerato/Forte(YD)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cerato/Forte(YD)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Cerato/Forte(YD)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering
Cerato/Forte(YD)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cerato/Forte(YD)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cerato/Forte(YD)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Cerato/Forte(YD)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cerato/Forte(YD)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cerato/Forte(YD)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cerato/Forte(YD)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Cerato/Forte(YD)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Cerato/Forte(YD)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Version Information	
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Actuation Test	
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Special Function	SMK Status Information
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Special Function	ESCL Enable Output Check
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cerato/Forte(YD)	2017	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cerato/Forte(YD)	2017	General Area	LDWS(Lane Departure Warning System)	Version Information	
Cerato/Forte(YD)	2017	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	LDWS(Lane Departure Warning System)	Actuation Test	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Cerato/Forte(YD)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Cerato/Forte(YD)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Cerato/Forte(YD)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Cerato/Forte(YD)	2017	General Area	Telematics Unit	Version Information	
Cerato/Forte(YD)	2017	General Area	Telematics Unit	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	Telematics Unit	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	IMMO(Immobilizer)	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato/Forte(YD)	2017	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato/Forte(YD)	2017	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato/Forte(YD)	2017	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato/Forte(YD)	2017	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato/Forte(YD)	2017	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato/Forte(YD)	2017	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cerato/Forte(YD)	2017	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato/Forte(YD)	2017	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato/Forte(YD)	2017	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato/Forte(YD)	2017	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato/Forte(YD)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Cerato/Forte(YD)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
Cerato/Forte(YD)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cerato/Forte(YD)	2017	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Version Information	
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato/Forte(YD)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Cerato/Forte(YD)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cerato/Forte(YD)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato/Forte(YD)	2016	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Cerato/Forte(YD)	2016	General Area	ESP(Electronic Stability Program)	Version Information	
Cerato/Forte(YD)	2016	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2016	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cerato/Forte(YD)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cerato/Forte(YD)	2016	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(YD)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Cerato/Forte(YD)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Cerato/Forte(YD)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Cerato/Forte(YD)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato/Forte(YD)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cerato/Forte(YD)	2016	General Area	AC(Air Conditioning)	Version Information	
Cerato/Forte(YD)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Cerato/Forte(YD)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cerato/Forte(YD)	2016	General Area	BCM(Body Control Module)	Version Information	
Cerato/Forte(YD)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Cerato/Forte(YD)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Cerato/Forte(YD)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Cerato/Forte(YD)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cerato/Forte(YD)	2016	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cerato/Forte(YD)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Cerato/Forte(YD)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cerato/Forte(YD)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cerato/Forte(YD)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Cerato/Forte(YD)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering
Cerato/Forte(YD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cerato/Forte(YD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cerato/Forte(YD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cerato/Forte(YD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Cerato/Forte(YD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cerato/Forte(YD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cerato/Forte(YD)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cerato/Forte(YD)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Cerato/Forte(YD)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Cerato/Forte(YD)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Version Information	
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Actuation Test	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Special Function	ESCL Enable Output Check
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cerato/Forte(YD)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cerato/Forte(YD)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Cerato/Forte(YD)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Cerato/Forte(YD)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Cerato/Forte(YD)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Cerato/Forte(YD)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Cerato/Forte(YD)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Cerato/Forte(YD)	2016	General Area	Telematics Unit	Version Information	
Cerato/Forte(YD)	2016	General Area	Telematics Unit	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	Telematics Unit	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato/Forte(YD)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato/Forte(YD)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato/Forte(YD)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato/Forte(YD)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato/Forte(YD)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato/Forte(YD)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cerato/Forte(YD)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato/Forte(YD)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato/Forte(YD)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato/Forte(YD)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato/Forte(YD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Cerato/Forte(YD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
Cerato/Forte(YD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cerato/Forte(YD)	2016	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Version Information	
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato/Forte(YD)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Cerato/Forte(YD)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cerato/Forte(YD)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato/Forte(YD)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato/Forte(YD)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cerato/Forte(YD)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato/Forte(YD)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Cerato/Forte(YD)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
Cerato/Forte(YD)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(YD)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Cerato/Forte(YD)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cerato/Forte(YD)	2015	General Area	AC(Air Conditioning)	Version Information	
Cerato/Forte(YD)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Cerato/Forte(YD)	2015	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cerato/Forte(YD)	2015	General Area	BCM(Body Control Module)	Version Information	
Cerato/Forte(YD)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Cerato/Forte(YD)	2015	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Cerato/Forte(YD)	2015	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cerato/Forte(YD)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Cerato/Forte(YD)	2015	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Version Information	
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Actuation Test	
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Special Function	ESCL Enable Output Check
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cerato/Forte(YD)	2015	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cerato/Forte(YD)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Cerato/Forte(YD)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cerato/Forte(YD)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cerato/Forte(YD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cerato/Forte(YD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cerato/Forte(YD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cerato/Forte(YD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Cerato/Forte(YD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cerato/Forte(YD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cerato/Forte(YD)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cerato/Forte(YD)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Cerato/Forte(YD)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Cerato/Forte(YD)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Cerato/Forte(YD)	2015	General Area	IMMO(Immobilizer)	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato/Forte(YD)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato/Forte(YD)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato/Forte(YD)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato/Forte(YD)	2015	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cerato/Forte(YD)	2015	General Area	ESP(Electronic Stability Program)	Version Information	
Cerato/Forte(YD)	2015	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cerato/Forte(YD)	2015	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cerato/Forte(YD)	2015	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cerato/Forte(YD)	2015	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cerato/Forte(YD)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Cerato/Forte(YD)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Cerato/Forte(YD)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2015	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Version Information	
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato/Forte(YD)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Cerato/Forte(YD)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato/Forte(YD)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cerato/Forte(YD)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato/Forte(YD)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato/Forte(YD)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cerato/Forte(YD)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato/Forte(YD)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato/Forte(YD)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato/Forte(YD)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato/Forte(YD)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Cerato/Forte(YD)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
Cerato/Forte(YD)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(YD)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cerato/Forte(YD)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cerato/Forte(YD)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cerato/Forte(YD)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cerato/Forte(YD)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cerato/Forte(YD)	2014	General Area	AC(Air Conditioning)	Version Information	
Cerato/Forte(YD)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato/Forte(YD)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Cerato/Forte(YD)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato/Forte(YD)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Cerato/Forte(YD)	2014	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cerato/Forte(YD)	2014	General Area	BCM(Body Control Module)	Version Information	
Cerato/Forte(YD)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Cerato/Forte(YD)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Cerato/Forte(YD)	2014	General Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2014	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Cerato/Forte(YD)	2014	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cerato/Forte(YD)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Cerato/Forte(YD)	2014	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Version Information	
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Read Fault Code	
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Clear Fault Memory	
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Read Data Stream	
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Actuation Test	
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Special Function	ESCL Enable Output Check
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cerato/Forte(YD)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cerato/Forte(YD)	2014	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cerato/Forte(YD)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cerato/Forte(YD)	2014	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cerato/Forte(YD)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cerato/Forte(YD)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Cerato/Forte(YD)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cerato/Forte(YD)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cerato/Forte(YD)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Cerato/Forte(YD)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Cerato/Forte(YD)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Cerato/Forte(YD)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Cerato/Forte(YD)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Cerato/Forte(YD)	2014	General Area	IMMO(Immobilizer)	Read Fault Code	
Cerato/Forte(YD)	2014	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Cerato/Forte(YD)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato/Forte(YD)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato/Forte(YD)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato/Forte(YD)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato/Forte(YD)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato/Forte(YD)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cerato/Forte(YD)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato/Forte(YD)	2014	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Cerato/Forte(YD)	2014	General Area	ESP(Electronic Stability Program)	Version Information	
Cerato/Forte(YD)	2014	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Cerato/Forte(YD)	2014	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Cerato/Forte(YD)	2014	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Cerato/Forte(YD)	2014	General Area	ESP(Electronic Stability Program)	Actuation Test	
Cerato/Forte(YD)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Cerato/Forte(YD)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Cerato/Forte(YD)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2014	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Version Information	
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Cerato/Forte(YD)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Cerato/Forte(YD)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Cerato/Forte(YD)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Cerato/Forte(YD)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cerato/Forte(YD)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Cerato/Forte(YD)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cerato/Forte(YD)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
Cerato/Forte(YD)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cerato/Forte(YD)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cerato/Forte(YD)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cerato/Forte(YD)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cerato/Forte(YD)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Cerato/Forte(YD)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
Cerato/Forte(YD)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Cerato/Forte(YD)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cerato/Forte(YD)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Cerato/Forte(YD)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Cerato/Forte(YD)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Cerato/Forte(YD)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Cerato/Forte(YD)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Special Function	ACU/SRSCM Variant Coding
Cerato/Forte(YD)	2013	General Area	AC(Air Conditioning)	Version Information	
Cerato/Forte(YD)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Cerato/Forte(YD)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Cerato/Forte(YD)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Cerato/Forte(YD)	2013	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cerato/Forte(YD)	2013	General Area	BCM(Body Control Module)	Version Information	
Cerato/Forte(YD)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Cerato/Forte(YD)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Cerato/Forte(YD)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Cerato/Forte(YD)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Cerato/Forte(YD)	2013	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Cerato/Forte(YD)	2013	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Cerato/Forte(YD)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Cerato/Forte(YD)	2013	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Version Information	
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Read Fault Code	
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Clear Fault Memory	
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Read Data Stream	
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Actuation Test	
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Special Function	ESCL Enable Output Check
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cerato/Forte(YD)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
Cerato/Forte(YD)	2013	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Cerato/Forte(YD)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cerato/Forte(YD)	2013	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Cerato/Forte(YD)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cerato/Forte(YD)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Cerato/Forte(YD)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cerato/Forte(YD)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cerato/Forte(YD)	2013	General Area	IMMO(Immobilizer)	Read Fault Code	
Cerato/Forte(YD)	2013	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Cerato/Forte(YD)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Cerato/Forte(YD)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cerato/Forte(YD)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Cerato/Forte(YD)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cerato/Forte(YD)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Cerato/Forte(YD)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cerato/Forte(YD)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cerato/Forte(YD)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Clarus(FE)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Clarus(FE)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Clarus(FE)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Clarus(FE)	2000	General Area	ECM(Engine Control Module)	Actuation Test	
Clarus(FE)	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Clarus(FE)	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Clarus(FE)	2000	General Area	TCM(Transmission Control Module)	Read Data Stream	
Clarus(FE)	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Clarus(FE)	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Clarus(FE)	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Clarus(FE)	2000	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Clarus(FE)	2000	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Clarus(FE)	2000	General Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Clarus(FE)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Clarus(FE)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Clarus(FE)	1999	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Clarus(FE)	1999	General Area	ECM(Engine Control Module)	Actuation Test	
Clarus(FE)	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	
Clarus(FE)	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Clarus(FE)	1999	General Area	TCM(Transmission Control Module)	Read Data Stream	
Clarus(FE)	1999	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Clarus(FE)	1999	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Clarus(FE)	1999	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Clarus(FE)	1999	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Clarus(FE)	1999	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Clarus(FE)	1999	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Clarus(FE)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Clarus(FE)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Clarus(FE)	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Clarus(FE)	1998	General Area	ECM(Engine Control Module)	Actuation Test	
Clarus(FE)	1998	General Area	TCM(Transmission Control Module)	Read Fault Code	
Clarus(FE)	1998	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Clarus(FE)	1998	General Area	TCM(Transmission Control Module)	Read Data Stream	
Clarus(FE)	1998	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Clarus(FE)	1998	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Clarus(FE)	1998	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Clarus(FE)	1998	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Clarus(FE)	1998	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Clarus(FE)	1998	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Clarus(FE)	1997	General Area	ECM(Engine Control Module)	Read Fault Code	
Clarus(FE)	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Clarus(FE)	1997	General Area	ECM(Engine Control Module)	Read Data Stream	
Clarus(FE)	1997	General Area	ECM(Engine Control Module)	Actuation Test	
Clarus(FE)	1997	General Area	TCM(Transmission Control Module)	Read Fault Code	
Clarus(FE)	1997	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Clarus(FE)	1997	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	

model	year	area	system	function	subfunction
Clarus(FE)	1997	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Clarus(FE)	1996	General Area	ECM(Engine Control Module)	Read Fault Code	
Clarus(FE)	1996	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Clarus(FE)	1996	General Area	ECM(Engine Control Module)	Read Data Stream	
Clarus(FE)	1996	General Area	ECM(Engine Control Module)	Actuation Test	
Clarus(FE)	1996	General Area	TCM(Transmission Control Module)	Read Fault Code	
Clarus(FE)	1996	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Clarus(FE)	1996	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Clarus(FE)	1996	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Clarus(FE)	1995	General Area	ECM(Engine Control Module)	Read Fault Code	
Clarus(FE)	1995	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Clarus(FE)	1995	General Area	ECM(Engine Control Module)	Read Data Stream	
Clarus(FE)	1995	General Area	ECM(Engine Control Module)	Actuation Test	
Clarus(FE)	1995	General Area	TCM(Transmission Control Module)	Read Fault Code	
Clarus(FE)	1995	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Clarus(FE)	1995	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Clarus(FE)	1995	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Credos	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Credos	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Credos	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Credos	2001	General Area	ECM(Engine Control Module)	Actuation Test	
Credos	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Credos	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Credos	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Credos	2001	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Credos	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Credos	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Credos	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Credos	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Credos	2000	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Credos	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Credos	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Credos	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Credos	2000	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Credos	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Credos	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Credos	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Credos	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Credos	1999	General Area	ECM(Engine Control Module)	Actuation Test	
Credos	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	
Credos	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Credos	1999	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Credos	1999	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Credos	1999	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Credos	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Credos	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Credos	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Credos	1998	General Area	ECM(Engine Control Module)	Actuation Test	
Credos	1998	General Area	TCM(Transmission Control Module)	Read Fault Code	
Credos	1998	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Credos	1998	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Credos	1998	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Credos	1998	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Credos	1997	General Area	ECM(Engine Control Module)	Read Fault Code	
Credos	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Credos	1997	General Area	ECM(Engine Control Module)	Read Data Stream	
Credos	1997	General Area	ECM(Engine Control Module)	Actuation Test	
Credos	1997	General Area	TCM(Transmission Control Module)	Read Fault Code	
Credos	1997	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Credos	1997	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	

model	year	area	system	function	subfunction
Credos	1997	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Credos	1997	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Credos	1996	General Area	ECM(Engine Control Module)	Read Fault Code	
Credos	1996	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Credos	1996	General Area	ECM(Engine Control Module)	Read Data Stream	
Credos	1996	General Area	ECM(Engine Control Module)	Actuation Test	
Credos	1996	General Area	TCM(Transmission Control Module)	Read Fault Code	
Credos	1996	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Credos	1996	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Credos	1996	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Credos	1996	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Credos	1995	General Area	ECM(Engine Control Module)	Read Fault Code	
Credos	1995	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Credos	1995	General Area	ECM(Engine Control Module)	Read Data Stream	
Credos	1995	General Area	ECM(Engine Control Module)	Actuation Test	
Credos	1995	General Area	TCM(Transmission Control Module)	Read Fault Code	
Credos	1995	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Credos	1995	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Credos	1995	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Credos	1995	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Elan	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Elan	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Elan	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Elan	1998	General Area	ECM(Engine Control Module)	Actuation Test	
Elan	1998	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Elan	1998	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Elan	1997	General Area	ECM(Engine Control Module)	Read Fault Code	
Elan	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Elan	1997	General Area	ECM(Engine Control Module)	Read Data Stream	
Elan	1997	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Elan	1997	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Elan	1997	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Enterprise(DB)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Enterprise(DB)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Enterprise(DB)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Enterprise(DB)	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	
Enterprise(DB)	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Enterprise(DB)	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Enterprise(DB)	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Enterprise(DB)	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Enterprise(DB)	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Enterprise(DB)	2002	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Enterprise(DB)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Enterprise(DB)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Enterprise(DB)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Enterprise(DB)	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Enterprise(DB)	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Enterprise(DB)	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Enterprise(DB)	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Enterprise(DB)	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Enterprise(DB)	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Enterprise(DB)	2001	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Enterprise(DB)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Enterprise(DB)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Enterprise(DB)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Enterprise(DB)	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Enterprise(DB)	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Enterprise(DB)	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Enterprise(DB)	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Enterprise(DB)	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	

model	year	area	system	function	subfunction
Enterprise(DB)	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Enterprise(DB)	2000	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Enterprise(DB)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Enterprise(DB)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Enterprise(DB)	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Enterprise(DB)	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	
Enterprise(DB)	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Enterprise(DB)	1999	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Enterprise(DB)	1999	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Enterprise(DB)	1999	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Enterprise(DB)	1999	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Enterprise(DB)	1999	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Enterprise(DB)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Enterprise(DB)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Enterprise(DB)	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Enterprise(DB)	1998	General Area	TCM(Transmission Control Module)	Read Fault Code	
Enterprise(DB)	1998	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Enterprise(DB)	1998	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Enterprise(DB)	1998	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Enterprise(DB)	1998	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Enterprise(DB)	1998	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Enterprise(DB)	1998	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Enterprise(DB)	1997	General Area	ECM(Engine Control Module)	Read Fault Code	
Enterprise(DB)	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Enterprise(DB)	1997	General Area	ECM(Engine Control Module)	Read Data Stream	
Enterprise(DB)	1997	General Area	TCM(Transmission Control Module)	Read Fault Code	
Enterprise(DB)	1997	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Enterprise(DB)	1997	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Enterprise(DB)	1997	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Enterprise(DB)	1997	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	

model	year	area	system	function	subfunction
Enterprise(DB)	1997	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Enterprise(DB)	1997	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Frontier	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Frontier	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Frontier	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Frontier	2004	General Area	ECM(Engine Control Module)	Actuation Test	
Frontier	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Frontier	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Frontier	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Frontier	2003	General Area	ECM(Engine Control Module)	Actuation Test	
Frontier	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Frontier	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Frontier	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Frontier	2002	General Area	ECM(Engine Control Module)	Actuation Test	
Joice(NO)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Joice(NO)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Joice(NO)	2002	General Area	ECM(Engine Control Module)	Version Information	
Joice(NO)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Joice(NO)	2002	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Joice(NO)	2002	General Area	ECM(Engine Control Module)	Actuation Test	
Joice(NO)	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	
Joice(NO)	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Joice(NO)	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Joice(NO)	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Joice(NO)	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Joice(NO)	2002	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Joice(NO)	2002	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Joice(NO)	2002	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Joice(NO)	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Joice(NO)	2002	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	

model	year	area	system	function	subfunction
Joice(NO)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Joice(NO)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Joice(NO)	2001	General Area	ECM(Engine Control Module)	Version Information	
Joice(NO)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Joice(NO)	2001	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Joice(NO)	2001	General Area	ECM(Engine Control Module)	Actuation Test	
Joice(NO)	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Joice(NO)	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Joice(NO)	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Joice(NO)	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Joice(NO)	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Joice(NO)	2001	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Joice(NO)	2001	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Joice(NO)	2001	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Joice(NO)	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Joice(NO)	2001	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Joice(NO)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Joice(NO)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Joice(NO)	2000	General Area	ECM(Engine Control Module)	Version Information	
Joice(NO)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Joice(NO)	2000	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Joice(NO)	2000	General Area	ECM(Engine Control Module)	Actuation Test	
Joice(NO)	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Joice(NO)	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Joice(NO)	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Joice(NO)	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Joice(NO)	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Joice(NO)	2000	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Joice(NO)	2000	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Joice(NO)	2000	General Area	SRS(Supplemental Inflatable Restraint	Version Information	

model	year	area	system	function	subfunction
Joice(NO)	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Joice(NO)	2000	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Joice(NO)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Joice(NO)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Joice(NO)	1999	General Area	ECM(Engine Control Module)	Version Information	
Joice(NO)	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Joice(NO)	1999	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Joice(NO)	1999	General Area	ECM(Engine Control Module)	Actuation Test	
Joice(NO)	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	
Joice(NO)	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Joice(NO)	1999	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Joice(NO)	1999	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Joice(NO)	1999	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Joice(NO)	1999	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Joice(NO)	1999	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Joice(NO)	1999	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Joice(NO)	1999	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Joice(NO)	1999	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ECM(Engine Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K2500/K2700/K3000/K3000S(PU)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
K2500/K2700/K3000/K3000S(PU)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
K2500/K2700/K3000/K3000S(PU)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
K2500/K2700/K3000/K3000S(PU)	2015	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
K2500/K2700/K3000/K3000S(PU)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2015	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	TCM(Transmission Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
K2500/K2700/K3000/K3000S(PU)	2014	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
K2500/K2700/K3000/K3000S(PU)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
K2500/K2700/K3000/K3000S(PU)	2014	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
K2500/K2700/K3000/K3000S(PU)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ECM(Engine Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	TCM(Transmission Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K2500/K2700/K3000/K3000S(PU)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2013	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
K2500/K2700/K3000/K3000S(PU)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
K2500/K2700/K3000/K3000S(PU)	2013	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
K2500/K2700/K3000/K3000S(PU)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ECM(Engine Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
K2500/K2700/K3000/K3000S(PU)	2012	General Area	TCM(Transmission Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
K2500/K2700/K3000/K3000S(PU)	2012	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ABS(Anti-Lock Brake System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K2500/K2700/K3000/K3000S(PU)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	TCM(Transmission Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ABS(Anti-Lock Brake System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
K2500/K2700/K3000/K3000S(PU)	2011	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
K2500/K2700/K3000/K3000S(PU)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	TCM(Transmission Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ABS(Anti-Lock Brake System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ECM(Engine Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
K2500/K2700/K3000/K3000S(PU)	2010	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
K2500/K2700/K3000/K3000S(PU)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	TCM(Transmission Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ABS(Anti-Lock Brake System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ECM(Engine Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
K2500/K2700/K3000/K3000S(PU)	2009	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
K2500/K2700/K3000/K3000S(PU)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2008	General Area	TCM(Transmission Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ABS(Anti-Lock Brake System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ECM(Engine Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
K2500/K2700/K3000/K3000S(PU)	2008	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2008	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2008	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2008	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2008	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2008	General Area	IMMO(Immobilizer)	Special Function	Teaching
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ECM(Engine Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	TCM(Transmission Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ECM(Engine Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
K2500/K2700/K3000/K3000S(PU)	2007	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
K2500/K2700/K3000/K3000S(PU)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	TCM(Transmission Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
K2500/K2700/K3000/K3000S(PU)	2006	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
K2500/K2700/K3000/K3000S(PU)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
K2500/K2700/K3000/K3000S(PU)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	ECM(Engine Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	TCM(Transmission Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2005	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	ABS(Anti-Lock Brake System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K2500/K2700/K3000/K3000S(PU)	2005	General Area	ECM(Engine Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2005	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2005	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2005	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2005	General Area	IMMO(Immobilizer)	Special Function	Teaching
K2500/K2700/K3000/K3000S(PU)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	ECM(Engine Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	TCM(Transmission Control Module)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	TCM(Transmission Control Module)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	ABS(Anti-Lock Brake System)	Version Information	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K2500/K2700/K3000/K3000S(PU)	2004	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
K2500/K2700/K3000/K3000S(PU)	2004	General Area	IMMO(Immobilizer)	Read Data Stream	
K2500/K2700/K3000/K3000S(PU)	2004	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
K2500/K2700/K3000/K3000S(PU)	2004	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
K2500/K2700/K3000/K3000S(PU)	2004	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
K2500/K2700/K3000/K3000S(PU)	2004	General Area	IMMO(Immobilizer)	Special Function	Teaching
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Version Information	
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Actuation Test	
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Mohave/Borrego(HM)	2017	General Area	TCM(Transmission Control Module)	Version Information	
Mohave/Borrego(HM)	2017	General Area	TCM(Transmission Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	TCM(Transmission Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2017	General Area	TCM(Transmission Control Module)	Actuation Test	
Mohave/Borrego(HM)	2017	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Mohave/Borrego(HM)	2017	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Mohave/Borrego(HM)	2017	General Area	ESC(Electronic Stability Control)	Version Information	
Mohave/Borrego(HM)	2017	General Area	ESC(Electronic Stability Control)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	ESC(Electronic Stability Control)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	ESC(Electronic Stability Control)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	ESC(Electronic Stability Control)	Actuation Test	
Mohave/Borrego(HM)	2017	General Area	ESC(Electronic Stability Control)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2017	General Area	ESC(Electronic Stability Control)	Special Function	HCU Air Bleeding Mode
Mohave/Borrego(HM)	2017	General Area	ESC(Electronic Stability Control)	Special Function	SAS Calibration(Can-Esp Only)
Mohave/Borrego(HM)	2017	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Mohave/Borrego(HM)	2017	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	AC(Air Conditioning)	Version Information	
Mohave/Borrego(HM)	2017	General Area	AC(Air Conditioning)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	AC(Air Conditioning)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	AC(Air Conditioning)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	AC(Air Conditioning)	Actuation Test	
Mohave/Borrego(HM)	2017	General Area	BCM(Body Control Module)	Version Information	
Mohave/Borrego(HM)	2017	General Area	BCM(Body Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	BCM(Body Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2017	General Area	BCM(Body Control Module)	Actuation Test	
Mohave/Borrego(HM)	2017	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Mohave/Borrego(HM)	2017	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Mohave/Borrego(HM)	2017	General Area	BCM(Body Control Module)	Special Function	User Option
Mohave/Borrego(HM)	2017	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Mohave/Borrego(HM)	2017	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Mohave/Borrego(HM)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Mohave/Borrego(HM)	2017	General Area	ECS(Electronic Control Suspension)	Version Information	
Mohave/Borrego(HM)	2017	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	ECS(Electronic Control Suspension)	Actuation Test	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2017	General Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2017	General Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2017	General Area	ECS(Electronic Control Suspension)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2017	General Area	ECS(Electronic Control Suspension)	Special Function	Halt System Control
Mohave/Borrego(HM)	2017	General Area	ECS(Electronic Control Suspension)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2017	General Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2017	General Area	Driveshaft	Version Information	
Mohave/Borrego(HM)	2017	General Area	Driveshaft	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	Driveshaft	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	Driveshaft	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	Driveshaft	Read Freeze Frame	
Mohave/Borrego(HM)	2017	General Area	Driveshaft	Actuation Test	
Mohave/Borrego(HM)	2017	General Area	Driveshaft	Special Function	Torque Coupling Control
Mohave/Borrego(HM)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Mohave/Borrego(HM)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Mohave/Borrego(HM)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	System Initialization
Mohave/Borrego(HM)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Mohave/Borrego(HM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Mohave/Borrego(HM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Mohave/Borrego(HM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Mohave/Borrego(HM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Mohave/Borrego(HM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Mohave/Borrego(HM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Actuation Test	
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Special Function	Neutralization Mode
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Special Function	SMK Status Information
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Special Function	ESCL Status Information
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Mohave/Borrego(HM)	2017	General Area	Smart Key Unit	Special Function	Antenna Status Check
Mohave/Borrego(HM)	2017	General Area	LDWS(Lane Departure Warning System)	Version Information	
Mohave/Borrego(HM)	2017	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2017	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Mohave/Borrego(HM)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Mohave/Borrego(HM)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Mohave/Borrego(HM)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Mohave/Borrego(HM)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Mohave/Borrego(HM)	2017	General Area	SVMS(Surround View Monitor System)	Version Information	
Mohave/Borrego(HM)	2017	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Mohave/Borrego(HM)	2017	General Area	SCR(Selective Catalytic Reduction)	Version Information	
Mohave/Borrego(HM)	2017	General Area	SCR(Selective Catalytic Reduction)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	SCR(Selective Catalytic Reduction)	Clear Fault Memory	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2017	General Area	SCR(Selective Catalytic Reduction)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	SCR(Selective Catalytic Reduction)	Actuation Test	
Mohave/Borrego(HM)	2017	General Area	IMMO(Immobilizer)	Read Fault Code	
Mohave/Borrego(HM)	2017	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Mohave/Borrego(HM)	2017	General Area	IMMO(Immobilizer)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Mohave/Borrego(HM)	2017	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Mohave/Borrego(HM)	2017	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Mohave/Borrego(HM)	2017	General Area	IMMO(Immobilizer)	Special Function	Teaching
Mohave/Borrego(HM)	2017	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Mohave/Borrego(HM)	2017	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Mohave/Borrego(HM)	2017	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Mohave/Borrego(HM)	2017	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Exchange)
Mohave/Borrego(HM)	2017	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Mohave/Borrego(HM)	2016	General Area	ESP(Electronic Stability Program)	Version Information	
Mohave/Borrego(HM)	2016	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Mohave/Borrego(HM)	2016	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Mohave/Borrego(HM)	2016	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	ESP(Electronic Stability Program)	Actuation Test	
Mohave/Borrego(HM)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Mohave/Borrego(HM)	2016	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Mohave/Borrego(HM)	2016	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Mohave/Borrego(HM)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Mohave/Borrego(HM)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Mohave/Borrego(HM)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	AC(Air Conditioning)	Version Information	
Mohave/Borrego(HM)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Mohave/Borrego(HM)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Mohave/Borrego(HM)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Mohave/Borrego(HM)	2016	General Area	BCM(Body Control Module)	Version Information	
Mohave/Borrego(HM)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Mohave/Borrego(HM)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Mohave/Borrego(HM)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Mohave/Borrego(HM)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Mohave/Borrego(HM)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Mohave/Borrego(HM)	2016	General Area	ECS(Electronic Control Suspension)	Version Information	
Mohave/Borrego(HM)	2016	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Mohave/Borrego(HM)	2016	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Mohave/Borrego(HM)	2016	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Mohave/Borrego(HM)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	Halt System Control
Mohave/Borrego(HM)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2016	General Area	Driveshaft	Version Information	
Mohave/Borrego(HM)	2016	General Area	Driveshaft	Read Fault Code	
Mohave/Borrego(HM)	2016	General Area	Driveshaft	Clear Fault Memory	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2016	General Area	Driveshaft	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	Driveshaft	Read Freeze Frame	
Mohave/Borrego(HM)	2016	General Area	Driveshaft	Actuation Test	
Mohave/Borrego(HM)	2016	General Area	Driveshaft	Special Function	Torque Coupling Control
Mohave/Borrego(HM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Mohave/Borrego(HM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Mohave/Borrego(HM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Mohave/Borrego(HM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Mohave/Borrego(HM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	System Initialization
Mohave/Borrego(HM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Version Information	
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Actuation Test	
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Special Function	PDM Status Information
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Mohave/Borrego(HM)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Mohave/Borrego(HM)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Mohave/Borrego(HM)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Mohave/Borrego(HM)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Mohave/Borrego(HM)	2016	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Mohave/Borrego(HM)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Version Information	
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Mohave/Borrego(HM)	2016	General Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Mohave/Borrego(HM)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Mohave/Borrego(HM)	2016	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Mohave/Borrego(HM)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Mohave/Borrego(HM)	2016	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Exchange)
Mohave/Borrego(HM)	2016	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Version Information	
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Mohave/Borrego(HM)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Mohave/Borrego(HM)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Mohave/Borrego(HM)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Mohave/Borrego(HM)	2015	General Area	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2015	General Area	ESP(Electronic Stability Program)	Version Information	
Mohave/Borrego(HM)	2015	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Mohave/Borrego(HM)	2015	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	ESP(Electronic Stability Program)	Actuation Test	
Mohave/Borrego(HM)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Mohave/Borrego(HM)	2015	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Mohave/Borrego(HM)	2015	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Mohave/Borrego(HM)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Mohave/Borrego(HM)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Mohave/Borrego(HM)	2015	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	AC(Air Conditioning)	Version Information	
Mohave/Borrego(HM)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Mohave/Borrego(HM)	2015	General Area	BCM(Body Control Module)	Version Information	
Mohave/Borrego(HM)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Mohave/Borrego(HM)	2015	General Area	Smart Key	Version Information	
Mohave/Borrego(HM)	2015	General Area	Smart Key	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	Smart Key	Clear Fault Memory	
Mohave/Borrego(HM)	2015	General Area	Smart Key	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	Smart Key	Actuation Test	
Mohave/Borrego(HM)	2015	General Area	Smart Key	Special Function	Neutralization Mode
Mohave/Borrego(HM)	2015	General Area	Smart Key	Special Function	SMK Status Information
Mohave/Borrego(HM)	2015	General Area	Smart Key	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2015	General Area	Smart Key	Special Function	PDM Status Information
Mohave/Borrego(HM)	2015	General Area	Smart Key	Special Function	FOB KEY Status Information
Mohave/Borrego(HM)	2015	General Area	Smart Key	Special Function	Serial Communication Line Check
Mohave/Borrego(HM)	2015	General Area	Smart Key	Special Function	Antenna Status Check
Mohave/Borrego(HM)	2015	General Area	Smart Key	Special Function	Smart Key Code Saving
Mohave/Borrego(HM)	2015	General Area	Smart Key	Special Function	ESCL Open Status Check
Mohave/Borrego(HM)	2015	General Area	EPS(Electronic Power Steering)	Version Information	
Mohave/Borrego(HM)	2015	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Mohave/Borrego(HM)	2015	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Non)	Version Information	
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Non)	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Non)	Clear Fault Memory	
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Non)	Read Data Stream	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Non)	Actuation Test	
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Non)	Special Function	Halt System Control
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Mohave/Borrego(HM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Mohave/Borrego(HM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Mohave/Borrego(HM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	System Initialization
Mohave/Borrego(HM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Mohave/Borrego(HM)	2015	General Area	Driveshaft	Version Information	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2015	General Area	Driveshaft	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	Driveshaft	Clear Fault Memory	
Mohave/Borrego(HM)	2015	General Area	Driveshaft	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	Driveshaft	Read Freeze Frame	
Mohave/Borrego(HM)	2015	General Area	Driveshaft	Actuation Test	
Mohave/Borrego(HM)	2015	General Area	Driveshaft	Special Function	Torque Coupling Control
Mohave/Borrego(HM)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Mohave/Borrego(HM)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Mohave/Borrego(HM)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Mohave/Borrego(HM)	2015	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Mohave/Borrego(HM)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Mohave/Borrego(HM)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Mohave/Borrego(HM)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2015	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Mando)	Version Information	
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Mando)	Read Fault Code	
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Mando)	Clear Fault Memory	
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Mando)	Read Data Stream	
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Mando)	Actuation Test	
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Mando)	Special Function	Halt System Control
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling Setup

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2015	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Mohave/Borrego(HM)	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Mohave/Borrego(HM)	2015	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Exchange)
Mohave/Borrego(HM)	2015	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Version Information	
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Mohave/Borrego(HM)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Mohave/Borrego(HM)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Mohave/Borrego(HM)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Mohave/Borrego(HM)	2014	General Area	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Mohave/Borrego(HM)	2014	General Area	ESP(Electronic Stability Program)	Version Information	
Mohave/Borrego(HM)	2014	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	ESP(Electronic Stability Program)	Actuation Test	
Mohave/Borrego(HM)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2014	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Mohave/Borrego(HM)	2014	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Mohave/Borrego(HM)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Mohave/Borrego(HM)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	AC(Air Conditioning)	Version Information	
Mohave/Borrego(HM)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Mohave/Borrego(HM)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2014	General Area	BCM(Body Control Module)	Version Information	
Mohave/Borrego(HM)	2014	General Area	Smart Key	Version Information	
Mohave/Borrego(HM)	2014	General Area	Smart Key	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	Smart Key	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	Smart Key	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	Smart Key	Actuation Test	
Mohave/Borrego(HM)	2014	General Area	Smart Key	Special Function	Neutralization Mode
Mohave/Borrego(HM)	2014	General Area	Smart Key	Special Function	SMK Status Information
Mohave/Borrego(HM)	2014	General Area	Smart Key	Special Function	ESCL Status Information
Mohave/Borrego(HM)	2014	General Area	Smart Key	Special Function	PDM Status Information
Mohave/Borrego(HM)	2014	General Area	Smart Key	Special Function	FOB KEY Status Information
Mohave/Borrego(HM)	2014	General Area	Smart Key	Special Function	Serial Communication Line Check
Mohave/Borrego(HM)	2014	General Area	Smart Key	Special Function	Antenna Status Check
Mohave/Borrego(HM)	2014	General Area	Smart Key	Special Function	Smart Key Code Saving
Mohave/Borrego(HM)	2014	General Area	Smart Key	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2014	General Area	EPS(Electronic Power Steering)	Version Information	
Mohave/Borrego(HM)	2014	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Non)	Version Information	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Non)	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Non)	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Non)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Non)	Actuation Test	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Non)	Special Function	Halt System Control
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling Setup

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Mohave/Borrego(HM)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Mohave/Borrego(HM)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	System Initialization
Mohave/Borrego(HM)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Mohave/Borrego(HM)	2014	General Area	Driveshaft	Version Information	
Mohave/Borrego(HM)	2014	General Area	Driveshaft	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	Driveshaft	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	Driveshaft	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	Driveshaft	Read Freeze Frame	
Mohave/Borrego(HM)	2014	General Area	Driveshaft	Actuation Test	
Mohave/Borrego(HM)	2014	General Area	Driveshaft	Special Function	Torque Coupling Control

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Mohave/Borrego(HM)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Mohave/Borrego(HM)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Mohave/Borrego(HM)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Mohave/Borrego(HM)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Mohave/Borrego(HM)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Mohave/Borrego(HM)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2014	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Mohave/Borrego(HM)	2014	General Area	Steering	Version Information	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2014	General Area	Steering	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	Steering	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	Steering	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	Steering	Read Freeze Frame	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Mando)	Version Information	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Mando)	Read Fault Code	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Mando)	Clear Fault Memory	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Mando)	Read Data Stream	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Mando)	Actuation Test	
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Mando)	Special Function	Halt System Control
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2014	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Mount Angle

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Mohave/Borrego(HM)	2014	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Mohave/Borrego(HM)	2014	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Exchange)
Mohave/Borrego(HM)	2014	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Version Information	
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Mohave/Borrego(HM)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Mohave/Borrego(HM)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Mohave/Borrego(HM)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Mohave/Borrego(HM)	2013	General Area	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Mohave/Borrego(HM)	2013	General Area	ESP(Electronic Stability Program)	Version Information	
Mohave/Borrego(HM)	2013	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	ESP(Electronic Stability Program)	Actuation Test	
Mohave/Borrego(HM)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Mohave/Borrego(HM)	2013	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2013	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Mohave/Borrego(HM)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Mohave/Borrego(HM)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	AC(Air Conditioning)	Version Information	
Mohave/Borrego(HM)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Mohave/Borrego(HM)	2013	General Area	BCM(Body Control Module)	Version Information	
Mohave/Borrego(HM)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2013	General Area	Smart Key	Version Information	
Mohave/Borrego(HM)	2013	General Area	Smart Key	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	Smart Key	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	Smart Key	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	Smart Key	Actuation Test	
Mohave/Borrego(HM)	2013	General Area	Smart Key	Special Function	Neutralization Mode
Mohave/Borrego(HM)	2013	General Area	Smart Key	Special Function	SMK Status Information
Mohave/Borrego(HM)	2013	General Area	Smart Key	Special Function	ESCL Status Information
Mohave/Borrego(HM)	2013	General Area	Smart Key	Special Function	PDM Status Information
Mohave/Borrego(HM)	2013	General Area	Smart Key	Special Function	FOB KEY Status Information
Mohave/Borrego(HM)	2013	General Area	Smart Key	Special Function	Serial Communication Line Check
Mohave/Borrego(HM)	2013	General Area	Smart Key	Special Function	Antenna Status Check
Mohave/Borrego(HM)	2013	General Area	Smart Key	Special Function	Smart Key Code Saving
Mohave/Borrego(HM)	2013	General Area	Smart Key	Special Function	ESCL Open Status Check
Mohave/Borrego(HM)	2013	General Area	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2013	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Non)	Version Information	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Non)	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Non)	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Non)	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Non)	Actuation Test	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Non)	Special Function	Halt System Control
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Mount Angle

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Mohave/Borrego(HM)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Mohave/Borrego(HM)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	System Initialization
Mohave/Borrego(HM)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Mohave/Borrego(HM)	2013	General Area	Driveshaft	Version Information	
Mohave/Borrego(HM)	2013	General Area	Driveshaft	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	Driveshaft	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	Driveshaft	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	Driveshaft	Read Freeze Frame	
Mohave/Borrego(HM)	2013	General Area	Driveshaft	Actuation Test	
Mohave/Borrego(HM)	2013	General Area	Driveshaft	Special Function	Torque Coupling Control
Mohave/Borrego(HM)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Mohave/Borrego(HM)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Mohave/Borrego(HM)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Mohave/Borrego(HM)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Mohave/Borrego(HM)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Mohave/Borrego(HM)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Mohave/Borrego(HM)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2013	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Mohave/Borrego(HM)	2013	General Area	Steering	Version Information	
Mohave/Borrego(HM)	2013	General Area	Steering	Read Fault Code	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2013	General Area	Steering	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	Steering	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	Steering	Read Freeze Frame	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Mando)	Version Information	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Mando)	Read Fault Code	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Mando)	Clear Fault Memory	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Mando)	Read Data Stream	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Mando)	Actuation Test	
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Mando)	Special Function	Halt System Control
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2013	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Mohave/Borrego(HM)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Mohave/Borrego(HM)	2013	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Exchange)
Mohave/Borrego(HM)	2013	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Version Information	
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Mohave/Borrego(HM)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Mohave/Borrego(HM)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Mohave/Borrego(HM)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Mohave/Borrego(HM)	2012	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Exchange)
Mohave/Borrego(HM)	2012	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Mohave/Borrego(HM)	2012	General Area	ESP(Electronic Stability Program)	Version Information	
Mohave/Borrego(HM)	2012	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2012	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	ESP(Electronic Stability Program)	Actuation Test	
Mohave/Borrego(HM)	2012	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Mohave/Borrego(HM)	2012	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Mohave/Borrego(HM)	2012	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Mohave/Borrego(HM)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Mohave/Borrego(HM)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Mohave/Borrego(HM)	2012	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	AC(Air Conditioning)	Version Information	
Mohave/Borrego(HM)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Mohave/Borrego(HM)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Mohave/Borrego(HM)	2012	General Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Mohave/Borrego(HM)	2012	General Area	Smart Key	Version Information	
Mohave/Borrego(HM)	2012	General Area	Smart Key	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	Smart Key	Clear Fault Memory	
Mohave/Borrego(HM)	2012	General Area	Smart Key	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	Smart Key	Actuation Test	
Mohave/Borrego(HM)	2012	General Area	Smart Key	Special Function	Neutralization Mode
Mohave/Borrego(HM)	2012	General Area	Smart Key	Special Function	SMK Status Information
Mohave/Borrego(HM)	2012	General Area	Smart Key	Special Function	ESCL Status Information
Mohave/Borrego(HM)	2012	General Area	Smart Key	Special Function	PDM Status Information
Mohave/Borrego(HM)	2012	General Area	Smart Key	Special Function	FOB KEY Status Information
Mohave/Borrego(HM)	2012	General Area	Smart Key	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2012	General Area	Smart Key	Special Function	Antenna Status Check
Mohave/Borrego(HM)	2012	General Area	Smart Key	Special Function	Smart Key Code Saving
Mohave/Borrego(HM)	2012	General Area	Smart Key	Special Function	ESCL Open Status Check
Mohave/Borrego(HM)	2012	General Area	EPS(Electronic Power Steering)	Version Information	
Mohave/Borrego(HM)	2012	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Mohave/Borrego(HM)	2012	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Non)	Version Information	
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Non)	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Non)	Clear Fault Memory	
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Non)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Non)	Actuation Test	
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor De-Calibration

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Non)	Special Function	Halt System Control
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Mohave/Borrego(HM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Mohave/Borrego(HM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Mohave/Borrego(HM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	System Initialization
Mohave/Borrego(HM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Mohave/Borrego(HM)	2012	General Area	Driveshaft	Version Information	
Mohave/Borrego(HM)	2012	General Area	Driveshaft	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	Driveshaft	Clear Fault Memory	
Mohave/Borrego(HM)	2012	General Area	Driveshaft	Read Data Stream	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2012	General Area	Driveshaft	Read Freeze Frame	
Mohave/Borrego(HM)	2012	General Area	Driveshaft	Actuation Test	
Mohave/Borrego(HM)	2012	General Area	Driveshaft	Special Function	Torque Coupling Control
Mohave/Borrego(HM)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Mohave/Borrego(HM)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Mohave/Borrego(HM)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Mohave/Borrego(HM)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Mohave/Borrego(HM)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Mohave/Borrego(HM)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Mohave/Borrego(HM)	2012	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Mando)	Version Information	
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Mando)	Read Fault Code	
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Mando)	Clear Fault Memory	
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Mando)	Read Data Stream	
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Mando)	Actuation Test	
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Mando)	Special Function	Halt System Control
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2012	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2012	General Area	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Version Information	
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Special Function	ECU MAPPING
Mohave/Borrego(HM)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Mohave/Borrego(HM)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Mohave/Borrego(HM)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Mohave/Borrego(HM)	2011	General Area	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Mohave/Borrego(HM)	2011	General Area	ESP(Electronic Stability Program)	Version Information	
Mohave/Borrego(HM)	2011	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Mohave/Borrego(HM)	2011	General Area	ESP(Electronic Stability Program)	Actuation Test	
Mohave/Borrego(HM)	2011	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Mohave/Borrego(HM)	2011	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Mohave/Borrego(HM)	2011	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Mohave/Borrego(HM)	2011	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Mohave/Borrego(HM)	2011	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2011	General Area	AC(Air Conditioning)	Version Information	
Mohave/Borrego(HM)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Mohave/Borrego(HM)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Mohave/Borrego(HM)	2011	General Area	BCM(Body Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2011	General Area	BCM(Body Control Module)	Version Information	
Mohave/Borrego(HM)	2011	General Area	BCM(Body Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	BCM(Body Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	BCM(Body Control Module)	Actuation Test	
Mohave/Borrego(HM)	2011	General Area	Smart Key	Version Information	
Mohave/Borrego(HM)	2011	General Area	Smart Key	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	Smart Key	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	Smart Key	Read Data Stream	
Mohave/Borrego(HM)	2011	General Area	Smart Key	Actuation Test	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2011	General Area	Smart Key	Special Function	ESCL Open Status Check
Mohave/Borrego(HM)	2011	General Area	Smart Key	Special Function	Neutralization Mode
Mohave/Borrego(HM)	2011	General Area	Smart Key	Special Function	SMK Status Information
Mohave/Borrego(HM)	2011	General Area	Smart Key	Special Function	ESCL Status Information
Mohave/Borrego(HM)	2011	General Area	Smart Key	Special Function	PDM Status Information
Mohave/Borrego(HM)	2011	General Area	Smart Key	Special Function	FOB KEY Status Information
Mohave/Borrego(HM)	2011	General Area	Smart Key	Special Function	Serial Communication Line Check
Mohave/Borrego(HM)	2011	General Area	Smart Key	Special Function	Antenna Status Check
Mohave/Borrego(HM)	2011	General Area	Smart Key	Special Function	Smart Key Code Saving
Mohave/Borrego(HM)	2011	General Area	EPS(Electronic Power Steering)	Version Information	
Mohave/Borrego(HM)	2011	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Mohave/Borrego(HM)	2011	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Mando)	Version Information	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Mando)	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Mando)	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Mando)	Read Data Stream	
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Mando)	Actuation Test	
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Mando)	Special Function	Halt System Control
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Mohave/Borrego(HM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Mohave/Borrego(HM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	System Initialization
Mohave/Borrego(HM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Mohave/Borrego(HM)	2011	General Area	Driveshaft	Version Information	
Mohave/Borrego(HM)	2011	General Area	Driveshaft	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	Driveshaft	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	Driveshaft	Read Data Stream	
Mohave/Borrego(HM)	2011	General Area	Driveshaft	Read Freeze Frame	
Mohave/Borrego(HM)	2011	General Area	Driveshaft	Actuation Test	
Mohave/Borrego(HM)	2011	General Area	Driveshaft	Special Function	Torque Coupling Control
Mohave/Borrego(HM)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Mohave/Borrego(HM)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Mohave/Borrego(HM)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Mohave/Borrego(HM)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Mohave/Borrego(HM)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Mohave/Borrego(HM)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Mohave/Borrego(HM)	2011	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2011	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Mohave/Borrego(HM)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Mohave/Borrego(HM)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Non)	Version Information	
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Non)	Read Fault Code	
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Non)	Clear Fault Memory	
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Non)	Read Data Stream	
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Non)	Actuation Test	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Non)	Special Function	Halt System Control
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2011	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Version Information	
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Special Function	ECU MAPPING
Mohave/Borrego(HM)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Mohave/Borrego(HM)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Mohave/Borrego(HM)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Mohave/Borrego(HM)	2010	General Area	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Mohave/Borrego(HM)	2010	General Area	ESP(Electronic Stability Program)	Version Information	
Mohave/Borrego(HM)	2010	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	ESP(Electronic Stability Program)	Actuation Test	
Mohave/Borrego(HM)	2010	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Mohave/Borrego(HM)	2010	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2010	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Mohave/Borrego(HM)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Mohave/Borrego(HM)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	AC(Air Conditioning)	Version Information	
Mohave/Borrego(HM)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Mohave/Borrego(HM)	2010	General Area	BCM(Body Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	BCM(Body Control Module)	Version Information	
Mohave/Borrego(HM)	2010	General Area	BCM(Body Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	BCM(Body Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2010	General Area	Smart Key	Version Information	
Mohave/Borrego(HM)	2010	General Area	Smart Key	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	Smart Key	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	Smart Key	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	Smart Key	Actuation Test	
Mohave/Borrego(HM)	2010	General Area	Smart Key	Special Function	Neutralization Mode
Mohave/Borrego(HM)	2010	General Area	Smart Key	Special Function	SMK Status Information
Mohave/Borrego(HM)	2010	General Area	Smart Key	Special Function	ESCL Status Information
Mohave/Borrego(HM)	2010	General Area	Smart Key	Special Function	PDM Status Information
Mohave/Borrego(HM)	2010	General Area	Smart Key	Special Function	FOB KEY Status Information
Mohave/Borrego(HM)	2010	General Area	Smart Key	Special Function	Serial Communication Line Check
Mohave/Borrego(HM)	2010	General Area	Smart Key	Special Function	Antenna Status Check
Mohave/Borrego(HM)	2010	General Area	Smart Key	Special Function	Smart Key Code Saving
Mohave/Borrego(HM)	2010	General Area	Smart Key	Special Function	ESCL Open Status Check
Mohave/Borrego(HM)	2010	General Area	EPS(Electronic Power Steering)	Version Information	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2010	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Mando)	Version Information	
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Mando)	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Mando)	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Mando)	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Mando)	Actuation Test	
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Mando)	Special Function	Halt System Control
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Mount Angle

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Mohave/Borrego(HM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Mohave/Borrego(HM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	System Initialization
Mohave/Borrego(HM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Mohave/Borrego(HM)	2010	General Area	Driveshaft	Version Information	
Mohave/Borrego(HM)	2010	General Area	Driveshaft	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	Driveshaft	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	Driveshaft	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	Driveshaft	Read Freeze Frame	
Mohave/Borrego(HM)	2010	General Area	Driveshaft	Actuation Test	
Mohave/Borrego(HM)	2010	General Area	Driveshaft	Special Function	Torque Coupling Control
Mohave/Borrego(HM)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Mohave/Borrego(HM)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Mohave/Borrego(HM)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Mohave/Borrego(HM)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Mohave/Borrego(HM)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Mohave/Borrego(HM)	2010	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2010	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Mohave/Borrego(HM)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Mohave/Borrego(HM)	2010	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Non)	Version Information	
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Non)	Read Fault Code	
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Non)	Clear Fault Memory	
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Non)	Read Data Stream	
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Non)	Actuation Test	
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Non)	Special Function	Halt System Control
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2010	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Version Information	
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Special Function	ECU MAPPING
Mohave/Borrego(HM)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Mohave/Borrego(HM)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Mohave/Borrego(HM)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Mohave/Borrego(HM)	2009	General Area	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Mohave/Borrego(HM)	2009	General Area	ESP(Electronic Stability Program)	Version Information	
Mohave/Borrego(HM)	2009	General Area	ESP(Electronic Stability Program)	Read Fault Code	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2009	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Mohave/Borrego(HM)	2009	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	ESP(Electronic Stability Program)	Actuation Test	
Mohave/Borrego(HM)	2009	General Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Mohave/Borrego(HM)	2009	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Mohave/Borrego(HM)	2009	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset
Mohave/Borrego(HM)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Mohave/Borrego(HM)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Mohave/Borrego(HM)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Mohave/Borrego(HM)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	AC(Air Conditioning)	Version Information	
Mohave/Borrego(HM)	2009	General Area	AC(Air Conditioning)	Read Fault Code	
Mohave/Borrego(HM)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Mohave/Borrego(HM)	2009	General Area	AC(Air Conditioning)	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2009	General Area	BCM(Body Control Module)	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	BCM(Body Control Module)	Version Information	
Mohave/Borrego(HM)	2009	General Area	BCM(Body Control Module)	Read Fault Code	
Mohave/Borrego(HM)	2009	General Area	BCM(Body Control Module)	Clear Fault Memory	
Mohave/Borrego(HM)	2009	General Area	BCM(Body Control Module)	Actuation Test	
Mohave/Borrego(HM)	2009	General Area	Smart Key	Version Information	
Mohave/Borrego(HM)	2009	General Area	Smart Key	Read Fault Code	
Mohave/Borrego(HM)	2009	General Area	Smart Key	Clear Fault Memory	
Mohave/Borrego(HM)	2009	General Area	Smart Key	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	Smart Key	Actuation Test	
Mohave/Borrego(HM)	2009	General Area	Smart Key	Special Function	Neutralization Mode
Mohave/Borrego(HM)	2009	General Area	Smart Key	Special Function	SMK Status Information
Mohave/Borrego(HM)	2009	General Area	Smart Key	Special Function	ESCL Status Information
Mohave/Borrego(HM)	2009	General Area	Smart Key	Special Function	PDM Status Information
Mohave/Borrego(HM)	2009	General Area	Smart Key	Special Function	FOB KEY Status Information

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2009	General Area	Smart Key	Special Function	Serial Communication Line Check
Mohave/Borrego(HM)	2009	General Area	Smart Key	Special Function	Antenna Status Check
Mohave/Borrego(HM)	2009	General Area	Smart Key	Special Function	Smart Key Code Saving
Mohave/Borrego(HM)	2009	General Area	Smart Key	Special Function	ESCL Open Status Check
Mohave/Borrego(HM)	2009	General Area	EPS(Electronic Power Steering)	Version Information	
Mohave/Borrego(HM)	2009	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Mohave/Borrego(HM)	2009	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Mohave/Borrego(HM)	2009	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Mando)	Version Information	
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Mando)	Read Fault Code	
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Mando)	Clear Fault Memory	
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Mando)	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Mando)	Actuation Test	
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Calibration

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Mando)	Special Function	Halt System Control
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Mando)	Special Function	Air Filling Setup
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Mando)	Special Function	Height Sensor Mount Angle
Mohave/Borrego(HM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Mohave/Borrego(HM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Mohave/Borrego(HM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Mohave/Borrego(HM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Mohave/Borrego(HM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	System Initialization
Mohave/Borrego(HM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Mohave/Borrego(HM)	2009	General Area	Driveshaft	Version Information	
Mohave/Borrego(HM)	2009	General Area	Driveshaft	Read Fault Code	
Mohave/Borrego(HM)	2009	General Area	Driveshaft	Clear Fault Memory	

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2009	General Area	Driveshaft	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	Driveshaft	Read Freeze Frame	
Mohave/Borrego(HM)	2009	General Area	Driveshaft	Actuation Test	
Mohave/Borrego(HM)	2009	General Area	Driveshaft	Special Function	Torque Coupling Control
Mohave/Borrego(HM)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Mohave/Borrego(HM)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Mohave/Borrego(HM)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Mohave/Borrego(HM)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
Mohave/Borrego(HM)	2009	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting

model	year	area	system	function	subfunction
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Mohave/Borrego(HM)	2009	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Mohave/Borrego(HM)	2009	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Mohave/Borrego(HM)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Mohave/Borrego(HM)	2009	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Non)	Version Information	
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Non)	Read Fault Code	
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Non)	Clear Fault Memory	
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Non)	Read Data Stream	
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Non)	Actuation Test	
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Calibration
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor De-Calibration
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling/Venting
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Non)	Special Function	Halt System Control
Mohave/Borrego(HM)	2009	General Area	Electronic Control Suspension(Non)	Special Function	Air Filling Setup

model	year	area	system	function	subfunction
Mohave/Borrogo(HM)	2009	General Area	Electronic Control Suspension(Non)	Special Function	Height Sensor Mount Angle
Niro(DE HEV)	2016	General Area	ECM(Engine Control Module)	Version Information	
Niro(DE HEV)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Niro(DE HEV)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Niro(DE HEV)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Niro(DE HEV)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Niro(DE HEV)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Niro(DE HEV)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Niro(DE HEV)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Niro(DE HEV)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Niro(DE HEV)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Niro(DE HEV)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Niro(DE HEV)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Niro(DE HEV)	2016	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Niro(DE HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Niro(DE HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Niro(DE HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Niro(DE HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Niro(DE HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Niro(DE HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Niro(DE HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Niro(DE HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Niro(DE HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel
Niro(DE HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Niro(DE HEV)	2016	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	

model	year	area	system	function	subfunction
Niro(DE HEV)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Niro(DE HEV)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Niro(DE HEV)	2016	General Area	AC(Air Conditioning)	Version Information	
Niro(DE HEV)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Niro(DE HEV)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Niro(DE HEV)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Niro(DE HEV)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Niro(DE HEV)	2016	General Area	BCM(Body Control Module)	Version Information	
Niro(DE HEV)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Niro(DE HEV)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Niro(DE HEV)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Niro(DE HEV)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Niro(DE HEV)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Niro(DE HEV)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Niro(DE HEV)	2016	General Area	BCM(Body Control Module)	Special Function	Wheel Sensor ID Writing
Niro(DE HEV)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Niro(DE HEV)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Niro(DE HEV)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Niro(DE HEV)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	SAS Calibration(Can-Esp Only)
Niro(DE HEV)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Niro(DE HEV)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Niro(DE HEV)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Niro(DE HEV)	2016	General Area	Smart Key Unit	Version Information	
Niro(DE HEV)	2016	General Area	Smart Key Unit	Read Fault Code	
Niro(DE HEV)	2016	General Area	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Niro(DE HEV)	2016	General Area	Smart Key Unit	Read Data Stream	
Niro(DE HEV)	2016	General Area	Smart Key Unit	Actuation Test	
Niro(DE HEV)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Niro(DE HEV)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Niro(DE HEV)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Niro(DE HEV)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Niro(DE HEV)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Niro(DE HEV)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Niro(DE HEV)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Niro(DE HEV)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Niro(DE HEV)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Niro(DE HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Niro(DE HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Niro(DE HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Niro(DE HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Niro(DE HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Niro(DE HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Niro(DE HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Niro(DE HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Niro(DE HEV)	2016	General Area	PGS(Parking Guide System)	Version Information	
Niro(DE HEV)	2016	General Area	PGS(Parking Guide System)	Read Fault Code	
Niro(DE HEV)	2016	General Area	PGS(Parking Guide System)	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	PGS(Parking Guide System)	Read Data Stream	
Niro(DE HEV)	2016	General Area	PGS(Parking Guide System)	Special Function	Camera Image Correction
Niro(DE HEV)	2016	General Area	AAF(Active Air Flap)	Version Information	
Niro(DE HEV)	2016	General Area	AAF(Active Air Flap)	Read Fault Code	
Niro(DE HEV)	2016	General Area	AAF(Active Air Flap)	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	AAF(Active Air Flap)	Read Data Stream	
Niro(DE HEV)	2016	General Area	AAF(Active Air Flap)	Actuation Test	

model	year	area	system	function	subfunction
Niro(DE HEV)	2016	General Area	Amplifier	Version Information	
Niro(DE HEV)	2016	General Area	Amplifier	Special Function	AMP Operation Test
Niro(DE HEV)	2016	General Area	HEV Battery System	Version Information	
Niro(DE HEV)	2016	General Area	HEV Battery System	Read Fault Code	
Niro(DE HEV)	2016	General Area	HEV Battery System	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	HEV Battery System	Read Data Stream	
Niro(DE HEV)	2016	General Area	HEV Battery System	Actuation Test	
Niro(DE HEV)	2016	General Area	HEV Battery System	Special Function	SOC Calibration
Niro(DE HEV)	2016	General Area	HEV Battery System	Special Function	Isolation Breakdown Detection Function
Niro(DE HEV)	2016	General Area	HEV Motor Control System	Version Information	
Niro(DE HEV)	2016	General Area	HEV Motor Control System	Read Fault Code	
Niro(DE HEV)	2016	General Area	HEV Motor Control System	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	HEV Motor Control System	Read Data Stream	
Niro(DE HEV)	2016	General Area	HEV Motor Control System	Special Function	Electric Water Pump Control
Niro(DE HEV)	2016	General Area	HEV Motor Control System	Special Function	Motor HSG Resolver Calibration
Niro(DE HEV)	2016	General Area	VESS(Virtual Engine Sound System)	Version Information	
Niro(DE HEV)	2016	General Area	VESS(Virtual Engine Sound System)	Read Fault Code	
Niro(DE HEV)	2016	General Area	VESS(Virtual Engine Sound System)	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	VESS(Virtual Engine Sound System)	Actuation Test	
Niro(DE HEV)	2016	General Area	Intergrated Gateway Power Control Module	Version Information	
Niro(DE HEV)	2016	General Area	Intergrated Gateway Power Control Module	Read Fault Code	
Niro(DE HEV)	2016	General Area	Intergrated Gateway Power Control Module	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	Intergrated Gateway Power Control Module	Read Data Stream	
Niro(DE HEV)	2016	General Area	Intergrated Gateway Power Control Module	Actuation Test	
Niro(DE HEV)	2016	General Area	Intergrated Gateway Power Control Module	Special Function	User Option
Niro(DE HEV)	2016	General Area	Intergrated Gateway Power Control Module	Special Function	Erase Network Configuration
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Version Information	
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Read Fault Code	
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Clear Fault Memory	

model	year	area	system	function	subfunction
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Read Data Stream	
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Actuation Test	
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Special Function	Stabilization Of The Engine Clutch Hardware Transfer Torque
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Special Function	Engine Test Off
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Special Function	Engine Test On
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Special Function	Compression Pressure Test Of Engine Cylinder
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Special Function	Engine Clutch/Motor Resolver Adaptation
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Special Function	HCU Variant Coding
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Special Function	Initialization Of The Engine Clutch Inspection Line Learning And Diagnostic Information
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Special Function	LDC Activation Test
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Special Function	Removal Of Air From Engine Clutch Hydraulic Pressure Line
Niro(DE HEV)	2016	General Area	HEV Control System(+LDC)	Special Function	Stabilization Of Hydraulic Oil Flow Of Engine Clutch
Niro(DE HEV)	2016	General Area	Immobilizer	Read Fault Code	
Niro(DE HEV)	2016	General Area	Immobilizer	Clear Fault Memory	
Niro(DE HEV)	2016	General Area	Immobilizer	Read Data Stream	
Niro(DE HEV)	2016	General Area	Immobilizer	Special Function	Password Teaching/Changing
Niro(DE HEV)	2016	General Area	Immobilizer	Special Function	EMS Neutral Mode
Niro(DE HEV)	2016	General Area	Immobilizer	Special Function	Limp Home Mode
Niro(DE HEV)	2016	General Area	Immobilizer	Special Function	Teaching
Niro(DE HEV)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Niro(DE HEV)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Opirus(GH)	2010	General Area	ECM(Engine Control Module)	Version Information	
Opirus(GH)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Opirus(GH)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Opirus(GH)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Opirus(GH)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Opirus(GH)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Opirus(GH)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Opirus(GH)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Opirus(GH)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Opirus(GH)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Opirus(GH)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Opirus(GH)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Opirus(GH)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Opirus(GH)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Opirus(GH)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Opirus(GH)	2010	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Opirus(GH)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Opirus(GH)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Opirus(GH)	2010	General Area	ESP(Electronic Stability Program)	Version Information	
Opirus(GH)	2010	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Opirus(GH)	2010	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Opirus(GH)	2010	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Opirus(GH)	2010	General Area	ESP(Electronic Stability Program)	Actuation Test	
Opirus(GH)	2010	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Opirus(GH)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Opirus(GH)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Opirus(GH)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Opirus(GH)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Opirus(GH)	2010	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Opirus(GH)	2010	General Area	AC(Air Conditioning)	Version Information	
Opirus(GH)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Opirus(GH)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Opirus(GH)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Opirus(GH)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Opirus(GH)	2010	General Area	BCM(Body Control Module)	Read Fault Code	
Opirus(GH)	2010	General Area	BCM(Body Control Module)	Clear Fault Memory	
Opirus(GH)	2010	General Area	BCM(Body Control Module)	Read Data Stream	
Opirus(GH)	2010	General Area	BCM(Body Control Module)	Actuation Test	
Opirus(GH)	2010	General Area	BCM(Body Control Module)	Version Information	
Opirus(GH)	2010	General Area	Smart Key	Version Information	
Opirus(GH)	2010	General Area	Smart Key	Read Fault Code	
Opirus(GH)	2010	General Area	Smart Key	Clear Fault Memory	
Opirus(GH)	2010	General Area	Smart Key	Read Data Stream	
Opirus(GH)	2010	General Area	Smart Key	Actuation Test	
Opirus(GH)	2010	General Area	Smart Key	Special Function	ESCL Open Status Check
Opirus(GH)	2010	General Area	Smart Key	Special Function	Smart Key Code Saving
Opirus(GH)	2010	General Area	Smart Key	Special Function	ESCL Status Information
Opirus(GH)	2010	General Area	Smart Key	Special Function	FOB KEY Status Information
Opirus(GH)	2010	General Area	Smart Key	Special Function	Neutralization Mode
Opirus(GH)	2010	General Area	Smart Key	Special Function	PDM Status Information
Opirus(GH)	2010	General Area	Smart Key	Special Function	Serial Communication Line Check
Opirus(GH)	2010	General Area	Smart Key	Special Function	SMK Status Information
Opirus(GH)	2010	General Area	Smart Key	Special Function	Antenna Status Check
Opirus(GH)	2010	General Area	EPS(Electronic Power Steering)	Version Information	
Opirus(GH)	2010	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Opirus(GH)	2010	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Opirus(GH)	2010	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Opirus(GH)	2010	General Area	ECS(Electronic Control Suspension)	Version Information	
Opirus(GH)	2010	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Opirus(GH)	2010	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Opirus(GH)	2010	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Opirus(GH)	2010	General Area	ECS(Electronic Control Suspension)	Actuation Test	

model	year	area	system	function	subfunction
Opirus(GH)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Opirus(GH)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Opirus(GH)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Opirus(GH)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Opirus(GH)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Opirus(GH)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Opirus(GH)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Opirus(GH)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Opirus(GH)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Opirus(GH)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Opirus(GH)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Opirus(GH)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Opirus(GH)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Opirus(GH)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Opirus(GH)	2010	General Area	Smart Key	Special Function	ECM Neutralization
Opirus(GH)	2009	General Area	ECM(Engine Control Module)	Version Information	
Opirus(GH)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Opirus(GH)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Opirus(GH)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Opirus(GH)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Opirus(GH)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Opirus(GH)	2009	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Opirus(GH)	2009	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Opirus(GH)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Opirus(GH)	2009	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Opirus(GH)	2009	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Opirus(GH)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Opirus(GH)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Opirus(GH)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Opirus(GH)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Opirus(GH)	2009	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Opirus(GH)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Opirus(GH)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Opirus(GH)	2009	General Area	ESP(Electronic Stability Program)	Version Information	
Opirus(GH)	2009	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Opirus(GH)	2009	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Opirus(GH)	2009	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Opirus(GH)	2009	General Area	ESP(Electronic Stability Program)	Actuation Test	
Opirus(GH)	2009	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Opirus(GH)	2009	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Opirus(GH)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Opirus(GH)	2009	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Opirus(GH)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Opirus(GH)	2009	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Opirus(GH)	2009	General Area	AC(Air Conditioning)	Version Information	
Opirus(GH)	2009	General Area	AC(Air Conditioning)	Read Fault Code	
Opirus(GH)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Opirus(GH)	2009	General Area	AC(Air Conditioning)	Read Data Stream	
Opirus(GH)	2009	General Area	AC(Air Conditioning)	Actuation Test	
Opirus(GH)	2009	General Area	BCM(Body Control Module)	Read Fault Code	
Opirus(GH)	2009	General Area	BCM(Body Control Module)	Clear Fault Memory	
Opirus(GH)	2009	General Area	BCM(Body Control Module)	Read Data Stream	
Opirus(GH)	2009	General Area	BCM(Body Control Module)	Actuation Test	
Opirus(GH)	2009	General Area	BCM(Body Control Module)	Version Information	
Opirus(GH)	2009	General Area	Smart Key	Version Information	
Opirus(GH)	2009	General Area	Smart Key	Read Fault Code	
Opirus(GH)	2009	General Area	Smart Key	Clear Fault Memory	
Opirus(GH)	2009	General Area	Smart Key	Read Data Stream	
Opirus(GH)	2009	General Area	Smart Key	Actuation Test	
Opirus(GH)	2009	General Area	Smart Key	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Opirus(GH)	2009	General Area	Smart Key	Special Function	Smart Key Code Saving
Opirus(GH)	2009	General Area	Smart Key	Special Function	ESCL Status Information
Opirus(GH)	2009	General Area	Smart Key	Special Function	FOB KEY Status Information
Opirus(GH)	2009	General Area	Smart Key	Special Function	Neutralization Mode
Opirus(GH)	2009	General Area	Smart Key	Special Function	PDM Status Information
Opirus(GH)	2009	General Area	Smart Key	Special Function	Serial Communication Line Check
Opirus(GH)	2009	General Area	Smart Key	Special Function	SMK Status Information
Opirus(GH)	2009	General Area	Smart Key	Special Function	Antenna Status Check
Opirus(GH)	2009	General Area	EPS(Electronic Power Steering)	Version Information	
Opirus(GH)	2009	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Opirus(GH)	2009	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Opirus(GH)	2009	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Opirus(GH)	2009	General Area	ECS(Electronic Control Suspension)	Version Information	
Opirus(GH)	2009	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Opirus(GH)	2009	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Opirus(GH)	2009	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Opirus(GH)	2009	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Opirus(GH)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Opirus(GH)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Opirus(GH)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Opirus(GH)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Opirus(GH)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Opirus(GH)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Opirus(GH)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Opirus(GH)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Opirus(GH)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Opirus(GH)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Opirus(GH)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Opirus(GH)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
Opirus(GH)	2009	General Area	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Opirus(GH)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Opirus(GH)	2009	General Area	Smart Key	Special Function	ECM Neutralization
Opirus(GH)	2008	General Area	ECM(Engine Control Module)	Version Information	
Opirus(GH)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
Opirus(GH)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Opirus(GH)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
Opirus(GH)	2008	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Opirus(GH)	2008	General Area	ECM(Engine Control Module)	Actuation Test	
Opirus(GH)	2008	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Opirus(GH)	2008	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Opirus(GH)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Opirus(GH)	2008	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Opirus(GH)	2008	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Opirus(GH)	2008	General Area	TCM(Transmission Control Module)	Version Information	
Opirus(GH)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
Opirus(GH)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Opirus(GH)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	
Opirus(GH)	2008	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Opirus(GH)	2008	General Area	TCM(Transmission Control Module)	Actuation Test	
Opirus(GH)	2008	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Opirus(GH)	2008	General Area	ESP(Electronic Stability Program)	Version Information	
Opirus(GH)	2008	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Opirus(GH)	2008	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Opirus(GH)	2008	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Opirus(GH)	2008	General Area	ESP(Electronic Stability Program)	Actuation Test	
Opirus(GH)	2008	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Opirus(GH)	2008	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Opirus(GH)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Opirus(GH)	2008	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Opirus(GH)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
Opirus(GH)	2008	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Opirus(GH)	2008	General Area	AC(Air Conditioning)	Version Information	
Opirus(GH)	2008	General Area	AC(Air Conditioning)	Read Fault Code	
Opirus(GH)	2008	General Area	AC(Air Conditioning)	Clear Fault Memory	
Opirus(GH)	2008	General Area	AC(Air Conditioning)	Read Data Stream	
Opirus(GH)	2008	General Area	AC(Air Conditioning)	Actuation Test	
Opirus(GH)	2008	General Area	BCM(Body Control Module)	Read Fault Code	
Opirus(GH)	2008	General Area	BCM(Body Control Module)	Clear Fault Memory	
Opirus(GH)	2008	General Area	BCM(Body Control Module)	Read Data Stream	
Opirus(GH)	2008	General Area	BCM(Body Control Module)	Actuation Test	
Opirus(GH)	2008	General Area	BCM(Body Control Module)	Version Information	
Opirus(GH)	2008	General Area	Smart Key	Version Information	
Opirus(GH)	2008	General Area	Smart Key	Read Fault Code	
Opirus(GH)	2008	General Area	Smart Key	Clear Fault Memory	
Opirus(GH)	2008	General Area	Smart Key	Read Data Stream	
Opirus(GH)	2008	General Area	Smart Key	Actuation Test	
Opirus(GH)	2008	General Area	Smart Key	Special Function	ECM Neutralization
Opirus(GH)	2008	General Area	EPS(Electronic Power Steering)	Version Information	
Opirus(GH)	2008	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Opirus(GH)	2008	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Opirus(GH)	2008	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Opirus(GH)	2008	General Area	ECS(Electronic Control Suspension)	Version Information	
Opirus(GH)	2008	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Opirus(GH)	2008	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Opirus(GH)	2008	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Opirus(GH)	2008	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Opirus(GH)	2008	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Opirus(GH)	2008	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Opirus(GH)	2008	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Opirus(GH)	2008	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
Opirus(GH)	2008	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Opirus(GH)	2008	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Opirus(GH)	2008	General Area	IMMO(Immobilizer)	Read Data Stream	
Opirus(GH)	2008	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Opirus(GH)	2008	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Opirus(GH)	2008	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Opirus(GH)	2008	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Opirus(GH)	2008	General Area	IMMO(Immobilizer)	Special Function	Teaching
Opirus(GH)	2008	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Opirus(GH)	2008	General Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Opirus(GH)	2007	General Area	ECM(Engine Control Module)	Version Information	
Opirus(GH)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
Opirus(GH)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Opirus(GH)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
Opirus(GH)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Opirus(GH)	2007	General Area	ECM(Engine Control Module)	Actuation Test	
Opirus(GH)	2007	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Opirus(GH)	2007	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Opirus(GH)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Opirus(GH)	2007	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Opirus(GH)	2007	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Opirus(GH)	2007	General Area	TCM(Transmission Control Module)	Version Information	
Opirus(GH)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
Opirus(GH)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Opirus(GH)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
Opirus(GH)	2007	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Opirus(GH)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
Opirus(GH)	2007	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Opirus(GH)	2007	General Area	ESP(Electronic Stability Program)	Version Information	
Opirus(GH)	2007	General Area	ESP(Electronic Stability Program)	Read Fault Code	

model	year	area	system	function	subfunction
Opirus(GH)	2007	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Opirus(GH)	2007	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Opirus(GH)	2007	General Area	ESP(Electronic Stability Program)	Actuation Test	
Opirus(GH)	2007	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Opirus(GH)	2007	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Opirus(GH)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Opirus(GH)	2007	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Opirus(GH)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Opirus(GH)	2007	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Opirus(GH)	2007	General Area	AC(Air Conditioning)	Version Information	
Opirus(GH)	2007	General Area	AC(Air Conditioning)	Read Fault Code	
Opirus(GH)	2007	General Area	AC(Air Conditioning)	Clear Fault Memory	
Opirus(GH)	2007	General Area	AC(Air Conditioning)	Read Data Stream	
Opirus(GH)	2007	General Area	AC(Air Conditioning)	Actuation Test	
Opirus(GH)	2007	General Area	BCM(Body Control Module)	Read Fault Code	
Opirus(GH)	2007	General Area	BCM(Body Control Module)	Clear Fault Memory	
Opirus(GH)	2007	General Area	BCM(Body Control Module)	Read Data Stream	
Opirus(GH)	2007	General Area	BCM(Body Control Module)	Actuation Test	
Opirus(GH)	2007	General Area	BCM(Body Control Module)	Version Information	
Opirus(GH)	2007	General Area	Smart Key	Version Information	
Opirus(GH)	2007	General Area	Smart Key	Read Fault Code	
Opirus(GH)	2007	General Area	Smart Key	Clear Fault Memory	
Opirus(GH)	2007	General Area	Smart Key	Read Data Stream	
Opirus(GH)	2007	General Area	Smart Key	Actuation Test	
Opirus(GH)	2007	General Area	Smart Key	Special Function	ECM Neutralization
Opirus(GH)	2007	General Area	EPS(Electronic Power Steering)	Version Information	
Opirus(GH)	2007	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Opirus(GH)	2007	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Opirus(GH)	2007	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Opirus(GH)	2007	General Area	ECS(Electronic Control Suspension)	Version Information	

model	year	area	system	function	subfunction
Opirus(GH)	2007	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Opirus(GH)	2007	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Opirus(GH)	2007	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Opirus(GH)	2007	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Opirus(GH)	2007	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Opirus(GH)	2007	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Opirus(GH)	2007	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Opirus(GH)	2007	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Opirus(GH)	2007	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Opirus(GH)	2007	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Opirus(GH)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
Opirus(GH)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Opirus(GH)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Opirus(GH)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Opirus(GH)	2007	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Opirus(GH)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching
Opirus(GH)	2007	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Opirus(GH)	2007	General Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Version Information	
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Opirus(GH)	2006	General Area	TCM(Transmission Control Module)	Version Information	
Opirus(GH)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
Opirus(GH)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Opirus(GH)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
Opirus(GH)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	
Opirus(GH)	2006	General Area	ESP(Electronic Stability Program)	Version Information	

model	year	area	system	function	subfunction
Opirus(GH)	2006	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Opirus(GH)	2006	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Opirus(GH)	2006	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Opirus(GH)	2006	General Area	ESP(Electronic Stability Program)	Actuation Test	
Opirus(GH)	2006	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Opirus(GH)	2006	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Opirus(GH)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Opirus(GH)	2006	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Opirus(GH)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Opirus(GH)	2006	General Area	AC(Air Conditioning)	Version Information	
Opirus(GH)	2006	General Area	AC(Air Conditioning)	Read Fault Code	
Opirus(GH)	2006	General Area	AC(Air Conditioning)	Clear Fault Memory	
Opirus(GH)	2006	General Area	AC(Air Conditioning)	Read Data Stream	
Opirus(GH)	2006	General Area	AC(Air Conditioning)	Actuation Test	
Opirus(GH)	2006	General Area	BCM(Body Control Module)	Read Fault Code	
Opirus(GH)	2006	General Area	BCM(Body Control Module)	Clear Fault Memory	
Opirus(GH)	2006	General Area	BCM(Body Control Module)	Read Data Stream	
Opirus(GH)	2006	General Area	BCM(Body Control Module)	Actuation Test	
Opirus(GH)	2006	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Opirus(GH)	2006	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Opirus(GH)	2006	General Area	ECS(Electronic Control Suspension)	Version Information	
Opirus(GH)	2006	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Opirus(GH)	2006	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Opirus(GH)	2006	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Opirus(GH)	2006	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Opirus(GH)	2006	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Opirus(GH)	2006	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Opirus(GH)	2006	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Opirus(GH)	2006	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Opirus(GH)	2006	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization

model	year	area	system	function	subfunction
Opirus(GH)	2006	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Opirus(GH)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
Opirus(GH)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Opirus(GH)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Opirus(GH)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
Opirus(GH)	2006	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Opirus(GH)	2006	General Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type)
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Opirus(GH)	2006	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Opirus(GH)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	
Opirus(GH)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Opirus(GH)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Opirus(GH)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Opirus(GH)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Opirus(GH)	2006	General Area	BCM(Body Control Module)	Version Information	
Opirus(GH)	2006	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Opirus(GH)	2006	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Opirus(GH)	2006	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Opirus(GH)	2006	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Opirus(GH)	2006	General Area	Smart Key	Read Fault Code	
Opirus(GH)	2006	General Area	Smart Key	Clear Fault Memory	
Opirus(GH)	2006	General Area	Smart Key	Read Data Stream	
Opirus(GH)	2006	General Area	Smart Key	Actuation Test	

model	year	area	system	function	subfunction
Opirus(GH)	2006	General Area	Immobilizer	Read Data Stream	
Opirus(GH)	2006	General Area	Immobilizer	Special Function	Password Teaching/Changing
Opirus(GH)	2006	General Area	Immobilizer	Special Function	Limp Home Mode
Opirus(GH)	2006	General Area	Immobilizer	Special Function	Teaching
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Version Information	
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Actuation Test	
Opirus(GH)	2005	General Area	TCM(Transmission Control Module)	Version Information	
Opirus(GH)	2005	General Area	TCM(Transmission Control Module)	Read Fault Code	
Opirus(GH)	2005	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Opirus(GH)	2005	General Area	TCM(Transmission Control Module)	Read Data Stream	
Opirus(GH)	2005	General Area	TCM(Transmission Control Module)	Actuation Test	
Opirus(GH)	2005	General Area	ESP(Electronic Stability Program)	Version Information	
Opirus(GH)	2005	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Opirus(GH)	2005	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Opirus(GH)	2005	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Opirus(GH)	2005	General Area	ESP(Electronic Stability Program)	Actuation Test	
Opirus(GH)	2005	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Opirus(GH)	2005	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Opirus(GH)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Opirus(GH)	2005	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Opirus(GH)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Opirus(GH)	2005	General Area	AC(Air Conditioning)	Version Information	
Opirus(GH)	2005	General Area	AC(Air Conditioning)	Read Fault Code	
Opirus(GH)	2005	General Area	AC(Air Conditioning)	Clear Fault Memory	
Opirus(GH)	2005	General Area	AC(Air Conditioning)	Read Data Stream	
Opirus(GH)	2005	General Area	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Opirus(GH)	2005	General Area	BCM(Body Control Module)	Read Fault Code	
Opirus(GH)	2005	General Area	BCM(Body Control Module)	Clear Fault Memory	
Opirus(GH)	2005	General Area	BCM(Body Control Module)	Read Data Stream	
Opirus(GH)	2005	General Area	BCM(Body Control Module)	Actuation Test	
Opirus(GH)	2005	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Opirus(GH)	2005	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Opirus(GH)	2005	General Area	ECS(Electronic Control Suspension)	Version Information	
Opirus(GH)	2005	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Opirus(GH)	2005	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Opirus(GH)	2005	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Opirus(GH)	2005	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Opirus(GH)	2005	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Opirus(GH)	2005	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Opirus(GH)	2005	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Opirus(GH)	2005	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Opirus(GH)	2005	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Opirus(GH)	2005	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Opirus(GH)	2005	General Area	IMMO(Immobilizer)	Read Data Stream	
Opirus(GH)	2005	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Opirus(GH)	2005	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Opirus(GH)	2005	General Area	IMMO(Immobilizer)	Special Function	Teaching
Opirus(GH)	2005	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Opirus(GH)	2005	General Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type)
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test

model	year	area	system	function	subfunction
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Opirus(GH)	2005	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Opirus(GH)	2005	General Area	ABS(Anti-Lock Brake System)	Version Information	
Opirus(GH)	2005	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Opirus(GH)	2005	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Opirus(GH)	2005	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Opirus(GH)	2005	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Opirus(GH)	2005	General Area	BCM(Body Control Module)	Version Information	
Opirus(GH)	2005	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Opirus(GH)	2005	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Opirus(GH)	2005	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Opirus(GH)	2005	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Opirus(GH)	2005	General Area	Smart Key	Read Fault Code	
Opirus(GH)	2005	General Area	Smart Key	Clear Fault Memory	
Opirus(GH)	2005	General Area	Smart Key	Read Data Stream	
Opirus(GH)	2005	General Area	Smart Key	Actuation Test	
Opirus(GH)	2005	General Area	Immobilizer	Read Data Stream	
Opirus(GH)	2005	General Area	Immobilizer	Special Function	Password Teaching/Changing
Opirus(GH)	2005	General Area	Immobilizer	Special Function	Limp Home Mode
Opirus(GH)	2005	General Area	Immobilizer	Special Function	Teaching
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Version Information	
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Actuation Test	
Opirus(GH)	2004	General Area	TCM(Transmission Control Module)	Version Information	
Opirus(GH)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Opirus(GH)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Opirus(GH)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Opirus(GH)	2004	General Area	TCM(Transmission Control Module)	Actuation Test	
Opirus(GH)	2004	General Area	ESP(Electronic Stability Program)	Version Information	
Opirus(GH)	2004	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Opirus(GH)	2004	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Opirus(GH)	2004	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Opirus(GH)	2004	General Area	ESP(Electronic Stability Program)	Actuation Test	
Opirus(GH)	2004	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Opirus(GH)	2004	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Opirus(GH)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Opirus(GH)	2004	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Opirus(GH)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Opirus(GH)	2004	General Area	AC(Air Conditioning)	Version Information	
Opirus(GH)	2004	General Area	AC(Air Conditioning)	Read Fault Code	
Opirus(GH)	2004	General Area	AC(Air Conditioning)	Clear Fault Memory	
Opirus(GH)	2004	General Area	AC(Air Conditioning)	Read Data Stream	
Opirus(GH)	2004	General Area	AC(Air Conditioning)	Actuation Test	
Opirus(GH)	2004	General Area	BCM(Body Control Module)	Read Fault Code	
Opirus(GH)	2004	General Area	BCM(Body Control Module)	Clear Fault Memory	
Opirus(GH)	2004	General Area	BCM(Body Control Module)	Read Data Stream	
Opirus(GH)	2004	General Area	BCM(Body Control Module)	Actuation Test	
Opirus(GH)	2004	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Opirus(GH)	2004	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Opirus(GH)	2004	General Area	ECS(Electronic Control Suspension)	Version Information	
Opirus(GH)	2004	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Opirus(GH)	2004	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Opirus(GH)	2004	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Opirus(GH)	2004	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Opirus(GH)	2004	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Opirus(GH)	2004	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Opirus(GH)	2004	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Opirus(GH)	2004	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Opirus(GH)	2004	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Opirus(GH)	2004	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Opirus(GH)	2004	General Area	IMMO(Immobilizer)	Read Data Stream	
Opirus(GH)	2004	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Opirus(GH)	2004	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Opirus(GH)	2004	General Area	IMMO(Immobilizer)	Special Function	Teaching
Opirus(GH)	2004	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Opirus(GH)	2004	General Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Opirus(GH)	2004	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Opirus(GH)	2004	General Area	ABS(Anti-Lock Brake System)	Version Information	
Opirus(GH)	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Opirus(GH)	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Opirus(GH)	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Opirus(GH)	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Opirus(GH)	2004	General Area	BCM(Body Control Module)	Version Information	
Opirus(GH)	2004	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Opirus(GH)	2004	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Opirus(GH)	2004	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Opirus(GH)	2004	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Opirus(GH)	2004	General Area	Smart Key	Read Fault Code	
Opirus(GH)	2004	General Area	Smart Key	Clear Fault Memory	

model	year	area	system	function	subfunction
Opirus(GH)	2004	General Area	Smart Key	Read Data Stream	
Opirus(GH)	2004	General Area	Smart Key	Actuation Test	
Opirus(GH)	2004	General Area	Immobilizer	Read Data Stream	
Opirus(GH)	2004	General Area	Immobilizer	Special Function	Password Teaching/Changing
Opirus(GH)	2004	General Area	Immobilizer	Special Function	Limp Home Mode
Opirus(GH)	2004	General Area	Immobilizer	Special Function	Teaching
Optima HEV(JF HEV)	2016	General Area	ECM(Engine Control Module)	Version Information	
Optima HEV(JF HEV)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima HEV(JF HEV)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima HEV(JF HEV)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima HEV(JF HEV)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima HEV(JF HEV)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima HEV(JF HEV)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima HEV(JF HEV)	2016	General Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima HEV(JF HEV)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima HEV(JF HEV)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Optima HEV(JF HEV)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)

model	year	area	system	function	subfunction
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima HEV(JF HEV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Optima HEV(JF HEV)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima HEV(JF HEV)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	AC(Air Conditioning)	Version Information	
Optima HEV(JF HEV)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima HEV(JF HEV)	2016	General Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima HEV(JF HEV)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Optima HEV(JF HEV)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Optima HEV(JF HEV)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Optima HEV(JF HEV)	2016	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima HEV(JF HEV)	2016	General Area	Motor Driven Power Steering(Mobis)	Version Information	
Optima HEV(JF HEV)	2016	General Area	Motor Driven Power Steering(Mobis)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	Motor Driven Power Steering(Mobis)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	Motor Driven Power Steering(Mobis)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	Motor Driven Power Steering(Mobis)	Read Freeze Frame	
Optima HEV(JF HEV)	2016	General Area	Motor Driven Power Steering(Mobis)	Special Function	ASP Calibration
Optima HEV(JF HEV)	2016	General Area	Motor Driven Power Steering(Mobis)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Optima HEV(JF HEV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima HEV(JF HEV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima HEV(JF HEV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima HEV(JF HEV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima HEV(JF HEV)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima HEV(JF HEV)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Optima HEV(JF HEV)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Optima HEV(JF HEV)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial

model	year	area	system	function	subfunction
Optima HEV(JF HEV)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Version Information	
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Optima HEV(JF HEV)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Optima HEV(JF HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Optima HEV(JF HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Optima HEV(JF HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Optima HEV(JF HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Optima HEV(JF HEV)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Optima HEV(JF HEV)	2016	General Area	PGS(Parking Guide System)	Version Information	
Optima HEV(JF HEV)	2016	General Area	PGS(Parking Guide System)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	PGS(Parking Guide System)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	PGS(Parking Guide System)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	SVMS(Surround View Monitor System)	Version Information	
Optima HEV(JF HEV)	2016	General Area	SVMS(Surround View Monitor System)	Read Fault Code	

model	year	area	system	function	subfunction
Optima HEV(JF HEV)	2016	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	AAF(Active Air Flap)	Version Information	
Optima HEV(JF HEV)	2016	General Area	AAF(Active Air Flap)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	AAF(Active Air Flap)	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	AAF(Active Air Flap)	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	Amplifier	Special Function	AMP Operation Test
Optima HEV(JF HEV)	2016	General Area	Battery Management System	Version Information	
Optima HEV(JF HEV)	2016	General Area	Battery Management System	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	Battery Management System	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	Battery Management System	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	Battery Management System	Read Freeze Frame	
Optima HEV(JF HEV)	2016	General Area	Battery Management System	Actuation Test	

model	year	area	system	function	subfunction
Optima HEV(JF HEV)	2016	General Area	Battery Management System	Special Function	Isolation Breakdown Detection Function
Optima HEV(JF HEV)	2016	General Area	Battery Management System	Special Function	SOC Calibration
Optima HEV(JF HEV)	2016	General Area	HCU/LDC	Version Information	
Optima HEV(JF HEV)	2016	General Area	HCU/LDC	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	HCU/LDC	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	HCU/LDC	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	HCU/LDC	Read Freeze Frame	
Optima HEV(JF HEV)	2016	General Area	HCU/LDC	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	HCU/LDC	Special Function	Compression Pressure Test Of Engine Cylinder
Optima HEV(JF HEV)	2016	General Area	HCU/LDC	Special Function	E/C Fluid Pressure Cal.
Optima HEV(JF HEV)	2016	General Area	HCU/LDC	Special Function	Engine Test Off
Optima HEV(JF HEV)	2016	General Area	HCU/LDC	Special Function	Engine Test On
Optima HEV(JF HEV)	2016	General Area	HCU/LDC	Special Function	LDC Activation Test
Optima HEV(JF HEV)	2016	General Area	HEV Motor Control System	Version Information	
Optima HEV(JF HEV)	2016	General Area	HEV Motor Control System	Read Fault Code	

model	year	area	system	function	subfunction
Optima HEV(JF HEV)	2016	General Area	HEV Motor Control System	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	HEV Motor Control System	Read Data Stream	
Optima HEV(JF HEV)	2016	General Area	HEV Motor Control System	Read Freeze Frame	
Optima HEV(JF HEV)	2016	General Area	HEV Motor Control System	Special Function	Electric Water Pump Control
Optima HEV(JF HEV)	2016	General Area	HEV Motor Control System	Special Function	Motor HSG Resolver Calibration
Optima HEV(JF HEV)	2016	General Area	Telematics Unit	Version Information	
Optima HEV(JF HEV)	2016	General Area	Telematics Unit	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	Telematics Unit	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	VESS(Virtual Engine Sound System)	Version Information	
Optima HEV(JF HEV)	2016	General Area	VESS(Virtual Engine Sound System)	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	VESS(Virtual Engine Sound System)	Clear Fault Memory	
Optima HEV(JF HEV)	2016	General Area	VESS(Virtual Engine Sound System)	Actuation Test	
Optima HEV(JF HEV)	2016	General Area	Central Gateway	Version Information	
Optima HEV(JF HEV)	2016	General Area	Central Gateway	Read Fault Code	
Optima HEV(JF HEV)	2016	General Area	Central Gateway	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima HEV(JF HEV)	2016	General Area	Central Gateway	Special Function	Erase Network Configuration
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Version Information	
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima(JF)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Optima(JF)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(JF)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(JF)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(JF)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(JF)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima(JF)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(JF)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(JF)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(JF)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(JF)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(JF)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(JF)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)

model	year	area	system	function	subfunction
Optima(JF)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(JF)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima(JF)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Optima(JF)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima(JF)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(JF)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(JF)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(JF)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(JF)	2016	General Area	AC(Air Conditioning)	Version Information	
Optima(JF)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Optima(JF)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(JF)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Optima(JF)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Optima(JF)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima(JF)	2016	General Area	BCM(Body Control Module)	Version Information	
Optima(JF)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Optima(JF)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(JF)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Optima(JF)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Optima(JF)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Optima(JF)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Optima(JF)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Optima(JF)	2016	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(JF)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(JF)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(JF)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(JF)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(JF)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Optima(JF)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
Optima(JF)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(JF)	2016	General Area	ECS(Electronic Control Suspension)	Version Information	
Optima(JF)	2016	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Optima(JF)	2016	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Optima(JF)	2016	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Optima(JF)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	ECS Variant Coding
Optima(JF)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(JF)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(JF)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(JF)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(JF)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(JF)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(JF)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(JF)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima(JF)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima(JF)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima(JF)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima(JF)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima(JF)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Optima(JF)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Optima(JF)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima(JF)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima(JF)	2016	General Area	Smart Key Unit	Version Information	
Optima(JF)	2016	General Area	Smart Key Unit	Read Fault Code	
Optima(JF)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Optima(JF)	2016	General Area	Smart Key Unit	Read Data Stream	
Optima(JF)	2016	General Area	Smart Key Unit	Actuation Test	
Optima(JF)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(JF)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Optima(JF)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Optima(JF)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Optima(JF)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(JF)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(JF)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima(JF)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Optima(JF)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(JF)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Optima(JF)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Optima(JF)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Optima(JF)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Optima(JF)	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Optima(JF)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Optima(JF)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Optima(JF)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Optima(JF)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Optima(JF)	2016	General Area	SPAS(Smart Parking Assist System)	Version Information	
Optima(JF)	2016	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Optima(JF)	2016	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Optima(JF)	2016	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Optima(JF)	2016	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Optima(JF)	2016	General Area	PGS(Parking Guide System)	Version Information	
Optima(JF)	2016	General Area	PGS(Parking Guide System)	Read Fault Code	
Optima(JF)	2016	General Area	PGS(Parking Guide System)	Clear Fault Memory	
Optima(JF)	2016	General Area	PGS(Parking Guide System)	Read Data Stream	
Optima(JF)	2016	General Area	SVMS(Surround View Monitor System)	Version Information	
Optima(JF)	2016	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Optima(JF)	2016	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Optima(JF)	2016	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Optima(JF)	2016	General Area	SVMS(Surround View Monitor System)	Actuation Test	

model	year	area	system	function	subfunction
Optima(JF)	2016	General Area	SCC(Smart Cruise Control)	Version Information	
Optima(JF)	2016	General Area	SCC(Smart Cruise Control)	Read Fault Code	
Optima(JF)	2016	General Area	SCC(Smart Cruise Control)	Clear Fault Memory	
Optima(JF)	2016	General Area	SCC(Smart Cruise Control)	Read Data Stream	
Optima(JF)	2016	General Area	Telematics Unit	Version Information	
Optima(JF)	2016	General Area	Telematics Unit	Read Fault Code	
Optima(JF)	2016	General Area	Telematics Unit	Clear Fault Memory	
Optima(JF)	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
Optima(JF)	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Optima(JF)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima(JF)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(JF)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima(JF)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(JF)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(JF)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(JF)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	CVVL Correction Value Automatic Learning
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	CVVL Correction Value Manual Learning
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Optima(JF)	2016	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Optima(JF)	2016	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function

model	year	area	system	function	subfunction
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(JFA)-For Mexico only	2016	General Area	TCM(Transmission Control Module)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(JFA)-For Mexico only	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(JFA)-For Mexico only	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima(JFA)-For Mexico only	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(JFA)-For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(JFA)-For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima(JFA)-For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(JFA)-For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima(JFA)-For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Optima(JFA)-For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima(JFA)-For Mexico only	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Optima(JFA)-For Mexico only	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Optima(JFA)-For Mexico only	2016	General Area	ODS(Occupant Detection Sensor)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	ODS(Occupant Detection Sensor)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	ODS(Occupant Detection Sensor)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	ODS(Occupant Detection Sensor)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	ODS(Occupant Detection Sensor)	Special Function	Body Sensor Reset
Optima(JFA)-For Mexico only	2016	General Area	AC(Air Conditioning)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	AC(Air Conditioning)	Actuation Test	
Optima(JFA)-For Mexico only	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)

model	year	area	system	function	subfunction
Optima(JFA)-For Mexico only	2016	General Area	BCM(Body Control Module)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	BCM(Body Control Module)	Actuation Test	
Optima(JFA)-For Mexico only	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Optima(JFA)-For Mexico only	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Optima(JFA)-For Mexico only	2016	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(JFA)-For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Optima(JFA)-For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(JFA)-For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Optima(JFA)-For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(JFA)-For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(JFA)-For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(JFA)-For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima(JFA)-For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Optima(JFA)-For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Optima(JFA)-For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial

model	year	area	system	function	subfunction
Optima(JFA)-For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima(JFA)-For Mexico only	2016	General Area	Smart Key Unit	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	Smart Key Unit	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	Smart Key Unit	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	Smart Key Unit	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	Smart Key Unit	Actuation Test	
Optima(JFA)-For Mexico only	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(JFA)-For Mexico only	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(JFA)-For Mexico only	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(JFA)-For Mexico only	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(JFA)-For Mexico only	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Optima(JFA)-For Mexico only	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(JFA)-For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(JFA)-For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Optima(JFA)-For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Optima(JFA)-For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Optima(JFA)-For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Optima(JFA)-For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Optima(JFA)-For Mexico only	2016	General Area	PGS(Parking Guide System)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	PGS(Parking Guide System)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	PGS(Parking Guide System)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	PGS(Parking Guide System)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	SVMS(Surround View Monitor System)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	SVMS(Surround View Monitor System)	Actuation Test	

model	year	area	system	function	subfunction
Optima(JFA)-For Mexico only	2016	General Area	CCS(Cruise Control System)	Version Information	
Optima(JFA)-For Mexico only	2016	General Area	CCS(Cruise Control System)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	CCS(Cruise Control System)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	CCS(Cruise Control System)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
Optima(JFA)-For Mexico only	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Optima(JFA)-For Mexico only	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(JFA)-For Mexico only	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima(JFA)-For Mexico only	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(JFA)-For Mexico only	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(JFA)-For Mexico only	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(JFA)-For Mexico only	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(JFA)-For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Optima(JFA)-For Mexico only	2016	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Version Information	
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima HEV(TF HEV)	2015	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima HEV(TF HEV)	2015	General Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima HEV(TF HEV)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(Before Change)
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(After Change)
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Fluid Circulation Mode
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima HEV(TF HEV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	AHB Variant Coding
Optima HEV(TF HEV)	2015	General Area	AC(Air Conditioning)	Version Information	
Optima HEV(TF HEV)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	BCM(Body Control Module)	Version Information	
Optima HEV(TF HEV)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Optima HEV(TF HEV)	2015	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Version Information	
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima HEV(TF HEV)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima HEV(TF HEV)	2015	General Area	Power Steering	Version Information	
Optima HEV(TF HEV)	2015	General Area	Power Steering	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	Power Steering	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	Power Steering	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	Power Steering	Special Function	ASP Calibration
Optima HEV(TF HEV)	2015	General Area	Power Steering	Special Function	EPS Type Recognition
Optima HEV(TF HEV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima HEV(TF HEV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima HEV(TF HEV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima HEV(TF HEV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima HEV(TF HEV)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima HEV(TF HEV)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima HEV(TF HEV)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima HEV(TF HEV)	2015	General Area	LDWS(Lane Departure Warning System)	Version Information	
Optima HEV(TF HEV)	2015	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Optima HEV(TF HEV)	2015	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Optima HEV(TF HEV)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Optima HEV(TF HEV)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Code Reading
Optima HEV(TF HEV)	2015	General Area	SPAS(Smart Parking Assist System)	Version Information	
Optima HEV(TF HEV)	2015	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Optima HEV(TF HEV)	2015	General Area	Low DC/DC Converter	Version Information	
Optima HEV(TF HEV)	2015	General Area	Low DC/DC Converter	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	Low DC/DC Converter	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	Low DC/DC Converter	Read Data Stream	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2015	General Area	Low DC/DC Converter	Read Freeze Frame	
Optima HEV(TF HEV)	2015	General Area	HEV Battery System	Version Information	
Optima HEV(TF HEV)	2015	General Area	HEV Battery System	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	HEV Battery System	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	HEV Battery System	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	HEV Battery System	Read Freeze Frame	
Optima HEV(TF HEV)	2015	General Area	HEV Battery System	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	HEV Control System	Version Information	
Optima HEV(TF HEV)	2015	General Area	HEV Control System	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	HEV Control System	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	HEV Control System	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	HEV Control System	Read Freeze Frame	
Optima HEV(TF HEV)	2015	General Area	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Optima HEV(TF HEV)	2015	General Area	HEV Control System	Special Function	Engine Test Off
Optima HEV(TF HEV)	2015	General Area	HEV Control System	Special Function	Engine Test On

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2015	General Area	HEV Control System	Special Function	LDC Activation Test
Optima HEV(TF HEV)	2015	General Area	HEV Motor Control System	Version Information	
Optima HEV(TF HEV)	2015	General Area	HEV Motor Control System	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	HEV Motor Control System	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	HEV Motor Control System	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	HEV Motor Control System	Read Freeze Frame	
Optima HEV(TF HEV)	2015	General Area	HEV Motor Control System	Actuation Test	
Optima HEV(TF HEV)	2015	General Area	HEV Motor Control System	Special Function	Motor HSG Resolver Calibration
Optima HEV(TF HEV)	2015	General Area	HEV Motor Control System	Special Function	Electric Water Pump Control
Optima HEV(TF HEV)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima HEV(TF HEV)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima HEV(TF HEV)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima HEV(TF HEV)	2015	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima HEV(TF HEV)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima HEV(TF HEV)	2015	General Area	AAF(Active Air Flap)	Version Information	
Optima HEV(TF HEV)	2015	General Area	AAF(Active Air Flap)	Read Fault Code	
Optima HEV(TF HEV)	2015	General Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima HEV(TF HEV)	2015	General Area	AAF(Active Air Flap)	Read Data Stream	
Optima HEV(TF HEV)	2015	General Area	AAF(Active Air Flap)	Actuation Test	
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Version Information	
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima HEV(TF HEV)	2014	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima HEV(TF HEV)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Optima HEV(TF HEV)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima HEV(TF HEV)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima HEV(TF HEV)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima HEV(TF HEV)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima HEV(TF HEV)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima HEV(TF HEV)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima HEV(TF HEV)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima HEV(TF HEV)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima HEV(TF HEV)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	AHB Variant Coding
Optima HEV(TF HEV)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima HEV(TF HEV)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima HEV(TF HEV)	2014	General Area	AC(Air Conditioning)	Version Information	
Optima HEV(TF HEV)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Optima HEV(TF HEV)	2014	General Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Optima HEV(TF HEV)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Optima HEV(TF HEV)	2014	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Version Information	
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Actuation Test	
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima HEV(TF HEV)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Optima HEV(TF HEV)	2014	General Area	Power Steering	Version Information	
Optima HEV(TF HEV)	2014	General Area	Power Steering	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	Power Steering	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	Power Steering	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	Power Steering	Read Freeze Frame	
Optima HEV(TF HEV)	2014	General Area	Power Steering	Special Function	ASP Calibration
Optima HEV(TF HEV)	2014	General Area	Power Steering	Special Function	EPS Type Recognition
Optima HEV(TF HEV)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima HEV(TF HEV)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima HEV(TF HEV)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima HEV(TF HEV)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima HEV(TF HEV)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima HEV(TF HEV)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima HEV(TF HEV)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima HEV(TF HEV)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima HEV(TF HEV)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima HEV(TF HEV)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima HEV(TF HEV)	2014	General Area	Low DC/DC Converter	Version Information	
Optima HEV(TF HEV)	2014	General Area	Low DC/DC Converter	Read Fault Code	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2014	General Area	Low DC/DC Converter	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	Low DC/DC Converter	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	Low DC/DC Converter	Read Freeze Frame	
Optima HEV(TF HEV)	2014	General Area	HEV Battery System	Version Information	
Optima HEV(TF HEV)	2014	General Area	HEV Battery System	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	HEV Battery System	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	HEV Battery System	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	HEV Battery System	Read Freeze Frame	
Optima HEV(TF HEV)	2014	General Area	HEV Battery System	Actuation Test	
Optima HEV(TF HEV)	2014	General Area	HEV Control System	Version Information	
Optima HEV(TF HEV)	2014	General Area	HEV Control System	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	HEV Control System	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	HEV Control System	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	HEV Control System	Read Freeze Frame	
Optima HEV(TF HEV)	2014	General Area	HEV Control System	Special Function	E/C Fluid Pressure Cal.

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2014	General Area	HEV Control System	Special Function	Engine Test Off
Optima HEV(TF HEV)	2014	General Area	HEV Control System	Special Function	Engine Test On
Optima HEV(TF HEV)	2014	General Area	HEV Control System	Special Function	LDC Activation Test
Optima HEV(TF HEV)	2014	General Area	HEV Motor Control System	Version Information	
Optima HEV(TF HEV)	2014	General Area	HEV Motor Control System	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	HEV Motor Control System	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	HEV Motor Control System	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	HEV Motor Control System	Read Freeze Frame	
Optima HEV(TF HEV)	2014	General Area	HEV Motor Control System	Actuation Test	
Optima HEV(TF HEV)	2014	General Area	HEV Motor Control System	Special Function	Motor HSG Resolver Calibration
Optima HEV(TF HEV)	2014	General Area	HEV Motor Control System	Special Function	Electric Water Pump Control
Optima HEV(TF HEV)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima HEV(TF HEV)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima HEV(TF HEV)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima HEV(TF HEV)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima HEV(TF HEV)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima HEV(TF HEV)	2014	General Area	AAF(Active Air Flap)	Version Information	
Optima HEV(TF HEV)	2014	General Area	AAF(Active Air Flap)	Read Fault Code	
Optima HEV(TF HEV)	2014	General Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima HEV(TF HEV)	2014	General Area	AAF(Active Air Flap)	Read Data Stream	
Optima HEV(TF HEV)	2014	General Area	AAF(Active Air Flap)	Actuation Test	
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Version Information	
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima HEV(TF HEV)	2013	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima HEV(TF HEV)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Optima HEV(TF HEV)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima HEV(TF HEV)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima HEV(TF HEV)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima HEV(TF HEV)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima HEV(TF HEV)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima HEV(TF HEV)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima HEV(TF HEV)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima HEV(TF HEV)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	AHB Variant Coding
Optima HEV(TF HEV)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima HEV(TF HEV)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima HEV(TF HEV)	2013	General Area	AC(Air Conditioning)	Version Information	
Optima HEV(TF HEV)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Optima HEV(TF HEV)	2013	General Area	BCM(Body Control Module)	Version Information	
Optima HEV(TF HEV)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Optima HEV(TF HEV)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Optima HEV(TF HEV)	2013	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Version Information	
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Actuation Test	
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima HEV(TF HEV)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Optima HEV(TF HEV)	2013	General Area	Power Steering	Version Information	
Optima HEV(TF HEV)	2013	General Area	Power Steering	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	Power Steering	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	Power Steering	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	Power Steering	Read Freeze Frame	
Optima HEV(TF HEV)	2013	General Area	Power Steering	Special Function	ASP Calibration
Optima HEV(TF HEV)	2013	General Area	Power Steering	Special Function	EPS Type Recognition
Optima HEV(TF HEV)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima HEV(TF HEV)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima HEV(TF HEV)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima HEV(TF HEV)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima HEV(TF HEV)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima HEV(TF HEV)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima HEV(TF HEV)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima HEV(TF HEV)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima HEV(TF HEV)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2013	General Area	Low DC/DC Converter	Version Information	
Optima HEV(TF HEV)	2013	General Area	Low DC/DC Converter	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	Low DC/DC Converter	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	Low DC/DC Converter	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	Low DC/DC Converter	Read Freeze Frame	
Optima HEV(TF HEV)	2013	General Area	HEV Battery System	Version Information	
Optima HEV(TF HEV)	2013	General Area	HEV Battery System	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	HEV Battery System	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	HEV Battery System	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	HEV Battery System	Read Freeze Frame	
Optima HEV(TF HEV)	2013	General Area	HEV Battery System	Actuation Test	
Optima HEV(TF HEV)	2013	General Area	HEV Control System	Version Information	
Optima HEV(TF HEV)	2013	General Area	HEV Control System	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	HEV Control System	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	HEV Control System	Read Data Stream	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2013	General Area	HEV Control System	Read Freeze Frame	
Optima HEV(TF HEV)	2013	General Area	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Optima HEV(TF HEV)	2013	General Area	HEV Control System	Special Function	Engine Test Off
Optima HEV(TF HEV)	2013	General Area	HEV Control System	Special Function	Engine Test On
Optima HEV(TF HEV)	2013	General Area	HEV Control System	Special Function	LDC Activation Test
Optima HEV(TF HEV)	2013	General Area	HEV Motor Control System	Version Information	
Optima HEV(TF HEV)	2013	General Area	HEV Motor Control System	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	HEV Motor Control System	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	HEV Motor Control System	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	HEV Motor Control System	Read Freeze Frame	
Optima HEV(TF HEV)	2013	General Area	HEV Motor Control System	Actuation Test	
Optima HEV(TF HEV)	2013	General Area	HEV Motor Control System	Special Function	Motor HSG Resolver Calibration
Optima HEV(TF HEV)	2013	General Area	HEV Motor Control System	Special Function	Electric Water Pump Control
Optima HEV(TF HEV)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima HEV(TF HEV)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima HEV(TF HEV)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima HEV(TF HEV)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima HEV(TF HEV)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima HEV(TF HEV)	2013	General Area	AAF(Active Air Flap)	Version Information	
Optima HEV(TF HEV)	2013	General Area	AAF(Active Air Flap)	Read Fault Code	
Optima HEV(TF HEV)	2013	General Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima HEV(TF HEV)	2013	General Area	AAF(Active Air Flap)	Read Data Stream	
Optima HEV(TF HEV)	2013	General Area	AAF(Active Air Flap)	Actuation Test	
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Version Information	
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima HEV(TF HEV)	2012	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima HEV(TF HEV)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Optima HEV(TF HEV)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima HEV(TF HEV)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima HEV(TF HEV)	2012	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima HEV(TF HEV)	2012	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima HEV(TF HEV)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima HEV(TF HEV)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima HEV(TF HEV)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima HEV(TF HEV)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	AHB Variant Coding
Optima HEV(TF HEV)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima HEV(TF HEV)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima HEV(TF HEV)	2012	General Area	AC(Air Conditioning)	Version Information	
Optima HEV(TF HEV)	2012	General Area	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Optima HEV(TF HEV)	2012	General Area	BCM(Body Control Module)	Version Information	
Optima HEV(TF HEV)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Optima HEV(TF HEV)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
Optima HEV(TF HEV)	2012	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Version Information	
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Actuation Test	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Special Function	Neutralization Mode
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Special Function	SMK Status Information
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Special Function	ESCL Status Information
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima HEV(TF HEV)	2012	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Optima HEV(TF HEV)	2012	General Area	Power Steering	Version Information	
Optima HEV(TF HEV)	2012	General Area	Power Steering	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	Power Steering	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	Power Steering	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	Power Steering	Read Freeze Frame	
Optima HEV(TF HEV)	2012	General Area	Power Steering	Special Function	ASP Calibration

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2012	General Area	Power Steering	Special Function	EPS Type Recognition
Optima HEV(TF HEV)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima HEV(TF HEV)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima HEV(TF HEV)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima HEV(TF HEV)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima HEV(TF HEV)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima HEV(TF HEV)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima HEV(TF HEV)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima HEV(TF HEV)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima HEV(TF HEV)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima HEV(TF HEV)	2012	General Area	Low DC/DC Converter	Version Information	
Optima HEV(TF HEV)	2012	General Area	Low DC/DC Converter	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	Low DC/DC Converter	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	Low DC/DC Converter	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	Low DC/DC Converter	Read Freeze Frame	
Optima HEV(TF HEV)	2012	General Area	HEV Battery System	Version Information	
Optima HEV(TF HEV)	2012	General Area	HEV Battery System	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	HEV Battery System	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	HEV Battery System	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	HEV Battery System	Read Freeze Frame	
Optima HEV(TF HEV)	2012	General Area	HEV Battery System	Actuation Test	
Optima HEV(TF HEV)	2012	General Area	HEV Control System	Version Information	
Optima HEV(TF HEV)	2012	General Area	HEV Control System	Read Fault Code	

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2012	General Area	HEV Control System	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	HEV Control System	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	HEV Control System	Read Freeze Frame	
Optima HEV(TF HEV)	2012	General Area	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Optima HEV(TF HEV)	2012	General Area	HEV Control System	Special Function	Engine Test Off
Optima HEV(TF HEV)	2012	General Area	HEV Control System	Special Function	Engine Test On
Optima HEV(TF HEV)	2012	General Area	HEV Control System	Special Function	LDC Activation Test
Optima HEV(TF HEV)	2012	General Area	HEV Motor Control System	Version Information	
Optima HEV(TF HEV)	2012	General Area	HEV Motor Control System	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	HEV Motor Control System	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	HEV Motor Control System	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	HEV Motor Control System	Read Freeze Frame	
Optima HEV(TF HEV)	2012	General Area	HEV Motor Control System	Actuation Test	
Optima HEV(TF HEV)	2012	General Area	HEV Motor Control System	Special Function	Motor HSG Resolver Calibration
Optima HEV(TF HEV)	2012	General Area	HEV Motor Control System	Special Function	Electric Water Pump Control

model	year	area	system	function	subfunction
Optima HEV(TF HEV)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima HEV(TF HEV)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima HEV(TF HEV)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima HEV(TF HEV)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima HEV(TF HEV)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima HEV(TF HEV)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima HEV(TF HEV)	2012	General Area	AAF(Active Air Flap)	Version Information	
Optima HEV(TF HEV)	2012	General Area	AAF(Active Air Flap)	Read Fault Code	
Optima HEV(TF HEV)	2012	General Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima HEV(TF HEV)	2012	General Area	AAF(Active Air Flap)	Read Data Stream	
Optima HEV(TF HEV)	2012	General Area	AAF(Active Air Flap)	Actuation Test	
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Version Information	
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima(TF)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Optima(TF)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(TF)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(TF)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(TF)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(TF)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima(TF)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(Before)
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(After Change)
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)

model	year	area	system	function	subfunction
Optima(TF)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima(TF)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(TF)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(TF)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(TF)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(TF)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Optima(TF)	2015	General Area	AC(Air Conditioning)	Version Information	
Optima(TF)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Optima(TF)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(TF)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Optima(TF)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Optima(TF)	2015	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima(TF)	2015	General Area	BCM(Body Control Module)	Version Information	
Optima(TF)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Optima(TF)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(TF)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Optima(TF)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Optima(TF)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Optima(TF)	2015	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(TF)	2015	General Area	Smart Key Unit	Version Information	
Optima(TF)	2015	General Area	Smart Key Unit	Read Fault Code	
Optima(TF)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Optima(TF)	2015	General Area	Smart Key Unit	Read Data Stream	
Optima(TF)	2015	General Area	Smart Key Unit	Actuation Test	
Optima(TF)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(TF)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(TF)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Optima(TF)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Optima(TF)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(TF)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Optima(TF)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Optima(TF)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima(TF)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(TF)	2015	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(TF)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(TF)	2015	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(TF)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(TF)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(TF)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(TF)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(TF)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(TF)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(TF)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(TF)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(TF)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(TF)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(TF)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(TF)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(TF)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima(TF)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima(TF)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima(TF)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima(TF)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima(TF)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima(TF)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima(TF)	2015	General Area	LDWS(Lane Departure Warning System)	Version Information	
Optima(TF)	2015	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Optima(TF)	2015	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Optima(TF)	2015	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(TF)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Optima(TF)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LKAS Variant Coding
Optima(TF)	2015	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Optima(TF)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Optima(TF)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Optima(TF)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Code Reading
Optima(TF)	2015	General Area	SPAS(Smart Parking Assist System)	Version Information	
Optima(TF)	2015	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Optima(TF)	2015	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Optima(TF)	2015	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Optima(TF)	2015	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Optima(TF)	2015	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Optima(TF)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima(TF)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(TF)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima(TF)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(TF)	2015	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(TF)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(TF)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(TF)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	CVVL Correction Value Automatic Learning
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	CVVL Correction Value Manual Learning
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Optima(TF)	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima(TF)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Optima(TF)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(TF)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(TF)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(TF)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(TF)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima(TF)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(Before
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(After Change)
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima(TF)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima(TF)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(TF)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(TF)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(TF)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(TF)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Optima(TF)	2014	General Area	AC(Air Conditioning)	Version Information	
Optima(TF)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Optima(TF)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(TF)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Optima(TF)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Optima(TF)	2014	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima(TF)	2014	General Area	BCM(Body Control Module)	Version Information	
Optima(TF)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Optima(TF)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(TF)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Optima(TF)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Optima(TF)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Optima(TF)	2014	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(TF)	2014	General Area	Smart Key Unit	Version Information	
Optima(TF)	2014	General Area	Smart Key Unit	Read Fault Code	
Optima(TF)	2014	General Area	Smart Key Unit	Clear Fault Memory	
Optima(TF)	2014	General Area	Smart Key Unit	Read Data Stream	
Optima(TF)	2014	General Area	Smart Key Unit	Actuation Test	
Optima(TF)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(TF)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(TF)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Optima(TF)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Optima(TF)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(TF)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(TF)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Optima(TF)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima(TF)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(TF)	2014	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(TF)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(TF)	2014	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(TF)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(TF)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(TF)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(TF)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(TF)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(TF)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(TF)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(TF)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(TF)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(TF)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(TF)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(TF)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(TF)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima(TF)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima(TF)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima(TF)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima(TF)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima(TF)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima(TF)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima(TF)	2014	General Area	LDWS(Lane Departure Warning System)	Version Information	

model	year	area	system	function	subfunction
Optima(TF)	2014	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Optima(TF)	2014	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Optima(TF)	2014	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Optima(TF)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Optima(TF)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LKAS Variant Coding
Optima(TF)	2014	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Optima(TF)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Optima(TF)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Optima(TF)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Code Reading
Optima(TF)	2014	General Area	SPAS(Smart Parking Assist System)	Version Information	
Optima(TF)	2014	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Optima(TF)	2014	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Optima(TF)	2014	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Optima(TF)	2014	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Optima(TF)	2014	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Optima(TF)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima(TF)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(TF)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima(TF)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(TF)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(TF)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(TF)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(TF)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	CVVL Correction Value Automatic Learning
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	CVVL Correction Value Manual Learning
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration

model	year	area	system	function	subfunction
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Optima(TF)	2014	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Version Information	
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima(TF)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Optima(TF)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(TF)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(TF)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(TF)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(TF)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima(TF)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(TF)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(TF)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(TF)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(TF)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(TF)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(TF)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(Before

model	year	area	system	function	subfunction
Optima(TF)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(After Change)
Optima(TF)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Optima(TF)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(TF)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Optima(TF)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
Optima(TF)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(TF)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(TF)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(TF)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(TF)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Optima(TF)	2013	General Area	AC(Air Conditioning)	Version Information	
Optima(TF)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Optima(TF)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(TF)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Optima(TF)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Optima(TF)	2013	General Area	BCM(Body Control Module)	Version Information	
Optima(TF)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Optima(TF)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(TF)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Optima(TF)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Optima(TF)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Optima(TF)	2013	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(TF)	2013	General Area	Smart Key Unit	Version Information	
Optima(TF)	2013	General Area	Smart Key Unit	Read Fault Code	
Optima(TF)	2013	General Area	Smart Key Unit	Clear Fault Memory	
Optima(TF)	2013	General Area	Smart Key Unit	Read Data Stream	
Optima(TF)	2013	General Area	Smart Key Unit	Actuation Test	
Optima(TF)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(TF)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(TF)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Optima(TF)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
Optima(TF)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(TF)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(TF)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima(TF)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(TF)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Optima(TF)	2013	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(TF)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(TF)	2013	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(TF)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(TF)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Optima(TF)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(TF)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(TF)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(TF)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(TF)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(TF)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(TF)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(TF)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(TF)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(TF)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(TF)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(TF)	2013	General Area	Head Lamp	Version Information	
Optima(TF)	2013	General Area	Head Lamp	Read Fault Code	
Optima(TF)	2013	General Area	Head Lamp	Clear Fault Memory	
Optima(TF)	2013	General Area	Head Lamp	Read Data Stream	
Optima(TF)	2013	General Area	Head Lamp	Actuation Test	
Optima(TF)	2013	General Area	Head Lamp	Special Function	Headlamp Leveling
Optima(TF)	2013	General Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial

model	year	area	system	function	subfunction
Optima(TF)	2013	General Area	LKAS(Lane Keeping Assist System)	Version Information	
Optima(TF)	2013	General Area	LKAS(Lane Keeping Assist System)	Read Fault Code	
Optima(TF)	2013	General Area	LKAS(Lane Keeping Assist System)	Clear Fault Memory	
Optima(TF)	2013	General Area	LKAS(Lane Keeping Assist System)	Read Data Stream	
Optima(TF)	2013	General Area	LKAS(Lane Keeping Assist System)	Special Function	SPTAC Calibration
Optima(TF)	2013	General Area	LKAS(Lane Keeping Assist System)	Special Function	LKAS Variant Coding
Optima(TF)	2013	General Area	SPAS(Smart Parking Assist System)	Version Information	
Optima(TF)	2013	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Optima(TF)	2013	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Optima(TF)	2013	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Optima(TF)	2013	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Optima(TF)	2013	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Optima(TF)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima(TF)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(TF)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima(TF)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(TF)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(TF)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(TF)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(TF)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVL Correction Value Automatic Learning
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVL Correction Value Manual Learning
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Optima(TF)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Optima(TF)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Optima(TF)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(TF)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(TF)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(TF)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(TF)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima(TF)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(TF)	2012	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(TF)	2012	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(TF)	2012	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(TF)	2012	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(TF)	2012	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(TF)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(Before
Optima(TF)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(After Change)
Optima(TF)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Optima(TF)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(TF)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
Optima(TF)	2012	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(TF)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(TF)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(TF)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(TF)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding

model	year	area	system	function	subfunction
Optima(TF)	2012	General Area	AC(Air Conditioning)	Version Information	
Optima(TF)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Optima(TF)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(TF)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Optima(TF)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Optima(TF)	2012	General Area	BCM(Body Control Module)	Version Information	
Optima(TF)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
Optima(TF)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(TF)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Optima(TF)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Optima(TF)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
Optima(TF)	2012	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(TF)	2012	General Area	Smart Key Unit	Version Information	
Optima(TF)	2012	General Area	Smart Key Unit	Read Fault Code	
Optima(TF)	2012	General Area	Smart Key Unit	Clear Fault Memory	
Optima(TF)	2012	General Area	Smart Key Unit	Read Data Stream	
Optima(TF)	2012	General Area	Smart Key Unit	Actuation Test	
Optima(TF)	2012	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(TF)	2012	General Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(TF)	2012	General Area	Smart Key Unit	Special Function	SMK Status Information
Optima(TF)	2012	General Area	Smart Key Unit	Special Function	ESCL Status Information
Optima(TF)	2012	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(TF)	2012	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(TF)	2012	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima(TF)	2012	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(TF)	2012	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Optima(TF)	2012	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(TF)	2012	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(TF)	2012	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(TF)	2012	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(TF)	2012	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Optima(TF)	2012	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(TF)	2012	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(TF)	2012	General Area	SPAS(Smart Parking Assist System)	Version Information	
Optima(TF)	2012	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Optima(TF)	2012	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Optima(TF)	2012	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Optima(TF)	2012	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Optima(TF)	2012	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Optima(TF)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(TF)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(TF)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(TF)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(TF)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(TF)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(TF)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(TF)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(TF)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(TF)	2012	General Area	Head Lamp	Version Information	
Optima(TF)	2012	General Area	Head Lamp	Read Fault Code	
Optima(TF)	2012	General Area	Head Lamp	Clear Fault Memory	
Optima(TF)	2012	General Area	Head Lamp	Read Data Stream	
Optima(TF)	2012	General Area	Head Lamp	Actuation Test	
Optima(TF)	2012	General Area	Head Lamp	Special Function	Headlamp Leveling
Optima(TF)	2012	General Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Optima(TF)	2012	General Area	LKAS(Lane Keeping Assist System)	Version Information	
Optima(TF)	2012	General Area	LKAS(Lane Keeping Assist System)	Read Fault Code	
Optima(TF)	2012	General Area	LKAS(Lane Keeping Assist System)	Clear Fault Memory	
Optima(TF)	2012	General Area	LKAS(Lane Keeping Assist System)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(TF)	2012	General Area	LKAS(Lane Keeping Assist System)	Special Function	SPTAC Calibration
Optima(TF)	2012	General Area	LKAS(Lane Keeping Assist System)	Special Function	LKAS Variant Coding
Optima(TF)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima(TF)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(TF)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima(TF)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(TF)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(TF)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(TF)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(TF)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Optima(TF)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima(TF)	2012	General Area	ESP(Electronic Stability Program)	Version Information	
Optima(TF)	2012	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima(TF)	2012	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima(TF)	2012	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Optima(TF)	2012	General Area	ESP(Electronic Stability Program)	Actuation Test	
Optima(TF)	2012	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Optima(TF)	2012	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima(TF)	2012	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Version Information	
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima(TF)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima(TF)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Optima(TF)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(TF)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(TF)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(TF)	2011	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(TF)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima(TF)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(TF)	2011	General Area	ESP(Electronic Stability Program)	Version Information	
Optima(TF)	2011	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima(TF)	2011	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima(TF)	2011	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Optima(TF)	2011	General Area	ESP(Electronic Stability Program)	Actuation Test	
Optima(TF)	2011	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Optima(TF)	2011	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima(TF)	2011	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Optima(TF)	2011	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(TF)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(TF)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(TF)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
Optima(TF)	2011	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Optima(TF)	2011	General Area	AC(Air Conditioning)	Version Information	
Optima(TF)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Optima(TF)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(TF)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Optima(TF)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Optima(TF)	2011	General Area	BCM(Body Control Module)	Version Information	
Optima(TF)	2011	General Area	BCM(Body Control Module)	Read Fault Code	
Optima(TF)	2011	General Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(TF)	2011	General Area	BCM(Body Control Module)	Read Data Stream	
Optima(TF)	2011	General Area	BCM(Body Control Module)	Actuation Test	
Optima(TF)	2011	General Area	BCM(Body Control Module)	Special Function	User Option
Optima(TF)	2011	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(TF)	2011	General Area	Smart Key Unit	Version Information	
Optima(TF)	2011	General Area	Smart Key Unit	Read Fault Code	
Optima(TF)	2011	General Area	Smart Key Unit	Clear Fault Memory	
Optima(TF)	2011	General Area	Smart Key Unit	Read Data Stream	
Optima(TF)	2011	General Area	Smart Key Unit	Actuation Test	
Optima(TF)	2011	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(TF)	2011	General Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(TF)	2011	General Area	Smart Key Unit	Special Function	SMK Status Information
Optima(TF)	2011	General Area	Smart Key Unit	Special Function	ESCL Status Information
Optima(TF)	2011	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(TF)	2011	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(TF)	2011	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima(TF)	2011	General Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(TF)	2011	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Optima(TF)	2011	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(TF)	2011	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(TF)	2011	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(TF)	2011	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(TF)	2011	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Optima(TF)	2011	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(TF)	2011	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(TF)	2011	General Area	SPAS(Smart Parking Assist System)	Version Information	
Optima(TF)	2011	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Optima(TF)	2011	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Optima(TF)	2011	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Optima(TF)	2011	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Optima(TF)	2011	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Optima(TF)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(TF)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(TF)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(TF)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(TF)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(TF)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(TF)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(TF)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(TF)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(TF)	2011	General Area	Head Lamp	Version Information	
Optima(TF)	2011	General Area	Head Lamp	Read Fault Code	
Optima(TF)	2011	General Area	Head Lamp	Clear Fault Memory	
Optima(TF)	2011	General Area	Head Lamp	Read Data Stream	
Optima(TF)	2011	General Area	Head Lamp	Actuation Test	
Optima(TF)	2011	General Area	Head Lamp	Special Function	Headlamp Leveling
Optima(TF)	2011	General Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Optima(TF)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima(TF)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(TF)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode

model	year	area	system	function	subfunction
Optima(TF)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(TF)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(TF)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(TF)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(TF)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Version Information	
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Optima/Magentis (MG)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Optima/Magentis (MG)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima/Magentis (MG)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima/Magentis (MG)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima/Magentis (MG)	2010	General Area	ESP(Electronic Stability Program)	Version Information	
Optima/Magentis (MG)	2010	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima/Magentis (MG)	2010	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima/Magentis (MG)	2010	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Optima/Magentis (MG)	2010	General Area	ESP(Electronic Stability Program)	Actuation Test	
Optima/Magentis (MG)	2010	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima/Magentis (MG)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima/Magentis (MG)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima/Magentis (MG)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima/Magentis (MG)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima/Magentis (MG)	2010	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Optima/Magentis (MG)	2010	General Area	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Optima/Magentis (MG)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima/Magentis (MG)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Optima/Magentis (MG)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Optima/Magentis (MG)	2010	General Area	BCM(Body Control Module)	Version Information	
Optima/Magentis (MG)	2010	General Area	BCM(Body Control Module)	Read Data Stream	
Optima/Magentis (MG)	2010	General Area	BCM(Body Control Module)	Actuation Test	
Optima/Magentis (MG)	2010	General Area	BCM(Body Control Module)	Special Function	User Option
Optima/Magentis (MG)	2010	General Area	Smart Key	Version Information	
Optima/Magentis (MG)	2010	General Area	Smart Key	Read Fault Code	
Optima/Magentis (MG)	2010	General Area	Smart Key	Clear Fault Memory	
Optima/Magentis (MG)	2010	General Area	Smart Key	Read Data Stream	
Optima/Magentis (MG)	2010	General Area	Smart Key	Actuation Test	
Optima/Magentis (MG)	2010	General Area	Smart Key	Special Function	Neutralization Mode
Optima/Magentis (MG)	2010	General Area	Smart Key	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2010	General Area	Smart Key	Special Function	ESCL Status Information
Optima/Magentis (MG)	2010	General Area	Smart Key	Special Function	PDM Status Information
Optima/Magentis (MG)	2010	General Area	Smart Key	Special Function	FOB KEY Status Information
Optima/Magentis (MG)	2010	General Area	Smart Key	Special Function	Serial Communication Line Check
Optima/Magentis (MG)	2010	General Area	Smart Key	Special Function	Antenna Status Check
Optima/Magentis (MG)	2010	General Area	Smart Key	Special Function	Smart Key Code Saving
Optima/Magentis (MG)	2010	General Area	Smart Key	Special Function	ESCL Open Status Check
Optima/Magentis (MG)	2010	General Area	ECS(Electronic Control Suspension)	Version Information	
Optima/Magentis (MG)	2010	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Optima/Magentis (MG)	2010	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Optima/Magentis (MG)	2010	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Optima/Magentis (MG)	2010	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Optima/Magentis (MG)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima/Magentis (MG)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima/Magentis (MG)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima/Magentis (MG)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima/Magentis (MG)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima/Magentis (MG)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima/Magentis (MG)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima/Magentis (MG)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Optima/Magentis (MG)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Optima/Magentis (MG)	2010	General Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Version Information	
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Optima/Magentis (MG)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Optima/Magentis (MG)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima/Magentis (MG)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima/Magentis (MG)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima/Magentis (MG)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2009	General Area	ESP(Electronic Stability Program)	Version Information	
Optima/Magentis (MG)	2009	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima/Magentis (MG)	2009	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima/Magentis (MG)	2009	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Optima/Magentis (MG)	2009	General Area	ESP(Electronic Stability Program)	Actuation Test	
Optima/Magentis (MG)	2009	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima/Magentis (MG)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima/Magentis (MG)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima/Magentis (MG)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima/Magentis (MG)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima/Magentis (MG)	2009	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Optima/Magentis (MG)	2009	General Area	AC(Air Conditioning)	Version Information	
Optima/Magentis (MG)	2009	General Area	AC(Air Conditioning)	Read Fault Code	
Optima/Magentis (MG)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima/Magentis (MG)	2009	General Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2009	General Area	AC(Air Conditioning)	Actuation Test	
Optima/Magentis (MG)	2009	General Area	BCM(Body Control Module)	Version Information	
Optima/Magentis (MG)	2009	General Area	BCM(Body Control Module)	Read Data Stream	
Optima/Magentis (MG)	2009	General Area	BCM(Body Control Module)	Actuation Test	
Optima/Magentis (MG)	2009	General Area	BCM(Body Control Module)	Special Function	User Option
Optima/Magentis (MG)	2009	General Area	Smart Key	Version Information	
Optima/Magentis (MG)	2009	General Area	Smart Key	Read Fault Code	
Optima/Magentis (MG)	2009	General Area	Smart Key	Clear Fault Memory	
Optima/Magentis (MG)	2009	General Area	Smart Key	Read Data Stream	
Optima/Magentis (MG)	2009	General Area	Smart Key	Actuation Test	
Optima/Magentis (MG)	2009	General Area	Smart Key	Special Function	Neutralization Mode
Optima/Magentis (MG)	2009	General Area	Smart Key	Special Function	SMK Status Information
Optima/Magentis (MG)	2009	General Area	Smart Key	Special Function	ESCL Status Information
Optima/Magentis (MG)	2009	General Area	Smart Key	Special Function	PDM Status Information
Optima/Magentis (MG)	2009	General Area	Smart Key	Special Function	FOB KEY Status Information

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2009	General Area	Smart Key	Special Function	Serial Communication Line Check
Optima/Magentis (MG)	2009	General Area	Smart Key	Special Function	Antenna Status Check
Optima/Magentis (MG)	2009	General Area	Smart Key	Special Function	Smart Key Code Saving
Optima/Magentis (MG)	2009	General Area	Smart Key	Special Function	ESCL Open Status Check
Optima/Magentis (MG)	2009	General Area	ECS(Electronic Control Suspension)	Version Information	
Optima/Magentis (MG)	2009	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Optima/Magentis (MG)	2009	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Optima/Magentis (MG)	2009	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Optima/Magentis (MG)	2009	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Optima/Magentis (MG)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima/Magentis (MG)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima/Magentis (MG)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima/Magentis (MG)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima/Magentis (MG)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima/Magentis (MG)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2009	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima/Magentis (MG)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima/Magentis (MG)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Optima/Magentis (MG)	2009	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Optima/Magentis (MG)	2009	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Version Information	
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Actuation Test	
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Optima/Magentis (MG)	2008	General Area	TCM(Transmission Control Module)	Version Information	
Optima/Magentis (MG)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima/Magentis (MG)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima/Magentis (MG)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima/Magentis (MG)	2008	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima/Magentis (MG)	2008	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima/Magentis (MG)	2008	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima/Magentis (MG)	2008	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2008	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima/Magentis (MG)	2008	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima/Magentis (MG)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima/Magentis (MG)	2008	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima/Magentis (MG)	2008	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima/Magentis (MG)	2008	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima/Magentis (MG)	2008	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima/Magentis (MG)	2008	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Optima/Magentis (MG)	2008	General Area	AC(Air Conditioning)	Version Information	
Optima/Magentis (MG)	2008	General Area	AC(Air Conditioning)	Read Fault Code	
Optima/Magentis (MG)	2008	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima/Magentis (MG)	2008	General Area	AC(Air Conditioning)	Read Data Stream	
Optima/Magentis (MG)	2008	General Area	AC(Air Conditioning)	Actuation Test	
Optima/Magentis (MG)	2008	General Area	BCM(Body Control Module)	Version Information	
Optima/Magentis (MG)	2008	General Area	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2008	General Area	BCM(Body Control Module)	Actuation Test	
Optima/Magentis (MG)	2008	General Area	BCM(Body Control Module)	Special Function	User Option
Optima/Magentis (MG)	2008	General Area	ECS(Electronic Control Suspension)	Version Information	
Optima/Magentis (MG)	2008	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Optima/Magentis (MG)	2008	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Optima/Magentis (MG)	2008	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Optima/Magentis (MG)	2008	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Optima/Magentis (MG)	2008	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima/Magentis (MG)	2008	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima/Magentis (MG)	2008	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima/Magentis (MG)	2008	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima/Magentis (MG)	2008	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima/Magentis (MG)	2008	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima/Magentis (MG)	2008	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima/Magentis (MG)	2008	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type Only)
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	EVAP Test
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	TPS Circuit Test
Optima/Magentis (MG)	2008	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Optima/Magentis (MG)	2008	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Optima/Magentis (MG)	2008	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Actuation Test	
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Optima/Magentis (MG)	2007	General Area	TCM(Transmission Control Module)	Version Information	
Optima/Magentis (MG)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima/Magentis (MG)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima/Magentis (MG)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima/Magentis (MG)	2007	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima/Magentis (MG)	2007	General Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2007	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima/Magentis (MG)	2007	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima/Magentis (MG)	2007	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima/Magentis (MG)	2007	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima/Magentis (MG)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima/Magentis (MG)	2007	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima/Magentis (MG)	2007	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima/Magentis (MG)	2007	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima/Magentis (MG)	2007	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima/Magentis (MG)	2007	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Optima/Magentis (MG)	2007	General Area	AC(Air Conditioning)	Version Information	
Optima/Magentis (MG)	2007	General Area	AC(Air Conditioning)	Read Fault Code	
Optima/Magentis (MG)	2007	General Area	AC(Air Conditioning)	Clear Fault Memory	
Optima/Magentis (MG)	2007	General Area	AC(Air Conditioning)	Read Data Stream	
Optima/Magentis (MG)	2007	General Area	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2007	General Area	BCM(Body Control Module)	Version Information	
Optima/Magentis (MG)	2007	General Area	BCM(Body Control Module)	Read Data Stream	
Optima/Magentis (MG)	2007	General Area	BCM(Body Control Module)	Actuation Test	
Optima/Magentis (MG)	2007	General Area	BCM(Body Control Module)	Special Function	User Option
Optima/Magentis (MG)	2007	General Area	ECS(Electronic Control Suspension)	Version Information	
Optima/Magentis (MG)	2007	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Optima/Magentis (MG)	2007	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Optima/Magentis (MG)	2007	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Optima/Magentis (MG)	2007	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Optima/Magentis (MG)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima/Magentis (MG)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima/Magentis (MG)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima/Magentis (MG)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima/Magentis (MG)	2007	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima/Magentis (MG)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2007	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima/Magentis (MG)	2007	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type Only)
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	EVAP Test
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	TPS Circuit Test
Optima/Magentis (MG)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Optima/Magentis (MG)	2007	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2007	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Version Information	
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Optima/Magentis (MG)	2006	General Area	TCM(Transmission Control Module)	Version Information	
Optima/Magentis (MG)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima/Magentis (MG)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima/Magentis (MG)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2006	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima/Magentis (MG)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima/Magentis (MG)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima/Magentis (MG)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima/Magentis (MG)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima/Magentis (MG)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima/Magentis (MG)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima/Magentis (MG)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima/Magentis (MG)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima/Magentis (MG)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima/Magentis (MG)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima/Magentis (MG)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Optima/Magentis (MG)	2006	General Area	AC(Air Conditioning)	Version Information	
Optima/Magentis (MG)	2006	General Area	AC(Air Conditioning)	Read Fault Code	
Optima/Magentis (MG)	2006	General Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2006	General Area	AC(Air Conditioning)	Read Data Stream	
Optima/Magentis (MG)	2006	General Area	AC(Air Conditioning)	Actuation Test	
Optima/Magentis (MG)	2006	General Area	BCM(Body Control Module)	Version Information	
Optima/Magentis (MG)	2006	General Area	BCM(Body Control Module)	Read Data Stream	
Optima/Magentis (MG)	2006	General Area	BCM(Body Control Module)	Actuation Test	
Optima/Magentis (MG)	2006	General Area	BCM(Body Control Module)	Special Function	User Option
Optima/Magentis (MG)	2006	General Area	ECS(Electronic Control Suspension)	Version Information	
Optima/Magentis (MG)	2006	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Optima/Magentis (MG)	2006	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Optima/Magentis (MG)	2006	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Optima/Magentis (MG)	2006	General Area	ECS(Electronic Control Suspension)	Actuation Test	
Optima/Magentis (MG)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
Optima/Magentis (MG)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima/Magentis (MG)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Optima/Magentis (MG)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2006	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima/Magentis (MG)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
Optima/Magentis (MG)	2006	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima/Magentis (MG)	2006	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type Only)
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	EVAP Test
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	TPS Circuit Test
Optima/Magentis (MG)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Optima/Magentis (MG)	2006	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Optima/Magentis (MG)	2006	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Version Information	
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Optima/Magentis (MS)	2006	General Area	TCM(Transmission Control Module)	Version Information	
Optima/Magentis (MS)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima/Magentis (MS)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima/Magentis (MS)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima/Magentis (MS)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima/Magentis (MS)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima/Magentis (MS)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima/Magentis (MS)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima/Magentis (MS)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima/Magentis (MS)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Optima/Magentis (MS)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	ABD/ASR Pressure Increase
Optima/Magentis (MS)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima/Magentis (MS)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima/Magentis (MS)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima/Magentis (MS)	2006	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima/Magentis (MS)	2006	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type Only)

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima/Magentis (MS)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Version Information	
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Actuation Test	
Optima/Magentis (MS)	2005	General Area	TCM(Transmission Control Module)	Version Information	
Optima/Magentis (MS)	2005	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2005	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2005	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima/Magentis (MS)	2005	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima/Magentis (MS)	2005	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima/Magentis (MS)	2005	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima/Magentis (MS)	2005	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima/Magentis (MS)	2005	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima/Magentis (MS)	2005	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima/Magentis (MS)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima/Magentis (MS)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Optima/Magentis (MS)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	ABD/ASR Pressure Increase
Optima/Magentis (MS)	2005	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima/Magentis (MS)	2005	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima/Magentis (MS)	2005	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima/Magentis (MS)	2005	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2005	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type Only)
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima/Magentis (MS)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Version Information	
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Actuation Test	
Optima/Magentis (MS)	2004	General Area	TCM(Transmission Control Module)	Version Information	
Optima/Magentis (MS)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima/Magentis (MS)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima/Magentis (MS)	2004	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima/Magentis (MS)	2004	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima/Magentis (MS)	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima/Magentis (MS)	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima/Magentis (MS)	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima/Magentis (MS)	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima/Magentis (MS)	2004	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima/Magentis (MS)	2004	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Optima/Magentis (MS)	2004	General Area	ABS(Anti-Lock Brake System)	Special Function	ABD/ASR Pressure Increase

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2004	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima/Magentis (MS)	2004	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima/Magentis (MS)	2004	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima/Magentis (MS)	2004	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima/Magentis (MS)	2004	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type Only)
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima/Magentis (MS)	2004	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Version Information	
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Actuation Test	
Optima/Magentis (MS)	2003	General Area	TCM(Transmission Control Module)	Version Information	
Optima/Magentis (MS)	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima/Magentis (MS)	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima/Magentis (MS)	2003	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima/Magentis (MS)	2003	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima/Magentis (MS)	2003	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima/Magentis (MS)	2003	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima/Magentis (MS)	2003	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2003	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima/Magentis (MS)	2003	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima/Magentis (MS)	2003	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Optima/Magentis (MS)	2003	General Area	ABS(Anti-Lock Brake System)	Special Function	ABD/ASR Pressure Increase
Optima/Magentis (MS)	2003	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima/Magentis (MS)	2003	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima/Magentis (MS)	2003	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima/Magentis (MS)	2003	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima/Magentis (MS)	2003	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type Only)
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima/Magentis (MS)	2003	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Version Information	
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Actuation Test	
Optima/Magentis (MS)	2002	General Area	TCM(Transmission Control Module)	Version Information	
Optima/Magentis (MS)	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima/Magentis (MS)	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2002	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima/Magentis (MS)	2002	General Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2002	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima/Magentis (MS)	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima/Magentis (MS)	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima/Magentis (MS)	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima/Magentis (MS)	2002	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima/Magentis (MS)	2002	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima/Magentis (MS)	2002	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Optima/Magentis (MS)	2002	General Area	ABS(Anti-Lock Brake System)	Special Function	ABD/ASR Pressure Increase
Optima/Magentis (MS)	2002	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima/Magentis (MS)	2002	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima/Magentis (MS)	2002	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima/Magentis (MS)	2002	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima/Magentis (MS)	2002	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type Only)
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima/Magentis (MS)	2002	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Version Information	
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Actuation Test	
Optima/Magentis (MS)	2001	General Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Optima/Magentis (MS)	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima/Magentis (MS)	2001	General Area	TCM(Transmission Control Module)	Read Data Stream	
Optima/Magentis (MS)	2001	General Area	TCM(Transmission Control Module)	Actuation Test	
Optima/Magentis (MS)	2001	General Area	ABS(Anti-Lock Brake System)	Version Information	
Optima/Magentis (MS)	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima/Magentis (MS)	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima/Magentis (MS)	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima/Magentis (MS)	2001	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima/Magentis (MS)	2001	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima/Magentis (MS)	2001	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima/Magentis (MS)	2001	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima/Magentis (MS)	2001	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima/Magentis (MS)	2001	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima/Magentis (MS)	2001	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type Only)
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima/Magentis (MS)	2001	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Version Information	
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Picanto(SA)	2011	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(SA)	2011	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	

model	year	area	system	function	subfunction
Picanto(SA)	2011	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(SA)	2011	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(SA)	2011	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(SA)	2011	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(SA)	2011	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(SA)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(SA)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(SA)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(SA)	2011	General Area	AC(Air Conditioning)	Version Information	
Picanto(SA)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Picanto(SA)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Picanto(SA)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Picanto(SA)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Picanto(SA)	2011	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Picanto(SA)	2011	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Picanto(SA)	2011	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Picanto(SA)	2011	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Picanto(SA)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(SA)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(SA)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(SA)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(SA)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Picanto(SA)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Picanto(SA)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(SA)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(SA)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(SA)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Picanto(SA)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(SA)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(SA)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(SA)	2011	General Area	EPS(Electronic Power Steering)	Version Information	
Picanto(SA)	2011	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Picanto(SA)	2011	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Picanto(SA)	2011	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Version Information	
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Picanto(SA)	2010	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(SA)	2010	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(SA)	2010	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(SA)	2010	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(SA)	2010	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(SA)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(SA)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(SA)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(SA)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(SA)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(SA)	2010	General Area	AC(Air Conditioning)	Version Information	
Picanto(SA)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Picanto(SA)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Picanto(SA)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Picanto(SA)	2010	General Area	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Picanto(SA)	2010	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Picanto(SA)	2010	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Picanto(SA)	2010	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Picanto(SA)	2010	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Picanto(SA)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(SA)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(SA)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(SA)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(SA)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Picanto(SA)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Picanto(SA)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(SA)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(SA)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(SA)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(SA)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(SA)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(SA)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(SA)	2010	General Area	EPS(Electronic Power Steering)	Version Information	
Picanto(SA)	2010	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Picanto(SA)	2010	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Picanto(SA)	2010	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Version Information	
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Picanto(SA)	2009	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(SA)	2009	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(SA)	2009	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(SA)	2009	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(SA)	2009	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(SA)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(SA)	2009	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(SA)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(SA)	2009	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(SA)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(SA)	2009	General Area	AC(Air Conditioning)	Version Information	
Picanto(SA)	2009	General Area	AC(Air Conditioning)	Read Fault Code	
Picanto(SA)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Picanto(SA)	2009	General Area	AC(Air Conditioning)	Read Data Stream	
Picanto(SA)	2009	General Area	AC(Air Conditioning)	Actuation Test	
Picanto(SA)	2009	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Picanto(SA)	2009	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Picanto(SA)	2009	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Picanto(SA)	2009	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Picanto(SA)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(SA)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(SA)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(SA)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(SA)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Picanto(SA)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Picanto(SA)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(SA)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(SA)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(SA)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(SA)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(SA)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(SA)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(SA)	2009	General Area	EPS(Electronic Power Steering)	Version Information	
Picanto(SA)	2009	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Picanto(SA)	2009	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Picanto(SA)	2009	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Version Information	
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Picanto(SA)	2008	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(SA)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(SA)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(SA)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(SA)	2008	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(SA)	2008	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(SA)	2008	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(SA)	2008	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(SA)	2008	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(SA)	2008	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(SA)	2008	General Area	ABS(Anti-Lock Brake System)	Actuation Test	

model	year	area	system	function	subfunction
Picanto(SA)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(SA)	2008	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(SA)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(SA)	2008	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(SA)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(SA)	2008	General Area	AC(Air Conditioning)	Version Information	
Picanto(SA)	2008	General Area	AC(Air Conditioning)	Read Fault Code	
Picanto(SA)	2008	General Area	AC(Air Conditioning)	Clear Fault Memory	
Picanto(SA)	2008	General Area	AC(Air Conditioning)	Read Data Stream	
Picanto(SA)	2008	General Area	AC(Air Conditioning)	Actuation Test	
Picanto(SA)	2008	General Area	Steering	Version Information	
Picanto(SA)	2008	General Area	Steering	Read Fault Code	
Picanto(SA)	2008	General Area	Steering	Clear Fault Memory	
Picanto(SA)	2008	General Area	Steering	Read Data Stream	
Picanto(SA)	2008	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(SA)	2008	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(SA)	2008	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(SA)	2008	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(SA)	2008	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Picanto(SA)	2008	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Picanto(SA)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(SA)	2007	General Area	ECM(Engine Control Module)	Version Information	
Picanto(SA)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(SA)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(SA)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(SA)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Picanto(SA)	2007	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Picanto(SA)	2007	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Picanto(SA)	2007	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Picanto(SA)	2007	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(SA)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(SA)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(SA)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(SA)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(SA)	2007	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(SA)	2007	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(SA)	2007	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(SA)	2007	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(SA)	2007	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(SA)	2007	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(SA)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(SA)	2007	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(SA)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(SA)	2007	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(SA)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(SA)	2007	General Area	Steering	Version Information	
Picanto(SA)	2007	General Area	Steering	Read Fault Code	
Picanto(SA)	2007	General Area	Steering	Clear Fault Memory	
Picanto(SA)	2007	General Area	Steering	Read Data Stream	
Picanto(SA)	2007	General Area	Steering	Special Function	EPS Type Recognition
Picanto(SA)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(SA)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(SA)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(SA)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(SA)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(SA)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(SA)	2006	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Picanto(SA)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(SA)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(SA)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(SA)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Picanto(SA)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(SA)	2006	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Picanto(SA)	2006	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Picanto(SA)	2006	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(SA)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(SA)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(SA)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(SA)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(SA)	2006	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(SA)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(SA)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(SA)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(SA)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(SA)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(SA)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(SA)	2006	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(SA)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(SA)	2006	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(SA)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(SA)	2006	General Area	Steering	Read Fault Code	
Picanto(SA)	2006	General Area	Steering	Clear Fault Memory	
Picanto(SA)	2006	General Area	Steering	Special Function	EPS TYPE RECOGNITION
Picanto(SA)	2006	General Area	Steering	Version Information	
Picanto(SA)	2006	General Area	Steering	Read Data Stream	
Picanto(SA)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(SA)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Picanto(SA)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(SA)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(SA)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(SA)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(SA)	2005	General Area	ECM(Engine Control Module)	Version Information	
Picanto(SA)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(SA)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(SA)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(SA)	2005	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(SA)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(SA)	2005	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(SA)	2005	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(SA)	2005	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(SA)	2005	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(SA)	2005	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(SA)	2005	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(SA)	2005	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(SA)	2005	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(SA)	2005	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(SA)	2005	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(SA)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(SA)	2005	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(SA)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(SA)	2005	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(SA)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(SA)	2005	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(SA)	2005	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(SA)	2005	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(SA)	2005	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(SA)	2005	General Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Picanto(SA)	2004	General Area	ECM(Engine Control Module)	Version Information	
Picanto(SA)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(SA)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(SA)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(SA)	2004	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(SA)	2004	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(SA)	2004	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(SA)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(SA)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(SA)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(SA)	2004	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(SA)	2004	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(SA)	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(SA)	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(SA)	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(SA)	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(SA)	2004	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(SA)	2004	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(SA)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(SA)	2004	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(SA)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(SA)	2004	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(SA)	2004	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(SA)	2004	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(SA)	2004	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(SA)	2004	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(SA)	2003	General Area	ECM(Engine Control Module)	Version Information	
Picanto(SA)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(SA)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(SA)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Picanto(SA)	2003	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(SA)	2003	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(SA)	2003	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(SA)	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(SA)	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(SA)	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(SA)	2003	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(SA)	2003	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(SA)	2003	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(SA)	2003	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(SA)	2003	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(SA)	2003	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(SA)	2003	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(SA)	2003	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(SA)	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(SA)	2003	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(SA)	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(SA)	2003	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(SA)	2003	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(SA)	2003	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(SA)	2003	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(SA)	2003	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(TA)	2017	General Area	ECM(Engine Control Module)	Version Information	
Picanto(TA)	2017	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(TA)	2017	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(TA)	2017	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(TA)	2017	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(TA)	2017	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Picanto(TA)	2017	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Picanto(TA)	2017	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)

model	year	area	system	function	subfunction
Picanto(TA)	2017	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Picanto(TA)	2017	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(TA)	2017	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(TA)	2017	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(TA)	2017	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(TA)	2017	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(TA)	2017	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(TA)	2017	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(TA)	2017	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(TA)	2017	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(TA)	2017	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(TA)	2017	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(TA)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(TA)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Picanto(TA)	2017	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(TA)	2017	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(TA)	2017	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(TA)	2017	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(TA)	2017	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Picanto(TA)	2017	General Area	AC(Air Conditioning)	Version Information	
Picanto(TA)	2017	General Area	AC(Air Conditioning)	Read Fault Code	
Picanto(TA)	2017	General Area	AC(Air Conditioning)	Clear Fault Memory	
Picanto(TA)	2017	General Area	AC(Air Conditioning)	Read Data Stream	
Picanto(TA)	2017	General Area	AC(Air Conditioning)	Actuation Test	
Picanto(TA)	2017	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Picanto(TA)	2017	General Area	BCM(Body Control Module)	Version Information	
Picanto(TA)	2017	General Area	BCM(Body Control Module)	Read Fault Code	
Picanto(TA)	2017	General Area	BCM(Body Control Module)	Clear Fault Memory	
Picanto(TA)	2017	General Area	BCM(Body Control Module)	Read Data Stream	
Picanto(TA)	2017	General Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Picanto(TA)	2017	General Area	BCM(Body Control Module)	Special Function	User Option
Picanto(TA)	2017	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Picanto(TA)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Picanto(TA)	2017	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Picanto(TA)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Picanto(TA)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Picanto(TA)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Picanto(TA)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Picanto(TA)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Picanto(TA)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Picanto(TA)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Picanto(TA)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Picanto(TA)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Picanto(TA)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Picanto(TA)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Picanto(TA)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Picanto(TA)	2017	General Area	Smart Key Unit	Version Information	
Picanto(TA)	2017	General Area	Smart Key Unit	Read Fault Code	
Picanto(TA)	2017	General Area	Smart Key Unit	Clear Fault Memory	
Picanto(TA)	2017	General Area	Smart Key Unit	Read Data Stream	
Picanto(TA)	2017	General Area	Smart Key Unit	Actuation Test	
Picanto(TA)	2017	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Picanto(TA)	2017	General Area	Smart Key Unit	Special Function	Neutralization Mode
Picanto(TA)	2017	General Area	Smart Key Unit	Special Function	SMK Status Information
Picanto(TA)	2017	General Area	Smart Key Unit	Special Function	ESCL Status Information
Picanto(TA)	2017	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Picanto(TA)	2017	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Picanto(TA)	2017	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Picanto(TA)	2017	General Area	Smart Key Unit	Special Function	Antenna Status Check
Picanto(TA)	2017	General Area	Smart Key Unit	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Picanto(TA)	2017	General Area	IMMO(Immobilizer)	Read Fault Code	
Picanto(TA)	2017	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Picanto(TA)	2017	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(TA)	2017	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(TA)	2017	General Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Picanto(TA)	2017	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(TA)	2017	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(TA)	2017	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Picanto(TA)	2017	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Picanto(TA)	2017	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(TA)	2016	General Area	ECM(Engine Control Module)	Version Information	
Picanto(TA)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(TA)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(TA)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(TA)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(TA)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Picanto(TA)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Picanto(TA)	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Picanto(TA)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Picanto(TA)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(TA)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(TA)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(TA)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(TA)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(TA)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(TA)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(TA)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(TA)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(TA)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(TA)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	

model	year	area	system	function	subfunction
Picanto(TA)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(TA)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Picanto(TA)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(TA)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(TA)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(TA)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(TA)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Picanto(TA)	2016	General Area	AC(Air Conditioning)	Version Information	
Picanto(TA)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Picanto(TA)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Picanto(TA)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Picanto(TA)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Picanto(TA)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Picanto(TA)	2016	General Area	BCM(Body Control Module)	Version Information	
Picanto(TA)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Picanto(TA)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Picanto(TA)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Picanto(TA)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Picanto(TA)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Picanto(TA)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Picanto(TA)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Picanto(TA)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Picanto(TA)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Picanto(TA)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Picanto(TA)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Picanto(TA)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Picanto(TA)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Picanto(TA)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Picanto(TA)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Picanto(TA)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Picanto(TA)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Picanto(TA)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Picanto(TA)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Picanto(TA)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Picanto(TA)	2016	General Area	Smart Key Unit	Version Information	
Picanto(TA)	2016	General Area	Smart Key Unit	Read Fault Code	
Picanto(TA)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Picanto(TA)	2016	General Area	Smart Key Unit	Read Data Stream	
Picanto(TA)	2016	General Area	Smart Key Unit	Actuation Test	
Picanto(TA)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Picanto(TA)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Picanto(TA)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Picanto(TA)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Picanto(TA)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Picanto(TA)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Picanto(TA)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Picanto(TA)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Picanto(TA)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Picanto(TA)	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
Picanto(TA)	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Picanto(TA)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(TA)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(TA)	2016	General Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Picanto(TA)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(TA)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(TA)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Picanto(TA)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Picanto(TA)	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(TA)	2015	General Area	ECM(Engine Control Module)	Version Information	
Picanto(TA)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Picanto(TA)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(TA)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(TA)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(TA)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Picanto(TA)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Picanto(TA)	2015	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Picanto(TA)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Picanto(TA)	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(TA)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(TA)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(TA)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(TA)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(TA)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(TA)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(TA)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(TA)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(TA)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(TA)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(TA)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(TA)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(TA)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Picanto(TA)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(TA)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(TA)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(TA)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(TA)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Picanto(TA)	2015	General Area	AC(Air Conditioning)	Version Information	
Picanto(TA)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Picanto(TA)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Picanto(TA)	2015	General Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Picanto(TA)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Picanto(TA)	2015	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Picanto(TA)	2015	General Area	BCM(Body Control Module)	Version Information	
Picanto(TA)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Picanto(TA)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Picanto(TA)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Picanto(TA)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Picanto(TA)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Picanto(TA)	2015	General Area	Smart Key Unit	Version Information	
Picanto(TA)	2015	General Area	Smart Key Unit	Read Fault Code	
Picanto(TA)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Picanto(TA)	2015	General Area	Smart Key Unit	Read Data Stream	
Picanto(TA)	2015	General Area	Smart Key Unit	Actuation Test	
Picanto(TA)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Picanto(TA)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Picanto(TA)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Picanto(TA)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Picanto(TA)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Picanto(TA)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Picanto(TA)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Picanto(TA)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Picanto(TA)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Picanto(TA)	2015	General Area	Steering	Version Information	
Picanto(TA)	2015	General Area	Steering	Read Fault Code	
Picanto(TA)	2015	General Area	Steering	Clear Fault Memory	
Picanto(TA)	2015	General Area	Steering	Read Data Stream	
Picanto(TA)	2015	General Area	Steering	Special Function	EPS Type Recognition
Picanto(TA)	2015	General Area	Steering	Special Function	ASP Calibration
Picanto(TA)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Picanto(TA)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Picanto(TA)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Picanto(TA)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Picanto(TA)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Picanto(TA)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Picanto(TA)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Picanto(TA)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Picanto(TA)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Picanto(TA)	2015	General Area	IMMO(Immobilizer)	Read Fault Code	
Picanto(TA)	2015	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Picanto(TA)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(TA)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(TA)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(TA)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(TA)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(TA)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Picanto(TA)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Picanto(TA)	2014	General Area	ECM(Engine Control Module)	Version Information	
Picanto(TA)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(TA)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(TA)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(TA)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(TA)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Picanto(TA)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Picanto(TA)	2014	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Picanto(TA)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Picanto(TA)	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(TA)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(TA)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(TA)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(TA)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Picanto(TA)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(TA)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(TA)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(TA)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(TA)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(TA)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(TA)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(TA)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(TA)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Picanto(TA)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(TA)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(TA)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(TA)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(TA)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Picanto(TA)	2014	General Area	AC(Air Conditioning)	Version Information	
Picanto(TA)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Picanto(TA)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Picanto(TA)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Picanto(TA)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Picanto(TA)	2014	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Picanto(TA)	2014	General Area	BCM(Body Control Module)	Version Information	
Picanto(TA)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Picanto(TA)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Picanto(TA)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Picanto(TA)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Picanto(TA)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Picanto(TA)	2014	General Area	Smart Key Unit	Version Information	
Picanto(TA)	2014	General Area	Smart Key Unit	Read Fault Code	
Picanto(TA)	2014	General Area	Smart Key Unit	Clear Fault Memory	
Picanto(TA)	2014	General Area	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Picanto(TA)	2014	General Area	Smart Key Unit	Actuation Test	
Picanto(TA)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Picanto(TA)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Picanto(TA)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Picanto(TA)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Picanto(TA)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Picanto(TA)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Picanto(TA)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Picanto(TA)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Picanto(TA)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Picanto(TA)	2014	General Area	Steering	Version Information	
Picanto(TA)	2014	General Area	Steering	Read Fault Code	
Picanto(TA)	2014	General Area	Steering	Clear Fault Memory	
Picanto(TA)	2014	General Area	Steering	Read Data Stream	
Picanto(TA)	2014	General Area	Steering	Special Function	ASP Calibration
Picanto(TA)	2014	General Area	Steering	Special Function	EPS Type Recognition
Picanto(TA)	2014	General Area	IMMO(Immobilizer)	Read Fault Code	
Picanto(TA)	2014	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Picanto(TA)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(TA)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(TA)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(TA)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(TA)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(TA)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Picanto(TA)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Picanto(TA)	2013	General Area	ECM(Engine Control Module)	Version Information	
Picanto(TA)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(TA)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(TA)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(TA)	2013	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Picanto(TA)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Picanto(TA)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Picanto(TA)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Picanto(TA)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Picanto(TA)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Picanto(TA)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(TA)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(TA)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(TA)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(TA)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(TA)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(TA)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(TA)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(TA)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(TA)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(TA)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(TA)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(TA)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Picanto(TA)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(TA)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(TA)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(TA)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Picanto(TA)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Picanto(TA)	2013	General Area	AC(Air Conditioning)	Version Information	
Picanto(TA)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Picanto(TA)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Picanto(TA)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Picanto(TA)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Picanto(TA)	2013	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Picanto(TA)	2013	General Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Picanto(TA)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Picanto(TA)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Picanto(TA)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Picanto(TA)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Picanto(TA)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Picanto(TA)	2013	General Area	Smart Key Unit	Version Information	
Picanto(TA)	2013	General Area	Smart Key Unit	Read Fault Code	
Picanto(TA)	2013	General Area	Smart Key Unit	Clear Fault Memory	
Picanto(TA)	2013	General Area	Smart Key Unit	Read Data Stream	
Picanto(TA)	2013	General Area	Smart Key Unit	Actuation Test	
Picanto(TA)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Picanto(TA)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
Picanto(TA)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information
Picanto(TA)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
Picanto(TA)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Picanto(TA)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Picanto(TA)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Picanto(TA)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
Picanto(TA)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Picanto(TA)	2013	General Area	Steering	Version Information	
Picanto(TA)	2013	General Area	Steering	Read Fault Code	
Picanto(TA)	2013	General Area	Steering	Clear Fault Memory	
Picanto(TA)	2013	General Area	Steering	Read Data Stream	
Picanto(TA)	2013	General Area	Steering	Special Function	ASP Calibration
Picanto(TA)	2013	General Area	Steering	Special Function	EPS Type Recognition
Picanto(TA)	2013	General Area	IMMO(Immobilizer)	Read Fault Code	
Picanto(TA)	2013	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Picanto(TA)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(TA)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(TA)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode

model	year	area	system	function	subfunction
Picanto(TA)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(TA)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(TA)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Picanto(TA)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Picanto(TA)	2012	General Area	ECM(Engine Control Module)	Version Information	
Picanto(TA)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Picanto(TA)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Picanto(TA)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Picanto(TA)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Picanto(TA)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Picanto(TA)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Picanto(TA)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Picanto(TA)	2012	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Picanto(TA)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Picanto(TA)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Picanto(TA)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Picanto(TA)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Picanto(TA)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Picanto(TA)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Picanto(TA)	2012	General Area	ABS(Anti-Lock Brake System)	Version Information	
Picanto(TA)	2012	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Picanto(TA)	2012	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Picanto(TA)	2012	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Picanto(TA)	2012	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Picanto(TA)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Picanto(TA)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Picanto(TA)	2012	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Picanto(TA)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Picanto(TA)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Picanto(TA)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
Picanto(TA)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Picanto(TA)	2012	General Area	AC(Air Conditioning)	Version Information	
Picanto(TA)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Picanto(TA)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Picanto(TA)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Picanto(TA)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Picanto(TA)	2012	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Picanto(TA)	2012	General Area	BCM(Body Control Module)	Version Information	
Picanto(TA)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
Picanto(TA)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
Picanto(TA)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Picanto(TA)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Picanto(TA)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
Picanto(TA)	2012	General Area	Smart Key Unit	Version Information	
Picanto(TA)	2012	General Area	Smart Key Unit	Read Fault Code	
Picanto(TA)	2012	General Area	Smart Key Unit	Clear Fault Memory	
Picanto(TA)	2012	General Area	Smart Key Unit	Read Data Stream	
Picanto(TA)	2012	General Area	Smart Key Unit	Actuation Test	
Picanto(TA)	2012	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Picanto(TA)	2012	General Area	Smart Key Unit	Special Function	Neutralization Mode
Picanto(TA)	2012	General Area	Smart Key Unit	Special Function	SMK Status Information
Picanto(TA)	2012	General Area	Smart Key Unit	Special Function	ESCL Status Information
Picanto(TA)	2012	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Picanto(TA)	2012	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Picanto(TA)	2012	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Picanto(TA)	2012	General Area	Smart Key Unit	Special Function	Antenna Status Check
Picanto(TA)	2012	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Picanto(TA)	2012	General Area	Steering	Version Information	
Picanto(TA)	2012	General Area	Steering	Read Fault Code	
Picanto(TA)	2012	General Area	Steering	Clear Fault Memory	

model	year	area	system	function	subfunction
Picanto(TA)	2012	General Area	Steering	Read Data Stream	
Picanto(TA)	2012	General Area	Steering	Special Function	ASP Calibration
Picanto(TA)	2012	General Area	Steering	Special Function	EPS Type Recognition
Picanto(TA)	2012	General Area	IMMO(Immobilizer)	Read Fault Code	
Picanto(TA)	2012	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Picanto(TA)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Picanto(TA)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Picanto(TA)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Picanto(TA)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Picanto(TA)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Picanto(TA)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Picanto(TA)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Picanto(TA)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Potentia	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Potentia	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Potentia	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Potentia	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Potentia	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Potentia	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Potentia	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Potentia	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Potentia	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Potentia	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Potentia	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Potentia	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Potentia	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Potentia	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Potentia	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Potentia	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Potentia	1999	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Potentia	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Potentia	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Potentia	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	
Potentia	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Potentia	1999	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Potentia	1999	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Potentia	1999	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Potentia	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Potentia	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Potentia	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Potentia	1998	General Area	TCM(Transmission Control Module)	Read Fault Code	
Potentia	1998	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Potentia	1998	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Potentia	1998	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Potentia	1998	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Potentia	1997	General Area	ECM(Engine Control Module)	Read Fault Code	
Potentia	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Potentia	1997	General Area	ECM(Engine Control Module)	Read Data Stream	
Potentia	1997	General Area	TCM(Transmission Control Module)	Read Fault Code	
Potentia	1997	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Potentia	1997	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Potentia	1997	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Potentia	1997	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Potentia	1996	General Area	ECM(Engine Control Module)	Read Fault Code	
Potentia	1996	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Potentia	1996	General Area	ECM(Engine Control Module)	Read Data Stream	
Potentia	1996	General Area	TCM(Transmission Control Module)	Read Fault Code	
Potentia	1996	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Potentia	1996	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Potentia	1996	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Potentia	1996	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Potentia	1995	General Area	ECM(Engine Control Module)	Read Fault Code	
Potentia	1995	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Potentia	1995	General Area	ECM(Engine Control Module)	Read Data Stream	
Potentia	1995	General Area	TCM(Transmission Control Module)	Read Fault Code	
Potentia	1995	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Potentia	1995	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Potentia	1995	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Potentia	1995	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Potentia	1994	General Area	ECM(Engine Control Module)	Read Fault Code	
Potentia	1994	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Potentia	1994	General Area	ECM(Engine Control Module)	Read Data Stream	
Potentia	1994	General Area	TCM(Transmission Control Module)	Read Fault Code	
Potentia	1994	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Potentia	1994	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Potentia	1994	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Potentia	1994	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Potentia	1993	General Area	ECM(Engine Control Module)	Read Fault Code	
Potentia	1993	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Potentia	1993	General Area	ECM(Engine Control Module)	Read Data Stream	
Potentia	1993	General Area	TCM(Transmission Control Module)	Read Fault Code	
Potentia	1993	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Potentia	1993	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Potentia	1993	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Potentia	1993	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Potentia	1992	General Area	ECM(Engine Control Module)	Read Fault Code	
Potentia	1992	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Potentia	1992	General Area	ECM(Engine Control Module)	Read Data Stream	
Potentia	1992	General Area	TCM(Transmission Control Module)	Read Fault Code	
Potentia	1992	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Potentia	1992	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Potentia	1992	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Potentia	1992	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Pregio(FP)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Pregio(FP)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pregio(FP)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Pregio(FP)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Pregio(FP)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
Pregio(FP)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Pregio(FP)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Pregio(FP)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Pregio(FP)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
Pregio(FP)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
Pregio(FP)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pregio(FP)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
Pregio(FP)	2005	General Area	ECM(Engine Control Module)	Actuation Test	
Pregio(FP)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Pregio(FP)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pregio(FP)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Pregio(FP)	2004	General Area	ECM(Engine Control Module)	Actuation Test	
Pregio(FP)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Pregio(FP)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pregio(FP)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Pregio(FP)	2003	General Area	ECM(Engine Control Module)	Actuation Test	
Pregio(FP)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Pregio(FP)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pregio(FP)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Pregio(FP)	2002	General Area	ECM(Engine Control Module)	Actuation Test	
Pregio(FP)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Pregio(FP)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Pregio(FP)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Pregio(FP)	2001	General Area	ECM(Engine Control Module)	Actuation Test	
Pregio(FP)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Pregio(FP)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pregio(FP)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Pregio(FP)	2000	General Area	ECM(Engine Control Module)	Actuation Test	
Pregio(FP)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Pregio(FP)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pregio(FP)	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Pregio(FP)	1999	General Area	ECM(Engine Control Module)	Actuation Test	
Pregio(FP)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Pregio(FP)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pregio(FP)	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Pregio(FP)	1998	General Area	ECM(Engine Control Module)	Actuation Test	
Pregio(FP)	1997	General Area	ECM(Engine Control Module)	Read Fault Code	
Pregio(FP)	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pregio(FP)	1997	General Area	ECM(Engine Control Module)	Read Data Stream	
Pregio(FP)	1997	General Area	ECM(Engine Control Module)	Actuation Test	
Pride(PRD)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Pride(PRD)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Pride(PRD)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
Pride(PRD)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
Pride(PRD)	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Pride(PRD)	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Pride(PRD)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	
Pride(PRD)	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Pride(PRD)	2002	General Area	TCM(Transmission Control Module)	Read Data Stream	
Pride(PRD)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	1997	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	1997	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	1996	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	1996	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	1996	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	1995	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	1995	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	1995	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	1994	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	1994	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	1994	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Pride(PRD)	1993	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	1993	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	1993	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	1992	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	1992	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	1992	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	1991	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	1991	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	1991	General Area	ECM(Engine Control Module)	Read Data Stream	
Pride(PRD)	1990	General Area	ECM(Engine Control Module)	Read Fault Code	
Pride(PRD)	1990	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Pride(PRD)	1990	General Area	ECM(Engine Control Module)	Read Data Stream	
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Version Information	
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Quoris(KH)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Quoris(KH)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Quoris(KH)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Quoris(KH)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Quoris(KH)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Quoris(KH)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Quoris(KH)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Quoris(KH)	2016	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Exchange)

model	year	area	system	function	subfunction
Quoris(KH)	2016	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Quoris(KH)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Quoris(KH)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Quoris(KH)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Quoris(KH)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Quoris(KH)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Quoris(KH)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Quoris(KH)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Quoris(KH)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Quoris(KH)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Quoris(KH)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Quoris(KH)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Quoris(KH)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Quoris(KH)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Quoris(KH)	2016	General Area	AC(Air Conditioning)	Version Information	
Quoris(KH)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Quoris(KH)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Quoris(KH)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Quoris(KH)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Quoris(KH)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Quoris(KH)	2016	General Area	BCM(Body Control Module)	Version Information	
Quoris(KH)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Quoris(KH)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Quoris(KH)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Quoris(KH)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Quoris(KH)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Quoris(KH)	2016	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Quoris(KH)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding

model	year	area	system	function	subfunction
Quoris(KH)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Quoris(KH)	2016	General Area	BCM(Body Control Module)	Special Function	HUD Calibration
Quoris(KH)	2016	General Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Quoris(KH)	2016	General Area	EHPS(Electronic Hydraulic Power Steering System)	Version Information	
Quoris(KH)	2016	General Area	EHPS(Electronic Hydraulic Power Steering System)	Read Fault Code	
Quoris(KH)	2016	General Area	EHPS(Electronic Hydraulic Power Steering System)	Clear Fault Memory	
Quoris(KH)	2016	General Area	EHPS(Electronic Hydraulic Power Steering System)	Read Data Stream	
Quoris(KH)	2016	General Area	EHPS(Electronic Hydraulic Power Steering System)	Special Function	EPS Type Recognition
Quoris(KH)	2016	General Area	ECS(Electronic Control Suspension)	Version Information	
Quoris(KH)	2016	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Quoris(KH)	2016	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Quoris(KH)	2016	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Quoris(KH)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	Air Filling/Venting Setup
Quoris(KH)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	ALI FINISH
Quoris(KH)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Quoris(KH)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	ECS Air System Check
Quoris(KH)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	ECS Leveling Mode
Quoris(KH)	2016	General Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Calibration(Reset)
Quoris(KH)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Quoris(KH)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Quoris(KH)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Quoris(KH)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Quoris(KH)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Quoris(KH)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download

model	year	area	system	function	subfunction
Quoris(KH)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Quoris(KH)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Quoris(KH)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Quoris(KH)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Quoris(KH)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Quoris(KH)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Quoris(KH)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Quoris(KH)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Quoris(KH)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Quoris(KH)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Quoris(KH)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Quoris(KH)	2016	General Area	Smart Key Unit	Version Information	
Quoris(KH)	2016	General Area	Smart Key Unit	Read Fault Code	
Quoris(KH)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Quoris(KH)	2016	General Area	Smart Key Unit	Read Data Stream	
Quoris(KH)	2016	General Area	Smart Key Unit	Actuation Test	
Quoris(KH)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Quoris(KH)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Quoris(KH)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Quoris(KH)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Quoris(KH)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Quoris(KH)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Quoris(KH)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Quoris(KH)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Quoris(KH)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Quoris(KH)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Quoris(KH)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Quoris(KH)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Quoris(KH)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	

model	year	area	system	function	subfunction
Quoris(KH)	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Quoris(KH)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Quoris(KH)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Quoris(KH)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Code Reading
Quoris(KH)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Quoris(KH)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Quoris(KH)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Quoris(KH)	2016	General Area	SVMS(Surround View Monitor System)	Version Information	
Quoris(KH)	2016	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Quoris(KH)	2016	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Quoris(KH)	2016	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Quoris(KH)	2016	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Quoris(KH)	2016	General Area	PSB(Pre-safe Seat Belt)	Version Information	
Quoris(KH)	2016	General Area	PSB(Pre-safe Seat Belt)	Read Fault Code	
Quoris(KH)	2016	General Area	PSB(Pre-safe Seat Belt)	Clear Fault Memory	
Quoris(KH)	2016	General Area	PSB(Pre-safe Seat Belt)	Read Data Stream	
Quoris(KH)	2016	General Area	PSB(Pre-safe Seat Belt)	Actuation Test	
Quoris(KH)	2016	General Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Motor Test
Quoris(KH)	2016	General Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Variant Coding
Quoris(KH)	2016	General Area	CCS(Cruise Control System)	Version Information	
Quoris(KH)	2016	General Area	CCS(Cruise Control System)	Read Fault Code	
Quoris(KH)	2016	General Area	CCS(Cruise Control System)	Clear Fault Memory	
Quoris(KH)	2016	General Area	CCS(Cruise Control System)	Read Data Stream	
Quoris(KH)	2016	General Area	CCS(Cruise Control System)	Special Function	Radar Sensor
Quoris(KH)	2016	General Area	CCS(Cruise Control System)	Special Function	Variant Coding
Quoris(KH)	2016	General Area	E-Shifter	Version Information	
Quoris(KH)	2016	General Area	E-Shifter	Read Fault Code	
Quoris(KH)	2016	General Area	E-Shifter	Clear Fault Memory	
Quoris(KH)	2016	General Area	E-Shifter	Read Data Stream	
Quoris(KH)	2016	General Area	E-Shifter	Actuation Test	

model	year	area	system	function	subfunction
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Quoris(KH)	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Version Information	
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Quoris(KH)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Quoris(KH)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Quoris(KH)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Quoris(KH)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Quoris(KH)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Quoris(KH)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Quoris(KH)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Quoris(KH)	2015	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Exchange)
Quoris(KH)	2015	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Quoris(KH)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
Quoris(KH)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Quoris(KH)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Quoris(KH)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Quoris(KH)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Quoris(KH)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Quoris(KH)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Quoris(KH)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Quoris(KH)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Quoris(KH)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Quoris(KH)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Quoris(KH)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Quoris(KH)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Quoris(KH)	2015	General Area	AC(Air Conditioning)	Version Information	
Quoris(KH)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Quoris(KH)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Quoris(KH)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Quoris(KH)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Quoris(KH)	2015	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Quoris(KH)	2015	General Area	BCM(Body Control Module)	Version Information	
Quoris(KH)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Quoris(KH)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Quoris(KH)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Quoris(KH)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Quoris(KH)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Quoris(KH)	2015	General Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Quoris(KH)	2015	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Quoris(KH)	2015	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Quoris(KH)	2015	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Quoris(KH)	2015	General Area	BCM(Body Control Module)	Special Function	HUD Calibration
Quoris(KH)	2015	General Area	Smart Key Unit	Version Information	
Quoris(KH)	2015	General Area	Smart Key Unit	Read Fault Code	
Quoris(KH)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Quoris(KH)	2015	General Area	Smart Key Unit	Read Data Stream	
Quoris(KH)	2015	General Area	Smart Key Unit	Actuation Test	

model	year	area	system	function	subfunction
Quoris(KH)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Quoris(KH)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Quoris(KH)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Quoris(KH)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Quoris(KH)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Quoris(KH)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Quoris(KH)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Quoris(KH)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Quoris(KH)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Quoris(KH)	2015	General Area	EHPS(Electronic Hydraulic Power Steering System)	Version Information	
Quoris(KH)	2015	General Area	EHPS(Electronic Hydraulic Power Steering System)	Read Fault Code	
Quoris(KH)	2015	General Area	EHPS(Electronic Hydraulic Power Steering System)	Clear Fault Memory	
Quoris(KH)	2015	General Area	EHPS(Electronic Hydraulic Power Steering System)	Read Data Stream	
Quoris(KH)	2015	General Area	EHPS(Electronic Hydraulic Power Steering System)	Special Function	EPS Type Recognition
Quoris(KH)	2015	General Area	ECS(Electronic Control Suspension)	Version Information	
Quoris(KH)	2015	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Quoris(KH)	2015	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Quoris(KH)	2015	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Quoris(KH)	2015	General Area	ECS(Electronic Control Suspension)	Special Function	Air Filling/Venting Setup
Quoris(KH)	2015	General Area	ECS(Electronic Control Suspension)	Special Function	ALI FINISH
Quoris(KH)	2015	General Area	ECS(Electronic Control Suspension)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Quoris(KH)	2015	General Area	ECS(Electronic Control Suspension)	Special Function	ECS Air System Check
Quoris(KH)	2015	General Area	ECS(Electronic Control Suspension)	Special Function	ECS Leveling Mode
Quoris(KH)	2015	General Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Calibration(Reset)

model	year	area	system	function	subfunction
Quoris(KH)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Quoris(KH)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Quoris(KH)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Quoris(KH)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Quoris(KH)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Quoris(KH)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Quoris(KH)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Quoris(KH)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Quoris(KH)	2015	General Area	AFS(Adaptive Front Lighting System)	Version Information	
Quoris(KH)	2015	General Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
Quoris(KH)	2015	General Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Quoris(KH)	2015	General Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
Quoris(KH)	2015	General Area	AFS(Adaptive Front Lighting System)	Actuation Test	
Quoris(KH)	2015	General Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Quoris(KH)	2015	General Area	AFS(Adaptive Front Lighting System)	Special Function	Calibration
Quoris(KH)	2015	General Area	LDWS(Lane Departure Warning System)	Version Information	
Quoris(KH)	2015	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Quoris(KH)	2015	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Quoris(KH)	2015	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Quoris(KH)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Region Coding
Quoris(KH)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Quoris(KH)	2015	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Quoris(KH)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Quoris(KH)	2015	General Area	PSB(Pre-safe Seat Belt)	Version Information	
Quoris(KH)	2015	General Area	PSB(Pre-safe Seat Belt)	Read Fault Code	
Quoris(KH)	2015	General Area	PSB(Pre-safe Seat Belt)	Clear Fault Memory	
Quoris(KH)	2015	General Area	PSB(Pre-safe Seat Belt)	Read Data Stream	
Quoris(KH)	2015	General Area	PSB(Pre-safe Seat Belt)	Actuation Test	
Quoris(KH)	2015	General Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Motor Test
Quoris(KH)	2015	General Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Variant Coding

model	year	area	system	function	subfunction
Quoris(KH)	2015	General Area	AAF(Active Air Flap)	Version Information	
Quoris(KH)	2015	General Area	AAF(Active Air Flap)	Read Fault Code	
Quoris(KH)	2015	General Area	AAF(Active Air Flap)	Clear Fault Memory	
Quoris(KH)	2015	General Area	AAF(Active Air Flap)	Read Data Stream	
Quoris(KH)	2015	General Area	AAF(Active Air Flap)	Actuation Test	
Quoris(KH)	2015	General Area	CCS(Cruise Control System)	Version Information	
Quoris(KH)	2015	General Area	CCS(Cruise Control System)	Read Fault Code	
Quoris(KH)	2015	General Area	CCS(Cruise Control System)	Clear Fault Memory	
Quoris(KH)	2015	General Area	CCS(Cruise Control System)	Read Data Stream	
Quoris(KH)	2015	General Area	CCS(Cruise Control System)	Special Function	SCC Alignment(Calibration)
Quoris(KH)	2015	General Area	E-Shifter	Version Information	
Quoris(KH)	2015	General Area	E-Shifter	Read Fault Code	
Quoris(KH)	2015	General Area	E-Shifter	Clear Fault Memory	
Quoris(KH)	2015	General Area	E-Shifter	Read Data Stream	
Quoris(KH)	2015	General Area	E-Shifter	Actuation Test	
Quoris(KH)	2015	General Area	SVMS(Surround View Monitor System)	Version Information	
Quoris(KH)	2015	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Quoris(KH)	2015	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Quoris(KH)	2015	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Quoris(KH)	2015	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Quoris(KH)	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Quoris(KH)	2014	General Area	ECM(Engine Control Module)	Version Information	
Quoris(KH)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Quoris(KH)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Quoris(KH)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Quoris(KH)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Quoris(KH)	2014	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Quoris(KH)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Quoris(KH)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Quoris(KH)	2014	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Quoris(KH)	2014	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Quoris(KH)	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Quoris(KH)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Quoris(KH)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Quoris(KH)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Quoris(KH)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Quoris(KH)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Quoris(KH)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Quoris(KH)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Quoris(KH)	2014	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Exchange)
Quoris(KH)	2014	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Quoris(KH)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
Quoris(KH)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Quoris(KH)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Quoris(KH)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Quoris(KH)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Quoris(KH)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Quoris(KH)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Quoris(KH)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Quoris(KH)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Quoris(KH)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Quoris(KH)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Quoris(KH)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Quoris(KH)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Quoris(KH)	2014	General Area	AC(Air Conditioning)	Version Information	
Quoris(KH)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Quoris(KH)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Quoris(KH)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Quoris(KH)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Quoris(KH)	2014	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Quoris(KH)	2014	General Area	BCM(Body Control Module)	Version Information	
Quoris(KH)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Quoris(KH)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Quoris(KH)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Quoris(KH)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Quoris(KH)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Quoris(KH)	2014	General Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Quoris(KH)	2014	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Quoris(KH)	2014	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Quoris(KH)	2014	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Quoris(KH)	2014	General Area	BCM(Body Control Module)	Special Function	HUD Calibration
Quoris(KH)	2014	General Area	Smart Key Unit	Version Information	
Quoris(KH)	2014	General Area	Smart Key Unit	Read Fault Code	
Quoris(KH)	2014	General Area	Smart Key Unit	Clear Fault Memory	
Quoris(KH)	2014	General Area	Smart Key Unit	Read Data Stream	
Quoris(KH)	2014	General Area	Smart Key Unit	Actuation Test	
Quoris(KH)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Quoris(KH)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Quoris(KH)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Quoris(KH)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Quoris(KH)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Quoris(KH)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Quoris(KH)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Quoris(KH)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Quoris(KH)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Quoris(KH)	2014	General Area	EHPS(Electronic Hydraulic Power Steering System)	Version Information	
Quoris(KH)	2014	General Area	EHPS(Electronic Hydraulic Power Steering System)	Read Fault Code	
Quoris(KH)	2014	General Area	EHPS(Electronic Hydraulic Power Steering System)	Clear Fault Memory	
Quoris(KH)	2014	General Area	EHPS(Electronic Hydraulic Power Steering System)	Read Data Stream	
Quoris(KH)	2014	General Area	EHPS(Electronic Hydraulic Power Steering System)	Special Function	EPS Type Recognition
Quoris(KH)	2014	General Area	ECS(Electronic Control Suspension)	Version Information	
Quoris(KH)	2014	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Quoris(KH)	2014	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Quoris(KH)	2014	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Quoris(KH)	2014	General Area	ECS(Electronic Control Suspension)	Special Function	Air Filling/Venting Setup
Quoris(KH)	2014	General Area	ECS(Electronic Control Suspension)	Special Function	ALI FINISH
Quoris(KH)	2014	General Area	ECS(Electronic Control Suspension)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Quoris(KH)	2014	General Area	ECS(Electronic Control Suspension)	Special Function	ECS Air System Check
Quoris(KH)	2014	General Area	ECS(Electronic Control Suspension)	Special Function	ECS Leveling Mode
Quoris(KH)	2014	General Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Calibration(Reset)
Quoris(KH)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Quoris(KH)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Quoris(KH)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Quoris(KH)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Quoris(KH)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Quoris(KH)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Quoris(KH)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Quoris(KH)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Quoris(KH)	2014	General Area	AFS(Adaptive Front Lighting System)	Version Information	
Quoris(KH)	2014	General Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
Quoris(KH)	2014	General Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Quoris(KH)	2014	General Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
Quoris(KH)	2014	General Area	AFS(Adaptive Front Lighting System)	Actuation Test	
Quoris(KH)	2014	General Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Quoris(KH)	2014	General Area	AFS(Adaptive Front Lighting System)	Special Function	Calibration
Quoris(KH)	2014	General Area	LDWS(Lane Departure Warning System)	Version Information	
Quoris(KH)	2014	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Quoris(KH)	2014	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Quoris(KH)	2014	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Quoris(KH)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Region Coding
Quoris(KH)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Quoris(KH)	2014	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Quoris(KH)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Quoris(KH)	2014	General Area	PSB(Pre-safe Seat Belt)	Version Information	
Quoris(KH)	2014	General Area	PSB(Pre-safe Seat Belt)	Read Fault Code	
Quoris(KH)	2014	General Area	PSB(Pre-safe Seat Belt)	Clear Fault Memory	
Quoris(KH)	2014	General Area	PSB(Pre-safe Seat Belt)	Read Data Stream	
Quoris(KH)	2014	General Area	PSB(Pre-safe Seat Belt)	Actuation Test	
Quoris(KH)	2014	General Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Motor Test
Quoris(KH)	2014	General Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Variant Coding
Quoris(KH)	2014	General Area	AAF(Active Air Flap)	Version Information	
Quoris(KH)	2014	General Area	AAF(Active Air Flap)	Read Fault Code	
Quoris(KH)	2014	General Area	AAF(Active Air Flap)	Clear Fault Memory	
Quoris(KH)	2014	General Area	AAF(Active Air Flap)	Read Data Stream	
Quoris(KH)	2014	General Area	AAF(Active Air Flap)	Actuation Test	
Quoris(KH)	2014	General Area	CCS(Cruise Control System)	Version Information	
Quoris(KH)	2014	General Area	CCS(Cruise Control System)	Read Fault Code	
Quoris(KH)	2014	General Area	CCS(Cruise Control System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Quoris(KH)	2014	General Area	CCS(Cruise Control System)	Read Data Stream	
Quoris(KH)	2014	General Area	CCS(Cruise Control System)	Special Function	SCC Alignment(Calibration)
Quoris(KH)	2014	General Area	E-Shifter	Version Information	
Quoris(KH)	2014	General Area	E-Shifter	Read Fault Code	
Quoris(KH)	2014	General Area	E-Shifter	Clear Fault Memory	
Quoris(KH)	2014	General Area	E-Shifter	Read Data Stream	
Quoris(KH)	2014	General Area	E-Shifter	Actuation Test	
Quoris(KH)	2014	General Area	SVMS(Surround View Monitor System)	Version Information	
Quoris(KH)	2014	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Quoris(KH)	2014	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Quoris(KH)	2014	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Quoris(KH)	2014	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Quoris(KH)	2013	General Area	ECM(Engine Control Module)	Version Information	
Quoris(KH)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Quoris(KH)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Quoris(KH)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Quoris(KH)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Quoris(KH)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Quoris(KH)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Quoris(KH)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Quoris(KH)	2013	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Quoris(KH)	2013	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Quoris(KH)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Quoris(KH)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Quoris(KH)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Quoris(KH)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Quoris(KH)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Quoris(KH)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Quoris(KH)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Quoris(KH)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Quoris(KH)	2013	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Backup&Input(TCU Exchange)
Quoris(KH)	2013	General Area	TCM(Transmission Control Module)	Special Function	Oil-pressure Characteristics Input(Transmission Exchange)
Quoris(KH)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
Quoris(KH)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Quoris(KH)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Quoris(KH)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Quoris(KH)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Quoris(KH)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Quoris(KH)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Quoris(KH)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Quoris(KH)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Quoris(KH)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Quoris(KH)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Quoris(KH)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Quoris(KH)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Quoris(KH)	2013	General Area	AC(Air Conditioning)	Version Information	
Quoris(KH)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Quoris(KH)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Quoris(KH)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Quoris(KH)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Quoris(KH)	2013	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Quoris(KH)	2013	General Area	BCM(Body Control Module)	Version Information	
Quoris(KH)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Quoris(KH)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Quoris(KH)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Quoris(KH)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Quoris(KH)	2013	General Area	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Quoris(KH)	2013	General Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Quoris(KH)	2013	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Quoris(KH)	2013	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Quoris(KH)	2013	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Quoris(KH)	2013	General Area	BCM(Body Control Module)	Special Function	HUD Calibration
Quoris(KH)	2013	General Area	Smart Key Unit	Version Information	
Quoris(KH)	2013	General Area	Smart Key Unit	Read Fault Code	
Quoris(KH)	2013	General Area	Smart Key Unit	Clear Fault Memory	
Quoris(KH)	2013	General Area	Smart Key Unit	Read Data Stream	
Quoris(KH)	2013	General Area	Smart Key Unit	Actuation Test	
Quoris(KH)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Quoris(KH)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
Quoris(KH)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information
Quoris(KH)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
Quoris(KH)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Quoris(KH)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Quoris(KH)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Quoris(KH)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Quoris(KH)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
Quoris(KH)	2013	General Area	EHPS(Electronic Hydraulic Power Steering System)	Version Information	
Quoris(KH)	2013	General Area	EHPS(Electronic Hydraulic Power Steering System)	Read Fault Code	
Quoris(KH)	2013	General Area	EHPS(Electronic Hydraulic Power Steering System)	Clear Fault Memory	
Quoris(KH)	2013	General Area	EHPS(Electronic Hydraulic Power Steering System)	Read Data Stream	
Quoris(KH)	2013	General Area	EHPS(Electronic Hydraulic Power Steering System)	Actuation Test	

model	year	area	system	function	subfunction
Quoris(KH)	2013	General Area	EHPS(Electronic Hydraulic Power Steering System)	Special Function	EPS Type Recognition
Quoris(KH)	2013	General Area	ECS(Electronic Control Suspension)	Version Information	
Quoris(KH)	2013	General Area	ECS(Electronic Control Suspension)	Read Fault Code	
Quoris(KH)	2013	General Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Quoris(KH)	2013	General Area	ECS(Electronic Control Suspension)	Read Data Stream	
Quoris(KH)	2013	General Area	ECS(Electronic Control Suspension)	Special Function	Air Filling/Venting Setup
Quoris(KH)	2013	General Area	ECS(Electronic Control Suspension)	Special Function	ALI FINISH
Quoris(KH)	2013	General Area	ECS(Electronic Control Suspension)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Quoris(KH)	2013	General Area	ECS(Electronic Control Suspension)	Special Function	ECS Air System Check
Quoris(KH)	2013	General Area	ECS(Electronic Control Suspension)	Special Function	ECS Leveling Mode
Quoris(KH)	2013	General Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Calibration(Reset)
Quoris(KH)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Quoris(KH)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Quoris(KH)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Quoris(KH)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Quoris(KH)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Quoris(KH)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Quoris(KH)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Quoris(KH)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Quoris(KH)	2013	General Area	AFS(Adaptive Front Lighting System)	Version Information	
Quoris(KH)	2013	General Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
Quoris(KH)	2013	General Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Quoris(KH)	2013	General Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
Quoris(KH)	2013	General Area	AFS(Adaptive Front Lighting System)	Actuation Test	
Quoris(KH)	2013	General Area	AFS(Adaptive Front Lighting System)	Special Function	Calibration
Quoris(KH)	2013	General Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Quoris(KH)	2013	General Area	LDWS(Lane Departure Warning System)	Version Information	
Quoris(KH)	2013	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	

model	year	area	system	function	subfunction
Quoris(KH)	2013	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Quoris(KH)	2013	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Quoris(KH)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Region Coding
Quoris(KH)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Quoris(KH)	2013	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Quoris(KH)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Quoris(KH)	2013	General Area	PSB(Pre-safe Seat Belt)	Version Information	
Quoris(KH)	2013	General Area	PSB(Pre-safe Seat Belt)	Read Fault Code	
Quoris(KH)	2013	General Area	PSB(Pre-safe Seat Belt)	Clear Fault Memory	
Quoris(KH)	2013	General Area	PSB(Pre-safe Seat Belt)	Read Data Stream	
Quoris(KH)	2013	General Area	PSB(Pre-safe Seat Belt)	Actuation Test	
Quoris(KH)	2013	General Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Motor Test
Quoris(KH)	2013	General Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Variant Coding
Quoris(KH)	2013	General Area	AAF(Active Air Flap)	Version Information	
Quoris(KH)	2013	General Area	AAF(Active Air Flap)	Read Fault Code	
Quoris(KH)	2013	General Area	AAF(Active Air Flap)	Clear Fault Memory	
Quoris(KH)	2013	General Area	AAF(Active Air Flap)	Read Data Stream	
Quoris(KH)	2013	General Area	AAF(Active Air Flap)	Actuation Test	
Quoris(KH)	2013	General Area	CCS(Cruise Control System)	Version Information	
Quoris(KH)	2013	General Area	CCS(Cruise Control System)	Read Fault Code	
Quoris(KH)	2013	General Area	CCS(Cruise Control System)	Clear Fault Memory	
Quoris(KH)	2013	General Area	CCS(Cruise Control System)	Read Data Stream	
Quoris(KH)	2013	General Area	CCS(Cruise Control System)	Special Function	SCC Alignment(Calibration)
Quoris(KH)	2013	General Area	E-Shifter	Version Information	
Quoris(KH)	2013	General Area	E-Shifter	Read Fault Code	
Quoris(KH)	2013	General Area	E-Shifter	Clear Fault Memory	
Quoris(KH)	2013	General Area	E-Shifter	Read Data Stream	
Quoris(KH)	2013	General Area	E-Shifter	Actuation Test	
Quoris(KH)	2013	General Area	SVMS(Surround View Monitor System)	Version Information	
Quoris(KH)	2013	General Area	SVMS(Surround View Monitor System)	Read Fault Code	

model	year	area	system	function	subfunction
Quoris(KH)	2013	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Quoris(KH)	2013	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Quoris(KH)	2013	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Retona(JL)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Retona(JL)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Retona(JL)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Retona(JL)	2001	General Area	ECM(Engine Control Module)	Actuation Test	
Retona(JL)	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Retona(JL)	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Retona(JL)	2001	General Area	TCM(Transmission Control Module)	Read Data Stream	
Retona(JL)	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Retona(JL)	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Retona(JL)	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Retona(JL)	2001	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Retona(JL)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Retona(JL)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Retona(JL)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Retona(JL)	2000	General Area	ECM(Engine Control Module)	Actuation Test	
Retona(JL)	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Retona(JL)	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Retona(JL)	2000	General Area	TCM(Transmission Control Module)	Read Data Stream	
Retona(JL)	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Retona(JL)	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Retona(JL)	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Retona(JL)	2000	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Retona(JL)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Retona(JL)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Retona(JL)	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Retona(JL)	1999	General Area	ECM(Engine Control Module)	Actuation Test	
Retona(JL)	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Retona(JL)	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Retona(JL)	1999	General Area	TCM(Transmission Control Module)	Read Data Stream	
Retona(JL)	1999	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Retona(JL)	1999	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Retona(JL)	1999	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Retona(JL)	1999	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Retona(JL)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Retona(JL)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Retona(JL)	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Retona(JL)	1998	General Area	ECM(Engine Control Module)	Actuation Test	
Retona(JL)	1998	General Area	TCM(Transmission Control Module)	Read Fault Code	
Retona(JL)	1998	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Retona(JL)	1998	General Area	TCM(Transmission Control Module)	Read Data Stream	
Retona(JL)	1998	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Retona(JL)	1998	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Retona(JL)	1998	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Retona(JL)	1998	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	

model	year	area	system	function	subfunction
RIO(BC)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2012	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2012	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2012	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2012	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2012	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
RIO(BC)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2011	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2011	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2011	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2011	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2011	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2011	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2010	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2010	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2010	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2010	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2010	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
RIO(BC)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2009	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2009	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2009	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2009	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2009	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2009	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2008	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2008	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2008	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2008	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2008	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2008	General Area	ABS(Anti-Lock Brake System)	Actuation Test	

model	year	area	system	function	subfunction
RIO(BC)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2008	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2008	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2007	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2007	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2007	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2007	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2007	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2007	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2007	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
RIO(BC)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2006	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2006	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2005	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2005	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2005	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2005	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2005	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2005	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2005	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2005	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2005	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2005	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2005	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
RIO(BC)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2004	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2004	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2004	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2004	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2004	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2004	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2003	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2003	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2003	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2003	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2003	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2003	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2003	General Area	ABS(Anti-Lock Brake System)	Actuation Test	

model	year	area	system	function	subfunction
RIO(BC)	2003	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2003	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2003	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2002	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2002	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2002	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2002	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2002	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2001	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2001	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2001	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
RIO(BC)	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2001	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2001	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(BC)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2000	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2000	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(BC)	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2000	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2000	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2000	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2011	General Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(JB)	2011	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
RIO(JB)	2011	General Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
RIO(JB)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2011	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2011	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2011	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2011	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2011	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2011	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2011	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2011	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2011	General Area	Power Steering	Version Information	
RIO(JB)	2011	General Area	Power Steering	Read Fault Code	
RIO(JB)	2011	General Area	Power Steering	Clear Fault Memory	
RIO(JB)	2011	General Area	Power Steering	Read Data Stream	
RIO(JB)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(JB)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(JB)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(JB)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(JB)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
RIO(JB)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(JB)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(JB)	2010	General Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
RIO(JB)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(JB)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
RIO(JB)	2010	General Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2010	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2010	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2010	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2010	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2010	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2010	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2010	General Area	Power Steering	Version Information	
RIO(JB)	2010	General Area	Power Steering	Read Fault Code	
RIO(JB)	2010	General Area	Power Steering	Clear Fault Memory	
RIO(JB)	2010	General Area	Power Steering	Read Data Stream	
RIO(JB)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(JB)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(JB)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(JB)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(JB)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
RIO(JB)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(JB)	2010	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(JB)	2009	General Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(JB)	2009	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
RIO(JB)	2009	General Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2009	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2009	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2009	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2009	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2009	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2009	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2009	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2009	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(JB)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
RIO(JB)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(JB)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(JB)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
RIO(JB)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(JB)	2009	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(JB)	2008	General Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2008	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2008	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2008	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(JB)	2008	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
RIO(JB)	2008	General Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2008	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2008	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2008	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2008	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2008	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2008	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2008	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2008	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2008	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
RIO(JB)	2008	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2008	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(JB)	2008	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(JB)	2008	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(JB)	2008	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(JB)	2008	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
RIO(JB)	2008	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(JB)	2008	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(JB)	2007	General Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2007	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2007	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(JB)	2007	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
RIO(JB)	2007	General Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2007	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2007	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2007	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2007	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2007	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2007	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2007	General Area	SRS(Supplemental Inflatable Restraint	Version Information	

model	year	area	system	function	subfunction
RIO(JB)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2007	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2007	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(JB)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(JB)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(JB)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(JB)	2007	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
RIO(JB)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(JB)	2007	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(JB)	2006	General Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2006	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(JB)	2006	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
RIO(JB)	2006	General Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2006	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	

model	year	area	system	function	subfunction
RIO(JB)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2006	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2006	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2006	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(JB)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(JB)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(JB)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(JB)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(JB)	2006	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(JB)	2005	General Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2005	General Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2005	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2005	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(JB)	2005	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
RIO(JB)	2005	General Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2005	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2005	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2005	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2005	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2005	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2005	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2005	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	

model	year	area	system	function	subfunction
RIO(JB)	2005	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2005	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2005	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2005	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2005	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2005	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2005	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(JB)	2005	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(JB)	2005	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(JB)	2005	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(JB)	2005	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(JB)	2005	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(QBR)	2016	General Area	ECM(Engine Control Module)	Version Information	
RIO(QBR)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(QBR)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(QBR)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(QBR)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(QBR)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(QBR)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(QBR)	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(QBR)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(QBR)	2016	General Area	TCM(Transmission Control Module)	Version Information	
RIO(QBR)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(QBR)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(QBR)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(QBR)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
RIO(QBR)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(QBR)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(QBR)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(QBR)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(QBR)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(QBR)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(QBR)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(QBR)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(QBR)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
RIO(QBR)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(QBR)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(QBR)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(QBR)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(QBR)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(QBR)	2016	General Area	AC(Air Conditioning)	Version Information	
RIO(QBR)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
RIO(QBR)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(QBR)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
RIO(QBR)	2016	General Area	AC(Air Conditioning)	Actuation Test	
RIO(QBR)	2016	General Area	BCM(Body Control Module)	Version Information	
RIO(QBR)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
RIO(QBR)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(QBR)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
RIO(QBR)	2016	General Area	BCM(Body Control Module)	Actuation Test	
RIO(QBR)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
RIO(QBR)	2016	General Area	Smart Key Unit	Version Information	
RIO(QBR)	2016	General Area	Smart Key Unit	Read Fault Code	
RIO(QBR)	2016	General Area	Smart Key Unit	Clear Fault Memory	
RIO(QBR)	2016	General Area	Smart Key Unit	Read Data Stream	
RIO(QBR)	2016	General Area	Smart Key Unit	Actuation Test	

model	year	area	system	function	subfunction
RIO(QBR)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(QBR)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(QBR)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
RIO(QBR)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
RIO(QBR)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(QBR)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(QBR)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
RIO(QBR)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
RIO(QBR)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(QBR)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(QBR)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(QBR)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(QBR)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(QBR)	2016	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
RIO(QBR)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(QBR)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(QBR)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(QBR)	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(QBR)	2015	General Area	ECM(Engine Control Module)	Version Information	
RIO(QBR)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(QBR)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(QBR)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(QBR)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(QBR)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(QBR)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(QBR)	2015	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(QBR)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(QBR)	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(QBR)	2015	General Area	TCM(Transmission Control Module)	Version Information	
RIO(QBR)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
RIO(QBR)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(QBR)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(QBR)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
RIO(QBR)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(QBR)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(QBR)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(QBR)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(QBR)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(QBR)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(QBR)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(QBR)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(QBR)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
RIO(QBR)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
RIO(QBR)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
RIO(QBR)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
RIO(QBR)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
RIO(QBR)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Special Function	ACU/SRSCM Variant Coding
RIO(QBR)	2015	General Area	AC(Air Conditioning)	Version Information	
RIO(QBR)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
RIO(QBR)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(QBR)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
RIO(QBR)	2015	General Area	AC(Air Conditioning)	Actuation Test	
RIO(QBR)	2015	General Area	BCM(Body Control Module)	Version Information	
RIO(QBR)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
RIO(QBR)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(QBR)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
RIO(QBR)	2015	General Area	BCM(Body Control Module)	Actuation Test	
RIO(QBR)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
RIO(QBR)	2015	General Area	Smart Key Unit	Version Information	
RIO(QBR)	2015	General Area	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
RIO(QBR)	2015	General Area	Smart Key Unit	Clear Fault Memory	
RIO(QBR)	2015	General Area	Smart Key Unit	Read Data Stream	
RIO(QBR)	2015	General Area	Smart Key Unit	Actuation Test	
RIO(QBR)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(QBR)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(QBR)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
RIO(QBR)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
RIO(QBR)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(QBR)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(QBR)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
RIO(QBR)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(QBR)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
RIO(QBR)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(QBR)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(QBR)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(QBR)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(QBR)	2015	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
RIO(QBR)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(QBR)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(QBR)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(QBR)	2014	General Area	ECM(Engine Control Module)	Version Information	
RIO(QBR)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(QBR)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(QBR)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(QBR)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(QBR)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(QBR)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(QBR)	2014	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(QBR)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(QBR)	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
RIO(QBR)	2014	General Area	TCM(Transmission Control Module)	Version Information	
RIO(QBR)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(QBR)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(QBR)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(QBR)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(QBR)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(QBR)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(QBR)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(QBR)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(QBR)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(QBR)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(QBR)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(QBR)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
RIO(QBR)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(QBR)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(QBR)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(QBR)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(QBR)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(QBR)	2014	General Area	AC(Air Conditioning)	Version Information	
RIO(QBR)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
RIO(QBR)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(QBR)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
RIO(QBR)	2014	General Area	AC(Air Conditioning)	Actuation Test	
RIO(QBR)	2014	General Area	BCM(Body Control Module)	Version Information	
RIO(QBR)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
RIO(QBR)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(QBR)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
RIO(QBR)	2014	General Area	BCM(Body Control Module)	Actuation Test	
RIO(QBR)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
RIO(QBR)	2014	General Area	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
RIO(QBR)	2014	General Area	Smart Key Unit	Read Fault Code	
RIO(QBR)	2014	General Area	Smart Key Unit	Clear Fault Memory	
RIO(QBR)	2014	General Area	Smart Key Unit	Read Data Stream	
RIO(QBR)	2014	General Area	Smart Key Unit	Actuation Test	
RIO(QBR)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(QBR)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(QBR)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
RIO(QBR)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
RIO(QBR)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(QBR)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(QBR)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
RIO(QBR)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(QBR)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
RIO(QBR)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(QBR)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(QBR)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(QBR)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(QBR)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
RIO(QBR)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(QBR)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(QBR)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(QBR)	2013	General Area	ECM(Engine Control Module)	Version Information	
RIO(QBR)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(QBR)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(QBR)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(QBR)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(QBR)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(QBR)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(QBR)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(QBR)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
RIO(QBR)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(QBR)	2013	General Area	TCM(Transmission Control Module)	Version Information	
RIO(QBR)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(QBR)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(QBR)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(QBR)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(QBR)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(QBR)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(QBR)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(QBR)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(QBR)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(QBR)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(QBR)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(QBR)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
RIO(QBR)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(QBR)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(QBR)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(QBR)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(QBR)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(QBR)	2013	General Area	AC(Air Conditioning)	Version Information	
RIO(QBR)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
RIO(QBR)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(QBR)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
RIO(QBR)	2013	General Area	AC(Air Conditioning)	Actuation Test	
RIO(QBR)	2013	General Area	BCM(Body Control Module)	Version Information	
RIO(QBR)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
RIO(QBR)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(QBR)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
RIO(QBR)	2013	General Area	BCM(Body Control Module)	Actuation Test	
RIO(QBR)	2013	General Area	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
RIO(QBR)	2013	General Area	Smart Key Unit	Version Information	
RIO(QBR)	2013	General Area	Smart Key Unit	Read Fault Code	
RIO(QBR)	2013	General Area	Smart Key Unit	Clear Fault Memory	
RIO(QBR)	2013	General Area	Smart Key Unit	Read Data Stream	
RIO(QBR)	2013	General Area	Smart Key Unit	Actuation Test	
RIO(QBR)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(QBR)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(QBR)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information
RIO(QBR)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
RIO(QBR)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(QBR)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(QBR)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
RIO(QBR)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(QBR)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
RIO(QBR)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(QBR)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(QBR)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(QBR)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(QBR)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
RIO(QBR)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(QBR)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(QBR)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(QBR)	2012	General Area	ECM(Engine Control Module)	Version Information	
RIO(QBR)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(QBR)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(QBR)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(QBR)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(QBR)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(QBR)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(QBR)	2012	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)

model	year	area	system	function	subfunction
RIO(QBR)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(QBR)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(QBR)	2012	General Area	TCM(Transmission Control Module)	Version Information	
RIO(QBR)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(QBR)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(QBR)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(QBR)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(QBR)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(QBR)	2012	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(QBR)	2012	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(QBR)	2012	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(QBR)	2012	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(QBR)	2012	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(QBR)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(QBR)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
RIO(QBR)	2012	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(QBR)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(QBR)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(QBR)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(QBR)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(QBR)	2012	General Area	AC(Air Conditioning)	Version Information	
RIO(QBR)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
RIO(QBR)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(QBR)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
RIO(QBR)	2012	General Area	AC(Air Conditioning)	Actuation Test	
RIO(QBR)	2012	General Area	BCM(Body Control Module)	Version Information	
RIO(QBR)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
RIO(QBR)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(QBR)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
RIO(QBR)	2012	General Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
RIO(QBR)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
RIO(QBR)	2012	General Area	Smart Key Unit	Version Information	
RIO(QBR)	2012	General Area	Smart Key Unit	Read Fault Code	
RIO(QBR)	2012	General Area	Smart Key Unit	Clear Fault Memory	
RIO(QBR)	2012	General Area	Smart Key Unit	Read Data Stream	
RIO(QBR)	2012	General Area	Smart Key Unit	Actuation Test	
RIO(QBR)	2012	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(QBR)	2012	General Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(QBR)	2012	General Area	Smart Key Unit	Special Function	SMK Status Information
RIO(QBR)	2012	General Area	Smart Key Unit	Special Function	ESCL Status Information
RIO(QBR)	2012	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(QBR)	2012	General Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(QBR)	2012	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
RIO(QBR)	2012	General Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(QBR)	2012	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
RIO(QBR)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(QBR)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(QBR)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(QBR)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(QBR)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
RIO(QBR)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(QBR)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(QBR)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Version Information	
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(UB)	2016	General Area	TCM(Transmission Control Module)	Version Information	
RIO(UB)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(UB)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(UB)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(UB)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
RIO(UB)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(UB)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(UB)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(UB)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(UB)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(UB)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(UB)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(UB)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
RIO(UB)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(UB)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
RIO(UB)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(UB)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(UB)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(UB)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(UB)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(UB)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
RIO(UB)	2016	General Area	AC(Air Conditioning)	Version Information	
RIO(UB)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
RIO(UB)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(UB)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
RIO(UB)	2016	General Area	AC(Air Conditioning)	Actuation Test	
RIO(UB)	2016	General Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
RIO(UB)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
RIO(UB)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(UB)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
RIO(UB)	2016	General Area	BCM(Body Control Module)	Actuation Test	
RIO(UB)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
RIO(UB)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
RIO(UB)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
RIO(UB)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
RIO(UB)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
RIO(UB)	2016	General Area	MDPS(Motor Driven Power Steering)	Actuation Test	
RIO(UB)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
RIO(UB)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
RIO(UB)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(UB)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(UB)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(UB)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(UB)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(UB)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(UB)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(UB)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(UB)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(UB)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(UB)	2016	General Area	Smart Key Unit	Version Information	
RIO(UB)	2016	General Area	Smart Key Unit	Read Fault Code	
RIO(UB)	2016	General Area	Smart Key Unit	Clear Fault Memory	
RIO(UB)	2016	General Area	Smart Key Unit	Read Data Stream	
RIO(UB)	2016	General Area	Smart Key Unit	Actuation Test	
RIO(UB)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(UB)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(UB)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information

model	year	area	system	function	subfunction
RIO(UB)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
RIO(UB)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(UB)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(UB)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
RIO(UB)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(UB)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
RIO(UB)	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
RIO(UB)	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
RIO(UB)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(UB)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(UB)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(UB)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(UB)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(UB)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(UB)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Learning Value Reset After Component Replacement
RIO(UB)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Version Information	
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(UB)	2015	General Area	TCM(Transmission Control Module)	Version Information	
RIO(UB)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(UB)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(UB)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(UB)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
RIO(UB)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(UB)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(UB)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(UB)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(UB)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(UB)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(UB)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(UB)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
RIO(UB)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(UB)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
RIO(UB)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(UB)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(UB)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(UB)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(UB)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
RIO(UB)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(UB)	2015	General Area	AC(Air Conditioning)	Version Information	
RIO(UB)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
RIO(UB)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
RIO(UB)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
RIO(UB)	2015	General Area	AC(Air Conditioning)	Actuation Test	
RIO(UB)	2015	General Area	BCM(Body Control Module)	Version Information	
RIO(UB)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
RIO(UB)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(UB)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
RIO(UB)	2015	General Area	BCM(Body Control Module)	Actuation Test	
RIO(UB)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
RIO(UB)	2015	General Area	Smart Key Unit	Version Information	
RIO(UB)	2015	General Area	Smart Key Unit	Read Fault Code	
RIO(UB)	2015	General Area	Smart Key Unit	Clear Fault Memory	
RIO(UB)	2015	General Area	Smart Key Unit	Read Data Stream	
RIO(UB)	2015	General Area	Smart Key Unit	Actuation Test	
RIO(UB)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(UB)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(UB)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
RIO(UB)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
RIO(UB)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(UB)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(UB)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
RIO(UB)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(UB)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
RIO(UB)	2015	General Area	MDPS(Motor Driven Power Steering)	Version Information	
RIO(UB)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
RIO(UB)	2015	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
RIO(UB)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
RIO(UB)	2015	General Area	MDPS(Motor Driven Power Steering)	Actuation Test	
RIO(UB)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
RIO(UB)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
RIO(UB)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
RIO(UB)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(UB)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(UB)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(UB)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(UB)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(UB)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(UB)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(UB)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(UB)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(UB)	2015	General Area	IMMO(Immobilizer)	Read Fault Code	
RIO(UB)	2015	General Area	IMMO(Immobilizer)	Clear Fault Memory	
RIO(UB)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(UB)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(UB)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(UB)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(UB)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(UB)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(UB)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Learning Value Reset After Component Replacement
RIO(UB)	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(UB)	2014	General Area	TCM(Transmission Control Module)	Version Information	
RIO(UB)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(UB)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(UB)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(UB)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
RIO(UB)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(UB)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(UB)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(UB)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(UB)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(UB)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(UB)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(UB)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
RIO(UB)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(UB)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
RIO(UB)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(UB)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(UB)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(UB)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(UB)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
RIO(UB)	2014	General Area	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
RIO(UB)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
RIO(UB)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(UB)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
RIO(UB)	2014	General Area	AC(Air Conditioning)	Actuation Test	
RIO(UB)	2014	General Area	BCM(Body Control Module)	Version Information	
RIO(UB)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
RIO(UB)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(UB)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
RIO(UB)	2014	General Area	BCM(Body Control Module)	Actuation Test	
RIO(UB)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
RIO(UB)	2014	General Area	Smart Key Unit	Version Information	
RIO(UB)	2014	General Area	Smart Key Unit	Read Fault Code	
RIO(UB)	2014	General Area	Smart Key Unit	Clear Fault Memory	
RIO(UB)	2014	General Area	Smart Key Unit	Read Data Stream	
RIO(UB)	2014	General Area	Smart Key Unit	Actuation Test	
RIO(UB)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(UB)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(UB)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
RIO(UB)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
RIO(UB)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(UB)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(UB)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
RIO(UB)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(UB)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
RIO(UB)	2014	General Area	MDPS(Motor Driven Power Steering)	Version Information	
RIO(UB)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
RIO(UB)	2014	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
RIO(UB)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
RIO(UB)	2014	General Area	MDPS(Motor Driven Power Steering)	Actuation Test	
RIO(UB)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
RIO(UB)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
RIO(UB)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(UB)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(UB)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(UB)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(UB)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(UB)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(UB)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(UB)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(UB)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(UB)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(UB)	2014	General Area	IMMO(Immobilizer)	Read Fault Code	
RIO(UB)	2014	General Area	IMMO(Immobilizer)	Clear Fault Memory	
RIO(UB)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(UB)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(UB)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(UB)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(UB)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(UB)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(UB)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
RIO(UB)	2014	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Version Information	
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(UB)	2013	General Area	TCM(Transmission Control Module)	Version Information	
RIO(UB)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(UB)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(UB)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(UB)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
RIO(UB)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(UB)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(UB)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(UB)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(UB)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(UB)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(UB)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(UB)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
RIO(UB)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(UB)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
RIO(UB)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(UB)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(UB)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(UB)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(UB)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
RIO(UB)	2013	General Area	AC(Air Conditioning)	Version Information	
RIO(UB)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
RIO(UB)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(UB)	2013	General Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
RIO(UB)	2013	General Area	AC(Air Conditioning)	Actuation Test	
RIO(UB)	2013	General Area	BCM(Body Control Module)	Version Information	
RIO(UB)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
RIO(UB)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(UB)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
RIO(UB)	2013	General Area	BCM(Body Control Module)	Actuation Test	
RIO(UB)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
RIO(UB)	2013	General Area	Smart Key Unit	Version Information	
RIO(UB)	2013	General Area	Smart Key Unit	Read Fault Code	
RIO(UB)	2013	General Area	Smart Key Unit	Clear Fault Memory	
RIO(UB)	2013	General Area	Smart Key Unit	Read Data Stream	
RIO(UB)	2013	General Area	Smart Key Unit	Actuation Test	
RIO(UB)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(UB)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(UB)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information
RIO(UB)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
RIO(UB)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(UB)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(UB)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
RIO(UB)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(UB)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
RIO(UB)	2013	General Area	MDPS(Motor Driven Power Steering)	Version Information	
RIO(UB)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
RIO(UB)	2013	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
RIO(UB)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
RIO(UB)	2013	General Area	MDPS(Motor Driven Power Steering)	Actuation Test	
RIO(UB)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
RIO(UB)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
RIO(UB)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(UB)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
RIO(UB)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(UB)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(UB)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(UB)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(UB)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(UB)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(UB)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(UB)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(UB)	2013	General Area	IMMO(Immobilizer)	Read Fault Code	
RIO(UB)	2013	General Area	IMMO(Immobilizer)	Clear Fault Memory	
RIO(UB)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(UB)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(UB)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(UB)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(UB)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(UB)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(UB)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
RIO(UB)	2013	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Version Information	
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine

model	year	area	system	function	subfunction
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
RIO(UB)	2012	General Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(UB)	2012	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(UB)	2012	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(UB)	2012	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(UB)	2012	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(UB)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
RIO(UB)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(UB)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
RIO(UB)	2012	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(UB)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(UB)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(UB)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(UB)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
RIO(UB)	2012	General Area	AC(Air Conditioning)	Version Information	
RIO(UB)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
RIO(UB)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(UB)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
RIO(UB)	2012	General Area	AC(Air Conditioning)	Actuation Test	
RIO(UB)	2012	General Area	BCM(Body Control Module)	Version Information	
RIO(UB)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
RIO(UB)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(UB)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
RIO(UB)	2012	General Area	BCM(Body Control Module)	Actuation Test	
RIO(UB)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
RIO(UB)	2012	General Area	Smart Key Unit	Version Information	
RIO(UB)	2012	General Area	Smart Key Unit	Read Fault Code	
RIO(UB)	2012	General Area	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
RIO(UB)	2012	General Area	Smart Key Unit	Read Data Stream	
RIO(UB)	2012	General Area	Smart Key Unit	Actuation Test	
RIO(UB)	2012	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(UB)	2012	General Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(UB)	2012	General Area	Smart Key Unit	Special Function	SMK Status Information
RIO(UB)	2012	General Area	Smart Key Unit	Special Function	ESCL Status Information
RIO(UB)	2012	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(UB)	2012	General Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(UB)	2012	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
RIO(UB)	2012	General Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(UB)	2012	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
RIO(UB)	2012	General Area	MDPS(Motor Driven Power Steering)	Version Information	
RIO(UB)	2012	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
RIO(UB)	2012	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
RIO(UB)	2012	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
RIO(UB)	2012	General Area	MDPS(Motor Driven Power Steering)	Actuation Test	
RIO(UB)	2012	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
RIO(UB)	2012	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
RIO(UB)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(UB)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(UB)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(UB)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(UB)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(UB)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(UB)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(UB)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(UB)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(UB)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(UB)	2012	General Area	IMMO(Immobilizer)	Read Fault Code	
RIO(UB)	2012	General Area	IMMO(Immobilizer)	Clear Fault Memory	

model	year	area	system	function	subfunction
RIO(UB)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
RIO(UB)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(UB)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
RIO(UB)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(UB)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(UB)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(UB)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(UB)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
RIO(UB)	2012	General Area	TCM(Transmission Control Module)	Version Information	
RIO(UB)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(UB)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(UB)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(UB)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
RIO(UB)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(UB)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sephia II(FB22)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Sephia II(FB22)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia II(FB22)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Sephia II(FB22)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia II(FB22)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia II(FB22)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia II(FB22)	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sephia II(FB22)	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sephia II(FB22)	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sephia II(FB22)	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sephia II(FB22)	2004	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	

model	year	area	system	function	subfunction
Sephia II(FB22)	2004	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia II(FB22)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Sephia II(FB22)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia II(FB22)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Sephia II(FB22)	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia II(FB22)	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia II(FB22)	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia II(FB22)	2003	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sephia II(FB22)	2003	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sephia II(FB22)	2003	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sephia II(FB22)	2003	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sephia II(FB22)	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia II(FB22)	2003	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia II(FB22)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Sephia II(FB22)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia II(FB22)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Sephia II(FB22)	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia II(FB22)	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia II(FB22)	2002	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia II(FB22)	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sephia II(FB22)	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sephia II(FB22)	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sephia II(FB22)	2002	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sephia II(FB22)	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia II(FB22)	2002	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia II(FB22)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Sephia II(FB22)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia II(FB22)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Sephia II(FB22)	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia II(FB22)	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sephia II(FB22)	2001	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia II(FB22)	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sephia II(FB22)	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sephia II(FB22)	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sephia II(FB22)	2001	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sephia II(FB22)	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia II(FB22)	2001	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia II(FB22)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Sephia II(FB22)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia II(FB22)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Sephia II(FB22)	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia II(FB22)	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia II(FB22)	2000	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia II(FB22)	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sephia II(FB22)	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sephia II(FB22)	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sephia II(FB22)	2000	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sephia II(FB22)	2000	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sephia II(FB22)	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia II(FB22)	2000	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia II(FB22)	2000	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sephia II(FB22)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Sephia II(FB22)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia II(FB22)	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Sephia II(FB22)	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia II(FB22)	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia II(FB22)	1999	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia II(FB22)	1999	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sephia II(FB22)	1999	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sephia II(FB22)	1999	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	

model	year	area	system	function	subfunction
Sephia II(FB22)	1999	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sephia II(FB22)	1999	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sephia II(FB22)	1999	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia II(FB22)	1999	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia II(FB22)	1999	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sephia II(FB22)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Sephia II(FB22)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia II(FB22)	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Sephia II(FB22)	1998	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia II(FB22)	1998	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia II(FB22)	1998	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia II(FB22)	1998	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sephia II(FB22)	1998	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sephia II(FB22)	1998	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sephia II(FB22)	1998	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sephia II(FB22)	1998	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sephia II(FB22)	1998	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia II(FB22)	1998	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia II(FB22)	1998	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sephia(FB12)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Sephia(FB12)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB12)	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB12)	1998	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia(FB12)	1998	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia(FB12)	1998	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB12)	1998	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia(FB12)	1997	General Area	ECM(Engine Control Module)	Read Fault Code	
Sephia(FB12)	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB12)	1997	General Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB12)	1997	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sephia(FB12)	1997	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia(FB12)	1997	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB12)	1997	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia(FB12)	1996	General Area	ECM(Engine Control Module)	Read Fault Code	
Sephia(FB12)	1996	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB12)	1996	General Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB12)	1996	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia(FB12)	1996	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia(FB12)	1996	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB12)	1996	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia(FB12)	1995	General Area	ECM(Engine Control Module)	Read Fault Code	
Sephia(FB12)	1995	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB12)	1995	General Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB12)	1995	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia(FB12)	1995	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia(FB12)	1995	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB12)	1995	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Shuma/Spectra(S	2004	General Area	ECM(Engine Control Module)	Version Information	
Shuma/Spectra(S	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Shuma/Spectra(S	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Shuma/Spectra(S	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Shuma/Spectra(S	2004	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Shuma/Spectra(S	2004	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Shuma/Spectra(S	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Shuma/Spectra(S	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Shuma/Spectra(S	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
Shuma/Spectra(S	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Shuma/Spectra(S	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Shuma/Spectra(S	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Shuma/Spectra(S	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	

model	year	area	system	function	subfunction
Shuma/Spectra(S	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Shuma/Spectra(S	2004	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Shuma/Spectra(S	2004	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Shuma/Spectra(S	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Shuma/Spectra(S	2004	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Shuma/Spectra(S	2004	General Area	IMMO(Immobilizer)	Read Data Stream	
Shuma/Spectra(S	2004	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Shuma/Spectra(S	2004	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Shuma/Spectra(S	2004	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Shuma/Spectra(S	2004	General Area	IMMO(Immobilizer)	Special Function	Teaching
Shuma/Spectra(S	2004	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Shuma/Spectra(S	2003	General Area	ECM(Engine Control Module)	Version Information	
Shuma/Spectra(S	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Shuma/Spectra(S	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Shuma/Spectra(S	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Shuma/Spectra(S	2003	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Shuma/Spectra(S	2003	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Shuma/Spectra(S	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
Shuma/Spectra(S	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Shuma/Spectra(S	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	
Shuma/Spectra(S	2003	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Shuma/Spectra(S	2003	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Shuma/Spectra(S	2003	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Shuma/Spectra(S	2003	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Shuma/Spectra(S	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Shuma/Spectra(S	2003	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Shuma/Spectra(S	2003	General Area	IMMO(Immobilizer)	Read Data Stream	
Shuma/Spectra(S	2003	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Shuma/Spectra(S	2003	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Shuma/Spectra(S	2003	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Shuma/Spectra(S	2003	General Area	IMMO(Immobilizer)	Special Function	Teaching
Shuma/Spectra(S	2003	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Shuma/Spectra(S	2002	General Area	ECM(Engine Control Module)	Version Information	
Shuma/Spectra(S	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Shuma/Spectra(S	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Shuma/Spectra(S	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Shuma/Spectra(S	2002	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Shuma/Spectra(S	2002	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Shuma/Spectra(S	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	
Shuma/Spectra(S	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Shuma/Spectra(S	2002	General Area	TCM(Transmission Control Module)	Read Data Stream	
Shuma/Spectra(S	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Shuma/Spectra(S	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Shuma/Spectra(S	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Shuma/Spectra(S	2002	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Shuma/Spectra(S	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Shuma/Spectra(S	2002	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Shuma/Spectra(S	2002	General Area	IMMO(Immobilizer)	Read Data Stream	
Shuma/Spectra(S	2002	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Shuma/Spectra(S	2002	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Shuma/Spectra(S	2002	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Shuma/Spectra(S	2002	General Area	IMMO(Immobilizer)	Special Function	Teaching
Shuma/Spectra(S	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Shuma/Spectra(S	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Shuma/Spectra(S	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Shuma/Spectra(S	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Shuma/Spectra(S	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Shuma/Spectra(S	2001	General Area	TCM(Transmission Control Module)	Read Data Stream	
Shuma/Spectra(S	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Shuma/Spectra(S	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Shuma/Spectra(S	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Shuma/Spectra(S	2001	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Shuma/Spectra(S	2001	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Shuma/Spectra(S	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Shuma/Spectra(S	2001	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Shuma/Spectra(S	2001	General Area	ECM(Engine Control Module)	Version Information	
Shuma/Spectra(S	2001	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Shuma/Spectra(S	2001	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Shuma/Spectra(S	2001	General Area	IMMO(Immobilizer)	Read Data Stream	
Shuma/Spectra(S	2001	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Shuma/Spectra(S	2001	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Shuma/Spectra(S	2001	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Shuma/Spectra(S	2001	General Area	IMMO(Immobilizer)	Special Function	Teaching
Shuma/Spectra(S	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Shuma/Spectra(S	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Shuma/Spectra(S	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Shuma/Spectra(S	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Shuma/Spectra(S	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Shuma/Spectra(S	2000	General Area	TCM(Transmission Control Module)	Read Data Stream	
Shuma/Spectra(S	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Shuma/Spectra(S	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Shuma/Spectra(S	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Shuma/Spectra(S	2000	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Shuma/Spectra(S	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Shuma/Spectra(S	2000	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Shuma/Spectra(S	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Shuma/Spectra(S	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Shuma/Spectra(S	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Shuma/Spectra(S	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	
Shuma/Spectra(S	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Shuma/Spectra(S)	1999	General Area	TCM(Transmission Control Module)	Read Data Stream	
Shuma/Spectra(S)	1999	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Shuma/Spectra(S)	1999	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Shuma/Spectra(S)	1999	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Shuma/Spectra(S)	1999	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Shuma/Spectra(S)	1999	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Shuma/Spectra(S)	1999	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(BL)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2010	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Sorento(BL)	2010	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2010	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2010	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2010	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2010	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Sorento(BL)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(BL)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Sorento(BL)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Sorento(BL)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2010	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sorento(BL)	2010	General Area	AC(Air Conditioning)	Version Information	
Sorento(BL)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(BL)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(BL)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(BL)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(BL)	2010	General Area	BCM(Body Control Module)	Version Information	
Sorento(BL)	2010	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(BL)	2010	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(BL)	2010	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2010	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2010	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2010	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2010	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2010	General Area	4WD Control	Version Information	
Sorento(BL)	2010	General Area	4WD Control	Read Fault Code	
Sorento(BL)	2010	General Area	4WD Control	Clear Fault Memory	
Sorento(BL)	2010	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Sorento(BL)	2010	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Sorento(BL)	2010	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Sorento(BL)	2010	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Sorento(BL)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(BL)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(BL)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Sorento(BL)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(BL)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(BL)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(BL)	2010	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(BL)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(BL)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(BL)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2009	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Sorento(BL)	2009	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2009	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2009	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2009	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2009	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration

model	year	area	system	function	subfunction
Sorento(BL)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(BL)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Sorento(BL)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2009	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2009	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2009	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sorento(BL)	2009	General Area	AC(Air Conditioning)	Version Information	
Sorento(BL)	2009	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(BL)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(BL)	2009	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(BL)	2009	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(BL)	2009	General Area	BCM(Body Control Module)	Version Information	
Sorento(BL)	2009	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(BL)	2009	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(BL)	2009	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2009	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2009	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2009	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2009	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2009	General Area	4WD Control	Version Information	
Sorento(BL)	2009	General Area	4WD Control	Read Fault Code	
Sorento(BL)	2009	General Area	4WD Control	Clear Fault Memory	
Sorento(BL)	2009	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Sorento(BL)	2009	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Sorento(BL)	2009	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Sorento(BL)	2009	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Sorento(BL)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Sorento(BL)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(BL)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(BL)	2009	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(BL)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(BL)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(BL)	2009	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(BL)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(BL)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(BL)	2008	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2008	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Sorento(BL)	2008	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2008	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2008	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(BL)	2008	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2008	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Sorento(BL)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(BL)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Sorento(BL)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2008	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2008	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2008	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sorento(BL)	2008	General Area	AC(Air Conditioning)	Version Information	
Sorento(BL)	2008	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(BL)	2008	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(BL)	2008	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(BL)	2008	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(BL)	2008	General Area	BCM(Body Control Module)	Version Information	
Sorento(BL)	2008	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(BL)	2008	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(BL)	2008	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2008	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2008	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2008	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2008	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2008	General Area	4WD Control	Version Information	
Sorento(BL)	2008	General Area	4WD Control	Read Fault Code	
Sorento(BL)	2008	General Area	4WD Control	Clear Fault Memory	
Sorento(BL)	2008	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Sorento(BL)	2008	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Sorento(BL)	2008	General Area	FFH(Fuel Fired Heater)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(BL)	2008	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Sorento(BL)	2008	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2008	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(BL)	2008	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(BL)	2008	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2008	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(BL)	2008	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(BL)	2008	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sorento(BL)	2008	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(BL)	2008	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(BL)	2008	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2008	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(BL)	2008	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(BL)	2007	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2007	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset

model	year	area	system	function	subfunction
Sorento(BL)	2007	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2007	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2007	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2007	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2007	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Sorento(BL)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(BL)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Sorento(BL)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2007	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2007	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2007	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sorento(BL)	2007	General Area	AC(Air Conditioning)	Version Information	
Sorento(BL)	2007	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(BL)	2007	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(BL)	2007	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(BL)	2007	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(BL)	2007	General Area	BCM(Body Control Module)	Version Information	
Sorento(BL)	2007	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(BL)	2007	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(BL)	2007	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2007	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2007	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2007	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2007	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2007	General Area	4WD Control	Version Information	
Sorento(BL)	2007	General Area	4WD Control	Read Fault Code	
Sorento(BL)	2007	General Area	4WD Control	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(BL)	2007	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Sorento(BL)	2007	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Sorento(BL)	2007	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Sorento(BL)	2007	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Sorento(BL)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(BL)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(BL)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(BL)	2007	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(BL)	2007	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sorento(BL)	2007	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(BL)	2007	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(BL)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2007	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(BL)	2007	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(BL)	2006	General Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2006	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(BL)	2006	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sorento(BL)	2006	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(BL)	2006	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sorento(BL)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2006	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Sorento(BL)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration
Sorento(BL)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(BL)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Sorento(BL)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2006	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2006	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2006	General Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sorento(BL)	2006	General Area	AC(Air Conditioning)	Version Information	
Sorento(BL)	2006	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(BL)	2006	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(BL)	2006	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(BL)	2006	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(BL)	2006	General Area	BCM(Body Control Module)	Version Information	
Sorento(BL)	2006	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(BL)	2006	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(BL)	2006	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2006	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2006	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2006	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2006	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	

model	year	area	system	function	subfunction
Sorento(BL)	2006	General Area	4WD Control	Version Information	
Sorento(BL)	2006	General Area	4WD Control	Read Fault Code	
Sorento(BL)	2006	General Area	4WD Control	Clear Fault Memory	
Sorento(BL)	2006	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Sorento(BL)	2006	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Sorento(BL)	2006	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Sorento(BL)	2006	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Sorento(BL)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(BL)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(BL)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(BL)	2006	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(BL)	2006	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(BL)	2006	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Sorento(BL)	2006	General Area	Driveshaft	Read Fault Code	
Sorento(BL)	2006	General Area	Driveshaft	Clear Fault Memory	
Sorento(BL)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sorento(BL)	2005	General Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2005	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2005	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(BL)	2005	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Sorento(BL)	2005	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(BL)	2005	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2005	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2005	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2005	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(BL)	2005	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Sorento(BL)	2005	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2005	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2005	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2005	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2005	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2005	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2005	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2005	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2005	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2005	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2005	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2005	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2005	General Area	Driveshaft	Read Fault Code	
Sorento(BL)	2005	General Area	Driveshaft	Clear Fault Memory	
Sorento(BL)	2005	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Sorento(BL)	2005	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Sorento(BL)	2005	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Sorento(BL)	2005	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Sorento(BL)	2005	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2005	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(BL)	2005	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(BL)	2005	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2005	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(BL)	2005	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sorento(BL)	2004	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Sorento(BL)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2004	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2004	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(BL)	2004	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Sorento(BL)	2004	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(BL)	2004	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2004	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2004	General Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Sorento(BL)	2004	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2004	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2004	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2004	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2004	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2004	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2004	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2004	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2004	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2004	General Area	Driveshaft	Read Fault Code	
Sorento(BL)	2004	General Area	Driveshaft	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(BL)	2004	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Sorento(BL)	2004	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Sorento(BL)	2004	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Sorento(BL)	2004	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Sorento(BL)	2004	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2004	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(BL)	2004	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(BL)	2004	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2004	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(BL)	2004	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2004	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sorento(BL)	2003	General Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2003	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2003	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Sorento(BL)	2003	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(BL)	2003	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2003	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2003	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2003	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2003	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2003	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2003	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2003	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2003	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	

model	year	area	system	function	subfunction
Sorento(BL)	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2003	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2003	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2003	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2003	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2003	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2003	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2003	General Area	Driveshaft	Read Fault Code	
Sorento(BL)	2003	General Area	Driveshaft	Clear Fault Memory	
Sorento(BL)	2003	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Sorento(BL)	2003	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Sorento(BL)	2003	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Sorento(BL)	2003	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Sorento(BL)	2003	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2003	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(BL)	2003	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(BL)	2003	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2003	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(BL)	2003	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2003	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sorento(BL)	2002	General Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2002	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2002	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Sorento(BL)	2002	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(BL)	2002	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sorento(BL)	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2002	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2002	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2002	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2002	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2002	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2002	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2002	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2002	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2002	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2002	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2002	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2002	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2002	General Area	Driveshaft	Read Fault Code	
Sorento(BL)	2002	General Area	Driveshaft	Clear Fault Memory	
Sorento(BL)	2002	General Area	FFH(Fuel Fired Heater)	Read Fault Code	
Sorento(BL)	2002	General Area	FFH(Fuel Fired Heater)	Clear Fault Memory	
Sorento(BL)	2002	General Area	FFH(Fuel Fired Heater)	Read Data Stream	
Sorento(BL)	2002	General Area	FFH(Fuel Fired Heater)	Actuation Test	
Sorento(BL)	2002	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2002	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(BL)	2002	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(BL)	2002	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2002	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(BL)	2002	General Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Sorento(BL)	2002	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sorento(UM)	2017	General Area	ECM(Engine Control Module)	Version Information	
Sorento(UM)	2017	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(UM)	2017	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(UM)	2017	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(UM)	2017	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(UM)	2017	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(UM)	2017	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(UM)	2017	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(UM)	2017	General Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sorento(UM)	2017	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(UM)	2017	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(UM)	2017	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(UM)	2017	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(UM)	2017	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(UM)	2017	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(UM)	2017	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(UM)	2017	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(UM)	2017	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(UM)	2017	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(UM)	2017	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(UM)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sorento(UM)	2017	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(UM)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(UM)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(UM)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(UM)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sorento(UM)	2017	General Area	SRS(Supplemental Inflatable Restraint	Version Information	

model	year	area	system	function	subfunction
Sorento(UM)	2017	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(UM)	2017	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(UM)	2017	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(UM)	2017	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sorento(UM)	2017	General Area	AC(Air Conditioning)	Version Information	
Sorento(UM)	2017	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(UM)	2017	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(UM)	2017	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(UM)	2017	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(UM)	2017	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sorento(UM)	2017	General Area	BCM(Body Control Module)	Version Information	
Sorento(UM)	2017	General Area	BCM(Body Control Module)	Read Fault Code	
Sorento(UM)	2017	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sorento(UM)	2017	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(UM)	2017	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(UM)	2017	General Area	BCM(Body Control Module)	Special Function	User Option
Sorento(UM)	2017	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sorento(UM)	2017	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sorento(UM)	2017	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sorento(UM)	2017	General Area	PTG(Power Tail Gate)	Version Information	
Sorento(UM)	2017	General Area	PTG(Power Tail Gate)	Read Fault Code	
Sorento(UM)	2017	General Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sorento(UM)	2017	General Area	PTG(Power Tail Gate)	Read Data Stream	
Sorento(UM)	2017	General Area	PTG(Power Tail Gate)	Special Function	User Option
Sorento(UM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(UM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(UM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(UM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(UM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(UM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
Sorento(UM)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(UM)	2017	General Area	Head Lamp	Version Information	
Sorento(UM)	2017	General Area	Head Lamp	Read Fault Code	
Sorento(UM)	2017	General Area	Head Lamp	Clear Fault Memory	
Sorento(UM)	2017	General Area	Head Lamp	Read Data Stream	
Sorento(UM)	2017	General Area	Head Lamp	Actuation Test	
Sorento(UM)	2017	General Area	Head Lamp	Special Function	Parameter Download
Sorento(UM)	2017	General Area	Head Lamp	Special Function	Calibration
Sorento(UM)	2017	General Area	Head Lamp	Special Function	Headlamp Leveling
Sorento(UM)	2017	General Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Sorento(UM)	2017	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sorento(UM)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sorento(UM)	2017	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sorento(UM)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sorento(UM)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	Steering Angle Sensor Calibration
Sorento(UM)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sorento(UM)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Sorento(UM)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Sorento(UM)	2017	General Area	Driveshaft	Version Information	
Sorento(UM)	2017	General Area	Driveshaft	Read Fault Code	
Sorento(UM)	2017	General Area	Driveshaft	Clear Fault Memory	
Sorento(UM)	2017	General Area	Driveshaft	Read Data Stream	
Sorento(UM)	2017	General Area	Driveshaft	Actuation Test	
Sorento(UM)	2017	General Area	Driveshaft	Special Function	Clutch Learning Reset
Sorento(UM)	2017	General Area	Driveshaft	Special Function	Clutch Learning Read
Sorento(UM)	2017	General Area	Driveshaft	Special Function	Clutch Learning Write
Sorento(UM)	2017	General Area	Smart Key Unit	Version Information	
Sorento(UM)	2017	General Area	Smart Key Unit	Read Fault Code	
Sorento(UM)	2017	General Area	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(UM)	2017	General Area	Smart Key Unit	Read Data Stream	
Sorento(UM)	2017	General Area	Smart Key Unit	Actuation Test	
Sorento(UM)	2017	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sorento(UM)	2017	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sorento(UM)	2017	General Area	Smart Key Unit	Special Function	SMK Status Information
Sorento(UM)	2017	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sorento(UM)	2017	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sorento(UM)	2017	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sorento(UM)	2017	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sorento(UM)	2017	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sorento(UM)	2017	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sorento(UM)	2017	General Area	SCC(Smart Cruise Control)	Version Information	
Sorento(UM)	2017	General Area	SCC(Smart Cruise Control)	Read Fault Code	
Sorento(UM)	2017	General Area	SCC(Smart Cruise Control)	Clear Fault Memory	
Sorento(UM)	2017	General Area	SCC(Smart Cruise Control)	Read Data Stream	
Sorento(UM)	2017	General Area	SCC(Smart Cruise Control)	Special Function	SCC Alignment
Sorento(UM)	2017	General Area	LDWS(Lane Departure Warning System)	Version Information	
Sorento(UM)	2017	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sorento(UM)	2017	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sorento(UM)	2017	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sorento(UM)	2017	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sorento(UM)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sorento(UM)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Sorento(UM)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Sorento(UM)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sorento(UM)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Sorento(UM)	2017	General Area	SVMS(Surround View Monitor System)	Version Information	
Sorento(UM)	2017	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Sorento(UM)	2017	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Sorento(UM)	2017	General Area	SVMS(Surround View Monitor System)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(UM)	2017	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Sorento(UM)	2017	General Area	Amplifier	Version Information	
Sorento(UM)	2017	General Area	Amplifier	Special Function	AMP Operation Test
Sorento(UM)	2017	General Area	Central Gateway	Version Information	
Sorento(UM)	2017	General Area	Central Gateway	Read Fault Code	
Sorento(UM)	2017	General Area	Central Gateway	Clear Fault Memory	
Sorento(UM)	2017	General Area	Central Gateway	Special Function	Erase Network Configuration
Sorento(UM)	2017	General Area	Immobilizer	Read Fault Code	
Sorento(UM)	2017	General Area	Immobilizer	Clear Fault Memory	
Sorento(UM)	2017	General Area	Immobilizer	Read Data Stream	
Sorento(UM)	2017	General Area	Immobilizer	Special Function	Password Teaching/Changing
Sorento(UM)	2017	General Area	Immobilizer	Special Function	EMS Neutral Mode
Sorento(UM)	2017	General Area	Immobilizer	Special Function	Limp Home Mode
Sorento(UM)	2017	General Area	Immobilizer	Special Function	Teaching
Sorento(UM)	2017	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(UM)	2017	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Version Information	
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(UM)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(UM)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(UM)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(UM)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(UM)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(UM)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(UM)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(UM)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(UM)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(UM)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(UM)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(UM)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(UM)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(UM)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(UM)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(UM)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sorento(UM)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sorento(UM)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(UM)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(UM)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(UM)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(UM)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sorento(UM)	2016	General Area	AC(Air Conditioning)	Version Information	
Sorento(UM)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(UM)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(UM)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(UM)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(UM)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sorento(UM)	2016	General Area	BCM(Body Control Module)	Version Information	
Sorento(UM)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Sorento(UM)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(UM)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(UM)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(UM)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Sorento(UM)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sorento(UM)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sorento(UM)	2016	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sorento(UM)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sorento(UM)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sorento(UM)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sorento(UM)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sorento(UM)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Sorento(UM)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Sorento(UM)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sorento(UM)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Sorento(UM)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Sorento(UM)	2016	General Area	Driveshaft	Version Information	
Sorento(UM)	2016	General Area	Driveshaft	Read Fault Code	
Sorento(UM)	2016	General Area	Driveshaft	Clear Fault Memory	
Sorento(UM)	2016	General Area	Driveshaft	Read Data Stream	
Sorento(UM)	2016	General Area	Driveshaft	Actuation Test	
Sorento(UM)	2016	General Area	Driveshaft	Special Function	Clutch Learning Reset
Sorento(UM)	2016	General Area	Driveshaft	Special Function	Clutch Learning Read
Sorento(UM)	2016	General Area	Driveshaft	Special Function	Clutch Learning Write
Sorento(UM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sorento(UM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sorento(UM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sorento(UM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sorento(UM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sorento(UM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Sorento(UM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sorento(UM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Sorento(UM)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Sorento(UM)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(UM)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(UM)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(UM)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(UM)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(UM)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(UM)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(UM)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(UM)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(UM)	2016	General Area	Smart Key Unit	Version Information	
Sorento(UM)	2016	General Area	Smart Key Unit	Read Fault Code	
Sorento(UM)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Sorento(UM)	2016	General Area	Smart Key Unit	Read Data Stream	
Sorento(UM)	2016	General Area	Smart Key Unit	Actuation Test	
Sorento(UM)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sorento(UM)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sorento(UM)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Sorento(UM)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sorento(UM)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sorento(UM)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sorento(UM)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sorento(UM)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sorento(UM)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sorento(UM)	2016	General Area	CCS(Cruise Control System)	Version Information	
Sorento(UM)	2016	General Area	CCS(Cruise Control System)	Read Fault Code	
Sorento(UM)	2016	General Area	CCS(Cruise Control System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(UM)	2016	General Area	CCS(Cruise Control System)	Read Data Stream	
Sorento(UM)	2016	General Area	CCS(Cruise Control System)	Special Function	SCC Alignment
Sorento(UM)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Sorento(UM)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sorento(UM)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sorento(UM)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sorento(UM)	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sorento(UM)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sorento(UM)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Sorento(UM)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sorento(UM)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Sorento(UM)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Sorento(UM)	2016	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sorento(UM)	2016	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sorento(UM)	2016	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sorento(UM)	2016	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sorento(UM)	2016	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sorento(UM)	2016	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sorento(UM)	2016	General Area	SVMS(Surround View Monitor System)	Version Information	
Sorento(UM)	2016	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Sorento(UM)	2016	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Sorento(UM)	2016	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Sorento(UM)	2016	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Sorento(UM)	2016	General Area	AHS(Active Hood System)	Version Information	
Sorento(UM)	2016	General Area	AHS(Active Hood System)	Read Fault Code	
Sorento(UM)	2016	General Area	AHS(Active Hood System)	Clear Fault Memory	
Sorento(UM)	2016	General Area	Amplifier	Special Function	AMP Operation Test
Sorento(UM)	2016	General Area	Central Gateway	Version Information	
Sorento(UM)	2016	General Area	Central Gateway	Read Fault Code	
Sorento(UM)	2016	General Area	Central Gateway	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(UM)	2016	General Area	Central Gateway	Special Function	Erase Network Configuration
Sorento(UM)	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
Sorento(UM)	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sorento(UM)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(UM)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(UM)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(UM)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(UM)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(UM)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(UM)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sorento(UM)	2016	General Area	Telematics Unit	Version Information	
Sorento(UM)	2016	General Area	Telematics Unit	Read Fault Code	
Sorento(UM)	2016	General Area	Telematics Unit	Clear Fault Memory	
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(UM)	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Version Information	
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(UM)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(UM)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(UM)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(UM)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(UM)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(UM)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(UM)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(UM)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(UM)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(UM)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(UM)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(UM)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(UM)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(UM)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(UM)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(UM)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sorento(UM)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sorento(UM)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(UM)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(UM)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(UM)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(UM)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sorento(UM)	2015	General Area	AC(Air Conditioning)	Version Information	
Sorento(UM)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(UM)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(UM)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(UM)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(UM)	2015	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sorento(UM)	2015	General Area	BCM(Body Control Module)	Version Information	
Sorento(UM)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Sorento(UM)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sorento(UM)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(UM)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(UM)	2015	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sorento(UM)	2015	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sorento(UM)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Sorento(UM)	2015	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sorento(UM)	2015	General Area	Smart Key Unit	Version Information	
Sorento(UM)	2015	General Area	Smart Key Unit	Read Fault Code	
Sorento(UM)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Sorento(UM)	2015	General Area	Smart Key Unit	Read Data Stream	
Sorento(UM)	2015	General Area	Smart Key Unit	Actuation Test	
Sorento(UM)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sorento(UM)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sorento(UM)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Sorento(UM)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sorento(UM)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sorento(UM)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sorento(UM)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sorento(UM)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sorento(UM)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Sorento(UM)	2015	General Area	Motor Driven Power Steering(Mobis)	Version Information	
Sorento(UM)	2015	General Area	Motor Driven Power Steering(Mobis)	Read Fault Code	
Sorento(UM)	2015	General Area	Motor Driven Power Steering(Mobis)	Clear Fault Memory	
Sorento(UM)	2015	General Area	Motor Driven Power Steering(Mobis)	Read Data Stream	
Sorento(UM)	2015	General Area	Motor Driven Power Steering(Mobis)	Read Freeze Frame	
Sorento(UM)	2015	General Area	Motor Driven Power Steering(Mobis)	Special Function	ASP Calibration
Sorento(UM)	2015	General Area	Motor Driven Power Steering(Mobis)	Special Function	EPS Type Recognition
Sorento(UM)	2015	General Area	Motor Driven Power Steering(Mobis)	Special Function	Power Steering ECU
Sorento(UM)	2015	General Area	Motor Driven Power Steering(Mobis)	Special Function	Power Steering Motor
Sorento(UM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(UM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(UM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(UM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(UM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(UM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(UM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(UM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(UM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(UM)	2015	General Area	AHS(Active Hood System)	Version Information	
Sorento(UM)	2015	General Area	AHS(Active Hood System)	Read Fault Code	
Sorento(UM)	2015	General Area	AHS(Active Hood System)	Clear Fault Memory	
Sorento(UM)	2015	General Area	Head Lamp	Version Information	
Sorento(UM)	2015	General Area	Head Lamp	Read Fault Code	
Sorento(UM)	2015	General Area	Head Lamp	Clear Fault Memory	
Sorento(UM)	2015	General Area	Head Lamp	Read Data Stream	
Sorento(UM)	2015	General Area	Head Lamp	Actuation Test	
Sorento(UM)	2015	General Area	Head Lamp	Special Function	Parameter Download
Sorento(UM)	2015	General Area	Head Lamp	Special Function	Calibration
Sorento(UM)	2015	General Area	Head Lamp	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Sorento(UM)	2015	General Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Sorento(UM)	2015	General Area	4WD Control	Version Information	
Sorento(UM)	2015	General Area	4WD Control	Read Fault Code	
Sorento(UM)	2015	General Area	4WD Control	Clear Fault Memory	
Sorento(UM)	2015	General Area	4WD Control	Read Data Stream	
Sorento(UM)	2015	General Area	4WD Control	Actuation Test	
Sorento(UM)	2015	General Area	4WD Control	Special Function	Clutch Learning Reset
Sorento(UM)	2015	General Area	4WD Control	Special Function	Clutch Learning Read
Sorento(UM)	2015	General Area	4WD Control	Special Function	Clutch Learning Write
Sorento(UM)	2015	General Area	LDWS(Lane Departure Warning System)	Version Information	
Sorento(UM)	2015	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sorento(UM)	2015	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sorento(UM)	2015	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sorento(UM)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sorento(UM)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Sorento(UM)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Sorento(UM)	2015	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sorento(UM)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sorento(UM)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Sorento(UM)	2015	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sorento(UM)	2015	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sorento(UM)	2015	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sorento(UM)	2015	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sorento(UM)	2015	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sorento(UM)	2015	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sorento(UM)	2015	General Area	PTG(Power Tail Gate)	Version Information	
Sorento(UM)	2015	General Area	PTG(Power Tail Gate)	Read Fault Code	
Sorento(UM)	2015	General Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sorento(UM)	2015	General Area	PTG(Power Tail Gate)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(UM)	2015	General Area	PTG(Power Tail Gate)	Special Function	User Option
Sorento(UM)	2015	General Area	IMMO(Immobilizer)	Read Fault Code	
Sorento(UM)	2015	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sorento(UM)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(UM)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(UM)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(UM)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(UM)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(UM)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(UM)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(UM)	2015	General Area	CCS(Cruise Control System)	Version Information	
Sorento(UM)	2015	General Area	CCS(Cruise Control System)	Read Fault Code	
Sorento(UM)	2015	General Area	CCS(Cruise Control System)	Clear Fault Memory	
Sorento(UM)	2015	General Area	CCS(Cruise Control System)	Read Data Stream	
Sorento(UM)	2015	General Area	CCS(Cruise Control System)	Special Function	SCC Alignment
Sorento(UM)	2015	General Area	Central Gateway	Version Information	
Sorento(UM)	2015	General Area	Central Gateway	Read Fault Code	
Sorento(UM)	2015	General Area	Central Gateway	Clear Fault Memory	
Sorento(UM)	2015	General Area	Central Gateway	Special Function	Erase Network Configuration
Sorento(UM)	2015	General Area	SVMS(Surround View Monitor System)	Version Information	
Sorento(UM)	2015	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Sorento(UM)	2015	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Sorento(UM)	2015	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Sorento(UM)	2015	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values

model	year	area	system	function	subfunction
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(UM)	2015	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(XM)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(XM)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(XM)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(XM)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2015	General Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2015	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2015	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2015	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(XM)	2015	General Area	ESP(Electronic Stability Program)	Actuation Test	

model	year	area	system	function	subfunction
Sorento(XM)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(XM)	2015	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2015	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sorento(XM)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sorento(XM)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sorento(XM)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(XM)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(XM)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(XM)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(XM)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sorento(XM)	2015	General Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(XM)	2015	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sorento(XM)	2015	General Area	BCM(Body Control Module)	Version Information	
Sorento(XM)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Sorento(XM)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sorento(XM)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(XM)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(XM)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Sorento(XM)	2015	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sorento(XM)	2015	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sorento(XM)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sorento(XM)	2015	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sorento(XM)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sorento(XM)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	

model	year	area	system	function	subfunction
Sorento(XM)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Sorento(XM)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sorento(XM)	2015	General Area	Driveshaft	Version Information	
Sorento(XM)	2015	General Area	Driveshaft	Read Fault Code	
Sorento(XM)	2015	General Area	Driveshaft	Clear Fault Memory	
Sorento(XM)	2015	General Area	Driveshaft	Read Data Stream	
Sorento(XM)	2015	General Area	Driveshaft	Actuation Test	
Sorento(XM)	2015	General Area	Driveshaft	Special Function	Clutch Learning Reset
Sorento(XM)	2015	General Area	Driveshaft	Special Function	Clutch Learning Read
Sorento(XM)	2015	General Area	Driveshaft	Special Function	Clutch Learning Write
Sorento(XM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sorento(XM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sorento(XM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sorento(XM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sorento(XM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sorento(XM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Sorento(XM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Sorento(XM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sorento(XM)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sorento(XM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(XM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(XM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(XM)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2015	General Area	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
Sorento(XM)	2015	General Area	Smart Key Unit	Read Fault Code	
Sorento(XM)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Sorento(XM)	2015	General Area	Smart Key Unit	Read Data Stream	
Sorento(XM)	2015	General Area	Smart Key Unit	Actuation Test	
Sorento(XM)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sorento(XM)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sorento(XM)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Sorento(XM)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sorento(XM)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sorento(XM)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sorento(XM)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sorento(XM)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sorento(XM)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sorento(XM)	2015	General Area	LDWS(Lane Departure Warning System)	Version Information	
Sorento(XM)	2015	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sorento(XM)	2015	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sorento(XM)	2015	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sorento(XM)	2015	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sorento(XM)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sorento(XM)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Sorento(XM)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Sorento(XM)	2015	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sorento(XM)	2015	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sorento(XM)	2015	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sorento(XM)	2015	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sorento(XM)	2015	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sorento(XM)	2015	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sorento(XM)	2015	General Area	AHS(Active Hood System)	Version Information	
Sorento(XM)	2015	General Area	AHS(Active Hood System)	Read Fault Code	
Sorento(XM)	2015	General Area	AHS(Active Hood System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(XM)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(XM)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(XM)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(XM)	2015	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(XM)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sorento(XM)	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(XM)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(XM)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(XM)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(XM)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2014	General Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2014	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2014	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2014	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(XM)	2014	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(XM)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(XM)	2014	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2014	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sorento(XM)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sorento(XM)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sorento(XM)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(XM)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(XM)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(XM)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(XM)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sorento(XM)	2014	General Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2014	General Area	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Sorento(XM)	2014	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sorento(XM)	2014	General Area	BCM(Body Control Module)	Version Information	
Sorento(XM)	2014	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sorento(XM)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Sorento(XM)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sorento(XM)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(XM)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(XM)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Sorento(XM)	2014	General Area	Smart Key Unit	Version Information	
Sorento(XM)	2014	General Area	Smart Key Unit	Read Fault Code	
Sorento(XM)	2014	General Area	Smart Key Unit	Clear Fault Memory	
Sorento(XM)	2014	General Area	Smart Key Unit	Read Data Stream	
Sorento(XM)	2014	General Area	Smart Key Unit	Actuation Test	
Sorento(XM)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sorento(XM)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sorento(XM)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Sorento(XM)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sorento(XM)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sorento(XM)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sorento(XM)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sorento(XM)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sorento(XM)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sorento(XM)	2014	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sorento(XM)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sorento(XM)	2014	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sorento(XM)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sorento(XM)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Sorento(XM)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Sorento(XM)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sorento(XM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Sorento(XM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(XM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(XM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2014	General Area	AHS(Active Hood System)	Version Information	
Sorento(XM)	2014	General Area	AHS(Active Hood System)	Read Fault Code	
Sorento(XM)	2014	General Area	AHS(Active Hood System)	Clear Fault Memory	
Sorento(XM)	2014	General Area	Head Lamp	Version Information	
Sorento(XM)	2014	General Area	Head Lamp	Read Fault Code	
Sorento(XM)	2014	General Area	Head Lamp	Clear Fault Memory	
Sorento(XM)	2014	General Area	Head Lamp	Read Data Stream	
Sorento(XM)	2014	General Area	Head Lamp	Actuation Test	
Sorento(XM)	2014	General Area	Head Lamp	Special Function	Headlamp Leveling
Sorento(XM)	2014	General Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Sorento(XM)	2014	General Area	Head Lamp	Special Function	Calibration
Sorento(XM)	2014	General Area	Head Lamp	Special Function	Parameter Download
Sorento(XM)	2014	General Area	4WD Control	Version Information	
Sorento(XM)	2014	General Area	4WD Control	Read Fault Code	
Sorento(XM)	2014	General Area	4WD Control	Clear Fault Memory	
Sorento(XM)	2014	General Area	4WD Control	Read Data Stream	
Sorento(XM)	2014	General Area	4WD Control	Actuation Test	
Sorento(XM)	2014	General Area	4WD Control	Special Function	Clutch Learning Reset
Sorento(XM)	2014	General Area	4WD Control	Special Function	Clutch Learning Read
Sorento(XM)	2014	General Area	4WD Control	Special Function	Clutch Learning Write
Sorento(XM)	2014	General Area	LDWS(Lane Departure Warning System)	Version Information	

model	year	area	system	function	subfunction
Sorento(XM)	2014	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sorento(XM)	2014	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sorento(XM)	2014	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sorento(XM)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Sorento(XM)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Sorento(XM)	2014	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sorento(XM)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sorento(XM)	2014	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sorento(XM)	2014	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sorento(XM)	2014	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sorento(XM)	2014	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sorento(XM)	2014	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sorento(XM)	2014	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sorento(XM)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(XM)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(XM)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(XM)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(XM)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration

model	year	area	system	function	subfunction
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sorento(XM)	2014	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(XM)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(XM)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(XM)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(XM)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2013	General Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2013	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2013	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2013	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(XM)	2013	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(XM)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(XM)	2013	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2013	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)

model	year	area	system	function	subfunction
Sorento(XM)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sorento(XM)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sorento(XM)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(XM)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(XM)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(XM)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(XM)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sorento(XM)	2013	General Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(XM)	2013	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sorento(XM)	2013	General Area	BCM(Body Control Module)	Version Information	
Sorento(XM)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Sorento(XM)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sorento(XM)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(XM)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(XM)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Sorento(XM)	2013	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sorento(XM)	2013	General Area	Smart Key Unit	Version Information	
Sorento(XM)	2013	General Area	Smart Key Unit	Read Fault Code	
Sorento(XM)	2013	General Area	Smart Key Unit	Clear Fault Memory	
Sorento(XM)	2013	General Area	Smart Key Unit	Read Data Stream	
Sorento(XM)	2013	General Area	Smart Key Unit	Actuation Test	
Sorento(XM)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sorento(XM)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sorento(XM)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information
Sorento(XM)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Sorento(XM)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sorento(XM)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sorento(XM)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sorento(XM)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sorento(XM)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sorento(XM)	2013	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sorento(XM)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sorento(XM)	2013	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sorento(XM)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sorento(XM)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Sorento(XM)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Sorento(XM)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sorento(XM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(XM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(XM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(XM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2013	General Area	AHS(Active Hood System)	Version Information	
Sorento(XM)	2013	General Area	AHS(Active Hood System)	Read Fault Code	
Sorento(XM)	2013	General Area	AHS(Active Hood System)	Clear Fault Memory	
Sorento(XM)	2013	General Area	Head Lamp	Version Information	
Sorento(XM)	2013	General Area	Head Lamp	Read Fault Code	
Sorento(XM)	2013	General Area	Head Lamp	Clear Fault Memory	
Sorento(XM)	2013	General Area	Head Lamp	Read Data Stream	
Sorento(XM)	2013	General Area	Head Lamp	Actuation Test	
Sorento(XM)	2013	General Area	Head Lamp	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Sorento(XM)	2013	General Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Sorento(XM)	2013	General Area	Head Lamp	Special Function	Calibration
Sorento(XM)	2013	General Area	Head Lamp	Special Function	Parameter Download
Sorento(XM)	2013	General Area	4WD Control	Version Information	
Sorento(XM)	2013	General Area	4WD Control	Read Fault Code	
Sorento(XM)	2013	General Area	4WD Control	Clear Fault Memory	
Sorento(XM)	2013	General Area	4WD Control	Read Data Stream	
Sorento(XM)	2013	General Area	4WD Control	Actuation Test	
Sorento(XM)	2013	General Area	4WD Control	Special Function	Clutch Learning Reset
Sorento(XM)	2013	General Area	4WD Control	Special Function	Clutch Learning Read
Sorento(XM)	2013	General Area	4WD Control	Special Function	Clutch Learning Write
Sorento(XM)	2013	General Area	LDWS(Lane Departure Warning System)	Version Information	
Sorento(XM)	2013	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sorento(XM)	2013	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sorento(XM)	2013	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sorento(XM)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Sorento(XM)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Sorento(XM)	2013	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sorento(XM)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sorento(XM)	2013	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sorento(XM)	2013	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sorento(XM)	2013	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sorento(XM)	2013	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sorento(XM)	2013	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sorento(XM)	2013	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sorento(XM)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(XM)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(XM)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Sorento(XM)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(XM)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sorento(XM)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(XM)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(XM)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(XM)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(XM)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2012	General Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2012	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2012	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2012	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(XM)	2012	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(XM)	2012	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sorento(XM)	2012	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2012	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sorento(XM)	2012	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(XM)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(XM)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(XM)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(XM)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Sorento(XM)	2012	General Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(XM)	2012	General Area	IPM(Instrument Panel Module)	Version Information	
Sorento(XM)	2012	General Area	IPM(Instrument Panel Module)	Read Fault Code	
Sorento(XM)	2012	General Area	IPM(Instrument Panel Module)	Clear Fault Memory	
Sorento(XM)	2012	General Area	IPM(Instrument Panel Module)	Read Data Stream	
Sorento(XM)	2012	General Area	IPM(Instrument Panel Module)	Actuation Test	
Sorento(XM)	2012	General Area	IPM(Instrument Panel Module)	Special Function	User Option
Sorento(XM)	2012	General Area	Smart Key	Version Information	
Sorento(XM)	2012	General Area	Smart Key	Read Fault Code	

model	year	area	system	function	subfunction
Sorento(XM)	2012	General Area	Smart Key	Clear Fault Memory	
Sorento(XM)	2012	General Area	Smart Key	Read Data Stream	
Sorento(XM)	2012	General Area	Smart Key	Actuation Test	
Sorento(XM)	2012	General Area	Smart Key	Special Function	ESCL Open Status Check
Sorento(XM)	2012	General Area	Smart Key	Special Function	Neutralization Mode
Sorento(XM)	2012	General Area	Smart Key	Special Function	SMK Status Information
Sorento(XM)	2012	General Area	Smart Key	Special Function	ESCL Status Information
Sorento(XM)	2012	General Area	Smart Key	Special Function	PDM Status Information
Sorento(XM)	2012	General Area	Smart Key	Special Function	FOB KEY Status Information
Sorento(XM)	2012	General Area	Smart Key	Special Function	Serial Communication Line Check
Sorento(XM)	2012	General Area	Smart Key	Special Function	Antenna Status Check
Sorento(XM)	2012	General Area	Smart Key	Special Function	Smart Key Code Saving
Sorento(XM)	2012	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(XM)	2012	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(XM)	2012	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(XM)	2012	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(XM)	2012	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(XM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(XM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(XM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(XM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sorento(XM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sorento(XM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sorento(XM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(XM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sorento(XM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sorento(XM)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sorento(XM)	2012	General Area	4WD Control	Version Information	
Sorento(XM)	2012	General Area	4WD Control	Read Fault Code	
Sorento(XM)	2012	General Area	4WD Control	Clear Fault Memory	
Sorento(XM)	2012	General Area	4WD Control	Read Data Stream	
Sorento(XM)	2012	General Area	4WD Control	Special Function	Torque Coupling Control
Sorento(XM)	2012	General Area	4WD Control	Special Function	AWD Mode Selection
Sorento(XM)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(XM)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(XM)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(XM)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(XM)	2012	General Area	BCM(Body Control Module)	Version Information	
Sorento(XM)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
Sorento(XM)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sorento(XM)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Sorento(XM)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(XM)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
Sorento(XM)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(XM)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sorento(XM)	2012	General Area	Power Steering	Version Information	
Sorento(XM)	2012	General Area	Power Steering	Read Fault Code	
Sorento(XM)	2012	General Area	Power Steering	Clear Fault Memory	
Sorento(XM)	2012	General Area	Power Steering	Read Data Stream	
Sorento(XM)	2012	General Area	Power Steering	Read Freeze Frame	
Sorento(XM)	2012	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sorento(XM)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(XM)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(XM)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2011	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sorento(XM)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2011	General Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2011	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2011	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2011	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(XM)	2011	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(XM)	2011	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sorento(XM)	2011	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2011	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sorento(XM)	2011	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(XM)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(XM)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(XM)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(XM)	2011	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Sorento(XM)	2011	General Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(XM)	2011	General Area	IPM(Instrument Panel Module)	Version Information	
Sorento(XM)	2011	General Area	IPM(Instrument Panel Module)	Read Fault Code	
Sorento(XM)	2011	General Area	IPM(Instrument Panel Module)	Clear Fault Memory	
Sorento(XM)	2011	General Area	IPM(Instrument Panel Module)	Read Data Stream	
Sorento(XM)	2011	General Area	IPM(Instrument Panel Module)	Actuation Test	
Sorento(XM)	2011	General Area	IPM(Instrument Panel Module)	Special Function	User Option
Sorento(XM)	2011	General Area	Smart Key	Version Information	
Sorento(XM)	2011	General Area	Smart Key	Read Fault Code	
Sorento(XM)	2011	General Area	Smart Key	Clear Fault Memory	
Sorento(XM)	2011	General Area	Smart Key	Read Data Stream	
Sorento(XM)	2011	General Area	Smart Key	Actuation Test	

model	year	area	system	function	subfunction
Sorento(XM)	2011	General Area	Smart Key	Special Function	ESCL Open Status Check
Sorento(XM)	2011	General Area	Smart Key	Special Function	Neutralization Mode
Sorento(XM)	2011	General Area	Smart Key	Special Function	SMK Status Information
Sorento(XM)	2011	General Area	Smart Key	Special Function	ESCL Status Information
Sorento(XM)	2011	General Area	Smart Key	Special Function	PDM Status Information
Sorento(XM)	2011	General Area	Smart Key	Special Function	FOB KEY Status Information
Sorento(XM)	2011	General Area	Smart Key	Special Function	Serial Communication Line Check
Sorento(XM)	2011	General Area	Smart Key	Special Function	Antenna Status Check
Sorento(XM)	2011	General Area	Smart Key	Special Function	Smart Key Code Saving
Sorento(XM)	2011	General Area	Power Steering	Version Information	
Sorento(XM)	2011	General Area	Power Steering	Read Fault Code	
Sorento(XM)	2011	General Area	Power Steering	Clear Fault Memory	
Sorento(XM)	2011	General Area	Power Steering	Read Data Stream	
Sorento(XM)	2011	General Area	Power Steering	Read Freeze Frame	
Sorento(XM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(XM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(XM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(XM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sorento(XM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sorento(XM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sorento(XM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sorento(XM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sorento(XM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Sorento(XM)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sorento(XM)	2011	General Area	4WD Control	Version Information	
Sorento(XM)	2011	General Area	4WD Control	Read Fault Code	
Sorento(XM)	2011	General Area	4WD Control	Clear Fault Memory	
Sorento(XM)	2011	General Area	4WD Control	Read Data Stream	
Sorento(XM)	2011	General Area	4WD Control	Special Function	Torque Coupling Control
Sorento(XM)	2011	General Area	4WD Control	Special Function	AWD Mode Selection
Sorento(XM)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(XM)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(XM)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(XM)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(XM)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sorento(XM)	2011	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(XM)	2011	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(XM)	2011	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(XM)	2011	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(XM)	2011	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment

model	year	area	system	function	subfunction
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sorento(XM)	2011	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(XM)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(XM)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(XM)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2010	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(XM)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2010	General Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2010	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2010	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2010	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(XM)	2010	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(XM)	2010	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sorento(XM)	2010	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2010	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sorento(XM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	

model	year	area	system	function	subfunction
Sorento(XM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(XM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(XM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(XM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Sorento(XM)	2010	General Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(XM)	2010	General Area	IPM(Instrument Panel Module)	Version Information	
Sorento(XM)	2010	General Area	IPM(Instrument Panel Module)	Read Fault Code	
Sorento(XM)	2010	General Area	IPM(Instrument Panel Module)	Clear Fault Memory	
Sorento(XM)	2010	General Area	IPM(Instrument Panel Module)	Read Data Stream	
Sorento(XM)	2010	General Area	IPM(Instrument Panel Module)	Actuation Test	
Sorento(XM)	2010	General Area	IPM(Instrument Panel Module)	Special Function	User Option
Sorento(XM)	2010	General Area	Smart Key	Version Information	
Sorento(XM)	2010	General Area	Smart Key	Read Fault Code	
Sorento(XM)	2010	General Area	Smart Key	Clear Fault Memory	
Sorento(XM)	2010	General Area	Smart Key	Read Data Stream	
Sorento(XM)	2010	General Area	Smart Key	Actuation Test	
Sorento(XM)	2010	General Area	Smart Key	Special Function	ESCL Open Status Check
Sorento(XM)	2010	General Area	Smart Key	Special Function	Neutralization Mode
Sorento(XM)	2010	General Area	Smart Key	Special Function	SMK Status Information
Sorento(XM)	2010	General Area	Smart Key	Special Function	ESCL Status Information
Sorento(XM)	2010	General Area	Smart Key	Special Function	PDM Status Information
Sorento(XM)	2010	General Area	Smart Key	Special Function	FOB KEY Status Information
Sorento(XM)	2010	General Area	Smart Key	Special Function	Serial Communication Line Check
Sorento(XM)	2010	General Area	Smart Key	Special Function	Antenna Status Check
Sorento(XM)	2010	General Area	Smart Key	Special Function	Smart Key Code Saving
Sorento(XM)	2010	General Area	Power Steering	Version Information	

model	year	area	system	function	subfunction
Sorento(XM)	2010	General Area	Power Steering	Read Fault Code	
Sorento(XM)	2010	General Area	Power Steering	Clear Fault Memory	
Sorento(XM)	2010	General Area	Power Steering	Read Data Stream	
Sorento(XM)	2010	General Area	Power Steering	Read Freeze Frame	
Sorento(XM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(XM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(XM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(XM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sorento(XM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sorento(XM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sorento(XM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sorento(XM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sorento(XM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sorento(XM)	2010	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sorento(XM)	2010	General Area	4WD Control	Version Information	
Sorento(XM)	2010	General Area	4WD Control	Read Fault Code	
Sorento(XM)	2010	General Area	4WD Control	Clear Fault Memory	
Sorento(XM)	2010	General Area	4WD Control	Read Data Stream	
Sorento(XM)	2010	General Area	4WD Control	Special Function	Torque Coupling Control
Sorento(XM)	2010	General Area	4WD Control	Special Function	AWD Mode Selection
Sorento(XM)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(XM)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode

model	year	area	system	function	subfunction
Sorento(XM)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(XM)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(XM)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sorento(XM)	2010	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(XM)	2010	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(XM)	2010	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(XM)	2010	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(XM)	2010	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Auto Detection Reset
Sorento(XM)	2010	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove

model	year	area	system	function	subfunction
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sorento(XM)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(XM)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(XM)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2009	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(XM)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2009	General Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2009	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2009	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2009	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(XM)	2009	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(XM)	2009	General Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Sorento(XM)	2009	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2009	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sorento(XM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(XM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(XM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(XM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(XM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Sorento(XM)	2009	General Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2009	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2009	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2009	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(XM)	2009	General Area	IPM(Instrument Panel Module)	Version Information	
Sorento(XM)	2009	General Area	IPM(Instrument Panel Module)	Read Fault Code	
Sorento(XM)	2009	General Area	IPM(Instrument Panel Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(XM)	2009	General Area	IPM(Instrument Panel Module)	Read Data Stream	
Sorento(XM)	2009	General Area	IPM(Instrument Panel Module)	Actuation Test	
Sorento(XM)	2009	General Area	IPM(Instrument Panel Module)	Special Function	User Option
Sorento(XM)	2009	General Area	Smart Key	Version Information	
Sorento(XM)	2009	General Area	Smart Key	Read Fault Code	
Sorento(XM)	2009	General Area	Smart Key	Clear Fault Memory	
Sorento(XM)	2009	General Area	Smart Key	Read Data Stream	
Sorento(XM)	2009	General Area	Smart Key	Actuation Test	
Sorento(XM)	2009	General Area	Smart Key	Special Function	Neutralization Mode
Sorento(XM)	2009	General Area	Smart Key	Special Function	SMK Status Information
Sorento(XM)	2009	General Area	Smart Key	Special Function	ESCL Status Information
Sorento(XM)	2009	General Area	Smart Key	Special Function	PDM Status Information
Sorento(XM)	2009	General Area	Smart Key	Special Function	FOB KEY Status Information
Sorento(XM)	2009	General Area	Smart Key	Special Function	Serial Communication Line Check
Sorento(XM)	2009	General Area	Smart Key	Special Function	Antenna Status Check
Sorento(XM)	2009	General Area	Smart Key	Special Function	Smart Key Code Saving
Sorento(XM)	2009	General Area	Smart Key	Special Function	ESCL Open Status Check
Sorento(XM)	2009	General Area	EPS(Electronic Power Steering)	Version Information	
Sorento(XM)	2009	General Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(XM)	2009	General Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(XM)	2009	General Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(XM)	2009	General Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(XM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(XM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(XM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Sorento(XM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sorento(XM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sorento(XM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sorento(XM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sorento(XM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sorento(XM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sorento(XM)	2009	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sorento(XM)	2009	General Area	4WD Control	Version Information	
Sorento(XM)	2009	General Area	4WD Control	Read Fault Code	
Sorento(XM)	2009	General Area	4WD Control	Clear Fault Memory	
Sorento(XM)	2009	General Area	4WD Control	Read Data Stream	
Sorento(XM)	2009	General Area	4WD Control	Special Function	Torque Coupling Control
Sorento(XM)	2009	General Area	4WD Control	Special Function	AWD Mode Selection
Sorento(XM)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(XM)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(XM)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(XM)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2009	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(XM)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)

model	year	area	system	function	subfunction
Sorento(XM)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sorento(UMA)- For Mexico only	2016	General Area	TCM(Transmission Control Module)	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(UMA)- For Mexico only	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(UMA)- For Mexico only	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(UMA)- For Mexico only	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(UMA)- For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(UMA)- For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(UMA)- For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(UMA)- For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(UMA)- For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sorento(UMA)- For Mexico only	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sorento(UMA)- For Mexico only	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Sorento(UMA)- For Mexico only	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Sorento(UMA)- For Mexico only	2016	General Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Sorento(UMA)- For Mexico only	2016	General Area	AC(Air Conditioning)	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	AC(Air Conditioning)	Actuation Test	
Sorento(UMA)- For Mexico only	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sorento(UMA)- For Mexico only	2016	General Area	BCM(Body Control Module)	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(UMA)- For Mexico only	2016	General Area	BCM(Body Control Module)	Actuation Test	
Sorento(UMA)- For Mexico only	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Sorento(UMA)- For Mexico only	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sorento(UMA)- For Mexico only	2016	General Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sorento(UMA)- For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Sorento(UMA)- For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Sorento(UMA)- For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sorento(UMA)- For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Sorento(UMA)- For Mexico only	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Sorento(UMA)- For Mexico only	2016	General Area	Driveshaft	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	Driveshaft	Read Fault Code	

model	year	area	system	function	subfunction
Sorento(UMA)- For Mexico only	2016	General Area	Driveshaft	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	Driveshaft	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	Driveshaft	Actuation Test	
Sorento(UMA)- For Mexico only	2016	General Area	Driveshaft	Special Function	Clutch Learning Reset
Sorento(UMA)- For Mexico only	2016	General Area	Driveshaft	Special Function	Clutch Learning Read
Sorento(UMA)- For Mexico only	2016	General Area	Driveshaft	Special Function	Clutch Learning Write
Sorento(UMA)- For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sorento(UMA)- For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sorento(UMA)- For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sorento(UMA)- For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Sorento(UMA)- For Mexico only	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration

model	year	area	system	function	subfunction
Sorento(UMA)- For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(UMA)- For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(UMA)- For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(UMA)- For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(UMA)- For Mexico only	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(UMA)- For Mexico only	2016	General Area	Smart Key Unit	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	Smart Key Unit	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	Smart Key Unit	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	Smart Key Unit	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	Smart Key Unit	Actuation Test	
Sorento(UMA)- For Mexico only	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Sorento(UMA)- For Mexico only	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sorento(UMA)- For Mexico only	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sorento(UMA)- For Mexico only	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sorento(UMA)- For Mexico only	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Sorento(UMA)- For Mexico only	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sorento(UMA)- For Mexico only	2016	General Area	CCS(Cruise Control System)	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	CCS(Cruise Control System)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	CCS(Cruise Control System)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	CCS(Cruise Control System)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	CCS(Cruise Control System)	Special Function	SCC Alignment
Sorento(UMA)- For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	

model	year	area	system	function	subfunction
Sorento(UMA)- For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sorento(UMA)- For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Sorento(UMA)- For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sorento(UMA)- For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Sorento(UMA)- For Mexico only	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Sorento(UMA)- For Mexico only	2016	General Area	SVMS(Surround View Monitor System)	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	SVMS(Surround View Monitor System)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	SVMS(Surround View Monitor System)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	SVMS(Surround View Monitor System)	Actuation Test	
Sorento(UMA)- For Mexico only	2016	General Area	Telematics Unit	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	Telematics Unit	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	Telematics Unit	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	Central Gateway	Version Information	
Sorento(UMA)- For Mexico only	2016	General Area	Central Gateway	Read Fault Code	

model	year	area	system	function	subfunction
Sorento(UMA)- For Mexico only	2016	General Area	Central Gateway	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	Central Gateway	Special Function	Erase Network Configuration
Sorento(UMA)- For Mexico only	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
Sorento(UMA)- For Mexico only	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sorento(UMA)- For Mexico only	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(UMA)- For Mexico only	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sorento(UMA)- For Mexico only	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(UMA)- For Mexico only	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(UMA)- For Mexico only	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(UMA)- For Mexico only	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sorento(UMA)- For Mexico only	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	

model	year	area	system	function	subfunction
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Fluid Circulation Mode
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Soul EV(PS EV)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Air Bleeding Of Low Pressure
Soul EV(PS EV)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul EV(PS EV)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul EV(PS EV)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul EV(PS EV)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul EV(PS EV)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul EV(PS EV)	2016	General Area	AC(Air Conditioning)	Version Information	
Soul EV(PS EV)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Soul EV(PS EV)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Soul EV(PS EV)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Soul EV(PS EV)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Soul EV(PS EV)	2016	General Area	BCM(Body Control Module)	Version Information	
Soul EV(PS EV)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Soul EV(PS EV)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Soul EV(PS EV)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Soul EV(PS EV)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Soul EV(PS EV)	2016	General Area	BCM(Body Control Module)	Special Function	User Option

model	year	area	system	function	subfunction
Soul EV(PS EV)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul EV(PS EV)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Soul EV(PS EV)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul EV(PS EV)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul EV(PS EV)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul EV(PS EV)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul EV(PS EV)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul EV(PS EV)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul EV(PS EV)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul EV(PS EV)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Soul EV(PS EV)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Soul EV(PS EV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul EV(PS EV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul EV(PS EV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul EV(PS EV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul EV(PS EV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul EV(PS EV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul EV(PS EV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul EV(PS EV)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Version Information	
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Read Fault Code	
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Read Data Stream	
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Actuation Test	
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Special Function	ESCL Enable Output Check
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Soul EV(PS EV)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Soul EV(PS EV)	2016	General Area	Low DC/DC Converter	Version Information	
Soul EV(PS EV)	2016	General Area	Low DC/DC Converter	Read Fault Code	
Soul EV(PS EV)	2016	General Area	Low DC/DC Converter	Clear Fault Memory	
Soul EV(PS EV)	2016	General Area	Low DC/DC Converter	Read Data Stream	
Soul EV(PS EV)	2016	General Area	Low DC/DC Converter	Read Freeze Frame	
Soul EV(PS EV)	2016	General Area	On Board Charger	Version Information	
Soul EV(PS EV)	2016	General Area	On Board Charger	Read Fault Code	
Soul EV(PS EV)	2016	General Area	On Board Charger	Clear Fault Memory	
Soul EV(PS EV)	2016	General Area	On Board Charger	Read Data Stream	
Soul EV(PS EV)	2016	General Area	On Board Charger	Read Freeze Frame	
Soul EV(PS EV)	2016	General Area	On Board Charger	Actuation Test	
Soul EV(PS EV)	2016	General Area	Battery Management System	Version Information	
Soul EV(PS EV)	2016	General Area	Battery Management System	Read Fault Code	
Soul EV(PS EV)	2016	General Area	Battery Management System	Clear Fault Memory	
Soul EV(PS EV)	2016	General Area	Battery Management System	Read Data Stream	
Soul EV(PS EV)	2016	General Area	Battery Management System	Read Freeze Frame	
Soul EV(PS EV)	2016	General Area	Battery Management System	Actuation Test	
Soul EV(PS EV)	2016	General Area	Battery Management System	Special Function	Isolation Breakdown Detection Function
Soul EV(PS EV)	2016	General Area	VMCS(Vehicle Motor Control System)	Version Information	
Soul EV(PS EV)	2016	General Area	VMCS(Vehicle Motor Control System)	Read Fault Code	
Soul EV(PS EV)	2016	General Area	VMCS(Vehicle Motor Control System)	Clear Fault Memory	
Soul EV(PS EV)	2016	General Area	VMCS(Vehicle Motor Control System)	Read Data Stream	
Soul EV(PS EV)	2016	General Area	VMCS(Vehicle Motor Control System)	Read Freeze Frame	
Soul EV(PS EV)	2016	General Area	VMCS(Vehicle Motor Control System)	Actuation Test	
Soul EV(PS EV)	2016	General Area	VMCS(Vehicle Motor Control System)	Special Function	Read VIN

model	year	area	system	function	subfunction
Soul EV(PS EV)	2016	General Area	VMCS(Vehicle Motor Control System)	Special Function	Write VIN
Soul EV(PS EV)	2016	General Area	VMCS(Vehicle Motor Control System)	Special Function	Electric Water Pump Control
Soul EV(PS EV)	2016	General Area	VMCS(Vehicle Motor Control System)	Special Function	Initialization Of Automatic Resolver Offset Calibration
Soul EV(PS EV)	2016	General Area	VMCS(Vehicle Motor Control System)	Special Function	VMCU Variant Coding
Soul EV(PS EV)	2015	General Area	VMCS(Vehicle Motor Control System)	Version Information	
Soul EV(PS EV)	2015	General Area	VMCS(Vehicle Motor Control System)	Read Fault Code	
Soul EV(PS EV)	2015	General Area	VMCS(Vehicle Motor Control System)	Clear Fault Memory	
Soul EV(PS EV)	2015	General Area	VMCS(Vehicle Motor Control System)	Read Data Stream	
Soul EV(PS EV)	2015	General Area	VMCS(Vehicle Motor Control System)	Read Freeze Frame	
Soul EV(PS EV)	2015	General Area	VMCS(Vehicle Motor Control System)	Actuation Test	
Soul EV(PS EV)	2015	General Area	VMCS(Vehicle Motor Control System)	Special Function	Read VIN
Soul EV(PS EV)	2015	General Area	VMCS(Vehicle Motor Control System)	Special Function	Write VIN
Soul EV(PS EV)	2015	General Area	VMCS(Vehicle Motor Control System)	Special Function	Electric Water Pump Control
Soul EV(PS EV)	2015	General Area	VMCS(Vehicle Motor Control System)	Special Function	Initialization Of Automatic Resolver Offset Calibration
Soul EV(PS EV)	2015	General Area	VMCS(Vehicle Motor Control System)	Special Function	VMCU Variant Coding
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Fluid Circulation Mode

model	year	area	system	function	subfunction
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Soul EV(PS EV)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Air Bleeding Of Low Pressure
Soul EV(PS EV)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul EV(PS EV)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul EV(PS EV)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul EV(PS EV)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul EV(PS EV)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul EV(PS EV)	2015	General Area	AC(Air Conditioning)	Version Information	
Soul EV(PS EV)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Soul EV(PS EV)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Soul EV(PS EV)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Soul EV(PS EV)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Soul EV(PS EV)	2015	General Area	BCM(Body Control Module)	Version Information	
Soul EV(PS EV)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Soul EV(PS EV)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Soul EV(PS EV)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Soul EV(PS EV)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Soul EV(PS EV)	2015	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul EV(PS EV)	2015	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Soul EV(PS EV)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Version Information	
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Read Fault Code	
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Read Data Stream	
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Actuation Test	
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Special Function	ESCL Enable Output Check
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Soul EV(PS EV)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Soul EV(PS EV)	2015	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul EV(PS EV)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul EV(PS EV)	2015	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul EV(PS EV)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul EV(PS EV)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul EV(PS EV)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul EV(PS EV)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul EV(PS EV)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Soul EV(PS EV)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Soul EV(PS EV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul EV(PS EV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul EV(PS EV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul EV(PS EV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul EV(PS EV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul EV(PS EV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul EV(PS EV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul EV(PS EV)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul EV(PS EV)	2015	General Area	Low DC/DC Converter	Version Information	
Soul EV(PS EV)	2015	General Area	Low DC/DC Converter	Read Fault Code	
Soul EV(PS EV)	2015	General Area	Low DC/DC Converter	Clear Fault Memory	
Soul EV(PS EV)	2015	General Area	Low DC/DC Converter	Read Data Stream	
Soul EV(PS EV)	2015	General Area	Low DC/DC Converter	Read Freeze Frame	
Soul EV(PS EV)	2015	General Area	HEV Battery System	Version Information	
Soul EV(PS EV)	2015	General Area	HEV Battery System	Read Fault Code	

model	year	area	system	function	subfunction
Soul EV(PS EV)	2015	General Area	HEV Battery System	Clear Fault Memory	
Soul EV(PS EV)	2015	General Area	HEV Battery System	Read Data Stream	
Soul EV(PS EV)	2015	General Area	HEV Battery System	Read Freeze Frame	
Soul EV(PS EV)	2015	General Area	HEV Battery System	Actuation Test	
Soul EV(PS EV)	2015	General Area	On Board Charger	Version Information	
Soul EV(PS EV)	2015	General Area	On Board Charger	Read Fault Code	
Soul EV(PS EV)	2015	General Area	On Board Charger	Clear Fault Memory	
Soul EV(PS EV)	2015	General Area	On Board Charger	Read Data Stream	
Soul EV(PS EV)	2015	General Area	On Board Charger	Read Freeze Frame	
Soul EV(PS EV)	2015	General Area	On Board Charger	Actuation Test	
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Version Information	
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Soul(AM)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Soul(AM)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(AM)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(AM)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(AM)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Soul(AM)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Soul(AM)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(AM)	2014	General Area	ESP(Electronic Stability Program)	Version Information	
Soul(AM)	2014	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(AM)	2014	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(AM)	2014	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(AM)	2014	General Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(AM)	2014	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Soul(AM)	2014	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(AM)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Soul(AM)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(AM)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(AM)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(AM)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(AM)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Soul(AM)	2014	General Area	AC(Air Conditioning)	Version Information	
Soul(AM)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Soul(AM)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(AM)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Soul(AM)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Soul(AM)	2014	General Area	BCM(Body Control Module)	Version Information	
Soul(AM)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Soul(AM)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Soul(AM)	2014	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(AM)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(AM)	2014	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(AM)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(AM)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(AM)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(AM)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Soul(AM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(AM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(AM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(AM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(AM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Soul(AM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(AM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(AM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(AM)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(AM)	2014	General Area	Smart Key Unit	Read Data Stream	
Soul(AM)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Soul(AM)	2014	General Area	Smart Key Unit	Version Information	
Soul(AM)	2014	General Area	Smart Key Unit	Read Fault Code	
Soul(AM)	2014	General Area	Smart Key Unit	Clear Fault Memory	
Soul(AM)	2014	General Area	Smart Key Unit	Actuation Test	
Soul(AM)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Soul(AM)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Soul(AM)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Soul(AM)	2014	General Area	Smart Key Unit	Special Function	PDM Status Information
Soul(AM)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Soul(AM)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Soul(AM)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Soul(AM)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Soul(AM)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Soul(AM)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(AM)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Soul(AM)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(AM)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Soul(AM)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(AM)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Soul(AM)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Soul(AM)	2014	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Version Information	
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Soul(AM)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Soul(AM)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(AM)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(AM)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(AM)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Soul(AM)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Soul(AM)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(AM)	2013	General Area	ESP(Electronic Stability Program)	Version Information	

model	year	area	system	function	subfunction
Soul(AM)	2013	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(AM)	2013	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(AM)	2013	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(AM)	2013	General Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(AM)	2013	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Soul(AM)	2013	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(AM)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Soul(AM)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(AM)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(AM)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(AM)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(AM)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Soul(AM)	2013	General Area	AC(Air Conditioning)	Version Information	
Soul(AM)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Soul(AM)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(AM)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Soul(AM)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Soul(AM)	2013	General Area	BCM(Body Control Module)	Version Information	
Soul(AM)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Soul(AM)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Soul(AM)	2013	General Area	Smart Key	Version Information	
Soul(AM)	2013	General Area	Smart Key	Read Fault Code	
Soul(AM)	2013	General Area	Smart Key	Clear Fault Memory	
Soul(AM)	2013	General Area	Smart Key	Read Data Stream	
Soul(AM)	2013	General Area	Smart Key	Actuation Test	
Soul(AM)	2013	General Area	Smart Key	Special Function	ESCL Open Status Check
Soul(AM)	2013	General Area	Smart Key	Special Function	Neutralization Mode
Soul(AM)	2013	General Area	Smart Key	Special Function	SMK Status Information
Soul(AM)	2013	General Area	Smart Key	Special Function	ESCL Status Information
Soul(AM)	2013	General Area	Smart Key	Special Function	PDM Status Information

model	year	area	system	function	subfunction
Soul(AM)	2013	General Area	Smart Key	Special Function	FOB KEY Status Information
Soul(AM)	2013	General Area	Smart Key	Special Function	Serial Communication Line Check
Soul(AM)	2013	General Area	Smart Key	Special Function	Antenna Status Check
Soul(AM)	2013	General Area	Smart Key	Special Function	Smart Key Code Saving
Soul(AM)	2013	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(AM)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(AM)	2013	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(AM)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(AM)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(AM)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(AM)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(AM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(AM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(AM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(AM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(AM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Soul(AM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(AM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(AM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(AM)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(AM)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Soul(AM)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(AM)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Soul(AM)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(AM)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Soul(AM)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(AM)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(AM)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data

model	year	area	system	function	subfunction
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Soul(AM)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Version Information	
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Soul(AM)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Soul(AM)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(AM)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(AM)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(AM)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Soul(AM)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Soul(AM)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(AM)	2012	General Area	ESP(Electronic Stability Program)	Version Information	
Soul(AM)	2012	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(AM)	2012	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(AM)	2012	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(AM)	2012	General Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(AM)	2012	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Soul(AM)	2012	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(AM)	2012	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Soul(AM)	2012	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Soul(AM)	2012	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	

model	year	area	system	function	subfunction
Soul(AM)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(AM)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(AM)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Soul(AM)	2012	General Area	AC(Air Conditioning)	Version Information	
Soul(AM)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Soul(AM)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(AM)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Soul(AM)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Soul(AM)	2012	General Area	BCM(Body Control Module)	Version Information	
Soul(AM)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Soul(AM)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Soul(AM)	2012	General Area	Smart Key	Version Information	
Soul(AM)	2012	General Area	Smart Key	Read Fault Code	
Soul(AM)	2012	General Area	Smart Key	Clear Fault Memory	
Soul(AM)	2012	General Area	Smart Key	Read Data Stream	
Soul(AM)	2012	General Area	Smart Key	Actuation Test	
Soul(AM)	2012	General Area	Smart Key	Special Function	ESCL Open Status Check
Soul(AM)	2012	General Area	Smart Key	Special Function	Neutralization Mode
Soul(AM)	2012	General Area	Smart Key	Special Function	SMK Status Information
Soul(AM)	2012	General Area	Smart Key	Special Function	ESCL Status Information
Soul(AM)	2012	General Area	Smart Key	Special Function	PDM Status Information
Soul(AM)	2012	General Area	Smart Key	Special Function	FOB KEY Status Information
Soul(AM)	2012	General Area	Smart Key	Special Function	Serial Communication Line Check
Soul(AM)	2012	General Area	Smart Key	Special Function	Antenna Status Check
Soul(AM)	2012	General Area	Smart Key	Special Function	Smart Key Code Saving
Soul(AM)	2012	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(AM)	2012	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(AM)	2012	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(AM)	2012	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(AM)	2012	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	

model	year	area	system	function	subfunction
Soul(AM)	2012	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(AM)	2012	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(AM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(AM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(AM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(AM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(AM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Soul(AM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(AM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(AM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(AM)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(AM)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Soul(AM)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(AM)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Soul(AM)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(AM)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Soul(AM)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(AM)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(AM)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(AM)	2012	General Area	Steering	Version Information	
Soul(AM)	2012	General Area	Steering	Read Fault Code	
Soul(AM)	2012	General Area	Steering	Clear Fault Memory	
Soul(AM)	2012	General Area	Steering	Read Data Stream	
Soul(AM)	2012	General Area	Steering	Read Freeze Frame	
Soul(AM)	2012	General Area	Steering	Special Function	ASP Calibration
Soul(AM)	2012	General Area	Steering	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Soul(AM)	2012	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Version Information	
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Soul(AM)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Soul(AM)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(AM)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(AM)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(AM)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Soul(AM)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(AM)	2011	General Area	ESP(Electronic Stability Program)	Version Information	
Soul(AM)	2011	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(AM)	2011	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(AM)	2011	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(AM)	2011	General Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(AM)	2011	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Soul(AM)	2011	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(AM)	2011	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Soul(AM)	2011	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	

model	year	area	system	function	subfunction
Soul(AM)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(AM)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(AM)	2011	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Soul(AM)	2011	General Area	AC(Air Conditioning)	Version Information	
Soul(AM)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Soul(AM)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(AM)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Soul(AM)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Soul(AM)	2011	General Area	BCM(Body Control Module)	Version Information	
Soul(AM)	2011	General Area	BCM(Body Control Module)	Read Data Stream	
Soul(AM)	2011	General Area	BCM(Body Control Module)	Actuation Test	
Soul(AM)	2011	General Area	Smart Key	Version Information	
Soul(AM)	2011	General Area	Smart Key	Read Fault Code	
Soul(AM)	2011	General Area	Smart Key	Clear Fault Memory	
Soul(AM)	2011	General Area	Smart Key	Read Data Stream	
Soul(AM)	2011	General Area	Smart Key	Actuation Test	
Soul(AM)	2011	General Area	Smart Key	Special Function	Neutralization Mode
Soul(AM)	2011	General Area	Smart Key	Special Function	SMK Status Information
Soul(AM)	2011	General Area	Smart Key	Special Function	ESCL Status Information
Soul(AM)	2011	General Area	Smart Key	Special Function	PDM Status Information
Soul(AM)	2011	General Area	Smart Key	Special Function	FOB KEY Status Information
Soul(AM)	2011	General Area	Smart Key	Special Function	Serial Communication Line Check
Soul(AM)	2011	General Area	Smart Key	Special Function	Antenna Status Check
Soul(AM)	2011	General Area	Smart Key	Special Function	Smart Key Code Saving
Soul(AM)	2011	General Area	Smart Key	Special Function	ESCL Open Status Check
Soul(AM)	2011	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(AM)	2011	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(AM)	2011	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(AM)	2011	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(AM)	2011	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	

model	year	area	system	function	subfunction
Soul(AM)	2011	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(AM)	2011	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(AM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(AM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(AM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(AM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(AM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Soul(AM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(AM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(AM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(AM)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(AM)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Soul(AM)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(AM)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Soul(AM)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(AM)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Soul(AM)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(AM)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(AM)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(AM)	2011	General Area	Power Steering	Version Information	
Soul(AM)	2011	General Area	Power Steering	Read Fault Code	
Soul(AM)	2011	General Area	Power Steering	Clear Fault Memory	
Soul(AM)	2011	General Area	Power Steering	Read Data Stream	
Soul(AM)	2011	General Area	Power Steering	Read Freeze Frame	
Soul(AM)	2011	General Area	Power Steering	Special Function	ASP Calibration
Soul(AM)	2011	General Area	Power Steering	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Soul(AM)	2011	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Version Information	
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Soul(AM)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Soul(AM)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(AM)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(AM)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(AM)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Soul(AM)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(AM)	2010	General Area	ESP(Electronic Stability Program)	Version Information	
Soul(AM)	2010	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(AM)	2010	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(AM)	2010	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(AM)	2010	General Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(AM)	2010	General Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Soul(AM)	2010	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(AM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(AM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(AM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(AM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
Soul(AM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Soul(AM)	2010	General Area	BCM(Body Control Module)	Version Information	
Soul(AM)	2010	General Area	BCM(Body Control Module)	Read Data Stream	
Soul(AM)	2010	General Area	BCM(Body Control Module)	Actuation Test	
Soul(AM)	2010	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(AM)	2010	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(AM)	2010	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(AM)	2010	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(AM)	2010	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(AM)	2010	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(AM)	2010	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(AM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(AM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(AM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(AM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(AM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Soul(AM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(AM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(AM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(AM)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(AM)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Soul(AM)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(AM)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Soul(AM)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(AM)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Soul(AM)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(AM)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(AM)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Soul(AM)	2010	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Version Information	
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Soul(AM)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Soul(AM)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(AM)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(AM)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(AM)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Soul(AM)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(AM)	2009	General Area	ESP(Electronic Stability Program)	Version Information	
Soul(AM)	2009	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(AM)	2009	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(AM)	2009	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(AM)	2009	General Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(AM)	2009	General Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Soul(AM)	2009	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(AM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(AM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(AM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	

model	year	area	system	function	subfunction
Soul(AM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(AM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Soul(AM)	2009	General Area	BCM(Body Control Module)	Version Information	
Soul(AM)	2009	General Area	BCM(Body Control Module)	Read Data Stream	
Soul(AM)	2009	General Area	BCM(Body Control Module)	Actuation Test	
Soul(AM)	2009	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(AM)	2009	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(AM)	2009	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(AM)	2009	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(AM)	2009	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(AM)	2009	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(AM)	2009	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(AM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(AM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(AM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(AM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(AM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Soul(AM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(AM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(AM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(AM)	2009	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(AM)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Soul(AM)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(AM)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Soul(AM)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(AM)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Soul(AM)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(AM)	2009	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(AM)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Soul(AM)	2009	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Version Information	
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Soul(PS)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Soul(PS)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(PS)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(PS)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(PS)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Soul(PS)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Soul(PS)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(PS)	2016	General Area	ESC(Electronic Stability Control)	Version Information	
Soul(PS)	2016	General Area	ESC(Electronic Stability Control)	Read Fault Code	
Soul(PS)	2016	General Area	ESC(Electronic Stability Control)	Clear Fault Memory	

model	year	area	system	function	subfunction
Soul(PS)	2016	General Area	ESC(Electronic Stability Control)	Read Data Stream	
Soul(PS)	2016	General Area	ESC(Electronic Stability Control)	Actuation Test	
Soul(PS)	2016	General Area	ESC(Electronic Stability Control)	Special Function	Longitudinal G Sensor Calibration
Soul(PS)	2016	General Area	ESC(Electronic Stability Control)	Special Function	HCU Air Bleeding Mode
Soul(PS)	2016	General Area	ESC(Electronic Stability Control)	Special Function	Auto Detected Configuration
Soul(PS)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(PS)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(PS)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(PS)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(PS)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(PS)	2016	General Area	AC(Air Conditioning)	Version Information	
Soul(PS)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Soul(PS)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(PS)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Soul(PS)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Soul(PS)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Soul(PS)	2016	General Area	BCM(Body Control Module)	Version Information	
Soul(PS)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Soul(PS)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Soul(PS)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Soul(PS)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Soul(PS)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul(PS)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Soul(PS)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Soul(PS)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(PS)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(PS)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(PS)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(PS)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(PS)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
Soul(PS)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(PS)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Soul(PS)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Soul(PS)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(PS)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(PS)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(PS)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(PS)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(PS)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(PS)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(PS)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(PS)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Soul(PS)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Soul(PS)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Soul(PS)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Soul(PS)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Soul(PS)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Soul(PS)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Version Information	
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Read Fault Code	
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Clear Fault Memory	
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Read Data Stream	
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Actuation Test	
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Special Function	Smart Key Code Saving
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Special Function	Neutralization Mode
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Special Function	SMK Status Information
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Special Function	ESCL Status Information
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Special Function	FOB KEY Status Information
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Special Function	ESCL Open Status Check
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Special Function	ESCL Enable Output Check
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Special Function	Serial Communication Line Check
Soul(PS)	2016	General Area	Smart Key Unit(Button)	Special Function	Antenna Status Check
Soul(PS)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Soul(PS)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Soul(PS)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Soul(PS)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Soul(PS)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Soul(PS)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Soul(PS)	2016	General Area	SPAS(Smart Parking Assist System)	Version Information	
Soul(PS)	2016	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Soul(PS)	2016	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Soul(PS)	2016	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Soul(PS)	2016	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Soul(PS)	2016	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Soul(PS)	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
Soul(PS)	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Soul(PS)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Soul(PS)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(PS)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Soul(PS)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(PS)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(PS)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(PS)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement

model	year	area	system	function	subfunction
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Soul(PS)	2016	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Soul(PS)	2016	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Version Information	
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Soul(PS)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Soul(PS)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(PS)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(PS)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(PS)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Soul(PS)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Soul(PS)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(PS)	2015	General Area	ESP(Electronic Stability Program)	Version Information	
Soul(PS)	2015	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(PS)	2015	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(PS)	2015	General Area	ESP(Electronic Stability Program)	Read Data Stream	

model	year	area	system	function	subfunction
Soul(PS)	2015	General Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(PS)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Soul(PS)	2015	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(PS)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Soul(PS)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(PS)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(PS)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(PS)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(PS)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(PS)	2015	General Area	AC(Air Conditioning)	Version Information	
Soul(PS)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Soul(PS)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(PS)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Soul(PS)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Soul(PS)	2015	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Soul(PS)	2015	General Area	BCM(Body Control Module)	Version Information	
Soul(PS)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Soul(PS)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Soul(PS)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Soul(PS)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Soul(PS)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Soul(PS)	2015	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul(PS)	2015	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Version Information	
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Read Fault Code	
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Clear Fault Memory	
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Read Data Stream	
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Actuation Test	
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Special Function	Smart Key Code Saving
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Special Function	SMK Status Information
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Special Function	ESCL Status Information
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Special Function	FOB KEY Status Information
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Special Function	Current FOB Key Check
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Special Function	ESCL Open Status Check
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Special Function	ESCL Enable Output Check
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Special Function	Serial Communication Line Check
Soul(PS)	2015	General Area	Smart Key Unit(Button)	Special Function	Antenna Status Check
Soul(PS)	2015	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(PS)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(PS)	2015	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(PS)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(PS)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(PS)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(PS)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(PS)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Soul(PS)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Soul(PS)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(PS)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(PS)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(PS)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(PS)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(PS)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(PS)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(PS)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(PS)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Soul(PS)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Soul(PS)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Soul(PS)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Soul(PS)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	

model	year	area	system	function	subfunction
Soul(PS)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Soul(PS)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Soul(PS)	2015	General Area	LDWS(Lane Departure Warning System)	Version Information	
Soul(PS)	2015	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Soul(PS)	2015	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Soul(PS)	2015	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Soul(PS)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Soul(PS)	2015	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Soul(PS)	2015	General Area	SPAS(Smart Parking Assist System)	Version Information	
Soul(PS)	2015	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Soul(PS)	2015	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Soul(PS)	2015	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Soul(PS)	2015	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Soul(PS)	2015	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Soul(PS)	2015	General Area	IMMO(Immobilizer)	Read Fault Code	
Soul(PS)	2015	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Soul(PS)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Soul(PS)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(PS)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Soul(PS)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(PS)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(PS)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(PS)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Soul(PS)	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Version Information	
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Soul(PS)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Soul(PS)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(PS)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(PS)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(PS)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Soul(PS)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Soul(PS)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(PS)	2014	General Area	ESP(Electronic Stability Program)	Version Information	
Soul(PS)	2014	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(PS)	2014	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(PS)	2014	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(PS)	2014	General Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(PS)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Soul(PS)	2014	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(PS)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Soul(PS)	2014	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	

model	year	area	system	function	subfunction
Soul(PS)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(PS)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(PS)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(PS)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(PS)	2014	General Area	AC(Air Conditioning)	Version Information	
Soul(PS)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Soul(PS)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(PS)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Soul(PS)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Soul(PS)	2014	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Soul(PS)	2014	General Area	BCM(Body Control Module)	Version Information	
Soul(PS)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Soul(PS)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Soul(PS)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Soul(PS)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Soul(PS)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Soul(PS)	2014	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul(PS)	2014	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Version Information	
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Read Fault Code	
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Clear Fault Memory	
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Read Data Stream	
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Actuation Test	
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Special Function	Smart Key Code Saving
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Special Function	Neutralization Mode
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Special Function	SMK Status Information
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Special Function	ESCL Status Information
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Special Function	FOB KEY Status Information
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Special Function	Current FOB Key Check
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Special Function	ESCL Enable Output Check
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Special Function	Serial Communication Line Check
Soul(PS)	2014	General Area	Smart Key Unit(Button)	Special Function	Antenna Status Check
Soul(PS)	2014	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(PS)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(PS)	2014	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(PS)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(PS)	2014	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(PS)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(PS)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(PS)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Soul(PS)	2014	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Soul(PS)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(PS)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(PS)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(PS)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(PS)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(PS)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(PS)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(PS)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(PS)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Soul(PS)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Soul(PS)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Soul(PS)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Soul(PS)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Soul(PS)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Soul(PS)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Soul(PS)	2014	General Area	LDWS(Lane Departure Warning System)	Version Information	
Soul(PS)	2014	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	

model	year	area	system	function	subfunction
Soul(PS)	2014	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Soul(PS)	2014	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Soul(PS)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Soul(PS)	2014	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Soul(PS)	2014	General Area	SPAS(Smart Parking Assist System)	Version Information	
Soul(PS)	2014	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Soul(PS)	2014	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Soul(PS)	2014	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Soul(PS)	2014	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Soul(PS)	2014	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Soul(PS)	2014	General Area	IMMO(Immobilizer)	Read Fault Code	
Soul(PS)	2014	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Soul(PS)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Soul(PS)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(PS)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Soul(PS)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(PS)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(PS)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(PS)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Soul(PS)	2014	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Version Information	
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Soul(PS)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Soul(PS)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(PS)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(PS)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(PS)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Soul(PS)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Soul(PS)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(PS)	2013	General Area	ESP(Electronic Stability Program)	Version Information	
Soul(PS)	2013	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(PS)	2013	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(PS)	2013	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(PS)	2013	General Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(PS)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Soul(PS)	2013	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(PS)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Soul(PS)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(PS)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(PS)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(PS)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(PS)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(PS)	2013	General Area	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Soul(PS)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Soul(PS)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(PS)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Soul(PS)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Soul(PS)	2013	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Soul(PS)	2013	General Area	BCM(Body Control Module)	Version Information	
Soul(PS)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Soul(PS)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Soul(PS)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Soul(PS)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Soul(PS)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Soul(PS)	2013	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul(PS)	2013	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Version Information	
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Read Fault Code	
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Clear Fault Memory	
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Read Data Stream	
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Actuation Test	
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Special Function	Smart Key Code Saving
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Special Function	Neutralization Mode
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Special Function	SMK Status Information
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Special Function	ESCL Status Information
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Special Function	FOB KEY Status Information
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Special Function	Current FOB Key Check
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Special Function	ESCL Open Status Check
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Special Function	ESCL Enable Output Check
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Special Function	Serial Communication Line Check
Soul(PS)	2013	General Area	Smart Key Unit(Button)	Special Function	Antenna Status Check
Soul(PS)	2013	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(PS)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Soul(PS)	2013	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(PS)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(PS)	2013	General Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(PS)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(PS)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(PS)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Soul(PS)	2013	General Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Soul(PS)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(PS)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(PS)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(PS)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(PS)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(PS)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(PS)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(PS)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(PS)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Soul(PS)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Soul(PS)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Soul(PS)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Soul(PS)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Soul(PS)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Soul(PS)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Soul(PS)	2013	General Area	LDWS(Lane Departure Warning System)	Version Information	
Soul(PS)	2013	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Soul(PS)	2013	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Soul(PS)	2013	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Soul(PS)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Variant Coding
Soul(PS)	2013	General Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Soul(PS)	2013	General Area	SPAS(Smart Parking Assist System)	Version Information	

model	year	area	system	function	subfunction
Soul(PS)	2013	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Soul(PS)	2013	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Soul(PS)	2013	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Soul(PS)	2013	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Soul(PS)	2013	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Soul(PS)	2013	General Area	IMMO(Immobilizer)	Read Fault Code	
Soul(PS)	2013	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Soul(PS)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Soul(PS)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(PS)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Soul(PS)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(PS)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(PS)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(PS)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Soul(PS)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(AL)	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	2004	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(AL)	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	2004	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(AL)	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(AL)	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(AL)	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(AL)	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(AL)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	2003	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(AL)	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	2003	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(AL)	2003	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(AL)	2003	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(AL)	2003	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(AL)	2003	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(AL)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	2002	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(AL)	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	2002	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	2002	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(AL)	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(AL)	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(AL)	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(AL)	2002	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(AL)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	2001	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sportage(AL)	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	2001	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(AL)	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(AL)	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(AL)	2001	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(AL)	2001	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(AL)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	2000	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(AL)	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	2000	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	1999	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(AL)	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	1999	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1998	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	1998	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(AL)	1998	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1998	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	1998	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	1997	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(AL)	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1997	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	1997	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(AL)	1997	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1997	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	1996	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	1996	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1996	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	1996	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(AL)	1996	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1996	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	1995	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	1995	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1995	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	1995	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(AL)	1995	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1995	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	1994	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	1994	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1994	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	1994	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(AL)	1994	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1994	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	1993	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	1993	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1993	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	1993	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(AL)	1993	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1993	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(KM)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(KM)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(KM)	2010	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(KM)	2010	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(KM)	2010	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(KM)	2010	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(KM)	2010	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(KM)	2010	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(KM)	2010	General Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(KM)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2010	General Area	4WD Control	Version Information	

model	year	area	system	function	subfunction
Sportage(KM)	2010	General Area	4WD Control	Read Fault Code	
Sportage(KM)	2010	General Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2010	General Area	4WD Control	Read Data Stream	
Sportage(KM)	2010	General Area	ETACS	Version Information	
Sportage(KM)	2010	General Area	ETACS	Read Data Stream	
Sportage(KM)	2010	General Area	ETACS	Actuation Test	
Sportage(KM)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(KM)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(KM)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(KM)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(KM)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(KM)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(KM)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sportage(KM)	2010	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2010	General Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(KM)	2010	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(KM)	2009	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2009	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2009	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2009	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(KM)	2009	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(KM)	2009	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(KM)	2009	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(KM)	2009	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(KM)	2009	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(KM)	2009	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(KM)	2009	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2009	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(KM)	2009	General Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2009	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(KM)	2009	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2009	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2009	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2009	General Area	4WD Control	Version Information	

model	year	area	system	function	subfunction
Sportage(KM)	2009	General Area	4WD Control	Read Fault Code	
Sportage(KM)	2009	General Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2009	General Area	4WD Control	Read Data Stream	
Sportage(KM)	2009	General Area	ETACS	Version Information	
Sportage(KM)	2009	General Area	ETACS	Read Data Stream	
Sportage(KM)	2009	General Area	ETACS	Actuation Test	
Sportage(KM)	2009	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(KM)	2009	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(KM)	2009	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(KM)	2009	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(KM)	2009	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(KM)	2009	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2009	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(KM)	2009	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2009	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(KM)	2009	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(KM)	2009	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(KM)	2009	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(KM)	2009	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(KM)	2009	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2009	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test

model	year	area	system	function	subfunction
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sportage(KM)	2009	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2009	General Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(KM)	2009	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Version Information	
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(KM)	2008	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2008	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2008	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2008	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(KM)	2008	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(KM)	2008	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(KM)	2008	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(KM)	2008	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(KM)	2008	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(KM)	2008	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(KM)	2008	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2008	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2008	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2008	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(KM)	2008	General Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2008	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(KM)	2008	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2008	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2008	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2008	General Area	4WD Control	Version Information	
Sportage(KM)	2008	General Area	4WD Control	Read Fault Code	
Sportage(KM)	2008	General Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2008	General Area	4WD Control	Read Data Stream	
Sportage(KM)	2008	General Area	ETACS	Version Information	
Sportage(KM)	2008	General Area	ETACS	Read Data Stream	
Sportage(KM)	2008	General Area	ETACS	Actuation Test	
Sportage(KM)	2008	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(KM)	2008	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(KM)	2008	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(KM)	2008	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(KM)	2008	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(KM)	2008	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2008	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2008	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2008	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test

model	year	area	system	function	subfunction
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sportage(KM)	2008	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2008	General Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(KM)	2008	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Version Information	
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(KM)	2007	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2007	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2007	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2007	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(KM)	2007	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(KM)	2007	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(KM)	2007	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(KM)	2007	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(KM)	2007	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(KM)	2007	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(KM)	2007	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2007	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2007	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2007	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(KM)	2007	General Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2007	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(KM)	2007	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2007	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2007	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2007	General Area	4WD Control	Version Information	
Sportage(KM)	2007	General Area	4WD Control	Read Fault Code	
Sportage(KM)	2007	General Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2007	General Area	4WD Control	Read Data Stream	
Sportage(KM)	2007	General Area	ETACS	Version Information	
Sportage(KM)	2007	General Area	ETACS	Read Data Stream	
Sportage(KM)	2007	General Area	ETACS	Actuation Test	
Sportage(KM)	2007	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(KM)	2007	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(KM)	2007	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(KM)	2007	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(KM)	2007	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(KM)	2007	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2007	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2007	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2007	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test

model	year	area	system	function	subfunction
Sportage(KM)	2007	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2007	General Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(KM)	2007	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Version Information	
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(KM)	2006	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2006	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2006	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2006	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(KM)	2006	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(KM)	2006	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(KM)	2006	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(KM)	2006	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(KM)	2006	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(KM)	2006	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(KM)	2006	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2006	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2006	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2006	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(KM)	2006	General Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2006	General Area	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(KM)	2006	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2006	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2006	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2006	General Area	4WD Control	Version Information	
Sportage(KM)	2006	General Area	4WD Control	Read Fault Code	
Sportage(KM)	2006	General Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2006	General Area	4WD Control	Read Data Stream	
Sportage(KM)	2006	General Area	ETACS	Version Information	
Sportage(KM)	2006	General Area	ETACS	Read Data Stream	
Sportage(KM)	2006	General Area	ETACS	Actuation Test	
Sportage(KM)	2006	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(KM)	2006	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(KM)	2006	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(KM)	2006	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(KM)	2006	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(KM)	2006	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2006	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2006	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sportage(KM)	2006	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2006	General Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(KM)	2006	General Area	IMMO(Immobilizer)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Version Information	
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	AT/MT Recognition
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(KM)	2005	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2005	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2005	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2005	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(KM)	2005	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2005	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(KM)	2005	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(KM)	2005	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(KM)	2005	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(KM)	2005	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(KM)	2005	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(KM)	2005	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2005	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2005	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2005	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(KM)	2005	General Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2005	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(KM)	2005	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2005	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2005	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2005	General Area	4WD Control	Version Information	
Sportage(KM)	2005	General Area	4WD Control	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(KM)	2005	General Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2005	General Area	ETACS	Version Information	
Sportage(KM)	2005	General Area	ETACS	Read Data Stream	
Sportage(KM)	2005	General Area	ETACS	Actuation Test	
Sportage(KM)	2005	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(KM)	2005	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(KM)	2005	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(KM)	2005	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(KM)	2005	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(KM)	2005	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2005	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sportage(KM)	2005	General Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2005	General Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(KM)	2005	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(SL)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SL)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2016	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SL)	2016	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SL)	2016	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SL)	2016	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SL)	2016	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SL)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(SL)	2016	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2016	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SL)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SL)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sportage(SL)	2016	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Sportage(SL)	2016	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(SL)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SL)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SL)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(SL)	2016	General Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SL)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sportage(SL)	2016	General Area	BCM(Body Control Module)	Version Information	
Sportage(SL)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SL)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sportage(SL)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sportage(SL)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sportage(SL)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sportage(SL)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sportage(SL)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Sportage(SL)	2016	General Area	Driveshaft	Version Information	
Sportage(SL)	2016	General Area	Driveshaft	Read Fault Code	
Sportage(SL)	2016	General Area	Driveshaft	Clear Fault Memory	
Sportage(SL)	2016	General Area	Driveshaft	Read Data Stream	
Sportage(SL)	2016	General Area	Driveshaft	Actuation Test	
Sportage(SL)	2016	General Area	Driveshaft	Special Function	Clutch Learning Reset
Sportage(SL)	2016	General Area	Driveshaft	Special Function	Clutch Learning Read
Sportage(SL)	2016	General Area	Driveshaft	Special Function	Clutch Learning Write
Sportage(SL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	

model	year	area	system	function	subfunction
Sportage(SL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(SL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(SL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(SL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2016	General Area	Smart Key Unit	Version Information	
Sportage(SL)	2016	General Area	Smart Key Unit	Read Fault Code	
Sportage(SL)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2016	General Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2016	General Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SL)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(SL)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SL)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SL)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SL)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2016	General Area	SPAS(Smart Parking Assist System)	Version Information	

model	year	area	system	function	subfunction
Sportage(SL)	2016	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SL)	2016	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(SL)	2016	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(SL)	2016	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SL)	2016	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SL)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SL)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SL)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SL)	2016	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SL)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SL)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(SL)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(SL)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SL)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2015	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SL)	2015	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SL)	2015	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SL)	2015	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SL)	2015	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SL)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(SL)	2015	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2015	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SL)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SL)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sportage(SL)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Sportage(SL)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Sportage(SL)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Sportage(SL)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Sportage(SL)	2015	General Area	SRS(Supplemental Inflatable Restraint)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Sportage(SL)	2015	General Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SL)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2015	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sportage(SL)	2015	General Area	BCM(Body Control Module)	Version Information	
Sportage(SL)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SL)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2015	General Area	Smart Key Unit	Version Information	
Sportage(SL)	2015	General Area	Smart Key Unit	Read Fault Code	
Sportage(SL)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2015	General Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2015	General Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SL)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(SL)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SL)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SL)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SL)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2015	General Area	Power Steering	Version Information	
Sportage(SL)	2015	General Area	Power Steering	Read Fault Code	
Sportage(SL)	2015	General Area	Power Steering	Clear Fault Memory	
Sportage(SL)	2015	General Area	Power Steering	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(SL)	2015	General Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SL)	2015	General Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SL)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SL)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SL)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SL)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SL)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(SL)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(SL)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(SL)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SL)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SL)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(SL)	2015	General Area	4WD Control	Version Information	
Sportage(SL)	2015	General Area	4WD Control	Read Fault Code	
Sportage(SL)	2015	General Area	4WD Control	Clear Fault Memory	
Sportage(SL)	2015	General Area	4WD Control	Read Data Stream	
Sportage(SL)	2015	General Area	4WD Control	Actuation Test	
Sportage(SL)	2015	General Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SL)	2015	General Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SL)	2015	General Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SL)	2015	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(SL)	2015	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SL)	2015	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(SL)	2015	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(SL)	2015	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SL)	2015	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SL)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SL)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SL)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SL)	2015	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SL)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SL)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test

model	year	area	system	function	subfunction
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(SL)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(SL)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SL)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sportage(SL)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SL)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SL)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SL)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SL)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(SL)	2014	General Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(SL)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2014	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sportage(SL)	2014	General Area	BCM(Body Control Module)	Version Information	
Sportage(SL)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SL)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2014	General Area	Smart Key Unit	Version Information	
Sportage(SL)	2014	General Area	Smart Key Unit	Read Fault Code	
Sportage(SL)	2014	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2014	General Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2014	General Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SL)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(SL)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SL)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SL)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SL)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2014	General Area	Power Steering	Version Information	
Sportage(SL)	2014	General Area	Power Steering	Read Fault Code	
Sportage(SL)	2014	General Area	Power Steering	Clear Fault Memory	
Sportage(SL)	2014	General Area	Power Steering	Read Data Stream	
Sportage(SL)	2014	General Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SL)	2014	General Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SL)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(SL)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SL)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SL)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SL)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(SL)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(SL)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(SL)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SL)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SL)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(SL)	2014	General Area	4WD Control	Version Information	
Sportage(SL)	2014	General Area	4WD Control	Read Fault Code	
Sportage(SL)	2014	General Area	4WD Control	Clear Fault Memory	
Sportage(SL)	2014	General Area	4WD Control	Read Data Stream	
Sportage(SL)	2014	General Area	4WD Control	Actuation Test	
Sportage(SL)	2014	General Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SL)	2014	General Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SL)	2014	General Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SL)	2014	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(SL)	2014	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SL)	2014	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(SL)	2014	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(SL)	2014	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SL)	2014	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SL)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Sportage(SL)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SL)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SL)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SL)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sportage(SL)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Sportage(SL)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Sportage(SL)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SL)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(SL)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(SL)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SL)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2013	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SL)	2013	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SL)	2013	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SL)	2013	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SL)	2013	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SL)	2013	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SL)	2013	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sportage(SL)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Sportage(SL)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Sportage(SL)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Sportage(SL)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Sportage(SL)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Sportage(SL)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Special Function	ACU Variant Coding
Sportage(SL)	2013	General Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SL)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2013	General Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Sportage(SL)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SL)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2013	General Area	Smart Key Unit	Version Information	
Sportage(SL)	2013	General Area	Smart Key Unit	Read Fault Code	
Sportage(SL)	2013	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2013	General Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2013	General Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SL)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(SL)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SL)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SL)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SL)	2013	General Area	Power Steering	Version Information	
Sportage(SL)	2013	General Area	Power Steering	Read Fault Code	
Sportage(SL)	2013	General Area	Power Steering	Clear Fault Memory	
Sportage(SL)	2013	General Area	Power Steering	Read Data Stream	
Sportage(SL)	2013	General Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SL)	2013	General Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SL)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SL)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SL)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Sportage(SL)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SL)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(SL)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(SL)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(SL)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SL)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SL)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(SL)	2013	General Area	4WD Control	Version Information	
Sportage(SL)	2013	General Area	4WD Control	Read Fault Code	
Sportage(SL)	2013	General Area	4WD Control	Clear Fault Memory	
Sportage(SL)	2013	General Area	4WD Control	Read Data Stream	
Sportage(SL)	2013	General Area	4WD Control	Actuation Test	
Sportage(SL)	2013	General Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SL)	2013	General Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SL)	2013	General Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SL)	2013	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(SL)	2013	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SL)	2013	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(SL)	2013	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(SL)	2013	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SL)	2013	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SL)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SL)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SL)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SL)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Sportage(SL)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SL)	2013	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SL)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(SL)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(SL)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2012	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SL)	2012	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SL)	2012	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SL)	2012	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SL)	2012	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SL)	2012	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SL)	2012	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2012	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sportage(SL)	2012	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Sportage(SL)	2012	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Sportage(SL)	2012	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Sportage(SL)	2012	General Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Sportage(SL)	2012	General Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Sportage(SL)	2012	General Area	SRS(Supplemental Inflatable Restraint)	Special Function	ACU Variant Coding
Sportage(SL)	2012	General Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SL)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2012	General Area	BCM(Body Control Module)	Version Information	
Sportage(SL)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SL)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2012	General Area	Smart Key Unit	Version Information	
Sportage(SL)	2012	General Area	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(SL)	2012	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2012	General Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2012	General Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2012	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2012	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2012	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SL)	2012	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(SL)	2012	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2012	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SL)	2012	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SL)	2012	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2012	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SL)	2012	General Area	Power Steering	Version Information	
Sportage(SL)	2012	General Area	Power Steering	Read Fault Code	
Sportage(SL)	2012	General Area	Power Steering	Clear Fault Memory	
Sportage(SL)	2012	General Area	Power Steering	Read Data Stream	
Sportage(SL)	2012	General Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SL)	2012	General Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SL)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SL)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SL)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SL)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SL)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(SL)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(SL)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(SL)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SL)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SL)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(SL)	2012	General Area	4WD Control	Version Information	
Sportage(SL)	2012	General Area	4WD Control	Read Fault Code	
Sportage(SL)	2012	General Area	4WD Control	Clear Fault Memory	
Sportage(SL)	2012	General Area	4WD Control	Read Data Stream	
Sportage(SL)	2012	General Area	4WD Control	Actuation Test	
Sportage(SL)	2012	General Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SL)	2012	General Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SL)	2012	General Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SL)	2012	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(SL)	2012	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SL)	2012	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(SL)	2012	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(SL)	2012	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SL)	2012	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SL)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SL)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SL)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SL)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SL)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SL)	2012	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(SL)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(SL)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SL)	2011	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2011	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SL)	2011	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SL)	2011	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SL)	2011	General Area	ESP(Electronic Stability Program)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(SL)	2011	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SL)	2011	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SL)	2011	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2011	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sportage(SL)	2011	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Sportage(SL)	2011	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SL)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SL)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SL)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SL)	2011	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Sportage(SL)	2011	General Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SL)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2011	General Area	BCM(Body Control Module)	Version Information	
Sportage(SL)	2011	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SL)	2011	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2011	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2011	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2011	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2011	General Area	Smart Key Unit	Version Information	
Sportage(SL)	2011	General Area	Smart Key Unit	Read Fault Code	
Sportage(SL)	2011	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2011	General Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2011	General Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2011	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2011	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2011	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SL)	2011	General Area	Smart Key Unit	Special Function	ESCL Status Information

model	year	area	system	function	subfunction
Sportage(SL)	2011	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2011	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SL)	2011	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SL)	2011	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2011	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SL)	2011	General Area	Power Steering	Version Information	
Sportage(SL)	2011	General Area	Power Steering	Read Fault Code	
Sportage(SL)	2011	General Area	Power Steering	Clear Fault Memory	
Sportage(SL)	2011	General Area	Power Steering	Read Data Stream	
Sportage(SL)	2011	General Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SL)	2011	General Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SL)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SL)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SL)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SL)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SL)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(SL)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(SL)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(SL)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SL)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SL)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(SL)	2011	General Area	4WD Control	Version Information	
Sportage(SL)	2011	General Area	4WD Control	Read Fault Code	
Sportage(SL)	2011	General Area	4WD Control	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(SL)	2011	General Area	4WD Control	Read Data Stream	
Sportage(SL)	2011	General Area	4WD Control	Actuation Test	
Sportage(SL)	2011	General Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SL)	2011	General Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SL)	2011	General Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SL)	2011	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(SL)	2011	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SL)	2011	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(SL)	2011	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(SL)	2011	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SL)	2011	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SL)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SL)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SL)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SL)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SL)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SL)	2011	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SLE)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(SLE)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SLE)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SLE)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SLE)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SLE)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SLE)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SLE)	2016	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SLE)	2016	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SLE)	2016	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SLE)	2016	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SLE)	2016	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SLE)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(SLE)	2016	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SLE)	2016	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SLE)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SLE)	2016	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding

model	year	area	system	function	subfunction
Sportage(SLE)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SLE)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SLE)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SLE)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SLE)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(SLE)	2016	General Area	AC(Air Conditioning)	Version Information	
Sportage(SLE)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SLE)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SLE)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SLE)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SLE)	2016	General Area	BCM(Body Control Module)	Version Information	
Sportage(SLE)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SLE)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SLE)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SLE)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(SLE)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sportage(SLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sportage(SLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sportage(SLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sportage(SLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sportage(SLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Sportage(SLE)	2016	General Area	Driveshaft	Version Information	
Sportage(SLE)	2016	General Area	Driveshaft	Read Fault Code	
Sportage(SLE)	2016	General Area	Driveshaft	Clear Fault Memory	
Sportage(SLE)	2016	General Area	Driveshaft	Read Data Stream	
Sportage(SLE)	2016	General Area	Driveshaft	Actuation Test	
Sportage(SLE)	2016	General Area	Driveshaft	Special Function	Clutch Learning Reset
Sportage(SLE)	2016	General Area	Driveshaft	Special Function	Clutch Learning Read
Sportage(SLE)	2016	General Area	Driveshaft	Special Function	Clutch Learning Write

model	year	area	system	function	subfunction
Sportage(SLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(SLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(SLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(SLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(SLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SLE)	2016	General Area	Smart Key Unit	Version Information	
Sportage(SLE)	2016	General Area	Smart Key Unit	Read Fault Code	
Sportage(SLE)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SLE)	2016	General Area	Smart Key Unit	Read Data Stream	
Sportage(SLE)	2016	General Area	Smart Key Unit	Actuation Test	
Sportage(SLE)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SLE)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SLE)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SLE)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(SLE)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SLE)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SLE)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SLE)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SLE)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Sportage(SLE)	2016	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(SLE)	2016	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SLE)	2016	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(SLE)	2016	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(SLE)	2016	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SLE)	2016	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SLE)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SLE)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SLE)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SLE)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SLE)	2016	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SLE)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SLE)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SLE)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Sportage(SLE)	2016	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SLE)	2016	General Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SLE)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(SLE)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SLE)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SLE)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SLE)	2015	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SLE)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SLE)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SLE)	2015	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SLE)	2015	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SLE)	2015	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SLE)	2015	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SLE)	2015	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SLE)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(SLE)	2015	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SLE)	2015	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SLE)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SLE)	2015	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sportage(SLE)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SLE)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SLE)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(SLE)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SLE)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(SLE)	2015	General Area	AC(Air Conditioning)	Version Information	
Sportage(SLE)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SLE)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SLE)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SLE)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SLE)	2015	General Area	BCM(Body Control Module)	Version Information	
Sportage(SLE)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SLE)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SLE)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SLE)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(SLE)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SLE)	2015	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sportage(SLE)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sportage(SLE)	2015	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sportage(SLE)	2015	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sportage(SLE)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sportage(SLE)	2015	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Sportage(SLE)	2015	General Area	Driveshaft	Version Information	
Sportage(SLE)	2015	General Area	Driveshaft	Read Fault Code	
Sportage(SLE)	2015	General Area	Driveshaft	Clear Fault Memory	
Sportage(SLE)	2015	General Area	Driveshaft	Read Data Stream	
Sportage(SLE)	2015	General Area	Driveshaft	Actuation Test	
Sportage(SLE)	2015	General Area	Driveshaft	Special Function	Clutch Learning Reset
Sportage(SLE)	2015	General Area	Driveshaft	Special Function	Clutch Learning Read
Sportage(SLE)	2015	General Area	Driveshaft	Special Function	Clutch Learning Write
Sportage(SLE)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(SLE)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(SLE)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(SLE)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SLE)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SLE)	2015	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(SLE)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SLE)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SLE)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SLE)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SLE)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SLE)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SLE)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SLE)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SLE)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SLE)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SLE)	2015	General Area	Smart Key Unit	Version Information	
Sportage(SLE)	2015	General Area	Smart Key Unit	Read Fault Code	
Sportage(SLE)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SLE)	2015	General Area	Smart Key Unit	Read Data Stream	
Sportage(SLE)	2015	General Area	Smart Key Unit	Actuation Test	
Sportage(SLE)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SLE)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SLE)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SLE)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(SLE)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SLE)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SLE)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SLE)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SLE)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SLE)	2015	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(SLE)	2015	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SLE)	2015	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(SLE)	2015	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(SLE)	2015	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SLE)	2015	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SLE)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SLE)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SLE)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SLE)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SLE)	2015	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SLE)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SLE)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SLE)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Sportage(SLE)	2015	General Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(SLE)	2015	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SLE)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(SLE)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SLE)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SLE)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SLE)	2014	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SLE)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SLE)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Sportage(SLE)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SLE)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SLE)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SLE)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SLE)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Sportage(SLE)	2014	General Area	AC(Air Conditioning)	Version Information	
Sportage(SLE)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SLE)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SLE)	2014	General Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(SLE)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SLE)	2014	General Area	BCM(Body Control Module)	Version Information	
Sportage(SLE)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SLE)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SLE)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SLE)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(SLE)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SLE)	2014	General Area	Smart Key Unit	Version Information	
Sportage(SLE)	2014	General Area	Smart Key Unit	Read Fault Code	
Sportage(SLE)	2014	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SLE)	2014	General Area	Smart Key Unit	Read Data Stream	
Sportage(SLE)	2014	General Area	Smart Key Unit	Actuation Test	
Sportage(SLE)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SLE)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SLE)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SLE)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(SLE)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SLE)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SLE)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SLE)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SLE)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SLE)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SLE)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SLE)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SLE)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SLE)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SLE)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SLE)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SLE)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SLE)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Sportage(SLE)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SLE)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(SLE)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(SLE)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(SLE)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SLE)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SLE)	2014	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(SLE)	2014	General Area	4WD Control	Version Information	
Sportage(SLE)	2014	General Area	4WD Control	Read Fault Code	
Sportage(SLE)	2014	General Area	4WD Control	Clear Fault Memory	
Sportage(SLE)	2014	General Area	4WD Control	Read Data Stream	
Sportage(SLE)	2014	General Area	4WD Control	Actuation Test	
Sportage(SLE)	2014	General Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SLE)	2014	General Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SLE)	2014	General Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SLE)	2014	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(SLE)	2014	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SLE)	2014	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(SLE)	2014	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(SLE)	2014	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SLE)	2014	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SLE)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SLE)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SLE)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SLE)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SLE)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SLE)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)

model	year	area	system	function	subfunction
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SLE)	2014	General Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sportage(SLE)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(SLE)	2014	General Area	Power Steering	Version Information	
Sportage(SLE)	2014	General Area	Power Steering	Read Fault Code	
Sportage(SLE)	2014	General Area	Power Steering	Clear Fault Memory	
Sportage(SLE)	2014	General Area	Power Steering	Read Data Stream	
Sportage(SLE)	2014	General Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SLE)	2014	General Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SLE)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SLE)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SLE)	2014	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(SLE)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(SLE)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SLE)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SLE)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SLE)	2013	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SLE)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SLE)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SLE)	2013	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SLE)	2013	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SLE)	2013	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SLE)	2013	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SLE)	2013	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SLE)	2013	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SLE)	2013	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SLE)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sportage(SLE)	2013	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Sportage(SLE)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Sportage(SLE)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Sportage(SLE)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Sportage(SLE)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Sportage(SLE)	2013	General Area	SRS(Supplemental Inflatable Restraint)	Special Function	ACU Variant Coding
Sportage(SLE)	2013	General Area	AC(Air Conditioning)	Version Information	
Sportage(SLE)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SLE)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(SLE)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SLE)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SLE)	2013	General Area	BCM(Body Control Module)	Version Information	
Sportage(SLE)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SLE)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SLE)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SLE)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(SLE)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SLE)	2013	General Area	Smart Key Unit	Version Information	
Sportage(SLE)	2013	General Area	Smart Key Unit	Read Fault Code	
Sportage(SLE)	2013	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SLE)	2013	General Area	Smart Key Unit	Read Data Stream	
Sportage(SLE)	2013	General Area	Smart Key Unit	Actuation Test	
Sportage(SLE)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SLE)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SLE)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SLE)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(SLE)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SLE)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SLE)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SLE)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SLE)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SLE)	2013	General Area	Power Steering	Version Information	
Sportage(SLE)	2013	General Area	Power Steering	Read Fault Code	
Sportage(SLE)	2013	General Area	Power Steering	Clear Fault Memory	
Sportage(SLE)	2013	General Area	Power Steering	Read Data Stream	
Sportage(SLE)	2013	General Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SLE)	2013	General Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SLE)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SLE)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(SLE)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SLE)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SLE)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SLE)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SLE)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SLE)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SLE)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SLE)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SLE)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(SLE)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(SLE)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(SLE)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SLE)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SLE)	2013	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(SLE)	2013	General Area	4WD Control	Version Information	
Sportage(SLE)	2013	General Area	4WD Control	Read Fault Code	
Sportage(SLE)	2013	General Area	4WD Control	Clear Fault Memory	
Sportage(SLE)	2013	General Area	4WD Control	Read Data Stream	
Sportage(SLE)	2013	General Area	4WD Control	Actuation Test	
Sportage(SLE)	2013	General Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SLE)	2013	General Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SLE)	2013	General Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SLE)	2013	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(SLE)	2013	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SLE)	2013	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(SLE)	2013	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(SLE)	2013	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SLE)	2013	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SLE)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SLE)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Sportage(SLE)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SLE)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SLE)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SLE)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SLE)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SLE)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SLE)	2013	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(SLE)	2012	General Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Sportage(SLE)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SLE)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SLE)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SLE)	2012	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SLE)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SLE)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SLE)	2012	General Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SLE)	2012	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SLE)	2012	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SLE)	2012	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SLE)	2012	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SLE)	2012	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SLE)	2012	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SLE)	2012	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sportage(SLE)	2012	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Sportage(SLE)	2012	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SLE)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SLE)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SLE)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SLE)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Sportage(SLE)	2012	General Area	AC(Air Conditioning)	Version Information	
Sportage(SLE)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SLE)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SLE)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SLE)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SLE)	2012	General Area	BCM(Body Control Module)	Version Information	
Sportage(SLE)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SLE)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SLE)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SLE)	2012	General Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sportage(SLE)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SLE)	2012	General Area	Smart Key Unit	Version Information	
Sportage(SLE)	2012	General Area	Smart Key Unit	Read Fault Code	
Sportage(SLE)	2012	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SLE)	2012	General Area	Smart Key Unit	Read Data Stream	
Sportage(SLE)	2012	General Area	Smart Key Unit	Actuation Test	
Sportage(SLE)	2012	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SLE)	2012	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SLE)	2012	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SLE)	2012	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(SLE)	2012	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SLE)	2012	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SLE)	2012	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SLE)	2012	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SLE)	2012	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SLE)	2012	General Area	Power Steering	Version Information	
Sportage(SLE)	2012	General Area	Power Steering	Read Fault Code	
Sportage(SLE)	2012	General Area	Power Steering	Clear Fault Memory	
Sportage(SLE)	2012	General Area	Power Steering	Read Data Stream	
Sportage(SLE)	2012	General Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SLE)	2012	General Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SLE)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SLE)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SLE)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SLE)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SLE)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SLE)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SLE)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SLE)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SLE)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Sportage(SLE)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SLE)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(SLE)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(SLE)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(SLE)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SLE)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SLE)	2012	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(SLE)	2012	General Area	4WD Control	Version Information	
Sportage(SLE)	2012	General Area	4WD Control	Read Fault Code	
Sportage(SLE)	2012	General Area	4WD Control	Clear Fault Memory	
Sportage(SLE)	2012	General Area	4WD Control	Read Data Stream	
Sportage(SLE)	2012	General Area	4WD Control	Actuation Test	
Sportage(SLE)	2012	General Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SLE)	2012	General Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SLE)	2012	General Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SLE)	2012	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(SLE)	2012	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SLE)	2012	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(SLE)	2012	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(SLE)	2012	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SLE)	2012	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SLE)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SLE)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SLE)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SLE)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SLE)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SLE)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SLE)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SLE)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)

model	year	area	system	function	subfunction
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SLE)	2012	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Version Information	
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Idle CO Adjustment
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SLE)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(SLE)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SLE)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SLE)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SLE)	2011	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SLE)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SLE)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program)	Version Information	

model	year	area	system	function	subfunction
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration
Sportage(SLE)	2011	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SLE)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SLE)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SLE)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SLE)	2011	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Sportage(SLE)	2011	General Area	AC(Air Conditioning)	Version Information	
Sportage(SLE)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SLE)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SLE)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SLE)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(SLE)	2011	General Area	BCM(Body Control Module)	Version Information	
Sportage(SLE)	2011	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SLE)	2011	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SLE)	2011	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SLE)	2011	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(SLE)	2011	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SLE)	2011	General Area	Smart Key Unit	Version Information	
Sportage(SLE)	2011	General Area	Smart Key Unit	Read Fault Code	
Sportage(SLE)	2011	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(SLE)	2011	General Area	Smart Key Unit	Read Data Stream	
Sportage(SLE)	2011	General Area	Smart Key Unit	Actuation Test	
Sportage(SLE)	2011	General Area	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Sportage(SLE)	2011	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SLE)	2011	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SLE)	2011	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(SLE)	2011	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SLE)	2011	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SLE)	2011	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SLE)	2011	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SLE)	2011	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(SLE)	2011	General Area	Power Steering	Version Information	
Sportage(SLE)	2011	General Area	Power Steering	Read Fault Code	
Sportage(SLE)	2011	General Area	Power Steering	Clear Fault Memory	
Sportage(SLE)	2011	General Area	Power Steering	Read Data Stream	
Sportage(SLE)	2011	General Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SLE)	2011	General Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SLE)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SLE)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SLE)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SLE)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SLE)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SLE)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SLE)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SLE)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SLE)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SLE)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SLE)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(SLE)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(SLE)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(SLE)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(SLE)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Sportage(SLE)	2011	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling

model	year	area	system	function	subfunction
Sportage(SLE)	2011	General Area	4WD Control	Version Information	
Sportage(SLE)	2011	General Area	4WD Control	Read Fault Code	
Sportage(SLE)	2011	General Area	4WD Control	Clear Fault Memory	
Sportage(SLE)	2011	General Area	4WD Control	Read Data Stream	
Sportage(SLE)	2011	General Area	4WD Control	Actuation Test	
Sportage(SLE)	2011	General Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SLE)	2011	General Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SLE)	2011	General Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SLE)	2011	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(SLE)	2011	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(SLE)	2011	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(SLE)	2011	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(SLE)	2011	General Area	SPAS(Smart Parking Assist System)	Actuation Test	
Sportage(SLE)	2011	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(SLE)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SLE)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SLE)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(SLE)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SLE)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SLE)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SLE)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SLE)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program(Mando))	Version Information	

model	year	area	system	function	subfunction
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program(Mando))	Read Fault Code	
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program(Mando))	Clear Fault Memory	
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program(Mando))	Read Data Stream	
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program(Mando))	Actuation Test	
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program(Mando))	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program(Mando))	Special Function	HCU Air Bleeding Mode
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program(Mando))	Special Function	Auto Detected Configuration
Sportage(SLE)	2011	General Area	ESP(Electronic Stability Program(Mando))	Special Function	Longitudinal G Sensor Calibration
Sportage(SLE)	2011	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Version Information	
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(QL)	2017	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(QL)	2017	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(QL)	2017	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(QL)	2017	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(QL)	2017	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(QL)	2017	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(QL)	2017	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Assembly Check
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Brake Pad Change Mode
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Radar Sensor
Sportage(QL)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	AEB Variant Coding
Sportage(QL)	2017	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(QL)	2017	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(QL)	2017	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(QL)	2017	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(QL)	2017	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(QL)	2017	General Area	AC(Air Conditioning)	Version Information	
Sportage(QL)	2017	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(QL)	2017	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(QL)	2017	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(QL)	2017	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(QL)	2017	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sportage(QL)	2017	General Area	BCM(Body Control Module)	Version Information	
Sportage(QL)	2017	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(QL)	2017	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(QL)	2017	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(QL)	2017	General Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sportage(QL)	2017	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(QL)	2017	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sportage(QL)	2017	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sportage(QL)	2017	General Area	BCM(Body Control Module)	Special Function	Power Tailgate Mode
Sportage(QL)	2017	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sportage(QL)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sportage(QL)	2017	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sportage(QL)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sportage(QL)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Sportage(QL)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sportage(QL)	2017	General Area	Driveshaft	Version Information	
Sportage(QL)	2017	General Area	Driveshaft	Read Fault Code	
Sportage(QL)	2017	General Area	Driveshaft	Clear Fault Memory	
Sportage(QL)	2017	General Area	Driveshaft	Read Data Stream	
Sportage(QL)	2017	General Area	Driveshaft	Actuation Test	
Sportage(QL)	2017	General Area	Driveshaft	Special Function	Clutch Learning Reset
Sportage(QL)	2017	General Area	Driveshaft	Special Function	Clutch Learning Read
Sportage(QL)	2017	General Area	Driveshaft	Special Function	Clutch Learning Write
Sportage(QL)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(QL)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(QL)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(QL)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(QL)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(QL)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(QL)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(QL)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(QL)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(QL)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(QL)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(QL)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(QL)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sportage(QL)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sportage(QL)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(QL)	2017	General Area	Smart Key Unit	Version Information	
Sportage(QL)	2017	General Area	Smart Key Unit	Read Fault Code	
Sportage(QL)	2017	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(QL)	2017	General Area	Smart Key Unit	Read Data Stream	
Sportage(QL)	2017	General Area	Smart Key Unit	Actuation Test	
Sportage(QL)	2017	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(QL)	2017	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(QL)	2017	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(QL)	2017	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(QL)	2017	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(QL)	2017	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(QL)	2017	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(QL)	2017	General Area	Smart Key Unit	Special Function	ESCL Enable Output Check
Sportage(QL)	2017	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(QL)	2017	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(QL)	2017	General Area	LDWS(Lane Departure Warning System)	Version Information	
Sportage(QL)	2017	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sportage(QL)	2017	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sportage(QL)	2017	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sportage(QL)	2017	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sportage(QL)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sportage(QL)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sportage(QL)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Sportage(QL)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Sportage(QL)	2017	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(QL)	2017	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(QL)	2017	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(QL)	2017	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(QL)	2017	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(QL)	2017	General Area	PGS(Parking Guide System)	Version Information	
Sportage(QL)	2017	General Area	PGS(Parking Guide System)	Read Fault Code	
Sportage(QL)	2017	General Area	PGS(Parking Guide System)	Clear Fault Memory	
Sportage(QL)	2017	General Area	PGS(Parking Guide System)	Read Data Stream	
Sportage(QL)	2017	General Area	Telematics Unit	Version Information	
Sportage(QL)	2017	General Area	Telematics Unit	Read Fault Code	
Sportage(QL)	2017	General Area	Telematics Unit	Clear Fault Memory	
Sportage(QL)	2017	General Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(QL)	2017	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(QL)	2017	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(QL)	2017	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(QL)	2017	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(QL)	2017	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(QL)	2017	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(QL)	2017	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(QL)	2017	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(QL)	2017	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(QL)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(QL)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(QL)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(QL)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(QL)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(QL)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(QL)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Assembly Check
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Brake Pad Change Mode
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)

model	year	area	system	function	subfunction
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Radar Sensor
Sportage(QL)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	AEB Variant Coding
Sportage(QL)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(QL)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(QL)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(QL)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(QL)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(QL)	2016	General Area	AC(Air Conditioning)	Version Information	
Sportage(QL)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(QL)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(QL)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(QL)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(QL)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sportage(QL)	2016	General Area	BCM(Body Control Module)	Version Information	
Sportage(QL)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(QL)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(QL)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(QL)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(QL)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(QL)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sportage(QL)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sportage(QL)	2016	General Area	BCM(Body Control Module)	Special Function	Power Tailgate Mode
Sportage(QL)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sportage(QL)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sportage(QL)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sportage(QL)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sportage(QL)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Sportage(QL)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Sportage(QL)	2016	General Area	Driveshaft	Version Information	
Sportage(QL)	2016	General Area	Driveshaft	Read Fault Code	
Sportage(QL)	2016	General Area	Driveshaft	Clear Fault Memory	
Sportage(QL)	2016	General Area	Driveshaft	Read Data Stream	
Sportage(QL)	2016	General Area	Driveshaft	Actuation Test	
Sportage(QL)	2016	General Area	Driveshaft	Special Function	Clutch Learning Reset
Sportage(QL)	2016	General Area	Driveshaft	Special Function	Clutch Learning Read
Sportage(QL)	2016	General Area	Driveshaft	Special Function	Clutch Learning Write
Sportage(QL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(QL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(QL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(QL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(QL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(QL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(QL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(QL)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(QL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(QL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(QL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(QL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(QL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sportage(QL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sportage(QL)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(QL)	2016	General Area	Smart Key Unit	Version Information	
Sportage(QL)	2016	General Area	Smart Key Unit	Read Fault Code	
Sportage(QL)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(QL)	2016	General Area	Smart Key Unit	Read Data Stream	
Sportage(QL)	2016	General Area	Smart Key Unit	Actuation Test	
Sportage(QL)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Sportage(QL)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(QL)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(QL)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(QL)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(QL)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(QL)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(QL)	2016	General Area	Smart Key Unit	Special Function	ESCL Enable Output Check
Sportage(QL)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(QL)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(QL)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Sportage(QL)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sportage(QL)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sportage(QL)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sportage(QL)	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sportage(QL)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sportage(QL)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sportage(QL)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Sportage(QL)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Sportage(QL)	2016	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(QL)	2016	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(QL)	2016	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(QL)	2016	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(QL)	2016	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(QL)	2016	General Area	PGS(Parking Guide System)	Version Information	
Sportage(QL)	2016	General Area	PGS(Parking Guide System)	Read Fault Code	
Sportage(QL)	2016	General Area	PGS(Parking Guide System)	Clear Fault Memory	
Sportage(QL)	2016	General Area	PGS(Parking Guide System)	Read Data Stream	
Sportage(QL)	2016	General Area	Telematics Unit	Version Information	
Sportage(QL)	2016	General Area	Telematics Unit	Read Fault Code	
Sportage(QL)	2016	General Area	Telematics Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(QL)	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(QL)	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(QL)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(QL)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(QL)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(QL)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(QL)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(QL)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(QL)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(QL)	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Version Information	
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration

model	year	area	system	function	subfunction
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(QLE)	2017	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(QLE)	2017	General Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(QLE)	2017	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(QLE)	2017	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(QLE)	2017	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(QLE)	2017	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Assembly Check
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Brake Pad Change Mode
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	Radar Sensor
Sportage(QLE)	2017	General Area	ABS(Anti-Lock Brake System)	Special Function	AEB Variant Coding
Sportage(QLE)	2017	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(QLE)	2017	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(QLE)	2017	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(QLE)	2017	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(QLE)	2017	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(QLE)	2017	General Area	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Sportage(QLE)	2017	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(QLE)	2017	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	AC(Air Conditioning)	Read Data Stream	
Sportage(QLE)	2017	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(QLE)	2017	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sportage(QLE)	2017	General Area	BCM(Body Control Module)	Version Information	
Sportage(QLE)	2017	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(QLE)	2017	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(QLE)	2017	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(QLE)	2017	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(QLE)	2017	General Area	BCM(Body Control Module)	Special Function	Siren System Identification(Only
Sportage(QLE)	2017	General Area	BCM(Body Control Module)	Special Function	UIP System Identification
Sportage(QLE)	2017	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sportage(QLE)	2017	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sportage(QLE)	2017	General Area	BCM(Body Control Module)	Special Function	Power Tailgate Mode
Sportage(QLE)	2017	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sportage(QLE)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sportage(QLE)	2017	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sportage(QLE)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Sportage(QLE)	2017	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sportage(QLE)	2017	General Area	Driveshaft	Version Information	
Sportage(QLE)	2017	General Area	Driveshaft	Read Fault Code	
Sportage(QLE)	2017	General Area	Driveshaft	Clear Fault Memory	
Sportage(QLE)	2017	General Area	Driveshaft	Read Data Stream	
Sportage(QLE)	2017	General Area	Driveshaft	Actuation Test	
Sportage(QLE)	2017	General Area	Driveshaft	Special Function	Clutch Learning Reset
Sportage(QLE)	2017	General Area	Driveshaft	Special Function	Clutch Learning Read
Sportage(QLE)	2017	General Area	Driveshaft	Special Function	Clutch Learning Write

model	year	area	system	function	subfunction
Sportage(QLE)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(QLE)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(QLE)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(QLE)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(QLE)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(QLE)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(QLE)	2017	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(QLE)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(QLE)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(QLE)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(QLE)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sportage(QLE)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Sportage(QLE)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Sportage(QLE)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sportage(QLE)	2017	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(QLE)	2017	General Area	Smart Key Unit	Version Information	
Sportage(QLE)	2017	General Area	Smart Key Unit	Read Fault Code	
Sportage(QLE)	2017	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(QLE)	2017	General Area	Smart Key Unit	Read Data Stream	
Sportage(QLE)	2017	General Area	Smart Key Unit	Actuation Test	
Sportage(QLE)	2017	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(QLE)	2017	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(QLE)	2017	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(QLE)	2017	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(QLE)	2017	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(QLE)	2017	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(QLE)	2017	General Area	Smart Key Unit	Special Function	ESCL Open Status Check

model	year	area	system	function	subfunction
Sportage(QLE)	2017	General Area	Smart Key Unit	Special Function	ESCL Enable Output Check
Sportage(QLE)	2017	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(QLE)	2017	General Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(QLE)	2017	General Area	LDWS(Lane Departure Warning System)	Version Information	
Sportage(QLE)	2017	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sportage(QLE)	2017	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sportage(QLE)	2017	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sportage(QLE)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sportage(QLE)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sportage(QLE)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Sportage(QLE)	2017	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Sportage(QLE)	2017	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(QLE)	2017	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(QLE)	2017	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(QLE)	2017	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(QLE)	2017	General Area	PGS(Parking Guide System)	Version Information	
Sportage(QLE)	2017	General Area	PGS(Parking Guide System)	Read Fault Code	
Sportage(QLE)	2017	General Area	PGS(Parking Guide System)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	PGS(Parking Guide System)	Read Data Stream	
Sportage(QLE)	2017	General Area	Telematics Unit	Version Information	
Sportage(QLE)	2017	General Area	Telematics Unit	Read Fault Code	
Sportage(QLE)	2017	General Area	Telematics Unit	Clear Fault Memory	
Sportage(QLE)	2017	General Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(QLE)	2017	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(QLE)	2017	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(QLE)	2017	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(QLE)	2017	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(QLE)	2017	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Sportage(QLE)	2017	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(QLE)	2017	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(QLE)	2017	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(QLE)	2017	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Sportage(QLE)	2017	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Version Information	
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(QLE)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Sportage(QLE)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(QLE)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(QLE)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(QLE)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(QLE)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(QLE)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Assembly Check
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Brake Pad Change Mode
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Radar Sensor
Sportage(QLE)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	AEB Variant Coding
Sportage(QLE)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(QLE)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(QLE)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(QLE)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(QLE)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(QLE)	2016	General Area	AC(Air Conditioning)	Version Information	
Sportage(QLE)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Sportage(QLE)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(QLE)	2016	General Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(QLE)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Sportage(QLE)	2016	General Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sportage(QLE)	2016	General Area	BCM(Body Control Module)	Version Information	
Sportage(QLE)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Sportage(QLE)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(QLE)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Sportage(QLE)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Sportage(QLE)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Sportage(QLE)	2016	General Area	BCM(Body Control Module)	Special Function	Siren System Identification(Only
Sportage(QLE)	2016	General Area	BCM(Body Control Module)	Special Function	UIP System Identification
Sportage(QLE)	2016	General Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sportage(QLE)	2016	General Area	BCM(Body Control Module)	Special Function	Service Reminder Setting
Sportage(QLE)	2016	General Area	BCM(Body Control Module)	Special Function	Power Tailgate Mode
Sportage(QLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Sportage(QLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sportage(QLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sportage(QLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sportage(QLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Sportage(QLE)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sportage(QLE)	2016	General Area	Driveshaft	Version Information	
Sportage(QLE)	2016	General Area	Driveshaft	Read Fault Code	
Sportage(QLE)	2016	General Area	Driveshaft	Clear Fault Memory	
Sportage(QLE)	2016	General Area	Driveshaft	Read Data Stream	
Sportage(QLE)	2016	General Area	Driveshaft	Actuation Test	
Sportage(QLE)	2016	General Area	Driveshaft	Special Function	Clutch Learning Reset
Sportage(QLE)	2016	General Area	Driveshaft	Special Function	Clutch Learning Read
Sportage(QLE)	2016	General Area	Driveshaft	Special Function	Clutch Learning Write
Sportage(QLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(QLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(QLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(QLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(QLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(QLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(QLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(QLE)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(QLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sportage(QLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sportage(QLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sportage(QLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sportage(QLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sportage(QLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Calibration
Sportage(QLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Download
Sportage(QLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sportage(QLE)	2016	General Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sportage(QLE)	2016	General Area	Smart Key Unit	Version Information	
Sportage(QLE)	2016	General Area	Smart Key Unit	Read Fault Code	
Sportage(QLE)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Sportage(QLE)	2016	General Area	Smart Key Unit	Read Data Stream	
Sportage(QLE)	2016	General Area	Smart Key Unit	Actuation Test	
Sportage(QLE)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(QLE)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(QLE)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(QLE)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Sportage(QLE)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(QLE)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(QLE)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Sportage(QLE)	2016	General Area	Smart Key Unit	Special Function	ESCL Enable Output Check
Sportage(QLE)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(QLE)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Sportage(QLE)	2016	General Area	LDWS(Lane Departure Warning System)	Version Information	
Sportage(QLE)	2016	General Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sportage(QLE)	2016	General Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sportage(QLE)	2016	General Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sportage(QLE)	2016	General Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sportage(QLE)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sportage(QLE)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sportage(QLE)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Sportage(QLE)	2016	General Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Sportage(QLE)	2016	General Area	SPAS(Smart Parking Assist System)	Version Information	
Sportage(QLE)	2016	General Area	SPAS(Smart Parking Assist System)	Read Fault Code	
Sportage(QLE)	2016	General Area	SPAS(Smart Parking Assist System)	Clear Fault Memory	
Sportage(QLE)	2016	General Area	SPAS(Smart Parking Assist System)	Read Data Stream	
Sportage(QLE)	2016	General Area	SPAS(Smart Parking Assist System)	Special Function	SPAS Variant Coding
Sportage(QLE)	2016	General Area	PGS(Parking Guide System)	Version Information	
Sportage(QLE)	2016	General Area	PGS(Parking Guide System)	Read Fault Code	
Sportage(QLE)	2016	General Area	PGS(Parking Guide System)	Clear Fault Memory	
Sportage(QLE)	2016	General Area	PGS(Parking Guide System)	Read Data Stream	
Sportage(QLE)	2016	General Area	Telematics Unit	Version Information	
Sportage(QLE)	2016	General Area	Telematics Unit	Read Fault Code	
Sportage(QLE)	2016	General Area	Telematics Unit	Clear Fault Memory	
Sportage(QLE)	2016	General Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(QLE)	2016	General Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(QLE)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(QLE)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(QLE)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Sportage(QLE)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(QLE)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(QLE)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(QLE)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Sportage(QLE)	2016	General Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Sportage(QLE)	2016	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Towner(HA)	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Towner(HA)	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Towner(HA)	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Towner(HA)	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Towner(HA)	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Towner(HA)	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Towner(HA)	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Towner(HA)	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Towner(HA)	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Towner(HA)	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Towner(HA)	1998	General Area	ECM(Engine Control Module)	Read Fault Code	
Towner(HA)	1998	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Towner(HA)	1997	General Area	ECM(Engine Control Module)	Read Fault Code	
Towner(HA)	1997	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Towner(HA)	1996	General Area	ECM(Engine Control Module)	Read Fault Code	
Towner(HA)	1996	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Towner(HA)	1995	General Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Towner(HA)	1995	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Towner(HA)	1994	General Area	ECM(Engine Control Module)	Read Fault Code	
Towner(HA)	1994	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Towner(HA)	1993	General Area	ECM(Engine Control Module)	Read Fault Code	
Towner(HA)	1993	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Visto	2004	General Area	ECM(Engine Control Module)	Read Fault Code	
Visto	2004	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Visto	2004	General Area	ECM(Engine Control Module)	Read Data Stream	
Visto	2004	General Area	ECM(Engine Control Module)	Actuation Test	
Visto	2004	General Area	TCM(Transmission Control Module)	Read Fault Code	
Visto	2004	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Visto	2004	General Area	TCM(Transmission Control Module)	Read Data Stream	
Visto	2004	General Area	TCM(Transmission Control Module)	Actuation Test	
Visto	2004	General Area	ABS(Anti-Lock Brake System)	Version Information	
Visto	2004	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Visto	2004	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Visto	2004	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Visto	2004	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Visto	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Visto	2004	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Visto	2004	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Visto	2003	General Area	ECM(Engine Control Module)	Read Fault Code	
Visto	2003	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Visto	2003	General Area	ECM(Engine Control Module)	Read Data Stream	
Visto	2003	General Area	ECM(Engine Control Module)	Actuation Test	
Visto	2003	General Area	TCM(Transmission Control Module)	Read Fault Code	
Visto	2003	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Visto	2003	General Area	TCM(Transmission Control Module)	Read Data Stream	
Visto	2003	General Area	TCM(Transmission Control Module)	Actuation Test	
Visto	2003	General Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
Visto	2003	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Visto	2003	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Visto	2003	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Visto	2003	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Visto	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Visto	2003	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Visto	2003	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Visto	2002	General Area	ECM(Engine Control Module)	Read Fault Code	
Visto	2002	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Visto	2002	General Area	ECM(Engine Control Module)	Read Data Stream	
Visto	2002	General Area	ECM(Engine Control Module)	Actuation Test	
Visto	2002	General Area	TCM(Transmission Control Module)	Read Fault Code	
Visto	2002	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Visto	2002	General Area	TCM(Transmission Control Module)	Read Data Stream	
Visto	2002	General Area	TCM(Transmission Control Module)	Actuation Test	
Visto	2002	General Area	ABS(Anti-Lock Brake System)	Version Information	
Visto	2002	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Visto	2002	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Visto	2002	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Visto	2002	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Visto	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Visto	2002	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Visto	2002	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Visto	2001	General Area	ECM(Engine Control Module)	Read Fault Code	
Visto	2001	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Visto	2001	General Area	ECM(Engine Control Module)	Read Data Stream	
Visto	2001	General Area	ECM(Engine Control Module)	Actuation Test	
Visto	2001	General Area	TCM(Transmission Control Module)	Read Fault Code	
Visto	2001	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Visto	2001	General Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Visto	2001	General Area	TCM(Transmission Control Module)	Actuation Test	
Visto	2001	General Area	ABS(Anti-Lock Brake System)	Version Information	
Visto	2001	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Visto	2001	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Visto	2001	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Visto	2001	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Visto	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Visto	2001	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Visto	2001	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Visto	2000	General Area	ECM(Engine Control Module)	Read Fault Code	
Visto	2000	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Visto	2000	General Area	ECM(Engine Control Module)	Read Data Stream	
Visto	2000	General Area	ECM(Engine Control Module)	Actuation Test	
Visto	2000	General Area	TCM(Transmission Control Module)	Read Fault Code	
Visto	2000	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Visto	2000	General Area	TCM(Transmission Control Module)	Read Data Stream	
Visto	2000	General Area	TCM(Transmission Control Module)	Actuation Test	
Visto	2000	General Area	ABS(Anti-Lock Brake System)	Version Information	
Visto	2000	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Visto	2000	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Visto	2000	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Visto	2000	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Visto	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Visto	2000	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Visto	2000	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Visto	1999	General Area	ECM(Engine Control Module)	Read Fault Code	
Visto	1999	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Visto	1999	General Area	ECM(Engine Control Module)	Read Data Stream	
Visto	1999	General Area	ECM(Engine Control Module)	Actuation Test	
Visto	1999	General Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Visto	1999	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Visto	1999	General Area	TCM(Transmission Control Module)	Read Data Stream	
Visto	1999	General Area	TCM(Transmission Control Module)	Actuation Test	
Visto	1999	General Area	ABS(Anti-Lock Brake System)	Version Information	
Visto	1999	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Visto	1999	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Visto	1999	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Visto	1999	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Visto	1999	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Visto	1999	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Visto	1999	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Version Information	
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Read Fault Code	
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Read Data Stream	
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Actuation Test	
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Venga(YN)	2016	General Area	TCM(Transmission Control Module)	Version Information	
Venga(YN)	2016	General Area	TCM(Transmission Control Module)	Read Fault Code	
Venga(YN)	2016	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Venga(YN)	2016	General Area	TCM(Transmission Control Module)	Read Data Stream	
Venga(YN)	2016	General Area	TCM(Transmission Control Module)	Read Freeze Frame	
Venga(YN)	2016	General Area	TCM(Transmission Control Module)	Actuation Test	
Venga(YN)	2016	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Venga(YN)	2016	General Area	ABS(Anti-Lock Brake System)	Version Information	
Venga(YN)	2016	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Venga(YN)	2016	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Venga(YN)	2016	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Venga(YN)	2016	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Venga(YN)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Venga(YN)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HAC/AX Sensor Calibration
Venga(YN)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Venga(YN)	2016	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Venga(YN)	2016	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Venga(YN)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Venga(YN)	2016	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Venga(YN)	2016	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Venga(YN)	2016	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Venga(YN)	2016	General Area	AC(Air Conditioning)	Version Information	
Venga(YN)	2016	General Area	AC(Air Conditioning)	Read Fault Code	
Venga(YN)	2016	General Area	AC(Air Conditioning)	Clear Fault Memory	
Venga(YN)	2016	General Area	AC(Air Conditioning)	Read Data Stream	
Venga(YN)	2016	General Area	AC(Air Conditioning)	Actuation Test	
Venga(YN)	2016	General Area	BCM(Body Control Module)	Version Information	
Venga(YN)	2016	General Area	BCM(Body Control Module)	Read Fault Code	
Venga(YN)	2016	General Area	BCM(Body Control Module)	Clear Fault Memory	
Venga(YN)	2016	General Area	BCM(Body Control Module)	Read Data Stream	
Venga(YN)	2016	General Area	BCM(Body Control Module)	Actuation Test	
Venga(YN)	2016	General Area	BCM(Body Control Module)	Special Function	User Option
Venga(YN)	2016	General Area	MDPS(Motor Driven Power Steering)	Version Information	
Venga(YN)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Venga(YN)	2016	General Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Venga(YN)	2016	General Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Venga(YN)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Venga(YN)	2016	General Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Venga(YN)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Venga(YN)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Venga(YN)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Venga(YN)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Venga(YN)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Venga(YN)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Venga(YN)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Venga(YN)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Venga(YN)	2016	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Venga(YN)	2016	General Area	Smart Key Unit	Version Information	
Venga(YN)	2016	General Area	Smart Key Unit	Read Fault Code	
Venga(YN)	2016	General Area	Smart Key Unit	Clear Fault Memory	
Venga(YN)	2016	General Area	Smart Key Unit	Read Data Stream	
Venga(YN)	2016	General Area	Smart Key Unit	Actuation Test	
Venga(YN)	2016	General Area	Smart Key Unit	Special Function	Antenna Status Check
Venga(YN)	2016	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Venga(YN)	2016	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Venga(YN)	2016	General Area	Smart Key Unit	Special Function	ESCL Status Information
Venga(YN)	2016	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Venga(YN)	2016	General Area	Smart Key Unit	Special Function	Neutralization Mode
Venga(YN)	2016	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Venga(YN)	2016	General Area	Smart Key Unit	Special Function	SMK Status Information
Venga(YN)	2016	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Venga(YN)	2016	General Area	IMMO(Immobilizer)	Read Data Stream	
Venga(YN)	2016	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Venga(YN)	2016	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Venga(YN)	2016	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Venga(YN)	2016	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Venga(YN)	2016	General Area	IMMO(Immobilizer)	Special Function	Teaching
Venga(YN)	2016	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Venga(YN)	2016	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Special Function	Fuel Line Air Remove
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Special Function	ECU Tuning Data Confirm
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Special Function	Lambda Sensor(LSU)Cleaning
Venga(YN)	2016	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Venga(YN)	2016	General Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Version Information	
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Read Fault Code	
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Read Data Stream	
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Actuation Test	
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Venga(YN)	2015	General Area	TCM(Transmission Control Module)	Version Information	
Venga(YN)	2015	General Area	TCM(Transmission Control Module)	Read Fault Code	
Venga(YN)	2015	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Venga(YN)	2015	General Area	TCM(Transmission Control Module)	Read Data Stream	
Venga(YN)	2015	General Area	TCM(Transmission Control Module)	Actuation Test	
Venga(YN)	2015	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Venga(YN)	2015	General Area	ABS(Anti-Lock Brake System)	Version Information	
Venga(YN)	2015	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Venga(YN)	2015	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Venga(YN)	2015	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Venga(YN)	2015	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Venga(YN)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding

model	year	area	system	function	subfunction
Venga(YN)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HAC/AX Sensor Calibration
Venga(YN)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Venga(YN)	2015	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Venga(YN)	2015	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Venga(YN)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Venga(YN)	2015	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Venga(YN)	2015	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Venga(YN)	2015	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Venga(YN)	2015	General Area	AC(Air Conditioning)	Version Information	
Venga(YN)	2015	General Area	AC(Air Conditioning)	Read Fault Code	
Venga(YN)	2015	General Area	AC(Air Conditioning)	Clear Fault Memory	
Venga(YN)	2015	General Area	AC(Air Conditioning)	Read Data Stream	
Venga(YN)	2015	General Area	AC(Air Conditioning)	Actuation Test	
Venga(YN)	2015	General Area	BCM(Body Control Module)	Version Information	
Venga(YN)	2015	General Area	BCM(Body Control Module)	Read Fault Code	
Venga(YN)	2015	General Area	BCM(Body Control Module)	Clear Fault Memory	
Venga(YN)	2015	General Area	BCM(Body Control Module)	Read Data Stream	
Venga(YN)	2015	General Area	BCM(Body Control Module)	Actuation Test	
Venga(YN)	2015	General Area	BCM(Body Control Module)	Special Function	User Option
Venga(YN)	2015	General Area	Smart Key Unit	Version Information	
Venga(YN)	2015	General Area	Smart Key Unit	Read Fault Code	
Venga(YN)	2015	General Area	Smart Key Unit	Clear Fault Memory	
Venga(YN)	2015	General Area	Smart Key Unit	Read Data Stream	
Venga(YN)	2015	General Area	Smart Key Unit	Actuation Test	
Venga(YN)	2015	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Venga(YN)	2015	General Area	Smart Key Unit	Special Function	Neutralization Mode
Venga(YN)	2015	General Area	Smart Key Unit	Special Function	SMK Status Information
Venga(YN)	2015	General Area	Smart Key Unit	Special Function	ESCL Status Information
Venga(YN)	2015	General Area	Smart Key Unit	Special Function	FOB KEY Status Information

model	year	area	system	function	subfunction
Venga(YN)	2015	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Venga(YN)	2015	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Venga(YN)	2015	General Area	Smart Key Unit	Special Function	Antenna Status Check
Venga(YN)	2015	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Venga(YN)	2015	General Area	Power Steering	Version Information	
Venga(YN)	2015	General Area	Power Steering	Read Fault Code	
Venga(YN)	2015	General Area	Power Steering	Clear Fault Memory	
Venga(YN)	2015	General Area	Power Steering	Read Data Stream	
Venga(YN)	2015	General Area	Power Steering	Special Function	ASP Calibration
Venga(YN)	2015	General Area	Power Steering	Special Function	EPS Type Recognition
Venga(YN)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Venga(YN)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Venga(YN)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Venga(YN)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Venga(YN)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Venga(YN)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Venga(YN)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Venga(YN)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Venga(YN)	2015	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Venga(YN)	2015	General Area	IMMO(Immobilizer)	Read Data Stream	
Venga(YN)	2015	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Venga(YN)	2015	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Venga(YN)	2015	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Venga(YN)	2015	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Venga(YN)	2015	General Area	IMMO(Immobilizer)	Special Function	Teaching
Venga(YN)	2015	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Venga(YN)	2015	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration

model	year	area	system	function	subfunction
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Venga(YN)	2015	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Version Information	
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Read Fault Code	
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Read Data Stream	
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Actuation Test	
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Venga(YN)	2014	General Area	TCM(Transmission Control Module)	Version Information	
Venga(YN)	2014	General Area	TCM(Transmission Control Module)	Read Fault Code	
Venga(YN)	2014	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Venga(YN)	2014	General Area	TCM(Transmission Control Module)	Read Data Stream	
Venga(YN)	2014	General Area	TCM(Transmission Control Module)	Actuation Test	
Venga(YN)	2014	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Venga(YN)	2014	General Area	ABS(Anti-Lock Brake System)	Version Information	
Venga(YN)	2014	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Venga(YN)	2014	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Venga(YN)	2014	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Venga(YN)	2014	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Venga(YN)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Venga(YN)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HAC/AX Sensor Calibration
Venga(YN)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Venga(YN)	2014	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Venga(YN)	2014	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Venga(YN)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Venga(YN)	2014	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Venga(YN)	2014	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Venga(YN)	2014	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Venga(YN)	2014	General Area	AC(Air Conditioning)	Version Information	
Venga(YN)	2014	General Area	AC(Air Conditioning)	Read Fault Code	
Venga(YN)	2014	General Area	AC(Air Conditioning)	Clear Fault Memory	
Venga(YN)	2014	General Area	AC(Air Conditioning)	Read Data Stream	
Venga(YN)	2014	General Area	AC(Air Conditioning)	Actuation Test	
Venga(YN)	2014	General Area	BCM(Body Control Module)	Version Information	
Venga(YN)	2014	General Area	BCM(Body Control Module)	Read Fault Code	
Venga(YN)	2014	General Area	BCM(Body Control Module)	Clear Fault Memory	
Venga(YN)	2014	General Area	BCM(Body Control Module)	Read Data Stream	
Venga(YN)	2014	General Area	BCM(Body Control Module)	Actuation Test	
Venga(YN)	2014	General Area	BCM(Body Control Module)	Special Function	User Option
Venga(YN)	2014	General Area	Smart Key Unit	Version Information	
Venga(YN)	2014	General Area	Smart Key Unit	Read Fault Code	
Venga(YN)	2014	General Area	Smart Key Unit	Clear Fault Memory	
Venga(YN)	2014	General Area	Smart Key Unit	Read Data Stream	
Venga(YN)	2014	General Area	Smart Key Unit	Actuation Test	
Venga(YN)	2014	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Venga(YN)	2014	General Area	Smart Key Unit	Special Function	Neutralization Mode
Venga(YN)	2014	General Area	Smart Key Unit	Special Function	SMK Status Information
Venga(YN)	2014	General Area	Smart Key Unit	Special Function	ESCL Status Information
Venga(YN)	2014	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Venga(YN)	2014	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Venga(YN)	2014	General Area	Smart Key Unit	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Venga(YN)	2014	General Area	Smart Key Unit	Special Function	Antenna Status Check
Venga(YN)	2014	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Venga(YN)	2014	General Area	Power Steering	Version Information	
Venga(YN)	2014	General Area	Power Steering	Read Fault Code	
Venga(YN)	2014	General Area	Power Steering	Clear Fault Memory	
Venga(YN)	2014	General Area	Power Steering	Read Data Stream	
Venga(YN)	2014	General Area	Power Steering	Special Function	ASP Calibration
Venga(YN)	2014	General Area	Power Steering	Special Function	EPS Type Recognition
Venga(YN)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Venga(YN)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Venga(YN)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Venga(YN)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Venga(YN)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Venga(YN)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Venga(YN)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Venga(YN)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Venga(YN)	2014	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Venga(YN)	2014	General Area	IMMO(Immobilizer)	Read Data Stream	
Venga(YN)	2014	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Venga(YN)	2014	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Venga(YN)	2014	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Venga(YN)	2014	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Venga(YN)	2014	General Area	IMMO(Immobilizer)	Special Function	Teaching
Venga(YN)	2014	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Venga(YN)	2014	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function

model	year	area	system	function	subfunction
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Venga(YN)	2014	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Version Information	
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Read Fault Code	
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Read Data Stream	
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Actuation Test	
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Venga(YN)	2013	General Area	TCM(Transmission Control Module)	Version Information	
Venga(YN)	2013	General Area	TCM(Transmission Control Module)	Read Fault Code	
Venga(YN)	2013	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Venga(YN)	2013	General Area	TCM(Transmission Control Module)	Read Data Stream	
Venga(YN)	2013	General Area	TCM(Transmission Control Module)	Actuation Test	
Venga(YN)	2013	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Venga(YN)	2013	General Area	ABS(Anti-Lock Brake System)	Version Information	
Venga(YN)	2013	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Venga(YN)	2013	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Venga(YN)	2013	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Venga(YN)	2013	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Venga(YN)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Venga(YN)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HAC/AX Sensor Calibration
Venga(YN)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Venga(YN)	2013	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Venga(YN)	2013	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Venga(YN)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	

model	year	area	system	function	subfunction
Venga(YN)	2013	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Venga(YN)	2013	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Venga(YN)	2013	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Venga(YN)	2013	General Area	AC(Air Conditioning)	Version Information	
Venga(YN)	2013	General Area	AC(Air Conditioning)	Read Fault Code	
Venga(YN)	2013	General Area	AC(Air Conditioning)	Clear Fault Memory	
Venga(YN)	2013	General Area	AC(Air Conditioning)	Read Data Stream	
Venga(YN)	2013	General Area	AC(Air Conditioning)	Actuation Test	
Venga(YN)	2013	General Area	BCM(Body Control Module)	Version Information	
Venga(YN)	2013	General Area	BCM(Body Control Module)	Read Fault Code	
Venga(YN)	2013	General Area	BCM(Body Control Module)	Clear Fault Memory	
Venga(YN)	2013	General Area	BCM(Body Control Module)	Read Data Stream	
Venga(YN)	2013	General Area	BCM(Body Control Module)	Actuation Test	
Venga(YN)	2013	General Area	BCM(Body Control Module)	Special Function	User Option
Venga(YN)	2013	General Area	Smart Key Unit	Version Information	
Venga(YN)	2013	General Area	Smart Key Unit	Read Fault Code	
Venga(YN)	2013	General Area	Smart Key Unit	Clear Fault Memory	
Venga(YN)	2013	General Area	Smart Key Unit	Read Data Stream	
Venga(YN)	2013	General Area	Smart Key Unit	Actuation Test	
Venga(YN)	2013	General Area	Smart Key Unit	Special Function	Smart Key Code Saving
Venga(YN)	2013	General Area	Smart Key Unit	Special Function	Neutralization Mode
Venga(YN)	2013	General Area	Smart Key Unit	Special Function	SMK Status Information
Venga(YN)	2013	General Area	Smart Key Unit	Special Function	ESCL Status Information
Venga(YN)	2013	General Area	Smart Key Unit	Special Function	FOB KEY Status Information
Venga(YN)	2013	General Area	Smart Key Unit	Special Function	Current FOB Key Check
Venga(YN)	2013	General Area	Smart Key Unit	Special Function	Serial Communication Line Check
Venga(YN)	2013	General Area	Smart Key Unit	Special Function	Antenna Status Check
Venga(YN)	2013	General Area	Smart Key Unit	Special Function	ESCL Open Status Check
Venga(YN)	2013	General Area	Power Steering	Version Information	
Venga(YN)	2013	General Area	Power Steering	Read Fault Code	

model	year	area	system	function	subfunction
Venga(YN)	2013	General Area	Power Steering	Clear Fault Memory	
Venga(YN)	2013	General Area	Power Steering	Read Data Stream	
Venga(YN)	2013	General Area	Power Steering	Special Function	ASP Calibration
Venga(YN)	2013	General Area	Power Steering	Special Function	EPS Type Recognition
Venga(YN)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Venga(YN)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Venga(YN)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Venga(YN)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Venga(YN)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Venga(YN)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Venga(YN)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Venga(YN)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Venga(YN)	2013	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Venga(YN)	2013	General Area	IMMO(Immobilizer)	Read Data Stream	
Venga(YN)	2013	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Venga(YN)	2013	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Venga(YN)	2013	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Venga(YN)	2013	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Venga(YN)	2013	General Area	IMMO(Immobilizer)	Special Function	Teaching
Venga(YN)	2013	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Venga(YN)	2013	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Special Function	Essential Work After Component Replacement
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Venga(YN)	2013	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Read Fault Code	
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Read Data Stream	
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Actuation Test	
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Venga(YN)	2012	General Area	ABS(Anti-Lock Brake System)	Version Information	
Venga(YN)	2012	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Venga(YN)	2012	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Venga(YN)	2012	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Venga(YN)	2012	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Venga(YN)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Venga(YN)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	HAC/AX Sensor Calibration
Venga(YN)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Venga(YN)	2012	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Venga(YN)	2012	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Venga(YN)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Venga(YN)	2012	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Venga(YN)	2012	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Venga(YN)	2012	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Venga(YN)	2012	General Area	AC(Air Conditioning)	Version Information	
Venga(YN)	2012	General Area	AC(Air Conditioning)	Read Fault Code	
Venga(YN)	2012	General Area	AC(Air Conditioning)	Clear Fault Memory	
Venga(YN)	2012	General Area	AC(Air Conditioning)	Read Data Stream	
Venga(YN)	2012	General Area	AC(Air Conditioning)	Actuation Test	
Venga(YN)	2012	General Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Venga(YN)	2012	General Area	BCM(Body Control Module)	Read Fault Code	
Venga(YN)	2012	General Area	BCM(Body Control Module)	Clear Fault Memory	
Venga(YN)	2012	General Area	BCM(Body Control Module)	Read Data Stream	
Venga(YN)	2012	General Area	BCM(Body Control Module)	Actuation Test	
Venga(YN)	2012	General Area	BCM(Body Control Module)	Special Function	User Option
Venga(YN)	2012	General Area	Smart Key	Version Information	
Venga(YN)	2012	General Area	Smart Key	Read Fault Code	
Venga(YN)	2012	General Area	Smart Key	Clear Fault Memory	
Venga(YN)	2012	General Area	Smart Key	Read Data Stream	
Venga(YN)	2012	General Area	Smart Key	Actuation Test	
Venga(YN)	2012	General Area	Smart Key	Special Function	ESCL Open Status Check
Venga(YN)	2012	General Area	Smart Key	Special Function	Neutralization Mode
Venga(YN)	2012	General Area	Smart Key	Special Function	SMK Status Information
Venga(YN)	2012	General Area	Smart Key	Special Function	ESCL Status Information
Venga(YN)	2012	General Area	Smart Key	Special Function	PDM Status Information
Venga(YN)	2012	General Area	Smart Key	Special Function	FOB KEY Status Information
Venga(YN)	2012	General Area	Smart Key	Special Function	Serial Communication Line Check
Venga(YN)	2012	General Area	Smart Key	Special Function	Antenna Status Check
Venga(YN)	2012	General Area	Smart Key	Special Function	Smart Key Code Saving
Venga(YN)	2012	General Area	Power Steering	Version Information	
Venga(YN)	2012	General Area	Power Steering	Read Fault Code	
Venga(YN)	2012	General Area	Power Steering	Clear Fault Memory	
Venga(YN)	2012	General Area	Power Steering	Read Data Stream	
Venga(YN)	2012	General Area	Power Steering	Special Function	ASP Calibration
Venga(YN)	2012	General Area	Power Steering	Special Function	EPS Type Recognition
Venga(YN)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Venga(YN)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Venga(YN)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Venga(YN)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Venga(YN)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Venga(YN)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Venga(YN)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Venga(YN)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Venga(YN)	2012	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Venga(YN)	2012	General Area	IMMO(Immobilizer)	Read Data Stream	
Venga(YN)	2012	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Venga(YN)	2012	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Venga(YN)	2012	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Venga(YN)	2012	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Venga(YN)	2012	General Area	IMMO(Immobilizer)	Special Function	Teaching
Venga(YN)	2012	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Venga(YN)	2012	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Venga(YN)	2012	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Venga(YN)	2012	General Area	TCM(Transmission Control Module)	Version Information	
Venga(YN)	2012	General Area	TCM(Transmission Control Module)	Read Fault Code	
Venga(YN)	2012	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Venga(YN)	2012	General Area	TCM(Transmission Control Module)	Read Data Stream	
Venga(YN)	2012	General Area	TCM(Transmission Control Module)	Actuation Test	
Venga(YN)	2012	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Version Information	
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Read Fault Code	
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Read Data Stream	
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Actuation Test	
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine

model	year	area	system	function	subfunction
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Venga(YN)	2011	General Area	ABS(Anti-Lock Brake System)	Version Information	
Venga(YN)	2011	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Venga(YN)	2011	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Venga(YN)	2011	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Venga(YN)	2011	General Area	ABS(Anti-Lock Brake System)	Actuation Test	
Venga(YN)	2011	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Venga(YN)	2011	General Area	ABS(Anti-Lock Brake System)	Special Function	HAC/AX Sensor Calibration
Venga(YN)	2011	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Venga(YN)	2011	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Venga(YN)	2011	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Venga(YN)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Venga(YN)	2011	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Venga(YN)	2011	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Venga(YN)	2011	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Venga(YN)	2011	General Area	AC(Air Conditioning)	Version Information	
Venga(YN)	2011	General Area	AC(Air Conditioning)	Read Fault Code	
Venga(YN)	2011	General Area	AC(Air Conditioning)	Clear Fault Memory	
Venga(YN)	2011	General Area	AC(Air Conditioning)	Read Data Stream	
Venga(YN)	2011	General Area	AC(Air Conditioning)	Actuation Test	
Venga(YN)	2011	General Area	BCM(Body Control Module)	Version Information	
Venga(YN)	2011	General Area	BCM(Body Control Module)	Read Data Stream	
Venga(YN)	2011	General Area	BCM(Body Control Module)	Actuation Test	
Venga(YN)	2011	General Area	BCM(Body Control Module)	Special Function	User Option
Venga(YN)	2011	General Area	Smart Key	Version Information	
Venga(YN)	2011	General Area	Smart Key	Read Fault Code	
Venga(YN)	2011	General Area	Smart Key	Clear Fault Memory	

model	year	area	system	function	subfunction
Venga(YN)	2011	General Area	Smart Key	Read Data Stream	
Venga(YN)	2011	General Area	Smart Key	Actuation Test	
Venga(YN)	2011	General Area	Smart Key	Special Function	ESCL Open Status Check
Venga(YN)	2011	General Area	Smart Key	Special Function	Neutralization Mode
Venga(YN)	2011	General Area	Smart Key	Special Function	SMK Status Information
Venga(YN)	2011	General Area	Smart Key	Special Function	ESCL Status Information
Venga(YN)	2011	General Area	Smart Key	Special Function	PDM Status Information
Venga(YN)	2011	General Area	Smart Key	Special Function	FOB KEY Status Information
Venga(YN)	2011	General Area	Smart Key	Special Function	Serial Communication Line Check
Venga(YN)	2011	General Area	Smart Key	Special Function	Antenna Status Check
Venga(YN)	2011	General Area	Smart Key	Special Function	Smart Key Code Saving
Venga(YN)	2011	General Area	Power Steering	Version Information	
Venga(YN)	2011	General Area	Power Steering	Read Fault Code	
Venga(YN)	2011	General Area	Power Steering	Clear Fault Memory	
Venga(YN)	2011	General Area	Power Steering	Read Data Stream	
Venga(YN)	2011	General Area	Power Steering	Special Function	ASP Calibration
Venga(YN)	2011	General Area	Power Steering	Special Function	EPS Type Recognition
Venga(YN)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Venga(YN)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Venga(YN)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Venga(YN)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Venga(YN)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Venga(YN)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Venga(YN)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Venga(YN)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Venga(YN)	2011	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Venga(YN)	2011	General Area	IMMO(Immobilizer)	Read Data Stream	
Venga(YN)	2011	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Venga(YN)	2011	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Venga(YN)	2011	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Venga(YN)	2011	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Venga(YN)	2011	General Area	IMMO(Immobilizer)	Special Function	Teaching
Venga(YN)	2011	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Venga(YN)	2011	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Special Function	Write VIN
Venga(YN)	2011	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Venga(YN)	2011	General Area	TCM(Transmission Control Module)	Version Information	
Venga(YN)	2011	General Area	TCM(Transmission Control Module)	Read Fault Code	
Venga(YN)	2011	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Venga(YN)	2011	General Area	TCM(Transmission Control Module)	Read Data Stream	
Venga(YN)	2011	General Area	TCM(Transmission Control Module)	Actuation Test	
Venga(YN)	2011	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Version Information	
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Read Fault Code	
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Clear Fault Memory	
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Read Data Stream	
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Actuation Test	
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Special Function	Injector Specific Data
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Special Function	Component Change Routine
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Special Function	DPF Service Regeneration
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Special Function	ECU Initialization
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Special Function	Fuel Leakage Test
Venga(YN)	2010	General Area	ABS(Anti-Lock Brake System)	Version Information	
Venga(YN)	2010	General Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Venga(YN)	2010	General Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Venga(YN)	2010	General Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Venga(YN)	2010	General Area	ABS(Anti-Lock Brake System)	Actuation Test	

model	year	area	system	function	subfunction
Venga(YN)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Venga(YN)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	HAC/AX Sensor Calibration
Venga(YN)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Venga(YN)	2010	General Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Venga(YN)	2010	General Area	SRS(Supplemental Inflatable Restraint	Version Information	
Venga(YN)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Venga(YN)	2010	General Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Venga(YN)	2010	General Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Venga(YN)	2010	General Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU Variant Coding
Venga(YN)	2010	General Area	AC(Air Conditioning)	Version Information	
Venga(YN)	2010	General Area	AC(Air Conditioning)	Read Fault Code	
Venga(YN)	2010	General Area	AC(Air Conditioning)	Clear Fault Memory	
Venga(YN)	2010	General Area	AC(Air Conditioning)	Read Data Stream	
Venga(YN)	2010	General Area	AC(Air Conditioning)	Actuation Test	
Venga(YN)	2010	General Area	BCM(Body Control Module)	Version Information	
Venga(YN)	2010	General Area	BCM(Body Control Module)	Read Data Stream	
Venga(YN)	2010	General Area	BCM(Body Control Module)	Actuation Test	
Venga(YN)	2010	General Area	BCM(Body Control Module)	Special Function	User Option
Venga(YN)	2010	General Area	Smart Key	Version Information	
Venga(YN)	2010	General Area	Smart Key	Read Fault Code	
Venga(YN)	2010	General Area	Smart Key	Clear Fault Memory	
Venga(YN)	2010	General Area	Smart Key	Read Data Stream	
Venga(YN)	2010	General Area	Smart Key	Actuation Test	
Venga(YN)	2010	General Area	Smart Key	Special Function	ESCL Open Status Check
Venga(YN)	2010	General Area	Smart Key	Special Function	Neutralization Mode
Venga(YN)	2010	General Area	Smart Key	Special Function	SMK Status Information
Venga(YN)	2010	General Area	Smart Key	Special Function	ESCL Status Information
Venga(YN)	2010	General Area	Smart Key	Special Function	PDM Status Information
Venga(YN)	2010	General Area	Smart Key	Special Function	FOB KEY Status Information

model	year	area	system	function	subfunction
Venga(YN)	2010	General Area	Smart Key	Special Function	Serial Communication Line Check
Venga(YN)	2010	General Area	Smart Key	Special Function	Antenna Status Check
Venga(YN)	2010	General Area	Smart Key	Special Function	Smart Key Code Saving
Venga(YN)	2010	General Area	Power Steering	Version Information	
Venga(YN)	2010	General Area	Power Steering	Read Fault Code	
Venga(YN)	2010	General Area	Power Steering	Clear Fault Memory	
Venga(YN)	2010	General Area	Power Steering	Read Data Stream	
Venga(YN)	2010	General Area	Power Steering	Special Function	ASP Calibration
Venga(YN)	2010	General Area	Power Steering	Special Function	EPS Type Recognition
Venga(YN)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Venga(YN)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Venga(YN)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Venga(YN)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Venga(YN)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Venga(YN)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Venga(YN)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Venga(YN)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Venga(YN)	2010	General Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Venga(YN)	2010	General Area	IMMO(Immobilizer)	Read Data Stream	
Venga(YN)	2010	General Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Venga(YN)	2010	General Area	IMMO(Immobilizer)	Special Function	Neutral Mode
Venga(YN)	2010	General Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Venga(YN)	2010	General Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Venga(YN)	2010	General Area	IMMO(Immobilizer)	Special Function	Teaching
Venga(YN)	2010	General Area	CODE(Transmitter Code Saving)	Read Data Stream	
Venga(YN)	2010	General Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Special Function	Engine Test Function
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Special Function	Read VIN
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Venga(YN)	2010	General Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Venga(YN)	2010	General Area	TCM(Transmission Control Module)	Version Information	
Venga(YN)	2010	General Area	TCM(Transmission Control Module)	Read Fault Code	
Venga(YN)	2010	General Area	TCM(Transmission Control Module)	Clear Fault Memory	
Venga(YN)	2010	General Area	TCM(Transmission Control Module)	Read Data Stream	
Venga(YN)	2010	General Area	TCM(Transmission Control Module)	Actuation Test	
Venga(YN)	2010	General Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Version Information	
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Read Fault Code	
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Read Data Stream	
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Actuation Test	
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Amanti(GH)	2009	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Amanti(GH)	2009	USA Area	TCM(Transmission Control Module)	Version Information	
Amanti(GH)	2009	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Amanti(GH)	2009	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Amanti(GH)	2009	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Amanti(GH)	2009	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Amanti(GH)	2009	USA Area	TCM(Transmission Control Module)	Actuation Test	
Amanti(GH)	2009	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Amanti(GH)	2009	USA Area	ESP(Electronic Stability Program)	Version Information	
Amanti(GH)	2009	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Amanti(GH)	2009	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	

model	year	area	system	function	subfunction
Amanti(GH)	2009	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Amanti(GH)	2009	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Amanti(GH)	2009	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Amanti(GH)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Amanti(GH)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Amanti(GH)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Amanti(GH)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Amanti(GH)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Amanti(GH)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	STPS Status
Amanti(GH)	2009	USA Area	AC(Air Conditioning)	Version Information	
Amanti(GH)	2009	USA Area	AC(Air Conditioning)	Read Fault Code	
Amanti(GH)	2009	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Amanti(GH)	2009	USA Area	AC(Air Conditioning)	Read Data Stream	
Amanti(GH)	2009	USA Area	AC(Air Conditioning)	Actuation Test	
Amanti(GH)	2009	USA Area	BCM(Body Control Module)	Version Information	
Amanti(GH)	2009	USA Area	BCM(Body Control Module)	Read Fault Code	
Amanti(GH)	2009	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Amanti(GH)	2009	USA Area	BCM(Body Control Module)	Read Data Stream	
Amanti(GH)	2009	USA Area	BCM(Body Control Module)	Actuation Test	
Amanti(GH)	2009	USA Area	EPS(Electronic Power Steering)	Version Information	
Amanti(GH)	2009	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Amanti(GH)	2009	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Amanti(GH)	2009	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Amanti(GH)	2009	USA Area	Smart Key	Version Information	
Amanti(GH)	2009	USA Area	Smart Key	Read Fault Code	
Amanti(GH)	2009	USA Area	Smart Key	Clear Fault Memory	
Amanti(GH)	2009	USA Area	Smart Key	Read Data Stream	
Amanti(GH)	2009	USA Area	Smart Key	Actuation Test	
Amanti(GH)	2009	USA Area	Smart Key	Special Function	Neutralization Mode
Amanti(GH)	2009	USA Area	Smart Key	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Amanti(GH)	2009	USA Area	Smart Key	Special Function	ESCL Status Information
Amanti(GH)	2009	USA Area	Smart Key	Special Function	PDM Status Information
Amanti(GH)	2009	USA Area	Smart Key	Special Function	FOB KEY Status Information
Amanti(GH)	2009	USA Area	Smart Key	Special Function	Serial Communication Line Check
Amanti(GH)	2009	USA Area	Smart Key	Special Function	Antenna Status Check
Amanti(GH)	2009	USA Area	Smart Key	Special Function	Smart Key Code Saving
Amanti(GH)	2009	USA Area	Smart Key	Special Function	ESCL Open Status Check
Amanti(GH)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Amanti(GH)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Amanti(GH)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Amanti(GH)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Amanti(GH)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Amanti(GH)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Amanti(GH)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Amanti(GH)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Amanti(GH)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Amanti(GH)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Amanti(GH)	2009	USA Area	IMMO(Immobilizer)	Read Data Stream	
Amanti(GH)	2009	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Amanti(GH)	2009	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Amanti(GH)	2009	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Amanti(GH)	2009	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Amanti(GH)	2009	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Amanti(GH)	2009	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Amanti(GH)	2009	USA Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Version Information	
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Read Fault Code	
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Read Data Stream	
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Actuation Test	
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Amanti(GH)	2008	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Amanti(GH)	2008	USA Area	TCM(Transmission Control Module)	Version Information	
Amanti(GH)	2008	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Amanti(GH)	2008	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Amanti(GH)	2008	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Amanti(GH)	2008	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Amanti(GH)	2008	USA Area	TCM(Transmission Control Module)	Actuation Test	
Amanti(GH)	2008	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Amanti(GH)	2008	USA Area	ESP(Electronic Stability Program)	Version Information	
Amanti(GH)	2008	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Amanti(GH)	2008	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Amanti(GH)	2008	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Amanti(GH)	2008	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Amanti(GH)	2008	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Amanti(GH)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Amanti(GH)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Amanti(GH)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Amanti(GH)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Amanti(GH)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Amanti(GH)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	STPS Status
Amanti(GH)	2008	USA Area	AC(Air Conditioning)	Version Information	
Amanti(GH)	2008	USA Area	AC(Air Conditioning)	Read Fault Code	
Amanti(GH)	2008	USA Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Amanti(GH)	2008	USA Area	AC(Air Conditioning)	Read Data Stream	
Amanti(GH)	2008	USA Area	AC(Air Conditioning)	Actuation Test	
Amanti(GH)	2008	USA Area	BCM(Body Control Module)	Version Information	
Amanti(GH)	2008	USA Area	BCM(Body Control Module)	Read Fault Code	
Amanti(GH)	2008	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Amanti(GH)	2008	USA Area	BCM(Body Control Module)	Read Data Stream	
Amanti(GH)	2008	USA Area	BCM(Body Control Module)	Actuation Test	
Amanti(GH)	2008	USA Area	EPS(Electronic Power Steering)	Version Information	
Amanti(GH)	2008	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Amanti(GH)	2008	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Amanti(GH)	2008	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Amanti(GH)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Amanti(GH)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Amanti(GH)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Amanti(GH)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Amanti(GH)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Amanti(GH)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Amanti(GH)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Amanti(GH)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Amanti(GH)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Amanti(GH)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Amanti(GH)	2008	USA Area	IMMO(Immobilizer)	Read Data Stream	
Amanti(GH)	2008	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Amanti(GH)	2008	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Amanti(GH)	2008	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Amanti(GH)	2008	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Amanti(GH)	2008	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Amanti(GH)	2008	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Amanti(GH)	2008	USA Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Read Fault Code	
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Read Data Stream	
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Actuation Test	
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Amanti(GH)	2007	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Amanti(GH)	2007	USA Area	TCM(Transmission Control Module)	Version Information	
Amanti(GH)	2007	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Amanti(GH)	2007	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Amanti(GH)	2007	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Amanti(GH)	2007	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Amanti(GH)	2007	USA Area	TCM(Transmission Control Module)	Actuation Test	
Amanti(GH)	2007	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Amanti(GH)	2007	USA Area	ESP(Electronic Stability Program)	Version Information	
Amanti(GH)	2007	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Amanti(GH)	2007	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Amanti(GH)	2007	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Amanti(GH)	2007	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Amanti(GH)	2007	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Amanti(GH)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Amanti(GH)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Amanti(GH)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Amanti(GH)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Amanti(GH)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.

model	year	area	system	function	subfunction
Amanti(GH)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	STPS Status
Amanti(GH)	2007	USA Area	AC(Air Conditioning)	Version Information	
Amanti(GH)	2007	USA Area	AC(Air Conditioning)	Read Fault Code	
Amanti(GH)	2007	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Amanti(GH)	2007	USA Area	AC(Air Conditioning)	Read Data Stream	
Amanti(GH)	2007	USA Area	AC(Air Conditioning)	Actuation Test	
Amanti(GH)	2007	USA Area	BCM(Body Control Module)	Version Information	
Amanti(GH)	2007	USA Area	BCM(Body Control Module)	Read Fault Code	
Amanti(GH)	2007	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Amanti(GH)	2007	USA Area	BCM(Body Control Module)	Read Data Stream	
Amanti(GH)	2007	USA Area	BCM(Body Control Module)	Actuation Test	
Amanti(GH)	2007	USA Area	EPS(Electronic Power Steering)	Version Information	
Amanti(GH)	2007	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Amanti(GH)	2007	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Amanti(GH)	2007	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Amanti(GH)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Amanti(GH)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Amanti(GH)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Amanti(GH)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Amanti(GH)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Amanti(GH)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Amanti(GH)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Amanti(GH)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Amanti(GH)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Amanti(GH)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Amanti(GH)	2007	USA Area	IMMO(Immobilizer)	Read Data Stream	
Amanti(GH)	2007	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Amanti(GH)	2007	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Amanti(GH)	2007	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Amanti(GH)	2007	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Amanti(GH)	2007	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Amanti(GH)	2007	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Amanti(GH)	2007	USA Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Amanti(GH)	2006	USA Area	ECM(Engine Control Module)	Version Information	
Amanti(GH)	2006	USA Area	ECM(Engine Control Module)	Read Fault Code	
Amanti(GH)	2006	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Amanti(GH)	2006	USA Area	ECM(Engine Control Module)	Read Data Stream	
Amanti(GH)	2006	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Amanti(GH)	2006	USA Area	ECM(Engine Control Module)	Actuation Test	
Amanti(GH)	2006	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Amanti(GH)	2006	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Amanti(GH)	2006	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Amanti(GH)	2006	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Amanti(GH)	2006	USA Area	TCM(Transmission Control Module)	Version Information	
Amanti(GH)	2006	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Amanti(GH)	2006	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Amanti(GH)	2006	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Amanti(GH)	2006	USA Area	TCM(Transmission Control Module)	Actuation Test	
Amanti(GH)	2006	USA Area	TCM(Transmission Control Module)	Special Function	Init Of TCU Learning
Amanti(GH)	2006	USA Area	ESP(Electronic Stability Program)	Version Information	
Amanti(GH)	2006	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Amanti(GH)	2006	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Amanti(GH)	2006	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Amanti(GH)	2006	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Amanti(GH)	2006	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Amanti(GH)	2006	USA Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Amanti(GH)	2006	USA Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Amanti(GH)	2006	USA Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Amanti(GH)	2006	USA Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Amanti(GH)	2006	USA Area	SRS(Supplemental Inflatable Restraint)	Special Function	Pass.Airbag Realtime Info.

model	year	area	system	function	subfunction
Amanti(GH)	2006	USA Area	AC(Air Conditioning)	Version Information	
Amanti(GH)	2006	USA Area	AC(Air Conditioning)	Read Fault Code	
Amanti(GH)	2006	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Amanti(GH)	2006	USA Area	AC(Air Conditioning)	Read Data Stream	
Amanti(GH)	2006	USA Area	AC(Air Conditioning)	Actuation Test	
Amanti(GH)	2006	USA Area	BCM(Body Control Module)	Version Information	
Amanti(GH)	2006	USA Area	BCM(Body Control Module)	Read Fault Code	
Amanti(GH)	2006	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Amanti(GH)	2006	USA Area	BCM(Body Control Module)	Read Data Stream	
Amanti(GH)	2006	USA Area	BCM(Body Control Module)	Actuation Test	
Amanti(GH)	2006	USA Area	EPS(Electronic Power Steering)	Version Information	
Amanti(GH)	2006	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Amanti(GH)	2006	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Amanti(GH)	2006	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Amanti(GH)	2006	USA Area	IMMO(Immobilizer)	Read Data Stream	
Amanti(GH)	2006	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Amanti(GH)	2006	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Amanti(GH)	2006	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Amanti(GH)	2006	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Amanti(GH)	2006	USA Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Amanti(GH)	2005	USA Area	ECM(Engine Control Module)	Version Information	
Amanti(GH)	2005	USA Area	ECM(Engine Control Module)	Read Fault Code	
Amanti(GH)	2005	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Amanti(GH)	2005	USA Area	ECM(Engine Control Module)	Read Data Stream	
Amanti(GH)	2005	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Amanti(GH)	2005	USA Area	ECM(Engine Control Module)	Actuation Test	
Amanti(GH)	2005	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Amanti(GH)	2005	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Amanti(GH)	2005	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Amanti(GH)	2005	USA Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Amanti(GH)	2005	USA Area	TCM(Transmission Control Module)	Version Information	
Amanti(GH)	2005	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Amanti(GH)	2005	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Amanti(GH)	2005	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Amanti(GH)	2005	USA Area	TCM(Transmission Control Module)	Actuation Test	
Amanti(GH)	2005	USA Area	TCM(Transmission Control Module)	Special Function	Init Of TCU Learning
Amanti(GH)	2005	USA Area	ESP(Electronic Stability Program)	Version Information	
Amanti(GH)	2005	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Amanti(GH)	2005	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Amanti(GH)	2005	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Amanti(GH)	2005	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Amanti(GH)	2005	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Amanti(GH)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Amanti(GH)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Amanti(GH)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Amanti(GH)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Amanti(GH)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Amanti(GH)	2005	USA Area	AC(Air Conditioning)	Version Information	
Amanti(GH)	2005	USA Area	AC(Air Conditioning)	Read Fault Code	
Amanti(GH)	2005	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Amanti(GH)	2005	USA Area	AC(Air Conditioning)	Read Data Stream	
Amanti(GH)	2005	USA Area	AC(Air Conditioning)	Actuation Test	
Amanti(GH)	2005	USA Area	BCM(Body Control Module)	Version Information	
Amanti(GH)	2005	USA Area	BCM(Body Control Module)	Read Fault Code	
Amanti(GH)	2005	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Amanti(GH)	2005	USA Area	BCM(Body Control Module)	Read Data Stream	
Amanti(GH)	2005	USA Area	BCM(Body Control Module)	Actuation Test	
Amanti(GH)	2005	USA Area	EPS(Electronic Power Steering)	Version Information	
Amanti(GH)	2005	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Amanti(GH)	2005	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Amanti(GH)	2005	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Amanti(GH)	2005	USA Area	IMMO(Immobilizer)	Read Data Stream	
Amanti(GH)	2005	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Amanti(GH)	2005	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Amanti(GH)	2005	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Amanti(GH)	2005	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Amanti(GH)	2005	USA Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Amanti(GH)	2004	USA Area	ECM(Engine Control Module)	Version Information	
Amanti(GH)	2004	USA Area	ECM(Engine Control Module)	Read Fault Code	
Amanti(GH)	2004	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Amanti(GH)	2004	USA Area	ECM(Engine Control Module)	Read Data Stream	
Amanti(GH)	2004	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Amanti(GH)	2004	USA Area	ECM(Engine Control Module)	Actuation Test	
Amanti(GH)	2004	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Amanti(GH)	2004	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Amanti(GH)	2004	USA Area	TCM(Transmission Control Module)	Version Information	
Amanti(GH)	2004	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Amanti(GH)	2004	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Amanti(GH)	2004	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Amanti(GH)	2004	USA Area	TCM(Transmission Control Module)	Actuation Test	
Amanti(GH)	2004	USA Area	ESP(Electronic Stability Program)	Version Information	
Amanti(GH)	2004	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Amanti(GH)	2004	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Amanti(GH)	2004	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Amanti(GH)	2004	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Amanti(GH)	2004	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Amanti(GH)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Amanti(GH)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Amanti(GH)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Amanti(GH)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
Amanti(GH)	2004	USA Area	AC(Air Conditioning)	Version Information	
Amanti(GH)	2004	USA Area	AC(Air Conditioning)	Read Fault Code	
Amanti(GH)	2004	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Amanti(GH)	2004	USA Area	AC(Air Conditioning)	Read Data Stream	
Amanti(GH)	2004	USA Area	AC(Air Conditioning)	Actuation Test	
Amanti(GH)	2004	USA Area	BCM(Body Control Module)	Version Information	
Amanti(GH)	2004	USA Area	BCM(Body Control Module)	Read Fault Code	
Amanti(GH)	2004	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Amanti(GH)	2004	USA Area	BCM(Body Control Module)	Read Data Stream	
Amanti(GH)	2004	USA Area	BCM(Body Control Module)	Actuation Test	
Amanti(GH)	2004	USA Area	EPS(Electronic Power Steering)	Version Information	
Amanti(GH)	2004	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Amanti(GH)	2004	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Amanti(GH)	2004	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Amanti(GH)	2004	USA Area	IMMO(Immobilizer)	Read Data Stream	
Amanti(GH)	2004	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Amanti(GH)	2004	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Amanti(GH)	2004	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Amanti(GH)	2004	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Amanti(GH)	2004	USA Area	CODE(Transmitter Code Saving)	Special Function	Register Transmitter
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Version Information	
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Read Fault Code	
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Read Data Stream	
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Actuation Test	
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Borrego(HM)	2011	USA Area	TCM(Transmission Control Module)	Version Information	
Borrego(HM)	2011	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Borrego(HM)	2011	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Borrego(HM)	2011	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Borrego(HM)	2011	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Borrego(HM)	2011	USA Area	TCM(Transmission Control Module)	Actuation Test	
Borrego(HM)	2011	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Borrego(HM)	2011	USA Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Borrego(HM)	2011	USA Area	ESP(Electronic Stability Program)	Version Information	
Borrego(HM)	2011	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Borrego(HM)	2011	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Borrego(HM)	2011	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Borrego(HM)	2011	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Borrego(HM)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Borrego(HM)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Borrego(HM)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Borrego(HM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Borrego(HM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Borrego(HM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Borrego(HM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Borrego(HM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Borrego(HM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Borrego(HM)	2011	USA Area	AC(Air Conditioning)	Version Information	
Borrego(HM)	2011	USA Area	AC(Air Conditioning)	Read Fault Code	
Borrego(HM)	2011	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Borrego(HM)	2011	USA Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Borrego(HM)	2011	USA Area	AC(Air Conditioning)	Actuation Test	
Borrego(HM)	2011	USA Area	BCM(Body Control Module)	Version Information	
Borrego(HM)	2011	USA Area	BCM(Body Control Module)	Read Fault Code	
Borrego(HM)	2011	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Borrego(HM)	2011	USA Area	BCM(Body Control Module)	Read Data Stream	
Borrego(HM)	2011	USA Area	BCM(Body Control Module)	Actuation Test	
Borrego(HM)	2011	USA Area	Smart Key	Read Data Stream	
Borrego(HM)	2011	USA Area	Smart Key	Special Function	Smart Key Code Saving
Borrego(HM)	2011	USA Area	Smart Key	Version Information	
Borrego(HM)	2011	USA Area	Smart Key	Read Fault Code	
Borrego(HM)	2011	USA Area	Smart Key	Clear Fault Memory	
Borrego(HM)	2011	USA Area	Smart Key	Actuation Test	
Borrego(HM)	2011	USA Area	Smart Key	Special Function	ESCL Open Status Check
Borrego(HM)	2011	USA Area	Smart Key	Special Function	Neutralization Mode
Borrego(HM)	2011	USA Area	Smart Key	Special Function	SMK Status Information
Borrego(HM)	2011	USA Area	Smart Key	Special Function	ESCL Status Information
Borrego(HM)	2011	USA Area	Smart Key	Special Function	PDM Status Information
Borrego(HM)	2011	USA Area	Smart Key	Special Function	FOB KEY Status Information
Borrego(HM)	2011	USA Area	Smart Key	Special Function	Serial Communication Line Check
Borrego(HM)	2011	USA Area	Smart Key	Special Function	Antenna Status Check
Borrego(HM)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Borrego(HM)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Borrego(HM)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Borrego(HM)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Borrego(HM)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Borrego(HM)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Sensor Initialization
Borrego(HM)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Borrego(HM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Borrego(HM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Borrego(HM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Borrego(HM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Borrego(HM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Borrego(HM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Borrego(HM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Borrego(HM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Borrego(HM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Borrego(HM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Borrego(HM)	2011	USA Area	ECS(Electronic Control Suspension)	Version Information	
Borrego(HM)	2011	USA Area	ECS(Electronic Control Suspension)	Read Fault Code	
Borrego(HM)	2011	USA Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Borrego(HM)	2011	USA Area	ECS(Electronic Control Suspension)	Read Data Stream	
Borrego(HM)	2011	USA Area	ECS(Electronic Control Suspension)	Actuation Test	
Borrego(HM)	2011	USA Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Calibration(Reset)
Borrego(HM)	2011	USA Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor
Borrego(HM)	2011	USA Area	ECS(Electronic Control Suspension)	Special Function	Halt System Control
Borrego(HM)	2011	USA Area	ECS(Electronic Control Suspension)	Special Function	Air Filling Setup
Borrego(HM)	2011	USA Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Mount Angle
Borrego(HM)	2011	USA Area	ECS(Electronic Control Suspension)	Special Function	Air Filling/Venting
Borrego(HM)	2011	USA Area	Driveshaft	Version Information	
Borrego(HM)	2011	USA Area	Driveshaft	Read Fault Code	
Borrego(HM)	2011	USA Area	Driveshaft	Clear Fault Memory	
Borrego(HM)	2011	USA Area	Driveshaft	Read Data Stream	
Borrego(HM)	2011	USA Area	Driveshaft	Read Freeze Frame	
Borrego(HM)	2011	USA Area	Driveshaft	Actuation Test	
Borrego(HM)	2011	USA Area	Driveshaft	Special Function	Torque Coupling Control
Borrego(HM)	2011	USA Area	IMMO(Immobilizer)	Read Data Stream	
Borrego(HM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Borrego(HM)	2011	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Borrego(HM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Borrego(HM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Borrego(HM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Borrego(HM)	2011	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Borrego(HM)	2011	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Borrego(HM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Borrego(HM)	2011	USA Area	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Borrego(HM)	2011	USA Area	Power Steering	Version Information	
Borrego(HM)	2011	USA Area	Power Steering	Read Fault Code	
Borrego(HM)	2011	USA Area	Power Steering	Clear Fault Memory	
Borrego(HM)	2011	USA Area	Power Steering	Read Data Stream	
Borrego(HM)	2011	USA Area	Power Steering	Read Freeze Frame	
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Version Information	
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Read Fault Code	
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Read Data Stream	
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Actuation Test	
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Borrego(HM)	2010	USA Area	TCM(Transmission Control Module)	Version Information	
Borrego(HM)	2010	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Borrego(HM)	2010	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Borrego(HM)	2010	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Borrego(HM)	2010	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Borrego(HM)	2010	USA Area	TCM(Transmission Control Module)	Actuation Test	
Borrego(HM)	2010	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Borrego(HM)	2010	USA Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Borrego(HM)	2010	USA Area	ESP(Electronic Stability Program)	Version Information	
Borrego(HM)	2010	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Borrego(HM)	2010	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Borrego(HM)	2010	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Borrego(HM)	2010	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Borrego(HM)	2010	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Borrego(HM)	2010	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Borrego(HM)	2010	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Borrego(HM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Borrego(HM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Borrego(HM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Borrego(HM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Borrego(HM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Borrego(HM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Borrego(HM)	2010	USA Area	AC(Air Conditioning)	Version Information	
Borrego(HM)	2010	USA Area	AC(Air Conditioning)	Read Fault Code	
Borrego(HM)	2010	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Borrego(HM)	2010	USA Area	AC(Air Conditioning)	Read Data Stream	
Borrego(HM)	2010	USA Area	AC(Air Conditioning)	Actuation Test	
Borrego(HM)	2010	USA Area	BCM(Body Control Module)	Version Information	
Borrego(HM)	2010	USA Area	BCM(Body Control Module)	Read Fault Code	
Borrego(HM)	2010	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Borrego(HM)	2010	USA Area	BCM(Body Control Module)	Read Data Stream	
Borrego(HM)	2010	USA Area	BCM(Body Control Module)	Actuation Test	
Borrego(HM)	2010	USA Area	Smart Key	Read Data Stream	
Borrego(HM)	2010	USA Area	Smart Key	Special Function	Smart Key Code Saving
Borrego(HM)	2010	USA Area	Smart Key	Version Information	
Borrego(HM)	2010	USA Area	Smart Key	Read Fault Code	

model	year	area	system	function	subfunction
Borrego(HM)	2010	USA Area	Smart Key	Clear Fault Memory	
Borrego(HM)	2010	USA Area	Smart Key	Actuation Test	
Borrego(HM)	2010	USA Area	Smart Key	Special Function	ESCL Open Status Check
Borrego(HM)	2010	USA Area	Smart Key	Special Function	Neutralization Mode
Borrego(HM)	2010	USA Area	Smart Key	Special Function	SMK Status Information
Borrego(HM)	2010	USA Area	Smart Key	Special Function	ESCL Status Information
Borrego(HM)	2010	USA Area	Smart Key	Special Function	PDM Status Information
Borrego(HM)	2010	USA Area	Smart Key	Special Function	FOB KEY Status Information
Borrego(HM)	2010	USA Area	Smart Key	Special Function	Serial Communication Line Check
Borrego(HM)	2010	USA Area	Smart Key	Special Function	Antenna Status Check
Borrego(HM)	2010	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Borrego(HM)	2010	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Borrego(HM)	2010	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Borrego(HM)	2010	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Borrego(HM)	2010	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Borrego(HM)	2010	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Sensor Initialization
Borrego(HM)	2010	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Borrego(HM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Borrego(HM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Borrego(HM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Borrego(HM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Borrego(HM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Borrego(HM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Borrego(HM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Borrego(HM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Borrego(HM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Borrego(HM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Borrego(HM)	2010	USA Area	ECS(Electronic Control Suspension)	Version Information	
Borrego(HM)	2010	USA Area	ECS(Electronic Control Suspension)	Read Fault Code	
Borrego(HM)	2010	USA Area	ECS(Electronic Control Suspension)	Clear Fault Memory	

model	year	area	system	function	subfunction
Borrego(HM)	2010	USA Area	ECS(Electronic Control Suspension)	Read Data Stream	
Borrego(HM)	2010	USA Area	ECS(Electronic Control Suspension)	Actuation Test	
Borrego(HM)	2010	USA Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Calibration(Reset)
Borrego(HM)	2010	USA Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor
Borrego(HM)	2010	USA Area	ECS(Electronic Control Suspension)	Special Function	Halt System Control
Borrego(HM)	2010	USA Area	ECS(Electronic Control Suspension)	Special Function	Air Filling Setup
Borrego(HM)	2010	USA Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Mount Angle
Borrego(HM)	2010	USA Area	ECS(Electronic Control Suspension)	Special Function	Air Filling/Venting
Borrego(HM)	2010	USA Area	Driveshaft	Version Information	
Borrego(HM)	2010	USA Area	Driveshaft	Read Fault Code	
Borrego(HM)	2010	USA Area	Driveshaft	Clear Fault Memory	
Borrego(HM)	2010	USA Area	Driveshaft	Read Data Stream	
Borrego(HM)	2010	USA Area	Driveshaft	Read Freeze Frame	
Borrego(HM)	2010	USA Area	Driveshaft	Actuation Test	
Borrego(HM)	2010	USA Area	Driveshaft	Special Function	Torque Coupling Control
Borrego(HM)	2010	USA Area	IMMO(Immobilizer)	Read Data Stream	
Borrego(HM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Borrego(HM)	2010	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Borrego(HM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Borrego(HM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Borrego(HM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Borrego(HM)	2010	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Borrego(HM)	2010	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Borrego(HM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Borrego(HM)	2010	USA Area	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Borrego(HM)	2010	USA Area	Power Steering	Version Information	
Borrego(HM)	2010	USA Area	Power Steering	Read Fault Code	
Borrego(HM)	2010	USA Area	Power Steering	Clear Fault Memory	
Borrego(HM)	2010	USA Area	Power Steering	Read Data Stream	
Borrego(HM)	2010	USA Area	Power Steering	Read Freeze Frame	

model	year	area	system	function	subfunction
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Version Information	
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Read Fault Code	
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Read Data Stream	
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Actuation Test	
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Borrego(HM)	2009	USA Area	TCM(Transmission Control Module)	Version Information	
Borrego(HM)	2009	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Borrego(HM)	2009	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Borrego(HM)	2009	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Borrego(HM)	2009	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Borrego(HM)	2009	USA Area	TCM(Transmission Control Module)	Actuation Test	
Borrego(HM)	2009	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Borrego(HM)	2009	USA Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Borrego(HM)	2009	USA Area	ESP(Electronic Stability Program)	Version Information	
Borrego(HM)	2009	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Borrego(HM)	2009	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Borrego(HM)	2009	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Borrego(HM)	2009	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Borrego(HM)	2009	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Borrego(HM)	2009	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Borrego(HM)	2009	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Borrego(HM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Borrego(HM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Borrego(HM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Borrego(HM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Borrego(HM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Borrego(HM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Borrego(HM)	2009	USA Area	AC(Air Conditioning)	Version Information	
Borrego(HM)	2009	USA Area	AC(Air Conditioning)	Read Fault Code	
Borrego(HM)	2009	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Borrego(HM)	2009	USA Area	AC(Air Conditioning)	Read Data Stream	
Borrego(HM)	2009	USA Area	AC(Air Conditioning)	Actuation Test	
Borrego(HM)	2009	USA Area	BCM(Body Control Module)	Version Information	
Borrego(HM)	2009	USA Area	BCM(Body Control Module)	Read Fault Code	
Borrego(HM)	2009	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Borrego(HM)	2009	USA Area	BCM(Body Control Module)	Read Data Stream	
Borrego(HM)	2009	USA Area	BCM(Body Control Module)	Actuation Test	
Borrego(HM)	2009	USA Area	Power Steering	Version Information	
Borrego(HM)	2009	USA Area	Power Steering	Read Fault Code	
Borrego(HM)	2009	USA Area	Power Steering	Clear Fault Memory	
Borrego(HM)	2009	USA Area	Power Steering	Read Data Stream	
Borrego(HM)	2009	USA Area	Power Steering	Read Freeze Frame	
Borrego(HM)	2009	USA Area	Smart Key	Version Information	
Borrego(HM)	2009	USA Area	Smart Key	Read Fault Code	
Borrego(HM)	2009	USA Area	Smart Key	Clear Fault Memory	
Borrego(HM)	2009	USA Area	Smart Key	Read Data Stream	
Borrego(HM)	2009	USA Area	Smart Key	Actuation Test	
Borrego(HM)	2009	USA Area	Smart Key	Special Function	Neutralization Mode
Borrego(HM)	2009	USA Area	Smart Key	Special Function	SMK Status Information
Borrego(HM)	2009	USA Area	Smart Key	Special Function	ESCL Status Information
Borrego(HM)	2009	USA Area	Smart Key	Special Function	PDM Status Information

model	year	area	system	function	subfunction
Borrego(HM)	2009	USA Area	Smart Key	Special Function	FOB KEY Status Information
Borrego(HM)	2009	USA Area	Smart Key	Special Function	Serial Communication Line Check
Borrego(HM)	2009	USA Area	Smart Key	Special Function	Antenna Status Check
Borrego(HM)	2009	USA Area	Smart Key	Special Function	ESCL Open Status Check
Borrego(HM)	2009	USA Area	Smart Key	Special Function	Smart Key Code Saving
Borrego(HM)	2009	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Borrego(HM)	2009	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Borrego(HM)	2009	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Borrego(HM)	2009	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Borrego(HM)	2009	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Borrego(HM)	2009	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Sensor Initialization
Borrego(HM)	2009	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Borrego(HM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Borrego(HM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Borrego(HM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Borrego(HM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Borrego(HM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Borrego(HM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Borrego(HM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Borrego(HM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Borrego(HM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Borrego(HM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Borrego(HM)	2009	USA Area	Driveshaft	Version Information	
Borrego(HM)	2009	USA Area	Driveshaft	Read Fault Code	
Borrego(HM)	2009	USA Area	Driveshaft	Clear Fault Memory	
Borrego(HM)	2009	USA Area	Driveshaft	Read Data Stream	
Borrego(HM)	2009	USA Area	Driveshaft	Read Freeze Frame	
Borrego(HM)	2009	USA Area	Driveshaft	Actuation Test	
Borrego(HM)	2009	USA Area	Driveshaft	Special Function	Torque Coupling Control
Borrego(HM)	2009	USA Area	ECS(Electronic Control Suspension)	Version Information	

model	year	area	system	function	subfunction
Borrego(HM)	2009	USA Area	ECS(Electronic Control Suspension)	Read Fault Code	
Borrego(HM)	2009	USA Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Borrego(HM)	2009	USA Area	ECS(Electronic Control Suspension)	Read Data Stream	
Borrego(HM)	2009	USA Area	ECS(Electronic Control Suspension)	Actuation Test	
Borrego(HM)	2009	USA Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Calibration(Reset)
Borrego(HM)	2009	USA Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor
Borrego(HM)	2009	USA Area	ECS(Electronic Control Suspension)	Special Function	Halt System Control
Borrego(HM)	2009	USA Area	ECS(Electronic Control Suspension)	Special Function	Air Filling Setup
Borrego(HM)	2009	USA Area	ECS(Electronic Control Suspension)	Special Function	Height Sensor Mount Angle
Borrego(HM)	2009	USA Area	ECS(Electronic Control Suspension)	Special Function	Air Filling/Venting
Borrego(HM)	2009	USA Area	IMMO(Immobilizer)	Read Data Stream	
Borrego(HM)	2009	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Borrego(HM)	2009	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Borrego(HM)	2009	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Borrego(HM)	2009	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Borrego(HM)	2009	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Borrego(HM)	2009	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Borrego(HM)	2009	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Borrego(HM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Borrego(HM)	2009	USA Area	TCM(Transmission Control Module)	Special Function	CLEAR CAN Learnable Status
Cadenza(VG)	2016	USA Area	ECM(Engine Control Module)	Version Information	
Cadenza(VG)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
Cadenza(VG)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
Cadenza(VG)	2016	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Cadenza(VG)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
Cadenza(VG)	2016	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Cadenza(VG)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Cadenza(VG)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Cadenza(VG)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Cadenza(VG)	2016	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cadenza(VG)	2016	USA Area	TCM(Transmission Control Module)	Version Information	
Cadenza(VG)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Cadenza(VG)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(VG)	2016	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cadenza(VG)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
Cadenza(VG)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cadenza(VG)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Cadenza(VG)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cadenza(VG)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cadenza(VG)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cadenza(VG)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cadenza(VG)	2016	USA Area	AC(Air Conditioning)	Version Information	
Cadenza(VG)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
Cadenza(VG)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Cadenza(VG)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
Cadenza(VG)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
Cadenza(VG)	2016	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cadenza(VG)	2016	USA Area	BCM(Body Control Module)	Version Information	
Cadenza(VG)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
Cadenza(VG)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
Cadenza(VG)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
Cadenza(VG)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
Cadenza(VG)	2016	USA Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Cadenza(VG)	2016	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cadenza(VG)	2016	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Cadenza(VG)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cadenza(VG)	2016	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cadenza(VG)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cadenza(VG)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cadenza(VG)	2016	USA Area	Smart Key Unit	Version Information	
Cadenza(VG)	2016	USA Area	Smart Key Unit	Read Fault Code	
Cadenza(VG)	2016	USA Area	Smart Key Unit	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	Smart Key Unit	Read Data Stream	
Cadenza(VG)	2016	USA Area	Smart Key Unit	Actuation Test	
Cadenza(VG)	2016	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cadenza(VG)	2016	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Cadenza(VG)	2016	USA Area	Smart Key Unit	Special Function	SMK Status Information
Cadenza(VG)	2016	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cadenza(VG)	2016	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Cadenza(VG)	2016	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cadenza(VG)	2016	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Cadenza(VG)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	

model	year	area	system	function	subfunction
Cadenza(VG)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cadenza(VG)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cadenza(VG)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cadenza(VG)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cadenza(VG)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cadenza(VG)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cadenza(VG)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cadenza(VG)	2016	USA Area	Head Lamp	Version Information	
Cadenza(VG)	2016	USA Area	Head Lamp	Read Fault Code	
Cadenza(VG)	2016	USA Area	Head Lamp	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	Head Lamp	Read Data Stream	
Cadenza(VG)	2016	USA Area	Head Lamp	Actuation Test	
Cadenza(VG)	2016	USA Area	Head Lamp	Special Function	Headlamp Leveling
Cadenza(VG)	2016	USA Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Cadenza(VG)	2016	USA Area	Head Lamp	Special Function	Calibration
Cadenza(VG)	2016	USA Area	Head Lamp	Special Function	Parameter Download
Cadenza(VG)	2016	USA Area	IMMO(Immobilizer)	Read Data Stream	
Cadenza(VG)	2016	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cadenza(VG)	2016	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Cadenza(VG)	2016	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cadenza(VG)	2016	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cadenza(VG)	2016	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Cadenza(VG)	2016	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cadenza(VG)	2016	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cadenza(VG)	2016	USA Area	BSD(Blind Spot Detection)	Version Information	
Cadenza(VG)	2016	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Cadenza(VG)	2016	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	BSD(Blind Spot Detection)	Read Data Stream	

model	year	area	system	function	subfunction
Cadenza(VG)	2016	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Cadenza(VG)	2016	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Cadenza(VG)	2016	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
Cadenza(VG)	2016	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Code Reading
Cadenza(VG)	2016	USA Area	LDWS(Lane Departure Warning System)	Version Information	
Cadenza(VG)	2016	USA Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Cadenza(VG)	2016	USA Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cadenza(VG)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Cadenza(VG)	2016	USA Area	SCC(Smart Cruise Control)	Version Information	
Cadenza(VG)	2016	USA Area	SCC(Smart Cruise Control)	Read Fault Code	
Cadenza(VG)	2016	USA Area	SCC(Smart Cruise Control)	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	SCC(Smart Cruise Control)	Read Data Stream	
Cadenza(VG)	2016	USA Area	SCC(Smart Cruise Control)	Special Function	SCC Alignment(Calibration)
Cadenza(VG)	2016	USA Area	SVMS(Surround View Monitor System)	Version Information	
Cadenza(VG)	2016	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Cadenza(VG)	2016	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Cadenza(VG)	2016	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Cadenza(VG)	2016	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Cadenza(VG)	2016	USA Area	Telematics Unit	Version Information	
Cadenza(VG)	2016	USA Area	Telematics Unit	Read Fault Code	
Cadenza(VG)	2016	USA Area	Telematics Unit	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	ECM(Engine Control Module)	Version Information	
Cadenza(VG)	2015	USA Area	ECM(Engine Control Module)	Read Fault Code	
Cadenza(VG)	2015	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	ECM(Engine Control Module)	Read Data Stream	
Cadenza(VG)	2015	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Cadenza(VG)	2015	USA Area	ECM(Engine Control Module)	Actuation Test	
Cadenza(VG)	2015	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Cadenza(VG)	2015	USA Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Cadenza(VG)	2015	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Cadenza(VG)	2015	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cadenza(VG)	2015	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cadenza(VG)	2015	USA Area	TCM(Transmission Control Module)	Version Information	
Cadenza(VG)	2015	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Cadenza(VG)	2015	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(VG)	2015	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cadenza(VG)	2015	USA Area	TCM(Transmission Control Module)	Actuation Test	
Cadenza(VG)	2015	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cadenza(VG)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Cadenza(VG)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cadenza(VG)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cadenza(VG)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cadenza(VG)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cadenza(VG)	2015	USA Area	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Cadenza(VG)	2015	USA Area	AC(Air Conditioning)	Read Fault Code	
Cadenza(VG)	2015	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	AC(Air Conditioning)	Read Data Stream	
Cadenza(VG)	2015	USA Area	AC(Air Conditioning)	Actuation Test	
Cadenza(VG)	2015	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cadenza(VG)	2015	USA Area	BCM(Body Control Module)	Version Information	
Cadenza(VG)	2015	USA Area	BCM(Body Control Module)	Read Fault Code	
Cadenza(VG)	2015	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	BCM(Body Control Module)	Read Data Stream	
Cadenza(VG)	2015	USA Area	BCM(Body Control Module)	Actuation Test	
Cadenza(VG)	2015	USA Area	BCM(Body Control Module)	Special Function	User Option
Cadenza(VG)	2015	USA Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Cadenza(VG)	2015	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cadenza(VG)	2015	USA Area	Smart Key Unit	Version Information	
Cadenza(VG)	2015	USA Area	Smart Key Unit	Read Fault Code	
Cadenza(VG)	2015	USA Area	Smart Key Unit	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	Smart Key Unit	Read Data Stream	
Cadenza(VG)	2015	USA Area	Smart Key Unit	Actuation Test	
Cadenza(VG)	2015	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cadenza(VG)	2015	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Cadenza(VG)	2015	USA Area	Smart Key Unit	Special Function	SMK Status Information
Cadenza(VG)	2015	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cadenza(VG)	2015	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Cadenza(VG)	2015	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cadenza(VG)	2015	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Cadenza(VG)	2015	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Cadenza(VG)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cadenza(VG)	2015	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cadenza(VG)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
Cadenza(VG)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cadenza(VG)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cadenza(VG)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cadenza(VG)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cadenza(VG)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cadenza(VG)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cadenza(VG)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cadenza(VG)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cadenza(VG)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cadenza(VG)	2015	USA Area	Head Lamp	Version Information	
Cadenza(VG)	2015	USA Area	Head Lamp	Read Fault Code	
Cadenza(VG)	2015	USA Area	Head Lamp	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	Head Lamp	Read Data Stream	
Cadenza(VG)	2015	USA Area	Head Lamp	Actuation Test	
Cadenza(VG)	2015	USA Area	Head Lamp	Special Function	Headlamp Leveling
Cadenza(VG)	2015	USA Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Cadenza(VG)	2015	USA Area	Head Lamp	Special Function	Calibration
Cadenza(VG)	2015	USA Area	Head Lamp	Special Function	Parameter Download
Cadenza(VG)	2015	USA Area	LDWS(Lane Departure Warning System)	Version Information	
Cadenza(VG)	2015	USA Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Cadenza(VG)	2015	USA Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Cadenza(VG)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
Cadenza(VG)	2015	USA Area	LDWS(Lane Departure Warning System)	Actuation Test	
Cadenza(VG)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Cadenza(VG)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Cadenza(VG)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Code Reading
Cadenza(VG)	2015	USA Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Cadenza(VG)	2015	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cadenza(VG)	2015	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Cadenza(VG)	2015	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cadenza(VG)	2015	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cadenza(VG)	2015	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Cadenza(VG)	2015	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cadenza(VG)	2015	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cadenza(VG)	2015	USA Area	CCS(Cruise Control System)	Version Information	
Cadenza(VG)	2015	USA Area	CCS(Cruise Control System)	Read Fault Code	
Cadenza(VG)	2015	USA Area	CCS(Cruise Control System)	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	CCS(Cruise Control System)	Read Data Stream	
Cadenza(VG)	2015	USA Area	CCS(Cruise Control System)	Special Function	SCC Alignment(Calibration)
Cadenza(VG)	2015	USA Area	SVMS(Surround View Monitor System)	Version Information	
Cadenza(VG)	2015	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Cadenza(VG)	2015	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Cadenza(VG)	2015	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Cadenza(VG)	2015	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Cadenza(VG)	2015	USA Area	Telematics Unit	Version Information	
Cadenza(VG)	2015	USA Area	Telematics Unit	Read Fault Code	
Cadenza(VG)	2015	USA Area	Telematics Unit	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	ECM(Engine Control Module)	Version Information	
Cadenza(VG)	2014	USA Area	ECM(Engine Control Module)	Read Fault Code	
Cadenza(VG)	2014	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	ECM(Engine Control Module)	Read Data Stream	
Cadenza(VG)	2014	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Cadenza(VG)	2014	USA Area	ECM(Engine Control Module)	Actuation Test	
Cadenza(VG)	2014	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Cadenza(VG)	2014	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Cadenza(VG)	2014	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Cadenza(VG)	2014	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Cadenza(VG)	2014	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cadenza(VG)	2014	USA Area	TCM(Transmission Control Module)	Version Information	
Cadenza(VG)	2014	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Cadenza(VG)	2014	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(VG)	2014	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Cadenza(VG)	2014	USA Area	TCM(Transmission Control Module)	Actuation Test	
Cadenza(VG)	2014	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	EPB Variant Coding
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cadenza(VG)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Cadenza(VG)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cadenza(VG)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cadenza(VG)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cadenza(VG)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cadenza(VG)	2014	USA Area	AC(Air Conditioning)	Version Information	
Cadenza(VG)	2014	USA Area	AC(Air Conditioning)	Read Fault Code	
Cadenza(VG)	2014	USA Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Cadenza(VG)	2014	USA Area	AC(Air Conditioning)	Read Data Stream	
Cadenza(VG)	2014	USA Area	AC(Air Conditioning)	Actuation Test	
Cadenza(VG)	2014	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cadenza(VG)	2014	USA Area	BCM(Body Control Module)	Version Information	
Cadenza(VG)	2014	USA Area	BCM(Body Control Module)	Read Fault Code	
Cadenza(VG)	2014	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	BCM(Body Control Module)	Read Data Stream	
Cadenza(VG)	2014	USA Area	BCM(Body Control Module)	Actuation Test	
Cadenza(VG)	2014	USA Area	BCM(Body Control Module)	Special Function	User Option
Cadenza(VG)	2014	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cadenza(VG)	2014	USA Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Cadenza(VG)	2014	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Cadenza(VG)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cadenza(VG)	2014	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cadenza(VG)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Cadenza(VG)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cadenza(VG)	2014	USA Area	Smart Key Unit	Version Information	
Cadenza(VG)	2014	USA Area	Smart Key Unit	Read Fault Code	
Cadenza(VG)	2014	USA Area	Smart Key Unit	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	Smart Key Unit	Read Data Stream	
Cadenza(VG)	2014	USA Area	Smart Key Unit	Actuation Test	
Cadenza(VG)	2014	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cadenza(VG)	2014	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Cadenza(VG)	2014	USA Area	Smart Key Unit	Special Function	SMK Status Information
Cadenza(VG)	2014	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cadenza(VG)	2014	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Cadenza(VG)	2014	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Cadenza(VG)	2014	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Cadenza(VG)	2014	USA Area	Head Lamp	Version Information	

model	year	area	system	function	subfunction
Cadenza(VG)	2014	USA Area	Head Lamp	Read Fault Code	
Cadenza(VG)	2014	USA Area	Head Lamp	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	Head Lamp	Read Data Stream	
Cadenza(VG)	2014	USA Area	Head Lamp	Actuation Test	
Cadenza(VG)	2014	USA Area	Head Lamp	Special Function	Calibration
Cadenza(VG)	2014	USA Area	Head Lamp	Special Function	Parameter Download
Cadenza(VG)	2014	USA Area	Head Lamp	Special Function	Headlamp Leveling
Cadenza(VG)	2014	USA Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Cadenza(VG)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cadenza(VG)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Cadenza(VG)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cadenza(VG)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Cadenza(VG)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Cadenza(VG)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cadenza(VG)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cadenza(VG)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cadenza(VG)	2014	USA Area	AVMS(Around View Monitor System)	Version Information	
Cadenza(VG)	2014	USA Area	AVMS(Around View Monitor System)	Read Fault Code	
Cadenza(VG)	2014	USA Area	AVMS(Around View Monitor System)	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	AVMS(Around View Monitor System)	Read Data Stream	
Cadenza(VG)	2014	USA Area	AVMS(Around View Monitor System)	Actuation Test	
Cadenza(VG)	2014	USA Area	IMMO(Immobilizer)	Read Data Stream	
Cadenza(VG)	2014	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cadenza(VG)	2014	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Cadenza(VG)	2014	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cadenza(VG)	2014	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Cadenza(VG)	2014	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Cadenza(VG)	2014	USA Area	CCS(Cruise Control System)	Version Information	

model	year	area	system	function	subfunction
Cadenza(VG)	2014	USA Area	CCS(Cruise Control System)	Read Fault Code	
Cadenza(VG)	2014	USA Area	CCS(Cruise Control System)	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	CCS(Cruise Control System)	Read Data Stream	
Cadenza(VG)	2014	USA Area	CCS(Cruise Control System)	Special Function	SCC Alignment(Calibration)
Cadenza(VG)	2014	USA Area	BSD(Blind Spot Detection)	Version Information	
Cadenza(VG)	2014	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Cadenza(VG)	2014	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Cadenza(VG)	2014	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Cadenza(VG)	2014	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Cadenza(VG)	2014	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Cadenza(VG)	2014	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
Cadenza(VG)	2014	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Code Reading
Cadenza(VG)	2014	USA Area	Telematics Unit	Version Information	
Cadenza(VG)	2014	USA Area	Telematics Unit	Read Fault Code	
Cadenza(VG)	2014	USA Area	Telematics Unit	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Cadenza(YG)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
Cadenza(YG)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
Cadenza(YG)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Cadenza(YG)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Cadenza(YG)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Cadenza(YG)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Cadenza(YG)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Cadenza(YG)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
Cadenza(YG)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Cadenza(YG)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Cadenza(YG)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	
Cadenza(YG)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Radar Sensor
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Assembly Check
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Brake Pad Change Mode
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Cadenza(YG)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Cadenza(YG)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Cadenza(YG)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Cadenza(YG)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Cadenza(YG)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Actuation Test	
Cadenza(YG)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Cadenza(YG)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Cadenza(YG)	2017	USA Area	AC(Air Conditioning)	Version Information	
Cadenza(YG)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Cadenza(YG)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Cadenza(YG)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Cadenza(YG)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Cadenza(YG)	2017	USA Area	BCM(Body Control Module)	Version Information	
Cadenza(YG)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Cadenza(YG)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Cadenza(YG)	2017	USA Area	BCM(Body Control Module)	Special Function	HUD Calibration
Cadenza(YG)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Cadenza(YG)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Cadenza(YG)	2017	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Cadenza(YG)	2017	USA Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
Cadenza(YG)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Cadenza(YG)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Cadenza(YG)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Cadenza(YG)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Cadenza(YG)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Cadenza(YG)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Cadenza(YG)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Cadenza(YG)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Cadenza(YG)	2017	USA Area	Smart Key Unit	Version Information	
Cadenza(YG)	2017	USA Area	Smart Key Unit	Read Fault Code	
Cadenza(YG)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	Smart Key Unit	Read Data Stream	
Cadenza(YG)	2017	USA Area	Smart Key Unit	Actuation Test	
Cadenza(YG)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Cadenza(YG)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Cadenza(YG)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Cadenza(YG)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Cadenza(YG)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Cadenza(YG)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Cadenza(YG)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Cadenza(YG)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Cadenza(YG)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Cadenza(YG)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Cadenza(YG)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Cadenza(YG)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Cadenza(YG)	2017	USA Area	Head Lamp	Version Information	
Cadenza(YG)	2017	USA Area	Head Lamp	Read Fault Code	
Cadenza(YG)	2017	USA Area	Head Lamp	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	Head Lamp	Read Data Stream	
Cadenza(YG)	2017	USA Area	Head Lamp	Actuation Test	
Cadenza(YG)	2017	USA Area	Head Lamp	Special Function	Calibration
Cadenza(YG)	2017	USA Area	Head Lamp	Special Function	Parameter Download
Cadenza(YG)	2017	USA Area	IMMO(Immobilizer)	Read Fault Code	
Cadenza(YG)	2017	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	IMMO(Immobilizer)	Read Data Stream	
Cadenza(YG)	2017	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Cadenza(YG)	2017	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Cadenza(YG)	2017	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Cadenza(YG)	2017	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Cadenza(YG)	2017	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Cadenza(YG)	2017	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Cadenza(YG)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
Cadenza(YG)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Cadenza(YG)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Cadenza(YG)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Cadenza(YG)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
Cadenza(YG)	2017	USA Area	MFC(Multi Function Camera)	Version Information	
Cadenza(YG)	2017	USA Area	MFC(Multi Function Camera)	Read Fault Code	
Cadenza(YG)	2017	USA Area	MFC(Multi Function Camera)	Clear Fault Memory	

model	year	area	system	function	subfunction
Cadenza(YG)	2017	USA Area	MFC(Multi Function Camera)	Read Data Stream	
Cadenza(YG)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPC Calibration
Cadenza(YG)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Cadenza(YG)	2017	USA Area	MFC(Multi Function Camera)	Special Function	Variant Coding
Cadenza(YG)	2017	USA Area	Amplifier	Version Information	
Cadenza(YG)	2017	USA Area	Amplifier	Special Function	AMP Operation Test
Cadenza(YG)	2017	USA Area	Intergrated Gateway Power Control Module	Version Information	
Cadenza(YG)	2017	USA Area	Intergrated Gateway Power Control Module	Read Fault Code	
Cadenza(YG)	2017	USA Area	Intergrated Gateway Power Control Module	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	Intergrated Gateway Power Control Module	Read Data Stream	
Cadenza(YG)	2017	USA Area	Intergrated Gateway Power Control Module	Actuation Test	
Cadenza(YG)	2017	USA Area	Intergrated Gateway Power Control Module	Special Function	User Option
Cadenza(YG)	2017	USA Area	Intergrated Gateway Power Control Module	Special Function	Erase Network Configuration
Cadenza(YG)	2017	USA Area	SVMS(Surround View Monitor System)	Version Information	
Cadenza(YG)	2017	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Cadenza(YG)	2017	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Cadenza(YG)	2017	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Cadenza(YG)	2017	USA Area	SVMS(Surround View Monitor System)	Special Function	SVM Calibration
Cadenza(YG)	2017	USA Area	PGS(Parking Guide System)	Version Information	
Cadenza(YG)	2017	USA Area	PGS(Parking Guide System)	Read Fault Code	
Cadenza(YG)	2017	USA Area	PGS(Parking Guide System)	Clear Fault Memory	
Cadenza(YG)	2017	USA Area	PGS(Parking Guide System)	Read Data Stream	
Forte(Yd)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Forte(Yd)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
Forte(Yd)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Forte(Yd)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
Forte(Yd)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Forte(Yd)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Forte(Yd)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Forte(Yd)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Forte(Yd)	2017	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Forte(Yd)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Forte(Yd)	2017	USA Area	DCT(Dual Clutch Transmission)	Version Information	
Forte(Yd)	2017	USA Area	DCT(Dual Clutch Transmission)	Read Fault Code	
Forte(Yd)	2017	USA Area	DCT(Dual Clutch Transmission)	Clear Fault Memory	
Forte(Yd)	2017	USA Area	DCT(Dual Clutch Transmission)	Read Data Stream	
Forte(Yd)	2017	USA Area	DCT(Dual Clutch Transmission)	Actuation Test	
Forte(Yd)	2017	USA Area	DCT(Dual Clutch Transmission)	Special Function	DCT Learning Function
Forte(Yd)	2017	USA Area	ESP(Electronic Stability Program)	Version Information	
Forte(Yd)	2017	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Forte(Yd)	2017	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Forte(Yd)	2017	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Forte(Yd)	2017	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Forte(Yd)	2017	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Forte(Yd)	2017	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Forte(Yd)	2017	USA Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Forte(Yd)	2017	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Forte(Yd)	2017	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dhc Only)
Forte(Yd)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Forte(Yd)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Forte(Yd)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Forte(Yd)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Forte(Yd)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Forte(Yd)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Forte(Yd)	2017	USA Area	AC(Air Conditioning)	Version Information	
Forte(Yd)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Forte(Yd)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Forte(Yd)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Forte(Yd)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Forte(Yd)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Forte(Yd)	2017	USA Area	BCM(Body Control Module)	Version Information	
Forte(Yd)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Forte(Yd)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Forte(Yd)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Forte(Yd)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Forte(Yd)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Forte(Yd)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Forte(Yd)	2017	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Forte(Yd)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Forte(Yd)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Forte(Yd)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Forte(Yd)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Forte(Yd)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Forte(Yd)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Forte(Yd)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Forte(Yd)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering
Forte(Yd)	2017	USA Area	Smart Key Unit	Version Information	
Forte(Yd)	2017	USA Area	Smart Key Unit	Read Fault Code	
Forte(Yd)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Forte(Yd)	2017	USA Area	Smart Key Unit	Read Data Stream	
Forte(Yd)	2017	USA Area	Smart Key Unit	Actuation Test	
Forte(Yd)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Forte(Yd)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Forte(Yd)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Forte(Yd)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Forte(Yd)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Forte(Yd)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Forte(Yd)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Forte(Yd)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Forte(Yd)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Forte(Yd)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Forte(Yd)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Forte(Yd)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Forte(Yd)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Forte(Yd)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Forte(Yd)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Forte(Yd)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Forte(Yd)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Forte(Yd)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Forte(Yd)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Forte(Yd)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Forte(Yd)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Forte(Yd)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Forte(Yd)	2017	USA Area	IMMO(Immobilizer)	Read Fault Code	
Forte(Yd)	2017	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Forte(Yd)	2017	USA Area	IMMO(Immobilizer)	Read Data Stream	
Forte(Yd)	2017	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Forte(Yd)	2017	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Forte(Yd)	2017	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Forte(Yd)	2017	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Forte(Yd)	2017	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Forte(Yd)	2017	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Forte(Yd)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
Forte(Yd)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Forte(Yd)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Forte(Yd)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	

model	year	area	system	function	subfunction
Forte(Yd)	2017	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Forte(Yd)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Forte(Yd)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
Forte(Yd)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Forte(Yd)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Forte(Yd)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Forte(Yd)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	
Forte(Yd)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Version Information	
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Forte(Yd)	2016	USA Area	TCM(Transmission Control Module)	Version Information	
Forte(Yd)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Forte(Yd)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Forte(Yd)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Forte(Yd)	2016	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Forte(Yd)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
Forte(Yd)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Forte(Yd)	2016	USA Area	ESP(Electronic Stability Program)	Version Information	
Forte(Yd)	2016	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Forte(Yd)	2016	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Forte(Yd)	2016	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Forte(Yd)	2016	USA Area	ESP(Electronic Stability Program)	Actuation Test	

model	year	area	system	function	subfunction
Forte(Yd)	2016	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Forte(Yd)	2016	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Forte(Yd)	2016	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Forte(Yd)	2016	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Forte(Yd)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Forte(Yd)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Forte(Yd)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Forte(Yd)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Forte(Yd)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Forte(Yd)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Forte(Yd)	2016	USA Area	AC(Air Conditioning)	Version Information	
Forte(Yd)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
Forte(Yd)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Forte(Yd)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
Forte(Yd)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
Forte(Yd)	2016	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Forte(Yd)	2016	USA Area	BCM(Body Control Module)	Version Information	
Forte(Yd)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
Forte(Yd)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Forte(Yd)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
Forte(Yd)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
Forte(Yd)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
Forte(Yd)	2016	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Forte(Yd)	2016	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Forte(Yd)	2016	USA Area	Smart Key Unit(Button)	Version Information	
Forte(Yd)	2016	USA Area	Smart Key Unit(Button)	Read Fault Code	
Forte(Yd)	2016	USA Area	Smart Key Unit(Button)	Clear Fault Memory	
Forte(Yd)	2016	USA Area	Smart Key Unit(Button)	Read Data Stream	

model	year	area	system	function	subfunction
Forte(Yd)	2016	USA Area	Smart Key Unit(Button)	Actuation Test	
Forte(Yd)	2016	USA Area	Smart Key Unit(Button)	Special Function	Smart Key Code Saving
Forte(Yd)	2016	USA Area	Smart Key Unit(Button)	Special Function	Neutralization Mode
Forte(Yd)	2016	USA Area	Smart Key Unit(Button)	Special Function	SMK Status Information
Forte(Yd)	2016	USA Area	Smart Key Unit(Button)	Special Function	FOB KEY Status Information
Forte(Yd)	2016	USA Area	Smart Key Unit(Button)	Special Function	Current FOB Key Check
Forte(Yd)	2016	USA Area	Smart Key Unit(Button)	Special Function	Antenna Status Check
Forte(Yd)	2016	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Forte(Yd)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Forte(Yd)	2016	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Forte(Yd)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Forte(Yd)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Forte(Yd)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Forte(Yd)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Forte(Yd)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Forte(Yd)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Forte(Yd)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Forte(Yd)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Forte(Yd)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Forte(Yd)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Forte(Yd)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Forte(Yd)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Forte(Yd)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Forte(Yd)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Forte(Yd)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Forte(Yd)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Forte(Yd)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Forte(Yd)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Forte(Yd)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Forte(Yd)	2016	USA Area	IMMO(Immobilizer)	Read Fault Code	

model	year	area	system	function	subfunction
Forte(Yd)	2016	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Forte(Yd)	2016	USA Area	IMMO(Immobilizer)	Read Data Stream	
Forte(Yd)	2016	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Forte(Yd)	2016	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Forte(Yd)	2016	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Forte(Yd)	2016	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Forte(Yd)	2016	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Forte(Yd)	2016	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Forte(Yd)	2016	USA Area	Telematics Unit	Version Information	
Forte(Yd)	2016	USA Area	Telematics Unit	Read Fault Code	
Forte(Yd)	2016	USA Area	Telematics Unit	Clear Fault Memory	
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Forte(Yd)	2016	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Forte(Yd)	2016	USA Area	Steering	Version Information	
Forte(Yd)	2016	USA Area	Steering	Read Fault Code	
Forte(Yd)	2016	USA Area	Steering	Clear Fault Memory	
Forte(Yd)	2016	USA Area	Steering	Read Data Stream	
Forte(Yd)	2016	USA Area	Steering	Special Function	ASP Calibration
Forte(Yd)	2016	USA Area	Steering	Special Function	EPS Type Recognition
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Version Information	
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Read Fault Code	
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Read Data Stream	
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Actuation Test	
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Forte(Yd)	2015	USA Area	TCM(Transmission Control Module)	Version Information	
Forte(Yd)	2015	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Forte(Yd)	2015	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Forte(Yd)	2015	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Forte(Yd)	2015	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Forte(Yd)	2015	USA Area	TCM(Transmission Control Module)	Actuation Test	
Forte(Yd)	2015	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Forte(Yd)	2015	USA Area	ESP(Electronic Stability Program)	Version Information	
Forte(Yd)	2015	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Forte(Yd)	2015	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Forte(Yd)	2015	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Forte(Yd)	2015	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Forte(Yd)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Forte(Yd)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Forte(Yd)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Forte(Yd)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Forte(Yd)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Forte(Yd)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Forte(Yd)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Forte(Yd)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Forte(Yd)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Forte(Yd)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Forte(Yd)	2015	USA Area	AC(Air Conditioning)	Version Information	
Forte(Yd)	2015	USA Area	AC(Air Conditioning)	Read Fault Code	
Forte(Yd)	2015	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Forte(Yd)	2015	USA Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Forte(Yd)	2015	USA Area	AC(Air Conditioning)	Actuation Test	
Forte(Yd)	2015	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Forte(Yd)	2015	USA Area	BCM(Body Control Module)	Version Information	
Forte(Yd)	2015	USA Area	BCM(Body Control Module)	Read Fault Code	
Forte(Yd)	2015	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Forte(Yd)	2015	USA Area	BCM(Body Control Module)	Read Data Stream	
Forte(Yd)	2015	USA Area	BCM(Body Control Module)	Actuation Test	
Forte(Yd)	2015	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Forte(Yd)	2015	USA Area	BCM(Body Control Module)	Special Function	User Option
Forte(Yd)	2015	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Forte(Yd)	2015	USA Area	Smart Key Unit(Button)	Version Information	
Forte(Yd)	2015	USA Area	Smart Key Unit(Button)	Read Fault Code	
Forte(Yd)	2015	USA Area	Smart Key Unit(Button)	Clear Fault Memory	
Forte(Yd)	2015	USA Area	Smart Key Unit(Button)	Read Data Stream	
Forte(Yd)	2015	USA Area	Smart Key Unit(Button)	Actuation Test	
Forte(Yd)	2015	USA Area	Smart Key Unit(Button)	Special Function	Smart Key Code Saving
Forte(Yd)	2015	USA Area	Smart Key Unit(Button)	Special Function	Neutralization Mode
Forte(Yd)	2015	USA Area	Smart Key Unit(Button)	Special Function	SMK Status Information
Forte(Yd)	2015	USA Area	Smart Key Unit(Button)	Special Function	FOB KEY Status Information
Forte(Yd)	2015	USA Area	Smart Key Unit(Button)	Special Function	Current FOB Key Check
Forte(Yd)	2015	USA Area	Smart Key Unit(Button)	Special Function	Antenna Status Check
Forte(Yd)	2015	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Forte(Yd)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Forte(Yd)	2015	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Forte(Yd)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Forte(Yd)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Forte(Yd)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Forte(Yd)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Forte(Yd)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Forte(Yd)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Forte(Yd)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Forte(Yd)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Forte(Yd)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Forte(Yd)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Forte(Yd)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Forte(Yd)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Forte(Yd)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Forte(Yd)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Forte(Yd)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Forte(Yd)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Forte(Yd)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Forte(Yd)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Forte(Yd)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Forte(Yd)	2015	USA Area	IMMO(Immobilizer)	Read Fault Code	
Forte(Yd)	2015	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Forte(Yd)	2015	USA Area	IMMO(Immobilizer)	Read Data Stream	
Forte(Yd)	2015	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Forte(Yd)	2015	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Forte(Yd)	2015	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Forte(Yd)	2015	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Forte(Yd)	2015	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Forte(Yd)	2015	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Forte(Yd)	2015	USA Area	Telematics Unit	Version Information	
Forte(Yd)	2015	USA Area	Telematics Unit	Read Fault Code	
Forte(Yd)	2015	USA Area	Telematics Unit	Clear Fault Memory	
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Forte(Yd)	2015	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)

model	year	area	system	function	subfunction
Forte(Yd)	2015	USA Area	Motor Driven Power Steering(Mobis)	Version Information	
Forte(Yd)	2015	USA Area	Motor Driven Power Steering(Mobis)	Read Fault Code	
Forte(Yd)	2015	USA Area	Motor Driven Power Steering(Mobis)	Clear Fault Memory	
Forte(Yd)	2015	USA Area	Motor Driven Power Steering(Mobis)	Read Data Stream	
Forte(Yd)	2015	USA Area	Motor Driven Power Steering(Mobis)	Special Function	ASP Calibration
Forte(Yd)	2015	USA Area	Motor Driven Power Steering(Mobis)	Special Function	EPS Type Recognition
Forte(Yd)	2015	USA Area	Steering	Version Information	
Forte(Yd)	2015	USA Area	Steering	Read Fault Code	
Forte(Yd)	2015	USA Area	Steering	Clear Fault Memory	
Forte(Yd)	2015	USA Area	Steering	Read Data Stream	
Forte(Yd)	2015	USA Area	Steering	Special Function	ASP Calibration
Forte(Yd)	2015	USA Area	Steering	Special Function	EPS Type Recognition
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Version Information	
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Read Fault Code	
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Read Data Stream	
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Actuation Test	
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Forte(Yd)	2014	USA Area	TCM(Transmission Control Module)	Version Information	
Forte(Yd)	2014	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Forte(Yd)	2014	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Forte(Yd)	2014	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Forte(Yd)	2014	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Forte(Yd)	2014	USA Area	TCM(Transmission Control Module)	Actuation Test	
Forte(Yd)	2014	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Forte(Yd)	2014	USA Area	ESP(Electronic Stability Program)	Version Information	

model	year	area	system	function	subfunction
Forte(Yd)	2014	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Forte(Yd)	2014	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Forte(Yd)	2014	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Forte(Yd)	2014	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Forte(Yd)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Forte(Yd)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Forte(Yd)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Forte(Yd)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Forte(Yd)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Forte(Yd)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Forte(Yd)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Forte(Yd)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Forte(Yd)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Forte(Yd)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Forte(Yd)	2014	USA Area	AC(Air Conditioning)	Version Information	
Forte(Yd)	2014	USA Area	AC(Air Conditioning)	Read Fault Code	
Forte(Yd)	2014	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Forte(Yd)	2014	USA Area	AC(Air Conditioning)	Read Data Stream	
Forte(Yd)	2014	USA Area	AC(Air Conditioning)	Actuation Test	
Forte(Yd)	2014	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Forte(Yd)	2014	USA Area	BCM(Body Control Module)	Version Information	
Forte(Yd)	2014	USA Area	BCM(Body Control Module)	Read Fault Code	
Forte(Yd)	2014	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Forte(Yd)	2014	USA Area	BCM(Body Control Module)	Read Data Stream	
Forte(Yd)	2014	USA Area	BCM(Body Control Module)	Actuation Test	
Forte(Yd)	2014	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Forte(Yd)	2014	USA Area	BCM(Body Control Module)	Special Function	User Option
Forte(Yd)	2014	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting

model	year	area	system	function	subfunction
Forte(Yd)	2014	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Forte(Yd)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Forte(Yd)	2014	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Forte(Yd)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Forte(Yd)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Forte(Yd)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Forte(Yd)	2014	USA Area	Smart Key Unit(Button)	Version Information	
Forte(Yd)	2014	USA Area	Smart Key Unit(Button)	Read Fault Code	
Forte(Yd)	2014	USA Area	Smart Key Unit(Button)	Clear Fault Memory	
Forte(Yd)	2014	USA Area	Smart Key Unit(Button)	Read Data Stream	
Forte(Yd)	2014	USA Area	Smart Key Unit(Button)	Actuation Test	
Forte(Yd)	2014	USA Area	Smart Key Unit(Button)	Special Function	Smart Key Code Saving
Forte(Yd)	2014	USA Area	Smart Key Unit(Button)	Special Function	Neutralization Mode
Forte(Yd)	2014	USA Area	Smart Key Unit(Button)	Special Function	SMK Status Information
Forte(Yd)	2014	USA Area	Smart Key Unit(Button)	Special Function	FOB KEY Status Information
Forte(Yd)	2014	USA Area	Smart Key Unit(Button)	Special Function	Current FOB Key Check
Forte(Yd)	2014	USA Area	Smart Key Unit(Button)	Special Function	Antenna Status Check
Forte(Yd)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Forte(Yd)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Forte(Yd)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Forte(Yd)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Forte(Yd)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Forte(Yd)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Forte(Yd)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Forte(Yd)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Forte(Yd)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Forte(Yd)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Forte(Yd)	2014	USA Area	IMMO(Immobilizer)	Read Fault Code	
Forte(Yd)	2014	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Forte(Yd)	2014	USA Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Forte(Yd)	2014	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Forte(Yd)	2014	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Forte(Yd)	2014	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Forte(Yd)	2014	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Forte(Yd)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Forte(Yd)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Forte(Yd)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Forte(Yd)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Forte(Yd)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Level Initialization
Forte(Yd)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Forte(Yd)	2014	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Forte(Yd)	2014	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Forte(Yd)	2014	USA Area	Telematics Unit	Version Information	
Forte(Yd)	2014	USA Area	Telematics Unit	Read Fault Code	
Forte(Yd)	2014	USA Area	Telematics Unit	Clear Fault Memory	
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Forte(Yd)	2014	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Forte(Yd)	2014	USA Area	Motor Driven Power Steering(Mobis)	Version Information	
Forte(Yd)	2014	USA Area	Motor Driven Power Steering(Mobis)	Read Fault Code	
Forte(Yd)	2014	USA Area	Motor Driven Power Steering(Mobis)	Clear Fault Memory	
Forte(Yd)	2014	USA Area	Motor Driven Power Steering(Mobis)	Read Data Stream	
Forte(Yd)	2014	USA Area	Motor Driven Power Steering(Mobis)	Special Function	ASP Calibration
Forte(Yd)	2014	USA Area	Motor Driven Power Steering(Mobis)	Special Function	EPS Type Recognition
Forte(Yd)	2014	USA Area	Steering	Version Information	
Forte(Yd)	2014	USA Area	Steering	Read Fault Code	
Forte(Yd)	2014	USA Area	Steering	Clear Fault Memory	
Forte(Yd)	2014	USA Area	Steering	Read Data Stream	

model	year	area	system	function	subfunction
Forte(Yd)	2014	USA Area	Steering	Special Function	ASP Calibration
Forte(Yd)	2014	USA Area	Steering	Special Function	EPS Type Recognition
Forte(YDm)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Forte(YDm)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
Forte(YDm)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Forte(YDm)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
Forte(YDm)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Forte(YDm)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Forte(YDm)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Forte(YDm)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Forte(YDm)	2017	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Forte(YDm)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Forte(YDm)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
Forte(YDm)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Forte(YDm)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Forte(YDm)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Forte(YDm)	2017	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Forte(YDm)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	
Forte(YDm)	2017	USA Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Forte(YDm)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Forte(YDm)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Forte(YDm)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Forte(YDm)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Forte(YDm)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Forte(YDm)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Forte(YDm)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Forte(YDm)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Forte(YDm)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Forte(YDm)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Forte(YDm)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Forte(YDm)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Forte(YDm)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Forte(YDm)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Forte(YDm)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Forte(YDm)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Forte(YDm)	2017	USA Area	AC(Air Conditioning)	Version Information	
Forte(YDm)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Forte(YDm)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Forte(YDm)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Forte(YDm)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Forte(YDm)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Forte(YDm)	2017	USA Area	BCM(Body Control Module)	Version Information	
Forte(YDm)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Forte(YDm)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Forte(YDm)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Forte(YDm)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Forte(YDm)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Forte(YDm)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Forte(YDm)	2017	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Forte(YDm)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Forte(YDm)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Forte(YDm)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Forte(YDm)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Forte(YDm)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Forte(YDm)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Forte(YDm)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)

model	year	area	system	function	subfunction
Forte(YDm)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering)
Forte(YDm)	2017	USA Area	Smart Key Unit	Version Information	
Forte(YDm)	2017	USA Area	Smart Key Unit	Read Fault Code	
Forte(YDm)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Forte(YDm)	2017	USA Area	Smart Key Unit	Read Data Stream	
Forte(YDm)	2017	USA Area	Smart Key Unit	Actuation Test	
Forte(YDm)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Forte(YDm)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Forte(YDm)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Forte(YDm)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Forte(YDm)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Forte(YDm)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Forte(YDm)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Forte(YDm)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Forte(YDm)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Forte(YDm)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Forte(YDm)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Forte(YDm)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Forte(YDm)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Forte(YDm)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Forte(YDm)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Forte(YDm)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Forte(YDm)	2017	USA Area	AFS(Adaptive Front Lighting System)	Version Information	
Forte(YDm)	2017	USA Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
Forte(YDm)	2017	USA Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Forte(YDm)	2017	USA Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
Forte(YDm)	2017	USA Area	AFS(Adaptive Front Lighting System)	Actuation Test	
Forte(YDm)	2017	USA Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Forte(YDm)	2017	USA Area	IMMO(Immobilizer)	Read Fault Code	
Forte(YDm)	2017	USA Area	IMMO(Immobilizer)	Clear Fault Memory	

model	year	area	system	function	subfunction
Forte(YDm)	2017	USA Area	IMMO(Immobilizer)	Read Data Stream	
Forte(YDm)	2017	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Forte(YDm)	2017	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Forte(YDm)	2017	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Forte(YDm)	2017	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Forte(YDm)	2017	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Forte(YDm)	2017	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Forte(YDm)	2017	USA Area	MFC(Multi Function Camera)	Version Information	
Forte(YDm)	2017	USA Area	MFC(Multi Function Camera)	Read Fault Code	
Forte(YDm)	2017	USA Area	MFC(Multi Function Camera)	Clear Fault Memory	
Forte(YDm)	2017	USA Area	MFC(Multi Function Camera)	Read Data Stream	
Forte(YDm)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPC Calibration
Forte(YDm)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Forte(YDm)	2017	USA Area	MFC(Multi Function Camera)	Special Function	Variant Coding
Forte(YDm)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
Forte(YDm)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Forte(YDm)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Forte(YDm)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Forte(YDm)	2017	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Forte(YDm)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Forte(YDm)	2017	USA Area	SCC(Smart Cruise Control)	Version Information	
Forte(YDm)	2017	USA Area	SCC(Smart Cruise Control)	Read Fault Code	
Forte(YDm)	2017	USA Area	SCC(Smart Cruise Control)	Clear Fault Memory	
Forte(YDm)	2017	USA Area	SCC(Smart Cruise Control)	Read Data Stream	
Forte(YDm)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Forte(YDm)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Version Information	
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Read Data Stream	
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Forte/Forte Koup(TD)	2013	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Forte/Forte Koup(TD)	2013	USA Area	TCM(Transmission Control Module)	Version Information	
Forte/Forte Koup(TD)	2013	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Forte/Forte Koup(TD)	2013	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2013	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Forte/Forte Koup(TD)	2013	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Forte/Forte Koup(TD)	2013	USA Area	TCM(Transmission Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2013	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Forte/Forte Koup(TD)	2013	USA Area	ESP(Electronic Stability Program)	Version Information	
Forte/Forte Koup(TD)	2013	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Forte/Forte Koup(TD)	2013	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Forte/Forte Koup(TD)	2013	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Forte/Forte Koup(TD)	2013	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Forte/Forte Koup(TD)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Forte/Forte Koup(TD)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Forte/Forte Koup(TD)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Forte/Forte Koup(TD)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Forte/Forte Koup(TD)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Forte/Forte Koup(TD)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Forte/Forte Koup(TD)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Forte/Forte Koup(TD)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Forte/Forte Koup(TD)	2013	USA Area	AC(Air Conditioning)	Version Information	
Forte/Forte Koup(TD)	2013	USA Area	AC(Air Conditioning)	Read Fault Code	
Forte/Forte Koup(TD)	2013	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Forte/Forte Koup(TD)	2013	USA Area	AC(Air Conditioning)	Read Data Stream	
Forte/Forte Koup(TD)	2013	USA Area	AC(Air Conditioning)	Actuation Test	
Forte/Forte Koup(TD)	2013	USA Area	BCM(Body Control Module)	Version Information	
Forte/Forte Koup(TD)	2013	USA Area	BCM(Body Control Module)	Read Data Stream	
Forte/Forte Koup(TD)	2013	USA Area	BCM(Body Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2013	USA Area	BCM(Body Control Module)	Special Function	User Option
Forte/Forte Koup(TD)	2013	USA Area	Power Steering	Version Information	
Forte/Forte Koup(TD)	2013	USA Area	Power Steering	Read Fault Code	
Forte/Forte Koup(TD)	2013	USA Area	Power Steering	Clear Fault Memory	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2013	USA Area	Power Steering	Read Data Stream	
Forte/Forte Koup(TD)	2013	USA Area	Power Steering	Special Function	ASP Calibration
Forte/Forte Koup(TD)	2013	USA Area	Power Steering	Special Function	EPS Type Recognition
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Version Information	
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Read Fault Code	
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Clear Fault Memory	
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Read Data Stream	
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Actuation Test	
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Special Function	Neutralization Mode
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Special Function	SMK Status Information
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Special Function	PDM Status Information
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Special Function	FOB KEY Status Information
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Special Function	Serial Communication Line Check
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Special Function	Antenna Status Check
Forte/Forte Koup(TD)	2013	USA Area	Smart Key	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Forte/Forte Koup(TD)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Forte/Forte Koup(TD)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Forte/Forte Koup(TD)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Forte/Forte Koup(TD)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Forte/Forte Koup(TD)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Forte/Forte Koup(TD)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Forte/Forte Koup(TD)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Forte/Forte Koup(TD)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Forte/Forte Koup(TD)	2013	USA Area	IMMO(Immobilizer)	Read Data Stream	
Forte/Forte Koup(TD)	2013	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Forte/Forte Koup(TD)	2013	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Forte/Forte Koup(TD)	2013	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Forte/Forte Koup(TD)	2013	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Forte/Forte Koup(TD)	2013	USA Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2013	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Forte/Forte Koup(TD)	2013	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Forte/Forte Koup(TD)	2013	USA Area	Steering	Version Information	
Forte/Forte Koup(TD)	2013	USA Area	Steering	Read Fault Code	
Forte/Forte Koup(TD)	2013	USA Area	Steering	Clear Fault Memory	
Forte/Forte Koup(TD)	2013	USA Area	Steering	Read Data Stream	
Forte/Forte Koup(TD)	2013	USA Area	Steering	Special Function	ASP Calibration
Forte/Forte Koup(TD)	2013	USA Area	Steering	Special Function	EPS Type Recognition
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Version Information	
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Read Fault Code	
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Forte/Forte Koup(TD)	2012	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Forte/Forte Koup(TD)	2012	USA Area	TCM(Transmission Control Module)	Version Information	
Forte/Forte Koup(TD)	2012	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Forte/Forte Koup(TD)	2012	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Forte/Forte Koup(TD)	2012	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Forte/Forte Koup(TD)	2012	USA Area	TCM(Transmission Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2012	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Forte/Forte Koup(TD)	2012	USA Area	ESP(Electronic Stability Program)	Version Information	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2012	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Forte/Forte Koup(TD)	2012	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Forte/Forte Koup(TD)	2012	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Forte/Forte Koup(TD)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Forte/Forte Koup(TD)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Forte/Forte Koup(TD)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Forte/Forte Koup(TD)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Forte/Forte Koup(TD)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Forte/Forte Koup(TD)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Forte/Forte Koup(TD)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Forte/Forte Koup(TD)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Forte/Forte Koup(TD)	2012	USA Area	AC(Air Conditioning)	Version Information	
Forte/Forte Koup(TD)	2012	USA Area	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2012	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Forte/Forte Koup(TD)	2012	USA Area	AC(Air Conditioning)	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	AC(Air Conditioning)	Actuation Test	
Forte/Forte Koup(TD)	2012	USA Area	BCM(Body Control Module)	Version Information	
Forte/Forte Koup(TD)	2012	USA Area	BCM(Body Control Module)	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	BCM(Body Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2012	USA Area	BCM(Body Control Module)	Special Function	User Option
Forte/Forte Koup(TD)	2012	USA Area	Power Steering	Version Information	
Forte/Forte Koup(TD)	2012	USA Area	Power Steering	Read Fault Code	
Forte/Forte Koup(TD)	2012	USA Area	Power Steering	Clear Fault Memory	
Forte/Forte Koup(TD)	2012	USA Area	Power Steering	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	Power Steering	Special Function	ASP Calibration
Forte/Forte Koup(TD)	2012	USA Area	Power Steering	Special Function	EPS Type Recognition
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Version Information	
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Read Fault Code	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Clear Fault Memory	
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Actuation Test	
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Special Function	Neutralization Mode
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Special Function	SMK Status Information
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Special Function	PDM Status Information
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Special Function	FOB KEY Status Information
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Special Function	Serial Communication Line Check
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Special Function	Antenna Status Check
Forte/Forte Koup(TD)	2012	USA Area	Smart Key	Special Function	Smart Key Code Saving
Forte/Forte Koup(TD)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Forte/Forte Koup(TD)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Forte/Forte Koup(TD)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Forte/Forte Koup(TD)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Forte/Forte Koup(TD)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Forte/Forte Koup(TD)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Forte/Forte Koup(TD)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Forte/Forte Koup(TD)	2012	USA Area	IMMO(Immobilizer)	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Forte/Forte Koup(TD)	2012	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Forte/Forte Koup(TD)	2012	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Forte/Forte Koup(TD)	2012	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Forte/Forte Koup(TD)	2012	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Forte/Forte Koup(TD)	2012	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Forte/Forte Koup(TD)	2012	USA Area	Steering	Version Information	
Forte/Forte Koup(TD)	2012	USA Area	Steering	Read Fault Code	
Forte/Forte Koup(TD)	2012	USA Area	Steering	Clear Fault Memory	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2012	USA Area	Steering	Read Data Stream	
Forte/Forte Koup(TD)	2012	USA Area	Steering	Special Function	ASP Calibration
Forte/Forte Koup(TD)	2012	USA Area	Steering	Special Function	EPS Type Recognition
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Version Information	
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Read Fault Code	
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Read Data Stream	
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Forte/Forte Koup(TD)	2011	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Forte/Forte Koup(TD)	2011	USA Area	TCM(Transmission Control Module)	Version Information	
Forte/Forte Koup(TD)	2011	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Forte/Forte Koup(TD)	2011	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Forte/Forte Koup(TD)	2011	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Forte/Forte Koup(TD)	2011	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Forte/Forte Koup(TD)	2011	USA Area	TCM(Transmission Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2011	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Forte/Forte Koup(TD)	2011	USA Area	ESP(Electronic Stability Program)	Version Information	
Forte/Forte Koup(TD)	2011	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Forte/Forte Koup(TD)	2011	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Forte/Forte Koup(TD)	2011	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Forte/Forte Koup(TD)	2011	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Forte/Forte Koup(TD)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Forte/Forte Koup(TD)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Forte/Forte Koup(TD)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Forte/Forte Koup(TD)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Forte/Forte Koup(TD)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Forte/Forte Koup(TD)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Forte/Forte Koup(TD)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Forte/Forte Koup(TD)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Forte/Forte Koup(TD)	2011	USA Area	AC(Air Conditioning)	Version Information	
Forte/Forte Koup(TD)	2011	USA Area	AC(Air Conditioning)	Read Fault Code	
Forte/Forte Koup(TD)	2011	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Forte/Forte Koup(TD)	2011	USA Area	AC(Air Conditioning)	Read Data Stream	
Forte/Forte Koup(TD)	2011	USA Area	AC(Air Conditioning)	Actuation Test	
Forte/Forte Koup(TD)	2011	USA Area	BCM(Body Control Module)	Version Information	
Forte/Forte Koup(TD)	2011	USA Area	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2011	USA Area	BCM(Body Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2011	USA Area	BCM(Body Control Module)	Special Function	User Option
Forte/Forte Koup(TD)	2011	USA Area	Power Steering	Version Information	
Forte/Forte Koup(TD)	2011	USA Area	Power Steering	Read Fault Code	
Forte/Forte Koup(TD)	2011	USA Area	Power Steering	Clear Fault Memory	
Forte/Forte Koup(TD)	2011	USA Area	Power Steering	Read Data Stream	
Forte/Forte Koup(TD)	2011	USA Area	Power Steering	Special Function	ASP Calibration
Forte/Forte Koup(TD)	2011	USA Area	Power Steering	Special Function	EPS Type Recognition
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Version Information	
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Read Fault Code	
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Clear Fault Memory	
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Read Data Stream	
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Actuation Test	
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Special Function	Neutralization Mode
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Special Function	SMK Status Information

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Special Function	PDM Status Information
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Special Function	FOB KEY Status Information
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Special Function	Serial Communication Line Check
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Special Function	Antenna Status Check
Forte/Forte Koup(TD)	2011	USA Area	Smart Key	Special Function	Smart Key Code Saving
Forte/Forte Koup(TD)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Forte/Forte Koup(TD)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Forte/Forte Koup(TD)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Forte/Forte Koup(TD)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Forte/Forte Koup(TD)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Forte/Forte Koup(TD)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Forte/Forte Koup(TD)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Forte/Forte Koup(TD)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Forte/Forte Koup(TD)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Forte/Forte Koup(TD)	2011	USA Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2011	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Forte/Forte Koup(TD)	2011	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Forte/Forte Koup(TD)	2011	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Forte/Forte Koup(TD)	2011	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Forte/Forte Koup(TD)	2011	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Forte/Forte Koup(TD)	2011	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Forte/Forte Koup(TD)	2011	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Forte/Forte Koup(TD)	2011	USA Area	Steering	Version Information	
Forte/Forte Koup(TD)	2011	USA Area	Steering	Read Fault Code	
Forte/Forte Koup(TD)	2011	USA Area	Steering	Clear Fault Memory	
Forte/Forte Koup(TD)	2011	USA Area	Steering	Read Data Stream	
Forte/Forte Koup(TD)	2011	USA Area	Steering	Special Function	ASP Calibration
Forte/Forte Koup(TD)	2011	USA Area	Steering	Special Function	EPS Type Recognition
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Version Information	
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Read Data Stream	
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Forte/Forte Koup(TD)	2010	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Forte/Forte Koup(TD)	2010	USA Area	TCM(Transmission Control Module)	Version Information	
Forte/Forte Koup(TD)	2010	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Forte/Forte Koup(TD)	2010	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2010	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Forte/Forte Koup(TD)	2010	USA Area	TCM(Transmission Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2010	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Forte/Forte Koup(TD)	2010	USA Area	ESP(Electronic Stability Program)	Version Information	
Forte/Forte Koup(TD)	2010	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Forte/Forte Koup(TD)	2010	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Forte/Forte Koup(TD)	2010	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Forte/Forte Koup(TD)	2010	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Forte/Forte Koup(TD)	2010	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Forte/Forte Koup(TD)	2010	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Forte/Forte Koup(TD)	2010	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Forte/Forte Koup(TD)	2010	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Forte/Forte Koup(TD)	2010	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Forte/Forte Koup(TD)	2010	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Forte/Forte Koup(TD)	2010	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2010	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Pass.Airbag Realtime Info.
Forte/Forte Koup(TD)	2010	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Forte/Forte Koup(TD)	2010	USA Area	AC(Air Conditioning)	Version Information	
Forte/Forte Koup(TD)	2010	USA Area	AC(Air Conditioning)	Read Fault Code	
Forte/Forte Koup(TD)	2010	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Forte/Forte Koup(TD)	2010	USA Area	AC(Air Conditioning)	Read Data Stream	
Forte/Forte Koup(TD)	2010	USA Area	AC(Air Conditioning)	Actuation Test	
Forte/Forte Koup(TD)	2010	USA Area	BCM(Body Control Module)	Version Information	
Forte/Forte Koup(TD)	2010	USA Area	BCM(Body Control Module)	Read Data Stream	
Forte/Forte Koup(TD)	2010	USA Area	BCM(Body Control Module)	Actuation Test	
Forte/Forte Koup(TD)	2010	USA Area	BCM(Body Control Module)	Special Function	User Option
Forte/Forte Koup(TD)	2010	USA Area	Steering	Version Information	
Forte/Forte Koup(TD)	2010	USA Area	Steering	Read Fault Code	
Forte/Forte Koup(TD)	2010	USA Area	Steering	Clear Fault Memory	
Forte/Forte Koup(TD)	2010	USA Area	Steering	Read Data Stream	

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2010	USA Area	Steering	Special Function	ASP Calibration
Forte/Forte Koup(TD)	2010	USA Area	Steering	Special Function	EPS Type Recognition
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Version Information	
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Read Fault Code	
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Clear Fault Memory	
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Read Data Stream	
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Actuation Test	
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Special Function	ESCL Open Status Check
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Special Function	Neutralization Mode
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Special Function	SMK Status Information
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Special Function	ESCL Status Information
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Special Function	PDM Status Information
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Special Function	FOB KEY Status Information
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Special Function	Serial Communication Line Check
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2010	USA Area	Smart Key	Special Function	Smart Key Code Saving
Forte/Forte Koup(TD)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Forte/Forte Koup(TD)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Forte/Forte Koup(TD)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Forte/Forte Koup(TD)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Forte/Forte Koup(TD)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Forte/Forte Koup(TD)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Forte/Forte Koup(TD)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Forte/Forte Koup(TD)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Forte/Forte Koup(TD)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Forte/Forte Koup(TD)	2010	USA Area	IMMO(Immobilizer)	Read Data Stream	
Forte/Forte Koup(TD)	2010	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Forte/Forte Koup(TD)	2010	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Forte/Forte Koup(TD)	2010	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Forte/Forte Koup(TD)	2010	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Forte/Forte Koup(TD)	2010	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Forte/Forte Koup(TD)	2010	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Forte/Forte Koup(TD)	2010	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Version Information	
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
K900(KH)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
K900(KH)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
K900(KH)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
K900(KH)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	
K900(KH)	2017	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
K900(KH)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	
K900(KH)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
K900(KH)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
K900(KH)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K900(KH)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K900(KH)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K900(KH)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
K900(KH)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
K900(KH)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
K900(KH)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
K900(KH)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
K900(KH)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
K900(KH)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
K900(KH)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
K900(KH)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
K900(KH)	2017	USA Area	AC(Air Conditioning)	Version Information	
K900(KH)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
K900(KH)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
K900(KH)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
K900(KH)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
K900(KH)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
K900(KH)	2017	USA Area	BCM(Body Control Module)	Version Information	
K900(KH)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
K900(KH)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
K900(KH)	2017	USA Area	BCM(Body Control Module)	Special Function	HUD Calibration
K900(KH)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
K900(KH)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
K900(KH)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
K900(KH)	2017	USA Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
K900(KH)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
K900(KH)	2017	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
K900(KH)	2017	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Version Information	
K900(KH)	2017	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Read Fault Code	
K900(KH)	2017	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Clear Fault Memory	

model	year	area	system	function	subfunction
K900(KH)	2017	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Read Data Stream	
K900(KH)	2017	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Actuation Test	
K900(KH)	2017	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Special Function	EPS Type Recognition
K900(KH)	2017	USA Area	Smart Key Unit	Version Information	
K900(KH)	2017	USA Area	Smart Key Unit	Read Fault Code	
K900(KH)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
K900(KH)	2017	USA Area	Smart Key Unit	Read Data Stream	
K900(KH)	2017	USA Area	Smart Key Unit	Actuation Test	
K900(KH)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
K900(KH)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
K900(KH)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
K900(KH)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
K900(KH)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
K900(KH)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
K900(KH)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
K900(KH)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
K900(KH)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
K900(KH)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
K900(KH)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
K900(KH)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
K900(KH)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
K900(KH)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
K900(KH)	2017	USA Area	AFS(Adaptive Front Lighting System)	Version Information	
K900(KH)	2017	USA Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
K900(KH)	2017	USA Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
K900(KH)	2017	USA Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
K900(KH)	2017	USA Area	AFS(Adaptive Front Lighting System)	Actuation Test	

model	year	area	system	function	subfunction
K900(KH)	2017	USA Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
K900(KH)	2017	USA Area	AFS(Adaptive Front Lighting System)	Special Function	Calibration
K900(KH)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
K900(KH)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
K900(KH)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
K900(KH)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
K900(KH)	2017	USA Area	BSD(Blind Spot Detection)	Actuation Test	
K900(KH)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
K900(KH)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
K900(KH)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Code Reading
K900(KH)	2017	USA Area	LDWS(Lane Departure Warning System)	Version Information	
K900(KH)	2017	USA Area	LDWS(Lane Departure Warning System)	Read Fault Code	
K900(KH)	2017	USA Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
K900(KH)	2017	USA Area	LDWS(Lane Departure Warning System)	Read Data Stream	
K900(KH)	2017	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
K900(KH)	2017	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
K900(KH)	2017	USA Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Warning Actuation Test
K900(KH)	2017	USA Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
K900(KH)	2017	USA Area	SCC(Smart Cruise Control)	Version Information	
K900(KH)	2017	USA Area	SCC(Smart Cruise Control)	Read Fault Code	
K900(KH)	2017	USA Area	SCC(Smart Cruise Control)	Clear Fault Memory	
K900(KH)	2017	USA Area	SCC(Smart Cruise Control)	Read Data Stream	
K900(KH)	2017	USA Area	SCC(Smart Cruise Control)	Special Function	Radar Sensor
K900(KH)	2017	USA Area	SCC(Smart Cruise Control)	Special Function	Variant Coding
K900(KH)	2017	USA Area	E-Shifter	Version Information	
K900(KH)	2017	USA Area	E-Shifter	Read Fault Code	
K900(KH)	2017	USA Area	E-Shifter	Clear Fault Memory	
K900(KH)	2017	USA Area	E-Shifter	Read Data Stream	
K900(KH)	2017	USA Area	E-Shifter	Read Freeze Frame	
K900(KH)	2017	USA Area	E-Shifter	Actuation Test	

model	year	area	system	function	subfunction
K900(KH)	2017	USA Area	SVMS(Surround View Monitor System)	Version Information	
K900(KH)	2017	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
K900(KH)	2017	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
K900(KH)	2017	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
K900(KH)	2017	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
K900(KH)	2017	USA Area	PSB(Pre-safe Seat Belt)	Version Information	
K900(KH)	2017	USA Area	PSB(Pre-safe Seat Belt)	Read Fault Code	
K900(KH)	2017	USA Area	PSB(Pre-safe Seat Belt)	Clear Fault Memory	
K900(KH)	2017	USA Area	PSB(Pre-safe Seat Belt)	Read Data Stream	
K900(KH)	2017	USA Area	PSB(Pre-safe Seat Belt)	Actuation Test	
K900(KH)	2017	USA Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Motor Test
K900(KH)	2017	USA Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Variant Coding
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
K900(KH)	2017	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Version Information	
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
K900(KH)	2016	USA Area	TCM(Transmission Control Module)	Version Information	
K900(KH)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	
K900(KH)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
K900(KH)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	
K900(KH)	2016	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
K900(KH)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
K900(KH)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
K900(KH)	2016	USA Area	ABS(Anti-Lock Brake System)	Version Information	
K900(KH)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K900(KH)	2016	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K900(KH)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K900(KH)	2016	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
K900(KH)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K900(KH)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration
K900(KH)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
K900(KH)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
K900(KH)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
K900(KH)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
K900(KH)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
K900(KH)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
K900(KH)	2016	USA Area	AC(Air Conditioning)	Version Information	
K900(KH)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
K900(KH)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	
K900(KH)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
K900(KH)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
K900(KH)	2016	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
K900(KH)	2016	USA Area	BCM(Body Control Module)	Version Information	
K900(KH)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
K900(KH)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
K900(KH)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
K900(KH)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
K900(KH)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
K900(KH)	2016	USA Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
K900(KH)	2016	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
K900(KH)	2016	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting

model	year	area	system	function	subfunction
K900(KH)	2016	USA Area	BCM(Body Control Module)	Special Function	HUD Calibration
K900(KH)	2016	USA Area	Smart Key Unit	Version Information	
K900(KH)	2016	USA Area	Smart Key Unit	Read Fault Code	
K900(KH)	2016	USA Area	Smart Key Unit	Clear Fault Memory	
K900(KH)	2016	USA Area	Smart Key Unit	Read Data Stream	
K900(KH)	2016	USA Area	Smart Key Unit	Actuation Test	
K900(KH)	2016	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
K900(KH)	2016	USA Area	Smart Key Unit	Special Function	Neutralization Mode
K900(KH)	2016	USA Area	Smart Key Unit	Special Function	SMK Status Information
K900(KH)	2016	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
K900(KH)	2016	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
K900(KH)	2016	USA Area	Smart Key Unit	Special Function	Antenna Status Check
K900(KH)	2016	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
K900(KH)	2016	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Version Information	
K900(KH)	2016	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Read Fault Code	
K900(KH)	2016	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Clear Fault Memory	
K900(KH)	2016	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Read Data Stream	
K900(KH)	2016	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Actuation Test	
K900(KH)	2016	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Special Function	EPS Type Recognition
K900(KH)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
K900(KH)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
K900(KH)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
K900(KH)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
K900(KH)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
K900(KH)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
K900(KH)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
K900(KH)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
K900(KH)	2016	USA Area	AFS(Adaptive Front Lighting System)	Version Information	
K900(KH)	2016	USA Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
K900(KH)	2016	USA Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
K900(KH)	2016	USA Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
K900(KH)	2016	USA Area	AFS(Adaptive Front Lighting System)	Actuation Test	
K900(KH)	2016	USA Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
K900(KH)	2016	USA Area	AFS(Adaptive Front Lighting System)	Special Function	Calibration
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Version Information	
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Read Fault Code	
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Read Data Stream	
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Warning Actuation Test
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Actuation Test	
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
K900(KH)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Code Reading
K900(KH)	2016	USA Area	PSB(Pre-safe Seat Belt)	Version Information	
K900(KH)	2016	USA Area	PSB(Pre-safe Seat Belt)	Read Fault Code	
K900(KH)	2016	USA Area	PSB(Pre-safe Seat Belt)	Clear Fault Memory	
K900(KH)	2016	USA Area	PSB(Pre-safe Seat Belt)	Read Data Stream	
K900(KH)	2016	USA Area	PSB(Pre-safe Seat Belt)	Actuation Test	
K900(KH)	2016	USA Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Motor Test
K900(KH)	2016	USA Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Variant Coding
K900(KH)	2016	USA Area	SVMS(Surround View Monitor System)	Version Information	

model	year	area	system	function	subfunction
K900(KH)	2016	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
K900(KH)	2016	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
K900(KH)	2016	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
K900(KH)	2016	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
K900(KH)	2016	USA Area	CCS(Cruise Control System)	Version Information	
K900(KH)	2016	USA Area	CCS(Cruise Control System)	Read Fault Code	
K900(KH)	2016	USA Area	CCS(Cruise Control System)	Clear Fault Memory	
K900(KH)	2016	USA Area	CCS(Cruise Control System)	Read Data Stream	
K900(KH)	2016	USA Area	CCS(Cruise Control System)	Special Function	Radar Sensor
K900(KH)	2016	USA Area	CCS(Cruise Control System)	Special Function	Variant Coding
K900(KH)	2016	USA Area	E-Shifter	Version Information	
K900(KH)	2016	USA Area	E-Shifter	Read Fault Code	
K900(KH)	2016	USA Area	E-Shifter	Clear Fault Memory	
K900(KH)	2016	USA Area	E-Shifter	Read Data Stream	
K900(KH)	2016	USA Area	E-Shifter	Read Freeze Frame	
K900(KH)	2016	USA Area	E-Shifter	Actuation Test	
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
K900(KH)	2016	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Version Information	
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Read Fault Code	
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Read Data Stream	
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Actuation Test	
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
K900(KH)	2015	USA Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
K900(KH)	2015	USA Area	TCM(Transmission Control Module)	Read Fault Code	
K900(KH)	2015	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
K900(KH)	2015	USA Area	TCM(Transmission Control Module)	Read Data Stream	
K900(KH)	2015	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
K900(KH)	2015	USA Area	TCM(Transmission Control Module)	Actuation Test	
K900(KH)	2015	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
K900(KH)	2015	USA Area	ABS(Anti-Lock Brake System)	Version Information	
K900(KH)	2015	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
K900(KH)	2015	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
K900(KH)	2015	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
K900(KH)	2015	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
K900(KH)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
K900(KH)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
K900(KH)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
K900(KH)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
K900(KH)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
K900(KH)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
K900(KH)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
K900(KH)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
K900(KH)	2015	USA Area	AC(Air Conditioning)	Version Information	
K900(KH)	2015	USA Area	AC(Air Conditioning)	Read Fault Code	
K900(KH)	2015	USA Area	AC(Air Conditioning)	Clear Fault Memory	
K900(KH)	2015	USA Area	AC(Air Conditioning)	Read Data Stream	
K900(KH)	2015	USA Area	AC(Air Conditioning)	Actuation Test	
K900(KH)	2015	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
K900(KH)	2015	USA Area	BCM(Body Control Module)	Version Information	
K900(KH)	2015	USA Area	BCM(Body Control Module)	Read Fault Code	
K900(KH)	2015	USA Area	BCM(Body Control Module)	Clear Fault Memory	
K900(KH)	2015	USA Area	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
K900(KH)	2015	USA Area	BCM(Body Control Module)	Actuation Test	
K900(KH)	2015	USA Area	BCM(Body Control Module)	Special Function	User Option
K900(KH)	2015	USA Area	BCM(Body Control Module)	Special Function	Steering Limit Position Setting
K900(KH)	2015	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
K900(KH)	2015	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
K900(KH)	2015	USA Area	BCM(Body Control Module)	Special Function	HUD Calibration
K900(KH)	2015	USA Area	Smart Key Unit	Version Information	
K900(KH)	2015	USA Area	Smart Key Unit	Read Fault Code	
K900(KH)	2015	USA Area	Smart Key Unit	Clear Fault Memory	
K900(KH)	2015	USA Area	Smart Key Unit	Read Data Stream	
K900(KH)	2015	USA Area	Smart Key Unit	Actuation Test	
K900(KH)	2015	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
K900(KH)	2015	USA Area	Smart Key Unit	Special Function	Neutralization Mode
K900(KH)	2015	USA Area	Smart Key Unit	Special Function	SMK Status Information
K900(KH)	2015	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
K900(KH)	2015	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
K900(KH)	2015	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
K900(KH)	2015	USA Area	Smart Key Unit	Special Function	Antenna Status Check
K900(KH)	2015	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Version Information	
K900(KH)	2015	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Read Fault Code	
K900(KH)	2015	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Clear Fault Memory	
K900(KH)	2015	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Read Data Stream	
K900(KH)	2015	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Actuation Test	
K900(KH)	2015	USA Area	EHPS(Electronic Hydraulic Power Steering System)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
K900(KH)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
K900(KH)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
K900(KH)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
K900(KH)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
K900(KH)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
K900(KH)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
K900(KH)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
K900(KH)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
K900(KH)	2015	USA Area	AFS(Adaptive Front Lighting System)	Version Information	
K900(KH)	2015	USA Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
K900(KH)	2015	USA Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
K900(KH)	2015	USA Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
K900(KH)	2015	USA Area	AFS(Adaptive Front Lighting System)	Actuation Test	
K900(KH)	2015	USA Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
K900(KH)	2015	USA Area	AFS(Adaptive Front Lighting System)	Special Function	Calibration
K900(KH)	2015	USA Area	LDWS(Lane Departure Warning System)	Version Information	
K900(KH)	2015	USA Area	LDWS(Lane Departure Warning System)	Read Fault Code	
K900(KH)	2015	USA Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
K900(KH)	2015	USA Area	LDWS(Lane Departure Warning System)	Read Data Stream	
K900(KH)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Region Coding
K900(KH)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	LDWS Reference Point Calibration
K900(KH)	2015	USA Area	LDWS(Lane Departure Warning System)	Actuation Test	
K900(KH)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
K900(KH)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
K900(KH)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Code Reading
K900(KH)	2015	USA Area	PSB(Pre-safe Seat Belt)	Version Information	
K900(KH)	2015	USA Area	PSB(Pre-safe Seat Belt)	Read Fault Code	
K900(KH)	2015	USA Area	PSB(Pre-safe Seat Belt)	Clear Fault Memory	
K900(KH)	2015	USA Area	PSB(Pre-safe Seat Belt)	Read Data Stream	
K900(KH)	2015	USA Area	PSB(Pre-safe Seat Belt)	Actuation Test	

model	year	area	system	function	subfunction
K900(KH)	2015	USA Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Motor Test
K900(KH)	2015	USA Area	PSB(Pre-safe Seat Belt)	Special Function	PSB Variant Coding
K900(KH)	2015	USA Area	CCS(Cruise Control System)	Version Information	
K900(KH)	2015	USA Area	CCS(Cruise Control System)	Read Fault Code	
K900(KH)	2015	USA Area	CCS(Cruise Control System)	Clear Fault Memory	
K900(KH)	2015	USA Area	CCS(Cruise Control System)	Read Data Stream	
K900(KH)	2015	USA Area	CCS(Cruise Control System)	Special Function	SCC Alignment(Calibration)
K900(KH)	2015	USA Area	E-Shifter	Version Information	
K900(KH)	2015	USA Area	E-Shifter	Read Fault Code	
K900(KH)	2015	USA Area	E-Shifter	Clear Fault Memory	
K900(KH)	2015	USA Area	E-Shifter	Read Data Stream	
K900(KH)	2015	USA Area	E-Shifter	Read Freeze Frame	
K900(KH)	2015	USA Area	E-Shifter	Actuation Test	
K900(KH)	2015	USA Area	SVMS(Surround View Monitor System)	Version Information	
K900(KH)	2015	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
K900(KH)	2015	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
K900(KH)	2015	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
K900(KH)	2015	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
K900(KH)	2015	USA Area	Telematics Unit	Version Information	
K900(KH)	2015	USA Area	Telematics Unit	Read Fault Code	
K900(KH)	2015	USA Area	Telematics Unit	Clear Fault Memory	
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
K900(KH)	2015	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Niro(DE HEV)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Niro(DE HEV)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Niro(DE HEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Niro(DE HEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Niro(DE HEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Niro(DE HEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Niro(DE HEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Niro(DE HEV)	2017	USA Area	Dual Clutch Transmission(6DCT)	Version Information	
Niro(DE HEV)	2017	USA Area	Dual Clutch Transmission(6DCT)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	Dual Clutch Transmission(6DCT)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	Dual Clutch Transmission(6DCT)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	Dual Clutch Transmission(6DCT)	Actuation Test	
Niro(DE HEV)	2017	USA Area	Dual Clutch Transmission(6DCT)	Special Function	DCT Learning Function
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Radar Sensor
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel
Niro(DE HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Niro(DE HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Niro(DE HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Niro(DE HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Niro(DE HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Actuation Test	
Niro(DE HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset

model	year	area	system	function	subfunction
Niro(DE HEV)	2017	USA Area	AC(Air Conditioning)	Version Information	
Niro(DE HEV)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Niro(DE HEV)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Niro(DE HEV)	2017	USA Area	BCM(Body Control Module)	Version Information	
Niro(DE HEV)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Niro(DE HEV)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Niro(DE HEV)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Niro(DE HEV)	2017	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Niro(DE HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Niro(DE HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Niro(DE HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Niro(DE HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Niro(DE HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Niro(DE HEV)	2017	USA Area	Smart Key Unit	Version Information	
Niro(DE HEV)	2017	USA Area	Smart Key Unit	Read Fault Code	
Niro(DE HEV)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	Smart Key Unit	Read Data Stream	
Niro(DE HEV)	2017	USA Area	Smart Key Unit	Actuation Test	
Niro(DE HEV)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Niro(DE HEV)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Niro(DE HEV)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Niro(DE HEV)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Niro(DE HEV)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Niro(DE HEV)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Niro(DE HEV)	2017	USA Area	AFS(Adaptive Front Lighting System)	Version Information	
Niro(DE HEV)	2017	USA Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	AFS(Adaptive Front Lighting System)	Actuation Test	
Niro(DE HEV)	2017	USA Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Niro(DE HEV)	2017	USA Area	IMMO(Immobilizer)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	IMMO(Immobilizer)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Niro(DE HEV)	2017	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Niro(DE HEV)	2017	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Niro(DE HEV)	2017	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Niro(DE HEV)	2017	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Niro(DE HEV)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
Niro(DE HEV)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Niro(DE HEV)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Niro(DE HEV)	2017	USA Area	MFC(Multi Function Camera)	Version Information	
Niro(DE HEV)	2017	USA Area	MFC(Multi Function Camera)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	MFC(Multi Function Camera)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	MFC(Multi Function Camera)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPC Calibration

model	year	area	system	function	subfunction
Niro(DE HEV)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Niro(DE HEV)	2017	USA Area	MFC(Multi Function Camera)	Special Function	Variant Coding
Niro(DE HEV)	2017	USA Area	Amplifier	Version Information	
Niro(DE HEV)	2017	USA Area	Amplifier	Special Function	AMP Operation Test
Niro(DE HEV)	2017	USA Area	AAF(Active Air Flap)	Version Information	
Niro(DE HEV)	2017	USA Area	AAF(Active Air Flap)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	AAF(Active Air Flap)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	AAF(Active Air Flap)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	AAF(Active Air Flap)	Actuation Test	
Niro(DE HEV)	2017	USA Area	Intergrated Gateway Power Control Module	Version Information	
Niro(DE HEV)	2017	USA Area	Intergrated Gateway Power Control Module	Read Fault Code	
Niro(DE HEV)	2017	USA Area	Intergrated Gateway Power Control Module	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	Intergrated Gateway Power Control Module	Read Data Stream	
Niro(DE HEV)	2017	USA Area	Intergrated Gateway Power Control Module	Actuation Test	
Niro(DE HEV)	2017	USA Area	Intergrated Gateway Power Control Module	Special Function	User Option
Niro(DE HEV)	2017	USA Area	Intergrated Gateway Power Control Module	Special Function	Erase Network Configuration
Niro(DE HEV)	2017	USA Area	HEV Battery System	Version Information	
Niro(DE HEV)	2017	USA Area	HEV Battery System	Read Fault Code	
Niro(DE HEV)	2017	USA Area	HEV Battery System	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	HEV Battery System	Read Data Stream	
Niro(DE HEV)	2017	USA Area	HEV Battery System	Actuation Test	
Niro(DE HEV)	2017	USA Area	HEV Battery System	Special Function	SOC Calibration
Niro(DE HEV)	2017	USA Area	HEV Battery System	Special Function	Isolation Breakdown Detection Function
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Version Information	
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Actuation Test	

model	year	area	system	function	subfunction
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Special Function	Stabilization Of The Engine Clutch Hardware Transfer Torque
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Special Function	Engine Test Off
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Special Function	Engine Test On
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Special Function	Compression Pressure Test Of Engine Cylinder
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Special Function	Engine Clutch/Motor Resolver Adaptation
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Special Function	HCU Variant Coding
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Special Function	Initialization Of The Engine Clutch Inspection Line Learning And Diagnostic Information
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Special Function	LDC Activation Test
Niro(DE HEV)	2017	USA Area	HEV Control System(+LDC)	Special Function	Removal Of Air From Engine Clutch Hydraulic Pressure Line
Niro(DE HEV)	2017	USA Area	HEV Motor Control System	Version Information	
Niro(DE HEV)	2017	USA Area	HEV Motor Control System	Read Fault Code	
Niro(DE HEV)	2017	USA Area	HEV Motor Control System	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	HEV Motor Control System	Read Data Stream	
Niro(DE HEV)	2017	USA Area	HEV Motor Control System	Special Function	Electric Water Pump Control
Niro(DE HEV)	2017	USA Area	HEV Motor Control System	Special Function	Motor HSG Resolver Calibration
Niro(DE HEV)	2017	USA Area	PGS(Parking Guide System)	Version Information	
Niro(DE HEV)	2017	USA Area	PGS(Parking Guide System)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	PGS(Parking Guide System)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	PGS(Parking Guide System)	Read Data Stream	
Niro(DE HEV)	2017	USA Area	PGS(Parking Guide System)	Special Function	Camera Image Correction
Niro(DE HEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Version Information	
Niro(DE HEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Read Fault Code	
Niro(DE HEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Clear Fault Memory	
Niro(DE HEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Actuation Test	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima Hybrid(JF HEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima Hybrid(JF HEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima Hybrid(JF HEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima Hybrid(JF HEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima Hybrid(JF HEV)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima Hybrid(JF HEV)	2017	USA Area	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima Hybrid(JF HEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima Hybrid(JF HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Optima Hybrid(JF HEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Optima Hybrid(JF HEV)	2017	USA Area	AC(Air Conditioning)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima Hybrid(JF HEV)	2017	USA Area	BCM(Body Control Module)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima Hybrid(JF HEV)	2017	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima Hybrid(JF HEV)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Optima Hybrid(JF HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima Hybrid(JF HEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima Hybrid(JF HEV)	2017	USA Area	Smart Key Unit	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	Smart Key Unit	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	Smart Key Unit	Read Data Stream	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2017	USA Area	Smart Key Unit	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima Hybrid(JF HEV)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima Hybrid(JF HEV)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima Hybrid(JF HEV)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima Hybrid(JF HEV)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima Hybrid(JF HEV)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima Hybrid(JF HEV)	2017	USA Area	Tire Pressure Monitoring(Mobis-High)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	Tire Pressure Monitoring(Mobis-High)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	Tire Pressure Monitoring(Mobis-High)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	Tire Pressure Monitoring(Mobis-High)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	Tire Pressure Monitoring(Mobis-High)	Special Function	Wheel Sensor ID Writing
Optima Hybrid(JF HEV)	2017	USA Area	Tire Pressure Monitoring(Mobis-High)	Special Function	Vehicle Name Code Reading
Optima Hybrid(JF HEV)	2017	USA Area	Tire Pressure Monitoring(Mobis-High)	Special Function	Vehicle Name Code Writing
Optima Hybrid(JF HEV)	2017	USA Area	Head Lamp	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2017	USA Area	Head Lamp	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	Head Lamp	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	Head Lamp	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	Head Lamp	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	Head Lamp	Special Function	Calibration
Optima Hybrid(JF HEV)	2017	USA Area	Head Lamp	Special Function	Parameter Download
Optima Hybrid(JF HEV)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Optima Hybrid(JF HEV)	2017	USA Area	MFC(Multi Function Camera)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	MFC(Multi Function Camera)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	MFC(Multi Function Camera)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2017	USA Area	MFC(Multi Function Camera)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPC Calibration
Optima Hybrid(JF HEV)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Optima Hybrid(JF HEV)	2017	USA Area	MFC(Multi Function Camera)	Special Function	Variant Coding
Optima Hybrid(JF HEV)	2017	USA Area	Amplifier	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	Amplifier	Special Function	AMP Operation Test
Optima Hybrid(JF HEV)	2017	USA Area	AAF(Active Air Flap)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	AAF(Active Air Flap)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	AAF(Active Air Flap)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	AAF(Active Air Flap)	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	Central Gateway	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	Central Gateway	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	Central Gateway	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	Central Gateway	Special Function	Erase Network Configuration

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2017	USA Area	HEV Battery System	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	HEV Battery System	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	HEV Battery System	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	HEV Battery System	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	HEV Battery System	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	HEV Battery System	Special Function	SOC Calibration
Optima Hybrid(JF HEV)	2017	USA Area	HEV Battery System	Special Function	Isolation Breakdown Detection Function
Optima Hybrid(JF HEV)	2017	USA Area	HCU/Low DC-DC Converter	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	HCU/Low DC-DC Converter	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	HCU/Low DC-DC Converter	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	HCU/Low DC-DC Converter	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	HCU/Low DC-DC Converter	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	HCU/Low DC-DC Converter	Special Function	Engine Test Off
Optima Hybrid(JF HEV)	2017	USA Area	HCU/Low DC-DC Converter	Special Function	Engine Test On
Optima Hybrid(JF HEV)	2017	USA Area	HCU/Low DC-DC Converter	Special Function	E/C Fluid Pressure Cal.

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2017	USA Area	HCU/Low DC-DC Converter	Special Function	Compression Pressure Test Of Engine Cylinder
Optima Hybrid(JF HEV)	2017	USA Area	HCU/Low DC-DC Converter	Special Function	LDC Activation Test
Optima Hybrid(JF HEV)	2017	USA Area	HEV Motor Control System	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	HEV Motor Control System	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	HEV Motor Control System	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	HEV Motor Control System	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	HEV Motor Control System	Special Function	Electric Water Pump Control
Optima Hybrid(JF HEV)	2017	USA Area	HEV Motor Control System	Special Function	Motor HSG Resolver Calibration
Optima Hybrid(JF HEV)	2017	USA Area	SVMS(Surround View Monitor System)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Optima Hybrid(JF HEV)	2017	USA Area	PGS(Parking Guide System)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	PGS(Parking Guide System)	Read Fault Code	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2017	USA Area	PGS(Parking Guide System)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	PGS(Parking Guide System)	Read Data Stream	
Optima Hybrid(JF HEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Version Information	
Optima Hybrid(JF HEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Read Fault Code	
Optima Hybrid(JF HEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	ECM(Engine Control Module)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima Hybrid(JF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima Hybrid(JF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima Hybrid(JF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima Hybrid(JF HEV)	2016	USA Area	TCM(Transmission Control Module)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima Hybrid(JF HEV)	2016	USA Area	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima Hybrid(JF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima Hybrid(JF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Optima Hybrid(JF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Optima Hybrid(JF HEV)	2016	USA Area	AC(Air Conditioning)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima Hybrid(JF HEV)	2016	USA Area	BCM(Body Control Module)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Optima Hybrid(JF HEV)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima Hybrid(JF HEV)	2016	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima Hybrid(JF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima Hybrid(JF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima Hybrid(JF HEV)	2016	USA Area	Smart Key Unit	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	Smart Key Unit	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	Smart Key Unit	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	Smart Key Unit	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	Smart Key Unit	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima Hybrid(JF HEV)	2016	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima Hybrid(JF HEV)	2016	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima Hybrid(JF HEV)	2016	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima Hybrid(JF HEV)	2016	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima Hybrid(JF HEV)	2016	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima Hybrid(JF HEV)	2016	USA Area	Tire Pressure Monitoring(Mobis-High)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	Tire Pressure Monitoring(Mobis-High)	Read Fault Code	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2016	USA Area	Tire Pressure Monitoring(Mobis-High)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	Tire Pressure Monitoring(Mobis-High)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	Tire Pressure Monitoring(Mobis-High)	Special Function	Wheel Sensor ID Writing
Optima Hybrid(JF HEV)	2016	USA Area	Tire Pressure Monitoring(Mobis-High)	Special Function	Vehicle Name Code Reading
Optima Hybrid(JF HEV)	2016	USA Area	Tire Pressure Monitoring(Mobis-High)	Special Function	Vehicle Name Code Writing
Optima Hybrid(JF HEV)	2016	USA Area	Head Lamp	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	Head Lamp	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	Head Lamp	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	Head Lamp	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	Head Lamp	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	Head Lamp	Special Function	Calibration
Optima Hybrid(JF HEV)	2016	USA Area	Head Lamp	Special Function	Parameter Download
Optima Hybrid(JF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Optima Hybrid(JF HEV)	2016	USA Area	MFC(Multi Function Camera)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	MFC(Multi Function Camera)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	MFC(Multi Function Camera)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	MFC(Multi Function Camera)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	MFC(Multi Function Camera)	Special Function	SPC Calibration
Optima Hybrid(JF HEV)	2016	USA Area	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Optima Hybrid(JF HEV)	2016	USA Area	MFC(Multi Function Camera)	Special Function	Variant Coding
Optima Hybrid(JF HEV)	2016	USA Area	Amplifier	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	Amplifier	Special Function	AMP Operation Test
Optima Hybrid(JF HEV)	2016	USA Area	AAF(Active Air Flap)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	AAF(Active Air Flap)	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	AAF(Active Air Flap)	Read Fault Code	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2016	USA Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	AAF(Active Air Flap)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	Central Gateway	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	Central Gateway	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	Central Gateway	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	Central Gateway	Special Function	Erase Network Configuration
Optima Hybrid(JF HEV)	2016	USA Area	HEV Battery System	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	HEV Battery System	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	HEV Battery System	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	HEV Battery System	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	HEV Battery System	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	HEV Battery System	Special Function	SOC Calibration
Optima Hybrid(JF HEV)	2016	USA Area	HEV Battery System	Special Function	Isolation Breakdown Detection Function
Optima Hybrid(JF HEV)	2016	USA Area	HCU/Low DC-DC Converter	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	HCU/Low DC-DC Converter	Read Fault Code	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2016	USA Area	HCU/Low DC-DC Converter	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	HCU/Low DC-DC Converter	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	HCU/Low DC-DC Converter	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	HCU/Low DC-DC Converter	Special Function	Engine Test Off
Optima Hybrid(JF HEV)	2016	USA Area	HCU/Low DC-DC Converter	Special Function	Engine Test On
Optima Hybrid(JF HEV)	2016	USA Area	HCU/Low DC-DC Converter	Special Function	E/C Fluid Pressure Cal.
Optima Hybrid(JF HEV)	2016	USA Area	HCU/Low DC-DC Converter	Special Function	Compression Pressure Test Of Engine Cylinder
Optima Hybrid(JF HEV)	2016	USA Area	HCU/Low DC-DC Converter	Special Function	LDC Activation Test
Optima Hybrid(JF HEV)	2016	USA Area	HEV Motor Control System	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	HEV Motor Control System	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	HEV Motor Control System	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	HEV Motor Control System	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	HEV Motor Control System	Special Function	Electric Water Pump Control
Optima Hybrid(JF HEV)	2016	USA Area	HEV Motor Control System	Special Function	Motor HSG Resolver Calibration
Optima Hybrid(JF HEV)	2016	USA Area	SVMS(Surround View Monitor System)	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(JF HEV)	2016	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Optima Hybrid(JF HEV)	2016	USA Area	PGS(Parking Guide System)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	PGS(Parking Guide System)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	PGS(Parking Guide System)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	PGS(Parking Guide System)	Read Data Stream	
Optima Hybrid(JF HEV)	2016	USA Area	VESS(Virtual Engine Sound System)	Version Information	
Optima Hybrid(JF HEV)	2016	USA Area	VESS(Virtual Engine Sound System)	Read Fault Code	
Optima Hybrid(JF HEV)	2016	USA Area	VESS(Virtual Engine Sound System)	Clear Fault Memory	
Optima Hybrid(JF HEV)	2016	USA Area	VESS(Virtual Engine Sound System)	Actuation Test	
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima Hybrid(TF HEV)	2016	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima Hybrid(TF HEV)	2016	USA Area	TCM(Transmission Control Module)	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2016	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(Before Change)
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(After Change)
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Fluid Circulation Mode
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Optima Hybrid(TF HEV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima Hybrid(TF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Optima Hybrid(TF HEV)	2016	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Optima Hybrid(TF HEV)	2016	USA Area	AC(Air Conditioning)	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
Optima Hybrid(TF HEV)	2016	USA Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima Hybrid(TF HEV)	2016	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima Hybrid(TF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima Hybrid(TF HEV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Actuation Test	
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima Hybrid(TF HEV)	2016	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima Hybrid(TF HEV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima Hybrid(TF HEV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima Hybrid(TF HEV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima Hybrid(TF HEV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima Hybrid(TF HEV)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima Hybrid(TF HEV)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima Hybrid(TF HEV)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima Hybrid(TF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Actuation Test	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Optima Hybrid(TF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
Optima Hybrid(TF HEV)	2016	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Code Reading
Optima Hybrid(TF HEV)	2016	USA Area	AAF(Active Air Flap)	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	AAF(Active Air Flap)	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	AAF(Active Air Flap)	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	AAF(Active Air Flap)	Actuation Test	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Battery System	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Battery System	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Battery System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Battery System	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Battery System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Battery System	Actuation Test	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Battery System	Special Function	Battery Inspection

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2016	USA Area	HEV Control System	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Control System	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Control System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Control System	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Control System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Optima Hybrid(TF HEV)	2016	USA Area	HEV Control System	Special Function	Engine Test On
Optima Hybrid(TF HEV)	2016	USA Area	HEV Control System	Special Function	Engine Test Off
Optima Hybrid(TF HEV)	2016	USA Area	HEV Control System	Special Function	LDC Activation Test
Optima Hybrid(TF HEV)	2016	USA Area	HEV Motor Control System	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Motor Control System	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Motor Control System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Motor Control System	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Motor Control System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2016	USA Area	HEV Motor Control System	Actuation Test	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2016	USA Area	HEV Motor Control System	Special Function	Motor HSG Resolver Calibration
Optima Hybrid(TF HEV)	2016	USA Area	HEV Motor Control System	Special Function	Electric Water Pump Control
Optima Hybrid(TF HEV)	2016	USA Area	Low DC/DC Converter	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	Low DC/DC Converter	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	Low DC/DC Converter	Clear Fault Memory	
Optima Hybrid(TF HEV)	2016	USA Area	Low DC/DC Converter	Read Data Stream	
Optima Hybrid(TF HEV)	2016	USA Area	Low DC/DC Converter	Read Freeze Frame	
Optima Hybrid(TF HEV)	2016	USA Area	Telematics Unit	Version Information	
Optima Hybrid(TF HEV)	2016	USA Area	Telematics Unit	Read Fault Code	
Optima Hybrid(TF HEV)	2016	USA Area	Telematics Unit	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima Hybrid(TF HEV)	2015	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima Hybrid(TF HEV)	2015	USA Area	TCM(Transmission Control Module)	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2015	USA Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2015	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(Before Change)
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(After Change)
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Fluid Circulation Mode
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima Hybrid(TF HEV)	2015	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Optima Hybrid(TF HEV)	2015	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Optima Hybrid(TF HEV)	2015	USA Area	AC(Air Conditioning)	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	AC(Air Conditioning)	Actuation Test	
Optima Hybrid(TF HEV)	2015	USA Area	BCM(Body Control Module)	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2015	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	BCM(Body Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2015	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima Hybrid(TF HEV)	2015	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Actuation Test	
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2015	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima Hybrid(TF HEV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima Hybrid(TF HEV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima Hybrid(TF HEV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima Hybrid(TF HEV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima Hybrid(TF HEV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima Hybrid(TF HEV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima Hybrid(TF HEV)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima Hybrid(TF HEV)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima Hybrid(TF HEV)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima Hybrid(TF HEV)	2015	USA Area	BSD(Blind Spot Detection)	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Optima Hybrid(TF HEV)	2015	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Optima Hybrid(TF HEV)	2015	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2015	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Code Reading
Optima Hybrid(TF HEV)	2015	USA Area	Low DC/DC Converter	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	Low DC/DC Converter	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	Low DC/DC Converter	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	Low DC/DC Converter	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	Low DC/DC Converter	Read Freeze Frame	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Battery System	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Battery System	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Battery System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Battery System	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Battery System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Battery System	Actuation Test	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Battery System	Special Function	Battery Inspection
Optima Hybrid(TF HEV)	2015	USA Area	HEV Control System	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Control System	Read Fault Code	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2015	USA Area	HEV Control System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Control System	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Control System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Optima Hybrid(TF HEV)	2015	USA Area	HEV Control System	Special Function	Engine Test On
Optima Hybrid(TF HEV)	2015	USA Area	HEV Control System	Special Function	Engine Test Off
Optima Hybrid(TF HEV)	2015	USA Area	HEV Control System	Special Function	LDC Activation Test
Optima Hybrid(TF HEV)	2015	USA Area	HEV Motor System	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Motor System	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Motor System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Motor System	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Motor System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Motor System	Actuation Test	
Optima Hybrid(TF HEV)	2015	USA Area	HEV Motor System	Special Function	Motor HSG Resolver Calibration
Optima Hybrid(TF HEV)	2015	USA Area	HEV Motor System	Special Function	Electric Water Pump Control

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2015	USA Area	AAF(Active Air Flap)	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	AAF(Active Air Flap)	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2015	USA Area	AAF(Active Air Flap)	Read Data Stream	
Optima Hybrid(TF HEV)	2015	USA Area	AAF(Active Air Flap)	Actuation Test	
Optima Hybrid(TF HEV)	2015	USA Area	Telematics Unit	Version Information	
Optima Hybrid(TF HEV)	2015	USA Area	Telematics Unit	Read Fault Code	
Optima Hybrid(TF HEV)	2015	USA Area	Telematics Unit	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima Hybrid(TF HEV)	2014	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima Hybrid(TF HEV)	2014	USA Area	TCM(Transmission Control Module)	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2014	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2014	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(Before Change)
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(After Change)
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Fluid Circulation Mode
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Optima Hybrid(TF HEV)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima Hybrid(TF HEV)	2014	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2014	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Optima Hybrid(TF HEV)	2014	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Optima Hybrid(TF HEV)	2014	USA Area	AC(Air Conditioning)	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	AC(Air Conditioning)	Actuation Test	
Optima Hybrid(TF HEV)	2014	USA Area	BCM(Body Control Module)	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2014	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima Hybrid(TF HEV)	2014	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Actuation Test	
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima Hybrid(TF HEV)	2014	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima Hybrid(TF HEV)	2014	USA Area	MDPS(Motor Driven Power Steering)	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima Hybrid(TF HEV)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima Hybrid(TF HEV)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima Hybrid(TF HEV)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima Hybrid(TF HEV)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima Hybrid(TF HEV)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima Hybrid(TF HEV)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima Hybrid(TF HEV)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima Hybrid(TF HEV)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima Hybrid(TF HEV)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima Hybrid(TF HEV)	2014	USA Area	BSD(Blind Spot Detection)	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Optima Hybrid(TF HEV)	2014	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Optima Hybrid(TF HEV)	2014	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
Optima Hybrid(TF HEV)	2014	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Code Reading
Optima Hybrid(TF HEV)	2014	USA Area	Low DC/DC Converter	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2014	USA Area	Low DC/DC Converter	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	Low DC/DC Converter	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	Low DC/DC Converter	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	Low DC/DC Converter	Read Freeze Frame	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Battery System	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Battery System	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Battery System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Battery System	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Battery System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Battery System	Actuation Test	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Battery System	Special Function	Battery Inspection
Optima Hybrid(TF HEV)	2014	USA Area	HEV Control System	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Control System	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Control System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Control System	Read Data Stream	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2014	USA Area	HEV Control System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Optima Hybrid(TF HEV)	2014	USA Area	HEV Control System	Special Function	Engine Test On
Optima Hybrid(TF HEV)	2014	USA Area	HEV Control System	Special Function	Engine Test Off
Optima Hybrid(TF HEV)	2014	USA Area	HEV Control System	Special Function	LDC Activation Test
Optima Hybrid(TF HEV)	2014	USA Area	HEV Motor System	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Motor System	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Motor System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Motor System	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Motor System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Motor System	Actuation Test	
Optima Hybrid(TF HEV)	2014	USA Area	HEV Motor System	Special Function	Motor HSG Resolver Calibration
Optima Hybrid(TF HEV)	2014	USA Area	HEV Motor System	Special Function	Electric Water Pump Control
Optima Hybrid(TF HEV)	2014	USA Area	AAF(Active Air Flap)	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	AAF(Active Air Flap)	Read Fault Code	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2014	USA Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2014	USA Area	AAF(Active Air Flap)	Read Data Stream	
Optima Hybrid(TF HEV)	2014	USA Area	AAF(Active Air Flap)	Actuation Test	
Optima Hybrid(TF HEV)	2014	USA Area	Telematics Unit	Version Information	
Optima Hybrid(TF HEV)	2014	USA Area	Telematics Unit	Read Fault Code	
Optima Hybrid(TF HEV)	2014	USA Area	Telematics Unit	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima Hybrid(TF HEV)	2013	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima Hybrid(TF HEV)	2013	USA Area	TCM(Transmission Control Module)	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2013	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2013	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima Hybrid(TF HEV)	2013	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2013	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima Hybrid(TF HEV)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Optima Hybrid(TF HEV)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima Hybrid(TF HEV)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dhc Only)
Optima Hybrid(TF HEV)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima Hybrid(TF HEV)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima Hybrid(TF HEV)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	AHB Variant Coding
Optima Hybrid(TF HEV)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Optima Hybrid(TF HEV)	2013	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Optima Hybrid(TF HEV)	2013	USA Area	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2013	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	AC(Air Conditioning)	Actuation Test	
Optima Hybrid(TF HEV)	2013	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima Hybrid(TF HEV)	2013	USA Area	BCM(Body Control Module)	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	BCM(Body Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2013	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima Hybrid(TF HEV)	2013	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima Hybrid(TF HEV)	2013	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2013	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2013	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima Hybrid(TF HEV)	2013	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Actuation Test	
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Special Function	PDM Status Information
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Special Function	User Option
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima Hybrid(TF HEV)	2013	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima Hybrid(TF HEV)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima Hybrid(TF HEV)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima Hybrid(TF HEV)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima Hybrid(TF HEV)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima Hybrid(TF HEV)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima Hybrid(TF HEV)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima Hybrid(TF HEV)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima Hybrid(TF HEV)	2013	USA Area	HEV Battery System	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Battery System	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Battery System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Battery System	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Battery System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Battery System	Actuation Test	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Battery System	Special Function	Battery Inspection
Optima Hybrid(TF HEV)	2013	USA Area	HEV Control System	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Control System	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Control System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Control System	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Control System	Read Freeze Frame	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2013	USA Area	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Optima Hybrid(TF HEV)	2013	USA Area	HEV Control System	Special Function	Engine Test On
Optima Hybrid(TF HEV)	2013	USA Area	HEV Control System	Special Function	Engine Test Off
Optima Hybrid(TF HEV)	2013	USA Area	HEV Control System	Special Function	LDC Activation Test
Optima Hybrid(TF HEV)	2013	USA Area	HEV Motor System	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Motor System	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Motor System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Motor System	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Motor System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Motor System	Actuation Test	
Optima Hybrid(TF HEV)	2013	USA Area	HEV Motor System	Special Function	Motor HSG Resolver Calibration
Optima Hybrid(TF HEV)	2013	USA Area	HEV Motor System	Special Function	Electric Water Pump Control
Optima Hybrid(TF HEV)	2013	USA Area	Low DC/DC Converter	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	Low DC/DC Converter	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	Low DC/DC Converter	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2013	USA Area	Low DC/DC Converter	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	Low DC/DC Converter	Read Freeze Frame	
Optima Hybrid(TF HEV)	2013	USA Area	AAF(Active Air Flap)	Version Information	
Optima Hybrid(TF HEV)	2013	USA Area	AAF(Active Air Flap)	Read Fault Code	
Optima Hybrid(TF HEV)	2013	USA Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2013	USA Area	AAF(Active Air Flap)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	AAF(Active Air Flap)	Actuation Test	
Optima Hybrid(TF HEV)	2013	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima Hybrid(TF HEV)	2013	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima Hybrid(TF HEV)	2013	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima Hybrid(TF HEV)	2013	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima Hybrid(TF HEV)	2013	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima Hybrid(TF HEV)	2013	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima Hybrid(TF HEV)	2013	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima Hybrid(TF HEV)	2012	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima Hybrid(TF HEV)	2012	USA Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2012	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2012	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2012	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima Hybrid(TF HEV)	2012	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima Hybrid(TF HEV)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Optima Hybrid(TF HEV)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima Hybrid(TF HEV)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima Hybrid(TF HEV)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima Hybrid(TF HEV)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	AHB Variant Coding
Optima Hybrid(TF HEV)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Optima Hybrid(TF HEV)	2012	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset
Optima Hybrid(TF HEV)	2012	USA Area	AC(Air Conditioning)	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	AC(Air Conditioning)	Actuation Test	
Optima Hybrid(TF HEV)	2012	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima Hybrid(TF HEV)	2012	USA Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2012	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	BCM(Body Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2012	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima Hybrid(TF HEV)	2012	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima Hybrid(TF HEV)	2012	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima Hybrid(TF HEV)	2012	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Actuation Test	
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Special Function	PDM Status Information
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Special Function	User Option
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima Hybrid(TF HEV)	2012	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima Hybrid(TF HEV)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima Hybrid(TF HEV)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima Hybrid(TF HEV)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima Hybrid(TF HEV)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima Hybrid(TF HEV)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima Hybrid(TF HEV)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima Hybrid(TF HEV)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima Hybrid(TF HEV)	2012	USA Area	HEV Battery System	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Battery System	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Battery System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Battery System	Read Data Stream	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2012	USA Area	HEV Battery System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Battery System	Actuation Test	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Battery System	Special Function	Battery Inspection
Optima Hybrid(TF HEV)	2012	USA Area	HEV Control System	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Control System	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Control System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Control System	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Control System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Optima Hybrid(TF HEV)	2012	USA Area	HEV Control System	Special Function	Engine Test On
Optima Hybrid(TF HEV)	2012	USA Area	HEV Control System	Special Function	Engine Test Off
Optima Hybrid(TF HEV)	2012	USA Area	HEV Control System	Special Function	LDC Activation Test
Optima Hybrid(TF HEV)	2012	USA Area	HEV Motor System	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Motor System	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Motor System	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2012	USA Area	HEV Motor System	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Motor System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Motor System	Actuation Test	
Optima Hybrid(TF HEV)	2012	USA Area	HEV Motor System	Special Function	Motor HSG Resolver Calibration
Optima Hybrid(TF HEV)	2012	USA Area	HEV Motor System	Special Function	Electric Water Pump Control
Optima Hybrid(TF HEV)	2012	USA Area	AAF(Active Air Flap)	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	AAF(Active Air Flap)	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	AAF(Active Air Flap)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	AAF(Active Air Flap)	Actuation Test	
Optima Hybrid(TF HEV)	2012	USA Area	Low DC/DC Converter	Version Information	
Optima Hybrid(TF HEV)	2012	USA Area	Low DC/DC Converter	Read Fault Code	
Optima Hybrid(TF HEV)	2012	USA Area	Low DC/DC Converter	Clear Fault Memory	
Optima Hybrid(TF HEV)	2012	USA Area	Low DC/DC Converter	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	Low DC/DC Converter	Read Freeze Frame	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2012	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima Hybrid(TF HEV)	2012	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima Hybrid(TF HEV)	2012	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima Hybrid(TF HEV)	2012	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima Hybrid(TF HEV)	2012	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima Hybrid(TF HEV)	2012	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima Hybrid(TF HEV)	2012	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima Hybrid(TF HEV)	2011	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima Hybrid(TF HEV)	2011	USA Area	TCM(Transmission Control Module)	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2011	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2011	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima Hybrid(TF HEV)	2011	USA Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2011	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima Hybrid(TF HEV)	2011	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Optima Hybrid(TF HEV)	2011	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima Hybrid(TF HEV)	2011	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dhc Only)
Optima Hybrid(TF HEV)	2011	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima Hybrid(TF HEV)	2011	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration
Optima Hybrid(TF HEV)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Optima Hybrid(TF HEV)	2011	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	WCS Reset

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2011	USA Area	AC(Air Conditioning)	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	AC(Air Conditioning)	Actuation Test	
Optima Hybrid(TF HEV)	2011	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima Hybrid(TF HEV)	2011	USA Area	BCM(Body Control Module)	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	BCM(Body Control Module)	Actuation Test	
Optima Hybrid(TF HEV)	2011	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima Hybrid(TF HEV)	2011	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima Hybrid(TF HEV)	2011	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2011	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Optima Hybrid(TF HEV)	2011	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima Hybrid(TF HEV)	2011	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Actuation Test	
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Special Function	PDM Status Information
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Special Function	User Option

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima Hybrid(TF HEV)	2011	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima Hybrid(TF HEV)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima Hybrid(TF HEV)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima Hybrid(TF HEV)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima Hybrid(TF HEV)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima Hybrid(TF HEV)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima Hybrid(TF HEV)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima Hybrid(TF HEV)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima Hybrid(TF HEV)	2011	USA Area	HEV Battery System	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Battery System	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Battery System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Battery System	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Battery System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Battery System	Actuation Test	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Battery System	Special Function	Battery Inspection
Optima Hybrid(TF HEV)	2011	USA Area	HEV Control System	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Control System	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Control System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Control System	Read Data Stream	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2011	USA Area	HEV Control System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Control System	Special Function	E/C Fluid Pressure Cal.
Optima Hybrid(TF HEV)	2011	USA Area	HEV Control System	Special Function	Engine Test On
Optima Hybrid(TF HEV)	2011	USA Area	HEV Control System	Special Function	Engine Test Off
Optima Hybrid(TF HEV)	2011	USA Area	HEV Control System	Special Function	LDC Activation Test
Optima Hybrid(TF HEV)	2011	USA Area	HEV Motor System	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Motor System	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Motor System	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Motor System	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Motor System	Read Freeze Frame	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Motor System	Actuation Test	
Optima Hybrid(TF HEV)	2011	USA Area	HEV Motor System	Special Function	Motor HSG Resolver Calibration
Optima Hybrid(TF HEV)	2011	USA Area	HEV Motor System	Special Function	Electric Water Pump Control
Optima Hybrid(TF HEV)	2011	USA Area	AAF(Active Air Flap)	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	AAF(Active Air Flap)	Read Fault Code	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2011	USA Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	AAF(Active Air Flap)	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	AAF(Active Air Flap)	Actuation Test	
Optima Hybrid(TF HEV)	2011	USA Area	Low DC/DC Converter	Version Information	
Optima Hybrid(TF HEV)	2011	USA Area	Low DC/DC Converter	Read Fault Code	
Optima Hybrid(TF HEV)	2011	USA Area	Low DC/DC Converter	Clear Fault Memory	
Optima Hybrid(TF HEV)	2011	USA Area	Low DC/DC Converter	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	Low DC/DC Converter	Read Freeze Frame	
Optima Hybrid(TF HEV)	2011	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima Hybrid(TF HEV)	2011	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima Hybrid(TF HEV)	2011	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima Hybrid(TF HEV)	2011	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima Hybrid(TF HEV)	2011	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima Hybrid(TF HEV)	2011	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima Hybrid(TF HEV)	2011	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Optima Hybrid(TF HEV)	2011	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima PHEV(JF PHEV)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima PHEV(JF PHEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima PHEV(JF PHEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima PHEV(JF PHEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration Reset
Optima PHEV(JF PHEV)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima PHEV(JF PHEV)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Optima PHEV(JF PHEV)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima PHEV(JF PHEV)	2017	USA Area	TCM(Transmission Control Module)	Special Function	EOP Control Adaptation
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Radar Sensor Alignment(SCC/AEB)
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel Sensor(PTS)Calibration

model	year	area	system	function	subfunction
Optima PHEV(JF PHEV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Optima PHEV(JF PHEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	ACU/SRSCM Variant Coding
Optima PHEV(JF PHEV)	2017	USA Area	SRS(Supplemental Inflatable Restraint System)	Special Function	Body Sensor Reset
Optima PHEV(JF PHEV)	2017	USA Area	AC(Air Conditioning)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima PHEV(JF PHEV)	2017	USA Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima PHEV(JF PHEV)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Optima PHEV(JF PHEV)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima PHEV(JF PHEV)	2017	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima PHEV(JF PHEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima PHEV(JF PHEV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima PHEV(JF PHEV)	2017	USA Area	Smart Key Unit	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
Optima PHEV(JF PHEV)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	Smart Key Unit	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	Smart Key Unit	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima PHEV(JF PHEV)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima PHEV(JF PHEV)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima PHEV(JF PHEV)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima PHEV(JF PHEV)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima PHEV(JF PHEV)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima PHEV(JF PHEV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima PHEV(JF PHEV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Optima PHEV(JF PHEV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima PHEV(JF PHEV)	2017	USA Area	Head Lamp	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	Head Lamp	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	Head Lamp	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	Head Lamp	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	Head Lamp	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	Head Lamp	Special Function	Calibration
Optima PHEV(JF PHEV)	2017	USA Area	Head Lamp	Special Function	Parameter Download
Optima PHEV(JF PHEV)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Optima PHEV(JF PHEV)	2017	USA Area	MFC(Multi Function Camera)	Version Information	

model	year	area	system	function	subfunction
Optima PHEV(JF PHEV)	2017	USA Area	MFC(Multi Function Camera)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	MFC(Multi Function Camera)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	MFC(Multi Function Camera)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPC Calibration
Optima PHEV(JF PHEV)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Optima PHEV(JF PHEV)	2017	USA Area	MFC(Multi Function Camera)	Special Function	Variant Coding
Optima PHEV(JF PHEV)	2017	USA Area	Amplifier	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	Amplifier	Special Function	AMP Operation Test
Optima PHEV(JF PHEV)	2017	USA Area	AAF(Active Air Flap)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	AAF(Active Air Flap)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	AAF(Active Air Flap)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	AAF(Active Air Flap)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	AAF(Active Air Flap)	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	Central Gateway	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	Central Gateway	Read Fault Code	

model	year	area	system	function	subfunction
Optima PHEV(JF PHEV)	2017	USA Area	Central Gateway	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	Central Gateway	Special Function	Erase Network Configuration
Optima PHEV(JF PHEV)	2017	USA Area	HEV Battery System	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	HEV Battery System	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	HEV Battery System	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	HEV Battery System	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	HEV Battery System	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	HEV Battery System	Special Function	SOC Calibration
Optima PHEV(JF PHEV)	2017	USA Area	HEV Battery System	Special Function	Isolation Breakdown Detection Function
Optima PHEV(JF PHEV)	2017	USA Area	HCU/Low DC-DC Converter	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	HCU/Low DC-DC Converter	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	HCU/Low DC-DC Converter	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	HCU/Low DC-DC Converter	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	HCU/Low DC-DC Converter	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	HCU/Low DC-DC Converter	Special Function	Engine Test Off

model	year	area	system	function	subfunction
Optima PHEV(JF PHEV)	2017	USA Area	HCU/Low DC-DC Converter	Special Function	Engine Test On
Optima PHEV(JF PHEV)	2017	USA Area	HCU/Low DC-DC Converter	Special Function	E/C Fluid Pressure Cal.
Optima PHEV(JF PHEV)	2017	USA Area	HCU/Low DC-DC Converter	Special Function	Compression Pressure Test Of Engine Cylinder
Optima PHEV(JF PHEV)	2017	USA Area	HCU/Low DC-DC Converter	Special Function	LDC Activation Test
Optima PHEV(JF PHEV)	2017	USA Area	HEV Motor Control System	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	HEV Motor Control System	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	HEV Motor Control System	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	HEV Motor Control System	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	HEV Motor Control System	Special Function	Electric Water Pump Control
Optima PHEV(JF PHEV)	2017	USA Area	HEV Motor Control System	Special Function	Motor HSG Resolver Calibration
Optima PHEV(JF PHEV)	2017	USA Area	On Board Charger	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	On Board Charger	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	On Board Charger	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	On Board Charger	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	On Board Charger	Special Function	Variant Coding For Charging Port

model	year	area	system	function	subfunction
Optima PHEV(JF PHEV)	2017	USA Area	PGS(Parking Guide System)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	PGS(Parking Guide System)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	PGS(Parking Guide System)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	PGS(Parking Guide System)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	SVMS(Surround View Monitor System)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Optima PHEV(JF PHEV)	2017	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Optima PHEV(JF PHEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Version Information	
Optima PHEV(JF PHEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Read Fault Code	
Optima PHEV(JF PHEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Clear Fault Memory	
Optima PHEV(JF PHEV)	2017	USA Area	VESS(Virtual Engine Sound System)	Actuation Test	
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Optima(JF)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(JF)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(JF)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(JF)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(JF)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(JF)	2017	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(JF)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(JF)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(JF)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(JF)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(JF)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(JF)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(JF)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima(JF)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(JF)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima(JF)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(JF)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Optima(JF)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima(JF)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(JF)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(JF)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(JF)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(JF)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Optima(JF)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Optima(JF)	2017	USA Area	AC(Air Conditioning)	Version Information	
Optima(JF)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(JF)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(JF)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(JF)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(JF)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima(JF)	2017	USA Area	BCM(Body Control Module)	Version Information	
Optima(JF)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima(JF)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(JF)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(JF)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(JF)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(JF)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Optima(JF)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(JF)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(JF)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(JF)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(JF)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Optima(JF)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(JF)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(JF)	2017	USA Area	Smart Key Unit	Version Information	
Optima(JF)	2017	USA Area	Smart Key Unit	Read Fault Code	
Optima(JF)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Optima(JF)	2017	USA Area	Smart Key Unit	Read Data Stream	
Optima(JF)	2017	USA Area	Smart Key Unit	Actuation Test	
Optima(JF)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(JF)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
Optima(JF)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima(JF)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(JF)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(JF)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(JF)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(JF)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(JF)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(JF)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(JF)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(JF)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(JF)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(JF)	2017	USA Area	IMMO(Immobilizer)	Read Fault Code	
Optima(JF)	2017	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Optima(JF)	2017	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(JF)	2017	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(JF)	2017	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(JF)	2017	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(JF)	2017	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(JF)	2017	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(JF)	2017	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Version Information	
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Optima(JF)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(JF)	2016	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(JF)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(JF)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(JF)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(JF)	2016	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(JF)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(JF)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(JF)	2016	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(JF)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(JF)	2016	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(JF)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(JF)	2016	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(JF)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima(JF)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(JF)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Optima(JF)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima(JF)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima(JF)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(JF)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(JF)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(JF)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(JF)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Optima(JF)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Optima(JF)	2016	USA Area	AC(Air Conditioning)	Version Information	
Optima(JF)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(JF)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(JF)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(JF)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(JF)	2016	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima(JF)	2016	USA Area	BCM(Body Control Module)	Version Information	
Optima(JF)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima(JF)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(JF)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(JF)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(JF)	2016	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Optima(JF)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(JF)	2016	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(JF)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(JF)	2016	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(JF)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(JF)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Optima(JF)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(JF)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(JF)	2016	USA Area	Smart Key Unit	Version Information	
Optima(JF)	2016	USA Area	Smart Key Unit	Read Fault Code	
Optima(JF)	2016	USA Area	Smart Key Unit	Clear Fault Memory	
Optima(JF)	2016	USA Area	Smart Key Unit	Read Data Stream	
Optima(JF)	2016	USA Area	Smart Key Unit	Actuation Test	
Optima(JF)	2016	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(JF)	2016	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(JF)	2016	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima(JF)	2016	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(JF)	2016	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(JF)	2016	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(JF)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(JF)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Optima(JF)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(JF)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(JF)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(JF)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(JF)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(JF)	2016	USA Area	IMMO(Immobilizer)	Read Fault Code	
Optima(JF)	2016	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Optima(JF)	2016	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(JF)	2016	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(JF)	2016	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(JF)	2016	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(JF)	2016	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(JF)	2016	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(JF)	2016	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(JFA)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(JFA)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(JFA)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(JFA)	2017	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(JFA)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Optima(JFA)	2017	USA Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Optima(JFA)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(JFA)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(JFA)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(JFA)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(JFA)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima(JFA)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(JFA)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Optima(JFA)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima(JFA)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima(JFA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(JFA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(JFA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(JFA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(JFA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Optima(JFA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Optima(JFA)	2017	USA Area	AC(Air Conditioning)	Version Information	
Optima(JFA)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(JFA)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(JFA)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(JFA)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima(JFA)	2017	USA Area	BCM(Body Control Module)	Version Information	
Optima(JFA)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima(JFA)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(JFA)	2017	USA Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Optima(JFA)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Optima(JFA)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(JFA)	2017	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(JFA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(JFA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(JFA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(JFA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Optima(JFA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(JFA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(JFA)	2017	USA Area	Smart Key Unit	Version Information	
Optima(JFA)	2017	USA Area	Smart Key Unit	Read Fault Code	
Optima(JFA)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Optima(JFA)	2017	USA Area	Smart Key Unit	Read Data Stream	
Optima(JFA)	2017	USA Area	Smart Key Unit	Actuation Test	
Optima(JFA)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(JFA)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(JFA)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima(JFA)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(JFA)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(JFA)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(JFA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(JFA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(JFA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(JFA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(JFA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(JFA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(JFA)	2017	USA Area	Head Lamp	Version Information	
Optima(JFA)	2017	USA Area	Head Lamp	Read Fault Code	

model	year	area	system	function	subfunction
Optima(JFA)	2017	USA Area	Head Lamp	Clear Fault Memory	
Optima(JFA)	2017	USA Area	Head Lamp	Read Data Stream	
Optima(JFA)	2017	USA Area	Head Lamp	Actuation Test	
Optima(JFA)	2017	USA Area	Head Lamp	Special Function	Parameter Download
Optima(JFA)	2017	USA Area	Head Lamp	Special Function	Headlamp Leveling
Optima(JFA)	2017	USA Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Optima(JFA)	2017	USA Area	IMMO(Immobilizer)	Read Fault Code	
Optima(JFA)	2017	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(JFA)	2017	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(JFA)	2017	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(JFA)	2017	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(JFA)	2017	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(JFA)	2017	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(JFA)	2017	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(JFA)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
Optima(JFA)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Optima(JFA)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Optima(JFA)	2017	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Optima(JFA)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Optima(JFA)	2017	USA Area	MFC(Multi Function Camera)	Version Information	
Optima(JFA)	2017	USA Area	MFC(Multi Function Camera)	Read Fault Code	
Optima(JFA)	2017	USA Area	MFC(Multi Function Camera)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	MFC(Multi Function Camera)	Read Data Stream	
Optima(JFA)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPC Calibration
Optima(JFA)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Optima(JFA)	2017	USA Area	MFC(Multi Function Camera)	Special Function	Variant Coding
Optima(JFA)	2017	USA Area	SCC(Smart Cruise Control)	Version Information	

model	year	area	system	function	subfunction
Optima(JFA)	2017	USA Area	SCC(Smart Cruise Control)	Read Fault Code	
Optima(JFA)	2017	USA Area	SCC(Smart Cruise Control)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	SCC(Smart Cruise Control)	Read Data Stream	
Optima(JFA)	2017	USA Area	SCC(Smart Cruise Control)	Special Function	Radar Sensor
Optima(JFA)	2017	USA Area	Amplifier	Version Information	
Optima(JFA)	2017	USA Area	Amplifier	Special Function	AMP Operation Test
Optima(JFA)	2017	USA Area	SVMS(Surround View Monitor System)	Version Information	
Optima(JFA)	2017	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Optima(JFA)	2017	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Optima(JFA)	2017	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Optima(JFA)	2017	USA Area	PGS(Parking Guide System)	Version Information	
Optima(JFA)	2017	USA Area	PGS(Parking Guide System)	Read Fault Code	
Optima(JFA)	2017	USA Area	PGS(Parking Guide System)	Clear Fault Memory	
Optima(JFA)	2017	USA Area	PGS(Parking Guide System)	Read Data Stream	
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(JFA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Optima(JFA)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Version Information	
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(JFA)	2016	USA Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Optima(JFA)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(JFA)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(JFA)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(JFA)	2016	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(JFA)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(JFA)	2016	USA Area	TCM(Transmission Control Module)	Special Function	DCT Learning Function
Optima(JFA)	2016	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(JFA)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(JFA)	2016	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(JFA)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(JFA)	2016	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(JFA)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Optima(JFA)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(JFA)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Optima(JFA)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima(JFA)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Optima(JFA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(JFA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(JFA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(JFA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(JFA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Optima(JFA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Optima(JFA)	2016	USA Area	AC(Air Conditioning)	Version Information	
Optima(JFA)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(JFA)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(JFA)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(JFA)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(JFA)	2016	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)

model	year	area	system	function	subfunction
Optima(JFA)	2016	USA Area	BCM(Body Control Module)	Version Information	
Optima(JFA)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima(JFA)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(JFA)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(JFA)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(JFA)	2016	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Optima(JFA)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(JFA)	2016	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(JFA)	2016	USA Area	Smart Key Unit	Version Information	
Optima(JFA)	2016	USA Area	Smart Key Unit	Read Fault Code	
Optima(JFA)	2016	USA Area	Smart Key Unit	Clear Fault Memory	
Optima(JFA)	2016	USA Area	Smart Key Unit	Read Data Stream	
Optima(JFA)	2016	USA Area	Smart Key Unit	Actuation Test	
Optima(JFA)	2016	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(JFA)	2016	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(JFA)	2016	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima(JFA)	2016	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(JFA)	2016	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(JFA)	2016	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(JFA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(JFA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(JFA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(JFA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(JFA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Optima(JFA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(JFA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(JFA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(JFA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(JFA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(JFA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(JFA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(JFA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(JFA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(JFA)	2016	USA Area	Head Lamp	Version Information	
Optima(JFA)	2016	USA Area	Head Lamp	Read Fault Code	
Optima(JFA)	2016	USA Area	Head Lamp	Clear Fault Memory	
Optima(JFA)	2016	USA Area	Head Lamp	Read Data Stream	
Optima(JFA)	2016	USA Area	Head Lamp	Actuation Test	
Optima(JFA)	2016	USA Area	Head Lamp	Special Function	Headlamp Leveling
Optima(JFA)	2016	USA Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Optima(JFA)	2016	USA Area	Head Lamp	Special Function	Parameter Download
Optima(JFA)	2016	USA Area	LDWS(Lane Departure Warning System)	Version Information	
Optima(JFA)	2016	USA Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Optima(JFA)	2016	USA Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Optima(JFA)	2016	USA Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Optima(JFA)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Optima(JFA)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Optima(JFA)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	Variant Coding
Optima(JFA)	2016	USA Area	LDWS(Lane Departure Warning System)	Actuation Test	
Optima(JFA)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Optima(JFA)	2016	USA Area	SVMS(Surround View Monitor System)	Version Information	
Optima(JFA)	2016	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Optima(JFA)	2016	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Optima(JFA)	2016	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Optima(JFA)	2016	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Optima(JFA)	2016	USA Area	CCS(Cruise Control System)	Version Information	
Optima(JFA)	2016	USA Area	CCS(Cruise Control System)	Read Fault Code	
Optima(JFA)	2016	USA Area	CCS(Cruise Control System)	Clear Fault Memory	
Optima(JFA)	2016	USA Area	CCS(Cruise Control System)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(JFA)	2016	USA Area	CCS(Cruise Control System)	Special Function	Radar Sensor
Optima(JFA)	2016	USA Area	IMMO(Immobilizer)	Read Fault Code	
Optima(JFA)	2016	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Optima(JFA)	2016	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(JFA)	2016	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(JFA)	2016	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(JFA)	2016	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(JFA)	2016	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(JFA)	2016	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(JFA)	2016	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(JFA)	2016	USA Area	Amplifier	Version Information	
Optima(JFA)	2016	USA Area	Amplifier	Special Function	AMP Operation Test
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(JFA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Optima(JFA)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Version Information	
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results

model	year	area	system	function	subfunction
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima(MG)	2010	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(MG)	2010	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(MG)	2010	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(MG)	2010	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(MG)	2010	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(MG)	2010	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(MG)	2010	USA Area	ESP(Electronic Stability Program)	Version Information	
Optima(MG)	2010	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima(MG)	2010	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima(MG)	2010	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Optima(MG)	2010	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Optima(MG)	2010	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima(MG)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(MG)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(MG)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(MG)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(MG)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Optima(MG)	2010	USA Area	AC(Air Conditioning)	Version Information	
Optima(MG)	2010	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(MG)	2010	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(MG)	2010	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(MG)	2010	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(MG)	2010	USA Area	BCM(Body Control Module)	Version Information	
Optima(MG)	2010	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(MG)	2010	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(MG)	2010	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(MG)	2010	USA Area	EPS(Electronic Power Steering)	Version Information	
Optima(MG)	2010	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Optima(MG)	2010	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(MG)	2010	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Optima(MG)	2010	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Optima(MG)	2010	USA Area	Smart Key	Version Information	
Optima(MG)	2010	USA Area	Smart Key	Read Fault Code	
Optima(MG)	2010	USA Area	Smart Key	Clear Fault Memory	
Optima(MG)	2010	USA Area	Smart Key	Read Data Stream	
Optima(MG)	2010	USA Area	Smart Key	Actuation Test	
Optima(MG)	2010	USA Area	Smart Key	Special Function	ESCL Open Status Check
Optima(MG)	2010	USA Area	Smart Key	Special Function	Neutralization Mode
Optima(MG)	2010	USA Area	Smart Key	Special Function	SMK Status Information
Optima(MG)	2010	USA Area	Smart Key	Special Function	TP Status Information
Optima(MG)	2010	USA Area	Smart Key	Special Function	PDM Status Information
Optima(MG)	2010	USA Area	Smart Key	Special Function	FOB KEY Status Information
Optima(MG)	2010	USA Area	Smart Key	Special Function	Serial Communication Line Check
Optima(MG)	2010	USA Area	Smart Key	Special Function	Antenna Status Check
Optima(MG)	2010	USA Area	Smart Key	Special Function	ESCL Status Information
Optima(MG)	2010	USA Area	Smart Key	Special Function	Smart Key Code Saving
Optima(MG)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(MG)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(MG)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(MG)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(MG)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(MG)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(MG)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(MG)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(MG)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(MG)	2010	USA Area	ECS(Electronic Control Suspension)	Version Information	
Optima(MG)	2010	USA Area	ECS(Electronic Control Suspension)	Read Fault Code	
Optima(MG)	2010	USA Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Optima(MG)	2010	USA Area	ECS(Electronic Control Suspension)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(MG)	2010	USA Area	ECS(Electronic Control Suspension)	Actuation Test	
Optima(MG)	2010	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(MG)	2010	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(MG)	2010	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(MG)	2010	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(MG)	2010	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(MG)	2010	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(MG)	2010	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(MG)	2010	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(MG)	2010	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Optima(MG)	2010	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Version Information	
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Optima(MG)	2009	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(MG)	2009	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(MG)	2009	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(MG)	2009	USA Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(MG)	2009	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(MG)	2009	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(MG)	2009	USA Area	ESP(Electronic Stability Program)	Version Information	
Optima(MG)	2009	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima(MG)	2009	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima(MG)	2009	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Optima(MG)	2009	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Optima(MG)	2009	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima(MG)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(MG)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(MG)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(MG)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(MG)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Optima(MG)	2009	USA Area	AC(Air Conditioning)	Version Information	
Optima(MG)	2009	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(MG)	2009	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(MG)	2009	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(MG)	2009	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(MG)	2009	USA Area	BCM(Body Control Module)	Version Information	
Optima(MG)	2009	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(MG)	2009	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(MG)	2009	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(MG)	2009	USA Area	EPS(Electronic Power Steering)	Version Information	
Optima(MG)	2009	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Optima(MG)	2009	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Optima(MG)	2009	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Optima(MG)	2009	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Optima(MG)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(MG)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(MG)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(MG)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(MG)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(MG)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(MG)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(MG)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(MG)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(MG)	2009	USA Area	ECS(Electronic Control Suspension)	Version Information	
Optima(MG)	2009	USA Area	ECS(Electronic Control Suspension)	Read Fault Code	
Optima(MG)	2009	USA Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Optima(MG)	2009	USA Area	ECS(Electronic Control Suspension)	Read Data Stream	
Optima(MG)	2009	USA Area	ECS(Electronic Control Suspension)	Actuation Test	
Optima(MG)	2009	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(MG)	2009	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(MG)	2009	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(MG)	2009	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(MG)	2009	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(MG)	2009	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(MG)	2009	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(MG)	2009	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(MG)	2009	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Optima(MG)	2009	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Version Information	
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Optima(MG)	2008	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(MG)	2008	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(MG)	2008	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(MG)	2008	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(MG)	2008	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(MG)	2008	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(MG)	2008	USA Area	ESP(Electronic Stability Program)	Version Information	
Optima(MG)	2008	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima(MG)	2008	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima(MG)	2008	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Optima(MG)	2008	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Optima(MG)	2008	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima(MG)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(MG)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(MG)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(MG)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(MG)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Optima(MG)	2008	USA Area	AC(Air Conditioning)	Version Information	
Optima(MG)	2008	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(MG)	2008	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(MG)	2008	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(MG)	2008	USA Area	AC(Air Conditioning)	Actuation Test	

model	year	area	system	function	subfunction
Optima(MG)	2008	USA Area	BCM(Body Control Module)	Version Information	
Optima(MG)	2008	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(MG)	2008	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(MG)	2008	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(MG)	2008	USA Area	EPS(Electronic Power Steering)	Version Information	
Optima(MG)	2008	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Optima(MG)	2008	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Optima(MG)	2008	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Optima(MG)	2008	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Optima(MG)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(MG)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(MG)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(MG)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(MG)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(MG)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(MG)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(MG)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(MG)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(MG)	2008	USA Area	ECS(Electronic Control Suspension)	Version Information	
Optima(MG)	2008	USA Area	ECS(Electronic Control Suspension)	Read Fault Code	
Optima(MG)	2008	USA Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Optima(MG)	2008	USA Area	ECS(Electronic Control Suspension)	Read Data Stream	
Optima(MG)	2008	USA Area	ECS(Electronic Control Suspension)	Actuation Test	
Optima(MG)	2008	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(MG)	2008	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(MG)	2008	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(MG)	2008	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(MG)	2008	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(MG)	2008	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(MG)	2008	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(MG)	2008	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(MG)	2008	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Optima(MG)	2008	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Version Information	
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Optima(MG)	2007	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(MG)	2007	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(MG)	2007	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(MG)	2007	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(MG)	2007	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(MG)	2007	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(MG)	2007	USA Area	ESP(Electronic Stability Program)	Version Information	
Optima(MG)	2007	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima(MG)	2007	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima(MG)	2007	USA Area	ESP(Electronic Stability Program)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(MG)	2007	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Optima(MG)	2007	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima(MG)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(MG)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(MG)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(MG)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(MG)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Optima(MG)	2007	USA Area	AC(Air Conditioning)	Version Information	
Optima(MG)	2007	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(MG)	2007	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(MG)	2007	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(MG)	2007	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(MG)	2007	USA Area	BCM(Body Control Module)	Version Information	
Optima(MG)	2007	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(MG)	2007	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(MG)	2007	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(MG)	2007	USA Area	EPS(Electronic Power Steering)	Version Information	
Optima(MG)	2007	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Optima(MG)	2007	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Optima(MG)	2007	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Optima(MG)	2007	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Optima(MG)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(MG)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(MG)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(MG)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(MG)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(MG)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(MG)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(MG)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(MG)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
Optima(MG)	2007	USA Area	ECS(Electronic Control Suspension)	Version Information	
Optima(MG)	2007	USA Area	ECS(Electronic Control Suspension)	Read Fault Code	
Optima(MG)	2007	USA Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Optima(MG)	2007	USA Area	ECS(Electronic Control Suspension)	Read Data Stream	
Optima(MG)	2007	USA Area	ECS(Electronic Control Suspension)	Actuation Test	
Optima(MG)	2007	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(MG)	2007	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(MG)	2007	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(MG)	2007	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(MG)	2007	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(MG)	2007	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(MG)	2007	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(MG)	2007	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(MG)	2007	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Optima(MG)	2007	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Version Information	
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Option)

model	year	area	system	function	subfunction
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	EVAP Test
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(MG)	2006	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(MG)	2006	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(MG)	2006	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(MG)	2006	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(MG)	2006	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(MG)	2006	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(MG)	2006	USA Area	ESP(Electronic Stability Program)	Version Information	
Optima(MG)	2006	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima(MG)	2006	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima(MG)	2006	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Optima(MG)	2006	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Optima(MG)	2006	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima(MG)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(MG)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(MG)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(MG)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(MG)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Optima(MG)	2006	USA Area	AC(Air Conditioning)	Version Information	
Optima(MG)	2006	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(MG)	2006	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(MG)	2006	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(MG)	2006	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(MG)	2006	USA Area	BCM(Body Control Module)	Version Information	
Optima(MG)	2006	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(MG)	2006	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(MG)	2006	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(MG)	2006	USA Area	EPS(Electronic Power Steering)	Version Information	
Optima(MG)	2006	USA Area	EPS(Electronic Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
Optima(MG)	2006	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Optima(MG)	2006	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Optima(MG)	2006	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Optima(MG)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(MG)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(MG)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(MG)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(MG)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(MG)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(MG)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(MG)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(MG)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(MG)	2006	USA Area	ECS(Electronic Control Suspension)	Version Information	
Optima(MG)	2006	USA Area	ECS(Electronic Control Suspension)	Read Fault Code	
Optima(MG)	2006	USA Area	ECS(Electronic Control Suspension)	Clear Fault Memory	
Optima(MG)	2006	USA Area	ECS(Electronic Control Suspension)	Read Data Stream	
Optima(MG)	2006	USA Area	ECS(Electronic Control Suspension)	Actuation Test	
Optima(MG)	2006	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(MG)	2006	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(MG)	2006	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(MG)	2006	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(MG)	2006	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(MG)	2006	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(MG)	2006	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(MG)	2006	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Optima(MG)	2006	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Version Information	
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Optima(MS)	2006	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(MS)	2006	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(MS)	2006	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(MS)	2006	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(MS)	2006	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(MS)	2006	USA Area	TCM(Transmission Control Module)	Special Function	Init Of TCU Learning
Optima(MS)	2006	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(MS)	2006	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(MS)	2006	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(MS)	2006	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(MS)	2006	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(MS)	2006	USA Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Optima(MS)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(MS)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(MS)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(MS)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(MS)	2006	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test

model	year	area	system	function	subfunction
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima(MS)	2006	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Version Information	
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Optima(MS)	2005	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(MS)	2005	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(MS)	2005	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(MS)	2005	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(MS)	2005	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(MS)	2005	USA Area	TCM(Transmission Control Module)	Special Function	Init Of TCU Learning
Optima(MS)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(MS)	2005	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(MS)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(MS)	2005	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(MS)	2005	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(MS)	2005	USA Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Optima(MS)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(MS)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	

model	year	area	system	function	subfunction
Optima(MS)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(MS)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(MS)	2005	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima(MS)	2005	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Version Information	
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(MS)	2004	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(MS)	2004	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(MS)	2004	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(MS)	2004	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(MS)	2004	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(MS)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(MS)	2004	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(MS)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(MS)	2004	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(MS)	2004	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(MS)	2004	USA Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test

model	year	area	system	function	subfunction
Optima(MS)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(MS)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(MS)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(MS)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(MS)	2004	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima(MS)	2004	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Version Information	
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(MS)	2003	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(MS)	2003	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(MS)	2003	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(MS)	2003	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(MS)	2003	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(MS)	2003	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(MS)	2003	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(MS)	2003	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(MS)	2003	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(MS)	2003	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(MS)	2003	USA Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Optima(MS)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(MS)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(MS)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(MS)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(MS)	2003	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima(MS)	2003	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Version Information	
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(MS)	2002	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(MS)	2002	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(MS)	2002	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(MS)	2002	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(MS)	2002	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(MS)	2002	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(MS)	2002	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(MS)	2002	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(MS)	2002	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(MS)	2002	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(MS)	2002	USA Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Optima(MS)	2002	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(MS)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(MS)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(MS)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(MS)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(MS)	2002	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima(MS)	2002	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Version Information	
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(MS)	2001	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(MS)	2001	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(MS)	2001	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(MS)	2001	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(MS)	2001	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(MS)	2001	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(MS)	2001	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(MS)	2001	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(MS)	2001	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(MS)	2001	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(MS)	2001	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(MS)	2001	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(MS)	2001	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(MS)	2001	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(MS)	2001	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(MS)	2001	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Optima(MS)	2001	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test

model	year	area	system	function	subfunction
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Version Information	
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima(TF/QF)	2015	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(TF/QF)	2015	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(TF/QF)	2015	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(TF/QF)	2015	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(TF/QF)	2015	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(TF/QF)	2015	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(TF/QF)	2015	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(TF/QF)	2015	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(TF/QF)	2015	USA Area	ESP(Electronic Stability Program)	Version Information	
Optima(TF/QF)	2015	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima(TF/QF)	2015	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima(TF/QF)	2015	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Optima(TF/QF)	2015	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Optima(TF/QF)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Optima(TF/QF)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima(TF/QF)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dhc Only)

model	year	area	system	function	subfunction
Optima(TF/QF)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(TF/QF)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(TF/QF)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(TF/QF)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(TF/QF)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Optima(TF/QF)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Optima(TF/QF)	2015	USA Area	AC(Air Conditioning)	Version Information	
Optima(TF/QF)	2015	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(TF/QF)	2015	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(TF/QF)	2015	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(TF/QF)	2015	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(TF/QF)	2015	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima(TF/QF)	2015	USA Area	BCM(Body Control Module)	Version Information	
Optima(TF/QF)	2015	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima(TF/QF)	2015	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(TF/QF)	2015	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(TF/QF)	2015	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(TF/QF)	2015	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(TF/QF)	2015	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Version Information	
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Read Fault Code	
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Clear Fault Memory	
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Read Data Stream	
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Actuation Test	
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Optima(TF/QF)	2015	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima(TF/QF)	2015	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(TF/QF)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(TF/QF)	2015	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(TF/QF)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(TF/QF)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(TF/QF)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(TF/QF)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(TF/QF)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(TF/QF)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(TF/QF)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(TF/QF)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(TF/QF)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(TF/QF)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(TF/QF)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(TF/QF)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(TF/QF)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima(TF/QF)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima(TF/QF)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima(TF/QF)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima(TF/QF)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima(TF/QF)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima(TF/QF)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima(TF/QF)	2015	USA Area	BSD(Blind Spot Detection)	Version Information	
Optima(TF/QF)	2015	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Optima(TF/QF)	2015	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Optima(TF/QF)	2015	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Optima(TF/QF)	2015	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Optima(TF/QF)	2015	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration

model	year	area	system	function	subfunction
Optima(TF/QF)	2015	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Code Reading
Optima(TF/QF)	2015	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
Optima(TF/QF)	2015	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(TF/QF)	2015	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(TF/QF)	2015	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(TF/QF)	2015	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(TF/QF)	2015	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(TF/QF)	2015	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(TF/QF)	2015	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(TF/QF)	2015	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(TF/QF)	2015	USA Area	Telematics Unit	Version Information	
Optima(TF/QF)	2015	USA Area	Telematics Unit	Read Fault Code	
Optima(TF/QF)	2015	USA Area	Telematics Unit	Clear Fault Memory	
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Version Information	
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima(TF/QF)	2014	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(TF/QF)	2014	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(TF/QF)	2014	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(TF/QF)	2014	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(TF/QF)	2014	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(TF/QF)	2014	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(TF/QF)	2014	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(TF/QF)	2014	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(TF/QF)	2014	USA Area	ESP(Electronic Stability Program)	Version Information	
Optima(TF/QF)	2014	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima(TF/QF)	2014	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima(TF/QF)	2014	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Optima(TF/QF)	2014	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Optima(TF/QF)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Optima(TF/QF)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima(TF/QF)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima(TF/QF)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(TF/QF)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(TF/QF)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(TF/QF)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(TF/QF)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Optima(TF/QF)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Optima(TF/QF)	2014	USA Area	AC(Air Conditioning)	Version Information	
Optima(TF/QF)	2014	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(TF/QF)	2014	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(TF/QF)	2014	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(TF/QF)	2014	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(TF/QF)	2014	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima(TF/QF)	2014	USA Area	BCM(Body Control Module)	Version Information	
Optima(TF/QF)	2014	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima(TF/QF)	2014	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(TF/QF)	2014	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(TF/QF)	2014	USA Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Optima(TF/QF)	2014	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(TF/QF)	2014	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Version Information	
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Read Fault Code	
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Clear Fault Memory	
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Read Data Stream	
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Actuation Test	
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Special Function	SMK Status Information
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(TF/QF)	2014	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima(TF/QF)	2014	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Optima(TF/QF)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Optima(TF/QF)	2014	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Optima(TF/QF)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Optima(TF/QF)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Optima(TF/QF)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Optima(TF/QF)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(TF/QF)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(TF/QF)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(TF/QF)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(TF/QF)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(TF/QF)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(TF/QF)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(TF/QF)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(TF/QF)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(TF/QF)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	

model	year	area	system	function	subfunction
Optima(TF/QF)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima(TF/QF)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima(TF/QF)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima(TF/QF)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima(TF/QF)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima(TF/QF)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima(TF/QF)	2014	USA Area	BSD(Blind Spot Detection)	Version Information	
Optima(TF/QF)	2014	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Optima(TF/QF)	2014	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Optima(TF/QF)	2014	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Optima(TF/QF)	2014	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Optima(TF/QF)	2014	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Optima(TF/QF)	2014	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Code Reading
Optima(TF/QF)	2014	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
Optima(TF/QF)	2014	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(TF/QF)	2014	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(TF/QF)	2014	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(TF/QF)	2014	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(TF/QF)	2014	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(TF/QF)	2014	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(TF/QF)	2014	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(TF/QF)	2014	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(TF/QF)	2014	USA Area	Telematics Unit	Version Information	
Optima(TF/QF)	2014	USA Area	Telematics Unit	Read Fault Code	
Optima(TF/QF)	2014	USA Area	Telematics Unit	Clear Fault Memory	
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Version Information	
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(TF/QF)	2013	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima(TF/QF)	2013	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(TF/QF)	2013	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(TF/QF)	2013	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(TF/QF)	2013	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(TF/QF)	2013	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(TF/QF)	2013	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(TF/QF)	2013	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(TF/QF)	2013	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(TF/QF)	2013	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(TF/QF)	2013	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(TF/QF)	2013	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(TF/QF)	2013	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(TF/QF)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Optima(TF/QF)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Optima(TF/QF)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dhc Only)
Optima(TF/QF)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(Before)
Optima(TF/QF)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(After Change)
Optima(TF/QF)	2013	USA Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Optima(TF/QF)	2013	USA Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	

model	year	area	system	function	subfunction
Optima(TF/QF)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(TF/QF)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(TF/QF)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Optima(TF/QF)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Optima(TF/QF)	2013	USA Area	AC(Air Conditioning)	Version Information	
Optima(TF/QF)	2013	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(TF/QF)	2013	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(TF/QF)	2013	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(TF/QF)	2013	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(TF/QF)	2013	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima(TF/QF)	2013	USA Area	BCM(Body Control Module)	Version Information	
Optima(TF/QF)	2013	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima(TF/QF)	2013	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(TF/QF)	2013	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(TF/QF)	2013	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(TF/QF)	2013	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(TF/QF)	2013	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(TF/QF)	2013	USA Area	Power Steering	Version Information	
Optima(TF/QF)	2013	USA Area	Power Steering	Read Fault Code	
Optima(TF/QF)	2013	USA Area	Power Steering	Clear Fault Memory	
Optima(TF/QF)	2013	USA Area	Power Steering	Read Data Stream	
Optima(TF/QF)	2013	USA Area	Power Steering	Read Freeze Frame	
Optima(TF/QF)	2013	USA Area	Power Steering	Special Function	ASP Calibration
Optima(TF/QF)	2013	USA Area	Power Steering	Special Function	EPS Type Recognition
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Version Information	
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Read Fault Code	
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Clear Fault Memory	
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Read Data Stream	
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Actuation Test	
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving

model	year	area	system	function	subfunction
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Special Function	PDM Status Information
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Special Function	User Option
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima(TF/QF)	2013	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(TF/QF)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(TF/QF)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(TF/QF)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(TF/QF)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(TF/QF)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(TF/QF)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(TF/QF)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(TF/QF)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(TF/QF)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(TF/QF)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima(TF/QF)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima(TF/QF)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima(TF/QF)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima(TF/QF)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima(TF/QF)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima(TF/QF)	2013	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima(TF/QF)	2013	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(TF/QF)	2013	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(TF/QF)	2013	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(TF/QF)	2013	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(TF/QF)	2013	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(TF/QF)	2013	USA Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Optima(TF/QF)	2013	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(TF/QF)	2013	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Version Information	
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(TF/QF)	2012	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima(TF/QF)	2012	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(TF/QF)	2012	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(TF/QF)	2012	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(TF/QF)	2012	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(TF/QF)	2012	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(TF/QF)	2012	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(TF/QF)	2012	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(TF/QF)	2012	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Optima(TF/QF)	2012	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Optima(TF/QF)	2012	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Optima(TF/QF)	2012	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Optima(TF/QF)	2012	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Optima(TF/QF)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Optima(TF/QF)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
Optima(TF/QF)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Optima(TF/QF)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(Before
Optima(TF/QF)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	PAD Change Mode(After Change)
Optima(TF/QF)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(TF/QF)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(TF/QF)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(TF/QF)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(TF/QF)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Optima(TF/QF)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Optima(TF/QF)	2012	USA Area	AC(Air Conditioning)	Version Information	
Optima(TF/QF)	2012	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(TF/QF)	2012	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(TF/QF)	2012	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(TF/QF)	2012	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(TF/QF)	2012	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima(TF/QF)	2012	USA Area	BCM(Body Control Module)	Version Information	
Optima(TF/QF)	2012	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima(TF/QF)	2012	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(TF/QF)	2012	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(TF/QF)	2012	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(TF/QF)	2012	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(TF/QF)	2012	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(TF/QF)	2012	USA Area	Power Steering	Version Information	
Optima(TF/QF)	2012	USA Area	Power Steering	Read Fault Code	
Optima(TF/QF)	2012	USA Area	Power Steering	Clear Fault Memory	
Optima(TF/QF)	2012	USA Area	Power Steering	Read Data Stream	
Optima(TF/QF)	2012	USA Area	Power Steering	Read Freeze Frame	
Optima(TF/QF)	2012	USA Area	Power Steering	Special Function	ASP Calibration
Optima(TF/QF)	2012	USA Area	Power Steering	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Version Information	
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Read Fault Code	
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Clear Fault Memory	
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Read Data Stream	
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Actuation Test	
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Special Function	PDM Status Information
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Special Function	User Option
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima(TF/QF)	2012	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(TF/QF)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(TF/QF)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(TF/QF)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(TF/QF)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(TF/QF)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(TF/QF)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(TF/QF)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(TF/QF)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(TF/QF)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(TF/QF)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima(TF/QF)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima(TF/QF)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima(TF/QF)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Optima(TF/QF)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima(TF/QF)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima(TF/QF)	2012	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial

model	year	area	system	function	subfunction
Optima(TF/QF)	2012	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(TF/QF)	2012	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(TF/QF)	2012	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(TF/QF)	2012	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(TF/QF)	2012	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(TF/QF)	2012	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(TF/QF)	2012	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(TF/QF)	2012	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Version Information	
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Read Fault Code	
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Read Data Stream	
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Actuation Test	
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Optima(TF/QF)	2011	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Optima(TF/QF)	2011	USA Area	TCM(Transmission Control Module)	Version Information	
Optima(TF/QF)	2011	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Optima(TF/QF)	2011	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Optima(TF/QF)	2011	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Optima(TF/QF)	2011	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Optima(TF/QF)	2011	USA Area	TCM(Transmission Control Module)	Actuation Test	
Optima(TF/QF)	2011	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Optima(TF/QF)	2011	USA Area	ESP(Electronic Stability Program)	Version Information	

model	year	area	system	function	subfunction
Optima(TF/QF)	2011	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Optima(TF/QF)	2011	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Optima(TF/QF)	2011	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Optima(TF/QF)	2011	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Optima(TF/QF)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Optima(TF/QF)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Optima(TF/QF)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dhc Only)
Optima(TF/QF)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Optima(TF/QF)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Optima(TF/QF)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Optima(TF/QF)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Optima(TF/QF)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Optima(TF/QF)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Optima(TF/QF)	2011	USA Area	AC(Air Conditioning)	Version Information	
Optima(TF/QF)	2011	USA Area	AC(Air Conditioning)	Read Fault Code	
Optima(TF/QF)	2011	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Optima(TF/QF)	2011	USA Area	AC(Air Conditioning)	Read Data Stream	
Optima(TF/QF)	2011	USA Area	AC(Air Conditioning)	Actuation Test	
Optima(TF/QF)	2011	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Optima(TF/QF)	2011	USA Area	BCM(Body Control Module)	Version Information	
Optima(TF/QF)	2011	USA Area	BCM(Body Control Module)	Read Fault Code	
Optima(TF/QF)	2011	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Optima(TF/QF)	2011	USA Area	BCM(Body Control Module)	Read Data Stream	
Optima(TF/QF)	2011	USA Area	BCM(Body Control Module)	Actuation Test	
Optima(TF/QF)	2011	USA Area	BCM(Body Control Module)	Special Function	User Option
Optima(TF/QF)	2011	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Optima(TF/QF)	2011	USA Area	Power Steering	Version Information	
Optima(TF/QF)	2011	USA Area	Power Steering	Read Fault Code	
Optima(TF/QF)	2011	USA Area	Power Steering	Clear Fault Memory	

model	year	area	system	function	subfunction
Optima(TF/QF)	2011	USA Area	Power Steering	Read Data Stream	
Optima(TF/QF)	2011	USA Area	Power Steering	Read Freeze Frame	
Optima(TF/QF)	2011	USA Area	Power Steering	Special Function	ASP Calibration
Optima(TF/QF)	2011	USA Area	Power Steering	Special Function	EPS Type Recognition
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Version Information	
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Read Fault Code	
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Clear Fault Memory	
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Read Data Stream	
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Actuation Test	
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Special Function	PDM Status Information
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Special Function	User Option
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Optima(TF/QF)	2011	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Optima(TF/QF)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Optima(TF/QF)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Optima(TF/QF)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Optima(TF/QF)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Optima(TF/QF)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Optima(TF/QF)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Optima(TF/QF)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Optima(TF/QF)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Optima(TF/QF)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Optima(TF/QF)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Optima(TF/QF)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Optima(TF/QF)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Optima(TF/QF)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	

model	year	area	system	function	subfunction
Optima(TF/QF)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Optima(TF/QF)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Optima(TF/QF)	2011	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Optima(TF/QF)	2011	USA Area	IMMO(Immobilizer)	Read Data Stream	
Optima(TF/QF)	2011	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Optima(TF/QF)	2011	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Optima(TF/QF)	2011	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Optima(TF/QF)	2011	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Optima(TF/QF)	2011	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Optima(TF/QF)	2011	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Optima(TF/QF)	2011	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2005	USA Area	ECM(Engine Control Module)	Version Information	
RIO(BC)	2005	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2005	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2005	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2005	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2005	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(BC)	2005	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
RIO(BC)	2005	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(BC)	2005	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2005	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2005	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2005	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
RIO(BC)	2005	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2005	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2005	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2005	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
RIO(BC)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2005	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2004	USA Area	ECM(Engine Control Module)	Version Information	
RIO(BC)	2004	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2004	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2004	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2004	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2004	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(BC)	2004	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
RIO(BC)	2004	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(BC)	2004	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2004	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2004	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2004	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
RIO(BC)	2004	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2004	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2004	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2004	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2004	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2003	USA Area	ECM(Engine Control Module)	Version Information	
RIO(BC)	2003	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2003	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2003	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2003	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2003	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
RIO(BC)	2003	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
RIO(BC)	2003	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(BC)	2003	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2003	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2003	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2003	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
RIO(BC)	2003	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2003	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2003	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2003	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2003	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2003	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2003	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(BC)	2002	USA Area	ECM(Engine Control Module)	Version Information	
RIO(BC)	2002	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2002	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2002	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2002	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2002	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(BC)	2002	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
RIO(BC)	2002	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(BC)	2002	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2002	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2002	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2002	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
RIO(BC)	2002	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2002	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2002	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	

model	year	area	system	function	subfunction
RIO(BC)	2002	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2002	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2002	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(BC)	2001	USA Area	ECM(Engine Control Module)	Version Information	
RIO(BC)	2001	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(BC)	2001	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(BC)	2001	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(BC)	2001	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(BC)	2001	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(BC)	2001	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
RIO(BC)	2001	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(BC)	2001	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(BC)	2001	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(BC)	2001	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(BC)	2001	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
RIO(BC)	2001	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(BC)	2001	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(BC)	2001	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(BC)	2001	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(BC)	2001	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(BC)	2001	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(BC)	2001	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(BC)	2001	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2012	USA Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2012	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2012	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2012	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2012	USA Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
RIO(JB)	2012	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2012	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(JB)	2012	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(JB)	2012	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2012	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(JB)	2012	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
RIO(JB)	2012	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2012	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2012	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2012	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2012	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2012	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2012	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2012	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2012	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2012	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2012	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2012	USA Area	AC(Air Conditioning)	Version Information	
RIO(JB)	2012	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(JB)	2012	USA Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(JB)	2012	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(JB)	2012	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(JB)	2012	USA Area	Power Steering	Version Information	
RIO(JB)	2012	USA Area	Power Steering	Read Fault Code	

model	year	area	system	function	subfunction
RIO(JB)	2012	USA Area	Power Steering	Clear Fault Memory	
RIO(JB)	2012	USA Area	Power Steering	Read Data Stream	
RIO(JB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(JB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(JB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(JB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(JB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(JB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(JB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(JB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(JB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(JB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(JB)	2012	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(JB)	2011	USA Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2011	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2011	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2011	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2011	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2011	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2011	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(JB)	2011	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(JB)	2011	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2011	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(JB)	2011	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
RIO(JB)	2011	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2011	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2011	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2011	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2011	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2011	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
RIO(JB)	2011	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2011	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2011	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2011	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2011	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2011	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2011	USA Area	AC(Air Conditioning)	Version Information	
RIO(JB)	2011	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(JB)	2011	USA Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(JB)	2011	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(JB)	2011	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(JB)	2011	USA Area	Power Steering	Version Information	
RIO(JB)	2011	USA Area	Power Steering	Read Fault Code	
RIO(JB)	2011	USA Area	Power Steering	Clear Fault Memory	
RIO(JB)	2011	USA Area	Power Steering	Read Data Stream	
RIO(JB)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(JB)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(JB)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(JB)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(JB)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(JB)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(JB)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(JB)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(JB)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(JB)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
RIO(JB)	2011	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(JB)	2010	USA Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2010	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2010	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2010	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2010	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2010	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2010	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(JB)	2010	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(JB)	2010	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2010	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(JB)	2010	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
RIO(JB)	2010	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2010	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2010	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2010	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2010	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2010	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2010	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2010	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2010	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2010	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2010	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2010	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2010	USA Area	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
RIO(JB)	2010	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(JB)	2010	USA Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(JB)	2010	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(JB)	2010	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(JB)	2010	USA Area	Power Steering	Version Information	
RIO(JB)	2010	USA Area	Power Steering	Read Fault Code	
RIO(JB)	2010	USA Area	Power Steering	Clear Fault Memory	
RIO(JB)	2010	USA Area	Power Steering	Read Data Stream	
RIO(JB)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(JB)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(JB)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(JB)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(JB)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(JB)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(JB)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(JB)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(JB)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(JB)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(JB)	2010	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(JB)	2009	USA Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2009	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2009	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2009	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2009	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2009	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2009	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(JB)	2009	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(JB)	2009	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2009	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(JB)	2009	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results

model	year	area	system	function	subfunction
RIO(JB)	2009	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2009	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2009	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2009	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2009	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2009	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2009	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2009	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2009	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2009	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2009	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2009	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2009	USA Area	AC(Air Conditioning)	Version Information	
RIO(JB)	2009	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(JB)	2009	USA Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(JB)	2009	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(JB)	2009	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(JB)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(JB)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(JB)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(JB)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(JB)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(JB)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(JB)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(JB)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing

model	year	area	system	function	subfunction
RIO(JB)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(JB)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(JB)	2009	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(JB)	2008	USA Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2008	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2008	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2008	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2008	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2008	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2008	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(JB)	2008	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(JB)	2008	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2008	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(JB)	2008	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
RIO(JB)	2008	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2008	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2008	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2008	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2008	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2008	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2008	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2008	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2008	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
RIO(JB)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2008	USA Area	AC(Air Conditioning)	Version Information	
RIO(JB)	2008	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(JB)	2008	USA Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(JB)	2008	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(JB)	2008	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(JB)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(JB)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(JB)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(JB)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(JB)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(JB)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(JB)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(JB)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(JB)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(JB)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(JB)	2008	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(JB)	2007	USA Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2007	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2007	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2007	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2007	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2007	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2007	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(JB)	2007	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(JB)	2007	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2007	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(JB)	2007	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
RIO(JB)	2007	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2007	USA Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
RIO(JB)	2007	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2007	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2007	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2007	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2007	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2007	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2007	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2007	USA Area	AC(Air Conditioning)	Version Information	
RIO(JB)	2007	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(JB)	2007	USA Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(JB)	2007	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(JB)	2007	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(JB)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(JB)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(JB)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(JB)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(JB)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(JB)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(JB)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(JB)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(JB)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(JB)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing

model	year	area	system	function	subfunction
RIO(JB)	2007	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(JB)	2006	USA Area	ECM(Engine Control Module)	Version Information	
RIO(JB)	2006	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(JB)	2006	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(JB)	2006	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(JB)	2006	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
RIO(JB)	2006	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(JB)	2006	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(JB)	2006	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(JB)	2006	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(JB)	2006	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(JB)	2006	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
RIO(JB)	2006	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(JB)	2006	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(JB)	2006	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(JB)	2006	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(JB)	2006	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(JB)	2006	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(JB)	2006	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(JB)	2006	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(JB)	2006	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(JB)	2006	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(JB)	2006	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(JB)	2006	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(JB)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(JB)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(JB)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(JB)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(JB)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
RIO(JB)	2006	USA Area	AC(Air Conditioning)	Version Information	

model	year	area	system	function	subfunction
RIO(JB)	2006	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(JB)	2006	USA Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(JB)	2006	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(JB)	2006	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(JB)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(JB)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(JB)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(JB)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(JB)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(JB)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(JB)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(JB)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(JB)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(JB)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(JB)	2006	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(UB)	2017	USA Area	ECM(Engine Control Module)	Version Information	
RIO(UB)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(UB)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(UB)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(UB)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(UB)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(UB)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(UB)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(UB)	2017	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(UB)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(UB)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(UB)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(UB)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(UB)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(UB)	2017	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
RIO(UB)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(UB)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(UB)	2017	USA Area	ABS/ESC	Version Information	
RIO(UB)	2017	USA Area	ABS/ESC	Read Fault Code	
RIO(UB)	2017	USA Area	ABS/ESC	Clear Fault Memory	
RIO(UB)	2017	USA Area	ABS/ESC	Read Data Stream	
RIO(UB)	2017	USA Area	ABS/ESC	Actuation Test	
RIO(UB)	2017	USA Area	ABS/ESC	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
RIO(UB)	2017	USA Area	ABS/ESC	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
RIO(UB)	2017	USA Area	ABS/ESC	Special Function	HCU Air Bleeding Mode
RIO(UB)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(UB)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(UB)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(UB)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(UB)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(UB)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
RIO(UB)	2017	USA Area	Air Conditioner(UB PE)	Version Information	
RIO(UB)	2017	USA Area	Air Conditioner(UB PE)	Read Fault Code	
RIO(UB)	2017	USA Area	Air Conditioner(UB PE)	Clear Fault Memory	
RIO(UB)	2017	USA Area	Air Conditioner(UB PE)	Read Data Stream	
RIO(UB)	2017	USA Area	Air Conditioner(UB PE)	Actuation Test	
RIO(UB)	2017	USA Area	Body Control Module(UB PE)	Version Information	
RIO(UB)	2017	USA Area	Body Control Module(UB PE)	Read Fault Code	
RIO(UB)	2017	USA Area	Body Control Module(UB PE)	Clear Fault Memory	
RIO(UB)	2017	USA Area	Body Control Module(UB PE)	Read Data Stream	
RIO(UB)	2017	USA Area	Body Control Module(UB PE)	Actuation Test	
RIO(UB)	2017	USA Area	Body Control Module(UB PE)	Special Function	User Option
RIO(UB)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	

model	year	area	system	function	subfunction
RIO(UB)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
RIO(UB)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
RIO(UB)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
RIO(UB)	2017	USA Area	MDPS(Motor Driven Power Steering)	Actuation Test	
RIO(UB)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
RIO(UB)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
RIO(UB)	2017	USA Area	Smart Key Unit	Version Information	
RIO(UB)	2017	USA Area	Smart Key Unit	Read Fault Code	
RIO(UB)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
RIO(UB)	2017	USA Area	Smart Key Unit	Read Data Stream	
RIO(UB)	2017	USA Area	Smart Key Unit	Actuation Test	
RIO(UB)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(UB)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(UB)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
RIO(UB)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(UB)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(UB)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(UB)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(UB)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(UB)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(UB)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(UB)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(UB)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(UB)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(UB)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(UB)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(UB)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(UB)	2017	USA Area	IMMO(Immobilizer)	Read Fault Code	
RIO(UB)	2017	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
RIO(UB)	2017	USA Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
RIO(UB)	2017	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(UB)	2017	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
RIO(UB)	2017	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(UB)	2017	USA Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(UB)	2017	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(UB)	2017	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(UB)	2017	USA Area	Telematics Unit	Version Information	
RIO(UB)	2017	USA Area	Telematics Unit	Read Fault Code	
RIO(UB)	2017	USA Area	Telematics Unit	Clear Fault Memory	
RIO(UB)	2016	USA Area	ECM(Engine Control Module)	Version Information	
RIO(UB)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(UB)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(UB)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(UB)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(UB)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(UB)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(UB)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(UB)	2016	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(UB)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(UB)	2016	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(UB)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(UB)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(UB)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(UB)	2016	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
RIO(UB)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(UB)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(UB)	2016	USA Area	ABS/ESC	Version Information	
RIO(UB)	2016	USA Area	ABS/ESC	Read Fault Code	
RIO(UB)	2016	USA Area	ABS/ESC	Clear Fault Memory	
RIO(UB)	2016	USA Area	ABS/ESC	Read Data Stream	

model	year	area	system	function	subfunction
RIO(UB)	2016	USA Area	ABS/ESC	Actuation Test	
RIO(UB)	2016	USA Area	ABS/ESC	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
RIO(UB)	2016	USA Area	ABS/ESC	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
RIO(UB)	2016	USA Area	ABS/ESC	Special Function	HCU Air Bleeding Mode
RIO(UB)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(UB)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(UB)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(UB)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(UB)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
RIO(UB)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(UB)	2016	USA Area	AC(Air Conditioning)	Version Information	
RIO(UB)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(UB)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(UB)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(UB)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(UB)	2016	USA Area	BCM(Body Control Module)	Version Information	
RIO(UB)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
RIO(UB)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(UB)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
RIO(UB)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
RIO(UB)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
RIO(UB)	2016	USA Area	Smart Key Unit	Version Information	
RIO(UB)	2016	USA Area	Smart Key Unit	Read Fault Code	
RIO(UB)	2016	USA Area	Smart Key Unit	Clear Fault Memory	
RIO(UB)	2016	USA Area	Smart Key Unit	Read Data Stream	
RIO(UB)	2016	USA Area	Smart Key Unit	Actuation Test	
RIO(UB)	2016	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(UB)	2016	USA Area	Smart Key Unit	Special Function	Neutralization Mode

model	year	area	system	function	subfunction
RIO(UB)	2016	USA Area	Smart Key Unit	Special Function	SMK Status Information
RIO(UB)	2016	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(UB)	2016	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(UB)	2016	USA Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(UB)	2016	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
RIO(UB)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
RIO(UB)	2016	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
RIO(UB)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
RIO(UB)	2016	USA Area	MDPS(Motor Driven Power Steering)	Actuation Test	
RIO(UB)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
RIO(UB)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
RIO(UB)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(UB)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(UB)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(UB)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(UB)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(UB)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(UB)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(UB)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(UB)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(UB)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(UB)	2016	USA Area	IMMO(Immobilizer)	Read Fault Code	
RIO(UB)	2016	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
RIO(UB)	2016	USA Area	IMMO(Immobilizer)	Read Data Stream	
RIO(UB)	2016	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(UB)	2016	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
RIO(UB)	2016	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(UB)	2016	USA Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(UB)	2016	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(UB)	2016	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
RIO(UB)	2016	USA Area	Telematics Unit	Version Information	
RIO(UB)	2016	USA Area	Telematics Unit	Read Fault Code	
RIO(UB)	2016	USA Area	Telematics Unit	Clear Fault Memory	
RIO(UB)	2015	USA Area	ECM(Engine Control Module)	Version Information	
RIO(UB)	2015	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(UB)	2015	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(UB)	2015	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(UB)	2015	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(UB)	2015	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(UB)	2015	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(UB)	2015	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(UB)	2015	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(UB)	2015	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(UB)	2015	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(UB)	2015	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(UB)	2015	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(UB)	2015	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(UB)	2015	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
RIO(UB)	2015	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(UB)	2015	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(UB)	2015	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(UB)	2015	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(UB)	2015	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(UB)	2015	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(UB)	2015	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(UB)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
RIO(UB)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
RIO(UB)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode

model	year	area	system	function	subfunction
RIO(UB)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(UB)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(UB)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(UB)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(UB)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(UB)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
RIO(UB)	2015	USA Area	AC(Air Conditioning)	Version Information	
RIO(UB)	2015	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(UB)	2015	USA Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(UB)	2015	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(UB)	2015	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(UB)	2015	USA Area	BCM(Body Control Module)	Version Information	
RIO(UB)	2015	USA Area	BCM(Body Control Module)	Read Fault Code	
RIO(UB)	2015	USA Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(UB)	2015	USA Area	BCM(Body Control Module)	Read Data Stream	
RIO(UB)	2015	USA Area	BCM(Body Control Module)	Actuation Test	
RIO(UB)	2015	USA Area	BCM(Body Control Module)	Special Function	User Option
RIO(UB)	2015	USA Area	Smart Key Unit	Version Information	
RIO(UB)	2015	USA Area	Smart Key Unit	Read Fault Code	
RIO(UB)	2015	USA Area	Smart Key Unit	Clear Fault Memory	
RIO(UB)	2015	USA Area	Smart Key Unit	Read Data Stream	
RIO(UB)	2015	USA Area	Smart Key Unit	Actuation Test	
RIO(UB)	2015	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(UB)	2015	USA Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(UB)	2015	USA Area	Smart Key Unit	Special Function	SMK Status Information
RIO(UB)	2015	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(UB)	2015	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(UB)	2015	USA Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(UB)	2015	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
RIO(UB)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	

model	year	area	system	function	subfunction
RIO(UB)	2015	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
RIO(UB)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
RIO(UB)	2015	USA Area	MDPS(Motor Driven Power Steering)	Actuation Test	
RIO(UB)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
RIO(UB)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
RIO(UB)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(UB)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(UB)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(UB)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(UB)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(UB)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(UB)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(UB)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(UB)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(UB)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(UB)	2015	USA Area	IMMO(Immobilizer)	Read Fault Code	
RIO(UB)	2015	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
RIO(UB)	2015	USA Area	IMMO(Immobilizer)	Read Data Stream	
RIO(UB)	2015	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(UB)	2015	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
RIO(UB)	2015	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(UB)	2015	USA Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(UB)	2015	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(UB)	2015	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(UB)	2014	USA Area	ECM(Engine Control Module)	Version Information	
RIO(UB)	2014	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(UB)	2014	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(UB)	2014	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(UB)	2014	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(UB)	2014	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
RIO(UB)	2014	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(UB)	2014	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(UB)	2014	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(UB)	2014	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(UB)	2014	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(UB)	2014	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(UB)	2014	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(UB)	2014	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(UB)	2014	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
RIO(UB)	2014	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(UB)	2014	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(UB)	2014	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(UB)	2014	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(UB)	2014	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(UB)	2014	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(UB)	2014	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(UB)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
RIO(UB)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
RIO(UB)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(UB)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(UB)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(UB)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(UB)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(UB)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(UB)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
RIO(UB)	2014	USA Area	AC(Air Conditioning)	Version Information	
RIO(UB)	2014	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(UB)	2014	USA Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
RIO(UB)	2014	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(UB)	2014	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(UB)	2014	USA Area	BCM(Body Control Module)	Version Information	
RIO(UB)	2014	USA Area	BCM(Body Control Module)	Read Fault Code	
RIO(UB)	2014	USA Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(UB)	2014	USA Area	BCM(Body Control Module)	Read Data Stream	
RIO(UB)	2014	USA Area	BCM(Body Control Module)	Actuation Test	
RIO(UB)	2014	USA Area	BCM(Body Control Module)	Special Function	User Option
RIO(UB)	2014	USA Area	Smart Key Unit	Version Information	
RIO(UB)	2014	USA Area	Smart Key Unit	Read Fault Code	
RIO(UB)	2014	USA Area	Smart Key Unit	Clear Fault Memory	
RIO(UB)	2014	USA Area	Smart Key Unit	Read Data Stream	
RIO(UB)	2014	USA Area	Smart Key Unit	Actuation Test	
RIO(UB)	2014	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(UB)	2014	USA Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(UB)	2014	USA Area	Smart Key Unit	Special Function	SMK Status Information
RIO(UB)	2014	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(UB)	2014	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(UB)	2014	USA Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(UB)	2014	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
RIO(UB)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
RIO(UB)	2014	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
RIO(UB)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
RIO(UB)	2014	USA Area	MDPS(Motor Driven Power Steering)	Actuation Test	
RIO(UB)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
RIO(UB)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
RIO(UB)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(UB)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(UB)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(UB)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
RIO(UB)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(UB)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(UB)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(UB)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(UB)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(UB)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(UB)	2014	USA Area	IMMO(Immobilizer)	Read Fault Code	
RIO(UB)	2014	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
RIO(UB)	2014	USA Area	IMMO(Immobilizer)	Read Data Stream	
RIO(UB)	2014	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(UB)	2014	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
RIO(UB)	2014	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(UB)	2014	USA Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(UB)	2014	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(UB)	2014	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(UB)	2013	USA Area	ECM(Engine Control Module)	Version Information	
RIO(UB)	2013	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(UB)	2013	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(UB)	2013	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(UB)	2013	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(UB)	2013	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(UB)	2013	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(UB)	2013	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(UB)	2013	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(UB)	2013	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(UB)	2013	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(UB)	2013	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(UB)	2013	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(UB)	2013	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(UB)	2013	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
RIO(UB)	2013	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(UB)	2013	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(UB)	2013	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(UB)	2013	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(UB)	2013	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(UB)	2013	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(UB)	2013	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(UB)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
RIO(UB)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
RIO(UB)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(UB)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(UB)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(UB)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(UB)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(UB)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(UB)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
RIO(UB)	2013	USA Area	AC(Air Conditioning)	Version Information	
RIO(UB)	2013	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(UB)	2013	USA Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(UB)	2013	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(UB)	2013	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(UB)	2013	USA Area	BCM(Body Control Module)	Version Information	
RIO(UB)	2013	USA Area	BCM(Body Control Module)	Read Fault Code	
RIO(UB)	2013	USA Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(UB)	2013	USA Area	BCM(Body Control Module)	Read Data Stream	
RIO(UB)	2013	USA Area	BCM(Body Control Module)	Actuation Test	
RIO(UB)	2013	USA Area	BCM(Body Control Module)	Special Function	User Option
RIO(UB)	2013	USA Area	MDPS(Motor Driven Power Steering)	Version Information	

model	year	area	system	function	subfunction
RIO(UB)	2013	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
RIO(UB)	2013	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
RIO(UB)	2013	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
RIO(UB)	2013	USA Area	MDPS(Motor Driven Power Steering)	Actuation Test	
RIO(UB)	2013	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
RIO(UB)	2013	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
RIO(UB)	2013	USA Area	Smart Key Unit	Version Information	
RIO(UB)	2013	USA Area	Smart Key Unit	Read Fault Code	
RIO(UB)	2013	USA Area	Smart Key Unit	Clear Fault Memory	
RIO(UB)	2013	USA Area	Smart Key Unit	Read Data Stream	
RIO(UB)	2013	USA Area	Smart Key Unit	Actuation Test	
RIO(UB)	2013	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(UB)	2013	USA Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(UB)	2013	USA Area	Smart Key Unit	Special Function	SMK Status Information
RIO(UB)	2013	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(UB)	2013	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(UB)	2013	USA Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(UB)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(UB)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(UB)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(UB)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(UB)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(UB)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(UB)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(UB)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(UB)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(UB)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(UB)	2013	USA Area	IMMO(Immobilizer)	Read Fault Code	
RIO(UB)	2013	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
RIO(UB)	2013	USA Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
RIO(UB)	2013	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(UB)	2013	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
RIO(UB)	2013	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(UB)	2013	USA Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(UB)	2013	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(UB)	2013	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
RIO(UB)	2012	USA Area	ECM(Engine Control Module)	Version Information	
RIO(UB)	2012	USA Area	ECM(Engine Control Module)	Read Fault Code	
RIO(UB)	2012	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
RIO(UB)	2012	USA Area	ECM(Engine Control Module)	Read Data Stream	
RIO(UB)	2012	USA Area	ECM(Engine Control Module)	Actuation Test	
RIO(UB)	2012	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
RIO(UB)	2012	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
RIO(UB)	2012	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
RIO(UB)	2012	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
RIO(UB)	2012	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
RIO(UB)	2012	USA Area	TCM(Transmission Control Module)	Version Information	
RIO(UB)	2012	USA Area	TCM(Transmission Control Module)	Read Fault Code	
RIO(UB)	2012	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
RIO(UB)	2012	USA Area	TCM(Transmission Control Module)	Read Data Stream	
RIO(UB)	2012	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
RIO(UB)	2012	USA Area	TCM(Transmission Control Module)	Actuation Test	
RIO(UB)	2012	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
RIO(UB)	2012	USA Area	ABS(Anti-Lock Brake System)	Version Information	
RIO(UB)	2012	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
RIO(UB)	2012	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
RIO(UB)	2012	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
RIO(UB)	2012	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
RIO(UB)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)

model	year	area	system	function	subfunction
RIO(UB)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
RIO(UB)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
RIO(UB)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
RIO(UB)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
RIO(UB)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
RIO(UB)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
RIO(UB)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
RIO(UB)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
RIO(UB)	2012	USA Area	AC(Air Conditioning)	Version Information	
RIO(UB)	2012	USA Area	AC(Air Conditioning)	Read Fault Code	
RIO(UB)	2012	USA Area	AC(Air Conditioning)	Clear Fault Memory	
RIO(UB)	2012	USA Area	AC(Air Conditioning)	Read Data Stream	
RIO(UB)	2012	USA Area	AC(Air Conditioning)	Actuation Test	
RIO(UB)	2012	USA Area	BCM(Body Control Module)	Version Information	
RIO(UB)	2012	USA Area	BCM(Body Control Module)	Read Fault Code	
RIO(UB)	2012	USA Area	BCM(Body Control Module)	Clear Fault Memory	
RIO(UB)	2012	USA Area	BCM(Body Control Module)	Read Data Stream	
RIO(UB)	2012	USA Area	BCM(Body Control Module)	Actuation Test	
RIO(UB)	2012	USA Area	BCM(Body Control Module)	Special Function	User Option
RIO(UB)	2012	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
RIO(UB)	2012	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
RIO(UB)	2012	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
RIO(UB)	2012	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
RIO(UB)	2012	USA Area	MDPS(Motor Driven Power Steering)	Actuation Test	
RIO(UB)	2012	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
RIO(UB)	2012	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
RIO(UB)	2012	USA Area	Smart Key Unit	Version Information	
RIO(UB)	2012	USA Area	Smart Key Unit	Read Fault Code	
RIO(UB)	2012	USA Area	Smart Key Unit	Clear Fault Memory	

model	year	area	system	function	subfunction
RIO(UB)	2012	USA Area	Smart Key Unit	Read Data Stream	
RIO(UB)	2012	USA Area	Smart Key Unit	Actuation Test	
RIO(UB)	2012	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
RIO(UB)	2012	USA Area	Smart Key Unit	Special Function	Neutralization Mode
RIO(UB)	2012	USA Area	Smart Key Unit	Special Function	SMK Status Information
RIO(UB)	2012	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
RIO(UB)	2012	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
RIO(UB)	2012	USA Area	Smart Key Unit	Special Function	Antenna Status Check
RIO(UB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
RIO(UB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
RIO(UB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
RIO(UB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
RIO(UB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
RIO(UB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
RIO(UB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
RIO(UB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
RIO(UB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
RIO(UB)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
RIO(UB)	2012	USA Area	IMMO(Immobilizer)	Read Fault Code	
RIO(UB)	2012	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
RIO(UB)	2012	USA Area	IMMO(Immobilizer)	Read Data Stream	
RIO(UB)	2012	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
RIO(UB)	2012	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
RIO(UB)	2012	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
RIO(UB)	2012	USA Area	IMMO(Immobilizer)	Special Function	Teaching
RIO(UB)	2012	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
RIO(UB)	2012	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Version Information	
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Read Fault Code	
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Read Data Stream	
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Actuation Test	
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Rondo(UN)	2010	USA Area	TCM(Transmission Control Module)	Version Information	
Rondo(UN)	2010	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Rondo(UN)	2010	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Rondo(UN)	2010	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Rondo(UN)	2010	USA Area	TCM(Transmission Control Module)	Actuation Test	
Rondo(UN)	2010	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Rondo(UN)	2010	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Rondo(UN)	2010	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Rondo(UN)	2010	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Rondo(UN)	2010	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Rondo(UN)	2010	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Rondo(UN)	2010	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Rondo(UN)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Rondo(UN)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Rondo(UN)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Rondo(UN)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Rondo(UN)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Rondo(UN)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset

model	year	area	system	function	subfunction
Rondo(UN)	2010	USA Area	AC(Air Conditioning)	Version Information	
Rondo(UN)	2010	USA Area	AC(Air Conditioning)	Read Fault Code	
Rondo(UN)	2010	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Rondo(UN)	2010	USA Area	AC(Air Conditioning)	Read Data Stream	
Rondo(UN)	2010	USA Area	AC(Air Conditioning)	Actuation Test	
Rondo(UN)	2010	USA Area	BCM(Body Control Module)	Version Information	
Rondo(UN)	2010	USA Area	BCM(Body Control Module)	Read Data Stream	
Rondo(UN)	2010	USA Area	BCM(Body Control Module)	Actuation Test	
Rondo(UN)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Rondo(UN)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Rondo(UN)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Rondo(UN)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Rondo(UN)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Rondo(UN)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Rondo(UN)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Rondo(UN)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Rondo(UN)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Rondo(UN)	2010	USA Area	IMMO(Immobilizer)	Read Data Stream	
Rondo(UN)	2010	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Rondo(UN)	2010	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Rondo(UN)	2010	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Rondo(UN)	2010	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Rondo(UN)	2010	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Rondo(UN)	2010	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Rondo(UN)	2010	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Rondo(UN)	2010	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Rondo(UN)	2010	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Version Information	
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Read Fault Code	
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Read Data Stream	
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Actuation Test	
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Rondo(UN)	2009	USA Area	TCM(Transmission Control Module)	Version Information	
Rondo(UN)	2009	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Rondo(UN)	2009	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Rondo(UN)	2009	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Rondo(UN)	2009	USA Area	TCM(Transmission Control Module)	Actuation Test	
Rondo(UN)	2009	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Rondo(UN)	2009	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Rondo(UN)	2009	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Rondo(UN)	2009	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Rondo(UN)	2009	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Rondo(UN)	2009	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Rondo(UN)	2009	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Rondo(UN)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Rondo(UN)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Rondo(UN)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Rondo(UN)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Rondo(UN)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Rondo(UN)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset

model	year	area	system	function	subfunction
Rondo(UN)	2009	USA Area	AC(Air Conditioning)	Version Information	
Rondo(UN)	2009	USA Area	AC(Air Conditioning)	Read Fault Code	
Rondo(UN)	2009	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Rondo(UN)	2009	USA Area	AC(Air Conditioning)	Read Data Stream	
Rondo(UN)	2009	USA Area	AC(Air Conditioning)	Actuation Test	
Rondo(UN)	2009	USA Area	BCM(Body Control Module)	Version Information	
Rondo(UN)	2009	USA Area	BCM(Body Control Module)	Read Data Stream	
Rondo(UN)	2009	USA Area	BCM(Body Control Module)	Actuation Test	
Rondo(UN)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Rondo(UN)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Rondo(UN)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Rondo(UN)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Rondo(UN)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Rondo(UN)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Rondo(UN)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Rondo(UN)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Rondo(UN)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Rondo(UN)	2009	USA Area	IMMO(Immobilizer)	Read Data Stream	
Rondo(UN)	2009	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Rondo(UN)	2009	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Rondo(UN)	2009	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Rondo(UN)	2009	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Rondo(UN)	2009	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Rondo(UN)	2009	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Rondo(UN)	2009	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Rondo(UN)	2009	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Rondo(UN)	2009	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Version Information	
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Read Fault Code	
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Read Data Stream	
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Actuation Test	
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Rondo(UN)	2008	USA Area	TCM(Transmission Control Module)	Version Information	
Rondo(UN)	2008	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Rondo(UN)	2008	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Rondo(UN)	2008	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Rondo(UN)	2008	USA Area	TCM(Transmission Control Module)	Actuation Test	
Rondo(UN)	2008	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Rondo(UN)	2008	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Rondo(UN)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Rondo(UN)	2008	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Rondo(UN)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Rondo(UN)	2008	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Rondo(UN)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Rondo(UN)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Rondo(UN)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Rondo(UN)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Rondo(UN)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
Rondo(UN)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Rondo(UN)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Rondo(UN)	2008	USA Area	AC(Air Conditioning)	Version Information	
Rondo(UN)	2008	USA Area	AC(Air Conditioning)	Read Fault Code	
Rondo(UN)	2008	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Rondo(UN)	2008	USA Area	AC(Air Conditioning)	Read Data Stream	
Rondo(UN)	2008	USA Area	AC(Air Conditioning)	Actuation Test	
Rondo(UN)	2008	USA Area	BCM(Body Control Module)	Version Information	
Rondo(UN)	2008	USA Area	BCM(Body Control Module)	Read Data Stream	
Rondo(UN)	2008	USA Area	BCM(Body Control Module)	Actuation Test	
Rondo(UN)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Rondo(UN)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Rondo(UN)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Rondo(UN)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Rondo(UN)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Rondo(UN)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Rondo(UN)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Rondo(UN)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Rondo(UN)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Rondo(UN)	2008	USA Area	IMMO(Immobilizer)	Read Data Stream	
Rondo(UN)	2008	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Rondo(UN)	2008	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Rondo(UN)	2008	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Rondo(UN)	2008	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Rondo(UN)	2008	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Rondo(UN)	2008	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Rondo(UN)	2008	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Rondo(UN)	2008	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Rondo(UN)	2008	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Read Fault Code	
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Read Data Stream	
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Actuation Test	
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	MAF Circuit Test
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	ECT Circuit Test
Rondo(UN)	2007	USA Area	TCM(Transmission Control Module)	Version Information	
Rondo(UN)	2007	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Rondo(UN)	2007	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Rondo(UN)	2007	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Rondo(UN)	2007	USA Area	TCM(Transmission Control Module)	Actuation Test	
Rondo(UN)	2007	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Rondo(UN)	2007	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Rondo(UN)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Rondo(UN)	2007	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Rondo(UN)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Rondo(UN)	2007	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Rondo(UN)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Rondo(UN)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Rondo(UN)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	

model	year	area	system	function	subfunction
Rondo(UN)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Rondo(UN)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Rondo(UN)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Rondo(UN)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Rondo(UN)	2007	USA Area	AC(Air Conditioning)	Version Information	
Rondo(UN)	2007	USA Area	AC(Air Conditioning)	Read Fault Code	
Rondo(UN)	2007	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Rondo(UN)	2007	USA Area	AC(Air Conditioning)	Read Data Stream	
Rondo(UN)	2007	USA Area	AC(Air Conditioning)	Actuation Test	
Rondo(UN)	2007	USA Area	BCM(Body Control Module)	Version Information	
Rondo(UN)	2007	USA Area	BCM(Body Control Module)	Read Data Stream	
Rondo(UN)	2007	USA Area	BCM(Body Control Module)	Actuation Test	
Rondo(UN)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Rondo(UN)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Rondo(UN)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Rondo(UN)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Rondo(UN)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Rondo(UN)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Rondo(UN)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Rondo(UN)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Rondo(UN)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Rondo(UN)	2007	USA Area	IMMO(Immobilizer)	Read Data Stream	
Rondo(UN)	2007	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Rondo(UN)	2007	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Rondo(UN)	2007	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Rondo(UN)	2007	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Rondo(UN)	2007	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Rondo(UN)	2007	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Rondo(UN)	2007	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Rondo(UN)	2007	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting

model	year	area	system	function	subfunction
Rondo(UN)	2007	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(GQ)	2005	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(GQ)	2005	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(GQ)	2005	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(GQ)	2005	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(GQ)	2005	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(GQ)	2005	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(GQ)	2005	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(GQ)	2005	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(GQ)	2005	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sedona(GQ)	2005	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(GQ)	2005	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sedona(GQ)	2005	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(GQ)	2005	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(GQ)	2005	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(GQ)	2005	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(GQ)	2005	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(GQ)	2005	USA Area	TCM(Transmission Control Module)	Special Function	Init Of TCU Learning
Sedona(GQ)	2005	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(GQ)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(GQ)	2005	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(GQ)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(GQ)	2005	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(GQ)	2005	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(GQ)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(GQ)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(GQ)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(GQ)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(GQ)	2004	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(GQ)	2004	USA Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sedona(GQ)	2004	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(GQ)	2004	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(GQ)	2004	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(GQ)	2004	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(GQ)	2004	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sedona(GQ)	2004	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(GQ)	2004	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sedona(GQ)	2004	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(GQ)	2004	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(GQ)	2004	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(GQ)	2004	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(GQ)	2004	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(GQ)	2004	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(GQ)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(GQ)	2004	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(GQ)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(GQ)	2004	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(GQ)	2004	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(GQ)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(GQ)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(GQ)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(GQ)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(GQ)	2003	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(GQ)	2003	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(GQ)	2003	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(GQ)	2003	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(GQ)	2003	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(GQ)	2003	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(GQ)	2003	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sedona(GQ)	2003	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Sedona(GQ)	2003	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sedona(GQ)	2003	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(GQ)	2003	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(GQ)	2003	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(GQ)	2003	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(GQ)	2003	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(GQ)	2003	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(GQ)	2003	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(GQ)	2003	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(GQ)	2003	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(GQ)	2003	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(GQ)	2003	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(GQ)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(GQ)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(GQ)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(GQ)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(GQ)	2002	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(GQ)	2002	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(GQ)	2002	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(GQ)	2002	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(GQ)	2002	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(GQ)	2002	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(GQ)	2002	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sedona(GQ)	2002	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(GQ)	2002	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sedona(GQ)	2002	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(GQ)	2002	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(GQ)	2002	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(GQ)	2002	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(GQ)	2002	USA Area	TCM(Transmission Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sedona(GQ)	2002	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(GQ)	2002	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(GQ)	2002	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(GQ)	2002	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(GQ)	2002	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(GQ)	2002	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(GQ)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(GQ)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(GQ)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(GQ)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Special Function	VCM Learning
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(VQ)	2014	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Sedona(VQ)	2014	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(VQ)	2014	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(VQ)	2014	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(VQ)	2014	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(VQ)	2014	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(VQ)	2014	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(VQ)	2014	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Sedona(VQ)	2014	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(VQ)	2014	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(VQ)	2014	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(VQ)	2014	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(VQ)	2014	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(VQ)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(VQ)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Sedona(VQ)	2014	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sedona(VQ)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(VQ)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(VQ)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(VQ)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(VQ)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Sedona(VQ)	2014	USA Area	AC(Air Conditioning)	Version Information	
Sedona(VQ)	2014	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(VQ)	2014	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(VQ)	2014	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(VQ)	2014	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(VQ)	2014	USA Area	BCM(Body Control Module)	Version Information	
Sedona(VQ)	2014	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(VQ)	2014	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sedona(VQ)	2014	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(VQ)	2014	USA Area	BCM(Body Control Module)	Actuation Test	
Sedona(VQ)	2014	USA Area	BCM(Body Control Module)	Special Function	User Option
Sedona(VQ)	2014	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(VQ)	2014	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sedona(VQ)	2014	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sedona(VQ)	2014	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(VQ)	2014	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode

model	year	area	system	function	subfunction
Sedona(VQ)	2014	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(VQ)	2014	USA Area	PSD(Power Sliding Door)	Version Information	
Sedona(VQ)	2014	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(VQ)	2014	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(VQ)	2014	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(VQ)	2014	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(VQ)	2014	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(VQ)	2014	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(VQ)	2014	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(VQ)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(VQ)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(VQ)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(VQ)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(VQ)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sedona(VQ)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(VQ)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(VQ)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sedona(VQ)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Special Function	VCM Learning
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test

model	year	area	system	function	subfunction
Sedona(VQ)	2013	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Sedona(VQ)	2013	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(VQ)	2013	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(VQ)	2013	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(VQ)	2013	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(VQ)	2013	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(VQ)	2013	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(VQ)	2013	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sedona(VQ)	2013	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(VQ)	2013	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(VQ)	2013	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(VQ)	2013	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(VQ)	2013	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(VQ)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(VQ)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Sedona(VQ)	2013	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sedona(VQ)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(VQ)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(VQ)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(VQ)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(VQ)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Sedona(VQ)	2013	USA Area	AC(Air Conditioning)	Version Information	
Sedona(VQ)	2013	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(VQ)	2013	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(VQ)	2013	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(VQ)	2013	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(VQ)	2013	USA Area	BCM(Body Control Module)	Version Information	
Sedona(VQ)	2013	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(VQ)	2013	USA Area	BCM(Body Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sedona(VQ)	2013	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(VQ)	2013	USA Area	BCM(Body Control Module)	Actuation Test	
Sedona(VQ)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(VQ)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(VQ)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(VQ)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(VQ)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sedona(VQ)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(VQ)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(VQ)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sedona(VQ)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(VQ)	2013	USA Area	PSD(Power Sliding Door)	Version Information	
Sedona(VQ)	2013	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(VQ)	2013	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(VQ)	2013	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(VQ)	2013	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(VQ)	2013	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(VQ)	2013	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(VQ)	2013	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(VQ)	2013	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(VQ)	2013	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sedona(VQ)	2013	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sedona(VQ)	2013	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(VQ)	2013	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sedona(VQ)	2013	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(VQ)	2013	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sedona(VQ)	2013	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Special Function	VCM Learning
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(VQ)	2012	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Sedona(VQ)	2012	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(VQ)	2012	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(VQ)	2012	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(VQ)	2012	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(VQ)	2012	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(VQ)	2012	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(VQ)	2012	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sedona(VQ)	2012	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(VQ)	2012	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(VQ)	2012	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(VQ)	2012	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(VQ)	2012	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(VQ)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(VQ)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Sedona(VQ)	2012	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sedona(VQ)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(VQ)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(VQ)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(VQ)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	

model	year	area	system	function	subfunction
Sedona(VQ)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Sedona(VQ)	2012	USA Area	AC(Air Conditioning)	Version Information	
Sedona(VQ)	2012	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(VQ)	2012	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(VQ)	2012	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(VQ)	2012	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(VQ)	2012	USA Area	BCM(Body Control Module)	Version Information	
Sedona(VQ)	2012	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(VQ)	2012	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sedona(VQ)	2012	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(VQ)	2012	USA Area	BCM(Body Control Module)	Actuation Test	
Sedona(VQ)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(VQ)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(VQ)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(VQ)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(VQ)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sedona(VQ)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(VQ)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(VQ)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sedona(VQ)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(VQ)	2012	USA Area	PSD(Power Sliding Door)	Version Information	
Sedona(VQ)	2012	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(VQ)	2012	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(VQ)	2012	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(VQ)	2012	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(VQ)	2012	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(VQ)	2012	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(VQ)	2012	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(VQ)	2012	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(VQ)	2012	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing

model	year	area	system	function	subfunction
Sedona(VQ)	2012	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sedona(VQ)	2012	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(VQ)	2012	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sedona(VQ)	2012	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(VQ)	2012	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sedona(VQ)	2012	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Special Function	VCM Learning
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(VQ)	2011	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Sedona(VQ)	2011	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(VQ)	2011	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(VQ)	2011	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(VQ)	2011	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(VQ)	2011	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(VQ)	2011	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(VQ)	2011	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sedona(VQ)	2011	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(VQ)	2011	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(VQ)	2011	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(VQ)	2011	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	

model	year	area	system	function	subfunction
Sedona(VQ)	2011	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(VQ)	2011	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(VQ)	2011	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Sedona(VQ)	2011	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sedona(VQ)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(VQ)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(VQ)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(VQ)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(VQ)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Sedona(VQ)	2011	USA Area	AC(Air Conditioning)	Version Information	
Sedona(VQ)	2011	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(VQ)	2011	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(VQ)	2011	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(VQ)	2011	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(VQ)	2011	USA Area	BCM(Body Control Module)	Version Information	
Sedona(VQ)	2011	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(VQ)	2011	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sedona(VQ)	2011	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(VQ)	2011	USA Area	BCM(Body Control Module)	Actuation Test	
Sedona(VQ)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(VQ)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(VQ)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(VQ)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(VQ)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sedona(VQ)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(VQ)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(VQ)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sedona(VQ)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(VQ)	2011	USA Area	PSD(Power Sliding Door)	Version Information	

model	year	area	system	function	subfunction
Sedona(VQ)	2011	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(VQ)	2011	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(VQ)	2011	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(VQ)	2011	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(VQ)	2011	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(VQ)	2011	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(VQ)	2011	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(VQ)	2011	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(VQ)	2011	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sedona(VQ)	2011	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sedona(VQ)	2011	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(VQ)	2011	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sedona(VQ)	2011	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(VQ)	2011	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sedona(VQ)	2011	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(VQ)	2010	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sedona(VQ)	2010	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(VQ)	2010	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(VQ)	2010	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sedona(VQ)	2010	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(VQ)	2010	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(VQ)	2010	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(VQ)	2010	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sedona(VQ)	2010	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(VQ)	2010	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(VQ)	2010	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(VQ)	2010	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(VQ)	2010	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(VQ)	2010	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sedona(VQ)	2010	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(VQ)	2010	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sedona(VQ)	2010	USA Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Sedona(VQ)	2010	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Sedona(VQ)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(VQ)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(VQ)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(VQ)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(VQ)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Sedona(VQ)	2010	USA Area	AC(Air Conditioning)	Version Information	
Sedona(VQ)	2010	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(VQ)	2010	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(VQ)	2010	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(VQ)	2010	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(VQ)	2010	USA Area	BCM(Body Control Module)	Version Information	
Sedona(VQ)	2010	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(VQ)	2010	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sedona(VQ)	2010	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(VQ)	2010	USA Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sedona(VQ)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(VQ)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(VQ)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(VQ)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(VQ)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sedona(VQ)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(VQ)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(VQ)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sedona(VQ)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(VQ)	2010	USA Area	PSD(Power Sliding Door)	Version Information	
Sedona(VQ)	2010	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(VQ)	2010	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(VQ)	2010	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(VQ)	2010	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(VQ)	2010	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(VQ)	2010	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(VQ)	2010	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(VQ)	2010	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(VQ)	2010	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sedona(VQ)	2010	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sedona(VQ)	2010	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(VQ)	2010	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sedona(VQ)	2010	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(VQ)	2010	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sedona(VQ)	2010	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(VQ)	2009	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sedona(VQ)	2009	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(VQ)	2009	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(VQ)	2009	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(VQ)	2009	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(VQ)	2009	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(VQ)	2009	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(VQ)	2009	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sedona(VQ)	2009	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(VQ)	2009	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(VQ)	2009	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(VQ)	2009	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(VQ)	2009	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(VQ)	2009	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sedona(VQ)	2009	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(VQ)	2009	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sedona(VQ)	2009	USA Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Sedona(VQ)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(VQ)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(VQ)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(VQ)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(VQ)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sedona(VQ)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset

model	year	area	system	function	subfunction
Sedona(VQ)	2009	USA Area	AC(Air Conditioning)	Version Information	
Sedona(VQ)	2009	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(VQ)	2009	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(VQ)	2009	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(VQ)	2009	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(VQ)	2009	USA Area	BCM(Body Control Module)	Version Information	
Sedona(VQ)	2009	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(VQ)	2009	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sedona(VQ)	2009	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(VQ)	2009	USA Area	BCM(Body Control Module)	Actuation Test	
Sedona(VQ)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(VQ)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(VQ)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(VQ)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(VQ)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sedona(VQ)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(VQ)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(VQ)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sedona(VQ)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(VQ)	2009	USA Area	PSD(Power Sliding Door)	Version Information	
Sedona(VQ)	2009	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(VQ)	2009	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(VQ)	2009	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(VQ)	2009	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(VQ)	2009	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(VQ)	2009	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(VQ)	2009	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(VQ)	2009	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(VQ)	2009	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sedona(VQ)	2009	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Sedona(VQ)	2009	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(VQ)	2009	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sedona(VQ)	2009	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(VQ)	2009	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sedona(VQ)	2009	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(VQ)	2008	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sedona(VQ)	2008	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(VQ)	2008	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(VQ)	2008	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(VQ)	2008	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(VQ)	2008	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(VQ)	2008	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(VQ)	2008	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sedona(VQ)	2008	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(VQ)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(VQ)	2008	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(VQ)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(VQ)	2008	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(VQ)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration

model	year	area	system	function	subfunction
Sedona(VQ)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(VQ)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sedona(VQ)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Sedona(VQ)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(VQ)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(VQ)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(VQ)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(VQ)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sedona(VQ)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Sedona(VQ)	2008	USA Area	AC(Air Conditioning)	Version Information	
Sedona(VQ)	2008	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(VQ)	2008	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(VQ)	2008	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(VQ)	2008	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(VQ)	2008	USA Area	BCM(Body Control Module)	Version Information	
Sedona(VQ)	2008	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(VQ)	2008	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sedona(VQ)	2008	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(VQ)	2008	USA Area	BCM(Body Control Module)	Actuation Test	
Sedona(VQ)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(VQ)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(VQ)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(VQ)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(VQ)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sedona(VQ)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(VQ)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(VQ)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sedona(VQ)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(VQ)	2008	USA Area	PSD(Power Sliding Door)	Version Information	

model	year	area	system	function	subfunction
Sedona(VQ)	2008	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(VQ)	2008	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(VQ)	2008	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(VQ)	2008	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(VQ)	2008	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(VQ)	2008	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(VQ)	2008	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(VQ)	2008	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(VQ)	2008	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sedona(VQ)	2008	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sedona(VQ)	2008	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(VQ)	2008	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sedona(VQ)	2008	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(VQ)	2008	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sedona(VQ)	2008	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(VQ)	2007	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sedona(VQ)	2007	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(VQ)	2007	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(VQ)	2007	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sedona(VQ)	2007	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(VQ)	2007	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(VQ)	2007	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(VQ)	2007	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sedona(VQ)	2007	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(VQ)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(VQ)	2007	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(VQ)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(VQ)	2007	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(VQ)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sedona(VQ)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(VQ)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sedona(VQ)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Sedona(VQ)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(VQ)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(VQ)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(VQ)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(VQ)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sedona(VQ)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Sedona(VQ)	2007	USA Area	AC(Air Conditioning)	Version Information	
Sedona(VQ)	2007	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(VQ)	2007	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(VQ)	2007	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(VQ)	2007	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(VQ)	2007	USA Area	BCM(Body Control Module)	Version Information	
Sedona(VQ)	2007	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(VQ)	2007	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sedona(VQ)	2007	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(VQ)	2007	USA Area	BCM(Body Control Module)	Actuation Test	

model	year	area	system	function	subfunction
Sedona(VQ)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(VQ)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(VQ)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(VQ)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(VQ)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sedona(VQ)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(VQ)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(VQ)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sedona(VQ)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(VQ)	2007	USA Area	PSD(Power Sliding Door)	Version Information	
Sedona(VQ)	2007	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(VQ)	2007	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(VQ)	2007	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(VQ)	2007	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(VQ)	2007	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(VQ)	2007	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(VQ)	2007	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(VQ)	2007	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(VQ)	2007	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sedona(VQ)	2007	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sedona(VQ)	2007	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(VQ)	2007	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sedona(VQ)	2007	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(VQ)	2007	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sedona(VQ)	2007	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(VQ)	2006	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sedona(VQ)	2006	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(VQ)	2006	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(VQ)	2006	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(VQ)	2006	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(VQ)	2006	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(VQ)	2006	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(VQ)	2006	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sedona(VQ)	2006	USA Area	ESP(Electronic Stability Program)	Version Information	
Sedona(VQ)	2006	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sedona(VQ)	2006	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sedona(VQ)	2006	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sedona(VQ)	2006	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sedona(VQ)	2006	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Sedona(VQ)	2006	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sedona(VQ)	2006	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sedona(VQ)	2006	USA Area	ESP(Electronic Stability Program)	Special Function	Solenoid Valve Test
Sedona(VQ)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(VQ)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(VQ)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(VQ)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(VQ)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sedona(VQ)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset

model	year	area	system	function	subfunction
Sedona(VQ)	2006	USA Area	AC(Air Conditioning)	Version Information	
Sedona(VQ)	2006	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(VQ)	2006	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(VQ)	2006	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(VQ)	2006	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(VQ)	2006	USA Area	BCM(Body Control Module)	Version Information	
Sedona(VQ)	2006	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(VQ)	2006	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sedona(VQ)	2006	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(VQ)	2006	USA Area	BCM(Body Control Module)	Actuation Test	
Sedona(VQ)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(VQ)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(VQ)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(VQ)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(VQ)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sedona(VQ)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(VQ)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(VQ)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sedona(VQ)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(VQ)	2006	USA Area	PSD(Power Sliding Door)	Version Information	
Sedona(VQ)	2006	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(VQ)	2006	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(VQ)	2006	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(VQ)	2006	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(VQ)	2006	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(VQ)	2006	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(VQ)	2006	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(VQ)	2006	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(VQ)	2006	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sedona(VQ)	2006	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Sedona(VQ)	2006	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(VQ)	2006	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(VQ)	2006	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sedona(VQ)	2006	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sedona(YP)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(YP)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(YP)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(YP)	2017	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(YP)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(YP)	2017	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(YP)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(YP)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(YP)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(YP)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(YP)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(YP)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(YP)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(YP)	2017	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(YP)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(YP)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sedona(YP)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sedona(YP)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sedona(YP)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sedona(YP)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sedona(YP)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sedona(YP)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)

model	year	area	system	function	subfunction
Sedona(YP)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sedona(YP)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Sedona(YP)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sedona(YP)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(YP)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(YP)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(YP)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(YP)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sedona(YP)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Sedona(YP)	2017	USA Area	AC(Air Conditioning)	Version Information	
Sedona(YP)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(YP)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(YP)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(YP)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sedona(YP)	2017	USA Area	BCM(Body Control Module)	Version Information	
Sedona(YP)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(YP)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(YP)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Sedona(YP)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Sedona(YP)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sedona(YP)	2017	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sedona(YP)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Sedona(YP)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sedona(YP)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sedona(YP)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sedona(YP)	2017	USA Area	Smart Key Unit	Version Information	

model	year	area	system	function	subfunction
Sedona(YP)	2017	USA Area	Smart Key Unit	Read Fault Code	
Sedona(YP)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Sedona(YP)	2017	USA Area	Smart Key Unit	Read Data Stream	
Sedona(YP)	2017	USA Area	Smart Key Unit	Actuation Test	
Sedona(YP)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sedona(YP)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sedona(YP)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Sedona(YP)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sedona(YP)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sedona(YP)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sedona(YP)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(YP)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(YP)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(YP)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(YP)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(YP)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sedona(YP)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(YP)	2017	USA Area	Head Lamp	Version Information	
Sedona(YP)	2017	USA Area	Head Lamp	Read Fault Code	
Sedona(YP)	2017	USA Area	Head Lamp	Clear Fault Memory	
Sedona(YP)	2017	USA Area	Head Lamp	Read Data Stream	
Sedona(YP)	2017	USA Area	Head Lamp	Actuation Test	
Sedona(YP)	2017	USA Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Sedona(YP)	2017	USA Area	Head Lamp	Special Function	Headlamp Leveling
Sedona(YP)	2017	USA Area	Head Lamp	Special Function	Calibration
Sedona(YP)	2017	USA Area	Head Lamp	Special Function	Parameter Download
Sedona(YP)	2017	USA Area	IMMO(Immobilizer)	Read Fault Code	
Sedona(YP)	2017	USA Area	IMMO(Immobilizer)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sedona(YP)	2017	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(YP)	2017	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sedona(YP)	2017	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sedona(YP)	2017	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(YP)	2017	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(YP)	2017	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sedona(YP)	2017	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sedona(YP)	2017	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(YP)	2017	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(YP)	2017	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(YP)	2017	USA Area	PTG(Power Tail Gate)	Special Function	Power Tailgate Mode
Sedona(YP)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
Sedona(YP)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Sedona(YP)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Sedona(YP)	2017	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Sedona(YP)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Sedona(YP)	2017	USA Area	MFC(Multi Function Camera)	Version Information	
Sedona(YP)	2017	USA Area	MFC(Multi Function Camera)	Read Fault Code	
Sedona(YP)	2017	USA Area	MFC(Multi Function Camera)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	MFC(Multi Function Camera)	Read Data Stream	
Sedona(YP)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPC Calibration
Sedona(YP)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Sedona(YP)	2017	USA Area	MFC(Multi Function Camera)	Special Function	Variant Coding
Sedona(YP)	2017	USA Area	SCC(Smart Cruise Control)	Version Information	
Sedona(YP)	2017	USA Area	SCC(Smart Cruise Control)	Read Fault Code	
Sedona(YP)	2017	USA Area	SCC(Smart Cruise Control)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	SCC(Smart Cruise Control)	Read Data Stream	
Sedona(YP)	2017	USA Area	Amplifier	Version Information	

model	year	area	system	function	subfunction
Sedona(YP)	2017	USA Area	Amplifier	Special Function	AMP Operation Test
Sedona(YP)	2017	USA Area	AHS(Active Hood System)	Version Information	
Sedona(YP)	2017	USA Area	AHS(Active Hood System)	Read Fault Code	
Sedona(YP)	2017	USA Area	AHS(Active Hood System)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	SVMS(Surround View Monitor System)	Version Information	
Sedona(YP)	2017	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Sedona(YP)	2017	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Sedona(YP)	2017	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Sedona(YP)	2017	USA Area	PSD(Power Sliding Door)	Version Information	
Sedona(YP)	2017	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(YP)	2017	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(YP)	2017	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(YP)	2017	USA Area	PSD(Power Sliding Door)	Special Function	User Option
Sedona(YP)	2017	USA Area	Telematics Unit	Version Information	
Sedona(YP)	2017	USA Area	Telematics Unit	Read Fault Code	
Sedona(YP)	2017	USA Area	Telematics Unit	Clear Fault Memory	
Sedona(YP)	2016	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(YP)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(YP)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(YP)	2016	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sedona(YP)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(YP)	2016	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(YP)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(YP)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(YP)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(YP)	2016	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(YP)	2016	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(YP)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sedona(YP)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(YP)	2016	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(YP)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(YP)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sedona(YP)	2016	USA Area	ESC(Electronic Stability Control)	Version Information	
Sedona(YP)	2016	USA Area	ESC(Electronic Stability Control)	Read Fault Code	
Sedona(YP)	2016	USA Area	ESC(Electronic Stability Control)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	ESC(Electronic Stability Control)	Read Data Stream	
Sedona(YP)	2016	USA Area	ESC(Electronic Stability Control)	Actuation Test	
Sedona(YP)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sedona(YP)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	HCU Air Bleeding Mode
Sedona(YP)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	SAS Calibration(Can-Esp Only)
Sedona(YP)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sedona(YP)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	Variant Coding
Sedona(YP)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sedona(YP)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sedona(YP)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sedona(YP)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sedona(YP)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sedona(YP)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Sedona(YP)	2016	USA Area	AC(Air Conditioning)	Version Information	
Sedona(YP)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(YP)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(YP)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(YP)	2016	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sedona(YP)	2016	USA Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Sedona(YP)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(YP)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(YP)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
Sedona(YP)	2016	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sedona(YP)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
Sedona(YP)	2016	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sedona(YP)	2016	USA Area	Smart Key Unit	Version Information	
Sedona(YP)	2016	USA Area	Smart Key Unit	Read Fault Code	
Sedona(YP)	2016	USA Area	Smart Key Unit	Clear Fault Memory	
Sedona(YP)	2016	USA Area	Smart Key Unit	Read Data Stream	
Sedona(YP)	2016	USA Area	Smart Key Unit	Actuation Test	
Sedona(YP)	2016	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sedona(YP)	2016	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sedona(YP)	2016	USA Area	Smart Key Unit	Special Function	SMK Status Information
Sedona(YP)	2016	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sedona(YP)	2016	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sedona(YP)	2016	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sedona(YP)	2016	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Sedona(YP)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sedona(YP)	2016	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sedona(YP)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sedona(YP)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(YP)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(YP)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(YP)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(YP)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(YP)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Sedona(YP)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(YP)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sedona(YP)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sedona(YP)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sedona(YP)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sedona(YP)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sedona(YP)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sedona(YP)	2016	USA Area	LDWS(Lane Departure Warning System)	Version Information	
Sedona(YP)	2016	USA Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sedona(YP)	2016	USA Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sedona(YP)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sedona(YP)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Sedona(YP)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Sedona(YP)	2016	USA Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sedona(YP)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sedona(YP)	2016	USA Area	PSD(Power Sliding Door)	Version Information	
Sedona(YP)	2016	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(YP)	2016	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(YP)	2016	USA Area	PSD(Power Sliding Door)	Special Function	User Option
Sedona(YP)	2016	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(YP)	2016	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(YP)	2016	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(YP)	2016	USA Area	PTG(Power Tail Gate)	Special Function	Power Tailgate Mode
Sedona(YP)	2016	USA Area	SVMS(Surround View Monitor System)	Version Information	
Sedona(YP)	2016	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	

model	year	area	system	function	subfunction
Sedona(YP)	2016	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Sedona(YP)	2016	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Sedona(YP)	2016	USA Area	CCS(Cruise Control System)	Version Information	
Sedona(YP)	2016	USA Area	CCS(Cruise Control System)	Read Fault Code	
Sedona(YP)	2016	USA Area	CCS(Cruise Control System)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	CCS(Cruise Control System)	Read Data Stream	
Sedona(YP)	2016	USA Area	CCS(Cruise Control System)	Special Function	SCC Alignment
Sedona(YP)	2016	USA Area	IMMO(Immobilizer)	Read Fault Code	
Sedona(YP)	2016	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(YP)	2016	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sedona(YP)	2016	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sedona(YP)	2016	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(YP)	2016	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(YP)	2016	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sedona(YP)	2016	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sedona(YP)	2016	USA Area	AHS(Active Hood System)	Version Information	
Sedona(YP)	2016	USA Area	AHS(Active Hood System)	Read Fault Code	
Sedona(YP)	2016	USA Area	AHS(Active Hood System)	Clear Fault Memory	
Sedona(YP)	2016	USA Area	Telematics Unit	Version Information	
Sedona(YP)	2016	USA Area	Telematics Unit	Read Fault Code	
Sedona(YP)	2016	USA Area	Telematics Unit	Clear Fault Memory	
Sedona(YP)	2016	USA Area	Amplifier	Version Information	
Sedona(YP)	2016	USA Area	Amplifier	Special Function	AMP Operation Test
Sedona(YP)	2015	USA Area	ECM(Engine Control Module)	Version Information	
Sedona(YP)	2015	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sedona(YP)	2015	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sedona(YP)	2015	USA Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Sedona(YP)	2015	USA Area	ECM(Engine Control Module)	Actuation Test	
Sedona(YP)	2015	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sedona(YP)	2015	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sedona(YP)	2015	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sedona(YP)	2015	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sedona(YP)	2015	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sedona(YP)	2015	USA Area	TCM(Transmission Control Module)	Version Information	
Sedona(YP)	2015	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sedona(YP)	2015	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sedona(YP)	2015	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sedona(YP)	2015	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sedona(YP)	2015	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sedona(YP)	2015	USA Area	ESP(Electronic Stability Program)	Version Information	
Sedona(YP)	2015	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sedona(YP)	2015	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sedona(YP)	2015	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sedona(YP)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sedona(YP)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sedona(YP)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sedona(YP)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sedona(YP)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sedona(YP)	2015	USA Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Sedona(YP)	2015	USA Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Sedona(YP)	2015	USA Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Sedona(YP)	2015	USA Area	SRS(Supplemental Inflatable Restraint)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Sedona(YP)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Sedona(YP)	2015	USA Area	AC(Air Conditioning)	Version Information	
Sedona(YP)	2015	USA Area	AC(Air Conditioning)	Read Fault Code	
Sedona(YP)	2015	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	AC(Air Conditioning)	Read Data Stream	
Sedona(YP)	2015	USA Area	AC(Air Conditioning)	Actuation Test	
Sedona(YP)	2015	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sedona(YP)	2015	USA Area	BCM(Body Control Module)	Version Information	
Sedona(YP)	2015	USA Area	BCM(Body Control Module)	Read Fault Code	
Sedona(YP)	2015	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	BCM(Body Control Module)	Read Data Stream	
Sedona(YP)	2015	USA Area	BCM(Body Control Module)	Actuation Test	
Sedona(YP)	2015	USA Area	BCM(Body Control Module)	Special Function	User Option
Sedona(YP)	2015	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sedona(YP)	2015	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sedona(YP)	2015	USA Area	Smart Key Unit	Version Information	
Sedona(YP)	2015	USA Area	Smart Key Unit	Read Fault Code	
Sedona(YP)	2015	USA Area	Smart Key Unit	Clear Fault Memory	
Sedona(YP)	2015	USA Area	Smart Key Unit	Read Data Stream	
Sedona(YP)	2015	USA Area	Smart Key Unit	Actuation Test	
Sedona(YP)	2015	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sedona(YP)	2015	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sedona(YP)	2015	USA Area	Smart Key Unit	Special Function	SMK Status Information
Sedona(YP)	2015	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sedona(YP)	2015	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sedona(YP)	2015	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sedona(YP)	2015	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sedona(YP)	2015	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Sedona(YP)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sedona(YP)	2015	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sedona(YP)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sedona(YP)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sedona(YP)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sedona(YP)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sedona(YP)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sedona(YP)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sedona(YP)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sedona(YP)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sedona(YP)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sedona(YP)	2015	USA Area	AHS(Active Hood System)	Version Information	
Sedona(YP)	2015	USA Area	AHS(Active Hood System)	Read Fault Code	
Sedona(YP)	2015	USA Area	AHS(Active Hood System)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sedona(YP)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sedona(YP)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sedona(YP)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sedona(YP)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sedona(YP)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sedona(YP)	2015	USA Area	LDWS(Lane Departure Warning System)	Version Information	
Sedona(YP)	2015	USA Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sedona(YP)	2015	USA Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sedona(YP)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sedona(YP)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Sedona(YP)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Sedona(YP)	2015	USA Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sedona(YP)	2015	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration

model	year	area	system	function	subfunction
Sedona(YP)	2015	USA Area	PSD(Power Sliding Door)	Version Information	
Sedona(YP)	2015	USA Area	PSD(Power Sliding Door)	Read Fault Code	
Sedona(YP)	2015	USA Area	PSD(Power Sliding Door)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	PSD(Power Sliding Door)	Read Data Stream	
Sedona(YP)	2015	USA Area	PSD(Power Sliding Door)	Special Function	User Option
Sedona(YP)	2015	USA Area	PTG(Power Tail Gate)	Version Information	
Sedona(YP)	2015	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sedona(YP)	2015	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sedona(YP)	2015	USA Area	PTG(Power Tail Gate)	Special Function	Power Tailgate Mode
Sedona(YP)	2015	USA Area	IMMO(Immobilizer)	Read Fault Code	
Sedona(YP)	2015	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sedona(YP)	2015	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sedona(YP)	2015	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sedona(YP)	2015	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sedona(YP)	2015	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sedona(YP)	2015	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sedona(YP)	2015	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sedona(YP)	2015	USA Area	CCS(Cruise Control System)	Version Information	
Sedona(YP)	2015	USA Area	CCS(Cruise Control System)	Read Fault Code	
Sedona(YP)	2015	USA Area	CCS(Cruise Control System)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	CCS(Cruise Control System)	Read Data Stream	
Sedona(YP)	2015	USA Area	CCS(Cruise Control System)	Special Function	SCC Alignment
Sedona(YP)	2015	USA Area	SVMS(Surround View Monitor System)	Version Information	
Sedona(YP)	2015	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Sedona(YP)	2015	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Sedona(YP)	2015	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Sedona(YP)	2015	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Sedona(YP)	2015	USA Area	Telematics Unit	Version Information	

model	year	area	system	function	subfunction
Sedona(YP)	2015	USA Area	Telematics Unit	Read Fault Code	
Sedona(YP)	2015	USA Area	Telematics Unit	Clear Fault Memory	
Sephia(FB)	2001	USA Area	ECM(Engine Control Module)	Version Information	
Sephia(FB)	2001	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sephia(FB)	2001	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB)	2001	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB)	2001	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sephia(FB)	2001	USA Area	TCM(Transmission Control Module)	Version Information	
Sephia(FB)	2001	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia(FB)	2001	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia(FB)	2001	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia(FB)	2001	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sephia(FB)	2001	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sephia(FB)	2001	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sephia(FB)	2001	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sephia(FB)	2001	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sephia(FB)	2001	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sephia(FB)	2001	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sephia(FB)	2001	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB)	2001	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia(FB)	2000	USA Area	ECM(Engine Control Module)	Version Information	
Sephia(FB)	2000	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sephia(FB)	2000	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB)	2000	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB)	2000	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sephia(FB)	2000	USA Area	TCM(Transmission Control Module)	Version Information	
Sephia(FB)	2000	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia(FB)	2000	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia(FB)	2000	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia(FB)	2000	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test

model	year	area	system	function	subfunction
Sephia(FB)	2000	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sephia(FB)	2000	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sephia(FB)	2000	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sephia(FB)	2000	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sephia(FB)	2000	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sephia(FB)	2000	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sephia(FB)	2000	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB)	2000	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia(FB)	1999	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sephia(FB)	1999	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB)	1999	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB)	1999	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sephia(FB)	1999	USA Area	TCM(Transmission Control Module)	Version Information	
Sephia(FB)	1999	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia(FB)	1999	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia(FB)	1999	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia(FB)	1999	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sephia(FB)	1999	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sephia(FB)	1999	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sephia(FB)	1999	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sephia(FB)	1999	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sephia(FB)	1999	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB)	1999	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia(FB)	1998	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sephia(FB)	1998	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB)	1998	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB)	1998	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sephia(FB)	1998	USA Area	TCM(Transmission Control Module)	Version Information	
Sephia(FB)	1998	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia(FB)	1998	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sephia(FB)	1998	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia(FB)	1998	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sephia(FB)	1998	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sephia(FB)	1998	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sephia(FB)	1998	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sephia(FB)	1998	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sephia(FB)	1998	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB)	1998	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia(FB)	1997	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sephia(FB)	1997	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB)	1997	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB)	1997	USA Area	TCM(Transmission Control Module)	Version Information	
Sephia(FB)	1997	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia(FB)	1997	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia(FB)	1997	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia(FB)	1997	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sephia(FB)	1997	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB)	1997	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia(FB)	1996	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sephia(FB)	1996	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB)	1996	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB)	1996	USA Area	TCM(Transmission Control Module)	Version Information	
Sephia(FB)	1996	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia(FB)	1996	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia(FB)	1996	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia(FB)	1996	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sephia(FB)	1996	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB)	1996	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia(FB)	1996	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sephia(FB)	1995	USA Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sephia(FB)	1995	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB)	1995	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB)	1995	USA Area	TCM(Transmission Control Module)	Version Information	
Sephia(FB)	1995	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia(FB)	1995	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia(FB)	1995	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia(FB)	1995	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sephia(FB)	1995	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB)	1995	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia(FB)	1995	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sephia(FB)	1994	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sephia(FB)	1994	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sephia(FB)	1994	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sephia(FB)	1994	USA Area	TCM(Transmission Control Module)	Version Information	
Sephia(FB)	1994	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sephia(FB)	1994	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sephia(FB)	1994	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sephia(FB)	1994	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sephia(FB)	1994	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sephia(FB)	1994	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sephia(FB)	1994	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(BL)	2009	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sorento(BL)	2009	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2009	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2009	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2009	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2009	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(BL)	2009	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2009	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(BL)	2009	USA Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Sorento(BL)	2009	USA Area	ESP(Electronic Stability Program)	Version Information	
Sorento(BL)	2009	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(BL)	2009	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(BL)	2009	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(BL)	2009	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(BL)	2009	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Sorento(BL)	2009	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2009	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(BL)	2009	USA Area	ESP(Electronic Stability Program)	Special Function	Solenoid Valve Test
Sorento(BL)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sorento(BL)	2009	USA Area	AC(Air Conditioning)	Version Information	
Sorento(BL)	2009	USA Area	AC(Air Conditioning)	Read Fault Code	
Sorento(BL)	2009	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(BL)	2009	USA Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(BL)	2009	USA Area	AC(Air Conditioning)	Actuation Test	
Sorento(BL)	2009	USA Area	BCM(Body Control Module)	Version Information	
Sorento(BL)	2009	USA Area	BCM(Body Control Module)	Read Data Stream	
Sorento(BL)	2009	USA Area	BCM(Body Control Module)	Actuation Test	
Sorento(BL)	2009	USA Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2009	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2009	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2009	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2009	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(BL)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(BL)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(BL)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(BL)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(BL)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(BL)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sorento(BL)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(BL)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(BL)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(BL)	2009	USA Area	4WD Control	Version Information	
Sorento(BL)	2009	USA Area	4WD Control	Read Fault Code	
Sorento(BL)	2009	USA Area	4WD Control	Clear Fault Memory	
Sorento(BL)	2009	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2009	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(BL)	2009	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sorento(BL)	2009	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2009	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(BL)	2009	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(BL)	2009	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(BL)	2009	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving

model	year	area	system	function	subfunction
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(BL)	2008	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sorento(BL)	2008	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2008	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2008	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2008	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2008	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(BL)	2008	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2008	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(BL)	2008	USA Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Sorento(BL)	2008	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2008	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2008	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(BL)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(BL)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test

model	year	area	system	function	subfunction
Sorento(BL)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sorento(BL)	2008	USA Area	AC(Air Conditioning)	Version Information	
Sorento(BL)	2008	USA Area	AC(Air Conditioning)	Read Fault Code	
Sorento(BL)	2008	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(BL)	2008	USA Area	AC(Air Conditioning)	Read Data Stream	
Sorento(BL)	2008	USA Area	AC(Air Conditioning)	Actuation Test	
Sorento(BL)	2008	USA Area	BCM(Body Control Module)	Version Information	
Sorento(BL)	2008	USA Area	BCM(Body Control Module)	Read Data Stream	
Sorento(BL)	2008	USA Area	BCM(Body Control Module)	Actuation Test	
Sorento(BL)	2008	USA Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2008	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2008	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2008	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2008	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(BL)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(BL)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(BL)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(BL)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(BL)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(BL)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sorento(BL)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(BL)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(BL)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(BL)	2008	USA Area	Driveshaft	Version Information	
Sorento(BL)	2008	USA Area	Driveshaft	Read Fault Code	

model	year	area	system	function	subfunction
Sorento(BL)	2008	USA Area	Driveshaft	Clear Fault Memory	
Sorento(BL)	2008	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2008	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(BL)	2008	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sorento(BL)	2008	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2008	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(BL)	2008	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(BL)	2008	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(BL)	2008	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(BL)	2007	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sorento(BL)	2007	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2007	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2007	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2007	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2007	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(BL)	2007	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2007	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(BL)	2007	USA Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Sorento(BL)	2007	USA Area	ABS(Anti-Lock Brake System)	Version Information	

model	year	area	system	function	subfunction
Sorento(BL)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2007	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2007	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(BL)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(BL)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	Solenoid Valve Test
Sorento(BL)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sorento(BL)	2007	USA Area	AC(Air Conditioning)	Version Information	
Sorento(BL)	2007	USA Area	AC(Air Conditioning)	Read Fault Code	
Sorento(BL)	2007	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(BL)	2007	USA Area	AC(Air Conditioning)	Read Data Stream	
Sorento(BL)	2007	USA Area	AC(Air Conditioning)	Actuation Test	
Sorento(BL)	2007	USA Area	BCM(Body Control Module)	Version Information	
Sorento(BL)	2007	USA Area	BCM(Body Control Module)	Read Data Stream	
Sorento(BL)	2007	USA Area	BCM(Body Control Module)	Actuation Test	
Sorento(BL)	2007	USA Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2007	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2007	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2007	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2007	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(BL)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(BL)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(BL)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(BL)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(BL)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(BL)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sorento(BL)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(BL)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(BL)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(BL)	2007	USA Area	Driveshaft	Version Information	
Sorento(BL)	2007	USA Area	Driveshaft	Read Fault Code	
Sorento(BL)	2007	USA Area	Driveshaft	Clear Fault Memory	
Sorento(BL)	2007	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(BL)	2007	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(BL)	2007	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sorento(BL)	2007	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(BL)	2007	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(BL)	2007	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(BL)	2007	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(BL)	2007	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(BL)	2006	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2006	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2006	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2006	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2006	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2006	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2006	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(BL)	2006	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(BL)	2006	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sorento(BL)	2006	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(BL)	2006	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sorento(BL)	2006	USA Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Sorento(BL)	2006	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2006	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2006	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2006	USA Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Sorento(BL)	2006	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2006	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2006	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2006	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2006	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2006	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sorento(BL)	2006	USA Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2006	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2006	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2006	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2006	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2006	USA Area	Driveshaft	Read Fault Code	
Sorento(BL)	2006	USA Area	Driveshaft	Clear Fault Memory	
Sorento(BL)	2005	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2005	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2005	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2005	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2005	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2005	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2005	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(BL)	2005	USA Area	ECM(Engine Control Module)	Special Function	Write VIN

model	year	area	system	function	subfunction
Sorento(BL)	2005	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sorento(BL)	2005	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(BL)	2005	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sorento(BL)	2005	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2005	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2005	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2005	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2005	USA Area	TCM(Transmission Control Module)	Special Function	TCU Sub Rom Reset
Sorento(BL)	2005	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2005	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2005	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2005	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sorento(BL)	2005	USA Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2005	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2005	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2005	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2005	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2005	USA Area	Driveshaft	Read Fault Code	
Sorento(BL)	2005	USA Area	Driveshaft	Clear Fault Memory	
Sorento(BL)	2004	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2004	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2004	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(BL)	2004	USA Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(BL)	2004	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2004	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2004	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sorento(BL)	2004	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(BL)	2004	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sorento(BL)	2004	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2004	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2004	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2004	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2004	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2004	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2004	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2004	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2004	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2004	USA Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2004	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2004	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2004	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2004	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2004	USA Area	Driveshaft	Read Fault Code	
Sorento(BL)	2004	USA Area	Driveshaft	Clear Fault Memory	
Sorento(BL)	2003	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(BL)	2003	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(BL)	2003	USA Area	ECM(Engine Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sorento(BL)	2003	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(BL)	2003	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(BL)	2003	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(BL)	2003	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Adjust Mode
Sorento(BL)	2003	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(BL)	2003	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sorento(BL)	2003	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(BL)	2003	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(BL)	2003	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(BL)	2003	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(BL)	2003	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(BL)	2003	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(BL)	2003	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(BL)	2003	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(BL)	2003	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(BL)	2003	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(BL)	2003	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(BL)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(BL)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(BL)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(BL)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(BL)	2003	USA Area	EPS(Electronic Power Steering)	Version Information	
Sorento(BL)	2003	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(BL)	2003	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(BL)	2003	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(BL)	2003	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(BL)	2003	USA Area	Driveshaft	Read Fault Code	
Sorento(BL)	2003	USA Area	Driveshaft	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(UMA)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(UMA)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(UMA)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(UMA)	2017	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(UMA)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(UMA)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(UMA)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(UMA)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(UMA)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(UMA)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(UMA)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(UMA)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(UMA)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(UMA)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sorento(UMA)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sorento(UMA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	

model	year	area	system	function	subfunction
Sorento(UMA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(UMA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(UMA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sorento(UMA)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Sorento(UMA)	2017	USA Area	AC(Air Conditioning)	Version Information	
Sorento(UMA)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Sorento(UMA)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Sorento(UMA)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Sorento(UMA)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sorento(UMA)	2017	USA Area	BCM(Body Control Module)	Version Information	
Sorento(UMA)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Sorento(UMA)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Sorento(UMA)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Sorento(UMA)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Sorento(UMA)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sorento(UMA)	2017	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sorento(UMA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Sorento(UMA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sorento(UMA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sorento(UMA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Sorento(UMA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Sorento(UMA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sorento(UMA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Sorento(UMA)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Sorento(UMA)	2017	USA Area	Smart Key Unit	Version Information	
Sorento(UMA)	2017	USA Area	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
Sorento(UMA)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	Smart Key Unit	Read Data Stream	
Sorento(UMA)	2017	USA Area	Smart Key Unit	Actuation Test	
Sorento(UMA)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sorento(UMA)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sorento(UMA)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Sorento(UMA)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sorento(UMA)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sorento(UMA)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sorento(UMA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(UMA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(UMA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(UMA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(UMA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(UMA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(UMA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(UMA)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(UMA)	2017	USA Area	Head Lamp	Version Information	
Sorento(UMA)	2017	USA Area	Head Lamp	Read Fault Code	
Sorento(UMA)	2017	USA Area	Head Lamp	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	Head Lamp	Read Data Stream	
Sorento(UMA)	2017	USA Area	Head Lamp	Actuation Test	
Sorento(UMA)	2017	USA Area	Head Lamp	Special Function	Headlamp Leveling
Sorento(UMA)	2017	USA Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Sorento(UMA)	2017	USA Area	Head Lamp	Special Function	Parameter Download
Sorento(UMA)	2017	USA Area	IMMO(Immobilizer)	Read Fault Code	
Sorento(UMA)	2017	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(UMA)	2017	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(UMA)	2017	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sorento(UMA)	2017	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(UMA)	2017	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(UMA)	2017	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(UMA)	2017	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(UMA)	2017	USA Area	4WD Control	Version Information	
Sorento(UMA)	2017	USA Area	4WD Control	Read Fault Code	
Sorento(UMA)	2017	USA Area	4WD Control	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	4WD Control	Read Data Stream	
Sorento(UMA)	2017	USA Area	4WD Control	Actuation Test	
Sorento(UMA)	2017	USA Area	4WD Control	Special Function	Clutch Learning Reset
Sorento(UMA)	2017	USA Area	4WD Control	Special Function	Clutch Learning Read
Sorento(UMA)	2017	USA Area	4WD Control	Special Function	Clutch Learning Write
Sorento(UMA)	2017	USA Area	PTG(Power Tail Gate)	Version Information	
Sorento(UMA)	2017	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sorento(UMA)	2017	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sorento(UMA)	2017	USA Area	PTG(Power Tail Gate)	Special Function	User Option
Sorento(UMA)	2017	USA Area	MFC(Multi Function Camera)	Version Information	
Sorento(UMA)	2017	USA Area	MFC(Multi Function Camera)	Read Fault Code	
Sorento(UMA)	2017	USA Area	MFC(Multi Function Camera)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	MFC(Multi Function Camera)	Read Data Stream	
Sorento(UMA)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPC Calibration
Sorento(UMA)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Sorento(UMA)	2017	USA Area	MFC(Multi Function Camera)	Special Function	Variant Coding
Sorento(UMA)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
Sorento(UMA)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Sorento(UMA)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(UMA)	2017	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Sorento(UMA)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Sorento(UMA)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Variant Coding
Sorento(UMA)	2017	USA Area	SCC(Smart Cruise Control)	Version Information	
Sorento(UMA)	2017	USA Area	SCC(Smart Cruise Control)	Read Fault Code	
Sorento(UMA)	2017	USA Area	SCC(Smart Cruise Control)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	SCC(Smart Cruise Control)	Read Data Stream	
Sorento(UMA)	2017	USA Area	SCC(Smart Cruise Control)	Special Function	SCC Alignment
Sorento(UMA)	2017	USA Area	Amplifier	Version Information	
Sorento(UMA)	2017	USA Area	Amplifier	Special Function	AMP Operation Test
Sorento(UMA)	2017	USA Area	Central Gateway	Version Information	
Sorento(UMA)	2017	USA Area	Central Gateway	Read Fault Code	
Sorento(UMA)	2017	USA Area	Central Gateway	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	Central Gateway	Special Function	Erase Network Configuration
Sorento(UMA)	2017	USA Area	SVMS(Surround View Monitor System)	Version Information	
Sorento(UMA)	2017	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Sorento(UMA)	2017	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Sorento(UMA)	2017	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Sorento(UMA)	2017	USA Area	Telematics Unit	Version Information	
Sorento(UMA)	2017	USA Area	Telematics Unit	Read Fault Code	
Sorento(UMA)	2017	USA Area	Telematics Unit	Clear Fault Memory	
Sorento(UMA)	2017	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(UMA)	2016	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(UMA)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(UMA)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(UMA)	2016	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(UMA)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(UMA)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(UMA)	2016	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sorento(UMA)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sorento(UMA)	2016	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sorento(UMA)	2016	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sorento(UMA)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(UMA)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sorento(UMA)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Steering Angle Sensor Calibration
Sorento(UMA)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sorento(UMA)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sorento(UMA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(UMA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(UMA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(UMA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sorento(UMA)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset

model	year	area	system	function	subfunction
Sorento(UMA)	2016	USA Area	AC(Air Conditioning)	Version Information	
Sorento(UMA)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
Sorento(UMA)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
Sorento(UMA)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
Sorento(UMA)	2016	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sorento(UMA)	2016	USA Area	BCM(Body Control Module)	Version Information	
Sorento(UMA)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
Sorento(UMA)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
Sorento(UMA)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
Sorento(UMA)	2016	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sorento(UMA)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
Sorento(UMA)	2016	USA Area	BCM(Body Control Module)	Special Function	Seat Limit Position Setting
Sorento(UMA)	2016	USA Area	Smart Key Unit	Version Information	
Sorento(UMA)	2016	USA Area	Smart Key Unit	Read Fault Code	
Sorento(UMA)	2016	USA Area	Smart Key Unit	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	Smart Key Unit	Read Data Stream	
Sorento(UMA)	2016	USA Area	Smart Key Unit	Actuation Test	
Sorento(UMA)	2016	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sorento(UMA)	2016	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sorento(UMA)	2016	USA Area	Smart Key Unit	Special Function	SMK Status Information
Sorento(UMA)	2016	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sorento(UMA)	2016	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sorento(UMA)	2016	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sorento(UMA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Sorento(UMA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sorento(UMA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sorento(UMA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	

model	year	area	system	function	subfunction
Sorento(UMA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Sorento(UMA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sorento(UMA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Sorento(UMA)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Sorento(UMA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(UMA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(UMA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(UMA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(UMA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(UMA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(UMA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(UMA)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(UMA)	2016	USA Area	Head Lamp	Version Information	
Sorento(UMA)	2016	USA Area	Head Lamp	Read Fault Code	
Sorento(UMA)	2016	USA Area	Head Lamp	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	Head Lamp	Read Data Stream	
Sorento(UMA)	2016	USA Area	Head Lamp	Actuation Test	
Sorento(UMA)	2016	USA Area	Head Lamp	Special Function	Headlamp Leveling
Sorento(UMA)	2016	USA Area	Head Lamp	Special Function	Parameter Setting&Zero Position Initial
Sorento(UMA)	2016	USA Area	Head Lamp	Special Function	Calibration
Sorento(UMA)	2016	USA Area	Head Lamp	Special Function	Parameter Download
Sorento(UMA)	2016	USA Area	4WD Control	Version Information	
Sorento(UMA)	2016	USA Area	4WD Control	Read Fault Code	
Sorento(UMA)	2016	USA Area	4WD Control	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	4WD Control	Read Data Stream	
Sorento(UMA)	2016	USA Area	4WD Control	Actuation Test	
Sorento(UMA)	2016	USA Area	4WD Control	Special Function	Clutch Learning Reset
Sorento(UMA)	2016	USA Area	4WD Control	Special Function	Clutch Learning Read

model	year	area	system	function	subfunction
Sorento(UMA)	2016	USA Area	4WD Control	Special Function	Clutch Learning Write
Sorento(UMA)	2016	USA Area	LDWS(Lane Departure Warning System)	Version Information	
Sorento(UMA)	2016	USA Area	LDWS(Lane Departure Warning System)	Read Fault Code	
Sorento(UMA)	2016	USA Area	LDWS(Lane Departure Warning System)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	LDWS(Lane Departure Warning System)	Read Data Stream	
Sorento(UMA)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPTAC Calibration
Sorento(UMA)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	SPC Calibration
Sorento(UMA)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	LKAS/LDWS Variant Coding
Sorento(UMA)	2016	USA Area	LDWS(Lane Departure Warning System)	Actuation Test	
Sorento(UMA)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Radar Calibration
Sorento(UMA)	2016	USA Area	LDWS(Lane Departure Warning System)	Special Function	BSD Variant Coding
Sorento(UMA)	2016	USA Area	PTG(Power Tail Gate)	Version Information	
Sorento(UMA)	2016	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sorento(UMA)	2016	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sorento(UMA)	2016	USA Area	PTG(Power Tail Gate)	Special Function	User Option
Sorento(UMA)	2016	USA Area	IMMO(Immobilizer)	Read Fault Code	
Sorento(UMA)	2016	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(UMA)	2016	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(UMA)	2016	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sorento(UMA)	2016	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(UMA)	2016	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(UMA)	2016	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(UMA)	2016	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(UMA)	2016	USA Area	CCS(Cruise Control System)	Version Information	
Sorento(UMA)	2016	USA Area	CCS(Cruise Control System)	Read Fault Code	
Sorento(UMA)	2016	USA Area	CCS(Cruise Control System)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	CCS(Cruise Control System)	Read Data Stream	
Sorento(UMA)	2016	USA Area	CCS(Cruise Control System)	Special Function	SCC Alignment

model	year	area	system	function	subfunction
Sorento(UMA)	2016	USA Area	Central Gateway	Version Information	
Sorento(UMA)	2016	USA Area	Central Gateway	Read Fault Code	
Sorento(UMA)	2016	USA Area	Central Gateway	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	Central Gateway	Special Function	Erase Network Configuration
Sorento(UMA)	2016	USA Area	SVMS(Surround View Monitor System)	Version Information	
Sorento(UMA)	2016	USA Area	SVMS(Surround View Monitor System)	Read Fault Code	
Sorento(UMA)	2016	USA Area	SVMS(Surround View Monitor System)	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	SVMS(Surround View Monitor System)	Read Data Stream	
Sorento(UMA)	2016	USA Area	SVMS(Surround View Monitor System)	Actuation Test	
Sorento(UMA)	2016	USA Area	Telematics Unit	Version Information	
Sorento(UMA)	2016	USA Area	Telematics Unit	Read Fault Code	
Sorento(UMA)	2016	USA Area	Telematics Unit	Clear Fault Memory	
Sorento(UMA)	2016	USA Area	Amplifier	Version Information	
Sorento(UMA)	2016	USA Area	Amplifier	Special Function	AMP Operation Test
Sorento(UMA)	2016	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(XM)	2015	USA Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Sorento(XM)	2015	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2015	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(XM)	2015	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2015	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2015	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(XM)	2015	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2015	USA Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2015	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2015	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2015	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(XM)	2015	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(XM)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sorento(XM)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sorento(XM)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(XM)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sorento(XM)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(XM)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(XM)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(XM)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(XM)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sorento(XM)	2015	USA Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2015	USA Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2015	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2015	USA Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2015	USA Area	AC(Air Conditioning)	Actuation Test	
Sorento(XM)	2015	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sorento(XM)	2015	USA Area	BCM(Body Control Module)	Version Information	

model	year	area	system	function	subfunction
Sorento(XM)	2015	USA Area	BCM(Body Control Module)	Read Fault Code	
Sorento(XM)	2015	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sorento(XM)	2015	USA Area	BCM(Body Control Module)	Read Data Stream	
Sorento(XM)	2015	USA Area	BCM(Body Control Module)	Actuation Test	
Sorento(XM)	2015	USA Area	BCM(Body Control Module)	Special Function	User Option
Sorento(XM)	2015	USA Area	Smart Key Unit	Version Information	
Sorento(XM)	2015	USA Area	Smart Key Unit	Read Fault Code	
Sorento(XM)	2015	USA Area	Smart Key Unit	Clear Fault Memory	
Sorento(XM)	2015	USA Area	Smart Key Unit	Read Data Stream	
Sorento(XM)	2015	USA Area	Smart Key Unit	Actuation Test	
Sorento(XM)	2015	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sorento(XM)	2015	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sorento(XM)	2015	USA Area	Smart Key Unit	Special Function	SMK Status Information
Sorento(XM)	2015	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sorento(XM)	2015	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sorento(XM)	2015	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sorento(XM)	2015	USA Area	Motor Driven Power Steering(Mando)	Version Information	
Sorento(XM)	2015	USA Area	Motor Driven Power Steering(Mando)	Read Fault Code	
Sorento(XM)	2015	USA Area	Motor Driven Power Steering(Mando)	Clear Fault Memory	
Sorento(XM)	2015	USA Area	Motor Driven Power Steering(Mando)	Read Data Stream	
Sorento(XM)	2015	USA Area	Motor Driven Power Steering(Mando)	Special Function	EPS Type Recognition
Sorento(XM)	2015	USA Area	Motor Driven Power Steering(Mando)	Special Function	ASP Calibration(CAN)
Sorento(XM)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(XM)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(XM)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Sorento(XM)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sorento(XM)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sorento(XM)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sorento(XM)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sorento(XM)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sorento(XM)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sorento(XM)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sorento(XM)	2015	USA Area	4WD Control	Version Information	
Sorento(XM)	2015	USA Area	4WD Control	Read Fault Code	
Sorento(XM)	2015	USA Area	4WD Control	Clear Fault Memory	
Sorento(XM)	2015	USA Area	4WD Control	Read Data Stream	
Sorento(XM)	2015	USA Area	4WD Control	Actuation Test	
Sorento(XM)	2015	USA Area	4WD Control	Special Function	Clutch Learning Reset
Sorento(XM)	2015	USA Area	4WD Control	Special Function	Clutch Learning Read
Sorento(XM)	2015	USA Area	4WD Control	Special Function	Clutch Learning Write
Sorento(XM)	2015	USA Area	BSD(Blind Spot Detection)	Version Information	
Sorento(XM)	2015	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Sorento(XM)	2015	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Sorento(XM)	2015	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Sorento(XM)	2015	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Sorento(XM)	2015	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Sorento(XM)	2015	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(XM)	2015	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2015	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sorento(XM)	2015	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(XM)	2015	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2015	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2015	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(XM)	2015	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(XM)	2015	USA Area	Telematics Unit	Version Information	
Sorento(XM)	2015	USA Area	Telematics Unit	Read Fault Code	
Sorento(XM)	2015	USA Area	Telematics Unit	Clear Fault Memory	
Sorento(XM)	2015	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(XM)	2014	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(XM)	2014	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2014	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(XM)	2014	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2014	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2014	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(XM)	2014	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2014	USA Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2014	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2014	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2014	USA Area	ESP(Electronic Stability Program)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(XM)	2014	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(XM)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sorento(XM)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sorento(XM)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(XM)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sorento(XM)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sorento(XM)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sorento(XM)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sorento(XM)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sorento(XM)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sorento(XM)	2014	USA Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2014	USA Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2014	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2014	USA Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2014	USA Area	AC(Air Conditioning)	Actuation Test	
Sorento(XM)	2014	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sorento(XM)	2014	USA Area	BCM(Body Control Module)	Version Information	
Sorento(XM)	2014	USA Area	BCM(Body Control Module)	Read Fault Code	
Sorento(XM)	2014	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sorento(XM)	2014	USA Area	BCM(Body Control Module)	Read Data Stream	
Sorento(XM)	2014	USA Area	BCM(Body Control Module)	Actuation Test	
Sorento(XM)	2014	USA Area	BCM(Body Control Module)	Special Function	User Option
Sorento(XM)	2014	USA Area	Motor Driven Power Steering(Mando)	Version Information	
Sorento(XM)	2014	USA Area	Motor Driven Power Steering(Mando)	Read Fault Code	
Sorento(XM)	2014	USA Area	Motor Driven Power Steering(Mando)	Clear Fault Memory	
Sorento(XM)	2014	USA Area	Motor Driven Power Steering(Mando)	Read Data Stream	
Sorento(XM)	2014	USA Area	Motor Driven Power Steering(Mando)	Special Function	EPS Type Recognition

model	year	area	system	function	subfunction
Sorento(XM)	2014	USA Area	Motor Driven Power Steering(Mando)	Special Function	ASP Calibration(CAN)
Sorento(XM)	2014	USA Area	Smart Key Unit	Version Information	
Sorento(XM)	2014	USA Area	Smart Key Unit	Read Fault Code	
Sorento(XM)	2014	USA Area	Smart Key Unit	Clear Fault Memory	
Sorento(XM)	2014	USA Area	Smart Key Unit	Read Data Stream	
Sorento(XM)	2014	USA Area	Smart Key Unit	Actuation Test	
Sorento(XM)	2014	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sorento(XM)	2014	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sorento(XM)	2014	USA Area	Smart Key Unit	Special Function	SMK Status Information
Sorento(XM)	2014	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sorento(XM)	2014	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sorento(XM)	2014	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sorento(XM)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Sorento(XM)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Sorento(XM)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Sorento(XM)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Sorento(XM)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Sorento(XM)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Sorento(XM)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Sorento(XM)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(XM)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sorento(XM)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(XM)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2014	USA Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Sorento(XM)	2014	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2014	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sorento(XM)	2014	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(XM)	2014	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2014	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2014	USA Area	BSD(Blind Spot Detection)	Version Information	
Sorento(XM)	2014	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Sorento(XM)	2014	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Sorento(XM)	2014	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Sorento(XM)	2014	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Sorento(XM)	2014	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Sorento(XM)	2014	USA Area	4WD Control	Version Information	
Sorento(XM)	2014	USA Area	4WD Control	Read Fault Code	
Sorento(XM)	2014	USA Area	4WD Control	Clear Fault Memory	
Sorento(XM)	2014	USA Area	4WD Control	Read Data Stream	
Sorento(XM)	2014	USA Area	4WD Control	Actuation Test	
Sorento(XM)	2014	USA Area	4WD Control	Special Function	Clutch Learning Reset
Sorento(XM)	2014	USA Area	4WD Control	Special Function	Clutch Learning Read
Sorento(XM)	2014	USA Area	4WD Control	Special Function	Clutch Learning Write
Sorento(XM)	2014	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(XM)	2014	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(XM)	2014	USA Area	Telematics Unit	Version Information	
Sorento(XM)	2014	USA Area	Telematics Unit	Read Fault Code	
Sorento(XM)	2014	USA Area	Telematics Unit	Clear Fault Memory	
Sorento(XM)	2014	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(XM)	2013	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(XM)	2013	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2013	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(XM)	2013	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2013	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2013	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(XM)	2013	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2013	USA Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2013	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2013	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2013	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(XM)	2013	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(XM)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(XM)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Sorento(XM)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2013	USA Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Sorento(XM)	2013	USA Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Sorento(XM)	2013	USA Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Sorento(XM)	2013	USA Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Sorento(XM)	2013	USA Area	SRS(Supplemental Inflatable Restraint)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Sorento(XM)	2013	USA Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2013	USA Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2013	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2013	USA Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2013	USA Area	AC(Air Conditioning)	Actuation Test	
Sorento(XM)	2013	USA Area	IPM(Instrument Panel Module)	Version Information	
Sorento(XM)	2013	USA Area	IPM(Instrument Panel Module)	Read Fault Code	
Sorento(XM)	2013	USA Area	IPM(Instrument Panel Module)	Clear Fault Memory	
Sorento(XM)	2013	USA Area	IPM(Instrument Panel Module)	Read Data Stream	
Sorento(XM)	2013	USA Area	IPM(Instrument Panel Module)	Actuation Test	
Sorento(XM)	2013	USA Area	IPM(Instrument Panel Module)	Special Function	User Option
Sorento(XM)	2013	USA Area	EPS(Electronic Power Steering)	Version Information	
Sorento(XM)	2013	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(XM)	2013	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(XM)	2013	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(XM)	2013	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(XM)	2013	USA Area	Smart Key	Version Information	
Sorento(XM)	2013	USA Area	Smart Key	Read Fault Code	
Sorento(XM)	2013	USA Area	Smart Key	Clear Fault Memory	
Sorento(XM)	2013	USA Area	Smart Key	Read Data Stream	
Sorento(XM)	2013	USA Area	Smart Key	Actuation Test	
Sorento(XM)	2013	USA Area	Smart Key	Special Function	Neutralization Mode
Sorento(XM)	2013	USA Area	Smart Key	Special Function	SMK Status Information
Sorento(XM)	2013	USA Area	Smart Key	Special Function	PDM Status Information
Sorento(XM)	2013	USA Area	Smart Key	Special Function	FOB KEY Status Information
Sorento(XM)	2013	USA Area	Smart Key	Special Function	Serial Communication Line Check
Sorento(XM)	2013	USA Area	Smart Key	Special Function	Antenna Status Check
Sorento(XM)	2013	USA Area	Smart Key	Special Function	Smart Key Code Saving
Sorento(XM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(XM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Sorento(XM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(XM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2013	USA Area	4WD Control	Version Information	
Sorento(XM)	2013	USA Area	4WD Control	Read Fault Code	
Sorento(XM)	2013	USA Area	4WD Control	Clear Fault Memory	
Sorento(XM)	2013	USA Area	4WD Control	Read Data Stream	
Sorento(XM)	2013	USA Area	4WD Control	Special Function	Torque Coupling Control
Sorento(XM)	2013	USA Area	4WD Control	Special Function	AWD Mode Selection
Sorento(XM)	2013	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(XM)	2013	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2013	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sorento(XM)	2013	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(XM)	2013	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2013	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2013	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(XM)	2013	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	VCM Learning
Sorento(XM)	2013	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(XM)	2012	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(XM)	2012	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2012	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(XM)	2012	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2012	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2012	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(XM)	2012	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2012	USA Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2012	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2012	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2012	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(XM)	2012	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(XM)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(XM)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Sorento(XM)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2012	USA Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Sorento(XM)	2012	USA Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Sorento(XM)	2012	USA Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Sorento(XM)	2012	USA Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Sorento(XM)	2012	USA Area	SRS(Supplemental Inflatable Restraint)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Sorento(XM)	2012	USA Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2012	USA Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2012	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2012	USA Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2012	USA Area	AC(Air Conditioning)	Actuation Test	
Sorento(XM)	2012	USA Area	IPM(Instrument Panel Module)	Version Information	
Sorento(XM)	2012	USA Area	IPM(Instrument Panel Module)	Read Fault Code	
Sorento(XM)	2012	USA Area	IPM(Instrument Panel Module)	Clear Fault Memory	
Sorento(XM)	2012	USA Area	IPM(Instrument Panel Module)	Read Data Stream	
Sorento(XM)	2012	USA Area	IPM(Instrument Panel Module)	Actuation Test	
Sorento(XM)	2012	USA Area	IPM(Instrument Panel Module)	Special Function	User Option
Sorento(XM)	2012	USA Area	EPS(Electronic Power Steering)	Version Information	
Sorento(XM)	2012	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(XM)	2012	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(XM)	2012	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(XM)	2012	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(XM)	2012	USA Area	Smart Key	Version Information	
Sorento(XM)	2012	USA Area	Smart Key	Read Fault Code	
Sorento(XM)	2012	USA Area	Smart Key	Clear Fault Memory	
Sorento(XM)	2012	USA Area	Smart Key	Read Data Stream	
Sorento(XM)	2012	USA Area	Smart Key	Actuation Test	
Sorento(XM)	2012	USA Area	Smart Key	Special Function	Neutralization Mode
Sorento(XM)	2012	USA Area	Smart Key	Special Function	SMK Status Information
Sorento(XM)	2012	USA Area	Smart Key	Special Function	PDM Status Information
Sorento(XM)	2012	USA Area	Smart Key	Special Function	FOB KEY Status Information
Sorento(XM)	2012	USA Area	Smart Key	Special Function	Serial Communication Line Check
Sorento(XM)	2012	USA Area	Smart Key	Special Function	Antenna Status Check
Sorento(XM)	2012	USA Area	Smart Key	Special Function	Smart Key Code Saving
Sorento(XM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(XM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Sorento(XM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(XM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2012	USA Area	4WD Control	Version Information	
Sorento(XM)	2012	USA Area	4WD Control	Read Fault Code	
Sorento(XM)	2012	USA Area	4WD Control	Clear Fault Memory	
Sorento(XM)	2012	USA Area	4WD Control	Read Data Stream	
Sorento(XM)	2012	USA Area	4WD Control	Special Function	Torque Coupling Control
Sorento(XM)	2012	USA Area	4WD Control	Special Function	AWD Mode Selection
Sorento(XM)	2012	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(XM)	2012	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2012	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sorento(XM)	2012	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(XM)	2012	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2012	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2012	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(XM)	2012	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	VCM Learning
Sorento(XM)	2012	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Version Information	
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Read Freeze Frame	

model	year	area	system	function	subfunction
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Actuation Test	
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sorento(XM)	2011	USA Area	TCM(Transmission Control Module)	Version Information	
Sorento(XM)	2011	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sorento(XM)	2011	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sorento(XM)	2011	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sorento(XM)	2011	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sorento(XM)	2011	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sorento(XM)	2011	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sorento(XM)	2011	USA Area	ESP(Electronic Stability Program)	Version Information	
Sorento(XM)	2011	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sorento(XM)	2011	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sorento(XM)	2011	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sorento(XM)	2011	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sorento(XM)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sorento(XM)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Sorento(XM)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sorento(XM)	2011	USA Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Sorento(XM)	2011	USA Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Sorento(XM)	2011	USA Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Sorento(XM)	2011	USA Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Sorento(XM)	2011	USA Area	SRS(Supplemental Inflatable Restraint)	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Sorento(XM)	2011	USA Area	AC(Air Conditioning)	Version Information	
Sorento(XM)	2011	USA Area	AC(Air Conditioning)	Read Fault Code	
Sorento(XM)	2011	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sorento(XM)	2011	USA Area	AC(Air Conditioning)	Read Data Stream	
Sorento(XM)	2011	USA Area	AC(Air Conditioning)	Actuation Test	
Sorento(XM)	2011	USA Area	IPM(Instrument Panel Module)	Version Information	
Sorento(XM)	2011	USA Area	IPM(Instrument Panel Module)	Read Fault Code	
Sorento(XM)	2011	USA Area	IPM(Instrument Panel Module)	Clear Fault Memory	
Sorento(XM)	2011	USA Area	IPM(Instrument Panel Module)	Read Data Stream	
Sorento(XM)	2011	USA Area	IPM(Instrument Panel Module)	Actuation Test	
Sorento(XM)	2011	USA Area	IPM(Instrument Panel Module)	Special Function	User Option
Sorento(XM)	2011	USA Area	EPS(Electronic Power Steering)	Version Information	
Sorento(XM)	2011	USA Area	EPS(Electronic Power Steering)	Read Fault Code	
Sorento(XM)	2011	USA Area	EPS(Electronic Power Steering)	Clear Fault Memory	
Sorento(XM)	2011	USA Area	EPS(Electronic Power Steering)	Read Data Stream	
Sorento(XM)	2011	USA Area	EPS(Electronic Power Steering)	Read Freeze Frame	
Sorento(XM)	2011	USA Area	Smart Key	Version Information	
Sorento(XM)	2011	USA Area	Smart Key	Read Fault Code	
Sorento(XM)	2011	USA Area	Smart Key	Clear Fault Memory	
Sorento(XM)	2011	USA Area	Smart Key	Read Data Stream	
Sorento(XM)	2011	USA Area	Smart Key	Actuation Test	
Sorento(XM)	2011	USA Area	Smart Key	Special Function	Neutralization Mode
Sorento(XM)	2011	USA Area	Smart Key	Special Function	SMK Status Information
Sorento(XM)	2011	USA Area	Smart Key	Special Function	PDM Status Information
Sorento(XM)	2011	USA Area	Smart Key	Special Function	FOB KEY Status Information
Sorento(XM)	2011	USA Area	Smart Key	Special Function	Serial Communication Line Check
Sorento(XM)	2011	USA Area	Smart Key	Special Function	Antenna Status Check
Sorento(XM)	2011	USA Area	Smart Key	Special Function	Smart Key Code Saving
Sorento(XM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sorento(XM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	

model	year	area	system	function	subfunction
Sorento(XM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sorento(XM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sorento(XM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sorento(XM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sorento(XM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sorento(XM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sorento(XM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sorento(XM)	2011	USA Area	4WD Control	Version Information	
Sorento(XM)	2011	USA Area	4WD Control	Read Fault Code	
Sorento(XM)	2011	USA Area	4WD Control	Clear Fault Memory	
Sorento(XM)	2011	USA Area	4WD Control	Read Data Stream	
Sorento(XM)	2011	USA Area	4WD Control	Special Function	Torque Coupling Control
Sorento(XM)	2011	USA Area	4WD Control	Special Function	AWD Mode Selection
Sorento(XM)	2011	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sorento(XM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sorento(XM)	2011	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sorento(XM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sorento(XM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sorento(XM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sorento(XM)	2011	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sorento(XM)	2011	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Special Function	PCM Lock(Mec)Setting
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Special Function	VCM Learning
Sorento(XM)	2011	USA Area	ECM(Engine Control Module)	Special Function	ETC Motor Cleaning
Soul EV(PS EV)	2017	USA Area	VMCS(Vehicle Motor Control System)	Version Information	
Soul EV(PS EV)	2017	USA Area	VMCS(Vehicle Motor Control System)	Read Fault Code	
Soul EV(PS EV)	2017	USA Area	VMCS(Vehicle Motor Control System)	Clear Fault Memory	
Soul EV(PS EV)	2017	USA Area	VMCS(Vehicle Motor Control System)	Read Data Stream	
Soul EV(PS EV)	2017	USA Area	VMCS(Vehicle Motor Control System)	Read Freeze Frame	
Soul EV(PS EV)	2017	USA Area	VMCS(Vehicle Motor Control System)	Actuation Test	

model	year	area	system	function	subfunction
Soul EV(PS EV)	2017	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Read VIN
Soul EV(PS EV)	2017	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Write VIN
Soul EV(PS EV)	2017	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Electric Water Pump Control
Soul EV(PS EV)	2017	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Initialization Of Automatic Resolver Offset Calibration
Soul EV(PS EV)	2017	USA Area	VMCS(Vehicle Motor Control System)	Special Function	VMCU Variant Coding
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Fluid Circulation Mode
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Soul EV(PS EV)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Air Bleeding Of Low Pressure
Soul EV(PS EV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul EV(PS EV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul EV(PS EV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul EV(PS EV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul EV(PS EV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul EV(PS EV)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Soul EV(PS EV)	2017	USA Area	AC(Air Conditioning)	Version Information	
Soul EV(PS EV)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Soul EV(PS EV)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Soul EV(PS EV)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Soul EV(PS EV)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Soul EV(PS EV)	2017	USA Area	BCM(Body Control Module)	Version Information	
Soul EV(PS EV)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Soul EV(PS EV)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Soul EV(PS EV)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Soul EV(PS EV)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Soul EV(PS EV)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Soul EV(PS EV)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul EV(PS EV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul EV(PS EV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul EV(PS EV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul EV(PS EV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul EV(PS EV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul EV(PS EV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul EV(PS EV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul EV(PS EV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Soul EV(PS EV)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Soul EV(PS EV)	2017	USA Area	Smart Key Unit	Version Information	
Soul EV(PS EV)	2017	USA Area	Smart Key Unit	Read Fault Code	
Soul EV(PS EV)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Soul EV(PS EV)	2017	USA Area	Smart Key Unit	Read Data Stream	
Soul EV(PS EV)	2017	USA Area	Smart Key Unit	Actuation Test	
Soul EV(PS EV)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Soul EV(PS EV)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Soul EV(PS EV)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Soul EV(PS EV)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Soul EV(PS EV)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Soul EV(PS EV)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check

model	year	area	system	function	subfunction
Soul EV(PS EV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul EV(PS EV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul EV(PS EV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul EV(PS EV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul EV(PS EV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul EV(PS EV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul EV(PS EV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul EV(PS EV)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul EV(PS EV)	2017	USA Area	EV Battery System	Version Information	
Soul EV(PS EV)	2017	USA Area	EV Battery System	Read Fault Code	
Soul EV(PS EV)	2017	USA Area	EV Battery System	Clear Fault Memory	
Soul EV(PS EV)	2017	USA Area	EV Battery System	Read Data Stream	
Soul EV(PS EV)	2017	USA Area	EV Battery System	Read Freeze Frame	
Soul EV(PS EV)	2017	USA Area	EV Battery System	Actuation Test	
Soul EV(PS EV)	2017	USA Area	EV Battery System	Special Function	Isolation Breakdown Detection Function
Soul EV(PS EV)	2017	USA Area	Low DC/DC Converter	Version Information	
Soul EV(PS EV)	2017	USA Area	Low DC/DC Converter	Read Fault Code	
Soul EV(PS EV)	2017	USA Area	Low DC/DC Converter	Clear Fault Memory	
Soul EV(PS EV)	2017	USA Area	Low DC/DC Converter	Read Data Stream	
Soul EV(PS EV)	2017	USA Area	Low DC/DC Converter	Read Freeze Frame	
Soul EV(PS EV)	2017	USA Area	On Board Charger	Version Information	
Soul EV(PS EV)	2017	USA Area	On Board Charger	Read Fault Code	
Soul EV(PS EV)	2017	USA Area	On Board Charger	Clear Fault Memory	
Soul EV(PS EV)	2017	USA Area	On Board Charger	Read Data Stream	
Soul EV(PS EV)	2017	USA Area	On Board Charger	Read Freeze Frame	
Soul EV(PS EV)	2017	USA Area	On Board Charger	Actuation Test	
Soul EV(PS EV)	2016	USA Area	VMCS(Vehicle Motor Control System)	Version Information	
Soul EV(PS EV)	2016	USA Area	VMCS(Vehicle Motor Control System)	Read Fault Code	
Soul EV(PS EV)	2016	USA Area	VMCS(Vehicle Motor Control System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Soul EV(PS EV)	2016	USA Area	VMCS(Vehicle Motor Control System)	Read Data Stream	
Soul EV(PS EV)	2016	USA Area	VMCS(Vehicle Motor Control System)	Read Freeze Frame	
Soul EV(PS EV)	2016	USA Area	VMCS(Vehicle Motor Control System)	Actuation Test	
Soul EV(PS EV)	2016	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Read VIN
Soul EV(PS EV)	2016	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Write VIN
Soul EV(PS EV)	2016	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Electric Water Pump Control
Soul EV(PS EV)	2016	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Initialization Of Automatic Resolver Offset Calibration
Soul EV(PS EV)	2016	USA Area	VMCS(Vehicle Motor Control System)	Special Function	VMCU Variant Coding
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Fluid Circulation Mode
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Soul EV(PS EV)	2016	USA Area	ABS(Anti-Lock Brake System)	Special Function	Air Bleeding Of Low Pressure
Soul EV(PS EV)	2016	USA Area	SRS(Supplemental Inflatable Restraint)	Version Information	
Soul EV(PS EV)	2016	USA Area	SRS(Supplemental Inflatable Restraint)	Read Fault Code	
Soul EV(PS EV)	2016	USA Area	SRS(Supplemental Inflatable Restraint)	Clear Fault Memory	
Soul EV(PS EV)	2016	USA Area	SRS(Supplemental Inflatable Restraint)	Read Data Stream	
Soul EV(PS EV)	2016	USA Area	SRS(Supplemental Inflatable Restraint)	Special Function	Body Sensor Reset

model	year	area	system	function	subfunction
Soul EV(PS EV)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul EV(PS EV)	2016	USA Area	AC(Air Conditioning)	Version Information	
Soul EV(PS EV)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
Soul EV(PS EV)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Soul EV(PS EV)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
Soul EV(PS EV)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
Soul EV(PS EV)	2016	USA Area	BCM(Body Control Module)	Version Information	
Soul EV(PS EV)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
Soul EV(PS EV)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Soul EV(PS EV)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
Soul EV(PS EV)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
Soul EV(PS EV)	2016	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul EV(PS EV)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
Soul EV(PS EV)	2016	USA Area	Smart Key Unit	Version Information	
Soul EV(PS EV)	2016	USA Area	Smart Key Unit	Read Fault Code	
Soul EV(PS EV)	2016	USA Area	Smart Key Unit	Clear Fault Memory	
Soul EV(PS EV)	2016	USA Area	Smart Key Unit	Read Data Stream	
Soul EV(PS EV)	2016	USA Area	Smart Key Unit	Actuation Test	
Soul EV(PS EV)	2016	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Soul EV(PS EV)	2016	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Soul EV(PS EV)	2016	USA Area	Smart Key Unit	Special Function	SMK Status Information
Soul EV(PS EV)	2016	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Soul EV(PS EV)	2016	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Soul EV(PS EV)	2016	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Soul EV(PS EV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul EV(PS EV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul EV(PS EV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul EV(PS EV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul EV(PS EV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul EV(PS EV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration

model	year	area	system	function	subfunction
Soul EV(PS EV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul EV(PS EV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Soul EV(PS EV)	2016	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Soul EV(PS EV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul EV(PS EV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul EV(PS EV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul EV(PS EV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul EV(PS EV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul EV(PS EV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul EV(PS EV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul EV(PS EV)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul EV(PS EV)	2016	USA Area	Low DC/DC Converter	Version Information	
Soul EV(PS EV)	2016	USA Area	Low DC/DC Converter	Read Fault Code	
Soul EV(PS EV)	2016	USA Area	Low DC/DC Converter	Clear Fault Memory	
Soul EV(PS EV)	2016	USA Area	Low DC/DC Converter	Read Data Stream	
Soul EV(PS EV)	2016	USA Area	Low DC/DC Converter	Read Freeze Frame	
Soul EV(PS EV)	2016	USA Area	HEV Battery System	Version Information	
Soul EV(PS EV)	2016	USA Area	HEV Battery System	Read Fault Code	
Soul EV(PS EV)	2016	USA Area	HEV Battery System	Clear Fault Memory	
Soul EV(PS EV)	2016	USA Area	HEV Battery System	Read Data Stream	
Soul EV(PS EV)	2016	USA Area	HEV Battery System	Read Freeze Frame	
Soul EV(PS EV)	2016	USA Area	HEV Battery System	Actuation Test	
Soul EV(PS EV)	2016	USA Area	HEV Battery System	Special Function	Isolation Breakdown Detection Function
Soul EV(PS EV)	2016	USA Area	On Board Charger	Version Information	
Soul EV(PS EV)	2016	USA Area	On Board Charger	Read Fault Code	
Soul EV(PS EV)	2016	USA Area	On Board Charger	Clear Fault Memory	
Soul EV(PS EV)	2016	USA Area	On Board Charger	Read Data Stream	
Soul EV(PS EV)	2016	USA Area	On Board Charger	Read Freeze Frame	
Soul EV(PS EV)	2016	USA Area	On Board Charger	Actuation Test	

model	year	area	system	function	subfunction
Soul EV(PS EV)	2015	USA Area	VMCS(Vehicle Motor Control System)	Version Information	
Soul EV(PS EV)	2015	USA Area	VMCS(Vehicle Motor Control System)	Read Fault Code	
Soul EV(PS EV)	2015	USA Area	VMCS(Vehicle Motor Control System)	Clear Fault Memory	
Soul EV(PS EV)	2015	USA Area	VMCS(Vehicle Motor Control System)	Read Data Stream	
Soul EV(PS EV)	2015	USA Area	VMCS(Vehicle Motor Control System)	Read Freeze Frame	
Soul EV(PS EV)	2015	USA Area	VMCS(Vehicle Motor Control System)	Actuation Test	
Soul EV(PS EV)	2015	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Read VIN
Soul EV(PS EV)	2015	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Write VIN
Soul EV(PS EV)	2015	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Electric Water Pump Control
Soul EV(PS EV)	2015	USA Area	VMCS(Vehicle Motor Control System)	Special Function	Initialization Of Automatic Resolver Offset Calibration
Soul EV(PS EV)	2015	USA Area	VMCS(Vehicle Motor Control System)	Special Function	VMCU Variant Coding
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pressure Sensor Calibration
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Pedal Travel
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Fluid Circulation Mode
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	High Pressure Release Mode
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Soul EV(PS EV)	2015	USA Area	ABS(Anti-Lock Brake System)	Special Function	Air Bleeding Of Low Pressure
Soul EV(PS EV)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul EV(PS EV)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	

model	year	area	system	function	subfunction
Soul EV(PS EV)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul EV(PS EV)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul EV(PS EV)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Soul EV(PS EV)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul EV(PS EV)	2015	USA Area	AC(Air Conditioning)	Version Information	
Soul EV(PS EV)	2015	USA Area	AC(Air Conditioning)	Read Fault Code	
Soul EV(PS EV)	2015	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Soul EV(PS EV)	2015	USA Area	AC(Air Conditioning)	Read Data Stream	
Soul EV(PS EV)	2015	USA Area	AC(Air Conditioning)	Actuation Test	
Soul EV(PS EV)	2015	USA Area	BCM(Body Control Module)	Version Information	
Soul EV(PS EV)	2015	USA Area	BCM(Body Control Module)	Read Fault Code	
Soul EV(PS EV)	2015	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Soul EV(PS EV)	2015	USA Area	BCM(Body Control Module)	Read Data Stream	
Soul EV(PS EV)	2015	USA Area	BCM(Body Control Module)	Actuation Test	
Soul EV(PS EV)	2015	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul EV(PS EV)	2015	USA Area	BCM(Body Control Module)	Special Function	User Option
Soul EV(PS EV)	2015	USA Area	Smart Key Unit	Version Information	
Soul EV(PS EV)	2015	USA Area	Smart Key Unit	Read Fault Code	
Soul EV(PS EV)	2015	USA Area	Smart Key Unit	Clear Fault Memory	
Soul EV(PS EV)	2015	USA Area	Smart Key Unit	Read Data Stream	
Soul EV(PS EV)	2015	USA Area	Smart Key Unit	Actuation Test	
Soul EV(PS EV)	2015	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Soul EV(PS EV)	2015	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Soul EV(PS EV)	2015	USA Area	Smart Key Unit	Special Function	SMK Status Information
Soul EV(PS EV)	2015	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Soul EV(PS EV)	2015	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Soul EV(PS EV)	2015	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Soul EV(PS EV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul EV(PS EV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul EV(PS EV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	

model	year	area	system	function	subfunction
Soul EV(PS EV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul EV(PS EV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul EV(PS EV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul EV(PS EV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul EV(PS EV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Soul EV(PS EV)	2015	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Soul EV(PS EV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul EV(PS EV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul EV(PS EV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul EV(PS EV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul EV(PS EV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul EV(PS EV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul EV(PS EV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul EV(PS EV)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul EV(PS EV)	2015	USA Area	Low DC/DC Converter	Version Information	
Soul EV(PS EV)	2015	USA Area	Low DC/DC Converter	Read Fault Code	
Soul EV(PS EV)	2015	USA Area	Low DC/DC Converter	Clear Fault Memory	
Soul EV(PS EV)	2015	USA Area	Low DC/DC Converter	Read Data Stream	
Soul EV(PS EV)	2015	USA Area	Low DC/DC Converter	Read Freeze Frame	
Soul EV(PS EV)	2015	USA Area	HEV Battery System	Version Information	
Soul EV(PS EV)	2015	USA Area	HEV Battery System	Read Fault Code	
Soul EV(PS EV)	2015	USA Area	HEV Battery System	Clear Fault Memory	
Soul EV(PS EV)	2015	USA Area	HEV Battery System	Read Data Stream	
Soul EV(PS EV)	2015	USA Area	HEV Battery System	Read Freeze Frame	
Soul EV(PS EV)	2015	USA Area	HEV Battery System	Actuation Test	
Soul EV(PS EV)	2015	USA Area	On Board Charger	Version Information	
Soul EV(PS EV)	2015	USA Area	On Board Charger	Read Fault Code	
Soul EV(PS EV)	2015	USA Area	On Board Charger	Clear Fault Memory	
Soul EV(PS EV)	2015	USA Area	On Board Charger	Read Data Stream	
Soul EV(PS EV)	2015	USA Area	On Board Charger	Read Freeze Frame	

model	year	area	system	function	subfunction
Soul EV(PS EV)	2015	USA Area	On Board Charger	Actuation Test	
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Version Information	
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Read Fault Code	
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Read Data Stream	
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Actuation Test	
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(AM)	2013	USA Area	TCM(Transmission Control Module)	Version Information	
Soul(AM)	2013	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(AM)	2013	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(AM)	2013	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(AM)	2013	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Soul(AM)	2013	USA Area	TCM(Transmission Control Module)	Actuation Test	
Soul(AM)	2013	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(AM)	2013	USA Area	ESP(Electronic Stability Program)	Version Information	
Soul(AM)	2013	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(AM)	2013	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(AM)	2013	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(AM)	2013	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(AM)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Soul(AM)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(AM)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dhc Only)
Soul(AM)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(AM)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(AM)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	

model	year	area	system	function	subfunction
Soul(AM)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(AM)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(AM)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Soul(AM)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Soul(AM)	2013	USA Area	AC(Air Conditioning)	Version Information	
Soul(AM)	2013	USA Area	AC(Air Conditioning)	Read Fault Code	
Soul(AM)	2013	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(AM)	2013	USA Area	AC(Air Conditioning)	Read Data Stream	
Soul(AM)	2013	USA Area	AC(Air Conditioning)	Actuation Test	
Soul(AM)	2013	USA Area	BCM(Body Control Module)	Version Information	
Soul(AM)	2013	USA Area	BCM(Body Control Module)	Read Data Stream	
Soul(AM)	2013	USA Area	BCM(Body Control Module)	Actuation Test	
Soul(AM)	2013	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(AM)	2013	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(AM)	2013	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(AM)	2013	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(AM)	2013	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(AM)	2013	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(AM)	2013	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(AM)	2013	USA Area	Smart Key	Version Information	
Soul(AM)	2013	USA Area	Smart Key	Read Fault Code	
Soul(AM)	2013	USA Area	Smart Key	Clear Fault Memory	
Soul(AM)	2013	USA Area	Smart Key	Read Data Stream	
Soul(AM)	2013	USA Area	Smart Key	Actuation Test	
Soul(AM)	2013	USA Area	Smart Key	Special Function	Neutralization Mode
Soul(AM)	2013	USA Area	Smart Key	Special Function	SMK Status Information
Soul(AM)	2013	USA Area	Smart Key	Special Function	TP Status Information
Soul(AM)	2013	USA Area	Smart Key	Special Function	PDM Status Information
Soul(AM)	2013	USA Area	Smart Key	Special Function	FOB KEY Status Information
Soul(AM)	2013	USA Area	Smart Key	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Soul(AM)	2013	USA Area	Smart Key	Special Function	Antenna Status Check
Soul(AM)	2013	USA Area	Smart Key	Special Function	Smart Key Code Saving
Soul(AM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(AM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(AM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(AM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(AM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Soul(AM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(AM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(AM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(AM)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(AM)	2013	USA Area	IMMO(Immobilizer)	Read Data Stream	
Soul(AM)	2013	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(AM)	2013	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Soul(AM)	2013	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(AM)	2013	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Soul(AM)	2013	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(AM)	2013	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(AM)	2013	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Soul(AM)	2013	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Version Information	
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Read Fault Code	
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Read Data Stream	
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Actuation Test	
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(AM)	2012	USA Area	TCM(Transmission Control Module)	Version Information	
Soul(AM)	2012	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(AM)	2012	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(AM)	2012	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(AM)	2012	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Soul(AM)	2012	USA Area	TCM(Transmission Control Module)	Actuation Test	
Soul(AM)	2012	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(AM)	2012	USA Area	ESP(Electronic Stability Program)	Version Information	
Soul(AM)	2012	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(AM)	2012	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(AM)	2012	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(AM)	2012	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(AM)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Soul(AM)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(AM)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dhc Only)
Soul(AM)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(AM)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(AM)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(AM)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(AM)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(AM)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Soul(AM)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Soul(AM)	2012	USA Area	AC(Air Conditioning)	Version Information	
Soul(AM)	2012	USA Area	AC(Air Conditioning)	Read Fault Code	
Soul(AM)	2012	USA Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Soul(AM)	2012	USA Area	AC(Air Conditioning)	Read Data Stream	
Soul(AM)	2012	USA Area	AC(Air Conditioning)	Actuation Test	
Soul(AM)	2012	USA Area	BCM(Body Control Module)	Version Information	
Soul(AM)	2012	USA Area	BCM(Body Control Module)	Read Data Stream	
Soul(AM)	2012	USA Area	BCM(Body Control Module)	Actuation Test	
Soul(AM)	2012	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(AM)	2012	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(AM)	2012	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(AM)	2012	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(AM)	2012	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(AM)	2012	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(AM)	2012	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(AM)	2012	USA Area	Smart Key	Version Information	
Soul(AM)	2012	USA Area	Smart Key	Read Fault Code	
Soul(AM)	2012	USA Area	Smart Key	Clear Fault Memory	
Soul(AM)	2012	USA Area	Smart Key	Read Data Stream	
Soul(AM)	2012	USA Area	Smart Key	Actuation Test	
Soul(AM)	2012	USA Area	Smart Key	Special Function	Neutralization Mode
Soul(AM)	2012	USA Area	Smart Key	Special Function	SMK Status Information
Soul(AM)	2012	USA Area	Smart Key	Special Function	TP Status Information
Soul(AM)	2012	USA Area	Smart Key	Special Function	PDM Status Information
Soul(AM)	2012	USA Area	Smart Key	Special Function	FOB KEY Status Information
Soul(AM)	2012	USA Area	Smart Key	Special Function	Serial Communication Line Check
Soul(AM)	2012	USA Area	Smart Key	Special Function	Antenna Status Check
Soul(AM)	2012	USA Area	Smart Key	Special Function	Smart Key Code Saving
Soul(AM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(AM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(AM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(AM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(AM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Soul(AM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(AM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(AM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(AM)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(AM)	2012	USA Area	IMMO(Immobilizer)	Read Data Stream	
Soul(AM)	2012	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(AM)	2012	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Soul(AM)	2012	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(AM)	2012	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Soul(AM)	2012	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(AM)	2012	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(AM)	2012	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Soul(AM)	2012	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Version Information	
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Read Fault Code	
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Read Data Stream	
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Actuation Test	
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Soul(AM)	2011	USA Area	TCM(Transmission Control Module)	Version Information	
Soul(AM)	2011	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(AM)	2011	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Soul(AM)	2011	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(AM)	2011	USA Area	TCM(Transmission Control Module)	Actuation Test	
Soul(AM)	2011	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(AM)	2011	USA Area	ESP(Electronic Stability Program)	Version Information	
Soul(AM)	2011	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(AM)	2011	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(AM)	2011	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(AM)	2011	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(AM)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Soul(AM)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(AM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(AM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(AM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(AM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(AM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(AM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Soul(AM)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Soul(AM)	2011	USA Area	AC(Air Conditioning)	Version Information	
Soul(AM)	2011	USA Area	AC(Air Conditioning)	Read Fault Code	
Soul(AM)	2011	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(AM)	2011	USA Area	AC(Air Conditioning)	Read Data Stream	
Soul(AM)	2011	USA Area	AC(Air Conditioning)	Actuation Test	
Soul(AM)	2011	USA Area	BCM(Body Control Module)	Version Information	
Soul(AM)	2011	USA Area	BCM(Body Control Module)	Read Data Stream	
Soul(AM)	2011	USA Area	BCM(Body Control Module)	Actuation Test	
Soul(AM)	2011	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(AM)	2011	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(AM)	2011	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(AM)	2011	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(AM)	2011	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	

model	year	area	system	function	subfunction
Soul(AM)	2011	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(AM)	2011	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(AM)	2011	USA Area	Smart Key	Version Information	
Soul(AM)	2011	USA Area	Smart Key	Read Fault Code	
Soul(AM)	2011	USA Area	Smart Key	Clear Fault Memory	
Soul(AM)	2011	USA Area	Smart Key	Read Data Stream	
Soul(AM)	2011	USA Area	Smart Key	Actuation Test	
Soul(AM)	2011	USA Area	Smart Key	Special Function	Neutralization Mode
Soul(AM)	2011	USA Area	Smart Key	Special Function	SMK Status Information
Soul(AM)	2011	USA Area	Smart Key	Special Function	TP Status Information
Soul(AM)	2011	USA Area	Smart Key	Special Function	PDM Status Information
Soul(AM)	2011	USA Area	Smart Key	Special Function	FOB KEY Status Information
Soul(AM)	2011	USA Area	Smart Key	Special Function	Serial Communication Line Check
Soul(AM)	2011	USA Area	Smart Key	Special Function	Antenna Status Check
Soul(AM)	2011	USA Area	Smart Key	Special Function	Smart Key Code Saving
Soul(AM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(AM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(AM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(AM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(AM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Soul(AM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(AM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(AM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(AM)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(AM)	2011	USA Area	IMMO(Immobilizer)	Read Data Stream	
Soul(AM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(AM)	2011	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Soul(AM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(AM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Soul(AM)	2011	USA Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Soul(AM)	2011	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(AM)	2011	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Soul(AM)	2011	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Version Information	
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Read Fault Code	
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Read Data Stream	
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Actuation Test	
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Soul(AM)	2010	USA Area	TCM(Transmission Control Module)	Version Information	
Soul(AM)	2010	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(AM)	2010	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(AM)	2010	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(AM)	2010	USA Area	TCM(Transmission Control Module)	Actuation Test	
Soul(AM)	2010	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(AM)	2010	USA Area	ESP(Electronic Stability Program)	Version Information	
Soul(AM)	2010	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(AM)	2010	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(AM)	2010	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(AM)	2010	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(AM)	2010	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Soul(AM)	2010	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(AM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(AM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	

model	year	area	system	function	subfunction
Soul(AM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(AM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(AM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(AM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Soul(AM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	WCS Reset
Soul(AM)	2010	USA Area	BCM(Body Control Module)	Version Information	
Soul(AM)	2010	USA Area	BCM(Body Control Module)	Read Data Stream	
Soul(AM)	2010	USA Area	BCM(Body Control Module)	Actuation Test	
Soul(AM)	2010	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(AM)	2010	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(AM)	2010	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(AM)	2010	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(AM)	2010	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(AM)	2010	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(AM)	2010	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(AM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(AM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(AM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(AM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(AM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Soul(AM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(AM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(AM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(AM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(AM)	2010	USA Area	IMMO(Immobilizer)	Read Data Stream	
Soul(AM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(AM)	2010	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Soul(AM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(AM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Soul(AM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Teaching

model	year	area	system	function	subfunction
Soul(AM)	2010	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(AM)	2010	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Soul(AM)	2010	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Soul(PS)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Soul(PS)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
Soul(PS)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(PS)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
Soul(PS)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Soul(PS)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(PS)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(PS)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(PS)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Soul(PS)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(PS)	2017	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(PS)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
Soul(PS)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(PS)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(PS)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(PS)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	
Soul(PS)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(PS)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Soul(PS)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Soul(PS)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Soul(PS)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Soul(PS)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Soul(PS)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Soul(PS)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)

model	year	area	system	function	subfunction
Soul(PS)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Soul(PS)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(PS)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(PS)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(PS)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(PS)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(PS)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Soul(PS)	2017	USA Area	AC(Air Conditioning)	Version Information	
Soul(PS)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Soul(PS)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(PS)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	
Soul(PS)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Soul(PS)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Soul(PS)	2017	USA Area	BCM(Body Control Module)	Version Information	
Soul(PS)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Soul(PS)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Soul(PS)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Soul(PS)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Soul(PS)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul(PS)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Soul(PS)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(PS)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(PS)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(PS)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(PS)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(PS)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(PS)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering Motor)
Soul(PS)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Part Exchange(Power Steering

model	year	area	system	function	subfunction
Soul(PS)	2017	USA Area	Smart Key Unit	Version Information	
Soul(PS)	2017	USA Area	Smart Key Unit	Read Fault Code	
Soul(PS)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Soul(PS)	2017	USA Area	Smart Key Unit	Read Data Stream	
Soul(PS)	2017	USA Area	Smart Key Unit	Actuation Test	
Soul(PS)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Soul(PS)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Soul(PS)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Soul(PS)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Soul(PS)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Soul(PS)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Soul(PS)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(PS)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(PS)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(PS)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(PS)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(PS)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(PS)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(PS)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(PS)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Soul(PS)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Soul(PS)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Soul(PS)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Soul(PS)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Soul(PS)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Soul(PS)	2017	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Soul(PS)	2017	USA Area	IMMO(Immobilizer)	Read Fault Code	
Soul(PS)	2017	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Soul(PS)	2017	USA Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Soul(PS)	2017	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(PS)	2017	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Soul(PS)	2017	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(PS)	2017	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(PS)	2017	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(PS)	2017	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(PS)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
Soul(PS)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Soul(PS)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Soul(PS)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Soul(PS)	2017	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Soul(PS)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Soul(PS)	2017	USA Area	MFC(Multi Function Camera)	Version Information	
Soul(PS)	2017	USA Area	MFC(Multi Function Camera)	Read Fault Code	
Soul(PS)	2017	USA Area	MFC(Multi Function Camera)	Clear Fault Memory	
Soul(PS)	2017	USA Area	MFC(Multi Function Camera)	Read Data Stream	
Soul(PS)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Soul(PS)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPC Calibration
Soul(PS)	2017	USA Area	MFC(Multi Function Camera)	Special Function	LDWS Warning Actuation Test
Soul(PS)	2017	USA Area	MFC(Multi Function Camera)	Special Function	Variant Coding
Soul(PS)	2017	USA Area	SCC(Smart Cruise Control)	Version Information	
Soul(PS)	2017	USA Area	SCC(Smart Cruise Control)	Read Fault Code	
Soul(PS)	2017	USA Area	SCC(Smart Cruise Control)	Clear Fault Memory	
Soul(PS)	2017	USA Area	SCC(Smart Cruise Control)	Read Data Stream	
Soul(PS)	2017	USA Area	Amplifier	Version Information	
Soul(PS)	2017	USA Area	Amplifier	Special Function	AMP Operation Test
Soul(PS)	2017	USA Area	Telematics Unit	Version Information	
Soul(PS)	2017	USA Area	Telematics Unit	Read Fault Code	
Soul(PS)	2017	USA Area	Telematics Unit	Clear Fault Memory	
Soul(PS)	2017	USA Area	DCT(Dual Clutch Transmission)	Version Information	

model	year	area	system	function	subfunction
Soul(PS)	2017	USA Area	DCT(Dual Clutch Transmission)	Read Fault Code	
Soul(PS)	2017	USA Area	DCT(Dual Clutch Transmission)	Clear Fault Memory	
Soul(PS)	2017	USA Area	DCT(Dual Clutch Transmission)	Read Data Stream	
Soul(PS)	2017	USA Area	DCT(Dual Clutch Transmission)	Actuation Test	
Soul(PS)	2017	USA Area	DCT(Dual Clutch Transmission)	Special Function	DCT Learning Function
Soul(PS)	2016	USA Area	ECM(Engine Control Module)	Version Information	
Soul(PS)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
Soul(PS)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(PS)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
Soul(PS)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
Soul(PS)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(PS)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(PS)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(PS)	2016	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(PS)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(PS)	2016	USA Area	TCM(Transmission Control Module)	Version Information	
Soul(PS)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(PS)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(PS)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(PS)	2016	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Soul(PS)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
Soul(PS)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(PS)	2016	USA Area	ESC(Electronic Stability Control)	Version Information	
Soul(PS)	2016	USA Area	ESC(Electronic Stability Control)	Read Fault Code	
Soul(PS)	2016	USA Area	ESC(Electronic Stability Control)	Clear Fault Memory	
Soul(PS)	2016	USA Area	ESC(Electronic Stability Control)	Read Data Stream	
Soul(PS)	2016	USA Area	ESC(Electronic Stability Control)	Actuation Test	
Soul(PS)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	HCU Air Bleeding Mode
Soul(PS)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)

model	year	area	system	function	subfunction
Soul(PS)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Soul(PS)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(PS)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(PS)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(PS)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(PS)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(PS)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Soul(PS)	2016	USA Area	AC(Air Conditioning)	Version Information	
Soul(PS)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
Soul(PS)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(PS)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
Soul(PS)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
Soul(PS)	2016	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Soul(PS)	2016	USA Area	BCM(Body Control Module)	Version Information	
Soul(PS)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
Soul(PS)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Soul(PS)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
Soul(PS)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
Soul(PS)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
Soul(PS)	2016	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul(PS)	2016	USA Area	Smart Key Unit(Button)	Version Information	
Soul(PS)	2016	USA Area	Smart Key Unit(Button)	Read Fault Code	
Soul(PS)	2016	USA Area	Smart Key Unit(Button)	Clear Fault Memory	
Soul(PS)	2016	USA Area	Smart Key Unit(Button)	Read Data Stream	
Soul(PS)	2016	USA Area	Smart Key Unit(Button)	Actuation Test	
Soul(PS)	2016	USA Area	Smart Key Unit(Button)	Special Function	Smart Key Code Saving
Soul(PS)	2016	USA Area	Smart Key Unit(Button)	Special Function	Neutralization Mode
Soul(PS)	2016	USA Area	Smart Key Unit(Button)	Special Function	SMK Status Information
Soul(PS)	2016	USA Area	Smart Key Unit(Button)	Special Function	FOB KEY Status Information

model	year	area	system	function	subfunction
Soul(PS)	2016	USA Area	Smart Key Unit(Button)	Special Function	Current FOB Key Check
Soul(PS)	2016	USA Area	Smart Key Unit(Button)	Special Function	Antenna Status Check
Soul(PS)	2016	USA Area	Steering	Version Information	
Soul(PS)	2016	USA Area	Steering	Read Fault Code	
Soul(PS)	2016	USA Area	Steering	Clear Fault Memory	
Soul(PS)	2016	USA Area	Steering	Read Data Stream	
Soul(PS)	2016	USA Area	Steering	Read Freeze Frame	
Soul(PS)	2016	USA Area	Steering	Special Function	ASP Calibration
Soul(PS)	2016	USA Area	Steering	Special Function	EPS Type Recognition
Soul(PS)	2016	USA Area	Steering	Special Function	Power Steering Motor
Soul(PS)	2016	USA Area	Steering	Special Function	Power Steering ECU
Soul(PS)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(PS)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(PS)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(PS)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(PS)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(PS)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(PS)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(PS)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(PS)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Soul(PS)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Soul(PS)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Soul(PS)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Soul(PS)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Soul(PS)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Soul(PS)	2016	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Soul(PS)	2016	USA Area	MFC(Multi-Function Camera)	Version Information	
Soul(PS)	2016	USA Area	MFC(Multi-Function Camera)	Read Fault Code	
Soul(PS)	2016	USA Area	MFC(Multi-Function Camera)	Clear Fault Memory	

model	year	area	system	function	subfunction
Soul(PS)	2016	USA Area	MFC(Multi-Function Camera)	Read Data Stream	
Soul(PS)	2016	USA Area	MFC(Multi-Function Camera)	Special Function	SPTAC Calibration
Soul(PS)	2016	USA Area	MFC(Multi-Function Camera)	Special Function	SPC Calibration
Soul(PS)	2016	USA Area	MFC(Multi-Function Camera)	Special Function	LDWS Warning Actuation Test
Soul(PS)	2016	USA Area	MFC(Multi-Function Camera)	Special Function	Variant Coding
Soul(PS)	2016	USA Area	IMMO(Immobilizer)	Read Fault Code	
Soul(PS)	2016	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Soul(PS)	2016	USA Area	IMMO(Immobilizer)	Read Data Stream	
Soul(PS)	2016	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(PS)	2016	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Soul(PS)	2016	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(PS)	2016	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(PS)	2016	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(PS)	2016	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(PS)	2016	USA Area	Telematics Unit	Version Information	
Soul(PS)	2016	USA Area	Telematics Unit	Read Fault Code	
Soul(PS)	2016	USA Area	Telematics Unit	Clear Fault Memory	
Soul(PS)	2015	USA Area	ECM(Engine Control Module)	Version Information	
Soul(PS)	2015	USA Area	ECM(Engine Control Module)	Read Fault Code	
Soul(PS)	2015	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(PS)	2015	USA Area	ECM(Engine Control Module)	Read Data Stream	
Soul(PS)	2015	USA Area	ECM(Engine Control Module)	Actuation Test	
Soul(PS)	2015	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(PS)	2015	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(PS)	2015	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(PS)	2015	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)
Soul(PS)	2015	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(PS)	2015	USA Area	TCM(Transmission Control Module)	Version Information	
Soul(PS)	2015	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(PS)	2015	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	

model	year	area	system	function	subfunction
Soul(PS)	2015	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(PS)	2015	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Soul(PS)	2015	USA Area	TCM(Transmission Control Module)	Actuation Test	
Soul(PS)	2015	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(PS)	2015	USA Area	ESP(Electronic Stability Program)	Version Information	
Soul(PS)	2015	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(PS)	2015	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(PS)	2015	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(PS)	2015	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(PS)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(PS)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Soul(PS)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Soul(PS)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(PS)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(PS)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(PS)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(PS)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(PS)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Soul(PS)	2015	USA Area	AC(Air Conditioning)	Version Information	
Soul(PS)	2015	USA Area	AC(Air Conditioning)	Read Fault Code	
Soul(PS)	2015	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(PS)	2015	USA Area	AC(Air Conditioning)	Read Data Stream	
Soul(PS)	2015	USA Area	AC(Air Conditioning)	Actuation Test	
Soul(PS)	2015	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Soul(PS)	2015	USA Area	BCM(Body Control Module)	Version Information	
Soul(PS)	2015	USA Area	BCM(Body Control Module)	Read Fault Code	
Soul(PS)	2015	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Soul(PS)	2015	USA Area	BCM(Body Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Soul(PS)	2015	USA Area	BCM(Body Control Module)	Actuation Test	
Soul(PS)	2015	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Soul(PS)	2015	USA Area	BCM(Body Control Module)	Special Function	User Option
Soul(PS)	2015	USA Area	Smart Key Unit(Button)	Version Information	
Soul(PS)	2015	USA Area	Smart Key Unit(Button)	Read Fault Code	
Soul(PS)	2015	USA Area	Smart Key Unit(Button)	Clear Fault Memory	
Soul(PS)	2015	USA Area	Smart Key Unit(Button)	Read Data Stream	
Soul(PS)	2015	USA Area	Smart Key Unit(Button)	Actuation Test	
Soul(PS)	2015	USA Area	Smart Key Unit(Button)	Special Function	Smart Key Code Saving
Soul(PS)	2015	USA Area	Smart Key Unit(Button)	Special Function	Neutralization Mode
Soul(PS)	2015	USA Area	Smart Key Unit(Button)	Special Function	SMK Status Information
Soul(PS)	2015	USA Area	Smart Key Unit(Button)	Special Function	FOB KEY Status Information
Soul(PS)	2015	USA Area	Smart Key Unit(Button)	Special Function	Current FOB Key Check
Soul(PS)	2015	USA Area	Smart Key Unit(Button)	Special Function	Antenna Status Check
Soul(PS)	2015	USA Area	Steering	Version Information	
Soul(PS)	2015	USA Area	Steering	Read Fault Code	
Soul(PS)	2015	USA Area	Steering	Clear Fault Memory	
Soul(PS)	2015	USA Area	Steering	Read Data Stream	
Soul(PS)	2015	USA Area	Steering	Read Freeze Frame	
Soul(PS)	2015	USA Area	Steering	Special Function	ASP Calibration
Soul(PS)	2015	USA Area	Steering	Special Function	EPS Type Recognition
Soul(PS)	2015	USA Area	Steering	Special Function	Power Steering Motor
Soul(PS)	2015	USA Area	Steering	Special Function	Power Steering ECU
Soul(PS)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(PS)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(PS)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(PS)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(PS)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(PS)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(PS)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading

model	year	area	system	function	subfunction
Soul(PS)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Soul(PS)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Soul(PS)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Soul(PS)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Soul(PS)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Soul(PS)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Soul(PS)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Soul(PS)	2015	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Soul(PS)	2015	USA Area	IMMO(Immobilizer)	Read Fault Code	
Soul(PS)	2015	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Soul(PS)	2015	USA Area	IMMO(Immobilizer)	Read Data Stream	
Soul(PS)	2015	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(PS)	2015	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Soul(PS)	2015	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(PS)	2015	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(PS)	2015	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Soul(PS)	2015	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Soul(PS)	2015	USA Area	Telematics Unit	Version Information	
Soul(PS)	2015	USA Area	Telematics Unit	Read Fault Code	
Soul(PS)	2015	USA Area	Telematics Unit	Clear Fault Memory	
Soul(PS)	2014	USA Area	ECM(Engine Control Module)	Version Information	
Soul(PS)	2014	USA Area	ECM(Engine Control Module)	Read Fault Code	
Soul(PS)	2014	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Soul(PS)	2014	USA Area	ECM(Engine Control Module)	Read Data Stream	
Soul(PS)	2014	USA Area	ECM(Engine Control Module)	Actuation Test	
Soul(PS)	2014	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Soul(PS)	2014	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Soul(PS)	2014	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Soul(PS)	2014	USA Area	ECM(Engine Control Module)	Special Function	ISG Test(Optional)

model	year	area	system	function	subfunction
Soul(PS)	2014	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Soul(PS)	2014	USA Area	TCM(Transmission Control Module)	Version Information	
Soul(PS)	2014	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Soul(PS)	2014	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Soul(PS)	2014	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Soul(PS)	2014	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Soul(PS)	2014	USA Area	TCM(Transmission Control Module)	Actuation Test	
Soul(PS)	2014	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Soul(PS)	2014	USA Area	ESP(Electronic Stability Program)	Version Information	
Soul(PS)	2014	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Soul(PS)	2014	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Soul(PS)	2014	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Soul(PS)	2014	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Soul(PS)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Soul(PS)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Soul(PS)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Soul(PS)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Soul(PS)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Soul(PS)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Soul(PS)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Soul(PS)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Soul(PS)	2014	USA Area	AC(Air Conditioning)	Version Information	
Soul(PS)	2014	USA Area	AC(Air Conditioning)	Read Fault Code	
Soul(PS)	2014	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Soul(PS)	2014	USA Area	AC(Air Conditioning)	Read Data Stream	
Soul(PS)	2014	USA Area	AC(Air Conditioning)	Actuation Test	
Soul(PS)	2014	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Soul(PS)	2014	USA Area	IC(Instrument Cluster)	Version Information	

model	year	area	system	function	subfunction
Soul(PS)	2014	USA Area	IC(Instrument Cluster)	Read Fault Code	
Soul(PS)	2014	USA Area	IC(Instrument Cluster)	Clear Fault Memory	
Soul(PS)	2014	USA Area	IC(Instrument Cluster)	Read Data Stream	
Soul(PS)	2014	USA Area	IC(Instrument Cluster)	Actuation Test	
Soul(PS)	2014	USA Area	IC(Instrument Cluster)	Special Function	CLU Variant Coding
Soul(PS)	2014	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Soul(PS)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Soul(PS)	2014	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Soul(PS)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Soul(PS)	2014	USA Area	MDPS(Motor Driven Power Steering)	Read Freeze Frame	
Soul(PS)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration
Soul(PS)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Soul(PS)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering Motor
Soul(PS)	2014	USA Area	MDPS(Motor Driven Power Steering)	Special Function	Power Steering ECU
Soul(PS)	2014	USA Area	Smart Key Unit(Button)	Version Information	
Soul(PS)	2014	USA Area	Smart Key Unit(Button)	Read Fault Code	
Soul(PS)	2014	USA Area	Smart Key Unit(Button)	Clear Fault Memory	
Soul(PS)	2014	USA Area	Smart Key Unit(Button)	Read Data Stream	
Soul(PS)	2014	USA Area	Smart Key Unit(Button)	Actuation Test	
Soul(PS)	2014	USA Area	Smart Key Unit(Button)	Special Function	Smart Key Code Saving
Soul(PS)	2014	USA Area	Smart Key Unit(Button)	Special Function	Neutralization Mode
Soul(PS)	2014	USA Area	Smart Key Unit(Button)	Special Function	SMK Status Information
Soul(PS)	2014	USA Area	Smart Key Unit(Button)	Special Function	FOB KEY Status Information
Soul(PS)	2014	USA Area	Smart Key Unit(Button)	Special Function	Current FOB Key Check
Soul(PS)	2014	USA Area	Smart Key Unit(Button)	Special Function	Antenna Status Check
Soul(PS)	2014	USA Area	IMMO(Immobilizer)	Read Fault Code	
Soul(PS)	2014	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Soul(PS)	2014	USA Area	IMMO(Immobilizer)	Read Data Stream	
Soul(PS)	2014	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Soul(PS)	2014	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode

model	year	area	system	function	subfunction
Soul(PS)	2014	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Soul(PS)	2014	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Soul(PS)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Version Information	
Soul(PS)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Read Fault Code	
Soul(PS)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Clear Fault Memory	
Soul(PS)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Read Data Stream	
Soul(PS)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Actuation Test	
Soul(PS)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Parameter Setting&Zero Position Initial
Soul(PS)	2014	USA Area	AHLS(Auto Headlamp Leveling System)	Special Function	Headlamp Leveling
Soul(PS)	2014	USA Area	Telematics Unit	Version Information	
Soul(PS)	2014	USA Area	Telematics Unit	Read Fault Code	
Soul(PS)	2014	USA Area	Telematics Unit	Clear Fault Memory	
Soul(PS)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Soul(PS)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Soul(PS)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Soul(PS)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Soul(PS)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Soul(PS)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Soul(PS)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Soul(PS)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Version Information	
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Read Fault Code	
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Read Data Stream	
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Actuation Test	
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type)

model	year	area	system	function	subfunction
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Spectra(LD)	2009	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Spectra(LD)	2009	USA Area	TCM(Transmission Control Module)	Version Information	
Spectra(LD)	2009	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Spectra(LD)	2009	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Spectra(LD)	2009	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Spectra(LD)	2009	USA Area	TCM(Transmission Control Module)	Actuation Test	
Spectra(LD)	2009	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Spectra(LD)	2009	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Spectra(LD)	2009	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Spectra(LD)	2009	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Spectra(LD)	2009	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Spectra(LD)	2009	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Spectra(LD)	2009	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Spectra(LD)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Spectra(LD)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Spectra(LD)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Spectra(LD)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Spectra(LD)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Spectra(LD)	2009	USA Area	AC(Air Conditioning)	Version Information	
Spectra(LD)	2009	USA Area	AC(Air Conditioning)	Read Fault Code	
Spectra(LD)	2009	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Spectra(LD)	2009	USA Area	AC(Air Conditioning)	Read Data Stream	
Spectra(LD)	2009	USA Area	AC(Air Conditioning)	Actuation Test	
Spectra(LD)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Spectra(LD)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Spectra(LD)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Spectra(LD)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Spectra(LD)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	

model	year	area	system	function	subfunction
Spectra(LD)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Spectra(LD)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Spectra(LD)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Spectra(LD)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Spectra(LD)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Spectra(LD)	2009	USA Area	IMMO(Immobilizer)	Read Data Stream	
Spectra(LD)	2009	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Spectra(LD)	2009	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Spectra(LD)	2009	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Spectra(LD)	2009	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Spectra(LD)	2009	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Spectra(LD)	2009	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Version Information	
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Read Fault Code	
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Read Data Stream	
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Actuation Test	
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Spectra(LD)	2008	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Spectra(LD)	2008	USA Area	TCM(Transmission Control Module)	Version Information	
Spectra(LD)	2008	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Spectra(LD)	2008	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Spectra(LD)	2008	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Spectra(LD)	2008	USA Area	TCM(Transmission Control Module)	Actuation Test	
Spectra(LD)	2008	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Spectra(LD)	2008	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Spectra(LD)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Spectra(LD)	2008	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Spectra(LD)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Spectra(LD)	2008	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Spectra(LD)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Spectra(LD)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Spectra(LD)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Spectra(LD)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Spectra(LD)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Spectra(LD)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Spectra(LD)	2008	USA Area	AC(Air Conditioning)	Version Information	
Spectra(LD)	2008	USA Area	AC(Air Conditioning)	Read Fault Code	
Spectra(LD)	2008	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Spectra(LD)	2008	USA Area	AC(Air Conditioning)	Read Data Stream	
Spectra(LD)	2008	USA Area	AC(Air Conditioning)	Actuation Test	
Spectra(LD)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Spectra(LD)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Spectra(LD)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Spectra(LD)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Spectra(LD)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Spectra(LD)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Spectra(LD)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Spectra(LD)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Spectra(LD)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Spectra(LD)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Spectra(LD)	2008	USA Area	IMMO(Immobilizer)	Read Data Stream	
Spectra(LD)	2008	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Spectra(LD)	2008	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Spectra(LD)	2008	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Spectra(LD)	2008	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Spectra(LD)	2008	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Spectra(LD)	2008	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Version Information	
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Read Fault Code	
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Read Data Stream	
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Actuation Test	
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Spectra(LD)	2007	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Spectra(LD)	2007	USA Area	TCM(Transmission Control Module)	Version Information	
Spectra(LD)	2007	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Spectra(LD)	2007	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Spectra(LD)	2007	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Spectra(LD)	2007	USA Area	TCM(Transmission Control Module)	Actuation Test	
Spectra(LD)	2007	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Spectra(LD)	2007	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Spectra(LD)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Spectra(LD)	2007	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Spectra(LD)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Spectra(LD)	2007	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Spectra(LD)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Spectra(LD)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Spectra(LD)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Spectra(LD)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	

model	year	area	system	function	subfunction
Spectra(LD)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Spectra(LD)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Spectra(LD)	2007	USA Area	AC(Air Conditioning)	Version Information	
Spectra(LD)	2007	USA Area	AC(Air Conditioning)	Read Fault Code	
Spectra(LD)	2007	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Spectra(LD)	2007	USA Area	AC(Air Conditioning)	Read Data Stream	
Spectra(LD)	2007	USA Area	AC(Air Conditioning)	Actuation Test	
Spectra(LD)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Spectra(LD)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Spectra(LD)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Spectra(LD)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Spectra(LD)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Spectra(LD)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Spectra(LD)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Spectra(LD)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Spectra(LD)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Spectra(LD)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Spectra(LD)	2007	USA Area	IMMO(Immobilizer)	Read Data Stream	
Spectra(LD)	2007	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Spectra(LD)	2007	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Spectra(LD)	2007	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Spectra(LD)	2007	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Spectra(LD)	2007	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Spectra(LD)	2007	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Version Information	
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Read Fault Code	
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Read Data Stream	
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Actuation Test	
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Spectra(LD)	2006	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Spectra(LD)	2006	USA Area	TCM(Transmission Control Module)	Version Information	
Spectra(LD)	2006	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Spectra(LD)	2006	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Spectra(LD)	2006	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Spectra(LD)	2006	USA Area	TCM(Transmission Control Module)	Actuation Test	
Spectra(LD)	2006	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Spectra(LD)	2006	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Spectra(LD)	2006	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Spectra(LD)	2006	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Spectra(LD)	2006	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Spectra(LD)	2006	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Spectra(LD)	2006	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Spectra(LD)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Spectra(LD)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Spectra(LD)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Spectra(LD)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Spectra(LD)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Spectra(LD)	2006	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Version Information	
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Read Fault Code	
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Actuation Test	
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Spectra(LD)	2005	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Spectra(LD)	2005	USA Area	TCM(Transmission Control Module)	Version Information	
Spectra(LD)	2005	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Spectra(LD)	2005	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Spectra(LD)	2005	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Spectra(LD)	2005	USA Area	TCM(Transmission Control Module)	Actuation Test	
Spectra(LD)	2005	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Spectra(LD)	2005	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Spectra(LD)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Spectra(LD)	2005	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Spectra(LD)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Spectra(LD)	2005	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Spectra(LD)	2005	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Spectra(LD)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Spectra(LD)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Spectra(LD)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Spectra(LD)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Spectra(LD)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Spectra(LD)	2005	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Version Information	
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Read Data Stream	
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Actuation Test	
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Spectra(LD)	2004	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Spectra(LD)	2004	USA Area	TCM(Transmission Control Module)	Version Information	
Spectra(LD)	2004	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Spectra(LD)	2004	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Spectra(LD)	2004	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Spectra(LD)	2004	USA Area	TCM(Transmission Control Module)	Actuation Test	
Spectra(LD)	2004	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Spectra(LD)	2004	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Spectra(LD)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Spectra(LD)	2004	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Spectra(LD)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Spectra(LD)	2004	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Spectra(LD)	2004	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Spectra(LD)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Spectra(LD)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Spectra(LD)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Spectra(LD)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Spectra(LD)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Spectra(LD)	2004	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Spectra(SD)	2004	USA Area	ECM(Engine Control Module)	Version Information	
Spectra(SD)	2004	USA Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Spectra(SD)	2004	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Spectra(SD)	2004	USA Area	ECM(Engine Control Module)	Read Data Stream	
Spectra(SD)	2004	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Spectra(SD)	2004	USA Area	TCM(Transmission Control Module)	Version Information	
Spectra(SD)	2004	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Spectra(SD)	2004	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Spectra(SD)	2004	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Spectra(SD)	2004	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Spectra(SD)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Spectra(SD)	2004	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Spectra(SD)	2004	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Spectra(SD)	2004	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Spectra(SD)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Spectra(SD)	2004	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Spectra(SD)	2003	USA Area	ECM(Engine Control Module)	Version Information	
Spectra(SD)	2003	USA Area	ECM(Engine Control Module)	Read Fault Code	
Spectra(SD)	2003	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Spectra(SD)	2003	USA Area	ECM(Engine Control Module)	Read Data Stream	
Spectra(SD)	2003	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Spectra(SD)	2003	USA Area	TCM(Transmission Control Module)	Version Information	
Spectra(SD)	2003	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Spectra(SD)	2003	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Spectra(SD)	2003	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Spectra(SD)	2003	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Spectra(SD)	2003	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Spectra(SD)	2003	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Spectra(SD)	2003	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Spectra(SD)	2003	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Spectra(SD)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Spectra(SD)	2003	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	

model	year	area	system	function	subfunction
Spectra(SD)	2002	USA Area	ECM(Engine Control Module)	Version Information	
Spectra(SD)	2002	USA Area	ECM(Engine Control Module)	Read Fault Code	
Spectra(SD)	2002	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Spectra(SD)	2002	USA Area	ECM(Engine Control Module)	Read Data Stream	
Spectra(SD)	2002	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Spectra(SD)	2002	USA Area	TCM(Transmission Control Module)	Version Information	
Spectra(SD)	2002	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Spectra(SD)	2002	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Spectra(SD)	2002	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Spectra(SD)	2002	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Spectra(SD)	2002	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Spectra(SD)	2002	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Spectra(SD)	2002	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Spectra(SD)	2002	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Spectra(SD)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Spectra(SD)	2002	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Spectra(SD)	2001	USA Area	ECM(Engine Control Module)	Version Information	
Spectra(SD)	2001	USA Area	ECM(Engine Control Module)	Read Fault Code	
Spectra(SD)	2001	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Spectra(SD)	2001	USA Area	ECM(Engine Control Module)	Read Data Stream	
Spectra(SD)	2001	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Spectra(SD)	2001	USA Area	TCM(Transmission Control Module)	Version Information	
Spectra(SD)	2001	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Spectra(SD)	2001	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Spectra(SD)	2001	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Spectra(SD)	2001	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Spectra(SD)	2001	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Spectra(SD)	2001	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Spectra(SD)	2001	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Spectra(SD)	2001	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	

model	year	area	system	function	subfunction
Spectra(SD)	2001	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Spectra(SD)	2001	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Spectra(SD)	2001	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Spectra(SD)	2001	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Spectra(SD)	2000	USA Area	ECM(Engine Control Module)	Version Information	
Spectra(SD)	2000	USA Area	ECM(Engine Control Module)	Read Fault Code	
Spectra(SD)	2000	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Spectra(SD)	2000	USA Area	ECM(Engine Control Module)	Read Data Stream	
Spectra(SD)	2000	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Spectra(SD)	2000	USA Area	TCM(Transmission Control Module)	Version Information	
Spectra(SD)	2000	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Spectra(SD)	2000	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Spectra(SD)	2000	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Spectra(SD)	2000	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Spectra(SD)	2000	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Spectra(SD)	2000	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Spectra(SD)	2000	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Spectra(SD)	2000	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Spectra(SD)	2000	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Spectra(SD)	2000	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Spectra(SD)	2000	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Spectra(SD)	2000	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(AL)	2002	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	2002	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	2002	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	2002	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(AL)	2002	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	2002	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	2002	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	2002	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test

model	year	area	system	function	subfunction
Sportage(AL)	2002	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(AL)	2002	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(AL)	2002	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(AL)	2002	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(AL)	2002	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(AL)	2002	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(AL)	2001	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	2001	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	2001	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	2001	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(AL)	2001	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	2001	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	2001	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	2001	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sportage(AL)	2001	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(AL)	2001	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(AL)	2001	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(AL)	2001	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(AL)	2001	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(AL)	2000	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	2000	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	2000	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	2000	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(AL)	2000	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	2000	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	2000	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	2000	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sportage(AL)	1999	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	1999	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1999	USA Area	ECM(Engine Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(AL)	1999	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(AL)	1999	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1999	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	1999	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	1999	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sportage(AL)	1998	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	1998	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1998	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	1998	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(AL)	1998	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1998	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	1998	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	1998	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sportage(AL)	1997	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	1997	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1997	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	1997	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(AL)	1997	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1997	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	1997	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	1997	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sportage(AL)	1996	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(AL)	1996	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1996	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	1996	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(AL)	1996	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1996	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	1996	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	1996	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sportage(AL)	1995	USA Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(AL)	1995	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(AL)	1995	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(AL)	1995	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(AL)	1995	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(AL)	1995	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(AL)	1995	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(AL)	1995	USA Area	TCM(Transmission Control Module)	Special Function	Readiness Test
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2010	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2010	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2010	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2010	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(KM)	2010	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2010	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(KM)	2010	USA Area	ESP(Electronic Stability Program)	Version Information	
Sportage(KM)	2010	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(KM)	2010	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(KM)	2010	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(KM)	2010	USA Area	ESP(Electronic Stability Program)	Actuation Test	

model	year	area	system	function	subfunction
Sportage(KM)	2010	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(KM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Sportage(KM)	2010	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sportage(KM)	2010	USA Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2010	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(KM)	2010	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2010	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2010	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(KM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(KM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(KM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(KM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(KM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(KM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(KM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(KM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(KM)	2010	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(KM)	2010	USA Area	ETACS	Version Information	
Sportage(KM)	2010	USA Area	ETACS	Read Data Stream	
Sportage(KM)	2010	USA Area	ETACS	Actuation Test	
Sportage(KM)	2010	USA Area	4WD Control	Version Information	
Sportage(KM)	2010	USA Area	4WD Control	Read Fault Code	
Sportage(KM)	2010	USA Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2010	USA Area	4WD Control	Read Data Stream	
Sportage(KM)	2010	USA Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(KM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(KM)	2010	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(KM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(KM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(KM)	2010	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(KM)	2010	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2010	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sportage(KM)	2010	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2010	USA Area	TCM(Transmission Control Module)	Special Function	Init Of TCU Learning
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type)
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2009	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2009	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2009	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2009	USA Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(KM)	2009	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2009	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(KM)	2009	USA Area	ESP(Electronic Stability Program)	Version Information	
Sportage(KM)	2009	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(KM)	2009	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(KM)	2009	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(KM)	2009	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(KM)	2009	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(KM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Sportage(KM)	2009	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sportage(KM)	2009	USA Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2009	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(KM)	2009	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2009	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2009	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(KM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(KM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(KM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(KM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(KM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(KM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(KM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(KM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(KM)	2009	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(KM)	2009	USA Area	ETACS	Version Information	

model	year	area	system	function	subfunction
Sportage(KM)	2009	USA Area	ETACS	Read Data Stream	
Sportage(KM)	2009	USA Area	ETACS	Actuation Test	
Sportage(KM)	2009	USA Area	4WD Control	Version Information	
Sportage(KM)	2009	USA Area	4WD Control	Read Fault Code	
Sportage(KM)	2009	USA Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2009	USA Area	4WD Control	Read Data Stream	
Sportage(KM)	2009	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(KM)	2009	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(KM)	2009	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(KM)	2009	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(KM)	2009	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(KM)	2009	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(KM)	2009	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2009	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sportage(KM)	2009	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2009	USA Area	TCM(Transmission Control Module)	Special Function	Init Of TCU Learning
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type)

model	year	area	system	function	subfunction
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2008	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2008	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2008	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2008	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(KM)	2008	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2008	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(KM)	2008	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(KM)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(KM)	2008	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(KM)	2008	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(KM)	2008	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(KM)	2008	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(KM)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Sportage(KM)	2008	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sportage(KM)	2008	USA Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2008	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(KM)	2008	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2008	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2008	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(KM)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(KM)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(KM)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(KM)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(KM)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(KM)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(KM)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(KM)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(KM)	2008	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(KM)	2008	USA Area	ETACS	Version Information	
Sportage(KM)	2008	USA Area	ETACS	Read Data Stream	
Sportage(KM)	2008	USA Area	ETACS	Actuation Test	
Sportage(KM)	2008	USA Area	4WD Control	Version Information	
Sportage(KM)	2008	USA Area	4WD Control	Read Fault Code	
Sportage(KM)	2008	USA Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2008	USA Area	4WD Control	Read Data Stream	
Sportage(KM)	2008	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(KM)	2008	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(KM)	2008	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(KM)	2008	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(KM)	2008	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(KM)	2008	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(KM)	2008	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2008	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sportage(KM)	2008	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2008	USA Area	TCM(Transmission Control Module)	Special Function	Init Of TCU Learning
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2007	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2007	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2007	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2007	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(KM)	2007	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2007	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(KM)	2007	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(KM)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(KM)	2007	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(KM)	2007	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(KM)	2007	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(KM)	2007	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(KM)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Sportage(KM)	2007	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sportage(KM)	2007	USA Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2007	USA Area	AC(Air Conditioning)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(KM)	2007	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2007	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2007	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(KM)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(KM)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(KM)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(KM)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(KM)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(KM)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(KM)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(KM)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(KM)	2007	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(KM)	2007	USA Area	ETACS	Version Information	
Sportage(KM)	2007	USA Area	ETACS	Read Data Stream	
Sportage(KM)	2007	USA Area	ETACS	Actuation Test	
Sportage(KM)	2007	USA Area	4WD Control	Version Information	
Sportage(KM)	2007	USA Area	4WD Control	Read Fault Code	
Sportage(KM)	2007	USA Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2007	USA Area	4WD Control	Read Data Stream	
Sportage(KM)	2007	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(KM)	2007	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(KM)	2007	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(KM)	2007	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(KM)	2007	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(KM)	2007	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(KM)	2007	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2007	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test

model	year	area	system	function	subfunction
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sportage(KM)	2007	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2007	USA Area	TCM(Transmission Control Module)	Special Function	Init Of TCU Learning
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2006	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2006	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2006	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2006	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(KM)	2006	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2006	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(KM)	2006	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(KM)	2006	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(KM)	2006	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(KM)	2006	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(KM)	2006	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(KM)	2006	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(KM)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Sportage(KM)	2006	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sportage(KM)	2006	USA Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2006	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(KM)	2006	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2006	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2006	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(KM)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(KM)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(KM)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(KM)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(KM)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(KM)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(KM)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(KM)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(KM)	2006	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(KM)	2006	USA Area	ETACS	Version Information	
Sportage(KM)	2006	USA Area	ETACS	Read Data Stream	
Sportage(KM)	2006	USA Area	ETACS	Actuation Test	
Sportage(KM)	2006	USA Area	4WD Control	Version Information	
Sportage(KM)	2006	USA Area	4WD Control	Read Fault Code	
Sportage(KM)	2006	USA Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2006	USA Area	IMMO(Immobilizer)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(KM)	2006	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2006	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sportage(KM)	2006	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2006	USA Area	TCM(Transmission Control Module)	Special Function	Init Of TCU Learning
Sportage(KM)	2006	USA Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(KM)	2006	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	Idle RPM Control Test(Isc Type
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	Ignition Test
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	Monitoring Test Results
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	DTC Back-up Mode
Sportage(KM)	2005	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(KM)	2005	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(KM)	2005	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(KM)	2005	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(KM)	2005	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(KM)	2005	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values

model	year	area	system	function	subfunction
Sportage(KM)	2005	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(KM)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(KM)	2005	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(KM)	2005	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(KM)	2005	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(KM)	2005	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(KM)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(KM)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(KM)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(KM)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(KM)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Sportage(KM)	2005	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Pass.Airbag Realtime Info.
Sportage(KM)	2005	USA Area	AC(Air Conditioning)	Version Information	
Sportage(KM)	2005	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(KM)	2005	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(KM)	2005	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(KM)	2005	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(KM)	2005	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(KM)	2005	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(KM)	2005	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(KM)	2005	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(KM)	2005	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(KM)	2005	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(KM)	2005	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(KM)	2005	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(KM)	2005	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(KM)	2005	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(KM)	2005	USA Area	ETACS	Version Information	
Sportage(KM)	2005	USA Area	ETACS	Read Data Stream	
Sportage(KM)	2005	USA Area	ETACS	Actuation Test	

model	year	area	system	function	subfunction
Sportage(KM)	2005	USA Area	4WD Control	Version Information	
Sportage(KM)	2005	USA Area	4WD Control	Read Fault Code	
Sportage(KM)	2005	USA Area	4WD Control	Clear Fault Memory	
Sportage(KM)	2005	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(KM)	2005	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(KM)	2005	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	PCSV Valve Test
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	Front Oxygen Short-trip Test
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	Belt Timing Test
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	ISA Short Trip Test
Sportage(KM)	2005	USA Area	ECM(Engine Control Module)	Special Function	MAF Short Trip Test
Sportage(KM)	2005	USA Area	TCM(Transmission Control Module)	Special Function	Init Of TCU Learning
Sportage(KM)	2005	USA Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(KM)	2005	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Special Function	Resetting E-CVVT Values
Sportage(QL)	2017	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(QL)	2017	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(QL)	2017	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(QL)	2017	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	TCM(Transmission Control Module)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(QL)	2017	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(QL)	2017	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(QL)	2017	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Version Information	
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Fault Code	
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Read Data Stream	
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Actuation Test	
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Variant Coding
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Assembly Check
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Brake Pad Change Mode
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	HCU Air Bleeding Mode
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	Radar Sensor
Sportage(QL)	2017	USA Area	ABS(Anti-Lock Brake System)	Special Function	AEB Variant Coding
Sportage(QL)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(QL)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(QL)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(QL)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(QL)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Actuation Test	
Sportage(QL)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(QL)	2017	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	Body Sensor Reset
Sportage(QL)	2017	USA Area	AC(Air Conditioning)	Version Information	
Sportage(QL)	2017	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(QL)	2017	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	AC(Air Conditioning)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(QL)	2017	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(QL)	2017	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sportage(QL)	2017	USA Area	BCM(Body Control Module)	Version Information	
Sportage(QL)	2017	USA Area	BCM(Body Control Module)	Read Fault Code	
Sportage(QL)	2017	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	BCM(Body Control Module)	Read Data Stream	
Sportage(QL)	2017	USA Area	BCM(Body Control Module)	Actuation Test	
Sportage(QL)	2017	USA Area	BCM(Body Control Module)	Special Function	CLU Variant Coding
Sportage(QL)	2017	USA Area	BCM(Body Control Module)	Special Function	User Option
Sportage(QL)	2017	USA Area	MDPS(Motor Driven Power Steering)	Version Information	
Sportage(QL)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Fault Code	
Sportage(QL)	2017	USA Area	MDPS(Motor Driven Power Steering)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	MDPS(Motor Driven Power Steering)	Read Data Stream	
Sportage(QL)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	ASP Calibration(CAN)
Sportage(QL)	2017	USA Area	MDPS(Motor Driven Power Steering)	Special Function	EPS Type Recognition
Sportage(QL)	2017	USA Area	Smart Key Unit	Version Information	
Sportage(QL)	2017	USA Area	Smart Key Unit	Read Fault Code	
Sportage(QL)	2017	USA Area	Smart Key Unit	Clear Fault Memory	
Sportage(QL)	2017	USA Area	Smart Key Unit	Read Data Stream	
Sportage(QL)	2017	USA Area	Smart Key Unit	Actuation Test	
Sportage(QL)	2017	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(QL)	2017	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(QL)	2017	USA Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(QL)	2017	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(QL)	2017	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(QL)	2017	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(QL)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(QL)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(QL)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(QL)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(QL)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(QL)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(QL)	2017	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(QL)	2017	USA Area	AFS(Adaptive Front Lighting System)	Version Information	
Sportage(QL)	2017	USA Area	AFS(Adaptive Front Lighting System)	Read Fault Code	
Sportage(QL)	2017	USA Area	AFS(Adaptive Front Lighting System)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	AFS(Adaptive Front Lighting System)	Read Data Stream	
Sportage(QL)	2017	USA Area	AFS(Adaptive Front Lighting System)	Actuation Test	
Sportage(QL)	2017	USA Area	AFS(Adaptive Front Lighting System)	Special Function	Parameter Download
Sportage(QL)	2017	USA Area	IMMO(Immobilizer)	Read Fault Code	
Sportage(QL)	2017	USA Area	IMMO(Immobilizer)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(QL)	2017	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(QL)	2017	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(QL)	2017	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(QL)	2017	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(QL)	2017	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(QL)	2017	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(QL)	2017	USA Area	4WD Control	Version Information	
Sportage(QL)	2017	USA Area	4WD Control	Read Fault Code	
Sportage(QL)	2017	USA Area	4WD Control	Clear Fault Memory	
Sportage(QL)	2017	USA Area	4WD Control	Read Data Stream	
Sportage(QL)	2017	USA Area	4WD Control	Actuation Test	
Sportage(QL)	2017	USA Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(QL)	2017	USA Area	4WD Control	Special Function	Clutch Learning Read
Sportage(QL)	2017	USA Area	4WD Control	Special Function	Clutch Learning Write
Sportage(QL)	2017	USA Area	PTG(Power Tail Gate)	Version Information	
Sportage(QL)	2017	USA Area	PTG(Power Tail Gate)	Read Fault Code	
Sportage(QL)	2017	USA Area	PTG(Power Tail Gate)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(QL)	2017	USA Area	PTG(Power Tail Gate)	Read Data Stream	
Sportage(QL)	2017	USA Area	PTG(Power Tail Gate)	Special Function	Power Tailgate Mode
Sportage(QL)	2017	USA Area	MFC(Multi Function Camera)	Version Information	
Sportage(QL)	2017	USA Area	MFC(Multi Function Camera)	Read Fault Code	
Sportage(QL)	2017	USA Area	MFC(Multi Function Camera)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	MFC(Multi Function Camera)	Read Data Stream	
Sportage(QL)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPC Calibration
Sportage(QL)	2017	USA Area	MFC(Multi Function Camera)	Special Function	SPTAC Calibration
Sportage(QL)	2017	USA Area	MFC(Multi Function Camera)	Special Function	Variant Coding
Sportage(QL)	2017	USA Area	BSD(Blind Spot Detection)	Version Information	
Sportage(QL)	2017	USA Area	BSD(Blind Spot Detection)	Read Fault Code	
Sportage(QL)	2017	USA Area	BSD(Blind Spot Detection)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	BSD(Blind Spot Detection)	Read Data Stream	
Sportage(QL)	2017	USA Area	BSD(Blind Spot Detection)	Actuation Test	
Sportage(QL)	2017	USA Area	BSD(Blind Spot Detection)	Special Function	BSD Radar Calibration
Sportage(QL)	2017	USA Area	Amplifier	Version Information	
Sportage(QL)	2017	USA Area	Amplifier	Special Function	AMP Operation Test
Sportage(QL)	2017	USA Area	PGS(Parking Guide System)	Version Information	
Sportage(QL)	2017	USA Area	PGS(Parking Guide System)	Read Fault Code	
Sportage(QL)	2017	USA Area	PGS(Parking Guide System)	Clear Fault Memory	
Sportage(QL)	2017	USA Area	PGS(Parking Guide System)	Read Data Stream	
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Special Function	Read VIN

model	year	area	system	function	subfunction
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SL)	2016	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2016	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(SL)	2016	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2016	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2016	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SL)	2016	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2016	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2016	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2016	USA Area	ESC(Electronic Stability Control)	Version Information	
Sportage(SL)	2016	USA Area	ESC(Electronic Stability Control)	Read Fault Code	
Sportage(SL)	2016	USA Area	ESC(Electronic Stability Control)	Clear Fault Memory	
Sportage(SL)	2016	USA Area	ESC(Electronic Stability Control)	Read Data Stream	
Sportage(SL)	2016	USA Area	ESC(Electronic Stability Control)	Actuation Test	
Sportage(SL)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SL)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	Variant Coding
Sportage(SL)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(SL)	2016	USA Area	ESC(Electronic Stability Control)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SL)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SL)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SL)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SL)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SL)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(SL)	2016	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset

model	year	area	system	function	subfunction
Sportage(SL)	2016	USA Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2016	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2016	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SL)	2016	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2016	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2016	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sportage(SL)	2016	USA Area	BCM(Body Control Module)	Version Information	
Sportage(SL)	2016	USA Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SL)	2016	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2016	USA Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2016	USA Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2016	USA Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2016	USA Area	Smart Key Unit	Version Information	
Sportage(SL)	2016	USA Area	Smart Key Unit	Read Fault Code	
Sportage(SL)	2016	USA Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2016	USA Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2016	USA Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2016	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2016	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2016	USA Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SL)	2016	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2016	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SL)	2016	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2016	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SL)	2016	USA Area	Power Steering	Version Information	
Sportage(SL)	2016	USA Area	Power Steering	Read Fault Code	
Sportage(SL)	2016	USA Area	Power Steering	Clear Fault Memory	
Sportage(SL)	2016	USA Area	Power Steering	Read Data Stream	
Sportage(SL)	2016	USA Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SL)	2016	USA Area	Power Steering	Special Function	ASP Calibration(CAN)

model	year	area	system	function	subfunction
Sportage(SL)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SL)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SL)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SL)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SL)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2016	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2016	USA Area	4WD Control	Version Information	
Sportage(SL)	2016	USA Area	4WD Control	Read Fault Code	
Sportage(SL)	2016	USA Area	4WD Control	Clear Fault Memory	
Sportage(SL)	2016	USA Area	4WD Control	Read Data Stream	
Sportage(SL)	2016	USA Area	4WD Control	Actuation Test	
Sportage(SL)	2016	USA Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SL)	2016	USA Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SL)	2016	USA Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SL)	2016	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2016	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SL)	2016	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(SL)	2016	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SL)	2016	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SL)	2016	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2016	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2016	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SL)	2016	USA Area	Telematics Unit	Version Information	
Sportage(SL)	2016	USA Area	Telematics Unit	Read Fault Code	
Sportage(SL)	2016	USA Area	Telematics Unit	Clear Fault Memory	
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Version Information	

model	year	area	system	function	subfunction
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SL)	2015	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2015	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(SL)	2015	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2015	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2015	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SL)	2015	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2015	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2015	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2015	USA Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SL)	2015	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SL)	2015	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SL)	2015	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SL)	2015	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SL)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SL)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sportage(SL)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)

model	year	area	system	function	subfunction
Sportage(SL)	2015	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SL)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SL)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SL)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SL)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SL)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(SL)	2015	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Sportage(SL)	2015	USA Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2015	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2015	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SL)	2015	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2015	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2015	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sportage(SL)	2015	USA Area	BCM(Body Control Module)	Version Information	
Sportage(SL)	2015	USA Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SL)	2015	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2015	USA Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2015	USA Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2015	USA Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2015	USA Area	Smart Key Unit	Version Information	
Sportage(SL)	2015	USA Area	Smart Key Unit	Read Fault Code	
Sportage(SL)	2015	USA Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2015	USA Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2015	USA Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2015	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2015	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2015	USA Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SL)	2015	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2015	USA Area	Smart Key Unit	Special Function	Current FOB Key Check

model	year	area	system	function	subfunction
Sportage(SL)	2015	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2015	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SL)	2015	USA Area	Power Steering	Version Information	
Sportage(SL)	2015	USA Area	Power Steering	Read Fault Code	
Sportage(SL)	2015	USA Area	Power Steering	Clear Fault Memory	
Sportage(SL)	2015	USA Area	Power Steering	Read Data Stream	
Sportage(SL)	2015	USA Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SL)	2015	USA Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SL)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SL)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SL)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SL)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SL)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2015	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2015	USA Area	4WD Control	Version Information	
Sportage(SL)	2015	USA Area	4WD Control	Read Fault Code	
Sportage(SL)	2015	USA Area	4WD Control	Clear Fault Memory	
Sportage(SL)	2015	USA Area	4WD Control	Read Data Stream	
Sportage(SL)	2015	USA Area	4WD Control	Actuation Test	
Sportage(SL)	2015	USA Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SL)	2015	USA Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SL)	2015	USA Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SL)	2015	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2015	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SL)	2015	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(SL)	2015	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode

model	year	area	system	function	subfunction
Sportage(SL)	2015	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SL)	2015	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2015	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2015	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SL)	2015	USA Area	Telematics Unit	Version Information	
Sportage(SL)	2015	USA Area	Telematics Unit	Read Fault Code	
Sportage(SL)	2015	USA Area	Telematics Unit	Clear Fault Memory	
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SL)	2014	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2014	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(SL)	2014	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2014	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2014	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SL)	2014	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2014	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2014	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2014	USA Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SL)	2014	USA Area	ESP(Electronic Stability Program)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(SL)	2014	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SL)	2014	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SL)	2014	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SL)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	SAS Calibration(Can-Esp Only)
Sportage(SL)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Variant Coding
Sportage(SL)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(SL)	2014	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SL)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SL)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SL)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SL)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SL)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(SL)	2014	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Sportage(SL)	2014	USA Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2014	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2014	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SL)	2014	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2014	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2014	USA Area	AC(Air Conditioning)	Special Function	A/C Compressor Test(ECV Type)
Sportage(SL)	2014	USA Area	BCM(Body Control Module)	Version Information	
Sportage(SL)	2014	USA Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SL)	2014	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2014	USA Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2014	USA Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2014	USA Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2014	USA Area	Smart Key Unit	Version Information	
Sportage(SL)	2014	USA Area	Smart Key Unit	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(SL)	2014	USA Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2014	USA Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2014	USA Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2014	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2014	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2014	USA Area	Smart Key Unit	Special Function	SMK Status Information
Sportage(SL)	2014	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2014	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SL)	2014	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2014	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SL)	2014	USA Area	Power Steering	Version Information	
Sportage(SL)	2014	USA Area	Power Steering	Read Fault Code	
Sportage(SL)	2014	USA Area	Power Steering	Clear Fault Memory	
Sportage(SL)	2014	USA Area	Power Steering	Read Data Stream	
Sportage(SL)	2014	USA Area	Power Steering	Special Function	EPS Type Recognition
Sportage(SL)	2014	USA Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SL)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SL)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SL)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SL)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SL)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2014	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2014	USA Area	4WD Control	Version Information	
Sportage(SL)	2014	USA Area	4WD Control	Read Fault Code	
Sportage(SL)	2014	USA Area	4WD Control	Clear Fault Memory	
Sportage(SL)	2014	USA Area	4WD Control	Read Data Stream	

model	year	area	system	function	subfunction
Sportage(SL)	2014	USA Area	4WD Control	Actuation Test	
Sportage(SL)	2014	USA Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SL)	2014	USA Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SL)	2014	USA Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SL)	2014	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2014	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SL)	2014	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(SL)	2014	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SL)	2014	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SL)	2014	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2014	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2014	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SL)	2014	USA Area	Telematics Unit	Version Information	
Sportage(SL)	2014	USA Area	Telematics Unit	Read Fault Code	
Sportage(SL)	2014	USA Area	Telematics Unit	Clear Fault Memory	
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SL)	2013	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2013	USA Area	TCM(Transmission Control Module)	Version Information	

model	year	area	system	function	subfunction
Sportage(SL)	2013	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2013	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2013	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SL)	2013	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2013	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2013	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2013	USA Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SL)	2013	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SL)	2013	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SL)	2013	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SL)	2013	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SL)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Sportage(SL)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SL)	2013	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(SL)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SL)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SL)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SL)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SL)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(SL)	2013	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Sportage(SL)	2013	USA Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2013	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2013	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SL)	2013	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2013	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2013	USA Area	BCM(Body Control Module)	Version Information	
Sportage(SL)	2013	USA Area	BCM(Body Control Module)	Read Fault Code	

model	year	area	system	function	subfunction
Sportage(SL)	2013	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2013	USA Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2013	USA Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2013	USA Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2013	USA Area	Power Steering	Version Information	
Sportage(SL)	2013	USA Area	Power Steering	Read Fault Code	
Sportage(SL)	2013	USA Area	Power Steering	Clear Fault Memory	
Sportage(SL)	2013	USA Area	Power Steering	Read Data Stream	
Sportage(SL)	2013	USA Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SL)	2013	USA Area	Power Steering	Special Function	EPS Variant Coding
Sportage(SL)	2013	USA Area	Smart Key Unit	Version Information	
Sportage(SL)	2013	USA Area	Smart Key Unit	Read Fault Code	
Sportage(SL)	2013	USA Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2013	USA Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2013	USA Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2013	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2013	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2013	USA Area	Smart Key Unit	Special Function	PDM Status Information
Sportage(SL)	2013	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2013	USA Area	Smart Key Unit	Special Function	User Option
Sportage(SL)	2013	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SL)	2013	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SL)	2013	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SL)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SL)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SL)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN

model	year	area	system	function	subfunction
Sportage(SL)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2013	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2013	USA Area	4WD Control	Version Information	
Sportage(SL)	2013	USA Area	4WD Control	Read Fault Code	
Sportage(SL)	2013	USA Area	4WD Control	Clear Fault Memory	
Sportage(SL)	2013	USA Area	4WD Control	Read Data Stream	
Sportage(SL)	2013	USA Area	4WD Control	Actuation Test	
Sportage(SL)	2013	USA Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SL)	2013	USA Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SL)	2013	USA Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SL)	2013	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2013	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SL)	2013	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(SL)	2013	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SL)	2013	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SL)	2013	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2013	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2013	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test

model	year	area	system	function	subfunction
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SL)	2012	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2012	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(SL)	2012	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2012	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2012	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SL)	2012	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2012	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2012	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2012	USA Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SL)	2012	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SL)	2012	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SL)	2012	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SL)	2012	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SL)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Sportage(SL)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SL)	2012	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(SL)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SL)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SL)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SL)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SL)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding
Sportage(SL)	2012	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Sportage(SL)	2012	USA Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2012	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2012	USA Area	AC(Air Conditioning)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(SL)	2012	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2012	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2012	USA Area	BCM(Body Control Module)	Version Information	
Sportage(SL)	2012	USA Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SL)	2012	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2012	USA Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2012	USA Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2012	USA Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2012	USA Area	Power Steering	Version Information	
Sportage(SL)	2012	USA Area	Power Steering	Read Fault Code	
Sportage(SL)	2012	USA Area	Power Steering	Clear Fault Memory	
Sportage(SL)	2012	USA Area	Power Steering	Read Data Stream	
Sportage(SL)	2012	USA Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SL)	2012	USA Area	Power Steering	Special Function	EPS Variant Coding
Sportage(SL)	2012	USA Area	Smart Key Unit	Version Information	
Sportage(SL)	2012	USA Area	Smart Key Unit	Read Fault Code	
Sportage(SL)	2012	USA Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2012	USA Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2012	USA Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2012	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2012	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2012	USA Area	Smart Key Unit	Special Function	PDM Status Information
Sportage(SL)	2012	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2012	USA Area	Smart Key Unit	Special Function	User Option
Sportage(SL)	2012	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SL)	2012	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check
Sportage(SL)	2012	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SL)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	

model	year	area	system	function	subfunction
Sportage(SL)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SL)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SL)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2012	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2012	USA Area	4WD Control	Version Information	
Sportage(SL)	2012	USA Area	4WD Control	Read Fault Code	
Sportage(SL)	2012	USA Area	4WD Control	Clear Fault Memory	
Sportage(SL)	2012	USA Area	4WD Control	Read Data Stream	
Sportage(SL)	2012	USA Area	4WD Control	Actuation Test	
Sportage(SL)	2012	USA Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SL)	2012	USA Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SL)	2012	USA Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SL)	2012	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2012	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SL)	2012	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(SL)	2012	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SL)	2012	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SL)	2012	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2012	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2012	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Version Information	
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Read Fault Code	
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Clear Fault Memory	
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Read Data Stream	
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Read Freeze Frame	
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Actuation Test	
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Special Function	Resetting Adaptive Values

model	year	area	system	function	subfunction
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Special Function	Auto Detected Configuration
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Special Function	Read VIN
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Special Function	Write VIN
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Special Function	CKP CMP Signal Test
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Special Function	Evap.Leakage Test
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Special Function	Cylinder Power Balance(Optional)
Sportage(SL)	2011	USA Area	ECM(Engine Control Module)	Special Function	CVVT Test
Sportage(SL)	2011	USA Area	TCM(Transmission Control Module)	Version Information	
Sportage(SL)	2011	USA Area	TCM(Transmission Control Module)	Read Fault Code	
Sportage(SL)	2011	USA Area	TCM(Transmission Control Module)	Clear Fault Memory	
Sportage(SL)	2011	USA Area	TCM(Transmission Control Module)	Read Data Stream	
Sportage(SL)	2011	USA Area	TCM(Transmission Control Module)	Read Freeze Frame	
Sportage(SL)	2011	USA Area	TCM(Transmission Control Module)	Actuation Test	
Sportage(SL)	2011	USA Area	TCM(Transmission Control Module)	Special Function	Resetting Auto T/A Values
Sportage(SL)	2011	USA Area	ESP(Electronic Stability Program)	Version Information	
Sportage(SL)	2011	USA Area	ESP(Electronic Stability Program)	Read Fault Code	
Sportage(SL)	2011	USA Area	ESP(Electronic Stability Program)	Clear Fault Memory	
Sportage(SL)	2011	USA Area	ESP(Electronic Stability Program)	Read Data Stream	
Sportage(SL)	2011	USA Area	ESP(Electronic Stability Program)	Actuation Test	
Sportage(SL)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	Steering Angle Sensor Calibration
Sportage(SL)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	HCU Air Bleeding Mode
Sportage(SL)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	Longitudinal G Sensor Calibration(Hac/Dbc Only)
Sportage(SL)	2011	USA Area	ESP(Electronic Stability Program)	Special Function	Auto Detected Configuration Reset(Esp(Esc)Only)
Sportage(SL)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Version Information	
Sportage(SL)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Fault Code	
Sportage(SL)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Clear Fault Memory	
Sportage(SL)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Read Data Stream	
Sportage(SL)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	ACU/SRSCM Variant Coding

model	year	area	system	function	subfunction
Sportage(SL)	2011	USA Area	SRS(Supplemental Inflatable Restraint	Special Function	PODS Reset
Sportage(SL)	2011	USA Area	AC(Air Conditioning)	Version Information	
Sportage(SL)	2011	USA Area	AC(Air Conditioning)	Read Fault Code	
Sportage(SL)	2011	USA Area	AC(Air Conditioning)	Clear Fault Memory	
Sportage(SL)	2011	USA Area	AC(Air Conditioning)	Read Data Stream	
Sportage(SL)	2011	USA Area	AC(Air Conditioning)	Actuation Test	
Sportage(SL)	2011	USA Area	BCM(Body Control Module)	Version Information	
Sportage(SL)	2011	USA Area	BCM(Body Control Module)	Read Fault Code	
Sportage(SL)	2011	USA Area	BCM(Body Control Module)	Clear Fault Memory	
Sportage(SL)	2011	USA Area	BCM(Body Control Module)	Read Data Stream	
Sportage(SL)	2011	USA Area	BCM(Body Control Module)	Actuation Test	
Sportage(SL)	2011	USA Area	BCM(Body Control Module)	Special Function	User Option
Sportage(SL)	2011	USA Area	Power Steering	Version Information	
Sportage(SL)	2011	USA Area	Power Steering	Read Fault Code	
Sportage(SL)	2011	USA Area	Power Steering	Clear Fault Memory	
Sportage(SL)	2011	USA Area	Power Steering	Read Data Stream	
Sportage(SL)	2011	USA Area	Power Steering	Special Function	ASP Calibration(CAN)
Sportage(SL)	2011	USA Area	Power Steering	Special Function	EPS Variant Coding
Sportage(SL)	2011	USA Area	Smart Key Unit	Version Information	
Sportage(SL)	2011	USA Area	Smart Key Unit	Read Fault Code	
Sportage(SL)	2011	USA Area	Smart Key Unit	Clear Fault Memory	
Sportage(SL)	2011	USA Area	Smart Key Unit	Read Data Stream	
Sportage(SL)	2011	USA Area	Smart Key Unit	Actuation Test	
Sportage(SL)	2011	USA Area	Smart Key Unit	Special Function	Smart Key Code Saving
Sportage(SL)	2011	USA Area	Smart Key Unit	Special Function	Neutralization Mode
Sportage(SL)	2011	USA Area	Smart Key Unit	Special Function	PDM Status Information
Sportage(SL)	2011	USA Area	Smart Key Unit	Special Function	FOB KEY Status Information
Sportage(SL)	2011	USA Area	Smart Key Unit	Special Function	User Option
Sportage(SL)	2011	USA Area	Smart Key Unit	Special Function	Current FOB Key Check
Sportage(SL)	2011	USA Area	Smart Key Unit	Special Function	Serial Communication Line Check

model	year	area	system	function	subfunction
Sportage(SL)	2011	USA Area	Smart Key Unit	Special Function	Antenna Status Check
Sportage(SL)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Version Information	
Sportage(SL)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Fault Code	
Sportage(SL)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Clear Fault Memory	
Sportage(SL)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Read Data Stream	
Sportage(SL)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Actuation Test	
Sportage(SL)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	TPMS Mode Configuration
Sportage(SL)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Write VIN
Sportage(SL)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Wheel Sensor ID Writing
Sportage(SL)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Reading
Sportage(SL)	2011	USA Area	TPMS(Tire Pressure Monitoring System)	Special Function	Vehicle Name Code Writing
Sportage(SL)	2011	USA Area	4WD Control	Version Information	
Sportage(SL)	2011	USA Area	4WD Control	Read Fault Code	
Sportage(SL)	2011	USA Area	4WD Control	Clear Fault Memory	
Sportage(SL)	2011	USA Area	4WD Control	Read Data Stream	
Sportage(SL)	2011	USA Area	4WD Control	Actuation Test	
Sportage(SL)	2011	USA Area	4WD Control	Special Function	Clutch Learning Reset
Sportage(SL)	2011	USA Area	4WD Control	Special Function	Clutch Learning Read
Sportage(SL)	2011	USA Area	4WD Control	Special Function	Clutch Learning Write
Sportage(SL)	2011	USA Area	IMMO(Immobilizer)	Read Data Stream	
Sportage(SL)	2011	USA Area	IMMO(Immobilizer)	Special Function	Password Teaching/Changing
Sportage(SL)	2011	USA Area	IMMO(Immobilizer)	Special Function	EMS Neutral Mode
Sportage(SL)	2011	USA Area	IMMO(Immobilizer)	Special Function	Limp Home Mode
Sportage(SL)	2011	USA Area	IMMO(Immobilizer)	Special Function	Smatra Neutral Mode
Sportage(SL)	2011	USA Area	IMMO(Immobilizer)	Special Function	Teaching
Sportage(SL)	2011	USA Area	CODE(Transmitter Code Saving)	Read Data Stream	
Sportage(SL)	2011	USA Area	CODE(Transmitter Code Saving)	Special Function	Code Saving