

## SUZUKI Diagnostics List (Note:For reference only)

model	year	area	system	subitem	function	subfunction
ALTO	1998 - 2000	Japan	HA12S(Engine)	F6A-NA	Read/Clear Fault Code	
ALTO	1998 - 2000	Japan	HA12S(Engine)	F6A-NA	Read Data Stream	
ALTO	1998 - 2000	Japan	HA12S(Engine)	F6A-NA	Version Information	
ALTO	1999 - 2000	Japan	HA12S(Engine)	F6A-TURBO	Read/Clear Fault Code	
ALTO	1999 - 2000	Japan	HA12S(Engine)	F6A-TURBO	Read Data Stream	
ALTO	1999 - 2000	Japan	HA12S(Engine)	F6A-TURBO	Version Information	
ALTO	1998 - 2000	Japan	HA12S(Engine)	F6A-TURBO	Read/Clear Fault Code	
ALTO	1998 - 2000	Japan	HA12S(Engine)	F6A-TURBO	Read Data Stream	
ALTO	1998 - 2000	Japan	HA12S(Engine)	F6A-TURBO	Version Information	
ALTO	1999 - 2000	Japan	HA12V(Engine)	F6A-NA	Read/Clear Fault Code	
ALTO	1999 - 2000	Japan	HA12V(Engine)	F6A-NA	Read Data Stream	
ALTO	1999 - 2000	Japan	HA12V(Engine)	F6A-NA	Version Information	
ALTO	1998 - 2000	Japan	HA22S(Engine)	K6A-TURBO	Read/Clear Fault Code	
ALTO	1998 - 2000	Japan	HA22S(Engine)	K6A-TURBO	Read Data Stream	
ALTO	1998 - 2000	Japan	HA22S(Engine)	K6A-TURBO	Version Information	
ALTO	1999 - 2001	Japan	HA22S(Engine)	K6A-NA-ESS	Read/Clear Fault Code	
ALTO	1999 - 2001	Japan	HA22S(Engine)	K6A-NA-ESS	Read Data Stream	
ALTO	1999 - 2001	Japan	HA22S(Engine)	K6A-NA-ESS	Version Information	
ALTO	1999	Japan	HA22S(Engine)	K6A-TURBO-VVT	Read/Clear Fault Code	
ALTO	1999	Japan	HA22S(Engine)	K6A-TURBO-VVT	Read Data Stream	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
ALTO	1999	Japan	HA22S(Engine)	K6A-TURBO-VVT	Version Information	
ALTO	1999	Japan	HA22S(Engine)	K6A-NA	Read/Clear Fault Code	
ALTO	1999	Japan	HA22S(Engine)	K6A-NA	Read Data Stream	
ALTO	1999	Japan	HA22S(Engine)	K6A-NA	Version Information	
ALTO	1999 - 2000	Japan	HA22S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
ALTO	1999 - 2000	Japan	HA22S(Engine)	K6A-NA-VVT	Read Data Stream	
ALTO	1999 - 2000	Japan	HA22S(Engine)	K6A-NA-VVT	Version Information	
ALTO	2000	Japan	HA23S(Engine)	K6A-NA	Read/Clear Fault Code	
ALTO	2000	Japan	HA23S(Engine)	K6A-NA	Read Data Stream	
ALTO	2000	Japan	HA23S(Engine)	K6A-NA	Version Information	
ALTO	2000	Japan	HA23S(Engine)	K6A-NA	Actuation Test	
ALTO	2000 - 2002	Japan	HA23S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
ALTO	2000 - 2002	Japan	HA23S(Engine)	K6A-NA-VVT	Read Data Stream	
ALTO	2000 - 2002	Japan	HA23S(Engine)	K6A-NA-VVT	Version Information	
ALTO	2000 - 2002	Japan	HA23S(Engine)	K6A-NA-VVT	Actuation Test	
ALTO	2001	Japan	HA23S(Engine)	K6A-NA-ESS	Read/Clear Fault Code	
ALTO	2001	Japan	HA23S(Engine)	K6A-NA-ESS	Read Data Stream	
ALTO	2001	Japan	HA23S(Engine)	K6A-NA-ESS	Version Information	
ALTO	2001	Japan	HA23S(Engine)	K6A-NA-ESS	Actuation Test	
ALTO	2002 - 2003	Japan	HA23S(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
ALTO	2002 - 2003	Japan	HA23S(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
ALTO	2002 - 2003	Japan	HA23S(Engine)	K6A-NA-VVT U-LEV	Version Information	
ALTO	2002 - 2003	Japan	HA23S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	

model	year	area	system	subitem	function	subfunction
ALTO	2000	Japan	HA23V(Engine)	K6A-NA	Read/Clear Fault Code	
ALTO	2000	Japan	HA23V(Engine)	K6A-NA	Read Data Stream	
ALTO	2000	Japan	HA23V(Engine)	K6A-NA	Version Information	
ALTO	2000	Japan	HA23V(Engine)	K6A-NA	Actuation Test	
ALTO	2002 - 2003	Japan	HA23V(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
ALTO	2002 - 2003	Japan	HA23V(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
ALTO	2002 - 2003	Japan	HA23V(Engine)	K6A-NA-VVT U-LEV	Version Information	
ALTO	2002 - 2003	Japan	HA23V(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
ALTO	1999 - 2000	Japan	A/T	HA22S(Only 2WD)	Read/Clear Fault Code	
ALTO	1999 - 2000	Japan	A/T	HA22S(Only 2WD)	Read Data Stream	
ALTO	1999 - 2000	Japan	A/T	HA22S(Only 2WD)	Version Information	
ALTO	1999	Japan	A/T	HA12V	Read/Clear Fault Code	
ALTO	1999	Japan	A/T	HA12V	Read Data Stream	
ALTO	1999	Japan	A/T	HA12V	Version Information	
ALTO	1999 - 2001	Japan	A/T	HA22S	Read/Clear Fault Code	
ALTO	1999 - 2001	Japan	A/T	HA22S	Read Data Stream	
ALTO	1999 - 2001	Japan	A/T	HA22S	Version Information	
ALTO	2001	Japan	A/T	HA23S	Read/Clear Fault Code	
ALTO	2001	Japan	A/T	HA23S	Read Data Stream	
ALTO	2001	Japan	A/T	HA23S	Version Information	
ALTO	1998 - 2000	Japan	ABS	HA12V	Read/Clear Fault Code	
ALTO	1998 - 2000	Japan	ABS	HA12V	Read Data Stream	

model	year	area	system	subitem	function	subfunction
ALTO	1998 - 2000	Japan	ABS	HA12V	Version Information	
ALTO	1999 - 2001	Japan	ABS	HA12S	Read/Clear Fault Code	
ALTO	1999 - 2001	Japan	ABS	HA12S	Read Data Stream	
ALTO	1999 - 2001	Japan	ABS	HA12S	Version Information	
ALTO	1999 - 2001	Japan	ABS	HA22S	Read/Clear Fault Code	
ALTO	1999 - 2001	Japan	ABS	HA22S	Read Data Stream	
ALTO	1999 - 2001	Japan	ABS	HA22S	Version Information	
ALTO	2000	Japan	ABS	HA23V	Read/Clear Fault Code	
ALTO	2000	Japan	ABS	HA23V	Read Data Stream	
ALTO	2000	Japan	ABS	HA23V	Version Information	
ALTO	2000	Japan	ABS	HA23V	Actuation Test	
ALTO	2000	Japan	ABS	HA23S	Read/Clear Fault Code	
ALTO	2000	Japan	ABS	HA23S	Read Data Stream	
ALTO	2000	Japan	ABS	HA23S	Version Information	
ALTO	2000	Japan	ABS	HA23S	Actuation Test	
ALTO	1998 - 2000	Japan	SRS	HA12V	Read/Clear Fault Code	
ALTO	1998 - 2000	Japan	SRS	HA12V	Read Data Stream	
ALTO	1998 - 2000	Japan	SRS	HA12V	Version Information	
ALTO	1999 - 2001	Japan	SRS	HA12S	Read/Clear Fault Code	
ALTO	1999 - 2001	Japan	SRS	HA12S	Read Data Stream	
ALTO	1999 - 2001	Japan	SRS	HA12S	Version Information	
ALTO	1999 - 2001	Japan	SRS	HA22S	Read/Clear Fault Code	
ALTO	1999 - 2001	Japan	SRS	HA22S	Read Data Stream	

model	year	area	system	subitem	function	subfunction
ALTO	1999 - 2001	Japan	SRS	HA22S	Version Information	
ALTO	2000	Japan	SRS	HA23V	Read/Clear Fault Code	
ALTO	2000	Japan	SRS	HA23V	Read Data Stream	
ALTO	2000	Japan	SRS	HA23V	Version Information	
ALTO	2000	Japan	SRS	HA23S	Read/Clear Fault Code	
ALTO	2000	Japan	SRS	HA23S	Read Data Stream	
ALTO	2000	Japan	SRS	HA23S	Version Information	
(J)JIMNY	1999	Japan	JB23W(Engine)	K6A-TURBO	Read/Clear Fault Code	
(J)JIMNY	1999	Japan	JB23W(Engine)	K6A-TURBO	Read Data Stream	
(J)JIMNY	1999	Japan	JB23W(Engine)	K6A-TURBO	Version Information	
(J)JIMNY	1999 - 2002	Japan	JB23W(Engine)	K6A-TURBO	Read/Clear Fault Code	
(J)JIMNY	1999 - 2002	Japan	JB23W(Engine)	K6A-TURBO	Read Data Stream	
(J)JIMNY	1999 - 2002	Japan	JB23W(Engine)	K6A-TURBO	Version Information	
(J)JIMNY	2002	Japan	JB23W(Engine)	K6A-TURBO	Read/Clear Fault Code	
(J)JIMNY	2002	Japan	JB23W(Engine)	K6A-TURBO	Read Data Stream	
(J)JIMNY	2002	Japan	JB23W(Engine)	K6A-TURBO	Version Information	
(J)JIMNY	2002	Japan	JB23W(Engine)	K6A-TURBO	Actuation Test	
(J)JIMNY	1998	Japan	A/T	JB23W	Read/Clear Fault Code	
(J)JIMNY	1998	Japan	A/T	JB23W	Read Data Stream	
(J)JIMNY	1998	Japan	A/T	JB23W	Version Information	
(J)JIMNY	1998 - 2000	Japan	ABS	JB23W	Read/Clear Fault Code	
(J)JIMNY	1998 - 2000	Japan	ABS	JB23W	Read Data Stream	

model	year	area	system	subitem	function	subfunction
(J)JIMNY	1998 - 2000	Japan	ABS	JB23W	Version Information	
(J)JIMNY	2000	Japan	ABS	JB23W	Read/Clear Fault Code	
(J)JIMNY	2000	Japan	ABS	JB23W	Read Data Stream	
(J)JIMNY	2000	Japan	ABS	JB23W	Version Information	
(J)JIMNY	2000	Japan	ABS	JB23W	Actuation Test	
(J)JIMNY	1998	Japan	SRS	JB23W	Read/Clear Fault Code	
(J)JIMNY	1998	Japan	SRS	JB23W	Read Data Stream	
(J)JIMNY	1998	Japan	SRS	JB23W	Version Information	
JIMNY WIDE	1998 - 2000	Japan	JB33W(Engine)	G13B	Read/Clear Fault Code	
JIMNY WIDE	1998 - 2000	Japan	JB33W(Engine)	G13B	Read Data Stream	
JIMNY WIDE	1998 - 2000	Japan	JB33W(Engine)	G13B	Version Information	
JIMNY WIDE	2000	Japan	JB43W(Engine)	M13A-NA-VVT	Read/Clear Fault Code	
JIMNY WIDE	2000	Japan	JB43W(Engine)	M13A-NA-VVT	Read Data Stream	
JIMNY WIDE	2000	Japan	JB43W(Engine)	M13A-NA-VVT	Version Information	
JIMNY WIDE	2000	Japan	JB43W(Engine)	M13A-NA-VVT	Actuation Test	
JIMNY WIDE	1998 - 2000	Japan	A/T	JB33W	Read/Clear Fault Code	
JIMNY WIDE	1998 - 2000	Japan	A/T	JB33W	Read Data Stream	
JIMNY WIDE	1998 - 2000	Japan	A/T	JB33W	Version Information	
JIMNY WIDE	2000	Japan	A/T	JB43W	Read/Clear Fault Code	
JIMNY WIDE	2000	Japan	A/T	JB43W	Read Data Stream	
JIMNY WIDE	2000	Japan	A/T	JB43W	Version Information	
JIMNY WIDE	1998 - 2000	Japan	ABS	JB33W	Read/Clear Fault Code	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
JIMNY WIDE	1998 - 2000	Japan	ABS	JB33W	Read Data Stream	
JIMNY WIDE	1998 - 2000	Japan	ABS	JB33W	Version Information	
JIMNY WIDE	2000	Japan	ABS	JB43W	Read/Clear Fault Code	
JIMNY WIDE	2000	Japan	ABS	JB43W	Read Data Stream	
JIMNY WIDE	2000	Japan	ABS	JB43W	Version Information	
JIMNY WIDE	2000	Japan	ABS	JB43W	Actuation Test	
JIMNY WIDE	1998 - 2000	Japan	SRS	JB33W	Read/Clear Fault Code	
JIMNY WIDE	1998 - 2000	Japan	SRS	JB33W	Read Data Stream	
JIMNY WIDE	1998 - 2000	Japan	SRS	JB33W	Version Information	
JIMNY WIDE	2000	Japan	SRS	JB43W	Read/Clear Fault Code	
JIMNY WIDE	2000	Japan	SRS	JB43W	Read Data Stream	
JIMNY WIDE	2000	Japan	SRS	JB43W	Version Information	
JIMNY 1300 SIERRA	1996 - 1998	Japan	ABS	JB32W	Read/Clear Fault Code	
JIMNY 1300 SIERRA	1996 - 1998	Japan	ABS	JB32W	Read Data Stream	
JIMNY 1300 SIERRA	1996 - 1998	Japan	ABS	JB32W	Version Information	
JIMNY 660	1996 - 1998	Japan	ABS	JB32W	Read/Clear Fault Code	
JIMNY 660	1996 - 1998	Japan	ABS	JB32W	Read Data Stream	
JIMNY 660	1996 - 1998	Japan	ABS	JB32W	Version Information	
Kei	1999 - 2001	Japan	HN21S(Engine)	K6A-TURBO	Read/Clear Fault Code	
Kei	1999 - 2001	Japan	HN21S(Engine)	K6A-TURBO	Read Data Stream	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
Kei	1999 - 2001	Japan	HN21S(Engine)	K6A-TURBO	Version Information	
Kei	1999	Japan	HN21S(Engine)	K6A-TURBO	Read/Clear Fault Code	
Kei	1999	Japan	HN21S(Engine)	K6A-TURBO	Read Data Stream	
Kei	1999	Japan	HN21S(Engine)	K6A-TURBO	Version Information	
Kei	1998 - 1999	Japan	HN21S(Engine)	K6A-NA	Read/Clear Fault Code	
Kei	1998 - 1999	Japan	HN21S(Engine)	K6A-NA	Read Data Stream	
Kei	1998 - 1999	Japan	HN21S(Engine)	K6A-NA	Version Information	
Kei	2000 - 2001	Japan	HN21S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
Kei	2000 - 2001	Japan	HN21S(Engine)	K6A-NA-VVT	Read Data Stream	
Kei	2000 - 2001	Japan	HN21S(Engine)	K6A-NA-VVT	Version Information	
Kei	2000 - 2001	Japan	HN21S(Engine)	K6A-NA-VVT	Actuation Test	
Kei	1999 - 2001	Japan	HN21S(Engine)	K6A-TURBO-NS Control	Read/Clear Fault Code	
Kei	1999 - 2001	Japan	HN21S(Engine)	K6A-TURBO-NS Control	Read Data Stream	
Kei	1999 - 2001	Japan	HN21S(Engine)	K6A-TURBO-NS Control	Version Information	
Kei	1999 - 2001	Japan	HN11S(Engine)	F6A-TURBO	Read/Clear Fault Code	
Kei	1999 - 2001	Japan	HN11S(Engine)	F6A-TURBO	Read Data Stream	
Kei	1999 - 2001	Japan	HN11S(Engine)	F6A-TURBO	Version Information	
Kei	1999	Japan	HN11S(Engine)	F6A-TURBO	Read/Clear Fault Code	
Kei	1999	Japan	HN11S(Engine)	F6A-TURBO	Read Data Stream	
Kei	1999	Japan	HN11S(Engine)	F6A-TURBO	Version Information	



model	year	area	system	subitem	function	subfunction
Kei	2001	Japan	HN12S(Engine)	F6A-TURBO	Read/Clear Fault Code	
Kei	2001	Japan	HN12S(Engine)	F6A-TURBO	Read Data Stream	
Kei	2001	Japan	HN12S(Engine)	F6A-TURBO	Version Information	
Kei	2001	Japan	HN12S(Engine)	F6A-TURBO	Actuation Test	
Kei	2001	Japan	HN22S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
Kei	2001	Japan	HN22S(Engine)	K6A-NA-VVT	Read Data Stream	
Kei	2001	Japan	HN22S(Engine)	K6A-NA-VVT	Version Information	
Kei	2001	Japan	HN22S(Engine)	K6A-NA-VVT	Actuation Test	
Kei	2001	Japan	HN22S(Engine)	K6A-TURBO	Read/Clear Fault Code	
Kei	2001	Japan	HN22S(Engine)	K6A-TURBO	Read Data Stream	
Kei	2001	Japan	HN22S(Engine)	K6A-TURBO	Version Information	
Kei	2001	Japan	HN22S(Engine)	K6A-TURBO	Actuation Test	
Kei	2001	Japan	HN22S(Engine)	K6A-TURBO-NS Control	Read/Clear Fault Code	
Kei	2001	Japan	HN22S(Engine)	K6A-TURBO-NS Control	Read Data Stream	
Kei	2001	Japan	HN22S(Engine)	K6A-TURBO-NS Control	Version Information	
Kei	2001	Japan	HN22S(Engine)	K6A-TURBO-NS Control	Actuation Test	
Kei	2001 - 2002	Japan	HN22S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
Kei	2001 - 2002	Japan	HN22S(Engine)	K6A-NA-VVT	Read Data Stream	
Kei	2001 - 2002	Japan	HN22S(Engine)	K6A-NA-VVT	Version Information	
Kei	2001 - 2002	Japan	HN22S(Engine)	K6A-NA-VVT	Actuation Test	
Kei	2001	Japan	HN22S(Engine)	K6A-M TURBO	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
Kei	2001	Japan	HN22S(Engine)	K6A-M TURBO	Read Data Stream	
Kei	2001	Japan	HN22S(Engine)	K6A-M TURBO	Version Information	
Kei	2001	Japan	HN22S(Engine)	K6A-M TURBO	Actuation Test	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-M TURBO	Read/Clear Fault Code	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-M TURBO	Read Data Stream	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-M TURBO	Version Information	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-M TURBO	Actuation Test	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-TURBO	Read/Clear Fault Code	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-TURBO	Read Data Stream	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-TURBO	Version Information	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-TURBO	Actuation Test	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-TURBO anti-alip control(2W D)	Read/Clear Fault Code	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-TURBO anti-alip control(2W D)	Read Data Stream	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-TURBO anti-alip control(2W D)	Version Information	
Kei	2001 - 2003	Japan	HN22S(Engine)	K6A-TURBO anti-alip control(2W D)	Actuation Test	
Kei	2002 - 2003	Japan	HN22S(Engine)	K6A-NA- VVT U-LEV	Read/Clear Fault Code	
Kei	2002 - 2003	Japan	HN22S(Engine)	K6A-NA- VVT U-LEV	Read Data Stream	
Kei	2002 - 2003	Japan	HN22S(Engine)	K6A-NA- VVT U-LEV	Version Information	

model	year	area	system	subitem	function	subfunction
Kei	2002 - 2003	Japan	HN22S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
Kei	2002	Japan	HN22S(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
Kei	2002	Japan	HN22S(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
Kei	2002	Japan	HN22S(Engine)	K6A-NA-VVT U-LEV	Version Information	
Kei	2002	Japan	HN22S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
Kei	2003	Japan	HN22S(Engine)	K6A-M TURBO	Read/Clear Fault Code	
Kei	2003	Japan	HN22S(Engine)	K6A-M TURBO	Read Data Stream	
Kei	2003	Japan	HN22S(Engine)	K6A-M TURBO	Version Information	
Kei	2003	Japan	HN22S(Engine)	K6A-M TURBO	Actuation Test	
Kei	2003	Japan	HN22S(Engine)	K6A-TURBO	Read/Clear Fault Code	
Kei	2003	Japan	HN22S(Engine)	K6A-TURBO	Read Data Stream	
Kei	2003	Japan	HN22S(Engine)	K6A-TURBO	Version Information	
Kei	2003	Japan	HN22S(Engine)	K6A-TURBO	Actuation Test	
Kei	2003	Japan	HN22S(Engine)	K6A-TURBO anti-alip control(2WD)	Read/Clear Fault Code	
Kei	2003	Japan	HN22S(Engine)	K6A-TURBO anti-alip control(2WD)	Read Data Stream	
Kei	2003	Japan	HN22S(Engine)	K6A-TURBO anti-alip control(2WD)	Version Information	
Kei	2003	Japan	HN22S(Engine)	K6A-TURBO anti-alip control(2WD)	Actuation Test	
Kei	2003	Japan	HN22S(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
Kei	2003	Japan	HN22S(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
Kei	2003	Japan	HN22S(Engine)	K6A-NA-VVT U-LEV	Version Information	
Kei	2003	Japan	HN22S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
Kei	1999	Japan	A/T	HN11S	Read/Clear Fault Code	
Kei	1999	Japan	A/T	HN11S	Read Data Stream	
Kei	1999	Japan	A/T	HN11S	Version Information	
Kei	2000 - 2001	Japan	ABS	HN11S	Read/Clear Fault Code	
Kei	2000 - 2001	Japan	ABS	HN11S	Read Data Stream	
Kei	2000 - 2001	Japan	ABS	HN11S	Version Information	
Kei	2000 - 2001	Japan	ABS	HN11S	Actuation Test	
Kei	2000 - 2001	Japan	ABS	HN21S	Read/Clear Fault Code	
Kei	2000 - 2001	Japan	ABS	HN21S	Read Data Stream	
Kei	2000 - 2001	Japan	ABS	HN21S	Version Information	
Kei	2000 - 2001	Japan	ABS	HN21S	Actuation Test	
Kei	2001	Japan	ABS	HN12S	Read/Clear Fault Code	
Kei	2001	Japan	ABS	HN12S	Read Data Stream	
Kei	2001	Japan	ABS	HN12S	Version Information	
Kei	2001	Japan	ABS	HN12S	Actuation Test	
Kei	2001	Japan	ABS	HN22S	Read/Clear Fault Code	
Kei	2001	Japan	ABS	HN22S	Read Data Stream	
Kei	2001	Japan	ABS	HN22S	Version Information	
Kei	2001	Japan	ABS	HN22S	Actuation Test	
Kei	1998 - 2000	Japan	ABS	HN11S	Read/Clear Fault Code	
Kei	1998 - 2000	Japan	ABS	HN11S	Read Data Stream	

model	year	area	system	subitem	function	subfunction
Kei	1998 - 2000	Japan	ABS	HN11S	Version Information	
Kei	1998 - 2000	Japan	ABS	HN21S	Read/Clear Fault Code	
Kei	1998 - 2000	Japan	ABS	HN21S	Read Data Stream	
Kei	1998 - 2000	Japan	ABS	HN21S	Version Information	
Kei	1999 - 2001	Japan	SRS	HN11S	Read/Clear Fault Code	
Kei	1999 - 2001	Japan	SRS	HN11S	Read Data Stream	
Kei	1999 - 2001	Japan	SRS	HN11S	Version Information	
Kei	1999 - 2001	Japan	SRS	HN21S	Read/Clear Fault Code	
Kei	1999 - 2001	Japan	SRS	HN21S	Read Data Stream	
Kei	1999 - 2001	Japan	SRS	HN21S	Version Information	
Kei	2001	Japan	SRS	HN12S	Read/Clear Fault Code	
Kei	2001	Japan	SRS	HN12S	Read Data Stream	
Kei	2001	Japan	SRS	HN12S	Version Information	
Kei	2001	Japan	SRS	HN22S	Read/Clear Fault Code	
Kei	2001	Japan	SRS	HN22S	Read Data Stream	
Kei	2001	Japan	SRS	HN22S	Version Information	
Kei	2002 - 2003	Japan	EMCD	HN22S	Read/Clear Fault Code	
Kei	2002 - 2003	Japan	EMCD	HN22S	Read Data Stream	
Kei	2002 - 2003	Japan	EMCD	HN22S	Version Information	
WAGON R	1999	Japan	MC11S(Engine)	F6A-NA	Read/Clear Fault Code	
WAGON R	1999	Japan	MC11S(Engine)	F6A-NA	Read Data Stream	
WAGON R	1999	Japan	MC11S(Engine)	F6A-NA	Version Information	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
WAGON R	1998 - 2000	Japan	MC11S(Engine)	F6A-TURBO	Read/Clear Fault Code	
WAGON R	1998 - 2000	Japan	MC11S(Engine)	F6A-TURBO	Read Data Stream	
WAGON R	1998 - 2000	Japan	MC11S(Engine)	F6A-TURBO	Version Information	
WAGON R	1999 - 2000	Japan	MC11S(Engine)	F6A-TURBO	Read/Clear Fault Code	
WAGON R	1999 - 2000	Japan	MC11S(Engine)	F6A-TURBO	Read Data Stream	
WAGON R	1999 - 2000	Japan	MC11S(Engine)	F6A-TURBO	Version Information	
WAGON R	1999	Japan	MC21S(Engine)	K6A-NA	Read/Clear Fault Code	
WAGON R	1999	Japan	MC21S(Engine)	K6A-NA	Read Data Stream	
WAGON R	1999	Japan	MC21S(Engine)	K6A-NA	Version Information	
WAGON R	1998 - 2000	Japan	MC21S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
WAGON R	1998 - 2000	Japan	MC21S(Engine)	K6A-NA-VVT	Read Data Stream	
WAGON R	1998 - 2000	Japan	MC21S(Engine)	K6A-NA-VVT	Version Information	
WAGON R	1998 - 2000	Japan	MC21S(Engine)	K6A-TURBO	Read/Clear Fault Code	
WAGON R	1998 - 2000	Japan	MC21S(Engine)	K6A-TURBO	Read Data Stream	
WAGON R	1998 - 2000	Japan	MC21S(Engine)	K6A-TURBO	Version Information	
WAGON R	1999	Japan	MC21S(Engine)	K6A-TURBO-NS Control	Read/Clear Fault Code	
WAGON R	1999	Japan	MC21S(Engine)	K6A-TURBO-NS Control	Read Data Stream	
WAGON R	1999	Japan	MC21S(Engine)	K6A-TURBO-NS Control	Version Information	
WAGON R	1999 - 2000	Japan	MC21S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
WAGON R	1999 - 2000	Japan	MC21S(Engine)	K6A-NA-VVT	Read Data Stream	

model	year	area	system	subitem	function	subfunction
WAGON R	1999 - 2000	Japan	MC21S(Engine)	K6A-NA-VVT	Version Information	
WAGON R	1999 - 2000	Japan	MC21S(Engine)	K6A-TURBO	Read/Clear Fault Code	
WAGON R	1999 - 2000	Japan	MC21S(Engine)	K6A-TURBO	Read Data Stream	
WAGON R	1999 - 2000	Japan	MC21S(Engine)	K6A-TURBO	Version Information	
WAGON R	1999 - 2000	Japan	MC21S(Engine)	K6A-TURBO-NS Control	Read/Clear Fault Code	
WAGON R	1999 - 2000	Japan	MC21S(Engine)	K6A-TURBO-NS Control	Read Data Stream	
WAGON R	1999 - 2000	Japan	MC21S(Engine)	K6A-TURBO-NS Control	Version Information	
WAGON R	1999 - 2001	Japan	MC11S repit(Engine)	F6A-NA-CNG	Read/Clear Fault Code	
WAGON R	1999 - 2001	Japan	MC11S repit(Engine)	F6A-NA-CNG	Read Data Stream	
WAGON R	1999 - 2001	Japan	MC11S repit(Engine)	F6A-NA-CNG	Version Information	
WAGON R	2000 - 2001	Japan	MC12S(Engine)	F6A-TURBO	Read/Clear Fault Code	
WAGON R	2000 - 2001	Japan	MC12S(Engine)	F6A-TURBO	Read Data Stream	
WAGON R	2000 - 2001	Japan	MC12S(Engine)	F6A-TURBO	Version Information	
WAGON R	2000 - 2001	Japan	MC12S(Engine)	F6A-TURBO	Actuation Test	
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-NA-VVT	Read Data Stream	
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-NA-VVT	Version Information	
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-NA-VVT	Actuation Test	
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-TURBO	Read/Clear Fault Code	
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-TURBO	Read Data Stream	
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-TURBO	Version Information	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-TURBO	Actuation Test	
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-TURBO-NS Control	Read/Clear Fault Code	
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-TURBO-NS Control	Read Data Stream	
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-TURBO-NS Control	Version Information	
WAGON R	2000 - 2001	Japan	MC22S(Engine)	K6A-TURBO-NS Control	Actuation Test	
WAGON R	2001	Japan	MC22S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
WAGON R	2001	Japan	MC22S(Engine)	K6A-NA-VVT	Read Data Stream	
WAGON R	2001	Japan	MC22S(Engine)	K6A-NA-VVT	Version Information	
WAGON R	2001	Japan	MC22S(Engine)	K6A-NA-VVT	Actuation Test	
WAGON R	2001 - 2002	Japan	MC22S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
WAGON R	2001 - 2002	Japan	MC22S(Engine)	K6A-NA-VVT	Read Data Stream	
WAGON R	2001 - 2002	Japan	MC22S(Engine)	K6A-NA-VVT	Version Information	
WAGON R	2001 - 2002	Japan	MC22S(Engine)	K6A-NA-VVT	Actuation Test	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-NA-VVT	Read Data Stream	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-NA-VVT	Version Information	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-NA-VVT	Actuation Test	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-M TURBO	Read/Clear Fault Code	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-M TURBO	Read Data Stream	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-M TURBO	Version Information	



model	year	area	system	subitem	function	subfunction
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-M TURBO	Actuation Test	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-TURBO	Read/Clear Fault Code	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-TURBO	Read Data Stream	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-TURBO	Version Information	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-TURBO	Actuation Test	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-TURBO anti-alip control(2W D)	Read/Clear Fault Code	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-TURBO anti-alip control(2W D)	Read Data Stream	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-TURBO anti-alip control(2W D)	Version Information	
WAGON R	2001 - 2003	Japan	MC22S(Engine)	K6A-TURBO anti-alip control(2W D)	Actuation Test	
WAGON R	2002	Japan	MC22S(Engine)	K6A-NA- VVT U-LEV	Read/Clear Fault Code	
WAGON R	2002	Japan	MC22S(Engine)	K6A-NA- VVT U-LEV	Read Data Stream	
WAGON R	2002	Japan	MC22S(Engine)	K6A-NA- VVT U-LEV	Version Information	
WAGON R	2002	Japan	MC22S(Engine)	K6A-NA- VVT U-LEV	Actuation Test	
WAGON R	2002 - 2003	Japan	MC22S(Engine)	K6A-NA- VVT U-LEV	Read/Clear Fault Code	
WAGON R	2002 - 2003	Japan	MC22S(Engine)	K6A-NA- VVT U-LEV	Read Data Stream	
WAGON R	2002 - 2003	Japan	MC22S(Engine)	K6A-NA- VVT U-LEV	Version Information	
WAGON R	2002 - 2003	Japan	MC22S(Engine)	K6A-NA- VVT U-LEV	Actuation Test	
WAGON R	2002	Japan	MC22S(Engine)	K6A-NA(无 VVT) U-LEV	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
WAGON R	2002	Japan	MC22S(Engine)	K6A-NA(无VVT) U-LEV	Read Data Stream	
WAGON R	2002	Japan	MC22S(Engine)	K6A-NA(无VVT) U-LEV	Version Information	
WAGON R	2002	Japan	MC22S(Engine)	K6A-NA(无VVT) U-LEV	Actuation Test	
WAGON R	2002	Japan	MC22S(Engine)	K6A-HEVanti-alip control additional locking function	Read/Clear Fault Code	
WAGON R	2002	Japan	MC22S(Engine)	K6A-HEVanti-alip control additional locking function	Read Data Stream	
WAGON R	2002	Japan	MC22S(Engine)	K6A-HEVanti-alip control additional locking function	Version Information	
WAGON R	2002	Japan	MC22S(Engine)	K6A-HEVanti-alip control additional locking function	Actuation Test	
WAGON R	2003	Japan	MC22S(Engine)	K6A-M TURBO	Read/Clear Fault Code	
WAGON R	2003	Japan	MC22S(Engine)	K6A-M TURBO	Read Data Stream	
WAGON R	2003	Japan	MC22S(Engine)	K6A-M TURBO	Version Information	
WAGON R	2003	Japan	MC22S(Engine)	K6A-M TURBO	Actuation Test	
WAGON R	2003	Japan	MC22S(Engine)	K6A-TURBO	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
WAGON R	2003	Japan	MC22S(Engine)	K6A-TURBO	Read Data Stream	
WAGON R	2003	Japan	MC22S(Engine)	K6A-TURBO	Version Information	
WAGON R	2003	Japan	MC22S(Engine)	K6A-TURBO	Actuation Test	
WAGON R	2003	Japan	MC22S(Engine)	K6A-TURBO anti-alip control(2WD)	Read/Clear Fault Code	
WAGON R	2003	Japan	MC22S(Engine)	K6A-TURBO anti-alip control(2WD)	Read Data Stream	
WAGON R	2003	Japan	MC22S(Engine)	K6A-TURBO anti-alip control(2WD)	Version Information	
WAGON R	2003	Japan	MC22S(Engine)	K6A-TURBO anti-alip control(2WD)	Actuation Test	
WAGON R	2003	Japan	MC22S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
WAGON R	2003	Japan	MC22S(Engine)	K6A-NA-VVT	Read Data Stream	
WAGON R	2003	Japan	MC22S(Engine)	K6A-NA-VVT	Version Information	
WAGON R	2003	Japan	MC22S(Engine)	K6A-NA-VVT	Actuation Test	
WAGON R	2003	Japan	MC22S(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
WAGON R	2003	Japan	MC22S(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
WAGON R	2003	Japan	MC22S(Engine)	K6A-NA-VVT U-LEV	Version Information	
WAGON R	2003	Japan	MC22S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
WAGON R	2001 - 2003	Japan	MC22S repit(Engine)	K6A-NA-VVT-CNG	Read/Clear Fault Code	
WAGON R	2001 - 2003	Japan	MC22S repit(Engine)	K6A-NA-VVT-CNG	Read Data Stream	
WAGON R	2001 - 2003	Japan	MC22S repit(Engine)	K6A-NA-VVT-CNG	Version Information	

model	year	area	system	subitem	function	subfunction
WAGON R	2001 - 2003	Japan	MC22S repit(Engine)	K6A-NA-VVT-CNG	Actuation Test	
WAGON R	2003	Japan	MC22S repit(Engine)	K6A-NA-VVT-CNG	Read/Clear Fault Code	
WAGON R	2003	Japan	MC22S repit(Engine)	K6A-NA-VVT-CNG	Read Data Stream	
WAGON R	2003	Japan	MC22S repit(Engine)	K6A-NA-VVT-CNG	Version Information	
WAGON R	2003	Japan	MC22S repit(Engine)	K6A-NA-VVT-CNG	Actuation Test	
WAGON R	1999	Japan	A/T	MC21S	Read/Clear Fault Code	
WAGON R	1999	Japan	A/T	MC21S	Read Data Stream	
WAGON R	1999	Japan	A/T	MC21S	Version Information	
WAGON R	1998 - 2001	Japan	A/T	MC21S	Read/Clear Fault Code	
WAGON R	1998 - 2001	Japan	A/T	MC21S	Read Data Stream	
WAGON R	1998 - 2001	Japan	A/T	MC21S	Version Information	
WAGON R	1998 - 2000	Japan	ABS	MC11S	Read/Clear Fault Code	
WAGON R	1998 - 2000	Japan	ABS	MC11S	Read Data Stream	
WAGON R	1998 - 2000	Japan	ABS	MC11S	Version Information	
WAGON R	1998 - 2000	Japan	ABS	MC21S	Read/Clear Fault Code	
WAGON R	1998 - 2000	Japan	ABS	MC21S	Read Data Stream	
WAGON R	1998 - 2000	Japan	ABS	MC21S	Version Information	
WAGON R	2000	Japan	ABS	MC12S	Read/Clear Fault Code	
WAGON R	2000	Japan	ABS	MC12S	Read Data Stream	
WAGON R	2000	Japan	ABS	MC12S	Version Information	
WAGON R	2000	Japan	ABS	MC12S	Actuation Test	
WAGON R	2000	Japan	ABS	MC22S	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
WAGON R	2000	Japan	ABS	MC22S	Read Data Stream	
WAGON R	2000	Japan	ABS	MC22S	Version Information	
WAGON R	2000	Japan	ABS	MC22S	Actuation Test	
WAGON R	1998 - 2000	Japan	SRS	MC11S	Read/Clear Fault Code	
WAGON R	1998 - 2000	Japan	SRS	MC11S	Read Data Stream	
WAGON R	1998 - 2000	Japan	SRS	MC11S	Version Information	
WAGON R	1998 - 2000	Japan	SRS	MC21S	Read/Clear Fault Code	
WAGON R	1998 - 2000	Japan	SRS	MC21S	Read Data Stream	
WAGON R	1998 - 2000	Japan	SRS	MC21S	Version Information	
WAGON R	2000	Japan	SRS	MC12S	Read/Clear Fault Code	
WAGON R	2000	Japan	SRS	MC12S	Read Data Stream	
WAGON R	2000	Japan	SRS	MC12S	Version Information	
WAGON R	2000	Japan	SRS	MC22S	Read/Clear Fault Code	
WAGON R	2000	Japan	SRS	MC22S	Read Data Stream	
WAGON R	2000	Japan	SRS	MC22S	Version Information	
WAGON R	2001	Japan	SRS	MC22S	Read/Clear Fault Code	
WAGON R	2001	Japan	SRS	MC22S	Read Data Stream	
WAGON R	2001	Japan	SRS	MC22S	Version Information	
EVERY	1999 - 2001	Japan	DA52V(Engine)	F6A-NA	Read/Clear Fault Code	
EVERY	1999 - 2001	Japan	DA52V(Engine)	F6A-NA	Read Data Stream	
EVERY	1999 - 2001	Japan	DA52V(Engine)	F6A-NA	Version Information	
EVERY	1999 - 2001	Japan	DA52V(Engine)	F6A-TURBO	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
EVERY	1999 - 2001	Japan	DA52V(Engine)	F6A-TURBO	Read Data Stream	
EVERY	1999 - 2001	Japan	DA52V(Engine)	F6A-TURBO	Version Information	
EVERY	1999 - 2001	Japan	DB52V(Engine)	F6A-NA	Read/Clear Fault Code	
EVERY	1999 - 2001	Japan	DB52V(Engine)	F6A-NA	Read Data Stream	
EVERY	1999 - 2001	Japan	DB52V(Engine)	F6A-NA	Version Information	
EVERY	1999 - 2001	Japan	DB52V(Engine)	F6A-TURBO	Read/Clear Fault Code	
EVERY	1999 - 2001	Japan	DB52V(Engine)	F6A-TURBO	Read Data Stream	
EVERY	1999 - 2001	Japan	DB52V(Engine)	F6A-TURBO	Version Information	
EVERY	1999 - 2001	Japan	DA52V repit(Engine)	F6A-NA-CNG	Read/Clear Fault Code	
EVERY	1999 - 2001	Japan	DA52V repit(Engine)	F6A-NA-CNG	Read Data Stream	
EVERY	1999 - 2001	Japan	DA52V repit(Engine)	F6A-NA-CNG	Version Information	
EVERY	2001	Japan	DA62V(Engine)	K6A-NA	Read/Clear Fault Code	
EVERY	2001	Japan	DA62V(Engine)	K6A-NA	Read Data Stream	
EVERY	2001	Japan	DA62V(Engine)	K6A-NA	Version Information	
EVERY	2001	Japan	DA62V(Engine)	K6A-NA	Actuation Test	
EVERY	2001	Japan	DA62V(Engine)	K6A-TURBO	Read/Clear Fault Code	
EVERY	2001	Japan	DA62V(Engine)	K6A-TURBO	Read Data Stream	
EVERY	2001	Japan	DA62V(Engine)	K6A-TURBO	Version Information	
EVERY	2001	Japan	DA62V(Engine)	K6A-TURBO	Actuation Test	
EVERY	2001 - 2003	Japan	DA62V(Engine)	K6A-TURBO	Read/Clear Fault Code	
EVERY	2001 - 2003	Japan	DA62V(Engine)	K6A-TURBO	Read Data Stream	
EVERY	2001 - 2003	Japan	DA62V(Engine)	K6A-TURBO	Version Information	
EVERY	2001 - 2003	Japan	DA62V(Engine)	K6A-TURBO	Actuation Test	

model	year	area	system	subitem	function	subfunction
EVERY	2003	Japan	DA62V(Engine)	K6A-TURBO	Read/Clear Fault Code	
EVERY	2003	Japan	DA62V(Engine)	K6A-TURBO	Read Data Stream	
EVERY	2003	Japan	DA62V(Engine)	K6A-TURBO	Version Information	
EVERY	2003	Japan	DA62V(Engine)	K6A-TURBO	Actuation Test	
EVERY	2001	Japan	DA62V repit(Engine)	K6A-NA-CNG	Read/Clear Fault Code	
EVERY	2001	Japan	DA62V repit(Engine)	K6A-NA-CNG	Read Data Stream	
EVERY	2001	Japan	DA62V repit(Engine)	K6A-NA-CNG	Version Information	
EVERY	2001	Japan	DA62V repit(Engine)	K6A-NA-CNG	Actuation Test	
EVERY	1999 - 2001	Japan	A/T	DA52V	Read/Clear Fault Code	
EVERY	1999 - 2001	Japan	A/T	DA52V	Read Data Stream	
EVERY	1999 - 2001	Japan	A/T	DA52V	Version Information	
EVERY	1999 - 2001	Japan	A/T	DB52V	Read/Clear Fault Code	
EVERY	1999 - 2001	Japan	A/T	DB52V	Read Data Stream	
EVERY	1999 - 2001	Japan	A/T	DB52V	Version Information	
EVERY	2001	Japan	A/T	DA62V	Read/Clear Fault Code	
EVERY	2001	Japan	A/T	DA62V	Read Data Stream	
EVERY	2001	Japan	A/T	DA62V	Version Information	
EVERY	1999 - 2001	Japan	ABS	DA52V	Read/Clear Fault Code	
EVERY	1999 - 2001	Japan	ABS	DA52V	Read Data Stream	
EVERY	1999 - 2001	Japan	ABS	DA52V	Version Information	
EVERY	1999 - 2001	Japan	ABS	DB52V	Read/Clear Fault Code	
EVERY	1999 - 2001	Japan	ABS	DB52V	Read Data Stream	

model	year	area	system	subitem	function	subfunction
EVERY	1999 - 2001	Japan	ABS	DB52V	Version Information	
EVERY	2001	Japan	ABS	DA62V	Read/Clear Fault Code	
EVERY	2001	Japan	ABS	DA62V	Read Data Stream	
EVERY	2001	Japan	ABS	DA62V	Version Information	
EVERY	2001	Japan	ABS	DA62V	Actuation Test	
EVERY	2000 - 2001	Japan	DA52V(SRS)	two seats airbag and two seats pretensioner	Read/Clear Fault Code	
EVERY	2000 - 2001	Japan	DA52V(SRS)	two seats airbag and two seats pretensioner	Read Data Stream	
EVERY	2000 - 2001	Japan	DA52V(SRS)	two seats airbag and two seats pretensioner	Version Information	
EVERY	2000 - 2001	Japan	DB52V(SRS)	two seats airbag and two seats pretensioner	Read/Clear Fault Code	
EVERY	2000 - 2001	Japan	DB52V(SRS)	two seats airbag and two seats pretensioner	Read Data Stream	



model	year	area	system	subitem	function	subfunction
EVERY	2000 - 2001	Japan	DB52V(SRS)	two seats airbag and two seats pretensioner	Version Information	
EVERY	2001	Japan	DA62V(SRS)	two seats airbag and two seats pretensioner	Read/Clear Fault Code	
EVERY	2001	Japan	DA62V(SRS)	two seats airbag and two seats pretensioner	Read Data Stream	
EVERY	2001	Japan	DA62V(SRS)	two seats airbag and two seats pretensioner	Version Information	
EVERY	1999 - 2000	Japan	DA52V(SRS)	driver seat airbag or two seats airbag	Read/Clear Fault Code	
EVERY	1999 - 2000	Japan	DA52V(SRS)	driver seat airbag or two seats airbag	Read Data Stream	
EVERY	1999 - 2000	Japan	DA52V(SRS)	driver seat airbag or two seats airbag	Version Information	
EVERY	1999 - 2000	Japan	DB52V(SRS)	driver seat airbag or two seats airbag	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
EVERY	1999 - 2000	Japan	DB52V(SRS)	driver seat airbag or two seats airbag	Read Data Stream	
EVERY	1999 - 2000	Japan	DB52V(SRS)	driver seat airbag or two seats airbag	Version Information	
CARRY	1999 - 2001	Japan	DA52T(Engine)	F6A-NA	Read/Clear Fault Code	
CARRY	1999 - 2001	Japan	DA52T(Engine)	F6A-NA	Read Data Stream	
CARRY	1999 - 2001	Japan	DA52T(Engine)	F6A-NA	Version Information	
CARRY	1999 - 2001	Japan	DA52T(Engine)	F6A-TURBO	Read/Clear Fault Code	
CARRY	1999 - 2001	Japan	DA52T(Engine)	F6A-TURBO	Read Data Stream	
CARRY	1999 - 2001	Japan	DA52T(Engine)	F6A-TURBO	Version Information	
CARRY	1999 - 2001	Japan	DB52T(Engine)	F6A-NA	Read/Clear Fault Code	
CARRY	1999 - 2001	Japan	DB52T(Engine)	F6A-NA	Read Data Stream	
CARRY	1999 - 2001	Japan	DB52T(Engine)	F6A-NA	Version Information	
CARRY	1999 - 2001	Japan	DB52T(Engine)	F6A-TURBO	Read/Clear Fault Code	
CARRY	1999 - 2001	Japan	DB52T(Engine)	F6A-TURBO	Read Data Stream	
CARRY	1999 - 2001	Japan	DB52T(Engine)	F6A-TURBO	Version Information	
CARRY	2001 - 2002	Japan	DA62T(Engine)	K6A-NA	Read/Clear Fault Code	
CARRY	2001 - 2002	Japan	DA62T(Engine)	K6A-NA	Read Data Stream	
CARRY	2001 - 2002	Japan	DA62T(Engine)	K6A-NA	Version Information	
CARRY	2001 - 2002	Japan	DA62T(Engine)	K6A-NA	Actuation Test	
CARRY	2001 - 2002	Japan	DA62T(Engine)	K6A-TURBO	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
CARRY	2001 - 2002	Japan	DA62T(Engine)	K6A-TURBO	Read Data Stream	
CARRY	2001 - 2002	Japan	DA62T(Engine)	K6A-TURBO	Version Information	
CARRY	2001 - 2002	Japan	DA62T(Engine)	K6A-TURBO	Actuation Test	
CARRY	2002	Japan	DA63T(Engine)	K6A-NA	Read/Clear Fault Code	
CARRY	2002	Japan	DA63T(Engine)	K6A-NA	Read Data Stream	
CARRY	2002	Japan	DA63T(Engine)	K6A-NA	Version Information	
CARRY	2002	Japan	DA63T(Engine)	K6A-NA	Actuation Test	
CARRY	2000 - 2001	Japan	ABS	DA52T	Read/Clear Fault Code	
CARRY	2000 - 2001	Japan	ABS	DA52T	Read Data Stream	
CARRY	2000 - 2001	Japan	ABS	DA52T	Version Information	
CARRY	2000 - 2001	Japan	ABS	DA52T	Actuation Test	
CARRY	2000 - 2001	Japan	ABS	DB52T	Read/Clear Fault Code	
CARRY	2000 - 2001	Japan	ABS	DB52T	Read Data Stream	
CARRY	2000 - 2001	Japan	ABS	DB52T	Version Information	
CARRY	2000 - 2001	Japan	ABS	DB52T	Actuation Test	
CARRY	2000 - 2001	Japan	DA52T(SRS)	two seats airbag and two seats pretensioner	Read/Clear Fault Code	
CARRY	2000 - 2001	Japan	DA52T(SRS)	two seats airbag and two seats pretensioner	Read Data Stream	
CARRY	2000 - 2001	Japan	DA52T(SRS)	two seats airbag and two seats pretensioner	Version Information	

model	year	area	system	subitem	function	subfunction
CARRY	2000 - 2001	Japan	DB52T(SRS)	two seats airbag and two seats pretensioner	Read/Clear Fault Code	
CARRY	2000 - 2001	Japan	DB52T(SRS)	two seats airbag and two seats pretensioner	Read Data Stream	
CARRY	2000 - 2001	Japan	DB52T(SRS)	two seats airbag and two seats pretensioner	Version Information	
CARRY	2001 - 2002	Japan	DA62T(SRS)	two seats airbag and two seats pretensioner	Read/Clear Fault Code	
CARRY	2001 - 2002	Japan	DA62T(SRS)	two seats airbag and two seats pretensioner	Read Data Stream	
CARRY	2001 - 2002	Japan	DA62T(SRS)	two seats airbag and two seats pretensioner	Version Information	
CARRY	2002	Japan	DA63T(SRS)	two seats airbag and two seats pretensioner	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
CARRY	2002	Japan	DA63T(SRS)	two seats airbag and two seats pretensioner	Read Data Stream	
CARRY	2002	Japan	DA63T(SRS)	two seats airbag and two seats pretensioner	Version Information	
CARRY	1999 - 2000	Japan	DA52T(SRS)	driver seat airbag or two seats airbag	Read/Clear Fault Code	
CARRY	1999 - 2000	Japan	DA52T(SRS)	driver seat airbag or two seats airbag	Read Data Stream	
CARRY	1999 - 2000	Japan	DA52T(SRS)	driver seat airbag or two seats airbag	Version Information	
CARRY	1999 - 2000	Japan	DB52T(SRS)	driver seat airbag or two seats airbag	Read/Clear Fault Code	
CARRY	1999 - 2000	Japan	DB52T(SRS)	driver seat airbag or two seats airbag	Read Data Stream	
CARRY	1999 - 2000	Japan	DB52T(SRS)	driver seat airbag or two seats airbag	Version Information	
EVERY WAGON	1999 - 2001	Japan	DA52W(Engine)	F6A-TURBO	Read/Clear Fault Code	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
EVERY WAGON	1999 - 2001	Japan	DA52W(Engine)	F6A-TURBO	Read Data Stream	
EVERY WAGON	1999 - 2001	Japan	DA52W(Engine)	F6A-TURBO	Version Information	
EVERY WAGON	2001	Japan	DA62W(Engine)	K6A-NA	Read/Clear Fault Code	
EVERY WAGON	2001	Japan	DA62W(Engine)	K6A-NA	Read Data Stream	
EVERY WAGON	2001	Japan	DA62W(Engine)	K6A-NA	Version Information	
EVERY WAGON	2001	Japan	DA62W(Engine)	K6A-NA	Actuation Test	
EVERY WAGON	2001	Japan	DA62W(Engine)	K6A-TURBO	Read/Clear Fault Code	
EVERY WAGON	2001	Japan	DA62W(Engine)	K6A-TURBO	Read Data Stream	
EVERY WAGON	2001	Japan	DA62W(Engine)	K6A-TURBO	Version Information	
EVERY WAGON	2001	Japan	DA62W(Engine)	K6A-TURBO	Actuation Test	
EVERY WAGON	2001 - 2003	Japan	DA62W(Engine)	K6A-TURBO	Read/Clear Fault Code	
EVERY WAGON	2001 - 2003	Japan	DA62W(Engine)	K6A-TURBO	Read Data Stream	
EVERY WAGON	2001 - 2003	Japan	DA62W(Engine)	K6A-TURBO	Version Information	
EVERY WAGON	2001 - 2003	Japan	DA62W(Engine)	K6A-TURBO	Actuation Test	
EVERY WAGON	2003	Japan	DA62W(Engine)	K6A-TURBO	Read/Clear Fault Code	
EVERY WAGON	2003	Japan	DA62W(Engine)	K6A-TURBO	Read Data Stream	
EVERY WAGON	2003	Japan	DA62W(Engine)	K6A-TURBO	Version Information	
EVERY WAGON	2003	Japan	DA62W(Engine)	K6A-TURBO	Actuation Test	
EVERY WAGON	1999 - 2001	Japan	A/T	DA52W	Read/Clear Fault Code	
EVERY WAGON	1999 - 2001	Japan	A/T	DA52W	Read Data Stream	
EVERY WAGON	1999 - 2001	Japan	A/T	DA52W	Version Information	
EVERY WAGON	2001	Japan	A/T	DA62W	Read/Clear Fault Code	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
EVERY WAGON	2001	Japan	A/T	DA62W	Read Data Stream	
EVERY WAGON	2001	Japan	A/T	DA62W	Version Information	
EVERY WAGON	2001	Japan	A/T	DA62W	Actuation Test	
EVERY WAGON	1999 - 2001	Japan	ABS	DA52W	Read/Clear Fault Code	
EVERY WAGON	1999 - 2001	Japan	ABS	DA52W	Read Data Stream	
EVERY WAGON	1999 - 2001	Japan	ABS	DA52W	Version Information	
EVERY WAGON	2001	Japan	ABS	DA62W	Read/Clear Fault Code	
EVERY WAGON	2001	Japan	ABS	DA62W	Read Data Stream	
EVERY WAGON	2001	Japan	ABS	DA62W	Version Information	
EVERY WAGON	2001	Japan	ABS	DA62W	Actuation Test	
MR WAGON	2001 - 2003	Japan	MF21S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
MR WAGON	2001 - 2003	Japan	MF21S(Engine)	K6A-NA-VVT	Read Data Stream	
MR WAGON	2001 - 2003	Japan	MF21S(Engine)	K6A-NA-VVT	Version Information	
MR WAGON	2001 - 2003	Japan	MF21S(Engine)	K6A-NA-VVT	Actuation Test	
MR WAGON	2001 - 2002	Japan	MF21S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
MR WAGON	2001 - 2002	Japan	MF21S(Engine)	K6A-NA-VVT	Read Data Stream	
MR WAGON	2001 - 2002	Japan	MF21S(Engine)	K6A-NA-VVT	Version Information	
MR WAGON	2001 - 2002	Japan	MF21S(Engine)	K6A-NA-VVT	Actuation Test	
MR WAGON	2001 - 2003	Japan	MF21S(Engine)	K6A-M TURBO	Read/Clear Fault Code	
MR WAGON	2001 - 2003	Japan	MF21S(Engine)	K6A-M TURBO	Read Data Stream	
MR WAGON	2001 - 2003	Japan	MF21S(Engine)	K6A-M TURBO	Version Information	
MR WAGON	2001 - 2003	Japan	MF21S(Engine)	K6A-M TURBO	Actuation Test	

model	year	area	system	subitem	function	subfunction
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-TURBO	Read/Clear Fault Code	
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-TURBO	Read Data Stream	
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-TURBO	Version Information	
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-TURBO	Actuation Test	
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-TURBO anti-alip control(2WD)	Read/Clear Fault Code	
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-TURBO anti-alip control(2WD)	Read Data Stream	
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-TURBO anti-alip control(2WD)	Version Information	
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-TURBO anti-alip control(2WD)	Actuation Test	
MR WAGON	2002	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
MR WAGON	2002	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
MR WAGON	2002	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Version Information	
MR WAGON	2002	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Version Information	
MR WAGON	2002 - 2003	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-M TURBO	Read/Clear Fault Code	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-M TURBO	Read Data Stream	



model	year	area	system	subitem	function	subfunction
MR WAGON	2003	Japan	MF21S(Engine)	K6A-M TURBO	Version Information	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-M TURBO	Actuation Test	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-TURBO	Read/Clear Fault Code	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-TURBO	Read Data Stream	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-TURBO	Version Information	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-TURBO	Actuation Test	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-TURBO anti-alip control(2W D)	Read/Clear Fault Code	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-TURBO anti-alip control(2W D)	Read Data Stream	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-TURBO anti-alip control(2W D)	Version Information	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-TURBO anti-alip control(2W D)	Actuation Test	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-NA-VVT	Read Data Stream	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-NA-VVT	Version Information	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-NA-VVT	Actuation Test	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Version Information	
MR WAGON	2003	Japan	MF21S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
MR WAGON	2001	Japan	ABS	MF21S	Read/Clear Fault Code	
MR WAGON	2001	Japan	ABS	MF21S	Read Data Stream	
MR WAGON	2001	Japan	ABS	MF21S	Version Information	
MR WAGON	2001	Japan	ABS	MF21S	Actuation Test	
MR WAGON	2001	Japan	MF21S(SRS)	two seats airbag and two seats pretensioner	Read/Clear Fault Code	
MR WAGON	2001	Japan	MF21S(SRS)	two seats airbag and two seats pretensioner	Read Data Stream	
MR WAGON	2001	Japan	MF21S(SRS)	two seats airbag and two seats pretensioner	Version Information	
MR WAGON	2001	Japan	MF21S(SRS)	two seats airbag and two seats pretensioner and driver seat CRD	Read/Clear Fault Code	
MR WAGON	2001	Japan	MF21S(SRS)	two seats airbag and two seats pretensioner and driver seat CRD	Read Data Stream	

model	year	area	system	subitem	function	subfunction
MR WAGON	2001	Japan	MF21S(SRS)	two seats airbag and two seats pretensioner and driver seat CRD	Version Information	
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-NA-VVT	Read Data Stream	
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-NA-VVT	Version Information	
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-NA-VVT	Actuation Test	
LAPIN	2002	Japan	HE21S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
LAPIN	2002	Japan	HE21S(Engine)	K6A-NA-VVT	Read Data Stream	
LAPIN	2002	Japan	HE21S(Engine)	K6A-NA-VVT	Version Information	
LAPIN	2002	Japan	HE21S(Engine)	K6A-NA-VVT	Actuation Test	
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-M TURBO	Read/Clear Fault Code	
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-M TURBO	Read Data Stream	
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-M TURBO	Version Information	
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-M TURBO	Actuation Test	
LAPIN	2002	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
LAPIN	2002	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
LAPIN	2002	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Version Information	
LAPIN	2002	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Version Information	
LAPIN	2002 - 2003	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
LAPIN	2003	Japan	HE21S(Engine)	K6A-M TURBO	Read/Clear Fault Code	
LAPIN	2003	Japan	HE21S(Engine)	K6A-M TURBO	Read Data Stream	
LAPIN	2003	Japan	HE21S(Engine)	K6A-M TURBO	Version Information	
LAPIN	2003	Japan	HE21S(Engine)	K6A-M TURBO	Actuation Test	
LAPIN	2003	Japan	HE21S(Engine)	K6A-TURBO	Read/Clear Fault Code	
LAPIN	2003	Japan	HE21S(Engine)	K6A-TURBO	Read Data Stream	
LAPIN	2003	Japan	HE21S(Engine)	K6A-TURBO	Version Information	
LAPIN	2003	Japan	HE21S(Engine)	K6A-TURBO	Actuation Test	
LAPIN	2003	Japan	HE21S(Engine)	K6A-NA-VVT	Read/Clear Fault Code	
LAPIN	2003	Japan	HE21S(Engine)	K6A-NA-VVT	Read Data Stream	
LAPIN	2003	Japan	HE21S(Engine)	K6A-NA-VVT	Version Information	
LAPIN	2003	Japan	HE21S(Engine)	K6A-NA-VVT	Actuation Test	
LAPIN	2003	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
LAPIN	2003	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
LAPIN	2003	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Version Information	
LAPIN	2003	Japan	HE21S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
LAPIN	2002	Japan	ABS	HE21S	Read/Clear Fault Code	
LAPIN	2002	Japan	ABS	HE21S	Read Data Stream	
LAPIN	2002	Japan	ABS	HE21S	Version Information	
LAPIN	2002	Japan	ABS	HE21S	Actuation Test	
LAPIN	2002	Japan	SRS	HE21S	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
LAPIN	2002	Japan	SRS	HE21S	Read Data Stream	
LAPIN	2002	Japan	SRS	HE21S	Version Information	
TWIN	2003	Japan	EC22S(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
TWIN	2003	Japan	EC22S(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
TWIN	2003	Japan	EC22S(Engine)	K6A-NA-VVT U-LEV	Version Information	
TWIN	2003	Japan	EC22S(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
TWIN	2003	Japan	EC22S(Engine)	K6A-NA(no VVT) U-LEV	Read/Clear Fault Code	
TWIN	2003	Japan	EC22S(Engine)	K6A-NA(no VVT) U-LEV	Read Data Stream	
TWIN	2003	Japan	EC22S(Engine)	K6A-NA(no VVT) U-LEV	Version Information	
TWIN	2003	Japan	EC22S(Engine)	K6A-NA(no VVT) U-LEV	Actuation Test	
TWIN	2003	Japan	EC22S(Engine)	K6A-HEV anti-alip control additional locking function	Read/Clear Fault Code	
TWIN	2003	Japan	EC22S(Engine)	K6A-HEV anti-alip control additional locking function	Read Data Stream	
TWIN	2003	Japan	EC22S(Engine)	K6A-HEV anti-alip control additional locking function	Version Information	
TWIN	2003	Japan	EC22S(Engine)	K6A-HEV anti-alip control additional locking function	Actuation Test	

model	year	area	system	subitem	function	subfunction
TWIN	2003	Japan	EC22S modify(Engine)	K6A-NA-VVT U-LEV	Read/Clear Fault Code	
TWIN	2003	Japan	EC22S modify(Engine)	K6A-NA-VVT U-LEV	Read Data Stream	
TWIN	2003	Japan	EC22S modify(Engine)	K6A-NA-VVT U-LEV	Version Information	
TWIN	2003	Japan	EC22S modify(Engine)	K6A-NA-VVT U-LEV	Actuation Test	
TWIN	2003	Japan	EC22S modify(Engine)	K6A-NA(no VVT) U-LEV	Read/Clear Fault Code	
TWIN	2003	Japan	EC22S modify(Engine)	K6A-NA(no VVT) U-LEV	Read Data Stream	
TWIN	2003	Japan	EC22S modify(Engine)	K6A-NA(no VVT) U-LEV	Version Information	
TWIN	2003	Japan	EC22S modify(Engine)	K6A-NA(no VVT) U-LEV	Actuation Test	
TWIN	2003	Japan	EC22S modify(Engine)	K6A-HEV anti-alip control additional locking function	Read/Clear Fault Code	
TWIN	2003	Japan	EC22S modify(Engine)	K6A-HEV anti-alip control additional locking function	Read Data Stream	
TWIN	2003	Japan	EC22S modify(Engine)	K6A-HEV anti-alip control additional locking function	Version Information	
TWIN	2003	Japan	EC22S modify(Engine)	K6A-HEV anti-alip control additional locking function	Actuation Test	
TWIN	2003	Japan	ABS	EC22S	Read/Clear Fault Code	
TWIN	2003	Japan	ABS	EC22S	Read Data Stream	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
TWIN	2003	Japan	ABS	EC22S	Version Information	
TWIN	2003	Japan	ABS	EC22S	Actuation Test	
TWIN	2003	Japan	SRS	EC22S	Read/Clear Fault Code	
TWIN	2003	Japan	SRS	EC22S	Read Data Stream	
TWIN	2003	Japan	SRS	EC22S	Version Information	
ESCUDO	1996	Japan	TA01W(Engine)	G16A	Read/Clear Fault Code	
ESCUDO	1996	Japan	TA01W(Engine)	G16A	Read Data Stream	
ESCUDO	1996	Japan	TA01W(Engine)	G16A	Version Information	
ESCUDO	1996 - 1997	Japan	TA01W(Engine)	G16A	Read/Clear Fault Code	
ESCUDO	1996 - 1997	Japan	TA01W(Engine)	G16A	Read Data Stream	
ESCUDO	1996 - 1997	Japan	TA01W(Engine)	G16A	Version Information	
ESCUDO	1996	Japan	TA01R(Engine)	G16A	Read/Clear Fault Code	
ESCUDO	1996	Japan	TA01R(Engine)	G16A	Read Data Stream	
ESCUDO	1996	Japan	TA01R(Engine)	G16A	Version Information	
ESCUDO	1996 - 1997	Japan	TA01R(Engine)	G16A	Read/Clear Fault Code	
ESCUDO	1996 - 1997	Japan	TA01R(Engine)	G16A	Read Data Stream	
ESCUDO	1996 - 1997	Japan	TA01R(Engine)	G16A	Version Information	
ESCUDO	1996	Japan	TD01W(Engine)	G16A	Read/Clear Fault Code	
ESCUDO	1996	Japan	TD01W(Engine)	G16A	Read Data Stream	
ESCUDO	1996	Japan	TD01W(Engine)	G16A	Version Information	
ESCUDO	1996 - 1997	Japan	TD01W(Engine)	G16A	Read/Clear Fault Code	
ESCUDO	1996 - 1997	Japan	TD01W(Engine)	G16A	Read Data Stream	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
ESCUDO	1996 - 1997	Japan	TD01W(Engine)	G16A	Version Information	
ESCUDO	1996	Japan	TA11W(Engine)	H20A	Read/Clear Fault Code	
ESCUDO	1996	Japan	TA11W(Engine)	H20A	Read Data Stream	
ESCUDO	1996	Japan	TA11W(Engine)	H20A	Version Information	
ESCUDO	1996	Japan	TD11W(Engine)	H20A	Read/Clear Fault Code	
ESCUDO	1996	Japan	TD11W(Engine)	H20A	Read Data Stream	
ESCUDO	1996	Japan	TD11W(Engine)	H20A	Version Information	
ESCUDO	1996 - 1997	Japan	TA51W(Engine)	J20A	Read/Clear Fault Code	
ESCUDO	1996 - 1997	Japan	TA51W(Engine)	J20A	Read Data Stream	
ESCUDO	1996 - 1997	Japan	TA51W(Engine)	J20A	Version Information	
ESCUDO	1997 - 2000	Japan	TA51W(Engine)	J20A	Read/Clear Fault Code	
ESCUDO	1997 - 2000	Japan	TA51W(Engine)	J20A	Read Data Stream	
ESCUDO	1997 - 2000	Japan	TA51W(Engine)	J20A	Version Information	
ESCUDO	1996 - 1997	Japan	TD51W(Engine)	J20A	Read/Clear Fault Code	
ESCUDO	1996 - 1997	Japan	TD51W(Engine)	J20A	Read Data Stream	
ESCUDO	1996 - 1997	Japan	TD51W(Engine)	J20A	Version Information	
ESCUDO	1997 - 2000	Japan	TD51W(Engine)	J20A	Read/Clear Fault Code	
ESCUDO	1997 - 2000	Japan	TD51W(Engine)	J20A	Read Data Stream	
ESCUDO	1997 - 2000	Japan	TD51W(Engine)	J20A	Version Information	
ESCUDO	1996 - 1998	Japan	TD61W(Engine)	H25A	Read/Clear Fault Code	
ESCUDO	1996 - 1998	Japan	TD61W(Engine)	H25A	Read Data Stream	
ESCUDO	1996 - 1998	Japan	TD61W(Engine)	H25A	Version Information	



<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
ESCUDO	1998 - 2000	Japan	TD61W(Engine)	H25A	Read/Clear Fault Code	
ESCUDO	1998 - 2000	Japan	TD61W(Engine)	H25A	Read Data Stream	
ESCUDO	1998 - 2000	Japan	TD61W(Engine)	H25A	Version Information	
ESCUDO	1998 - 2000	Japan	TD62W(Engine)	H25A	Read/Clear Fault Code	
ESCUDO	1998 - 2000	Japan	TD62W(Engine)	H25A	Read Data Stream	
ESCUDO	1998 - 2000	Japan	TD62W(Engine)	H25A	Version Information	
ESCUDO	2000	Japan	TD62W(Engine)	H25A	Read/Clear Fault Code	
ESCUDO	2000	Japan	TD62W(Engine)	H25A	Read Data Stream	
ESCUDO	2000	Japan	TD62W(Engine)	H25A	Version Information	
ESCUDO	2000	Japan	TD62W(Engine)	H25A	Actuation Test	
ESCUDO	1997 - 2000	Japan	TA02W(Engine)	G16A	Read/Clear Fault Code	
ESCUDO	1997 - 2000	Japan	TA02W(Engine)	G16A	Read Data Stream	
ESCUDO	1997 - 2000	Japan	TA02W(Engine)	G16A	Version Information	
ESCUDO	2000	Japan	TA02W(Engine)	G16A	Read/Clear Fault Code	
ESCUDO	2000	Japan	TA02W(Engine)	G16A	Read Data Stream	
ESCUDO	2000	Japan	TA02W(Engine)	G16A	Version Information	
ESCUDO	2000	Japan	TA02W(Engine)	G16A	Actuation Test	
ESCUDO	1997 - 2000	Japan	TD02W(Engine)	G16A	Read/Clear Fault Code	
ESCUDO	1997 - 2000	Japan	TD02W(Engine)	G16A	Read Data Stream	
ESCUDO	1997 - 2000	Japan	TD02W(Engine)	G16A	Version Information	
ESCUDO	1997 - 2000	Japan	TD52W(Engine)	J20A	Read/Clear Fault Code	
ESCUDO	1997 - 2000	Japan	TD52W(Engine)	J20A	Read Data Stream	
ESCUDO	1997 - 2000	Japan	TD52W(Engine)	J20A	Version Information	

model	year	area	system	subitem	function	subfunction
ESCUDO	2000 - 2002	Japan	TA52W(Engine)	J20A	Read/Clear Fault Code	
ESCUDO	2000 - 2002	Japan	TA52W(Engine)	J20A	Read Data Stream	
ESCUDO	2000 - 2002	Japan	TA52W(Engine)	J20A	Version Information	
ESCUDO	2000 - 2002	Japan	TA52W(Engine)	J20A	Actuation Test	
ESCUDO	2000	Japan	TL52W(Engine)	J20A	Read/Clear Fault Code	
ESCUDO	2000	Japan	TL52W(Engine)	J20A	Read Data Stream	
ESCUDO	2000	Japan	TL52W(Engine)	J20A	Version Information	
ESCUDO	2000	Japan	TL52W(Engine)	J20A	Actuation Test	
ESCUDO	1996	Japan	A/T	TA01W	Read/Clear Fault Code	
ESCUDO	1996	Japan	A/T	TA01W	Read Data Stream	
ESCUDO	1996	Japan	A/T	TA01W	Version Information	
ESCUDO	1996	Japan	A/T	TA01R	Read/Clear Fault Code	
ESCUDO	1996	Japan	A/T	TA01R	Read Data Stream	
ESCUDO	1996	Japan	A/T	TA01R	Version Information	
ESCUDO	1996	Japan	A/T	TD01W	Read/Clear Fault Code	
ESCUDO	1996	Japan	A/T	TD01W	Read Data Stream	
ESCUDO	1996	Japan	A/T	TD01W	Version Information	
ESCUDO	2000	Japan	A/T	TA02W	Read/Clear Fault Code	
ESCUDO	2000	Japan	A/T	TA02W	Read Data Stream	
ESCUDO	2000	Japan	A/T	TA02W	Version Information	
ESCUDO	2000 - 2002	Japan	A/T	TA52W	Read/Clear Fault Code	
ESCUDO	2000 - 2002	Japan	A/T	TA52W	Read Data Stream	
ESCUDO	2000 - 2002	Japan	A/T	TA52W	Version Information	

model	year	area	system	subitem	function	subfunction
ESCUDO	2000	Japan	A/T	TL52W	Read/Clear Fault Code	
ESCUDO	2000	Japan	A/T	TL52W	Read Data Stream	
ESCUDO	2000	Japan	A/T	TL52W	Version Information	
ESCUDO	2000	Japan	ABS	TA02W	Read/Clear Fault Code	
ESCUDO	2000	Japan	ABS	TA02W	Read Data Stream	
ESCUDO	2000	Japan	ABS	TA02W	Version Information	
ESCUDO	2000	Japan	ABS	TA02W	Actuation Test	
ESCUDO	2000 - 2002	Japan	ABS	TA52W	Read/Clear Fault Code	
ESCUDO	2000 - 2002	Japan	ABS	TA52W	Read Data Stream	
ESCUDO	2000 - 2002	Japan	ABS	TA52W	Version Information	
ESCUDO	2000 - 2002	Japan	ABS	TA52W	Actuation Test	
ESCUDO	2000	Japan	ABS	TL52W	Read/Clear Fault Code	
ESCUDO	2000	Japan	ABS	TL52W	Read Data Stream	
ESCUDO	2000	Japan	ABS	TL52W	Version Information	
ESCUDO	2000	Japan	ABS	TL52W	Actuation Test	
ESCUDO	2000	Japan	ABS	TD62W	Read/Clear Fault Code	
ESCUDO	2000	Japan	ABS	TD62W	Read Data Stream	
ESCUDO	2000	Japan	ABS	TD62W	Version Information	
ESCUDO	2000	Japan	ABS	TD62W	Actuation Test	
ESCUDO	1997 - 2002	Japan	SRS	all vehicles	Read/Clear Fault Code	
ESCUDO	2002	Japan	ABS	TL52W	Read/Clear Fault Code	
ESCUDO	2002	Japan	ABS	TL52W	Read Data Stream	
ESCUDO	2002	Japan	SRS	TL52W	Version Information	
ESCUDO	2002	Japan	ABS	TD62W	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
ESCUDO	2002	Japan	ABS	TD62W	Read Data Stream	
ESCUDO	2002	Japan	SRS	TD62W	Version Information	
ESCUDO	2002	Japan	A/C	TL52W	Read/Clear Fault Code	
ESCUDO	2002	Japan	A/C	TL52W	Read Data Stream	
ESCUDO	2002	Japan	A/C	TL52W	Version Information	
ESCUDO	2002	Japan	A/C	TD62W	Read/Clear Fault Code	
ESCUDO	2002	Japan	A/C	TD62W	Read Data Stream	
ESCUDO	2002	Japan	A/C	TD62W	Version Information	
ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TL52W	Read/Clear Fault Code	
ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TL52W	Read Data Stream	
ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TL52W	Version Information	
ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TL52W	Actuation Test	
ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TD62W	Read/Clear Fault Code	
ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TD62W	Read Data Stream	
ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TD62W	Version Information	
ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TD62W	Actuation Test	
ESCUDO	2003	Japan	BCM(Body Control Module)	TL52W	Read/Clear Fault Code	
ESCUDO	2003	Japan	BCM(Body Control Module)	TL52W	Read Data Stream	
ESCUDO	2003	Japan	BCM(Body Control Module)	TL52W	Version Information	
ESCUDO	2003	Japan	BCM(Body Control Module)	TL52W	Actuation Test	
ESCUDO	2003	Japan	BCM(Body Control Module)	TD62W	Read/Clear Fault Code	
ESCUDO	2003	Japan	BCM(Body Control Module)	TD62W	Read Data Stream	

model	year	area	system	subitem	function	subfunction
ESCUDO	2003	Japan	BCM(Body Control Module)	TD62W	Version Information	
ESCUDO	2003	Japan	BCM(Body Control Module)	TD62W	Actuation Test	
X-90	1995 - 1997	Japan	LB11S(Engine)	G16A	Read/Clear Fault Code	
X-90	1995 - 1997	Japan	LB11S(Engine)	G16A	Read Data Stream	
X-90	1995 - 1997	Japan	LB11S(Engine)	G16A	Version Information	
CULTUS CRECENT	1996 - 1997	Japan	GA11S(Engine)	G13B	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1997	Japan	GA11S(Engine)	G13B	Read Data Stream	
CULTUS CRECENT	1996 - 1997	Japan	GA11S(Engine)	G13B	Version Information	
CULTUS CRECENT	1997 - 1998	Japan	GA11S(Engine)	G13B	Read/Clear Fault Code	
CULTUS CRECENT	1997 - 1998	Japan	GA11S(Engine)	G13B	Read Data Stream	
CULTUS CRECENT	1997 - 1998	Japan	GA11S(Engine)	G13B	Version Information	
CULTUS CRECENT	1996 - 1997	Japan	GC21S(Engine)	G15A	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1997	Japan	GC21S(Engine)	G15A	Read Data Stream	
CULTUS CRECENT	1996 - 1997	Japan	GC21S(Engine)	G15A	Version Information	
CULTUS CRECENT	1996 - 1997	Japan	GC21W(Engine)	G15A	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1997	Japan	GC21W(Engine)	G15A	Read Data Stream	
CULTUS CRECENT	1996 - 1997	Japan	GC21W(Engine)	G15A	Version Information	
CULTUS CRECENT	1996 - 1997	Japan	GD31S(Engine)	G16A	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1997	Japan	GD31S(Engine)	G16A	Read Data Stream	
CULTUS CRECENT	1996 - 1997	Japan	GD31S(Engine)	G16A	Version Information	
CULTUS CRECENT	1996 - 1997	Japan	GD31W(Engine)	G16A	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1997	Japan	GD31W(Engine)	G16A	Read Data Stream	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
CULTUS CRECENT	1996 - 1997	Japan	GD31W(Engine)	G16A	Version Information	
CULTUS CRECENT	1996 - 1997	Japan	GB31S(Engine)	G16A	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1997	Japan	GB31S(Engine)	G16A	Read Data Stream	
CULTUS CRECENT	1996 - 1997	Japan	GB31S(Engine)	G16A	Version Information	
CULTUS CRECENT	1996 - 2002	Japan	GC41W(Engine)	J18A	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 2002	Japan	GC41W(Engine)	J18A	Read Data Stream	
CULTUS CRECENT	1996 - 2002	Japan	GC41W(Engine)	J18A	Version Information	
CULTUS CRECENT	1997 - 1998	Japan	GA21S(Engine)	G15A	Read/Clear Fault Code	
CULTUS CRECENT	1997 - 1998	Japan	GA21S(Engine)	G15A	Read Data Stream	
CULTUS CRECENT	1997 - 1998	Japan	GA21S(Engine)	G15A	Version Information	
CULTUS CRECENT	1997 - 1998	Japan	GB21S(Engine)	G15A	Read/Clear Fault Code	
CULTUS CRECENT	1997 - 1998	Japan	GB21S(Engine)	G15A	Read Data Stream	
CULTUS CRECENT	1997 - 1998	Japan	GB21S(Engine)	G15A	Version Information	
CULTUS CRECENT	1997 - 1998	Japan	GC21S(Engine)	G16A	Read/Clear Fault Code	
CULTUS CRECENT	1997 - 1998	Japan	GC21S(Engine)	G16A	Read Data Stream	
CULTUS CRECENT	1997 - 1998	Japan	GC21S(Engine)	G16A	Version Information	
CULTUS CRECENT	1997 - 1998	Japan	GD21S(Engine)	G16A	Read/Clear Fault Code	
CULTUS CRECENT	1997 - 1998	Japan	GD21S(Engine)	G16A	Read Data Stream	
CULTUS CRECENT	1997 - 1998	Japan	GD21S(Engine)	G16A	Version Information	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GB31S	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GB31S	Read Data Stream	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GB31S	Version Information	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
CULTUS CRECENT	1996 - 1998	Japan	A/T	GC21S	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GC21S	Read Data Stream	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GC21S	Version Information	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GD31S	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GD31S	Read Data Stream	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GD31S	Version Information	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GC21W	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GC21W	Read Data Stream	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GC21W	Version Information	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GD31W	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GD31W	Read Data Stream	
CULTUS CRECENT	1996 - 1998	Japan	A/T	GD31W	Version Information	
CULTUS CRECENT	1996 - 2002	Japan	A/T	GC41W	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 2002	Japan	A/T	GC41W	Read Data Stream	
CULTUS CRECENT	1996 - 2002	Japan	A/T	GC41W	Version Information	
CULTUS CRECENT	1996 - 1999	Japan	A/T	GA11S	Read/Clear Fault Code	
CULTUS CRECENT	1996 - 1999	Japan	A/T	GA11S	Read Data Stream	
CULTUS CRECENT	1996 - 1999	Japan	A/T	GA11S	Version Information	
CULTUS CRECENT	1998 - 1999	Japan	A/T	GA11S	Read/Clear Fault Code	
CULTUS CRECENT	1998 - 1999	Japan	A/T	GA11S	Read Data Stream	
CULTUS CRECENT	1998 - 1999	Japan	A/T	GA11S	Version Information	
CULTUS CRECENT	1996 - 1997	Japan	ABS	GA11S	Read/Clear Fault Code	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
CULTUS CRECENT	1996 - 1997	Japan	ABS	GA11S	Read Data Stream	
CULTUS CRECENT	1996 - 1997	Japan	ABS	GA11S	Version Information	
CULTUS CRECENT	1997 - 2000	Japan	ABS	GA11S	Read/Clear Fault Code	
CULTUS CRECENT	1997 - 2000	Japan	ABS	GA11S	Read Data Stream	
CULTUS CRECENT	1997 - 2000	Japan	ABS	GA11S	Version Information	
CULTUS CRECENT	1997 - 2000	Japan	EPS	GA11S	Read/Clear Fault Code	
CULTUS CRECENT	1997 - 2000	Japan	EPS	GA11S	Read Data Stream	
CULTUS CRECENT	1997 - 2000	Japan	EPS	GA11S	Version Information	
CULTUS CRECENT	1997 - 2002	Japan	SRS	all vehicles	Read/Clear Fault Code	
CULTUS CRECENT	1997 - 2002	Japan	SRS	all vehicles	Read Data Stream	
CULTUS CRECENT	1997 - 2002	Japan	SRS	all vehicles	Version Information	
CULTUS	1998 - 2000	Japan	GA11S(Engine)	G13B	Read/Clear Fault Code	
CULTUS	1998 - 2000	Japan	GA11S(Engine)	G13B	Read Data Stream	
CULTUS	1998 - 2000	Japan	GA11S(Engine)	G13B	Version Information	
CULTUS	1998 - 2001	Japan	GC21S(Engine)	G15A	Read/Clear Fault Code	
CULTUS	1998 - 2001	Japan	GC21S(Engine)	G15A	Read Data Stream	
CULTUS	1998 - 2001	Japan	GC21S(Engine)	G15A	Version Information	
CULTUS	1998 - 2002	Japan	GC21W(Engine)	G15A	Read/Clear Fault Code	
CULTUS	1998 - 2002	Japan	GC21W(Engine)	G15A	Read Data Stream	
CULTUS	1998 - 2002	Japan	GC21W(Engine)	G15A	Version Information	
CULTUS	1998 - 2001	Japan	GD31S(Engine)	G16A	Read/Clear Fault Code	
CULTUS	1998 - 2001	Japan	GD31S(Engine)	G16A	Read Data Stream	



model	year	area	system	subitem	function	subfunction
CULTUS	1998 - 2001	Japan	GD31S(Engine)	G16A	Version Information	
CULTUS	1998 - 2001	Japan	GB31S(Engine)	G16A	Read/Clear Fault Code	
CULTUS	1998 - 2001	Japan	GB31S(Engine)	G16A	Read Data Stream	
CULTUS	1998 - 2001	Japan	GB31S(Engine)	G16A	Version Information	
CULTUS	1998 - 2002	Japan	GD31W(Engine)	G16A	Read/Clear Fault Code	
CULTUS	1998 - 2002	Japan	GD31W(Engine)	G16A	Read Data Stream	
CULTUS	1998 - 2002	Japan	GD31W(Engine)	G16A	Version Information	
CULTUS	1998 - 2001	Japan	A/T	GC21S	Read/Clear Fault Code	
CULTUS	1998 - 2001	Japan	A/T	GC21S	Read Data Stream	
CULTUS	1998 - 2001	Japan	A/T	GC21S	Version Information	
CULTUS	1998 - 2001	Japan	A/T	GD31S	Read/Clear Fault Code	
CULTUS	1998 - 2001	Japan	A/T	GD31S	Read Data Stream	
CULTUS	1998 - 2001	Japan	A/T	GD31S	Version Information	
CULTUS	1998 - 2001	Japan	A/T	GB31S	Read/Clear Fault Code	
CULTUS	1998 - 2001	Japan	A/T	GB31S	Read Data Stream	
CULTUS	1998 - 2001	Japan	A/T	GB31S	Version Information	
CULTUS	1998 - 2002	Japan	A/T	GC21W	Read/Clear Fault Code	
CULTUS	1998 - 2002	Japan	A/T	GC21W	Read Data Stream	
CULTUS	1998 - 2002	Japan	A/T	GC21W	Version Information	
CULTUS	1998 - 2002	Japan	A/T	GD31W	Read/Clear Fault Code	
CULTUS	1998 - 2002	Japan	A/T	GD31W	Read Data Stream	
CULTUS	1998 - 2002	Japan	A/T	GD31W	Version Information	

model	year	area	system	subitem	function	subfunction
CULTUS	2000 - 2001	Japan	ABS	GC21S	Read/Clear Fault Code	
CULTUS	2000 - 2001	Japan	ABS	GC21S	Read Data Stream	
CULTUS	2000 - 2001	Japan	ABS	GC21S	Version Information	
CULTUS	2000 - 2001	Japan	ABS	GC21S	Actuation Test	
CULTUS	2000 - 2002	Japan	ABS	GC21W	Read/Clear Fault Code	
CULTUS	2000 - 2002	Japan	ABS	GC21W	Read Data Stream	
CULTUS	2000 - 2002	Japan	ABS	GC21W	Version Information	
CULTUS	2000 - 2002	Japan	ABS	GC21W	Actuation Test	
CULTUS	2000 - 2002	Japan	ABS	GC41W	Read/Clear Fault Code	
CULTUS	2000 - 2002	Japan	ABS	GC41W	Read Data Stream	
CULTUS	2000 - 2002	Japan	ABS	GC41W	Version Information	
CULTUS	2000 - 2002	Japan	ABS	GC41W	Actuation Test	
CULTUS	2000 - 2001	Japan	ABS	GD31S	Read/Clear Fault Code	
CULTUS	2000 - 2001	Japan	ABS	GD31S	Read Data Stream	
CULTUS	2000 - 2001	Japan	ABS	GD31S	Version Information	
CULTUS	2000 - 2001	Japan	ABS	GD31S	Actuation Test	
CULTUS	2000 - 2002	Japan	ABS	GD31W	Read/Clear Fault Code	
CULTUS	2000 - 2002	Japan	ABS	GD31W	Read Data Stream	
CULTUS	2000 - 2002	Japan	ABS	GD31W	Version Information	
CULTUS	2000 - 2002	Japan	ABS	GD31W	Actuation Test	
WAGON R WIDE	1997 - 1999	Japan	MA61S(Engine)	K10A-NA TURBO	Read/Clear Fault Code	
WAGON R WIDE	1997 - 1999	Japan	MA61S(Engine)	K10A-NA TURBO	Read Data Stream	
WAGON R WIDE	1997 - 1999	Japan	MA61S(Engine)	K10A-NA TURBO	Version Information	
WAGON R WIDE	1997 - 1999	Japan	MB61S(Engine)	K10A-NA TURBO	Read/Clear Fault Code	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
WAGON R WIDE	1997 - 1999	Japan	MB61S(Engine)	K10A-NA TURBO	Read Data Stream	
WAGON R WIDE	1997 - 1999	Japan	MB61S(Engine)	K10A-NA TURBO	Version Information	
WAGON R WIDE	1997 - 1999	Japan	A/T	MA61S	Read/Clear Fault Code	
WAGON R WIDE	1997 - 1999	Japan	A/T	MA61S	Read Data Stream	
WAGON R WIDE	1997 - 1999	Japan	A/T	MA61S	Version Information	
WAGON R WIDE	1998 - 1999	Japan	A/T	MA61S	Read/Clear Fault Code	
WAGON R WIDE	1998 - 1999	Japan	A/T	MA61S	Read Data Stream	
WAGON R WIDE	1998 - 1999	Japan	A/T	MA61S	Version Information	
WAGON R WIDE	1997 - 1999	Japan	A/T	MB61S	Read/Clear Fault Code	
WAGON R WIDE	1997 - 1999	Japan	A/T	MB61S	Read Data Stream	
WAGON R WIDE	1997 - 1999	Japan	A/T	MB61S	Version Information	
WAGON R WIDE	1998 - 1999	Japan	A/T	MB61S	Read/Clear Fault Code	
WAGON R WIDE	1998 - 1999	Japan	A/T	MB61S	Read Data Stream	
WAGON R WIDE	1998 - 1999	Japan	A/T	MB61S	Version Information	
WAGON R WIDE	1997 - 1999	Japan	ABS	MA61S	Read/Clear Fault Code	
WAGON R WIDE	1997 - 1999	Japan	ABS	MA61S	Read Data Stream	
WAGON R WIDE	1997 - 1999	Japan	ABS	MA61S	Version Information	
WAGON R WIDE	1997 - 1999	Japan	ABS	MB61S	Read/Clear Fault Code	
WAGON R WIDE	1997 - 1999	Japan	ABS	MB61S	Read Data Stream	
WAGON R WIDE	1997 - 1999	Japan	ABS	MB61S	Version Information	
WAGON R WIDE	1997 - 1999	Japan	SRS	MA61S	Read/Clear Fault Code	
WAGON R WIDE	1997 - 1999	Japan	SRS	MA61S	Read Data Stream	

model	year	area	system	subitem	function	subfunction
WAGON R WIDE	1997 - 1999	Japan	SRS	MA61S	Version Information	
WAGON R WIDE	1997 - 1999	Japan	SRS	MB61S	Read/Clear Fault Code	
WAGON R WIDE	1997 - 1999	Japan	SRS	MB61S	Read Data Stream	
WAGON R WIDE	1997 - 1999	Japan	SRS	MB61S	Version Information	
EVERY+	1999 - 2001	Japan	DA32W(Engine)	G13B	Read/Clear Fault Code	
EVERY+	1999 - 2001	Japan	DA32W(Engine)	G13B	Read Data Stream	
EVERY+	1999 - 2001	Japan	DA32W(Engine)	G13B	Version Information	
EVERY+	1999 - 2001	Japan	A/T	DA32W	Read/Clear Fault Code	
EVERY+	1999 - 2001	Japan	A/T	DA32W	Read Data Stream	
EVERY+	1999 - 2001	Japan	A/T	DA32W	Version Information	
EVERY+	1999 - 2001	Japan	ABS	DA32W`	Read/Clear Fault Code	
EVERY+	1999 - 2001	Japan	ABS	DA32W`	Read Data Stream	
EVERY+	1999 - 2001	Japan	ABS	DA32W`	Version Information	
EVERY+	1999 - 2001	Japan	EPS	DA32W	Read/Clear Fault Code	
EVERY+	1999 - 2001	Japan	EPS	DA32W	Read Data Stream	
EVERY+	1999 - 2001	Japan	EPS	DA32W	Version Information	
EVERY+	1999 - 2001	Japan	SRS	DA32W	Read/Clear Fault Code	
EVERY+	1999 - 2001	Japan	SRS	DA32W	Read Data Stream	
EVERY+	1999 - 2001	Japan	SRS	DA32W	Version Information	
SWIFT	2000 - 2003	Japan	HT51S(Engine)	M13A-NA-VVT	Read/Clear Fault Code	
SWIFT	2000 - 2003	Japan	HT51S(Engine)	M13A-NA-VVT	Read Data Stream	
SWIFT	2000 - 2003	Japan	HT51S(Engine)	M13A-NA-VVT	Version Information	

model	year	area	system	subitem	function	subfunction
SWIFT	2000 - 2003	Japan	HT51S(Engine)	M13A-NA-VVT	Actuation Test	
SWIFT	2000	Japan	HT51S(Engine)	M13A-NA-VVT	Read/Clear Fault Code	
SWIFT	2000	Japan	HT51S(Engine)	M13A-NA-VVT	Read Data Stream	
SWIFT	2000	Japan	HT51S(Engine)	M13A-NA-VVT	Version Information	
SWIFT	2000	Japan	HT51S(Engine)	M13A-NA-VVT	Actuation Test	
SWIFT	2003	Japan	HT51S(Engine)	M13A-NA-VVT U-LEV	Read/Clear Fault Code	
SWIFT	2003	Japan	HT51S(Engine)	M13A-NA-VVT U-LEV	Read Data Stream	
SWIFT	2003	Japan	HT51S(Engine)	M13A-NA-VVT U-LEV	Version Information	
SWIFT	2003	Japan	HT51S(Engine)	M13A-NA-VVT U-LEV	Actuation Test	
SWIFT	2003	Japan	HT81S(Engine)	M15A-NA-VVT	Read/Clear Fault Code	
SWIFT	2003	Japan	HT81S(Engine)	M15A-NA-VVT	Read Data Stream	
SWIFT	2003	Japan	HT81S(Engine)	M15A-NA-VVT	Version Information	
SWIFT	2003	Japan	HT81S(Engine)	M15A-NA-VVT	Actuation Test	
SWIFT	2000 - 2001	Japan	A/T	HT51S	Read/Clear Fault Code	
SWIFT	2000 - 2001	Japan	A/T	HT51S	Read Data Stream	
SWIFT	2000 - 2001	Japan	A/T	HT51S	Version Information	
SWIFT	2001	Japan	A/T	HT51S	Read/Clear Fault Code	
SWIFT	2001	Japan	A/T	HT51S	Read Data Stream	
SWIFT	2001	Japan	A/T	HT51S	Version Information	
SWIFT	2000	Japan	ABS	HT51S	Read/Clear Fault Code	
SWIFT	2000	Japan	ABS	HT51S	Read Data Stream	
SWIFT	2000	Japan	ABS	HT51S	Version Information	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
SWIFT	2000	Japan	ABS	HT51S	Actuation Test	
SWIFT	2000	Japan	EPS	HT51S	Read/Clear Fault Code	
SWIFT	2000	Japan	EPS	HT51S	Read Data Stream	
SWIFT	2000	Japan	EPS	HT51S	Version Information	
SWIFT	2000	Japan	SRS	HT51S	Read/Clear Fault Code	
SWIFT	2000	Japan	SRS	HT51S	Read Data Stream	
SWIFT	2000	Japan	SRS	HT51S	Version Information	
WAGON R SOLIO	2000	Japan	MA34S(Engine)	M13A-NA-VVT	Read/Clear Fault Code	
WAGON R SOLIO	2000	Japan	MA34S(Engine)	M13A-NA-VVT	Read Data Stream	
WAGON R SOLIO	2000	Japan	MA34S(Engine)	M13A-NA-VVT	Version Information	
WAGON R SOLIO	2000	Japan	MA34S(Engine)	M13A-NA-VVT	Actuation Test	
WAGON R SOLIO	2000 - 2002	Japan	MA64S(Engine)	K10A-NA-VVT	Read/Clear Fault Code	
WAGON R SOLIO	2000 - 2002	Japan	MA64S(Engine)	K10A-NA-VVT	Read Data Stream	
WAGON R SOLIO	2000 - 2002	Japan	MA64S(Engine)	K10A-NA-VVT	Version Information	
WAGON R SOLIO	2000 - 2002	Japan	MA64S(Engine)	K10A-NA-VVT	Actuation Test	
WAGON R SOLIO	2000 - 2002	Japan	A/T	MA64S	Read/Clear Fault Code	
WAGON R SOLIO	2000 - 2002	Japan	A/T	MA64S	Read Data Stream	
WAGON R SOLIO	2000 - 2002	Japan	A/T	MA64S	Version Information	
WAGON R SOLIO	2000	Japan	A/T	MA34S	Read/Clear Fault Code	
WAGON R SOLIO	2000	Japan	A/T	MA34S	Read Data Stream	
WAGON R SOLIO	2000	Japan	A/T	MA34S	Version Information	
WAGON R SOLIO	2000	Japan	ABS	MA34S	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
WAGON R SOLIO	2000	Japan	ABS	MA34S	Read Data Stream	
WAGON R SOLIO	2000	Japan	ABS	MA34S	Version Information	
WAGON R SOLIO	2000	Japan	ABS	MA34S	Actuation Test	
WAGON R SOLIO	2000 - 2002	Japan	ABS	MA64S	Read/Clear Fault Code	
WAGON R SOLIO	2000 - 2002	Japan	ABS	MA64S	Read Data Stream	
WAGON R SOLIO	2000 - 2002	Japan	ABS	MA64S	Version Information	
WAGON R SOLIO	2000 - 2002	Japan	ABS	MA64S	Actuation Test	
WAGON R SOLIO	2000	Japan	EPS	MA34S	Read/Clear Fault Code	
WAGON R SOLIO	2000	Japan	EPS	MA34S	Read Data Stream	
WAGON R SOLIO	2000	Japan	EPS	MA34S	Version Information	
WAGON R SOLIO	2000 - 2002	Japan	EPS	MA64S	Read/Clear Fault Code	
WAGON R SOLIO	2000 - 2002	Japan	EPS	MA64S	Read Data Stream	
WAGON R SOLIO	2000 - 2002	Japan	EPS	MA64S	Version Information	
WAGON R SOLIO	2000	Japan	SRS	MA34S	Read/Clear Fault Code	
WAGON R SOLIO	2000	Japan	SRS	MA34S	Read Data Stream	
WAGON R SOLIO	2000	Japan	SRS	MA34S	Version Information	
WAGON R SOLIO	2000 - 2002	Japan	SRS	MA64S	Read/Clear Fault Code	
WAGON R SOLIO	2000 - 2002	Japan	SRS	MA64S	Read Data Stream	
WAGON R SOLIO	2000 - 2002	Japan	SRS	MA64S	Version Information	
GRAND ESCUDO	2000 - 2003	Japan	TX92W(Engine)	H27A	Read/Clear Fault Code	
GRAND ESCUDO	2000 - 2003	Japan	TX92W(Engine)	H27A	Read Data Stream	
GRAND ESCUDO	2000 - 2003	Japan	TX92W(Engine)	H27A	Version Information	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
GRAND ESCUDO	2000 - 2003	Japan	TX92W(Engine)	H27A	Actuation Test	
GRAND ESCUDO	2003	Japan	TX92W(Engine)	H27A U-LEV	Read/Clear Fault Code	
GRAND ESCUDO	2003	Japan	TX92W(Engine)	H27A U-LEV	Read Data Stream	
GRAND ESCUDO	2003	Japan	TX92W(Engine)	H27A U-LEV	Version Information	
GRAND ESCUDO	2003	Japan	TX92W(Engine)	H27A U-LEV	Actuation Test	
GRAND ESCUDO	2003	Japan	A/T	TX92W	Read/Clear Fault Code	
GRAND ESCUDO	2003	Japan	A/T	TX92W	Read Data Stream	
GRAND ESCUDO	2003	Japan	A/T	TX92W	Version Information	
GRAND ESCUDO	2000	Japan	ABS	TX92W	Read/Clear Fault Code	
GRAND ESCUDO	2000	Japan	ABS	TX92W	Read Data Stream	
GRAND ESCUDO	2000	Japan	ABS	TX92W	Version Information	
GRAND ESCUDO	2000	Japan	ABS	TX92W	Actuation Test	
GRAND ESCUDO	2000	Japan	SRS	TX92W	Read/Clear Fault Code	
GRAND ESCUDO	2000	Japan	SRS	TX92W	Read Data Stream	
GRAND ESCUDO	2000	Japan	SRS	TX92W	Version Information	
GRAND ESCUDO	2002	Japan	A/C	TX92W	Read/Clear Fault Code	
GRAND ESCUDO	2002	Japan	A/C	TX92W	Read Data Stream	
GRAND ESCUDO	2002	Japan	A/C	TX92W	Version Information	
GRAND ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TX92W	Read/Clear Fault Code	
GRAND ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TX92W	Read Data Stream	
GRAND ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TX92W	Version Information	
GRAND ESCUDO	2002 - 2003	Japan	BCM(Body Control Module)	TX92W	Actuation Test	



<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
GRAND ESCUDO	2003	Japan	BCM(Body Control Module)	TX92W	Read/Clear Fault Code	
GRAND ESCUDO	2003	Japan	BCM(Body Control Module)	TX92W	Read Data Stream	
GRAND ESCUDO	2003	Japan	BCM(Body Control Module)	TX92W	Version Information	
GRAND ESCUDO	2003	Japan	4WD	TX92W	Read/Clear Fault Code	
GRAND ESCUDO	2003	Japan	4WD	TX92W	Read Data Stream	
GRAND ESCUDO	2003	Japan	4WD	TX92W	Version Information	
AERIO	2001	Japan	RB21S(Engine)	M15A-NA-VVT	Read/Clear Fault Code	
AERIO	2001	Japan	RB21S(Engine)	M15A-NA-VVT	Read Data Stream	
AERIO	2001	Japan	RB21S(Engine)	M15A-NA-VVT	Version Information	
AERIO	2001	Japan	RB21S(Engine)	M15A-NA-VVT	Actuation Test	
AERIO	2001	Japan	RA21S(Engine)	M15A-NA-VVT	Read/Clear Fault Code	
AERIO	2001	Japan	RA21S(Engine)	M15A-NA-VVT	Read Data Stream	
AERIO	2001	Japan	RA21S(Engine)	M15A-NA-VVT	Version Information	
AERIO	2001	Japan	RA21S(Engine)	M15A-NA-VVT	Actuation Test	
AERIO	2003	Japan	RC51S(Engine)	M18A-NA-VVT	Read/Clear Fault Code	
AERIO	2003	Japan	RC51S(Engine)	M18A-NA-VVT	Read Data Stream	
AERIO	2003	Japan	RC51S(Engine)	M18A-NA-VVT	Version Information	
AERIO	2003	Japan	RC51S(Engine)	M18A-NA-VVT	Actuation Test	
AERIO	2003	Japan	RD51S(Engine)	M18A-NA-VVT	Read/Clear Fault Code	
AERIO	2003	Japan	RD51S(Engine)	M18A-NA-VVT	Read Data Stream	
AERIO	2003	Japan	RD51S(Engine)	M18A-NA-VVT	Version Information	
AERIO	2003	Japan	RD51S(Engine)	M18A-NA-VVT	Actuation Test	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
AERIO	2001	Japan	A/T	RA21S	Read/Clear Fault Code	
AERIO	2001	Japan	A/T	RA21S	Read Data Stream	
AERIO	2001	Japan	A/T	RA21S	Version Information	
AERIO	2001	Japan	A/T	RB21S	Read/Clear Fault Code	
AERIO	2001	Japan	A/T	RB21S	Read Data Stream	
AERIO	2001	Japan	A/T	RB21S	Version Information	
AERIO	2003	Japan	A/T	RC51S	Read/Clear Fault Code	
AERIO	2003	Japan	A/T	RC51S	Read Data Stream	
AERIO	2003	Japan	A/T	RC51S	Version Information	
AERIO	2003	Japan	A/T	RD51S	Read/Clear Fault Code	
AERIO	2003	Japan	A/T	RD51S	Read Data Stream	
AERIO	2003	Japan	A/T	RD51S	Version Information	
AERIO	2001	Japan	ABS	RB21S	Read/Clear Fault Code	
AERIO	2001	Japan	ABS	RB21S	Read Data Stream	
AERIO	2001	Japan	ABS	RB21S	Version Information	
AERIO	2001	Japan	ABS	RB21S	Actuation Test	
AERIO	2001	Japan	ABS	RA21S	Read/Clear Fault Code	
AERIO	2001	Japan	ABS	RA21S	Read Data Stream	
AERIO	2001	Japan	ABS	RA21S	Version Information	
AERIO	2001	Japan	ABS	RA21S	Actuation Test	
AERIO	2003	Japan	ABS	RC51S	Read/Clear Fault Code	
AERIO	2003	Japan	ABS	RC51S	Read Data Stream	
AERIO	2003	Japan	ABS	RC51S	Version Information	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
AERIO	2003	Japan	ABS	RC51S	Actuation Test	
AERIO	2003	Japan	ABS	RD51S	Read/Clear Fault Code	
AERIO	2003	Japan	ABS	RD51S	Read Data Stream	
AERIO	2003	Japan	ABS	RD51S	Version Information	
AERIO	2003	Japan	ABS	RD51S	Actuation Test	
AERIO	2001	Japan	SRS	RB21S	Read/Clear Fault Code	
AERIO	2001	Japan	SRS	RB21S	Read Data Stream	
AERIO	2001	Japan	SRS	RB21S	Version Information	
AERIO	2001	Japan	SRS	RA21S	Read/Clear Fault Code	
AERIO	2001	Japan	SRS	RA21S	Read Data Stream	
AERIO	2001	Japan	SRS	RA21S	Version Information	
AERIO	2003	Japan	SRS	RC51S	Read/Clear Fault Code	
AERIO	2003	Japan	SRS	RC51S	Read Data Stream	
AERIO	2003	Japan	SRS	RC51S	Version Information	
AERIO	2003	Japan	SRS	RD51S	Read/Clear Fault Code	
AERIO	2003	Japan	SRS	RD51S	Read Data Stream	
AERIO	2003	Japan	SRS	RD51S	Version Information	
AERIO	2002	Japan	A/C	RB21S	Read/Clear Fault Code	
AERIO	2002	Japan	A/C	RB21S	Read Data Stream	
AERIO	2002	Japan	A/C	RB21S	Version Information	
AERIO	2002	Japan	A/C	RA21S	Read/Clear Fault Code	
AERIO	2002	Japan	A/C	RA21S	Read Data Stream	
AERIO	2002	Japan	A/C	RA21S	Version Information	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
AERIO	2003	Japan	A/C	RC51S	Read/Clear Fault Code	
AERIO	2003	Japan	A/C	RC51S	Read Data Stream	
AERIO	2003	Japan	A/C	RC51S	Version Information	
AERIO	2003	Japan	A/C	RD51S	Read/Clear Fault Code	
AERIO	2003	Japan	A/C	RD51S	Read Data Stream	
AERIO	2003	Japan	A/C	RD51S	Version Information	
EVERY LANDY	2001	Japan	DA32W(Engine)	G13B	Read/Clear Fault Code	
EVERY LANDY	2001	Japan	DA32W(Engine)	G13B	Read Data Stream	
EVERY LANDY	2001	Japan	DA32W(Engine)	G13B	Version Information	
EVERY LANDY	2001	Japan	DA32W(Engine)	G13B	Actuation Test	
EVERY LANDY	2001	Japan	A/T	DA32W	Read/Clear Fault Code	
EVERY LANDY	2001	Japan	A/T	DA32W	Read Data Stream	
EVERY LANDY	2001	Japan	A/T	DA32W	Version Information	
EVERY LANDY	2001	Japan	ABS	DA32W	Read/Clear Fault Code	
EVERY LANDY	2001	Japan	ABS	DA32W	Read Data Stream	
EVERY LANDY	2001	Japan	ABS	DA32W	Version Information	
EVERY LANDY	2001	Japan	ABS	DA32W	Actuation Test	
EVERY LANDY	2001	Japan	EPS	DA32W	Read/Clear Fault Code	
EVERY LANDY	2001	Japan	EPS	DA32W	Read Data Stream	
EVERY LANDY	2001	Japan	EPS	DA32W	Version Information	
EVERY LANDY	2001	Japan	SRS	DA32W	Read/Clear Fault Code	
EVERY LANDY	2001	Japan	SRS	DA32W	Read Data Stream	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
EVERY LANDY	2001	Japan	SRS	DA32W	Version Information	
CHEVROL ET CRUZE	2001	Japan	HR51S(Engine)	M13A-NA- VVT	Read/Clear Fault Code	
CHEVROL ET CRUZE	2001	Japan	HR51S(Engine)	M13A-NA- VVT	Read Data Stream	
CHEVROL ET CRUZE	2001	Japan	HR51S(Engine)	M13A-NA- VVT	Version Information	
CHEVROL ET CRUZE	2001	Japan	HR51S(Engine)	M13A-NA- VVT	Actuation Test	
CHEVROL ET CRUZE	2002	Japan	HR81S(Engine)	M15A-NA- VVT	Read/Clear Fault Code	
CHEVROL ET CRUZE	2002	Japan	HR81S(Engine)	M15A-NA- VVT	Read Data Stream	
CHEVROL ET CRUZE	2002	Japan	HR81S(Engine)	M15A-NA- VVT	Version Information	
CHEVROL ET CRUZE	2002	Japan	HR81S(Engine)	M15A-NA- VVT	Actuation Test	
CHEVROL ET CRUZE	2001	Japan	A/T	HR51S	Read/Clear Fault Code	
CHEVROL ET CRUZE	2001	Japan	A/T	HR51S	Read Data Stream	
CHEVROL ET CRUZE	2001	Japan	A/T	HR51S	Version Information	
CHEVROL ET CRUZE	2002	Japan	A/T	HR81S	Read/Clear Fault Code	
CHEVROL ET CRUZE	2002	Japan	A/T	HR81S	Read Data Stream	
CHEVROL ET CRUZE	2002	Japan	A/T	HR81S	Version Information	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
CHEVROL ET CRUZE	2001	Japan	ABS	HR51S	Read/Clear Fault Code	
CHEVROL ET CRUZE	2001	Japan	ABS	HR51S	Read Data Stream	
CHEVROL ET CRUZE	2001	Japan	ABS	HR51S	Version Information	
CHEVROL ET CRUZE	2001	Japan	ABS	HR51S	Actuation Test	
CHEVROL ET CRUZE	2002	Japan	ABS	HR81S	Read/Clear Fault Code	
CHEVROL ET CRUZE	2002	Japan	ABS	HR81S	Read Data Stream	
CHEVROL ET CRUZE	2002	Japan	ABS	HR81S	Version Information	
CHEVROL ET CRUZE	2002	Japan	ABS	HR81S	Read/Clear Fault Code	
CHEVROL ET CRUZE	2001	Japan	EPS	HR51S	Read/Clear Fault Code	
CHEVROL ET CRUZE	2001	Japan	EPS	HR51S	Read Data Stream	
CHEVROL ET CRUZE	2001	Japan	EPS	HR51S	Version Information	
CHEVROL ET CRUZE	2002	Japan	EPS	HR81S	Read/Clear Fault Code	
CHEVROL ET CRUZE	2002	Japan	EPS	HR81S	Read Data Stream	
CHEVROL ET CRUZE	2002	Japan	EPS	HR81S	Version Information	

model	year	area	system	subitem	function	subfunction
CHEVROL ET CRUZE	2001	Japan	SRS	HR51S	Read/Clear Fault Code	
CHEVROL ET CRUZE	2001	Japan	SRS	HR51S	Read Data Stream	
CHEVROL ET CRUZE	2001	Japan	SRS	HR51S	Version Information	
CHEVROL ET CRUZE	2002	Japan	SRS	HR81S	Read/Clear Fault Code	
CHEVROL ET CRUZE	2002	Japan	SRS	HR81S	Read Data Stream	
CHEVROL ET CRUZE	2002	Japan	SRS	HR81S	Version Information	
CHEVROL ET CRUZE	2001	Japan	EMCD	HR51S	Read/Clear Fault Code	
CHEVROL ET CRUZE	2001	Japan	EMCD	HR51S	Read Data Stream	
CHEVROL ET CRUZE	2001	Japan	EMCD	HR51S	Version Information	
WAGON R <sup>+</sup>	1999 - 2000	Japan	MA63S(Engine)	K10A-NA- VVT	Read/Clear Fault Code	
WAGON R <sup>+</sup>	1999 - 2000	Japan	MA63S(Engine)	K10A-NA- VVT	Read Data Stream	
WAGON R <sup>+</sup>	1999 - 2000	Japan	MA63S(Engine)	K10A-NA- VVT	Version Information	
WAGON R <sup>+</sup>	1999 - 2000	Japan	MA63S(Engine)	K10A- TURBO-VVT	Read/Clear Fault Code	
WAGON R <sup>+</sup>	1999 - 2000	Japan	MA63S(Engine)	K10A- TURBO-VVT	Read Data Stream	
WAGON R <sup>+</sup>	1999 - 2000	Japan	MA63S(Engine)	K10A- TURBO-VVT	Version Information	
WAGON R <sup>+</sup>	1999 - 2000	Japan	A/T	MA63S	Read/Clear Fault Code	
WAGON R <sup>+</sup>	1999 - 2000	Japan	A/T	MA63S	Read Data Stream	

model	year	area	system	subitem	function	subfunction
WAGON R <sup>+</sup>	1999 - 2000	Japan	A/T	MA63S	Version Information	
WAGON R <sup>+</sup>	1999 - 2000	Japan	ABS	MA63S	Read/Clear Fault Code	
WAGON R <sup>+</sup>	1999 - 2000	Japan	ABS	MA63S	Read Data Stream	
WAGON R <sup>+</sup>	1999 - 2000	Japan	ABS	MA63S	Version Information	
WAGON R <sup>+</sup>	1999 - 2000	Japan	EPS	MA63S	Read/Clear Fault Code	
WAGON R <sup>+</sup>	1999 - 2000	Japan	EPS	MA63S	Read Data Stream	
WAGON R <sup>+</sup>	1999 - 2000	Japan	EPS	MA63S	Version Information	
WAGON R <sup>+</sup>	1999 - 2000	Japan	SRS	MA63S	Read/Clear Fault Code	
WAGON R <sup>+</sup>	1999 - 2000	Japan	SRS	MA63S	Read Data Stream	
WAGON R <sup>+</sup>	1999 - 2000	Japan	SRS	MA63S	Version Information	
ESCUDO 2.0,2.5, Diesel	1996 - 2000	Japan	ABS	MA63S	Read/Clear Fault Code	
ESCUDO 2.0,2.5, Diesel	1996 - 2000	Japan	ABS	MA63S	Read Data Stream	
ESCUDO 2.0,2.5, Diesel	1996 - 2000	Japan	ABS	MA63S	Version Information	
ESCUDO 1.6	1996 - 2000	Japan	ABS	MA63S	Read/Clear Fault Code	
ESCUDO 1.6	1996 - 2000	Japan	ABS	MA63S	Read Data Stream	
ESCUDO 1.6	1996 - 2000	Japan	ABS	MA63S	Version Information	
EVERY EV	1999	Japan	DA52V repit(EV)	EV马达	Read/Clear Fault Code	
EVERY EV	1999	Japan	DA52V repit(EV)	EV马达	Read Data Stream	
EVERY EV	1999	Japan	DA52V repit(EV)	EV马达	Version Information	



<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
EVERY EV	1999	Japan	DA52V repit(EV)	EV A/C	Read/Clear Fault Code	
EVERY EV	1999	Japan	DA52V repit(EV)	EV A/C	Read Data Stream	
EVERY EV	1999	Japan	DA52V repit(EV)	EV A/C	Version Information	
IGNIS	--	Euro	Engine	--	Read/Clear Fault Code	
IGNIS	--	Euro	Engine	--	Read Data Stream	
IGNIS	--	Euro	Engine	--	Actuation Test	
IGNIS	--	Euro	AT(Automatic Transmission)	--	Read/Clear Fault Code	
IGNIS	--	Euro	AT(Automatic Transmission)	--	Read Data Stream	
IGNIS	--	Euro	ABS	--	Read/Clear Fault Code	
IGNIS	--	Euro	ABS	--	Read Data Stream	
IGNIS	--	Euro	ABS	--	Actuation Test	
IGNIS	--	Euro	SRS	--	Read/Clear Fault Code	
IGNIS	--	Euro	SRS	--	Read Data Stream	
IGNIS	--	Euro	EPS	--	Read/Clear Fault Code	
IGNIS	--	Euro	EPS	--	Read Data Stream	
WAGON R+	--	Euro	Engine	--	Read/Clear Fault Code	
WAGON R+	--	Euro	Engine	--	Read Data Stream	
WAGON R+	--	Euro	Engine	--	Actuation Test	
WAGON R+	--	Euro	AT(Automatic Transmission)	--	Read/Clear Fault Code	
WAGON R+	--	Euro	AT(Automatic Transmission)	--	Read Data Stream	
WAGON R+	--	Euro	ABS	--	Read/Clear Fault Code	
WAGON R+	--	Euro	ABS	--	Read Data Stream	
WAGON R+	--	Euro	ABS	--	Actuation Test	

model	year	area	system	subitem	function	subfunction
WAGON R+	--	Euro	EPS	--	Read/Clear Fault Code	
WAGON R+	--	Euro	EPS	--	Read Data Stream	
WAGON R+	--	Euro	SRS	--	Read/Clear Fault Code	
WAGON R+	--	Euro	SRS	--	Read Data Stream	
SWIFT	--	Euro	Engine	--	Read/Clear Fault Code	
SWIFT	--	Euro	Engine	--	Read Data Stream	
SWIFT	--	Euro	AT(Automatic Transmission)	--	Read/Clear Fault Code	
SWIFT	--	Euro	AT(Automatic Transmission)	--	Read Data Stream	
SWIFT	--	Euro	ABS	--	Read/Clear Fault Code	
SWIFT	--	Euro	ABS	--	Read Data Stream	
SWIFT	--	Euro	SRS	--	Read/Clear Fault Code	
SWIFT	--	Euro	SRS	--	Read Data Stream	
SWIFT	--	Euro	BCM(Body Control Module)	--	Read/Clear Fault Code	
SWIFT	--	Euro	BCM(Body Control Module)	--	Read Data Stream	
(D)APV/CARRY	--	Euro	Engine	--	Read/Clear Fault Code	
(D)APV/CARRY	--	Euro	Engine	--	Read Data Stream	
(D)APV/CARRY	--	Euro	AT(Automatic Transmission)	--	Read/Clear Fault Code	
(D)APV/CARRY	--	Euro	AT(Automatic Transmission)	--	Read Data Stream	
(D)APV/CARRY	--	Euro	SRS	--	Read/Clear Fault Code	
(D)APV/CARRY	--	Euro	SRS	--	Read Data Stream	
ALTO	--	Euro	Engine	--	Read/Clear Fault Code	
ALTO	--	Euro	Engine	--	Read Data Stream	

model	year	area	system	subitem	function	subfunction
ALTO	--	Euro	Engine	--	Actuation Test	
ALTO	--	Euro	SRS	--	Read/Clear Fault Code	
ALTO	--	Euro	SRS	--	Read Data Stream	
(J)JIMNY	--	Euro	Engine	--	Read/Clear Fault Code	
(J)JIMNY	--	Euro	Engine	--	Read Data Stream	
(J)JIMNY	--	Euro	Engine	--	Actuation Test	
(J)JIMNY	--	Euro	Engine	--	Special Function	ECM Setting
(J)JIMNY	--	Euro	AT(Automatic Transmission)	--	Read/Clear Fault Code	
(J)JIMNY	--	Euro	AT(Automatic Transmission)	--	Read Data Stream	
(J)JIMNY	--	Euro	ABS	--	Read/Clear Fault Code	
(J)JIMNY	--	Euro	ABS	--	Read Data Stream	
(J)JIMNY	--	Euro	ABS	--	Actuation Test	
MR WAGON	--	Euro	Engine	--	Actuation Test	
MR WAGON	--	Euro	ABS	--	Read/Clear Fault Code	
MR WAGON	--	Euro	ABS	--	Read Data Stream	
MR WAGON	--	Euro	ABS	--	Actuation Test	
MR WAGON	--	Euro	SRS	--	Read/Clear Fault Code	
MR WAGON	--	Euro	SRS	--	Read Data Stream	
EVERY+/L ANDY	--	Euro	Engine	--	Read/Clear Fault Code	
EVERY+/L ANDY	--	Euro	Engine	--	Read Data Stream	
EVERY+/L ANDY	--	Euro	AT(Automatic Transmission)	--	Read/Clear Fault Code	
EVERY+/L ANDY	--	Euro	AT(Automatic Transmission)	--	Read Data Stream	
EVERY+/L ANDY	--	Euro	ABS	--	Read/Clear Fault Code	
EVERY+/L ANDY	--	Euro	ABS	--	Read Data Stream	

model	year	area	system	subitem	function	subfunction
CARRY	--	Euro	Engine	--	Read/Clear Fault Code	
CARRY	--	Euro	Engine	--	Read Data Stream	
CARRY	--	Euro	AT(Automatic Transmission)	--	Read/Clear Fault Code	
CARRY	--	Euro	AT(Automatic Transmission)	--	Read Data Stream	
CARRY	--	Euro	ABS	--	Read/Clear Fault Code	
CARRY	--	Euro	ABS	--	Read Data Stream	
SX4	--	Euro	Engine	--	Read/Clear Fault Code	
SX4	--	Euro	Engine	--	Read Data Stream	
SX4	--	Euro	Engine	--	Actuation Test	
SX4	--	Euro	Engine	--	Special Function	1.EPS Setting
SX4	--	Euro	Engine	--	Special Function	2.Oil Reset
SX4	--	Euro	Engine	--	Special Function	3.Regeneration
SX4	--	Euro	AT(Automatic Transmission)	--	Read/Clear Fault Code	
SX4	--	Euro	AT(Automatic Transmission)	--	Read Data Stream	
SX4	--	Euro	ABS	--	Read/Clear Fault Code	
SX4	--	Euro	ABS	--	Read Data Stream	
SX4	--	Euro	ABS	--	Actuation Test	
SX4	--	Euro	SRS	--	Read/Clear Fault Code	
SX4	--	Euro	SRS	--	Read Data Stream	
SX4	--	Euro	ESP	--	Read/Clear Fault Code	
SX4	--	Euro	ESP	--	Read Data Stream	
SX4	--	Euro	ESP	--	Actuation Test	
SX4	--	Euro	ESP	--	Special Function	1.Sensor Calibration
SX4	--	Euro	ESP	--	Special Function	2.ESP Setting

model	year	area	system	subitem	function	subfunction
GRAND VITARA(JB Series)	--	Euro	Engine	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	Euro	Engine	--	Read Data Stream	
GRAND VITARA(JB Series)	--	Euro	Engine	--	Actuation Test	
GRAND VITARA(JB Series)	--	Euro	Engine	--	Special Function	1.Readiness Test
GRAND VITARA(JB Series)	--	Euro	Engine	--	Special Function	2.No Key Start
GRAND VITARA(JB Series)	--	Euro	AT(Automatic Transmission)	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	Euro	AT(Automatic Transmission)	--	Read Data Stream	
GRAND VITARA(JB Series)	--	Euro	AT(Automatic Transmission)	--	Actuation Test	
GRAND VITARA(JB Series)	--	Euro	SRS	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	Euro	SRS	--	Read Data Stream	
GRAND VITARA(JB Series)	--	Euro	BCM(Body Control Module)	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	Euro	BCM(Body Control Module)	--	Read Data Stream	
GRAND VITARA(JB Series)	--	Euro	Cooling & HVAC	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	Euro	ABS	--	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
GRAND VITARA(JB Series)	--	Euro	ABS	--	Read Data Stream	
GRAND VITARA(JB Series)	--	Euro	ABS	--	Actuation Test	
GRAND VITARA(JB Series)	--	Euro	4WD	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	Euro	ESP	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	Euro	ESP	--	Actuation Test	
GRAND VITARA(JB Series)	--	Euro	ESP	--	Special Function	1.Sensor Calibration
GRAND VITARA(JB Series)	--	Euro	ESP	--	Special Function	2.ESP Function Setting
SAMURAI	--	Euro	Engine	--	Read/Clear Fault Code	
SAMURAI	--	Euro	Engine	--	Read Data Stream	
SAMURAI	--	Euro	ABS	--	Read/Clear Fault Code	
SAMURAI	--	Euro	ABS	--	Read Data Stream	
LIANA(AE RIO)	--	Euro	Engine	--	Read/Clear Fault Code	
LIANA(AE RIO)	--	Euro	Engine	--	Read Data Stream	
LIANA(AE RIO)	--	Euro	AT(Automatic Transmission)	--	Read/Clear Fault Code	
LIANA(AE RIO)	--	Euro	AT(Automatic Transmission)	--	Read Data Stream	
LIANA(AE RIO)	--	Euro	ABS	--	Read/Clear Fault Code	
LIANA(AE RIO)	--	Euro	ABS	--	Read Data Stream	
LIANA(AE RIO)	--	Euro	SRS	--	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
LIANA(AE RIO)	--	Euro	SRS	--	Read Data Stream	
LIANA(AE RIO)	--	Euro	Cooling & HVAC	--	Read/Clear Fault Code	
LIANA(AE RIO)	--	Euro	Cooling & HVAC	--	Read Data Stream	
GRAND VITARA/X L-7	--	Euro	Engine	--	Read/Clear Fault Code	
GRAND VITARA/X L-7	--	Euro	Engine	--	Read Data Stream	
GRAND VITARA/X L-7	--	Euro	Engine	--	Actuation Test	
GRAND VITARA/X L-7	--	Euro	Engine	--	Special Function	Readiness Test
GRAND VITARA/X L-7	--	Euro	AT(Automatic Transmission)	--	Read/Clear Fault Code	
GRAND VITARA/X L-7	--	Euro	AT(Automatic Transmission)	--	Read Data Stream	
GRAND VITARA/X L-7	--	Euro	SRS	--	Read/Clear Fault Code	
GRAND VITARA/X L-7	--	Euro	SRS	--	Read Data Stream	
GRAND VITARA/X L-7	--	Euro	BCM(Body Control Module)	--	Read/Clear Fault Code	
GRAND VITARA/X L-7	--	Euro	BCM(Body Control Module)	--	Read Data Stream	
GRAND VITARA/X L-7	--	Euro	BCM(Body Control Module)	--	Actuation Test	
GRAND VITARA/X L-7	--	Euro	Cooling & HVAC	--	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
GRAND VITARA/X L-7	--	Euro	Cooling & HVAC	--	Read Data Stream	
GRAND VITARA/X L-7	--	Euro	ABS	--	Read/Clear Fault Code	
GRAND VITARA/X L-7	--	Euro	ABS	--	Read Data Stream	
GRAND VITARA/X L-7	--	Euro	ABS	--	Actuation Test	
GRAND VITARA/X L-7	--	Euro	Immobilizer	--	Read/Clear Fault Code	
Equator - 1	2009 - 2013	North USA	Engine	--	Read/Clear Fault Code	
Equator - 1	2009 - 2013	North USA	Engine	--	Read Data Stream	
Equator - 1	2009 - 2013	North USA	Engine	--	Actuation Test	
Equator - 1	2009 - 2013	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Equator - 1	2009 - 2013	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Equator - 1	2009 - 2013	North USA	ABS	--	Read/Clear Fault Code	
Equator - 1	2009 - 2013	North USA	ABS	--	Read Data Stream	
Equator - 1	2009 - 2013	North USA	ABS	--	Actuation Test	
Equator - 1	2009 - 2013	North USA	SRS	--	Read/Clear Fault Code	
Equator - 1	2009 - 2013	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
Equator - 1	2009 - 2013	North USA	BCM(Body Control Module)	--	Read Data Stream	
Equator - 1	2009 - 2013	North USA	BCM(Body Control Module)	--	Actuation Test	
Equator - 1	2009 - 2013	North USA	TPMS	--	Read/Clear Fault Code	
Equator - 1	2009 - 2013	North USA	TPMS	--	Read Data Stream	



model	year	area	system	subitem	function	subfunction
Equator - 1	2009 - 2013	North USA	Wheel Alignment	--	Actuation Test	
Equator - 2	2009 - 2013	North USA	Engine	--	Read/Clear Fault Code	
Equator - 2	2009 - 2013	North USA	Engine	--	Read Data Stream	
Equator - 2	2009 - 2013	North USA	Engine	--	Actuation Test	
Equator - 2	2009 - 2013	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Equator - 2	2009 - 2013	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Equator - 2	2009 - 2013	North USA	ABS	--	Read/Clear Fault Code	
Equator - 2	2009 - 2013	North USA	ABS	--	Read Data Stream	
Equator - 2	2009 - 2013	North USA	ABS	--	Actuation Test	
Equator - 2	2009 - 2013	North USA	SRS	--	Read/Clear Fault Code	
Equator - 2	2009 - 2013	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
Equator - 2	2009 - 2013	North USA	BCM(Body Control Module)	--	Read Data Stream	
Equator - 2	2009 - 2013	North USA	BCM(Body Control Module)	--	Actuation Test	
Equator - 2	2009 - 2013	North USA	TPMS	--	Read/Clear Fault Code	
Equator - 2	2009 - 2013	North USA	TPMS	--	Read Data Stream	
Equator - 2	2012 - 2013	North USA	Wheel Alignment	--	Actuation Test	
Grand Vitara(RWD)-T	2000 - 2013	North USA	Engine	--	Read/Clear Fault Code	
Grand Vitara(RWD)-T	2000 - 2013	North USA	Engine	--	Read Data Stream	
Grand Vitara(RWD)-T	2000 - 2013	North USA	Engine	--	Version Information	
Grand Vitara(RWD)-T	2000 - 2013	North USA	Engine	--	Actuation Test	

model	year	area	system	subitem	function	subfunction
Grand Vitara(RWD)-T	2000 - 2013	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Grand Vitara(RWD)-T	2000 - 2013	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Grand Vitara(RWD)-T	2000 - 2013	North USA	AT(Automatic Transmission)	--	Version Information	
Grand Vitara(RWD)-T	2001 - 2013	North USA	ABS	--	Read/Clear Fault Code	
Grand Vitara(RWD)-T	2001 - 2013	North USA	ABS	--	Read Data Stream	
Grand Vitara(RWD)-T	2001 - 2013	North USA	ABS	--	Version Information	
Grand Vitara(RWD)-T	2001 - 2013	North USA	ABS	--	Actuation Test	
Grand Vitara(RWD)-T	2003 - 2013	North USA	SRS	--	Read/Clear Fault Code	
Grand Vitara(RWD)-T	2003 - 2013	North USA	SRS	--	Read Data Stream	
Grand Vitara(RWD)-T	2003 - 2013	North USA	SRS	--	Version Information	
Grand Vitara(RWD)-T	2003-2008	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
Grand Vitara(RWD)-T	2003-2008	North USA	BCM(Body Control Module)	--	Read Data Stream	
Grand Vitara(RWD)-T	2003-2008	North USA	BCM(Body Control Module)	--	Actuation Test	
Grand Vitara(RWD)-T	2005 - 2013	North USA	TPMS	--	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
Grand Vitara(RWD)-T	2005 - 2013	North USA	TPMS	--	Read Data Stream	
Grand Vitara(RWD)-T	2003 - 2013	North USA	HVAC(Air Condition)	--	Read/Clear Fault Code	
Grand Vitara(RWD)-T	2003 - 2013	North USA	HVAC(Air Condition)	--	Read Data Stream	
Grand Vitara(RWD)-T	2003 - 2013	North USA	HVAC(Air Condition)	--	Version Information	
Grand Vitara(4WD)-T	2000 - 2013	North USA	Engine	--	Read/Clear Fault Code	
Grand Vitara(4WD)-T	2000 - 2013	North USA	Engine	--	Read Data Stream	
Grand Vitara(4WD)-T	2000 - 2013	North USA	Engine	--	Version Information	
Grand Vitara(4WD)-T	2000 - 2013	North USA	Engine	--	Actuation Test	
Grand Vitara(4WD)-T	2000 - 2013	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Grand Vitara(4WD)-T	2000 - 2013	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Grand Vitara(4WD)-T	2000 - 2013	North USA	AT(Automatic Transmission)	--	Version Information	
Grand Vitara(4WD)-T	2001 - 2013	North USA	ABS	--	Read/Clear Fault Code	
Grand Vitara(4WD)-T	2001 - 2013	North USA	ABS	--	Read Data Stream	
Grand Vitara(4WD)-T	2001 - 2013	North USA	ABS	--	Version Information	

model	year	area	system	subitem	function	subfunction
Grand Vitara(4W D)-T	2001 - 2013	North USA	ABS	--	Actuation Test	
Grand Vitara(4W D)-T	2003 - 2013	North USA	SRS	--	Read/Clear Fault Code	
Grand Vitara(4W D)-T	2003 - 2013	North USA	SRS	--	Read Data Stream	
Grand Vitara(4W D)-T	2003 - 2013	North USA	SRS	--	Version Information	
Grand Vitara(4W D)-T	2003-2008	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
Grand Vitara(4W D)-T	2003-2008	North USA	BCM(Body Control Module)	--	Read Data Stream	
Grand Vitara(4W D)-T	2003-2008	North USA	BCM(Body Control Module)	--	Actuation Test	
Grand Vitara(4W D)-T	2003 - 2013	North USA	HVAC(Air Condition)	--	Read/Clear Fault Code	
Grand Vitara(4W D)-T	2003 - 2013	North USA	HVAC(Air Condition)	--	Read Data Stream	
Grand Vitara(4W D)-T	2003 - 2013	North USA	HVAC(Air Condition)	--	Version Information	
Grand Vitara(4W D)-T	2005 - 2013	North USA	TPMS	--	Read/Clear Fault Code	
Grand Vitara(4W D)-T	2005 - 2013	North USA	TPMS	--	Read Data Stream	
Kizashi-R	2010 - 2013	North USA	Engine	--	Read/Clear Fault Code	
Kizashi-R	2010 - 2013	North USA	Engine	--	Read Data Stream	
Kizashi-R	2010 - 2013	North USA	Engine	--	Version Information	
Kizashi-R	2010 - 2013	North USA	Engine	--	Actuation Test	

<b>model</b>	<b>year</b>	<b>area</b>	<b>system</b>	<b>subitem</b>	<b>function</b>	<b>subfunction</b>
Kizashi-R	2010 - 2013	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Kizashi-R	2010 - 2013	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Kizashi-R	2010 - 2013	North USA	AT(Automatic Transmission)	--	Version Information	
Kizashi-R	2010 - 2013	North USA	ABS	--	Read/Clear Fault Code	
Kizashi-R	2010 - 2013	North USA	ABS	--	Read Data Stream	
Kizashi-R	2010 - 2013	North USA	ABS	--	Actuation Test	
Kizashi-R	2010 - 2013	North USA	SRS	--	Read/Clear Fault Code	
Kizashi-R	2010 - 2013	North USA	SRS	--	Read Data Stream	
Kizashi-R	2010 - 2013	North USA	SRS	--	Version Information	
Kizashi-R	2010 - 2013	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
Kizashi-R	2010 - 2013	North USA	BCM(Body Control Module)	--	Read Data Stream	
Kizashi-R	2010 - 2013	North USA	BCM(Body Control Module)	--	Actuation Test	
Kizashi-R	2010 - 2013	North USA	EPS	--	Read/Clear Fault Code	
Kizashi-R	2010 - 2013	North USA	EPS	--	Read Data Stream	
Kizashi-R	2010 - 2013	North USA	4WD	--	Read/Clear Fault Code	
Kizashi-R	2010 - 2013	North USA	4WD	--	Read Data Stream	
Kizashi-R	2010 - 2013	North USA	HVAC	--	Read/Clear Fault Code	
Kizashi-R	2010 - 2013	North USA	HVAC	--	Read Data Stream	
Kizashi-R	2010 - 2013	North USA	HVAC	--	Version Information	
Kizashi-R	2010 - 2013	North USA	TPMS	--	Read/Clear Fault Code	
Kizashi-R	2010 - 2013	North USA	TPMS	--	Read Data Stream	
Swift+ - T	2004 - 2013	North USA	Engine	--	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
Swift+ - T	2004 - 2013	North USA	Engine	--	Read Data Stream	
Swift+ - T	2004 - 2013	North USA	Engine	--	Actuation Test	
Swift+ - T	2004 - 2013	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Swift+ - T	2004 - 2013	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Swift+ - T	2004 - 2013	North USA	ABS	--	Read/Clear Fault Code	
Swift+ - T	2004 - 2013	North USA	ABS	--	Read Data Stream	
Swift+ - T	2004 - 2013	North USA	ABS	--	Actuation Test	
SX4-Y	2007 - 2013	North USA	Engine	--	Read/Clear Fault Code	
SX4-Y	2007 - 2013	North USA	Engine	--	Read Data Stream	
SX4-Y	2007 - 2013	North USA	Engine	--	Version Information	
SX4-Y	2007 - 2013	North USA	Engine	--	Actuation Test	
SX4-Y	2007 - 2013	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
SX4-Y	2007 - 2013	North USA	AT(Automatic Transmission)	--	Read Data Stream	
SX4-Y	2007 - 2013	North USA	AT(Automatic Transmission)	--	Version Information	
SX4-Y	2007 - 2013	North USA	ABS	--	Read/Clear Fault Code	
SX4-Y	2007 - 2013	North USA	ABS	--	Read Data Stream	
SX4-Y	2007 - 2013	North USA	ABS	--	Actuation Test	
SX4-Y	2007 - 2013	North USA	SRS	--	Read/Clear Fault Code	
SX4-Y	2007 - 2013	North USA	SRS	--	Read Data Stream	
SX4-Y	2007 - 2013	North USA	SRS	--	Version Information	
SX4-Y	2007 - 2013	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
SX4-Y	2007 - 2013	North USA	BCM(Body Control Module)	--	Read Data Stream	

model	year	area	system	subitem	function	subfunction
SX4-Y	2007 - 2013	North USA	BCM(Body Control Module)	--	Actuation Test	
SX4-Y	2007 - 2013	North USA	4WD	--	Read/Clear Fault Code	
SX4-Y	2007 - 2013	North USA	4WD	--	Read Data Stream	
SX4-Y	2007 - 2013	North USA	TPMS	--	Read/Clear Fault Code	
SX4-Y	2007 - 2013	North USA	TPMS	--	Read Data Stream	
XL-7(FWD)-D	2007 - 2009	North USA	Engine	--	Read/Clear Fault Code	
XL-7(FWD)-D	2007 - 2009	North USA	Engine	--	Read Data Stream	
XL-7(FWD)-D	2007 - 2009	North USA	Engine	--	Actuation Test	
XL-7(FWD)-D	2007 - 2009	North USA	ABS	--	Read/Clear Fault Code	
XL-7(FWD)-D	2007 - 2009	North USA	ABS	--	Read Data Stream	
XL-7(FWD)-D	2007 - 2009	North USA	ABS	--	Actuation Test	
XL-7(FWD)-D	2007 - 2009	North USA	SRS	--	Read/Clear Fault Code	
XL-7(FWD)-D	2007 - 2009	North USA	SRS	--	Read Data Stream	
XL-7(FWD)-D	2007 - 2009	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
XL-7(FWD)-D	2007 - 2009	North USA	BCM(Body Control Module)	--	Read Data Stream	
XL-7(4WD)-D	2009	North USA	Engine	--	Read/Clear Fault Code	
XL-7(4WD)-D	2009	North USA	Engine	--	Read Data Stream	
XL-7(4WD)-D	2009	North USA	Engine	--	Actuation Test	
XL-7(4WD)-D	2009	North USA	ABS	--	Read/Clear Fault Code	
XL-7(4WD)-D	2009	North USA	ABS	--	Read Data Stream	
XL-7(4WD)-D	2009	North USA	ABS	--	Actuation Test	
XL-7(4WD)-D	2009	North USA	SRS	--	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
XL-7(4WD)-D	2009	North USA	SRS	--	Read Data Stream	
XL-7(4WD)-D	2009	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
XL-7(4WD)-D	2009	North USA	BCM(Body Control Module)	--	Read Data Stream	
XL-7(4WD)-D	2009	North USA	TPMS	--	Read/Clear Fault Code	
XL-7(4WD)-D	2009	North USA	TPMS	--	Read Data Stream	
XL-7(4WD)-D	2009	North USA	TPMS	--	Actuation Test	
XL-7(AWD)-D	2007 - 2008	North USA	Engine	--	Read/Clear Fault Code	
XL-7(AWD)-D	2007 - 2008	North USA	Engine	--	Read Data Stream	
XL-7(AWD)-D	2007 - 2008	North USA	Engine	--	Actuation Test	
XL-7(AWD)-D	2007 - 2008	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
XL-7(AWD)-D	2007 - 2008	North USA	AT(Automatic Transmission)	--	Read Data Stream	
XL-7(AWD)-D	2007 - 2008	North USA	ABS	--	Read/Clear Fault Code	
XL-7(AWD)-D	2007 - 2008	North USA	ABS	--	Read Data Stream	
XL-7(AWD)-D	2007 - 2008	North USA	ABS	--	Actuation Test	
XL-7(AWD)-D	2007 - 2008	North USA	SRS	--	Read/Clear Fault Code	
XL-7(AWD)-D	2007 - 2008	North USA	SRS	--	Read Data Stream	
XL-7(AWD)-D	2007 - 2008	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
XL-7(AWD)-D	2007 - 2008	North USA	BCM(Body Control Module)	--	Read Data Stream	
XL-7(AWD)-D	2007 - 2008	North USA	HVAC(Air Condition)	--	Read/Clear Fault Code	
XL-7(AWD)-D	2007 - 2008	North USA	HVAC(Air Condition)	--	Read Data Stream	
XL-7(AWD)-D	2007 - 2008	North USA	HVAC(Air Condition)	--	Actuation Test	
XL-7(AWD)-D	2007 - 2008	North USA	PPS	--	Read/Clear Fault Code	



model	year	area	system	subitem	function	subfunction
XL-7(AWD)-D	2007 - 2008	North USA	PPS	--	Read Data Stream	
XL-7(AWD)-D	2007 - 2008	North USA	TPMS	--	Read/Clear Fault Code	
XL-7(AWD)-D	2007 - 2008	North USA	TPMS	--	Read Data Stream	
XL-7(AWD)-D	2007 - 2008	North USA	TPMS	--	Actuation Test	
Forenza-J	2004 - 2008	North USA	Engine	--	Read/Clear Fault Code	
Forenza-J	2004 - 2008	North USA	Engine	--	Read Data Stream	
Forenza-J	2004 - 2008	North USA	Engine	--	Actuation Test	
Forenza-J	2004 - 2008	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Forenza-J	2004 - 2008	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Forenza-J	2004 - 2008	North USA	AT(Automatic Transmission)	--	Actuation Test	
Forenza-J	2004 - 2008	North USA	ABS	--	Read/Clear Fault Code	
Forenza-J	2004 - 2008	North USA	ABS	--	Read Data Stream	
Forenza-J	2007 - 2008	North USA	TPMS	--	Read/Clear Fault Code	
Forenza-J	2007 - 2008	North USA	TPMS	--	Read Data Stream	
Reno-J	2005 - 2008	North USA	Engine	--	Read/Clear Fault Code	
Reno-J	2005 - 2008	North USA	Engine	--	Read Data Stream	
Reno-J	2005 - 2008	North USA	Engine	--	Actuation Test	
Reno-J	2005 - 2008	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Reno-J	2005 - 2008	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Reno-J	2005 - 2008	North USA	AT(Automatic Transmission)	--	Actuation Test	
Reno-J	2005 - 2008	North USA	ABS	--	Read/Clear Fault Code	
Reno-J	2005 - 2008	North USA	ABS	--	Read Data Stream	

model	year	area	system	subitem	function	subfunction
Reno-J	2007 - 2008	North USA	TPMS	--	Read/Clear Fault Code	
Reno-J	2007 - 2008	North USA	TPMS	--	Read Data Stream	
XL-7(RWD)-T	2001 - 2006	North USA	Engine	--	Read/Clear Fault Code	
XL-7(RWD)-T	2001 - 2006	North USA	Engine	--	Read Data Stream	
XL-7(RWD)-T	2001 - 2006	North USA	Engine	--	Actuation Test	
XL-7(RWD)-T	2001 - 2006	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
XL-7(RWD)-T	2001 - 2006	North USA	AT(Automatic Transmission)	--	Read Data Stream	
XL-7(RWD)-T	2001 - 2006	North USA	ABS	--	Read/Clear Fault Code	
XL-7(RWD)-T	2001 - 2006	North USA	ABS	--	Read Data Stream	
XL-7(RWD)-T	2001 - 2006	North USA	ABS	--	Actuation Test	
XL-7(RWD)-T	2001 - 2006	North USA	SRS	--	Read/Clear Fault Code	
XL-7(RWD)-T	2001 - 2006	North USA	SRS	--	Read Data Stream	
XL-7(RWD)-T	2004 - 2006	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
XL-7(RWD)-T	2004 - 2006	North USA	BCM(Body Control Module)	--	Read Data Stream	
XL-7(RWD)-T	2004 - 2006	North USA	BCM(Body Control Module)	--	Actuation Test	
XL-7(RWD)-T	2003 - 2006	North USA	HVAC(Air Condition)	--	Read/Clear Fault Code	
XL-7(RWD)-T	2003 - 2006	North USA	HVAC(Air Condition)	--	Read Data Stream	
XL-7(RWD)-T	2004 - 2006	North USA	OCS	--	Read/Clear Fault Code	
XL-7(RWD)-T	2004 - 2006	North USA	OCS	--	Read Data Stream	
XL-7(RWD)-T	2005 - 2006	North USA	TPMS	--	Read/Clear Fault Code	
XL-7(RWD)-T	2005 - 2006	North USA	TPMS	--	Read Data Stream	
XL-7(RWD)-T	2005 - 2006	North USA	TPMS	--	Actuation Test	

model	year	area	system	subitem	function	subfunction
XL-7(4WD)-T	2001 - 2006	North USA	Engine	--	Read/Clear Fault Code	
XL-7(4WD)-T	2001 - 2006	North USA	Engine	--	Read Data Stream	
XL-7(4WD)-T	2001 - 2006	North USA	Engine	--	Actuation Test	
XL-7(4WD)-T	2001 - 2006	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
XL-7(4WD)-T	2001 - 2006	North USA	AT(Automatic Transmission)	--	Read Data Stream	
XL-7(4WD)-T	2001 - 2006	North USA	ABS	--	Read/Clear Fault Code	
XL-7(4WD)-T	2001 - 2006	North USA	ABS	--	Read Data Stream	
XL-7(4WD)-T	2001 - 2006	North USA	ABS	--	Actuation Test	
XL-7(4WD)-T	2001 - 2006	North USA	SRS	--	Read/Clear Fault Code	
XL-7(4WD)-T	2001 - 2006	North USA	SRS	--	Read Data Stream	
XL-7(4WD)-T	2004 - 2006	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
XL-7(4WD)-T	2004 - 2006	North USA	BCM(Body Control Module)	--	Read Data Stream	
XL-7(4WD)-T	2004 - 2006	North USA	BCM(Body Control Module)	--	Actuation Test	
XL-7(4WD)-T	2003 - 2006	North USA	HVAC(Air Condition)	--	Read/Clear Fault Code	
XL-7(4WD)-T	2003 - 2006	North USA	HVAC(Air Condition)	--	Read Data Stream	
XL-7(4WD)-T	2004 - 2006	North USA	OCS	--	Read/Clear Fault Code	
XL-7(4WD)-T	2004 - 2006	North USA	OCS	--	Read Data Stream	
XL-7(4WD)-T	2005 - 2006	North USA	TPMS	--	Read/Clear Fault Code	
XL-7(4WD)-T	2005 - 2006	North USA	TPMS	--	Read Data Stream	
XL-7(4WD)-T	2005 - 2006	North USA	TPMS	--	Actuation Test	
Aerio-R	2002 - 2007	North USA	Engine	--	Read/Clear Fault Code	
Aerio-R	2002 - 2007	North USA	Engine	--	Read Data Stream	

model	year	area	system	subitem	function	subfunction
Aerio-R	2002 - 2007	North USA	Engine	--	Actuation Test	
Aerio-R	2002 - 2007	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Aerio-R	2002 - 2007	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Aerio-R	2002 - 2007	North USA	ABS	--	Read/Clear Fault Code	
Aerio-R	2002 - 2007	North USA	ABS	--	Read Data Stream	
Aerio-R	2002 - 2007	North USA	ABS	--	Actuation Test	
Aerio-R	2002 - 2007	North USA	SRS	--	Read/Clear Fault Code	
Aerio-R	2002 - 2007	North USA	SRS	--	Read Data Stream	
Aerio-R	2003 - 2007	North USA	HVAC(Air Condition)	--	Read/Clear Fault Code	
Aerio-R	2003 - 2007	North USA	HVAC(Air Condition)	--	Read Data Stream	
Aerio-R	2005 - 2007	North USA	OCS	--	Read/Clear Fault Code	
Aerio-R	2005 - 2007	North USA	OCS	--	Read Data Stream	
Verona-V	2004 - 2006	North USA	Engine	--	Read/Clear Fault Code	
Verona-V	2004 - 2006	North USA	Engine	--	Read Data Stream	
Verona-V	2004 - 2006	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Verona-V	2004 - 2006	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Verona-V	2004 - 2006	North USA	AT(Automatic Transmission)	--	Actuation Test	
Verona-V	2004 - 2006	North USA	ABS	--	Read/Clear Fault Code	
Verona-V	2004 - 2006	North USA	ABS	--	Read Data Stream	
Verona-V	2004 - 2006	North USA	ABS	--	Actuation Test	
Verona-V	2004 - 2006	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
Verona-V	2004 - 2006	North USA	BCM(Body Control Module)	--	Read Data Stream	

model	year	area	system	subitem	function	subfunction
Verona-V	2005 - 2006	North USA	TPMS	--	Read/Clear Fault Code	
Verona-V	2005 - 2006	North USA	TPMS	--	Read Data Stream	
Vitara(RWD)-T	2000 - 2004	North USA	Engine	--	Read/Clear Fault Code	
Vitara(RWD)-T	2000 - 2004	North USA	Engine	--	Read Data Stream	
Vitara(RWD)-T	2000 - 2004	North USA	Engine	--	Actuation Test	
Vitara(RWD)-T	2000 - 2004	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Vitara(RWD)-T	2000 - 2004	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Vitara(RWD)-T	2000 - 2004	North USA	AT(Automatic Transmission)	--	Actuation Test	
Vitara(4WD)-T	2000 - 2004	North USA	Engine	--	Read/Clear Fault Code	
Vitara(4WD)-T	2000 - 2004	North USA	Engine	--	Read Data Stream	
Vitara(4WD)-T	2000 - 2004	North USA	Engine	--	Actuation Test	
Vitara(4WD)-T	2000 - 2004	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
Vitara(4WD)-T	2000 - 2004	North USA	AT(Automatic Transmission)	--	Read Data Stream	
Vitara(4WD)-T	2000 - 2004	North USA	AT(Automatic Transmission)	--	Actuation Test	
Esteem-G	2000 - 2002	North USA	Engine	--	Read/Clear Fault Code	
Esteem-G	2001 - 2002	North USA	ABS	--	Read/Clear Fault Code	
Esteem-G	2001 - 2002	North USA	ABS	--	Read Data Stream	
Esteem-G	2001 - 2002	North USA	ABS	--	Actuation Test	
Swift - A	2000 - 2001	North USA	Engine	--	Read/Clear Fault Code	
VERONA	2004 - 2006	North USA	Engine	--	Read/Clear Fault Code	
VERONA	2004 - 2006	North USA	Engine	--	Read Data Stream	
VERONA	--	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
VERONA	--	North USA	AT(Automatic Transmission)	--	Read Data Stream	
VERONA	2004 - 2006	North USA	ABS	--	Read/Clear Fault Code	
VERONA	2004 - 2006	North USA	ABS	--	Read Data Stream	
VERONA	--	North USA	SRS	--	Read/Clear Fault Code	
VERONA	--	North USA	SRS	--	Read Data Stream	
VERONA	--	North USA	ISU	--	Read/Clear Fault Code	
VERONA	--	North USA	ISU	--	Read Data Stream	
VERONA	--	North USA	SSPS	--	Read/Clear Fault Code	
VERONA	--	North USA	TPMS	--	Read/Clear Fault Code	
VERONA	--	North USA	TPMS	--	Read Data Stream	
SWIFT	1996 - 2001	North USA	Engine	--	Read/Clear Fault Code	
ESTEEM	1996 - 2002	North USA	Engine	--	Read Data Stream	
ESTEEM	--	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
ESTEEM	--	North USA	SRS	--	Read/Clear Fault Code	
ESTEEM	1996 - 2002	North USA	ABS	--	Read/Clear Fault Code	
FORENZA /RENO	2004 - 2007	North USA	Engine	--	Read/Clear Fault Code	
FORENZA /RENO	2004 - 2007	North USA	Engine	--	Actuation Test	
FORENZA /RENO	2004 - 2007	North USA	Engine	--	Special Function	1.TEC Learn of CKP sensor(2004-2005)
FORENZA /RENO	2004 - 2007	North USA	Engine	--	Special Function	2.TEC Learn of CKP sensor(2006-2007)
FORENZA /RENO	2004 - 2007	North USA	Engine	--	Special Function	3 MEC Clear(2007)

model	year	area	system	subitem	function	subfunction
FORENZA /RENO	--	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
FORENZA /RENO	--	North USA	AT(Automatic Transmission)	--	Actuation Test	
FORENZA /RENO	2004 - 2007	North USA	ABS	--	Read/Clear Fault Code	
FORENZA /RENO	--	North USA	SRS	--	Read/Clear Fault Code	
FORENZA /RENO	--	North USA	TPMS	--	Read/Clear Fault Code	
FORENZA /RENO	--	North USA	TPMS	--	Read Data Stream	
FORENZA /RENO	--	North USA	TPMS	--	Special Function	TPMS ID registration with LF tool
FORENZA /RENO	--	North USA	SSPS	--	Read/Clear Fault Code	
X-90	1996 - 1998	North USA	Engine	--	Read/Clear Fault Code	
AERIO	2002 - 2007	North USA	Engine	--	Read/Clear Fault Code	
AERIO	2002 - 2007	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
AERIO	2002 - 2007	North USA	SRS	--	Read/Clear Fault Code	
AERIO	2002 - 2007	North USA	SRS	--	Read Data Stream	
AERIO	2002 - 2007	North USA	SRS	--	Actuation Test	
AERIO	2002 - 2007	North USA	SRS	--	Special Function	System Rezero Setting
AERIO	2003-2007	North USA	Cooling & HVAC	--	Read/Clear Fault Code	
AERIO	2002 - 2007	North USA	ABS	--	Read/Clear Fault Code	
SWIFT+	2004 - 2007	North USA	Engine	--	Read/Clear Fault Code	
SWIFT+	2004 - 2007	North USA	Engine	--	Actuation Test	
SWIFT+	2004 - 2007	North USA	Engine	--	Special Function	1.TEC Learn of CKP sensor(2004-2005)

model	year	area	system	subitem	function	subfunction
SWIFT+	2004 - 2007	North USA	Engine	--	Special Function	2.TEC Learn of CKP sensor(2006-2007)
SWIFT+	2004 - 2007	North USA	Engine	--	Special Function	3 MEC Clear(2007)
SWIFT+	2004 - 2007	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
SWIFT+	2004 - 2007	North USA	AT(Automatic Transmission)	--	Actuation Test	
SWIFT+	2004 - 2007	North USA	AT(Automatic Transmission)	--	Special Function	AT learned initialize
SWIFT+	2004 - 2007	North USA	ABS	--	Read/Clear Fault Code	
SWIFT+	2004 - 2007	North USA	ABS	--	Actuation Test	
SWIFT+	2004 - 2007	North USA	SRS	--	Read/Clear Fault Code	
SX4	--	North USA	Engine	--	Read/Clear Fault Code	
SX4	--	North USA	Engine	--	Read Data Stream	
SX4	--	North USA	SRS	--	Read/Clear Fault Code	
SX4	--	North USA	SRS	--	Read Data Stream	
SX4	--	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
SX4	--	North USA	BCM(Body Control Module)	--	Read Data Stream	
SX4	--	North USA	BCM(Body Control Module)	--	Actuation Test	
SX4	--	North USA	Cooling & HVAC	--	Read/Clear Fault Code	
SX4	--	North USA	Cooling & HVAC	--	Read Data Stream	
SX4	--	North USA	ABS	--	Read/Clear Fault Code	
SX4	--	North USA	4WD	--	Read/Clear Fault Code	
SX4	--	North USA	4WD	--	Read Data Stream	
SX4	--	North USA	ESP	--	Read/Clear Fault Code	



model	year	area	system	subitem	function	subfunction
SX4	--	North USA	ESP	--	Read Data Stream	
GRAND VITARA(JB Series)	2006 - 2007	North USA	Engine	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	2006 - 2007	North USA	Engine	--	Read Data Stream	
GRAND VITARA(JB Series)	2006 - 2007	North USA	Engine	--	Actuation Test	
GRAND VITARA(JB Series)	2006 - 2007	North USA	Engine	--	Special Function	1.Readiness Test
GRAND VITARA(JB Series)	2006 - 2007	North USA	Engine	--	Special Function	2.Keyless Start
GRAND VITARA(JB Series)	--	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	North USA	AT(Automatic Transmission)	--	Actuation Test	
GRAND VITARA(JB Series)	--	North USA	AT(Automatic Transmission)	--	Special Function	AT learned initialize
GRAND VITARA(JB Series)	--	North USA	SRS	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	North USA	BCM(Body Control Module)	--	Actuation Test	
GRAND VITARA(JB Series)	--	North USA	Cooling & HVAC	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	North USA	ABS	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	North USA	ABS	--	Actuation Test	

model	year	area	system	subitem	function	subfunction
GRAND VITARA(JB Series)	--	North USA	4WD	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	North USA	ESP	--	Read/Clear Fault Code	
GRAND VITARA(JB Series)	--	North USA	ESP	--	Actuation Test	
GRAND VITARA(JB Series)	--	North USA	ESP	--	Special Function	1.Sensor Calibration
GRAND VITARA(JB Series)	--	North USA	ESP	--	Special Function	2.ESP Function Setting
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	Engine	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	Engine	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	Engine	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	Engine	--	Special Function	1.Readiness Test
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	Engine	--	Special Function	2.Keyless Start
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	Engine	--	Special Function	3.Idle Learn Reset
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	Engine	--	Special Function	4.Oil Life Reset

model	year	area	system	subitem	function	subfunction
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	Engine	--	Special Function	5.Clutch Pedal Postion Learn
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	Engine	--	Special Function	6.Crankshaft Pos. Variation Learn
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	AT(Automatic Transmission)	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	AT(Automatic Transmission)	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	AT(Automatic Transmission)	--	Version Information	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	AT(Automatic Transmission)	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	AT(Automatic Transmission)	--	Special Function	1.Fast Learn Adapt Process
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	AT(Automatic Transmission)	--	Special Function	2.P/N Position Learn Procedure
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	SRS	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	SRS	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	SRS	--	Actuation Test	

model	year	area	system	subitem	function	subfunction
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	SRS	--	Special Function	System Rezero setting
XL-7/GRAND VITARA/VITARA	2003 - 2009	North USA	BCM(Body Control Module)	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	2003 - 2009	North USA	BCM(Body Control Module)	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	2003 - 2009	North USA	BCM(Body Control Module)	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	--	North USA	Cooling & HVAC	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	--	North USA	Cooling & HVAC	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	--	North USA	TPMS	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	--	North USA	TPMS	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	--	North USA	TPMS	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	--	North USA	TPMS	--	Special Function	TPMS ID registration with LF tool
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	ABS	--	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
XL-7/GRAND VITARA/VITARA	1999 - 2006	North USA	ABS	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	--	North USA	4WD	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	--	North USA	4WD	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	--	North USA	4WD	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	DRR	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	DRR	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	DRR	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	HSM	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	HSM	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	HSM	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	IPC	--	Read/Clear Fault Code	

model	year	area	system	subitem	function	subfunction
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	IPC	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	IPC	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	IPC	--	Special Function	1. IPC Setting
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	PPS	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	PPS	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	PPS	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	TDM	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	TDM	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	TDM	--	Version Information	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	EBCM	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	EBCM	--	Read Data Stream	

model	year	area	system	subitem	function	subfunction
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	EBCM	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	2009	North USA	RFA	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	2009	North USA	RFA	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	2009	North USA	RFA	--	Special Function	1. Automated Bleed
XL-7/GRAND VITARA/VITARA	2009	North USA	RFA	--	Special Function	2.Program Key Fobs
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	SIR	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	SIR	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	SIR	--	Version Information	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	SIR	--	Special Function	1. New ROS Setting
XL-7/GRAND VITARA/VITARA	2007 - 2008	North USA	RCDLR	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	2007 - 2008	North USA	RCDLR	--	Read Data Stream	

model	year	area	system	subitem	function	subfunction
XL-7/GRAND VITARA/VITARA	2007 - 2008	North USA	RCDLR	--	Version Information	
XL-7/GRAND VITARA/VITARA	2007 - 2008	North USA	RCDLR	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	2007 - 2008	North USA	RCDLR	--	Special Function	1.Program Key Fobs
XL-7/GRAND VITARA/VITARA	2007 - 2008	North USA	RCDLR	--	Special Function	2.Tire Type/Pressure Selection
XL-7/GRAND VITARA/VITARA	2007 - 2008	North USA	RCDLR	--	Special Function	3.TPM Learn Module
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	RS	--	Read/Clear Fault Code	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	RS	--	Read Data Stream	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	RS	--	Version Information	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	RS	--	Actuation Test	
XL-7/GRAND VITARA/VITARA	2007 - 2009	North USA	RS	--	Special Function	1. New ROS Setting
XL-7/GRAND VITARA/VITARA	2008	North USA	VCS	--	Read/Clear Fault Code	



model	year	area	system	subitem	function	subfunction
XL-7/ GRAND VITARA/V ITARA	2008	North USA	VCS	--	Version Information	
SIDE KICK/SIDE KICK SPORTS	1996 - 1998	North USA	Engine	--	Read/Clear Fault Code	
SIDE KICK/SIDE KICK SPORTS	--	North USA	ABS	--	Read/Clear Fault Code	
GST Module	--	North USA	V6Engine	--	Read/Clear Fault Code	
GST Module	--	North USA	V6Engine	--	Read Data Stream	
GST Module	--	North USA	Inline Engine	--	Read/Clear Fault Code	
GST Module	--	North USA	Inline Engine	--	Read Data Stream	
GST Module	--	North USA	Diesel(Z13DT)	--	Read/Clear Fault Code	
GST Module	--	North USA	Diesel(Z13DT)	--	Read Data Stream	
GST Module	--	North USA	Diesel(K9K)	--	Read/Clear Fault Code	
GST Module	--	North USA	Diesel(K9K)	--	Read Data Stream	
GST Module	--	North USA	Diesel(DV4)	--	Read/Clear Fault Code	
GST Module	--	North USA	Diesel(DV4)	--	Read Data Stream	
GST Module	--	North USA	Diesel(RHZ/RHW)	--	Read/Clear Fault Code	
GST Module	--	North USA	Diesel(RHZ/RHW)	--	Read Data Stream	