

**VOLVO Diagnostics List**  
(Note:For reference only)

model	year	type	system	function	subfunction
S40(-04)	1996		General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(-04)	1996	B4184S	ECM	Sys. Info.	
S40(-04)	1996	B4184S	ECM	Read code	
S40(-04)	1996	B4184S	ECM	Clear code	
S40(-04)	1996	B4184S	ECM	Data stream	
S40(-04)	1996	B4184S	ECM	Actuation	
S40(-04)	1996	B4204S	ECM	Sys. Info.	
S40(-04)	1996	B4204S	ECM	Read code	
S40(-04)	1996	B4204S	ECM	Clear code	
S40(-04)	1996	B4204S	ECM	Data stream	
S40(-04)	1996	B4204S	ECM	Actuation	
S40(-04)	1996	B4164S	ECM	Sys. Info.	
S40(-04)	1996	B4164S	ECM	Read code	
S40(-04)	1996	B4164S	ECM	Clear code	
S40(-04)	1996	B4164S	ECM	Data stream	
S40(-04)	1996	B4164S	ECM	Actuation	
S40(-04)	1996	B4184SM	ECM	Sys. Info.	
S40(-04)	1996	B4184SM	ECM	Read code	
S40(-04)	1996	B4184SM	ECM	Clear code	
S40(-04)	1996	B4184SM	ECM	Data stream	
S40(-04)	1996	B4204T	ECM	Sys. Info.	
S40(-04)	1996	B4204T	ECM	Read code	
S40(-04)	1996	B4204T	ECM	Clear code	
S40(-04)	1996	B4204T	ECM	Data stream	
S40(-04)	1996	B4194T	ECM	Sys. Info.	
S40(-04)	1996	B4194T	ECM	Read code	
S40(-04)	1996	B4194T	ECM	Clear code	
S40(-04)	1996	B4194T	ECM	Data stream	
S40(-04)	1996	AW50-42	TCM	Sys. Info.	
S40(-04)	1996	AW50-42	TCM	Read code	
S40(-04)	1996	AW50-42	TCM	Clear code	
S40(-04)	1996	AW50-42	TCM	Data stream	
S40(-04)	1996	AW50-42	ABS	Sys. Info.	
S40(-04)	1996	AW50-42	ABS	Read code	
S40(-04)	1996	AW50-42	ABS	Clear code	
S40(-04)	1996	AW50-42	ABS	Data stream	
S40(-04)	1996	AW50-42	ABS	Actuation	
S40(-04)	1996	AW50-42	SRS	Sys. Info.	
S40(-04)	1996	AW50-42	SRS	Read code	
S40(-04)	1996	AW50-42	SRS	Clear code	
S40(-04)	1996	AW50-42	SRS	Data stream	
S40(-04)	1996	AW50-42	IC	Sys. Info.	
S40(-04)	1996	AW50-42	IC	Read code	
S40(-04)	1996	AW50-42	IC	Clear code	
S40(-04)	1996	AW50-42	IC	Data stream	
S40(-04)	1996	AW50-42	IC	Actuation	
S40(-04)	1996	AW50-42	Immobilizer	Sys. Info.	
S40(-04)	1996	AW50-42	Immobilizer	Read code	
S40(-04)	1996	AW50-42	Immobilizer	Clear code	
S40(-04)	1996	AW50-42	Immobilizer	Data stream	
S40(-04)	1996	AW50-42	Immobilizer	Actuation	
S40(-04)	1996	AW50-42	VGLA	Sys. Info.	
S40(-04)	1996	AW50-42	VGLA	Read code	
S40(-04)	1996	AW50-42	VGLA	Clear code	
S40(-04)	1996	AW50-42	VGLA	Data stream	
S40(-04)	1996	AW50-42	VGLA	Actuation	
S40(-04)	1996	AW50-42	CPM	Sys. Info.	
S40(-04)	1996	AW50-42	CPM	Read code	
S40(-04)	1996	AW50-42	CPM	Clear code	
S40(-04)	1996	AW50-42	CPM	Data stream	
S40(-04)	1996	AW50-42	CPM	Actuation	
S40(-04)	1996	AW50-42	DSA	Sys. Info.	
S40(-04)	1996	AW50-42	DSA	Read code	
S40(-04)	1996	AW50-42	DSA	Clear code	
S40(-04)	1996	AW50-42	DSA	Data stream	
S40(-04)	1996	AW50-42	DSA	Actuation	
S40(-04)	1996	AW50-42	CCM	Sys. Info.	
S40(-04)	1996	AW50-42	CCM	Read code	
S40(-04)	1996	AW50-42	CCM	Clear code	
S40(-04)	1996	AW50-42	CCM	Data stream	
S40(-04)	1996	AW50-42	CCM	Actuation	
S40(-04)	1996	AW50-42	RTI	Sys. Info.	
S40(-04)	1996	AW50-42	RTI	Read code	
S40(-04)	1996	AW50-42	RTI	Clear code	

model	year	type	system	function	subfunction
S40(-04)	1996	AW50-42	RTI	Data stream	
S40(-04)	1996	AW50-42	RTI	Actuation	
S40(-04)	1997	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(-04)	1997	B4184S	ECM	Sys. Info.	
S40(-04)	1997	B4184S	ECM	Read code	
S40(-04)	1997	B4184S	ECM	Clear code	
S40(-04)	1997	B4184S	ECM	Data stream	
S40(-04)	1997	B4184S	ECM	Actuation	
S40(-04)	1997	B4204S	ECM	Sys. Info.	
S40(-04)	1997	B4204S	ECM	Read code	
S40(-04)	1997	B4204S	ECM	Clear code	
S40(-04)	1997	B4204S	ECM	Data stream	
S40(-04)	1997	B4204S	ECM	Actuation	
S40(-04)	1997	B4164S	ECM	Sys. Info.	
S40(-04)	1997	B4164S	ECM	Read code	
S40(-04)	1997	B4164S	ECM	Clear code	
S40(-04)	1997	B4164S	ECM	Data stream	
S40(-04)	1997	B4164S	ECM	Actuation	
S40(-04)	1997	B4184SM	ECM	Sys. Info.	
S40(-04)	1997	B4184SM	ECM	Read code	
S40(-04)	1997	B4184SM	ECM	Clear code	
S40(-04)	1997	B4184SM	ECM	Data stream	
S40(-04)	1997	B4204T	ECM	Sys. Info.	
S40(-04)	1997	B4204T	ECM	Read code	
S40(-04)	1997	B4204T	ECM	Clear code	
S40(-04)	1997	B4204T	ECM	Data stream	
S40(-04)	1997	B4194T	ECM	Sys. Info.	
S40(-04)	1997	B4194T	ECM	Read code	
S40(-04)	1997	B4194T	ECM	Clear code	
S40(-04)	1997	B4194T	ECM	Data stream	
S40(-04)	1997	AW50-42	TCM	Sys. Info.	
S40(-04)	1997	AW50-42	TCM	Read code	
S40(-04)	1997	AW50-42	TCM	Clear code	
S40(-04)	1997	AW50-42	TCM	Data stream	
S40(-04)	1997	AW50-42	ABS	Sys. Info.	
S40(-04)	1997	AW50-42	ABS	Read code	
S40(-04)	1997	AW50-42	ABS	Clear code	
S40(-04)	1997	AW50-42	ABS	Data stream	
S40(-04)	1997	AW50-42	ABS	Actuation	
S40(-04)	1997	AW50-42	SRS	Sys. Info.	
S40(-04)	1997	AW50-42	SRS	Read code	
S40(-04)	1997	AW50-42	SRS	Clear code	
S40(-04)	1997	AW50-42	SRS	Data stream	
S40(-04)	1997	AW50-42	IC	Sys. Info.	
S40(-04)	1997	AW50-42	IC	Read code	
S40(-04)	1997	AW50-42	IC	Clear code	
S40(-04)	1997	AW50-42	IC	Data stream	
S40(-04)	1997	AW50-42	IC	Actuation	
S40(-04)	1997	AW50-42	Immobilizer	Sys. Info.	
S40(-04)	1997	AW50-42	Immobilizer	Read code	
S40(-04)	1997	AW50-42	Immobilizer	Clear code	
S40(-04)	1997	AW50-42	Immobilizer	Data stream	
S40(-04)	1997	AW50-42	Immobilizer	Actuation	
S40(-04)	1997	AW50-42	VGLA	Sys. Info.	
S40(-04)	1997	AW50-42	VGLA	Read code	
S40(-04)	1997	AW50-42	VGLA	Clear code	
S40(-04)	1997	AW50-42	VGLA	Data stream	
S40(-04)	1997	AW50-42	VGLA	Actuation	
S40(-04)	1997	AW50-42	CPM	Sys. Info.	
S40(-04)	1997	AW50-42	CPM	Read code	
S40(-04)	1997	AW50-42	CPM	Clear code	
S40(-04)	1997	AW50-42	CPM	Data stream	
S40(-04)	1997	AW50-42	CPM	Actuation	
S40(-04)	1997	AW50-42	DSA	Sys. Info.	
S40(-04)	1997	AW50-42	DSA	Read code	
S40(-04)	1997	AW50-42	DSA	Clear code	
S40(-04)	1997	AW50-42	DSA	Data stream	
S40(-04)	1997	AW50-42	DSA	Actuation	
S40(-04)	1997	AW50-42	CCM	Sys. Info.	
S40(-04)	1997	AW50-42	CCM	Read code	
S40(-04)	1997	AW50-42	CCM	Clear code	
S40(-04)	1997	AW50-42	CCM	Data stream	
S40(-04)	1997	AW50-42	CCM	Actuation	
S40(-04)	1997	AW50-42	RTI	Sys. Info.	
S40(-04)	1997	AW50-42	RTI	Read code	
S40(-04)	1997	AW50-42	RTI	Clear code	
S40(-04)	1997	AW50-42	RTI	Data stream	

model	year	type	system	function	subfunction
S40(-04)		1997 AW50-42	RTI	Actuation	
S40(-04)		1998 AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(-04)		1998 B4184S	ECM	Sys. Info.	
S40(-04)		1998 B4184S	ECM	Read code	
S40(-04)		1998 B4184S	ECM	Clear code	
S40(-04)		1998 B4184S	ECM	Data stream	
S40(-04)		1998 B4184S	ECM	Actuation	
S40(-04)		1998 B4204S	ECM	Sys. Info.	
S40(-04)		1998 B4204S	ECM	Read code	
S40(-04)		1998 B4204S	ECM	Clear code	
S40(-04)		1998 B4204S	ECM	Data stream	
S40(-04)		1998 B4204S	ECM	Actuation	
S40(-04)		1998 B4164S	ECM	Sys. Info.	
S40(-04)		1998 B4164S	ECM	Read code	
S40(-04)		1998 B4164S	ECM	Clear code	
S40(-04)		1998 B4164S	ECM	Data stream	
S40(-04)		1998 B4164S	ECM	Actuation	
S40(-04)		1998 B4184SM	ECM	Sys. Info.	
S40(-04)		1998 B4184SM	ECM	Read code	
S40(-04)		1998 B4184SM	ECM	Clear code	
S40(-04)		1998 B4184SM	ECM	Data stream	
S40(-04)		1998 B4204T	ECM	Sys. Info.	
S40(-04)		1998 B4204T	ECM	Read code	
S40(-04)		1998 B4204T	ECM	Clear code	
S40(-04)		1998 B4204T	ECM	Data stream	
S40(-04)		1998 B4194T	ECM	Sys. Info.	
S40(-04)		1998 B4194T	ECM	Read code	
S40(-04)		1998 B4194T	ECM	Clear code	
S40(-04)		1998 B4194T	ECM	Data stream	
S40(-04)		1998 AW50-42	TCM	Sys. Info.	
S40(-04)		1998 AW50-42	TCM	Read code	
S40(-04)		1998 AW50-42	TCM	Clear code	
S40(-04)		1998 AW50-42	TCM	Data stream	
S40(-04)		1998 AW50-42	ABS	Sys. Info.	
S40(-04)		1998 AW50-42	ABS	Read code	
S40(-04)		1998 AW50-42	ABS	Clear code	
S40(-04)		1998 AW50-42	ABS	Data stream	
S40(-04)		1998 AW50-42	ABS	Actuation	
S40(-04)		1998 AW50-42	SRS	Sys. Info.	
S40(-04)		1998 AW50-42	SRS	Read code	
S40(-04)		1998 AW50-42	SRS	Clear code	
S40(-04)		1998 AW50-42	SRS	Data stream	
S40(-04)		1998 AW50-42	IC	Sys. Info.	
S40(-04)		1998 AW50-42	IC	Read code	
S40(-04)		1998 AW50-42	IC	Clear code	
S40(-04)		1998 AW50-42	IC	Data stream	
S40(-04)		1998 AW50-42	IC	Actuation	
S40(-04)		1998 AW50-42	Immobilizer	Sys. Info.	
S40(-04)		1998 AW50-42	Immobilizer	Read code	
S40(-04)		1998 AW50-42	Immobilizer	Clear code	
S40(-04)		1998 AW50-42	Immobilizer	Data stream	
S40(-04)		1998 AW50-42	Immobilizer	Actuation	
S40(-04)		1998 AW50-42	VGLA	Sys. Info.	
S40(-04)		1998 AW50-42	VGLA	Read code	
S40(-04)		1998 AW50-42	VGLA	Clear code	
S40(-04)		1998 AW50-42	VGLA	Data stream	
S40(-04)		1998 AW50-42	VGLA	Actuation	
S40(-04)		1998 AW50-42	CPM	Sys. Info.	
S40(-04)		1998 AW50-42	CPM	Read code	
S40(-04)		1998 AW50-42	CPM	Clear code	
S40(-04)		1998 AW50-42	CPM	Data stream	
S40(-04)		1998 AW50-42	CPM	Actuation	
S40(-04)		1998 AW50-42	DSA	Sys. Info.	
S40(-04)		1998 AW50-42	DSA	Read code	
S40(-04)		1998 AW50-42	DSA	Clear code	
S40(-04)		1998 AW50-42	DSA	Data stream	
S40(-04)		1998 AW50-42	DSA	Actuation	
S40(-04)		1998 AW50-42	CCM	Sys. Info.	
S40(-04)		1998 AW50-42	CCM	Read code	
S40(-04)		1998 AW50-42	CCM	Clear code	
S40(-04)		1998 AW50-42	CCM	Data stream	
S40(-04)		1998 AW50-42	CCM	Actuation	
S40(-04)		1998 AW50-42	RTI	Sys. Info.	
S40(-04)		1998 AW50-42	RTI	Read code	
S40(-04)		1998 AW50-42	RTI	Clear code	
S40(-04)		1998 AW50-42	RTI	Data stream	
S40(-04)		1998 AW50-42	RTI	Actuation	

model	year	type	system	function	subfunction
S40(-04)	1999	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(-04)	1999	B4184S	ECM	Sys. Info.	
S40(-04)	1999	B4184S	ECM	Read code	
S40(-04)	1999	B4184S	ECM	Clear code	
S40(-04)	1999	B4184S	ECM	Data stream	
S40(-04)	1999	B4184S	ECM	Actuation	
S40(-04)	1999	B4204S	ECM	Sys. Info.	
S40(-04)	1999	B4204S	ECM	Read code	
S40(-04)	1999	B4204S	ECM	Clear code	
S40(-04)	1999	B4204S	ECM	Data stream	
S40(-04)	1999	B4204S	ECM	Actuation	
S40(-04)	1999	B4164S	ECM	Sys. Info.	
S40(-04)	1999	B4164S	ECM	Read code	
S40(-04)	1999	B4164S	ECM	Clear code	
S40(-04)	1999	B4164S	ECM	Data stream	
S40(-04)	1999	B4164S	ECM	Actuation	
S40(-04)	1999	B4184SM	ECM	Sys. Info.	
S40(-04)	1999	B4184SM	ECM	Read code	
S40(-04)	1999	B4184SM	ECM	Clear code	
S40(-04)	1999	B4184SM	ECM	Data stream	
S40(-04)	1999	B4204T	ECM	Sys. Info.	
S40(-04)	1999	B4204T	ECM	Read code	
S40(-04)	1999	B4204T	ECM	Clear code	
S40(-04)	1999	B4204T	ECM	Data stream	
S40(-04)	1999	B4204T	ECM	Actuation	
S40(-04)	1999	B4194T	ECM	Sys. Info.	
S40(-04)	1999	B4194T	ECM	Read code	
S40(-04)	1999	B4194T	ECM	Clear code	
S40(-04)	1999	B4194T	ECM	Data stream	
S40(-04)	1999	B4194T	ECM	Actuation	
S40(-04)	1999	AW50-42	TCM	Sys. Info.	
S40(-04)	1999	AW50-42	TCM	Read code	
S40(-04)	1999	AW50-42	TCM	Clear code	
S40(-04)	1999	AW50-42	TCM	Data stream	
S40(-04)	1999	AW50-42	TCM	Actuation	
S40(-04)	1999	AW50-42	ABS	Sys. Info.	
S40(-04)	1999	AW50-42	ABS	Read code	
S40(-04)	1999	AW50-42	ABS	Clear code	
S40(-04)	1999	AW50-42	ABS	Data stream	
S40(-04)	1999	AW50-42	ABS	Actuation	
S40(-04)	1999	AW50-42	SRS	Sys. Info.	
S40(-04)	1999	AW50-42	SRS	Read code	
S40(-04)	1999	AW50-42	SRS	Clear code	
S40(-04)	1999	AW50-42	SRS	Data stream	
S40(-04)	1999	AW50-42	Immobilizer	Sys. Info.	
S40(-04)	1999	AW50-42	Immobilizer	Read code	
S40(-04)	1999	AW50-42	Immobilizer	Clear code	
S40(-04)	1999	AW50-42	Immobilizer	Data stream	
S40(-04)	1999	AW50-42	Immobilizer	Actuation	
S40(-04)	1999	AW50-42	CEM	Sys. Info.	
S40(-04)	1999	AW50-42	CEM	Read code	
S40(-04)	1999	AW50-42	CEM	Clear code	
S40(-04)	1999	AW50-42	CEM	Data stream	
S40(-04)	1999	AW50-42	CEM	Actuation	
S40(-04)	1999	AW50-42	DIM	Sys. Info.	
S40(-04)	1999	AW50-42	DIM	Read code	
S40(-04)	1999	AW50-42	DIM	Clear code	
S40(-04)	1999	AW50-42	DIM	Data stream	
S40(-04)	1999	AW50-42	DIM	Actuation	
S40(-04)	1999	AW50-42	CCM	Sys. Info.	
S40(-04)	1999	AW50-42	CCM	Read code	
S40(-04)	1999	AW50-42	CCM	Clear code	
S40(-04)	1999	AW50-42	CCM	Data stream	
S40(-04)	1999	AW50-42	CCM	Actuation	
S40(-04)	1999	AW50-42	VGLA	Sys. Info.	
S40(-04)	1999	AW50-42	VGLA	Read code	
S40(-04)	1999	AW50-42	VGLA	Clear code	
S40(-04)	1999	AW50-42	VGLA	Data stream	
S40(-04)	1999	AW50-42	VGLA	Actuation	
S40(-04)	1999	AW50-42	CPM	Sys. Info.	
S40(-04)	1999	AW50-42	CPM	Read code	
S40(-04)	1999	AW50-42	CPM	Clear code	
S40(-04)	1999	AW50-42	CPM	Data stream	
S40(-04)	1999	AW50-42	CPM	Actuation	
S40(-04)	1999	AW50-42	DSA	Sys. Info.	
S40(-04)	1999	AW50-42	DSA	Read code	
S40(-04)	1999	AW50-42	DSA	Clear code	

model	year	type	system	function	subfunction
S40(-04)	1999	AW50-42	DSA	Data stream	
S40(-04)	1999	AW50-42	DSA	Actuation	
S40(-04)	2000	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(-04)	2000	B4184S2	ECM	Sys. Info.	
S40(-04)	2000	B4184S2	ECM	Read code	
S40(-04)	2000	B4184S2	ECM	Clear code	
S40(-04)	2000	B4184S2	ECM	Data stream	
S40(-04)	2000	B4184S2	ECM	Actuation	
S40(-04)	2000	B4204S2	ECM	Sys. Info.	
S40(-04)	2000	B4204S2	ECM	Read code	
S40(-04)	2000	B4204S2	ECM	Clear code	
S40(-04)	2000	B4204S2	ECM	Data stream	
S40(-04)	2000	B4204S2	ECM	Actuation	
S40(-04)	2000	B4184S3	ECM	Sys. Info.	
S40(-04)	2000	B4184S3	ECM	Read code	
S40(-04)	2000	B4184S3	ECM	Clear code	
S40(-04)	2000	B4184S3	ECM	Data stream	
S40(-04)	2000	B4184S3	ECM	Actuation	
S40(-04)	2000	B4164S2	ECM	Sys. Info.	
S40(-04)	2000	B4164S2	ECM	Read code	
S40(-04)	2000	B4164S2	ECM	Clear code	
S40(-04)	2000	B4164S2	ECM	Data stream	
S40(-04)	2000	B4164S2	ECM	Actuation	
S40(-04)	2000	B4204T2 CVVT	ECM	Sys. Info.	
S40(-04)	2000	B4204T2 CVVT	ECM	Read code	
S40(-04)	2000	B4204T2 CVVT	ECM	Clear code	
S40(-04)	2000	B4204T2 CVVT	ECM	Data stream	
S40(-04)	2000	B4184SM	ECM	Sys. Info.	
S40(-04)	2000	B4184SM	ECM	Read code	
S40(-04)	2000	B4184SM	ECM	Clear code	
S40(-04)	2000	B4184SM	ECM	Data stream	
S40(-04)	2000	B4194T2	ECM	Sys. Info.	
S40(-04)	2000	B4194T2	ECM	Read code	
S40(-04)	2000	B4194T2	ECM	Clear code	
S40(-04)	2000	B4194T2	ECM	Data stream	
S40(-04)	2000	B4194T2	ECM	Actuation	
S40(-04)	2000	AW50-42	TCM	Sys. Info.	
S40(-04)	2000	AW50-42	TCM	Read code	
S40(-04)	2000	AW50-42	TCM	Clear code	
S40(-04)	2000	AW50-42	TCM	Data stream	
S40(-04)	2000	AW50-42	TCM	Actuation	
S40(-04)	2000	AW50-42	ABS	Sys. Info.	
S40(-04)	2000	AW50-42	ABS	Read code	
S40(-04)	2000	AW50-42	ABS	Clear code	
S40(-04)	2000	AW50-42	ABS	Data stream	
S40(-04)	2000	AW50-42	ABS	Actuation	
S40(-04)	2000	AW50-42	SRS	Sys. Info.	
S40(-04)	2000	AW50-42	SRS	Read code	
S40(-04)	2000	AW50-42	SRS	Clear code	
S40(-04)	2000	AW50-42	SRS	Data stream	
S40(-04)	2000	AW50-42	Immobilizer	Sys. Info.	
S40(-04)	2000	AW50-42	Immobilizer	Read code	
S40(-04)	2000	AW50-42	Immobilizer	Clear code	
S40(-04)	2000	AW50-42	Immobilizer	Data stream	
S40(-04)	2000	AW50-42	Immobilizer	Actuation	
S40(-04)	2000	AW50-42	CEM	Sys. Info.	
S40(-04)	2000	AW50-42	CEM	Read code	
S40(-04)	2000	AW50-42	CEM	Clear code	
S40(-04)	2000	AW50-42	CEM	Data stream	
S40(-04)	2000	AW50-42	CEM	Actuation	
S40(-04)	2000	AW50-42	DIM	Sys. Info.	
S40(-04)	2000	AW50-42	DIM	Read code	
S40(-04)	2000	AW50-42	DIM	Clear code	
S40(-04)	2000	AW50-42	DIM	Data stream	
S40(-04)	2000	AW50-42	DIM	Actuation	
S40(-04)	2000	AW50-42	CCM	Sys. Info.	
S40(-04)	2000	AW50-42	CCM	Read code	
S40(-04)	2000	AW50-42	CCM	Clear code	
S40(-04)	2000	AW50-42	CCM	Data stream	
S40(-04)	2000	AW50-42	CCM	Actuation	
S40(-04)	2000	AW50-42	VGLA	Sys. Info.	
S40(-04)	2000	AW50-42	VGLA	Read code	
S40(-04)	2000	AW50-42	VGLA	Clear code	

model	year	type	system	function	subfunction	
S40(-04)		2000	AW50-42	VGLA	Data stream	
S40(-04)		2000	AW50-42	VGLA	Actuation	
S40(-04)		2000	AW50-42	DSA	Sys. Info.	
S40(-04)		2000	AW50-42	DSA	Read code	
S40(-04)		2000	AW50-42	DSA	Clear code	
S40(-04)		2000	AW50-42	DSA	Data stream	
S40(-04)		2000	AW50-42	DSA	Actuation	
S40(-04)		2000	AW50-42	CPM	Sys. Info.	
S40(-04)		2000	AW50-42	CPM	Read code	
S40(-04)		2000	AW50-42	CPM	Clear code	
S40(-04)		2000	AW50-42	CPM	Data stream	
S40(-04)		2000	AW50-42	CPM	Actuation	
S40(-04)		2001	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(-04)		2001	B4204T3	ECM	Sys. Info.	
S40(-04)		2001	B4204T3	ECM	Read code	
S40(-04)		2001	B4204T3	ECM	Clear code	
S40(-04)		2001	B4204T3	ECM	Data stream	
S40(-04)		2001	B4204T3	ECM	Actuation	
S40(-04)		2001	B4204T5	ECM	Sys. Info.	
S40(-04)		2001	B4204T5	ECM	Read code	
S40(-04)		2001	B4204T5	ECM	Clear code	
S40(-04)		2001	B4204T5	ECM	Data stream	
S40(-04)		2001	B4204T5	ECM	Actuation	
S40(-04)		2001	B4164S2	ECM	Sys. Info.	
S40(-04)		2001	B4164S2	ECM	Read code	
S40(-04)		2001	B4164S2	ECM	Clear code	
S40(-04)		2001	B4164S2	ECM	Data stream	
S40(-04)		2001	B4164S2	ECM	Actuation	
S40(-04)		2001	B4184S2	ECM	Sys. Info.	
S40(-04)		2001	B4184S2	ECM	Read code	
S40(-04)		2001	B4184S2	ECM	Clear code	
S40(-04)		2001	B4184S2	ECM	Data stream	
S40(-04)		2001	B4184S2	ECM	Actuation	
S40(-04)		2001	B4204S2	ECM	Sys. Info.	
S40(-04)		2001	B4204S2	ECM	Read code	
S40(-04)		2001	B4204S2	ECM	Clear code	
S40(-04)		2001	B4204S2	ECM	Data stream	
S40(-04)		2001	B4204S2	ECM	Actuation	
S40(-04)		2001	B4184S3	ECM	Sys. Info.	
S40(-04)		2001	B4184S3	ECM	Read code	
S40(-04)		2001	B4184S3	ECM	Clear code	
S40(-04)		2001	B4184S3	ECM	Data stream	
S40(-04)		2001	B4184S3	ECM	Actuation	
S40(-04)		2001	B4184S10	ECM	Sys. Info.	
S40(-04)		2001	B4184S10	ECM	Read code	
S40(-04)		2001	B4184S10	ECM	Clear code	
S40(-04)		2001	B4184S10	ECM	Data stream	
S40(-04)		2001	B4184S10	ECM	Actuation	
S40(-04)		2001	B4184S9	ECM	Sys. Info.	
S40(-04)		2001	B4184S9	ECM	Read code	
S40(-04)		2001	B4184S9	ECM	Clear code	
S40(-04)		2001	B4184S9	ECM	Data stream	
S40(-04)		2001	B4184S9	ECM	Actuation	
S40(-04)		2001	B4184SJ	ECM	Sys. Info.	
S40(-04)		2001	B4184SJ	ECM	Read code	
S40(-04)		2001	B4184SJ	ECM	Clear code	
S40(-04)		2001	B4184SJ	ECM	Data stream	
S40(-04)		2001	B4184SJ	ECM	Actuation	
S40(-04)		2001	B4184SM	ECM	Sys. Info.	
S40(-04)		2001	B4184SM	ECM	Read code	
S40(-04)		2001	B4184SM	ECM	Clear code	
S40(-04)		2001	B4184SM	ECM	Data stream	
S40(-04)		2001	B4184SM	ECM	Actuation	
S40(-04)		2001	AW55-50SN	TCM	Sys. Info.	
S40(-04)		2001	AW55-50SN	TCM	Read code	
S40(-04)		2001	AW55-50SN	TCM	Clear code	
S40(-04)		2001	AW55-50SN	TCM	Data stream	
S40(-04)		2001	AW55-50SN	TCM	Actuation	
S40(-04)		2001	AW55-50SN	ABS	Sys. Info.	
S40(-04)		2001	AW55-50SN	ABS	Read code	
S40(-04)		2001	AW55-50SN	ABS	Clear code	
S40(-04)		2001	AW55-50SN	ABS	Data stream	
S40(-04)		2001	AW55-50SN	ABS	Actuation	
S40(-04)		2001	AW55-50SN	SRS	Sys. Info.	
S40(-04)		2001	AW55-50SN	SRS	Read code	
S40(-04)		2001	AW55-50SN	SRS	Clear code	
S40(-04)		2001	AW55-50SN	SRS	Data stream	

model	year	type	system	function	subfunction	
S40(-04)		2001	AW55-50SN	Immobilizer	Sys. Info.	
S40(-04)		2001	AW55-50SN	Immobilizer	Read code	
S40(-04)		2001	AW55-50SN	Immobilizer	Clear code	
S40(-04)		2001	AW55-50SN	Immobilizer	Data stream	
S40(-04)		2001	AW55-50SN	Immobilizer	Actuation	
S40(-04)		2001	AW55-50SN	CEM	Sys. Info.	
S40(-04)		2001	AW55-50SN	CEM	Read code	
S40(-04)		2001	AW55-50SN	CEM	Clear code	
S40(-04)		2001	AW55-50SN	CEM	Data stream	
S40(-04)		2001	AW55-50SN	CEM	Actuation	
S40(-04)		2001	AW55-50SN	DIM	Sys. Info.	
S40(-04)		2001	AW55-50SN	DIM	Read code	
S40(-04)		2001	AW55-50SN	DIM	Clear code	
S40(-04)		2001	AW55-50SN	DIM	Data stream	
S40(-04)		2001	AW55-50SN	DIM	Actuation	
S40(-04)		2001	AW55-50SN	CCM	Sys. Info.	
S40(-04)		2001	AW55-50SN	CCM	Read code	
S40(-04)		2001	AW55-50SN	CCM	Clear code	
S40(-04)		2001	AW55-50SN	CCM	Data stream	
S40(-04)		2001	AW55-50SN	CCM	Actuation	
S40(-04)		2001	AW55-50SN	VGLA	Sys. Info.	
S40(-04)		2001	AW55-50SN	VGLA	Read code	
S40(-04)		2001	AW55-50SN	VGLA	Clear code	
S40(-04)		2001	AW55-50SN	VGLA	Data stream	
S40(-04)		2001	AW55-50SN	VGLA	Actuation	
S40(-04)		2001	AW55-50SN	DSA	Sys. Info.	
S40(-04)		2001	AW55-50SN	DSA	Read code	
S40(-04)		2001	AW55-50SN	DSA	Clear code	
S40(-04)		2001	AW55-50SN	DSA	Data stream	
S40(-04)		2001	AW55-50SN	DSA	Actuation	
S40(-04)		2001	AW55-50SN	CPM	Sys. Info.	
S40(-04)		2001	AW55-50SN	CPM	Read code	
S40(-04)		2001	AW55-50SN	CPM	Clear code	
S40(-04)		2001	AW55-50SN	CPM	Data stream	
S40(-04)		2001	AW55-50SN	CPM	Actuation	
S40(-04)		2002	AW55-50SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(-04)		2002	B4204T3	ECM	Sys. Info.	
S40(-04)		2002	B4204T3	ECM	Read code	
S40(-04)		2002	B4204T3	ECM	Clear code	
S40(-04)		2002	B4204T3	ECM	Data stream	
S40(-04)		2002	B4204T3	ECM	Actuation	
S40(-04)		2002	B4204T5	ECM	Sys. Info.	
S40(-04)		2002	B4204T5	ECM	Read code	
S40(-04)		2002	B4204T5	ECM	Clear code	
S40(-04)		2002	B4204T5	ECM	Data stream	
S40(-04)		2002	B4204T5	ECM	Actuation	
S40(-04)		2002	B4164S2	ECM	Sys. Info.	
S40(-04)		2002	B4164S2	ECM	Read code	
S40(-04)		2002	B4164S2	ECM	Clear code	
S40(-04)		2002	B4164S2	ECM	Data stream	
S40(-04)		2002	B4164S2	ECM	Actuation	
S40(-04)		2002	B4184S2	ECM	Sys. Info.	
S40(-04)		2002	B4184S2	ECM	Read code	
S40(-04)		2002	B4184S2	ECM	Clear code	
S40(-04)		2002	B4184S2	ECM	Data stream	
S40(-04)		2002	B4184S2	ECM	Actuation	
S40(-04)		2002	B4204S2	ECM	Sys. Info.	
S40(-04)		2002	B4204S2	ECM	Read code	
S40(-04)		2002	B4204S2	ECM	Clear code	
S40(-04)		2002	B4204S2	ECM	Data stream	
S40(-04)		2002	B4204S2	ECM	Actuation	
S40(-04)		2002	B4184S3	ECM	Sys. Info.	
S40(-04)		2002	B4184S3	ECM	Read code	
S40(-04)		2002	B4184S3	ECM	Clear code	
S40(-04)		2002	B4184S3	ECM	Data stream	
S40(-04)		2002	B4184S3	ECM	Actuation	
S40(-04)		2002	B4184S10	ECM	Sys. Info.	
S40(-04)		2002	B4184S10	ECM	Read code	
S40(-04)		2002	B4184S10	ECM	Clear code	
S40(-04)		2002	B4184S10	ECM	Data stream	
S40(-04)		2002	B4184S10	ECM	Actuation	
S40(-04)		2002	B4184S9	ECM	Sys. Info.	
S40(-04)		2002	B4184S9	ECM	Read code	
S40(-04)		2002	B4184S9	ECM	Clear code	
S40(-04)		2002	B4184S9	ECM	Data stream	
S40(-04)		2002	B4184S9	ECM	Actuation	
S40(-04)		2002	B4184SJ	ECM	Sys. Info.	

model	year	type	system	function	subfunction	
S40(-04)		2002	B4184SJ	ECM	Read code	
S40(-04)		2002	B4184SJ	ECM	Clear code	
S40(-04)		2002	B4184SJ	ECM	Data stream	
S40(-04)		2002	B4184SJ	ECM	Actuation	
S40(-04)		2002	AW55-50SN	TCM	Sys. Info.	
S40(-04)		2002	AW55-50SN	TCM	Read code	
S40(-04)		2002	AW55-50SN	TCM	Clear code	
S40(-04)		2002	AW55-50SN	TCM	Data stream	
S40(-04)		2002	AW55-50SN	TCM	Actuation	
S40(-04)		2002	AW55-50SN	ABS	Sys. Info.	
S40(-04)		2002	AW55-50SN	ABS	Read code	
S40(-04)		2002	AW55-50SN	ABS	Clear code	
S40(-04)		2002	AW55-50SN	ABS	Data stream	
S40(-04)		2002	AW55-50SN	ABS	Actuation	
S40(-04)		2002	AW55-50SN	SRS	Sys. Info.	
S40(-04)		2002	AW55-50SN	SRS	Read code	
S40(-04)		2002	AW55-50SN	SRS	Clear code	
S40(-04)		2002	AW55-50SN	SRS	Data stream	
S40(-04)		2002	AW55-50SN	Immobilizer	Sys. Info.	
S40(-04)		2002	AW55-50SN	Immobilizer	Read code	
S40(-04)		2002	AW55-50SN	Immobilizer	Clear code	
S40(-04)		2002	AW55-50SN	Immobilizer	Data stream	
S40(-04)		2002	AW55-50SN	Immobilizer	Actuation	
S40(-04)		2002	AW55-50SN	CEM	Sys. Info.	
S40(-04)		2002	AW55-50SN	CEM	Read code	
S40(-04)		2002	AW55-50SN	CEM	Clear code	
S40(-04)		2002	AW55-50SN	CEM	Data stream	
S40(-04)		2002	AW55-50SN	CEM	Actuation	
S40(-04)		2002	AW55-50SN	DIM	Sys. Info.	
S40(-04)		2002	AW55-50SN	DIM	Read code	
S40(-04)		2002	AW55-50SN	DIM	Clear code	
S40(-04)		2002	AW55-50SN	DIM	Data stream	
S40(-04)		2002	AW55-50SN	DIM	Actuation	
S40(-04)		2002	AW55-50SN	CCM	Sys. Info.	
S40(-04)		2002	AW55-50SN	CCM	Read code	
S40(-04)		2002	AW55-50SN	CCM	Clear code	
S40(-04)		2002	AW55-50SN	CCM	Data stream	
S40(-04)		2002	AW55-50SN	CCM	Actuation	
S40(-04)		2002	AW55-50SN	VGLA	Sys. Info.	
S40(-04)		2002	AW55-50SN	VGLA	Read code	
S40(-04)		2002	AW55-50SN	VGLA	Clear code	
S40(-04)		2002	AW55-50SN	VGLA	Data stream	
S40(-04)		2002	AW55-50SN	VGLA	Actuation	
S40(-04)		2002	AW55-50SN	DSA	Sys. Info.	
S40(-04)		2002	AW55-50SN	DSA	Read code	
S40(-04)		2002	AW55-50SN	DSA	Clear code	
S40(-04)		2002	AW55-50SN	DSA	Data stream	
S40(-04)		2002	AW55-50SN	DSA	Actuation	
S40(-04)		2002	AW55-50SN	CPM	Sys. Info.	
S40(-04)		2002	AW55-50SN	CPM	Read code	
S40(-04)		2002	AW55-50SN	CPM	Clear code	
S40(-04)		2002	AW55-50SN	CPM	Data stream	
S40(-04)		2002	AW55-50SN	CPM	Actuation	
S40(-04)		2003	AW55-50SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(-04)		2003	B4204T3	ECM	Sys. Info.	
S40(-04)		2003	B4204T3	ECM	Read code	
S40(-04)		2003	B4204T3	ECM	Clear code	
S40(-04)		2003	B4204T3	ECM	Data stream	
S40(-04)		2003	B4204T3	ECM	Actuation	
S40(-04)		2003	B4204T5	ECM	Sys. Info.	
S40(-04)		2003	B4204T5	ECM	Read code	
S40(-04)		2003	B4204T5	ECM	Clear code	
S40(-04)		2003	B4204T5	ECM	Data stream	
S40(-04)		2003	B4204T5	ECM	Actuation	
S40(-04)		2003	B4164S2	ECM	Sys. Info.	
S40(-04)		2003	B4164S2	ECM	Read code	
S40(-04)		2003	B4164S2	ECM	Clear code	
S40(-04)		2003	B4164S2	ECM	Data stream	
S40(-04)		2003	B4164S2	ECM	Actuation	
S40(-04)		2003	B4184S2	ECM	Sys. Info.	
S40(-04)		2003	B4184S2	ECM	Read code	
S40(-04)		2003	B4184S2	ECM	Clear code	
S40(-04)		2003	B4184S2	ECM	Data stream	
S40(-04)		2003	B4184S2	ECM	Actuation	
S40(-04)		2003	B4204S2	ECM	Sys. Info.	
S40(-04)		2003	B4204S2	ECM	Read code	
S40(-04)		2003	B4204S2	ECM	Clear code	



model	year	type	system	function	subfunction
S40(-04)	2003	B4204S2	ECM	Data stream	
S40(-04)	2003	B4204S2	ECM	Actuation	
S40(-04)	2003	B4184S3	ECM	Sys. Info.	
S40(-04)	2003	B4184S3	ECM	Read code	
S40(-04)	2003	B4184S3	ECM	Clear code	
S40(-04)	2003	B4184S3	ECM	Data stream	
S40(-04)	2003	B4184S3	ECM	Actuation	
S40(-04)	2003	B4184S10	ECM	Sys. Info.	
S40(-04)	2003	B4184S10	ECM	Read code	
S40(-04)	2003	B4184S10	ECM	Clear code	
S40(-04)	2003	B4184S10	ECM	Data stream	
S40(-04)	2003	B4184S10	ECM	Actuation	
S40(-04)	2003	B4184S9	ECM	Sys. Info.	
S40(-04)	2003	B4184S9	ECM	Read code	
S40(-04)	2003	B4184S9	ECM	Clear code	
S40(-04)	2003	B4184S9	ECM	Data stream	
S40(-04)	2003	B4184S9	ECM	Actuation	
S40(-04)	2003	B4184SJ	ECM	Sys. Info.	
S40(-04)	2003	B4184SJ	ECM	Read code	
S40(-04)	2003	B4184SJ	ECM	Clear code	
S40(-04)	2003	B4184SJ	ECM	Data stream	
S40(-04)	2003	B4184SJ	ECM	Actuation	
S40(-04)	2003	AW55-50SN	TCM	Sys. Info.	
S40(-04)	2003	AW55-50SN	TCM	Read code	
S40(-04)	2003	AW55-50SN	TCM	Clear code	
S40(-04)	2003	AW55-50SN	TCM	Data stream	
S40(-04)	2003	AW55-50SN	TCM	Actuation	
S40(-04)	2003	AW55-50SN	ABS	Sys. Info.	
S40(-04)	2003	AW55-50SN	ABS	Read code	
S40(-04)	2003	AW55-50SN	ABS	Clear code	
S40(-04)	2003	AW55-50SN	ABS	Data stream	
S40(-04)	2003	AW55-50SN	ABS	Actuation	
S40(-04)	2003	AW55-50SN	SRS	Sys. Info.	
S40(-04)	2003	AW55-50SN	SRS	Read code	
S40(-04)	2003	AW55-50SN	SRS	Clear code	
S40(-04)	2003	AW55-50SN	SRS	Data stream	
S40(-04)	2003	AW55-50SN	Immobilizer	Sys. Info.	
S40(-04)	2003	AW55-50SN	Immobilizer	Read code	
S40(-04)	2003	AW55-50SN	Immobilizer	Clear code	
S40(-04)	2003	AW55-50SN	Immobilizer	Data stream	
S40(-04)	2003	AW55-50SN	Immobilizer	Actuation	
S40(-04)	2003	AW55-50SN	CEM	Sys. Info.	
S40(-04)	2003	AW55-50SN	CEM	Read code	
S40(-04)	2003	AW55-50SN	CEM	Clear code	
S40(-04)	2003	AW55-50SN	CEM	Data stream	
S40(-04)	2003	AW55-50SN	CEM	Actuation	
S40(-04)	2003	AW55-50SN	DIM	Sys. Info.	
S40(-04)	2003	AW55-50SN	DIM	Read code	
S40(-04)	2003	AW55-50SN	DIM	Clear code	
S40(-04)	2003	AW55-50SN	DIM	Data stream	
S40(-04)	2003	AW55-50SN	DIM	Actuation	
S40(-04)	2003	AW55-50SN	CCM	Sys. Info.	
S40(-04)	2003	AW55-50SN	CCM	Read code	
S40(-04)	2003	AW55-50SN	CCM	Clear code	
S40(-04)	2003	AW55-50SN	CCM	Data stream	
S40(-04)	2003	AW55-50SN	CCM	Actuation	
S40(-04)	2003	AW55-50SN	VGLA	Sys. Info.	
S40(-04)	2003	AW55-50SN	VGLA	Read code	
S40(-04)	2003	AW55-50SN	VGLA	Clear code	
S40(-04)	2003	AW55-50SN	VGLA	Data stream	
S40(-04)	2003	AW55-50SN	VGLA	Actuation	
S40(-04)	2003	AW55-50SN	DSA	Sys. Info.	
S40(-04)	2003	AW55-50SN	DSA	Read code	
S40(-04)	2003	AW55-50SN	DSA	Clear code	
S40(-04)	2003	AW55-50SN	DSA	Data stream	
S40(-04)	2003	AW55-50SN	DSA	Actuation	
S40(-04)	2003	AW55-50SN	CPM	Sys. Info.	
S40(-04)	2003	AW55-50SN	CPM	Read code	
S40(-04)	2003	AW55-50SN	CPM	Clear code	
S40(-04)	2003	AW55-50SN	CPM	Data stream	
S40(-04)	2003	AW55-50SN	CPM	Actuation	
S40(-04)	2004	AW55-50SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(-04)	2004	B4204T3	ECM	Sys. Info.	
S40(-04)	2004	B4204T3	ECM	Read code	
S40(-04)	2004	B4204T3	ECM	Clear code	
S40(-04)	2004	B4204T3	ECM	Data stream	
S40(-04)	2004	B4204T3	ECM	Actuation	

model	year	type	system	function	subfunction	
S40(-04)		2004	B4204T5	ECM	Sys. Info.	
S40(-04)		2004	B4204T5	ECM	Read code	
S40(-04)		2004	B4204T5	ECM	Clear code	
S40(-04)		2004	B4204T5	ECM	Data stream	
S40(-04)		2004	B4204T5	ECM	Actuation	
S40(-04)		2004	B4164S2	ECM	Sys. Info.	
S40(-04)		2004	B4164S2	ECM	Read code	
S40(-04)		2004	B4164S2	ECM	Clear code	
S40(-04)		2004	B4164S2	ECM	Data stream	
S40(-04)		2004	B4164S2	ECM	Actuation	
S40(-04)		2004	B4184S2	ECM	Sys. Info.	
S40(-04)		2004	B4184S2	ECM	Read code	
S40(-04)		2004	B4184S2	ECM	Clear code	
S40(-04)		2004	B4184S2	ECM	Data stream	
S40(-04)		2004	B4184S2	ECM	Actuation	
S40(-04)		2004	B4204S2	ECM	Sys. Info.	
S40(-04)		2004	B4204S2	ECM	Read code	
S40(-04)		2004	B4204S2	ECM	Clear code	
S40(-04)		2004	B4204S2	ECM	Data stream	
S40(-04)		2004	B4204S2	ECM	Actuation	
S40(-04)		2004	B4184S3	ECM	Sys. Info.	
S40(-04)		2004	B4184S3	ECM	Read code	
S40(-04)		2004	B4184S3	ECM	Clear code	
S40(-04)		2004	B4184S3	ECM	Data stream	
S40(-04)		2004	B4184S3	ECM	Actuation	
S40(-04)		2004	B4184S10	ECM	Sys. Info.	
S40(-04)		2004	B4184S10	ECM	Read code	
S40(-04)		2004	B4184S10	ECM	Clear code	
S40(-04)		2004	B4184S10	ECM	Data stream	
S40(-04)		2004	B4184S10	ECM	Actuation	
S40(-04)		2004	B4184S9	ECM	Sys. Info.	
S40(-04)		2004	B4184S9	ECM	Read code	
S40(-04)		2004	B4184S9	ECM	Clear code	
S40(-04)		2004	B4184S9	ECM	Data stream	
S40(-04)		2004	B4184S9	ECM	Actuation	
S40(-04)		2004	B4184SJ	ECM	Sys. Info.	
S40(-04)		2004	B4184SJ	ECM	Read code	
S40(-04)		2004	B4184SJ	ECM	Clear code	
S40(-04)		2004	B4184SJ	ECM	Data stream	
S40(-04)		2004	B4184SJ	ECM	Actuation	
S40(-04)		2004	AW55-50SN	TCM	Sys. Info.	
S40(-04)		2004	AW55-50SN	TCM	Read code	
S40(-04)		2004	AW55-50SN	TCM	Clear code	
S40(-04)		2004	AW55-50SN	TCM	Data stream	
S40(-04)		2004	AW55-50SN	TCM	Actuation	
S40(-04)		2004	AW55-50SN	ABS	Sys. Info.	
S40(-04)		2004	AW55-50SN	ABS	Read code	
S40(-04)		2004	AW55-50SN	ABS	Clear code	
S40(-04)		2004	AW55-50SN	ABS	Data stream	
S40(-04)		2004	AW55-50SN	ABS	Actuation	
S40(-04)		2004	AW55-50SN	SRS	Sys. Info.	
S40(-04)		2004	AW55-50SN	SRS	Read code	
S40(-04)		2004	AW55-50SN	SRS	Clear code	
S40(-04)		2004	AW55-50SN	SRS	Data stream	
S40(-04)		2004	AW55-50SN	Immobilizer	Sys. Info.	
S40(-04)		2004	AW55-50SN	Immobilizer	Read code	
S40(-04)		2004	AW55-50SN	Immobilizer	Clear code	
S40(-04)		2004	AW55-50SN	Immobilizer	Data stream	
S40(-04)		2004	AW55-50SN	Immobilizer	Actuation	
S40(-04)		2004	AW55-50SN	CEM	Sys. Info.	
S40(-04)		2004	AW55-50SN	CEM	Read code	
S40(-04)		2004	AW55-50SN	CEM	Clear code	
S40(-04)		2004	AW55-50SN	CEM	Data stream	
S40(-04)		2004	AW55-50SN	CEM	Actuation	
S40(-04)		2004	AW55-50SN	DIM	Sys. Info.	
S40(-04)		2004	AW55-50SN	DIM	Read code	
S40(-04)		2004	AW55-50SN	DIM	Clear code	
S40(-04)		2004	AW55-50SN	DIM	Data stream	
S40(-04)		2004	AW55-50SN	DIM	Actuation	
S40(-04)		2004	AW55-50SN	CCM	Sys. Info.	
S40(-04)		2004	AW55-50SN	CCM	Read code	
S40(-04)		2004	AW55-50SN	CCM	Clear code	
S40(-04)		2004	AW55-50SN	CCM	Data stream	
S40(-04)		2004	AW55-50SN	CCM	Actuation	
S40(-04)		2004	AW55-50SN	VGLA	Sys. Info.	
S40(-04)		2004	AW55-50SN	VGLA	Read code	
S40(-04)		2004	AW55-50SN	VGLA	Clear code	
S40(-04)		2004	AW55-50SN	VGLA	Data stream	

model	year	type	system	function	subfunction	
S40(-04)		2004	AW55-50SN	VGLA	Actuation	
S40(-04)		2004	AW55-50SN	DSA	Sys. Info.	
S40(-04)		2004	AW55-50SN	DSA	Read code	
S40(-04)		2004	AW55-50SN	DSA	Clear code	
S40(-04)		2004	AW55-50SN	DSA	Data stream	
S40(-04)		2004	AW55-50SN	DSA	Actuation	
S40(-04)		2004	AW55-50SN	CPM	Sys. Info.	
S40(-04)		2004	AW55-50SN	CPM	Read code	
S40(-04)		2004	AW55-50SN	CPM	Clear code	
S40(-04)		2004	AW55-50SN	CPM	Data stream	
S40(-04)		2004	AW55-50SN	CPM	Actuation	
S60		2004	AW55-50SN	ShortTest	Special functions	search all system and DTC(s) of vehicle
S60		2001	AW55-50SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S60		2001	B5244S	ECM	Sys. Info.	
S60		2001	B5244S	ECM	Read code	
S60		2001	B5244S	ECM	Clear code	
S60		2001	B5244S	ECM	Data stream	
S60		2001	B5244S	ECM	Actuation	
S60		2001	B5244S	ECM	Special functions	Quick test of the fuel tank system
S60		2001	B6304S3	ECM	Sys. Info.	
S60		2001	B6304S3	ECM	Read code	
S60		2001	B6304S3	ECM	Clear code	
S60		2001	B6304S3	ECM	Data stream	
S60		2001	B6304S3	ECM	Actuation	
S60		2001	B6294T	ECM	Sys. Info.	
S60		2001	B6294T	ECM	Read code	
S60		2001	B6294T	ECM	Clear code	
S60		2001	B6294T	ECM	Data stream	
S60		2001	B6294T	ECM	Actuation	
S60		2001	B6294T	ECM	Special functions	Resetting the adaptation values
S60		2001	B6284T	ECM	Sys. Info.	
S60		2001	B6284T	ECM	Read code	
S60		2001	B6284T	ECM	Clear code	
S60		2001	B6284T	ECM	Data stream	
S60		2001	B6284T	ECM	Actuation	
S60		2001	B5204T4	ECM	Sys. Info.	
S60		2001	B5204T4	ECM	Read code	
S60		2001	B5204T4	ECM	Clear code	
S60		2001	B5204T4	ECM	Data stream	
S60		2001	B5204T4	ECM	Actuation	
S60		2001	B5204T3	ECM	Sys. Info.	
S60		2001	B5204T3	ECM	Read code	
S60		2001	B5204T3	ECM	Clear code	
S60		2001	B5204T3	ECM	Data stream	
S60		2001	B5204T3	ECM	Actuation	
S60		2001	B5244SG	ECM	Sys. Info.	
S60		2001	B5244SG	ECM	Read code	
S60		2001	B5244SG	ECM	Clear code	
S60		2001	B5244SG	ECM	Data stream	
S60		2001	B5244SG	ECM	Actuation	
S60		2001	B6294S2	ECM	Sys. Info.	
S60		2001	B6294S2	ECM	Read code	
S60		2001	B6294S2	ECM	Clear code	
S60		2001	B6294S2	ECM	Data stream	
S60		2001	B6294S2	ECM	Actuation	
S60		2001	B5244S2	ECM	Sys. Info.	
S60		2001	B5244S2	ECM	Read code	
S60		2001	B5244S2	ECM	Clear code	
S60		2001	B5244S2	ECM	Data stream	
S60		2001	B5244S2	ECM	Actuation	
S60		2001	B5254T2	ECM	Sys. Info.	
S60		2001	B5254T2	ECM	Read code	
S60		2001	B5254T2	ECM	Clear code	
S60		2001	B5254T2	ECM	Data stream	
S60		2001	B5254T2	ECM	Actuation	
S60		2001	B5254T2	ECM	Special functions	Resetting the adaptation values
S60		2001	B5234T3	ECM	Sys. Info.	
S60		2001	B5234T3	ECM	Read code	
S60		2001	B5234T3	ECM	Clear code	
S60		2001	B5234T3	ECM	Data stream	
S60		2001	B5234T3	ECM	Actuation	
S60		2001	B5204T5	ECM	Sys. Info.	
S60		2001	B5204T5	ECM	Read code	
S60		2001	B5204T5	ECM	Clear code	
S60		2001	B5204T5	ECM	Data stream	
S60		2001	B5204T5	ECM	Actuation	
S60		2001	B5254T4	ECM	Sys. Info.	

model	year	type	system	function	subfunction	
S60		2001	B5254T4	ECM	Read code	
S60		2001	B5254T4	ECM	Clear code	
S60		2001	B5254T4	ECM	Data stream	
S60		2001	B5254T4	ECM	Actuation	
S60		2001	B6294S	ECM	Sys. Info.	
S60		2001	B6294S	ECM	Read code	
S60		2001	B6294S	ECM	Clear code	
S60		2001	B6294S	ECM	Data stream	
S60		2001	B6294S	ECM	Actuation	
S60		2001	B5244T7	ECM	Sys. Info.	
S60		2001	B5244T7	ECM	Read code	
S60		2001	B5244T7	ECM	Clear code	
S60		2001	B5244T7	ECM	Data stream	
S60		2001	B5244T7	ECM	Actuation	
S60		2001	B5244T7	ECM	Special functions	Resetting the adaptation values
S60		2001	B5234T7	ECM	Sys. Info.	
S60		2001	B5234T7	ECM	Read code	
S60		2001	B5234T7	ECM	Clear code	
S60		2001	B5234T7	ECM	Data stream	
S60		2001	B5234T7	ECM	Actuation	
S60		2001	B5234T7	ECM	Special functions	Resetting the adaptation values
S60		2001	D5244T	Diesel Eng	Sys. Info.	
S60		2001	D5244T	Diesel Eng	Read code	
S60		2001	D5244T	Diesel Eng	Clear code	
S60		2001	D5244T	Diesel Eng	Data stream	
S60		2001	D5244T	Diesel Eng	Actuation	
S60		2001	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2001	D5252T	Diesel Eng	Sys. Info.	
S60		2001	D5252T	Diesel Eng	Read code	
S60		2001	D5252T	Diesel Eng	Clear code	
S60		2001	D5252T	Diesel Eng	Data stream	
S60		2001	D5252T	Diesel Eng	Actuation	
S60		2001	D5252T	Diesel Eng	Special functions	Programming the idle speed
S60		2001	AW55-50SN	TCM	Sys. Info.	
S60		2001	AW55-50SN	TCM	Read code	
S60		2001	AW55-50SN	TCM	Clear code	
S60		2001	AW55-50SN	TCM	Data stream	
S60		2001	AW55-50SN	TCM	Actuation	
S60		2001	AW55-50SN	TCM	Special functions	Reset adaptation to zero
S60		2001	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2001	AW55-50SN	TCM	Special functions	Control module adaptation
S60		2001	4T65EV-GT	TCM	Sys. Info.	
S60		2001	4T65EV-GT	TCM	Read code	
S60		2001	4T65EV-GT	TCM	Clear code	
S60		2001	4T65EV-GT	TCM	Data stream	
S60		2001	4T65EV-GT	TCM	Actuation	
S60		2001	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
S60		2001	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2001	AW50-42	TCM	Sys. Info.	
S60		2001	AW50-42	TCM	Read code	
S60		2001	AW50-42	TCM	Clear code	
S60		2001	AW50-42	TCM	Data stream	
S60		2001	AW50-42	TCM	Actuation	
S60		2001	AW50-42	TCM	Special functions	Reset adaptation to zero
S60		2001	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2001	AW50/51AW D	TCM	Sys. Info.	
S60		2001	AW50/51AW D	TCM	Read code	
S60		2001	AW50/51AW D	TCM	Clear code	
S60		2001	AW50/51AW D	TCM	Data stream	
S60		2001	AW50/51AW D	TCM	Actuation	
S60		2001	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S60		2001	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2001	TF-80SC	TCM	Sys. Info.	
S60		2001	TF-80SC	TCM	Read code	
S60		2001	TF-80SC	TCM	Clear code	
S60		2001	TF-80SC	TCM	Data stream	
S60		2001	TF-80SC	TCM	Actuation	
S60		2001	TF-80SC	TCM	Special functions	Resetting the adaptation
S60		2001	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S60		2001	4T65EV	TCM	Sys. Info.	
S60		2001	4T65EV	TCM	Read code	

model	year	type	system	function	subfunction	
S60		2001	4T65EV	TCM	Clear code	
S60		2001	4T65EV	TCM	Data stream	
S60		2001	4T65EV	TCM	Actuation	
S60		2001	4T65AWD	TCM	Sys. Info.	
S60		2001	4T65AWD	TCM	Read code	
S60		2001	4T65AWD	TCM	Clear code	
S60		2001	4T65AWD	TCM	Data stream	
S60		2001	4T65AWD	TCM	Actuation	
S60		2001	4T65AWD	TCM	Special functions	Reset adaptation to zero
S60		2001	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2001	4T65AWD	ABS	Sys. Info.	
S60		2001	4T65AWD	ABS	Read code	
S60		2001	4T65AWD	ABS	Clear code	
S60		2001	4T65AWD	ABS	Data stream	
S60		2001	4T65AWD	ABS	Actuation	
S60		2001	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
S60		2001	4T65AWD	ABS	Special functions	Calibration
S60		2001	4T65AWD	SRS	Sys. Info.	
S60		2001	4T65AWD	SRS	Read code	
S60		2001	4T65AWD	SRS	Clear code	
S60		2001	4T65AWD	SRS	Data stream	
S60		2001	4T65AWD	SRS	Freeze frame	
S60		2001	4T65AWD	CEM	Sys. Info.	
S60		2001	4T65AWD	CEM	Read code	
S60		2001	4T65AWD	CEM	Clear code	
S60		2001	4T65AWD	CEM	Data stream	
S60		2001	4T65AWD	CEM	Actuation	
S60		2001	4T65AWD	CEM	Special functions	Reading alarm cause(*)
S60		2001	4T65AWD	CEM	Special functions	Resetting the factory settings
S60		2001	4T65AWD	UEM	Sys. Info.	
S60		2001	4T65AWD	UEM	Read code	
S60		2001	4T65AWD	UEM	Clear code	
S60		2001	4T65AWD	UEM	Data stream	
S60		2001	4T65AWD	UEM	Actuation	
S60		2001	4T65AWD	UEM	Special functions	Configuration of the siren
S60		2001	4T65AWD	UEM	Special functions	Programming the control unit
S60		2001	4T65AWD	UEM	Special functions	Reading the programmed values
S60		2001	4T65AWD	REM	Sys. Info.	
S60		2001	4T65AWD	REM	Read code	
S60		2001	4T65AWD	REM	Clear code	
S60		2001	4T65AWD	REM	Data stream	
S60		2001	4T65AWD	REM	Actuation	
S60		2001	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S60		2001	4T65AWD	DIM	Sys. Info.	
S60		2001	4T65AWD	DIM	Read code	
S60		2001	4T65AWD	DIM	Clear code	
S60		2001	4T65AWD	DIM	Data stream	
S60		2001	4T65AWD	DIM	Actuation	
S60		2001	4T65AWD	DIM	Freeze frame	
S60		2001	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S60		2001	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
S60		2001	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
S60		2001	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
S60		2001	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
S60		2001	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
S60		2001	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
S60		2001	4T65AWD	DIM	Special functions	Programming of clock (*)
S60		2001	4T65AWD	DIM	Special functions	Programming of zeros (*)
S60		2001	4T65AWD	DIM	Special functions	Programming parking brake warning
S60		2001	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S60		2001	4T65AWD	DIM	Special functions	Programming instrument lighting
S60		2001	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
S60		2001	4T65AWD	DIM	Special functions	Display of DSTC message
S60		2001	4T65AWD	DIM	Special functions	Read out programmed values
S60		2001	4T65AWD	PDM	Sys. Info.	
S60		2001	4T65AWD	PDM	Read code	
S60		2001	4T65AWD	PDM	Clear code	
S60		2001	4T65AWD	PDM	Data stream	
S60		2001	4T65AWD	PDM	Actuation	
S60		2001	4T65AWD	PDM	Special functions	Initialize the window(*)
S60		2001	4T65AWD	PSM	Sys. Info.	
S60		2001	4T65AWD	PSM	Read code	
S60		2001	4T65AWD	PSM	Clear code	
S60		2001	4T65AWD	PSM	Data stream	
S60		2001	4T65AWD	PSM	Actuation	
S60		2001	4T65AWD	DDM	Sys. Info.	

model	year	type	system	function	subfunction	
S60		2001	4T65AWD	DDM	Read code	
S60		2001	4T65AWD	DDM	Clear code	
S60		2001	4T65AWD	DDM	Data stream	
S60		2001	4T65AWD	DDM	Actuation	
S60		2001	4T65AWD	DDM	Special functions	Initialize the window(*)
S60		2001	4T65AWD	CCM	Sys. Info.	
S60		2001	4T65AWD	CCM	Read code	
S60		2001	4T65AWD	CCM	Clear code	
S60		2001	4T65AWD	CCM	Data stream	
S60		2001	4T65AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S60		2001	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
S60		2001	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S60		2001	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S60		2001	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
S60		2001	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S60		2001	4T65AWD	CCM	Special functions	Programming the seat temperature
S60		2001	4T65AWD	PHM	Sys. Info.	
S60		2001	4T65AWD	PHM	Read code	
S60		2001	4T65AWD	PHM	Clear code	
S60		2001	4T65AWD	PHM	Data stream	
S60		2001	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
S60		2001	4T65AWD	AUM	Sys. Info.	
S60		2001	4T65AWD	AUM	Read code	
S60		2001	4T65AWD	AUM	Clear code	
S60		2001	4T65AWD	AUM	Data stream	
S60		2001	4T65AWD	SWM	Sys. Info.	
S60		2001	4T65AWD	SWM	Read code	
S60		2001	4T65AWD	SWM	Clear code	
S60		2001	4T65AWD	SWM	Data stream	
S60		2001	4T65AWD	SAS	Sys. Info.	
S60		2001	4T65AWD	SAS	Read code	
S60		2001	4T65AWD	SAS	Clear code	
S60		2001	4T65AWD	SAS	Data stream	
S60		2001	4T65AWD	RTI	Sys. Info.	
S60		2001	4T65AWD	RTI	Read code	
S60		2001	4T65AWD	RTI	Clear code	
S60		2001	4T65AWD	AEM	Sys. Info.	
S60		2001	4T65AWD	AEM	Read code	
S60		2001	4T65AWD	AEM	Clear code	
S60		2001	4T65AWD	AEM	Data stream	
S60		2001	4T65AWD	AEM	Actuation	
S60		2001	4T65AWD	CPM	Sys. Info.	
S60		2001	4T65AWD	CPM	Data stream	
S60		2001	4T65AWD	CPM	Special functions	Programming the additional and parking heater
S60		2001	4T65AWD	ETM	Sys. Info.	
S60		2001	4T65AWD	ETM	Data stream	
S60		2002	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S60		2002	B5244S	ECM	Sys. Info.	
S60		2002	B5244S	ECM	Read code	
S60		2002	B5244S	ECM	Clear code	
S60		2002	B5244S	ECM	Data stream	
S60		2002	B5244S	ECM	Actuation	
S60		2002	B5244S	ECM	Special functions	Quick test of the fuel tank system
S60		2002	B6304S3	ECM	Sys. Info.	
S60		2002	B6304S3	ECM	Read code	
S60		2002	B6304S3	ECM	Clear code	
S60		2002	B6304S3	ECM	Data stream	
S60		2002	B6304S3	ECM	Actuation	
S60		2002	B6294T	ECM	Sys. Info.	
S60		2002	B6294T	ECM	Read code	
S60		2002	B6294T	ECM	Clear code	
S60		2002	B6294T	ECM	Data stream	
S60		2002	B6294T	ECM	Actuation	
S60		2002	B6294T	ECM	Special functions	Resetting the adaptation values
S60		2002	B6284T	ECM	Sys. Info.	
S60		2002	B6284T	ECM	Read code	
S60		2002	B6284T	ECM	Clear code	
S60		2002	B6284T	ECM	Data stream	
S60		2002	B6284T	ECM	Actuation	
S60		2002	B5204T4	ECM	Sys. Info.	
S60		2002	B5204T4	ECM	Read code	
S60		2002	B5204T4	ECM	Clear code	
S60		2002	B5204T4	ECM	Data stream	
S60		2002	B5204T4	ECM	Actuation	
S60		2002	B5204T3	ECM	Sys. Info.	
S60		2002	B5204T3	ECM	Read code	

model	year	type	system	function	subfunction
S60		2002 B5204T3	ECM	Clear code	
S60		2002 B5204T3	ECM	Data stream	
S60		2002 B5204T3	ECM	Actuation	
S60		2002 B5244SG	ECM	Sys. Info.	
S60		2002 B5244SG	ECM	Read code	
S60		2002 B5244SG	ECM	Clear code	
S60		2002 B5244SG	ECM	Data stream	
S60		2002 B5244SG	ECM	Actuation	
S60		2002 B6294S2	ECM	Sys. Info.	
S60		2002 B6294S2	ECM	Read code	
S60		2002 B6294S2	ECM	Clear code	
S60		2002 B6294S2	ECM	Data stream	
S60		2002 B6294S2	ECM	Actuation	
S60		2002 B5244S2	ECM	Sys. Info.	
S60		2002 B5244S2	ECM	Read code	
S60		2002 B5244S2	ECM	Clear code	
S60		2002 B5244S2	ECM	Data stream	
S60		2002 B5244S2	ECM	Actuation	
S60		2002 B5254T2	ECM	Sys. Info.	
S60		2002 B5254T2	ECM	Read code	
S60		2002 B5254T2	ECM	Clear code	
S60		2002 B5254T2	ECM	Data stream	
S60		2002 B5254T2	ECM	Actuation	
S60		2002 B5254T2	ECM	Special functions	Resetting the adaptation values
S60		2002 B5234T3	ECM	Sys. Info.	
S60		2002 B5234T3	ECM	Read code	
S60		2002 B5234T3	ECM	Clear code	
S60		2002 B5234T3	ECM	Data stream	
S60		2002 B5234T3	ECM	Actuation	
S60		2002 B5234T3	ECM	Special functions	Resetting the adaptation values
S60		2002 B5204T5	ECM	Sys. Info.	
S60		2002 B5204T5	ECM	Read code	
S60		2002 B5204T5	ECM	Clear code	
S60		2002 B5204T5	ECM	Data stream	
S60		2002 B5204T5	ECM	Actuation	
S60		2002 B5254T4	ECM	Sys. Info.	
S60		2002 B5254T4	ECM	Read code	
S60		2002 B5254T4	ECM	Clear code	
S60		2002 B5254T4	ECM	Data stream	
S60		2002 B5254T4	ECM	Actuation	
S60		2002 B6294S	ECM	Sys. Info.	
S60		2002 B6294S	ECM	Read code	
S60		2002 B6294S	ECM	Clear code	
S60		2002 B6294S	ECM	Data stream	
S60		2002 B6294S	ECM	Actuation	
S60		2002 B5244T7	ECM	Sys. Info.	
S60		2002 B5244T7	ECM	Read code	
S60		2002 B5244T7	ECM	Clear code	
S60		2002 B5244T7	ECM	Data stream	
S60		2002 B5244T7	ECM	Actuation	
S60		2002 B5244T7	ECM	Special functions	Resetting the adaptation values
S60		2002 B5234T7	ECM	Sys. Info.	
S60		2002 B5234T7	ECM	Read code	
S60		2002 B5234T7	ECM	Clear code	
S60		2002 B5234T7	ECM	Data stream	
S60		2002 B5234T7	ECM	Actuation	
S60		2002 B5234T7	ECM	Special functions	Resetting the adaptation values
S60		2002 B5234T7	ECM	Special functions	Quick test of Exhaust camshaft control
S60		2002 D5244T	Diesel Eng	Sys. Info.	
S60		2002 D5244T	Diesel Eng	Read code	
S60		2002 D5244T	Diesel Eng	Clear code	
S60		2002 D5244T	Diesel Eng	Data stream	
S60		2002 D5244T	Diesel Eng	Actuation	
S60		2002 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2002 D5252T	Diesel Eng	Sys. Info.	
S60		2002 D5252T	Diesel Eng	Read code	
S60		2002 D5252T	Diesel Eng	Clear code	
S60		2002 D5252T	Diesel Eng	Data stream	
S60		2002 D5252T	Diesel Eng	Actuation	
S60		2002 D5252T	Diesel Eng	Special functions	Programming the idle speed
S60		2002 AW55-50SN	TCM	Sys. Info.	
S60		2002 AW55-50SN	TCM	Read code	
S60		2002 AW55-50SN	TCM	Clear code	
S60		2002 AW55-50SN	TCM	Data stream	
S60		2002 AW55-50SN	TCM	Actuation	
S60		2002 AW55-50SN	TCM	Special functions	Reset adaptation to zero
S60		2002 AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2002 AW55-50SN	TCM	Special functions	Control module adaptation

model	year	type	system	function	subfunction
S60		2002 AW55-50SN	TCM	Special functions	Activating gear indication
S60		2002 4T65EV-GT	TCM	Sys. Info.	
S60		2002 4T65EV-GT	TCM	Read code	
S60		2002 4T65EV-GT	TCM	Clear code	
S60		2002 4T65EV-GT	TCM	Data stream	
S60		2002 4T65EV-GT	TCM	Actuation	
S60		2002 4T65EV-GT	TCM	Special functions	Reset adaptation to zero
S60		2002 4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2002 AW50-42	TCM	Sys. Info.	
S60		2002 AW50-42	TCM	Read code	
S60		2002 AW50-42	TCM	Clear code	
S60		2002 AW50-42	TCM	Data stream	
S60		2002 AW50-42	TCM	Actuation	
S60		2002 AW50-42	TCM	Special functions	Reset adaptation to zero
S60		2002 AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2002 AW50/51AW D	TCM	Sys. Info.	
S60		2002 AW50/51AW D	TCM	Read code	
S60		2002 AW50/51AW D	TCM	Clear code	
S60		2002 AW50/51AW D	TCM	Data stream	
S60		2002 AW50/51AW D	TCM	Actuation	
S60		2002 AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S60		2002 AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2002 TF-80SC	TCM	Sys. Info.	
S60		2002 TF-80SC	TCM	Read code	
S60		2002 TF-80SC	TCM	Clear code	
S60		2002 TF-80SC	TCM	Data stream	
S60		2002 TF-80SC	TCM	Actuation	
S60		2002 TF-80SC	TCM	Special functions	Resetting the adaptation
S60		2002 TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S60		2002 4T65EV	TCM	Sys. Info.	
S60		2002 4T65EV	TCM	Read code	
S60		2002 4T65EV	TCM	Clear code	
S60		2002 4T65EV	TCM	Data stream	
S60		2002 4T65EV	TCM	Actuation	
S60		2002 4T65AWD	TCM	Sys. Info.	
S60		2002 4T65AWD	TCM	Read code	
S60		2002 4T65AWD	TCM	Clear code	
S60		2002 4T65AWD	TCM	Data stream	
S60		2002 4T65AWD	TCM	Actuation	
S60		2002 4T65AWD	TCM	Special functions	Reset adaptation to zero
S60		2002 4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2002 4T65AWD	ABS	Sys. Info.	
S60		2002 4T65AWD	ABS	Read code	
S60		2002 4T65AWD	ABS	Clear code	
S60		2002 4T65AWD	ABS	Data stream	
S60		2002 4T65AWD	ABS	Actuation	
S60		2002 4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
S60		2002 4T65AWD	ABS	Special functions	Calibration
S60		2002 4T65AWD	SRS	Sys. Info.	
S60		2002 4T65AWD	SRS	Read code	
S60		2002 4T65AWD	SRS	Clear code	
S60		2002 4T65AWD	SRS	Data stream	
S60		2002 4T65AWD	SRS	Freeze frame	
S60		2002 4T65AWD	CEM	Sys. Info.	
S60		2002 4T65AWD	CEM	Read code	
S60		2002 4T65AWD	CEM	Clear code	
S60		2002 4T65AWD	CEM	Data stream	
S60		2002 4T65AWD	CEM	Actuation	
S60		2002 4T65AWD	CEM	Special functions	Reading alarm cause(*)
S60		2002 4T65AWD	CEM	Special functions	Resetting the factory settings
S60		2002 4T65AWD	UEM	Sys. Info.	
S60		2002 4T65AWD	UEM	Read code	
S60		2002 4T65AWD	UEM	Clear code	
S60		2002 4T65AWD	UEM	Data stream	
S60		2002 4T65AWD	UEM	Actuation	
S60		2002 4T65AWD	UEM	Special functions	Configuration of the siren
S60		2002 4T65AWD	UEM	Special functions	Programming the control unit
S60		2002 4T65AWD	UEM	Special functions	Reading the programmed values
S60		2002 4T65AWD	REM	Sys. Info.	
S60		2002 4T65AWD	REM	Read code	
S60		2002 4T65AWD	REM	Clear code	



model	year	type	system	function	subfunction	
S60		2002	4T65AWD	REM	Data stream	
S60		2002	4T65AWD	REM	Actuation	
S60		2002	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S60		2002	4T65AWD	DIM	Sys. Info.	
S60		2002	4T65AWD	DIM	Read code	
S60		2002	4T65AWD	DIM	Clear code	
S60		2002	4T65AWD	DIM	Data stream	
S60		2002	4T65AWD	DIM	Actuation	
S60		2002	4T65AWD	DIM	Freeze frame	
S60		2002	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S60		2002	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
S60		2002	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
S60		2002	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
S60		2002	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
S60		2002	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
S60		2002	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
S60		2002	4T65AWD	DIM	Special functions	Programming of clock (*)
S60		2002	4T65AWD	DIM	Special functions	Programming of zeros (*)
S60		2002	4T65AWD	DIM	Special functions	Programming parking brake warning
S60		2002	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S60		2002	4T65AWD	DIM	Special functions	Programming instrument lighting
S60		2002	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
S60		2002	4T65AWD	DIM	Special functions	Display of DSTC message
S60		2002	4T65AWD	DIM	Special functions	Read out programmed values
S60		2002	4T65AWD	PDM	Sys. Info.	
S60		2002	4T65AWD	PDM	Read code	
S60		2002	4T65AWD	PDM	Clear code	
S60		2002	4T65AWD	PDM	Data stream	
S60		2002	4T65AWD	PDM	Actuation	
S60		2002	4T65AWD	PDM	Special functions	Initialize the window(*)
S60		2002	4T65AWD	PSM	Sys. Info.	
S60		2002	4T65AWD	PSM	Read code	
S60		2002	4T65AWD	PSM	Clear code	
S60		2002	4T65AWD	PSM	Data stream	
S60		2002	4T65AWD	PSM	Actuation	
S60		2002	4T65AWD	DDM	Sys. Info.	
S60		2002	4T65AWD	DDM	Read code	
S60		2002	4T65AWD	DDM	Clear code	
S60		2002	4T65AWD	DDM	Data stream	
S60		2002	4T65AWD	DDM	Actuation	
S60		2002	4T65AWD	DDM	Special functions	Initialize the window(*)
S60		2002	4T65AWD	CCM	Sys. Info.	
S60		2002	4T65AWD	CCM	Read code	
S60		2002	4T65AWD	CCM	Clear code	
S60		2002	4T65AWD	CCM	Data stream	
S60		2002	4T65AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S60		2002	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
S60		2002	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S60		2002	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S60		2002	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
S60		2002	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S60		2002	4T65AWD	CCM	Special functions	Programming the seat temperature
S60		2002	4T65AWD	PHM	Sys. Info.	
S60		2002	4T65AWD	PHM	Read code	
S60		2002	4T65AWD	PHM	Clear code	
S60		2002	4T65AWD	PHM	Data stream	
S60		2002	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
S60		2002	4T65AWD	AUM	Sys. Info.	
S60		2002	4T65AWD	AUM	Read code	
S60		2002	4T65AWD	AUM	Clear code	
S60		2002	4T65AWD	AUM	Data stream	
S60		2002	4T65AWD	SWM	Sys. Info.	
S60		2002	4T65AWD	SWM	Read code	
S60		2002	4T65AWD	SWM	Clear code	
S60		2002	4T65AWD	SWM	Data stream	
S60		2002	4T65AWD	SAS	Sys. Info.	
S60		2002	4T65AWD	SAS	Read code	
S60		2002	4T65AWD	SAS	Clear code	
S60		2002	4T65AWD	SAS	Data stream	
S60		2002	4T65AWD	RTI	Sys. Info.	
S60		2002	4T65AWD	RTI	Read code	
S60		2002	4T65AWD	RTI	Clear code	
S60		2002	4T65AWD	AEM	Sys. Info.	
S60		2002	4T65AWD	AEM	Read code	
S60		2002	4T65AWD	AEM	Clear code	

model	year	type	system	function	subfunction	
S60		2002	4T65AWD	AEM	Data stream	
S60		2002	4T65AWD	AEM	Actuation	
S60		2002	4T65AWD	CPM	Sys. Info.	
S60		2002	4T65AWD	CPM	Data stream	
S60		2002	4T65AWD	CPM	Special functions	Programming the additional and parking heater
S60		2002	4T65AWD	ETM	Sys. Info.	
S60		2002	4T65AWD	ETM	Data stream	
S60		2003	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S60		2003	B5244S	ECM	Sys. Info.	
S60		2003	B5244S	ECM	Read code	
S60		2003	B5244S	ECM	Clear code	
S60		2003	B5244S	ECM	Data stream	
S60		2003	B5244S	ECM	Actuation	
S60		2003	B6304S3	ECM	Sys. Info.	
S60		2003	B6304S3	ECM	Read code	
S60		2003	B6304S3	ECM	Clear code	
S60		2003	B6304S3	ECM	Data stream	
S60		2003	B6304S3	ECM	Actuation	
S60		2003	B6294T	ECM	Sys. Info.	
S60		2003	B6294T	ECM	Read code	
S60		2003	B6294T	ECM	Clear code	
S60		2003	B6294T	ECM	Data stream	
S60		2003	B6294T	ECM	Actuation	
S60		2003	B6294T	ECM	Special functions	Resetting the adaptation values
S60		2003	B6284T	ECM	Sys. Info.	
S60		2003	B6284T	ECM	Read code	
S60		2003	B6284T	ECM	Clear code	
S60		2003	B6284T	ECM	Data stream	
S60		2003	B6284T	ECM	Actuation	
S60		2003	B5204T4	ECM	Sys. Info.	
S60		2003	B5204T4	ECM	Read code	
S60		2003	B5204T4	ECM	Clear code	
S60		2003	B5204T4	ECM	Data stream	
S60		2003	B5204T4	ECM	Actuation	
S60		2003	B5204T3	ECM	Sys. Info.	
S60		2003	B5204T3	ECM	Read code	
S60		2003	B5204T3	ECM	Clear code	
S60		2003	B5204T3	ECM	Data stream	
S60		2003	B5204T3	ECM	Actuation	
S60		2003	B5244SG	ECM	Sys. Info.	
S60		2003	B5244SG	ECM	Read code	
S60		2003	B5244SG	ECM	Clear code	
S60		2003	B5244SG	ECM	Data stream	
S60		2003	B5244SG	ECM	Actuation	
S60		2003	B6294S2	ECM	Sys. Info.	
S60		2003	B6294S2	ECM	Read code	
S60		2003	B6294S2	ECM	Clear code	
S60		2003	B6294S2	ECM	Data stream	
S60		2003	B6294S2	ECM	Actuation	
S60		2003	B5244S2	ECM	Sys. Info.	
S60		2003	B5244S2	ECM	Read code	
S60		2003	B5244S2	ECM	Clear code	
S60		2003	B5244S2	ECM	Data stream	
S60		2003	B5244S2	ECM	Actuation	
S60		2003	B5244S6	ECM	Sys. Info.	
S60		2003	B5244S6	ECM	Read code	
S60		2003	B5244S6	ECM	Clear code	
S60		2003	B5244S6	ECM	Data stream	
S60		2003	B5244S6	ECM	Actuation	
S60		2003	B5254T2	ECM	Sys. Info.	
S60		2003	B5254T2	ECM	Read code	
S60		2003	B5254T2	ECM	Clear code	
S60		2003	B5254T2	ECM	Data stream	
S60		2003	B5254T2	ECM	Actuation	
S60		2003	B5254T2	ECM	Special functions	Resetting the adaptation values
S60		2003	B5234T3	ECM	Sys. Info.	
S60		2003	B5234T3	ECM	Read code	
S60		2003	B5234T3	ECM	Clear code	
S60		2003	B5234T3	ECM	Data stream	
S60		2003	B5234T3	ECM	Actuation	
S60		2003	B5204T5	ECM	Sys. Info.	
S60		2003	B5204T5	ECM	Read code	
S60		2003	B5204T5	ECM	Clear code	
S60		2003	B5204T5	ECM	Data stream	
S60		2003	B5204T5	ECM	Actuation	
S60		2003	B5204T5	ECM	Special functions	Quick test of Exhaust camshaft control
S60		2003	B5204T5	ECM	Special functions	Quick test of intake camshaft control

model	year	type	system	function	subfunction
S60		2003 B5254T4	ECM	Sys. Info.	
S60		2003 B5254T4	ECM	Read code	
S60		2003 B5254T4	ECM	Clear code	
S60		2003 B5254T4	ECM	Data stream	
S60		2003 B5254T4	ECM	Actuation	
S60		2003 B6294S	ECM	Sys. Info.	
S60		2003 B6294S	ECM	Read code	
S60		2003 B6294S	ECM	Clear code	
S60		2003 B6294S	ECM	Data stream	
S60		2003 B6294S	ECM	Actuation	
S60		2003 B5244T7	ECM	Sys. Info.	
S60		2003 B5244T7	ECM	Read code	
S60		2003 B5244T7	ECM	Clear code	
S60		2003 B5244T7	ECM	Data stream	
S60		2003 B5244T7	ECM	Actuation	
S60		2003 B5244T7	ECM	Special functions	Resetting the adaptation values
S60		2003 B5234T7	ECM	Sys. Info.	
S60		2003 B5234T7	ECM	Read code	
S60		2003 B5234T7	ECM	Clear code	
S60		2003 B5234T7	ECM	Data stream	
S60		2003 B5234T7	ECM	Actuation	
S60		2003 B5234T7	ECM	Special functions	Resetting the adaptation values
S60		2003 D5244T	Diesel Eng	Sys. Info.	
S60		2003 D5244T	Diesel Eng	Read code	
S60		2003 D5244T	Diesel Eng	Clear code	
S60		2003 D5244T	Diesel Eng	Data stream	
S60		2003 D5244T	Diesel Eng	Actuation	
S60		2003 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2003 D5252T	Diesel Eng	Sys. Info.	
S60		2003 D5252T	Diesel Eng	Read code	
S60		2003 D5252T	Diesel Eng	Clear code	
S60		2003 D5252T	Diesel Eng	Data stream	
S60		2003 D5252T	Diesel Eng	Actuation	
S60		2003 D5252T	Diesel Eng	Special functions	Programming the idle speed
S60		2003 AW55-50SN	TCM	Sys. Info.	
S60		2003 AW55-50SN	TCM	Read code	
S60		2003 AW55-50SN	TCM	Clear code	
S60		2003 AW55-50SN	TCM	Data stream	
S60		2003 AW55-50SN	TCM	Actuation	
S60		2003 AW55-50SN	TCM	Special functions	Reset adaptation to zero
S60		2003 AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2003 AW55-50SN	TCM	Special functions	Control module adaptation
S60		2003 4T65EV-GT	TCM	Sys. Info.	
S60		2003 4T65EV-GT	TCM	Read code	
S60		2003 4T65EV-GT	TCM	Clear code	
S60		2003 4T65EV-GT	TCM	Data stream	
S60		2003 4T65EV-GT	TCM	Actuation	
S60		2003 4T65EV-GT	TCM	Special functions	Reset adaptation to zero
S60		2003 4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2003 AW50-42	TCM	Sys. Info.	
S60		2003 AW50-42	TCM	Read code	
S60		2003 AW50-42	TCM	Clear code	
S60		2003 AW50-42	TCM	Data stream	
S60		2003 AW50-42	TCM	Actuation	
S60		2003 AW50-42	TCM	Special functions	Reset adaptation to zero
S60		2003 AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2003 AW50/51AW D	TCM	Sys. Info.	
S60		2003 AW50/51AW D	TCM	Read code	
S60		2003 AW50/51AW D	TCM	Clear code	
S60		2003 AW50/51AW D	TCM	Data stream	
S60		2003 AW50/51AW D	TCM	Actuation	
S60		2003 AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S60		2003 AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2003 TF-80SC	TCM	Sys. Info.	
S60		2003 TF-80SC	TCM	Read code	
S60		2003 TF-80SC	TCM	Clear code	
S60		2003 TF-80SC	TCM	Data stream	
S60		2003 TF-80SC	TCM	Actuation	
S60		2003 TF-80SC	TCM	Special functions	Resetting the adaptation
S60		2003 TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S60		2003 4T65EV	TCM	Sys. Info.	

model	year	type	system	function	subfunction
S60		2003 4T65EV	TCM	Read code	
S60		2003 4T65EV	TCM	Clear code	
S60		2003 4T65EV	TCM	Data stream	
S60		2003 4T65EV	TCM	Actuation	
S60		2003 4T65AWD	TCM	Sys. Info.	
S60		2003 4T65AWD	TCM	Read code	
S60		2003 4T65AWD	TCM	Clear code	
S60		2003 4T65AWD	TCM	Data stream	
S60		2003 4T65AWD	TCM	Actuation	
S60		2003 4T65AWD	TCM	Special functions	Reset adaptation to zero
S60		2003 4T65AWD	TCM	Special functions	Resetting the counter for -- Gearbox oil Change(*)
S60		2003 4T65AWD	ABS	Sys. Info.	
S60		2003 4T65AWD	ABS	Read code	
S60		2003 4T65AWD	ABS	Clear code	
S60		2003 4T65AWD	ABS	Data stream	
S60		2003 4T65AWD	ABS	Actuation	
S60		2003 4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
S60		2003 4T65AWD	ABS	Special functions	Calibration
S60		2003 4T65AWD	SRS	Sys. Info.	
S60		2003 4T65AWD	SRS	Read code	
S60		2003 4T65AWD	SRS	Clear code	
S60		2003 4T65AWD	SRS	Data stream	
S60		2003 4T65AWD	SRS	Freeze frame	
S60		2003 4T65AWD	CEM	Sys. Info.	
S60		2003 4T65AWD	CEM	Read code	
S60		2003 4T65AWD	CEM	Clear code	
S60		2003 4T65AWD	CEM	Data stream	
S60		2003 4T65AWD	CEM	Actuation	
S60		2003 4T65AWD	CEM	Special functions	Reading alarm cause(*)
S60		2003 4T65AWD	CEM	Special functions	Resetting the factory settings
S60		2003 4T65AWD	UEM	Sys. Info.	
S60		2003 4T65AWD	UEM	Read code	
S60		2003 4T65AWD	UEM	Clear code	
S60		2003 4T65AWD	UEM	Data stream	
S60		2003 4T65AWD	UEM	Actuation	
S60		2003 4T65AWD	UEM	Special functions	Configuration of the siren
S60		2003 4T65AWD	UEM	Special functions	Programming the control unit
S60		2003 4T65AWD	UEM	Special functions	Reading the programmed values
S60		2003 4T65AWD	REM	Sys. Info.	
S60		2003 4T65AWD	REM	Read code	
S60		2003 4T65AWD	REM	Clear code	
S60		2003 4T65AWD	REM	Data stream	
S60		2003 4T65AWD	REM	Actuation	
S60		2003 4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S60		2003 4T65AWD	DIM	Sys. Info.	
S60		2003 4T65AWD	DIM	Read code	
S60		2003 4T65AWD	DIM	Clear code	
S60		2003 4T65AWD	DIM	Data stream	
S60		2003 4T65AWD	DIM	Actuation	
S60		2003 4T65AWD	DIM	Freeze frame	
S60		2003 4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S60		2003 4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
S60		2003 4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
S60		2003 4T65AWD	DIM	Special functions	Programming the service time parameters (*)
S60		2003 4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
S60		2003 4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
S60		2003 4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
S60		2003 4T65AWD	DIM	Special functions	Programming of clock (*)
S60		2003 4T65AWD	DIM	Special functions	Programming of zeros (*)
S60		2003 4T65AWD	DIM	Special functions	Programming parking brake warning
S60		2003 4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S60		2003 4T65AWD	DIM	Special functions	Programming instrument lighting
S60		2003 4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
S60		2003 4T65AWD	DIM	Special functions	Display of DSTC message
S60		2003 4T65AWD	DIM	Special functions	Read out programmed values
S60		2003 4T65AWD	PDM	Sys. Info.	
S60		2003 4T65AWD	PDM	Read code	
S60		2003 4T65AWD	PDM	Clear code	
S60		2003 4T65AWD	PDM	Data stream	
S60		2003 4T65AWD	PDM	Actuation	
S60		2003 4T65AWD	PDM	Special functions	Initialize the window(*)
S60		2003 4T65AWD	PSM	Sys. Info.	
S60		2003 4T65AWD	PSM	Read code	
S60		2003 4T65AWD	PSM	Clear code	
S60		2003 4T65AWD	PSM	Data stream	
S60		2003 4T65AWD	PSM	Actuation	

model	year	type	system	function	subfunction	
S60		2003	4T65AWD	DDM	Sys. Info.	
S60		2003	4T65AWD	DDM	Read code	
S60		2003	4T65AWD	DDM	Clear code	
S60		2003	4T65AWD	DDM	Data stream	
S60		2003	4T65AWD	DDM	Actuation	
S60		2003	4T65AWD	DDM	Special functions	Initialize the window(*)
S60		2003	4T65AWD	CCM	Sys. Info.	
S60		2003	4T65AWD	CCM	Read code	
S60		2003	4T65AWD	CCM	Clear code	
S60		2003	4T65AWD	CCM	Data stream	
S60		2003	4T65AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S60		2003	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
S60		2003	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S60		2003	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S60		2003	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
S60		2003	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S60		2003	4T65AWD	CCM	Special functions	Programming the seat temperature
S60		2003	4T65AWD	PHM	Sys. Info.	
S60		2003	4T65AWD	PHM	Read code	
S60		2003	4T65AWD	PHM	Clear code	
S60		2003	4T65AWD	PHM	Data stream	
S60		2003	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
S60		2003	4T65AWD	AUM	Sys. Info.	
S60		2003	4T65AWD	AUM	Read code	
S60		2003	4T65AWD	AUM	Clear code	
S60		2003	4T65AWD	AUM	Data stream	
S60		2003	4T65AWD	SWM	Sys. Info.	
S60		2003	4T65AWD	SWM	Read code	
S60		2003	4T65AWD	SWM	Clear code	
S60		2003	4T65AWD	SWM	Data stream	
S60		2003	4T65AWD	DEM	Sys. Info.	
S60		2003	4T65AWD	DEM	Read code	
S60		2003	4T65AWD	DEM	Clear code	
S60		2003	4T65AWD	DEM	Data stream	
S60		2003	4T65AWD	SAS	Sys. Info.	
S60		2003	4T65AWD	SAS	Read code	
S60		2003	4T65AWD	SAS	Clear code	
S60		2003	4T65AWD	SAS	Data stream	
S60		2003	4T65AWD	RTI	Sys. Info.	
S60		2003	4T65AWD	RTI	Read code	
S60		2003	4T65AWD	RTI	Clear code	
S60		2003	4T65AWD	AEM	Sys. Info.	
S60		2003	4T65AWD	AEM	Read code	
S60		2003	4T65AWD	AEM	Clear code	
S60		2003	4T65AWD	AEM	Data stream	
S60		2003	4T65AWD	AEM	Actuation	
S60		2003	4T65AWD	CPM	Sys. Info.	
S60		2003	4T65AWD	CPM	Data stream	
S60		2003	4T65AWD	CPM	Special functions	Programming the additional and parking heater
S60		2003	4T65AWD	ETM	Sys. Info.	
S60		2003	4T65AWD	ETM	Data stream	
S60		2004	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S60		2004	B5244S	ECM	Sys. Info.	
S60		2004	B5244S	ECM	Read code	
S60		2004	B5244S	ECM	Clear code	
S60		2004	B5244S	ECM	Data stream	
S60		2004	B5244S	ECM	Actuation	
S60		2004	B6304S3	ECM	Sys. Info.	
S60		2004	B6304S3	ECM	Read code	
S60		2004	B6304S3	ECM	Clear code	
S60		2004	B6304S3	ECM	Data stream	
S60		2004	B6304S3	ECM	Actuation	
S60		2004	B6294T	ECM	Sys. Info.	
S60		2004	B6294T	ECM	Read code	
S60		2004	B6294T	ECM	Clear code	
S60		2004	B6294T	ECM	Data stream	
S60		2004	B6294T	ECM	Actuation	
S60		2004	B6294T	ECM	Special functions	Resetting the adaptation values
S60		2004	B6284T	ECM	Sys. Info.	
S60		2004	B6284T	ECM	Read code	
S60		2004	B6284T	ECM	Clear code	
S60		2004	B6284T	ECM	Data stream	
S60		2004	B6284T	ECM	Actuation	
S60		2004	B5204T4	ECM	Sys. Info.	
S60		2004	B5204T4	ECM	Read code	
S60		2004	B5204T4	ECM	Clear code	

model	year	type	system	function	subfunction	
S60		2004	B5204T4	ECM	Data stream	
S60		2004	B5204T4	ECM	Actuation	
S60		2004	B5204T3	ECM	Sys. Info.	
S60		2004	B5204T3	ECM	Read code	
S60		2004	B5204T3	ECM	Clear code	
S60		2004	B5204T3	ECM	Data stream	
S60		2004	B5204T3	ECM	Actuation	
S60		2004	B5244SG	ECM	Sys. Info.	
S60		2004	B5244SG	ECM	Read code	
S60		2004	B5244SG	ECM	Clear code	
S60		2004	B5244SG	ECM	Data stream	
S60		2004	B5244SG	ECM	Actuation	
S60		2004	B6294S2	ECM	Sys. Info.	
S60		2004	B6294S2	ECM	Read code	
S60		2004	B6294S2	ECM	Clear code	
S60		2004	B6294S2	ECM	Data stream	
S60		2004	B6294S2	ECM	Actuation	
S60		2004	B5244S2	ECM	Sys. Info.	
S60		2004	B5244S2	ECM	Read code	
S60		2004	B5244S2	ECM	Clear code	
S60		2004	B5244S2	ECM	Data stream	
S60		2004	B5244S2	ECM	Actuation	
S60		2004	B5254T2	ECM	Sys. Info.	
S60		2004	B5254T2	ECM	Read code	
S60		2004	B5254T2	ECM	Clear code	
S60		2004	B5254T2	ECM	Data stream	
S60		2004	B5254T2	ECM	Actuation	
S60		2004	B5254T2	ECM	Special functions	Resetting the adaptation values
S60		2004	B5234T3	ECM	Sys. Info.	
S60		2004	B5234T3	ECM	Read code	
S60		2004	B5234T3	ECM	Clear code	
S60		2004	B5234T3	ECM	Data stream	
S60		2004	B5234T3	ECM	Actuation	
S60		2004	B5204T5	ECM	Sys. Info.	
S60		2004	B5204T5	ECM	Read code	
S60		2004	B5204T5	ECM	Clear code	
S60		2004	B5204T5	ECM	Data stream	
S60		2004	B5204T5	ECM	Actuation	
S60		2004	B5254T4	ECM	Sys. Info.	
S60		2004	B5254T4	ECM	Read code	
S60		2004	B5254T4	ECM	Clear code	
S60		2004	B5254T4	ECM	Data stream	
S60		2004	B5254T4	ECM	Actuation	
S60		2004	B5254T4	ECM	Special functions	Quick test of Exhaust camshaft control
S60		2004	B5254T4	ECM	Special functions	Quick test of intake camshaft control
S60		2004	B6294S	ECM	Sys. Info.	
S60		2004	B6294S	ECM	Read code	
S60		2004	B6294S	ECM	Clear code	
S60		2004	B6294S	ECM	Data stream	
S60		2004	B6294S	ECM	Actuation	
S60		2004	B5244T7	ECM	Sys. Info.	
S60		2004	B5244T7	ECM	Read code	
S60		2004	B5244T7	ECM	Clear code	
S60		2004	B5244T7	ECM	Data stream	
S60		2004	B5244T7	ECM	Actuation	
S60		2004	B5244T7	ECM	Special functions	Resetting the adaptation values
S60		2004	B5234T7	ECM	Sys. Info.	
S60		2004	B5234T7	ECM	Read code	
S60		2004	B5234T7	ECM	Clear code	
S60		2004	B5234T7	ECM	Data stream	
S60		2004	B5234T7	ECM	Actuation	
S60		2004	B5234T7	ECM	Special functions	Resetting the adaptation values
S60		2004	D5244T	Diesel Eng	Sys. Info.	
S60		2004	D5244T	Diesel Eng	Read code	
S60		2004	D5244T	Diesel Eng	Clear code	
S60		2004	D5244T	Diesel Eng	Data stream	
S60		2004	D5244T	Diesel Eng	Actuation	
S60		2004	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2004	D5252T	Diesel Eng	Sys. Info.	
S60		2004	D5252T	Diesel Eng	Read code	
S60		2004	D5252T	Diesel Eng	Clear code	
S60		2004	D5252T	Diesel Eng	Data stream	
S60		2004	D5252T	Diesel Eng	Actuation	
S60		2004	D5252T	Diesel Eng	Special functions	Programming the idle speed
S60		2004	AW55-50SN	TCM	Sys. Info.	
S60		2004	AW55-50SN	TCM	Read code	
S60		2004	AW55-50SN	TCM	Clear code	
S60		2004	AW55-50SN	TCM	Data stream	

model	year	type	system	function	subfunction
S60		2004 AW55-50SN	TCM	Actuation	
S60		2004 AW55-50SN	TCM	Special functions	Reset adaptation to zero
S60		2004 AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2004 AW55-50SN	TCM	Special functions	Control module adaptation
S60		2004 4T65EV-GT	TCM	Sys. Info.	
S60		2004 4T65EV-GT	TCM	Read code	
S60		2004 4T65EV-GT	TCM	Clear code	
S60		2004 4T65EV-GT	TCM	Data stream	
S60		2004 4T65EV-GT	TCM	Actuation	
S60		2004 4T65EV-GT	TCM	Special functions	Reset adaptation to zero
S60		2004 4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2004 AW50-42	TCM	Sys. Info.	
S60		2004 AW50-42	TCM	Read code	
S60		2004 AW50-42	TCM	Clear code	
S60		2004 AW50-42	TCM	Data stream	
S60		2004 AW50-42	TCM	Actuation	
S60		2004 AW50-42	TCM	Special functions	Reset adaptation to zero
S60		2004 AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2004 AW50/51AW D	TCM	Sys. Info.	
S60		2004 AW50/51AW D	TCM	Read code	
S60		2004 AW50/51AW D	TCM	Clear code	
S60		2004 AW50/51AW D	TCM	Data stream	
S60		2004 AW50/51AW D	TCM	Actuation	
S60		2004 AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S60		2004 AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2004 TF-80SC	TCM	Sys. Info.	
S60		2004 TF-80SC	TCM	Read code	
S60		2004 TF-80SC	TCM	Clear code	
S60		2004 TF-80SC	TCM	Data stream	
S60		2004 TF-80SC	TCM	Actuation	
S60		2004 TF-80SC	TCM	Special functions	Resetting the adaptation
S60		2004 TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S60		2004 4T65EV	TCM	Sys. Info.	
S60		2004 4T65EV	TCM	Read code	
S60		2004 4T65EV	TCM	Clear code	
S60		2004 4T65EV	TCM	Data stream	
S60		2004 4T65EV	TCM	Actuation	
S60		2004 4T65AWD	TCM	Sys. Info.	
S60		2004 4T65AWD	TCM	Read code	
S60		2004 4T65AWD	TCM	Clear code	
S60		2004 4T65AWD	TCM	Data stream	
S60		2004 4T65AWD	TCM	Actuation	
S60		2004 4T65AWD	TCM	Special functions	Reset adaptation to zero
S60		2004 4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2004 4T65AWD	ABS	Sys. Info.	
S60		2004 4T65AWD	ABS	Read code	
S60		2004 4T65AWD	ABS	Clear code	
S60		2004 4T65AWD	ABS	Data stream	
S60		2004 4T65AWD	ABS	Actuation	
S60		2004 4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
S60		2004 4T65AWD	ABS	Special functions	Calibration
S60		2004 4T65AWD	SRS	Sys. Info.	
S60		2004 4T65AWD	SRS	Read code	
S60		2004 4T65AWD	SRS	Clear code	
S60		2004 4T65AWD	SRS	Data stream	
S60		2004 4T65AWD	SRS	Freeze frame	
S60		2004 4T65AWD	CEM	Sys. Info.	
S60		2004 4T65AWD	CEM	Read code	
S60		2004 4T65AWD	CEM	Clear code	
S60		2004 4T65AWD	CEM	Data stream	
S60		2004 4T65AWD	CEM	Actuation	
S60		2004 4T65AWD	CEM	Special functions	Reading alarm cause(*)
S60		2004 4T65AWD	CEM	Special functions	Resetting the factory settings
S60		2004 4T65AWD	UEM	Sys. Info.	
S60		2004 4T65AWD	UEM	Read code	
S60		2004 4T65AWD	UEM	Clear code	
S60		2004 4T65AWD	UEM	Data stream	
S60		2004 4T65AWD	UEM	Actuation	
S60		2004 4T65AWD	UEM	Special functions	Configuration of the siren
S60		2004 4T65AWD	UEM	Special functions	Programming the control unit
S60		2004 4T65AWD	UEM	Special functions	Reading the programmed values

model	year	type	system	function	subfunction	
S60		2004	4T65AWD	REM	Sys. Info.	
S60		2004	4T65AWD	REM	Read code	
S60		2004	4T65AWD	REM	Clear code	
S60		2004	4T65AWD	REM	Data stream	
S60		2004	4T65AWD	REM	Actuation	
S60		2004	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S60		2004	4T65AWD	DIM	Sys. Info.	
S60		2004	4T65AWD	DIM	Read code	
S60		2004	4T65AWD	DIM	Clear code	
S60		2004	4T65AWD	DIM	Data stream	
S60		2004	4T65AWD	DIM	Actuation	
S60		2004	4T65AWD	DIM	Freeze frame	
S60		2004	4T65AWD	DIM	Special functions	Reseting the service reminder indicator(SRI) (*)
S60		2004	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
S60		2004	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
S60		2004	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
S60		2004	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
S60		2004	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
S60		2004	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
S60		2004	4T65AWD	DIM	Special functions	Programming of clock (*)
S60		2004	4T65AWD	DIM	Special functions	Programming of zeros (*)
S60		2004	4T65AWD	DIM	Special functions	Programming parking brake warning
S60		2004	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S60		2004	4T65AWD	DIM	Special functions	Programming instrument lighting
S60		2004	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
S60		2004	4T65AWD	DIM	Special functions	Display of DSTC message
S60		2004	4T65AWD	DIM	Special functions	Read out programmed values
S60		2004	4T65AWD	PDM	Sys. Info.	
S60		2004	4T65AWD	PDM	Read code	
S60		2004	4T65AWD	PDM	Clear code	
S60		2004	4T65AWD	PDM	Data stream	
S60		2004	4T65AWD	PDM	Actuation	
S60		2004	4T65AWD	PDM	Special functions	Initialize the window(*)
S60		2004	4T65AWD	PSM	Sys. Info.	
S60		2004	4T65AWD	PSM	Read code	
S60		2004	4T65AWD	PSM	Clear code	
S60		2004	4T65AWD	PSM	Data stream	
S60		2004	4T65AWD	PSM	Actuation	
S60		2004	4T65AWD	DDM	Sys. Info.	
S60		2004	4T65AWD	DDM	Read code	
S60		2004	4T65AWD	DDM	Clear code	
S60		2004	4T65AWD	DDM	Data stream	
S60		2004	4T65AWD	DDM	Actuation	
S60		2004	4T65AWD	DDM	Special functions	Initialize the window(*)
S60		2004	4T65AWD	CCM	Sys. Info.	
S60		2004	4T65AWD	CCM	Read code	
S60		2004	4T65AWD	CCM	Clear code	
S60		2004	4T65AWD	CCM	Data stream	
S60		2004	4T65AWD	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
S60		2004	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
S60		2004	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S60		2004	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S60		2004	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
S60		2004	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S60		2004	4T65AWD	CCM	Special functions	Programming the seat temperature
S60		2004	4T65AWD	PHM	Sys. Info.	
S60		2004	4T65AWD	PHM	Read code	
S60		2004	4T65AWD	PHM	Clear code	
S60		2004	4T65AWD	PHM	Data stream	
S60		2004	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
S60		2004	4T65AWD	AUM	Sys. Info.	
S60		2004	4T65AWD	AUM	Read code	
S60		2004	4T65AWD	AUM	Clear code	
S60		2004	4T65AWD	SWM	Sys. Info.	
S60		2004	4T65AWD	SWM	Read code	
S60		2004	4T65AWD	SWM	Clear code	
S60		2004	4T65AWD	SWM	Data stream	
S60		2004	4T65AWD	DEM	Sys. Info.	
S60		2004	4T65AWD	DEM	Read code	
S60		2004	4T65AWD	DEM	Clear code	
S60		2004	4T65AWD	DEM	Data stream	
S60		2004	4T65AWD	SAS	Sys. Info.	
S60		2004	4T65AWD	SAS	Read code	
S60		2004	4T65AWD	SAS	Clear code	
S60		2004	4T65AWD	SAS	Data stream	



model	year	type	system	function	subfunction	
S60		2004	4T65AWD	RTI	Sys. Info.	
S60		2004	4T65AWD	RTI	Read code	
S60		2004	4T65AWD	RTI	Clear code	
S60		2004	4T65AWD	AEM	Sys. Info.	
S60		2004	4T65AWD	AEM	Read code	
S60		2004	4T65AWD	AEM	Clear code	
S60		2004	4T65AWD	AEM	Data stream	
S60		2004	4T65AWD	AEM	Actuation	
S60		2004	4T65AWD	CPM	Sys. Info.	
S60		2004	4T65AWD	CPM	Data stream	
S60		2004	4T65AWD	CPM	Special functions	Programming the additional and parking heater
S60		2004	4T65AWD	ETM	Sys. Info.	
S60		2004	4T65AWD	ETM	Data stream	
S60		2005	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S60		2005	B5244S4	ECM	Sys. Info.	
S60		2005	B5244S4	ECM	Read code	
S60		2005	B5244S4	ECM	Clear code	
S60		2005	B5244S4	ECM	Data stream	
S60		2005	B5244S4	ECM	Actuation	
S60		2005	B5244S4	ECM	Special functions	Resetting the adaptation values
S60		2005	B5244S5	ECM	Sys. Info.	
S60		2005	B5244S5	ECM	Read code	
S60		2005	B5244S5	ECM	Clear code	
S60		2005	B5244S5	ECM	Data stream	
S60		2005	B5244S5	ECM	Actuation	
S60		2005	B5244S5	ECM	Special functions	Resetting the adaptation values
S60		2005	B5244S7	ECM	Sys. Info.	
S60		2005	B5244S7	ECM	Read code	
S60		2005	B5244S7	ECM	Clear code	
S60		2005	B5244S7	ECM	Data stream	
S60		2005	B5244S7	ECM	Actuation	
S60		2005	B4204S3	ECM	Sys. Info.	
S60		2005	B4204S3	ECM	Read code	
S60		2005	B4204S3	ECM	Clear code	
S60		2005	B4204S3	ECM	Data stream	
S60		2005	B4204S3	ECM	Actuation	
S60		2005	B5254T2	ECM	Sys. Info.	
S60		2005	B5254T2	ECM	Read code	
S60		2005	B5254T2	ECM	Clear code	
S60		2005	B5254T2	ECM	Data stream	
S60		2005	B5254T2	ECM	Actuation	
S60		2005	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2005	B5254T3	ECM	Sys. Info.	
S60		2005	B5254T3	ECM	Read code	
S60		2005	B5254T3	ECM	Clear code	
S60		2005	B5254T3	ECM	Data stream	
S60		2005	B5254T3	ECM	Actuation	
S60		2005	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2005	B5254T7	ECM	Sys. Info.	
S60		2005	B5254T7	ECM	Read code	
S60		2005	B5254T7	ECM	Clear code	
S60		2005	B5254T7	ECM	Data stream	
S60		2005	B5254T7	ECM	Actuation	
S60		2005	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2005	B5204T5	ECM	Sys. Info.	
S60		2005	B5204T5	ECM	Read code	
S60		2005	B5204T5	ECM	Clear code	
S60		2005	B5204T5	ECM	Data stream	
S60		2005	B5204T5	ECM	Actuation	
S60		2005	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2005	B6294T	ECM	Sys. Info.	
S60		2005	B6294T	ECM	Read code	
S60		2005	B6294T	ECM	Clear code	
S60		2005	B6294T	ECM	Data stream	
S60		2005	B6294T	ECM	Actuation	
S60		2005	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2005	B4164S3	ECM	Sys. Info.	
S60		2005	B4164S3	ECM	Read code	
S60		2005	B4164S3	ECM	Clear code	
S60		2005	B4164S3	ECM	Data stream	
S60		2005	B4164S3	ECM	Actuation	
S60		2005	B4164S3	ECM	Special functions	Resetting the adaptation values
S60		2005	B5244T5	ECM	Sys. Info.	
S60		2005	B5244T5	ECM	Read code	
S60		2005	B5244T5	ECM	Clear code	
S60		2005	B5244T5	ECM	Data stream	
S60		2005	B5244T5	ECM	Actuation	

model	year	type	system	function	subfunction
S60		2005 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2005 B4184S11	ECM	Sys. Info.	
S60		2005 B4184S11	ECM	Read code	
S60		2005 B4184S11	ECM	Clear code	
S60		2005 B4184S11	ECM	Data stream	
S60		2005 B4184S11	ECM	Actuation	
S60		2005 B4184S11	ECM	Special functions	Resetting the adaptation values
S60		2005 D5244T	Diesel Eng	Sys. Info.	
S60		2005 D5244T	Diesel Eng	Read code	
S60		2005 D5244T	Diesel Eng	Clear code	
S60		2005 D5244T	Diesel Eng	Data stream	
S60		2005 D5244T	Diesel Eng	Actuation	
S60		2005 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2005 D5244T4	Diesel Eng	Sys. Info.	
S60		2005 D5244T4	Diesel Eng	Read code	
S60		2005 D5244T4	Diesel Eng	Clear code	
S60		2005 D5244T4	Diesel Eng	Data stream	
S60		2005 D5244T4	Diesel Eng	Actuation	
S60		2005 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S60		2005 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2005 D5244T4	Diesel Eng	Special functions	Resetting counter oil
S60		2005 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S60		2005 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2005 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2005 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2005 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2005 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S60		2005 D5244T5	Diesel Eng	Sys. Info.	
S60		2005 D5244T5	Diesel Eng	Read code	
S60		2005 D5244T5	Diesel Eng	Clear code	
S60		2005 D5244T5	Diesel Eng	Data stream	
S60		2005 D5244T5	Diesel Eng	Actuation	
S60		2005 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S60		2005 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2005 D5244T5	Diesel Eng	Special functions	Resetting counter oil
S60		2005 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S60		2005 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2005 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2005 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2005 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2005 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S60		2005 D5244T8	Diesel Eng	Sys. Info.	
S60		2005 D5244T8	Diesel Eng	Read code	
S60		2005 D5244T8	Diesel Eng	Clear code	
S60		2005 D5244T8	Diesel Eng	Data stream	
S60		2005 D5244T8	Diesel Eng	Actuation	
S60		2005 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S60		2005 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2005 D5244T8	Diesel Eng	Special functions	Resetting counter oil
S60		2005 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S60		2005 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2005 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2005 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2005 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2005 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S60		2005 D4164T	Diesel Eng	Sys. Info.	
S60		2005 D4164T	Diesel Eng	Read code	
S60		2005 D4164T	Diesel Eng	Clear code	
S60		2005 D4164T	Diesel Eng	Data stream	
S60		2005 D4164T	Diesel Eng	Actuation	
S60		2005 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2005 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2005 D4164T	Diesel Eng	Special functions	Combustion of soot particles
S60		2005 D4204T	Diesel Eng	Sys. Info.	
S60		2005 D4204T	Diesel Eng	Read code	
S60		2005 D4204T	Diesel Eng	Clear code	
S60		2005 D4204T	Diesel Eng	Data stream	
S60		2005 D4204T	Diesel Eng	Actuation	
S60		2005 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2005 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S60		2005 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2005 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2005 D4204T	Diesel Eng	Special functions	Combustion of soot particles
S60		2005 AW55-50/51SN	TCM	Sys. Info.	
S60		2005 AW55-50/51SN	TCM	Read code	

model	year	type	system	function	subfunction
S60	2005	AW55-50/51SN	TCM	Clear code	
S60	2005	AW55-50/51SN	TCM	Data stream	
S60	2005	AW55-50/51SN	TCM	Actuation	
S60	2005	AW55-50/51SN	TCM	Freeze frame	
S60	2005	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S60	2005	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2005	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S60	2005	4T65AWD	TCM	Sys. Info.	
S60	2005	4T65AWD	TCM	Read code	
S60	2005	4T65AWD	TCM	Clear code	
S60	2005	4T65AWD	TCM	Data stream	
S60	2005	4T65AWD	TCM	Actuation	
S60	2005	4T65AWD	TCM	Special functions	Reset adaptation to zero
S60	2005	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2005	TF-80SC	TCM	Sys. Info.	
S60	2005	TF-80SC	TCM	Read code	
S60	2005	TF-80SC	TCM	Clear code	
S60	2005	TF-80SC	TCM	Data stream	
S60	2005	TF-80SC	TCM	Actuation	
S60	2005	TF-80SC	TCM	Special functions	Reset adaptation to zero
S60	2005	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2005	TF-80SC	TCM	Special functions	Calibration of position sensor
S60	2005	AW50/51AW D	TCM	Sys. Info.	
S60	2005	AW50/51AW D	TCM	Read code	
S60	2005	AW50/51AW D	TCM	Clear code	
S60	2005	AW50/51AW D	TCM	Data stream	
S60	2005	AW50/51AW D	TCM	Actuation	
S60	2005	AW50/51AW D	TCM	Freeze frame	
S60	2005	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S60	2005	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2005	AW50/51AW D	ABS	Sys. Info.	
S60	2005	AW50/51AW D	ABS	Read code	
S60	2005	AW50/51AW D	ABS	Clear code	
S60	2005	AW50/51AW D	ABS	Data stream	
S60	2005	AW50/51AW D	ABS	Actuation	
S60	2005	AW50/51AW D	ABS	Freeze frame	
S60	2005	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S60	2005	AW50/51AW D	ABS	Special functions	Reading off the configuration
S60	2005	AW50/51AW D	ABS	Special functions	Calibration
S60	2005	AW50/51AW D	SRS	Sys. Info.	
S60	2005	AW50/51AW D	SRS	Read code	
S60	2005	AW50/51AW D	SRS	Clear code	
S60	2005	AW50/51AW D	SRS	Data stream	
S60	2005	AW50/51AW D	SRS	Freeze frame	
S60	2005	AW50/51AW D	CEM	Sys. Info.	
S60	2005	AW50/51AW D	CEM	Read code	

model	year	type	system	function	subfunction
S60	2005	AW50/51AW D	CEM	Clear code	
S60	2005	AW50/51AW D	CEM	Data stream	
S60	2005	AW50/51AW D	CEM	Actuation	
S60	2005	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S60	2005	AW50/51AW D	CEM	Special functions	Programming control module
S60	2005	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S60	2005	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S60	2005	AW50/51AW D	CEM	Special functions	Resetting crash mode
S60	2005	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S60	2005	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S60	2005	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S60	2005	AW50/51AW D	CEM	Special functions	Ignition switch key position
S60	2005	AW50/51AW D	UEM	Sys. Info.	
S60	2005	AW50/51AW D	UEM	Read code	
S60	2005	AW50/51AW D	UEM	Clear code	
S60	2005	AW50/51AW D	UEM	Data stream	
S60	2005	AW50/51AW D	UEM	Actuation	
S60	2005	AW50/51AW D	UEM	Special functions	Configuration of the siren
S60	2005	AW50/51AW D	UEM	Special functions	Programming the control unit
S60	2005	AW50/51AW D	UEM	Special functions	Reading the programmed values
S60	2005	AW50/51AW D	REM	Sys. Info.	
S60	2005	AW50/51AW D	REM	Read code	
S60	2005	AW50/51AW D	REM	Clear code	
S60	2005	AW50/51AW D	REM	Data stream	
S60	2005	AW50/51AW D	REM	Actuation	
S60	2005	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S60	2005	AW50/51AW D	DIM	Sys. Info.	
S60	2005	AW50/51AW D	DIM	Read code	
S60	2005	AW50/51AW D	DIM	Clear code	
S60	2005	AW50/51AW D	DIM	Data stream	
S60	2005	AW50/51AW D	DIM	Actuation	
S60	2005	AW50/51AW D	DIM	Freeze frame	
S60	2005	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S60	2005	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S60	2005	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S60	2005	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S60	2005	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S60	2005	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S60	2005	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)

model	year	type	system	function	subfunction
S60	2005	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S60	2005	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S60	2005	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S60	2005	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal, seat belt reminder
S60	2005	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S60	2005	AW50/51AW D	DIM	Special functions	Programming text message, seatbelt reminder
S60	2005	AW50/51AW D	DIM	Special functions	Display of DSTC message
S60	2005	AW50/51AW D	DIM	Special functions	Read out programmed values
S60	2005	AW50/51AW D	PDM	Sys. Info.	
S60	2005	AW50/51AW D	PDM	Read code	
S60	2005	AW50/51AW D	PDM	Clear code	
S60	2005	AW50/51AW D	PDM	Data stream	
S60	2005	AW50/51AW D	PDM	Actuation	
S60	2005	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S60	2005	AW50/51AW D	PSM	Sys. Info.	
S60	2005	AW50/51AW D	PSM	Read code	
S60	2005	AW50/51AW D	PSM	Clear code	
S60	2005	AW50/51AW D	PSM	Data stream	
S60	2005	AW50/51AW D	PSM	Actuation	
S60	2005	AW50/51AW D	DDM	Sys. Info.	
S60	2005	AW50/51AW D	DDM	Read code	
S60	2005	AW50/51AW D	DDM	Clear code	
S60	2005	AW50/51AW D	DDM	Data stream	
S60	2005	AW50/51AW D	DDM	Actuation	
S60	2005	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S60	2005	AW50/51AW D	CCM	Sys. Info.	
S60	2005	AW50/51AW D	CCM	Read code	
S60	2005	AW50/51AW D	CCM	Clear code	
S60	2005	AW50/51AW D	CCM	Data stream	
S60	2005	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
S60	2005	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S60	2005	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S60	2005	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S60	2005	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S60	2005	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
S60	2005	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S60	2005	AW50/51AW D	PHM	Sys. Info.	
S60	2005	AW50/51AW D	PHM	Read code	
S60	2005	AW50/51AW D	PHM	Clear code	

model	year	type	system	function	subfunction
S60	2005	AW50/51AW D	PHM	Data stream	
S60	2005	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S60	2005	AW50/51AW D	AUM	Sys. Info.	
S60	2005	AW50/51AW D	AUM	Read code	
S60	2005	AW50/51AW D	AUM	Clear code	
S60	2005	AW50/51AW D	AUM	Data stream	
S60	2005	AW50/51AW D	DEM	Sys. Info.	
S60	2005	AW50/51AW D	DEM	Read code	
S60	2005	AW50/51AW D	DEM	Clear code	
S60	2005	AW50/51AW D	DEM	Data stream	
S60	2005	AW50/51AW D	SAS	Sys. Info.	
S60	2005	AW50/51AW D	SAS	Read code	
S60	2005	AW50/51AW D	SAS	Clear code	
S60	2005	AW50/51AW D	SAS	Data stream	
S60	2005	AW50/51AW D	RTI	Sys. Info.	
S60	2005	AW50/51AW D	RTI	Read code	
S60	2005	AW50/51AW D	RTI	Clear code	
S60	2005	AW50/51AW D	AEM	Sys. Info.	
S60	2005	AW50/51AW D	AEM	Read code	
S60	2005	AW50/51AW D	AEM	Clear code	
S60	2005	AW50/51AW D	AEM	Data stream	
S60	2005	AW50/51AW D	AEM	Actuation	
S60	2005	AW50/51AW D	CPM	Sys. Info.	
S60	2005	AW50/51AW D	CPM	Data stream	
S60	2005	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
S60	2005	AW50/51AW D	HCM	Sys. Info.	
S60	2005	AW50/51AW D	HCM	Read code	
S60	2005	AW50/51AW D	HCM	Clear code	
S60	2005	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S60	2005	AW50/51AW D	KVM	Sys. Info.	
S60	2005	AW50/51AW D	KVM	Read code	
S60	2005	AW50/51AW D	KVM	Clear code	
S60	2005	AW50/51AW D	KVM	Data stream	
S60	2005	AW50/51AW D	KVM	Actuation	
S60	2005	AW50/51AW D	RDAR	Sys. Info.	
S60	2005	AW50/51AW D	RDAR	Read code	
S60	2005	AW50/51AW D	RDAR	Clear code	
S60	2005	AW50/51AW D	RDAR	Data stream	
S60	2005	AW50/51AW D	SUB	Sys. Info.	

model	year	type	system	function	subfunction
S60	2005	AW50/51AW D	SUB	Read code	
S60	2005	AW50/51AW D	SUB	Clear code	
S60	2005	AW50/51AW D	SUB	Data stream	
S60	2005	AW50/51AW D	CVM	Sys. Info.	
S60	2005	AW50/51AW D	CVM	Read code	
S60	2005	AW50/51AW D	CVM	Clear code	
S60	2005	AW50/51AW D	CVM	Data stream	
S60	2005	AW50/51AW D	DABM	Sys. Info.	
S60	2005	AW50/51AW D	DABM	Read code	
S60	2005	AW50/51AW D	DABM	Clear code	
S60	2005	AW50/51AW D	DABM	Data stream	
S60	2005	AW50/51AW D	PAC	Sys. Info.	
S60	2005	AW50/51AW D	PAC	Read code	
S60	2005	AW50/51AW D	PAC	Clear code	
S60	2005	AW50/51AW D	PAC	Data stream	
S60	2005	AW50/51AW D	TRM	Sys. Info.	
S60	2005	AW50/51AW D	TRM	Read code	
S60	2005	AW50/51AW D	TRM	Clear code	
S60	2005	AW50/51AW D	TRM	Data stream	
S60	2006	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S60	2006	B5244S4	ECM	Sys. Info.	
S60	2006	B5244S4	ECM	Read code	
S60	2006	B5244S4	ECM	Clear code	
S60	2006	B5244S4	ECM	Data stream	
S60	2006	B5244S4	ECM	Actuation	
S60	2006	B5244S4	ECM	Special functions	Resetting the adaptation values
S60	2006	B5244S5	ECM	Sys. Info.	
S60	2006	B5244S5	ECM	Read code	
S60	2006	B5244S5	ECM	Clear code	
S60	2006	B5244S5	ECM	Data stream	
S60	2006	B5244S5	ECM	Actuation	
S60	2006	B5244S5	ECM	Special functions	Resetting the adaptation values
S60	2006	B5244S7	ECM	Sys. Info.	
S60	2006	B5244S7	ECM	Read code	
S60	2006	B5244S7	ECM	Clear code	
S60	2006	B5244S7	ECM	Data stream	
S60	2006	B5244S7	ECM	Actuation	
S60	2006	B4204S3	ECM	Sys. Info.	
S60	2006	B4204S3	ECM	Read code	
S60	2006	B4204S3	ECM	Clear code	
S60	2006	B4204S3	ECM	Data stream	
S60	2006	B4204S3	ECM	Actuation	
S60	2006	B5254T2	ECM	Sys. Info.	
S60	2006	B5254T2	ECM	Read code	
S60	2006	B5254T2	ECM	Clear code	
S60	2006	B5254T2	ECM	Data stream	
S60	2006	B5254T2	ECM	Actuation	
S60	2006	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2006	B5254T3	ECM	Sys. Info.	
S60	2006	B5254T3	ECM	Read code	
S60	2006	B5254T3	ECM	Clear code	
S60	2006	B5254T3	ECM	Data stream	
S60	2006	B5254T3	ECM	Actuation	
S60	2006	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2006	B5254T7	ECM	Sys. Info.	
S60	2006	B5254T7	ECM	Read code	
S60	2006	B5254T7	ECM	Clear code	
S60	2006	B5254T7	ECM	Data stream	

model	year	type	system	function	subfunction
S60		2006 B5254T7	ECM	Actuation	
S60		2006 B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2006 B5204T5	ECM	Sys. Info.	
S60		2006 B5204T5	ECM	Read code	
S60		2006 B5204T5	ECM	Clear code	
S60		2006 B5204T5	ECM	Data stream	
S60		2006 B5204T5	ECM	Actuation	
S60		2006 B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2006 B6294T	ECM	Sys. Info.	
S60		2006 B6294T	ECM	Read code	
S60		2006 B6294T	ECM	Clear code	
S60		2006 B6294T	ECM	Data stream	
S60		2006 B6294T	ECM	Actuation	
S60		2006 B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2006 B4164S3	ECM	Sys. Info.	
S60		2006 B4164S3	ECM	Read code	
S60		2006 B4164S3	ECM	Clear code	
S60		2006 B4164S3	ECM	Data stream	
S60		2006 B4164S3	ECM	Actuation	
S60		2006 B4164S3	ECM	Special functions	Resetting the adaptation values
S60		2006 B5244T5	ECM	Sys. Info.	
S60		2006 B5244T5	ECM	Read code	
S60		2006 B5244T5	ECM	Clear code	
S60		2006 B5244T5	ECM	Data stream	
S60		2006 B5244T5	ECM	Actuation	
S60		2006 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2006 B4184S11	ECM	Sys. Info.	
S60		2006 B4184S11	ECM	Read code	
S60		2006 B4184S11	ECM	Clear code	
S60		2006 B4184S11	ECM	Data stream	
S60		2006 B4184S11	ECM	Actuation	
S60		2006 B4184S11	ECM	Special functions	Resetting the adaptation values
S60		2006 D5244T	Diesel Eng	Sys. Info.	
S60		2006 D5244T	Diesel Eng	Read code	
S60		2006 D5244T	Diesel Eng	Clear code	
S60		2006 D5244T	Diesel Eng	Data stream	
S60		2006 D5244T	Diesel Eng	Actuation	
S60		2006 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2006 D5244T4	Diesel Eng	Sys. Info.	
S60		2006 D5244T4	Diesel Eng	Read code	
S60		2006 D5244T4	Diesel Eng	Clear code	
S60		2006 D5244T4	Diesel Eng	Data stream	
S60		2006 D5244T4	Diesel Eng	Actuation	
S60		2006 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S60		2006 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2006 D5244T4	Diesel Eng	Special functions	Resetting counter oil
S60		2006 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S60		2006 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2006 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2006 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2006 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2006 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S60		2006 D5244T5	Diesel Eng	Sys. Info.	
S60		2006 D5244T5	Diesel Eng	Read code	
S60		2006 D5244T5	Diesel Eng	Clear code	
S60		2006 D5244T5	Diesel Eng	Data stream	
S60		2006 D5244T5	Diesel Eng	Actuation	
S60		2006 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S60		2006 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2006 D5244T5	Diesel Eng	Special functions	Resetting counter oil
S60		2006 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S60		2006 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2006 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2006 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2006 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2006 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S60		2006 D5244T8	Diesel Eng	Sys. Info.	
S60		2006 D5244T8	Diesel Eng	Read code	
S60		2006 D5244T8	Diesel Eng	Clear code	
S60		2006 D5244T8	Diesel Eng	Data stream	
S60		2006 D5244T8	Diesel Eng	Actuation	
S60		2006 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S60		2006 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2006 D5244T8	Diesel Eng	Special functions	Resetting counter oil
S60		2006 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S60		2006 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2006 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2006 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor



model	year	type	system	function	subfunction
S60		2006 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2006 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S60		2006 D4164T	Diesel Eng	Sys. Info.	
S60		2006 D4164T	Diesel Eng	Read code	
S60		2006 D4164T	Diesel Eng	Clear code	
S60		2006 D4164T	Diesel Eng	Data stream	
S60		2006 D4164T	Diesel Eng	Actuation	
S60		2006 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2006 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2006 D4164T	Diesel Eng	Special functions	Combustion of soot particles
S60		2006 D4204T	Diesel Eng	Sys. Info.	
S60		2006 D4204T	Diesel Eng	Read code	
S60		2006 D4204T	Diesel Eng	Clear code	
S60		2006 D4204T	Diesel Eng	Data stream	
S60		2006 D4204T	Diesel Eng	Actuation	
S60		2006 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2006 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S60		2006 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2006 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2006 D4204T	Diesel Eng	Special functions	Combustion of soot particles
S60		2006 AW55-50/51SN	TCM	Sys. Info.	
S60		2006 AW55-50/51SN	TCM	Read code	
S60		2006 AW55-50/51SN	TCM	Clear code	
S60		2006 AW55-50/51SN	TCM	Data stream	
S60		2006 AW55-50/51SN	TCM	Actuation	
S60		2006 AW55-50/51SN	TCM	Freeze frame	
S60		2006 AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S60		2006 AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2006 AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S60		2006 4T65AWD	TCM	Sys. Info.	
S60		2006 4T65AWD	TCM	Read code	
S60		2006 4T65AWD	TCM	Clear code	
S60		2006 4T65AWD	TCM	Data stream	
S60		2006 4T65AWD	TCM	Actuation	
S60		2006 4T65AWD	TCM	Special functions	Reset adaptation to zero
S60		2006 4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2006 TF-80SC	TCM	Sys. Info.	
S60		2006 TF-80SC	TCM	Read code	
S60		2006 TF-80SC	TCM	Clear code	
S60		2006 TF-80SC	TCM	Data stream	
S60		2006 TF-80SC	TCM	Actuation	
S60		2006 TF-80SC	TCM	Freeze frame	
S60		2006 TF-80SC	TCM	Special functions	Reset adaptation to zero
S60		2006 TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2006 TF-80SC	TCM	Special functions	Calibration of position sensor
S60		2006 AW50/51AW D	TCM	Sys. Info.	
S60		2006 AW50/51AW D	TCM	Read code	
S60		2006 AW50/51AW D	TCM	Clear code	
S60		2006 AW50/51AW D	TCM	Data stream	
S60		2006 AW50/51AW D	TCM	Actuation	
S60		2006 AW50/51AW D	TCM	Freeze frame	
S60		2006 AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S60		2006 AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2006 AW50/51AW D	ABS	Sys. Info.	
S60		2006 AW50/51AW D	ABS	Read code	
S60		2006 AW50/51AW D	ABS	Clear code	
S60		2006 AW50/51AW D	ABS	Data stream	

model	year	type	system	function	subfunction
S60	2006	AW50/51AW D	ABS	Actuation	
S60	2006	AW50/51AW D	ABS	Freeze frame	
S60	2006	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S60	2006	AW50/51AW D	ABS	Special functions	Reading off the configuration
S60	2006	AW50/51AW D	ABS	Special functions	Calibration
S60	2006	AW50/51AW D	SRS	Sys. Info.	
S60	2006	AW50/51AW D	SRS	Read code	
S60	2006	AW50/51AW D	SRS	Clear code	
S60	2006	AW50/51AW D	SRS	Data stream	
S60	2006	AW50/51AW D	SRS	Freeze frame	
S60	2006	AW50/51AW D	CEM	Sys. Info.	
S60	2006	AW50/51AW D	CEM	Read code	
S60	2006	AW50/51AW D	CEM	Clear code	
S60	2006	AW50/51AW D	CEM	Data stream	
S60	2006	AW50/51AW D	CEM	Actuation	
S60	2006	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S60	2006	AW50/51AW D	CEM	Special functions	Programming control module
S60	2006	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S60	2006	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S60	2006	AW50/51AW D	CEM	Special functions	Resetting crash mode
S60	2006	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S60	2006	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S60	2006	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S60	2006	AW50/51AW D	CEM	Special functions	Ignition switch key position
S60	2006	AW50/51AW D	UEM	Sys. Info.	
S60	2006	AW50/51AW D	UEM	Read code	
S60	2006	AW50/51AW D	UEM	Clear code	
S60	2006	AW50/51AW D	UEM	Data stream	
S60	2006	AW50/51AW D	UEM	Actuation	
S60	2006	AW50/51AW D	UEM	Special functions	Configuration of the siren
S60	2006	AW50/51AW D	UEM	Special functions	Programming the control unit
S60	2006	AW50/51AW D	UEM	Special functions	Reading the programmed values
S60	2006	AW50/51AW D	REM	Sys. Info.	
S60	2006	AW50/51AW D	REM	Read code	
S60	2006	AW50/51AW D	REM	Clear code	
S60	2006	AW50/51AW D	REM	Data stream	
S60	2006	AW50/51AW D	REM	Actuation	
S60	2006	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S60	2006	AW50/51AW D	DIM	Sys. Info.	

model	year	type	system	function	subfunction
S60	2006	AW50/51AW D	DIM	Read code	
S60	2006	AW50/51AW D	DIM	Clear code	
S60	2006	AW50/51AW D	DIM	Data stream	
S60	2006	AW50/51AW D	DIM	Actuation	
S60	2006	AW50/51AW D	DIM	Freeze frame	
S60	2006	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S60	2006	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S60	2006	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S60	2006	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S60	2006	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S60	2006	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S60	2006	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S60	2006	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S60	2006	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S60	2006	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S60	2006	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S60	2006	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S60	2006	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S60	2006	AW50/51AW D	DIM	Special functions	Display of DSTC message
S60	2006	AW50/51AW D	DIM	Special functions	Read out programmed values
S60	2006	AW50/51AW D	PDM	Sys. Info.	
S60	2006	AW50/51AW D	PDM	Read code	
S60	2006	AW50/51AW D	PDM	Clear code	
S60	2006	AW50/51AW D	PDM	Data stream	
S60	2006	AW50/51AW D	PDM	Actuation	
S60	2006	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S60	2006	AW50/51AW D	PSM	Sys. Info.	
S60	2006	AW50/51AW D	PSM	Read code	
S60	2006	AW50/51AW D	PSM	Clear code	
S60	2006	AW50/51AW D	PSM	Data stream	
S60	2006	AW50/51AW D	PSM	Actuation	
S60	2006	AW50/51AW D	DDM	Sys. Info.	
S60	2006	AW50/51AW D	DDM	Read code	
S60	2006	AW50/51AW D	DDM	Clear code	
S60	2006	AW50/51AW D	DDM	Data stream	
S60	2006	AW50/51AW D	DDM	Actuation	
S60	2006	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S60	2006	AW50/51AW D	CCM	Sys. Info.	
S60	2006	AW50/51AW D	CCM	Read code	

model	year	type	system	function	subfunction
S60	2006	AW50/51AW D	CCM	Clear code	
S60	2006	AW50/51AW D	CCM	Data stream	
S60	2006	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S60	2006	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S60	2006	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S60	2006	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S60	2006	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S60	2006	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S60	2006	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S60	2006	AW50/51AW D	PHM	Sys. Info.	
S60	2006	AW50/51AW D	PHM	Read code	
S60	2006	AW50/51AW D	PHM	Clear code	
S60	2006	AW50/51AW D	PHM	Data stream	
S60	2006	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S60	2006	AW50/51AW D	AUM	Sys. Info.	
S60	2006	AW50/51AW D	AUM	Read code	
S60	2006	AW50/51AW D	AUM	Clear code	
S60	2006	AW50/51AW D	AUM	Data stream	
S60	2006	AW50/51AW D	DEM	Sys. Info.	
S60	2006	AW50/51AW D	DEM	Read code	
S60	2006	AW50/51AW D	DEM	Clear code	
S60	2006	AW50/51AW D	DEM	Data stream	
S60	2006	AW50/51AW D	SAS	Sys. Info.	
S60	2006	AW50/51AW D	SAS	Read code	
S60	2006	AW50/51AW D	SAS	Clear code	
S60	2006	AW50/51AW D	SAS	Data stream	
S60	2006	AW50/51AW D	RTI	Sys. Info.	
S60	2006	AW50/51AW D	RTI	Read code	
S60	2006	AW50/51AW D	RTI	Clear code	
S60	2006	AW50/51AW D	AEM	Sys. Info.	
S60	2006	AW50/51AW D	AEM	Read code	
S60	2006	AW50/51AW D	AEM	Clear code	
S60	2006	AW50/51AW D	AEM	Data stream	
S60	2006	AW50/51AW D	AEM	Actuation	
S60	2006	AW50/51AW D	CPM	Sys. Info.	
S60	2006	AW50/51AW D	CPM	Data stream	
S60	2006	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
S60	2006	AW50/51AW D	HCM	Sys. Info.	
S60	2006	AW50/51AW D	HCM	Read code	

model	year	type	system	function	subfunction
S60	2006	AW50/51AW D	HCM	Clear code	
S60	2006	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S60	2006	AW50/51AW D	KVM	Sys. Info.	
S60	2006	AW50/51AW D	KVM	Read code	
S60	2006	AW50/51AW D	KVM	Clear code	
S60	2006	AW50/51AW D	KVM	Data stream	
S60	2006	AW50/51AW D	KVM	Actuation	
S60	2006	AW50/51AW D	RDAR	Sys. Info.	
S60	2006	AW50/51AW D	RDAR	Read code	
S60	2006	AW50/51AW D	RDAR	Clear code	
S60	2006	AW50/51AW D	RDAR	Data stream	
S60	2006	AW50/51AW D	SUB	Sys. Info.	
S60	2006	AW50/51AW D	SUB	Read code	
S60	2006	AW50/51AW D	SUB	Clear code	
S60	2006	AW50/51AW D	SUB	Data stream	
S60	2006	AW50/51AW D	CVM	Sys. Info.	
S60	2006	AW50/51AW D	CVM	Read code	
S60	2006	AW50/51AW D	CVM	Clear code	
S60	2006	AW50/51AW D	CVM	Data stream	
S60	2006	AW50/51AW D	DABM	Sys. Info.	
S60	2006	AW50/51AW D	DABM	Read code	
S60	2006	AW50/51AW D	DABM	Clear code	
S60	2006	AW50/51AW D	DABM	Data stream	
S60	2006	AW50/51AW D	PAC	Sys. Info.	
S60	2006	AW50/51AW D	PAC	Read code	
S60	2006	AW50/51AW D	PAC	Clear code	
S60	2006	AW50/51AW D	PAC	Data stream	
S60	2006	AW50/51AW D	TRM	Sys. Info.	
S60	2006	AW50/51AW D	TRM	Read code	
S60	2006	AW50/51AW D	TRM	Clear code	
S60	2006	AW50/51AW D	TRM	Data stream	
S60	2007	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S60	2007	B5244S4	ECM	Sys. Info.	
S60	2007	B5244S4	ECM	Read code	
S60	2007	B5244S4	ECM	Clear code	
S60	2007	B5244S4	ECM	Data stream	
S60	2007	B5244S4	ECM	Actuation	
S60	2007	B5244S4	ECM	Special functions	Resetting the adaptation values
S60	2007	B5244S5	ECM	Sys. Info.	
S60	2007	B5244S5	ECM	Read code	
S60	2007	B5244S5	ECM	Clear code	
S60	2007	B5244S5	ECM	Data stream	
S60	2007	B5244S5	ECM	Actuation	
S60	2007	B5244S5	ECM	Special functions	Resetting the adaptation values
S60	2007	B5244S7	ECM	Sys. Info.	
S60	2007	B5244S7	ECM	Read code	

model	year	type	system	function	subfunction	
S60		2007	B5244S7	ECM	Clear code	
S60		2007	B5244S7	ECM	Data stream	
S60		2007	B5244S7	ECM	Actuation	
S60		2007	B4204S3	ECM	Sys. Info.	
S60		2007	B4204S3	ECM	Read code	
S60		2007	B4204S3	ECM	Clear code	
S60		2007	B4204S3	ECM	Data stream	
S60		2007	B4204S3	ECM	Actuation	
S60		2007	B5254T2	ECM	Sys. Info.	
S60		2007	B5254T2	ECM	Read code	
S60		2007	B5254T2	ECM	Clear code	
S60		2007	B5254T2	ECM	Data stream	
S60		2007	B5254T2	ECM	Actuation	
S60		2007	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2007	B5254T3	ECM	Sys. Info.	
S60		2007	B5254T3	ECM	Read code	
S60		2007	B5254T3	ECM	Clear code	
S60		2007	B5254T3	ECM	Data stream	
S60		2007	B5254T3	ECM	Actuation	
S60		2007	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2007	B5254T4	ECM	Sys. Info.	
S60		2007	B5254T4	ECM	Read code	
S60		2007	B5254T4	ECM	Clear code	
S60		2007	B5254T4	ECM	Data stream	
S60		2007	B5254T4	ECM	Actuation	
S60		2007	B5254T7	ECM	Sys. Info.	
S60		2007	B5254T7	ECM	Read code	
S60		2007	B5254T7	ECM	Clear code	
S60		2007	B5254T7	ECM	Data stream	
S60		2007	B5254T7	ECM	Actuation	
S60		2007	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2007	B5204T5	ECM	Sys. Info.	
S60		2007	B5204T5	ECM	Read code	
S60		2007	B5204T5	ECM	Clear code	
S60		2007	B5204T5	ECM	Data stream	
S60		2007	B5204T5	ECM	Actuation	
S60		2007	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2007	B6294T	ECM	Sys. Info.	
S60		2007	B6294T	ECM	Read code	
S60		2007	B6294T	ECM	Clear code	
S60		2007	B6294T	ECM	Data stream	
S60		2007	B6294T	ECM	Actuation	
S60		2007	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2007	B4164S3	ECM	Sys. Info.	
S60		2007	B4164S3	ECM	Read code	
S60		2007	B4164S3	ECM	Clear code	
S60		2007	B4164S3	ECM	Data stream	
S60		2007	B4164S3	ECM	Actuation	
S60		2007	B4164S3	ECM	Special functions	Resetting the adaptation values
S60		2007	B5244T5	ECM	Sys. Info.	
S60		2007	B5244T5	ECM	Read code	
S60		2007	B5244T5	ECM	Clear code	
S60		2007	B5244T5	ECM	Data stream	
S60		2007	B5244T5	ECM	Actuation	
S60		2007	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2007	B4184S11	ECM	Sys. Info.	
S60		2007	B4184S11	ECM	Read code	
S60		2007	B4184S11	ECM	Clear code	
S60		2007	B4184S11	ECM	Data stream	
S60		2007	B4184S11	ECM	Actuation	
S60		2007	B4184S11	ECM	Special functions	Resetting the adaptation values
S60		2007	D5244T	Diesel Eng	Sys. Info.	
S60		2007	D5244T	Diesel Eng	Read code	
S60		2007	D5244T	Diesel Eng	Clear code	
S60		2007	D5244T	Diesel Eng	Data stream	
S60		2007	D5244T	Diesel Eng	Actuation	
S60		2007	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2007	D5244T4	Diesel Eng	Sys. Info.	
S60		2007	D5244T4	Diesel Eng	Read code	
S60		2007	D5244T4	Diesel Eng	Clear code	
S60		2007	D5244T4	Diesel Eng	Data stream	
S60		2007	D5244T4	Diesel Eng	Actuation	
S60		2007	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S60		2007	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2007	D5244T4	Diesel Eng	Special functions	Resetting counter oil
S60		2007	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S60		2007	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2007	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor

model	year	type	system	function	subfunction
S60		2007 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2007 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2007 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S60		2007 D5244T5	Diesel Eng	Sys. Info.	
S60		2007 D5244T5	Diesel Eng	Read code	
S60		2007 D5244T5	Diesel Eng	Clear code	
S60		2007 D5244T5	Diesel Eng	Data stream	
S60		2007 D5244T5	Diesel Eng	Actuation	
S60		2007 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S60		2007 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2007 D5244T5	Diesel Eng	Special functions	Resetting counter oil
S60		2007 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S60		2007 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2007 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2007 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2007 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2007 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S60		2007 D5244T8	Diesel Eng	Sys. Info.	
S60		2007 D5244T8	Diesel Eng	Read code	
S60		2007 D5244T8	Diesel Eng	Clear code	
S60		2007 D5244T8	Diesel Eng	Data stream	
S60		2007 D5244T8	Diesel Eng	Actuation	
S60		2007 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S60		2007 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2007 D5244T8	Diesel Eng	Special functions	Resetting counter oil
S60		2007 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S60		2007 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2007 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2007 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2007 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2007 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S60		2007 D4164T	Diesel Eng	Sys. Info.	
S60		2007 D4164T	Diesel Eng	Read code	
S60		2007 D4164T	Diesel Eng	Clear code	
S60		2007 D4164T	Diesel Eng	Data stream	
S60		2007 D4164T	Diesel Eng	Actuation	
S60		2007 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2007 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2007 D4164T	Diesel Eng	Special functions	Combustion of soot particles
S60		2007 D4204T	Diesel Eng	Sys. Info.	
S60		2007 D4204T	Diesel Eng	Read code	
S60		2007 D4204T	Diesel Eng	Clear code	
S60		2007 D4204T	Diesel Eng	Data stream	
S60		2007 D4204T	Diesel Eng	Actuation	
S60		2007 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2007 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S60		2007 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2007 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2007 D4204T	Diesel Eng	Special functions	Combustion of soot particles
S60		2007 AW55-50/51SN	TCM	Sys. Info.	
S60		2007 AW55-50/51SN	TCM	Read code	
S60		2007 AW55-50/51SN	TCM	Clear code	
S60		2007 AW55-50/51SN	TCM	Data stream	
S60		2007 AW55-50/51SN	TCM	Actuation	
S60		2007 AW55-50/51SN	TCM	Freeze frame	
S60		2007 AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S60		2007 AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2007 AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S60		2007 AW55-50/51SN	TCM	Special functions	Control module adaptation
S60		2007 4T65AWD	TCM	Sys. Info.	
S60		2007 4T65AWD	TCM	Read code	
S60		2007 4T65AWD	TCM	Clear code	
S60		2007 4T65AWD	TCM	Data stream	
S60		2007 4T65AWD	TCM	Actuation	
S60		2007 4T65AWD	TCM	Special functions	Reset adaptation to zero
S60		2007 4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2007 TF-80SC	TCM	Sys. Info.	
S60		2007 TF-80SC	TCM	Read code	

model	year	type	system	function	subfunction
S60	2007	TF-80SC	TCM	Clear code	
S60	2007	TF-80SC	TCM	Data stream	
S60	2007	TF-80SC	TCM	Actuation	
S60	2007	TF-80SC	TCM	Freeze frame	
S60	2007	TF-80SC	TCM	Special functions	Reset adaptation to zero
S60	2007	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2007	TF-80SC	TCM	Special functions	Calibration of position sensor
S60	2007	AW50/51AW D	TCM	Sys. Info.	
S60	2007	AW50/51AW D	TCM	Read code	
S60	2007	AW50/51AW D	TCM	Clear code	
S60	2007	AW50/51AW D	TCM	Data stream	
S60	2007	AW50/51AW D	TCM	Actuation	
S60	2007	AW50/51AW D	TCM	Freeze frame	
S60	2007	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S60	2007	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2007	AW50/51AW D	ABS	Sys. Info.	
S60	2007	AW50/51AW D	ABS	Read code	
S60	2007	AW50/51AW D	ABS	Clear code	
S60	2007	AW50/51AW D	ABS	Data stream	
S60	2007	AW50/51AW D	ABS	Actuation	
S60	2007	AW50/51AW D	ABS	Freeze frame	
S60	2007	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S60	2007	AW50/51AW D	ABS	Special functions	Reading off the configuration
S60	2007	AW50/51AW D	ABS	Special functions	Calibration
S60	2007	AW50/51AW D	SRS	Sys. Info.	
S60	2007	AW50/51AW D	SRS	Read code	
S60	2007	AW50/51AW D	SRS	Clear code	
S60	2007	AW50/51AW D	SRS	Data stream	
S60	2007	AW50/51AW D	SRS	Freeze frame	
S60	2007	AW50/51AW D	CEM	Sys. Info.	
S60	2007	AW50/51AW D	CEM	Read code	
S60	2007	AW50/51AW D	CEM	Clear code	
S60	2007	AW50/51AW D	CEM	Data stream	
S60	2007	AW50/51AW D	CEM	Actuation	
S60	2007	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S60	2007	AW50/51AW D	CEM	Special functions	Programming control module
S60	2007	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S60	2007	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S60	2007	AW50/51AW D	CEM	Special functions	Resetting crash mode
S60	2007	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S60	2007	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S60	2007	AW50/51AW D	CEM	Special functions	Programming of short flash sequence



model	year	type	system	function	subfunction
S60	2007	AW50/51AW D	CEM	Special functions	Ignition switch key position
S60	2007	AW50/51AW D	UEM	Sys. Info.	
S60	2007	AW50/51AW D	UEM	Read code	
S60	2007	AW50/51AW D	UEM	Clear code	
S60	2007	AW50/51AW D	UEM	Data stream	
S60	2007	AW50/51AW D	UEM	Actuation	
S60	2007	AW50/51AW D	UEM	Special functions	Configuration of the siren
S60	2007	AW50/51AW D	UEM	Special functions	Programming the control unit
S60	2007	AW50/51AW D	UEM	Special functions	Reading the programmed values
S60	2007	AW50/51AW D	REM	Sys. Info.	
S60	2007	AW50/51AW D	REM	Read code	
S60	2007	AW50/51AW D	REM	Clear code	
S60	2007	AW50/51AW D	REM	Data stream	
S60	2007	AW50/51AW D	REM	Actuation	
S60	2007	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S60	2007	AW50/51AW D	DIM	Sys. Info.	
S60	2007	AW50/51AW D	DIM	Read code	
S60	2007	AW50/51AW D	DIM	Clear code	
S60	2007	AW50/51AW D	DIM	Data stream	
S60	2007	AW50/51AW D	DIM	Actuation	
S60	2007	AW50/51AW D	DIM	Freeze frame	
S60	2007	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S60	2007	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S60	2007	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S60	2007	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S60	2007	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S60	2007	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S60	2007	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S60	2007	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S60	2007	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S60	2007	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S60	2007	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S60	2007	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S60	2007	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S60	2007	AW50/51AW D	DIM	Special functions	Display of DSTC message
S60	2007	AW50/51AW D	DIM	Special functions	Read out programmed values
S60	2007	AW50/51AW D	PDM	Sys. Info.	
S60	2007	AW50/51AW D	PDM	Read code	
S60	2007	AW50/51AW D	PDM	Clear code	

model	year	type	system	function	subfunction
S60	2007	AW50/51AW D	PDM	Data stream	
S60	2007	AW50/51AW D	PDM	Actuation	
S60	2007	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S60	2007	AW50/51AW D	PSM	Sys. Info.	
S60	2007	AW50/51AW D	PSM	Read code	
S60	2007	AW50/51AW D	PSM	Clear code	
S60	2007	AW50/51AW D	PSM	Data stream	
S60	2007	AW50/51AW D	PSM	Actuation	
S60	2007	AW50/51AW D	DDM	Sys. Info.	
S60	2007	AW50/51AW D	DDM	Read code	
S60	2007	AW50/51AW D	DDM	Clear code	
S60	2007	AW50/51AW D	DDM	Data stream	
S60	2007	AW50/51AW D	DDM	Actuation	
S60	2007	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S60	2007	AW50/51AW D	CCM	Sys. Info.	
S60	2007	AW50/51AW D	CCM	Read code	
S60	2007	AW50/51AW D	CCM	Clear code	
S60	2007	AW50/51AW D	CCM	Data stream	
S60	2007	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S60	2007	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S60	2007	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S60	2007	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S60	2007	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S60	2007	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S60	2007	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S60	2007	AW50/51AW D	PHM	Sys. Info.	
S60	2007	AW50/51AW D	PHM	Read code	
S60	2007	AW50/51AW D	PHM	Clear code	
S60	2007	AW50/51AW D	PHM	Data stream	
S60	2007	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S60	2007	AW50/51AW D	AUM	Sys. Info.	
S60	2007	AW50/51AW D	AUM	Read code	
S60	2007	AW50/51AW D	AUM	Clear code	
S60	2007	AW50/51AW D	AUM	Data stream	
S60	2007	AW50/51AW D	DEM	Sys. Info.	
S60	2007	AW50/51AW D	DEM	Read code	
S60	2007	AW50/51AW D	DEM	Clear code	
S60	2007	AW50/51AW D	DEM	Data stream	
S60	2007	AW50/51AW D	SAS	Sys. Info.	

model	year	type	system	function	subfunction
S60	2007	AW50/51AW D	SAS	Read code	
S60	2007	AW50/51AW D	SAS	Clear code	
S60	2007	AW50/51AW D	SAS	Data stream	
S60	2007	AW50/51AW D	RTI	Sys. Info.	
S60	2007	AW50/51AW D	RTI	Read code	
S60	2007	AW50/51AW D	RTI	Clear code	
S60	2007	AW50/51AW D	AEM	Sys. Info.	
S60	2007	AW50/51AW D	AEM	Read code	
S60	2007	AW50/51AW D	AEM	Clear code	
S60	2007	AW50/51AW D	AEM	Data stream	
S60	2007	AW50/51AW D	AEM	Actuation	
S60	2007	AW50/51AW D	CPM	Sys. Info.	
S60	2007	AW50/51AW D	CPM	Data stream	
S60	2007	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
S60	2007	AW50/51AW D	HCM	Sys. Info.	
S60	2007	AW50/51AW D	HCM	Read code	
S60	2007	AW50/51AW D	HCM	Clear code	
S60	2007	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S60	2007	AW50/51AW D	KVM	Sys. Info.	
S60	2007	AW50/51AW D	KVM	Read code	
S60	2007	AW50/51AW D	KVM	Clear code	
S60	2007	AW50/51AW D	KVM	Data stream	
S60	2007	AW50/51AW D	KVM	Actuation	
S60	2007	AW50/51AW D	RDAR	Sys. Info.	
S60	2007	AW50/51AW D	RDAR	Read code	
S60	2007	AW50/51AW D	RDAR	Clear code	
S60	2007	AW50/51AW D	RDAR	Data stream	
S60	2007	AW50/51AW D	SUB	Sys. Info.	
S60	2007	AW50/51AW D	SUB	Read code	
S60	2007	AW50/51AW D	SUB	Clear code	
S60	2007	AW50/51AW D	SUB	Data stream	
S60	2007	AW50/51AW D	CVM	Sys. Info.	
S60	2007	AW50/51AW D	CVM	Read code	
S60	2007	AW50/51AW D	CVM	Clear code	
S60	2007	AW50/51AW D	CVM	Data stream	
S60	2007	AW50/51AW D	DABM	Sys. Info.	
S60	2007	AW50/51AW D	DABM	Read code	
S60	2007	AW50/51AW D	DABM	Clear code	
S60	2007	AW50/51AW D	DABM	Data stream	

model	year	type	system	function	subfunction
S60	2007	AW50/51AW D	PAC	Sys. Info.	
S60	2007	AW50/51AW D	PAC	Read code	
S60	2007	AW50/51AW D	PAC	Clear code	
S60	2007	AW50/51AW D	PAC	Data stream	
S60	2007	AW50/51AW D	TRM	Sys. Info.	
S60	2007	AW50/51AW D	TRM	Read code	
S60	2007	AW50/51AW D	TRM	Clear code	
S60	2007	AW50/51AW D	TRM	Data stream	
S60	2008	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S60	2008	B5244S4	ECM	Sys. Info.	
S60	2008	B5244S4	ECM	Read code	
S60	2008	B5244S4	ECM	Clear code	
S60	2008	B5244S4	ECM	Data stream	
S60	2008	B5244S4	ECM	Actuation	
S60	2008	B5244S4	ECM	Special functions	Resetting the adaptation values
S60	2008	B5244S5	ECM	Sys. Info.	
S60	2008	B5244S5	ECM	Read code	
S60	2008	B5244S5	ECM	Clear code	
S60	2008	B5244S5	ECM	Data stream	
S60	2008	B5244S5	ECM	Actuation	
S60	2008	B5244S5	ECM	Special functions	Resetting the adaptation values
S60	2008	B5244S7	ECM	Sys. Info.	
S60	2008	B5244S7	ECM	Read code	
S60	2008	B5244S7	ECM	Clear code	
S60	2008	B5244S7	ECM	Data stream	
S60	2008	B5244S7	ECM	Actuation	
S60	2008	B4204S3	ECM	Sys. Info.	
S60	2008	B4204S3	ECM	Read code	
S60	2008	B4204S3	ECM	Clear code	
S60	2008	B4204S3	ECM	Data stream	
S60	2008	B4204S3	ECM	Actuation	
S60	2008	B5254T2	ECM	Sys. Info.	
S60	2008	B5254T2	ECM	Read code	
S60	2008	B5254T2	ECM	Clear code	
S60	2008	B5254T2	ECM	Data stream	
S60	2008	B5254T2	ECM	Actuation	
S60	2008	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2008	B5254T3	ECM	Sys. Info.	
S60	2008	B5254T3	ECM	Read code	
S60	2008	B5254T3	ECM	Clear code	
S60	2008	B5254T3	ECM	Data stream	
S60	2008	B5254T3	ECM	Actuation	
S60	2008	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2008	B5254T7	ECM	Sys. Info.	
S60	2008	B5254T7	ECM	Read code	
S60	2008	B5254T7	ECM	Clear code	
S60	2008	B5254T7	ECM	Data stream	
S60	2008	B5254T7	ECM	Actuation	
S60	2008	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2008	B5204T5	ECM	Sys. Info.	
S60	2008	B5204T5	ECM	Read code	
S60	2008	B5204T5	ECM	Clear code	
S60	2008	B5204T5	ECM	Data stream	
S60	2008	B5204T5	ECM	Actuation	
S60	2008	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2008	B6294T	ECM	Sys. Info.	
S60	2008	B6294T	ECM	Read code	
S60	2008	B6294T	ECM	Clear code	
S60	2008	B6294T	ECM	Data stream	
S60	2008	B6294T	ECM	Actuation	
S60	2008	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2008	B4164S3	ECM	Sys. Info.	
S60	2008	B4164S3	ECM	Read code	
S60	2008	B4164S3	ECM	Clear code	
S60	2008	B4164S3	ECM	Data stream	
S60	2008	B4164S3	ECM	Actuation	
S60	2008	B4164S3	ECM	Special functions	Resetting the adaptation values
S60	2008	B5244T5	ECM	Sys. Info.	
S60	2008	B5244T5	ECM	Read code	

model	year	type	system	function	subfunction
S60		2008 B5244T5	ECM	Clear code	
S60		2008 B5244T5	ECM	Data stream	
S60		2008 B5244T5	ECM	Actuation	
S60		2008 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2008 B4184S11	ECM	Sys. Info.	
S60		2008 B4184S11	ECM	Read code	
S60		2008 B4184S11	ECM	Clear code	
S60		2008 B4184S11	ECM	Data stream	
S60		2008 B4184S11	ECM	Actuation	
S60		2008 B4184S11	ECM	Special functions	Resetting the adaptation values
S60		2008 D5244T	Diesel Eng	Sys. Info.	
S60		2008 D5244T	Diesel Eng	Read code	
S60		2008 D5244T	Diesel Eng	Clear code	
S60		2008 D5244T	Diesel Eng	Data stream	
S60		2008 D5244T	Diesel Eng	Actuation	
S60		2008 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2008 D5244T4	Diesel Eng	Sys. Info.	
S60		2008 D5244T4	Diesel Eng	Read code	
S60		2008 D5244T4	Diesel Eng	Clear code	
S60		2008 D5244T4	Diesel Eng	Data stream	
S60		2008 D5244T4	Diesel Eng	Actuation	
S60		2008 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S60		2008 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2008 D5244T4	Diesel Eng	Special functions	Resetting counter oil
S60		2008 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S60		2008 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2008 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2008 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2008 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2008 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S60		2008 D5244T5	Diesel Eng	Sys. Info.	
S60		2008 D5244T5	Diesel Eng	Read code	
S60		2008 D5244T5	Diesel Eng	Clear code	
S60		2008 D5244T5	Diesel Eng	Data stream	
S60		2008 D5244T5	Diesel Eng	Actuation	
S60		2008 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S60		2008 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2008 D5244T5	Diesel Eng	Special functions	Resetting counter oil
S60		2008 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S60		2008 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2008 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2008 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2008 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2008 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S60		2008 D5244T8	Diesel Eng	Sys. Info.	
S60		2008 D5244T8	Diesel Eng	Read code	
S60		2008 D5244T8	Diesel Eng	Clear code	
S60		2008 D5244T8	Diesel Eng	Data stream	
S60		2008 D5244T8	Diesel Eng	Actuation	
S60		2008 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S60		2008 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2008 D5244T8	Diesel Eng	Special functions	Resetting counter oil
S60		2008 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S60		2008 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2008 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2008 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2008 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2008 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S60		2008 D4164T	Diesel Eng	Sys. Info.	
S60		2008 D4164T	Diesel Eng	Read code	
S60		2008 D4164T	Diesel Eng	Clear code	
S60		2008 D4164T	Diesel Eng	Data stream	
S60		2008 D4164T	Diesel Eng	Actuation	
S60		2008 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2008 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2008 D4164T	Diesel Eng	Special functions	Combustion of soot particles
S60		2008 D4204T	Diesel Eng	Sys. Info.	
S60		2008 D4204T	Diesel Eng	Read code	
S60		2008 D4204T	Diesel Eng	Clear code	
S60		2008 D4204T	Diesel Eng	Data stream	
S60		2008 D4204T	Diesel Eng	Actuation	
S60		2008 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2008 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S60		2008 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2008 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2008 D4204T	Diesel Eng	Special functions	Combustion of soot particles
S60		2008 AW55-50/515N	TCM	Sys. Info.	

model	year	type	system	function	subfunction
S60	2008	AW55-50/51SN	TCM	Read code	
S60	2008	AW55-50/51SN	TCM	Clear code	
S60	2008	AW55-50/51SN	TCM	Data stream	
S60	2008	AW55-50/51SN	TCM	Actuation	
S60	2008	AW55-50/51SN	TCM	Freeze frame	
S60	2008	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S60	2008	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2008	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S60	2008	4T65AWD	TCM	Sys. Info.	
S60	2008	4T65AWD	TCM	Read code	
S60	2008	4T65AWD	TCM	Clear code	
S60	2008	4T65AWD	TCM	Data stream	
S60	2008	4T65AWD	TCM	Actuation	
S60	2008	4T65AWD	TCM	Special functions	Reset adaptation to zero
S60	2008	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2008	TF-80SC	TCM	Sys. Info.	
S60	2008	TF-80SC	TCM	Read code	
S60	2008	TF-80SC	TCM	Clear code	
S60	2008	TF-80SC	TCM	Data stream	
S60	2008	TF-80SC	TCM	Actuation	
S60	2008	TF-80SC	TCM	Freeze frame	
S60	2008	TF-80SC	TCM	Special functions	Reset adaptation to zero
S60	2008	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2008	TF-80SC	TCM	Special functions	Calibration of position sensor
S60	2008	AW50/51AW D	TCM	Sys. Info.	
S60	2008	AW50/51AW D	TCM	Read code	
S60	2008	AW50/51AW D	TCM	Clear code	
S60	2008	AW50/51AW D	TCM	Data stream	
S60	2008	AW50/51AW D	TCM	Actuation	
S60	2008	AW50/51AW D	TCM	Freeze frame	
S60	2008	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S60	2008	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2008	AW50/51AW D	ABS	Sys. Info.	
S60	2008	AW50/51AW D	ABS	Read code	
S60	2008	AW50/51AW D	ABS	Clear code	
S60	2008	AW50/51AW D	ABS	Data stream	
S60	2008	AW50/51AW D	ABS	Actuation	
S60	2008	AW50/51AW D	ABS	Freeze frame	
S60	2008	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S60	2008	AW50/51AW D	ABS	Special functions	Reading off the configuration
S60	2008	AW50/51AW D	ABS	Special functions	Calibration
S60	2008	AW50/51AW D	SRS	Sys. Info.	
S60	2008	AW50/51AW D	SRS	Read code	
S60	2008	AW50/51AW D	SRS	Clear code	
S60	2008	AW50/51AW D	SRS	Data stream	
S60	2008	AW50/51AW D	SRS	Freeze frame	
S60	2008	AW50/51AW D	CEM	Sys. Info.	

model	year	type	system	function	subfunction
S60	2008	AW50/51AW D	CEM	Read code	
S60	2008	AW50/51AW D	CEM	Clear code	
S60	2008	AW50/51AW D	CEM	Data stream	
S60	2008	AW50/51AW D	CEM	Actuation	
S60	2008	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S60	2008	AW50/51AW D	CEM	Special functions	Programming control module
S60	2008	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S60	2008	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S60	2008	AW50/51AW D	CEM	Special functions	Resetting crash mode
S60	2008	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S60	2008	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S60	2008	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S60	2008	AW50/51AW D	CEM	Special functions	Ignition switch key position
S60	2008	AW50/51AW D	UEM	Sys. Info.	
S60	2008	AW50/51AW D	UEM	Read code	
S60	2008	AW50/51AW D	UEM	Clear code	
S60	2008	AW50/51AW D	UEM	Data stream	
S60	2008	AW50/51AW D	UEM	Actuation	
S60	2008	AW50/51AW D	UEM	Special functions	Configuration of the siren
S60	2008	AW50/51AW D	UEM	Special functions	Programming the control unit
S60	2008	AW50/51AW D	UEM	Special functions	Reading the programmed values
S60	2008	AW50/51AW D	REM	Sys. Info.	
S60	2008	AW50/51AW D	REM	Read code	
S60	2008	AW50/51AW D	REM	Clear code	
S60	2008	AW50/51AW D	REM	Data stream	
S60	2008	AW50/51AW D	REM	Actuation	
S60	2008	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S60	2008	AW50/51AW D	DIM	Sys. Info.	
S60	2008	AW50/51AW D	DIM	Read code	
S60	2008	AW50/51AW D	DIM	Clear code	
S60	2008	AW50/51AW D	DIM	Data stream	
S60	2008	AW50/51AW D	DIM	Actuation	
S60	2008	AW50/51AW D	DIM	Freeze frame	
S60	2008	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S60	2008	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S60	2008	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S60	2008	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S60	2008	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S60	2008	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)

model	year	type	system	function	subfunction
S60	2008	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S60	2008	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S60	2008	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S60	2008	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S60	2008	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal, seat belt reminder
S60	2008	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S60	2008	AW50/51AW D	DIM	Special functions	Programming text message, seatbelt reminder
S60	2008	AW50/51AW D	DIM	Special functions	Display of DSTC message
S60	2008	AW50/51AW D	DIM	Special functions	Read out programmed values
S60	2008	AW50/51AW D	PDM	Sys. Info.	
S60	2008	AW50/51AW D	PDM	Read code	
S60	2008	AW50/51AW D	PDM	Clear code	
S60	2008	AW50/51AW D	PDM	Data stream	
S60	2008	AW50/51AW D	PDM	Actuation	
S60	2008	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S60	2008	AW50/51AW D	PSM	Sys. Info.	
S60	2008	AW50/51AW D	PSM	Read code	
S60	2008	AW50/51AW D	PSM	Clear code	
S60	2008	AW50/51AW D	PSM	Data stream	
S60	2008	AW50/51AW D	PSM	Actuation	
S60	2008	AW50/51AW D	DDM	Sys. Info.	
S60	2008	AW50/51AW D	DDM	Read code	
S60	2008	AW50/51AW D	DDM	Clear code	
S60	2008	AW50/51AW D	DDM	Data stream	
S60	2008	AW50/51AW D	DDM	Actuation	
S60	2008	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S60	2008	AW50/51AW D	CCM	Sys. Info.	
S60	2008	AW50/51AW D	CCM	Read code	
S60	2008	AW50/51AW D	CCM	Clear code	
S60	2008	AW50/51AW D	CCM	Data stream	
S60	2008	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
S60	2008	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S60	2008	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S60	2008	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S60	2008	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S60	2008	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
S60	2008	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S60	2008	AW50/51AW D	PHM	Sys. Info.	
S60	2008	AW50/51AW D	PHM	Read code	



model	year	type	system	function	subfunction
S60	2008	AW50/51AW D	PHM	Clear code	
S60	2008	AW50/51AW D	PHM	Data stream	
S60	2008	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S60	2008	AW50/51AW D	AUD	Sys. Info.	
S60	2008	AW50/51AW D	AUD	Read code	
S60	2008	AW50/51AW D	AUD	Clear code	
S60	2008	AW50/51AW D	AUM	Sys. Info.	
S60	2008	AW50/51AW D	AUM	Read code	
S60	2008	AW50/51AW D	AUM	Clear code	
S60	2008	AW50/51AW D	AUM	Data stream	
S60	2008	AW50/51AW D	DEM	Sys. Info.	
S60	2008	AW50/51AW D	DEM	Read code	
S60	2008	AW50/51AW D	DEM	Clear code	
S60	2008	AW50/51AW D	DEM	Data stream	
S60	2008	AW50/51AW D	SAS	Sys. Info.	
S60	2008	AW50/51AW D	SAS	Read code	
S60	2008	AW50/51AW D	SAS	Clear code	
S60	2008	AW50/51AW D	SAS	Data stream	
S60	2008	AW50/51AW D	RTI	Sys. Info.	
S60	2008	AW50/51AW D	RTI	Read code	
S60	2008	AW50/51AW D	RTI	Clear code	
S60	2008	AW50/51AW D	AEM	Sys. Info.	
S60	2008	AW50/51AW D	AEM	Read code	
S60	2008	AW50/51AW D	AEM	Clear code	
S60	2008	AW50/51AW D	AEM	Data stream	
S60	2008	AW50/51AW D	AEM	Actuation	
S60	2008	AW50/51AW D	CPM	Sys. Info.	
S60	2008	AW50/51AW D	CPM	Data stream	
S60	2008	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
S60	2008	AW50/51AW D	HCM	Sys. Info.	
S60	2008	AW50/51AW D	HCM	Read code	
S60	2008	AW50/51AW D	HCM	Clear code	
S60	2008	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S60	2008	AW50/51AW D	KVM	Sys. Info.	
S60	2008	AW50/51AW D	KVM	Read code	
S60	2008	AW50/51AW D	KVM	Clear code	
S60	2008	AW50/51AW D	KVM	Data stream	
S60	2008	AW50/51AW D	KVM	Actuation	
S60	2008	AW50/51AW D	RDAR	Sys. Info.	

model	year	type	system	function	subfunction
S60	2008	AW50/51AW D	RDAR	Read code	
S60	2008	AW50/51AW D	RDAR	Clear code	
S60	2008	AW50/51AW D	RDAR	Data stream	
S60	2008	AW50/51AW D	SUB	Sys. Info.	
S60	2008	AW50/51AW D	SUB	Read code	
S60	2008	AW50/51AW D	SUB	Clear code	
S60	2008	AW50/51AW D	SUB	Data stream	
S60	2008	AW50/51AW D	CVM	Sys. Info.	
S60	2008	AW50/51AW D	CVM	Read code	
S60	2008	AW50/51AW D	CVM	Clear code	
S60	2008	AW50/51AW D	CVM	Data stream	
S60	2008	AW50/51AW D	DABM	Sys. Info.	
S60	2008	AW50/51AW D	DABM	Read code	
S60	2008	AW50/51AW D	DABM	Clear code	
S60	2008	AW50/51AW D	DABM	Data stream	
S60	2008	AW50/51AW D	PAC	Sys. Info.	
S60	2008	AW50/51AW D	PAC	Read code	
S60	2008	AW50/51AW D	PAC	Clear code	
S60	2008	AW50/51AW D	PAC	Data stream	
S60	2008	AW50/51AW D	TRM	Sys. Info.	
S60	2008	AW50/51AW D	TRM	Read code	
S60	2008	AW50/51AW D	TRM	Clear code	
S60	2008	AW50/51AW D	TRM	Data stream	
S60	2009	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S60	2009	B5244S4	ECM	Sys. Info.	
S60	2009	B5244S4	ECM	Read code	
S60	2009	B5244S4	ECM	Clear code	
S60	2009	B5244S4	ECM	Data stream	
S60	2009	B5244S4	ECM	Actuation	
S60	2009	B5244S4	ECM	Special functions	Resetting the adaptation values
S60	2009	B5244S5	ECM	Sys. Info.	
S60	2009	B5244S5	ECM	Read code	
S60	2009	B5244S5	ECM	Clear code	
S60	2009	B5244S5	ECM	Data stream	
S60	2009	B5244S5	ECM	Actuation	
S60	2009	B5244S5	ECM	Special functions	Resetting the adaptation values
S60	2009	B5244S7	ECM	Sys. Info.	
S60	2009	B5244S7	ECM	Read code	
S60	2009	B5244S7	ECM	Clear code	
S60	2009	B5244S7	ECM	Data stream	
S60	2009	B5244S7	ECM	Actuation	
S60	2009	B4204S3	ECM	Sys. Info.	
S60	2009	B4204S3	ECM	Read code	
S60	2009	B4204S3	ECM	Clear code	
S60	2009	B4204S3	ECM	Data stream	
S60	2009	B4204S3	ECM	Actuation	
S60	2009	B5254T2	ECM	Sys. Info.	
S60	2009	B5254T2	ECM	Read code	
S60	2009	B5254T2	ECM	Clear code	
S60	2009	B5254T2	ECM	Data stream	
S60	2009	B5254T2	ECM	Actuation	
S60	2009	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2009	B5254T3	ECM	Sys. Info.	
S60	2009	B5254T3	ECM	Read code	

model	year	type	system	function	subfunction
S60		2009 B5254T3	ECM	Clear code	
S60		2009 B5254T3	ECM	Data stream	
S60		2009 B5254T3	ECM	Actuation	
S60		2009 B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2009 B5254T7	ECM	Sys. Info.	
S60		2009 B5254T7	ECM	Read code	
S60		2009 B5254T7	ECM	Clear code	
S60		2009 B5254T7	ECM	Data stream	
S60		2009 B5254T7	ECM	Actuation	
S60		2009 B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2009 B5204T5	ECM	Sys. Info.	
S60		2009 B5204T5	ECM	Read code	
S60		2009 B5204T5	ECM	Clear code	
S60		2009 B5204T5	ECM	Data stream	
S60		2009 B5204T5	ECM	Actuation	
S60		2009 B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2009 B6294T	ECM	Sys. Info.	
S60		2009 B6294T	ECM	Read code	
S60		2009 B6294T	ECM	Clear code	
S60		2009 B6294T	ECM	Data stream	
S60		2009 B6294T	ECM	Actuation	
S60		2009 B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2009 B4164S3	ECM	Sys. Info.	
S60		2009 B4164S3	ECM	Read code	
S60		2009 B4164S3	ECM	Clear code	
S60		2009 B4164S3	ECM	Data stream	
S60		2009 B4164S3	ECM	Actuation	
S60		2009 B4164S3	ECM	Special functions	Resetting the adaptation values
S60		2009 B5244T5	ECM	Sys. Info.	
S60		2009 B5244T5	ECM	Read code	
S60		2009 B5244T5	ECM	Clear code	
S60		2009 B5244T5	ECM	Data stream	
S60		2009 B5244T5	ECM	Actuation	
S60		2009 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60		2009 B4184S11	ECM	Sys. Info.	
S60		2009 B4184S11	ECM	Read code	
S60		2009 B4184S11	ECM	Clear code	
S60		2009 B4184S11	ECM	Data stream	
S60		2009 B4184S11	ECM	Actuation	
S60		2009 B4184S11	ECM	Special functions	Resetting the adaptation values
S60		2009 D5244T	Diesel Eng	Sys. Info.	
S60		2009 D5244T	Diesel Eng	Read code	
S60		2009 D5244T	Diesel Eng	Clear code	
S60		2009 D5244T	Diesel Eng	Data stream	
S60		2009 D5244T	Diesel Eng	Actuation	
S60		2009 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2009 D5244T4	Diesel Eng	Sys. Info.	
S60		2009 D5244T4	Diesel Eng	Read code	
S60		2009 D5244T4	Diesel Eng	Clear code	
S60		2009 D5244T4	Diesel Eng	Data stream	
S60		2009 D5244T4	Diesel Eng	Actuation	
S60		2009 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S60		2009 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2009 D5244T4	Diesel Eng	Special functions	Resetting counter oil
S60		2009 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S60		2009 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2009 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2009 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2009 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2009 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S60		2009 D5244T5	Diesel Eng	Sys. Info.	
S60		2009 D5244T5	Diesel Eng	Read code	
S60		2009 D5244T5	Diesel Eng	Clear code	
S60		2009 D5244T5	Diesel Eng	Data stream	
S60		2009 D5244T5	Diesel Eng	Actuation	
S60		2009 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S60		2009 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2009 D5244T5	Diesel Eng	Special functions	Resetting counter oil
S60		2009 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S60		2009 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2009 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2009 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2009 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2009 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S60		2009 D5244T8	Diesel Eng	Sys. Info.	
S60		2009 D5244T8	Diesel Eng	Read code	
S60		2009 D5244T8	Diesel Eng	Clear code	
S60		2009 D5244T8	Diesel Eng	Data stream	

model	year	type	system	function	subfunction
S60		2009 D5244T8	Diesel Eng	Actuation	
S60		2009 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S60		2009 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2009 D5244T8	Diesel Eng	Special functions	Resetting counter oil
S60		2009 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S60		2009 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2009 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2009 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2009 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2009 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S60		2009 D4164T	Diesel Eng	Sys. Info.	
S60		2009 D4164T	Diesel Eng	Read code	
S60		2009 D4164T	Diesel Eng	Clear code	
S60		2009 D4164T	Diesel Eng	Data stream	
S60		2009 D4164T	Diesel Eng	Actuation	
S60		2009 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2009 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2009 D4164T	Diesel Eng	Special functions	Combustion of soot particles
S60		2009 D4204T	Diesel Eng	Sys. Info.	
S60		2009 D4204T	Diesel Eng	Read code	
S60		2009 D4204T	Diesel Eng	Clear code	
S60		2009 D4204T	Diesel Eng	Data stream	
S60		2009 D4204T	Diesel Eng	Actuation	
S60		2009 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2009 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S60		2009 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2009 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2009 D4204T	Diesel Eng	Special functions	Combustion of soot particles
S60		2009 AW55-50/51SN	TCM	Sys. Info.	
S60		2009 AW55-50/51SN	TCM	Read code	
S60		2009 AW55-50/51SN	TCM	Clear code	
S60		2009 AW55-50/51SN	TCM	Data stream	
S60		2009 AW55-50/51SN	TCM	Actuation	
S60		2009 AW55-50/51SN	TCM	Freeze frame	
S60		2009 AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S60		2009 AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2009 AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S60		2009 4T65AWD	TCM	Sys. Info.	
S60		2009 4T65AWD	TCM	Read code	
S60		2009 4T65AWD	TCM	Clear code	
S60		2009 4T65AWD	TCM	Data stream	
S60		2009 4T65AWD	TCM	Actuation	
S60		2009 4T65AWD	TCM	Special functions	Reset adaptation to zero
S60		2009 4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2009 TF-80SC	TCM	Sys. Info.	
S60		2009 TF-80SC	TCM	Read code	
S60		2009 TF-80SC	TCM	Clear code	
S60		2009 TF-80SC	TCM	Data stream	
S60		2009 TF-80SC	TCM	Actuation	
S60		2009 TF-80SC	TCM	Freeze frame	
S60		2009 TF-80SC	TCM	Special functions	Reset adaptation to zero
S60		2009 TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60		2009 TF-80SC	TCM	Special functions	Calibration of position sensor
S60		2009 AW50/51AW D	TCM	Sys. Info.	
S60		2009 AW50/51AW D	TCM	Read code	
S60		2009 AW50/51AW D	TCM	Clear code	
S60		2009 AW50/51AW D	TCM	Data stream	
S60		2009 AW50/51AW D	TCM	Actuation	
S60		2009 AW50/51AW D	TCM	Freeze frame	
S60		2009 AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S60		2009 AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)

model	year	type	system	function	subfunction
S60	2009	AW50/51AW D	ABS	Sys. Info.	
S60	2009	AW50/51AW D	ABS	Read code	
S60	2009	AW50/51AW D	ABS	Clear code	
S60	2009	AW50/51AW D	ABS	Data stream	
S60	2009	AW50/51AW D	ABS	Actuation	
S60	2009	AW50/51AW D	ABS	Freeze frame	
S60	2009	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S60	2009	AW50/51AW D	ABS	Special functions	Reading off the configuration
S60	2009	AW50/51AW D	ABS	Special functions	Calibration
S60	2009	AW50/51AW D	SRS	Sys. Info.	
S60	2009	AW50/51AW D	SRS	Read code	
S60	2009	AW50/51AW D	SRS	Clear code	
S60	2009	AW50/51AW D	SRS	Data stream	
S60	2009	AW50/51AW D	SRS	Freeze frame	
S60	2009	AW50/51AW D	CEM	Sys. Info.	
S60	2009	AW50/51AW D	CEM	Read code	
S60	2009	AW50/51AW D	CEM	Clear code	
S60	2009	AW50/51AW D	CEM	Data stream	
S60	2009	AW50/51AW D	CEM	Actuation	
S60	2009	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S60	2009	AW50/51AW D	CEM	Special functions	Programming control module
S60	2009	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S60	2009	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S60	2009	AW50/51AW D	CEM	Special functions	Resetting crash mode
S60	2009	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S60	2009	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S60	2009	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S60	2009	AW50/51AW D	CEM	Special functions	Ignition switch key position
S60	2009	AW50/51AW D	UEM	Sys. Info.	
S60	2009	AW50/51AW D	UEM	Read code	
S60	2009	AW50/51AW D	UEM	Clear code	
S60	2009	AW50/51AW D	UEM	Data stream	
S60	2009	AW50/51AW D	UEM	Actuation	
S60	2009	AW50/51AW D	UEM	Special functions	Configuration of the siren
S60	2009	AW50/51AW D	UEM	Special functions	Programming the control unit
S60	2009	AW50/51AW D	UEM	Special functions	Reading the programmed values
S60	2009	AW50/51AW D	REM	Sys. Info.	
S60	2009	AW50/51AW D	REM	Read code	
S60	2009	AW50/51AW D	REM	Clear code	

model	year	type	system	function	subfunction
S60	2009	AW50/51AW D	REM	Data stream	
S60	2009	AW50/51AW D	REM	Actuation	
S60	2009	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S60	2009	AW50/51AW D	DIM	Sys. Info.	
S60	2009	AW50/51AW D	DIM	Read code	
S60	2009	AW50/51AW D	DIM	Clear code	
S60	2009	AW50/51AW D	DIM	Data stream	
S60	2009	AW50/51AW D	DIM	Actuation	
S60	2009	AW50/51AW D	DIM	Freeze frame	
S60	2009	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S60	2009	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S60	2009	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S60	2009	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S60	2009	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S60	2009	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S60	2009	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S60	2009	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S60	2009	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S60	2009	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S60	2009	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S60	2009	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S60	2009	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S60	2009	AW50/51AW D	DIM	Special functions	Display of DSTC message
S60	2009	AW50/51AW D	DIM	Special functions	Read out programmed values
S60	2009	AW50/51AW D	PDM	Sys. Info.	
S60	2009	AW50/51AW D	PDM	Read code	
S60	2009	AW50/51AW D	PDM	Clear code	
S60	2009	AW50/51AW D	PDM	Data stream	
S60	2009	AW50/51AW D	PDM	Actuation	
S60	2009	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S60	2009	AW50/51AW D	PSM	Sys. Info.	
S60	2009	AW50/51AW D	PSM	Read code	
S60	2009	AW50/51AW D	PSM	Clear code	
S60	2009	AW50/51AW D	PSM	Data stream	
S60	2009	AW50/51AW D	PSM	Actuation	
S60	2009	AW50/51AW D	DDM	Sys. Info.	
S60	2009	AW50/51AW D	DDM	Read code	
S60	2009	AW50/51AW D	DDM	Clear code	
S60	2009	AW50/51AW D	DDM	Data stream	

model	year	type	system	function	subfunction
S60	2009	AW50/51AW D	DDM	Actuation	
S60	2009	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S60	2009	AW50/51AW D	CCM	Sys. Info.	
S60	2009	AW50/51AW D	CCM	Read code	
S60	2009	AW50/51AW D	CCM	Clear code	
S60	2009	AW50/51AW D	CCM	Data stream	
S60	2009	AW50/51AW D	CCM	Special functions	Self-adjustment of adamerper motor end stops(*)
S60	2009	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S60	2009	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S60	2009	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S60	2009	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S60	2009	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S60	2009	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S60	2009	AW50/51AW D	PHM	Sys. Info.	
S60	2009	AW50/51AW D	PHM	Read code	
S60	2009	AW50/51AW D	PHM	Clear code	
S60	2009	AW50/51AW D	PHM	Data stream	
S60	2009	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S60	2009	AW50/51AW D	AUM	Sys. Info.	
S60	2009	AW50/51AW D	AUM	Read code	
S60	2009	AW50/51AW D	AUM	Clear code	
S60	2009	AW50/51AW D	AUM	Data stream	
S60	2009	AW50/51AW D	DEM	Sys. Info.	
S60	2009	AW50/51AW D	DEM	Read code	
S60	2009	AW50/51AW D	DEM	Clear code	
S60	2009	AW50/51AW D	DEM	Data stream	
S60	2009	AW50/51AW D	SAS	Sys. Info.	
S60	2009	AW50/51AW D	SAS	Read code	
S60	2009	AW50/51AW D	SAS	Clear code	
S60	2009	AW50/51AW D	SAS	Data stream	
S60	2009	AW50/51AW D	RTI	Sys. Info.	
S60	2009	AW50/51AW D	RTI	Read code	
S60	2009	AW50/51AW D	RTI	Clear code	
S60	2009	AW50/51AW D	AEM	Sys. Info.	
S60	2009	AW50/51AW D	AEM	Read code	
S60	2009	AW50/51AW D	AEM	Clear code	
S60	2009	AW50/51AW D	AEM	Data stream	
S60	2009	AW50/51AW D	AEM	Actuation	
S60	2009	AW50/51AW D	CPM	Sys. Info.	

model	year	type	system	function	subfunction
S60	2009	AW50/51AW D	CPM	Data stream	
S60	2009	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
S60	2009	AW50/51AW D	HCM	Sys. Info.	
S60	2009	AW50/51AW D	HCM	Read code	
S60	2009	AW50/51AW D	HCM	Clear code	
S60	2009	AW50/51AW D	HCM	Data stream	
S60	2009	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S60	2009	AW50/51AW D	KVM	Sys. Info.	
S60	2009	AW50/51AW D	KVM	Read code	
S60	2009	AW50/51AW D	KVM	Clear code	
S60	2009	AW50/51AW D	KVM	Data stream	
S60	2009	AW50/51AW D	KVM	Actuation	
S60	2009	AW50/51AW D	RDAR	Sys. Info.	
S60	2009	AW50/51AW D	RDAR	Read code	
S60	2009	AW50/51AW D	RDAR	Clear code	
S60	2009	AW50/51AW D	RDAR	Data stream	
S60	2009	AW50/51AW D	SUB	Sys. Info.	
S60	2009	AW50/51AW D	SUB	Read code	
S60	2009	AW50/51AW D	SUB	Clear code	
S60	2009	AW50/51AW D	SUB	Data stream	
S60	2009	AW50/51AW D	SUM	Sys. Info.	
S60	2009	AW50/51AW D	SUM	Read code	
S60	2009	AW50/51AW D	SUM	Clear code	
S60	2009	AW50/51AW D	SUM	Data stream	
S60	2009	AW50/51AW D	CVM	Sys. Info.	
S60	2009	AW50/51AW D	CVM	Read code	
S60	2009	AW50/51AW D	CVM	Clear code	
S60	2009	AW50/51AW D	CVM	Data stream	
S60	2009	AW50/51AW D	DABM	Sys. Info.	
S60	2009	AW50/51AW D	DABM	Read code	
S60	2009	AW50/51AW D	DABM	Clear code	
S60	2009	AW50/51AW D	DABM	Data stream	
S60	2009	AW50/51AW D	PAC	Sys. Info.	
S60	2009	AW50/51AW D	PAC	Read code	
S60	2009	AW50/51AW D	PAC	Clear code	
S60	2009	AW50/51AW D	PAC	Data stream	
S60	2009	AW50/51AW D	UEM	Sys. Info.	
S60	2009	AW50/51AW D	UEM	Read code	
S60	2009	AW50/51AW D	UEM	Clear code	



model	year	type	system	function	subfunction
S60	2009	AW50/51AW D	UEM	Data stream	
S60	2009	AW50/51AW D	TRM	Sys. Info.	
S60	2009	AW50/51AW D	TRM	Read code	
S60	2009	AW50/51AW D	TRM	Clear code	
S60	2009	AW50/51AW D	TRM	Data stream	
S60	2010	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S60	2010	B5244S4	ECM	Sys. Info.	
S60	2010	B5244S4	ECM	Read code	
S60	2010	B5244S4	ECM	Clear code	
S60	2010	B5244S4	ECM	Data stream	
S60	2010	B5244S4	ECM	Actuation	
S60	2010	B5244S4	ECM	Special functions	Resetting the adaptation values
S60	2010	B5244S5	ECM	Sys. Info.	
S60	2010	B5244S5	ECM	Read code	
S60	2010	B5244S5	ECM	Clear code	
S60	2010	B5244S5	ECM	Data stream	
S60	2010	B5244S5	ECM	Actuation	
S60	2010	B5244S5	ECM	Special functions	Resetting the adaptation values
S60	2010	B5244S7	ECM	Sys. Info.	
S60	2010	B5244S7	ECM	Read code	
S60	2010	B5244S7	ECM	Clear code	
S60	2010	B5244S7	ECM	Data stream	
S60	2010	B5244S7	ECM	Actuation	
S60	2010	B4204S3	ECM	Sys. Info.	
S60	2010	B4204S3	ECM	Read code	
S60	2010	B4204S3	ECM	Clear code	
S60	2010	B4204S3	ECM	Data stream	
S60	2010	B4204S3	ECM	Actuation	
S60	2010	B5254T2	ECM	Sys. Info.	
S60	2010	B5254T2	ECM	Read code	
S60	2010	B5254T2	ECM	Clear code	
S60	2010	B5254T2	ECM	Data stream	
S60	2010	B5254T2	ECM	Actuation	
S60	2010	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2010	B5254T3	ECM	Sys. Info.	
S60	2010	B5254T3	ECM	Read code	
S60	2010	B5254T3	ECM	Clear code	
S60	2010	B5254T3	ECM	Data stream	
S60	2010	B5254T3	ECM	Actuation	
S60	2010	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2010	B5254T7	ECM	Sys. Info.	
S60	2010	B5254T7	ECM	Read code	
S60	2010	B5254T7	ECM	Clear code	
S60	2010	B5254T7	ECM	Data stream	
S60	2010	B5254T7	ECM	Actuation	
S60	2010	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2010	B5204T5	ECM	Sys. Info.	
S60	2010	B5204T5	ECM	Read code	
S60	2010	B5204T5	ECM	Clear code	
S60	2010	B5204T5	ECM	Data stream	
S60	2010	B5204T5	ECM	Actuation	
S60	2010	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2010	B6294T	ECM	Sys. Info.	
S60	2010	B6294T	ECM	Read code	
S60	2010	B6294T	ECM	Clear code	
S60	2010	B6294T	ECM	Data stream	
S60	2010	B6294T	ECM	Actuation	
S60	2010	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2010	B4164S3	ECM	Sys. Info.	
S60	2010	B4164S3	ECM	Read code	
S60	2010	B4164S3	ECM	Clear code	
S60	2010	B4164S3	ECM	Data stream	
S60	2010	B4164S3	ECM	Actuation	
S60	2010	B4164S3	ECM	Special functions	Resetting the adaptation values
S60	2010	B5244T5	ECM	Sys. Info.	
S60	2010	B5244T5	ECM	Read code	
S60	2010	B5244T5	ECM	Clear code	
S60	2010	B5244T5	ECM	Data stream	
S60	2010	B5244T5	ECM	Actuation	
S60	2010	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S60	2010	B4184S11	ECM	Sys. Info.	
S60	2010	B4184S11	ECM	Read code	

model	year	type	system	function	subfunction
S60		2010 B4184S11	ECM	Clear code	
S60		2010 B4184S11	ECM	Data stream	
S60		2010 B4184S11	ECM	Actuation	
S60		2010 B4184S11	ECM	Special functions	Resetting the adaptation values
S60		2010 D5244T	Diesel Eng	Sys. Info.	
S60		2010 D5244T	Diesel Eng	Read code	
S60		2010 D5244T	Diesel Eng	Clear code	
S60		2010 D5244T	Diesel Eng	Data stream	
S60		2010 D5244T	Diesel Eng	Actuation	
S60		2010 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2010 D5244T4	Diesel Eng	Sys. Info.	
S60		2010 D5244T4	Diesel Eng	Read code	
S60		2010 D5244T4	Diesel Eng	Clear code	
S60		2010 D5244T4	Diesel Eng	Data stream	
S60		2010 D5244T4	Diesel Eng	Actuation	
S60		2010 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S60		2010 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2010 D5244T4	Diesel Eng	Special functions	Resetting counter oil
S60		2010 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S60		2010 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2010 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2010 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2010 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2010 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S60		2010 D5244T5	Diesel Eng	Sys. Info.	
S60		2010 D5244T5	Diesel Eng	Read code	
S60		2010 D5244T5	Diesel Eng	Clear code	
S60		2010 D5244T5	Diesel Eng	Data stream	
S60		2010 D5244T5	Diesel Eng	Actuation	
S60		2010 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S60		2010 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2010 D5244T5	Diesel Eng	Special functions	Resetting counter oil
S60		2010 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S60		2010 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2010 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2010 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2010 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2010 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S60		2010 D5244T8	Diesel Eng	Sys. Info.	
S60		2010 D5244T8	Diesel Eng	Read code	
S60		2010 D5244T8	Diesel Eng	Clear code	
S60		2010 D5244T8	Diesel Eng	Data stream	
S60		2010 D5244T8	Diesel Eng	Actuation	
S60		2010 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S60		2010 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60		2010 D5244T8	Diesel Eng	Special functions	Resetting counter oil
S60		2010 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S60		2010 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60		2010 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60		2010 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S60		2010 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60		2010 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S60		2010 D4164T	Diesel Eng	Sys. Info.	
S60		2010 D4164T	Diesel Eng	Read code	
S60		2010 D4164T	Diesel Eng	Clear code	
S60		2010 D4164T	Diesel Eng	Data stream	
S60		2010 D4164T	Diesel Eng	Actuation	
S60		2010 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2010 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2010 D4164T	Diesel Eng	Special functions	Combustion of soot particles
S60		2010 D4204T	Diesel Eng	Sys. Info.	
S60		2010 D4204T	Diesel Eng	Read code	
S60		2010 D4204T	Diesel Eng	Clear code	
S60		2010 D4204T	Diesel Eng	Data stream	
S60		2010 D4204T	Diesel Eng	Actuation	
S60		2010 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S60		2010 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S60		2010 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S60		2010 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60		2010 D4204T	Diesel Eng	Special functions	Combustion of soot particles
S60		2010 AW55-50/51SN	TCM	Sys. Info.	
S60		2010 AW55-50/51SN	TCM	Read code	
S60		2010 AW55-50/51SN	TCM	Clear code	
S60		2010 AW55-50/51SN	TCM	Data stream	

model	year	type	system	function	subfunction
S60	2010	AW55-50/51SN	TCM	Actuation	
S60	2010	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S60	2010	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2010	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S60	2010	4T65AWD	TCM	Sys. Info.	
S60	2010	4T65AWD	TCM	Read code	
S60	2010	4T65AWD	TCM	Clear code	
S60	2010	4T65AWD	TCM	Data stream	
S60	2010	4T65AWD	TCM	Actuation	
S60	2010	4T65AWD	TCM	Special functions	Reset adaptation to zero
S60	2010	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2010	TF-80SC	TCM	Sys. Info.	
S60	2010	TF-80SC	TCM	Read code	
S60	2010	TF-80SC	TCM	Clear code	
S60	2010	TF-80SC	TCM	Data stream	
S60	2010	TF-80SC	TCM	Actuation	
S60	2010	TF-80SC	TCM	Special functions	Reset adaptation to zero
S60	2010	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2010	TF-80SC	TCM	Special functions	Calibration of position sensor
S60	2010	AW50/51AW D	TCM	Sys. Info.	
S60	2010	AW50/51AW D	TCM	Read code	
S60	2010	AW50/51AW D	TCM	Clear code	
S60	2010	AW50/51AW D	TCM	Data stream	
S60	2010	AW50/51AW D	TCM	Actuation	
S60	2010	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S60	2010	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S60	2010	AW50/51AW D	ABS	Sys. Info.	
S60	2010	AW50/51AW D	ABS	Read code	
S60	2010	AW50/51AW D	ABS	Clear code	
S60	2010	AW50/51AW D	ABS	Data stream	
S60	2010	AW50/51AW D	ABS	Actuation	
S60	2010	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S60	2010	AW50/51AW D	ABS	Special functions	Reading off the configuration
S60	2010	AW50/51AW D	ABS	Special functions	Calibration
S60	2010	AW50/51AW D	SRS	Sys. Info.	
S60	2010	AW50/51AW D	SRS	Read code	
S60	2010	AW50/51AW D	SRS	Clear code	
S60	2010	AW50/51AW D	SRS	Data stream	
S60	2010	AW50/51AW D	CEM	Sys. Info.	
S60	2010	AW50/51AW D	CEM	Read code	
S60	2010	AW50/51AW D	CEM	Clear code	
S60	2010	AW50/51AW D	CEM	Data stream	
S60	2010	AW50/51AW D	CEM	Actuation	
S60	2010	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S60	2010	AW50/51AW D	CEM	Special functions	Programming control module
S60	2010	AW50/51AW D	CEM	Special functions	Resetting the factory settings

model	year	type	system	function	subfunction
S60	2010	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S60	2010	AW50/51AW D	CEM	Special functions	Resetting crash mode
S60	2010	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S60	2010	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S60	2010	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S60	2010	AW50/51AW D	CEM	Special functions	Ignition switch key position
S60	2010	AW50/51AW D	UEM	Sys. Info.	
S60	2010	AW50/51AW D	UEM	Read code	
S60	2010	AW50/51AW D	UEM	Clear code	
S60	2010	AW50/51AW D	UEM	Data stream	
S60	2010	AW50/51AW D	UEM	Actuation	
S60	2010	AW50/51AW D	UEM	Special functions	Configuration of the siren
S60	2010	AW50/51AW D	UEM	Special functions	Programming the control unit
S60	2010	AW50/51AW D	UEM	Special functions	Reading the programmed values
S60	2010	AW50/51AW D	REM	Sys. Info.	
S60	2010	AW50/51AW D	REM	Read code	
S60	2010	AW50/51AW D	REM	Clear code	
S60	2010	AW50/51AW D	REM	Data stream	
S60	2010	AW50/51AW D	REM	Actuation	
S60	2010	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S60	2010	AW50/51AW D	DIM	Sys. Info.	
S60	2010	AW50/51AW D	DIM	Read code	
S60	2010	AW50/51AW D	DIM	Clear code	
S60	2010	AW50/51AW D	DIM	Data stream	
S60	2010	AW50/51AW D	DIM	Actuation	
S60	2010	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S60	2010	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S60	2010	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S60	2010	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S60	2010	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S60	2010	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S60	2010	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S60	2010	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S60	2010	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S60	2010	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S60	2010	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S60	2010	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S60	2010	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S60	2010	AW50/51AW D	DIM	Special functions	Display of DSTC message

model	year	type	system	function	subfunction
S60	2010	AW50/51AW D	DIM	Special functions	Read out programmed values
S60	2010	AW50/51AW D	PDM	Sys. Info.	
S60	2010	AW50/51AW D	PDM	Read code	
S60	2010	AW50/51AW D	PDM	Clear code	
S60	2010	AW50/51AW D	PDM	Data stream	
S60	2010	AW50/51AW D	PDM	Actuation	
S60	2010	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S60	2010	AW50/51AW D	PSM	Sys. Info.	
S60	2010	AW50/51AW D	PSM	Read code	
S60	2010	AW50/51AW D	PSM	Clear code	
S60	2010	AW50/51AW D	PSM	Data stream	
S60	2010	AW50/51AW D	PSM	Actuation	
S60	2010	AW50/51AW D	DDM	Sys. Info.	
S60	2010	AW50/51AW D	DDM	Read code	
S60	2010	AW50/51AW D	DDM	Clear code	
S60	2010	AW50/51AW D	DDM	Data stream	
S60	2010	AW50/51AW D	DDM	Actuation	
S60	2010	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S60	2010	AW50/51AW D	CCM	Sys. Info.	
S60	2010	AW50/51AW D	CCM	Read code	
S60	2010	AW50/51AW D	CCM	Clear code	
S60	2010	AW50/51AW D	CCM	Data stream	
S60	2010	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S60	2010	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S60	2010	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S60	2010	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S60	2010	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S60	2010	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S60	2010	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S60	2010	AW50/51AW D	PHM	Sys. Info.	
S60	2010	AW50/51AW D	PHM	Read code	
S60	2010	AW50/51AW D	PHM	Clear code	
S60	2010	AW50/51AW D	PHM	Data stream	
S60	2010	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S60	2010	AW50/51AW D	AUM	Sys. Info.	
S60	2010	AW50/51AW D	AUM	Read code	
S60	2010	AW50/51AW D	AUM	Clear code	
S60	2010	AW50/51AW D	AUM	Data stream	
S60	2010	AW50/51AW D	DEM	Sys. Info.	

model	year	type	system	function	subfunction
S60	2010	AW50/51AW D	DEM	Read code	
S60	2010	AW50/51AW D	DEM	Clear code	
S60	2010	AW50/51AW D	DEM	Data stream	
S60	2010	AW50/51AW D	SAS	Sys. Info.	
S60	2010	AW50/51AW D	SAS	Read code	
S60	2010	AW50/51AW D	SAS	Clear code	
S60	2010	AW50/51AW D	SAS	Data stream	
S60	2010	AW50/51AW D	RTI	Sys. Info.	
S60	2010	AW50/51AW D	RTI	Read code	
S60	2010	AW50/51AW D	RTI	Clear code	
S60	2010	AW50/51AW D	AEM	Sys. Info.	
S60	2010	AW50/51AW D	AEM	Read code	
S60	2010	AW50/51AW D	AEM	Clear code	
S60	2010	AW50/51AW D	AEM	Data stream	
S60	2010	AW50/51AW D	AEM	Actuation	
S60	2010	AW50/51AW D	CPM	Sys. Info.	
S60	2010	AW50/51AW D	CPM	Data stream	
S60	2010	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
S60	2010	AW50/51AW D	HCM	Sys. Info.	
S60	2010	AW50/51AW D	HCM	Read code	
S60	2010	AW50/51AW D	HCM	Clear code	
S60	2010	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S60	2010	AW50/51AW D	KVM	Sys. Info.	
S60	2010	AW50/51AW D	KVM	Read code	
S60	2010	AW50/51AW D	KVM	Clear code	
S60	2010	AW50/51AW D	KVM	Data stream	
S60	2010	AW50/51AW D	KVM	Actuation	
S60	2010	AW50/51AW D	RDAR	Sys. Info.	
S60	2010	AW50/51AW D	RDAR	Read code	
S60	2010	AW50/51AW D	RDAR	Clear code	
S60	2010	AW50/51AW D	RDAR	Data stream	
S60	2010	AW50/51AW D	SUB	Sys. Info.	
S60	2010	AW50/51AW D	SUB	Read code	
S60	2010	AW50/51AW D	SUB	Clear code	
S60	2010	AW50/51AW D	SUB	Data stream	
S60	2010	AW50/51AW D	CVM	Sys. Info.	
S60	2010	AW50/51AW D	CVM	Read code	
S60	2010	AW50/51AW D	CVM	Clear code	
S60	2010	AW50/51AW D	CVM	Data stream	

model	year	type	system	function	subfunction
S60	2010	AW50/51AW D	DABM	Sys. Info.	
S60	2010	AW50/51AW D	DABM	Read code	
S60	2010	AW50/51AW D	DABM	Clear code	
S60	2010	AW50/51AW D	DABM	Data stream	
S60	2010	AW50/51AW D	PAC	Sys. Info.	
S60	2010	AW50/51AW D	PAC	Read code	
S60	2010	AW50/51AW D	PAC	Clear code	
S60	2010	AW50/51AW D	PAC	Data stream	
S60	2010	AW50/51AW D	TRM	Sys. Info.	
S60	2010	AW50/51AW D	TRM	Read code	
S60	2010	AW50/51AW D	TRM	Clear code	
S60	2010	AW50/51AW D	TRM	Data stream	
S60(11-)	2011 - 2012	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S60(11-)	2011 - 2012	B5254T6	ECM	Sys. Info.	
S60(11-)	2011 - 2012	B5254T6	ECM	Read code	
S60(11-)	2011 - 2012	B5254T6	ECM	Clear code	
S60(11-)	2011 - 2012	B5254T6	ECM	Data stream	
S60(11-)	2011 - 2012	B5254T6	ECM	Actuation	
S60(11-)	2011 - 2012	B5254T6	ECM	Special functions	Adaptation of the throttle unit
S60(11-)	2011 - 2012	B5254T10	ECM	Sys. Info.	
S60(11-)	2011 - 2012	B5254T10	ECM	Read code	
S60(11-)	2011 - 2012	B5254T10	ECM	Clear code	
S60(11-)	2011 - 2012	B5254T10	ECM	Data stream	
S60(11-)	2011 - 2012	B5254T10	ECM	Actuation	
S60(11-)	2011 - 2012	B5254T10	ECM	Special functions	Adaptation of the throttle unit
S60(11-)	2011 - 2012	B8444S	ECM	Sys. Info.	
S60(11-)	2011 - 2012	B8444S	ECM	Read code	
S60(11-)	2011 - 2012	B8444S	ECM	Clear code	
S60(11-)	2011 - 2012	B8444S	ECM	Data stream	
S60(11-)	2011 - 2012	B8444S	ECM	Actuation	
S60(11-)	2011 - 2012	B8444S	ECM	Special functions	Resetting the adaptation values
S60(11-)	2011 - 2012	B6304T2	ECM	Sys. Info.	
S60(11-)	2011 - 2012	B6304T2	ECM	Read code	
S60(11-)	2011 - 2012	B6304T2	ECM	Clear code	
S60(11-)	2011 - 2012	B6304T2	ECM	Data stream	
S60(11-)	2011 - 2012	B6304T2	ECM	Actuation	
S60(11-)	2011 - 2012	B6304T2	ECM	Special functions	Resetting the adaptation values
S60(11-)	2011 - 2012	B6324S	ECM	Sys. Info.	
S60(11-)	2011 - 2012	B6324S	ECM	Read code	
S60(11-)	2011 - 2012	B6324S	ECM	Clear code	
S60(11-)	2011 - 2012	B6324S	ECM	Data stream	
S60(11-)	2011 - 2012	B6324S	ECM	Actuation	
S60(11-)	2011 - 2012	B6324S	ECM	Special functions	Resetting the adaptation values
S60(11-)	2011 - 2012	B6324S2	ECM	Sys. Info.	
S60(11-)	2011 - 2012	B6324S2	ECM	Read code	
S60(11-)	2011 - 2012	B6324S2	ECM	Clear code	
S60(11-)	2011 - 2012	B6324S2	ECM	Data stream	
S60(11-)	2011 - 2012	B6324S2	ECM	Actuation	
S60(11-)	2011 - 2012	B6324S2	ECM	Special functions	Resetting the adaptation values
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Sys. Info.	
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Read code	
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Clear code	
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Data stream	
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Actuation	
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S60(11-)	2011 - 2012	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S60(11-)	2011 - 2012	D5244T16	Diesel Eng	Sys. Info.	
S60(11-)	2011 - 2012	D5244T16	Diesel Eng	Read code	
S60(11-)	2011 - 2012	D5244T16	Diesel Eng	Clear code	

model	year	type	system	function	subfunction
S60(11-)	2011 - 2012	D5244T16	Diesel Eng	Data stream	
S60(11-)	2011 - 2012	D5244T16	Diesel Eng	Actuation	
S60(11-)	2011 - 2012	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
S60(11-)	2011 - 2012	D5244T16	Diesel Eng	Special functions	Resetting adaptation
S60(11-)	2011 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
S60(11-)	2011 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60(11-)	2011 - 2012	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
S60(11-)	2011 - 2012	TF-80SC	TCM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC	TCM	Read code	
S60(11-)	2011 - 2012	TF-80SC	TCM	Clear code	
S60(11-)	2011 - 2012	TF-80SC	TCM	Data stream	
S60(11-)	2011 - 2012	TF-80SC	TCM	Actuation	
S60(11-)	2011 - 2012	TF-80SC	TCM	Freeze frame	
S60(11-)	2011 - 2012	TF-80SC	TCM	Special functions	Resetting the adaptation
S60(11-)	2011 - 2012	TF-80SC	TCM	Special functions	Calibration of position sensor
S60(11-)	2011 - 2012	TF-80SD	TCM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SD	TCM	Read code	
S60(11-)	2011 - 2012	TF-80SD	TCM	Clear code	
S60(11-)	2011 - 2012	TF-80SD	TCM	Data stream	
S60(11-)	2011 - 2012	TF-80SD	TCM	Actuation	
S60(11-)	2011 - 2012	TF-80SD	TCM	Freeze frame	
S60(11-)	2011 - 2012	TF-80SD	TCM	Special functions	Resetting the adaptation
S60(11-)	2011 - 2012	TF-80SD	TCM	Special functions	Resetting the counter for Gearbox oil Change
S60(11-)	2011 - 2012	TF-80SD	TCM	Special functions	Calibration of position sensor
S60(11-)	2011 - 2012	TF-80SD	TCM	Special functions	Activating gear indication
S60(11-)	2011 - 2012	TF-80SD	TCM	Special functions	Control module adaptation
S60(11-)	2011 - 2012	TF-80SC AWD	TCM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	TCM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	TCM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	TCM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	TCM	Actuation	
S60(11-)	2011 - 2012	TF-80SC AWD	TCM	Freeze frame	
S60(11-)	2011 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
S60(11-)	2011 - 2012	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
S60(11-)	2011 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
S60(11-)	2011 - 2012	TF-80SC AWD	ABS	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	ABS	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	ABS	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	ABS	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	ABS	Actuation	
S60(11-)	2011 - 2012	TF-80SC AWD	ABS	Freeze frame	
S60(11-)	2011 - 2012	TF-80SC AWD	ABS	Special functions	Calibration
S60(11-)	2011 - 2012	TF-80SC AWD	SRS	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	SRS	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	SRS	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	SRS	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
S60(11-)	2011 - 2012	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
S60(11-)	2011 - 2012	TF-80SC AWD	CEM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	CEM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	CEM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	CEM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	CEM	Actuation	
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI)
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming of clock
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
S60(11-)	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
S60(11-)	2011 - 2012	TF-80SC AWD	PDM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	PDM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	PDM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	PDM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	PDM	Actuation	
S60(11-)	2011 - 2012	TF-80SC AWD	PSM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	PSM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	PSM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	PSM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	PSM	Actuation	
S60(11-)	2011 - 2012	TF-80SC AWD	DDM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	DDM	Read code	



model	year	type	system	function	subfunction
S60(11-)	2011 - 2012	TF-80SC AWD	DDM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	DDM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Actuation	
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Special functions	Programming the evaporator, climate control module (CCM)
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
S60(11-)	2011 - 2012	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
S60(11-)	2011 - 2012	TF-80SC AWD	AUD	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	AUD	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	AUD	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	DEM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	DEM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	DEM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	DEM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	DEM	Actuation	
S60(11-)	2011 - 2012	TF-80SC AWD	ICM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	ICM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	ICM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	ICM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	ICM	Actuation	
S60(11-)	2011 - 2012	TF-80SC AWD	SAS	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	SAS	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	SAS	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	SAS	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	MMM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	MMM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	MMM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	PAM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	PAM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	PAM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	PAM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	IAM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	IAM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	IAM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	BPM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	BPM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	BPM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	BPM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	SUM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	SUM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	SUM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	SUM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	PBM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	PBM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	PBM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	PBM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
S60(11-)	2011 - 2012	TF-80SC AWD	PBM	Special functions	Activation and service
S60(11-)	2011 - 2012	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
S60(11-)	2011 - 2012	TF-80SC AWD	CPM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	CPM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	CPM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	CPM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	CPM	Actuation	
S60(11-)	2011 - 2012	TF-80SC AWD	HCM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	HCM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	HCM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	HCM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	KVM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	KVM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	KVM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	KVM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	HLDF	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	HLDF	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	HLDF	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	HLDF	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	POT	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	POT	Read code	

model	year	type	system	function	subfunction
S60(11-)	2011 - 2012	TF-80SC AWD	POT	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	POT	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	AUU	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	AUU	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	AUU	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	AUU	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	FSM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	FSM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	FSM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	FSM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	RDAR	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	RDAR	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	RDAR	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	RDAR	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	SUB	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	SUB	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	SUB	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	SUB	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	CVM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	CVM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	CVM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	CVM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	DABM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	DABM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	DABM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	DABM	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	PAC	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	PAC	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	PAC	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	PAC	Data stream	
S60(11-)	2011 - 2012	TF-80SC AWD	TRM	Sys. Info.	
S60(11-)	2011 - 2012	TF-80SC AWD	TRM	Read code	
S60(11-)	2011 - 2012	TF-80SC AWD	TRM	Clear code	
S60(11-)	2011 - 2012	TF-80SC AWD	TRM	Data stream	
S60(11-)		2013 B4164T	ECM	Sys. Info.	
S60(11-)		2013 B4164T	ECM	Read code	
S60(11-)		2013 B4164T	ECM	Clear code	
S60(11-)		2013 B4164T	ECM	Data stream	
S60(11-)		2013 B4164T	ECM	Actuation	
S60(11-)		2013 B4164T	ECM	Freeze frame	
S60(11-)		2013 B4164T	ECM	Special functions	Adaptation of the throttle unit
S60(11-)		2013 B4164T	ECM	Special functions	Resetting the adaptation values
S60(11-)		2013 B4164T	ECM	Special functions	Adaptation of oil level sensor
S60(11-)		2013 B4164T	ECM	Special functions	Adaptation of camshafts
S60(11-)		2013 B4164T	ECM	Special functions	Checking injectors
S60(11-)		2013 B4164T2	ECM	Sys. Info.	
S60(11-)		2013 B4164T2	ECM	Read code	
S60(11-)		2013 B4164T2	ECM	Clear code	
S60(11-)		2013 B4164T2	ECM	Data stream	
S60(11-)		2013 B4164T2	ECM	Actuation	
S60(11-)		2013 B4164T2	ECM	Freeze frame	
S60(11-)		2013 B4164T2	ECM	Special functions	Adaptation of the throttle unit
S60(11-)		2013 B4164T2	ECM	Special functions	Resetting the adaptation values
S60(11-)		2013 B4164T2	ECM	Special functions	Adaptation of oil level sensor
S60(11-)		2013 B4164T2	ECM	Special functions	Adaptation of camshafts
S60(11-)		2013 B4164T2	ECM	Special functions	Checking injectors
S60(11-)		2013 B4164T3	ECM	Sys. Info.	
S60(11-)		2013 B4164T3	ECM	Read code	
S60(11-)		2013 B4164T3	ECM	Clear code	
S60(11-)		2013 B4164T3	ECM	Data stream	
S60(11-)		2013 B4164T3	ECM	Actuation	
S60(11-)		2013 B4164T3	ECM	Freeze frame	
S60(11-)		2013 B4164T3	ECM	Special functions	Adaptation of the throttle unit
S60(11-)		2013 B4164T3	ECM	Special functions	Resetting the adaptation values
S60(11-)		2013 B4164T3	ECM	Special functions	Adaptation of oil level sensor
S60(11-)		2013 B4164T3	ECM	Special functions	Adaptation of camshafts
S60(11-)		2013 B4164T3	ECM	Special functions	Checking injectors
S60(11-)		2013 B5254T12	ECM	Sys. Info.	
S60(11-)		2013 B5254T12	ECM	Read code	
S60(11-)		2013 B5254T12	ECM	Clear code	
S60(11-)		2013 B5254T12	ECM	Data stream	
S60(11-)		2013 B5254T12	ECM	Actuation	
S60(11-)		2013 B5254T12	ECM	Freeze frame	
S60(11-)		2013 B5254T12	ECM	Special functions	Resetting the adaptation values
S60(11-)		2013 B5254T12	ECM	Special functions	Resetting the flywheel adaptions
S60(11-)		2013 B5254T12	ECM	Special functions	Resetting the camshaft adaption values
S60(11-)		2013 B5204T9	ECM	Sys. Info.	
S60(11-)		2013 B5204T9	ECM	Read code	

model	year	type	system	function	subfunction
S60(11-)	2013	B5204T9	ECM	Clear code	
S60(11-)	2013	B5204T9	ECM	Data stream	
S60(11-)	2013	B5204T9	ECM	Actuation	
S60(11-)	2013	B5204T9	ECM	Freeze frame	
S60(11-)	2013	B5204T9	ECM	Special functions	Resetting the adaptation values
S60(11-)	2013	B5204T9	ECM	Special functions	Resetting the flywheel adaptions
S60(11-)	2013	B5204T9	ECM	Special functions	Resetting the camshaft adaption values
S60(11-)	2013	B5254T14	ECM	Sys. Info.	
S60(11-)	2013	B5254T14	ECM	Read code	
S60(11-)	2013	B5254T14	ECM	Clear code	
S60(11-)	2013	B5254T14	ECM	Data stream	
S60(11-)	2013	B5254T14	ECM	Actuation	
S60(11-)	2013	B5254T14	ECM	Freeze frame	
S60(11-)	2013	B5254T14	ECM	Special functions	Resetting the adaptation values
S60(11-)	2013	B5254T14	ECM	Special functions	Resetting the flywheel adaptions
S60(11-)	2013	B5254T14	ECM	Special functions	Resetting the camshaft adaption values
S60(11-)	2013	B6304T4	ECM	Sys. Info.	
S60(11-)	2013	B6304T4	ECM	Read code	
S60(11-)	2013	B6304T4	ECM	Clear code	
S60(11-)	2013	B6304T4	ECM	Data stream	
S60(11-)	2013	B6304T4	ECM	Actuation	
S60(11-)	2013	B6304T4	ECM	Freeze frame	
S60(11-)	2013	B6304T4	ECM	Special functions	Resetting the adaptation values
S60(11-)	2013	B4204T7	ECM	Sys. Info.	
S60(11-)	2013	B4204T7	ECM	Read code	
S60(11-)	2013	B4204T7	ECM	Clear code	
S60(11-)	2013	B4204T7	ECM	Data stream	
S60(11-)	2013	B4204T7	ECM	Actuation	
S60(11-)	2013	B4204T7	ECM	Freeze frame	
S60(11-)	2013	B4204T7	ECM	Special functions	Adaptation of the throttle unit
S60(11-)	2013	B4204T7	ECM	Special functions	Resetting the adaptation values
S60(11-)	2013	B4204T7	ECM	Special functions	Adaptation of oil level sensor
S60(11-)	2013	B4204T7	ECM	Special functions	Checking injectors
S60(11-)	2013	B4204T7	ECM	Special functions	Activation brake vacuum pump
S60(11-)	2013	D5244T11	Diesel Eng	Sys. Info.	
S60(11-)	2013	D5244T11	Diesel Eng	Read code	
S60(11-)	2013	D5244T11	Diesel Eng	Clear code	
S60(11-)	2013	D5244T11	Diesel Eng	Data stream	
S60(11-)	2013	D5244T11	Diesel Eng	Actuation	
S60(11-)	2013	D5244T11	Diesel Eng	Freeze frame	
S60(11-)	2013	D5244T11	Diesel Eng	Special functions	Resetting counter particle filter
S60(11-)	2013	D5244T11	Diesel Eng	Special functions	Checking injectors
S60(11-)	2013	D5244T11	Diesel Eng	Special functions	Adaptation of throttle module
S60(11-)	2013	D5244T11	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60(11-)	2013	D5244T11	Diesel Eng	Special functions	Checking the oil level
S60(11-)	2013	D5244T15	Diesel Eng	Sys. Info.	
S60(11-)	2013	D5244T15	Diesel Eng	Read code	
S60(11-)	2013	D5244T15	Diesel Eng	Clear code	
S60(11-)	2013	D5244T15	Diesel Eng	Data stream	
S60(11-)	2013	D5244T15	Diesel Eng	Actuation	
S60(11-)	2013	D5244T15	Diesel Eng	Freeze frame	
S60(11-)	2013	D5244T15	Diesel Eng	Special functions	Resetting counter particle filter
S60(11-)	2013	D5244T15	Diesel Eng	Special functions	Checking injectors
S60(11-)	2013	D5244T15	Diesel Eng	Special functions	Adaptation of throttle module
S60(11-)	2013	D5244T15	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60(11-)	2013	D5244T15	Diesel Eng	Special functions	Checking the oil level
S60(11-)	2013	D4162T	Diesel Eng	Sys. Info.	
S60(11-)	2013	D4162T	Diesel Eng	Read code	
S60(11-)	2013	D4162T	Diesel Eng	Clear code	
S60(11-)	2013	D4162T	Diesel Eng	Data stream	
S60(11-)	2013	D4162T	Diesel Eng	Actuation	
S60(11-)	2013	D4162T	Diesel Eng	Freeze frame	
S60(11-)	2013	D4162T	Diesel Eng	Special functions	Adaptation of neutral position sensor
S60(11-)	2013	TF-80SC AWD	TCM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	TCM	Read code	
S60(11-)	2013	TF-80SC AWD	TCM	Clear code	
S60(11-)	2013	TF-80SC AWD	TCM	Data stream	
S60(11-)	2013	TF-80SC AWD	TCM	Actuation	
S60(11-)	2013	TF-80SC AWD	TCM	Freeze frame	
S60(11-)	2013	TF-80SC AWD	TCM	Special functions	Resetting adaptation
S60(11-)	2013	TF-80SC AWD	TCM	Special functions	Resetting the "Transmission fluid change" counter
S60(11-)	2013	TF-80SC AWD	TCM	Special functions	Calibration of gear indication
S60(11-)	2013	TF-80SC AWD	TCM	Special functions	Activating of gear indication
S60(11-)	2013	TF-80SC AWD	TCM	Special functions	Control module adaptation
S60(11-)	2013	TF-80SC	TCM	Sys. Info.	
S60(11-)	2013	TF-80SC	TCM	Read code	
S60(11-)	2013	TF-80SC	TCM	Clear code	
S60(11-)	2013	TF-80SC	TCM	Data stream	

model	year	type	system	function	subfunction
S60(11-)	2013	TF-80SC	TCM	Actuation	
S60(11-)	2013	TF-80SC	TCM	Freeze frame	
S60(11-)	2013	TF-80SC	TCM	Special functions	Resetting adaptation
S60(11-)	2013	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S60(11-)	2013	TF-80SC	TCM	Special functions	Calibration of gear indication
S60(11-)	2013	TF-80SC	TCM	Special functions	Activating of gear indication
S60(11-)	2013	TF-80SC	TCM	Special functions	Control module adaptation
S60(11-)	2013	MPS6	TCM	Sys. Info.	
S60(11-)	2013	MPS6	TCM	Read code	
S60(11-)	2013	MPS6	TCM	Clear code	
S60(11-)	2013	MPS6	TCM	Data stream	
S60(11-)	2013	MPS6	TCM	Freeze frame	
S60(11-)	2013	MPS6	TCM	Special functions	Resetting adaptation
S60(11-)	2013	MPS6	TCM	Special functions	Resetting the Transmission fluid change counter
S60(11-)	2013	MPS6	TCM	Special functions	Calibration of gear indication
S60(11-)	2013	MPS6	TCM	Special functions	Activating of gear indication
S60(11-)	2013	MPS6	TCM	Special functions	Control module adaptation
S60(11-)	2013	TF-80SD	TCM	Sys. Info.	
S60(11-)	2013	TF-80SD	TCM	Read code	
S60(11-)	2013	TF-80SD	TCM	Clear code	
S60(11-)	2013	TF-80SD	TCM	Data stream	
S60(11-)	2013	TF-80SD	TCM	Actuation	
S60(11-)	2013	TF-80SD	TCM	Freeze frame	
S60(11-)	2013	TF-80SD	TCM	Special functions	Resetting the adaptation
S60(11-)	2013	TF-80SD	TCM	Special functions	Calibration of position sensor
S60(11-)	2013	TF-80SD	TCM	Special functions	Resetting the counter for Gearbox oil Change
S60(11-)	2013	TF-80SD	TCM	Special functions	Activating gear indication
S60(11-)	2013	TF-80SD	TCM	Special functions	Control module adaptation
S60(11-)	2013	TF-80SD	ABS	Sys. Info.	
S60(11-)	2013	TF-80SD	ABS	Read code	
S60(11-)	2013	TF-80SD	ABS	Clear code	
S60(11-)	2013	TF-80SD	ABS	Data stream	
S60(11-)	2013	TF-80SD	ABS	Actuation	
S60(11-)	2013	TF-80SD	ABS	Freeze frame	
S60(11-)	2013	TF-80SD	ABS	Special functions	Calibration
S60(11-)	2013	TF-80SD	ABS	Special functions	Restart of the brake control module (BCM)
S60(11-)	2013	TF-80SD	SRS	Sys. Info.	
S60(11-)	2013	TF-80SD	SRS	Read code	
S60(11-)	2013	TF-80SD	SRS	Clear code	
S60(11-)	2013	TF-80SD	SRS	Data stream	
S60(11-)	2013	TF-80SD	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
S60(11-)	2013	TF-80SD	SRS	Special functions	Checking the PAD-light
S60(11-)	2013	TF-80SD	CEM	Sys. Info.	
S60(11-)	2013	TF-80SD	CEM	Read code	
S60(11-)	2013	TF-80SD	CEM	Clear code	
S60(11-)	2013	TF-80SD	CEM	Data stream	
S60(11-)	2013	TF-80SD	CEM	Actuation	
S60(11-)	2013	TF-80SD	CEM	Special functions	Workshop test(TPMS)
S60(11-)	2013	TF-80SD	CEM	Special functions	Reading off power supply position
S60(11-)	2013	TF-80SD	CEM	Special functions	Read-out and resetting alco-lock
S60(11-)	2013	TF-80SD	CEM	Special functions	Activating wipers,front/rear
S60(11-)	2013	TF-80SD	CEM	Special functions	Operating and initiating the roof hatch
S60(11-)	2013	TF-80SD	CEM	Special functions	Restoring supplemental restraint system
S60(11-)	2013	TF-80SD	CEM	Special functions	Setting day and night mode for the instrumentation
S60(11-)	2013	TF-80SD	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
S60(11-)	2013	TF-80SD	CEM	Special functions	Readout of current from battery monitoring sensor
S60(11-)	2013	TF-80SD	CEM	Special functions	Readout of information stand-by current
S60(11-)	2013	TF-80SD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
S60(11-)	2013	TF-80SD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
S60(11-)	2013	TF-80SD	CEM	Special functions	Remote controlled immobilising,status
S60(11-)	2013	TF-80SD	CEM	Special functions	Remote controlled immobilising,cause
S60(11-)	2013	TF-80SD	DIM	Sys. Info.	
S60(11-)	2013	TF-80SD	DIM	Read code	
S60(11-)	2013	TF-80SD	DIM	Clear code	
S60(11-)	2013	TF-80SD	DIM	Data stream	
S60(11-)	2013	TF-80SD	DIM	Freeze frame	
S60(11-)	2013	TF-80SD	DIM	Special functions	Resetting the service reminder indicator (SRI)
S60(11-)	2013	TF-80SD	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
S60(11-)	2013	TF-80SD	DIM	Special functions	Read-out of fuel volume
S60(11-)	2013	TF-80SD	DIM	Special functions	Resetting the odometer setting
S60(11-)	2013	TF-80SD	DIM	Special functions	Programming loudest audible signal,seat belt reminder
S60(11-)	2013	TF-80SD	DIM	Special functions	Programming seatbelt reminder in backseat
S60(11-)	2013	TF-80SD	DIM	Special functions	Programming text message,seatbelt reminder
S60(11-)	2013	TF-80SD	PDM	Sys. Info.	

model	year	type	system	function	subfunction
S60(11-)	2013	TF-80SD	PDM	Read code	
S60(11-)	2013	TF-80SD	PDM	Clear code	
S60(11-)	2013	TF-80SD	PDM	Data stream	
S60(11-)	2013	TF-80SD	PDM	Actuation	
S60(11-)	2013	TF-80SD	PDM	Special functions	Initializing the window in the front door.
S60(11-)	2013	TF-80SD	PDM	Special functions	Initializing the window in the rear door.
S60(11-)	2013	TF-80SD	PDM	Special functions	Central lock motors,activating
S60(11-)	2013	TF-80SD	PSM	Sys. Info.	
S60(11-)	2013	TF-80SD	PSM	Read code	
S60(11-)	2013	TF-80SD	PSM	Clear code	
S60(11-)	2013	TF-80SD	PSM	Data stream	
S60(11-)	2013	TF-80SD	PSM	Actuation	
S60(11-)	2013	TF-80SD	PSM	Special functions	Programming the seat memory delay time
S60(11-)	2013	TF-80SD	DDM	Sys. Info.	
S60(11-)	2013	TF-80SD	DDM	Read code	
S60(11-)	2013	TF-80SD	DDM	Clear code	
S60(11-)	2013	TF-80SD	DDM	Data stream	
S60(11-)	2013	TF-80SD	DDM	Actuation	
S60(11-)	2013	TF-80SD	DDM	Special functions	Initializing the window in the front door.
S60(11-)	2013	TF-80SD	DDM	Special functions	Initializing the window in the rear door.
S60(11-)	2013	TF-80SD	DDM	Special functions	Central lock motors,activating
S60(11-)	2013	TF-80SD	CCM	Sys. Info.	
S60(11-)	2013	TF-80SD	CCM	Read code	
S60(11-)	2013	TF-80SD	CCM	Clear code	
S60(11-)	2013	TF-80SD	CCM	Data stream	
S60(11-)	2013	TF-80SD	CCM	Actuation	
S60(11-)	2013	TF-80SD	CCM	Special functions	Reading-out programmed parameters
S60(11-)	2013	TF-80SD	CCM	Special functions	Calibrating the Climate Control Module(CCM)
S60(11-)	2013	TF-80SD	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
S60(11-)	2013	TF-80SD	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
S60(11-)	2013	TF-80SD	CCM	Special functions	Programming the evaporator,climate control module(CCM)
S60(11-)	2013	TF-80SD	CCM	Special functions	Airflow setting in rear passenger compartment
S60(11-)	2013	TF-80SD	CCM	Special functions	Programming the climate control module(CCM)
S60(11-)	2013	TF-80SD	CCM	Special functions	Rear view mirror light sensitivity
S60(11-)	2013	TF-80SD	AUD	Sys. Info.	
S60(11-)	2013	TF-80SD	AUD	Read code	
S60(11-)	2013	TF-80SD	AUD	Clear code	
S60(11-)	2013	TF-80SD	AUD	Special functions	Checking loudspeakers
S60(11-)	2013	TF-80SD	AUD	Special functions	Checking headphone socket
S60(11-)	2013	TF-80SC AWD	DEM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	DEM	Read code	
S60(11-)	2013	TF-80SC AWD	DEM	Clear code	
S60(11-)	2013	TF-80SC AWD	DEM	Data stream	
S60(11-)	2013	TF-80SC AWD	DEM	Special functions	Calibration of differential electronic module (DEM).
S60(11-)	2013	TF-80SC AWD	ICM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	ICM	Read code	
S60(11-)	2013	TF-80SC AWD	ICM	Clear code	
S60(11-)	2013	TF-80SC AWD	ICM	Data stream	
S60(11-)	2013	TF-80SC AWD	ICM	Actuation	
S60(11-)	2013	TF-80SC AWD	SAS	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	SAS	Read code	
S60(11-)	2013	TF-80SC AWD	SAS	Clear code	
S60(11-)	2013	TF-80SC AWD	SAS	Data stream	
S60(11-)	2013	TF-80SC AWD	PAM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	PAM	Read code	
S60(11-)	2013	TF-80SC AWD	PAM	Clear code	
S60(11-)	2013	TF-80SC AWD	PAM	Data stream	
S60(11-)	2013	TF-80SC AWD	PAM	Special functions	Programming of Parking Assistance Module(PAM)
S60(11-)	2013	TF-80SC AWD	IAM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	IAM	Read code	
S60(11-)	2013	TF-80SC AWD	IAM	Clear code	
S60(11-)	2013	TF-80SC AWD	IAM	Data stream	
S60(11-)	2013	TF-80SC AWD	SUM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	SUM	Read code	
S60(11-)	2013	TF-80SC AWD	SUM	Clear code	
S60(11-)	2013	TF-80SC AWD	SUM	Data stream	
S60(11-)	2013	TF-80SC AWD	SUM	Special functions	Calibration
S60(11-)	2013	TF-80SC AWD	PBM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	PBM	Read code	
S60(11-)	2013	TF-80SC AWD	PBM	Clear code	
S60(11-)	2013	TF-80SC AWD	PBM	Data stream	
S60(11-)	2013	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
S60(11-)	2013	TF-80SC AWD	PBM	Special functions	Activation and service
S60(11-)	2013	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
S60(11-)	2013	TF-80SC AWD	CPM	Sys. Info.	

model	year	type	system	function	subfunction
S60(11-)	2013	TF-80SC AWD	CPM	Read code	
S60(11-)	2013	TF-80SC AWD	CPM	Clear code	
S60(11-)	2013	TF-80SC AWD	CPM	Data stream	
S60(11-)	2013	TF-80SC AWD	CPM	Special functions	Identification of the heater
S60(11-)	2013	TF-80SC AWD	KVM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	KVM	Read code	
S60(11-)	2013	TF-80SC AWD	KVM	Clear code	
S60(11-)	2013	TF-80SC AWD	KVM	Data stream	
S60(11-)	2013	TF-80SC AWD	KVM	Special functions	Check the communication with the remote control receiver
S60(11-)	2013	TF-80SC AWD	KVM	Special functions	Remote control
S60(11-)	2013	TF-80SC AWD	KVM	Special functions	Test of internal memory
S60(11-)	2013	TF-80SC AWD	KVM	Special functions	Checking all antennas
S60(11-)	2013	TF-80SC AWD	FSM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	FSM	Read code	
S60(11-)	2013	TF-80SC AWD	FSM	Clear code	
S60(11-)	2013	TF-80SC AWD	FSM	Data stream	
S60(11-)	2013	TF-80SC AWD	RDAR	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	RDAR	Read code	
S60(11-)	2013	TF-80SC AWD	RDAR	Clear code	
S60(11-)	2013	TF-80SC AWD	CVM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	CVM	Read code	
S60(11-)	2013	TF-80SC AWD	CVM	Clear code	
S60(11-)	2013	TF-80SC AWD	CVM	Data stream	
S60(11-)	2013	TF-80SC AWD	DABM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	DABM	Read code	
S60(11-)	2013	TF-80SC AWD	DABM	Clear code	
S60(11-)	2013	TF-80SC AWD	DABM	Data stream	
S60(11-)	2013	TF-80SC AWD	PAC	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	PAC	Read code	
S60(11-)	2013	TF-80SC AWD	PAC	Clear code	
S60(11-)	2013	TF-80SC AWD	PAC	Data stream	
S60(11-)	2013	TF-80SC AWD	TRM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	TRM	Read code	
S60(11-)	2013	TF-80SC AWD	TRM	Clear code	
S60(11-)	2013	TF-80SC AWD	TRM	Data stream	
S60(11-)	2013	TF-80SC AWD	PSCM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	PSCM	Read code	
S60(11-)	2013	TF-80SC AWD	PSCM	Clear code	
S60(11-)	2013	TF-80SC AWD	PSCM	Data stream	
S60(11-)	2013	TF-80SC AWD	PHM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	PHM	Read code	
S60(11-)	2013	TF-80SC AWD	PHM	Clear code	
S60(11-)	2013	TF-80SC AWD	PHM	Data stream	
S60(11-)	2013	TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
S60(11-)	2013	TF-80SC AWD	TVM	Sys. Info.	
S60(11-)	2013	TF-80SC AWD	TVM	Read code	
S60(11-)	2013	TF-80SC AWD	TVM	Clear code	
S60(11-)	2013	TF-80SC AWD	TVM	Data stream	
S60(11-)	2014	B4164T	ECM	Sys. Info.	
S60(11-)	2014	B4164T	ECM	Read code	
S60(11-)	2014	B4164T	ECM	Clear code	
S60(11-)	2014	B4164T	ECM	Data stream	
S60(11-)	2014	B4164T	ECM	Actuation	
S60(11-)	2014	B4164T	ECM	Freeze frame	
S60(11-)	2014	B4164T	ECM	Special functions	Adaptation of the throttle unit
S60(11-)	2014	B4164T	ECM	Special functions	Resetting the adaptation values
S60(11-)	2014	B4164T	ECM	Special functions	Adaptation of oil level sensor
S60(11-)	2014	B4164T	ECM	Special functions	Adaptation of camshafts
S60(11-)	2014	B4164T	ECM	Special functions	Checking injectors
S60(11-)	2014	B4164T2	ECM	Sys. Info.	
S60(11-)	2014	B4164T2	ECM	Read code	
S60(11-)	2014	B4164T2	ECM	Clear code	
S60(11-)	2014	B4164T2	ECM	Data stream	
S60(11-)	2014	B4164T2	ECM	Actuation	
S60(11-)	2014	B4164T2	ECM	Freeze frame	
S60(11-)	2014	B4164T2	ECM	Special functions	Adaptation of the throttle unit
S60(11-)	2014	B4164T2	ECM	Special functions	Resetting the adaptation values
S60(11-)	2014	B4164T2	ECM	Special functions	Adaptation of oil level sensor
S60(11-)	2014	B4164T2	ECM	Special functions	Adaptation of camshafts
S60(11-)	2014	B4164T2	ECM	Special functions	Checking injectors
S60(11-)	2014	B4164T3	ECM	Sys. Info.	
S60(11-)	2014	B4164T3	ECM	Read code	
S60(11-)	2014	B4164T3	ECM	Clear code	
S60(11-)	2014	B4164T3	ECM	Data stream	
S60(11-)	2014	B4164T3	ECM	Actuation	
S60(11-)	2014	B4164T3	ECM	Freeze frame	
S60(11-)	2014	B4164T3	ECM	Special functions	Adaptation of the throttle unit

model	year	type	system	function	subfunction
S60(11-)	2014	B4164T3	ECM	Special functions	Resetting the adaptation values
S60(11-)	2014	B4164T3	ECM	Special functions	Adaptation of oil level sensor
S60(11-)	2014	B4164T3	ECM	Special functions	Adaptation of camshafts
S60(11-)	2014	B4164T3	ECM	Special functions	Checking injectors
S60(11-)	2014	B5254T12	ECM	Sys. Info.	
S60(11-)	2014	B5254T12	ECM	Read code	
S60(11-)	2014	B5254T12	ECM	Clear code	
S60(11-)	2014	B5254T12	ECM	Data stream	
S60(11-)	2014	B5254T12	ECM	Actuation	
S60(11-)	2014	B5254T12	ECM	Freeze frame	
S60(11-)	2014	B5254T12	ECM	Special functions	Resetting the adaptation values
S60(11-)	2014	B5254T12	ECM	Special functions	Resetting the flywheel adaptions
S60(11-)	2014	B5254T12	ECM	Special functions	Resetting the camshaft adaption values
S60(11-)	2014	B5204T9	ECM	Sys. Info.	
S60(11-)	2014	B5204T9	ECM	Read code	
S60(11-)	2014	B5204T9	ECM	Clear code	
S60(11-)	2014	B5204T9	ECM	Data stream	
S60(11-)	2014	B5204T9	ECM	Actuation	
S60(11-)	2014	B5204T9	ECM	Freeze frame	
S60(11-)	2014	B5204T9	ECM	Special functions	Resetting the adaptation values
S60(11-)	2014	B5204T9	ECM	Special functions	Resetting the flywheel adaptions
S60(11-)	2014	B5204T9	ECM	Special functions	Resetting the camshaft adaption values
S60(11-)	2014	B5254T14	ECM	Sys. Info.	
S60(11-)	2014	B5254T14	ECM	Read code	
S60(11-)	2014	B5254T14	ECM	Clear code	
S60(11-)	2014	B5254T14	ECM	Data stream	
S60(11-)	2014	B5254T14	ECM	Actuation	
S60(11-)	2014	B5254T14	ECM	Freeze frame	
S60(11-)	2014	B5254T14	ECM	Special functions	Resetting the adaptation values
S60(11-)	2014	B5254T14	ECM	Special functions	Resetting the flywheel adaptions
S60(11-)	2014	B5254T14	ECM	Special functions	Resetting the camshaft adaption values
S60(11-)	2014	B6304T4	ECM	Sys. Info.	
S60(11-)	2014	B6304T4	ECM	Read code	
S60(11-)	2014	B6304T4	ECM	Clear code	
S60(11-)	2014	B6304T4	ECM	Data stream	
S60(11-)	2014	B6304T4	ECM	Actuation	
S60(11-)	2014	B6304T4	ECM	Freeze frame	
S60(11-)	2014	B6304T4	ECM	Special functions	Resetting the adaptation values
S60(11-)	2014	B4204T7	ECM	Sys. Info.	
S60(11-)	2014	B4204T7	ECM	Read code	
S60(11-)	2014	B4204T7	ECM	Clear code	
S60(11-)	2014	B4204T7	ECM	Data stream	
S60(11-)	2014	B4204T7	ECM	Actuation	
S60(11-)	2014	B4204T7	ECM	Freeze frame	
S60(11-)	2014	B4204T7	ECM	Special functions	Resetting the adaptation values
S60(11-)	2014	B4204T7	ECM	Special functions	Adaptation of oil level sensor
S60(11-)	2014	B4204T7	ECM	Special functions	Checking injectors
S60(11-)	2014	B4204T7	ECM	Special functions	Activation brake vacuum pump
S60(11-)	2014	B4204T15	ECM	Sys. Info.	
S60(11-)	2014	B4204T15	ECM	Read code	
S60(11-)	2014	B4204T15	ECM	Clear code	
S60(11-)	2014	B4204T15	ECM	Data stream	
S60(11-)	2014	B4204T15	ECM	Freeze frame	
S60(11-)	2014	B4204T15	ECM	Special functions	Test of fuel pressure regulation,low pressure side
S60(11-)	2014	B4204T15	ECM	Special functions	Test of fuel pressure regulation,high pressure side
S60(11-)	2014	B4204T15	ECM	Special functions	Resetting adaptations and wear counter for supercharger
S60(11-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
S60(11-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
S60(11-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
S60(11-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
S60(11-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
S60(11-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for cylinder balancing
S60(11-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for the thrittle
S60(11-)	2014	B4204T15	ECM	Special functions	Adaptation of neutral position sensor
S60(11-)	2014	B4204T11	ECM	Sys. Info.	
S60(11-)	2014	B4204T11	ECM	Read code	
S60(11-)	2014	B4204T11	ECM	Clear code	
S60(11-)	2014	B4204T11	ECM	Data stream	
S60(11-)	2014	B4204T11	ECM	Freeze frame	
S60(11-)	2014	B4204T11	ECM	Special functions	Test of fuel pressure regulation,low pressure side
S60(11-)	2014	B4204T11	ECM	Special functions	Test of fuel pressure regulation,high pressure side
S60(11-)	2014	B4204T11	ECM	Special functions	Resetting adaptations and wear counter for supercharger
S60(11-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)

model	year	type	system	function	subfunction
S60(11-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
S60(11-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
S60(11-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
S60(11-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
S60(11-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for cylinder balancing
S60(11-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for the thrittle
S60(11-)	2014	B4204T11	ECM	Special functions	Adaptation of neutral position sensor
S60(11-)	2014	B4204T12	ECM	Sys. Info.	
S60(11-)	2014	B4204T12	ECM	Read code	
S60(11-)	2014	B4204T12	ECM	Clear code	
S60(11-)	2014	B4204T12	ECM	Data stream	
S60(11-)	2014	B4204T12	ECM	Freeze frame	
S60(11-)	2014	B4204T12	ECM	Special functions	Test of fuel pressure regulation,low pressure side
S60(11-)	2014	B4204T12	ECM	Special functions	Test of fuel pressure regulation,high pressure side
S60(11-)	2014	B4204T12	ECM	Special functions	Resetting adaptations and wear counter for supercharger
S60(11-)	2014	B4204T12	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
S60(11-)	2014	B4204T12	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
S60(11-)	2014	B4204T12	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
S60(11-)	2014	B4204T12	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
S60(11-)	2014	B4204T12	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
S60(11-)	2014	B4204T12	ECM	Special functions	Resetting adaptations for cylinder balancing
S60(11-)	2014	B4204T12	ECM	Special functions	Resetting adaptations for the thrittle
S60(11-)	2014	B4204T12	ECM	Special functions	Adaptation of neutral position sensor
S60(11-)	2014	B4204T9	ECM	Sys. Info.	
S60(11-)	2014	B4204T9	ECM	Read code	
S60(11-)	2014	B4204T9	ECM	Clear code	
S60(11-)	2014	B4204T9	ECM	Data stream	
S60(11-)	2014	B4204T9	ECM	Freeze frame	
S60(11-)	2014	B4204T9	ECM	Special functions	Test of fuel pressure regulation,low pressure side
S60(11-)	2014	B4204T9	ECM	Special functions	Test of fuel pressure regulation,high pressure side
S60(11-)	2014	B4204T9	ECM	Special functions	Resetting adaptations and wear counter for supercharger
S60(11-)	2014	B4204T9	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
S60(11-)	2014	B4204T9	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
S60(11-)	2014	B4204T9	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
S60(11-)	2014	B4204T9	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
S60(11-)	2014	B4204T9	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
S60(11-)	2014	B4204T9	ECM	Special functions	Resetting adaptations for cylinder balancing
S60(11-)	2014	B4204T9	ECM	Special functions	Resetting adaptations for the thrittle
S60(11-)	2014	B4204T9	ECM	Special functions	Adaptation of neutral position sensor
S60(11-)	2014	B4204T10	ECM	Sys. Info.	
S60(11-)	2014	B4204T10	ECM	Read code	
S60(11-)	2014	B4204T10	ECM	Clear code	
S60(11-)	2014	B4204T10	ECM	Data stream	
S60(11-)	2014	B4204T10	ECM	Freeze frame	
S60(11-)	2014	B4204T10	ECM	Special functions	Test of fuel pressure regulation,low pressure side
S60(11-)	2014	B4204T10	ECM	Special functions	Test of fuel pressure regulation,high pressure side
S60(11-)	2014	B4204T10	ECM	Special functions	Resetting adaptations and wear counter for supercharger
S60(11-)	2014	B4204T10	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
S60(11-)	2014	B4204T10	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
S60(11-)	2014	B4204T10	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
S60(11-)	2014	B4204T10	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
S60(11-)	2014	B4204T10	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
S60(11-)	2014	B4204T10	ECM	Special functions	Resetting adaptations for cylinder balancing
S60(11-)	2014	B4204T10	ECM	Special functions	Resetting adaptations for the thrittle
S60(11-)	2014	B4204T10	ECM	Special functions	Adaptation of neutral position sensor
S60(11-)	2014	D5244T11	Diesel Eng	Sys. Info.	
S60(11-)	2014	D5244T11	Diesel Eng	Read code	
S60(11-)	2014	D5244T11	Diesel Eng	Clear code	
S60(11-)	2014	D5244T11	Diesel Eng	Data stream	
S60(11-)	2014	D5244T11	Diesel Eng	Actuation	
S60(11-)	2014	D5244T11	Diesel Eng	Freeze frame	
S60(11-)	2014	D5244T11	Diesel Eng	Special functions	Resetting counter particle filter
S60(11-)	2014	D5244T11	Diesel Eng	Special functions	Checking injectors
S60(11-)	2014	D5244T11	Diesel Eng	Special functions	Adaptation of throttle module
S60(11-)	2014	D5244T11	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60(11-)	2014	D5244T11	Diesel Eng	Special functions	Checking the oil level
S60(11-)	2014	D5244T15	Diesel Eng	Sys. Info.	



model	year	type	system	function	subfunction
S60(11-)	2014	D5244T15	Diesel Eng	Read code	
S60(11-)	2014	D5244T15	Diesel Eng	Clear code	
S60(11-)	2014	D5244T15	Diesel Eng	Data stream	
S60(11-)	2014	D5244T15	Diesel Eng	Actuation	
S60(11-)	2014	D5244T15	Diesel Eng	Freeze frame	
S60(11-)	2014	D5244T15	Diesel Eng	Special functions	Resetting counter particle filter
S60(11-)	2014	D5244T15	Diesel Eng	Special functions	Checking injectors
S60(11-)	2014	D5244T15	Diesel Eng	Special functions	Adaptation of throttle module
S60(11-)	2014	D5244T15	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60(11-)	2014	D5244T15	Diesel Eng	Special functions	Checking the oil level
S60(11-)	2014	D4162T	Diesel Eng	Sys. Info.	
S60(11-)	2014	D4162T	Diesel Eng	Read code	
S60(11-)	2014	D4162T	Diesel Eng	Clear code	
S60(11-)	2014	D4162T	Diesel Eng	Data stream	
S60(11-)	2014	D4162T	Diesel Eng	Actuation	
S60(11-)	2014	D4162T	Diesel Eng	Freeze frame	
S60(11-)	2014	D4162T	Diesel Eng	Special functions	Adaptation of neutral position sensor
S60(11-)	2014	D4204T5	Diesel Eng	Sys. Info.	
S60(11-)	2014	D4204T5	Diesel Eng	Read code	
S60(11-)	2014	D4204T5	Diesel Eng	Clear code	
S60(11-)	2014	D4204T5	Diesel Eng	Data stream	
S60(11-)	2014	D4204T5	Diesel Eng	Actuation	
S60(11-)	2014	D4204T5	Diesel Eng	Freeze frame	
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Test of fuel pressure regulation,high pressure side
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Test of fuel flow regulation valve
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Testing the fuel pressure control valve
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for fuel flow regulation valve
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for swirl damper
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for turbocharger control
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the EGR valve
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the diesel particle filter
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the particle filter differential pressure sensor
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for front heated oxygen sensor
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for rear heated oxygen sensor
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the injectors
S60(11-)	2014	D4204T5	Diesel Eng	Special functions	Adaptation of neutral position sensor
S60(11-)	2014	MPS6	TCM	Sys. Info.	
S60(11-)	2014	MPS6	TCM	Read code	
S60(11-)	2014	MPS6	TCM	Clear code	
S60(11-)	2014	MPS6	TCM	Data stream	
S60(11-)	2014	MPS6	TCM	Special functions	Resetting adaptation
S60(11-)	2014	MPS6	TCM	Special functions	Resetting the Transmission fluid change counter
S60(11-)	2014	MPS6	TCM	Special functions	Calibration of gear indication
S60(11-)	2014	MPS6	TCM	Special functions	Activating of gear indication
S60(11-)	2014	MPS6	TCM	Special functions	Control module adaptation
S60(11-)	2014	TG-81SC	TCM	Sys. Info.	
S60(11-)	2014	TG-81SC	TCM	Read code	
S60(11-)	2014	TG-81SC	TCM	Clear code	
S60(11-)	2014	TG-81SC	TCM	Data stream	
S60(11-)	2014	TG-81SC	TCM	Actuation	
S60(11-)	2014	TG-81SC	TCM	Special functions	Resetting adaptation
S60(11-)	2014	TG-81SC	TCM	Special functions	Calibration of gear position sensor
S60(11-)	2014	TG-81SC	TCM	Special functions	Activating gear indication
S60(11-)	2014	TG-81SC	TCM	Special functions	Control module adaptation
S60(11-)	2014	TG-81SC	ABS	Sys. Info.	
S60(11-)	2014	TG-81SC	ABS	Read code	
S60(11-)	2014	TG-81SC	ABS	Clear code	
S60(11-)	2014	TG-81SC	ABS	Data stream	
S60(11-)	2014	TG-81SC	ABS	Actuation	
S60(11-)	2014	TG-81SC	ABS	Freeze frame	
S60(11-)	2014	TG-81SC	ABS	Special functions	Calibration
S60(11-)	2014	TG-81SC	ABS	Special functions	Restart of the brake control module (BCM)
S60(11-)	2014	TG-81SC	SRS	Sys. Info.	
S60(11-)	2014	TG-81SC	SRS	Read code	
S60(11-)	2014	TG-81SC	SRS	Clear code	
S60(11-)	2014	TG-81SC	SRS	Data stream	
S60(11-)	2014	TG-81SC	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
S60(11-)	2014	TG-81SC	SRS	Special functions	Checking the PAD-light
S60(11-)	2014	TG-81SC	CEM	Sys. Info.	
S60(11-)	2014	TG-81SC	CEM	Read code	
S60(11-)	2014	TG-81SC	CEM	Clear code	
S60(11-)	2014	TG-81SC	CEM	Data stream	
S60(11-)	2014	TG-81SC	CEM	Actuation	
S60(11-)	2014	TG-81SC	CEM	Special functions	Workshop test(TPMS)
S60(11-)	2014	TG-81SC	CEM	Special functions	Reading off power supply position
S60(11-)	2014	TG-81SC	CEM	Special functions	Read-out and resetting alco-lock
S60(11-)	2014	TG-81SC	CEM	Special functions	Reading off alarm cause

model	year	type	system	function	subfunction
S60(11-)	2014	TG-81SC	CEM	Special functions	Activating wipers,front/rear
S60(11-)	2014	TG-81SC	CEM	Special functions	Operating and initating the roof hatch
S60(11-)	2014	TG-81SC	CEM	Special functions	Restoring supplemental restraint system
S60(11-)	2014	TG-81SC	CEM	Special functions	Setting day and night mode for the instrumentation
S60(11-)	2014	TG-81SC	CEM	Special functions	Activating steering wheel heating
S60(11-)	2014	TG-81SC	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
S60(11-)	2014	TG-81SC	CEM	Special functions	Readout of current from battery monitoring sensor
S60(11-)	2014	TG-81SC	CEM	Special functions	Readout of information stand-by current
S60(11-)	2014	TG-81SC	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
S60(11-)	2014	TG-81SC	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
S60(11-)	2014	TG-81SC	CEM	Special functions	Remote controlled immobilising,status
S60(11-)	2014	TG-81SC	CEM	Special functions	Remote controlled immobilising,cause
S60(11-)	2014	TG-81SC	DIM	Sys. Info.	
S60(11-)	2014	TG-81SC	DIM	Read code	
S60(11-)	2014	TG-81SC	DIM	Clear code	
S60(11-)	2014	TG-81SC	DIM	Data stream	
S60(11-)	2014	TG-81SC	PDM	Sys. Info.	
S60(11-)	2014	TG-81SC	PDM	Read code	
S60(11-)	2014	TG-81SC	PDM	Clear code	
S60(11-)	2014	TG-81SC	PDM	Data stream	
S60(11-)	2014	TG-81SC	PDM	Actuation	
S60(11-)	2014	TG-81SC	PSM	Sys. Info.	
S60(11-)	2014	TG-81SC	PSM	Read code	
S60(11-)	2014	TG-81SC	PSM	Clear code	
S60(11-)	2014	TG-81SC	PSM	Data stream	
S60(11-)	2014	TG-81SC	PSM	Actuation	
S60(11-)	2014	TG-81SC	DDM	Sys. Info.	
S60(11-)	2014	TG-81SC	DDM	Read code	
S60(11-)	2014	TG-81SC	DDM	Clear code	
S60(11-)	2014	TG-81SC	DDM	Data stream	
S60(11-)	2014	TG-81SC	DDM	Actuation	
S60(11-)	2014	TG-81SC	CCM	Sys. Info.	
S60(11-)	2014	TG-81SC	CCM	Read code	
S60(11-)	2014	TG-81SC	CCM	Clear code	
S60(11-)	2014	TG-81SC	CCM	Data stream	
S60(11-)	2014	TG-81SC	CCM	Actuation	
S60(11-)	2014	TG-81SC	CCM	Special functions	Reading off programmed values
S60(11-)	2014	TG-81SC	CCM	Special functions	Calibrating the Climate Control Module(CCM)
S60(11-)	2014	TG-81SC	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
S60(11-)	2014	TG-81SC	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
S60(11-)	2014	TG-81SC	CCM	Special functions	Programming the evaporator,climate control moudule(CCM)
S60(11-)	2014	TG-81SC	CCM	Special functions	Airflow setting in rear passenger compartment
S60(11-)	2014	TG-81SC	CCM	Special functions	Programming the climate control module(CCM)
S60(11-)	2014	TG-81SC	CCM	Special functions	Rear view mirror light sensitivity
S60(11-)	2014	TG-81SC	AUD	Sys. Info.	
S60(11-)	2014	TG-81SC	AUD	Read code	
S60(11-)	2014	TG-81SC	AUD	Clear code	
S60(11-)	2014	TG-81SC	AUD	Data stream	
S60(11-)	2014	TG-81SC	AUD	Special functions	Checking headphone socket
S60(11-)	2014	TG-81SC	AUD	Special functions	Checking loudspeakers
S60(11-)	2014	TG-81SC	DEM	Sys. Info.	
S60(11-)	2014	TG-81SC	DEM	Read code	
S60(11-)	2014	TG-81SC	DEM	Clear code	
S60(11-)	2014	TG-81SC	DEM	Data stream	
S60(11-)	2014	TG-81SC	DEM	Special functions	Calibration of differential electronic module (DEM).
S60(11-)	2014	TG-81SC	ICM	Sys. Info.	
S60(11-)	2014	TG-81SC	ICM	Read code	
S60(11-)	2014	TG-81SC	ICM	Clear code	
S60(11-)	2014	TG-81SC	ICM	Data stream	
S60(11-)	2014	TG-81SC	ICM	Special functions	Communication on MOST
S60(11-)	2014	TG-81SC	SAS	Sys. Info.	
S60(11-)	2014	TG-81SC	SAS	Read code	
S60(11-)	2014	TG-81SC	SAS	Clear code	
S60(11-)	2014	TG-81SC	SAS	Data stream	
S60(11-)	2014	TG-81SC	PAM	Sys. Info.	
S60(11-)	2014	TG-81SC	PAM	Read code	
S60(11-)	2014	TG-81SC	PAM	Clear code	
S60(11-)	2014	TG-81SC	PAM	Data stream	
S60(11-)	2014	TG-81SC	IAM	Sys. Info.	
S60(11-)	2014	TG-81SC	IAM	Read code	
S60(11-)	2014	TG-81SC	IAM	Clear code	
S60(11-)	2014	TG-81SC	IAM	Data stream	

model	year	type	system	function	subfunction
S60(11-)	2014	TG-81SC	SUM	Sys. Info.	
S60(11-)	2014	TG-81SC	SUM	Read code	
S60(11-)	2014	TG-81SC	SUM	Clear code	
S60(11-)	2014	TG-81SC	SUM	Data stream	
S60(11-)	2014	TG-81SC	PBM	Sys. Info.	
S60(11-)	2014	TG-81SC	PBM	Read code	
S60(11-)	2014	TG-81SC	PBM	Clear code	
S60(11-)	2014	TG-81SC	PBM	Data stream	
S60(11-)	2014	TG-81SC	PBM	Special functions	Calibration angle sensor
S60(11-)	2014	TG-81SC	PBM	Special functions	Activation and service
S60(11-)	2014	TG-81SC	PBM	Special functions	Resetting the clutch pedal counter
S60(11-)	2014	TG-81SC	CPM	Sys. Info.	
S60(11-)	2014	TG-81SC	CPM	Read code	
S60(11-)	2014	TG-81SC	CPM	Clear code	
S60(11-)	2014	TG-81SC	CPM	Data stream	
S60(11-)	2014	TG-81SC	CPM	Special functions	Identification of the heater
S60(11-)	2014	TG-81SC	KVM	Sys. Info.	
S60(11-)	2014	TG-81SC	KVM	Read code	
S60(11-)	2014	TG-81SC	KVM	Clear code	
S60(11-)	2014	TG-81SC	KVM	Data stream	
S60(11-)	2014	TG-81SC	KVM	Special functions	Check the communication with the remote control receiver
S60(11-)	2014	TG-81SC	KVM	Special functions	Remote control
S60(11-)	2014	TG-81SC	KVM	Special functions	Test of internal memory
S60(11-)	2014	TG-81SC	KVM	Special functions	Checking all antennas
S60(11-)	2014	TG-81SC	FSM	Sys. Info.	
S60(11-)	2014	TG-81SC	FSM	Read code	
S60(11-)	2014	TG-81SC	FSM	Clear code	
S60(11-)	2014	TG-81SC	FSM	Data stream	
S60(11-)	2014	TG-81SC	FSM	Special functions	Calibration of radar and camera.
S60(11-)	2014	TG-81SC	FSM	Special functions	Activating heating coil,FSM
S60(11-)	2014	TG-81SC	FSM	Special functions	Activating of the indicator for visual collision warning
S60(11-)	2014	TG-81SC	FSM	Special functions	Activating the internal test procedures
S60(11-)	2014	TG-81SC	RDAR	Sys. Info.	
S60(11-)	2014	TG-81SC	RDAR	Read code	
S60(11-)	2014	TG-81SC	RDAR	Clear code	
S60(11-)	2014	TG-81SC	CVM	Sys. Info.	
S60(11-)	2014	TG-81SC	CVM	Read code	
S60(11-)	2014	TG-81SC	CVM	Clear code	
S60(11-)	2014	TG-81SC	CVM	Data stream	
S60(11-)	2014	TG-81SC	DABM	Sys. Info.	
S60(11-)	2014	TG-81SC	DABM	Read code	
S60(11-)	2014	TG-81SC	DABM	Clear code	
S60(11-)	2014	TG-81SC	DABM	Data stream	
S60(11-)	2014	TG-81SC	PAC	Sys. Info.	
S60(11-)	2014	TG-81SC	PAC	Read code	
S60(11-)	2014	TG-81SC	PAC	Clear code	
S60(11-)	2014	TG-81SC	PAC	Special functions	Parking camera,setting(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
S60(11-)	2014	TG-81SC	PAC	Special functions	Parking camera,activating(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
S60(11-)	2014	TG-81SC	TRM	Sys. Info.	
S60(11-)	2014	TG-81SC	TRM	Read code	
S60(11-)	2014	TG-81SC	TRM	Clear code	
S60(11-)	2014	TG-81SC	TRM	Data stream	
S60(11-)	2014	TG-81SC	PSCM	Sys. Info.	
S60(11-)	2014	TG-81SC	PSCM	Read code	
S60(11-)	2014	TG-81SC	PSCM	Clear code	
S60(11-)	2014	TG-81SC	PHM	Sys. Info.	
S60(11-)	2014	TG-81SC	PHM	Read code	
S60(11-)	2014	TG-81SC	PHM	Clear code	
S60(11-)	2014	TG-81SC	PHM	Data stream	
S60(11-)	2014	TG-81SC	PHM	Special functions	Reinstalling the reserve battery
S60(11-)	2014	TG-81SC	TVM	Sys. Info.	
S60(11-)	2014	TG-81SC	TVM	Read code	
S60(11-)	2014	TG-81SC	TVM	Clear code	
S60(11-)	2014	TG-81SC	SODR	Sys. Info.	
S60(11-)	2014	TG-81SC	SODR	Read code	
S60(11-)	2014	TG-81SC	SODR	Clear code	
S60(11-)	2014	TG-81SC	SODR	Data stream	
S60(11-)	2014	TG-81SC	SODL	Sys. Info.	
S60(11-)	2014	TG-81SC	SODL	Read code	
S60(11-)	2014	TG-81SC	SODL	Clear code	
S60(11-)	2014	TG-81SC	SODL	Data stream	
S60(11-)	2015-2017	B6304T4	ECM	Sys. Info.	
S60(11-)	2015-2017	B6304T4	ECM	Read code	
S60(11-)	2015-2017	B6304T4	ECM	Clear code	
S60(11-)	2015-2017	B6304T4	ECM	Data stream	

model	year	type	system	function	subfunction
S60(11-)	2015-2017	B6304T4	ECM	Actuation	
S60(11-)	2015-2017	B6304T4	ECM	Freeze frame	
S60(11-)	2015-2017	B6304T4	ECM	Special functions	Resetting the adaptation values
S60(11-)	2015-2017	B4164T2	ECM	Sys. Info.	
S60(11-)	2015-2017	B4164T2	ECM	Read code	
S60(11-)	2015-2017	B4164T2	ECM	Clear code	
S60(11-)	2015-2017	B4164T2	ECM	Data stream	
S60(11-)	2015-2017	B4164T2	ECM	Actuation	
S60(11-)	2015-2017	B4164T2	ECM	Freeze frame	
S60(11-)	2015-2017	B4164T2	ECM	Special functions	Adaptation of the throttle unit
S60(11-)	2015-2017	B4164T2	ECM	Special functions	Resetting the adaptation values
S60(11-)	2015-2017	B4164T2	ECM	Special functions	Adaptation of oil level sensor
S60(11-)	2015-2017	B4164T2	ECM	Special functions	Adaptation of camshafts
S60(11-)	2015-2017	B4164T2	ECM	Special functions	Checking injectors
S60(11-)	2015-2017	B5254T14	ECM	Sys. Info.	
S60(11-)	2015-2017	B5254T14	ECM	Read code	
S60(11-)	2015-2017	B5254T14	ECM	Clear code	
S60(11-)	2015-2017	B5254T14	ECM	Data stream	
S60(11-)	2015-2017	B5254T14	ECM	Actuation	
S60(11-)	2015-2017	B5254T14	ECM	Freeze frame	
S60(11-)	2015-2017	B5254T14	ECM	Special functions	Resetting the fuel adaption values
S60(11-)	2015-2017	B5254T14	ECM	Special functions	Resetting the flywheel adaptions
S60(11-)	2015-2017	B5254T14	ECM	Special functions	Resetting the camshaft adaption values
S60(11-)	2015-2017	B4204T9	ECM	Sys. Info.	
S60(11-)	2015-2017	B4204T9	ECM	Read code	
S60(11-)	2015-2017	B4204T9	ECM	Clear code	
S60(11-)	2015-2017	B4204T9	ECM	Data stream	
S60(11-)	2015-2017	B4204T9	ECM	Freeze frame	
S60(11-)	2015-2017	B4204T9	ECM	Special functions	Test of fuel pressure regulation,low pressure side
S60(11-)	2015-2017	B4204T9	ECM	Special functions	Test of fuel pressure regulation,high pressure side
S60(11-)	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations and wear counter for supercharger
S60(11-)	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
S60(11-)	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
S60(11-)	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
S60(11-)	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
S60(11-)	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
S60(11-)	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for cylinder balancing
S60(11-)	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for the thrittleAdaptation of neutral position sensor
S60(11-)	2015-2017	B6304T5	ECM	Sys. Info.	
S60(11-)	2015-2017	B6304T5	ECM	Read code	
S60(11-)	2015-2017	B6304T5	ECM	Clear code	
S60(11-)	2015-2017	B6304T5	ECM	Data stream	
S60(11-)	2015-2017	B6304T5	ECM	Actuation	
S60(11-)	2015-2017	B6304T5	ECM	Freeze frame	
S60(11-)	2015-2017	B6304T5	ECM	Special functions	Resetting the adaptation values
S60(11-)	2015-2017	D4204T5	Diesel Eng	Sys. Info.	
S60(11-)	2015-2017	D4204T5	Diesel Eng	Read code	
S60(11-)	2015-2017	D4204T5	Diesel Eng	Clear code	
S60(11-)	2015-2017	D4204T5	Diesel Eng	Data stream	
S60(11-)	2015-2017	D4204T5	Diesel Eng	Actuation	
S60(11-)	2015-2017	D4204T5	Diesel Eng	Freeze frame	
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Test of fuel pressure regulation,high pressure side
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Test of fuel flow regulation valve
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Testing the fuel pressure control valve
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Resetting adaptations for fuel flow regulation valve
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Resetting adaptations for swirl damper
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Resetting adaptations for turbocharger control
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the EGR valve
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the diesel particle filter
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the particle filter differential pressure sensor
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Resetting adaptations for front heated oxygen sensor
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Resetting adaptations for rear heated oxygen sensor
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the injectors
S60(11-)	2015-2017	D4204T5	Diesel Eng	Special functions	Adaptation of neutral position sensor
S60(11-)	2015-2017	D5244T15	Diesel Eng	Sys. Info.	
S60(11-)	2015-2017	D5244T15	Diesel Eng	Read code	
S60(11-)	2015-2017	D5244T15	Diesel Eng	Clear code	
S60(11-)	2015-2017	D5244T15	Diesel Eng	Data stream	
S60(11-)	2015-2017	D5244T15	Diesel Eng	Actuation	
S60(11-)	2015-2017	D5244T15	Diesel Eng	Freeze frame	
S60(11-)	2015-2017	D5244T15	Diesel Eng	Special functions	Resetting counter particle filter
S60(11-)	2015-2017	D5244T15	Diesel Eng	Special functions	Checking injectors
S60(11-)	2015-2017	D5244T15	Diesel Eng	Special functions	Adaptation of throttle module

model	year	type	system	function	subfunction
S60(11-)	2015-2017	D5244T15	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S60(11-)	2015-2017	D5244T15	Diesel Eng	Special functions	Checking the oil level
S60(11-)	2015-2017	D4162T	Diesel Eng	Sys. Info.	
S60(11-)	2015-2017	D4162T	Diesel Eng	Read code	
S60(11-)	2015-2017	D4162T	Diesel Eng	Clear code	
S60(11-)	2015-2017	D4162T	Diesel Eng	Data stream	
S60(11-)	2015-2017	D4162T	Diesel Eng	Actuation	
S60(11-)	2015-2017	D4162T	Diesel Eng	Freeze frame	
S60(11-)	2015-2017	D4162T	Diesel Eng	Special functions	Adaptation of neutral position sensor
S60(11-)	2015-2017	D4162T	SRS	Sys. Info.	
S60(11-)	2015-2017	D4162T	SRS	Read code	
S60(11-)	2015-2017	D4162T	SRS	Clear code	
S60(11-)	2015-2017	D4162T	SRS	Data stream	
S60(11-)	2015-2017	D4162T	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
S60(11-)	2015-2017	D4162T	CPM	Sys. Info.	
S60(11-)	2015-2017	D4162T	CPM	Read code	
S60(11-)	2015-2017	D4162T	CPM	Clear code	
S60(11-)	2015-2017	D4162T	CPM	Data stream	
S60(11-)	2015-2017	D4162T	CPM	Special functions	Identification of the heater
S60(11-)	2015-2017	D4162T	CEM	Sys. Info.	
S60(11-)	2015-2017	D4162T	CEM	Read code	
S60(11-)	2015-2017	D4162T	CEM	Clear code	
S60(11-)	2015-2017	D4162T	CEM	Data stream	
S60(11-)	2015-2017	D4162T	CEM	Actuation	
S60(11-)	2015-2017	D4162T	CEM	Special functions	Workshop test(TPMS)
S60(11-)	2015-2017	D4162T	CEM	Special functions	Reading off power supply position
S60(11-)	2015-2017	D4162T	CEM	Special functions	Read-out and resetting alco-lock
S60(11-)	2015-2017	D4162T	CEM	Special functions	Reading off alarm cause
S60(11-)	2015-2017	D4162T	CEM	Special functions	Activating wipers,front/rear
S60(11-)	2015-2017	D4162T	CEM	Special functions	Operating and initiating the roof hatch
S60(11-)	2015-2017	D4162T	CEM	Special functions	Restoring supplemental restraint system
S60(11-)	2015-2017	D4162T	CEM	Special functions	Setting day and night mode for the instrumentation
S60(11-)	2015-2017	D4162T	CEM	Special functions	Activating steering wheel heating
S60(11-)	2015-2017	D4162T	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
S60(11-)	2015-2017	D4162T	CEM	Special functions	Readout of current from battery monitoring sensor
S60(11-)	2015-2017	D4162T	CEM	Special functions	Readout of information stand-by current
S60(11-)	2015-2017	D4162T	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
S60(11-)	2015-2017	D4162T	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
S60(11-)	2015-2017	D4162T	CEM	Special functions	Remote controlled immobilising,status
S60(11-)	2015-2017	D4162T	CEM	Special functions	Remote controlled immobilising,cause
S60(11-)	2015-2017	D4162T	PHM	Sys. Info.	
S60(11-)	2015-2017	D4162T	PHM	Read code	
S60(11-)	2015-2017	D4162T	PHM	Clear code	
S60(11-)	2015-2017	D4162T	PHM	Data stream	
S60(11-)	2015-2017	D4162T	PHM	Special functions	Reinstalling the reserve battery
S60(11-)	2015-2017	D4162T	PAM	Sys. Info.	
S60(11-)	2015-2017	D4162T	PAM	Read code	
S60(11-)	2015-2017	D4162T	PAM	Clear code	
S60(11-)	2015-2017	D4162T	PAM	Data stream	
S60(11-)	2015-2017	D4162T	RDAR	Sys. Info.	
S60(11-)	2015-2017	D4162T	RDAR	Read code	
S60(11-)	2015-2017	D4162T	RDAR	Clear code	
S60(11-)	2015-2017	D4162T	AUD	Sys. Info.	
S60(11-)	2015-2017	D4162T	AUD	Read code	
S60(11-)	2015-2017	D4162T	AUD	Clear code	
S60(11-)	2015-2017	D4162T	AUD	Special functions	Checking headphone socket
S60(11-)	2015-2017	D4162T	AUD	Special functions	Checking loudspeakers
S60(11-)	2015-2017	D4162T	ABS	Sys. Info.	
S60(11-)	2015-2017	D4162T	ABS	Read code	
S60(11-)	2015-2017	D4162T	ABS	Clear code	
S60(11-)	2015-2017	D4162T	ABS	Data stream	
S60(11-)	2015-2017	D4162T	ABS	Actuation	
S60(11-)	2015-2017	D4162T	ABS	Freeze frame	
S60(11-)	2015-2017	D4162T	ABS	Special functions	Calibration
S60(11-)	2015-2017	D4162T	ABS	Special functions	Restart of the brake control module (BCM)
S60(11-)	2015-2017	D4162T	CCM	Sys. Info.	
S60(11-)	2015-2017	D4162T	CCM	Read code	
S60(11-)	2015-2017	D4162T	CCM	Clear code	
S60(11-)	2015-2017	D4162T	CCM	Data stream	
S60(11-)	2015-2017	D4162T	CCM	Actuation	
S60(11-)	2015-2017	D4162T	CCM	Special functions	Reading off programmed values
S60(11-)	2015-2017	D4162T	CCM	Special functions	Calibrating the Climate Control Module(CCM)
S60(11-)	2015-2017	D4162T	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)

model	year	type	system	function	subfunction
S60(11-)	2015-2017	D4162T	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
S60(11-)	2015-2017	D4162T	CCM	Special functions	Programming the evaporator,climate control module(CCM)
S60(11-)	2015-2017	D4162T	CCM	Special functions	Airflow setting in rear passenger compartment
S60(11-)	2015-2017	D4162T	CCM	Special functions	Programming the climate control module(CCM)Rear view mirror light sensitivity
S60(11-)	2015-2017	D4162T	CVM	Sys. Info.	
S60(11-)	2015-2017	D4162T	CVM	Read code	
S60(11-)	2015-2017	D4162T	CVM	Clear code	
S60(11-)	2015-2017	D4162T	CVM	Data stream	
S60(11-)	2015-2017	D4162T	DABM	Sys. Info.	
S60(11-)	2015-2017	D4162T	DABM	Read code	
S60(11-)	2015-2017	D4162T	DABM	Clear code	
S60(11-)	2015-2017	D4162T	DABM	Data stream	
S60(11-)	2015-2017	D4162T	DDM	Sys. Info.	
S60(11-)	2015-2017	D4162T	DDM	Read code	
S60(11-)	2015-2017	D4162T	DDM	Clear code	
S60(11-)	2015-2017	D4162T	DDM	Data stream	
S60(11-)	2015-2017	D4162T	DDM	Actuation	
S60(11-)	2015-2017	D4162T	DDM	Special functions	Initializing the window in the front door.
S60(11-)	2015-2017	D4162T	DDM	Special functions	Initializing the window in the rear door.
S60(11-)	2015-2017	D4162T	DDM	Special functions	Central lock motors,activating
S60(11-)	2015-2017	D4162T	DEM	Sys. Info.	
S60(11-)	2015-2017	D4162T	DEM	Read code	
S60(11-)	2015-2017	D4162T	DEM	Clear code	
S60(11-)	2015-2017	D4162T	DEM	Data stream	
S60(11-)	2015-2017	D4162T	DEM	Special functions	Calibration of differential electronic module (DEM).
S60(11-)	2015-2017	D4162T	DIM	Sys. Info.	
S60(11-)	2015-2017	D4162T	DIM	Read code	
S60(11-)	2015-2017	D4162T	DIM	Clear code	
S60(11-)	2015-2017	D4162T	DIM	Data stream	
S60(11-)	2015-2017	D4162T	DIM	Special functions	Resetting the service reminder indicator (SRI)
S60(11-)	2015-2017	D4162T	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
S60(11-)	2015-2017	D4162T	DIM	Special functions	Read-out of fuel volume
S60(11-)	2015-2017	D4162T	DIM	Special functions	Display of vehicle speed
S60(11-)	2015-2017	D4162T	DIM	Special functions	Programming seatbelt reminder in backseat
S60(11-)	2015-2017	D4162T	DIM	Special functions	Programming text message,seatbelt reminder
S60(11-)	2015-2017	D4162T	FSM	Sys. Info.	
S60(11-)	2015-2017	D4162T	FSM	Read code	
S60(11-)	2015-2017	D4162T	FSM	Clear code	
S60(11-)	2015-2017	D4162T	FSM	Data stream	
S60(11-)	2015-2017	D4162T	FSM	Special functions	Calibration of radar and camera.
S60(11-)	2015-2017	D4162T	FSM	Special functions	Activating heating coil,FSM
S60(11-)	2015-2017	D4162T	FSM	Special functions	Activating of the indicator for visual collision warning
S60(11-)	2015-2017	D4162T	FSM	Special functions	Activating the internal test procedures
S60(11-)	2015-2017	D4162T	IAM	Sys. Info.	
S60(11-)	2015-2017	D4162T	IAM	Read code	
S60(11-)	2015-2017	D4162T	IAM	Clear code	
S60(11-)	2015-2017	D4162T	IAM	Data stream	
S60(11-)	2015-2017	D4162T	ICM	Sys. Info.	
S60(11-)	2015-2017	D4162T	ICM	Read code	
S60(11-)	2015-2017	D4162T	ICM	Clear code	
S60(11-)	2015-2017	D4162T	ICM	Data stream	
S60(11-)	2015-2017	D4162T	ICM	Special functions	Communication on MOST
S60(11-)	2015-2017	D4162T	KVM	Sys. Info.	
S60(11-)	2015-2017	D4162T	KVM	Read code	
S60(11-)	2015-2017	D4162T	KVM	Clear code	
S60(11-)	2015-2017	D4162T	KVM	Data stream	
S60(11-)	2015-2017	D4162T	KVM	Special functions	Checking all antennas
S60(11-)	2015-2017	D4162T	KVM	Special functions	Check the communication with the remote control receiver
S60(11-)	2015-2017	D4162T	KVM	Special functions	Remote control
S60(11-)	2015-2017	D4162T	KVM	Special functions	Test of internal memory
S60(11-)	2015-2017	D4162T	KVM	Special functions	Activation of quick-lock motors
S60(11-)	2015-2017	D4162T	PAC	Sys. Info.	
S60(11-)	2015-2017	D4162T	PAC	Read code	
S60(11-)	2015-2017	D4162T	PAC	Clear code	
S60(11-)	2015-2017	D4162T	PAC	Special functions	Parking camera,setting(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
S60(11-)	2015-2017	D4162T	PAC	Special functions	Parking camera,activating(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
S60(11-)	2015-2017	D4162T	PBM	Sys. Info.	
S60(11-)	2015-2017	D4162T	PBM	Read code	
S60(11-)	2015-2017	D4162T	PBM	Clear code	
S60(11-)	2015-2017	D4162T	PBM	Data stream	
S60(11-)	2015-2017	D4162T	PBM	Special functions	Calibration angle sensor

model	year	type	system	function	subfunction
S60(11-)	2015-2017	D4162T	PBM	Special functions	Activation and service
S60(11-)	2015-2017	D4162T	PBM	Special functions	Resetting the clutch pedal counter
S60(11-)	2015-2017	D4162T	PDM	Sys. Info.	
S60(11-)	2015-2017	D4162T	PDM	Read code	
S60(11-)	2015-2017	D4162T	PDM	Clear code	
S60(11-)	2015-2017	D4162T	PDM	Data stream	
S60(11-)	2015-2017	D4162T	PDM	Actuation	
S60(11-)	2015-2017	D4162T	PDM	Special functions	Initializing the window in the front door.
S60(11-)	2015-2017	D4162T	PDM	Special functions	Initializing the window in the rear door.
S60(11-)	2015-2017	D4162T	PDM	Special functions	Central lock motors,activating
S60(11-)	2015-2017	D4162T	PSCM	Sys. Info.	
S60(11-)	2015-2017	D4162T	PSCM	Read code	
S60(11-)	2015-2017	D4162T	PSCM	Clear code	
S60(11-)	2015-2017	D4162T	PSCM	Data stream	
S60(11-)	2015-2017	D4162T	PSM	Sys. Info.	
S60(11-)	2015-2017	D4162T	PSM	Read code	
S60(11-)	2015-2017	D4162T	PSM	Clear code	
S60(11-)	2015-2017	D4162T	PSM	Data stream	
S60(11-)	2015-2017	D4162T	PSM	Actuation	
S60(11-)	2015-2017	D4162T	PSM	Special functions	Programming the seat memory delay time
S60(11-)	2015-2017	D4162T	SAS	Sys. Info.	
S60(11-)	2015-2017	D4162T	SAS	Read code	
S60(11-)	2015-2017	D4162T	SAS	Clear code	
S60(11-)	2015-2017	D4162T	SAS	Data stream	
S60(11-)	2015-2017	D4162T	SODL	Sys. Info.	
S60(11-)	2015-2017	D4162T	SODL	Read code	
S60(11-)	2015-2017	D4162T	SODL	Clear code	
S60(11-)	2015-2017	D4162T	SODL	Data stream	
S60(11-)	2015-2017	D4162T	SODR	Sys. Info.	
S60(11-)	2015-2017	D4162T	SODR	Read code	
S60(11-)	2015-2017	D4162T	SODR	Clear code	
S60(11-)	2015-2017	D4162T	SODR	Data stream	
S60(11-)	2015-2017	D4162T	SUM	Sys. Info.	
S60(11-)	2015-2017	D4162T	SUM	Read code	
S60(11-)	2015-2017	D4162T	SUM	Clear code	
S60(11-)	2015-2017	D4162T	SUM	Data stream	
S60(11-)	2015-2017	D4162T	SUM	Special functions	Calibration
S60(11-)	2015-2017	D4162T	TCM	Sys. Info.	
S60(11-)	2015-2017	D4162T	TCM	Read code	
S60(11-)	2015-2017	D4162T	TCM	Clear code	
S60(11-)	2015-2017	D4162T	TCM	Data stream	
S60(11-)	2015-2017	D4162T	TCM	Freeze frame	
S60(11-)	2015-2017	D4162T	TCM	Special functions	Resetting adaptation
S60(11-)	2015-2017	D4162T	TCM	Special functions	Resetting the Transmission fluid change counter
S60(11-)	2015-2017	D4162T	TCM	Special functions	Calibration of gear indication
S60(11-)	2015-2017	D4162T	TCM	Special functions	Activating of gear indication
S60(11-)	2015-2017	D4162T	TCM	Special functions	Control module adaptation
S60(11-)	2015-2017	D4162T	TRM	Sys. Info.	
S60(11-)	2015-2017	D4162T	TRM	Read code	
S60(11-)	2015-2017	D4162T	TRM	Clear code	
S60(11-)	2015-2017	D4162T	TRM	Data stream	
S60(11-)	2015-2017	D4162T	TVM	Sys. Info.	
S60(11-)	2015-2017	D4162T	TVM	Read code	
S60(11-)	2015-2017	D4162T	TVM	Clear code	
S70		1997	D4162T	General Service	Resetting the SRL(Service Reminder Lamp)to zero
S70		1997	Engine 1	ECM	Sys. Info.
S70		1997	Engine 1	ECM	Read code
S70		1997	Engine 1	ECM	Clear code
S70		1997	Engine 1	ECM	Data stream
S70		1997	B5202FS	ECM	Read code
S70		1997	B5202FS	ECM	Clear code
S70		1997	B5202FS	ECM	Data stream
S70		1997	B5234FS	ECM	Read code
S70		1997	B5234FS	ECM	Clear code
S70		1997	B5234FS	ECM	Data stream
S70		1997	B5252FS	ECM	Read code
S70		1997	B5252FS	ECM	Clear code
S70		1997	B5252FS	ECM	Data stream
S70		1997	B5204T2	ECM	Sys. Info.
S70		1997	B5204T2	ECM	Read code
S70		1997	B5204T2	ECM	Clear code
S70		1997	B5204T2	ECM	Data stream
S70		1997	B5204T3	ECM	Sys. Info.
S70		1997	B5204T3	ECM	Read code
S70		1997	B5204T3	ECM	Clear code
S70		1997	B5204T3	ECM	Data stream
S70		1997	B5234T2	ECM	Sys. Info.

model	year	type	system	function	subfunction
S70	1997	B5234T2	ECM	Read code	
S70	1997	B5234T2	ECM	Clear code	
S70	1997	B5234T2	ECM	Data stream	
S70	1997	B5234T3	ECM	Sys. Info.	
S70	1997	B5234T3	ECM	Read code	
S70	1997	B5234T3	ECM	Clear code	
S70	1997	B5234T3	ECM	Data stream	
S70	1997	B5234T4	ECM	Sys. Info.	
S70	1997	B5234T4	ECM	Read code	
S70	1997	B5234T4	ECM	Clear code	
S70	1997	B5234T4	ECM	Data stream	
S70	1997	B5234T7	ECM	Sys. Info.	
S70	1997	B5234T7	ECM	Read code	
S70	1997	B5234T7	ECM	Clear code	
S70	1997	B5234T7	ECM	Data stream	
S70	1997	B5254FS	ECM	Sys. Info.	
S70	1997	B5254FS	ECM	Read code	
S70	1997	B5254FS	ECM	Clear code	
S70	1997	B5254FS	ECM	Data stream	
S70	1997	B5254T	ECM	Sys. Info.	
S70	1997	B5254T	ECM	Read code	
S70	1997	B5254T	ECM	Clear code	
S70	1997	B5254T	ECM	Data stream	
S70	1997	D5252T MSA 7	ECM	Sys. Info.	
S70	1997	D5252T MSA 7	ECM	Read code	
S70	1997	D5252T MSA 7	ECM	Clear code	
S70	1997	D5252T MSA 7	ECM	Data stream	
S70	1997	D5252T MSR 7	ECM	Sys. Info.	
S70	1997	D5252T MSR 7	ECM	Read code	
S70	1997	D5252T MSR 7	ECM	Clear code	
S70	1997	D5252T MSR 7	ECM	Data stream	
S70	1997	D5252T MSR 7	TCM	Sys. Info.	
S70	1997	D5252T MSR 7	TCM	Read code	
S70	1997	D5252T MSR 7	TCM	Clear code	
S70	1997	D5252T MSR 7	TCM	Data stream	
S70	1997	D5252T MSR 7	ABS	Sys. Info.	
S70	1997	D5252T MSR 7	ABS	Read code	
S70	1997	D5252T MSR 7	ABS	Clear code	
S70	1997	D5252T MSR 7	ABS	Data stream	
S70	1997	D5252T MSR 7	SRS	Sys. Info.	
S70	1997	D5252T MSR 7	SRS	Read code	
S70	1997	D5252T MSR 7	SRS	Clear code	
S70	1997	D5252T MSR 7	SRS	Data stream	
S70	1997	D5252T MSR 7	IC	Sys. Info.	
S70	1997	D5252T MSR 7	IC	Special functions	Oil lamp reset(*)
S70	1997	D5252T MSR 7	Immobilizer	Sys. Info.	
S70	1997	D5252T MSR 7	Immobilizer	Read code	
S70	1997	D5252T MSR 7	Immobilizer	Clear code	
S70	1997	D5252T MSR 7	Immobilizer	Data stream	
S70	1997	D5252T MSR 7	VGLA	Sys. Info.	



model	year	type	system	function	subfunction
S70	1997	D5252T MSR 7	VGLA	Read code	
S70	1997	D5252T MSR 7	VGLA	Clear code	
S70	1997	D5252T MSR 7	PSL	Sys. Info.	
S70	1997	D5252T MSR 7	PSL	Read code	
S70	1997	D5252T MSR 7	PSL	Clear code	
S70	1997	D5252T MSR 7	PSL	Data stream	
S70	1997	D5252T MSR 7	PSR	Sys. Info.	
S70	1997	D5252T MSR 7	PSR	Read code	
S70	1997	D5252T MSR 7	PSR	Clear code	
S70	1997	D5252T MSR 7	PSR	Data stream	
S70	1997	D5252T MSR 7	CPM	Sys. Info.	
S70	1997	D5252T MSR 7	CPM	Read code	
S70	1997	D5252T MSR 7	CPM	Clear code	
S70	1997	D5252T MSR 7	CPM	Data stream	
S70	1997	D5252T MSR 7	CPM	Actuation	
S70	1997	D5252T MSR 7	RTI	Sys. Info.	
S70	1997	D5252T MSR 7	RTI	Read code	
S70	1997	D5252T MSR 7	RTI	Clear code	
S70	1997	D5252T MSR 7	RTI	Data stream	
S70	1997	D5252T MSR 7	RTI	Actuation	
S70	1998	D5252T MSR 7	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S70	1998	Engine 1	ECM	Sys. Info.	
S70	1998	Engine 1	ECM	Read code	
S70	1998	Engine 1	ECM	Clear code	
S70	1998	Engine 1	ECM	Data stream	
S70	1998	B5202FS	ECM	Read code	
S70	1998	B5202FS	ECM	Clear code	
S70	1998	B5202FS	ECM	Data stream	
S70	1998	B5234FS	ECM	Read code	
S70	1998	B5234FS	ECM	Clear code	
S70	1998	B5234FS	ECM	Data stream	
S70	1998	B5252FS	ECM	Read code	
S70	1998	B5252FS	ECM	Clear code	
S70	1998	B5252FS	ECM	Data stream	
S70	1998	B5204T2	ECM	Sys. Info.	
S70	1998	B5204T2	ECM	Read code	
S70	1998	B5204T2	ECM	Clear code	
S70	1998	B5204T2	ECM	Data stream	
S70	1998	B5204T3	ECM	Sys. Info.	
S70	1998	B5204T3	ECM	Read code	
S70	1998	B5204T3	ECM	Clear code	
S70	1998	B5204T3	ECM	Data stream	
S70	1998	B5234T2	ECM	Sys. Info.	
S70	1998	B5234T2	ECM	Read code	
S70	1998	B5234T2	ECM	Clear code	
S70	1998	B5234T2	ECM	Data stream	
S70	1998	B5234T3	ECM	Sys. Info.	
S70	1998	B5234T3	ECM	Read code	
S70	1998	B5234T3	ECM	Clear code	
S70	1998	B5234T3	ECM	Data stream	
S70	1998	B5234T4	ECM	Sys. Info.	
S70	1998	B5234T4	ECM	Read code	
S70	1998	B5234T4	ECM	Clear code	
S70	1998	B5234T4	ECM	Data stream	
S70	1998	B5234T7	ECM	Sys. Info.	
S70	1998	B5234T7	ECM	Read code	
S70	1998	B5234T7	ECM	Clear code	

model	year	type	system	function	subfunction
S70	1998	B5234T7	ECM	Data stream	
S70	1998	B5254FS	ECM	Sys. Info.	
S70	1998	B5254FS	ECM	Read code	
S70	1998	B5254FS	ECM	Clear code	
S70	1998	B5254FS	ECM	Data stream	
S70	1998	B5254T	ECM	Sys. Info.	
S70	1998	B5254T	ECM	Read code	
S70	1998	B5254T	ECM	Clear code	
S70	1998	B5254T	ECM	Data stream	
S70	1998	D5252T MSA 7	ECM	Sys. Info.	
S70	1998	D5252T MSA 7	ECM	Read code	
S70	1998	D5252T MSA 7	ECM	Clear code	
S70	1998	D5252T MSA 7	ECM	Data stream	
S70	1998	D5252T MSR 7	ECM	Sys. Info.	
S70	1998	D5252T MSR 7	ECM	Read code	
S70	1998	D5252T MSR 7	ECM	Clear code	
S70	1998	D5252T MSR 7	ECM	Data stream	
S70	1998	D5252T MSR 7	TCM	Sys. Info.	
S70	1998	D5252T MSR 7	TCM	Read code	
S70	1998	D5252T MSR 7	TCM	Clear code	
S70	1998	D5252T MSR 7	TCM	Data stream	
S70	1998	D5252T MSR 7	ABS	Sys. Info.	
S70	1998	D5252T MSR 7	ABS	Read code	
S70	1998	D5252T MSR 7	ABS	Clear code	
S70	1998	D5252T MSR 7	ABS	Data stream	
S70	1998	D5252T MSR 7	SRS	Sys. Info.	
S70	1998	D5252T MSR 7	SRS	Read code	
S70	1998	D5252T MSR 7	SRS	Clear code	
S70	1998	D5252T MSR 7	SRS	Data stream	
S70	1998	D5252T MSR 7	IC	Sys. Info.	
S70	1998	D5252T MSR 7	IC	Special functions	Oil lamp reset(*)
S70	1998	D5252T MSR 7	Immobilizer	Sys. Info.	
S70	1998	D5252T MSR 7	Immobilizer	Read code	
S70	1998	D5252T MSR 7	Immobilizer	Clear code	
S70	1998	D5252T MSR 7	Immobilizer	Data stream	
S70	1998	D5252T MSR 7	VGLA	Sys. Info.	
S70	1998	D5252T MSR 7	VGLA	Read code	
S70	1998	D5252T MSR 7	VGLA	Clear code	
S70	1998	D5252T MSR 7	PSL	Sys. Info.	
S70	1998	D5252T MSR 7	PSL	Read code	
S70	1998	D5252T MSR 7	PSL	Clear code	
S70	1998	D5252T MSR 7	PSL	Data stream	
S70	1998	D5252T MSR 7	PSR	Sys. Info.	

model	year	type	system	function	subfunction
S70	1998	D5252T MSR 7	PSR	Read code	
S70	1998	D5252T MSR 7	PSR	Clear code	
S70	1998	D5252T MSR 7	PSR	Data stream	
S70	1998	D5252T MSR 7	CPM	Sys. Info.	
S70	1998	D5252T MSR 7	CPM	Read code	
S70	1998	D5252T MSR 7	CPM	Clear code	
S70	1998	D5252T MSR 7	CPM	Data stream	
S70	1998	D5252T MSR 7	CPM	Actuation	
S70	1998	D5252T MSR 7	RTI	Sys. Info.	
S70	1998	D5252T MSR 7	RTI	Read code	
S70	1998	D5252T MSR 7	RTI	Clear code	
S70	1998	D5252T MSR 7	RTI	Data stream	
S70	1998	D5252T MSR 7	RTI	Actuation	
S70	1999	D5252T MSR 7	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S70	1999	B5204T4	ECM	Sys. Info.	
S70	1999	B5204T4	ECM	Read code	
S70	1999	B5204T4	ECM	Clear code	
S70	1999	B5204T4	ECM	Data stream	
S70	1999	B5204T4	ECM	Actuation	
S70	1999	B5254T	ECM	Sys. Info.	
S70	1999	B5254T	ECM	Read code	
S70	1999	B5254T	ECM	Clear code	
S70	1999	B5254T	ECM	Data stream	
S70	1999	B5254T	ECM	Actuation	
S70	1999	B5204T3	ECM	Sys. Info.	
S70	1999	B5204T3	ECM	Read code	
S70	1999	B5204T3	ECM	Clear code	
S70	1999	B5204T3	ECM	Data stream	
S70	1999	B5204T3	ECM	Actuation	
S70	1999	B5234T7	ECM	Sys. Info.	
S70	1999	B5234T7	ECM	Read code	
S70	1999	B5234T7	ECM	Clear code	
S70	1999	B5234T7	ECM	Data stream	
S70	1999	B5234T7	ECM	Actuation	
S70	1999	B5234T3	ECM	Sys. Info.	
S70	1999	B5234T3	ECM	Read code	
S70	1999	B5234T3	ECM	Clear code	
S70	1999	B5234T3	ECM	Data stream	
S70	1999	B5234T3	ECM	Actuation	
S70	1999	B5254S DENSO	ECM	Sys. Info.	
S70	1999	B5254S DENSO	ECM	Read code	
S70	1999	B5254S DENSO	ECM	Clear code	
S70	1999	B5254S DENSO	ECM	Data stream	
S70	1999	B5254S DENSO	ECM	Actuation	
S70	1999	B5254S DENSO	ECM	Special functions	Programming the idle speed
S70	1999	B5254S DENSO	ECM	Special functions	Check and adjust dynamic pump setting
S70	1999	B5202FS	ECM	Read code	
S70	1999	B5202FS	ECM	Clear code	
S70	1999	B5202FS	ECM	Data stream	
S70	1999	B5234FS	ECM	Read code	
S70	1999	B5234FS	ECM	Clear code	
S70	1999	B5234FS	ECM	Data stream	
S70	1999	B5252FS	ECM	Read code	
S70	1999	B5252FS	ECM	Clear code	
S70	1999	B5252FS	ECM	Data stream	
S70	1999	D5252T MSA 7	ECM	Sys. Info.	

model	year	type	system	function	subfunction
S70	1999	D5252T MSA 7	ECM	Read code	
S70	1999	D5252T MSA 7	ECM	Clear code	
S70	1999	D5252T MSA 7	ECM	Data stream	
S70	1999	D5252T MSA 7	ECM	Actuation	
S70	1999	D4204T2	ECM	Sys. Info.	
S70	1999	D4204T2	ECM	Read code	
S70	1999	D4204T2	ECM	Clear code	
S70	1999	D4204T2	ECM	Data stream	
S70	1999	D4204T2	ECM	Actuation	
S70	1999	D4204T2	ECM	Special functions	Programming optimizing parameters
S70	1999	D4204T2	ECM	Special functions	Programming fuel pump (FP) start diesel
S70	1999	D5252T MSA 8	ECM	Sys. Info.	
S70	1999	D5252T MSA 8	ECM	Read code	
S70	1999	D5252T MSA 8	ECM	Clear code	
S70	1999	D5252T MSA 8	ECM	Data stream	
S70	1999	D5252T MSA 8	ECM	Actuation	
S70	1999	D5252T MSA 8	ECM	Special functions	Programming optimizing parameters
S70	1999	D5252T MSA 8	ECM	Special functions	Programming fuel pump (FP) start diesel
S70	1999	D5244T	Diesel Eng	Sys. Info.	
S70	1999	D5244T	Diesel Eng	Read code	
S70	1999	D5244T	Diesel Eng	Clear code	
S70	1999	D5244T	Diesel Eng	Data stream	
S70	1999	D5244T	Diesel Eng	Actuation	
S70	1999	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S70	1999	D5252T	Diesel Eng	Sys. Info.	
S70	1999	D5252T	Diesel Eng	Read code	
S70	1999	D5252T	Diesel Eng	Clear code	
S70	1999	D5252T	Diesel Eng	Data stream	
S70	1999	D5252T	Diesel Eng	Actuation	
S70	1999	D5252T	Diesel Eng	Special functions	Programming the idle speed
S70	1999	AW50-42	TCM	Sys. Info.	
S70	1999	AW50-42	TCM	Read code	
S70	1999	AW50-42	TCM	Clear code	
S70	1999	AW50-42	TCM	Data stream	
S70	1999	AW50-42	TCM	Actuation	
S70	1999	AW42 AWD	TCM	Sys. Info.	
S70	1999	AW42 AWD	TCM	Read code	
S70	1999	AW42 AWD	TCM	Clear code	
S70	1999	AW42 AWD	TCM	Data stream	
S70	1999	AW42 AWD	TCM	Actuation	
S70	1999	AW42 AWD	ABS	Sys. Info.	
S70	1999	AW42 AWD	ABS	Read code	
S70	1999	AW42 AWD	ABS	Clear code	
S70	1999	AW42 AWD	ABS	Data stream	
S70	1999	AW42 AWD	ABS	Actuation	
S70	1999	AW42 AWD	ABS	Special functions	Checking brake light switch adjustment(*)
S70	1999	AW42 AWD	ABS	Special functions	Calibration
S70	1999	AW42 AWD	SRS	Sys. Info.	
S70	1999	AW42 AWD	SRS	Read code	
S70	1999	AW42 AWD	SRS	Clear code	
S70	1999	AW42 AWD	SRS	Data stream	
S70	1999	AW42 AWD	Immobilizer	Sys. Info.	
S70	1999	AW42 AWD	Immobilizer	Read code	
S70	1999	AW42 AWD	Immobilizer	Clear code	
S70	1999	AW42 AWD	Immobilizer	Data stream	
S70	1999	AW42 AWD	Immobilizer	Actuation	
S70	1999	AW42 AWD	VGLA	Sys. Info.	
S70	1999	AW42 AWD	VGLA	Read code	
S70	1999	AW42 AWD	VGLA	Clear code	
S70	1999	AW42 AWD	VGLA	Data stream	
S70	1999	AW42 AWD	VGLA	Actuation	
S70	1999	AW42 AWD	CI	Sys. Info.	
S70	1999	AW42 AWD	CI	Read code	
S70	1999	AW42 AWD	CI	Clear code	
S70	1999	AW42 AWD	CI	Data stream	
S70	1999	AW42 AWD	CI	Actuation	
S70	1999	AW42 AWD	CI	Special functions	Resetting the service reminder indicator(SRI)

model	year	type	system	function	subfunction
S70		1999AW42 AWD	PSL	Sys. Info.	
S70		1999AW42 AWD	PSL	Read code	
S70		1999AW42 AWD	PSL	Clear code	
S70		1999AW42 AWD	PSL	Data stream	
S70		1999AW42 AWD	PSL	Actuation	
S70		1999AW42 AWD	PSR	Sys. Info.	
S70		1999AW42 AWD	PSR	Read code	
S70		1999AW42 AWD	PSR	Clear code	
S70		1999AW42 AWD	PSR	Data stream	
S70		1999AW42 AWD	PSR	Actuation	
S70		1999AW42 AWD	CPM	Sys. Info.	
S70		1999AW42 AWD	CPM	Read code	
S70		1999AW42 AWD	CPM	Clear code	
S70		1999AW42 AWD	CPM	Data stream	
S70		1999AW42 AWD	CPM	Actuation	
S70		1999AW42 AWD	CCM	Sys. Info.	
S70		1999AW42 AWD	CCM	Read code	
S70		1999AW42 AWD	CCM	Clear code	
S70		1999AW42 AWD	CCM	Data stream	
S70		1999AW42 AWD	CCM	Actuation	
S70		1999AW42 AWD	RTI	Sys. Info.	
S70		1999AW42 AWD	RTI	Read code	
S70		1999AW42 AWD	RTI	Clear code	
S70		1999AW42 AWD	RTI	Data stream	
S70		1999AW42 AWD	RTI	Actuation	
S70		2000AW42 AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S70		2000B5244T	ECM	Sys. Info.	
S70		2000B5244T	ECM	Read code	
S70		2000B5244T	ECM	Clear code	
S70		2000B5244T	ECM	Data stream	
S70		2000B5244T	ECM	Actuation	
S70		2000B5234T3	ECM	Sys. Info.	
S70		2000B5234T3	ECM	Read code	
S70		2000B5234T3	ECM	Clear code	
S70		2000B5234T3	ECM	Data stream	
S70		2000B5234T3	ECM	Actuation	
S70		2000B5204T3	ECM	Sys. Info.	
S70		2000B5204T3	ECM	Read code	
S70		2000B5204T3	ECM	Clear code	
S70		2000B5204T3	ECM	Data stream	
S70		2000B5204T3	ECM	Actuation	
S70		2000B5234T7	ECM	Sys. Info.	
S70		2000B5234T7	ECM	Read code	
S70		2000B5234T7	ECM	Clear code	
S70		2000B5234T7	ECM	Data stream	
S70		2000B5234T7	ECM	Actuation	
S70		2000B5204T4	ECM	Sys. Info.	
S70		2000B5204T4	ECM	Read code	
S70		2000B5204T4	ECM	Clear code	
S70		2000B5204T4	ECM	Data stream	
S70		2000B5204T4	ECM	Actuation	
S70		2000B5244SG2	ECM	Sys. Info.	
S70		2000B5244SG2	ECM	Read code	
S70		2000B5244SG2	ECM	Clear code	
S70		2000B5244SG2	ECM	Data stream	
S70		2000B5244SG2	ECM	Actuation	
S70		2000B5244SG	ECM	Sys. Info.	
S70		2000B5244SG	ECM	Read code	
S70		2000B5244SG	ECM	Clear code	
S70		2000B5244SG	ECM	Data stream	
S70		2000B5244SG	ECM	Actuation	
S70		2000B5244S2	ECM	Sys. Info.	
S70		2000B5244S2	ECM	Read code	
S70		2000B5244S2	ECM	Clear code	
S70		2000B5244S2	ECM	Data stream	
S70		2000B5244S2	ECM	Actuation	
S70		2000B5244S	ECM	Sys. Info.	
S70		2000B5244S	ECM	Read code	
S70		2000B5244S	ECM	Clear code	
S70		2000B5244S	ECM	Data stream	
S70		2000B5244S	ECM	Actuation	
S70		2000B5202F5	ECM	Read code	
S70		2000B5202F5	ECM	Clear code	
S70		2000B5202F5	ECM	Data stream	
S70		2000D4204T2	ECM	Sys. Info.	
S70		2000D4204T2	ECM	Read code	
S70		2000D4204T2	ECM	Clear code	

model	year	type	system	function	subfunction
S70	2000	D4204T2	ECM	Data stream	
S70	2000	D4204T2	ECM	Actuation	
S70	2000	D4204T2	ECM	Special functions	Programming optimizing parameters
S70	2000	D4204T2	ECM	Special functions	Programming fuel pump (FP) start diesel
S70	2000	D5252T MSA 8	ECM	Sys. Info.	
S70	2000	D5252T MSA 8	ECM	Read code	
S70	2000	D5252T MSA 8	ECM	Clear code	
S70	2000	D5252T MSA 8	ECM	Data stream	
S70	2000	D5252T MSA 8	ECM	Actuation	
S70	2000	D5252T MSA 8	ECM	Special functions	Programming optimizing parameters
S70	2000	D5252T MSA 8	ECM	Special functions	Programming fuel pump (FP) start diesel
S70	2000	D5244T	Diesel Eng	Sys. Info.	
S70	2000	D5244T	Diesel Eng	Read code	
S70	2000	D5244T	Diesel Eng	Clear code	
S70	2000	D5244T	Diesel Eng	Data stream	
S70	2000	D5244T	Diesel Eng	Actuation	
S70	2000	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S70	2000	D5252T	Diesel Eng	Sys. Info.	
S70	2000	D5252T	Diesel Eng	Read code	
S70	2000	D5252T	Diesel Eng	Clear code	
S70	2000	D5252T	Diesel Eng	Data stream	
S70	2000	D5252T	Diesel Eng	Actuation	
S70	2000	D5252T	Diesel Eng	Special functions	Programming the idle speed
S70	2000	AW50/51 AWD	TCM	Sys. Info.	
S70	2000	AW50/51 AWD	TCM	Read code	
S70	2000	AW50/51 AWD	TCM	Clear code	
S70	2000	AW50/51 AWD	TCM	Data stream	
S70	2000	AW50/51 AWD	TCM	Actuation	
S70	2000	AW50/51 AWD	TCM	Special functions	Reset adaptation to zero
S70	2000	AW50/51 AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change
S70	2000	AW50/51 AWD	TCM	Special functions	Control module adaptation
S70	2000	AW55-50/51SN	TCM	Sys. Info.	
S70	2000	AW55-50/51SN	TCM	Read code	
S70	2000	AW55-50/51SN	TCM	Clear code	
S70	2000	AW55-50/51SN	TCM	Data stream	
S70	2000	AW55-50/51SN	TCM	Actuation	
S70	2000	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S70	2000	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change
S70	2000	AW55-50/51SN	TCM	Special functions	Control module adaptation
S70	2000	AW42 AWD	TCM	Sys. Info.	
S70	2000	AW42 AWD	TCM	Read code	
S70	2000	AW42 AWD	TCM	Clear code	
S70	2000	AW42 AWD	TCM	Data stream	
S70	2000	AW42 AWD	TCM	Actuation	
S70	2000	AW42 AWD	TCM	Special functions	Resetting the adaptation
S70	2000	AW42 AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change
S70	2000	AW42 AWD	TCM	Special functions	Activating gear indication
S70	2000	AW42 AWD	TCM	Special functions	Control module adaptation
S70	2000	AW50-42	TCM	Sys. Info.	
S70	2000	AW50-42	TCM	Read code	
S70	2000	AW50-42	TCM	Clear code	
S70	2000	AW50-42	TCM	Data stream	
S70	2000	AW50-42	TCM	Actuation	
S70	2000	AW50-42	TCM	Special functions	Resetting the adaptation
S70	2000	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change

model	year	type	system	function	subfunction	
S70		2000	AW50-42	TCM	Special functions	Activating gear indication
S70		2000	AW50-42	TCM	Special functions	Control module adaptation
S70		2000	AW50-42	ABS	Sys. Info.	
S70		2000	AW50-42	ABS	Read code	
S70		2000	AW50-42	ABS	Clear code	
S70		2000	AW50-42	ABS	Data stream	
S70		2000	AW50-42	ABS	Actuation	
S70		2000	AW50-42	ABS	Special functions	Checking brake light switch adjustment(*)
S70		2000	AW50-42	ABS	Special functions	Calibration
S70		2000	AW50-42	SRS	Sys. Info.	
S70		2000	AW50-42	SRS	Read code	
S70		2000	AW50-42	SRS	Clear code	
S70		2000	AW50-42	SRS	Data stream	
S70		2000	AW50-42	Immobilizer	Sys. Info.	
S70		2000	AW50-42	Immobilizer	Read code	
S70		2000	AW50-42	Immobilizer	Clear code	
S70		2000	AW50-42	Immobilizer	Data stream	
S70		2000	AW50-42	Immobilizer	Actuation	
S70		2000	AW50-42	VGLA	Sys. Info.	
S70		2000	AW50-42	VGLA	Read code	
S70		2000	AW50-42	VGLA	Clear code	
S70		2000	AW50-42	VGLA	Data stream	
S70		2000	AW50-42	VGLA	Actuation	
S70		2000	AW50-42	CI	Sys. Info.	
S70		2000	AW50-42	CI	Read code	
S70		2000	AW50-42	CI	Clear code	
S70		2000	AW50-42	CI	Data stream	
S70		2000	AW50-42	CI	Actuation	
S70		2000	AW50-42	CI	Special functions	Resetting the service reminder indicator(SRI)
S70		2000	AW50-42	PSL	Sys. Info.	
S70		2000	AW50-42	PSL	Read code	
S70		2000	AW50-42	PSL	Clear code	
S70		2000	AW50-42	PSL	Data stream	
S70		2000	AW50-42	PSL	Actuation	
S70		2000	AW50-42	PSR	Sys. Info.	
S70		2000	AW50-42	PSR	Read code	
S70		2000	AW50-42	PSR	Clear code	
S70		2000	AW50-42	PSR	Data stream	
S70		2000	AW50-42	PSR	Actuation	
S70		2000	AW50-42	CPM	Sys. Info.	
S70		2000	AW50-42	CPM	Read code	
S70		2000	AW50-42	CPM	Clear code	
S70		2000	AW50-42	CPM	Data stream	
S70		2000	AW50-42	CPM	Actuation	
S70		2000	AW50-42	CCM	Sys. Info.	
S70		2000	AW50-42	CCM	Read code	
S70		2000	AW50-42	CCM	Clear code	
S70		2000	AW50-42	CCM	Data stream	
S70		2000	AW50-42	CCM	Actuation	
S70		2000	AW50-42	RTI	Sys. Info.	
S70		2000	AW50-42	RTI	Read code	
S70		2000	AW50-42	RTI	Clear code	
S70		2000	AW50-42	RTI	Data stream	
S70		2000	AW50-42	RTI	Actuation	
S80(-06)		2000	AW50-42	ShortTest	Special functions	search all system and DTC(s) of vehicle
S80(-06)		1999	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S80(-06)		1999	B5244S	ECM	Sys. Info.	
S80(-06)		1999	B5244S	ECM	Read code	
S80(-06)		1999	B5244S	ECM	Clear code	
S80(-06)		1999	B5244S	ECM	Data stream	
S80(-06)		1999	B5244S	ECM	Actuation	
S80(-06)		1999	B5244S	ECM	Special functions	Quick test of the fuel tank system
S80(-06)		1999	B6304S3	ECM	Sys. Info.	
S80(-06)		1999	B6304S3	ECM	Read code	
S80(-06)		1999	B6304S3	ECM	Clear code	
S80(-06)		1999	B6304S3	ECM	Data stream	
S80(-06)		1999	B6304S3	ECM	Actuation	
S80(-06)		1999	B6294T	ECM	Sys. Info.	
S80(-06)		1999	B6294T	ECM	Read code	
S80(-06)		1999	B6294T	ECM	Clear code	
S80(-06)		1999	B6294T	ECM	Data stream	
S80(-06)		1999	B6294T	ECM	Actuation	
S80(-06)		1999	B6294T	ECM	Special functions	Resetting the adaptation values
S80(-06)		1999	B6284T	ECM	Sys. Info.	
S80(-06)		1999	B6284T	ECM	Read code	
S80(-06)		1999	B6284T	ECM	Clear code	
S80(-06)		1999	B6284T	ECM	Data stream	

model	year	type	system	function	subfunction
S80(-06)	1999	B6284T	ECM	Actuation	
S80(-06)	1999	B5204T4	ECM	Sys. Info.	
S80(-06)	1999	B5204T4	ECM	Read code	
S80(-06)	1999	B5204T4	ECM	Clear code	
S80(-06)	1999	B5204T4	ECM	Data stream	
S80(-06)	1999	B5204T4	ECM	Actuation	
S80(-06)	1999	B5204T3	ECM	Sys. Info.	
S80(-06)	1999	B5204T3	ECM	Read code	
S80(-06)	1999	B5204T3	ECM	Clear code	
S80(-06)	1999	B5204T3	ECM	Data stream	
S80(-06)	1999	B5204T3	ECM	Actuation	
S80(-06)	1999	B5244SG	ECM	Sys. Info.	
S80(-06)	1999	B5244SG	ECM	Read code	
S80(-06)	1999	B5244SG	ECM	Clear code	
S80(-06)	1999	B5244SG	ECM	Data stream	
S80(-06)	1999	B5244SG	ECM	Actuation	
S80(-06)	1999	B6294S2	ECM	Sys. Info.	
S80(-06)	1999	B6294S2	ECM	Read code	
S80(-06)	1999	B6294S2	ECM	Clear code	
S80(-06)	1999	B6294S2	ECM	Data stream	
S80(-06)	1999	B6294S2	ECM	Actuation	
S80(-06)	1999	B5244S2	ECM	Sys. Info.	
S80(-06)	1999	B5244S2	ECM	Read code	
S80(-06)	1999	B5244S2	ECM	Clear code	
S80(-06)	1999	B5244S2	ECM	Data stream	
S80(-06)	1999	B5244S2	ECM	Actuation	
S80(-06)	1999	B5254T2	ECM	Sys. Info.	
S80(-06)	1999	B5254T2	ECM	Read code	
S80(-06)	1999	B5254T2	ECM	Clear code	
S80(-06)	1999	B5254T2	ECM	Data stream	
S80(-06)	1999	B5254T2	ECM	Actuation	
S80(-06)	1999	B5254T2	ECM	Special functions	Resetting the adaptation values
S80(-06)	1999	B5234T3	ECM	Sys. Info.	
S80(-06)	1999	B5234T3	ECM	Read code	
S80(-06)	1999	B5234T3	ECM	Clear code	
S80(-06)	1999	B5234T3	ECM	Data stream	
S80(-06)	1999	B5234T3	ECM	Actuation	
S80(-06)	1999	B5204T5	ECM	Sys. Info.	
S80(-06)	1999	B5204T5	ECM	Read code	
S80(-06)	1999	B5204T5	ECM	Clear code	
S80(-06)	1999	B5204T5	ECM	Data stream	
S80(-06)	1999	B5204T5	ECM	Actuation	
S80(-06)	1999	B5254T4	ECM	Sys. Info.	
S80(-06)	1999	B5254T4	ECM	Read code	
S80(-06)	1999	B5254T4	ECM	Clear code	
S80(-06)	1999	B5254T4	ECM	Data stream	
S80(-06)	1999	B5254T4	ECM	Actuation	
S80(-06)	1999	B6294S	ECM	Sys. Info.	
S80(-06)	1999	B6294S	ECM	Read code	
S80(-06)	1999	B6294S	ECM	Clear code	
S80(-06)	1999	B6294S	ECM	Data stream	
S80(-06)	1999	B6294S	ECM	Actuation	
S80(-06)	1999	B5244T7	ECM	Sys. Info.	
S80(-06)	1999	B5244T7	ECM	Read code	
S80(-06)	1999	B5244T7	ECM	Clear code	
S80(-06)	1999	B5244T7	ECM	Data stream	
S80(-06)	1999	B5244T7	ECM	Actuation	
S80(-06)	1999	B5244T7	ECM	Special functions	Resetting the adaptation values
S80(-06)	1999	B5234T7	ECM	Sys. Info.	
S80(-06)	1999	B5234T7	ECM	Read code	
S80(-06)	1999	B5234T7	ECM	Clear code	
S80(-06)	1999	B5234T7	ECM	Data stream	
S80(-06)	1999	B5234T7	ECM	Actuation	
S80(-06)	1999	B5234T7	ECM	Special functions	Resetting the adaptation values
S80(-06)	1999	D5244T	Diesel Eng	Sys. Info.	
S80(-06)	1999	D5244T	Diesel Eng	Read code	
S80(-06)	1999	D5244T	Diesel Eng	Clear code	
S80(-06)	1999	D5244T	Diesel Eng	Data stream	
S80(-06)	1999	D5244T	Diesel Eng	Actuation	
S80(-06)	1999	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S80(-06)	1999	D5252T	Diesel Eng	Sys. Info.	
S80(-06)	1999	D5252T	Diesel Eng	Read code	
S80(-06)	1999	D5252T	Diesel Eng	Clear code	
S80(-06)	1999	D5252T	Diesel Eng	Data stream	
S80(-06)	1999	D5252T	Diesel Eng	Actuation	
S80(-06)	1999	D5252T	Diesel Eng	Special functions	Programming the idle speed
S80(-06)	1999	AW55-50SN	TCM	Sys. Info.	
S80(-06)	1999	AW55-50SN	TCM	Read code	



model	year	type	system	function	subfunction
S80(-06)	1999	AW55-50SN	TCM	Clear code	
S80(-06)	1999	AW55-50SN	TCM	Data stream	
S80(-06)	1999	AW55-50SN	TCM	Actuation	
S80(-06)	1999	AW55-50SN	TCM	Special functions	Reset adaptation to zero
S80(-06)	1999	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	1999	4T65EV-GT	TCM	Sys. Info.	
S80(-06)	1999	4T65EV-GT	TCM	Read code	
S80(-06)	1999	4T65EV-GT	TCM	Clear code	
S80(-06)	1999	4T65EV-GT	TCM	Data stream	
S80(-06)	1999	4T65EV-GT	TCM	Actuation	
S80(-06)	1999	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
S80(-06)	1999	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	1999	AW50-42	TCM	Sys. Info.	
S80(-06)	1999	AW50-42	TCM	Read code	
S80(-06)	1999	AW50-42	TCM	Clear code	
S80(-06)	1999	AW50-42	TCM	Data stream	
S80(-06)	1999	AW50-42	TCM	Actuation	
S80(-06)	1999	AW50-42	TCM	Special functions	Reset adaptation to zero
S80(-06)	1999	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	1999	AW50/51AW D	TCM	Sys. Info.	
S80(-06)	1999	AW50/51AW D	TCM	Read code	
S80(-06)	1999	AW50/51AW D	TCM	Clear code	
S80(-06)	1999	AW50/51AW D	TCM	Data stream	
S80(-06)	1999	AW50/51AW D	TCM	Actuation	
S80(-06)	1999	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S80(-06)	1999	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	1999	TF-80SC	TCM	Sys. Info.	
S80(-06)	1999	TF-80SC	TCM	Read code	
S80(-06)	1999	TF-80SC	TCM	Clear code	
S80(-06)	1999	TF-80SC	TCM	Data stream	
S80(-06)	1999	TF-80SC	TCM	Actuation	
S80(-06)	1999	TF-80SC	TCM	Special functions	Resetting the adaptation
S80(-06)	1999	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S80(-06)	1999	4T65EV	TCM	Sys. Info.	
S80(-06)	1999	4T65EV	TCM	Read code	
S80(-06)	1999	4T65EV	TCM	Clear code	
S80(-06)	1999	4T65EV	TCM	Data stream	
S80(-06)	1999	4T65EV	TCM	Actuation	
S80(-06)	1999	4T65AWD	TCM	Sys. Info.	
S80(-06)	1999	4T65AWD	TCM	Read code	
S80(-06)	1999	4T65AWD	TCM	Clear code	
S80(-06)	1999	4T65AWD	TCM	Data stream	
S80(-06)	1999	4T65AWD	TCM	Actuation	
S80(-06)	1999	4T65AWD	TCM	Special functions	Reset adaptation to zero
S80(-06)	1999	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	1999	4T65AWD	ABS	Sys. Info.	
S80(-06)	1999	4T65AWD	ABS	Read code	
S80(-06)	1999	4T65AWD	ABS	Clear code	
S80(-06)	1999	4T65AWD	ABS	Data stream	
S80(-06)	1999	4T65AWD	ABS	Actuation	
S80(-06)	1999	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
S80(-06)	1999	4T65AWD	ABS	Special functions	Calibration
S80(-06)	1999	4T65AWD	SRS	Sys. Info.	
S80(-06)	1999	4T65AWD	SRS	Read code	
S80(-06)	1999	4T65AWD	SRS	Clear code	
S80(-06)	1999	4T65AWD	SRS	Data stream	
S80(-06)	1999	4T65AWD	SRS	Freeze frame	
S80(-06)	1999	4T65AWD	CEM	Sys. Info.	
S80(-06)	1999	4T65AWD	CEM	Read code	
S80(-06)	1999	4T65AWD	CEM	Clear code	
S80(-06)	1999	4T65AWD	CEM	Data stream	
S80(-06)	1999	4T65AWD	CEM	Actuation	
S80(-06)	1999	4T65AWD	CEM	Special functions	Reading alarm cause(*)
S80(-06)	1999	4T65AWD	CEM	Special functions	Resetting the factory settings
S80(-06)	1999	4T65AWD	UEM	Sys. Info.	
S80(-06)	1999	4T65AWD	UEM	Read code	
S80(-06)	1999	4T65AWD	UEM	Clear code	
S80(-06)	1999	4T65AWD	UEM	Data stream	
S80(-06)	1999	4T65AWD	UEM	Actuation	
S80(-06)	1999	4T65AWD	UEM	Special functions	Configuration of the siren
S80(-06)	1999	4T65AWD	UEM	Special functions	Programming the control unit

model	year	type	system	function	subfunction
S80(-06)	1999	4T65AWD	UEM	Special functions	Reading the programmed values
S80(-06)	1999	4T65AWD	REM	Sys. Info.	
S80(-06)	1999	4T65AWD	REM	Read code	
S80(-06)	1999	4T65AWD	REM	Clear code	
S80(-06)	1999	4T65AWD	REM	Data stream	
S80(-06)	1999	4T65AWD	REM	Actuation	
S80(-06)	1999	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S80(-06)	1999	4T65AWD	DIM	Sys. Info.	
S80(-06)	1999	4T65AWD	DIM	Read code	
S80(-06)	1999	4T65AWD	DIM	Clear code	
S80(-06)	1999	4T65AWD	DIM	Data stream	
S80(-06)	1999	4T65AWD	DIM	Actuation	
S80(-06)	1999	4T65AWD	DIM	Freeze frame	
S80(-06)	1999	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S80(-06)	1999	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
S80(-06)	1999	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
S80(-06)	1999	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
S80(-06)	1999	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
S80(-06)	1999	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
S80(-06)	1999	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
S80(-06)	1999	4T65AWD	DIM	Special functions	Programming of clock (*)
S80(-06)	1999	4T65AWD	DIM	Special functions	Programming of zeros (*)
S80(-06)	1999	4T65AWD	DIM	Special functions	Programming parking brake warning
S80(-06)	1999	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(-06)	1999	4T65AWD	DIM	Special functions	Programming instrument lighting
S80(-06)	1999	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
S80(-06)	1999	4T65AWD	DIM	Special functions	Display of DSTC message
S80(-06)	1999	4T65AWD	DIM	Special functions	Read out programmed values
S80(-06)	1999	4T65AWD	PDM	Sys. Info.	
S80(-06)	1999	4T65AWD	PDM	Read code	
S80(-06)	1999	4T65AWD	PDM	Clear code	
S80(-06)	1999	4T65AWD	PDM	Data stream	
S80(-06)	1999	4T65AWD	PDM	Actuation	
S80(-06)	1999	4T65AWD	PDM	Special functions	Initialize the window(*)
S80(-06)	1999	4T65AWD	PSM	Sys. Info.	
S80(-06)	1999	4T65AWD	PSM	Read code	
S80(-06)	1999	4T65AWD	PSM	Clear code	
S80(-06)	1999	4T65AWD	PSM	Data stream	
S80(-06)	1999	4T65AWD	PSM	Actuation	
S80(-06)	1999	4T65AWD	DDM	Sys. Info.	
S80(-06)	1999	4T65AWD	DDM	Read code	
S80(-06)	1999	4T65AWD	DDM	Clear code	
S80(-06)	1999	4T65AWD	DDM	Data stream	
S80(-06)	1999	4T65AWD	DDM	Actuation	
S80(-06)	1999	4T65AWD	DDM	Special functions	Initialize the window(*)
S80(-06)	1999	4T65AWD	CCM	Sys. Info.	
S80(-06)	1999	4T65AWD	CCM	Read code	
S80(-06)	1999	4T65AWD	CCM	Clear code	
S80(-06)	1999	4T65AWD	CCM	Data stream	
S80(-06)	1999	4T65AWD	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
S80(-06)	1999	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
S80(-06)	1999	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(-06)	1999	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(-06)	1999	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
S80(-06)	1999	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(-06)	1999	4T65AWD	CCM	Special functions	Programming the seat temperature
S80(-06)	1999	4T65AWD	PHM	Sys. Info.	
S80(-06)	1999	4T65AWD	PHM	Read code	
S80(-06)	1999	4T65AWD	PHM	Clear code	
S80(-06)	1999	4T65AWD	PHM	Data stream	
S80(-06)	1999	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
S80(-06)	1999	4T65AWD	AUM	Sys. Info.	
S80(-06)	1999	4T65AWD	AUM	Read code	
S80(-06)	1999	4T65AWD	AUM	Clear code	
S80(-06)	1999	4T65AWD	AUM	Data stream	
S80(-06)	1999	4T65AWD	SWM	Sys. Info.	
S80(-06)	1999	4T65AWD	SWM	Read code	
S80(-06)	1999	4T65AWD	SWM	Clear code	
S80(-06)	1999	4T65AWD	SWM	Data stream	
S80(-06)	1999	4T65AWD	RTI	Sys. Info.	
S80(-06)	1999	4T65AWD	RTI	Read code	
S80(-06)	1999	4T65AWD	RTI	Clear code	
S80(-06)	1999	4T65AWD	CPM	Sys. Info.	
S80(-06)	1999	4T65AWD	CPM	Data stream	
S80(-06)	1999	4T65AWD	CPM	Special functions	Programming the additional and parking heater

model	year	type	system	function	subfunction
S80(-06)		1999 4T65AWD	ETM	Sys. Info.	
S80(-06)		1999 4T65AWD	ETM	Data stream	
S80(-06)		2000 4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S80(-06)		2000 B5244S	ECM	Sys. Info.	
S80(-06)		2000 B5244S	ECM	Read code	
S80(-06)		2000 B5244S	ECM	Clear code	
S80(-06)		2000 B5244S	ECM	Data stream	
S80(-06)		2000 B5244S	ECM	Actuation	
S80(-06)		2000 B5244S	ECM	Special functions	Quick test of the fuel tank system
S80(-06)		2000 B6304S3	ECM	Sys. Info.	
S80(-06)		2000 B6304S3	ECM	Read code	
S80(-06)		2000 B6304S3	ECM	Clear code	
S80(-06)		2000 B6304S3	ECM	Data stream	
S80(-06)		2000 B6304S3	ECM	Actuation	
S80(-06)		2000 B6294T	ECM	Sys. Info.	
S80(-06)		2000 B6294T	ECM	Read code	
S80(-06)		2000 B6294T	ECM	Clear code	
S80(-06)		2000 B6294T	ECM	Data stream	
S80(-06)		2000 B6294T	ECM	Actuation	
S80(-06)		2000 B6294T	ECM	Special functions	Resetting the adaptation values
S80(-06)		2000 B6284T	ECM	Sys. Info.	
S80(-06)		2000 B6284T	ECM	Read code	
S80(-06)		2000 B6284T	ECM	Clear code	
S80(-06)		2000 B6284T	ECM	Data stream	
S80(-06)		2000 B6284T	ECM	Actuation	
S80(-06)		2000 B5204T4	ECM	Sys. Info.	
S80(-06)		2000 B5204T4	ECM	Read code	
S80(-06)		2000 B5204T4	ECM	Clear code	
S80(-06)		2000 B5204T4	ECM	Data stream	
S80(-06)		2000 B5204T4	ECM	Actuation	
S80(-06)		2000 B5204T3	ECM	Sys. Info.	
S80(-06)		2000 B5204T3	ECM	Read code	
S80(-06)		2000 B5204T3	ECM	Clear code	
S80(-06)		2000 B5204T3	ECM	Data stream	
S80(-06)		2000 B5204T3	ECM	Actuation	
S80(-06)		2000 B5244SG	ECM	Sys. Info.	
S80(-06)		2000 B5244SG	ECM	Read code	
S80(-06)		2000 B5244SG	ECM	Clear code	
S80(-06)		2000 B5244SG	ECM	Data stream	
S80(-06)		2000 B5244SG	ECM	Actuation	
S80(-06)		2000 B6294S2	ECM	Sys. Info.	
S80(-06)		2000 B6294S2	ECM	Read code	
S80(-06)		2000 B6294S2	ECM	Clear code	
S80(-06)		2000 B6294S2	ECM	Data stream	
S80(-06)		2000 B6294S2	ECM	Actuation	
S80(-06)		2000 B5244S2	ECM	Sys. Info.	
S80(-06)		2000 B5244S2	ECM	Read code	
S80(-06)		2000 B5244S2	ECM	Clear code	
S80(-06)		2000 B5244S2	ECM	Data stream	
S80(-06)		2000 B5244S2	ECM	Actuation	
S80(-06)		2000 B5254T2	ECM	Sys. Info.	
S80(-06)		2000 B5254T2	ECM	Read code	
S80(-06)		2000 B5254T2	ECM	Clear code	
S80(-06)		2000 B5254T2	ECM	Data stream	
S80(-06)		2000 B5254T2	ECM	Actuation	
S80(-06)		2000 B5254T2	ECM	Special functions	Resetting the adaptation values
S80(-06)		2000 B5234T3	ECM	Sys. Info.	
S80(-06)		2000 B5234T3	ECM	Read code	
S80(-06)		2000 B5234T3	ECM	Clear code	
S80(-06)		2000 B5234T3	ECM	Data stream	
S80(-06)		2000 B5234T3	ECM	Actuation	
S80(-06)		2000 B5204T5	ECM	Sys. Info.	
S80(-06)		2000 B5204T5	ECM	Read code	
S80(-06)		2000 B5204T5	ECM	Clear code	
S80(-06)		2000 B5204T5	ECM	Data stream	
S80(-06)		2000 B5204T5	ECM	Actuation	
S80(-06)		2000 B5254T4	ECM	Sys. Info.	
S80(-06)		2000 B5254T4	ECM	Read code	
S80(-06)		2000 B5254T4	ECM	Clear code	
S80(-06)		2000 B5254T4	ECM	Data stream	
S80(-06)		2000 B5254T4	ECM	Actuation	
S80(-06)		2000 B6294S	ECM	Sys. Info.	
S80(-06)		2000 B6294S	ECM	Read code	
S80(-06)		2000 B6294S	ECM	Clear code	
S80(-06)		2000 B6294S	ECM	Data stream	
S80(-06)		2000 B6294S	ECM	Actuation	
S80(-06)		2000 B5244T7	ECM	Sys. Info.	

model	year	type	system	function	subfunction
S80(-06)		2000 B5244T7	ECM	Read code	
S80(-06)		2000 B5244T7	ECM	Clear code	
S80(-06)		2000 B5244T7	ECM	Data stream	
S80(-06)		2000 B5244T7	ECM	Actuation	
S80(-06)		2000 B5244T7	ECM	Special functions	Resetting the adaptation values
S80(-06)		2000 B5234T7	ECM	Sys. Info.	
S80(-06)		2000 B5234T7	ECM	Read code	
S80(-06)		2000 B5234T7	ECM	Clear code	
S80(-06)		2000 B5234T7	ECM	Data stream	
S80(-06)		2000 B5234T7	ECM	Actuation	
S80(-06)		2000 B5234T7	ECM	Special functions	Resetting the adaptation values
S80(-06)		2000 D5244T	Diesel Eng	Sys. Info.	
S80(-06)		2000 D5244T	Diesel Eng	Read code	
S80(-06)		2000 D5244T	Diesel Eng	Clear code	
S80(-06)		2000 D5244T	Diesel Eng	Data stream	
S80(-06)		2000 D5244T	Diesel Eng	Actuation	
S80(-06)		2000 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S80(-06)		2000 D5252T	Diesel Eng	Sys. Info.	
S80(-06)		2000 D5252T	Diesel Eng	Read code	
S80(-06)		2000 D5252T	Diesel Eng	Clear code	
S80(-06)		2000 D5252T	Diesel Eng	Data stream	
S80(-06)		2000 D5252T	Diesel Eng	Actuation	
S80(-06)		2000 D5252T	Diesel Eng	Special functions	Programming the idle speed
S80(-06)		2000 AW55-50SN	TCM	Sys. Info.	
S80(-06)		2000 AW55-50SN	TCM	Read code	
S80(-06)		2000 AW55-50SN	TCM	Clear code	
S80(-06)		2000 AW55-50SN	TCM	Data stream	
S80(-06)		2000 AW55-50SN	TCM	Actuation	
S80(-06)		2000 AW55-50SN	TCM	Special functions	Reset adaptation to zero
S80(-06)		2000 AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2000 AW55-50SN	TCM	Special functions	Control module adaptation
S80(-06)		2000 4T65EV-GT	TCM	Sys. Info.	
S80(-06)		2000 4T65EV-GT	TCM	Read code	
S80(-06)		2000 4T65EV-GT	TCM	Clear code	
S80(-06)		2000 4T65EV-GT	TCM	Data stream	
S80(-06)		2000 4T65EV-GT	TCM	Actuation	
S80(-06)		2000 4T65EV-GT	TCM	Special functions	Reset adaptation to zero
S80(-06)		2000 4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2000 AW50-42	TCM	Sys. Info.	
S80(-06)		2000 AW50-42	TCM	Read code	
S80(-06)		2000 AW50-42	TCM	Clear code	
S80(-06)		2000 AW50-42	TCM	Data stream	
S80(-06)		2000 AW50-42	TCM	Actuation	
S80(-06)		2000 AW50-42	TCM	Special functions	Reset adaptation to zero
S80(-06)		2000 AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2000 AW50/51AW D	TCM	Sys. Info.	
S80(-06)		2000 AW50/51AW D	TCM	Read code	
S80(-06)		2000 AW50/51AW D	TCM	Clear code	
S80(-06)		2000 AW50/51AW D	TCM	Data stream	
S80(-06)		2000 AW50/51AW D	TCM	Actuation	
S80(-06)		2000 AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S80(-06)		2000 AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2000 TF-80SC	TCM	Sys. Info.	
S80(-06)		2000 TF-80SC	TCM	Read code	
S80(-06)		2000 TF-80SC	TCM	Clear code	
S80(-06)		2000 TF-80SC	TCM	Data stream	
S80(-06)		2000 TF-80SC	TCM	Actuation	
S80(-06)		2000 TF-80SC	TCM	Special functions	Resetting the adaptation
S80(-06)		2000 TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S80(-06)		2000 4T65EV	TCM	Sys. Info.	
S80(-06)		2000 4T65EV	TCM	Read code	
S80(-06)		2000 4T65EV	TCM	Clear code	
S80(-06)		2000 4T65EV	TCM	Data stream	
S80(-06)		2000 4T65EV	TCM	Actuation	
S80(-06)		2000 4T65AWD	TCM	Sys. Info.	
S80(-06)		2000 4T65AWD	TCM	Read code	
S80(-06)		2000 4T65AWD	TCM	Clear code	
S80(-06)		2000 4T65AWD	TCM	Data stream	
S80(-06)		2000 4T65AWD	TCM	Actuation	
S80(-06)		2000 4T65AWD	TCM	Special functions	Reset adaptation to zero
S80(-06)		2000 4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)

model	year	type	system	function	subfunction	
S80(-06)		2000	4T65AWD	ABS	Sys. Info.	
S80(-06)		2000	4T65AWD	ABS	Read code	
S80(-06)		2000	4T65AWD	ABS	Clear code	
S80(-06)		2000	4T65AWD	ABS	Data stream	
S80(-06)		2000	4T65AWD	ABS	Actuation	
S80(-06)		2000	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
S80(-06)		2000	4T65AWD	ABS	Special functions	Calibration
S80(-06)		2000	4T65AWD	SRS	Sys. Info.	
S80(-06)		2000	4T65AWD	SRS	Read code	
S80(-06)		2000	4T65AWD	SRS	Clear code	
S80(-06)		2000	4T65AWD	SRS	Data stream	
S80(-06)		2000	4T65AWD	SRS	Freeze frame	
S80(-06)		2000	4T65AWD	CEM	Sys. Info.	
S80(-06)		2000	4T65AWD	CEM	Read code	
S80(-06)		2000	4T65AWD	CEM	Clear code	
S80(-06)		2000	4T65AWD	CEM	Data stream	
S80(-06)		2000	4T65AWD	CEM	Actuation	
S80(-06)		2000	4T65AWD	CEM	Special functions	Reading alarm cause(*)
S80(-06)		2000	4T65AWD	CEM	Special functions	Resetting the factory settings
S80(-06)		2000	4T65AWD	UEM	Sys. Info.	
S80(-06)		2000	4T65AWD	UEM	Read code	
S80(-06)		2000	4T65AWD	UEM	Clear code	
S80(-06)		2000	4T65AWD	UEM	Data stream	
S80(-06)		2000	4T65AWD	UEM	Actuation	
S80(-06)		2000	4T65AWD	UEM	Special functions	Configuration of the siren
S80(-06)		2000	4T65AWD	UEM	Special functions	Programming the control unit
S80(-06)		2000	4T65AWD	UEM	Special functions	Reading the programmed values
S80(-06)		2000	4T65AWD	REM	Sys. Info.	
S80(-06)		2000	4T65AWD	REM	Read code	
S80(-06)		2000	4T65AWD	REM	Clear code	
S80(-06)		2000	4T65AWD	REM	Data stream	
S80(-06)		2000	4T65AWD	REM	Actuation	
S80(-06)		2000	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S80(-06)		2000	4T65AWD	DIM	Sys. Info.	
S80(-06)		2000	4T65AWD	DIM	Read code	
S80(-06)		2000	4T65AWD	DIM	Clear code	
S80(-06)		2000	4T65AWD	DIM	Data stream	
S80(-06)		2000	4T65AWD	DIM	Actuation	
S80(-06)		2000	4T65AWD	DIM	Freeze frame	
S80(-06)		2000	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S80(-06)		2000	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
S80(-06)		2000	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
S80(-06)		2000	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
S80(-06)		2000	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
S80(-06)		2000	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
S80(-06)		2000	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
S80(-06)		2000	4T65AWD	DIM	Special functions	Programming of clock (*)
S80(-06)		2000	4T65AWD	DIM	Special functions	Programming of zeros (*)
S80(-06)		2000	4T65AWD	DIM	Special functions	Programming parking brake warning
S80(-06)		2000	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(-06)		2000	4T65AWD	DIM	Special functions	Programming instrument lighting
S80(-06)		2000	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
S80(-06)		2000	4T65AWD	DIM	Special functions	Display of DSTC message
S80(-06)		2000	4T65AWD	DIM	Special functions	Read out programmed values
S80(-06)		2000	4T65AWD	PDM	Sys. Info.	
S80(-06)		2000	4T65AWD	PDM	Read code	
S80(-06)		2000	4T65AWD	PDM	Clear code	
S80(-06)		2000	4T65AWD	PDM	Data stream	
S80(-06)		2000	4T65AWD	PDM	Actuation	
S80(-06)		2000	4T65AWD	PDM	Special functions	Initialize the window(*)
S80(-06)		2000	4T65AWD	PSM	Sys. Info.	
S80(-06)		2000	4T65AWD	PSM	Read code	
S80(-06)		2000	4T65AWD	PSM	Clear code	
S80(-06)		2000	4T65AWD	PSM	Data stream	
S80(-06)		2000	4T65AWD	PSM	Actuation	
S80(-06)		2000	4T65AWD	DDM	Sys. Info.	
S80(-06)		2000	4T65AWD	DDM	Read code	
S80(-06)		2000	4T65AWD	DDM	Clear code	
S80(-06)		2000	4T65AWD	DDM	Data stream	
S80(-06)		2000	4T65AWD	DDM	Actuation	
S80(-06)		2000	4T65AWD	DDM	Special functions	Initialize the window(*)
S80(-06)		2000	4T65AWD	CCM	Sys. Info.	
S80(-06)		2000	4T65AWD	CCM	Read code	
S80(-06)		2000	4T65AWD	CCM	Clear code	
S80(-06)		2000	4T65AWD	CCM	Data stream	
S80(-06)		2000	4T65AWD	CCM	Special functions	Self-adjustment of adamper motor end stops(*)

model	year	type	system	function	subfunction	
S80(-06)		2000	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
S80(-06)		2000	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(-06)		2000	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(-06)		2000	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
S80(-06)		2000	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(-06)		2000	4T65AWD	CCM	Special functions	Programming the seat temperature
S80(-06)		2000	4T65AWD	PHM	Sys. Info.	
S80(-06)		2000	4T65AWD	PHM	Read code	
S80(-06)		2000	4T65AWD	PHM	Clear code	
S80(-06)		2000	4T65AWD	PHM	Data stream	
S80(-06)		2000	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
S80(-06)		2000	4T65AWD	AUM	Sys. Info.	
S80(-06)		2000	4T65AWD	AUM	Read code	
S80(-06)		2000	4T65AWD	AUM	Clear code	
S80(-06)		2000	4T65AWD	AUM	Data stream	
S80(-06)		2000	4T65AWD	SWM	Sys. Info.	
S80(-06)		2000	4T65AWD	SWM	Read code	
S80(-06)		2000	4T65AWD	SWM	Clear code	
S80(-06)		2000	4T65AWD	SWM	Data stream	
S80(-06)		2000	4T65AWD	RTI	Sys. Info.	
S80(-06)		2000	4T65AWD	RTI	Read code	
S80(-06)		2000	4T65AWD	RTI	Clear code	
S80(-06)		2000	4T65AWD	AEM	Sys. Info.	
S80(-06)		2000	4T65AWD	AEM	Read code	
S80(-06)		2000	4T65AWD	AEM	Clear code	
S80(-06)		2000	4T65AWD	AEM	Data stream	
S80(-06)		2000	4T65AWD	AEM	Actuation	
S80(-06)		2000	4T65AWD	CPM	Sys. Info.	
S80(-06)		2000	4T65AWD	CPM	Data stream	
S80(-06)		2000	4T65AWD	CPM	Special functions	Programming the additional and parking heater
S80(-06)		2000	4T65AWD	ETM	Sys. Info.	
S80(-06)		2000	4T65AWD	ETM	Data stream	
S80(-06)		2001	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S80(-06)		2001	B5244S	ECM	Sys. Info.	
S80(-06)		2001	B5244S	ECM	Read code	
S80(-06)		2001	B5244S	ECM	Clear code	
S80(-06)		2001	B5244S	ECM	Data stream	
S80(-06)		2001	B5244S	ECM	Actuation	
S80(-06)		2001	B5244S	ECM	Special functions	Quick test of the fuel tank system
S80(-06)		2001	B6304S3	ECM	Sys. Info.	
S80(-06)		2001	B6304S3	ECM	Read code	
S80(-06)		2001	B6304S3	ECM	Clear code	
S80(-06)		2001	B6304S3	ECM	Data stream	
S80(-06)		2001	B6304S3	ECM	Actuation	
S80(-06)		2001	B6294T	ECM	Sys. Info.	
S80(-06)		2001	B6294T	ECM	Read code	
S80(-06)		2001	B6294T	ECM	Clear code	
S80(-06)		2001	B6294T	ECM	Data stream	
S80(-06)		2001	B6294T	ECM	Actuation	
S80(-06)		2001	B6294T	ECM	Special functions	Resetting the adaptation values
S80(-06)		2001	B6284T	ECM	Sys. Info.	
S80(-06)		2001	B6284T	ECM	Read code	
S80(-06)		2001	B6284T	ECM	Clear code	
S80(-06)		2001	B6284T	ECM	Data stream	
S80(-06)		2001	B6284T	ECM	Actuation	
S80(-06)		2001	B5204T4	ECM	Sys. Info.	
S80(-06)		2001	B5204T4	ECM	Read code	
S80(-06)		2001	B5204T4	ECM	Clear code	
S80(-06)		2001	B5204T4	ECM	Data stream	
S80(-06)		2001	B5204T4	ECM	Actuation	
S80(-06)		2001	B5204T3	ECM	Sys. Info.	
S80(-06)		2001	B5204T3	ECM	Read code	
S80(-06)		2001	B5204T3	ECM	Clear code	
S80(-06)		2001	B5204T3	ECM	Data stream	
S80(-06)		2001	B5204T3	ECM	Actuation	
S80(-06)		2001	B5244SG	ECM	Sys. Info.	
S80(-06)		2001	B5244SG	ECM	Read code	
S80(-06)		2001	B5244SG	ECM	Clear code	
S80(-06)		2001	B5244SG	ECM	Data stream	
S80(-06)		2001	B5244SG	ECM	Actuation	
S80(-06)		2001	B6294S2	ECM	Sys. Info.	
S80(-06)		2001	B6294S2	ECM	Read code	
S80(-06)		2001	B6294S2	ECM	Clear code	
S80(-06)		2001	B6294S2	ECM	Data stream	
S80(-06)		2001	B6294S2	ECM	Actuation	
S80(-06)		2001	B5244S2	ECM	Sys. Info.	

model	year	type	system	function	subfunction	
S80(-06)		2001	B5244S2	ECM	Read code	
S80(-06)		2001	B5244S2	ECM	Clear code	
S80(-06)		2001	B5244S2	ECM	Data stream	
S80(-06)		2001	B5244S2	ECM	Actuation	
S80(-06)		2001	B5254T2	ECM	Sys. Info.	
S80(-06)		2001	B5254T2	ECM	Read code	
S80(-06)		2001	B5254T2	ECM	Clear code	
S80(-06)		2001	B5254T2	ECM	Data stream	
S80(-06)		2001	B5254T2	ECM	Actuation	
S80(-06)		2001	B5254T2	ECM	Special functions	Resetting the adaptation values
S80(-06)		2001	B5234T3	ECM	Sys. Info.	
S80(-06)		2001	B5234T3	ECM	Read code	
S80(-06)		2001	B5234T3	ECM	Clear code	
S80(-06)		2001	B5234T3	ECM	Data stream	
S80(-06)		2001	B5234T3	ECM	Actuation	
S80(-06)		2001	B5204T5	ECM	Sys. Info.	
S80(-06)		2001	B5204T5	ECM	Read code	
S80(-06)		2001	B5204T5	ECM	Clear code	
S80(-06)		2001	B5204T5	ECM	Data stream	
S80(-06)		2001	B5204T5	ECM	Actuation	
S80(-06)		2001	B5254T4	ECM	Sys. Info.	
S80(-06)		2001	B5254T4	ECM	Read code	
S80(-06)		2001	B5254T4	ECM	Clear code	
S80(-06)		2001	B5254T4	ECM	Data stream	
S80(-06)		2001	B5254T4	ECM	Actuation	
S80(-06)		2001	B6294S	ECM	Sys. Info.	
S80(-06)		2001	B6294S	ECM	Read code	
S80(-06)		2001	B6294S	ECM	Clear code	
S80(-06)		2001	B6294S	ECM	Data stream	
S80(-06)		2001	B6294S	ECM	Actuation	
S80(-06)		2001	B5244T7	ECM	Sys. Info.	
S80(-06)		2001	B5244T7	ECM	Read code	
S80(-06)		2001	B5244T7	ECM	Clear code	
S80(-06)		2001	B5244T7	ECM	Data stream	
S80(-06)		2001	B5244T7	ECM	Actuation	
S80(-06)		2001	B5244T7	ECM	Special functions	Resetting the adaptation values
S80(-06)		2001	B5234T7	ECM	Sys. Info.	
S80(-06)		2001	B5234T7	ECM	Read code	
S80(-06)		2001	B5234T7	ECM	Clear code	
S80(-06)		2001	B5234T7	ECM	Data stream	
S80(-06)		2001	B5234T7	ECM	Actuation	
S80(-06)		2001	B5234T7	ECM	Special functions	Resetting the adaptation values
S80(-06)		2001	D5244T	Diesel Eng	Sys. Info.	
S80(-06)		2001	D5244T	Diesel Eng	Read code	
S80(-06)		2001	D5244T	Diesel Eng	Clear code	
S80(-06)		2001	D5244T	Diesel Eng	Data stream	
S80(-06)		2001	D5244T	Diesel Eng	Actuation	
S80(-06)		2001	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S80(-06)		2001	D5252T	Diesel Eng	Sys. Info.	
S80(-06)		2001	D5252T	Diesel Eng	Read code	
S80(-06)		2001	D5252T	Diesel Eng	Clear code	
S80(-06)		2001	D5252T	Diesel Eng	Data stream	
S80(-06)		2001	D5252T	Diesel Eng	Actuation	
S80(-06)		2001	D5252T	Diesel Eng	Special functions	Programming the idle speed
S80(-06)		2001	AW55-50SN	TCM	Sys. Info.	
S80(-06)		2001	AW55-50SN	TCM	Read code	
S80(-06)		2001	AW55-50SN	TCM	Clear code	
S80(-06)		2001	AW55-50SN	TCM	Data stream	
S80(-06)		2001	AW55-50SN	TCM	Actuation	
S80(-06)		2001	AW55-50SN	TCM	Special functions	Reset adaptation to zero
S80(-06)		2001	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2001	4T65EV-GT	TCM	Sys. Info.	
S80(-06)		2001	4T65EV-GT	TCM	Read code	
S80(-06)		2001	4T65EV-GT	TCM	Clear code	
S80(-06)		2001	4T65EV-GT	TCM	Data stream	
S80(-06)		2001	4T65EV-GT	TCM	Actuation	
S80(-06)		2001	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
S80(-06)		2001	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2001	AW50-42	TCM	Sys. Info.	
S80(-06)		2001	AW50-42	TCM	Read code	
S80(-06)		2001	AW50-42	TCM	Clear code	
S80(-06)		2001	AW50-42	TCM	Data stream	
S80(-06)		2001	AW50-42	TCM	Actuation	
S80(-06)		2001	AW50-42	TCM	Special functions	Reset adaptation to zero
S80(-06)		2001	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2001	AW50/51AW D	TCM	Sys. Info.	

model	year	type	system	function	subfunction
S80(-06)	2001	AW50/51AW D	TCM	Read code	
S80(-06)	2001	AW50/51AW D	TCM	Clear code	
S80(-06)	2001	AW50/51AW D	TCM	Data stream	
S80(-06)	2001	AW50/51AW D	TCM	Actuation	
S80(-06)	2001	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S80(-06)	2001	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	2001	AW50/51AW D	TCM	Special functions	Control module adaptation
S80(-06)	2001	AW50/51AW D	TCM	Special functions	Activating gear indication
S80(-06)	2001	TF-80SC	TCM	Sys. Info.	
S80(-06)	2001	TF-80SC	TCM	Read code	
S80(-06)	2001	TF-80SC	TCM	Clear code	
S80(-06)	2001	TF-80SC	TCM	Data stream	
S80(-06)	2001	TF-80SC	TCM	Actuation	
S80(-06)	2001	TF-80SC	TCM	Special functions	Resetting the adaptation
S80(-06)	2001	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S80(-06)	2001	4T65EV	TCM	Sys. Info.	
S80(-06)	2001	4T65EV	TCM	Read code	
S80(-06)	2001	4T65EV	TCM	Clear code	
S80(-06)	2001	4T65EV	TCM	Data stream	
S80(-06)	2001	4T65EV	TCM	Actuation	
S80(-06)	2001	4T65AWD	TCM	Sys. Info.	
S80(-06)	2001	4T65AWD	TCM	Read code	
S80(-06)	2001	4T65AWD	TCM	Clear code	
S80(-06)	2001	4T65AWD	TCM	Data stream	
S80(-06)	2001	4T65AWD	TCM	Actuation	
S80(-06)	2001	4T65AWD	TCM	Special functions	Reset adaptation to zero
S80(-06)	2001	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	2001	4T65AWD	ABS	Sys. Info.	
S80(-06)	2001	4T65AWD	ABS	Read code	
S80(-06)	2001	4T65AWD	ABS	Clear code	
S80(-06)	2001	4T65AWD	ABS	Data stream	
S80(-06)	2001	4T65AWD	ABS	Actuation	
S80(-06)	2001	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
S80(-06)	2001	4T65AWD	ABS	Special functions	Calibration
S80(-06)	2001	4T65AWD	SRS	Sys. Info.	
S80(-06)	2001	4T65AWD	SRS	Read code	
S80(-06)	2001	4T65AWD	SRS	Clear code	
S80(-06)	2001	4T65AWD	SRS	Data stream	
S80(-06)	2001	4T65AWD	SRS	Freeze frame	
S80(-06)	2001	4T65AWD	CEM	Sys. Info.	
S80(-06)	2001	4T65AWD	CEM	Read code	
S80(-06)	2001	4T65AWD	CEM	Clear code	
S80(-06)	2001	4T65AWD	CEM	Data stream	
S80(-06)	2001	4T65AWD	CEM	Actuation	
S80(-06)	2001	4T65AWD	CEM	Special functions	Reading alarm cause(*)
S80(-06)	2001	4T65AWD	CEM	Special functions	Resetting the factory settings
S80(-06)	2001	4T65AWD	UEM	Sys. Info.	
S80(-06)	2001	4T65AWD	UEM	Read code	
S80(-06)	2001	4T65AWD	UEM	Clear code	
S80(-06)	2001	4T65AWD	UEM	Data stream	
S80(-06)	2001	4T65AWD	UEM	Actuation	
S80(-06)	2001	4T65AWD	UEM	Special functions	Configuration of the siren
S80(-06)	2001	4T65AWD	UEM	Special functions	Programming the control unit
S80(-06)	2001	4T65AWD	UEM	Special functions	Reading the programmed values
S80(-06)	2001	4T65AWD	REM	Sys. Info.	
S80(-06)	2001	4T65AWD	REM	Read code	
S80(-06)	2001	4T65AWD	REM	Clear code	
S80(-06)	2001	4T65AWD	REM	Data stream	
S80(-06)	2001	4T65AWD	REM	Actuation	
S80(-06)	2001	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S80(-06)	2001	4T65AWD	DIM	Sys. Info.	
S80(-06)	2001	4T65AWD	DIM	Read code	
S80(-06)	2001	4T65AWD	DIM	Clear code	
S80(-06)	2001	4T65AWD	DIM	Data stream	
S80(-06)	2001	4T65AWD	DIM	Actuation	
S80(-06)	2001	4T65AWD	DIM	Freeze frame	
S80(-06)	2001	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S80(-06)	2001	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
S80(-06)	2001	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
S80(-06)	2001	4T65AWD	DIM	Special functions	Programming the service time parameters (*)



model	year	type	system	function	subfunction	
S80(-06)		2001	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
S80(-06)		2001	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
S80(-06)		2001	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
S80(-06)		2001	4T65AWD	DIM	Special functions	Programming of clock (*)
S80(-06)		2001	4T65AWD	DIM	Special functions	Programming of zeros (*)
S80(-06)		2001	4T65AWD	DIM	Special functions	Programming parking brake warning
S80(-06)		2001	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(-06)		2001	4T65AWD	DIM	Special functions	Programming instrument lighting
S80(-06)		2001	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
S80(-06)		2001	4T65AWD	DIM	Special functions	Display of DSTC message
S80(-06)		2001	4T65AWD	DIM	Special functions	Read out programmed values
S80(-06)		2001	4T65AWD	PDM	Sys. Info.	
S80(-06)		2001	4T65AWD	PDM	Read code	
S80(-06)		2001	4T65AWD	PDM	Clear code	
S80(-06)		2001	4T65AWD	PDM	Data stream	
S80(-06)		2001	4T65AWD	PDM	Actuation	
S80(-06)		2001	4T65AWD	PDM	Special functions	Initialize the window(*)
S80(-06)		2001	4T65AWD	PSM	Sys. Info.	
S80(-06)		2001	4T65AWD	PSM	Read code	
S80(-06)		2001	4T65AWD	PSM	Clear code	
S80(-06)		2001	4T65AWD	PSM	Data stream	
S80(-06)		2001	4T65AWD	PSM	Actuation	
S80(-06)		2001	4T65AWD	DDM	Sys. Info.	
S80(-06)		2001	4T65AWD	DDM	Read code	
S80(-06)		2001	4T65AWD	DDM	Clear code	
S80(-06)		2001	4T65AWD	DDM	Data stream	
S80(-06)		2001	4T65AWD	DDM	Actuation	
S80(-06)		2001	4T65AWD	DDM	Special functions	Initialize the window(*)
S80(-06)		2001	4T65AWD	CCM	Sys. Info.	
S80(-06)		2001	4T65AWD	CCM	Read code	
S80(-06)		2001	4T65AWD	CCM	Clear code	
S80(-06)		2001	4T65AWD	CCM	Data stream	
S80(-06)		2001	4T65AWD	CCM	Special functions	Self-adjustment of adamer motor end stops(*)
S80(-06)		2001	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
S80(-06)		2001	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(-06)		2001	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(-06)		2001	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
S80(-06)		2001	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(-06)		2001	4T65AWD	CCM	Special functions	Programming the seat temperature
S80(-06)		2001	4T65AWD	PHM	Sys. Info.	
S80(-06)		2001	4T65AWD	PHM	Read code	
S80(-06)		2001	4T65AWD	PHM	Clear code	
S80(-06)		2001	4T65AWD	PHM	Data stream	
S80(-06)		2001	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
S80(-06)		2001	4T65AWD	AUM	Sys. Info.	
S80(-06)		2001	4T65AWD	AUM	Read code	
S80(-06)		2001	4T65AWD	AUM	Clear code	
S80(-06)		2001	4T65AWD	AUM	Data stream	
S80(-06)		2001	4T65AWD	SWM	Sys. Info.	
S80(-06)		2001	4T65AWD	SWM	Read code	
S80(-06)		2001	4T65AWD	SWM	Clear code	
S80(-06)		2001	4T65AWD	SWM	Data stream	
S80(-06)		2001	4T65AWD	RTI	Sys. Info.	
S80(-06)		2001	4T65AWD	RTI	Read code	
S80(-06)		2001	4T65AWD	RTI	Clear code	
S80(-06)		2001	4T65AWD	AEM	Sys. Info.	
S80(-06)		2001	4T65AWD	AEM	Read code	
S80(-06)		2001	4T65AWD	AEM	Clear code	
S80(-06)		2001	4T65AWD	AEM	Data stream	
S80(-06)		2001	4T65AWD	AEM	Actuation	
S80(-06)		2001	4T65AWD	CPM	Sys. Info.	
S80(-06)		2001	4T65AWD	CPM	Data stream	
S80(-06)		2001	4T65AWD	CPM	Special functions	Programming the additional and parking heater
S80(-06)		2001	4T65AWD	ETM	Sys. Info.	
S80(-06)		2001	4T65AWD	ETM	Data stream	
S80(-06)		2002	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S80(-06)		2002	B5244S	ECM	Sys. Info.	
S80(-06)		2002	B5244S	ECM	Read code	
S80(-06)		2002	B5244S	ECM	Clear code	
S80(-06)		2002	B5244S	ECM	Data stream	
S80(-06)		2002	B5244S	ECM	Actuation	
S80(-06)		2002	B6304S3	ECM	Sys. Info.	
S80(-06)		2002	B6304S3	ECM	Read code	
S80(-06)		2002	B6304S3	ECM	Clear code	

model	year	type	system	function	subfunction	
S80(-06)		2002	B6304S3	ECM	Data stream	
S80(-06)		2002	B6304S3	ECM	Actuation	
S80(-06)		2002	B6294T	ECM	Sys. Info.	
S80(-06)		2002	B6294T	ECM	Read code	
S80(-06)		2002	B6294T	ECM	Clear code	
S80(-06)		2002	B6294T	ECM	Data stream	
S80(-06)		2002	B6294T	ECM	Actuation	
S80(-06)		2002	B6294T	ECM	Special functions	Resetting the adaptation values
S80(-06)		2002	B6284T	ECM	Sys. Info.	
S80(-06)		2002	B6284T	ECM	Read code	
S80(-06)		2002	B6284T	ECM	Clear code	
S80(-06)		2002	B6284T	ECM	Data stream	
S80(-06)		2002	B6284T	ECM	Actuation	
S80(-06)		2002	B5204T4	ECM	Sys. Info.	
S80(-06)		2002	B5204T4	ECM	Read code	
S80(-06)		2002	B5204T4	ECM	Clear code	
S80(-06)		2002	B5204T4	ECM	Data stream	
S80(-06)		2002	B5204T4	ECM	Actuation	
S80(-06)		2002	B5204T3	ECM	Sys. Info.	
S80(-06)		2002	B5204T3	ECM	Read code	
S80(-06)		2002	B5204T3	ECM	Clear code	
S80(-06)		2002	B5204T3	ECM	Data stream	
S80(-06)		2002	B5204T3	ECM	Actuation	
S80(-06)		2002	B5244SG	ECM	Sys. Info.	
S80(-06)		2002	B5244SG	ECM	Read code	
S80(-06)		2002	B5244SG	ECM	Clear code	
S80(-06)		2002	B5244SG	ECM	Data stream	
S80(-06)		2002	B5244SG	ECM	Actuation	
S80(-06)		2002	B6294S2	ECM	Sys. Info.	
S80(-06)		2002	B6294S2	ECM	Read code	
S80(-06)		2002	B6294S2	ECM	Clear code	
S80(-06)		2002	B6294S2	ECM	Data stream	
S80(-06)		2002	B6294S2	ECM	Actuation	
S80(-06)		2002	B6294S2	ECM	Special functions	Quick test of intake camshaft control
S80(-06)		2002	B5244S2	ECM	Sys. Info.	
S80(-06)		2002	B5244S2	ECM	Read code	
S80(-06)		2002	B5244S2	ECM	Clear code	
S80(-06)		2002	B5244S2	ECM	Data stream	
S80(-06)		2002	B5244S2	ECM	Actuation	
S80(-06)		2002	B5254T2	ECM	Sys. Info.	
S80(-06)		2002	B5254T2	ECM	Read code	
S80(-06)		2002	B5254T2	ECM	Clear code	
S80(-06)		2002	B5254T2	ECM	Data stream	
S80(-06)		2002	B5254T2	ECM	Actuation	
S80(-06)		2002	B5254T2	ECM	Special functions	Resetting the adaptation values
S80(-06)		2002	B5234T3	ECM	Sys. Info.	
S80(-06)		2002	B5234T3	ECM	Read code	
S80(-06)		2002	B5234T3	ECM	Clear code	
S80(-06)		2002	B5234T3	ECM	Data stream	
S80(-06)		2002	B5234T3	ECM	Actuation	
S80(-06)		2002	B5204T5	ECM	Sys. Info.	
S80(-06)		2002	B5204T5	ECM	Read code	
S80(-06)		2002	B5204T5	ECM	Clear code	
S80(-06)		2002	B5204T5	ECM	Data stream	
S80(-06)		2002	B5204T5	ECM	Actuation	
S80(-06)		2002	B5254T4	ECM	Sys. Info.	
S80(-06)		2002	B5254T4	ECM	Read code	
S80(-06)		2002	B5254T4	ECM	Clear code	
S80(-06)		2002	B5254T4	ECM	Data stream	
S80(-06)		2002	B5254T4	ECM	Actuation	
S80(-06)		2002	B6294S	ECM	Sys. Info.	
S80(-06)		2002	B6294S	ECM	Read code	
S80(-06)		2002	B6294S	ECM	Clear code	
S80(-06)		2002	B6294S	ECM	Data stream	
S80(-06)		2002	B6294S	ECM	Actuation	
S80(-06)		2002	B5244T7	ECM	Sys. Info.	
S80(-06)		2002	B5244T7	ECM	Read code	
S80(-06)		2002	B5244T7	ECM	Clear code	
S80(-06)		2002	B5244T7	ECM	Data stream	
S80(-06)		2002	B5244T7	ECM	Actuation	
S80(-06)		2002	B5244T7	ECM	Special functions	Resetting the adaptation values
S80(-06)		2002	B5234T7	ECM	Sys. Info.	
S80(-06)		2002	B5234T7	ECM	Read code	
S80(-06)		2002	B5234T7	ECM	Clear code	
S80(-06)		2002	B5234T7	ECM	Data stream	
S80(-06)		2002	B5234T7	ECM	Actuation	
S80(-06)		2002	B5234T7	ECM	Special functions	Resetting the adaptation values
S80(-06)		2002	D5244T	Diesel Eng	Sys. Info.	

model	year	type	system	function	subfunction	
S80(-06)		2002	D5244T	Diesel Eng	Read code	
S80(-06)		2002	D5244T	Diesel Eng	Clear code	
S80(-06)		2002	D5244T	Diesel Eng	Data stream	
S80(-06)		2002	D5244T	Diesel Eng	Actuation	
S80(-06)		2002	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S80(-06)		2002	D5252T	Diesel Eng	Sys. Info.	
S80(-06)		2002	D5252T	Diesel Eng	Read code	
S80(-06)		2002	D5252T	Diesel Eng	Clear code	
S80(-06)		2002	D5252T	Diesel Eng	Data stream	
S80(-06)		2002	D5252T	Diesel Eng	Actuation	
S80(-06)		2002	D5252T	Diesel Eng	Special functions	Programming the idle speed
S80(-06)		2002	AW55-50SN	TCM	Sys. Info.	
S80(-06)		2002	AW55-50SN	TCM	Read code	
S80(-06)		2002	AW55-50SN	TCM	Clear code	
S80(-06)		2002	AW55-50SN	TCM	Data stream	
S80(-06)		2002	AW55-50SN	TCM	Actuation	
S80(-06)		2002	AW55-50SN	TCM	Special functions	Reset adaptation to zero
S80(-06)		2002	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2002	AW55-50SN	TCM	Special functions	Control module adaptation
S80(-06)		2002	AW55-50SN	TCM	Special functions	Activating gear indication
S80(-06)		2002	4T65EV-GT	TCM	Sys. Info.	
S80(-06)		2002	4T65EV-GT	TCM	Read code	
S80(-06)		2002	4T65EV-GT	TCM	Clear code	
S80(-06)		2002	4T65EV-GT	TCM	Data stream	
S80(-06)		2002	4T65EV-GT	TCM	Actuation	
S80(-06)		2002	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
S80(-06)		2002	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2002	AW50-42	TCM	Sys. Info.	
S80(-06)		2002	AW50-42	TCM	Read code	
S80(-06)		2002	AW50-42	TCM	Clear code	
S80(-06)		2002	AW50-42	TCM	Data stream	
S80(-06)		2002	AW50-42	TCM	Actuation	
S80(-06)		2002	AW50-42	TCM	Special functions	Reset adaptation to zero
S80(-06)		2002	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2002	AW50/51AW D	TCM	Sys. Info.	
S80(-06)		2002	AW50/51AW D	TCM	Read code	
S80(-06)		2002	AW50/51AW D	TCM	Clear code	
S80(-06)		2002	AW50/51AW D	TCM	Data stream	
S80(-06)		2002	AW50/51AW D	TCM	Actuation	
S80(-06)		2002	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S80(-06)		2002	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2002	TF-80SC	TCM	Sys. Info.	
S80(-06)		2002	TF-80SC	TCM	Read code	
S80(-06)		2002	TF-80SC	TCM	Clear code	
S80(-06)		2002	TF-80SC	TCM	Data stream	
S80(-06)		2002	TF-80SC	TCM	Actuation	
S80(-06)		2002	TF-80SC	TCM	Special functions	Resetting the adaptation
S80(-06)		2002	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S80(-06)		2002	4T65EV	TCM	Sys. Info.	
S80(-06)		2002	4T65EV	TCM	Read code	
S80(-06)		2002	4T65EV	TCM	Clear code	
S80(-06)		2002	4T65EV	TCM	Data stream	
S80(-06)		2002	4T65EV	TCM	Actuation	
S80(-06)		2002	4T65AWD	TCM	Sys. Info.	
S80(-06)		2002	4T65AWD	TCM	Read code	
S80(-06)		2002	4T65AWD	TCM	Clear code	
S80(-06)		2002	4T65AWD	TCM	Data stream	
S80(-06)		2002	4T65AWD	TCM	Actuation	
S80(-06)		2002	4T65AWD	TCM	Special functions	Reset adaptation to zero
S80(-06)		2002	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2002	4T65AWD	ABS	Sys. Info.	
S80(-06)		2002	4T65AWD	ABS	Read code	
S80(-06)		2002	4T65AWD	ABS	Clear code	
S80(-06)		2002	4T65AWD	ABS	Data stream	
S80(-06)		2002	4T65AWD	ABS	Actuation	
S80(-06)		2002	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
S80(-06)		2002	4T65AWD	ABS	Special functions	Calibration
S80(-06)		2002	4T65AWD	SRS	Sys. Info.	
S80(-06)		2002	4T65AWD	SRS	Read code	
S80(-06)		2002	4T65AWD	SRS	Clear code	
S80(-06)		2002	4T65AWD	SRS	Data stream	

model	year	type	system	function	subfunction	
S80(-06)		2002	4T65AWD	SRS	Freeze frame	
S80(-06)		2002	4T65AWD	CEM	Sys. Info.	
S80(-06)		2002	4T65AWD	CEM	Read code	
S80(-06)		2002	4T65AWD	CEM	Clear code	
S80(-06)		2002	4T65AWD	CEM	Data stream	
S80(-06)		2002	4T65AWD	CEM	Actuation	
S80(-06)		2002	4T65AWD	CEM	Special functions	Reading alarm cause(*)
S80(-06)		2002	4T65AWD	CEM	Special functions	Resetting the factory settings
S80(-06)		2002	4T65AWD	UEM	Sys. Info.	
S80(-06)		2002	4T65AWD	UEM	Read code	
S80(-06)		2002	4T65AWD	UEM	Clear code	
S80(-06)		2002	4T65AWD	UEM	Data stream	
S80(-06)		2002	4T65AWD	UEM	Actuation	
S80(-06)		2002	4T65AWD	UEM	Special functions	Configuration of the siren
S80(-06)		2002	4T65AWD	UEM	Special functions	Programming the control unit
S80(-06)		2002	4T65AWD	UEM	Special functions	Reading the programmed values
S80(-06)		2002	4T65AWD	REM	Sys. Info.	
S80(-06)		2002	4T65AWD	REM	Read code	
S80(-06)		2002	4T65AWD	REM	Clear code	
S80(-06)		2002	4T65AWD	REM	Data stream	
S80(-06)		2002	4T65AWD	REM	Actuation	
S80(-06)		2002	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S80(-06)		2002	4T65AWD	DIM	Sys. Info.	
S80(-06)		2002	4T65AWD	DIM	Read code	
S80(-06)		2002	4T65AWD	DIM	Clear code	
S80(-06)		2002	4T65AWD	DIM	Data stream	
S80(-06)		2002	4T65AWD	DIM	Actuation	
S80(-06)		2002	4T65AWD	DIM	Freeze frame	
S80(-06)		2002	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S80(-06)		2002	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
S80(-06)		2002	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
S80(-06)		2002	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
S80(-06)		2002	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
S80(-06)		2002	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
S80(-06)		2002	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
S80(-06)		2002	4T65AWD	DIM	Special functions	Programming of clock (*)
S80(-06)		2002	4T65AWD	DIM	Special functions	Programming of zeros (*)
S80(-06)		2002	4T65AWD	DIM	Special functions	Programming parking brake warning
S80(-06)		2002	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(-06)		2002	4T65AWD	DIM	Special functions	Programming instrument lighting
S80(-06)		2002	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
S80(-06)		2002	4T65AWD	DIM	Special functions	Display of DSTC message
S80(-06)		2002	4T65AWD	DIM	Special functions	Read out programmed values
S80(-06)		2002	4T65AWD	PDM	Sys. Info.	
S80(-06)		2002	4T65AWD	PDM	Read code	
S80(-06)		2002	4T65AWD	PDM	Clear code	
S80(-06)		2002	4T65AWD	PDM	Data stream	
S80(-06)		2002	4T65AWD	PDM	Actuation	
S80(-06)		2002	4T65AWD	PDM	Special functions	Initialize the window(*)
S80(-06)		2002	4T65AWD	PSM	Sys. Info.	
S80(-06)		2002	4T65AWD	PSM	Read code	
S80(-06)		2002	4T65AWD	PSM	Clear code	
S80(-06)		2002	4T65AWD	PSM	Data stream	
S80(-06)		2002	4T65AWD	PSM	Actuation	
S80(-06)		2002	4T65AWD	DDM	Sys. Info.	
S80(-06)		2002	4T65AWD	DDM	Read code	
S80(-06)		2002	4T65AWD	DDM	Clear code	
S80(-06)		2002	4T65AWD	DDM	Data stream	
S80(-06)		2002	4T65AWD	DDM	Actuation	
S80(-06)		2002	4T65AWD	DDM	Special functions	Initialize the window(*)
S80(-06)		2002	4T65AWD	CCM	Sys. Info.	
S80(-06)		2002	4T65AWD	CCM	Read code	
S80(-06)		2002	4T65AWD	CCM	Clear code	
S80(-06)		2002	4T65AWD	CCM	Data stream	
S80(-06)		2002	4T65AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S80(-06)		2002	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
S80(-06)		2002	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(-06)		2002	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(-06)		2002	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
S80(-06)		2002	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(-06)		2002	4T65AWD	CCM	Special functions	Programming the seat temperature
S80(-06)		2002	4T65AWD	PHM	Sys. Info.	
S80(-06)		2002	4T65AWD	PHM	Read code	
S80(-06)		2002	4T65AWD	PHM	Clear code	
S80(-06)		2002	4T65AWD	PHM	Data stream	

model	year	type	system	function	subfunction	
S80(-06)		2002	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
S80(-06)		2002	4T65AWD	AUM	Sys. Info.	
S80(-06)		2002	4T65AWD	AUM	Read code	
S80(-06)		2002	4T65AWD	AUM	Clear code	
S80(-06)		2002	4T65AWD	AUM	Data stream	
S80(-06)		2002	4T65AWD	SWM	Sys. Info.	
S80(-06)		2002	4T65AWD	SWM	Read code	
S80(-06)		2002	4T65AWD	SWM	Clear code	
S80(-06)		2002	4T65AWD	SWM	Data stream	
S80(-06)		2002	4T65AWD	DEM	Sys. Info.	
S80(-06)		2002	4T65AWD	DEM	Read code	
S80(-06)		2002	4T65AWD	DEM	Clear code	
S80(-06)		2002	4T65AWD	DEM	Data stream	
S80(-06)		2002	4T65AWD	RTI	Sys. Info.	
S80(-06)		2002	4T65AWD	RTI	Read code	
S80(-06)		2002	4T65AWD	RTI	Clear code	
S80(-06)		2002	4T65AWD	AEM	Sys. Info.	
S80(-06)		2002	4T65AWD	AEM	Read code	
S80(-06)		2002	4T65AWD	AEM	Clear code	
S80(-06)		2002	4T65AWD	AEM	Data stream	
S80(-06)		2002	4T65AWD	AEM	Actuation	
S80(-06)		2002	4T65AWD	CPM	Sys. Info.	
S80(-06)		2002	4T65AWD	CPM	Data stream	
S80(-06)		2002	4T65AWD	CPM	Special functions	Programming the additional and parking heater
S80(-06)		2002	4T65AWD	ETM	Sys. Info.	
S80(-06)		2002	4T65AWD	ETM	Data stream	
S80(-06)		2003	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S80(-06)		2003	B5244S	ECM	Sys. Info.	
S80(-06)		2003	B5244S	ECM	Read code	
S80(-06)		2003	B5244S	ECM	Clear code	
S80(-06)		2003	B5244S	ECM	Data stream	
S80(-06)		2003	B5244S	ECM	Actuation	
S80(-06)		2003	B6304S3	ECM	Sys. Info.	
S80(-06)		2003	B6304S3	ECM	Read code	
S80(-06)		2003	B6304S3	ECM	Clear code	
S80(-06)		2003	B6304S3	ECM	Data stream	
S80(-06)		2003	B6304S3	ECM	Actuation	
S80(-06)		2003	B6294T	ECM	Sys. Info.	
S80(-06)		2003	B6294T	ECM	Read code	
S80(-06)		2003	B6294T	ECM	Clear code	
S80(-06)		2003	B6294T	ECM	Data stream	
S80(-06)		2003	B6294T	ECM	Actuation	
S80(-06)		2003	B6294T	ECM	Special functions	Resetting the adaptation values
S80(-06)		2003	B6294T	ECM	Special functions	Quick test of Exhaust camshaft control
S80(-06)		2003	B6294T	ECM	Special functions	Quick test of intake camshaft control
S80(-06)		2003	B6284T	ECM	Sys. Info.	
S80(-06)		2003	B6284T	ECM	Read code	
S80(-06)		2003	B6284T	ECM	Clear code	
S80(-06)		2003	B6284T	ECM	Data stream	
S80(-06)		2003	B6284T	ECM	Actuation	
S80(-06)		2003	B5204T4	ECM	Sys. Info.	
S80(-06)		2003	B5204T4	ECM	Read code	
S80(-06)		2003	B5204T4	ECM	Clear code	
S80(-06)		2003	B5204T4	ECM	Data stream	
S80(-06)		2003	B5204T4	ECM	Actuation	
S80(-06)		2003	B5204T3	ECM	Sys. Info.	
S80(-06)		2003	B5204T3	ECM	Read code	
S80(-06)		2003	B5204T3	ECM	Clear code	
S80(-06)		2003	B5204T3	ECM	Data stream	
S80(-06)		2003	B5204T3	ECM	Actuation	
S80(-06)		2003	B5244SG	ECM	Sys. Info.	
S80(-06)		2003	B5244SG	ECM	Read code	
S80(-06)		2003	B5244SG	ECM	Clear code	
S80(-06)		2003	B5244SG	ECM	Data stream	
S80(-06)		2003	B5244SG	ECM	Actuation	
S80(-06)		2003	B6294S2	ECM	Sys. Info.	
S80(-06)		2003	B6294S2	ECM	Read code	
S80(-06)		2003	B6294S2	ECM	Clear code	
S80(-06)		2003	B6294S2	ECM	Data stream	
S80(-06)		2003	B6294S2	ECM	Actuation	
S80(-06)		2003	B5244S2	ECM	Sys. Info.	
S80(-06)		2003	B5244S2	ECM	Read code	
S80(-06)		2003	B5244S2	ECM	Clear code	
S80(-06)		2003	B5244S2	ECM	Data stream	
S80(-06)		2003	B5244S2	ECM	Actuation	
S80(-06)		2003	B5254T2	ECM	Sys. Info.	
S80(-06)		2003	B5254T2	ECM	Read code	

model	year	type	system	function	subfunction	
S80(-06)		2003	B5254T2	ECM	Clear code	
S80(-06)		2003	B5254T2	ECM	Data stream	
S80(-06)		2003	B5254T2	ECM	Actuation	
S80(-06)		2003	B5254T2	ECM	Special functions	Resetting the adaptation values
S80(-06)		2003	B5234T3	ECM	Sys. Info.	
S80(-06)		2003	B5234T3	ECM	Read code	
S80(-06)		2003	B5234T3	ECM	Clear code	
S80(-06)		2003	B5234T3	ECM	Data stream	
S80(-06)		2003	B5234T3	ECM	Actuation	
S80(-06)		2003	B5204T5	ECM	Sys. Info.	
S80(-06)		2003	B5204T5	ECM	Read code	
S80(-06)		2003	B5204T5	ECM	Clear code	
S80(-06)		2003	B5204T5	ECM	Data stream	
S80(-06)		2003	B5204T5	ECM	Actuation	
S80(-06)		2003	B5254T4	ECM	Sys. Info.	
S80(-06)		2003	B5254T4	ECM	Read code	
S80(-06)		2003	B5254T4	ECM	Clear code	
S80(-06)		2003	B5254T4	ECM	Data stream	
S80(-06)		2003	B5254T4	ECM	Actuation	
S80(-06)		2003	B6294S	ECM	Sys. Info.	
S80(-06)		2003	B6294S	ECM	Read code	
S80(-06)		2003	B6294S	ECM	Clear code	
S80(-06)		2003	B6294S	ECM	Data stream	
S80(-06)		2003	B6294S	ECM	Actuation	
S80(-06)		2003	B5244T7	ECM	Sys. Info.	
S80(-06)		2003	B5244T7	ECM	Read code	
S80(-06)		2003	B5244T7	ECM	Clear code	
S80(-06)		2003	B5244T7	ECM	Data stream	
S80(-06)		2003	B5244T7	ECM	Actuation	
S80(-06)		2003	B5244T7	ECM	Special functions	Resetting the adaptation values
S80(-06)		2003	B5234T7	ECM	Sys. Info.	
S80(-06)		2003	B5234T7	ECM	Read code	
S80(-06)		2003	B5234T7	ECM	Clear code	
S80(-06)		2003	B5234T7	ECM	Data stream	
S80(-06)		2003	B5234T7	ECM	Actuation	
S80(-06)		2003	B5234T7	ECM	Special functions	Resetting the adaptation values
S80(-06)		2003	D5244T	Diesel Eng	Sys. Info.	
S80(-06)		2003	D5244T	Diesel Eng	Read code	
S80(-06)		2003	D5244T	Diesel Eng	Clear code	
S80(-06)		2003	D5244T	Diesel Eng	Data stream	
S80(-06)		2003	D5244T	Diesel Eng	Actuation	
S80(-06)		2003	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S80(-06)		2003	D5252T	Diesel Eng	Sys. Info.	
S80(-06)		2003	D5252T	Diesel Eng	Read code	
S80(-06)		2003	D5252T	Diesel Eng	Clear code	
S80(-06)		2003	D5252T	Diesel Eng	Data stream	
S80(-06)		2003	D5252T	Diesel Eng	Actuation	
S80(-06)		2003	D5252T	Diesel Eng	Special functions	Programming the idle speed
S80(-06)		2003	AW55-50SN	TCM	Sys. Info.	
S80(-06)		2003	AW55-50SN	TCM	Read code	
S80(-06)		2003	AW55-50SN	TCM	Clear code	
S80(-06)		2003	AW55-50SN	TCM	Data stream	
S80(-06)		2003	AW55-50SN	TCM	Actuation	
S80(-06)		2003	AW55-50SN	TCM	Special functions	Reset adaptation to zero
S80(-06)		2003	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2003	AW55-50SN	TCM	Special functions	Control module adaptation
S80(-06)		2003	AW55-50SN	TCM	Special functions	Activating gear indication
S80(-06)		2003	4T65EV-GT	TCM	Sys. Info.	
S80(-06)		2003	4T65EV-GT	TCM	Read code	
S80(-06)		2003	4T65EV-GT	TCM	Clear code	
S80(-06)		2003	4T65EV-GT	TCM	Data stream	
S80(-06)		2003	4T65EV-GT	TCM	Actuation	
S80(-06)		2003	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
S80(-06)		2003	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2003	4T65EV-GT	TCM	Special functions	Activating gear indication
S80(-06)		2003	AW50-42	TCM	Sys. Info.	
S80(-06)		2003	AW50-42	TCM	Read code	
S80(-06)		2003	AW50-42	TCM	Clear code	
S80(-06)		2003	AW50-42	TCM	Data stream	
S80(-06)		2003	AW50-42	TCM	Actuation	
S80(-06)		2003	AW50-42	TCM	Special functions	Reset adaptation to zero
S80(-06)		2003	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2003	AW50/51AW D	TCM	Sys. Info.	
S80(-06)		2003	AW50/51AW D	TCM	Read code	
S80(-06)		2003	AW50/51AW D	TCM	Clear code	

model	year	type	system	function	subfunction
S80(-06)	2003	AW50/51AW D	TCM	Data stream	
S80(-06)	2003	AW50/51AW D	TCM	Actuation	
S80(-06)	2003	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S80(-06)	2003	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	2003	TF-80SC	TCM	Sys. Info.	
S80(-06)	2003	TF-80SC	TCM	Read code	
S80(-06)	2003	TF-80SC	TCM	Clear code	
S80(-06)	2003	TF-80SC	TCM	Data stream	
S80(-06)	2003	TF-80SC	TCM	Actuation	
S80(-06)	2003	TF-80SC	TCM	Special functions	Resetting the adaptation
S80(-06)	2003	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S80(-06)	2003	4T65EV	TCM	Sys. Info.	
S80(-06)	2003	4T65EV	TCM	Read code	
S80(-06)	2003	4T65EV	TCM	Clear code	
S80(-06)	2003	4T65EV	TCM	Data stream	
S80(-06)	2003	4T65EV	TCM	Actuation	
S80(-06)	2003	4T65AWD	TCM	Sys. Info.	
S80(-06)	2003	4T65AWD	TCM	Read code	
S80(-06)	2003	4T65AWD	TCM	Clear code	
S80(-06)	2003	4T65AWD	TCM	Data stream	
S80(-06)	2003	4T65AWD	TCM	Actuation	
S80(-06)	2003	4T65AWD	TCM	Special functions	Reset adaptation to zero
S80(-06)	2003	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	2003	4T65AWD	ABS	Sys. Info.	
S80(-06)	2003	4T65AWD	ABS	Read code	
S80(-06)	2003	4T65AWD	ABS	Clear code	
S80(-06)	2003	4T65AWD	ABS	Data stream	
S80(-06)	2003	4T65AWD	ABS	Actuation	
S80(-06)	2003	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
S80(-06)	2003	4T65AWD	ABS	Special functions	Calibration
S80(-06)	2003	4T65AWD	SRS	Sys. Info.	
S80(-06)	2003	4T65AWD	SRS	Read code	
S80(-06)	2003	4T65AWD	SRS	Clear code	
S80(-06)	2003	4T65AWD	SRS	Data stream	
S80(-06)	2003	4T65AWD	SRS	Freeze frame	
S80(-06)	2003	4T65AWD	CEM	Sys. Info.	
S80(-06)	2003	4T65AWD	CEM	Read code	
S80(-06)	2003	4T65AWD	CEM	Clear code	
S80(-06)	2003	4T65AWD	CEM	Data stream	
S80(-06)	2003	4T65AWD	CEM	Actuation	
S80(-06)	2003	4T65AWD	CEM	Special functions	Reading alarm cause(*)
S80(-06)	2003	4T65AWD	CEM	Special functions	Resetting the factory settings
S80(-06)	2003	4T65AWD	UEM	Sys. Info.	
S80(-06)	2003	4T65AWD	UEM	Read code	
S80(-06)	2003	4T65AWD	UEM	Clear code	
S80(-06)	2003	4T65AWD	UEM	Data stream	
S80(-06)	2003	4T65AWD	UEM	Actuation	
S80(-06)	2003	4T65AWD	UEM	Special functions	Configuration of the siren
S80(-06)	2003	4T65AWD	UEM	Special functions	Programming the control unit
S80(-06)	2003	4T65AWD	UEM	Special functions	Reading the programmed values
S80(-06)	2003	4T65AWD	REM	Sys. Info.	
S80(-06)	2003	4T65AWD	REM	Read code	
S80(-06)	2003	4T65AWD	REM	Clear code	
S80(-06)	2003	4T65AWD	REM	Data stream	
S80(-06)	2003	4T65AWD	REM	Actuation	
S80(-06)	2003	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S80(-06)	2003	4T65AWD	DIM	Sys. Info.	
S80(-06)	2003	4T65AWD	DIM	Read code	
S80(-06)	2003	4T65AWD	DIM	Clear code	
S80(-06)	2003	4T65AWD	DIM	Data stream	
S80(-06)	2003	4T65AWD	DIM	Actuation	
S80(-06)	2003	4T65AWD	DIM	Freeze frame	
S80(-06)	2003	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S80(-06)	2003	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
S80(-06)	2003	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
S80(-06)	2003	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
S80(-06)	2003	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
S80(-06)	2003	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
S80(-06)	2003	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
S80(-06)	2003	4T65AWD	DIM	Special functions	Programming of clock (*)
S80(-06)	2003	4T65AWD	DIM	Special functions	Programming of zeros (*)
S80(-06)	2003	4T65AWD	DIM	Special functions	Programming parking brake warning

model	year	type	system	function	subfunction
S80(-06)	2003	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(-06)	2003	4T65AWD	DIM	Special functions	Programming instrument lighting
S80(-06)	2003	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
S80(-06)	2003	4T65AWD	DIM	Special functions	Display of DSTC message
S80(-06)	2003	4T65AWD	DIM	Special functions	Read out programmed values
S80(-06)	2003	4T65AWD	PDM	Sys. Info.	
S80(-06)	2003	4T65AWD	PDM	Read code	
S80(-06)	2003	4T65AWD	PDM	Clear code	
S80(-06)	2003	4T65AWD	PDM	Data stream	
S80(-06)	2003	4T65AWD	PDM	Actuation	
S80(-06)	2003	4T65AWD	PDM	Special functions	Initialize the window(*)
S80(-06)	2003	4T65AWD	PSM	Sys. Info.	
S80(-06)	2003	4T65AWD	PSM	Read code	
S80(-06)	2003	4T65AWD	PSM	Clear code	
S80(-06)	2003	4T65AWD	PSM	Data stream	
S80(-06)	2003	4T65AWD	PSM	Actuation	
S80(-06)	2003	4T65AWD	DDM	Sys. Info.	
S80(-06)	2003	4T65AWD	DDM	Read code	
S80(-06)	2003	4T65AWD	DDM	Clear code	
S80(-06)	2003	4T65AWD	DDM	Data stream	
S80(-06)	2003	4T65AWD	DDM	Actuation	
S80(-06)	2003	4T65AWD	DDM	Special functions	Initialize the window(*)
S80(-06)	2003	4T65AWD	CCM	Sys. Info.	
S80(-06)	2003	4T65AWD	CCM	Read code	
S80(-06)	2003	4T65AWD	CCM	Clear code	
S80(-06)	2003	4T65AWD	CCM	Data stream	
S80(-06)	2003	4T65AWD	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
S80(-06)	2003	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
S80(-06)	2003	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(-06)	2003	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(-06)	2003	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
S80(-06)	2003	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(-06)	2003	4T65AWD	CCM	Special functions	Programming the seat temperature
S80(-06)	2003	4T65AWD	PHM	Sys. Info.	
S80(-06)	2003	4T65AWD	PHM	Read code	
S80(-06)	2003	4T65AWD	PHM	Clear code	
S80(-06)	2003	4T65AWD	PHM	Data stream	
S80(-06)	2003	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
S80(-06)	2003	4T65AWD	AUM	Sys. Info.	
S80(-06)	2003	4T65AWD	AUM	Read code	
S80(-06)	2003	4T65AWD	AUM	Clear code	
S80(-06)	2003	4T65AWD	AUM	Data stream	
S80(-06)	2003	4T65AWD	SWM	Sys. Info.	
S80(-06)	2003	4T65AWD	SWM	Read code	
S80(-06)	2003	4T65AWD	SWM	Clear code	
S80(-06)	2003	4T65AWD	SWM	Data stream	
S80(-06)	2003	4T65AWD	DEM	Sys. Info.	
S80(-06)	2003	4T65AWD	DEM	Read code	
S80(-06)	2003	4T65AWD	DEM	Clear code	
S80(-06)	2003	4T65AWD	DEM	Data stream	
S80(-06)	2003	4T65AWD	RTI	Sys. Info.	
S80(-06)	2003	4T65AWD	RTI	Read code	
S80(-06)	2003	4T65AWD	RTI	Clear code	
S80(-06)	2003	4T65AWD	AEM	Sys. Info.	
S80(-06)	2003	4T65AWD	AEM	Read code	
S80(-06)	2003	4T65AWD	AEM	Clear code	
S80(-06)	2003	4T65AWD	AEM	Data stream	
S80(-06)	2003	4T65AWD	AEM	Actuation	
S80(-06)	2003	4T65AWD	CPM	Sys. Info.	
S80(-06)	2003	4T65AWD	CPM	Data stream	
S80(-06)	2003	4T65AWD	CPM	Special functions	Programming the additional and parking heater
S80(-06)	2003	4T65AWD	ETM	Sys. Info.	
S80(-06)	2003	4T65AWD	ETM	Data stream	
S80(-06)	2004	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S80(-06)	2004	B5244S	ECM	Sys. Info.	
S80(-06)	2004	B5244S	ECM	Read code	
S80(-06)	2004	B5244S	ECM	Clear code	
S80(-06)	2004	B5244S	ECM	Data stream	
S80(-06)	2004	B5244S	ECM	Actuation	
S80(-06)	2004	B6304S3	ECM	Sys. Info.	
S80(-06)	2004	B6304S3	ECM	Read code	
S80(-06)	2004	B6304S3	ECM	Clear code	
S80(-06)	2004	B6304S3	ECM	Data stream	
S80(-06)	2004	B6304S3	ECM	Actuation	
S80(-06)	2004	B6294T	ECM	Sys. Info.	



model	year	type	system	function	subfunction	
S80(-06)		2004	B6294T	ECM	Read code	
S80(-06)		2004	B6294T	ECM	Clear code	
S80(-06)		2004	B6294T	ECM	Data stream	
S80(-06)		2004	B6294T	ECM	Actuation	
S80(-06)		2004	B6294T	ECM	Special functions	Resetting the adaptation values
S80(-06)		2004	B6284T	ECM	Sys. Info.	
S80(-06)		2004	B6284T	ECM	Read code	
S80(-06)		2004	B6284T	ECM	Clear code	
S80(-06)		2004	B6284T	ECM	Data stream	
S80(-06)		2004	B6284T	ECM	Actuation	
S80(-06)		2004	B5204T4	ECM	Sys. Info.	
S80(-06)		2004	B5204T4	ECM	Read code	
S80(-06)		2004	B5204T4	ECM	Clear code	
S80(-06)		2004	B5204T4	ECM	Data stream	
S80(-06)		2004	B5204T4	ECM	Actuation	
S80(-06)		2004	B5204T3	ECM	Sys. Info.	
S80(-06)		2004	B5204T3	ECM	Read code	
S80(-06)		2004	B5204T3	ECM	Clear code	
S80(-06)		2004	B5204T3	ECM	Data stream	
S80(-06)		2004	B5204T3	ECM	Actuation	
S80(-06)		2004	B5244SG	ECM	Sys. Info.	
S80(-06)		2004	B5244SG	ECM	Read code	
S80(-06)		2004	B5244SG	ECM	Clear code	
S80(-06)		2004	B5244SG	ECM	Data stream	
S80(-06)		2004	B5244SG	ECM	Actuation	
S80(-06)		2004	B6294S2	ECM	Sys. Info.	
S80(-06)		2004	B6294S2	ECM	Read code	
S80(-06)		2004	B6294S2	ECM	Clear code	
S80(-06)		2004	B6294S2	ECM	Data stream	
S80(-06)		2004	B6294S2	ECM	Actuation	
S80(-06)		2004	B5244S2	ECM	Sys. Info.	
S80(-06)		2004	B5244S2	ECM	Read code	
S80(-06)		2004	B5244S2	ECM	Clear code	
S80(-06)		2004	B5244S2	ECM	Data stream	
S80(-06)		2004	B5244S2	ECM	Actuation	
S80(-06)		2004	B5254T2	ECM	Sys. Info.	
S80(-06)		2004	B5254T2	ECM	Read code	
S80(-06)		2004	B5254T2	ECM	Clear code	
S80(-06)		2004	B5254T2	ECM	Data stream	
S80(-06)		2004	B5254T2	ECM	Actuation	
S80(-06)		2004	B5254T2	ECM	Special functions	Resetting the adaptation values
S80(-06)		2004	B5234T3	ECM	Sys. Info.	
S80(-06)		2004	B5234T3	ECM	Read code	
S80(-06)		2004	B5234T3	ECM	Clear code	
S80(-06)		2004	B5234T3	ECM	Data stream	
S80(-06)		2004	B5234T3	ECM	Actuation	
S80(-06)		2004	B5204T5	ECM	Sys. Info.	
S80(-06)		2004	B5204T5	ECM	Read code	
S80(-06)		2004	B5204T5	ECM	Clear code	
S80(-06)		2004	B5204T5	ECM	Data stream	
S80(-06)		2004	B5204T5	ECM	Actuation	
S80(-06)		2004	B5254T4	ECM	Sys. Info.	
S80(-06)		2004	B5254T4	ECM	Read code	
S80(-06)		2004	B5254T4	ECM	Clear code	
S80(-06)		2004	B5254T4	ECM	Data stream	
S80(-06)		2004	B5254T4	ECM	Actuation	
S80(-06)		2004	B5254T4	ECM	Special functions	Quick test of Exhaust camshaft control
S80(-06)		2004	B5254T4	ECM	Special functions	Quick test of intake camshaft control
S80(-06)		2004	B6294S	ECM	Sys. Info.	
S80(-06)		2004	B6294S	ECM	Read code	
S80(-06)		2004	B6294S	ECM	Clear code	
S80(-06)		2004	B6294S	ECM	Data stream	
S80(-06)		2004	B6294S	ECM	Actuation	
S80(-06)		2004	B5244T7	ECM	Sys. Info.	
S80(-06)		2004	B5244T7	ECM	Read code	
S80(-06)		2004	B5244T7	ECM	Clear code	
S80(-06)		2004	B5244T7	ECM	Data stream	
S80(-06)		2004	B5244T7	ECM	Actuation	
S80(-06)		2004	B5244T7	ECM	Special functions	Resetting the adaptation values
S80(-06)		2004	B5234T7	ECM	Sys. Info.	
S80(-06)		2004	B5234T7	ECM	Read code	
S80(-06)		2004	B5234T7	ECM	Clear code	
S80(-06)		2004	B5234T7	ECM	Data stream	
S80(-06)		2004	B5234T7	ECM	Actuation	
S80(-06)		2004	B5234T7	ECM	Special functions	Resetting the adaptation values
S80(-06)		2004	D5244T	Diesel Eng	Sys. Info.	
S80(-06)		2004	D5244T	Diesel Eng	Read code	
S80(-06)		2004	D5244T	Diesel Eng	Clear code	

model	year	type	system	function	subfunction	
S80(-06)		2004	D5244T	Diesel Eng	Data stream	
S80(-06)		2004	D5244T	Diesel Eng	Actuation	
S80(-06)		2004	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S80(-06)		2004	D5252T	Diesel Eng	Sys. Info.	
S80(-06)		2004	D5252T	Diesel Eng	Read code	
S80(-06)		2004	D5252T	Diesel Eng	Clear code	
S80(-06)		2004	D5252T	Diesel Eng	Data stream	
S80(-06)		2004	D5252T	Diesel Eng	Actuation	
S80(-06)		2004	D5252T	Diesel Eng	Special functions	Programming the idle speed
S80(-06)		2004	AW55-50SN	TCM	Sys. Info.	
S80(-06)		2004	AW55-50SN	TCM	Read code	
S80(-06)		2004	AW55-50SN	TCM	Clear code	
S80(-06)		2004	AW55-50SN	TCM	Data stream	
S80(-06)		2004	AW55-50SN	TCM	Actuation	
S80(-06)		2004	AW55-50SN	TCM	Special functions	Reset adaptation to zero
S80(-06)		2004	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2004	4T65EV-GT	TCM	Sys. Info.	
S80(-06)		2004	4T65EV-GT	TCM	Read code	
S80(-06)		2004	4T65EV-GT	TCM	Clear code	
S80(-06)		2004	4T65EV-GT	TCM	Data stream	
S80(-06)		2004	4T65EV-GT	TCM	Actuation	
S80(-06)		2004	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
S80(-06)		2004	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2004	AW50-42	TCM	Sys. Info.	
S80(-06)		2004	AW50-42	TCM	Read code	
S80(-06)		2004	AW50-42	TCM	Clear code	
S80(-06)		2004	AW50-42	TCM	Data stream	
S80(-06)		2004	AW50-42	TCM	Actuation	
S80(-06)		2004	AW50-42	TCM	Special functions	Reset adaptation to zero
S80(-06)		2004	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2004	AW50/51AW D	TCM	Sys. Info.	
S80(-06)		2004	AW50/51AW D	TCM	Read code	
S80(-06)		2004	AW50/51AW D	TCM	Clear code	
S80(-06)		2004	AW50/51AW D	TCM	Data stream	
S80(-06)		2004	AW50/51AW D	TCM	Actuation	
S80(-06)		2004	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S80(-06)		2004	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2004	TF-80SC	TCM	Sys. Info.	
S80(-06)		2004	TF-80SC	TCM	Read code	
S80(-06)		2004	TF-80SC	TCM	Clear code	
S80(-06)		2004	TF-80SC	TCM	Data stream	
S80(-06)		2004	TF-80SC	TCM	Actuation	
S80(-06)		2004	TF-80SC	TCM	Special functions	Resetting the adaptation
S80(-06)		2004	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S80(-06)		2004	4T65EV	TCM	Sys. Info.	
S80(-06)		2004	4T65EV	TCM	Read code	
S80(-06)		2004	4T65EV	TCM	Clear code	
S80(-06)		2004	4T65EV	TCM	Data stream	
S80(-06)		2004	4T65EV	TCM	Actuation	
S80(-06)		2004	4T65AWD	TCM	Sys. Info.	
S80(-06)		2004	4T65AWD	TCM	Read code	
S80(-06)		2004	4T65AWD	TCM	Clear code	
S80(-06)		2004	4T65AWD	TCM	Data stream	
S80(-06)		2004	4T65AWD	TCM	Actuation	
S80(-06)		2004	4T65AWD	TCM	Special functions	Reset adaptation to zero
S80(-06)		2004	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2004	4T65AWD	ABS	Sys. Info.	
S80(-06)		2004	4T65AWD	ABS	Read code	
S80(-06)		2004	4T65AWD	ABS	Clear code	
S80(-06)		2004	4T65AWD	ABS	Data stream	
S80(-06)		2004	4T65AWD	ABS	Actuation	
S80(-06)		2004	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
S80(-06)		2004	4T65AWD	ABS	Special functions	Calibration
S80(-06)		2004	4T65AWD	SRS	Sys. Info.	
S80(-06)		2004	4T65AWD	SRS	Read code	
S80(-06)		2004	4T65AWD	SRS	Clear code	
S80(-06)		2004	4T65AWD	SRS	Data stream	
S80(-06)		2004	4T65AWD	SRS	Freeze frame	
S80(-06)		2004	4T65AWD	CEM	Sys. Info.	
S80(-06)		2004	4T65AWD	CEM	Read code	
S80(-06)		2004	4T65AWD	CEM	Clear code	

model	year	type	system	function	subfunction	
S80(-06)		2004	4T65AWD	CEM	Data stream	
S80(-06)		2004	4T65AWD	CEM	Actuation	
S80(-06)		2004	4T65AWD	CEM	Special functions	Reading alarm cause(*)
S80(-06)		2004	4T65AWD	CEM	Special functions	Resetting the factory settings
S80(-06)		2004	4T65AWD	UEM	Sys. Info.	
S80(-06)		2004	4T65AWD	UEM	Read code	
S80(-06)		2004	4T65AWD	UEM	Clear code	
S80(-06)		2004	4T65AWD	UEM	Data stream	
S80(-06)		2004	4T65AWD	UEM	Actuation	
S80(-06)		2004	4T65AWD	UEM	Special functions	Configuration of the siren
S80(-06)		2004	4T65AWD	UEM	Special functions	Programming the control unit
S80(-06)		2004	4T65AWD	UEM	Special functions	Reading the programmed values
S80(-06)		2004	4T65AWD	REM	Sys. Info.	
S80(-06)		2004	4T65AWD	REM	Read code	
S80(-06)		2004	4T65AWD	REM	Clear code	
S80(-06)		2004	4T65AWD	REM	Data stream	
S80(-06)		2004	4T65AWD	REM	Actuation	
S80(-06)		2004	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S80(-06)		2004	4T65AWD	DIM	Sys. Info.	
S80(-06)		2004	4T65AWD	DIM	Read code	
S80(-06)		2004	4T65AWD	DIM	Clear code	
S80(-06)		2004	4T65AWD	DIM	Data stream	
S80(-06)		2004	4T65AWD	DIM	Actuation	
S80(-06)		2004	4T65AWD	DIM	Freeze frame	
S80(-06)		2004	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S80(-06)		2004	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
S80(-06)		2004	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
S80(-06)		2004	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
S80(-06)		2004	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
S80(-06)		2004	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
S80(-06)		2004	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
S80(-06)		2004	4T65AWD	DIM	Special functions	Programming of clock (*)
S80(-06)		2004	4T65AWD	DIM	Special functions	Programming of zeros (*)
S80(-06)		2004	4T65AWD	DIM	Special functions	Programming parking brake warning
S80(-06)		2004	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(-06)		2004	4T65AWD	DIM	Special functions	Programming instrument lighting
S80(-06)		2004	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
S80(-06)		2004	4T65AWD	DIM	Special functions	Display of DSTC message
S80(-06)		2004	4T65AWD	DIM	Special functions	Read out programmed values
S80(-06)		2004	4T65AWD	PDM	Sys. Info.	
S80(-06)		2004	4T65AWD	PDM	Read code	
S80(-06)		2004	4T65AWD	PDM	Clear code	
S80(-06)		2004	4T65AWD	PDM	Data stream	
S80(-06)		2004	4T65AWD	PDM	Actuation	
S80(-06)		2004	4T65AWD	PDM	Special functions	Initialize the window(*)
S80(-06)		2004	4T65AWD	PSM	Sys. Info.	
S80(-06)		2004	4T65AWD	PSM	Read code	
S80(-06)		2004	4T65AWD	PSM	Clear code	
S80(-06)		2004	4T65AWD	PSM	Data stream	
S80(-06)		2004	4T65AWD	PSM	Actuation	
S80(-06)		2004	4T65AWD	DDM	Sys. Info.	
S80(-06)		2004	4T65AWD	DDM	Read code	
S80(-06)		2004	4T65AWD	DDM	Clear code	
S80(-06)		2004	4T65AWD	DDM	Data stream	
S80(-06)		2004	4T65AWD	DDM	Actuation	
S80(-06)		2004	4T65AWD	DDM	Special functions	Initialize the window(*)
S80(-06)		2004	4T65AWD	CCM	Sys. Info.	
S80(-06)		2004	4T65AWD	CCM	Read code	
S80(-06)		2004	4T65AWD	CCM	Clear code	
S80(-06)		2004	4T65AWD	CCM	Data stream	
S80(-06)		2004	4T65AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S80(-06)		2004	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
S80(-06)		2004	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(-06)		2004	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(-06)		2004	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
S80(-06)		2004	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(-06)		2004	4T65AWD	CCM	Special functions	Programming the seat temperature
S80(-06)		2004	4T65AWD	PHM	Sys. Info.	
S80(-06)		2004	4T65AWD	PHM	Read code	
S80(-06)		2004	4T65AWD	PHM	Clear code	
S80(-06)		2004	4T65AWD	PHM	Data stream	
S80(-06)		2004	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
S80(-06)		2004	4T65AWD	AUM	Sys. Info.	
S80(-06)		2004	4T65AWD	AUM	Read code	
S80(-06)		2004	4T65AWD	AUM	Clear code	

model	year	type	system	function	subfunction	
S80(-06)		2004	4T65AWD	AUM	Data stream	
S80(-06)		2004	4T65AWD	SWM	Sys. Info.	
S80(-06)		2004	4T65AWD	SWM	Read code	
S80(-06)		2004	4T65AWD	SWM	Clear code	
S80(-06)		2004	4T65AWD	SWM	Data stream	
S80(-06)		2004	4T65AWD	DEM	Sys. Info.	
S80(-06)		2004	4T65AWD	DEM	Read code	
S80(-06)		2004	4T65AWD	DEM	Clear code	
S80(-06)		2004	4T65AWD	DEM	Data stream	
S80(-06)		2004	4T65AWD	RTI	Sys. Info.	
S80(-06)		2004	4T65AWD	RTI	Read code	
S80(-06)		2004	4T65AWD	RTI	Clear code	
S80(-06)		2004	4T65AWD	AEM	Sys. Info.	
S80(-06)		2004	4T65AWD	AEM	Read code	
S80(-06)		2004	4T65AWD	AEM	Clear code	
S80(-06)		2004	4T65AWD	AEM	Data stream	
S80(-06)		2004	4T65AWD	AEM	Actuation	
S80(-06)		2004	4T65AWD	CPM	Sys. Info.	
S80(-06)		2004	4T65AWD	CPM	Data stream	
S80(-06)		2004	4T65AWD	CPM	Special functions	Programming the additional and parking heater
S80(-06)		2004	4T65AWD	ETM	Sys. Info.	
S80(-06)		2004	4T65AWD	ETM	Data stream	
S80(-06)		2005	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S80(-06)		2005	B5244S4	ECM	Sys. Info.	
S80(-06)		2005	B5244S4	ECM	Read code	
S80(-06)		2005	B5244S4	ECM	Clear code	
S80(-06)		2005	B5244S4	ECM	Data stream	
S80(-06)		2005	B5244S4	ECM	Actuation	
S80(-06)		2005	B5244S4	ECM	Special functions	Resetting the adaptation values
S80(-06)		2005	B5244S5	ECM	Sys. Info.	
S80(-06)		2005	B5244S5	ECM	Read code	
S80(-06)		2005	B5244S5	ECM	Clear code	
S80(-06)		2005	B5244S5	ECM	Data stream	
S80(-06)		2005	B5244S5	ECM	Actuation	
S80(-06)		2005	B5244S5	ECM	Special functions	Resetting the adaptation values
S80(-06)		2005	B5244S7	ECM	Sys. Info.	
S80(-06)		2005	B5244S7	ECM	Read code	
S80(-06)		2005	B5244S7	ECM	Clear code	
S80(-06)		2005	B5244S7	ECM	Data stream	
S80(-06)		2005	B5244S7	ECM	Actuation	
S80(-06)		2005	B4204S3	ECM	Sys. Info.	
S80(-06)		2005	B4204S3	ECM	Read code	
S80(-06)		2005	B4204S3	ECM	Clear code	
S80(-06)		2005	B4204S3	ECM	Data stream	
S80(-06)		2005	B4204S3	ECM	Actuation	
S80(-06)		2005	B5254T2	ECM	Sys. Info.	
S80(-06)		2005	B5254T2	ECM	Read code	
S80(-06)		2005	B5254T2	ECM	Clear code	
S80(-06)		2005	B5254T2	ECM	Data stream	
S80(-06)		2005	B5254T2	ECM	Actuation	
S80(-06)		2005	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2005	B5254T2	ECM	Special functions	Quick test of Exhaust camshaft control
S80(-06)		2005	B5254T2	ECM	Special functions	Quick test of intake camshaft control
S80(-06)		2005	B5254T2	ECM	Special functions	Quick test of the fuel pump(FP)
S80(-06)		2005	B5254T3	ECM	Sys. Info.	
S80(-06)		2005	B5254T3	ECM	Read code	
S80(-06)		2005	B5254T3	ECM	Clear code	
S80(-06)		2005	B5254T3	ECM	Data stream	
S80(-06)		2005	B5254T3	ECM	Actuation	
S80(-06)		2005	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2005	B5254T7	ECM	Sys. Info.	
S80(-06)		2005	B5254T7	ECM	Read code	
S80(-06)		2005	B5254T7	ECM	Clear code	
S80(-06)		2005	B5254T7	ECM	Data stream	
S80(-06)		2005	B5254T7	ECM	Actuation	
S80(-06)		2005	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2005	B5204T5	ECM	Sys. Info.	
S80(-06)		2005	B5204T5	ECM	Read code	
S80(-06)		2005	B5204T5	ECM	Clear code	
S80(-06)		2005	B5204T5	ECM	Data stream	
S80(-06)		2005	B5204T5	ECM	Actuation	
S80(-06)		2005	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2005	B6294T	ECM	Sys. Info.	
S80(-06)		2005	B6294T	ECM	Read code	
S80(-06)		2005	B6294T	ECM	Clear code	
S80(-06)		2005	B6294T	ECM	Data stream	
S80(-06)		2005	B6294T	ECM	Actuation	

model	year	type	system	function	subfunction
S80(-06)		2005 B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2005 B4164S3	ECM	Sys. Info.	
S80(-06)		2005 B4164S3	ECM	Read code	
S80(-06)		2005 B4164S3	ECM	Clear code	
S80(-06)		2005 B4164S3	ECM	Data stream	
S80(-06)		2005 B4164S3	ECM	Actuation	
S80(-06)		2005 B4164S3	ECM	Special functions	Resetting the adaptation values
S80(-06)		2005 B5244T5	ECM	Sys. Info.	
S80(-06)		2005 B5244T5	ECM	Read code	
S80(-06)		2005 B5244T5	ECM	Clear code	
S80(-06)		2005 B5244T5	ECM	Data stream	
S80(-06)		2005 B5244T5	ECM	Actuation	
S80(-06)		2005 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2005 B4184S11	ECM	Sys. Info.	
S80(-06)		2005 B4184S11	ECM	Read code	
S80(-06)		2005 B4184S11	ECM	Clear code	
S80(-06)		2005 B4184S11	ECM	Data stream	
S80(-06)		2005 B4184S11	ECM	Actuation	
S80(-06)		2005 B4184S11	ECM	Special functions	Resetting the adaptation values
S80(-06)		2005 D5244T	Diesel Eng	Sys. Info.	
S80(-06)		2005 D5244T	Diesel Eng	Read code	
S80(-06)		2005 D5244T	Diesel Eng	Clear code	
S80(-06)		2005 D5244T	Diesel Eng	Data stream	
S80(-06)		2005 D5244T	Diesel Eng	Actuation	
S80(-06)		2005 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S80(-06)		2005 D5244T4	Diesel Eng	Sys. Info.	
S80(-06)		2005 D5244T4	Diesel Eng	Read code	
S80(-06)		2005 D5244T4	Diesel Eng	Clear code	
S80(-06)		2005 D5244T4	Diesel Eng	Data stream	
S80(-06)		2005 D5244T4	Diesel Eng	Actuation	
S80(-06)		2005 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S80(-06)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S80(-06)		2005 D5244T4	Diesel Eng	Special functions	Resetting counter oil
S80(-06)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S80(-06)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S80(-06)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S80(-06)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S80(-06)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S80(-06)		2005 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S80(-06)		2005 D5244T5	Diesel Eng	Sys. Info.	
S80(-06)		2005 D5244T5	Diesel Eng	Read code	
S80(-06)		2005 D5244T5	Diesel Eng	Clear code	
S80(-06)		2005 D5244T5	Diesel Eng	Data stream	
S80(-06)		2005 D5244T5	Diesel Eng	Actuation	
S80(-06)		2005 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S80(-06)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S80(-06)		2005 D5244T5	Diesel Eng	Special functions	Resetting counter oil
S80(-06)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S80(-06)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S80(-06)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S80(-06)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S80(-06)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S80(-06)		2005 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S80(-06)		2005 D5244T8	Diesel Eng	Sys. Info.	
S80(-06)		2005 D5244T8	Diesel Eng	Read code	
S80(-06)		2005 D5244T8	Diesel Eng	Clear code	
S80(-06)		2005 D5244T8	Diesel Eng	Data stream	
S80(-06)		2005 D5244T8	Diesel Eng	Actuation	
S80(-06)		2005 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S80(-06)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S80(-06)		2005 D5244T8	Diesel Eng	Special functions	Resetting counter oil
S80(-06)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S80(-06)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S80(-06)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S80(-06)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S80(-06)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S80(-06)		2005 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S80(-06)		2005 D4164T	Diesel Eng	Sys. Info.	
S80(-06)		2005 D4164T	Diesel Eng	Read code	
S80(-06)		2005 D4164T	Diesel Eng	Clear code	
S80(-06)		2005 D4164T	Diesel Eng	Data stream	
S80(-06)		2005 D4164T	Diesel Eng	Actuation	
S80(-06)		2005 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S80(-06)		2005 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(-06)		2005 D4164T	Diesel Eng	Special functions	Combustion of soot particles
S80(-06)		2005 D4204T	Diesel Eng	Sys. Info.	
S80(-06)		2005 D4204T	Diesel Eng	Read code	
S80(-06)		2005 D4204T	Diesel Eng	Clear code	

model	year	type	system	function	subfunction	
S80(-06)		2005	D4204T	Diesel Eng	Data stream	
S80(-06)		2005	D4204T	Diesel Eng	Actuation	
S80(-06)		2005	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S80(-06)		2005	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S80(-06)		2005	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S80(-06)		2005	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(-06)		2005	D4204T	Diesel Eng	Special functions	Combustion of soot particles
S80(-06)		2005	AW55-50/51SN	TCM	Sys. Info.	
S80(-06)		2005	AW55-50/51SN	TCM	Read code	
S80(-06)		2005	AW55-50/51SN	TCM	Clear code	
S80(-06)		2005	AW55-50/51SN	TCM	Data stream	
S80(-06)		2005	AW55-50/51SN	TCM	Actuation	
S80(-06)		2005	AW55-50/51SN	TCM	Freeze frame	
S80(-06)		2005	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S80(-06)		2005	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2005	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S80(-06)		2005	AW55-50/51SN	TCM	Special functions	Control module adaptation
S80(-06)		2005	AW55-50/51SN	TCM	Special functions	Activating gear indication
S80(-06)		2005	4T65AWD	TCM	Sys. Info.	
S80(-06)		2005	4T65AWD	TCM	Read code	
S80(-06)		2005	4T65AWD	TCM	Clear code	
S80(-06)		2005	4T65AWD	TCM	Data stream	
S80(-06)		2005	4T65AWD	TCM	Actuation	
S80(-06)		2005	4T65AWD	TCM	Special functions	Reset adaptation to zero
S80(-06)		2005	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2005	TF-80SC	TCM	Sys. Info.	
S80(-06)		2005	TF-80SC	TCM	Read code	
S80(-06)		2005	TF-80SC	TCM	Clear code	
S80(-06)		2005	TF-80SC	TCM	Data stream	
S80(-06)		2005	TF-80SC	TCM	Actuation	
S80(-06)		2005	TF-80SC	TCM	Special functions	Reset adaptation to zero
S80(-06)		2005	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2005	TF-80SC	TCM	Special functions	Calibration of position sensor
S80(-06)		2005	4T65EV	TCM	Sys. Info.	
S80(-06)		2005	4T65EV	TCM	Read code	
S80(-06)		2005	4T65EV	TCM	Clear code	
S80(-06)		2005	4T65EV	TCM	Data stream	
S80(-06)		2005	4T65EV	TCM	Actuation	
S80(-06)		2005	4T65EV	TCM	Freeze frame	
S80(-06)		2005	4T65EV	TCM	Special functions	Reset adaptation to zero; Resetting the counter for - gearbox oil change; Activating gear indication
S80(-06)		2005	AW50/51AW D	TCM	Sys. Info.	
S80(-06)		2005	AW50/51AW D	TCM	Read code	
S80(-06)		2005	AW50/51AW D	TCM	Clear code	
S80(-06)		2005	AW50/51AW D	TCM	Data stream	
S80(-06)		2005	AW50/51AW D	TCM	Actuation	
S80(-06)		2005	AW50/51AW D	TCM	Freeze frame	
S80(-06)		2005	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S80(-06)		2005	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)		2005	AW50/51AW D	ABS	Sys. Info.	
S80(-06)		2005	AW50/51AW D	ABS	Read code	
S80(-06)		2005	AW50/51AW D	ABS	Clear code	
S80(-06)		2005	AW50/51AW D	ABS	Data stream	
S80(-06)		2005	AW50/51AW D	ABS	Actuation	

model	year	type	system	function	subfunction
S80(-06)	2005	AW50/51AW D	ABS	Freeze frame	
S80(-06)	2005	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S80(-06)	2005	AW50/51AW D	ABS	Special functions	Reading off the configuration
S80(-06)	2005	AW50/51AW D	ABS	Special functions	Calibration
S80(-06)	2005	AW50/51AW D	SRS	Sys. Info.	
S80(-06)	2005	AW50/51AW D	SRS	Read code	
S80(-06)	2005	AW50/51AW D	SRS	Clear code	
S80(-06)	2005	AW50/51AW D	SRS	Data stream	
S80(-06)	2005	AW50/51AW D	SRS	Freeze frame	
S80(-06)	2005	AW50/51AW D	CEM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	CEM	Read code	
S80(-06)	2005	AW50/51AW D	CEM	Clear code	
S80(-06)	2005	AW50/51AW D	CEM	Data stream	
S80(-06)	2005	AW50/51AW D	CEM	Actuation	
S80(-06)	2005	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S80(-06)	2005	AW50/51AW D	CEM	Special functions	Programming control module
S80(-06)	2005	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S80(-06)	2005	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S80(-06)	2005	AW50/51AW D	CEM	Special functions	Resetting crash mode
S80(-06)	2005	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S80(-06)	2005	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S80(-06)	2005	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S80(-06)	2005	AW50/51AW D	CEM	Special functions	Ignition switch key position
S80(-06)	2005	AW50/51AW D	UEM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	UEM	Read code	
S80(-06)	2005	AW50/51AW D	UEM	Clear code	
S80(-06)	2005	AW50/51AW D	UEM	Data stream	
S80(-06)	2005	AW50/51AW D	UEM	Actuation	
S80(-06)	2005	AW50/51AW D	UEM	Special functions	Configuration of the siren
S80(-06)	2005	AW50/51AW D	UEM	Special functions	Programming the control unit
S80(-06)	2005	AW50/51AW D	UEM	Special functions	Reading the programmed values
S80(-06)	2005	AW50/51AW D	REM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	REM	Read code	
S80(-06)	2005	AW50/51AW D	REM	Clear code	
S80(-06)	2005	AW50/51AW D	REM	Data stream	
S80(-06)	2005	AW50/51AW D	REM	Actuation	
S80(-06)	2005	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S80(-06)	2005	AW50/51AW D	DIM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	DIM	Read code	

model	year	type	system	function	subfunction
S80(-06)	2005	AW50/51AW D	DIM	Clear code	
S80(-06)	2005	AW50/51AW D	DIM	Data stream	
S80(-06)	2005	AW50/51AW D	DIM	Actuation	
S80(-06)	2005	AW50/51AW D	DIM	Freeze frame	
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Display of DSTC message
S80(-06)	2005	AW50/51AW D	DIM	Special functions	Read out programmed values
S80(-06)	2005	AW50/51AW D	PDM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	PDM	Read code	
S80(-06)	2005	AW50/51AW D	PDM	Clear code	
S80(-06)	2005	AW50/51AW D	PDM	Data stream	
S80(-06)	2005	AW50/51AW D	PDM	Actuation	
S80(-06)	2005	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S80(-06)	2005	AW50/51AW D	PSM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	PSM	Read code	
S80(-06)	2005	AW50/51AW D	PSM	Clear code	
S80(-06)	2005	AW50/51AW D	PSM	Data stream	
S80(-06)	2005	AW50/51AW D	PSM	Actuation	
S80(-06)	2005	AW50/51AW D	DDM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	DDM	Read code	
S80(-06)	2005	AW50/51AW D	DDM	Clear code	
S80(-06)	2005	AW50/51AW D	DDM	Data stream	
S80(-06)	2005	AW50/51AW D	DDM	Actuation	
S80(-06)	2005	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S80(-06)	2005	AW50/51AW D	CCM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	CCM	Read code	
S80(-06)	2005	AW50/51AW D	CCM	Clear code	



model	year	type	system	function	subfunction
S80(-06)	2005	AW50/51AW D	CCM	Data stream	
S80(-06)	2005	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S80(-06)	2005	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S80(-06)	2005	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(-06)	2005	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(-06)	2005	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S80(-06)	2005	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(-06)	2005	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S80(-06)	2005	AW50/51AW D	PHM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	PHM	Read code	
S80(-06)	2005	AW50/51AW D	PHM	Clear code	
S80(-06)	2005	AW50/51AW D	PHM	Data stream	
S80(-06)	2005	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S80(-06)	2005	AW50/51AW D	AUM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	AUM	Read code	
S80(-06)	2005	AW50/51AW D	AUM	Clear code	
S80(-06)	2005	AW50/51AW D	AUM	Data stream	
S80(-06)	2005	AW50/51AW D	DEM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	DEM	Read code	
S80(-06)	2005	AW50/51AW D	DEM	Clear code	
S80(-06)	2005	AW50/51AW D	DEM	Data stream	
S80(-06)	2005	AW50/51AW D	RTI	Sys. Info.	
S80(-06)	2005	AW50/51AW D	RTI	Read code	
S80(-06)	2005	AW50/51AW D	RTI	Clear code	
S80(-06)	2005	AW50/51AW D	AEM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	AEM	Read code	
S80(-06)	2005	AW50/51AW D	AEM	Clear code	
S80(-06)	2005	AW50/51AW D	AEM	Data stream	
S80(-06)	2005	AW50/51AW D	AEM	Actuation	
S80(-06)	2005	AW50/51AW D	CPM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	CPM	Data stream	
S80(-06)	2005	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
S80(-06)	2005	AW50/51AW D	HCM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	HCM	Read code	
S80(-06)	2005	AW50/51AW D	HCM	Clear code	
S80(-06)	2005	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S80(-06)	2005	AW50/51AW D	KVM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	KVM	Read code	
S80(-06)	2005	AW50/51AW D	KVM	Clear code	

model	year	type	system	function	subfunction
S80(-06)	2005	AW50/51AW D	KVM	Data stream	
S80(-06)	2005	AW50/51AW D	KVM	Actuation	
S80(-06)	2005	AW50/51AW D	RDAR	Sys. Info.	
S80(-06)	2005	AW50/51AW D	RDAR	Read code	
S80(-06)	2005	AW50/51AW D	RDAR	Clear code	
S80(-06)	2005	AW50/51AW D	RDAR	Data stream	
S80(-06)	2005	AW50/51AW D	SUB	Sys. Info.	
S80(-06)	2005	AW50/51AW D	SUB	Read code	
S80(-06)	2005	AW50/51AW D	SUB	Clear code	
S80(-06)	2005	AW50/51AW D	SUB	Data stream	
S80(-06)	2005	AW50/51AW D	CVM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	CVM	Read code	
S80(-06)	2005	AW50/51AW D	CVM	Clear code	
S80(-06)	2005	AW50/51AW D	CVM	Data stream	
S80(-06)	2005	AW50/51AW D	DABM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	DABM	Read code	
S80(-06)	2005	AW50/51AW D	DABM	Clear code	
S80(-06)	2005	AW50/51AW D	DABM	Data stream	
S80(-06)	2005	AW50/51AW D	PAC	Sys. Info.	
S80(-06)	2005	AW50/51AW D	PAC	Read code	
S80(-06)	2005	AW50/51AW D	PAC	Clear code	
S80(-06)	2005	AW50/51AW D	PAC	Data stream	
S80(-06)	2005	AW50/51AW D	TRM	Sys. Info.	
S80(-06)	2005	AW50/51AW D	TRM	Read code	
S80(-06)	2005	AW50/51AW D	TRM	Clear code	
S80(-06)	2005	AW50/51AW D	TRM	Data stream	
S80(-06)	2006	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S80(-06)	2006	B5244S4	ECM	Sys. Info.	
S80(-06)	2006	B5244S4	ECM	Read code	
S80(-06)	2006	B5244S4	ECM	Clear code	
S80(-06)	2006	B5244S4	ECM	Data stream	
S80(-06)	2006	B5244S4	ECM	Actuation	
S80(-06)	2006	B5244S4	ECM	Special functions	Resetting the adaptation values
S80(-06)	2006	B5244S5	ECM	Sys. Info.	
S80(-06)	2006	B5244S5	ECM	Read code	
S80(-06)	2006	B5244S5	ECM	Clear code	
S80(-06)	2006	B5244S5	ECM	Data stream	
S80(-06)	2006	B5244S5	ECM	Actuation	
S80(-06)	2006	B5244S5	ECM	Special functions	Resetting the adaptation values
S80(-06)	2006	B5244S7	ECM	Sys. Info.	
S80(-06)	2006	B5244S7	ECM	Read code	
S80(-06)	2006	B5244S7	ECM	Clear code	
S80(-06)	2006	B5244S7	ECM	Data stream	
S80(-06)	2006	B5244S7	ECM	Actuation	
S80(-06)	2006	B4204S3	ECM	Sys. Info.	
S80(-06)	2006	B4204S3	ECM	Read code	
S80(-06)	2006	B4204S3	ECM	Clear code	
S80(-06)	2006	B4204S3	ECM	Data stream	
S80(-06)	2006	B4204S3	ECM	Actuation	
S80(-06)	2006	B5254T2	ECM	Sys. Info.	
S80(-06)	2006	B5254T2	ECM	Read code	

model	year	type	system	function	subfunction	
S80(-06)		2006	B5254T2	ECM	Clear code	
S80(-06)		2006	B5254T2	ECM	Data stream	
S80(-06)		2006	B5254T2	ECM	Actuation	
S80(-06)		2006	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2006	B5254T3	ECM	Sys. Info.	
S80(-06)		2006	B5254T3	ECM	Read code	
S80(-06)		2006	B5254T3	ECM	Clear code	
S80(-06)		2006	B5254T3	ECM	Data stream	
S80(-06)		2006	B5254T3	ECM	Actuation	
S80(-06)		2006	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2006	B5254T7	ECM	Sys. Info.	
S80(-06)		2006	B5254T7	ECM	Read code	
S80(-06)		2006	B5254T7	ECM	Clear code	
S80(-06)		2006	B5254T7	ECM	Data stream	
S80(-06)		2006	B5254T7	ECM	Actuation	
S80(-06)		2006	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2006	B5204T5	ECM	Sys. Info.	
S80(-06)		2006	B5204T5	ECM	Read code	
S80(-06)		2006	B5204T5	ECM	Clear code	
S80(-06)		2006	B5204T5	ECM	Data stream	
S80(-06)		2006	B5204T5	ECM	Actuation	
S80(-06)		2006	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2006	B6294T	ECM	Sys. Info.	
S80(-06)		2006	B6294T	ECM	Read code	
S80(-06)		2006	B6294T	ECM	Clear code	
S80(-06)		2006	B6294T	ECM	Data stream	
S80(-06)		2006	B6294T	ECM	Actuation	
S80(-06)		2006	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2006	B4164S3	ECM	Sys. Info.	
S80(-06)		2006	B4164S3	ECM	Read code	
S80(-06)		2006	B4164S3	ECM	Clear code	
S80(-06)		2006	B4164S3	ECM	Data stream	
S80(-06)		2006	B4164S3	ECM	Actuation	
S80(-06)		2006	B4164S3	ECM	Special functions	Resetting the adaptation values
S80(-06)		2006	B5244T5	ECM	Sys. Info.	
S80(-06)		2006	B5244T5	ECM	Read code	
S80(-06)		2006	B5244T5	ECM	Clear code	
S80(-06)		2006	B5244T5	ECM	Data stream	
S80(-06)		2006	B5244T5	ECM	Actuation	
S80(-06)		2006	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S80(-06)		2006	B4184S11	ECM	Sys. Info.	
S80(-06)		2006	B4184S11	ECM	Read code	
S80(-06)		2006	B4184S11	ECM	Clear code	
S80(-06)		2006	B4184S11	ECM	Data stream	
S80(-06)		2006	B4184S11	ECM	Actuation	
S80(-06)		2006	B4184S11	ECM	Special functions	Resetting the adaptation values
S80(-06)		2006	D5244T	Diesel Eng	Sys. Info.	
S80(-06)		2006	D5244T	Diesel Eng	Read code	
S80(-06)		2006	D5244T	Diesel Eng	Clear code	
S80(-06)		2006	D5244T	Diesel Eng	Data stream	
S80(-06)		2006	D5244T	Diesel Eng	Actuation	
S80(-06)		2006	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S80(-06)		2006	D5244T4	Diesel Eng	Sys. Info.	
S80(-06)		2006	D5244T4	Diesel Eng	Read code	
S80(-06)		2006	D5244T4	Diesel Eng	Clear code	
S80(-06)		2006	D5244T4	Diesel Eng	Data stream	
S80(-06)		2006	D5244T4	Diesel Eng	Actuation	
S80(-06)		2006	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S80(-06)		2006	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S80(-06)		2006	D5244T4	Diesel Eng	Special functions	Resetting counter oil
S80(-06)		2006	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S80(-06)		2006	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S80(-06)		2006	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S80(-06)		2006	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S80(-06)		2006	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S80(-06)		2006	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S80(-06)		2006	D5244T5	Diesel Eng	Sys. Info.	
S80(-06)		2006	D5244T5	Diesel Eng	Read code	
S80(-06)		2006	D5244T5	Diesel Eng	Clear code	
S80(-06)		2006	D5244T5	Diesel Eng	Data stream	
S80(-06)		2006	D5244T5	Diesel Eng	Actuation	
S80(-06)		2006	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S80(-06)		2006	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S80(-06)		2006	D5244T5	Diesel Eng	Special functions	Resetting counter oil
S80(-06)		2006	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S80(-06)		2006	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S80(-06)		2006	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S80(-06)		2006	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor

model	year	type	system	function	subfunction
S80(-06)	2006	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S80(-06)	2006	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S80(-06)	2006	D5244T8	Diesel Eng	Sys. Info.	
S80(-06)	2006	D5244T8	Diesel Eng	Read code	
S80(-06)	2006	D5244T8	Diesel Eng	Clear code	
S80(-06)	2006	D5244T8	Diesel Eng	Data stream	
S80(-06)	2006	D5244T8	Diesel Eng	Actuation	
S80(-06)	2006	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S80(-06)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S80(-06)	2006	D5244T8	Diesel Eng	Special functions	Resetting counter oil
S80(-06)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S80(-06)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S80(-06)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S80(-06)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S80(-06)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S80(-06)	2006	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S80(-06)	2006	D4164T	Diesel Eng	Sys. Info.	
S80(-06)	2006	D4164T	Diesel Eng	Read code	
S80(-06)	2006	D4164T	Diesel Eng	Clear code	
S80(-06)	2006	D4164T	Diesel Eng	Data stream	
S80(-06)	2006	D4164T	Diesel Eng	Actuation	
S80(-06)	2006	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S80(-06)	2006	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(-06)	2006	D4164T	Diesel Eng	Special functions	Combustion of soot particles
S80(-06)	2006	D4204T	Diesel Eng	Sys. Info.	
S80(-06)	2006	D4204T	Diesel Eng	Read code	
S80(-06)	2006	D4204T	Diesel Eng	Clear code	
S80(-06)	2006	D4204T	Diesel Eng	Data stream	
S80(-06)	2006	D4204T	Diesel Eng	Actuation	
S80(-06)	2006	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S80(-06)	2006	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S80(-06)	2006	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S80(-06)	2006	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(-06)	2006	D4204T	Diesel Eng	Special functions	Combustion of soot particles
S80(-06)	2006	AW55-50/51SN	TCM	Sys. Info.	
S80(-06)	2006	AW55-50/51SN	TCM	Read code	
S80(-06)	2006	AW55-50/51SN	TCM	Clear code	
S80(-06)	2006	AW55-50/51SN	TCM	Data stream	
S80(-06)	2006	AW55-50/51SN	TCM	Actuation	
S80(-06)	2006	AW55-50/51SN	TCM	Freeze frame	
S80(-06)	2006	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S80(-06)	2006	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	2006	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S80(-06)	2006	AW55-50/51SN	TCM	Special functions	Control module adaptation
S80(-06)	2006	4T65AWD	TCM	Sys. Info.	
S80(-06)	2006	4T65AWD	TCM	Read code	
S80(-06)	2006	4T65AWD	TCM	Clear code	
S80(-06)	2006	4T65AWD	TCM	Data stream	
S80(-06)	2006	4T65AWD	TCM	Actuation	
S80(-06)	2006	4T65AWD	TCM	Special functions	Reset adaptation to zero
S80(-06)	2006	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	2006	TF-80SC	TCM	Sys. Info.	
S80(-06)	2006	TF-80SC	TCM	Read code	
S80(-06)	2006	TF-80SC	TCM	Clear code	
S80(-06)	2006	TF-80SC	TCM	Data stream	
S80(-06)	2006	TF-80SC	TCM	Actuation	
S80(-06)	2006	TF-80SC	TCM	Special functions	Reset adaptation to zero
S80(-06)	2006	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	2006	TF-80SC	TCM	Special functions	Calibration of position sensor
S80(-06)	2006	AW50/51AW D	TCM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	TCM	Read code	
S80(-06)	2006	AW50/51AW D	TCM	Clear code	
S80(-06)	2006	AW50/51AW D	TCM	Data stream	

model	year	type	system	function	subfunction
S80(-06)	2006	AW50/51AW D	TCM	Actuation	
S80(-06)	2006	AW50/51AW D	TCM	Freeze frame	
S80(-06)	2006	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S80(-06)	2006	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S80(-06)	2006	AW50/51AW D	ABS	Sys. Info.	
S80(-06)	2006	AW50/51AW D	ABS	Read code	
S80(-06)	2006	AW50/51AW D	ABS	Clear code	
S80(-06)	2006	AW50/51AW D	ABS	Data stream	
S80(-06)	2006	AW50/51AW D	ABS	Actuation	
S80(-06)	2006	AW50/51AW D	ABS	Freeze frame	
S80(-06)	2006	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S80(-06)	2006	AW50/51AW D	ABS	Special functions	Reading off the configuration
S80(-06)	2006	AW50/51AW D	ABS	Special functions	Calibration
S80(-06)	2006	AW50/51AW D	SRS	Sys. Info.	
S80(-06)	2006	AW50/51AW D	SRS	Read code	
S80(-06)	2006	AW50/51AW D	SRS	Clear code	
S80(-06)	2006	AW50/51AW D	SRS	Data stream	
S80(-06)	2006	AW50/51AW D	SRS	Freeze frame	
S80(-06)	2006	AW50/51AW D	CEM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	CEM	Read code	
S80(-06)	2006	AW50/51AW D	CEM	Clear code	
S80(-06)	2006	AW50/51AW D	CEM	Data stream	
S80(-06)	2006	AW50/51AW D	CEM	Actuation	
S80(-06)	2006	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S80(-06)	2006	AW50/51AW D	CEM	Special functions	Programming control module
S80(-06)	2006	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S80(-06)	2006	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S80(-06)	2006	AW50/51AW D	CEM	Special functions	Resetting crash mode
S80(-06)	2006	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S80(-06)	2006	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S80(-06)	2006	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S80(-06)	2006	AW50/51AW D	CEM	Special functions	Ignition switch key position
S80(-06)	2006	AW50/51AW D	UEM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	UEM	Read code	
S80(-06)	2006	AW50/51AW D	UEM	Clear code	
S80(-06)	2006	AW50/51AW D	UEM	Data stream	
S80(-06)	2006	AW50/51AW D	UEM	Actuation	
S80(-06)	2006	AW50/51AW D	UEM	Special functions	Configuration of the siren
S80(-06)	2006	AW50/51AW D	UEM	Special functions	Programming the control unit

model	year	type	system	function	subfunction
S80(-06)	2006	AW50/51AW D	UEM	Special functions	Reading the programmed values
S80(-06)	2006	AW50/51AW D	REM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	REM	Read code	
S80(-06)	2006	AW50/51AW D	REM	Clear code	
S80(-06)	2006	AW50/51AW D	REM	Data stream	
S80(-06)	2006	AW50/51AW D	REM	Actuation	
S80(-06)	2006	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
S80(-06)	2006	AW50/51AW D	DIM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	DIM	Read code	
S80(-06)	2006	AW50/51AW D	DIM	Clear code	
S80(-06)	2006	AW50/51AW D	DIM	Data stream	
S80(-06)	2006	AW50/51AW D	DIM	Actuation	
S80(-06)	2006	AW50/51AW D	DIM	Freeze frame	
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Display of DSTC message
S80(-06)	2006	AW50/51AW D	DIM	Special functions	Read out programmed values
S80(-06)	2006	AW50/51AW D	PDM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	PDM	Read code	
S80(-06)	2006	AW50/51AW D	PDM	Clear code	
S80(-06)	2006	AW50/51AW D	PDM	Data stream	
S80(-06)	2006	AW50/51AW D	PDM	Actuation	
S80(-06)	2006	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S80(-06)	2006	AW50/51AW D	PSM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	PSM	Read code	
S80(-06)	2006	AW50/51AW D	PSM	Clear code	
S80(-06)	2006	AW50/51AW D	PSM	Data stream	
S80(-06)	2006	AW50/51AW D	PSM	Actuation	

model	year	type	system	function	subfunction
S80(-06)	2006	AW50/51AW D	DDM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	DDM	Read code	
S80(-06)	2006	AW50/51AW D	DDM	Clear code	
S80(-06)	2006	AW50/51AW D	DDM	Data stream	
S80(-06)	2006	AW50/51AW D	DDM	Actuation	
S80(-06)	2006	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S80(-06)	2006	AW50/51AW D	CCM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	CCM	Read code	
S80(-06)	2006	AW50/51AW D	CCM	Clear code	
S80(-06)	2006	AW50/51AW D	CCM	Data stream	
S80(-06)	2006	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S80(-06)	2006	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S80(-06)	2006	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(-06)	2006	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(-06)	2006	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S80(-06)	2006	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(-06)	2006	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S80(-06)	2006	AW50/51AW D	PHM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	PHM	Read code	
S80(-06)	2006	AW50/51AW D	PHM	Clear code	
S80(-06)	2006	AW50/51AW D	PHM	Data stream	
S80(-06)	2006	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S80(-06)	2006	AW50/51AW D	AUM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	AUM	Read code	
S80(-06)	2006	AW50/51AW D	AUM	Clear code	
S80(-06)	2006	AW50/51AW D	AUM	Data stream	
S80(-06)	2006	AW50/51AW D	DEM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	DEM	Read code	
S80(-06)	2006	AW50/51AW D	DEM	Clear code	
S80(-06)	2006	AW50/51AW D	DEM	Data stream	
S80(-06)	2006	AW50/51AW D	RTI	Sys. Info.	
S80(-06)	2006	AW50/51AW D	RTI	Read code	
S80(-06)	2006	AW50/51AW D	RTI	Clear code	
S80(-06)	2006	AW50/51AW D	AEM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	AEM	Read code	
S80(-06)	2006	AW50/51AW D	AEM	Clear code	
S80(-06)	2006	AW50/51AW D	AEM	Data stream	
S80(-06)	2006	AW50/51AW D	AEM	Actuation	
S80(-06)	2006	AW50/51AW D	CPM	Sys. Info.	

model	year	type	system	function	subfunction
S80(-06)	2006	AW50/51AW D	CPM	Data stream	
S80(-06)	2006	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
S80(-06)	2006	AW50/51AW D	HCM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	HCM	Read code	
S80(-06)	2006	AW50/51AW D	HCM	Clear code	
S80(-06)	2006	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S80(-06)	2006	AW50/51AW D	KVM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	KVM	Read code	
S80(-06)	2006	AW50/51AW D	KVM	Clear code	
S80(-06)	2006	AW50/51AW D	KVM	Data stream	
S80(-06)	2006	AW50/51AW D	KVM	Actuation	
S80(-06)	2006	AW50/51AW D	RDAR	Sys. Info.	
S80(-06)	2006	AW50/51AW D	RDAR	Read code	
S80(-06)	2006	AW50/51AW D	RDAR	Clear code	
S80(-06)	2006	AW50/51AW D	RDAR	Data stream	
S80(-06)	2006	AW50/51AW D	SUB	Sys. Info.	
S80(-06)	2006	AW50/51AW D	SUB	Read code	
S80(-06)	2006	AW50/51AW D	SUB	Clear code	
S80(-06)	2006	AW50/51AW D	SUB	Data stream	
S80(-06)	2006	AW50/51AW D	CVM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	CVM	Read code	
S80(-06)	2006	AW50/51AW D	CVM	Clear code	
S80(-06)	2006	AW50/51AW D	CVM	Data stream	
S80(-06)	2006	AW50/51AW D	DABM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	DABM	Read code	
S80(-06)	2006	AW50/51AW D	DABM	Clear code	
S80(-06)	2006	AW50/51AW D	DABM	Data stream	
S80(-06)	2006	AW50/51AW D	PAC	Sys. Info.	
S80(-06)	2006	AW50/51AW D	PAC	Read code	
S80(-06)	2006	AW50/51AW D	PAC	Clear code	
S80(-06)	2006	AW50/51AW D	PAC	Data stream	
S80(-06)	2006	AW50/51AW D	TRM	Sys. Info.	
S80(-06)	2006	AW50/51AW D	TRM	Read code	
S80(-06)	2006	AW50/51AW D	TRM	Clear code	
S80(-06)	2006	AW50/51AW D	TRM	Data stream	
S80(07-)	2006	AW50/51AW D	ShortTest	Special functions	search all system and DTC(s) of vehicle
S80(07-)	2007	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S80(07-)	2007	B5254T6	ECM	Sys. Info.	
S80(07-)	2007	B5254T6	ECM	Read code	
S80(07-)	2007	B5254T6	ECM	Clear code	
S80(07-)	2007	B5254T6	ECM	Data stream	



model	year	type	system	function	subfunction
S80(07-)	2007	B5254T6	ECM	Actuation	
S80(07-)	2007	B5254T6	ECM	Special functions	Adaptation of the throttle unit
S80(07-)	2007	B5254T10	ECM	Sys. Info.	
S80(07-)	2007	B5254T10	ECM	Read code	
S80(07-)	2007	B5254T10	ECM	Clear code	
S80(07-)	2007	B5254T10	ECM	Data stream	
S80(07-)	2007	B5254T10	ECM	Actuation	
S80(07-)	2007	B5254T10	ECM	Special functions	Adaptation of the throttle unit
S80(07-)	2007	B8444S	ECM	Sys. Info.	
S80(07-)	2007	B8444S	ECM	Read code	
S80(07-)	2007	B8444S	ECM	Clear code	
S80(07-)	2007	B8444S	ECM	Data stream	
S80(07-)	2007	B8444S	ECM	Actuation	
S80(07-)	2007	B8444S	ECM	Freeze frame	
S80(07-)	2007	B8444S	ECM	Special functions	Resetting the adaptation values
S80(07-)	2007	B6304T2	ECM	Sys. Info.	
S80(07-)	2007	B6304T2	ECM	Read code	
S80(07-)	2007	B6304T2	ECM	Clear code	
S80(07-)	2007	B6304T2	ECM	Data stream	
S80(07-)	2007	B6304T2	ECM	Actuation	
S80(07-)	2007	B6304T2	ECM	Special functions	Resetting the adaptation values
S80(07-)	2007	B6324S	ECM	Sys. Info.	
S80(07-)	2007	B6324S	ECM	Read code	
S80(07-)	2007	B6324S	ECM	Clear code	
S80(07-)	2007	B6324S	ECM	Data stream	
S80(07-)	2007	B6324S	ECM	Actuation	
S80(07-)	2007	B6324S	ECM	Special functions	Resetting the adaptation values
S80(07-)	2007	B6324S2	ECM	Sys. Info.	
S80(07-)	2007	B6324S2	ECM	Read code	
S80(07-)	2007	B6324S2	ECM	Clear code	
S80(07-)	2007	B6324S2	ECM	Data stream	
S80(07-)	2007	B6324S2	ECM	Actuation	
S80(07-)	2007	B6324S2	ECM	Special functions	Resetting the adaptation values
S80(07-)	2007	D5244T5	Diesel Eng	Sys. Info.	
S80(07-)	2007	D5244T5	Diesel Eng	Read code	
S80(07-)	2007	D5244T5	Diesel Eng	Clear code	
S80(07-)	2007	D5244T5	Diesel Eng	Data stream	
S80(07-)	2007	D5244T5	Diesel Eng	Actuation	
S80(07-)	2007	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S80(07-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S80(07-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S80(07-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S80(07-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S80(07-)	2007	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S80(07-)	2007	D5244T16	Diesel Eng	Sys. Info.	
S80(07-)	2007	D5244T16	Diesel Eng	Read code	
S80(07-)	2007	D5244T16	Diesel Eng	Clear code	
S80(07-)	2007	D5244T16	Diesel Eng	Data stream	
S80(07-)	2007	D5244T16	Diesel Eng	Actuation	
S80(07-)	2007	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2007	D5244T16	Diesel Eng	Special functions	Resetting adaptation
S80(07-)	2007	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2007	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(07-)	2007	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
S80(07-)	2007	TF-80SC	TCM	Sys. Info.	
S80(07-)	2007	TF-80SC	TCM	Read code	
S80(07-)	2007	TF-80SC	TCM	Clear code	
S80(07-)	2007	TF-80SC	TCM	Data stream	
S80(07-)	2007	TF-80SC	TCM	Actuation	
S80(07-)	2007	TF-80SC	TCM	Freeze frame	
S80(07-)	2007	TF-80SC	TCM	Special functions	Resetting the adaptation
S80(07-)	2007	TF-80SC	TCM	Special functions	Calibration of position sensor
S80(07-)	2007	TF-80SC	TCM	Special functions	Resetting the counter for Gearbox oil Change
S80(07-)	2007	TF-80SC	TCM	Special functions	Activating gear indication
S80(07-)	2007	TF-80SC	TCM	Special functions	Control module adaptation
S80(07-)	2007	TF-80SC AWD	TCM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	TCM	Read code	
S80(07-)	2007	TF-80SC AWD	TCM	Clear code	
S80(07-)	2007	TF-80SC AWD	TCM	Data stream	
S80(07-)	2007	TF-80SC AWD	TCM	Actuation	
S80(07-)	2007	TF-80SC AWD	TCM	Freeze frame	
S80(07-)	2007	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
S80(07-)	2007	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
S80(07-)	2007	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
S80(07-)	2007	TF-80SC AWD	TCM	Special functions	Activating gear indication
S80(07-)	2007	TF-80SC AWD	TCM	Special functions	Control module adaptation

model	year	type	system	function	subfunction
S80(07-)	2007	TF-80SC AWD	ABS	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	ABS	Read code	
S80(07-)	2007	TF-80SC AWD	ABS	Clear code	
S80(07-)	2007	TF-80SC AWD	ABS	Data stream	
S80(07-)	2007	TF-80SC AWD	ABS	Actuation	
S80(07-)	2007	TF-80SC AWD	ABS	Freeze frame	
S80(07-)	2007	TF-80SC AWD	ABS	Special functions	Calibration
S80(07-)	2007	TF-80SC AWD	SRS	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	SRS	Read code	
S80(07-)	2007	TF-80SC AWD	SRS	Clear code	
S80(07-)	2007	TF-80SC AWD	SRS	Data stream	
S80(07-)	2007	TF-80SC AWD	SRS	Freeze frame	
S80(07-)	2007	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
S80(07-)	2007	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
S80(07-)	2007	TF-80SC AWD	CEM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	CEM	Read code	
S80(07-)	2007	TF-80SC AWD	CEM	Clear code	
S80(07-)	2007	TF-80SC AWD	CEM	Data stream	
S80(07-)	2007	TF-80SC AWD	CEM	Actuation	
S80(07-)	2007	TF-80SC AWD	DIM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	DIM	Read code	
S80(07-)	2007	TF-80SC AWD	DIM	Clear code	
S80(07-)	2007	TF-80SC AWD	DIM	Data stream	
S80(07-)	2007	TF-80SC AWD	DIM	Freeze frame	
S80(07-)	2007	TF-80SC AWD	DIM	Special functions	Reseting the service reminder indicator(SRI)
S80(07-)	2007	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
S80(07-)	2007	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
S80(07-)	2007	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
S80(07-)	2007	TF-80SC AWD	DIM	Special functions	Programming of clock
S80(07-)	2007	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(07-)	2007	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
S80(07-)	2007	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
S80(07-)	2007	TF-80SC AWD	PDM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	PDM	Read code	
S80(07-)	2007	TF-80SC AWD	PDM	Clear code	
S80(07-)	2007	TF-80SC AWD	PDM	Data stream	
S80(07-)	2007	TF-80SC AWD	PDM	Actuation	
S80(07-)	2007	TF-80SC AWD	PSM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	PSM	Read code	
S80(07-)	2007	TF-80SC AWD	PSM	Clear code	
S80(07-)	2007	TF-80SC AWD	PSM	Data stream	
S80(07-)	2007	TF-80SC AWD	PSM	Actuation	
S80(07-)	2007	TF-80SC AWD	DDM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	DDM	Read code	
S80(07-)	2007	TF-80SC AWD	DDM	Clear code	
S80(07-)	2007	TF-80SC AWD	DDM	Data stream	
S80(07-)	2007	TF-80SC AWD	CCM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	CCM	Read code	
S80(07-)	2007	TF-80SC AWD	CCM	Clear code	
S80(07-)	2007	TF-80SC AWD	CCM	Data stream	
S80(07-)	2007	TF-80SC AWD	CCM	Actuation	
S80(07-)	2007	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
S80(07-)	2007	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(07-)	2007	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(07-)	2007	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
S80(07-)	2007	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(07-)	2007	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module (CCM)
S80(07-)	2007	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
S80(07-)	2007	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
S80(07-)	2007	TF-80SC AWD	AUD	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	AUD	Read code	
S80(07-)	2007	TF-80SC AWD	AUD	Clear code	
S80(07-)	2007	TF-80SC AWD	DEM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	DEM	Read code	
S80(07-)	2007	TF-80SC AWD	DEM	Clear code	
S80(07-)	2007	TF-80SC AWD	DEM	Data stream	
S80(07-)	2007	TF-80SC AWD	DEM	Actuation	
S80(07-)	2007	TF-80SC AWD	ICM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	ICM	Read code	
S80(07-)	2007	TF-80SC AWD	ICM	Clear code	
S80(07-)	2007	TF-80SC AWD	ICM	Data stream	
S80(07-)	2007	TF-80SC AWD	ICM	Actuation	
S80(07-)	2007	TF-80SC AWD	SAS	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	SAS	Read code	
S80(07-)	2007	TF-80SC AWD	SAS	Clear code	

model	year	type	system	function	subfunction
S80(07-)	2007	TF-80SC AWD	SAS	Data stream	
S80(07-)	2007	TF-80SC AWD	MMM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	MMM	Read code	
S80(07-)	2007	TF-80SC AWD	MMM	Clear code	
S80(07-)	2007	TF-80SC AWD	PAM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	PAM	Read code	
S80(07-)	2007	TF-80SC AWD	PAM	Clear code	
S80(07-)	2007	TF-80SC AWD	PAM	Data stream	
S80(07-)	2007	TF-80SC AWD	IAM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	IAM	Read code	
S80(07-)	2007	TF-80SC AWD	IAM	Clear code	
S80(07-)	2007	TF-80SC AWD	BPM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	BPM	Read code	
S80(07-)	2007	TF-80SC AWD	BPM	Clear code	
S80(07-)	2007	TF-80SC AWD	BPM	Data stream	
S80(07-)	2007	TF-80SC AWD	SUM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	SUM	Read code	
S80(07-)	2007	TF-80SC AWD	SUM	Clear code	
S80(07-)	2007	TF-80SC AWD	SUM	Data stream	
S80(07-)	2007	TF-80SC AWD	PBM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	PBM	Read code	
S80(07-)	2007	TF-80SC AWD	PBM	Clear code	
S80(07-)	2007	TF-80SC AWD	PBM	Data stream	
S80(07-)	2007	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
S80(07-)	2007	TF-80SC AWD	PBM	Special functions	Activation and service
S80(07-)	2007	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
S80(07-)	2007	TF-80SC AWD	CPM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	CPM	Read code	
S80(07-)	2007	TF-80SC AWD	CPM	Clear code	
S80(07-)	2007	TF-80SC AWD	CPM	Data stream	
S80(07-)	2007	TF-80SC AWD	CPM	Actuation	
S80(07-)	2007	TF-80SC AWD	HCM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	HCM	Read code	
S80(07-)	2007	TF-80SC AWD	HCM	Clear code	
S80(07-)	2007	TF-80SC AWD	HCM	Data stream	
S80(07-)	2007	TF-80SC AWD	KVM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	KVM	Read code	
S80(07-)	2007	TF-80SC AWD	KVM	Clear code	
S80(07-)	2007	TF-80SC AWD	KVM	Data stream	
S80(07-)	2007	TF-80SC AWD	HLDF	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	HLDF	Read code	
S80(07-)	2007	TF-80SC AWD	HLDF	Clear code	
S80(07-)	2007	TF-80SC AWD	HLDF	Data stream	
S80(07-)	2007	TF-80SC AWD	POT	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	POT	Read code	
S80(07-)	2007	TF-80SC AWD	POT	Clear code	
S80(07-)	2007	TF-80SC AWD	POT	Data stream	
S80(07-)	2007	TF-80SC AWD	AUU	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	AUU	Read code	
S80(07-)	2007	TF-80SC AWD	AUU	Clear code	
S80(07-)	2007	TF-80SC AWD	AUU	Data stream	
S80(07-)	2007	TF-80SC AWD	FSM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	FSM	Read code	
S80(07-)	2007	TF-80SC AWD	FSM	Clear code	
S80(07-)	2007	TF-80SC AWD	FSM	Data stream	
S80(07-)	2007	TF-80SC AWD	RDAR	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	RDAR	Read code	
S80(07-)	2007	TF-80SC AWD	RDAR	Clear code	
S80(07-)	2007	TF-80SC AWD	RDAR	Data stream	
S80(07-)	2007	TF-80SC AWD	SUB	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	SUB	Read code	
S80(07-)	2007	TF-80SC AWD	SUB	Clear code	
S80(07-)	2007	TF-80SC AWD	SUB	Data stream	
S80(07-)	2007	TF-80SC AWD	CVM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	CVM	Read code	
S80(07-)	2007	TF-80SC AWD	CVM	Clear code	
S80(07-)	2007	TF-80SC AWD	CVM	Data stream	
S80(07-)	2007	TF-80SC AWD	DABM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	DABM	Read code	
S80(07-)	2007	TF-80SC AWD	DABM	Clear code	
S80(07-)	2007	TF-80SC AWD	DABM	Data stream	
S80(07-)	2007	TF-80SC AWD	PAC	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	PAC	Read code	
S80(07-)	2007	TF-80SC AWD	PAC	Clear code	
S80(07-)	2007	TF-80SC AWD	PAC	Data stream	
S80(07-)	2007	TF-80SC AWD	TRM	Sys. Info.	
S80(07-)	2007	TF-80SC AWD	TRM	Read code	
S80(07-)	2007	TF-80SC AWD	TRM	Clear code	

model	year	type	system	function	subfunction
S80(07-)	2007	TF-80SC AWD	TRM	Data stream	
S80(07-)	2008	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S80(07-)	2008	B5254T6	ECM	Sys. Info.	
S80(07-)	2008	B5254T6	ECM	Read code	
S80(07-)	2008	B5254T6	ECM	Clear code	
S80(07-)	2008	B5254T6	ECM	Data stream	
S80(07-)	2008	B5254T6	ECM	Actuation	
S80(07-)	2008	B5254T6	ECM	Special functions	Adaptation of the throttle unit
S80(07-)	2008	B5254T10	ECM	Sys. Info.	
S80(07-)	2008	B5254T10	ECM	Read code	
S80(07-)	2008	B5254T10	ECM	Clear code	
S80(07-)	2008	B5254T10	ECM	Data stream	
S80(07-)	2008	B5254T10	ECM	Actuation	
S80(07-)	2008	B5254T10	ECM	Special functions	Adaptation of the throttle unit
S80(07-)	2008	B8444S	ECM	Sys. Info.	
S80(07-)	2008	B8444S	ECM	Read code	
S80(07-)	2008	B8444S	ECM	Clear code	
S80(07-)	2008	B8444S	ECM	Data stream	
S80(07-)	2008	B8444S	ECM	Actuation	
S80(07-)	2008	B8444S	ECM	Freeze frame	
S80(07-)	2008	B8444S	ECM	Special functions	Resetting the adaptation values
S80(07-)	2008	B6304T2	ECM	Sys. Info.	
S80(07-)	2008	B6304T2	ECM	Read code	
S80(07-)	2008	B6304T2	ECM	Clear code	
S80(07-)	2008	B6304T2	ECM	Data stream	
S80(07-)	2008	B6304T2	ECM	Actuation	
S80(07-)	2008	B6304T2	ECM	Special functions	Resetting the adaptation values
S80(07-)	2008	B6324S	ECM	Sys. Info.	
S80(07-)	2008	B6324S	ECM	Read code	
S80(07-)	2008	B6324S	ECM	Clear code	
S80(07-)	2008	B6324S	ECM	Data stream	
S80(07-)	2008	B6324S	ECM	Actuation	
S80(07-)	2008	B6324S	ECM	Special functions	Resetting the adaptation values
S80(07-)	2008	B6324S2	ECM	Sys. Info.	
S80(07-)	2008	B6324S2	ECM	Read code	
S80(07-)	2008	B6324S2	ECM	Clear code	
S80(07-)	2008	B6324S2	ECM	Data stream	
S80(07-)	2008	B6324S2	ECM	Actuation	
S80(07-)	2008	B6324S2	ECM	Special functions	Resetting the adaptation values
S80(07-)	2008	D5244T5	Diesel Eng	Sys. Info.	
S80(07-)	2008	D5244T5	Diesel Eng	Read code	
S80(07-)	2008	D5244T5	Diesel Eng	Clear code	
S80(07-)	2008	D5244T5	Diesel Eng	Data stream	
S80(07-)	2008	D5244T5	Diesel Eng	Actuation	
S80(07-)	2008	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S80(07-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S80(07-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S80(07-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S80(07-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S80(07-)	2008	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S80(07-)	2008	D5244T16	Diesel Eng	Sys. Info.	
S80(07-)	2008	D5244T16	Diesel Eng	Read code	
S80(07-)	2008	D5244T16	Diesel Eng	Clear code	
S80(07-)	2008	D5244T16	Diesel Eng	Data stream	
S80(07-)	2008	D5244T16	Diesel Eng	Actuation	
S80(07-)	2008	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2008	D5244T16	Diesel Eng	Special functions	Resetting adaptation
S80(07-)	2008	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2008	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(07-)	2008	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
S80(07-)	2008	TF-80SC	TCM	Sys. Info.	
S80(07-)	2008	TF-80SC	TCM	Read code	
S80(07-)	2008	TF-80SC	TCM	Clear code	
S80(07-)	2008	TF-80SC	TCM	Data stream	
S80(07-)	2008	TF-80SC	TCM	Actuation	
S80(07-)	2008	TF-80SC	TCM	Freeze frame	
S80(07-)	2008	TF-80SC	TCM	Special functions	Resetting the adaptation
S80(07-)	2008	TF-80SC	TCM	Special functions	Calibration of position sensor
S80(07-)	2008	TF-80SC	TCM	Special functions	Resetting the counter for Gearbox oil Change
S80(07-)	2008	TF-80SC	TCM	Special functions	Activating gear indication
S80(07-)	2008	TF-80SC	TCM	Special functions	Control module adaptation
S80(07-)	2008	TF-80SC AWD	TCM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	TCM	Read code	
S80(07-)	2008	TF-80SC AWD	TCM	Clear code	
S80(07-)	2008	TF-80SC AWD	TCM	Data stream	

model	year	type	system	function	subfunction	
S80(07-)		2008	TF-80SC AWD	TCM	Actuation	
S80(07-)		2008	TF-80SC AWD	TCM	Freeze frame	
S80(07-)		2008	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
S80(07-)		2008	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
S80(07-)		2008	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
S80(07-)		2008	TF-80SC AWD	ABS	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	ABS	Read code	
S80(07-)		2008	TF-80SC AWD	ABS	Clear code	
S80(07-)		2008	TF-80SC AWD	ABS	Data stream	
S80(07-)		2008	TF-80SC AWD	ABS	Actuation	
S80(07-)		2008	TF-80SC AWD	ABS	Freeze frame	
S80(07-)		2008	TF-80SC AWD	ABS	Special functions	Calibration
S80(07-)		2008	TF-80SC AWD	SRS	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	SRS	Read code	
S80(07-)		2008	TF-80SC AWD	SRS	Clear code	
S80(07-)		2008	TF-80SC AWD	SRS	Data stream	
S80(07-)		2008	TF-80SC AWD	SRS	Freeze frame	
S80(07-)		2008	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
S80(07-)		2008	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
S80(07-)		2008	TF-80SC AWD	CEM	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	CEM	Read code	
S80(07-)		2008	TF-80SC AWD	CEM	Clear code	
S80(07-)		2008	TF-80SC AWD	CEM	Data stream	
S80(07-)		2008	TF-80SC AWD	CEM	Actuation	
S80(07-)		2008	TF-80SC AWD	DIM	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	DIM	Read code	
S80(07-)		2008	TF-80SC AWD	DIM	Clear code	
S80(07-)		2008	TF-80SC AWD	DIM	Data stream	
S80(07-)		2008	TF-80SC AWD	DIM	Freeze frame	
S80(07-)		2008	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI)
S80(07-)		2008	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
S80(07-)		2008	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
S80(07-)		2008	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
S80(07-)		2008	TF-80SC AWD	DIM	Special functions	Programming of clock
S80(07-)		2008	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(07-)		2008	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
S80(07-)		2008	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
S80(07-)		2008	TF-80SC AWD	PDM	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	PDM	Read code	
S80(07-)		2008	TF-80SC AWD	PDM	Clear code	
S80(07-)		2008	TF-80SC AWD	PDM	Data stream	
S80(07-)		2008	TF-80SC AWD	PDM	Actuation	
S80(07-)		2008	TF-80SC AWD	PSM	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	PSM	Read code	
S80(07-)		2008	TF-80SC AWD	PSM	Clear code	
S80(07-)		2008	TF-80SC AWD	PSM	Data stream	
S80(07-)		2008	TF-80SC AWD	PSM	Actuation	
S80(07-)		2008	TF-80SC AWD	DDM	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	DDM	Read code	
S80(07-)		2008	TF-80SC AWD	DDM	Clear code	
S80(07-)		2008	TF-80SC AWD	DDM	Data stream	
S80(07-)		2008	TF-80SC AWD	CCM	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	CCM	Read code	
S80(07-)		2008	TF-80SC AWD	CCM	Clear code	
S80(07-)		2008	TF-80SC AWD	CCM	Data stream	
S80(07-)		2008	TF-80SC AWD	CCM	Actuation	
S80(07-)		2008	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
S80(07-)		2008	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(07-)		2008	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(07-)		2008	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
S80(07-)		2008	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(07-)		2008	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module (CCM)
S80(07-)		2008	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
S80(07-)		2008	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
S80(07-)		2008	TF-80SC AWD	AUD	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	AUD	Read code	
S80(07-)		2008	TF-80SC AWD	AUD	Clear code	
S80(07-)		2008	TF-80SC AWD	DEM	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	DEM	Read code	
S80(07-)		2008	TF-80SC AWD	DEM	Clear code	
S80(07-)		2008	TF-80SC AWD	DEM	Data stream	
S80(07-)		2008	TF-80SC AWD	DEM	Actuation	
S80(07-)		2008	TF-80SC AWD	ICM	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	ICM	Read code	
S80(07-)		2008	TF-80SC AWD	ICM	Clear code	

model	year	type	system	function	subfunction
S80(07-)	2008	TF-80SC AWD	ICM	Data stream	
S80(07-)	2008	TF-80SC AWD	ICM	Actuation	
S80(07-)	2008	TF-80SC AWD	SAS	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	SAS	Read code	
S80(07-)	2008	TF-80SC AWD	SAS	Clear code	
S80(07-)	2008	TF-80SC AWD	SAS	Data stream	
S80(07-)	2008	TF-80SC AWD	MMM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	MMM	Read code	
S80(07-)	2008	TF-80SC AWD	MMM	Clear code	
S80(07-)	2008	TF-80SC AWD	PAM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	PAM	Read code	
S80(07-)	2008	TF-80SC AWD	PAM	Clear code	
S80(07-)	2008	TF-80SC AWD	PAM	Data stream	
S80(07-)	2008	TF-80SC AWD	IAM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	IAM	Read code	
S80(07-)	2008	TF-80SC AWD	IAM	Clear code	
S80(07-)	2008	TF-80SC AWD	BPM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	BPM	Read code	
S80(07-)	2008	TF-80SC AWD	BPM	Clear code	
S80(07-)	2008	TF-80SC AWD	BPM	Data stream	
S80(07-)	2008	TF-80SC AWD	SUM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	SUM	Read code	
S80(07-)	2008	TF-80SC AWD	SUM	Clear code	
S80(07-)	2008	TF-80SC AWD	SUM	Data stream	
S80(07-)	2008	TF-80SC AWD	PBM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	PBM	Read code	
S80(07-)	2008	TF-80SC AWD	PBM	Clear code	
S80(07-)	2008	TF-80SC AWD	PBM	Data stream	
S80(07-)	2008	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
S80(07-)	2008	TF-80SC AWD	PBM	Special functions	Activation and service
S80(07-)	2008	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
S80(07-)	2008	TF-80SC AWD	CPM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	CPM	Read code	
S80(07-)	2008	TF-80SC AWD	CPM	Clear code	
S80(07-)	2008	TF-80SC AWD	CPM	Data stream	
S80(07-)	2008	TF-80SC AWD	CPM	Actuation	
S80(07-)	2008	TF-80SC AWD	HCM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	HCM	Read code	
S80(07-)	2008	TF-80SC AWD	HCM	Clear code	
S80(07-)	2008	TF-80SC AWD	HCM	Data stream	
S80(07-)	2008	TF-80SC AWD	KVM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	KVM	Read code	
S80(07-)	2008	TF-80SC AWD	KVM	Clear code	
S80(07-)	2008	TF-80SC AWD	KVM	Data stream	
S80(07-)	2008	TF-80SC AWD	HLDF	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	HLDF	Read code	
S80(07-)	2008	TF-80SC AWD	HLDF	Clear code	
S80(07-)	2008	TF-80SC AWD	HLDF	Data stream	
S80(07-)	2008	TF-80SC AWD	POT	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	POT	Read code	
S80(07-)	2008	TF-80SC AWD	POT	Clear code	
S80(07-)	2008	TF-80SC AWD	POT	Data stream	
S80(07-)	2008	TF-80SC AWD	AUU	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	AUU	Read code	
S80(07-)	2008	TF-80SC AWD	AUU	Clear code	
S80(07-)	2008	TF-80SC AWD	AUU	Data stream	
S80(07-)	2008	TF-80SC AWD	FSM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	FSM	Read code	
S80(07-)	2008	TF-80SC AWD	FSM	Clear code	
S80(07-)	2008	TF-80SC AWD	FSM	Data stream	
S80(07-)	2008	TF-80SC AWD	RDAR	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	RDAR	Read code	
S80(07-)	2008	TF-80SC AWD	RDAR	Clear code	
S80(07-)	2008	TF-80SC AWD	RDAR	Data stream	
S80(07-)	2008	TF-80SC AWD	SUB	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	SUB	Read code	
S80(07-)	2008	TF-80SC AWD	SUB	Clear code	
S80(07-)	2008	TF-80SC AWD	SUB	Data stream	
S80(07-)	2008	TF-80SC AWD	CVM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	CVM	Read code	
S80(07-)	2008	TF-80SC AWD	CVM	Clear code	
S80(07-)	2008	TF-80SC AWD	CVM	Data stream	
S80(07-)	2008	TF-80SC AWD	DABM	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	DABM	Read code	
S80(07-)	2008	TF-80SC AWD	DABM	Clear code	
S80(07-)	2008	TF-80SC AWD	DABM	Data stream	
S80(07-)	2008	TF-80SC AWD	PAC	Sys. Info.	
S80(07-)	2008	TF-80SC AWD	PAC	Read code	

model	year	type	system	function	subfunction	
S80(07-)		2008	TF-80SC AWD	PAC	Clear code	
S80(07-)		2008	TF-80SC AWD	PAC	Data stream	
S80(07-)		2008	TF-80SC AWD	TRM	Sys. Info.	
S80(07-)		2008	TF-80SC AWD	TRM	Read code	
S80(07-)		2008	TF-80SC AWD	TRM	Clear code	
S80(07-)		2008	TF-80SC AWD	TRM	Data stream	
S80(07-)		2009	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S80(07-)		2009	B5254T6	ECM	Sys. Info.	
S80(07-)		2009	B5254T6	ECM	Read code	
S80(07-)		2009	B5254T6	ECM	Clear code	
S80(07-)		2009	B5254T6	ECM	Data stream	
S80(07-)		2009	B5254T6	ECM	Actuation	
S80(07-)		2009	B5254T6	ECM	Freeze frame	
S80(07-)		2009	B5254T6	ECM	Special functions	Adaptation of the throttle unit
S80(07-)		2009	B5254T10	ECM	Sys. Info.	
S80(07-)		2009	B5254T10	ECM	Read code	
S80(07-)		2009	B5254T10	ECM	Clear code	
S80(07-)		2009	B5254T10	ECM	Data stream	
S80(07-)		2009	B5254T10	ECM	Actuation	
S80(07-)		2009	B5254T10	ECM	Special functions	Adaptation of the throttle unit
S80(07-)		2009	B8444S	ECM	Sys. Info.	
S80(07-)		2009	B8444S	ECM	Read code	
S80(07-)		2009	B8444S	ECM	Clear code	
S80(07-)		2009	B8444S	ECM	Data stream	
S80(07-)		2009	B8444S	ECM	Actuation	
S80(07-)		2009	B8444S	ECM	Freeze frame	
S80(07-)		2009	B8444S	ECM	Special functions	Resetting the adaptation values
S80(07-)		2009	B6304T2	ECM	Sys. Info.	
S80(07-)		2009	B6304T2	ECM	Read code	
S80(07-)		2009	B6304T2	ECM	Clear code	
S80(07-)		2009	B6304T2	ECM	Data stream	
S80(07-)		2009	B6304T2	ECM	Actuation	
S80(07-)		2009	B6304T2	ECM	Special functions	Resetting the adaptation values
S80(07-)		2009	B6324S	ECM	Sys. Info.	
S80(07-)		2009	B6324S	ECM	Read code	
S80(07-)		2009	B6324S	ECM	Clear code	
S80(07-)		2009	B6324S	ECM	Data stream	
S80(07-)		2009	B6324S	ECM	Actuation	
S80(07-)		2009	B6324S	ECM	Special functions	Resetting the adaptation values
S80(07-)		2009	B6324S2	ECM	Sys. Info.	
S80(07-)		2009	B6324S2	ECM	Read code	
S80(07-)		2009	B6324S2	ECM	Clear code	
S80(07-)		2009	B6324S2	ECM	Data stream	
S80(07-)		2009	B6324S2	ECM	Actuation	
S80(07-)		2009	B6324S2	ECM	Special functions	Resetting the adaptation values
S80(07-)		2009	D5244T5	Diesel Eng	Sys. Info.	
S80(07-)		2009	D5244T5	Diesel Eng	Read code	
S80(07-)		2009	D5244T5	Diesel Eng	Clear code	
S80(07-)		2009	D5244T5	Diesel Eng	Data stream	
S80(07-)		2009	D5244T5	Diesel Eng	Actuation	
S80(07-)		2009	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)		2009	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S80(07-)		2009	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)		2009	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S80(07-)		2009	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S80(07-)		2009	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S80(07-)		2009	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S80(07-)		2009	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S80(07-)		2009	D5244T16	Diesel Eng	Sys. Info.	
S80(07-)		2009	D5244T16	Diesel Eng	Read code	
S80(07-)		2009	D5244T16	Diesel Eng	Clear code	
S80(07-)		2009	D5244T16	Diesel Eng	Data stream	
S80(07-)		2009	D5244T16	Diesel Eng	Actuation	
S80(07-)		2009	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)		2009	D5244T16	Diesel Eng	Special functions	Resetting adaptation
S80(07-)		2009	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)		2009	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(07-)		2009	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
S80(07-)		2009	TF-80SC	TCM	Sys. Info.	
S80(07-)		2009	TF-80SC	TCM	Read code	
S80(07-)		2009	TF-80SC	TCM	Clear code	
S80(07-)		2009	TF-80SC	TCM	Data stream	
S80(07-)		2009	TF-80SC	TCM	Actuation	
S80(07-)		2009	TF-80SC	TCM	Freeze frame	
S80(07-)		2009	TF-80SC	TCM	Special functions	Resetting the adaptation
S80(07-)		2009	TF-80SC	TCM	Special functions	Resetting the counter for Gearbox oil Change
S80(07-)		2009	TF-80SC	TCM	Special functions	Calibration of position sensor

model	year	type	system	function	subfunction
S80(07-)	2009	TF-80SC	TCM	Special functions	Activating gear indication
S80(07-)	2009	TF-80SC	TCM	Special functions	Control module adaptation
S80(07-)	2009	TF-80SC AWD	TCM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	TCM	Read code	
S80(07-)	2009	TF-80SC AWD	TCM	Clear code	
S80(07-)	2009	TF-80SC AWD	TCM	Data stream	
S80(07-)	2009	TF-80SC AWD	TCM	Actuation	
S80(07-)	2009	TF-80SC AWD	TCM	Freeze frame	
S80(07-)	2009	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
S80(07-)	2009	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
S80(07-)	2009	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
S80(07-)	2009	TF-80SC AWD	ABS	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	ABS	Read code	
S80(07-)	2009	TF-80SC AWD	ABS	Clear code	
S80(07-)	2009	TF-80SC AWD	ABS	Data stream	
S80(07-)	2009	TF-80SC AWD	ABS	Actuation	
S80(07-)	2009	TF-80SC AWD	ABS	Freeze frame	
S80(07-)	2009	TF-80SC AWD	ABS	Special functions	Calibration
S80(07-)	2009	TF-80SC AWD	SRS	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	SRS	Read code	
S80(07-)	2009	TF-80SC AWD	SRS	Clear code	
S80(07-)	2009	TF-80SC AWD	SRS	Data stream	
S80(07-)	2009	TF-80SC AWD	SRS	Freeze frame	
S80(07-)	2009	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
S80(07-)	2009	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
S80(07-)	2009	TF-80SC AWD	CEM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	CEM	Read code	
S80(07-)	2009	TF-80SC AWD	CEM	Clear code	
S80(07-)	2009	TF-80SC AWD	CEM	Data stream	
S80(07-)	2009	TF-80SC AWD	CEM	Actuation	
S80(07-)	2009	TF-80SC AWD	DIM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	DIM	Read code	
S80(07-)	2009	TF-80SC AWD	DIM	Clear code	
S80(07-)	2009	TF-80SC AWD	DIM	Data stream	
S80(07-)	2009	TF-80SC AWD	DIM	Freeze frame	
S80(07-)	2009	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI)
S80(07-)	2009	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
S80(07-)	2009	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
S80(07-)	2009	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
S80(07-)	2009	TF-80SC AWD	DIM	Special functions	Programming of clock
S80(07-)	2009	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(07-)	2009	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
S80(07-)	2009	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
S80(07-)	2009	TF-80SC AWD	PDM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	PDM	Read code	
S80(07-)	2009	TF-80SC AWD	PDM	Clear code	
S80(07-)	2009	TF-80SC AWD	PDM	Data stream	
S80(07-)	2009	TF-80SC AWD	PDM	Actuation	
S80(07-)	2009	TF-80SC AWD	PSM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	PSM	Read code	
S80(07-)	2009	TF-80SC AWD	PSM	Clear code	
S80(07-)	2009	TF-80SC AWD	PSM	Data stream	
S80(07-)	2009	TF-80SC AWD	PSM	Actuation	
S80(07-)	2009	TF-80SC AWD	DDM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	DDM	Read code	
S80(07-)	2009	TF-80SC AWD	DDM	Clear code	
S80(07-)	2009	TF-80SC AWD	DDM	Data stream	
S80(07-)	2009	TF-80SC AWD	CCM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	CCM	Read code	
S80(07-)	2009	TF-80SC AWD	CCM	Clear code	
S80(07-)	2009	TF-80SC AWD	CCM	Data stream	
S80(07-)	2009	TF-80SC AWD	CCM	Actuation	
S80(07-)	2009	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
S80(07-)	2009	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(07-)	2009	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(07-)	2009	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
S80(07-)	2009	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(07-)	2009	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module (CCM)
S80(07-)	2009	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
S80(07-)	2009	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
S80(07-)	2009	TF-80SC AWD	AUD	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	AUD	Read code	
S80(07-)	2009	TF-80SC AWD	AUD	Clear code	
S80(07-)	2009	TF-80SC AWD	DEM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	DEM	Read code	



model	year	type	system	function	subfunction
S80(07-)	2009	TF-80SC AWD	DEM	Clear code	
S80(07-)	2009	TF-80SC AWD	DEM	Data stream	
S80(07-)	2009	TF-80SC AWD	DEM	Actuation	
S80(07-)	2009	TF-80SC AWD	ICM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	ICM	Read code	
S80(07-)	2009	TF-80SC AWD	ICM	Clear code	
S80(07-)	2009	TF-80SC AWD	ICM	Data stream	
S80(07-)	2009	TF-80SC AWD	ICM	Actuation	
S80(07-)	2009	TF-80SC AWD	SAS	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	SAS	Read code	
S80(07-)	2009	TF-80SC AWD	SAS	Clear code	
S80(07-)	2009	TF-80SC AWD	SAS	Data stream	
S80(07-)	2009	TF-80SC AWD	MMM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	MMM	Read code	
S80(07-)	2009	TF-80SC AWD	MMM	Clear code	
S80(07-)	2009	TF-80SC AWD	PAM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	PAM	Read code	
S80(07-)	2009	TF-80SC AWD	PAM	Clear code	
S80(07-)	2009	TF-80SC AWD	PAM	Data stream	
S80(07-)	2009	TF-80SC AWD	IAM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	IAM	Read code	
S80(07-)	2009	TF-80SC AWD	IAM	Clear code	
S80(07-)	2009	TF-80SC AWD	BPM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	BPM	Read code	
S80(07-)	2009	TF-80SC AWD	BPM	Clear code	
S80(07-)	2009	TF-80SC AWD	BPM	Data stream	
S80(07-)	2009	TF-80SC AWD	SUM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	SUM	Read code	
S80(07-)	2009	TF-80SC AWD	SUM	Clear code	
S80(07-)	2009	TF-80SC AWD	SUM	Data stream	
S80(07-)	2009	TF-80SC AWD	PBM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	PBM	Read code	
S80(07-)	2009	TF-80SC AWD	PBM	Clear code	
S80(07-)	2009	TF-80SC AWD	PBM	Data stream	
S80(07-)	2009	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
S80(07-)	2009	TF-80SC AWD	PBM	Special functions	Activation and service
S80(07-)	2009	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
S80(07-)	2009	TF-80SC AWD	CPM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	CPM	Read code	
S80(07-)	2009	TF-80SC AWD	CPM	Clear code	
S80(07-)	2009	TF-80SC AWD	CPM	Data stream	
S80(07-)	2009	TF-80SC AWD	CPM	Actuation	
S80(07-)	2009	TF-80SC AWD	HCM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	HCM	Read code	
S80(07-)	2009	TF-80SC AWD	HCM	Clear code	
S80(07-)	2009	TF-80SC AWD	HCM	Data stream	
S80(07-)	2009	TF-80SC AWD	KVM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	KVM	Read code	
S80(07-)	2009	TF-80SC AWD	KVM	Clear code	
S80(07-)	2009	TF-80SC AWD	KVM	Data stream	
S80(07-)	2009	TF-80SC AWD	HLDF	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	HLDF	Read code	
S80(07-)	2009	TF-80SC AWD	HLDF	Clear code	
S80(07-)	2009	TF-80SC AWD	HLDF	Data stream	
S80(07-)	2009	TF-80SC AWD	POT	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	POT	Read code	
S80(07-)	2009	TF-80SC AWD	POT	Clear code	
S80(07-)	2009	TF-80SC AWD	POT	Data stream	
S80(07-)	2009	TF-80SC AWD	AUU	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	AUU	Read code	
S80(07-)	2009	TF-80SC AWD	AUU	Clear code	
S80(07-)	2009	TF-80SC AWD	AUU	Data stream	
S80(07-)	2009	TF-80SC AWD	FSM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	FSM	Read code	
S80(07-)	2009	TF-80SC AWD	FSM	Clear code	
S80(07-)	2009	TF-80SC AWD	FSM	Data stream	
S80(07-)	2009	TF-80SC AWD	RDAR	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	RDAR	Read code	
S80(07-)	2009	TF-80SC AWD	RDAR	Clear code	
S80(07-)	2009	TF-80SC AWD	RDAR	Data stream	
S80(07-)	2009	TF-80SC AWD	SUB	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	SUB	Read code	
S80(07-)	2009	TF-80SC AWD	SUB	Clear code	
S80(07-)	2009	TF-80SC AWD	SUB	Data stream	
S80(07-)	2009	TF-80SC AWD	CVM	Sys. Info.	
S80(07-)	2009	TF-80SC AWD	CVM	Read code	
S80(07-)	2009	TF-80SC AWD	CVM	Clear code	
S80(07-)	2009	TF-80SC AWD	CVM	Data stream	

model	year	type	system	function	subfunction	
S80(07-)		2009	TF-80SC AWD	DABM	Sys. Info.	
S80(07-)		2009	TF-80SC AWD	DABM	Read code	
S80(07-)		2009	TF-80SC AWD	DABM	Clear code	
S80(07-)		2009	TF-80SC AWD	DABM	Data stream	
S80(07-)		2009	TF-80SC AWD	PAC	Sys. Info.	
S80(07-)		2009	TF-80SC AWD	PAC	Read code	
S80(07-)		2009	TF-80SC AWD	PAC	Clear code	
S80(07-)		2009	TF-80SC AWD	PAC	Data stream	
S80(07-)		2009	TF-80SC AWD	TRM	Sys. Info.	
S80(07-)		2009	TF-80SC AWD	TRM	Read code	
S80(07-)		2009	TF-80SC AWD	TRM	Clear code	
S80(07-)		2009	TF-80SC AWD	TRM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero	
S80(07-)	2010 - 2012	B5254T6	ECM	Sys. Info.		
S80(07-)	2010 - 2012	B5254T6	ECM	Read code		
S80(07-)	2010 - 2012	B5254T6	ECM	Clear code		
S80(07-)	2010 - 2012	B5254T6	ECM	Data stream		
S80(07-)	2010 - 2012	B5254T6	ECM	Actuation		
S80(07-)	2010 - 2012	B5254T6	ECM	Freeze frame		
S80(07-)	2010 - 2012	B5254T6	ECM	Special functions	Adaptation of the throttle unit	
S80(07-)	2010 - 2012	B5254T10	ECM	Sys. Info.		
S80(07-)	2010 - 2012	B5254T10	ECM	Read code		
S80(07-)	2010 - 2012	B5254T10	ECM	Clear code		
S80(07-)	2010 - 2012	B5254T10	ECM	Data stream		
S80(07-)	2010 - 2012	B5254T10	ECM	Actuation		
S80(07-)	2010 - 2012	B5254T10	ECM	Freeze frame		
S80(07-)	2010 - 2012	B5254T10	ECM	Special functions	Adaptation of the throttle unit	
S80(07-)	2010 - 2012	B8444S	ECM	Sys. Info.		
S80(07-)	2010 - 2012	B8444S	ECM	Read code		
S80(07-)	2010 - 2012	B8444S	ECM	Clear code		
S80(07-)	2010 - 2012	B8444S	ECM	Data stream		
S80(07-)	2010 - 2012	B8444S	ECM	Actuation		
S80(07-)	2010 - 2012	B8444S	ECM	Special functions	Resetting the adaptation values	
S80(07-)	2010 - 2012	B6304T2	ECM	Sys. Info.		
S80(07-)	2010 - 2012	B6304T2	ECM	Read code		
S80(07-)	2010 - 2012	B6304T2	ECM	Clear code		
S80(07-)	2010 - 2012	B6304T2	ECM	Data stream		
S80(07-)	2010 - 2012	B6304T2	ECM	Actuation		
S80(07-)	2010 - 2012	B6304T2	ECM	Special functions	Resetting the adaptation values	
S80(07-)	2010 - 2012	B6324S	ECM	Sys. Info.		
S80(07-)	2010 - 2012	B6324S	ECM	Read code		
S80(07-)	2010 - 2012	B6324S	ECM	Clear code		
S80(07-)	2010 - 2012	B6324S	ECM	Data stream		
S80(07-)	2010 - 2012	B6324S	ECM	Actuation		
S80(07-)	2010 - 2012	B6324S	ECM	Special functions	Resetting the adaptation values	
S80(07-)	2010 - 2012	B6324S2	ECM	Sys. Info.		
S80(07-)	2010 - 2012	B6324S2	ECM	Read code		
S80(07-)	2010 - 2012	B6324S2	ECM	Clear code		
S80(07-)	2010 - 2012	B6324S2	ECM	Data stream		
S80(07-)	2010 - 2012	B6324S2	ECM	Actuation		
S80(07-)	2010 - 2012	B6324S2	ECM	Special functions	Resetting the adaptation values	
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Sys. Info.		
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Read code		
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Clear code		
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Data stream		
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Actuation		
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter	
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter	
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module	
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle	
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor	
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor	
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve	
S80(07-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Combustion of soot particles	
S80(07-)	2010 - 2012	D5244T16	Diesel Eng	Sys. Info.		
S80(07-)	2010 - 2012	D5244T16	Diesel Eng	Read code		
S80(07-)	2010 - 2012	D5244T16	Diesel Eng	Clear code		
S80(07-)	2010 - 2012	D5244T16	Diesel Eng	Data stream		
S80(07-)	2010 - 2012	D5244T16	Diesel Eng	Actuation		
S80(07-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter	
S80(07-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Resetting adaptation	
S80(07-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module	
S80(07-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve	
S80(07-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Combustion of soot particles	
S80(07-)	2010 - 2012	TF-80SC	TCM	Sys. Info.		
S80(07-)	2010 - 2012	TF-80SC	TCM	Read code		
S80(07-)	2010 - 2012	TF-80SC	TCM	Clear code		

model	year	type	system	function	subfunction
S80(07-)	2010 - 2012	TF-80SC	TCM	Data stream	
S80(07-)	2010 - 2012	TF-80SC	TCM	Actuation	
S80(07-)	2010 - 2012	TF-80SC	TCM	Freeze frame	
S80(07-)	2010 - 2012	TF-80SC	TCM	Special functions	Resetting the adaptation
S80(07-)	2010 - 2012	TF-80SC	TCM	Special functions	Calibration of position sensor
S80(07-)	2010 - 2012	TF-80SC AWD	TCM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	TCM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	TCM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	TCM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	TCM	Actuation	
S80(07-)	2010 - 2012	TF-80SC AWD	TCM	Freeze frame	
S80(07-)	2010 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
S80(07-)	2010 - 2012	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
S80(07-)	2010 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
S80(07-)	2010 - 2012	TF-80SC AWD	ABS	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	ABS	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	ABS	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	ABS	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	ABS	Actuation	
S80(07-)	2010 - 2012	TF-80SC AWD	ABS	Freeze frame	
S80(07-)	2010 - 2012	TF-80SC AWD	ABS	Special functions	Calibration
S80(07-)	2010 - 2012	TF-80SC AWD	SRS	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	SRS	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	SRS	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	SRS	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	SRS	Freeze frame	
S80(07-)	2010 - 2012	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
S80(07-)	2010 - 2012	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
S80(07-)	2010 - 2012	TF-80SC AWD	CEM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	CEM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	CEM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	CEM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	CEM	Actuation	
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Freeze frame	
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI)
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming of clock
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
S80(07-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
S80(07-)	2010 - 2012	TF-80SC AWD	PDM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	PDM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	PDM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	PDM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	PDM	Actuation	
S80(07-)	2010 - 2012	TF-80SC AWD	PSM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	PSM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	PSM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	PSM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	PSM	Actuation	
S80(07-)	2010 - 2012	TF-80SC AWD	DDM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	DDM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	DDM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	DDM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Actuation	
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module (CCM)
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
S80(07-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
S80(07-)	2010 - 2012	TF-80SC AWD	AUD	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	AUD	Read code	

model	year	type	system	function	subfunction
S80(07-)	2010 - 2012	TF-80SC AWD	AUD	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	DEM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	DEM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	DEM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	DEM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	DEM	Actuation	
S80(07-)	2010 - 2012	TF-80SC AWD	ICM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	ICM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	ICM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	ICM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	ICM	Actuation	
S80(07-)	2010 - 2012	TF-80SC AWD	SAS	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	SAS	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	SAS	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	SAS	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	MMM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	MMM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	MMM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	PAM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	PAM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	PAM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	PAM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	IAM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	IAM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	IAM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	BPM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	BPM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	BPM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	BPM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	SUM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	SUM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	SUM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	SUM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	PBM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	PBM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	PBM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	PBM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
S80(07-)	2010 - 2012	TF-80SC AWD	PBM	Special functions	Activation and service
S80(07-)	2010 - 2012	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
S80(07-)	2010 - 2012	TF-80SC AWD	CPM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	CPM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	CPM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	CPM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	CPM	Actuation	
S80(07-)	2010 - 2012	TF-80SC AWD	HCM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	HCM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	HCM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	HCM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	KVM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	KVM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	KVM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	KVM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	HLDF	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	HLDF	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	HLDF	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	HLDF	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	POT	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	POT	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	POT	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	POT	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	AUU	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	AUU	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	AUU	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	AUU	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	FSM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	FSM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	FSM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	FSM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	RDAR	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	RDAR	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	RDAR	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	RDAR	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	SUB	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	SUB	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	SUB	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	SUB	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	CVM	Sys. Info.	

model	year	type	system	function	subfunction
S80(07-)	2010 - 2012	TF-80SC AWD	CVM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	CVM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	CVM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	DABM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	DABM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	DABM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	DABM	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	PAC	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	PAC	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	PAC	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	PAC	Data stream	
S80(07-)	2010 - 2012	TF-80SC AWD	TRM	Sys. Info.	
S80(07-)	2010 - 2012	TF-80SC AWD	TRM	Read code	
S80(07-)	2010 - 2012	TF-80SC AWD	TRM	Clear code	
S80(07-)	2010 - 2012	TF-80SC AWD	TRM	Data stream	
S80(07-)		2013 B6324S5	ECM	Sys. Info.	
S80(07-)		2013 B6324S5	ECM	Read code	
S80(07-)		2013 B6324S5	ECM	Clear code	
S80(07-)		2013 B6324S5	ECM	Data stream	
S80(07-)		2013 B6324S5	ECM	Actuation	
S80(07-)		2013 B6324S5	ECM	Special functions	Resetting the adaptation values
S80(07-)		2013 B6324S4	ECM	Sys. Info.	
S80(07-)		2013 B6324S4	ECM	Read code	
S80(07-)		2013 B6324S4	ECM	Clear code	
S80(07-)		2013 B6324S4	ECM	Data stream	
S80(07-)		2013 B6324S4	ECM	Actuation	
S80(07-)		2013 B6324S4	ECM	Special functions	Resetting the adaptation values
S80(07-)		2013 B6304T4	ECM	Sys. Info.	
S80(07-)		2013 B6304T4	ECM	Read code	
S80(07-)		2013 B6304T4	ECM	Clear code	
S80(07-)		2013 B6304T4	ECM	Data stream	
S80(07-)		2013 B6304T4	ECM	Actuation	
S80(07-)		2013 B6304T4	ECM	Freeze frame	
S80(07-)		2013 B6304T4	ECM	Special functions	Resetting the adaptation values
S80(07-)		2013 B4204T7	ECM	Sys. Info.	
S80(07-)		2013 B4204T7	ECM	Read code	
S80(07-)		2013 B4204T7	ECM	Clear code	
S80(07-)		2013 B4204T7	ECM	Data stream	
S80(07-)		2013 B4204T7	ECM	Actuation	
S80(07-)		2013 B4204T7	ECM	Freeze frame	
S80(07-)		2013 B4204T7	ECM	Special functions	Resetting the adaptation values
S80(07-)		2013 B4204T7	ECM	Special functions	Adaptation of oil level sensor
S80(07-)		2013 B4204T7	ECM	Special functions	Checking injectors
S80(07-)		2013 B4204T7	ECM	Special functions	Activation brake vacuum pump
S80(07-)		2013 B4204T6	ECM	Sys. Info.	
S80(07-)		2013 B4204T6	ECM	Read code	
S80(07-)		2013 B4204T6	ECM	Clear code	
S80(07-)		2013 B4204T6	ECM	Data stream	
S80(07-)		2013 B4204T6	ECM	Actuation	
S80(07-)		2013 B4204T6	ECM	Freeze frame	
S80(07-)		2013 B4204T6	ECM	Special functions	Resetting the adaptation values
S80(07-)		2013 B4204T6	ECM	Special functions	Adaptation of oil level sensor
S80(07-)		2013 B4204T6	ECM	Special functions	Checking injectors
S80(07-)		2013 B4204T6	ECM	Special functions	Activation brake vacuum pump
S80(07-)		2013 B4164T2	ECM	Sys. Info.	
S80(07-)		2013 B4164T2	ECM	Read code	
S80(07-)		2013 B4164T2	ECM	Clear code	
S80(07-)		2013 B4164T2	ECM	Data stream	
S80(07-)		2013 B4164T2	ECM	Actuation	
S80(07-)		2013 B4164T2	ECM	Freeze frame	
S80(07-)		2013 B4164T2	ECM	Special functions	Resetting the adaptation values
S80(07-)		2013 B4164T2	ECM	Special functions	Adaptation of oil level sensor
S80(07-)		2013 B4164T2	ECM	Special functions	Adaptation of camshafts
S80(07-)		2013 B4164T2	ECM	Special functions	Checking injectors
S80(07-)		2013 B4164T	ECM	Sys. Info.	
S80(07-)		2013 B4164T	ECM	Read code	
S80(07-)		2013 B4164T	ECM	Clear code	
S80(07-)		2013 B4164T	ECM	Data stream	
S80(07-)		2013 B4164T	ECM	Actuation	
S80(07-)		2013 B4164T	ECM	Freeze frame	
S80(07-)		2013 B4164T	ECM	Special functions	Resetting the adaptation values
S80(07-)		2013 B4164T	ECM	Special functions	Adaptation of oil level sensor
S80(07-)		2013 B4164T	ECM	Special functions	Adaptation of camshafts
S80(07-)		2013 B4164T	ECM	Special functions	Checking injectors
S80(07-)		2013 B5204T9	ECM	Sys. Info.	
S80(07-)		2013 B5204T9	ECM	Read code	
S80(07-)		2013 B5204T9	ECM	Clear code	
S80(07-)		2013 B5204T9	ECM	Data stream	

model	year	type	system	function	subfunction
S80(07-)	2013	B5204T9	ECM	Actuation	
S80(07-)	2013	B5204T9	ECM	Freeze frame	
S80(07-)	2013	B5204T9	ECM	Special functions	Resetting the adaptation values
S80(07-)	2013	B5204T9	ECM	Special functions	Resetting the flywheel adaptions
S80(07-)	2013	B5204T9	ECM	Special functions	Resetting the camshaft adaption values
S80(07-)	2013	B5254T12	ECM	Sys. Info.	
S80(07-)	2013	B5254T12	ECM	Read code	
S80(07-)	2013	B5254T12	ECM	Clear code	
S80(07-)	2013	B5254T12	ECM	Data stream	
S80(07-)	2013	B5254T12	ECM	Actuation	
S80(07-)	2013	B5254T12	ECM	Freeze frame	
S80(07-)	2013	B5254T12	ECM	Special functions	Resetting the adaptation values
S80(07-)	2013	B5254T12	ECM	Special functions	Resetting the flywheel adaptions
S80(07-)	2013	B5254T12	ECM	Special functions	Resetting the camshaft adaption values
S80(07-)	2013	B5254T14	ECM	Sys. Info.	
S80(07-)	2013	B5254T14	ECM	Read code	
S80(07-)	2013	B5254T14	ECM	Clear code	
S80(07-)	2013	B5254T14	ECM	Data stream	
S80(07-)	2013	B5254T14	ECM	Actuation	
S80(07-)	2013	B5254T14	ECM	Freeze frame	
S80(07-)	2013	B5254T14	ECM	Special functions	Resetting the adaptation values
S80(07-)	2013	B5254T14	ECM	Special functions	Resetting the flywheel adaptions
S80(07-)	2013	B5254T14	ECM	Special functions	Resetting the camshaft adaption values
S80(07-)	2013	D5204T3	Diesel Eng	Sys. Info.	
S80(07-)	2013	D5204T3	Diesel Eng	Read code	
S80(07-)	2013	D5204T3	Diesel Eng	Clear code	
S80(07-)	2013	D5204T3	Diesel Eng	Data stream	
S80(07-)	2013	D5204T3	Diesel Eng	Actuation	
S80(07-)	2013	D5204T3	Diesel Eng	Freeze frame	
S80(07-)	2013	D5204T3	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2013	D5204T3	Diesel Eng	Special functions	Checking injectors
S80(07-)	2013	D5204T3	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2013	D5204T3	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(07-)	2013	D5204T3	Diesel Eng	Special functions	Checking the oil level
S80(07-)	2013	D5244T15	Diesel Eng	Sys. Info.	
S80(07-)	2013	D5244T15	Diesel Eng	Read code	
S80(07-)	2013	D5244T15	Diesel Eng	Clear code	
S80(07-)	2013	D5244T15	Diesel Eng	Data stream	
S80(07-)	2013	D5244T15	Diesel Eng	Actuation	
S80(07-)	2013	D5244T15	Diesel Eng	Freeze frame	
S80(07-)	2013	D5244T15	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2013	D5244T15	Diesel Eng	Special functions	Checking injectors
S80(07-)	2013	D5244T15	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2013	D5244T15	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(07-)	2013	D5244T15	Diesel Eng	Special functions	Checking the oil level
S80(07-)	2013	D5244T11	Diesel Eng	Sys. Info.	
S80(07-)	2013	D5244T11	Diesel Eng	Read code	
S80(07-)	2013	D5244T11	Diesel Eng	Clear code	
S80(07-)	2013	D5244T11	Diesel Eng	Data stream	
S80(07-)	2013	D5244T11	Diesel Eng	Actuation	
S80(07-)	2013	D5244T11	Diesel Eng	Freeze frame	
S80(07-)	2013	D5244T11	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2013	D5244T11	Diesel Eng	Special functions	Checking injectors
S80(07-)	2013	D5244T11	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2013	D5244T11	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(07-)	2013	D5244T11	Diesel Eng	Special functions	Checking the oil level
S80(07-)	2013	D5204T7	Diesel Eng	Sys. Info.	
S80(07-)	2013	D5204T7	Diesel Eng	Read code	
S80(07-)	2013	D5204T7	Diesel Eng	Clear code	
S80(07-)	2013	D5204T7	Diesel Eng	Data stream	
S80(07-)	2013	D5204T7	Diesel Eng	Actuation	
S80(07-)	2013	D5204T7	Diesel Eng	Freeze frame	
S80(07-)	2013	D5204T7	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2013	D5204T7	Diesel Eng	Special functions	Checking injectors
S80(07-)	2013	D5204T7	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2013	D5204T7	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(07-)	2013	D5204T7	Diesel Eng	Special functions	Checking the oil level
S80(07-)	2013	D4162T	Diesel Eng	Sys. Info.	
S80(07-)	2013	D4162T	Diesel Eng	Read code	
S80(07-)	2013	D4162T	Diesel Eng	Clear code	
S80(07-)	2013	D4162T	Diesel Eng	Data stream	
S80(07-)	2013	D4162T	Diesel Eng	Actuation	
S80(07-)	2013	D4162T	Diesel Eng	Freeze frame	
S80(07-)	2013	D4162T	Diesel Eng	Special functions	Adaptation of neutral position sensor
S80(07-)	2013	TF-80SC	TCM	Sys. Info.	
S80(07-)	2013	TF-80SC	TCM	Read code	
S80(07-)	2013	TF-80SC	TCM	Clear code	
S80(07-)	2013	TF-80SC	TCM	Data stream	

model	year	type	system	function	subfunction
S80(07-)	2013	TF-80SC	TCM	Actuation	
S80(07-)	2013	TF-80SC	TCM	Freeze frame	
S80(07-)	2013	TF-80SC	TCM	Special functions	Resetting adaptation
S80(07-)	2013	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
S80(07-)	2013	TF-80SC	TCM	Special functions	Calibration of gear indication
S80(07-)	2013	TF-80SC	TCM	Special functions	Activating of gear indication
S80(07-)	2013	TF-80SC	TCM	Special functions	Control module adaptation
S80(07-)	2013	TF-80SC AWD	TCM	Sys. Info.	
S80(07-)	2013	TF-80SC AWD	TCM	Read code	
S80(07-)	2013	TF-80SC AWD	TCM	Clear code	
S80(07-)	2013	TF-80SC AWD	TCM	Data stream	
S80(07-)	2013	TF-80SC AWD	TCM	Actuation	
S80(07-)	2013	TF-80SC AWD	TCM	Freeze frame	
S80(07-)	2013	TF-80SC AWD	TCM	Special functions	Resetting adaptation
S80(07-)	2013	TF-80SC AWD	TCM	Special functions	Resetting the Transmission fluid change counter
S80(07-)	2013	TF-80SC AWD	TCM	Special functions	Calibration of gear indication
S80(07-)	2013	TF-80SC AWD	TCM	Special functions	Activating of gear indication
S80(07-)	2013	TF-80SC AWD	TCM	Special functions	Control module adaptation
S80(07-)	2013	MPS6	TCM	Sys. Info.	
S80(07-)	2013	MPS6	TCM	Read code	
S80(07-)	2013	MPS6	TCM	Clear code	
S80(07-)	2013	MPS6	TCM	Data stream	
S80(07-)	2013	MPS6	TCM	Actuation	
S80(07-)	2013	MPS6	TCM	Freeze frame	
S80(07-)	2013	MPS6	TCM	Special functions	Resetting adaptation
S80(07-)	2013	MPS6	TCM	Special functions	Resetting the Transmission fluid change counter
S80(07-)	2013	MPS6	TCM	Special functions	Calibration of gear indication
S80(07-)	2013	MPS6	TCM	Special functions	Activating of gear indication
S80(07-)	2013	MPS6	TCM	Special functions	Control module adaptation
S80(07-)	2013	TF-80SD	TCM	Sys. Info.	
S80(07-)	2013	TF-80SD	TCM	Read code	
S80(07-)	2013	TF-80SD	TCM	Clear code	
S80(07-)	2013	TF-80SD	TCM	Data stream	
S80(07-)	2013	TF-80SD	TCM	Actuation	
S80(07-)	2013	TF-80SD	TCM	Freeze frame	
S80(07-)	2013	TF-80SD	TCM	Special functions	Resetting the adaptation
S80(07-)	2013	TF-80SD	TCM	Special functions	Calibration of position sensor
S80(07-)	2013	TF-80SD	TCM	Special functions	Resetting the counter for Gearbox oil Change
S80(07-)	2013	TF-80SD	TCM	Special functions	Activating gear indication
S80(07-)	2013	TF-80SD	TCM	Special functions	Control module adaptation
S80(07-)	2013	TF-80SD	BCM/ABS	Sys. Info.	
S80(07-)	2013	TF-80SD	BCM/ABS	Read code	
S80(07-)	2013	TF-80SD	BCM/ABS	Clear code	
S80(07-)	2013	TF-80SD	BCM/ABS	Data stream	
S80(07-)	2013	TF-80SD	BCM/ABS	Actuation	
S80(07-)	2013	TF-80SD	BCM/ABS	Freeze frame	
S80(07-)	2013	TF-80SD	BCM/ABS	Special functions	Calibration
S80(07-)	2013	TF-80SD	SRS	Sys. Info.	
S80(07-)	2013	TF-80SD	SRS	Read code	
S80(07-)	2013	TF-80SD	SRS	Clear code	
S80(07-)	2013	TF-80SD	SRS	Data stream	
S80(07-)	2013	TF-80SD	SRS	Actuation	
S80(07-)	2013	TF-80SD	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
S80(07-)	2013	TF-80SD	SRS	Special functions	Checking the PAD-light
S80(07-)	2013	TF-80SD	CEM	Sys. Info.	
S80(07-)	2013	TF-80SD	CEM	Read code	
S80(07-)	2013	TF-80SD	CEM	Clear code	
S80(07-)	2013	TF-80SD	CEM	Data stream	
S80(07-)	2013	TF-80SD	CEM	Actuation	
S80(07-)	2013	TF-80SD	CEM	Special functions	Workshop test(TPMS)
S80(07-)	2013	TF-80SD	CEM	Special functions	Reading off power supply position
S80(07-)	2013	TF-80SD	CEM	Special functions	Read-out and resetting alco-lock
S80(07-)	2013	TF-80SD	CEM	Special functions	Activating wipers,front/rear
S80(07-)	2013	TF-80SD	CEM	Special functions	Operating and initiating the roof hatch
S80(07-)	2013	TF-80SD	CEM	Special functions	Restoring supplemental restraint system
S80(07-)	2013	TF-80SD	CEM	Special functions	Setting day and night mode for the instrumentation
S80(07-)	2013	TF-80SD	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
S80(07-)	2013	TF-80SD	CEM	Special functions	Readout of current from battery monitoring sensor
S80(07-)	2013	TF-80SD	CEM	Special functions	Readout of information stand-by current
S80(07-)	2013	TF-80SD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
S80(07-)	2013	TF-80SD	CEM	Special functions	Automatic battery test
S80(07-)	2013	TF-80SD	CEM	Special functions	Remote controlled immobilising,status
S80(07-)	2013	TF-80SD	CEM	Special functions	Remote controlled immobilising,cause
S80(07-)	2013	TF-80SD	DIM	Sys. Info.	
S80(07-)	2013	TF-80SD	DIM	Read code	
S80(07-)	2013	TF-80SD	DIM	Clear code	

model	year	type	system	function	subfunction
S80(07-)	2013	TF-80SD	DIM	Data stream	
S80(07-)	2013	TF-80SD	DIM	Actuation	
S80(07-)	2013	TF-80SD	DIM	Special functions	Resetting the service reminder indicator (SRI)
S80(07-)	2013	TF-80SD	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
S80(07-)	2013	TF-80SD	DIM	Special functions	Read-out of fuel volume
S80(07-)	2013	TF-80SD	DIM	Special functions	Resetting the odometer setting
S80(07-)	2013	TF-80SD	DIM	Special functions	Programming loudest audible signal,seat belt reminder
S80(07-)	2013	TF-80SD	DIM	Special functions	Programming seatbelt reminder in backseat
S80(07-)	2013	TF-80SD	DIM	Special functions	Programming text message,seatbelt reminder
S80(07-)	2013	TF-80SD	PDM	Sys. Info.	
S80(07-)	2013	TF-80SD	PDM	Read code	
S80(07-)	2013	TF-80SD	PDM	Clear code	
S80(07-)	2013	TF-80SD	PDM	Data stream	
S80(07-)	2013	TF-80SD	PDM	Actuation	
S80(07-)	2013	TF-80SD	PDM	Special functions	Initializing the window in the front door,
S80(07-)	2013	TF-80SD	PDM	Special functions	Initializing the window in the rear door,
S80(07-)	2013	TF-80SD	PDM	Special functions	Central lock motors,activating
S80(07-)	2013	TF-80SD	PSM	Sys. Info.	
S80(07-)	2013	TF-80SD	PSM	Read code	
S80(07-)	2013	TF-80SD	PSM	Clear code	
S80(07-)	2013	TF-80SD	PSM	Data stream	
S80(07-)	2013	TF-80SD	PSM	Actuation	
S80(07-)	2013	TF-80SD	PSM	Special functions	Programming the seat memory delay time
S80(07-)	2013	TF-80SD	DDM	Sys. Info.	
S80(07-)	2013	TF-80SD	DDM	Read code	
S80(07-)	2013	TF-80SD	DDM	Clear code	
S80(07-)	2013	TF-80SD	DDM	Data stream	
S80(07-)	2013	TF-80SD	DDM	Actuation	
S80(07-)	2013	TF-80SD	DDM	Special functions	Iniializing the window position,
S80(07-)	2013	TF-80SD	DDM	Special functions	Central lock motors,activating
S80(07-)	2013	TF-80SD	CCM	Sys. Info.	
S80(07-)	2013	TF-80SD	CCM	Read code	
S80(07-)	2013	TF-80SD	CCM	Clear code	
S80(07-)	2013	TF-80SD	CCM	Data stream	
S80(07-)	2013	TF-80SD	CCM	Actuation	
S80(07-)	2013	TF-80SD	CCM	Special functions	Reading-out programmed parameters
S80(07-)	2013	TF-80SD	CCM	Special functions	Calibrating the Climate Control Module(CCM)
S80(07-)	2013	TF-80SD	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
S80(07-)	2013	TF-80SD	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
S80(07-)	2013	TF-80SD	CCM	Special functions	Programming the evaporator,climate control module(CCM)
S80(07-)	2013	TF-80SD	CCM	Special functions	Airflow setting in rear passenger compartment
S80(07-)	2013	TF-80SD	CCM	Special functions	Programming the climate control module(CCM)
S80(07-)	2013	TF-80SD	CCM	Special functions	Rear view mirror light sensitivity
S80(07-)	2013	TF-80SD	AUD	Sys. Info.	
S80(07-)	2013	TF-80SD	AUD	Read code	
S80(07-)	2013	TF-80SD	AUD	Clear code	
S80(07-)	2013	TF-80SD	AUD	Special functions	Checking loudspeakers
S80(07-)	2013	TF-80SD	AUD	Special functions	Checking headphone socket
S80(07-)	2013	TF-80SD	DEM	Sys. Info.	
S80(07-)	2013	TF-80SD	DEM	Read code	
S80(07-)	2013	TF-80SD	DEM	Clear code	
S80(07-)	2013	TF-80SD	DEM	Special functions	Calibration of differential electronic module (DEM).
S80(07-)	2013	TF-80SD	ICM	Sys. Info.	
S80(07-)	2013	TF-80SD	ICM	Read code	
S80(07-)	2013	TF-80SD	ICM	Clear code	
S80(07-)	2013	TF-80SD	ICM	Data stream	
S80(07-)	2013	TF-80SD	SAS	Sys. Info.	
S80(07-)	2013	TF-80SD	SAS	Read code	
S80(07-)	2013	TF-80SD	SAS	Clear code	
S80(07-)	2013	TF-80SD	SAS	Data stream	
S80(07-)	2013	TF-80SD	SAS	Actuation	
S80(07-)	2013	TF-80SD	PAM	Sys. Info.	
S80(07-)	2013	TF-80SD	PAM	Read code	
S80(07-)	2013	TF-80SD	PAM	Clear code	
S80(07-)	2013	TF-80SD	PAM	Data stream	
S80(07-)	2013	TF-80SD	PAM	Special functions	Programming of Parking Assistance Module(PAM)
S80(07-)	2013	TF-80SD	IAM	Sys. Info.	
S80(07-)	2013	TF-80SD	IAM	Read code	
S80(07-)	2013	TF-80SD	IAM	Clear code	
S80(07-)	2013	TF-80SD	IAM	Data stream	
S80(07-)	2013	TF-80SD	SUM	Sys. Info.	
S80(07-)	2013	TF-80SD	SUM	Read code	
S80(07-)	2013	TF-80SD	SUM	Clear code	
S80(07-)	2013	TF-80SD	SUM	Data stream	



model	year	type	system	function	subfunction
S80(07-)	2013	TF-80SD	SUM	Special functions	Calibration
S80(07-)	2013	TF-80SD	PBM	Sys. Info.	
S80(07-)	2013	TF-80SD	PBM	Read code	
S80(07-)	2013	TF-80SD	PBM	Clear code	
S80(07-)	2013	TF-80SD	PBM	Data stream	
S80(07-)	2013	TF-80SD	PBM	Special functions	Calibration angle sensor
S80(07-)	2013	TF-80SD	PBM	Special functions	Activation and service
S80(07-)	2013	TF-80SD	PBM	Special functions	Resetting the clutch pedal counter
S80(07-)	2013	TF-80SD	CPM	Sys. Info.	
S80(07-)	2013	TF-80SD	CPM	Read code	
S80(07-)	2013	TF-80SD	CPM	Clear code	
S80(07-)	2013	TF-80SD	CPM	Data stream	
S80(07-)	2013	TF-80SD	CPM	Special functions	Identification of the heater
S80(07-)	2013	TF-80SD	KVM	Sys. Info.	
S80(07-)	2013	TF-80SD	KVM	Read code	
S80(07-)	2013	TF-80SD	KVM	Clear code	
S80(07-)	2013	TF-80SD	KVM	Data stream	
S80(07-)	2013	TF-80SD	KVM	Special functions	Checking all antennas
S80(07-)	2013	TF-80SD	KVM	Special functions	Check the communication with the remote control receiver
S80(07-)	2013	TF-80SD	KVM	Special functions	Remote control
S80(07-)	2013	TF-80SD	KVM	Special functions	Test of internal memory
S80(07-)	2013	TF-80SD	KVM	Special functions	Activation of quick-lock motors
S80(07-)	2013	TF-80SD	FSM	Sys. Info.	
S80(07-)	2013	TF-80SD	FSM	Read code	
S80(07-)	2013	TF-80SD	FSM	Clear code	
S80(07-)	2013	TF-80SD	FSM	Special functions	Calibration of radar and camera.
S80(07-)	2013	TF-80SD	FSM	Special functions	Activating heating coil,FSM
S80(07-)	2013	TF-80SD	FSM	Special functions	Activating of the indicator for visual collision warning
S80(07-)	2013	TF-80SD	FSM	Special functions	Activating the internal test procedures
S80(07-)	2013	TF-80SD	RDAR	Sys. Info.	
S80(07-)	2013	TF-80SD	RDAR	Read code	
S80(07-)	2013	TF-80SD	RDAR	Clear code	
S80(07-)	2013	TF-80SD	CVM	Sys. Info.	
S80(07-)	2013	TF-80SD	CVM	Read code	
S80(07-)	2013	TF-80SD	CVM	Clear code	
S80(07-)	2013	TF-80SD	DABM	Sys. Info.	
S80(07-)	2013	TF-80SD	DABM	Read code	
S80(07-)	2013	TF-80SD	DABM	Clear code	
S80(07-)	2013	TF-80SD	PAC	Sys. Info.	
S80(07-)	2013	TF-80SD	PAC	Read code	
S80(07-)	2013	TF-80SD	PAC	Clear code	
S80(07-)	2013	TF-80SD	PAC	Data stream	
S80(07-)	2013	TF-80SD	TRM	Sys. Info.	
S80(07-)	2013	TF-80SD	TRM	Read code	
S80(07-)	2013	TF-80SD	TRM	Clear code	
S80(07-)	2013	TF-80SD	TRM	Data stream	
S80(07-)	2013	TF-80SD	PSCM	Sys. Info.	
S80(07-)	2013	TF-80SD	PSCM	Read code	
S80(07-)	2013	TF-80SD	PSCM	Clear code	
S80(07-)	2013	TF-80SD	PSCM	Data stream	
S80(07-)	2013	TF-80SD	PHM	Sys. Info.	
S80(07-)	2013	TF-80SD	PHM	Read code	
S80(07-)	2013	TF-80SD	PHM	Clear code	
S80(07-)	2013	TF-80SD	PHM	Data stream	
S80(07-)	2013	TF-80SD	PHM	Special functions	Reinstalling the reserve battery
S80(07-)	2013	TF-80SD	TVM	Sys. Info.	
S80(07-)	2013	TF-80SD	TVM	Read code	
S80(07-)	2013	TF-80SD	TVM	Clear code	
S80(07-)	2013	TF-80SD	TVM	Data stream	
S80(07-)	2013	TF-80SD	RSE	Sys. Info.	
S80(07-)	2013	TF-80SD	RSE	Read code	
S80(07-)	2013	TF-80SD	RSE	Clear code	
S80(07-)	2013	TF-80SD	RSE	Data stream	
S80(07-)	2013	TF-80SD	RSE	Special functions	Checking AUK-panel.
S80(07-)	2014	B6324S5	ECM	Sys. Info.	
S80(07-)	2014	B6324S5	ECM	Read code	
S80(07-)	2014	B6324S5	ECM	Clear code	
S80(07-)	2014	B6324S5	ECM	Data stream	
S80(07-)	2014	B6324S5	ECM	Actuation	
S80(07-)	2014	B6324S5	ECM	Special functions	Resetting the adaptation values
S80(07-)	2014	B6324S4	ECM	Sys. Info.	
S80(07-)	2014	B6324S4	ECM	Read code	
S80(07-)	2014	B6324S4	ECM	Clear code	
S80(07-)	2014	B6324S4	ECM	Data stream	
S80(07-)	2014	B6324S4	ECM	Actuation	
S80(07-)	2014	B6324S4	ECM	Special functions	Resetting the adaptation values
S80(07-)	2014	B6304T4	ECM	Sys. Info.	

model	year	type	system	function	subfunction	
S80(07-)		2014	B6304T4	ECM	Read code	
S80(07-)		2014	B6304T4	ECM	Clear code	
S80(07-)		2014	B6304T4	ECM	Data stream	
S80(07-)		2014	B6304T4	ECM	Actuation	
S80(07-)		2014	B6304T4	ECM	Freeze frame	
S80(07-)		2014	B6304T4	ECM	Special functions	Resetting the adaptation values
S80(07-)		2014	B4204T7	ECM	Sys. Info.	
S80(07-)		2014	B4204T7	ECM	Read code	
S80(07-)		2014	B4204T7	ECM	Clear code	
S80(07-)		2014	B4204T7	ECM	Data stream	
S80(07-)		2014	B4204T7	ECM	Actuation	
S80(07-)		2014	B4204T7	ECM	Freeze frame	
S80(07-)		2014	B4204T7	ECM	Special functions	Resetting the adaptation values
S80(07-)		2014	B4204T7	ECM	Special functions	Adaptation of oil level sensor
S80(07-)		2014	B4204T7	ECM	Special functions	Checking injectorsActivation brake vacuum pump
S80(07-)		2014	B4204T6	ECM	Sys. Info.	
S80(07-)		2014	B4204T6	ECM	Read code	
S80(07-)		2014	B4204T6	ECM	Clear code	
S80(07-)		2014	B4204T6	ECM	Data stream	
S80(07-)		2014	B4204T6	ECM	Actuation	
S80(07-)		2014	B4204T6	ECM	Freeze frame	
S80(07-)		2014	B4204T6	ECM	Special functions	Resetting the adaptation values
S80(07-)		2014	B4204T6	ECM	Special functions	Adaptation of oil level sensor
S80(07-)		2014	B4204T6	ECM	Special functions	Checking injectorsActivation brake vacuum pump
S80(07-)		2014	B4164T2	ECM	Sys. Info.	
S80(07-)		2014	B4164T2	ECM	Read code	
S80(07-)		2014	B4164T2	ECM	Clear code	
S80(07-)		2014	B4164T2	ECM	Data stream	
S80(07-)		2014	B4164T2	ECM	Actuation	
S80(07-)		2014	B4164T2	ECM	Freeze frame	
S80(07-)		2014	B4164T2	ECM	Special functions	Resetting the adaptation values
S80(07-)		2014	B4164T2	ECM	Special functions	Adaptation of oil level sensor
S80(07-)		2014	B4164T2	ECM	Special functions	Adaptation of camshafts
S80(07-)		2014	B4164T2	ECM	Special functions	Checking injectors
S80(07-)		2014	B4164T	ECM	Sys. Info.	
S80(07-)		2014	B4164T	ECM	Read code	
S80(07-)		2014	B4164T	ECM	Clear code	
S80(07-)		2014	B4164T	ECM	Data stream	
S80(07-)		2014	B4164T	ECM	Actuation	
S80(07-)		2014	B4164T	ECM	Freeze frame	
S80(07-)		2014	B4164T	ECM	Special functions	Resetting the adaptation values
S80(07-)		2014	B4164T	ECM	Special functions	Adaptation of oil level sensor
S80(07-)		2014	B4164T	ECM	Special functions	Adaptation of camshafts
S80(07-)		2014	B4164T	ECM	Special functions	Checking injectors
S80(07-)		2014	B5254T12	ECM	Sys. Info.	
S80(07-)		2014	B5254T12	ECM	Read code	
S80(07-)		2014	B5254T12	ECM	Clear code	
S80(07-)		2014	B5254T12	ECM	Data stream	
S80(07-)		2014	B5254T12	ECM	Actuation	
S80(07-)		2014	B5254T12	ECM	Freeze frame	
S80(07-)		2014	B5254T12	ECM	Special functions	Resetting the adaptation values
S80(07-)		2014	B5254T12	ECM	Special functions	Resetting the flywheel adaptions
S80(07-)		2014	B5254T12	ECM	Special functions	Resetting the camshaft adaption values
S80(07-)		2014	B5254T14	ECM	Sys. Info.	
S80(07-)		2014	B5254T14	ECM	Read code	
S80(07-)		2014	B5254T14	ECM	Clear code	
S80(07-)		2014	B5254T14	ECM	Data stream	
S80(07-)		2014	B5254T14	ECM	Actuation	
S80(07-)		2014	B5254T14	ECM	Freeze frame	
S80(07-)		2014	B5254T14	ECM	Special functions	Resetting the adaptation values
S80(07-)		2014	B5254T14	ECM	Special functions	Resetting the flywheel adaptions
S80(07-)		2014	B5254T14	ECM	Special functions	Resetting the camshaft adaption values
S80(07-)		2014	B4204T12	ECM	Sys. Info.	
S80(07-)		2014	B4204T12	ECM	Read code	
S80(07-)		2014	B4204T12	ECM	Clear code	
S80(07-)		2014	B4204T12	ECM	Data stream	
S80(07-)		2014	B4204T12	ECM	Actuation	
S80(07-)		2014	B4204T12	ECM	Freeze frame	
S80(07-)		2014	B4204T12	ECM	Special functions	Test of fuel pressure regulation,low pressure side
S80(07-)		2014	B4204T12	ECM	Special functions	Test of fuel pressure regulation,high pressure side
S80(07-)		2014	B4204T12	ECM	Special functions	Resetting adaptations and wear counter for supercharger
S80(07-)		2014	B4204T12	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
S80(07-)		2014	B4204T12	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
S80(07-)		2014	B4204T12	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
S80(07-)		2014	B4204T12	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust

model	year	type	system	function	subfunction
S80(07-)	2014	B4204T12	ECM	Special functions	Resetting adaptations for the fuel pump, low pressure side
S80(07-)	2014	B4204T12	ECM	Special functions	Resetting adaptations for cylinder balancing
S80(07-)	2014	B4204T12	ECM	Special functions	Resetting adaptations for the throttle
S80(07-)	2014	B4204T12	ECM	Special functions	Adaptation of neutral position sensor
S80(07-)	2014	B4204T11	ECM	Sys. Info.	
S80(07-)	2014	B4204T11	ECM	Read code	
S80(07-)	2014	B4204T11	ECM	Clear code	
S80(07-)	2014	B4204T11	ECM	Data stream	
S80(07-)	2014	B4204T11	ECM	Actuation	
S80(07-)	2014	B4204T11	ECM	Freeze frame	
S80(07-)	2014	B4204T11	ECM	Special functions	Test of fuel pressure regulation, low pressure side
S80(07-)	2014	B4204T11	ECM	Special functions	Test of fuel pressure regulation, high pressure side
S80(07-)	2014	B4204T11	ECM	Special functions	Resetting adaptations and wear counter for supercharger
S80(07-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for fuel/air mix (fuel trim)
S80(07-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
S80(07-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for camshaft regulation, intake
S80(07-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for camshaft regulation, exhaust
S80(07-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for the fuel pump, low pressure side
S80(07-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for cylinder balancing
S80(07-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for the throttle
S80(07-)	2014	B4204T11	ECM	Special functions	Adaptation of neutral position sensor
S80(07-)	2014	B4204T15	ECM	Sys. Info.	
S80(07-)	2014	B4204T15	ECM	Read code	
S80(07-)	2014	B4204T15	ECM	Clear code	
S80(07-)	2014	B4204T15	ECM	Data stream	
S80(07-)	2014	B4204T15	ECM	Actuation	
S80(07-)	2014	B4204T15	ECM	Freeze frame	
S80(07-)	2014	B4204T15	ECM	Special functions	Test of fuel pressure regulation, low pressure side
S80(07-)	2014	B4204T15	ECM	Special functions	Test of fuel pressure regulation, high pressure side
S80(07-)	2014	B4204T15	ECM	Special functions	Resetting adaptations and wear counter for supercharger
S80(07-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for fuel/air mix (fuel trim)
S80(07-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
S80(07-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for camshaft regulation, intake
S80(07-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for camshaft regulation, exhaust
S80(07-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for the fuel pump, low pressure side
S80(07-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for cylinder balancing
S80(07-)	2014	B4204T15	ECM	Special functions	Resetting adaptations for the throttle
S80(07-)	2014	B4204T15	ECM	Special functions	Adaptation of neutral position sensor
S80(07-)	2014	D5244T11	Diesel Eng	Sys. Info.	
S80(07-)	2014	D5244T11	Diesel Eng	Read code	
S80(07-)	2014	D5244T11	Diesel Eng	Clear code	
S80(07-)	2014	D5244T11	Diesel Eng	Data stream	
S80(07-)	2014	D5244T11	Diesel Eng	Actuation	
S80(07-)	2014	D5244T11	Diesel Eng	Freeze frame	
S80(07-)	2014	D5244T11	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2014	D5244T11	Diesel Eng	Special functions	Checking injectors
S80(07-)	2014	D5244T11	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2014	D5244T11	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation (EGR) valve
S80(07-)	2014	D5244T11	Diesel Eng	Special functions	Checking the oil level
S80(07-)	2014	D5244T15	Diesel Eng	Sys. Info.	
S80(07-)	2014	D5244T15	Diesel Eng	Read code	
S80(07-)	2014	D5244T15	Diesel Eng	Clear code	
S80(07-)	2014	D5244T15	Diesel Eng	Data stream	
S80(07-)	2014	D5244T15	Diesel Eng	Actuation	
S80(07-)	2014	D5244T15	Diesel Eng	Freeze frame	
S80(07-)	2014	D5244T15	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2014	D5244T15	Diesel Eng	Special functions	Checking injectors
S80(07-)	2014	D5244T15	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2014	D5244T15	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation (EGR) valve
S80(07-)	2014	D5244T15	Diesel Eng	Special functions	Checking the oil level
S80(07-)	2014	D5204T7	Diesel Eng	Sys. Info.	
S80(07-)	2014	D5204T7	Diesel Eng	Read code	
S80(07-)	2014	D5204T7	Diesel Eng	Clear code	
S80(07-)	2014	D5204T7	Diesel Eng	Data stream	
S80(07-)	2014	D5204T7	Diesel Eng	Actuation	
S80(07-)	2014	D5204T7	Diesel Eng	Freeze frame	
S80(07-)	2014	D5204T7	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2014	D5204T7	Diesel Eng	Special functions	Checking injectors
S80(07-)	2014	D5204T7	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2014	D5204T7	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation (EGR) valve
S80(07-)	2014	D5204T7	Diesel Eng	Special functions	Checking the oil level

model	year	type	system	function	subfunction
S80(07-)	2014	D5204T3	Diesel Eng	Sys. Info.	
S80(07-)	2014	D5204T3	Diesel Eng	Read code	
S80(07-)	2014	D5204T3	Diesel Eng	Clear code	
S80(07-)	2014	D5204T3	Diesel Eng	Data stream	
S80(07-)	2014	D5204T3	Diesel Eng	Actuation	
S80(07-)	2014	D5204T3	Diesel Eng	Freeze frame	
S80(07-)	2014	D5204T3	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2014	D5204T3	Diesel Eng	Special functions	Checking injectors
S80(07-)	2014	D5204T3	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2014	D5204T3	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S80(07-)	2014	D5204T3	Diesel Eng	Special functions	Checking the oil level
S80(07-)	2014	D4162T	Diesel Eng	Sys. Info.	
S80(07-)	2014	D4162T	Diesel Eng	Read code	
S80(07-)	2014	D4162T	Diesel Eng	Clear code	
S80(07-)	2014	D4162T	Diesel Eng	Data stream	
S80(07-)	2014	D4162T	Diesel Eng	Actuation	
S80(07-)	2014	D4162T	Diesel Eng	Freeze frame	
S80(07-)	2014	D4162T	Diesel Eng	Special functions	Adaptation of neutral position sensor
S80(07-)	2014	D4204T5	Diesel Eng	Sys. Info.	
S80(07-)	2014	D4204T5	Diesel Eng	Read code	
S80(07-)	2014	D4204T5	Diesel Eng	Clear code	
S80(07-)	2014	D4204T5	Diesel Eng	Data stream	
S80(07-)	2014	D4204T5	Diesel Eng	Actuation	
S80(07-)	2014	D4204T5	Diesel Eng	Freeze frame	
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Test of fuel pressure regulation,high pressure side
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Test of fuel flow regulation valve
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Testing the fuel pressure control valve
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for fuel flow regulation valve
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for swirl damper
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for turbocharger control
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the EGR valve
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the diesel particle filter
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the particle filter differential pressure sensor
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for front heated oxygen sensor
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for rear heated oxygen sensor
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the injectors
S80(07-)	2014	D4204T5	Diesel Eng	Special functions	Adaptation of neutral position sensor
S80(07-)	2014	MPS6	TCM	Sys. Info.	
S80(07-)	2014	MPS6	TCM	Read code	
S80(07-)	2014	MPS6	TCM	Clear code	
S80(07-)	2014	MPS6	TCM	Data stream	
S80(07-)	2014	MPS6	TCM	Actuation	
S80(07-)	2014	MPS6	TCM	Freeze frame	
S80(07-)	2014	MPS6	TCM	Special functions	Resetting adaptation
S80(07-)	2014	MPS6	TCM	Special functions	Resetting the Transmission fluid change counter
S80(07-)	2014	MPS6	TCM	Special functions	Calibration of gear indication
S80(07-)	2014	MPS6	TCM	Special functions	Activating of gear indication
S80(07-)	2014	MPS6	TCM	Special functions	Control module adaptation
S80(07-)	2014	TF-80SD	TCM	Sys. Info.	
S80(07-)	2014	TF-80SD	TCM	Read code	
S80(07-)	2014	TF-80SD	TCM	Clear code	
S80(07-)	2014	TF-80SD	TCM	Data stream	
S80(07-)	2014	TF-80SD	TCM	Actuation	
S80(07-)	2014	TF-80SD	TCM	Special functions	Resetting adaptation
S80(07-)	2014	TF-80SD	TCM	Special functions	Resetting the Transmission fluid change counter
S80(07-)	2014	TF-80SD	TCM	Special functions	Calibration of gear indication
S80(07-)	2014	TF-80SD	TCM	Special functions	Activating of gear indication
S80(07-)	2014	TF-80SD	TCM	Special functions	Control module adaptation
S80(07-)	2014	TG-81SC	TCM	Sys. Info.	
S80(07-)	2014	TG-81SC	TCM	Read code	
S80(07-)	2014	TG-81SC	TCM	Clear code	
S80(07-)	2014	TG-81SC	TCM	Data stream	
S80(07-)	2014	TG-81SC	TCM	Actuation	
S80(07-)	2014	TG-81SC	TCM	Freeze frame	
S80(07-)	2014	TG-81SC	TCM	Special functions	Resetting adaptation
S80(07-)	2014	TG-81SC	TCM	Special functions	Calibration of gear position sensor
S80(07-)	2014	TG-81SC	TCM	Special functions	Activating gear indication
S80(07-)	2014	TG-81SC	TCM	Special functions	Control module adaptation
S80(07-)	2014	TG-81SC	BCM/ABS	Sys. Info.	
S80(07-)	2014	TG-81SC	BCM/ABS	Read code	
S80(07-)	2014	TG-81SC	BCM/ABS	Clear code	
S80(07-)	2014	TG-81SC	BCM/ABS	Data stream	
S80(07-)	2014	TG-81SC	BCM/ABS	Actuation	
S80(07-)	2014	TG-81SC	BCM/ABS	Freeze frame	
S80(07-)	2014	TG-81SC	BCM/ABS	Special functions	Calibration
S80(07-)	2014	TG-81SC	SRS	Sys. Info.	
S80(07-)	2014	TG-81SC	SRS	Read code	

model	year	type	system	function	subfunction
S80(07-)	2014	TG-81SC	SRS	Clear code	
S80(07-)	2014	TG-81SC	SRS	Data stream	
S80(07-)	2014	TG-81SC	SRS	Actuation	
S80(07-)	2014	TG-81SC	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
S80(07-)	2014	TG-81SC	SRS	Special functions	Checking the PAD-light
S80(07-)	2014	TG-81SC	CEM	Sys. Info.	
S80(07-)	2014	TG-81SC	CEM	Read code	
S80(07-)	2014	TG-81SC	CEM	Clear code	
S80(07-)	2014	TG-81SC	CEM	Data stream	
S80(07-)	2014	TG-81SC	CEM	Actuation	
S80(07-)	2014	TG-81SC	CEM	Special functions	Workshop test(TPMS)
S80(07-)	2014	TG-81SC	CEM	Special functions	Reading off power supply position
S80(07-)	2014	TG-81SC	CEM	Special functions	Read-out and resetting alco-lock
S80(07-)	2014	TG-81SC	CEM	Special functions	Reading off alarm cause
S80(07-)	2014	TG-81SC	CEM	Special functions	Activating wipers,front/rear
S80(07-)	2014	TG-81SC	CEM	Special functions	Operating and initiating the roof hatch
S80(07-)	2014	TG-81SC	CEM	Special functions	Restoring supplemental restraint system
S80(07-)	2014	TG-81SC	CEM	Special functions	Setting day and night mode for the instrumentation
S80(07-)	2014	TG-81SC	CEM	Special functions	Activating steering wheel heating
S80(07-)	2014	TG-81SC	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
S80(07-)	2014	TG-81SC	CEM	Special functions	Readout of current from battery monitoring sensor
S80(07-)	2014	TG-81SC	CEM	Special functions	Readout of information stand-by current
S80(07-)	2014	TG-81SC	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
S80(07-)	2014	TG-81SC	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
S80(07-)	2014	TG-81SC	CEM	Special functions	Remote controlled immobilising,status
S80(07-)	2014	TG-81SC	CEM	Special functions	Remote controlled immobilising,cause
S80(07-)	2014	TG-81SC	DIM	Sys. Info.	
S80(07-)	2014	TG-81SC	DIM	Read code	
S80(07-)	2014	TG-81SC	DIM	Clear code	
S80(07-)	2014	TG-81SC	DIM	Data stream	
S80(07-)	2014	TG-81SC	DIM	Actuation	
S80(07-)	2014	TG-81SC	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
S80(07-)	2014	TG-81SC	DIM	Special functions	Read-out of fuel volume
S80(07-)	2014	TG-81SC	DIM	Special functions	Display of oil vehicle speed
S80(07-)	2014	TG-81SC	DIM	Special functions	Resetting Service Bulletin
S80(07-)	2014	TG-81SC	DIM	Special functions	Programming seatbelt reminder in backseat
S80(07-)	2014	TG-81SC	DIM	Special functions	Programming text message,seatbelt reminder
S80(07-)	2014	TG-81SC	DIM	Special functions	Programmed values,Parking Brake Warning
S80(07-)	2014	TG-81SC	PDM	Sys. Info.	
S80(07-)	2014	TG-81SC	PDM	Read code	
S80(07-)	2014	TG-81SC	PDM	Clear code	
S80(07-)	2014	TG-81SC	PDM	Data stream	
S80(07-)	2014	TG-81SC	PDM	Actuation	
S80(07-)	2014	TG-81SC	PDM	Special functions	Initializing the window in the front door,
S80(07-)	2014	TG-81SC	PDM	Special functions	Initializing the window in the rear door,
S80(07-)	2014	TG-81SC	PDM	Special functions	Central lock motors,activating
S80(07-)	2014	TG-81SC	PSM	Sys. Info.	
S80(07-)	2014	TG-81SC	PSM	Read code	
S80(07-)	2014	TG-81SC	PSM	Clear code	
S80(07-)	2014	TG-81SC	PSM	Data stream	
S80(07-)	2014	TG-81SC	PSM	Actuation	
S80(07-)	2014	TG-81SC	PSM	Special functions	Programming the seat memory delay time
S80(07-)	2014	TG-81SC	DDM	Sys. Info.	
S80(07-)	2014	TG-81SC	DDM	Read code	
S80(07-)	2014	TG-81SC	DDM	Clear code	
S80(07-)	2014	TG-81SC	DDM	Data stream	
S80(07-)	2014	TG-81SC	DDM	Actuation	
S80(07-)	2014	TG-81SC	DDM	Special functions	Initializing the window in the front door.
S80(07-)	2014	TG-81SC	DDM	Special functions	Initializing the window in the rear door.
S80(07-)	2014	TG-81SC	DDM	Special functions	Central lock motors,activating
S80(07-)	2014	TG-81SC	CCM	Sys. Info.	
S80(07-)	2014	TG-81SC	CCM	Read code	
S80(07-)	2014	TG-81SC	CCM	Clear code	
S80(07-)	2014	TG-81SC	CCM	Data stream	
S80(07-)	2014	TG-81SC	CCM	Actuation	
S80(07-)	2014	TG-81SC	CCM	Special functions	Reading off programmed values
S80(07-)	2014	TG-81SC	CCM	Special functions	Calibrating the Climate Control Module(CCM)
S80(07-)	2014	TG-81SC	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
S80(07-)	2014	TG-81SC	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
S80(07-)	2014	TG-81SC	CCM	Special functions	Programming the evaporator,climate control module(CCM)
S80(07-)	2014	TG-81SC	CCM	Special functions	Airflow setting in rear passenger compartment

model	year	type	system	function	subfunction
S80(07-)	2014	TG-81SC	CCM	Special functions	Programming the climate control module(CCM)
S80(07-)	2014	TG-81SC	CCM	Special functions	Rear view mirror light sensitivity
S80(07-)	2014	TG-81SC	AUD	Sys. Info.	
S80(07-)	2014	TG-81SC	AUD	Read code	
S80(07-)	2014	TG-81SC	AUD	Clear code	
S80(07-)	2014	TG-81SC	AUD	Special functions	Checking loudspeakers
S80(07-)	2014	TG-81SC	AUD	Special functions	Checking headphone socket
S80(07-)	2014	TG-81SC	DEM	Sys. Info.	
S80(07-)	2014	TG-81SC	DEM	Read code	
S80(07-)	2014	TG-81SC	DEM	Clear code	
S80(07-)	2014	TG-81SC	DEM	Data stream	
S80(07-)	2014	TG-81SC	DEM	Special functions	Calibration of differential electronic module (DEM).
S80(07-)	2014	TG-81SC	ICM	Sys. Info.	
S80(07-)	2014	TG-81SC	ICM	Read code	
S80(07-)	2014	TG-81SC	ICM	Clear code	
S80(07-)	2014	TG-81SC	ICM	Data stream	
S80(07-)	2014	TG-81SC	ICM	Actuation	
S80(07-)	2014	TG-81SC	SAS	Sys. Info.	
S80(07-)	2014	TG-81SC	SAS	Read code	
S80(07-)	2014	TG-81SC	SAS	Clear code	
S80(07-)	2014	TG-81SC	SAS	Data stream	
S80(07-)	2014	TG-81SC	SAS	Actuation	
S80(07-)	2014	TG-81SC	PAM	Sys. Info.	
S80(07-)	2014	TG-81SC	PAM	Read code	
S80(07-)	2014	TG-81SC	PAM	Clear code	
S80(07-)	2014	TG-81SC	PAM	Data stream	
S80(07-)	2014	TG-81SC	IAM	Sys. Info.	
S80(07-)	2014	TG-81SC	IAM	Read code	
S80(07-)	2014	TG-81SC	IAM	Clear code	
S80(07-)	2014	TG-81SC	IAM	Data stream	
S80(07-)	2014	TG-81SC	SUM	Sys. Info.	
S80(07-)	2014	TG-81SC	SUM	Read code	
S80(07-)	2014	TG-81SC	SUM	Clear code	
S80(07-)	2014	TG-81SC	SUM	Data stream	
S80(07-)	2014	TG-81SC	SUM	Special functions	Calibration
S80(07-)	2014	TG-81SC	PBM	Sys. Info.	
S80(07-)	2014	TG-81SC	PBM	Read code	
S80(07-)	2014	TG-81SC	PBM	Clear code	
S80(07-)	2014	TG-81SC	PBM	Data stream	
S80(07-)	2014	TG-81SC	PBM	Special functions	Calibration angle sensor
S80(07-)	2014	TG-81SC	PBM	Special functions	Activation and service
S80(07-)	2014	TG-81SC	PBM	Special functions	Resetting the clutch pedal counter
S80(07-)	2014	TG-81SC	CPM	Sys. Info.	
S80(07-)	2014	TG-81SC	CPM	Read code	
S80(07-)	2014	TG-81SC	CPM	Clear code	
S80(07-)	2014	TG-81SC	CPM	Data stream	
S80(07-)	2014	TG-81SC	CPM	Special functions	Identification of the heater
S80(07-)	2014	TG-81SC	KVM	Sys. Info.	
S80(07-)	2014	TG-81SC	KVM	Read code	
S80(07-)	2014	TG-81SC	KVM	Clear code	
S80(07-)	2014	TG-81SC	KVM	Data stream	
S80(07-)	2014	TG-81SC	KVM	Special functions	Checking all antennas
S80(07-)	2014	TG-81SC	KVM	Special functions	Check the communication with the remote control receiver
S80(07-)	2014	TG-81SC	KVM	Special functions	Remote control
S80(07-)	2014	TG-81SC	KVM	Special functions	Test of internal memory
S80(07-)	2014	TG-81SC	KVM	Special functions	Activation of quick-lock motors
S80(07-)	2014	TG-81SC	FSM	Sys. Info.	
S80(07-)	2014	TG-81SC	FSM	Read code	
S80(07-)	2014	TG-81SC	FSM	Clear code	
S80(07-)	2014	TG-81SC	FSM	Data stream	
S80(07-)	2014	TG-81SC	FSM	Special functions	Calibration of radar and camera.
S80(07-)	2014	TG-81SC	FSM	Special functions	Activating heating coil,FSM
S80(07-)	2014	TG-81SC	FSM	Special functions	Activating of the indicator for visual collision warning
S80(07-)	2014	TG-81SC	FSM	Special functions	Activating the internal test procedures
S80(07-)	2014	TG-81SC	RDAR	Sys. Info.	
S80(07-)	2014	TG-81SC	RDAR	Read code	
S80(07-)	2014	TG-81SC	RDAR	Clear code	
S80(07-)	2014	TG-81SC	CVM	Sys. Info.	
S80(07-)	2014	TG-81SC	CVM	Read code	
S80(07-)	2014	TG-81SC	CVM	Clear code	
S80(07-)	2014	TG-81SC	DABM	Sys. Info.	
S80(07-)	2014	TG-81SC	DABM	Read code	
S80(07-)	2014	TG-81SC	DABM	Clear code	
S80(07-)	2014	TG-81SC	PAC	Sys. Info.	
S80(07-)	2014	TG-81SC	PAC	Read code	
S80(07-)	2014	TG-81SC	PAC	Clear code	
S80(07-)	2014	TG-81SC	PAC	Data stream	

model	year	type	system	function	subfunction	
S80(07-)		2014	TG-81SC	TRM	Sys. Info.	
S80(07-)		2014	TG-81SC	TRM	Read code	
S80(07-)		2014	TG-81SC	TRM	Clear code	
S80(07-)		2014	TG-81SC	TRM	Data stream	
S80(07-)		2014	TG-81SC	PSCM	Sys. Info.	
S80(07-)		2014	TG-81SC	PSCM	Read code	
S80(07-)		2014	TG-81SC	PSCM	Clear code	
S80(07-)		2014	TG-81SC	PSCM	Data stream	
S80(07-)		2014	TG-81SC	PHM	Sys. Info.	
S80(07-)		2014	TG-81SC	PHM	Read code	
S80(07-)		2014	TG-81SC	PHM	Clear code	
S80(07-)		2014	TG-81SC	PHM	Data stream	
S80(07-)		2014	TG-81SC	PHM	Special functions	Reinstalling the reserve battery
S80(07-)		2014	TG-81SC	TVM	Sys. Info.	
S80(07-)		2014	TG-81SC	TVM	Read code	
S80(07-)		2014	TG-81SC	TVM	Clear code	
S80(07-)		2014	TG-81SC	RSE	Sys. Info.	
S80(07-)		2014	TG-81SC	RSE	Read code	
S80(07-)		2014	TG-81SC	RSE	Clear code	
S80(07-)		2014	TG-81SC	RSE	Data stream	
S80(07-)		2014	TG-81SC	RSE	Special functions	Checking AUK-panel.
S80(07-)	2015-2016		B6324S5	ECM	Sys. Info.	
S80(07-)	2015-2016		B6324S5	ECM	Read code	
S80(07-)	2015-2016		B6324S5	ECM	Clear code	
S80(07-)	2015-2016		B6324S5	ECM	Data stream	
S80(07-)	2015-2016		B6324S5	ECM	Actuation	
S80(07-)	2015-2016		B6324S5	ECM	Special functions	Resetting the adaptation values
S80(07-)	2015-2016		B6324S4	ECM	Sys. Info.	
S80(07-)	2015-2016		B6324S4	ECM	Read code	
S80(07-)	2015-2016		B6324S4	ECM	Clear code	
S80(07-)	2015-2016		B6324S4	ECM	Data stream	
S80(07-)	2015-2016		B6324S4	ECM	Actuation	
S80(07-)	2015-2016		B6324S4	ECM	Special functions	Resetting the adaptation values
S80(07-)	2015-2016		B6304T4	ECM	Sys. Info.	
S80(07-)	2015-2016		B6304T4	ECM	Read code	
S80(07-)	2015-2016		B6304T4	ECM	Clear code	
S80(07-)	2015-2016		B6304T4	ECM	Data stream	
S80(07-)	2015-2016		B6304T4	ECM	Actuation	
S80(07-)	2015-2016		B6304T4	ECM	Freeze frame	
S80(07-)	2015-2016		B6304T4	ECM	Special functions	Resetting the adaptation values
S80(07-)	2015-2016		B4164T2	ECM	Sys. Info.	
S80(07-)	2015-2016		B4164T2	ECM	Read code	
S80(07-)	2015-2016		B4164T2	ECM	Clear code	
S80(07-)	2015-2016		B4164T2	ECM	Data stream	
S80(07-)	2015-2016		B4164T2	ECM	Actuation	
S80(07-)	2015-2016		B4164T2	ECM	Special functions	Adaptation of the throttle unit
S80(07-)	2015-2016		B4164T2	ECM	Special functions	Resetting the adaptation values
S80(07-)	2015-2016		B4164T2	ECM	Special functions	Adaptation of oil level sensor
S80(07-)	2015-2016		B4164T2	ECM	Special functions	Adaptation of camshafts
S80(07-)	2015-2016		B4164T2	ECM	Special functions	Checking injectors
S80(07-)	2015-2016		B4204T9	ECM	Sys. Info.	
S80(07-)	2015-2016		B4204T9	ECM	Read code	
S80(07-)	2015-2016		B4204T9	ECM	Clear code	
S80(07-)	2015-2016		B4204T9	ECM	Data stream	
S80(07-)	2015-2016		B4204T9	ECM	Special functions	Test of fuel pressure regulation,low pressure side
S80(07-)	2015-2016		B4204T9	ECM	Special functions	Test of fuel pressure regulation,high pressure side
S80(07-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations and wear counter for supercharger
S80(07-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
S80(07-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
S80(07-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
S80(07-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
S80(07-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
S80(07-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for cylinder balancing
S80(07-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for the thrittle
S80(07-)	2015-2016		B4204T9	ECM	Special functions	Adaptation of neutral position sensor
S80(07-)	2015-2016		D5244T15	Diesel Eng	Sys. Info.	
S80(07-)	2015-2016		D5244T15	Diesel Eng	Read code	
S80(07-)	2015-2016		D5244T15	Diesel Eng	Clear code	
S80(07-)	2015-2016		D5244T15	Diesel Eng	Data stream	
S80(07-)	2015-2016		D5244T15	Diesel Eng	Actuation	
S80(07-)	2015-2016		D5244T15	Diesel Eng	Freeze frame	
S80(07-)	2015-2016		D5244T15	Diesel Eng	Special functions	Resetting counter particle filter
S80(07-)	2015-2016		D5244T15	Diesel Eng	Special functions	Checking injectors
S80(07-)	2015-2016		D5244T15	Diesel Eng	Special functions	Adaptation of throttle module
S80(07-)	2015-2016		D5244T15	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve

model	year	type	system	function	subfunction
S80(07-)	2015-2016	D5244T15	Diesel Eng	Special functions	Checking the oil level
S80(07-)	2015-2016	D4162T	Diesel Eng	Sys. Info.	
S80(07-)	2015-2016	D4162T	Diesel Eng	Read code	
S80(07-)	2015-2016	D4162T	Diesel Eng	Clear code	
S80(07-)	2015-2016	D4162T	Diesel Eng	Data stream	
S80(07-)	2015-2016	D4162T	Diesel Eng	Actuation	
S80(07-)	2015-2016	D4162T	Diesel Eng	Freeze frame	
S80(07-)	2015-2016	D4162T	Diesel Eng	Special functions	Adaptation of neutral position sensor
S80(07-)	2015-2016	D4204T5	Diesel Eng	Sys. Info.	
S80(07-)	2015-2016	D4204T5	Diesel Eng	Read code	
S80(07-)	2015-2016	D4204T5	Diesel Eng	Clear code	
S80(07-)	2015-2016	D4204T5	Diesel Eng	Data stream	
S80(07-)	2015-2016	D4204T5	Diesel Eng	Actuation	
S80(07-)	2015-2016	D4204T5	Diesel Eng	Freeze frame	
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Test of fuel pressure regulation,high pressure side
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Test of fuel flow regulation valve
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Testing the fuel pressure control valve
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for fuel flow regulation valve
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for swirl damper
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for turbocharger control
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the EGR valve
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the diesel particle filter
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the particle filter differential pressure sensor
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for front heated oxygen sensor
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for rear heated oxygen sensor
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the injectors
S80(07-)	2015-2016	D4204T5	Diesel Eng	Special functions	Adaptation of neutral position sensor
S80(07-)	2015-2016	D4204T5	CEM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	CEM	Read code	
S80(07-)	2015-2016	D4204T5	CEM	Clear code	
S80(07-)	2015-2016	D4204T5	CEM	Data stream	
S80(07-)	2015-2016	D4204T5	CEM	Actuation	
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Workshop test(TPMS)
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Reading off power supply position
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Read-out and resetting alco-lock
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Reading off alarm cause
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Activating wipers,front/rear
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Ejection of key
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Operating and initating the roof hatch
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Restoring supplemental restraint system
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Setting day and night mode for the instrumentation
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Activating steering wheel heating
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Readout of current from battery monitoring sensor
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Readout of information stand-by current
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Remote controlled immobilising,status
S80(07-)	2015-2016	D4204T5	CEM	Special functions	Remote controlled immobilising,cause
S80(07-)	2015-2016	D4204T5	CCM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	CCM	Read code	
S80(07-)	2015-2016	D4204T5	CCM	Clear code	
S80(07-)	2015-2016	D4204T5	CCM	Data stream	
S80(07-)	2015-2016	D4204T5	CCM	Actuation	
S80(07-)	2015-2016	D4204T5	CCM	Special functions	Reading off programmed values
S80(07-)	2015-2016	D4204T5	CCM	Special functions	Calibrating the Climate Control Module(CCM)
S80(07-)	2015-2016	D4204T5	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
S80(07-)	2015-2016	D4204T5	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
S80(07-)	2015-2016	D4204T5	CCM	Special functions	Programming the evaporator,climate control module (CCM)
S80(07-)	2015-2016	D4204T5	CCM	Special functions	Airflow setting in rear passenger compartment
S80(07-)	2015-2016	D4204T5	CCM	Special functions	Programming the climate control module(CCM)
S80(07-)	2015-2016	D4204T5	CCM	Special functions	Rear view mirror light sensitivity
S80(07-)	2015-2016	D4204T5	ICM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	ICM	Read code	
S80(07-)	2015-2016	D4204T5	ICM	Clear code	
S80(07-)	2015-2016	D4204T5	ICM	Data stream	
S80(07-)	2015-2016	D4204T5	ICM	Special functions	Communication on MOST
S80(07-)	2015-2016	D4204T5	TRM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	TRM	Read code	
S80(07-)	2015-2016	D4204T5	TRM	Clear code	
S80(07-)	2015-2016	D4204T5	TRM	Data stream	



model	year	type	system	function	subfunction
S80(07-)	2015-2016	D4204T5	AUD	Sys. Info.	
S80(07-)	2015-2016	D4204T5	AUD	Read code	
S80(07-)	2015-2016	D4204T5	AUD	Clear code	
S80(07-)	2015-2016	D4204T5	AUD	Special functions	Checking headphone socket
S80(07-)	2015-2016	D4204T5	AUD	Special functions	Checking loudspeakers
S80(07-)	2015-2016	D4204T5	ABS	Sys. Info.	
S80(07-)	2015-2016	D4204T5	ABS	Read code	
S80(07-)	2015-2016	D4204T5	ABS	Clear code	
S80(07-)	2015-2016	D4204T5	ABS	Data stream	
S80(07-)	2015-2016	D4204T5	ABS	Actuation	
S80(07-)	2015-2016	D4204T5	ABS	Freeze frame	
S80(07-)	2015-2016	D4204T5	ABS	Special functions	Calibration
S80(07-)	2015-2016	D4204T5	ABS	Special functions	Restart of the brake control module (BCM)
S80(07-)	2015-2016	D4204T5	CPM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	CPM	Read code	
S80(07-)	2015-2016	D4204T5	CPM	Clear code	
S80(07-)	2015-2016	D4204T5	CPM	Data stream	
S80(07-)	2015-2016	D4204T5	CPM	Special functions	Identification of the heater
S80(07-)	2015-2016	D4204T5	CVM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	CVM	Read code	
S80(07-)	2015-2016	D4204T5	CVM	Clear code	
S80(07-)	2015-2016	D4204T5	DABM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	DABM	Read code	
S80(07-)	2015-2016	D4204T5	DABM	Clear code	
S80(07-)	2015-2016	D4204T5	DABM	Data stream	
S80(07-)	2015-2016	D4204T5	DDM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	DDM	Read code	
S80(07-)	2015-2016	D4204T5	DDM	Clear code	
S80(07-)	2015-2016	D4204T5	DDM	Data stream	
S80(07-)	2015-2016	D4204T5	DDM	Actuation	
S80(07-)	2015-2016	D4204T5	DDM	Special functions	Initializing the window in the front door.
S80(07-)	2015-2016	D4204T5	DDM	Special functions	Initializing the window in the rear door.
S80(07-)	2015-2016	D4204T5	DDM	Special functions	Central lock motors,activating
S80(07-)	2015-2016	D4204T5	DEM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	DEM	Read code	
S80(07-)	2015-2016	D4204T5	DEM	Clear code	
S80(07-)	2015-2016	D4204T5	DEM	Data stream	
S80(07-)	2015-2016	D4204T5	DEM	Special functions	Calibration of differential electronic module (DEM).
S80(07-)	2015-2016	D4204T5	DIM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	DIM	Read code	
S80(07-)	2015-2016	D4204T5	DIM	Clear code	
S80(07-)	2015-2016	D4204T5	DIM	Data stream	
S80(07-)	2015-2016	D4204T5	DIM	Special functions	Resetting the service reminder indicator (SRI)
S80(07-)	2015-2016	D4204T5	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
S80(07-)	2015-2016	D4204T5	DIM	Special functions	Read-out of fuel volumeDisplay of vehicle speed
S80(07-)	2015-2016	D4204T5	DIM	Special functions	Programming seatbelt reminder in backseat
S80(07-)	2015-2016	D4204T5	DIM	Special functions	Programming text message,seatbelt reminder
S80(07-)	2015-2016	D4204T5	FSM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	FSM	Read code	
S80(07-)	2015-2016	D4204T5	FSM	Clear code	
S80(07-)	2015-2016	D4204T5	FSM	Data stream	
S80(07-)	2015-2016	D4204T5	FSM	Special functions	Calibration of radar and camera.
S80(07-)	2015-2016	D4204T5	FSM	Special functions	Activating heating coil,FSM
S80(07-)	2015-2016	D4204T5	FSM	Special functions	Activating of the indicator for visual collision warning
S80(07-)	2015-2016	D4204T5	FSM	Special functions	Activating the internal test procedures
S80(07-)	2015-2016	D4204T5	HLDf	Sys. Info.	
S80(07-)	2015-2016	D4204T5	HLDf	Read code	
S80(07-)	2015-2016	D4204T5	HLDf	Clear code	
S80(07-)	2015-2016	D4204T5	HLDf	Data stream	
S80(07-)	2015-2016	D4204T5	IAM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	IAM	Read code	
S80(07-)	2015-2016	D4204T5	IAM	Clear code	
S80(07-)	2015-2016	D4204T5	IAM	Data stream	
S80(07-)	2015-2016	D4204T5	KVM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	KVM	Read code	
S80(07-)	2015-2016	D4204T5	KVM	Clear code	
S80(07-)	2015-2016	D4204T5	KVM	Data stream	
S80(07-)	2015-2016	D4204T5	KVM	Special functions	Checking all antennas
S80(07-)	2015-2016	D4204T5	KVM	Special functions	Check the communication with the remote control receiver
S80(07-)	2015-2016	D4204T5	KVM	Special functions	Remote control
S80(07-)	2015-2016	D4204T5	KVM	Special functions	Test of internal memory
S80(07-)	2015-2016	D4204T5	KVM	Special functions	Activation of quick-lock motors
S80(07-)	2015-2016	D4204T5	PAC	Sys. Info.	
S80(07-)	2015-2016	D4204T5	PAC	Read code	
S80(07-)	2015-2016	D4204T5	PAC	Clear code	
S80(07-)	2015-2016	D4204T5	PAC	Data stream	

model	year	type	system	function	subfunction
S80(07-)	2015-2016	D4204T5	PAM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	PAM	Read code	
S80(07-)	2015-2016	D4204T5	PAM	Clear code	
S80(07-)	2015-2016	D4204T5	PAM	Data stream	
S80(07-)	2015-2016	D4204T5	PBM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	PBM	Read code	
S80(07-)	2015-2016	D4204T5	PBM	Clear code	
S80(07-)	2015-2016	D4204T5	PBM	Data stream	
S80(07-)	2015-2016	D4204T5	PBM	Special functions	Calibration angle sensor
S80(07-)	2015-2016	D4204T5	PBM	Special functions	Activation and service
S80(07-)	2015-2016	D4204T5	PBM	Special functions	Resetting the clutch pedal counter
S80(07-)	2015-2016	D4204T5	PDM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	PDM	Read code	
S80(07-)	2015-2016	D4204T5	PDM	Clear code	
S80(07-)	2015-2016	D4204T5	PDM	Data stream	
S80(07-)	2015-2016	D4204T5	PDM	Actuation	
S80(07-)	2015-2016	D4204T5	PDM	Special functions	Initializing the window in the front door
S80(07-)	2015-2016	D4204T5	PDM	Special functions	Initializing the window in the rear door
S80(07-)	2015-2016	D4204T5	PDM	Special functions	Central lock motors,activating
S80(07-)	2015-2016	D4204T5	PHM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	PHM	Read code	
S80(07-)	2015-2016	D4204T5	PHM	Clear code	
S80(07-)	2015-2016	D4204T5	PHM	Data stream	
S80(07-)	2015-2016	D4204T5	PHM	Special functions	Reinstalling the reserve battery
S80(07-)	2015-2016	D4204T5	PSCM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	PSCM	Read code	
S80(07-)	2015-2016	D4204T5	PSCM	Clear code	
S80(07-)	2015-2016	D4204T5	PSCM	Data stream	
S80(07-)	2015-2016	D4204T5	PSM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	PSM	Read code	
S80(07-)	2015-2016	D4204T5	PSM	Clear code	
S80(07-)	2015-2016	D4204T5	PSM	Data stream	
S80(07-)	2015-2016	D4204T5	PSM	Actuation	
S80(07-)	2015-2016	D4204T5	PSM	Special functions	Programming the seat memory delay time
S80(07-)	2015-2016	D4204T5	RDAR	Sys. Info.	
S80(07-)	2015-2016	D4204T5	RDAR	Read code	
S80(07-)	2015-2016	D4204T5	RDAR	Clear code	
S80(07-)	2015-2016	D4204T5	RSE	Sys. Info.	
S80(07-)	2015-2016	D4204T5	RSE	Read code	
S80(07-)	2015-2016	D4204T5	RSE	Clear code	
S80(07-)	2015-2016	D4204T5	RSE	Data stream	
S80(07-)	2015-2016	D4204T5	RSE	Special functions	Checking AUK-panel.
S80(07-)	2015-2016	D4204T5	SAS	Sys. Info.	
S80(07-)	2015-2016	D4204T5	SAS	Read code	
S80(07-)	2015-2016	D4204T5	SAS	Clear code	
S80(07-)	2015-2016	D4204T5	SAS	Data stream	
S80(07-)	2015-2016	D4204T5	SRS	Sys. Info.	
S80(07-)	2015-2016	D4204T5	SRS	Read code	
S80(07-)	2015-2016	D4204T5	SRS	Clear code	
S80(07-)	2015-2016	D4204T5	SRS	Data stream	
S80(07-)	2015-2016	D4204T5	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
S80(07-)	2015-2016	D4204T5	SRS	Special functions	Checking the PAD-light
S80(07-)	2015-2016	D4204T5	SUM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	SUM	Read code	
S80(07-)	2015-2016	D4204T5	SUM	Clear code	
S80(07-)	2015-2016	D4204T5	SUM	Data stream	
S80(07-)	2015-2016	D4204T5	SUM	Special functions	Calibration
S80(07-)	2015-2016	D4204T5	TCM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	TCM	Read code	
S80(07-)	2015-2016	D4204T5	TCM	Clear code	
S80(07-)	2015-2016	D4204T5	TCM	Data stream	
S80(07-)	2015-2016	D4204T5	TCM	Freeze frame	
S80(07-)	2015-2016	D4204T5	TCM	Special functions	Resetting adaptation
S80(07-)	2015-2016	D4204T5	TCM	Special functions	Resetting the Transmission fluid change counter
S80(07-)	2015-2016	D4204T5	TCM	Special functions	Calibration of gear indication
S80(07-)	2015-2016	D4204T5	TCM	Special functions	Activating of gear indication
S80(07-)	2015-2016	D4204T5	TCM	Special functions	Control module adaptation
S80(07-)	2015-2016	D4204T5	TVM	Sys. Info.	
S80(07-)	2015-2016	D4204T5	TVM	Read code	
S80(07-)	2015-2016	D4204T5	TVM	Clear code	
S90		1997	Engine 1	ECM	Sys. Info.
S90		1997	Engine 1	ECM	Read code
S90		1997	Engine 1	ECM	Clear code
S90		1997	Engine 1	ECM	Data stream
S90		1997	MOTRONIC 4	ECM	Sys. Info.
S90		1997	MOTRONIC 4	ECM	Read code
S90		1997	MOTRONIC 4	ECM	Clear code
S90		1997	MOTRONIC 4	ECM	Data stream

model	year	type	system	function	subfunction
S90	1997	MOTRONIC 4	TCM	Sys. Info.	
S90	1997	MOTRONIC 4	TCM	Read code	
S90	1997	MOTRONIC 4	TCM	Clear code	
S90	1997	MOTRONIC 4	TCM	Data stream	
S90	1997	MOTRONIC 4	SRS	Sys. Info.	
S90	1997	MOTRONIC 4	SRS	Read code	
S90	1997	MOTRONIC 4	SRS	Clear code	
S90	1997	MOTRONIC 4	SRS	Data stream	
S90	1997	MOTRONIC 4	IC	Sys. Info.	
S90	1997	MOTRONIC 4	IC	Special functions	Oil lamp reset(*)
S90	1997	MOTRONIC 4	ABS	Sys. Info.	
S90	1997	MOTRONIC 4	ABS	Read code	
S90	1997	MOTRONIC 4	ABS	Clear code	
S90	1997	MOTRONIC 4	ABS	Data stream	
S90	1997	MOTRONIC 4	ABS	Actuation	
S90	1997	MOTRONIC 4	Immobilizer	Sys. Info.	
S90	1997	MOTRONIC 4	Immobilizer	Read code	
S90	1997	MOTRONIC 4	Immobilizer	Clear code	
S90	1997	MOTRONIC 4	Immobilizer	Data stream	
S90	1997	MOTRONIC 4	PSL	Sys. Info.	
S90	1997	MOTRONIC 4	PSL	Read code	
S90	1997	MOTRONIC 4	PSL	Clear code	
S90	1997	MOTRONIC 4	PSL	Data stream	
S90	1997	MOTRONIC 4	PSR	Sys. Info.	
S90	1997	MOTRONIC 4	PSR	Read code	
S90	1997	MOTRONIC 4	PSR	Clear code	
S90	1997	MOTRONIC 4	PSR	Data stream	
S90	1997	MOTRONIC 4	RTI	Sys. Info.	
S90	1997	MOTRONIC 4	RTI	Read code	
S90	1997	MOTRONIC 4	RTI	Clear code	
S90	1997	MOTRONIC 4	RTI	Data stream	
S90	1997	MOTRONIC 4	RTI	Actuation	
S90	1998	Engine 1	ECM	Sys. Info.	
S90	1998	Engine 1	ECM	Read code	
S90	1998	Engine 1	ECM	Clear code	
S90	1998	Engine 1	ECM	Data stream	
S90	1998	MOTRONIC 4	ECM	Sys. Info.	
S90	1998	MOTRONIC 4	ECM	Read code	
S90	1998	MOTRONIC 4	ECM	Clear code	
S90	1998	MOTRONIC 4	ECM	Data stream	
S90	1998	MOTRONIC 4	TCM	Sys. Info.	
S90	1998	MOTRONIC 4	TCM	Read code	
S90	1998	MOTRONIC 4	TCM	Clear code	
S90	1998	MOTRONIC 4	TCM	Data stream	
S90	1998	MOTRONIC 4	SRS	Sys. Info.	
S90	1998	MOTRONIC 4	SRS	Read code	
S90	1998	MOTRONIC 4	SRS	Clear code	
S90	1998	MOTRONIC 4	SRS	Data stream	
S90	1998	MOTRONIC 4	IC	Sys. Info.	
S90	1998	MOTRONIC 4	IC	Special functions	Oil lamp reset(*)
S90	1998	MOTRONIC 4	ABS	Sys. Info.	
S90	1998	MOTRONIC 4	ABS	Read code	
S90	1998	MOTRONIC 4	ABS	Clear code	
S90	1998	MOTRONIC 4	ABS	Data stream	
S90	1998	MOTRONIC 4	ABS	Actuation	
S90	1998	MOTRONIC 4	Immobilizer	Sys. Info.	
S90	1998	MOTRONIC 4	Immobilizer	Read code	
S90	1998	MOTRONIC 4	Immobilizer	Clear code	
S90	1998	MOTRONIC 4	Immobilizer	Data stream	
S90	1998	MOTRONIC 4	PSL	Sys. Info.	
S90	1998	MOTRONIC 4	PSL	Read code	
S90	1998	MOTRONIC 4	PSL	Clear code	
S90	1998	MOTRONIC 4	PSL	Data stream	
S90	1998	MOTRONIC 4	PSR	Sys. Info.	
S90	1998	MOTRONIC 4	PSR	Read code	
S90	1998	MOTRONIC 4	PSR	Clear code	
S90	1998	MOTRONIC 4	PSR	Data stream	
S90	1998	MOTRONIC 4	RTI	Sys. Info.	
S90	1998	MOTRONIC 4	RTI	Read code	
S90	1998	MOTRONIC 4	RTI	Clear code	
S90	1998	MOTRONIC 4	RTI	Data stream	
S90	1998	MOTRONIC 4	RTI	Actuation	
V70(-00)	1998	MOTRONIC 4	ShortTest	Special functions	search all system and DTC(s) of vehicle
V70(-00)	1997	MOTRONIC 4	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(-00)	1997	Fenix 2	ECM	Read code	
V70(-00)	1997	Fenix 2	ECM	Clear code	
V70(-00)	1997	Fenix 2	ECM	Data stream	

model	year	type	system	function	subfunction
V70(-00)	1997	Motronic 4	ECM	Sys. Info.	
V70(-00)	1997	Motronic 4	ECM	Read code	
V70(-00)	1997	Motronic 4	ECM	Clear code	
V70(-00)	1997	Motronic 4	ECM	Data stream	
V70(-00)	1997	D5252T MSA 7	ECM	Sys. Info.	
V70(-00)	1997	D5252T MSA 7	ECM	Read code	
V70(-00)	1997	D5252T MSA 7	ECM	Clear code	
V70(-00)	1997	D5252T MSA 7	ECM	Data stream	
V70(-00)	1997	AW50-42	TCM	Sys. Info.	
V70(-00)	1997	AW50-42	TCM	Read code	
V70(-00)	1997	AW50-42	TCM	Clear code	
V70(-00)	1997	AW50-42	TCM	Data stream	
V70(-00)	1997	AW42 AWD	TCM	Sys. Info.	
V70(-00)	1997	AW42 AWD	TCM	Read code	
V70(-00)	1997	AW42 AWD	TCM	Clear code	
V70(-00)	1997	AW42 AWD	TCM	Data stream	
V70(-00)	1997	AW42 AWD	ABS	Sys. Info.	
V70(-00)	1997	AW42 AWD	ABS	Read code	
V70(-00)	1997	AW42 AWD	ABS	Clear code	
V70(-00)	1997	AW42 AWD	ABS	Data stream	
V70(-00)	1997	AW42 AWD	SRS	Sys. Info.	
V70(-00)	1997	AW42 AWD	SRS	Read code	
V70(-00)	1997	AW42 AWD	SRS	Clear code	
V70(-00)	1997	AW42 AWD	SRS	Data stream	
V70(-00)	1997	AW42 AWD	Combi	Sys. Info.	
V70(-00)	1997	AW42 AWD	Combi	Read code	
V70(-00)	1997	AW42 AWD	Combi	Clear code	
V70(-00)	1997	AW42 AWD	Combi	Data stream	
V70(-00)	1997	AW42 AWD	Combi	Special functions	Oil lamp reset(*)
V70(-00)	1997	AW42 AWD	Immobilizer	Sys. Info.	
V70(-00)	1997	AW42 AWD	Immobilizer	Read code	
V70(-00)	1997	AW42 AWD	Immobilizer	Clear code	
V70(-00)	1997	AW42 AWD	Immobilizer	Data stream	
V70(-00)	1997	AW42 AWD	VGLA	Sys. Info.	
V70(-00)	1997	AW42 AWD	VGLA	Read code	
V70(-00)	1997	AW42 AWD	VGLA	Clear code	
V70(-00)	1997	AW42 AWD	PSL	Sys. Info.	
V70(-00)	1997	AW42 AWD	PSL	Read code	
V70(-00)	1997	AW42 AWD	PSL	Clear code	
V70(-00)	1997	AW42 AWD	PSL	Data stream	
V70(-00)	1997	AW42 AWD	PSR	Sys. Info.	
V70(-00)	1997	AW42 AWD	PSR	Read code	
V70(-00)	1997	AW42 AWD	PSR	Clear code	
V70(-00)	1997	AW42 AWD	PSR	Data stream	
V70(-00)	1997	AW42 AWD	CPM	Sys. Info.	
V70(-00)	1997	AW42 AWD	CPM	Read code	
V70(-00)	1997	AW42 AWD	CPM	Clear code	
V70(-00)	1997	AW42 AWD	CPM	Data stream	
V70(-00)	1997	AW42 AWD	CPM	Actuation	
V70(-00)	1997	AW42 AWD	RTI	Sys. Info.	
V70(-00)	1997	AW42 AWD	RTI	Read code	
V70(-00)	1997	AW42 AWD	RTI	Clear code	
V70(-00)	1997	AW42 AWD	RTI	Data stream	
V70(-00)	1997	AW42 AWD	RTI	Actuation	
V70(-00)	1998	AW42 AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(-00)	1998	Fenix 2	ECM	Read code	
V70(-00)	1998	Fenix 2	ECM	Clear code	
V70(-00)	1998	Fenix 2	ECM	Data stream	
V70(-00)	1998	Motronic 4	ECM	Sys. Info.	
V70(-00)	1998	Motronic 4	ECM	Read code	
V70(-00)	1998	Motronic 4	ECM	Clear code	
V70(-00)	1998	Motronic 4	ECM	Data stream	
V70(-00)	1998	D5252T MSA 7	ECM	Sys. Info.	
V70(-00)	1998	D5252T MSA 7	ECM	Read code	
V70(-00)	1998	D5252T MSA 7	ECM	Clear code	
V70(-00)	1998	D5252T MSA 7	ECM	Data stream	
V70(-00)	1998	AW50-42	TCM	Sys. Info.	
V70(-00)	1998	AW50-42	TCM	Read code	
V70(-00)	1998	AW50-42	TCM	Clear code	

model	year	type	system	function	subfunction
V70(-00)		1998AW50-42	TCM	Data stream	
V70(-00)		1998AW42 AWD	TCM	Sys. Info.	
V70(-00)		1998AW42 AWD	TCM	Read code	
V70(-00)		1998AW42 AWD	TCM	Clear code	
V70(-00)		1998AW42 AWD	TCM	Data stream	
V70(-00)		1998AW42 AWD	ABS	Sys. Info.	
V70(-00)		1998AW42 AWD	ABS	Read code	
V70(-00)		1998AW42 AWD	ABS	Clear code	
V70(-00)		1998AW42 AWD	ABS	Data stream	
V70(-00)		1998AW42 AWD	SRS	Sys. Info.	
V70(-00)		1998AW42 AWD	SRS	Read code	
V70(-00)		1998AW42 AWD	SRS	Clear code	
V70(-00)		1998AW42 AWD	SRS	Data stream	
V70(-00)		1998AW42 AWD	Combi	Sys. Info.	
V70(-00)		1998AW42 AWD	Combi	Read code	
V70(-00)		1998AW42 AWD	Combi	Clear code	
V70(-00)		1998AW42 AWD	Combi	Data stream	
V70(-00)		1998AW42 AWD	Combi	Special functions	Oil lamp reset(*)
V70(-00)		1998AW42 AWD	Immobilizer	Sys. Info.	
V70(-00)		1998AW42 AWD	Immobilizer	Read code	
V70(-00)		1998AW42 AWD	Immobilizer	Clear code	
V70(-00)		1998AW42 AWD	Immobilizer	Data stream	
V70(-00)		1998AW42 AWD	VGLA	Sys. Info.	
V70(-00)		1998AW42 AWD	VGLA	Read code	
V70(-00)		1998AW42 AWD	VGLA	Clear code	
V70(-00)		1998AW42 AWD	PSL	Sys. Info.	
V70(-00)		1998AW42 AWD	PSL	Read code	
V70(-00)		1998AW42 AWD	PSL	Clear code	
V70(-00)		1998AW42 AWD	PSL	Data stream	
V70(-00)		1998AW42 AWD	PSR	Sys. Info.	
V70(-00)		1998AW42 AWD	PSR	Read code	
V70(-00)		1998AW42 AWD	PSR	Clear code	
V70(-00)		1998AW42 AWD	PSR	Data stream	
V70(-00)		1998AW42 AWD	CPM	Sys. Info.	
V70(-00)		1998AW42 AWD	CPM	Read code	
V70(-00)		1998AW42 AWD	CPM	Clear code	
V70(-00)		1998AW42 AWD	CPM	Data stream	
V70(-00)		1998AW42 AWD	CPM	Actuation	
V70(-00)		1998AW42 AWD	RTI	Sys. Info.	
V70(-00)		1998AW42 AWD	RTI	Read code	
V70(-00)		1998AW42 AWD	RTI	Clear code	
V70(-00)		1998AW42 AWD	RTI	Data stream	
V70(-00)		1998AW42 AWD	RTI	Actuation	
V70(-00)		1999AW42 AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(-00)		1999B5202FS	ECM	Read code	
V70(-00)		1999B5202FS	ECM	Clear code	
V70(-00)		1999B5202FS	ECM	Data stream	
V70(-00)		1999B5234FS	ECM	Read code	
V70(-00)		1999B5234FS	ECM	Clear code	
V70(-00)		1999B5234FS	ECM	Data stream	
V70(-00)		1999B5252FS	ECM	Read code	
V70(-00)		1999B5252FS	ECM	Clear code	
V70(-00)		1999B5252FS	ECM	Data stream	
V70(-00)		1999B5254T	ECM	Sys. Info.	
V70(-00)		1999B5254T	ECM	Read code	
V70(-00)		1999B5254T	ECM	Clear code	
V70(-00)		1999B5254T	ECM	Data stream	
V70(-00)		1999B5254T	ECM	Actuation	
V70(-00)		1999B5204T4	ECM	Sys. Info.	
V70(-00)		1999B5204T4	ECM	Read code	
V70(-00)		1999B5204T4	ECM	Clear code	
V70(-00)		1999B5204T4	ECM	Data stream	
V70(-00)		1999B5204T4	ECM	Actuation	
V70(-00)		1999B5204T3	ECM	Sys. Info.	
V70(-00)		1999B5204T3	ECM	Read code	
V70(-00)		1999B5204T3	ECM	Clear code	
V70(-00)		1999B5204T3	ECM	Data stream	
V70(-00)		1999B5204T3	ECM	Actuation	
V70(-00)		1999B5234T7	ECM	Sys. Info.	
V70(-00)		1999B5234T7	ECM	Read code	
V70(-00)		1999B5234T7	ECM	Clear code	
V70(-00)		1999B5234T7	ECM	Data stream	
V70(-00)		1999B5234T7	ECM	Actuation	
V70(-00)		1999B5234T3	ECM	Sys. Info.	
V70(-00)		1999B5234T3	ECM	Read code	
V70(-00)		1999B5234T3	ECM	Clear code	
V70(-00)		1999B5234T3	ECM	Data stream	

model	year	type	system	function	subfunction
V70(-00)	1999	B5234T3	ECM	Actuation	
V70(-00)	1999	B5234T8	ECM	Sys. Info.	
V70(-00)	1999	B5234T8	ECM	Read code	
V70(-00)	1999	B5234T8	ECM	Clear code	
V70(-00)	1999	B5234T8	ECM	Data stream	
V70(-00)	1999	B5234T8	ECM	Actuation	
V70(-00)	1999	B5254S DENSO	ECM	Sys. Info.	
V70(-00)	1999	B5254S DENSO	ECM	Read code	
V70(-00)	1999	B5254S DENSO	ECM	Clear code	
V70(-00)	1999	B5254S DENSO	ECM	Data stream	
V70(-00)	1999	B5254S DENSO	ECM	Actuation	
V70(-00)	1999	D5252T MSA 8	ECM	Sys. Info.	
V70(-00)	1999	D5252T MSA 8	ECM	Read code	
V70(-00)	1999	D5252T MSA 8	ECM	Clear code	
V70(-00)	1999	D5252T MSA 8	ECM	Data stream	
V70(-00)	1999	D5252T MSA 8	ECM	Actuation	
V70(-00)	1999	D5252T MSA 8	ECM	Special functions	Programming the idle speed
V70(-00)	1999	D5252T MSA 8	ECM	Special functions	Check and adjust dynamic pump setting
V70(-00)	1999	D5252T MSA 7	ECM	Sys. Info.	
V70(-00)	1999	D5252T MSA 7	ECM	Read code	
V70(-00)	1999	D5252T MSA 7	ECM	Clear code	
V70(-00)	1999	D5252T MSA 7	ECM	Data stream	
V70(-00)	1999	D5252T MSA 7	ECM	Actuation	
V70(-00)	1999	D5244T	Diesel Eng	Sys. Info.	
V70(-00)	1999	D5244T	Diesel Eng	Read code	
V70(-00)	1999	D5244T	Diesel Eng	Clear code	
V70(-00)	1999	D5244T	Diesel Eng	Data stream	
V70(-00)	1999	D5244T	Diesel Eng	Actuation	
V70(-00)	1999	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(-00)	1999	D5252T	Diesel Eng	Sys. Info.	
V70(-00)	1999	D5252T	Diesel Eng	Read code	
V70(-00)	1999	D5252T	Diesel Eng	Clear code	
V70(-00)	1999	D5252T	Diesel Eng	Data stream	
V70(-00)	1999	D5252T	Diesel Eng	Actuation	
V70(-00)	1999	D5252T	Diesel Eng	Special functions	Programming the idle speed
V70(-00)	1999	AW50-42	TCM	Sys. Info.	
V70(-00)	1999	AW50-42	TCM	Read code	
V70(-00)	1999	AW50-42	TCM	Clear code	
V70(-00)	1999	AW50-42	TCM	Data stream	
V70(-00)	1999	AW50-42	TCM	Actuation	
V70(-00)	1999	AW42 AWD	TCM	Sys. Info.	
V70(-00)	1999	AW42 AWD	TCM	Read code	
V70(-00)	1999	AW42 AWD	TCM	Clear code	
V70(-00)	1999	AW42 AWD	TCM	Data stream	
V70(-00)	1999	AW42 AWD	TCM	Actuation	
V70(-00)	1999	AW42 AWD	ABS	Sys. Info.	
V70(-00)	1999	AW42 AWD	ABS	Read code	
V70(-00)	1999	AW42 AWD	ABS	Clear code	
V70(-00)	1999	AW42 AWD	ABS	Data stream	
V70(-00)	1999	AW42 AWD	ABS	Actuation	
V70(-00)	1999	AW42 AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70(-00)	1999	AW42 AWD	ABS	Special functions	Calibration
V70(-00)	1999	AW42 AWD	SRS	Sys. Info.	
V70(-00)	1999	AW42 AWD	SRS	Read code	
V70(-00)	1999	AW42 AWD	SRS	Clear code	
V70(-00)	1999	AW42 AWD	SRS	Data stream	
V70(-00)	1999	AW42 AWD	SRS	Actuation	
V70(-00)	1999	AW42 AWD	Immobilizer	Sys. Info.	
V70(-00)	1999	AW42 AWD	Immobilizer	Read code	
V70(-00)	1999	AW42 AWD	Immobilizer	Clear code	
V70(-00)	1999	AW42 AWD	Immobilizer	Data stream	

model	year	type	system	function	subfunction
V70(-00)	1999	AW42 AWD	Immobilizer	Actuation	
V70(-00)	1999	AW42 AWD	VGLA	Sys. Info.	
V70(-00)	1999	AW42 AWD	VGLA	Read code	
V70(-00)	1999	AW42 AWD	VGLA	Clear code	
V70(-00)	1999	AW42 AWD	VGLA	Data stream	
V70(-00)	1999	AW42 AWD	VGLA	Actuation	
V70(-00)	1999	AW42 AWD	CI	Sys. Info.	
V70(-00)	1999	AW42 AWD	CI	Read code	
V70(-00)	1999	AW42 AWD	CI	Clear code	
V70(-00)	1999	AW42 AWD	CI	Data stream	
V70(-00)	1999	AW42 AWD	CI	Actuation	
V70(-00)	1999	AW42 AWD	CI	Special functions	Resetting the service reminder indicator(SRI)
V70(-00)	1999	AW42 AWD	PSL	Sys. Info.	
V70(-00)	1999	AW42 AWD	PSL	Read code	
V70(-00)	1999	AW42 AWD	PSL	Clear code	
V70(-00)	1999	AW42 AWD	PSL	Data stream	
V70(-00)	1999	AW42 AWD	PSL	Actuation	
V70(-00)	1999	AW42 AWD	PSR	Sys. Info.	
V70(-00)	1999	AW42 AWD	PSR	Read code	
V70(-00)	1999	AW42 AWD	PSR	Clear code	
V70(-00)	1999	AW42 AWD	PSR	Data stream	
V70(-00)	1999	AW42 AWD	PSR	Actuation	
V70(-00)	1999	AW42 AWD	CPM	Sys. Info.	
V70(-00)	1999	AW42 AWD	CPM	Read code	
V70(-00)	1999	AW42 AWD	CPM	Clear code	
V70(-00)	1999	AW42 AWD	CPM	Data stream	
V70(-00)	1999	AW42 AWD	CPM	Actuation	
V70(-00)	1999	AW42 AWD	CCM	Sys. Info.	
V70(-00)	1999	AW42 AWD	CCM	Read code	
V70(-00)	1999	AW42 AWD	CCM	Clear code	
V70(-00)	1999	AW42 AWD	CCM	Data stream	
V70(-00)	1999	AW42 AWD	CCM	Actuation	
V70(-00)	1999	AW42 AWD	RTI	Sys. Info.	
V70(-00)	1999	AW42 AWD	RTI	Read code	
V70(-00)	1999	AW42 AWD	RTI	Clear code	
V70(-00)	1999	AW42 AWD	RTI	Data stream	
V70(-00)	1999	AW42 AWD	RTI	Actuation	
V70(-00)	2000	AW42 AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(-00)	2000	B5244SG2	ECM	Sys. Info.	
V70(-00)	2000	B5244SG2	ECM	Read code	
V70(-00)	2000	B5244SG2	ECM	Clear code	
V70(-00)	2000	B5244SG2	ECM	Data stream	
V70(-00)	2000	B5244SG2	ECM	Actuation	
V70(-00)	2000	B5244SG	ECM	Sys. Info.	
V70(-00)	2000	B5244SG	ECM	Read code	
V70(-00)	2000	B5244SG	ECM	Clear code	
V70(-00)	2000	B5244SG	ECM	Data stream	
V70(-00)	2000	B5244SG	ECM	Actuation	
V70(-00)	2000	B5244S2	ECM	Sys. Info.	
V70(-00)	2000	B5244S2	ECM	Read code	
V70(-00)	2000	B5244S2	ECM	Clear code	
V70(-00)	2000	B5244S2	ECM	Data stream	
V70(-00)	2000	B5244S2	ECM	Actuation	
V70(-00)	2000	B5244S	ECM	Sys. Info.	
V70(-00)	2000	B5244S	ECM	Read code	
V70(-00)	2000	B5244S	ECM	Clear code	
V70(-00)	2000	B5244S	ECM	Data stream	
V70(-00)	2000	B5244S	ECM	Actuation	
V70(-00)	2000	B5244T	ECM	Sys. Info.	
V70(-00)	2000	B5244T	ECM	Read code	
V70(-00)	2000	B5244T	ECM	Clear code	
V70(-00)	2000	B5244T	ECM	Data stream	
V70(-00)	2000	B5244T	ECM	Actuation	
V70(-00)	2000	B5204T3	ECM	Sys. Info.	
V70(-00)	2000	B5204T3	ECM	Read code	
V70(-00)	2000	B5204T3	ECM	Clear code	
V70(-00)	2000	B5204T3	ECM	Data stream	
V70(-00)	2000	B5204T3	ECM	Actuation	
V70(-00)	2000	B5204T4	ECM	Sys. Info.	
V70(-00)	2000	B5204T4	ECM	Read code	
V70(-00)	2000	B5204T4	ECM	Clear code	
V70(-00)	2000	B5204T4	ECM	Data stream	
V70(-00)	2000	B5204T4	ECM	Actuation	
V70(-00)	2000	B5234T3	ECM	Sys. Info.	
V70(-00)	2000	B5234T3	ECM	Read code	
V70(-00)	2000	B5234T3	ECM	Clear code	
V70(-00)	2000	B5234T3	ECM	Data stream	

model	year	type	system	function	subfunction
V70(-00)	2000	B5234T3	ECM	Actuation	
V70(-00)	2000	B5234T7	ECM	Sys. Info.	
V70(-00)	2000	B5234T7	ECM	Read code	
V70(-00)	2000	B5234T7	ECM	Clear code	
V70(-00)	2000	B5234T7	ECM	Data stream	
V70(-00)	2000	B5234T7	ECM	Actuation	
V70(-00)	2000	B5244T2	ECM	Sys. Info.	
V70(-00)	2000	B5244T2	ECM	Read code	
V70(-00)	2000	B5244T2	ECM	Clear code	
V70(-00)	2000	B5244T2	ECM	Data stream	
V70(-00)	2000	B5244T2	ECM	Actuation	
V70(-00)	2000	D5252T MSA8	ECM	Sys. Info.	
V70(-00)	2000	D5252T MSA8	ECM	Read code	
V70(-00)	2000	D5252T MSA8	ECM	Clear code	
V70(-00)	2000	D5252T MSA8	ECM	Data stream	
V70(-00)	2000	D5252T MSA8	ECM	Actuation	
V70(-00)	2000	D5252T MSA8	ECM	Special functions	Programming the idle speed
V70(-00)	2000	D5252T MSA8	ECM	Special functions	Check and adjust dynamic pump setting
V70(-00)	2000	D5244T	Diesel Eng	Sys. Info.	
V70(-00)	2000	D5244T	Diesel Eng	Read code	
V70(-00)	2000	D5244T	Diesel Eng	Clear code	
V70(-00)	2000	D5244T	Diesel Eng	Data stream	
V70(-00)	2000	D5244T	Diesel Eng	Actuation	
V70(-00)	2000	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(-00)	2000	D5252T	Diesel Eng	Sys. Info.	
V70(-00)	2000	D5252T	Diesel Eng	Read code	
V70(-00)	2000	D5252T	Diesel Eng	Clear code	
V70(-00)	2000	D5252T	Diesel Eng	Data stream	
V70(-00)	2000	D5252T	Diesel Eng	Actuation	
V70(-00)	2000	D5252T	Diesel Eng	Special functions	Programming the idle speed
V70(-00)	2000	AW55-50/51SN	TCM	Sys. Info.	
V70(-00)	2000	AW55-50/51SN	TCM	Read code	
V70(-00)	2000	AW55-50/51SN	TCM	Clear code	
V70(-00)	2000	AW55-50/51SN	TCM	Data stream	
V70(-00)	2000	AW55-50/51SN	TCM	Actuation	
V70(-00)	2000	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V70(-00)	2000	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change
V70(-00)	2000	AW55-50/51SN	TCM	Special functions	Control module adaptation
V70(-00)	2000	AW50/51 AWD	TCM	Sys. Info.	
V70(-00)	2000	AW50/51 AWD	TCM	Read code	
V70(-00)	2000	AW50/51 AWD	TCM	Clear code	
V70(-00)	2000	AW50/51 AWD	TCM	Data stream	
V70(-00)	2000	AW50/51 AWD	TCM	Actuation	
V70(-00)	2000	AW50/51 AWD	TCM	Special functions	Reset adaptation to zero
V70(-00)	2000	AW50/51 AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change
V70(-00)	2000	AW50/51 AWD	TCM	Special functions	Control module adaptation
V70(-00)	2000	AW50-42	TCM	Sys. Info.	
V70(-00)	2000	AW50-42	TCM	Read code	
V70(-00)	2000	AW50-42	TCM	Clear code	
V70(-00)	2000	AW50-42	TCM	Data stream	
V70(-00)	2000	AW50-42	TCM	Actuation	
V70(-00)	2000	AW50-42	TCM	Special functions	Resetting the adaptation
V70(-00)	2000	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change
V70(-00)	2000	AW50-42	TCM	Special functions	Activating gear indication
V70(-00)	2000	AW50-42	TCM	Special functions	Control module adaptation



model	year	type	system	function	subfunction	
V70(-00)		2000	AW42 AWD	TCM	Sys. Info.	
V70(-00)		2000	AW42 AWD	TCM	Read code	
V70(-00)		2000	AW42 AWD	TCM	Clear code	
V70(-00)		2000	AW42 AWD	TCM	Data stream	
V70(-00)		2000	AW42 AWD	TCM	Actuation	
V70(-00)		2000	AW42 AWD	TCM	Special functions	Resetting the adaptation
V70(-00)		2000	AW42 AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change
V70(-00)		2000	AW42 AWD	TCM	Special functions	Activating gear indication
V70(-00)		2000	AW42 AWD	TCM	Special functions	Control module adaptation
V70(-00)		2000	AW42 AWD	ABS	Sys. Info.	
V70(-00)		2000	AW42 AWD	ABS	Read code	
V70(-00)		2000	AW42 AWD	ABS	Clear code	
V70(-00)		2000	AW42 AWD	ABS	Data stream	
V70(-00)		2000	AW42 AWD	ABS	Actuation	
V70(-00)		2000	AW42 AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70(-00)		2000	AW42 AWD	ABS	Special functions	Calibration
V70(-00)		2000	AW42 AWD	SRS	Sys. Info.	
V70(-00)		2000	AW42 AWD	SRS	Read code	
V70(-00)		2000	AW42 AWD	SRS	Clear code	
V70(-00)		2000	AW42 AWD	SRS	Data stream	
V70(-00)		2000	AW42 AWD	SRS	Actuation	
V70(-00)		2000	AW42 AWD	Immobilizer	Sys. Info.	
V70(-00)		2000	AW42 AWD	Immobilizer	Read code	
V70(-00)		2000	AW42 AWD	Immobilizer	Clear code	
V70(-00)		2000	AW42 AWD	Immobilizer	Data stream	
V70(-00)		2000	AW42 AWD	Immobilizer	Actuation	
V70(-00)		2000	AW42 AWD	VGLA	Sys. Info.	
V70(-00)		2000	AW42 AWD	VGLA	Read code	
V70(-00)		2000	AW42 AWD	VGLA	Clear code	
V70(-00)		2000	AW42 AWD	VGLA	Data stream	
V70(-00)		2000	AW42 AWD	VGLA	Actuation	
V70(-00)		2000	AW42 AWD	CI	Sys. Info.	
V70(-00)		2000	AW42 AWD	CI	Read code	
V70(-00)		2000	AW42 AWD	CI	Clear code	
V70(-00)		2000	AW42 AWD	CI	Data stream	
V70(-00)		2000	AW42 AWD	CI	Actuation	
V70(-00)		2000	AW42 AWD	CI	Special functions	Resetting the service reminder indicator(SRI)
V70(-00)		2000	AW42 AWD	PSL	Sys. Info.	
V70(-00)		2000	AW42 AWD	PSL	Read code	
V70(-00)		2000	AW42 AWD	PSL	Clear code	
V70(-00)		2000	AW42 AWD	PSL	Data stream	
V70(-00)		2000	AW42 AWD	PSL	Actuation	
V70(-00)		2000	AW42 AWD	PSR	Sys. Info.	
V70(-00)		2000	AW42 AWD	PSR	Read code	
V70(-00)		2000	AW42 AWD	PSR	Clear code	
V70(-00)		2000	AW42 AWD	PSR	Data stream	
V70(-00)		2000	AW42 AWD	PSR	Actuation	
V70(-00)		2000	AW42 AWD	CPM	Sys. Info.	
V70(-00)		2000	AW42 AWD	CPM	Read code	
V70(-00)		2000	AW42 AWD	CPM	Clear code	
V70(-00)		2000	AW42 AWD	CPM	Data stream	
V70(-00)		2000	AW42 AWD	CPM	Actuation	
V70(-00)		2000	AW42 AWD	CCM	Sys. Info.	
V70(-00)		2000	AW42 AWD	CCM	Read code	
V70(-00)		2000	AW42 AWD	CCM	Clear code	
V70(-00)		2000	AW42 AWD	CCM	Data stream	
V70(-00)		2000	AW42 AWD	CCM	Actuation	
V70(-00)		2000	AW42 AWD	RTI	Sys. Info.	
V70(-00)		2000	AW42 AWD	RTI	Read code	
V70(-00)		2000	AW42 AWD	RTI	Clear code	
V70(-00)		2000	AW42 AWD	RTI	Data stream	
V70(-00)		2000	AW42 AWD	RTI	Actuation	
V70(00-)		2000	AW42 AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(00-)		2000	B5244S	ECM	Sys. Info.	
V70(00-)		2000	B5244S	ECM	Read code	
V70(00-)		2000	B5244S	ECM	Clear code	
V70(00-)		2000	B5244S	ECM	Data stream	
V70(00-)		2000	B5244S	ECM	Actuation	
V70(00-)		2000	B6304S3	ECM	Sys. Info.	
V70(00-)		2000	B6304S3	ECM	Read code	
V70(00-)		2000	B6304S3	ECM	Clear code	
V70(00-)		2000	B6304S3	ECM	Data stream	
V70(00-)		2000	B6304S3	ECM	Actuation	
V70(00-)		2000	B6294T	ECM	Sys. Info.	
V70(00-)		2000	B6294T	ECM	Read code	
V70(00-)		2000	B6294T	ECM	Clear code	
V70(00-)		2000	B6294T	ECM	Data stream	

model	year	type	system	function	subfunction
V70(00-)	2000	B6294T	ECM	Actuation	
V70(00-)	2000	B6294T	ECM	Special functions	Resetting the adaptation values
V70(00-)	2000	B6284T	ECM	Sys. Info.	
V70(00-)	2000	B6284T	ECM	Read code	
V70(00-)	2000	B6284T	ECM	Clear code	
V70(00-)	2000	B6284T	ECM	Data stream	
V70(00-)	2000	B6284T	ECM	Actuation	
V70(00-)	2000	B5204T4	ECM	Sys. Info.	
V70(00-)	2000	B5204T4	ECM	Read code	
V70(00-)	2000	B5204T4	ECM	Clear code	
V70(00-)	2000	B5204T4	ECM	Data stream	
V70(00-)	2000	B5204T4	ECM	Actuation	
V70(00-)	2000	B5204T3	ECM	Sys. Info.	
V70(00-)	2000	B5204T3	ECM	Read code	
V70(00-)	2000	B5204T3	ECM	Clear code	
V70(00-)	2000	B5204T3	ECM	Data stream	
V70(00-)	2000	B5204T3	ECM	Actuation	
V70(00-)	2000	B5244SG	ECM	Sys. Info.	
V70(00-)	2000	B5244SG	ECM	Read code	
V70(00-)	2000	B5244SG	ECM	Clear code	
V70(00-)	2000	B5244SG	ECM	Data stream	
V70(00-)	2000	B5244SG	ECM	Actuation	
V70(00-)	2000	B6294S2	ECM	Sys. Info.	
V70(00-)	2000	B6294S2	ECM	Read code	
V70(00-)	2000	B6294S2	ECM	Clear code	
V70(00-)	2000	B6294S2	ECM	Data stream	
V70(00-)	2000	B6294S2	ECM	Actuation	
V70(00-)	2000	B5244S2	ECM	Sys. Info.	
V70(00-)	2000	B5244S2	ECM	Read code	
V70(00-)	2000	B5244S2	ECM	Clear code	
V70(00-)	2000	B5244S2	ECM	Data stream	
V70(00-)	2000	B5244S2	ECM	Actuation	
V70(00-)	2000	B5254T2	ECM	Sys. Info.	
V70(00-)	2000	B5254T2	ECM	Read code	
V70(00-)	2000	B5254T2	ECM	Clear code	
V70(00-)	2000	B5254T2	ECM	Data stream	
V70(00-)	2000	B5254T2	ECM	Actuation	
V70(00-)	2000	B5254T2	ECM	Special functions	Resetting the adaptation values
V70(00-)	2000	B5234T3	ECM	Sys. Info.	
V70(00-)	2000	B5234T3	ECM	Read code	
V70(00-)	2000	B5234T3	ECM	Clear code	
V70(00-)	2000	B5234T3	ECM	Data stream	
V70(00-)	2000	B5234T3	ECM	Actuation	
V70(00-)	2000	B5204T5	ECM	Sys. Info.	
V70(00-)	2000	B5204T5	ECM	Read code	
V70(00-)	2000	B5204T5	ECM	Clear code	
V70(00-)	2000	B5204T5	ECM	Data stream	
V70(00-)	2000	B5204T5	ECM	Actuation	
V70(00-)	2000	B5254T4	ECM	Sys. Info.	
V70(00-)	2000	B5254T4	ECM	Read code	
V70(00-)	2000	B5254T4	ECM	Clear code	
V70(00-)	2000	B5254T4	ECM	Data stream	
V70(00-)	2000	B5254T4	ECM	Actuation	
V70(00-)	2000	B6294S	ECM	Sys. Info.	
V70(00-)	2000	B6294S	ECM	Read code	
V70(00-)	2000	B6294S	ECM	Clear code	
V70(00-)	2000	B6294S	ECM	Data stream	
V70(00-)	2000	B6294S	ECM	Actuation	
V70(00-)	2000	B5244T7	ECM	Sys. Info.	
V70(00-)	2000	B5244T7	ECM	Read code	
V70(00-)	2000	B5244T7	ECM	Clear code	
V70(00-)	2000	B5244T7	ECM	Data stream	
V70(00-)	2000	B5244T7	ECM	Actuation	
V70(00-)	2000	B5244T7	ECM	Special functions	Resetting the adaptation values
V70(00-)	2000	B5234T7	ECM	Sys. Info.	
V70(00-)	2000	B5234T7	ECM	Read code	
V70(00-)	2000	B5234T7	ECM	Clear code	
V70(00-)	2000	B5234T7	ECM	Data stream	
V70(00-)	2000	B5234T7	ECM	Actuation	
V70(00-)	2000	B5234T7	ECM	Special functions	Resetting the adaptation values
V70(00-)	2000	D5244T	Diesel Eng	Sys. Info.	
V70(00-)	2000	D5244T	Diesel Eng	Read code	
V70(00-)	2000	D5244T	Diesel Eng	Clear code	
V70(00-)	2000	D5244T	Diesel Eng	Data stream	
V70(00-)	2000	D5244T	Diesel Eng	Actuation	
V70(00-)	2000	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)	2000	D5252T	Diesel Eng	Sys. Info.	
V70(00-)	2000	D5252T	Diesel Eng	Read code	

model	year	type	system	function	subfunction
V70(00-)	2000	D5252T	Diesel Eng	Clear code	
V70(00-)	2000	D5252T	Diesel Eng	Data stream	
V70(00-)	2000	D5252T	Diesel Eng	Actuation	
V70(00-)	2000	D5252T	Diesel Eng	Special functions	Programming the idle speed
V70(00-)	2000	AW55-50SN	TCM	Sys. Info.	
V70(00-)	2000	AW55-50SN	TCM	Read code	
V70(00-)	2000	AW55-50SN	TCM	Clear code	
V70(00-)	2000	AW55-50SN	TCM	Data stream	
V70(00-)	2000	AW55-50SN	TCM	Actuation	
V70(00-)	2000	AW55-50SN	TCM	Special functions	Reset adaptation to zero
V70(00-)	2000	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2000	4T65EV-GT	TCM	Sys. Info.	
V70(00-)	2000	4T65EV-GT	TCM	Read code	
V70(00-)	2000	4T65EV-GT	TCM	Clear code	
V70(00-)	2000	4T65EV-GT	TCM	Data stream	
V70(00-)	2000	4T65EV-GT	TCM	Actuation	
V70(00-)	2000	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
V70(00-)	2000	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2000	AW50-42	TCM	Sys. Info.	
V70(00-)	2000	AW50-42	TCM	Read code	
V70(00-)	2000	AW50-42	TCM	Clear code	
V70(00-)	2000	AW50-42	TCM	Data stream	
V70(00-)	2000	AW50-42	TCM	Actuation	
V70(00-)	2000	AW50-42	TCM	Special functions	Reset adaptation to zero
V70(00-)	2000	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2000	AW50/51AW D	TCM	Sys. Info.	
V70(00-)	2000	AW50/51AW D	TCM	Read code	
V70(00-)	2000	AW50/51AW D	TCM	Clear code	
V70(00-)	2000	AW50/51AW D	TCM	Data stream	
V70(00-)	2000	AW50/51AW D	TCM	Actuation	
V70(00-)	2000	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70(00-)	2000	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2000	TF-80SC	TCM	Sys. Info.	
V70(00-)	2000	TF-80SC	TCM	Read code	
V70(00-)	2000	TF-80SC	TCM	Clear code	
V70(00-)	2000	TF-80SC	TCM	Data stream	
V70(00-)	2000	TF-80SC	TCM	Actuation	
V70(00-)	2000	TF-80SC	TCM	Special functions	Resetting the adaptation
V70(00-)	2000	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
V70(00-)	2000	4T65EV	TCM	Sys. Info.	
V70(00-)	2000	4T65EV	TCM	Read code	
V70(00-)	2000	4T65EV	TCM	Clear code	
V70(00-)	2000	4T65EV	TCM	Data stream	
V70(00-)	2000	4T65EV	TCM	Actuation	
V70(00-)	2000	4T65AWD	TCM	Sys. Info.	
V70(00-)	2000	4T65AWD	TCM	Read code	
V70(00-)	2000	4T65AWD	TCM	Clear code	
V70(00-)	2000	4T65AWD	TCM	Data stream	
V70(00-)	2000	4T65AWD	TCM	Actuation	
V70(00-)	2000	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70(00-)	2000	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2000	4T65AWD	ABS	Sys. Info.	
V70(00-)	2000	4T65AWD	ABS	Read code	
V70(00-)	2000	4T65AWD	ABS	Clear code	
V70(00-)	2000	4T65AWD	ABS	Data stream	
V70(00-)	2000	4T65AWD	ABS	Actuation	
V70(00-)	2000	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70(00-)	2000	4T65AWD	ABS	Special functions	Calibration
V70(00-)	2000	4T65AWD	SRS	Sys. Info.	
V70(00-)	2000	4T65AWD	SRS	Read code	
V70(00-)	2000	4T65AWD	SRS	Clear code	
V70(00-)	2000	4T65AWD	SRS	Data stream	
V70(00-)	2000	4T65AWD	SRS	Freeze frame	
V70(00-)	2000	4T65AWD	CEM	Sys. Info.	
V70(00-)	2000	4T65AWD	CEM	Read code	
V70(00-)	2000	4T65AWD	CEM	Clear code	
V70(00-)	2000	4T65AWD	CEM	Data stream	
V70(00-)	2000	4T65AWD	CEM	Actuation	
V70(00-)	2000	4T65AWD	CEM	Special functions	Reading alarm cause(*)
V70(00-)	2000	4T65AWD	CEM	Special functions	Resetting the factory settings
V70(00-)	2000	4T65AWD	UEM	Sys. Info.	

model	year	type	system	function	subfunction
V70(00-)	2000	4T65AWD	UEM	Read code	
V70(00-)	2000	4T65AWD	UEM	Clear code	
V70(00-)	2000	4T65AWD	UEM	Data stream	
V70(00-)	2000	4T65AWD	UEM	Actuation	
V70(00-)	2000	4T65AWD	UEM	Special functions	Configuration of the siren
V70(00-)	2000	4T65AWD	UEM	Special functions	Programming the control unit
V70(00-)	2000	4T65AWD	UEM	Special functions	Reading the programmed values
V70(00-)	2000	4T65AWD	REM	Sys. Info.	
V70(00-)	2000	4T65AWD	REM	Read code	
V70(00-)	2000	4T65AWD	REM	Clear code	
V70(00-)	2000	4T65AWD	REM	Data stream	
V70(00-)	2000	4T65AWD	REM	Actuation	
V70(00-)	2000	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70(00-)	2000	4T65AWD	DIM	Sys. Info.	
V70(00-)	2000	4T65AWD	DIM	Read code	
V70(00-)	2000	4T65AWD	DIM	Clear code	
V70(00-)	2000	4T65AWD	DIM	Data stream	
V70(00-)	2000	4T65AWD	DIM	Actuation	
V70(00-)	2000	4T65AWD	DIM	Freeze frame	
V70(00-)	2000	4T65AWD	DIM	Special functions	Reseting the service reminder indicator(SRI) (*)
V70(00-)	2000	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70(00-)	2000	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
V70(00-)	2000	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
V70(00-)	2000	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
V70(00-)	2000	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
V70(00-)	2000	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
V70(00-)	2000	4T65AWD	DIM	Special functions	Programming of clock (*)
V70(00-)	2000	4T65AWD	DIM	Special functions	Programming of zeros (*)
V70(00-)	2000	4T65AWD	DIM	Special functions	Programming parking brake warning
V70(00-)	2000	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70(00-)	2000	4T65AWD	DIM	Special functions	Programming instrument lighting
V70(00-)	2000	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
V70(00-)	2000	4T65AWD	DIM	Special functions	Display of DSTC message
V70(00-)	2000	4T65AWD	DIM	Special functions	Read out programmed values
V70(00-)	2000	4T65AWD	PDM	Sys. Info.	
V70(00-)	2000	4T65AWD	PDM	Read code	
V70(00-)	2000	4T65AWD	PDM	Clear code	
V70(00-)	2000	4T65AWD	PDM	Data stream	
V70(00-)	2000	4T65AWD	PDM	Actuation	
V70(00-)	2000	4T65AWD	PDM	Special functions	Initialize the window(*)
V70(00-)	2000	4T65AWD	PSM	Sys. Info.	
V70(00-)	2000	4T65AWD	PSM	Read code	
V70(00-)	2000	4T65AWD	PSM	Clear code	
V70(00-)	2000	4T65AWD	PSM	Data stream	
V70(00-)	2000	4T65AWD	PSM	Actuation	
V70(00-)	2000	4T65AWD	DDM	Sys. Info.	
V70(00-)	2000	4T65AWD	DDM	Read code	
V70(00-)	2000	4T65AWD	DDM	Clear code	
V70(00-)	2000	4T65AWD	DDM	Data stream	
V70(00-)	2000	4T65AWD	DDM	Actuation	
V70(00-)	2000	4T65AWD	DDM	Special functions	Initialize the window(*)
V70(00-)	2000	4T65AWD	CCM	Sys. Info.	
V70(00-)	2000	4T65AWD	CCM	Read code	
V70(00-)	2000	4T65AWD	CCM	Clear code	
V70(00-)	2000	4T65AWD	CCM	Data stream	
V70(00-)	2000	4T65AWD	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
V70(00-)	2000	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
V70(00-)	2000	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(00-)	2000	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(00-)	2000	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
V70(00-)	2000	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70(00-)	2000	4T65AWD	CCM	Special functions	Programming the seat temperature
V70(00-)	2000	4T65AWD	PHM	Sys. Info.	
V70(00-)	2000	4T65AWD	PHM	Read code	
V70(00-)	2000	4T65AWD	PHM	Clear code	
V70(00-)	2000	4T65AWD	PHM	Data stream	
V70(00-)	2000	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
V70(00-)	2000	4T65AWD	AUM	Sys. Info.	
V70(00-)	2000	4T65AWD	AUM	Read code	
V70(00-)	2000	4T65AWD	AUM	Clear code	
V70(00-)	2000	4T65AWD	AUM	Data stream	
V70(00-)	2000	4T65AWD	SWM	Sys. Info.	
V70(00-)	2000	4T65AWD	SWM	Read code	
V70(00-)	2000	4T65AWD	SWM	Clear code	
V70(00-)	2000	4T65AWD	SWM	Data stream	

model	year	type	system	function	subfunction
V70(00-)	2000	4T65AWD	SAS	Sys. Info.	
V70(00-)	2000	4T65AWD	SAS	Read code	
V70(00-)	2000	4T65AWD	SAS	Clear code	
V70(00-)	2000	4T65AWD	SAS	Data stream	
V70(00-)	2000	4T65AWD	RTI	Sys. Info.	
V70(00-)	2000	4T65AWD	RTI	Read code	
V70(00-)	2000	4T65AWD	RTI	Clear code	
V70(00-)	2000	4T65AWD	CPM	Sys. Info.	
V70(00-)	2000	4T65AWD	CPM	Data stream	
V70(00-)	2000	4T65AWD	CPM	Special functions	Programming the additional and parking heater
V70(00-)	2000	4T65AWD	ETM	Sys. Info.	
V70(00-)	2000	4T65AWD	ETM	Data stream	
V70(00-)	2001	B5244S	ECM	Sys. Info.	
V70(00-)	2001	B5244S	ECM	Read code	
V70(00-)	2001	B5244S	ECM	Clear code	
V70(00-)	2001	B5244S	ECM	Data stream	
V70(00-)	2001	B5244S	ECM	Actuation	
V70(00-)	2001	B6304S3	ECM	Sys. Info.	
V70(00-)	2001	B6304S3	ECM	Read code	
V70(00-)	2001	B6304S3	ECM	Clear code	
V70(00-)	2001	B6304S3	ECM	Data stream	
V70(00-)	2001	B6304S3	ECM	Actuation	
V70(00-)	2001	B6294T	ECM	Sys. Info.	
V70(00-)	2001	B6294T	ECM	Read code	
V70(00-)	2001	B6294T	ECM	Clear code	
V70(00-)	2001	B6294T	ECM	Data stream	
V70(00-)	2001	B6294T	ECM	Actuation	
V70(00-)	2001	B6294T	ECM	Special functions	Resetting the adaptation values
V70(00-)	2001	B6284T	ECM	Sys. Info.	
V70(00-)	2001	B6284T	ECM	Read code	
V70(00-)	2001	B6284T	ECM	Clear code	
V70(00-)	2001	B6284T	ECM	Data stream	
V70(00-)	2001	B6284T	ECM	Actuation	
V70(00-)	2001	B5204T4	ECM	Sys. Info.	
V70(00-)	2001	B5204T4	ECM	Read code	
V70(00-)	2001	B5204T4	ECM	Clear code	
V70(00-)	2001	B5204T4	ECM	Data stream	
V70(00-)	2001	B5204T4	ECM	Actuation	
V70(00-)	2001	B5204T3	ECM	Sys. Info.	
V70(00-)	2001	B5204T3	ECM	Read code	
V70(00-)	2001	B5204T3	ECM	Clear code	
V70(00-)	2001	B5204T3	ECM	Data stream	
V70(00-)	2001	B5204T3	ECM	Actuation	
V70(00-)	2001	B5244SG	ECM	Sys. Info.	
V70(00-)	2001	B5244SG	ECM	Read code	
V70(00-)	2001	B5244SG	ECM	Clear code	
V70(00-)	2001	B5244SG	ECM	Data stream	
V70(00-)	2001	B5244SG	ECM	Actuation	
V70(00-)	2001	B6294S2	ECM	Sys. Info.	
V70(00-)	2001	B6294S2	ECM	Read code	
V70(00-)	2001	B6294S2	ECM	Clear code	
V70(00-)	2001	B6294S2	ECM	Data stream	
V70(00-)	2001	B6294S2	ECM	Actuation	
V70(00-)	2001	B5244S2	ECM	Sys. Info.	
V70(00-)	2001	B5244S2	ECM	Read code	
V70(00-)	2001	B5244S2	ECM	Clear code	
V70(00-)	2001	B5244S2	ECM	Data stream	
V70(00-)	2001	B5244S2	ECM	Actuation	
V70(00-)	2001	B5254T2	ECM	Sys. Info.	
V70(00-)	2001	B5254T2	ECM	Read code	
V70(00-)	2001	B5254T2	ECM	Clear code	
V70(00-)	2001	B5254T2	ECM	Data stream	
V70(00-)	2001	B5254T2	ECM	Actuation	
V70(00-)	2001	B5254T2	ECM	Special functions	Resetting the adaptation values
V70(00-)	2001	B5234T3	ECM	Sys. Info.	
V70(00-)	2001	B5234T3	ECM	Read code	
V70(00-)	2001	B5234T3	ECM	Clear code	
V70(00-)	2001	B5234T3	ECM	Data stream	
V70(00-)	2001	B5234T3	ECM	Actuation	
V70(00-)	2001	B5204T5	ECM	Sys. Info.	
V70(00-)	2001	B5204T5	ECM	Read code	
V70(00-)	2001	B5204T5	ECM	Clear code	
V70(00-)	2001	B5204T5	ECM	Data stream	
V70(00-)	2001	B5204T5	ECM	Actuation	
V70(00-)	2001	B5254T4	ECM	Sys. Info.	
V70(00-)	2001	B5254T4	ECM	Read code	
V70(00-)	2001	B5254T4	ECM	Clear code	
V70(00-)	2001	B5254T4	ECM	Data stream	

model	year	type	system	function	subfunction
V70(00-)	2001	B5254T4	ECM	Actuation	
V70(00-)	2001	B6294S	ECM	Sys. Info.	
V70(00-)	2001	B6294S	ECM	Read code	
V70(00-)	2001	B6294S	ECM	Clear code	
V70(00-)	2001	B6294S	ECM	Data stream	
V70(00-)	2001	B6294S	ECM	Actuation	
V70(00-)	2001	B5244T7	ECM	Sys. Info.	
V70(00-)	2001	B5244T7	ECM	Read code	
V70(00-)	2001	B5244T7	ECM	Clear code	
V70(00-)	2001	B5244T7	ECM	Data stream	
V70(00-)	2001	B5244T7	ECM	Actuation	
V70(00-)	2001	B5244T7	ECM	Special functions	Resetting the adaptation values
V70(00-)	2001	B5234T7	ECM	Sys. Info.	
V70(00-)	2001	B5234T7	ECM	Read code	
V70(00-)	2001	B5234T7	ECM	Clear code	
V70(00-)	2001	B5234T7	ECM	Data stream	
V70(00-)	2001	B5234T7	ECM	Actuation	
V70(00-)	2001	B5234T7	ECM	Special functions	Resetting the adaptation values
V70(00-)	2001	D5244T	Diesel Eng	Sys. Info.	
V70(00-)	2001	D5244T	Diesel Eng	Read code	
V70(00-)	2001	D5244T	Diesel Eng	Clear code	
V70(00-)	2001	D5244T	Diesel Eng	Data stream	
V70(00-)	2001	D5244T	Diesel Eng	Actuation	
V70(00-)	2001	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)	2001	D5252T	Diesel Eng	Sys. Info.	
V70(00-)	2001	D5252T	Diesel Eng	Read code	
V70(00-)	2001	D5252T	Diesel Eng	Clear code	
V70(00-)	2001	D5252T	Diesel Eng	Data stream	
V70(00-)	2001	D5252T	Diesel Eng	Actuation	
V70(00-)	2001	D5252T	Diesel Eng	Special functions	Programming the idle speed
V70(00-)	2001	AW55-50SN	TCM	Sys. Info.	
V70(00-)	2001	AW55-50SN	TCM	Read code	
V70(00-)	2001	AW55-50SN	TCM	Clear code	
V70(00-)	2001	AW55-50SN	TCM	Data stream	
V70(00-)	2001	AW55-50SN	TCM	Actuation	
V70(00-)	2001	AW55-50SN	TCM	Special functions	Reset adaptation to zero
V70(00-)	2001	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2001	AW55-50SN	TCM	Special functions	Control module adaptation
V70(00-)	2001	AW55-50SN	TCM	Special functions	Activating gear indication
V70(00-)	2001	4T65EV-GT	TCM	Sys. Info.	
V70(00-)	2001	4T65EV-GT	TCM	Read code	
V70(00-)	2001	4T65EV-GT	TCM	Clear code	
V70(00-)	2001	4T65EV-GT	TCM	Data stream	
V70(00-)	2001	4T65EV-GT	TCM	Actuation	
V70(00-)	2001	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
V70(00-)	2001	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2001	AW50-42	TCM	Sys. Info.	
V70(00-)	2001	AW50-42	TCM	Read code	
V70(00-)	2001	AW50-42	TCM	Clear code	
V70(00-)	2001	AW50-42	TCM	Data stream	
V70(00-)	2001	AW50-42	TCM	Actuation	
V70(00-)	2001	AW50-42	TCM	Special functions	Reset adaptation to zero
V70(00-)	2001	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2001	AW50/51AW D	TCM	Sys. Info.	
V70(00-)	2001	AW50/51AW D	TCM	Read code	
V70(00-)	2001	AW50/51AW D	TCM	Clear code	
V70(00-)	2001	AW50/51AW D	TCM	Data stream	
V70(00-)	2001	AW50/51AW D	TCM	Actuation	
V70(00-)	2001	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70(00-)	2001	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2001	TF-80SC	TCM	Sys. Info.	
V70(00-)	2001	TF-80SC	TCM	Read code	
V70(00-)	2001	TF-80SC	TCM	Clear code	
V70(00-)	2001	TF-80SC	TCM	Data stream	
V70(00-)	2001	TF-80SC	TCM	Actuation	
V70(00-)	2001	TF-80SC	TCM	Special functions	Resetting the adaptation
V70(00-)	2001	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
V70(00-)	2001	4T65EV	TCM	Sys. Info.	
V70(00-)	2001	4T65EV	TCM	Read code	
V70(00-)	2001	4T65EV	TCM	Clear code	
V70(00-)	2001	4T65EV	TCM	Data stream	

model	year	type	system	function	subfunction
V70(00-)	2001	4T65EV	TCM	Actuation	
V70(00-)	2001	4T65AWD	TCM	Sys. Info.	
V70(00-)	2001	4T65AWD	TCM	Read code	
V70(00-)	2001	4T65AWD	TCM	Clear code	
V70(00-)	2001	4T65AWD	TCM	Data stream	
V70(00-)	2001	4T65AWD	TCM	Actuation	
V70(00-)	2001	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70(00-)	2001	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2001	4T65AWD	ABS	Sys. Info.	
V70(00-)	2001	4T65AWD	ABS	Read code	
V70(00-)	2001	4T65AWD	ABS	Clear code	
V70(00-)	2001	4T65AWD	ABS	Data stream	
V70(00-)	2001	4T65AWD	ABS	Actuation	
V70(00-)	2001	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70(00-)	2001	4T65AWD	ABS	Special functions	Calibration
V70(00-)	2001	4T65AWD	SRS	Sys. Info.	
V70(00-)	2001	4T65AWD	SRS	Read code	
V70(00-)	2001	4T65AWD	SRS	Clear code	
V70(00-)	2001	4T65AWD	SRS	Data stream	
V70(00-)	2001	4T65AWD	SRS	Freeze frame	
V70(00-)	2001	4T65AWD	CEM	Sys. Info.	
V70(00-)	2001	4T65AWD	CEM	Read code	
V70(00-)	2001	4T65AWD	CEM	Clear code	
V70(00-)	2001	4T65AWD	CEM	Data stream	
V70(00-)	2001	4T65AWD	CEM	Actuation	
V70(00-)	2001	4T65AWD	CEM	Special functions	Reading alarm cause(*)
V70(00-)	2001	4T65AWD	CEM	Special functions	Resetting the factory settings
V70(00-)	2001	4T65AWD	UEM	Sys. Info.	
V70(00-)	2001	4T65AWD	UEM	Read code	
V70(00-)	2001	4T65AWD	UEM	Clear code	
V70(00-)	2001	4T65AWD	UEM	Data stream	
V70(00-)	2001	4T65AWD	UEM	Actuation	
V70(00-)	2001	4T65AWD	UEM	Special functions	Configuration of the siren
V70(00-)	2001	4T65AWD	UEM	Special functions	Programming the control unit
V70(00-)	2001	4T65AWD	UEM	Special functions	Reading the programmed values
V70(00-)	2001	4T65AWD	REM	Sys. Info.	
V70(00-)	2001	4T65AWD	REM	Read code	
V70(00-)	2001	4T65AWD	REM	Clear code	
V70(00-)	2001	4T65AWD	REM	Data stream	
V70(00-)	2001	4T65AWD	REM	Actuation	
V70(00-)	2001	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70(00-)	2001	4T65AWD	DIM	Sys. Info.	
V70(00-)	2001	4T65AWD	DIM	Read code	
V70(00-)	2001	4T65AWD	DIM	Clear code	
V70(00-)	2001	4T65AWD	DIM	Data stream	
V70(00-)	2001	4T65AWD	DIM	Actuation	
V70(00-)	2001	4T65AWD	DIM	Freeze frame	
V70(00-)	2001	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V70(00-)	2001	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70(00-)	2001	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
V70(00-)	2001	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
V70(00-)	2001	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
V70(00-)	2001	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
V70(00-)	2001	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
V70(00-)	2001	4T65AWD	DIM	Special functions	Programming of clock (*)
V70(00-)	2001	4T65AWD	DIM	Special functions	Programming of zeros (*)
V70(00-)	2001	4T65AWD	DIM	Special functions	Programming parking brake warning
V70(00-)	2001	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70(00-)	2001	4T65AWD	DIM	Special functions	Programming instrument lighting
V70(00-)	2001	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
V70(00-)	2001	4T65AWD	DIM	Special functions	Display of DSTC message
V70(00-)	2001	4T65AWD	DIM	Special functions	Read out programmed values
V70(00-)	2001	4T65AWD	PDM	Sys. Info.	
V70(00-)	2001	4T65AWD	PDM	Read code	
V70(00-)	2001	4T65AWD	PDM	Clear code	
V70(00-)	2001	4T65AWD	PDM	Data stream	
V70(00-)	2001	4T65AWD	PDM	Actuation	
V70(00-)	2001	4T65AWD	PDM	Special functions	Initialize the window(*)
V70(00-)	2001	4T65AWD	PSM	Sys. Info.	
V70(00-)	2001	4T65AWD	PSM	Read code	
V70(00-)	2001	4T65AWD	PSM	Clear code	
V70(00-)	2001	4T65AWD	PSM	Data stream	
V70(00-)	2001	4T65AWD	PSM	Actuation	
V70(00-)	2001	4T65AWD	DDM	Sys. Info.	
V70(00-)	2001	4T65AWD	DDM	Read code	
V70(00-)	2001	4T65AWD	DDM	Clear code	

model	year	type	system	function	subfunction	
V70(00-)		2001	4T65AWD	DDM	Data stream	
V70(00-)		2001	4T65AWD	DDM	Actuation	
V70(00-)		2001	4T65AWD	DDM	Special functions	Initialize the window(*)
V70(00-)		2001	4T65AWD	CCM	Sys. Info.	
V70(00-)		2001	4T65AWD	CCM	Read code	
V70(00-)		2001	4T65AWD	CCM	Clear code	
V70(00-)		2001	4T65AWD	CCM	Data stream	
V70(00-)		2001	4T65AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
V70(00-)		2001	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
V70(00-)		2001	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(00-)		2001	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(00-)		2001	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
V70(00-)		2001	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70(00-)		2001	4T65AWD	CCM	Special functions	Programming the seat temperature
V70(00-)		2001	4T65AWD	PHM	Sys. Info.	
V70(00-)		2001	4T65AWD	PHM	Read code	
V70(00-)		2001	4T65AWD	PHM	Clear code	
V70(00-)		2001	4T65AWD	PHM	Data stream	
V70(00-)		2001	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
V70(00-)		2001	4T65AWD	AUM	Sys. Info.	
V70(00-)		2001	4T65AWD	AUM	Read code	
V70(00-)		2001	4T65AWD	AUM	Clear code	
V70(00-)		2001	4T65AWD	AUM	Data stream	
V70(00-)		2001	4T65AWD	SWM	Sys. Info.	
V70(00-)		2001	4T65AWD	SWM	Read code	
V70(00-)		2001	4T65AWD	SWM	Clear code	
V70(00-)		2001	4T65AWD	SWM	Data stream	
V70(00-)		2001	4T65AWD	SAS	Sys. Info.	
V70(00-)		2001	4T65AWD	SAS	Read code	
V70(00-)		2001	4T65AWD	SAS	Clear code	
V70(00-)		2001	4T65AWD	SAS	Data stream	
V70(00-)		2001	4T65AWD	RTI	Sys. Info.	
V70(00-)		2001	4T65AWD	RTI	Read code	
V70(00-)		2001	4T65AWD	RTI	Clear code	
V70(00-)		2001	4T65AWD	AEM	Sys. Info.	
V70(00-)		2001	4T65AWD	AEM	Read code	
V70(00-)		2001	4T65AWD	AEM	Clear code	
V70(00-)		2001	4T65AWD	AEM	Data stream	
V70(00-)		2001	4T65AWD	AEM	Actuation	
V70(00-)		2001	4T65AWD	CPM	Sys. Info.	
V70(00-)		2001	4T65AWD	CPM	Data stream	
V70(00-)		2001	4T65AWD	CPM	Special functions	Programming the additional and parking heater
V70(00-)		2001	4T65AWD	ETM	Sys. Info.	
V70(00-)		2001	4T65AWD	ETM	Data stream	
V70(00-)		2002	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(00-)		2002	B5244S	ECM	Sys. Info.	
V70(00-)		2002	B5244S	ECM	Read code	
V70(00-)		2002	B5244S	ECM	Clear code	
V70(00-)		2002	B5244S	ECM	Data stream	
V70(00-)		2002	B5244S	ECM	Actuation	
V70(00-)		2002	B6304S3	ECM	Sys. Info.	
V70(00-)		2002	B6304S3	ECM	Read code	
V70(00-)		2002	B6304S3	ECM	Clear code	
V70(00-)		2002	B6304S3	ECM	Data stream	
V70(00-)		2002	B6304S3	ECM	Actuation	
V70(00-)		2002	B6294T	ECM	Sys. Info.	
V70(00-)		2002	B6294T	ECM	Read code	
V70(00-)		2002	B6294T	ECM	Clear code	
V70(00-)		2002	B6294T	ECM	Data stream	
V70(00-)		2002	B6294T	ECM	Actuation	
V70(00-)		2002	B6294T	ECM	Special functions	Resetting the adaptation values
V70(00-)		2002	B6284T	ECM	Sys. Info.	
V70(00-)		2002	B6284T	ECM	Read code	
V70(00-)		2002	B6284T	ECM	Clear code	
V70(00-)		2002	B6284T	ECM	Data stream	
V70(00-)		2002	B6284T	ECM	Actuation	
V70(00-)		2002	B5204T4	ECM	Sys. Info.	
V70(00-)		2002	B5204T4	ECM	Read code	
V70(00-)		2002	B5204T4	ECM	Clear code	
V70(00-)		2002	B5204T4	ECM	Data stream	
V70(00-)		2002	B5204T4	ECM	Actuation	
V70(00-)		2002	B5204T3	ECM	Sys. Info.	
V70(00-)		2002	B5204T3	ECM	Read code	
V70(00-)		2002	B5204T3	ECM	Clear code	
V70(00-)		2002	B5204T3	ECM	Data stream	
V70(00-)		2002	B5204T3	ECM	Actuation	



model	year	type	system	function	subfunction
V70(00-)	2002	B5244SG	ECM	Sys. Info.	
V70(00-)	2002	B5244SG	ECM	Read code	
V70(00-)	2002	B5244SG	ECM	Clear code	
V70(00-)	2002	B5244SG	ECM	Data stream	
V70(00-)	2002	B5244SG	ECM	Actuation	
V70(00-)	2002	B6294S2	ECM	Sys. Info.	
V70(00-)	2002	B6294S2	ECM	Read code	
V70(00-)	2002	B6294S2	ECM	Clear code	
V70(00-)	2002	B6294S2	ECM	Data stream	
V70(00-)	2002	B6294S2	ECM	Actuation	
V70(00-)	2002	B5244S2	ECM	Sys. Info.	
V70(00-)	2002	B5244S2	ECM	Read code	
V70(00-)	2002	B5244S2	ECM	Clear code	
V70(00-)	2002	B5244S2	ECM	Data stream	
V70(00-)	2002	B5244S2	ECM	Actuation	
V70(00-)	2002	B5254T2	ECM	Sys. Info.	
V70(00-)	2002	B5254T2	ECM	Read code	
V70(00-)	2002	B5254T2	ECM	Clear code	
V70(00-)	2002	B5254T2	ECM	Data stream	
V70(00-)	2002	B5254T2	ECM	Actuation	
V70(00-)	2002	B5254T2	ECM	Special functions	Resetting the adaptation values
V70(00-)	2002	B5234T3	ECM	Sys. Info.	
V70(00-)	2002	B5234T3	ECM	Read code	
V70(00-)	2002	B5234T3	ECM	Clear code	
V70(00-)	2002	B5234T3	ECM	Data stream	
V70(00-)	2002	B5234T3	ECM	Actuation	
V70(00-)	2002	B5204T5	ECM	Sys. Info.	
V70(00-)	2002	B5204T5	ECM	Read code	
V70(00-)	2002	B5204T5	ECM	Clear code	
V70(00-)	2002	B5204T5	ECM	Data stream	
V70(00-)	2002	B5204T5	ECM	Actuation	
V70(00-)	2002	B5254T4	ECM	Sys. Info.	
V70(00-)	2002	B5254T4	ECM	Read code	
V70(00-)	2002	B5254T4	ECM	Clear code	
V70(00-)	2002	B5254T4	ECM	Data stream	
V70(00-)	2002	B5254T4	ECM	Actuation	
V70(00-)	2002	B6294S	ECM	Sys. Info.	
V70(00-)	2002	B6294S	ECM	Read code	
V70(00-)	2002	B6294S	ECM	Clear code	
V70(00-)	2002	B6294S	ECM	Data stream	
V70(00-)	2002	B6294S	ECM	Actuation	
V70(00-)	2002	B5244T7	ECM	Sys. Info.	
V70(00-)	2002	B5244T7	ECM	Read code	
V70(00-)	2002	B5244T7	ECM	Clear code	
V70(00-)	2002	B5244T7	ECM	Data stream	
V70(00-)	2002	B5244T7	ECM	Actuation	
V70(00-)	2002	B5244T7	ECM	Special functions	Resetting the adaptation values
V70(00-)	2002	B5234T7	ECM	Sys. Info.	
V70(00-)	2002	B5234T7	ECM	Read code	
V70(00-)	2002	B5234T7	ECM	Clear code	
V70(00-)	2002	B5234T7	ECM	Data stream	
V70(00-)	2002	B5234T7	ECM	Actuation	
V70(00-)	2002	B5234T7	ECM	Special functions	Resetting the adaptation values
V70(00-)	2002	D5244T	Diesel Eng	Sys. Info.	
V70(00-)	2002	D5244T	Diesel Eng	Read code	
V70(00-)	2002	D5244T	Diesel Eng	Clear code	
V70(00-)	2002	D5244T	Diesel Eng	Data stream	
V70(00-)	2002	D5244T	Diesel Eng	Actuation	
V70(00-)	2002	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)	2002	D5252T	Diesel Eng	Sys. Info.	
V70(00-)	2002	D5252T	Diesel Eng	Read code	
V70(00-)	2002	D5252T	Diesel Eng	Clear code	
V70(00-)	2002	D5252T	Diesel Eng	Data stream	
V70(00-)	2002	D5252T	Diesel Eng	Actuation	
V70(00-)	2002	D5252T	Diesel Eng	Special functions	Programming the idle speed
V70(00-)	2002	AW55-50SN	TCM	Sys. Info.	
V70(00-)	2002	AW55-50SN	TCM	Read code	
V70(00-)	2002	AW55-50SN	TCM	Clear code	
V70(00-)	2002	AW55-50SN	TCM	Data stream	
V70(00-)	2002	AW55-50SN	TCM	Actuation	
V70(00-)	2002	AW55-50SN	TCM	Special functions	Reset adaptation to zero
V70(00-)	2002	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2002	4T65EV-GT	TCM	Sys. Info.	
V70(00-)	2002	4T65EV-GT	TCM	Read code	
V70(00-)	2002	4T65EV-GT	TCM	Clear code	
V70(00-)	2002	4T65EV-GT	TCM	Data stream	
V70(00-)	2002	4T65EV-GT	TCM	Actuation	
V70(00-)	2002	4T65EV-GT	TCM	Special functions	Reset adaptation to zero

model	year	type	system	function	subfunction
V70(00-)	2002	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2002	AW50-42	TCM	Sys. Info.	
V70(00-)	2002	AW50-42	TCM	Read code	
V70(00-)	2002	AW50-42	TCM	Clear code	
V70(00-)	2002	AW50-42	TCM	Data stream	
V70(00-)	2002	AW50-42	TCM	Actuation	
V70(00-)	2002	AW50-42	TCM	Special functions	Reset adaptation to zero
V70(00-)	2002	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2002	AW50/51AW D	TCM	Sys. Info.	
V70(00-)	2002	AW50/51AW D	TCM	Read code	
V70(00-)	2002	AW50/51AW D	TCM	Clear code	
V70(00-)	2002	AW50/51AW D	TCM	Data stream	
V70(00-)	2002	AW50/51AW D	TCM	Actuation	
V70(00-)	2002	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70(00-)	2002	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2002	TF-80SC	TCM	Sys. Info.	
V70(00-)	2002	TF-80SC	TCM	Read code	
V70(00-)	2002	TF-80SC	TCM	Clear code	
V70(00-)	2002	TF-80SC	TCM	Data stream	
V70(00-)	2002	TF-80SC	TCM	Actuation	
V70(00-)	2002	TF-80SC	TCM	Special functions	Resetting the adaptation
V70(00-)	2002	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
V70(00-)	2002	4T65EV	TCM	Sys. Info.	
V70(00-)	2002	4T65EV	TCM	Read code	
V70(00-)	2002	4T65EV	TCM	Clear code	
V70(00-)	2002	4T65EV	TCM	Data stream	
V70(00-)	2002	4T65EV	TCM	Actuation	
V70(00-)	2002	4T65AWD	TCM	Sys. Info.	
V70(00-)	2002	4T65AWD	TCM	Read code	
V70(00-)	2002	4T65AWD	TCM	Clear code	
V70(00-)	2002	4T65AWD	TCM	Data stream	
V70(00-)	2002	4T65AWD	TCM	Actuation	
V70(00-)	2002	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70(00-)	2002	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2002	4T65AWD	ABS	Sys. Info.	
V70(00-)	2002	4T65AWD	ABS	Read code	
V70(00-)	2002	4T65AWD	ABS	Clear code	
V70(00-)	2002	4T65AWD	ABS	Data stream	
V70(00-)	2002	4T65AWD	ABS	Actuation	
V70(00-)	2002	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70(00-)	2002	4T65AWD	ABS	Special functions	Calibration
V70(00-)	2002	4T65AWD	SRS	Sys. Info.	
V70(00-)	2002	4T65AWD	SRS	Read code	
V70(00-)	2002	4T65AWD	SRS	Clear code	
V70(00-)	2002	4T65AWD	SRS	Data stream	
V70(00-)	2002	4T65AWD	SRS	Freeze frame	
V70(00-)	2002	4T65AWD	CEM	Sys. Info.	
V70(00-)	2002	4T65AWD	CEM	Read code	
V70(00-)	2002	4T65AWD	CEM	Clear code	
V70(00-)	2002	4T65AWD	CEM	Data stream	
V70(00-)	2002	4T65AWD	CEM	Actuation	
V70(00-)	2002	4T65AWD	CEM	Special functions	Reading alarm cause(*)
V70(00-)	2002	4T65AWD	CEM	Special functions	Resetting the factory settings
V70(00-)	2002	4T65AWD	UEM	Sys. Info.	
V70(00-)	2002	4T65AWD	UEM	Read code	
V70(00-)	2002	4T65AWD	UEM	Clear code	
V70(00-)	2002	4T65AWD	UEM	Data stream	
V70(00-)	2002	4T65AWD	UEM	Actuation	
V70(00-)	2002	4T65AWD	UEM	Special functions	Configuration of the siren
V70(00-)	2002	4T65AWD	UEM	Special functions	Programming the control unit
V70(00-)	2002	4T65AWD	UEM	Special functions	Reading the programmed values
V70(00-)	2002	4T65AWD	REM	Sys. Info.	
V70(00-)	2002	4T65AWD	REM	Read code	
V70(00-)	2002	4T65AWD	REM	Clear code	
V70(00-)	2002	4T65AWD	REM	Data stream	
V70(00-)	2002	4T65AWD	REM	Actuation	
V70(00-)	2002	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70(00-)	2002	4T65AWD	DIM	Sys. Info.	
V70(00-)	2002	4T65AWD	DIM	Read code	
V70(00-)	2002	4T65AWD	DIM	Clear code	
V70(00-)	2002	4T65AWD	DIM	Data stream	

model	year	type	system	function	subfunction
V70(00-)	2002	4T65AWD	DIM	Actuation	
V70(00-)	2002	4T65AWD	DIM	Freeze frame	
V70(00-)	2002	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V70(00-)	2002	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70(00-)	2002	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
V70(00-)	2002	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
V70(00-)	2002	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
V70(00-)	2002	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
V70(00-)	2002	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
V70(00-)	2002	4T65AWD	DIM	Special functions	Programming of clock (*)
V70(00-)	2002	4T65AWD	DIM	Special functions	Programming of zeros (*)
V70(00-)	2002	4T65AWD	DIM	Special functions	Programming parking brake warning
V70(00-)	2002	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70(00-)	2002	4T65AWD	DIM	Special functions	Programming instrument lighting
V70(00-)	2002	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
V70(00-)	2002	4T65AWD	DIM	Special functions	Display of DSTC message
V70(00-)	2002	4T65AWD	DIM	Special functions	Read out programmed values
V70(00-)	2002	4T65AWD	PDM	Sys. Info.	
V70(00-)	2002	4T65AWD	PDM	Read code	
V70(00-)	2002	4T65AWD	PDM	Clear code	
V70(00-)	2002	4T65AWD	PDM	Data stream	
V70(00-)	2002	4T65AWD	PDM	Actuation	
V70(00-)	2002	4T65AWD	PDM	Special functions	Initialize the window(*)
V70(00-)	2002	4T65AWD	PSM	Sys. Info.	
V70(00-)	2002	4T65AWD	PSM	Read code	
V70(00-)	2002	4T65AWD	PSM	Clear code	
V70(00-)	2002	4T65AWD	PSM	Data stream	
V70(00-)	2002	4T65AWD	PSM	Actuation	
V70(00-)	2002	4T65AWD	DDM	Sys. Info.	
V70(00-)	2002	4T65AWD	DDM	Read code	
V70(00-)	2002	4T65AWD	DDM	Clear code	
V70(00-)	2002	4T65AWD	DDM	Data stream	
V70(00-)	2002	4T65AWD	DDM	Actuation	
V70(00-)	2002	4T65AWD	DDM	Special functions	Initialize the window(*)
V70(00-)	2002	4T65AWD	CCM	Sys. Info.	
V70(00-)	2002	4T65AWD	CCM	Read code	
V70(00-)	2002	4T65AWD	CCM	Clear code	
V70(00-)	2002	4T65AWD	CCM	Data stream	
V70(00-)	2002	4T65AWD	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
V70(00-)	2002	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
V70(00-)	2002	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(00-)	2002	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(00-)	2002	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
V70(00-)	2002	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70(00-)	2002	4T65AWD	CCM	Special functions	Programming the seat temperature
V70(00-)	2002	4T65AWD	PHM	Sys. Info.	
V70(00-)	2002	4T65AWD	PHM	Read code	
V70(00-)	2002	4T65AWD	PHM	Clear code	
V70(00-)	2002	4T65AWD	PHM	Data stream	
V70(00-)	2002	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
V70(00-)	2002	4T65AWD	AUM	Sys. Info.	
V70(00-)	2002	4T65AWD	AUM	Read code	
V70(00-)	2002	4T65AWD	AUM	Clear code	
V70(00-)	2002	4T65AWD	AUM	Data stream	
V70(00-)	2002	4T65AWD	SWM	Sys. Info.	
V70(00-)	2002	4T65AWD	SWM	Read code	
V70(00-)	2002	4T65AWD	SWM	Clear code	
V70(00-)	2002	4T65AWD	SWM	Data stream	
V70(00-)	2002	4T65AWD	SAS	Sys. Info.	
V70(00-)	2002	4T65AWD	SAS	Read code	
V70(00-)	2002	4T65AWD	SAS	Clear code	
V70(00-)	2002	4T65AWD	SAS	Data stream	
V70(00-)	2002	4T65AWD	RTI	Sys. Info.	
V70(00-)	2002	4T65AWD	RTI	Read code	
V70(00-)	2002	4T65AWD	RTI	Clear code	
V70(00-)	2002	4T65AWD	AEM	Sys. Info.	
V70(00-)	2002	4T65AWD	AEM	Read code	
V70(00-)	2002	4T65AWD	AEM	Clear code	
V70(00-)	2002	4T65AWD	AEM	Data stream	
V70(00-)	2002	4T65AWD	AEM	Actuation	
V70(00-)	2002	4T65AWD	CPM	Sys. Info.	
V70(00-)	2002	4T65AWD	CPM	Data stream	
V70(00-)	2002	4T65AWD	CPM	Special functions	Programming the additional and parking heater
V70(00-)	2002	4T65AWD	ETM	Sys. Info.	
V70(00-)	2002	4T65AWD	ETM	Data stream	

model	year	type	system	function	subfunction
V70(00-)	2003	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(00-)	2003	B5244S	ECM	Sys. Info.	
V70(00-)	2003	B5244S	ECM	Read code	
V70(00-)	2003	B5244S	ECM	Clear code	
V70(00-)	2003	B5244S	ECM	Data stream	
V70(00-)	2003	B5244S	ECM	Actuation	
V70(00-)	2003	B6304S3	ECM	Sys. Info.	
V70(00-)	2003	B6304S3	ECM	Read code	
V70(00-)	2003	B6304S3	ECM	Clear code	
V70(00-)	2003	B6304S3	ECM	Data stream	
V70(00-)	2003	B6304S3	ECM	Actuation	
V70(00-)	2003	B6294T	ECM	Sys. Info.	
V70(00-)	2003	B6294T	ECM	Read code	
V70(00-)	2003	B6294T	ECM	Clear code	
V70(00-)	2003	B6294T	ECM	Data stream	
V70(00-)	2003	B6294T	ECM	Actuation	
V70(00-)	2003	B6294T	ECM	Special functions	Resetting the adaptation values
V70(00-)	2003	B6284T	ECM	Sys. Info.	
V70(00-)	2003	B6284T	ECM	Read code	
V70(00-)	2003	B6284T	ECM	Clear code	
V70(00-)	2003	B6284T	ECM	Data stream	
V70(00-)	2003	B6284T	ECM	Actuation	
V70(00-)	2003	B5204T4	ECM	Sys. Info.	
V70(00-)	2003	B5204T4	ECM	Read code	
V70(00-)	2003	B5204T4	ECM	Clear code	
V70(00-)	2003	B5204T4	ECM	Data stream	
V70(00-)	2003	B5204T4	ECM	Actuation	
V70(00-)	2003	B5204T3	ECM	Sys. Info.	
V70(00-)	2003	B5204T3	ECM	Read code	
V70(00-)	2003	B5204T3	ECM	Clear code	
V70(00-)	2003	B5204T3	ECM	Data stream	
V70(00-)	2003	B5204T3	ECM	Actuation	
V70(00-)	2003	B5244SG	ECM	Sys. Info.	
V70(00-)	2003	B5244SG	ECM	Read code	
V70(00-)	2003	B5244SG	ECM	Clear code	
V70(00-)	2003	B5244SG	ECM	Data stream	
V70(00-)	2003	B5244SG	ECM	Actuation	
V70(00-)	2003	B6294S2	ECM	Sys. Info.	
V70(00-)	2003	B6294S2	ECM	Read code	
V70(00-)	2003	B6294S2	ECM	Clear code	
V70(00-)	2003	B6294S2	ECM	Data stream	
V70(00-)	2003	B6294S2	ECM	Actuation	
V70(00-)	2003	B5244S2	ECM	Sys. Info.	
V70(00-)	2003	B5244S2	ECM	Read code	
V70(00-)	2003	B5244S2	ECM	Clear code	
V70(00-)	2003	B5244S2	ECM	Data stream	
V70(00-)	2003	B5244S2	ECM	Actuation	
V70(00-)	2003	B5254T2	ECM	Sys. Info.	
V70(00-)	2003	B5254T2	ECM	Read code	
V70(00-)	2003	B5254T2	ECM	Clear code	
V70(00-)	2003	B5254T2	ECM	Data stream	
V70(00-)	2003	B5254T2	ECM	Actuation	
V70(00-)	2003	B5254T2	ECM	Special functions	Resetting the adaptation values
V70(00-)	2003	B5234T3	ECM	Sys. Info.	
V70(00-)	2003	B5234T3	ECM	Read code	
V70(00-)	2003	B5234T3	ECM	Clear code	
V70(00-)	2003	B5234T3	ECM	Data stream	
V70(00-)	2003	B5234T3	ECM	Actuation	
V70(00-)	2003	B5204T5	ECM	Sys. Info.	
V70(00-)	2003	B5204T5	ECM	Read code	
V70(00-)	2003	B5204T5	ECM	Clear code	
V70(00-)	2003	B5204T5	ECM	Data stream	
V70(00-)	2003	B5204T5	ECM	Actuation	
V70(00-)	2003	B5254T4	ECM	Sys. Info.	
V70(00-)	2003	B5254T4	ECM	Read code	
V70(00-)	2003	B5254T4	ECM	Clear code	
V70(00-)	2003	B5254T4	ECM	Data stream	
V70(00-)	2003	B5254T4	ECM	Actuation	
V70(00-)	2003	B6294S	ECM	Sys. Info.	
V70(00-)	2003	B6294S	ECM	Read code	
V70(00-)	2003	B6294S	ECM	Clear code	
V70(00-)	2003	B6294S	ECM	Data stream	
V70(00-)	2003	B6294S	ECM	Actuation	
V70(00-)	2003	B5244T7	ECM	Sys. Info.	
V70(00-)	2003	B5244T7	ECM	Read code	
V70(00-)	2003	B5244T7	ECM	Clear code	
V70(00-)	2003	B5244T7	ECM	Data stream	

model	year	type	system	function	subfunction
V70(00-)	2003	B5244T7	ECM	Actuation	
V70(00-)	2003	B5244T7	ECM	Special functions	Resetting the adaptation values
V70(00-)	2003	B5234T7	ECM	Sys. Info.	
V70(00-)	2003	B5234T7	ECM	Read code	
V70(00-)	2003	B5234T7	ECM	Clear code	
V70(00-)	2003	B5234T7	ECM	Data stream	
V70(00-)	2003	B5234T7	ECM	Actuation	
V70(00-)	2003	B5234T7	ECM	Special functions	Resetting the adaptation values
V70(00-)	2003	D5244T	Diesel Eng	Sys. Info.	
V70(00-)	2003	D5244T	Diesel Eng	Read code	
V70(00-)	2003	D5244T	Diesel Eng	Clear code	
V70(00-)	2003	D5244T	Diesel Eng	Data stream	
V70(00-)	2003	D5244T	Diesel Eng	Actuation	
V70(00-)	2003	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)	2003	D5252T	Diesel Eng	Sys. Info.	
V70(00-)	2003	D5252T	Diesel Eng	Read code	
V70(00-)	2003	D5252T	Diesel Eng	Clear code	
V70(00-)	2003	D5252T	Diesel Eng	Data stream	
V70(00-)	2003	D5252T	Diesel Eng	Actuation	
V70(00-)	2003	D5252T	Diesel Eng	Special functions	Programming the idle speed
V70(00-)	2003	AW55-50SN	TCM	Sys. Info.	
V70(00-)	2003	AW55-50SN	TCM	Read code	
V70(00-)	2003	AW55-50SN	TCM	Clear code	
V70(00-)	2003	AW55-50SN	TCM	Data stream	
V70(00-)	2003	AW55-50SN	TCM	Actuation	
V70(00-)	2003	AW55-50SN	TCM	Special functions	Reset adaptation to zero
V70(00-)	2003	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2003	4T65EV-GT	TCM	Sys. Info.	
V70(00-)	2003	4T65EV-GT	TCM	Read code	
V70(00-)	2003	4T65EV-GT	TCM	Clear code	
V70(00-)	2003	4T65EV-GT	TCM	Data stream	
V70(00-)	2003	4T65EV-GT	TCM	Actuation	
V70(00-)	2003	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
V70(00-)	2003	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2003	AW50-42	TCM	Sys. Info.	
V70(00-)	2003	AW50-42	TCM	Read code	
V70(00-)	2003	AW50-42	TCM	Clear code	
V70(00-)	2003	AW50-42	TCM	Data stream	
V70(00-)	2003	AW50-42	TCM	Actuation	
V70(00-)	2003	AW50-42	TCM	Special functions	Reset adaptation to zero
V70(00-)	2003	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2003	AW50/51AW D	TCM	Sys. Info.	
V70(00-)	2003	AW50/51AW D	TCM	Read code	
V70(00-)	2003	AW50/51AW D	TCM	Clear code	
V70(00-)	2003	AW50/51AW D	TCM	Data stream	
V70(00-)	2003	AW50/51AW D	TCM	Actuation	
V70(00-)	2003	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70(00-)	2003	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2003	TF-80SC	TCM	Sys. Info.	
V70(00-)	2003	TF-80SC	TCM	Read code	
V70(00-)	2003	TF-80SC	TCM	Clear code	
V70(00-)	2003	TF-80SC	TCM	Data stream	
V70(00-)	2003	TF-80SC	TCM	Actuation	
V70(00-)	2003	TF-80SC	TCM	Special functions	Resetting the adaptation
V70(00-)	2003	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
V70(00-)	2003	4T65EV	TCM	Sys. Info.	
V70(00-)	2003	4T65EV	TCM	Read code	
V70(00-)	2003	4T65EV	TCM	Clear code	
V70(00-)	2003	4T65EV	TCM	Data stream	
V70(00-)	2003	4T65EV	TCM	Actuation	
V70(00-)	2003	4T65AWD	TCM	Sys. Info.	
V70(00-)	2003	4T65AWD	TCM	Read code	
V70(00-)	2003	4T65AWD	TCM	Clear code	
V70(00-)	2003	4T65AWD	TCM	Data stream	
V70(00-)	2003	4T65AWD	TCM	Actuation	
V70(00-)	2003	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70(00-)	2003	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2003	4T65AWD	ABS	Sys. Info.	
V70(00-)	2003	4T65AWD	ABS	Read code	
V70(00-)	2003	4T65AWD	ABS	Clear code	
V70(00-)	2003	4T65AWD	ABS	Data stream	

model	year	type	system	function	subfunction	
V70(00-)		2003	4T65AWD	ABS	Actuation	
V70(00-)		2003	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70(00-)		2003	4T65AWD	ABS	Special functions	Calibration
V70(00-)		2003	4T65AWD	SRS	Sys. Info.	
V70(00-)		2003	4T65AWD	SRS	Read code	
V70(00-)		2003	4T65AWD	SRS	Clear code	
V70(00-)		2003	4T65AWD	SRS	Data stream	
V70(00-)		2003	4T65AWD	SRS	Freeze frame	
V70(00-)		2003	4T65AWD	CEM	Sys. Info.	
V70(00-)		2003	4T65AWD	CEM	Read code	
V70(00-)		2003	4T65AWD	CEM	Clear code	
V70(00-)		2003	4T65AWD	CEM	Data stream	
V70(00-)		2003	4T65AWD	CEM	Actuation	
V70(00-)		2003	4T65AWD	CEM	Special functions	Reading alarm cause(*)
V70(00-)		2003	4T65AWD	CEM	Special functions	Resetting the factory settings
V70(00-)		2003	4T65AWD	UEM	Sys. Info.	
V70(00-)		2003	4T65AWD	UEM	Read code	
V70(00-)		2003	4T65AWD	UEM	Clear code	
V70(00-)		2003	4T65AWD	UEM	Data stream	
V70(00-)		2003	4T65AWD	UEM	Actuation	
V70(00-)		2003	4T65AWD	UEM	Special functions	Configuration of the siren
V70(00-)		2003	4T65AWD	UEM	Special functions	Programming the control unit
V70(00-)		2003	4T65AWD	UEM	Special functions	Reading the programmed values
V70(00-)		2003	4T65AWD	REM	Sys. Info.	
V70(00-)		2003	4T65AWD	REM	Read code	
V70(00-)		2003	4T65AWD	REM	Clear code	
V70(00-)		2003	4T65AWD	REM	Data stream	
V70(00-)		2003	4T65AWD	REM	Actuation	
V70(00-)		2003	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70(00-)		2003	4T65AWD	DIM	Sys. Info.	
V70(00-)		2003	4T65AWD	DIM	Read code	
V70(00-)		2003	4T65AWD	DIM	Clear code	
V70(00-)		2003	4T65AWD	DIM	Data stream	
V70(00-)		2003	4T65AWD	DIM	Actuation	
V70(00-)		2003	4T65AWD	DIM	Freeze frame	
V70(00-)		2003	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V70(00-)		2003	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70(00-)		2003	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
V70(00-)		2003	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
V70(00-)		2003	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
V70(00-)		2003	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
V70(00-)		2003	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
V70(00-)		2003	4T65AWD	DIM	Special functions	Programming of clock (*)
V70(00-)		2003	4T65AWD	DIM	Special functions	Programming of zeros (*)
V70(00-)		2003	4T65AWD	DIM	Special functions	Programming parking brake warning
V70(00-)		2003	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70(00-)		2003	4T65AWD	DIM	Special functions	Programming instrument lighting
V70(00-)		2003	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
V70(00-)		2003	4T65AWD	DIM	Special functions	Display of DSTC message
V70(00-)		2003	4T65AWD	DIM	Special functions	Read out programmed values
V70(00-)		2003	4T65AWD	PDM	Sys. Info.	
V70(00-)		2003	4T65AWD	PDM	Read code	
V70(00-)		2003	4T65AWD	PDM	Clear code	
V70(00-)		2003	4T65AWD	PDM	Data stream	
V70(00-)		2003	4T65AWD	PDM	Actuation	
V70(00-)		2003	4T65AWD	PDM	Special functions	Initialize the window(*)
V70(00-)		2003	4T65AWD	PSM	Sys. Info.	
V70(00-)		2003	4T65AWD	PSM	Read code	
V70(00-)		2003	4T65AWD	PSM	Clear code	
V70(00-)		2003	4T65AWD	PSM	Data stream	
V70(00-)		2003	4T65AWD	PSM	Actuation	
V70(00-)		2003	4T65AWD	DDM	Sys. Info.	
V70(00-)		2003	4T65AWD	DDM	Read code	
V70(00-)		2003	4T65AWD	DDM	Clear code	
V70(00-)		2003	4T65AWD	DDM	Data stream	
V70(00-)		2003	4T65AWD	DDM	Actuation	
V70(00-)		2003	4T65AWD	DDM	Special functions	Initialize the window(*)
V70(00-)		2003	4T65AWD	CCM	Sys. Info.	
V70(00-)		2003	4T65AWD	CCM	Read code	
V70(00-)		2003	4T65AWD	CCM	Clear code	
V70(00-)		2003	4T65AWD	CCM	Data stream	
V70(00-)		2003	4T65AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
V70(00-)		2003	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
V70(00-)		2003	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(00-)		2003	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(00-)		2003	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)

model	year	type	system	function	subfunction
V70(00-)	2003	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70(00-)	2003	4T65AWD	CCM	Special functions	Programming the seat temperature
V70(00-)	2003	4T65AWD	PHM	Sys. Info.	
V70(00-)	2003	4T65AWD	PHM	Read code	
V70(00-)	2003	4T65AWD	PHM	Clear code	
V70(00-)	2003	4T65AWD	PHM	Data stream	
V70(00-)	2003	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
V70(00-)	2003	4T65AWD	AUM	Sys. Info.	
V70(00-)	2003	4T65AWD	AUM	Read code	
V70(00-)	2003	4T65AWD	AUM	Clear code	
V70(00-)	2003	4T65AWD	AUM	Data stream	
V70(00-)	2003	4T65AWD	SWM	Sys. Info.	
V70(00-)	2003	4T65AWD	SWM	Read code	
V70(00-)	2003	4T65AWD	SWM	Clear code	
V70(00-)	2003	4T65AWD	SWM	Data stream	
V70(00-)	2003	4T65AWD	DEM	Sys. Info.	
V70(00-)	2003	4T65AWD	DEM	Read code	
V70(00-)	2003	4T65AWD	DEM	Clear code	
V70(00-)	2003	4T65AWD	DEM	Data stream	
V70(00-)	2003	4T65AWD	SAS	Sys. Info.	
V70(00-)	2003	4T65AWD	SAS	Read code	
V70(00-)	2003	4T65AWD	SAS	Clear code	
V70(00-)	2003	4T65AWD	SAS	Data stream	
V70(00-)	2003	4T65AWD	RTI	Sys. Info.	
V70(00-)	2003	4T65AWD	RTI	Read code	
V70(00-)	2003	4T65AWD	RTI	Clear code	
V70(00-)	2003	4T65AWD	AEM	Sys. Info.	
V70(00-)	2003	4T65AWD	AEM	Read code	
V70(00-)	2003	4T65AWD	AEM	Clear code	
V70(00-)	2003	4T65AWD	AEM	Data stream	
V70(00-)	2003	4T65AWD	AEM	Actuation	
V70(00-)	2003	4T65AWD	CPM	Sys. Info.	
V70(00-)	2003	4T65AWD	CPM	Data stream	
V70(00-)	2003	4T65AWD	CPM	Special functions	Programming the additional and parking heater
V70(00-)	2003	4T65AWD	ETM	Sys. Info.	
V70(00-)	2003	4T65AWD	ETM	Data stream	
V70(00-)	2004	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(00-)	2004	B5244S	ECM	Sys. Info.	
V70(00-)	2004	B5244S	ECM	Read code	
V70(00-)	2004	B5244S	ECM	Clear code	
V70(00-)	2004	B5244S	ECM	Data stream	
V70(00-)	2004	B5244S	ECM	Actuation	
V70(00-)	2004	B6304S3	ECM	Sys. Info.	
V70(00-)	2004	B6304S3	ECM	Read code	
V70(00-)	2004	B6304S3	ECM	Clear code	
V70(00-)	2004	B6304S3	ECM	Data stream	
V70(00-)	2004	B6304S3	ECM	Actuation	
V70(00-)	2004	B6294T	ECM	Sys. Info.	
V70(00-)	2004	B6294T	ECM	Read code	
V70(00-)	2004	B6294T	ECM	Clear code	
V70(00-)	2004	B6294T	ECM	Data stream	
V70(00-)	2004	B6294T	ECM	Actuation	
V70(00-)	2004	B6294T	ECM	Special functions	Resetting the adaptation values
V70(00-)	2004	B6284T	ECM	Sys. Info.	
V70(00-)	2004	B6284T	ECM	Read code	
V70(00-)	2004	B6284T	ECM	Clear code	
V70(00-)	2004	B6284T	ECM	Data stream	
V70(00-)	2004	B6284T	ECM	Actuation	
V70(00-)	2004	B5204T4	ECM	Sys. Info.	
V70(00-)	2004	B5204T4	ECM	Read code	
V70(00-)	2004	B5204T4	ECM	Clear code	
V70(00-)	2004	B5204T4	ECM	Data stream	
V70(00-)	2004	B5204T4	ECM	Actuation	
V70(00-)	2004	B5204T3	ECM	Sys. Info.	
V70(00-)	2004	B5204T3	ECM	Read code	
V70(00-)	2004	B5204T3	ECM	Clear code	
V70(00-)	2004	B5204T3	ECM	Data stream	
V70(00-)	2004	B5204T3	ECM	Actuation	
V70(00-)	2004	B5244SG	ECM	Sys. Info.	
V70(00-)	2004	B5244SG	ECM	Read code	
V70(00-)	2004	B5244SG	ECM	Clear code	
V70(00-)	2004	B5244SG	ECM	Data stream	
V70(00-)	2004	B5244SG	ECM	Actuation	
V70(00-)	2004	B6294S2	ECM	Sys. Info.	
V70(00-)	2004	B6294S2	ECM	Read code	
V70(00-)	2004	B6294S2	ECM	Clear code	

model	year	type	system	function	subfunction	
V70(00-)		2004	B6294S2	ECM	Data stream	
V70(00-)		2004	B6294S2	ECM	Actuation	
V70(00-)		2004	B5244S2	ECM	Sys. Info.	
V70(00-)		2004	B5244S2	ECM	Read code	
V70(00-)		2004	B5244S2	ECM	Clear code	
V70(00-)		2004	B5244S2	ECM	Data stream	
V70(00-)		2004	B5244S2	ECM	Actuation	
V70(00-)		2004	B5254T2	ECM	Sys. Info.	
V70(00-)		2004	B5254T2	ECM	Read code	
V70(00-)		2004	B5254T2	ECM	Clear code	
V70(00-)		2004	B5254T2	ECM	Data stream	
V70(00-)		2004	B5254T2	ECM	Actuation	
V70(00-)		2004	B5254T2	ECM	Special functions	Resetting the adaptation values
V70(00-)		2004	B5234T3	ECM	Sys. Info.	
V70(00-)		2004	B5234T3	ECM	Read code	
V70(00-)		2004	B5234T3	ECM	Clear code	
V70(00-)		2004	B5234T3	ECM	Data stream	
V70(00-)		2004	B5234T3	ECM	Actuation	
V70(00-)		2004	B5204T5	ECM	Sys. Info.	
V70(00-)		2004	B5204T5	ECM	Read code	
V70(00-)		2004	B5204T5	ECM	Clear code	
V70(00-)		2004	B5204T5	ECM	Data stream	
V70(00-)		2004	B5204T5	ECM	Actuation	
V70(00-)		2004	B5254T4	ECM	Sys. Info.	
V70(00-)		2004	B5254T4	ECM	Read code	
V70(00-)		2004	B5254T4	ECM	Clear code	
V70(00-)		2004	B5254T4	ECM	Data stream	
V70(00-)		2004	B5254T4	ECM	Actuation	
V70(00-)		2004	B6294S	ECM	Sys. Info.	
V70(00-)		2004	B6294S	ECM	Read code	
V70(00-)		2004	B6294S	ECM	Clear code	
V70(00-)		2004	B6294S	ECM	Data stream	
V70(00-)		2004	B6294S	ECM	Actuation	
V70(00-)		2004	B5244T7	ECM	Sys. Info.	
V70(00-)		2004	B5244T7	ECM	Read code	
V70(00-)		2004	B5244T7	ECM	Clear code	
V70(00-)		2004	B5244T7	ECM	Data stream	
V70(00-)		2004	B5244T7	ECM	Actuation	
V70(00-)		2004	B5244T7	ECM	Special functions	Resetting the adaptation values
V70(00-)		2004	B5234T7	ECM	Sys. Info.	
V70(00-)		2004	B5234T7	ECM	Read code	
V70(00-)		2004	B5234T7	ECM	Clear code	
V70(00-)		2004	B5234T7	ECM	Data stream	
V70(00-)		2004	B5234T7	ECM	Actuation	
V70(00-)		2004	B5234T7	ECM	Special functions	Resetting the adaptation values
V70(00-)		2004	D5244T	Diesel Eng	Sys. Info.	
V70(00-)		2004	D5244T	Diesel Eng	Read code	
V70(00-)		2004	D5244T	Diesel Eng	Clear code	
V70(00-)		2004	D5244T	Diesel Eng	Data stream	
V70(00-)		2004	D5244T	Diesel Eng	Actuation	
V70(00-)		2004	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)		2004	D5252T	Diesel Eng	Sys. Info.	
V70(00-)		2004	D5252T	Diesel Eng	Read code	
V70(00-)		2004	D5252T	Diesel Eng	Clear code	
V70(00-)		2004	D5252T	Diesel Eng	Data stream	
V70(00-)		2004	D5252T	Diesel Eng	Actuation	
V70(00-)		2004	D5252T	Diesel Eng	Special functions	Programming the idle speed
V70(00-)		2004	AW55-50SN	TCM	Sys. Info.	
V70(00-)		2004	AW55-50SN	TCM	Read code	
V70(00-)		2004	AW55-50SN	TCM	Clear code	
V70(00-)		2004	AW55-50SN	TCM	Data stream	
V70(00-)		2004	AW55-50SN	TCM	Actuation	
V70(00-)		2004	AW55-50SN	TCM	Special functions	Reset adaptation to zero
V70(00-)		2004	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)		2004	4T65EV-GT	TCM	Sys. Info.	
V70(00-)		2004	4T65EV-GT	TCM	Read code	
V70(00-)		2004	4T65EV-GT	TCM	Clear code	
V70(00-)		2004	4T65EV-GT	TCM	Data stream	
V70(00-)		2004	4T65EV-GT	TCM	Actuation	
V70(00-)		2004	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
V70(00-)		2004	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)		2004	AW50-42	TCM	Sys. Info.	
V70(00-)		2004	AW50-42	TCM	Read code	
V70(00-)		2004	AW50-42	TCM	Clear code	
V70(00-)		2004	AW50-42	TCM	Data stream	
V70(00-)		2004	AW50-42	TCM	Actuation	
V70(00-)		2004	AW50-42	TCM	Special functions	Reset adaptation to zero
V70(00-)		2004	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)



model	year	type	system	function	subfunction
V70(00-)	2004	AW50/51AW D	TCM	Sys. Info.	
V70(00-)	2004	AW50/51AW D	TCM	Read code	
V70(00-)	2004	AW50/51AW D	TCM	Clear code	
V70(00-)	2004	AW50/51AW D	TCM	Data stream	
V70(00-)	2004	AW50/51AW D	TCM	Actuation	
V70(00-)	2004	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70(00-)	2004	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2004	TF-80SC	TCM	Sys. Info.	
V70(00-)	2004	TF-80SC	TCM	Read code	
V70(00-)	2004	TF-80SC	TCM	Clear code	
V70(00-)	2004	TF-80SC	TCM	Data stream	
V70(00-)	2004	TF-80SC	TCM	Actuation	
V70(00-)	2004	TF-80SC	TCM	Special functions	Resetting the adaptation
V70(00-)	2004	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
V70(00-)	2004	4T65EV	TCM	Sys. Info.	
V70(00-)	2004	4T65EV	TCM	Read code	
V70(00-)	2004	4T65EV	TCM	Clear code	
V70(00-)	2004	4T65EV	TCM	Data stream	
V70(00-)	2004	4T65EV	TCM	Actuation	
V70(00-)	2004	4T65AWD	TCM	Sys. Info.	
V70(00-)	2004	4T65AWD	TCM	Read code	
V70(00-)	2004	4T65AWD	TCM	Clear code	
V70(00-)	2004	4T65AWD	TCM	Data stream	
V70(00-)	2004	4T65AWD	TCM	Actuation	
V70(00-)	2004	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70(00-)	2004	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2004	4T65AWD	ABS	Sys. Info.	
V70(00-)	2004	4T65AWD	ABS	Read code	
V70(00-)	2004	4T65AWD	ABS	Clear code	
V70(00-)	2004	4T65AWD	ABS	Data stream	
V70(00-)	2004	4T65AWD	ABS	Actuation	
V70(00-)	2004	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70(00-)	2004	4T65AWD	ABS	Special functions	Calibration
V70(00-)	2004	4T65AWD	SRS	Sys. Info.	
V70(00-)	2004	4T65AWD	SRS	Read code	
V70(00-)	2004	4T65AWD	SRS	Clear code	
V70(00-)	2004	4T65AWD	SRS	Data stream	
V70(00-)	2004	4T65AWD	SRS	Freeze frame	
V70(00-)	2004	4T65AWD	CEM	Sys. Info.	
V70(00-)	2004	4T65AWD	CEM	Read code	
V70(00-)	2004	4T65AWD	CEM	Clear code	
V70(00-)	2004	4T65AWD	CEM	Data stream	
V70(00-)	2004	4T65AWD	CEM	Actuation	
V70(00-)	2004	4T65AWD	CEM	Special functions	Reading alarm cause(*)
V70(00-)	2004	4T65AWD	CEM	Special functions	Resetting the factory settings
V70(00-)	2004	4T65AWD	UEM	Sys. Info.	
V70(00-)	2004	4T65AWD	UEM	Read code	
V70(00-)	2004	4T65AWD	UEM	Clear code	
V70(00-)	2004	4T65AWD	UEM	Data stream	
V70(00-)	2004	4T65AWD	UEM	Actuation	
V70(00-)	2004	4T65AWD	UEM	Special functions	Configuration of the siren
V70(00-)	2004	4T65AWD	UEM	Special functions	Programming the control unit
V70(00-)	2004	4T65AWD	UEM	Special functions	Reading the programmed values
V70(00-)	2004	4T65AWD	REM	Sys. Info.	
V70(00-)	2004	4T65AWD	REM	Read code	
V70(00-)	2004	4T65AWD	REM	Clear code	
V70(00-)	2004	4T65AWD	REM	Data stream	
V70(00-)	2004	4T65AWD	REM	Actuation	
V70(00-)	2004	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70(00-)	2004	4T65AWD	DIM	Sys. Info.	
V70(00-)	2004	4T65AWD	DIM	Read code	
V70(00-)	2004	4T65AWD	DIM	Clear code	
V70(00-)	2004	4T65AWD	DIM	Data stream	
V70(00-)	2004	4T65AWD	DIM	Actuation	
V70(00-)	2004	4T65AWD	DIM	Freeze frame	
V70(00-)	2004	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V70(00-)	2004	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70(00-)	2004	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
V70(00-)	2004	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
V70(00-)	2004	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)

model	year	type	system	function	subfunction
V70(00-)	2004	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
V70(00-)	2004	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
V70(00-)	2004	4T65AWD	DIM	Special functions	Programming of clock (*)
V70(00-)	2004	4T65AWD	DIM	Special functions	Programming of zeros (*)
V70(00-)	2004	4T65AWD	DIM	Special functions	Programming parking brake warning
V70(00-)	2004	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal, seat belt reminder
V70(00-)	2004	4T65AWD	DIM	Special functions	Programming instrument lighting
V70(00-)	2004	4T65AWD	DIM	Special functions	Programming text message, seat belt reminder
V70(00-)	2004	4T65AWD	DIM	Special functions	Display of DSTC message
V70(00-)	2004	4T65AWD	DIM	Special functions	Read out programmed values
V70(00-)	2004	4T65AWD	PDM	Sys. Info.	
V70(00-)	2004	4T65AWD	PDM	Read code	
V70(00-)	2004	4T65AWD	PDM	Clear code	
V70(00-)	2004	4T65AWD	PDM	Data stream	
V70(00-)	2004	4T65AWD	PDM	Actuation	
V70(00-)	2004	4T65AWD	PDM	Special functions	Initialize the window(*)
V70(00-)	2004	4T65AWD	PSM	Sys. Info.	
V70(00-)	2004	4T65AWD	PSM	Read code	
V70(00-)	2004	4T65AWD	PSM	Clear code	
V70(00-)	2004	4T65AWD	PSM	Data stream	
V70(00-)	2004	4T65AWD	PSM	Actuation	
V70(00-)	2004	4T65AWD	DDM	Sys. Info.	
V70(00-)	2004	4T65AWD	DDM	Read code	
V70(00-)	2004	4T65AWD	DDM	Clear code	
V70(00-)	2004	4T65AWD	DDM	Data stream	
V70(00-)	2004	4T65AWD	DDM	Actuation	
V70(00-)	2004	4T65AWD	DDM	Special functions	Initialize the window(*)
V70(00-)	2004	4T65AWD	CCM	Sys. Info.	
V70(00-)	2004	4T65AWD	CCM	Read code	
V70(00-)	2004	4T65AWD	CCM	Clear code	
V70(00-)	2004	4T65AWD	CCM	Data stream	
V70(00-)	2004	4T65AWD	CCM	Special functions	Self-adjustment of damper motor end stops(*)
V70(00-)	2004	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
V70(00-)	2004	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(00-)	2004	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(00-)	2004	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
V70(00-)	2004	4T65AWD	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
V70(00-)	2004	4T65AWD	CCM	Special functions	Programming the seat temperature
V70(00-)	2004	4T65AWD	PHM	Sys. Info.	
V70(00-)	2004	4T65AWD	PHM	Read code	
V70(00-)	2004	4T65AWD	PHM	Clear code	
V70(00-)	2004	4T65AWD	PHM	Data stream	
V70(00-)	2004	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
V70(00-)	2004	4T65AWD	AUM	Sys. Info.	
V70(00-)	2004	4T65AWD	AUM	Read code	
V70(00-)	2004	4T65AWD	AUM	Clear code	
V70(00-)	2004	4T65AWD	AUM	Data stream	
V70(00-)	2004	4T65AWD	SWM	Sys. Info.	
V70(00-)	2004	4T65AWD	SWM	Read code	
V70(00-)	2004	4T65AWD	SWM	Clear code	
V70(00-)	2004	4T65AWD	SWM	Data stream	
V70(00-)	2004	4T65AWD	SUM	Sys. Info.	
V70(00-)	2004	4T65AWD	SUM	Read code	
V70(00-)	2004	4T65AWD	SUM	Clear code	
V70(00-)	2004	4T65AWD	SUM	Data stream	
V70(00-)	2004	4T65AWD	DEM	Sys. Info.	
V70(00-)	2004	4T65AWD	DEM	Read code	
V70(00-)	2004	4T65AWD	DEM	Clear code	
V70(00-)	2004	4T65AWD	DEM	Data stream	
V70(00-)	2004	4T65AWD	SAS	Sys. Info.	
V70(00-)	2004	4T65AWD	SAS	Read code	
V70(00-)	2004	4T65AWD	SAS	Clear code	
V70(00-)	2004	4T65AWD	SAS	Data stream	
V70(00-)	2004	4T65AWD	RTI	Sys. Info.	
V70(00-)	2004	4T65AWD	RTI	Read code	
V70(00-)	2004	4T65AWD	RTI	Clear code	
V70(00-)	2004	4T65AWD	AEM	Sys. Info.	
V70(00-)	2004	4T65AWD	AEM	Read code	
V70(00-)	2004	4T65AWD	AEM	Clear code	
V70(00-)	2004	4T65AWD	AEM	Data stream	
V70(00-)	2004	4T65AWD	AEM	Actuation	
V70(00-)	2004	4T65AWD	CPM	Sys. Info.	
V70(00-)	2004	4T65AWD	CPM	Data stream	
V70(00-)	2004	4T65AWD	CPM	Special functions	Programming the additional and parking heater
V70(00-)	2004	4T65AWD	ETM	Sys. Info.	

model	year	type	system	function	subfunction	
V70(00-)		2004	4T65AWD	ETM	Data stream	
V70(00-)		2005	4T65AWD	General Service	Resetting the SRL(Service Reminder Lamp)to zero	
V70(00-)		2005	B5244S4	ECM	Sys. Info.	
V70(00-)		2005	B5244S4	ECM	Read code	
V70(00-)		2005	B5244S4	ECM	Clear code	
V70(00-)		2005	B5244S4	ECM	Data stream	
V70(00-)		2005	B5244S4	ECM	Actuation	
V70(00-)		2005	B5244S4	ECM	Special functions	Resetting the adaptation values
V70(00-)		2005	B5244S5	ECM	Sys. Info.	
V70(00-)		2005	B5244S5	ECM	Read code	
V70(00-)		2005	B5244S5	ECM	Clear code	
V70(00-)		2005	B5244S5	ECM	Data stream	
V70(00-)		2005	B5244S5	ECM	Actuation	
V70(00-)		2005	B5244S5	ECM	Special functions	Resetting the adaptation values
V70(00-)		2005	B5244S7	ECM	Sys. Info.	
V70(00-)		2005	B5244S7	ECM	Read code	
V70(00-)		2005	B5244S7	ECM	Clear code	
V70(00-)		2005	B5244S7	ECM	Data stream	
V70(00-)		2005	B5244S7	ECM	Actuation	
V70(00-)		2005	B4204S3	ECM	Sys. Info.	
V70(00-)		2005	B4204S3	ECM	Read code	
V70(00-)		2005	B4204S3	ECM	Clear code	
V70(00-)		2005	B4204S3	ECM	Data stream	
V70(00-)		2005	B4204S3	ECM	Actuation	
V70(00-)		2005	B5254T2	ECM	Sys. Info.	
V70(00-)		2005	B5254T2	ECM	Read code	
V70(00-)		2005	B5254T2	ECM	Clear code	
V70(00-)		2005	B5254T2	ECM	Data stream	
V70(00-)		2005	B5254T2	ECM	Actuation	
V70(00-)		2005	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)		2005	B5254T3	ECM	Sys. Info.	
V70(00-)		2005	B5254T3	ECM	Read code	
V70(00-)		2005	B5254T3	ECM	Clear code	
V70(00-)		2005	B5254T3	ECM	Data stream	
V70(00-)		2005	B5254T3	ECM	Actuation	
V70(00-)		2005	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)		2005	B5254T7	ECM	Sys. Info.	
V70(00-)		2005	B5254T7	ECM	Read code	
V70(00-)		2005	B5254T7	ECM	Clear code	
V70(00-)		2005	B5254T7	ECM	Data stream	
V70(00-)		2005	B5254T7	ECM	Actuation	
V70(00-)		2005	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)		2005	B5204T5	ECM	Sys. Info.	
V70(00-)		2005	B5204T5	ECM	Read code	
V70(00-)		2005	B5204T5	ECM	Clear code	
V70(00-)		2005	B5204T5	ECM	Data stream	
V70(00-)		2005	B5204T5	ECM	Actuation	
V70(00-)		2005	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)		2005	B6294T	ECM	Sys. Info.	
V70(00-)		2005	B6294T	ECM	Read code	
V70(00-)		2005	B6294T	ECM	Clear code	
V70(00-)		2005	B6294T	ECM	Data stream	
V70(00-)		2005	B6294T	ECM	Actuation	
V70(00-)		2005	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)		2005	B4164S3	ECM	Sys. Info.	
V70(00-)		2005	B4164S3	ECM	Read code	
V70(00-)		2005	B4164S3	ECM	Clear code	
V70(00-)		2005	B4164S3	ECM	Data stream	
V70(00-)		2005	B4164S3	ECM	Actuation	
V70(00-)		2005	B4164S3	ECM	Special functions	Resetting the adaptation values
V70(00-)		2005	B5244T5	ECM	Sys. Info.	
V70(00-)		2005	B5244T5	ECM	Read code	
V70(00-)		2005	B5244T5	ECM	Clear code	
V70(00-)		2005	B5244T5	ECM	Data stream	
V70(00-)		2005	B5244T5	ECM	Actuation	
V70(00-)		2005	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)		2005	B4184S11	ECM	Sys. Info.	
V70(00-)		2005	B4184S11	ECM	Read code	
V70(00-)		2005	B4184S11	ECM	Clear code	
V70(00-)		2005	B4184S11	ECM	Data stream	
V70(00-)		2005	B4184S11	ECM	Actuation	
V70(00-)		2005	B4184S11	ECM	Special functions	Resetting the adaptation values
V70(00-)		2005	D5244T	Diesel Eng	Sys. Info.	
V70(00-)		2005	D5244T	Diesel Eng	Read code	
V70(00-)		2005	D5244T	Diesel Eng	Clear code	
V70(00-)		2005	D5244T	Diesel Eng	Data stream	
V70(00-)		2005	D5244T	Diesel Eng	Actuation	

model	year	type	system	function	subfunction
V70(00-)		2005 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)		2005 D5244T4	Diesel Eng	Sys. Info.	
V70(00-)		2005 D5244T4	Diesel Eng	Read code	
V70(00-)		2005 D5244T4	Diesel Eng	Clear code	
V70(00-)		2005 D5244T4	Diesel Eng	Data stream	
V70(00-)		2005 D5244T4	Diesel Eng	Actuation	
V70(00-)		2005 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)		2005 D5244T4	Diesel Eng	Special functions	Resetting counter oil
V70(00-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)		2005 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)		2005 D5244T5	Diesel Eng	Sys. Info.	
V70(00-)		2005 D5244T5	Diesel Eng	Read code	
V70(00-)		2005 D5244T5	Diesel Eng	Clear code	
V70(00-)		2005 D5244T5	Diesel Eng	Data stream	
V70(00-)		2005 D5244T5	Diesel Eng	Actuation	
V70(00-)		2005 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)		2005 D5244T5	Diesel Eng	Special functions	Resetting counter oil
V70(00-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)		2005 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)		2005 D5244T8	Diesel Eng	Sys. Info.	
V70(00-)		2005 D5244T8	Diesel Eng	Read code	
V70(00-)		2005 D5244T8	Diesel Eng	Clear code	
V70(00-)		2005 D5244T8	Diesel Eng	Data stream	
V70(00-)		2005 D5244T8	Diesel Eng	Actuation	
V70(00-)		2005 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)		2005 D5244T8	Diesel Eng	Special functions	Resetting counter oil
V70(00-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)		2005 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)		2005 D4164T	Diesel Eng	Sys. Info.	
V70(00-)		2005 D4164T	Diesel Eng	Read code	
V70(00-)		2005 D4164T	Diesel Eng	Clear code	
V70(00-)		2005 D4164T	Diesel Eng	Data stream	
V70(00-)		2005 D4164T	Diesel Eng	Actuation	
V70(00-)		2005 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70(00-)		2005 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(00-)		2005 D4164T	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)		2005 D4204T	Diesel Eng	Sys. Info.	
V70(00-)		2005 D4204T	Diesel Eng	Read code	
V70(00-)		2005 D4204T	Diesel Eng	Clear code	
V70(00-)		2005 D4204T	Diesel Eng	Data stream	
V70(00-)		2005 D4204T	Diesel Eng	Actuation	
V70(00-)		2005 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)		2005 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V70(00-)		2005 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70(00-)		2005 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(00-)		2005 D4204T	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)		2005 AW55-50/51SN	TCM	Sys. Info.	
V70(00-)		2005 AW55-50/51SN	TCM	Read code	
V70(00-)		2005 AW55-50/51SN	TCM	Clear code	
V70(00-)		2005 AW55-50/51SN	TCM	Data stream	
V70(00-)		2005 AW55-50/51SN	TCM	Actuation	
V70(00-)		2005 AW55-50/51SN	TCM	Freeze frame	
V70(00-)		2005 AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V70(00-)		2005 AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)

model	year	type	system	function	subfunction
V70(00-)	2005	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
V70(00-)	2005	4T65AWD	TCM	Sys. Info.	
V70(00-)	2005	4T65AWD	TCM	Read code	
V70(00-)	2005	4T65AWD	TCM	Clear code	
V70(00-)	2005	4T65AWD	TCM	Data stream	
V70(00-)	2005	4T65AWD	TCM	Actuation	
V70(00-)	2005	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70(00-)	2005	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2005	TF-80SC	TCM	Sys. Info.	
V70(00-)	2005	TF-80SC	TCM	Read code	
V70(00-)	2005	TF-80SC	TCM	Clear code	
V70(00-)	2005	TF-80SC	TCM	Data stream	
V70(00-)	2005	TF-80SC	TCM	Actuation	
V70(00-)	2005	TF-80SC	TCM	Special functions	Reset adaptation to zero
V70(00-)	2005	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2005	TF-80SC	TCM	Special functions	Calibration of position sensor
V70(00-)	2005	AW50/51AW D	TCM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	TCM	Read code	
V70(00-)	2005	AW50/51AW D	TCM	Clear code	
V70(00-)	2005	AW50/51AW D	TCM	Data stream	
V70(00-)	2005	AW50/51AW D	TCM	Actuation	
V70(00-)	2005	AW50/51AW D	TCM	Freeze frame	
V70(00-)	2005	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70(00-)	2005	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2005	AW50/51AW D	ABS	Sys. Info.	
V70(00-)	2005	AW50/51AW D	ABS	Read code	
V70(00-)	2005	AW50/51AW D	ABS	Clear code	
V70(00-)	2005	AW50/51AW D	ABS	Data stream	
V70(00-)	2005	AW50/51AW D	ABS	Actuation	
V70(00-)	2005	AW50/51AW D	ABS	Freeze frame	
V70(00-)	2005	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V70(00-)	2005	AW50/51AW D	ABS	Special functions	Reading off the configuration
V70(00-)	2005	AW50/51AW D	ABS	Special functions	Calibration
V70(00-)	2005	AW50/51AW D	SRS	Sys. Info.	
V70(00-)	2005	AW50/51AW D	SRS	Read code	
V70(00-)	2005	AW50/51AW D	SRS	Clear code	
V70(00-)	2005	AW50/51AW D	SRS	Data stream	
V70(00-)	2005	AW50/51AW D	SRS	Freeze frame	
V70(00-)	2005	AW50/51AW D	CEM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	CEM	Read code	
V70(00-)	2005	AW50/51AW D	CEM	Clear code	
V70(00-)	2005	AW50/51AW D	CEM	Data stream	
V70(00-)	2005	AW50/51AW D	CEM	Actuation	
V70(00-)	2005	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V70(00-)	2005	AW50/51AW D	CEM	Special functions	Programming control module
V70(00-)	2005	AW50/51AW D	CEM	Special functions	Resetting the factory settings

model	year	type	system	function	subfunction
V70(00-)	2005	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V70(00-)	2005	AW50/51AW D	CEM	Special functions	Resetting crash mode
V70(00-)	2005	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V70(00-)	2005	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V70(00-)	2005	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V70(00-)	2005	AW50/51AW D	CEM	Special functions	Ignition switch key position
V70(00-)	2005	AW50/51AW D	UEM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	UEM	Read code	
V70(00-)	2005	AW50/51AW D	UEM	Clear code	
V70(00-)	2005	AW50/51AW D	UEM	Data stream	
V70(00-)	2005	AW50/51AW D	UEM	Actuation	
V70(00-)	2005	AW50/51AW D	UEM	Special functions	Configuration of the siren
V70(00-)	2005	AW50/51AW D	UEM	Special functions	Programming the control unit
V70(00-)	2005	AW50/51AW D	UEM	Special functions	Reading the programmed values
V70(00-)	2005	AW50/51AW D	REM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	REM	Read code	
V70(00-)	2005	AW50/51AW D	REM	Clear code	
V70(00-)	2005	AW50/51AW D	REM	Data stream	
V70(00-)	2005	AW50/51AW D	REM	Actuation	
V70(00-)	2005	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70(00-)	2005	AW50/51AW D	DIM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	DIM	Read code	
V70(00-)	2005	AW50/51AW D	DIM	Clear code	
V70(00-)	2005	AW50/51AW D	DIM	Data stream	
V70(00-)	2005	AW50/51AW D	DIM	Actuation	
V70(00-)	2005	AW50/51AW D	DIM	Freeze frame	
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder

model	year	type	system	function	subfunction
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Display of DSTC message
V70(00-)	2005	AW50/51AW D	DIM	Special functions	Read out programmed values
V70(00-)	2005	AW50/51AW D	PDM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	PDM	Read code	
V70(00-)	2005	AW50/51AW D	PDM	Clear code	
V70(00-)	2005	AW50/51AW D	PDM	Data stream	
V70(00-)	2005	AW50/51AW D	PDM	Actuation	
V70(00-)	2005	AW50/51AW D	PDM	Special functions	Initialize the window(*)
V70(00-)	2005	AW50/51AW D	PSM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	PSM	Read code	
V70(00-)	2005	AW50/51AW D	PSM	Clear code	
V70(00-)	2005	AW50/51AW D	PSM	Data stream	
V70(00-)	2005	AW50/51AW D	PSM	Actuation	
V70(00-)	2005	AW50/51AW D	DDM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	DDM	Read code	
V70(00-)	2005	AW50/51AW D	DDM	Clear code	
V70(00-)	2005	AW50/51AW D	DDM	Data stream	
V70(00-)	2005	AW50/51AW D	DDM	Actuation	
V70(00-)	2005	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V70(00-)	2005	AW50/51AW D	CCM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	CCM	Read code	
V70(00-)	2005	AW50/51AW D	CCM	Clear code	
V70(00-)	2005	AW50/51AW D	CCM	Data stream	
V70(00-)	2005	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
V70(00-)	2005	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V70(00-)	2005	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(00-)	2005	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(00-)	2005	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V70(00-)	2005	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70(00-)	2005	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V70(00-)	2005	AW50/51AW D	PHM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	PHM	Read code	
V70(00-)	2005	AW50/51AW D	PHM	Clear code	
V70(00-)	2005	AW50/51AW D	PHM	Data stream	
V70(00-)	2005	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V70(00-)	2005	AW50/51AW D	AUM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	AUM	Read code	
V70(00-)	2005	AW50/51AW D	AUM	Clear code	
V70(00-)	2005	AW50/51AW D	AUM	Data stream	

model	year	type	system	function	subfunction
V70(00-)	2005	AW50/51AW D	DEM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	DEM	Read code	
V70(00-)	2005	AW50/51AW D	DEM	Clear code	
V70(00-)	2005	AW50/51AW D	DEM	Data stream	
V70(00-)	2005	AW50/51AW D	SAS	Sys. Info.	
V70(00-)	2005	AW50/51AW D	SAS	Read code	
V70(00-)	2005	AW50/51AW D	SAS	Clear code	
V70(00-)	2005	AW50/51AW D	SAS	Data stream	
V70(00-)	2005	AW50/51AW D	RTI	Sys. Info.	
V70(00-)	2005	AW50/51AW D	RTI	Read code	
V70(00-)	2005	AW50/51AW D	RTI	Clear code	
V70(00-)	2005	AW50/51AW D	AEM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	AEM	Read code	
V70(00-)	2005	AW50/51AW D	AEM	Clear code	
V70(00-)	2005	AW50/51AW D	AEM	Data stream	
V70(00-)	2005	AW50/51AW D	AEM	Actuation	
V70(00-)	2005	AW50/51AW D	CPM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	CPM	Data stream	
V70(00-)	2005	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
V70(00-)	2005	AW50/51AW D	HCM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	HCM	Read code	
V70(00-)	2005	AW50/51AW D	HCM	Clear code	
V70(00-)	2005	AW50/51AW D	HCM	Special functions	Calibration of position sensor
V70(00-)	2005	AW50/51AW D	KVM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	KVM	Read code	
V70(00-)	2005	AW50/51AW D	KVM	Clear code	
V70(00-)	2005	AW50/51AW D	KVM	Data stream	
V70(00-)	2005	AW50/51AW D	KVM	Actuation	
V70(00-)	2005	AW50/51AW D	RDAR	Sys. Info.	
V70(00-)	2005	AW50/51AW D	RDAR	Read code	
V70(00-)	2005	AW50/51AW D	RDAR	Clear code	
V70(00-)	2005	AW50/51AW D	RDAR	Data stream	
V70(00-)	2005	AW50/51AW D	SUB	Sys. Info.	
V70(00-)	2005	AW50/51AW D	SUB	Read code	
V70(00-)	2005	AW50/51AW D	SUB	Clear code	
V70(00-)	2005	AW50/51AW D	SUB	Data stream	
V70(00-)	2005	AW50/51AW D	CVM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	CVM	Read code	
V70(00-)	2005	AW50/51AW D	CVM	Clear code	



model	year	type	system	function	subfunction
V70(00-)	2005	AW50/51AW D	CVM	Data stream	
V70(00-)	2005	AW50/51AW D	DABM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	DABM	Read code	
V70(00-)	2005	AW50/51AW D	DABM	Clear code	
V70(00-)	2005	AW50/51AW D	DABM	Data stream	
V70(00-)	2005	AW50/51AW D	PAC	Sys. Info.	
V70(00-)	2005	AW50/51AW D	PAC	Read code	
V70(00-)	2005	AW50/51AW D	PAC	Clear code	
V70(00-)	2005	AW50/51AW D	PAC	Data stream	
V70(00-)	2005	AW50/51AW D	TRM	Sys. Info.	
V70(00-)	2005	AW50/51AW D	TRM	Read code	
V70(00-)	2005	AW50/51AW D	TRM	Clear code	
V70(00-)	2005	AW50/51AW D	TRM	Data stream	
V70(00-)	2006	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(00-)	2006	B5244S4	ECM	Sys. Info.	
V70(00-)	2006	B5244S4	ECM	Read code	
V70(00-)	2006	B5244S4	ECM	Clear code	
V70(00-)	2006	B5244S4	ECM	Data stream	
V70(00-)	2006	B5244S4	ECM	Actuation	
V70(00-)	2006	B5244S4	ECM	Special functions	Resetting the adaptation values
V70(00-)	2006	B5244S5	ECM	Sys. Info.	
V70(00-)	2006	B5244S5	ECM	Read code	
V70(00-)	2006	B5244S5	ECM	Clear code	
V70(00-)	2006	B5244S5	ECM	Data stream	
V70(00-)	2006	B5244S5	ECM	Actuation	
V70(00-)	2006	B5244S5	ECM	Special functions	Resetting the adaptation values
V70(00-)	2006	B5244S7	ECM	Sys. Info.	
V70(00-)	2006	B5244S7	ECM	Read code	
V70(00-)	2006	B5244S7	ECM	Clear code	
V70(00-)	2006	B5244S7	ECM	Data stream	
V70(00-)	2006	B5244S7	ECM	Actuation	
V70(00-)	2006	B4204S3	ECM	Sys. Info.	
V70(00-)	2006	B4204S3	ECM	Read code	
V70(00-)	2006	B4204S3	ECM	Clear code	
V70(00-)	2006	B4204S3	ECM	Data stream	
V70(00-)	2006	B4204S3	ECM	Actuation	
V70(00-)	2006	B5254T2	ECM	Sys. Info.	
V70(00-)	2006	B5254T2	ECM	Read code	
V70(00-)	2006	B5254T2	ECM	Clear code	
V70(00-)	2006	B5254T2	ECM	Data stream	
V70(00-)	2006	B5254T2	ECM	Actuation	
V70(00-)	2006	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2006	B5254T3	ECM	Sys. Info.	
V70(00-)	2006	B5254T3	ECM	Read code	
V70(00-)	2006	B5254T3	ECM	Clear code	
V70(00-)	2006	B5254T3	ECM	Data stream	
V70(00-)	2006	B5254T3	ECM	Actuation	
V70(00-)	2006	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2006	B5254T7	ECM	Sys. Info.	
V70(00-)	2006	B5254T7	ECM	Read code	
V70(00-)	2006	B5254T7	ECM	Clear code	
V70(00-)	2006	B5254T7	ECM	Data stream	
V70(00-)	2006	B5254T7	ECM	Actuation	
V70(00-)	2006	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2006	B5204T5	ECM	Sys. Info.	
V70(00-)	2006	B5204T5	ECM	Read code	
V70(00-)	2006	B5204T5	ECM	Clear code	
V70(00-)	2006	B5204T5	ECM	Data stream	
V70(00-)	2006	B5204T5	ECM	Actuation	
V70(00-)	2006	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2006	B6294T	ECM	Sys. Info.	
V70(00-)	2006	B6294T	ECM	Read code	
V70(00-)	2006	B6294T	ECM	Clear code	
V70(00-)	2006	B6294T	ECM	Data stream	

model	year	type	system	function	subfunction
V70(00-)		2006 B6294T	ECM	Actuation	
V70(00-)		2006 B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)		2006 B4164S3	ECM	Sys. Info.	
V70(00-)		2006 B4164S3	ECM	Read code	
V70(00-)		2006 B4164S3	ECM	Clear code	
V70(00-)		2006 B4164S3	ECM	Data stream	
V70(00-)		2006 B4164S3	ECM	Actuation	
V70(00-)		2006 B4164S3	ECM	Special functions	Resetting the adaptation values
V70(00-)		2006 B5244T5	ECM	Sys. Info.	
V70(00-)		2006 B5244T5	ECM	Read code	
V70(00-)		2006 B5244T5	ECM	Clear code	
V70(00-)		2006 B5244T5	ECM	Data stream	
V70(00-)		2006 B5244T5	ECM	Actuation	
V70(00-)		2006 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)		2006 B4184S11	ECM	Sys. Info.	
V70(00-)		2006 B4184S11	ECM	Read code	
V70(00-)		2006 B4184S11	ECM	Clear code	
V70(00-)		2006 B4184S11	ECM	Data stream	
V70(00-)		2006 B4184S11	ECM	Actuation	
V70(00-)		2006 B4184S11	ECM	Special functions	Resetting the adaptation values
V70(00-)		2006 D5244T	Diesel Eng	Sys. Info.	
V70(00-)		2006 D5244T	Diesel Eng	Read code	
V70(00-)		2006 D5244T	Diesel Eng	Clear code	
V70(00-)		2006 D5244T	Diesel Eng	Data stream	
V70(00-)		2006 D5244T	Diesel Eng	Actuation	
V70(00-)		2006 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)		2006 D5244T4	Diesel Eng	Sys. Info.	
V70(00-)		2006 D5244T4	Diesel Eng	Read code	
V70(00-)		2006 D5244T4	Diesel Eng	Clear code	
V70(00-)		2006 D5244T4	Diesel Eng	Data stream	
V70(00-)		2006 D5244T4	Diesel Eng	Actuation	
V70(00-)		2006 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)		2006 D5244T4	Diesel Eng	Special functions	Resetting counter oil
V70(00-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)		2006 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)		2006 D5244T5	Diesel Eng	Sys. Info.	
V70(00-)		2006 D5244T5	Diesel Eng	Read code	
V70(00-)		2006 D5244T5	Diesel Eng	Clear code	
V70(00-)		2006 D5244T5	Diesel Eng	Data stream	
V70(00-)		2006 D5244T5	Diesel Eng	Actuation	
V70(00-)		2006 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)		2006 D5244T5	Diesel Eng	Special functions	Resetting counter oil
V70(00-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)		2006 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)		2006 D5244T8	Diesel Eng	Sys. Info.	
V70(00-)		2006 D5244T8	Diesel Eng	Read code	
V70(00-)		2006 D5244T8	Diesel Eng	Clear code	
V70(00-)		2006 D5244T8	Diesel Eng	Data stream	
V70(00-)		2006 D5244T8	Diesel Eng	Actuation	
V70(00-)		2006 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)		2006 D5244T8	Diesel Eng	Special functions	Resetting counter oil
V70(00-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)		2006 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)		2006 D4164T	Diesel Eng	Sys. Info.	
V70(00-)		2006 D4164T	Diesel Eng	Read code	
V70(00-)		2006 D4164T	Diesel Eng	Clear code	
V70(00-)		2006 D4164T	Diesel Eng	Data stream	
V70(00-)		2006 D4164T	Diesel Eng	Actuation	
V70(00-)		2006 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70(00-)		2006 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(00-)		2006 D4164T	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)		2006 D4204T	Diesel Eng	Sys. Info.	
V70(00-)		2006 D4204T	Diesel Eng	Read code	

model	year	type	system	function	subfunction
V70(00-)	2006	D4204T	Diesel Eng	Clear code	
V70(00-)	2006	D4204T	Diesel Eng	Data stream	
V70(00-)	2006	D4204T	Diesel Eng	Actuation	
V70(00-)	2006	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)	2006	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V70(00-)	2006	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70(00-)	2006	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(00-)	2006	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)	2006	AW55-50/51SN	TCM	Sys. Info.	
V70(00-)	2006	AW55-50/51SN	TCM	Read code	
V70(00-)	2006	AW55-50/51SN	TCM	Clear code	
V70(00-)	2006	AW55-50/51SN	TCM	Data stream	
V70(00-)	2006	AW55-50/51SN	TCM	Actuation	
V70(00-)	2006	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V70(00-)	2006	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2006	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
V70(00-)	2006	4T65AWD	TCM	Sys. Info.	
V70(00-)	2006	4T65AWD	TCM	Read code	
V70(00-)	2006	4T65AWD	TCM	Clear code	
V70(00-)	2006	4T65AWD	TCM	Data stream	
V70(00-)	2006	4T65AWD	TCM	Actuation	
V70(00-)	2006	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70(00-)	2006	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2006	TF-80SC	TCM	Sys. Info.	
V70(00-)	2006	TF-80SC	TCM	Read code	
V70(00-)	2006	TF-80SC	TCM	Clear code	
V70(00-)	2006	TF-80SC	TCM	Data stream	
V70(00-)	2006	TF-80SC	TCM	Actuation	
V70(00-)	2006	TF-80SC	TCM	Freeze frame	
V70(00-)	2006	TF-80SC	TCM	Special functions	Reset adaptation to zero
V70(00-)	2006	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2006	TF-80SC	TCM	Special functions	Calibration of position sensor
V70(00-)	2006	AW50/51AW D	TCM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	TCM	Read code	
V70(00-)	2006	AW50/51AW D	TCM	Clear code	
V70(00-)	2006	AW50/51AW D	TCM	Data stream	
V70(00-)	2006	AW50/51AW D	TCM	Actuation	
V70(00-)	2006	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70(00-)	2006	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2006	AW50/51AW D	ABS	Sys. Info.	
V70(00-)	2006	AW50/51AW D	ABS	Read code	
V70(00-)	2006	AW50/51AW D	ABS	Clear code	
V70(00-)	2006	AW50/51AW D	ABS	Data stream	
V70(00-)	2006	AW50/51AW D	ABS	Actuation	
V70(00-)	2006	AW50/51AW D	ABS	Freeze frame	
V70(00-)	2006	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V70(00-)	2006	AW50/51AW D	ABS	Special functions	Reading off the configuration
V70(00-)	2006	AW50/51AW D	ABS	Special functions	Calibration
V70(00-)	2006	AW50/51AW D	SRS	Sys. Info.	
V70(00-)	2006	AW50/51AW D	SRS	Read code	
V70(00-)	2006	AW50/51AW D	SRS	Clear code	

model	year	type	system	function	subfunction
V70(00-)	2006	AW50/51AW D	SRS	Data stream	
V70(00-)	2006	AW50/51AW D	SRS	Freeze frame	
V70(00-)	2006	AW50/51AW D	CEM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	CEM	Read code	
V70(00-)	2006	AW50/51AW D	CEM	Clear code	
V70(00-)	2006	AW50/51AW D	CEM	Data stream	
V70(00-)	2006	AW50/51AW D	CEM	Actuation	
V70(00-)	2006	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V70(00-)	2006	AW50/51AW D	CEM	Special functions	Programming control module
V70(00-)	2006	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V70(00-)	2006	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V70(00-)	2006	AW50/51AW D	CEM	Special functions	Resetting crash mode
V70(00-)	2006	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V70(00-)	2006	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V70(00-)	2006	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V70(00-)	2006	AW50/51AW D	CEM	Special functions	Ignition switch key position
V70(00-)	2006	AW50/51AW D	UEM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	UEM	Read code	
V70(00-)	2006	AW50/51AW D	UEM	Clear code	
V70(00-)	2006	AW50/51AW D	UEM	Data stream	
V70(00-)	2006	AW50/51AW D	UEM	Actuation	
V70(00-)	2006	AW50/51AW D	UEM	Special functions	Configuration of the siren
V70(00-)	2006	AW50/51AW D	UEM	Special functions	Programming the control unit
V70(00-)	2006	AW50/51AW D	UEM	Special functions	Reading the programmed values
V70(00-)	2006	AW50/51AW D	REM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	REM	Read code	
V70(00-)	2006	AW50/51AW D	REM	Clear code	
V70(00-)	2006	AW50/51AW D	REM	Data stream	
V70(00-)	2006	AW50/51AW D	REM	Actuation	
V70(00-)	2006	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70(00-)	2006	AW50/51AW D	DIM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	DIM	Read code	
V70(00-)	2006	AW50/51AW D	DIM	Clear code	
V70(00-)	2006	AW50/51AW D	DIM	Data stream	
V70(00-)	2006	AW50/51AW D	DIM	Actuation	
V70(00-)	2006	AW50/51AW D	DIM	Freeze frame	
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)

model	year	type	system	function	subfunction
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Display of DSTC message
V70(00-)	2006	AW50/51AW D	DIM	Special functions	Read out programmed values
V70(00-)	2006	AW50/51AW D	PDM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	PDM	Read code	
V70(00-)	2006	AW50/51AW D	PDM	Clear code	
V70(00-)	2006	AW50/51AW D	PDM	Data stream	
V70(00-)	2006	AW50/51AW D	PDM	Actuation	
V70(00-)	2006	AW50/51AW D	PDM	Special functions	Initialize the window(*)
V70(00-)	2006	AW50/51AW D	PSM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	PSM	Read code	
V70(00-)	2006	AW50/51AW D	PSM	Clear code	
V70(00-)	2006	AW50/51AW D	PSM	Data stream	
V70(00-)	2006	AW50/51AW D	PSM	Actuation	
V70(00-)	2006	AW50/51AW D	DDM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	DDM	Read code	
V70(00-)	2006	AW50/51AW D	DDM	Clear code	
V70(00-)	2006	AW50/51AW D	DDM	Data stream	
V70(00-)	2006	AW50/51AW D	DDM	Actuation	
V70(00-)	2006	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V70(00-)	2006	AW50/51AW D	CCM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	CCM	Read code	
V70(00-)	2006	AW50/51AW D	CCM	Clear code	
V70(00-)	2006	AW50/51AW D	CCM	Data stream	
V70(00-)	2006	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
V70(00-)	2006	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V70(00-)	2006	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(00-)	2006	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(00-)	2006	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V70(00-)	2006	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit

model	year	type	system	function	subfunction
V70(00-)	2006	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V70(00-)	2006	AW50/51AW D	PHM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	PHM	Read code	
V70(00-)	2006	AW50/51AW D	PHM	Clear code	
V70(00-)	2006	AW50/51AW D	PHM	Data stream	
V70(00-)	2006	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V70(00-)	2006	AW50/51AW D	AUM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	AUM	Read code	
V70(00-)	2006	AW50/51AW D	AUM	Clear code	
V70(00-)	2006	AW50/51AW D	AUM	Data stream	
V70(00-)	2006	AW50/51AW D	DEM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	DEM	Read code	
V70(00-)	2006	AW50/51AW D	DEM	Clear code	
V70(00-)	2006	AW50/51AW D	DEM	Data stream	
V70(00-)	2006	AW50/51AW D	SAS	Sys. Info.	
V70(00-)	2006	AW50/51AW D	SAS	Read code	
V70(00-)	2006	AW50/51AW D	SAS	Clear code	
V70(00-)	2006	AW50/51AW D	SAS	Data stream	
V70(00-)	2006	AW50/51AW D	RTI	Sys. Info.	
V70(00-)	2006	AW50/51AW D	RTI	Read code	
V70(00-)	2006	AW50/51AW D	RTI	Clear code	
V70(00-)	2006	AW50/51AW D	AEM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	AEM	Read code	
V70(00-)	2006	AW50/51AW D	AEM	Clear code	
V70(00-)	2006	AW50/51AW D	AEM	Data stream	
V70(00-)	2006	AW50/51AW D	AEM	Actuation	
V70(00-)	2006	AW50/51AW D	CPM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	CPM	Data stream	
V70(00-)	2006	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
V70(00-)	2006	AW50/51AW D	HCM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	HCM	Read code	
V70(00-)	2006	AW50/51AW D	HCM	Clear code	
V70(00-)	2006	AW50/51AW D	HCM	Special functions	Calibration of position sensor
V70(00-)	2006	AW50/51AW D	KVM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	KVM	Read code	
V70(00-)	2006	AW50/51AW D	KVM	Clear code	
V70(00-)	2006	AW50/51AW D	KVM	Data stream	
V70(00-)	2006	AW50/51AW D	KVM	Actuation	
V70(00-)	2006	AW50/51AW D	RDAR	Sys. Info.	

model	year	type	system	function	subfunction
V70(00-)	2006	AW50/51AW D	RDAR	Read code	
V70(00-)	2006	AW50/51AW D	RDAR	Clear code	
V70(00-)	2006	AW50/51AW D	RDAR	Data stream	
V70(00-)	2006	AW50/51AW D	SUB	Sys. Info.	
V70(00-)	2006	AW50/51AW D	SUB	Read code	
V70(00-)	2006	AW50/51AW D	SUB	Clear code	
V70(00-)	2006	AW50/51AW D	SUB	Data stream	
V70(00-)	2006	AW50/51AW D	CVM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	CVM	Read code	
V70(00-)	2006	AW50/51AW D	CVM	Clear code	
V70(00-)	2006	AW50/51AW D	CVM	Data stream	
V70(00-)	2006	AW50/51AW D	DABM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	DABM	Read code	
V70(00-)	2006	AW50/51AW D	DABM	Clear code	
V70(00-)	2006	AW50/51AW D	DABM	Data stream	
V70(00-)	2006	AW50/51AW D	PAC	Sys. Info.	
V70(00-)	2006	AW50/51AW D	PAC	Read code	
V70(00-)	2006	AW50/51AW D	PAC	Clear code	
V70(00-)	2006	AW50/51AW D	PAC	Data stream	
V70(00-)	2006	AW50/51AW D	TRM	Sys. Info.	
V70(00-)	2006	AW50/51AW D	TRM	Read code	
V70(00-)	2006	AW50/51AW D	TRM	Clear code	
V70(00-)	2006	AW50/51AW D	TRM	Data stream	
V70(00-)	2007	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(00-)	2007	B5244S4	ECM	Sys. Info.	
V70(00-)	2007	B5244S4	ECM	Read code	
V70(00-)	2007	B5244S4	ECM	Clear code	
V70(00-)	2007	B5244S4	ECM	Data stream	
V70(00-)	2007	B5244S4	ECM	Actuation	
V70(00-)	2007	B5244S4	ECM	Special functions	Resetting the adaptation values
V70(00-)	2007	B5244S5	ECM	Sys. Info.	
V70(00-)	2007	B5244S5	ECM	Read code	
V70(00-)	2007	B5244S5	ECM	Clear code	
V70(00-)	2007	B5244S5	ECM	Data stream	
V70(00-)	2007	B5244S5	ECM	Actuation	
V70(00-)	2007	B5244S5	ECM	Special functions	Resetting the adaptation values
V70(00-)	2007	B5244S7	ECM	Sys. Info.	
V70(00-)	2007	B5244S7	ECM	Read code	
V70(00-)	2007	B5244S7	ECM	Clear code	
V70(00-)	2007	B5244S7	ECM	Data stream	
V70(00-)	2007	B5244S7	ECM	Actuation	
V70(00-)	2007	B4204S3	ECM	Sys. Info.	
V70(00-)	2007	B4204S3	ECM	Read code	
V70(00-)	2007	B4204S3	ECM	Clear code	
V70(00-)	2007	B4204S3	ECM	Data stream	
V70(00-)	2007	B4204S3	ECM	Actuation	
V70(00-)	2007	B5254T2	ECM	Sys. Info.	
V70(00-)	2007	B5254T2	ECM	Read code	
V70(00-)	2007	B5254T2	ECM	Clear code	
V70(00-)	2007	B5254T2	ECM	Data stream	
V70(00-)	2007	B5254T2	ECM	Actuation	
V70(00-)	2007	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2007	B5254T3	ECM	Sys. Info.	
V70(00-)	2007	B5254T3	ECM	Read code	

model	year	type	system	function	subfunction
V70(00-)	2007	B5254T3	ECM	Clear code	
V70(00-)	2007	B5254T3	ECM	Data stream	
V70(00-)	2007	B5254T3	ECM	Actuation	
V70(00-)	2007	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2007	B5254T7	ECM	Sys. Info.	
V70(00-)	2007	B5254T7	ECM	Read code	
V70(00-)	2007	B5254T7	ECM	Clear code	
V70(00-)	2007	B5254T7	ECM	Data stream	
V70(00-)	2007	B5254T7	ECM	Actuation	
V70(00-)	2007	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2007	B5204T5	ECM	Sys. Info.	
V70(00-)	2007	B5204T5	ECM	Read code	
V70(00-)	2007	B5204T5	ECM	Clear code	
V70(00-)	2007	B5204T5	ECM	Data stream	
V70(00-)	2007	B5204T5	ECM	Actuation	
V70(00-)	2007	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2007	B6294T	ECM	Sys. Info.	
V70(00-)	2007	B6294T	ECM	Read code	
V70(00-)	2007	B6294T	ECM	Clear code	
V70(00-)	2007	B6294T	ECM	Data stream	
V70(00-)	2007	B6294T	ECM	Actuation	
V70(00-)	2007	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2007	B4164S3	ECM	Sys. Info.	
V70(00-)	2007	B4164S3	ECM	Read code	
V70(00-)	2007	B4164S3	ECM	Clear code	
V70(00-)	2007	B4164S3	ECM	Data stream	
V70(00-)	2007	B4164S3	ECM	Actuation	
V70(00-)	2007	B4164S3	ECM	Special functions	Resetting the adaptation values
V70(00-)	2007	B5244T5	ECM	Sys. Info.	
V70(00-)	2007	B5244T5	ECM	Read code	
V70(00-)	2007	B5244T5	ECM	Clear code	
V70(00-)	2007	B5244T5	ECM	Data stream	
V70(00-)	2007	B5244T5	ECM	Actuation	
V70(00-)	2007	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2007	B4184S11	ECM	Sys. Info.	
V70(00-)	2007	B4184S11	ECM	Read code	
V70(00-)	2007	B4184S11	ECM	Clear code	
V70(00-)	2007	B4184S11	ECM	Data stream	
V70(00-)	2007	B4184S11	ECM	Actuation	
V70(00-)	2007	B4184S11	ECM	Special functions	Resetting the adaptation values
V70(00-)	2007	D5244T	Diesel Eng	Sys. Info.	
V70(00-)	2007	D5244T	Diesel Eng	Read code	
V70(00-)	2007	D5244T	Diesel Eng	Clear code	
V70(00-)	2007	D5244T	Diesel Eng	Data stream	
V70(00-)	2007	D5244T	Diesel Eng	Actuation	
V70(00-)	2007	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)	2007	D5244T4	Diesel Eng	Sys. Info.	
V70(00-)	2007	D5244T4	Diesel Eng	Read code	
V70(00-)	2007	D5244T4	Diesel Eng	Clear code	
V70(00-)	2007	D5244T4	Diesel Eng	Data stream	
V70(00-)	2007	D5244T4	Diesel Eng	Actuation	
V70(00-)	2007	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)	2007	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V70(00-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)	2007	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)	2007	D5244T5	Diesel Eng	Sys. Info.	
V70(00-)	2007	D5244T5	Diesel Eng	Read code	
V70(00-)	2007	D5244T5	Diesel Eng	Clear code	
V70(00-)	2007	D5244T5	Diesel Eng	Data stream	
V70(00-)	2007	D5244T5	Diesel Eng	Actuation	
V70(00-)	2007	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)	2007	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V70(00-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)	2007	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)	2007	D5244T8	Diesel Eng	Sys. Info.	
V70(00-)	2007	D5244T8	Diesel Eng	Read code	
V70(00-)	2007	D5244T8	Diesel Eng	Clear code	
V70(00-)	2007	D5244T8	Diesel Eng	Data stream	



model	year	type	system	function	subfunction
V70(00-)	2007	D5244T8	Diesel Eng	Actuation	
V70(00-)	2007	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)	2007	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V70(00-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)	2007	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)	2007	D4164T	Diesel Eng	Sys. Info.	
V70(00-)	2007	D4164T	Diesel Eng	Read code	
V70(00-)	2007	D4164T	Diesel Eng	Clear code	
V70(00-)	2007	D4164T	Diesel Eng	Data stream	
V70(00-)	2007	D4164T	Diesel Eng	Actuation	
V70(00-)	2007	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70(00-)	2007	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(00-)	2007	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)	2007	D4204T	Diesel Eng	Sys. Info.	
V70(00-)	2007	D4204T	Diesel Eng	Read code	
V70(00-)	2007	D4204T	Diesel Eng	Clear code	
V70(00-)	2007	D4204T	Diesel Eng	Data stream	
V70(00-)	2007	D4204T	Diesel Eng	Actuation	
V70(00-)	2007	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)	2007	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V70(00-)	2007	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70(00-)	2007	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(00-)	2007	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)	2007	AW55-50/51SN	TCM	Sys. Info.	
V70(00-)	2007	AW55-50/51SN	TCM	Read code	
V70(00-)	2007	AW55-50/51SN	TCM	Clear code	
V70(00-)	2007	AW55-50/51SN	TCM	Data stream	
V70(00-)	2007	AW55-50/51SN	TCM	Actuation	
V70(00-)	2007	AW55-50/51SN	TCM	Freeze frame	
V70(00-)	2007	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V70(00-)	2007	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2007	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
V70(00-)	2007	4T65AWD	TCM	Sys. Info.	
V70(00-)	2007	4T65AWD	TCM	Read code	
V70(00-)	2007	4T65AWD	TCM	Clear code	
V70(00-)	2007	4T65AWD	TCM	Data stream	
V70(00-)	2007	4T65AWD	TCM	Actuation	
V70(00-)	2007	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70(00-)	2007	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2007	TF-80SC	TCM	Sys. Info.	
V70(00-)	2007	TF-80SC	TCM	Read code	
V70(00-)	2007	TF-80SC	TCM	Clear code	
V70(00-)	2007	TF-80SC	TCM	Data stream	
V70(00-)	2007	TF-80SC	TCM	Actuation	
V70(00-)	2007	TF-80SC	TCM	Freeze frame	
V70(00-)	2007	TF-80SC	TCM	Special functions	Reset adaptation to zero
V70(00-)	2007	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2007	TF-80SC	TCM	Special functions	Calibration of position sensor
V70(00-)	2007	TF-80SC	TCM	Special functions	Activating gear indication
V70(00-)	2007	TF-80SC	TCM	Special functions	Control module adaptation
V70(00-)	2007	TF-80SC AWD	TCM	Sys. Info.	
V70(00-)	2007	TF-80SC AWD	TCM	Read code	
V70(00-)	2007	TF-80SC AWD	TCM	Clear code	
V70(00-)	2007	TF-80SC AWD	TCM	Data stream	
V70(00-)	2007	TF-80SC AWD	TCM	Actuation	
V70(00-)	2007	TF-80SC AWD	TCM	Freeze frame	
V70(00-)	2007	AW50/51AW D	TCM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	TCM	Read code	
V70(00-)	2007	AW50/51AW D	TCM	Clear code	
V70(00-)	2007	AW50/51AW D	TCM	Data stream	

model	year	type	system	function	subfunction
V70(00-)	2007	AW50/51AW D	TCM	Actuation	
V70(00-)	2007	AW50/51AW D	TCM	Freeze frame	
V70(00-)	2007	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70(00-)	2007	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2007	AW50/51AW D	ABS	Sys. Info.	
V70(00-)	2007	AW50/51AW D	ABS	Read code	
V70(00-)	2007	AW50/51AW D	ABS	Clear code	
V70(00-)	2007	AW50/51AW D	ABS	Data stream	
V70(00-)	2007	AW50/51AW D	ABS	Actuation	
V70(00-)	2007	AW50/51AW D	ABS	Freeze frame	
V70(00-)	2007	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V70(00-)	2007	AW50/51AW D	ABS	Special functions	Reading off the configuration
V70(00-)	2007	AW50/51AW D	ABS	Special functions	Calibration
V70(00-)	2007	AW50/51AW D	SRS	Sys. Info.	
V70(00-)	2007	AW50/51AW D	SRS	Read code	
V70(00-)	2007	AW50/51AW D	SRS	Clear code	
V70(00-)	2007	AW50/51AW D	SRS	Data stream	
V70(00-)	2007	AW50/51AW D	SRS	Freeze frame	
V70(00-)	2007	AW50/51AW D	CEM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	CEM	Read code	
V70(00-)	2007	AW50/51AW D	CEM	Clear code	
V70(00-)	2007	AW50/51AW D	CEM	Data stream	
V70(00-)	2007	AW50/51AW D	CEM	Actuation	
V70(00-)	2007	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V70(00-)	2007	AW50/51AW D	CEM	Special functions	Programming control module
V70(00-)	2007	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V70(00-)	2007	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V70(00-)	2007	AW50/51AW D	CEM	Special functions	Resetting crash mode
V70(00-)	2007	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V70(00-)	2007	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V70(00-)	2007	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V70(00-)	2007	AW50/51AW D	CEM	Special functions	Ignition switch key position
V70(00-)	2007	AW50/51AW D	UEM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	UEM	Read code	
V70(00-)	2007	AW50/51AW D	UEM	Clear code	
V70(00-)	2007	AW50/51AW D	UEM	Data stream	
V70(00-)	2007	AW50/51AW D	UEM	Actuation	
V70(00-)	2007	AW50/51AW D	UEM	Special functions	Configuration of the siren
V70(00-)	2007	AW50/51AW D	UEM	Special functions	Programming the control unit

model	year	type	system	function	subfunction
V70(00-)	2007	AW50/51AW D	UEM	Special functions	Reading the programmed values
V70(00-)	2007	AW50/51AW D	REM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	REM	Read code	
V70(00-)	2007	AW50/51AW D	REM	Clear code	
V70(00-)	2007	AW50/51AW D	REM	Data stream	
V70(00-)	2007	AW50/51AW D	REM	Actuation	
V70(00-)	2007	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70(00-)	2007	AW50/51AW D	DIM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	DIM	Read code	
V70(00-)	2007	AW50/51AW D	DIM	Clear code	
V70(00-)	2007	AW50/51AW D	DIM	Data stream	
V70(00-)	2007	AW50/51AW D	DIM	Actuation	
V70(00-)	2007	AW50/51AW D	DIM	Freeze frame	
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Display of DSTC message
V70(00-)	2007	AW50/51AW D	DIM	Special functions	Read out programmed values
V70(00-)	2007	AW50/51AW D	PDM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	PDM	Read code	
V70(00-)	2007	AW50/51AW D	PDM	Clear code	
V70(00-)	2007	AW50/51AW D	PDM	Data stream	
V70(00-)	2007	AW50/51AW D	PDM	Actuation	
V70(00-)	2007	AW50/51AW D	PDM	Special functions	Initialize the window(*)
V70(00-)	2007	AW50/51AW D	PSM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	PSM	Read code	
V70(00-)	2007	AW50/51AW D	PSM	Clear code	
V70(00-)	2007	AW50/51AW D	PSM	Data stream	
V70(00-)	2007	AW50/51AW D	PSM	Actuation	

model	year	type	system	function	subfunction
V70(00-)	2007	AW50/51AW D	DDM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	DDM	Read code	
V70(00-)	2007	AW50/51AW D	DDM	Clear code	
V70(00-)	2007	AW50/51AW D	DDM	Data stream	
V70(00-)	2007	AW50/51AW D	DDM	Actuation	
V70(00-)	2007	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V70(00-)	2007	AW50/51AW D	CCM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	CCM	Read code	
V70(00-)	2007	AW50/51AW D	CCM	Clear code	
V70(00-)	2007	AW50/51AW D	CCM	Data stream	
V70(00-)	2007	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
V70(00-)	2007	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V70(00-)	2007	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(00-)	2007	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(00-)	2007	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V70(00-)	2007	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70(00-)	2007	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V70(00-)	2007	AW50/51AW D	PHM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	PHM	Read code	
V70(00-)	2007	AW50/51AW D	PHM	Clear code	
V70(00-)	2007	AW50/51AW D	PHM	Data stream	
V70(00-)	2007	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V70(00-)	2007	AW50/51AW D	AUM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	AUM	Read code	
V70(00-)	2007	AW50/51AW D	AUM	Clear code	
V70(00-)	2007	AW50/51AW D	AUM	Data stream	
V70(00-)	2007	AW50/51AW D	DEM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	DEM	Read code	
V70(00-)	2007	AW50/51AW D	DEM	Clear code	
V70(00-)	2007	AW50/51AW D	DEM	Data stream	
V70(00-)	2007	AW50/51AW D	SAS	Sys. Info.	
V70(00-)	2007	AW50/51AW D	SAS	Read code	
V70(00-)	2007	AW50/51AW D	SAS	Clear code	
V70(00-)	2007	AW50/51AW D	SAS	Data stream	
V70(00-)	2007	AW50/51AW D	RTI	Sys. Info.	
V70(00-)	2007	AW50/51AW D	RTI	Read code	
V70(00-)	2007	AW50/51AW D	RTI	Clear code	
V70(00-)	2007	AW50/51AW D	AEM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	AEM	Read code	

model	year	type	system	function	subfunction
V70(00-)	2007	AW50/51AW D	AEM	Clear code	
V70(00-)	2007	AW50/51AW D	AEM	Data stream	
V70(00-)	2007	AW50/51AW D	AEM	Actuation	
V70(00-)	2007	AW50/51AW D	CPM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	CPM	Data stream	
V70(00-)	2007	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
V70(00-)	2007	AW50/51AW D	HCM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	HCM	Read code	
V70(00-)	2007	AW50/51AW D	HCM	Clear code	
V70(00-)	2007	AW50/51AW D	HCM	Special functions	Calibration of position sensor
V70(00-)	2007	AW50/51AW D	KVM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	KVM	Read code	
V70(00-)	2007	AW50/51AW D	KVM	Clear code	
V70(00-)	2007	AW50/51AW D	KVM	Data stream	
V70(00-)	2007	AW50/51AW D	KVM	Actuation	
V70(00-)	2007	AW50/51AW D	RDAR	Sys. Info.	
V70(00-)	2007	AW50/51AW D	RDAR	Read code	
V70(00-)	2007	AW50/51AW D	RDAR	Clear code	
V70(00-)	2007	AW50/51AW D	RDAR	Data stream	
V70(00-)	2007	AW50/51AW D	SUB	Sys. Info.	
V70(00-)	2007	AW50/51AW D	SUB	Read code	
V70(00-)	2007	AW50/51AW D	SUB	Clear code	
V70(00-)	2007	AW50/51AW D	SUB	Data stream	
V70(00-)	2007	AW50/51AW D	CVM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	CVM	Read code	
V70(00-)	2007	AW50/51AW D	CVM	Clear code	
V70(00-)	2007	AW50/51AW D	CVM	Data stream	
V70(00-)	2007	AW50/51AW D	DABM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	DABM	Read code	
V70(00-)	2007	AW50/51AW D	DABM	Clear code	
V70(00-)	2007	AW50/51AW D	DABM	Data stream	
V70(00-)	2007	AW50/51AW D	PAC	Sys. Info.	
V70(00-)	2007	AW50/51AW D	PAC	Read code	
V70(00-)	2007	AW50/51AW D	PAC	Clear code	
V70(00-)	2007	AW50/51AW D	PAC	Data stream	
V70(00-)	2007	AW50/51AW D	TRM	Sys. Info.	
V70(00-)	2007	AW50/51AW D	TRM	Read code	
V70(00-)	2007	AW50/51AW D	TRM	Clear code	
V70(00-)	2007	AW50/51AW D	TRM	Data stream	

model	year	type	system	function	subfunction
V70(00-)	2008	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(00-)	2008	B5244S4	ECM	Sys. Info.	
V70(00-)	2008	B5244S4	ECM	Read code	
V70(00-)	2008	B5244S4	ECM	Clear code	
V70(00-)	2008	B5244S4	ECM	Data stream	
V70(00-)	2008	B5244S4	ECM	Actuation	
V70(00-)	2008	B5244S4	ECM	Special functions	Resetting the adaptation values
V70(00-)	2008	B5244S5	ECM	Sys. Info.	
V70(00-)	2008	B5244S5	ECM	Read code	
V70(00-)	2008	B5244S5	ECM	Clear code	
V70(00-)	2008	B5244S5	ECM	Data stream	
V70(00-)	2008	B5244S5	ECM	Actuation	
V70(00-)	2008	B5244S5	ECM	Special functions	Resetting the adaptation values
V70(00-)	2008	B5244S7	ECM	Sys. Info.	
V70(00-)	2008	B5244S7	ECM	Read code	
V70(00-)	2008	B5244S7	ECM	Clear code	
V70(00-)	2008	B5244S7	ECM	Data stream	
V70(00-)	2008	B5244S7	ECM	Actuation	
V70(00-)	2008	B4204S3	ECM	Sys. Info.	
V70(00-)	2008	B4204S3	ECM	Read code	
V70(00-)	2008	B4204S3	ECM	Clear code	
V70(00-)	2008	B4204S3	ECM	Data stream	
V70(00-)	2008	B4204S3	ECM	Actuation	
V70(00-)	2008	B5254T2	ECM	Sys. Info.	
V70(00-)	2008	B5254T2	ECM	Read code	
V70(00-)	2008	B5254T2	ECM	Clear code	
V70(00-)	2008	B5254T2	ECM	Data stream	
V70(00-)	2008	B5254T2	ECM	Actuation	
V70(00-)	2008	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2008	B5254T3	ECM	Sys. Info.	
V70(00-)	2008	B5254T3	ECM	Read code	
V70(00-)	2008	B5254T3	ECM	Clear code	
V70(00-)	2008	B5254T3	ECM	Data stream	
V70(00-)	2008	B5254T3	ECM	Actuation	
V70(00-)	2008	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2008	B5254T7	ECM	Sys. Info.	
V70(00-)	2008	B5254T7	ECM	Read code	
V70(00-)	2008	B5254T7	ECM	Clear code	
V70(00-)	2008	B5254T7	ECM	Data stream	
V70(00-)	2008	B5254T7	ECM	Actuation	
V70(00-)	2008	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2008	B5204T5	ECM	Sys. Info.	
V70(00-)	2008	B5204T5	ECM	Read code	
V70(00-)	2008	B5204T5	ECM	Clear code	
V70(00-)	2008	B5204T5	ECM	Data stream	
V70(00-)	2008	B5204T5	ECM	Actuation	
V70(00-)	2008	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2008	B6294T	ECM	Sys. Info.	
V70(00-)	2008	B6294T	ECM	Read code	
V70(00-)	2008	B6294T	ECM	Clear code	
V70(00-)	2008	B6294T	ECM	Data stream	
V70(00-)	2008	B6294T	ECM	Actuation	
V70(00-)	2008	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2008	B4164S3	ECM	Sys. Info.	
V70(00-)	2008	B4164S3	ECM	Read code	
V70(00-)	2008	B4164S3	ECM	Clear code	
V70(00-)	2008	B4164S3	ECM	Data stream	
V70(00-)	2008	B4164S3	ECM	Actuation	
V70(00-)	2008	B4164S3	ECM	Special functions	Resetting the adaptation values
V70(00-)	2008	B5244T5	ECM	Sys. Info.	
V70(00-)	2008	B5244T5	ECM	Read code	
V70(00-)	2008	B5244T5	ECM	Clear code	
V70(00-)	2008	B5244T5	ECM	Data stream	
V70(00-)	2008	B5244T5	ECM	Actuation	
V70(00-)	2008	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70(00-)	2008	B4184S11	ECM	Sys. Info.	
V70(00-)	2008	B4184S11	ECM	Read code	
V70(00-)	2008	B4184S11	ECM	Clear code	
V70(00-)	2008	B4184S11	ECM	Data stream	
V70(00-)	2008	B4184S11	ECM	Actuation	
V70(00-)	2008	B4184S11	ECM	Special functions	Resetting the adaptation values
V70(00-)	2008	D5244T	Diesel Eng	Sys. Info.	
V70(00-)	2008	D5244T	Diesel Eng	Read code	
V70(00-)	2008	D5244T	Diesel Eng	Clear code	
V70(00-)	2008	D5244T	Diesel Eng	Data stream	
V70(00-)	2008	D5244T	Diesel Eng	Actuation	
V70(00-)	2008	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)

model	year	type	system	function	subfunction
V70(00-)	2008	D5244T4	Diesel Eng	Sys. Info.	
V70(00-)	2008	D5244T4	Diesel Eng	Read code	
V70(00-)	2008	D5244T4	Diesel Eng	Clear code	
V70(00-)	2008	D5244T4	Diesel Eng	Data stream	
V70(00-)	2008	D5244T4	Diesel Eng	Actuation	
V70(00-)	2008	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)	2008	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)	2008	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V70(00-)	2008	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)	2008	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)	2008	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)	2008	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)	2008	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)	2008	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)	2008	D5244T5	Diesel Eng	Sys. Info.	
V70(00-)	2008	D5244T5	Diesel Eng	Read code	
V70(00-)	2008	D5244T5	Diesel Eng	Clear code	
V70(00-)	2008	D5244T5	Diesel Eng	Data stream	
V70(00-)	2008	D5244T5	Diesel Eng	Actuation	
V70(00-)	2008	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)	2008	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V70(00-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)	2008	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)	2008	D5244T8	Diesel Eng	Sys. Info.	
V70(00-)	2008	D5244T8	Diesel Eng	Read code	
V70(00-)	2008	D5244T8	Diesel Eng	Clear code	
V70(00-)	2008	D5244T8	Diesel Eng	Data stream	
V70(00-)	2008	D5244T8	Diesel Eng	Actuation	
V70(00-)	2008	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V70(00-)	2008	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(00-)	2008	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V70(00-)	2008	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V70(00-)	2008	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(00-)	2008	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(00-)	2008	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(00-)	2008	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(00-)	2008	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)	2008	D4164T	Diesel Eng	Sys. Info.	
V70(00-)	2008	D4164T	Diesel Eng	Read code	
V70(00-)	2008	D4164T	Diesel Eng	Clear code	
V70(00-)	2008	D4164T	Diesel Eng	Data stream	
V70(00-)	2008	D4164T	Diesel Eng	Actuation	
V70(00-)	2008	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70(00-)	2008	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(00-)	2008	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)	2008	D4204T	Diesel Eng	Sys. Info.	
V70(00-)	2008	D4204T	Diesel Eng	Read code	
V70(00-)	2008	D4204T	Diesel Eng	Clear code	
V70(00-)	2008	D4204T	Diesel Eng	Data stream	
V70(00-)	2008	D4204T	Diesel Eng	Actuation	
V70(00-)	2008	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70(00-)	2008	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V70(00-)	2008	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70(00-)	2008	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(00-)	2008	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V70(00-)	2008	AW55-50/51SN	TCM	Sys. Info.	
V70(00-)	2008	AW55-50/51SN	TCM	Read code	
V70(00-)	2008	AW55-50/51SN	TCM	Clear code	
V70(00-)	2008	AW55-50/51SN	TCM	Data stream	
V70(00-)	2008	AW55-50/51SN	TCM	Actuation	
V70(00-)	2008	AW55-50/51SN	TCM	Freeze frame	
V70(00-)	2008	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V70(00-)	2008	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2008	AW55-50/51SN	TCM	Special functions	Calibration of position sensor

model	year	type	system	function	subfunction
V70(00-)	2008	4T65AWD	TCM	Sys. Info.	
V70(00-)	2008	4T65AWD	TCM	Read code	
V70(00-)	2008	4T65AWD	TCM	Clear code	
V70(00-)	2008	4T65AWD	TCM	Data stream	
V70(00-)	2008	4T65AWD	TCM	Actuation	
V70(00-)	2008	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70(00-)	2008	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2008	TF-80SC	TCM	Sys. Info.	
V70(00-)	2008	TF-80SC	TCM	Read code	
V70(00-)	2008	TF-80SC	TCM	Clear code	
V70(00-)	2008	TF-80SC	TCM	Data stream	
V70(00-)	2008	TF-80SC	TCM	Actuation	
V70(00-)	2008	TF-80SC	TCM	Freeze frame	
V70(00-)	2008	TF-80SC	TCM	Special functions	Reset adaptation to zero
V70(00-)	2008	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2008	TF-80SC	TCM	Special functions	Calibration of position sensor
V70(00-)	2008	AW50/51AW D	TCM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	TCM	Read code	
V70(00-)	2008	AW50/51AW D	TCM	Clear code	
V70(00-)	2008	AW50/51AW D	TCM	Data stream	
V70(00-)	2008	AW50/51AW D	TCM	Actuation	
V70(00-)	2008	AW50/51AW D	TCM	Freeze frame	
V70(00-)	2008	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70(00-)	2008	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70(00-)	2008	AW50/51AW D	ABS	Sys. Info.	
V70(00-)	2008	AW50/51AW D	ABS	Read code	
V70(00-)	2008	AW50/51AW D	ABS	Clear code	
V70(00-)	2008	AW50/51AW D	ABS	Data stream	
V70(00-)	2008	AW50/51AW D	ABS	Actuation	
V70(00-)	2008	AW50/51AW D	ABS	Freeze frame	
V70(00-)	2008	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V70(00-)	2008	AW50/51AW D	ABS	Special functions	Reading off the configuration
V70(00-)	2008	AW50/51AW D	ABS	Special functions	Calibration
V70(00-)	2008	AW50/51AW D	SRS	Sys. Info.	
V70(00-)	2008	AW50/51AW D	SRS	Read code	
V70(00-)	2008	AW50/51AW D	SRS	Clear code	
V70(00-)	2008	AW50/51AW D	SRS	Data stream	
V70(00-)	2008	AW50/51AW D	SRS	Freeze frame	
V70(00-)	2008	AW50/51AW D	CEM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	CEM	Read code	
V70(00-)	2008	AW50/51AW D	CEM	Clear code	
V70(00-)	2008	AW50/51AW D	CEM	Data stream	
V70(00-)	2008	AW50/51AW D	CEM	Actuation	
V70(00-)	2008	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V70(00-)	2008	AW50/51AW D	CEM	Special functions	Programming control module
V70(00-)	2008	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V70(00-)	2008	AW50/51AW D	CEM	Special functions	Resetting low voltage counters



model	year	type	system	function	subfunction
V70(00-)	2008	AW50/51AW D	CEM	Special functions	Resetting crash mode
V70(00-)	2008	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V70(00-)	2008	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V70(00-)	2008	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V70(00-)	2008	AW50/51AW D	CEM	Special functions	Ignition switch key position
V70(00-)	2008	AW50/51AW D	UEM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	UEM	Read code	
V70(00-)	2008	AW50/51AW D	UEM	Clear code	
V70(00-)	2008	AW50/51AW D	UEM	Data stream	
V70(00-)	2008	AW50/51AW D	UEM	Actuation	
V70(00-)	2008	AW50/51AW D	UEM	Special functions	Configuration of the siren
V70(00-)	2008	AW50/51AW D	UEM	Special functions	Programming the control unit
V70(00-)	2008	AW50/51AW D	UEM	Special functions	Reading the programmed values
V70(00-)	2008	AW50/51AW D	REM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	REM	Read code	
V70(00-)	2008	AW50/51AW D	REM	Clear code	
V70(00-)	2008	AW50/51AW D	REM	Data stream	
V70(00-)	2008	AW50/51AW D	REM	Actuation	
V70(00-)	2008	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70(00-)	2008	AW50/51AW D	DIM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	DIM	Read code	
V70(00-)	2008	AW50/51AW D	DIM	Clear code	
V70(00-)	2008	AW50/51AW D	DIM	Data stream	
V70(00-)	2008	AW50/51AW D	DIM	Actuation	
V70(00-)	2008	AW50/51AW D	DIM	Freeze frame	
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Display of DSTC message

model	year	type	system	function	subfunction
V70(00-)	2008	AW50/51AW D	DIM	Special functions	Read out programmed values
V70(00-)	2008	AW50/51AW D	PDM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	PDM	Read code	
V70(00-)	2008	AW50/51AW D	PDM	Clear code	
V70(00-)	2008	AW50/51AW D	PDM	Data stream	
V70(00-)	2008	AW50/51AW D	PDM	Actuation	
V70(00-)	2008	AW50/51AW D	PDM	Special functions	Initialize the window(*)
V70(00-)	2008	AW50/51AW D	PSM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	PSM	Read code	
V70(00-)	2008	AW50/51AW D	PSM	Clear code	
V70(00-)	2008	AW50/51AW D	PSM	Data stream	
V70(00-)	2008	AW50/51AW D	PSM	Actuation	
V70(00-)	2008	AW50/51AW D	DDM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	DDM	Read code	
V70(00-)	2008	AW50/51AW D	DDM	Clear code	
V70(00-)	2008	AW50/51AW D	DDM	Data stream	
V70(00-)	2008	AW50/51AW D	DDM	Actuation	
V70(00-)	2008	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V70(00-)	2008	AW50/51AW D	CCM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	CCM	Read code	
V70(00-)	2008	AW50/51AW D	CCM	Clear code	
V70(00-)	2008	AW50/51AW D	CCM	Data stream	
V70(00-)	2008	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
V70(00-)	2008	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V70(00-)	2008	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(00-)	2008	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(00-)	2008	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V70(00-)	2008	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70(00-)	2008	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V70(00-)	2008	AW50/51AW D	PHM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	PHM	Read code	
V70(00-)	2008	AW50/51AW D	PHM	Clear code	
V70(00-)	2008	AW50/51AW D	PHM	Data stream	
V70(00-)	2008	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V70(00-)	2008	AW50/51AW D	AUM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	AUM	Read code	
V70(00-)	2008	AW50/51AW D	AUM	Clear code	
V70(00-)	2008	AW50/51AW D	AUM	Data stream	
V70(00-)	2008	AW50/51AW D	DEM	Sys. Info.	

model	year	type	system	function	subfunction
V70(00-)	2008	AW50/51AW D	DEM	Read code	
V70(00-)	2008	AW50/51AW D	DEM	Clear code	
V70(00-)	2008	AW50/51AW D	DEM	Data stream	
V70(00-)	2008	AW50/51AW D	SAS	Sys. Info.	
V70(00-)	2008	AW50/51AW D	SAS	Read code	
V70(00-)	2008	AW50/51AW D	SAS	Clear code	
V70(00-)	2008	AW50/51AW D	SAS	Data stream	
V70(00-)	2008	AW50/51AW D	RTI	Sys. Info.	
V70(00-)	2008	AW50/51AW D	RTI	Read code	
V70(00-)	2008	AW50/51AW D	RTI	Clear code	
V70(00-)	2008	AW50/51AW D	AEM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	AEM	Read code	
V70(00-)	2008	AW50/51AW D	AEM	Clear code	
V70(00-)	2008	AW50/51AW D	AEM	Data stream	
V70(00-)	2008	AW50/51AW D	AEM	Actuation	
V70(00-)	2008	AW50/51AW D	CPM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	CPM	Data stream	
V70(00-)	2008	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
V70(00-)	2008	AW50/51AW D	HCM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	HCM	Read code	
V70(00-)	2008	AW50/51AW D	HCM	Clear code	
V70(00-)	2008	AW50/51AW D	HCM	Special functions	Calibration of position sensor
V70(00-)	2008	AW50/51AW D	KVM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	KVM	Read code	
V70(00-)	2008	AW50/51AW D	KVM	Clear code	
V70(00-)	2008	AW50/51AW D	KVM	Data stream	
V70(00-)	2008	AW50/51AW D	KVM	Actuation	
V70(00-)	2008	AW50/51AW D	RDAR	Sys. Info.	
V70(00-)	2008	AW50/51AW D	RDAR	Read code	
V70(00-)	2008	AW50/51AW D	RDAR	Clear code	
V70(00-)	2008	AW50/51AW D	RDAR	Data stream	
V70(00-)	2008	AW50/51AW D	SUB	Sys. Info.	
V70(00-)	2008	AW50/51AW D	SUB	Read code	
V70(00-)	2008	AW50/51AW D	SUB	Clear code	
V70(00-)	2008	AW50/51AW D	SUB	Data stream	
V70(00-)	2008	AW50/51AW D	CVM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	CVM	Read code	
V70(00-)	2008	AW50/51AW D	CVM	Clear code	
V70(00-)	2008	AW50/51AW D	CVM	Data stream	

model	year	type	system	function	subfunction
V70(00-)	2008	AW50/51AW D	DABM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	DABM	Read code	
V70(00-)	2008	AW50/51AW D	DABM	Clear code	
V70(00-)	2008	AW50/51AW D	DABM	Data stream	
V70(00-)	2008	AW50/51AW D	PAC	Sys. Info.	
V70(00-)	2008	AW50/51AW D	PAC	Read code	
V70(00-)	2008	AW50/51AW D	PAC	Clear code	
V70(00-)	2008	AW50/51AW D	PAC	Data stream	
V70(00-)	2008	AW50/51AW D	TRM	Sys. Info.	
V70(00-)	2008	AW50/51AW D	TRM	Read code	
V70(00-)	2008	AW50/51AW D	TRM	Clear code	
V70(00-)	2008	AW50/51AW D	TRM	Data stream	
V70(08-)	2008	AW50/51AW D	ShortTest	Special functions	search all system and DTC(s) of vehicle
V70(08-)	2008	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(08-)	2008	B5254T6	ECM	Sys. Info.	
V70(08-)	2008	B5254T6	ECM	Read code	
V70(08-)	2008	B5254T6	ECM	Clear code	
V70(08-)	2008	B5254T6	ECM	Data stream	
V70(08-)	2008	B5254T6	ECM	Actuation	
V70(08-)	2008	B5254T6	ECM	Special functions	Adaptation of the throttle unit
V70(08-)	2008	B5254T10	ECM	Sys. Info.	
V70(08-)	2008	B5254T10	ECM	Read code	
V70(08-)	2008	B5254T10	ECM	Clear code	
V70(08-)	2008	B5254T10	ECM	Data stream	
V70(08-)	2008	B5254T10	ECM	Actuation	
V70(08-)	2008	B5254T10	ECM	Special functions	Adaptation of the throttle unit
V70(08-)	2008	B8444S	ECM	Sys. Info.	
V70(08-)	2008	B8444S	ECM	Read code	
V70(08-)	2008	B8444S	ECM	Clear code	
V70(08-)	2008	B8444S	ECM	Data stream	
V70(08-)	2008	B8444S	ECM	Actuation	
V70(08-)	2008	B8444S	ECM	Special functions	Resetting the adaptation values
V70(08-)	2008	B6304T2	ECM	Sys. Info.	
V70(08-)	2008	B6304T2	ECM	Read code	
V70(08-)	2008	B6304T2	ECM	Clear code	
V70(08-)	2008	B6304T2	ECM	Data stream	
V70(08-)	2008	B6304T2	ECM	Actuation	
V70(08-)	2008	B6304T2	ECM	Special functions	Resetting the adaptation values
V70(08-)	2008	B6324S	ECM	Sys. Info.	
V70(08-)	2008	B6324S	ECM	Read code	
V70(08-)	2008	B6324S	ECM	Clear code	
V70(08-)	2008	B6324S	ECM	Data stream	
V70(08-)	2008	B6324S	ECM	Actuation	
V70(08-)	2008	B6324S	ECM	Special functions	Resetting the adaptation values
V70(08-)	2008	B6324S2	ECM	Sys. Info.	
V70(08-)	2008	B6324S2	ECM	Read code	
V70(08-)	2008	B6324S2	ECM	Clear code	
V70(08-)	2008	B6324S2	ECM	Data stream	
V70(08-)	2008	B6324S2	ECM	Actuation	
V70(08-)	2008	B6324S2	ECM	Special functions	Resetting the adaptation values
V70(08-)	2008	D5244T5	Diesel Eng	Sys. Info.	
V70(08-)	2008	D5244T5	Diesel Eng	Read code	
V70(08-)	2008	D5244T5	Diesel Eng	Clear code	
V70(08-)	2008	D5244T5	Diesel Eng	Data stream	
V70(08-)	2008	D5244T5	Diesel Eng	Actuation	
V70(08-)	2008	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(08-)	2008	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V70(08-)	2008	D5244T16	Diesel Eng	Sys. Info.	

model	year	type	system	function	subfunction
V70(08-)	2008	D5244T16	Diesel Eng	Read code	
V70(08-)	2008	D5244T16	Diesel Eng	Clear code	
V70(08-)	2008	D5244T16	Diesel Eng	Data stream	
V70(08-)	2008	D5244T16	Diesel Eng	Actuation	
V70(08-)	2008	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
V70(08-)	2008	D5244T16	Diesel Eng	Special functions	Resetting adaptation
V70(08-)	2008	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
V70(08-)	2008	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(08-)	2008	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
V70(08-)	2008	TF-80SC	TCM	Sys. Info.	
V70(08-)	2008	TF-80SC	TCM	Read code	
V70(08-)	2008	TF-80SC	TCM	Clear code	
V70(08-)	2008	TF-80SC	TCM	Data stream	
V70(08-)	2008	TF-80SC	TCM	Actuation	
V70(08-)	2008	TF-80SC	TCM	Freeze frame	
V70(08-)	2008	TF-80SC	TCM	Special functions	Resetting the adaptation
V70(08-)	2008	TF-80SC	TCM	Special functions	Calibration of position sensor
V70(08-)	2008	TF-80SC AWD	TCM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	TCM	Read code	
V70(08-)	2008	TF-80SC AWD	TCM	Clear code	
V70(08-)	2008	TF-80SC AWD	TCM	Data stream	
V70(08-)	2008	TF-80SC AWD	TCM	Actuation	
V70(08-)	2008	TF-80SC AWD	TCM	Freeze frame	
V70(08-)	2008	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
V70(08-)	2008	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
V70(08-)	2008	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
V70(08-)	2008	TF-80SC AWD	ABS	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	ABS	Read code	
V70(08-)	2008	TF-80SC AWD	ABS	Clear code	
V70(08-)	2008	TF-80SC AWD	ABS	Data stream	
V70(08-)	2008	TF-80SC AWD	ABS	Actuation	
V70(08-)	2008	TF-80SC AWD	ABS	Freeze frame	
V70(08-)	2008	TF-80SC AWD	ABS	Special functions	Calibration
V70(08-)	2008	TF-80SC AWD	SRS	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	SRS	Read code	
V70(08-)	2008	TF-80SC AWD	SRS	Clear code	
V70(08-)	2008	TF-80SC AWD	SRS	Data stream	
V70(08-)	2008	TF-80SC AWD	SRS	Freeze frame	
V70(08-)	2008	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
V70(08-)	2008	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
V70(08-)	2008	TF-80SC AWD	CEM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	CEM	Read code	
V70(08-)	2008	TF-80SC AWD	CEM	Clear code	
V70(08-)	2008	TF-80SC AWD	CEM	Data stream	
V70(08-)	2008	TF-80SC AWD	CEM	Actuation	
V70(08-)	2008	TF-80SC AWD	DIM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	DIM	Read code	
V70(08-)	2008	TF-80SC AWD	DIM	Clear code	
V70(08-)	2008	TF-80SC AWD	DIM	Data stream	
V70(08-)	2008	TF-80SC AWD	DIM	Freeze frame	
V70(08-)	2008	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI)
V70(08-)	2008	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
V70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
V70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
V70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming of clock
V70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
V70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
V70(08-)	2008	TF-80SC AWD	PDM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	PDM	Read code	
V70(08-)	2008	TF-80SC AWD	PDM	Clear code	
V70(08-)	2008	TF-80SC AWD	PDM	Data stream	
V70(08-)	2008	TF-80SC AWD	PDM	Actuation	
V70(08-)	2008	TF-80SC AWD	PSM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	PSM	Read code	
V70(08-)	2008	TF-80SC AWD	PSM	Clear code	
V70(08-)	2008	TF-80SC AWD	PSM	Data stream	
V70(08-)	2008	TF-80SC AWD	PSM	Actuation	
V70(08-)	2008	TF-80SC AWD	DDM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	DDM	Read code	
V70(08-)	2008	TF-80SC AWD	DDM	Clear code	
V70(08-)	2008	TF-80SC AWD	DDM	Data stream	
V70(08-)	2008	TF-80SC AWD	CCM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	CCM	Read code	
V70(08-)	2008	TF-80SC AWD	CCM	Clear code	
V70(08-)	2008	TF-80SC AWD	CCM	Data stream	
V70(08-)	2008	TF-80SC AWD	CCM	Actuation	

model	year	type	system	function	subfunction
V70(08-)	2008	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
V70(08-)	2008	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(08-)	2008	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(08-)	2008	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
V70(08-)	2008	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
V70(08-)	2008	TF-80SC AWD	CCM	Special functions	Programming the evaporator, climate control module (CCM)
V70(08-)	2008	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
V70(08-)	2008	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
V70(08-)	2008	TF-80SC AWD	AUD	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	AUD	Read code	
V70(08-)	2008	TF-80SC AWD	AUD	Clear code	
V70(08-)	2008	TF-80SC AWD	DEM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	DEM	Read code	
V70(08-)	2008	TF-80SC AWD	DEM	Clear code	
V70(08-)	2008	TF-80SC AWD	DEM	Data stream	
V70(08-)	2008	TF-80SC AWD	DEM	Actuation	
V70(08-)	2008	TF-80SC AWD	ICM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	ICM	Read code	
V70(08-)	2008	TF-80SC AWD	ICM	Clear code	
V70(08-)	2008	TF-80SC AWD	ICM	Data stream	
V70(08-)	2008	TF-80SC AWD	ICM	Actuation	
V70(08-)	2008	TF-80SC AWD	SAS	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	SAS	Read code	
V70(08-)	2008	TF-80SC AWD	SAS	Clear code	
V70(08-)	2008	TF-80SC AWD	SAS	Data stream	
V70(08-)	2008	TF-80SC AWD	MMM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	MMM	Read code	
V70(08-)	2008	TF-80SC AWD	MMM	Clear code	
V70(08-)	2008	TF-80SC AWD	PAM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	PAM	Read code	
V70(08-)	2008	TF-80SC AWD	PAM	Clear code	
V70(08-)	2008	TF-80SC AWD	PAM	Data stream	
V70(08-)	2008	TF-80SC AWD	IAM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	IAM	Read code	
V70(08-)	2008	TF-80SC AWD	IAM	Clear code	
V70(08-)	2008	TF-80SC AWD	BPM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	BPM	Read code	
V70(08-)	2008	TF-80SC AWD	BPM	Clear code	
V70(08-)	2008	TF-80SC AWD	BPM	Data stream	
V70(08-)	2008	TF-80SC AWD	SUM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	SUM	Read code	
V70(08-)	2008	TF-80SC AWD	SUM	Clear code	
V70(08-)	2008	TF-80SC AWD	SUM	Data stream	
V70(08-)	2008	TF-80SC AWD	PBM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	PBM	Read code	
V70(08-)	2008	TF-80SC AWD	PBM	Clear code	
V70(08-)	2008	TF-80SC AWD	PBM	Data stream	
V70(08-)	2008	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
V70(08-)	2008	TF-80SC AWD	PBM	Special functions	Activation and service
V70(08-)	2008	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
V70(08-)	2008	TF-80SC AWD	CPM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	CPM	Read code	
V70(08-)	2008	TF-80SC AWD	CPM	Clear code	
V70(08-)	2008	TF-80SC AWD	CPM	Data stream	
V70(08-)	2008	TF-80SC AWD	CPM	Actuation	
V70(08-)	2008	TF-80SC AWD	HCM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	HCM	Read code	
V70(08-)	2008	TF-80SC AWD	HCM	Clear code	
V70(08-)	2008	TF-80SC AWD	HCM	Data stream	
V70(08-)	2008	TF-80SC AWD	KVM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	KVM	Read code	
V70(08-)	2008	TF-80SC AWD	KVM	Clear code	
V70(08-)	2008	TF-80SC AWD	KVM	Data stream	
V70(08-)	2008	TF-80SC AWD	HLDF	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	HLDF	Read code	
V70(08-)	2008	TF-80SC AWD	HLDF	Clear code	
V70(08-)	2008	TF-80SC AWD	HLDF	Data stream	
V70(08-)	2008	TF-80SC AWD	POT	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	POT	Read code	
V70(08-)	2008	TF-80SC AWD	POT	Clear code	
V70(08-)	2008	TF-80SC AWD	POT	Data stream	
V70(08-)	2008	TF-80SC AWD	AUU	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	AUU	Read code	
V70(08-)	2008	TF-80SC AWD	AUU	Clear code	
V70(08-)	2008	TF-80SC AWD	AUU	Data stream	
V70(08-)	2008	TF-80SC AWD	FSM	Sys. Info.	

model	year	type	system	function	subfunction
V70(08-)	2008	TF-80SC AWD	FSM	Read code	
V70(08-)	2008	TF-80SC AWD	FSM	Clear code	
V70(08-)	2008	TF-80SC AWD	FSM	Data stream	
V70(08-)	2008	TF-80SC AWD	RDAR	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	RDAR	Read code	
V70(08-)	2008	TF-80SC AWD	RDAR	Clear code	
V70(08-)	2008	TF-80SC AWD	RDAR	Data stream	
V70(08-)	2008	TF-80SC AWD	SUB	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	SUB	Read code	
V70(08-)	2008	TF-80SC AWD	SUB	Clear code	
V70(08-)	2008	TF-80SC AWD	SUB	Data stream	
V70(08-)	2008	TF-80SC AWD	CVM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	CVM	Read code	
V70(08-)	2008	TF-80SC AWD	CVM	Clear code	
V70(08-)	2008	TF-80SC AWD	CVM	Data stream	
V70(08-)	2008	TF-80SC AWD	DABM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	DABM	Read code	
V70(08-)	2008	TF-80SC AWD	DABM	Clear code	
V70(08-)	2008	TF-80SC AWD	DABM	Data stream	
V70(08-)	2008	TF-80SC AWD	PAC	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	PAC	Read code	
V70(08-)	2008	TF-80SC AWD	PAC	Clear code	
V70(08-)	2008	TF-80SC AWD	PAC	Data stream	
V70(08-)	2008	TF-80SC AWD	TRM	Sys. Info.	
V70(08-)	2008	TF-80SC AWD	TRM	Read code	
V70(08-)	2008	TF-80SC AWD	TRM	Clear code	
V70(08-)	2008	TF-80SC AWD	TRM	Data stream	
V70(08-)	2009	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(08-)	2009	B5254T6	ECM	Sys. Info.	
V70(08-)	2009	B5254T6	ECM	Read code	
V70(08-)	2009	B5254T6	ECM	Clear code	
V70(08-)	2009	B5254T6	ECM	Data stream	
V70(08-)	2009	B5254T6	ECM	Actuation	
V70(08-)	2009	B5254T6	ECM	Freeze frame	
V70(08-)	2009	B5254T6	ECM	Special functions	Adaptation of the throttle unit
V70(08-)	2009	B5254T10	ECM	Sys. Info.	
V70(08-)	2009	B5254T10	ECM	Read code	
V70(08-)	2009	B5254T10	ECM	Clear code	
V70(08-)	2009	B5254T10	ECM	Data stream	
V70(08-)	2009	B5254T10	ECM	Actuation	
V70(08-)	2009	B5254T10	ECM	Special functions	Adaptation of the throttle unit
V70(08-)	2009	B8444S	ECM	Sys. Info.	
V70(08-)	2009	B8444S	ECM	Read code	
V70(08-)	2009	B8444S	ECM	Clear code	
V70(08-)	2009	B8444S	ECM	Data stream	
V70(08-)	2009	B8444S	ECM	Actuation	
V70(08-)	2009	B8444S	ECM	Special functions	Resetting the adaptation values
V70(08-)	2009	B6304T2	ECM	Sys. Info.	
V70(08-)	2009	B6304T2	ECM	Read code	
V70(08-)	2009	B6304T2	ECM	Clear code	
V70(08-)	2009	B6304T2	ECM	Data stream	
V70(08-)	2009	B6304T2	ECM	Actuation	
V70(08-)	2009	B6304T2	ECM	Special functions	Resetting the adaptation values
V70(08-)	2009	B6324S	ECM	Sys. Info.	
V70(08-)	2009	B6324S	ECM	Read code	
V70(08-)	2009	B6324S	ECM	Clear code	
V70(08-)	2009	B6324S	ECM	Data stream	
V70(08-)	2009	B6324S	ECM	Actuation	
V70(08-)	2009	B6324S	ECM	Special functions	Resetting the adaptation values
V70(08-)	2009	B6324S2	ECM	Sys. Info.	
V70(08-)	2009	B6324S2	ECM	Read code	
V70(08-)	2009	B6324S2	ECM	Clear code	
V70(08-)	2009	B6324S2	ECM	Data stream	
V70(08-)	2009	B6324S2	ECM	Actuation	
V70(08-)	2009	B6324S2	ECM	Special functions	Resetting the adaptation values
V70(08-)	2009	D5244T5	Diesel Eng	Sys. Info.	
V70(08-)	2009	D5244T5	Diesel Eng	Read code	
V70(08-)	2009	D5244T5	Diesel Eng	Clear code	
V70(08-)	2009	D5244T5	Diesel Eng	Data stream	
V70(08-)	2009	D5244T5	Diesel Eng	Actuation	
V70(08-)	2009	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve

model	year	type	system	function	subfunction
V70(08-)	2009	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V70(08-)	2009	D4204T	Diesel Eng	Sys. Info.	
V70(08-)	2009	D4204T	Diesel Eng	Read code	
V70(08-)	2009	D4204T	Diesel Eng	Clear code	
V70(08-)	2009	D4204T	Diesel Eng	Data stream	
V70(08-)	2009	D4204T	Diesel Eng	Actuation	
V70(08-)	2009	D5244T16	Diesel Eng	Sys. Info.	
V70(08-)	2009	D5244T16	Diesel Eng	Read code	
V70(08-)	2009	D5244T16	Diesel Eng	Clear code	
V70(08-)	2009	D5244T16	Diesel Eng	Data stream	
V70(08-)	2009	D5244T16	Diesel Eng	Actuation	
V70(08-)	2009	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
V70(08-)	2009	D5244T16	Diesel Eng	Special functions	Resetting adaptation
V70(08-)	2009	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
V70(08-)	2009	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(08-)	2009	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
V70(08-)	2009	TF-80SC	TCM	Sys. Info.	
V70(08-)	2009	TF-80SC	TCM	Read code	
V70(08-)	2009	TF-80SC	TCM	Clear code	
V70(08-)	2009	TF-80SC	TCM	Data stream	
V70(08-)	2009	TF-80SC	TCM	Actuation	
V70(08-)	2009	TF-80SC	TCM	Freeze frame	
V70(08-)	2009	TF-80SC	TCM	Special functions	Resetting the adaptation
V70(08-)	2009	TF-80SC	TCM	Special functions	Calibration of position sensor
V70(08-)	2009	TF-80SC AWD	TCM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	TCM	Read code	
V70(08-)	2009	TF-80SC AWD	TCM	Clear code	
V70(08-)	2009	TF-80SC AWD	TCM	Data stream	
V70(08-)	2009	TF-80SC AWD	TCM	Actuation	
V70(08-)	2009	TF-80SC AWD	TCM	Freeze frame	
V70(08-)	2009	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
V70(08-)	2009	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
V70(08-)	2009	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
V70(08-)	2009	TF-80SC AWD	ABS	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	ABS	Read code	
V70(08-)	2009	TF-80SC AWD	ABS	Clear code	
V70(08-)	2009	TF-80SC AWD	ABS	Data stream	
V70(08-)	2009	TF-80SC AWD	ABS	Actuation	
V70(08-)	2009	TF-80SC AWD	ABS	Freeze frame	
V70(08-)	2009	TF-80SC AWD	ABS	Special functions	Calibration
V70(08-)	2009	TF-80SC AWD	SRS	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	SRS	Read code	
V70(08-)	2009	TF-80SC AWD	SRS	Clear code	
V70(08-)	2009	TF-80SC AWD	SRS	Data stream	
V70(08-)	2009	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
V70(08-)	2009	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
V70(08-)	2009	TF-80SC AWD	CEM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	CEM	Read code	
V70(08-)	2009	TF-80SC AWD	CEM	Clear code	
V70(08-)	2009	TF-80SC AWD	CEM	Data stream	
V70(08-)	2009	TF-80SC AWD	CEM	Actuation	
V70(08-)	2009	TF-80SC AWD	DIM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	DIM	Read code	
V70(08-)	2009	TF-80SC AWD	DIM	Clear code	
V70(08-)	2009	TF-80SC AWD	DIM	Data stream	
V70(08-)	2009	TF-80SC AWD	DIM	Freeze frame	
V70(08-)	2009	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI)
V70(08-)	2009	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
V70(08-)	2009	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
V70(08-)	2009	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
V70(08-)	2009	TF-80SC AWD	DIM	Special functions	Programming of clock
V70(08-)	2009	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70(08-)	2009	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
V70(08-)	2009	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
V70(08-)	2009	TF-80SC AWD	PDM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	PDM	Read code	
V70(08-)	2009	TF-80SC AWD	PDM	Clear code	
V70(08-)	2009	TF-80SC AWD	PDM	Data stream	
V70(08-)	2009	TF-80SC AWD	PDM	Actuation	
V70(08-)	2009	TF-80SC AWD	PSM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	PSM	Read code	
V70(08-)	2009	TF-80SC AWD	PSM	Clear code	
V70(08-)	2009	TF-80SC AWD	PSM	Data stream	
V70(08-)	2009	TF-80SC AWD	PSM	Actuation	
V70(08-)	2009	TF-80SC AWD	DDM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	DDM	Read code	
V70(08-)	2009	TF-80SC AWD	DDM	Clear code	



model	year	type	system	function	subfunction
V70(08-)	2009	TF-80SC AWD	DDM	Data stream	
V70(08-)	2009	TF-80SC AWD	CCM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	CCM	Read code	
V70(08-)	2009	TF-80SC AWD	CCM	Clear code	
V70(08-)	2009	TF-80SC AWD	CCM	Data stream	
V70(08-)	2009	TF-80SC AWD	CCM	Actuation	
V70(08-)	2009	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
V70(08-)	2009	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(08-)	2009	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(08-)	2009	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
V70(08-)	2009	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70(08-)	2009	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module (CCM)
V70(08-)	2009	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
V70(08-)	2009	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
V70(08-)	2009	TF-80SC AWD	AUD	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	AUD	Read code	
V70(08-)	2009	TF-80SC AWD	AUD	Clear code	
V70(08-)	2009	TF-80SC AWD	DEM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	DEM	Read code	
V70(08-)	2009	TF-80SC AWD	DEM	Clear code	
V70(08-)	2009	TF-80SC AWD	DEM	Data stream	
V70(08-)	2009	TF-80SC AWD	DEM	Actuation	
V70(08-)	2009	TF-80SC AWD	ICM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	ICM	Read code	
V70(08-)	2009	TF-80SC AWD	ICM	Clear code	
V70(08-)	2009	TF-80SC AWD	ICM	Data stream	
V70(08-)	2009	TF-80SC AWD	ICM	Actuation	
V70(08-)	2009	TF-80SC AWD	SAS	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	SAS	Read code	
V70(08-)	2009	TF-80SC AWD	SAS	Clear code	
V70(08-)	2009	TF-80SC AWD	SAS	Data stream	
V70(08-)	2009	TF-80SC AWD	MMM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	MMM	Read code	
V70(08-)	2009	TF-80SC AWD	MMM	Clear code	
V70(08-)	2009	TF-80SC AWD	PAM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	PAM	Read code	
V70(08-)	2009	TF-80SC AWD	PAM	Clear code	
V70(08-)	2009	TF-80SC AWD	PAM	Data stream	
V70(08-)	2009	TF-80SC AWD	IAM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	IAM	Read code	
V70(08-)	2009	TF-80SC AWD	IAM	Clear code	
V70(08-)	2009	TF-80SC AWD	BPM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	BPM	Read code	
V70(08-)	2009	TF-80SC AWD	BPM	Clear code	
V70(08-)	2009	TF-80SC AWD	BPM	Data stream	
V70(08-)	2009	TF-80SC AWD	SUM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	SUM	Read code	
V70(08-)	2009	TF-80SC AWD	SUM	Clear code	
V70(08-)	2009	TF-80SC AWD	SUM	Data stream	
V70(08-)	2009	TF-80SC AWD	PBM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	PBM	Read code	
V70(08-)	2009	TF-80SC AWD	PBM	Clear code	
V70(08-)	2009	TF-80SC AWD	PBM	Data stream	
V70(08-)	2009	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
V70(08-)	2009	TF-80SC AWD	PBM	Special functions	Activation and service
V70(08-)	2009	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
V70(08-)	2009	TF-80SC AWD	CPM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	CPM	Read code	
V70(08-)	2009	TF-80SC AWD	CPM	Clear code	
V70(08-)	2009	TF-80SC AWD	CPM	Data stream	
V70(08-)	2009	TF-80SC AWD	CPM	Actuation	
V70(08-)	2009	TF-80SC AWD	HCM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	HCM	Read code	
V70(08-)	2009	TF-80SC AWD	HCM	Clear code	
V70(08-)	2009	TF-80SC AWD	HCM	Data stream	
V70(08-)	2009	TF-80SC AWD	KVM	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	KVM	Read code	
V70(08-)	2009	TF-80SC AWD	KVM	Clear code	
V70(08-)	2009	TF-80SC AWD	KVM	Data stream	
V70(08-)	2009	TF-80SC AWD	HLDF	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	HLDF	Read code	
V70(08-)	2009	TF-80SC AWD	HLDF	Clear code	
V70(08-)	2009	TF-80SC AWD	HLDF	Data stream	
V70(08-)	2009	TF-80SC AWD	POT	Sys. Info.	
V70(08-)	2009	TF-80SC AWD	POT	Read code	
V70(08-)	2009	TF-80SC AWD	POT	Clear code	

model	year	type	system	function	subfunction	
V70(08-)		2009	TF-80SC AWD	POT	Data stream	
V70(08-)		2009	TF-80SC AWD	AUU	Sys. Info.	
V70(08-)		2009	TF-80SC AWD	AUU	Read code	
V70(08-)		2009	TF-80SC AWD	AUU	Clear code	
V70(08-)		2009	TF-80SC AWD	AUU	Data stream	
V70(08-)		2009	TF-80SC AWD	FSM	Sys. Info.	
V70(08-)		2009	TF-80SC AWD	FSM	Read code	
V70(08-)		2009	TF-80SC AWD	FSM	Clear code	
V70(08-)		2009	TF-80SC AWD	FSM	Data stream	
V70(08-)		2009	TF-80SC AWD	RDAR	Sys. Info.	
V70(08-)		2009	TF-80SC AWD	RDAR	Read code	
V70(08-)		2009	TF-80SC AWD	RDAR	Clear code	
V70(08-)		2009	TF-80SC AWD	RDAR	Data stream	
V70(08-)		2009	TF-80SC AWD	SUB	Sys. Info.	
V70(08-)		2009	TF-80SC AWD	SUB	Read code	
V70(08-)		2009	TF-80SC AWD	SUB	Clear code	
V70(08-)		2009	TF-80SC AWD	SUB	Data stream	
V70(08-)		2009	TF-80SC AWD	CVM	Sys. Info.	
V70(08-)		2009	TF-80SC AWD	CVM	Read code	
V70(08-)		2009	TF-80SC AWD	CVM	Clear code	
V70(08-)		2009	TF-80SC AWD	CVM	Data stream	
V70(08-)		2009	TF-80SC AWD	DABM	Sys. Info.	
V70(08-)		2009	TF-80SC AWD	DABM	Read code	
V70(08-)		2009	TF-80SC AWD	DABM	Clear code	
V70(08-)		2009	TF-80SC AWD	DABM	Data stream	
V70(08-)		2009	TF-80SC AWD	PAC	Sys. Info.	
V70(08-)		2009	TF-80SC AWD	PAC	Read code	
V70(08-)		2009	TF-80SC AWD	PAC	Clear code	
V70(08-)		2009	TF-80SC AWD	PAC	Data stream	
V70(08-)		2009	TF-80SC AWD	TRM	Sys. Info.	
V70(08-)		2009	TF-80SC AWD	TRM	Read code	
V70(08-)		2009	TF-80SC AWD	TRM	Clear code	
V70(08-)		2009	TF-80SC AWD	TRM	Data stream	
V70(08-)	2010 - 2012		TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70(08-)	2010 - 2012		B5254T6	ECM	Sys. Info.	
V70(08-)	2010 - 2012		B5254T6	ECM	Read code	
V70(08-)	2010 - 2012		B5254T6	ECM	Clear code	
V70(08-)	2010 - 2012		B5254T6	ECM	Data stream	
V70(08-)	2010 - 2012		B5254T6	ECM	Actuation	
V70(08-)	2010 - 2012		B5254T6	ECM	Freeze frame	
V70(08-)	2010 - 2012		B5254T6	ECM	Special functions	Adaptation of the throttle unit
V70(08-)	2010 - 2012		B5254T10	ECM	Sys. Info.	
V70(08-)	2010 - 2012		B5254T10	ECM	Read code	
V70(08-)	2010 - 2012		B5254T10	ECM	Clear code	
V70(08-)	2010 - 2012		B5254T10	ECM	Data stream	
V70(08-)	2010 - 2012		B5254T10	ECM	Actuation	
V70(08-)	2010 - 2012		B5254T10	ECM	Freeze frame	
V70(08-)	2010 - 2012		B5254T10	ECM	Special functions	Adaptation of the throttle unit
V70(08-)	2010 - 2012		B8444S	ECM	Sys. Info.	
V70(08-)	2010 - 2012		B8444S	ECM	Read code	
V70(08-)	2010 - 2012		B8444S	ECM	Clear code	
V70(08-)	2010 - 2012		B8444S	ECM	Data stream	
V70(08-)	2010 - 2012		B8444S	ECM	Actuation	
V70(08-)	2010 - 2012		B8444S	ECM	Special functions	Resetting the adaptation values
V70(08-)	2010 - 2012		B6304T2	ECM	Sys. Info.	
V70(08-)	2010 - 2012		B6304T2	ECM	Read code	
V70(08-)	2010 - 2012		B6304T2	ECM	Clear code	
V70(08-)	2010 - 2012		B6304T2	ECM	Data stream	
V70(08-)	2010 - 2012		B6304T2	ECM	Actuation	
V70(08-)	2010 - 2012		B6304T2	ECM	Special functions	Resetting the adaptation values
V70(08-)	2010 - 2012		B6324S	ECM	Sys. Info.	
V70(08-)	2010 - 2012		B6324S	ECM	Read code	
V70(08-)	2010 - 2012		B6324S	ECM	Clear code	
V70(08-)	2010 - 2012		B6324S	ECM	Data stream	
V70(08-)	2010 - 2012		B6324S	ECM	Actuation	
V70(08-)	2010 - 2012		B6324S	ECM	Special functions	Resetting the adaptation values
V70(08-)	2010 - 2012		B6324S2	ECM	Sys. Info.	
V70(08-)	2010 - 2012		B6324S2	ECM	Read code	
V70(08-)	2010 - 2012		B6324S2	ECM	Clear code	
V70(08-)	2010 - 2012		B6324S2	ECM	Data stream	
V70(08-)	2010 - 2012		B6324S2	ECM	Actuation	
V70(08-)	2010 - 2012		B6324S2	ECM	Special functions	Resetting the adaptation values
V70(08-)	2010 - 2012		D5244T5	Diesel Eng	Sys. Info.	
V70(08-)	2010 - 2012		D5244T5	Diesel Eng	Read code	
V70(08-)	2010 - 2012		D5244T5	Diesel Eng	Clear code	
V70(08-)	2010 - 2012		D5244T5	Diesel Eng	Data stream	
V70(08-)	2010 - 2012		D5244T5	Diesel Eng	Actuation	

model	year	type	system	function	subfunction
V70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V70(08-)	2010 - 2012	D5244T16	Diesel Eng	Sys. Info.	
V70(08-)	2010 - 2012	D5244T16	Diesel Eng	Read code	
V70(08-)	2010 - 2012	D5244T16	Diesel Eng	Clear code	
V70(08-)	2010 - 2012	D5244T16	Diesel Eng	Data stream	
V70(08-)	2010 - 2012	D5244T16	Diesel Eng	Actuation	
V70(08-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
V70(08-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Resetting adaptation
V70(08-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
V70(08-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(08-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
V70(08-)	2010 - 2012	TF-80SC	TCM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC	TCM	Read code	
V70(08-)	2010 - 2012	TF-80SC	TCM	Clear code	
V70(08-)	2010 - 2012	TF-80SC	TCM	Data stream	
V70(08-)	2010 - 2012	TF-80SC	TCM	Actuation	
V70(08-)	2010 - 2012	TF-80SC	TCM	Freeze frame	
V70(08-)	2010 - 2012	TF-80SC	TCM	Special functions	Resetting the adaptation
V70(08-)	2010 - 2012	TF-80SC	TCM	Special functions	Calibration of position sensor
V70(08-)	2010 - 2012	TF-80SC AWD	TCM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	TCM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	TCM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	TCM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	TCM	Actuation	
V70(08-)	2010 - 2012	TF-80SC AWD	TCM	Freeze frame	
V70(08-)	2010 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
V70(08-)	2010 - 2012	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
V70(08-)	2010 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
V70(08-)	2010 - 2012	TF-80SC AWD	ABS	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	ABS	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	ABS	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	ABS	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	ABS	Actuation	
V70(08-)	2010 - 2012	TF-80SC AWD	ABS	Freeze frame	
V70(08-)	2010 - 2012	TF-80SC AWD	ABS	Special functions	Calibration
V70(08-)	2010 - 2012	TF-80SC AWD	SRS	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	SRS	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	SRS	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	SRS	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	SRS	Freeze frame	
V70(08-)	2010 - 2012	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
V70(08-)	2010 - 2012	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
V70(08-)	2010 - 2012	TF-80SC AWD	CEM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	CEM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	CEM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	CEM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	CEM	Actuation	
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Freeze frame	
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI)
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming of clock
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
V70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
V70(08-)	2010 - 2012	TF-80SC AWD	PDM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	PDM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	PDM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	PDM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	PDM	Actuation	
V70(08-)	2010 - 2012	TF-80SC AWD	PSM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	PSM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	PSM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	PSM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	PSM	Actuation	

model	year	type	system	function	subfunction
V70(08-)	2010 - 2012	TF-80SC AWD	DDM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	DDM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	DDM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	DDM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Actuation	
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module (CCM)
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
V70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
V70(08-)	2010 - 2012	TF-80SC AWD	AUD	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	AUD	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	AUD	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	DEM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	DEM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	DEM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	DEM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	DEM	Actuation	
V70(08-)	2010 - 2012	TF-80SC AWD	ICM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	ICM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	ICM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	ICM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	ICM	Actuation	
V70(08-)	2010 - 2012	TF-80SC AWD	SAS	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	SAS	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	SAS	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	SAS	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	MMM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	MMM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	MMM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	PAM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	PAM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	PAM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	PAM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	IAM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	IAM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	IAM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	BPM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	BPM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	BPM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	BPM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	SUM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	SUM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	SUM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	SUM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	PBM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	PBM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	PBM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	PBM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
V70(08-)	2010 - 2012	TF-80SC AWD	PBM	Special functions	Activation and service
V70(08-)	2010 - 2012	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
V70(08-)	2010 - 2012	TF-80SC AWD	CPM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	CPM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	CPM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	CPM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	CPM	Actuation	
V70(08-)	2010 - 2012	TF-80SC AWD	HCM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	HCM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	HCM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	HCM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	KVM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	KVM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	KVM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	KVM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	HLDF	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	HLDF	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	HLDF	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	HLDF	Data stream	

model	year	type	system	function	subfunction
V70(08-)	2010 - 2012	TF-80SC AWD	POT	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	POT	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	POT	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	POT	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	AUU	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	AUU	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	AUU	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	AUU	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	FSM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	FSM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	FSM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	FSM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	RDAR	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	RDAR	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	RDAR	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	RDAR	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	SUB	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	SUB	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	SUB	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	SUB	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	CVM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	CVM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	CVM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	CVM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	DABM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	DABM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	DABM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	DABM	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	PAC	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	PAC	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	PAC	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	PAC	Data stream	
V70(08-)	2010 - 2012	TF-80SC AWD	TRM	Sys. Info.	
V70(08-)	2010 - 2012	TF-80SC AWD	TRM	Read code	
V70(08-)	2010 - 2012	TF-80SC AWD	TRM	Clear code	
V70(08-)	2010 - 2012	TF-80SC AWD	TRM	Data stream	
V70(08-)	2015-2016	B6304T4	ECM	Sys. Info.	
V70(08-)	2015-2016	B6304T4	ECM	Read code	
V70(08-)	2015-2016	B6304T4	ECM	Clear code	
V70(08-)	2015-2016	B6304T4	ECM	Data stream	
V70(08-)	2015-2016	B6304T4	ECM	Actuation	
V70(08-)	2015-2016	B6304T4	ECM	Freeze frame	
V70(08-)	2015-2016	B6304T4	ECM	Special functions	Resetting the adaptation values
V70(08-)	2015-2016	B4164T2	ECM	Sys. Info.	
V70(08-)	2015-2016	B4164T2	ECM	Read code	
V70(08-)	2015-2016	B4164T2	ECM	Clear code	
V70(08-)	2015-2016	B4164T2	ECM	Data stream	
V70(08-)	2015-2016	B4164T2	ECM	Actuation	
V70(08-)	2015-2016	B4164T2	ECM	Freeze frame	
V70(08-)	2015-2016	B4164T2	ECM	Special functions	Adaptation of the throttle unit
V70(08-)	2015-2016	B4164T2	ECM	Special functions	Resetting the adaptation values
V70(08-)	2015-2016	B4164T2	ECM	Special functions	Adaptation of oil level sensor
V70(08-)	2015-2016	B4164T2	ECM	Special functions	Adaptation of camshafts
V70(08-)	2015-2016	B4164T2	ECM	Special functions	Checking injectors
V70(08-)	2015-2016	B5254T14	ECM	Sys. Info.	
V70(08-)	2015-2016	B5254T14	ECM	Read code	
V70(08-)	2015-2016	B5254T14	ECM	Clear code	
V70(08-)	2015-2016	B5254T14	ECM	Data stream	
V70(08-)	2015-2016	B5254T14	ECM	Actuation	
V70(08-)	2015-2016	B5254T14	ECM	Special functions	Resetting the fuel adaptation values
V70(08-)	2015-2016	B5254T14	ECM	Special functions	Resetting the flywheel adaptations
V70(08-)	2015-2016	B5254T14	ECM	Special functions	Resetting the camshaft adaption values
V70(08-)	2015-2016	B4204T9	ECM	Sys. Info.	
V70(08-)	2015-2016	B4204T9	ECM	Read code	
V70(08-)	2015-2016	B4204T9	ECM	Clear code	
V70(08-)	2015-2016	B4204T9	ECM	Data stream	
V70(08-)	2015-2016	B4204T9	ECM	Special functions	Test of fuel pressure regulation,low pressure side
V70(08-)	2015-2016	B4204T9	ECM	Special functions	Test of fuel pressure regulation,high pressure side
V70(08-)	2015-2016	B4204T9	ECM	Special functions	Resetting adaptations and wear counter for supercharger
V70(08-)	2015-2016	B4204T9	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
V70(08-)	2015-2016	B4204T9	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
V70(08-)	2015-2016	B4204T9	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
V70(08-)	2015-2016	B4204T9	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
V70(08-)	2015-2016	B4204T9	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
V70(08-)	2015-2016	B4204T9	ECM	Special functions	Resetting adaptations for cylinder balancing

model	year	type	system	function	subfunction
V70(08-)	2015-2016	B4204T9	ECM	Special functions	Resetting adaptations for the throttle
V70(08-)	2015-2016	B4204T9	ECM	Special functions	Adaptation of neutral position sensor
V70(08-)	2015-2016	D5244T15	Diesel Eng	Sys. Info.	
V70(08-)	2015-2016	D5244T15	Diesel Eng	Read code	
V70(08-)	2015-2016	D5244T15	Diesel Eng	Clear code	
V70(08-)	2015-2016	D5244T15	Diesel Eng	Data stream	
V70(08-)	2015-2016	D5244T15	Diesel Eng	Actuation	
V70(08-)	2015-2016	D5244T15	Diesel Eng	Freeze frame	
V70(08-)	2015-2016	D5244T15	Diesel Eng	Special functions	Resetting counter particle filter
V70(08-)	2015-2016	D5244T15	Diesel Eng	Special functions	Checking injectors
V70(08-)	2015-2016	D5244T15	Diesel Eng	Special functions	Adaptation of throttle module
V70(08-)	2015-2016	D5244T15	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70(08-)	2015-2016	D5244T15	Diesel Eng	Special functions	Checking the oil level
V70(08-)	2015-2016	D4162T	Diesel Eng	Sys. Info.	
V70(08-)	2015-2016	D4162T	Diesel Eng	Read code	
V70(08-)	2015-2016	D4162T	Diesel Eng	Clear code	
V70(08-)	2015-2016	D4162T	Diesel Eng	Data stream	
V70(08-)	2015-2016	D4162T	Diesel Eng	Actuation	
V70(08-)	2015-2016	D4162T	Diesel Eng	Freeze frame	
V70(08-)	2015-2016	D4162T	Diesel Eng	Special functions	Adaptation of neutral position sensor
V70(08-)	2015-2016	D4204T5	Diesel Eng	Sys. Info.	
V70(08-)	2015-2016	D4204T5	Diesel Eng	Read code	
V70(08-)	2015-2016	D4204T5	Diesel Eng	Clear code	
V70(08-)	2015-2016	D4204T5	Diesel Eng	Data stream	
V70(08-)	2015-2016	D4204T5	Diesel Eng	Actuation	
V70(08-)	2015-2016	D4204T5	Diesel Eng	Freeze frame	
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Test of fuel pressure regulation,high pressure side
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Test of fuel flow regulation valve
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Testing the fuel pressure control valve
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for fuel flow regulation valve
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for swirl damper
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for turbocharger control
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the EGR valve
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the diesel particle filter
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the particle filter differential pressure sensor
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for front heated oxygen sensor
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for rear heated oxygen sensor
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the injectors
V70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Adaptation of neutral position sensor
V70(08-)	2015-2016	D4204T5	AUD	Sys. Info.	
V70(08-)	2015-2016	D4204T5	AUD	Read code	
V70(08-)	2015-2016	D4204T5	AUD	Clear code	
V70(08-)	2015-2016	D4204T5	AUD	Special functions	Checking loudspeakers
V70(08-)	2015-2016	D4204T5	AUD	Special functions	Checking headphone socket
V70(08-)	2015-2016	D4204T5	ABS	Sys. Info.	
V70(08-)	2015-2016	D4204T5	ABS	Read code	
V70(08-)	2015-2016	D4204T5	ABS	Clear code	
V70(08-)	2015-2016	D4204T5	ABS	Data stream	
V70(08-)	2015-2016	D4204T5	ABS	Actuation	
V70(08-)	2015-2016	D4204T5	ABS	Freeze frame	
V70(08-)	2015-2016	D4204T5	ABS	Special functions	Calibration
V70(08-)	2015-2016	D4204T5	ABS	Special functions	Restart of the brake control module (BCM)
V70(08-)	2015-2016	D4204T5	CCM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	CCM	Read code	
V70(08-)	2015-2016	D4204T5	CCM	Clear code	
V70(08-)	2015-2016	D4204T5	CCM	Data stream	
V70(08-)	2015-2016	D4204T5	CCM	Actuation	
V70(08-)	2015-2016	D4204T5	CCM	Special functions	Reading off programmed values
V70(08-)	2015-2016	D4204T5	CCM	Special functions	Calibrating the Climate Control Module(CCM)
V70(08-)	2015-2016	D4204T5	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
V70(08-)	2015-2016	D4204T5	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
V70(08-)	2015-2016	D4204T5	CCM	Special functions	Programming the evaporator,climate control module (CCM)
V70(08-)	2015-2016	D4204T5	CCM	Special functions	Airflow setting in rear passenger compartment
V70(08-)	2015-2016	D4204T5	CCM	Special functions	Programming the climate control module(CCM)
V70(08-)	2015-2016	D4204T5	CCM	Special functions	Rear view mirror light sensitivity
V70(08-)	2015-2016	D4204T5	CEM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	CEM	Read code	
V70(08-)	2015-2016	D4204T5	CEM	Clear code	
V70(08-)	2015-2016	D4204T5	CEM	Data stream	
V70(08-)	2015-2016	D4204T5	CEM	Actuation	
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Workshop test(TPMS)
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Reading off power supply position
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Read-out and resetting alco-lock
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Reading off alarm cause

model	year	type	system	function	subfunction
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Activating wipers,front/rear
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Ejection of keyOperating and initiating the roof hatch
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Restoring supplemental restraint system
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Setting day and night mode for the instrumentation
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Activating steering wheel heating
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Readout of current from battery monitoring sensor
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Readout of information stand-by current
V70(08-)	2015-2016	D4204T5	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
V70(08-)	2015-2016	D4204T5	CEM	Special functions	2Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
V70(08-)	2015-2016	D4204T5	CEM	Special functions	2Remote controlled immobilising,status
V70(08-)	2015-2016	D4204T5	CEM	Special functions	2Remote controlled immobilising,cause
V70(08-)	2015-2016	D4204T5	CPM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	CPM	Read code	
V70(08-)	2015-2016	D4204T5	CPM	Clear code	
V70(08-)	2015-2016	D4204T5	CPM	Data stream	
V70(08-)	2015-2016	D4204T5	CPM	Special functions	Identification of the heater
V70(08-)	2015-2016	D4204T5	CVM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	CVM	Read code	
V70(08-)	2015-2016	D4204T5	CVM	Clear code	
V70(08-)	2015-2016	D4204T5	DABM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	DABM	Read code	
V70(08-)	2015-2016	D4204T5	DABM	Clear code	
V70(08-)	2015-2016	D4204T5	DABM	Data stream	
V70(08-)	2015-2016	D4204T5	DDM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	DDM	Read code	
V70(08-)	2015-2016	D4204T5	DDM	Clear code	
V70(08-)	2015-2016	D4204T5	DDM	Data stream	
V70(08-)	2015-2016	D4204T5	DDM	Actuation	
V70(08-)	2015-2016	D4204T5	DDM	Special functions	Initializing the window in the front door.
V70(08-)	2015-2016	D4204T5	DDM	Special functions	Initializing the window in the rear door.
V70(08-)	2015-2016	D4204T5	DDM	Special functions	Central lock motors,activating
V70(08-)	2015-2016	D4204T5	DEM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	DEM	Read code	
V70(08-)	2015-2016	D4204T5	DEM	Clear code	
V70(08-)	2015-2016	D4204T5	DEM	Data stream	
V70(08-)	2015-2016	D4204T5	DEM	Special functions	Calibration of differential electronic module (DEM).
V70(08-)	2015-2016	D4204T5	DIM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	DIM	Read code	
V70(08-)	2015-2016	D4204T5	DIM	Clear code	
V70(08-)	2015-2016	D4204T5	DIM	Data stream	
V70(08-)	2015-2016	D4204T5	DIM	Special functions	Resetting the service reminder indicator (SRI)
V70(08-)	2015-2016	D4204T5	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
V70(08-)	2015-2016	D4204T5	DIM	Special functions	Read-out of fuel volume
V70(08-)	2015-2016	D4204T5	DIM	Special functions	Display of vehicle speed
V70(08-)	2015-2016	D4204T5	DIM	Special functions	Programming seatbelt reminder in backseat
V70(08-)	2015-2016	D4204T5	DIM	Special functions	Programming text message,seatbelt reminder
V70(08-)	2015-2016	D4204T5	FSM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	FSM	Read code	
V70(08-)	2015-2016	D4204T5	FSM	Clear code	
V70(08-)	2015-2016	D4204T5	FSM	Data stream	
V70(08-)	2015-2016	D4204T5	FSM	Special functions	Calibration of radar and camera.
V70(08-)	2015-2016	D4204T5	FSM	Special functions	Activating heating coil,FSM
V70(08-)	2015-2016	D4204T5	FSM	Special functions	Activating of the indicator for visual collision warning
V70(08-)	2015-2016	D4204T5	FSM	Special functions	Activating the internal test procedures
V70(08-)	2015-2016	D4204T5	IAM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	IAM	Read code	
V70(08-)	2015-2016	D4204T5	IAM	Clear code	
V70(08-)	2015-2016	D4204T5	ICM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	ICM	Read code	
V70(08-)	2015-2016	D4204T5	ICM	Clear code	
V70(08-)	2015-2016	D4204T5	ICM	Data stream	
V70(08-)	2015-2016	D4204T5	ICM	Special functions	Communication on MOST
V70(08-)	2015-2016	D4204T5	KVM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	KVM	Read code	
V70(08-)	2015-2016	D4204T5	KVM	Clear code	
V70(08-)	2015-2016	D4204T5	KVM	Data stream	
V70(08-)	2015-2016	D4204T5	KVM	Special functions	Checking all antennas
V70(08-)	2015-2016	D4204T5	KVM	Special functions	Check the communication with the remote control receiver
V70(08-)	2015-2016	D4204T5	KVM	Special functions	Remote control
V70(08-)	2015-2016	D4204T5	KVM	Special functions	Test of internal memory
V70(08-)	2015-2016	D4204T5	KVM	Special functions	Activation of quick-lock motors
V70(08-)	2015-2016	D4204T5	PAC	Sys. Info.	

model	year	type	system	function	subfunction
V70(08-)	2015-2016	D4204T5	PAC	Read code	
V70(08-)	2015-2016	D4204T5	PAC	Clear code	
V70(08-)	2015-2016	D4204T5	PAC	Data stream	
V70(08-)	2015-2016	D4204T5	PAM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	PAM	Read code	
V70(08-)	2015-2016	D4204T5	PAM	Clear code	
V70(08-)	2015-2016	D4204T5	PAM	Data stream	
V70(08-)	2015-2016	D4204T5	PBM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	PBM	Read code	
V70(08-)	2015-2016	D4204T5	PBM	Clear code	
V70(08-)	2015-2016	D4204T5	PBM	Data stream	
V70(08-)	2015-2016	D4204T5	PBM	Special functions	Calibration angle sensor
V70(08-)	2015-2016	D4204T5	PBM	Special functions	Activation and service
V70(08-)	2015-2016	D4204T5	PBM	Special functions	Resetting the clutch pedal counter
V70(08-)	2015-2016	D4204T5	PDM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	PDM	Read code	
V70(08-)	2015-2016	D4204T5	PDM	Clear code	
V70(08-)	2015-2016	D4204T5	PDM	Data stream	
V70(08-)	2015-2016	D4204T5	PDM	Actuation	
V70(08-)	2015-2016	D4204T5	PDM	Special functions	Initializing the window in the front door
V70(08-)	2015-2016	D4204T5	PDM	Special functions	Initializing the window in the rear door
V70(08-)	2015-2016	D4204T5	PDM	Special functions	Central lock motors,activating
V70(08-)	2015-2016	D4204T5	PHM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	PHM	Read code	
V70(08-)	2015-2016	D4204T5	PHM	Clear code	
V70(08-)	2015-2016	D4204T5	PHM	Data stream	
V70(08-)	2015-2016	D4204T5	PHM	Special functions	Reinstalling the reserve battery
V70(08-)	2015-2016	D4204T5	POT	Sys. Info.	
V70(08-)	2015-2016	D4204T5	POT	Read code	
V70(08-)	2015-2016	D4204T5	POT	Clear code	
V70(08-)	2015-2016	D4204T5	POT	Data stream	
V70(08-)	2015-2016	D4204T5	POT	Special functions	Activation of boot lid opening/closing
V70(08-)	2015-2016	D4204T5	POT	Special functions	Resetting the learned maximum opening angle
V70(08-)	2015-2016	D4204T5	PSCM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	PSCM	Read code	
V70(08-)	2015-2016	D4204T5	PSCM	Clear code	
V70(08-)	2015-2016	D4204T5	PSCM	Data stream	
V70(08-)	2015-2016	D4204T5	PSM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	PSM	Read code	
V70(08-)	2015-2016	D4204T5	PSM	Clear code	
V70(08-)	2015-2016	D4204T5	PSM	Data stream	
V70(08-)	2015-2016	D4204T5	PSM	Actuation	
V70(08-)	2015-2016	D4204T5	PSM	Special functions	Programming the seat memory delay time
V70(08-)	2015-2016	D4204T5	RDAR	Sys. Info.	
V70(08-)	2015-2016	D4204T5	RDAR	Read code	
V70(08-)	2015-2016	D4204T5	RDAR	Clear code	
V70(08-)	2015-2016	D4204T5	SAS	Sys. Info.	
V70(08-)	2015-2016	D4204T5	SAS	Read code	
V70(08-)	2015-2016	D4204T5	SAS	Clear code	
V70(08-)	2015-2016	D4204T5	SAS	Data stream	
V70(08-)	2015-2016	D4204T5	SRS	Sys. Info.	
V70(08-)	2015-2016	D4204T5	SRS	Read code	
V70(08-)	2015-2016	D4204T5	SRS	Clear code	
V70(08-)	2015-2016	D4204T5	SRS	Data stream	
V70(08-)	2015-2016	D4204T5	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
V70(08-)	2015-2016	D4204T5	SUM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	SUM	Read code	
V70(08-)	2015-2016	D4204T5	SUM	Clear code	
V70(08-)	2015-2016	D4204T5	SUM	Data stream	
V70(08-)	2015-2016	D4204T5	SUM	Special functions	Calibration
V70(08-)	2015-2016	D4204T5	TCM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	TCM	Read code	
V70(08-)	2015-2016	D4204T5	TCM	Clear code	
V70(08-)	2015-2016	D4204T5	TCM	Data stream	
V70(08-)	2015-2016	D4204T5	TCM	Freeze frame	
V70(08-)	2015-2016	D4204T5	TCM	Special functions	Resetting adaptation
V70(08-)	2015-2016	D4204T5	TCM	Special functions	Resetting the Transmission fluid change counter
V70(08-)	2015-2016	D4204T5	TCM	Special functions	Calibration of gear indication
V70(08-)	2015-2016	D4204T5	TCM	Special functions	Activating of gear indication
V70(08-)	2015-2016	D4204T5	TCM	Special functions	Control module adaptation
V70(08-)	2015-2016	D4204T5	TRM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	TRM	Read code	
V70(08-)	2015-2016	D4204T5	TRM	Clear code	
V70(08-)	2015-2016	D4204T5	TRM	Data stream	
V70(08-)	2015-2016	D4204T5	TVM	Sys. Info.	
V70(08-)	2015-2016	D4204T5	TVM	Read code	
V70(08-)	2015-2016	D4204T5	TVM	Clear code	



model	year	type	system	function	subfunction
V40	1996	D4204T5	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V40	1996	B4184S	ECM	Sys. Info.	
V40	1996	B4184S	ECM	Read code	
V40	1996	B4184S	ECM	Clear code	
V40	1996	B4184S	ECM	Data stream	
V40	1996	B4184S	ECM	Actuation	
V40	1996	B4204S	ECM	Sys. Info.	
V40	1996	B4204S	ECM	Read code	
V40	1996	B4204S	ECM	Clear code	
V40	1996	B4204S	ECM	Data stream	
V40	1996	B4204S	ECM	Actuation	
V40	1996	B4164S	ECM	Sys. Info.	
V40	1996	B4164S	ECM	Read code	
V40	1996	B4164S	ECM	Clear code	
V40	1996	B4164S	ECM	Data stream	
V40	1996	B4164S	ECM	Actuation	
V40	1996	B4184SM	ECM	Sys. Info.	
V40	1996	B4184SM	ECM	Read code	
V40	1996	B4184SM	ECM	Clear code	
V40	1996	B4184SM	ECM	Data stream	
V40	1996	B4204T	ECM	Sys. Info.	
V40	1996	B4204T	ECM	Read code	
V40	1996	B4204T	ECM	Clear code	
V40	1996	B4204T	ECM	Data stream	
V40	1996	B4194T	ECM	Sys. Info.	
V40	1996	B4194T	ECM	Read code	
V40	1996	B4194T	ECM	Clear code	
V40	1996	B4194T	ECM	Data stream	
V40	1996	AW50-42	TCM	Sys. Info.	
V40	1996	AW50-42	TCM	Read code	
V40	1996	AW50-42	TCM	Clear code	
V40	1996	AW50-42	TCM	Data stream	
V40	1996	AW50-42	ABS	Sys. Info.	
V40	1996	AW50-42	ABS	Read code	
V40	1996	AW50-42	ABS	Clear code	
V40	1996	AW50-42	ABS	Data stream	
V40	1996	AW50-42	ABS	Actuation	
V40	1996	AW50-42	SRS	Sys. Info.	
V40	1996	AW50-42	SRS	Read code	
V40	1996	AW50-42	SRS	Clear code	
V40	1996	AW50-42	SRS	Data stream	
V40	1996	AW50-42	IC	Sys. Info.	
V40	1996	AW50-42	IC	Read code	
V40	1996	AW50-42	IC	Clear code	
V40	1996	AW50-42	IC	Data stream	
V40	1996	AW50-42	IC	Actuation	
V40	1996	AW50-42	Immobilizer	Sys. Info.	
V40	1996	AW50-42	Immobilizer	Read code	
V40	1996	AW50-42	Immobilizer	Clear code	
V40	1996	AW50-42	Immobilizer	Data stream	
V40	1996	AW50-42	Immobilizer	Actuation	
V40	1996	AW50-42	VGLA	Sys. Info.	
V40	1996	AW50-42	VGLA	Read code	
V40	1996	AW50-42	VGLA	Clear code	
V40	1996	AW50-42	VGLA	Data stream	
V40	1996	AW50-42	VGLA	Actuation	
V40	1996	AW50-42	CPM	Sys. Info.	
V40	1996	AW50-42	CPM	Read code	
V40	1996	AW50-42	CPM	Clear code	
V40	1996	AW50-42	CPM	Data stream	
V40	1996	AW50-42	CPM	Actuation	
V40	1996	AW50-42	DSA	Sys. Info.	
V40	1996	AW50-42	DSA	Read code	
V40	1996	AW50-42	DSA	Clear code	
V40	1996	AW50-42	DSA	Data stream	
V40	1996	AW50-42	DSA	Actuation	
V40	1996	AW50-42	CCM	Sys. Info.	
V40	1996	AW50-42	CCM	Read code	
V40	1996	AW50-42	CCM	Clear code	
V40	1996	AW50-42	CCM	Data stream	
V40	1996	AW50-42	CCM	Actuation	
V40	1996	AW50-42	RTI	Sys. Info.	
V40	1996	AW50-42	RTI	Read code	
V40	1996	AW50-42	RTI	Clear code	
V40	1996	AW50-42	RTI	Data stream	
V40	1996	AW50-42	RTI	Actuation	

model	year	type	system	function	subfunction
V40	1997	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V40	1997	B4184S	ECM	Sys. Info.	
V40	1997	B4184S	ECM	Read code	
V40	1997	B4184S	ECM	Clear code	
V40	1997	B4184S	ECM	Data stream	
V40	1997	B4184S	ECM	Actuation	
V40	1997	B4204S	ECM	Sys. Info.	
V40	1997	B4204S	ECM	Read code	
V40	1997	B4204S	ECM	Clear code	
V40	1997	B4204S	ECM	Data stream	
V40	1997	B4204S	ECM	Actuation	
V40	1997	B4164S	ECM	Sys. Info.	
V40	1997	B4164S	ECM	Read code	
V40	1997	B4164S	ECM	Clear code	
V40	1997	B4164S	ECM	Data stream	
V40	1997	B4164S	ECM	Actuation	
V40	1997	B4184SM	ECM	Sys. Info.	
V40	1997	B4184SM	ECM	Read code	
V40	1997	B4184SM	ECM	Clear code	
V40	1997	B4184SM	ECM	Data stream	
V40	1997	B4204T	ECM	Sys. Info.	
V40	1997	B4204T	ECM	Read code	
V40	1997	B4204T	ECM	Clear code	
V40	1997	B4204T	ECM	Data stream	
V40	1997	B4194T	ECM	Sys. Info.	
V40	1997	B4194T	ECM	Read code	
V40	1997	B4194T	ECM	Clear code	
V40	1997	B4194T	ECM	Data stream	
V40	1997	AW50-42	TCM	Sys. Info.	
V40	1997	AW50-42	TCM	Read code	
V40	1997	AW50-42	TCM	Clear code	
V40	1997	AW50-42	TCM	Data stream	
V40	1997	AW50-42	ABS	Sys. Info.	
V40	1997	AW50-42	ABS	Read code	
V40	1997	AW50-42	ABS	Clear code	
V40	1997	AW50-42	ABS	Data stream	
V40	1997	AW50-42	ABS	Actuation	
V40	1997	AW50-42	SRS	Sys. Info.	
V40	1997	AW50-42	SRS	Read code	
V40	1997	AW50-42	SRS	Clear code	
V40	1997	AW50-42	SRS	Data stream	
V40	1997	AW50-42	IC	Sys. Info.	
V40	1997	AW50-42	IC	Read code	
V40	1997	AW50-42	IC	Clear code	
V40	1997	AW50-42	IC	Data stream	
V40	1997	AW50-42	IC	Actuation	
V40	1997	AW50-42	Immobilizer	Sys. Info.	
V40	1997	AW50-42	Immobilizer	Read code	
V40	1997	AW50-42	Immobilizer	Clear code	
V40	1997	AW50-42	Immobilizer	Data stream	
V40	1997	AW50-42	Immobilizer	Actuation	
V40	1997	AW50-42	VGLA	Sys. Info.	
V40	1997	AW50-42	VGLA	Read code	
V40	1997	AW50-42	VGLA	Clear code	
V40	1997	AW50-42	VGLA	Data stream	
V40	1997	AW50-42	VGLA	Actuation	
V40	1997	AW50-42	CPM	Sys. Info.	
V40	1997	AW50-42	CPM	Read code	
V40	1997	AW50-42	CPM	Clear code	
V40	1997	AW50-42	CPM	Data stream	
V40	1997	AW50-42	CPM	Actuation	
V40	1997	AW50-42	DSA	Sys. Info.	
V40	1997	AW50-42	DSA	Read code	
V40	1997	AW50-42	DSA	Clear code	
V40	1997	AW50-42	DSA	Data stream	
V40	1997	AW50-42	DSA	Actuation	
V40	1997	AW50-42	CCM	Sys. Info.	
V40	1997	AW50-42	CCM	Read code	
V40	1997	AW50-42	CCM	Clear code	
V40	1997	AW50-42	CCM	Data stream	
V40	1997	AW50-42	CCM	Actuation	
V40	1997	AW50-42	RTI	Sys. Info.	
V40	1997	AW50-42	RTI	Read code	
V40	1997	AW50-42	RTI	Clear code	
V40	1997	AW50-42	RTI	Data stream	
V40	1997	AW50-42	RTI	Actuation	

model	year	type	system	function	subfunction
V40	1998	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V40	1998	B4184S	ECM	Sys. Info.	
V40	1998	B4184S	ECM	Read code	
V40	1998	B4184S	ECM	Clear code	
V40	1998	B4184S	ECM	Data stream	
V40	1998	B4184S	ECM	Actuation	
V40	1998	B4204S	ECM	Sys. Info.	
V40	1998	B4204S	ECM	Read code	
V40	1998	B4204S	ECM	Clear code	
V40	1998	B4204S	ECM	Data stream	
V40	1998	B4204S	ECM	Actuation	
V40	1998	B4164S	ECM	Sys. Info.	
V40	1998	B4164S	ECM	Read code	
V40	1998	B4164S	ECM	Clear code	
V40	1998	B4164S	ECM	Data stream	
V40	1998	B4164S	ECM	Actuation	
V40	1998	B4184SM	ECM	Sys. Info.	
V40	1998	B4184SM	ECM	Read code	
V40	1998	B4184SM	ECM	Clear code	
V40	1998	B4184SM	ECM	Data stream	
V40	1998	B4204T	ECM	Sys. Info.	
V40	1998	B4204T	ECM	Read code	
V40	1998	B4204T	ECM	Clear code	
V40	1998	B4204T	ECM	Data stream	
V40	1998	B4194T	ECM	Sys. Info.	
V40	1998	B4194T	ECM	Read code	
V40	1998	B4194T	ECM	Clear code	
V40	1998	B4194T	ECM	Data stream	
V40	1998	AW50-42	TCM	Sys. Info.	
V40	1998	AW50-42	TCM	Read code	
V40	1998	AW50-42	TCM	Clear code	
V40	1998	AW50-42	TCM	Data stream	
V40	1998	AW50-42	ABS	Sys. Info.	
V40	1998	AW50-42	ABS	Read code	
V40	1998	AW50-42	ABS	Clear code	
V40	1998	AW50-42	ABS	Data stream	
V40	1998	AW50-42	ABS	Actuation	
V40	1998	AW50-42	SRS	Sys. Info.	
V40	1998	AW50-42	SRS	Read code	
V40	1998	AW50-42	SRS	Clear code	
V40	1998	AW50-42	SRS	Data stream	
V40	1998	AW50-42	IC	Sys. Info.	
V40	1998	AW50-42	IC	Read code	
V40	1998	AW50-42	IC	Clear code	
V40	1998	AW50-42	IC	Data stream	
V40	1998	AW50-42	IC	Actuation	
V40	1998	AW50-42	Immobilizer	Sys. Info.	
V40	1998	AW50-42	Immobilizer	Read code	
V40	1998	AW50-42	Immobilizer	Clear code	
V40	1998	AW50-42	Immobilizer	Data stream	
V40	1998	AW50-42	Immobilizer	Actuation	
V40	1998	AW50-42	VGLA	Sys. Info.	
V40	1998	AW50-42	VGLA	Read code	
V40	1998	AW50-42	VGLA	Clear code	
V40	1998	AW50-42	VGLA	Data stream	
V40	1998	AW50-42	VGLA	Actuation	
V40	1998	AW50-42	CPM	Sys. Info.	
V40	1998	AW50-42	CPM	Read code	
V40	1998	AW50-42	CPM	Clear code	
V40	1998	AW50-42	CPM	Data stream	
V40	1998	AW50-42	CPM	Actuation	
V40	1998	AW50-42	DSA	Sys. Info.	
V40	1998	AW50-42	DSA	Read code	
V40	1998	AW50-42	DSA	Clear code	
V40	1998	AW50-42	DSA	Data stream	
V40	1998	AW50-42	DSA	Actuation	
V40	1998	AW50-42	CCM	Sys. Info.	
V40	1998	AW50-42	CCM	Read code	
V40	1998	AW50-42	CCM	Clear code	
V40	1998	AW50-42	CCM	Data stream	
V40	1998	AW50-42	CCM	Actuation	
V40	1998	AW50-42	RTI	Sys. Info.	
V40	1998	AW50-42	RTI	Read code	
V40	1998	AW50-42	RTI	Clear code	
V40	1998	AW50-42	RTI	Data stream	
V40	1998	AW50-42	RTI	Actuation	

model	year	type	system	function	subfunction
V40	1999	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V40	1999	B4184S	ECM	Sys. Info.	
V40	1999	B4184S	ECM	Read code	
V40	1999	B4184S	ECM	Clear code	
V40	1999	B4184S	ECM	Data stream	
V40	1999	B4184S	ECM	Actuation	
V40	1999	B4204S	ECM	Sys. Info.	
V40	1999	B4204S	ECM	Read code	
V40	1999	B4204S	ECM	Clear code	
V40	1999	B4204S	ECM	Data stream	
V40	1999	B4204S	ECM	Actuation	
V40	1999	B4164S	ECM	Sys. Info.	
V40	1999	B4164S	ECM	Read code	
V40	1999	B4164S	ECM	Clear code	
V40	1999	B4164S	ECM	Data stream	
V40	1999	B4164S	ECM	Actuation	
V40	1999	B4184SM	ECM	Sys. Info.	
V40	1999	B4184SM	ECM	Read code	
V40	1999	B4184SM	ECM	Clear code	
V40	1999	B4184SM	ECM	Data stream	
V40	1999	B4204T	ECM	Sys. Info.	
V40	1999	B4204T	ECM	Read code	
V40	1999	B4204T	ECM	Clear code	
V40	1999	B4204T	ECM	Data stream	
V40	1999	B4204T	ECM	Actuation	
V40	1999	B4194T	ECM	Sys. Info.	
V40	1999	B4194T	ECM	Read code	
V40	1999	B4194T	ECM	Clear code	
V40	1999	B4194T	ECM	Data stream	
V40	1999	B4194T	ECM	Actuation	
V40	1999	AW50-42	TCM	Sys. Info.	
V40	1999	AW50-42	TCM	Read code	
V40	1999	AW50-42	TCM	Clear code	
V40	1999	AW50-42	TCM	Data stream	
V40	1999	AW50-42	TCM	Actuation	
V40	1999	AW50-42	ABS	Sys. Info.	
V40	1999	AW50-42	ABS	Read code	
V40	1999	AW50-42	ABS	Clear code	
V40	1999	AW50-42	ABS	Data stream	
V40	1999	AW50-42	SRS	Sys. Info.	
V40	1999	AW50-42	SRS	Read code	
V40	1999	AW50-42	SRS	Clear code	
V40	1999	AW50-42	SRS	Data stream	
V40	1999	AW50-42	Immobilizer	Sys. Info.	
V40	1999	AW50-42	Immobilizer	Read code	
V40	1999	AW50-42	Immobilizer	Clear code	
V40	1999	AW50-42	Immobilizer	Data stream	
V40	1999	AW50-42	Immobilizer	Actuation	
V40	1999	AW50-42	VGLA	Sys. Info.	
V40	1999	AW50-42	VGLA	Read code	
V40	1999	AW50-42	VGLA	Clear code	
V40	1999	AW50-42	VGLA	Data stream	
V40	1999	AW50-42	VGLA	Actuation	
V40	1999	AW50-42	CEM	Sys. Info.	
V40	1999	AW50-42	CEM	Read code	
V40	1999	AW50-42	CEM	Clear code	
V40	1999	AW50-42	CEM	Data stream	
V40	1999	AW50-42	CEM	Actuation	
V40	1999	AW50-42	DIM	Sys. Info.	
V40	1999	AW50-42	DIM	Read code	
V40	1999	AW50-42	DIM	Clear code	
V40	1999	AW50-42	DIM	Data stream	
V40	1999	AW50-42	DIM	Actuation	
V40	1999	AW50-42	CCM	Sys. Info.	
V40	1999	AW50-42	CCM	Read code	
V40	1999	AW50-42	CCM	Clear code	
V40	1999	AW50-42	CCM	Data stream	
V40	1999	AW50-42	CCM	Actuation	
V40	1999	AW50-42	CPM	Sys. Info.	
V40	1999	AW50-42	CPM	Read code	
V40	1999	AW50-42	CPM	Clear code	
V40	1999	AW50-42	CPM	Data stream	
V40	1999	AW50-42	CPM	Actuation	
V40	1999	AW50-42	DSA	Sys. Info.	
V40	1999	AW50-42	DSA	Read code	
V40	1999	AW50-42	DSA	Clear code	
V40	1999	AW50-42	DSA	Data stream	

model	year	type	system	function	subfunction
V40		1999AW50-42	DSA	Actuation	
V40		2000AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V40		2000B4184S2	ECM	Sys. Info.	
V40		2000B4184S2	ECM	Read code	
V40		2000B4184S2	ECM	Clear code	
V40		2000B4184S2	ECM	Data stream	
V40		2000B4184S2	ECM	Actuation	
V40		2000B4204S2	ECM	Sys. Info.	
V40		2000B4204S2	ECM	Read code	
V40		2000B4204S2	ECM	Clear code	
V40		2000B4204S2	ECM	Data stream	
V40		2000B4204S2	ECM	Actuation	
V40		2000B4184S3	ECM	Sys. Info.	
V40		2000B4184S3	ECM	Read code	
V40		2000B4184S3	ECM	Clear code	
V40		2000B4184S3	ECM	Data stream	
V40		2000B4184S3	ECM	Actuation	
V40		2000B4164S2	ECM	Sys. Info.	
V40		2000B4164S2	ECM	Read code	
V40		2000B4164S2	ECM	Clear code	
V40		2000B4164S2	ECM	Data stream	
V40		2000B4164S2	ECM	Actuation	
V40		2000B4204T2 CVVT	ECM	Sys. Info.	
V40		2000B4204T2 CVVT	ECM	Read code	
V40		2000B4204T2 CVVT	ECM	Clear code	
V40		2000B4204T2 CVVT	ECM	Data stream	
V40		2000B4184SM	ECM	Sys. Info.	
V40		2000B4184SM	ECM	Read code	
V40		2000B4184SM	ECM	Clear code	
V40		2000B4184SM	ECM	Data stream	
V40		2000B4204T2	ECM	Sys. Info.	
V40		2000B4204T2	ECM	Read code	
V40		2000B4204T2	ECM	Clear code	
V40		2000B4204T2	ECM	Data stream	
V40		2000B4204T2	ECM	Actuation	
V40		2000B4194T2	ECM	Sys. Info.	
V40		2000B4194T2	ECM	Read code	
V40		2000B4194T2	ECM	Clear code	
V40		2000B4194T2	ECM	Data stream	
V40		2000B4194T2	ECM	Actuation	
V40		2000AW50-42	TCM	Sys. Info.	
V40		2000AW50-42	TCM	Read code	
V40		2000AW50-42	TCM	Clear code	
V40		2000AW50-42	TCM	Data stream	
V40		2000AW50-42	TCM	Actuation	
V40		2000AW50-42	ABS	Sys. Info.	
V40		2000AW50-42	ABS	Read code	
V40		2000AW50-42	ABS	Clear code	
V40		2000AW50-42	ABS	Data stream	
V40		2000AW50-42	SRS	Sys. Info.	
V40		2000AW50-42	SRS	Read code	
V40		2000AW50-42	SRS	Clear code	
V40		2000AW50-42	SRS	Data stream	
V40		2000AW50-42	Immobilizer	Sys. Info.	
V40		2000AW50-42	Immobilizer	Read code	
V40		2000AW50-42	Immobilizer	Clear code	
V40		2000AW50-42	Immobilizer	Data stream	
V40		2000AW50-42	Immobilizer	Actuation	
V40		2000AW50-42	VGLA	Sys. Info.	
V40		2000AW50-42	VGLA	Read code	
V40		2000AW50-42	VGLA	Clear code	
V40		2000AW50-42	VGLA	Data stream	
V40		2000AW50-42	VGLA	Actuation	
V40		2000AW50-42	CEM	Sys. Info.	
V40		2000AW50-42	CEM	Read code	
V40		2000AW50-42	CEM	Clear code	
V40		2000AW50-42	CEM	Data stream	
V40		2000AW50-42	CEM	Actuation	
V40		2000AW50-42	DIM	Sys. Info.	
V40		2000AW50-42	DIM	Read code	
V40		2000AW50-42	DIM	Clear code	
V40		2000AW50-42	DIM	Data stream	
V40		2000AW50-42	DIM	Actuation	

model	year	type	system	function	subfunction
V40		2000AW50-42	CCM	Sys. Info.	
V40		2000AW50-42	CCM	Read code	
V40		2000AW50-42	CCM	Clear code	
V40		2000AW50-42	CCM	Data stream	
V40		2000AW50-42	CCM	Actuation	
V40		2000AW50-42	CPM	Sys. Info.	
V40		2000AW50-42	CPM	Read code	
V40		2000AW50-42	CPM	Clear code	
V40		2000AW50-42	CPM	Data stream	
V40		2000AW50-42	CPM	Actuation	
V40		2000AW50-42	DSA	Sys. Info.	
V40		2000AW50-42	DSA	Read code	
V40		2000AW50-42	DSA	Clear code	
V40		2000AW50-42	DSA	Data stream	
V40		2000AW50-42	DSA	Actuation	
V40		2001AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V40		2001B4204T3	ECM	Sys. Info.	
V40		2001B4204T3	ECM	Read code	
V40		2001B4204T3	ECM	Clear code	
V40		2001B4204T3	ECM	Data stream	
V40		2001B4204T3	ECM	Actuation	
V40		2001B4204T5	ECM	Sys. Info.	
V40		2001B4204T5	ECM	Read code	
V40		2001B4204T5	ECM	Clear code	
V40		2001B4204T5	ECM	Data stream	
V40		2001B4204T5	ECM	Actuation	
V40		2001B4164S2	ECM	Sys. Info.	
V40		2001B4164S2	ECM	Read code	
V40		2001B4164S2	ECM	Clear code	
V40		2001B4164S2	ECM	Data stream	
V40		2001B4164S2	ECM	Actuation	
V40		2001B4184S2	ECM	Sys. Info.	
V40		2001B4184S2	ECM	Read code	
V40		2001B4184S2	ECM	Clear code	
V40		2001B4184S2	ECM	Data stream	
V40		2001B4184S2	ECM	Actuation	
V40		2001B4204S2	ECM	Sys. Info.	
V40		2001B4204S2	ECM	Read code	
V40		2001B4204S2	ECM	Clear code	
V40		2001B4204S2	ECM	Data stream	
V40		2001B4204S2	ECM	Actuation	
V40		2001B4184S3	ECM	Sys. Info.	
V40		2001B4184S3	ECM	Read code	
V40		2001B4184S3	ECM	Clear code	
V40		2001B4184S3	ECM	Data stream	
V40		2001B4184S3	ECM	Actuation	
V40		2001B4184S10	ECM	Sys. Info.	
V40		2001B4184S10	ECM	Read code	
V40		2001B4184S10	ECM	Clear code	
V40		2001B4184S10	ECM	Data stream	
V40		2001B4184S10	ECM	Actuation	
V40		2001B4184S9	ECM	Sys. Info.	
V40		2001B4184S9	ECM	Read code	
V40		2001B4184S9	ECM	Clear code	
V40		2001B4184S9	ECM	Data stream	
V40		2001B4184S9	ECM	Actuation	
V40		2001B4184SJ	ECM	Sys. Info.	
V40		2001B4184SJ	ECM	Read code	
V40		2001B4184SJ	ECM	Clear code	
V40		2001B4184SJ	ECM	Data stream	
V40		2001B4184SJ	ECM	Actuation	
V40		2001B4184SM	ECM	Sys. Info.	
V40		2001B4184SM	ECM	Read code	
V40		2001B4184SM	ECM	Clear code	
V40		2001B4184SM	ECM	Data stream	
V40		2001B4184SM	ECM	Actuation	
V40		2001AW55-50/51SN	TCM	Sys. Info.	
V40		2001AW55-50/51SN	TCM	Read code	
V40		2001AW55-50/51SN	TCM	Clear code	
V40		2001AW55-50/51SN	TCM	Data stream	
V40		2001AW55-50/51SN	TCM	Actuation	

model	year	type	system	function	subfunction
V40	2001	AW55-50/51SN	ABS	Sys. Info.	
V40	2001	AW55-50/51SN	ABS	Read code	
V40	2001	AW55-50/51SN	ABS	Clear code	
V40	2001	AW55-50/51SN	ABS	Data stream	
V40	2001	AW55-50/51SN	SRS	Sys. Info.	
V40	2001	AW55-50/51SN	SRS	Read code	
V40	2001	AW55-50/51SN	SRS	Clear code	
V40	2001	AW55-50/51SN	SRS	Data stream	
V40	2001	AW55-50/51SN	Immobilizer	Sys. Info.	
V40	2001	AW55-50/51SN	Immobilizer	Read code	
V40	2001	AW55-50/51SN	Immobilizer	Clear code	
V40	2001	AW55-50/51SN	Immobilizer	Data stream	
V40	2001	AW55-50/51SN	Immobilizer	Actuation	
V40	2001	AW55-50/51SN	VGLA	Sys. Info.	
V40	2001	AW55-50/51SN	VGLA	Read code	
V40	2001	AW55-50/51SN	VGLA	Clear code	
V40	2001	AW55-50/51SN	VGLA	Data stream	
V40	2001	AW55-50/51SN	VGLA	Actuation	
V40	2001	AW55-50/51SN	CEM	Sys. Info.	
V40	2001	AW55-50/51SN	CEM	Read code	
V40	2001	AW55-50/51SN	CEM	Clear code	
V40	2001	AW55-50/51SN	CEM	Data stream	
V40	2001	AW55-50/51SN	CEM	Actuation	
V40	2001	AW55-50/51SN	DIM	Sys. Info.	
V40	2001	AW55-50/51SN	DIM	Read code	
V40	2001	AW55-50/51SN	DIM	Clear code	
V40	2001	AW55-50/51SN	DIM	Data stream	
V40	2001	AW55-50/51SN	DIM	Actuation	
V40	2001	AW55-50/51SN	CCM	Sys. Info.	
V40	2001	AW55-50/51SN	CCM	Read code	
V40	2001	AW55-50/51SN	CCM	Clear code	
V40	2001	AW55-50/51SN	CCM	Data stream	
V40	2001	AW55-50/51SN	CCM	Actuation	
V40	2001	AW55-50/51SN	CPM	Sys. Info.	
V40	2001	AW55-50/51SN	CPM	Read code	
V40	2001	AW55-50/51SN	CPM	Clear code	
V40	2001	AW55-50/51SN	CPM	Data stream	
V40	2001	AW55-50/51SN	CPM	Actuation	
V40	2001	AW55-50/51SN	DSA	Sys. Info.	

model	year	type	system	function	subfunction
V40	2001	AW55-50/51SN	DSA	Read code	
V40	2001	AW55-50/51SN	DSA	Clear code	
V40	2001	AW55-50/51SN	DSA	Data stream	
V40	2001	AW55-50/51SN	DSA	Actuation	
V40	2002	AW55-50/51SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V40	2002	B4204T3	ECM	Sys. Info.	
V40	2002	B4204T3	ECM	Read code	
V40	2002	B4204T3	ECM	Clear code	
V40	2002	B4204T3	ECM	Data stream	
V40	2002	B4204T3	ECM	Actuation	
V40	2002	B4204T5	ECM	Sys. Info.	
V40	2002	B4204T5	ECM	Read code	
V40	2002	B4204T5	ECM	Clear code	
V40	2002	B4204T5	ECM	Data stream	
V40	2002	B4204T5	ECM	Actuation	
V40	2002	B4164S2	ECM	Sys. Info.	
V40	2002	B4164S2	ECM	Read code	
V40	2002	B4164S2	ECM	Clear code	
V40	2002	B4164S2	ECM	Data stream	
V40	2002	B4164S2	ECM	Actuation	
V40	2002	B4184S2	ECM	Sys. Info.	
V40	2002	B4184S2	ECM	Read code	
V40	2002	B4184S2	ECM	Clear code	
V40	2002	B4184S2	ECM	Data stream	
V40	2002	B4184S2	ECM	Actuation	
V40	2002	B4204S2	ECM	Sys. Info.	
V40	2002	B4204S2	ECM	Read code	
V40	2002	B4204S2	ECM	Clear code	
V40	2002	B4204S2	ECM	Data stream	
V40	2002	B4204S2	ECM	Actuation	
V40	2002	B4184S3	ECM	Sys. Info.	
V40	2002	B4184S3	ECM	Read code	
V40	2002	B4184S3	ECM	Clear code	
V40	2002	B4184S3	ECM	Data stream	
V40	2002	B4184S3	ECM	Actuation	
V40	2002	B4184S10	ECM	Sys. Info.	
V40	2002	B4184S10	ECM	Read code	
V40	2002	B4184S10	ECM	Clear code	
V40	2002	B4184S10	ECM	Data stream	
V40	2002	B4184S10	ECM	Actuation	
V40	2002	B4184S9	ECM	Sys. Info.	
V40	2002	B4184S9	ECM	Read code	
V40	2002	B4184S9	ECM	Clear code	
V40	2002	B4184S9	ECM	Data stream	
V40	2002	B4184S9	ECM	Actuation	
V40	2002	B4184SJ	ECM	Sys. Info.	
V40	2002	B4184SJ	ECM	Read code	
V40	2002	B4184SJ	ECM	Clear code	
V40	2002	B4184SJ	ECM	Data stream	
V40	2002	B4184SJ	ECM	Actuation	
V40	2002	AW55-50/51SN	TCM	Sys. Info.	
V40	2002	AW55-50/51SN	TCM	Read code	
V40	2002	AW55-50/51SN	TCM	Clear code	
V40	2002	AW55-50/51SN	TCM	Data stream	
V40	2002	AW55-50/51SN	TCM	Actuation	
V40	2002	AW55-50/51SN	ABS	Sys. Info.	
V40	2002	AW55-50/51SN	ABS	Read code	
V40	2002	AW55-50/51SN	ABS	Clear code	
V40	2002	AW55-50/51SN	ABS	Data stream	
V40	2002	AW55-50/51SN	SRS	Sys. Info.	
V40	2002	AW55-50/51SN	SRS	Read code	



model	year	type	system	function	subfunction
V40	2002	AW55-50/51SN	SRS	Clear code	
V40	2002	AW55-50/51SN	SRS	Data stream	
V40	2002	AW55-50/51SN	Immobilizer	Sys. Info.	
V40	2002	AW55-50/51SN	Immobilizer	Read code	
V40	2002	AW55-50/51SN	Immobilizer	Clear code	
V40	2002	AW55-50/51SN	Immobilizer	Data stream	
V40	2002	AW55-50/51SN	Immobilizer	Actuation	
V40	2002	AW55-50/51SN	VGLA	Sys. Info.	
V40	2002	AW55-50/51SN	VGLA	Read code	
V40	2002	AW55-50/51SN	VGLA	Clear code	
V40	2002	AW55-50/51SN	VGLA	Data stream	
V40	2002	AW55-50/51SN	VGLA	Actuation	
V40	2002	AW55-50/51SN	CEM	Sys. Info.	
V40	2002	AW55-50/51SN	CEM	Read code	
V40	2002	AW55-50/51SN	CEM	Clear code	
V40	2002	AW55-50/51SN	CEM	Data stream	
V40	2002	AW55-50/51SN	CEM	Actuation	
V40	2002	AW55-50/51SN	DIM	Sys. Info.	
V40	2002	AW55-50/51SN	DIM	Read code	
V40	2002	AW55-50/51SN	DIM	Clear code	
V40	2002	AW55-50/51SN	DIM	Data stream	
V40	2002	AW55-50/51SN	DIM	Actuation	
V40	2002	AW55-50/51SN	CCM	Sys. Info.	
V40	2002	AW55-50/51SN	CCM	Read code	
V40	2002	AW55-50/51SN	CCM	Clear code	
V40	2002	AW55-50/51SN	CCM	Data stream	
V40	2002	AW55-50/51SN	CCM	Actuation	
V40	2002	AW55-50/51SN	CPM	Sys. Info.	
V40	2002	AW55-50/51SN	CPM	Read code	
V40	2002	AW55-50/51SN	CPM	Clear code	
V40	2002	AW55-50/51SN	CPM	Data stream	
V40	2002	AW55-50/51SN	CPM	Actuation	
V40	2002	AW55-50/51SN	DSA	Sys. Info.	
V40	2002	AW55-50/51SN	DSA	Read code	
V40	2002	AW55-50/51SN	DSA	Clear code	
V40	2002	AW55-50/51SN	DSA	Data stream	
V40	2002	AW55-50/51SN	DSA	Actuation	
V40	2003	AW55-50/51SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V40	2003	B4204T3	ECM	Sys. Info.	
V40	2003	B4204T3	ECM	Read code	

model	year	type	system	function	subfunction	
V40		2003	B4204T3	ECM	Clear code	
V40		2003	B4204T3	ECM	Data stream	
V40		2003	B4204T3	ECM	Actuation	
V40		2003	B4204T5	ECM	Sys. Info.	
V40		2003	B4204T5	ECM	Read code	
V40		2003	B4204T5	ECM	Clear code	
V40		2003	B4204T5	ECM	Data stream	
V40		2003	B4204T5	ECM	Actuation	
V40		2003	B4164S2	ECM	Sys. Info.	
V40		2003	B4164S2	ECM	Read code	
V40		2003	B4164S2	ECM	Clear code	
V40		2003	B4164S2	ECM	Data stream	
V40		2003	B4164S2	ECM	Actuation	
V40		2003	B4184S2	ECM	Sys. Info.	
V40		2003	B4184S2	ECM	Read code	
V40		2003	B4184S2	ECM	Clear code	
V40		2003	B4184S2	ECM	Data stream	
V40		2003	B4184S2	ECM	Actuation	
V40		2003	B4204S2	ECM	Sys. Info.	
V40		2003	B4204S2	ECM	Read code	
V40		2003	B4204S2	ECM	Clear code	
V40		2003	B4204S2	ECM	Data stream	
V40		2003	B4204S2	ECM	Actuation	
V40		2003	B4184S3	ECM	Sys. Info.	
V40		2003	B4184S3	ECM	Read code	
V40		2003	B4184S3	ECM	Clear code	
V40		2003	B4184S3	ECM	Data stream	
V40		2003	B4184S3	ECM	Actuation	
V40		2003	B4184S10	ECM	Sys. Info.	
V40		2003	B4184S10	ECM	Read code	
V40		2003	B4184S10	ECM	Clear code	
V40		2003	B4184S10	ECM	Data stream	
V40		2003	B4184S10	ECM	Actuation	
V40		2003	B4184S9	ECM	Sys. Info.	
V40		2003	B4184S9	ECM	Read code	
V40		2003	B4184S9	ECM	Clear code	
V40		2003	B4184S9	ECM	Data stream	
V40		2003	B4184S9	ECM	Actuation	
V40		2003	B4184SJ	ECM	Sys. Info.	
V40		2003	B4184SJ	ECM	Read code	
V40		2003	B4184SJ	ECM	Clear code	
V40		2003	B4184SJ	ECM	Data stream	
V40		2003	B4184SJ	ECM	Actuation	
V40		2003	AW55-50/51SN	TCM	Sys. Info.	
V40		2003	AW55-50/51SN	TCM	Read code	
V40		2003	AW55-50/51SN	TCM	Clear code	
V40		2003	AW55-50/51SN	TCM	Data stream	
V40		2003	AW55-50/51SN	TCM	Actuation	
V40		2003	AW55-50/51SN	ABS	Sys. Info.	
V40		2003	AW55-50/51SN	ABS	Read code	
V40		2003	AW55-50/51SN	ABS	Clear code	
V40		2003	AW55-50/51SN	ABS	Data stream	
V40		2003	AW55-50/51SN	SRS	Sys. Info.	
V40		2003	AW55-50/51SN	SRS	Read code	
V40		2003	AW55-50/51SN	SRS	Clear code	
V40		2003	AW55-50/51SN	SRS	Data stream	
V40		2003	AW55-50/51SN	Immobilizer	Sys. Info.	
V40		2003	AW55-50/51SN	Immobilizer	Read code	
V40		2003	AW55-50/51SN	Immobilizer	Clear code	
V40		2003	AW55-50/51SN	Immobilizer	Data stream	

model	year	type	system	function	subfunction
V40	2003	AW55-50/51SN	Immobilizer	Actuation	
V40	2003	AW55-50/51SN	VGLA	Sys. Info.	
V40	2003	AW55-50/51SN	VGLA	Read code	
V40	2003	AW55-50/51SN	VGLA	Clear code	
V40	2003	AW55-50/51SN	VGLA	Data stream	
V40	2003	AW55-50/51SN	VGLA	Actuation	
V40	2003	AW55-50/51SN	CEM	Sys. Info.	
V40	2003	AW55-50/51SN	CEM	Read code	
V40	2003	AW55-50/51SN	CEM	Clear code	
V40	2003	AW55-50/51SN	CEM	Data stream	
V40	2003	AW55-50/51SN	CEM	Actuation	
V40	2003	AW55-50/51SN	DIM	Sys. Info.	
V40	2003	AW55-50/51SN	DIM	Read code	
V40	2003	AW55-50/51SN	DIM	Clear code	
V40	2003	AW55-50/51SN	DIM	Data stream	
V40	2003	AW55-50/51SN	DIM	Actuation	
V40	2003	AW55-50/51SN	CCM	Sys. Info.	
V40	2003	AW55-50/51SN	CCM	Read code	
V40	2003	AW55-50/51SN	CCM	Clear code	
V40	2003	AW55-50/51SN	CCM	Data stream	
V40	2003	AW55-50/51SN	CCM	Actuation	
V40	2003	AW55-50/51SN	CPM	Sys. Info.	
V40	2003	AW55-50/51SN	CPM	Read code	
V40	2003	AW55-50/51SN	CPM	Clear code	
V40	2003	AW55-50/51SN	CPM	Data stream	
V40	2003	AW55-50/51SN	CPM	Actuation	
V40	2003	AW55-50/51SN	DSA	Sys. Info.	
V40	2003	AW55-50/51SN	DSA	Read code	
V40	2003	AW55-50/51SN	DSA	Clear code	
V40	2003	AW55-50/51SN	DSA	Data stream	
V40	2003	AW55-50/51SN	DSA	Actuation	
V40	2004	AW55-50/51SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V40	2004	B4204T3	ECM	Sys. Info.	
V40	2004	B4204T3	ECM	Read code	
V40	2004	B4204T3	ECM	Clear code	
V40	2004	B4204T3	ECM	Data stream	
V40	2004	B4204T3	ECM	Actuation	
V40	2004	B4204T5	ECM	Sys. Info.	
V40	2004	B4204T5	ECM	Read code	
V40	2004	B4204T5	ECM	Clear code	
V40	2004	B4204T5	ECM	Data stream	
V40	2004	B4204T5	ECM	Actuation	
V40	2004	B4164S2	ECM	Sys. Info.	
V40	2004	B4164S2	ECM	Read code	
V40	2004	B4164S2	ECM	Clear code	
V40	2004	B4164S2	ECM	Data stream	

model	year	type	system	function	subfunction	
V40		2004	B4164S2	ECM	Actuation	
V40		2004	B4184S2	ECM	Sys. Info.	
V40		2004	B4184S2	ECM	Read code	
V40		2004	B4184S2	ECM	Clear code	
V40		2004	B4184S2	ECM	Data stream	
V40		2004	B4184S2	ECM	Actuation	
V40		2004	B4204S2	ECM	Sys. Info.	
V40		2004	B4204S2	ECM	Read code	
V40		2004	B4204S2	ECM	Clear code	
V40		2004	B4204S2	ECM	Data stream	
V40		2004	B4204S2	ECM	Actuation	
V40		2004	B4184S3	ECM	Sys. Info.	
V40		2004	B4184S3	ECM	Read code	
V40		2004	B4184S3	ECM	Clear code	
V40		2004	B4184S3	ECM	Data stream	
V40		2004	B4184S3	ECM	Actuation	
V40		2004	B4184S10	ECM	Sys. Info.	
V40		2004	B4184S10	ECM	Read code	
V40		2004	B4184S10	ECM	Clear code	
V40		2004	B4184S10	ECM	Data stream	
V40		2004	B4184S10	ECM	Actuation	
V40		2004	B4184S9	ECM	Sys. Info.	
V40		2004	B4184S9	ECM	Read code	
V40		2004	B4184S9	ECM	Clear code	
V40		2004	B4184S9	ECM	Data stream	
V40		2004	B4184S9	ECM	Actuation	
V40		2004	B4184SJ	ECM	Sys. Info.	
V40		2004	B4184SJ	ECM	Read code	
V40		2004	B4184SJ	ECM	Clear code	
V40		2004	B4184SJ	ECM	Data stream	
V40		2004	B4184SJ	ECM	Actuation	
V40		2004	AW55-50/51SN	TCM	Sys. Info.	
V40		2004	AW55-50/51SN	TCM	Read code	
V40		2004	AW55-50/51SN	TCM	Clear code	
V40		2004	AW55-50/51SN	TCM	Data stream	
V40		2004	AW55-50/51SN	TCM	Actuation	
V40		2004	AW55-50/51SN	ABS	Sys. Info.	
V40		2004	AW55-50/51SN	ABS	Read code	
V40		2004	AW55-50/51SN	ABS	Clear code	
V40		2004	AW55-50/51SN	ABS	Data stream	
V40		2004	AW55-50/51SN	SRS	Sys. Info.	
V40		2004	AW55-50/51SN	SRS	Read code	
V40		2004	AW55-50/51SN	SRS	Clear code	
V40		2004	AW55-50/51SN	SRS	Data stream	
V40		2004	AW55-50/51SN	Immobilizer	Sys. Info.	
V40		2004	AW55-50/51SN	Immobilizer	Read code	
V40		2004	AW55-50/51SN	Immobilizer	Clear code	
V40		2004	AW55-50/51SN	Immobilizer	Data stream	
V40		2004	AW55-50/51SN	Immobilizer	Actuation	
V40		2004	AW55-50/51SN	VGLA	Sys. Info.	
V40		2004	AW55-50/51SN	VGLA	Read code	
V40		2004	AW55-50/51SN	VGLA	Clear code	
V40		2004	AW55-50/51SN	VGLA	Data stream	
V40		2004	AW55-50/51SN	VGLA	Actuation	

model	year	type	system	function	subfunction
V40	2004	AW55-50/51SN	CEM	Sys. Info.	
V40	2004	AW55-50/51SN	CEM	Read code	
V40	2004	AW55-50/51SN	CEM	Clear code	
V40	2004	AW55-50/51SN	CEM	Data stream	
V40	2004	AW55-50/51SN	CEM	Actuation	
V40	2004	AW55-50/51SN	DIM	Sys. Info.	
V40	2004	AW55-50/51SN	DIM	Read code	
V40	2004	AW55-50/51SN	DIM	Clear code	
V40	2004	AW55-50/51SN	DIM	Data stream	
V40	2004	AW55-50/51SN	DIM	Actuation	
V40	2004	AW55-50/51SN	CCM	Sys. Info.	
V40	2004	AW55-50/51SN	CCM	Read code	
V40	2004	AW55-50/51SN	CCM	Clear code	
V40	2004	AW55-50/51SN	CCM	Data stream	
V40	2004	AW55-50/51SN	CCM	Actuation	
V40	2004	AW55-50/51SN	CPM	Sys. Info.	
V40	2004	AW55-50/51SN	CPM	Read code	
V40	2004	AW55-50/51SN	CPM	Clear code	
V40	2004	AW55-50/51SN	CPM	Data stream	
V40	2004	AW55-50/51SN	CPM	Actuation	
V40	2004	AW55-50/51SN	DSA	Sys. Info.	
V40	2004	AW55-50/51SN	DSA	Read code	
V40	2004	AW55-50/51SN	DSA	Clear code	
V40	2004	AW55-50/51SN	DSA	Data stream	
V40	2004	AW55-50/51SN	DSA	Actuation	
850	1992	AW55-50/51SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
850	1992	Motronic 3	ECM	Sys. Info.	
850	1992	Motronic 3	ECM	Read code	
850	1992	Motronic 3	ECM	Clear code	
850	1992	Motronic 3	ECM	Data stream	
850	1992	Motronic 3	ECM	Actuation	
850	1992	Motronic 3	ECM	Special functions	Reset Adaption
850	1992	Fenix 2	ECM	Sys. Info.	
850	1992	Fenix 2	ECM	Read code	
850	1992	Fenix 2	ECM	Clear code	
850	1992	Fenix 2	ECM	Data stream	
850	1992	Fenix 2	ECM	Actuation	
850	1992	Motronic 4	ECM	Sys. Info.	
850	1992	Motronic 4	ECM	Read code	
850	1992	Motronic 4	ECM	Clear code	
850	1992	Motronic 4	ECM	Data stream	
850	1992	Motronic 4	ECM	Actuation	
850	1992	Motronic 4	ECM	Special functions	Reset Adaption
850	1992	AW50-42	TCM	Sys. Info.	
850	1992	AW50-42	TCM	Read code	
850	1992	AW50-42	TCM	Clear code	
850	1992	AW50-42	TCM	Data stream	
850	1992	AW50-42	TCM	Actuation	
850	1992	AW50-42 TDI	TCM	Sys. Info.	
850	1992	AW50-42 TDI	TCM	Read code	
850	1992	AW50-42 TDI	TCM	Clear code	
850	1992	AW50-42 TDI	TCM	Data stream	

model	year	type	system	function	subfunction
850	1992	AW50-42 TDI	ABS	Sys. Info.	
850	1992	AW50-42 TDI	ABS	Read code	
850	1992	AW50-42 TDI	ABS	Clear code	
850	1992	AW50-42 TDI	ABS	Data stream	
850	1992	AW50-42 TDI	ABS	Actuation	
850	1992	AW50-42 TDI	SRS	Sys. Info.	
850	1992	AW50-42 TDI	SRS	Read code	
850	1992	AW50-42 TDI	SRS	Clear code	
850	1992	AW50-42 TDI	SRS	Data stream	
850	1992	AW50-42 TDI	IC	Sys. Info.	
850	1992	AW50-42 TDI	IC	Read code	
850	1992	AW50-42 TDI	IC	Clear code	
850	1992	AW50-42 TDI	IC	Data stream	
850	1992	AW50-42 TDI	IC	Actuation	
850	1992	AW50-42 TDI	IC	Special functions	Oil lamp reset(*)
850	1992	AW50-42 TDI	Immobilizer	Sys. Info.	
850	1992	AW50-42 TDI	Immobilizer	Read code	
850	1992	AW50-42 TDI	Immobilizer	Clear code	
850	1992	AW50-42 TDI	Immobilizer	Data stream	
850	1992	AW50-42 TDI	PSL	Sys. Info.	
850	1992	AW50-42 TDI	PSL	Read code	
850	1992	AW50-42 TDI	PSL	Clear code	
850	1992	AW50-42 TDI	PSL	Data stream	
850	1992	AW50-42 TDI	PSR	Sys. Info.	
850	1992	AW50-42 TDI	PSR	Read code	
850	1992	AW50-42 TDI	PSR	Clear code	
850	1992	AW50-42 TDI	PSR	Data stream	
850	1993	AW50-42 TDI	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
850	1993	Motronic 3	ECM	Sys. Info.	
850	1993	Motronic 3	ECM	Read code	
850	1993	Motronic 3	ECM	Clear code	
850	1993	Motronic 3	ECM	Data stream	
850	1993	Motronic 3	ECM	Actuation	
850	1993	Motronic 3	ECM	Special functions	Reset Adaption
850	1993	Fenix 2	ECM	Sys. Info.	
850	1993	Fenix 2	ECM	Read code	
850	1993	Fenix 2	ECM	Clear code	
850	1993	Fenix 2	ECM	Data stream	
850	1993	Fenix 2	ECM	Actuation	
850	1993	Motronic 4	ECM	Sys. Info.	
850	1993	Motronic 4	ECM	Read code	
850	1993	Motronic 4	ECM	Clear code	
850	1993	Motronic 4	ECM	Data stream	
850	1993	Motronic 4	ECM	Actuation	
850	1993	Motronic 4	ECM	Special functions	Reset Adaption
850	1993	AW50-42	TCM	Sys. Info.	
850	1993	AW50-42	TCM	Read code	
850	1993	AW50-42	TCM	Clear code	
850	1993	AW50-42	TCM	Data stream	
850	1993	AW50-42	TCM	Actuation	
850	1993	AW50-42 TDI	TCM	Sys. Info.	
850	1993	AW50-42 TDI	TCM	Read code	
850	1993	AW50-42 TDI	TCM	Clear code	
850	1993	AW50-42 TDI	TCM	Data stream	
850	1993	AW50-42 TDI	ABS	Sys. Info.	
850	1993	AW50-42 TDI	ABS	Read code	
850	1993	AW50-42 TDI	ABS	Clear code	
850	1993	AW50-42 TDI	ABS	Data stream	
850	1993	AW50-42 TDI	ABS	Actuation	
850	1993	AW50-42 TDI	SRS	Sys. Info.	
850	1993	AW50-42 TDI	SRS	Read code	
850	1993	AW50-42 TDI	SRS	Clear code	
850	1993	AW50-42 TDI	SRS	Data stream	
850	1993	AW50-42 TDI	IC	Sys. Info.	
850	1993	AW50-42 TDI	IC	Read code	
850	1993	AW50-42 TDI	IC	Clear code	
850	1993	AW50-42 TDI	IC	Data stream	
850	1993	AW50-42 TDI	IC	Actuation	
850	1993	AW50-42 TDI	IC	Special functions	Oil lamp reset(*)
850	1993	AW50-42 TDI	Immobilizer	Sys. Info.	
850	1993	AW50-42 TDI	Immobilizer	Read code	
850	1993	AW50-42 TDI	Immobilizer	Clear code	
850	1993	AW50-42 TDI	Immobilizer	Data stream	
850	1993	AW50-42 TDI	PSL	Sys. Info.	
850	1993	AW50-42 TDI	PSL	Read code	
850	1993	AW50-42 TDI	PSL	Clear code	
850	1993	AW50-42 TDI	PSL	Data stream	

model	year	type	system	function	subfunction
850	1993	AW50-42 TDI	PSR	Sys. Info.	
850	1993	AW50-42 TDI	PSR	Read code	
850	1993	AW50-42 TDI	PSR	Clear code	
850	1993	AW50-42 TDI	PSR	Data stream	
850	1994	AW50-42 TDI	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
850	1994	Motronic 3	ECM	Sys. Info.	
850	1994	Motronic 3	ECM	Read code	
850	1994	Motronic 3	ECM	Clear code	
850	1994	Motronic 3	ECM	Data stream	
850	1994	Motronic 3	ECM	Actuation	
850	1994	Motronic 3	ECM	Special functions	Reset Adaption
850	1994	Fenix 2	ECM	Sys. Info.	
850	1994	Fenix 2	ECM	Read code	
850	1994	Fenix 2	ECM	Clear code	
850	1994	Fenix 2	ECM	Data stream	
850	1994	Fenix 2	ECM	Actuation	
850	1994	Motronic 4	ECM	Sys. Info.	
850	1994	Motronic 4	ECM	Read code	
850	1994	Motronic 4	ECM	Clear code	
850	1994	Motronic 4	ECM	Data stream	
850	1994	Motronic 4	ECM	Actuation	
850	1994	Motronic 4	ECM	Special functions	Reset Adaption
850	1994	AW50-42	TCM	Sys. Info.	
850	1994	AW50-42	TCM	Read code	
850	1994	AW50-42	TCM	Clear code	
850	1994	AW50-42	TCM	Data stream	
850	1994	AW50-42	TCM	Actuation	
850	1994	AW50-42 TDI	TCM	Sys. Info.	
850	1994	AW50-42 TDI	TCM	Read code	
850	1994	AW50-42 TDI	TCM	Clear code	
850	1994	AW50-42 TDI	TCM	Data stream	
850	1994	AW50-42 TDI	ABS	Sys. Info.	
850	1994	AW50-42 TDI	ABS	Read code	
850	1994	AW50-42 TDI	ABS	Clear code	
850	1994	AW50-42 TDI	ABS	Data stream	
850	1994	AW50-42 TDI	ABS	Actuation	
850	1994	AW50-42 TDI	SRS	Sys. Info.	
850	1994	AW50-42 TDI	SRS	Read code	
850	1994	AW50-42 TDI	SRS	Clear code	
850	1994	AW50-42 TDI	SRS	Data stream	
850	1994	AW50-42 TDI	IC	Sys. Info.	
850	1994	AW50-42 TDI	IC	Read code	
850	1994	AW50-42 TDI	IC	Clear code	
850	1994	AW50-42 TDI	IC	Data stream	
850	1994	AW50-42 TDI	IC	Actuation	
850	1994	AW50-42 TDI	IC	Special functions	Oil lamp reset(*)
850	1994	AW50-42 TDI	Immobilizer	Sys. Info.	
850	1994	AW50-42 TDI	Immobilizer	Read code	
850	1994	AW50-42 TDI	Immobilizer	Clear code	
850	1994	AW50-42 TDI	Immobilizer	Data stream	
850	1994	AW50-42 TDI	PSL	Sys. Info.	
850	1994	AW50-42 TDI	PSL	Read code	
850	1994	AW50-42 TDI	PSL	Clear code	
850	1994	AW50-42 TDI	PSL	Data stream	
850	1994	AW50-42 TDI	PSR	Sys. Info.	
850	1994	AW50-42 TDI	PSR	Read code	
850	1994	AW50-42 TDI	PSR	Clear code	
850	1994	AW50-42 TDI	PSR	Data stream	
850	1995	AW50-42 TDI	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
850	1995	Motronic 3	ECM	Sys. Info.	
850	1995	Motronic 3	ECM	Read code	
850	1995	Motronic 3	ECM	Clear code	
850	1995	Motronic 3	ECM	Data stream	
850	1995	Motronic 3	ECM	Actuation	
850	1995	Motronic 3	ECM	Special functions	Reset Adaption
850	1995	Fenix 2	ECM	Sys. Info.	
850	1995	Fenix 2	ECM	Read code	
850	1995	Fenix 2	ECM	Clear code	
850	1995	Fenix 2	ECM	Data stream	
850	1995	Fenix 2	ECM	Actuation	
850	1995	Motronic 4	ECM	Sys. Info.	
850	1995	Motronic 4	ECM	Read code	
850	1995	Motronic 4	ECM	Clear code	
850	1995	Motronic 4	ECM	Data stream	
850	1995	Motronic 4	ECM	Actuation	
850	1995	Motronic 4	ECM	Special functions	Reset Adaption

model	year	type	system	function	subfunction
850	1995	AW50-42	TCM	Sys. Info.	
850	1995	AW50-42	TCM	Read code	
850	1995	AW50-42	TCM	Clear code	
850	1995	AW50-42	TCM	Data stream	
850	1995	AW50-42	TCM	Actuation	
850	1995	AW50-42 TDI	TCM	Sys. Info.	
850	1995	AW50-42 TDI	TCM	Read code	
850	1995	AW50-42 TDI	TCM	Clear code	
850	1995	AW50-42 TDI	TCM	Data stream	
850	1995	AW50-42 TDI	ABS	Sys. Info.	
850	1995	AW50-42 TDI	ABS	Read code	
850	1995	AW50-42 TDI	ABS	Clear code	
850	1995	AW50-42 TDI	ABS	Data stream	
850	1995	AW50-42 TDI	ABS	Actuation	
850	1995	AW50-42 TDI	SRS	Sys. Info.	
850	1995	AW50-42 TDI	SRS	Read code	
850	1995	AW50-42 TDI	SRS	Clear code	
850	1995	AW50-42 TDI	SRS	Data stream	
850	1995	AW50-42 TDI	IC	Sys. Info.	
850	1995	AW50-42 TDI	IC	Read code	
850	1995	AW50-42 TDI	IC	Clear code	
850	1995	AW50-42 TDI	IC	Data stream	
850	1995	AW50-42 TDI	IC	Actuation	
850	1995	AW50-42 TDI	IC	Special functions	Oil lamp reset(*)
850	1995	AW50-42 TDI	Immobilizer	Sys. Info.	
850	1995	AW50-42 TDI	Immobilizer	Read code	
850	1995	AW50-42 TDI	Immobilizer	Clear code	
850	1995	AW50-42 TDI	Immobilizer	Data stream	
850	1995	AW50-42 TDI	PSL	Sys. Info.	
850	1995	AW50-42 TDI	PSL	Read code	
850	1995	AW50-42 TDI	PSL	Clear code	
850	1995	AW50-42 TDI	PSL	Data stream	
850	1995	AW50-42 TDI	PSR	Sys. Info.	
850	1995	AW50-42 TDI	PSR	Read code	
850	1995	AW50-42 TDI	PSR	Clear code	
850	1995	AW50-42 TDI	PSR	Data stream	
850	1996	AW50-42 TDI	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
850	1996	Motronic 3	ECM	Sys. Info.	
850	1996	Motronic 3	ECM	Read code	
850	1996	Motronic 3	ECM	Clear code	
850	1996	Motronic 3	ECM	Data stream	
850	1996	Motronic 3	ECM	Actuation	
850	1996	Motronic 3	ECM	Special functions	Reset Adaption
850	1996	Fenix 2	ECM	Sys. Info.	
850	1996	Fenix 2	ECM	Read code	
850	1996	Fenix 2	ECM	Clear code	
850	1996	Fenix 2	ECM	Data stream	
850	1996	Fenix 2	ECM	Actuation	
850	1996	Motronic 4	ECM	Sys. Info.	
850	1996	Motronic 4	ECM	Read code	
850	1996	Motronic 4	ECM	Clear code	
850	1996	Motronic 4	ECM	Data stream	
850	1996	Motronic 4	ECM	Actuation	
850	1996	Motronic 4	ECM	Special functions	Reset Adaption
850	1996	AW50-42	TCM	Sys. Info.	
850	1996	AW50-42	TCM	Read code	
850	1996	AW50-42	TCM	Clear code	
850	1996	AW50-42	TCM	Data stream	
850	1996	AW50-42	TCM	Actuation	
850	1996	AW50-42 TDI	TCM	Sys. Info.	
850	1996	AW50-42 TDI	TCM	Read code	
850	1996	AW50-42 TDI	TCM	Clear code	
850	1996	AW50-42 TDI	TCM	Data stream	
850	1996	AW50-42 TDI	ABS	Sys. Info.	
850	1996	AW50-42 TDI	ABS	Read code	
850	1996	AW50-42 TDI	ABS	Clear code	
850	1996	AW50-42 TDI	ABS	Data stream	
850	1996	AW50-42 TDI	ABS	Actuation	
850	1996	AW50-42 TDI	SRS	Sys. Info.	
850	1996	AW50-42 TDI	SRS	Read code	
850	1996	AW50-42 TDI	SRS	Clear code	
850	1996	AW50-42 TDI	SRS	Data stream	
850	1996	AW50-42 TDI	IC	Sys. Info.	
850	1996	AW50-42 TDI	IC	Read code	
850	1996	AW50-42 TDI	IC	Clear code	
850	1996	AW50-42 TDI	IC	Data stream	
850	1996	AW50-42 TDI	IC	Actuation	



model	year	type	system	function	subfunction
850	1996	AW50-42 TDI	IC	Special functions	Oil lamp reset(*)
850	1996	AW50-42 TDI	Immobilizer	Sys. Info.	
850	1996	AW50-42 TDI	Immobilizer	Read code	
850	1996	AW50-42 TDI	Immobilizer	Clear code	
850	1996	AW50-42 TDI	Immobilizer	Data stream	
850	1996	AW50-42 TDI	PSL	Sys. Info.	
850	1996	AW50-42 TDI	PSL	Read code	
850	1996	AW50-42 TDI	PSL	Clear code	
850	1996	AW50-42 TDI	PSL	Data stream	
850	1996	AW50-42 TDI	PSR	Sys. Info.	
850	1996	AW50-42 TDI	PSR	Read code	
850	1996	AW50-42 TDI	PSR	Clear code	
850	1996	AW50-42 TDI	PSR	Data stream	
850	1997	AW50-42 TDI	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
850	1997	Motronic 3	ECM	Sys. Info.	
850	1997	Motronic 3	ECM	Read code	
850	1997	Motronic 3	ECM	Clear code	
850	1997	Motronic 3	ECM	Data stream	
850	1997	Motronic 3	ECM	Actuation	
850	1997	Motronic 3	ECM	Special functions	Reset Adaption
850	1997	Fenix 2	ECM	Sys. Info.	
850	1997	Fenix 2	ECM	Read code	
850	1997	Fenix 2	ECM	Clear code	
850	1997	Fenix 2	ECM	Data stream	
850	1997	Fenix 2	ECM	Actuation	
850	1997	Motronic 4	ECM	Sys. Info.	
850	1997	Motronic 4	ECM	Read code	
850	1997	Motronic 4	ECM	Clear code	
850	1997	Motronic 4	ECM	Data stream	
850	1997	Motronic 4	ECM	Actuation	
850	1997	Motronic 4	ECM	Special functions	Reset Adaption
850	1997	AW50-42	TCM	Sys. Info.	
850	1997	AW50-42	TCM	Read code	
850	1997	AW50-42	TCM	Clear code	
850	1997	AW50-42	TCM	Data stream	
850	1997	AW50-42	TCM	Actuation	
850	1997	AW50-42 TDI	TCM	Sys. Info.	
850	1997	AW50-42 TDI	TCM	Read code	
850	1997	AW50-42 TDI	TCM	Clear code	
850	1997	AW50-42 TDI	TCM	Data stream	
850	1997	AW50-42 TDI	ABS	Sys. Info.	
850	1997	AW50-42 TDI	ABS	Read code	
850	1997	AW50-42 TDI	ABS	Clear code	
850	1997	AW50-42 TDI	ABS	Data stream	
850	1997	AW50-42 TDI	ABS	Actuation	
850	1997	AW50-42 TDI	SRS	Sys. Info.	
850	1997	AW50-42 TDI	SRS	Read code	
850	1997	AW50-42 TDI	SRS	Clear code	
850	1997	AW50-42 TDI	SRS	Data stream	
850	1997	AW50-42 TDI	IC	Sys. Info.	
850	1997	AW50-42 TDI	IC	Read code	
850	1997	AW50-42 TDI	IC	Clear code	
850	1997	AW50-42 TDI	IC	Data stream	
850	1997	AW50-42 TDI	IC	Actuation	
850	1997	AW50-42 TDI	IC	Special functions	Oil lamp reset(*)
850	1997	AW50-42 TDI	Immobilizer	Sys. Info.	
850	1997	AW50-42 TDI	Immobilizer	Read code	
850	1997	AW50-42 TDI	Immobilizer	Clear code	
850	1997	AW50-42 TDI	Immobilizer	Data stream	
850	1997	AW50-42 TDI	PSL	Sys. Info.	
850	1997	AW50-42 TDI	PSL	Read code	
850	1997	AW50-42 TDI	PSL	Clear code	
850	1997	AW50-42 TDI	PSL	Data stream	
850	1997	AW50-42 TDI	PSR	Sys. Info.	
850	1997	AW50-42 TDI	PSR	Read code	
850	1997	AW50-42 TDI	PSR	Clear code	
850	1997	AW50-42 TDI	PSR	Data stream	
XC90	1997	AW50-42 TDI	ShortTest	Special functions	search all system and DTC(s) of vehicle
XC90	2003	AW50-42 TDI	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90	2003	B5244S	ECM	Sys. Info.	
XC90	2003	B5244S	ECM	Read code	
XC90	2003	B5244S	ECM	Clear code	
XC90	2003	B5244S	ECM	Data stream	
XC90	2003	B5244S	ECM	Actuation	
XC90	2003	B6304S3	ECM	Sys. Info.	
XC90	2003	B6304S3	ECM	Read code	

model	year	type	system	function	subfunction	
XC90		2003	B6304S3	ECM	Clear code	
XC90		2003	B6304S3	ECM	Data stream	
XC90		2003	B6304S3	ECM	Actuation	
XC90		2003	B6294T	ECM	Sys. Info.	
XC90		2003	B6294T	ECM	Read code	
XC90		2003	B6294T	ECM	Clear code	
XC90		2003	B6294T	ECM	Data stream	
XC90		2003	B6294T	ECM	Actuation	
XC90		2003	B6294T	ECM	Special functions	Resetting the adaptation values
XC90		2003	B6284T	ECM	Sys. Info.	
XC90		2003	B6284T	ECM	Read code	
XC90		2003	B6284T	ECM	Clear code	
XC90		2003	B6284T	ECM	Data stream	
XC90		2003	B6284T	ECM	Actuation	
XC90		2003	B5204T4	ECM	Sys. Info.	
XC90		2003	B5204T4	ECM	Read code	
XC90		2003	B5204T4	ECM	Clear code	
XC90		2003	B5204T4	ECM	Data stream	
XC90		2003	B5204T4	ECM	Actuation	
XC90		2003	B5204T3	ECM	Sys. Info.	
XC90		2003	B5204T3	ECM	Read code	
XC90		2003	B5204T3	ECM	Clear code	
XC90		2003	B5204T3	ECM	Data stream	
XC90		2003	B5204T3	ECM	Actuation	
XC90		2003	B5244SG	ECM	Sys. Info.	
XC90		2003	B5244SG	ECM	Read code	
XC90		2003	B5244SG	ECM	Clear code	
XC90		2003	B5244SG	ECM	Data stream	
XC90		2003	B5244SG	ECM	Actuation	
XC90		2003	B6294S2	ECM	Sys. Info.	
XC90		2003	B6294S2	ECM	Read code	
XC90		2003	B6294S2	ECM	Clear code	
XC90		2003	B6294S2	ECM	Data stream	
XC90		2003	B6294S2	ECM	Actuation	
XC90		2003	B5244S2	ECM	Sys. Info.	
XC90		2003	B5244S2	ECM	Read code	
XC90		2003	B5244S2	ECM	Clear code	
XC90		2003	B5244S2	ECM	Data stream	
XC90		2003	B5244S2	ECM	Actuation	
XC90		2003	B5254T2	ECM	Sys. Info.	
XC90		2003	B5254T2	ECM	Read code	
XC90		2003	B5254T2	ECM	Clear code	
XC90		2003	B5254T2	ECM	Data stream	
XC90		2003	B5254T2	ECM	Actuation	
XC90		2003	B5254T2	ECM	Special functions	Resetting the adaptation values
XC90		2003	B5254T2	ECM	Special functions	Quick test of Exhaust camshaft control
XC90		2003	B5254T2	ECM	Special functions	Quick test of intake camshaft control
XC90		2003	B5234T3	ECM	Sys. Info.	
XC90		2003	B5234T3	ECM	Read code	
XC90		2003	B5234T3	ECM	Clear code	
XC90		2003	B5234T3	ECM	Data stream	
XC90		2003	B5234T3	ECM	Actuation	
XC90		2003	B5204T5	ECM	Sys. Info.	
XC90		2003	B5204T5	ECM	Read code	
XC90		2003	B5204T5	ECM	Clear code	
XC90		2003	B5204T5	ECM	Data stream	
XC90		2003	B5204T5	ECM	Actuation	
XC90		2003	B5254T4	ECM	Sys. Info.	
XC90		2003	B5254T4	ECM	Read code	
XC90		2003	B5254T4	ECM	Clear code	
XC90		2003	B5254T4	ECM	Data stream	
XC90		2003	B5254T4	ECM	Actuation	
XC90		2003	B6294S	ECM	Sys. Info.	
XC90		2003	B6294S	ECM	Read code	
XC90		2003	B6294S	ECM	Clear code	
XC90		2003	B6294S	ECM	Data stream	
XC90		2003	B6294S	ECM	Actuation	
XC90		2003	B5244T7	ECM	Sys. Info.	
XC90		2003	B5244T7	ECM	Read code	
XC90		2003	B5244T7	ECM	Clear code	
XC90		2003	B5244T7	ECM	Data stream	
XC90		2003	B5244T7	ECM	Actuation	
XC90		2003	B5244T7	ECM	Special functions	Resetting the adaptation values
XC90		2003	B5234T7	ECM	Sys. Info.	
XC90		2003	B5234T7	ECM	Read code	
XC90		2003	B5234T7	ECM	Clear code	
XC90		2003	B5234T7	ECM	Data stream	
XC90		2003	B5234T7	ECM	Actuation	

model	year	type	system	function	subfunction
XC90		2003 B5234T7	ECM	Special functions	Resetting the adaptation values
XC90		2003 D5244T	Diesel Eng	Sys. Info.	
XC90		2003 D5244T	Diesel Eng	Read code	
XC90		2003 D5244T	Diesel Eng	Clear code	
XC90		2003 D5244T	Diesel Eng	Data stream	
XC90		2003 D5244T	Diesel Eng	Actuation	
XC90		2003 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90		2003 D5252T	Diesel Eng	Sys. Info.	
XC90		2003 D5252T	Diesel Eng	Read code	
XC90		2003 D5252T	Diesel Eng	Clear code	
XC90		2003 D5252T	Diesel Eng	Data stream	
XC90		2003 D5252T	Diesel Eng	Actuation	
XC90		2003 D5252T	Diesel Eng	Special functions	Programming the idle speed
XC90		2003 AW55-50SN	TCM	Sys. Info.	
XC90		2003 AW55-50SN	TCM	Read code	
XC90		2003 AW55-50SN	TCM	Clear code	
XC90		2003 AW55-50SN	TCM	Data stream	
XC90		2003 AW55-50SN	TCM	Actuation	
XC90		2003 AW55-50SN	TCM	Special functions	Reset adaptation to zero
XC90		2003 AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2003 4T65EV-GT	TCM	Sys. Info.	
XC90		2003 4T65EV-GT	TCM	Read code	
XC90		2003 4T65EV-GT	TCM	Clear code	
XC90		2003 4T65EV-GT	TCM	Data stream	
XC90		2003 4T65EV-GT	TCM	Actuation	
XC90		2003 4T65EV-GT	TCM	Special functions	Reset adaptation to zero
XC90		2003 4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2003 AW50-42	TCM	Sys. Info.	
XC90		2003 AW50-42	TCM	Read code	
XC90		2003 AW50-42	TCM	Clear code	
XC90		2003 AW50-42	TCM	Data stream	
XC90		2003 AW50-42	TCM	Actuation	
XC90		2003 AW50-42	TCM	Special functions	Reset adaptation to zero
XC90		2003 AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2003 AW50/51AW D	TCM	Sys. Info.	
XC90		2003 AW50/51AW D	TCM	Read code	
XC90		2003 AW50/51AW D	TCM	Clear code	
XC90		2003 AW50/51AW D	TCM	Data stream	
XC90		2003 AW50/51AW D	TCM	Actuation	
XC90		2003 AW50/51AW D	TCM	Special functions	Reset adaptation to zero
XC90		2003 AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2003 AW50/51AW D	TCM	Special functions	Control module adaptation
XC90		2003 AW50/51AW D	TCM	Special functions	Activating gear indication
XC90		2003 TF-80SC	TCM	Sys. Info.	
XC90		2003 TF-80SC	TCM	Read code	
XC90		2003 TF-80SC	TCM	Clear code	
XC90		2003 TF-80SC	TCM	Data stream	
XC90		2003 TF-80SC	TCM	Actuation	
XC90		2003 TF-80SC	TCM	Special functions	Resetting the adaptation
XC90		2003 TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
XC90		2003 4T65EV	TCM	Sys. Info.	
XC90		2003 4T65EV	TCM	Read code	
XC90		2003 4T65EV	TCM	Clear code	
XC90		2003 4T65EV	TCM	Data stream	
XC90		2003 4T65EV	TCM	Actuation	
XC90		2003 4T65AWD	TCM	Sys. Info.	
XC90		2003 4T65AWD	TCM	Read code	
XC90		2003 4T65AWD	TCM	Clear code	
XC90		2003 4T65AWD	TCM	Data stream	
XC90		2003 4T65AWD	TCM	Actuation	
XC90		2003 4T65AWD	TCM	Special functions	Reset adaptation to zero
XC90		2003 4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2003 4T65AWD	ABS	Sys. Info.	
XC90		2003 4T65AWD	ABS	Read code	
XC90		2003 4T65AWD	ABS	Clear code	
XC90		2003 4T65AWD	ABS	Data stream	
XC90		2003 4T65AWD	ABS	Actuation	
XC90		2003 4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
XC90		2003 4T65AWD	ABS	Special functions	Calibration

model	year	type	system	function	subfunction	
XC90		2003	4T65AWD	SRS	Sys. Info.	
XC90		2003	4T65AWD	SRS	Read code	
XC90		2003	4T65AWD	SRS	Clear code	
XC90		2003	4T65AWD	SRS	Data stream	
XC90		2003	4T65AWD	SRS	Freeze frame	
XC90		2003	4T65AWD	CEM	Sys. Info.	
XC90		2003	4T65AWD	CEM	Read code	
XC90		2003	4T65AWD	CEM	Clear code	
XC90		2003	4T65AWD	CEM	Data stream	
XC90		2003	4T65AWD	CEM	Actuation	
XC90		2003	4T65AWD	CEM	Special functions	Reading alarm cause(*)
XC90		2003	4T65AWD	CEM	Special functions	Resetting the factory settings
XC90		2003	4T65AWD	UEM	Sys. Info.	
XC90		2003	4T65AWD	UEM	Read code	
XC90		2003	4T65AWD	UEM	Clear code	
XC90		2003	4T65AWD	UEM	Data stream	
XC90		2003	4T65AWD	UEM	Actuation	
XC90		2003	4T65AWD	UEM	Special functions	Configuration of the siren
XC90		2003	4T65AWD	UEM	Special functions	Programming the control unit
XC90		2003	4T65AWD	UEM	Special functions	Reading the programmed values
XC90		2003	4T65AWD	REM	Sys. Info.	
XC90		2003	4T65AWD	REM	Read code	
XC90		2003	4T65AWD	REM	Clear code	
XC90		2003	4T65AWD	REM	Data stream	
XC90		2003	4T65AWD	REM	Actuation	
XC90		2003	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90		2003	4T65AWD	DIM	Sys. Info.	
XC90		2003	4T65AWD	DIM	Read code	
XC90		2003	4T65AWD	DIM	Clear code	
XC90		2003	4T65AWD	DIM	Data stream	
XC90		2003	4T65AWD	DIM	Actuation	
XC90		2003	4T65AWD	DIM	Freeze frame	
XC90		2003	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90		2003	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90		2003	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
XC90		2003	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
XC90		2003	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
XC90		2003	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
XC90		2003	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
XC90		2003	4T65AWD	DIM	Special functions	Programming of clock (*)
XC90		2003	4T65AWD	DIM	Special functions	Programming of zeros (*)
XC90		2003	4T65AWD	DIM	Special functions	Programming parking brake warning
XC90		2003	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90		2003	4T65AWD	DIM	Special functions	Programming instrument lighting
XC90		2003	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC90		2003	4T65AWD	DIM	Special functions	Display of DSTC message
XC90		2003	4T65AWD	DIM	Special functions	Read out programmed values
XC90		2003	4T65AWD	PDM	Sys. Info.	
XC90		2003	4T65AWD	PDM	Read code	
XC90		2003	4T65AWD	PDM	Clear code	
XC90		2003	4T65AWD	PDM	Data stream	
XC90		2003	4T65AWD	PDM	Actuation	
XC90		2003	4T65AWD	PDM	Special functions	Initialize the window(*)
XC90		2003	4T65AWD	PSM	Sys. Info.	
XC90		2003	4T65AWD	PSM	Read code	
XC90		2003	4T65AWD	PSM	Clear code	
XC90		2003	4T65AWD	PSM	Data stream	
XC90		2003	4T65AWD	PSM	Actuation	
XC90		2003	4T65AWD	DDM	Sys. Info.	
XC90		2003	4T65AWD	DDM	Read code	
XC90		2003	4T65AWD	DDM	Clear code	
XC90		2003	4T65AWD	DDM	Data stream	
XC90		2003	4T65AWD	DDM	Actuation	
XC90		2003	4T65AWD	DDM	Special functions	Initialize the window(*)
XC90		2003	4T65AWD	CCM	Sys. Info.	
XC90		2003	4T65AWD	CCM	Read code	
XC90		2003	4T65AWD	CCM	Clear code	
XC90		2003	4T65AWD	CCM	Data stream	
XC90		2003	4T65AWD	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
XC90		2003	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
XC90		2003	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90		2003	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90		2003	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
XC90		2003	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC90		2003	4T65AWD	CCM	Special functions	Programming the seat temperature

model	year	type	system	function	subfunction	
XC90		2003	4T65AWD	PHM	Sys. Info.	
XC90		2003	4T65AWD	PHM	Read code	
XC90		2003	4T65AWD	PHM	Clear code	
XC90		2003	4T65AWD	PHM	Data stream	
XC90		2003	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
XC90		2003	4T65AWD	SWM	Sys. Info.	
XC90		2003	4T65AWD	SWM	Read code	
XC90		2003	4T65AWD	SWM	Clear code	
XC90		2003	4T65AWD	SWM	Data stream	
XC90		2003	4T65AWD	AUD	Sys. Info.	
XC90		2003	4T65AWD	AUD	Read code	
XC90		2003	4T65AWD	AUD	Clear code	
XC90		2003	4T65AWD	MP2	Sys. Info.	
XC90		2003	4T65AWD	MP2	Read code	
XC90		2003	4T65AWD	MP2	Clear code	
XC90		2003	4T65AWD	MP2	Data stream	
XC90		2003	4T65AWD	MP2	Actuation	
XC90		2003	4T65AWD	ATM	Sys. Info.	
XC90		2003	4T65AWD	ATM	Read code	
XC90		2003	4T65AWD	ATM	Clear code	
XC90		2003	4T65AWD	ATM	Data stream	
XC90		2003	4T65AWD	DEM	Sys. Info.	
XC90		2003	4T65AWD	DEM	Read code	
XC90		2003	4T65AWD	DEM	Clear code	
XC90		2003	4T65AWD	DEM	Data stream	
XC90		2003	4T65AWD	ICM	Sys. Info.	
XC90		2003	4T65AWD	ICM	Read code	
XC90		2003	4T65AWD	ICM	Clear code	
XC90		2003	4T65AWD	ICM	Data stream	
XC90		2003	4T65AWD	ICM	Actuation	
XC90		2003	4T65AWD	SUB	Sys. Info.	
XC90		2003	4T65AWD	SUB	Read code	
XC90		2003	4T65AWD	SUB	Clear code	
XC90		2003	4T65AWD	SUB	Data stream	
XC90		2003	4T65AWD	SAS	Sys. Info.	
XC90		2003	4T65AWD	SAS	Read code	
XC90		2003	4T65AWD	SAS	Clear code	
XC90		2003	4T65AWD	SAS	Data stream	
XC90		2003	4T65AWD	MMM	Sys. Info.	
XC90		2003	4T65AWD	MMM	Read code	
XC90		2003	4T65AWD	MMM	Clear code	
XC90		2003	4T65AWD	MMM	Data stream	
XC90		2003	4T65AWD	AEM	Sys. Info.	
XC90		2003	4T65AWD	AEM	Read code	
XC90		2003	4T65AWD	AEM	Clear code	
XC90		2003	4T65AWD	AEM	Data stream	
XC90		2003	4T65AWD	AEM	Actuation	
XC90		2003	4T65AWD	CPM	Sys. Info.	
XC90		2003	4T65AWD	CPM	Data stream	
XC90		2003	4T65AWD	CPM	Special functions	Programming the additional and parking heater
XC90		2003	4T65AWD	ETM	Sys. Info.	
XC90		2003	4T65AWD	ETM	Data stream	
XC90		2003	4T65AWD	MP1	Sys. Info.	
XC90		2003	4T65AWD	MP1	Read code	
XC90		2003	4T65AWD	MP1	Clear code	
XC90		2003	4T65AWD	MP1	Data stream	
XC90		2003	4T65AWD	MP1	Actuation	
XC90		2004	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90		2004	B5244S	ECM	Sys. Info.	
XC90		2004	B5244S	ECM	Read code	
XC90		2004	B5244S	ECM	Clear code	
XC90		2004	B5244S	ECM	Data stream	
XC90		2004	B5244S	ECM	Actuation	
XC90		2004	B6304S3	ECM	Sys. Info.	
XC90		2004	B6304S3	ECM	Read code	
XC90		2004	B6304S3	ECM	Clear code	
XC90		2004	B6304S3	ECM	Data stream	
XC90		2004	B6304S3	ECM	Actuation	
XC90		2004	B6294T	ECM	Sys. Info.	
XC90		2004	B6294T	ECM	Read code	
XC90		2004	B6294T	ECM	Clear code	
XC90		2004	B6294T	ECM	Data stream	
XC90		2004	B6294T	ECM	Actuation	
XC90		2004	B6294T	ECM	Special functions	Resetting the adaptation values
XC90		2004	B6294T	ECM	Special functions	Quick test of Exhaust camshaft control
XC90		2004	B6294T	ECM	Special functions	Quick test of intake camshaft control
XC90		2004	B6284T	ECM	Sys. Info.	

model	year	type	system	function	subfunction	
XC90		2004	B6284T	ECM	Read code	
XC90		2004	B6284T	ECM	Clear code	
XC90		2004	B6284T	ECM	Data stream	
XC90		2004	B6284T	ECM	Actuation	
XC90		2004	B5204T4	ECM	Sys. Info.	
XC90		2004	B5204T4	ECM	Read code	
XC90		2004	B5204T4	ECM	Clear code	
XC90		2004	B5204T4	ECM	Data stream	
XC90		2004	B5204T4	ECM	Actuation	
XC90		2004	B5204T3	ECM	Sys. Info.	
XC90		2004	B5204T3	ECM	Read code	
XC90		2004	B5204T3	ECM	Clear code	
XC90		2004	B5204T3	ECM	Data stream	
XC90		2004	B5204T3	ECM	Actuation	
XC90		2004	B5244SG	ECM	Sys. Info.	
XC90		2004	B5244SG	ECM	Read code	
XC90		2004	B5244SG	ECM	Clear code	
XC90		2004	B5244SG	ECM	Data stream	
XC90		2004	B5244SG	ECM	Actuation	
XC90		2004	B6294S2	ECM	Sys. Info.	
XC90		2004	B6294S2	ECM	Read code	
XC90		2004	B6294S2	ECM	Clear code	
XC90		2004	B6294S2	ECM	Data stream	
XC90		2004	B6294S2	ECM	Actuation	
XC90		2004	B5244S2	ECM	Sys. Info.	
XC90		2004	B5244S2	ECM	Read code	
XC90		2004	B5244S2	ECM	Clear code	
XC90		2004	B5244S2	ECM	Data stream	
XC90		2004	B5244S2	ECM	Actuation	
XC90		2004	B5254T2	ECM	Sys. Info.	
XC90		2004	B5254T2	ECM	Read code	
XC90		2004	B5254T2	ECM	Clear code	
XC90		2004	B5254T2	ECM	Data stream	
XC90		2004	B5254T2	ECM	Actuation	
XC90		2004	B5254T2	ECM	Special functions	Resetting the adaptation values
XC90		2004	B5234T3	ECM	Sys. Info.	
XC90		2004	B5234T3	ECM	Read code	
XC90		2004	B5234T3	ECM	Clear code	
XC90		2004	B5234T3	ECM	Data stream	
XC90		2004	B5234T3	ECM	Actuation	
XC90		2004	B5204T5	ECM	Sys. Info.	
XC90		2004	B5204T5	ECM	Read code	
XC90		2004	B5204T5	ECM	Clear code	
XC90		2004	B5204T5	ECM	Data stream	
XC90		2004	B5204T5	ECM	Actuation	
XC90		2004	B5254T4	ECM	Sys. Info.	
XC90		2004	B5254T4	ECM	Read code	
XC90		2004	B5254T4	ECM	Clear code	
XC90		2004	B5254T4	ECM	Data stream	
XC90		2004	B5254T4	ECM	Actuation	
XC90		2004	B6294S	ECM	Sys. Info.	
XC90		2004	B6294S	ECM	Read code	
XC90		2004	B6294S	ECM	Clear code	
XC90		2004	B6294S	ECM	Data stream	
XC90		2004	B6294S	ECM	Actuation	
XC90		2004	B5244T7	ECM	Sys. Info.	
XC90		2004	B5244T7	ECM	Read code	
XC90		2004	B5244T7	ECM	Clear code	
XC90		2004	B5244T7	ECM	Data stream	
XC90		2004	B5244T7	ECM	Actuation	
XC90		2004	B5244T7	ECM	Special functions	Resetting the adaptation values
XC90		2004	B5234T7	ECM	Sys. Info.	
XC90		2004	B5234T7	ECM	Read code	
XC90		2004	B5234T7	ECM	Clear code	
XC90		2004	B5234T7	ECM	Data stream	
XC90		2004	B5234T7	ECM	Actuation	
XC90		2004	B5234T7	ECM	Special functions	Resetting the adaptation values
XC90		2004	D5244T	Diesel Eng	Sys. Info.	
XC90		2004	D5244T	Diesel Eng	Read code	
XC90		2004	D5244T	Diesel Eng	Clear code	
XC90		2004	D5244T	Diesel Eng	Data stream	
XC90		2004	D5244T	Diesel Eng	Actuation	
XC90		2004	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90		2004	D5252T	Diesel Eng	Sys. Info.	
XC90		2004	D5252T	Diesel Eng	Read code	
XC90		2004	D5252T	Diesel Eng	Clear code	
XC90		2004	D5252T	Diesel Eng	Data stream	
XC90		2004	D5252T	Diesel Eng	Actuation	

model	year	type	system	function	subfunction
XC90		2004 D5252T	Diesel Eng	Special functions	Programming the idle speed
XC90		2004 AW55-50SN	TCM	Sys. Info.	
XC90		2004 AW55-50SN	TCM	Read code	
XC90		2004 AW55-50SN	TCM	Clear code	
XC90		2004 AW55-50SN	TCM	Data stream	
XC90		2004 AW55-50SN	TCM	Actuation	
XC90		2004 AW55-50SN	TCM	Special functions	Reset adaptation to zero
XC90		2004 AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2004 4T65EV-GT	TCM	Sys. Info.	
XC90		2004 4T65EV-GT	TCM	Read code	
XC90		2004 4T65EV-GT	TCM	Clear code	
XC90		2004 4T65EV-GT	TCM	Data stream	
XC90		2004 4T65EV-GT	TCM	Actuation	
XC90		2004 4T65EV-GT	TCM	Special functions	Reset adaptation to zero
XC90		2004 4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2004 AW50-42	TCM	Sys. Info.	
XC90		2004 AW50-42	TCM	Read code	
XC90		2004 AW50-42	TCM	Clear code	
XC90		2004 AW50-42	TCM	Data stream	
XC90		2004 AW50-42	TCM	Actuation	
XC90		2004 AW50-42	TCM	Special functions	Reset adaptation to zero
XC90		2004 AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2004 AW50/51AW D	TCM	Sys. Info.	
XC90		2004 AW50/51AW D	TCM	Read code	
XC90		2004 AW50/51AW D	TCM	Clear code	
XC90		2004 AW50/51AW D	TCM	Data stream	
XC90		2004 AW50/51AW D	TCM	Actuation	
XC90		2004 AW50/51AW D	TCM	Special functions	Reset adaptation to zero
XC90		2004 AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2004 TF-80SC	TCM	Sys. Info.	
XC90		2004 TF-80SC	TCM	Read code	
XC90		2004 TF-80SC	TCM	Clear code	
XC90		2004 TF-80SC	TCM	Data stream	
XC90		2004 TF-80SC	TCM	Actuation	
XC90		2004 TF-80SC	TCM	Special functions	Resetting the adaptation
XC90		2004 TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
XC90		2004 4T65EV	TCM	Sys. Info.	
XC90		2004 4T65EV	TCM	Read code	
XC90		2004 4T65EV	TCM	Clear code	
XC90		2004 4T65EV	TCM	Data stream	
XC90		2004 4T65EV	TCM	Actuation	
XC90		2004 4T65AWD	TCM	Sys. Info.	
XC90		2004 4T65AWD	TCM	Read code	
XC90		2004 4T65AWD	TCM	Clear code	
XC90		2004 4T65AWD	TCM	Data stream	
XC90		2004 4T65AWD	TCM	Actuation	
XC90		2004 4T65AWD	TCM	Special functions	Reset adaptation to zero
XC90		2004 4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2004 4T65AWD	TCM	Special functions	Activating gear indication
XC90		2004 4T65AWD	ABS	Sys. Info.	
XC90		2004 4T65AWD	ABS	Read code	
XC90		2004 4T65AWD	ABS	Clear code	
XC90		2004 4T65AWD	ABS	Data stream	
XC90		2004 4T65AWD	ABS	Actuation	
XC90		2004 4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
XC90		2004 4T65AWD	ABS	Special functions	Calibration
XC90		2004 4T65AWD	SRS	Sys. Info.	
XC90		2004 4T65AWD	SRS	Read code	
XC90		2004 4T65AWD	SRS	Clear code	
XC90		2004 4T65AWD	SRS	Data stream	
XC90		2004 4T65AWD	SRS	Freeze frame	
XC90		2004 4T65AWD	CEM	Sys. Info.	
XC90		2004 4T65AWD	CEM	Read code	
XC90		2004 4T65AWD	CEM	Clear code	
XC90		2004 4T65AWD	CEM	Data stream	
XC90		2004 4T65AWD	CEM	Actuation	
XC90		2004 4T65AWD	CEM	Special functions	Reading alarm cause(*)
XC90		2004 4T65AWD	CEM	Special functions	Resetting the factory settings
XC90		2004 4T65AWD	UEM	Sys. Info.	
XC90		2004 4T65AWD	UEM	Read code	
XC90		2004 4T65AWD	UEM	Clear code	

model	year	type	system	function	subfunction	
XC90		2004	4T65AWD	UEM	Data stream	
XC90		2004	4T65AWD	UEM	Actuation	
XC90		2004	4T65AWD	UEM	Special functions	Configuration of the siren
XC90		2004	4T65AWD	UEM	Special functions	Programming the control unit
XC90		2004	4T65AWD	UEM	Special functions	Reading the programmed values
XC90		2004	4T65AWD	REM	Sys. Info.	
XC90		2004	4T65AWD	REM	Read code	
XC90		2004	4T65AWD	REM	Clear code	
XC90		2004	4T65AWD	REM	Data stream	
XC90		2004	4T65AWD	REM	Actuation	
XC90		2004	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90		2004	4T65AWD	DIM	Sys. Info.	
XC90		2004	4T65AWD	DIM	Read code	
XC90		2004	4T65AWD	DIM	Clear code	
XC90		2004	4T65AWD	DIM	Data stream	
XC90		2004	4T65AWD	DIM	Actuation	
XC90		2004	4T65AWD	DIM	Freeze frame	
XC90		2004	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90		2004	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90		2004	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
XC90		2004	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
XC90		2004	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
XC90		2004	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
XC90		2004	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
XC90		2004	4T65AWD	DIM	Special functions	Programming of clock (*)
XC90		2004	4T65AWD	DIM	Special functions	Programming of zeros (*)
XC90		2004	4T65AWD	DIM	Special functions	Programming parking brake warning
XC90		2004	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90		2004	4T65AWD	DIM	Special functions	Programming instrument lighting
XC90		2004	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC90		2004	4T65AWD	DIM	Special functions	Display of DSTC message
XC90		2004	4T65AWD	DIM	Special functions	Read out programmed values
XC90		2004	4T65AWD	PDM	Sys. Info.	
XC90		2004	4T65AWD	PDM	Read code	
XC90		2004	4T65AWD	PDM	Clear code	
XC90		2004	4T65AWD	PDM	Data stream	
XC90		2004	4T65AWD	PDM	Actuation	
XC90		2004	4T65AWD	PDM	Special functions	Initialize the window(*)
XC90		2004	4T65AWD	PSM	Sys. Info.	
XC90		2004	4T65AWD	PSM	Read code	
XC90		2004	4T65AWD	PSM	Clear code	
XC90		2004	4T65AWD	PSM	Data stream	
XC90		2004	4T65AWD	PSM	Actuation	
XC90		2004	4T65AWD	DDM	Sys. Info.	
XC90		2004	4T65AWD	DDM	Read code	
XC90		2004	4T65AWD	DDM	Clear code	
XC90		2004	4T65AWD	DDM	Data stream	
XC90		2004	4T65AWD	DDM	Actuation	
XC90		2004	4T65AWD	DDM	Special functions	Initialize the window(*)
XC90		2004	4T65AWD	CCM	Sys. Info.	
XC90		2004	4T65AWD	CCM	Read code	
XC90		2004	4T65AWD	CCM	Clear code	
XC90		2004	4T65AWD	CCM	Data stream	
XC90		2004	4T65AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
XC90		2004	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
XC90		2004	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90		2004	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90		2004	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
XC90		2004	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC90		2004	4T65AWD	CCM	Special functions	Programming the seat temperature
XC90		2004	4T65AWD	PHM	Sys. Info.	
XC90		2004	4T65AWD	PHM	Read code	
XC90		2004	4T65AWD	PHM	Clear code	
XC90		2004	4T65AWD	PHM	Data stream	
XC90		2004	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
XC90		2004	4T65AWD	SWM	Sys. Info.	
XC90		2004	4T65AWD	SWM	Read code	
XC90		2004	4T65AWD	SWM	Clear code	
XC90		2004	4T65AWD	SWM	Data stream	
XC90		2004	4T65AWD	AUD	Sys. Info.	
XC90		2004	4T65AWD	AUD	Read code	
XC90		2004	4T65AWD	AUD	Clear code	
XC90		2004	4T65AWD	MP2	Sys. Info.	
XC90		2004	4T65AWD	MP2	Read code	
XC90		2004	4T65AWD	MP2	Clear code	



model	year	type	system	function	subfunction	
XC90		2004	4T65AWD	MP2	Data stream	
XC90		2004	4T65AWD	MP2	Actuation	
XC90		2004	4T65AWD	ATM	Sys. Info.	
XC90		2004	4T65AWD	ATM	Read code	
XC90		2004	4T65AWD	ATM	Clear code	
XC90		2004	4T65AWD	ATM	Data stream	
XC90		2004	4T65AWD	DEM	Sys. Info.	
XC90		2004	4T65AWD	DEM	Read code	
XC90		2004	4T65AWD	DEM	Clear code	
XC90		2004	4T65AWD	DEM	Data stream	
XC90		2004	4T65AWD	ICM	Sys. Info.	
XC90		2004	4T65AWD	ICM	Read code	
XC90		2004	4T65AWD	ICM	Clear code	
XC90		2004	4T65AWD	ICM	Data stream	
XC90		2004	4T65AWD	ICM	Actuation	
XC90		2004	4T65AWD	SAS	Sys. Info.	
XC90		2004	4T65AWD	SAS	Read code	
XC90		2004	4T65AWD	SAS	Clear code	
XC90		2004	4T65AWD	SAS	Data stream	
XC90		2004	4T65AWD	MMM	Sys. Info.	
XC90		2004	4T65AWD	MMM	Read code	
XC90		2004	4T65AWD	MMM	Clear code	
XC90		2004	4T65AWD	MMM	Data stream	
XC90		2004	4T65AWD	AEM	Sys. Info.	
XC90		2004	4T65AWD	AEM	Read code	
XC90		2004	4T65AWD	AEM	Clear code	
XC90		2004	4T65AWD	AEM	Data stream	
XC90		2004	4T65AWD	AEM	Actuation	
XC90		2004	4T65AWD	CPM	Sys. Info.	
XC90		2004	4T65AWD	CPM	Data stream	
XC90		2004	4T65AWD	CPM	Special functions	Programming the additional and parking heater
XC90		2004	4T65AWD	ETM	Sys. Info.	
XC90		2004	4T65AWD	ETM	Data stream	
XC90		2004	4T65AWD	MP1	Sys. Info.	
XC90		2004	4T65AWD	MP1	Read code	
XC90		2004	4T65AWD	MP1	Clear code	
XC90		2004	4T65AWD	MP1	Data stream	
XC90		2004	4T65AWD	MP1	Actuation	
XC90		2005	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90		2005	B5244S4	ECM	Sys. Info.	
XC90		2005	B5244S4	ECM	Read code	
XC90		2005	B5244S4	ECM	Clear code	
XC90		2005	B5244S4	ECM	Data stream	
XC90		2005	B5244S4	ECM	Actuation	
XC90		2005	B5244S4	ECM	Special functions	Resetting the adaptation values
XC90		2005	B5244S5	ECM	Sys. Info.	
XC90		2005	B5244S5	ECM	Read code	
XC90		2005	B5244S5	ECM	Clear code	
XC90		2005	B5244S5	ECM	Data stream	
XC90		2005	B5244S5	ECM	Actuation	
XC90		2005	B5244S5	ECM	Special functions	Resetting the adaptation values
XC90		2005	B5244S7	ECM	Sys. Info.	
XC90		2005	B5244S7	ECM	Read code	
XC90		2005	B5244S7	ECM	Clear code	
XC90		2005	B5244S7	ECM	Data stream	
XC90		2005	B5244S7	ECM	Actuation	
XC90		2005	B4204S3	ECM	Sys. Info.	
XC90		2005	B4204S3	ECM	Read code	
XC90		2005	B4204S3	ECM	Clear code	
XC90		2005	B4204S3	ECM	Data stream	
XC90		2005	B4204S3	ECM	Actuation	
XC90		2005	B5254T2	ECM	Sys. Info.	
XC90		2005	B5254T2	ECM	Read code	
XC90		2005	B5254T2	ECM	Clear code	
XC90		2005	B5254T2	ECM	Data stream	
XC90		2005	B5254T2	ECM	Actuation	
XC90		2005	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2005	B5254T3	ECM	Sys. Info.	
XC90		2005	B5254T3	ECM	Read code	
XC90		2005	B5254T3	ECM	Clear code	
XC90		2005	B5254T3	ECM	Data stream	
XC90		2005	B5254T3	ECM	Actuation	
XC90		2005	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2005	B5254T7	ECM	Sys. Info.	
XC90		2005	B5254T7	ECM	Read code	
XC90		2005	B5254T7	ECM	Clear code	
XC90		2005	B5254T7	ECM	Data stream	

model	year	type	system	function	subfunction
XC90		2005 B5254T7	ECM	Actuation	
XC90		2005 B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2005 B5204T5	ECM	Sys. Info.	
XC90		2005 B5204T5	ECM	Read code	
XC90		2005 B5204T5	ECM	Clear code	
XC90		2005 B5204T5	ECM	Data stream	
XC90		2005 B5204T5	ECM	Actuation	
XC90		2005 B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2005 B6294T	ECM	Sys. Info.	
XC90		2005 B6294T	ECM	Read code	
XC90		2005 B6294T	ECM	Clear code	
XC90		2005 B6294T	ECM	Data stream	
XC90		2005 B6294T	ECM	Actuation	
XC90		2005 B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2005 B4164S3	ECM	Sys. Info.	
XC90		2005 B4164S3	ECM	Read code	
XC90		2005 B4164S3	ECM	Clear code	
XC90		2005 B4164S3	ECM	Data stream	
XC90		2005 B4164S3	ECM	Actuation	
XC90		2005 B4164S3	ECM	Special functions	Resetting the adaptation values
XC90		2005 B5244T5	ECM	Sys. Info.	
XC90		2005 B5244T5	ECM	Read code	
XC90		2005 B5244T5	ECM	Clear code	
XC90		2005 B5244T5	ECM	Data stream	
XC90		2005 B5244T5	ECM	Actuation	
XC90		2005 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2005 B4184S11	ECM	Sys. Info.	
XC90		2005 B4184S11	ECM	Read code	
XC90		2005 B4184S11	ECM	Clear code	
XC90		2005 B4184S11	ECM	Data stream	
XC90		2005 B4184S11	ECM	Actuation	
XC90		2005 B4184S11	ECM	Special functions	Resetting the adaptation values
XC90		2005 D5244T	Diesel Eng	Sys. Info.	
XC90		2005 D5244T	Diesel Eng	Read code	
XC90		2005 D5244T	Diesel Eng	Clear code	
XC90		2005 D5244T	Diesel Eng	Data stream	
XC90		2005 D5244T	Diesel Eng	Actuation	
XC90		2005 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90		2005 D5244T4	Diesel Eng	Sys. Info.	
XC90		2005 D5244T4	Diesel Eng	Read code	
XC90		2005 D5244T4	Diesel Eng	Clear code	
XC90		2005 D5244T4	Diesel Eng	Data stream	
XC90		2005 D5244T4	Diesel Eng	Actuation	
XC90		2005 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
XC90		2005 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90		2005 D5244T4	Diesel Eng	Special functions	Resetting counter oil
XC90		2005 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
XC90		2005 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90		2005 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90		2005 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90		2005 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90		2005 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
XC90		2005 D5244T5	Diesel Eng	Sys. Info.	
XC90		2005 D5244T5	Diesel Eng	Read code	
XC90		2005 D5244T5	Diesel Eng	Clear code	
XC90		2005 D5244T5	Diesel Eng	Data stream	
XC90		2005 D5244T5	Diesel Eng	Actuation	
XC90		2005 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
XC90		2005 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90		2005 D5244T5	Diesel Eng	Special functions	Resetting counter oil
XC90		2005 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
XC90		2005 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90		2005 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90		2005 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90		2005 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90		2005 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
XC90		2005 D5244T8	Diesel Eng	Sys. Info.	
XC90		2005 D5244T8	Diesel Eng	Read code	
XC90		2005 D5244T8	Diesel Eng	Clear code	
XC90		2005 D5244T8	Diesel Eng	Data stream	
XC90		2005 D5244T8	Diesel Eng	Actuation	
XC90		2005 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
XC90		2005 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90		2005 D5244T8	Diesel Eng	Special functions	Resetting counter oil
XC90		2005 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
XC90		2005 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90		2005 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90		2005 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor

model	year	type	system	function	subfunction
XC90	2005	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2005	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
XC90	2005	D4164T	Diesel Eng	Sys. Info.	
XC90	2005	D4164T	Diesel Eng	Read code	
XC90	2005	D4164T	Diesel Eng	Clear code	
XC90	2005	D4164T	Diesel Eng	Data stream	
XC90	2005	D4164T	Diesel Eng	Actuation	
XC90	2005	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90	2005	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90	2005	D4164T	Diesel Eng	Special functions	Combustion of soot particles
XC90	2005	D4204T	Diesel Eng	Sys. Info.	
XC90	2005	D4204T	Diesel Eng	Read code	
XC90	2005	D4204T	Diesel Eng	Clear code	
XC90	2005	D4204T	Diesel Eng	Data stream	
XC90	2005	D4204T	Diesel Eng	Actuation	
XC90	2005	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90	2005	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
XC90	2005	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90	2005	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90	2005	D4204T	Diesel Eng	Special functions	Combustion of soot particles
XC90	2005	AW55-50/51SN	TCM	Sys. Info.	
XC90	2005	AW55-50/51SN	TCM	Read code	
XC90	2005	AW55-50/51SN	TCM	Clear code	
XC90	2005	AW55-50/51SN	TCM	Data stream	
XC90	2005	AW55-50/51SN	TCM	Actuation	
XC90	2005	AW55-50/51SN	TCM	Freeze frame	
XC90	2005	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
XC90	2005	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2005	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
XC90	2005	4T65AWD	TCM	Sys. Info.	
XC90	2005	4T65AWD	TCM	Read code	
XC90	2005	4T65AWD	TCM	Clear code	
XC90	2005	4T65AWD	TCM	Data stream	
XC90	2005	4T65AWD	TCM	Actuation	
XC90	2005	4T65AWD	TCM	Freeze frame	
XC90	2005	4T65AWD	TCM	Special functions	Reset adaptation to zero
XC90	2005	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2005	4T65AWD	TCM	Special functions	.Activating gear indication
XC90	2005	TF-80SC	TCM	Sys. Info.	
XC90	2005	TF-80SC	TCM	Read code	
XC90	2005	TF-80SC	TCM	Clear code	
XC90	2005	TF-80SC	TCM	Data stream	
XC90	2005	TF-80SC	TCM	Actuation	
XC90	2005	TF-80SC	TCM	Special functions	Reset adaptation to zero
XC90	2005	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2005	TF-80SC	TCM	Special functions	Calibration of position sensor
XC90	2005	AW50/51AW D	TCM	Sys. Info.	
XC90	2005	AW50/51AW D	TCM	Read code	
XC90	2005	AW50/51AW D	TCM	Clear code	
XC90	2005	AW50/51AW D	TCM	Data stream	
XC90	2005	AW50/51AW D	TCM	Actuation	
XC90	2005	AW50/51AW D	TCM	Freeze frame	
XC90	2005	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
XC90	2005	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2005	AW50/51AW D	ABS	Sys. Info.	
XC90	2005	AW50/51AW D	ABS	Read code	
XC90	2005	AW50/51AW D	ABS	Clear code	

model	year	type	system	function	subfunction
XC90	2005	AW50/51AW D	ABS	Data stream	
XC90	2005	AW50/51AW D	ABS	Actuation	
XC90	2005	AW50/51AW D	ABS	Freeze frame	
XC90	2005	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
XC90	2005	AW50/51AW D	ABS	Special functions	Reading off the configuration
XC90	2005	AW50/51AW D	ABS	Special functions	Calibration
XC90	2005	AW50/51AW D	SRS	Sys. Info.	
XC90	2005	AW50/51AW D	SRS	Read code	
XC90	2005	AW50/51AW D	SRS	Clear code	
XC90	2005	AW50/51AW D	SRS	Data stream	
XC90	2005	AW50/51AW D	SRS	Freeze frame	
XC90	2005	AW50/51AW D	CEM	Sys. Info.	
XC90	2005	AW50/51AW D	CEM	Read code	
XC90	2005	AW50/51AW D	CEM	Clear code	
XC90	2005	AW50/51AW D	CEM	Data stream	
XC90	2005	AW50/51AW D	CEM	Actuation	
XC90	2005	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
XC90	2005	AW50/51AW D	CEM	Special functions	Programming control module
XC90	2005	AW50/51AW D	CEM	Special functions	Resetting the factory settings
XC90	2005	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
XC90	2005	AW50/51AW D	CEM	Special functions	Resetting crash mode
XC90	2005	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
XC90	2005	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
XC90	2005	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
XC90	2005	AW50/51AW D	CEM	Special functions	Ignition switch key position
XC90	2005	AW50/51AW D	UEM	Sys. Info.	
XC90	2005	AW50/51AW D	UEM	Read code	
XC90	2005	AW50/51AW D	UEM	Clear code	
XC90	2005	AW50/51AW D	UEM	Data stream	
XC90	2005	AW50/51AW D	UEM	Actuation	
XC90	2005	AW50/51AW D	UEM	Special functions	Configuration of the siren
XC90	2005	AW50/51AW D	UEM	Special functions	Programming the control unit
XC90	2005	AW50/51AW D	UEM	Special functions	Reading the programmed values
XC90	2005	AW50/51AW D	REM	Sys. Info.	
XC90	2005	AW50/51AW D	REM	Read code	
XC90	2005	AW50/51AW D	REM	Clear code	
XC90	2005	AW50/51AW D	REM	Data stream	
XC90	2005	AW50/51AW D	REM	Actuation	
XC90	2005	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps

model	year	type	system	function	subfunction
XC90	2005	AW50/51AW D	DIM	Sys. Info.	
XC90	2005	AW50/51AW D	DIM	Read code	
XC90	2005	AW50/51AW D	DIM	Clear code	
XC90	2005	AW50/51AW D	DIM	Data stream	
XC90	2005	AW50/51AW D	DIM	Actuation	
XC90	2005	AW50/51AW D	DIM	Freeze frame	
XC90	2005	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90	2005	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90	2005	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
XC90	2005	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
XC90	2005	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
XC90	2005	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
XC90	2005	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
XC90	2005	AW50/51AW D	DIM	Special functions	Programming of clock (*)
XC90	2005	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
XC90	2005	AW50/51AW D	DIM	Special functions	Programming parking brake warning
XC90	2005	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90	2005	AW50/51AW D	DIM	Special functions	Programming instrument lighting
XC90	2005	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
XC90	2005	AW50/51AW D	DIM	Special functions	Display of DSTC message
XC90	2005	AW50/51AW D	DIM	Special functions	Read out programmed values
XC90	2005	AW50/51AW D	PDM	Sys. Info.	
XC90	2005	AW50/51AW D	PDM	Read code	
XC90	2005	AW50/51AW D	PDM	Clear code	
XC90	2005	AW50/51AW D	PDM	Data stream	
XC90	2005	AW50/51AW D	PDM	Actuation	
XC90	2005	AW50/51AW D	PDM	Special functions	Initialize the window(*)
XC90	2005	AW50/51AW D	PSM	Sys. Info.	
XC90	2005	AW50/51AW D	PSM	Read code	
XC90	2005	AW50/51AW D	PSM	Clear code	
XC90	2005	AW50/51AW D	PSM	Data stream	
XC90	2005	AW50/51AW D	PSM	Actuation	
XC90	2005	AW50/51AW D	DDM	Sys. Info.	
XC90	2005	AW50/51AW D	DDM	Read code	
XC90	2005	AW50/51AW D	DDM	Clear code	
XC90	2005	AW50/51AW D	DDM	Data stream	
XC90	2005	AW50/51AW D	DDM	Actuation	
XC90	2005	AW50/51AW D	DDM	Special functions	Initialize the window(*)
XC90	2005	AW50/51AW D	CCM	Sys. Info.	

model	year	type	system	function	subfunction
XC90	2005	AW50/51AW D	CCM	Read code	
XC90	2005	AW50/51AW D	CCM	Clear code	
XC90	2005	AW50/51AW D	CCM	Data stream	
XC90	2005	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
XC90	2005	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
XC90	2005	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90	2005	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90	2005	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
XC90	2005	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC90	2005	AW50/51AW D	CCM	Special functions	Programming the seat temperature
XC90	2005	AW50/51AW D	PHM	Sys. Info.	
XC90	2005	AW50/51AW D	PHM	Read code	
XC90	2005	AW50/51AW D	PHM	Clear code	
XC90	2005	AW50/51AW D	PHM	Data stream	
XC90	2005	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
XC90	2005	AW50/51AW D	AUD	Sys. Info.	
XC90	2005	AW50/51AW D	AUD	Read code	
XC90	2005	AW50/51AW D	AUD	Clear code	
XC90	2005	AW50/51AW D	MP2	Sys. Info.	
XC90	2005	AW50/51AW D	MP2	Read code	
XC90	2005	AW50/51AW D	MP2	Clear code	
XC90	2005	AW50/51AW D	MP2	Data stream	
XC90	2005	AW50/51AW D	MP2	Actuation	
XC90	2005	AW50/51AW D	ATM	Sys. Info.	
XC90	2005	AW50/51AW D	ATM	Read code	
XC90	2005	AW50/51AW D	ATM	Clear code	
XC90	2005	AW50/51AW D	ATM	Data stream	
XC90	2005	AW50/51AW D	DEM	Sys. Info.	
XC90	2005	AW50/51AW D	DEM	Read code	
XC90	2005	AW50/51AW D	DEM	Clear code	
XC90	2005	AW50/51AW D	DEM	Data stream	
XC90	2005	AW50/51AW D	ICM	Sys. Info.	
XC90	2005	AW50/51AW D	ICM	Read code	
XC90	2005	AW50/51AW D	ICM	Clear code	
XC90	2005	AW50/51AW D	ICM	Data stream	
XC90	2005	AW50/51AW D	ICM	Actuation	
XC90	2005	AW50/51AW D	SAS	Sys. Info.	
XC90	2005	AW50/51AW D	SAS	Read code	
XC90	2005	AW50/51AW D	SAS	Clear code	

model	year	type	system	function	subfunction
XC90	2005	AW50/51AW D	SAS	Data stream	
XC90	2005	AW50/51AW D	MMM	Sys. Info.	
XC90	2005	AW50/51AW D	MMM	Read code	
XC90	2005	AW50/51AW D	MMM	Clear code	
XC90	2005	AW50/51AW D	MMM	Data stream	
XC90	2005	AW50/51AW D	AEM	Sys. Info.	
XC90	2005	AW50/51AW D	AEM	Read code	
XC90	2005	AW50/51AW D	AEM	Clear code	
XC90	2005	AW50/51AW D	AEM	Data stream	
XC90	2005	AW50/51AW D	AEM	Actuation	
XC90	2005	AW50/51AW D	CPM	Sys. Info.	
XC90	2005	AW50/51AW D	CPM	Data stream	
XC90	2005	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
XC90	2005	AW50/51AW D	MP1	Sys. Info.	
XC90	2005	AW50/51AW D	MP1	Read code	
XC90	2005	AW50/51AW D	MP1	Clear code	
XC90	2005	AW50/51AW D	MP1	Data stream	
XC90	2005	AW50/51AW D	MP1	Actuation	
XC90	2005	AW50/51AW D	HCM	Sys. Info.	
XC90	2005	AW50/51AW D	HCM	Read code	
XC90	2005	AW50/51AW D	HCM	Clear code	
XC90	2005	AW50/51AW D	HCM	Special functions	Calibration of position sensor
XC90	2005	AW50/51AW D	KVM	Sys. Info.	
XC90	2005	AW50/51AW D	KVM	Read code	
XC90	2005	AW50/51AW D	KVM	Clear code	
XC90	2005	AW50/51AW D	KVM	Data stream	
XC90	2005	AW50/51AW D	KVM	Actuation	
XC90	2005	AW50/51AW D	RDAR	Sys. Info.	
XC90	2005	AW50/51AW D	RDAR	Read code	
XC90	2005	AW50/51AW D	RDAR	Clear code	
XC90	2005	AW50/51AW D	RDAR	Data stream	
XC90	2005	AW50/51AW D	SUB	Sys. Info.	
XC90	2005	AW50/51AW D	SUB	Read code	
XC90	2005	AW50/51AW D	SUB	Clear code	
XC90	2005	AW50/51AW D	SUB	Data stream	
XC90	2005	AW50/51AW D	CVM	Sys. Info.	
XC90	2005	AW50/51AW D	CVM	Read code	
XC90	2005	AW50/51AW D	CVM	Clear code	
XC90	2005	AW50/51AW D	CVM	Data stream	

model	year	type	system	function	subfunction
XC90	2005	AW50/51AW D	DABM	Sys. Info.	
XC90	2005	AW50/51AW D	DABM	Read code	
XC90	2005	AW50/51AW D	DABM	Clear code	
XC90	2005	AW50/51AW D	DABM	Data stream	
XC90	2005	AW50/51AW D	PAC	Sys. Info.	
XC90	2005	AW50/51AW D	PAC	Read code	
XC90	2005	AW50/51AW D	PAC	Clear code	
XC90	2005	AW50/51AW D	PAC	Data stream	
XC90	2005	AW50/51AW D	TRM	Sys. Info.	
XC90	2005	AW50/51AW D	TRM	Read code	
XC90	2005	AW50/51AW D	TRM	Clear code	
XC90	2005	AW50/51AW D	TRM	Data stream	
XC90	2006	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90	2006	B5244S4	ECM	Sys. Info.	
XC90	2006	B5244S4	ECM	Read code	
XC90	2006	B5244S4	ECM	Clear code	
XC90	2006	B5244S4	ECM	Data stream	
XC90	2006	B5244S4	ECM	Actuation	
XC90	2006	B5244S4	ECM	Special functions	Resetting the adaptation values
XC90	2006	B5244S5	ECM	Sys. Info.	
XC90	2006	B5244S5	ECM	Read code	
XC90	2006	B5244S5	ECM	Clear code	
XC90	2006	B5244S5	ECM	Data stream	
XC90	2006	B5244S5	ECM	Actuation	
XC90	2006	B5244S5	ECM	Special functions	Resetting the adaptation values
XC90	2006	B5244S7	ECM	Sys. Info.	
XC90	2006	B5244S7	ECM	Read code	
XC90	2006	B5244S7	ECM	Clear code	
XC90	2006	B5244S7	ECM	Data stream	
XC90	2006	B5244S7	ECM	Actuation	
XC90	2006	B4204S3	ECM	Sys. Info.	
XC90	2006	B4204S3	ECM	Read code	
XC90	2006	B4204S3	ECM	Clear code	
XC90	2006	B4204S3	ECM	Data stream	
XC90	2006	B4204S3	ECM	Actuation	
XC90	2006	B5254T2	ECM	Sys. Info.	
XC90	2006	B5254T2	ECM	Read code	
XC90	2006	B5254T2	ECM	Clear code	
XC90	2006	B5254T2	ECM	Data stream	
XC90	2006	B5254T2	ECM	Actuation	
XC90	2006	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2006	B5254T3	ECM	Sys. Info.	
XC90	2006	B5254T3	ECM	Read code	
XC90	2006	B5254T3	ECM	Clear code	
XC90	2006	B5254T3	ECM	Data stream	
XC90	2006	B5254T3	ECM	Actuation	
XC90	2006	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2006	B5254T7	ECM	Sys. Info.	
XC90	2006	B5254T7	ECM	Read code	
XC90	2006	B5254T7	ECM	Clear code	
XC90	2006	B5254T7	ECM	Data stream	
XC90	2006	B5254T7	ECM	Actuation	
XC90	2006	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2006	B5204T5	ECM	Sys. Info.	
XC90	2006	B5204T5	ECM	Read code	
XC90	2006	B5204T5	ECM	Clear code	
XC90	2006	B5204T5	ECM	Data stream	
XC90	2006	B5204T5	ECM	Actuation	
XC90	2006	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2006	B6294T	ECM	Sys. Info.	
XC90	2006	B6294T	ECM	Read code	
XC90	2006	B6294T	ECM	Clear code	
XC90	2006	B6294T	ECM	Data stream	
XC90	2006	B6294T	ECM	Actuation	
XC90	2006	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)



model	year	type	system	function	subfunction
XC90		2006 B4164S3	ECM	Sys. Info.	
XC90		2006 B4164S3	ECM	Read code	
XC90		2006 B4164S3	ECM	Clear code	
XC90		2006 B4164S3	ECM	Data stream	
XC90		2006 B4164S3	ECM	Actuation	
XC90		2006 B4164S3	ECM	Special functions	Resetting the adaptation values
XC90		2006 B5244T5	ECM	Sys. Info.	
XC90		2006 B5244T5	ECM	Read code	
XC90		2006 B5244T5	ECM	Clear code	
XC90		2006 B5244T5	ECM	Data stream	
XC90		2006 B5244T5	ECM	Actuation	
XC90		2006 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2006 B4184S11	ECM	Sys. Info.	
XC90		2006 B4184S11	ECM	Read code	
XC90		2006 B4184S11	ECM	Clear code	
XC90		2006 B4184S11	ECM	Data stream	
XC90		2006 B4184S11	ECM	Actuation	
XC90		2006 B4184S11	ECM	Special functions	Resetting the adaptation values
XC90		2006 D5244T	Diesel Eng	Sys. Info.	
XC90		2006 D5244T	Diesel Eng	Read code	
XC90		2006 D5244T	Diesel Eng	Clear code	
XC90		2006 D5244T	Diesel Eng	Data stream	
XC90		2006 D5244T	Diesel Eng	Actuation	
XC90		2006 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90		2006 D5244T4	Diesel Eng	Sys. Info.	
XC90		2006 D5244T4	Diesel Eng	Read code	
XC90		2006 D5244T4	Diesel Eng	Clear code	
XC90		2006 D5244T4	Diesel Eng	Data stream	
XC90		2006 D5244T4	Diesel Eng	Actuation	
XC90		2006 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
XC90		2006 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90		2006 D5244T4	Diesel Eng	Special functions	Resetting counter oil
XC90		2006 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
XC90		2006 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90		2006 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90		2006 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90		2006 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90		2006 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
XC90		2006 D5244T5	Diesel Eng	Sys. Info.	
XC90		2006 D5244T5	Diesel Eng	Read code	
XC90		2006 D5244T5	Diesel Eng	Clear code	
XC90		2006 D5244T5	Diesel Eng	Data stream	
XC90		2006 D5244T5	Diesel Eng	Actuation	
XC90		2006 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
XC90		2006 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90		2006 D5244T5	Diesel Eng	Special functions	Resetting counter oil
XC90		2006 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
XC90		2006 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90		2006 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90		2006 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90		2006 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90		2006 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
XC90		2006 D5244T8	Diesel Eng	Sys. Info.	
XC90		2006 D5244T8	Diesel Eng	Read code	
XC90		2006 D5244T8	Diesel Eng	Clear code	
XC90		2006 D5244T8	Diesel Eng	Data stream	
XC90		2006 D5244T8	Diesel Eng	Actuation	
XC90		2006 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
XC90		2006 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90		2006 D5244T8	Diesel Eng	Special functions	Resetting counter oil
XC90		2006 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
XC90		2006 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90		2006 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90		2006 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90		2006 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90		2006 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
XC90		2006 D4164T	Diesel Eng	Sys. Info.	
XC90		2006 D4164T	Diesel Eng	Read code	
XC90		2006 D4164T	Diesel Eng	Clear code	
XC90		2006 D4164T	Diesel Eng	Data stream	
XC90		2006 D4164T	Diesel Eng	Actuation	
XC90		2006 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90		2006 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90		2006 D4164T	Diesel Eng	Special functions	Combustion of soot particles
XC90		2006 D4204T	Diesel Eng	Sys. Info.	
XC90		2006 D4204T	Diesel Eng	Read code	
XC90		2006 D4204T	Diesel Eng	Clear code	
XC90		2006 D4204T	Diesel Eng	Data stream	

model	year	type	system	function	subfunction
XC90	2006	D4204T	Diesel Eng	Actuation	
XC90	2006	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90	2006	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
XC90	2006	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90	2006	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90	2006	D4204T	Diesel Eng	Special functions	Combustion of soot particles
XC90	2006	AW55-50/51SN	TCM	Sys. Info.	
XC90	2006	AW55-50/51SN	TCM	Read code	
XC90	2006	AW55-50/51SN	TCM	Clear code	
XC90	2006	AW55-50/51SN	TCM	Data stream	
XC90	2006	AW55-50/51SN	TCM	Actuation	
XC90	2006	AW55-50/51SN	TCM	Freeze frame	
XC90	2006	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
XC90	2006	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2006	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
XC90	2006	4T65AWD	TCM	Sys. Info.	
XC90	2006	4T65AWD	TCM	Read code	
XC90	2006	4T65AWD	TCM	Clear code	
XC90	2006	4T65AWD	TCM	Data stream	
XC90	2006	4T65AWD	TCM	Actuation	
XC90	2006	4T65AWD	TCM	Freeze frame	
XC90	2006	4T65AWD	TCM	Special functions	Reset adaptation to zero
XC90	2006	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2006	TF-80SC	TCM	Sys. Info.	
XC90	2006	TF-80SC	TCM	Read code	
XC90	2006	TF-80SC	TCM	Clear code	
XC90	2006	TF-80SC	TCM	Data stream	
XC90	2006	TF-80SC	TCM	Actuation	
XC90	2006	TF-80SC	TCM	Special functions	Reset adaptation to zero
XC90	2006	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2006	TF-80SC	TCM	Special functions	Calibration of position sensor
XC90	2006	AW50/51AW D	TCM	Sys. Info.	
XC90	2006	AW50/51AW D	TCM	Read code	
XC90	2006	AW50/51AW D	TCM	Clear code	
XC90	2006	AW50/51AW D	TCM	Data stream	
XC90	2006	AW50/51AW D	TCM	Actuation	
XC90	2006	AW50/51AW D	TCM	Freeze frame	
XC90	2006	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
XC90	2006	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2006	AW50/51AW D	ABS	Sys. Info.	
XC90	2006	AW50/51AW D	ABS	Read code	
XC90	2006	AW50/51AW D	ABS	Clear code	
XC90	2006	AW50/51AW D	ABS	Data stream	
XC90	2006	AW50/51AW D	ABS	Actuation	
XC90	2006	AW50/51AW D	ABS	Freeze frame	
XC90	2006	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
XC90	2006	AW50/51AW D	ABS	Special functions	Reading off the configuration
XC90	2006	AW50/51AW D	ABS	Special functions	Calibration
XC90	2006	AW50/51AW D	SRS	Sys. Info.	
XC90	2006	AW50/51AW D	SRS	Read code	

model	year	type	system	function	subfunction
XC90	2006	AW50/51AW D	SRS	Clear code	
XC90	2006	AW50/51AW D	SRS	Data stream	
XC90	2006	AW50/51AW D	SRS	Freeze frame	
XC90	2006	AW50/51AW D	CEM	Sys. Info.	
XC90	2006	AW50/51AW D	CEM	Read code	
XC90	2006	AW50/51AW D	CEM	Clear code	
XC90	2006	AW50/51AW D	CEM	Data stream	
XC90	2006	AW50/51AW D	CEM	Actuation	
XC90	2006	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
XC90	2006	AW50/51AW D	CEM	Special functions	Programming control module
XC90	2006	AW50/51AW D	CEM	Special functions	Resetting the factory settings
XC90	2006	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
XC90	2006	AW50/51AW D	CEM	Special functions	Resetting crash mode
XC90	2006	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
XC90	2006	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
XC90	2006	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
XC90	2006	AW50/51AW D	CEM	Special functions	Ignition switch key position
XC90	2006	AW50/51AW D	UEM	Sys. Info.	
XC90	2006	AW50/51AW D	UEM	Read code	
XC90	2006	AW50/51AW D	UEM	Clear code	
XC90	2006	AW50/51AW D	UEM	Data stream	
XC90	2006	AW50/51AW D	UEM	Actuation	
XC90	2006	AW50/51AW D	UEM	Special functions	Configuration of the siren
XC90	2006	AW50/51AW D	UEM	Special functions	Programming the control unit
XC90	2006	AW50/51AW D	UEM	Special functions	Reading the programmed values
XC90	2006	AW50/51AW D	REM	Sys. Info.	
XC90	2006	AW50/51AW D	REM	Read code	
XC90	2006	AW50/51AW D	REM	Clear code	
XC90	2006	AW50/51AW D	REM	Data stream	
XC90	2006	AW50/51AW D	REM	Actuation	
XC90	2006	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90	2006	AW50/51AW D	DIM	Sys. Info.	
XC90	2006	AW50/51AW D	DIM	Read code	
XC90	2006	AW50/51AW D	DIM	Clear code	
XC90	2006	AW50/51AW D	DIM	Data stream	
XC90	2006	AW50/51AW D	DIM	Actuation	
XC90	2006	AW50/51AW D	DIM	Freeze frame	
XC90	2006	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90	2006	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)

model	year	type	system	function	subfunction
XC90	2006	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
XC90	2006	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
XC90	2006	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
XC90	2006	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
XC90	2006	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
XC90	2006	AW50/51AW D	DIM	Special functions	Programming of clock (*)
XC90	2006	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
XC90	2006	AW50/51AW D	DIM	Special functions	Programming parking brake warning
XC90	2006	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90	2006	AW50/51AW D	DIM	Special functions	Programming instrument lighting
XC90	2006	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
XC90	2006	AW50/51AW D	DIM	Special functions	Display of DSTC message
XC90	2006	AW50/51AW D	DIM	Special functions	Read out programmed values
XC90	2006	AW50/51AW D	PDM	Sys. Info.	
XC90	2006	AW50/51AW D	PDM	Read code	
XC90	2006	AW50/51AW D	PDM	Clear code	
XC90	2006	AW50/51AW D	PDM	Data stream	
XC90	2006	AW50/51AW D	PDM	Actuation	
XC90	2006	AW50/51AW D	PDM	Special functions	Initialize the window(*)
XC90	2006	AW50/51AW D	PSM	Sys. Info.	
XC90	2006	AW50/51AW D	PSM	Read code	
XC90	2006	AW50/51AW D	PSM	Clear code	
XC90	2006	AW50/51AW D	PSM	Data stream	
XC90	2006	AW50/51AW D	PSM	Actuation	
XC90	2006	AW50/51AW D	DDM	Sys. Info.	
XC90	2006	AW50/51AW D	DDM	Read code	
XC90	2006	AW50/51AW D	DDM	Clear code	
XC90	2006	AW50/51AW D	DDM	Data stream	
XC90	2006	AW50/51AW D	DDM	Actuation	
XC90	2006	AW50/51AW D	DDM	Special functions	Initialize the window(*)
XC90	2006	AW50/51AW D	CCM	Sys. Info.	
XC90	2006	AW50/51AW D	CCM	Read code	
XC90	2006	AW50/51AW D	CCM	Clear code	
XC90	2006	AW50/51AW D	CCM	Data stream	
XC90	2006	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
XC90	2006	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
XC90	2006	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90	2006	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90	2006	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)

model	year	type	system	function	subfunction
XC90	2006	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
XC90	2006	AW50/51AW D	CCM	Special functions	Programming the seat temperature
XC90	2006	AW50/51AW D	PHM	Sys. Info.	
XC90	2006	AW50/51AW D	PHM	Read code	
XC90	2006	AW50/51AW D	PHM	Clear code	
XC90	2006	AW50/51AW D	PHM	Data stream	
XC90	2006	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
XC90	2006	AW50/51AW D	AUD	Sys. Info.	
XC90	2006	AW50/51AW D	AUD	Read code	
XC90	2006	AW50/51AW D	AUD	Clear code	
XC90	2006	AW50/51AW D	MP2	Sys. Info.	
XC90	2006	AW50/51AW D	MP2	Read code	
XC90	2006	AW50/51AW D	MP2	Clear code	
XC90	2006	AW50/51AW D	MP2	Data stream	
XC90	2006	AW50/51AW D	MP2	Actuation	
XC90	2006	AW50/51AW D	ATM	Sys. Info.	
XC90	2006	AW50/51AW D	ATM	Read code	
XC90	2006	AW50/51AW D	ATM	Clear code	
XC90	2006	AW50/51AW D	ATM	Data stream	
XC90	2006	AW50/51AW D	DEM	Sys. Info.	
XC90	2006	AW50/51AW D	DEM	Read code	
XC90	2006	AW50/51AW D	DEM	Clear code	
XC90	2006	AW50/51AW D	DEM	Data stream	
XC90	2006	AW50/51AW D	ICM	Sys. Info.	
XC90	2006	AW50/51AW D	ICM	Read code	
XC90	2006	AW50/51AW D	ICM	Clear code	
XC90	2006	AW50/51AW D	ICM	Data stream	
XC90	2006	AW50/51AW D	ICM	Actuation	
XC90	2006	AW50/51AW D	SAS	Sys. Info.	
XC90	2006	AW50/51AW D	SAS	Read code	
XC90	2006	AW50/51AW D	SAS	Clear code	
XC90	2006	AW50/51AW D	SAS	Data stream	
XC90	2006	AW50/51AW D	MMM	Sys. Info.	
XC90	2006	AW50/51AW D	MMM	Read code	
XC90	2006	AW50/51AW D	MMM	Clear code	
XC90	2006	AW50/51AW D	MMM	Data stream	
XC90	2006	AW50/51AW D	AEM	Sys. Info.	
XC90	2006	AW50/51AW D	AEM	Read code	
XC90	2006	AW50/51AW D	AEM	Clear code	

model	year	type	system	function	subfunction
XC90	2006	AW50/51AW D	AEM	Data stream	
XC90	2006	AW50/51AW D	AEM	Actuation	
XC90	2006	AW50/51AW D	CPM	Sys. Info.	
XC90	2006	AW50/51AW D	CPM	Data stream	
XC90	2006	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
XC90	2006	AW50/51AW D	MP1	Sys. Info.	
XC90	2006	AW50/51AW D	MP1	Read code	
XC90	2006	AW50/51AW D	MP1	Clear code	
XC90	2006	AW50/51AW D	MP1	Data stream	
XC90	2006	AW50/51AW D	MP1	Actuation	
XC90	2006	AW50/51AW D	HCM	Sys. Info.	
XC90	2006	AW50/51AW D	HCM	Read code	
XC90	2006	AW50/51AW D	HCM	Clear code	
XC90	2006	AW50/51AW D	HCM	Special functions	Calibration of position sensor
XC90	2006	AW50/51AW D	KVM	Sys. Info.	
XC90	2006	AW50/51AW D	KVM	Read code	
XC90	2006	AW50/51AW D	KVM	Clear code	
XC90	2006	AW50/51AW D	KVM	Data stream	
XC90	2006	AW50/51AW D	KVM	Actuation	
XC90	2006	AW50/51AW D	RDAR	Sys. Info.	
XC90	2006	AW50/51AW D	RDAR	Read code	
XC90	2006	AW50/51AW D	RDAR	Clear code	
XC90	2006	AW50/51AW D	RDAR	Data stream	
XC90	2006	AW50/51AW D	SUB	Sys. Info.	
XC90	2006	AW50/51AW D	SUB	Read code	
XC90	2006	AW50/51AW D	SUB	Clear code	
XC90	2006	AW50/51AW D	SUB	Data stream	
XC90	2006	AW50/51AW D	CVM	Sys. Info.	
XC90	2006	AW50/51AW D	CVM	Read code	
XC90	2006	AW50/51AW D	CVM	Clear code	
XC90	2006	AW50/51AW D	CVM	Data stream	
XC90	2006	AW50/51AW D	DABM	Sys. Info.	
XC90	2006	AW50/51AW D	DABM	Read code	
XC90	2006	AW50/51AW D	DABM	Clear code	
XC90	2006	AW50/51AW D	DABM	Data stream	
XC90	2006	AW50/51AW D	PAC	Sys. Info.	
XC90	2006	AW50/51AW D	PAC	Read code	
XC90	2006	AW50/51AW D	PAC	Clear code	
XC90	2006	AW50/51AW D	PAC	Data stream	

model	year	type	system	function	subfunction
XC90	2006	AW50/51AW D	TRM	Sys. Info.	
XC90	2006	AW50/51AW D	TRM	Read code	
XC90	2006	AW50/51AW D	TRM	Clear code	
XC90	2006	AW50/51AW D	TRM	Data stream	
XC90	2007	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90	2007	B5244S4	ECM	Sys. Info.	
XC90	2007	B5244S4	ECM	Read code	
XC90	2007	B5244S4	ECM	Clear code	
XC90	2007	B5244S4	ECM	Data stream	
XC90	2007	B5244S4	ECM	Actuation	
XC90	2007	B5244S4	ECM	Special functions	Resetting the adaptation values
XC90	2007	B5244S5	ECM	Sys. Info.	
XC90	2007	B5244S5	ECM	Read code	
XC90	2007	B5244S5	ECM	Clear code	
XC90	2007	B5244S5	ECM	Data stream	
XC90	2007	B5244S5	ECM	Actuation	
XC90	2007	B5244S5	ECM	Special functions	Resetting the adaptation values
XC90	2007	B5244S7	ECM	Sys. Info.	
XC90	2007	B5244S7	ECM	Read code	
XC90	2007	B5244S7	ECM	Clear code	
XC90	2007	B5244S7	ECM	Data stream	
XC90	2007	B5244S7	ECM	Actuation	
XC90	2007	B4204S3	ECM	Sys. Info.	
XC90	2007	B4204S3	ECM	Read code	
XC90	2007	B4204S3	ECM	Clear code	
XC90	2007	B4204S3	ECM	Data stream	
XC90	2007	B4204S3	ECM	Actuation	
XC90	2007	B5254T2	ECM	Sys. Info.	
XC90	2007	B5254T2	ECM	Read code	
XC90	2007	B5254T2	ECM	Clear code	
XC90	2007	B5254T2	ECM	Data stream	
XC90	2007	B5254T2	ECM	Actuation	
XC90	2007	B5254T2	ECM	Freeze frame	
XC90	2007	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2007	B5254T3	ECM	Sys. Info.	
XC90	2007	B5254T3	ECM	Read code	
XC90	2007	B5254T3	ECM	Clear code	
XC90	2007	B5254T3	ECM	Data stream	
XC90	2007	B5254T3	ECM	Actuation	
XC90	2007	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2007	B5254T7	ECM	Sys. Info.	
XC90	2007	B5254T7	ECM	Read code	
XC90	2007	B5254T7	ECM	Clear code	
XC90	2007	B5254T7	ECM	Data stream	
XC90	2007	B5254T7	ECM	Actuation	
XC90	2007	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2007	B5204T5	ECM	Sys. Info.	
XC90	2007	B5204T5	ECM	Read code	
XC90	2007	B5204T5	ECM	Clear code	
XC90	2007	B5204T5	ECM	Data stream	
XC90	2007	B5204T5	ECM	Actuation	
XC90	2007	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2007	B6294T	ECM	Sys. Info.	
XC90	2007	B6294T	ECM	Read code	
XC90	2007	B6294T	ECM	Clear code	
XC90	2007	B6294T	ECM	Data stream	
XC90	2007	B6294T	ECM	Actuation	
XC90	2007	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2007	B4164S3	ECM	Sys. Info.	
XC90	2007	B4164S3	ECM	Read code	
XC90	2007	B4164S3	ECM	Clear code	
XC90	2007	B4164S3	ECM	Data stream	
XC90	2007	B4164S3	ECM	Actuation	
XC90	2007	B4164S3	ECM	Special functions	Resetting the adaptation values
XC90	2007	B5244T5	ECM	Sys. Info.	
XC90	2007	B5244T5	ECM	Read code	
XC90	2007	B5244T5	ECM	Clear code	
XC90	2007	B5244T5	ECM	Data stream	
XC90	2007	B5244T5	ECM	Actuation	
XC90	2007	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2007	B4184S11	ECM	Sys. Info.	
XC90	2007	B4184S11	ECM	Read code	
XC90	2007	B4184S11	ECM	Clear code	

model	year	type	system	function	subfunction
XC90	2007	B4184S11	ECM	Data stream	
XC90	2007	B4184S11	ECM	Actuation	
XC90	2007	B4184S11	ECM	Special functions	Resetting the adaptation values
XC90	2007	D5244T	Diesel Eng	Sys. Info.	
XC90	2007	D5244T	Diesel Eng	Read code	
XC90	2007	D5244T	Diesel Eng	Clear code	
XC90	2007	D5244T	Diesel Eng	Data stream	
XC90	2007	D5244T	Diesel Eng	Actuation	
XC90	2007	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90	2007	D5244T4	Diesel Eng	Sys. Info.	
XC90	2007	D5244T4	Diesel Eng	Read code	
XC90	2007	D5244T4	Diesel Eng	Clear code	
XC90	2007	D5244T4	Diesel Eng	Data stream	
XC90	2007	D5244T4	Diesel Eng	Actuation	
XC90	2007	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2007	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90	2007	D5244T4	Diesel Eng	Special functions	Resetting counter oil
XC90	2007	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
XC90	2007	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90	2007	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2007	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2007	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2007	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
XC90	2007	D5244T5	Diesel Eng	Sys. Info.	
XC90	2007	D5244T5	Diesel Eng	Read code	
XC90	2007	D5244T5	Diesel Eng	Clear code	
XC90	2007	D5244T5	Diesel Eng	Data stream	
XC90	2007	D5244T5	Diesel Eng	Actuation	
XC90	2007	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2007	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90	2007	D5244T5	Diesel Eng	Special functions	Resetting counter oil
XC90	2007	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
XC90	2007	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90	2007	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2007	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2007	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2007	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
XC90	2007	D5244T8	Diesel Eng	Sys. Info.	
XC90	2007	D5244T8	Diesel Eng	Read code	
XC90	2007	D5244T8	Diesel Eng	Clear code	
XC90	2007	D5244T8	Diesel Eng	Data stream	
XC90	2007	D5244T8	Diesel Eng	Actuation	
XC90	2007	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2007	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90	2007	D5244T8	Diesel Eng	Special functions	Resetting counter oil
XC90	2007	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
XC90	2007	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90	2007	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2007	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2007	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2007	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
XC90	2007	D4164T	Diesel Eng	Sys. Info.	
XC90	2007	D4164T	Diesel Eng	Read code	
XC90	2007	D4164T	Diesel Eng	Clear code	
XC90	2007	D4164T	Diesel Eng	Data stream	
XC90	2007	D4164T	Diesel Eng	Actuation	
XC90	2007	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90	2007	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90	2007	D4164T	Diesel Eng	Special functions	Combustion of soot particles
XC90	2007	D4204T	Diesel Eng	Sys. Info.	
XC90	2007	D4204T	Diesel Eng	Read code	
XC90	2007	D4204T	Diesel Eng	Clear code	
XC90	2007	D4204T	Diesel Eng	Data stream	
XC90	2007	D4204T	Diesel Eng	Actuation	
XC90	2007	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90	2007	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
XC90	2007	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90	2007	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90	2007	D4204T	Diesel Eng	Special functions	Combustion of soot particles
XC90	2007	AW55-50/51SN	TCM	Sys. Info.	
XC90	2007	AW55-50/51SN	TCM	Read code	
XC90	2007	AW55-50/51SN	TCM	Clear code	
XC90	2007	AW55-50/51SN	TCM	Data stream	



model	year	type	system	function	subfunction
XC90	2007	AW55-50/51SN	TCM	Actuation	
XC90	2007	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
XC90	2007	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2007	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
XC90	2007	AW55-50/51SN	TCM	Special functions	Activating gear indication
XC90	2007	AW55-50/51SN	TCM	Special functions	Activation of adaption
XC90	2007	4T65AWD	TCM	Sys. Info.	
XC90	2007	4T65AWD	TCM	Read code	
XC90	2007	4T65AWD	TCM	Clear code	
XC90	2007	4T65AWD	TCM	Data stream	
XC90	2007	4T65AWD	TCM	Actuation	
XC90	2007	4T65AWD	TCM	Special functions	Reset adaptation to zero
XC90	2007	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2007	TF-80SC	TCM	Sys. Info.	
XC90	2007	TF-80SC	TCM	Read code	
XC90	2007	TF-80SC	TCM	Clear code	
XC90	2007	TF-80SC	TCM	Data stream	
XC90	2007	TF-80SC	TCM	Actuation	
XC90	2007	TF-80SC	TCM	Special functions	Reset adaptation to zero
XC90	2007	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2007	TF-80SC	TCM	Special functions	Calibration of position sensor
XC90	2007	AW50/51AW D	TCM	Sys. Info.	
XC90	2007	AW50/51AW D	TCM	Read code	
XC90	2007	AW50/51AW D	TCM	Clear code	
XC90	2007	AW50/51AW D	TCM	Data stream	
XC90	2007	AW50/51AW D	TCM	Actuation	
XC90	2007	AW50/51AW D	TCM	Freeze frame	
XC90	2007	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
XC90	2007	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2007	AW50/51AW D	ABS	Sys. Info.	
XC90	2007	AW50/51AW D	ABS	Read code	
XC90	2007	AW50/51AW D	ABS	Clear code	
XC90	2007	AW50/51AW D	ABS	Data stream	
XC90	2007	AW50/51AW D	ABS	Actuation	
XC90	2007	AW50/51AW D	ABS	Freeze frame	
XC90	2007	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
XC90	2007	AW50/51AW D	ABS	Special functions	Reading off the configuration
XC90	2007	AW50/51AW D	ABS	Special functions	Calibration
XC90	2007	AW50/51AW D	SRS	Sys. Info.	
XC90	2007	AW50/51AW D	SRS	Read code	
XC90	2007	AW50/51AW D	SRS	Clear code	
XC90	2007	AW50/51AW D	SRS	Data stream	
XC90	2007	AW50/51AW D	SRS	Freeze frame	
XC90	2007	AW50/51AW D	CEM	Sys. Info.	
XC90	2007	AW50/51AW D	CEM	Read code	
XC90	2007	AW50/51AW D	CEM	Clear code	

model	year	type	system	function	subfunction
XC90	2007	AW50/51AW D	CEM	Data stream	
XC90	2007	AW50/51AW D	CEM	Actuation	
XC90	2007	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
XC90	2007	AW50/51AW D	CEM	Special functions	Programming control module
XC90	2007	AW50/51AW D	CEM	Special functions	Resetting the factory settings
XC90	2007	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
XC90	2007	AW50/51AW D	CEM	Special functions	Resetting crash mode
XC90	2007	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
XC90	2007	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
XC90	2007	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
XC90	2007	AW50/51AW D	CEM	Special functions	Ignition switch key position
XC90	2007	AW50/51AW D	UEM	Sys. Info.	
XC90	2007	AW50/51AW D	UEM	Read code	
XC90	2007	AW50/51AW D	UEM	Clear code	
XC90	2007	AW50/51AW D	UEM	Data stream	
XC90	2007	AW50/51AW D	UEM	Actuation	
XC90	2007	AW50/51AW D	UEM	Special functions	Configuration of the siren
XC90	2007	AW50/51AW D	UEM	Special functions	Programming the control unit
XC90	2007	AW50/51AW D	UEM	Special functions	Reading the programmed values
XC90	2007	AW50/51AW D	REM	Sys. Info.	
XC90	2007	AW50/51AW D	REM	Read code	
XC90	2007	AW50/51AW D	REM	Clear code	
XC90	2007	AW50/51AW D	REM	Data stream	
XC90	2007	AW50/51AW D	REM	Actuation	
XC90	2007	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90	2007	AW50/51AW D	DIM	Sys. Info.	
XC90	2007	AW50/51AW D	DIM	Read code	
XC90	2007	AW50/51AW D	DIM	Clear code	
XC90	2007	AW50/51AW D	DIM	Data stream	
XC90	2007	AW50/51AW D	DIM	Actuation	
XC90	2007	AW50/51AW D	DIM	Freeze frame	
XC90	2007	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90	2007	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90	2007	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
XC90	2007	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
XC90	2007	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
XC90	2007	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
XC90	2007	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
XC90	2007	AW50/51AW D	DIM	Special functions	Programming of clock (*)

model	year	type	system	function	subfunction
XC90	2007	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
XC90	2007	AW50/51AW D	DIM	Special functions	Programming parking brake warning
XC90	2007	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90	2007	AW50/51AW D	DIM	Special functions	Programming instrument lighting
XC90	2007	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
XC90	2007	AW50/51AW D	DIM	Special functions	Display of DSTC message
XC90	2007	AW50/51AW D	DIM	Special functions	Read out programmed values
XC90	2007	AW50/51AW D	PDM	Sys. Info.	
XC90	2007	AW50/51AW D	PDM	Read code	
XC90	2007	AW50/51AW D	PDM	Clear code	
XC90	2007	AW50/51AW D	PDM	Data stream	
XC90	2007	AW50/51AW D	PDM	Actuation	
XC90	2007	AW50/51AW D	PDM	Special functions	Initialize the window(*)
XC90	2007	AW50/51AW D	PSM	Sys. Info.	
XC90	2007	AW50/51AW D	PSM	Read code	
XC90	2007	AW50/51AW D	PSM	Clear code	
XC90	2007	AW50/51AW D	PSM	Data stream	
XC90	2007	AW50/51AW D	PSM	Actuation	
XC90	2007	AW50/51AW D	DDM	Sys. Info.	
XC90	2007	AW50/51AW D	DDM	Read code	
XC90	2007	AW50/51AW D	DDM	Clear code	
XC90	2007	AW50/51AW D	DDM	Data stream	
XC90	2007	AW50/51AW D	DDM	Actuation	
XC90	2007	AW50/51AW D	DDM	Special functions	Initialize the window(*)
XC90	2007	AW50/51AW D	CCM	Sys. Info.	
XC90	2007	AW50/51AW D	CCM	Read code	
XC90	2007	AW50/51AW D	CCM	Clear code	
XC90	2007	AW50/51AW D	CCM	Data stream	
XC90	2007	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
XC90	2007	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
XC90	2007	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90	2007	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90	2007	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
XC90	2007	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC90	2007	AW50/51AW D	CCM	Special functions	Programming the seat temperature
XC90	2007	AW50/51AW D	PHM	Sys. Info.	
XC90	2007	AW50/51AW D	PHM	Read code	
XC90	2007	AW50/51AW D	PHM	Clear code	
XC90	2007	AW50/51AW D	PHM	Data stream	

model	year	type	system	function	subfunction
XC90	2007	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
XC90	2007	AW50/51AW D	AUD	Sys. Info.	
XC90	2007	AW50/51AW D	AUD	Read code	
XC90	2007	AW50/51AW D	AUD	Clear code	
XC90	2007	AW50/51AW D	MP2	Sys. Info.	
XC90	2007	AW50/51AW D	MP2	Read code	
XC90	2007	AW50/51AW D	MP2	Clear code	
XC90	2007	AW50/51AW D	MP2	Data stream	
XC90	2007	AW50/51AW D	MP2	Actuation	
XC90	2007	AW50/51AW D	ATM	Sys. Info.	
XC90	2007	AW50/51AW D	ATM	Read code	
XC90	2007	AW50/51AW D	ATM	Clear code	
XC90	2007	AW50/51AW D	ATM	Data stream	
XC90	2007	AW50/51AW D	DEM	Sys. Info.	
XC90	2007	AW50/51AW D	DEM	Read code	
XC90	2007	AW50/51AW D	DEM	Clear code	
XC90	2007	AW50/51AW D	DEM	Data stream	
XC90	2007	AW50/51AW D	ICM	Sys. Info.	
XC90	2007	AW50/51AW D	ICM	Read code	
XC90	2007	AW50/51AW D	ICM	Clear code	
XC90	2007	AW50/51AW D	ICM	Data stream	
XC90	2007	AW50/51AW D	ICM	Actuation	
XC90	2007	AW50/51AW D	SAS	Sys. Info.	
XC90	2007	AW50/51AW D	SAS	Read code	
XC90	2007	AW50/51AW D	SAS	Clear code	
XC90	2007	AW50/51AW D	SAS	Data stream	
XC90	2007	AW50/51AW D	MMM	Sys. Info.	
XC90	2007	AW50/51AW D	MMM	Read code	
XC90	2007	AW50/51AW D	MMM	Clear code	
XC90	2007	AW50/51AW D	MMM	Data stream	
XC90	2007	AW50/51AW D	AEM	Sys. Info.	
XC90	2007	AW50/51AW D	AEM	Read code	
XC90	2007	AW50/51AW D	AEM	Clear code	
XC90	2007	AW50/51AW D	AEM	Data stream	
XC90	2007	AW50/51AW D	AEM	Actuation	
XC90	2007	AW50/51AW D	CPM	Sys. Info.	
XC90	2007	AW50/51AW D	CPM	Data stream	
XC90	2007	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
XC90	2007	AW50/51AW D	MP1	Sys. Info.	

model	year	type	system	function	subfunction
XC90	2007	AW50/51AW D	MP1	Read code	
XC90	2007	AW50/51AW D	MP1	Clear code	
XC90	2007	AW50/51AW D	MP1	Data stream	
XC90	2007	AW50/51AW D	MP1	Actuation	
XC90	2007	AW50/51AW D	HCM	Sys. Info.	
XC90	2007	AW50/51AW D	HCM	Read code	
XC90	2007	AW50/51AW D	HCM	Clear code	
XC90	2007	AW50/51AW D	HCM	Special functions	Calibration of position sensor
XC90	2007	AW50/51AW D	KVM	Sys. Info.	
XC90	2007	AW50/51AW D	KVM	Read code	
XC90	2007	AW50/51AW D	KVM	Clear code	
XC90	2007	AW50/51AW D	KVM	Data stream	
XC90	2007	AW50/51AW D	KVM	Actuation	
XC90	2007	AW50/51AW D	RDAR	Sys. Info.	
XC90	2007	AW50/51AW D	RDAR	Read code	
XC90	2007	AW50/51AW D	RDAR	Clear code	
XC90	2007	AW50/51AW D	RDAR	Data stream	
XC90	2007	AW50/51AW D	SUB	Sys. Info.	
XC90	2007	AW50/51AW D	SUB	Read code	
XC90	2007	AW50/51AW D	SUB	Clear code	
XC90	2007	AW50/51AW D	SUB	Data stream	
XC90	2007	AW50/51AW D	CVM	Sys. Info.	
XC90	2007	AW50/51AW D	CVM	Read code	
XC90	2007	AW50/51AW D	CVM	Clear code	
XC90	2007	AW50/51AW D	CVM	Data stream	
XC90	2007	AW50/51AW D	DABM	Sys. Info.	
XC90	2007	AW50/51AW D	DABM	Read code	
XC90	2007	AW50/51AW D	DABM	Clear code	
XC90	2007	AW50/51AW D	DABM	Data stream	
XC90	2007	AW50/51AW D	PAC	Sys. Info.	
XC90	2007	AW50/51AW D	PAC	Read code	
XC90	2007	AW50/51AW D	PAC	Clear code	
XC90	2007	AW50/51AW D	PAC	Data stream	
XC90	2007	AW50/51AW D	TRM	Sys. Info.	
XC90	2007	AW50/51AW D	TRM	Read code	
XC90	2007	AW50/51AW D	TRM	Clear code	
XC90	2007	AW50/51AW D	TRM	Data stream	
XC90	2008	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90	2008	B5244S4	ECM	Sys. Info.	
XC90	2008	B5244S4	ECM	Read code	

model	year	type	system	function	subfunction	
XC90		2008	B5244S4	ECM	Clear code	
XC90		2008	B5244S4	ECM	Data stream	
XC90		2008	B5244S4	ECM	Actuation	
XC90		2008	B5244S4	ECM	Special functions	Resetting the adaptation values
XC90		2008	B5244S5	ECM	Sys. Info.	
XC90		2008	B5244S5	ECM	Read code	
XC90		2008	B5244S5	ECM	Clear code	
XC90		2008	B5244S5	ECM	Data stream	
XC90		2008	B5244S5	ECM	Actuation	
XC90		2008	B5244S5	ECM	Special functions	Resetting the adaptation values
XC90		2008	B5244S7	ECM	Sys. Info.	
XC90		2008	B5244S7	ECM	Read code	
XC90		2008	B5244S7	ECM	Clear code	
XC90		2008	B5244S7	ECM	Data stream	
XC90		2008	B5244S7	ECM	Actuation	
XC90		2008	B4204S3	ECM	Sys. Info.	
XC90		2008	B4204S3	ECM	Read code	
XC90		2008	B4204S3	ECM	Clear code	
XC90		2008	B4204S3	ECM	Data stream	
XC90		2008	B4204S3	ECM	Actuation	
XC90		2008	B5254T2	ECM	Sys. Info.	
XC90		2008	B5254T2	ECM	Read code	
XC90		2008	B5254T2	ECM	Clear code	
XC90		2008	B5254T2	ECM	Data stream	
XC90		2008	B5254T2	ECM	Actuation	
XC90		2008	B5254T2	ECM	Freeze frame	
XC90		2008	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2008	B5254T3	ECM	Sys. Info.	
XC90		2008	B5254T3	ECM	Read code	
XC90		2008	B5254T3	ECM	Clear code	
XC90		2008	B5254T3	ECM	Data stream	
XC90		2008	B5254T3	ECM	Actuation	
XC90		2008	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2008	B5254T7	ECM	Sys. Info.	
XC90		2008	B5254T7	ECM	Read code	
XC90		2008	B5254T7	ECM	Clear code	
XC90		2008	B5254T7	ECM	Data stream	
XC90		2008	B5254T7	ECM	Actuation	
XC90		2008	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2008	B5204T5	ECM	Sys. Info.	
XC90		2008	B5204T5	ECM	Read code	
XC90		2008	B5204T5	ECM	Clear code	
XC90		2008	B5204T5	ECM	Data stream	
XC90		2008	B5204T5	ECM	Actuation	
XC90		2008	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2008	B6294T	ECM	Sys. Info.	
XC90		2008	B6294T	ECM	Read code	
XC90		2008	B6294T	ECM	Clear code	
XC90		2008	B6294T	ECM	Data stream	
XC90		2008	B6294T	ECM	Actuation	
XC90		2008	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2008	B4164S3	ECM	Sys. Info.	
XC90		2008	B4164S3	ECM	Read code	
XC90		2008	B4164S3	ECM	Clear code	
XC90		2008	B4164S3	ECM	Data stream	
XC90		2008	B4164S3	ECM	Actuation	
XC90		2008	B4164S3	ECM	Special functions	Resetting the adaptation values
XC90		2008	B5244T5	ECM	Sys. Info.	
XC90		2008	B5244T5	ECM	Read code	
XC90		2008	B5244T5	ECM	Clear code	
XC90		2008	B5244T5	ECM	Data stream	
XC90		2008	B5244T5	ECM	Actuation	
XC90		2008	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2008	B4184S11	ECM	Sys. Info.	
XC90		2008	B4184S11	ECM	Read code	
XC90		2008	B4184S11	ECM	Clear code	
XC90		2008	B4184S11	ECM	Data stream	
XC90		2008	B4184S11	ECM	Actuation	
XC90		2008	B4184S11	ECM	Special functions	Resetting the adaptation values
XC90		2008	D5244T	Diesel Eng	Sys. Info.	
XC90		2008	D5244T	Diesel Eng	Read code	
XC90		2008	D5244T	Diesel Eng	Clear code	
XC90		2008	D5244T	Diesel Eng	Data stream	
XC90		2008	D5244T	Diesel Eng	Actuation	
XC90		2008	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90		2008	D5244T4	Diesel Eng	Sys. Info.	
XC90		2008	D5244T4	Diesel Eng	Read code	
XC90		2008	D5244T4	Diesel Eng	Clear code	

model	year	type	system	function	subfunction
XC90	2008	D5244T4	Diesel Eng	Data stream	
XC90	2008	D5244T4	Diesel Eng	Actuation	
XC90	2008	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2008	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90	2008	D5244T4	Diesel Eng	Special functions	Resetting counter oil
XC90	2008	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
XC90	2008	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90	2008	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2008	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2008	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2008	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
XC90	2008	D5244T5	Diesel Eng	Sys. Info.	
XC90	2008	D5244T5	Diesel Eng	Read code	
XC90	2008	D5244T5	Diesel Eng	Clear code	
XC90	2008	D5244T5	Diesel Eng	Data stream	
XC90	2008	D5244T5	Diesel Eng	Actuation	
XC90	2008	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2008	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90	2008	D5244T5	Diesel Eng	Special functions	Resetting counter oil
XC90	2008	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
XC90	2008	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90	2008	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2008	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2008	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2008	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
XC90	2008	D5244T8	Diesel Eng	Sys. Info.	
XC90	2008	D5244T8	Diesel Eng	Read code	
XC90	2008	D5244T8	Diesel Eng	Clear code	
XC90	2008	D5244T8	Diesel Eng	Data stream	
XC90	2008	D5244T8	Diesel Eng	Actuation	
XC90	2008	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2008	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90	2008	D5244T8	Diesel Eng	Special functions	Resetting counter oil
XC90	2008	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
XC90	2008	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90	2008	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2008	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2008	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2008	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
XC90	2008	D4164T	Diesel Eng	Sys. Info.	
XC90	2008	D4164T	Diesel Eng	Read code	
XC90	2008	D4164T	Diesel Eng	Clear code	
XC90	2008	D4164T	Diesel Eng	Data stream	
XC90	2008	D4164T	Diesel Eng	Actuation	
XC90	2008	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90	2008	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90	2008	D4164T	Diesel Eng	Special functions	Combustion of soot particles
XC90	2008	D4204T	Diesel Eng	Sys. Info.	
XC90	2008	D4204T	Diesel Eng	Read code	
XC90	2008	D4204T	Diesel Eng	Clear code	
XC90	2008	D4204T	Diesel Eng	Data stream	
XC90	2008	D4204T	Diesel Eng	Actuation	
XC90	2008	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90	2008	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
XC90	2008	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90	2008	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90	2008	D4204T	Diesel Eng	Special functions	Combustion of soot particles
XC90	2008	AW55-50/51SN	TCM	Sys. Info.	
XC90	2008	AW55-50/51SN	TCM	Read code	
XC90	2008	AW55-50/51SN	TCM	Clear code	
XC90	2008	AW55-50/51SN	TCM	Data stream	
XC90	2008	AW55-50/51SN	TCM	Actuation	
XC90	2008	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
XC90	2008	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2008	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
XC90	2008	4T65AWD	TCM	Sys. Info.	
XC90	2008	4T65AWD	TCM	Read code	
XC90	2008	4T65AWD	TCM	Clear code	
XC90	2008	4T65AWD	TCM	Data stream	
XC90	2008	4T65AWD	TCM	Actuation	

model	year	type	system	function	subfunction
XC90	2008	4T65AWD	TCM	Special functions	Reset adaptation to zero
XC90	2008	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2008	TF-80SC	TCM	Sys. Info.	
XC90	2008	TF-80SC	TCM	Read code	
XC90	2008	TF-80SC	TCM	Clear code	
XC90	2008	TF-80SC	TCM	Data stream	
XC90	2008	TF-80SC	TCM	Actuation	
XC90	2008	TF-80SC	TCM	Special functions	Reset adaptation to zero
XC90	2008	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2008	TF-80SC	TCM	Special functions	Calibration of position sensor
XC90	2008	AW50/51AW D	TCM	Sys. Info.	
XC90	2008	AW50/51AW D	TCM	Read code	
XC90	2008	AW50/51AW D	TCM	Clear code	
XC90	2008	AW50/51AW D	TCM	Data stream	
XC90	2008	AW50/51AW D	TCM	Actuation	
XC90	2008	AW50/51AW D	TCM	Freeze frame	
XC90	2008	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
XC90	2008	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2008	AW50/51AW D	ABS	Sys. Info.	
XC90	2008	AW50/51AW D	ABS	Read code	
XC90	2008	AW50/51AW D	ABS	Clear code	
XC90	2008	AW50/51AW D	ABS	Data stream	
XC90	2008	AW50/51AW D	ABS	Actuation	
XC90	2008	AW50/51AW D	ABS	Freeze frame	
XC90	2008	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
XC90	2008	AW50/51AW D	ABS	Special functions	Reading off the configuration
XC90	2008	AW50/51AW D	ABS	Special functions	Calibration
XC90	2008	AW50/51AW D	SRS	Sys. Info.	
XC90	2008	AW50/51AW D	SRS	Read code	
XC90	2008	AW50/51AW D	SRS	Clear code	
XC90	2008	AW50/51AW D	SRS	Data stream	
XC90	2008	AW50/51AW D	SRS	Freeze frame	
XC90	2008	AW50/51AW D	CEM	Sys. Info.	
XC90	2008	AW50/51AW D	CEM	Read code	
XC90	2008	AW50/51AW D	CEM	Clear code	
XC90	2008	AW50/51AW D	CEM	Data stream	
XC90	2008	AW50/51AW D	CEM	Actuation	
XC90	2008	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
XC90	2008	AW50/51AW D	CEM	Special functions	Programming control module
XC90	2008	AW50/51AW D	CEM	Special functions	Resetting the factory settings
XC90	2008	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
XC90	2008	AW50/51AW D	CEM	Special functions	Resetting crash mode
XC90	2008	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
XC90	2008	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode



model	year	type	system	function	subfunction
XC90	2008	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
XC90	2008	AW50/51AW D	CEM	Special functions	Ignition switch key position
XC90	2008	AW50/51AW D	UEM	Sys. Info.	
XC90	2008	AW50/51AW D	UEM	Read code	
XC90	2008	AW50/51AW D	UEM	Clear code	
XC90	2008	AW50/51AW D	UEM	Data stream	
XC90	2008	AW50/51AW D	UEM	Actuation	
XC90	2008	AW50/51AW D	UEM	Special functions	Configuration of the siren
XC90	2008	AW50/51AW D	UEM	Special functions	Programming the control unit
XC90	2008	AW50/51AW D	UEM	Special functions	Reading the programmed values
XC90	2008	AW50/51AW D	REM	Sys. Info.	
XC90	2008	AW50/51AW D	REM	Read code	
XC90	2008	AW50/51AW D	REM	Clear code	
XC90	2008	AW50/51AW D	REM	Data stream	
XC90	2008	AW50/51AW D	REM	Actuation	
XC90	2008	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90	2008	AW50/51AW D	DIM	Sys. Info.	
XC90	2008	AW50/51AW D	DIM	Read code	
XC90	2008	AW50/51AW D	DIM	Clear code	
XC90	2008	AW50/51AW D	DIM	Data stream	
XC90	2008	AW50/51AW D	DIM	Actuation	
XC90	2008	AW50/51AW D	DIM	Freeze frame	
XC90	2008	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90	2008	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90	2008	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
XC90	2008	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
XC90	2008	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
XC90	2008	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
XC90	2008	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
XC90	2008	AW50/51AW D	DIM	Special functions	Programming of clock (*)
XC90	2008	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
XC90	2008	AW50/51AW D	DIM	Special functions	Programming parking brake warning
XC90	2008	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90	2008	AW50/51AW D	DIM	Special functions	Programming instrument lighting
XC90	2008	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
XC90	2008	AW50/51AW D	DIM	Special functions	Display of DSTC message
XC90	2008	AW50/51AW D	DIM	Special functions	Read out programmed values
XC90	2008	AW50/51AW D	PDM	Sys. Info.	
XC90	2008	AW50/51AW D	PDM	Read code	

model	year	type	system	function	subfunction
XC90	2008	AW50/51AW D	PDM	Clear code	
XC90	2008	AW50/51AW D	PDM	Data stream	
XC90	2008	AW50/51AW D	PDM	Actuation	
XC90	2008	AW50/51AW D	PDM	Special functions	Initialize the window(*)
XC90	2008	AW50/51AW D	PSM	Sys. Info.	
XC90	2008	AW50/51AW D	PSM	Read code	
XC90	2008	AW50/51AW D	PSM	Clear code	
XC90	2008	AW50/51AW D	PSM	Data stream	
XC90	2008	AW50/51AW D	PSM	Actuation	
XC90	2008	AW50/51AW D	DDM	Sys. Info.	
XC90	2008	AW50/51AW D	DDM	Read code	
XC90	2008	AW50/51AW D	DDM	Clear code	
XC90	2008	AW50/51AW D	DDM	Data stream	
XC90	2008	AW50/51AW D	DDM	Actuation	
XC90	2008	AW50/51AW D	DDM	Special functions	Initialize the window(*)
XC90	2008	AW50/51AW D	CCM	Sys. Info.	
XC90	2008	AW50/51AW D	CCM	Read code	
XC90	2008	AW50/51AW D	CCM	Clear code	
XC90	2008	AW50/51AW D	CCM	Data stream	
XC90	2008	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
XC90	2008	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
XC90	2008	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90	2008	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90	2008	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
XC90	2008	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
XC90	2008	AW50/51AW D	CCM	Special functions	Programming the seat temperature
XC90	2008	AW50/51AW D	PHM	Sys. Info.	
XC90	2008	AW50/51AW D	PHM	Read code	
XC90	2008	AW50/51AW D	PHM	Clear code	
XC90	2008	AW50/51AW D	PHM	Data stream	
XC90	2008	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
XC90	2008	AW50/51AW D	AUD	Sys. Info.	
XC90	2008	AW50/51AW D	AUD	Read code	
XC90	2008	AW50/51AW D	AUD	Clear code	
XC90	2008	AW50/51AW D	AUU	Sys. Info.	
XC90	2008	AW50/51AW D	AUU	Read code	
XC90	2008	AW50/51AW D	AUU	Clear code	
XC90	2008	AW50/51AW D	MP2	Sys. Info.	
XC90	2008	AW50/51AW D	MP2	Read code	

model	year	type	system	function	subfunction
XC90	2008	AW50/51AW D	MP2	Clear code	
XC90	2008	AW50/51AW D	MP2	Data stream	
XC90	2008	AW50/51AW D	MP2	Actuation	
XC90	2008	AW50/51AW D	ATM	Sys. Info.	
XC90	2008	AW50/51AW D	ATM	Read code	
XC90	2008	AW50/51AW D	ATM	Clear code	
XC90	2008	AW50/51AW D	ATM	Data stream	
XC90	2008	AW50/51AW D	DEM	Sys. Info.	
XC90	2008	AW50/51AW D	DEM	Read code	
XC90	2008	AW50/51AW D	DEM	Clear code	
XC90	2008	AW50/51AW D	DEM	Data stream	
XC90	2008	AW50/51AW D	ICM	Sys. Info.	
XC90	2008	AW50/51AW D	ICM	Read code	
XC90	2008	AW50/51AW D	ICM	Clear code	
XC90	2008	AW50/51AW D	ICM	Data stream	
XC90	2008	AW50/51AW D	ICM	Actuation	
XC90	2008	AW50/51AW D	SAS	Sys. Info.	
XC90	2008	AW50/51AW D	SAS	Read code	
XC90	2008	AW50/51AW D	SAS	Clear code	
XC90	2008	AW50/51AW D	SAS	Data stream	
XC90	2008	AW50/51AW D	MMM	Sys. Info.	
XC90	2008	AW50/51AW D	MMM	Read code	
XC90	2008	AW50/51AW D	MMM	Clear code	
XC90	2008	AW50/51AW D	MMM	Data stream	
XC90	2008	AW50/51AW D	AEM	Sys. Info.	
XC90	2008	AW50/51AW D	AEM	Read code	
XC90	2008	AW50/51AW D	AEM	Clear code	
XC90	2008	AW50/51AW D	AEM	Data stream	
XC90	2008	AW50/51AW D	AEM	Actuation	
XC90	2008	AW50/51AW D	CPM	Sys. Info.	
XC90	2008	AW50/51AW D	CPM	Data stream	
XC90	2008	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
XC90	2008	AW50/51AW D	MP1	Sys. Info.	
XC90	2008	AW50/51AW D	MP1	Read code	
XC90	2008	AW50/51AW D	MP1	Clear code	
XC90	2008	AW50/51AW D	MP1	Data stream	
XC90	2008	AW50/51AW D	MP1	Actuation	
XC90	2008	AW50/51AW D	HCM	Sys. Info.	
XC90	2008	AW50/51AW D	HCM	Read code	

model	year	type	system	function	subfunction
XC90	2008	AW50/51AW D	HCM	Clear code	
XC90	2008	AW50/51AW D	HCM	Special functions	Calibration of position sensor
XC90	2008	AW50/51AW D	KVM	Sys. Info.	
XC90	2008	AW50/51AW D	KVM	Read code	
XC90	2008	AW50/51AW D	KVM	Clear code	
XC90	2008	AW50/51AW D	KVM	Data stream	
XC90	2008	AW50/51AW D	KVM	Actuation	
XC90	2008	AW50/51AW D	RDAR	Sys. Info.	
XC90	2008	AW50/51AW D	RDAR	Read code	
XC90	2008	AW50/51AW D	RDAR	Clear code	
XC90	2008	AW50/51AW D	RDAR	Data stream	
XC90	2008	AW50/51AW D	SUB	Sys. Info.	
XC90	2008	AW50/51AW D	SUB	Read code	
XC90	2008	AW50/51AW D	SUB	Clear code	
XC90	2008	AW50/51AW D	SUB	Data stream	
XC90	2008	AW50/51AW D	CVM	Sys. Info.	
XC90	2008	AW50/51AW D	CVM	Read code	
XC90	2008	AW50/51AW D	CVM	Clear code	
XC90	2008	AW50/51AW D	CVM	Data stream	
XC90	2008	AW50/51AW D	DABM	Sys. Info.	
XC90	2008	AW50/51AW D	DABM	Read code	
XC90	2008	AW50/51AW D	DABM	Clear code	
XC90	2008	AW50/51AW D	DABM	Data stream	
XC90	2008	AW50/51AW D	PAC	Sys. Info.	
XC90	2008	AW50/51AW D	PAC	Read code	
XC90	2008	AW50/51AW D	PAC	Clear code	
XC90	2008	AW50/51AW D	PAC	Data stream	
XC90	2008	AW50/51AW D	TRM	Sys. Info.	
XC90	2008	AW50/51AW D	TRM	Read code	
XC90	2008	AW50/51AW D	TRM	Clear code	
XC90	2008	AW50/51AW D	TRM	Data stream	
XC90	2009	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90	2009	B5244S4	ECM	Sys. Info.	
XC90	2009	B5244S4	ECM	Read code	
XC90	2009	B5244S4	ECM	Clear code	
XC90	2009	B5244S4	ECM	Data stream	
XC90	2009	B5244S4	ECM	Actuation	
XC90	2009	B5244S4	ECM	Special functions	Resetting the adaptation values
XC90	2009	B5244S5	ECM	Sys. Info.	
XC90	2009	B5244S5	ECM	Read code	
XC90	2009	B5244S5	ECM	Clear code	
XC90	2009	B5244S5	ECM	Data stream	
XC90	2009	B5244S5	ECM	Actuation	
XC90	2009	B5244S5	ECM	Special functions	Resetting the adaptation values
XC90	2009	B5244S7	ECM	Sys. Info.	
XC90	2009	B5244S7	ECM	Read code	

model	year	type	system	function	subfunction	
XC90		2009	B5244S7	ECM	Clear code	
XC90		2009	B5244S7	ECM	Data stream	
XC90		2009	B5244S7	ECM	Actuation	
XC90		2009	B4204S3	ECM	Sys. Info.	
XC90		2009	B4204S3	ECM	Read code	
XC90		2009	B4204S3	ECM	Clear code	
XC90		2009	B4204S3	ECM	Data stream	
XC90		2009	B4204S3	ECM	Actuation	
XC90		2009	B5254T2	ECM	Sys. Info.	
XC90		2009	B5254T2	ECM	Read code	
XC90		2009	B5254T2	ECM	Clear code	
XC90		2009	B5254T2	ECM	Data stream	
XC90		2009	B5254T2	ECM	Actuation	
XC90		2009	B5254T2	ECM	Freeze frame	
XC90		2009	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2009	B5254T3	ECM	Sys. Info.	
XC90		2009	B5254T3	ECM	Read code	
XC90		2009	B5254T3	ECM	Clear code	
XC90		2009	B5254T3	ECM	Data stream	
XC90		2009	B5254T3	ECM	Actuation	
XC90		2009	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2009	B5254T7	ECM	Sys. Info.	
XC90		2009	B5254T7	ECM	Read code	
XC90		2009	B5254T7	ECM	Clear code	
XC90		2009	B5254T7	ECM	Data stream	
XC90		2009	B5254T7	ECM	Actuation	
XC90		2009	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2009	B5204T5	ECM	Sys. Info.	
XC90		2009	B5204T5	ECM	Read code	
XC90		2009	B5204T5	ECM	Clear code	
XC90		2009	B5204T5	ECM	Data stream	
XC90		2009	B5204T5	ECM	Actuation	
XC90		2009	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2009	B6294T	ECM	Sys. Info.	
XC90		2009	B6294T	ECM	Read code	
XC90		2009	B6294T	ECM	Clear code	
XC90		2009	B6294T	ECM	Data stream	
XC90		2009	B6294T	ECM	Actuation	
XC90		2009	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2009	B4164S3	ECM	Sys. Info.	
XC90		2009	B4164S3	ECM	Read code	
XC90		2009	B4164S3	ECM	Clear code	
XC90		2009	B4164S3	ECM	Data stream	
XC90		2009	B4164S3	ECM	Actuation	
XC90		2009	B4164S3	ECM	Special functions	Resetting the adaptation values
XC90		2009	B5244T5	ECM	Sys. Info.	
XC90		2009	B5244T5	ECM	Read code	
XC90		2009	B5244T5	ECM	Clear code	
XC90		2009	B5244T5	ECM	Data stream	
XC90		2009	B5244T5	ECM	Actuation	
XC90		2009	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90		2009	B4184S11	ECM	Sys. Info.	
XC90		2009	B4184S11	ECM	Read code	
XC90		2009	B4184S11	ECM	Clear code	
XC90		2009	B4184S11	ECM	Data stream	
XC90		2009	B4184S11	ECM	Actuation	
XC90		2009	B4184S11	ECM	Special functions	Resetting the adaptation values
XC90		2009	D5244T	Diesel Eng	Sys. Info.	
XC90		2009	D5244T	Diesel Eng	Read code	
XC90		2009	D5244T	Diesel Eng	Clear code	
XC90		2009	D5244T	Diesel Eng	Data stream	
XC90		2009	D5244T	Diesel Eng	Actuation	
XC90		2009	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90		2009	D5244T4	Diesel Eng	Sys. Info.	
XC90		2009	D5244T4	Diesel Eng	Read code	
XC90		2009	D5244T4	Diesel Eng	Clear code	
XC90		2009	D5244T4	Diesel Eng	Data stream	
XC90		2009	D5244T4	Diesel Eng	Actuation	
XC90		2009	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
XC90		2009	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90		2009	D5244T4	Diesel Eng	Special functions	Resetting counter oil
XC90		2009	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
XC90		2009	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90		2009	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90		2009	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90		2009	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90		2009	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
XC90		2009	D5244T5	Diesel Eng	Sys. Info.	

model	year	type	system	function	subfunction
XC90		2009 D5244T5	Diesel Eng	Read code	
XC90		2009 D5244T5	Diesel Eng	Clear code	
XC90		2009 D5244T5	Diesel Eng	Data stream	
XC90		2009 D5244T5	Diesel Eng	Actuation	
XC90		2009 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
XC90		2009 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90		2009 D5244T5	Diesel Eng	Special functions	Resetting counter oil
XC90		2009 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
XC90		2009 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90		2009 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90		2009 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90		2009 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90		2009 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
XC90		2009 D5244T8	Diesel Eng	Sys. Info.	
XC90		2009 D5244T8	Diesel Eng	Read code	
XC90		2009 D5244T8	Diesel Eng	Clear code	
XC90		2009 D5244T8	Diesel Eng	Data stream	
XC90		2009 D5244T8	Diesel Eng	Actuation	
XC90		2009 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
XC90		2009 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90		2009 D5244T8	Diesel Eng	Special functions	Resetting counter oil
XC90		2009 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
XC90		2009 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90		2009 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90		2009 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90		2009 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90		2009 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
XC90		2009 D4164T	Diesel Eng	Sys. Info.	
XC90		2009 D4164T	Diesel Eng	Read code	
XC90		2009 D4164T	Diesel Eng	Clear code	
XC90		2009 D4164T	Diesel Eng	Data stream	
XC90		2009 D4164T	Diesel Eng	Actuation	
XC90		2009 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90		2009 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90		2009 D4164T	Diesel Eng	Special functions	Combustion of soot particles
XC90		2009 D4204T	Diesel Eng	Sys. Info.	
XC90		2009 D4204T	Diesel Eng	Read code	
XC90		2009 D4204T	Diesel Eng	Clear code	
XC90		2009 D4204T	Diesel Eng	Data stream	
XC90		2009 D4204T	Diesel Eng	Actuation	
XC90		2009 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90		2009 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
XC90		2009 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90		2009 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90		2009 D4204T	Diesel Eng	Special functions	Combustion of soot particles
XC90		2009 AW55-50/51SN	TCM	Sys. Info.	
XC90		2009 AW55-50/51SN	TCM	Read code	
XC90		2009 AW55-50/51SN	TCM	Clear code	
XC90		2009 AW55-50/51SN	TCM	Data stream	
XC90		2009 AW55-50/51SN	TCM	Actuation	
XC90		2009 AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
XC90		2009 AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2009 AW55-50/51SN	TCM	Special functions	Calibration of position sensor
XC90		2009 4T65AWD	TCM	Sys. Info.	
XC90		2009 4T65AWD	TCM	Read code	
XC90		2009 4T65AWD	TCM	Clear code	
XC90		2009 4T65AWD	TCM	Data stream	
XC90		2009 4T65AWD	TCM	Actuation	
XC90		2009 4T65AWD	TCM	Special functions	Reset adaptation to zero
XC90		2009 4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2009 TF-80SC	TCM	Sys. Info.	
XC90		2009 TF-80SC	TCM	Read code	
XC90		2009 TF-80SC	TCM	Clear code	
XC90		2009 TF-80SC	TCM	Data stream	
XC90		2009 TF-80SC	TCM	Actuation	
XC90		2009 TF-80SC	TCM	Special functions	Reset adaptation to zero
XC90		2009 TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90		2009 TF-80SC	TCM	Special functions	Calibration of position sensor
XC90		2009 AW50/51AWD	TCM	Sys. Info.	

model	year	type	system	function	subfunction
XC90	2009	AW50/51AW D	TCM	Read code	
XC90	2009	AW50/51AW D	TCM	Clear code	
XC90	2009	AW50/51AW D	TCM	Data stream	
XC90	2009	AW50/51AW D	TCM	Actuation	
XC90	2009	AW50/51AW D	TCM	Freeze frame	
XC90	2009	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
XC90	2009	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2009	AW50/51AW D	ABS	Sys. Info.	
XC90	2009	AW50/51AW D	ABS	Read code	
XC90	2009	AW50/51AW D	ABS	Clear code	
XC90	2009	AW50/51AW D	ABS	Data stream	
XC90	2009	AW50/51AW D	ABS	Actuation	
XC90	2009	AW50/51AW D	ABS	Freeze frame	
XC90	2009	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
XC90	2009	AW50/51AW D	ABS	Special functions	Reading off the configuration
XC90	2009	AW50/51AW D	ABS	Special functions	Calibration
XC90	2009	AW50/51AW D	SRS	Sys. Info.	
XC90	2009	AW50/51AW D	SRS	Read code	
XC90	2009	AW50/51AW D	SRS	Clear code	
XC90	2009	AW50/51AW D	SRS	Data stream	
XC90	2009	AW50/51AW D	SRS	Freeze frame	
XC90	2009	AW50/51AW D	CEM	Sys. Info.	
XC90	2009	AW50/51AW D	CEM	Read code	
XC90	2009	AW50/51AW D	CEM	Clear code	
XC90	2009	AW50/51AW D	CEM	Data stream	
XC90	2009	AW50/51AW D	CEM	Actuation	
XC90	2009	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
XC90	2009	AW50/51AW D	CEM	Special functions	Programming control module
XC90	2009	AW50/51AW D	CEM	Special functions	Resetting the factory settings
XC90	2009	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
XC90	2009	AW50/51AW D	CEM	Special functions	Resetting crash mode
XC90	2009	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
XC90	2009	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
XC90	2009	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
XC90	2009	AW50/51AW D	CEM	Special functions	Ignition switch key position
XC90	2009	AW50/51AW D	UEM	Sys. Info.	
XC90	2009	AW50/51AW D	UEM	Read code	
XC90	2009	AW50/51AW D	UEM	Clear code	
XC90	2009	AW50/51AW D	UEM	Data stream	

model	year	type	system	function	subfunction
XC90	2009	AW50/51AW D	UEM	Actuation	
XC90	2009	AW50/51AW D	UEM	Special functions	Configuration of the siren
XC90	2009	AW50/51AW D	UEM	Special functions	Programming the control unit
XC90	2009	AW50/51AW D	UEM	Special functions	Reading the programmed values
XC90	2009	AW50/51AW D	REM	Sys. Info.	
XC90	2009	AW50/51AW D	REM	Read code	
XC90	2009	AW50/51AW D	REM	Clear code	
XC90	2009	AW50/51AW D	REM	Data stream	
XC90	2009	AW50/51AW D	REM	Actuation	
XC90	2009	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90	2009	AW50/51AW D	DIM	Sys. Info.	
XC90	2009	AW50/51AW D	DIM	Read code	
XC90	2009	AW50/51AW D	DIM	Clear code	
XC90	2009	AW50/51AW D	DIM	Data stream	
XC90	2009	AW50/51AW D	DIM	Actuation	
XC90	2009	AW50/51AW D	DIM	Freeze frame	
XC90	2009	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90	2009	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90	2009	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
XC90	2009	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
XC90	2009	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
XC90	2009	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
XC90	2009	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
XC90	2009	AW50/51AW D	DIM	Special functions	Programming of clock (*)
XC90	2009	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
XC90	2009	AW50/51AW D	DIM	Special functions	Programming parking brake warning
XC90	2009	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal, seat belt reminder
XC90	2009	AW50/51AW D	DIM	Special functions	Programming instrument lighting
XC90	2009	AW50/51AW D	DIM	Special functions	Programming text message, seatbelt reminder
XC90	2009	AW50/51AW D	DIM	Special functions	Display of DSTC message
XC90	2009	AW50/51AW D	DIM	Special functions	Read out programmed values
XC90	2009	AW50/51AW D	PDM	Sys. Info.	
XC90	2009	AW50/51AW D	PDM	Read code	
XC90	2009	AW50/51AW D	PDM	Clear code	
XC90	2009	AW50/51AW D	PDM	Data stream	
XC90	2009	AW50/51AW D	PDM	Actuation	
XC90	2009	AW50/51AW D	PDM	Special functions	Initialize the window(*)
XC90	2009	AW50/51AW D	PSM	Sys. Info.	
XC90	2009	AW50/51AW D	PSM	Read code	



model	year	type	system	function	subfunction
XC90	2009	AW50/51AW D	PSM	Clear code	
XC90	2009	AW50/51AW D	PSM	Data stream	
XC90	2009	AW50/51AW D	PSM	Actuation	
XC90	2009	AW50/51AW D	DDM	Sys. Info.	
XC90	2009	AW50/51AW D	DDM	Read code	
XC90	2009	AW50/51AW D	DDM	Clear code	
XC90	2009	AW50/51AW D	DDM	Data stream	
XC90	2009	AW50/51AW D	DDM	Actuation	
XC90	2009	AW50/51AW D	DDM	Special functions	Initialize the window(*)
XC90	2009	AW50/51AW D	CCM	Sys. Info.	
XC90	2009	AW50/51AW D	CCM	Read code	
XC90	2009	AW50/51AW D	CCM	Clear code	
XC90	2009	AW50/51AW D	CCM	Data stream	
XC90	2009	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
XC90	2009	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
XC90	2009	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90	2009	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90	2009	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
XC90	2009	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
XC90	2009	AW50/51AW D	CCM	Special functions	Programming the seat temperature
XC90	2009	AW50/51AW D	PHM	Sys. Info.	
XC90	2009	AW50/51AW D	PHM	Read code	
XC90	2009	AW50/51AW D	PHM	Clear code	
XC90	2009	AW50/51AW D	PHM	Data stream	
XC90	2009	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
XC90	2009	AW50/51AW D	AUD	Sys. Info.	
XC90	2009	AW50/51AW D	AUD	Read code	
XC90	2009	AW50/51AW D	AUD	Clear code	
XC90	2009	AW50/51AW D	MP2	Sys. Info.	
XC90	2009	AW50/51AW D	MP2	Read code	
XC90	2009	AW50/51AW D	MP2	Clear code	
XC90	2009	AW50/51AW D	MP2	Data stream	
XC90	2009	AW50/51AW D	MP2	Actuation	
XC90	2009	AW50/51AW D	ATM	Sys. Info.	
XC90	2009	AW50/51AW D	ATM	Read code	
XC90	2009	AW50/51AW D	ATM	Clear code	
XC90	2009	AW50/51AW D	ATM	Data stream	
XC90	2009	AW50/51AW D	DEM	Sys. Info.	
XC90	2009	AW50/51AW D	DEM	Read code	

model	year	type	system	function	subfunction
XC90	2009	AW50/51AW D	DEM	Clear code	
XC90	2009	AW50/51AW D	DEM	Data stream	
XC90	2009	AW50/51AW D	ICM	Sys. Info.	
XC90	2009	AW50/51AW D	ICM	Read code	
XC90	2009	AW50/51AW D	ICM	Clear code	
XC90	2009	AW50/51AW D	ICM	Data stream	
XC90	2009	AW50/51AW D	ICM	Actuation	
XC90	2009	AW50/51AW D	SAS	Sys. Info.	
XC90	2009	AW50/51AW D	SAS	Read code	
XC90	2009	AW50/51AW D	SAS	Clear code	
XC90	2009	AW50/51AW D	SAS	Data stream	
XC90	2009	AW50/51AW D	MMM	Sys. Info.	
XC90	2009	AW50/51AW D	MMM	Read code	
XC90	2009	AW50/51AW D	MMM	Clear code	
XC90	2009	AW50/51AW D	MMM	Data stream	
XC90	2009	AW50/51AW D	AEM	Sys. Info.	
XC90	2009	AW50/51AW D	AEM	Read code	
XC90	2009	AW50/51AW D	AEM	Clear code	
XC90	2009	AW50/51AW D	AEM	Data stream	
XC90	2009	AW50/51AW D	AEM	Actuation	
XC90	2009	AW50/51AW D	CPM	Sys. Info.	
XC90	2009	AW50/51AW D	CPM	Data stream	
XC90	2009	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
XC90	2009	AW50/51AW D	MP1	Sys. Info.	
XC90	2009	AW50/51AW D	MP1	Read code	
XC90	2009	AW50/51AW D	MP1	Clear code	
XC90	2009	AW50/51AW D	MP1	Data stream	
XC90	2009	AW50/51AW D	MP1	Actuation	
XC90	2009	AW50/51AW D	HCM	Sys. Info.	
XC90	2009	AW50/51AW D	HCM	Read code	
XC90	2009	AW50/51AW D	HCM	Clear code	
XC90	2009	AW50/51AW D	HCM	Special functions	Calibration of position sensor
XC90	2009	AW50/51AW D	KVM	Sys. Info.	
XC90	2009	AW50/51AW D	KVM	Read code	
XC90	2009	AW50/51AW D	KVM	Clear code	
XC90	2009	AW50/51AW D	KVM	Data stream	
XC90	2009	AW50/51AW D	KVM	Actuation	
XC90	2009	AW50/51AW D	RDAR	Sys. Info.	
XC90	2009	AW50/51AW D	RDAR	Read code	

model	year	type	system	function	subfunction
XC90	2009	AW50/51AW D	RDAR	Clear code	
XC90	2009	AW50/51AW D	RDAR	Data stream	
XC90	2009	AW50/51AW D	SUB	Sys. Info.	
XC90	2009	AW50/51AW D	SUB	Read code	
XC90	2009	AW50/51AW D	SUB	Clear code	
XC90	2009	AW50/51AW D	SUB	Data stream	
XC90	2009	AW50/51AW D	CVM	Sys. Info.	
XC90	2009	AW50/51AW D	CVM	Read code	
XC90	2009	AW50/51AW D	CVM	Clear code	
XC90	2009	AW50/51AW D	CVM	Data stream	
XC90	2009	AW50/51AW D	DABM	Sys. Info.	
XC90	2009	AW50/51AW D	DABM	Read code	
XC90	2009	AW50/51AW D	DABM	Clear code	
XC90	2009	AW50/51AW D	DABM	Data stream	
XC90	2009	AW50/51AW D	PAC	Sys. Info.	
XC90	2009	AW50/51AW D	PAC	Read code	
XC90	2009	AW50/51AW D	PAC	Clear code	
XC90	2009	AW50/51AW D	PAC	Data stream	
XC90	2009	AW50/51AW D	TRM	Sys. Info.	
XC90	2009	AW50/51AW D	TRM	Read code	
XC90	2009	AW50/51AW D	TRM	Clear code	
XC90	2009	AW50/51AW D	TRM	Data stream	
XC90	2010 - 2012	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90	2010 - 2012	B5244S4	ECM	Sys. Info.	
XC90	2010 - 2012	B5244S4	ECM	Read code	
XC90	2010 - 2012	B5244S4	ECM	Clear code	
XC90	2010 - 2012	B5244S4	ECM	Data stream	
XC90	2010 - 2012	B5244S4	ECM	Actuation	
XC90	2010 - 2012	B5244S4	ECM	Special functions	Resetting the adaptation values
XC90	2010 - 2012	B5244S5	ECM	Sys. Info.	
XC90	2010 - 2012	B5244S5	ECM	Read code	
XC90	2010 - 2012	B5244S5	ECM	Clear code	
XC90	2010 - 2012	B5244S5	ECM	Data stream	
XC90	2010 - 2012	B5244S5	ECM	Actuation	
XC90	2010 - 2012	B5244S5	ECM	Special functions	Resetting the adaptation values
XC90	2010 - 2012	B5244S7	ECM	Sys. Info.	
XC90	2010 - 2012	B5244S7	ECM	Read code	
XC90	2010 - 2012	B5244S7	ECM	Clear code	
XC90	2010 - 2012	B5244S7	ECM	Data stream	
XC90	2010 - 2012	B5244S7	ECM	Actuation	
XC90	2010 - 2012	B4204S3	ECM	Sys. Info.	
XC90	2010 - 2012	B4204S3	ECM	Read code	
XC90	2010 - 2012	B4204S3	ECM	Clear code	
XC90	2010 - 2012	B4204S3	ECM	Data stream	
XC90	2010 - 2012	B4204S3	ECM	Actuation	
XC90	2010 - 2012	B5254T2	ECM	Sys. Info.	
XC90	2010 - 2012	B5254T2	ECM	Read code	
XC90	2010 - 2012	B5254T2	ECM	Clear code	
XC90	2010 - 2012	B5254T2	ECM	Data stream	
XC90	2010 - 2012	B5254T2	ECM	Actuation	
XC90	2010 - 2012	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2010 - 2012	B5254T3	ECM	Sys. Info.	
XC90	2010 - 2012	B5254T3	ECM	Read code	
XC90	2010 - 2012	B5254T3	ECM	Clear code	
XC90	2010 - 2012	B5254T3	ECM	Data stream	

model	year	type	system	function	subfunction
XC90	2010 - 2012	B5254T3	ECM	Actuation	
XC90	2010 - 2012	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2010 - 2012	B5254T7	ECM	Sys. Info.	
XC90	2010 - 2012	B5254T7	ECM	Read code	
XC90	2010 - 2012	B5254T7	ECM	Clear code	
XC90	2010 - 2012	B5254T7	ECM	Data stream	
XC90	2010 - 2012	B5254T7	ECM	Actuation	
XC90	2010 - 2012	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2010 - 2012	B5204T5	ECM	Sys. Info.	
XC90	2010 - 2012	B5204T5	ECM	Read code	
XC90	2010 - 2012	B5204T5	ECM	Clear code	
XC90	2010 - 2012	B5204T5	ECM	Data stream	
XC90	2010 - 2012	B5204T5	ECM	Actuation	
XC90	2010 - 2012	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2010 - 2012	B6294T	ECM	Sys. Info.	
XC90	2010 - 2012	B6294T	ECM	Read code	
XC90	2010 - 2012	B6294T	ECM	Clear code	
XC90	2010 - 2012	B6294T	ECM	Data stream	
XC90	2010 - 2012	B6294T	ECM	Actuation	
XC90	2010 - 2012	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2010 - 2012	B4164S3	ECM	Sys. Info.	
XC90	2010 - 2012	B4164S3	ECM	Read code	
XC90	2010 - 2012	B4164S3	ECM	Clear code	
XC90	2010 - 2012	B4164S3	ECM	Data stream	
XC90	2010 - 2012	B4164S3	ECM	Actuation	
XC90	2010 - 2012	B4164S3	ECM	Special functions	Resetting the adaptation values
XC90	2010 - 2012	B5244T5	ECM	Sys. Info.	
XC90	2010 - 2012	B5244T5	ECM	Read code	
XC90	2010 - 2012	B5244T5	ECM	Clear code	
XC90	2010 - 2012	B5244T5	ECM	Data stream	
XC90	2010 - 2012	B5244T5	ECM	Actuation	
XC90	2010 - 2012	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
XC90	2010 - 2012	B4184S11	ECM	Sys. Info.	
XC90	2010 - 2012	B4184S11	ECM	Read code	
XC90	2010 - 2012	B4184S11	ECM	Clear code	
XC90	2010 - 2012	B4184S11	ECM	Data stream	
XC90	2010 - 2012	B4184S11	ECM	Actuation	
XC90	2010 - 2012	B4184S11	ECM	Special functions	Resetting the adaptation values
XC90	2010 - 2012	D5244T	Diesel Eng	Sys. Info.	
XC90	2010 - 2012	D5244T	Diesel Eng	Read code	
XC90	2010 - 2012	D5244T	Diesel Eng	Clear code	
XC90	2010 - 2012	D5244T	Diesel Eng	Data stream	
XC90	2010 - 2012	D5244T	Diesel Eng	Actuation	
XC90	2010 - 2012	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90	2010 - 2012	D5244T4	Diesel Eng	Sys. Info.	
XC90	2010 - 2012	D5244T4	Diesel Eng	Read code	
XC90	2010 - 2012	D5244T4	Diesel Eng	Clear code	
XC90	2010 - 2012	D5244T4	Diesel Eng	Data stream	
XC90	2010 - 2012	D5244T4	Diesel Eng	Actuation	
XC90	2010 - 2012	D5244T4	Diesel Eng	Freeze frame	
XC90	2010 - 2012	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90	2010 - 2012	D5244T4	Diesel Eng	Special functions	Resetting counter oil
XC90	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
XC90	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2010 - 2012	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
XC90	2010 - 2012	D5244T5	Diesel Eng	Sys. Info.	
XC90	2010 - 2012	D5244T5	Diesel Eng	Read code	
XC90	2010 - 2012	D5244T5	Diesel Eng	Clear code	
XC90	2010 - 2012	D5244T5	Diesel Eng	Data stream	
XC90	2010 - 2012	D5244T5	Diesel Eng	Actuation	
XC90	2010 - 2012	D5244T5	Diesel Eng	Freeze frame	
XC90	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter oil
XC90	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
XC90	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2010 - 2012	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
XC90	2010 - 2012	D5244T8	Diesel Eng	Sys. Info.	
XC90	2010 - 2012	D5244T8	Diesel Eng	Read code	
XC90	2010 - 2012	D5244T8	Diesel Eng	Clear code	
XC90	2010 - 2012	D5244T8	Diesel Eng	Data stream	

model	year	type	system	function	subfunction
XC90	2010 - 2012	D5244T8	Diesel Eng	Actuation	
XC90	2010 - 2012	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC90	2010 - 2012	D5244T8	Diesel Eng	Special functions	Resetting counter oil
XC90	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
XC90	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2010 - 2012	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
XC90	2010 - 2012	D4164T	Diesel Eng	Sys. Info.	
XC90	2010 - 2012	D4164T	Diesel Eng	Read code	
XC90	2010 - 2012	D4164T	Diesel Eng	Clear code	
XC90	2010 - 2012	D4164T	Diesel Eng	Data stream	
XC90	2010 - 2012	D4164T	Diesel Eng	Actuation	
XC90	2010 - 2012	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90	2010 - 2012	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90	2010 - 2012	D4164T	Diesel Eng	Special functions	Combustion of soot particles
XC90	2010 - 2012	D4204T	Diesel Eng	Sys. Info.	
XC90	2010 - 2012	D4204T	Diesel Eng	Read code	
XC90	2010 - 2012	D4204T	Diesel Eng	Clear code	
XC90	2010 - 2012	D4204T	Diesel Eng	Data stream	
XC90	2010 - 2012	D4204T	Diesel Eng	Actuation	
XC90	2010 - 2012	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
XC90	2010 - 2012	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
XC90	2010 - 2012	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
XC90	2010 - 2012	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC90	2010 - 2012	D4204T	Diesel Eng	Special functions	Combustion of soot particles
XC90	2010 - 2012	AW55-50/51SN	TCM	Sys. Info.	
XC90	2010 - 2012	AW55-50/51SN	TCM	Read code	
XC90	2010 - 2012	AW55-50/51SN	TCM	Clear code	
XC90	2010 - 2012	AW55-50/51SN	TCM	Data stream	
XC90	2010 - 2012	AW55-50/51SN	TCM	Actuation	
XC90	2010 - 2012	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
XC90	2010 - 2012	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2010 - 2012	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
XC90	2010 - 2012	4T65AWD	TCM	Sys. Info.	
XC90	2010 - 2012	4T65AWD	TCM	Read code	
XC90	2010 - 2012	4T65AWD	TCM	Clear code	
XC90	2010 - 2012	4T65AWD	TCM	Data stream	
XC90	2010 - 2012	4T65AWD	TCM	Actuation	
XC90	2010 - 2012	4T65AWD	TCM	Special functions	Reset adaptation to zero
XC90	2010 - 2012	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2010 - 2012	TF-80SC	TCM	Sys. Info.	
XC90	2010 - 2012	TF-80SC	TCM	Read code	
XC90	2010 - 2012	TF-80SC	TCM	Clear code	
XC90	2010 - 2012	TF-80SC	TCM	Data stream	
XC90	2010 - 2012	TF-80SC	TCM	Actuation	
XC90	2010 - 2012	TF-80SC	TCM	Freeze frame	
XC90	2010 - 2012	TF-80SC	TCM	Special functions	Reset adaptation to zero
XC90	2010 - 2012	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2010 - 2012	TF-80SC	TCM	Special functions	Calibration of position sensor
XC90	2010 - 2012	AW50/51AW D	TCM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	TCM	Read code	
XC90	2010 - 2012	AW50/51AW D	TCM	Clear code	
XC90	2010 - 2012	AW50/51AW D	TCM	Data stream	
XC90	2010 - 2012	AW50/51AW D	TCM	Actuation	
XC90	2010 - 2012	AW50/51AW D	TCM	Freeze frame	
XC90	2010 - 2012	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
XC90	2010 - 2012	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
XC90	2010 - 2012	AW50/51AW D	ABS	Sys. Info.	

model	year	type	system	function	subfunction
XC90	2010 - 2012	AW50/51AW D	ABS	Read code	
XC90	2010 - 2012	AW50/51AW D	ABS	Clear code	
XC90	2010 - 2012	AW50/51AW D	ABS	Data stream	
XC90	2010 - 2012	AW50/51AW D	ABS	Actuation	
XC90	2010 - 2012	AW50/51AW D	ABS	Freeze frame	
XC90	2010 - 2012	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
XC90	2010 - 2012	AW50/51AW D	ABS	Special functions	Reading off the configuration
XC90	2010 - 2012	AW50/51AW D	ABS	Special functions	Calibration
XC90	2010 - 2012	AW50/51AW D	SRS	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	SRS	Read code	
XC90	2010 - 2012	AW50/51AW D	SRS	Clear code	
XC90	2010 - 2012	AW50/51AW D	SRS	Data stream	
XC90	2010 - 2012	AW50/51AW D	SRS	Freeze frame	
XC90	2010 - 2012	AW50/51AW D	CEM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	CEM	Read code	
XC90	2010 - 2012	AW50/51AW D	CEM	Clear code	
XC90	2010 - 2012	AW50/51AW D	CEM	Data stream	
XC90	2010 - 2012	AW50/51AW D	CEM	Actuation	
XC90	2010 - 2012	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
XC90	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming control module
XC90	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting the factory settings
XC90	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
XC90	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting crash mode
XC90	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
XC90	2010 - 2012	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
XC90	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
XC90	2010 - 2012	AW50/51AW D	CEM	Special functions	Ignition switch key position
XC90	2010 - 2012	AW50/51AW D	UEM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	UEM	Read code	
XC90	2010 - 2012	AW50/51AW D	UEM	Clear code	
XC90	2010 - 2012	AW50/51AW D	UEM	Data stream	
XC90	2010 - 2012	AW50/51AW D	UEM	Actuation	
XC90	2010 - 2012	AW50/51AW D	UEM	Special functions	Configuration of the siren
XC90	2010 - 2012	AW50/51AW D	UEM	Special functions	Programming the control unit
XC90	2010 - 2012	AW50/51AW D	UEM	Special functions	Reading the programmed values
XC90	2010 - 2012	AW50/51AW D	REM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	REM	Read code	
XC90	2010 - 2012	AW50/51AW D	REM	Clear code	
XC90	2010 - 2012	AW50/51AW D	REM	Data stream	

model	year	type	system	function	subfunction
XC90	2010 - 2012	AW50/51AW D	REM	Actuation	
XC90	2010 - 2012	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90	2010 - 2012	AW50/51AW D	DIM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	DIM	Read code	
XC90	2010 - 2012	AW50/51AW D	DIM	Clear code	
XC90	2010 - 2012	AW50/51AW D	DIM	Data stream	
XC90	2010 - 2012	AW50/51AW D	DIM	Actuation	
XC90	2010 - 2012	AW50/51AW D	DIM	Freeze frame	
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of clock (*)
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming parking brake warning
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming instrument lighting
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Display of DSTC message
XC90	2010 - 2012	AW50/51AW D	DIM	Special functions	Read out programmed values
XC90	2010 - 2012	AW50/51AW D	PDM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	PDM	Read code	
XC90	2010 - 2012	AW50/51AW D	PDM	Clear code	
XC90	2010 - 2012	AW50/51AW D	PDM	Data stream	
XC90	2010 - 2012	AW50/51AW D	PDM	Actuation	
XC90	2010 - 2012	AW50/51AW D	PDM	Special functions	Initialize the window(*)
XC90	2010 - 2012	AW50/51AW D	PSM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	PSM	Read code	
XC90	2010 - 2012	AW50/51AW D	PSM	Clear code	
XC90	2010 - 2012	AW50/51AW D	PSM	Data stream	
XC90	2010 - 2012	AW50/51AW D	PSM	Actuation	
XC90	2010 - 2012	AW50/51AW D	DDM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	DDM	Read code	
XC90	2010 - 2012	AW50/51AW D	DDM	Clear code	
XC90	2010 - 2012	AW50/51AW D	DDM	Data stream	
XC90	2010 - 2012	AW50/51AW D	DDM	Actuation	

model	year	type	system	function	subfunction
XC90	2010 - 2012	AW50/51AW D	DDM	Special functions	Initialize the window(*)
XC90	2010 - 2012	AW50/51AW D	CCM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	CCM	Read code	
XC90	2010 - 2012	AW50/51AW D	CCM	Clear code	
XC90	2010 - 2012	AW50/51AW D	CCM	Data stream	
XC90	2010 - 2012	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
XC90	2010 - 2012	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
XC90	2010 - 2012	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90	2010 - 2012	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90	2010 - 2012	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
XC90	2010 - 2012	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC90	2010 - 2012	AW50/51AW D	CCM	Special functions	Programming the seat temperature
XC90	2010 - 2012	AW50/51AW D	PHM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	PHM	Read code	
XC90	2010 - 2012	AW50/51AW D	PHM	Clear code	
XC90	2010 - 2012	AW50/51AW D	PHM	Data stream	
XC90	2010 - 2012	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
XC90	2010 - 2012	AW50/51AW D	AUD	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	AUD	Read code	
XC90	2010 - 2012	AW50/51AW D	AUD	Clear code	
XC90	2010 - 2012	AW50/51AW D	MP2	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	MP2	Read code	
XC90	2010 - 2012	AW50/51AW D	MP2	Clear code	
XC90	2010 - 2012	AW50/51AW D	MP2	Data stream	
XC90	2010 - 2012	AW50/51AW D	MP2	Actuation	
XC90	2010 - 2012	AW50/51AW D	ATM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	ATM	Read code	
XC90	2010 - 2012	AW50/51AW D	ATM	Clear code	
XC90	2010 - 2012	AW50/51AW D	ATM	Data stream	
XC90	2010 - 2012	AW50/51AW D	DEM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	DEM	Read code	
XC90	2010 - 2012	AW50/51AW D	DEM	Clear code	
XC90	2010 - 2012	AW50/51AW D	DEM	Data stream	
XC90	2010 - 2012	AW50/51AW D	ICM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	ICM	Read code	
XC90	2010 - 2012	AW50/51AW D	ICM	Clear code	
XC90	2010 - 2012	AW50/51AW D	ICM	Data stream	
XC90	2010 - 2012	AW50/51AW D	ICM	Actuation	
XC90	2010 - 2012	AW50/51AW D	SAS	Sys. Info.	



model	year	type	system	function	subfunction
XC90	2010 - 2012	AW50/51AW D	SAS	Read code	
XC90	2010 - 2012	AW50/51AW D	SAS	Clear code	
XC90	2010 - 2012	AW50/51AW D	SAS	Data stream	
XC90	2010 - 2012	AW50/51AW D	MMM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	MMM	Read code	
XC90	2010 - 2012	AW50/51AW D	MMM	Clear code	
XC90	2010 - 2012	AW50/51AW D	MMM	Data stream	
XC90	2010 - 2012	AW50/51AW D	AEM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	AEM	Read code	
XC90	2010 - 2012	AW50/51AW D	AEM	Clear code	
XC90	2010 - 2012	AW50/51AW D	AEM	Data stream	
XC90	2010 - 2012	AW50/51AW D	AEM	Actuation	
XC90	2010 - 2012	AW50/51AW D	CPM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	CPM	Data stream	
XC90	2010 - 2012	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
XC90	2010 - 2012	AW50/51AW D	MP1	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	MP1	Read code	
XC90	2010 - 2012	AW50/51AW D	MP1	Clear code	
XC90	2010 - 2012	AW50/51AW D	MP1	Data stream	
XC90	2010 - 2012	AW50/51AW D	MP1	Actuation	
XC90	2010 - 2012	AW50/51AW D	HCM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	HCM	Read code	
XC90	2010 - 2012	AW50/51AW D	HCM	Clear code	
XC90	2010 - 2012	AW50/51AW D	HCM	Special functions	Calibration of position sensor
XC90	2010 - 2012	AW50/51AW D	KVM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	KVM	Read code	
XC90	2010 - 2012	AW50/51AW D	KVM	Clear code	
XC90	2010 - 2012	AW50/51AW D	KVM	Data stream	
XC90	2010 - 2012	AW50/51AW D	KVM	Actuation	
XC90	2010 - 2012	AW50/51AW D	RDAR	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	RDAR	Read code	
XC90	2010 - 2012	AW50/51AW D	RDAR	Clear code	
XC90	2010 - 2012	AW50/51AW D	RDAR	Data stream	
XC90	2010 - 2012	AW50/51AW D	SUB	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	SUB	Read code	
XC90	2010 - 2012	AW50/51AW D	SUB	Clear code	
XC90	2010 - 2012	AW50/51AW D	SUB	Data stream	
XC90	2010 - 2012	AW50/51AW D	CVM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	CVM	Read code	

model	year	type	system	function	subfunction
XC90	2010 - 2012	AW50/51AW D	CVM	Clear code	
XC90	2010 - 2012	AW50/51AW D	CVM	Data stream	
XC90	2010 - 2012	AW50/51AW D	DABM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	DABM	Read code	
XC90	2010 - 2012	AW50/51AW D	DABM	Clear code	
XC90	2010 - 2012	AW50/51AW D	DABM	Data stream	
XC90	2010 - 2012	AW50/51AW D	PAC	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	PAC	Read code	
XC90	2010 - 2012	AW50/51AW D	PAC	Clear code	
XC90	2010 - 2012	AW50/51AW D	PAC	Data stream	
XC90	2010 - 2012	AW50/51AW D	TRM	Sys. Info.	
XC90	2010 - 2012	AW50/51AW D	TRM	Read code	
XC90	2010 - 2012	AW50/51AW D	TRM	Clear code	
XC90	2010 - 2012	AW50/51AW D	TRM	Data stream	
XC90	2013	B6324S5	ECM	Sys. Info.	
XC90	2013	B6324S5	ECM	Read code	
XC90	2013	B6324S5	ECM	Clear code	
XC90	2013	B6324S5	ECM	Data stream	
XC90	2013	B6324S5	ECM	Actuation	
XC90	2013	B6324S5	ECM	Special functions	Resetting the adaptation values
XC90	2013	B5254T9	ECM	Sys. Info.	
XC90	2013	B5254T9	ECM	Read code	
XC90	2013	B5254T9	ECM	Clear code	
XC90	2013	B5254T9	ECM	Data stream	
XC90	2013	B5254T9	ECM	Actuation	
XC90	2013	B5254T9	ECM	Freeze frame	
XC90	2013	B5254T9	ECM	Special functions	Readiness Code
XC90	2013	B5254T9	ECM	Special functions	Adaptation of the throttle unit
XC90	2013	D5244T18	Diesel Eng	Sys. Info.	
XC90	2013	D5244T18	Diesel Eng	Read code	
XC90	2013	D5244T18	Diesel Eng	Clear code	
XC90	2013	D5244T18	Diesel Eng	Data stream	
XC90	2013	D5244T18	Diesel Eng	Actuation	
XC90	2013	D5244T18	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2013	D5244T18	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter.
XC90	2013	D5244T18	Diesel Eng	Special functions	Adaptation of throttle module
XC90	2013	D5244T18	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90	2013	D5244T18	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2013	D5244T18	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2013	D5244T18	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2013	D5244T18	Diesel Eng	Special functions	Checking injectors
XC90	2013	D5244T18	Diesel Eng	Special functions	Checking the oil level
XC90	2013	D5244T18	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation (EGR) valve
XC90	2013	AW50/51 AWD	TCM	Sys. Info.	
XC90	2013	AW50/51 AWD	TCM	Read code	
XC90	2013	AW50/51 AWD	TCM	Clear code	
XC90	2013	AW50/51 AWD	TCM	Data stream	
XC90	2013	AW50/51 AWD	TCM	Actuation	
XC90	2013	AW50/51 AWD	TCM	Freeze frame	
XC90	2013	AW50/51 AWD	TCM	Special functions	Resetting the adaptation
XC90	2013	AW50/51 AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change
XC90	2013	AW50/51 AWD	TCM	Special functions	Activating gear indication
XC90	2013	TF-80SC	TCM	Sys. Info.	
XC90	2013	TF-80SC	TCM	Read code	
XC90	2013	TF-80SC	TCM	Clear code	

model	year	type	system	function	subfunction
XC90	2013	TF-80SC	TCM	Data stream	
XC90	2013	TF-80SC	TCM	Actuation	
XC90	2013	TF-80SC	TCM	Special functions	Resetting the adaptation
XC90	2013	TF-80SC	TCM	Special functions	Resetting the counter for Transmission oil, change
XC90	2013	TF-80SC	TCM	Special functions	Calibration of position sensor
XC90	2013	TF-80SC	TCM	Special functions	Activating gear indicatin
XC90	2013	TF-80SC	TCM	Special functions	Activation of adaption
XC90	2013	TF-80SC AWD	TCM	Sys. Info.	
XC90	2013	TF-80SC AWD	TCM	Read code	
XC90	2013	TF-80SC AWD	TCM	Clear code	
XC90	2013	TF-80SC AWD	TCM	Data stream	
XC90	2013	TF-80SC AWD	TCM	Actuation	
XC90	2013	TF-80SC AWD	TCM	Special functions	Resetting adaptation
XC90	2013	TF-80SC AWD	TCM	Special functions	Resetting the Transmission fluid change counter
XC90	2013	TF-80SC AWD	TCM	Special functions	Calibration of gear position sensor
XC90	2013	TF-80SC AWD	TCM	Special functions	Activating gear indication
XC90	2013	TF-80SC AWD	TCM	Special functions	Control module adaptation
XC90	2013	TF-80SC AWD	ABS	Sys. Info.	
XC90	2013	TF-80SC AWD	ABS	Read code	
XC90	2013	TF-80SC AWD	ABS	Clear code	
XC90	2013	TF-80SC AWD	ABS	Data stream	
XC90	2013	TF-80SC AWD	ABS	Actuation	
XC90	2013	TF-80SC AWD	ABS	Freeze frame	
XC90	2013	TF-80SC AWD	ABS	Special functions	Checking brake light switch adjustment
XC90	2013	TF-80SC AWD	ABS	Special functions	Calibration(only vehicles with DSTC)
XC90	2013	TF-80SC AWD	SRS	Sys. Info.	
XC90	2013	TF-80SC AWD	SRS	Read code	
XC90	2013	TF-80SC AWD	SRS	Clear code	
XC90	2013	TF-80SC AWD	SRS	Data stream	
XC90	2013	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor(OWS)
XC90	2013	TF-80SC AWD	SRS	Special functions	Configuring the number of seats
XC90	2013	TF-80SC AWD	SRS	Special functions	Storing the ID number for the occupant weight sensor(OWS)
XC90	2013	TF-80SC AWD	SRS	Special functions	Resetting crash mode
XC90	2013	TF-80SC AWD	CEM	Sys. Info.	
XC90	2013	TF-80SC AWD	CEM	Read code	
XC90	2013	TF-80SC AWD	CEM	Clear code	
XC90	2013	TF-80SC AWD	CEM	Data stream	
XC90	2013	TF-80SC AWD	CEM	Actuation	
XC90	2013	TF-80SC AWD	CEM	Special functions	Resetting low voltage counters
XC90	2013	TF-80SC AWD	CEM	Special functions	Resetting crash mode
XC90	2013	TF-80SC AWD	UEM	Sys. Info.	
XC90	2013	TF-80SC AWD	UEM	Read code	
XC90	2013	TF-80SC AWD	UEM	Clear code	
XC90	2013	TF-80SC AWD	UEM	Data stream	
XC90	2013	TF-80SC AWD	UEM	Actuation	
XC90	2013	TF-80SC AWD	UEM	Special functions	Configuration of the siren
XC90	2013	TF-80SC AWD	UEM	Special functions	Reading the programmed values
XC90	2013	TF-80SC AWD	UEM	Special functions	Activating and reading off sun roof parameters
XC90	2013	TF-80SC AWD	UEM	Special functions	Read out the stored ID numbers for the tyre pressure sensors
XC90	2013	TF-80SC AWD	REM	Sys. Info.	
XC90	2013	TF-80SC AWD	REM	Read code	
XC90	2013	TF-80SC AWD	REM	Clear code	
XC90	2013	TF-80SC AWD	REM	Data stream	
XC90	2013	TF-80SC AWD	REM	Actuation	
XC90	2013	TF-80SC AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90	2013	TF-80SC AWD	REM	Special functions	Reading off the alarm cause
XC90	2013	TF-80SC AWD	REM	Special functions	Programming of Parking Assistance Module(PAM)
XC90	2013	TF-80SC AWD	DIM	Sys. Info.	
XC90	2013	TF-80SC AWD	DIM	Read code	
XC90	2013	TF-80SC AWD	DIM	Clear code	
XC90	2013	TF-80SC AWD	DIM	Data stream	
XC90	2013	TF-80SC AWD	DIM	Actuation	
XC90	2013	TF-80SC AWD	DIM	Freeze frame	
XC90	2013	TF-80SC AWD	DIM	Special functions	Testing all needles and lamps in the dashboard
XC90	2013	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90	2013	TF-80SC AWD	DIM	Special functions	Reading off programmed values
XC90	2013	TF-80SC AWD	DIM	Special functions	Programming the driver information module (DIM)
XC90	2013	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator (SRI)
XC90	2013	TF-80SC AWD	DIM	Special functions	Display of DSTC message
XC90	2013	TF-80SC AWD	PDM	Sys. Info.	
XC90	2013	TF-80SC AWD	PDM	Read code	
XC90	2013	TF-80SC AWD	PDM	Clear code	
XC90	2013	TF-80SC AWD	PDM	Data stream	
XC90	2013	TF-80SC AWD	PDM	Actuation	
XC90	2013	TF-80SC AWD	PDM	Special functions	Iniializing the window position

model	year	type	system	function	subfunction
XC90	2013	TF-80SC AWD	PDM	Special functions	Programming soft stop
XC90	2013	TF-80SC AWD	PSM	Sys. Info.	
XC90	2013	TF-80SC AWD	PSM	Read code	
XC90	2013	TF-80SC AWD	PSM	Clear code	
XC90	2013	TF-80SC AWD	PSM	Data stream	
XC90	2013	TF-80SC AWD	PSM	Actuation	
XC90	2013	TF-80SC AWD	PSM	Special functions	Programming the seat temperature(CEM)
XC90	2013	TF-80SC AWD	PSM	Special functions	Checking current values
XC90	2013	TF-80SC AWD	PSM	Special functions	Programming the remote control setting
XC90	2013	TF-80SC AWD	DDM	Sys. Info.	
XC90	2013	TF-80SC AWD	DDM	Read code	
XC90	2013	TF-80SC AWD	DDM	Clear code	
XC90	2013	TF-80SC AWD	DDM	Data stream	
XC90	2013	TF-80SC AWD	DDM	Actuation	
XC90	2013	TF-80SC AWD	DDM	Special functions	Iniializing the window position
XC90	2013	TF-80SC AWD	DDM	Special functions	Programming the remote control setting
XC90	2013	TF-80SC AWD	CCM	Sys. Info.	
XC90	2013	TF-80SC AWD	CCM	Read code	
XC90	2013	TF-80SC AWD	CCM	Clear code	
XC90	2013	TF-80SC AWD	CCM	Data stream	
XC90	2013	TF-80SC AWD	CCM	Special functions	Calibrating the climate control module(CCM)
XC90	2013	TF-80SC AWD	CCM	Special functions	Reading off the programmed parameters in the climate control module
XC90	2013	TF-80SC AWD	CCM	Special functions	Programming the climate control module(CCM)
XC90	2013	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
XC90	2013	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow,status
XC90	2013	TF-80SC AWD	PHM	Sys. Info.	
XC90	2013	TF-80SC AWD	PHM	Read code	
XC90	2013	TF-80SC AWD	PHM	Clear code	
XC90	2013	TF-80SC AWD	PHM	Data stream	
XC90	2013	TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
XC90	2013	TF-80SC AWD	AUD	Sys. Info.	
XC90	2013	TF-80SC AWD	AUD	Read code	
XC90	2013	TF-80SC AWD	AUD	Clear code	
XC90	2013	TF-80SC AWD	AUD	Actuation	
XC90	2013	TF-80SC AWD	DEM	Sys. Info.	
XC90	2013	TF-80SC AWD	DEM	Read code	
XC90	2013	TF-80SC AWD	DEM	Clear code	
XC90	2013	TF-80SC AWD	DEM	Data stream	
XC90	2013	TF-80SC AWD	ICM	Sys. Info.	
XC90	2013	TF-80SC AWD	ICM	Read code	
XC90	2013	TF-80SC AWD	ICM	Clear code	
XC90	2013	TF-80SC AWD	ICM	Data stream	
XC90	2013	TF-80SC AWD	ICM	Actuation	
XC90	2013	TF-80SC AWD	SAS	Sys. Info.	
XC90	2013	TF-80SC AWD	SAS	Read code	
XC90	2013	TF-80SC AWD	SAS	Clear code	
XC90	2013	TF-80SC AWD	SAS	Data stream	
XC90	2013	TF-80SC AWD	AEM	Sys. Info.	
XC90	2013	TF-80SC AWD	AEM	Read code	
XC90	2013	TF-80SC AWD	AEM	Clear code	
XC90	2013	TF-80SC AWD	AEM	Data stream	
XC90	2013	TF-80SC AWD	AEM	Actuation	
XC90	2013	TF-80SC AWD	CPM	Sys. Info.	
XC90	2013	TF-80SC AWD	CPM	Data stream	
XC90	2013	TF-80SC AWD	CPM	Special functions	Programming the additional and parking heater
XC90	2013	TF-80SC AWD	HCM	Sys. Info.	
XC90	2013	TF-80SC AWD	HCM	Read code	
XC90	2013	TF-80SC AWD	HCM	Clear code	
XC90	2013	TF-80SC AWD	HCM	Data stream	
XC90	2013	TF-80SC AWD	HCM	Special functions	Quick-test of HCM
XC90	2013	TF-80SC AWD	RDAR	Sys. Info.	
XC90	2013	TF-80SC AWD	RDAR	Read code	
XC90	2013	TF-80SC AWD	RDAR	Clear code	
XC90	2013	TF-80SC AWD	RDAR	Data stream	
XC90	2013	TF-80SC AWD	PAC	Sys. Info.	
XC90	2013	TF-80SC AWD	PAC	Special functions	Activation of installation image
XC90	2013	TF-80SC AWD	AUD	Sys. Info.	
XC90	2013	TF-80SC AWD	AUD	Read code	
XC90	2013	TF-80SC AWD	AUD	Clear code	
XC90	2013	TF-80SC AWD	AUD	Actuation	
XC90	2013	TF-80SC AWD	BPM	Sys. Info.	
XC90	2013	TF-80SC AWD	BPM	Read code	
XC90	2013	TF-80SC AWD	BPM	Clear code	
XC90	2013	TF-80SC AWD	BPM	Data stream	
XC90	2013	TF-80SC AWD	IAM	Sys. Info.	
XC90	2013	TF-80SC AWD	IAM	Read code	

model	year	type	system	function	subfunction
XC90	2013	TF-80SC AWD	IAM	Clear code	
XC90	2013	TF-80SC AWD	IAM	Data stream	
XC90	2013	TF-80SC AWD	IAM	Actuation	
XC90	2013	TF-80SC AWD	GPS	Sys. Info.	
XC90	2013	TF-80SC AWD	GPS	Read code	
XC90	2013	TF-80SC AWD	GPS	Clear code	
XC90	2013	TF-80SC AWD	GPS	Data stream	
XC90	2013	TF-80SC AWD	GPS	Actuation	
XC90	2013	TF-80SC AWD	MMM	Sys. Info.	
XC90	2013	TF-80SC AWD	MMM	Read code	
XC90	2013	TF-80SC AWD	MMM	Clear code	
XC90	2013	TF-80SC AWD	AUU	Sys. Info.	
XC90	2013	TF-80SC AWD	AUU	Read code	
XC90	2013	TF-80SC AWD	AUU	Clear code	
XC90	2013	TF-80SC AWD	AUU	Data stream	
XC90	2014	B6324S5	ECM	Sys. Info.	
XC90	2014	B6324S5	ECM	Read code	
XC90	2014	B6324S5	ECM	Clear code	
XC90	2014	B6324S5	ECM	Data stream	
XC90	2014	B6324S5	ECM	Actuation	
XC90	2014	B6324S5	ECM	Special functions	Resetting the adaptation values
XC90	2014	B5254T9	ECM	Sys. Info.	
XC90	2014	B5254T9	ECM	Read code	
XC90	2014	B5254T9	ECM	Clear code	
XC90	2014	B5254T9	ECM	Data stream	
XC90	2014	B5254T9	ECM	Actuation	
XC90	2014	B5254T9	ECM	Freeze frame	
XC90	2014	B5254T9	ECM	Special functions	Readiness Code Adaptation of the throttle unit
XC90	2014	D5244T18	Diesel Eng	Sys. Info.	
XC90	2014	D5244T18	Diesel Eng	Read code	
XC90	2014	D5244T18	Diesel Eng	Clear code	
XC90	2014	D5244T18	Diesel Eng	Data stream	
XC90	2014	D5244T18	Diesel Eng	Actuation	
XC90	2014	D5244T18	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2014	D5244T18	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter.
XC90	2014	D5244T18	Diesel Eng	Special functions	Adaptation of throttle module
XC90	2014	D5244T18	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC90	2014	D5244T18	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2014	D5244T18	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2014	D5244T18	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2014	D5244T18	Diesel Eng	Special functions	Checking injectors
XC90	2014	D5244T18	Diesel Eng	Special functions	Checking the oil level
XC90	2014	D5244T18	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation (EGR) valve
XC90	2014	AW50/51 AWD	TCM	Sys. Info.	
XC90	2014	AW50/51 AWD	TCM	Read code	
XC90	2014	AW50/51 AWD	TCM	Clear code	
XC90	2014	AW50/51 AWD	TCM	Data stream	
XC90	2014	AW50/51 AWD	TCM	Actuation	
XC90	2014	AW50/51 AWD	TCM	Freeze frame	
XC90	2014	AW50/51 AWD	TCM	Special functions	Resetting the adaptation
XC90	2014	AW50/51 AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change
XC90	2014	AW50/51 AWD	TCM	Special functions	Activating gear indication
XC90	2014	TF-80SC	TCM	Sys. Info.	
XC90	2014	TF-80SC	TCM	Read code	
XC90	2014	TF-80SC	TCM	Clear code	
XC90	2014	TF-80SC	TCM	Data stream	
XC90	2014	TF-80SC	TCM	Actuation	
XC90	2014	TF-80SC	TCM	Special functions	Resetting the adaptation Resetting the counter for Transmission oil, change position sensor Calibration of Activating gear indicatin Activation of adaption
XC90	2014	TF-80SC AWD	TCM	Sys. Info.	
XC90	2014	TF-80SC AWD	TCM	Read code	
XC90	2014	TF-80SC AWD	TCM	Clear code	
XC90	2014	TF-80SC AWD	TCM	Data stream	
XC90	2014	TF-80SC AWD	TCM	Actuation	
XC90	2014	TF-80SC AWD	TCM	Special functions	Resetting adaptation
XC90	2014	TF-80SC AWD	TCM	Special functions	Resetting the Transmission fluid change counter
XC90	2014	TF-80SC AWD	TCM	Special functions	Calibration of gear position sensor

model	year	type	system	function	subfunction
XC90	2014	TF-80SC AWD	TCM	Special functions	Activating gear indication
XC90	2014	TF-80SC AWD	TCM	Special functions	Control module adaptation
XC90	2014	TF-80SC AWD	ABS	Sys. Info.	
XC90	2014	TF-80SC AWD	ABS	Read code	
XC90	2014	TF-80SC AWD	ABS	Clear code	
XC90	2014	TF-80SC AWD	ABS	Data stream	
XC90	2014	TF-80SC AWD	ABS	Actuation	
XC90	2014	TF-80SC AWD	ABS	Special functions	Checking brake light switch adjustment
XC90	2014	TF-80SC AWD	ABS	Special functions	Calibration(only vehicles with DSTC)
XC90	2014	TF-80SC AWD	SRS	Sys. Info.	
XC90	2014	TF-80SC AWD	SRS	Read code	
XC90	2014	TF-80SC AWD	SRS	Clear code	
XC90	2014	TF-80SC AWD	SRS	Data stream	
XC90	2014	TF-80SC AWD	SRS	Freeze frame	
XC90	2014	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor(OWS)
XC90	2014	TF-80SC AWD	SRS	Special functions	Configuring the number of seats
XC90	2014	TF-80SC AWD	SRS	Special functions	Storing the ID number for the occupant weight sensor(OWS)
XC90	2014	TF-80SC AWD	SRS	Special functions	Resetting crash mode
XC90	2014	TF-80SC AWD	CEM	Sys. Info.	
XC90	2014	TF-80SC AWD	CEM	Read code	
XC90	2014	TF-80SC AWD	CEM	Clear code	
XC90	2014	TF-80SC AWD	CEM	Data stream	
XC90	2014	TF-80SC AWD	CEM	Actuation	
XC90	2014	TF-80SC AWD	UEM	Sys. Info.	
XC90	2014	TF-80SC AWD	UEM	Read code	
XC90	2014	TF-80SC AWD	UEM	Clear code	
XC90	2014	TF-80SC AWD	UEM	Data stream	
XC90	2014	TF-80SC AWD	UEM	Actuation	
XC90	2014	TF-80SC AWD	UEM	Special functions	Configuration of the siren
XC90	2014	TF-80SC AWD	UEM	Special functions	Reading the programmed values
XC90	2014	TF-80SC AWD	UEM	Special functions	Activating and reading off sun roof parameters
XC90	2014	TF-80SC AWD	UEM	Special functions	Read out the stored ID numbers for the tyre pressure sensors
XC90	2014	TF-80SC AWD	REM	Sys. Info.	
XC90	2014	TF-80SC AWD	REM	Read code	
XC90	2014	TF-80SC AWD	REM	Clear code	
XC90	2014	TF-80SC AWD	REM	Data stream	
XC90	2014	TF-80SC AWD	REM	Actuation	
XC90	2014	TF-80SC AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90	2014	TF-80SC AWD	REM	Special functions	Reading off the alarm cause
XC90	2014	TF-80SC AWD	REM	Special functions	Programming of Parking Assistance Module(PAM)
XC90	2014	TF-80SC AWD	DiM	Sys. Info.	
XC90	2014	TF-80SC AWD	DiM	Read code	
XC90	2014	TF-80SC AWD	DiM	Clear code	
XC90	2014	TF-80SC AWD	DiM	Data stream	
XC90	2014	TF-80SC AWD	DiM	Actuation	
XC90	2014	TF-80SC AWD	DiM	Freeze frame	
XC90	2014	TF-80SC AWD	DiM	Special functions	Testing all needles and lamps in the dashboard
XC90	2014	TF-80SC AWD	DiM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90	2014	TF-80SC AWD	DiM	Special functions	Reading off programmed values
XC90	2014	TF-80SC AWD	DIM	Special functions	Programming the driver information module (DIM)
XC90	2014	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator (SRI)
XC90	2014	TF-80SC AWD	DIM	Special functions	Display of DSTC message
XC90	2014	TF-80SC AWD	PDM	Sys. Info.	
XC90	2014	TF-80SC AWD	PDM	Read code	
XC90	2014	TF-80SC AWD	PDM	Clear code	
XC90	2014	TF-80SC AWD	PDM	Data stream	
XC90	2014	TF-80SC AWD	PDM	Actuation	
XC90	2014	TF-80SC AWD	PDM	Special functions	Iniializing the window position      Programming soft stop
XC90	2014	TF-80SC AWD	PSM	Sys. Info.	
XC90	2014	TF-80SC AWD	PSM	Read code	
XC90	2014	TF-80SC AWD	PSM	Clear code	
XC90	2014	TF-80SC AWD	PSM	Data stream	
XC90	2014	TF-80SC AWD	PSM	Actuation	
XC90	2014	TF-80SC AWD	PSM	Special functions	Programming the seat temperature(CEM)
XC90	2014	TF-80SC AWD	PSM	Special functions	Checking current values
XC90	2014	TF-80SC AWD	PSM	Special functions	Programming the remote control setting
XC90	2014	TF-80SC AWD	DDM	Sys. Info.	
XC90	2014	TF-80SC AWD	DDM	Read code	
XC90	2014	TF-80SC AWD	DDM	Clear code	
XC90	2014	TF-80SC AWD	DDM	Data stream	
XC90	2014	TF-80SC AWD	DDM	Actuation	
XC90	2014	TF-80SC AWD	DDM	Special functions	Iniializing the window position
XC90	2014	TF-80SC AWD	DDM	Special functions	Programming the remote control setting
XC90	2014	TF-80SC AWD	CCM	Sys. Info.	

model	year	type	system	function	subfunction
XC90	2014	TF-80SC AWD	CCM	Read code	
XC90	2014	TF-80SC AWD	CCM	Clear code	
XC90	2014	TF-80SC AWD	CCM	Data stream	
XC90	2014	TF-80SC AWD	CCM	Special functions	Calibrating the climate control module(CCM)
XC90	2014	TF-80SC AWD	CCM	Special functions	Reading off the programmed parameters in the climate control module
XC90	2014	TF-80SC AWD	CCM	Special functions	Programming the climate control module(CCM)
XC90	2014	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
XC90	2014	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow,status
XC90	2014	TF-80SC AWD	PHM	Sys. Info.	
XC90	2014	TF-80SC AWD	PHM	Read code	
XC90	2014	TF-80SC AWD	PHM	Clear code	
XC90	2014	TF-80SC AWD	PHM	Data stream	
XC90	2014	TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
XC90	2014	TF-80SC AWD	AUD	Sys. Info.	
XC90	2014	TF-80SC AWD	AUD	Read code	
XC90	2014	TF-80SC AWD	AUD	Clear code	
XC90	2014	TF-80SC AWD	AUD	Actuation	
XC90	2014	TF-80SC AWD	DEM	Sys. Info.	
XC90	2014	TF-80SC AWD	DEM	Read code	
XC90	2014	TF-80SC AWD	DEM	Clear code	
XC90	2014	TF-80SC AWD	DEM	Data stream	
XC90	2014	TF-80SC AWD	ICM	Sys. Info.	
XC90	2014	TF-80SC AWD	ICM	Read code	
XC90	2014	TF-80SC AWD	ICM	Clear code	
XC90	2014	TF-80SC AWD	ICM	Data stream	
XC90	2014	TF-80SC AWD	ICM	Actuation	
XC90	2014	TF-80SC AWD	SAS	Sys. Info.	
XC90	2014	TF-80SC AWD	SAS	Read code	
XC90	2014	TF-80SC AWD	SAS	Clear code	
XC90	2014	TF-80SC AWD	SAS	Data stream	
XC90	2014	TF-80SC AWD	AEM	Sys. Info.	
XC90	2014	TF-80SC AWD	AEM	Read code	
XC90	2014	TF-80SC AWD	AEM	Clear code	
XC90	2014	TF-80SC AWD	AEM	Data stream	
XC90	2014	TF-80SC AWD	AEM	Actuation	
XC90	2014	TF-80SC AWD	CPM	Sys. Info.	
XC90	2014	TF-80SC AWD	CPM	Data stream	
XC90	2014	TF-80SC AWD	CPM	Special functions	Programming the additional and parking heater
XC90	2014	TF-80SC AWD	HCM	Sys. Info.	
XC90	2014	TF-80SC AWD	HCM	Read code	
XC90	2014	TF-80SC AWD	HCM	Clear code	
XC90	2014	TF-80SC AWD	HCM	Data stream	
XC90	2014	TF-80SC AWD	HCM	Special functions	Quick-test of HCM
XC90	2014	TF-80SC AWD	RDAR	Sys. Info.	
XC90	2014	TF-80SC AWD	RDAR	Read code	
XC90	2014	TF-80SC AWD	RDAR	Clear code	
XC90	2014	TF-80SC AWD	RDAR	Data stream	
XC90	2014	TF-80SC AWD	PAC	Sys. Info.	
XC90	2014	TF-80SC AWD	PAC	Special functions	Activation of installation image
XC90	2014	TF-80SC AWD	AUD	Sys. Info.	
XC90	2014	TF-80SC AWD	AUD	Read code	
XC90	2014	TF-80SC AWD	AUD	Clear code	
XC90	2014	TF-80SC AWD	AUD	Actuation	
XC90	2014	TF-80SC AWD	BPM	Sys. Info.	
XC90	2014	TF-80SC AWD	BPM	Read code	
XC90	2014	TF-80SC AWD	BPM	Clear code	
XC90	2014	TF-80SC AWD	BPM	Data stream	
XC90	2014	TF-80SC AWD	IAM	Sys. Info.	
XC90	2014	TF-80SC AWD	IAM	Read code	
XC90	2014	TF-80SC AWD	IAM	Clear code	
XC90	2014	TF-80SC AWD	IAM	Data stream	
XC90	2014	TF-80SC AWD	IAM	Actuation	
XC90	2014	TF-80SC AWD	GPS	Sys. Info.	
XC90	2014	TF-80SC AWD	GPS	Read code	
XC90	2014	TF-80SC AWD	GPS	Clear code	
XC90	2014	TF-80SC AWD	GPS	Data stream	
XC90	2014	TF-80SC AWD	GPS	Actuation	
XC90	2014	TF-80SC AWD	MMM	Sys. Info.	
XC90	2014	TF-80SC AWD	MMM	Read code	
XC90	2014	TF-80SC AWD	MMM	Clear code	
XC90	2014	TF-80SC AWD	AUU	Sys. Info.	
XC90	2014	TF-80SC AWD	AUU	Read code	
XC90	2014	TF-80SC AWD	AUU	Clear code	
XC90	2014	TF-80SC AWD	AUU	Data stream	
XC90	2015	B632455	ECM	Sys. Info.	
XC90	2015	B632455	ECM	Read code	

model	year	type	system	function	subfunction
XC90	2015	B6324S5	ECM	Clear code	
XC90	2015	B6324S5	ECM	Data stream	
XC90	2015	B6324S5	ECM	Actuation	
XC90	2015	B6324S5	ECM	Special functions	Resetting the adaptation values
XC90	2015	B5254T9	ECM	Sys. Info.	
XC90	2015	B5254T9	ECM	Read code	
XC90	2015	B5254T9	ECM	Clear code	
XC90	2015	B5254T9	ECM	Data stream	
XC90	2015	B5254T9	ECM	Actuation	
XC90	2015	B5254T9	ECM	Freeze frame	
XC90	2015	D5244T18	Diesel Eng	Sys. Info.	
XC90	2015	D5244T18	Diesel Eng	Read code	
XC90	2015	D5244T18	Diesel Eng	Clear code	
XC90	2015	D5244T18	Diesel Eng	Data stream	
XC90	2015	D5244T18	Diesel Eng	Actuation	
XC90	2015	D5244T18	Diesel Eng	Special functions	Resetting counter particle filter
XC90	2015	D5244T18	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter.
XC90	2015	D5244T18	Diesel Eng	Special functions	Adaptation of throttle moduleAdaptation of swivel channel throttle
XC90	2015	D5244T18	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC90	2015	D5244T18	Diesel Eng	Special functions	Adaptation of turbo control motor
XC90	2015	D5244T18	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC90	2015	D5244T18	Diesel Eng	Special functions	Checking injectorsChecking the oil level
XC90	2015	D5244T18	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation (EGR) valve
XC90	2015	D5244T18	CCM	Sys. Info.	
XC90	2015	D5244T18	CCM	Read code	
XC90	2015	D5244T18	CCM	Clear code	
XC90	2015	D5244T18	CCM	Data stream	
XC90	2015	D5244T18	CCM	Special functions	Calibrating the climate control module(CCM)
XC90	2015	D5244T18	CCM	Special functions	Identifying components on the LIN network that belong to the climate control system(CCM)
XC90	2015	D5244T18	CCM	Special functions	Reading off the programmed parameters in the climate control module
XC90	2015	D5244T18	CCM	Special functions	Programming the climate control module(CCM)
XC90	2015	D5244T18	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
XC90	2015	D5244T18	CCM	Special functions	Compartment fan afterblow,status
XC90	2015	D5244T18	AEM	Sys. Info.	
XC90	2015	D5244T18	AEM	Read code	
XC90	2015	D5244T18	AEM	Clear code	
XC90	2015	D5244T18	AEM	Data stream	
XC90	2015	D5244T18	AEM	Actuation	
XC90	2015	D5244T18	AUD	Sys. Info.	
XC90	2015	D5244T18	AUD	Read code	
XC90	2015	D5244T18	AUD	Clear code	
XC90	2015	D5244T18	AUU	Sys. Info.	
XC90	2015	D5244T18	AUU	Read code	
XC90	2015	D5244T18	AUU	Clear code	
XC90	2015	D5244T18	AUU	Data stream	
XC90	2015	D5244T18	ABS	Sys. Info.	
XC90	2015	D5244T18	ABS	Read code	
XC90	2015	D5244T18	ABS	Clear code	
XC90	2015	D5244T18	ABS	Data stream	
XC90	2015	D5244T18	ABS	Actuation	
XC90	2015	D5244T18	ABS	Freeze frame	
XC90	2015	D5244T18	ABS	Special functions	Checking brake light switch adjustment
XC90	2015	D5244T18	ABS	Special functions	Calibration(only vehicles with DSTC)
XC90	2015	D5244T18	CEM	Sys. Info.	
XC90	2015	D5244T18	CEM	Read code	
XC90	2015	D5244T18	CEM	Clear code	
XC90	2015	D5244T18	CEM	Data stream	
XC90	2015	D5244T18	CEM	Actuation	
XC90	2015	D5244T18	CEM	Special functions	Resetting low voltage counters
XC90	2015	D5244T18	CEM	Special functions	Resetting crash mode
XC90	2015	D5244T18	CEM	Special functions	Programming of short flash sequence
XC90	2015	D5244T18	CPM	Sys. Info.	
XC90	2015	D5244T18	CPM	Read code	
XC90	2015	D5244T18	CPM	Clear code	
XC90	2015	D5244T18	CPM	Data stream	
XC90	2015	D5244T18	CPM	Special functions	Activating components and functions
XC90	2015	D5244T18	CPM	Special functions	Programming the additional and parking heater
XC90	2015	D5244T18	DDM	Sys. Info.	
XC90	2015	D5244T18	DDM	Read code	
XC90	2015	D5244T18	DDM	Clear code	
XC90	2015	D5244T18	DDM	Data stream	
XC90	2015	D5244T18	DDM	Actuation	
XC90	2015	D5244T18	DDM	Special functions	Iniializing the window position
XC90	2015	D5244T18	DDM	Special functions	Programming the remote control setting



model	year	type	system	function	subfunction
XC90	2015	D5244T18	DEM	Sys. Info.	
XC90	2015	D5244T18	DEM	Read code	
XC90	2015	D5244T18	DEM	Clear code	
XC90	2015	D5244T18	DEM	Data stream	
XC90	2015	D5244T18	DIM	Sys. Info.	
XC90	2015	D5244T18	DIM	Read code	
XC90	2015	D5244T18	DIM	Clear code	
XC90	2015	D5244T18	DIM	Data stream	
XC90	2015	D5244T18	DIM	Actuation	
XC90	2015	D5244T18	DIM	Freeze frame	
XC90	2015	D5244T18	DIM	Special functions	Testing all needles and lamps in the dashboard
XC90	2015	D5244T18	DIM	Special functions	Programming the audible acknowledgement signal, seat belt reminder
XC90	2015	D5244T18	DIM	Special functions	Reading off programmed values
XC90	2015	D5244T18	DIM	Special functions	Programming the driver information module (DIM)
XC90	2015	D5244T18	DIM	Special functions	Resetting the service reminder indicator (SRI)
XC90	2015	D5244T18	DIM	Special functions	Display of DSTC message
XC90	2015	D5244T18	GPS	Sys. Info.	
XC90	2015	D5244T18	GPS	Read code	
XC90	2015	D5244T18	GPS	Clear code	
XC90	2015	D5244T18	GPS	Data stream	
XC90	2015	D5244T18	GPS	Actuation	
XC90	2015	D5244T18	HCM	Sys. Info.	
XC90	2015	D5244T18	HCM	Read code	
XC90	2015	D5244T18	HCM	Clear code	
XC90	2015	D5244T18	HCM	Data stream	
XC90	2015	D5244T18	IAM	Sys. Info.	
XC90	2015	D5244T18	IAM	Read code	
XC90	2015	D5244T18	IAM	Clear code	
XC90	2015	D5244T18	IAM	Data stream	
XC90	2015	D5244T18	IAM	Actuation	
XC90	2015	D5244T18	ICM	Sys. Info.	
XC90	2015	D5244T18	ICM	Read code	
XC90	2015	D5244T18	ICM	Clear code	
XC90	2015	D5244T18	ICM	Data stream	
XC90	2015	D5244T18	ICM	Actuation	
XC90	2015	D5244T18	MMM	Sys. Info.	
XC90	2015	D5244T18	MMM	Read code	
XC90	2015	D5244T18	MMM	Clear code	
XC90	2015	D5244T18	MMM	Data stream	
XC90	2015	D5244T18	MMM	Actuation	
XC90	2015	D5244T18	PAC	Sys. Info.	
XC90	2015	D5244T18	PAC	Read code	
XC90	2015	D5244T18	PAC	Special functions	Activation of installation image
XC90	2015	D5244T18	PDM	Sys. Info.	
XC90	2015	D5244T18	PDM	Read code	
XC90	2015	D5244T18	PDM	Clear code	
XC90	2015	D5244T18	PDM	Data stream	
XC90	2015	D5244T18	PDM	Actuation	
XC90	2015	D5244T18	PDM	Special functions	Iniializing the window position
XC90	2015	D5244T18	PDM	Special functions	Programming soft stop
XC90	2015	D5244T18	PHM	Sys. Info.	
XC90	2015	D5244T18	PHM	Read code	
XC90	2015	D5244T18	PHM	Clear code	
XC90	2015	D5244T18	PHM	Data stream	
XC90	2015	D5244T18	PHM	Special functions	Reinstalling the reserve battery
XC90	2015	D5244T18	PSM	Sys. Info.	
XC90	2015	D5244T18	PSM	Read code	
XC90	2015	D5244T18	PSM	Clear code	
XC90	2015	D5244T18	PSM	Data stream	
XC90	2015	D5244T18	PSM	Actuation	
XC90	2015	D5244T18	PSM	Special functions	Programming the seat temperature(CEM)
XC90	2015	D5244T18	PSM	Special functions	Checking current values
XC90	2015	D5244T18	PSM	Special functions	Programming the remote control setting
XC90	2015	D5244T18	RDAR	Sys. Info.	
XC90	2015	D5244T18	RDAR	Read code	
XC90	2015	D5244T18	RDAR	Clear code	
XC90	2015	D5244T18	RDAR	Data stream	
XC90	2015	D5244T18	REM	Sys. Info.	
XC90	2015	D5244T18	REM	Read code	
XC90	2015	D5244T18	REM	Clear code	
XC90	2015	D5244T18	REM	Data stream	
XC90	2015	D5244T18	REM	Actuation	
XC90	2015	D5244T18	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90	2015	D5244T18	REM	Special functions	Reading off the alarm cause
XC90	2015	D5244T18	REM	Special functions	Programming of Parking Assistance Module(PAM)
XC90	2015	D5244T18	SAS	Sys. Info.	
XC90	2015	D5244T18	SAS	Read code	

model	year	type	system	function	subfunction
XC90	2015	D5244T18	SAS	Clear code	
XC90	2015	D5244T18	SAS	Data stream	
XC90	2015	D5244T18	SRS	Sys. Info.	
XC90	2015	D5244T18	SRS	Read code	
XC90	2015	D5244T18	SRS	Clear code	
XC90	2015	D5244T18	SRS	Data stream	
XC90	2015	D5244T18	SRS	Freeze frame	
XC90	2015	D5244T18	SRS	Special functions	Calibrating the occupant weight sensor(OWS)
XC90	2015	D5244T18	SRS	Special functions	Configuring the number of seats
XC90	2015	D5244T18	SRS	Special functions	Storing the ID number for the occupant weight sensor(OWS)
XC90	2015	D5244T18	SRS	Special functions	Resetting crash mode
XC90	2015	D5244T18	SUB	Sys. Info.	
XC90	2015	D5244T18	SUB	Read code	
XC90	2015	D5244T18	SUB	Clear code	
XC90	2015	D5244T18	TCM	Sys. Info.	
XC90	2015	D5244T18	TCM	Read code	
XC90	2015	D5244T18	TCM	Clear code	
XC90	2015	D5244T18	TCM	Data stream	
XC90	2015	D5244T18	TCM	Actuation	
XC90	2015	D5244T18	TCM	Freeze frame	
XC90	2015	D5244T18	TCM	Special functions	Resetting the adaptation
XC90	2015	D5244T18	TCM	Special functions	Resetting the counter for – Gearbox oil Change
XC90	2015	D5244T18	TCM	Special functions	Activating gear indication
XC90	2015	D5244T18	UEM	Sys. Info.	
XC90	2015	D5244T18	UEM	Read code	
XC90	2015	D5244T18	UEM	Clear code	
XC90	2015	D5244T18	UEM	Data stream	
XC90	2015	D5244T18	UEM	Actuation	
XC90	2015	D5244T18	UEM	Special functions	Configuration of the siren
XC90	2015	D5244T18	UEM	Special functions	Reading the programmed values
XC90	2015	D5244T18	UEM	Special functions	Activating and reading off sun roof parameters
XC90	2015	D5244T18	UEM	Special functions	Read out the stored ID numbers for the tyre pressure sensors
XC90 V8	2005	D5244T18	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90 V8	2005	B8444S	ECM	Sys. Info.	
XC90 V8	2005	B8444S	ECM	Read code	
XC90 V8	2005	B8444S	ECM	Clear code	
XC90 V8	2005	B8444S	ECM	Data stream	
XC90 V8	2005	B8444S	ECM	Actuation	
XC90 V8	2005	B8444S	ECM	Special functions	Resetting the adaptation values
XC90 V8	2005	B6324S	ECM	Sys. Info.	
XC90 V8	2005	B6324S	ECM	Read code	
XC90 V8	2005	B6324S	ECM	Clear code	
XC90 V8	2005	B6324S	ECM	Data stream	
XC90 V8	2005	B6324S	ECM	Actuation	
XC90 V8	2005	B6324S	ECM	Special functions	Resetting the adaptation values
XC90 V8	2005	TF-80SC AWD	TCM	Sys. Info.	
XC90 V8	2005	TF-80SC AWD	TCM	Read code	
XC90 V8	2005	TF-80SC AWD	TCM	Clear code	
XC90 V8	2005	TF-80SC AWD	TCM	Data stream	
XC90 V8	2005	TF-80SC AWD	TCM	Actuation	
XC90 V8	2005	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
XC90 V8	2005	TF-80SC AWD	TCM	Special functions	Resetting the Transmission fluid change counter
XC90 V8	2005	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
XC90 V8	2005	TF-80SC AWD	TCM	Special functions	Activating gear indication
XC90 V8	2005	TF-80SC AWD	TCM	Special functions	Activation of adaption
XC90 V8	2005	TF-80SC AWD	ABS	Sys. Info.	
XC90 V8	2005	TF-80SC AWD	ABS	Read code	
XC90 V8	2005	TF-80SC AWD	ABS	Clear code	
XC90 V8	2005	TF-80SC AWD	ABS	Data stream	
XC90 V8	2005	TF-80SC AWD	ABS	Actuation	
XC90 V8	2005	TF-80SC AWD	ABS	Special functions	Checking brake light switch adjustment
XC90 V8	2005	TF-80SC AWD	ABS	Special functions	Calibration(only vehicles with DSTC)
XC90 V8	2005	TF-80SC AWD	SRS	Sys. Info.	
XC90 V8	2005	TF-80SC AWD	SRS	Read code	
XC90 V8	2005	TF-80SC AWD	SRS	Clear code	
XC90 V8	2005	TF-80SC AWD	SRS	Data stream	
XC90 V8	2005	TF-80SC AWD	CEM	Sys. Info.	
XC90 V8	2005	TF-80SC AWD	CEM	Read code	
XC90 V8	2005	TF-80SC AWD	CEM	Clear code	
XC90 V8	2005	TF-80SC AWD	CEM	Data stream	
XC90 V8	2005	TF-80SC AWD	CEM	Actuation	
XC90 V8	2005	TF-80SC AWD	CEM	Special functions	Programming control module
XC90 V8	2005	TF-80SC AWD	CEM	Special functions	Resetting the factory settings
XC90 V8	2005	TF-80SC AWD	CEM	Special functions	Resetting low voltage counters
XC90 V8	2005	TF-80SC AWD	CEM	Special functions	Resetting crash mode

model	year	type	system	function	subfunction	
XC90 V8		2005	TF-80SC AWD	CEM	Special functions	Programming of short flash sequence
XC90 V8		2005	TF-80SC AWD	UEM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	UEM	Read code	
XC90 V8		2005	TF-80SC AWD	UEM	Clear code	
XC90 V8		2005	TF-80SC AWD	UEM	Data stream	
XC90 V8		2005	TF-80SC AWD	UEM	Actuation	
XC90 V8		2005	TF-80SC AWD	UEM	Special functions	Configuration of the siren
XC90 V8		2005	TF-80SC AWD	UEM	Special functions	Programming the control unit
XC90 V8		2005	TF-80SC AWD	UEM	Special functions	Reading the programmed values
XC90 V8		2005	TF-80SC AWD	REM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	REM	Read code	
XC90 V8		2005	TF-80SC AWD	REM	Clear code	
XC90 V8		2005	TF-80SC AWD	REM	Data stream	
XC90 V8		2005	TF-80SC AWD	REM	Actuation	
XC90 V8		2005	TF-80SC AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90 V8		2005	TF-80SC AWD	DIM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	DIM	Read code	
XC90 V8		2005	TF-80SC AWD	DIM	Clear code	
XC90 V8		2005	TF-80SC AWD	DIM	Data stream	
XC90 V8		2005	TF-80SC AWD	DIM	Actuation	
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Programming the distance covered for service (*)
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Programming the service time parameters (*)
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Programming the engine service time parameters (*)
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Programming units of measurement for temperature (*)
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Programming of trip computer unit (*)
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Programming of clock (*)
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Programming of zeros (*)
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Programming parking brake warning
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Programming instrument lighting
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Display of DSTC message
XC90 V8		2005	TF-80SC AWD	DIM	Special functions	Read out programmed values
XC90 V8		2005	TF-80SC AWD	PDM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	PDM	Read code	
XC90 V8		2005	TF-80SC AWD	PDM	Clear code	
XC90 V8		2005	TF-80SC AWD	PDM	Data stream	
XC90 V8		2005	TF-80SC AWD	PDM	Actuation	
XC90 V8		2005	TF-80SC AWD	PDM	Special functions	Initialize the window(*)
XC90 V8		2005	TF-80SC AWD	PSM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	PSM	Read code	
XC90 V8		2005	TF-80SC AWD	PSM	Clear code	
XC90 V8		2005	TF-80SC AWD	PSM	Data stream	
XC90 V8		2005	TF-80SC AWD	PSM	Actuation	
XC90 V8		2005	TF-80SC AWD	DDM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	DDM	Read code	
XC90 V8		2005	TF-80SC AWD	DDM	Clear code	
XC90 V8		2005	TF-80SC AWD	DDM	Data stream	
XC90 V8		2005	TF-80SC AWD	DDM	Actuation	
XC90 V8		2005	TF-80SC AWD	DDM	Special functions	Initialize the window(*)
XC90 V8		2005	TF-80SC AWD	CCM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	CCM	Read code	
XC90 V8		2005	TF-80SC AWD	CCM	Clear code	
XC90 V8		2005	TF-80SC AWD	CCM	Data stream	
XC90 V8		2005	TF-80SC AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
XC90 V8		2005	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters(*)
XC90 V8		2005	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90 V8		2005	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90 V8		2005	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
XC90 V8		2005	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC90 V8		2005	TF-80SC AWD	CCM	Special functions	Programming the seat temperature
XC90 V8		2005	TF-80SC AWD	PHM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	PHM	Read code	
XC90 V8		2005	TF-80SC AWD	PHM	Clear code	
XC90 V8		2005	TF-80SC AWD	PHM	Data stream	
XC90 V8		2005	TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
XC90 V8		2005	TF-80SC AWD	AUD	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	AUD	Read code	
XC90 V8		2005	TF-80SC AWD	AUD	Clear code	
XC90 V8		2005	TF-80SC AWD	MP2	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	MP2	Read code	
XC90 V8		2005	TF-80SC AWD	MP2	Clear code	
XC90 V8		2005	TF-80SC AWD	MP2	Data stream	

model	year	type	system	function	subfunction	
XC90 V8		2005	TF-80SC AWD	MP2	Actuation	
XC90 V8		2005	TF-80SC AWD	DEM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	DEM	Read code	
XC90 V8		2005	TF-80SC AWD	DEM	Clear code	
XC90 V8		2005	TF-80SC AWD	DEM	Data stream	
XC90 V8		2005	TF-80SC AWD	ICM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	ICM	Read code	
XC90 V8		2005	TF-80SC AWD	ICM	Clear code	
XC90 V8		2005	TF-80SC AWD	ICM	Data stream	
XC90 V8		2005	TF-80SC AWD	ICM	Actuation	
XC90 V8		2005	TF-80SC AWD	SAS	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	SAS	Read code	
XC90 V8		2005	TF-80SC AWD	SAS	Clear code	
XC90 V8		2005	TF-80SC AWD	SAS	Data stream	
XC90 V8		2005	TF-80SC AWD	MMM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	MMM	Read code	
XC90 V8		2005	TF-80SC AWD	MMM	Clear code	
XC90 V8		2005	TF-80SC AWD	MMM	Data stream	
XC90 V8		2005	TF-80SC AWD	AEM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	AEM	Read code	
XC90 V8		2005	TF-80SC AWD	AEM	Clear code	
XC90 V8		2005	TF-80SC AWD	AEM	Data stream	
XC90 V8		2005	TF-80SC AWD	AEM	Actuation	
XC90 V8		2005	TF-80SC AWD	GPS	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	GPS	Read code	
XC90 V8		2005	TF-80SC AWD	GPS	Clear code	
XC90 V8		2005	TF-80SC AWD	GPS	Data stream	
XC90 V8		2005	TF-80SC AWD	SUB	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	SUB	Read code	
XC90 V8		2005	TF-80SC AWD	SUB	Clear code	
XC90 V8		2005	TF-80SC AWD	CPM	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	CPM	Data stream	
XC90 V8		2005	TF-80SC AWD	CPM	Special functions	Programming the additional and parking heater
XC90 V8		2005	TF-80SC AWD	MP1	Sys. Info.	
XC90 V8		2005	TF-80SC AWD	MP1	Read code	
XC90 V8		2005	TF-80SC AWD	MP1	Clear code	
XC90 V8		2005	TF-80SC AWD	MP1	Data stream	
XC90 V8		2005	TF-80SC AWD	MP1	Actuation	
XC90 V8		2006	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90 V8		2006	B8444S	ECM	Sys. Info.	
XC90 V8		2006	B8444S	ECM	Read code	
XC90 V8		2006	B8444S	ECM	Clear code	
XC90 V8		2006	B8444S	ECM	Data stream	
XC90 V8		2006	B8444S	ECM	Actuation	
XC90 V8		2006	B8444S	ECM	Special functions	Resetting the adaptation values
XC90 V8		2006	B6324S	ECM	Sys. Info.	
XC90 V8		2006	B6324S	ECM	Read code	
XC90 V8		2006	B6324S	ECM	Clear code	
XC90 V8		2006	B6324S	ECM	Data stream	
XC90 V8		2006	B6324S	ECM	Actuation	
XC90 V8		2006	B6324S	ECM	Special functions	Resetting the adaptation values
XC90 V8		2006	TF-80SC AWD	TCM	Sys. Info.	
XC90 V8		2006	TF-80SC AWD	TCM	Read code	
XC90 V8		2006	TF-80SC AWD	TCM	Clear code	
XC90 V8		2006	TF-80SC AWD	TCM	Data stream	
XC90 V8		2006	TF-80SC AWD	TCM	Actuation	
XC90 V8		2006	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
XC90 V8		2006	TF-80SC AWD	TCM	Special functions	Resetting the Transmission fluid change counter
XC90 V8		2006	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
XC90 V8		2006	TF-80SC AWD	TCM	Special functions	Activating gear indication
XC90 V8		2006	TF-80SC AWD	TCM	Special functions	Activation of adaption
XC90 V8		2006	TF-80SC AWD	ABS	Sys. Info.	
XC90 V8		2006	TF-80SC AWD	ABS	Read code	
XC90 V8		2006	TF-80SC AWD	ABS	Clear code	
XC90 V8		2006	TF-80SC AWD	ABS	Data stream	
XC90 V8		2006	TF-80SC AWD	ABS	Actuation	
XC90 V8		2006	TF-80SC AWD	ABS	Special functions	Checking brake light switch adjustment
XC90 V8		2006	TF-80SC AWD	ABS	Special functions	Calibration(only vehicles with DSTC)
XC90 V8		2006	TF-80SC AWD	SRS	Sys. Info.	
XC90 V8		2006	TF-80SC AWD	SRS	Read code	
XC90 V8		2006	TF-80SC AWD	SRS	Clear code	
XC90 V8		2006	TF-80SC AWD	SRS	Data stream	
XC90 V8		2006	TF-80SC AWD	CEM	Sys. Info.	
XC90 V8		2006	TF-80SC AWD	CEM	Read code	
XC90 V8		2006	TF-80SC AWD	CEM	Clear code	
XC90 V8		2006	TF-80SC AWD	CEM	Data stream	
XC90 V8		2006	TF-80SC AWD	CEM	Actuation	

model	year	type	system	function	subfunction
XC90 V8	2006	TF-80SC AWD	CEM	Special functions	Programming control module
XC90 V8	2006	TF-80SC AWD	CEM	Special functions	Resetting the factory settings
XC90 V8	2006	TF-80SC AWD	CEM	Special functions	Resetting low voltage counters
XC90 V8	2006	TF-80SC AWD	CEM	Special functions	Resetting crash mode
XC90 V8	2006	TF-80SC AWD	CEM	Special functions	Programming of short flash sequence
XC90 V8	2006	TF-80SC AWD	UEM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	UEM	Read code	
XC90 V8	2006	TF-80SC AWD	UEM	Clear code	
XC90 V8	2006	TF-80SC AWD	UEM	Data stream	
XC90 V8	2006	TF-80SC AWD	UEM	Actuation	
XC90 V8	2006	TF-80SC AWD	UEM	Special functions	Configuration of the siren
XC90 V8	2006	TF-80SC AWD	UEM	Special functions	Programming the control unit
XC90 V8	2006	TF-80SC AWD	UEM	Special functions	Reading the programmed values
XC90 V8	2006	TF-80SC AWD	REM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	REM	Read code	
XC90 V8	2006	TF-80SC AWD	REM	Clear code	
XC90 V8	2006	TF-80SC AWD	REM	Data stream	
XC90 V8	2006	TF-80SC AWD	REM	Actuation	
XC90 V8	2006	TF-80SC AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90 V8	2006	TF-80SC AWD	DIM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	DIM	Read code	
XC90 V8	2006	TF-80SC AWD	DIM	Clear code	
XC90 V8	2006	TF-80SC AWD	DIM	Data stream	
XC90 V8	2006	TF-80SC AWD	DIM	Actuation	
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Programming the distance covered for service (*)
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Programming the service time parameters (*)
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Programming the engine service time parameters (*)
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Programming units of measurement for temperature (*)
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Programming of trip computer unit (*)
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Programming of clock (*)
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Programming of zeros (*)
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Programming parking brake warning
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Programming instrument lighting
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Display of DSTC message
XC90 V8	2006	TF-80SC AWD	DIM	Special functions	Read out programmed values
XC90 V8	2006	TF-80SC AWD	PDM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	PDM	Read code	
XC90 V8	2006	TF-80SC AWD	PDM	Clear code	
XC90 V8	2006	TF-80SC AWD	PDM	Data stream	
XC90 V8	2006	TF-80SC AWD	PDM	Actuation	
XC90 V8	2006	TF-80SC AWD	PDM	Special functions	Initialize the window(*)
XC90 V8	2006	TF-80SC AWD	PSM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	PSM	Read code	
XC90 V8	2006	TF-80SC AWD	PSM	Clear code	
XC90 V8	2006	TF-80SC AWD	PSM	Data stream	
XC90 V8	2006	TF-80SC AWD	PSM	Actuation	
XC90 V8	2006	TF-80SC AWD	DDM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	DDM	Read code	
XC90 V8	2006	TF-80SC AWD	DDM	Clear code	
XC90 V8	2006	TF-80SC AWD	DDM	Data stream	
XC90 V8	2006	TF-80SC AWD	DDM	Actuation	
XC90 V8	2006	TF-80SC AWD	DDM	Special functions	Initialize the window(*)
XC90 V8	2006	TF-80SC AWD	CCM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	CCM	Read code	
XC90 V8	2006	TF-80SC AWD	CCM	Clear code	
XC90 V8	2006	TF-80SC AWD	CCM	Data stream	
XC90 V8	2006	TF-80SC AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
XC90 V8	2006	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters(*)
XC90 V8	2006	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90 V8	2006	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90 V8	2006	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
XC90 V8	2006	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC90 V8	2006	TF-80SC AWD	CCM	Special functions	Programming the seat temperature
XC90 V8	2006	TF-80SC AWD	PHM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	PHM	Read code	
XC90 V8	2006	TF-80SC AWD	PHM	Clear code	
XC90 V8	2006	TF-80SC AWD	PHM	Data stream	
XC90 V8	2006	TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
XC90 V8	2006	TF-80SC AWD	AUD	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	AUD	Read code	
XC90 V8	2006	TF-80SC AWD	AUD	Clear code	

model	year	type	system	function	subfunction
XC90 V8	2006	TF-80SC AWD	MP2	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	MP2	Read code	
XC90 V8	2006	TF-80SC AWD	MP2	Clear code	
XC90 V8	2006	TF-80SC AWD	MP2	Data stream	
XC90 V8	2006	TF-80SC AWD	MP2	Actuation	
XC90 V8	2006	TF-80SC AWD	DEM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	DEM	Read code	
XC90 V8	2006	TF-80SC AWD	DEM	Clear code	
XC90 V8	2006	TF-80SC AWD	DEM	Data stream	
XC90 V8	2006	TF-80SC AWD	ICM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	ICM	Read code	
XC90 V8	2006	TF-80SC AWD	ICM	Clear code	
XC90 V8	2006	TF-80SC AWD	ICM	Data stream	
XC90 V8	2006	TF-80SC AWD	ICM	Actuation	
XC90 V8	2006	TF-80SC AWD	SAS	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	SAS	Read code	
XC90 V8	2006	TF-80SC AWD	SAS	Clear code	
XC90 V8	2006	TF-80SC AWD	SAS	Data stream	
XC90 V8	2006	TF-80SC AWD	MMM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	MMM	Read code	
XC90 V8	2006	TF-80SC AWD	MMM	Clear code	
XC90 V8	2006	TF-80SC AWD	MMM	Data stream	
XC90 V8	2006	TF-80SC AWD	AEM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	AEM	Read code	
XC90 V8	2006	TF-80SC AWD	AEM	Clear code	
XC90 V8	2006	TF-80SC AWD	AEM	Data stream	
XC90 V8	2006	TF-80SC AWD	AEM	Actuation	
XC90 V8	2006	TF-80SC AWD	GPS	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	GPS	Read code	
XC90 V8	2006	TF-80SC AWD	GPS	Clear code	
XC90 V8	2006	TF-80SC AWD	GPS	Data stream	
XC90 V8	2006	TF-80SC AWD	SUB	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	SUB	Read code	
XC90 V8	2006	TF-80SC AWD	SUB	Clear code	
XC90 V8	2006	TF-80SC AWD	CPM	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	CPM	Data stream	
XC90 V8	2006	TF-80SC AWD	CPM	Special functions	Programming the additional and parking heater
XC90 V8	2006	TF-80SC AWD	MP1	Sys. Info.	
XC90 V8	2006	TF-80SC AWD	MP1	Read code	
XC90 V8	2006	TF-80SC AWD	MP1	Clear code	
XC90 V8	2006	TF-80SC AWD	MP1	Data stream	
XC90 V8	2006	TF-80SC AWD	MP1	Actuation	
XC90 V8	2007	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90 V8	2007	B8444S	ECM	Sys. Info.	
XC90 V8	2007	B8444S	ECM	Read code	
XC90 V8	2007	B8444S	ECM	Clear code	
XC90 V8	2007	B8444S	ECM	Data stream	
XC90 V8	2007	B8444S	ECM	Actuation	
XC90 V8	2007	B8444S	ECM	Special functions	Resetting the adaptation values
XC90 V8	2007	B6324S	ECM	Sys. Info.	
XC90 V8	2007	B6324S	ECM	Read code	
XC90 V8	2007	B6324S	ECM	Clear code	
XC90 V8	2007	B6324S	ECM	Data stream	
XC90 V8	2007	B6324S	ECM	Actuation	
XC90 V8	2007	B6324S	ECM	Special functions	Resetting the adaptation values
XC90 V8	2007	TF-80SC AWD	TCM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	TCM	Read code	
XC90 V8	2007	TF-80SC AWD	TCM	Clear code	
XC90 V8	2007	TF-80SC AWD	TCM	Data stream	
XC90 V8	2007	TF-80SC AWD	TCM	Actuation	
XC90 V8	2007	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
XC90 V8	2007	TF-80SC AWD	TCM	Special functions	Resetting the Transmission fluid change counter
XC90 V8	2007	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
XC90 V8	2007	TF-80SC AWD	TCM	Special functions	Activating gear indication
XC90 V8	2007	TF-80SC AWD	TCM	Special functions	Activation of adaption
XC90 V8	2007	TF-80SC AWD	ABS	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	ABS	Read code	
XC90 V8	2007	TF-80SC AWD	ABS	Clear code	
XC90 V8	2007	TF-80SC AWD	ABS	Data stream	
XC90 V8	2007	TF-80SC AWD	ABS	Actuation	
XC90 V8	2007	TF-80SC AWD	ABS	Special functions	Checking brake light switch adjustment
XC90 V8	2007	TF-80SC AWD	ABS	Special functions	Calibration(only vehicles with DSTC)
XC90 V8	2007	TF-80SC AWD	SRS	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	SRS	Read code	
XC90 V8	2007	TF-80SC AWD	SRS	Clear code	
XC90 V8	2007	TF-80SC AWD	SRS	Data stream	
XC90 V8	2007	TF-80SC AWD	CEM	Sys. Info.	

model	year	type	system	function	subfunction
XC90 V8	2007	TF-80SC AWD	CEM	Read code	
XC90 V8	2007	TF-80SC AWD	CEM	Clear code	
XC90 V8	2007	TF-80SC AWD	CEM	Data stream	
XC90 V8	2007	TF-80SC AWD	CEM	Actuation	
XC90 V8	2007	TF-80SC AWD	CEM	Special functions	Programming control module
XC90 V8	2007	TF-80SC AWD	CEM	Special functions	Resetting the factory settings
XC90 V8	2007	TF-80SC AWD	CEM	Special functions	Resetting low voltage counters
XC90 V8	2007	TF-80SC AWD	CEM	Special functions	Resetting crash mode
XC90 V8	2007	TF-80SC AWD	CEM	Special functions	Programming of short flash sequence
XC90 V8	2007	TF-80SC AWD	UEM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	UEM	Read code	
XC90 V8	2007	TF-80SC AWD	UEM	Clear code	
XC90 V8	2007	TF-80SC AWD	UEM	Data stream	
XC90 V8	2007	TF-80SC AWD	UEM	Actuation	
XC90 V8	2007	TF-80SC AWD	UEM	Special functions	Configuration of the siren
XC90 V8	2007	TF-80SC AWD	UEM	Special functions	Programming the control unit
XC90 V8	2007	TF-80SC AWD	UEM	Special functions	Reading the programmed values
XC90 V8	2007	TF-80SC AWD	REM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	REM	Read code	
XC90 V8	2007	TF-80SC AWD	REM	Clear code	
XC90 V8	2007	TF-80SC AWD	REM	Data stream	
XC90 V8	2007	TF-80SC AWD	REM	Actuation	
XC90 V8	2007	TF-80SC AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90 V8	2007	TF-80SC AWD	DIM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	DIM	Read code	
XC90 V8	2007	TF-80SC AWD	DIM	Clear code	
XC90 V8	2007	TF-80SC AWD	DIM	Data stream	
XC90 V8	2007	TF-80SC AWD	DIM	Actuation	
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Programming the distance covered for service (*)
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Programming the service time parameters (*)
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Programming the engine service time parameters (*)
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Programming units of measurement for temperature (*)
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Programming of trip computer unit (*)
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Programming of clock (*)
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Programming of zeros (*)
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Programming parking brake warning
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Programming instrument lighting
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC90 V8	2007	TF-80SC AWD	DIM	Special functions	Display of DSTC message
XC90 V8	2007	TF-80SC AWD	DIIM	Special functions	Read out programmed values
XC90 V8	2007	TF-80SC AWD	PDM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	PDM	Read code	
XC90 V8	2007	TF-80SC AWD	PDM	Clear code	
XC90 V8	2007	TF-80SC AWD	PDM	Data stream	
XC90 V8	2007	TF-80SC AWD	PDM	Actuation	
XC90 V8	2007	TF-80SC AWD	PDM	Special functions	Initialize the window(*)
XC90 V8	2007	TF-80SC AWD	PSM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	PSM	Read code	
XC90 V8	2007	TF-80SC AWD	PSM	Clear code	
XC90 V8	2007	TF-80SC AWD	PSM	Data stream	
XC90 V8	2007	TF-80SC AWD	PSM	Actuation	
XC90 V8	2007	TF-80SC AWD	DDM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	DDM	Read code	
XC90 V8	2007	TF-80SC AWD	DDM	Clear code	
XC90 V8	2007	TF-80SC AWD	DDM	Data stream	
XC90 V8	2007	TF-80SC AWD	DDM	Actuation	
XC90 V8	2007	TF-80SC AWD	DDM	Special functions	Initialize the window(*)
XC90 V8	2007	TF-80SC AWD	CCM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	CCM	Read code	
XC90 V8	2007	TF-80SC AWD	CCM	Clear code	
XC90 V8	2007	TF-80SC AWD	CCM	Data stream	
XC90 V8	2007	TF-80SC AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
XC90 V8	2007	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters(*)
XC90 V8	2007	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90 V8	2007	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90 V8	2007	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
XC90 V8	2007	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC90 V8	2007	TF-80SC AWD	CCM	Special functions	Programming the seat temperature
XC90 V8	2007	TF-80SC AWD	PHM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	PHM	Read code	
XC90 V8	2007	TF-80SC AWD	PHM	Clear code	
XC90 V8	2007	TF-80SC AWD	PHM	Data stream	

model	year	type	system	function	subfunction
XC90 V8	2007	TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
XC90 V8	2007	TF-80SC AWD	AUD	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	AUD	Read code	
XC90 V8	2007	TF-80SC AWD	AUD	Clear code	
XC90 V8	2007	TF-80SC AWD	MP2	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	MP2	Read code	
XC90 V8	2007	TF-80SC AWD	MP2	Clear code	
XC90 V8	2007	TF-80SC AWD	MP2	Data stream	
XC90 V8	2007	TF-80SC AWD	MP2	Actuation	
XC90 V8	2007	TF-80SC AWD	DEM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	DEM	Read code	
XC90 V8	2007	TF-80SC AWD	DEM	Clear code	
XC90 V8	2007	TF-80SC AWD	DEM	Data stream	
XC90 V8	2007	TF-80SC AWD	ICM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	ICM	Read code	
XC90 V8	2007	TF-80SC AWD	ICM	Clear code	
XC90 V8	2007	TF-80SC AWD	ICM	Data stream	
XC90 V8	2007	TF-80SC AWD	ICM	Actuation	
XC90 V8	2007	TF-80SC AWD	SAS	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	SAS	Read code	
XC90 V8	2007	TF-80SC AWD	SAS	Clear code	
XC90 V8	2007	TF-80SC AWD	SAS	Data stream	
XC90 V8	2007	TF-80SC AWD	MMM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	MMM	Read code	
XC90 V8	2007	TF-80SC AWD	MMM	Clear code	
XC90 V8	2007	TF-80SC AWD	MMM	Data stream	
XC90 V8	2007	TF-80SC AWD	AEM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	AEM	Read code	
XC90 V8	2007	TF-80SC AWD	AEM	Clear code	
XC90 V8	2007	TF-80SC AWD	AEM	Data stream	
XC90 V8	2007	TF-80SC AWD	AEM	Actuation	
XC90 V8	2007	TF-80SC AWD	GPS	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	GPS	Read code	
XC90 V8	2007	TF-80SC AWD	GPS	Clear code	
XC90 V8	2007	TF-80SC AWD	GPS	Data stream	
XC90 V8	2007	TF-80SC AWD	SUB	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	SUB	Read code	
XC90 V8	2007	TF-80SC AWD	SUB	Clear code	
XC90 V8	2007	TF-80SC AWD	CPM	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	CPM	Data stream	
XC90 V8	2007	TF-80SC AWD	CPM	Special functions	Programming the additional and parking heater
XC90 V8	2007	TF-80SC AWD	MP1	Sys. Info.	
XC90 V8	2007	TF-80SC AWD	MP1	Read code	
XC90 V8	2007	TF-80SC AWD	MP1	Clear code	
XC90 V8	2007	TF-80SC AWD	MP1	Data stream	
XC90 V8	2007	TF-80SC AWD	MP1	Actuation	
XC90 V8	2008	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90 V8	2008	B8444S	ECM	Sys. Info.	
XC90 V8	2008	B8444S	ECM	Read code	
XC90 V8	2008	B8444S	ECM	Clear code	
XC90 V8	2008	B8444S	ECM	Data stream	
XC90 V8	2008	B8444S	ECM	Actuation	
XC90 V8	2008	B8444S	ECM	Special functions	Resetting the adaptation values
XC90 V8	2008	B6324S	ECM	Sys. Info.	
XC90 V8	2008	B6324S	ECM	Read code	
XC90 V8	2008	B6324S	ECM	Clear code	
XC90 V8	2008	B6324S	ECM	Data stream	
XC90 V8	2008	B6324S	ECM	Actuation	
XC90 V8	2008	B6324S	ECM	Special functions	Resetting the adaptation values
XC90 V8	2008	TF-80SC AWD	TCM	Sys. Info.	
XC90 V8	2008	TF-80SC AWD	TCM	Read code	
XC90 V8	2008	TF-80SC AWD	TCM	Clear code	
XC90 V8	2008	TF-80SC AWD	TCM	Data stream	
XC90 V8	2008	TF-80SC AWD	TCM	Actuation	
XC90 V8	2008	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
XC90 V8	2008	TF-80SC AWD	TCM	Special functions	Resetting the Transmission fluid change counter
XC90 V8	2008	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
XC90 V8	2008	TF-80SC AWD	TCM	Special functions	Activating gear indication
XC90 V8	2008	TF-80SC AWD	TCM	Special functions	Activation of adaption
XC90 V8	2008	TF-80SC AWD	ABS	Sys. Info.	
XC90 V8	2008	TF-80SC AWD	ABS	Read code	
XC90 V8	2008	TF-80SC AWD	ABS	Clear code	
XC90 V8	2008	TF-80SC AWD	ABS	Data stream	
XC90 V8	2008	TF-80SC AWD	ABS	Actuation	
XC90 V8	2008	TF-80SC AWD	ABS	Special functions	Checking brake light switch adjustment
XC90 V8	2008	TF-80SC AWD	ABS	Special functions	Calibration(only vehicles with DSTC)
XC90 V8	2008	TF-80SC AWD	SRS	Sys. Info.	



model	year	type	system	function	subfunction
XC90 V8	2008	TF-80SC AWD	SRS	Read code	
XC90 V8	2008	TF-80SC AWD	SRS	Clear code	
XC90 V8	2008	TF-80SC AWD	SRS	Data stream	
XC90 V8	2008	TF-80SC AWD	CEM	Sys. Info.	
XC90 V8	2008	TF-80SC AWD	CEM	Read code	
XC90 V8	2008	TF-80SC AWD	CEM	Clear code	
XC90 V8	2008	TF-80SC AWD	CEM	Data stream	
XC90 V8	2008	TF-80SC AWD	CEM	Actuation	
XC90 V8	2008	TF-80SC AWD	CEM	Special functions	Programming control module
XC90 V8	2008	TF-80SC AWD	CEM	Special functions	Resetting the factory settings
XC90 V8	2008	TF-80SC AWD	CEM	Special functions	Resetting low voltage counters
XC90 V8	2008	TF-80SC AWD	CEM	Special functions	Resetting crash mode
XC90 V8	2008	TF-80SC AWD	CEM	Special functions	Programming of short flash sequence
XC90 V8	2008	TF-80SC AWD	UEM	Sys. Info.	
XC90 V8	2008	TF-80SC AWD	UEM	Read code	
XC90 V8	2008	TF-80SC AWD	UEM	Clear code	
XC90 V8	2008	TF-80SC AWD	UEM	Data stream	
XC90 V8	2008	TF-80SC AWD	UEM	Actuation	
XC90 V8	2008	TF-80SC AWD	UEM	Special functions	Configuration of the siren
XC90 V8	2008	TF-80SC AWD	UEM	Special functions	Programming the control unit
XC90 V8	2008	TF-80SC AWD	UEM	Special functions	Reading the programmed values
XC90 V8	2008	TF-80SC AWD	REM	Sys. Info.	
XC90 V8	2008	TF-80SC AWD	REM	Read code	
XC90 V8	2008	TF-80SC AWD	REM	Clear code	
XC90 V8	2008	TF-80SC AWD	REM	Data stream	
XC90 V8	2008	TF-80SC AWD	REM	Actuation	
XC90 V8	2008	TF-80SC AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90 V8	2008	TF-80SC AWD	DIM	Sys. Info.	
XC90 V8	2008	TF-80SC AWD	DIM	Read code	
XC90 V8	2008	TF-80SC AWD	DIM	Clear code	
XC90 V8	2008	TF-80SC AWD	DIM	Data stream	
XC90 V8	2008	TF-80SC AWD	DIM	Actuation	
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Programming the distance covered for service (*)
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Programming the service time parameters (*)
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Programming the engine service time parameters (*)
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Programming units of measurement for temperature (*)
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Programming of trip computer unit (*)
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Programming of clock (*)
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Programming of zeros (*)
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Programming parking brake warning
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Programming instrument lighting
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Display of DSTC message
XC90 V8	2008	TF-80SC AWD	DIM	Special functions	Read out programmed values
XC90 V8	2008	TF-80SC AWD	PDM	Sys. Info.	
XC90 V8	2008	TF-80SC AWD	PDM	Read code	
XC90 V8	2008	TF-80SC AWD	PDM	Clear code	
XC90 V8	2008	TF-80SC AWD	PDM	Data stream	
XC90 V8	2008	TF-80SC AWD	PDM	Actuation	
XC90 V8	2008	TF-80SC AWD	PDM	Special functions	Initialize the window(*)
XC90 V8	2008	TF-80SC AWD	PSM	Sys. Info.	
XC90 V8	2008	TF-80SC AWD	PSM	Read code	
XC90 V8	2008	TF-80SC AWD	PSM	Clear code	
XC90 V8	2008	TF-80SC AWD	PSM	Data stream	
XC90 V8	2008	TF-80SC AWD	PSM	Actuation	
XC90 V8	2008	TF-80SC AWD	DDM	Sys. Info.	
XC90 V8	2008	TF-80SC AWD	DDM	Read code	
XC90 V8	2008	TF-80SC AWD	DDM	Clear code	
XC90 V8	2008	TF-80SC AWD	DDM	Data stream	
XC90 V8	2008	TF-80SC AWD	DDM	Actuation	
XC90 V8	2008	TF-80SC AWD	DDM	Special functions	Initialize the window(*)
XC90 V8	2008	TF-80SC AWD	CCM	Sys. Info.	
XC90 V8	2008	TF-80SC AWD	CCM	Read code	
XC90 V8	2008	TF-80SC AWD	CCM	Clear code	
XC90 V8	2008	TF-80SC AWD	CCM	Data stream	
XC90 V8	2008	TF-80SC AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
XC90 V8	2008	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters(*)
XC90 V8	2008	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90 V8	2008	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90 V8	2008	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
XC90 V8	2008	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC90 V8	2008	TF-80SC AWD	CCM	Special functions	Programming the seat temperature

model	year	type	system	function	subfunction	
XC90 V8		2008	TF-80SC AWD	PHM	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	PHM	Read code	
XC90 V8		2008	TF-80SC AWD	PHM	Clear code	
XC90 V8		2008	TF-80SC AWD	PHM	Data stream	
XC90 V8		2008	TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
XC90 V8		2008	TF-80SC AWD	AUD	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	AUD	Read code	
XC90 V8		2008	TF-80SC AWD	AUD	Clear code	
XC90 V8		2008	TF-80SC AWD	MP2	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	MP2	Read code	
XC90 V8		2008	TF-80SC AWD	MP2	Clear code	
XC90 V8		2008	TF-80SC AWD	MP2	Data stream	
XC90 V8		2008	TF-80SC AWD	MP2	Actuation	
XC90 V8		2008	TF-80SC AWD	DEM	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	DEM	Read code	
XC90 V8		2008	TF-80SC AWD	DEM	Clear code	
XC90 V8		2008	TF-80SC AWD	DEM	Data stream	
XC90 V8		2008	TF-80SC AWD	ICM	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	ICM	Read code	
XC90 V8		2008	TF-80SC AWD	ICM	Clear code	
XC90 V8		2008	TF-80SC AWD	ICM	Data stream	
XC90 V8		2008	TF-80SC AWD	ICM	Actuation	
XC90 V8		2008	TF-80SC AWD	SAS	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	SAS	Read code	
XC90 V8		2008	TF-80SC AWD	SAS	Clear code	
XC90 V8		2008	TF-80SC AWD	SAS	Data stream	
XC90 V8		2008	TF-80SC AWD	MMM	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	MMM	Read code	
XC90 V8		2008	TF-80SC AWD	MMM	Clear code	
XC90 V8		2008	TF-80SC AWD	MMM	Data stream	
XC90 V8		2008	TF-80SC AWD	AEM	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	AEM	Read code	
XC90 V8		2008	TF-80SC AWD	AEM	Clear code	
XC90 V8		2008	TF-80SC AWD	AEM	Data stream	
XC90 V8		2008	TF-80SC AWD	AEM	Actuation	
XC90 V8		2008	TF-80SC AWD	GPS	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	GPS	Read code	
XC90 V8		2008	TF-80SC AWD	GPS	Clear code	
XC90 V8		2008	TF-80SC AWD	GPS	Data stream	
XC90 V8		2008	TF-80SC AWD	SUB	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	SUB	Read code	
XC90 V8		2008	TF-80SC AWD	SUB	Clear code	
XC90 V8		2008	TF-80SC AWD	CPM	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	CPM	Data stream	
XC90 V8		2008	TF-80SC AWD	CPM	Special functions	Programming the additional and parking heater
XC90 V8		2008	TF-80SC AWD	MP1	Sys. Info.	
XC90 V8		2008	TF-80SC AWD	MP1	Read code	
XC90 V8		2008	TF-80SC AWD	MP1	Clear code	
XC90 V8		2008	TF-80SC AWD	MP1	Data stream	
XC90 V8		2008	TF-80SC AWD	MP1	Actuation	
XC90 V8		2009	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90 V8		2009	B8444S	ECM	Sys. Info.	
XC90 V8		2009	B8444S	ECM	Read code	
XC90 V8		2009	B8444S	ECM	Clear code	
XC90 V8		2009	B8444S	ECM	Data stream	
XC90 V8		2009	B8444S	ECM	Actuation	
XC90 V8		2009	B8444S	ECM	Special functions	Resetting the adaptation values
XC90 V8		2009	B6324S	ECM	Sys. Info.	
XC90 V8		2009	B6324S	ECM	Read code	
XC90 V8		2009	B6324S	ECM	Clear code	
XC90 V8		2009	B6324S	ECM	Data stream	
XC90 V8		2009	B6324S	ECM	Actuation	
XC90 V8		2009	B6324S	ECM	Special functions	Resetting the adaptation values
XC90 V8		2009	TF-80SC AWD	TCM	Sys. Info.	
XC90 V8		2009	TF-80SC AWD	TCM	Read code	
XC90 V8		2009	TF-80SC AWD	TCM	Clear code	
XC90 V8		2009	TF-80SC AWD	TCM	Data stream	
XC90 V8		2009	TF-80SC AWD	TCM	Actuation	
XC90 V8		2009	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
XC90 V8		2009	TF-80SC AWD	TCM	Special functions	Resetting the Transmission fluid change counter
XC90 V8		2009	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
XC90 V8		2009	TF-80SC AWD	TCM	Special functions	Activating gear indication
XC90 V8		2009	TF-80SC AWD	TCM	Special functions	Activation of adaption
XC90 V8		2009	TF-80SC AWD	ABS	Sys. Info.	
XC90 V8		2009	TF-80SC AWD	ABS	Read code	
XC90 V8		2009	TF-80SC AWD	ABS	Clear code	
XC90 V8		2009	TF-80SC AWD	ABS	Data stream	

model	year	type	system	function	subfunction
XC90 V8	2009	TF-80SC AWD	ABS	Actuation	
XC90 V8	2009	TF-80SC AWD	ABS	Special functions	Checking brake light switch adjustment
XC90 V8	2009	TF-80SC AWD	ABS	Special functions	Calibration(only vehicles with DSTC)
XC90 V8	2009	TF-80SC AWD	SRS	Sys. Info.	
XC90 V8	2009	TF-80SC AWD	SRS	Read code	
XC90 V8	2009	TF-80SC AWD	SRS	Clear code	
XC90 V8	2009	TF-80SC AWD	SRS	Data stream	
XC90 V8	2009	TF-80SC AWD	CEM	Sys. Info.	
XC90 V8	2009	TF-80SC AWD	CEM	Read code	
XC90 V8	2009	TF-80SC AWD	CEM	Clear code	
XC90 V8	2009	TF-80SC AWD	CEM	Data stream	
XC90 V8	2009	TF-80SC AWD	CEM	Actuation	
XC90 V8	2009	TF-80SC AWD	CEM	Special functions	Programming control module
XC90 V8	2009	TF-80SC AWD	CEM	Special functions	Resetting the factory settings
XC90 V8	2009	TF-80SC AWD	CEM	Special functions	Resetting low voltage counters
XC90 V8	2009	TF-80SC AWD	CEM	Special functions	Resetting crash mode
XC90 V8	2009	TF-80SC AWD	CEM	Special functions	Programming of short flash sequence
XC90 V8	2009	TF-80SC AWD	UEM	Sys. Info.	
XC90 V8	2009	TF-80SC AWD	UEM	Read code	
XC90 V8	2009	TF-80SC AWD	UEM	Clear code	
XC90 V8	2009	TF-80SC AWD	UEM	Data stream	
XC90 V8	2009	TF-80SC AWD	UEM	Actuation	
XC90 V8	2009	TF-80SC AWD	UEM	Special functions	Configuration of the siren
XC90 V8	2009	TF-80SC AWD	UEM	Special functions	Programming the control unit
XC90 V8	2009	TF-80SC AWD	UEM	Special functions	Reading the programmed values
XC90 V8	2009	TF-80SC AWD	REM	Sys. Info.	
XC90 V8	2009	TF-80SC AWD	REM	Read code	
XC90 V8	2009	TF-80SC AWD	REM	Clear code	
XC90 V8	2009	TF-80SC AWD	REM	Data stream	
XC90 V8	2009	TF-80SC AWD	REM	Actuation	
XC90 V8	2009	TF-80SC AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90 V8	2009	TF-80SC AWD	DIIM	Sys. Info.	
XC90 V8	2009	TF-80SC AWD	DIIM	Read code	
XC90 V8	2009	TF-80SC AWD	DIIM	Clear code	
XC90 V8	2009	TF-80SC AWD	DIIM	Data stream	
XC90 V8	2009	TF-80SC AWD	DIIM	Actuation	
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Testing all displays and lamps in instrument (*)
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Programming the distance covered for service (*)
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Programming the service time parameters (*)
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Programming the engine service time parameters (*)
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Programming units of measurement for temperature (*)
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Programming of trip computer unit (*)
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Programming of clock (*)
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Programming of zeros (*)
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Programming parking brake warning
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Programming instrument lighting
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Programming text message,seatbelt reminder
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Display of DSTC message
XC90 V8	2009	TF-80SC AWD	DIIM	Special functions	Read out programmed values
XC90 V8	2009	TF-80SC AWD	PDM	Sys. Info.	
XC90 V8	2009	TF-80SC AWD	PDM	Read code	
XC90 V8	2009	TF-80SC AWD	PDM	Clear code	
XC90 V8	2009	TF-80SC AWD	PDM	Data stream	
XC90 V8	2009	TF-80SC AWD	PDM	Actuation	
XC90 V8	2009	TF-80SC AWD	PDM	Special functions	Initialize the window(*)
XC90 V8	2009	TF-80SC AWD	PSM	Sys. Info.	
XC90 V8	2009	TF-80SC AWD	PSM	Read code	
XC90 V8	2009	TF-80SC AWD	PSM	Clear code	
XC90 V8	2009	TF-80SC AWD	PSM	Data stream	
XC90 V8	2009	TF-80SC AWD	PSM	Actuation	
XC90 V8	2009	TF-80SC AWD	DDM	Sys. Info.	
XC90 V8	2009	TF-80SC AWD	DDM	Read code	
XC90 V8	2009	TF-80SC AWD	DDM	Clear code	
XC90 V8	2009	TF-80SC AWD	DDM	Data stream	
XC90 V8	2009	TF-80SC AWD	DDM	Actuation	
XC90 V8	2009	TF-80SC AWD	DDM	Special functions	Initialize the window(*)
XC90 V8	2009	TF-80SC AWD	CCM	Sys. Info.	
XC90 V8	2009	TF-80SC AWD	CCM	Read code	
XC90 V8	2009	TF-80SC AWD	CCM	Clear code	
XC90 V8	2009	TF-80SC AWD	CCM	Data stream	
XC90 V8	2009	TF-80SC AWD	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
XC90 V8	2009	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters(*)
XC90 V8	2009	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90 V8	2009	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)

model	year	type	system	function	subfunction
XC90 V8		2009 TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
XC90 V8		2009 TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC90 V8		2009 TF-80SC AWD	CCM	Special functions	Programming the seat temperature
XC90 V8		2009 TF-80SC AWD	PHM	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	PHM	Read code	
XC90 V8		2009 TF-80SC AWD	PHM	Clear code	
XC90 V8		2009 TF-80SC AWD	PHM	Data stream	
XC90 V8		2009 TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
XC90 V8		2009 TF-80SC AWD	AUD	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	AUD	Read code	
XC90 V8		2009 TF-80SC AWD	AUD	Clear code	
XC90 V8		2009 TF-80SC AWD	MP2	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	MP2	Read code	
XC90 V8		2009 TF-80SC AWD	MP2	Clear code	
XC90 V8		2009 TF-80SC AWD	MP2	Data stream	
XC90 V8		2009 TF-80SC AWD	MP2	Actuation	
XC90 V8		2009 TF-80SC AWD	DEM	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	DEM	Read code	
XC90 V8		2009 TF-80SC AWD	DEM	Clear code	
XC90 V8		2009 TF-80SC AWD	DEM	Data stream	
XC90 V8		2009 TF-80SC AWD	ICM	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	ICM	Read code	
XC90 V8		2009 TF-80SC AWD	ICM	Clear code	
XC90 V8		2009 TF-80SC AWD	ICM	Data stream	
XC90 V8		2009 TF-80SC AWD	ICM	Actuation	
XC90 V8		2009 TF-80SC AWD	SAS	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	SAS	Read code	
XC90 V8		2009 TF-80SC AWD	SAS	Clear code	
XC90 V8		2009 TF-80SC AWD	SAS	Data stream	
XC90 V8		2009 TF-80SC AWD	MMM	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	MMM	Read code	
XC90 V8		2009 TF-80SC AWD	MMM	Clear code	
XC90 V8		2009 TF-80SC AWD	MMM	Data stream	
XC90 V8		2009 TF-80SC AWD	AEM	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	AEM	Read code	
XC90 V8		2009 TF-80SC AWD	AEM	Clear code	
XC90 V8		2009 TF-80SC AWD	AEM	Data stream	
XC90 V8		2009 TF-80SC AWD	AEM	Actuation	
XC90 V8		2009 TF-80SC AWD	GPS	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	GPS	Read code	
XC90 V8		2009 TF-80SC AWD	GPS	Clear code	
XC90 V8		2009 TF-80SC AWD	GPS	Data stream	
XC90 V8		2009 TF-80SC AWD	SUB	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	SUB	Read code	
XC90 V8		2009 TF-80SC AWD	SUB	Clear code	
XC90 V8		2009 TF-80SC AWD	CPM	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	CPM	Data stream	
XC90 V8		2009 TF-80SC AWD	CPM	Special functions	Programming the additional and parking heater
XC90 V8		2009 TF-80SC AWD	MP1	Sys. Info.	
XC90 V8		2009 TF-80SC AWD	MP1	Read code	
XC90 V8		2009 TF-80SC AWD	MP1	Clear code	
XC90 V8		2009 TF-80SC AWD	MP1	Data stream	
XC90 V8		2009 TF-80SC AWD	MP1	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC90 V8	2010 - 2012	B8444S	ECM	Sys. Info.	
XC90 V8	2010 - 2012	B8444S	ECM	Read code	
XC90 V8	2010 - 2012	B8444S	ECM	Clear code	
XC90 V8	2010 - 2012	B8444S	ECM	Data stream	
XC90 V8	2010 - 2012	B8444S	ECM	Actuation	
XC90 V8	2010 - 2012	B8444S	ECM	Special functions	Resetting the adaptation values
XC90 V8	2010 - 2012	B6324S	ECM	Sys. Info.	
XC90 V8	2010 - 2012	B6324S	ECM	Read code	
XC90 V8	2010 - 2012	B6324S	ECM	Clear code	
XC90 V8	2010 - 2012	B6324S	ECM	Data stream	
XC90 V8	2010 - 2012	B6324S	ECM	Actuation	
XC90 V8	2010 - 2012	B6324S	ECM	Special functions	Resetting the adaptation values
XC90 V8	2010 - 2012	TF-80SC AWD	TCM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	TCM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	TCM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	TCM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	TCM	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
XC90 V8	2010 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the Transmission fluid change counter
XC90 V8	2010 - 2012	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
XC90 V8	2010 - 2012	TF-80SC AWD	TCM	Special functions	Activating gear indication
XC90 V8	2010 - 2012	TF-80SC AWD	TCM	Special functions	Activation of adaption

model	year	type	system	function	subfunction
XC90 V8	2010 - 2012	TF-80SC AWD	ABS	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	ABS	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	ABS	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	ABS	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	ABS	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	ABS	Special functions	Checking brake light switch adjustment
XC90 V8	2010 - 2012	TF-80SC AWD	ABS	Special functions	Calibration(only vehicles with DSTC)
XC90 V8	2010 - 2012	TF-80SC AWD	SRS	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	SRS	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	SRS	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	SRS	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	CEM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	CEM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	CEM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	CEM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	CEM	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	CEM	Special functions	Programming control module
XC90 V8	2010 - 2012	TF-80SC AWD	CEM	Special functions	Resetting the factory settings
XC90 V8	2010 - 2012	TF-80SC AWD	CEM	Special functions	Resetting low voltage counters
XC90 V8	2010 - 2012	TF-80SC AWD	CEM	Special functions	Resetting crash mode
XC90 V8	2010 - 2012	TF-80SC AWD	CEM	Special functions	Programming of short flash sequence
XC90 V8	2010 - 2012	TF-80SC AWD	UEM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	UEM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	UEM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	UEM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	UEM	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	UEM	Special functions	Configuration of the siren
XC90 V8	2010 - 2012	TF-80SC AWD	UEM	Special functions	Programming the control unit
XC90 V8	2010 - 2012	TF-80SC AWD	UEM	Special functions	Reading the programmed values
XC90 V8	2010 - 2012	TF-80SC AWD	REM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	REM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	REM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	REM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	REM	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the distance covered for service (*)
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the service time parameters (*)
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the engine service time parameters (*)
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming units of measurement for temperature (*)
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming of trip computer unit (*)
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming of clock (*)
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming of zeros (*)
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming parking brake warning
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming instrument lighting
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Display of DSTC message
XC90 V8	2010 - 2012	TF-80SC AWD	DIM	Special functions	Read out programmed values
XC90 V8	2010 - 2012	TF-80SC AWD	PDM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	PDM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	PDM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	PDM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	PDM	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	PDM	Special functions	Initialize the window(*)
XC90 V8	2010 - 2012	TF-80SC AWD	PSM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	PSM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	PSM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	PSM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	PSM	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	DDM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	DDM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	DDM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	DDM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	DDM	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	DDM	Special functions	Initialize the window(*)
XC90 V8	2010 - 2012	TF-80SC AWD	CCM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	CCM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	CCM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	CCM	Data stream	

model	year	type	system	function	subfunction
XC90 V8	2010 - 2012	TF-80SC AWD	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
XC90 V8	2010 - 2012	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters(*)
XC90 V8	2010 - 2012	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC90 V8	2010 - 2012	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC90 V8	2010 - 2012	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
XC90 V8	2010 - 2012	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC90 V8	2010 - 2012	TF-80SC AWD	CCM	Special functions	Programming the seat temperature
XC90 V8	2010 - 2012	TF-80SC AWD	PHM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	PHM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	PHM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	PHM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
XC90 V8	2010 - 2012	TF-80SC AWD	AUD	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	AUD	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	AUD	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	MP2	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	MP2	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	MP2	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	MP2	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	MP2	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	DEM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	DEM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	DEM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	DEM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	ICM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	ICM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	ICM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	ICM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	ICM	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	SAS	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	SAS	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	SAS	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	SAS	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	MMM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	MMM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	MMM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	MMM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	AEM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	AEM	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	AEM	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	AEM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	AEM	Actuation	
XC90 V8	2010 - 2012	TF-80SC AWD	GPS	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	GPS	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	GPS	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	GPS	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	SUB	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	SUB	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	SUB	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	CPM	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	CPM	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	CPM	Special functions	Programming the additional and parking heater
XC90 V8	2010 - 2012	TF-80SC AWD	MP1	Sys. Info.	
XC90 V8	2010 - 2012	TF-80SC AWD	MP1	Read code	
XC90 V8	2010 - 2012	TF-80SC AWD	MP1	Clear code	
XC90 V8	2010 - 2012	TF-80SC AWD	MP1	Data stream	
XC90 V8	2010 - 2012	TF-80SC AWD	MP1	Actuation	
S40(04-)	2004	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(04-)	2004	B5244S4	ECM	Sys. Info.	
S40(04-)	2004	B5244S4	ECM	Read code	
S40(04-)	2004	B5244S4	ECM	Clear code	
S40(04-)	2004	B5244S4	ECM	Data stream	
S40(04-)	2004	B5244S4	ECM	Actuation	
S40(04-)	2004	B5244S4	ECM	Freeze frame	
S40(04-)	2004	B5244S4	ECM	Special functions	Resetting the adaptation values
S40(04-)	2004	B5244S5	ECM	Sys. Info.	
S40(04-)	2004	B5244S5	ECM	Read code	
S40(04-)	2004	B5244S5	ECM	Clear code	
S40(04-)	2004	B5244S5	ECM	Data stream	
S40(04-)	2004	B5244S5	ECM	Actuation	
S40(04-)	2004	B5244S5	ECM	Freeze frame	
S40(04-)	2004	B5244S5	ECM	Special functions	Resetting the adaptation values
S40(04-)	2004	B5244S7	ECM	Sys. Info.	
S40(04-)	2004	B5244S7	ECM	Read code	
S40(04-)	2004	B5244S7	ECM	Clear code	
S40(04-)	2004	B5244S7	ECM	Data stream	

model	year	type	system	function	subfunction
S40(04-)	2004	B5244S7	ECM	Actuation	
S40(04-)	2004	B4204S3	ECM	Sys. Info.	
S40(04-)	2004	B4204S3	ECM	Read code	
S40(04-)	2004	B4204S3	ECM	Clear code	
S40(04-)	2004	B4204S3	ECM	Data stream	
S40(04-)	2004	B4204S3	ECM	Actuation	
S40(04-)	2004	B5254T2	ECM	Sys. Info.	
S40(04-)	2004	B5254T2	ECM	Read code	
S40(04-)	2004	B5254T2	ECM	Clear code	
S40(04-)	2004	B5254T2	ECM	Data stream	
S40(04-)	2004	B5254T2	ECM	Actuation	
S40(04-)	2004	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2004	B5254T3	ECM	Sys. Info.	
S40(04-)	2004	B5254T3	ECM	Read code	
S40(04-)	2004	B5254T3	ECM	Clear code	
S40(04-)	2004	B5254T3	ECM	Data stream	
S40(04-)	2004	B5254T3	ECM	Actuation	
S40(04-)	2004	B5254T3	ECM	Freeze frame	
S40(04-)	2004	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2004	B5254T7	ECM	Sys. Info.	
S40(04-)	2004	B5254T7	ECM	Read code	
S40(04-)	2004	B5254T7	ECM	Clear code	
S40(04-)	2004	B5254T7	ECM	Data stream	
S40(04-)	2004	B5254T7	ECM	Actuation	
S40(04-)	2004	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2004	B5204T5	ECM	Sys. Info.	
S40(04-)	2004	B5204T5	ECM	Read code	
S40(04-)	2004	B5204T5	ECM	Clear code	
S40(04-)	2004	B5204T5	ECM	Data stream	
S40(04-)	2004	B5204T5	ECM	Actuation	
S40(04-)	2004	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2004	B6294T	ECM	Sys. Info.	
S40(04-)	2004	B6294T	ECM	Read code	
S40(04-)	2004	B6294T	ECM	Clear code	
S40(04-)	2004	B6294T	ECM	Data stream	
S40(04-)	2004	B6294T	ECM	Actuation	
S40(04-)	2004	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2004	B4164S3	ECM	Sys. Info.	
S40(04-)	2004	B4164S3	ECM	Read code	
S40(04-)	2004	B4164S3	ECM	Clear code	
S40(04-)	2004	B4164S3	ECM	Data stream	
S40(04-)	2004	B4164S3	ECM	Actuation	
S40(04-)	2004	B4164S3	ECM	Special functions	Resetting the adaptation values
S40(04-)	2004	B5244T5	ECM	Sys. Info.	
S40(04-)	2004	B5244T5	ECM	Read code	
S40(04-)	2004	B5244T5	ECM	Clear code	
S40(04-)	2004	B5244T5	ECM	Data stream	
S40(04-)	2004	B5244T5	ECM	Actuation	
S40(04-)	2004	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2004	B4184S11	ECM	Sys. Info.	
S40(04-)	2004	B4184S11	ECM	Read code	
S40(04-)	2004	B4184S11	ECM	Clear code	
S40(04-)	2004	B4184S11	ECM	Data stream	
S40(04-)	2004	B4184S11	ECM	Actuation	
S40(04-)	2004	B4184S11	ECM	Special functions	Resetting the adaptation values
S40(04-)	2004	D5244T	Diesel Eng	Sys. Info.	
S40(04-)	2004	D5244T	Diesel Eng	Read code	
S40(04-)	2004	D5244T	Diesel Eng	Clear code	
S40(04-)	2004	D5244T	Diesel Eng	Data stream	
S40(04-)	2004	D5244T	Diesel Eng	Actuation	
S40(04-)	2004	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)	2004	D5244T4	Diesel Eng	Sys. Info.	
S40(04-)	2004	D5244T4	Diesel Eng	Read code	
S40(04-)	2004	D5244T4	Diesel Eng	Clear code	
S40(04-)	2004	D5244T4	Diesel Eng	Data stream	
S40(04-)	2004	D5244T4	Diesel Eng	Actuation	
S40(04-)	2004	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)	2004	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)	2004	D5244T4	Diesel Eng	Special functions	Resetting counter oil
S40(04-)	2004	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)	2004	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)	2004	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)	2004	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)	2004	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)	2004	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2004	D5244T5	Diesel Eng	Sys. Info.	
S40(04-)	2004	D5244T5	Diesel Eng	Read code	
S40(04-)	2004	D5244T5	Diesel Eng	Clear code	

model	year	type	system	function	subfunction
S40(04-)	2004	D5244T5	Diesel Eng	Data stream	
S40(04-)	2004	D5244T5	Diesel Eng	Actuation	
S40(04-)	2004	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)	2004	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)	2004	D5244T5	Diesel Eng	Special functions	Resetting counter oil
S40(04-)	2004	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)	2004	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)	2004	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)	2004	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)	2004	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)	2004	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2004	D5244T8	Diesel Eng	Sys. Info.	
S40(04-)	2004	D5244T8	Diesel Eng	Read code	
S40(04-)	2004	D5244T8	Diesel Eng	Clear code	
S40(04-)	2004	D5244T8	Diesel Eng	Data stream	
S40(04-)	2004	D5244T8	Diesel Eng	Actuation	
S40(04-)	2004	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)	2004	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)	2004	D5244T8	Diesel Eng	Special functions	Resetting counter oil
S40(04-)	2004	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)	2004	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)	2004	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)	2004	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)	2004	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)	2004	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2004	D4164T	Diesel Eng	Sys. Info.	
S40(04-)	2004	D4164T	Diesel Eng	Read code	
S40(04-)	2004	D4164T	Diesel Eng	Clear code	
S40(04-)	2004	D4164T	Diesel Eng	Data stream	
S40(04-)	2004	D4164T	Diesel Eng	Actuation	
S40(04-)	2004	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)	2004	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)	2004	D4164T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2004	D4204T	Diesel Eng	Sys. Info.	
S40(04-)	2004	D4204T	Diesel Eng	Read code	
S40(04-)	2004	D4204T	Diesel Eng	Clear code	
S40(04-)	2004	D4204T	Diesel Eng	Data stream	
S40(04-)	2004	D4204T	Diesel Eng	Actuation	
S40(04-)	2004	D4204T	Diesel Eng	Freeze frame	
S40(04-)	2004	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)	2004	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S40(04-)	2004	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)	2004	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)	2004	D4204T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2004	AW55-50/51SN	TCM	Sys. Info.	
S40(04-)	2004	AW55-50/51SN	TCM	Read code	
S40(04-)	2004	AW55-50/51SN	TCM	Clear code	
S40(04-)	2004	AW55-50/51SN	TCM	Data stream	
S40(04-)	2004	AW55-50/51SN	TCM	Actuation	
S40(04-)	2004	AW55-50/51SN	TCM	Freeze frame	
S40(04-)	2004	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S40(04-)	2004	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2004	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S40(04-)	2004	AW55-50/51SN	TCM	Special functions	Control module adaptation
S40(04-)	2004	4T65AWD	TCM	Sys. Info.	
S40(04-)	2004	4T65AWD	TCM	Read code	
S40(04-)	2004	4T65AWD	TCM	Clear code	
S40(04-)	2004	4T65AWD	TCM	Data stream	
S40(04-)	2004	4T65AWD	TCM	Actuation	
S40(04-)	2004	4T65AWD	TCM	Special functions	Reset adaptation to zero
S40(04-)	2004	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2004	TF-80SC	TCM	Sys. Info.	
S40(04-)	2004	TF-80SC	TCM	Read code	
S40(04-)	2004	TF-80SC	TCM	Clear code	
S40(04-)	2004	TF-80SC	TCM	Data stream	
S40(04-)	2004	TF-80SC	TCM	Actuation	
S40(04-)	2004	TF-80SC	TCM	Special functions	Reset adaptation to zero
S40(04-)	2004	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)



model	year	type	system	function	subfunction
S40(04-)	2004	TF-80SC	TCM	Special functions	Calibration of position sensor
S40(04-)	2004	AW50/51AW D	TCM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	TCM	Read code	
S40(04-)	2004	AW50/51AW D	TCM	Clear code	
S40(04-)	2004	AW50/51AW D	TCM	Data stream	
S40(04-)	2004	AW50/51AW D	TCM	Actuation	
S40(04-)	2004	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S40(04-)	2004	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2004	AW50/51AW D	ABS	Sys. Info.	
S40(04-)	2004	AW50/51AW D	ABS	Read code	
S40(04-)	2004	AW50/51AW D	ABS	Clear code	
S40(04-)	2004	AW50/51AW D	ABS	Data stream	
S40(04-)	2004	AW50/51AW D	ABS	Actuation	
S40(04-)	2004	AW50/51AW D	ABS	Freeze frame	
S40(04-)	2004	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S40(04-)	2004	AW50/51AW D	ABS	Special functions	Reading off the configuration
S40(04-)	2004	AW50/51AW D	ABS	Special functions	Calibration
S40(04-)	2004	AW50/51AW D	SRS	Sys. Info.	
S40(04-)	2004	AW50/51AW D	SRS	Read code	
S40(04-)	2004	AW50/51AW D	SRS	Clear code	
S40(04-)	2004	AW50/51AW D	SRS	Data stream	
S40(04-)	2004	AW50/51AW D	SRS	Freeze frame	
S40(04-)	2004	AW50/51AW D	CEM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	CEM	Read code	
S40(04-)	2004	AW50/51AW D	CEM	Clear code	
S40(04-)	2004	AW50/51AW D	CEM	Data stream	
S40(04-)	2004	AW50/51AW D	CEM	Actuation	
S40(04-)	2004	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S40(04-)	2004	AW50/51AW D	CEM	Special functions	Programming control module
S40(04-)	2004	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S40(04-)	2004	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S40(04-)	2004	AW50/51AW D	CEM	Special functions	Resetting crash mode
S40(04-)	2004	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S40(04-)	2004	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S40(04-)	2004	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S40(04-)	2004	AW50/51AW D	CEM	Special functions	Ignition switch key position
S40(04-)	2004	AW50/51AW D	CCM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	CCM	Read code	
S40(04-)	2004	AW50/51AW D	CCM	Clear code	

model	year	type	system	function	subfunction
S40(04-)	2004	AW50/51AW D	CCM	Data stream	
S40(04-)	2004	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S40(04-)	2004	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S40(04-)	2004	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S40(04-)	2004	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S40(04-)	2004	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S40(04-)	2004	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S40(04-)	2004	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S40(04-)	2004	AW50/51AW D	DDM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	DDM	Read code	
S40(04-)	2004	AW50/51AW D	DDM	Clear code	
S40(04-)	2004	AW50/51AW D	DDM	Data stream	
S40(04-)	2004	AW50/51AW D	DDM	Actuation	
S40(04-)	2004	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S40(04-)	2004	AW50/51AW D	DIM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	DIM	Read code	
S40(04-)	2004	AW50/51AW D	DIM	Clear code	
S40(04-)	2004	AW50/51AW D	DIM	Data stream	
S40(04-)	2004	AW50/51AW D	DIM	Actuation	
S40(04-)	2004	AW50/51AW D	DIM	Freeze frame	
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Reseting the service reminder(SRI) (*)
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Display of DSTC message
S40(04-)	2004	AW50/51AW D	DIM	Special functions	Read out programmed values
S40(04-)	2004	AW50/51AW D	PDM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	PDM	Read code	
S40(04-)	2004	AW50/51AW D	PDM	Clear code	
S40(04-)	2004	AW50/51AW D	PDM	Data stream	

model	year	type	system	function	subfunction
S40(04-)	2004	AW50/51AW D	PDM	Actuation	
S40(04-)	2004	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S40(04-)	2004	AW50/51AW D	SWM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	SWM	Read code	
S40(04-)	2004	AW50/51AW D	SWM	Clear code	
S40(04-)	2004	AW50/51AW D	SWM	Data stream	
S40(04-)	2004	AW50/51AW D	PSM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	PSM	Read code	
S40(04-)	2004	AW50/51AW D	PSM	Clear code	
S40(04-)	2004	AW50/51AW D	PSM	Data stream	
S40(04-)	2004	AW50/51AW D	PSM	Actuation	
S40(04-)	2004	AW50/51AW D	PHM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	PHM	Read code	
S40(04-)	2004	AW50/51AW D	PHM	Clear code	
S40(04-)	2004	AW50/51AW D	PHM	Data stream	
S40(04-)	2004	AW50/51AW D	PHM	Actuation	
S40(04-)	2004	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S40(04-)	2004	AW50/51AW D	AUD	Sys. Info.	
S40(04-)	2004	AW50/51AW D	AUD	Read code	
S40(04-)	2004	AW50/51AW D	AUD	Clear code	
S40(04-)	2004	AW50/51AW D	ICM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	ICM	Read code	
S40(04-)	2004	AW50/51AW D	ICM	Clear code	
S40(04-)	2004	AW50/51AW D	ICM	Data stream	
S40(04-)	2004	AW50/51AW D	ICM	Actuation	
S40(04-)	2004	AW50/51AW D	MMM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	MMM	Read code	
S40(04-)	2004	AW50/51AW D	MMM	Clear code	
S40(04-)	2004	AW50/51AW D	MMM	Data stream	
S40(04-)	2004	AW50/51AW D	AEM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	AEM	Read code	
S40(04-)	2004	AW50/51AW D	AEM	Clear code	
S40(04-)	2004	AW50/51AW D	AEM	Data stream	
S40(04-)	2004	AW50/51AW D	AEM	Actuation	
S40(04-)	2004	AW50/51AW D	EPS	Sys. Info.	
S40(04-)	2004	AW50/51AW D	EPS	Read code	
S40(04-)	2004	AW50/51AW D	EPS	Clear code	
S40(04-)	2004	AW50/51AW D	EPS	Data stream	
S40(04-)	2004	AW50/51AW D	AFM	Sys. Info.	

model	year	type	system	function	subfunction
S40(04-)	2004	AW50/51AW D	AFM	Read code	
S40(04-)	2004	AW50/51AW D	AFM	Clear code	
S40(04-)	2004	AW50/51AW D	AFM	Data stream	
S40(04-)	2004	AW50/51AW D	AFM	Actuation	
S40(04-)	2004	AW50/51AW D	MPM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	MPM	Read code	
S40(04-)	2004	AW50/51AW D	MPM	Clear code	
S40(04-)	2004	AW50/51AW D	MPM	Data stream	
S40(04-)	2004	AW50/51AW D	MPM	Actuation	
S40(04-)	2004	AW50/51AW D	CPM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	CPM	Read code	
S40(04-)	2004	AW50/51AW D	CPM	Clear code	
S40(04-)	2004	AW50/51AW D	CPM	Data stream	
S40(04-)	2004	AW50/51AW D	CPM	Actuation	
S40(04-)	2004	AW50/51AW D	HCM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	HCM	Read code	
S40(04-)	2004	AW50/51AW D	HCM	Clear code	
S40(04-)	2004	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S40(04-)	2004	AW50/51AW D	KVM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	KVM	Read code	
S40(04-)	2004	AW50/51AW D	KVM	Clear code	
S40(04-)	2004	AW50/51AW D	KVM	Data stream	
S40(04-)	2004	AW50/51AW D	KVM	Actuation	
S40(04-)	2004	AW50/51AW D	RDAR	Sys. Info.	
S40(04-)	2004	AW50/51AW D	RDAR	Read code	
S40(04-)	2004	AW50/51AW D	RDAR	Clear code	
S40(04-)	2004	AW50/51AW D	RDAR	Data stream	
S40(04-)	2004	AW50/51AW D	SUB	Sys. Info.	
S40(04-)	2004	AW50/51AW D	SUB	Read code	
S40(04-)	2004	AW50/51AW D	SUB	Clear code	
S40(04-)	2004	AW50/51AW D	SUB	Data stream	
S40(04-)	2004	AW50/51AW D	CVM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	CVM	Read code	
S40(04-)	2004	AW50/51AW D	CVM	Clear code	
S40(04-)	2004	AW50/51AW D	CVM	Data stream	
S40(04-)	2004	AW50/51AW D	DABM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	DABM	Read code	
S40(04-)	2004	AW50/51AW D	DABM	Clear code	
S40(04-)	2004	AW50/51AW D	DABM	Data stream	

model	year	type	system	function	subfunction
S40(04-)	2004	AW50/51AW D	PAC	Sys. Info.	
S40(04-)	2004	AW50/51AW D	PAC	Read code	
S40(04-)	2004	AW50/51AW D	PAC	Clear code	
S40(04-)	2004	AW50/51AW D	PAC	Data stream	
S40(04-)	2004	AW50/51AW D	TRM	Sys. Info.	
S40(04-)	2004	AW50/51AW D	TRM	Read code	
S40(04-)	2004	AW50/51AW D	TRM	Clear code	
S40(04-)	2004	AW50/51AW D	TRM	Data stream	
S40(04-)	2005	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(04-)	2005	B5244S4	ECM	Sys. Info.	
S40(04-)	2005	B5244S4	ECM	Read code	
S40(04-)	2005	B5244S4	ECM	Clear code	
S40(04-)	2005	B5244S4	ECM	Data stream	
S40(04-)	2005	B5244S4	ECM	Actuation	
S40(04-)	2005	B5244S4	ECM	Special functions	Resetting the adaptation values
S40(04-)	2005	B5244S4	ECM	Special functions	Testing the fuel pump(FP)
S40(04-)	2005	B5244S5	ECM	Sys. Info.	
S40(04-)	2005	B5244S5	ECM	Read code	
S40(04-)	2005	B5244S5	ECM	Clear code	
S40(04-)	2005	B5244S5	ECM	Data stream	
S40(04-)	2005	B5244S5	ECM	Actuation	
S40(04-)	2005	B5244S5	ECM	Special functions	Resetting the adaptation values
S40(04-)	2005	B5244S7	ECM	Sys. Info.	
S40(04-)	2005	B5244S7	ECM	Read code	
S40(04-)	2005	B5244S7	ECM	Clear code	
S40(04-)	2005	B5244S7	ECM	Data stream	
S40(04-)	2005	B5244S7	ECM	Actuation	
S40(04-)	2005	B4204S3	ECM	Sys. Info.	
S40(04-)	2005	B4204S3	ECM	Read code	
S40(04-)	2005	B4204S3	ECM	Clear code	
S40(04-)	2005	B4204S3	ECM	Data stream	
S40(04-)	2005	B4204S3	ECM	Actuation	
S40(04-)	2005	B5254T2	ECM	Sys. Info.	
S40(04-)	2005	B5254T2	ECM	Read code	
S40(04-)	2005	B5254T2	ECM	Clear code	
S40(04-)	2005	B5254T2	ECM	Data stream	
S40(04-)	2005	B5254T2	ECM	Actuation	
S40(04-)	2005	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2005	B5254T3	ECM	Sys. Info.	
S40(04-)	2005	B5254T3	ECM	Read code	
S40(04-)	2005	B5254T3	ECM	Clear code	
S40(04-)	2005	B5254T3	ECM	Data stream	
S40(04-)	2005	B5254T3	ECM	Actuation	
S40(04-)	2005	B5254T3	ECM	Freeze frame	
S40(04-)	2005	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2005	B5254T7	ECM	Sys. Info.	
S40(04-)	2005	B5254T7	ECM	Read code	
S40(04-)	2005	B5254T7	ECM	Clear code	
S40(04-)	2005	B5254T7	ECM	Data stream	
S40(04-)	2005	B5254T7	ECM	Actuation	
S40(04-)	2005	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2005	B5204T5	ECM	Sys. Info.	
S40(04-)	2005	B5204T5	ECM	Read code	
S40(04-)	2005	B5204T5	ECM	Clear code	
S40(04-)	2005	B5204T5	ECM	Data stream	
S40(04-)	2005	B5204T5	ECM	Actuation	
S40(04-)	2005	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2005	B6294T	ECM	Sys. Info.	
S40(04-)	2005	B6294T	ECM	Read code	
S40(04-)	2005	B6294T	ECM	Clear code	
S40(04-)	2005	B6294T	ECM	Data stream	
S40(04-)	2005	B6294T	ECM	Actuation	
S40(04-)	2005	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2005	B4164S3	ECM	Sys. Info.	
S40(04-)	2005	B4164S3	ECM	Read code	
S40(04-)	2005	B4164S3	ECM	Clear code	
S40(04-)	2005	B4164S3	ECM	Data stream	
S40(04-)	2005	B4164S3	ECM	Actuation	
S40(04-)	2005	B4164S3	ECM	Freeze frame	

model	year	type	system	function	subfunction
S40(04-)		2005 B4164S3	ECM	Special functions	Resetting the adaptation values
S40(04-)		2005 B5244T5	ECM	Sys. Info.	
S40(04-)		2005 B5244T5	ECM	Read code	
S40(04-)		2005 B5244T5	ECM	Clear code	
S40(04-)		2005 B5244T5	ECM	Data stream	
S40(04-)		2005 B5244T5	ECM	Actuation	
S40(04-)		2005 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)		2005 B4184S11	ECM	Sys. Info.	
S40(04-)		2005 B4184S11	ECM	Read code	
S40(04-)		2005 B4184S11	ECM	Clear code	
S40(04-)		2005 B4184S11	ECM	Data stream	
S40(04-)		2005 B4184S11	ECM	Actuation	
S40(04-)		2005 B4184S11	ECM	Freeze frame	
S40(04-)		2005 B4184S11	ECM	Special functions	Resetting the adaptation values
S40(04-)		2005 D5244T	Diesel Eng	Sys. Info.	
S40(04-)		2005 D5244T	Diesel Eng	Read code	
S40(04-)		2005 D5244T	Diesel Eng	Clear code	
S40(04-)		2005 D5244T	Diesel Eng	Data stream	
S40(04-)		2005 D5244T	Diesel Eng	Actuation	
S40(04-)		2005 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)		2005 D5244T4	Diesel Eng	Sys. Info.	
S40(04-)		2005 D5244T4	Diesel Eng	Read code	
S40(04-)		2005 D5244T4	Diesel Eng	Clear code	
S40(04-)		2005 D5244T4	Diesel Eng	Data stream	
S40(04-)		2005 D5244T4	Diesel Eng	Actuation	
S40(04-)		2005 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2005 D5244T4	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2005 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2005 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2005 D5244T5	Diesel Eng	Sys. Info.	
S40(04-)		2005 D5244T5	Diesel Eng	Read code	
S40(04-)		2005 D5244T5	Diesel Eng	Clear code	
S40(04-)		2005 D5244T5	Diesel Eng	Data stream	
S40(04-)		2005 D5244T5	Diesel Eng	Actuation	
S40(04-)		2005 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2005 D5244T5	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2005 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2005 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2005 D5244T8	Diesel Eng	Sys. Info.	
S40(04-)		2005 D5244T8	Diesel Eng	Read code	
S40(04-)		2005 D5244T8	Diesel Eng	Clear code	
S40(04-)		2005 D5244T8	Diesel Eng	Data stream	
S40(04-)		2005 D5244T8	Diesel Eng	Actuation	
S40(04-)		2005 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2005 D5244T8	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2005 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2005 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2005 D4164T	Diesel Eng	Sys. Info.	
S40(04-)		2005 D4164T	Diesel Eng	Read code	
S40(04-)		2005 D4164T	Diesel Eng	Clear code	
S40(04-)		2005 D4164T	Diesel Eng	Data stream	
S40(04-)		2005 D4164T	Diesel Eng	Actuation	
S40(04-)		2005 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)		2005 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)		2005 D4164T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2005 D4204T	Diesel Eng	Sys. Info.	
S40(04-)		2005 D4204T	Diesel Eng	Read code	
S40(04-)		2005 D4204T	Diesel Eng	Clear code	
S40(04-)		2005 D4204T	Diesel Eng	Data stream	
S40(04-)		2005 D4204T	Diesel Eng	Actuation	
S40(04-)		2005 D4204T	Diesel Eng	Freeze frame	
S40(04-)		2005 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)		2005 D4204T	Diesel Eng	Special functions	Resetting the adaptation values

model	year	type	system	function	subfunction
S40(04-)	2005	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)	2005	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)	2005	D4204T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2005	AW55-50/51SN	TCM	Sys. Info.	
S40(04-)	2005	AW55-50/51SN	TCM	Read code	
S40(04-)	2005	AW55-50/51SN	TCM	Clear code	
S40(04-)	2005	AW55-50/51SN	TCM	Data stream	
S40(04-)	2005	AW55-50/51SN	TCM	Actuation	
S40(04-)	2005	AW55-50/51SN	TCM	Freeze frame	
S40(04-)	2005	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S40(04-)	2005	AW55-50/51SN	TCM	Special functions	Resetting adaptation
S40(04-)	2005	AW55-50/51SN	TCM	Special functions	Resetting the Transmission fluid change counter
S40(04-)	2005	AW55-50/51SN	TCM	Special functions	Activating gear indication
S40(04-)	2005	AW55-50/51SN	TCM	Special functions	Control module adaptation
S40(04-)	2005	4T65AWD	TCM	Sys. Info.	
S40(04-)	2005	4T65AWD	TCM	Read code	
S40(04-)	2005	4T65AWD	TCM	Clear code	
S40(04-)	2005	4T65AWD	TCM	Data stream	
S40(04-)	2005	4T65AWD	TCM	Actuation	
S40(04-)	2005	4T65AWD	TCM	Special functions	Reset adaptation to zero
S40(04-)	2005	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2005	TF-80SC	TCM	Sys. Info.	
S40(04-)	2005	TF-80SC	TCM	Read code	
S40(04-)	2005	TF-80SC	TCM	Clear code	
S40(04-)	2005	TF-80SC	TCM	Data stream	
S40(04-)	2005	TF-80SC	TCM	Actuation	
S40(04-)	2005	TF-80SC	TCM	Special functions	Reset adaptation to zero
S40(04-)	2005	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2005	TF-80SC	TCM	Special functions	Calibration of position sensor
S40(04-)	2005	AW50/51AW D	TCM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	TCM	Read code	
S40(04-)	2005	AW50/51AW D	TCM	Clear code	
S40(04-)	2005	AW50/51AW D	TCM	Data stream	
S40(04-)	2005	AW50/51AW D	TCM	Actuation	
S40(04-)	2005	AW50/51AW D	TCM	Freeze frame	
S40(04-)	2005	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S40(04-)	2005	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2005	AW50/51AW D	ABS	Sys. Info.	
S40(04-)	2005	AW50/51AW D	ABS	Read code	
S40(04-)	2005	AW50/51AW D	ABS	Clear code	
S40(04-)	2005	AW50/51AW D	ABS	Data stream	
S40(04-)	2005	AW50/51AW D	ABS	Actuation	
S40(04-)	2005	AW50/51AW D	ABS	Freeze frame	
S40(04-)	2005	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S40(04-)	2005	AW50/51AW D	ABS	Special functions	Reading off the configuration
S40(04-)	2005	AW50/51AW D	ABS	Special functions	Calibration
S40(04-)	2005	AW50/51AW D	SRS	Sys. Info.	
S40(04-)	2005	AW50/51AW D	SRS	Read code	

model	year	type	system	function	subfunction
S40(04-)	2005	AW50/51AW D	SRS	Clear code	
S40(04-)	2005	AW50/51AW D	SRS	Data stream	
S40(04-)	2005	AW50/51AW D	SRS	Freeze frame	
S40(04-)	2005	AW50/51AW D	CEM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	CEM	Read code	
S40(04-)	2005	AW50/51AW D	CEM	Clear code	
S40(04-)	2005	AW50/51AW D	CEM	Data stream	
S40(04-)	2005	AW50/51AW D	CEM	Actuation	
S40(04-)	2005	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S40(04-)	2005	AW50/51AW D	CEM	Special functions	Programming control module
S40(04-)	2005	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S40(04-)	2005	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S40(04-)	2005	AW50/51AW D	CEM	Special functions	Resetting crash mode
S40(04-)	2005	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S40(04-)	2005	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S40(04-)	2005	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S40(04-)	2005	AW50/51AW D	CEM	Special functions	Ignition switch key position
S40(04-)	2005	AW50/51AW D	CCM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	CCM	Read code	
S40(04-)	2005	AW50/51AW D	CCM	Clear code	
S40(04-)	2005	AW50/51AW D	CCM	Data stream	
S40(04-)	2005	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S40(04-)	2005	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S40(04-)	2005	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S40(04-)	2005	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S40(04-)	2005	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S40(04-)	2005	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
S40(04-)	2005	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S40(04-)	2005	AW50/51AW D	DDM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	DDM	Read code	
S40(04-)	2005	AW50/51AW D	DDM	Clear code	
S40(04-)	2005	AW50/51AW D	DDM	Data stream	
S40(04-)	2005	AW50/51AW D	DDM	Actuation	
S40(04-)	2005	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S40(04-)	2005	AW50/51AW D	DIM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	DIM	Read code	
S40(04-)	2005	AW50/51AW D	DIM	Clear code	
S40(04-)	2005	AW50/51AW D	DIM	Data stream	
S40(04-)	2005	AW50/51AW D	DIM	Actuation	



model	year	type	system	function	subfunction
S40(04-)	2005	AW50/51AW D	DIM	Freeze frame	
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Display of DSTC message
S40(04-)	2005	AW50/51AW D	DIM	Special functions	Read out programmed values
S40(04-)	2005	AW50/51AW D	PDM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	PDM	Read code	
S40(04-)	2005	AW50/51AW D	PDM	Clear code	
S40(04-)	2005	AW50/51AW D	PDM	Data stream	
S40(04-)	2005	AW50/51AW D	PDM	Actuation	
S40(04-)	2005	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S40(04-)	2005	AW50/51AW D	SWM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	SWM	Read code	
S40(04-)	2005	AW50/51AW D	SWM	Clear code	
S40(04-)	2005	AW50/51AW D	SWM	Data stream	
S40(04-)	2005	AW50/51AW D	PSM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	PSM	Read code	
S40(04-)	2005	AW50/51AW D	PSM	Clear code	
S40(04-)	2005	AW50/51AW D	PSM	Data stream	
S40(04-)	2005	AW50/51AW D	PSM	Actuation	
S40(04-)	2005	AW50/51AW D	PHM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	PHM	Read code	
S40(04-)	2005	AW50/51AW D	PHM	Clear code	
S40(04-)	2005	AW50/51AW D	PHM	Data stream	
S40(04-)	2005	AW50/51AW D	PHM	Actuation	
S40(04-)	2005	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S40(04-)	2005	AW50/51AW D	AUD	Sys. Info.	
S40(04-)	2005	AW50/51AW D	AUD	Read code	

model	year	type	system	function	subfunction
S40(04-)	2005	AW50/51AW D	AUD	Clear code	
S40(04-)	2005	AW50/51AW D	DEM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	DEM	Read code	
S40(04-)	2005	AW50/51AW D	DEM	Clear code	
S40(04-)	2005	AW50/51AW D	DEM	Data stream	
S40(04-)	2005	AW50/51AW D	ICM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	ICM	Read code	
S40(04-)	2005	AW50/51AW D	ICM	Clear code	
S40(04-)	2005	AW50/51AW D	ICM	Data stream	
S40(04-)	2005	AW50/51AW D	ICM	Actuation	
S40(04-)	2005	AW50/51AW D	MMM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	MMM	Read code	
S40(04-)	2005	AW50/51AW D	MMM	Clear code	
S40(04-)	2005	AW50/51AW D	MMM	Data stream	
S40(04-)	2005	AW50/51AW D	AEM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	AEM	Read code	
S40(04-)	2005	AW50/51AW D	AEM	Clear code	
S40(04-)	2005	AW50/51AW D	AEM	Data stream	
S40(04-)	2005	AW50/51AW D	AEM	Actuation	
S40(04-)	2005	AW50/51AW D	ADM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	ADM	Read code	
S40(04-)	2005	AW50/51AW D	ADM	Clear code	
S40(04-)	2005	AW50/51AW D	ADM	Data stream	
S40(04-)	2005	AW50/51AW D	EPS	Sys. Info.	
S40(04-)	2005	AW50/51AW D	EPS	Read code	
S40(04-)	2005	AW50/51AW D	EPS	Clear code	
S40(04-)	2005	AW50/51AW D	EPS	Data stream	
S40(04-)	2005	AW50/51AW D	PAM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	PAM	Read code	
S40(04-)	2005	AW50/51AW D	PAM	Clear code	
S40(04-)	2005	AW50/51AW D	PAM	Data stream	
S40(04-)	2005	AW50/51AW D	IAM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	IAM	Read code	
S40(04-)	2005	AW50/51AW D	IAM	Clear code	
S40(04-)	2005	AW50/51AW D	IAM	Data stream	
S40(04-)	2005	AW50/51AW D	IAM	Actuation	
S40(04-)	2005	AW50/51AW D	AFM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	AFM	Read code	
S40(04-)	2005	AW50/51AW D	AFM	Clear code	

model	year	type	system	function	subfunction
S40(04-)	2005	AW50/51AW D	AFM	Data stream	
S40(04-)	2005	AW50/51AW D	AFM	Actuation	
S40(04-)	2005	AW50/51AW D	MPM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	MPM	Read code	
S40(04-)	2005	AW50/51AW D	MPM	Clear code	
S40(04-)	2005	AW50/51AW D	MPM	Data stream	
S40(04-)	2005	AW50/51AW D	MPM	Actuation	
S40(04-)	2005	AW50/51AW D	CPM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	CPM	Read code	
S40(04-)	2005	AW50/51AW D	CPM	Clear code	
S40(04-)	2005	AW50/51AW D	CPM	Data stream	
S40(04-)	2005	AW50/51AW D	CPM	Actuation	
S40(04-)	2005	AW50/51AW D	HCM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	HCM	Read code	
S40(04-)	2005	AW50/51AW D	HCM	Clear code	
S40(04-)	2005	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S40(04-)	2005	AW50/51AW D	KVM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	KVM	Read code	
S40(04-)	2005	AW50/51AW D	KVM	Clear code	
S40(04-)	2005	AW50/51AW D	KVM	Data stream	
S40(04-)	2005	AW50/51AW D	KVM	Actuation	
S40(04-)	2005	AW50/51AW D	RDAR	Sys. Info.	
S40(04-)	2005	AW50/51AW D	RDAR	Read code	
S40(04-)	2005	AW50/51AW D	RDAR	Clear code	
S40(04-)	2005	AW50/51AW D	RDAR	Data stream	
S40(04-)	2005	AW50/51AW D	SUB	Sys. Info.	
S40(04-)	2005	AW50/51AW D	SUB	Read code	
S40(04-)	2005	AW50/51AW D	SUB	Clear code	
S40(04-)	2005	AW50/51AW D	SUB	Data stream	
S40(04-)	2005	AW50/51AW D	CVM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	CVM	Read code	
S40(04-)	2005	AW50/51AW D	CVM	Clear code	
S40(04-)	2005	AW50/51AW D	CVM	Data stream	
S40(04-)	2005	AW50/51AW D	DABM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	DABM	Read code	
S40(04-)	2005	AW50/51AW D	DABM	Clear code	
S40(04-)	2005	AW50/51AW D	DABM	Data stream	
S40(04-)	2005	AW50/51AW D	PAC	Sys. Info.	
S40(04-)	2005	AW50/51AW D	PAC	Read code	

model	year	type	system	function	subfunction
S40(04-)	2005	AW50/51AW D	PAC	Clear code	
S40(04-)	2005	AW50/51AW D	PAC	Data stream	
S40(04-)	2005	AW50/51AW D	TRM	Sys. Info.	
S40(04-)	2005	AW50/51AW D	TRM	Read code	
S40(04-)	2005	AW50/51AW D	TRM	Clear code	
S40(04-)	2005	AW50/51AW D	TRM	Data stream	
S40(04-)	2006	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(04-)	2006	B5244S4	ECM	Sys. Info.	
S40(04-)	2006	B5244S4	ECM	Read code	
S40(04-)	2006	B5244S4	ECM	Clear code	
S40(04-)	2006	B5244S4	ECM	Data stream	
S40(04-)	2006	B5244S4	ECM	Actuation	
S40(04-)	2006	B5244S4	ECM	Special functions	Resetting the adaptation values
S40(04-)	2006	B5244S4	ECM	Special functions	Testing the fuel pump(FP)
S40(04-)	2006	B5244S5	ECM	Sys. Info.	
S40(04-)	2006	B5244S5	ECM	Read code	
S40(04-)	2006	B5244S5	ECM	Clear code	
S40(04-)	2006	B5244S5	ECM	Data stream	
S40(04-)	2006	B5244S5	ECM	Actuation	
S40(04-)	2006	B5244S5	ECM	Special functions	Resetting the adaptation values
S40(04-)	2006	B5244S7	ECM	Sys. Info.	
S40(04-)	2006	B5244S7	ECM	Read code	
S40(04-)	2006	B5244S7	ECM	Clear code	
S40(04-)	2006	B5244S7	ECM	Data stream	
S40(04-)	2006	B5244S7	ECM	Actuation	
S40(04-)	2006	B4204S3	ECM	Sys. Info.	
S40(04-)	2006	B4204S3	ECM	Read code	
S40(04-)	2006	B4204S3	ECM	Clear code	
S40(04-)	2006	B4204S3	ECM	Data stream	
S40(04-)	2006	B4204S3	ECM	Actuation	
S40(04-)	2006	B5254T2	ECM	Sys. Info.	
S40(04-)	2006	B5254T2	ECM	Read code	
S40(04-)	2006	B5254T2	ECM	Clear code	
S40(04-)	2006	B5254T2	ECM	Data stream	
S40(04-)	2006	B5254T2	ECM	Actuation	
S40(04-)	2006	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2006	B5254T3	ECM	Sys. Info.	
S40(04-)	2006	B5254T3	ECM	Read code	
S40(04-)	2006	B5254T3	ECM	Clear code	
S40(04-)	2006	B5254T3	ECM	Data stream	
S40(04-)	2006	B5254T3	ECM	Actuation	
S40(04-)	2006	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2006	B5254T7	ECM	Sys. Info.	
S40(04-)	2006	B5254T7	ECM	Read code	
S40(04-)	2006	B5254T7	ECM	Clear code	
S40(04-)	2006	B5254T7	ECM	Data stream	
S40(04-)	2006	B5254T7	ECM	Actuation	
S40(04-)	2006	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2006	B5204T5	ECM	Sys. Info.	
S40(04-)	2006	B5204T5	ECM	Read code	
S40(04-)	2006	B5204T5	ECM	Clear code	
S40(04-)	2006	B5204T5	ECM	Data stream	
S40(04-)	2006	B5204T5	ECM	Actuation	
S40(04-)	2006	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2006	B6294T	ECM	Sys. Info.	
S40(04-)	2006	B6294T	ECM	Read code	
S40(04-)	2006	B6294T	ECM	Clear code	
S40(04-)	2006	B6294T	ECM	Data stream	
S40(04-)	2006	B6294T	ECM	Actuation	
S40(04-)	2006	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2006	B4164S3	ECM	Sys. Info.	
S40(04-)	2006	B4164S3	ECM	Read code	
S40(04-)	2006	B4164S3	ECM	Clear code	
S40(04-)	2006	B4164S3	ECM	Data stream	
S40(04-)	2006	B4164S3	ECM	Actuation	
S40(04-)	2006	B4164S3	ECM	Freeze frame	
S40(04-)	2006	B4164S3	ECM	Special functions	Resetting the adaptation values
S40(04-)	2006	B5244T5	ECM	Sys. Info.	
S40(04-)	2006	B5244T5	ECM	Read code	
S40(04-)	2006	B5244T5	ECM	Clear code	
S40(04-)	2006	B5244T5	ECM	Data stream	

model	year	type	system	function	subfunction
S40(04-)		2006 B5244T5	ECM	Actuation	
S40(04-)		2006 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)		2006 B4184S11	ECM	Sys. Info.	
S40(04-)		2006 B4184S11	ECM	Read code	
S40(04-)		2006 B4184S11	ECM	Clear code	
S40(04-)		2006 B4184S11	ECM	Data stream	
S40(04-)		2006 B4184S11	ECM	Actuation	
S40(04-)		2006 B4184S11	ECM	Freeze frame	
S40(04-)		2006 B4184S11	ECM	Special functions	Resetting the adaptation values
S40(04-)		2006 D5244T	Diesel Eng	Sys. Info.	
S40(04-)		2006 D5244T	Diesel Eng	Read code	
S40(04-)		2006 D5244T	Diesel Eng	Clear code	
S40(04-)		2006 D5244T	Diesel Eng	Data stream	
S40(04-)		2006 D5244T	Diesel Eng	Actuation	
S40(04-)		2006 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)		2006 D5244T4	Diesel Eng	Sys. Info.	
S40(04-)		2006 D5244T4	Diesel Eng	Read code	
S40(04-)		2006 D5244T4	Diesel Eng	Clear code	
S40(04-)		2006 D5244T4	Diesel Eng	Data stream	
S40(04-)		2006 D5244T4	Diesel Eng	Actuation	
S40(04-)		2006 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2006 D5244T4	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2006 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2006 D5244T5	Diesel Eng	Sys. Info.	
S40(04-)		2006 D5244T5	Diesel Eng	Read code	
S40(04-)		2006 D5244T5	Diesel Eng	Clear code	
S40(04-)		2006 D5244T5	Diesel Eng	Data stream	
S40(04-)		2006 D5244T5	Diesel Eng	Actuation	
S40(04-)		2006 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2006 D5244T5	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2006 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2006 D5244T8	Diesel Eng	Sys. Info.	
S40(04-)		2006 D5244T8	Diesel Eng	Read code	
S40(04-)		2006 D5244T8	Diesel Eng	Clear code	
S40(04-)		2006 D5244T8	Diesel Eng	Data stream	
S40(04-)		2006 D5244T8	Diesel Eng	Actuation	
S40(04-)		2006 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2006 D5244T8	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2006 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2006 D4164T	Diesel Eng	Sys. Info.	
S40(04-)		2006 D4164T	Diesel Eng	Read code	
S40(04-)		2006 D4164T	Diesel Eng	Clear code	
S40(04-)		2006 D4164T	Diesel Eng	Data stream	
S40(04-)		2006 D4164T	Diesel Eng	Actuation	
S40(04-)		2006 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)		2006 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)		2006 D4164T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2006 D4204T	Diesel Eng	Sys. Info.	
S40(04-)		2006 D4204T	Diesel Eng	Read code	
S40(04-)		2006 D4204T	Diesel Eng	Clear code	
S40(04-)		2006 D4204T	Diesel Eng	Data stream	
S40(04-)		2006 D4204T	Diesel Eng	Actuation	
S40(04-)		2006 D4204T	Diesel Eng	Freeze frame	
S40(04-)		2006 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)		2006 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S40(04-)		2006 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)		2006 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)		2006 D4204T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2006 AW55-50/51SN	TCM	Sys. Info.	

model	year	type	system	function	subfunction
S40(04-)	2006	AW55-50/51SN	TCM	Read code	
S40(04-)	2006	AW55-50/51SN	TCM	Clear code	
S40(04-)	2006	AW55-50/51SN	TCM	Data stream	
S40(04-)	2006	AW55-50/51SN	TCM	Actuation	
S40(04-)	2006	AW55-50/51SN	TCM	Freeze frame	
S40(04-)	2006	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S40(04-)	2006	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2006	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S40(04-)	2006	AW55-50/51SN	TCM	Special functions	.Control module adaptation
S40(04-)	2006	4T65AWD	TCM	Sys. Info.	
S40(04-)	2006	4T65AWD	TCM	Read code	
S40(04-)	2006	4T65AWD	TCM	Clear code	
S40(04-)	2006	4T65AWD	TCM	Data stream	
S40(04-)	2006	4T65AWD	TCM	Actuation	
S40(04-)	2006	4T65AWD	TCM	Special functions	Reset adaptation to zero
S40(04-)	2006	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2006	TF-80SC	TCM	Sys. Info.	
S40(04-)	2006	TF-80SC	TCM	Read code	
S40(04-)	2006	TF-80SC	TCM	Clear code	
S40(04-)	2006	TF-80SC	TCM	Data stream	
S40(04-)	2006	TF-80SC	TCM	Actuation	
S40(04-)	2006	TF-80SC	TCM	Special functions	Reset adaptation to zero
S40(04-)	2006	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2006	TF-80SC	TCM	Special functions	Calibration of position sensor
S40(04-)	2006	AW50/51AW D	TCM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	TCM	Read code	
S40(04-)	2006	AW50/51AW D	TCM	Clear code	
S40(04-)	2006	AW50/51AW D	TCM	Data stream	
S40(04-)	2006	AW50/51AW D	TCM	Actuation	
S40(04-)	2006	AW50/51AW D	TCM	Freeze frame	
S40(04-)	2006	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S40(04-)	2006	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2006	AW50/51AW D	ABS	Sys. Info.	
S40(04-)	2006	AW50/51AW D	ABS	Read code	
S40(04-)	2006	AW50/51AW D	ABS	Clear code	
S40(04-)	2006	AW50/51AW D	ABS	Data stream	
S40(04-)	2006	AW50/51AW D	ABS	Actuation	
S40(04-)	2006	AW50/51AW D	ABS	Freeze frame	
S40(04-)	2006	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S40(04-)	2006	AW50/51AW D	ABS	Special functions	Reading off the configuration
S40(04-)	2006	AW50/51AW D	ABS	Special functions	Calibration
S40(04-)	2006	AW50/51AW D	SRS	Sys. Info.	
S40(04-)	2006	AW50/51AW D	SRS	Read code	
S40(04-)	2006	AW50/51AW D	SRS	Clear code	
S40(04-)	2006	AW50/51AW D	SRS	Data stream	
S40(04-)	2006	AW50/51AW D	SRS	Freeze frame	

model	year	type	system	function	subfunction
S40(04-)	2006	AW50/51AW D	CEM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	CEM	Read code	
S40(04-)	2006	AW50/51AW D	CEM	Clear code	
S40(04-)	2006	AW50/51AW D	CEM	Data stream	
S40(04-)	2006	AW50/51AW D	CEM	Actuation	
S40(04-)	2006	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S40(04-)	2006	AW50/51AW D	CEM	Special functions	Programming control module
S40(04-)	2006	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S40(04-)	2006	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S40(04-)	2006	AW50/51AW D	CEM	Special functions	Resetting crash mode
S40(04-)	2006	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S40(04-)	2006	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S40(04-)	2006	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S40(04-)	2006	AW50/51AW D	CEM	Special functions	Ignition switch key position
S40(04-)	2006	AW50/51AW D	CCM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	CCM	Read code	
S40(04-)	2006	AW50/51AW D	CCM	Clear code	
S40(04-)	2006	AW50/51AW D	CCM	Data stream	
S40(04-)	2006	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
S40(04-)	2006	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S40(04-)	2006	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S40(04-)	2006	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S40(04-)	2006	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S40(04-)	2006	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S40(04-)	2006	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S40(04-)	2006	AW50/51AW D	DDM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	DDM	Read code	
S40(04-)	2006	AW50/51AW D	DDM	Clear code	
S40(04-)	2006	AW50/51AW D	DDM	Data stream	
S40(04-)	2006	AW50/51AW D	DDM	Actuation	
S40(04-)	2006	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S40(04-)	2006	AW50/51AW D	DIM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	DIM	Read code	
S40(04-)	2006	AW50/51AW D	DIM	Clear code	
S40(04-)	2006	AW50/51AW D	DIM	Data stream	
S40(04-)	2006	AW50/51AW D	DIM	Actuation	
S40(04-)	2006	AW50/51AW D	DIM	Freeze frame	
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)

model	year	type	system	function	subfunction
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Display of DSTC message
S40(04-)	2006	AW50/51AW D	DIM	Special functions	Read out programmed values
S40(04-)	2006	AW50/51AW D	PDM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	PDM	Read code	
S40(04-)	2006	AW50/51AW D	PDM	Clear code	
S40(04-)	2006	AW50/51AW D	PDM	Data stream	
S40(04-)	2006	AW50/51AW D	PDM	Actuation	
S40(04-)	2006	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S40(04-)	2006	AW50/51AW D	SWM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	SWM	Read code	
S40(04-)	2006	AW50/51AW D	SWM	Clear code	
S40(04-)	2006	AW50/51AW D	SWM	Data stream	
S40(04-)	2006	AW50/51AW D	PSM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	PSM	Read code	
S40(04-)	2006	AW50/51AW D	PSM	Clear code	
S40(04-)	2006	AW50/51AW D	PSM	Data stream	
S40(04-)	2006	AW50/51AW D	PSM	Actuation	
S40(04-)	2006	AW50/51AW D	PHM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	PHM	Read code	
S40(04-)	2006	AW50/51AW D	PHM	Clear code	
S40(04-)	2006	AW50/51AW D	PHM	Data stream	
S40(04-)	2006	AW50/51AW D	PHM	Actuation	
S40(04-)	2006	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S40(04-)	2006	AW50/51AW D	AUD	Sys. Info.	
S40(04-)	2006	AW50/51AW D	AUD	Read code	
S40(04-)	2006	AW50/51AW D	AUD	Clear code	
S40(04-)	2006	AW50/51AW D	DEM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	DEM	Read code	



model	year	type	system	function	subfunction
S40(04-)	2006	AW50/51AW D	DEM	Clear code	
S40(04-)	2006	AW50/51AW D	DEM	Data stream	
S40(04-)	2006	AW50/51AW D	ICM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	ICM	Read code	
S40(04-)	2006	AW50/51AW D	ICM	Clear code	
S40(04-)	2006	AW50/51AW D	ICM	Data stream	
S40(04-)	2006	AW50/51AW D	ICM	Actuation	
S40(04-)	2006	AW50/51AW D	MMM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	MMM	Read code	
S40(04-)	2006	AW50/51AW D	MMM	Clear code	
S40(04-)	2006	AW50/51AW D	MMM	Data stream	
S40(04-)	2006	AW50/51AW D	AEM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	AEM	Read code	
S40(04-)	2006	AW50/51AW D	AEM	Clear code	
S40(04-)	2006	AW50/51AW D	AEM	Data stream	
S40(04-)	2006	AW50/51AW D	AEM	Actuation	
S40(04-)	2006	AW50/51AW D	ADM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	ADM	Read code	
S40(04-)	2006	AW50/51AW D	ADM	Clear code	
S40(04-)	2006	AW50/51AW D	ADM	Data stream	
S40(04-)	2006	AW50/51AW D	EPS	Sys. Info.	
S40(04-)	2006	AW50/51AW D	EPS	Read code	
S40(04-)	2006	AW50/51AW D	EPS	Clear code	
S40(04-)	2006	AW50/51AW D	EPS	Data stream	
S40(04-)	2006	AW50/51AW D	PAM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	PAM	Read code	
S40(04-)	2006	AW50/51AW D	PAM	Clear code	
S40(04-)	2006	AW50/51AW D	PAM	Data stream	
S40(04-)	2006	AW50/51AW D	IAM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	IAM	Read code	
S40(04-)	2006	AW50/51AW D	IAM	Clear code	
S40(04-)	2006	AW50/51AW D	IAM	Data stream	
S40(04-)	2006	AW50/51AW D	IAM	Actuation	
S40(04-)	2006	AW50/51AW D	AFM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	AFM	Read code	
S40(04-)	2006	AW50/51AW D	AFM	Clear code	
S40(04-)	2006	AW50/51AW D	AFM	Data stream	
S40(04-)	2006	AW50/51AW D	AFM	Actuation	
S40(04-)	2006	AW50/51AW D	MPM	Sys. Info.	

model	year	type	system	function	subfunction
S40(04-)	2006	AW50/51AW D	MPM	Read code	
S40(04-)	2006	AW50/51AW D	MPM	Clear code	
S40(04-)	2006	AW50/51AW D	MPM	Data stream	
S40(04-)	2006	AW50/51AW D	MPM	Actuation	
S40(04-)	2006	AW50/51AW D	CPM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	CPM	Read code	
S40(04-)	2006	AW50/51AW D	CPM	Clear code	
S40(04-)	2006	AW50/51AW D	CPM	Data stream	
S40(04-)	2006	AW50/51AW D	CPM	Actuation	
S40(04-)	2006	AW50/51AW D	HCM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	HCM	Read code	
S40(04-)	2006	AW50/51AW D	HCM	Clear code	
S40(04-)	2006	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S40(04-)	2006	AW50/51AW D	KVM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	KVM	Read code	
S40(04-)	2006	AW50/51AW D	KVM	Clear code	
S40(04-)	2006	AW50/51AW D	KVM	Data stream	
S40(04-)	2006	AW50/51AW D	KVM	Actuation	
S40(04-)	2006	AW50/51AW D	RDAR	Sys. Info.	
S40(04-)	2006	AW50/51AW D	RDAR	Read code	
S40(04-)	2006	AW50/51AW D	RDAR	Clear code	
S40(04-)	2006	AW50/51AW D	RDAR	Data stream	
S40(04-)	2006	AW50/51AW D	SUB	Sys. Info.	
S40(04-)	2006	AW50/51AW D	SUB	Read code	
S40(04-)	2006	AW50/51AW D	SUB	Clear code	
S40(04-)	2006	AW50/51AW D	SUB	Data stream	
S40(04-)	2006	AW50/51AW D	CVM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	CVM	Read code	
S40(04-)	2006	AW50/51AW D	CVM	Clear code	
S40(04-)	2006	AW50/51AW D	CVM	Data stream	
S40(04-)	2006	AW50/51AW D	DABM	Sys. Info.	
S40(04-)	2006	AW50/51AW D	DABM	Read code	
S40(04-)	2006	AW50/51AW D	DABM	Clear code	
S40(04-)	2006	AW50/51AW D	DABM	Data stream	
S40(04-)	2006	AW50/51AW D	PAC	Sys. Info.	
S40(04-)	2006	AW50/51AW D	PAC	Read code	
S40(04-)	2006	AW50/51AW D	PAC	Clear code	
S40(04-)	2006	AW50/51AW D	PAC	Data stream	
S40(04-)	2006	AW50/51AW D	TRM	Sys. Info.	

model	year	type	system	function	subfunction
S40(04-)	2006	AW50/51AW D	TRM	Read code	
S40(04-)	2006	AW50/51AW D	TRM	Clear code	
S40(04-)	2006	AW50/51AW D	TRM	Data stream	
S40(04-)	2007	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(04-)	2007	B5244S4	ECM	Sys. Info.	
S40(04-)	2007	B5244S4	ECM	Read code	
S40(04-)	2007	B5244S4	ECM	Clear code	
S40(04-)	2007	B5244S4	ECM	Data stream	
S40(04-)	2007	B5244S4	ECM	Actuation	
S40(04-)	2007	B5244S4	ECM	Special functions	Resetting the adaptation values
S40(04-)	2007	B5244S4	ECM	Special functions	Testing the fuel pump(FP)
S40(04-)	2007	B5244S5	ECM	Sys. Info.	
S40(04-)	2007	B5244S5	ECM	Read code	
S40(04-)	2007	B5244S5	ECM	Clear code	
S40(04-)	2007	B5244S5	ECM	Data stream	
S40(04-)	2007	B5244S5	ECM	Actuation	
S40(04-)	2007	B5244S5	ECM	Special functions	Resetting the adaptation values
S40(04-)	2007	B5244S7	ECM	Sys. Info.	
S40(04-)	2007	B5244S7	ECM	Read code	
S40(04-)	2007	B5244S7	ECM	Clear code	
S40(04-)	2007	B5244S7	ECM	Data stream	
S40(04-)	2007	B5244S7	ECM	Actuation	
S40(04-)	2007	B4204S3	ECM	Sys. Info.	
S40(04-)	2007	B4204S3	ECM	Read code	
S40(04-)	2007	B4204S3	ECM	Clear code	
S40(04-)	2007	B4204S3	ECM	Data stream	
S40(04-)	2007	B4204S3	ECM	Actuation	
S40(04-)	2007	B4204S3	ECM	Freeze frame	
S40(04-)	2007	B5254T2	ECM	Sys. Info.	
S40(04-)	2007	B5254T2	ECM	Read code	
S40(04-)	2007	B5254T2	ECM	Clear code	
S40(04-)	2007	B5254T2	ECM	Data stream	
S40(04-)	2007	B5254T2	ECM	Actuation	
S40(04-)	2007	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2007	B5254T3	ECM	Sys. Info.	
S40(04-)	2007	B5254T3	ECM	Read code	
S40(04-)	2007	B5254T3	ECM	Clear code	
S40(04-)	2007	B5254T3	ECM	Data stream	
S40(04-)	2007	B5254T3	ECM	Actuation	
S40(04-)	2007	B5254T3	ECM	Freeze frame	
S40(04-)	2007	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2007	B5254T7	ECM	Sys. Info.	
S40(04-)	2007	B5254T7	ECM	Read code	
S40(04-)	2007	B5254T7	ECM	Clear code	
S40(04-)	2007	B5254T7	ECM	Data stream	
S40(04-)	2007	B5254T7	ECM	Actuation	
S40(04-)	2007	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2007	B5204T5	ECM	Sys. Info.	
S40(04-)	2007	B5204T5	ECM	Read code	
S40(04-)	2007	B5204T5	ECM	Clear code	
S40(04-)	2007	B5204T5	ECM	Data stream	
S40(04-)	2007	B5204T5	ECM	Actuation	
S40(04-)	2007	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2007	B6294T	ECM	Sys. Info.	
S40(04-)	2007	B6294T	ECM	Read code	
S40(04-)	2007	B6294T	ECM	Clear code	
S40(04-)	2007	B6294T	ECM	Data stream	
S40(04-)	2007	B6294T	ECM	Actuation	
S40(04-)	2007	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2007	B4164S3	ECM	Sys. Info.	
S40(04-)	2007	B4164S3	ECM	Read code	
S40(04-)	2007	B4164S3	ECM	Clear code	
S40(04-)	2007	B4164S3	ECM	Data stream	
S40(04-)	2007	B4164S3	ECM	Actuation	
S40(04-)	2007	B4164S3	ECM	Freeze frame	
S40(04-)	2007	B4164S3	ECM	Special functions	Resetting the adaptation values
S40(04-)	2007	B5244T5	ECM	Sys. Info.	
S40(04-)	2007	B5244T5	ECM	Read code	
S40(04-)	2007	B5244T5	ECM	Clear code	
S40(04-)	2007	B5244T5	ECM	Data stream	
S40(04-)	2007	B5244T5	ECM	Actuation	
S40(04-)	2007	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2007	B4184S11	ECM	Sys. Info.	
S40(04-)	2007	B4184S11	ECM	Read code	

model	year	type	system	function	subfunction	
S40(04-)		2007	B4184S11	ECM	Clear code	
S40(04-)		2007	B4184S11	ECM	Data stream	
S40(04-)		2007	B4184S11	ECM	Actuation	
S40(04-)		2007	B4184S11	ECM	Freeze frame	
S40(04-)		2007	B4184S11	ECM	Special functions	Resetting the adaptation values
S40(04-)		2007	D5244T	Diesel Eng	Sys. Info.	
S40(04-)		2007	D5244T	Diesel Eng	Read code	
S40(04-)		2007	D5244T	Diesel Eng	Clear code	
S40(04-)		2007	D5244T	Diesel Eng	Data stream	
S40(04-)		2007	D5244T	Diesel Eng	Actuation	
S40(04-)		2007	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)		2007	D5244T4	Diesel Eng	Sys. Info.	
S40(04-)		2007	D5244T4	Diesel Eng	Read code	
S40(04-)		2007	D5244T4	Diesel Eng	Clear code	
S40(04-)		2007	D5244T4	Diesel Eng	Data stream	
S40(04-)		2007	D5244T4	Diesel Eng	Actuation	
S40(04-)		2007	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2007	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2007	D5244T4	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2007	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2007	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2007	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2007	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2007	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2007	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2007	D5244T5	Diesel Eng	Sys. Info.	
S40(04-)		2007	D5244T5	Diesel Eng	Read code	
S40(04-)		2007	D5244T5	Diesel Eng	Clear code	
S40(04-)		2007	D5244T5	Diesel Eng	Data stream	
S40(04-)		2007	D5244T5	Diesel Eng	Actuation	
S40(04-)		2007	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2007	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2007	D5244T5	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2007	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2007	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2007	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2007	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2007	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2007	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2007	D5244T8	Diesel Eng	Sys. Info.	
S40(04-)		2007	D5244T8	Diesel Eng	Read code	
S40(04-)		2007	D5244T8	Diesel Eng	Clear code	
S40(04-)		2007	D5244T8	Diesel Eng	Data stream	
S40(04-)		2007	D5244T8	Diesel Eng	Actuation	
S40(04-)		2007	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2007	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2007	D5244T8	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2007	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2007	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2007	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2007	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2007	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2007	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2007	D4164T	Diesel Eng	Sys. Info.	
S40(04-)		2007	D4164T	Diesel Eng	Read code	
S40(04-)		2007	D4164T	Diesel Eng	Clear code	
S40(04-)		2007	D4164T	Diesel Eng	Data stream	
S40(04-)		2007	D4164T	Diesel Eng	Actuation	
S40(04-)		2007	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)		2007	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)		2007	D4164T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2007	D4204T	Diesel Eng	Sys. Info.	
S40(04-)		2007	D4204T	Diesel Eng	Read code	
S40(04-)		2007	D4204T	Diesel Eng	Clear code	
S40(04-)		2007	D4204T	Diesel Eng	Data stream	
S40(04-)		2007	D4204T	Diesel Eng	Actuation	
S40(04-)		2007	D4204T	Diesel Eng	Freeze frame	
S40(04-)		2007	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)		2007	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S40(04-)		2007	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)		2007	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)		2007	D4204T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2007	AW55-50/51SN	TCM	Sys. Info.	
S40(04-)		2007	AW55-50/51SN	TCM	Read code	
S40(04-)		2007	AW55-50/51SN	TCM	Clear code	

model	year	type	system	function	subfunction
S40(04-)	2007	AW55-50/51SN	TCM	Data stream	
S40(04-)	2007	AW55-50/51SN	TCM	Actuation	
S40(04-)	2007	AW55-50/51SN	TCM	Freeze frame	
S40(04-)	2007	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S40(04-)	2007	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2007	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S40(04-)	2007	4T65AWD	TCM	Sys. Info.	
S40(04-)	2007	4T65AWD	TCM	Read code	
S40(04-)	2007	4T65AWD	TCM	Clear code	
S40(04-)	2007	4T65AWD	TCM	Data stream	
S40(04-)	2007	4T65AWD	TCM	Actuation	
S40(04-)	2007	4T65AWD	TCM	Special functions	Reset adaptation to zero
S40(04-)	2007	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2007	TF-80SC	TCM	Sys. Info.	
S40(04-)	2007	TF-80SC	TCM	Read code	
S40(04-)	2007	TF-80SC	TCM	Clear code	
S40(04-)	2007	TF-80SC	TCM	Data stream	
S40(04-)	2007	TF-80SC	TCM	Actuation	
S40(04-)	2007	TF-80SC	TCM	Special functions	Reset adaptation to zero
S40(04-)	2007	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2007	TF-80SC	TCM	Special functions	Calibration of position sensor
S40(04-)	2007	AW50/51AW D	TCM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	TCM	Read code	
S40(04-)	2007	AW50/51AW D	TCM	Clear code	
S40(04-)	2007	AW50/51AW D	TCM	Data stream	
S40(04-)	2007	AW50/51AW D	TCM	Actuation	
S40(04-)	2007	AW50/51AW D	TCM	Freeze frame	
S40(04-)	2007	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S40(04-)	2007	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2007	AW50/51AW D	ABS	Sys. Info.	
S40(04-)	2007	AW50/51AW D	ABS	Read code	
S40(04-)	2007	AW50/51AW D	ABS	Clear code	
S40(04-)	2007	AW50/51AW D	ABS	Data stream	
S40(04-)	2007	AW50/51AW D	ABS	Actuation	
S40(04-)	2007	AW50/51AW D	ABS	Freeze frame	
S40(04-)	2007	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S40(04-)	2007	AW50/51AW D	ABS	Special functions	Reading off the configuration
S40(04-)	2007	AW50/51AW D	ABS	Special functions	Calibration
S40(04-)	2007	AW50/51AW D	SRS	Sys. Info.	
S40(04-)	2007	AW50/51AW D	SRS	Read code	
S40(04-)	2007	AW50/51AW D	SRS	Clear code	
S40(04-)	2007	AW50/51AW D	SRS	Data stream	
S40(04-)	2007	AW50/51AW D	SRS	Freeze frame	
S40(04-)	2007	AW50/51AW D	CEM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	CEM	Read code	
S40(04-)	2007	AW50/51AW D	CEM	Clear code	

model	year	type	system	function	subfunction
S40(04-)	2007	AW50/51AW D	CEM	Data stream	
S40(04-)	2007	AW50/51AW D	CEM	Actuation	
S40(04-)	2007	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S40(04-)	2007	AW50/51AW D	CEM	Special functions	Programming control module
S40(04-)	2007	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S40(04-)	2007	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S40(04-)	2007	AW50/51AW D	CEM	Special functions	Resetting crash mode
S40(04-)	2007	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S40(04-)	2007	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S40(04-)	2007	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S40(04-)	2007	AW50/51AW D	CEM	Special functions	Ignition switch key position
S40(04-)	2007	AW50/51AW D	CCM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	CCM	Read code	
S40(04-)	2007	AW50/51AW D	CCM	Clear code	
S40(04-)	2007	AW50/51AW D	CCM	Data stream	
S40(04-)	2007	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
S40(04-)	2007	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S40(04-)	2007	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S40(04-)	2007	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S40(04-)	2007	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S40(04-)	2007	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
S40(04-)	2007	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S40(04-)	2007	AW50/51AW D	DDM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	DDM	Read code	
S40(04-)	2007	AW50/51AW D	DDM	Clear code	
S40(04-)	2007	AW50/51AW D	DDM	Data stream	
S40(04-)	2007	AW50/51AW D	DDM	Actuation	
S40(04-)	2007	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S40(04-)	2007	AW50/51AW D	DIM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	DIM	Read code	
S40(04-)	2007	AW50/51AW D	DIM	Clear code	
S40(04-)	2007	AW50/51AW D	DIM	Data stream	
S40(04-)	2007	AW50/51AW D	DIM	Actuation	
S40(04-)	2007	AW50/51AW D	DIM	Freeze frame	
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)

model	year	type	system	function	subfunction
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Display of DSTC message
S40(04-)	2007	AW50/51AW D	DIM	Special functions	Read out programmed values
S40(04-)	2007	AW50/51AW D	PDM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	PDM	Read code	
S40(04-)	2007	AW50/51AW D	PDM	Clear code	
S40(04-)	2007	AW50/51AW D	PDM	Data stream	
S40(04-)	2007	AW50/51AW D	PDM	Actuation	
S40(04-)	2007	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S40(04-)	2007	AW50/51AW D	SWM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	SWM	Read code	
S40(04-)	2007	AW50/51AW D	SWM	Clear code	
S40(04-)	2007	AW50/51AW D	SWM	Data stream	
S40(04-)	2007	AW50/51AW D	PSM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	PSM	Read code	
S40(04-)	2007	AW50/51AW D	PSM	Clear code	
S40(04-)	2007	AW50/51AW D	PSM	Data stream	
S40(04-)	2007	AW50/51AW D	PSM	Actuation	
S40(04-)	2007	AW50/51AW D	PHM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	PHM	Read code	
S40(04-)	2007	AW50/51AW D	PHM	Clear code	
S40(04-)	2007	AW50/51AW D	PHM	Data stream	
S40(04-)	2007	AW50/51AW D	PHM	Actuation	
S40(04-)	2007	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S40(04-)	2007	AW50/51AW D	AUD	Sys. Info.	
S40(04-)	2007	AW50/51AW D	AUD	Read code	
S40(04-)	2007	AW50/51AW D	AUD	Clear code	
S40(04-)	2007	AW50/51AW D	DEM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	DEM	Read code	
S40(04-)	2007	AW50/51AW D	DEM	Clear code	
S40(04-)	2007	AW50/51AW D	DEM	Data stream	
S40(04-)	2007	AW50/51AW D	ICM	Sys. Info.	

model	year	type	system	function	subfunction
S40(04-)	2007	AW50/51AW D	ICM	Read code	
S40(04-)	2007	AW50/51AW D	ICM	Clear code	
S40(04-)	2007	AW50/51AW D	ICM	Data stream	
S40(04-)	2007	AW50/51AW D	ICM	Actuation	
S40(04-)	2007	AW50/51AW D	MMM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	MMM	Read code	
S40(04-)	2007	AW50/51AW D	MMM	Clear code	
S40(04-)	2007	AW50/51AW D	MMM	Data stream	
S40(04-)	2007	AW50/51AW D	AEM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	AEM	Read code	
S40(04-)	2007	AW50/51AW D	AEM	Clear code	
S40(04-)	2007	AW50/51AW D	AEM	Data stream	
S40(04-)	2007	AW50/51AW D	AEM	Actuation	
S40(04-)	2007	AW50/51AW D	ADM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	ADM	Read code	
S40(04-)	2007	AW50/51AW D	ADM	Clear code	
S40(04-)	2007	AW50/51AW D	ADM	Data stream	
S40(04-)	2007	AW50/51AW D	ADM	Actuation	
S40(04-)	2007	AW50/51AW D	ADM	Special functions	Checking the additive level
S40(04-)	2007	AW50/51AW D	ADM	Special functions	Refilling the feed hose with additive
S40(04-)	2007	AW50/51AW D	ADM	Special functions	Resetting the tank level gauge
S40(04-)	2007	AW50/51AW D	EPS	Sys. Info.	
S40(04-)	2007	AW50/51AW D	EPS	Read code	
S40(04-)	2007	AW50/51AW D	EPS	Clear code	
S40(04-)	2007	AW50/51AW D	EPS	Data stream	
S40(04-)	2007	AW50/51AW D	PAM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	PAM	Read code	
S40(04-)	2007	AW50/51AW D	PAM	Clear code	
S40(04-)	2007	AW50/51AW D	PAM	Data stream	
S40(04-)	2007	AW50/51AW D	IAM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	IAM	Read code	
S40(04-)	2007	AW50/51AW D	IAM	Clear code	
S40(04-)	2007	AW50/51AW D	IAM	Data stream	
S40(04-)	2007	AW50/51AW D	IAM	Actuation	
S40(04-)	2007	AW50/51AW D	AFM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	AFM	Read code	
S40(04-)	2007	AW50/51AW D	AFM	Clear code	
S40(04-)	2007	AW50/51AW D	AFM	Data stream	
S40(04-)	2007	AW50/51AW D	AFM	Actuation	



model	year	type	system	function	subfunction
S40(04-)	2007	AW50/51AW D	MPM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	MPM	Read code	
S40(04-)	2007	AW50/51AW D	MPM	Clear code	
S40(04-)	2007	AW50/51AW D	MPM	Data stream	
S40(04-)	2007	AW50/51AW D	MPM	Actuation	
S40(04-)	2007	AW50/51AW D	CPM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	CPM	Read code	
S40(04-)	2007	AW50/51AW D	CPM	Clear code	
S40(04-)	2007	AW50/51AW D	CPM	Data stream	
S40(04-)	2007	AW50/51AW D	CPM	Actuation	
S40(04-)	2007	AW50/51AW D	HCM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	HCM	Read code	
S40(04-)	2007	AW50/51AW D	HCM	Clear code	
S40(04-)	2007	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S40(04-)	2007	AW50/51AW D	KVM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	KVM	Read code	
S40(04-)	2007	AW50/51AW D	KVM	Clear code	
S40(04-)	2007	AW50/51AW D	KVM	Data stream	
S40(04-)	2007	AW50/51AW D	KVM	Actuation	
S40(04-)	2007	AW50/51AW D	RDAR	Sys. Info.	
S40(04-)	2007	AW50/51AW D	RDAR	Read code	
S40(04-)	2007	AW50/51AW D	RDAR	Clear code	
S40(04-)	2007	AW50/51AW D	RDAR	Data stream	
S40(04-)	2007	AW50/51AW D	SUB	Sys. Info.	
S40(04-)	2007	AW50/51AW D	SUB	Read code	
S40(04-)	2007	AW50/51AW D	SUB	Clear code	
S40(04-)	2007	AW50/51AW D	SUB	Data stream	
S40(04-)	2007	AW50/51AW D	CVM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	CVM	Read code	
S40(04-)	2007	AW50/51AW D	CVM	Clear code	
S40(04-)	2007	AW50/51AW D	CVM	Data stream	
S40(04-)	2007	AW50/51AW D	DABM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	DABM	Read code	
S40(04-)	2007	AW50/51AW D	DABM	Clear code	
S40(04-)	2007	AW50/51AW D	DABM	Data stream	
S40(04-)	2007	AW50/51AW D	PAC	Sys. Info.	
S40(04-)	2007	AW50/51AW D	PAC	Read code	
S40(04-)	2007	AW50/51AW D	PAC	Clear code	
S40(04-)	2007	AW50/51AW D	PAC	Data stream	

model	year	type	system	function	subfunction
S40(04-)	2007	AW50/51AW D	TRM	Sys. Info.	
S40(04-)	2007	AW50/51AW D	TRM	Read code	
S40(04-)	2007	AW50/51AW D	TRM	Clear code	
S40(04-)	2007	AW50/51AW D	TRM	Data stream	
S40(04-)	2008	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(04-)	2008	B5244S4	ECM	Sys. Info.	
S40(04-)	2008	B5244S4	ECM	Read code	
S40(04-)	2008	B5244S4	ECM	Clear code	
S40(04-)	2008	B5244S4	ECM	Data stream	
S40(04-)	2008	B5244S4	ECM	Actuation	
S40(04-)	2008	B5244S4	ECM	Freeze frame	
S40(04-)	2008	B5244S4	ECM	Special functions	Resetting the adaptation values
S40(04-)	2008	B5244S5	ECM	Sys. Info.	
S40(04-)	2008	B5244S5	ECM	Read code	
S40(04-)	2008	B5244S5	ECM	Clear code	
S40(04-)	2008	B5244S5	ECM	Data stream	
S40(04-)	2008	B5244S5	ECM	Actuation	
S40(04-)	2008	B5244S5	ECM	Special functions	Resetting the adaptation values
S40(04-)	2008	B5244S7	ECM	Sys. Info.	
S40(04-)	2008	B5244S7	ECM	Read code	
S40(04-)	2008	B5244S7	ECM	Clear code	
S40(04-)	2008	B5244S7	ECM	Data stream	
S40(04-)	2008	B5244S7	ECM	Actuation	
S40(04-)	2008	B4204S3	ECM	Sys. Info.	
S40(04-)	2008	B4204S3	ECM	Read code	
S40(04-)	2008	B4204S3	ECM	Clear code	
S40(04-)	2008	B4204S3	ECM	Data stream	
S40(04-)	2008	B4204S3	ECM	Actuation	
S40(04-)	2008	B4204S3	ECM	Freeze frame	
S40(04-)	2008	B5254T2	ECM	Sys. Info.	
S40(04-)	2008	B5254T2	ECM	Read code	
S40(04-)	2008	B5254T2	ECM	Clear code	
S40(04-)	2008	B5254T2	ECM	Data stream	
S40(04-)	2008	B5254T2	ECM	Actuation	
S40(04-)	2008	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2008	B5254T3	ECM	Sys. Info.	
S40(04-)	2008	B5254T3	ECM	Read code	
S40(04-)	2008	B5254T3	ECM	Clear code	
S40(04-)	2008	B5254T3	ECM	Data stream	
S40(04-)	2008	B5254T3	ECM	Actuation	
S40(04-)	2008	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2008	B5254T7	ECM	Sys. Info.	
S40(04-)	2008	B5254T7	ECM	Read code	
S40(04-)	2008	B5254T7	ECM	Clear code	
S40(04-)	2008	B5254T7	ECM	Data stream	
S40(04-)	2008	B5254T7	ECM	Actuation	
S40(04-)	2008	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2008	B5204T5	ECM	Sys. Info.	
S40(04-)	2008	B5204T5	ECM	Read code	
S40(04-)	2008	B5204T5	ECM	Clear code	
S40(04-)	2008	B5204T5	ECM	Data stream	
S40(04-)	2008	B5204T5	ECM	Actuation	
S40(04-)	2008	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2008	B6294T	ECM	Sys. Info.	
S40(04-)	2008	B6294T	ECM	Read code	
S40(04-)	2008	B6294T	ECM	Clear code	
S40(04-)	2008	B6294T	ECM	Data stream	
S40(04-)	2008	B6294T	ECM	Actuation	
S40(04-)	2008	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2008	B4164S3	ECM	Sys. Info.	
S40(04-)	2008	B4164S3	ECM	Read code	
S40(04-)	2008	B4164S3	ECM	Clear code	
S40(04-)	2008	B4164S3	ECM	Data stream	
S40(04-)	2008	B4164S3	ECM	Actuation	
S40(04-)	2008	B4164S3	ECM	Freeze frame	
S40(04-)	2008	B4164S3	ECM	Special functions	Resetting the adaptation values
S40(04-)	2008	B5244T5	ECM	Sys. Info.	
S40(04-)	2008	B5244T5	ECM	Read code	
S40(04-)	2008	B5244T5	ECM	Clear code	
S40(04-)	2008	B5244T5	ECM	Data stream	
S40(04-)	2008	B5244T5	ECM	Actuation	
S40(04-)	2008	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2008	B4184S11	ECM	Sys. Info.	

model	year	type	system	function	subfunction	
S40(04-)		2008	B4184S11	ECM	Read code	
S40(04-)		2008	B4184S11	ECM	Clear code	
S40(04-)		2008	B4184S11	ECM	Data stream	
S40(04-)		2008	B4184S11	ECM	Actuation	
S40(04-)		2008	B4184S11	ECM	Freeze frame	
S40(04-)		2008	B4184S11	ECM	Special functions	Resetting the adaptation values
S40(04-)		2008	D5244T	Diesel Eng	Sys. Info.	
S40(04-)		2008	D5244T	Diesel Eng	Read code	
S40(04-)		2008	D5244T	Diesel Eng	Clear code	
S40(04-)		2008	D5244T	Diesel Eng	Data stream	
S40(04-)		2008	D5244T	Diesel Eng	Actuation	
S40(04-)		2008	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)		2008	D5244T4	Diesel Eng	Sys. Info.	
S40(04-)		2008	D5244T4	Diesel Eng	Read code	
S40(04-)		2008	D5244T4	Diesel Eng	Clear code	
S40(04-)		2008	D5244T4	Diesel Eng	Data stream	
S40(04-)		2008	D5244T4	Diesel Eng	Actuation	
S40(04-)		2008	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2008	D5244T4	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2008	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2008	D5244T5	Diesel Eng	Sys. Info.	
S40(04-)		2008	D5244T5	Diesel Eng	Read code	
S40(04-)		2008	D5244T5	Diesel Eng	Clear code	
S40(04-)		2008	D5244T5	Diesel Eng	Data stream	
S40(04-)		2008	D5244T5	Diesel Eng	Actuation	
S40(04-)		2008	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2008	D5244T5	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2008	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2008	D5244T8	Diesel Eng	Sys. Info.	
S40(04-)		2008	D5244T8	Diesel Eng	Read code	
S40(04-)		2008	D5244T8	Diesel Eng	Clear code	
S40(04-)		2008	D5244T8	Diesel Eng	Data stream	
S40(04-)		2008	D5244T8	Diesel Eng	Actuation	
S40(04-)		2008	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)		2008	D5244T8	Diesel Eng	Special functions	Resetting counter oil
S40(04-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)		2008	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2008	D4164T	Diesel Eng	Sys. Info.	
S40(04-)		2008	D4164T	Diesel Eng	Read code	
S40(04-)		2008	D4164T	Diesel Eng	Clear code	
S40(04-)		2008	D4164T	Diesel Eng	Data stream	
S40(04-)		2008	D4164T	Diesel Eng	Actuation	
S40(04-)		2008	D4164T	Diesel Eng	Freeze frame	
S40(04-)		2008	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)		2008	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)		2008	D4164T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2008	D4204T	Diesel Eng	Sys. Info.	
S40(04-)		2008	D4204T	Diesel Eng	Read code	
S40(04-)		2008	D4204T	Diesel Eng	Clear code	
S40(04-)		2008	D4204T	Diesel Eng	Data stream	
S40(04-)		2008	D4204T	Diesel Eng	Actuation	
S40(04-)		2008	D4204T	Diesel Eng	Freeze frame	
S40(04-)		2008	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)		2008	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S40(04-)		2008	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)		2008	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)		2008	D4204T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)		2008	AW55-50/51SN	TCM	Sys. Info.	
S40(04-)		2008	AW55-50/51SN	TCM	Read code	

model	year	type	system	function	subfunction
S40(04-)	2008	AW55-50/51SN	TCM	Clear code	
S40(04-)	2008	AW55-50/51SN	TCM	Data stream	
S40(04-)	2008	AW55-50/51SN	TCM	Actuation	
S40(04-)	2008	AW55-50/51SN	TCM	Freeze frame	
S40(04-)	2008	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S40(04-)	2008	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2008	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S40(04-)	2008	AW55-50/51SN	TCM	Special functions	Control module adaptation
S40(04-)	2008	4T65AWD	TCM	Sys. Info.	
S40(04-)	2008	4T65AWD	TCM	Read code	
S40(04-)	2008	4T65AWD	TCM	Clear code	
S40(04-)	2008	4T65AWD	TCM	Data stream	
S40(04-)	2008	4T65AWD	TCM	Actuation	
S40(04-)	2008	4T65AWD	TCM	Special functions	Reset adaptation to zero
S40(04-)	2008	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2008	TF-80SC	TCM	Sys. Info.	
S40(04-)	2008	TF-80SC	TCM	Read code	
S40(04-)	2008	TF-80SC	TCM	Clear code	
S40(04-)	2008	TF-80SC	TCM	Data stream	
S40(04-)	2008	TF-80SC	TCM	Actuation	
S40(04-)	2008	TF-80SC	TCM	Special functions	Reset adaptation to zero
S40(04-)	2008	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2008	TF-80SC	TCM	Special functions	Calibration of position sensor
S40(04-)	2008	AW50/51AW D	TCM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	TCM	Read code	
S40(04-)	2008	AW50/51AW D	TCM	Clear code	
S40(04-)	2008	AW50/51AW D	TCM	Data stream	
S40(04-)	2008	AW50/51AW D	TCM	Actuation	
S40(04-)	2008	AW50/51AW D	TCM	Freeze frame	
S40(04-)	2008	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S40(04-)	2008	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2008	AW50/51AW D	ABS	Sys. Info.	
S40(04-)	2008	AW50/51AW D	ABS	Read code	
S40(04-)	2008	AW50/51AW D	ABS	Clear code	
S40(04-)	2008	AW50/51AW D	ABS	Data stream	
S40(04-)	2008	AW50/51AW D	ABS	Actuation	
S40(04-)	2008	AW50/51AW D	ABS	Freeze frame	
S40(04-)	2008	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S40(04-)	2008	AW50/51AW D	ABS	Special functions	Reading off the configuration
S40(04-)	2008	AW50/51AW D	ABS	Special functions	Calibration
S40(04-)	2008	AW50/51AW D	SRS	Sys. Info.	
S40(04-)	2008	AW50/51AW D	SRS	Read code	
S40(04-)	2008	AW50/51AW D	SRS	Clear code	
S40(04-)	2008	AW50/51AW D	SRS	Data stream	
S40(04-)	2008	AW50/51AW D	SRS	Freeze frame	
S40(04-)	2008	AW50/51AW D	CEM	Sys. Info.	

model	year	type	system	function	subfunction
S40(04-)	2008	AW50/51AW D	CEM	Read code	
S40(04-)	2008	AW50/51AW D	CEM	Clear code	
S40(04-)	2008	AW50/51AW D	CEM	Data stream	
S40(04-)	2008	AW50/51AW D	CEM	Actuation	
S40(04-)	2008	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S40(04-)	2008	AW50/51AW D	CEM	Special functions	Programming control module
S40(04-)	2008	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S40(04-)	2008	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S40(04-)	2008	AW50/51AW D	CEM	Special functions	Resetting crash mode
S40(04-)	2008	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S40(04-)	2008	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S40(04-)	2008	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S40(04-)	2008	AW50/51AW D	CEM	Special functions	Ignition switch key position
S40(04-)	2008	AW50/51AW D	CCM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	CCM	Read code	
S40(04-)	2008	AW50/51AW D	CCM	Clear code	
S40(04-)	2008	AW50/51AW D	CCM	Data stream	
S40(04-)	2008	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
S40(04-)	2008	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S40(04-)	2008	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S40(04-)	2008	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S40(04-)	2008	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S40(04-)	2008	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
S40(04-)	2008	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S40(04-)	2008	AW50/51AW D	DDM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	DDM	Read code	
S40(04-)	2008	AW50/51AW D	DDM	Clear code	
S40(04-)	2008	AW50/51AW D	DDM	Data stream	
S40(04-)	2008	AW50/51AW D	DDM	Actuation	
S40(04-)	2008	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S40(04-)	2008	AW50/51AW D	DIM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	DIM	Read code	
S40(04-)	2008	AW50/51AW D	DIM	Clear code	
S40(04-)	2008	AW50/51AW D	DIM	Data stream	
S40(04-)	2008	AW50/51AW D	DIM	Actuation	
S40(04-)	2008	AW50/51AW D	DIM	Freeze frame	
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)

model	year	type	system	function	subfunction
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Display of DSTC message
S40(04-)	2008	AW50/51AW D	DIM	Special functions	Read out programmed values
S40(04-)	2008	AW50/51AW D	PDM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	PDM	Read code	
S40(04-)	2008	AW50/51AW D	PDM	Clear code	
S40(04-)	2008	AW50/51AW D	PDM	Data stream	
S40(04-)	2008	AW50/51AW D	PDM	Actuation	
S40(04-)	2008	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S40(04-)	2008	AW50/51AW D	SWM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	SWM	Read code	
S40(04-)	2008	AW50/51AW D	SWM	Clear code	
S40(04-)	2008	AW50/51AW D	SWM	Data stream	
S40(04-)	2008	AW50/51AW D	PSM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	PSM	Read code	
S40(04-)	2008	AW50/51AW D	PSM	Clear code	
S40(04-)	2008	AW50/51AW D	PSM	Data stream	
S40(04-)	2008	AW50/51AW D	PSM	Actuation	
S40(04-)	2008	AW50/51AW D	PHM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	PHM	Read code	
S40(04-)	2008	AW50/51AW D	PHM	Clear code	
S40(04-)	2008	AW50/51AW D	PHM	Data stream	
S40(04-)	2008	AW50/51AW D	PHM	Actuation	
S40(04-)	2008	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S40(04-)	2008	AW50/51AW D	AUD	Sys. Info.	
S40(04-)	2008	AW50/51AW D	AUD	Read code	
S40(04-)	2008	AW50/51AW D	AUD	Clear code	
S40(04-)	2008	AW50/51AW D	DEM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	DEM	Read code	
S40(04-)	2008	AW50/51AW D	DEM	Clear code	

model	year	type	system	function	subfunction
S40(04-)	2008	AW50/51AW D	DEM	Data stream	
S40(04-)	2008	AW50/51AW D	ICM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	ICM	Read code	
S40(04-)	2008	AW50/51AW D	ICM	Clear code	
S40(04-)	2008	AW50/51AW D	ICM	Data stream	
S40(04-)	2008	AW50/51AW D	ICM	Actuation	
S40(04-)	2008	AW50/51AW D	MMM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	MMM	Read code	
S40(04-)	2008	AW50/51AW D	MMM	Clear code	
S40(04-)	2008	AW50/51AW D	MMM	Data stream	
S40(04-)	2008	AW50/51AW D	AEM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	AEM	Read code	
S40(04-)	2008	AW50/51AW D	AEM	Clear code	
S40(04-)	2008	AW50/51AW D	AEM	Data stream	
S40(04-)	2008	AW50/51AW D	AEM	Actuation	
S40(04-)	2008	AW50/51AW D	ADM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	ADM	Read code	
S40(04-)	2008	AW50/51AW D	ADM	Clear code	
S40(04-)	2008	AW50/51AW D	ADM	Data stream	
S40(04-)	2008	AW50/51AW D	EPS	Sys. Info.	
S40(04-)	2008	AW50/51AW D	EPS	Read code	
S40(04-)	2008	AW50/51AW D	EPS	Clear code	
S40(04-)	2008	AW50/51AW D	EPS	Data stream	
S40(04-)	2008	AW50/51AW D	PAM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	PAM	Read code	
S40(04-)	2008	AW50/51AW D	PAM	Clear code	
S40(04-)	2008	AW50/51AW D	PAM	Data stream	
S40(04-)	2008	AW50/51AW D	IAM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	IAM	Read code	
S40(04-)	2008	AW50/51AW D	IAM	Clear code	
S40(04-)	2008	AW50/51AW D	IAM	Data stream	
S40(04-)	2008	AW50/51AW D	IAM	Actuation	
S40(04-)	2008	AW50/51AW D	AFM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	AFM	Read code	
S40(04-)	2008	AW50/51AW D	AFM	Clear code	
S40(04-)	2008	AW50/51AW D	AFM	Data stream	
S40(04-)	2008	AW50/51AW D	AFM	Actuation	
S40(04-)	2008	AW50/51AW D	MPM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	MPM	Read code	

model	year	type	system	function	subfunction
S40(04-)	2008	AW50/51AW D	MPM	Clear code	
S40(04-)	2008	AW50/51AW D	MPM	Data stream	
S40(04-)	2008	AW50/51AW D	MPM	Actuation	
S40(04-)	2008	AW50/51AW D	CPM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	CPM	Read code	
S40(04-)	2008	AW50/51AW D	CPM	Clear code	
S40(04-)	2008	AW50/51AW D	CPM	Data stream	
S40(04-)	2008	AW50/51AW D	CPM	Actuation	
S40(04-)	2008	AW50/51AW D	HCM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	HCM	Read code	
S40(04-)	2008	AW50/51AW D	HCM	Clear code	
S40(04-)	2008	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S40(04-)	2008	AW50/51AW D	KVM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	KVM	Read code	
S40(04-)	2008	AW50/51AW D	KVM	Clear code	
S40(04-)	2008	AW50/51AW D	KVM	Data stream	
S40(04-)	2008	AW50/51AW D	KVM	Actuation	
S40(04-)	2008	AW50/51AW D	RDAR	Sys. Info.	
S40(04-)	2008	AW50/51AW D	RDAR	Read code	
S40(04-)	2008	AW50/51AW D	RDAR	Clear code	
S40(04-)	2008	AW50/51AW D	RDAR	Data stream	
S40(04-)	2008	AW50/51AW D	SUB	Sys. Info.	
S40(04-)	2008	AW50/51AW D	SUB	Read code	
S40(04-)	2008	AW50/51AW D	SUB	Clear code	
S40(04-)	2008	AW50/51AW D	SUB	Data stream	
S40(04-)	2008	AW50/51AW D	CVM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	CVM	Read code	
S40(04-)	2008	AW50/51AW D	CVM	Clear code	
S40(04-)	2008	AW50/51AW D	CVM	Data stream	
S40(04-)	2008	AW50/51AW D	DABM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	DABM	Read code	
S40(04-)	2008	AW50/51AW D	DABM	Clear code	
S40(04-)	2008	AW50/51AW D	DABM	Data stream	
S40(04-)	2008	AW50/51AW D	PAC	Sys. Info.	
S40(04-)	2008	AW50/51AW D	PAC	Read code	
S40(04-)	2008	AW50/51AW D	PAC	Clear code	
S40(04-)	2008	AW50/51AW D	PAC	Data stream	
S40(04-)	2008	AW50/51AW D	TRM	Sys. Info.	
S40(04-)	2008	AW50/51AW D	TRM	Read code	



model	year	type	system	function	subfunction
S40(04-)	2008	AW50/51AW D	TRM	Clear code	
S40(04-)	2008	AW50/51AW D	TRM	Data stream	
S40(04-)	2009	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(04-)	2009	B5244S4	ECM	Sys. Info.	
S40(04-)	2009	B5244S4	ECM	Read code	
S40(04-)	2009	B5244S4	ECM	Clear code	
S40(04-)	2009	B5244S4	ECM	Data stream	
S40(04-)	2009	B5244S4	ECM	Actuation	
S40(04-)	2009	B5244S4	ECM	Freeze frame	
S40(04-)	2009	B5244S4	ECM	Special functions	Resetting the adaptation values
S40(04-)	2009	B5244S5	ECM	Sys. Info.	
S40(04-)	2009	B5244S5	ECM	Read code	
S40(04-)	2009	B5244S5	ECM	Clear code	
S40(04-)	2009	B5244S5	ECM	Data stream	
S40(04-)	2009	B5244S5	ECM	Actuation	
S40(04-)	2009	B5244S5	ECM	Freeze frame	
S40(04-)	2009	B5244S5	ECM	Special functions	Resetting the adaptation values
S40(04-)	2009	B5244S7	ECM	Sys. Info.	
S40(04-)	2009	B5244S7	ECM	Read code	
S40(04-)	2009	B5244S7	ECM	Clear code	
S40(04-)	2009	B5244S7	ECM	Data stream	
S40(04-)	2009	B5244S7	ECM	Actuation	
S40(04-)	2009	B5244S7	ECM	Freeze frame	
S40(04-)	2009	B4204S3	ECM	Sys. Info.	
S40(04-)	2009	B4204S3	ECM	Read code	
S40(04-)	2009	B4204S3	ECM	Clear code	
S40(04-)	2009	B4204S3	ECM	Data stream	
S40(04-)	2009	B4204S3	ECM	Actuation	
S40(04-)	2009	B4204S3	ECM	Freeze frame	
S40(04-)	2009	B5254T2	ECM	Sys. Info.	
S40(04-)	2009	B5254T2	ECM	Read code	
S40(04-)	2009	B5254T2	ECM	Clear code	
S40(04-)	2009	B5254T2	ECM	Data stream	
S40(04-)	2009	B5254T2	ECM	Actuation	
S40(04-)	2009	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2009	B5254T3	ECM	Sys. Info.	
S40(04-)	2009	B5254T3	ECM	Read code	
S40(04-)	2009	B5254T3	ECM	Clear code	
S40(04-)	2009	B5254T3	ECM	Data stream	
S40(04-)	2009	B5254T3	ECM	Actuation	
S40(04-)	2009	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2009	B5254T7	ECM	Sys. Info.	
S40(04-)	2009	B5254T7	ECM	Read code	
S40(04-)	2009	B5254T7	ECM	Clear code	
S40(04-)	2009	B5254T7	ECM	Data stream	
S40(04-)	2009	B5254T7	ECM	Actuation	
S40(04-)	2009	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2009	B5204T5	ECM	Sys. Info.	
S40(04-)	2009	B5204T5	ECM	Read code	
S40(04-)	2009	B5204T5	ECM	Clear code	
S40(04-)	2009	B5204T5	ECM	Data stream	
S40(04-)	2009	B5204T5	ECM	Actuation	
S40(04-)	2009	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2009	B6294T	ECM	Sys. Info.	
S40(04-)	2009	B6294T	ECM	Read code	
S40(04-)	2009	B6294T	ECM	Clear code	
S40(04-)	2009	B6294T	ECM	Data stream	
S40(04-)	2009	B6294T	ECM	Actuation	
S40(04-)	2009	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2009	B4164S3	ECM	Sys. Info.	
S40(04-)	2009	B4164S3	ECM	Read code	
S40(04-)	2009	B4164S3	ECM	Clear code	
S40(04-)	2009	B4164S3	ECM	Data stream	
S40(04-)	2009	B4164S3	ECM	Actuation	
S40(04-)	2009	B4164S3	ECM	Freeze frame	
S40(04-)	2009	B4164S3	ECM	Special functions	Resetting the adaptation values
S40(04-)	2009	B5244T5	ECM	Sys. Info.	
S40(04-)	2009	B5244T5	ECM	Read code	
S40(04-)	2009	B5244T5	ECM	Clear code	
S40(04-)	2009	B5244T5	ECM	Data stream	
S40(04-)	2009	B5244T5	ECM	Actuation	
S40(04-)	2009	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2009	B4184S11	ECM	Sys. Info.	
S40(04-)	2009	B4184S11	ECM	Read code	
S40(04-)	2009	B4184S11	ECM	Clear code	

model	year	type	system	function	subfunction
S40(04-)	2009	B4184S11	ECM	Data stream	
S40(04-)	2009	B4184S11	ECM	Actuation	
S40(04-)	2009	B4184S11	ECM	Freeze frame	
S40(04-)	2009	B4184S11	ECM	Special functions	Resetting the adaptation values
S40(04-)	2009	D5244T	Diesel Eng	Sys. Info.	
S40(04-)	2009	D5244T	Diesel Eng	Read code	
S40(04-)	2009	D5244T	Diesel Eng	Clear code	
S40(04-)	2009	D5244T	Diesel Eng	Data stream	
S40(04-)	2009	D5244T	Diesel Eng	Actuation	
S40(04-)	2009	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)	2009	D5244T4	Diesel Eng	Sys. Info.	
S40(04-)	2009	D5244T4	Diesel Eng	Read code	
S40(04-)	2009	D5244T4	Diesel Eng	Clear code	
S40(04-)	2009	D5244T4	Diesel Eng	Data stream	
S40(04-)	2009	D5244T4	Diesel Eng	Actuation	
S40(04-)	2009	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)	2009	D5244T4	Diesel Eng	Special functions	Resetting counter oil
S40(04-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)	2009	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2009	D5244T5	Diesel Eng	Sys. Info.	
S40(04-)	2009	D5244T5	Diesel Eng	Read code	
S40(04-)	2009	D5244T5	Diesel Eng	Clear code	
S40(04-)	2009	D5244T5	Diesel Eng	Data stream	
S40(04-)	2009	D5244T5	Diesel Eng	Actuation	
S40(04-)	2009	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)	2009	D5244T5	Diesel Eng	Special functions	Resetting counter oil
S40(04-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)	2009	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2009	D5244T8	Diesel Eng	Sys. Info.	
S40(04-)	2009	D5244T8	Diesel Eng	Read code	
S40(04-)	2009	D5244T8	Diesel Eng	Clear code	
S40(04-)	2009	D5244T8	Diesel Eng	Data stream	
S40(04-)	2009	D5244T8	Diesel Eng	Actuation	
S40(04-)	2009	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)	2009	D5244T8	Diesel Eng	Special functions	Resetting counter oil
S40(04-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)	2009	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2009	D4164T	Diesel Eng	Sys. Info.	
S40(04-)	2009	D4164T	Diesel Eng	Read code	
S40(04-)	2009	D4164T	Diesel Eng	Clear code	
S40(04-)	2009	D4164T	Diesel Eng	Data stream	
S40(04-)	2009	D4164T	Diesel Eng	Actuation	
S40(04-)	2009	D4164T	Diesel Eng	Freeze frame	
S40(04-)	2009	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)	2009	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)	2009	D4164T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2009	D4204T	Diesel Eng	Sys. Info.	
S40(04-)	2009	D4204T	Diesel Eng	Read code	
S40(04-)	2009	D4204T	Diesel Eng	Clear code	
S40(04-)	2009	D4204T	Diesel Eng	Data stream	
S40(04-)	2009	D4204T	Diesel Eng	Actuation	
S40(04-)	2009	D4204T	Diesel Eng	Freeze frame	
S40(04-)	2009	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)	2009	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S40(04-)	2009	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)	2009	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)	2009	D4204T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2009	AW55-50/51SN	TCM	Sys. Info.	
S40(04-)	2009	AW55-50/51SN	TCM	Read code	
S40(04-)	2009	AW55-50/51SN	TCM	Clear code	

model	year	type	system	function	subfunction
S40(04-)	2009	AW55-50/51SN	TCM	Data stream	
S40(04-)	2009	AW55-50/51SN	TCM	Actuation	
S40(04-)	2009	AW55-50/51SN	TCM	Freeze frame	
S40(04-)	2009	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S40(04-)	2009	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2009	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S40(04-)	2009	4T65AWD	TCM	Sys. Info.	
S40(04-)	2009	4T65AWD	TCM	Read code	
S40(04-)	2009	4T65AWD	TCM	Clear code	
S40(04-)	2009	4T65AWD	TCM	Data stream	
S40(04-)	2009	4T65AWD	TCM	Actuation	
S40(04-)	2009	4T65AWD	TCM	Special functions	Reset adaptation to zero
S40(04-)	2009	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2009	TF-80SC	TCM	Sys. Info.	
S40(04-)	2009	TF-80SC	TCM	Read code	
S40(04-)	2009	TF-80SC	TCM	Clear code	
S40(04-)	2009	TF-80SC	TCM	Data stream	
S40(04-)	2009	TF-80SC	TCM	Actuation	
S40(04-)	2009	TF-80SC	TCM	Special functions	Reset adaptation to zero
S40(04-)	2009	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2009	TF-80SC	TCM	Special functions	Calibration of position sensor
S40(04-)	2009	MPS6	TCM	Sys. Info.	
S40(04-)	2009	MPS6	TCM	Read code	
S40(04-)	2009	MPS6	TCM	Clear code	
S40(04-)	2009	MPS6	TCM	Data stream	
S40(04-)	2009	MPS6	TCM	Freeze frame	
S40(04-)	2009	AW50/51AW D	TCM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	TCM	Read code	
S40(04-)	2009	AW50/51AW D	TCM	Clear code	
S40(04-)	2009	AW50/51AW D	TCM	Data stream	
S40(04-)	2009	AW50/51AW D	TCM	Actuation	
S40(04-)	2009	AW50/51AW D	TCM	Freeze frame	
S40(04-)	2009	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S40(04-)	2009	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2009	AW50/51AW D	ABS	Sys. Info.	
S40(04-)	2009	AW50/51AW D	ABS	Read code	
S40(04-)	2009	AW50/51AW D	ABS	Clear code	
S40(04-)	2009	AW50/51AW D	ABS	Data stream	
S40(04-)	2009	AW50/51AW D	ABS	Actuation	
S40(04-)	2009	AW50/51AW D	ABS	Freeze frame	
S40(04-)	2009	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S40(04-)	2009	AW50/51AW D	ABS	Special functions	Reading off the configuration
S40(04-)	2009	AW50/51AW D	ABS	Special functions	Calibration
S40(04-)	2009	AW50/51AW D	SRS	Sys. Info.	
S40(04-)	2009	AW50/51AW D	SRS	Read code	
S40(04-)	2009	AW50/51AW D	SRS	Clear code	
S40(04-)	2009	AW50/51AW D	SRS	Data stream	
S40(04-)	2009	AW50/51AW D	SRS	Freeze frame	
S40(04-)	2009	AW50/51AW D	CEM	Sys. Info.	

model	year	type	system	function	subfunction
S40(04-)	2009	AW50/51AW D	CEM	Read code	
S40(04-)	2009	AW50/51AW D	CEM	Clear code	
S40(04-)	2009	AW50/51AW D	CEM	Data stream	
S40(04-)	2009	AW50/51AW D	CEM	Actuation	
S40(04-)	2009	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S40(04-)	2009	AW50/51AW D	CEM	Special functions	Programming control module
S40(04-)	2009	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S40(04-)	2009	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S40(04-)	2009	AW50/51AW D	CEM	Special functions	Resetting crash mode
S40(04-)	2009	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S40(04-)	2009	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S40(04-)	2009	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S40(04-)	2009	AW50/51AW D	CEM	Special functions	Ignition switch key position
S40(04-)	2009	AW50/51AW D	CCM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	CCM	Read code	
S40(04-)	2009	AW50/51AW D	CCM	Clear code	
S40(04-)	2009	AW50/51AW D	CCM	Data stream	
S40(04-)	2009	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
S40(04-)	2009	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S40(04-)	2009	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S40(04-)	2009	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S40(04-)	2009	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S40(04-)	2009	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
S40(04-)	2009	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S40(04-)	2009	AW50/51AW D	DDM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	DDM	Read code	
S40(04-)	2009	AW50/51AW D	DDM	Clear code	
S40(04-)	2009	AW50/51AW D	DDM	Data stream	
S40(04-)	2009	AW50/51AW D	DDM	Actuation	
S40(04-)	2009	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S40(04-)	2009	AW50/51AW D	DIM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	DIM	Read code	
S40(04-)	2009	AW50/51AW D	DIM	Clear code	
S40(04-)	2009	AW50/51AW D	DIM	Data stream	
S40(04-)	2009	AW50/51AW D	DIM	Actuation	
S40(04-)	2009	AW50/51AW D	DIM	Freeze frame	
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)

model	year	type	system	function	subfunction
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Display of DSTC message
S40(04-)	2009	AW50/51AW D	DIM	Special functions	Read out programmed values
S40(04-)	2009	AW50/51AW D	PDM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	PDM	Read code	
S40(04-)	2009	AW50/51AW D	PDM	Clear code	
S40(04-)	2009	AW50/51AW D	PDM	Data stream	
S40(04-)	2009	AW50/51AW D	PDM	Actuation	
S40(04-)	2009	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S40(04-)	2009	AW50/51AW D	SWM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	SWM	Read code	
S40(04-)	2009	AW50/51AW D	SWM	Clear code	
S40(04-)	2009	AW50/51AW D	SWM	Data stream	
S40(04-)	2009	AW50/51AW D	PSM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	PSM	Read code	
S40(04-)	2009	AW50/51AW D	PSM	Clear code	
S40(04-)	2009	AW50/51AW D	PSM	Data stream	
S40(04-)	2009	AW50/51AW D	PSM	Actuation	
S40(04-)	2009	AW50/51AW D	PHM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	PHM	Read code	
S40(04-)	2009	AW50/51AW D	PHM	Clear code	
S40(04-)	2009	AW50/51AW D	PHM	Data stream	
S40(04-)	2009	AW50/51AW D	PHM	Actuation	
S40(04-)	2009	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S40(04-)	2009	AW50/51AW D	AUD	Sys. Info.	
S40(04-)	2009	AW50/51AW D	AUD	Read code	
S40(04-)	2009	AW50/51AW D	AUD	Clear code	
S40(04-)	2009	AW50/51AW D	DEM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	DEM	Read code	
S40(04-)	2009	AW50/51AW D	DEM	Clear code	

model	year	type	system	function	subfunction
S40(04-)	2009	AW50/51AW D	DEM	Data stream	
S40(04-)	2009	AW50/51AW D	ICM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	ICM	Read code	
S40(04-)	2009	AW50/51AW D	ICM	Clear code	
S40(04-)	2009	AW50/51AW D	ICM	Data stream	
S40(04-)	2009	AW50/51AW D	ICM	Actuation	
S40(04-)	2009	AW50/51AW D	MMM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	MMM	Read code	
S40(04-)	2009	AW50/51AW D	MMM	Clear code	
S40(04-)	2009	AW50/51AW D	MMM	Data stream	
S40(04-)	2009	AW50/51AW D	AEM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	AEM	Read code	
S40(04-)	2009	AW50/51AW D	AEM	Clear code	
S40(04-)	2009	AW50/51AW D	AEM	Data stream	
S40(04-)	2009	AW50/51AW D	AEM	Actuation	
S40(04-)	2009	AW50/51AW D	ADM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	ADM	Read code	
S40(04-)	2009	AW50/51AW D	ADM	Clear code	
S40(04-)	2009	AW50/51AW D	ADM	Data stream	
S40(04-)	2009	AW50/51AW D	EPS	Sys. Info.	
S40(04-)	2009	AW50/51AW D	EPS	Read code	
S40(04-)	2009	AW50/51AW D	EPS	Clear code	
S40(04-)	2009	AW50/51AW D	EPS	Data stream	
S40(04-)	2009	AW50/51AW D	PAM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	PAM	Read code	
S40(04-)	2009	AW50/51AW D	PAM	Clear code	
S40(04-)	2009	AW50/51AW D	PAM	Data stream	
S40(04-)	2009	AW50/51AW D	IAM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	IAM	Read code	
S40(04-)	2009	AW50/51AW D	IAM	Clear code	
S40(04-)	2009	AW50/51AW D	IAM	Data stream	
S40(04-)	2009	AW50/51AW D	IAM	Actuation	
S40(04-)	2009	AW50/51AW D	AFM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	AFM	Read code	
S40(04-)	2009	AW50/51AW D	AFM	Clear code	
S40(04-)	2009	AW50/51AW D	AFM	Data stream	
S40(04-)	2009	AW50/51AW D	AFM	Actuation	
S40(04-)	2009	AW50/51AW D	MPM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	MPM	Read code	

model	year	type	system	function	subfunction
S40(04-)	2009	AW50/51AW D	MPM	Clear code	
S40(04-)	2009	AW50/51AW D	MPM	Data stream	
S40(04-)	2009	AW50/51AW D	MPM	Actuation	
S40(04-)	2009	AW50/51AW D	CPM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	CPM	Read code	
S40(04-)	2009	AW50/51AW D	CPM	Clear code	
S40(04-)	2009	AW50/51AW D	CPM	Data stream	
S40(04-)	2009	AW50/51AW D	CPM	Actuation	
S40(04-)	2009	AW50/51AW D	HCM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	HCM	Read code	
S40(04-)	2009	AW50/51AW D	HCM	Clear code	
S40(04-)	2009	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S40(04-)	2009	AW50/51AW D	KVM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	KVM	Read code	
S40(04-)	2009	AW50/51AW D	KVM	Clear code	
S40(04-)	2009	AW50/51AW D	KVM	Data stream	
S40(04-)	2009	AW50/51AW D	KVM	Actuation	
S40(04-)	2009	AW50/51AW D	RDAR	Sys. Info.	
S40(04-)	2009	AW50/51AW D	RDAR	Read code	
S40(04-)	2009	AW50/51AW D	RDAR	Clear code	
S40(04-)	2009	AW50/51AW D	RDAR	Data stream	
S40(04-)	2009	AW50/51AW D	SUB	Sys. Info.	
S40(04-)	2009	AW50/51AW D	SUB	Read code	
S40(04-)	2009	AW50/51AW D	SUB	Clear code	
S40(04-)	2009	AW50/51AW D	SUB	Data stream	
S40(04-)	2009	AW50/51AW D	CVM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	CVM	Read code	
S40(04-)	2009	AW50/51AW D	CVM	Clear code	
S40(04-)	2009	AW50/51AW D	CVM	Data stream	
S40(04-)	2009	AW50/51AW D	DABM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	DABM	Read code	
S40(04-)	2009	AW50/51AW D	DABM	Clear code	
S40(04-)	2009	AW50/51AW D	DABM	Data stream	
S40(04-)	2009	AW50/51AW D	PAC	Sys. Info.	
S40(04-)	2009	AW50/51AW D	PAC	Read code	
S40(04-)	2009	AW50/51AW D	PAC	Clear code	
S40(04-)	2009	AW50/51AW D	PAC	Data stream	
S40(04-)	2009	AW50/51AW D	TRM	Sys. Info.	
S40(04-)	2009	AW50/51AW D	TRM	Read code	

model	year	type	system	function	subfunction
S40(04-)	2009	AW50/51AW D	TRM	Clear code	
S40(04-)	2009	AW50/51AW D	TRM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
S40(04-)	2010 - 2012	B5244S4	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B5244S4	ECM	Read code	
S40(04-)	2010 - 2012	B5244S4	ECM	Clear code	
S40(04-)	2010 - 2012	B5244S4	ECM	Data stream	
S40(04-)	2010 - 2012	B5244S4	ECM	Actuation	
S40(04-)	2010 - 2012	B5244S4	ECM	Freeze frame	
S40(04-)	2010 - 2012	B5244S4	ECM	Special functions	Resetting the adaptation values
S40(04-)	2010 - 2012	B5244S5	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B5244S5	ECM	Read code	
S40(04-)	2010 - 2012	B5244S5	ECM	Clear code	
S40(04-)	2010 - 2012	B5244S5	ECM	Data stream	
S40(04-)	2010 - 2012	B5244S5	ECM	Actuation	
S40(04-)	2010 - 2012	B5244S5	ECM	Freeze frame	
S40(04-)	2010 - 2012	B5244S5	ECM	Special functions	Resetting the adaptation values
S40(04-)	2010 - 2012	B5244S7	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B5244S7	ECM	Read code	
S40(04-)	2010 - 2012	B5244S7	ECM	Clear code	
S40(04-)	2010 - 2012	B5244S7	ECM	Data stream	
S40(04-)	2010 - 2012	B5244S7	ECM	Actuation	
S40(04-)	2010 - 2012	B5244S7	ECM	Freeze frame	
S40(04-)	2010 - 2012	B4204S3	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B4204S3	ECM	Read code	
S40(04-)	2010 - 2012	B4204S3	ECM	Clear code	
S40(04-)	2010 - 2012	B4204S3	ECM	Data stream	
S40(04-)	2010 - 2012	B4204S3	ECM	Actuation	
S40(04-)	2010 - 2012	B4204S3	ECM	Freeze frame	
S40(04-)	2010 - 2012	B5254T2	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B5254T2	ECM	Read code	
S40(04-)	2010 - 2012	B5254T2	ECM	Clear code	
S40(04-)	2010 - 2012	B5254T2	ECM	Data stream	
S40(04-)	2010 - 2012	B5254T2	ECM	Actuation	
S40(04-)	2010 - 2012	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2010 - 2012	B5254T3	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B5254T3	ECM	Read code	
S40(04-)	2010 - 2012	B5254T3	ECM	Clear code	
S40(04-)	2010 - 2012	B5254T3	ECM	Data stream	
S40(04-)	2010 - 2012	B5254T3	ECM	Actuation	
S40(04-)	2010 - 2012	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2010 - 2012	B5254T7	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B5254T7	ECM	Read code	
S40(04-)	2010 - 2012	B5254T7	ECM	Clear code	
S40(04-)	2010 - 2012	B5254T7	ECM	Data stream	
S40(04-)	2010 - 2012	B5254T7	ECM	Actuation	
S40(04-)	2010 - 2012	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2010 - 2012	B5204T5	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B5204T5	ECM	Read code	
S40(04-)	2010 - 2012	B5204T5	ECM	Clear code	
S40(04-)	2010 - 2012	B5204T5	ECM	Data stream	
S40(04-)	2010 - 2012	B5204T5	ECM	Actuation	
S40(04-)	2010 - 2012	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2010 - 2012	B6294T	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B6294T	ECM	Read code	
S40(04-)	2010 - 2012	B6294T	ECM	Clear code	
S40(04-)	2010 - 2012	B6294T	ECM	Data stream	
S40(04-)	2010 - 2012	B6294T	ECM	Actuation	
S40(04-)	2010 - 2012	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2010 - 2012	B4164S3	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B4164S3	ECM	Read code	
S40(04-)	2010 - 2012	B4164S3	ECM	Clear code	
S40(04-)	2010 - 2012	B4164S3	ECM	Data stream	
S40(04-)	2010 - 2012	B4164S3	ECM	Actuation	
S40(04-)	2010 - 2012	B4164S3	ECM	Freeze frame	
S40(04-)	2010 - 2012	B4164S3	ECM	Special functions	Resetting the adaptation values
S40(04-)	2010 - 2012	B5244T5	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B5244T5	ECM	Read code	
S40(04-)	2010 - 2012	B5244T5	ECM	Clear code	
S40(04-)	2010 - 2012	B5244T5	ECM	Data stream	
S40(04-)	2010 - 2012	B5244T5	ECM	Actuation	
S40(04-)	2010 - 2012	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
S40(04-)	2010 - 2012	B4184S11	ECM	Sys. Info.	
S40(04-)	2010 - 2012	B4184S11	ECM	Read code	
S40(04-)	2010 - 2012	B4184S11	ECM	Clear code	



model	year	type	system	function	subfunction
S40(04-)	2010 - 2012	B4184S11	ECM	Data stream	
S40(04-)	2010 - 2012	B4184S11	ECM	Actuation	
S40(04-)	2010 - 2012	B4184S11	ECM	Freeze frame	
S40(04-)	2010 - 2012	B4184S11	ECM	Special functions	Resetting the adaptation values
S40(04-)	2010 - 2012	D5244T	Diesel Eng	Sys. Info.	
S40(04-)	2010 - 2012	D5244T	Diesel Eng	Read code	
S40(04-)	2010 - 2012	D5244T	Diesel Eng	Clear code	
S40(04-)	2010 - 2012	D5244T	Diesel Eng	Data stream	
S40(04-)	2010 - 2012	D5244T	Diesel Eng	Actuation	
S40(04-)	2010 - 2012	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Sys. Info.	
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Read code	
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Clear code	
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Data stream	
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Actuation	
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Resetting counter oil
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Sys. Info.	
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Read code	
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Clear code	
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Data stream	
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Actuation	
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter oil
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Sys. Info.	
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Read code	
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Clear code	
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Data stream	
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Actuation	
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Resetting counter oil
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
S40(04-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2010 - 2012	D4164T	Diesel Eng	Sys. Info.	
S40(04-)	2010 - 2012	D4164T	Diesel Eng	Read code	
S40(04-)	2010 - 2012	D4164T	Diesel Eng	Clear code	
S40(04-)	2010 - 2012	D4164T	Diesel Eng	Data stream	
S40(04-)	2010 - 2012	D4164T	Diesel Eng	Actuation	
S40(04-)	2010 - 2012	D4164T	Diesel Eng	Freeze frame	
S40(04-)	2010 - 2012	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)	2010 - 2012	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)	2010 - 2012	D4164T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2010 - 2012	D4204T	Diesel Eng	Sys. Info.	
S40(04-)	2010 - 2012	D4204T	Diesel Eng	Read code	
S40(04-)	2010 - 2012	D4204T	Diesel Eng	Clear code	
S40(04-)	2010 - 2012	D4204T	Diesel Eng	Data stream	
S40(04-)	2010 - 2012	D4204T	Diesel Eng	Actuation	
S40(04-)	2010 - 2012	D4204T	Diesel Eng	Freeze frame	
S40(04-)	2010 - 2012	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
S40(04-)	2010 - 2012	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
S40(04-)	2010 - 2012	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
S40(04-)	2010 - 2012	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
S40(04-)	2010 - 2012	D4204T	Diesel Eng	Special functions	Combustion of soot particles
S40(04-)	2010 - 2012	AW55-50/51SN	TCM	Sys. Info.	
S40(04-)	2010 - 2012	AW55-50/51SN	TCM	Read code	
S40(04-)	2010 - 2012	AW55-50/51SN	TCM	Clear code	

model	year	type	system	function	subfunction
S40(04-)	2010 - 2012	AW55-50/51SN	TCM	Data stream	
S40(04-)	2010 - 2012	AW55-50/51SN	TCM	Actuation	
S40(04-)	2010 - 2012	AW55-50/51SN	TCM	Freeze frame	
S40(04-)	2010 - 2012	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
S40(04-)	2010 - 2012	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2010 - 2012	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
S40(04-)	2010 - 2012	4T65AWD	TCM	Sys. Info.	
S40(04-)	2010 - 2012	4T65AWD	TCM	Read code	
S40(04-)	2010 - 2012	4T65AWD	TCM	Clear code	
S40(04-)	2010 - 2012	4T65AWD	TCM	Data stream	
S40(04-)	2010 - 2012	4T65AWD	TCM	Actuation	
S40(04-)	2010 - 2012	4T65AWD	TCM	Special functions	Reset adaptation to zero
S40(04-)	2010 - 2012	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2010 - 2012	TF-80SC	TCM	Sys. Info.	
S40(04-)	2010 - 2012	TF-80SC	TCM	Read code	
S40(04-)	2010 - 2012	TF-80SC	TCM	Clear code	
S40(04-)	2010 - 2012	TF-80SC	TCM	Data stream	
S40(04-)	2010 - 2012	TF-80SC	TCM	Actuation	
S40(04-)	2010 - 2012	TF-80SC	TCM	Special functions	Reset adaptation to zero
S40(04-)	2010 - 2012	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2010 - 2012	TF-80SC	TCM	Special functions	Calibration of position sensor
S40(04-)	2010 - 2012	AW50/51AW D	TCM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	TCM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	TCM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	TCM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	TCM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	TCM	Freeze frame	
S40(04-)	2010 - 2012	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
S40(04-)	2010 - 2012	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
S40(04-)	2010 - 2012	AW50/51AW D	ABS	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	ABS	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	ABS	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	ABS	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	ABS	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	ABS	Freeze frame	
S40(04-)	2010 - 2012	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
S40(04-)	2010 - 2012	AW50/51AW D	ABS	Special functions	Reading off the configuration
S40(04-)	2010 - 2012	AW50/51AW D	ABS	Special functions	Calibration
S40(04-)	2010 - 2012	AW50/51AW D	SRS	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	SRS	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	SRS	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	SRS	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	SRS	Freeze frame	
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Clear code	

model	year	type	system	function	subfunction
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming control module
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting the factory settings
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting crash mode
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
S40(04-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Ignition switch key position
S40(04-)	2010 - 2012	AW50/51AW D	CCM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	CCM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	CCM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	CCM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
S40(04-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
S40(04-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
S40(04-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
S40(04-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
S40(04-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
S40(04-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Programming the seat temperature
S40(04-)	2010 - 2012	AW50/51AW D	DDM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	DDM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	DDM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	DDM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	DDM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	DDM	Special functions	Initialize the window(*)
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Freeze frame	
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)

model	year	type	system	function	subfunction
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of clock (*)
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming parking brake warning
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming instrument lighting
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Display of DSTC message
S40(04-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Read out programmed values
S40(04-)	2010 - 2012	AW50/51AW D	PDM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	PDM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	PDM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	PDM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	PDM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	PDM	Special functions	Initialize the window(*)
S40(04-)	2010 - 2012	AW50/51AW D	SWM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	SWM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	SWM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	SWM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	PSM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	PSM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	PSM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	PSM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	PSM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	PHM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	PHM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	PHM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	PHM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	PHM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
S40(04-)	2010 - 2012	AW50/51AW D	AUD	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	AUD	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	AUD	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	DEM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	DEM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	DEM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	DEM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	ICM	Sys. Info.	

model	year	type	system	function	subfunction
S40(04-)	2010 - 2012	AW50/51AW D	ICM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	ICM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	ICM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	ICM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	MMM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	MMM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	MMM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	MMM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	AEM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	AEM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	AEM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	AEM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	AEM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	ADM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	ADM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	ADM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	ADM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	EPS	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	EPS	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	EPS	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	EPS	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	PAM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	PAM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	PAM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	PAM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	IAM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	IAM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	IAM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	IAM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	IAM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	AFM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	AFM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	AFM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	AFM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	AFM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	MPM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	MPM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	MPM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	MPM	Data stream	

model	year	type	system	function	subfunction
S40(04-)	2010 - 2012	AW50/51AW D	MPM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	CPM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	CPM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	CPM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	CPM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	CPM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	HCM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	HCM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	HCM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	HCM	Special functions	Calibration of position sensor
S40(04-)	2010 - 2012	AW50/51AW D	KVM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	KVM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	KVM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	KVM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	KVM	Actuation	
S40(04-)	2010 - 2012	AW50/51AW D	RDAR	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	RDAR	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	RDAR	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	RDAR	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	SUB	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	SUB	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	SUB	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	SUB	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	CVM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	CVM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	CVM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	CVM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	DABM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	DABM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	DABM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	DABM	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	PAC	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	PAC	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	PAC	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	PAC	Data stream	
S40(04-)	2010 - 2012	AW50/51AW D	TRM	Sys. Info.	
S40(04-)	2010 - 2012	AW50/51AW D	TRM	Read code	
S40(04-)	2010 - 2012	AW50/51AW D	TRM	Clear code	
S40(04-)	2010 - 2012	AW50/51AW D	TRM	Data stream	

model	year	type	system	function	subfunction
960	1991	Motronic 4	ECM	Sys. Info.	
960	1991	Motronic 4	ECM	Read code	
960	1991	Motronic 4	ECM	Clear code	
960	1991	Motronic 4	ECM	Data stream	
960	1991	AW30-40/30-43	TCM	Sys. Info.	
960	1991	AW30-40/30-43	TCM	Read code	
960	1991	AW30-40/30-43	TCM	Clear code	
960	1991	AW30-40/30-43	TCM	Data stream	
960	1991	AW30-40/30-43	ABS	Sys. Info.	
960	1991	AW30-40/30-43	ABS	Read code	
960	1991	AW30-40/30-43	ABS	Clear code	
960	1991	AW30-40/30-43	ABS	Data stream	
960	1991	AW30-40/30-43	ABS	Actuation	
960	1991	AW30-40/30-43	SRS	Sys. Info.	
960	1991	AW30-40/30-43	SRS	Read code	
960	1991	AW30-40/30-43	SRS	Clear code	
960	1991	AW30-40/30-43	SRS	Data stream	
960	1991	AW30-40/30-43	Immobilizer	Sys. Info.	
960	1991	AW30-40/30-43	Immobilizer	Read code	
960	1991	AW30-40/30-43	Immobilizer	Clear code	
960	1991	AW30-40/30-43	Immobilizer	Data stream	
960	1991	AW30-40/30-43	Combi	Sys. Info.	
960	1991	AW30-40/30-43	Combi	Read code	
960	1991	AW30-40/30-43	Combi	Clear code	
960	1991	AW30-40/30-43	Combi	Data stream	
960	1991	AW30-40/30-43	Combi	Actuation	
960	1991	AW30-40/30-43	Combi	Special functions	Oil lamp reset(*)
960	1991	AW30-40/30-43	PSL	Sys. Info.	
960	1991	AW30-40/30-43	PSL	Read code	
960	1991	AW30-40/30-43	PSL	Clear code	
960	1991	AW30-40/30-43	PSL	Data stream	
960	1991	AW30-40/30-43	PSR	Sys. Info.	
960	1991	AW30-40/30-43	PSR	Read code	
960	1991	AW30-40/30-43	PSR	Clear code	
960	1991	AW30-40/30-43	PSR	Data stream	
960	1992	Motronic 4	ECM	Sys. Info.	
960	1992	Motronic 4	ECM	Read code	
960	1992	Motronic 4	ECM	Clear code	
960	1992	Motronic 4	ECM	Data stream	
960	1992	AW30-40/30-43	TCM	Sys. Info.	
960	1992	AW30-40/30-43	TCM	Read code	
960	1992	AW30-40/30-43	TCM	Clear code	
960	1992	AW30-40/30-43	TCM	Data stream	

model	year	type	system	function	subfunction
960	1992	AW30-40/30-43	ABS	Sys. Info.	
960	1992	AW30-40/30-43	ABS	Read code	
960	1992	AW30-40/30-43	ABS	Clear code	
960	1992	AW30-40/30-43	ABS	Data stream	
960	1992	AW30-40/30-43	ABS	Actuation	
960	1992	AW30-40/30-43	SRS	Sys. Info.	
960	1992	AW30-40/30-43	SRS	Read code	
960	1992	AW30-40/30-43	SRS	Clear code	
960	1992	AW30-40/30-43	SRS	Data stream	
960	1992	AW30-40/30-43	Immobilizer	Sys. Info.	
960	1992	AW30-40/30-43	Immobilizer	Read code	
960	1992	AW30-40/30-43	Immobilizer	Clear code	
960	1992	AW30-40/30-43	Immobilizer	Data stream	
960	1992	AW30-40/30-43	Combi	Sys. Info.	
960	1992	AW30-40/30-43	Combi	Read code	
960	1992	AW30-40/30-43	Combi	Clear code	
960	1992	AW30-40/30-43	Combi	Data stream	
960	1992	AW30-40/30-43	Combi	Actuation	
960	1992	AW30-40/30-43	Combi	Special functions	Oil lamp reset(*)
960	1992	AW30-40/30-43	PSL	Sys. Info.	
960	1992	AW30-40/30-43	PSL	Read code	
960	1992	AW30-40/30-43	PSL	Clear code	
960	1992	AW30-40/30-43	PSL	Data stream	
960	1992	AW30-40/30-43	PSR	Sys. Info.	
960	1992	AW30-40/30-43	PSR	Read code	
960	1992	AW30-40/30-43	PSR	Clear code	
960	1992	AW30-40/30-43	PSR	Data stream	
960	1993	Motronic 4	ECM	Sys. Info.	
960	1993	Motronic 4	ECM	Read code	
960	1993	Motronic 4	ECM	Clear code	
960	1993	Motronic 4	ECM	Data stream	
960	1993	AW30-40/30-43	TCM	Sys. Info.	
960	1993	AW30-40/30-43	TCM	Read code	
960	1993	AW30-40/30-43	TCM	Clear code	
960	1993	AW30-40/30-43	TCM	Data stream	
960	1993	AW30-40/30-43	ABS	Sys. Info.	
960	1993	AW30-40/30-43	ABS	Read code	
960	1993	AW30-40/30-43	ABS	Clear code	
960	1993	AW30-40/30-43	ABS	Data stream	
960	1993	AW30-40/30-43	ABS	Actuation	
960	1993	AW30-40/30-43	SRS	Sys. Info.	



model	year	type	system	function	subfunction
960	1993	AW30-40/30-43	SRS	Read code	
960	1993	AW30-40/30-43	SRS	Clear code	
960	1993	AW30-40/30-43	SRS	Data stream	
960	1993	AW30-40/30-43	Immobilizer	Sys. Info.	
960	1993	AW30-40/30-43	Immobilizer	Read code	
960	1993	AW30-40/30-43	Immobilizer	Clear code	
960	1993	AW30-40/30-43	Immobilizer	Data stream	
960	1993	AW30-40/30-43	Combi	Sys. Info.	
960	1993	AW30-40/30-43	Combi	Read code	
960	1993	AW30-40/30-43	Combi	Clear code	
960	1993	AW30-40/30-43	Combi	Data stream	
960	1993	AW30-40/30-43	Combi	Actuation	
960	1993	AW30-40/30-43	Combi	Special functions	Oil lamp reset(*)
960	1993	AW30-40/30-43	PSL	Sys. Info.	
960	1993	AW30-40/30-43	PSL	Read code	
960	1993	AW30-40/30-43	PSL	Clear code	
960	1993	AW30-40/30-43	PSL	Data stream	
960	1993	AW30-40/30-43	PSR	Sys. Info.	
960	1993	AW30-40/30-43	PSR	Read code	
960	1993	AW30-40/30-43	PSR	Clear code	
960	1993	AW30-40/30-43	PSR	Data stream	
960	1994	Motronic 4	ECM	Sys. Info.	
960	1994	Motronic 4	ECM	Read code	
960	1994	Motronic 4	ECM	Clear code	
960	1994	Motronic 4	ECM	Data stream	
960	1994	AW30-40/30-43	TCM	Sys. Info.	
960	1994	AW30-40/30-43	TCM	Read code	
960	1994	AW30-40/30-43	TCM	Clear code	
960	1994	AW30-40/30-43	TCM	Data stream	
960	1994	AW30-40/30-43	ABS	Sys. Info.	
960	1994	AW30-40/30-43	ABS	Read code	
960	1994	AW30-40/30-43	ABS	Clear code	
960	1994	AW30-40/30-43	ABS	Data stream	
960	1994	AW30-40/30-43	ABS	Actuation	
960	1994	AW30-40/30-43	SRS	Sys. Info.	
960	1994	AW30-40/30-43	SRS	Read code	
960	1994	AW30-40/30-43	SRS	Clear code	
960	1994	AW30-40/30-43	SRS	Data stream	
960	1994	AW30-40/30-43	Immobilizer	Sys. Info.	
960	1994	AW30-40/30-43	Immobilizer	Read code	
960	1994	AW30-40/30-43	Immobilizer	Clear code	

model	year	type	system	function	subfunction
960	1994	AW30-40/30-43	Immobilizer	Data stream	
960	1994	AW30-40/30-43	Combi	Sys. Info.	
960	1994	AW30-40/30-43	Combi	Read code	
960	1994	AW30-40/30-43	Combi	Clear code	
960	1994	AW30-40/30-43	Combi	Data stream	
960	1994	AW30-40/30-43	Combi	Actuation	
960	1994	AW30-40/30-43	Combi	Special functions	Oil lamp reset(*)
960	1994	AW30-40/30-43	PSL	Sys. Info.	
960	1994	AW30-40/30-43	PSL	Read code	
960	1994	AW30-40/30-43	PSL	Clear code	
960	1994	AW30-40/30-43	PSL	Data stream	
960	1994	AW30-40/30-43	PSR	Sys. Info.	
960	1994	AW30-40/30-43	PSR	Read code	
960	1994	AW30-40/30-43	PSR	Clear code	
960	1994	AW30-40/30-43	PSR	Data stream	
960	1995	Motronic 4	ECM	Sys. Info.	
960	1995	Motronic 4	ECM	Read code	
960	1995	Motronic 4	ECM	Clear code	
960	1995	Motronic 4	ECM	Data stream	
960	1995	AW30-40/30-43	TCM	Sys. Info.	
960	1995	AW30-40/30-43	TCM	Read code	
960	1995	AW30-40/30-43	TCM	Clear code	
960	1995	AW30-40/30-43	TCM	Data stream	
960	1995	AW30-40/30-43	ABS	Sys. Info.	
960	1995	AW30-40/30-43	ABS	Read code	
960	1995	AW30-40/30-43	ABS	Clear code	
960	1995	AW30-40/30-43	ABS	Data stream	
960	1995	AW30-40/30-43	ABS	Actuation	
960	1995	AW30-40/30-43	SRS	Sys. Info.	
960	1995	AW30-40/30-43	SRS	Read code	
960	1995	AW30-40/30-43	SRS	Clear code	
960	1995	AW30-40/30-43	SRS	Data stream	
960	1995	AW30-40/30-43	Immobilizer	Sys. Info.	
960	1995	AW30-40/30-43	Immobilizer	Read code	
960	1995	AW30-40/30-43	Immobilizer	Clear code	
960	1995	AW30-40/30-43	Immobilizer	Data stream	
960	1995	AW30-40/30-43	Combi	Sys. Info.	
960	1995	AW30-40/30-43	Combi	Read code	
960	1995	AW30-40/30-43	Combi	Clear code	
960	1995	AW30-40/30-43	Combi	Data stream	
960	1995	AW30-40/30-43	Combi	Actuation	

model	year	type	system	function	subfunction
960	1995	AW30-40/30-43	Combi	Special functions	Oil lamp reset(*)
960	1995	AW30-40/30-43	PSL	Sys. Info.	
960	1995	AW30-40/30-43	PSL	Read code	
960	1995	AW30-40/30-43	PSL	Clear code	
960	1995	AW30-40/30-43	PSL	Data stream	
960	1995	AW30-40/30-43	PSR	Sys. Info.	
960	1995	AW30-40/30-43	PSR	Read code	
960	1995	AW30-40/30-43	PSR	Clear code	
960	1995	AW30-40/30-43	PSR	Data stream	
960	1996	Motronic 4	ECM	Sys. Info.	
960	1996	Motronic 4	ECM	Read code	
960	1996	Motronic 4	ECM	Clear code	
960	1996	Motronic 4	ECM	Data stream	
960	1996	AW30-40/30-43	TCM	Sys. Info.	
960	1996	AW30-40/30-43	TCM	Read code	
960	1996	AW30-40/30-43	TCM	Clear code	
960	1996	AW30-40/30-43	TCM	Data stream	
960	1996	AW30-40/30-43	ABS	Sys. Info.	
960	1996	AW30-40/30-43	ABS	Read code	
960	1996	AW30-40/30-43	ABS	Clear code	
960	1996	AW30-40/30-43	ABS	Data stream	
960	1996	AW30-40/30-43	ABS	Actuation	
960	1996	AW30-40/30-43	SRS	Sys. Info.	
960	1996	AW30-40/30-43	SRS	Read code	
960	1996	AW30-40/30-43	SRS	Clear code	
960	1996	AW30-40/30-43	SRS	Data stream	
960	1996	AW30-40/30-43	Immobilizer	Sys. Info.	
960	1996	AW30-40/30-43	Immobilizer	Read code	
960	1996	AW30-40/30-43	Immobilizer	Clear code	
960	1996	AW30-40/30-43	Immobilizer	Data stream	
960	1996	AW30-40/30-43	Combi	Sys. Info.	
960	1996	AW30-40/30-43	Combi	Read code	
960	1996	AW30-40/30-43	Combi	Clear code	
960	1996	AW30-40/30-43	Combi	Data stream	
960	1996	AW30-40/30-43	Combi	Actuation	
960	1996	AW30-40/30-43	Combi	Special functions	Oil lamp reset(*)
960	1996	AW30-40/30-43	PSL	Sys. Info.	
960	1996	AW30-40/30-43	PSL	Read code	
960	1996	AW30-40/30-43	PSL	Clear code	
960	1996	AW30-40/30-43	PSL	Data stream	
960	1996	AW30-40/30-43	PSR	Sys. Info.	

model	year	type	system	function	subfunction
960	1996	AW30-40/30-43	PSR	Read code	
960	1996	AW30-40/30-43	PSR	Clear code	
960	1996	AW30-40/30-43	PSR	Data stream	
960	1997	Motronic 4	ECM	Sys. Info.	
960	1997	Motronic 4	ECM	Read code	
960	1997	Motronic 4	ECM	Clear code	
960	1997	Motronic 4	ECM	Data stream	
960	1997	AW30-40/30-43	TCM	Sys. Info.	
960	1997	AW30-40/30-43	TCM	Read code	
960	1997	AW30-40/30-43	TCM	Clear code	
960	1997	AW30-40/30-43	TCM	Data stream	
960	1997	AW30-40/30-43	ABS	Sys. Info.	
960	1997	AW30-40/30-43	ABS	Read code	
960	1997	AW30-40/30-43	ABS	Clear code	
960	1997	AW30-40/30-43	ABS	Data stream	
960	1997	AW30-40/30-43	ABS	Actuation	
960	1997	AW30-40/30-43	SRS	Sys. Info.	
960	1997	AW30-40/30-43	SRS	Read code	
960	1997	AW30-40/30-43	SRS	Clear code	
960	1997	AW30-40/30-43	SRS	Data stream	
960	1997	AW30-40/30-43	Immobilizer	Sys. Info.	
960	1997	AW30-40/30-43	Immobilizer	Read code	
960	1997	AW30-40/30-43	Immobilizer	Clear code	
960	1997	AW30-40/30-43	Immobilizer	Data stream	
960	1997	AW30-40/30-43	Combi	Sys. Info.	
960	1997	AW30-40/30-43	Combi	Read code	
960	1997	AW30-40/30-43	Combi	Clear code	
960	1997	AW30-40/30-43	Combi	Data stream	
960	1997	AW30-40/30-43	Combi	Actuation	
960	1997	AW30-40/30-43	Combi	Special functions	Oil lamp reset(*)
960	1997	AW30-40/30-43	PSL	Sys. Info.	
960	1997	AW30-40/30-43	PSL	Read code	
960	1997	AW30-40/30-43	PSL	Clear code	
960	1997	AW30-40/30-43	PSL	Data stream	
960	1997	AW30-40/30-43	PSR	Sys. Info.	
960	1997	AW30-40/30-43	PSR	Read code	
960	1997	AW30-40/30-43	PSR	Clear code	
960	1997	AW30-40/30-43	PSR	Data stream	
C70 Coupe	1998	MOTRONIC 4	ECM	Sys. Info.	
C70 Coupe	1998	MOTRONIC 4	ECM	Read code	
C70 Coupe	1998	MOTRONIC 4	ECM	Clear code	

model	year	type	system	function	subfunction
C70 Coupe	1998	MOTRONIC 4	ECM	Data stream	
C70 Coupe	1998	AW50-42	TCM	Sys. Info.	
C70 Coupe	1998	AW50-42	TCM	Read code	
C70 Coupe	1998	AW50-42	TCM	Clear code	
C70 Coupe	1998	AW50-42	TCM	Data stream	
C70 Coupe	1999	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70 Coupe	1999	B5234T3	ECM	Sys. Info.	
C70 Coupe	1999	B5234T3	ECM	Read code	
C70 Coupe	1999	B5234T3	ECM	Clear code	
C70 Coupe	1999	B5234T3	ECM	Data stream	
C70 Coupe	1999	B5234T3	ECM	Actuation	
C70 Coupe	1999	B5204T3	ECM	Sys. Info.	
C70 Coupe	1999	B5204T3	ECM	Read code	
C70 Coupe	1999	B5204T3	ECM	Clear code	
C70 Coupe	1999	B5204T3	ECM	Data stream	
C70 Coupe	1999	B5204T3	ECM	Actuation	
C70 Coupe	1999	B5254T	ECM	Sys. Info.	
C70 Coupe	1999	B5254T	ECM	Read code	
C70 Coupe	1999	B5254T	ECM	Clear code	
C70 Coupe	1999	B5254T	ECM	Data stream	
C70 Coupe	1999	B5254T	ECM	Actuation	
C70 Coupe	1999	B5254S DENSO	ECM	Sys. Info.	
C70 Coupe	1999	B5254S DENSO	ECM	Read code	
C70 Coupe	1999	B5254S DENSO	ECM	Clear code	
C70 Coupe	1999	B5254S DENSO	ECM	Data stream	
C70 Coupe	1999	B5254S DENSO	ECM	Actuation	
C70 Coupe	1999	AW50-42	TCM	Sys. Info.	
C70 Coupe	1999	AW50-42	TCM	Read code	
C70 Coupe	1999	AW50-42	TCM	Clear code	
C70 Coupe	1999	AW50-42	TCM	Data stream	
C70 Coupe	1999	AW50-42	TCM	Actuation	
C70 Coupe	1999	AW50-42	ABS	Sys. Info.	
C70 Coupe	1999	AW50-42	ABS	Read code	
C70 Coupe	1999	AW50-42	ABS	Clear code	
C70 Coupe	1999	AW50-42	ABS	Data stream	
C70 Coupe	1999	AW50-42	ABS	Actuation	
C70 Coupe	1999	AW50-42	ABS	Special functions	Checking brake light switch adjustment(*)
C70 Coupe	1999	AW50-42	ABS	Special functions	Calibration
C70 Coupe	1999	AW50-42	SRS	Sys. Info.	

model	year	type	system	function	subfunction
C70 Coupe	1999	AW50-42	SRS	Read code	
C70 Coupe	1999	AW50-42	SRS	Clear code	
C70 Coupe	1999	AW50-42	SRS	Data stream	
C70 Coupe	1999	AW50-42	Immobilizer	Sys. Info.	
C70 Coupe	1999	AW50-42	Immobilizer	Read code	
C70 Coupe	1999	AW50-42	Immobilizer	Clear code	
C70 Coupe	1999	AW50-42	Immobilizer	Data stream	
C70 Coupe	1999	AW50-42	Immobilizer	Actuation	
C70 Coupe	1999	AW50-42	VGLA	Sys. Info.	
C70 Coupe	1999	AW50-42	VGLA	Read code	
C70 Coupe	1999	AW50-42	VGLA	Clear code	
C70 Coupe	1999	AW50-42	VGLA	Data stream	
C70 Coupe	1999	AW50-42	VGLA	Actuation	
C70 Coupe	1999	AW50-42	CI	Sys. Info.	
C70 Coupe	1999	AW50-42	CI	Read code	
C70 Coupe	1999	AW50-42	CI	Clear code	
C70 Coupe	1999	AW50-42	CI	Data stream	
C70 Coupe	1999	AW50-42	CI	Actuation	
C70 Coupe	1999	AW50-42	CI	Special functions	Reseting the service reminder indicator(SRI)
C70 Coupe	1999	AW50-42	CCM	Sys. Info.	
C70 Coupe	1999	AW50-42	CCM	Read code	
C70 Coupe	1999	AW50-42	CCM	Clear code	
C70 Coupe	1999	AW50-42	CCM	Data stream	
C70 Coupe	1999	AW50-42	PSL	Sys. Info.	
C70 Coupe	1999	AW50-42	PSL	Read code	
C70 Coupe	1999	AW50-42	PSL	Clear code	
C70 Coupe	1999	AW50-42	PSL	Data stream	
C70 Coupe	1999	AW50-42	PSL	Actuation	
C70 Coupe	1999	AW50-42	PSR	Sys. Info.	
C70 Coupe	1999	AW50-42	PSR	Read code	
C70 Coupe	1999	AW50-42	PSR	Clear code	
C70 Coupe	1999	AW50-42	PSR	Data stream	
C70 Coupe	1999	AW50-42	PSR	Actuation	
C70 Coupe	1999	AW50-42	CPM	Sys. Info.	
C70 Coupe	1999	AW50-42	CPM	Read code	
C70 Coupe	1999	AW50-42	CPM	Clear code	
C70 Coupe	1999	AW50-42	CPM	Data stream	
C70 Coupe	1999	AW50-42	CPM	Actuation	
C70 Coupe	1999	AW50-42	RTI	Sys. Info.	

model	year	type	system	function	subfunction
C70 Coupe	1999	AW50-42	RTI	Read code	
C70 Coupe	1999	AW50-42	RTI	Clear code	
C70 Coupe	1999	AW50-42	RTI	Data stream	
C70 Coupe	1999	AW50-42	RTI	Actuation	
C70 Coupe	2000	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70 Coupe	2000	B5244S	ECM	Sys. Info.	
C70 Coupe	2000	B5244S	ECM	Read code	
C70 Coupe	2000	B5244S	ECM	Clear code	
C70 Coupe	2000	B5244S	ECM	Data stream	
C70 Coupe	2000	B5244S	ECM	Actuation	
C70 Coupe	2000	B5204T4	ECM	Sys. Info.	
C70 Coupe	2000	B5204T4	ECM	Read code	
C70 Coupe	2000	B5204T4	ECM	Clear code	
C70 Coupe	2000	B5204T4	ECM	Data stream	
C70 Coupe	2000	B5204T4	ECM	Actuation	
C70 Coupe	2000	B5244T	ECM	Sys. Info.	
C70 Coupe	2000	B5244T	ECM	Read code	
C70 Coupe	2000	B5244T	ECM	Clear code	
C70 Coupe	2000	B5244T	ECM	Data stream	
C70 Coupe	2000	B5244T	ECM	Actuation	
C70 Coupe	2000	B5234T3	ECM	Sys. Info.	
C70 Coupe	2000	B5234T3	ECM	Read code	
C70 Coupe	2000	B5234T3	ECM	Clear code	
C70 Coupe	2000	B5234T3	ECM	Data stream	
C70 Coupe	2000	B5234T3	ECM	Actuation	
C70 Coupe	2000	B5204T3	ECM	Sys. Info.	
C70 Coupe	2000	B5204T3	ECM	Read code	
C70 Coupe	2000	B5204T3	ECM	Clear code	
C70 Coupe	2000	B5204T3	ECM	Data stream	
C70 Coupe	2000	B5204T3	ECM	Actuation	
C70 Coupe	2000	AW55-50/51SN	TCM	Sys. Info.	
C70 Coupe	2000	AW55-50/51SN	TCM	Read code	
C70 Coupe	2000	AW55-50/51SN	TCM	Clear code	
C70 Coupe	2000	AW55-50/51SN	TCM	Data stream	
C70 Coupe	2000	AW55-50/51SN	TCM	Actuation	
C70 Coupe	2000	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70 Coupe	2000	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change
C70 Coupe	2000	AW55-50/51SN	TCM	Special functions	Control module adaptation
C70 Coupe	2000	AW50-42	TCM	Sys. Info.	

model	year	type	system	function	subfunction
C70 Coupe	2000	AW50-42	TCM	Read code	
C70 Coupe	2000	AW50-42	TCM	Clear code	
C70 Coupe	2000	AW50-42	TCM	Data stream	
C70 Coupe	2000	AW50-42	TCM	Actuation	
C70 Coupe	2000	AW50-42	TCM	Special functions	Resetting the adaptation
C70 Coupe	2000	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change
C70 Coupe	2000	AW50-42	TCM	Special functions	Activating gear indication
C70 Coupe	2000	AW50-42	TCM	Special functions	Control module adaptation
C70 Coupe	2000	AW50-42	ABS	Sys. Info.	
C70 Coupe	2000	AW50-42	ABS	Read code	
C70 Coupe	2000	AW50-42	ABS	Clear code	
C70 Coupe	2000	AW50-42	ABS	Data stream	
C70 Coupe	2000	AW50-42	ABS	Actuation	
C70 Coupe	2000	AW50-42	ABS	Special functions	Checking brake light switch adjustment(*)
C70 Coupe	2000	AW50-42	ABS	Special functions	Calibration
C70 Coupe	2000	AW50-42	SRS	Sys. Info.	
C70 Coupe	2000	AW50-42	SRS	Read code	
C70 Coupe	2000	AW50-42	SRS	Clear code	
C70 Coupe	2000	AW50-42	SRS	Data stream	
C70 Coupe	2000	AW50-42	Immobilizer	Sys. Info.	
C70 Coupe	2000	AW50-42	Immobilizer	Read code	
C70 Coupe	2000	AW50-42	Immobilizer	Clear code	
C70 Coupe	2000	AW50-42	Immobilizer	Data stream	
C70 Coupe	2000	AW50-42	Immobilizer	Actuation	
C70 Coupe	2000	AW50-42	VGLA	Sys. Info.	
C70 Coupe	2000	AW50-42	VGLA	Read code	
C70 Coupe	2000	AW50-42	VGLA	Clear code	
C70 Coupe	2000	AW50-42	VGLA	Data stream	
C70 Coupe	2000	AW50-42	VGLA	Actuation	
C70 Coupe	2000	AW50-42	CI	Sys. Info.	
C70 Coupe	2000	AW50-42	CI	Read code	
C70 Coupe	2000	AW50-42	CI	Clear code	
C70 Coupe	2000	AW50-42	CI	Data stream	
C70 Coupe	2000	AW50-42	CI	Actuation	
C70 Coupe	2000	AW50-42	CI	Special functions	Resetting the service reminder indicator(SRI)
C70 Coupe	2000	AW50-42	CCM	Sys. Info.	
C70 Coupe	2000	AW50-42	CCM	Read code	
C70 Coupe	2000	AW50-42	CCM	Clear code	
C70 Coupe	2000	AW50-42	CCM	Data stream	



model	year	type	system	function	subfunction
C70 Coupe	2000	AW50-42	PSL	Sys. Info.	
C70 Coupe	2000	AW50-42	PSL	Read code	
C70 Coupe	2000	AW50-42	PSL	Clear code	
C70 Coupe	2000	AW50-42	PSL	Data stream	
C70 Coupe	2000	AW50-42	PSL	Actuation	
C70 Coupe	2000	AW50-42	PSR	Sys. Info.	
C70 Coupe	2000	AW50-42	PSR	Read code	
C70 Coupe	2000	AW50-42	PSR	Clear code	
C70 Coupe	2000	AW50-42	PSR	Data stream	
C70 Coupe	2000	AW50-42	PSR	Actuation	
C70 Coupe	2000	AW50-42	CPM	Sys. Info.	
C70 Coupe	2000	AW50-42	CPM	Read code	
C70 Coupe	2000	AW50-42	CPM	Clear code	
C70 Coupe	2000	AW50-42	CPM	Data stream	
C70 Coupe	2000	AW50-42	CPM	Actuation	
C70 Coupe	2000	AW50-42	RTI	Sys. Info.	
C70 Coupe	2000	AW50-42	RTI	Read code	
C70 Coupe	2000	AW50-42	RTI	Clear code	
C70 Coupe	2000	AW50-42	RTI	Data stream	
C70 Coupe	2000	AW50-42	RTI	Actuation	
C70 Coupe	2001	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70 Coupe	2001	B5244T	ECM	Sys. Info.	
C70 Coupe	2001	B5244T	ECM	Read code	
C70 Coupe	2001	B5244T	ECM	Clear code	
C70 Coupe	2001	B5244T	ECM	Data stream	
C70 Coupe	2001	B5244T	ECM	Actuation	
C70 Coupe	2001	B5234T3	ECM	Sys. Info.	
C70 Coupe	2001	B5234T3	ECM	Read code	
C70 Coupe	2001	B5234T3	ECM	Clear code	
C70 Coupe	2001	B5234T3	ECM	Data stream	
C70 Coupe	2001	B5234T3	ECM	Actuation	
C70 Coupe	2001	B5204T4	ECM	Sys. Info.	
C70 Coupe	2001	B5204T4	ECM	Read code	
C70 Coupe	2001	B5204T4	ECM	Clear code	
C70 Coupe	2001	B5204T4	ECM	Data stream	
C70 Coupe	2001	B5204T4	ECM	Actuation	
C70 Coupe	2001	AW55-50/51SN	TCM	Sys. Info.	
C70 Coupe	2001	AW55-50/51SN	TCM	Read code	
C70 Coupe	2001	AW55-50/51SN	TCM	Clear code	

model	year	type	system	function	subfunction
C70 Coupe	2001	AW55-50/51SN	TCM	Data stream	
C70 Coupe	2001	AW55-50/51SN	TCM	Actuation	
C70 Coupe	2001	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70 Coupe	2001	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change
C70 Coupe	2001	AW55-50/51SN	TCM	Special functions	Control module adaptation
C70 Coupe	2001	AW55-50/51SN	ABS	Sys. Info.	
C70 Coupe	2001	AW55-50/51SN	ABS	Read code	
C70 Coupe	2001	AW55-50/51SN	ABS	Clear code	
C70 Coupe	2001	AW55-50/51SN	ABS	Data stream	
C70 Coupe	2001	AW55-50/51SN	ABS	Actuation	
C70 Coupe	2001	AW55-50/51SN	ABS	Special functions	Checking brake light switch adjustment(*)
C70 Coupe	2001	AW55-50/51SN	ABS	Special functions	Calibration
C70 Coupe	2001	AW55-50/51SN	SRS	Sys. Info.	
C70 Coupe	2001	AW55-50/51SN	SRS	Read code	
C70 Coupe	2001	AW55-50/51SN	SRS	Clear code	
C70 Coupe	2001	AW55-50/51SN	SRS	Data stream	
C70 Coupe	2001	AW55-50/51SN	Immobilizer	Sys. Info.	
C70 Coupe	2001	AW55-50/51SN	Immobilizer	Read code	
C70 Coupe	2001	AW55-50/51SN	Immobilizer	Clear code	
C70 Coupe	2001	AW55-50/51SN	Immobilizer	Data stream	
C70 Coupe	2001	AW55-50/51SN	Immobilizer	Actuation	
C70 Coupe	2001	AW55-50/51SN	VGLA	Sys. Info.	
C70 Coupe	2001	AW55-50/51SN	VGLA	Read code	
C70 Coupe	2001	AW55-50/51SN	VGLA	Clear code	
C70 Coupe	2001	AW55-50/51SN	VGLA	Data stream	
C70 Coupe	2001	AW55-50/51SN	VGLA	Actuation	
C70 Coupe	2001	AW55-50/51SN	CI	Sys. Info.	
C70 Coupe	2001	AW55-50/51SN	CI	Read code	
C70 Coupe	2001	AW55-50/51SN	CI	Clear code	
C70 Coupe	2001	AW55-50/51SN	CI	Data stream	
C70 Coupe	2001	AW55-50/51SN	CI	Actuation	
C70 Coupe	2001	AW55-50/51SN	CI	Special functions	Resetting the service reminder indicator(SRI)
C70 Coupe	2001	AW55-50/51SN	CCM	Sys. Info.	
C70 Coupe	2001	AW55-50/51SN	CCM	Read code	
C70 Coupe	2001	AW55-50/51SN	CCM	Clear code	
C70 Coupe	2001	AW55-50/51SN	CCM	Data stream	
C70 Coupe	2001	AW55-50/51SN	PSL	Sys. Info.	
C70 Coupe	2001	AW55-50/51SN	PSL	Read code	
C70 Coupe	2001	AW55-50/51SN	PSL	Clear code	

model	year	type	system	function	subfunction
C70 Coupe	2001	AW55-50/51SN	PSL	Data stream	
C70 Coupe	2001	AW55-50/51SN	PSL	Actuation	
C70 Coupe	2001	AW55-50/51SN	PSR	Sys. Info.	
C70 Coupe	2001	AW55-50/51SN	PSR	Read code	
C70 Coupe	2001	AW55-50/51SN	PSR	Clear code	
C70 Coupe	2001	AW55-50/51SN	PSR	Data stream	
C70 Coupe	2001	AW55-50/51SN	PSR	Actuation	
C70 Coupe	2001	AW55-50/51SN	CPM	Sys. Info.	
C70 Coupe	2001	AW55-50/51SN	CPM	Read code	
C70 Coupe	2001	AW55-50/51SN	CPM	Clear code	
C70 Coupe	2001	AW55-50/51SN	CPM	Data stream	
C70 Coupe	2001	AW55-50/51SN	CPM	Actuation	
C70 Coupe	2001	AW55-50/51SN	RTI	Sys. Info.	
C70 Coupe	2001	AW55-50/51SN	RTI	Read code	
C70 Coupe	2001	AW55-50/51SN	RTI	Clear code	
C70 Coupe	2001	AW55-50/51SN	RTI	Data stream	
C70 Coupe	2001	AW55-50/51SN	RTI	Actuation	
C70 Coupe	2002	AW55-50/51SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70 Coupe	2002	B5244T	ECM	Sys. Info.	
C70 Coupe	2002	B5244T	ECM	Read code	
C70 Coupe	2002	B5244T	ECM	Clear code	
C70 Coupe	2002	B5244T	ECM	Data stream	
C70 Coupe	2002	B5244T	ECM	Actuation	
C70 Coupe	2002	B5234T3	ECM	Sys. Info.	
C70 Coupe	2002	B5234T3	ECM	Read code	
C70 Coupe	2002	B5234T3	ECM	Clear code	
C70 Coupe	2002	B5234T3	ECM	Data stream	
C70 Coupe	2002	B5234T3	ECM	Actuation	
C70 Coupe	2002	B5204T4	ECM	Sys. Info.	
C70 Coupe	2002	B5204T4	ECM	Read code	
C70 Coupe	2002	B5204T4	ECM	Clear code	
C70 Coupe	2002	B5204T4	ECM	Data stream	
C70 Coupe	2002	B5204T4	ECM	Actuation	
C70 Coupe	2002	AW55-50/51SN	TCM	Sys. Info.	
C70 Coupe	2002	AW55-50/51SN	TCM	Read code	
C70 Coupe	2002	AW55-50/51SN	TCM	Clear code	
C70 Coupe	2002	AW55-50/51SN	TCM	Data stream	
C70 Coupe	2002	AW55-50/51SN	TCM	Actuation	
C70 Coupe	2002	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero

model	year	type	system	function	subfunction
C70 Coupe	2002	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change
C70 Coupe	2002	AW55-50/51SN	TCM	Special functions	Control module adaptation
C70 Coupe	2002	AW55-50/51SN	ABS	Sys. Info.	
C70 Coupe	2002	AW55-50/51SN	ABS	Read code	
C70 Coupe	2002	AW55-50/51SN	ABS	Clear code	
C70 Coupe	2002	AW55-50/51SN	ABS	Data stream	
C70 Coupe	2002	AW55-50/51SN	ABS	Actuation	
C70 Coupe	2002	AW55-50/51SN	ABS	Special functions	Checking brake light switch adjustment(*)
C70 Coupe	2002	AW55-50/51SN	ABS	Special functions	Calibration
C70 Coupe	2002	AW55-50/51SN	SRS	Sys. Info.	
C70 Coupe	2002	AW55-50/51SN	SRS	Read code	
C70 Coupe	2002	AW55-50/51SN	SRS	Clear code	
C70 Coupe	2002	AW55-50/51SN	SRS	Data stream	
C70 Coupe	2002	AW55-50/51SN	Immobilizer	Sys. Info.	
C70 Coupe	2002	AW55-50/51SN	Immobilizer	Read code	
C70 Coupe	2002	AW55-50/51SN	Immobilizer	Clear code	
C70 Coupe	2002	AW55-50/51SN	Immobilizer	Data stream	
C70 Coupe	2002	AW55-50/51SN	Immobilizer	Actuation	
C70 Coupe	2002	AW55-50/51SN	VGLA	Sys. Info.	
C70 Coupe	2002	AW55-50/51SN	VGLA	Read code	
C70 Coupe	2002	AW55-50/51SN	VGLA	Clear code	
C70 Coupe	2002	AW55-50/51SN	VGLA	Data stream	
C70 Coupe	2002	AW55-50/51SN	VGLA	Actuation	
C70 Coupe	2002	AW55-50/51SN	CI	Sys. Info.	
C70 Coupe	2002	AW55-50/51SN	CI	Read code	
C70 Coupe	2002	AW55-50/51SN	CI	Clear code	
C70 Coupe	2002	AW55-50/51SN	CI	Data stream	
C70 Coupe	2002	AW55-50/51SN	CI	Actuation	
C70 Coupe	2002	AW55-50/51SN	CI	Special functions	Resetting the service reminder indicator(SRI)
C70 Coupe	2002	AW55-50/51SN	CCM	Sys. Info.	
C70 Coupe	2002	AW55-50/51SN	CCM	Read code	
C70 Coupe	2002	AW55-50/51SN	CCM	Clear code	
C70 Coupe	2002	AW55-50/51SN	CCM	Data stream	
C70 Coupe	2002	AW55-50/51SN	PSL	Sys. Info.	
C70 Coupe	2002	AW55-50/51SN	PSL	Read code	
C70 Coupe	2002	AW55-50/51SN	PSL	Clear code	
C70 Coupe	2002	AW55-50/51SN	PSL	Data stream	
C70 Coupe	2002	AW55-50/51SN	PSL	Actuation	
C70 Coupe	2002	AW55-50/51SN	PSR	Sys. Info.	

model	year	type	system	function	subfunction
C70 Coupe	2002	AW55-50/51SN	PSR	Read code	
C70 Coupe	2002	AW55-50/51SN	PSR	Clear code	
C70 Coupe	2002	AW55-50/51SN	PSR	Data stream	
C70 Coupe	2002	AW55-50/51SN	PSR	Actuation	
C70 Coupe	2002	AW55-50/51SN	CPM	Sys. Info.	
C70 Coupe	2002	AW55-50/51SN	CPM	Read code	
C70 Coupe	2002	AW55-50/51SN	CPM	Clear code	
C70 Coupe	2002	AW55-50/51SN	CPM	Data stream	
C70 Coupe	2002	AW55-50/51SN	CPM	Actuation	
C70 Coupe	2002	AW55-50/51SN	RTI	Sys. Info.	
C70 Coupe	2002	AW55-50/51SN	RTI	Read code	
C70 Coupe	2002	AW55-50/51SN	RTI	Clear code	
C70 Coupe	2002	AW55-50/51SN	RTI	Data stream	
C70 Coupe	2002	AW55-50/51SN	RTI	Actuation	
C70 Conv	1998	MOTRONIC 4	ECM	Sys. Info.	
C70 Conv	1998	MOTRONIC 4	ECM	Read code	
C70 Conv	1998	MOTRONIC 4	ECM	Clear code	
C70 Conv	1998	MOTRONIC 4	ECM	Data stream	
C70 Conv	1998	AW50-42	TCM	Sys. Info.	
C70 Conv	1998	AW50-42	TCM	Read code	
C70 Conv	1998	AW50-42	TCM	Clear code	
C70 Conv	1998	AW50-42	TCM	Data stream	
C70 Conv	1999	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70 Conv	1999	B5254T	ECM	Sys. Info.	
C70 Conv	1999	B5254T	ECM	Read code	
C70 Conv	1999	B5254T	ECM	Clear code	
C70 Conv	1999	B5254T	ECM	Data stream	
C70 Conv	1999	B5254T	ECM	Actuation	
C70 Conv	1999	B5204T3	ECM	Sys. Info.	
C70 Conv	1999	B5204T3	ECM	Read code	
C70 Conv	1999	B5204T3	ECM	Clear code	
C70 Conv	1999	B5204T3	ECM	Data stream	
C70 Conv	1999	B5204T3	ECM	Actuation	
C70 Conv	1999	B5234T3	ECM	Sys. Info.	
C70 Conv	1999	B5234T3	ECM	Read code	
C70 Conv	1999	B5234T3	ECM	Clear code	
C70 Conv	1999	B5234T3	ECM	Data stream	
C70 Conv	1999	B5234T3	ECM	Actuation	
C70 Conv	1999	B5204T4	ECM	Sys. Info.	
C70 Conv	1999	B5204T4	ECM	Read code	
C70 Conv	1999	B5204T4	ECM	Clear code	
C70 Conv	1999	B5204T4	ECM	Data stream	
C70 Conv	1999	B5204T4	ECM	Actuation	
C70 Conv	1999	AW50-42	TCM	Sys. Info.	
C70 Conv	1999	AW50-42	TCM	Read code	
C70 Conv	1999	AW50-42	TCM	Clear code	
C70 Conv	1999	AW50-42	TCM	Data stream	
C70 Conv	1999	AW50-42	TCM	Actuation	
C70 Conv	1999	AW50-42	ABS	Sys. Info.	
C70 Conv	1999	AW50-42	ABS	Read code	
C70 Conv	1999	AW50-42	ABS	Clear code	
C70 Conv	1999	AW50-42	ABS	Data stream	
C70 Conv	1999	AW50-42	ABS	Actuation	
C70 Conv	1999	AW50-42	ABS	Special functions	Checking brake light switch adjustment(*)
C70 Conv	1999	AW50-42	ABS	Special functions	Calibration
C70 Conv	1999	AW50-42	SRS	Sys. Info.	
C70 Conv	1999	AW50-42	SRS	Read code	
C70 Conv	1999	AW50-42	SRS	Clear code	
C70 Conv	1999	AW50-42	SRS	Data stream	
C70 Conv	1999	AW50-42	Immobilizer	Sys. Info.	
C70 Conv	1999	AW50-42	Immobilizer	Read code	
C70 Conv	1999	AW50-42	Immobilizer	Clear code	
C70 Conv	1999	AW50-42	Immobilizer	Data stream	

model	year	type	system	function	subfunction
C70 Conv	1999	AW50-42	Immobilizer	Actuation	
C70 Conv	1999	AW50-42	VGLA	Sys. Info.	
C70 Conv	1999	AW50-42	VGLA	Read code	
C70 Conv	1999	AW50-42	VGLA	Clear code	
C70 Conv	1999	AW50-42	VGLA	Data stream	
C70 Conv	1999	AW50-42	VGLA	Actuation	
C70 Conv	1999	AW50-42	CI	Sys. Info.	
C70 Conv	1999	AW50-42	CI	Read code	
C70 Conv	1999	AW50-42	CI	Clear code	
C70 Conv	1999	AW50-42	CI	Data stream	
C70 Conv	1999	AW50-42	CI	Actuation	
C70 Conv	1999	AW50-42	CI	Special functions	Resetting the service reminder indicator(SRI)
C70 Conv	1999	AW50-42	cab control sys	Sys. Info.	
C70 Conv	1999	AW50-42	cab control sys	Read code	
C70 Conv	1999	AW50-42	cab control sys	Clear code	
C70 Conv	1999	AW50-42	cab control sys	Data stream	
C70 Conv	1999	AW50-42	Rollover protection	Sys. Info.	
C70 Conv	1999	AW50-42	Rollover protection	Read code	
C70 Conv	1999	AW50-42	Rollover protection	Clear code	
C70 Conv	1999	AW50-42	Rollover protection	Data stream	
C70 Conv	1999	AW50-42	Rollover protection	Actuation	
C70 Conv	1999	AW50-42	CCM	Sys. Info.	
C70 Conv	1999	AW50-42	CCM	Read code	
C70 Conv	1999	AW50-42	CCM	Clear code	
C70 Conv	1999	AW50-42	CCM	Data stream	
C70 Conv	1999	AW50-42	PSL	Sys. Info.	
C70 Conv	1999	AW50-42	PSL	Read code	
C70 Conv	1999	AW50-42	PSL	Clear code	
C70 Conv	1999	AW50-42	PSL	Data stream	
C70 Conv	1999	AW50-42	PSL	Actuation	
C70 Conv	1999	AW50-42	PSR	Sys. Info.	
C70 Conv	1999	AW50-42	PSR	Read code	
C70 Conv	1999	AW50-42	PSR	Clear code	
C70 Conv	1999	AW50-42	PSR	Data stream	
C70 Conv	1999	AW50-42	PSR	Actuation	
C70 Conv	1999	AW50-42	CPM	Sys. Info.	
C70 Conv	1999	AW50-42	CPM	Read code	
C70 Conv	1999	AW50-42	CPM	Clear code	
C70 Conv	1999	AW50-42	CPM	Data stream	
C70 Conv	1999	AW50-42	CPM	Actuation	
C70 Conv	1999	AW50-42	RTI	Sys. Info.	
C70 Conv	1999	AW50-42	RTI	Read code	
C70 Conv	1999	AW50-42	RTI	Clear code	
C70 Conv	1999	AW50-42	RTI	Data stream	
C70 Conv	1999	AW50-42	RTI	Actuation	
C70 Conv	2000	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70 Conv	2000	B5244S	ECM	Sys. Info.	
C70 Conv	2000	B5244S	ECM	Read code	
C70 Conv	2000	B5244S	ECM	Clear code	
C70 Conv	2000	B5244S	ECM	Data stream	
C70 Conv	2000	B5244S	ECM	Actuation	
C70 Conv	2000	B5244T	ECM	Sys. Info.	
C70 Conv	2000	B5244T	ECM	Read code	
C70 Conv	2000	B5244T	ECM	Clear code	
C70 Conv	2000	B5244T	ECM	Data stream	
C70 Conv	2000	B5244T	ECM	Actuation	
C70 Conv	2000	B5204T3	ECM	Sys. Info.	
C70 Conv	2000	B5204T3	ECM	Read code	
C70 Conv	2000	B5204T3	ECM	Clear code	
C70 Conv	2000	B5204T3	ECM	Data stream	
C70 Conv	2000	B5204T3	ECM	Actuation	
C70 Conv	2000	B5204T4	ECM	Sys. Info.	
C70 Conv	2000	B5204T4	ECM	Read code	
C70 Conv	2000	B5204T4	ECM	Clear code	
C70 Conv	2000	B5204T4	ECM	Data stream	
C70 Conv	2000	B5204T4	ECM	Actuation	
C70 Conv	2000	AW55-50/51SN	TCM	Sys. Info.	
C70 Conv	2000	AW55-50/51SN	TCM	Read code	
C70 Conv	2000	AW55-50/51SN	TCM	Clear code	

model	year	type	system	function	subfunction
C70 Conv	2000	AW55-50/51SN	TCM	Data stream	
C70 Conv	2000	AW55-50/51SN	TCM	Actuation	
C70 Conv	2000	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70 Conv	2000	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change
C70 Conv	2000	AW55-50/51SN	TCM	Special functions	Control module adaptation
C70 Conv	2000	AW50-42	TCM	Sys. Info.	
C70 Conv	2000	AW50-42	TCM	Read code	
C70 Conv	2000	AW50-42	TCM	Clear code	
C70 Conv	2000	AW50-42	TCM	Data stream	
C70 Conv	2000	AW50-42	TCM	Actuation	
C70 Conv	2000	AW50-42	TCM	Special functions	Resetting the adaptation
C70 Conv	2000	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change
C70 Conv	2000	AW50-42	TCM	Special functions	Activating gear indication
C70 Conv	2000	AW50-42	TCM	Special functions	Control module adaptation
C70 Conv	2000	AW50-42	ABS	Sys. Info.	
C70 Conv	2000	AW50-42	ABS	Read code	
C70 Conv	2000	AW50-42	ABS	Clear code	
C70 Conv	2000	AW50-42	ABS	Data stream	
C70 Conv	2000	AW50-42	ABS	Actuation	
C70 Conv	2000	AW50-42	ABS	Special functions	Checking brake light switch adjustment(*)
C70 Conv	2000	AW50-42	ABS	Special functions	Calibration
C70 Conv	2000	AW50-42	SRS	Sys. Info.	
C70 Conv	2000	AW50-42	SRS	Read code	
C70 Conv	2000	AW50-42	SRS	Clear code	
C70 Conv	2000	AW50-42	SRS	Data stream	
C70 Conv	2000	AW50-42	Immobilizer	Sys. Info.	
C70 Conv	2000	AW50-42	Immobilizer	Read code	
C70 Conv	2000	AW50-42	Immobilizer	Clear code	
C70 Conv	2000	AW50-42	Immobilizer	Data stream	
C70 Conv	2000	AW50-42	Immobilizer	Actuation	
C70 Conv	2000	AW50-42	VGLA	Sys. Info.	
C70 Conv	2000	AW50-42	VGLA	Read code	
C70 Conv	2000	AW50-42	VGLA	Clear code	
C70 Conv	2000	AW50-42	VGLA	Data stream	
C70 Conv	2000	AW50-42	VGLA	Actuation	
C70 Conv	2000	AW50-42	CI	Sys. Info.	
C70 Conv	2000	AW50-42	CI	Read code	
C70 Conv	2000	AW50-42	CI	Clear code	
C70 Conv	2000	AW50-42	CI	Data stream	
C70 Conv	2000	AW50-42	CI	Actuation	
C70 Conv	2000	AW50-42	CI	Special functions	Resetting the service reminder indicator(SRI)
C70 Conv	2000	AW50-42	cab control sys	Sys. Info.	
C70 Conv	2000	AW50-42	cab control sys	Read code	
C70 Conv	2000	AW50-42	cab control sys	Clear code	
C70 Conv	2000	AW50-42	cab control sys	Data stream	
C70 Conv	2000	AW50-42	Rollover protection	Sys. Info.	
C70 Conv	2000	AW50-42	Rollover protection	Read code	
C70 Conv	2000	AW50-42	Rollover protection	Clear code	
C70 Conv	2000	AW50-42	Rollover protection	Data stream	
C70 Conv	2000	AW50-42	Rollover protection	Actuation	
C70 Conv	2000	AW50-42	CCM	Sys. Info.	
C70 Conv	2000	AW50-42	CCM	Read code	
C70 Conv	2000	AW50-42	CCM	Clear code	
C70 Conv	2000	AW50-42	CCM	Data stream	
C70 Conv	2000	AW50-42	PSL	Sys. Info.	
C70 Conv	2000	AW50-42	PSL	Read code	
C70 Conv	2000	AW50-42	PSL	Clear code	
C70 Conv	2000	AW50-42	PSL	Data stream	
C70 Conv	2000	AW50-42	PSL	Actuation	
C70 Conv	2000	AW50-42	PSR	Sys. Info.	
C70 Conv	2000	AW50-42	PSR	Read code	
C70 Conv	2000	AW50-42	PSR	Clear code	
C70 Conv	2000	AW50-42	PSR	Data stream	
C70 Conv	2000	AW50-42	PSR	Actuation	
C70 Conv	2000	AW50-42	CPM	Sys. Info.	
C70 Conv	2000	AW50-42	CPM	Read code	
C70 Conv	2000	AW50-42	CPM	Clear code	
C70 Conv	2000	AW50-42	CPM	Data stream	

model	year	type	system	function	subfunction
C70 Conv	2000	AW50-42	CPM	Actuation	
C70 Conv	2000	AW50-42	RTI	Sys. Info.	
C70 Conv	2000	AW50-42	RTI	Read code	
C70 Conv	2000	AW50-42	RTI	Clear code	
C70 Conv	2000	AW50-42	RTI	Data stream	
C70 Conv	2000	AW50-42	RTI	Actuation	
C70 Conv	2001	AW50-42	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70 Conv	2001	B5234T3	ECM	Sys. Info.	
C70 Conv	2001	B5234T3	ECM	Read code	
C70 Conv	2001	B5234T3	ECM	Clear code	
C70 Conv	2001	B5234T3	ECM	Data stream	
C70 Conv	2001	B5234T3	ECM	Actuation	
C70 Conv	2001	B5204T4	ECM	Sys. Info.	
C70 Conv	2001	B5204T4	ECM	Read code	
C70 Conv	2001	B5204T4	ECM	Clear code	
C70 Conv	2001	B5204T4	ECM	Data stream	
C70 Conv	2001	B5204T4	ECM	Actuation	
C70 Conv	2001	B5244T	ECM	Sys. Info.	
C70 Conv	2001	B5244T	ECM	Read code	
C70 Conv	2001	B5244T	ECM	Clear code	
C70 Conv	2001	B5244T	ECM	Data stream	
C70 Conv	2001	B5244T	ECM	Actuation	
C70 Conv	2001	AW55-50/51SN	TCM	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	TCM	Read code	
C70 Conv	2001	AW55-50/51SN	TCM	Clear code	
C70 Conv	2001	AW55-50/51SN	TCM	Data stream	
C70 Conv	2001	AW55-50/51SN	TCM	Actuation	
C70 Conv	2001	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70 Conv	2001	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change
C70 Conv	2001	AW55-50/51SN	TCM	Special functions	Control module adaptation
C70 Conv	2001	AW55-50/51SN	ABS	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	ABS	Read code	
C70 Conv	2001	AW55-50/51SN	ABS	Clear code	
C70 Conv	2001	AW55-50/51SN	ABS	Data stream	
C70 Conv	2001	AW55-50/51SN	ABS	Actuation	
C70 Conv	2001	AW55-50/51SN	ABS	Special functions	Checking brake light switch adjustment(*)
C70 Conv	2001	AW55-50/51SN	ABS	Special functions	Calibration
C70 Conv	2001	AW55-50/51SN	SRS	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	SRS	Read code	
C70 Conv	2001	AW55-50/51SN	SRS	Clear code	
C70 Conv	2001	AW55-50/51SN	SRS	Data stream	
C70 Conv	2001	AW55-50/51SN	Immobilizer	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	Immobilizer	Read code	
C70 Conv	2001	AW55-50/51SN	Immobilizer	Clear code	
C70 Conv	2001	AW55-50/51SN	Immobilizer	Data stream	
C70 Conv	2001	AW55-50/51SN	Immobilizer	Actuation	
C70 Conv	2001	AW55-50/51SN	VGLA	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	VGLA	Read code	
C70 Conv	2001	AW55-50/51SN	VGLA	Clear code	



model	year	type	system	function	subfunction
C70 Conv	2001	AW55-50/51SN	VGLA	Data stream	
C70 Conv	2001	AW55-50/51SN	VGLA	Actuation	
C70 Conv	2001	AW55-50/51SN	CI	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	CI	Read code	
C70 Conv	2001	AW55-50/51SN	CI	Clear code	
C70 Conv	2001	AW55-50/51SN	CI	Data stream	
C70 Conv	2001	AW55-50/51SN	CI	Actuation	
C70 Conv	2001	AW55-50/51SN	CI	Special functions	Reseting the service reminder(SRI)
C70 Conv	2001	AW55-50/51SN	cab control sys	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	cab control sys	Read code	
C70 Conv	2001	AW55-50/51SN	cab control sys	Clear code	
C70 Conv	2001	AW55-50/51SN	cab control sys	Data stream	
C70 Conv	2001	AW55-50/51SN	Rollover protection	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	Rollover protection	Read code	
C70 Conv	2001	AW55-50/51SN	Rollover protection	Clear code	
C70 Conv	2001	AW55-50/51SN	Rollover protection	Data stream	
C70 Conv	2001	AW55-50/51SN	Rollover protection	Actuation	
C70 Conv	2001	AW55-50/51SN	CCM	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	CCM	Read code	
C70 Conv	2001	AW55-50/51SN	CCM	Clear code	
C70 Conv	2001	AW55-50/51SN	CCM	Data stream	
C70 Conv	2001	AW55-50/51SN	PSL	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	PSL	Read code	
C70 Conv	2001	AW55-50/51SN	PSL	Clear code	
C70 Conv	2001	AW55-50/51SN	PSL	Data stream	
C70 Conv	2001	AW55-50/51SN	PSL	Actuation	
C70 Conv	2001	AW55-50/51SN	PSR	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	PSR	Read code	
C70 Conv	2001	AW55-50/51SN	PSR	Clear code	
C70 Conv	2001	AW55-50/51SN	PSR	Data stream	
C70 Conv	2001	AW55-50/51SN	PSR	Actuation	
C70 Conv	2001	AW55-50/51SN	CPM	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	CPM	Read code	
C70 Conv	2001	AW55-50/51SN	CPM	Clear code	
C70 Conv	2001	AW55-50/51SN	CPM	Data stream	
C70 Conv	2001	AW55-50/51SN	CPM	Actuation	
C70 Conv	2001	AW55-50/51SN	RTI	Sys. Info.	
C70 Conv	2001	AW55-50/51SN	RTI	Read code	
C70 Conv	2001	AW55-50/51SN	RTI	Clear code	

model	year	type	system	function	subfunction
C70 Conv	2001	AW55-50/51SN	RTI	Data stream	
C70 Conv	2001	AW55-50/51SN	RTI	Actuation	
C70 Conv	2002	AW55-50/51SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70 Conv	2002	B5234T3	ECM	Sys. Info.	
C70 Conv	2002	B5234T3	ECM	Read code	
C70 Conv	2002	B5234T3	ECM	Clear code	
C70 Conv	2002	B5234T3	ECM	Data stream	
C70 Conv	2002	B5234T3	ECM	Actuation	
C70 Conv	2002	B5204T4	ECM	Sys. Info.	
C70 Conv	2002	B5204T4	ECM	Read code	
C70 Conv	2002	B5204T4	ECM	Clear code	
C70 Conv	2002	B5204T4	ECM	Data stream	
C70 Conv	2002	B5204T4	ECM	Actuation	
C70 Conv	2002	B5244T	ECM	Sys. Info.	
C70 Conv	2002	B5244T	ECM	Read code	
C70 Conv	2002	B5244T	ECM	Clear code	
C70 Conv	2002	B5244T	ECM	Data stream	
C70 Conv	2002	B5244T	ECM	Actuation	
C70 Conv	2002	AW55-50/51SN	TCM	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	TCM	Read code	
C70 Conv	2002	AW55-50/51SN	TCM	Clear code	
C70 Conv	2002	AW55-50/51SN	TCM	Data stream	
C70 Conv	2002	AW55-50/51SN	TCM	Actuation	
C70 Conv	2002	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70 Conv	2002	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change
C70 Conv	2002	AW55-50/51SN	TCM	Special functions	Control module adaptation
C70 Conv	2002	AW55-50/51SN	ABS	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	ABS	Read code	
C70 Conv	2002	AW55-50/51SN	ABS	Clear code	
C70 Conv	2002	AW55-50/51SN	ABS	Data stream	
C70 Conv	2002	AW55-50/51SN	ABS	Actuation	
C70 Conv	2002	AW55-50/51SN	ABS	Special functions	Checking brake light switch adjustment(*)
C70 Conv	2002	AW55-50/51SN	ABS	Special functions	Calibration
C70 Conv	2002	AW55-50/51SN	SRS	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	SRS	Read code	
C70 Conv	2002	AW55-50/51SN	SRS	Clear code	
C70 Conv	2002	AW55-50/51SN	SRS	Data stream	
C70 Conv	2002	AW55-50/51SN	Immobilizer	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	Immobilizer	Read code	
C70 Conv	2002	AW55-50/51SN	Immobilizer	Clear code	
C70 Conv	2002	AW55-50/51SN	Immobilizer	Data stream	
C70 Conv	2002	AW55-50/51SN	Immobilizer	Actuation	
C70 Conv	2002	AW55-50/51SN	VGLA	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	VGLA	Read code	
C70 Conv	2002	AW55-50/51SN	VGLA	Clear code	
C70 Conv	2002	AW55-50/51SN	VGLA	Data stream	

model	year	type	system	function	subfunction
C70 Conv	2002	AW55-50/51SN	VGLA	Actuation	
C70 Conv	2002	AW55-50/51SN	CI	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	CI	Read code	
C70 Conv	2002	AW55-50/51SN	CI	Clear code	
C70 Conv	2002	AW55-50/51SN	CI	Data stream	
C70 Conv	2002	AW55-50/51SN	CI	Actuation	
C70 Conv	2002	AW55-50/51SN	CI	Special functions	Reseting the service reminder indicator(SRI)
C70 Conv	2002	AW55-50/51SN	cab control sys	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	cab control sys	Read code	
C70 Conv	2002	AW55-50/51SN	cab control sys	Clear code	
C70 Conv	2002	AW55-50/51SN	cab control sys	Data stream	
C70 Conv	2002	AW55-50/51SN	Rollover protection	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	Rollover protection	Read code	
C70 Conv	2002	AW55-50/51SN	Rollover protection	Clear code	
C70 Conv	2002	AW55-50/51SN	Rollover protection	Data stream	
C70 Conv	2002	AW55-50/51SN	Rollover protection	Actuation	
C70 Conv	2002	AW55-50/51SN	CCM	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	CCM	Read code	
C70 Conv	2002	AW55-50/51SN	CCM	Clear code	
C70 Conv	2002	AW55-50/51SN	CCM	Data stream	
C70 Conv	2002	AW55-50/51SN	PSL	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	PSL	Read code	
C70 Conv	2002	AW55-50/51SN	PSL	Clear code	
C70 Conv	2002	AW55-50/51SN	PSL	Data stream	
C70 Conv	2002	AW55-50/51SN	PSL	Actuation	
C70 Conv	2002	AW55-50/51SN	PSR	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	PSR	Read code	
C70 Conv	2002	AW55-50/51SN	PSR	Clear code	
C70 Conv	2002	AW55-50/51SN	PSR	Data stream	
C70 Conv	2002	AW55-50/51SN	PSR	Actuation	
C70 Conv	2002	AW55-50/51SN	CPM	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	CPM	Read code	
C70 Conv	2002	AW55-50/51SN	CPM	Clear code	
C70 Conv	2002	AW55-50/51SN	CPM	Data stream	
C70 Conv	2002	AW55-50/51SN	CPM	Actuation	
C70 Conv	2002	AW55-50/51SN	RTI	Sys. Info.	
C70 Conv	2002	AW55-50/51SN	RTI	Read code	
C70 Conv	2002	AW55-50/51SN	RTI	Clear code	
C70 Conv	2002	AW55-50/51SN	RTI	Data stream	

model	year	type	system	function	subfunction
C70 Conv	2002	AW55-50/51SN	RTI	Actuation	
C70 Conv	2003	AW55-50/51SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70 Conv	2003	B5204T4	ECM	Sys. Info.	
C70 Conv	2003	B5204T4	ECM	Read code	
C70 Conv	2003	B5204T4	ECM	Clear code	
C70 Conv	2003	B5204T4	ECM	Data stream	
C70 Conv	2003	B5204T4	ECM	Actuation	
C70 Conv	2003	B5204T4	ECM	Special functions	Quick test of Exhaust camshaft control
C70 Conv	2003	B5204T4	ECM	Special functions	Adaptation of the throttle unit
C70 Conv	2003	B5234T9	ECM	Sys. Info.	
C70 Conv	2003	B5234T9	ECM	Read code	
C70 Conv	2003	B5234T9	ECM	Clear code	
C70 Conv	2003	B5234T9	ECM	Data stream	
C70 Conv	2003	B5234T9	ECM	Actuation	
C70 Conv	2003	B5234T9	ECM	Special functions	Quick test of Exhaust camshaft control
C70 Conv	2003	B5234T9	ECM	Special functions	Adaptation of the throttle unit
C70 Conv	2003	B5244T7	ECM	Sys. Info.	
C70 Conv	2003	B5244T7	ECM	Read code	
C70 Conv	2003	B5244T7	ECM	Clear code	
C70 Conv	2003	B5244T7	ECM	Data stream	
C70 Conv	2003	B5244T7	ECM	Actuation	
C70 Conv	2003	B5244T7	ECM	Special functions	Quick test of Exhaust camshaft control
C70 Conv	2003	B5244T7	ECM	Special functions	Adaptation of the throttle unit
C70 Conv	2003	AW55-50/51SN	TCM	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	TCM	Read code	
C70 Conv	2003	AW55-50/51SN	TCM	Clear code	
C70 Conv	2003	AW55-50/51SN	TCM	Data stream	
C70 Conv	2003	AW55-50/51SN	TCM	Actuation	
C70 Conv	2003	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70 Conv	2003	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change
C70 Conv	2003	AW55-50/51SN	TCM	Special functions	Control module adaptation
C70 Conv	2003	AW55-50/51SN	ABS	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	ABS	Read code	
C70 Conv	2003	AW55-50/51SN	ABS	Clear code	
C70 Conv	2003	AW55-50/51SN	ABS	Data stream	
C70 Conv	2003	AW55-50/51SN	ABS	Actuation	
C70 Conv	2003	AW55-50/51SN	ABS	Special functions	Checking brake light switch adjustment(*)
C70 Conv	2003	AW55-50/51SN	ABS	Special functions	Calibration
C70 Conv	2003	AW55-50/51SN	SRS	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	SRS	Read code	
C70 Conv	2003	AW55-50/51SN	SRS	Clear code	
C70 Conv	2003	AW55-50/51SN	SRS	Data stream	
C70 Conv	2003	AW55-50/51SN	Immobilizer	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	Immobilizer	Read code	
C70 Conv	2003	AW55-50/51SN	Immobilizer	Clear code	
C70 Conv	2003	AW55-50/51SN	Immobilizer	Data stream	
C70 Conv	2003	AW55-50/51SN	Immobilizer	Actuation	
C70 Conv	2003	AW55-50/51SN	VGLA	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	VGLA	Read code	

model	year	type	system	function	subfunction
C70 Conv	2003	AW55-50/51SN	VGLA	Clear code	
C70 Conv	2003	AW55-50/51SN	VGLA	Data stream	
C70 Conv	2003	AW55-50/51SN	VGLA	Actuation	
C70 Conv	2003	AW55-50/51SN	CI	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	CI	Read code	
C70 Conv	2003	AW55-50/51SN	CI	Clear code	
C70 Conv	2003	AW55-50/51SN	CI	Data stream	
C70 Conv	2003	AW55-50/51SN	CI	Actuation	
C70 Conv	2003	AW55-50/51SN	CI	Special functions	Reseting the service reminder indicator(SRI)
C70 Conv	2003	AW55-50/51SN	cab control sys	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	cab control sys	Read code	
C70 Conv	2003	AW55-50/51SN	cab control sys	Clear code	
C70 Conv	2003	AW55-50/51SN	cab control sys	Data stream	
C70 Conv	2003	AW55-50/51SN	Rollover protection	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	Rollover protection	Read code	
C70 Conv	2003	AW55-50/51SN	Rollover protection	Clear code	
C70 Conv	2003	AW55-50/51SN	Rollover protection	Data stream	
C70 Conv	2003	AW55-50/51SN	Rollover protection	Actuation	
C70 Conv	2003	AW55-50/51SN	CCM	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	CCM	Read code	
C70 Conv	2003	AW55-50/51SN	CCM	Clear code	
C70 Conv	2003	AW55-50/51SN	CCM	Data stream	
C70 Conv	2003	AW55-50/51SN	PSL	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	PSL	Read code	
C70 Conv	2003	AW55-50/51SN	PSL	Clear code	
C70 Conv	2003	AW55-50/51SN	PSL	Data stream	
C70 Conv	2003	AW55-50/51SN	PSL	Actuation	
C70 Conv	2003	AW55-50/51SN	PSR	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	PSR	Read code	
C70 Conv	2003	AW55-50/51SN	PSR	Clear code	
C70 Conv	2003	AW55-50/51SN	PSR	Data stream	
C70 Conv	2003	AW55-50/51SN	PSR	Actuation	
C70 Conv	2003	AW55-50/51SN	CPM	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	CPM	Read code	
C70 Conv	2003	AW55-50/51SN	CPM	Clear code	
C70 Conv	2003	AW55-50/51SN	CPM	Data stream	
C70 Conv	2003	AW55-50/51SN	CPM	Actuation	
C70 Conv	2003	AW55-50/51SN	RTI	Sys. Info.	
C70 Conv	2003	AW55-50/51SN	RTI	Read code	

model	year	type	system	function	subfunction
C70 Conv	2003	AW55-50/51SN	RTI	Clear code	
C70 Conv	2003	AW55-50/51SN	RTI	Data stream	
C70 Conv	2003	AW55-50/51SN	RTI	Actuation	
C70 Conv	2004	AW55-50/51SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70 Conv	2004	B5204T4	ECM	Sys. Info.	
C70 Conv	2004	B5204T4	ECM	Read code	
C70 Conv	2004	B5204T4	ECM	Clear code	
C70 Conv	2004	B5204T4	ECM	Data stream	
C70 Conv	2004	B5204T4	ECM	Actuation	
C70 Conv	2004	B5204T4	ECM	Special functions	Quick test of Exhaust camshaft control
C70 Conv	2004	B5204T4	ECM	Special functions	Adaptation of the throttle unit
C70 Conv	2004	B5234T9	ECM	Sys. Info.	
C70 Conv	2004	B5234T9	ECM	Read code	
C70 Conv	2004	B5234T9	ECM	Clear code	
C70 Conv	2004	B5234T9	ECM	Data stream	
C70 Conv	2004	B5234T9	ECM	Actuation	
C70 Conv	2004	B5234T9	ECM	Special functions	Quick test of Exhaust camshaft control
C70 Conv	2004	B5234T9	ECM	Special functions	Adaptation of the throttle unit
C70 Conv	2004	B5244T7	ECM	Sys. Info.	
C70 Conv	2004	B5244T7	ECM	Read code	
C70 Conv	2004	B5244T7	ECM	Clear code	
C70 Conv	2004	B5244T7	ECM	Data stream	
C70 Conv	2004	B5244T7	ECM	Actuation	
C70 Conv	2004	B5244T7	ECM	Special functions	Quick test of Exhaust camshaft control
C70 Conv	2004	B5244T7	ECM	Special functions	Adaptation of the throttle unit
C70 Conv	2004	AW55-50/51SN	TCM	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	TCM	Read code	
C70 Conv	2004	AW55-50/51SN	TCM	Clear code	
C70 Conv	2004	AW55-50/51SN	TCM	Data stream	
C70 Conv	2004	AW55-50/51SN	TCM	Actuation	
C70 Conv	2004	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70 Conv	2004	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change
C70 Conv	2004	AW55-50/51SN	TCM	Special functions	Control module adaptation
C70 Conv	2004	AW55-50/51SN	ABS	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	ABS	Read code	
C70 Conv	2004	AW55-50/51SN	ABS	Clear code	
C70 Conv	2004	AW55-50/51SN	ABS	Data stream	
C70 Conv	2004	AW55-50/51SN	ABS	Actuation	
C70 Conv	2004	AW55-50/51SN	ABS	Special functions	Checking brake light switch adjustment(*)
C70 Conv	2004	AW55-50/51SN	ABS	Special functions	Calibration
C70 Conv	2004	AW55-50/51SN	SRS	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	SRS	Read code	
C70 Conv	2004	AW55-50/51SN	SRS	Clear code	
C70 Conv	2004	AW55-50/51SN	SRS	Data stream	
C70 Conv	2004	AW55-50/51SN	Immobilizer	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	Immobilizer	Read code	
C70 Conv	2004	AW55-50/51SN	Immobilizer	Clear code	
C70 Conv	2004	AW55-50/51SN	Immobilizer	Data stream	
C70 Conv	2004	AW55-50/51SN	Immobilizer	Actuation	

model	year	type	system	function	subfunction
C70 Conv	2004	AW55-50/51SN	VGLA	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	VGLA	Read code	
C70 Conv	2004	AW55-50/51SN	VGLA	Clear code	
C70 Conv	2004	AW55-50/51SN	VGLA	Data stream	
C70 Conv	2004	AW55-50/51SN	VGLA	Actuation	
C70 Conv	2004	AW55-50/51SN	CI	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	CI	Read code	
C70 Conv	2004	AW55-50/51SN	CI	Clear code	
C70 Conv	2004	AW55-50/51SN	CI	Data stream	
C70 Conv	2004	AW55-50/51SN	CI	Actuation	
C70 Conv	2004	AW55-50/51SN	CI	Special functions	Reseting the service reminder indicator(SRI)
C70 Conv	2004	AW55-50/51SN	cab control sys	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	cab control sys	Read code	
C70 Conv	2004	AW55-50/51SN	cab control sys	Clear code	
C70 Conv	2004	AW55-50/51SN	cab control sys	Data stream	
C70 Conv	2004	AW55-50/51SN	Rollover protection	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	Rollover protection	Read code	
C70 Conv	2004	AW55-50/51SN	Rollover protection	Clear code	
C70 Conv	2004	AW55-50/51SN	Rollover protection	Data stream	
C70 Conv	2004	AW55-50/51SN	Rollover protection	Actuation	
C70 Conv	2004	AW55-50/51SN	CCM	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	CCM	Read code	
C70 Conv	2004	AW55-50/51SN	CCM	Clear code	
C70 Conv	2004	AW55-50/51SN	CCM	Data stream	
C70 Conv	2004	AW55-50/51SN	PSL	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	PSL	Read code	
C70 Conv	2004	AW55-50/51SN	PSL	Clear code	
C70 Conv	2004	AW55-50/51SN	PSL	Data stream	
C70 Conv	2004	AW55-50/51SN	PSL	Actuation	
C70 Conv	2004	AW55-50/51SN	PSR	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	PSR	Read code	
C70 Conv	2004	AW55-50/51SN	PSR	Clear code	
C70 Conv	2004	AW55-50/51SN	PSR	Data stream	
C70 Conv	2004	AW55-50/51SN	PSR	Actuation	
C70 Conv	2004	AW55-50/51SN	CPM	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	CPM	Read code	
C70 Conv	2004	AW55-50/51SN	CPM	Clear code	
C70 Conv	2004	AW55-50/51SN	CPM	Data stream	
C70 Conv	2004	AW55-50/51SN	CPM	Actuation	

model	year	type	system	function	subfunction
C70 Conv	2004	AW55-50/51SN	RTI	Sys. Info.	
C70 Conv	2004	AW55-50/51SN	RTI	Read code	
C70 Conv	2004	AW55-50/51SN	RTI	Clear code	
C70 Conv	2004	AW55-50/51SN	RTI	Data stream	
C70 Conv	2004	AW55-50/51SN	RTI	Actuation	
C70 Conv	2005	AW55-50/51SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70 Conv	2005	B5204T4	ECM	Sys. Info.	
C70 Conv	2005	B5204T4	ECM	Read code	
C70 Conv	2005	B5204T4	ECM	Clear code	
C70 Conv	2005	B5204T4	ECM	Data stream	
C70 Conv	2005	B5204T4	ECM	Actuation	
C70 Conv	2005	B5204T4	ECM	Special functions	Quick test of Exhaust camshaft control
C70 Conv	2005	B5204T4	ECM	Special functions	Adaptation of the throttle unit
C70 Conv	2005	B5234T9	ECM	Sys. Info.	
C70 Conv	2005	B5234T9	ECM	Read code	
C70 Conv	2005	B5234T9	ECM	Clear code	
C70 Conv	2005	B5234T9	ECM	Data stream	
C70 Conv	2005	B5234T9	ECM	Actuation	
C70 Conv	2005	B5234T9	ECM	Special functions	Quick test of Exhaust camshaft control
C70 Conv	2005	B5234T9	ECM	Special functions	Adaptation of the throttle unit
C70 Conv	2005	B5244T7	ECM	Sys. Info.	
C70 Conv	2005	B5244T7	ECM	Read code	
C70 Conv	2005	B5244T7	ECM	Clear code	
C70 Conv	2005	B5244T7	ECM	Data stream	
C70 Conv	2005	B5244T7	ECM	Actuation	
C70 Conv	2005	B5244T7	ECM	Special functions	Quick test of Exhaust camshaft control
C70 Conv	2005	B5244T7	ECM	Special functions	Adaptation of the throttle unit
C70 Conv	2005	AW55-50/51SN	TCM	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	TCM	Read code	
C70 Conv	2005	AW55-50/51SN	TCM	Clear code	
C70 Conv	2005	AW55-50/51SN	TCM	Data stream	
C70 Conv	2005	AW55-50/51SN	TCM	Actuation	
C70 Conv	2005	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70 Conv	2005	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change
C70 Conv	2005	AW55-50/51SN	TCM	Special functions	Control module adaptation
C70 Conv	2005	AW55-50/51SN	ABS	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	ABS	Read code	
C70 Conv	2005	AW55-50/51SN	ABS	Clear code	
C70 Conv	2005	AW55-50/51SN	ABS	Data stream	
C70 Conv	2005	AW55-50/51SN	ABS	Actuation	
C70 Conv	2005	AW55-50/51SN	ABS	Special functions	Checking brake light switch adjustment(*)
C70 Conv	2005	AW55-50/51SN	ABS	Special functions	Calibration
C70 Conv	2005	AW55-50/51SN	SRS	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	SRS	Read code	
C70 Conv	2005	AW55-50/51SN	SRS	Clear code	
C70 Conv	2005	AW55-50/51SN	SRS	Data stream	
C70 Conv	2005	AW55-50/51SN	Immobilizer	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	Immobilizer	Read code	
C70 Conv	2005	AW55-50/51SN	Immobilizer	Clear code	



model	year	type	system	function	subfunction
C70 Conv	2005	AW55-50/51SN	Immobilizer	Data stream	
C70 Conv	2005	AW55-50/51SN	Immobilizer	Actuation	
C70 Conv	2005	AW55-50/51SN	VGLA	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	VGLA	Read code	
C70 Conv	2005	AW55-50/51SN	VGLA	Clear code	
C70 Conv	2005	AW55-50/51SN	VGLA	Data stream	
C70 Conv	2005	AW55-50/51SN	VGLA	Actuation	
C70 Conv	2005	AW55-50/51SN	CI	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	CI	Read code	
C70 Conv	2005	AW55-50/51SN	CI	Clear code	
C70 Conv	2005	AW55-50/51SN	CI	Data stream	
C70 Conv	2005	AW55-50/51SN	CI	Actuation	
C70 Conv	2005	AW55-50/51SN	CI	Special functions	Resetting the service reminder indicator(SRI)
C70 Conv	2005	AW55-50/51SN	cab control sys	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	cab control sys	Read code	
C70 Conv	2005	AW55-50/51SN	cab control sys	Clear code	
C70 Conv	2005	AW55-50/51SN	cab control sys	Data stream	
C70 Conv	2005	AW55-50/51SN	Rollover protection	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	Rollover protection	Read code	
C70 Conv	2005	AW55-50/51SN	Rollover protection	Clear code	
C70 Conv	2005	AW55-50/51SN	Rollover protection	Data stream	
C70 Conv	2005	AW55-50/51SN	Rollover protection	Actuation	
C70 Conv	2005	AW55-50/51SN	CCM	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	CCM	Read code	
C70 Conv	2005	AW55-50/51SN	CCM	Clear code	
C70 Conv	2005	AW55-50/51SN	CCM	Data stream	
C70 Conv	2005	AW55-50/51SN	PSL	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	PSL	Read code	
C70 Conv	2005	AW55-50/51SN	PSL	Clear code	
C70 Conv	2005	AW55-50/51SN	PSL	Data stream	
C70 Conv	2005	AW55-50/51SN	PSL	Actuation	
C70 Conv	2005	AW55-50/51SN	PSR	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	PSR	Read code	
C70 Conv	2005	AW55-50/51SN	PSR	Clear code	
C70 Conv	2005	AW55-50/51SN	PSR	Data stream	
C70 Conv	2005	AW55-50/51SN	PSR	Actuation	
C70 Conv	2005	AW55-50/51SN	CPM	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	CPM	Read code	
C70 Conv	2005	AW55-50/51SN	CPM	Clear code	

model	year	type	system	function	subfunction
C70 Conv	2005	AW55-50/51SN	CPM	Data stream	
C70 Conv	2005	AW55-50/51SN	CPM	Actuation	
C70 Conv	2005	AW55-50/51SN	RTI	Sys. Info.	
C70 Conv	2005	AW55-50/51SN	RTI	Read code	
C70 Conv	2005	AW55-50/51SN	RTI	Clear code	
C70 Conv	2005	AW55-50/51SN	RTI	Data stream	
C70 Conv	2005	AW55-50/51SN	RTI	Actuation	
V50	2004	AW55-50/51SN	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V50	2004	B5244S4	ECM	Sys. Info.	
V50	2004	B5244S4	ECM	Read code	
V50	2004	B5244S4	ECM	Clear code	
V50	2004	B5244S4	ECM	Data stream	
V50	2004	B5244S4	ECM	Actuation	
V50	2004	B5244S4	ECM	Freeze frame	
V50	2004	B5244S4	ECM	Special functions	Resetting the adaptation values
V50	2004	B5244S5	ECM	Sys. Info.	
V50	2004	B5244S5	ECM	Read code	
V50	2004	B5244S5	ECM	Clear code	
V50	2004	B5244S5	ECM	Data stream	
V50	2004	B5244S5	ECM	Actuation	
V50	2004	B5244S5	ECM	Freeze frame	
V50	2004	B5244S5	ECM	Special functions	Resetting the adaptation values
V50	2004	B5244S7	ECM	Sys. Info.	
V50	2004	B5244S7	ECM	Read code	
V50	2004	B5244S7	ECM	Clear code	
V50	2004	B5244S7	ECM	Data stream	
V50	2004	B5244S7	ECM	Actuation	
V50	2004	B5244S7	ECM	Freeze frame	
V50	2004	B4204S3	ECM	Sys. Info.	
V50	2004	B4204S3	ECM	Read code	
V50	2004	B4204S3	ECM	Clear code	
V50	2004	B4204S3	ECM	Data stream	
V50	2004	B4204S3	ECM	Actuation	
V50	2004	B5254T2	ECM	Sys. Info.	
V50	2004	B5254T2	ECM	Read code	
V50	2004	B5254T2	ECM	Clear code	
V50	2004	B5254T2	ECM	Data stream	
V50	2004	B5254T2	ECM	Actuation	
V50	2004	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V50	2004	B5254T3	ECM	Sys. Info.	
V50	2004	B5254T3	ECM	Read code	
V50	2004	B5254T3	ECM	Clear code	
V50	2004	B5254T3	ECM	Data stream	
V50	2004	B5254T3	ECM	Actuation	
V50	2004	B5254T3	ECM	Freeze frame	
V50	2004	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V50	2004	B5254T7	ECM	Sys. Info.	
V50	2004	B5254T7	ECM	Read code	
V50	2004	B5254T7	ECM	Clear code	
V50	2004	B5254T7	ECM	Data stream	
V50	2004	B5254T7	ECM	Actuation	
V50	2004	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V50	2004	B5204T5	ECM	Sys. Info.	
V50	2004	B5204T5	ECM	Read code	
V50	2004	B5204T5	ECM	Clear code	
V50	2004	B5204T5	ECM	Data stream	
V50	2004	B5204T5	ECM	Actuation	
V50	2004	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50	2004	B6294T	ECM	Sys. Info.	
V50	2004	B6294T	ECM	Read code	
V50	2004	B6294T	ECM	Clear code	
V50	2004	B6294T	ECM	Data stream	
V50	2004	B6294T	ECM	Actuation	
V50	2004	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V50	2004	B4164S3	ECM	Sys. Info.	
V50	2004	B4164S3	ECM	Read code	
V50	2004	B4164S3	ECM	Clear code	
V50	2004	B4164S3	ECM	Data stream	
V50	2004	B4164S3	ECM	Actuation	
V50	2004	B4164S3	ECM	Special functions	Resetting the adaptation values

model	year	type	system	function	subfunction	
V50		2004	B5244T5	ECM	Sys. Info.	
V50		2004	B5244T5	ECM	Read code	
V50		2004	B5244T5	ECM	Clear code	
V50		2004	B5244T5	ECM	Data stream	
V50		2004	B5244T5	ECM	Actuation	
V50		2004	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2004	B4184S11	ECM	Sys. Info.	
V50		2004	B4184S11	ECM	Read code	
V50		2004	B4184S11	ECM	Clear code	
V50		2004	B4184S11	ECM	Data stream	
V50		2004	B4184S11	ECM	Actuation	
V50		2004	B4184S11	ECM	Special functions	Resetting the adaptation values
V50		2004	D5244T	Diesel Eng	Sys. Info.	
V50		2004	D5244T	Diesel Eng	Read code	
V50		2004	D5244T	Diesel Eng	Clear code	
V50		2004	D5244T	Diesel Eng	Data stream	
V50		2004	D5244T	Diesel Eng	Actuation	
V50		2004	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50		2004	D5244T4	Diesel Eng	Sys. Info.	
V50		2004	D5244T4	Diesel Eng	Read code	
V50		2004	D5244T4	Diesel Eng	Clear code	
V50		2004	D5244T4	Diesel Eng	Data stream	
V50		2004	D5244T4	Diesel Eng	Actuation	
V50		2004	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V50		2004	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2004	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V50		2004	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V50		2004	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2004	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2004	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2004	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2004	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V50		2004	D5244T5	Diesel Eng	Sys. Info.	
V50		2004	D5244T5	Diesel Eng	Read code	
V50		2004	D5244T5	Diesel Eng	Clear code	
V50		2004	D5244T5	Diesel Eng	Data stream	
V50		2004	D5244T5	Diesel Eng	Actuation	
V50		2004	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V50		2004	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2004	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V50		2004	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V50		2004	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2004	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2004	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2004	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2004	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V50		2004	D5244T8	Diesel Eng	Sys. Info.	
V50		2004	D5244T8	Diesel Eng	Read code	
V50		2004	D5244T8	Diesel Eng	Clear code	
V50		2004	D5244T8	Diesel Eng	Data stream	
V50		2004	D5244T8	Diesel Eng	Actuation	
V50		2004	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V50		2004	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2004	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V50		2004	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V50		2004	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2004	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2004	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2004	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2004	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V50		2004	D4164T	Diesel Eng	Sys. Info.	
V50		2004	D4164T	Diesel Eng	Read code	
V50		2004	D4164T	Diesel Eng	Clear code	
V50		2004	D4164T	Diesel Eng	Data stream	
V50		2004	D4164T	Diesel Eng	Actuation	
V50		2004	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50		2004	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50		2004	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V50		2004	D4204T	Diesel Eng	Sys. Info.	
V50		2004	D4204T	Diesel Eng	Read code	
V50		2004	D4204T	Diesel Eng	Clear code	
V50		2004	D4204T	Diesel Eng	Data stream	
V50		2004	D4204T	Diesel Eng	Actuation	
V50		2004	D4204T	Diesel Eng	Freeze frame	
V50		2004	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50		2004	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V50		2004	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50		2004	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve

model	year	type	system	function	subfunction
V50	2004	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V50	2004	AW55-50/51SN	TCM	Sys. Info.	
V50	2004	AW55-50/51SN	TCM	Read code	
V50	2004	AW55-50/51SN	TCM	Clear code	
V50	2004	AW55-50/51SN	TCM	Data stream	
V50	2004	AW55-50/51SN	TCM	Actuation	
V50	2004	AW55-50/51SN	TCM	Freeze frame	
V50	2004	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V50	2004	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2004	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
V50	2004	4T65AWD	TCM	Special functions	Reset adaptation to zero
V50	2004	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2004	TF-80SC	TCM	Sys. Info.	
V50	2004	TF-80SC	TCM	Read code	
V50	2004	TF-80SC	TCM	Clear code	
V50	2004	TF-80SC	TCM	Data stream	
V50	2004	TF-80SC	TCM	Actuation	
V50	2004	TF-80SC	TCM	Special functions	Reset adaptation to zero
V50	2004	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2004	TF-80SC	TCM	Special functions	Calibration of position sensor
V50	2004	AW50/51AW D	TCM	Sys. Info.	
V50	2004	AW50/51AW D	TCM	Read code	
V50	2004	AW50/51AW D	TCM	Clear code	
V50	2004	AW50/51AW D	TCM	Data stream	
V50	2004	AW50/51AW D	TCM	Actuation	
V50	2004	AW50/51AW D	TCM	Freeze frame	
V50	2004	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V50	2004	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2004	AW50/51AW D	ABS	Sys. Info.	
V50	2004	AW50/51AW D	ABS	Read code	
V50	2004	AW50/51AW D	ABS	Clear code	
V50	2004	AW50/51AW D	ABS	Data stream	
V50	2004	AW50/51AW D	ABS	Actuation	
V50	2004	AW50/51AW D	ABS	Freeze frame	
V50	2004	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V50	2004	AW50/51AW D	ABS	Special functions	Reading off the configuration
V50	2004	AW50/51AW D	ABS	Special functions	Calibration
V50	2004	AW50/51AW D	SRS	Sys. Info.	
V50	2004	AW50/51AW D	SRS	Read code	
V50	2004	AW50/51AW D	SRS	Clear code	
V50	2004	AW50/51AW D	SRS	Data stream	
V50	2004	AW50/51AW D	SRS	Freeze frame	
V50	2004	AW50/51AW D	CEM	Sys. Info.	
V50	2004	AW50/51AW D	CEM	Read code	

model	year	type	system	function	subfunction
V50	2004	AW50/51AW D	CEM	Clear code	
V50	2004	AW50/51AW D	CEM	Data stream	
V50	2004	AW50/51AW D	CEM	Actuation	
V50	2004	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V50	2004	AW50/51AW D	CEM	Special functions	Programming control module
V50	2004	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V50	2004	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V50	2004	AW50/51AW D	CEM	Special functions	Resetting crash mode
V50	2004	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V50	2004	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V50	2004	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V50	2004	AW50/51AW D	CEM	Special functions	Ignition switch key position
V50	2004	AW50/51AW D	CCM	Sys. Info.	
V50	2004	AW50/51AW D	CCM	Read code	
V50	2004	AW50/51AW D	CCM	Clear code	
V50	2004	AW50/51AW D	CCM	Data stream	
V50	2004	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
V50	2004	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V50	2004	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V50	2004	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V50	2004	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V50	2004	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
V50	2004	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V50	2004	AW50/51AW D	DDM	Sys. Info.	
V50	2004	AW50/51AW D	DDM	Read code	
V50	2004	AW50/51AW D	DDM	Clear code	
V50	2004	AW50/51AW D	DDM	Data stream	
V50	2004	AW50/51AW D	DDM	Actuation	
V50	2004	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V50	2004	AW50/51AW D	DIM	Sys. Info.	
V50	2004	AW50/51AW D	DIM	Read code	
V50	2004	AW50/51AW D	DIM	Clear code	
V50	2004	AW50/51AW D	DIM	Data stream	
V50	2004	AW50/51AW D	DIM	Actuation	
V50	2004	AW50/51AW D	DIM	Freeze frame	
V50	2004	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V50	2004	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V50	2004	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V50	2004	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)

model	year	type	system	function	subfunction
V50	2004	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V50	2004	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V50	2004	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V50	2004	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V50	2004	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V50	2004	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V50	2004	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V50	2004	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V50	2004	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V50	2004	AW50/51AW D	DIM	Special functions	Display of DSTC message
V50	2004	AW50/51AW D	DIM	Special functions	Read out programmed values
V50	2004	AW50/51AW D	PDM	Sys. Info.	
V50	2004	AW50/51AW D	PDM	Read code	
V50	2004	AW50/51AW D	PDM	Clear code	
V50	2004	AW50/51AW D	PDM	Data stream	
V50	2004	AW50/51AW D	PDM	Actuation	
V50	2004	AW50/51AW D	PDM	Special functions	Initialize the window(*)
V50	2004	AW50/51AW D	SWM	Sys. Info.	
V50	2004	AW50/51AW D	SWM	Read code	
V50	2004	AW50/51AW D	SWM	Clear code	
V50	2004	AW50/51AW D	SWM	Data stream	
V50	2004	AW50/51AW D	PSM	Sys. Info.	
V50	2004	AW50/51AW D	PSM	Read code	
V50	2004	AW50/51AW D	PSM	Clear code	
V50	2004	AW50/51AW D	PSM	Data stream	
V50	2004	AW50/51AW D	PSM	Actuation	
V50	2004	AW50/51AW D	PHM	Sys. Info.	
V50	2004	AW50/51AW D	PHM	Read code	
V50	2004	AW50/51AW D	PHM	Clear code	
V50	2004	AW50/51AW D	PHM	Data stream	
V50	2004	AW50/51AW D	PHM	Actuation	
V50	2004	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V50	2004	AW50/51AW D	AUD	Sys. Info.	
V50	2004	AW50/51AW D	AUD	Read code	
V50	2004	AW50/51AW D	AUD	Clear code	
V50	2004	AW50/51AW D	ICM	Sys. Info.	
V50	2004	AW50/51AW D	ICM	Read code	
V50	2004	AW50/51AW D	ICM	Clear code	
V50	2004	AW50/51AW D	ICM	Data stream	

model	year	type	system	function	subfunction
V50	2004	AW50/51AW D	ICM	Actuation	
V50	2004	AW50/51AW D	MMM	Sys. Info.	
V50	2004	AW50/51AW D	MMM	Read code	
V50	2004	AW50/51AW D	MMM	Clear code	
V50	2004	AW50/51AW D	MMM	Data stream	
V50	2004	AW50/51AW D	AEM	Sys. Info.	
V50	2004	AW50/51AW D	AEM	Read code	
V50	2004	AW50/51AW D	AEM	Clear code	
V50	2004	AW50/51AW D	AEM	Data stream	
V50	2004	AW50/51AW D	AEM	Actuation	
V50	2004	AW50/51AW D	EPS	Sys. Info.	
V50	2004	AW50/51AW D	EPS	Read code	
V50	2004	AW50/51AW D	EPS	Clear code	
V50	2004	AW50/51AW D	EPS	Data stream	
V50	2004	AW50/51AW D	AFM	Sys. Info.	
V50	2004	AW50/51AW D	AFM	Read code	
V50	2004	AW50/51AW D	AFM	Clear code	
V50	2004	AW50/51AW D	AFM	Data stream	
V50	2004	AW50/51AW D	AFM	Actuation	
V50	2004	AW50/51AW D	MPM	Sys. Info.	
V50	2004	AW50/51AW D	MPM	Read code	
V50	2004	AW50/51AW D	MPM	Clear code	
V50	2004	AW50/51AW D	MPM	Data stream	
V50	2004	AW50/51AW D	MPM	Actuation	
V50	2004	AW50/51AW D	CPM	Sys. Info.	
V50	2004	AW50/51AW D	CPM	Read code	
V50	2004	AW50/51AW D	CPM	Clear code	
V50	2004	AW50/51AW D	CPM	Data stream	
V50	2004	AW50/51AW D	CPM	Actuation	
V50	2005	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V50	2005	B5244S4	ECM	Sys. Info.	
V50	2005	B5244S4	ECM	Read code	
V50	2005	B5244S4	ECM	Clear code	
V50	2005	B5244S4	ECM	Data stream	
V50	2005	B5244S4	ECM	Actuation	
V50	2005	B5244S4	ECM	Special functions	Resetting the adaptation values
V50	2005	B5244S5	ECM	Sys. Info.	
V50	2005	B5244S5	ECM	Read code	
V50	2005	B5244S5	ECM	Clear code	
V50	2005	B5244S5	ECM	Data stream	
V50	2005	B5244S5	ECM	Actuation	
V50	2005	B5244S5	ECM	Special functions	Resetting the adaptation values
V50	2005	B5244S7	ECM	Sys. Info.	
V50	2005	B5244S7	ECM	Read code	
V50	2005	B5244S7	ECM	Clear code	
V50	2005	B5244S7	ECM	Data stream	
V50	2005	B5244S7	ECM	Actuation	
V50	2005	B4204S3	ECM	Sys. Info.	

model	year	type	system	function	subfunction	
V50		2005	B4204S3	ECM	Read code	
V50		2005	B4204S3	ECM	Clear code	
V50		2005	B4204S3	ECM	Data stream	
V50		2005	B4204S3	ECM	Actuation	
V50		2005	B5254T2	ECM	Sys. Info.	
V50		2005	B5254T2	ECM	Read code	
V50		2005	B5254T2	ECM	Clear code	
V50		2005	B5254T2	ECM	Data stream	
V50		2005	B5254T2	ECM	Actuation	
V50		2005	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2005	B5254T3	ECM	Sys. Info.	
V50		2005	B5254T3	ECM	Read code	
V50		2005	B5254T3	ECM	Clear code	
V50		2005	B5254T3	ECM	Data stream	
V50		2005	B5254T3	ECM	Actuation	
V50		2005	B5254T3	ECM	Freeze frame	
V50		2005	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2005	B5254T7	ECM	Sys. Info.	
V50		2005	B5254T7	ECM	Read code	
V50		2005	B5254T7	ECM	Clear code	
V50		2005	B5254T7	ECM	Data stream	
V50		2005	B5254T7	ECM	Actuation	
V50		2005	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2005	B5204T5	ECM	Sys. Info.	
V50		2005	B5204T5	ECM	Read code	
V50		2005	B5204T5	ECM	Clear code	
V50		2005	B5204T5	ECM	Data stream	
V50		2005	B5204T5	ECM	Actuation	
V50		2005	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2005	B6294T	ECM	Sys. Info.	
V50		2005	B6294T	ECM	Read code	
V50		2005	B6294T	ECM	Clear code	
V50		2005	B6294T	ECM	Data stream	
V50		2005	B6294T	ECM	Actuation	
V50		2005	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2005	B4164S3	ECM	Sys. Info.	
V50		2005	B4164S3	ECM	Read code	
V50		2005	B4164S3	ECM	Clear code	
V50		2005	B4164S3	ECM	Data stream	
V50		2005	B4164S3	ECM	Actuation	
V50		2005	B4164S3	ECM	Freeze frame	
V50		2005	B4164S3	ECM	Special functions	Resetting the adaptation values
V50		2005	B5244T5	ECM	Sys. Info.	
V50		2005	B5244T5	ECM	Read code	
V50		2005	B5244T5	ECM	Clear code	
V50		2005	B5244T5	ECM	Data stream	
V50		2005	B5244T5	ECM	Actuation	
V50		2005	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2005	B4184S11	ECM	Sys. Info.	
V50		2005	B4184S11	ECM	Read code	
V50		2005	B4184S11	ECM	Clear code	
V50		2005	B4184S11	ECM	Data stream	
V50		2005	B4184S11	ECM	Actuation	
V50		2005	B4184S11	ECM	Freeze frame	
V50		2005	B4184S11	ECM	Special functions	Resetting the adaptation values
V50		2005	D5244T	Diesel Eng	Sys. Info.	
V50		2005	D5244T	Diesel Eng	Read code	
V50		2005	D5244T	Diesel Eng	Clear code	
V50		2005	D5244T	Diesel Eng	Data stream	
V50		2005	D5244T	Diesel Eng	Actuation	
V50		2005	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50		2005	D5244T4	Diesel Eng	Sys. Info.	
V50		2005	D5244T4	Diesel Eng	Read code	
V50		2005	D5244T4	Diesel Eng	Clear code	
V50		2005	D5244T4	Diesel Eng	Data stream	
V50		2005	D5244T4	Diesel Eng	Actuation	
V50		2005	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V50		2005	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2005	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V50		2005	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V50		2005	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2005	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2005	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2005	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2005	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V50		2005	D5244T5	Diesel Eng	Sys. Info.	
V50		2005	D5244T5	Diesel Eng	Read code	
V50		2005	D5244T5	Diesel Eng	Clear code	



model	year	type	system	function	subfunction	
V50		2005	D5244T5	Diesel Eng	Data stream	
V50		2005	D5244T5	Diesel Eng	Actuation	
V50		2005	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V50		2005	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2005	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V50		2005	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V50		2005	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2005	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2005	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2005	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2005	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V50		2005	D5244T8	Diesel Eng	Sys. Info.	
V50		2005	D5244T8	Diesel Eng	Read code	
V50		2005	D5244T8	Diesel Eng	Clear code	
V50		2005	D5244T8	Diesel Eng	Data stream	
V50		2005	D5244T8	Diesel Eng	Actuation	
V50		2005	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V50		2005	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2005	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V50		2005	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V50		2005	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2005	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2005	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2005	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2005	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V50		2005	D4164T	Diesel Eng	Sys. Info.	
V50		2005	D4164T	Diesel Eng	Read code	
V50		2005	D4164T	Diesel Eng	Clear code	
V50		2005	D4164T	Diesel Eng	Data stream	
V50		2005	D4164T	Diesel Eng	Actuation	
V50		2005	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50		2005	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50		2005	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V50		2005	D4204T	Diesel Eng	Sys. Info.	
V50		2005	D4204T	Diesel Eng	Read code	
V50		2005	D4204T	Diesel Eng	Clear code	
V50		2005	D4204T	Diesel Eng	Data stream	
V50		2005	D4204T	Diesel Eng	Actuation	
V50		2005	D4204T	Diesel Eng	Freeze frame	
V50		2005	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50		2005	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V50		2005	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50		2005	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50		2005	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V50		2005	AW55-50/51SN	TCM	Sys. Info.	
V50		2005	AW55-50/51SN	TCM	Read code	
V50		2005	AW55-50/51SN	TCM	Clear code	
V50		2005	AW55-50/51SN	TCM	Data stream	
V50		2005	AW55-50/51SN	TCM	Actuation	
V50		2005	AW55-50/51SN	TCM	Freeze frame	
V50		2005	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V50		2005	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50		2005	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
V50		2005	4T65AWD	TCM	Special functions	Reset adaptation to zero
V50		2005	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50		2005	TF-80SC	TCM	Sys. Info.	
V50		2005	TF-80SC	TCM	Read code	
V50		2005	TF-80SC	TCM	Clear code	
V50		2005	TF-80SC	TCM	Data stream	
V50		2005	TF-80SC	TCM	Actuation	
V50		2005	TF-80SC	TCM	Special functions	Reset adaptation to zero
V50		2005	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50		2005	TF-80SC	TCM	Special functions	Calibration of position sensor
V50		2005	AW50/51AWD	TCM	Sys. Info.	
V50		2005	AW50/51AWD	TCM	Read code	
V50		2005	AW50/51AWD	TCM	Clear code	

model	year	type	system	function	subfunction
V50	2005	AW50/51AW D	TCM	Data stream	
V50	2005	AW50/51AW D	TCM	Actuation	
V50	2005	AW50/51AW D	TCM	Freeze frame	
V50	2005	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V50	2005	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2005	AW50/51AW D	ABS	Sys. Info.	
V50	2005	AW50/51AW D	ABS	Read code	
V50	2005	AW50/51AW D	ABS	Clear code	
V50	2005	AW50/51AW D	ABS	Data stream	
V50	2005	AW50/51AW D	ABS	Actuation	
V50	2005	AW50/51AW D	ABS	Freeze frame	
V50	2005	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V50	2005	AW50/51AW D	ABS	Special functions	Reading off the configuration
V50	2005	AW50/51AW D	ABS	Special functions	Calibration
V50	2005	AW50/51AW D	SRS	Sys. Info.	
V50	2005	AW50/51AW D	SRS	Read code	
V50	2005	AW50/51AW D	SRS	Clear code	
V50	2005	AW50/51AW D	SRS	Data stream	
V50	2005	AW50/51AW D	SRS	Freeze frame	
V50	2005	AW50/51AW D	CEM	Sys. Info.	
V50	2005	AW50/51AW D	CEM	Read code	
V50	2005	AW50/51AW D	CEM	Clear code	
V50	2005	AW50/51AW D	CEM	Data stream	
V50	2005	AW50/51AW D	CEM	Actuation	
V50	2005	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V50	2005	AW50/51AW D	CEM	Special functions	Programming control module
V50	2005	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V50	2005	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V50	2005	AW50/51AW D	CEM	Special functions	Resetting crash mode
V50	2005	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V50	2005	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V50	2005	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V50	2005	AW50/51AW D	CEM	Special functions	Ignition switch key position
V50	2005	AW50/51AW D	CCM	Sys. Info.	
V50	2005	AW50/51AW D	CCM	Read code	
V50	2005	AW50/51AW D	CCM	Clear code	
V50	2005	AW50/51AW D	CCM	Data stream	
V50	2005	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
V50	2005	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)

model	year	type	system	function	subfunction
V50	2005	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V50	2005	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V50	2005	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V50	2005	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V50	2005	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V50	2005	AW50/51AW D	DDM	Sys. Info.	
V50	2005	AW50/51AW D	DDM	Read code	
V50	2005	AW50/51AW D	DDM	Clear code	
V50	2005	AW50/51AW D	DDM	Data stream	
V50	2005	AW50/51AW D	DDM	Actuation	
V50	2005	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V50	2005	AW50/51AW D	DIM	Sys. Info.	
V50	2005	AW50/51AW D	DIM	Read code	
V50	2005	AW50/51AW D	DIM	Clear code	
V50	2005	AW50/51AW D	DIM	Data stream	
V50	2005	AW50/51AW D	DIM	Actuation	
V50	2005	AW50/51AW D	DIM	Freeze frame	
V50	2005	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V50	2005	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V50	2005	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V50	2005	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V50	2005	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V50	2005	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V50	2005	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V50	2005	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V50	2005	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V50	2005	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V50	2005	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V50	2005	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V50	2005	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V50	2005	AW50/51AW D	DIM	Special functions	Display of DSTC message
V50	2005	AW50/51AW D	DIM	Special functions	Read out programmed values
V50	2005	AW50/51AW D	PDM	Sys. Info.	
V50	2005	AW50/51AW D	PDM	Read code	
V50	2005	AW50/51AW D	PDM	Clear code	
V50	2005	AW50/51AW D	PDM	Data stream	
V50	2005	AW50/51AW D	PDM	Actuation	
V50	2005	AW50/51AW D	PDM	Special functions	Initialize the window(*)
V50	2005	AW50/51AW D	SWM	Sys. Info.	

model	year	type	system	function	subfunction
V50	2005	AW50/51AW D	SWM	Read code	
V50	2005	AW50/51AW D	SWM	Clear code	
V50	2005	AW50/51AW D	SWM	Data stream	
V50	2005	AW50/51AW D	PSM	Sys. Info.	
V50	2005	AW50/51AW D	PSM	Read code	
V50	2005	AW50/51AW D	PSM	Clear code	
V50	2005	AW50/51AW D	PSM	Data stream	
V50	2005	AW50/51AW D	PSM	Actuation	
V50	2005	AW50/51AW D	PHM	Sys. Info.	
V50	2005	AW50/51AW D	PHM	Read code	
V50	2005	AW50/51AW D	PHM	Clear code	
V50	2005	AW50/51AW D	PHM	Data stream	
V50	2005	AW50/51AW D	PHM	Actuation	
V50	2005	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V50	2005	AW50/51AW D	AUD	Sys. Info.	
V50	2005	AW50/51AW D	AUD	Read code	
V50	2005	AW50/51AW D	AUD	Clear code	
V50	2005	AW50/51AW D	DEM	Sys. Info.	
V50	2005	AW50/51AW D	DEM	Read code	
V50	2005	AW50/51AW D	DEM	Clear code	
V50	2005	AW50/51AW D	DEM	Data stream	
V50	2005	AW50/51AW D	ICM	Sys. Info.	
V50	2005	AW50/51AW D	ICM	Read code	
V50	2005	AW50/51AW D	ICM	Clear code	
V50	2005	AW50/51AW D	ICM	Data stream	
V50	2005	AW50/51AW D	ICM	Actuation	
V50	2005	AW50/51AW D	MMM	Sys. Info.	
V50	2005	AW50/51AW D	MMM	Read code	
V50	2005	AW50/51AW D	MMM	Clear code	
V50	2005	AW50/51AW D	MMM	Data stream	
V50	2005	AW50/51AW D	AEM	Sys. Info.	
V50	2005	AW50/51AW D	AEM	Read code	
V50	2005	AW50/51AW D	AEM	Clear code	
V50	2005	AW50/51AW D	AEM	Data stream	
V50	2005	AW50/51AW D	AEM	Actuation	
V50	2005	AW50/51AW D	ADM	Sys. Info.	
V50	2005	AW50/51AW D	ADM	Read code	
V50	2005	AW50/51AW D	ADM	Clear code	
V50	2005	AW50/51AW D	ADM	Data stream	

model	year	type	system	function	subfunction
V50	2005	AW50/51AW D	EPS	Sys. Info.	
V50	2005	AW50/51AW D	EPS	Read code	
V50	2005	AW50/51AW D	EPS	Clear code	
V50	2005	AW50/51AW D	EPS	Data stream	
V50	2005	AW50/51AW D	PAM	Sys. Info.	
V50	2005	AW50/51AW D	PAM	Read code	
V50	2005	AW50/51AW D	PAM	Clear code	
V50	2005	AW50/51AW D	PAM	Data stream	
V50	2005	AW50/51AW D	IAM	Sys. Info.	
V50	2005	AW50/51AW D	IAM	Read code	
V50	2005	AW50/51AW D	IAM	Clear code	
V50	2005	AW50/51AW D	IAM	Data stream	
V50	2005	AW50/51AW D	IAM	Actuation	
V50	2005	AW50/51AW D	AFM	Sys. Info.	
V50	2005	AW50/51AW D	AFM	Read code	
V50	2005	AW50/51AW D	AFM	Clear code	
V50	2005	AW50/51AW D	AFM	Data stream	
V50	2005	AW50/51AW D	AFM	Actuation	
V50	2005	AW50/51AW D	MPM	Sys. Info.	
V50	2005	AW50/51AW D	MPM	Read code	
V50	2005	AW50/51AW D	MPM	Clear code	
V50	2005	AW50/51AW D	MPM	Data stream	
V50	2005	AW50/51AW D	MPM	Actuation	
V50	2005	AW50/51AW D	CPM	Sys. Info.	
V50	2005	AW50/51AW D	CPM	Read code	
V50	2005	AW50/51AW D	CPM	Clear code	
V50	2005	AW50/51AW D	CPM	Data stream	
V50	2005	AW50/51AW D	CPM	Actuation	
V50	2006	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V50	2006	B5244S4	ECM	Sys. Info.	
V50	2006	B5244S4	ECM	Read code	
V50	2006	B5244S4	ECM	Clear code	
V50	2006	B5244S4	ECM	Data stream	
V50	2006	B5244S4	ECM	Actuation	
V50	2006	B5244S4	ECM	Special functions	Resetting the adaptation values
V50	2006	B5244S4	ECM	Special functions	Testing the fuel pump (FP)
V50	2006	B5244S5	ECM	Sys. Info.	
V50	2006	B5244S5	ECM	Read code	
V50	2006	B5244S5	ECM	Clear code	
V50	2006	B5244S5	ECM	Data stream	
V50	2006	B5244S5	ECM	Actuation	
V50	2006	B5244S5	ECM	Special functions	Resetting the adaptation values
V50	2006	B5244S7	ECM	Sys. Info.	
V50	2006	B5244S7	ECM	Read code	
V50	2006	B5244S7	ECM	Clear code	
V50	2006	B5244S7	ECM	Data stream	
V50	2006	B5244S7	ECM	Actuation	
V50	2006	B4204S3	ECM	Sys. Info.	
V50	2006	B4204S3	ECM	Read code	

model	year	type	system	function	subfunction	
V50		2006	B4204S3	ECM	Clear code	
V50		2006	B4204S3	ECM	Data stream	
V50		2006	B4204S3	ECM	Actuation	
V50		2006	B5254T2	ECM	Sys. Info.	
V50		2006	B5254T2	ECM	Read code	
V50		2006	B5254T2	ECM	Clear code	
V50		2006	B5254T2	ECM	Data stream	
V50		2006	B5254T2	ECM	Actuation	
V50		2006	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2006	B5254T3	ECM	Sys. Info.	
V50		2006	B5254T3	ECM	Read code	
V50		2006	B5254T3	ECM	Clear code	
V50		2006	B5254T3	ECM	Data stream	
V50		2006	B5254T3	ECM	Actuation	
V50		2006	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2006	B5254T7	ECM	Sys. Info.	
V50		2006	B5254T7	ECM	Read code	
V50		2006	B5254T7	ECM	Clear code	
V50		2006	B5254T7	ECM	Data stream	
V50		2006	B5254T7	ECM	Actuation	
V50		2006	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2006	B5204T5	ECM	Sys. Info.	
V50		2006	B5204T5	ECM	Read code	
V50		2006	B5204T5	ECM	Clear code	
V50		2006	B5204T5	ECM	Data stream	
V50		2006	B5204T5	ECM	Actuation	
V50		2006	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2006	B6294T	ECM	Sys. Info.	
V50		2006	B6294T	ECM	Read code	
V50		2006	B6294T	ECM	Clear code	
V50		2006	B6294T	ECM	Data stream	
V50		2006	B6294T	ECM	Actuation	
V50		2006	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2006	B4164S3	ECM	Sys. Info.	
V50		2006	B4164S3	ECM	Read code	
V50		2006	B4164S3	ECM	Clear code	
V50		2006	B4164S3	ECM	Data stream	
V50		2006	B4164S3	ECM	Actuation	
V50		2006	B4164S3	ECM	Freeze frame	
V50		2006	B4164S3	ECM	Special functions	Resetting the adaptation values
V50		2006	B5244T5	ECM	Sys. Info.	
V50		2006	B5244T5	ECM	Read code	
V50		2006	B5244T5	ECM	Clear code	
V50		2006	B5244T5	ECM	Data stream	
V50		2006	B5244T5	ECM	Actuation	
V50		2006	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2006	B4184S11	ECM	Sys. Info.	
V50		2006	B4184S11	ECM	Read code	
V50		2006	B4184S11	ECM	Clear code	
V50		2006	B4184S11	ECM	Data stream	
V50		2006	B4184S11	ECM	Actuation	
V50		2006	B4184S11	ECM	Freeze frame	
V50		2006	B4184S11	ECM	Special functions	Resetting the adaptation values
V50		2006	D5244T	Diesel Eng	Sys. Info.	
V50		2006	D5244T	Diesel Eng	Read code	
V50		2006	D5244T	Diesel Eng	Clear code	
V50		2006	D5244T	Diesel Eng	Data stream	
V50		2006	D5244T	Diesel Eng	Actuation	
V50		2006	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50		2006	D5244T4	Diesel Eng	Sys. Info.	
V50		2006	D5244T4	Diesel Eng	Read code	
V50		2006	D5244T4	Diesel Eng	Clear code	
V50		2006	D5244T4	Diesel Eng	Data stream	
V50		2006	D5244T4	Diesel Eng	Actuation	
V50		2006	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V50		2006	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2006	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V50		2006	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V50		2006	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2006	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2006	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2006	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2006	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V50		2006	D5244T5	Diesel Eng	Sys. Info.	
V50		2006	D5244T5	Diesel Eng	Read code	
V50		2006	D5244T5	Diesel Eng	Clear code	
V50		2006	D5244T5	Diesel Eng	Data stream	
V50		2006	D5244T5	Diesel Eng	Actuation	

model	year	type	system	function	subfunction
V50	2006	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V50	2006	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50	2006	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V50	2006	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V50	2006	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50	2006	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50	2006	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V50	2006	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50	2006	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V50	2006	D5244T8	Diesel Eng	Sys. Info.	
V50	2006	D5244T8	Diesel Eng	Read code	
V50	2006	D5244T8	Diesel Eng	Clear code	
V50	2006	D5244T8	Diesel Eng	Data stream	
V50	2006	D5244T8	Diesel Eng	Actuation	
V50	2006	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V50	2006	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50	2006	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V50	2006	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V50	2006	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50	2006	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50	2006	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V50	2006	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50	2006	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V50	2006	D4164T	Diesel Eng	Sys. Info.	
V50	2006	D4164T	Diesel Eng	Read code	
V50	2006	D4164T	Diesel Eng	Clear code	
V50	2006	D4164T	Diesel Eng	Data stream	
V50	2006	D4164T	Diesel Eng	Actuation	
V50	2006	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50	2006	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50	2006	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V50	2006	D4204T	Diesel Eng	Sys. Info.	
V50	2006	D4204T	Diesel Eng	Read code	
V50	2006	D4204T	Diesel Eng	Clear code	
V50	2006	D4204T	Diesel Eng	Data stream	
V50	2006	D4204T	Diesel Eng	Actuation	
V50	2006	D4204T	Diesel Eng	Freeze frame	
V50	2006	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50	2006	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V50	2006	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50	2006	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50	2006	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V50	2006	AW55-50/51SN	TCM	Sys. Info.	
V50	2006	AW55-50/51SN	TCM	Read code	
V50	2006	AW55-50/51SN	TCM	Clear code	
V50	2006	AW55-50/51SN	TCM	Data stream	
V50	2006	AW55-50/51SN	TCM	Actuation	
V50	2006	AW55-50/51SN	TCM	Freeze frame	
V50	2006	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V50	2006	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2006	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
V50	2006	AW55-50/51SN	TCM	Special functions	Control module adaptation
V50	2006	4T65AWD	TCM	Special functions	Reset adaptation to zero
V50	2006	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2006	TF-80SC	TCM	Sys. Info.	
V50	2006	TF-80SC	TCM	Read code	
V50	2006	TF-80SC	TCM	Clear code	
V50	2006	TF-80SC	TCM	Data stream	
V50	2006	TF-80SC	TCM	Actuation	
V50	2006	TF-80SC	TCM	Special functions	Reset adaptation to zero
V50	2006	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2006	TF-80SC	TCM	Special functions	Calibration of position sensor
V50	2006	AW50/51AWD	TCM	Sys. Info.	
V50	2006	AW50/51AWD	TCM	Read code	
V50	2006	AW50/51AWD	TCM	Clear code	

model	year	type	system	function	subfunction
V50	2006	AW50/51AW D	TCM	Data stream	
V50	2006	AW50/51AW D	TCM	Actuation	
V50	2006	AW50/51AW D	TCM	Freeze frame	
V50	2006	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V50	2006	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2006	AW50/51AW D	ABS	Sys. Info.	
V50	2006	AW50/51AW D	ABS	Read code	
V50	2006	AW50/51AW D	ABS	Clear code	
V50	2006	AW50/51AW D	ABS	Data stream	
V50	2006	AW50/51AW D	ABS	Actuation	
V50	2006	AW50/51AW D	ABS	Freeze frame	
V50	2006	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V50	2006	AW50/51AW D	ABS	Special functions	Reading off the configuration
V50	2006	AW50/51AW D	ABS	Special functions	Calibration
V50	2006	AW50/51AW D	SRS	Sys. Info.	
V50	2006	AW50/51AW D	SRS	Read code	
V50	2006	AW50/51AW D	SRS	Clear code	
V50	2006	AW50/51AW D	SRS	Data stream	
V50	2006	AW50/51AW D	SRS	Freeze frame	
V50	2006	AW50/51AW D	CEM	Sys. Info.	
V50	2006	AW50/51AW D	CEM	Read code	
V50	2006	AW50/51AW D	CEM	Clear code	
V50	2006	AW50/51AW D	CEM	Data stream	
V50	2006	AW50/51AW D	CEM	Actuation	
V50	2006	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V50	2006	AW50/51AW D	CEM	Special functions	Programming control module
V50	2006	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V50	2006	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V50	2006	AW50/51AW D	CEM	Special functions	Resetting crash mode
V50	2006	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V50	2006	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V50	2006	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V50	2006	AW50/51AW D	CEM	Special functions	Ignition switch key position
V50	2006	AW50/51AW D	CCM	Sys. Info.	
V50	2006	AW50/51AW D	CCM	Read code	
V50	2006	AW50/51AW D	CCM	Clear code	
V50	2006	AW50/51AW D	CCM	Data stream	
V50	2006	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
V50	2006	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)



model	year	type	system	function	subfunction
V50	2006	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V50	2006	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V50	2006	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V50	2006	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V50	2006	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V50	2006	AW50/51AW D	DDM	Sys. Info.	
V50	2006	AW50/51AW D	DDM	Read code	
V50	2006	AW50/51AW D	DDM	Clear code	
V50	2006	AW50/51AW D	DDM	Data stream	
V50	2006	AW50/51AW D	DDM	Actuation	
V50	2006	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V50	2006	AW50/51AW D	DIM	Sys. Info.	
V50	2006	AW50/51AW D	DIM	Read code	
V50	2006	AW50/51AW D	DIM	Clear code	
V50	2006	AW50/51AW D	DIM	Data stream	
V50	2006	AW50/51AW D	DIM	Actuation	
V50	2006	AW50/51AW D	DIM	Freeze frame	
V50	2006	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V50	2006	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V50	2006	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V50	2006	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V50	2006	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V50	2006	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V50	2006	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V50	2006	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V50	2006	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V50	2006	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V50	2006	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V50	2006	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V50	2006	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V50	2006	AW50/51AW D	DIM	Special functions	Display of DSTC message
V50	2006	AW50/51AW D	DIM	Special functions	Read out programmed values
V50	2006	AW50/51AW D	PDM	Sys. Info.	
V50	2006	AW50/51AW D	PDM	Read code	
V50	2006	AW50/51AW D	PDM	Clear code	
V50	2006	AW50/51AW D	PDM	Data stream	
V50	2006	AW50/51AW D	PDM	Actuation	
V50	2006	AW50/51AW D	PDM	Special functions	Initialize the window(*)
V50	2006	AW50/51AW D	SWM	Sys. Info.	

model	year	type	system	function	subfunction
V50	2006	AW50/51AW D	SWM	Read code	
V50	2006	AW50/51AW D	SWM	Clear code	
V50	2006	AW50/51AW D	SWM	Data stream	
V50	2006	AW50/51AW D	PSM	Sys. Info.	
V50	2006	AW50/51AW D	PSM	Read code	
V50	2006	AW50/51AW D	PSM	Clear code	
V50	2006	AW50/51AW D	PSM	Data stream	
V50	2006	AW50/51AW D	PSM	Actuation	
V50	2006	AW50/51AW D	PHM	Sys. Info.	
V50	2006	AW50/51AW D	PHM	Read code	
V50	2006	AW50/51AW D	PHM	Clear code	
V50	2006	AW50/51AW D	PHM	Data stream	
V50	2006	AW50/51AW D	PHM	Actuation	
V50	2006	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V50	2006	AW50/51AW D	AUD	Sys. Info.	
V50	2006	AW50/51AW D	AUD	Read code	
V50	2006	AW50/51AW D	AUD	Clear code	
V50	2006	AW50/51AW D	DEM	Sys. Info.	
V50	2006	AW50/51AW D	DEM	Read code	
V50	2006	AW50/51AW D	DEM	Clear code	
V50	2006	AW50/51AW D	DEM	Data stream	
V50	2006	AW50/51AW D	ICM	Sys. Info.	
V50	2006	AW50/51AW D	ICM	Read code	
V50	2006	AW50/51AW D	ICM	Clear code	
V50	2006	AW50/51AW D	ICM	Data stream	
V50	2006	AW50/51AW D	ICM	Actuation	
V50	2006	AW50/51AW D	ICM	Special functions	Programming the infotainment control module(ICM)
V50	2006	AW50/51AW D	MMM	Sys. Info.	
V50	2006	AW50/51AW D	MMM	Read code	
V50	2006	AW50/51AW D	MMM	Clear code	
V50	2006	AW50/51AW D	MMM	Data stream	
V50	2006	AW50/51AW D	AEM	Sys. Info.	
V50	2006	AW50/51AW D	AEM	Read code	
V50	2006	AW50/51AW D	AEM	Clear code	
V50	2006	AW50/51AW D	AEM	Data stream	
V50	2006	AW50/51AW D	AEM	Actuation	
V50	2006	AW50/51AW D	ADM	Sys. Info.	
V50	2006	AW50/51AW D	ADM	Read code	
V50	2006	AW50/51AW D	ADM	Clear code	

model	year	type	system	function	subfunction
V50	2006	AW50/51AW D	ADM	Data stream	
V50	2006	AW50/51AW D	EPS	Sys. Info.	
V50	2006	AW50/51AW D	EPS	Read code	
V50	2006	AW50/51AW D	EPS	Clear code	
V50	2006	AW50/51AW D	EPS	Data stream	
V50	2006	AW50/51AW D	PAM	Sys. Info.	
V50	2006	AW50/51AW D	PAM	Read code	
V50	2006	AW50/51AW D	PAM	Clear code	
V50	2006	AW50/51AW D	PAM	Data stream	
V50	2006	AW50/51AW D	IAM	Sys. Info.	
V50	2006	AW50/51AW D	IAM	Read code	
V50	2006	AW50/51AW D	IAM	Clear code	
V50	2006	AW50/51AW D	IAM	Data stream	
V50	2006	AW50/51AW D	IAM	Actuation	
V50	2006	AW50/51AW D	AFM	Sys. Info.	
V50	2006	AW50/51AW D	AFM	Read code	
V50	2006	AW50/51AW D	AFM	Clear code	
V50	2006	AW50/51AW D	AFM	Data stream	
V50	2006	AW50/51AW D	AFM	Actuation	
V50	2006	AW50/51AW D	MPM	Sys. Info.	
V50	2006	AW50/51AW D	MPM	Read code	
V50	2006	AW50/51AW D	MPM	Clear code	
V50	2006	AW50/51AW D	MPM	Data stream	
V50	2006	AW50/51AW D	MPM	Actuation	
V50	2006	AW50/51AW D	CPM	Sys. Info.	
V50	2006	AW50/51AW D	CPM	Read code	
V50	2006	AW50/51AW D	CPM	Clear code	
V50	2006	AW50/51AW D	CPM	Data stream	
V50	2006	AW50/51AW D	CPM	Actuation	
V50	2007	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V50	2007	B5244S4	ECM	Sys. Info.	
V50	2007	B5244S4	ECM	Read code	
V50	2007	B5244S4	ECM	Clear code	
V50	2007	B5244S4	ECM	Data stream	
V50	2007	B5244S4	ECM	Actuation	
V50	2007	B5244S4	ECM	Special functions	Resetting the adaptation values
V50	2007	B5244S5	ECM	Sys. Info.	
V50	2007	B5244S5	ECM	Read code	
V50	2007	B5244S5	ECM	Clear code	
V50	2007	B5244S5	ECM	Data stream	
V50	2007	B5244S5	ECM	Actuation	
V50	2007	B5244S5	ECM	Special functions	Resetting the adaptation values
V50	2007	B5244S7	ECM	Sys. Info.	
V50	2007	B5244S7	ECM	Read code	
V50	2007	B5244S7	ECM	Clear code	
V50	2007	B5244S7	ECM	Data stream	
V50	2007	B5244S7	ECM	Actuation	
V50	2007	B4204S3	ECM	Sys. Info.	

model	year	type	system	function	subfunction	
V50		2007	B4204S3	ECM	Read code	
V50		2007	B4204S3	ECM	Clear code	
V50		2007	B4204S3	ECM	Data stream	
V50		2007	B4204S3	ECM	Actuation	
V50		2007	B4204S3	ECM	Freeze frame	
V50		2007	B5254T2	ECM	Sys. Info.	
V50		2007	B5254T2	ECM	Read code	
V50		2007	B5254T2	ECM	Clear code	
V50		2007	B5254T2	ECM	Data stream	
V50		2007	B5254T2	ECM	Actuation	
V50		2007	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2007	B5254T3	ECM	Sys. Info.	
V50		2007	B5254T3	ECM	Read code	
V50		2007	B5254T3	ECM	Clear code	
V50		2007	B5254T3	ECM	Data stream	
V50		2007	B5254T3	ECM	Actuation	
V50		2007	B5254T3	ECM	Freeze frame	
V50		2007	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2007	B5254T7	ECM	Sys. Info.	
V50		2007	B5254T7	ECM	Read code	
V50		2007	B5254T7	ECM	Clear code	
V50		2007	B5254T7	ECM	Data stream	
V50		2007	B5254T7	ECM	Actuation	
V50		2007	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2007	B5204T5	ECM	Sys. Info.	
V50		2007	B5204T5	ECM	Read code	
V50		2007	B5204T5	ECM	Clear code	
V50		2007	B5204T5	ECM	Data stream	
V50		2007	B5204T5	ECM	Actuation	
V50		2007	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2007	B6294T	ECM	Sys. Info.	
V50		2007	B6294T	ECM	Read code	
V50		2007	B6294T	ECM	Clear code	
V50		2007	B6294T	ECM	Data stream	
V50		2007	B6294T	ECM	Actuation	
V50		2007	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2007	B4164S3	ECM	Sys. Info.	
V50		2007	B4164S3	ECM	Read code	
V50		2007	B4164S3	ECM	Clear code	
V50		2007	B4164S3	ECM	Data stream	
V50		2007	B4164S3	ECM	Actuation	
V50		2007	B4164S3	ECM	Freeze frame	
V50		2007	B4164S3	ECM	Special functions	Resetting the adaptation values
V50		2007	B5244T5	ECM	Sys. Info.	
V50		2007	B5244T5	ECM	Read code	
V50		2007	B5244T5	ECM	Clear code	
V50		2007	B5244T5	ECM	Data stream	
V50		2007	B5244T5	ECM	Actuation	
V50		2007	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2007	B4184S11	ECM	Sys. Info.	
V50		2007	B4184S11	ECM	Read code	
V50		2007	B4184S11	ECM	Clear code	
V50		2007	B4184S11	ECM	Data stream	
V50		2007	B4184S11	ECM	Actuation	
V50		2007	B4184S11	ECM	Freeze frame	
V50		2007	B4184S11	ECM	Special functions	Resetting the adaptation values
V50		2007	D5244T	Diesel Eng	Sys. Info.	
V50		2007	D5244T	Diesel Eng	Read code	
V50		2007	D5244T	Diesel Eng	Clear code	
V50		2007	D5244T	Diesel Eng	Data stream	
V50		2007	D5244T	Diesel Eng	Actuation	
V50		2007	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50		2007	D5244T4	Diesel Eng	Sys. Info.	
V50		2007	D5244T4	Diesel Eng	Read code	
V50		2007	D5244T4	Diesel Eng	Clear code	
V50		2007	D5244T4	Diesel Eng	Data stream	
V50		2007	D5244T4	Diesel Eng	Actuation	
V50		2007	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V50		2007	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2007	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V50		2007	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V50		2007	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2007	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2007	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2007	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2007	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V50		2007	D5244T5	Diesel Eng	Sys. Info.	
V50		2007	D5244T5	Diesel Eng	Read code	

model	year	type	system	function	subfunction	
V50		2007	D5244T5	Diesel Eng	Clear code	
V50		2007	D5244T5	Diesel Eng	Data stream	
V50		2007	D5244T5	Diesel Eng	Actuation	
V50		2007	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V50		2007	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2007	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V50		2007	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V50		2007	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2007	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2007	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2007	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2007	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V50		2007	D5244T8	Diesel Eng	Sys. Info.	
V50		2007	D5244T8	Diesel Eng	Read code	
V50		2007	D5244T8	Diesel Eng	Clear code	
V50		2007	D5244T8	Diesel Eng	Data stream	
V50		2007	D5244T8	Diesel Eng	Actuation	
V50		2007	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V50		2007	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2007	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V50		2007	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V50		2007	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2007	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2007	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2007	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2007	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V50		2007	D4164T	Diesel Eng	Sys. Info.	
V50		2007	D4164T	Diesel Eng	Read code	
V50		2007	D4164T	Diesel Eng	Clear code	
V50		2007	D4164T	Diesel Eng	Data stream	
V50		2007	D4164T	Diesel Eng	Actuation	
V50		2007	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50		2007	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50		2007	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V50		2007	D4204T	Diesel Eng	Sys. Info.	
V50		2007	D4204T	Diesel Eng	Read code	
V50		2007	D4204T	Diesel Eng	Clear code	
V50		2007	D4204T	Diesel Eng	Data stream	
V50		2007	D4204T	Diesel Eng	Actuation	
V50		2007	D4204T	Diesel Eng	Freeze frame	
V50		2007	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50		2007	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V50		2007	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50		2007	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50		2007	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V50		2007	AW55-50/51SN	TCM	Sys. Info.	
V50		2007	AW55-50/51SN	TCM	Read code	
V50		2007	AW55-50/51SN	TCM	Clear code	
V50		2007	AW55-50/51SN	TCM	Data stream	
V50		2007	AW55-50/51SN	TCM	Actuation	
V50		2007	AW55-50/51SN	TCM	Freeze frame	
V50		2007	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V50		2007	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50		2007	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
V50		2007	4T65AWD	TCM	Special functions	Reset adaptation to zero
V50		2007	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50		2007	TF-80SC	TCM	Sys. Info.	
V50		2007	TF-80SC	TCM	Read code	
V50		2007	TF-80SC	TCM	Clear code	
V50		2007	TF-80SC	TCM	Data stream	
V50		2007	TF-80SC	TCM	Actuation	
V50		2007	TF-80SC	TCM	Special functions	Reset adaptation to zero
V50		2007	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50		2007	TF-80SC	TCM	Special functions	Calibration of position sensor
V50		2007	AW50/51AW D	TCM	Sys. Info.	
V50		2007	AW50/51AW D	TCM	Read code	

model	year	type	system	function	subfunction
V50	2007	AW50/51AW D	TCM	Clear code	
V50	2007	AW50/51AW D	TCM	Data stream	
V50	2007	AW50/51AW D	TCM	Actuation	
V50	2007	AW50/51AW D	TCM	Freeze frame	
V50	2007	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V50	2007	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2007	AW50/51AW D	ABS	Sys. Info.	
V50	2007	AW50/51AW D	ABS	Read code	
V50	2007	AW50/51AW D	ABS	Clear code	
V50	2007	AW50/51AW D	ABS	Data stream	
V50	2007	AW50/51AW D	ABS	Actuation	
V50	2007	AW50/51AW D	ABS	Freeze frame	
V50	2007	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V50	2007	AW50/51AW D	ABS	Special functions	Reading off the configuration
V50	2007	AW50/51AW D	ABS	Special functions	Calibration
V50	2007	AW50/51AW D	SRS	Sys. Info.	
V50	2007	AW50/51AW D	SRS	Read code	
V50	2007	AW50/51AW D	SRS	Clear code	
V50	2007	AW50/51AW D	SRS	Data stream	
V50	2007	AW50/51AW D	SRS	Freeze frame	
V50	2007	AW50/51AW D	CEM	Sys. Info.	
V50	2007	AW50/51AW D	CEM	Read code	
V50	2007	AW50/51AW D	CEM	Clear code	
V50	2007	AW50/51AW D	CEM	Data stream	
V50	2007	AW50/51AW D	CEM	Actuation	
V50	2007	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V50	2007	AW50/51AW D	CEM	Special functions	Programming control module
V50	2007	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V50	2007	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V50	2007	AW50/51AW D	CEM	Special functions	Resetting crash mode
V50	2007	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V50	2007	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V50	2007	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V50	2007	AW50/51AW D	CEM	Special functions	Ignition switch key position
V50	2007	AW50/51AW D	CCM	Sys. Info.	
V50	2007	AW50/51AW D	CCM	Read code	
V50	2007	AW50/51AW D	CCM	Clear code	
V50	2007	AW50/51AW D	CCM	Data stream	
V50	2007	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)

model	year	type	system	function	subfunction
V50	2007	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V50	2007	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V50	2007	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V50	2007	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V50	2007	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V50	2007	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V50	2007	AW50/51AW D	DDM	Sys. Info.	
V50	2007	AW50/51AW D	DDM	Read code	
V50	2007	AW50/51AW D	DDM	Clear code	
V50	2007	AW50/51AW D	DDM	Data stream	
V50	2007	AW50/51AW D	DDM	Actuation	
V50	2007	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V50	2007	AW50/51AW D	DIM	Sys. Info.	
V50	2007	AW50/51AW D	DIM	Read code	
V50	2007	AW50/51AW D	DIM	Clear code	
V50	2007	AW50/51AW D	DIM	Data stream	
V50	2007	AW50/51AW D	DIM	Actuation	
V50	2007	AW50/51AW D	DIM	Freeze frame	
V50	2007	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V50	2007	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V50	2007	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V50	2007	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V50	2007	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V50	2007	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V50	2007	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V50	2007	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V50	2007	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V50	2007	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V50	2007	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V50	2007	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V50	2007	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V50	2007	AW50/51AW D	DIM	Special functions	Display of DSTC message
V50	2007	AW50/51AW D	DIM	Special functions	Read out programmed values
V50	2007	AW50/51AW D	PDM	Sys. Info.	
V50	2007	AW50/51AW D	PDM	Read code	
V50	2007	AW50/51AW D	PDM	Clear code	
V50	2007	AW50/51AW D	PDM	Data stream	
V50	2007	AW50/51AW D	PDM	Actuation	
V50	2007	AW50/51AW D	PDM	Special functions	Initialize the window(*)

model	year	type	system	function	subfunction
V50	2007	AW50/51AW D	SWM	Sys. Info.	
V50	2007	AW50/51AW D	SWM	Read code	
V50	2007	AW50/51AW D	SWM	Clear code	
V50	2007	AW50/51AW D	SWM	Data stream	
V50	2007	AW50/51AW D	PSM	Sys. Info.	
V50	2007	AW50/51AW D	PSM	Read code	
V50	2007	AW50/51AW D	PSM	Clear code	
V50	2007	AW50/51AW D	PSM	Data stream	
V50	2007	AW50/51AW D	PSM	Actuation	
V50	2007	AW50/51AW D	PHM	Sys. Info.	
V50	2007	AW50/51AW D	PHM	Read code	
V50	2007	AW50/51AW D	PHM	Clear code	
V50	2007	AW50/51AW D	PHM	Data stream	
V50	2007	AW50/51AW D	PHM	Actuation	
V50	2007	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V50	2007	AW50/51AW D	AUD	Sys. Info.	
V50	2007	AW50/51AW D	AUD	Read code	
V50	2007	AW50/51AW D	AUD	Clear code	
V50	2007	AW50/51AW D	DEM	Sys. Info.	
V50	2007	AW50/51AW D	DEM	Read code	
V50	2007	AW50/51AW D	DEM	Clear code	
V50	2007	AW50/51AW D	DEM	Data stream	
V50	2007	AW50/51AW D	ICM	Sys. Info.	
V50	2007	AW50/51AW D	ICM	Read code	
V50	2007	AW50/51AW D	ICM	Clear code	
V50	2007	AW50/51AW D	ICM	Data stream	
V50	2007	AW50/51AW D	ICM	Actuation	
V50	2007	AW50/51AW D	MMM	Sys. Info.	
V50	2007	AW50/51AW D	MMM	Read code	
V50	2007	AW50/51AW D	MMM	Clear code	
V50	2007	AW50/51AW D	MMM	Data stream	
V50	2007	AW50/51AW D	AEM	Sys. Info.	
V50	2007	AW50/51AW D	AEM	Read code	
V50	2007	AW50/51AW D	AEM	Clear code	
V50	2007	AW50/51AW D	AEM	Data stream	
V50	2007	AW50/51AW D	AEM	Actuation	
V50	2007	AW50/51AW D	ADM	Sys. Info.	
V50	2007	AW50/51AW D	ADM	Read code	
V50	2007	AW50/51AW D	ADM	Clear code	



model	year	type	system	function	subfunction
V50	2007	AW50/51AW D	ADM	Data stream	
V50	2007	AW50/51AW D	EPS	Sys. Info.	
V50	2007	AW50/51AW D	EPS	Read code	
V50	2007	AW50/51AW D	EPS	Clear code	
V50	2007	AW50/51AW D	EPS	Data stream	
V50	2007	AW50/51AW D	PAM	Sys. Info.	
V50	2007	AW50/51AW D	PAM	Read code	
V50	2007	AW50/51AW D	PAM	Clear code	
V50	2007	AW50/51AW D	PAM	Data stream	
V50	2007	AW50/51AW D	IAM	Sys. Info.	
V50	2007	AW50/51AW D	IAM	Read code	
V50	2007	AW50/51AW D	IAM	Clear code	
V50	2007	AW50/51AW D	IAM	Data stream	
V50	2007	AW50/51AW D	IAM	Actuation	
V50	2007	AW50/51AW D	AFM	Sys. Info.	
V50	2007	AW50/51AW D	AFM	Read code	
V50	2007	AW50/51AW D	AFM	Clear code	
V50	2007	AW50/51AW D	AFM	Data stream	
V50	2007	AW50/51AW D	AFM	Actuation	
V50	2007	AW50/51AW D	MPM	Sys. Info.	
V50	2007	AW50/51AW D	MPM	Read code	
V50	2007	AW50/51AW D	MPM	Clear code	
V50	2007	AW50/51AW D	MPM	Data stream	
V50	2007	AW50/51AW D	MPM	Actuation	
V50	2007	AW50/51AW D	CPM	Sys. Info.	
V50	2007	AW50/51AW D	CPM	Read code	
V50	2007	AW50/51AW D	CPM	Clear code	
V50	2007	AW50/51AW D	CPM	Data stream	
V50	2007	AW50/51AW D	CPM	Actuation	
V50	2008	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V50	2008	B5244S4	ECM	Sys. Info.	
V50	2008	B5244S4	ECM	Read code	
V50	2008	B5244S4	ECM	Clear code	
V50	2008	B5244S4	ECM	Data stream	
V50	2008	B5244S4	ECM	Actuation	
V50	2008	B5244S4	ECM	Freeze frame	
V50	2008	B5244S4	ECM	Special functions	Resetting the adaptation values
V50	2008	B5244S5	ECM	Sys. Info.	
V50	2008	B5244S5	ECM	Read code	
V50	2008	B5244S5	ECM	Clear code	
V50	2008	B5244S5	ECM	Data stream	
V50	2008	B5244S5	ECM	Actuation	
V50	2008	B5244S5	ECM	Special functions	Resetting the adaptation values
V50	2008	B5244S7	ECM	Sys. Info.	
V50	2008	B5244S7	ECM	Read code	
V50	2008	B5244S7	ECM	Clear code	
V50	2008	B5244S7	ECM	Data stream	
V50	2008	B5244S7	ECM	Actuation	

model	year	type	system	function	subfunction	
V50		2008	B4204S3	ECM	Sys. Info.	
V50		2008	B4204S3	ECM	Read code	
V50		2008	B4204S3	ECM	Clear code	
V50		2008	B4204S3	ECM	Data stream	
V50		2008	B4204S3	ECM	Actuation	
V50		2008	B4204S3	ECM	Freeze frame	
V50		2008	B5254T2	ECM	Sys. Info.	
V50		2008	B5254T2	ECM	Read code	
V50		2008	B5254T2	ECM	Clear code	
V50		2008	B5254T2	ECM	Data stream	
V50		2008	B5254T2	ECM	Actuation	
V50		2008	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2008	B5254T3	ECM	Sys. Info.	
V50		2008	B5254T3	ECM	Read code	
V50		2008	B5254T3	ECM	Clear code	
V50		2008	B5254T3	ECM	Data stream	
V50		2008	B5254T3	ECM	Actuation	
V50		2008	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2008	B5254T7	ECM	Sys. Info.	
V50		2008	B5254T7	ECM	Read code	
V50		2008	B5254T7	ECM	Clear code	
V50		2008	B5254T7	ECM	Data stream	
V50		2008	B5254T7	ECM	Actuation	
V50		2008	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2008	B5204T5	ECM	Sys. Info.	
V50		2008	B5204T5	ECM	Read code	
V50		2008	B5204T5	ECM	Clear code	
V50		2008	B5204T5	ECM	Data stream	
V50		2008	B5204T5	ECM	Actuation	
V50		2008	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2008	B6294T	ECM	Sys. Info.	
V50		2008	B6294T	ECM	Read code	
V50		2008	B6294T	ECM	Clear code	
V50		2008	B6294T	ECM	Data stream	
V50		2008	B6294T	ECM	Actuation	
V50		2008	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2008	B4164S3	ECM	Sys. Info.	
V50		2008	B4164S3	ECM	Read code	
V50		2008	B4164S3	ECM	Clear code	
V50		2008	B4164S3	ECM	Data stream	
V50		2008	B4164S3	ECM	Actuation	
V50		2008	B4164S3	ECM	Freeze frame	
V50		2008	B4164S3	ECM	Special functions	Resetting the adaptation values
V50		2008	B5244T5	ECM	Sys. Info.	
V50		2008	B5244T5	ECM	Read code	
V50		2008	B5244T5	ECM	Clear code	
V50		2008	B5244T5	ECM	Data stream	
V50		2008	B5244T5	ECM	Actuation	
V50		2008	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2008	B4184S11	ECM	Sys. Info.	
V50		2008	B4184S11	ECM	Read code	
V50		2008	B4184S11	ECM	Clear code	
V50		2008	B4184S11	ECM	Data stream	
V50		2008	B4184S11	ECM	Actuation	
V50		2008	B4184S11	ECM	Freeze frame	
V50		2008	B4184S11	ECM	Special functions	Resetting the adaptation values
V50		2008	D5244T	Diesel Eng	Sys. Info.	
V50		2008	D5244T	Diesel Eng	Read code	
V50		2008	D5244T	Diesel Eng	Clear code	
V50		2008	D5244T	Diesel Eng	Data stream	
V50		2008	D5244T	Diesel Eng	Actuation	
V50		2008	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50		2008	D5244T4	Diesel Eng	Sys. Info.	
V50		2008	D5244T4	Diesel Eng	Read code	
V50		2008	D5244T4	Diesel Eng	Clear code	
V50		2008	D5244T4	Diesel Eng	Data stream	
V50		2008	D5244T4	Diesel Eng	Actuation	
V50		2008	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V50		2008	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2008	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V50		2008	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V50		2008	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2008	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2008	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2008	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2008	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V50		2008	D5244T5	Diesel Eng	Sys. Info.	
V50		2008	D5244T5	Diesel Eng	Read code	

model	year	type	system	function	subfunction	
V50		2008	D5244T5	Diesel Eng	Clear code	
V50		2008	D5244T5	Diesel Eng	Data stream	
V50		2008	D5244T5	Diesel Eng	Actuation	
V50		2008	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V50		2008	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2008	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V50		2008	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V50		2008	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2008	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2008	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2008	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2008	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V50		2008	D5244T8	Diesel Eng	Sys. Info.	
V50		2008	D5244T8	Diesel Eng	Read code	
V50		2008	D5244T8	Diesel Eng	Clear code	
V50		2008	D5244T8	Diesel Eng	Data stream	
V50		2008	D5244T8	Diesel Eng	Actuation	
V50		2008	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V50		2008	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2008	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V50		2008	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V50		2008	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2008	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2008	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2008	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2008	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V50		2008	D4164T	Diesel Eng	Sys. Info.	
V50		2008	D4164T	Diesel Eng	Read code	
V50		2008	D4164T	Diesel Eng	Clear code	
V50		2008	D4164T	Diesel Eng	Data stream	
V50		2008	D4164T	Diesel Eng	Actuation	
V50		2008	D4164T	Diesel Eng	Freeze frame	
V50		2008	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50		2008	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50		2008	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V50		2008	D4204T	Diesel Eng	Sys. Info.	
V50		2008	D4204T	Diesel Eng	Read code	
V50		2008	D4204T	Diesel Eng	Clear code	
V50		2008	D4204T	Diesel Eng	Data stream	
V50		2008	D4204T	Diesel Eng	Actuation	
V50		2008	D4204T	Diesel Eng	Freeze frame	
V50		2008	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50		2008	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V50		2008	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50		2008	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50		2008	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V50		2008	AW55-50/51SN	TCM	Sys. Info.	
V50		2008	AW55-50/51SN	TCM	Read code	
V50		2008	AW55-50/51SN	TCM	Clear code	
V50		2008	AW55-50/51SN	TCM	Data stream	
V50		2008	AW55-50/51SN	TCM	Actuation	
V50		2008	AW55-50/51SN	TCM	Freeze frame	
V50		2008	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V50		2008	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50		2008	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
V50		2008	4T65AWD	TCM	Special functions	Reset adaptation to zero
V50		2008	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50		2008	TF-80SC	TCM	Sys. Info.	
V50		2008	TF-80SC	TCM	Read code	
V50		2008	TF-80SC	TCM	Clear code	
V50		2008	TF-80SC	TCM	Data stream	
V50		2008	TF-80SC	TCM	Actuation	
V50		2008	TF-80SC	TCM	Special functions	Reset adaptation to zero
V50		2008	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50		2008	TF-80SC	TCM	Special functions	Calibration of position sensor
V50		2008	AW50/51AWD	TCM	Sys. Info.	
V50		2008	AW50/51AWD	TCM	Read code	

model	year	type	system	function	subfunction
V50	2008	AW50/51AW D	TCM	Clear code	
V50	2008	AW50/51AW D	TCM	Data stream	
V50	2008	AW50/51AW D	TCM	Actuation	
V50	2008	AW50/51AW D	TCM	Freeze frame	
V50	2008	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V50	2008	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2008	AW50/51AW D	ABS	Sys. Info.	
V50	2008	AW50/51AW D	ABS	Read code	
V50	2008	AW50/51AW D	ABS	Clear code	
V50	2008	AW50/51AW D	ABS	Data stream	
V50	2008	AW50/51AW D	ABS	Actuation	
V50	2008	AW50/51AW D	ABS	Freeze frame	
V50	2008	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V50	2008	AW50/51AW D	ABS	Special functions	Reading off the configuration
V50	2008	AW50/51AW D	ABS	Special functions	Calibration
V50	2008	AW50/51AW D	SRS	Sys. Info.	
V50	2008	AW50/51AW D	SRS	Read code	
V50	2008	AW50/51AW D	SRS	Clear code	
V50	2008	AW50/51AW D	SRS	Data stream	
V50	2008	AW50/51AW D	SRS	Freeze frame	
V50	2008	AW50/51AW D	CEM	Sys. Info.	
V50	2008	AW50/51AW D	CEM	Read code	
V50	2008	AW50/51AW D	CEM	Clear code	
V50	2008	AW50/51AW D	CEM	Data stream	
V50	2008	AW50/51AW D	CEM	Actuation	
V50	2008	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V50	2008	AW50/51AW D	CEM	Special functions	Programming control module
V50	2008	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V50	2008	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V50	2008	AW50/51AW D	CEM	Special functions	Resetting crash mode
V50	2008	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V50	2008	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V50	2008	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V50	2008	AW50/51AW D	CEM	Special functions	Ignition switch key position
V50	2008	AW50/51AW D	CCM	Sys. Info.	
V50	2008	AW50/51AW D	CCM	Read code	
V50	2008	AW50/51AW D	CCM	Clear code	
V50	2008	AW50/51AW D	CCM	Data stream	
V50	2008	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)

model	year	type	system	function	subfunction
V50	2008	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V50	2008	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V50	2008	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V50	2008	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V50	2008	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V50	2008	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V50	2008	AW50/51AW D	DDM	Sys. Info.	
V50	2008	AW50/51AW D	DDM	Read code	
V50	2008	AW50/51AW D	DDM	Clear code	
V50	2008	AW50/51AW D	DDM	Data stream	
V50	2008	AW50/51AW D	DDM	Actuation	
V50	2008	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V50	2008	AW50/51AW D	DIM	Sys. Info.	
V50	2008	AW50/51AW D	DIM	Read code	
V50	2008	AW50/51AW D	DIM	Clear code	
V50	2008	AW50/51AW D	DIM	Data stream	
V50	2008	AW50/51AW D	DIM	Actuation	
V50	2008	AW50/51AW D	DIM	Freeze frame	
V50	2008	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V50	2008	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V50	2008	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V50	2008	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V50	2008	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V50	2008	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V50	2008	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V50	2008	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V50	2008	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V50	2008	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V50	2008	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V50	2008	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V50	2008	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V50	2008	AW50/51AW D	DIM	Special functions	Display of DSTC message
V50	2008	AW50/51AW D	DIM	Special functions	Read out programmed values
V50	2008	AW50/51AW D	PDM	Sys. Info.	
V50	2008	AW50/51AW D	PDM	Read code	
V50	2008	AW50/51AW D	PDM	Clear code	
V50	2008	AW50/51AW D	PDM	Data stream	
V50	2008	AW50/51AW D	PDM	Actuation	
V50	2008	AW50/51AW D	PDM	Special functions	Initialize the window(*)

model	year	type	system	function	subfunction
V50	2008	AW50/51AW D	SWM	Sys. Info.	
V50	2008	AW50/51AW D	SWM	Read code	
V50	2008	AW50/51AW D	SWM	Clear code	
V50	2008	AW50/51AW D	SWM	Data stream	
V50	2008	AW50/51AW D	PSM	Sys. Info.	
V50	2008	AW50/51AW D	PSM	Read code	
V50	2008	AW50/51AW D	PSM	Clear code	
V50	2008	AW50/51AW D	PSM	Data stream	
V50	2008	AW50/51AW D	PSM	Actuation	
V50	2008	AW50/51AW D	PHM	Sys. Info.	
V50	2008	AW50/51AW D	PHM	Read code	
V50	2008	AW50/51AW D	PHM	Clear code	
V50	2008	AW50/51AW D	PHM	Data stream	
V50	2008	AW50/51AW D	PHM	Actuation	
V50	2008	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V50	2008	AW50/51AW D	HCM	Sys. Info.	
V50	2008	AW50/51AW D	HCM	Read code	
V50	2008	AW50/51AW D	HCM	Clear code	
V50	2008	AW50/51AW D	HCM	Data stream	
V50	2008	AW50/51AW D	AUD	Sys. Info.	
V50	2008	AW50/51AW D	AUD	Read code	
V50	2008	AW50/51AW D	AUD	Clear code	
V50	2008	AW50/51AW D	DEM	Sys. Info.	
V50	2008	AW50/51AW D	DEM	Read code	
V50	2008	AW50/51AW D	DEM	Clear code	
V50	2008	AW50/51AW D	DEM	Data stream	
V50	2008	AW50/51AW D	ICM	Sys. Info.	
V50	2008	AW50/51AW D	ICM	Read code	
V50	2008	AW50/51AW D	ICM	Clear code	
V50	2008	AW50/51AW D	ICM	Data stream	
V50	2008	AW50/51AW D	ICM	Actuation	
V50	2008	AW50/51AW D	MMM	Sys. Info.	
V50	2008	AW50/51AW D	MMM	Read code	
V50	2008	AW50/51AW D	MMM	Clear code	
V50	2008	AW50/51AW D	MMM	Data stream	
V50	2008	AW50/51AW D	AEM	Sys. Info.	
V50	2008	AW50/51AW D	AEM	Read code	
V50	2008	AW50/51AW D	AEM	Clear code	
V50	2008	AW50/51AW D	AEM	Data stream	

model	year	type	system	function	subfunction
V50	2008	AW50/51AW D	AEM	Actuation	
V50	2008	AW50/51AW D	ADM	Sys. Info.	
V50	2008	AW50/51AW D	ADM	Read code	
V50	2008	AW50/51AW D	ADM	Clear code	
V50	2008	AW50/51AW D	ADM	Data stream	
V50	2008	AW50/51AW D	EPS	Sys. Info.	
V50	2008	AW50/51AW D	EPS	Read code	
V50	2008	AW50/51AW D	EPS	Clear code	
V50	2008	AW50/51AW D	EPS	Data stream	
V50	2008	AW50/51AW D	PAM	Sys. Info.	
V50	2008	AW50/51AW D	PAM	Read code	
V50	2008	AW50/51AW D	PAM	Clear code	
V50	2008	AW50/51AW D	PAM	Data stream	
V50	2008	AW50/51AW D	IAM	Sys. Info.	
V50	2008	AW50/51AW D	IAM	Read code	
V50	2008	AW50/51AW D	IAM	Clear code	
V50	2008	AW50/51AW D	IAM	Data stream	
V50	2008	AW50/51AW D	IAM	Actuation	
V50	2008	AW50/51AW D	AFM	Sys. Info.	
V50	2008	AW50/51AW D	AFM	Read code	
V50	2008	AW50/51AW D	AFM	Clear code	
V50	2008	AW50/51AW D	AFM	Data stream	
V50	2008	AW50/51AW D	AFM	Actuation	
V50	2008	AW50/51AW D	MPM	Sys. Info.	
V50	2008	AW50/51AW D	MPM	Read code	
V50	2008	AW50/51AW D	MPM	Clear code	
V50	2008	AW50/51AW D	MPM	Data stream	
V50	2008	AW50/51AW D	MPM	Actuation	
V50	2008	AW50/51AW D	CPM	Sys. Info.	
V50	2008	AW50/51AW D	CPM	Read code	
V50	2008	AW50/51AW D	CPM	Clear code	
V50	2008	AW50/51AW D	CPM	Data stream	
V50	2008	AW50/51AW D	CPM	Actuation	
V50	2009	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V50	2009	B5244S4	ECM	Sys. Info.	
V50	2009	B5244S4	ECM	Read code	
V50	2009	B5244S4	ECM	Clear code	
V50	2009	B5244S4	ECM	Data stream	
V50	2009	B5244S4	ECM	Actuation	
V50	2009	B5244S4	ECM	Freeze frame	
V50	2009	B5244S4	ECM	Special functions	Resetting the adaptation values
V50	2009	B5244S5	ECM	Sys. Info.	
V50	2009	B5244S5	ECM	Read code	
V50	2009	B5244S5	ECM	Clear code	

model	year	type	system	function	subfunction	
V50		2009	B5244S5	ECM	Data stream	
V50		2009	B5244S5	ECM	Actuation	
V50		2009	B5244S5	ECM	Freeze frame	
V50		2009	B5244S5	ECM	Special functions	Resetting the adaptation values
V50		2009	B5244S7	ECM	Sys. Info.	
V50		2009	B5244S7	ECM	Read code	
V50		2009	B5244S7	ECM	Clear code	
V50		2009	B5244S7	ECM	Data stream	
V50		2009	B5244S7	ECM	Actuation	
V50		2009	B5244S7	ECM	Freeze frame	
V50		2009	B4204S3	ECM	Sys. Info.	
V50		2009	B4204S3	ECM	Read code	
V50		2009	B4204S3	ECM	Clear code	
V50		2009	B4204S3	ECM	Data stream	
V50		2009	B4204S3	ECM	Actuation	
V50		2009	B4204S3	ECM	Freeze frame	
V50		2009	B5254T2	ECM	Sys. Info.	
V50		2009	B5254T2	ECM	Read code	
V50		2009	B5254T2	ECM	Clear code	
V50		2009	B5254T2	ECM	Data stream	
V50		2009	B5254T2	ECM	Actuation	
V50		2009	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2009	B5254T3	ECM	Sys. Info.	
V50		2009	B5254T3	ECM	Read code	
V50		2009	B5254T3	ECM	Clear code	
V50		2009	B5254T3	ECM	Data stream	
V50		2009	B5254T3	ECM	Actuation	
V50		2009	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2009	B5254T7	ECM	Sys. Info.	
V50		2009	B5254T7	ECM	Read code	
V50		2009	B5254T7	ECM	Clear code	
V50		2009	B5254T7	ECM	Data stream	
V50		2009	B5254T7	ECM	Actuation	
V50		2009	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2009	B5204T5	ECM	Sys. Info.	
V50		2009	B5204T5	ECM	Read code	
V50		2009	B5204T5	ECM	Clear code	
V50		2009	B5204T5	ECM	Data stream	
V50		2009	B5204T5	ECM	Actuation	
V50		2009	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2009	B6294T	ECM	Sys. Info.	
V50		2009	B6294T	ECM	Read code	
V50		2009	B6294T	ECM	Clear code	
V50		2009	B6294T	ECM	Data stream	
V50		2009	B6294T	ECM	Actuation	
V50		2009	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2009	B4164S3	ECM	Sys. Info.	
V50		2009	B4164S3	ECM	Read code	
V50		2009	B4164S3	ECM	Clear code	
V50		2009	B4164S3	ECM	Data stream	
V50		2009	B4164S3	ECM	Actuation	
V50		2009	B4164S3	ECM	Freeze frame	
V50		2009	B4164S3	ECM	Special functions	Resetting the adaptation values
V50		2009	B5244T5	ECM	Sys. Info.	
V50		2009	B5244T5	ECM	Read code	
V50		2009	B5244T5	ECM	Clear code	
V50		2009	B5244T5	ECM	Data stream	
V50		2009	B5244T5	ECM	Actuation	
V50		2009	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50		2009	B4184S11	ECM	Sys. Info.	
V50		2009	B4184S11	ECM	Read code	
V50		2009	B4184S11	ECM	Clear code	
V50		2009	B4184S11	ECM	Data stream	
V50		2009	B4184S11	ECM	Actuation	
V50		2009	B4184S11	ECM	Freeze frame	
V50		2009	B4184S11	ECM	Special functions	Resetting the adaptation values
V50		2009	D5244T	Diesel Eng	Sys. Info.	
V50		2009	D5244T	Diesel Eng	Read code	
V50		2009	D5244T	Diesel Eng	Clear code	
V50		2009	D5244T	Diesel Eng	Data stream	
V50		2009	D5244T	Diesel Eng	Actuation	
V50		2009	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50		2009	D5244T4	Diesel Eng	Sys. Info.	
V50		2009	D5244T4	Diesel Eng	Read code	
V50		2009	D5244T4	Diesel Eng	Clear code	
V50		2009	D5244T4	Diesel Eng	Data stream	
V50		2009	D5244T4	Diesel Eng	Actuation	
V50		2009	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter



model	year	type	system	function	subfunction	
V50		2009	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2009	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V50		2009	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V50		2009	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2009	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2009	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2009	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2009	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V50		2009	D5244T5	Diesel Eng	Sys. Info.	
V50		2009	D5244T5	Diesel Eng	Read code	
V50		2009	D5244T5	Diesel Eng	Clear code	
V50		2009	D5244T5	Diesel Eng	Data stream	
V50		2009	D5244T5	Diesel Eng	Actuation	
V50		2009	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V50		2009	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2009	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V50		2009	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V50		2009	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2009	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2009	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2009	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2009	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V50		2009	D5244T8	Diesel Eng	Sys. Info.	
V50		2009	D5244T8	Diesel Eng	Read code	
V50		2009	D5244T8	Diesel Eng	Clear code	
V50		2009	D5244T8	Diesel Eng	Data stream	
V50		2009	D5244T8	Diesel Eng	Actuation	
V50		2009	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V50		2009	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50		2009	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V50		2009	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V50		2009	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50		2009	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50		2009	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V50		2009	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50		2009	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V50		2009	D4164T	Diesel Eng	Sys. Info.	
V50		2009	D4164T	Diesel Eng	Read code	
V50		2009	D4164T	Diesel Eng	Clear code	
V50		2009	D4164T	Diesel Eng	Data stream	
V50		2009	D4164T	Diesel Eng	Actuation	
V50		2009	D4164T	Diesel Eng	Freeze frame	
V50		2009	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50		2009	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50		2009	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V50		2009	D4204T	Diesel Eng	Sys. Info.	
V50		2009	D4204T	Diesel Eng	Read code	
V50		2009	D4204T	Diesel Eng	Clear code	
V50		2009	D4204T	Diesel Eng	Data stream	
V50		2009	D4204T	Diesel Eng	Actuation	
V50		2009	D4204T	Diesel Eng	Freeze frame	
V50		2009	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50		2009	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V50		2009	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50		2009	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50		2009	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V50		2009	AW55-50/51SN	TCM	Sys. Info.	
V50		2009	AW55-50/51SN	TCM	Read code	
V50		2009	AW55-50/51SN	TCM	Clear code	
V50		2009	AW55-50/51SN	TCM	Data stream	
V50		2009	AW55-50/51SN	TCM	Actuation	
V50		2009	AW55-50/51SN	TCM	Freeze frame	
V50		2009	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V50		2009	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50		2009	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
V50		2009	4T65AWD	TCM	Special functions	Reset adaptation to zero
V50		2009	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50		2009	TF-80SC	TCM	Sys. Info.	
V50		2009	TF-80SC	TCM	Read code	

model	year	type	system	function	subfunction
V50	2009	TF-80SC	TCM	Clear code	
V50	2009	TF-80SC	TCM	Data stream	
V50	2009	TF-80SC	TCM	Actuation	
V50	2009	TF-80SC	TCM	Special functions	Reset adaptation to zero
V50	2009	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2009	TF-80SC	TCM	Special functions	Calibration of position sensor
V50	2009	AW50/51AW D	TCM	Sys. Info.	
V50	2009	AW50/51AW D	TCM	Read code	
V50	2009	AW50/51AW D	TCM	Clear code	
V50	2009	AW50/51AW D	TCM	Data stream	
V50	2009	AW50/51AW D	TCM	Actuation	
V50	2009	AW50/51AW D	TCM	Freeze frame	
V50	2009	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V50	2009	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2009	AW50/51AW D	ABS	Sys. Info.	
V50	2009	AW50/51AW D	ABS	Read code	
V50	2009	AW50/51AW D	ABS	Clear code	
V50	2009	AW50/51AW D	ABS	Data stream	
V50	2009	AW50/51AW D	ABS	Actuation	
V50	2009	AW50/51AW D	ABS	Freeze frame	
V50	2009	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V50	2009	AW50/51AW D	ABS	Special functions	Reading off the configuration
V50	2009	AW50/51AW D	ABS	Special functions	Calibration
V50	2009	AW50/51AW D	SRS	Sys. Info.	
V50	2009	AW50/51AW D	SRS	Read code	
V50	2009	AW50/51AW D	SRS	Clear code	
V50	2009	AW50/51AW D	SRS	Data stream	
V50	2009	AW50/51AW D	SRS	Freeze frame	
V50	2009	AW50/51AW D	CEM	Sys. Info.	
V50	2009	AW50/51AW D	CEM	Read code	
V50	2009	AW50/51AW D	CEM	Clear code	
V50	2009	AW50/51AW D	CEM	Data stream	
V50	2009	AW50/51AW D	CEM	Actuation	
V50	2009	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V50	2009	AW50/51AW D	CEM	Special functions	Programming control module
V50	2009	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V50	2009	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V50	2009	AW50/51AW D	CEM	Special functions	Resetting crash mode
V50	2009	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V50	2009	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V50	2009	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V50	2009	AW50/51AW D	CEM	Special functions	Ignition switch key position

model	year	type	system	function	subfunction
V50	2009	AW50/51AW D	CCM	Sys. Info.	
V50	2009	AW50/51AW D	CCM	Read code	
V50	2009	AW50/51AW D	CCM	Clear code	
V50	2009	AW50/51AW D	CCM	Data stream	
V50	2009	AW50/51AW D	CCM	Special functions	Self-adjustment of adammer motor end stops(*)
V50	2009	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V50	2009	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V50	2009	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V50	2009	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V50	2009	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V50	2009	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V50	2009	AW50/51AW D	DDM	Sys. Info.	
V50	2009	AW50/51AW D	DDM	Read code	
V50	2009	AW50/51AW D	DDM	Clear code	
V50	2009	AW50/51AW D	DDM	Data stream	
V50	2009	AW50/51AW D	DDM	Actuation	
V50	2009	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V50	2009	AW50/51AW D	DIM	Sys. Info.	
V50	2009	AW50/51AW D	DIM	Read code	
V50	2009	AW50/51AW D	DIM	Clear code	
V50	2009	AW50/51AW D	DIM	Data stream	
V50	2009	AW50/51AW D	DIM	Actuation	
V50	2009	AW50/51AW D	DIM	Freeze frame	
V50	2009	AW50/51AW D	DIM	Special functions	Reseting the service reminder indicator(SRI) (*)
V50	2009	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V50	2009	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V50	2009	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V50	2009	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V50	2009	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V50	2009	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V50	2009	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V50	2009	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V50	2009	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V50	2009	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V50	2009	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V50	2009	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V50	2009	AW50/51AW D	DIM	Special functions	Display of DSTC message
V50	2009	AW50/51AW D	DIM	Special functions	Read out programmed values
V50	2009	AW50/51AW D	PDM	Sys. Info.	

model	year	type	system	function	subfunction
V50	2009	AW50/51AW D	PDM	Read code	
V50	2009	AW50/51AW D	PDM	Clear code	
V50	2009	AW50/51AW D	PDM	Data stream	
V50	2009	AW50/51AW D	PDM	Actuation	
V50	2009	AW50/51AW D	PDM	Special functions	Initialize the window(*)
V50	2009	AW50/51AW D	SWM	Sys. Info.	
V50	2009	AW50/51AW D	SWM	Read code	
V50	2009	AW50/51AW D	SWM	Clear code	
V50	2009	AW50/51AW D	SWM	Data stream	
V50	2009	AW50/51AW D	PSM	Sys. Info.	
V50	2009	AW50/51AW D	PSM	Read code	
V50	2009	AW50/51AW D	PSM	Clear code	
V50	2009	AW50/51AW D	PSM	Data stream	
V50	2009	AW50/51AW D	PSM	Actuation	
V50	2009	AW50/51AW D	PHM	Sys. Info.	
V50	2009	AW50/51AW D	PHM	Read code	
V50	2009	AW50/51AW D	PHM	Clear code	
V50	2009	AW50/51AW D	PHM	Data stream	
V50	2009	AW50/51AW D	PHM	Actuation	
V50	2009	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V50	2009	AW50/51AW D	AUD	Sys. Info.	
V50	2009	AW50/51AW D	AUD	Read code	
V50	2009	AW50/51AW D	AUD	Clear code	
V50	2009	AW50/51AW D	DEM	Sys. Info.	
V50	2009	AW50/51AW D	DEM	Read code	
V50	2009	AW50/51AW D	DEM	Clear code	
V50	2009	AW50/51AW D	DEM	Data stream	
V50	2009	AW50/51AW D	ICM	Sys. Info.	
V50	2009	AW50/51AW D	ICM	Read code	
V50	2009	AW50/51AW D	ICM	Clear code	
V50	2009	AW50/51AW D	ICM	Data stream	
V50	2009	AW50/51AW D	ICM	Actuation	
V50	2009	AW50/51AW D	MMM	Sys. Info.	
V50	2009	AW50/51AW D	MMM	Read code	
V50	2009	AW50/51AW D	MMM	Clear code	
V50	2009	AW50/51AW D	MMM	Data stream	
V50	2009	AW50/51AW D	AEM	Sys. Info.	
V50	2009	AW50/51AW D	AEM	Read code	
V50	2009	AW50/51AW D	AEM	Clear code	

model	year	type	system	function	subfunction
V50	2009	AW50/51AW D	AEM	Data stream	
V50	2009	AW50/51AW D	AEM	Actuation	
V50	2009	AW50/51AW D	ADM	Sys. Info.	
V50	2009	AW50/51AW D	ADM	Read code	
V50	2009	AW50/51AW D	ADM	Clear code	
V50	2009	AW50/51AW D	ADM	Data stream	
V50	2009	AW50/51AW D	HCM	Sys. Info.	
V50	2009	AW50/51AW D	HCM	Read code	
V50	2009	AW50/51AW D	HCM	Clear code	
V50	2009	AW50/51AW D	HCM	Data stream	
V50	2009	AW50/51AW D	EPS	Sys. Info.	
V50	2009	AW50/51AW D	EPS	Read code	
V50	2009	AW50/51AW D	EPS	Clear code	
V50	2009	AW50/51AW D	EPS	Data stream	
V50	2009	AW50/51AW D	PAM	Sys. Info.	
V50	2009	AW50/51AW D	PAM	Read code	
V50	2009	AW50/51AW D	PAM	Clear code	
V50	2009	AW50/51AW D	PAM	Data stream	
V50	2009	AW50/51AW D	IAM	Sys. Info.	
V50	2009	AW50/51AW D	IAM	Read code	
V50	2009	AW50/51AW D	IAM	Clear code	
V50	2009	AW50/51AW D	IAM	Data stream	
V50	2009	AW50/51AW D	IAM	Actuation	
V50	2009	AW50/51AW D	AFM	Sys. Info.	
V50	2009	AW50/51AW D	AFM	Read code	
V50	2009	AW50/51AW D	AFM	Clear code	
V50	2009	AW50/51AW D	AFM	Data stream	
V50	2009	AW50/51AW D	AFM	Actuation	
V50	2009	AW50/51AW D	MPM	Sys. Info.	
V50	2009	AW50/51AW D	MPM	Read code	
V50	2009	AW50/51AW D	MPM	Clear code	
V50	2009	AW50/51AW D	MPM	Data stream	
V50	2009	AW50/51AW D	MPM	Actuation	
V50	2009	AW50/51AW D	CPM	Sys. Info.	
V50	2009	AW50/51AW D	CPM	Read code	
V50	2009	AW50/51AW D	CPM	Clear code	
V50	2009	AW50/51AW D	CPM	Data stream	
V50	2009	AW50/51AW D	CPM	Actuation	
V50	2010 - 2012	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero

model	year	type	system	function	subfunction
V50	2010 - 2012	B5244S4	ECM	Sys. Info.	
V50	2010 - 2012	B5244S4	ECM	Read code	
V50	2010 - 2012	B5244S4	ECM	Clear code	
V50	2010 - 2012	B5244S4	ECM	Data stream	
V50	2010 - 2012	B5244S4	ECM	Actuation	
V50	2010 - 2012	B5244S4	ECM	Freeze frame	
V50	2010 - 2012	B5244S4	ECM	Special functions	Resetting the adaptation values
V50	2010 - 2012	B5244S5	ECM	Sys. Info.	
V50	2010 - 2012	B5244S5	ECM	Read code	
V50	2010 - 2012	B5244S5	ECM	Clear code	
V50	2010 - 2012	B5244S5	ECM	Data stream	
V50	2010 - 2012	B5244S5	ECM	Actuation	
V50	2010 - 2012	B5244S5	ECM	Freeze frame	
V50	2010 - 2012	B5244S5	ECM	Special functions	Resetting the adaptation values
V50	2010 - 2012	B5244S7	ECM	Sys. Info.	
V50	2010 - 2012	B5244S7	ECM	Read code	
V50	2010 - 2012	B5244S7	ECM	Clear code	
V50	2010 - 2012	B5244S7	ECM	Data stream	
V50	2010 - 2012	B5244S7	ECM	Actuation	
V50	2010 - 2012	B5244S7	ECM	Freeze frame	
V50	2010 - 2012	B4204S3	ECM	Sys. Info.	
V50	2010 - 2012	B4204S3	ECM	Read code	
V50	2010 - 2012	B4204S3	ECM	Clear code	
V50	2010 - 2012	B4204S3	ECM	Data stream	
V50	2010 - 2012	B4204S3	ECM	Actuation	
V50	2010 - 2012	B4204S3	ECM	Freeze frame	
V50	2010 - 2012	B5254T2	ECM	Sys. Info.	
V50	2010 - 2012	B5254T2	ECM	Read code	
V50	2010 - 2012	B5254T2	ECM	Clear code	
V50	2010 - 2012	B5254T2	ECM	Data stream	
V50	2010 - 2012	B5254T2	ECM	Actuation	
V50	2010 - 2012	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V50	2010 - 2012	B5254T3	ECM	Sys. Info.	
V50	2010 - 2012	B5254T3	ECM	Read code	
V50	2010 - 2012	B5254T3	ECM	Clear code	
V50	2010 - 2012	B5254T3	ECM	Data stream	
V50	2010 - 2012	B5254T3	ECM	Actuation	
V50	2010 - 2012	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V50	2010 - 2012	B5254T7	ECM	Sys. Info.	
V50	2010 - 2012	B5254T7	ECM	Read code	
V50	2010 - 2012	B5254T7	ECM	Clear code	
V50	2010 - 2012	B5254T7	ECM	Data stream	
V50	2010 - 2012	B5254T7	ECM	Actuation	
V50	2010 - 2012	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V50	2010 - 2012	B5204T5	ECM	Sys. Info.	
V50	2010 - 2012	B5204T5	ECM	Read code	
V50	2010 - 2012	B5204T5	ECM	Clear code	
V50	2010 - 2012	B5204T5	ECM	Data stream	
V50	2010 - 2012	B5204T5	ECM	Actuation	
V50	2010 - 2012	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50	2010 - 2012	B6294T	ECM	Sys. Info.	
V50	2010 - 2012	B6294T	ECM	Read code	
V50	2010 - 2012	B6294T	ECM	Clear code	
V50	2010 - 2012	B6294T	ECM	Data stream	
V50	2010 - 2012	B6294T	ECM	Actuation	
V50	2010 - 2012	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V50	2010 - 2012	B4164S3	ECM	Sys. Info.	
V50	2010 - 2012	B4164S3	ECM	Read code	
V50	2010 - 2012	B4164S3	ECM	Clear code	
V50	2010 - 2012	B4164S3	ECM	Data stream	
V50	2010 - 2012	B4164S3	ECM	Actuation	
V50	2010 - 2012	B4164S3	ECM	Freeze frame	
V50	2010 - 2012	B4164S3	ECM	Special functions	Resetting the adaptation values
V50	2010 - 2012	B5244T5	ECM	Sys. Info.	
V50	2010 - 2012	B5244T5	ECM	Read code	
V50	2010 - 2012	B5244T5	ECM	Clear code	
V50	2010 - 2012	B5244T5	ECM	Data stream	
V50	2010 - 2012	B5244T5	ECM	Actuation	
V50	2010 - 2012	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V50	2010 - 2012	B4184S11	ECM	Sys. Info.	
V50	2010 - 2012	B4184S11	ECM	Read code	
V50	2010 - 2012	B4184S11	ECM	Clear code	
V50	2010 - 2012	B4184S11	ECM	Data stream	
V50	2010 - 2012	B4184S11	ECM	Actuation	
V50	2010 - 2012	B4184S11	ECM	Freeze frame	
V50	2010 - 2012	B4184S11	ECM	Special functions	Resetting the adaptation values
V50	2010 - 2012	D5244T	Diesel Eng	Sys. Info.	
V50	2010 - 2012	D5244T	Diesel Eng	Read code	

model	year	type	system	function	subfunction
V50	2010 - 2012	D5244T	Diesel Eng	Clear code	
V50	2010 - 2012	D5244T	Diesel Eng	Data stream	
V50	2010 - 2012	D5244T	Diesel Eng	Actuation	
V50	2010 - 2012	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50	2010 - 2012	D5244T4	Diesel Eng	Sys. Info.	
V50	2010 - 2012	D5244T4	Diesel Eng	Read code	
V50	2010 - 2012	D5244T4	Diesel Eng	Clear code	
V50	2010 - 2012	D5244T4	Diesel Eng	Data stream	
V50	2010 - 2012	D5244T4	Diesel Eng	Actuation	
V50	2010 - 2012	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V50	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50	2010 - 2012	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V50	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V50	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V50	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50	2010 - 2012	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V50	2010 - 2012	D5244T5	Diesel Eng	Sys. Info.	
V50	2010 - 2012	D5244T5	Diesel Eng	Read code	
V50	2010 - 2012	D5244T5	Diesel Eng	Clear code	
V50	2010 - 2012	D5244T5	Diesel Eng	Data stream	
V50	2010 - 2012	D5244T5	Diesel Eng	Actuation	
V50	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V50	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V50	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V50	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V50	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50	2010 - 2012	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V50	2010 - 2012	D5244T8	Diesel Eng	Sys. Info.	
V50	2010 - 2012	D5244T8	Diesel Eng	Read code	
V50	2010 - 2012	D5244T8	Diesel Eng	Clear code	
V50	2010 - 2012	D5244T8	Diesel Eng	Data stream	
V50	2010 - 2012	D5244T8	Diesel Eng	Actuation	
V50	2010 - 2012	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V50	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V50	2010 - 2012	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V50	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V50	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V50	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V50	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V50	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V50	2010 - 2012	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V50	2010 - 2012	D4164T	Diesel Eng	Sys. Info.	
V50	2010 - 2012	D4164T	Diesel Eng	Read code	
V50	2010 - 2012	D4164T	Diesel Eng	Clear code	
V50	2010 - 2012	D4164T	Diesel Eng	Data stream	
V50	2010 - 2012	D4164T	Diesel Eng	Actuation	
V50	2010 - 2012	D4164T	Diesel Eng	Freeze frame	
V50	2010 - 2012	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50	2010 - 2012	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50	2010 - 2012	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V50	2010 - 2012	D4204T	Diesel Eng	Sys. Info.	
V50	2010 - 2012	D4204T	Diesel Eng	Read code	
V50	2010 - 2012	D4204T	Diesel Eng	Clear code	
V50	2010 - 2012	D4204T	Diesel Eng	Data stream	
V50	2010 - 2012	D4204T	Diesel Eng	Actuation	
V50	2010 - 2012	D4204T	Diesel Eng	Freeze frame	
V50	2010 - 2012	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V50	2010 - 2012	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V50	2010 - 2012	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V50	2010 - 2012	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V50	2010 - 2012	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V50	2010 - 2012	AW55-50/51SN	TCM	Sys. Info.	
V50	2010 - 2012	AW55-50/51SN	TCM	Read code	
V50	2010 - 2012	AW55-50/51SN	TCM	Clear code	
V50	2010 - 2012	AW55-50/51SN	TCM	Data stream	
V50	2010 - 2012	AW55-50/51SN	TCM	Actuation	
V50	2010 - 2012	AW55-50/51SN	TCM	Freeze frame	

model	year	type	system	function	subfunction
V50	2010 - 2012	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
V50	2010 - 2012	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2010 - 2012	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
V50	2010 - 2012	4T65AWD	TCM	Special functions	Reset adaptation to zero
V50	2010 - 2012	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2010 - 2012	TF-80SC	TCM	Sys. Info.	
V50	2010 - 2012	TF-80SC	TCM	Read code	
V50	2010 - 2012	TF-80SC	TCM	Clear code	
V50	2010 - 2012	TF-80SC	TCM	Data stream	
V50	2010 - 2012	TF-80SC	TCM	Actuation	
V50	2010 - 2012	TF-80SC	TCM	Special functions	Reset adaptation to zero
V50	2010 - 2012	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2010 - 2012	TF-80SC	TCM	Special functions	Calibration of position sensor
V50	2010 - 2012	AW50/51AW D	TCM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	TCM	Read code	
V50	2010 - 2012	AW50/51AW D	TCM	Clear code	
V50	2010 - 2012	AW50/51AW D	TCM	Data stream	
V50	2010 - 2012	AW50/51AW D	TCM	Actuation	
V50	2010 - 2012	AW50/51AW D	TCM	Freeze frame	
V50	2010 - 2012	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V50	2010 - 2012	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V50	2010 - 2012	AW50/51AW D	ABS	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	ABS	Read code	
V50	2010 - 2012	AW50/51AW D	ABS	Clear code	
V50	2010 - 2012	AW50/51AW D	ABS	Data stream	
V50	2010 - 2012	AW50/51AW D	ABS	Actuation	
V50	2010 - 2012	AW50/51AW D	ABS	Freeze frame	
V50	2010 - 2012	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V50	2010 - 2012	AW50/51AW D	ABS	Special functions	Reading off the configuration
V50	2010 - 2012	AW50/51AW D	ABS	Special functions	Calibration
V50	2010 - 2012	AW50/51AW D	SRS	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	SRS	Read code	
V50	2010 - 2012	AW50/51AW D	SRS	Clear code	
V50	2010 - 2012	AW50/51AW D	SRS	Data stream	
V50	2010 - 2012	AW50/51AW D	SRS	Freeze frame	
V50	2010 - 2012	AW50/51AW D	CEM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	CEM	Read code	
V50	2010 - 2012	AW50/51AW D	CEM	Clear code	
V50	2010 - 2012	AW50/51AW D	CEM	Data stream	
V50	2010 - 2012	AW50/51AW D	CEM	Actuation	
V50	2010 - 2012	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V50	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming control module
V50	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V50	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting low voltage counters



model	year	type	system	function	subfunction
V50	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting crash mode
V50	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V50	2010 - 2012	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V50	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V50	2010 - 2012	AW50/51AW D	CEM	Special functions	Ignition switch key position
V50	2010 - 2012	AW50/51AW D	CCM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	CCM	Read code	
V50	2010 - 2012	AW50/51AW D	CCM	Clear code	
V50	2010 - 2012	AW50/51AW D	CCM	Data stream	
V50	2010 - 2012	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
V50	2010 - 2012	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V50	2010 - 2012	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V50	2010 - 2012	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V50	2010 - 2012	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V50	2010 - 2012	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V50	2010 - 2012	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V50	2010 - 2012	AW50/51AW D	DDM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	DDM	Read code	
V50	2010 - 2012	AW50/51AW D	DDM	Clear code	
V50	2010 - 2012	AW50/51AW D	DDM	Data stream	
V50	2010 - 2012	AW50/51AW D	DDM	Actuation	
V50	2010 - 2012	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V50	2010 - 2012	AW50/51AW D	DIM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	DIM	Read code	
V50	2010 - 2012	AW50/51AW D	DIM	Clear code	
V50	2010 - 2012	AW50/51AW D	DIM	Data stream	
V50	2010 - 2012	AW50/51AW D	DIM	Actuation	
V50	2010 - 2012	AW50/51AW D	DIM	Freeze frame	
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Reseting the service reminder indicator(SRI) (*)
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder

model	year	type	system	function	subfunction
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Display of DSTC message
V50	2010 - 2012	AW50/51AW D	DIM	Special functions	Read out programmed values
V50	2010 - 2012	AW50/51AW D	PDM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	PDM	Read code	
V50	2010 - 2012	AW50/51AW D	PDM	Clear code	
V50	2010 - 2012	AW50/51AW D	PDM	Data stream	
V50	2010 - 2012	AW50/51AW D	PDM	Actuation	
V50	2010 - 2012	AW50/51AW D	PDM	Special functions	Initialize the window(*)
V50	2010 - 2012	AW50/51AW D	SWM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	SWM	Read code	
V50	2010 - 2012	AW50/51AW D	SWM	Clear code	
V50	2010 - 2012	AW50/51AW D	SWM	Data stream	
V50	2010 - 2012	AW50/51AW D	PSM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	PSM	Read code	
V50	2010 - 2012	AW50/51AW D	PSM	Clear code	
V50	2010 - 2012	AW50/51AW D	PSM	Data stream	
V50	2010 - 2012	AW50/51AW D	PSM	Actuation	
V50	2010 - 2012	AW50/51AW D	PHM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	PHM	Read code	
V50	2010 - 2012	AW50/51AW D	PHM	Clear code	
V50	2010 - 2012	AW50/51AW D	PHM	Data stream	
V50	2010 - 2012	AW50/51AW D	PHM	Actuation	
V50	2010 - 2012	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V50	2010 - 2012	AW50/51AW D	AUD	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	AUD	Read code	
V50	2010 - 2012	AW50/51AW D	AUD	Clear code	
V50	2010 - 2012	AW50/51AW D	DEM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	DEM	Read code	
V50	2010 - 2012	AW50/51AW D	DEM	Clear code	
V50	2010 - 2012	AW50/51AW D	DEM	Data stream	
V50	2010 - 2012	AW50/51AW D	ICM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	ICM	Read code	
V50	2010 - 2012	AW50/51AW D	ICM	Clear code	
V50	2010 - 2012	AW50/51AW D	ICM	Data stream	
V50	2010 - 2012	AW50/51AW D	ICM	Actuation	
V50	2010 - 2012	AW50/51AW D	MMM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	MMM	Read code	

model	year	type	system	function	subfunction
V50	2010 - 2012	AW50/51AW D	MMM	Clear code	
V50	2010 - 2012	AW50/51AW D	MMM	Data stream	
V50	2010 - 2012	AW50/51AW D	AEM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	AEM	Read code	
V50	2010 - 2012	AW50/51AW D	AEM	Clear code	
V50	2010 - 2012	AW50/51AW D	AEM	Data stream	
V50	2010 - 2012	AW50/51AW D	AEM	Actuation	
V50	2010 - 2012	AW50/51AW D	ADM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	ADM	Read code	
V50	2010 - 2012	AW50/51AW D	ADM	Clear code	
V50	2010 - 2012	AW50/51AW D	ADM	Data stream	
V50	2010 - 2012	AW50/51AW D	EPS	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	EPS	Read code	
V50	2010 - 2012	AW50/51AW D	EPS	Clear code	
V50	2010 - 2012	AW50/51AW D	EPS	Data stream	
V50	2010 - 2012	AW50/51AW D	PAM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	PAM	Read code	
V50	2010 - 2012	AW50/51AW D	PAM	Clear code	
V50	2010 - 2012	AW50/51AW D	PAM	Data stream	
V50	2010 - 2012	AW50/51AW D	IAM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	IAM	Read code	
V50	2010 - 2012	AW50/51AW D	IAM	Clear code	
V50	2010 - 2012	AW50/51AW D	IAM	Data stream	
V50	2010 - 2012	AW50/51AW D	IAM	Actuation	
V50	2010 - 2012	AW50/51AW D	AFM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	AFM	Read code	
V50	2010 - 2012	AW50/51AW D	AFM	Clear code	
V50	2010 - 2012	AW50/51AW D	AFM	Data stream	
V50	2010 - 2012	AW50/51AW D	AFM	Actuation	
V50	2010 - 2012	AW50/51AW D	MPM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	MPM	Read code	
V50	2010 - 2012	AW50/51AW D	MPM	Clear code	
V50	2010 - 2012	AW50/51AW D	MPM	Data stream	
V50	2010 - 2012	AW50/51AW D	MPM	Actuation	
V50	2010 - 2012	AW50/51AW D	CPM	Sys. Info.	
V50	2010 - 2012	AW50/51AW D	CPM	Read code	
V50	2010 - 2012	AW50/51AW D	CPM	Clear code	
V50	2010 - 2012	AW50/51AW D	CPM	Data stream	
V50	2010 - 2012	AW50/51AW D	CPM	Actuation	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2010 - 2012	AW50/51AW D	ShortTest	Special functions	search all system and DTC(s) of vehicle
V70 XC(01- )/XC70(- 07)	2001	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70 XC(01- )/XC70(- 07)	2001	B5244S	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B5244S	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B5244S	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B5244S	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B5244S	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B6304S3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B6304S3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B6304S3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B6304S3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B6304S3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B6294T	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B6294T	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B6294T	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B6294T	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B6294T	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B6294T	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2001	B6284T	ECM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	B6284T	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B6284T	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B6284T	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B6284T	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B5204T4	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B5204T4	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B5204T4	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B5204T4	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B5204T4	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B5204T3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B5204T3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B5204T3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B5204T3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B5204T3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B5244SG	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B5244SG	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B5244SG	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B5244SG	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B5244SG	ECM	Actuation	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	B6294S2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B6294S2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B6294S2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B6294S2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B6294S2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B5244S2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B5244S2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B5244S2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B5244S2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B5244S2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B5254T2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B5254T2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B5254T2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B5254T2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B5254T2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B5254T2	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2001	B5234T3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B5234T3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B5234T3	ECM	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	B5234T3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B5234T3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B5204T5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B5204T5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B5204T5	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B5204T5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B5204T5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B5254T4	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B5254T4	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B5254T4	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B5254T4	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B5254T4	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B6294S	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B6294S	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B6294S	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B6294S	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B6294S	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B5244T7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B5244T7	ECM	Read code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	B5244T7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B5244T7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B5244T7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B5244T7	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2001	B5234T7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	B5234T7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2001	B5234T7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	B5234T7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	B5234T7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	B5234T7	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2001	AW55-50SN	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	AW55-50SN	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2001	AW55-50SN	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	AW55-50SN	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	AW55-50SN	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	AW55-50SN	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2001	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2001	4T65EV-GT	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65EV-GT	TCM	Read code	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	4T65EV-GT	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65EV-GT	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65EV-GT	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2001	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2001	AW50-42	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	AW50-42	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2001	AW50-42	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	AW50-42	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	AW50-42	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	AW50-42	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2001	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2001	AW50/51AW D	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	AW50/51AW D	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2001	AW50/51AW D	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	AW50/51AW D	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	AW50/51AW D	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2001	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	TF-80SC	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	TF-80SC	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2001	TF-80SC	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	TF-80SC	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	TF-80SC	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	TF-80SC	TCM	Special functions	Resetting the adaptation
V70 XC(01- )/XC70(- 07)	2001	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
V70 XC(01- )/XC70(- 07)	2001	4T65EV	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65EV	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65EV	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65EV	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65EV	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	ABS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	ABS	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	ABS	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	ABS	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	ABS	Actuation	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	ABS	Special functions	Calibration
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SRS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SRS	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SRS	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SRS	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SRS	Freeze frame	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CEM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CEM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CEM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CEM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CEM	Special functions	Reading alarm cause(*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CEM	Special functions	Resetting the factory settings

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	UEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	UEM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	UEM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	UEM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	UEM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	UEM	Special functions	Configuration of the siren
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	UEM	Special functions	Programming the control unit
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	UEM	Special functions	Reading the programmed values
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	REM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	REM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	REM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	REM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	REM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Actuation	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Freeze frame	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Resetting the service reminder(SRI) (*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Programming of clock (*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Programming of zeros (*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Programming parking brake warning
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Programming instrument lighting
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Display of DSTC message
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DIM	Special functions	Read out programmed values
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PDM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PDM	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PDM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PDM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PSM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PSM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PSM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PSM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PSM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DDM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DDM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DDM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DDM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	DDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CCM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CCM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CCM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CCM	Special functions	Programming the seat temperature
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PHM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PHM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PHM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PHM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	AUM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	AUM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	AUM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	AUM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SWM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SWM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SWM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SWM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SAS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SAS	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SAS	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	SAS	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	RTI	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	RTI	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	RTI	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	AEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	AEM	Read code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	AEM	Clear code	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	AEM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	AEM	Actuation	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CPM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CPM	Data stream	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	CPM	Special functions	Programming the additional and parking heater
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	ETM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2001	4T65AWD	ETM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70 XC(01- )/XC70(- 07)	2002	B5244S	ECM	Sys. Info.	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	B5244S	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B5244S	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B5244S	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B5244S	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B6304S3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B6304S3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B6304S3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B6304S3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B6304S3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B6294T	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B6294T	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B6294T	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B6294T	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B6294T	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B6294T	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2002	B6284T	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B6284T	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B6284T	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B6284T	ECM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	B6284T	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B5204T4	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B5204T4	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B5204T4	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B5204T4	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B5204T4	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B5204T3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B5204T3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B5204T3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B5204T3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B5204T3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B5244SG	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B5244SG	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B5244SG	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B5244SG	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B5244SG	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B6294S2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B6294S2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B6294S2	ECM	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	B6294S2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B6294S2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B5244S2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B5244S2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B5244S2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B5244S2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B5244S2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B5244S2	ECM	Special functions	Quick test of the fuel tank system
V70 XC(01- )/XC70(- 07)	2002	B5254T2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B5254T2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B5254T2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B5254T2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B5254T2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B5254T2	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2002	B5234T3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B5234T3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B5234T3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B5234T3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B5234T3	ECM	Actuation	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	B5204T5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B5204T5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B5204T5	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B5204T5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B5204T5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B5254T4	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B5254T4	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B5254T4	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B5254T4	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B5254T4	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B6294S	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B6294S	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B6294S	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B6294S	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B6294S	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B5244T7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B5244T7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B5244T7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B5244T7	ECM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	B5244T7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B5244T7	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2002	B5234T7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	B5234T7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2002	B5234T7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	B5234T7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	B5234T7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	B5234T7	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2002	AW55-50SN	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	AW55-50SN	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2002	AW55-50SN	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	AW55-50SN	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	AW55-50SN	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	AW55-50SN	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2002	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2002	4T65EV-GT	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65EV-GT	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65EV-GT	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65EV-GT	TCM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	4T65EV-GT	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2002	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2002	AW50-42	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	AW50-42	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2002	AW50-42	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	AW50-42	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	AW50-42	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	AW50-42	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2002	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2002	AW50/51AW D	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	AW50/51AW D	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2002	AW50/51AW D	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	AW50/51AW D	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	AW50/51AW D	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2002	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2002	TF-80SC	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	TF-80SC	TCM	Read code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	TF-80SC	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	TF-80SC	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	TF-80SC	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	TF-80SC	TCM	Special functions	Resetting the adaptation
V70 XC(01- )/XC70(- 07)	2002	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
V70 XC(01- )/XC70(- 07)	2002	4T65EV	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65EV	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65EV	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65EV	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65EV	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	ABS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	ABS	Read code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	ABS	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	ABS	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	ABS	Actuation	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	ABS	Special functions	Calibration
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SRS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SRS	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SRS	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SRS	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SRS	Freeze frame	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CEM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CEM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CEM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CEM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CEM	Special functions	Reading alarm cause(*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CEM	Special functions	Resetting the factory settings
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	UEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	UEM	Read code	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	UEM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	UEM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	UEM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	UEM	Special functions	Configuration of the siren
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	UEM	Special functions	Programming the control unit
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	UEM	Special functions	Reading the programmed values
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	REM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	REM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	REM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	REM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	REM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Freeze frame	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Programming of clock (*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Programming of zeros (*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Programming parking brake warning
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal, seat belt reminder
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Programming instrument lighting
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Programming text message, seatbelt reminder
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Display of DSTC message
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DIM	Special functions	Read out programmed values
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PDM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PDM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PDM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PDM	Actuation	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PSM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PSM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PSM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PSM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PSM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DDM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DDM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DDM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DDM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	DDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CCM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CCM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CCM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CCM	Special functions	Programming the seat temperature
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PHM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PHM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PHM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PHM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	AUM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	AUM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	AUM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	AUM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SWM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SWM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SWM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SWM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SAS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SAS	Read code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SAS	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	SAS	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	RTI	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	RTI	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	RTI	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	AEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	AEM	Read code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	AEM	Clear code	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	AEM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	AEM	Actuation	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CPM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CPM	Data stream	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	CPM	Special functions	Programming the additional and parking heater
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	ETM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2002	4T65AWD	ETM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70 XC(01- )/XC70(- 07)	2003	B5244S	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B5244S	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B5244S	ECM	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	B5244S	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B5244S	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B6304S3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B6304S3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B6304S3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B6304S3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B6304S3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B6294T	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B6294T	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B6294T	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B6294T	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B6294T	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B6294T	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2003	B6284T	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B6284T	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B6284T	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B6284T	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B6284T	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B5204T4	ECM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	B5204T4	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B5204T4	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B5204T4	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B5204T4	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B5204T3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B5204T3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B5204T3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B5204T3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B5204T3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B5244SG	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B5244SG	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B5244SG	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B5244SG	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B5244SG	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B6294S2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B6294S2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B6294S2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B6294S2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B6294S2	ECM	Actuation	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	B5244S2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B5244S2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B5244S2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B5244S2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B5244S2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B5254T2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B5254T2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B5254T2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B5254T2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B5254T2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B5254T2	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2003	B5234T3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B5234T3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B5234T3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B5234T3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B5234T3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B5204T5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B5204T5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B5204T5	ECM	Clear code	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	B5204T5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B5204T5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B5254T4	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B5254T4	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B5254T4	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B5254T4	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B5254T4	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B6294S	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B6294S	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B6294S	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B6294S	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B6294S	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B5244T7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	B5244T7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B5244T7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B5244T7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B5244T7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B5244T7	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2003	B5234T7	ECM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	B5234T7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2003	B5234T7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	B5234T7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	B5234T7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	B5234T7	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2003	D5244T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	D5244T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2003	D5244T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2003	D5244T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2003	D5244T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2003	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70 XC(01- )/XC70(- 07)	2003	D5252T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	D5252T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2003	D5252T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2003	D5252T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2003	D5252T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2003	D5252T	Diesel Eng	Special functions	Programming the idle speed
V70 XC(01- )/XC70(- 07)	2003	AW55-50SN	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	AW55-50SN	TCM	Read code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	AW55-50SN	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	AW55-50SN	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	AW55-50SN	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	AW55-50SN	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2003	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2003	4T65EV-GT	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65EV-GT	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65EV-GT	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65EV-GT	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65EV-GT	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2003	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2003	AW50-42	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	AW50-42	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2003	AW50-42	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	AW50-42	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	AW50-42	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	AW50-42	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2003	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	AW50/51AW D	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	AW50/51AW D	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2003	AW50/51AW D	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	AW50/51AW D	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	AW50/51AW D	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2003	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2003	TF-80SC	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	TF-80SC	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2003	TF-80SC	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	TF-80SC	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	TF-80SC	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	TF-80SC	TCM	Special functions	Resetting the adaptation
V70 XC(01- )/XC70(- 07)	2003	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
V70 XC(01- )/XC70(- 07)	2003	4T65EV	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65EV	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65EV	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65EV	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65EV	TCM	Actuation	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	ABS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	ABS	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	ABS	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	ABS	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	ABS	Actuation	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	ABS	Special functions	Calibration
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SRS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SRS	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SRS	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SRS	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SRS	Freeze frame	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CEM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CEM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CEM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CEM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CEM	Special functions	Reading alarm cause(*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CEM	Special functions	Resetting the factory settings
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	UEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	UEM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	UEM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	UEM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	UEM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	UEM	Special functions	Configuration of the siren
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	UEM	Special functions	Programming the control unit
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	UEM	Special functions	Reading the programmed values
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	REM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	REM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	REM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	REM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	REM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Freeze frame	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Programming of clock (*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Programming of zeros (*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Programming parking brake warning
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal, seat belt reminder

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Programming instrument lighting
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Display of DSTC message
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DIM	Special functions	Read out programmed values
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PDM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PDM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PDM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PDM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PSM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PSM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PSM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PSM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PSM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DDM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DDM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DDM	Data stream	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DDM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CCM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CCM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CCM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CCM	Special functions	Self-adjustment of adammer motor end stops(*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CCM	Special functions	Programming the seat temperature
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PHM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PHM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PHM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PHM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	AUM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	AUM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	AUM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	AUM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SWM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SWM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SWM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SWM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DEM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DEM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	DEM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SAS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SAS	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SAS	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	SAS	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	RTI	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	RTI	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	RTI	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	AEM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	AEM	Read code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	AEM	Clear code	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	AEM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	AEM	Actuation	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CPM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CPM	Data stream	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	CPM	Special functions	Programming the additional and parking heater
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	ETM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2003	4T65AWD	ETM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70 XC(01- )/XC70(- 07)	2004	B5244S	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B5244S	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B5244S	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B5244S	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B5244S	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B6304S3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B6304S3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B6304S3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B6304S3	ECM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	B6304S3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B6294T	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B6294T	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B6294T	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B6294T	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B6294T	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B6294T	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2004	B6284T	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B6284T	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B6284T	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B6284T	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B6284T	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B5204T4	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B5204T4	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B5204T4	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B5204T4	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B5204T4	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B5204T3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B5204T3	ECM	Read code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	B5204T3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B5204T3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B5204T3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B5244SG	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B5244SG	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B5244SG	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B5244SG	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B5244SG	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B6294S2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B6294S2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B6294S2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B6294S2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B6294S2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B5244S2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B5244S2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B5244S2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B5244S2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B5244S2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B5254T2	ECM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	B5254T2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B5254T2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B5254T2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B5254T2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B5254T2	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2004	B5234T3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B5234T3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B5234T3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B5234T3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B5234T3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B5204T5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B5204T5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B5204T5	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B5204T5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B5204T5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B5254T4	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B5254T4	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B5254T4	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B5254T4	ECM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	B5254T4	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B6294S	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B6294S	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B6294S	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B6294S	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B6294S	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B5244T7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B5244T7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B5244T7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B5244T7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B5244T7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B5244T7	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2004	B5234T7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	B5234T7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2004	B5234T7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	B5234T7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	B5234T7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	B5234T7	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2004	D5244T	Diesel Eng	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	D5244T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2004	D5244T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2004	D5244T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2004	D5244T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2004	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70 XC(01- )/XC70(- 07)	2004	D5252T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	D5252T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2004	D5252T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2004	D5252T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2004	D5252T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2004	D5252T	Diesel Eng	Special functions	Programming the idle speed
V70 XC(01- )/XC70(- 07)	2004	AW55-50SN	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	AW55-50SN	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2004	AW55-50SN	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	AW55-50SN	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	AW55-50SN	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	AW55-50SN	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2004	AW55-50SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2004	4T65EV-GT	TCM	Sys. Info.	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	4T65EV-GT	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65EV-GT	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65EV-GT	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65EV-GT	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65EV-GT	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2004	4T65EV-GT	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2004	AW50-42	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	AW50-42	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2004	AW50-42	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	AW50-42	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	AW50-42	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	AW50-42	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2004	AW50-42	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2004	AW50/51AW D	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	AW50/51AW D	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2004	AW50/51AW D	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	AW50/51AW D	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	AW50/51AW D	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	AW50/51AW D	TCM	Special functions	Reset adaptation to zero

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2004	TF-80SC	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	TF-80SC	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2004	TF-80SC	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	TF-80SC	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	TF-80SC	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	TF-80SC	TCM	Special functions	Resetting the adaptation
V70 XC(01- )/XC70(- 07)	2004	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
V70 XC(01- )/XC70(- 07)	2004	4T65EV	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65EV	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65EV	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65EV	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65EV	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	TCM	Special functions	Reset adaptation to zero

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	ABS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	ABS	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	ABS	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	ABS	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	ABS	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	ABS	Special functions	Calibration
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SRS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SRS	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SRS	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SRS	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SRS	Freeze frame	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CEM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CEM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CEM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CEM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CEM	Special functions	Reading alarm cause(*)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CEM	Special functions	Resetting the factory settings
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	UEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	UEM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	UEM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	UEM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	UEM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	UEM	Special functions	Configuration of the siren
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	UEM	Special functions	Programming the control unit
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	UEM	Special functions	Reading the programmed values
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	REM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	REM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	REM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	REM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	REM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Freeze frame	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Programming the distance covered for service (*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Programming the service time parameters (*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Programming the engine service time parameters (*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Programming units of measurement for temperature (*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Programming of trip computer unit (*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Programming of clock (*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Programming of zeros (*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Programming parking brake warning
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Programming instrument lighting
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Programming text message,seatbelt reminder
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Display of DSTC message
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DIM	Special functions	Read out programmed values
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PDM	Read code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PDM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PDM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PDM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PSM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PSM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PSM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PSM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PSM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DDM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DDM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DDM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DDM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CCM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CCM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CCM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CCM	Special functions	Reading-out programmed parameters(*)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CCM	Special functions	Programming the climate control module (CCM)
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CCM	Special functions	Programming the seat temperature
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PHM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PHM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PHM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PHM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	PHM	Special functions	Reinstalling the reserve battery
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	AUM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	AUM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	AUM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	AUM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SWM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SWM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SWM	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SWM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DEM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DEM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	DEM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SAS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SAS	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SAS	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	SAS	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	RTI	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	RTI	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	RTI	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	AEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	AEM	Read code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	AEM	Clear code	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	AEM	Data stream	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	AEM	Actuation	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CPM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CPM	Data stream	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	CPM	Special functions	Programming the additional and parking heater
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	ETM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2004	4T65AWD	ETM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	4T65AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70 XC(01- )/XC70(- 07)	2005	B5244S4	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	B5244S4	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B5244S4	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	B5244S4	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B5244S4	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B5244S4	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2005	B5244S5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	B5244S5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B5244S5	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	B5244S5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B5244S5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B5244S5	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2005	B5244S7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	B5244S7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B5244S7	ECM	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	B5244S7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B5244S7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B4204S3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	B4204S3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B4204S3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	B4204S3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B4204S3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B5254T2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	B5254T2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B5254T2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	B5254T2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B5254T2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2005	B5254T3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	B5254T3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B5254T3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	B5254T3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B5254T3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	B5254T7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	B5254T7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B5254T7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	B5254T7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B5254T7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2005	B5204T5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	B5204T5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B5204T5	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	B5204T5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B5204T5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2005	B6294T	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	B6294T	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B6294T	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	B6294T	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B6294T	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2005	B4164S3	ECM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	B4164S3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B4164S3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	B4164S3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B4164S3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B4164S3	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2005	B5244T5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	B5244T5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B5244T5	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	B5244T5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B5244T5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2005	B4184S11	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	B4184S11	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2005	B4184S11	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	B4184S11	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	B4184S11	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	B4184S11	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2005	D5244T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	D5244T	Diesel Eng	Read code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	D5244T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2005	D5244T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2005	D5244T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2005	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70 XC(01- )/XC70(- 07)	2005	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70 XC(01- )/XC70(- 07)	2005	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70 XC(01- )/XC70(- 07)	2005	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2005	D4164T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	D4164T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2005	D4164T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2005	D4164T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2005	D4164T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2005	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70 XC(01- )/XC70(- 07)	2005	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70 XC(01- )/XC70(- 07)	2005	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2005	D4204T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	D4204T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2005	D4204T	Diesel Eng	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	D4204T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2005	D4204T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2005	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70 XC(01- )/XC70(- 07)	2005	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2005	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70 XC(01- )/XC70(- 07)	2005	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70 XC(01- )/XC70(- 07)	2005	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2005	AW55- 50/51SN	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW55- 50/51SN	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW55- 50/51SN	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW55- 50/51SN	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW55- 50/51SN	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	AW55- 50/51SN	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2005	AW55- 50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2005	AW55- 50/51SN	TCM	Special functions	Calibration of position sensor
V70 XC(01- )/XC70(- 07)	2005	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2005	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2005	TF-80SC	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	TF-80SC	TCM	Read code	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	TF-80SC	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	TF-80SC	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	TF-80SC	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	TF-80SC	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2005	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2005	TF-80SC	TCM	Special functions	Calibration of position sensor
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TCM	Freeze frame	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	ABS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	ABS	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	ABS	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	ABS	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	ABS	Actuation	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	ABS	Freeze frame	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	ABS	Special functions	Reading off the configuration
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	ABS	Special functions	Calibration
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SRS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SRS	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SRS	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SRS	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SRS	Freeze frame	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Special functions	Programming control module
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Special functions	Resetting crash mode

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CEM	Special functions	Ignition switch key position
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	UEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	UEM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	UEM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	UEM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	UEM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	UEM	Special functions	Configuration of the siren
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	UEM	Special functions	Programming the control unit
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	UEM	Special functions	Reading the programmed values
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	REM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	REM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	REM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	REM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	REM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Freeze frame	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Resetting the service reminder(SRI) (*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Display of DSTC message

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DIM	Special functions	Read out programmed values
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PDM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PDM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PDM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PDM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PSM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PSM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PSM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PSM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PSM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DDM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DDM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DDM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DDM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CCM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CCM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CCM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CCM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PHM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PHM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PHM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PHM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	AUM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	AUM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	AUM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	AUM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DEM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DEM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DEM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SAS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SAS	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SAS	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SAS	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	RTI	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	RTI	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	RTI	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	AEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	AEM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	AEM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	AEM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	AEM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CPM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CPM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	HCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	HCM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	HCM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	HCM	Special functions	Calibration of position sensor
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	KVM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	KVM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	KVM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	KVM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	KVM	Actuation	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	RDAR	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	RDAR	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	RDAR	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	RDAR	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SUB	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SUB	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SUB	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	SUB	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CVM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CVM	Read code	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CVM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	CVM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DABM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DABM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DABM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	DABM	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PAC	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PAC	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PAC	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	PAC	Data stream	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TRM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TRM	Read code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TRM	Clear code	
V70 XC(01- )/XC70(- 07)	2005	AW50/51AW D	TRM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70 XC(01- )/XC70(- 07)	2006	B5244S4	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	B5244S4	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2006	B5244S4	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	B5244S4	ECM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	B5244S4	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B5244S4	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2006	B5244S5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	B5244S5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2006	B5244S5	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	B5244S5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	B5244S5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B5244S5	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2006	B5244S7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	B5244S7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2006	B5244S7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	B5244S7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	B5244S7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B4204S3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	B4204S3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2006	B4204S3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	B4204S3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	B4204S3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B5254T2	ECM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	B5254T2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2006	B5254T2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	B5254T2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	B5254T2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2006	B5254T3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	B5254T3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2006	B5254T3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	B5254T3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	B5254T3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2006	B5254T7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	B5254T7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2006	B5254T7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	B5254T7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	B5254T7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2006	B5204T5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	B5204T5	ECM	Read code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	B5204T5	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	B5204T5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	B5204T5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2006	B6294T	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	B6294T	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2006	B6294T	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	B6294T	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	B6294T	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2006	B4164S3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	B4164S3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2006	B4164S3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	B4164S3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	B4164S3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B4164S3	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2006	B5244T5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	B5244T5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2006	B5244T5	ECM	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	B5244T5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	B5244T5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2006	B4184S11	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	B4184S11	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2006	B4184S11	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	B4184S11	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	B4184S11	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	B4184S11	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2006	D5244T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	D5244T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2006	D5244T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2006	D5244T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2006	D5244T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2006	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70 XC(01- )/XC70(- 07)	2006	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70 XC(01- )/XC70(- 07)	2006	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70 XC(01- )/XC70(- 07)	2006	D5244T8	Diesel Eng	Special functions	Combustion of soot particles

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	D4164T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	D4164T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2006	D4164T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2006	D4164T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2006	D4164T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2006	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70 XC(01- )/XC70(- 07)	2006	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70 XC(01- )/XC70(- 07)	2006	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2006	D4204T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	D4204T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2006	D4204T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2006	D4204T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2006	D4204T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2006	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70 XC(01- )/XC70(- 07)	2006	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2006	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70 XC(01- )/XC70(- 07)	2006	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70 XC(01- )/XC70(- 07)	2006	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2006	AW55- 50/51SN	TCM	Sys. Info.	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	AW55- 50/51SN	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW55- 50/51SN	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW55- 50/51SN	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW55- 50/51SN	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW55- 50/51SN	TCM	Freeze frame	
V70 XC(01- )/XC70(- 07)	2006	AW55- 50/51SN	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2006	AW55- 50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2006	AW55- 50/51SN	TCM	Special functions	Calibration of position sensor
V70 XC(01- )/XC70(- 07)	2006	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2006	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2006	TF-80SC	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	TF-80SC	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2006	TF-80SC	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	TF-80SC	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	TF-80SC	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	TF-80SC	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2006	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2006	TF-80SC	TCM	Special functions	Calibration of position sensor
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TCM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TCM	Freeze frame	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	ABS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	ABS	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	ABS	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	ABS	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	ABS	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	ABS	Freeze frame	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	ABS	Special functions	Reading off the configuration
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	ABS	Special functions	Calibration
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SRS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SRS	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SRS	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SRS	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SRS	Freeze frame	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Special functions	Programming control module
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Special functions	Resetting crash mode
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CEM	Special functions	Ignition switch key position
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	UEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	UEM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	UEM	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	UEM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	UEM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	UEM	Special functions	Configuration of the siren
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	UEM	Special functions	Programming the control unit
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	UEM	Special functions	Reading the programmed values
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	REM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	REM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	REM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	REM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	REM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Freeze frame	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Resetting the service reminder(SRI) (*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Programming of clock (*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Display of DSTC message
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DIM	Special functions	Read out programmed values
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PDM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PDM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PDM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PDM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PDM	Special functions	Initialize the window(*)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PSM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PSM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PSM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PSM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PSM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DDM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DDM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DDM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DDM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CCM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CCM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CCM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PHM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PHM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PHM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PHM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	AUM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	AUM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	AUM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	AUM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DEM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DEM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DEM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SAS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SAS	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SAS	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SAS	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	RTI	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	RTI	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	RTI	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	AEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	AEM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	AEM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	AEM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	AEM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CPM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CPM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	HCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	HCM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	HCM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	HCM	Special functions	Calibration of position sensor
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	KVM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	KVM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	KVM	Clear code	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	KVM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	KVM	Actuation	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	RDAR	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	RDAR	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	RDAR	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	RDAR	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SUB	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SUB	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SUB	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	SUB	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CVM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CVM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CVM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	CVM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DABM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DABM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DABM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	DABM	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PAC	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PAC	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PAC	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	PAC	Data stream	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TRM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TRM	Read code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TRM	Clear code	
V70 XC(01- )/XC70(- 07)	2006	AW50/51AW D	TRM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70 XC(01- )/XC70(- 07)	2007	B5244S4	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B5244S4	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2007	B5244S4	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	B5244S4	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B5244S4	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	B5244S4	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2007	B5244S5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B5244S5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2007	B5244S5	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	B5244S5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B5244S5	ECM	Actuation	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	B5244S5	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2007	B5244S7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B5244S7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2007	B5244S7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	B5244S7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B5244S7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	B4204S3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B4204S3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2007	B4204S3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	B4204S3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B4204S3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	B5254T2	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B5254T2	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2007	B5254T2	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	B5254T2	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B5254T2	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2007	B5254T3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B5254T3	ECM	Read code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	B5254T3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	B5254T3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B5254T3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2007	B5254T7	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B5254T7	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2007	B5254T7	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	B5254T7	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B5254T7	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2007	B5204T5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B5204T5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2007	B5204T5	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	B5204T5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B5204T5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2007	B6294T	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B6294T	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2007	B6294T	ECM	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	B6294T	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B6294T	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2007	B4164S3	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B4164S3	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2007	B4164S3	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	B4164S3	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B4164S3	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	B4164S3	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2007	B5244T5	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B5244T5	ECM	Read code	
V70 XC(01- )/XC70(- 07)	2007	B5244T5	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	B5244T5	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B5244T5	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
V70 XC(01- )/XC70(- 07)	2007	B5244T5	ECM	Special functions	Quick test of Exhaust camshaft control
V70 XC(01- )/XC70(- 07)	2007	B5244T5	ECM	Special functions	Quick test of intake camshaft control
V70 XC(01- )/XC70(- 07)	2007	B4184S11	ECM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	B4184S11	ECM	Read code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	B4184S11	ECM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	B4184S11	ECM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	B4184S11	ECM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	B4184S11	ECM	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2007	D5244T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	D5244T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2007	D5244T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2007	D5244T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2007	D5244T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2007	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Special functions	Resetting counter oil
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70 XC(01- )/XC70(- 07)	2007	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Special functions	Resetting counter oil
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70 XC(01- )/XC70(- 07)	2007	D5244T5	Diesel Eng	Special functions	Combustion of soot particles

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Special functions	Resetting counter oil
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V70 XC(01- )/XC70(- 07)	2007	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2007	D4164T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	D4164T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2007	D4164T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2007	D4164T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2007	D4164T	Diesel Eng	Actuation	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70 XC(01- )/XC70(- 07)	2007	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70 XC(01- )/XC70(- 07)	2007	D4164T	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2007	D4204T	Diesel Eng	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	D4204T	Diesel Eng	Read code	
V70 XC(01- )/XC70(- 07)	2007	D4204T	Diesel Eng	Clear code	
V70 XC(01- )/XC70(- 07)	2007	D4204T	Diesel Eng	Data stream	
V70 XC(01- )/XC70(- 07)	2007	D4204T	Diesel Eng	Actuation	
V70 XC(01- )/XC70(- 07)	2007	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
V70 XC(01- )/XC70(- 07)	2007	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
V70 XC(01- )/XC70(- 07)	2007	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
V70 XC(01- )/XC70(- 07)	2007	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V70 XC(01- )/XC70(- 07)	2007	D4204T	Diesel Eng	Special functions	Combustion of soot particles
V70 XC(01- )/XC70(- 07)	2007	AW55- 50/51SN	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW55- 50/51SN	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW55- 50/51SN	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW55- 50/51SN	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW55- 50/51SN	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW55- 50/51SN	TCM	Special functions	Reset adaptation to zero

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	AW55- 50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2007	AW55- 50/51SN	TCM	Special functions	Calibration of position sensor
V70 XC(01- )/XC70(- 07)	2007	4T65AWD	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2007	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2007	TF-80SC	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	TF-80SC	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2007	TF-80SC	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	TF-80SC	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	TF-80SC	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	TF-80SC	TCM	Special functions	Reset adaptation to zero
V70 XC(01- )/XC70(- 07)	2007	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2007	TF-80SC	TCM	Special functions	Calibration of position sensor
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TCM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TCM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TCM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TCM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TCM	Freeze frame	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TCM	Special functions	Reset adaptation to zero

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	ABS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	ABS	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	ABS	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	ABS	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	ABS	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	ABS	Freeze frame	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	ABS	Special functions	Reading off the configuration
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	ABS	Special functions	Calibration
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SRS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SRS	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SRS	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SRS	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SRS	Freeze frame	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Special functions	Programming control module
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Special functions	Resetting the factory settings
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Special functions	Resetting crash mode
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CEM	Special functions	Ignition switch key position
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	UEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	UEM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	UEM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	UEM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	UEM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	UEM	Special functions	Configuration of the siren
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	UEM	Special functions	Programming the control unit
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	UEM	Special functions	Reading the programmed values
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	REM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	REM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	REM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	REM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	REM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	REM	Special functions	Calibrating the position sensor for Bi-Xenon lamps
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Freeze frame	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Programming of clock (*)

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Programming parking brake warning
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Programming instrument lighting
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Display of DSTC message
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DIM	Special functions	Read out programmed values
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PDM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PDM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PDM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PDM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PDM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PSM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PSM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PSM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PSM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PSM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DDM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DDM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DDM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DDM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DDM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DDM	Special functions	Initialize the window(*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CCM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CCM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CCM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CCM	Special functions	Programming the seat temperature
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PHM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PHM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PHM	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PHM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	AUM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	AUM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	AUM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	AUM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DEM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DEM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DEM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SAS	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SAS	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SAS	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SAS	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	RTI	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	RTI	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	RTI	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	AEM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	AEM	Read code	



model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	AEM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	AEM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	AEM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CPM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CPM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CPM	Special functions	Programming the additional and parking heater
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	HCM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	HCM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	HCM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	HCM	Special functions	Calibration of position sensor
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	KVM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	KVM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	KVM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	KVM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	KVM	Actuation	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	RDAR	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	RDAR	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	RDAR	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	RDAR	Data stream	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SUB	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SUB	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SUB	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	SUB	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CVM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CVM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CVM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	CVM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DABM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DABM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DABM	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	DABM	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PAC	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PAC	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PAC	Clear code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	PAC	Data stream	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TRM	Sys. Info.	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TRM	Read code	
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TRM	Clear code	

model	year	type	system	function	subfunction
V70 XC(01- )/XC70(- 07)	2007	AW50/51AW D	TRM	Data stream	
XC70(08-)	2008	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC70(08-)	2008	B5254T6	ECM	Sys. Info.	
XC70(08-)	2008	B5254T6	ECM	Read code	
XC70(08-)	2008	B5254T6	ECM	Clear code	
XC70(08-)	2008	B5254T6	ECM	Data stream	
XC70(08-)	2008	B5254T6	ECM	Actuation	
XC70(08-)	2008	B5254T6	ECM	Special functions	Adaptation of the throttle unit
XC70(08-)	2008	B5254T10	ECM	Sys. Info.	
XC70(08-)	2008	B5254T10	ECM	Read code	
XC70(08-)	2008	B5254T10	ECM	Clear code	
XC70(08-)	2008	B5254T10	ECM	Data stream	
XC70(08-)	2008	B5254T10	ECM	Actuation	
XC70(08-)	2008	B5254T10	ECM	Special functions	Adaptation of the throttle unit
XC70(08-)	2008	B8444S	ECM	Sys. Info.	
XC70(08-)	2008	B8444S	ECM	Read code	
XC70(08-)	2008	B8444S	ECM	Clear code	
XC70(08-)	2008	B8444S	ECM	Data stream	
XC70(08-)	2008	B8444S	ECM	Actuation	
XC70(08-)	2008	B8444S	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2008	B6304T2	ECM	Sys. Info.	
XC70(08-)	2008	B6304T2	ECM	Read code	
XC70(08-)	2008	B6304T2	ECM	Clear code	
XC70(08-)	2008	B6304T2	ECM	Data stream	
XC70(08-)	2008	B6304T2	ECM	Actuation	
XC70(08-)	2008	B6304T2	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2008	B6324S	ECM	Sys. Info.	
XC70(08-)	2008	B6324S	ECM	Read code	
XC70(08-)	2008	B6324S	ECM	Clear code	
XC70(08-)	2008	B6324S	ECM	Data stream	
XC70(08-)	2008	B6324S	ECM	Actuation	
XC70(08-)	2008	B6324S	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2008	B6324S2	ECM	Sys. Info.	
XC70(08-)	2008	B6324S2	ECM	Read code	
XC70(08-)	2008	B6324S2	ECM	Clear code	
XC70(08-)	2008	B6324S2	ECM	Data stream	
XC70(08-)	2008	B6324S2	ECM	Actuation	
XC70(08-)	2008	B6324S2	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2008	D5244T5	Diesel Eng	Sys. Info.	
XC70(08-)	2008	D5244T5	Diesel Eng	Read code	
XC70(08-)	2008	D5244T5	Diesel Eng	Clear code	
XC70(08-)	2008	D5244T5	Diesel Eng	Data stream	
XC70(08-)	2008	D5244T5	Diesel Eng	Actuation	
XC70(08-)	2008	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
XC70(08-)	2008	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC70(08-)	2008	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
XC70(08-)	2008	D5244T16	Diesel Eng	Sys. Info.	
XC70(08-)	2008	D5244T16	Diesel Eng	Read code	
XC70(08-)	2008	D5244T16	Diesel Eng	Clear code	
XC70(08-)	2008	D5244T16	Diesel Eng	Data stream	
XC70(08-)	2008	D5244T16	Diesel Eng	Actuation	
XC70(08-)	2008	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2008	D5244T16	Diesel Eng	Special functions	Resetting adaptation
XC70(08-)	2008	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2008	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC70(08-)	2008	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
XC70(08-)	2008	TF-80SC	TCM	Sys. Info.	
XC70(08-)	2008	TF-80SC	TCM	Read code	
XC70(08-)	2008	TF-80SC	TCM	Clear code	
XC70(08-)	2008	TF-80SC	TCM	Data stream	
XC70(08-)	2008	TF-80SC	TCM	Actuation	
XC70(08-)	2008	TF-80SC	TCM	Special functions	Resetting the adaptation
XC70(08-)	2008	TF-80SC	TCM	Special functions	Calibration of position sensor
XC70(08-)	2008	TF-80SC AWD	TCM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	TCM	Read code	
XC70(08-)	2008	TF-80SC AWD	TCM	Clear code	
XC70(08-)	2008	TF-80SC AWD	TCM	Data stream	
XC70(08-)	2008	TF-80SC AWD	TCM	Actuation	
XC70(08-)	2008	TF-80SC AWD	TCM	Freeze frame	

model	year	type	system	function	subfunction
XC70(08-)	2008	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
XC70(08-)	2008	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
XC70(08-)	2008	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
XC70(08-)	2008	TF-80SC AWD	ABS	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	ABS	Read code	
XC70(08-)	2008	TF-80SC AWD	ABS	Clear code	
XC70(08-)	2008	TF-80SC AWD	ABS	Data stream	
XC70(08-)	2008	TF-80SC AWD	ABS	Actuation	
XC70(08-)	2008	TF-80SC AWD	ABS	Freeze frame	
XC70(08-)	2008	TF-80SC AWD	ABS	Special functions	Calibration
XC70(08-)	2008	TF-80SC AWD	SRS	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	SRS	Read code	
XC70(08-)	2008	TF-80SC AWD	SRS	Clear code	
XC70(08-)	2008	TF-80SC AWD	SRS	Data stream	
XC70(08-)	2008	TF-80SC AWD	SRS	Freeze frame	
XC70(08-)	2008	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
XC70(08-)	2008	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
XC70(08-)	2008	TF-80SC AWD	CEM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	CEM	Read code	
XC70(08-)	2008	TF-80SC AWD	CEM	Clear code	
XC70(08-)	2008	TF-80SC AWD	CEM	Data stream	
XC70(08-)	2008	TF-80SC AWD	CEM	Actuation	
XC70(08-)	2008	TF-80SC AWD	DIM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	DIM	Read code	
XC70(08-)	2008	TF-80SC AWD	DIM	Clear code	
XC70(08-)	2008	TF-80SC AWD	DIM	Data stream	
XC70(08-)	2008	TF-80SC AWD	DIM	Freeze frame	
XC70(08-)	2008	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI)
XC70(08-)	2008	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
XC70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
XC70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
XC70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming of clock
XC70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
XC70(08-)	2008	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC70(08-)	2008	TF-80SC AWD	PDM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	PDM	Read code	
XC70(08-)	2008	TF-80SC AWD	PDM	Clear code	
XC70(08-)	2008	TF-80SC AWD	PDM	Data stream	
XC70(08-)	2008	TF-80SC AWD	PDM	Actuation	
XC70(08-)	2008	TF-80SC AWD	PSM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	PSM	Read code	
XC70(08-)	2008	TF-80SC AWD	PSM	Clear code	
XC70(08-)	2008	TF-80SC AWD	PSM	Data stream	
XC70(08-)	2008	TF-80SC AWD	PSM	Actuation	
XC70(08-)	2008	TF-80SC AWD	DDM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	DDM	Read code	
XC70(08-)	2008	TF-80SC AWD	DDM	Clear code	
XC70(08-)	2008	TF-80SC AWD	DDM	Data stream	
XC70(08-)	2008	TF-80SC AWD	CCM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	CCM	Read code	
XC70(08-)	2008	TF-80SC AWD	CCM	Clear code	
XC70(08-)	2008	TF-80SC AWD	CCM	Data stream	
XC70(08-)	2008	TF-80SC AWD	CCM	Actuation	
XC70(08-)	2008	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
XC70(08-)	2008	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC70(08-)	2008	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC70(08-)	2008	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
XC70(08-)	2008	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC70(08-)	2008	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module (CCM)
XC70(08-)	2008	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
XC70(08-)	2008	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
XC70(08-)	2008	TF-80SC AWD	AUD	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	AUD	Read code	
XC70(08-)	2008	TF-80SC AWD	AUD	Clear code	
XC70(08-)	2008	TF-80SC AWD	DEM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	DEM	Read code	
XC70(08-)	2008	TF-80SC AWD	DEM	Clear code	
XC70(08-)	2008	TF-80SC AWD	DEM	Data stream	
XC70(08-)	2008	TF-80SC AWD	DEM	Actuation	
XC70(08-)	2008	TF-80SC AWD	ICM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	ICM	Read code	
XC70(08-)	2008	TF-80SC AWD	ICM	Clear code	
XC70(08-)	2008	TF-80SC AWD	ICM	Data stream	
XC70(08-)	2008	TF-80SC AWD	ICM	Actuation	

model	year	type	system	function	subfunction
XC70(08-)	2008	TF-80SC AWD	SAS	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	SAS	Read code	
XC70(08-)	2008	TF-80SC AWD	SAS	Clear code	
XC70(08-)	2008	TF-80SC AWD	SAS	Data stream	
XC70(08-)	2008	TF-80SC AWD	MMM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	MMM	Read code	
XC70(08-)	2008	TF-80SC AWD	MMM	Clear code	
XC70(08-)	2008	TF-80SC AWD	PAM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	PAM	Read code	
XC70(08-)	2008	TF-80SC AWD	PAM	Clear code	
XC70(08-)	2008	TF-80SC AWD	PAM	Data stream	
XC70(08-)	2008	TF-80SC AWD	IAM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	IAM	Read code	
XC70(08-)	2008	TF-80SC AWD	IAM	Clear code	
XC70(08-)	2008	TF-80SC AWD	BPM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	BPM	Read code	
XC70(08-)	2008	TF-80SC AWD	BPM	Clear code	
XC70(08-)	2008	TF-80SC AWD	BPM	Data stream	
XC70(08-)	2008	TF-80SC AWD	SUM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	SUM	Read code	
XC70(08-)	2008	TF-80SC AWD	SUM	Clear code	
XC70(08-)	2008	TF-80SC AWD	SUM	Data stream	
XC70(08-)	2008	TF-80SC AWD	PBM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	PBM	Read code	
XC70(08-)	2008	TF-80SC AWD	PBM	Clear code	
XC70(08-)	2008	TF-80SC AWD	PBM	Data stream	
XC70(08-)	2008	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
XC70(08-)	2008	TF-80SC AWD	PBM	Special functions	Activation and service
XC70(08-)	2008	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
XC70(08-)	2008	TF-80SC AWD	CPM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	CPM	Read code	
XC70(08-)	2008	TF-80SC AWD	CPM	Clear code	
XC70(08-)	2008	TF-80SC AWD	CPM	Data stream	
XC70(08-)	2008	TF-80SC AWD	CPM	Actuation	
XC70(08-)	2008	TF-80SC AWD	HCM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	HCM	Read code	
XC70(08-)	2008	TF-80SC AWD	HCM	Clear code	
XC70(08-)	2008	TF-80SC AWD	HCM	Data stream	
XC70(08-)	2008	TF-80SC AWD	KVM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	KVM	Read code	
XC70(08-)	2008	TF-80SC AWD	KVM	Clear code	
XC70(08-)	2008	TF-80SC AWD	KVM	Data stream	
XC70(08-)	2008	TF-80SC AWD	HLDF	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	HLDF	Read code	
XC70(08-)	2008	TF-80SC AWD	HLDF	Clear code	
XC70(08-)	2008	TF-80SC AWD	HLDF	Data stream	
XC70(08-)	2008	TF-80SC AWD	POT	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	POT	Read code	
XC70(08-)	2008	TF-80SC AWD	POT	Clear code	
XC70(08-)	2008	TF-80SC AWD	POT	Data stream	
XC70(08-)	2008	TF-80SC AWD	AUU	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	AUU	Read code	
XC70(08-)	2008	TF-80SC AWD	AUU	Clear code	
XC70(08-)	2008	TF-80SC AWD	AUU	Data stream	
XC70(08-)	2008	TF-80SC AWD	FSM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	FSM	Read code	
XC70(08-)	2008	TF-80SC AWD	FSM	Clear code	
XC70(08-)	2008	TF-80SC AWD	FSM	Data stream	
XC70(08-)	2008	TF-80SC AWD	RDAR	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	RDAR	Read code	
XC70(08-)	2008	TF-80SC AWD	RDAR	Clear code	
XC70(08-)	2008	TF-80SC AWD	RDAR	Data stream	
XC70(08-)	2008	TF-80SC AWD	SUB	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	SUB	Read code	
XC70(08-)	2008	TF-80SC AWD	SUB	Clear code	
XC70(08-)	2008	TF-80SC AWD	SUB	Data stream	
XC70(08-)	2008	TF-80SC AWD	CVM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	CVM	Read code	
XC70(08-)	2008	TF-80SC AWD	CVM	Clear code	
XC70(08-)	2008	TF-80SC AWD	CVM	Data stream	
XC70(08-)	2008	TF-80SC AWD	DABM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	DABM	Read code	
XC70(08-)	2008	TF-80SC AWD	DABM	Clear code	
XC70(08-)	2008	TF-80SC AWD	DABM	Data stream	
XC70(08-)	2008	TF-80SC AWD	PAC	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	PAC	Read code	
XC70(08-)	2008	TF-80SC AWD	PAC	Clear code	
XC70(08-)	2008	TF-80SC AWD	PAC	Data stream	

model	year	type	system	function	subfunction
XC70(08-)	2008	TF-80SC AWD	TRM	Sys. Info.	
XC70(08-)	2008	TF-80SC AWD	TRM	Read code	
XC70(08-)	2008	TF-80SC AWD	TRM	Clear code	
XC70(08-)	2008	TF-80SC AWD	TRM	Data stream	
XC70(08-)	2009	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC70(08-)	2009	B5254T6	ECM	Sys. Info.	
XC70(08-)	2009	B5254T6	ECM	Read code	
XC70(08-)	2009	B5254T6	ECM	Clear code	
XC70(08-)	2009	B5254T6	ECM	Data stream	
XC70(08-)	2009	B5254T6	ECM	Actuation	
XC70(08-)	2009	B5254T6	ECM	Special functions	Adaptation of the throttle unit
XC70(08-)	2009	B5254T10	ECM	Sys. Info.	
XC70(08-)	2009	B5254T10	ECM	Read code	
XC70(08-)	2009	B5254T10	ECM	Clear code	
XC70(08-)	2009	B5254T10	ECM	Data stream	
XC70(08-)	2009	B5254T10	ECM	Actuation	
XC70(08-)	2009	B5254T10	ECM	Special functions	Adaptation of the throttle unit
XC70(08-)	2009	B8444S	ECM	Sys. Info.	
XC70(08-)	2009	B8444S	ECM	Read code	
XC70(08-)	2009	B8444S	ECM	Clear code	
XC70(08-)	2009	B8444S	ECM	Data stream	
XC70(08-)	2009	B8444S	ECM	Actuation	
XC70(08-)	2009	B8444S	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2009	B6304T2	ECM	Sys. Info.	
XC70(08-)	2009	B6304T2	ECM	Read code	
XC70(08-)	2009	B6304T2	ECM	Clear code	
XC70(08-)	2009	B6304T2	ECM	Data stream	
XC70(08-)	2009	B6304T2	ECM	Actuation	
XC70(08-)	2009	B6304T2	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2009	B6324S	ECM	Sys. Info.	
XC70(08-)	2009	B6324S	ECM	Read code	
XC70(08-)	2009	B6324S	ECM	Clear code	
XC70(08-)	2009	B6324S	ECM	Data stream	
XC70(08-)	2009	B6324S	ECM	Actuation	
XC70(08-)	2009	B6324S	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2009	B6324S2	ECM	Sys. Info.	
XC70(08-)	2009	B6324S2	ECM	Read code	
XC70(08-)	2009	B6324S2	ECM	Clear code	
XC70(08-)	2009	B6324S2	ECM	Data stream	
XC70(08-)	2009	B6324S2	ECM	Actuation	
XC70(08-)	2009	B6324S2	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2009	D5244T5	Diesel Eng	Sys. Info.	
XC70(08-)	2009	D5244T5	Diesel Eng	Read code	
XC70(08-)	2009	D5244T5	Diesel Eng	Clear code	
XC70(08-)	2009	D5244T5	Diesel Eng	Data stream	
XC70(08-)	2009	D5244T5	Diesel Eng	Actuation	
XC70(08-)	2009	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
XC70(08-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC70(08-)	2009	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
XC70(08-)	2009	D5244T16	Diesel Eng	Sys. Info.	
XC70(08-)	2009	D5244T16	Diesel Eng	Read code	
XC70(08-)	2009	D5244T16	Diesel Eng	Clear code	
XC70(08-)	2009	D5244T16	Diesel Eng	Data stream	
XC70(08-)	2009	D5244T16	Diesel Eng	Actuation	
XC70(08-)	2009	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2009	D5244T16	Diesel Eng	Special functions	Resetting adaptation
XC70(08-)	2009	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2009	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC70(08-)	2009	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
XC70(08-)	2009	TF-80SC	TCM	Sys. Info.	
XC70(08-)	2009	TF-80SC	TCM	Read code	
XC70(08-)	2009	TF-80SC	TCM	Clear code	
XC70(08-)	2009	TF-80SC	TCM	Data stream	
XC70(08-)	2009	TF-80SC	TCM	Actuation	
XC70(08-)	2009	TF-80SC	TCM	Special functions	Resetting the adaptation
XC70(08-)	2009	TF-80SC	TCM	Special functions	Calibration of position sensor
XC70(08-)	2009	TF-80SC AWD	TCM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	TCM	Read code	
XC70(08-)	2009	TF-80SC AWD	TCM	Clear code	
XC70(08-)	2009	TF-80SC AWD	TCM	Data stream	
XC70(08-)	2009	TF-80SC AWD	TCM	Actuation	
XC70(08-)	2009	TF-80SC AWD	TCM	Freeze frame	

model	year	type	system	function	subfunction
XC70(08-)	2009	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
XC70(08-)	2009	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
XC70(08-)	2009	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
XC70(08-)	2009	TF-80SC AWD	ABS	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	ABS	Read code	
XC70(08-)	2009	TF-80SC AWD	ABS	Clear code	
XC70(08-)	2009	TF-80SC AWD	ABS	Data stream	
XC70(08-)	2009	TF-80SC AWD	ABS	Actuation	
XC70(08-)	2009	TF-80SC AWD	ABS	Freeze frame	
XC70(08-)	2009	TF-80SC AWD	ABS	Special functions	Calibration
XC70(08-)	2009	TF-80SC AWD	SRS	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	SRS	Read code	
XC70(08-)	2009	TF-80SC AWD	SRS	Clear code	
XC70(08-)	2009	TF-80SC AWD	SRS	Data stream	
XC70(08-)	2009	TF-80SC AWD	SRS	Freeze frame	
XC70(08-)	2009	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
XC70(08-)	2009	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
XC70(08-)	2009	TF-80SC AWD	CEM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	CEM	Read code	
XC70(08-)	2009	TF-80SC AWD	CEM	Clear code	
XC70(08-)	2009	TF-80SC AWD	CEM	Data stream	
XC70(08-)	2009	TF-80SC AWD	CEM	Actuation	
XC70(08-)	2009	TF-80SC AWD	DIIM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	DIIM	Read code	
XC70(08-)	2009	TF-80SC AWD	DIIM	Clear code	
XC70(08-)	2009	TF-80SC AWD	DIIM	Data stream	
XC70(08-)	2009	TF-80SC AWD	DIIM	Freeze frame	
XC70(08-)	2009	TF-80SC AWD	DIIM	Special functions	Resetting the service reminder indicator(SRI)
XC70(08-)	2009	TF-80SC AWD	DIIM	Special functions	Testing all displays and lamps in instrument
XC70(08-)	2009	TF-80SC AWD	DIIM	Special functions	Programming the unit for temperature
XC70(08-)	2009	TF-80SC AWD	DIIM	Special functions	Programming the units for the trip computer
XC70(08-)	2009	TF-80SC AWD	DIIM	Special functions	Programming of clock
XC70(08-)	2009	TF-80SC AWD	DIIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC70(08-)	2009	TF-80SC AWD	DIIM	Special functions	Programming seatbelt reminder in backseat
XC70(08-)	2009	TF-80SC AWD	DIIM	Special functions	Programming text message,seatbelt reminder
XC70(08-)	2009	TF-80SC AWD	PDM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	PDM	Read code	
XC70(08-)	2009	TF-80SC AWD	PDM	Clear code	
XC70(08-)	2009	TF-80SC AWD	PDM	Data stream	
XC70(08-)	2009	TF-80SC AWD	PDM	Actuation	
XC70(08-)	2009	TF-80SC AWD	PSM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	PSM	Read code	
XC70(08-)	2009	TF-80SC AWD	PSM	Clear code	
XC70(08-)	2009	TF-80SC AWD	PSM	Data stream	
XC70(08-)	2009	TF-80SC AWD	PSM	Actuation	
XC70(08-)	2009	TF-80SC AWD	DDM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	DDM	Read code	
XC70(08-)	2009	TF-80SC AWD	DDM	Clear code	
XC70(08-)	2009	TF-80SC AWD	DDM	Data stream	
XC70(08-)	2009	TF-80SC AWD	CCM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	CCM	Read code	
XC70(08-)	2009	TF-80SC AWD	CCM	Clear code	
XC70(08-)	2009	TF-80SC AWD	CCM	Data stream	
XC70(08-)	2009	TF-80SC AWD	CCM	Actuation	
XC70(08-)	2009	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
XC70(08-)	2009	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC70(08-)	2009	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC70(08-)	2009	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
XC70(08-)	2009	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC70(08-)	2009	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module (CCM)
XC70(08-)	2009	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
XC70(08-)	2009	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
XC70(08-)	2009	TF-80SC AWD	AUD	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	AUD	Read code	
XC70(08-)	2009	TF-80SC AWD	AUD	Clear code	
XC70(08-)	2009	TF-80SC AWD	DEM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	DEM	Read code	
XC70(08-)	2009	TF-80SC AWD	DEM	Clear code	
XC70(08-)	2009	TF-80SC AWD	DEM	Data stream	
XC70(08-)	2009	TF-80SC AWD	DEM	Actuation	
XC70(08-)	2009	TF-80SC AWD	ICM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	ICM	Read code	
XC70(08-)	2009	TF-80SC AWD	ICM	Clear code	
XC70(08-)	2009	TF-80SC AWD	ICM	Data stream	
XC70(08-)	2009	TF-80SC AWD	ICM	Actuation	

model	year	type	system	function	subfunction
XC70(08-)	2009	TF-80SC AWD	SAS	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	SAS	Read code	
XC70(08-)	2009	TF-80SC AWD	SAS	Clear code	
XC70(08-)	2009	TF-80SC AWD	SAS	Data stream	
XC70(08-)	2009	TF-80SC AWD	MMM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	MMM	Read code	
XC70(08-)	2009	TF-80SC AWD	MMM	Clear code	
XC70(08-)	2009	TF-80SC AWD	PAM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	PAM	Read code	
XC70(08-)	2009	TF-80SC AWD	PAM	Clear code	
XC70(08-)	2009	TF-80SC AWD	PAM	Data stream	
XC70(08-)	2009	TF-80SC AWD	IAM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	IAM	Read code	
XC70(08-)	2009	TF-80SC AWD	IAM	Clear code	
XC70(08-)	2009	TF-80SC AWD	BPM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	BPM	Read code	
XC70(08-)	2009	TF-80SC AWD	BPM	Clear code	
XC70(08-)	2009	TF-80SC AWD	BPM	Data stream	
XC70(08-)	2009	TF-80SC AWD	SUM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	SUM	Read code	
XC70(08-)	2009	TF-80SC AWD	SUM	Clear code	
XC70(08-)	2009	TF-80SC AWD	SUM	Data stream	
XC70(08-)	2009	TF-80SC AWD	PBM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	PBM	Read code	
XC70(08-)	2009	TF-80SC AWD	PBM	Clear code	
XC70(08-)	2009	TF-80SC AWD	PBM	Data stream	
XC70(08-)	2009	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
XC70(08-)	2009	TF-80SC AWD	PBM	Special functions	Activation and service
XC70(08-)	2009	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
XC70(08-)	2009	TF-80SC AWD	CPM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	CPM	Read code	
XC70(08-)	2009	TF-80SC AWD	CPM	Clear code	
XC70(08-)	2009	TF-80SC AWD	CPM	Data stream	
XC70(08-)	2009	TF-80SC AWD	CPM	Actuation	
XC70(08-)	2009	TF-80SC AWD	HCM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	HCM	Read code	
XC70(08-)	2009	TF-80SC AWD	HCM	Clear code	
XC70(08-)	2009	TF-80SC AWD	HCM	Data stream	
XC70(08-)	2009	TF-80SC AWD	KVM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	KVM	Read code	
XC70(08-)	2009	TF-80SC AWD	KVM	Clear code	
XC70(08-)	2009	TF-80SC AWD	KVM	Data stream	
XC70(08-)	2009	TF-80SC AWD	HLDF	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	HLDF	Read code	
XC70(08-)	2009	TF-80SC AWD	HLDF	Clear code	
XC70(08-)	2009	TF-80SC AWD	HLDF	Data stream	
XC70(08-)	2009	TF-80SC AWD	POT	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	POT	Read code	
XC70(08-)	2009	TF-80SC AWD	POT	Clear code	
XC70(08-)	2009	TF-80SC AWD	POT	Data stream	
XC70(08-)	2009	TF-80SC AWD	AUU	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	AUU	Read code	
XC70(08-)	2009	TF-80SC AWD	AUU	Clear code	
XC70(08-)	2009	TF-80SC AWD	AUU	Data stream	
XC70(08-)	2009	TF-80SC AWD	FSM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	FSM	Read code	
XC70(08-)	2009	TF-80SC AWD	FSM	Clear code	
XC70(08-)	2009	TF-80SC AWD	FSM	Data stream	
XC70(08-)	2009	TF-80SC AWD	RDAR	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	RDAR	Read code	
XC70(08-)	2009	TF-80SC AWD	RDAR	Clear code	
XC70(08-)	2009	TF-80SC AWD	RDAR	Data stream	
XC70(08-)	2009	TF-80SC AWD	SUB	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	SUB	Read code	
XC70(08-)	2009	TF-80SC AWD	SUB	Clear code	
XC70(08-)	2009	TF-80SC AWD	SUB	Data stream	
XC70(08-)	2009	TF-80SC AWD	CVM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	CVM	Read code	
XC70(08-)	2009	TF-80SC AWD	CVM	Clear code	
XC70(08-)	2009	TF-80SC AWD	CVM	Data stream	
XC70(08-)	2009	TF-80SC AWD	DABM	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	DABM	Read code	
XC70(08-)	2009	TF-80SC AWD	DABM	Clear code	
XC70(08-)	2009	TF-80SC AWD	DABM	Data stream	
XC70(08-)	2009	TF-80SC AWD	PAC	Sys. Info.	
XC70(08-)	2009	TF-80SC AWD	PAC	Read code	
XC70(08-)	2009	TF-80SC AWD	PAC	Clear code	
XC70(08-)	2009	TF-80SC AWD	PAC	Data stream	



model	year	type	system	function	subfunction	
XC70(08-)		2009	TF-80SC AWD	TRM	Sys. Info.	
XC70(08-)		2009	TF-80SC AWD	TRM	Read code	
XC70(08-)		2009	TF-80SC AWD	TRM	Clear code	
XC70(08-)		2009	TF-80SC AWD	TRM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero	
XC70(08-)	2010 - 2012	B5254T6	ECM	Sys. Info.		
XC70(08-)	2010 - 2012	B5254T6	ECM	Read code		
XC70(08-)	2010 - 2012	B5254T6	ECM	Clear code		
XC70(08-)	2010 - 2012	B5254T6	ECM	Data stream		
XC70(08-)	2010 - 2012	B5254T6	ECM	Actuation		
XC70(08-)	2010 - 2012	B5254T6	ECM	Special functions	Adaptation of the throttle unit	
XC70(08-)	2010 - 2012	B5254T10	ECM	Sys. Info.		
XC70(08-)	2010 - 2012	B5254T10	ECM	Read code		
XC70(08-)	2010 - 2012	B5254T10	ECM	Clear code		
XC70(08-)	2010 - 2012	B5254T10	ECM	Data stream		
XC70(08-)	2010 - 2012	B5254T10	ECM	Actuation		
XC70(08-)	2010 - 2012	B5254T10	ECM	Special functions	Adaptation of the throttle unit	
XC70(08-)	2010 - 2012	B8444S	ECM	Sys. Info.		
XC70(08-)	2010 - 2012	B8444S	ECM	Read code		
XC70(08-)	2010 - 2012	B8444S	ECM	Clear code		
XC70(08-)	2010 - 2012	B8444S	ECM	Data stream		
XC70(08-)	2010 - 2012	B8444S	ECM	Actuation		
XC70(08-)	2010 - 2012	B8444S	ECM	Special functions	Resetting the adaptation values	
XC70(08-)	2010 - 2012	B6304T2	ECM	Sys. Info.		
XC70(08-)	2010 - 2012	B6304T2	ECM	Read code		
XC70(08-)	2010 - 2012	B6304T2	ECM	Clear code		
XC70(08-)	2010 - 2012	B6304T2	ECM	Data stream		
XC70(08-)	2010 - 2012	B6304T2	ECM	Actuation		
XC70(08-)	2010 - 2012	B6304T2	ECM	Special functions	Resetting the adaptation values	
XC70(08-)	2010 - 2012	B6324S	ECM	Sys. Info.		
XC70(08-)	2010 - 2012	B6324S	ECM	Read code		
XC70(08-)	2010 - 2012	B6324S	ECM	Clear code		
XC70(08-)	2010 - 2012	B6324S	ECM	Data stream		
XC70(08-)	2010 - 2012	B6324S	ECM	Actuation		
XC70(08-)	2010 - 2012	B6324S	ECM	Special functions	Resetting the adaptation values	
XC70(08-)	2010 - 2012	B6324S2	ECM	Sys. Info.		
XC70(08-)	2010 - 2012	B6324S2	ECM	Read code		
XC70(08-)	2010 - 2012	B6324S2	ECM	Clear code		
XC70(08-)	2010 - 2012	B6324S2	ECM	Data stream		
XC70(08-)	2010 - 2012	B6324S2	ECM	Actuation		
XC70(08-)	2010 - 2012	B6324S2	ECM	Special functions	Resetting the adaptation values	
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Sys. Info.		
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Read code		
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Clear code		
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Data stream		
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Actuation		
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter	
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter	
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module	
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle	
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor	
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor	
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve	
XC70(08-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Combustion of soot particles	
XC70(08-)	2010 - 2012	D5244T16	Diesel Eng	Sys. Info.		
XC70(08-)	2010 - 2012	D5244T16	Diesel Eng	Read code		
XC70(08-)	2010 - 2012	D5244T16	Diesel Eng	Clear code		
XC70(08-)	2010 - 2012	D5244T16	Diesel Eng	Data stream		
XC70(08-)	2010 - 2012	D5244T16	Diesel Eng	Actuation		
XC70(08-)	2010 - 2012	D5244T16	Diesel Eng	Freeze frame		
XC70(08-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter	
XC70(08-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Resetting adaptation	
XC70(08-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module	
XC70(08-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve	
XC70(08-)	2010 - 2012	D5244T16	Diesel Eng	Special functions	Combustion of soot particles	
XC70(08-)	2010 - 2012	TF-80SC	TCM	Sys. Info.		
XC70(08-)	2010 - 2012	TF-80SC	TCM	Read code		
XC70(08-)	2010 - 2012	TF-80SC	TCM	Clear code		
XC70(08-)	2010 - 2012	TF-80SC	TCM	Data stream		
XC70(08-)	2010 - 2012	TF-80SC	TCM	Actuation		
XC70(08-)	2010 - 2012	TF-80SC	TCM	Freeze frame		
XC70(08-)	2010 - 2012	TF-80SC	TCM	Special functions	Resetting the adaptation	
XC70(08-)	2010 - 2012	TF-80SC	TCM	Special functions	Calibration of position sensor	
XC70(08-)	2010 - 2012	TF-80SC AWD	TCM	Sys. Info.		
XC70(08-)	2010 - 2012	TF-80SC AWD	TCM	Read code		
XC70(08-)	2010 - 2012	TF-80SC AWD	TCM	Clear code		
XC70(08-)	2010 - 2012	TF-80SC AWD	TCM	Data stream		

model	year	type	system	function	subfunction
XC70(08-)	2010 - 2012	TF-80SC AWD	TCM	Actuation	
XC70(08-)	2010 - 2012	TF-80SC AWD	TCM	Freeze frame	
XC70(08-)	2010 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
XC70(08-)	2010 - 2012	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
XC70(08-)	2010 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
XC70(08-)	2010 - 2012	TF-80SC AWD	ABS	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	ABS	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	ABS	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	ABS	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	ABS	Actuation	
XC70(08-)	2010 - 2012	TF-80SC AWD	ABS	Freeze frame	
XC70(08-)	2010 - 2012	TF-80SC AWD	ABS	Special functions	Calibration
XC70(08-)	2010 - 2012	TF-80SC AWD	SRS	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	SRS	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	SRS	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	SRS	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	SRS	Freeze frame	
XC70(08-)	2010 - 2012	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
XC70(08-)	2010 - 2012	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
XC70(08-)	2010 - 2012	TF-80SC AWD	CEM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	CEM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	CEM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	CEM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	CEM	Actuation	
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Freeze frame	
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI)
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming of clock
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
XC70(08-)	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC70(08-)	2010 - 2012	TF-80SC AWD	PDM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	PDM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	PDM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	PDM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	PDM	Actuation	
XC70(08-)	2010 - 2012	TF-80SC AWD	PSM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	PSM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	PSM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	PSM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	PSM	Actuation	
XC70(08-)	2010 - 2012	TF-80SC AWD	DDM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	DDM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	DDM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	DDM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Actuation	
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module (CCM)
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
XC70(08-)	2010 - 2012	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
XC70(08-)	2010 - 2012	TF-80SC AWD	AUD	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	AUD	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	AUD	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	DEM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	DEM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	DEM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	DEM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	DEM	Actuation	
XC70(08-)	2010 - 2012	TF-80SC AWD	ICM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	ICM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	ICM	Clear code	

model	year	type	system	function	subfunction
XC70(08-)	2010 - 2012	TF-80SC AWD	ICM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	ICM	Actuation	
XC70(08-)	2010 - 2012	TF-80SC AWD	SAS	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	SAS	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	SAS	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	SAS	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	MMM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	MMM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	MMM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	PAM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	PAM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	PAM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	PAM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	IAM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	IAM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	IAM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	BPM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	BPM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	BPM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	BPM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	SUM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	SUM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	SUM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	SUM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	PBM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	PBM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	PBM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	PBM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
XC70(08-)	2010 - 2012	TF-80SC AWD	PBM	Special functions	Activation and service
XC70(08-)	2010 - 2012	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
XC70(08-)	2010 - 2012	TF-80SC AWD	CPM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	CPM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	CPM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	CPM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	CPM	Actuation	
XC70(08-)	2010 - 2012	TF-80SC AWD	HCM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	HCM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	HCM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	HCM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	KVM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	KVM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	KVM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	KVM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	HLDF	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	HLDF	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	HLDF	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	HLDF	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	POT	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	POT	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	POT	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	POT	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	AUU	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	AUU	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	AUU	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	AUU	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	FSM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	FSM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	FSM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	FSM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	RDAR	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	RDAR	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	RDAR	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	RDAR	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	SUB	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	SUB	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	SUB	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	SUB	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	CVM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	CVM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	CVM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	CVM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	DABM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	DABM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	DABM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	DABM	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	PAC	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	PAC	Read code	

model	year	type	system	function	subfunction
XC70(08-)	2010 - 2012	TF-80SC AWD	PAC	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	PAC	Data stream	
XC70(08-)	2010 - 2012	TF-80SC AWD	TRM	Sys. Info.	
XC70(08-)	2010 - 2012	TF-80SC AWD	TRM	Read code	
XC70(08-)	2010 - 2012	TF-80SC AWD	TRM	Clear code	
XC70(08-)	2010 - 2012	TF-80SC AWD	TRM	Data stream	
XC70(08-)	2013	B6324S5	ECM	Sys. Info.	
XC70(08-)	2013	B6324S5	ECM	Read code	
XC70(08-)	2013	B6324S5	ECM	Clear code	
XC70(08-)	2013	B6324S5	ECM	Data stream	
XC70(08-)	2013	B6324S5	ECM	Actuation	
XC70(08-)	2013	B6324S5	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2013	B6324S4	ECM	Sys. Info.	
XC70(08-)	2013	B6324S4	ECM	Read code	
XC70(08-)	2013	B6324S4	ECM	Clear code	
XC70(08-)	2013	B6324S4	ECM	Data stream	
XC70(08-)	2013	B6324S4	ECM	Actuation	
XC70(08-)	2013	B6324S4	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2013	B6304T4	ECM	Sys. Info.	
XC70(08-)	2013	B6304T4	ECM	Read code	
XC70(08-)	2013	B6304T4	ECM	Clear code	
XC70(08-)	2013	B6304T4	ECM	Data stream	
XC70(08-)	2013	B6304T4	ECM	Actuation	
XC70(08-)	2013	B6304T4	ECM	Freeze frame	
XC70(08-)	2013	B6304T4	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2013	D5244T15	Diesel Eng	Sys. Info.	
XC70(08-)	2013	D5244T15	Diesel Eng	Read code	
XC70(08-)	2013	D5244T15	Diesel Eng	Clear code	
XC70(08-)	2013	D5244T15	Diesel Eng	Data stream	
XC70(08-)	2013	D5244T15	Diesel Eng	Actuation	
XC70(08-)	2013	D5244T15	Diesel Eng	Freeze frame	
XC70(08-)	2013	D5244T15	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2013	D5244T15	Diesel Eng	Special functions	Checking injectors
XC70(08-)	2013	D5244T15	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2013	D5244T15	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC70(08-)	2013	D5244T15	Diesel Eng	Special functions	Checking the oil level
XC70(08-)	2013	D5244T15	Diesel Eng	Special functions	Adjusting calculated oil level/oil quality
XC70(08-)	2013	D5244T15	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC70(08-)	2013	D5244T11	Diesel Eng	Sys. Info.	
XC70(08-)	2013	D5244T11	Diesel Eng	Read code	
XC70(08-)	2013	D5244T11	Diesel Eng	Clear code	
XC70(08-)	2013	D5244T11	Diesel Eng	Data stream	
XC70(08-)	2013	D5244T11	Diesel Eng	Actuation	
XC70(08-)	2013	D5244T11	Diesel Eng	Freeze frame	
XC70(08-)	2013	D5244T11	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2013	D5244T11	Diesel Eng	Special functions	Checking injectors
XC70(08-)	2013	D5244T11	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2013	D5244T11	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC70(08-)	2013	D5244T11	Diesel Eng	Special functions	Checking the oil level
XC70(08-)	2013	D5244T17	Diesel Eng	Sys. Info.	
XC70(08-)	2013	D5244T17	Diesel Eng	Read code	
XC70(08-)	2013	D5244T17	Diesel Eng	Clear code	
XC70(08-)	2013	D5244T17	Diesel Eng	Data stream	
XC70(08-)	2013	D5244T17	Diesel Eng	Actuation	
XC70(08-)	2013	D5244T17	Diesel Eng	Freeze frame	
XC70(08-)	2013	D5244T17	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2013	D5244T17	Diesel Eng	Special functions	Checking injectors
XC70(08-)	2013	D5244T17	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2013	D5244T17	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC70(08-)	2013	D5244T17	Diesel Eng	Special functions	Checking the oil level
XC70(08-)	2013	D5204T3	Diesel Eng	Sys. Info.	
XC70(08-)	2013	D5204T3	Diesel Eng	Read code	
XC70(08-)	2013	D5204T3	Diesel Eng	Clear code	
XC70(08-)	2013	D5204T3	Diesel Eng	Data stream	
XC70(08-)	2013	D5204T3	Diesel Eng	Actuation	
XC70(08-)	2013	D5204T3	Diesel Eng	Freeze frame	
XC70(08-)	2013	D5204T3	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2013	D5204T3	Diesel Eng	Special functions	Checking injectors
XC70(08-)	2013	D5204T3	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2013	D5204T3	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC70(08-)	2013	D5204T3	Diesel Eng	Special functions	Checking the oil level
XC70(08-)	2013	TF-80SC AWD	TCM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	TCM	Read code	
XC70(08-)	2013	TF-80SC AWD	TCM	Clear code	
XC70(08-)	2013	TF-80SC AWD	TCM	Data stream	
XC70(08-)	2013	TF-80SC AWD	TCM	Actuation	
XC70(08-)	2013	TF-80SC AWD	TCM	Freeze frame	
XC70(08-)	2013	TF-80SC AWD	TCM	Special functions	Resetting adaptation

model	year	type	system	function	subfunction
XC70(08-)	2013	TF-80SC AWD	TCM	Special functions	Resetting the "Transmission fluid change" counter
XC70(08-)	2013	TF-80SC AWD	TCM	Special functions	Calibration of gear indication
XC70(08-)	2013	TF-80SC AWD	TCM	Special functions	Activating of gear indication
XC70(08-)	2013	TF-80SC AWD	TCM	Special functions	Control module adaptation
XC70(08-)	2013	TF-80SC AWD	ABS	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	ABS	Read code	
XC70(08-)	2013	TF-80SC AWD	ABS	Clear code	
XC70(08-)	2013	TF-80SC AWD	ABS	Data stream	
XC70(08-)	2013	TF-80SC AWD	ABS	Actuation	
XC70(08-)	2013	TF-80SC AWD	ABS	Freeze frame	
XC70(08-)	2013	TF-80SC AWD	ABS	Special functions	Calibration
XC70(08-)	2013	TF-80SC AWD	SRS	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	SRS	Read code	
XC70(08-)	2013	TF-80SC AWD	SRS	Clear code	
XC70(08-)	2013	TF-80SC AWD	SRS	Data stream	
XC70(08-)	2013	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
XC70(08-)	2013	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
XC70(08-)	2013	TF-80SC AWD	CEM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	CEM	Read code	
XC70(08-)	2013	TF-80SC AWD	CEM	Clear code	
XC70(08-)	2013	TF-80SC AWD	CEM	Data stream	
XC70(08-)	2013	TF-80SC AWD	CEM	Actuation	
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Workshop test(TPMS)
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Reading off power supply position
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Read-out and resetting alco-lock
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Activating wipers,front/rear
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Operating and initiating the roof hatch
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Restoring supplemental restraint system
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Setting day and night mode for the instrumentation
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Readout of current from battery monitoring sensor
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Readout of information stand-by current
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Remote controlled immobilising,status
XC70(08-)	2013	TF-80SC AWD	CEM	Special functions	Remote controlled immobilising,cause
XC70(08-)	2013	TF-80SC AWD	DIM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	DIM	Read code	
XC70(08-)	2013	TF-80SC AWD	DIM	Clear code	
XC70(08-)	2013	TF-80SC AWD	DIM	Data stream	
XC70(08-)	2013	TF-80SC AWD	DIM	Freeze frame	
XC70(08-)	2013	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator (SRI)
XC70(08-)	2013	TF-80SC AWD	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
XC70(08-)	2013	TF-80SC AWD	DIM	Special functions	Read-out of fuel volume
XC70(08-)	2013	TF-80SC AWD	DIM	Special functions	Resetting the odometer setting
XC70(08-)	2013	TF-80SC AWD	DIM	Special functions	Programming loudest audible signal,seat belt reminder
XC70(08-)	2013	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
XC70(08-)	2013	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC70(08-)	2013	TF-80SC AWD	PDM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	PDM	Read code	
XC70(08-)	2013	TF-80SC AWD	PDM	Clear code	
XC70(08-)	2013	TF-80SC AWD	PDM	Data stream	
XC70(08-)	2013	TF-80SC AWD	PDM	Actuation	
XC70(08-)	2013	TF-80SC AWD	PDM	Special functions	Initializing the window in the front door
XC70(08-)	2013	TF-80SC AWD	PDM	Special functions	Initializing the window in the rear door
XC70(08-)	2013	TF-80SC AWD	PDM	Special functions	Central lock motors,activating
XC70(08-)	2013	TF-80SC AWD	PSM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	PSM	Read code	
XC70(08-)	2013	TF-80SC AWD	PSM	Clear code	
XC70(08-)	2013	TF-80SC AWD	PSM	Data stream	
XC70(08-)	2013	TF-80SC AWD	PSM	Actuation	
XC70(08-)	2013	TF-80SC AWD	PSM	Special functions	Programming the seat memory delay time
XC70(08-)	2013	TF-80SC AWD	DDM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	DDM	Read code	
XC70(08-)	2013	TF-80SC AWD	DDM	Clear code	
XC70(08-)	2013	TF-80SC AWD	DDM	Data stream	
XC70(08-)	2013	TF-80SC AWD	DDM	Actuation	
XC70(08-)	2013	TF-80SC AWD	DDM	Special functions	Initializing the window position
XC70(08-)	2013	TF-80SC AWD	DDM	Special functions	Central lock motors,activating
XC70(08-)	2013	TF-80SC AWD	CCM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	CCM	Read code	
XC70(08-)	2013	TF-80SC AWD	CCM	Clear code	
XC70(08-)	2013	TF-80SC AWD	CCM	Data stream	
XC70(08-)	2013	TF-80SC AWD	CCM	Actuation	

model	year	type	system	function	subfunction
XC70(08-)	2013	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
XC70(08-)	2013	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module(CCM)
XC70(08-)	2013	TF-80SC AWD	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
XC70(08-)	2013	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
XC70(08-)	2013	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module(CCM)
XC70(08-)	2013	TF-80SC AWD	CCM	Special functions	Programming the climate control module(CCM)
XC70(08-)	2013	TF-80SC AWD	CCM	Special functions	Rear view mirror light sensitivity
XC70(08-)	2013	TF-80SC AWD	AUD	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	AUD	Read code	
XC70(08-)	2013	TF-80SC AWD	AUD	Clear code	
XC70(08-)	2013	TF-80SC AWD	AUD	Special functions	Checking loudspeakers
XC70(08-)	2013	TF-80SC AWD	AUD	Special functions	Checking headphone socket
XC70(08-)	2013	TF-80SC AWD	DEM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	DEM	Read code	
XC70(08-)	2013	TF-80SC AWD	DEM	Clear code	
XC70(08-)	2013	TF-80SC AWD	DEM	Data stream	
XC70(08-)	2013	TF-80SC AWD	DEM	Special functions	Calibration of differential electronic module (DEM).
XC70(08-)	2013	TF-80SC AWD	ICM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	ICM	Read code	
XC70(08-)	2013	TF-80SC AWD	ICM	Clear code	
XC70(08-)	2013	TF-80SC AWD	ICM	Data stream	
XC70(08-)	2013	TF-80SC AWD	ICM	Actuation	
XC70(08-)	2013	TF-80SC AWD	SAS	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	SAS	Read code	
XC70(08-)	2013	TF-80SC AWD	SAS	Clear code	
XC70(08-)	2013	TF-80SC AWD	SAS	Data stream	
XC70(08-)	2013	TF-80SC AWD	PAM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	PAM	Read code	
XC70(08-)	2013	TF-80SC AWD	PAM	Clear code	
XC70(08-)	2013	TF-80SC AWD	PAM	Data stream	
XC70(08-)	2013	TF-80SC AWD	PAM	Special functions	Programming of Parking Assistance Module(PAM)
XC70(08-)	2013	TF-80SC AWD	IAM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	IAM	Read code	
XC70(08-)	2013	TF-80SC AWD	IAM	Clear code	
XC70(08-)	2013	TF-80SC AWD	IAM	Data stream	
XC70(08-)	2013	TF-80SC AWD	SUM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	SUM	Read code	
XC70(08-)	2013	TF-80SC AWD	SUM	Clear code	
XC70(08-)	2013	TF-80SC AWD	SUM	Data stream	
XC70(08-)	2013	TF-80SC AWD	SUM	Special functions	Calibration
XC70(08-)	2013	TF-80SC AWD	PBM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	PBM	Read code	
XC70(08-)	2013	TF-80SC AWD	PBM	Clear code	
XC70(08-)	2013	TF-80SC AWD	PBM	Data stream	
XC70(08-)	2013	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
XC70(08-)	2013	TF-80SC AWD	PBM	Special functions	Activation and service
XC70(08-)	2013	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
XC70(08-)	2013	TF-80SC AWD	CPM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	CPM	Read code	
XC70(08-)	2013	TF-80SC AWD	CPM	Clear code	
XC70(08-)	2013	TF-80SC AWD	CPM	Data stream	
XC70(08-)	2013	TF-80SC AWD	CPM	Special functions	Identification of the heater
XC70(08-)	2013	TF-80SC AWD	KVM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	KVM	Read code	
XC70(08-)	2013	TF-80SC AWD	KVM	Clear code	
XC70(08-)	2013	TF-80SC AWD	KVM	Data stream	
XC70(08-)	2013	TF-80SC AWD	KVM	Special functions	Checking all antennas
XC70(08-)	2013	TF-80SC AWD	KVM	Special functions	Check the communication with the remote control receiver
XC70(08-)	2013	TF-80SC AWD	KVM	Special functions	Remote control
XC70(08-)	2013	TF-80SC AWD	KVM	Special functions	Test of internal memory
XC70(08-)	2013	TF-80SC AWD	KVM	Special functions	Activation of quick-lock motors
XC70(08-)	2013	TF-80SC AWD	POT	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	POT	Read code	
XC70(08-)	2013	TF-80SC AWD	POT	Clear code	
XC70(08-)	2013	TF-80SC AWD	POT	Data stream	
XC70(08-)	2013	TF-80SC AWD	FSM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	FSM	Read code	
XC70(08-)	2013	TF-80SC AWD	FSM	Clear code	
XC70(08-)	2013	TF-80SC AWD	FSM	Data stream	
XC70(08-)	2013	TF-80SC AWD	RDAR	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	RDAR	Read code	
XC70(08-)	2013	TF-80SC AWD	RDAR	Clear code	
XC70(08-)	2013	TF-80SC AWD	CVM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	CVM	Read code	

model	year	type	system	function	subfunction
XC70(08-)	2013	TF-80SC AWD	CVM	Clear code	
XC70(08-)	2013	TF-80SC AWD	CVM	Data stream	
XC70(08-)	2013	TF-80SC AWD	DABM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	DABM	Read code	
XC70(08-)	2013	TF-80SC AWD	DABM	Clear code	
XC70(08-)	2013	TF-80SC AWD	DABM	Data stream	
XC70(08-)	2013	TF-80SC AWD	PAC	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	PAC	Read code	
XC70(08-)	2013	TF-80SC AWD	PAC	Clear code	
XC70(08-)	2013	TF-80SC AWD	PAC	Data stream	
XC70(08-)	2013	TF-80SC AWD	TRM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	TRM	Read code	
XC70(08-)	2013	TF-80SC AWD	TRM	Clear code	
XC70(08-)	2013	TF-80SC AWD	TRM	Data stream	
XC70(08-)	2013	TF-80SC AWD	PSCM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	PSCM	Read code	
XC70(08-)	2013	TF-80SC AWD	PSCM	Clear code	
XC70(08-)	2013	TF-80SC AWD	PSCM	Data stream	
XC70(08-)	2013	TF-80SC AWD	TVM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	TVM	Read code	
XC70(08-)	2013	TF-80SC AWD	TVM	Clear code	
XC70(08-)	2013	TF-80SC AWD	TVM	Data stream	
XC70(08-)	2013	TF-80SC AWD	RSE	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	RSE	Read code	
XC70(08-)	2013	TF-80SC AWD	RSE	Clear code	
XC70(08-)	2013	TF-80SC AWD	RSE	Data stream	
XC70(08-)	2013	TF-80SC AWD	RSE	Special functions	Checking AUK-panel.
XC70(08-)	2013	TF-80SC AWD	PHM	Sys. Info.	
XC70(08-)	2013	TF-80SC AWD	PHM	Read code	
XC70(08-)	2013	TF-80SC AWD	PHM	Clear code	
XC70(08-)	2013	TF-80SC AWD	PHM	Data stream	
XC70(08-)	2013	TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
XC70(08-)	2014	B6324S5	ECM	Sys. Info.	
XC70(08-)	2014	B6324S5	ECM	Read code	
XC70(08-)	2014	B6324S5	ECM	Clear code	
XC70(08-)	2014	B6324S5	ECM	Data stream	
XC70(08-)	2014	B6324S5	ECM	Actuation	
XC70(08-)	2014	B6324S5	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2014	B6324S4	ECM	Sys. Info.	
XC70(08-)	2014	B6324S4	ECM	Read code	
XC70(08-)	2014	B6324S4	ECM	Clear code	
XC70(08-)	2014	B6324S4	ECM	Data stream	
XC70(08-)	2014	B6324S4	ECM	Actuation	
XC70(08-)	2014	B6324S4	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2014	B6304T4	ECM	Sys. Info.	
XC70(08-)	2014	B6304T4	ECM	Read code	
XC70(08-)	2014	B6304T4	ECM	Clear code	
XC70(08-)	2014	B6304T4	ECM	Data stream	
XC70(08-)	2014	B6304T4	ECM	Actuation	
XC70(08-)	2014	B6304T4	ECM	Freeze frame	
XC70(08-)	2014	B6304T4	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2014	B4204T11	ECM	Sys. Info.	
XC70(08-)	2014	B4204T11	ECM	Read code	
XC70(08-)	2014	B4204T11	ECM	Clear code	
XC70(08-)	2014	B4204T11	ECM	Data stream	
XC70(08-)	2014	B4204T11	ECM	Freeze frame	
XC70(08-)	2014	B4204T11	ECM	Special functions	Test of fuel pressure regulation,low pressure side
XC70(08-)	2014	B4204T11	ECM	Special functions	Test of fuel pressure regulation,high pressure side
XC70(08-)	2014	B4204T11	ECM	Special functions	Resetting adaptations and wear counter for supercharger
XC70(08-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
XC70(08-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
XC70(08-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for camshaft regulation,intake
XC70(08-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
XC70(08-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
XC70(08-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for cylinder balancing
XC70(08-)	2014	B4204T11	ECM	Special functions	Resetting adaptations for the thrittle
XC70(08-)	2014	B4204T11	ECM	Special functions	Adaptation of neutral position sensor
XC70(08-)	2014	D5244T15	Diesel Eng	Sys. Info.	
XC70(08-)	2014	D5244T15	Diesel Eng	Read code	
XC70(08-)	2014	D5244T15	Diesel Eng	Clear code	
XC70(08-)	2014	D5244T15	Diesel Eng	Data stream	
XC70(08-)	2014	D5244T15	Diesel Eng	Actuation	
XC70(08-)	2014	D5244T15	Diesel Eng	Freeze frame	
XC70(08-)	2014	D5244T15	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2014	D5244T15	Diesel Eng	Special functions	Checking injectors

model	year	type	system	function	subfunction
XC70(08-)	2014	D5244T15	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2014	D5244T15	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC70(08-)	2014	D5244T15	Diesel Eng	Special functions	Checking the oil level Adjusting calculated oil level/oil quality
XC70(08-)	2014	D5244T15	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC70(08-)	2014	D5244T11	Diesel Eng	Sys. Info.	
XC70(08-)	2014	D5244T11	Diesel Eng	Read code	
XC70(08-)	2014	D5244T11	Diesel Eng	Clear code	
XC70(08-)	2014	D5244T11	Diesel Eng	Data stream	
XC70(08-)	2014	D5244T11	Diesel Eng	Actuation	
XC70(08-)	2014	D5244T11	Diesel Eng	Freeze frame	
XC70(08-)	2014	D5244T11	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2014	D5244T11	Diesel Eng	Special functions	Checking injectors
XC70(08-)	2014	D5244T11	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2014	D5244T11	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC70(08-)	2014	D5244T11	Diesel Eng	Special functions	Checking the oil level
XC70(08-)	2014	D5244T17	Diesel Eng	Sys. Info.	
XC70(08-)	2014	D5244T17	Diesel Eng	Read code	
XC70(08-)	2014	D5244T17	Diesel Eng	Clear code	
XC70(08-)	2014	D5244T17	Diesel Eng	Data stream	
XC70(08-)	2014	D5244T17	Diesel Eng	Actuation	
XC70(08-)	2014	D5244T17	Diesel Eng	Freeze frame	
XC70(08-)	2014	D5244T17	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2014	D5244T17	Diesel Eng	Special functions	Checking injectors
XC70(08-)	2014	D5244T17	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2014	D5244T17	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC70(08-)	2014	D5244T17	Diesel Eng	Special functions	Checking the oil level
XC70(08-)	2014	D5204T2	Diesel Eng	Sys. Info.	
XC70(08-)	2014	D5204T2	Diesel Eng	Read code	
XC70(08-)	2014	D5204T2	Diesel Eng	Clear code	
XC70(08-)	2014	D5204T2	Diesel Eng	Data stream	
XC70(08-)	2014	D5204T2	Diesel Eng	Actuation	
XC70(08-)	2014	D5204T2	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2014	D5204T2	Diesel Eng	Special functions	Checking injectors
XC70(08-)	2014	D5204T2	Diesel Eng	Special functions	Checking the oil level
XC70(08-)	2014	D4204T5	Diesel Eng	Sys. Info.	
XC70(08-)	2014	D4204T5	Diesel Eng	Read code	
XC70(08-)	2014	D4204T5	Diesel Eng	Clear code	
XC70(08-)	2014	D4204T5	Diesel Eng	Data stream	
XC70(08-)	2014	D4204T5	Diesel Eng	Actuation	
XC70(08-)	2014	D4204T5	Diesel Eng	Freeze frame	
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Test of fuel pressure regulation,high pressure side
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Test of fuel flow regulation valve
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Testing the fuel pressure control valve
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for fuel flow regulation valve
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for swirl damper
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for turbocharger control
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the EGR valve
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the diesel particle filter
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the particle filter differential pressure sensor
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for front heated oxygen sensor
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for rear heated oxygen sensor
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the injectors
XC70(08-)	2014	D4204T5	Diesel Eng	Special functions	Adaptation of neutral position sensor
XC70(08-)	2014	TF-80SC AWD	TCM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	TCM	Read code	
XC70(08-)	2014	TF-80SC AWD	TCM	Clear code	
XC70(08-)	2014	TF-80SC AWD	TCM	Data stream	
XC70(08-)	2014	TF-80SC AWD	TCM	Actuation	
XC70(08-)	2014	TF-80SC AWD	TCM	Freeze frame	
XC70(08-)	2014	TF-80SC AWD	TCM	Special functions	Resetting adaptation
XC70(08-)	2014	TF-80SC AWD	TCM	Special functions	Resetting the "Transmission fluid change" counter
XC70(08-)	2014	TF-80SC AWD	TCM	Special functions	Calibration of gear indication
XC70(08-)	2014	TF-80SC AWD	TCM	Special functions	Activating of gear indication
XC70(08-)	2014	TF-80SC AWD	TCM	Special functions	Control module adaptation
XC70(08-)	2014	TF-80SC AWD	ABS	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	ABS	Read code	
XC70(08-)	2014	TF-80SC AWD	ABS	Clear code	
XC70(08-)	2014	TF-80SC AWD	ABS	Data stream	
XC70(08-)	2014	TF-80SC AWD	ABS	Actuation	
XC70(08-)	2014	TF-80SC AWD	ABS	Freeze frame	
XC70(08-)	2014	TF-80SC AWD	ABS	Special functions	Calibration
XC70(08-)	2014	TF-80SC AWD	SRS	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	SRS	Read code	
XC70(08-)	2014	TF-80SC AWD	SRS	Clear code	
XC70(08-)	2014	TF-80SC AWD	SRS	Data stream	
XC70(08-)	2014	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor (OWS)



model	year	type	system	function	subfunction
XC70(08-)	2014	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
XC70(08-)	2014	TF-80SC AWD	CEM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	CEM	Read code	
XC70(08-)	2014	TF-80SC AWD	CEM	Clear code	
XC70(08-)	2014	TF-80SC AWD	CEM	Data stream	
XC70(08-)	2014	TF-80SC AWD	CEM	Actuation	
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Workshop test(TPMS)
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Reading off power supply position
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Read-out and resetting alco-lock
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Reading off alarm cause
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Activating wipers,front/rear
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Operating and initiating the roof hatch
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Restoring supplemental restraint system
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Setting day and night mode for the instrumentation
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Activating steering wheel heating
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Readout of current from battery monitoring sensor
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Readout of information stand-by current
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Remote controlled immobilising,status
XC70(08-)	2014	TF-80SC AWD	CEM	Special functions	Remote controlled immobilising,cause
XC70(08-)	2014	TF-80SC AWD	DIM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	DIM	Read code	
XC70(08-)	2014	TF-80SC AWD	DIM	Clear code	
XC70(08-)	2014	TF-80SC AWD	DIM	Data stream	
XC70(08-)	2014	TF-80SC AWD	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
XC70(08-)	2014	TF-80SC AWD	DIM	Special functions	Read-out of fuel volume
XC70(08-)	2014	TF-80SC AWD	DIM	Special functions	Display of oil vehicle speed
XC70(08-)	2014	TF-80SC AWD	DIM	Special functions	Resetting Service Bulletin
XC70(08-)	2014	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
XC70(08-)	2014	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC70(08-)	2014	TF-80SC AWD	DIM	Special functions	Programmed values,Parking Brake Warning
XC70(08-)	2014	TF-80SC AWD	PDM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	PDM	Read code	
XC70(08-)	2014	TF-80SC AWD	PDM	Clear code	
XC70(08-)	2014	TF-80SC AWD	PDM	Data stream	
XC70(08-)	2014	TF-80SC AWD	PDM	Actuation	
XC70(08-)	2014	TF-80SC AWD	PDM	Special functions	Initializing the window in the front door
XC70(08-)	2014	TF-80SC AWD	PDM	Special functions	Initializing the window in the rear door
XC70(08-)	2014	TF-80SC AWD	PDM	Special functions	Central lock motors,activating
XC70(08-)	2014	TF-80SC AWD	PSM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	PSM	Read code	
XC70(08-)	2014	TF-80SC AWD	PSM	Clear code	
XC70(08-)	2014	TF-80SC AWD	PSM	Data stream	
XC70(08-)	2014	TF-80SC AWD	PSM	Actuation	
XC70(08-)	2014	TF-80SC AWD	PSM	Special functions	Programming the seat memory delay time
XC70(08-)	2014	TF-80SC AWD	DDM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	DDM	Read code	
XC70(08-)	2014	TF-80SC AWD	DDM	Clear code	
XC70(08-)	2014	TF-80SC AWD	DDM	Data stream	
XC70(08-)	2014	TF-80SC AWD	DDM	Actuation	
XC70(08-)	2014	TF-80SC AWD	DDM	Special functions	Initializing the window in the front door.
XC70(08-)	2014	TF-80SC AWD	DDM	Special functions	Initializing the window in the rear door.
XC70(08-)	2014	TF-80SC AWD	DDM	Special functions	Central lock motors,activating
XC70(08-)	2014	TF-80SC AWD	CCM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	CCM	Read code	
XC70(08-)	2014	TF-80SC AWD	CCM	Clear code	
XC70(08-)	2014	TF-80SC AWD	CCM	Data stream	
XC70(08-)	2014	TF-80SC AWD	CCM	Actuation	
XC70(08-)	2014	TF-80SC AWD	CCM	Special functions	Reading off programmed values
XC70(08-)	2014	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module(CCM)
XC70(08-)	2014	TF-80SC AWD	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
XC70(08-)	2014	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
XC70(08-)	2014	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module(CCM)
XC70(08-)	2014	TF-80SC AWD	CCM	Special functions	Activation of blower fan run-on
XC70(08-)	2014	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
XC70(08-)	2014	TF-80SC AWD	CCM	Special functions	Programming the climate control module(CCM)
XC70(08-)	2014	TF-80SC AWD	CCM	Special functions	Rear view mirror light sensitivity
XC70(08-)	2014	TF-80SC AWD	AUD	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	AUD	Read code	

model	year	type	system	function	subfunction
XC70(08-)	2014	TF-80SC AWD	AUD	Clear code	
XC70(08-)	2014	TF-80SC AWD	AUD	Special functions	Checking headphone socket
XC70(08-)	2014	TF-80SC AWD	AUD	Special functions	Checking loudspeakers
XC70(08-)	2014	TF-80SC AWD	DEM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	DEM	Read code	
XC70(08-)	2014	TF-80SC AWD	DEM	Clear code	
XC70(08-)	2014	TF-80SC AWD	DEM	Data stream	
XC70(08-)	2014	TF-80SC AWD	DEM	Special functions	Calibration of differential electronic module (DEM).
XC70(08-)	2014	TF-80SC AWD	ICM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	ICM	Read code	
XC70(08-)	2014	TF-80SC AWD	ICM	Clear code	
XC70(08-)	2014	TF-80SC AWD	ICM	Data stream	
XC70(08-)	2014	TF-80SC AWD	ICM	Actuation	
XC70(08-)	2014	TF-80SC AWD	SAS	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	SAS	Read code	
XC70(08-)	2014	TF-80SC AWD	SAS	Clear code	
XC70(08-)	2014	TF-80SC AWD	SAS	Data stream	
XC70(08-)	2014	TF-80SC AWD	PAM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	PAM	Read code	
XC70(08-)	2014	TF-80SC AWD	PAM	Clear code	
XC70(08-)	2014	TF-80SC AWD	PAM	Data stream	
XC70(08-)	2014	TF-80SC AWD	IAM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	IAM	Read code	
XC70(08-)	2014	TF-80SC AWD	IAM	Clear code	
XC70(08-)	2014	TF-80SC AWD	IAM	Data stream	
XC70(08-)	2014	TF-80SC AWD	SUM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	SUM	Read code	
XC70(08-)	2014	TF-80SC AWD	SUM	Clear code	
XC70(08-)	2014	TF-80SC AWD	SUM	Data stream	
XC70(08-)	2014	TF-80SC AWD	SUM	Special functions	Calibration
XC70(08-)	2014	TF-80SC AWD	PBM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	PBM	Read code	
XC70(08-)	2014	TF-80SC AWD	PBM	Clear code	
XC70(08-)	2014	TF-80SC AWD	PBM	Data stream	
XC70(08-)	2014	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
XC70(08-)	2014	TF-80SC AWD	PBM	Special functions	Activation and service
XC70(08-)	2014	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
XC70(08-)	2014	TF-80SC AWD	CPM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	CPM	Read code	
XC70(08-)	2014	TF-80SC AWD	CPM	Clear code	
XC70(08-)	2014	TF-80SC AWD	CPM	Data stream	
XC70(08-)	2014	TF-80SC AWD	CPM	Special functions	Identification of the heater
XC70(08-)	2014	TF-80SC AWD	KVM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	KVM	Read code	
XC70(08-)	2014	TF-80SC AWD	KVM	Clear code	
XC70(08-)	2014	TF-80SC AWD	KVM	Data stream	
XC70(08-)	2014	TF-80SC AWD	KVM	Special functions	Checking all antennas
XC70(08-)	2014	TF-80SC AWD	KVM	Special functions	Check the communication with the remote control receiver
XC70(08-)	2014	TF-80SC AWD	KVM	Special functions	Remote control
XC70(08-)	2014	TF-80SC AWD	KVM	Special functions	Test of internal memory
XC70(08-)	2014	TF-80SC AWD	KVM	Special functions	Activation of quick-lock motors
XC70(08-)	2014	TF-80SC AWD	POT	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	POT	Read code	
XC70(08-)	2014	TF-80SC AWD	POT	Clear code	
XC70(08-)	2014	TF-80SC AWD	POT	Data stream	
XC70(08-)	2014	TF-80SC AWD	FSM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	FSM	Read code	
XC70(08-)	2014	TF-80SC AWD	FSM	Clear code	
XC70(08-)	2014	TF-80SC AWD	FSM	Data stream	
XC70(08-)	2014	TF-80SC AWD	FSM	Special functions	Calibration of radar and camera.
XC70(08-)	2014	TF-80SC AWD	FSM	Special functions	Activating heating coil,FSM
XC70(08-)	2014	TF-80SC AWD	FSM	Special functions	Activating of the indicator for visual collision warning
XC70(08-)	2014	TF-80SC AWD	FSM	Special functions	Activating the internal test procedures
XC70(08-)	2014	TF-80SC AWD	RDAR	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	RDAR	Read code	
XC70(08-)	2014	TF-80SC AWD	RDAR	Clear code	
XC70(08-)	2014	TF-80SC AWD	CVM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	CVM	Read code	
XC70(08-)	2014	TF-80SC AWD	CVM	Clear code	
XC70(08-)	2014	TF-80SC AWD	CVM	Data stream	
XC70(08-)	2014	TF-80SC AWD	DABM	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	DABM	Read code	
XC70(08-)	2014	TF-80SC AWD	DABM	Clear code	
XC70(08-)	2014	TF-80SC AWD	DABM	Data stream	
XC70(08-)	2014	TF-80SC AWD	PAC	Sys. Info.	
XC70(08-)	2014	TF-80SC AWD	PAC	Read code	
XC70(08-)	2014	TF-80SC AWD	PAC	Clear code	

model	year	type	system	function	subfunction	
XC70(08-)		2014	TF-80SC AWD	PAC	Data stream	
XC70(08-)		2014	TF-80SC AWD	TRM	Sys. Info.	
XC70(08-)		2014	TF-80SC AWD	TRM	Read code	
XC70(08-)		2014	TF-80SC AWD	TRM	Clear code	
XC70(08-)		2014	TF-80SC AWD	TRM	Data stream	
XC70(08-)		2014	TF-80SC AWD	PSCM	Sys. Info.	
XC70(08-)		2014	TF-80SC AWD	PSCM	Read code	
XC70(08-)		2014	TF-80SC AWD	PSCM	Clear code	
XC70(08-)		2014	TF-80SC AWD	PSCM	Data stream	
XC70(08-)		2014	TF-80SC AWD	TVM	Sys. Info.	
XC70(08-)		2014	TF-80SC AWD	TVM	Read code	
XC70(08-)		2014	TF-80SC AWD	TVM	Clear code	
XC70(08-)		2014	TF-80SC AWD	TVM	Special functions	Checking AUK-panel.
XC70(08-)		2014	TF-80SC AWD	RSE	Sys. Info.	
XC70(08-)		2014	TF-80SC AWD	RSE	Read code	
XC70(08-)		2014	TF-80SC AWD	RSE	Clear code	
XC70(08-)		2014	TF-80SC AWD	RSE	Data stream	
XC70(08-)		2014	TF-80SC AWD	PHM	Sys. Info.	
XC70(08-)		2014	TF-80SC AWD	PHM	Read code	
XC70(08-)		2014	TF-80SC AWD	PHM	Clear code	
XC70(08-)		2014	TF-80SC AWD	PHM	Data stream	
XC70(08-)		2014	TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
XC70(08-)	2015-2016		B6324S5	ECM	Sys. Info.	
XC70(08-)	2015-2016		B6324S5	ECM	Read code	
XC70(08-)	2015-2016		B6324S5	ECM	Clear code	
XC70(08-)	2015-2016		B6324S5	ECM	Data stream	
XC70(08-)	2015-2016		B6324S5	ECM	Actuation	
XC70(08-)	2015-2016		B6324S5	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2015-2016		B6324S4	ECM	Sys. Info.	
XC70(08-)	2015-2016		B6324S4	ECM	Read code	
XC70(08-)	2015-2016		B6324S4	ECM	Clear code	
XC70(08-)	2015-2016		B6324S4	ECM	Data stream	
XC70(08-)	2015-2016		B6324S4	ECM	Actuation	
XC70(08-)	2015-2016		B6324S4	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2015-2016		B6304T4	ECM	Sys. Info.	
XC70(08-)	2015-2016		B6304T4	ECM	Read code	
XC70(08-)	2015-2016		B6304T4	ECM	Clear code	
XC70(08-)	2015-2016		B6304T4	ECM	Data stream	
XC70(08-)	2015-2016		B6304T4	ECM	Actuation	
XC70(08-)	2015-2016		B6304T4	ECM	Freeze frame	
XC70(08-)	2015-2016		B6304T4	ECM	Special functions	Resetting the adaptation values
XC70(08-)	2015-2016		B4204T9	ECM	Sys. Info.	
XC70(08-)	2015-2016		B4204T9	ECM	Read code	
XC70(08-)	2015-2016		B4204T9	ECM	Clear code	
XC70(08-)	2015-2016		B4204T9	ECM	Data stream	
XC70(08-)	2015-2016		B4204T9	ECM	Special functions	Test of fuel pressure regulation,low pressure side
XC70(08-)	2015-2016		B4204T9	ECM	Special functions	Test of fuel pressure regulation,high pressure side
XC70(08-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations and wear counter for supercharger
XC70(08-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
XC70(08-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
XC70(08-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
XC70(08-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
XC70(08-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
XC70(08-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for cylinder balancing
XC70(08-)	2015-2016		B4204T9	ECM	Special functions	Resetting adaptations for the throttle
XC70(08-)	2015-2016		B4204T9	ECM	Special functions	Adaptation of neutral position sensor
XC70(08-)	2015-2016		D5244T15	Diesel Eng	Sys. Info.	
XC70(08-)	2015-2016		D5244T15	Diesel Eng	Read code	
XC70(08-)	2015-2016		D5244T15	Diesel Eng	Clear code	
XC70(08-)	2015-2016		D5244T15	Diesel Eng	Data stream	
XC70(08-)	2015-2016		D5244T15	Diesel Eng	Actuation	
XC70(08-)	2015-2016		D5244T15	Diesel Eng	Freeze frame	
XC70(08-)	2015-2016		D5244T15	Diesel Eng	Special functions	Resetting counter particle filter
XC70(08-)	2015-2016		D5244T15	Diesel Eng	Special functions	Checking injectors
XC70(08-)	2015-2016		D5244T15	Diesel Eng	Special functions	Adaptation of throttle module
XC70(08-)	2015-2016		D5244T15	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC70(08-)	2015-2016		D5244T15	Diesel Eng	Special functions	Checking the oil level
XC70(08-)	2015-2016		D4204T5	Diesel Eng	Sys. Info.	
XC70(08-)	2015-2016		D4204T5	Diesel Eng	Read code	
XC70(08-)	2015-2016		D4204T5	Diesel Eng	Clear code	
XC70(08-)	2015-2016		D4204T5	Diesel Eng	Data stream	
XC70(08-)	2015-2016		D4204T5	Diesel Eng	Actuation	
XC70(08-)	2015-2016		D4204T5	Diesel Eng	Freeze frame	
XC70(08-)	2015-2016		D4204T5	Diesel Eng	Special functions	Test of fuel pressure regulation,high pressure side
XC70(08-)	2015-2016		D4204T5	Diesel Eng	Special functions	Test of fuel flow regulation valve

model	year	type	system	function	subfunction
XC70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Testing the fuel pressure control valve
XC70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for fuel flow regulation valve Resetting adaptations for swirl damper
XC70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for turbocharger control
XC70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the EGR valve
XC70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the diesel particle filter
XC70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the particle filter differential pressure sensor
XC70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for front heated oxygen sensor
XC70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for rear heated oxygen sensor
XC70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Resetting adaptations for the injectors
XC70(08-)	2015-2016	D4204T5	Diesel Eng	Special functions	Adaptation of neutral position sensor
XC70(08-)	2015-2016	D4204T5	AUD	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	AUD	Read code	
XC70(08-)	2015-2016	D4204T5	AUD	Clear code	
XC70(08-)	2015-2016	D4204T5	AUD	Special functions	Checking headphone socket
XC70(08-)	2015-2016	D4204T5	AUD	Special functions	Checking loudspeakers
XC70(08-)	2015-2016	D4204T5	ABS	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	ABS	Read code	
XC70(08-)	2015-2016	D4204T5	ABS	Clear code	
XC70(08-)	2015-2016	D4204T5	ABS	Data stream	
XC70(08-)	2015-2016	D4204T5	ABS	Actuation	
XC70(08-)	2015-2016	D4204T5	ABS	Freeze frame	
XC70(08-)	2015-2016	D4204T5	ABS	Special functions	Calibration
XC70(08-)	2015-2016	D4204T5	ABS	Special functions	Restart of the brake control module (BCM)
XC70(08-)	2015-2016	D4204T5	CCM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	CCM	Read code	
XC70(08-)	2015-2016	D4204T5	CCM	Clear code	
XC70(08-)	2015-2016	D4204T5	CCM	Data stream	
XC70(08-)	2015-2016	D4204T5	CCM	Actuation	
XC70(08-)	2015-2016	D4204T5	CCM	Special functions	Reading off programmed values
XC70(08-)	2015-2016	D4204T5	CCM	Special functions	Calibrating the Climate Control Module(CCM)
XC70(08-)	2015-2016	D4204T5	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
XC70(08-)	2015-2016	D4204T5	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
XC70(08-)	2015-2016	D4204T5	CCM	Special functions	Programming the evaporator,climate control module(CCM)
XC70(08-)	2015-2016	D4204T5	CCM	Special functions	Airflow setting in rear passenger compartment
XC70(08-)	2015-2016	D4204T5	CCM	Special functions	Programming the climate control module(CCM)
XC70(08-)	2015-2016	D4204T5	CCM	Special functions	Rear view mirror light sensitivity
XC70(08-)	2015-2016	D4204T5	CEM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	CEM	Read code	
XC70(08-)	2015-2016	D4204T5	CEM	Clear code	
XC70(08-)	2015-2016	D4204T5	CEM	Data stream	
XC70(08-)	2015-2016	D4204T5	CEM	Actuation	
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Workshop test(TPMS)
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Reading off power supply position
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Read-out and resetting alco-lock
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Reading off alarm cause
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Activating wipers,front/rear
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Operating and initiating the roof hatch
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Restoring supplemental restraint system
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Setting day and night mode for the instrumentation
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Activating steering wheel heating
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Readout of current from battery monitoring sensor
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Readout of information stand-by current
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	2Remote controlled immobilising,status
XC70(08-)	2015-2016	D4204T5	CEM	Special functions	2Remote controlled immobilising,cause
XC70(08-)	2015-2016	D4204T5	CPM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	CPM	Read code	
XC70(08-)	2015-2016	D4204T5	CPM	Clear code	
XC70(08-)	2015-2016	D4204T5	CPM	Data stream	
XC70(08-)	2015-2016	D4204T5	CPM	Special functions	Identification of the heater
XC70(08-)	2015-2016	D4204T5	CVM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	CVM	Read code	
XC70(08-)	2015-2016	D4204T5	CVM	Clear code	
XC70(08-)	2015-2016	D4204T5	DABM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	DABM	Read code	
XC70(08-)	2015-2016	D4204T5	DABM	Clear code	
XC70(08-)	2015-2016	D4204T5	DDM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	DDM	Read code	

model	year	type	system	function	subfunction
XC70(08-)	2015-2016	D4204T5	DDM	Clear code	
XC70(08-)	2015-2016	D4204T5	DDM	Data stream	
XC70(08-)	2015-2016	D4204T5	DDM	Actuation	
XC70(08-)	2015-2016	D4204T5	DDM	Special functions	Initializing the window in the front door.
XC70(08-)	2015-2016	D4204T5	DDM	Special functions	Initializing the window in the rear door.
XC70(08-)	2015-2016	D4204T5	DDM	Special functions	Central lock motors,activating
XC70(08-)	2015-2016	D4204T5	DEM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	DEM	Read code	
XC70(08-)	2015-2016	D4204T5	DEM	Clear code	
XC70(08-)	2015-2016	D4204T5	DEM	Data stream	
XC70(08-)	2015-2016	D4204T5	DEM	Special functions	Calibration of differential electronic module (DEM).
XC70(08-)	2015-2016	D4204T5	DIM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	DIM	Read code	
XC70(08-)	2015-2016	D4204T5	DIM	Clear code	
XC70(08-)	2015-2016	D4204T5	DIM	Data stream	
XC70(08-)	2015-2016	D4204T5	DIM	Special functions	Resetting the service reminder indicator (SRI)
XC70(08-)	2015-2016	D4204T5	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
XC70(08-)	2015-2016	D4204T5	DIM	Special functions	Read-out of fuel volume
XC70(08-)	2015-2016	D4204T5	DIM	Special functions	Display of vehicle speed
XC70(08-)	2015-2016	D4204T5	DIM	Special functions	Programming seatbelt reminder in backseat
XC70(08-)	2015-2016	D4204T5	DIM	Special functions	Programming text message,seatbelt reminder
XC70(08-)	2015-2016	D4204T5	FSM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	FSM	Read code	
XC70(08-)	2015-2016	D4204T5	FSM	Clear code	
XC70(08-)	2015-2016	D4204T5	FSM	Data stream	
XC70(08-)	2015-2016	D4204T5	FSM	Special functions	Calibration of radar and camera.
XC70(08-)	2015-2016	D4204T5	FSM	Special functions	Activating heating coil,FSM
XC70(08-)	2015-2016	D4204T5	FSM	Special functions	Activating of the indicator for visual collision warning
XC70(08-)	2015-2016	D4204T5	FSM	Special functions	Activating the internal test procedures
XC70(08-)	2015-2016	D4204T5	HLDf	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	HLDf	Read code	
XC70(08-)	2015-2016	D4204T5	HLDf	Clear code	
XC70(08-)	2015-2016	D4204T5	HLDf	Data stream	
XC70(08-)	2015-2016	D4204T5	IAM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	IAM	Read code	
XC70(08-)	2015-2016	D4204T5	IAM	Clear code	
XC70(08-)	2015-2016	D4204T5	IAM	Data stream	
XC70(08-)	2015-2016	D4204T5	ICM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	ICM	Read code	
XC70(08-)	2015-2016	D4204T5	ICM	Clear code	
XC70(08-)	2015-2016	D4204T5	ICM	Data stream	
XC70(08-)	2015-2016	D4204T5	ICM	Special functions	Communication on MOST
XC70(08-)	2015-2016	D4204T5	KVM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	KVM	Read code	
XC70(08-)	2015-2016	D4204T5	KVM	Clear code	
XC70(08-)	2015-2016	D4204T5	KVM	Data stream	
XC70(08-)	2015-2016	D4204T5	KVM	Special functions	Checking all antennas
XC70(08-)	2015-2016	D4204T5	KVM	Special functions	Check the communication with the remote control receiver
XC70(08-)	2015-2016	D4204T5	KVM	Special functions	Remote control
XC70(08-)	2015-2016	D4204T5	KVM	Special functions	Test of internal memory
XC70(08-)	2015-2016	D4204T5	KVM	Special functions	Activation of quick-lock motors
XC70(08-)	2015-2016	D4204T5	PAC	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	PAC	Read code	
XC70(08-)	2015-2016	D4204T5	PAC	Clear code	
XC70(08-)	2015-2016	D4204T5	PAC	Data stream	
XC70(08-)	2015-2016	D4204T5	PAM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	PAM	Read code	
XC70(08-)	2015-2016	D4204T5	PAM	Clear code	
XC70(08-)	2015-2016	D4204T5	PAM	Data stream	
XC70(08-)	2015-2016	D4204T5	PBM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	PBM	Read code	
XC70(08-)	2015-2016	D4204T5	PBM	Clear code	
XC70(08-)	2015-2016	D4204T5	PBM	Data stream	
XC70(08-)	2015-2016	D4204T5	PBM	Special functions	Calibration angle sensor
XC70(08-)	2015-2016	D4204T5	PBM	Special functions	Activation and service
XC70(08-)	2015-2016	D4204T5	PBM	Special functions	Resetting the clutch pedal counter
XC70(08-)	2015-2016	D4204T5	PDM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	PDM	Read code	
XC70(08-)	2015-2016	D4204T5	PDM	Clear code	
XC70(08-)	2015-2016	D4204T5	PDM	Data stream	
XC70(08-)	2015-2016	D4204T5	PDM	Actuation	
XC70(08-)	2015-2016	D4204T5	PDM	Special functions	Initializing the window in the front door
XC70(08-)	2015-2016	D4204T5	PDM	Special functions	Initializing the window in the rear door
XC70(08-)	2015-2016	D4204T5	PDM	Special functions	Central lock motors,activating
XC70(08-)	2015-2016	D4204T5	PHM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	PHM	Read code	

model	year	type	system	function	subfunction
XC70(08-)	2015-2016	D4204T5	PHM	Clear code	
XC70(08-)	2015-2016	D4204T5	PHM	Data stream	
XC70(08-)	2015-2016	D4204T5	PHM	Special functions	Reinstalling the reserve battery
XC70(08-)	2015-2016	D4204T5	POT	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	POT	Read code	
XC70(08-)	2015-2016	D4204T5	POT	Clear code	
XC70(08-)	2015-2016	D4204T5	POT	Data stream	
XC70(08-)	2015-2016	D4204T5	POT	Special functions	Activation of boot lid opening/closing
XC70(08-)	2015-2016	D4204T5	POT	Special functions	Resetting the learned maximum opening angle
XC70(08-)	2015-2016	D4204T5	PSCM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	PSCM	Read code	
XC70(08-)	2015-2016	D4204T5	PSCM	Clear code	
XC70(08-)	2015-2016	D4204T5	PSCM	Data stream	
XC70(08-)	2015-2016	D4204T5	PSM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	PSM	Read code	
XC70(08-)	2015-2016	D4204T5	PSM	Clear code	
XC70(08-)	2015-2016	D4204T5	PSM	Data stream	
XC70(08-)	2015-2016	D4204T5	PSM	Actuation	
XC70(08-)	2015-2016	D4204T5	PSM	Special functions	Programming the seat memory delay time
XC70(08-)	2015-2016	D4204T5	RDAR	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	RDAR	Read code	
XC70(08-)	2015-2016	D4204T5	RDAR	Clear code	
XC70(08-)	2015-2016	D4204T5	RSE	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	RSE	Read code	
XC70(08-)	2015-2016	D4204T5	RSE	Clear code	
XC70(08-)	2015-2016	D4204T5	RSE	Data stream	
XC70(08-)	2015-2016	D4204T5	RSE	Special functions	Checking AUK-panel.
XC70(08-)	2015-2016	D4204T5	SAS	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	SAS	Read code	
XC70(08-)	2015-2016	D4204T5	SAS	Clear code	
XC70(08-)	2015-2016	D4204T5	SAS	Data stream	
XC70(08-)	2015-2016	D4204T5	SRS	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	SRS	Read code	
XC70(08-)	2015-2016	D4204T5	SRS	Clear code	
XC70(08-)	2015-2016	D4204T5	SRS	Data stream	
XC70(08-)	2015-2016	D4204T5	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
XC70(08-)	2015-2016	D4204T5	SRS	Special functions	Checking the PAD-light
XC70(08-)	2015-2016	D4204T5	SUB	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	SUB	Read code	
XC70(08-)	2015-2016	D4204T5	SUB	Clear code	
XC70(08-)	2015-2016	D4204T5	SUB	Data stream	
XC70(08-)	2015-2016	D4204T5	SUB	Special functions	Request for self-test
XC70(08-)	2015-2016	D4204T5	SUM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	SUM	Read code	
XC70(08-)	2015-2016	D4204T5	SUM	Clear code	
XC70(08-)	2015-2016	D4204T5	SUM	Data stream	
XC70(08-)	2015-2016	D4204T5	SUM	Special functions	Calibration
XC70(08-)	2015-2016	D4204T5	TCM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	TCM	Read code	
XC70(08-)	2015-2016	D4204T5	TCM	Clear code	
XC70(08-)	2015-2016	D4204T5	TCM	Data stream	
XC70(08-)	2015-2016	D4204T5	TCM	Actuation	
XC70(08-)	2015-2016	D4204T5	TCM	Freeze frame	
XC70(08-)	2015-2016	D4204T5	TCM	Special functions	Resetting adaptation
XC70(08-)	2015-2016	D4204T5	TCM	Special functions	Resetting the Transmission fluid change counter
XC70(08-)	2015-2016	D4204T5	TCM	Special functions	Calibration of gear indication
XC70(08-)	2015-2016	D4204T5	TCM	Special functions	Activating of gear indication
XC70(08-)	2015-2016	D4204T5	TCM	Special functions	Control module adaptation
XC70(08-)	2015-2016	D4204T5	TRM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	TRM	Read code	
XC70(08-)	2015-2016	D4204T5	TRM	Clear code	
XC70(08-)	2015-2016	D4204T5	TRM	Data stream	
XC70(08-)	2015-2016	D4204T5	TVM	Sys. Info.	
XC70(08-)	2015-2016	D4204T5	TVM	Read code	
XC70(08-)	2015-2016	D4204T5	TVM	Clear code	
V70 XC(-00)	1998	D4204T5	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70 XC(-00)	1998	D5252T MSA 7	ECM	Sys. Info.	
V70 XC(-00)	1998	D5252T MSA 7	ECM	Read code	
V70 XC(-00)	1998	D5252T MSA 7	ECM	Clear code	
V70 XC(-00)	1998	D5252T MSA 7	ECM	Data stream	
V70 XC(-00)	1998	MOTRONIC 4	ECM	Sys. Info.	

model	year	type	system	function	subfunction
V70 XC(-00)	1998	MOTRONIC 4	ECM	Read code	
V70 XC(-00)	1998	MOTRONIC 4	ECM	Clear code	
V70 XC(-00)	1998	MOTRONIC 4	ECM	Data stream	
V70 XC(-00)	1998	AW50-42	TCM	Sys. Info.	
V70 XC(-00)	1998	AW50-42	TCM	Read code	
V70 XC(-00)	1998	AW50-42	TCM	Clear code	
V70 XC(-00)	1998	AW50-42	TCM	Data stream	
V70 XC(-00)	1998	AW42 AWD	TCM	Sys. Info.	
V70 XC(-00)	1998	AW42 AWD	TCM	Read code	
V70 XC(-00)	1998	AW42 AWD	TCM	Clear code	
V70 XC(-00)	1998	AW42 AWD	TCM	Data stream	
V70 XC(-00)	1998	AW42 AWD	ABS	Sys. Info.	
V70 XC(-00)	1998	AW42 AWD	ABS	Read code	
V70 XC(-00)	1998	AW42 AWD	ABS	Clear code	
V70 XC(-00)	1998	AW42 AWD	ABS	Data stream	
V70 XC(-00)	1998	AW42 AWD	SRS	Sys. Info.	
V70 XC(-00)	1998	AW42 AWD	SRS	Read code	
V70 XC(-00)	1998	AW42 AWD	SRS	Clear code	
V70 XC(-00)	1998	AW42 AWD	SRS	Data stream	
V70 XC(-00)	1998	AW42 AWD	Combi	Sys. Info.	
V70 XC(-00)	1998	AW42 AWD	Combi	Read code	
V70 XC(-00)	1998	AW42 AWD	Combi	Clear code	
V70 XC(-00)	1998	AW42 AWD	Combi	Data stream	
V70 XC(-00)	1998	AW42 AWD	Combi	Special functions	Oil lamp reset(*)
V70 XC(-00)	1998	AW42 AWD	Immobilizer	Sys. Info.	
V70 XC(-00)	1998	AW42 AWD	Immobilizer	Read code	
V70 XC(-00)	1998	AW42 AWD	Immobilizer	Clear code	
V70 XC(-00)	1998	AW42 AWD	Immobilizer	Data stream	
V70 XC(-00)	1998	AW42 AWD	VGLA	Sys. Info.	
V70 XC(-00)	1998	AW42 AWD	VGLA	Read code	
V70 XC(-00)	1998	AW42 AWD	VGLA	Clear code	
V70 XC(-00)	1998	AW42 AWD	PSL	Sys. Info.	
V70 XC(-00)	1998	AW42 AWD	PSL	Read code	
V70 XC(-00)	1998	AW42 AWD	PSL	Clear code	
V70 XC(-00)	1998	AW42 AWD	PSL	Data stream	
V70 XC(-00)	1998	AW42 AWD	PSR	Sys. Info.	
V70 XC(-00)	1998	AW42 AWD	PSR	Read code	
V70 XC(-00)	1998	AW42 AWD	PSR	Clear code	
V70 XC(-00)	1998	AW42 AWD	PSR	Data stream	

model	year	type	system	function	subfunction
V70 XC(-00)	1998	AW42 AWD	RTI	Sys. Info.	
V70 XC(-00)	1998	AW42 AWD	RTI	Read code	
V70 XC(-00)	1998	AW42 AWD	RTI	Clear code	
V70 XC(-00)	1998	AW42 AWD	RTI	Data stream	
V70 XC(-00)	1998	AW42 AWD	RTI	Actuation	
V70 XC(-00)	1999	AW42 AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70 XC(-00)	1999	B5254T	ECM	Sys. Info.	
V70 XC(-00)	1999	B5254T	ECM	Read code	
V70 XC(-00)	1999	B5254T	ECM	Clear code	
V70 XC(-00)	1999	B5254T	ECM	Data stream	
V70 XC(-00)	1999	B5254T	ECM	Actuation	
V70 XC(-00)	1999	B5204T3	ECM	Sys. Info.	
V70 XC(-00)	1999	B5204T3	ECM	Read code	
V70 XC(-00)	1999	B5204T3	ECM	Clear code	
V70 XC(-00)	1999	B5204T3	ECM	Data stream	
V70 XC(-00)	1999	B5204T3	ECM	Actuation	
V70 XC(-00)	1999	AW42 AWD	TCM	Sys. Info.	
V70 XC(-00)	1999	AW42 AWD	TCM	Read code	
V70 XC(-00)	1999	AW42 AWD	TCM	Clear code	
V70 XC(-00)	1999	AW42 AWD	TCM	Data stream	
V70 XC(-00)	1999	AW42 AWD	TCM	Actuation	
V70 XC(-00)	1999	AW42 AWD	ABS	Sys. Info.	
V70 XC(-00)	1999	AW42 AWD	ABS	Read code	
V70 XC(-00)	1999	AW42 AWD	ABS	Clear code	
V70 XC(-00)	1999	AW42 AWD	ABS	Data stream	
V70 XC(-00)	1999	AW42 AWD	ABS	Actuation	
V70 XC(-00)	1999	AW42 AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70 XC(-00)	1999	AW42 AWD	ABS	Special functions	Calibration
V70 XC(-00)	1999	AW42 AWD	SRS	Sys. Info.	
V70 XC(-00)	1999	AW42 AWD	SRS	Read code	
V70 XC(-00)	1999	AW42 AWD	SRS	Clear code	
V70 XC(-00)	1999	AW42 AWD	SRS	Data stream	
V70 XC(-00)	1999	AW42 AWD	SRS	Actuation	
V70 XC(-00)	1999	AW42 AWD	Immobilizer	Sys. Info.	
V70 XC(-00)	1999	AW42 AWD	Immobilizer	Read code	
V70 XC(-00)	1999	AW42 AWD	Immobilizer	Clear code	
V70 XC(-00)	1999	AW42 AWD	Immobilizer	Data stream	
V70 XC(-00)	1999	AW42 AWD	Immobilizer	Actuation	
V70 XC(-00)	1999	AW42 AWD	VGLA	Sys. Info.	



model	year	type	system	function	subfunction
V70 XC(-00)	1999	AW42 AWD	VGLA	Read code	
V70 XC(-00)	1999	AW42 AWD	VGLA	Clear code	
V70 XC(-00)	1999	AW42 AWD	VGLA	Data stream	
V70 XC(-00)	1999	AW42 AWD	VGLA	Actuation	
V70 XC(-00)	1999	AW42 AWD	CI	Sys. Info.	
V70 XC(-00)	1999	AW42 AWD	CI	Read code	
V70 XC(-00)	1999	AW42 AWD	CI	Clear code	
V70 XC(-00)	1999	AW42 AWD	CI	Data stream	
V70 XC(-00)	1999	AW42 AWD	CI	Actuation	
V70 XC(-00)	1999	AW42 AWD	CI	Special functions	Resetting the service reminder indicator(SRI)
V70 XC(-00)	1999	AW42 AWD	PSL	Sys. Info.	
V70 XC(-00)	1999	AW42 AWD	PSL	Read code	
V70 XC(-00)	1999	AW42 AWD	PSL	Clear code	
V70 XC(-00)	1999	AW42 AWD	PSL	Data stream	
V70 XC(-00)	1999	AW42 AWD	PSL	Actuation	
V70 XC(-00)	1999	AW42 AWD	PSR	Sys. Info.	
V70 XC(-00)	1999	AW42 AWD	PSR	Read code	
V70 XC(-00)	1999	AW42 AWD	PSR	Clear code	
V70 XC(-00)	1999	AW42 AWD	PSR	Data stream	
V70 XC(-00)	1999	AW42 AWD	PSR	Actuation	
V70 XC(-00)	1999	AW42 AWD	CPM	Sys. Info.	
V70 XC(-00)	1999	AW42 AWD	CPM	Read code	
V70 XC(-00)	1999	AW42 AWD	CPM	Clear code	
V70 XC(-00)	1999	AW42 AWD	CPM	Data stream	
V70 XC(-00)	1999	AW42 AWD	CPM	Actuation	
V70 XC(-00)	1999	AW42 AWD	CCM	Sys. Info.	
V70 XC(-00)	1999	AW42 AWD	CCM	Read code	
V70 XC(-00)	1999	AW42 AWD	CCM	Clear code	
V70 XC(-00)	1999	AW42 AWD	CCM	Data stream	
V70 XC(-00)	1999	AW42 AWD	CCM	Actuation	
V70 XC(-00)	1999	AW42 AWD	RTI	Sys. Info.	
V70 XC(-00)	1999	AW42 AWD	RTI	Read code	
V70 XC(-00)	1999	AW42 AWD	RTI	Clear code	
V70 XC(-00)	1999	AW42 AWD	RTI	Data stream	
V70 XC(-00)	1999	AW42 AWD	RTI	Actuation	
V70 XC(-00)	2000	AW42 AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V70 XC(-00)	2000	B5244T	ECM	Sys. Info.	
V70 XC(-00)	2000	B5244T	ECM	Read code	
V70 XC(-00)	2000	B5244T	ECM	Clear code	

model	year	type	system	function	subfunction
V70 XC(-00)	2000	B5244T	ECM	Data stream	
V70 XC(-00)	2000	B5244T	ECM	Actuation	
V70 XC(-00)	2000	AW42 AWD	TCM	Sys. Info.	
V70 XC(-00)	2000	AW42 AWD	TCM	Read code	
V70 XC(-00)	2000	AW42 AWD	TCM	Clear code	
V70 XC(-00)	2000	AW42 AWD	TCM	Data stream	
V70 XC(-00)	2000	AW42 AWD	TCM	Actuation	
V70 XC(-00)	2000	AW42 AWD	TCM	Special functions	Resetting the adaptation
V70 XC(-00)	2000	AW42 AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change
V70 XC(-00)	2000	AW42 AWD	TCM	Special functions	Activating gear indication
V70 XC(-00)	2000	AW42 AWD	TCM	Special functions	Control module adaptation
V70 XC(-00)	2000	AW42 AWD	ABS	Sys. Info.	
V70 XC(-00)	2000	AW42 AWD	ABS	Read code	
V70 XC(-00)	2000	AW42 AWD	ABS	Clear code	
V70 XC(-00)	2000	AW42 AWD	ABS	Data stream	
V70 XC(-00)	2000	AW42 AWD	ABS	Actuation	
V70 XC(-00)	2000	AW42 AWD	ABS	Special functions	Checking brake light switch adjustment(*)
V70 XC(-00)	2000	AW42 AWD	ABS	Special functions	Calibration
V70 XC(-00)	2000	AW42 AWD	SRS	Sys. Info.	
V70 XC(-00)	2000	AW42 AWD	SRS	Read code	
V70 XC(-00)	2000	AW42 AWD	SRS	Clear code	
V70 XC(-00)	2000	AW42 AWD	SRS	Data stream	
V70 XC(-00)	2000	AW42 AWD	SRS	Actuation	
V70 XC(-00)	2000	AW42 AWD	Immobilizer	Sys. Info.	
V70 XC(-00)	2000	AW42 AWD	Immobilizer	Read code	
V70 XC(-00)	2000	AW42 AWD	Immobilizer	Clear code	
V70 XC(-00)	2000	AW42 AWD	Immobilizer	Data stream	
V70 XC(-00)	2000	AW42 AWD	Immobilizer	Actuation	
V70 XC(-00)	2000	AW42 AWD	VGLA	Sys. Info.	
V70 XC(-00)	2000	AW42 AWD	VGLA	Read code	
V70 XC(-00)	2000	AW42 AWD	VGLA	Clear code	
V70 XC(-00)	2000	AW42 AWD	VGLA	Data stream	
V70 XC(-00)	2000	AW42 AWD	VGLA	Actuation	
V70 XC(-00)	2000	AW42 AWD	CI	Sys. Info.	
V70 XC(-00)	2000	AW42 AWD	CI	Read code	
V70 XC(-00)	2000	AW42 AWD	CI	Clear code	
V70 XC(-00)	2000	AW42 AWD	CI	Data stream	
V70 XC(-00)	2000	AW42 AWD	CI	Actuation	
V70 XC(-00)	2000	AW42 AWD	CI	Special functions	Resetting the service reminder indicator(SRI)

model	year	type	system	function	subfunction
V70 XC(-00)	2000	AW42 AWD	PSL	Sys. Info.	
V70 XC(-00)	2000	AW42 AWD	PSL	Read code	
V70 XC(-00)	2000	AW42 AWD	PSL	Clear code	
V70 XC(-00)	2000	AW42 AWD	PSL	Data stream	
V70 XC(-00)	2000	AW42 AWD	PSL	Actuation	
V70 XC(-00)	2000	AW42 AWD	PSR	Sys. Info.	
V70 XC(-00)	2000	AW42 AWD	PSR	Read code	
V70 XC(-00)	2000	AW42 AWD	PSR	Clear code	
V70 XC(-00)	2000	AW42 AWD	PSR	Data stream	
V70 XC(-00)	2000	AW42 AWD	PSR	Actuation	
V70 XC(-00)	2000	AW42 AWD	CPM	Sys. Info.	
V70 XC(-00)	2000	AW42 AWD	CPM	Read code	
V70 XC(-00)	2000	AW42 AWD	CPM	Clear code	
V70 XC(-00)	2000	AW42 AWD	CPM	Data stream	
V70 XC(-00)	2000	AW42 AWD	CPM	Actuation	
V70 XC(-00)	2000	AW42 AWD	CCM	Sys. Info.	
V70 XC(-00)	2000	AW42 AWD	CCM	Read code	
V70 XC(-00)	2000	AW42 AWD	CCM	Clear code	
V70 XC(-00)	2000	AW42 AWD	CCM	Data stream	
V70 XC(-00)	2000	AW42 AWD	CCM	Actuation	
V70 XC(-00)	2000	AW42 AWD	RTI	Sys. Info.	
V70 XC(-00)	2000	AW42 AWD	RTI	Read code	
V70 XC(-00)	2000	AW42 AWD	RTI	Clear code	
V70 XC(-00)	2000	AW42 AWD	RTI	Data stream	
V70 XC(-00)	2000	AW42 AWD	RTI	Actuation	
V90	1997	Engine 1	ECM	Sys. Info.	
V90	1997	Engine 1	ECM	Read code	
V90	1997	Engine 1	ECM	Clear code	
V90	1997	Engine 1	ECM	Data stream	
V90	1997	MOTRONIC 4	ECM	Sys. Info.	
V90	1997	MOTRONIC 4	ECM	Read code	
V90	1997	MOTRONIC 4	ECM	Clear code	
V90	1997	MOTRONIC 4	ECM	Data stream	
V90	1997	MOTRONIC 4	TCM	Sys. Info.	
V90	1997	MOTRONIC 4	TCM	Read code	
V90	1997	MOTRONIC 4	TCM	Clear code	
V90	1997	MOTRONIC 4	TCM	Data stream	
V90	1997	MOTRONIC 4	ABS	Sys. Info.	
V90	1997	MOTRONIC 4	ABS	Read code	
V90	1997	MOTRONIC 4	ABS	Clear code	
V90	1997	MOTRONIC 4	ABS	Data stream	
V90	1997	MOTRONIC 4	ABS	Actuation	
V90	1997	MOTRONIC 4	SRS	Sys. Info.	
V90	1997	MOTRONIC 4	SRS	Read code	
V90	1997	MOTRONIC 4	SRS	Clear code	
V90	1997	MOTRONIC 4	SRS	Data stream	
V90	1997	MOTRONIC 4	IC	Sys. Info.	
V90	1997	MOTRONIC 4	IC	Special functions	Oil lamp reset(*)
V90	1997	MOTRONIC 4	Immobilizer	Sys. Info.	
V90	1997	MOTRONIC 4	Immobilizer	Read code	
V90	1997	MOTRONIC 4	Immobilizer	Clear code	
V90	1997	MOTRONIC 4	Immobilizer	Data stream	
V90	1997	MOTRONIC 4	PSL	Sys. Info.	

model	year	type	system	function	subfunction
V90	1997	MOTRONIC 4	PSL	Read code	
V90	1997	MOTRONIC 4	PSL	Clear code	
V90	1997	MOTRONIC 4	PSL	Data stream	
V90	1997	MOTRONIC 4	PSR	Sys. Info.	
V90	1997	MOTRONIC 4	PSR	Read code	
V90	1997	MOTRONIC 4	PSR	Clear code	
V90	1997	MOTRONIC 4	PSR	Data stream	
V90	1997	MOTRONIC 4	RTI	Sys. Info.	
V90	1997	MOTRONIC 4	RTI	Read code	
V90	1997	MOTRONIC 4	RTI	Clear code	
V90	1997	MOTRONIC 4	RTI	Data stream	
V90	1997	MOTRONIC 4	RTI	Actuation	
V90	1998	Engine 1	ECM	Sys. Info.	
V90	1998	Engine 1	ECM	Read code	
V90	1998	Engine 1	ECM	Clear code	
V90	1998	Engine 1	ECM	Data stream	
V90	1998	MOTRONIC 4	ECM	Sys. Info.	
V90	1998	MOTRONIC 4	ECM	Read code	
V90	1998	MOTRONIC 4	ECM	Clear code	
V90	1998	MOTRONIC 4	ECM	Data stream	
V90	1998	MOTRONIC 4	TCM	Sys. Info.	
V90	1998	MOTRONIC 4	TCM	Read code	
V90	1998	MOTRONIC 4	TCM	Clear code	
V90	1998	MOTRONIC 4	TCM	Data stream	
V90	1998	MOTRONIC 4	ABS	Sys. Info.	
V90	1998	MOTRONIC 4	ABS	Read code	
V90	1998	MOTRONIC 4	ABS	Clear code	
V90	1998	MOTRONIC 4	ABS	Data stream	
V90	1998	MOTRONIC 4	ABS	Actuation	
V90	1998	MOTRONIC 4	SRS	Sys. Info.	
V90	1998	MOTRONIC 4	SRS	Read code	
V90	1998	MOTRONIC 4	SRS	Clear code	
V90	1998	MOTRONIC 4	SRS	Data stream	
V90	1998	MOTRONIC 4	IC	Sys. Info.	
V90	1998	MOTRONIC 4	IC	Special functions	Oil lamp reset(*)
V90	1998	MOTRONIC 4	Immobilizer	Sys. Info.	
V90	1998	MOTRONIC 4	Immobilizer	Read code	
V90	1998	MOTRONIC 4	Immobilizer	Clear code	
V90	1998	MOTRONIC 4	Immobilizer	Data stream	
V90	1998	MOTRONIC 4	PSL	Sys. Info.	
V90	1998	MOTRONIC 4	PSL	Read code	
V90	1998	MOTRONIC 4	PSL	Clear code	
V90	1998	MOTRONIC 4	PSL	Data stream	
V90	1998	MOTRONIC 4	PSR	Sys. Info.	
V90	1998	MOTRONIC 4	PSR	Read code	
V90	1998	MOTRONIC 4	PSR	Clear code	
V90	1998	MOTRONIC 4	PSR	Data stream	
V90	1998	MOTRONIC 4	RTI	Sys. Info.	
V90	1998	MOTRONIC 4	RTI	Read code	
V90	1998	MOTRONIC 4	RTI	Clear code	
V90	1998	MOTRONIC 4	RTI	Data stream	
V90	1998	MOTRONIC 4	RTI	Actuation	
C30	2007	MOTRONIC 4	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C30	2007	B5244S4	ECM	Sys. Info.	
C30	2007	B5244S4	ECM	Read code	
C30	2007	B5244S4	ECM	Clear code	
C30	2007	B5244S4	ECM	Data stream	
C30	2007	B5244S4	ECM	Actuation	
C30	2007	B5244S4	ECM	Special functions	Resetting the adaptation values
C30	2007	B5244S5	ECM	Sys. Info.	
C30	2007	B5244S5	ECM	Read code	
C30	2007	B5244S5	ECM	Clear code	
C30	2007	B5244S5	ECM	Data stream	
C30	2007	B5244S5	ECM	Actuation	
C30	2007	B5244S5	ECM	Special functions	Resetting the adaptation values
C30	2007	B5244S7	ECM	Sys. Info.	
C30	2007	B5244S7	ECM	Read code	
C30	2007	B5244S7	ECM	Clear code	
C30	2007	B5244S7	ECM	Data stream	
C30	2007	B5244S7	ECM	Actuation	
C30	2007	B4204S3	ECM	Sys. Info.	
C30	2007	B4204S3	ECM	Read code	
C30	2007	B4204S3	ECM	Clear code	
C30	2007	B4204S3	ECM	Data stream	
C30	2007	B4204S3	ECM	Actuation	
C30	2007	B4204S3	ECM	Freeze frame	
C30	2007	B5254T2	ECM	Sys. Info.	

model	year	type	system	function	subfunction	
C30		2007	B5254T2	ECM	Read code	
C30		2007	B5254T2	ECM	Clear code	
C30		2007	B5254T2	ECM	Data stream	
C30		2007	B5254T2	ECM	Actuation	
C30		2007	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2007	B5254T3	ECM	Sys. Info.	
C30		2007	B5254T3	ECM	Read code	
C30		2007	B5254T3	ECM	Clear code	
C30		2007	B5254T3	ECM	Data stream	
C30		2007	B5254T3	ECM	Actuation	
C30		2007	B5254T3	ECM	Freeze frame	
C30		2007	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2007	B5254T7	ECM	Sys. Info.	
C30		2007	B5254T7	ECM	Read code	
C30		2007	B5254T7	ECM	Clear code	
C30		2007	B5254T7	ECM	Data stream	
C30		2007	B5254T7	ECM	Actuation	
C30		2007	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2007	B5204T5	ECM	Sys. Info.	
C30		2007	B5204T5	ECM	Read code	
C30		2007	B5204T5	ECM	Clear code	
C30		2007	B5204T5	ECM	Data stream	
C30		2007	B5204T5	ECM	Actuation	
C30		2007	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2007	B6294T	ECM	Sys. Info.	
C30		2007	B6294T	ECM	Read code	
C30		2007	B6294T	ECM	Clear code	
C30		2007	B6294T	ECM	Data stream	
C30		2007	B6294T	ECM	Actuation	
C30		2007	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2007	B4164S3	ECM	Sys. Info.	
C30		2007	B4164S3	ECM	Read code	
C30		2007	B4164S3	ECM	Clear code	
C30		2007	B4164S3	ECM	Data stream	
C30		2007	B4164S3	ECM	Actuation	
C30		2007	B4164S3	ECM	Freeze frame	
C30		2007	B4164S3	ECM	Special functions	Resetting the adaptation values
C30		2007	B5244T5	ECM	Sys. Info.	
C30		2007	B5244T5	ECM	Read code	
C30		2007	B5244T5	ECM	Clear code	
C30		2007	B5244T5	ECM	Data stream	
C30		2007	B5244T5	ECM	Actuation	
C30		2007	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2007	B4184S11	ECM	Sys. Info.	
C30		2007	B4184S11	ECM	Read code	
C30		2007	B4184S11	ECM	Clear code	
C30		2007	B4184S11	ECM	Data stream	
C30		2007	B4184S11	ECM	Actuation	
C30		2007	B4184S11	ECM	Freeze frame	
C30		2007	B4184S11	ECM	Special functions	Resetting the adaptation values
C30		2007	D5244T	Diesel Eng	Sys. Info.	
C30		2007	D5244T	Diesel Eng	Read code	
C30		2007	D5244T	Diesel Eng	Clear code	
C30		2007	D5244T	Diesel Eng	Data stream	
C30		2007	D5244T	Diesel Eng	Actuation	
C30		2007	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C30		2007	D5244T4	Diesel Eng	Sys. Info.	
C30		2007	D5244T4	Diesel Eng	Read code	
C30		2007	D5244T4	Diesel Eng	Clear code	
C30		2007	D5244T4	Diesel Eng	Data stream	
C30		2007	D5244T4	Diesel Eng	Actuation	
C30		2007	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
C30		2007	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30		2007	D5244T4	Diesel Eng	Special functions	Resetting counter oil
C30		2007	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
C30		2007	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30		2007	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30		2007	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
C30		2007	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30		2007	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
C30		2007	D5244T5	Diesel Eng	Sys. Info.	
C30		2007	D5244T5	Diesel Eng	Read code	
C30		2007	D5244T5	Diesel Eng	Clear code	
C30		2007	D5244T5	Diesel Eng	Data stream	
C30		2007	D5244T5	Diesel Eng	Actuation	
C30		2007	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
C30		2007	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30		2007	D5244T5	Diesel Eng	Special functions	Resetting counter oil

model	year	type	system	function	subfunction
C30		2007 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
C30		2007 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30		2007 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30		2007 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
C30		2007 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30		2007 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
C30		2007 D5244T8	Diesel Eng	Sys. Info.	
C30		2007 D5244T8	Diesel Eng	Read code	
C30		2007 D5244T8	Diesel Eng	Clear code	
C30		2007 D5244T8	Diesel Eng	Data stream	
C30		2007 D5244T8	Diesel Eng	Actuation	
C30		2007 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
C30		2007 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30		2007 D5244T8	Diesel Eng	Special functions	Resetting counter oil
C30		2007 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
C30		2007 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30		2007 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30		2007 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
C30		2007 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30		2007 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
C30		2007 D4164T	Diesel Eng	Sys. Info.	
C30		2007 D4164T	Diesel Eng	Read code	
C30		2007 D4164T	Diesel Eng	Clear code	
C30		2007 D4164T	Diesel Eng	Data stream	
C30		2007 D4164T	Diesel Eng	Actuation	
C30		2007 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
C30		2007 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C30		2007 D4164T	Diesel Eng	Special functions	Combustion of soot particles
C30		2007 D4204T	Diesel Eng	Sys. Info.	
C30		2007 D4204T	Diesel Eng	Read code	
C30		2007 D4204T	Diesel Eng	Clear code	
C30		2007 D4204T	Diesel Eng	Data stream	
C30		2007 D4204T	Diesel Eng	Actuation	
C30		2007 D4204T	Diesel Eng	Freeze frame	
C30		2007 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C30		2007 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
C30		2007 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
C30		2007 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C30		2007 D4204T	Diesel Eng	Special functions	Combustion of soot particles
C30		2007 AW55-50/51SN	TCM	Sys. Info.	
C30		2007 AW55-50/51SN	TCM	Read code	
C30		2007 AW55-50/51SN	TCM	Clear code	
C30		2007 AW55-50/51SN	TCM	Data stream	
C30		2007 AW55-50/51SN	TCM	Actuation	
C30		2007 AW55-50/51SN	TCM	Freeze frame	
C30		2007 AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C30		2007 AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30		2007 AW55-50/51SN	TCM	Special functions	Calibration of position sensor
C30		2007 4T65AWD	TCM	Sys. Info.	
C30		2007 4T65AWD	TCM	Read code	
C30		2007 4T65AWD	TCM	Clear code	
C30		2007 4T65AWD	TCM	Data stream	
C30		2007 4T65AWD	TCM	Actuation	
C30		2007 4T65AWD	TCM	Special functions	Reset adaptation to zero
C30		2007 4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30		2007 TF-80SC	TCM	Sys. Info.	
C30		2007 TF-80SC	TCM	Read code	
C30		2007 TF-80SC	TCM	Clear code	
C30		2007 TF-80SC	TCM	Data stream	
C30		2007 TF-80SC	TCM	Actuation	
C30		2007 TF-80SC	TCM	Special functions	Reset adaptation to zero
C30		2007 TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30		2007 TF-80SC	TCM	Special functions	Calibration of position sensor
C30		2007 AW50/51AWD	TCM	Sys. Info.	
C30		2007 AW50/51AWD	TCM	Read code	
C30		2007 AW50/51AWD	TCM	Clear code	

model	year	type	system	function	subfunction
C30	2007	AW50/51AW D	TCM	Data stream	
C30	2007	AW50/51AW D	TCM	Actuation	
C30	2007	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
C30	2007	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30	2007	AW50/51AW D	ABS	Sys. Info.	
C30	2007	AW50/51AW D	ABS	Read code	
C30	2007	AW50/51AW D	ABS	Clear code	
C30	2007	AW50/51AW D	ABS	Data stream	
C30	2007	AW50/51AW D	ABS	Actuation	
C30	2007	AW50/51AW D	ABS	Freeze frame	
C30	2007	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
C30	2007	AW50/51AW D	ABS	Special functions	Reading off the configuration
C30	2007	AW50/51AW D	ABS	Special functions	Calibration
C30	2007	AW50/51AW D	SRS	Sys. Info.	
C30	2007	AW50/51AW D	SRS	Read code	
C30	2007	AW50/51AW D	SRS	Clear code	
C30	2007	AW50/51AW D	SRS	Data stream	
C30	2007	AW50/51AW D	SRS	Freeze frame	
C30	2007	AW50/51AW D	CEM	Sys. Info.	
C30	2007	AW50/51AW D	CEM	Read code	
C30	2007	AW50/51AW D	CEM	Clear code	
C30	2007	AW50/51AW D	CEM	Data stream	
C30	2007	AW50/51AW D	CEM	Actuation	
C30	2007	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
C30	2007	AW50/51AW D	CEM	Special functions	Programming control module
C30	2007	AW50/51AW D	CEM	Special functions	Resetting the factory settings
C30	2007	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
C30	2007	AW50/51AW D	CEM	Special functions	Resetting crash mode
C30	2007	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
C30	2007	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
C30	2007	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
C30	2007	AW50/51AW D	CEM	Special functions	Ignition switch key position
C30	2007	AW50/51AW D	CCM	Sys. Info.	
C30	2007	AW50/51AW D	CCM	Read code	
C30	2007	AW50/51AW D	CCM	Clear code	
C30	2007	AW50/51AW D	CCM	Data stream	
C30	2007	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
C30	2007	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
C30	2007	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)

model	year	type	system	function	subfunction
C30	2007	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
C30	2007	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
C30	2007	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
C30	2007	AW50/51AW D	CCM	Special functions	Programming the seat temperature
C30	2007	AW50/51AW D	DDM	Sys. Info.	
C30	2007	AW50/51AW D	DDM	Read code	
C30	2007	AW50/51AW D	DDM	Clear code	
C30	2007	AW50/51AW D	DDM	Data stream	
C30	2007	AW50/51AW D	DDM	Actuation	
C30	2007	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C30	2007	AW50/51AW D	DIM	Sys. Info.	
C30	2007	AW50/51AW D	DIM	Read code	
C30	2007	AW50/51AW D	DIM	Clear code	
C30	2007	AW50/51AW D	DIM	Data stream	
C30	2007	AW50/51AW D	DIM	Actuation	
C30	2007	AW50/51AW D	DIM	Freeze frame	
C30	2007	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
C30	2007	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
C30	2007	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
C30	2007	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
C30	2007	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
C30	2007	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
C30	2007	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
C30	2007	AW50/51AW D	DIM	Special functions	Programming of clock (*)
C30	2007	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
C30	2007	AW50/51AW D	DIM	Special functions	Programming parking brake warning
C30	2007	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
C30	2007	AW50/51AW D	DIM	Special functions	Programming instrument lighting
C30	2007	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
C30	2007	AW50/51AW D	DIM	Special functions	Display of DSTC message
C30	2007	AW50/51AW D	DIM	Special functions	Read out programmed values
C30	2007	AW50/51AW D	PDM	Sys. Info.	
C30	2007	AW50/51AW D	PDM	Read code	
C30	2007	AW50/51AW D	PDM	Clear code	
C30	2007	AW50/51AW D	PDM	Data stream	
C30	2007	AW50/51AW D	PDM	Actuation	
C30	2007	AW50/51AW D	PDM	Special functions	Initialize the window(*)
C30	2007	AW50/51AW D	SWM	Sys. Info.	
C30	2007	AW50/51AW D	SWM	Read code	



model	year	type	system	function	subfunction
C30	2007	AW50/51AW D	SWM	Clear code	
C30	2007	AW50/51AW D	SWM	Data stream	
C30	2007	AW50/51AW D	PSM	Sys. Info.	
C30	2007	AW50/51AW D	PSM	Read code	
C30	2007	AW50/51AW D	PSM	Clear code	
C30	2007	AW50/51AW D	PSM	Data stream	
C30	2007	AW50/51AW D	PSM	Actuation	
C30	2007	AW50/51AW D	PHM	Sys. Info.	
C30	2007	AW50/51AW D	PHM	Read code	
C30	2007	AW50/51AW D	PHM	Clear code	
C30	2007	AW50/51AW D	PHM	Data stream	
C30	2007	AW50/51AW D	PHM	Actuation	
C30	2007	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
C30	2007	AW50/51AW D	AUD	Sys. Info.	
C30	2007	AW50/51AW D	AUD	Read code	
C30	2007	AW50/51AW D	AUD	Clear code	
C30	2007	AW50/51AW D	DEM	Sys. Info.	
C30	2007	AW50/51AW D	DEM	Read code	
C30	2007	AW50/51AW D	DEM	Clear code	
C30	2007	AW50/51AW D	DEM	Data stream	
C30	2007	AW50/51AW D	ICM	Sys. Info.	
C30	2007	AW50/51AW D	ICM	Read code	
C30	2007	AW50/51AW D	ICM	Clear code	
C30	2007	AW50/51AW D	ICM	Data stream	
C30	2007	AW50/51AW D	ICM	Actuation	
C30	2007	AW50/51AW D	MMM	Sys. Info.	
C30	2007	AW50/51AW D	MMM	Read code	
C30	2007	AW50/51AW D	MMM	Clear code	
C30	2007	AW50/51AW D	MMM	Data stream	
C30	2007	AW50/51AW D	AEM	Sys. Info.	
C30	2007	AW50/51AW D	AEM	Read code	
C30	2007	AW50/51AW D	AEM	Clear code	
C30	2007	AW50/51AW D	AEM	Data stream	
C30	2007	AW50/51AW D	AEM	Actuation	
C30	2007	AW50/51AW D	ADM	Sys. Info.	
C30	2007	AW50/51AW D	ADM	Read code	
C30	2007	AW50/51AW D	ADM	Clear code	
C30	2007	AW50/51AW D	ADM	Data stream	
C30	2007	AW50/51AW D	EPS	Sys. Info.	

model	year	type	system	function	subfunction
C30	2007	AW50/51AW D	EPS	Read code	
C30	2007	AW50/51AW D	EPS	Clear code	
C30	2007	AW50/51AW D	EPS	Data stream	
C30	2007	AW50/51AW D	PAM	Sys. Info.	
C30	2007	AW50/51AW D	PAM	Read code	
C30	2007	AW50/51AW D	PAM	Clear code	
C30	2007	AW50/51AW D	PAM	Data stream	
C30	2007	AW50/51AW D	IAM	Sys. Info.	
C30	2007	AW50/51AW D	IAM	Read code	
C30	2007	AW50/51AW D	IAM	Clear code	
C30	2007	AW50/51AW D	IAM	Data stream	
C30	2007	AW50/51AW D	IAM	Actuation	
C30	2007	AW50/51AW D	AFM	Sys. Info.	
C30	2007	AW50/51AW D	AFM	Read code	
C30	2007	AW50/51AW D	AFM	Clear code	
C30	2007	AW50/51AW D	AFM	Data stream	
C30	2007	AW50/51AW D	AFM	Actuation	
C30	2007	AW50/51AW D	MPM	Sys. Info.	
C30	2007	AW50/51AW D	MPM	Read code	
C30	2007	AW50/51AW D	MPM	Clear code	
C30	2007	AW50/51AW D	MPM	Data stream	
C30	2007	AW50/51AW D	MPM	Actuation	
C30	2007	AW50/51AW D	CPM	Sys. Info.	
C30	2007	AW50/51AW D	CPM	Read code	
C30	2007	AW50/51AW D	CPM	Clear code	
C30	2007	AW50/51AW D	CPM	Data stream	
C30	2007	AW50/51AW D	CPM	Actuation	
C30	2007	AW50/51AW D	HCM	Sys. Info.	
C30	2007	AW50/51AW D	HCM	Read code	
C30	2007	AW50/51AW D	HCM	Clear code	
C30	2007	AW50/51AW D	HCM	Special functions	Calibration of position sensor
C30	2007	AW50/51AW D	KVM	Sys. Info.	
C30	2007	AW50/51AW D	KVM	Read code	
C30	2007	AW50/51AW D	KVM	Clear code	
C30	2007	AW50/51AW D	KVM	Data stream	
C30	2007	AW50/51AW D	KVM	Actuation	
C30	2007	AW50/51AW D	RDAR	Sys. Info.	
C30	2007	AW50/51AW D	RDAR	Read code	
C30	2007	AW50/51AW D	RDAR	Clear code	

model	year	type	system	function	subfunction
C30	2007	AW50/51AW D	RDAR	Data stream	
C30	2007	AW50/51AW D	SUB	Sys. Info.	
C30	2007	AW50/51AW D	SUB	Read code	
C30	2007	AW50/51AW D	SUB	Clear code	
C30	2007	AW50/51AW D	SUB	Data stream	
C30	2007	AW50/51AW D	CVM	Sys. Info.	
C30	2007	AW50/51AW D	CVM	Read code	
C30	2007	AW50/51AW D	CVM	Clear code	
C30	2007	AW50/51AW D	CVM	Data stream	
C30	2007	AW50/51AW D	DABM	Sys. Info.	
C30	2007	AW50/51AW D	DABM	Read code	
C30	2007	AW50/51AW D	DABM	Clear code	
C30	2007	AW50/51AW D	DABM	Data stream	
C30	2007	AW50/51AW D	PAC	Sys. Info.	
C30	2007	AW50/51AW D	PAC	Read code	
C30	2007	AW50/51AW D	PAC	Clear code	
C30	2007	AW50/51AW D	PAC	Data stream	
C30	2007	AW50/51AW D	TRM	Sys. Info.	
C30	2007	AW50/51AW D	TRM	Read code	
C30	2007	AW50/51AW D	TRM	Clear code	
C30	2007	AW50/51AW D	TRM	Data stream	
C30	2008	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C30	2008	B5244S4	ECM	Sys. Info.	
C30	2008	B5244S4	ECM	Read code	
C30	2008	B5244S4	ECM	Clear code	
C30	2008	B5244S4	ECM	Data stream	
C30	2008	B5244S4	ECM	Actuation	
C30	2008	B5244S4	ECM	Freeze frame	
C30	2008	B5244S4	ECM	Special functions	Resetting the adaptation values
C30	2008	B5244S5	ECM	Sys. Info.	
C30	2008	B5244S5	ECM	Read code	
C30	2008	B5244S5	ECM	Clear code	
C30	2008	B5244S5	ECM	Data stream	
C30	2008	B5244S5	ECM	Actuation	
C30	2008	B5244S5	ECM	Special functions	Resetting the adaptation values
C30	2008	B5244S7	ECM	Sys. Info.	
C30	2008	B5244S7	ECM	Read code	
C30	2008	B5244S7	ECM	Clear code	
C30	2008	B5244S7	ECM	Data stream	
C30	2008	B5244S7	ECM	Actuation	
C30	2008	B4204S3	ECM	Sys. Info.	
C30	2008	B4204S3	ECM	Read code	
C30	2008	B4204S3	ECM	Clear code	
C30	2008	B4204S3	ECM	Data stream	
C30	2008	B4204S3	ECM	Actuation	
C30	2008	B4204S3	ECM	Freeze frame	
C30	2008	B5254T2	ECM	Sys. Info.	
C30	2008	B5254T2	ECM	Read code	
C30	2008	B5254T2	ECM	Clear code	
C30	2008	B5254T2	ECM	Data stream	
C30	2008	B5254T2	ECM	Actuation	
C30	2008	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
C30	2008	B5254T3	ECM	Sys. Info.	
C30	2008	B5254T3	ECM	Read code	
C30	2008	B5254T3	ECM	Clear code	
C30	2008	B5254T3	ECM	Data stream	

model	year	type	system	function	subfunction
C30		2008 B5254T3	ECM	Actuation	
C30		2008 B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2008 B5254T7	ECM	Sys. Info.	
C30		2008 B5254T7	ECM	Read code	
C30		2008 B5254T7	ECM	Clear code	
C30		2008 B5254T7	ECM	Data stream	
C30		2008 B5254T7	ECM	Actuation	
C30		2008 B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2008 B5204T5	ECM	Sys. Info.	
C30		2008 B5204T5	ECM	Read code	
C30		2008 B5204T5	ECM	Clear code	
C30		2008 B5204T5	ECM	Data stream	
C30		2008 B5204T5	ECM	Actuation	
C30		2008 B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2008 B6294T	ECM	Sys. Info.	
C30		2008 B6294T	ECM	Read code	
C30		2008 B6294T	ECM	Clear code	
C30		2008 B6294T	ECM	Data stream	
C30		2008 B6294T	ECM	Actuation	
C30		2008 B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2008 B4164S3	ECM	Sys. Info.	
C30		2008 B4164S3	ECM	Read code	
C30		2008 B4164S3	ECM	Clear code	
C30		2008 B4164S3	ECM	Data stream	
C30		2008 B4164S3	ECM	Actuation	
C30		2008 B4164S3	ECM	Freeze frame	
C30		2008 B4164S3	ECM	Special functions	Resetting the adaptation values
C30		2008 B5244T5	ECM	Sys. Info.	
C30		2008 B5244T5	ECM	Read code	
C30		2008 B5244T5	ECM	Clear code	
C30		2008 B5244T5	ECM	Data stream	
C30		2008 B5244T5	ECM	Actuation	
C30		2008 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2008 B4184S11	ECM	Sys. Info.	
C30		2008 B4184S11	ECM	Read code	
C30		2008 B4184S11	ECM	Clear code	
C30		2008 B4184S11	ECM	Data stream	
C30		2008 B4184S11	ECM	Actuation	
C30		2008 B4184S11	ECM	Freeze frame	
C30		2008 B4184S11	ECM	Special functions	Resetting the adaptation values
C30		2008 D5244T	Diesel Eng	Sys. Info.	
C30		2008 D5244T	Diesel Eng	Read code	
C30		2008 D5244T	Diesel Eng	Clear code	
C30		2008 D5244T	Diesel Eng	Data stream	
C30		2008 D5244T	Diesel Eng	Actuation	
C30		2008 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C30		2008 D5244T4	Diesel Eng	Sys. Info.	
C30		2008 D5244T4	Diesel Eng	Read code	
C30		2008 D5244T4	Diesel Eng	Clear code	
C30		2008 D5244T4	Diesel Eng	Data stream	
C30		2008 D5244T4	Diesel Eng	Actuation	
C30		2008 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
C30		2008 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30		2008 D5244T4	Diesel Eng	Special functions	Resetting counter oil
C30		2008 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
C30		2008 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30		2008 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30		2008 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
C30		2008 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30		2008 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
C30		2008 D5244T5	Diesel Eng	Sys. Info.	
C30		2008 D5244T5	Diesel Eng	Read code	
C30		2008 D5244T5	Diesel Eng	Clear code	
C30		2008 D5244T5	Diesel Eng	Data stream	
C30		2008 D5244T5	Diesel Eng	Actuation	
C30		2008 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
C30		2008 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30		2008 D5244T5	Diesel Eng	Special functions	Resetting counter oil
C30		2008 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
C30		2008 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30		2008 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30		2008 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
C30		2008 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30		2008 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
C30		2008 D5244T8	Diesel Eng	Sys. Info.	
C30		2008 D5244T8	Diesel Eng	Read code	
C30		2008 D5244T8	Diesel Eng	Clear code	
C30		2008 D5244T8	Diesel Eng	Data stream	

model	year	type	system	function	subfunction
C30		2008 D5244T8	Diesel Eng	Actuation	
C30		2008 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
C30		2008 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30		2008 D5244T8	Diesel Eng	Special functions	Resetting counter oil
C30		2008 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
C30		2008 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30		2008 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30		2008 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
C30		2008 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30		2008 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
C30		2008 D4164T	Diesel Eng	Sys. Info.	
C30		2008 D4164T	Diesel Eng	Read code	
C30		2008 D4164T	Diesel Eng	Clear code	
C30		2008 D4164T	Diesel Eng	Data stream	
C30		2008 D4164T	Diesel Eng	Actuation	
C30		2008 D4164T	Diesel Eng	Freeze frame	
C30		2008 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
C30		2008 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C30		2008 D4164T	Diesel Eng	Special functions	Combustion of soot particles
C30		2008 D4204T	Diesel Eng	Sys. Info.	
C30		2008 D4204T	Diesel Eng	Read code	
C30		2008 D4204T	Diesel Eng	Clear code	
C30		2008 D4204T	Diesel Eng	Data stream	
C30		2008 D4204T	Diesel Eng	Actuation	
C30		2008 D4204T	Diesel Eng	Freeze frame	
C30		2008 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C30		2008 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
C30		2008 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
C30		2008 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C30		2008 D4204T	Diesel Eng	Special functions	Combustion of soot particles
C30		2008 AW55-50/51SN	TCM	Sys. Info.	
C30		2008 AW55-50/51SN	TCM	Read code	
C30		2008 AW55-50/51SN	TCM	Clear code	
C30		2008 AW55-50/51SN	TCM	Data stream	
C30		2008 AW55-50/51SN	TCM	Actuation	
C30		2008 AW55-50/51SN	TCM	Freeze frame	
C30		2008 AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C30		2008 AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30		2008 AW55-50/51SN	TCM	Special functions	Calibration of position sensor
C30		2008 4T65AWD	TCM	Sys. Info.	
C30		2008 4T65AWD	TCM	Read code	
C30		2008 4T65AWD	TCM	Clear code	
C30		2008 4T65AWD	TCM	Data stream	
C30		2008 4T65AWD	TCM	Actuation	
C30		2008 4T65AWD	TCM	Special functions	Reset adaptation to zero
C30		2008 4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30		2008 TF-80SC	TCM	Sys. Info.	
C30		2008 TF-80SC	TCM	Read code	
C30		2008 TF-80SC	TCM	Clear code	
C30		2008 TF-80SC	TCM	Data stream	
C30		2008 TF-80SC	TCM	Actuation	
C30		2008 TF-80SC	TCM	Special functions	Reset adaptation to zero
C30		2008 TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30		2008 TF-80SC	TCM	Special functions	Calibration of position sensor
C30		2008 AW50/51AW D	TCM	Sys. Info.	
C30		2008 AW50/51AW D	TCM	Read code	
C30		2008 AW50/51AW D	TCM	Clear code	
C30		2008 AW50/51AW D	TCM	Data stream	
C30		2008 AW50/51AW D	TCM	Actuation	
C30		2008 AW50/51AW D	TCM	Special functions	Reset adaptation to zero
C30		2008 AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)

model	year	type	system	function	subfunction
C30	2008	AW50/51AW D	ABS	Sys. Info.	
C30	2008	AW50/51AW D	ABS	Read code	
C30	2008	AW50/51AW D	ABS	Clear code	
C30	2008	AW50/51AW D	ABS	Data stream	
C30	2008	AW50/51AW D	ABS	Actuation	
C30	2008	AW50/51AW D	ABS	Freeze frame	
C30	2008	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
C30	2008	AW50/51AW D	ABS	Special functions	Reading off the configuration
C30	2008	AW50/51AW D	ABS	Special functions	Calibration
C30	2008	AW50/51AW D	SRS	Sys. Info.	
C30	2008	AW50/51AW D	SRS	Read code	
C30	2008	AW50/51AW D	SRS	Clear code	
C30	2008	AW50/51AW D	SRS	Data stream	
C30	2008	AW50/51AW D	SRS	Freeze frame	
C30	2008	AW50/51AW D	CEM	Sys. Info.	
C30	2008	AW50/51AW D	CEM	Read code	
C30	2008	AW50/51AW D	CEM	Clear code	
C30	2008	AW50/51AW D	CEM	Data stream	
C30	2008	AW50/51AW D	CEM	Actuation	
C30	2008	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
C30	2008	AW50/51AW D	CEM	Special functions	Programming control module
C30	2008	AW50/51AW D	CEM	Special functions	Resetting the factory settings
C30	2008	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
C30	2008	AW50/51AW D	CEM	Special functions	Resetting crash mode
C30	2008	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
C30	2008	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
C30	2008	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
C30	2008	AW50/51AW D	CEM	Special functions	Ignition switch key position
C30	2008	AW50/51AW D	CCM	Sys. Info.	
C30	2008	AW50/51AW D	CCM	Read code	
C30	2008	AW50/51AW D	CCM	Clear code	
C30	2008	AW50/51AW D	CCM	Data stream	
C30	2008	AW50/51AW D	CCM	Special functions	Self-adjustment of adamer motor end stops(*)
C30	2008	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
C30	2008	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
C30	2008	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
C30	2008	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
C30	2008	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
C30	2008	AW50/51AW D	CCM	Special functions	Programming the seat temperature

model	year	type	system	function	subfunction
C30	2008	AW50/51AW D	DDM	Sys. Info.	
C30	2008	AW50/51AW D	DDM	Read code	
C30	2008	AW50/51AW D	DDM	Clear code	
C30	2008	AW50/51AW D	DDM	Data stream	
C30	2008	AW50/51AW D	DDM	Actuation	
C30	2008	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C30	2008	AW50/51AW D	DIM	Sys. Info.	
C30	2008	AW50/51AW D	DIM	Read code	
C30	2008	AW50/51AW D	DIM	Clear code	
C30	2008	AW50/51AW D	DIM	Data stream	
C30	2008	AW50/51AW D	DIM	Actuation	
C30	2008	AW50/51AW D	DIM	Freeze frame	
C30	2008	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
C30	2008	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
C30	2008	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
C30	2008	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
C30	2008	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
C30	2008	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
C30	2008	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
C30	2008	AW50/51AW D	DIM	Special functions	Programming of clock (*)
C30	2008	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
C30	2008	AW50/51AW D	DIM	Special functions	Programming parking brake warning
C30	2008	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
C30	2008	AW50/51AW D	DIM	Special functions	Programming instrument lighting
C30	2008	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
C30	2008	AW50/51AW D	DIM	Special functions	Display of DSTC message
C30	2008	AW50/51AW D	DIM	Special functions	Read out programmed values
C30	2008	AW50/51AW D	PDM	Sys. Info.	
C30	2008	AW50/51AW D	PDM	Read code	
C30	2008	AW50/51AW D	PDM	Clear code	
C30	2008	AW50/51AW D	PDM	Data stream	
C30	2008	AW50/51AW D	PDM	Actuation	
C30	2008	AW50/51AW D	PDM	Special functions	Initialize the window(*)
C30	2008	AW50/51AW D	SWM	Sys. Info.	
C30	2008	AW50/51AW D	SWM	Read code	
C30	2008	AW50/51AW D	SWM	Clear code	
C30	2008	AW50/51AW D	SWM	Data stream	
C30	2008	AW50/51AW D	PSM	Sys. Info.	
C30	2008	AW50/51AW D	PSM	Read code	

model	year	type	system	function	subfunction
C30	2008	AW50/51AW D	PSM	Clear code	
C30	2008	AW50/51AW D	PSM	Data stream	
C30	2008	AW50/51AW D	PSM	Actuation	
C30	2008	AW50/51AW D	PHM	Sys. Info.	
C30	2008	AW50/51AW D	PHM	Read code	
C30	2008	AW50/51AW D	PHM	Clear code	
C30	2008	AW50/51AW D	PHM	Data stream	
C30	2008	AW50/51AW D	PHM	Actuation	
C30	2008	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
C30	2008	AW50/51AW D	AUD	Sys. Info.	
C30	2008	AW50/51AW D	AUD	Read code	
C30	2008	AW50/51AW D	AUD	Clear code	
C30	2008	AW50/51AW D	DEM	Sys. Info.	
C30	2008	AW50/51AW D	DEM	Read code	
C30	2008	AW50/51AW D	DEM	Clear code	
C30	2008	AW50/51AW D	DEM	Data stream	
C30	2008	AW50/51AW D	ICM	Sys. Info.	
C30	2008	AW50/51AW D	ICM	Read code	
C30	2008	AW50/51AW D	ICM	Clear code	
C30	2008	AW50/51AW D	ICM	Data stream	
C30	2008	AW50/51AW D	ICM	Actuation	
C30	2008	AW50/51AW D	MMM	Sys. Info.	
C30	2008	AW50/51AW D	MMM	Read code	
C30	2008	AW50/51AW D	MMM	Clear code	
C30	2008	AW50/51AW D	MMM	Data stream	
C30	2008	AW50/51AW D	AEM	Sys. Info.	
C30	2008	AW50/51AW D	AEM	Read code	
C30	2008	AW50/51AW D	AEM	Clear code	
C30	2008	AW50/51AW D	AEM	Data stream	
C30	2008	AW50/51AW D	AEM	Actuation	
C30	2008	AW50/51AW D	ADM	Sys. Info.	
C30	2008	AW50/51AW D	ADM	Read code	
C30	2008	AW50/51AW D	ADM	Clear code	
C30	2008	AW50/51AW D	ADM	Data stream	
C30	2008	AW50/51AW D	EPS	Sys. Info.	
C30	2008	AW50/51AW D	EPS	Read code	
C30	2008	AW50/51AW D	EPS	Clear code	
C30	2008	AW50/51AW D	EPS	Data stream	
C30	2008	AW50/51AW D	PAM	Sys. Info.	



model	year	type	system	function	subfunction
C30	2008	AW50/51AW D	PAM	Read code	
C30	2008	AW50/51AW D	PAM	Clear code	
C30	2008	AW50/51AW D	PAM	Data stream	
C30	2008	AW50/51AW D	IAM	Sys. Info.	
C30	2008	AW50/51AW D	IAM	Read code	
C30	2008	AW50/51AW D	IAM	Clear code	
C30	2008	AW50/51AW D	IAM	Data stream	
C30	2008	AW50/51AW D	IAM	Actuation	
C30	2008	AW50/51AW D	AFM	Sys. Info.	
C30	2008	AW50/51AW D	AFM	Read code	
C30	2008	AW50/51AW D	AFM	Clear code	
C30	2008	AW50/51AW D	AFM	Data stream	
C30	2008	AW50/51AW D	AFM	Actuation	
C30	2008	AW50/51AW D	MPM	Sys. Info.	
C30	2008	AW50/51AW D	MPM	Read code	
C30	2008	AW50/51AW D	MPM	Clear code	
C30	2008	AW50/51AW D	MPM	Data stream	
C30	2008	AW50/51AW D	MPM	Actuation	
C30	2008	AW50/51AW D	CPM	Sys. Info.	
C30	2008	AW50/51AW D	CPM	Read code	
C30	2008	AW50/51AW D	CPM	Clear code	
C30	2008	AW50/51AW D	CPM	Data stream	
C30	2008	AW50/51AW D	CPM	Actuation	
C30	2008	AW50/51AW D	HCM	Sys. Info.	
C30	2008	AW50/51AW D	HCM	Read code	
C30	2008	AW50/51AW D	HCM	Clear code	
C30	2008	AW50/51AW D	HCM	Special functions	Calibration of position sensor
C30	2008	AW50/51AW D	KVM	Sys. Info.	
C30	2008	AW50/51AW D	KVM	Read code	
C30	2008	AW50/51AW D	KVM	Clear code	
C30	2008	AW50/51AW D	KVM	Data stream	
C30	2008	AW50/51AW D	KVM	Actuation	
C30	2008	AW50/51AW D	RDAR	Sys. Info.	
C30	2008	AW50/51AW D	RDAR	Read code	
C30	2008	AW50/51AW D	RDAR	Clear code	
C30	2008	AW50/51AW D	RDAR	Data stream	
C30	2008	AW50/51AW D	SUB	Sys. Info.	
C30	2008	AW50/51AW D	SUB	Read code	
C30	2008	AW50/51AW D	SUB	Clear code	

model	year	type	system	function	subfunction
C30	2008	AW50/51AW D	SUB	Data stream	
C30	2008	AW50/51AW D	CVM	Sys. Info.	
C30	2008	AW50/51AW D	CVM	Read code	
C30	2008	AW50/51AW D	CVM	Clear code	
C30	2008	AW50/51AW D	CVM	Data stream	
C30	2008	AW50/51AW D	DABM	Sys. Info.	
C30	2008	AW50/51AW D	DABM	Read code	
C30	2008	AW50/51AW D	DABM	Clear code	
C30	2008	AW50/51AW D	DABM	Data stream	
C30	2008	AW50/51AW D	PAC	Sys. Info.	
C30	2008	AW50/51AW D	PAC	Read code	
C30	2008	AW50/51AW D	PAC	Clear code	
C30	2008	AW50/51AW D	PAC	Data stream	
C30	2008	AW50/51AW D	TRM	Sys. Info.	
C30	2008	AW50/51AW D	TRM	Read code	
C30	2008	AW50/51AW D	TRM	Clear code	
C30	2008	AW50/51AW D	TRM	Data stream	
C30	2009	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C30	2009	B5244S4	ECM	Sys. Info.	
C30	2009	B5244S4	ECM	Read code	
C30	2009	B5244S4	ECM	Clear code	
C30	2009	B5244S4	ECM	Data stream	
C30	2009	B5244S4	ECM	Actuation	
C30	2009	B5244S4	ECM	Freeze frame	
C30	2009	B5244S4	ECM	Special functions	Resetting the adaptation values
C30	2009	B5244S5	ECM	Sys. Info.	
C30	2009	B5244S5	ECM	Read code	
C30	2009	B5244S5	ECM	Clear code	
C30	2009	B5244S5	ECM	Data stream	
C30	2009	B5244S5	ECM	Actuation	
C30	2009	B5244S5	ECM	Special functions	Resetting the adaptation values
C30	2009	B5244S7	ECM	Sys. Info.	
C30	2009	B5244S7	ECM	Read code	
C30	2009	B5244S7	ECM	Clear code	
C30	2009	B5244S7	ECM	Data stream	
C30	2009	B5244S7	ECM	Actuation	
C30	2009	B4204S3	ECM	Sys. Info.	
C30	2009	B4204S3	ECM	Read code	
C30	2009	B4204S3	ECM	Clear code	
C30	2009	B4204S3	ECM	Data stream	
C30	2009	B4204S3	ECM	Actuation	
C30	2009	B4204S3	ECM	Freeze frame	
C30	2009	B5254T2	ECM	Sys. Info.	
C30	2009	B5254T2	ECM	Read code	
C30	2009	B5254T2	ECM	Clear code	
C30	2009	B5254T2	ECM	Data stream	
C30	2009	B5254T2	ECM	Actuation	
C30	2009	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
C30	2009	B5254T3	ECM	Sys. Info.	
C30	2009	B5254T3	ECM	Read code	
C30	2009	B5254T3	ECM	Clear code	
C30	2009	B5254T3	ECM	Data stream	
C30	2009	B5254T3	ECM	Actuation	
C30	2009	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
C30	2009	B5254T7	ECM	Sys. Info.	
C30	2009	B5254T7	ECM	Read code	
C30	2009	B5254T7	ECM	Clear code	
C30	2009	B5254T7	ECM	Data stream	
C30	2009	B5254T7	ECM	Actuation	
C30	2009	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)

model	year	type	system	function	subfunction
C30		2009 B5204T5	ECM	Sys. Info.	
C30		2009 B5204T5	ECM	Read code	
C30		2009 B5204T5	ECM	Clear code	
C30		2009 B5204T5	ECM	Data stream	
C30		2009 B5204T5	ECM	Actuation	
C30		2009 B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2009 B6294T	ECM	Sys. Info.	
C30		2009 B6294T	ECM	Read code	
C30		2009 B6294T	ECM	Clear code	
C30		2009 B6294T	ECM	Data stream	
C30		2009 B6294T	ECM	Actuation	
C30		2009 B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2009 B4164S3	ECM	Sys. Info.	
C30		2009 B4164S3	ECM	Read code	
C30		2009 B4164S3	ECM	Clear code	
C30		2009 B4164S3	ECM	Data stream	
C30		2009 B4164S3	ECM	Actuation	
C30		2009 B4164S3	ECM	Freeze frame	
C30		2009 B4164S3	ECM	Special functions	Resetting the adaptation values
C30		2009 B5244T5	ECM	Sys. Info.	
C30		2009 B5244T5	ECM	Read code	
C30		2009 B5244T5	ECM	Clear code	
C30		2009 B5244T5	ECM	Data stream	
C30		2009 B5244T5	ECM	Actuation	
C30		2009 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
C30		2009 B4184S11	ECM	Sys. Info.	
C30		2009 B4184S11	ECM	Read code	
C30		2009 B4184S11	ECM	Clear code	
C30		2009 B4184S11	ECM	Data stream	
C30		2009 B4184S11	ECM	Actuation	
C30		2009 B4184S11	ECM	Freeze frame	
C30		2009 B4184S11	ECM	Special functions	Resetting the adaptation values
C30		2009 D5244T	Diesel Eng	Sys. Info.	
C30		2009 D5244T	Diesel Eng	Read code	
C30		2009 D5244T	Diesel Eng	Clear code	
C30		2009 D5244T	Diesel Eng	Data stream	
C30		2009 D5244T	Diesel Eng	Actuation	
C30		2009 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C30		2009 D5244T4	Diesel Eng	Sys. Info.	
C30		2009 D5244T4	Diesel Eng	Read code	
C30		2009 D5244T4	Diesel Eng	Clear code	
C30		2009 D5244T4	Diesel Eng	Data stream	
C30		2009 D5244T4	Diesel Eng	Actuation	
C30		2009 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
C30		2009 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30		2009 D5244T4	Diesel Eng	Special functions	Resetting counter oil
C30		2009 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
C30		2009 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30		2009 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30		2009 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
C30		2009 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30		2009 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
C30		2009 D5244T5	Diesel Eng	Sys. Info.	
C30		2009 D5244T5	Diesel Eng	Read code	
C30		2009 D5244T5	Diesel Eng	Clear code	
C30		2009 D5244T5	Diesel Eng	Data stream	
C30		2009 D5244T5	Diesel Eng	Actuation	
C30		2009 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
C30		2009 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30		2009 D5244T5	Diesel Eng	Special functions	Resetting counter oil
C30		2009 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
C30		2009 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30		2009 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30		2009 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
C30		2009 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30		2009 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
C30		2009 D5244T8	Diesel Eng	Sys. Info.	
C30		2009 D5244T8	Diesel Eng	Read code	
C30		2009 D5244T8	Diesel Eng	Clear code	
C30		2009 D5244T8	Diesel Eng	Data stream	
C30		2009 D5244T8	Diesel Eng	Actuation	
C30		2009 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
C30		2009 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30		2009 D5244T8	Diesel Eng	Special functions	Resetting counter oil
C30		2009 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
C30		2009 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30		2009 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30		2009 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor

model	year	type	system	function	subfunction
C30	2009	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30	2009	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
C30	2009	D4164T	Diesel Eng	Sys. Info.	
C30	2009	D4164T	Diesel Eng	Read code	
C30	2009	D4164T	Diesel Eng	Clear code	
C30	2009	D4164T	Diesel Eng	Data stream	
C30	2009	D4164T	Diesel Eng	Actuation	
C30	2009	D4164T	Diesel Eng	Freeze frame	
C30	2009	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
C30	2009	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C30	2009	D4164T	Diesel Eng	Special functions	Combustion of soot particles
C30	2009	D4204T	Diesel Eng	Sys. Info.	
C30	2009	D4204T	Diesel Eng	Read code	
C30	2009	D4204T	Diesel Eng	Clear code	
C30	2009	D4204T	Diesel Eng	Data stream	
C30	2009	D4204T	Diesel Eng	Actuation	
C30	2009	D4204T	Diesel Eng	Freeze frame	
C30	2009	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C30	2009	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
C30	2009	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
C30	2009	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C30	2009	D4204T	Diesel Eng	Special functions	Combustion of soot particles
C30	2009	AW55-50/51SN	TCM	Sys. Info.	
C30	2009	AW55-50/51SN	TCM	Read code	
C30	2009	AW55-50/51SN	TCM	Clear code	
C30	2009	AW55-50/51SN	TCM	Data stream	
C30	2009	AW55-50/51SN	TCM	Actuation	
C30	2009	AW55-50/51SN	TCM	Freeze frame	
C30	2009	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C30	2009	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30	2009	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
C30	2009	4T65AWD	TCM	Sys. Info.	
C30	2009	4T65AWD	TCM	Read code	
C30	2009	4T65AWD	TCM	Clear code	
C30	2009	4T65AWD	TCM	Data stream	
C30	2009	4T65AWD	TCM	Actuation	
C30	2009	4T65AWD	TCM	Special functions	Reset adaptation to zero
C30	2009	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30	2009	TF-80SC	TCM	Sys. Info.	
C30	2009	TF-80SC	TCM	Read code	
C30	2009	TF-80SC	TCM	Clear code	
C30	2009	TF-80SC	TCM	Data stream	
C30	2009	TF-80SC	TCM	Actuation	
C30	2009	TF-80SC	TCM	Special functions	Reset adaptation to zero
C30	2009	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30	2009	TF-80SC	TCM	Special functions	Calibration of position sensor
C30	2009	AW50/51AW D	TCM	Sys. Info.	
C30	2009	AW50/51AW D	TCM	Read code	
C30	2009	AW50/51AW D	TCM	Clear code	
C30	2009	AW50/51AW D	TCM	Data stream	
C30	2009	AW50/51AW D	TCM	Actuation	
C30	2009	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
C30	2009	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30	2009	AW50/51AW D	ABS	Sys. Info.	
C30	2009	AW50/51AW D	ABS	Read code	
C30	2009	AW50/51AW D	ABS	Clear code	
C30	2009	AW50/51AW D	ABS	Data stream	

model	year	type	system	function	subfunction
C30	2009	AW50/51AW D	ABS	Actuation	
C30	2009	AW50/51AW D	ABS	Freeze frame	
C30	2009	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
C30	2009	AW50/51AW D	ABS	Special functions	Reading off the configuration
C30	2009	AW50/51AW D	ABS	Special functions	Calibration
C30	2009	AW50/51AW D	SRS	Sys. Info.	
C30	2009	AW50/51AW D	SRS	Read code	
C30	2009	AW50/51AW D	SRS	Clear code	
C30	2009	AW50/51AW D	SRS	Data stream	
C30	2009	AW50/51AW D	SRS	Freeze frame	
C30	2009	AW50/51AW D	CEM	Sys. Info.	
C30	2009	AW50/51AW D	CEM	Read code	
C30	2009	AW50/51AW D	CEM	Clear code	
C30	2009	AW50/51AW D	CEM	Data stream	
C30	2009	AW50/51AW D	CEM	Actuation	
C30	2009	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
C30	2009	AW50/51AW D	CEM	Special functions	Programming control module
C30	2009	AW50/51AW D	CEM	Special functions	Resetting the factory settings
C30	2009	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
C30	2009	AW50/51AW D	CEM	Special functions	Resetting crash mode
C30	2009	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
C30	2009	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
C30	2009	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
C30	2009	AW50/51AW D	CEM	Special functions	Ignition switch key position
C30	2009	AW50/51AW D	CCM	Sys. Info.	
C30	2009	AW50/51AW D	CCM	Read code	
C30	2009	AW50/51AW D	CCM	Clear code	
C30	2009	AW50/51AW D	CCM	Data stream	
C30	2009	AW50/51AW D	CCM	Special functions	Self-adjustment of adammer motor end stops(*)
C30	2009	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
C30	2009	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
C30	2009	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
C30	2009	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
C30	2009	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
C30	2009	AW50/51AW D	CCM	Special functions	Programming the seat temperature
C30	2009	AW50/51AW D	DDM	Sys. Info.	
C30	2009	AW50/51AW D	DDM	Read code	
C30	2009	AW50/51AW D	DDM	Clear code	
C30	2009	AW50/51AW D	DDM	Data stream	

model	year	type	system	function	subfunction
C30	2009	AW50/51AW D	DDM	Actuation	
C30	2009	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C30	2009	AW50/51AW D	DIM	Sys. Info.	
C30	2009	AW50/51AW D	DIM	Read code	
C30	2009	AW50/51AW D	DIM	Clear code	
C30	2009	AW50/51AW D	DIM	Data stream	
C30	2009	AW50/51AW D	DIM	Actuation	
C30	2009	AW50/51AW D	DIM	Freeze frame	
C30	2009	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
C30	2009	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
C30	2009	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
C30	2009	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
C30	2009	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
C30	2009	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
C30	2009	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
C30	2009	AW50/51AW D	DIM	Special functions	Programming of clock (*)
C30	2009	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
C30	2009	AW50/51AW D	DIM	Special functions	Programming parking brake warning
C30	2009	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
C30	2009	AW50/51AW D	DIM	Special functions	Programming instrument lighting
C30	2009	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
C30	2009	AW50/51AW D	DIM	Special functions	Display of DSTC message
C30	2009	AW50/51AW D	DIM	Special functions	Read out programmed values
C30	2009	AW50/51AW D	PDM	Sys. Info.	
C30	2009	AW50/51AW D	PDM	Read code	
C30	2009	AW50/51AW D	PDM	Clear code	
C30	2009	AW50/51AW D	PDM	Data stream	
C30	2009	AW50/51AW D	PDM	Actuation	
C30	2009	AW50/51AW D	PDM	Special functions	Initialize the window(*)
C30	2009	AW50/51AW D	SWM	Sys. Info.	
C30	2009	AW50/51AW D	SWM	Read code	
C30	2009	AW50/51AW D	SWM	Clear code	
C30	2009	AW50/51AW D	SWM	Data stream	
C30	2009	AW50/51AW D	PSM	Sys. Info.	
C30	2009	AW50/51AW D	PSM	Read code	
C30	2009	AW50/51AW D	PSM	Clear code	
C30	2009	AW50/51AW D	PSM	Data stream	
C30	2009	AW50/51AW D	PSM	Actuation	
C30	2009	AW50/51AW D	PHM	Sys. Info.	

model	year	type	system	function	subfunction
C30	2009	AW50/51AW D	PHM	Read code	
C30	2009	AW50/51AW D	PHM	Clear code	
C30	2009	AW50/51AW D	PHM	Data stream	
C30	2009	AW50/51AW D	PHM	Actuation	
C30	2009	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
C30	2009	AW50/51AW D	AUD	Sys. Info.	
C30	2009	AW50/51AW D	AUD	Read code	
C30	2009	AW50/51AW D	AUD	Clear code	
C30	2009	AW50/51AW D	DEM	Sys. Info.	
C30	2009	AW50/51AW D	DEM	Read code	
C30	2009	AW50/51AW D	DEM	Clear code	
C30	2009	AW50/51AW D	DEM	Data stream	
C30	2009	AW50/51AW D	ICM	Sys. Info.	
C30	2009	AW50/51AW D	ICM	Read code	
C30	2009	AW50/51AW D	ICM	Clear code	
C30	2009	AW50/51AW D	ICM	Data stream	
C30	2009	AW50/51AW D	ICM	Actuation	
C30	2009	AW50/51AW D	MMM	Sys. Info.	
C30	2009	AW50/51AW D	MMM	Read code	
C30	2009	AW50/51AW D	MMM	Clear code	
C30	2009	AW50/51AW D	MMM	Data stream	
C30	2009	AW50/51AW D	AEM	Sys. Info.	
C30	2009	AW50/51AW D	AEM	Read code	
C30	2009	AW50/51AW D	AEM	Clear code	
C30	2009	AW50/51AW D	AEM	Data stream	
C30	2009	AW50/51AW D	AEM	Actuation	
C30	2009	AW50/51AW D	ADM	Sys. Info.	
C30	2009	AW50/51AW D	ADM	Read code	
C30	2009	AW50/51AW D	ADM	Clear code	
C30	2009	AW50/51AW D	ADM	Data stream	
C30	2009	AW50/51AW D	EPS	Sys. Info.	
C30	2009	AW50/51AW D	EPS	Read code	
C30	2009	AW50/51AW D	EPS	Clear code	
C30	2009	AW50/51AW D	EPS	Data stream	
C30	2009	AW50/51AW D	PAM	Sys. Info.	
C30	2009	AW50/51AW D	PAM	Read code	
C30	2009	AW50/51AW D	PAM	Clear code	
C30	2009	AW50/51AW D	PAM	Data stream	
C30	2009	AW50/51AW D	IAM	Sys. Info.	

model	year	type	system	function	subfunction
C30	2009	AW50/51AW D	IAM	Read code	
C30	2009	AW50/51AW D	IAM	Clear code	
C30	2009	AW50/51AW D	IAM	Data stream	
C30	2009	AW50/51AW D	IAM	Actuation	
C30	2009	AW50/51AW D	AFM	Sys. Info.	
C30	2009	AW50/51AW D	AFM	Read code	
C30	2009	AW50/51AW D	AFM	Clear code	
C30	2009	AW50/51AW D	AFM	Data stream	
C30	2009	AW50/51AW D	AFM	Actuation	
C30	2009	AW50/51AW D	MPM	Sys. Info.	
C30	2009	AW50/51AW D	MPM	Read code	
C30	2009	AW50/51AW D	MPM	Clear code	
C30	2009	AW50/51AW D	MPM	Data stream	
C30	2009	AW50/51AW D	MPM	Actuation	
C30	2009	AW50/51AW D	CPM	Sys. Info.	
C30	2009	AW50/51AW D	CPM	Read code	
C30	2009	AW50/51AW D	CPM	Clear code	
C30	2009	AW50/51AW D	CPM	Data stream	
C30	2009	AW50/51AW D	CPM	Actuation	
C30	2009	AW50/51AW D	HCM	Sys. Info.	
C30	2009	AW50/51AW D	HCM	Read code	
C30	2009	AW50/51AW D	HCM	Clear code	
C30	2009	AW50/51AW D	HCM	Special functions	Calibration of position sensor
C30	2009	AW50/51AW D	KVM	Sys. Info.	
C30	2009	AW50/51AW D	KVM	Read code	
C30	2009	AW50/51AW D	KVM	Clear code	
C30	2009	AW50/51AW D	KVM	Data stream	
C30	2009	AW50/51AW D	KVM	Actuation	
C30	2009	AW50/51AW D	RDAR	Sys. Info.	
C30	2009	AW50/51AW D	RDAR	Read code	
C30	2009	AW50/51AW D	RDAR	Clear code	
C30	2009	AW50/51AW D	RDAR	Data stream	
C30	2009	AW50/51AW D	SUB	Sys. Info.	
C30	2009	AW50/51AW D	SUB	Read code	
C30	2009	AW50/51AW D	SUB	Clear code	
C30	2009	AW50/51AW D	SUB	Data stream	
C30	2009	AW50/51AW D	CVM	Sys. Info.	
C30	2009	AW50/51AW D	CVM	Read code	
C30	2009	AW50/51AW D	CVM	Clear code	



model	year	type	system	function	subfunction
C30	2009	AW50/51AW D	CVM	Data stream	
C30	2009	AW50/51AW D	DABM	Sys. Info.	
C30	2009	AW50/51AW D	DABM	Read code	
C30	2009	AW50/51AW D	DABM	Clear code	
C30	2009	AW50/51AW D	DABM	Data stream	
C30	2009	AW50/51AW D	PAC	Sys. Info.	
C30	2009	AW50/51AW D	PAC	Read code	
C30	2009	AW50/51AW D	PAC	Clear code	
C30	2009	AW50/51AW D	PAC	Data stream	
C30	2009	AW50/51AW D	TRM	Sys. Info.	
C30	2009	AW50/51AW D	TRM	Read code	
C30	2009	AW50/51AW D	TRM	Clear code	
C30	2009	AW50/51AW D	TRM	Data stream	
C30	2010 - 2012	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C30	2010 - 2012	B5244S4	ECM	Sys. Info.	
C30	2010 - 2012	B5244S4	ECM	Read code	
C30	2010 - 2012	B5244S4	ECM	Clear code	
C30	2010 - 2012	B5244S4	ECM	Data stream	
C30	2010 - 2012	B5244S4	ECM	Actuation	
C30	2010 - 2012	B5244S4	ECM	Freeze frame	
C30	2010 - 2012	B5244S4	ECM	Special functions	Resetting the adaptation values
C30	2010 - 2012	B5244S5	ECM	Sys. Info.	
C30	2010 - 2012	B5244S5	ECM	Read code	
C30	2010 - 2012	B5244S5	ECM	Clear code	
C30	2010 - 2012	B5244S5	ECM	Data stream	
C30	2010 - 2012	B5244S5	ECM	Actuation	
C30	2010 - 2012	B5244S5	ECM	Special functions	Resetting the adaptation values
C30	2010 - 2012	B5244S7	ECM	Sys. Info.	
C30	2010 - 2012	B5244S7	ECM	Read code	
C30	2010 - 2012	B5244S7	ECM	Clear code	
C30	2010 - 2012	B5244S7	ECM	Data stream	
C30	2010 - 2012	B5244S7	ECM	Actuation	
C30	2010 - 2012	B4204S3	ECM	Sys. Info.	
C30	2010 - 2012	B4204S3	ECM	Read code	
C30	2010 - 2012	B4204S3	ECM	Clear code	
C30	2010 - 2012	B4204S3	ECM	Data stream	
C30	2010 - 2012	B4204S3	ECM	Actuation	
C30	2010 - 2012	B4204S3	ECM	Freeze frame	
C30	2010 - 2012	B5254T2	ECM	Sys. Info.	
C30	2010 - 2012	B5254T2	ECM	Read code	
C30	2010 - 2012	B5254T2	ECM	Clear code	
C30	2010 - 2012	B5254T2	ECM	Data stream	
C30	2010 - 2012	B5254T2	ECM	Actuation	
C30	2010 - 2012	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
C30	2010 - 2012	B5254T3	ECM	Sys. Info.	
C30	2010 - 2012	B5254T3	ECM	Read code	
C30	2010 - 2012	B5254T3	ECM	Clear code	
C30	2010 - 2012	B5254T3	ECM	Data stream	
C30	2010 - 2012	B5254T3	ECM	Actuation	
C30	2010 - 2012	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
C30	2010 - 2012	B5254T7	ECM	Sys. Info.	
C30	2010 - 2012	B5254T7	ECM	Read code	
C30	2010 - 2012	B5254T7	ECM	Clear code	
C30	2010 - 2012	B5254T7	ECM	Data stream	
C30	2010 - 2012	B5254T7	ECM	Actuation	
C30	2010 - 2012	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
C30	2010 - 2012	B5204T5	ECM	Sys. Info.	
C30	2010 - 2012	B5204T5	ECM	Read code	
C30	2010 - 2012	B5204T5	ECM	Clear code	
C30	2010 - 2012	B5204T5	ECM	Data stream	
C30	2010 - 2012	B5204T5	ECM	Actuation	
C30	2010 - 2012	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
C30	2010 - 2012	B6294T	ECM	Sys. Info.	
C30	2010 - 2012	B6294T	ECM	Read code	

model	year	type	system	function	subfunction
C30	2010 - 2012	B6294T	ECM	Clear code	
C30	2010 - 2012	B6294T	ECM	Data stream	
C30	2010 - 2012	B6294T	ECM	Actuation	
C30	2010 - 2012	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
C30	2010 - 2012	B4164S3	ECM	Sys. Info.	
C30	2010 - 2012	B4164S3	ECM	Read code	
C30	2010 - 2012	B4164S3	ECM	Clear code	
C30	2010 - 2012	B4164S3	ECM	Data stream	
C30	2010 - 2012	B4164S3	ECM	Actuation	
C30	2010 - 2012	B4164S3	ECM	Freeze frame	
C30	2010 - 2012	B4164S3	ECM	Special functions	Resetting the adaptation values
C30	2010 - 2012	B5244T5	ECM	Sys. Info.	
C30	2010 - 2012	B5244T5	ECM	Read code	
C30	2010 - 2012	B5244T5	ECM	Clear code	
C30	2010 - 2012	B5244T5	ECM	Data stream	
C30	2010 - 2012	B5244T5	ECM	Actuation	
C30	2010 - 2012	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
C30	2010 - 2012	B4184S11	ECM	Sys. Info.	
C30	2010 - 2012	B4184S11	ECM	Read code	
C30	2010 - 2012	B4184S11	ECM	Clear code	
C30	2010 - 2012	B4184S11	ECM	Data stream	
C30	2010 - 2012	B4184S11	ECM	Actuation	
C30	2010 - 2012	B4184S11	ECM	Freeze frame	
C30	2010 - 2012	B4184S11	ECM	Special functions	Resetting the adaptation values
C30	2010 - 2012	D5244T	Diesel Eng	Sys. Info.	
C30	2010 - 2012	D5244T	Diesel Eng	Read code	
C30	2010 - 2012	D5244T	Diesel Eng	Clear code	
C30	2010 - 2012	D5244T	Diesel Eng	Data stream	
C30	2010 - 2012	D5244T	Diesel Eng	Actuation	
C30	2010 - 2012	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C30	2010 - 2012	D5244T4	Diesel Eng	Sys. Info.	
C30	2010 - 2012	D5244T4	Diesel Eng	Read code	
C30	2010 - 2012	D5244T4	Diesel Eng	Clear code	
C30	2010 - 2012	D5244T4	Diesel Eng	Data stream	
C30	2010 - 2012	D5244T4	Diesel Eng	Actuation	
C30	2010 - 2012	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
C30	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30	2010 - 2012	D5244T4	Diesel Eng	Special functions	Resetting counter oil
C30	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
C30	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
C30	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30	2010 - 2012	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
C30	2010 - 2012	D5244T5	Diesel Eng	Sys. Info.	
C30	2010 - 2012	D5244T5	Diesel Eng	Read code	
C30	2010 - 2012	D5244T5	Diesel Eng	Clear code	
C30	2010 - 2012	D5244T5	Diesel Eng	Data stream	
C30	2010 - 2012	D5244T5	Diesel Eng	Actuation	
C30	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
C30	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter oil
C30	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
C30	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
C30	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30	2010 - 2012	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
C30	2010 - 2012	D5244T8	Diesel Eng	Sys. Info.	
C30	2010 - 2012	D5244T8	Diesel Eng	Read code	
C30	2010 - 2012	D5244T8	Diesel Eng	Clear code	
C30	2010 - 2012	D5244T8	Diesel Eng	Data stream	
C30	2010 - 2012	D5244T8	Diesel Eng	Actuation	
C30	2010 - 2012	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
C30	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30	2010 - 2012	D5244T8	Diesel Eng	Special functions	Resetting counter oil
C30	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
C30	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C30	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C30	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
C30	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C30	2010 - 2012	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
C30	2010 - 2012	D4164T	Diesel Eng	Sys. Info.	
C30	2010 - 2012	D4164T	Diesel Eng	Read code	
C30	2010 - 2012	D4164T	Diesel Eng	Clear code	
C30	2010 - 2012	D4164T	Diesel Eng	Data stream	
C30	2010 - 2012	D4164T	Diesel Eng	Actuation	
C30	2010 - 2012	D4164T	Diesel Eng	Freeze frame	

model	year	type	system	function	subfunction
C30	2010 - 2012	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
C30	2010 - 2012	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C30	2010 - 2012	D4164T	Diesel Eng	Special functions	Combustion of soot particles
C30	2010 - 2012	D4204T	Diesel Eng	Sys. Info.	
C30	2010 - 2012	D4204T	Diesel Eng	Read code	
C30	2010 - 2012	D4204T	Diesel Eng	Clear code	
C30	2010 - 2012	D4204T	Diesel Eng	Data stream	
C30	2010 - 2012	D4204T	Diesel Eng	Actuation	
C30	2010 - 2012	D4204T	Diesel Eng	Freeze frame	
C30	2010 - 2012	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C30	2010 - 2012	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
C30	2010 - 2012	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
C30	2010 - 2012	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C30	2010 - 2012	D4204T	Diesel Eng	Special functions	Combustion of soot particles
C30	2010 - 2012	AW55-50/51SN	TCM	Sys. Info.	
C30	2010 - 2012	AW55-50/51SN	TCM	Read code	
C30	2010 - 2012	AW55-50/51SN	TCM	Clear code	
C30	2010 - 2012	AW55-50/51SN	TCM	Data stream	
C30	2010 - 2012	AW55-50/51SN	TCM	Actuation	
C30	2010 - 2012	AW55-50/51SN	TCM	Freeze frame	
C30	2010 - 2012	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C30	2010 - 2012	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30	2010 - 2012	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
C30	2010 - 2012	4T65AWD	TCM	Sys. Info.	
C30	2010 - 2012	4T65AWD	TCM	Read code	
C30	2010 - 2012	4T65AWD	TCM	Clear code	
C30	2010 - 2012	4T65AWD	TCM	Data stream	
C30	2010 - 2012	4T65AWD	TCM	Actuation	
C30	2010 - 2012	4T65AWD	TCM	Special functions	Reset adaptation to zero
C30	2010 - 2012	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30	2010 - 2012	TF-80SC	TCM	Sys. Info.	
C30	2010 - 2012	TF-80SC	TCM	Read code	
C30	2010 - 2012	TF-80SC	TCM	Clear code	
C30	2010 - 2012	TF-80SC	TCM	Data stream	
C30	2010 - 2012	TF-80SC	TCM	Actuation	
C30	2010 - 2012	TF-80SC	TCM	Freeze frame	
C30	2010 - 2012	TF-80SC	TCM	Special functions	Reset adaptation to zero
C30	2010 - 2012	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30	2010 - 2012	TF-80SC	TCM	Special functions	Calibration of position sensor
C30	2010 - 2012	AW50/51AW D	TCM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	TCM	Read code	
C30	2010 - 2012	AW50/51AW D	TCM	Clear code	
C30	2010 - 2012	AW50/51AW D	TCM	Data stream	
C30	2010 - 2012	AW50/51AW D	TCM	Actuation	
C30	2010 - 2012	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
C30	2010 - 2012	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C30	2010 - 2012	AW50/51AW D	ABS	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	ABS	Read code	
C30	2010 - 2012	AW50/51AW D	ABS	Clear code	
C30	2010 - 2012	AW50/51AW D	ABS	Data stream	
C30	2010 - 2012	AW50/51AW D	ABS	Actuation	
C30	2010 - 2012	AW50/51AW D	ABS	Freeze frame	
C30	2010 - 2012	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
C30	2010 - 2012	AW50/51AW D	ABS	Special functions	Reading off the configuration

model	year	type	system	function	subfunction
C30	2010 - 2012	AW50/51AW D	ABS	Special functions	Calibration
C30	2010 - 2012	AW50/51AW D	SRS	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	SRS	Read code	
C30	2010 - 2012	AW50/51AW D	SRS	Clear code	
C30	2010 - 2012	AW50/51AW D	SRS	Data stream	
C30	2010 - 2012	AW50/51AW D	SRS	Freeze frame	
C30	2010 - 2012	AW50/51AW D	CEM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	CEM	Read code	
C30	2010 - 2012	AW50/51AW D	CEM	Clear code	
C30	2010 - 2012	AW50/51AW D	CEM	Data stream	
C30	2010 - 2012	AW50/51AW D	CEM	Actuation	
C30	2010 - 2012	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
C30	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming control module
C30	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting the factory settings
C30	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
C30	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting crash mode
C30	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
C30	2010 - 2012	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
C30	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
C30	2010 - 2012	AW50/51AW D	CEM	Special functions	Ignition switch key position
C30	2010 - 2012	AW50/51AW D	CCM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	CCM	Read code	
C30	2010 - 2012	AW50/51AW D	CCM	Clear code	
C30	2010 - 2012	AW50/51AW D	CCM	Data stream	
C30	2010 - 2012	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
C30	2010 - 2012	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
C30	2010 - 2012	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
C30	2010 - 2012	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
C30	2010 - 2012	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
C30	2010 - 2012	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
C30	2010 - 2012	AW50/51AW D	CCM	Special functions	Programming the seat temperature
C30	2010 - 2012	AW50/51AW D	DDM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	DDM	Read code	
C30	2010 - 2012	AW50/51AW D	DDM	Clear code	
C30	2010 - 2012	AW50/51AW D	DDM	Data stream	
C30	2010 - 2012	AW50/51AW D	DDM	Actuation	
C30	2010 - 2012	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C30	2010 - 2012	AW50/51AW D	DIM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	DIM	Read code	

model	year	type	system	function	subfunction
C30	2010 - 2012	AW50/51AW D	DIM	Clear code	
C30	2010 - 2012	AW50/51AW D	DIM	Data stream	
C30	2010 - 2012	AW50/51AW D	DIM	Actuation	
C30	2010 - 2012	AW50/51AW D	DIM	Freeze frame	
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of clock (*)
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming parking brake warning
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming instrument lighting
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Display of DSTC message
C30	2010 - 2012	AW50/51AW D	DIM	Special functions	Read out programmed values
C30	2010 - 2012	AW50/51AW D	PDM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	PDM	Read code	
C30	2010 - 2012	AW50/51AW D	PDM	Clear code	
C30	2010 - 2012	AW50/51AW D	PDM	Data stream	
C30	2010 - 2012	AW50/51AW D	PDM	Actuation	
C30	2010 - 2012	AW50/51AW D	PDM	Special functions	Initialize the window(*)
C30	2010 - 2012	AW50/51AW D	SWM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	SWM	Read code	
C30	2010 - 2012	AW50/51AW D	SWM	Clear code	
C30	2010 - 2012	AW50/51AW D	SWM	Data stream	
C30	2010 - 2012	AW50/51AW D	PSM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	PSM	Read code	
C30	2010 - 2012	AW50/51AW D	PSM	Clear code	
C30	2010 - 2012	AW50/51AW D	PSM	Data stream	
C30	2010 - 2012	AW50/51AW D	PSM	Actuation	
C30	2010 - 2012	AW50/51AW D	PHM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	PHM	Read code	
C30	2010 - 2012	AW50/51AW D	PHM	Clear code	
C30	2010 - 2012	AW50/51AW D	PHM	Data stream	
C30	2010 - 2012	AW50/51AW D	PHM	Actuation	

model	year	type	system	function	subfunction
C30	2010 - 2012	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
C30	2010 - 2012	AW50/51AW D	AUD	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	AUD	Read code	
C30	2010 - 2012	AW50/51AW D	AUD	Clear code	
C30	2010 - 2012	AW50/51AW D	DEM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	DEM	Read code	
C30	2010 - 2012	AW50/51AW D	DEM	Clear code	
C30	2010 - 2012	AW50/51AW D	DEM	Data stream	
C30	2010 - 2012	AW50/51AW D	ICM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	ICM	Read code	
C30	2010 - 2012	AW50/51AW D	ICM	Clear code	
C30	2010 - 2012	AW50/51AW D	ICM	Data stream	
C30	2010 - 2012	AW50/51AW D	ICM	Actuation	
C30	2010 - 2012	AW50/51AW D	MMM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	MMM	Read code	
C30	2010 - 2012	AW50/51AW D	MMM	Clear code	
C30	2010 - 2012	AW50/51AW D	MMM	Data stream	
C30	2010 - 2012	AW50/51AW D	AEM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	AEM	Read code	
C30	2010 - 2012	AW50/51AW D	AEM	Clear code	
C30	2010 - 2012	AW50/51AW D	AEM	Data stream	
C30	2010 - 2012	AW50/51AW D	AEM	Actuation	
C30	2010 - 2012	AW50/51AW D	ADM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	ADM	Read code	
C30	2010 - 2012	AW50/51AW D	ADM	Clear code	
C30	2010 - 2012	AW50/51AW D	ADM	Data stream	
C30	2010 - 2012	AW50/51AW D	EPS	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	EPS	Read code	
C30	2010 - 2012	AW50/51AW D	EPS	Clear code	
C30	2010 - 2012	AW50/51AW D	EPS	Data stream	
C30	2010 - 2012	AW50/51AW D	PAM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	PAM	Read code	
C30	2010 - 2012	AW50/51AW D	PAM	Clear code	
C30	2010 - 2012	AW50/51AW D	PAM	Data stream	
C30	2010 - 2012	AW50/51AW D	IAM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	IAM	Read code	
C30	2010 - 2012	AW50/51AW D	IAM	Clear code	
C30	2010 - 2012	AW50/51AW D	IAM	Data stream	
C30	2010 - 2012	AW50/51AW D	IAM	Actuation	

model	year	type	system	function	subfunction
C30	2010 - 2012	AW50/51AW D	AFM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	AFM	Read code	
C30	2010 - 2012	AW50/51AW D	AFM	Clear code	
C30	2010 - 2012	AW50/51AW D	AFM	Data stream	
C30	2010 - 2012	AW50/51AW D	AFM	Actuation	
C30	2010 - 2012	AW50/51AW D	MPM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	MPM	Read code	
C30	2010 - 2012	AW50/51AW D	MPM	Clear code	
C30	2010 - 2012	AW50/51AW D	MPM	Data stream	
C30	2010 - 2012	AW50/51AW D	MPM	Actuation	
C30	2010 - 2012	AW50/51AW D	CPM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	CPM	Read code	
C30	2010 - 2012	AW50/51AW D	CPM	Clear code	
C30	2010 - 2012	AW50/51AW D	CPM	Data stream	
C30	2010 - 2012	AW50/51AW D	CPM	Actuation	
C30	2010 - 2012	AW50/51AW D	HCM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	HCM	Read code	
C30	2010 - 2012	AW50/51AW D	HCM	Clear code	
C30	2010 - 2012	AW50/51AW D	HCM	Special functions	Calibration of position sensor
C30	2010 - 2012	AW50/51AW D	KVM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	KVM	Read code	
C30	2010 - 2012	AW50/51AW D	KVM	Clear code	
C30	2010 - 2012	AW50/51AW D	KVM	Data stream	
C30	2010 - 2012	AW50/51AW D	KVM	Actuation	
C30	2010 - 2012	AW50/51AW D	RDAR	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	RDAR	Read code	
C30	2010 - 2012	AW50/51AW D	RDAR	Clear code	
C30	2010 - 2012	AW50/51AW D	RDAR	Data stream	
C30	2010 - 2012	AW50/51AW D	SUB	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	SUB	Read code	
C30	2010 - 2012	AW50/51AW D	SUB	Clear code	
C30	2010 - 2012	AW50/51AW D	SUB	Data stream	
C30	2010 - 2012	AW50/51AW D	CVM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	CVM	Read code	
C30	2010 - 2012	AW50/51AW D	CVM	Clear code	
C30	2010 - 2012	AW50/51AW D	CVM	Data stream	
C30	2010 - 2012	AW50/51AW D	DABM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	DABM	Read code	
C30	2010 - 2012	AW50/51AW D	DABM	Clear code	

model	year	type	system	function	subfunction
C30	2010 - 2012	AW50/51AW D	DABM	Data stream	
C30	2010 - 2012	AW50/51AW D	PAC	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	PAC	Read code	
C30	2010 - 2012	AW50/51AW D	PAC	Clear code	
C30	2010 - 2012	AW50/51AW D	PAC	Data stream	
C30	2010 - 2012	AW50/51AW D	PSR	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	PSR	Read code	
C30	2010 - 2012	AW50/51AW D	PSR	Clear code	
C30	2010 - 2012	AW50/51AW D	PSR	Data stream	
C30	2010 - 2012	AW50/51AW D	TRM	Sys. Info.	
C30	2010 - 2012	AW50/51AW D	TRM	Read code	
C30	2010 - 2012	AW50/51AW D	TRM	Clear code	
C30	2010 - 2012	AW50/51AW D	TRM	Data stream	
C30	2013	B5254T7	ECM	Sys. Info.	
C30	2013	B5254T7	ECM	Read code	
C30	2013	B5254T7	ECM	Clear code	
C30	2013	B5254T7	ECM	Data stream	
C30	2013	B5254T7	ECM	Actuation	
C30	2013	B5254T7	ECM	Special functions	Adaptation of the throttle unit
C30	2013	B5254T7	ECM	Special functions	Test/movement of camshaft control,intake
C30	2013	B5254T7	ECM	Special functions	Test/movement of camshaft control,exhaust
C30	2013	B5254T7	ECM	Special functions	Quick test of the fuel pump(FP)
C30	2013	B4204S3	ECM	Sys. Info.	
C30	2013	B4204S3	ECM	Read code	
C30	2013	B4204S3	ECM	Clear code	
C30	2013	B4204S3	ECM	Data stream	
C30	2013	B4204S3	ECM	Actuation	
C30	2013	B4204S3	ECM	Freeze frame	
C30	2013	B4204S3	ECM	Special functions	Resetting the adaptation values
C30	2013	B4204S4	ECM	Sys. Info.	
C30	2013	B4204S4	ECM	Read code	
C30	2013	B4204S4	ECM	Clear code	
C30	2013	B4204S4	ECM	Data stream	
C30	2013	B4204S4	ECM	Actuation	
C30	2013	B4204S4	ECM	Freeze frame	
C30	2013	B4204S4	ECM	Special functions	Resetting the adaptation values
C30	2013	D4162T	Diesel Eng	Sys. Info.	
C30	2013	D4162T	Diesel Eng	Read code	
C30	2013	D4162T	Diesel Eng	Clear code	
C30	2013	D4162T	Diesel Eng	Data stream	
C30	2013	D4162T	Diesel Eng	Actuation	
C30	2013	D4162T	Diesel Eng	Freeze frame	
C30	2013	D5204T	Diesel Eng	Sys. Info.	
C30	2013	D5204T	Diesel Eng	Read code	
C30	2013	D5204T	Diesel Eng	Clear code	
C30	2013	D5204T	Diesel Eng	Data stream	
C30	2013	D5204T	Diesel Eng	Actuation	
C30	2013	D5204T	Diesel Eng	Freeze frame	
C30	2013	D5204T	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C30	2013	D5204T	Diesel Eng	Special functions	Checking injectors
C30	2013	D5204T	Diesel Eng	Special functions	Checking the oil level
C30	2013	D5204T	Diesel Eng	Special functions	Adjusting calculated oil level/oil quality
C30	2013	AW55- 50/51SN	TCM	Sys. Info.	
C30	2013	AW55- 50/51SN	TCM	Read code	
C30	2013	AW55- 50/51SN	TCM	Clear code	
C30	2013	AW55- 50/51SN	TCM	Data stream	
C30	2013	AW55- 50/51SN	TCM	Actuation	
C30	2013	AW55- 50/51SN	TCM	Freeze frame	



model	year	type	system	function	subfunction
C30	2013	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
C30	2013	AW55-50/51SN	TCM	Special functions	Resetting the adaptation
C30	2013	AW55-50/51SN	TCM	Special functions	Resetting the transmission fluid change counter
C30	2013	AW55-50/51SN	TCM	Special functions	Activating gear indication
C30	2013	MPS6	TCM	Sys. Info.	
C30	2013	MPS6	TCM	Read code	
C30	2013	MPS6	TCM	Clear code	
C30	2013	MPS6	TCM	Data stream	
C30	2013	MPS6	TCM	Freeze frame	
C30	2013	TF-80SC	TCM	Sys. Info.	
C30	2013	TF-80SC	TCM	Read code	
C30	2013	TF-80SC	TCM	Clear code	
C30	2013	TF-80SC	TCM	Data stream	
C30	2013	TF-80SC	TCM	Actuation	
C30	2013	TF-80SC	TCM	Freeze frame	
C30	2013	TF-80SC	TCM	Special functions	Resetting the adaptation
C30	2013	TF-80SC	TCM	Special functions	Calibration of position sensor
C30	2013	TF-80SC	TCM	Special functions	Resetting the counter for Gearbox oil Change
C30	2013	TF-80SC	TCM	Special functions	Activating gear indication
C30	2013	TF-80SC	TCM	Special functions	Control module adaptation
C30	2013	TF-80SC	ABS	Sys. Info.	
C30	2013	TF-80SC	ABS	Read code	
C30	2013	TF-80SC	ABS	Clear code	
C30	2013	TF-80SC	ABS	Data stream	
C30	2013	TF-80SC	ABS	Actuation	
C30	2013	TF-80SC	ABS	Freeze frame	
C30	2013	TF-80SC	ABS	Special functions	Reading off the configuration
C30	2013	TF-80SC	ABS	Special functions	Calibration(car with DSTC)
C30	2013	TF-80SC	ABS	Special functions	Activating components and functions
C30	2013	TF-80SC	SRS	Sys. Info.	
C30	2013	TF-80SC	SRS	Read code	
C30	2013	TF-80SC	SRS	Clear code	
C30	2013	TF-80SC	SRS	Data stream	
C30	2013	TF-80SC	SRS	Actuation	
C30	2013	TF-80SC	SRS	Freeze frame	
C30	2013	TF-80SC	SRS	Special functions	Resetting crash mode
C30	2013	TF-80SC	CEM	Sys. Info.	
C30	2013	TF-80SC	CEM	Read code	
C30	2013	TF-80SC	CEM	Clear code	
C30	2013	TF-80SC	CEM	Data stream	
C30	2013	TF-80SC	CEM	Actuation	
C30	2013	TF-80SC	CEM	Special functions	Programming of rear window wiper when reversing
C30	2013	TF-80SC	CEM	Special functions	Resetting low voltage counters
C30	2013	TF-80SC	CEM	Special functions	Ignition switch key position
C30	2013	TF-80SC	CEM	Special functions	Workshop test(TPMS)
C30	2013	TF-80SC	CEM	Special functions	Reading off and programming vehicle mode
C30	2013	TF-80SC	CEM	Special functions	Resetting crash mode
C30	2013	TF-80SC	CCM	Sys. Info.	
C30	2013	TF-80SC	CCM	Read code	
C30	2013	TF-80SC	CCM	Clear code	
C30	2013	TF-80SC	CCM	Data stream	
C30	2013	TF-80SC	CCM	Special functions	Calibrating the climate control module(CCM)
C30	2013	TF-80SC	CCM	Special functions	Identifying components on the LIN network that belong to the climate control system(CCM)
C30	2013	TF-80SC	CCM	Special functions	Programming the seat temperature
C30	2013	TF-80SC	DDM	Sys. Info.	
C30	2013	TF-80SC	DDM	Read code	
C30	2013	TF-80SC	DDM	Clear code	
C30	2013	TF-80SC	DDM	Data stream	
C30	2013	TF-80SC	DDM	Actuation	
C30	2013	TF-80SC	DDM	Special functions	Iniializing the window position
C30	2013	TF-80SC	DIM	Sys. Info.	
C30	2013	TF-80SC	DIM	Read code	
C30	2013	TF-80SC	DIM	Clear code	
C30	2013	TF-80SC	DIM	Data stream	
C30	2013	TF-80SC	DIM	Actuation	
C30	2013	TF-80SC	DIM	Freeze frame	
C30	2013	TF-80SC	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
C30	2013	TF-80SC	DIM	Special functions	Resetting the service reminder indicator (SRI)
C30	2013	TF-80SC	DIM	Special functions	Indicates programmed values
C30	2013	TF-80SC	DIM	Special functions	Display of DSTC message
C30	2013	TF-80SC	DIM	Special functions	Programming the driver information module (DIM)
C30	2013	TF-80SC	DIM	Special functions	Programming seatbelt reminder in backseat

model	year	type	system	function	subfunction
C30	2013	TF-80SC	DIM	Special functions	Programming the gear shift indicator
C30	2013	TF-80SC	PDM	Sys. Info.	
C30	2013	TF-80SC	PDM	Read code	
C30	2013	TF-80SC	PDM	Clear code	
C30	2013	TF-80SC	PDM	Data stream	
C30	2013	TF-80SC	PDM	Actuation	
C30	2013	TF-80SC	PDM	Special functions	Iniializing the window position
C30	2013	TF-80SC	SWM	Sys. Info.	
C30	2013	TF-80SC	SWM	Read code	
C30	2013	TF-80SC	SWM	Clear code	
C30	2013	TF-80SC	SWM	Data stream	
C30	2013	TF-80SC	PHM	Sys. Info.	
C30	2013	TF-80SC	PHM	Read code	
C30	2013	TF-80SC	PHM	Clear code	
C30	2013	TF-80SC	PHM	Data stream	
C30	2013	TF-80SC	PHM	Special functions	Reinstalling the reserve battery
C30	2013	TF-80SC	AUD	Sys. Info.	
C30	2013	TF-80SC	AUD	Read code	
C30	2013	TF-80SC	AUD	Clear code	
C30	2013	TF-80SC	AUD	Data stream	
C30	2013	TF-80SC	AUD	Actuation	
C30	2013	TF-80SC	ICM	Sys. Info.	
C30	2013	TF-80SC	ICM	Read code	
C30	2013	TF-80SC	ICM	Clear code	
C30	2013	TF-80SC	ICM	Data stream	
C30	2013	TF-80SC	ICM	Special functions	Programming the infotainment control module(ICM)
C30	2013	TF-80SC	MMM	Sys. Info.	
C30	2013	TF-80SC	MMM	Read code	
C30	2013	TF-80SC	MMM	Clear code	
C30	2013	TF-80SC	AEM	Sys. Info.	
C30	2013	TF-80SC	AEM	Read code	
C30	2013	TF-80SC	AEM	Clear code	
C30	2013	TF-80SC	AEM	Data stream	
C30	2013	TF-80SC	AEM	Actuation	
C30	2013	TF-80SC	EPS	Sys. Info.	
C30	2013	TF-80SC	EPS	Read code	
C30	2013	TF-80SC	EPS	Clear code	
C30	2013	TF-80SC	EPS	Data stream	
C30	2013	TF-80SC	PAM	Sys. Info.	
C30	2013	TF-80SC	PAM	Read code	
C30	2013	TF-80SC	PAM	Clear code	
C30	2013	TF-80SC	PAM	Data stream	
C30	2013	TF-80SC	PAM	Actuation	
C30	2013	TF-80SC	IAM	Sys. Info.	
C30	2013	TF-80SC	IAM	Read code	
C30	2013	TF-80SC	IAM	Clear code	
C30	2013	TF-80SC	IAM	Data stream	
C30	2013	TF-80SC	IAM	Actuation	
C30	2013	TF-80SC	HCM	Sys. Info.	
C30	2013	TF-80SC	HCM	Read code	
C30	2013	TF-80SC	HCM	Clear code	
C30	2013	TF-80SC	HCM	Data stream	
C30	2013	TF-80SC	HCM	Special functions	Calibration of position sensor
C30	2013	TF-80SC	KVM	Sys. Info.	
C30	2013	TF-80SC	KVM	Read code	
C30	2013	TF-80SC	KVM	Clear code	
C30	2013	TF-80SC	KVM	Data stream	
C30	2013	TF-80SC	KVM	Actuation	
C30	2013	TF-80SC	KVM	Special functions	Read out of the number of programmed remote keys
C30	2013	TF-80SC	KVM	Special functions	Read-out part number and serial number,Remote keyless Entry(RKE)
C30	2013	TF-80SC	KVM	Special functions	Programmed values,Keyless setting
C30	2013	TF-80SC	RDAR	Sys. Info.	
C30	2013	TF-80SC	RDAR	Read code	
C30	2013	TF-80SC	RDAR	Clear code	
C30	2013	TF-80SC	RDAR	Data stream	
C30	2013	TF-80SC	PSR	Sys. Info.	
C30	2013	TF-80SC	PSR	Read code	
C30	2013	TF-80SC	PSR	Clear code	
C30	2013	TF-80SC	PSR	Data stream	
C30	2013	TF-80SC	TRM	Sys. Info.	
C30	2013	TF-80SC	TRM	Read code	
C30	2013	TF-80SC	TRM	Clear code	
C30	2013	TF-80SC	TRM	Data stream	
C30	2013	TF-80SC	AUU	Sys. Info.	
C30	2013	TF-80SC	AUU	Read code	
C30	2013	TF-80SC	AUU	Clear code	
C30	2013	TF-80SC	AUU	Data stream	

model	year	type	system	function	subfunction
C30	2013	TF-80SC	BPM	Sys. Info.	
C30	2013	TF-80SC	BPM	Read code	
C30	2013	TF-80SC	BPM	Clear code	
C30	2013	TF-80SC	BPM	Data stream	
C30	2013	TF-80SC	PSL	Sys. Info.	
C30	2013	TF-80SC	PSL	Read code	
C30	2013	TF-80SC	PSL	Clear code	
C30	2013	TF-80SC	PSL	Data stream	
C30	2013	TF-80SC	PSL	Actuation	
C30	2013	TF-80SC	SAS	Sys. Info.	
C30	2013	TF-80SC	SAS	Read code	
C30	2013	TF-80SC	SAS	Clear code	
C30	2013	TF-80SC	SAS	Data stream	
C70(06-)	2006	TF-80SC	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70(06-)	2006	B5244S4	ECM	Sys. Info.	
C70(06-)	2006	B5244S4	ECM	Read code	
C70(06-)	2006	B5244S4	ECM	Clear code	
C70(06-)	2006	B5244S4	ECM	Data stream	
C70(06-)	2006	B5244S4	ECM	Actuation	
C70(06-)	2006	B5244S4	ECM	Special functions	Resetting the adaptation values
C70(06-)	2006	B5244S5	ECM	Sys. Info.	
C70(06-)	2006	B5244S5	ECM	Read code	
C70(06-)	2006	B5244S5	ECM	Clear code	
C70(06-)	2006	B5244S5	ECM	Data stream	
C70(06-)	2006	B5244S5	ECM	Actuation	
C70(06-)	2006	B5244S5	ECM	Special functions	Resetting the adaptation values
C70(06-)	2006	B5244S7	ECM	Sys. Info.	
C70(06-)	2006	B5244S7	ECM	Read code	
C70(06-)	2006	B5244S7	ECM	Clear code	
C70(06-)	2006	B5244S7	ECM	Data stream	
C70(06-)	2006	B5244S7	ECM	Actuation	
C70(06-)	2006	B5244S7	ECM	Freeze frame	
C70(06-)	2006	B4204S3	ECM	Sys. Info.	
C70(06-)	2006	B4204S3	ECM	Read code	
C70(06-)	2006	B4204S3	ECM	Clear code	
C70(06-)	2006	B4204S3	ECM	Data stream	
C70(06-)	2006	B4204S3	ECM	Actuation	
C70(06-)	2006	B5254T2	ECM	Sys. Info.	
C70(06-)	2006	B5254T2	ECM	Read code	
C70(06-)	2006	B5254T2	ECM	Clear code	
C70(06-)	2006	B5254T2	ECM	Data stream	
C70(06-)	2006	B5254T2	ECM	Actuation	
C70(06-)	2006	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2006	B5254T3	ECM	Sys. Info.	
C70(06-)	2006	B5254T3	ECM	Read code	
C70(06-)	2006	B5254T3	ECM	Clear code	
C70(06-)	2006	B5254T3	ECM	Data stream	
C70(06-)	2006	B5254T3	ECM	Actuation	
C70(06-)	2006	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2006	B5254T7	ECM	Sys. Info.	
C70(06-)	2006	B5254T7	ECM	Read code	
C70(06-)	2006	B5254T7	ECM	Clear code	
C70(06-)	2006	B5254T7	ECM	Data stream	
C70(06-)	2006	B5254T7	ECM	Actuation	
C70(06-)	2006	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2006	B5204T5	ECM	Sys. Info.	
C70(06-)	2006	B5204T5	ECM	Read code	
C70(06-)	2006	B5204T5	ECM	Clear code	
C70(06-)	2006	B5204T5	ECM	Data stream	
C70(06-)	2006	B5204T5	ECM	Actuation	
C70(06-)	2006	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2006	B6294T	ECM	Sys. Info.	
C70(06-)	2006	B6294T	ECM	Read code	
C70(06-)	2006	B6294T	ECM	Clear code	
C70(06-)	2006	B6294T	ECM	Data stream	
C70(06-)	2006	B6294T	ECM	Actuation	
C70(06-)	2006	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2006	B4164S3	ECM	Sys. Info.	
C70(06-)	2006	B4164S3	ECM	Read code	
C70(06-)	2006	B4164S3	ECM	Clear code	
C70(06-)	2006	B4164S3	ECM	Data stream	
C70(06-)	2006	B4164S3	ECM	Actuation	
C70(06-)	2006	B4164S3	ECM	Freeze frame	
C70(06-)	2006	B4164S3	ECM	Special functions	Resetting the adaptation values
C70(06-)	2006	B5244T5	ECM	Sys. Info.	
C70(06-)	2006	B5244T5	ECM	Read code	
C70(06-)	2006	B5244T5	ECM	Clear code	

model	year	type	system	function	subfunction
C70(06-)		2006 B5244T5	ECM	Data stream	
C70(06-)		2006 B5244T5	ECM	Actuation	
C70(06-)		2006 B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)		2006 B4184S11	ECM	Sys. Info.	
C70(06-)		2006 B4184S11	ECM	Read code	
C70(06-)		2006 B4184S11	ECM	Clear code	
C70(06-)		2006 B4184S11	ECM	Data stream	
C70(06-)		2006 B4184S11	ECM	Actuation	
C70(06-)		2006 B4184S11	ECM	Freeze frame	
C70(06-)		2006 B4184S11	ECM	Special functions	Resetting the adaptation values
C70(06-)		2006 D5244T	Diesel Eng	Sys. Info.	
C70(06-)		2006 D5244T	Diesel Eng	Read code	
C70(06-)		2006 D5244T	Diesel Eng	Clear code	
C70(06-)		2006 D5244T	Diesel Eng	Data stream	
C70(06-)		2006 D5244T	Diesel Eng	Actuation	
C70(06-)		2006 D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C70(06-)		2006 D5244T4	Diesel Eng	Sys. Info.	
C70(06-)		2006 D5244T4	Diesel Eng	Read code	
C70(06-)		2006 D5244T4	Diesel Eng	Clear code	
C70(06-)		2006 D5244T4	Diesel Eng	Data stream	
C70(06-)		2006 D5244T4	Diesel Eng	Actuation	
C70(06-)		2006 D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)		2006 D5244T4	Diesel Eng	Special functions	Resetting counter oil
C70(06-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)		2006 D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)		2006 D5244T4	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)		2006 D5244T5	Diesel Eng	Sys. Info.	
C70(06-)		2006 D5244T5	Diesel Eng	Read code	
C70(06-)		2006 D5244T5	Diesel Eng	Clear code	
C70(06-)		2006 D5244T5	Diesel Eng	Data stream	
C70(06-)		2006 D5244T5	Diesel Eng	Actuation	
C70(06-)		2006 D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)		2006 D5244T5	Diesel Eng	Special functions	Resetting counter oil
C70(06-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)		2006 D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)		2006 D5244T5	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)		2006 D5244T8	Diesel Eng	Sys. Info.	
C70(06-)		2006 D5244T8	Diesel Eng	Read code	
C70(06-)		2006 D5244T8	Diesel Eng	Clear code	
C70(06-)		2006 D5244T8	Diesel Eng	Data stream	
C70(06-)		2006 D5244T8	Diesel Eng	Actuation	
C70(06-)		2006 D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)		2006 D5244T8	Diesel Eng	Special functions	Resetting counter oil
C70(06-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)		2006 D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)		2006 D5244T8	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)		2006 D4164T	Diesel Eng	Sys. Info.	
C70(06-)		2006 D4164T	Diesel Eng	Read code	
C70(06-)		2006 D4164T	Diesel Eng	Clear code	
C70(06-)		2006 D4164T	Diesel Eng	Data stream	
C70(06-)		2006 D4164T	Diesel Eng	Actuation	
C70(06-)		2006 D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
C70(06-)		2006 D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C70(06-)		2006 D4164T	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)		2006 D4204T	Diesel Eng	Sys. Info.	
C70(06-)		2006 D4204T	Diesel Eng	Read code	
C70(06-)		2006 D4204T	Diesel Eng	Clear code	
C70(06-)		2006 D4204T	Diesel Eng	Data stream	
C70(06-)		2006 D4204T	Diesel Eng	Actuation	
C70(06-)		2006 D4204T	Diesel Eng	Freeze frame	
C70(06-)		2006 D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C70(06-)		2006 D4204T	Diesel Eng	Special functions	Resetting the adaptation values
C70(06-)		2006 D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
C70(06-)		2006 D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C70(06-)		2006 D4204T	Diesel Eng	Special functions	Combustion of soot particles

model	year	type	system	function	subfunction
C70(06-)	2006	AW55-50/51SN	TCM	Sys. Info.	
C70(06-)	2006	AW55-50/51SN	TCM	Read code	
C70(06-)	2006	AW55-50/51SN	TCM	Clear code	
C70(06-)	2006	AW55-50/51SN	TCM	Data stream	
C70(06-)	2006	AW55-50/51SN	TCM	Actuation	
C70(06-)	2006	AW55-50/51SN	TCM	Freeze frame	
C70(06-)	2006	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70(06-)	2006	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2006	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
C70(06-)	2006	4T65AWD	TCM	Special functions	Reset adaptation to zero
C70(06-)	2006	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2006	TF-80SC	TCM	Sys. Info.	
C70(06-)	2006	TF-80SC	TCM	Read code	
C70(06-)	2006	TF-80SC	TCM	Clear code	
C70(06-)	2006	TF-80SC	TCM	Data stream	
C70(06-)	2006	TF-80SC	TCM	Actuation	
C70(06-)	2006	TF-80SC	TCM	Special functions	Reset adaptation to zero
C70(06-)	2006	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2006	TF-80SC	TCM	Special functions	Calibration of position sensor
C70(06-)	2006	AW50/51AW D	TCM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	TCM	Read code	
C70(06-)	2006	AW50/51AW D	TCM	Clear code	
C70(06-)	2006	AW50/51AW D	TCM	Data stream	
C70(06-)	2006	AW50/51AW D	TCM	Actuation	
C70(06-)	2006	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
C70(06-)	2006	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2006	AW50/51AW D	ABS	Sys. Info.	
C70(06-)	2006	AW50/51AW D	ABS	Read code	
C70(06-)	2006	AW50/51AW D	ABS	Clear code	
C70(06-)	2006	AW50/51AW D	ABS	Data stream	
C70(06-)	2006	AW50/51AW D	ABS	Actuation	
C70(06-)	2006	AW50/51AW D	ABS	Freeze frame	
C70(06-)	2006	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
C70(06-)	2006	AW50/51AW D	ABS	Special functions	Reading off the configuration
C70(06-)	2006	AW50/51AW D	ABS	Special functions	Calibration
C70(06-)	2006	AW50/51AW D	SRS	Sys. Info.	
C70(06-)	2006	AW50/51AW D	SRS	Read code	
C70(06-)	2006	AW50/51AW D	SRS	Clear code	
C70(06-)	2006	AW50/51AW D	SRS	Data stream	
C70(06-)	2006	AW50/51AW D	SRS	Freeze frame	
C70(06-)	2006	AW50/51AW D	CEM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	CEM	Read code	
C70(06-)	2006	AW50/51AW D	CEM	Clear code	
C70(06-)	2006	AW50/51AW D	CEM	Data stream	

model	year	type	system	function	subfunction
C70(06-)	2006	AW50/51AW D	CEM	Actuation	
C70(06-)	2006	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
C70(06-)	2006	AW50/51AW D	CEM	Special functions	Programming control module
C70(06-)	2006	AW50/51AW D	CEM	Special functions	Resetting the factory settings
C70(06-)	2006	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
C70(06-)	2006	AW50/51AW D	CEM	Special functions	Resetting crash mode
C70(06-)	2006	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
C70(06-)	2006	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
C70(06-)	2006	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
C70(06-)	2006	AW50/51AW D	CEM	Special functions	Ignition switch key position
C70(06-)	2006	AW50/51AW D	CCM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	CCM	Read code	
C70(06-)	2006	AW50/51AW D	CCM	Clear code	
C70(06-)	2006	AW50/51AW D	CCM	Data stream	
C70(06-)	2006	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)
C70(06-)	2006	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
C70(06-)	2006	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
C70(06-)	2006	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
C70(06-)	2006	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
C70(06-)	2006	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
C70(06-)	2006	AW50/51AW D	CCM	Special functions	Programming the seat temperature
C70(06-)	2006	AW50/51AW D	DDM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	DDM	Read code	
C70(06-)	2006	AW50/51AW D	DDM	Clear code	
C70(06-)	2006	AW50/51AW D	DDM	Data stream	
C70(06-)	2006	AW50/51AW D	DDM	Actuation	
C70(06-)	2006	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C70(06-)	2006	AW50/51AW D	DIM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	DIM	Read code	
C70(06-)	2006	AW50/51AW D	DIM	Clear code	
C70(06-)	2006	AW50/51AW D	DIM	Data stream	
C70(06-)	2006	AW50/51AW D	DIM	Actuation	
C70(06-)	2006	AW50/51AW D	DIM	Freeze frame	
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)

model	year	type	system	function	subfunction
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Programming of clock (*)
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Programming parking brake warning
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal, seat belt reminder
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Programming instrument lighting
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Programming text message, seatbelt reminder
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Display of DSTC message
C70(06-)	2006	AW50/51AW D	DIM	Special functions	Read out programmed values
C70(06-)	2006	AW50/51AW D	PDM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	PDM	Read code	
C70(06-)	2006	AW50/51AW D	PDM	Clear code	
C70(06-)	2006	AW50/51AW D	PDM	Data stream	
C70(06-)	2006	AW50/51AW D	PDM	Actuation	
C70(06-)	2006	AW50/51AW D	PDM	Special functions	Initialize the window(*)
C70(06-)	2006	AW50/51AW D	DDM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	DDM	Read code	
C70(06-)	2006	AW50/51AW D	DDM	Clear code	
C70(06-)	2006	AW50/51AW D	DDM	Data stream	
C70(06-)	2006	AW50/51AW D	DDM	Actuation	
C70(06-)	2006	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C70(06-)	2006	AW50/51AW D	SWM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	SWM	Read code	
C70(06-)	2006	AW50/51AW D	SWM	Clear code	
C70(06-)	2006	AW50/51AW D	SWM	Data stream	
C70(06-)	2006	AW50/51AW D	PSM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	PSM	Read code	
C70(06-)	2006	AW50/51AW D	PSM	Clear code	
C70(06-)	2006	AW50/51AW D	PSM	Data stream	
C70(06-)	2006	AW50/51AW D	PSM	Actuation	
C70(06-)	2006	AW50/51AW D	PSL	Sys. Info.	
C70(06-)	2006	AW50/51AW D	PSL	Read code	
C70(06-)	2006	AW50/51AW D	PSL	Clear code	
C70(06-)	2006	AW50/51AW D	PSL	Data stream	
C70(06-)	2006	AW50/51AW D	PSR	Sys. Info.	
C70(06-)	2006	AW50/51AW D	PSR	Read code	
C70(06-)	2006	AW50/51AW D	PSR	Clear code	
C70(06-)	2006	AW50/51AW D	PSR	Data stream	
C70(06-)	2006	AW50/51AW D	PHM	Sys. Info.	

model	year	type	system	function	subfunction
C70(06-)	2006	AW50/51AW D	PHM	Read code	
C70(06-)	2006	AW50/51AW D	PHM	Clear code	
C70(06-)	2006	AW50/51AW D	PHM	Data stream	
C70(06-)	2006	AW50/51AW D	PHM	Actuation	
C70(06-)	2006	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
C70(06-)	2006	AW50/51AW D	AUD	Sys. Info.	
C70(06-)	2006	AW50/51AW D	AUD	Read code	
C70(06-)	2006	AW50/51AW D	AUD	Clear code	
C70(06-)	2006	AW50/51AW D	DEM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	DEM	Read code	
C70(06-)	2006	AW50/51AW D	DEM	Clear code	
C70(06-)	2006	AW50/51AW D	DEM	Data stream	
C70(06-)	2006	AW50/51AW D	ICM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	ICM	Read code	
C70(06-)	2006	AW50/51AW D	ICM	Clear code	
C70(06-)	2006	AW50/51AW D	ICM	Data stream	
C70(06-)	2006	AW50/51AW D	ICM	Actuation	
C70(06-)	2006	AW50/51AW D	MMM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	MMM	Read code	
C70(06-)	2006	AW50/51AW D	MMM	Clear code	
C70(06-)	2006	AW50/51AW D	MMM	Data stream	
C70(06-)	2006	AW50/51AW D	AEM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	AEM	Read code	
C70(06-)	2006	AW50/51AW D	AEM	Clear code	
C70(06-)	2006	AW50/51AW D	AEM	Data stream	
C70(06-)	2006	AW50/51AW D	AEM	Actuation	
C70(06-)	2006	AW50/51AW D	ADM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	ADM	Read code	
C70(06-)	2006	AW50/51AW D	ADM	Clear code	
C70(06-)	2006	AW50/51AW D	ADM	Data stream	
C70(06-)	2006	AW50/51AW D	EPS	Sys. Info.	
C70(06-)	2006	AW50/51AW D	EPS	Read code	
C70(06-)	2006	AW50/51AW D	EPS	Clear code	
C70(06-)	2006	AW50/51AW D	EPS	Data stream	
C70(06-)	2006	AW50/51AW D	PAM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	PAM	Read code	
C70(06-)	2006	AW50/51AW D	PAM	Clear code	
C70(06-)	2006	AW50/51AW D	PAM	Data stream	
C70(06-)	2006	AW50/51AW D	IAM	Sys. Info.	



model	year	type	system	function	subfunction
C70(06-)	2006	AW50/51AW D	IAM	Read code	
C70(06-)	2006	AW50/51AW D	IAM	Clear code	
C70(06-)	2006	AW50/51AW D	IAM	Data stream	
C70(06-)	2006	AW50/51AW D	IAM	Actuation	
C70(06-)	2006	AW50/51AW D	AFM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	AFM	Read code	
C70(06-)	2006	AW50/51AW D	AFM	Clear code	
C70(06-)	2006	AW50/51AW D	AFM	Data stream	
C70(06-)	2006	AW50/51AW D	AFM	Actuation	
C70(06-)	2006	AW50/51AW D	MPM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	MPM	Read code	
C70(06-)	2006	AW50/51AW D	MPM	Clear code	
C70(06-)	2006	AW50/51AW D	MPM	Data stream	
C70(06-)	2006	AW50/51AW D	MPM	Actuation	
C70(06-)	2006	AW50/51AW D	CPM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	CPM	Read code	
C70(06-)	2006	AW50/51AW D	CPM	Clear code	
C70(06-)	2006	AW50/51AW D	CPM	Data stream	
C70(06-)	2006	AW50/51AW D	CPM	Actuation	
C70(06-)	2006	AW50/51AW D	CRM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	CRM	Read code	
C70(06-)	2006	AW50/51AW D	CRM	Clear code	
C70(06-)	2006	AW50/51AW D	CRM	Data stream	
C70(06-)	2006	AW50/51AW D	GPS	Sys. Info.	
C70(06-)	2006	AW50/51AW D	GPS	Read code	
C70(06-)	2006	AW50/51AW D	GPS	Clear code	
C70(06-)	2006	AW50/51AW D	GPS	Data stream	
C70(06-)	2006	AW50/51AW D	SUB	Sys. Info.	
C70(06-)	2006	AW50/51AW D	SUB	Read code	
C70(06-)	2006	AW50/51AW D	SUB	Clear code	
C70(06-)	2006	AW50/51AW D	TMC	Sys. Info.	
C70(06-)	2006	AW50/51AW D	TMC	Read code	
C70(06-)	2006	AW50/51AW D	TMC	Clear code	
C70(06-)	2006	AW50/51AW D	TMC	Data stream	
C70(06-)	2006	AW50/51AW D	HCM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	HCM	Read code	
C70(06-)	2006	AW50/51AW D	HCM	Clear code	
C70(06-)	2006	AW50/51AW D	HCM	Special functions	Calibration of position sensor
C70(06-)	2006	AW50/51AW D	KVM	Sys. Info.	

model	year	type	system	function	subfunction
C70(06-)	2006	AW50/51AW D	KVM	Read code	
C70(06-)	2006	AW50/51AW D	KVM	Clear code	
C70(06-)	2006	AW50/51AW D	KVM	Data stream	
C70(06-)	2006	AW50/51AW D	KVM	Actuation	
C70(06-)	2006	AW50/51AW D	RDAR	Sys. Info.	
C70(06-)	2006	AW50/51AW D	RDAR	Read code	
C70(06-)	2006	AW50/51AW D	RDAR	Clear code	
C70(06-)	2006	AW50/51AW D	RDAR	Data stream	
C70(06-)	2006	AW50/51AW D	SUB	Sys. Info.	
C70(06-)	2006	AW50/51AW D	SUB	Read code	
C70(06-)	2006	AW50/51AW D	SUB	Clear code	
C70(06-)	2006	AW50/51AW D	SUB	Data stream	
C70(06-)	2006	AW50/51AW D	CVM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	CVM	Read code	
C70(06-)	2006	AW50/51AW D	CVM	Clear code	
C70(06-)	2006	AW50/51AW D	CVM	Data stream	
C70(06-)	2006	AW50/51AW D	DABM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	DABM	Read code	
C70(06-)	2006	AW50/51AW D	DABM	Clear code	
C70(06-)	2006	AW50/51AW D	DABM	Data stream	
C70(06-)	2006	AW50/51AW D	PAC	Sys. Info.	
C70(06-)	2006	AW50/51AW D	PAC	Read code	
C70(06-)	2006	AW50/51AW D	PAC	Clear code	
C70(06-)	2006	AW50/51AW D	PAC	Data stream	
C70(06-)	2006	AW50/51AW D	TRM	Sys. Info.	
C70(06-)	2006	AW50/51AW D	TRM	Read code	
C70(06-)	2006	AW50/51AW D	TRM	Clear code	
C70(06-)	2006	AW50/51AW D	TRM	Data stream	
C70(06-)	2007	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70(06-)	2007	B5244S4	ECM	Sys. Info.	
C70(06-)	2007	B5244S4	ECM	Read code	
C70(06-)	2007	B5244S4	ECM	Clear code	
C70(06-)	2007	B5244S4	ECM	Data stream	
C70(06-)	2007	B5244S4	ECM	Actuation	
C70(06-)	2007	B5244S4	ECM	Special functions	Resetting the adaptation values
C70(06-)	2007	B5244S5	ECM	Sys. Info.	
C70(06-)	2007	B5244S5	ECM	Read code	
C70(06-)	2007	B5244S5	ECM	Clear code	
C70(06-)	2007	B5244S5	ECM	Data stream	
C70(06-)	2007	B5244S5	ECM	Actuation	
C70(06-)	2007	B5244S5	ECM	Special functions	Resetting the adaptation values
C70(06-)	2007	B5244S7	ECM	Sys. Info.	
C70(06-)	2007	B5244S7	ECM	Read code	
C70(06-)	2007	B5244S7	ECM	Clear code	
C70(06-)	2007	B5244S7	ECM	Data stream	
C70(06-)	2007	B5244S7	ECM	Actuation	
C70(06-)	2007	B4204S3	ECM	Sys. Info.	
C70(06-)	2007	B4204S3	ECM	Read code	
C70(06-)	2007	B4204S3	ECM	Clear code	

model	year	type	system	function	subfunction
C70(06-)	2007	B4204S3	ECM	Data stream	
C70(06-)	2007	B4204S3	ECM	Actuation	
C70(06-)	2007	B5254T2	ECM	Sys. Info.	
C70(06-)	2007	B5254T2	ECM	Read code	
C70(06-)	2007	B5254T2	ECM	Clear code	
C70(06-)	2007	B5254T2	ECM	Data stream	
C70(06-)	2007	B5254T2	ECM	Actuation	
C70(06-)	2007	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2007	B5254T3	ECM	Sys. Info.	
C70(06-)	2007	B5254T3	ECM	Read code	
C70(06-)	2007	B5254T3	ECM	Clear code	
C70(06-)	2007	B5254T3	ECM	Data stream	
C70(06-)	2007	B5254T3	ECM	Actuation	
C70(06-)	2007	B5254T3	ECM	Freeze frame	
C70(06-)	2007	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2007	B5254T7	ECM	Sys. Info.	
C70(06-)	2007	B5254T7	ECM	Read code	
C70(06-)	2007	B5254T7	ECM	Clear code	
C70(06-)	2007	B5254T7	ECM	Data stream	
C70(06-)	2007	B5254T7	ECM	Actuation	
C70(06-)	2007	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2007	B5204T5	ECM	Sys. Info.	
C70(06-)	2007	B5204T5	ECM	Read code	
C70(06-)	2007	B5204T5	ECM	Clear code	
C70(06-)	2007	B5204T5	ECM	Data stream	
C70(06-)	2007	B5204T5	ECM	Actuation	
C70(06-)	2007	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2007	B6294T	ECM	Sys. Info.	
C70(06-)	2007	B6294T	ECM	Read code	
C70(06-)	2007	B6294T	ECM	Clear code	
C70(06-)	2007	B6294T	ECM	Data stream	
C70(06-)	2007	B6294T	ECM	Actuation	
C70(06-)	2007	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2007	B4164S3	ECM	Sys. Info.	
C70(06-)	2007	B4164S3	ECM	Read code	
C70(06-)	2007	B4164S3	ECM	Clear code	
C70(06-)	2007	B4164S3	ECM	Data stream	
C70(06-)	2007	B4164S3	ECM	Actuation	
C70(06-)	2007	B4164S3	ECM	Special functions	Resetting the adaptation values
C70(06-)	2007	B5244T5	ECM	Sys. Info.	
C70(06-)	2007	B5244T5	ECM	Read code	
C70(06-)	2007	B5244T5	ECM	Clear code	
C70(06-)	2007	B5244T5	ECM	Data stream	
C70(06-)	2007	B5244T5	ECM	Actuation	
C70(06-)	2007	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2007	B4184S11	ECM	Sys. Info.	
C70(06-)	2007	B4184S11	ECM	Read code	
C70(06-)	2007	B4184S11	ECM	Clear code	
C70(06-)	2007	B4184S11	ECM	Data stream	
C70(06-)	2007	B4184S11	ECM	Actuation	
C70(06-)	2007	B4184S11	ECM	Special functions	Resetting the adaptation values
C70(06-)	2007	D5244T	Diesel Eng	Sys. Info.	
C70(06-)	2007	D5244T	Diesel Eng	Read code	
C70(06-)	2007	D5244T	Diesel Eng	Clear code	
C70(06-)	2007	D5244T	Diesel Eng	Data stream	
C70(06-)	2007	D5244T	Diesel Eng	Actuation	
C70(06-)	2007	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C70(06-)	2007	D5244T4	Diesel Eng	Sys. Info.	
C70(06-)	2007	D5244T4	Diesel Eng	Read code	
C70(06-)	2007	D5244T4	Diesel Eng	Clear code	
C70(06-)	2007	D5244T4	Diesel Eng	Data stream	
C70(06-)	2007	D5244T4	Diesel Eng	Actuation	
C70(06-)	2007	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)	2007	D5244T4	Diesel Eng	Special functions	Resetting counter oil
C70(06-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)	2007	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)	2007	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2007	D5244T5	Diesel Eng	Sys. Info.	
C70(06-)	2007	D5244T5	Diesel Eng	Read code	
C70(06-)	2007	D5244T5	Diesel Eng	Clear code	
C70(06-)	2007	D5244T5	Diesel Eng	Data stream	
C70(06-)	2007	D5244T5	Diesel Eng	Actuation	
C70(06-)	2007	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter

model	year	type	system	function	subfunction
C70(06-)	2007	D5244T5	Diesel Eng	Special functions	Resetting counter oil
C70(06-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)	2007	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)	2007	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2007	D5244T8	Diesel Eng	Sys. Info.	
C70(06-)	2007	D5244T8	Diesel Eng	Read code	
C70(06-)	2007	D5244T8	Diesel Eng	Clear code	
C70(06-)	2007	D5244T8	Diesel Eng	Data stream	
C70(06-)	2007	D5244T8	Diesel Eng	Actuation	
C70(06-)	2007	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)	2007	D5244T8	Diesel Eng	Special functions	Resetting counter oil
C70(06-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)	2007	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)	2007	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2007	D4164T	Diesel Eng	Sys. Info.	
C70(06-)	2007	D4164T	Diesel Eng	Read code	
C70(06-)	2007	D4164T	Diesel Eng	Clear code	
C70(06-)	2007	D4164T	Diesel Eng	Data stream	
C70(06-)	2007	D4164T	Diesel Eng	Actuation	
C70(06-)	2007	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
C70(06-)	2007	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C70(06-)	2007	D4164T	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2007	D4204T	Diesel Eng	Sys. Info.	
C70(06-)	2007	D4204T	Diesel Eng	Read code	
C70(06-)	2007	D4204T	Diesel Eng	Clear code	
C70(06-)	2007	D4204T	Diesel Eng	Data stream	
C70(06-)	2007	D4204T	Diesel Eng	Actuation	
C70(06-)	2007	D4204T	Diesel Eng	Freeze frame	
C70(06-)	2007	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C70(06-)	2007	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
C70(06-)	2007	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
C70(06-)	2007	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C70(06-)	2007	D4204T	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2007	AW55-50/51SN	TCM	Sys. Info.	
C70(06-)	2007	AW55-50/51SN	TCM	Read code	
C70(06-)	2007	AW55-50/51SN	TCM	Clear code	
C70(06-)	2007	AW55-50/51SN	TCM	Data stream	
C70(06-)	2007	AW55-50/51SN	TCM	Actuation	
C70(06-)	2007	AW55-50/51SN	TCM	Freeze frame	
C70(06-)	2007	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70(06-)	2007	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2007	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
C70(06-)	2007	AW55-50/51SN	TCM	Special functions	Control module adaptation
C70(06-)	2007	AW55-50/51SN	TCM	Special functions	Activating gear indication
C70(06-)	2007	4T65AWD	TCM	Special functions	Reset adaptation to zero
C70(06-)	2007	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2007	TF-80SC	TCM	Sys. Info.	
C70(06-)	2007	TF-80SC	TCM	Read code	
C70(06-)	2007	TF-80SC	TCM	Clear code	
C70(06-)	2007	TF-80SC	TCM	Data stream	
C70(06-)	2007	TF-80SC	TCM	Actuation	
C70(06-)	2007	TF-80SC	TCM	Special functions	Reset adaptation to zero
C70(06-)	2007	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2007	TF-80SC	TCM	Special functions	Calibration of position sensor
C70(06-)	2007	AW50/51AWD	TCM	Sys. Info.	
C70(06-)	2007	AW50/51AWD	TCM	Read code	
C70(06-)	2007	AW50/51AWD	TCM	Clear code	

model	year	type	system	function	subfunction
C70(06-)	2007	AW50/51AW D	TCM	Data stream	
C70(06-)	2007	AW50/51AW D	TCM	Actuation	
C70(06-)	2007	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
C70(06-)	2007	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2007	AW50/51AW D	ABS	Sys. Info.	
C70(06-)	2007	AW50/51AW D	ABS	Read code	
C70(06-)	2007	AW50/51AW D	ABS	Clear code	
C70(06-)	2007	AW50/51AW D	ABS	Data stream	
C70(06-)	2007	AW50/51AW D	ABS	Actuation	
C70(06-)	2007	AW50/51AW D	ABS	Freeze frame	
C70(06-)	2007	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
C70(06-)	2007	AW50/51AW D	ABS	Special functions	Reading off the configuration
C70(06-)	2007	AW50/51AW D	ABS	Special functions	Calibration
C70(06-)	2007	AW50/51AW D	SRS	Sys. Info.	
C70(06-)	2007	AW50/51AW D	SRS	Read code	
C70(06-)	2007	AW50/51AW D	SRS	Clear code	
C70(06-)	2007	AW50/51AW D	SRS	Data stream	
C70(06-)	2007	AW50/51AW D	SRS	Freeze frame	
C70(06-)	2007	AW50/51AW D	CEM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	CEM	Read code	
C70(06-)	2007	AW50/51AW D	CEM	Clear code	
C70(06-)	2007	AW50/51AW D	CEM	Data stream	
C70(06-)	2007	AW50/51AW D	CEM	Actuation	
C70(06-)	2007	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
C70(06-)	2007	AW50/51AW D	CEM	Special functions	Programming control module
C70(06-)	2007	AW50/51AW D	CEM	Special functions	Resetting the factory settings
C70(06-)	2007	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
C70(06-)	2007	AW50/51AW D	CEM	Special functions	Resetting crash mode
C70(06-)	2007	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
C70(06-)	2007	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
C70(06-)	2007	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
C70(06-)	2007	AW50/51AW D	CEM	Special functions	Ignition switch key position
C70(06-)	2007	AW50/51AW D	CCM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	CCM	Read code	
C70(06-)	2007	AW50/51AW D	CCM	Clear code	
C70(06-)	2007	AW50/51AW D	CCM	Data stream	
C70(06-)	2007	AW50/51AW D	CCM	Special functions	Self-adjustment of adampner motor end stops(*)
C70(06-)	2007	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
C70(06-)	2007	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)

model	year	type	system	function	subfunction
C70(06-)	2007	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
C70(06-)	2007	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
C70(06-)	2007	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
C70(06-)	2007	AW50/51AW D	CCM	Special functions	Programming the seat temperature
C70(06-)	2007	AW50/51AW D	DDM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	DDM	Read code	
C70(06-)	2007	AW50/51AW D	DDM	Clear code	
C70(06-)	2007	AW50/51AW D	DDM	Data stream	
C70(06-)	2007	AW50/51AW D	DDM	Actuation	
C70(06-)	2007	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C70(06-)	2007	AW50/51AW D	DIM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	DIM	Read code	
C70(06-)	2007	AW50/51AW D	DIM	Clear code	
C70(06-)	2007	AW50/51AW D	DIM	Data stream	
C70(06-)	2007	AW50/51AW D	DIM	Actuation	
C70(06-)	2007	AW50/51AW D	DIM	Freeze frame	
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Resetting the service reminder(SRI) (*)
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Programming of clock (*)
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Programming parking brake warning
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Programming instrument lighting
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Display of DSTC message
C70(06-)	2007	AW50/51AW D	DIM	Special functions	Read out programmed values
C70(06-)	2007	AW50/51AW D	PDM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	PDM	Read code	
C70(06-)	2007	AW50/51AW D	PDM	Clear code	
C70(06-)	2007	AW50/51AW D	PDM	Data stream	
C70(06-)	2007	AW50/51AW D	PDM	Actuation	
C70(06-)	2007	AW50/51AW D	PDM	Special functions	Initialize the window(*)
C70(06-)	2007	AW50/51AW D	DDM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	DDM	Read code	

model	year	type	system	function	subfunction
C70(06-)	2007	AW50/51AW D	DDM	Clear code	
C70(06-)	2007	AW50/51AW D	DDM	Data stream	
C70(06-)	2007	AW50/51AW D	DDM	Actuation	
C70(06-)	2007	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C70(06-)	2007	AW50/51AW D	SWM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	SWM	Read code	
C70(06-)	2007	AW50/51AW D	SWM	Clear code	
C70(06-)	2007	AW50/51AW D	SWM	Data stream	
C70(06-)	2007	AW50/51AW D	PSM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	PSM	Read code	
C70(06-)	2007	AW50/51AW D	PSM	Clear code	
C70(06-)	2007	AW50/51AW D	PSM	Data stream	
C70(06-)	2007	AW50/51AW D	PSM	Actuation	
C70(06-)	2007	AW50/51AW D	PSL	Sys. Info.	
C70(06-)	2007	AW50/51AW D	PSL	Read code	
C70(06-)	2007	AW50/51AW D	PSL	Clear code	
C70(06-)	2007	AW50/51AW D	PSL	Data stream	
C70(06-)	2007	AW50/51AW D	PSR	Sys. Info.	
C70(06-)	2007	AW50/51AW D	PSR	Read code	
C70(06-)	2007	AW50/51AW D	PSR	Clear code	
C70(06-)	2007	AW50/51AW D	PSR	Data stream	
C70(06-)	2007	AW50/51AW D	PHM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	PHM	Read code	
C70(06-)	2007	AW50/51AW D	PHM	Clear code	
C70(06-)	2007	AW50/51AW D	PHM	Data stream	
C70(06-)	2007	AW50/51AW D	PHM	Actuation	
C70(06-)	2007	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
C70(06-)	2007	AW50/51AW D	AUD	Sys. Info.	
C70(06-)	2007	AW50/51AW D	AUD	Read code	
C70(06-)	2007	AW50/51AW D	AUD	Clear code	
C70(06-)	2007	AW50/51AW D	DEM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	DEM	Read code	
C70(06-)	2007	AW50/51AW D	DEM	Clear code	
C70(06-)	2007	AW50/51AW D	DEM	Data stream	
C70(06-)	2007	AW50/51AW D	ICM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	ICM	Read code	
C70(06-)	2007	AW50/51AW D	ICM	Clear code	
C70(06-)	2007	AW50/51AW D	ICM	Data stream	
C70(06-)	2007	AW50/51AW D	ICM	Actuation	

model	year	type	system	function	subfunction
C70(06-)	2007	AW50/51AW D	MMM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	MMM	Read code	
C70(06-)	2007	AW50/51AW D	MMM	Clear code	
C70(06-)	2007	AW50/51AW D	MMM	Data stream	
C70(06-)	2007	AW50/51AW D	AEM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	AEM	Read code	
C70(06-)	2007	AW50/51AW D	AEM	Clear code	
C70(06-)	2007	AW50/51AW D	AEM	Data stream	
C70(06-)	2007	AW50/51AW D	AEM	Actuation	
C70(06-)	2007	AW50/51AW D	ADM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	ADM	Read code	
C70(06-)	2007	AW50/51AW D	ADM	Clear code	
C70(06-)	2007	AW50/51AW D	ADM	Data stream	
C70(06-)	2007	AW50/51AW D	EPS	Sys. Info.	
C70(06-)	2007	AW50/51AW D	EPS	Read code	
C70(06-)	2007	AW50/51AW D	EPS	Clear code	
C70(06-)	2007	AW50/51AW D	EPS	Data stream	
C70(06-)	2007	AW50/51AW D	PAM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	PAM	Read code	
C70(06-)	2007	AW50/51AW D	PAM	Clear code	
C70(06-)	2007	AW50/51AW D	PAM	Data stream	
C70(06-)	2007	AW50/51AW D	IAM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	IAM	Read code	
C70(06-)	2007	AW50/51AW D	IAM	Clear code	
C70(06-)	2007	AW50/51AW D	IAM	Data stream	
C70(06-)	2007	AW50/51AW D	IAM	Actuation	
C70(06-)	2007	AW50/51AW D	AFM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	AFM	Read code	
C70(06-)	2007	AW50/51AW D	AFM	Clear code	
C70(06-)	2007	AW50/51AW D	AFM	Data stream	
C70(06-)	2007	AW50/51AW D	AFM	Actuation	
C70(06-)	2007	AW50/51AW D	MPM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	MPM	Read code	
C70(06-)	2007	AW50/51AW D	MPM	Clear code	
C70(06-)	2007	AW50/51AW D	MPM	Data stream	
C70(06-)	2007	AW50/51AW D	MPM	Actuation	
C70(06-)	2007	AW50/51AW D	CPM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	CPM	Read code	
C70(06-)	2007	AW50/51AW D	CPM	Clear code	



model	year	type	system	function	subfunction
C70(06-)	2007	AW50/51AW D	CPM	Data stream	
C70(06-)	2007	AW50/51AW D	CPM	Actuation	
C70(06-)	2007	AW50/51AW D	CRM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	CRM	Read code	
C70(06-)	2007	AW50/51AW D	CRM	Clear code	
C70(06-)	2007	AW50/51AW D	CRM	Data stream	
C70(06-)	2007	AW50/51AW D	GPS	Sys. Info.	
C70(06-)	2007	AW50/51AW D	GPS	Read code	
C70(06-)	2007	AW50/51AW D	GPS	Clear code	
C70(06-)	2007	AW50/51AW D	GPS	Data stream	
C70(06-)	2007	AW50/51AW D	SUB	Sys. Info.	
C70(06-)	2007	AW50/51AW D	SUB	Read code	
C70(06-)	2007	AW50/51AW D	SUB	Clear code	
C70(06-)	2007	AW50/51AW D	TMC	Sys. Info.	
C70(06-)	2007	AW50/51AW D	TMC	Read code	
C70(06-)	2007	AW50/51AW D	TMC	Clear code	
C70(06-)	2007	AW50/51AW D	TMC	Data stream	
C70(06-)	2007	AW50/51AW D	HCM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	HCM	Read code	
C70(06-)	2007	AW50/51AW D	HCM	Clear code	
C70(06-)	2007	AW50/51AW D	HCM	Special functions	Calibration of position sensor
C70(06-)	2007	AW50/51AW D	KVM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	KVM	Read code	
C70(06-)	2007	AW50/51AW D	KVM	Clear code	
C70(06-)	2007	AW50/51AW D	KVM	Data stream	
C70(06-)	2007	AW50/51AW D	KVM	Actuation	
C70(06-)	2007	AW50/51AW D	RDAR	Sys. Info.	
C70(06-)	2007	AW50/51AW D	RDAR	Read code	
C70(06-)	2007	AW50/51AW D	RDAR	Clear code	
C70(06-)	2007	AW50/51AW D	RDAR	Data stream	
C70(06-)	2007	AW50/51AW D	SUB	Sys. Info.	
C70(06-)	2007	AW50/51AW D	SUB	Read code	
C70(06-)	2007	AW50/51AW D	SUB	Clear code	
C70(06-)	2007	AW50/51AW D	SUB	Data stream	
C70(06-)	2007	AW50/51AW D	CVM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	CVM	Read code	
C70(06-)	2007	AW50/51AW D	CVM	Clear code	
C70(06-)	2007	AW50/51AW D	CVM	Data stream	
C70(06-)	2007	AW50/51AW D	DABM	Sys. Info.	

model	year	type	system	function	subfunction
C70(06-)	2007	AW50/51AW D	DABM	Read code	
C70(06-)	2007	AW50/51AW D	DABM	Clear code	
C70(06-)	2007	AW50/51AW D	DABM	Data stream	
C70(06-)	2007	AW50/51AW D	PAC	Sys. Info.	
C70(06-)	2007	AW50/51AW D	PAC	Read code	
C70(06-)	2007	AW50/51AW D	PAC	Clear code	
C70(06-)	2007	AW50/51AW D	PAC	Data stream	
C70(06-)	2007	AW50/51AW D	TRM	Sys. Info.	
C70(06-)	2007	AW50/51AW D	TRM	Read code	
C70(06-)	2007	AW50/51AW D	TRM	Clear code	
C70(06-)	2007	AW50/51AW D	TRM	Data stream	
C70(06-)	2008	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70(06-)	2008	B5244S4	ECM	Sys. Info.	
C70(06-)	2008	B5244S4	ECM	Read code	
C70(06-)	2008	B5244S4	ECM	Clear code	
C70(06-)	2008	B5244S4	ECM	Data stream	
C70(06-)	2008	B5244S4	ECM	Actuation	
C70(06-)	2008	B5244S4	ECM	Freeze frame	
C70(06-)	2008	B5244S4	ECM	Special functions	Resetting the adaptation values
C70(06-)	2008	B5244S4	ECM	Special functions	Testing the fuel pump (FP)
C70(06-)	2008	B5244S5	ECM	Sys. Info.	
C70(06-)	2008	B5244S5	ECM	Read code	
C70(06-)	2008	B5244S5	ECM	Clear code	
C70(06-)	2008	B5244S5	ECM	Data stream	
C70(06-)	2008	B5244S5	ECM	Actuation	
C70(06-)	2008	B5244S5	ECM	Special functions	Resetting the adaptation values
C70(06-)	2008	B5244S7	ECM	Sys. Info.	
C70(06-)	2008	B5244S7	ECM	Read code	
C70(06-)	2008	B5244S7	ECM	Clear code	
C70(06-)	2008	B5244S7	ECM	Data stream	
C70(06-)	2008	B5244S7	ECM	Actuation	
C70(06-)	2008	B4204S3	ECM	Sys. Info.	
C70(06-)	2008	B4204S3	ECM	Read code	
C70(06-)	2008	B4204S3	ECM	Clear code	
C70(06-)	2008	B4204S3	ECM	Data stream	
C70(06-)	2008	B4204S3	ECM	Actuation	
C70(06-)	2008	B5254T2	ECM	Sys. Info.	
C70(06-)	2008	B5254T2	ECM	Read code	
C70(06-)	2008	B5254T2	ECM	Clear code	
C70(06-)	2008	B5254T2	ECM	Data stream	
C70(06-)	2008	B5254T2	ECM	Actuation	
C70(06-)	2008	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2008	B5254T3	ECM	Sys. Info.	
C70(06-)	2008	B5254T3	ECM	Read code	
C70(06-)	2008	B5254T3	ECM	Clear code	
C70(06-)	2008	B5254T3	ECM	Data stream	
C70(06-)	2008	B5254T3	ECM	Actuation	
C70(06-)	2008	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2008	B5254T7	ECM	Sys. Info.	
C70(06-)	2008	B5254T7	ECM	Read code	
C70(06-)	2008	B5254T7	ECM	Clear code	
C70(06-)	2008	B5254T7	ECM	Data stream	
C70(06-)	2008	B5254T7	ECM	Actuation	
C70(06-)	2008	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2008	B5204T5	ECM	Sys. Info.	
C70(06-)	2008	B5204T5	ECM	Read code	
C70(06-)	2008	B5204T5	ECM	Clear code	
C70(06-)	2008	B5204T5	ECM	Data stream	
C70(06-)	2008	B5204T5	ECM	Actuation	
C70(06-)	2008	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2008	B6294T	ECM	Sys. Info.	
C70(06-)	2008	B6294T	ECM	Read code	
C70(06-)	2008	B6294T	ECM	Clear code	
C70(06-)	2008	B6294T	ECM	Data stream	
C70(06-)	2008	B6294T	ECM	Actuation	
C70(06-)	2008	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)

model	year	type	system	function	subfunction	
C70(06-)		2008	B4164S3	ECM	Sys. Info.	
C70(06-)		2008	B4164S3	ECM	Read code	
C70(06-)		2008	B4164S3	ECM	Clear code	
C70(06-)		2008	B4164S3	ECM	Data stream	
C70(06-)		2008	B4164S3	ECM	Actuation	
C70(06-)		2008	B4164S3	ECM	Special functions	Resetting the adaptation values
C70(06-)		2008	B5244T5	ECM	Sys. Info.	
C70(06-)		2008	B5244T5	ECM	Read code	
C70(06-)		2008	B5244T5	ECM	Clear code	
C70(06-)		2008	B5244T5	ECM	Data stream	
C70(06-)		2008	B5244T5	ECM	Actuation	
C70(06-)		2008	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)		2008	B4184S11	ECM	Sys. Info.	
C70(06-)		2008	B4184S11	ECM	Read code	
C70(06-)		2008	B4184S11	ECM	Clear code	
C70(06-)		2008	B4184S11	ECM	Data stream	
C70(06-)		2008	B4184S11	ECM	Actuation	
C70(06-)		2008	B4184S11	ECM	Special functions	Resetting the adaptation values
C70(06-)		2008	D5244T	Diesel Eng	Sys. Info.	
C70(06-)		2008	D5244T	Diesel Eng	Read code	
C70(06-)		2008	D5244T	Diesel Eng	Clear code	
C70(06-)		2008	D5244T	Diesel Eng	Data stream	
C70(06-)		2008	D5244T	Diesel Eng	Actuation	
C70(06-)		2008	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C70(06-)		2008	D5244T4	Diesel Eng	Sys. Info.	
C70(06-)		2008	D5244T4	Diesel Eng	Read code	
C70(06-)		2008	D5244T4	Diesel Eng	Clear code	
C70(06-)		2008	D5244T4	Diesel Eng	Data stream	
C70(06-)		2008	D5244T4	Diesel Eng	Actuation	
C70(06-)		2008	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)		2008	D5244T4	Diesel Eng	Special functions	Resetting counter oil
C70(06-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)		2008	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)		2008	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)		2008	D5244T5	Diesel Eng	Sys. Info.	
C70(06-)		2008	D5244T5	Diesel Eng	Read code	
C70(06-)		2008	D5244T5	Diesel Eng	Clear code	
C70(06-)		2008	D5244T5	Diesel Eng	Data stream	
C70(06-)		2008	D5244T5	Diesel Eng	Actuation	
C70(06-)		2008	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)		2008	D5244T5	Diesel Eng	Special functions	Resetting counter oil
C70(06-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)		2008	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)		2008	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)		2008	D5244T8	Diesel Eng	Sys. Info.	
C70(06-)		2008	D5244T8	Diesel Eng	Read code	
C70(06-)		2008	D5244T8	Diesel Eng	Clear code	
C70(06-)		2008	D5244T8	Diesel Eng	Data stream	
C70(06-)		2008	D5244T8	Diesel Eng	Actuation	
C70(06-)		2008	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)		2008	D5244T8	Diesel Eng	Special functions	Resetting counter oil
C70(06-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)		2008	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)		2008	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)		2008	D4164T	Diesel Eng	Sys. Info.	
C70(06-)		2008	D4164T	Diesel Eng	Read code	
C70(06-)		2008	D4164T	Diesel Eng	Clear code	
C70(06-)		2008	D4164T	Diesel Eng	Data stream	
C70(06-)		2008	D4164T	Diesel Eng	Actuation	
C70(06-)		2008	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
C70(06-)		2008	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C70(06-)		2008	D4164T	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)		2008	D4204T	Diesel Eng	Sys. Info.	
C70(06-)		2008	D4204T	Diesel Eng	Read code	
C70(06-)		2008	D4204T	Diesel Eng	Clear code	
C70(06-)		2008	D4204T	Diesel Eng	Data stream	

model	year	type	system	function	subfunction
C70(06-)	2008	D4204T	Diesel Eng	Actuation	
C70(06-)	2008	D4204T	Diesel Eng	Freeze frame	
C70(06-)	2008	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C70(06-)	2008	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
C70(06-)	2008	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
C70(06-)	2008	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C70(06-)	2008	D4204T	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2008	AW55-50/51SN	TCM	Sys. Info.	
C70(06-)	2008	AW55-50/51SN	TCM	Read code	
C70(06-)	2008	AW55-50/51SN	TCM	Clear code	
C70(06-)	2008	AW55-50/51SN	TCM	Data stream	
C70(06-)	2008	AW55-50/51SN	TCM	Actuation	
C70(06-)	2008	AW55-50/51SN	TCM	Freeze frame	
C70(06-)	2008	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70(06-)	2008	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2008	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
C70(06-)	2008	4T65AWD	TCM	Special functions	Reset adaptation to zero
C70(06-)	2008	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2008	TF-80SC	TCM	Sys. Info.	
C70(06-)	2008	TF-80SC	TCM	Read code	
C70(06-)	2008	TF-80SC	TCM	Clear code	
C70(06-)	2008	TF-80SC	TCM	Data stream	
C70(06-)	2008	TF-80SC	TCM	Actuation	
C70(06-)	2008	TF-80SC	TCM	Special functions	Reset adaptation to zero
C70(06-)	2008	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2008	TF-80SC	TCM	Special functions	Calibration of position sensor
C70(06-)	2008	AW50/51AW D	TCM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	TCM	Read code	
C70(06-)	2008	AW50/51AW D	TCM	Clear code	
C70(06-)	2008	AW50/51AW D	TCM	Data stream	
C70(06-)	2008	AW50/51AW D	TCM	Actuation	
C70(06-)	2008	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
C70(06-)	2008	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2008	AW50/51AW D	ABS	Sys. Info.	
C70(06-)	2008	AW50/51AW D	ABS	Read code	
C70(06-)	2008	AW50/51AW D	ABS	Clear code	
C70(06-)	2008	AW50/51AW D	ABS	Data stream	
C70(06-)	2008	AW50/51AW D	ABS	Actuation	
C70(06-)	2008	AW50/51AW D	ABS	Freeze frame	
C70(06-)	2008	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
C70(06-)	2008	AW50/51AW D	ABS	Special functions	Reading off the configuration
C70(06-)	2008	AW50/51AW D	ABS	Special functions	Calibration
C70(06-)	2008	AW50/51AW D	SRS	Sys. Info.	
C70(06-)	2008	AW50/51AW D	SRS	Read code	
C70(06-)	2008	AW50/51AW D	SRS	Clear code	
C70(06-)	2008	AW50/51AW D	SRS	Data stream	
C70(06-)	2008	AW50/51AW D	SRS	Freeze frame	

model	year	type	system	function	subfunction
C70(06-)	2008	AW50/51AW D	CEM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	CEM	Read code	
C70(06-)	2008	AW50/51AW D	CEM	Clear code	
C70(06-)	2008	AW50/51AW D	CEM	Data stream	
C70(06-)	2008	AW50/51AW D	CEM	Actuation	
C70(06-)	2008	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
C70(06-)	2008	AW50/51AW D	CEM	Special functions	Programming control module
C70(06-)	2008	AW50/51AW D	CEM	Special functions	Resetting the factory settings
C70(06-)	2008	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
C70(06-)	2008	AW50/51AW D	CEM	Special functions	Resetting crash mode
C70(06-)	2008	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
C70(06-)	2008	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
C70(06-)	2008	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
C70(06-)	2008	AW50/51AW D	CEM	Special functions	Ignition switch key position
C70(06-)	2008	AW50/51AW D	CCM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	CCM	Read code	
C70(06-)	2008	AW50/51AW D	CCM	Clear code	
C70(06-)	2008	AW50/51AW D	CCM	Data stream	
C70(06-)	2008	AW50/51AW D	CCM	Special functions	Self-adjustment of adamerper motor end stops(*)
C70(06-)	2008	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
C70(06-)	2008	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
C70(06-)	2008	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
C70(06-)	2008	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
C70(06-)	2008	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
C70(06-)	2008	AW50/51AW D	CCM	Special functions	Programming the seat temperature
C70(06-)	2008	AW50/51AW D	DDM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	DDM	Read code	
C70(06-)	2008	AW50/51AW D	DDM	Clear code	
C70(06-)	2008	AW50/51AW D	DDM	Data stream	
C70(06-)	2008	AW50/51AW D	DDM	Actuation	
C70(06-)	2008	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C70(06-)	2008	AW50/51AW D	DIM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	DIM	Read code	
C70(06-)	2008	AW50/51AW D	DIM	Clear code	
C70(06-)	2008	AW50/51AW D	DIM	Data stream	
C70(06-)	2008	AW50/51AW D	DIM	Actuation	
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)

model	year	type	system	function	subfunction
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Programming of clock (*)
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Programming parking brake warning
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Programming instrument lighting
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Display of DSTC message
C70(06-)	2008	AW50/51AW D	DIM	Special functions	Read out programmed values
C70(06-)	2008	AW50/51AW D	PDM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	PDM	Read code	
C70(06-)	2008	AW50/51AW D	PDM	Clear code	
C70(06-)	2008	AW50/51AW D	PDM	Data stream	
C70(06-)	2008	AW50/51AW D	PDM	Actuation	
C70(06-)	2008	AW50/51AW D	PDM	Special functions	Initialize the window(*)
C70(06-)	2008	AW50/51AW D	DDM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	DDM	Read code	
C70(06-)	2008	AW50/51AW D	DDM	Clear code	
C70(06-)	2008	AW50/51AW D	DDM	Data stream	
C70(06-)	2008	AW50/51AW D	DDM	Actuation	
C70(06-)	2008	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C70(06-)	2008	AW50/51AW D	SWM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	SWM	Read code	
C70(06-)	2008	AW50/51AW D	SWM	Clear code	
C70(06-)	2008	AW50/51AW D	SWM	Data stream	
C70(06-)	2008	AW50/51AW D	PSM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	PSM	Read code	
C70(06-)	2008	AW50/51AW D	PSM	Clear code	
C70(06-)	2008	AW50/51AW D	PSM	Data stream	
C70(06-)	2008	AW50/51AW D	PSM	Actuation	
C70(06-)	2008	AW50/51AW D	PSL	Sys. Info.	
C70(06-)	2008	AW50/51AW D	PSL	Read code	
C70(06-)	2008	AW50/51AW D	PSL	Clear code	
C70(06-)	2008	AW50/51AW D	PSL	Data stream	
C70(06-)	2008	AW50/51AW D	PSR	Sys. Info.	
C70(06-)	2008	AW50/51AW D	PSR	Read code	

model	year	type	system	function	subfunction
C70(06-)	2008	AW50/51AW D	PSR	Clear code	
C70(06-)	2008	AW50/51AW D	PSR	Data stream	
C70(06-)	2008	AW50/51AW D	PHM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	PHM	Read code	
C70(06-)	2008	AW50/51AW D	PHM	Clear code	
C70(06-)	2008	AW50/51AW D	PHM	Data stream	
C70(06-)	2008	AW50/51AW D	PHM	Actuation	
C70(06-)	2008	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
C70(06-)	2008	AW50/51AW D	AUD	Sys. Info.	
C70(06-)	2008	AW50/51AW D	AUD	Read code	
C70(06-)	2008	AW50/51AW D	AUD	Clear code	
C70(06-)	2008	AW50/51AW D	DEM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	DEM	Read code	
C70(06-)	2008	AW50/51AW D	DEM	Clear code	
C70(06-)	2008	AW50/51AW D	DEM	Data stream	
C70(06-)	2008	AW50/51AW D	ICM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	ICM	Read code	
C70(06-)	2008	AW50/51AW D	ICM	Clear code	
C70(06-)	2008	AW50/51AW D	ICM	Data stream	
C70(06-)	2008	AW50/51AW D	ICM	Actuation	
C70(06-)	2008	AW50/51AW D	MMM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	MMM	Read code	
C70(06-)	2008	AW50/51AW D	MMM	Clear code	
C70(06-)	2008	AW50/51AW D	MMM	Data stream	
C70(06-)	2008	AW50/51AW D	AEM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	AEM	Read code	
C70(06-)	2008	AW50/51AW D	AEM	Clear code	
C70(06-)	2008	AW50/51AW D	AEM	Data stream	
C70(06-)	2008	AW50/51AW D	AEM	Actuation	
C70(06-)	2008	AW50/51AW D	ADM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	ADM	Read code	
C70(06-)	2008	AW50/51AW D	ADM	Clear code	
C70(06-)	2008	AW50/51AW D	ADM	Data stream	
C70(06-)	2008	AW50/51AW D	EPS	Sys. Info.	
C70(06-)	2008	AW50/51AW D	EPS	Read code	
C70(06-)	2008	AW50/51AW D	EPS	Clear code	
C70(06-)	2008	AW50/51AW D	EPS	Data stream	
C70(06-)	2008	AW50/51AW D	PAM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	PAM	Read code	

model	year	type	system	function	subfunction
C70(06-)	2008	AW50/51AW D	PAM	Clear code	
C70(06-)	2008	AW50/51AW D	PAM	Data stream	
C70(06-)	2008	AW50/51AW D	IAM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	IAM	Read code	
C70(06-)	2008	AW50/51AW D	IAM	Clear code	
C70(06-)	2008	AW50/51AW D	IAM	Data stream	
C70(06-)	2008	AW50/51AW D	IAM	Actuation	
C70(06-)	2008	AW50/51AW D	AFM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	AFM	Read code	
C70(06-)	2008	AW50/51AW D	AFM	Clear code	
C70(06-)	2008	AW50/51AW D	AFM	Data stream	
C70(06-)	2008	AW50/51AW D	AFM	Actuation	
C70(06-)	2008	AW50/51AW D	MPM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	MPM	Read code	
C70(06-)	2008	AW50/51AW D	MPM	Clear code	
C70(06-)	2008	AW50/51AW D	MPM	Data stream	
C70(06-)	2008	AW50/51AW D	MPM	Actuation	
C70(06-)	2008	AW50/51AW D	CPM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	CPM	Read code	
C70(06-)	2008	AW50/51AW D	CPM	Clear code	
C70(06-)	2008	AW50/51AW D	CPM	Data stream	
C70(06-)	2008	AW50/51AW D	CPM	Actuation	
C70(06-)	2008	AW50/51AW D	CRM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	CRM	Read code	
C70(06-)	2008	AW50/51AW D	CRM	Clear code	
C70(06-)	2008	AW50/51AW D	CRM	Data stream	
C70(06-)	2008	AW50/51AW D	GPS	Sys. Info.	
C70(06-)	2008	AW50/51AW D	GPS	Read code	
C70(06-)	2008	AW50/51AW D	GPS	Clear code	
C70(06-)	2008	AW50/51AW D	GPS	Data stream	
C70(06-)	2008	AW50/51AW D	SUB	Sys. Info.	
C70(06-)	2008	AW50/51AW D	SUB	Read code	
C70(06-)	2008	AW50/51AW D	SUB	Clear code	
C70(06-)	2008	AW50/51AW D	TMC	Sys. Info.	
C70(06-)	2008	AW50/51AW D	TMC	Read code	
C70(06-)	2008	AW50/51AW D	TMC	Clear code	
C70(06-)	2008	AW50/51AW D	TMC	Data stream	
C70(06-)	2008	AW50/51AW D	HCM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	HCM	Read code	



model	year	type	system	function	subfunction
C70(06-)	2008	AW50/51AW D	HCM	Clear code	
C70(06-)	2008	AW50/51AW D	HCM	Special functions	Calibration of position sensor
C70(06-)	2008	AW50/51AW D	KVM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	KVM	Read code	
C70(06-)	2008	AW50/51AW D	KVM	Clear code	
C70(06-)	2008	AW50/51AW D	KVM	Data stream	
C70(06-)	2008	AW50/51AW D	KVM	Actuation	
C70(06-)	2008	AW50/51AW D	RDAR	Sys. Info.	
C70(06-)	2008	AW50/51AW D	RDAR	Read code	
C70(06-)	2008	AW50/51AW D	RDAR	Clear code	
C70(06-)	2008	AW50/51AW D	RDAR	Data stream	
C70(06-)	2008	AW50/51AW D	SUB	Sys. Info.	
C70(06-)	2008	AW50/51AW D	SUB	Read code	
C70(06-)	2008	AW50/51AW D	SUB	Clear code	
C70(06-)	2008	AW50/51AW D	SUB	Data stream	
C70(06-)	2008	AW50/51AW D	CVM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	CVM	Read code	
C70(06-)	2008	AW50/51AW D	CVM	Clear code	
C70(06-)	2008	AW50/51AW D	CVM	Data stream	
C70(06-)	2008	AW50/51AW D	DABM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	DABM	Read code	
C70(06-)	2008	AW50/51AW D	DABM	Clear code	
C70(06-)	2008	AW50/51AW D	DABM	Data stream	
C70(06-)	2008	AW50/51AW D	PAC	Sys. Info.	
C70(06-)	2008	AW50/51AW D	PAC	Read code	
C70(06-)	2008	AW50/51AW D	PAC	Clear code	
C70(06-)	2008	AW50/51AW D	PAC	Data stream	
C70(06-)	2008	AW50/51AW D	TRM	Sys. Info.	
C70(06-)	2008	AW50/51AW D	TRM	Read code	
C70(06-)	2008	AW50/51AW D	TRM	Clear code	
C70(06-)	2008	AW50/51AW D	TRM	Data stream	
C70(06-)	2009	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70(06-)	2009	B5244S4	ECM	Sys. Info.	
C70(06-)	2009	B5244S4	ECM	Read code	
C70(06-)	2009	B5244S4	ECM	Clear code	
C70(06-)	2009	B5244S4	ECM	Data stream	
C70(06-)	2009	B5244S4	ECM	Actuation	
C70(06-)	2009	B5244S4	ECM	Freeze frame	
C70(06-)	2009	B5244S4	ECM	Special functions	Resetting the adaptation values
C70(06-)	2009	B5244S5	ECM	Sys. Info.	
C70(06-)	2009	B5244S5	ECM	Read code	
C70(06-)	2009	B5244S5	ECM	Clear code	
C70(06-)	2009	B5244S5	ECM	Data stream	
C70(06-)	2009	B5244S5	ECM	Actuation	
C70(06-)	2009	B5244S5	ECM	Freeze frame	
C70(06-)	2009	B5244S5	ECM	Special functions	Resetting the adaptation values

model	year	type	system	function	subfunction
C70(06-)	2009	B5244S7	ECM	Sys. Info.	
C70(06-)	2009	B5244S7	ECM	Read code	
C70(06-)	2009	B5244S7	ECM	Clear code	
C70(06-)	2009	B5244S7	ECM	Data stream	
C70(06-)	2009	B5244S7	ECM	Actuation	
C70(06-)	2009	B4204S3	ECM	Sys. Info.	
C70(06-)	2009	B4204S3	ECM	Read code	
C70(06-)	2009	B4204S3	ECM	Clear code	
C70(06-)	2009	B4204S3	ECM	Data stream	
C70(06-)	2009	B4204S3	ECM	Actuation	
C70(06-)	2009	B5254T2	ECM	Sys. Info.	
C70(06-)	2009	B5254T2	ECM	Read code	
C70(06-)	2009	B5254T2	ECM	Clear code	
C70(06-)	2009	B5254T2	ECM	Data stream	
C70(06-)	2009	B5254T2	ECM	Actuation	
C70(06-)	2009	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2009	B5254T3	ECM	Sys. Info.	
C70(06-)	2009	B5254T3	ECM	Read code	
C70(06-)	2009	B5254T3	ECM	Clear code	
C70(06-)	2009	B5254T3	ECM	Data stream	
C70(06-)	2009	B5254T3	ECM	Actuation	
C70(06-)	2009	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2009	B5254T7	ECM	Sys. Info.	
C70(06-)	2009	B5254T7	ECM	Read code	
C70(06-)	2009	B5254T7	ECM	Clear code	
C70(06-)	2009	B5254T7	ECM	Data stream	
C70(06-)	2009	B5254T7	ECM	Actuation	
C70(06-)	2009	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2009	B5204T5	ECM	Sys. Info.	
C70(06-)	2009	B5204T5	ECM	Read code	
C70(06-)	2009	B5204T5	ECM	Clear code	
C70(06-)	2009	B5204T5	ECM	Data stream	
C70(06-)	2009	B5204T5	ECM	Actuation	
C70(06-)	2009	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2009	B6294T	ECM	Sys. Info.	
C70(06-)	2009	B6294T	ECM	Read code	
C70(06-)	2009	B6294T	ECM	Clear code	
C70(06-)	2009	B6294T	ECM	Data stream	
C70(06-)	2009	B6294T	ECM	Actuation	
C70(06-)	2009	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2009	B4164S3	ECM	Sys. Info.	
C70(06-)	2009	B4164S3	ECM	Read code	
C70(06-)	2009	B4164S3	ECM	Clear code	
C70(06-)	2009	B4164S3	ECM	Data stream	
C70(06-)	2009	B4164S3	ECM	Actuation	
C70(06-)	2009	B4164S3	ECM	Special functions	Resetting the adaptation values
C70(06-)	2009	B5244T5	ECM	Sys. Info.	
C70(06-)	2009	B5244T5	ECM	Read code	
C70(06-)	2009	B5244T5	ECM	Clear code	
C70(06-)	2009	B5244T5	ECM	Data stream	
C70(06-)	2009	B5244T5	ECM	Actuation	
C70(06-)	2009	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2009	B4184S11	ECM	Sys. Info.	
C70(06-)	2009	B4184S11	ECM	Read code	
C70(06-)	2009	B4184S11	ECM	Clear code	
C70(06-)	2009	B4184S11	ECM	Data stream	
C70(06-)	2009	B4184S11	ECM	Actuation	
C70(06-)	2009	B4184S11	ECM	Special functions	Resetting the adaptation values
C70(06-)	2009	D5244T	Diesel Eng	Sys. Info.	
C70(06-)	2009	D5244T	Diesel Eng	Read code	
C70(06-)	2009	D5244T	Diesel Eng	Clear code	
C70(06-)	2009	D5244T	Diesel Eng	Data stream	
C70(06-)	2009	D5244T	Diesel Eng	Actuation	
C70(06-)	2009	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C70(06-)	2009	D5244T4	Diesel Eng	Sys. Info.	
C70(06-)	2009	D5244T4	Diesel Eng	Read code	
C70(06-)	2009	D5244T4	Diesel Eng	Clear code	
C70(06-)	2009	D5244T4	Diesel Eng	Data stream	
C70(06-)	2009	D5244T4	Diesel Eng	Actuation	
C70(06-)	2009	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)	2009	D5244T4	Diesel Eng	Special functions	Resetting counter oil
C70(06-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)	2009	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)	2009	D5244T4	Diesel Eng	Special functions	Combustion of soot particles

model	year	type	system	function	subfunction
C70(06-)	2009	D5244T5	Diesel Eng	Sys. Info.	
C70(06-)	2009	D5244T5	Diesel Eng	Read code	
C70(06-)	2009	D5244T5	Diesel Eng	Clear code	
C70(06-)	2009	D5244T5	Diesel Eng	Data stream	
C70(06-)	2009	D5244T5	Diesel Eng	Actuation	
C70(06-)	2009	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)	2009	D5244T5	Diesel Eng	Special functions	Resetting counter oil
C70(06-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)	2009	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)	2009	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2009	D5244T8	Diesel Eng	Sys. Info.	
C70(06-)	2009	D5244T8	Diesel Eng	Read code	
C70(06-)	2009	D5244T8	Diesel Eng	Clear code	
C70(06-)	2009	D5244T8	Diesel Eng	Data stream	
C70(06-)	2009	D5244T8	Diesel Eng	Actuation	
C70(06-)	2009	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)	2009	D5244T8	Diesel Eng	Special functions	Resetting counter oil
C70(06-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)	2009	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)	2009	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2009	D4164T	Diesel Eng	Sys. Info.	
C70(06-)	2009	D4164T	Diesel Eng	Read code	
C70(06-)	2009	D4164T	Diesel Eng	Clear code	
C70(06-)	2009	D4164T	Diesel Eng	Data stream	
C70(06-)	2009	D4164T	Diesel Eng	Actuation	
C70(06-)	2009	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
C70(06-)	2009	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C70(06-)	2009	D4164T	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2009	D4204T	Diesel Eng	Sys. Info.	
C70(06-)	2009	D4204T	Diesel Eng	Read code	
C70(06-)	2009	D4204T	Diesel Eng	Clear code	
C70(06-)	2009	D4204T	Diesel Eng	Data stream	
C70(06-)	2009	D4204T	Diesel Eng	Actuation	
C70(06-)	2009	D4204T	Diesel Eng	Freeze frame	
C70(06-)	2009	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C70(06-)	2009	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
C70(06-)	2009	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
C70(06-)	2009	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C70(06-)	2009	D4204T	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2009	AW55-50/51SN	TCM	Sys. Info.	
C70(06-)	2009	AW55-50/51SN	TCM	Read code	
C70(06-)	2009	AW55-50/51SN	TCM	Clear code	
C70(06-)	2009	AW55-50/51SN	TCM	Data stream	
C70(06-)	2009	AW55-50/51SN	TCM	Actuation	
C70(06-)	2009	AW55-50/51SN	TCM	Freeze frame	
C70(06-)	2009	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70(06-)	2009	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2009	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
C70(06-)	2009	4T65AWD	TCM	Special functions	Reset adaptation to zero
C70(06-)	2009	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2009	TF-80SC	TCM	Sys. Info.	
C70(06-)	2009	TF-80SC	TCM	Read code	
C70(06-)	2009	TF-80SC	TCM	Clear code	
C70(06-)	2009	TF-80SC	TCM	Data stream	
C70(06-)	2009	TF-80SC	TCM	Actuation	
C70(06-)	2009	TF-80SC	TCM	Special functions	Reset adaptation to zero
C70(06-)	2009	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2009	TF-80SC	TCM	Special functions	Calibration of position sensor
C70(06-)	2009	AW50/51AWD	TCM	Sys. Info.	

model	year	type	system	function	subfunction
C70(06-)	2009	AW50/51AW D	TCM	Read code	
C70(06-)	2009	AW50/51AW D	TCM	Clear code	
C70(06-)	2009	AW50/51AW D	TCM	Data stream	
C70(06-)	2009	AW50/51AW D	TCM	Actuation	
C70(06-)	2009	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
C70(06-)	2009	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2009	AW50/51AW D	ABS	Sys. Info.	
C70(06-)	2009	AW50/51AW D	ABS	Read code	
C70(06-)	2009	AW50/51AW D	ABS	Clear code	
C70(06-)	2009	AW50/51AW D	ABS	Data stream	
C70(06-)	2009	AW50/51AW D	ABS	Actuation	
C70(06-)	2009	AW50/51AW D	ABS	Freeze frame	
C70(06-)	2009	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
C70(06-)	2009	AW50/51AW D	ABS	Special functions	Reading off the configuration
C70(06-)	2009	AW50/51AW D	ABS	Special functions	Calibration
C70(06-)	2009	AW50/51AW D	SRS	Sys. Info.	
C70(06-)	2009	AW50/51AW D	SRS	Read code	
C70(06-)	2009	AW50/51AW D	SRS	Clear code	
C70(06-)	2009	AW50/51AW D	SRS	Data stream	
C70(06-)	2009	AW50/51AW D	SRS	Freeze frame	
C70(06-)	2009	AW50/51AW D	CEM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	CEM	Read code	
C70(06-)	2009	AW50/51AW D	CEM	Clear code	
C70(06-)	2009	AW50/51AW D	CEM	Data stream	
C70(06-)	2009	AW50/51AW D	CEM	Actuation	
C70(06-)	2009	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
C70(06-)	2009	AW50/51AW D	CEM	Special functions	Programming control module
C70(06-)	2009	AW50/51AW D	CEM	Special functions	Resetting the factory settings
C70(06-)	2009	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
C70(06-)	2009	AW50/51AW D	CEM	Special functions	Resetting crash mode
C70(06-)	2009	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
C70(06-)	2009	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
C70(06-)	2009	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
C70(06-)	2009	AW50/51AW D	CEM	Special functions	Ignition switch key position
C70(06-)	2009	AW50/51AW D	CCM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	CCM	Read code	
C70(06-)	2009	AW50/51AW D	CCM	Clear code	
C70(06-)	2009	AW50/51AW D	CCM	Data stream	
C70(06-)	2009	AW50/51AW D	CCM	Special functions	Self-adjustment of adamper motor end stops(*)

model	year	type	system	function	subfunction
C70(06-)	2009	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
C70(06-)	2009	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
C70(06-)	2009	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
C70(06-)	2009	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
C70(06-)	2009	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
C70(06-)	2009	AW50/51AW D	CCM	Special functions	Programming the seat temperature
C70(06-)	2009	AW50/51AW D	DDM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	DDM	Read code	
C70(06-)	2009	AW50/51AW D	DDM	Clear code	
C70(06-)	2009	AW50/51AW D	DDM	Data stream	
C70(06-)	2009	AW50/51AW D	DDM	Actuation	
C70(06-)	2009	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C70(06-)	2009	AW50/51AW D	DIM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	DIM	Read code	
C70(06-)	2009	AW50/51AW D	DIM	Clear code	
C70(06-)	2009	AW50/51AW D	DIM	Data stream	
C70(06-)	2009	AW50/51AW D	DIM	Actuation	
C70(06-)	2009	AW50/51AW D	DIM	Freeze frame	
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Resetting the service reminder indicator(SRI) (*)
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Programming of clock (*)
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Programming parking brake warning
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Programming instrument lighting
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Display of DSTC message
C70(06-)	2009	AW50/51AW D	DIM	Special functions	Read out programmed values
C70(06-)	2009	AW50/51AW D	PDM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	PDM	Read code	
C70(06-)	2009	AW50/51AW D	PDM	Clear code	
C70(06-)	2009	AW50/51AW D	PDM	Data stream	
C70(06-)	2009	AW50/51AW D	PDM	Actuation	
C70(06-)	2009	AW50/51AW D	PDM	Special functions	Initialize the window(*)

model	year	type	system	function	subfunction
C70(06-)	2009	AW50/51AW D	DDM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	DDM	Read code	
C70(06-)	2009	AW50/51AW D	DDM	Clear code	
C70(06-)	2009	AW50/51AW D	DDM	Data stream	
C70(06-)	2009	AW50/51AW D	DDM	Actuation	
C70(06-)	2009	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C70(06-)	2009	AW50/51AW D	SWM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	SWM	Read code	
C70(06-)	2009	AW50/51AW D	SWM	Clear code	
C70(06-)	2009	AW50/51AW D	SWM	Data stream	
C70(06-)	2009	AW50/51AW D	PSM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	PSM	Read code	
C70(06-)	2009	AW50/51AW D	PSM	Clear code	
C70(06-)	2009	AW50/51AW D	PSM	Data stream	
C70(06-)	2009	AW50/51AW D	PSM	Actuation	
C70(06-)	2009	AW50/51AW D	PSL	Sys. Info.	
C70(06-)	2009	AW50/51AW D	PSL	Read code	
C70(06-)	2009	AW50/51AW D	PSL	Clear code	
C70(06-)	2009	AW50/51AW D	PSL	Data stream	
C70(06-)	2009	AW50/51AW D	PSR	Sys. Info.	
C70(06-)	2009	AW50/51AW D	PSR	Read code	
C70(06-)	2009	AW50/51AW D	PSR	Clear code	
C70(06-)	2009	AW50/51AW D	PSR	Data stream	
C70(06-)	2009	AW50/51AW D	PHM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	PHM	Read code	
C70(06-)	2009	AW50/51AW D	PHM	Clear code	
C70(06-)	2009	AW50/51AW D	PHM	Data stream	
C70(06-)	2009	AW50/51AW D	PHM	Actuation	
C70(06-)	2009	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
C70(06-)	2009	AW50/51AW D	AUD	Sys. Info.	
C70(06-)	2009	AW50/51AW D	AUD	Read code	
C70(06-)	2009	AW50/51AW D	AUD	Clear code	
C70(06-)	2009	AW50/51AW D	DEM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	DEM	Read code	
C70(06-)	2009	AW50/51AW D	DEM	Clear code	
C70(06-)	2009	AW50/51AW D	DEM	Data stream	
C70(06-)	2009	AW50/51AW D	ICM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	ICM	Read code	
C70(06-)	2009	AW50/51AW D	ICM	Clear code	

model	year	type	system	function	subfunction
C70(06-)	2009	AW50/51AW D	ICM	Data stream	
C70(06-)	2009	AW50/51AW D	ICM	Actuation	
C70(06-)	2009	AW50/51AW D	MMM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	MMM	Read code	
C70(06-)	2009	AW50/51AW D	MMM	Clear code	
C70(06-)	2009	AW50/51AW D	MMM	Data stream	
C70(06-)	2009	AW50/51AW D	AEM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	AEM	Read code	
C70(06-)	2009	AW50/51AW D	AEM	Clear code	
C70(06-)	2009	AW50/51AW D	AEM	Data stream	
C70(06-)	2009	AW50/51AW D	AEM	Actuation	
C70(06-)	2009	AW50/51AW D	ADM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	ADM	Read code	
C70(06-)	2009	AW50/51AW D	ADM	Clear code	
C70(06-)	2009	AW50/51AW D	ADM	Data stream	
C70(06-)	2009	AW50/51AW D	EPS	Sys. Info.	
C70(06-)	2009	AW50/51AW D	EPS	Read code	
C70(06-)	2009	AW50/51AW D	EPS	Clear code	
C70(06-)	2009	AW50/51AW D	EPS	Data stream	
C70(06-)	2009	AW50/51AW D	PAM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	PAM	Read code	
C70(06-)	2009	AW50/51AW D	PAM	Clear code	
C70(06-)	2009	AW50/51AW D	PAM	Data stream	
C70(06-)	2009	AW50/51AW D	IAM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	IAM	Read code	
C70(06-)	2009	AW50/51AW D	IAM	Clear code	
C70(06-)	2009	AW50/51AW D	IAM	Data stream	
C70(06-)	2009	AW50/51AW D	IAM	Actuation	
C70(06-)	2009	AW50/51AW D	AFM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	AFM	Read code	
C70(06-)	2009	AW50/51AW D	AFM	Clear code	
C70(06-)	2009	AW50/51AW D	AFM	Data stream	
C70(06-)	2009	AW50/51AW D	AFM	Actuation	
C70(06-)	2009	AW50/51AW D	MPM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	MPM	Read code	
C70(06-)	2009	AW50/51AW D	MPM	Clear code	
C70(06-)	2009	AW50/51AW D	MPM	Data stream	
C70(06-)	2009	AW50/51AW D	MPM	Actuation	
C70(06-)	2009	AW50/51AW D	CPM	Sys. Info.	

model	year	type	system	function	subfunction
C70(06-)	2009	AW50/51AW D	CPM	Read code	
C70(06-)	2009	AW50/51AW D	CPM	Clear code	
C70(06-)	2009	AW50/51AW D	CPM	Data stream	
C70(06-)	2009	AW50/51AW D	CPM	Actuation	
C70(06-)	2009	AW50/51AW D	CRM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	CRM	Read code	
C70(06-)	2009	AW50/51AW D	CRM	Clear code	
C70(06-)	2009	AW50/51AW D	CRM	Data stream	
C70(06-)	2009	AW50/51AW D	GPS	Sys. Info.	
C70(06-)	2009	AW50/51AW D	GPS	Read code	
C70(06-)	2009	AW50/51AW D	GPS	Clear code	
C70(06-)	2009	AW50/51AW D	GPS	Data stream	
C70(06-)	2009	AW50/51AW D	SUB	Sys. Info.	
C70(06-)	2009	AW50/51AW D	SUB	Read code	
C70(06-)	2009	AW50/51AW D	SUB	Clear code	
C70(06-)	2009	AW50/51AW D	TMC	Sys. Info.	
C70(06-)	2009	AW50/51AW D	TMC	Read code	
C70(06-)	2009	AW50/51AW D	TMC	Clear code	
C70(06-)	2009	AW50/51AW D	TMC	Data stream	
C70(06-)	2009	AW50/51AW D	HCM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	HCM	Read code	
C70(06-)	2009	AW50/51AW D	HCM	Clear code	
C70(06-)	2009	AW50/51AW D	HCM	Special functions	Calibration of position sensor
C70(06-)	2009	AW50/51AW D	KVM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	KVM	Read code	
C70(06-)	2009	AW50/51AW D	KVM	Clear code	
C70(06-)	2009	AW50/51AW D	KVM	Data stream	
C70(06-)	2009	AW50/51AW D	KVM	Actuation	
C70(06-)	2009	AW50/51AW D	RDAR	Sys. Info.	
C70(06-)	2009	AW50/51AW D	RDAR	Read code	
C70(06-)	2009	AW50/51AW D	RDAR	Clear code	
C70(06-)	2009	AW50/51AW D	RDAR	Data stream	
C70(06-)	2009	AW50/51AW D	SUB	Sys. Info.	
C70(06-)	2009	AW50/51AW D	SUB	Read code	
C70(06-)	2009	AW50/51AW D	SUB	Clear code	
C70(06-)	2009	AW50/51AW D	SUB	Data stream	
C70(06-)	2009	AW50/51AW D	CVM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	CVM	Read code	
C70(06-)	2009	AW50/51AW D	CVM	Clear code	



model	year	type	system	function	subfunction
C70(06-)	2009	AW50/51AW D	CVM	Data stream	
C70(06-)	2009	AW50/51AW D	DABM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	DABM	Read code	
C70(06-)	2009	AW50/51AW D	DABM	Clear code	
C70(06-)	2009	AW50/51AW D	DABM	Data stream	
C70(06-)	2009	AW50/51AW D	PAC	Sys. Info.	
C70(06-)	2009	AW50/51AW D	PAC	Read code	
C70(06-)	2009	AW50/51AW D	PAC	Clear code	
C70(06-)	2009	AW50/51AW D	PAC	Data stream	
C70(06-)	2009	AW50/51AW D	TRM	Sys. Info.	
C70(06-)	2009	AW50/51AW D	TRM	Read code	
C70(06-)	2009	AW50/51AW D	TRM	Clear code	
C70(06-)	2009	AW50/51AW D	TRM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
C70(06-)	2010 - 2012	B5244S4	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B5244S4	ECM	Read code	
C70(06-)	2010 - 2012	B5244S4	ECM	Clear code	
C70(06-)	2010 - 2012	B5244S4	ECM	Data stream	
C70(06-)	2010 - 2012	B5244S4	ECM	Actuation	
C70(06-)	2010 - 2012	B5244S4	ECM	Freeze frame	
C70(06-)	2010 - 2012	B5244S4	ECM	Special functions	Resetting the adaptation values
C70(06-)	2010 - 2012	B5244S5	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B5244S5	ECM	Read code	
C70(06-)	2010 - 2012	B5244S5	ECM	Clear code	
C70(06-)	2010 - 2012	B5244S5	ECM	Data stream	
C70(06-)	2010 - 2012	B5244S5	ECM	Actuation	
C70(06-)	2010 - 2012	B5244S5	ECM	Freeze frame	
C70(06-)	2010 - 2012	B5244S5	ECM	Special functions	Resetting the adaptation values
C70(06-)	2010 - 2012	B5244S7	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B5244S7	ECM	Read code	
C70(06-)	2010 - 2012	B5244S7	ECM	Clear code	
C70(06-)	2010 - 2012	B5244S7	ECM	Data stream	
C70(06-)	2010 - 2012	B5244S7	ECM	Actuation	
C70(06-)	2010 - 2012	B4204S3	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B4204S3	ECM	Read code	
C70(06-)	2010 - 2012	B4204S3	ECM	Clear code	
C70(06-)	2010 - 2012	B4204S3	ECM	Data stream	
C70(06-)	2010 - 2012	B4204S3	ECM	Actuation	
C70(06-)	2010 - 2012	B5254T2	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B5254T2	ECM	Read code	
C70(06-)	2010 - 2012	B5254T2	ECM	Clear code	
C70(06-)	2010 - 2012	B5254T2	ECM	Data stream	
C70(06-)	2010 - 2012	B5254T2	ECM	Actuation	
C70(06-)	2010 - 2012	B5254T2	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2010 - 2012	B5254T3	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B5254T3	ECM	Read code	
C70(06-)	2010 - 2012	B5254T3	ECM	Clear code	
C70(06-)	2010 - 2012	B5254T3	ECM	Data stream	
C70(06-)	2010 - 2012	B5254T3	ECM	Actuation	
C70(06-)	2010 - 2012	B5254T3	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2010 - 2012	B5254T7	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B5254T7	ECM	Read code	
C70(06-)	2010 - 2012	B5254T7	ECM	Clear code	
C70(06-)	2010 - 2012	B5254T7	ECM	Data stream	
C70(06-)	2010 - 2012	B5254T7	ECM	Actuation	
C70(06-)	2010 - 2012	B5254T7	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2010 - 2012	B5204T5	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B5204T5	ECM	Read code	
C70(06-)	2010 - 2012	B5204T5	ECM	Clear code	
C70(06-)	2010 - 2012	B5204T5	ECM	Data stream	
C70(06-)	2010 - 2012	B5204T5	ECM	Actuation	
C70(06-)	2010 - 2012	B5204T5	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2010 - 2012	B6294T	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B6294T	ECM	Read code	

model	year	type	system	function	subfunction
C70(06-)	2010 - 2012	B6294T	ECM	Clear code	
C70(06-)	2010 - 2012	B6294T	ECM	Data stream	
C70(06-)	2010 - 2012	B6294T	ECM	Actuation	
C70(06-)	2010 - 2012	B6294T	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2010 - 2012	B4164S3	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B4164S3	ECM	Read code	
C70(06-)	2010 - 2012	B4164S3	ECM	Clear code	
C70(06-)	2010 - 2012	B4164S3	ECM	Data stream	
C70(06-)	2010 - 2012	B4164S3	ECM	Actuation	
C70(06-)	2010 - 2012	B4164S3	ECM	Special functions	Resetting the adaptation values
C70(06-)	2010 - 2012	B5244T5	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B5244T5	ECM	Read code	
C70(06-)	2010 - 2012	B5244T5	ECM	Clear code	
C70(06-)	2010 - 2012	B5244T5	ECM	Data stream	
C70(06-)	2010 - 2012	B5244T5	ECM	Actuation	
C70(06-)	2010 - 2012	B5244T5	ECM	Special functions	Adaptation of the throttle unit(*)
C70(06-)	2010 - 2012	B4184S11	ECM	Sys. Info.	
C70(06-)	2010 - 2012	B4184S11	ECM	Read code	
C70(06-)	2010 - 2012	B4184S11	ECM	Clear code	
C70(06-)	2010 - 2012	B4184S11	ECM	Data stream	
C70(06-)	2010 - 2012	B4184S11	ECM	Actuation	
C70(06-)	2010 - 2012	B4184S11	ECM	Special functions	Resetting the adaptation values
C70(06-)	2010 - 2012	D5244T	Diesel Eng	Sys. Info.	
C70(06-)	2010 - 2012	D5244T	Diesel Eng	Read code	
C70(06-)	2010 - 2012	D5244T	Diesel Eng	Clear code	
C70(06-)	2010 - 2012	D5244T	Diesel Eng	Data stream	
C70(06-)	2010 - 2012	D5244T	Diesel Eng	Actuation	
C70(06-)	2010 - 2012	D5244T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Sys. Info.	
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Read code	
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Clear code	
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Data stream	
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Actuation	
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Resetting counter oil
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)	2010 - 2012	D5244T4	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Sys. Info.	
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Read code	
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Clear code	
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Data stream	
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Actuation	
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter oil
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)	2010 - 2012	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Sys. Info.	
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Read code	
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Clear code	
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Data stream	
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Actuation	
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Resetting counter particle filter
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Resetting counter oil
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of swivel channel throttle
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of mass airflow sensor
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of turbo control motor
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
C70(06-)	2010 - 2012	D5244T8	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2010 - 2012	D4164T	Diesel Eng	Sys. Info.	
C70(06-)	2010 - 2012	D4164T	Diesel Eng	Read code	
C70(06-)	2010 - 2012	D4164T	Diesel Eng	Clear code	
C70(06-)	2010 - 2012	D4164T	Diesel Eng	Data stream	
C70(06-)	2010 - 2012	D4164T	Diesel Eng	Actuation	
C70(06-)	2010 - 2012	D4164T	Diesel Eng	Special functions	Resetting the odometer particle trap
C70(06-)	2010 - 2012	D4164T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C70(06-)	2010 - 2012	D4164T	Diesel Eng	Special functions	Combustion of soot particles

model	year	type	system	function	subfunction
C70(06-)	2010 - 2012	D4204T	Diesel Eng	Sys. Info.	
C70(06-)	2010 - 2012	D4204T	Diesel Eng	Read code	
C70(06-)	2010 - 2012	D4204T	Diesel Eng	Clear code	
C70(06-)	2010 - 2012	D4204T	Diesel Eng	Data stream	
C70(06-)	2010 - 2012	D4204T	Diesel Eng	Actuation	
C70(06-)	2010 - 2012	D4204T	Diesel Eng	Freeze frame	
C70(06-)	2010 - 2012	D4204T	Diesel Eng	Special functions	Programming the optimizing parameters(*)
C70(06-)	2010 - 2012	D4204T	Diesel Eng	Special functions	Resetting the adaptation values
C70(06-)	2010 - 2012	D4204T	Diesel Eng	Special functions	Resetting the odometer particle trap
C70(06-)	2010 - 2012	D4204T	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
C70(06-)	2010 - 2012	D4204T	Diesel Eng	Special functions	Combustion of soot particles
C70(06-)	2010 - 2012	AW55-50/51SN	TCM	Sys. Info.	
C70(06-)	2010 - 2012	AW55-50/51SN	TCM	Read code	
C70(06-)	2010 - 2012	AW55-50/51SN	TCM	Clear code	
C70(06-)	2010 - 2012	AW55-50/51SN	TCM	Data stream	
C70(06-)	2010 - 2012	AW55-50/51SN	TCM	Actuation	
C70(06-)	2010 - 2012	AW55-50/51SN	TCM	Freeze frame	
C70(06-)	2010 - 2012	AW55-50/51SN	TCM	Special functions	Reset adaptation to zero
C70(06-)	2010 - 2012	AW55-50/51SN	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2010 - 2012	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
C70(06-)	2010 - 2012	4T65AWD	TCM	Special functions	Reset adaptation to zero
C70(06-)	2010 - 2012	4T65AWD	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2010 - 2012	TF-80SC	TCM	Sys. Info.	
C70(06-)	2010 - 2012	TF-80SC	TCM	Read code	
C70(06-)	2010 - 2012	TF-80SC	TCM	Clear code	
C70(06-)	2010 - 2012	TF-80SC	TCM	Data stream	
C70(06-)	2010 - 2012	TF-80SC	TCM	Actuation	
C70(06-)	2010 - 2012	TF-80SC	TCM	Freeze frame	
C70(06-)	2010 - 2012	TF-80SC	TCM	Special functions	Reset adaptation to zero
C70(06-)	2010 - 2012	TF-80SC	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2010 - 2012	TF-80SC	TCM	Special functions	Calibration of position sensor
C70(06-)	2010 - 2012	AW50/51AW D	TCM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	TCM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	TCM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	TCM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	TCM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	TCM	Special functions	Reset adaptation to zero
C70(06-)	2010 - 2012	AW50/51AW D	TCM	Special functions	Resetting the counter for – Gearbox oil Change(*)
C70(06-)	2010 - 2012	AW50/51AW D	ABS	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	ABS	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	ABS	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	ABS	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	ABS	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	ABS	Freeze frame	
C70(06-)	2010 - 2012	AW50/51AW D	ABS	Special functions	Checking brake light switch adjustment(*)
C70(06-)	2010 - 2012	AW50/51AW D	ABS	Special functions	Reading off the configuration
C70(06-)	2010 - 2012	AW50/51AW D	ABS	Special functions	Calibration
C70(06-)	2010 - 2012	AW50/51AW D	SRS	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	SRS	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	SRS	Clear code	

model	year	type	system	function	subfunction
C70(06-)	2010 - 2012	AW50/51AW D	SRS	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	SRS	Freeze frame	
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Calibration of position sensor, GDL lamps(*)
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming control module
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting the factory settings
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting low voltage counters
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Resetting crash mode
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming of rear window wiper when reversing
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Reading off and programming vehicle mode
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Programming of short flash sequence
C70(06-)	2010 - 2012	AW50/51AW D	CEM	Special functions	Ignition switch key position
C70(06-)	2010 - 2012	AW50/51AW D	CCM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	CCM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	CCM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	CCM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Self-adjustment of adamerper motor end stops(*)
C70(06-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Reading-out programmed parameters(*)
C70(06-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Calibrating the Climate Control Module (CCM)
C70(06-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Identifying the Damper Motor Module (DMM)
C70(06-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Programming the climate control module (CCM)
C70(06-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
C70(06-)	2010 - 2012	AW50/51AW D	CCM	Special functions	Programming the seat temperature
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Freeze frame	

model	year	type	system	function	subfunction
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Reseting the service reminder indicator(SRI) (*)
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Testing all displays and lamps in instrument (*)
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the distance covered for service (*)
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the service time parameters (*)
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the engine service time parameters (*)
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming units of measurement for temperature (*)
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of trip computer unit (*)
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of clock (*)
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming of zeros (*)
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming parking brake warning
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming instrument lighting
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Programming text message,seatbelt reminder
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Display of DSTC message
C70(06-)	2010 - 2012	AW50/51AW D	DIM	Special functions	Read out programmed values
C70(06-)	2010 - 2012	AW50/51AW D	PDM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	PDM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	PDM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	PDM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	PDM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	PDM	Special functions	Initialize the window(*)
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	DDM	Special functions	Initialize the window(*)
C70(06-)	2010 - 2012	AW50/51AW D	SWM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	SWM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	SWM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	SWM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	PSM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	PSM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	PSM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	PSM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	PSM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	PSL	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	PSL	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	PSL	Clear code	

model	year	type	system	function	subfunction
C70(06-)	2010 - 2012	AW50/51AW D	PSL	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	PSR	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	PSR	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	PSR	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	PSR	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	PHM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	PHM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	PHM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	PHM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	PHM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	PHM	Special functions	Reinstalling the reserve battery
C70(06-)	2010 - 2012	AW50/51AW D	AUD	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	AUD	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	AUD	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	DEM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	DEM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	DEM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	DEM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	ICM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	ICM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	ICM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	ICM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	ICM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	MMM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	MMM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	MMM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	MMM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	AEM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	AEM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	AEM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	AEM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	AEM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	ADM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	ADM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	ADM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	ADM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	EPS	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	EPS	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	EPS	Clear code	

model	year	type	system	function	subfunction
C70(06-)	2010 - 2012	AW50/51AW D	EPS	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	PAM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	PAM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	PAM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	PAM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	IAM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	IAM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	IAM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	IAM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	IAM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	AFM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	AFM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	AFM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	AFM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	AFM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	MPM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	MPM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	MPM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	MPM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	MPM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	CPM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	CPM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	CPM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	CPM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	CPM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	CRM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	CRM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	CRM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	CRM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	GPS	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	GPS	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	GPS	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	GPS	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	SUB	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	SUB	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	SUB	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	TMC	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	TMC	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	TMC	Clear code	

model	year	type	system	function	subfunction
C70(06-)	2010 - 2012	AW50/51AW D	TMC	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	HCM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	HCM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	HCM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	HCM	Special functions	Calibration of position sensor
C70(06-)	2010 - 2012	AW50/51AW D	KVM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	KVM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	KVM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	KVM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	KVM	Actuation	
C70(06-)	2010 - 2012	AW50/51AW D	RDAR	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	RDAR	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	RDAR	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	RDAR	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	SUB	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	SUB	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	SUB	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	SUB	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	CVM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	CVM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	CVM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	CVM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	DABM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	DABM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	DABM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	DABM	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	PAC	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	PAC	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	PAC	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	PAC	Data stream	
C70(06-)	2010 - 2012	AW50/51AW D	TRM	Sys. Info.	
C70(06-)	2010 - 2012	AW50/51AW D	TRM	Read code	
C70(06-)	2010 - 2012	AW50/51AW D	TRM	Clear code	
C70(06-)	2010 - 2012	AW50/51AW D	TRM	Data stream	
C70(06-)	2013	B5254T7	ECM	Sys. Info.	
C70(06-)	2013	B5254T7	ECM	Read code	
C70(06-)	2013	B5254T7	ECM	Clear code	
C70(06-)	2013	B5254T7	ECM	Data stream	
C70(06-)	2013	B5254T7	ECM	Actuation	
C70(06-)	2013	B5254T7	ECM	Special functions	Adaptation of the throttle unit
C70(06-)	2013	B5254T7	ECM	Special functions	Test/movement of camshaft control,intake
C70(06-)	2013	B5254T7	ECM	Special functions	Test/movement of camshaft control,exhaust
C70(06-)	2013	B5254T7	ECM	Special functions	Quick test of the fuel pump(FP)
C70(06-)	2013	D5204T	Diesel Eng	Sys. Info.	



model	year	type	system	function	subfunction
C70(06-)	2013	D5204T	Diesel Eng	Read code	
C70(06-)	2013	D5204T	Diesel Eng	Clear code	
C70(06-)	2013	D5204T	Diesel Eng	Data stream	
C70(06-)	2013	D5204T	Diesel Eng	Actuation	
C70(06-)	2013	D5204T	Diesel Eng	Freeze frame	
C70(06-)	2013	D5204T	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)	2013	D5204T	Diesel Eng	Special functions	Checking injectors
C70(06-)	2013	D5204T	Diesel Eng	Special functions	Checking the oil level
C70(06-)	2013	D5204T5	Diesel Eng	Sys. Info.	
C70(06-)	2013	D5204T5	Diesel Eng	Read code	
C70(06-)	2013	D5204T5	Diesel Eng	Clear code	
C70(06-)	2013	D5204T5	Diesel Eng	Data stream	
C70(06-)	2013	D5204T5	Diesel Eng	Actuation	
C70(06-)	2013	D5204T5	Diesel Eng	Freeze frame	
C70(06-)	2013	D5204T5	Diesel Eng	Special functions	Adaptation of throttle module
C70(06-)	2013	D5204T5	Diesel Eng	Special functions	Checking injectors
C70(06-)	2013	D5204T5	Diesel Eng	Special functions	Checking the oil level
C70(06-)	2013	TF-80SC	TCM	Sys. Info.	
C70(06-)	2013	TF-80SC	TCM	Read code	
C70(06-)	2013	TF-80SC	TCM	Clear code	
C70(06-)	2013	TF-80SC	TCM	Data stream	
C70(06-)	2013	TF-80SC	TCM	Actuation	
C70(06-)	2013	TF-80SC	TCM	Freeze frame	
C70(06-)	2013	TF-80SC	TCM	Special functions	Resetting the adaptation
C70(06-)	2013	TF-80SC	TCM	Special functions	Calibration of position sensor
C70(06-)	2013	TF-80SC	TCM	Special functions	Resetting the counter for Gearbox oil Change
C70(06-)	2013	TF-80SC	TCM	Special functions	Activating gear indication Control module adaptation
C70(06-)	2013	AW55-50/51SN	TCM	Sys. Info.	
C70(06-)	2013	AW55-50/51SN	TCM	Read code	
C70(06-)	2013	AW55-50/51SN	TCM	Clear code	
C70(06-)	2013	AW55-50/51SN	TCM	Data stream	
C70(06-)	2013	AW55-50/51SN	TCM	Actuation	
C70(06-)	2013	AW55-50/51SN	TCM	Special functions	Calibration of position sensor
C70(06-)	2013	AW55-50/51SN	TCM	Special functions	Resetting the adaptation
C70(06-)	2013	AW55-50/51SN	TCM	Special functions	Resetting the transmission fluid change counter
C70(06-)	2013	AW55-50/51SN	TCM	Special functions	Activating gear indication
C70(06-)	2013	AW55-50/51SN	TCM	Special functions	Control module adaptation
C70(06-)	2013	D5204T	ABS	Sys. Info.	
C70(06-)	2013	D5204T	ABS	Read code	
C70(06-)	2013	D5204T	ABS	Clear code	
C70(06-)	2013	D5204T	ABS	Data stream	
C70(06-)	2013	D5204T	ABS	Actuation	
C70(06-)	2013	D5204T	ABS	Freeze frame	
C70(06-)	2013	D5204T	ABS	Special functions	Calibration
C70(06-)	2013	D5204T5	ABS	Sys. Info.	
C70(06-)	2013	D5204T5	ABS	Read code	
C70(06-)	2013	D5204T5	ABS	Clear code	
C70(06-)	2013	D5204T5	ABS	Data stream	
C70(06-)	2013	D5204T5	ABS	Actuation	
C70(06-)	2013	D5204T5	ABS	Freeze frame	
C70(06-)	2013	D5204T5	ABS	Special functions	Reading off the configuration
C70(06-)	2013	D5204T5	ABS	Special functions	Calibration(car with DSTC)
C70(06-)	2013	D5204T5	ABS	Special functions	Activating components and functions
C70(06-)	2013	D5204T5	SRS	Sys. Info.	
C70(06-)	2013	D5204T5	SRS	Read code	
C70(06-)	2013	D5204T5	SRS	Clear code	
C70(06-)	2013	D5204T5	SRS	Data stream	
C70(06-)	2013	D5204T5	SRS	Actuation	
C70(06-)	2013	D5204T5	SRS	Freeze frame	
C70(06-)	2013	D5204T5	SRS	Special functions	Resetting crash mode
C70(06-)	2013	D5204T5	CEM	Sys. Info.	
C70(06-)	2013	D5204T5	CEM	Read code	
C70(06-)	2013	D5204T5	CEM	Clear code	
C70(06-)	2013	D5204T5	CEM	Data stream	
C70(06-)	2013	D5204T5	CEM	Actuation	
C70(06-)	2013	D5204T5	CEM	Special functions	Programming of rear window wiper when reversing
C70(06-)	2013	D5204T5	CEM	Special functions	Resetting low voltage counters
C70(06-)	2013	D5204T5	CEM	Special functions	Ignition switch key position

model	year	type	system	function	subfunction
C70(06-)	2013	D5204T5	CEM	Special functions	Workshop test(TPMS)
C70(06-)	2013	D5204T5	CEM	Special functions	Reading off and programming vehicle mode
C70(06-)	2013	D5204T5	CEM	Special functions	Resetting crash mode
C70(06-)	2013	D5204T5	CCM	Sys. Info.	
C70(06-)	2013	D5204T5	CCM	Read code	
C70(06-)	2013	D5204T5	CCM	Clear code	
C70(06-)	2013	D5204T5	CCM	Data stream	
C70(06-)	2013	D5204T5	CCM	Special functions	Calibrating the climate control module(CCM)
C70(06-)	2013	D5204T5	CCM	Special functions	Identifying components on the LIN network that belong to the climate control system(CCM)
C70(06-)	2013	D5204T5	CCM	Special functions	Programming the seat temperature
C70(06-)	2013	D5204T5	DDM	Sys. Info.	
C70(06-)	2013	D5204T5	DDM	Read code	
C70(06-)	2013	D5204T5	DDM	Clear code	
C70(06-)	2013	D5204T5	DDM	Data stream	
C70(06-)	2013	D5204T5	DDM	Actuation	
C70(06-)	2013	D5204T5	DDM	Special functions	Iniializing the window position
C70(06-)	2013	D5204T5	DIM	Sys. Info.	
C70(06-)	2013	D5204T5	DIM	Read code	
C70(06-)	2013	D5204T5	DIM	Clear code	
C70(06-)	2013	D5204T5	DIM	Data stream	
C70(06-)	2013	D5204T5	DIM	Actuation	
C70(06-)	2013	D5204T5	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
C70(06-)	2013	D5204T5	DIM	Special functions	Resetting the service reminder indicator (SRI)
C70(06-)	2013	D5204T5	DIM	Special functions	Indicates programmed values
C70(06-)	2013	D5204T5	DIM	Special functions	Display of DSTC message
C70(06-)	2013	D5204T5	DIM	Special functions	Programming the driver information module (DIM)
C70(06-)	2013	D5204T5	DIM	Special functions	Programming seatbelt reminder in backseat
C70(06-)	2013	D5204T5	DIM	Special functions	Programming the gear shift indicator
C70(06-)	2013	D5204T5	PDM	Sys. Info.	
C70(06-)	2013	D5204T5	PDM	Read code	
C70(06-)	2013	D5204T5	PDM	Clear code	
C70(06-)	2013	D5204T5	PDM	Data stream	
C70(06-)	2013	D5204T5	PDM	Actuation	
C70(06-)	2013	D5204T5	PDM	Special functions	Iniializing the window position
C70(06-)	2013	D5204T5	SWM	Sys. Info.	
C70(06-)	2013	D5204T5	SWM	Read code	
C70(06-)	2013	D5204T5	SWM	Clear code	
C70(06-)	2013	D5204T5	SWM	Data stream	
C70(06-)	2013	D5204T5	PSL	Sys. Info.	
C70(06-)	2013	D5204T5	PSL	Read code	
C70(06-)	2013	D5204T5	PSL	Clear code	
C70(06-)	2013	D5204T5	PSL	Data stream	
C70(06-)	2013	D5204T5	PSR	Sys. Info.	
C70(06-)	2013	D5204T5	PSR	Read code	
C70(06-)	2013	D5204T5	PSR	Clear code	
C70(06-)	2013	D5204T5	PSR	Data stream	
C70(06-)	2013	D5204T5	PSR	Actuation	
C70(06-)	2013	D5204T5	PHM	Sys. Info.	
C70(06-)	2013	D5204T5	PHM	Read code	
C70(06-)	2013	D5204T5	PHM	Clear code	
C70(06-)	2013	D5204T5	PHM	Data stream	
C70(06-)	2013	D5204T5	PHM	Special functions	Reinstalling the reserve battery
C70(06-)	2013	D5204T5	AUD	Sys. Info.	
C70(06-)	2013	D5204T5	AUD	Read code	
C70(06-)	2013	D5204T5	AUD	Clear code	
C70(06-)	2013	D5204T5	AUD	Data stream	
C70(06-)	2013	D5204T5	AUD	Actuation	
C70(06-)	2013	D5204T5	ICM	Sys. Info.	
C70(06-)	2013	D5204T5	ICM	Read code	
C70(06-)	2013	D5204T5	ICM	Clear code	
C70(06-)	2013	D5204T5	ICM	Data stream	
C70(06-)	2013	D5204T5	ICM	Special functions	Programming the infotainment control module(ICM)
C70(06-)	2013	D5204T5	MMM	Sys. Info.	
C70(06-)	2013	D5204T5	MMM	Read code	
C70(06-)	2013	D5204T5	MMM	Clear code	
C70(06-)	2013	D5204T5	AEM	Sys. Info.	
C70(06-)	2013	D5204T5	AEM	Read code	
C70(06-)	2013	D5204T5	AEM	Clear code	
C70(06-)	2013	D5204T5	AEM	Data stream	
C70(06-)	2013	D5204T5	AEM	Actuation	
C70(06-)	2013	D5204T5	EPS	Sys. Info.	
C70(06-)	2013	D5204T5	EPS	Read code	
C70(06-)	2013	D5204T5	EPS	Clear code	
C70(06-)	2013	D5204T5	EPS	Data stream	
C70(06-)	2013	D5204T5	PAM	Sys. Info.	
C70(06-)	2013	D5204T5	PAM	Read code	

model	year	type	system	function	subfunction	
C70(06-)		2013	D5204T5	PAM	Clear code	
C70(06-)		2013	D5204T5	PAM	Data stream	
C70(06-)		2013	D5204T5	PAM	Actuation	
C70(06-)		2013	D5204T5	IAM	Sys. Info.	
C70(06-)		2013	D5204T5	IAM	Read code	
C70(06-)		2013	D5204T5	IAM	Clear code	
C70(06-)		2013	D5204T5	IAM	Data stream	
C70(06-)		2013	D5204T5	IAM	Actuation	
C70(06-)		2013	D5204T5	CRM	Sys. Info.	
C70(06-)		2013	D5204T5	CRM	Read code	
C70(06-)		2013	D5204T5	CRM	Clear code	
C70(06-)		2013	D5204T5	CRM	Data stream	
C70(06-)		2013	D5204T5	SUB	Sys. Info.	
C70(06-)		2013	D5204T5	SUB	Read code	
C70(06-)		2013	D5204T5	SUB	Clear code	
C70(06-)		2013	D5204T5	HCM	Sys. Info.	
C70(06-)		2013	D5204T5	HCM	Read code	
C70(06-)		2013	D5204T5	HCM	Clear code	
C70(06-)		2013	D5204T5	HCM	Data stream	
C70(06-)		2013	D5204T5	HCM	Special functions	Calibration of position sensor
C70(06-)		2013	D5204T5	KVM	Sys. Info.	
C70(06-)		2013	D5204T5	KVM	Read code	
C70(06-)		2013	D5204T5	KVM	Clear code	
C70(06-)		2013	D5204T5	KVM	Data stream	
C70(06-)		2013	D5204T5	KVM	Actuation	
C70(06-)		2013	D5204T5	KVM	Special functions	Read out of the number of programmed remote keys
C70(06-)		2013	D5204T5	KVM	Special functions	Read-out part number and serial number,Remote keyless Entry(RKE)
C70(06-)		2013	D5204T5	KVM	Special functions	Programmed values,Keyless setting
C70(06-)		2013	D5204T5	RDAR	Sys. Info.	
C70(06-)		2013	D5204T5	RDAR	Read code	
C70(06-)		2013	D5204T5	RDAR	Clear code	
C70(06-)		2013	D5204T5	RDAR	Data stream	
C70(06-)		2013	D5204T5	TRM	Sys. Info.	
C70(06-)		2013	D5204T5	TRM	Read code	
C70(06-)		2013	D5204T5	TRM	Clear code	
C70(06-)		2013	D5204T5	TRM	Data stream	
C70(06-)		2013	D5204T5	AUU	Sys. Info.	
C70(06-)		2013	D5204T5	AUU	Read code	
C70(06-)		2013	D5204T5	AUU	Clear code	
C70(06-)		2013	D5204T5	AUU	Data stream	
C70(06-)		2013	D5204T5	BPM	Sys. Info.	
C70(06-)		2013	D5204T5	BPM	Read code	
C70(06-)		2013	D5204T5	BPM	Clear code	
C70(06-)		2013	D5204T5	BPM	Data stream	
C70(06-)		2013	D5204T5	SAS	Sys. Info.	
C70(06-)		2013	D5204T5	SAS	Read code	
C70(06-)		2013	D5204T5	SAS	Clear code	
C70(06-)		2013	D5204T5	SAS	Data stream	
XC60		2013	D5204T5	ShortTest	Special functions	search all system and DTC(s) of vehicle
XC60		2009	D5204T5	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC60		2009	B5254T6	ECM	Sys. Info.	
XC60		2009	B5254T6	ECM	Read code	
XC60		2009	B5254T6	ECM	Clear code	
XC60		2009	B5254T6	ECM	Data stream	
XC60		2009	B5254T6	ECM	Actuation	
XC60		2009	B5254T6	ECM	Special functions	Adaptation of the throttle unit
XC60		2009	B5254T10	ECM	Sys. Info.	
XC60		2009	B5254T10	ECM	Read code	
XC60		2009	B5254T10	ECM	Clear code	
XC60		2009	B5254T10	ECM	Data stream	
XC60		2009	B5254T10	ECM	Actuation	
XC60		2009	B5254T10	ECM	Special functions	Adaptation of the throttle unit
XC60		2009	B8444S	ECM	Sys. Info.	
XC60		2009	B8444S	ECM	Read code	
XC60		2009	B8444S	ECM	Clear code	
XC60		2009	B8444S	ECM	Data stream	
XC60		2009	B8444S	ECM	Actuation	
XC60		2009	B8444S	ECM	Special functions	Resetting the adaptation values
XC60		2009	B6304T2	ECM	Sys. Info.	
XC60		2009	B6304T2	ECM	Read code	
XC60		2009	B6304T2	ECM	Clear code	
XC60		2009	B6304T2	ECM	Data stream	
XC60		2009	B6304T2	ECM	Actuation	
XC60		2009	B6304T2	ECM	Special functions	Resetting the adaptation values
XC60		2009	B6324S	ECM	Sys. Info.	
XC60		2009	B6324S	ECM	Read code	

model	year	type	system	function	subfunction	
XC60		2009	B6324S	ECM	Clear code	
XC60		2009	B6324S	ECM	Data stream	
XC60		2009	B6324S	ECM	Actuation	
XC60		2009	B6324S	ECM	Special functions	Resetting the adaptation values
XC60		2009	B6324S2	ECM	Sys. Info.	
XC60		2009	B6324S2	ECM	Read code	
XC60		2009	B6324S2	ECM	Clear code	
XC60		2009	B6324S2	ECM	Data stream	
XC60		2009	B6324S2	ECM	Actuation	
XC60		2009	B6324S2	ECM	Special functions	Resetting the adaptation values
XC60		2009	D5244T5	Diesel Eng	Sys. Info.	
XC60		2009	D5244T5	Diesel Eng	Read code	
XC60		2009	D5244T5	Diesel Eng	Clear code	
XC60		2009	D5244T5	Diesel Eng	Data stream	
XC60		2009	D5244T5	Diesel Eng	Actuation	
XC60		2009	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
XC60		2009	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC60		2009	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
XC60		2009	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC60		2009	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC60		2009	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
XC60		2009	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC60		2009	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
XC60		2009	D5244T16	Diesel Eng	Sys. Info.	
XC60		2009	D5244T16	Diesel Eng	Read code	
XC60		2009	D5244T16	Diesel Eng	Clear code	
XC60		2009	D5244T16	Diesel Eng	Data stream	
XC60		2009	D5244T16	Diesel Eng	Actuation	
XC60		2009	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
XC60		2009	D5244T16	Diesel Eng	Special functions	Resetting adaptation
XC60		2009	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
XC60		2009	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60		2009	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
XC60		2009	TF-80SC	TCM	Sys. Info.	
XC60		2009	TF-80SC	TCM	Read code	
XC60		2009	TF-80SC	TCM	Clear code	
XC60		2009	TF-80SC	TCM	Data stream	
XC60		2009	TF-80SC	TCM	Actuation	
XC60		2009	TF-80SC	TCM	Special functions	Resetting the adaptation
XC60		2009	TF-80SC	TCM	Special functions	Calibration of position sensor
XC60		2009	TF-80SC AWD	TCM	Sys. Info.	
XC60		2009	TF-80SC AWD	TCM	Read code	
XC60		2009	TF-80SC AWD	TCM	Clear code	
XC60		2009	TF-80SC AWD	TCM	Data stream	
XC60		2009	TF-80SC AWD	TCM	Actuation	
XC60		2009	TF-80SC AWD	TCM	Freeze frame	
XC60		2009	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
XC60		2009	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
XC60		2009	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
XC60		2009	TF-80SC AWD	ABS	Sys. Info.	
XC60		2009	TF-80SC AWD	ABS	Read code	
XC60		2009	TF-80SC AWD	ABS	Clear code	
XC60		2009	TF-80SC AWD	ABS	Data stream	
XC60		2009	TF-80SC AWD	ABS	Actuation	
XC60		2009	TF-80SC AWD	ABS	Freeze frame	
XC60		2009	TF-80SC AWD	ABS	Special functions	Calibration
XC60		2009	TF-80SC AWD	SRS	Sys. Info.	
XC60		2009	TF-80SC AWD	SRS	Read code	
XC60		2009	TF-80SC AWD	SRS	Clear code	
XC60		2009	TF-80SC AWD	SRS	Data stream	
XC60		2009	TF-80SC AWD	SRS	Freeze frame	
XC60		2009	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
XC60		2009	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
XC60		2009	TF-80SC AWD	CEM	Sys. Info.	
XC60		2009	TF-80SC AWD	CEM	Read code	
XC60		2009	TF-80SC AWD	CEM	Clear code	
XC60		2009	TF-80SC AWD	CEM	Data stream	
XC60		2009	TF-80SC AWD	CEM	Actuation	
XC60		2009	TF-80SC AWD	DIM	Sys. Info.	
XC60		2009	TF-80SC AWD	DIM	Read code	
XC60		2009	TF-80SC AWD	DIM	Clear code	
XC60		2009	TF-80SC AWD	DIM	Data stream	
XC60		2009	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI)
XC60		2009	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
XC60		2009	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
XC60		2009	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
XC60		2009	TF-80SC AWD	DIM	Special functions	Programming of clock

model	year	type	system	function	subfunction
XC60	2009	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal, seat belt reminder
XC60	2009	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
XC60	2009	TF-80SC AWD	DIM	Special functions	Programming text message, seatbelt reminder
XC60	2009	TF-80SC AWD	PDM	Sys. Info.	
XC60	2009	TF-80SC AWD	PDM	Read code	
XC60	2009	TF-80SC AWD	PDM	Clear code	
XC60	2009	TF-80SC AWD	PDM	Data stream	
XC60	2009	TF-80SC AWD	PDM	Actuation	
XC60	2009	TF-80SC AWD	PSM	Sys. Info.	
XC60	2009	TF-80SC AWD	PSM	Read code	
XC60	2009	TF-80SC AWD	PSM	Clear code	
XC60	2009	TF-80SC AWD	PSM	Data stream	
XC60	2009	TF-80SC AWD	PSM	Actuation	
XC60	2009	TF-80SC AWD	DDM	Sys. Info.	
XC60	2009	TF-80SC AWD	DDM	Read code	
XC60	2009	TF-80SC AWD	DDM	Clear code	
XC60	2009	TF-80SC AWD	DDM	Data stream	
XC60	2009	TF-80SC AWD	CCM	Sys. Info.	
XC60	2009	TF-80SC AWD	CCM	Read code	
XC60	2009	TF-80SC AWD	CCM	Clear code	
XC60	2009	TF-80SC AWD	CCM	Data stream	
XC60	2009	TF-80SC AWD	CCM	Actuation	
XC60	2009	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
XC60	2009	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC60	2009	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC60	2009	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
XC60	2009	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor, actual/ preset range and tolerance limit
XC60	2009	TF-80SC AWD	CCM	Special functions	Programming the evaporator, climate control module (CCM)
XC60	2009	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
XC60	2009	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
XC60	2009	TF-80SC AWD	AUD	Sys. Info.	
XC60	2009	TF-80SC AWD	AUD	Read code	
XC60	2009	TF-80SC AWD	AUD	Clear code	
XC60	2009	TF-80SC AWD	DEM	Sys. Info.	
XC60	2009	TF-80SC AWD	DEM	Read code	
XC60	2009	TF-80SC AWD	DEM	Clear code	
XC60	2009	TF-80SC AWD	DEM	Data stream	
XC60	2009	TF-80SC AWD	DEM	Actuation	
XC60	2009	TF-80SC AWD	ICM	Sys. Info.	
XC60	2009	TF-80SC AWD	ICM	Read code	
XC60	2009	TF-80SC AWD	ICM	Clear code	
XC60	2009	TF-80SC AWD	ICM	Data stream	
XC60	2009	TF-80SC AWD	ICM	Actuation	
XC60	2009	TF-80SC AWD	SAS	Sys. Info.	
XC60	2009	TF-80SC AWD	SAS	Read code	
XC60	2009	TF-80SC AWD	SAS	Clear code	
XC60	2009	TF-80SC AWD	SAS	Data stream	
XC60	2009	TF-80SC AWD	MMM	Sys. Info.	
XC60	2009	TF-80SC AWD	MMM	Read code	
XC60	2009	TF-80SC AWD	MMM	Clear code	
XC60	2009	TF-80SC AWD	PAM	Sys. Info.	
XC60	2009	TF-80SC AWD	PAM	Read code	
XC60	2009	TF-80SC AWD	PAM	Clear code	
XC60	2009	TF-80SC AWD	PAM	Data stream	
XC60	2009	TF-80SC AWD	IAM	Sys. Info.	
XC60	2009	TF-80SC AWD	IAM	Read code	
XC60	2009	TF-80SC AWD	IAM	Clear code	
XC60	2009	TF-80SC AWD	BPM	Sys. Info.	
XC60	2009	TF-80SC AWD	BPM	Read code	
XC60	2009	TF-80SC AWD	BPM	Clear code	
XC60	2009	TF-80SC AWD	BPM	Data stream	
XC60	2009	TF-80SC AWD	SUM	Sys. Info.	
XC60	2009	TF-80SC AWD	SUM	Read code	
XC60	2009	TF-80SC AWD	SUM	Clear code	
XC60	2009	TF-80SC AWD	SUM	Data stream	
XC60	2009	TF-80SC AWD	PBM	Sys. Info.	
XC60	2009	TF-80SC AWD	PBM	Read code	
XC60	2009	TF-80SC AWD	PBM	Clear code	
XC60	2009	TF-80SC AWD	PBM	Data stream	
XC60	2009	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
XC60	2009	TF-80SC AWD	PBM	Special functions	Activation and service
XC60	2009	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
XC60	2009	TF-80SC AWD	CPM	Sys. Info.	
XC60	2009	TF-80SC AWD	CPM	Read code	
XC60	2009	TF-80SC AWD	CPM	Clear code	

model	year	type	system	function	subfunction
XC60		2009 TF-80SC AWD	CPM	Data stream	
XC60		2009 TF-80SC AWD	CPM	Actuation	
XC60		2009 TF-80SC AWD	HCM	Sys. Info.	
XC60		2009 TF-80SC AWD	HCM	Read code	
XC60		2009 TF-80SC AWD	HCM	Clear code	
XC60		2009 TF-80SC AWD	HCM	Data stream	
XC60		2009 TF-80SC AWD	KVM	Sys. Info.	
XC60		2009 TF-80SC AWD	KVM	Read code	
XC60		2009 TF-80SC AWD	KVM	Clear code	
XC60		2009 TF-80SC AWD	KVM	Data stream	
XC60		2009 TF-80SC AWD	HLDF	Sys. Info.	
XC60		2009 TF-80SC AWD	HLDF	Read code	
XC60		2009 TF-80SC AWD	HLDF	Clear code	
XC60		2009 TF-80SC AWD	HLDF	Data stream	
XC60		2009 TF-80SC AWD	POT	Sys. Info.	
XC60		2009 TF-80SC AWD	POT	Read code	
XC60		2009 TF-80SC AWD	POT	Clear code	
XC60		2009 TF-80SC AWD	POT	Data stream	
XC60		2009 TF-80SC AWD	AUU	Sys. Info.	
XC60		2009 TF-80SC AWD	AUU	Read code	
XC60		2009 TF-80SC AWD	AUU	Clear code	
XC60		2009 TF-80SC AWD	AUU	Data stream	
XC60		2009 TF-80SC AWD	FSM	Sys. Info.	
XC60		2009 TF-80SC AWD	FSM	Read code	
XC60		2009 TF-80SC AWD	FSM	Clear code	
XC60		2009 TF-80SC AWD	FSM	Data stream	
XC60		2009 TF-80SC AWD	RDAR	Sys. Info.	
XC60		2009 TF-80SC AWD	RDAR	Read code	
XC60		2009 TF-80SC AWD	RDAR	Clear code	
XC60		2009 TF-80SC AWD	RDAR	Data stream	
XC60		2009 TF-80SC AWD	SUB	Sys. Info.	
XC60		2009 TF-80SC AWD	SUB	Read code	
XC60		2009 TF-80SC AWD	SUB	Clear code	
XC60		2009 TF-80SC AWD	SUB	Data stream	
XC60		2009 TF-80SC AWD	CVM	Sys. Info.	
XC60		2009 TF-80SC AWD	CVM	Read code	
XC60		2009 TF-80SC AWD	CVM	Clear code	
XC60		2009 TF-80SC AWD	CVM	Data stream	
XC60		2009 TF-80SC AWD	DABM	Sys. Info.	
XC60		2009 TF-80SC AWD	DABM	Read code	
XC60		2009 TF-80SC AWD	DABM	Clear code	
XC60		2009 TF-80SC AWD	DABM	Data stream	
XC60		2009 TF-80SC AWD	PAC	Sys. Info.	
XC60		2009 TF-80SC AWD	PAC	Read code	
XC60		2009 TF-80SC AWD	PAC	Clear code	
XC60		2009 TF-80SC AWD	PAC	Data stream	
XC60		2009 TF-80SC AWD	TRM	Sys. Info.	
XC60		2009 TF-80SC AWD	TRM	Read code	
XC60		2009 TF-80SC AWD	TRM	Clear code	
XC60		2009 TF-80SC AWD	TRM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
XC60	2010 - 2012	B5254T6	ECM	Sys. Info.	
XC60	2010 - 2012	B5254T6	ECM	Read code	
XC60	2010 - 2012	B5254T6	ECM	Clear code	
XC60	2010 - 2012	B5254T6	ECM	Data stream	
XC60	2010 - 2012	B5254T6	ECM	Actuation	
XC60	2010 - 2012	B5254T6	ECM	Special functions	Adaptation of the throttle unit
XC60	2010 - 2012	B5254T10	ECM	Sys. Info.	
XC60	2010 - 2012	B5254T10	ECM	Read code	
XC60	2010 - 2012	B5254T10	ECM	Clear code	
XC60	2010 - 2012	B5254T10	ECM	Data stream	
XC60	2010 - 2012	B5254T10	ECM	Actuation	
XC60	2010 - 2012	B5254T10	ECM	Special functions	Adaptation of the throttle unit
XC60	2010 - 2012	B8444S	ECM	Sys. Info.	
XC60	2010 - 2012	B8444S	ECM	Read code	
XC60	2010 - 2012	B8444S	ECM	Clear code	
XC60	2010 - 2012	B8444S	ECM	Data stream	
XC60	2010 - 2012	B8444S	ECM	Actuation	
XC60	2010 - 2012	B8444S	ECM	Special functions	Resetting the adaptation values
XC60	2010 - 2012	B6304T2	ECM	Sys. Info.	
XC60	2010 - 2012	B6304T2	ECM	Read code	
XC60	2010 - 2012	B6304T2	ECM	Clear code	
XC60	2010 - 2012	B6304T2	ECM	Data stream	
XC60	2010 - 2012	B6304T2	ECM	Actuation	
XC60	2010 - 2012	B6304T2	ECM	Special functions	Resetting the adaptation values
XC60	2010 - 2012	B6324S	ECM	Sys. Info.	
XC60	2010 - 2012	B6324S	ECM	Read code	

model	year	type	system	function	subfunction
XC60	2010 - 2012	B6324S	ECM	Clear code	
XC60	2010 - 2012	B6324S	ECM	Data stream	
XC60	2010 - 2012	B6324S	ECM	Actuation	
XC60	2010 - 2012	B6324S	ECM	Special functions	Resetting the adaptation values
XC60	2010 - 2012	B6324S2	ECM	Sys. Info.	
XC60	2010 - 2012	B6324S2	ECM	Read code	
XC60	2010 - 2012	B6324S2	ECM	Clear code	
XC60	2010 - 2012	B6324S2	ECM	Data stream	
XC60	2010 - 2012	B6324S2	ECM	Actuation	
XC60	2010 - 2012	B6324S2	ECM	Special functions	Resetting the adaptation values
XC60	2010 - 2012	D5244T5	Diesel Eng	Sys. Info.	
XC60	2010 - 2012	D5244T5	Diesel Eng	Read code	
XC60	2010 - 2012	D5244T5	Diesel Eng	Clear code	
XC60	2010 - 2012	D5244T5	Diesel Eng	Data stream	
XC60	2010 - 2012	D5244T5	Diesel Eng	Actuation	
XC60	2010 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
XC60	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
XC60	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
XC60	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
XC60	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
XC60	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
XC60	2010 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
XC60	2010 - 2012	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
XC60	2010 - 2012	D5244T16	Diesel Eng	Sys. Info.	
XC60	2010 - 2012	D5244T16	Diesel Eng	Read code	
XC60	2010 - 2012	D5244T16	Diesel Eng	Clear code	
XC60	2010 - 2012	D5244T16	Diesel Eng	Data stream	
XC60	2010 - 2012	D5244T16	Diesel Eng	Actuation	
XC60	2010 - 2012	D5244T16	Diesel Eng	Freeze frame	
XC60	2010 - 2012	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
XC60	2010 - 2012	D5244T16	Diesel Eng	Special functions	Resetting adaptation
XC60	2010 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
XC60	2010 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2010 - 2012	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
XC60	2010 - 2012	TF-80SC	TCM	Sys. Info.	
XC60	2010 - 2012	TF-80SC	TCM	Read code	
XC60	2010 - 2012	TF-80SC	TCM	Clear code	
XC60	2010 - 2012	TF-80SC	TCM	Data stream	
XC60	2010 - 2012	TF-80SC	TCM	Actuation	
XC60	2010 - 2012	TF-80SC	TCM	Freeze frame	
XC60	2010 - 2012	TF-80SC	TCM	Special functions	Resetting the adaptation
XC60	2010 - 2012	TF-80SC	TCM	Special functions	Calibration of position sensor
XC60	2010 - 2012	TF-80SC AWD	TCM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	TCM	Read code	
XC60	2010 - 2012	TF-80SC AWD	TCM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	TCM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	TCM	Actuation	
XC60	2010 - 2012	TF-80SC AWD	TCM	Freeze frame	
XC60	2010 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
XC60	2010 - 2012	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
XC60	2010 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
XC60	2010 - 2012	TF-80SC AWD	TCM	Special functions	Activating gear indication
XC60	2010 - 2012	TF-80SC AWD	TCM	Special functions	Control module adaptation
XC60	2010 - 2012	TF-80SC AWD	ABS	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	ABS	Read code	
XC60	2010 - 2012	TF-80SC AWD	ABS	Clear code	
XC60	2010 - 2012	TF-80SC AWD	ABS	Data stream	
XC60	2010 - 2012	TF-80SC AWD	ABS	Actuation	
XC60	2010 - 2012	TF-80SC AWD	ABS	Freeze frame	
XC60	2010 - 2012	TF-80SC AWD	ABS	Special functions	Calibration
XC60	2010 - 2012	TF-80SC AWD	SRS	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	SRS	Read code	
XC60	2010 - 2012	TF-80SC AWD	SRS	Clear code	
XC60	2010 - 2012	TF-80SC AWD	SRS	Data stream	
XC60	2010 - 2012	TF-80SC AWD	SRS	Freeze frame	
XC60	2010 - 2012	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
XC60	2010 - 2012	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
XC60	2010 - 2012	TF-80SC AWD	CEM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	CEM	Read code	
XC60	2010 - 2012	TF-80SC AWD	CEM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	CEM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	CEM	Actuation	
XC60	2010 - 2012	TF-80SC AWD	DIM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	DIM	Read code	
XC60	2010 - 2012	TF-80SC AWD	DIM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	DIM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	DIM	Freeze frame	
XC60	2010 - 2012	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator(SRI)

model	year	type	system	function	subfunction
XC60	2010 - 2012	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
XC60	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
XC60	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
XC60	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming of clock
XC60	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
XC60	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
XC60	2010 - 2012	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC60	2010 - 2012	TF-80SC AWD	PDM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	PDM	Read code	
XC60	2010 - 2012	TF-80SC AWD	PDM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	PDM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	PDM	Actuation	
XC60	2010 - 2012	TF-80SC AWD	PSM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	PSM	Read code	
XC60	2010 - 2012	TF-80SC AWD	PSM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	PSM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	PSM	Actuation	
XC60	2010 - 2012	TF-80SC AWD	DDM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	DDM	Read code	
XC60	2010 - 2012	TF-80SC AWD	DDM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	DDM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	CCM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	CCM	Read code	
XC60	2010 - 2012	TF-80SC AWD	CCM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	CCM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	CCM	Actuation	
XC60	2010 - 2012	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
XC60	2010 - 2012	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
XC60	2010 - 2012	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
XC60	2010 - 2012	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
XC60	2010 - 2012	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
XC60	2010 - 2012	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module (CCM)
XC60	2010 - 2012	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
XC60	2010 - 2012	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
XC60	2010 - 2012	TF-80SC AWD	AUD	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	AUD	Read code	
XC60	2010 - 2012	TF-80SC AWD	AUD	Clear code	
XC60	2010 - 2012	TF-80SC AWD	DEM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	DEM	Read code	
XC60	2010 - 2012	TF-80SC AWD	DEM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	DEM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	DEM	Actuation	
XC60	2010 - 2012	TF-80SC AWD	ICM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	ICM	Read code	
XC60	2010 - 2012	TF-80SC AWD	ICM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	ICM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	ICM	Actuation	
XC60	2010 - 2012	TF-80SC AWD	SAS	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	SAS	Read code	
XC60	2010 - 2012	TF-80SC AWD	SAS	Clear code	
XC60	2010 - 2012	TF-80SC AWD	SAS	Data stream	
XC60	2010 - 2012	TF-80SC AWD	MMM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	MMM	Read code	
XC60	2010 - 2012	TF-80SC AWD	MMM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	PHM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	PHM	Read code	
XC60	2010 - 2012	TF-80SC AWD	PHM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	PHM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	PHM	Actuation	
XC60	2010 - 2012	TF-80SC AWD	PAM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	PAM	Read code	
XC60	2010 - 2012	TF-80SC AWD	PAM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	PAM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	IAM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	IAM	Read code	
XC60	2010 - 2012	TF-80SC AWD	IAM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	BPM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	BPM	Read code	
XC60	2010 - 2012	TF-80SC AWD	BPM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	BPM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	SUM	Sys. Info.	
XC60	2010 - 2012	TF-80SC AWD	SUM	Read code	
XC60	2010 - 2012	TF-80SC AWD	SUM	Clear code	
XC60	2010 - 2012	TF-80SC AWD	SUM	Data stream	
XC60	2010 - 2012	TF-80SC AWD	PBM	Sys. Info.	



model	year	type	system	function	subfunction	
XC60	2010 - 2012	TF-80SC AWD	PBM	Read code		
XC60	2010 - 2012	TF-80SC AWD	PBM	Clear code		
XC60	2010 - 2012	TF-80SC AWD	PBM	Data stream		
XC60	2010 - 2012	TF-80SC AWD	PBM	Special functions	Calibration angle sensor	
XC60	2010 - 2012	TF-80SC AWD	PBM	Special functions	Activation and service	
XC60	2010 - 2012	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter	
XC60	2010 - 2012	TF-80SC AWD	CPM	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	CPM	Read code		
XC60	2010 - 2012	TF-80SC AWD	CPM	Clear code		
XC60	2010 - 2012	TF-80SC AWD	CPM	Data stream		
XC60	2010 - 2012	TF-80SC AWD	CPM	Actuation		
XC60	2010 - 2012	TF-80SC AWD	HCM	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	HCM	Read code		
XC60	2010 - 2012	TF-80SC AWD	HCM	Clear code		
XC60	2010 - 2012	TF-80SC AWD	HCM	Data stream		
XC60	2010 - 2012	TF-80SC AWD	KVM	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	KVM	Read code		
XC60	2010 - 2012	TF-80SC AWD	KVM	Clear code		
XC60	2010 - 2012	TF-80SC AWD	KVM	Data stream		
XC60	2010 - 2012	TF-80SC AWD	HLDf	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	HLDf	Read code		
XC60	2010 - 2012	TF-80SC AWD	HLDf	Clear code		
XC60	2010 - 2012	TF-80SC AWD	HLDf	Data stream		
XC60	2010 - 2012	TF-80SC AWD	POT	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	POT	Read code		
XC60	2010 - 2012	TF-80SC AWD	POT	Clear code		
XC60	2010 - 2012	TF-80SC AWD	POT	Data stream		
XC60	2010 - 2012	TF-80SC AWD	AUU	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	AUU	Read code		
XC60	2010 - 2012	TF-80SC AWD	AUU	Clear code		
XC60	2010 - 2012	TF-80SC AWD	AUU	Data stream		
XC60	2010 - 2012	TF-80SC AWD	FSM	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	FSM	Read code		
XC60	2010 - 2012	TF-80SC AWD	FSM	Clear code		
XC60	2010 - 2012	TF-80SC AWD	FSM	Data stream		
XC60	2010 - 2012	TF-80SC AWD	RDAR	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	RDAR	Read code		
XC60	2010 - 2012	TF-80SC AWD	RDAR	Clear code		
XC60	2010 - 2012	TF-80SC AWD	RDAR	Data stream		
XC60	2010 - 2012	TF-80SC AWD	SUB	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	SUB	Read code		
XC60	2010 - 2012	TF-80SC AWD	SUB	Clear code		
XC60	2010 - 2012	TF-80SC AWD	SUB	Data stream		
XC60	2010 - 2012	TF-80SC AWD	CVM	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	CVM	Read code		
XC60	2010 - 2012	TF-80SC AWD	CVM	Clear code		
XC60	2010 - 2012	TF-80SC AWD	CVM	Data stream		
XC60	2010 - 2012	TF-80SC AWD	DABM	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	DABM	Read code		
XC60	2010 - 2012	TF-80SC AWD	DABM	Clear code		
XC60	2010 - 2012	TF-80SC AWD	DABM	Data stream		
XC60	2010 - 2012	TF-80SC AWD	PAC	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	PAC	Read code		
XC60	2010 - 2012	TF-80SC AWD	PAC	Clear code		
XC60	2010 - 2012	TF-80SC AWD	PAC	Data stream		
XC60	2010 - 2012	TF-80SC AWD	TRM	Sys. Info.		
XC60	2010 - 2012	TF-80SC AWD	TRM	Read code		
XC60	2010 - 2012	TF-80SC AWD	TRM	Clear code		
XC60	2010 - 2012	TF-80SC AWD	TRM	Data stream		
XC60		2013	B6324S5	ECM	Sys. Info.	
XC60		2013	B6324S5	ECM	Read code	
XC60		2013	B6324S5	ECM	Clear code	
XC60		2013	B6324S5	ECM	Data stream	
XC60		2013	B6324S5	ECM	Actuation	
XC60		2013	B6324S5	ECM	Special functions	Resetting the adaptation values
XC60		2013	B6324S4	ECM	Sys. Info.	
XC60		2013	B6324S4	ECM	Read code	
XC60		2013	B6324S4	ECM	Clear code	
XC60		2013	B6324S4	ECM	Data stream	
XC60		2013	B6324S4	ECM	Actuation	
XC60		2013	B6324S4	ECM	Special functions	Resetting the adaptation values
XC60		2013	B6304T4	ECM	Sys. Info.	
XC60		2013	B6304T4	ECM	Read code	
XC60		2013	B6304T4	ECM	Clear code	
XC60		2013	B6304T4	ECM	Data stream	
XC60		2013	B6304T4	ECM	Actuation	
XC60		2013	B6304T4	ECM	Freeze frame	
XC60		2013	B6304T4	ECM	Special functions	Resetting the adaptation values

model	year	type	system	function	subfunction
XC60	2013	B4204T7	ECM	Sys. Info.	
XC60	2013	B4204T7	ECM	Read code	
XC60	2013	B4204T7	ECM	Clear code	
XC60	2013	B4204T7	ECM	Data stream	
XC60	2013	B4204T7	ECM	Actuation	
XC60	2013	B4204T7	ECM	Freeze frame	
XC60	2013	B4204T7	ECM	Special functions	Resetting the adaptation values
XC60	2013	B4204T7	ECM	Special functions	Adaptation of oil level sensor
XC60	2013	B4204T7	ECM	Special functions	Checking injectorsActivation brake vacuum pump
XC60	2013	B4204T6	ECM	Sys. Info.	
XC60	2013	B4204T6	ECM	Read code	
XC60	2013	B4204T6	ECM	Clear code	
XC60	2013	B4204T6	ECM	Data stream	
XC60	2013	B4204T6	ECM	Actuation	
XC60	2013	B4204T6	ECM	Freeze frame	
XC60	2013	B4204T6	ECM	Special functions	Resetting the adaptation values
XC60	2013	B4204T6	ECM	Special functions	Adaptation of oil level sensor
XC60	2013	B4204T6	ECM	Special functions	Checking injectorsActivation brake vacuum pump
XC60	2013	D5244T11	DIESEL ENG	Sys. Info.	
XC60	2013	D5244T11	DIESEL ENG	Read code	
XC60	2013	D5244T11	DIESEL ENG	Clear code	
XC60	2013	D5244T11	DIESEL ENG	Data stream	
XC60	2013	D5244T11	DIESEL ENG	Actuation	
XC60	2013	D5244T11	DIESEL ENG	Freeze frame	
XC60	2013	D5244T11	DIESEL ENG	Special functions	Resetting counter particle filter
XC60	2013	D5244T11	DIESEL ENG	Special functions	Checking injectors
XC60	2013	D5244T11	DIESEL ENG	Special functions	Adaptation of throttle module
XC60	2013	D5244T11	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2013	D5244T11	DIESEL ENG	Special functions	Checking the oil level
XC60	2013	D5244T15	DIESEL ENG	Sys. Info.	
XC60	2013	D5244T15	DIESEL ENG	Read code	
XC60	2013	D5244T15	DIESEL ENG	Clear code	
XC60	2013	D5244T15	DIESEL ENG	Data stream	
XC60	2013	D5244T15	DIESEL ENG	Actuation	
XC60	2013	D5244T15	DIESEL ENG	Freeze frame	
XC60	2013	D5244T15	DIESEL ENG	Special functions	Resetting counter particle filter
XC60	2013	D5244T15	DIESEL ENG	Special functions	Checking injectors
XC60	2013	D5244T15	DIESEL ENG	Special functions	Adaptation of throttle module
XC60	2013	D5244T15	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2013	D5244T15	DIESEL ENG	Special functions	Checking the oil level
XC60	2013	D5244T17	DIESEL ENG	Sys. Info.	
XC60	2013	D5244T17	DIESEL ENG	Read code	
XC60	2013	D5244T17	DIESEL ENG	Clear code	
XC60	2013	D5244T17	DIESEL ENG	Data stream	
XC60	2013	D5244T17	DIESEL ENG	Actuation	
XC60	2013	D5244T17	DIESEL ENG	Freeze frame	
XC60	2013	D5244T17	DIESEL ENG	Special functions	Resetting counter particle filter
XC60	2013	D5244T17	DIESEL ENG	Special functions	Checking injectors
XC60	2013	D5244T17	DIESEL ENG	Special functions	Adaptation of throttle module
XC60	2013	D5244T17	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2013	D5244T17	DIESEL ENG	Special functions	Checking the oil level
XC60	2013	D5204T3	DIESEL ENG	Sys. Info.	
XC60	2013	D5204T3	DIESEL ENG	Read code	
XC60	2013	D5204T3	DIESEL ENG	Clear code	
XC60	2013	D5204T3	DIESEL ENG	Data stream	
XC60	2013	D5204T3	DIESEL ENG	Actuation	
XC60	2013	D5204T3	DIESEL ENG	Freeze frame	
XC60	2013	D5204T3	DIESEL ENG	Special functions	Resetting counter particle filter
XC60	2013	D5204T3	DIESEL ENG	Special functions	Checking injectors
XC60	2013	D5204T3	DIESEL ENG	Special functions	Adaptation of throttle module
XC60	2013	D5204T3	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2013	D5204T3	DIESEL ENG	Special functions	Checking the oil level
XC60	2013	D5204T7	DIESEL ENG	Sys. Info.	
XC60	2013	D5204T7	DIESEL ENG	Read code	
XC60	2013	D5204T7	DIESEL ENG	Clear code	
XC60	2013	D5204T7	DIESEL ENG	Data stream	
XC60	2013	D5204T7	DIESEL ENG	Actuation	
XC60	2013	D5204T7	DIESEL ENG	Freeze frame	
XC60	2013	D5204T7	DIESEL ENG	Special functions	Resetting counter particle filter
XC60	2013	D5204T7	DIESEL ENG	Special functions	Checking injectors
XC60	2013	D5204T7	DIESEL ENG	Special functions	Adaptation of throttle module
XC60	2013	D5204T7	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2013	D5204T7	DIESEL ENG	Special functions	Checking the oil level
XC60	2013	MPS6	TCM	Sys. Info.	
XC60	2013	MPS6	TCM	Read code	
XC60	2013	MPS6	TCM	Clear code	
XC60	2013	MPS6	TCM	Data stream	
XC60	2013	MPS6	TCM	Actuation	

model	year	type	system	function	subfunction
XC60	2013	MPS6	TCM	Freeze frame	
XC60	2013	MPS6	TCM	Special functions	Resetting adaptation
XC60	2013	MPS6	TCM	Special functions	Resetting the Transmission fluid change counter
XC60	2013	MPS6	TCM	Special functions	Calibration of gear indication
XC60	2013	MPS6	TCM	Special functions	Activating of gear indication
XC60	2013	MPS6	TCM	Special functions	Control module adaptation
XC60	2013	TF-80SC	TCM	Sys. Info.	
XC60	2013	TF-80SC	TCM	Read code	
XC60	2013	TF-80SC	TCM	Clear code	
XC60	2013	TF-80SC	TCM	Data stream	
XC60	2013	TF-80SC	TCM	Actuation	
XC60	2013	TF-80SC	TCM	Freeze frame	
XC60	2013	TF-80SC	TCM	Special functions	Resetting adaptation
XC60	2013	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
XC60	2013	TF-80SC	TCM	Special functions	Calibration of gear indication
XC60	2013	TF-80SC	TCM	Special functions	Activating of gear indication
XC60	2013	TF-80SC	TCM	Special functions	Control module adaptation
XC60	2013	TF-80SC AWD	TCM	Sys. Info.	
XC60	2013	TF-80SC AWD	TCM	Read code	
XC60	2013	TF-80SC AWD	TCM	Clear code	
XC60	2013	TF-80SC AWD	TCM	Data stream	
XC60	2013	TF-80SC AWD	TCM	Actuation	
XC60	2013	TF-80SC AWD	TCM	Freeze frame	
XC60	2013	TF-80SC AWD	TCM	Special functions	Resetting adaptation
XC60	2013	TF-80SC AWD	TCM	Special functions	Resetting the Transmission fluid change counter
XC60	2013	TF-80SC AWD	TCM	Special functions	Calibration of gear indication
XC60	2013	TF-80SC AWD	TCM	Special functions	Activating of gear indication
XC60	2013	TF-80SC AWD	TCM	Special functions	Control module adaptation
XC60	2013	TF-80SC AWD	BCM/ABS	Sys. Info.	
XC60	2013	TF-80SC AWD	BCM/ABS	Read code	
XC60	2013	TF-80SC AWD	BCM/ABS	Clear code	
XC60	2013	TF-80SC AWD	BCM/ABS	Data stream	
XC60	2013	TF-80SC AWD	BCM/ABS	Actuation	
XC60	2013	TF-80SC AWD	BCM/ABS	Freeze frame	
XC60	2013	TF-80SC AWD	BCM/ABS	Special functions	Calibration
XC60	2013	TF-80SC AWD	SRS	Sys. Info.	
XC60	2013	TF-80SC AWD	SRS	Read code	
XC60	2013	TF-80SC AWD	SRS	Clear code	
XC60	2013	TF-80SC AWD	SRS	Data stream	
XC60	2013	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
XC60	2013	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
XC60	2013	TF-80SC AWD	CEM	Sys. Info.	
XC60	2013	TF-80SC AWD	CEM	Read code	
XC60	2013	TF-80SC AWD	CEM	Clear code	
XC60	2013	TF-80SC AWD	CEM	Data stream	
XC60	2013	TF-80SC AWD	CEM	Actuation	
XC60	2013	TF-80SC AWD	CEM	Special functions	Workshop test(TPMS)
XC60	2013	TF-80SC AWD	CEM	Special functions	Reading off power supply position
XC60	2013	TF-80SC AWD	CEM	Special functions	Read-out and resetting alco-lock
XC60	2013	TF-80SC AWD	CEM	Special functions	Activating wipers,front/rear
XC60	2013	TF-80SC AWD	CEM	Special functions	Operating and initiating the roof hatch
XC60	2013	TF-80SC AWD	CEM	Special functions	Restoring supplemental restraint system
XC60	2013	TF-80SC AWD	CEM	Special functions	Setting day and night mode for the instrumentation
XC60	2013	TF-80SC AWD	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
XC60	2013	TF-80SC AWD	CEM	Special functions	Readout of current from battery monitoring sensor
XC60	2013	TF-80SC AWD	CEM	Special functions	Readout of information stand-by current
XC60	2013	TF-80SC AWD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
XC60	2013	TF-80SC AWD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
XC60	2013	TF-80SC AWD	CEM	Special functions	Remote controlled immobilising,status
XC60	2013	TF-80SC AWD	CEM	Special functions	Remote controlled immobilising,cause
XC60	2013	TF-80SC AWD	DIM	Sys. Info.	
XC60	2013	TF-80SC AWD	DIM	Read code	
XC60	2013	TF-80SC AWD	DIM	Clear code	
XC60	2013	TF-80SC AWD	DIM	Data stream	
XC60	2013	TF-80SC AWD	DIM	Actuation	
XC60	2013	TF-80SC AWD	DIM	Freeze frame	
XC60	2013	TF-80SC AWD	DIM	Special functions	Resetting the service reminder indicator (SRI)
XC60	2013	TF-80SC AWD	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
XC60	2013	TF-80SC AWD	DIM	Special functions	Read-out of fuel volume
XC60	2013	TF-80SC AWD	DIM	Special functions	Resetting the odometer setting
XC60	2013	TF-80SC AWD	DIM	Special functions	Programming loudest audible signal,seat belt reminder
XC60	2013	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
XC60	2013	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
XC60	2013	TF-80SC AWD	PDM	Sys. Info.	

model	year	type	system	function	subfunction
XC60	2013	TF-80SC AWD	PDM	Read code	
XC60	2013	TF-80SC AWD	PDM	Clear code	
XC60	2013	TF-80SC AWD	PDM	Data stream	
XC60	2013	TF-80SC AWD	PDM	Actuation	
XC60	2013	TF-80SC AWD	PDM	Special functions	Initializing the window in the front door,
XC60	2013	TF-80SC AWD	PDM	Special functions	Initializing the window in the rear door,
XC60	2013	TF-80SC AWD	PDM	Special functions	Central lock motors,activating
XC60	2013	TF-80SC AWD	PSM	Sys. Info.	
XC60	2013	TF-80SC AWD	PSM	Read code	
XC60	2013	TF-80SC AWD	PSM	Clear code	
XC60	2013	TF-80SC AWD	PSM	Data stream	
XC60	2013	TF-80SC AWD	PSM	Actuation	
XC60	2013	TF-80SC AWD	PSM	Special functions	Programming the seat memory delay time
XC60	2013	TF-80SC AWD	DDM	Sys. Info.	
XC60	2013	TF-80SC AWD	DDM	Read code	
XC60	2013	TF-80SC AWD	DDM	Clear code	
XC60	2013	TF-80SC AWD	DDM	Data stream	
XC60	2013	TF-80SC AWD	DDM	Actuation	
XC60	2013	TF-80SC AWD	DDM	Special functions	Iniializing the window position,
XC60	2013	TF-80SC AWD	DDM	Special functions	Central lock motors,activating
XC60	2013	TF-80SC AWD	CCM	Sys. Info.	
XC60	2013	TF-80SC AWD	CCM	Read code	
XC60	2013	TF-80SC AWD	CCM	Clear code	
XC60	2013	TF-80SC AWD	CCM	Data stream	
XC60	2013	TF-80SC AWD	CCM	Actuation	
XC60	2013	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
XC60	2013	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module(CCM)
XC60	2013	TF-80SC AWD	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
XC60	2013	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
XC60	2013	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control moudule(CCM)
XC60	2013	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
XC60	2013	TF-80SC AWD	CCM	Special functions	Programming the climate control module(CCM)
XC60	2013	TF-80SC AWD	CCM	Special functions	Rear view mirror light sensitivity
XC60	2013	TF-80SC AWD	AUD	Sys. Info.	
XC60	2013	TF-80SC AWD	AUD	Read code	
XC60	2013	TF-80SC AWD	AUD	Clear code	
XC60	2013	TF-80SC AWD	AUD	Special functions	Checking loudspeakers
XC60	2013	TF-80SC AWD	AUD	Special functions	Checking headphone socket
XC60	2013	TF-80SC AWD	DEM	Sys. Info.	
XC60	2013	TF-80SC AWD	DEM	Read code	
XC60	2013	TF-80SC AWD	DEM	Clear code	
XC60	2013	TF-80SC AWD	DEM	Special functions	Calibration of differential electronic module (DEM).
XC60	2013	TF-80SC AWD	ICM	Sys. Info.	
XC60	2013	TF-80SC AWD	ICM	Read code	
XC60	2013	TF-80SC AWD	ICM	Clear code	
XC60	2013	TF-80SC AWD	ICM	Data stream	
XC60	2013	TF-80SC AWD	SAS	Sys. Info.	
XC60	2013	TF-80SC AWD	SAS	Read code	
XC60	2013	TF-80SC AWD	SAS	Clear code	
XC60	2013	TF-80SC AWD	SAS	Data stream	
XC60	2013	TF-80SC AWD	SAS	Actuation	
XC60	2013	TF-80SC AWD	PHM	Sys. Info.	
XC60	2013	TF-80SC AWD	PHM	Read code	
XC60	2013	TF-80SC AWD	PHM	Clear code	
XC60	2013	TF-80SC AWD	PHM	Data stream	
XC60	2013	TF-80SC AWD	PHM	Special functions	Reinstalling the reserve battery
XC60	2013	TF-80SC AWD	PAM	Sys. Info.	
XC60	2013	TF-80SC AWD	PAM	Read code	
XC60	2013	TF-80SC AWD	PAM	Clear code	
XC60	2013	TF-80SC AWD	PAM	Data stream	
XC60	2013	TF-80SC AWD	PAM	Special functions	Programming of Parking Assistance Module(PAM)
XC60	2013	TF-80SC AWD	IAM	Sys. Info.	
XC60	2013	TF-80SC AWD	IAM	Read code	
XC60	2013	TF-80SC AWD	IAM	Clear code	
XC60	2013	TF-80SC AWD	IAM	Data stream	
XC60	2013	TF-80SC AWD	SUM	Sys. Info.	
XC60	2013	TF-80SC AWD	SUM	Read code	
XC60	2013	TF-80SC AWD	SUM	Clear code	
XC60	2013	TF-80SC AWD	SUM	Data stream	
XC60	2013	TF-80SC AWD	PBM	Sys. Info.	
XC60	2013	TF-80SC AWD	PBM	Read code	
XC60	2013	TF-80SC AWD	PBM	Clear code	
XC60	2013	TF-80SC AWD	PBM	Data stream	
XC60	2013	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
XC60	2013	TF-80SC AWD	PBM	Special functions	Activation and service

model	year	type	system	function	subfunction
XC60	2013	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
XC60	2013	TF-80SC AWD	CPM	Sys. Info.	
XC60	2013	TF-80SC AWD	CPM	Read code	
XC60	2013	TF-80SC AWD	CPM	Clear code	
XC60	2013	TF-80SC AWD	CPM	Data stream	
XC60	2013	TF-80SC AWD	CPM	Special functions	Identification of the heater
XC60	2013	TF-80SC AWD	KVM	Sys. Info.	
XC60	2013	TF-80SC AWD	KVM	Read code	
XC60	2013	TF-80SC AWD	KVM	Clear code	
XC60	2013	TF-80SC AWD	KVM	Data stream	
XC60	2013	TF-80SC AWD	KVM	Special functions	Checking all antennas
XC60	2013	TF-80SC AWD	KVM	Special functions	Check the communication with the remote control receiver
XC60	2013	TF-80SC AWD	KVM	Special functions	Remote control
XC60	2013	TF-80SC AWD	KVM	Special functions	Test of internal memory
XC60	2013	TF-80SC AWD	KVM	Special functions	Activation of quick-lock motors
XC60	2013	TF-80SC AWD	FSM	Sys. Info.	
XC60	2013	TF-80SC AWD	FSM	Read code	
XC60	2013	TF-80SC AWD	FSM	Clear code	
XC60	2013	TF-80SC AWD	RDAR	Sys. Info.	
XC60	2013	TF-80SC AWD	RDAR	Read code	
XC60	2013	TF-80SC AWD	RDAR	Clear code	
XC60	2013	TF-80SC AWD	CVM	Sys. Info.	
XC60	2013	TF-80SC AWD	CVM	Read code	
XC60	2013	TF-80SC AWD	CVM	Clear code	
XC60	2013	TF-80SC AWD	DABM	Sys. Info.	
XC60	2013	TF-80SC AWD	DABM	Read code	
XC60	2013	TF-80SC AWD	DABM	Clear code	
XC60	2013	TF-80SC AWD	TRM	Sys. Info.	
XC60	2013	TF-80SC AWD	TRM	Read code	
XC60	2013	TF-80SC AWD	TRM	Clear code	
XC60	2013	TF-80SC AWD	TRM	Data stream	
XC60	2013	TF-80SC AWD	PSCM	Sys. Info.	
XC60	2013	TF-80SC AWD	PSCM	Read code	
XC60	2013	TF-80SC AWD	PSCM	Clear code	
XC60	2013	TF-80SC AWD	PSCM	Data stream	
XC60	2013	TF-80SC AWD	TVM	Sys. Info.	
XC60	2013	TF-80SC AWD	TVM	Read code	
XC60	2013	TF-80SC AWD	TVM	Clear code	
XC60	2013	TF-80SC AWD	TVM	Data stream	
XC60	2013	TF-80SC AWD	RSE	Sys. Info.	
XC60	2013	TF-80SC AWD	RSE	Read code	
XC60	2013	TF-80SC AWD	RSE	Clear code	
XC60	2013	TF-80SC AWD	RSE	Data stream	
XC60	2013	TF-80SC AWD	RSE	Special functions	Checking AUK-panel.
XC60	2014	B6324S5	ECM	Sys. Info.	
XC60	2014	B6324S5	ECM	Read code	
XC60	2014	B6324S5	ECM	Clear code	
XC60	2014	B6324S5	ECM	Data stream	
XC60	2014	B6324S5	ECM	Actuation	
XC60	2014	B6324S5	ECM	Special functions	Resetting the adaptation values
XC60	2014	B6324S4	ECM	Sys. Info.	
XC60	2014	B6324S4	ECM	Read code	
XC60	2014	B6324S4	ECM	Clear code	
XC60	2014	B6324S4	ECM	Data stream	
XC60	2014	B6324S4	ECM	Actuation	
XC60	2014	B6324S4	ECM	Special functions	Resetting the adaptation values
XC60	2014	B6304T4	ECM	Sys. Info.	
XC60	2014	B6304T4	ECM	Read code	
XC60	2014	B6304T4	ECM	Clear code	
XC60	2014	B6304T4	ECM	Data stream	
XC60	2014	B6304T4	ECM	Actuation	
XC60	2014	B6304T4	ECM	Freeze frame	
XC60	2014	B6304T4	ECM	Special functions	Resetting the adaptation values
XC60	2014	B4204T7	ECM	Sys. Info.	
XC60	2014	B4204T7	ECM	Read code	
XC60	2014	B4204T7	ECM	Clear code	
XC60	2014	B4204T7	ECM	Data stream	
XC60	2014	B4204T7	ECM	Actuation	
XC60	2014	B4204T7	ECM	Freeze frame	
XC60	2014	B4204T7	ECM	Special functions	Resetting the adaptation values
XC60	2014	B4204T7	ECM	Special functions	Adaptation of oil level sensor
XC60	2014	B4204T7	ECM	Special functions	Checking injectorsActivation brake vacuum pump
XC60	2014	B4204T6	ECM	Freeze frame	
XC60	2014	B4204T6	ECM	Special functions	Adaptation of the throttle unit
XC60	2014	B4204T6	ECM	Special functions	Resetting the adaptation values
XC60	2014	B4204T6	ECM	Special functions	Adaptation of oil level sensor
XC60	2014	B4204T6	ECM	Special functions	Checking injectors

model	year	type	system	function	subfunction
XC60	2014	B4204T6	ECM	Special functions	Activation brake vacuum pump
XC60	2014	B4204T10	ECM	Sys. Info.	
XC60	2014	B4204T10	ECM	Read code	
XC60	2014	B4204T10	ECM	Clear code	
XC60	2014	B4204T10	ECM	Data stream	
XC60	2014	B4204T10	ECM	Actuation	
XC60	2014	B4204T10	ECM	Freeze frame	
XC60	2014	B4204T10	ECM	Special functions	Test of fuel pressure regulation,low pressure side
XC60	2014	B4204T10	ECM	Special functions	Test of fuel pressure regulation,high pressure side
XC60	2014	B4204T10	ECM	Special functions	Resetting adaptations and wear counter for supercharger
XC60	2014	B4204T10	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
XC60	2014	B4204T10	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
XC60	2014	B4204T10	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
XC60	2014	B4204T10	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
XC60	2014	B4204T10	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
XC60	2014	B4204T10	ECM	Special functions	Resetting adaptations for cylinder balancing
XC60	2014	B4204T10	ECM	Special functions	Resetting adaptations for the thrittle
XC60	2014	B4204T10	ECM	Special functions	Adaptation of neutral position sensor
XC60	2014	B4204T12	ECM	Sys. Info.	
XC60	2014	B4204T12	ECM	Read code	
XC60	2014	B4204T12	ECM	Clear code	
XC60	2014	B4204T12	ECM	Data stream	
XC60	2014	B4204T12	ECM	Actuation	
XC60	2014	B4204T12	ECM	Freeze frame	
XC60	2014	B4204T12	ECM	Special functions	Test of fuel pressure regulation,low pressure side
XC60	2014	B4204T12	ECM	Special functions	Test of fuel pressure regulation,high pressure side
XC60	2014	B4204T12	ECM	Special functions	Resetting adaptations and wear counter for supercharger
XC60	2014	B4204T12	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
XC60	2014	B4204T12	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
XC60	2014	B4204T12	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
XC60	2014	B4204T12	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
XC60	2014	B4204T12	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
XC60	2014	B4204T12	ECM	Special functions	Resetting adaptations for cylinder balancing
XC60	2014	B4204T12	ECM	Special functions	Resetting adaptations for the thrittle
XC60	2014	B4204T12	ECM	Special functions	Adaptation of neutral position sensor
XC60	2014	B4204T9	ECM	Sys. Info.	
XC60	2014	B4204T9	ECM	Read code	
XC60	2014	B4204T9	ECM	Clear code	
XC60	2014	B4204T9	ECM	Data stream	
XC60	2014	B4204T9	ECM	Actuation	
XC60	2014	B4204T9	ECM	Freeze frame	
XC60	2014	B4204T9	ECM	Special functions	Test of fuel pressure regulation,low pressure side
XC60	2014	B4204T9	ECM	Special functions	Test of fuel pressure regulation,high pressure side
XC60	2014	B4204T9	ECM	Special functions	Resetting adaptations and wear counter for supercharger
XC60	2014	B4204T9	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
XC60	2014	B4204T9	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
XC60	2014	B4204T9	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
XC60	2014	B4204T9	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
XC60	2014	B4204T9	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
XC60	2014	B4204T9	ECM	Special functions	Resetting adaptations for cylinder balancing
XC60	2014	B4204T9	ECM	Special functions	Resetting adaptations for the thrittle
XC60	2014	B4204T9	ECM	Special functions	Adaptation of neutral position sensor
XC60	2014	B4204T11	ECM	Sys. Info.	
XC60	2014	B4204T11	ECM	Read code	
XC60	2014	B4204T11	ECM	Clear code	
XC60	2014	B4204T11	ECM	Data stream	
XC60	2014	B4204T11	ECM	Actuation	
XC60	2014	B4204T11	ECM	Freeze frame	
XC60	2014	B4204T11	ECM	Special functions	Test of fuel pressure regulation,low pressure side
XC60	2014	B4204T11	ECM	Special functions	Test of fuel pressure regulation,high pressure side
XC60	2014	B4204T11	ECM	Special functions	Resetting adaptations and wear counter for supercharger
XC60	2014	B4204T11	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
XC60	2014	B4204T11	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
XC60	2014	B4204T11	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
XC60	2014	B4204T11	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
XC60	2014	B4204T11	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side

model	year	type	system	function	subfunction
XC60	2014	B4204T11	ECM	Special functions	Resetting adaptations for cylinder balancing
XC60	2014	B4204T11	ECM	Special functions	Resetting adaptations for the throttle
XC60	2014	B4204T11	ECM	Special functions	Adaptation of neutral position sensor
XC60	2014	B4204T15	ECM	Sys. Info.	
XC60	2014	B4204T15	ECM	Read code	
XC60	2014	B4204T15	ECM	Clear code	
XC60	2014	B4204T15	ECM	Data stream	
XC60	2014	B4204T15	ECM	Actuation	
XC60	2014	B4204T15	ECM	Freeze frame	
XC60	2014	B4204T15	ECM	Special functions	Test of fuel pressure regulation,low pressure side
XC60	2014	B4204T15	ECM	Special functions	Test of fuel pressure regulation,high pressure side
XC60	2014	B4204T15	ECM	Special functions	Resetting adaptations and wear counter for supercharger
XC60	2014	B4204T15	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
XC60	2014	B4204T15	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
XC60	2014	B4204T15	ECM	Special functions	Resetting adaptations for camshaft regulation,intake
XC60	2014	B4204T15	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
XC60	2014	B4204T15	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
XC60	2014	B4204T15	ECM	Special functions	Resetting adaptations for cylinder balancing
XC60	2014	B4204T15	ECM	Special functions	Resetting adaptations for the throttle
XC60	2014	B4204T15	ECM	Special functions	Adaptation of neutral position sensor
XC60	2014	D5204T3	DIESEL ENG	Sys. Info.	
XC60	2014	D5204T3	DIESEL ENG	Read code	
XC60	2014	D5204T3	DIESEL ENG	Clear code	
XC60	2014	D5204T3	DIESEL ENG	Data stream	
XC60	2014	D5204T3	DIESEL ENG	Actuation	
XC60	2014	D5204T3	DIESEL ENG	Freeze frame	
XC60	2014	D5204T3	DIESEL ENG	Special functions	Resetting counter particle filter
XC60	2014	D5204T3	DIESEL ENG	Special functions	Checking injectors
XC60	2014	D5204T3	DIESEL ENG	Special functions	Adaptation of throttle module
XC60	2014	D5204T3	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2014	D5204T3	DIESEL ENG	Special functions	Checking the oil level
XC60	2014	D5244T11	DIESEL ENG	Sys. Info.	
XC60	2014	D5244T11	DIESEL ENG	Read code	
XC60	2014	D5244T11	DIESEL ENG	Clear code	
XC60	2014	D5244T11	DIESEL ENG	Data stream	
XC60	2014	D5244T11	DIESEL ENG	Actuation	
XC60	2014	D5244T11	DIESEL ENG	Freeze frame	
XC60	2014	D5244T11	DIESEL ENG	Special functions	Resetting counter particle filter
XC60	2014	D5244T11	DIESEL ENG	Special functions	Checking injectors
XC60	2014	D5244T11	DIESEL ENG	Special functions	Adaptation of throttle module
XC60	2014	D5244T11	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2014	D5244T11	DIESEL ENG	Special functions	Checking the oil level
XC60	2014	D5244T15	DIESEL ENG	Sys. Info.	
XC60	2014	D5244T15	DIESEL ENG	Read code	
XC60	2014	D5244T15	DIESEL ENG	Clear code	
XC60	2014	D5244T15	DIESEL ENG	Data stream	
XC60	2014	D5244T15	DIESEL ENG	Actuation	
XC60	2014	D5244T15	DIESEL ENG	Freeze frame	
XC60	2014	D5244T15	DIESEL ENG	Special functions	Resetting counter particle filter
XC60	2014	D5244T15	DIESEL ENG	Special functions	Checking injectors
XC60	2014	D5244T15	DIESEL ENG	Special functions	Adaptation of throttle module
XC60	2014	D5244T15	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2014	D5244T15	DIESEL ENG	Special functions	Checking the oil level
XC60	2014	D5244T17	DIESEL ENG	Sys. Info.	
XC60	2014	D5244T17	DIESEL ENG	Read code	
XC60	2014	D5244T17	DIESEL ENG	Clear code	
XC60	2014	D5244T17	DIESEL ENG	Data stream	
XC60	2014	D5244T17	DIESEL ENG	Actuation	
XC60	2014	D5244T17	DIESEL ENG	Freeze frame	
XC60	2014	D5244T17	DIESEL ENG	Special functions	Resetting counter particle filter
XC60	2014	D5244T17	DIESEL ENG	Special functions	Checking injectors
XC60	2014	D5244T17	DIESEL ENG	Special functions	Adaptation of throttle module
XC60	2014	D5244T17	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2014	D5244T17	DIESEL ENG	Special functions	Checking the oil level
XC60	2014	D5204T7	DIESEL ENG	Sys. Info.	
XC60	2014	D5204T7	DIESEL ENG	Read code	
XC60	2014	D5204T7	DIESEL ENG	Clear code	
XC60	2014	D5204T7	DIESEL ENG	Data stream	
XC60	2014	D5204T7	DIESEL ENG	Actuation	
XC60	2014	D5204T7	DIESEL ENG	Freeze frame	
XC60	2014	D5204T7	DIESEL ENG	Special functions	Resetting counter particle filter
XC60	2014	D5204T7	DIESEL ENG	Special functions	Checking injectors
XC60	2014	D5204T7	DIESEL ENG	Special functions	Adaptation of throttle module
XC60	2014	D5204T7	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2014	D5204T7	DIESEL ENG	Special functions	Checking the oil level

model	year	type	system	function	subfunction
XC60	2014	D4204T5	DIESEL ENG	Sys. Info.	
XC60	2014	D4204T5	DIESEL ENG	Read code	
XC60	2014	D4204T5	DIESEL ENG	Clear code	
XC60	2014	D4204T5	DIESEL ENG	Data stream	
XC60	2014	D4204T5	DIESEL ENG	Actuation	
XC60	2014	D4204T5	DIESEL ENG	Freeze frame	
XC60	2014	D4204T5	DIESEL ENG	Special functions	Test of fuel pressure regulation,high pressure side
XC60	2014	D4204T5	DIESEL ENG	Special functions	Test of fuel flow regulation valve
XC60	2014	D4204T5	DIESEL ENG	Special functions	Testing the fuel pressure control valve
XC60	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for fuel flow regulation valve
XC60	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for swirl damper
XC60	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for turbocharger control
XC60	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the EGR valve
XC60	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the diesel particle filter
XC60	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the particle filter differential pressure sensor
XC60	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for front heated oxygen sensor
XC60	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for rear heated oxygen sensor
XC60	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the injectors
XC60	2014	D4204T5	DIESEL ENG	Special functions	Adaptation of neutral position sensor
XC60	2014	MPS6	TCM	Sys. Info.	
XC60	2014	MPS6	TCM	Read code	
XC60	2014	MPS6	TCM	Clear code	
XC60	2014	MPS6	TCM	Data stream	
XC60	2014	MPS6	TCM	Actuation	
XC60	2014	MPS6	TCM	Freeze frame	
XC60	2014	MPS6	TCM	Special functions	Resetting adaptation
XC60	2014	MPS6	TCM	Special functions	Resetting the Transmission fluid change counter
XC60	2014	MPS6	TCM	Special functions	Calibration of gear indication
XC60	2014	MPS6	TCM	Special functions	Activating of gear indication
XC60	2014	MPS6	TCM	Special functions	Control module adaptation
XC60	2014	TF-80SD	TCM	Sys. Info.	
XC60	2014	TF-80SD	TCM	Read code	
XC60	2014	TF-80SD	TCM	Clear code	
XC60	2014	TF-80SD	TCM	Data stream	
XC60	2014	TF-80SD	TCM	Actuation	
XC60	2014	TF-80SD	TCM	Special functions	Resetting adaptation
XC60	2014	TF-80SD	TCM	Special functions	Resetting the Transmission fluid change counter
XC60	2014	TF-80SD	TCM	Special functions	Calibration of gear indication
XC60	2014	TF-80SD	TCM	Special functions	Activating of gear indication
XC60	2014	TF-80SD	TCM	Special functions	Control module adaptation
XC60	2014	TG-81SC	TCM	Sys. Info.	
XC60	2014	TG-81SC	TCM	Read code	
XC60	2014	TG-81SC	TCM	Clear code	
XC60	2014	TG-81SC	TCM	Data stream	
XC60	2014	TG-81SC	TCM	Actuation	
XC60	2014	TG-81SC	TCM	Freeze frame	
XC60	2014	TG-81SC	TCM	Special functions	Resetting adaptation
XC60	2014	TG-81SC	TCM	Special functions	Calibration of gear position sensor
XC60	2014	TG-81SC	TCM	Special functions	Activating gear indication
XC60	2014	TG-81SC	TCM	Special functions	Control module adaptation
XC60	2014	TG-81SC	BCM/ABS	Sys. Info.	
XC60	2014	TG-81SC	BCM/ABS	Read code	
XC60	2014	TG-81SC	BCM/ABS	Clear code	
XC60	2014	TG-81SC	BCM/ABS	Data stream	
XC60	2014	TG-81SC	BCM/ABS	Actuation	
XC60	2014	TG-81SC	BCM/ABS	Freeze frame	
XC60	2014	TG-81SC	BCM/ABS	Special functions	Calibration
XC60	2014	TG-81SC	SRS	Sys. Info.	
XC60	2014	TG-81SC	SRS	Read code	
XC60	2014	TG-81SC	SRS	Clear code	
XC60	2014	TG-81SC	SRS	Data stream	
XC60	2014	TG-81SC	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
XC60	2014	TG-81SC	SRS	Special functions	Checking the PAD-light
XC60	2014	TG-81SC	CEM	Sys. Info.	
XC60	2014	TG-81SC	CEM	Read code	
XC60	2014	TG-81SC	CEM	Clear code	
XC60	2014	TG-81SC	CEM	Data stream	
XC60	2014	TG-81SC	CEM	Actuation	
XC60	2014	TG-81SC	CEM	Special functions	Workshop test(TPMS)
XC60	2014	TG-81SC	CEM	Special functions	Reading off power supply position
XC60	2014	TG-81SC	CEM	Special functions	Read-out and resetting alco-lock
XC60	2014	TG-81SC	CEM	Special functions	Reading off alarm cause
XC60	2014	TG-81SC	CEM	Special functions	Activating wipers,front/rear
XC60	2014	TG-81SC	CEM	Special functions	Operating and initiating the roof hatch
XC60	2014	TG-81SC	CEM	Special functions	Restoring supplemental restraint system
XC60	2014	TG-81SC	CEM	Special functions	Setting day and night mode for the instrumentation
XC60	2014	TG-81SC	CEM	Special functions	Activating steering wheel heating



model	year	type	system	function	subfunction
XC60	2014	TG-81SC	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
XC60	2014	TG-81SC	CEM	Special functions	Readout of current from battery monitoring sensor
XC60	2014	TG-81SC	CEM	Special functions	Readout of information stand-by current
XC60	2014	TG-81SC	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
XC60	2014	TG-81SC	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
XC60	2014	TG-81SC	CEM	Special functions	Remote controlled immobilising,status
XC60	2014	TG-81SC	CEM	Special functions	Remote controlled immobilising,cause
XC60	2014	TG-81SC	DIM	Sys. Info.	
XC60	2014	TG-81SC	DIM	Read code	
XC60	2014	TG-81SC	DIM	Clear code	
XC60	2014	TG-81SC	DIM	Data stream	
XC60	2014	TG-81SC	DIM	Actuation	
XC60	2014	TG-81SC	PDM	Sys. Info.	
XC60	2014	TG-81SC	PDM	Read code	
XC60	2014	TG-81SC	PDM	Clear code	
XC60	2014	TG-81SC	PDM	Data stream	
XC60	2014	TG-81SC	PDM	Actuation	
XC60	2014	TG-81SC	PDM	Special functions	Initializing the window in the front door,
XC60	2014	TG-81SC	PDM	Special functions	Initializing the window in the rear door,
XC60	2014	TG-81SC	PDM	Special functions	Central lock motors,activating
XC60	2014	TG-81SC	PSM	Sys. Info.	
XC60	2014	TG-81SC	PSM	Read code	
XC60	2014	TG-81SC	PSM	Clear code	
XC60	2014	TG-81SC	PSM	Data stream	
XC60	2014	TG-81SC	PSM	Actuation	
XC60	2014	TG-81SC	PSM	Special functions	Programming the seat memory delay time
XC60	2014	TG-81SC	DDM	Sys. Info.	
XC60	2014	TG-81SC	DDM	Read code	
XC60	2014	TG-81SC	DDM	Clear code	
XC60	2014	TG-81SC	DDM	Data stream	
XC60	2014	TG-81SC	DDM	Actuation	
XC60	2014	TG-81SC	CCM	Sys. Info.	
XC60	2014	TG-81SC	CCM	Read code	
XC60	2014	TG-81SC	CCM	Clear code	
XC60	2014	TG-81SC	CCM	Data stream	
XC60	2014	TG-81SC	CCM	Actuation	
XC60	2014	TG-81SC	CCM	Special functions	Reading off programmed values
XC60	2014	TG-81SC	CCM	Special functions	Calibrating the Climate Control Module(CCM)
XC60	2014	TG-81SC	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
XC60	2014	TG-81SC	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
XC60	2014	TG-81SC	CCM	Special functions	Programming the evaporator,climate control module(CCM)
XC60	2014	TG-81SC	CCM	Special functions	Airflow setting in rear passenger compartment
XC60	2014	TG-81SC	CCM	Special functions	Programming the climate control module(CCM)
XC60	2014	TG-81SC	CCM	Special functions	Rear view mirror light sensitivity
XC60	2014	TG-81SC	AUD	Sys. Info.	
XC60	2014	TG-81SC	AUD	Read code	
XC60	2014	TG-81SC	AUD	Clear code	
XC60	2014	TG-81SC	AUD	Special functions	Checking headphone socket
XC60	2014	TG-81SC	AUD	Special functions	Checking loudspeakers
XC60	2014	TG-81SC	DEM	Sys. Info.	
XC60	2014	TG-81SC	DEM	Read code	
XC60	2014	TG-81SC	DEM	Clear code	
XC60	2014	TG-81SC	DEM	Data stream	
XC60	2014	TG-81SC	DEM	Special functions	Calibration of differential electronic module (DEM).
XC60	2014	TG-81SC	SAS	Sys. Info.	
XC60	2014	TG-81SC	SAS	Read code	
XC60	2014	TG-81SC	SAS	Clear code	
XC60	2014	TG-81SC	SAS	Data stream	
XC60	2014	TG-81SC	PHM	Sys. Info.	
XC60	2014	TG-81SC	PHM	Read code	
XC60	2014	TG-81SC	PHM	Clear code	
XC60	2014	TG-81SC	PHM	Data stream	
XC60	2014	TG-81SC	PHM	Actuation	
XC60	2014	TG-81SC	PHM	Special functions	Reinstalling the reserve battery
XC60	2014	TG-81SC	PAM	Sys. Info.	
XC60	2014	TG-81SC	PAM	Read code	
XC60	2014	TG-81SC	PAM	Clear code	
XC60	2014	TG-81SC	PAM	Data stream	
XC60	2014	TG-81SC	IAM	Sys. Info.	
XC60	2014	TG-81SC	IAM	Read code	
XC60	2014	TG-81SC	IAM	Clear code	
XC60	2014	TG-81SC	IAM	Data stream	

model	year	type	system	function	subfunction
XC60	2014	TG-81SC	SUM	Sys. Info.	
XC60	2014	TG-81SC	SUM	Read code	
XC60	2014	TG-81SC	SUM	Clear code	
XC60	2014	TG-81SC	SUM	Data stream	
XC60	2014	TG-81SC	PBM	Sys. Info.	
XC60	2014	TG-81SC	PBM	Read code	
XC60	2014	TG-81SC	PBM	Clear code	
XC60	2014	TG-81SC	PBM	Data stream	
XC60	2014	TG-81SC	PBM	Special functions	Calibration angle sensor
XC60	2014	TG-81SC	PBM	Special functions	Activation and service
XC60	2014	TG-81SC	PBM	Special functions	Resetting the clutch pedal counter
XC60	2014	TG-81SC	CPM	Sys. Info.	
XC60	2014	TG-81SC	CPM	Read code	
XC60	2014	TG-81SC	CPM	Clear code	
XC60	2014	TG-81SC	CPM	Data stream	
XC60	2014	TG-81SC	CPM	Special functions	Identification of the heater
XC60	2014	TG-81SC	KVM	Sys. Info.	
XC60	2014	TG-81SC	KVM	Read code	
XC60	2014	TG-81SC	KVM	Clear code	
XC60	2014	TG-81SC	KVM	Data stream	
XC60	2014	TG-81SC	KVM	Special functions	Checking all antennas
XC60	2014	TG-81SC	KVM	Special functions	Check the communication with the remote control receiver
XC60	2014	TG-81SC	KVM	Special functions	Remote control
XC60	2014	TG-81SC	KVM	Special functions	Test of internal memory
XC60	2014	TG-81SC	KVM	Special functions	Activation of quick-lock motors
XC60	2014	TG-81SC	POT	Sys. Info.	
XC60	2014	TG-81SC	POT	Read code	
XC60	2014	TG-81SC	POT	Clear code	
XC60	2014	TG-81SC	POT	Data stream	
XC60	2014	TG-81SC	FSM	Sys. Info.	
XC60	2014	TG-81SC	FSM	Read code	
XC60	2014	TG-81SC	FSM	Clear code	
XC60	2014	TG-81SC	FSM	Data stream	
XC60	2014	TG-81SC	FSM	Special functions	Calibration of radar and camera.
XC60	2014	TG-81SC	FSM	Special functions	Activating heating coil,FSM
XC60	2014	TG-81SC	FSM	Special functions	Activating of the indicator for visual collision warning
XC60	2014	TG-81SC	FSM	Special functions	Activating the internal test procedures
XC60	2014	TG-81SC	RDAR	Sys. Info.	
XC60	2014	TG-81SC	RDAR	Read code	
XC60	2014	TG-81SC	RDAR	Clear code	
XC60	2014	TG-81SC	CVM	Sys. Info.	
XC60	2014	TG-81SC	CVM	Read code	
XC60	2014	TG-81SC	CVM	Clear code	
XC60	2014	TG-81SC	DABM	Sys. Info.	
XC60	2014	TG-81SC	DABM	Read code	
XC60	2014	TG-81SC	DABM	Clear code	
XC60	2014	TG-81SC	PAC	Sys. Info.	
XC60	2014	TG-81SC	PAC	Read code	
XC60	2014	TG-81SC	PAC	Clear code	
XC60	2014	TG-81SC	PAC	Special functions	Parking camera,setting(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
XC60	2014	TG-81SC	PAC	Special functions	Parking camera,activating(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
XC60	2014	TG-81SC	TRM	Sys. Info.	
XC60	2014	TG-81SC	TRM	Read code	
XC60	2014	TG-81SC	TRM	Clear code	
XC60	2014	TG-81SC	TRM	Data stream	
XC60	2014	TG-81SC	PSCM	Sys. Info.	
XC60	2014	TG-81SC	PSCM	Read code	
XC60	2014	TG-81SC	PSCM	Clear code	
XC60	2014	TG-81SC	PSCM	Data stream	
XC60	2014	TG-81SC	ICM/IHU	Sys. Info.	
XC60	2014	TG-81SC	ICM/IHU	Read code	
XC60	2014	TG-81SC	ICM/IHU	Clear code	
XC60	2014	TG-81SC	ICM/IHU	Data stream	
XC60	2014	TG-81SC	TVM	Sys. Info.	
XC60	2014	TG-81SC	TVM	Read code	
XC60	2014	TG-81SC	TVM	Clear code	
XC60	2014	TG-81SC	RSE	Sys. Info.	
XC60	2014	TG-81SC	RSE	Read code	
XC60	2014	TG-81SC	RSE	Clear code	
XC60	2014	TG-81SC	RSE	Data stream	
XC60	2014	TG-81SC	RSE	Special functions	Checking AUK-panel.
XC60	2014	TG-81SC	SODR	Sys. Info.	
XC60	2014	TG-81SC	SODR	Read code	
XC60	2014	TG-81SC	SODR	Clear code	
XC60	2014	TG-81SC	SODR	Data stream	

model	year	type	system	function	subfunction
XC60	2014	TG-81SC	SODL	Sys. Info.	
XC60	2014	TG-81SC	SODL	Read code	
XC60	2014	TG-81SC	SODL	Clear code	
XC60	2014	TG-81SC	SODL	Data stream	
XC60	2015-2017	B6324S5	ECM	Sys. Info.	
XC60	2015-2017	B6324S5	ECM	Read code	
XC60	2015-2017	B6324S5	ECM	Clear code	
XC60	2015-2017	B6324S5	ECM	Data stream	
XC60	2015-2017	B6324S5	ECM	Actuation	
XC60	2015-2017	B6324S5	ECM	Special functions	Resetting the adaptation values
XC60	2015-2017	B6324S4	ECM	Sys. Info.	
XC60	2015-2017	B6324S4	ECM	Read code	
XC60	2015-2017	B6324S4	ECM	Clear code	
XC60	2015-2017	B6324S4	ECM	Data stream	
XC60	2015-2017	B6324S4	ECM	Actuation	
XC60	2015-2017	B6324S4	ECM	Special functions	Resetting the adaptation values
XC60	2015-2017	B6304T4	ECM	Sys. Info.	
XC60	2015-2017	B6304T4	ECM	Read code	
XC60	2015-2017	B6304T4	ECM	Clear code	
XC60	2015-2017	B6304T4	ECM	Data stream	
XC60	2015-2017	B6304T4	ECM	Actuation	
XC60	2015-2017	B6304T4	ECM	Freeze frame	
XC60	2015-2017	B6304T4	ECM	Special functions	Resetting the adaptation values
XC60	2015-2017	B4204T6	ECM	Sys. Info.	
XC60	2015-2017	B4204T6	ECM	Read code	
XC60	2015-2017	B4204T6	ECM	Clear code	
XC60	2015-2017	B4204T6	ECM	Data stream	
XC60	2015-2017	B4204T6	ECM	Actuation	
XC60	2015-2017	B4204T6	ECM	Special functions	Adaptation of the throttle unit
XC60	2015-2017	B4204T6	ECM	Special functions	Resetting the adaptation values
XC60	2015-2017	B4204T6	ECM	Special functions	Adaptation of oil level sensor
XC60	2015-2017	B4204T6	ECM	Special functions	Checking injectors
XC60	2015-2017	B4204T6	ECM	Special functions	Activation brake vacuum pump
XC60	2015-2017	B5254T14	ECM	Sys. Info.	
XC60	2015-2017	B5254T14	ECM	Read code	
XC60	2015-2017	B5254T14	ECM	Clear code	
XC60	2015-2017	B5254T14	ECM	Data stream	
XC60	2015-2017	B5254T14	ECM	Actuation	
XC60	2015-2017	B5254T14	ECM	Freeze frame	
XC60	2015-2017	B5254T14	ECM	Special functions	Resetting the fuel adaption values
XC60	2015-2017	B5254T14	ECM	Special functions	Resetting the flywheel adaptions
XC60	2015-2017	B5254T14	ECM	Special functions	Resetting the camshaft adaption values
XC60	2015-2017	B4204T9	ECM	Sys. Info.	
XC60	2015-2017	B4204T9	ECM	Read code	
XC60	2015-2017	B4204T9	ECM	Clear code	
XC60	2015-2017	B4204T9	ECM	Data stream	
XC60	2015-2017	B4204T9	ECM	Freeze frame	
XC60	2015-2017	B4204T9	ECM	Special functions	Test of fuel pressure regulation,low pressure side
XC60	2015-2017	B4204T9	ECM	Special functions	Test of fuel pressure regulation,high pressure side
XC60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations and wear counter for supercharger
XC60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
XC60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
XC60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
XC60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
XC60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for the fuel pump,low pressure side
XC60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for cylinder balancing
XC60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for the thrittle
XC60	2015-2017	B4204T9	ECM	Special functions	Adaptation of neutral position sensor
XC60	2015-2017	D5244T15	DIESEL ENG	Sys. Info.	
XC60	2015-2017	D5244T15	DIESEL ENG	Read code	
XC60	2015-2017	D5244T15	DIESEL ENG	Clear code	
XC60	2015-2017	D5244T15	DIESEL ENG	Data stream	
XC60	2015-2017	D5244T15	DIESEL ENG	Actuation	
XC60	2015-2017	D5244T15	DIESEL ENG	Freeze frame	
XC60	2015-2017	D5244T15	DIESEL ENG	Special functions	Resetting counter particle filter
XC60	2015-2017	D5244T15	DIESEL ENG	Special functions	Checking injectors
XC60	2015-2017	D5244T15	DIESEL ENG	Special functions	Adaptation of throttle module
XC60	2015-2017	D5244T15	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
XC60	2015-2017	D5244T15	DIESEL ENG	Special functions	Checking the oil level
XC60	2015-2017	D4204T5	DIESEL ENG	Sys. Info.	
XC60	2015-2017	D4204T5	DIESEL ENG	Read code	
XC60	2015-2017	D4204T5	DIESEL ENG	Clear code	
XC60	2015-2017	D4204T5	DIESEL ENG	Data stream	
XC60	2015-2017	D4204T5	DIESEL ENG	Actuation	
XC60	2015-2017	D4204T5	DIESEL ENG	Freeze frame	

model	year	type	system	function	subfunction
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Test of fuel pressure regulation,high pressure side
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Test of fuel flow regulation valve
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Testing the fuel pressure control valve
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for fuel flow regulation valve
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for swirl damper
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for turbocharger control
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the EGR valve
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the diesel particle filter
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the particle filter differential pressure sensor
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for front heated oxygen sensor
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for rear heated oxygen sensor
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the injectors
XC60	2015-2017	D4204T5	DIESEL ENG	Special functions	Adaptation of neutral position sensor
XC60	2015-2017	D4204T5	AUD	Sys. Info.	
XC60	2015-2017	D4204T5	AUD	Read code	
XC60	2015-2017	D4204T5	AUD	Clear code	
XC60	2015-2017	D4204T5	AUD	Special functions	Checking headphone socket
XC60	2015-2017	D4204T5	AUD	Special functions	Checking loudspeakers
XC60	2015-2017	D4204T5	ABS	Sys. Info.	
XC60	2015-2017	D4204T5	ABS	Read code	
XC60	2015-2017	D4204T5	ABS	Clear code	
XC60	2015-2017	D4204T5	ABS	Data stream	
XC60	2015-2017	D4204T5	ABS	Actuation	
XC60	2015-2017	D4204T5	ABS	Freeze frame	
XC60	2015-2017	D4204T5	ABS	Special functions	Calibration
XC60	2015-2017	D4204T5	CCM	Sys. Info.	
XC60	2015-2017	D4204T5	CCM	Read code	
XC60	2015-2017	D4204T5	CCM	Clear code	
XC60	2015-2017	D4204T5	CCM	Data stream	
XC60	2015-2017	D4204T5	CCM	Actuation	
XC60	2015-2017	D4204T5	CCM	Special functions	Reading off programmed values
XC60	2015-2017	D4204T5	CCM	Special functions	Calibrating the Climate Control Module(CCM)
XC60	2015-2017	D4204T5	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
XC60	2015-2017	D4204T5	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
XC60	2015-2017	D4204T5	CCM	Special functions	Programming the evaporator,climate control module(CCM)
XC60	2015-2017	D4204T5	CCM	Special functions	Airflow setting in rear passenger compartment
XC60	2015-2017	D4204T5	CCM	Special functions	Programming the climate control module(CCM)
XC60	2015-2017	D4204T5	CCM	Special functions	Rear view mirror light sensitivity
XC60	2015-2017	D4204T5	CEM	Sys. Info.	
XC60	2015-2017	D4204T5	CEM	Read code	
XC60	2015-2017	D4204T5	CEM	Clear code	
XC60	2015-2017	D4204T5	CEM	Data stream	
XC60	2015-2017	D4204T5	CEM	Actuation	
XC60	2015-2017	D4204T5	CEM	Special functions	Workshop test(TPMS)
XC60	2015-2017	D4204T5	CEM	Special functions	Reading off power supply position
XC60	2015-2017	D4204T5	CEM	Special functions	Read-out and resetting alco-lock
XC60	2015-2017	D4204T5	CEM	Special functions	Reading off alarm cause
XC60	2015-2017	D4204T5	CEM	Special functions	Activating wipers,front/rear
XC60	2015-2017	D4204T5	CEM	Special functions	Operating and initiating the roof hatch
XC60	2015-2017	D4204T5	CEM	Special functions	Restoring supplemental restraint system
XC60	2015-2017	D4204T5	CEM	Special functions	Setting day and night mode for the instrumentation
XC60	2015-2017	D4204T5	CEM	Special functions	Activating steering wheel heating
XC60	2015-2017	D4204T5	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
XC60	2015-2017	D4204T5	CEM	Special functions	Readout of current from battery monitoring sensor
XC60	2015-2017	D4204T5	CEM	Special functions	Readout of information stand-by current
XC60	2015-2017	D4204T5	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
XC60	2015-2017	D4204T5	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
XC60	2015-2017	D4204T5	CEM	Special functions	Remote controlled immobilising,status
XC60	2015-2017	D4204T5	CEM	Special functions	Remote controlled immobilising,cause
XC60	2015-2017	D4204T5	CPM	Sys. Info.	
XC60	2015-2017	D4204T5	CPM	Read code	
XC60	2015-2017	D4204T5	CPM	Clear code	
XC60	2015-2017	D4204T5	CPM	Data stream	
XC60	2015-2017	D4204T5	CPM	Special functions	Identification of the heater
XC60	2015-2017	D4204T5	CVM	Sys. Info.	
XC60	2015-2017	D4204T5	CVM	Read code	
XC60	2015-2017	D4204T5	CVM	Clear code	
XC60	2015-2017	D4204T5	DABM	Sys. Info.	
XC60	2015-2017	D4204T5	DABM	Read code	
XC60	2015-2017	D4204T5	DABM	Clear code	
XC60	2015-2017	D4204T5	DDM	Sys. Info.	

model	year	type	system	function	subfunction
XC60	2015-2017	D4204T5	DDM	Read code	
XC60	2015-2017	D4204T5	DDM	Clear code	
XC60	2015-2017	D4204T5	DDM	Data stream	
XC60	2015-2017	D4204T5	DDM	Actuation	
XC60	2015-2017	D4204T5	DDM	Special functions	Initializing the window in the front door.
XC60	2015-2017	D4204T5	DDM	Special functions	Initializing the window in the rear door.
XC60	2015-2017	D4204T5	DDM	Special functions	Central lock motors,activating
XC60	2015-2017	D4204T5	DEM	Sys. Info.	
XC60	2015-2017	D4204T5	DEM	Read code	
XC60	2015-2017	D4204T5	DEM	Clear code	
XC60	2015-2017	D4204T5	DEM	Data stream	
XC60	2015-2017	D4204T5	DEM	Special functions	Calibration of differential electronic module (DEM).
XC60	2015-2017	D4204T5	DIM	Sys. Info.	
XC60	2015-2017	D4204T5	DIM	Read code	
XC60	2015-2017	D4204T5	DIM	Clear code	
XC60	2015-2017	D4204T5	DIM	Data stream	
XC60	2015-2017	D4204T5	DIM	Special functions	Resetting the service reminder indicator (SRI)
XC60	2015-2017	D4204T5	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
XC60	2015-2017	D4204T5	DIM	Special functions	Read-out of fuel volumeDisplay of vehicle speed
XC60	2015-2017	D4204T5	DIM	Special functions	Programming seatbelt reminder in backseat
XC60	2015-2017	D4204T5	DIM	Special functions	Programming text message,seatbelt reminder
XC60	2015-2017	D4204T5	FSM	Sys. Info.	
XC60	2015-2017	D4204T5	FSM	Read code	
XC60	2015-2017	D4204T5	FSM	Clear code	
XC60	2015-2017	D4204T5	FSM	Data stream	
XC60	2015-2017	D4204T5	FSM	Special functions	Calibration of radar and camera.
XC60	2015-2017	D4204T5	FSM	Special functions	Activating heating coil,FSM
XC60	2015-2017	D4204T5	FSM	Special functions	Activating of the indicator for visual collision warning
XC60	2015-2017	D4204T5	FSM	Special functions	Activating the internal test procedures
XC60	2015-2017	D4204T5	HLDf	Sys. Info.	
XC60	2015-2017	D4204T5	HLDf	Read code	
XC60	2015-2017	D4204T5	HLDf	Clear code	
XC60	2015-2017	D4204T5	HLDf	Data stream	
XC60	2015-2017	D4204T5	IAM	Sys. Info.	
XC60	2015-2017	D4204T5	IAM	Read code	
XC60	2015-2017	D4204T5	IAM	Clear code	
XC60	2015-2017	D4204T5	IAM	Data stream	
XC60	2015-2017	D4204T5	ICM	Sys. Info.	
XC60	2015-2017	D4204T5	ICM	Read code	
XC60	2015-2017	D4204T5	ICM	Clear code	
XC60	2015-2017	D4204T5	ICM	Data stream	
XC60	2015-2017	D4204T5	ICM	Special functions	Communication on MOST
XC60	2015-2017	D4204T5	KVM	Sys. Info.	
XC60	2015-2017	D4204T5	KVM	Read code	
XC60	2015-2017	D4204T5	KVM	Clear code	
XC60	2015-2017	D4204T5	KVM	Data stream	
XC60	2015-2017	D4204T5	KVM	Special functions	Checking all antennas
XC60	2015-2017	D4204T5	KVM	Special functions	Check the communication with the remote control receiver
XC60	2015-2017	D4204T5	KVM	Special functions	Remote control
XC60	2015-2017	D4204T5	KVM	Special functions	Test of internal memory
XC60	2015-2017	D4204T5	KVM	Special functions	Activation of quick-lock motors
XC60	2015-2017	D4204T5	PAC	Sys. Info.	
XC60	2015-2017	D4204T5	PAC	Read code	
XC60	2015-2017	D4204T5	PAC	Clear code	
XC60	2015-2017	D4204T5	PAC	Special functions	Parking camera,setting(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
XC60	2015-2017	D4204T5	PAC	Special functions	Parking camera,activating(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
XC60	2015-2017	D4204T5	PAM	Sys. Info.	
XC60	2015-2017	D4204T5	PAM	Read code	
XC60	2015-2017	D4204T5	PAM	Clear code	
XC60	2015-2017	D4204T5	PAM	Data stream	
XC60	2015-2017	D4204T5	PBM	Sys. Info.	
XC60	2015-2017	D4204T5	PBM	Read code	
XC60	2015-2017	D4204T5	PBM	Clear code	
XC60	2015-2017	D4204T5	PBM	Data stream	
XC60	2015-2017	D4204T5	PBM	Special functions	Calibration angle sensor
XC60	2015-2017	D4204T5	PBM	Special functions	Activation and service
XC60	2015-2017	D4204T5	PBM	Special functions	Resetting the clutch pedal counter
XC60	2015-2017	D4204T5	PDM	Sys. Info.	
XC60	2015-2017	D4204T5	PDM	Read code	
XC60	2015-2017	D4204T5	PDM	Clear code	
XC60	2015-2017	D4204T5	PDM	Data stream	
XC60	2015-2017	D4204T5	PDM	Actuation	
XC60	2015-2017	D4204T5	PDM	Special functions	Initializing the window in the front door
XC60	2015-2017	D4204T5	PDM	Special functions	Initializing the window in the rear door

model	year	type	system	function	subfunction
XC60	2015-2017	D4204T5	PDM	Special functions	Central lock motors,activating
XC60	2015-2017	D4204T5	PHM	Sys. Info.	
XC60	2015-2017	D4204T5	PHM	Read code	
XC60	2015-2017	D4204T5	PHM	Clear code	
XC60	2015-2017	D4204T5	PHM	Data stream	
XC60	2015-2017	D4204T5	PHM	Special functions	Reinstalling the reserve battery
XC60	2015-2017	D4204T5	POT	Sys. Info.	
XC60	2015-2017	D4204T5	POT	Read code	
XC60	2015-2017	D4204T5	POT	Clear code	
XC60	2015-2017	D4204T5	POT	Data stream	
XC60	2015-2017	D4204T5	POT	Special functions	Activation of boot lid opening/closing
XC60	2015-2017	D4204T5	POT	Special functions	Resetting the learned maximum opening angle
XC60	2015-2017	D4204T5	PSCM	Sys. Info.	
XC60	2015-2017	D4204T5	PSCM	Read code	
XC60	2015-2017	D4204T5	PSCM	Clear code	
XC60	2015-2017	D4204T5	PSCM	Data stream	
XC60	2015-2017	D4204T5	PSM	Sys. Info.	
XC60	2015-2017	D4204T5	PSM	Read code	
XC60	2015-2017	D4204T5	PSM	Clear code	
XC60	2015-2017	D4204T5	PSM	Data stream	
XC60	2015-2017	D4204T5	PSM	Actuation	
XC60	2015-2017	D4204T5	PSM	Special functions	Programming the seat memory delay time
XC60	2015-2017	D4204T5	RDAR	Sys. Info.	
XC60	2015-2017	D4204T5	RDAR	Read code	
XC60	2015-2017	D4204T5	RDAR	Clear code	
XC60	2015-2017	D4204T5	RSE	Sys. Info.	
XC60	2015-2017	D4204T5	RSE	Read code	
XC60	2015-2017	D4204T5	RSE	Clear code	
XC60	2015-2017	D4204T5	RSE	Data stream	
XC60	2015-2017	D4204T5	RSE	Special functions	Checking AUK-panel.
XC60	2015-2017	D4204T5	SAS	Sys. Info.	
XC60	2015-2017	D4204T5	SAS	Read code	
XC60	2015-2017	D4204T5	SAS	Clear code	
XC60	2015-2017	D4204T5	SAS	Data stream	
XC60	2015-2017	D4204T5	SODL	Sys. Info.	
XC60	2015-2017	D4204T5	SODL	Read code	
XC60	2015-2017	D4204T5	SODL	Clear code	
XC60	2015-2017	D4204T5	SODL	Data stream	
XC60	2015-2017	D4204T5	SRS	Sys. Info.	
XC60	2015-2017	D4204T5	SRS	Read code	
XC60	2015-2017	D4204T5	SRS	Clear code	
XC60	2015-2017	D4204T5	SRS	Data stream	
XC60	2015-2017	D4204T5	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
XC60	2015-2017	D4204T5	SRS	Special functions	Checking the PAD-light
XC60	2015-2017	D4204T5	SUB	Sys. Info.	
XC60	2015-2017	D4204T5	SUB	Read code	
XC60	2015-2017	D4204T5	SUB	Clear code	
XC60	2015-2017	D4204T5	SUB	Data stream	
XC60	2015-2017	D4204T5	SUB	Special functions	Request for self-test
XC60	2015-2017	D4204T5	SUM	Sys. Info.	
XC60	2015-2017	D4204T5	SUM	Read code	
XC60	2015-2017	D4204T5	SUM	Clear code	
XC60	2015-2017	D4204T5	SUM	Data stream	
XC60	2015-2017	D4204T5	SUM	Special functions	Calibration
XC60	2015-2017	D4204T5	TCM	Sys. Info.	
XC60	2015-2017	D4204T5	TCM	Read code	
XC60	2015-2017	D4204T5	TCM	Clear code	
XC60	2015-2017	D4204T5	TCM	Data stream	
XC60	2015-2017	D4204T5	TCM	Freeze frame	
XC60	2015-2017	D4204T5	TCM	Special functions	Resetting adaptation
XC60	2015-2017	D4204T5	TCM	Special functions	Resetting the Transmission fluid change counter
XC60	2015-2017	D4204T5	TCM	Special functions	Calibration of gear indicationActivating of gear indication
XC60	2015-2017	D4204T5	TCM	Special functions	Activating of gear indication
XC60	2015-2017	D4204T5	TCM	Special functions	Control module adaptation
XC60	2015-2017	D4204T5	TRM	Sys. Info.	
XC60	2015-2017	D4204T5	TRM	Read code	
XC60	2015-2017	D4204T5	TRM	Clear code	
XC60	2015-2017	D4204T5	TRM	Data stream	
XC60	2015-2017	D4204T5	TVM	Sys. Info.	
XC60	2015-2017	D4204T5	TVM	Read code	
XC60	2015-2017	D4204T5	TVM	Clear code	
V60	2011 - 2012	D4204T5	General Service	Special functions	Resetting the SRL(Service Reminder Lamp)to zero
V60	2011 - 2012	B5254T6	ECM	Sys. Info.	
V60	2011 - 2012	B5254T6	ECM	Read code	
V60	2011 - 2012	B5254T6	ECM	Clear code	
V60	2011 - 2012	B5254T6	ECM	Data stream	

model	year	type	system	function	subfunction
V60	2011 - 2012	B5254T6	ECM	Actuation	
V60	2011 - 2012	B5254T6	ECM	Special functions	Adaptation of the throttle unit
V60	2011 - 2012	B5254T10	ECM	Sys. Info.	
V60	2011 - 2012	B5254T10	ECM	Read code	
V60	2011 - 2012	B5254T10	ECM	Clear code	
V60	2011 - 2012	B5254T10	ECM	Data stream	
V60	2011 - 2012	B5254T10	ECM	Actuation	
V60	2011 - 2012	B5254T10	ECM	Special functions	Adaptation of the throttle unit
V60	2011 - 2012	B8444S	ECM	Sys. Info.	
V60	2011 - 2012	B8444S	ECM	Read code	
V60	2011 - 2012	B8444S	ECM	Clear code	
V60	2011 - 2012	B8444S	ECM	Data stream	
V60	2011 - 2012	B8444S	ECM	Actuation	
V60	2011 - 2012	B8444S	ECM	Special functions	Resetting the adaptation values
V60	2011 - 2012	B6304T2	ECM	Sys. Info.	
V60	2011 - 2012	B6304T2	ECM	Read code	
V60	2011 - 2012	B6304T2	ECM	Clear code	
V60	2011 - 2012	B6304T2	ECM	Data stream	
V60	2011 - 2012	B6304T2	ECM	Actuation	
V60	2011 - 2012	B6304T2	ECM	Special functions	Resetting the adaptation values
V60	2011 - 2012	B6324S	ECM	Sys. Info.	
V60	2011 - 2012	B6324S	ECM	Read code	
V60	2011 - 2012	B6324S	ECM	Clear code	
V60	2011 - 2012	B6324S	ECM	Data stream	
V60	2011 - 2012	B6324S	ECM	Actuation	
V60	2011 - 2012	B6324S	ECM	Special functions	Resetting the adaptation values
V60	2011 - 2012	B6324S2	ECM	Sys. Info.	
V60	2011 - 2012	B6324S2	ECM	Read code	
V60	2011 - 2012	B6324S2	ECM	Clear code	
V60	2011 - 2012	B6324S2	ECM	Data stream	
V60	2011 - 2012	B6324S2	ECM	Actuation	
V60	2011 - 2012	B6324S2	ECM	Special functions	Resetting the adaptation values
V60	2011 - 2012	D5244T5	Diesel Eng	Sys. Info.	
V60	2011 - 2012	D5244T5	Diesel Eng	Read code	
V60	2011 - 2012	D5244T5	Diesel Eng	Clear code	
V60	2011 - 2012	D5244T5	Diesel Eng	Data stream	
V60	2011 - 2012	D5244T5	Diesel Eng	Actuation	
V60	2011 - 2012	D5244T5	Diesel Eng	Special functions	Resetting counter particle filter
V60	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of differential pressure sensor particle filter
V60	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of throttle module
V60	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of swivel channel throttle
V60	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of mass airflow sensor
V60	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of turbo control motor
V60	2011 - 2012	D5244T5	Diesel Eng	Special functions	Adaptation of fuel pressure control valve
V60	2011 - 2012	D5244T5	Diesel Eng	Special functions	Combustion of soot particles
V60	2011 - 2012	D5244T16	Diesel Eng	Sys. Info.	
V60	2011 - 2012	D5244T16	Diesel Eng	Read code	
V60	2011 - 2012	D5244T16	Diesel Eng	Clear code	
V60	2011 - 2012	D5244T16	Diesel Eng	Data stream	
V60	2011 - 2012	D5244T16	Diesel Eng	Actuation	
V60	2011 - 2012	D5244T16	Diesel Eng	Special functions	Resetting counter particle filter
V60	2011 - 2012	D5244T16	Diesel Eng	Special functions	Resetting adaptation
V60	2011 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of throttle module
V60	2011 - 2012	D5244T16	Diesel Eng	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60	2011 - 2012	D5244T16	Diesel Eng	Special functions	Combustion of soot particles
V60	2011 - 2012	TF-80SC	TCM	Sys. Info.	
V60	2011 - 2012	TF-80SC	TCM	Read code	
V60	2011 - 2012	TF-80SC	TCM	Clear code	
V60	2011 - 2012	TF-80SC	TCM	Data stream	
V60	2011 - 2012	TF-80SC	TCM	Actuation	
V60	2011 - 2012	TF-80SC	TCM	Freeze frame	
V60	2011 - 2012	TF-80SC	TCM	Special functions	Resetting the adaptation
V60	2011 - 2012	TF-80SC	TCM	Special functions	Calibration of position sensor
V60	2011 - 2012	TF-80SC AWD	TCM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	TCM	Read code	
V60	2011 - 2012	TF-80SC AWD	TCM	Clear code	
V60	2011 - 2012	TF-80SC AWD	TCM	Data stream	
V60	2011 - 2012	TF-80SC AWD	TCM	Actuation	
V60	2011 - 2012	TF-80SC AWD	TCM	Freeze frame	
V60	2011 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the adaptation
V60	2011 - 2012	TF-80SC AWD	TCM	Special functions	Calibration of position sensor
V60	2011 - 2012	TF-80SC AWD	TCM	Special functions	Resetting the counter for Gearbox oil Change
V60	2011 - 2012	TF-80SC AWD	ABS	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	ABS	Read code	
V60	2011 - 2012	TF-80SC AWD	ABS	Clear code	
V60	2011 - 2012	TF-80SC AWD	ABS	Data stream	
V60	2011 - 2012	TF-80SC AWD	ABS	Actuation	
V60	2011 - 2012	TF-80SC AWD	ABS	Freeze frame	

model	year	type	system	function	subfunction
V60	2011 - 2012	TF-80SC AWD	ABS	Special functions	Calibration
V60	2011 - 2012	TF-80SC AWD	SRS	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	SRS	Read code	
V60	2011 - 2012	TF-80SC AWD	SRS	Clear code	
V60	2011 - 2012	TF-80SC AWD	SRS	Data stream	
V60	2011 - 2012	TF-80SC AWD	SRS	Special functions	Calibrating the occupant weight sensor
V60	2011 - 2012	TF-80SC AWD	SRS	Special functions	Checking the PAD-light
V60	2011 - 2012	TF-80SC AWD	CEM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	CEM	Read code	
V60	2011 - 2012	TF-80SC AWD	CEM	Clear code	
V60	2011 - 2012	TF-80SC AWD	CEM	Data stream	
V60	2011 - 2012	TF-80SC AWD	CEM	Actuation	
V60	2011 - 2012	TF-80SC AWD	DIM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	DIM	Read code	
V60	2011 - 2012	TF-80SC AWD	DIM	Clear code	
V60	2011 - 2012	TF-80SC AWD	DIM	Data stream	
V60	2011 - 2012	TF-80SC AWD	DIM	Freeze frame	
V60	2011 - 2012	TF-80SC AWD	DIM	Special functions	Reseting the service reminder indicator(SRI)
V60	2011 - 2012	TF-80SC AWD	DIM	Special functions	Testing all displays and lamps in instrument
V60	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming the unit for temperature
V60	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming the units for the trip computer
V60	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming of clock
V60	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming the audible acknowledgement signal,seat belt reminder
V60	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming seatbelt reminder in backseat
V60	2011 - 2012	TF-80SC AWD	DIM	Special functions	Programming text message,seatbelt reminder
V60	2011 - 2012	TF-80SC AWD	PDM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	PDM	Read code	
V60	2011 - 2012	TF-80SC AWD	PDM	Clear code	
V60	2011 - 2012	TF-80SC AWD	PDM	Data stream	
V60	2011 - 2012	TF-80SC AWD	PDM	Actuation	
V60	2011 - 2012	TF-80SC AWD	PSM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	PSM	Read code	
V60	2011 - 2012	TF-80SC AWD	PSM	Clear code	
V60	2011 - 2012	TF-80SC AWD	PSM	Data stream	
V60	2011 - 2012	TF-80SC AWD	PSM	Actuation	
V60	2011 - 2012	TF-80SC AWD	DDM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	DDM	Read code	
V60	2011 - 2012	TF-80SC AWD	DDM	Clear code	
V60	2011 - 2012	TF-80SC AWD	DDM	Data stream	
V60	2011 - 2012	TF-80SC AWD	CCM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	CCM	Read code	
V60	2011 - 2012	TF-80SC AWD	CCM	Clear code	
V60	2011 - 2012	TF-80SC AWD	CCM	Data stream	
V60	2011 - 2012	TF-80SC AWD	CCM	Actuation	
V60	2011 - 2012	TF-80SC AWD	CCM	Special functions	Reading-out programmed parameters
V60	2011 - 2012	TF-80SC AWD	CCM	Special functions	Calibrating the Climate Control Module (CCM)
V60	2011 - 2012	TF-80SC AWD	CCM	Special functions	Identifying the Damper Motor Module (DMM)
V60	2011 - 2012	TF-80SC AWD	CCM	Special functions	Programming the climate control module (CCM)
V60	2011 - 2012	TF-80SC AWD	CCM	Special functions	Reading out electronic damper motor,actual/ preset range and tolerance limit
V60	2011 - 2012	TF-80SC AWD	CCM	Special functions	Programming the evaporator,climate control module (CCM)
V60	2011 - 2012	TF-80SC AWD	CCM	Special functions	Compartment fan afterblow
V60	2011 - 2012	TF-80SC AWD	CCM	Special functions	Airflow setting in rear passenger compartment
V60	2011 - 2012	TF-80SC AWD	AUD	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	AUD	Read code	
V60	2011 - 2012	TF-80SC AWD	AUD	Clear code	
V60	2011 - 2012	TF-80SC AWD	DEM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	DEM	Read code	
V60	2011 - 2012	TF-80SC AWD	DEM	Clear code	
V60	2011 - 2012	TF-80SC AWD	DEM	Data stream	
V60	2011 - 2012	TF-80SC AWD	DEM	Actuation	
V60	2011 - 2012	TF-80SC AWD	ICM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	ICM	Read code	
V60	2011 - 2012	TF-80SC AWD	ICM	Clear code	
V60	2011 - 2012	TF-80SC AWD	ICM	Data stream	
V60	2011 - 2012	TF-80SC AWD	ICM	Actuation	
V60	2011 - 2012	TF-80SC AWD	SAS	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	SAS	Read code	
V60	2011 - 2012	TF-80SC AWD	SAS	Clear code	
V60	2011 - 2012	TF-80SC AWD	SAS	Data stream	
V60	2011 - 2012	TF-80SC AWD	MMM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	MMM	Read code	
V60	2011 - 2012	TF-80SC AWD	MMM	Clear code	
V60	2011 - 2012	TF-80SC AWD	PAM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	PAM	Read code	
V60	2011 - 2012	TF-80SC AWD	PAM	Clear code	



model	year	type	system	function	subfunction
V60	2011 - 2012	TF-80SC AWD	PAM	Data stream	
V60	2011 - 2012	TF-80SC AWD	IAM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	IAM	Read code	
V60	2011 - 2012	TF-80SC AWD	IAM	Clear code	
V60	2011 - 2012	TF-80SC AWD	BPM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	BPM	Read code	
V60	2011 - 2012	TF-80SC AWD	BPM	Clear code	
V60	2011 - 2012	TF-80SC AWD	BPM	Data stream	
V60	2011 - 2012	TF-80SC AWD	SUM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	SUM	Read code	
V60	2011 - 2012	TF-80SC AWD	SUM	Clear code	
V60	2011 - 2012	TF-80SC AWD	SUM	Data stream	
V60	2011 - 2012	TF-80SC AWD	PBM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	PBM	Read code	
V60	2011 - 2012	TF-80SC AWD	PBM	Clear code	
V60	2011 - 2012	TF-80SC AWD	PBM	Data stream	
V60	2011 - 2012	TF-80SC AWD	PBM	Special functions	Calibration angle sensor
V60	2011 - 2012	TF-80SC AWD	PBM	Special functions	Activation and service
V60	2011 - 2012	TF-80SC AWD	PBM	Special functions	Resetting the clutch pedal counter
V60	2011 - 2012	TF-80SC AWD	CPM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	CPM	Read code	
V60	2011 - 2012	TF-80SC AWD	CPM	Clear code	
V60	2011 - 2012	TF-80SC AWD	CPM	Data stream	
V60	2011 - 2012	TF-80SC AWD	CPM	Actuation	
V60	2011 - 2012	TF-80SC AWD	HCM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	HCM	Read code	
V60	2011 - 2012	TF-80SC AWD	HCM	Clear code	
V60	2011 - 2012	TF-80SC AWD	HCM	Data stream	
V60	2011 - 2012	TF-80SC AWD	KVM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	KVM	Read code	
V60	2011 - 2012	TF-80SC AWD	KVM	Clear code	
V60	2011 - 2012	TF-80SC AWD	KVM	Data stream	
V60	2011 - 2012	TF-80SC AWD	HLDF	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	HLDF	Read code	
V60	2011 - 2012	TF-80SC AWD	HLDF	Clear code	
V60	2011 - 2012	TF-80SC AWD	HLDF	Data stream	
V60	2011 - 2012	TF-80SC AWD	POT	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	POT	Read code	
V60	2011 - 2012	TF-80SC AWD	POT	Clear code	
V60	2011 - 2012	TF-80SC AWD	POT	Data stream	
V60	2011 - 2012	TF-80SC AWD	AUU	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	AUU	Read code	
V60	2011 - 2012	TF-80SC AWD	AUU	Clear code	
V60	2011 - 2012	TF-80SC AWD	AUU	Data stream	
V60	2011 - 2012	TF-80SC AWD	FSM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	FSM	Read code	
V60	2011 - 2012	TF-80SC AWD	FSM	Clear code	
V60	2011 - 2012	TF-80SC AWD	FSM	Data stream	
V60	2011 - 2012	TF-80SC AWD	RDAR	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	RDAR	Read code	
V60	2011 - 2012	TF-80SC AWD	RDAR	Clear code	
V60	2011 - 2012	TF-80SC AWD	RDAR	Data stream	
V60	2011 - 2012	TF-80SC AWD	SUB	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	SUB	Read code	
V60	2011 - 2012	TF-80SC AWD	SUB	Clear code	
V60	2011 - 2012	TF-80SC AWD	SUB	Data stream	
V60	2011 - 2012	TF-80SC AWD	CVM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	CVM	Read code	
V60	2011 - 2012	TF-80SC AWD	CVM	Clear code	
V60	2011 - 2012	TF-80SC AWD	CVM	Data stream	
V60	2011 - 2012	TF-80SC AWD	DABM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	DABM	Read code	
V60	2011 - 2012	TF-80SC AWD	DABM	Clear code	
V60	2011 - 2012	TF-80SC AWD	DABM	Data stream	
V60	2011 - 2012	TF-80SC AWD	PAC	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	PAC	Read code	
V60	2011 - 2012	TF-80SC AWD	PAC	Clear code	
V60	2011 - 2012	TF-80SC AWD	PAC	Data stream	
V60	2011 - 2012	TF-80SC AWD	TRM	Sys. Info.	
V60	2011 - 2012	TF-80SC AWD	TRM	Read code	
V60	2011 - 2012	TF-80SC AWD	TRM	Clear code	
V60	2011 - 2012	TF-80SC AWD	TRM	Data stream	
V60		2013	B6304T4	ECM	Sys. Info.
V60		2013	B6304T4	ECM	Read code
V60		2013	B6304T4	ECM	Clear code
V60		2013	B6304T4	ECM	Data stream
V60		2013	B6304T4	ECM	Actuation
V60		2013	B6304T4	ECM	Freeze frame

model	year	type	system	function	subfunction
V60	2013	B6304T4	ECM	Special functions	Resetting the adaptation values
V60	2013	B4204T7	ECM	Sys. Info.	
V60	2013	B4204T7	ECM	Read code	
V60	2013	B4204T7	ECM	Clear code	
V60	2013	B4204T7	ECM	Data stream	
V60	2013	B4204T7	ECM	Actuation	
V60	2013	B4204T7	ECM	Freeze frame	
V60	2013	B4204T7	ECM	Special functions	Resetting the adaptation values
V60	2013	B4204T7	ECM	Special functions	Adaptation of oil level sensor
V60	2013	B4204T7	ECM	Special functions	Checking injectorsActivation brake vacuum pump
V60	2013	B4164T	ECM	Sys. Info.	
V60	2013	B4164T	ECM	Read code	
V60	2013	B4164T	ECM	Clear code	
V60	2013	B4164T	ECM	Data stream	
V60	2013	B4164T	ECM	Actuation	
V60	2013	B4164T	ECM	Freeze frame	
V60	2013	B4164T	ECM	Special functions	Resetting the adaptation values
V60	2013	B4164T	ECM	Special functions	Adaptation of oil level sensor
V60	2013	B4164T	ECM	Special functions	Adaptation of camshafts
V60	2013	B4164T	ECM	Special functions	Checking injectors
V60	2013	B4164T3	ECM	Sys. Info.	
V60	2013	B4164T3	ECM	Read code	
V60	2013	B4164T3	ECM	Clear code	
V60	2013	B4164T3	ECM	Data stream	
V60	2013	B4164T3	ECM	Actuation	
V60	2013	B4164T3	ECM	Freeze frame	
V60	2013	B4164T3	ECM	Special functions	Resetting the adaptation values
V60	2013	B4164T3	ECM	Special functions	Adaptation of oil level sensor
V60	2013	B4164T3	ECM	Special functions	Adaptation of camshafts
V60	2013	B4164T3	ECM	Special functions	Checking injectors
V60	2013	B4164T2	ECM	Sys. Info.	
V60	2013	B4164T2	ECM	Read code	
V60	2013	B4164T2	ECM	Clear code	
V60	2013	B4164T2	ECM	Data stream	
V60	2013	B4164T2	ECM	Actuation	
V60	2013	B4164T2	ECM	Freeze frame	
V60	2013	B4164T2	ECM	Special functions	Resetting the adaptation values
V60	2013	B4164T2	ECM	Special functions	Adaptation of oil level sensor
V60	2013	B4164T2	ECM	Special functions	Adaptation of camshafts
V60	2013	B4164T2	ECM	Special functions	Checking injectors
V60	2013	B5204T8	ECM	Sys. Info.	
V60	2013	B5204T8	ECM	Read code	
V60	2013	B5204T8	ECM	Clear code	
V60	2013	B5204T8	ECM	Data stream	
V60	2013	B5204T8	ECM	Actuation	
V60	2013	B5204T8	ECM	Freeze frame	
V60	2013	B5204T8	ECM	Special functions	Resetting the adaptation values
V60	2013	B5204T8	ECM	Special functions	Resetting the flywheel adaptions
V60	2013	B5204T8	ECM	Special functions	Resetting the camshaft adaption values
V60	2013	B5254T12	ECM	Sys. Info.	
V60	2013	B5254T12	ECM	Read code	
V60	2013	B5254T12	ECM	Clear code	
V60	2013	B5254T12	ECM	Data stream	
V60	2013	B5254T12	ECM	Actuation	
V60	2013	B5254T12	ECM	Freeze frame	
V60	2013	B5254T12	ECM	Special functions	Resetting the adaptation values
V60	2013	B5254T12	ECM	Special functions	Resetting the flywheel adaptions
V60	2013	B5254T12	ECM	Special functions	Resetting the camshaft adaption values
V60	2013	B5204T9	ECM	Sys. Info.	
V60	2013	B5204T9	ECM	Read code	
V60	2013	B5204T9	ECM	Clear code	
V60	2013	B5204T9	ECM	Data stream	
V60	2013	B5204T9	ECM	Actuation	
V60	2013	B5204T9	ECM	Freeze frame	
V60	2013	B5204T9	ECM	Special functions	Resetting the adaptation values
V60	2013	B5204T9	ECM	Special functions	Resetting the flywheel adaptions
V60	2013	B5204T9	ECM	Special functions	Resetting the camshaft adaption values
V60	2013	D5244T11	DIESEL ENG	Sys. Info.	
V60	2013	D5244T11	DIESEL ENG	Read code	
V60	2013	D5244T11	DIESEL ENG	Clear code	
V60	2013	D5244T11	DIESEL ENG	Data stream	
V60	2013	D5244T11	DIESEL ENG	Actuation	
V60	2013	D5244T11	DIESEL ENG	Freeze frame	
V60	2013	D5244T11	DIESEL ENG	Special functions	Resetting counter particle filter,
V60	2013	D5244T11	DIESEL ENG	Special functions	Checking injectors,
V60	2013	D5244T11	DIESEL ENG	Special functions	Adaptation of throttle module,
V60	2013	D5244T11	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60	2013	D5244T11	DIESEL ENG	Special functions	Checking the oil level,

model	year	type	system	function	subfunction	
V60		2013	D5204T3	DIESEL ENG	Sys. Info.	
V60		2013	D5204T3	DIESEL ENG	Read code	
V60		2013	D5204T3	DIESEL ENG	Clear code	
V60		2013	D5204T3	DIESEL ENG	Data stream	
V60		2013	D5204T3	DIESEL ENG	Actuation	
V60		2013	D5204T3	DIESEL ENG	Freeze frame	
V60		2013	D5204T3	DIESEL ENG	Special functions	Resetting counter particle filter,
V60		2013	D5204T3	DIESEL ENG	Special functions	Checking injectors,
V60		2013	D5204T3	DIESEL ENG	Special functions	Adaptation of throttle module,
V60		2013	D5204T3	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60		2013	D5204T3	DIESEL ENG	Special functions	Checking the oil level,
V60		2013	D5244T15	DIESEL ENG	Sys. Info.	
V60		2013	D5244T15	DIESEL ENG	Read code	
V60		2013	D5244T15	DIESEL ENG	Clear code	
V60		2013	D5244T15	DIESEL ENG	Data stream	
V60		2013	D5244T15	DIESEL ENG	Actuation	
V60		2013	D5244T15	DIESEL ENG	Freeze frame	
V60		2013	D5244T15	DIESEL ENG	Special functions	Resetting counter particle filter,
V60		2013	D5244T15	DIESEL ENG	Special functions	Checking injectors,
V60		2013	D5244T15	DIESEL ENG	Special functions	Adaptation of throttle module,
V60		2013	D5244T15	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60		2013	D5244T15	DIESEL ENG	Special functions	Checking the oil level,
V60		2013	D5204T7	DIESEL ENG	Sys. Info.	
V60		2013	D5204T7	DIESEL ENG	Read code	
V60		2013	D5204T7	DIESEL ENG	Clear code	
V60		2013	D5204T7	DIESEL ENG	Data stream	
V60		2013	D5204T7	DIESEL ENG	Actuation	
V60		2013	D5204T7	DIESEL ENG	Freeze frame	
V60		2013	D5204T7	DIESEL ENG	Special functions	Resetting counter particle filter,
V60		2013	D5204T7	DIESEL ENG	Special functions	Checking injectors,
V60		2013	D5204T7	DIESEL ENG	Special functions	Adaptation of throttle module,
V60		2013	D5204T7	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60		2013	D5204T7	DIESEL ENG	Special functions	Checking the oil level,
V60		2013	D5244T17	DIESEL ENG	Sys. Info.	
V60		2013	D5244T17	DIESEL ENG	Read code	
V60		2013	D5244T17	DIESEL ENG	Clear code	
V60		2013	D5244T17	DIESEL ENG	Data stream	
V60		2013	D5244T17	DIESEL ENG	Actuation	
V60		2013	D5244T17	DIESEL ENG	Freeze frame	
V60		2013	D5244T17	DIESEL ENG	Special functions	Resetting counter particle filter,
V60		2013	D5244T17	DIESEL ENG	Special functions	Checking injectors,
V60		2013	D5244T17	DIESEL ENG	Special functions	Adaptation of throttle module,
V60		2013	D5244T17	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60		2013	D5244T17	DIESEL ENG	Special functions	Checking the oil level,
V60		2013	D4162T	DIESEL ENG	Sys. Info.	
V60		2013	D4162T	DIESEL ENG	Read code	
V60		2013	D4162T	DIESEL ENG	Clear code	
V60		2013	D4162T	DIESEL ENG	Data stream	
V60		2013	D4162T	DIESEL ENG	Actuation	
V60		2013	D4162T	DIESEL ENG	Freeze frame	
V60		2013	D4162T	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V60		2013	D82PHEV	DIESEL ENG	Sys. Info.	
V60		2013	D82PHEV	DIESEL ENG	Read code	
V60		2013	D82PHEV	DIESEL ENG	Clear code	
V60		2013	D82PHEV	DIESEL ENG	Data stream	
V60		2013	D82PHEV	DIESEL ENG	Actuation	
V60		2013	D82PHEV	DIESEL ENG	Freeze frame	
V60		2013	D82PHEV	DIESEL ENG	Special functions	Checking injectors
V60		2013	D82PHEV	DIESEL ENG	Special functions	Checking the oil level
V60		2013	D82PHEV	DIESEL ENG	Special functions	Adjusting calculated oil level/oil quality
V60		2013	D82PHEV	DIESEL ENG	Special functions	Adaptation of differential pressure sensor particle filter
V60		2013	D82PHEV	DIESEL ENG	Special functions	Filling and bleeding the cooling system
V60		2013	MPS6	TCM	Sys. Info.	
V60		2013	MPS6	TCM	Read code	
V60		2013	MPS6	TCM	Clear code	
V60		2013	MPS6	TCM	Data stream	
V60		2013	MPS6	TCM	Freeze frame	
V60		2013	MPS6	TCM	Special functions	Resetting adaptation
V60		2013	MPS6	TCM	Special functions	Resetting the Transmission fluid change counter
V60		2013	MPS6	TCM	Special functions	Calibration of gear indication
V60		2013	MPS6	TCM	Special functions	Activating of gear indication
V60		2013	MPS6	TCM	Special functions	Control module adaptation
V60		2013	TF-80SC	TCM	Sys. Info.	
V60		2013	TF-80SC	TCM	Read code	
V60		2013	TF-80SC	TCM	Clear code	
V60		2013	TF-80SC	TCM	Data stream	
V60		2013	TF-80SC	TCM	Actuation	
V60		2013	TF-80SC	TCM	Freeze frame	

model	year	type	system	function	subfunction
V60	2013	TF-80SC	TCM	Special functions	Resetting adaptation
V60	2013	TF-80SC	TCM	Special functions	Resetting the Transmission fluid change counter
V60	2013	TF-80SC	TCM	Special functions	Calibration of gear indication
V60	2013	TF-80SC	TCM	Special functions	Activating of gear indication
V60	2013	TF-80SC	TCM	Special functions	Control module adaptation
V60	2013	TF-80SC AWD	TCM	Sys. Info.	
V60	2013	TF-80SC AWD	TCM	Read code	
V60	2013	TF-80SC AWD	TCM	Clear code	
V60	2013	TF-80SC AWD	TCM	Data stream	
V60	2013	TF-80SC AWD	TCM	Actuation	
V60	2013	TF-80SC AWD	TCM	Freeze frame	
V60	2013	TF-80SC AWD	TCM	Special functions	Resetting adaptation
V60	2013	TF-80SC AWD	TCM	Special functions	Resetting the Transmission fluid change counter
V60	2013	TF-80SC AWD	TCM	Special functions	Calibration of gear indication
V60	2013	TF-80SC AWD	TCM	Special functions	Activating of gear indication
V60	2013	TF-80SC AWD	TCM	Special functions	Control module adaptation
V60	2013	TF-80SD	TCM	Sys. Info.	
V60	2013	TF-80SD	TCM	Read code	
V60	2013	TF-80SD	TCM	Clear code	
V60	2013	TF-80SD	TCM	Data stream	
V60	2013	TF-80SD	TCM	Actuation	
V60	2013	TF-80SD	TCM	Freeze frame	
V60	2013	TF-80SD	TCM	Special functions	Resetting the adaptation
V60	2013	TF-80SD	TCM	Special functions	Calibration of position sensor
V60	2013	TF-80SD	TCM	Special functions	Resetting the counter for Gearbox oil Change
V60	2013	TF-80SD	TCM	Special functions	Activating gear indication
V60	2013	TF-80SD	TCM	Special functions	Control module adaptation
V60	2013	TF-80SD	BCM/ABS	Sys. Info.	
V60	2013	TF-80SD	BCM/ABS	Read code	
V60	2013	TF-80SD	BCM/ABS	Clear code	
V60	2013	TF-80SD	BCM/ABS	Data stream	
V60	2013	TF-80SD	BCM/ABS	Freeze frame	
V60	2013	TF-80SD	BCM/ABS	Special functions	Calibrating internal sensors,BCM
V60	2013	TF-80SD	BCM/ABS	Special functions	Calibration the inertial measurement unit (IMU)
V60	2013	TF-80SD	SRS	Sys. Info.	
V60	2013	TF-80SD	SRS	Read code	
V60	2013	TF-80SD	SRS	Clear code	
V60	2013	TF-80SD	SRS	Data stream	
V60	2013	TF-80SD	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
V60	2013	TF-80SD	SRS	Special functions	Checking the PAD-light
V60	2013	TF-80SD	CEM	Sys. Info.	
V60	2013	TF-80SD	CEM	Read code	
V60	2013	TF-80SD	CEM	Clear code	
V60	2013	TF-80SD	CEM	Data stream	
V60	2013	TF-80SD	CEM	Actuation	
V60	2013	TF-80SD	CEM	Special functions	Workshop test(TPMS)
V60	2013	TF-80SD	CEM	Special functions	Reading off power supply position
V60	2013	TF-80SD	CEM	Special functions	Read-out and resetting alco-lock
V60	2013	TF-80SD	CEM	Special functions	Activating wipers,front/rear
V60	2013	TF-80SD	CEM	Special functions	Operating and initating the roof hatch
V60	2013	TF-80SD	CEM	Special functions	Restoring supplemental restraint system
V60	2013	TF-80SD	CEM	Special functions	Setting day and night mode for the instrumentation
V60	2013	TF-80SD	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
V60	2013	TF-80SD	CEM	Special functions	Readout of current from battery monitoring sensor
V60	2013	TF-80SD	CEM	Special functions	Readout of information stand-by current
V60	2013	TF-80SD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
V60	2013	TF-80SD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
V60	2013	TF-80SD	CEM	Special functions	Remote controlled immobilising,status
V60	2013	TF-80SD	CEM	Special functions	Remote controlled immobilising,cause
V60	2013	TF-80SD	DIM	Sys. Info.	
V60	2013	TF-80SD	DIM	Read code	
V60	2013	TF-80SD	DIM	Clear code	
V60	2013	TF-80SD	DIM	Data stream	
V60	2013	TF-80SD	DIM	Freeze frame	
V60	2013	TF-80SD	DIM	Special functions	Resetting the service reminder indicator (SRI)
V60	2013	TF-80SD	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
V60	2013	TF-80SD	DIM	Special functions	Read-out of fuel volume
V60	2013	TF-80SD	DIM	Special functions	Resetting the odometer setting
V60	2013	TF-80SD	DIM	Special functions	Programming loudest audible signal,seat belt reminder
V60	2013	TF-80SD	DIM	Special functions	Programming seatbelt reminder in backseat
V60	2013	TF-80SD	DIM	Special functions	Programming text message,seatbelt reminder
V60	2013	TF-80SD	PDM	Sys. Info.	
V60	2013	TF-80SD	PDM	Read code	
V60	2013	TF-80SD	PDM	Clear code	

model	year	type	system	function	subfunction
V60	2013	TF-80SD	PDM	Data stream	
V60	2013	TF-80SD	PDM	Actuation	
V60	2013	TF-80SD	PDM	Special functions	Initializing the window in the front door.,
V60	2013	TF-80SD	PDM	Special functions	Initializing the window in the rear door.,
V60	2013	TF-80SD	PDM	Special functions	Central lock motors,activating
V60	2013	TF-80SD	PSM	Sys. Info.	
V60	2013	TF-80SD	PSM	Read code	
V60	2013	TF-80SD	PSM	Clear code	
V60	2013	TF-80SD	PSM	Data stream	
V60	2013	TF-80SD	PSM	Actuation	
V60	2013	TF-80SD	PSM	Special functions	Programming the seat memory delay time
V60	2013	TF-80SD	DDM	Special functions	Initializing the window in the front door.
V60	2013	TF-80SD	DDM	Special functions	Initializing the window in the rear door.
V60	2013	TF-80SD	DDM	Special functions	Central lock motors,activating
V60	2013	TF-80SD	CCM	Sys. Info.	
V60	2013	TF-80SD	CCM	Read code	
V60	2013	TF-80SD	CCM	Clear code	
V60	2013	TF-80SD	CCM	Data stream	
V60	2013	TF-80SD	CCM	Actuation	
V60	2013	TF-80SD	CCM	Special functions	Reading-out programmed parameters
V60	2013	TF-80SD	CCM	Special functions	Calibrating the Climate Control Module(CCM)
V60	2013	TF-80SD	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
V60	2013	TF-80SD	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
V60	2013	TF-80SD	CCM	Special functions	Programming the evaporator,climate control module(CCM)
V60	2013	TF-80SD	CCM	Special functions	Airflow setting in rear passenger compartment
V60	2013	TF-80SD	CCM	Special functions	Programming the climate control module(CCM)
V60	2013	TF-80SD	CCM	Special functions	Rear view mirror light sensitivity
V60	2013	TF-80SD	AUD	Special functions	Checking headphone socket
V60	2013	TF-80SD	AUD	Special functions	Checking loudspeakers
V60	2013	TF-80SD	DEM	Sys. Info.	
V60	2013	TF-80SD	DEM	Read code	
V60	2013	TF-80SD	DEM	Clear code	
V60	2013	TF-80SD	DEM	Data stream	
V60	2013	TF-80SD	DEM	Special functions	Calibration of differential electronic module (DEM).
V60	2013	TF-80SD	ICM	Sys. Info.	
V60	2013	TF-80SD	ICM	Read code	
V60	2013	TF-80SD	ICM	Clear code	
V60	2013	TF-80SD	ICM	Data stream	
V60	2013	TF-80SD	ICM	Actuation	
V60	2013	TF-80SD	SAS	Sys. Info.	
V60	2013	TF-80SD	SAS	Read code	
V60	2013	TF-80SD	SAS	Clear code	
V60	2013	TF-80SD	SAS	Data stream	
V60	2013	TF-80SD	SAS	Actuation	
V60	2013	TF-80SD	PAM	Sys. Info.	
V60	2013	TF-80SD	PAM	Read code	
V60	2013	TF-80SD	PAM	Clear code	
V60	2013	TF-80SD	PAM	Data stream	
V60	2013	TF-80SD	PAM	Special functions	Programming of Parking Assistance Module(PAM)
V60	2013	TF-80SD	IAM	Sys. Info.	
V60	2013	TF-80SD	IAM	Read code	
V60	2013	TF-80SD	IAM	Clear code	
V60	2013	TF-80SD	IAM	Data stream	
V60	2013	TF-80SD	SUM	Sys. Info.	
V60	2013	TF-80SD	SUM	Read code	
V60	2013	TF-80SD	SUM	Clear code	
V60	2013	TF-80SD	SUM	Data stream	
V60	2013	TF-80SD	SUM	Special functions	Calibration
V60	2013	TF-80SD	PBM	Sys. Info.	
V60	2013	TF-80SD	PBM	Read code	
V60	2013	TF-80SD	PBM	Clear code	
V60	2013	TF-80SD	PBM	Data stream	
V60	2013	TF-80SD	PBM	Special functions	Calibration angle sensor
V60	2013	TF-80SD	PBM	Special functions	Activation and service
V60	2013	TF-80SD	PBM	Special functions	Resetting the clutch pedal counter
V60	2013	TF-80SD	CPM	Sys. Info.	
V60	2013	TF-80SD	CPM	Read code	
V60	2013	TF-80SD	CPM	Clear code	
V60	2013	TF-80SD	CPM	Data stream	
V60	2013	TF-80SD	KVM	Sys. Info.	
V60	2013	TF-80SD	KVM	Read code	
V60	2013	TF-80SD	KVM	Clear code	
V60	2013	TF-80SD	KVM	Data stream	
V60	2013	TF-80SD	KVM	Special functions	Check the communication with the remote control receiver

model	year	type	system	function	subfunction
V60	2013	TF-80SD	KVM	Special functions	Remote control
V60	2013	TF-80SD	KVM	Special functions	Test of internal memory
V60	2013	TF-80SD	KVM	Special functions	Checking door handles
V60	2013	TF-80SD	KVM	Special functions	Checking all antennas
V60	2013	TF-80SD	FSM	Sys. Info.	
V60	2013	TF-80SD	FSM	Read code	
V60	2013	TF-80SD	FSM	Clear code	
V60	2013	TF-80SD	RDAR	Sys. Info.	
V60	2013	TF-80SD	RDAR	Read code	
V60	2013	TF-80SD	RDAR	Clear code	
V60	2013	TF-80SD	CVM	Sys. Info.	
V60	2013	TF-80SD	CVM	Read code	
V60	2013	TF-80SD	CVM	Clear code	
V60	2013	TF-80SD	DABM	Sys. Info.	
V60	2013	TF-80SD	DABM	Read code	
V60	2013	TF-80SD	DABM	Clear code	
V60	2013	TF-80SD	PAC	Sys. Info.	
V60	2013	TF-80SD	PAC	Read code	
V60	2013	TF-80SD	PAC	Clear code	
V60	2013	TF-80SD	TRM	Sys. Info.	
V60	2013	TF-80SD	TRM	Read code	
V60	2013	TF-80SD	TRM	Clear code	
V60	2013	TF-80SD	TRM	Data stream	
V60	2013	TF-80SD	PSCM	Sys. Info.	
V60	2013	TF-80SD	PSCM	Read code	
V60	2013	TF-80SD	PSCM	Clear code	
V60	2013	TF-80SD	PSCM	Data stream	
V60	2013	TF-80SD	PHM	Sys. Info.	
V60	2013	TF-80SD	PHM	Read code	
V60	2013	TF-80SD	PHM	Clear code	
V60	2013	TF-80SD	PHM	Data stream	
V60	2013	TF-80SD	PHM	Special functions	Reinstalling the reserve battery
V60	2013	TF-80SD	TVM	Sys. Info.	
V60	2013	TF-80SD	TVM	Read code	
V60	2013	TF-80SD	TVM	Clear code	
V60	2013	TF-80SD	TVM	Data stream	
V60	2013	TF-80SD	BECM	Sys. Info.	
V60	2013	TF-80SD	BECM	Read code	
V60	2013	TF-80SD	BECM	Clear code	
V60	2013	TF-80SD	BECM	Data stream	
V60	2014	B6304T4	ECM	Sys. Info.	
V60	2014	B6304T4	ECM	Read code	
V60	2014	B6304T4	ECM	Clear code	
V60	2014	B6304T4	ECM	Data stream	
V60	2014	B6304T4	ECM	Actuation	
V60	2014	B6304T4	ECM	Freeze frame	
V60	2014	B6304T4	ECM	Special functions	Resetting the adaptation values
V60	2014	B4204T7	ECM	Sys. Info.	
V60	2014	B4204T7	ECM	Read code	
V60	2014	B4204T7	ECM	Clear code	
V60	2014	B4204T7	ECM	Data stream	
V60	2014	B4204T7	ECM	Actuation	
V60	2014	B4204T7	ECM	Freeze frame	
V60	2014	B4204T7	ECM	Special functions	Resetting the adaptation values
V60	2014	B4204T7	ECM	Special functions	Adaptation of oil level sensor
V60	2014	B4204T7	ECM	Special functions	Checking injectorsActivation brake vacuum pump
V60	2014	B4164T	ECM	Sys. Info.	
V60	2014	B4164T	ECM	Read code	
V60	2014	B4164T	ECM	Clear code	
V60	2014	B4164T	ECM	Data stream	
V60	2014	B4164T	ECM	Actuation	
V60	2014	B4164T	ECM	Freeze frame	
V60	2014	B4164T	ECM	Special functions	Resetting the adaptation values
V60	2014	B4164T	ECM	Special functions	Adaptation of oil level sensor
V60	2014	B4164T	ECM	Special functions	Adaptation of camshafts
V60	2014	B4164T	ECM	Special functions	Checking injectors
V60	2014	B4164T3	ECM	Sys. Info.	
V60	2014	B4164T3	ECM	Read code	
V60	2014	B4164T3	ECM	Clear code	
V60	2014	B4164T3	ECM	Data stream	
V60	2014	B4164T3	ECM	Actuation	
V60	2014	B4164T3	ECM	Freeze frame	
V60	2014	B4164T3	ECM	Special functions	Resetting the adaptation values
V60	2014	B4164T3	ECM	Special functions	Adaptation of oil level sensor
V60	2014	B4164T3	ECM	Special functions	Adaptation of camshafts
V60	2014	B4164T3	ECM	Special functions	Checking injectors
V60	2014	B4164T2	ECM	Sys. Info.	
V60	2014	B4164T2	ECM	Read code	

model	year	type	system	function	subfunction
V60	2014	B4164T2	ECM	Clear code	
V60	2014	B4164T2	ECM	Data stream	
V60	2014	B4164T2	ECM	Actuation	
V60	2014	B4164T2	ECM	Freeze frame	
V60	2014	B4164T2	ECM	Special functions	Resetting the adaptation values
V60	2014	B4164T2	ECM	Special functions	Adaptation of oil level sensor
V60	2014	B4164T2	ECM	Special functions	Adaptation of camshafts
V60	2014	B4164T2	ECM	Special functions	Checking injectors
V60	2014	B5204T9	ECM	Sys. Info.	
V60	2014	B5204T9	ECM	Read code	
V60	2014	B5204T9	ECM	Clear code	
V60	2014	B5204T9	ECM	Data stream	
V60	2014	B5204T9	ECM	Actuation	
V60	2014	B5204T9	ECM	Freeze frame	
V60	2014	B5204T9	ECM	Special functions	Resetting the adaptation values
V60	2014	B5204T9	ECM	Special functions	Resetting the flywheel adaptions
V60	2014	B5204T9	ECM	Special functions	Resetting the camshaft adaption values
V60	2014	B5204T8	ECM	Sys. Info.	
V60	2014	B5204T8	ECM	Read code	
V60	2014	B5204T8	ECM	Clear code	
V60	2014	B5204T8	ECM	Data stream	
V60	2014	B5204T8	ECM	Actuation	
V60	2014	B5204T8	ECM	Freeze frame	
V60	2014	B5204T8	ECM	Special functions	Resetting the adaptation values
V60	2014	B5204T8	ECM	Special functions	Resetting the flywheel adaptions
V60	2014	B5204T8	ECM	Special functions	Resetting the camshaft adaption values
V60	2014	B4204T11	ECM	Sys. Info.	
V60	2014	B4204T11	ECM	Read code	
V60	2014	B4204T11	ECM	Clear code	
V60	2014	B4204T11	ECM	Data stream	
V60	2014	B4204T11	ECM	Freeze frame	
V60	2014	B4204T11	ECM	Special functions	Test of fuel pressure regulation,low pressure side
V60	2014	B4204T11	ECM	Special functions	Test of fuel pressure regulation,high pressure side
V60	2014	B4204T11	ECM	Special functions	Resetting adaptations and wear counter for supercharger
V60	2014	B4204T11	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
V60	2014	B4204T11	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
V60	2014	B4204T11	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
V60	2014	B4204T11	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
V60	2014	B4204T11	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
V60	2014	B4204T11	ECM	Special functions	Resetting adaptations for cylinder balancing
V60	2014	B4204T11	ECM	Special functions	Resetting adaptations for the thrittle
V60	2014	B4204T11	ECM	Special functions	Adaptation of neutral position sensor
V60	2014	B4204T9	ECM	Sys. Info.	
V60	2014	B4204T9	ECM	Read code	
V60	2014	B4204T9	ECM	Clear code	
V60	2014	B4204T9	ECM	Data stream	
V60	2014	B4204T9	ECM	Freeze frame	
V60	2014	B4204T9	ECM	Special functions	Test of fuel pressure regulation,low pressure side
V60	2014	B4204T9	ECM	Special functions	Test of fuel pressure regulation,high pressure side
V60	2014	B4204T9	ECM	Special functions	Resetting adaptations and wear counter for supercharger
V60	2014	B4204T9	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
V60	2014	B4204T9	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
V60	2014	B4204T9	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
V60	2014	B4204T9	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
V60	2014	B4204T9	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
V60	2014	B4204T9	ECM	Special functions	Resetting adaptations for cylinder balancing
V60	2014	B4204T9	ECM	Special functions	Resetting adaptations for the thrittle
V60	2014	B4204T9	ECM	Special functions	Adaptation of neutral position sensor
V60	2014	B4204T15	ECM	Sys. Info.	
V60	2014	B4204T15	ECM	Read code	
V60	2014	B4204T15	ECM	Clear code	
V60	2014	B4204T15	ECM	Data stream	
V60	2014	B4204T15	ECM	Freeze frame	
V60	2014	B4204T15	ECM	Special functions	Test of fuel pressure regulation,low pressure side
V60	2014	B4204T15	ECM	Special functions	Test of fuel pressure regulation,high pressure side
V60	2014	B4204T15	ECM	Special functions	Resetting adaptations and wear counter for supercharger
V60	2014	B4204T15	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
V60	2014	B4204T15	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
V60	2014	B4204T15	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
V60	2014	B4204T15	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust

model	year	type	system	function	subfunction
V60	2014	B4204T15	ECM	Special functions	Resetting adaptations for the fuel pump, low pressure side
V60	2014	B4204T15	ECM	Special functions	Resetting adaptations for cylinder balancing
V60	2014	B4204T15	ECM	Special functions	Resetting adaptations for the throttle
V60	2014	B4204T15	ECM	Special functions	Adaptation of neutral position sensor
V60	2014	D5204T3	DIESEL ENG	Sys. Info.	
V60	2014	D5204T3	DIESEL ENG	Read code	
V60	2014	D5204T3	DIESEL ENG	Clear code	
V60	2014	D5204T3	DIESEL ENG	Data stream	
V60	2014	D5204T3	DIESEL ENG	Actuation	
V60	2014	D5204T3	DIESEL ENG	Freeze frame	
V60	2014	D5204T3	DIESEL ENG	Special functions	Resetting counter particle filter,
V60	2014	D5204T3	DIESEL ENG	Special functions	Checking injectors,
V60	2014	D5204T3	DIESEL ENG	Special functions	Adaptation of throttle module,
V60	2014	D5204T3	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60	2014	D5204T3	DIESEL ENG	Special functions	Checking the oil level,
V60	2014	D5244T15	DIESEL ENG	Sys. Info.	
V60	2014	D5244T15	DIESEL ENG	Read code	
V60	2014	D5244T15	DIESEL ENG	Clear code	
V60	2014	D5244T15	DIESEL ENG	Data stream	
V60	2014	D5244T15	DIESEL ENG	Actuation	
V60	2014	D5244T15	DIESEL ENG	Freeze frame	
V60	2014	D5244T15	DIESEL ENG	Special functions	Resetting counter particle filter,
V60	2014	D5244T15	DIESEL ENG	Special functions	Checking injectors,
V60	2014	D5244T15	DIESEL ENG	Special functions	Adaptation of throttle module,
V60	2014	D5244T15	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60	2014	D5244T15	DIESEL ENG	Special functions	Checking the oil level,
V60	2014	D5204T7	DIESEL ENG	Sys. Info.	
V60	2014	D5204T7	DIESEL ENG	Read code	
V60	2014	D5204T7	DIESEL ENG	Clear code	
V60	2014	D5204T7	DIESEL ENG	Data stream	
V60	2014	D5204T7	DIESEL ENG	Actuation	
V60	2014	D5204T7	DIESEL ENG	Freeze frame	
V60	2014	D5204T7	DIESEL ENG	Special functions	Resetting counter particle filter,
V60	2014	D5204T7	DIESEL ENG	Special functions	Checking injectors,
V60	2014	D5204T7	DIESEL ENG	Special functions	Adaptation of throttle module,
V60	2014	D5204T7	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60	2014	D5204T7	DIESEL ENG	Special functions	Checking the oil level,
V60	2014	D5244T11	DIESEL ENG	Sys. Info.	
V60	2014	D5244T11	DIESEL ENG	Read code	
V60	2014	D5244T11	DIESEL ENG	Clear code	
V60	2014	D5244T11	DIESEL ENG	Data stream	
V60	2014	D5244T11	DIESEL ENG	Actuation	
V60	2014	D5244T11	DIESEL ENG	Freeze frame	
V60	2014	D5244T11	DIESEL ENG	Special functions	Resetting counter particle filter,
V60	2014	D5244T11	DIESEL ENG	Special functions	Checking injectors,
V60	2014	D5244T11	DIESEL ENG	Special functions	Adaptation of throttle module,
V60	2014	D5244T11	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60	2014	D5244T11	DIESEL ENG	Special functions	Checking the oil level,
V60	2014	D5244T17	DIESEL ENG	Sys. Info.	
V60	2014	D5244T17	DIESEL ENG	Read code	
V60	2014	D5244T17	DIESEL ENG	Clear code	
V60	2014	D5244T17	DIESEL ENG	Data stream	
V60	2014	D5244T17	DIESEL ENG	Actuation	
V60	2014	D5244T17	DIESEL ENG	Freeze frame	
V60	2014	D5244T17	DIESEL ENG	Special functions	Resetting counter particle filter,
V60	2014	D5244T17	DIESEL ENG	Special functions	Checking injectors,
V60	2014	D5244T17	DIESEL ENG	Special functions	Adaptation of throttle module,
V60	2014	D5244T17	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60	2014	D5244T17	DIESEL ENG	Special functions	Checking the oil level,
V60	2014	D4162T	DIESEL ENG	Sys. Info.	
V60	2014	D4162T	DIESEL ENG	Read code	
V60	2014	D4162T	DIESEL ENG	Clear code	
V60	2014	D4162T	DIESEL ENG	Data stream	
V60	2014	D4162T	DIESEL ENG	Actuation	
V60	2014	D4162T	DIESEL ENG	Freeze frame	
V60	2014	D4162T	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V60	2014	D82PHEV	DIESEL ENG	Sys. Info.	
V60	2014	D82PHEV	DIESEL ENG	Read code	
V60	2014	D82PHEV	DIESEL ENG	Clear code	
V60	2014	D82PHEV	DIESEL ENG	Data stream	
V60	2014	D82PHEV	DIESEL ENG	Actuation	
V60	2014	D82PHEV	DIESEL ENG	Freeze frame	
V60	2014	D82PHEV	DIESEL ENG	Special functions	Checking injectors
V60	2014	D82PHEV	DIESEL ENG	Special functions	Checking the oil level
V60	2014	D82PHEV	DIESEL ENG	Special functions	Adjusting calculated oil level/oil quality
V60	2014	D82PHEV	DIESEL ENG	Special functions	Adaptation of differential pressure sensor particle filter
V60	2014	D82PHEV	DIESEL ENG	Special functions	Filling and bleeding the cooling system



model	year	type	system	function	subfunction	
V60		2014	D4204T5	DIESEL ENG	Sys. Info.	
V60		2014	D4204T5	DIESEL ENG	Read code	
V60		2014	D4204T5	DIESEL ENG	Clear code	
V60		2014	D4204T5	DIESEL ENG	Data stream	
V60		2014	D4204T5	DIESEL ENG	Actuation	
V60		2014	D4204T5	DIESEL ENG	Freeze frame	
V60		2014	D4204T5	DIESEL ENG	Special functions	Test of fuel pressure regulation,high pressure side
V60		2014	D4204T5	DIESEL ENG	Special functions	Test of fuel flow regulation valve
V60		2014	D4204T5	DIESEL ENG	Special functions	Testing the fuel pressure control valve
V60		2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for fuel flow regulation valve
V60		2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for swirl damper
V60		2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for turbocharger control
V60		2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the EGR valve
V60		2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the diesel particle filter
V60		2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the particle filter differential pressure sensor
V60		2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for front heated oxygen sensor
V60		2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for rear heated oxygen sensor
V60		2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the injectors
V60		2014	D4204T5	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V60		2014	MPS6	TCM	Sys. Info.	
V60		2014	MPS6	TCM	Read code	
V60		2014	MPS6	TCM	Clear code	
V60		2014	MPS6	TCM	Data stream	
V60		2014	MPS6	TCM	Freeze frame	
V60		2014	MPS6	TCM	Special functions	Resetting adaptation
V60		2014	MPS6	TCM	Special functions	Resetting the Transmission fluid change counter
V60		2014	MPS6	TCM	Special functions	Calibration of gear indication
V60		2014	MPS6	TCM	Special functions	Activating of gear indication
V60		2014	MPS6	TCM	Special functions	Control module adaptation
V60		2014	TF-80SD	TCM	Sys. Info.	
V60		2014	TF-80SD	TCM	Read code	
V60		2014	TF-80SD	TCM	Clear code	
V60		2014	TF-80SD	TCM	Data stream	
V60		2014	TF-80SD	TCM	Actuation	
V60		2014	TF-80SD	TCM	Freeze frame	
V60		2014	TF-80SD	TCM	Special functions	Resetting adaptation
V60		2014	TF-80SD	TCM	Special functions	Resetting the Transmission fluid change counter
V60		2014	TF-80SD	TCM	Special functions	Calibration of gear indication
V60		2014	TF-80SD	TCM	Special functions	Activating of gear indication
V60		2014	TF-80SD	TCM	Special functions	Control module adaptation
V60		2014	TG-81SC	TCM	Sys. Info.	
V60		2014	TG-81SC	TCM	Read code	
V60		2014	TG-81SC	TCM	Clear code	
V60		2014	TG-81SC	TCM	Data stream	
V60		2014	TG-81SC	TCM	Actuation	
V60		2014	TG-81SC	TCM	Freeze frame	
V60		2014	TG-81SC	TCM	Special functions	Resetting adaptation
V60		2014	TG-81SC	TCM	Special functions	Calibration of gear position sensor
V60		2014	TG-81SC	TCM	Special functions	Activating gear indication
V60		2014	TG-81SC	TCM	Special functions	Control module adaptation
V60		2014	TG-81SC	BCM/ABS	Sys. Info.	
V60		2014	TG-81SC	BCM/ABS	Read code	
V60		2014	TG-81SC	BCM/ABS	Clear code	
V60		2014	TG-81SC	BCM/ABS	Data stream	
V60		2014	TG-81SC	BCM/ABS	Freeze frame	
V60		2014	TG-81SC	BCM/ABS	Special functions	Calibrating internal sensors,BCM
V60		2014	TG-81SC	BCM/ABS	Special functions	Calibration the inertial measurement unit (IMU)
V60		2014	TG-81SC	SRS	Sys. Info.	
V60		2014	TG-81SC	SRS	Read code	
V60		2014	TG-81SC	SRS	Clear code	
V60		2014	TG-81SC	SRS	Data stream	
V60		2014	TG-81SC	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
V60		2014	TG-81SC	SRS	Special functions	Checking the PAD-light
V60		2014	TG-81SC	CEM	Sys. Info.	
V60		2014	TG-81SC	CEM	Read code	
V60		2014	TG-81SC	CEM	Clear code	
V60		2014	TG-81SC	CEM	Data stream	
V60		2014	TG-81SC	CEM	Actuation	
V60		2014	TG-81SC	CEM	Special functions	Workshop test(TPMS)
V60		2014	TG-81SC	CEM	Special functions	Reading off power supply position
V60		2014	TG-81SC	CEM	Special functions	Read-out and resetting alco-lock
V60		2014	TG-81SC	CEM	Special functions	Reading off alarm cause
V60		2014	TG-81SC	CEM	Special functions	Activating wipers,front/rear
V60		2014	TG-81SC	CEM	Special functions	Operating and initiating the roof hatch
V60		2014	TG-81SC	CEM	Special functions	Restoring supplemental restraint system
V60		2014	TG-81SC	CEM	Special functions	Setting day and night mode for the instrumentation
V60		2014	TG-81SC	CEM	Special functions	Activating steering wheel heating

model	year	type	system	function	subfunction
V60	2014	TG-81SC	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
V60	2014	TG-81SC	CEM	Special functions	Readout of current from battery monitoring sensor
V60	2014	TG-81SC	CEM	Special functions	Readout of information stand-by current
V60	2014	TG-81SC	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
V60	2014	TG-81SC	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
V60	2014	TG-81SC	CEM	Special functions	Remote controlled immobilising,status
V60	2014	TG-81SC	CEM	Special functions	Remote controlled immobilising,cause
V60	2014	TG-81SC	DIM	Sys. Info.	
V60	2014	TG-81SC	DIM	Read code	
V60	2014	TG-81SC	DIM	Clear code	
V60	2014	TG-81SC	DIM	Data stream	
V60	2014	TG-81SC	PDM	Sys. Info.	
V60	2014	TG-81SC	PDM	Read code	
V60	2014	TG-81SC	PDM	Clear code	
V60	2014	TG-81SC	PDM	Data stream	
V60	2014	TG-81SC	PDM	Actuation	
V60	2014	TG-81SC	PSM	Sys. Info.	
V60	2014	TG-81SC	PSM	Read code	
V60	2014	TG-81SC	PSM	Clear code	
V60	2014	TG-81SC	PSM	Data stream	
V60	2014	TG-81SC	PSM	Actuation	
V60	2014	TG-81SC	PSM	Special functions	Programming the seat memory delay time
V60	2014	TG-81SC	DDM	Special functions	Initializing the window in the front door.
V60	2014	TG-81SC	DDM	Special functions	Initializing the window in the rear door.
V60	2014	TG-81SC	DDM	Special functions	Central lock motors,activating
V60	2014	TG-81SC	CCM	Sys. Info.	
V60	2014	TG-81SC	CCM	Read code	
V60	2014	TG-81SC	CCM	Clear code	
V60	2014	TG-81SC	CCM	Data stream	
V60	2014	TG-81SC	CCM	Actuation	
V60	2014	TG-81SC	CCM	Special functions	Reading off programmed values
V60	2014	TG-81SC	CCM	Special functions	Calibrating the Climate Control Module(CCM)
V60	2014	TG-81SC	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
V60	2014	TG-81SC	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
V60	2014	TG-81SC	CCM	Special functions	Programming the evaporator,climate control module(CCM)
V60	2014	TG-81SC	CCM	Special functions	Airflow setting in rear passenger compartment
V60	2014	TG-81SC	CCM	Special functions	Programming the climate control module(CCM)
V60	2014	TG-81SC	CCM	Special functions	Rear view mirror light sensitivity
V60	2014	TG-81SC	AUD	Sys. Info.	
V60	2014	TG-81SC	AUD	Read code	
V60	2014	TG-81SC	AUD	Clear code	
V60	2014	TG-81SC	AUD	Special functions	Checking headphone socket
V60	2014	TG-81SC	AUD	Special functions	Checking loudspeakers
V60	2014	TG-81SC	DEM	Sys. Info.	
V60	2014	TG-81SC	DEM	Read code	
V60	2014	TG-81SC	DEM	Clear code	
V60	2014	TG-81SC	DEM	Data stream	
V60	2014	TG-81SC	DEM	Special functions	Calibration of differential electronic module (DEM).
V60	2014	TG-81SC	SAS	Sys. Info.	
V60	2014	TG-81SC	SAS	Read code	
V60	2014	TG-81SC	SAS	Clear code	
V60	2014	TG-81SC	SAS	Data stream	
V60	2014	TG-81SC	SAS	Actuation	
V60	2014	TG-81SC	PAM	Sys. Info.	
V60	2014	TG-81SC	PAM	Read code	
V60	2014	TG-81SC	PAM	Clear code	
V60	2014	TG-81SC	PAM	Data stream	
V60	2014	TG-81SC	IAM	Sys. Info.	
V60	2014	TG-81SC	IAM	Read code	
V60	2014	TG-81SC	IAM	Clear code	
V60	2014	TG-81SC	IAM	Data stream	
V60	2014	TG-81SC	SUM	Sys. Info.	
V60	2014	TG-81SC	SUM	Read code	
V60	2014	TG-81SC	SUM	Clear code	
V60	2014	TG-81SC	SUM	Data stream	
V60	2014	TG-81SC	SUM	Special functions	Calibration
V60	2014	TG-81SC	PBM	Sys. Info.	
V60	2014	TG-81SC	PBM	Read code	
V60	2014	TG-81SC	PBM	Clear code	
V60	2014	TG-81SC	PBM	Data stream	
V60	2014	TG-81SC	PBM	Special functions	Calibration angle sensor
V60	2014	TG-81SC	PBM	Special functions	Activation and service

model	year	type	system	function	subfunction
V60	2014	TG-81SC	PBM	Special functions	Resetting the clutch pedal counter
V60	2014	TG-81SC	CPM	Sys. Info.	
V60	2014	TG-81SC	CPM	Read code	
V60	2014	TG-81SC	CPM	Clear code	
V60	2014	TG-81SC	CPM	Data stream	
V60	2014	TG-81SC	KVM	Sys. Info.	
V60	2014	TG-81SC	KVM	Read code	
V60	2014	TG-81SC	KVM	Clear code	
V60	2014	TG-81SC	KVM	Data stream	
V60	2014	TG-81SC	KVM	Special functions	Check the communication with the remote control receiver
V60	2014	TG-81SC	KVM	Special functions	Remote control
V60	2014	TG-81SC	KVM	Special functions	Test of internal memory
V60	2014	TG-81SC	KVM	Special functions	Checking all antennas
V60	2014	TG-81SC	FSM	Sys. Info.	
V60	2014	TG-81SC	FSM	Read code	
V60	2014	TG-81SC	FSM	Clear code	
V60	2014	TG-81SC	FSM	Data stream	
V60	2014	TG-81SC	FSM	Special functions	Calibration of radar and camera.
V60	2014	TG-81SC	FSM	Special functions	Activating heating coil,FSM
V60	2014	TG-81SC	FSM	Special functions	Activating of the indicator for visual collision warning
V60	2014	TG-81SC	FSM	Special functions	Activating the internal test procedures
V60	2014	TG-81SC	RDAR	Sys. Info.	
V60	2014	TG-81SC	RDAR	Read code	
V60	2014	TG-81SC	RDAR	Clear code	
V60	2014	TG-81SC	CVM	Sys. Info.	
V60	2014	TG-81SC	CVM	Read code	
V60	2014	TG-81SC	CVM	Clear code	
V60	2014	TG-81SC	DABM	Sys. Info.	
V60	2014	TG-81SC	DABM	Read code	
V60	2014	TG-81SC	DABM	Clear code	
V60	2014	TG-81SC	PAC	Sys. Info.	
V60	2014	TG-81SC	PAC	Read code	
V60	2014	TG-81SC	PAC	Clear code	
V60	2014	TG-81SC	PAC	Special functions	Parking camera,setting(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
V60	2014	TG-81SC	PAC	Special functions	Parking camera,activating(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
V60	2014	TG-81SC	TRM	Sys. Info.	
V60	2014	TG-81SC	TRM	Read code	
V60	2014	TG-81SC	TRM	Clear code	
V60	2014	TG-81SC	TRM	Data stream	
V60	2014	TG-81SC	PSCM	Sys. Info.	
V60	2014	TG-81SC	PSCM	Read code	
V60	2014	TG-81SC	PSCM	Clear code	
V60	2014	TG-81SC	PHM	Sys. Info.	
V60	2014	TG-81SC	PHM	Read code	
V60	2014	TG-81SC	PHM	Clear code	
V60	2014	TG-81SC	PHM	Data stream	
V60	2014	TG-81SC	PHM	Special functions	Reinstalling the reserve battery
V60	2014	TG-81SC	TVM	Sys. Info.	
V60	2014	TG-81SC	TVM	Read code	
V60	2014	TG-81SC	TVM	Clear code	
V60	2014	TG-81SC	SODR	Sys. Info.	
V60	2014	TG-81SC	SODR	Read code	
V60	2014	TG-81SC	SODR	Clear code	
V60	2014	TG-81SC	SODR	Data stream	
V60	2014	TG-81SC	SODL	Sys. Info.	
V60	2014	TG-81SC	SODL	Read code	
V60	2014	TG-81SC	SODL	Clear code	
V60	2014	TG-81SC	SODL	Data stream	
V60	2015-2017	B6304T5	ECM	Sys. Info.	
V60	2015-2017	B6304T5	ECM	Read code	
V60	2015-2017	B6304T5	ECM	Clear code	
V60	2015-2017	B6304T5	ECM	Data stream	
V60	2015-2017	B6304T5	ECM	Actuation	
V60	2015-2017	B6304T5	ECM	Freeze frame	
V60	2015-2017	B6304T5	ECM	Special functions	Resetting the adaptation values
V60	2015-2017	B6304T4	ECM	Sys. Info.	
V60	2015-2017	B6304T4	ECM	Read code	
V60	2015-2017	B6304T4	ECM	Clear code	
V60	2015-2017	B6304T4	ECM	Data stream	
V60	2015-2017	B6304T4	ECM	Actuation	
V60	2015-2017	B6304T4	ECM	Freeze frame	
V60	2015-2017	B6304T4	ECM	Special functions	Resetting the adaptation values
V60	2015-2017	B4164T2	ECM	Sys. Info.	
V60	2015-2017	B4164T2	ECM	Read code	
V60	2015-2017	B4164T2	ECM	Clear code	

model	year	type	system	function	subfunction
V60	2015-2017	B4164T2	ECM	Data stream	
V60	2015-2017	B4164T2	ECM	Actuation	
V60	2015-2017	B4164T2	ECM	Freeze frame	
V60	2015-2017	B4164T2	ECM	Special functions	Adaptation of the throttle unit
V60	2015-2017	B4164T2	ECM	Special functions	Resetting the adaptation values
V60	2015-2017	B4164T2	ECM	Special functions	Adaptation of oil level sensor
V60	2015-2017	B4164T2	ECM	Special functions	Adaptation of camshafts
V60	2015-2017	B4164T2	ECM	Special functions	Checking injectors
V60	2015-2017	B5254T14	ECM	Sys. Info.	
V60	2015-2017	B5254T14	ECM	Read code	
V60	2015-2017	B5254T14	ECM	Clear code	
V60	2015-2017	B5254T14	ECM	Data stream	
V60	2015-2017	B5254T14	ECM	Actuation	
V60	2015-2017	B5254T14	ECM	Special functions	Resetting the fuel adaption values
V60	2015-2017	B5254T14	ECM	Special functions	Resetting the flywheel adaptions
V60	2015-2017	B5254T14	ECM	Special functions	Resetting the camshaft adaption values
V60	2015-2017	B4204T9	ECM	Sys. Info.	
V60	2015-2017	B4204T9	ECM	Read code	
V60	2015-2017	B4204T9	ECM	Clear code	
V60	2015-2017	B4204T9	ECM	Data stream	
V60	2015-2017	B4204T9	ECM	Actuation	
V60	2015-2017	B4204T9	ECM	Freeze frame	
V60	2015-2017	B4204T9	ECM	Special functions	Test of fuel pressure regulation,low pressure side
V60	2015-2017	B4204T9	ECM	Special functions	Test of fuel pressure regulation,high pressure side
V60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations and wear counter for supercharger
V60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for fuel/air mix(fuel trim)
V60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
V60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for canshaft regulation,intake
V60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
V60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for the fuelpump,low pressure side
V60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for cylinder balancing
V60	2015-2017	B4204T9	ECM	Special functions	Resetting adaptations for the thrittle
V60	2015-2017	B4204T9	ECM	Special functions	Adaptation of neutral position sensor
V60	2015-2017	D5244T15	DIESEL ENG	Sys. Info.	
V60	2015-2017	D5244T15	DIESEL ENG	Read code	
V60	2015-2017	D5244T15	DIESEL ENG	Clear code	
V60	2015-2017	D5244T15	DIESEL ENG	Data stream	
V60	2015-2017	D5244T15	DIESEL ENG	Actuation	
V60	2015-2017	D5244T15	DIESEL ENG	Freeze frame	
V60	2015-2017	D5244T15	DIESEL ENG	Special functions	Resetting counter particle filter
V60	2015-2017	D5244T15	DIESEL ENG	Special functions	Checking injectors
V60	2015-2017	D5244T15	DIESEL ENG	Special functions	Adaptation of throttle module
V60	2015-2017	D5244T15	DIESEL ENG	Special functions	Adaptation of the exhaust gas recirculation(EGR) valve
V60	2015-2017	D5244T15	DIESEL ENG	Special functions	Checking the oil level
V60	2015-2017	D4162T	DIESEL ENG	Sys. Info.	
V60	2015-2017	D4162T	DIESEL ENG	Read code	
V60	2015-2017	D4162T	DIESEL ENG	Clear code	
V60	2015-2017	D4162T	DIESEL ENG	Data stream	
V60	2015-2017	D4162T	DIESEL ENG	Actuation	
V60	2015-2017	D4162T	DIESEL ENG	Freeze frame	
V60	2015-2017	D4162T	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V60	2015-2017	D82PHEV	DIESEL ENG	Sys. Info.	
V60	2015-2017	D82PHEV	DIESEL ENG	Read code	
V60	2015-2017	D82PHEV	DIESEL ENG	Clear code	
V60	2015-2017	D82PHEV	DIESEL ENG	Data stream	
V60	2015-2017	D82PHEV	DIESEL ENG	Actuation	
V60	2015-2017	D82PHEV	DIESEL ENG	Freeze frame	
V60	2015-2017	D82PHEV	DIESEL ENG	Special functions	Checking injectors
V60	2015-2017	D82PHEV	DIESEL ENG	Special functions	Checking the oil level
V60	2015-2017	D82PHEV	DIESEL ENG	Special functions	Adjusting calculated oil level/oil quality
V60	2015-2017	D82PHEV	DIESEL ENG	Special functions	Adaptation of differential pressure sensor particle filter
V60	2015-2017	D82PHEV	DIESEL ENG	Special functions	Filling and bleeding the cooling system
V60	2015-2017	D82PHEV	DIESEL ENG	Special functions	Resetting counter for fuel ageing
V60	2015-2017	D4204T5	DIESEL ENG	Sys. Info.	
V60	2015-2017	D4204T5	DIESEL ENG	Read code	
V60	2015-2017	D4204T5	DIESEL ENG	Clear code	
V60	2015-2017	D4204T5	DIESEL ENG	Data stream	
V60	2015-2017	D4204T5	DIESEL ENG	Actuation	
V60	2015-2017	D4204T5	DIESEL ENG	Freeze frame	
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Test of fuel pressure regulation,high pressure side
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Test of fuel flow regulation valve
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Testing the fuel pressure control valve
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for fuel flow regulation valve
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for swirl damper
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for turbocharger control

model	year	type	system	function	subfunction
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the EGR valve
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the diesel particle filter
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the particle filter differential pressure sensor
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for front heated oxygen sensor
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for rear heated oxygen sensor
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the injectors
V60	2015-2017	D4204T5	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V60	2015-2017	D4204T5	ACCM	Sys. Info.	
V60	2015-2017	D4204T5	ACCM	Read code	
V60	2015-2017	D4204T5	ACCM	Clear code	
V60	2015-2017	D4204T5	ACCM	Data stream	
V60	2015-2017	D4204T5	BECM	Sys. Info.	
V60	2015-2017	D4204T5	BECM	Read code	
V60	2015-2017	D4204T5	BECM	Clear code	
V60	2015-2017	D4204T5	BECM	Data stream	
V60	2015-2017	D4204T5	AUD	Sys. Info.	
V60	2015-2017	D4204T5	AUD	Read code	
V60	2015-2017	D4204T5	AUD	Clear code	
V60	2015-2017	D4204T5	AUD	Special functions	Checking headphone socket
V60	2015-2017	D4204T5	AUD	Special functions	Checking loudspeakers
V60	2015-2017	D4204T5	ABS	Sys. Info.	
V60	2015-2017	D4204T5	ABS	Read code	
V60	2015-2017	D4204T5	ABS	Clear code	
V60	2015-2017	D4204T5	ABS	Data stream	
V60	2015-2017	D4204T5	ABS	Actuation	
V60	2015-2017	D4204T5	ABS	Freeze frame	
V60	2015-2017	D4204T5	ABS	Special functions	Calibration
V60	2015-2017	D4204T5	ABS	Special functions	Restart of the brake control module (BCM)
V60	2015-2017	D4204T5	CCM	Sys. Info.	
V60	2015-2017	D4204T5	CCM	Read code	
V60	2015-2017	D4204T5	CCM	Clear code	
V60	2015-2017	D4204T5	CCM	Data stream	
V60	2015-2017	D4204T5	CCM	Actuation	
V60	2015-2017	D4204T5	CCM	Special functions	Reading off programmed values
V60	2015-2017	D4204T5	CCM	Special functions	Calibrating the Climate Control Module(CCM)
V60	2015-2017	D4204T5	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
V60	2015-2017	D4204T5	CCM	Special functions	Reading out electronic damper motor,actual/preset range and tolerance limit
V60	2015-2017	D4204T5	CCM	Special functions	Programming the evaporator,climate control module(CCM)
V60	2015-2017	D4204T5	CCM	Special functions	Airflow setting in rear passenger compartment
V60	2015-2017	D4204T5	CCM	Special functions	Programming the climate control module(CCM)
V60	2015-2017	D4204T5	CCM	Special functions	Rear view mirror light sensitivity
V60	2015-2017	D4204T5	CEM	Sys. Info.	
V60	2015-2017	D4204T5	CEM	Read code	
V60	2015-2017	D4204T5	CEM	Clear code	
V60	2015-2017	D4204T5	CEM	Data stream	
V60	2015-2017	D4204T5	CEM	Actuation	
V60	2015-2017	D4204T5	CEM	Special functions	Workshop test(TPMS)
V60	2015-2017	D4204T5	CEM	Special functions	Reading off power supply position
V60	2015-2017	D4204T5	CEM	Special functions	Read-out and resetting alco-lock
V60	2015-2017	D4204T5	CEM	Special functions	Reading off alarm cause
V60	2015-2017	D4204T5	CEM	Special functions	Activating wipers,front/rear
V60	2015-2017	D4204T5	CEM	Special functions	Operating and initiating the roof hatch
V60	2015-2017	D4204T5	CEM	Special functions	Restoring supplemental restraint system
V60	2015-2017	D4204T5	CEM	Special functions	Setting day and night mode for the instrumentation
V60	2015-2017	D4204T5	CEM	Special functions	Activating steering wheel heating
V60	2015-2017	D4204T5	CEM	Special functions	Checking installation,brake light switch,and brake pedal position switch
V60	2015-2017	D4204T5	CEM	Special functions	Readout of current from battery monitoring sensor
V60	2015-2017	D4204T5	CEM	Special functions	Readout of information stand-by current
V60	2015-2017	D4204T5	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
V60	2015-2017	D4204T5	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
V60	2015-2017	D4204T5	CEM	Special functions	2Remote controlled immobilising,status
V60	2015-2017	D4204T5	CEM	Special functions	2Remote controlled immobilising,cause
V60	2015-2017	D4204T5	CPM	Sys. Info.	
V60	2015-2017	D4204T5	CPM	Read code	
V60	2015-2017	D4204T5	CPM	Clear code	
V60	2015-2017	D4204T5	CPM	Data stream	
V60	2015-2017	D4204T5	CPM	Special functions	Identification of the heater
V60	2015-2017	D4204T5	CVM	Sys. Info.	
V60	2015-2017	D4204T5	CVM	Read code	
V60	2015-2017	D4204T5	CVM	Clear code	
V60	2015-2017	D4204T5	DABM	Sys. Info.	

model	year	type	system	function	subfunction
V60	2015-2017	D4204T5	DABM	Read code	
V60	2015-2017	D4204T5	DABM	Clear code	
V60	2015-2017	D4204T5	DABM	Data stream	
V60	2015-2017	D4204T5	DABM	Actuation	
V60	2015-2017	D4204T5	DDM	Sys. Info.	
V60	2015-2017	D4204T5	DDM	Read code	
V60	2015-2017	D4204T5	DDM	Clear code	
V60	2015-2017	D4204T5	DDM	Data stream	
V60	2015-2017	D4204T5	DDM	Actuation	
V60	2015-2017	D4204T5	DDM	Special functions	Initializing the window in the front door.
V60	2015-2017	D4204T5	DDM	Special functions	Initializing the window in the rear door.
V60	2015-2017	D4204T5	DDM	Special functions	Central lock motors,activating
V60	2015-2017	D4204T5	DEM	Sys. Info.	
V60	2015-2017	D4204T5	DEM	Read code	
V60	2015-2017	D4204T5	DEM	Clear code	
V60	2015-2017	D4204T5	DEM	Data stream	
V60	2015-2017	D4204T5	DEM	Special functions	Calibration of differential electronic module (DEM).
V60	2015-2017	D4204T5	DIM	Sys. Info.	
V60	2015-2017	D4204T5	DIM	Read code	
V60	2015-2017	D4204T5	DIM	Clear code	
V60	2015-2017	D4204T5	DIM	Data stream	
V60	2015-2017	D4204T5	DIM	Special functions	Resetting the service reminder indicator (SRI)
V60	2015-2017	D4204T5	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
V60	2015-2017	D4204T5	DIM	Special functions	Read-out of fuel volume
V60	2015-2017	D4204T5	DIM	Special functions	Display of vehicle speed
V60	2015-2017	D4204T5	DIM	Special functions	Programming seatbelt reminder in backseat
V60	2015-2017	D4204T5	DIM	Special functions	Programming text message,seatbelt reminder
V60	2015-2017	D4204T5	FSM	Sys. Info.	
V60	2015-2017	D4204T5	FSM	Read code	
V60	2015-2017	D4204T5	FSM	Clear code	
V60	2015-2017	D4204T5	FSM	Data stream	
V60	2015-2017	D4204T5	FSM	Special functions	Calibration of radar and camera.
V60	2015-2017	D4204T5	FSM	Special functions	Activating heating coil,FSM
V60	2015-2017	D4204T5	FSM	Special functions	Activating of the indicator for visual collision warning
V60	2015-2017	D4204T5	FSM	Special functions	Activating the internal test procedures
V60	2015-2017	D4204T5	IAM	Sys. Info.	
V60	2015-2017	D4204T5	IAM	Read code	
V60	2015-2017	D4204T5	IAM	Clear code	
V60	2015-2017	D4204T5	IAM	Data stream	
V60	2015-2017	D4204T5	ICM	Sys. Info.	
V60	2015-2017	D4204T5	ICM	Read code	
V60	2015-2017	D4204T5	ICM	Clear code	
V60	2015-2017	D4204T5	ICM	Data stream	
V60	2015-2017	D4204T5	ICM	Special functions	Communication on MOST
V60	2015-2017	D4204T5	KVM	Sys. Info.	
V60	2015-2017	D4204T5	KVM	Read code	
V60	2015-2017	D4204T5	KVM	Clear code	
V60	2015-2017	D4204T5	KVM	Data stream	
V60	2015-2017	D4204T5	KVM	Special functions	Check the communication with the remote control receiver
V60	2015-2017	D4204T5	KVM	Special functions	Remote control
V60	2015-2017	D4204T5	KVM	Special functions	Test of internal memory
V60	2015-2017	D4204T5	KVM	Special functions	Checking all antennas
V60	2015-2017	D4204T5	PAC	Sys. Info.	
V60	2015-2017	D4204T5	PAC	Read code	
V60	2015-2017	D4204T5	PAC	Clear code	
V60	2015-2017	D4204T5	PAC	Special functions	Parking camera,setting(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
V60	2015-2017	D4204T5	PAC	Special functions	Parking camera,activating(V40/V40 Cross Country;S60/V60/XC60 structure week 13w-46-)
V60	2015-2017	D4204T5	PAM	Sys. Info.	
V60	2015-2017	D4204T5	PAM	Read code	
V60	2015-2017	D4204T5	PAM	Clear code	
V60	2015-2017	D4204T5	PAM	Data stream	
V60	2015-2017	D4204T5	PBM	Sys. Info.	
V60	2015-2017	D4204T5	PBM	Read code	
V60	2015-2017	D4204T5	PBM	Clear code	
V60	2015-2017	D4204T5	PBM	Data stream	
V60	2015-2017	D4204T5	PBM	Special functions	Calibration angle sensor
V60	2015-2017	D4204T5	PBM	Special functions	Activation and service
V60	2015-2017	D4204T5	PBM	Special functions	Resetting the clutch pedal counter
V60	2015-2017	D4204T5	PDM	Sys. Info.	
V60	2015-2017	D4204T5	PDM	Read code	
V60	2015-2017	D4204T5	PDM	Clear code	
V60	2015-2017	D4204T5	PDM	Data stream	
V60	2015-2017	D4204T5	PDM	Actuation	
V60	2015-2017	D4204T5	PDM	Special functions	Initializing the window in the front door.

model	year	type	system	function	subfunction
V60	2015-2017	D4204T5	PDM	Special functions	Initializing the window in the rear door.
V60	2015-2017	D4204T5	PDM	Special functions	Central lock motors,activating
V60	2015-2017	D4204T5	PHM	Sys. Info.	
V60	2015-2017	D4204T5	PHM	Read code	
V60	2015-2017	D4204T5	PHM	Clear code	
V60	2015-2017	D4204T5	PHM	Data stream	
V60	2015-2017	D4204T5	PHM	Special functions	Reinstalling the reserve battery
V60	2015-2017	D4204T5	PSCM	Sys. Info.	
V60	2015-2017	D4204T5	PSCM	Read code	
V60	2015-2017	D4204T5	PSCM	Clear code	
V60	2015-2017	D4204T5	PSCM	Data stream	
V60	2015-2017	D4204T5	PSM	Sys. Info.	
V60	2015-2017	D4204T5	PSM	Read code	
V60	2015-2017	D4204T5	PSM	Clear code	
V60	2015-2017	D4204T5	PSM	Data stream	
V60	2015-2017	D4204T5	PSM	Actuation	
V60	2015-2017	D4204T5	PSM	Special functions	Programming the seat memory delay time
V60	2015-2017	D4204T5	RDAR	Sys. Info.	
V60	2015-2017	D4204T5	RDAR	Read code	
V60	2015-2017	D4204T5	RDAR	Clear code	
V60	2015-2017	D4204T5	SAS	Sys. Info.	
V60	2015-2017	D4204T5	SAS	Read code	
V60	2015-2017	D4204T5	SAS	Clear code	
V60	2015-2017	D4204T5	SAS	Data stream	
V60	2015-2017	D4204T5	SODL	Sys. Info.	
V60	2015-2017	D4204T5	SODL	Read code	
V60	2015-2017	D4204T5	SODL	Clear code	
V60	2015-2017	D4204T5	SODL	Data stream	
V60	2015-2017	D4204T5	SRS	Sys. Info.	
V60	2015-2017	D4204T5	SRS	Read code	
V60	2015-2017	D4204T5	SRS	Clear code	
V60	2015-2017	D4204T5	SRS	Data stream	
V60	2015-2017	D4204T5	SRS	Special functions	Calibrating the occupant weight sensor (OWS)
V60	2015-2017	D4204T5	SRS	Special functions	Checking the PAD-light
V60	2015-2017	D4204T5	SUM	Sys. Info.	
V60	2015-2017	D4204T5	SUM	Read code	
V60	2015-2017	D4204T5	SUM	Clear code	
V60	2015-2017	D4204T5	SUM	Data stream	
V60	2015-2017	D4204T5	SUM	Special functions	Calibration
V60	2015-2017	D4204T5	TCM	Sys. Info.	
V60	2015-2017	D4204T5	TCM	Read code	
V60	2015-2017	D4204T5	TCM	Clear code	
V60	2015-2017	D4204T5	TCM	Data stream	
V60	2015-2017	D4204T5	TCM	Freeze frame	
V60	2015-2017	D4204T5	TCM	Special functions	Resetting adaptation
V60	2015-2017	D4204T5	TCM	Special functions	Resetting the Transmission fluid change counter
V60	2015-2017	D4204T5	TCM	Special functions	Calibration of gear indication
V60	2015-2017	D4204T5	TCM	Special functions	Activating of gear indication
V60	2015-2017	D4204T5	TCM	Special functions	Control module adaptation
V60	2015-2017	D4204T5	TRM	Sys. Info.	
V60	2015-2017	D4204T5	TRM	Read code	
V60	2015-2017	D4204T5	TRM	Clear code	
V60	2015-2017	D4204T5	TRM	Data stream	
V60	2015-2017	D4204T5	TVM	Sys. Info.	
V60	2015-2017	D4204T5	TVM	Read code	
V60	2015-2017	D4204T5	TVM	Clear code	
V40(13-)	2013	B4164T	ECM	Sys. Info.	
V40(13-)	2013	B4164T	ECM	Read code	
V40(13-)	2013	B4164T	ECM	Clear code	
V40(13-)	2013	B4164T	ECM	Data stream	
V40(13-)	2013	B4164T	ECM	Actuation	
V40(13-)	2013	B4164T	ECM	Freeze frame	
V40(13-)	2013	B4164T	ECM	Special functions	Adaptation of the throttle unit
V40(13-)	2013	B4164T	ECM	Special functions	Resetting the adaptation values
V40(13-)	2013	B4164T	ECM	Special functions	Adaptation of oil level sensor
V40(13-)	2013	B4164T	ECM	Special functions	Checking injectors
V40(13-)	2013	B4164T	ECM	Special functions	Adaptation of neutral position sensor
V40(13-)	2013	B4164T3	ECM	Sys. Info.	
V40(13-)	2013	B4164T3	ECM	Read code	
V40(13-)	2013	B4164T3	ECM	Clear code	
V40(13-)	2013	B4164T3	ECM	Data stream	
V40(13-)	2013	B4164T3	ECM	Actuation	
V40(13-)	2013	B4164T3	ECM	Freeze frame	
V40(13-)	2013	B4164T3	ECM	Special functions	Adaptation of the throttle unit
V40(13-)	2013	B4164T3	ECM	Special functions	Resetting the adaptation values
V40(13-)	2013	B4164T3	ECM	Special functions	Adaptation of oil level sensor
V40(13-)	2013	B4164T3	ECM	Special functions	Checking injectors
V40(13-)	2013	B4164T3	ECM	Special functions	Adaptation of neutral position sensor

model	year	type	system	function	subfunction
V40(13-)	2013	B5204T9	ECM	Sys. Info.	
V40(13-)	2013	B5204T9	ECM	Read code	
V40(13-)	2013	B5204T9	ECM	Clear code	
V40(13-)	2013	B5204T9	ECM	Data stream	
V40(13-)	2013	B5204T9	ECM	Actuation	
V40(13-)	2013	B5204T9	ECM	Freeze frame	
V40(13-)	2013	B5204T9	ECM	Special functions	Resetting the adaptation values
V40(13-)	2013	B5254T12	ECM	Sys. Info.	
V40(13-)	2013	B5254T12	ECM	Read code	
V40(13-)	2013	B5254T12	ECM	Clear code	
V40(13-)	2013	B5254T12	ECM	Data stream	
V40(13-)	2013	B5254T12	ECM	Actuation	
V40(13-)	2013	B5254T12	ECM	Freeze frame	
V40(13-)	2013	B5254T12	ECM	Special functions	Resetting the adaptation values
V40(13-)	2013	B5204T8	ECM	Sys. Info.	
V40(13-)	2013	B5204T8	ECM	Read code	
V40(13-)	2013	B5204T8	ECM	Clear code	
V40(13-)	2013	B5204T8	ECM	Data stream	
V40(13-)	2013	B5204T8	ECM	Actuation	
V40(13-)	2013	B5204T8	ECM	Freeze frame	
V40(13-)	2013	B5204T8	ECM	Special functions	Resetting the adaptation values
V40(13-)	2013	B5254T14	ECM	Sys. Info.	
V40(13-)	2013	B5254T14	ECM	Read code	
V40(13-)	2013	B5254T14	ECM	Clear code	
V40(13-)	2013	B5254T14	ECM	Data stream	
V40(13-)	2013	B5254T14	ECM	Actuation	
V40(13-)	2013	B5254T14	ECM	Freeze frame	
V40(13-)	2013	B5254T14	ECM	Special functions	Resetting the adaptation values
V40(13-)	2013	D4162T	DIESEL ENG	Sys. Info.	
V40(13-)	2013	D4162T	DIESEL ENG	Read code	
V40(13-)	2013	D4162T	DIESEL ENG	Clear code	
V40(13-)	2013	D4162T	DIESEL ENG	Data stream	
V40(13-)	2013	D4162T	DIESEL ENG	Actuation	
V40(13-)	2013	D4162T	DIESEL ENG	Freeze frame	
V40(13-)	2013	D4162T	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V40(13-)	2013	D5204T6	DIESEL ENG	Sys. Info.	
V40(13-)	2013	D5204T6	DIESEL ENG	Read code	
V40(13-)	2013	D5204T6	DIESEL ENG	Clear code	
V40(13-)	2013	D5204T6	DIESEL ENG	Data stream	
V40(13-)	2013	D5204T6	DIESEL ENG	Actuation	
V40(13-)	2013	D5204T6	DIESEL ENG	Freeze frame	
V40(13-)	2013	D5204T6	DIESEL ENG	Special functions	Checking injectors
V40(13-)	2013	D5204T6	DIESEL ENG	Special functions	Checking the oil level
V40(13-)	2013	D5204T6	DIESEL ENG	Special functions	Adjusting calculated oil level/oil quality
V40(13-)	2013	D5204T6	DIESEL ENG	Special functions	Adaptation of differential pressure sensor particle filter
V40(13-)	2013	D5204T6	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V40(13-)	2013	D5204T4	DIESEL ENG	Sys. Info.	
V40(13-)	2013	D5204T4	DIESEL ENG	Read code	
V40(13-)	2013	D5204T4	DIESEL ENG	Clear code	
V40(13-)	2013	D5204T4	DIESEL ENG	Data stream	
V40(13-)	2013	D5204T4	DIESEL ENG	Actuation	
V40(13-)	2013	D5204T4	DIESEL ENG	Freeze frame	
V40(13-)	2013	D5204T4	DIESEL ENG	Special functions	Checking injectors
V40(13-)	2013	D5204T4	DIESEL ENG	Special functions	Checking the oil level
V40(13-)	2013	D5204T4	DIESEL ENG	Special functions	Adjusting calculated oil level/oil quality
V40(13-)	2013	D5204T4	DIESEL ENG	Special functions	Adaptation of differential pressure sensor particle filter
V40(13-)	2013	D5204T4	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V40(13-)	2013	TF-80SC	TCM	Sys. Info.	
V40(13-)	2013	TF-80SC	TCM	Read code	
V40(13-)	2013	TF-80SC	TCM	Clear code	
V40(13-)	2013	TF-80SC	TCM	Data stream	
V40(13-)	2013	TF-80SC	TCM	Actuation	
V40(13-)	2013	TF-80SC	TCM	Freeze frame	
V40(13-)	2013	TF-80SC	TCM	Special functions	Resetting adaptation
V40(13-)	2013	TF-80SC	TCM	Special functions	Resetting the "Transmission fluid change" counter
V40(13-)	2013	TF-80SC	TCM	Special functions	Calibration of gear indication
V40(13-)	2013	TF-80SC	TCM	Special functions	Activating of gear indication
V40(13-)	2013	TF-80SC	TCM	Special functions	Control module adaptation
V40(13-)	2013	MPS6	TCM	Sys. Info.	
V40(13-)	2013	MPS6	TCM	Read code	
V40(13-)	2013	MPS6	TCM	Clear code	
V40(13-)	2013	MPS6	TCM	Data stream	
V40(13-)	2013	MPS6	TCM	Freeze frame	
V40(13-)	2013	MPS6	TCM	Special functions	Resetting adaptation
V40(13-)	2013	MPS6	TCM	Special functions	Resetting the Transmission fluid change counter
V40(13-)	2013	MPS6	TCM	Special functions	Calibration of gear indication
V40(13-)	2013	MPS6	TCM	Special functions	Activating of gear indication
V40(13-)	2013	MPS6	TCM	Special functions	Control module adaptation



model	year	type	system	function	subfunction
V40(13-)	2013	TF-80SD	TCM	Sys. Info.	
V40(13-)	2013	TF-80SD	TCM	Read code	
V40(13-)	2013	TF-80SD	TCM	Clear code	
V40(13-)	2013	TF-80SD	TCM	Data stream	
V40(13-)	2013	TF-80SD	TCM	Actuation	
V40(13-)	2013	TF-80SD	TCM	Freeze frame	
V40(13-)	2013	TF-80SD	TCM	Special functions	Resetting the adaptation
V40(13-)	2013	TF-80SD	TCM	Special functions	Calibration of position sensor
V40(13-)	2013	TF-80SD	TCM	Special functions	Resetting the counter for Gearbox oil Change
V40(13-)	2013	TF-80SD	TCM	Special functions	Activating gear indication
V40(13-)	2013	TF-80SD	TCM	Special functions	Control module adaptation
V40(13-)	2013	TF-80SD	PSCM	Sys. Info.	
V40(13-)	2013	TF-80SD	PSCM	Read code	
V40(13-)	2013	TF-80SD	PSCM	Clear code	
V40(13-)	2013	TF-80SD	PSCM	Data stream	
V40(13-)	2013	TF-80SD	PSCM	Special functions	Adjustment of deflection limit on steering gear
V40(13-)	2013	TF-80SD	SAS	Sys. Info.	
V40(13-)	2013	TF-80SD	SAS	Read code	
V40(13-)	2013	TF-80SD	SAS	Clear code	
V40(13-)	2013	TF-80SD	SAS	Data stream	
V40(13-)	2013	TF-80SD	BCM/ABS	Sys. Info.	
V40(13-)	2013	TF-80SD	BCM/ABS	Read code	
V40(13-)	2013	TF-80SD	BCM/ABS	Clear code	
V40(13-)	2013	TF-80SD	BCM/ABS	Data stream	
V40(13-)	2013	TF-80SD	BCM/ABS	Actuation	
V40(13-)	2013	TF-80SD	BCM/ABS	Freeze frame	
V40(13-)	2013	TF-80SD	BCM/ABS	Special functions	Calibration
V40(13-)	2013	TF-80SD	SRS	Sys. Info.	
V40(13-)	2013	TF-80SD	SRS	Read code	
V40(13-)	2013	TF-80SD	SRS	Clear code	
V40(13-)	2013	TF-80SD	SRS	Data stream	
V40(13-)	2013	TF-80SD	FSM	Sys. Info.	
V40(13-)	2013	TF-80SD	FSM	Read code	
V40(13-)	2013	TF-80SD	FSM	Clear code	
V40(13-)	2013	TF-80SD	FSM	Data stream	
V40(13-)	2013	TF-80SD	CVM	Sys. Info.	
V40(13-)	2013	TF-80SD	CVM	Read code	
V40(13-)	2013	TF-80SD	CVM	Clear code	
V40(13-)	2013	TF-80SD	CVM	Data stream	
V40(13-)	2013	TF-80SD	PPM	Sys. Info.	
V40(13-)	2013	TF-80SD	PPM	Read code	
V40(13-)	2013	TF-80SD	PPM	Clear code	
V40(13-)	2013	TF-80SD	PPM	Data stream	
V40(13-)	2013	TF-80SD	CEM	Sys. Info.	
V40(13-)	2013	TF-80SD	CEM	Read code	
V40(13-)	2013	TF-80SD	CEM	Clear code	
V40(13-)	2013	TF-80SD	CEM	Data stream	
V40(13-)	2013	TF-80SD	CEM	Actuation	
V40(13-)	2013	TF-80SD	CEM	Special functions	Reading off power supply position
V40(13-)	2013	TF-80SD	CEM	Special functions	Read-out and resetting alco-lock
V40(13-)	2013	TF-80SD	CEM	Special functions	Activating wipers,front/rear
V40(13-)	2013	TF-80SD	CEM	Special functions	Programming of rear window wiper when reversing
V40(13-)	2013	TF-80SD	CEM	Special functions	Calibration of position sensor
V40(13-)	2013	TF-80SD	CEM	Special functions	Initiating the sun blind
V40(13-)	2013	TF-80SD	CEM	Special functions	Readout of current from battery monitoring sensor
V40(13-)	2013	TF-80SD	CEM	Special functions	Readout of information stand-by current
V40(13-)	2013	TF-80SD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
V40(13-)	2013	TF-80SD	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
V40(13-)	2013	TF-80SD	CEM	Special functions	Remote controlled immobilising,status
V40(13-)	2013	TF-80SD	CEM	Special functions	Remote controlled immobilising,cause
V40(13-)	2013	TF-80SD	DIM	Sys. Info.	
V40(13-)	2013	TF-80SD	DIM	Read code	
V40(13-)	2013	TF-80SD	DIM	Clear code	
V40(13-)	2013	TF-80SD	DIM	Data stream	
V40(13-)	2013	TF-80SD	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
V40(13-)	2013	TF-80SD	DIM	Special functions	Read-out of fuel volume
V40(13-)	2013	TF-80SD	DIM	Special functions	Display of oil vehicle speed
V40(13-)	2013	TF-80SD	DIM	Special functions	Resetting Service Bulletin
V40(13-)	2013	TF-80SD	DIM	Special functions	Programming seatbelt reminder in backseat
V40(13-)	2013	TF-80SD	DIM	Special functions	Programming text message,seatbelt reminder
V40(13-)	2013	TF-80SD	DIM	Special functions	Programmed values,Parking Brake Warning
V40(13-)	2013	TF-80SD	PDM	Sys. Info.	
V40(13-)	2013	TF-80SD	PDM	Read code	
V40(13-)	2013	TF-80SD	PDM	Clear code	
V40(13-)	2013	TF-80SD	PDM	Data stream	

model	year	type	system	function	subfunction
V40(13-)	2013	TF-80SD	PDM	Actuation	
V40(13-)	2013	TF-80SD	PDM	Special functions	Initializing the window in the front door.
V40(13-)	2013	TF-80SD	PDM	Special functions	Initializing the window in the rear door.
V40(13-)	2013	TF-80SD	PDM	Special functions	Central lock motors,activating
V40(13-)	2013	TF-80SD	ICM	Sys. Info.	
V40(13-)	2013	TF-80SD	ICM	Read code	
V40(13-)	2013	TF-80SD	ICM	Clear code	
V40(13-)	2013	TF-80SD	ICM	Data stream	
V40(13-)	2013	TF-80SD	ICM	Actuation	
V40(13-)	2013	TF-80SD	IAM	Sys. Info.	
V40(13-)	2013	TF-80SD	IAM	Read code	
V40(13-)	2013	TF-80SD	IAM	Clear code	
V40(13-)	2013	TF-80SD	IAM	Data stream	
V40(13-)	2013	TF-80SD	AUD	Sys. Info.	
V40(13-)	2013	TF-80SD	AUD	Read code	
V40(13-)	2013	TF-80SD	AUD	Clear code	
V40(13-)	2013	TF-80SD	AUD	Special functions	Checking headphone socket
V40(13-)	2013	TF-80SD	TVM	Sys. Info.	
V40(13-)	2013	TF-80SD	TVM	Read code	
V40(13-)	2013	TF-80SD	TVM	Clear code	
V40(13-)	2013	TF-80SD	TVM	Data stream	
V40(13-)	2013	TF-80SD	PHM	Sys. Info.	
V40(13-)	2013	TF-80SD	PHM	Read code	
V40(13-)	2013	TF-80SD	PHM	Clear code	
V40(13-)	2013	TF-80SD	PHM	Data stream	
V40(13-)	2013	TF-80SD	PHM	Special functions	Reinstalling the reserve battery
V40(13-)	2013	TF-80SD	RDAR	Sys. Info.	
V40(13-)	2013	TF-80SD	RDAR	Read code	
V40(13-)	2013	TF-80SD	RDAR	Clear code	
V40(13-)	2013	TF-80SD	RDAR	Data stream	
V40(13-)	2013	TF-80SD	DABM	Sys. Info.	
V40(13-)	2013	TF-80SD	DABM	Read code	
V40(13-)	2013	TF-80SD	DABM	Clear code	
V40(13-)	2013	TF-80SD	DABM	Data stream	
V40(13-)	2013	TF-80SD	CPM	Sys. Info.	
V40(13-)	2013	TF-80SD	CPM	Read code	
V40(13-)	2013	TF-80SD	CPM	Clear code	
V40(13-)	2013	TF-80SD	CPM	Data stream	
V40(13-)	2013	TF-80SD	CCM	Sys. Info.	
V40(13-)	2013	TF-80SD	CCM	Read code	
V40(13-)	2013	TF-80SD	CCM	Clear code	
V40(13-)	2013	TF-80SD	CCM	Data stream	
V40(13-)	2013	TF-80SD	CCM	Actuation	
V40(13-)	2013	TF-80SD	CCM	Special functions	Reading-out programmed parameters
V40(13-)	2013	TF-80SD	CCM	Special functions	Compartment fan afterblow
V40(13-)	2013	TF-80SD	CCM	Special functions	Programming the climate control module(CCM)
V40(13-)	2013	TF-80SD	DDM	Sys. Info.	
V40(13-)	2013	TF-80SD	DDM	Read code	
V40(13-)	2013	TF-80SD	DDM	Clear code	
V40(13-)	2013	TF-80SD	DDM	Data stream	
V40(13-)	2013	TF-80SD	DDM	Actuation	
V40(13-)	2013	TF-80SD	DDM	Special functions	Initializing the window in the front door.
V40(13-)	2013	TF-80SD	DDM	Special functions	Initializing the window in the rear door
V40(13-)	2013	TF-80SD	DDM	Special functions	Central lock motors,activating
V40(13-)	2013	TF-80SD	PSM	Sys. Info.	
V40(13-)	2013	TF-80SD	PSM	Read code	
V40(13-)	2013	TF-80SD	PSM	Clear code	
V40(13-)	2013	TF-80SD	PSM	Data stream	
V40(13-)	2013	TF-80SD	PSM	Actuation	
V40(13-)	2013	TF-80SD	PSM	Special functions	Programming the seat memory delay time
V40(13-)	2013	TF-80SD	KVM	Sys. Info.	
V40(13-)	2013	TF-80SD	KVM	Read code	
V40(13-)	2013	TF-80SD	KVM	Clear code	
V40(13-)	2013	TF-80SD	KVM	Data stream	
V40(13-)	2013	TF-80SD	KVM	Special functions	Check the communication with the remote control receiver
V40(13-)	2013	TF-80SD	KVM	Special functions	Remote control
V40(13-)	2013	TF-80SD	KVM	Special functions	Test of internal memory
V40(13-)	2013	TF-80SD	KVM	Special functions	Checking all antennas
V40(13-)	2013	TF-80SD	PAM	Sys. Info.	
V40(13-)	2013	TF-80SD	PAM	Read code	
V40(13-)	2013	TF-80SD	PAM	Clear code	
V40(13-)	2013	TF-80SD	PAM	Data stream	
V40(13-)	2013	TF-80SD	TRM	Sys. Info.	
V40(13-)	2013	TF-80SD	TRM	Read code	
V40(13-)	2013	TF-80SD	TRM	Clear code	
V40(13-)	2013	TF-80SD	TRM	Data stream	
V40(13-)	2013	TF-80SD	SODR	Sys. Info.	

model	year	type	system	function	subfunction
V40(13-)	2013	TF-80SD	SODR	Read code	
V40(13-)	2013	TF-80SD	SODR	Clear code	
V40(13-)	2013	TF-80SD	SODR	Data stream	
V40(13-)	2013	TF-80SD	PAC	Sys. Info.	
V40(13-)	2013	TF-80SD	PAC	Read code	
V40(13-)	2013	TF-80SD	PAC	Clear code	
V40(13-)	2013	TF-80SD	PAC	Data stream	
V40(13-)	2013	TF-80SD	PAC	Special functions	Parking camera,setting(V40/V40 Cross Country;S60/V60/XC60 structure week 13w46-)
V40(13-)	2013	TF-80SD	PAC	Special functions	Parking camera,activating(V40/V40 Cross Country;S60/V60/XC60 structure week 13w46-)
V40(13-)	2013	TF-80SD	SODL	Sys. Info.	
V40(13-)	2013	TF-80SD	SODL	Read code	
V40(13-)	2013	TF-80SD	SODL	Clear code	
V40(13-)	2013	TF-80SD	SODL	Data stream	
V40(13-)	2013	TF-80SD	DEM	Sys. Info.	
V40(13-)	2013	TF-80SD	DEM	Read code	
V40(13-)	2013	TF-80SD	DEM	Clear code	
V40(13-)	2013	TF-80SD	DEM	Data stream	
V40(13-)	2013	TF-80SD	DEM	Special functions	Calibration of differential electronic module (DEM).
V40(13-)	2014	B4164T3	ECM	Sys. Info.	
V40(13-)	2014	B4164T3	ECM	Read code	
V40(13-)	2014	B4164T3	ECM	Clear code	
V40(13-)	2014	B4164T3	ECM	Data stream	
V40(13-)	2014	B4164T3	ECM	Actuation	
V40(13-)	2014	B4164T3	ECM	Freeze frame	
V40(13-)	2014	B4164T3	ECM	Special functions	Adaptation of the throttle unit
V40(13-)	2014	B4164T3	ECM	Special functions	Resetting the adaptation values
V40(13-)	2014	B4164T3	ECM	Special functions	Adaptation of oil level sensor
V40(13-)	2014	B4164T3	ECM	Special functions	Checking injectors
V40(13-)	2014	B4164T3	ECM	Special functions	Adaptation of neutral position sensor
V40(13-)	2014	B4164T	ECM	Sys. Info.	
V40(13-)	2014	B4164T	ECM	Read code	
V40(13-)	2014	B4164T	ECM	Clear code	
V40(13-)	2014	B4164T	ECM	Data stream	
V40(13-)	2014	B4164T	ECM	Actuation	
V40(13-)	2014	B4164T	ECM	Freeze frame	
V40(13-)	2014	B4164T	ECM	Special functions	Adaptation of the throttle unit
V40(13-)	2014	B4164T	ECM	Special functions	Resetting the adaptation values
V40(13-)	2014	B4164T	ECM	Special functions	Adaptation of oil level sensor
V40(13-)	2014	B4164T	ECM	Special functions	Checking injectors
V40(13-)	2014	B4164T	ECM	Special functions	Adaptation of neutral position sensor
V40(13-)	2014	B5204T9	ECM	Sys. Info.	
V40(13-)	2014	B5204T9	ECM	Read code	
V40(13-)	2014	B5204T9	ECM	Clear code	
V40(13-)	2014	B5204T9	ECM	Data stream	
V40(13-)	2014	B5204T9	ECM	Actuation	
V40(13-)	2014	B5204T9	ECM	Freeze frame	
V40(13-)	2014	B5204T9	ECM	Special functions	Resetting the adaptation values
V40(13-)	2014	B5254T12	ECM	Sys. Info.	
V40(13-)	2014	B5254T12	ECM	Read code	
V40(13-)	2014	B5254T12	ECM	Clear code	
V40(13-)	2014	B5254T12	ECM	Data stream	
V40(13-)	2014	B5254T12	ECM	Actuation	
V40(13-)	2014	B5254T12	ECM	Freeze frame	
V40(13-)	2014	B5254T12	ECM	Special functions	Resetting the adaptation values
V40(13-)	2014	B5204T8	ECM	Sys. Info.	
V40(13-)	2014	B5204T8	ECM	Read code	
V40(13-)	2014	B5204T8	ECM	Clear code	
V40(13-)	2014	B5204T8	ECM	Data stream	
V40(13-)	2014	B5204T8	ECM	Actuation	
V40(13-)	2014	B5204T8	ECM	Freeze frame	
V40(13-)	2014	B5204T8	ECM	Special functions	Resetting the adaptation values
V40(13-)	2014	B5254T14	ECM	Sys. Info.	
V40(13-)	2014	B5254T14	ECM	Read code	
V40(13-)	2014	B5254T14	ECM	Clear code	
V40(13-)	2014	B5254T14	ECM	Data stream	
V40(13-)	2014	B5254T14	ECM	Actuation	
V40(13-)	2014	B5254T14	ECM	Freeze frame	
V40(13-)	2014	B5254T14	ECM	Special functions	Resetting the adaptation values
V40(13-)	2014	D5204T6	DIESEL ENG	Sys. Info.	
V40(13-)	2014	D5204T6	DIESEL ENG	Read code	
V40(13-)	2014	D5204T6	DIESEL ENG	Clear code	
V40(13-)	2014	D5204T6	DIESEL ENG	Data stream	
V40(13-)	2014	D5204T6	DIESEL ENG	Actuation	
V40(13-)	2014	D5204T6	DIESEL ENG	Freeze frame	
V40(13-)	2014	D5204T6	DIESEL ENG	Special functions	Checking injectors
V40(13-)	2014	D5204T6	DIESEL ENG	Special functions	Checking the oil level

model	year	type	system	function	subfunction
V40(13-)	2014	D5204T6	DIESEL ENG	Special functions	Adjusting calculated oil level/oil quality
V40(13-)	2014	D5204T6	DIESEL ENG	Special functions	Adaptation of differential pressure sensor particle filter
V40(13-)	2014	D5204T6	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V40(13-)	2014	D5204T4	DIESEL ENG	Sys. Info.	
V40(13-)	2014	D5204T4	DIESEL ENG	Read code	
V40(13-)	2014	D5204T4	DIESEL ENG	Clear code	
V40(13-)	2014	D5204T4	DIESEL ENG	Data stream	
V40(13-)	2014	D5204T4	DIESEL ENG	Actuation	
V40(13-)	2014	D5204T4	DIESEL ENG	Freeze frame	
V40(13-)	2014	D5204T4	DIESEL ENG	Special functions	Checking injectors
V40(13-)	2014	D5204T4	DIESEL ENG	Special functions	Checking the oil level
V40(13-)	2014	D5204T4	DIESEL ENG	Special functions	Adjusting calculated oil level/oil quality
V40(13-)	2014	D5204T4	DIESEL ENG	Special functions	Adaptation of differential pressure sensor particle filter
V40(13-)	2014	D5204T4	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V40(13-)	2014	D4204T5	DIESEL ENG	Sys. Info.	
V40(13-)	2014	D4204T5	DIESEL ENG	Read code	
V40(13-)	2014	D4204T5	DIESEL ENG	Clear code	
V40(13-)	2014	D4204T5	DIESEL ENG	Data stream	
V40(13-)	2014	D4204T5	DIESEL ENG	Actuation	
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Test of fuel pressure regulation,high pressure side
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Test of fuel flow regulation valve
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Testing the fuel pressure control valve
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for fuel flow regulation valve
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for swirl damper
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for turbocharger control
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the EGR valve
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the diesel particle filter
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the particle filter differential pressure sensor
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for front heated oxygen sensor
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for rear heated oxygen sensor
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Resetting adaptations for the injectors
V40(13-)	2014	D4204T5	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V40(13-)	2014	D4162T	DIESEL ENG	Sys. Info.	
V40(13-)	2014	D4162T	DIESEL ENG	Read code	
V40(13-)	2014	D4162T	DIESEL ENG	Clear code	
V40(13-)	2014	D4162T	DIESEL ENG	Data stream	
V40(13-)	2014	D4162T	DIESEL ENG	Actuation	
V40(13-)	2014	D4162T	DIESEL ENG	Freeze frame	
V40(13-)	2014	D4162T	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V40(13-)	2014	MPS6	TCM	Sys. Info.	
V40(13-)	2014	MPS6	TCM	Read code	
V40(13-)	2014	MPS6	TCM	Clear code	
V40(13-)	2014	MPS6	TCM	Data stream	
V40(13-)	2014	MPS6	TCM	Freeze frame	
V40(13-)	2014	MPS6	TCM	Special functions	Resetting adaptation
V40(13-)	2014	MPS6	TCM	Special functions	Resetting the Transmission fluid change counter
V40(13-)	2014	MPS6	TCM	Special functions	Calibration of gear indication
V40(13-)	2014	MPS6	TCM	Special functions	Activating of gear indication
V40(13-)	2014	MPS6	TCM	Special functions	Control module adaptation
V40(13-)	2014	MPS6	PSCM	Sys. Info.	
V40(13-)	2014	MPS6	PSCM	Read code	
V40(13-)	2014	MPS6	PSCM	Clear code	
V40(13-)	2014	MPS6	PSCM	Data stream	
V40(13-)	2014	MPS6	PSCM	Special functions	Adjustment of deflection limit on steering gear
V40(13-)	2014	MPS6	SAS	Sys. Info.	
V40(13-)	2014	MPS6	SAS	Read code	
V40(13-)	2014	MPS6	SAS	Clear code	
V40(13-)	2014	MPS6	SAS	Data stream	
V40(13-)	2014	MPS6	BCM/ABS	Sys. Info.	
V40(13-)	2014	MPS6	BCM/ABS	Read code	
V40(13-)	2014	MPS6	BCM/ABS	Clear code	
V40(13-)	2014	MPS6	BCM/ABS	Data stream	
V40(13-)	2014	MPS6	BCM/ABS	Actuation	
V40(13-)	2014	MPS6	BCM/ABS	Freeze frame	
V40(13-)	2014	MPS6	BCM/ABS	Special functions	Calibration
V40(13-)	2014	MPS6	SRS	Sys. Info.	
V40(13-)	2014	MPS6	SRS	Read code	
V40(13-)	2014	MPS6	SRS	Clear code	
V40(13-)	2014	MPS6	SRS	Data stream	
V40(13-)	2014	MPS6	FSM	Sys. Info.	
V40(13-)	2014	MPS6	FSM	Read code	
V40(13-)	2014	MPS6	FSM	Clear code	
V40(13-)	2014	MPS6	FSM	Data stream	
V40(13-)	2014	MPS6	CVM	Sys. Info.	
V40(13-)	2014	MPS6	CVM	Read code	
V40(13-)	2014	MPS6	CVM	Clear code	
V40(13-)	2014	MPS6	CVM	Data stream	

model	year	type	system	function	subfunction
V40(13-)	2014	MPS6	PPM	Sys. Info.	
V40(13-)	2014	MPS6	PPM	Read code	
V40(13-)	2014	MPS6	PPM	Clear code	
V40(13-)	2014	MPS6	PPM	Data stream	
V40(13-)	2014	MPS6	CEM	Sys. Info.	
V40(13-)	2014	MPS6	CEM	Read code	
V40(13-)	2014	MPS6	CEM	Clear code	
V40(13-)	2014	MPS6	CEM	Data stream	
V40(13-)	2014	MPS6	CEM	Actuation	
V40(13-)	2014	MPS6	CEM	Special functions	Reading off power supply position
V40(13-)	2014	MPS6	CEM	Special functions	Read-out and resetting alco-lock
V40(13-)	2014	MPS6	CEM	Special functions	Activating wipers,front/rear
V40(13-)	2014	MPS6	CEM	Special functions	Programming of rear window wiper when reversing
V40(13-)	2014	MPS6	CEM	Special functions	Calibration of position sensor
V40(13-)	2014	MPS6	CEM	Special functions	Initiating the sun blind
V40(13-)	2014	MPS6	CEM	Special functions	Readout of current from battery monitoring sensor
V40(13-)	2014	MPS6	CEM	Special functions	Readout of information stand-by current
V40(13-)	2014	MPS6	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery
V40(13-)	2014	MPS6	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
V40(13-)	2014	MPS6	CEM	Special functions	Remote controlled immobilising,status
V40(13-)	2014	MPS6	CEM	Special functions	Remote controlled immobilising,cause
V40(13-)	2014	MPS6	DIM	Sys. Info.	
V40(13-)	2014	MPS6	DIM	Read code	
V40(13-)	2014	MPS6	DIM	Clear code	
V40(13-)	2014	MPS6	DIM	Data stream	
V40(13-)	2014	MPS6	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
V40(13-)	2014	MPS6	DIM	Special functions	Read-out of fuel volume
V40(13-)	2014	MPS6	DIM	Special functions	Display of oil vehicle speed
V40(13-)	2014	MPS6	DIM	Special functions	Resetting Service Bulletin
V40(13-)	2014	MPS6	DIM	Special functions	Programming seatbelt reminder in backseat
V40(13-)	2014	MPS6	DIM	Special functions	Programming text message,seatbelt reminder
V40(13-)	2014	MPS6	DIM	Special functions	Programmed values,Parking Brake Warning
V40(13-)	2014	MPS6	PDM	Sys. Info.	
V40(13-)	2014	MPS6	PDM	Read code	
V40(13-)	2014	MPS6	PDM	Clear code	
V40(13-)	2014	MPS6	PDM	Data stream	
V40(13-)	2014	MPS6	PDM	Actuation	
V40(13-)	2014	MPS6	PDM	Special functions	Initializing the window in the front door.
V40(13-)	2014	MPS6	PDM	Special functions	Initializing the window in the rear door.
V40(13-)	2014	MPS6	PDM	Special functions	Central lock motors,activating
V40(13-)	2014	MPS6	ICM	Sys. Info.	
V40(13-)	2014	MPS6	ICM	Read code	
V40(13-)	2014	MPS6	ICM	Clear code	
V40(13-)	2014	MPS6	ICM	Data stream	
V40(13-)	2014	MPS6	ICM	Actuation	
V40(13-)	2014	MPS6	IAM	Sys. Info.	
V40(13-)	2014	MPS6	IAM	Read code	
V40(13-)	2014	MPS6	IAM	Clear code	
V40(13-)	2014	MPS6	IAM	Data stream	
V40(13-)	2014	MPS6	AUD	Sys. Info.	
V40(13-)	2014	MPS6	AUD	Read code	
V40(13-)	2014	MPS6	AUD	Clear code	
V40(13-)	2014	MPS6	AUD	Special functions	Checking headphone socket
V40(13-)	2014	MPS6	TVM	Sys. Info.	
V40(13-)	2014	MPS6	TVM	Read code	
V40(13-)	2014	MPS6	TVM	Clear code	
V40(13-)	2014	MPS6	TVM	Data stream	
V40(13-)	2014	MPS6	PHM	Sys. Info.	
V40(13-)	2014	MPS6	PHM	Read code	
V40(13-)	2014	MPS6	PHM	Clear code	
V40(13-)	2014	MPS6	PHM	Data stream	
V40(13-)	2014	MPS6	PHM	Special functions	Reinstalling the reserve battery
V40(13-)	2014	MPS6	RDAR	Sys. Info.	
V40(13-)	2014	MPS6	RDAR	Read code	
V40(13-)	2014	MPS6	RDAR	Clear code	
V40(13-)	2014	MPS6	RDAR	Data stream	
V40(13-)	2014	MPS6	DABM	Sys. Info.	
V40(13-)	2014	MPS6	DABM	Read code	
V40(13-)	2014	MPS6	DABM	Clear code	
V40(13-)	2014	MPS6	DABM	Data stream	
V40(13-)	2014	MPS6	CPM	Sys. Info.	
V40(13-)	2014	MPS6	CPM	Read code	
V40(13-)	2014	MPS6	CPM	Clear code	
V40(13-)	2014	MPS6	CPM	Data stream	
V40(13-)	2014	MPS6	CCM	Sys. Info.	

model	year	type	system	function	subfunction	
V40(13-)		2014	MPS6	CCM	Read code	
V40(13-)		2014	MPS6	CCM	Clear code	
V40(13-)		2014	MPS6	CCM	Data stream	
V40(13-)		2014	MPS6	CCM	Actuation	
V40(13-)		2014	MPS6	CCM	Special functions	Reading-out programmed parameters
V40(13-)		2014	MPS6	CCM	Special functions	Compartment fan afterblow
V40(13-)		2014	MPS6	CCM	Special functions	Programming the climate control module(CCM)
V40(13-)		2014	MPS6	DDM	Sys. Info.	
V40(13-)		2014	MPS6	DDM	Read code	
V40(13-)		2014	MPS6	DDM	Clear code	
V40(13-)		2014	MPS6	DDM	Data stream	
V40(13-)		2014	MPS6	DDM	Actuation	
V40(13-)		2014	MPS6	DDM	Special functions	Initializing the window in the front door.
V40(13-)		2014	MPS6	DDM	Special functions	Initializing the window in the rear door
V40(13-)		2014	MPS6	DDM	Special functions	Central lock motors,activating
V40(13-)		2014	MPS6	PSM	Sys. Info.	
V40(13-)		2014	MPS6	PSM	Read code	
V40(13-)		2014	MPS6	PSM	Clear code	
V40(13-)		2014	MPS6	PSM	Data stream	
V40(13-)		2014	MPS6	PSM	Actuation	
V40(13-)		2014	MPS6	PSM	Special functions	Programming the seat memory delay time
V40(13-)		2014	MPS6	KVM	Sys. Info.	
V40(13-)		2014	MPS6	KVM	Read code	
V40(13-)		2014	MPS6	KVM	Clear code	
V40(13-)		2014	MPS6	KVM	Data stream	
V40(13-)		2014	MPS6	KVM	Special functions	Check the communication with the remote control receiver
V40(13-)		2014	MPS6	KVM	Special functions	Remote control
V40(13-)		2014	MPS6	KVM	Special functions	Test of internal memory
V40(13-)		2014	MPS6	KVM	Special functions	Checking all antennas
V40(13-)		2014	MPS6	PAM	Sys. Info.	
V40(13-)		2014	MPS6	PAM	Read code	
V40(13-)		2014	MPS6	PAM	Clear code	
V40(13-)		2014	MPS6	PAM	Data stream	
V40(13-)		2014	MPS6	TRM	Sys. Info.	
V40(13-)		2014	MPS6	TRM	Read code	
V40(13-)		2014	MPS6	TRM	Clear code	
V40(13-)		2014	MPS6	TRM	Data stream	
V40(13-)		2014	MPS6	SODR	Sys. Info.	
V40(13-)		2014	MPS6	SODR	Read code	
V40(13-)		2014	MPS6	SODR	Clear code	
V40(13-)		2014	MPS6	SODR	Data stream	
V40(13-)		2014	MPS6	PAC	Sys. Info.	
V40(13-)		2014	MPS6	PAC	Read code	
V40(13-)		2014	MPS6	PAC	Clear code	
V40(13-)		2014	MPS6	PAC	Data stream	
V40(13-)		2014	MPS6	PAC	Special functions	Parking camera,setting(V40/V40 Cross Country;S60/V60/XC60 structure week 13w46-)
V40(13-)		2014	MPS6	PAC	Special functions	Parking camera,activating(V40/V40 Cross Country;S60/V60/XC60 structure week 13w46-)
V40(13-)		2014	MPS6	SODL	Sys. Info.	
V40(13-)		2014	MPS6	SODL	Read code	
V40(13-)		2014	MPS6	SODL	Clear code	
V40(13-)		2014	MPS6	SODL	Data stream	
V40(13-)		2014	MPS6	DEM	Sys. Info.	
V40(13-)		2014	MPS6	DEM	Read code	
V40(13-)		2014	MPS6	DEM	Clear code	
V40(13-)		2014	MPS6	DEM	Data stream	
V40(13-)		2014	MPS6	DEM	Special functions	Calibration of differential electronic module (DEM).
V40(13-)	2015-2017		B4204T11	ECM	Sys. Info.	
V40(13-)	2015-2017		B4204T11	ECM	Read code	
V40(13-)	2015-2017		B4204T11	ECM	Clear code	
V40(13-)	2015-2017		B4204T11	ECM	Data stream	
V40(13-)	2015-2017		B4204T11	ECM	Actuation	
V40(13-)	2015-2017		B4204T11	ECM	Freeze frame	
V40(13-)	2015-2017		B4204T11	ECM	Special functions	Test of fuel pressure regulation ,low pressure side.
V40(13-)	2015-2017		B4204T11	ECM	Special functions	Test of fuel pressure regulation ,high pressure side.
V40(13-)	2015-2017		B4204T11	ECM	Special functions	Resetting adaptations and wear counter for supercharger
V40(13-)	2015-2017		B4204T11	ECM	Special functions	Resetting adaptations for fuel/air mix (fuel trim)
V40(13-)	2015-2017		B4204T11	ECM	Special functions	Resetting adaptations for rear heated oxygen sensor regulation
V40(13-)	2015-2017		B4204T11	ECM	Special functions	Resetting adaptations for camshaft regulation,intake
V40(13-)	2015-2017		B4204T11	ECM	Special functions	Resetting adaptations for camshaft regulation,exhaust
V40(13-)	2015-2017		B4204T11	ECM	Special functions	Resetting adaptations for the fuel pump,low pressure side
V40(13-)	2015-2017		B4204T11	ECM	Special functions	Resetting adaptations for cylinder balancing
V40(13-)	2015-2017		B4204T11	ECM	Special functions	Resetting adaptations for the throttle

model	year	type	system	function	subfunction
V40(13-)	2015-2017	B4204T11	ECM	Special functions	Adaptation of neutral position sensor
V40(13-)	2015-2017	B4164T3	ECM	Sys. Info.	
V40(13-)	2015-2017	B4164T3	ECM	Read code	
V40(13-)	2015-2017	B4164T3	ECM	Clear code	
V40(13-)	2015-2017	B4164T3	ECM	Data stream	
V40(13-)	2015-2017	B4164T3	ECM	Actuation	
V40(13-)	2015-2017	B4164T3	ECM	Freeze frame	
V40(13-)	2015-2017	B4164T3	ECM	Special functions	Adaptation of the throttle unit
V40(13-)	2015-2017	B4164T3	ECM	Special functions	Resetting the adaptation values
V40(13-)	2015-2017	B4164T3	ECM	Special functions	Adaptation of oil level sensor
V40(13-)	2015-2017	B4164T3	ECM	Special functions	Checking injectors
V40(13-)	2015-2017	B4164T3	ECM	Special functions	Adaptation of neutral position sensor
V40(13-)	2015-2017	B5204T9	ECM	Sys. Info.	
V40(13-)	2015-2017	B5204T9	ECM	Read code	
V40(13-)	2015-2017	B5204T9	ECM	Clear code	
V40(13-)	2015-2017	B5204T9	ECM	Data stream	
V40(13-)	2015-2017	B5204T9	ECM	Actuation	
V40(13-)	2015-2017	B5204T9	ECM	Freeze frame	
V40(13-)	2015-2017	B5204T9	ECM	Special functions	Resetting the adaptation values
V40(13-)	2015-2017	B5204T9	SRS	Sys. Info.	
V40(13-)	2015-2017	B5204T9	SRS	Read code	
V40(13-)	2015-2017	B5204T9	SRS	Clear code	
V40(13-)	2015-2017	B5204T9	SRS	Data stream	
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Sys. Info.	
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Read code	
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Clear code	
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Data stream	
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Actuation	
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Freeze frame	
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Test of fuel pressure regulation,high pressure side.
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Test of fuel flow regulation valve.
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Testing of fuel pressure control valve
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Resetting adaptations for fuel flow regulation valve
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Resetting adaptations for swirl damper
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Resetting adaptations for turbocharger control
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Resetting adaptations for the EGR valve
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Resetting adaptations for the diesel particle filter
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Resetting adaptations for the particle filter differential pressure sensor
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Resetting adaptations for front heated oxygen sensor
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Resetting adaptations for rear heated oxygen sensor
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Resetting adaptations for the injectors
V40(13-)	2015-2017	D4204T14	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V40(13-)	2015-2017	D5204T6	DIESEL ENG	Sys. Info.	
V40(13-)	2015-2017	D5204T6	DIESEL ENG	Read code	
V40(13-)	2015-2017	D5204T6	DIESEL ENG	Clear code	
V40(13-)	2015-2017	D5204T6	DIESEL ENG	Data stream	
V40(13-)	2015-2017	D5204T6	DIESEL ENG	Actuation	
V40(13-)	2015-2017	D5204T6	DIESEL ENG	Freeze frame	
V40(13-)	2015-2017	D5204T6	DIESEL ENG	Special functions	Checking injectors
V40(13-)	2015-2017	D5204T6	DIESEL ENG	Special functions	Checking the oil level
V40(13-)	2015-2017	D5204T6	DIESEL ENG	Special functions	Adjusting calculated oil level/oil quality
V40(13-)	2015-2017	D5204T6	DIESEL ENG	Special functions	Adaptation of differential pressure sensor particle filter
V40(13-)	2015-2017	D5204T6	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V40(13-)	2015-2017	D4162T	DIESEL ENG	Sys. Info.	
V40(13-)	2015-2017	D4162T	DIESEL ENG	Read code	
V40(13-)	2015-2017	D4162T	DIESEL ENG	Clear code	
V40(13-)	2015-2017	D4162T	DIESEL ENG	Data stream	
V40(13-)	2015-2017	D4162T	DIESEL ENG	Actuation	
V40(13-)	2015-2017	D4162T	DIESEL ENG	Freeze frame	
V40(13-)	2015-2017	D4162T	DIESEL ENG	Special functions	Adaptation of neutral position sensor
V40(13-)	2015-2017	D4162T	CEM	Sys. Info.	
V40(13-)	2015-2017	D4162T	CEM	Read code	
V40(13-)	2015-2017	D4162T	CEM	Clear code	
V40(13-)	2015-2017	D4162T	CEM	Data stream	
V40(13-)	2015-2017	D4162T	CEM	Actuation	
V40(13-)	2015-2017	D4162T	CEM	Special functions	Reading off power supply position
V40(13-)	2015-2017	D4162T	CEM	Special functions	Read-out and resetting alco-lock
V40(13-)	2015-2017	D4162T	CEM	Special functions	Reading off alarm cause
V40(13-)	2015-2017	D4162T	CEM	Special functions	Activating wipers,front/rear
V40(13-)	2015-2017	D4162T	CEM	Special functions	Programming of rear window wiper when reversing
V40(13-)	2015-2017	D4162T	CEM	Special functions	Calibration of position sensor
V40(13-)	2015-2017	D4162T	CEM	Special functions	Setting day and night mode for the instrumentation
V40(13-)	2015-2017	D4162T	CEM	Special functions	Initiating the sun blind
V40(13-)	2015-2017	D4162T	CEM	Special functions	Readout of current from battery monitoring sensor
V40(13-)	2015-2017	D4162T	CEM	Special functions	Readout of information stand-by current
V40(13-)	2015-2017	D4162T	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery

model	year	type	system	function	subfunction
V40(13-)	2015-2017	D4162T	CEM	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor(BMS)
V40(13-)	2015-2017	D4162T	CEM	Special functions	Remote controlled immobilising,status
V40(13-)	2015-2017	D4162T	CEM	Special functions	Remote controlled immobilising,cause
V40(13-)	2015-2017	D4162T	DIM	Sys. Info.	
V40(13-)	2015-2017	D4162T	DIM	Read code	
V40(13-)	2015-2017	D4162T	DIM	Clear code	
V40(13-)	2015-2017	D4162T	DIM	Data stream	
V40(13-)	2015-2017	D4162T	DIM	Special functions	Resetting the service reminder indicator (SRI)
V40(13-)	2015-2017	D4162T	DIM	Special functions	Testing all indicators and lamps in the driver information module (DIM)
V40(13-)	2015-2017	D4162T	DIM	Special functions	Read-out of fuel volume
V40(13-)	2015-2017	D4162T	DIM	Special functions	Display of vehicle speed
V40(13-)	2015-2017	D4162T	DIM	Special functions	Programming seatbelt reminder in backseat
V40(13-)	2015-2017	D4162T	DIM	Special functions	Programming text message,seatbelt reminder
V40(13-)	2015-2017	D4162T	CCM	Sys. Info.	
V40(13-)	2015-2017	D4162T	CCM	Read code	
V40(13-)	2015-2017	D4162T	CCM	Clear code	
V40(13-)	2015-2017	D4162T	CCM	Data stream	
V40(13-)	2015-2017	D4162T	CCM	Actuation	
V40(13-)	2015-2017	D4162T	CCM	Special functions	Reading-out programmed parameters
V40(13-)	2015-2017	D4162T	CCM	Special functions	Calibrating the Climate Control Module(CCM)
V40(13-)	2015-2017	D4162T	CCM	Special functions	Identifying components on the LIN network that belong to the climate system(CCM)
V40(13-)	2015-2017	D4162T	CCM	Special functions	Compartment fan afterblow
V40(13-)	2015-2017	D4162T	CCM	Special functions	Programming the climate control module(CCM)
V40(13-)	2015-2017	D4162T	DABM	Sys. Info.	
V40(13-)	2015-2017	D4162T	DABM	Read code	
V40(13-)	2015-2017	D4162T	DABM	Clear code	
V40(13-)	2015-2017	D4162T	DABM	Data stream	
V40(13-)	2015-2017	D4162T	PPM	Sys. Info.	
V40(13-)	2015-2017	D4162T	PPM	Read code	
V40(13-)	2015-2017	D4162T	PPM	Clear code	
V40(13-)	2015-2017	D4162T	PPM	Data stream	
V40(13-)	2015-2017	D4162T	AUD	Sys. Info.	
V40(13-)	2015-2017	D4162T	AUD	Read code	
V40(13-)	2015-2017	D4162T	AUD	Clear code	
V40(13-)	2015-2017	D4162T	AUD	Special functions	Checking headphone socket
V40(13-)	2015-2017	D4162T	ABS	Sys. Info.	
V40(13-)	2015-2017	D4162T	ABS	Read code	
V40(13-)	2015-2017	D4162T	ABS	Clear code	
V40(13-)	2015-2017	D4162T	ABS	Data stream	
V40(13-)	2015-2017	D4162T	ABS	Actuation	
V40(13-)	2015-2017	D4162T	ABS	Freeze frame	
V40(13-)	2015-2017	D4162T	ABS	Special functions	Calibration
V40(13-)	2015-2017	D4162T	CPM	Sys. Info.	
V40(13-)	2015-2017	D4162T	CPM	Read code	
V40(13-)	2015-2017	D4162T	CPM	Clear code	
V40(13-)	2015-2017	D4162T	CPM	Data stream	
V40(13-)	2015-2017	D4162T	CVM	Sys. Info.	
V40(13-)	2015-2017	D4162T	CVM	Read code	
V40(13-)	2015-2017	D4162T	CVM	Clear code	
V40(13-)	2015-2017	D4162T	DDM	Sys. Info.	
V40(13-)	2015-2017	D4162T	DDM	Read code	
V40(13-)	2015-2017	D4162T	DDM	Clear code	
V40(13-)	2015-2017	D4162T	DDM	Data stream	
V40(13-)	2015-2017	D4162T	DDM	Actuation	
V40(13-)	2015-2017	D4162T	DDM	Special functions	Initializing the window in the front door.
V40(13-)	2015-2017	D4162T	DDM	Special functions	Initializing the window in the rear door.
V40(13-)	2015-2017	D4162T	DDM	Special functions	Central lock motors,activating
V40(13-)	2015-2017	D4162T	FSM	Sys. Info.	
V40(13-)	2015-2017	D4162T	FSM	Read code	
V40(13-)	2015-2017	D4162T	FSM	Clear code	
V40(13-)	2015-2017	D4162T	FSM	Data stream	
V40(13-)	2015-2017	D4162T	FSM	Special functions	Calibration of radar and camera.
V40(13-)	2015-2017	D4162T	FSM	Special functions	Activating heating coil,FSM
V40(13-)	2015-2017	D4162T	FSM	Special functions	Activating of the indicator for visual collision warning
V40(13-)	2015-2017	D4162T	FSM	Special functions	Activating the internal test procedures
V40(13-)	2015-2017	D4162T	IAM	Sys. Info.	
V40(13-)	2015-2017	D4162T	IAM	Read code	
V40(13-)	2015-2017	D4162T	IAM	Clear code	
V40(13-)	2015-2017	D4162T	ICM	Sys. Info.	
V40(13-)	2015-2017	D4162T	ICM	Read code	
V40(13-)	2015-2017	D4162T	ICM	Clear code	
V40(13-)	2015-2017	D4162T	ICM	Data stream	
V40(13-)	2015-2017	D4162T	ICM	Special functions	Communication on MOST
V40(13-)	2015-2017	D4162T	KVM	Sys. Info.	
V40(13-)	2015-2017	D4162T	KVM	Read code	



model	year	type	system	function	subfunction
V40(13-)	2015-2017	D4162T	KVM	Clear code	
V40(13-)	2015-2017	D4162T	KVM	Data stream	
V40(13-)	2015-2017	D4162T	KVM	Special functions	Check the communication with the remote control receiver
V40(13-)	2015-2017	D4162T	KVM	Special functions	Remote control
V40(13-)	2015-2017	D4162T	KVM	Special functions	Test of internal memory
V40(13-)	2015-2017	D4162T	KVM	Special functions	Checking all antennas
V40(13-)	2015-2017	D4162T	PAC	Sys. Info.	
V40(13-)	2015-2017	D4162T	PAC	Read code	
V40(13-)	2015-2017	D4162T	PAC	Clear code	
V40(13-)	2015-2017	D4162T	PAC	Data stream	
V40(13-)	2015-2017	D4162T	PAC	Special functions	Parking camera,setting(V40/V40 Cross Country;S60/V60/XC60 structure week 13w46-)
V40(13-)	2015-2017	D4162T	PAC	Special functions	Parking camera,activating(V40/V40 Cross Country;S60/V60/XC60 structure week 13w46-)
V40(13-)	2015-2017	D4162T	PAM	Sys. Info.	
V40(13-)	2015-2017	D4162T	PAM	Read code	
V40(13-)	2015-2017	D4162T	PAM	Clear code	
V40(13-)	2015-2017	D4162T	PAM	Data stream	
V40(13-)	2015-2017	D4162T	PBM	Sys. Info.	
V40(13-)	2015-2017	D4162T	PBM	Read code	
V40(13-)	2015-2017	D4162T	PBM	Clear code	
V40(13-)	2015-2017	D4162T	PBM	Data stream	
V40(13-)	2015-2017	D4162T	PBM	Special functions	Calibration angle sensor
V40(13-)	2015-2017	D4162T	PBM	Special functions	Activation and service
V40(13-)	2015-2017	D4162T	PBM	Special functions	Resetting the clutch pedal counter
V40(13-)	2015-2017	D4162T	PDM	Sys. Info.	
V40(13-)	2015-2017	D4162T	PDM	Read code	
V40(13-)	2015-2017	D4162T	PDM	Clear code	
V40(13-)	2015-2017	D4162T	PDM	Data stream	
V40(13-)	2015-2017	D4162T	PDM	Actuation	
V40(13-)	2015-2017	D4162T	PDM	Special functions	Initializing the window in the front door.
V40(13-)	2015-2017	D4162T	PDM	Special functions	Initializing the window in the rear door.
V40(13-)	2015-2017	D4162T	PDM	Special functions	Central lock motors,activating
V40(13-)	2015-2017	D4162T	PHM	Sys. Info.	
V40(13-)	2015-2017	D4162T	PHM	Read code	
V40(13-)	2015-2017	D4162T	PHM	Clear code	
V40(13-)	2015-2017	D4162T	PHM	Data stream	
V40(13-)	2015-2017	D4162T	PHM	Special functions	Reinstalling the reserve battery
V40(13-)	2015-2017	D4162T	PSCM	Sys. Info.	
V40(13-)	2015-2017	D4162T	PSCM	Read code	
V40(13-)	2015-2017	D4162T	PSCM	Clear code	
V40(13-)	2015-2017	D4162T	PSCM	Data stream	
V40(13-)	2015-2017	D4162T	PSCM	Special functions	Adjustment of deflection limit on steering gear
V40(13-)	2015-2017	D4162T	PSM	Sys. Info.	
V40(13-)	2015-2017	D4162T	PSM	Read code	
V40(13-)	2015-2017	D4162T	PSM	Clear code	
V40(13-)	2015-2017	D4162T	PSM	Data stream	
V40(13-)	2015-2017	D4162T	PSM	Actuation	
V40(13-)	2015-2017	D4162T	PSM	Special functions	Programming the seat memory delay time
V40(13-)	2015-2017	D4162T	SAS	Sys. Info.	
V40(13-)	2015-2017	D4162T	SAS	Read code	
V40(13-)	2015-2017	D4162T	SAS	Clear code	
V40(13-)	2015-2017	D4162T	SAS	Data stream	
V40(13-)	2015-2017	D4162T	SODL	Sys. Info.	
V40(13-)	2015-2017	D4162T	SODL	Read code	
V40(13-)	2015-2017	D4162T	SODL	Clear code	
V40(13-)	2015-2017	D4162T	SODL	Data stream	
V40(13-)	2015-2017	D4162T	SODR	Sys. Info.	
V40(13-)	2015-2017	D4162T	SODR	Read code	
V40(13-)	2015-2017	D4162T	SODR	Clear code	
V40(13-)	2015-2017	D4162T	SODR	Data stream	
V40(13-)	2015-2017	D4162T	TCM	Sys. Info.	
V40(13-)	2015-2017	D4162T	TCM	Read code	
V40(13-)	2015-2017	D4162T	TCM	Clear code	
V40(13-)	2015-2017	D4162T	TCM	Data stream	
V40(13-)	2015-2017	D4162T	TCM	Freeze frame	
V40(13-)	2015-2017	D4162T	TCM	Special functions	Resetting adaptation
V40(13-)	2015-2017	D4162T	TCM	Special functions	Resetting the Transmission fluid change counter
V40(13-)	2015-2017	D4162T	TCM	Special functions	Calibration of gear indication
V40(13-)	2015-2017	D4162T	TCM	Special functions	Activating of gear indication
V40(13-)	2015-2017	D4162T	TCM	Special functions	Control module adaptation
V40(13-)	2015-2017	D4162T	TRM	Sys. Info.	
V40(13-)	2015-2017	D4162T	TRM	Read code	
V40(13-)	2015-2017	D4162T	TRM	Clear code	
V40(13-)	2015-2017	D4162T	TRM	Data stream	
V40(13-)	2015-2017	D4162T	TVM	Sys. Info.	
V40(13-)	2015-2017	D4162T	TVM	Read code	

model	year	type	system	function	subfunction
V40(13-)	2015-2017	D4162T	TVM	Clear code	
XC90	2016-2017		CEM	Sys. Info.	
XC90	2016-2017		CEM	Read code	
XC90	2016-2017		CEM	Clear code	
XC90	2016-2017		CEM	Data stream	
XC90	2016-2017		CEM	Actuation	
XC90	2016-2017		ECM	Sys. Info.	
XC90	2016-2017		ECM	Read code	
XC90	2016-2017		ECM	Clear code	
XC90	2016-2017		ECM	Data stream	
XC90	2016-2017		ECM	Actuation	
XC90	2016-2017		ECM	Special functions	Reset the adaptation function of the fuel/air mixing (fuel trim)
XC90	2016-2017		ECM	Special functions	Read out the reason why the engine was blocked to stop automatically in the recent 10 times
XC90	2016-2017		ECM	Special functions	Readout frequency of engine being blocked to stop automatically
XC90	2016-2017		ECM	Special functions	Misfire counter
XC90	2016-2017		ECM	Special functions	Ignition failure counter, emission and catalyst related
XC90	2016-2017		ECM	Special functions	After maintenance, input the engine oil level
XC90	2016-2017		DIESEL ENG	Sys. Info.	
XC90	2016-2017		DIESEL ENG	Read code	
XC90	2016-2017		DIESEL ENG	Clear code	
XC90	2016-2017		DIESEL ENG	Data stream	
XC90	2016-2017		DIESEL ENG	Actuation	
XC90	2016-2017		DIESEL ENG	Special functions	Read out the reason why the engine was blocked to stop automatically in the recent 10 times
XC90	2016-2017		DIESEL ENG	Special functions	Readout frequency of engine being blocked to stop automatically
XC90	2016-2017		TCM	Sys. Info.	
XC90	2016-2017		TCM	Read code	
XC90	2016-2017		TCM	Clear code	
XC90	2016-2017		TCM	Data stream	
XC90	2016-2017		TCM	Special functions	Resetting the adaptation
XC90	2016-2017		TCM	Special functions	Gear position sensor calibration
XC90	2016-2017		TCM	Special functions	Activating gear indication
XC90	2016-2017		TCM	Special functions	Adjustment of the control module
XC90	2016-2017		TCM	Special functions	Read out the transmission oil temperature
XC90	2016-2017		BCM	Sys. Info.	
XC90	2016-2017		BCM	Read code	
XC90	2016-2017		BCM	Clear code	
XC90	2016-2017		BCM	Data stream	
XC90	2016-2017		BCM	Actuation	
XC90	2016-2017		BCM	Special functions	Calibrate the BCM (Brake Control Module) internal pressure sensor, steering angle sensor and the sensor in the inertia unit
XC90	2016-2017		BCM	Special functions	Handbrake maintenance position
XC90	2016-2017		BCM	Special functions	Calibration of Brake Control Module (BCM) internal hydraulic control unit
XC90	2016-2017		SRS	Sys. Info.	
XC90	2016-2017		SRS	Read code	
XC90	2016-2017		SRS	Clear code	
XC90	2016-2017		SRS	Data stream	
XC90	2016-2017		SRS	Special functions	Check security related assembly when crash occurs
XC90	2016-2017		SRS	Special functions	Calibrate the occupant weight sensor (OWS)
XC90	2016-2017		DIM	Sys. Info.	
XC90	2016-2017		DIM	Read code	
XC90	2016-2017		DIM	Clear code	
XC90	2016-2017		DIM	Data stream	
XC90	2016-2017		DIM	Actuation	
XC90	2016-2017		DIM	Special functions	Resetting the service reminder indicator (SRI)
XC90	2016-2017		BECM	Sys. Info.	
XC90	2016-2017		BECM	Read code	
XC90	2016-2017		BECM	Clear code	
XC90	2016-2017		ASDM	Sys. Info.	
XC90	2016-2017		ASDM	Read code	
XC90	2016-2017		ASDM	Clear code	
XC90	2016-2017		ASDM	Data stream	
XC90	2016-2017		CCM	Sys. Info.	
XC90	2016-2017		CCM	Read code	
XC90	2016-2017		CCM	Clear code	
XC90	2016-2017		CCM	Data stream	
XC90	2016-2017		CCM	Special functions	Maintenance position, damper motor
XC90	2016-2017		CCM	Special functions	Calibrate damper motor
XC90	2016-2017		CCM	Special functions	Identification of the control module
XC90	2016-2017		PDM	Sys. Info.	
XC90	2016-2017		PDM	Read code	
XC90	2016-2017		PDM	Clear code	

model	year	type	system	function	subfunction
XC90	2016-2017		PDM	Data stream	
XC90	2016-2017		PDM	Actuation	
XC90	2016-2017		PDM	Special functions	Initial start the window of front door
XC90	2016-2017		DDM	Sys. Info.	
XC90	2016-2017		DDM	Read code	
XC90	2016-2017		DDM	Clear code	
XC90	2016-2017		DDM	Data stream	
XC90	2016-2017		DDM	Actuation	
XC90	2016-2017		DDM	Special functions	Initial start the window of front door
XC90	2016-2017		SAS	Sys. Info.	
XC90	2016-2017		SAS	Read code	
XC90	2016-2017		SAS	Clear code	
XC90	2016-2017		DEM	Sys. Info.	
XC90	2016-2017		DEM	Read code	
XC90	2016-2017		DEM	Clear code	
XC90	2016-2017		DEM	Data stream	
XC90	2016-2017		DEM	Special functions	Oil pressure pump DEM (Differential Electronic Module) bleeding
XC90	2016-2017		DEM	Special functions	Calibrate the Differential Electronic Module (DEM)
XC90	2016-2017		TVM	Sys. Info.	
XC90	2016-2017		TVM	Read code	
XC90	2016-2017		TVM	Clear code	
XC90	2016-2017		AGU	Sys. Info.	
XC90	2016-2017		AGU	Read code	
XC90	2016-2017		AGU	Clear code	
XC90	2016-2017		IEM	Sys. Info.	
XC90	2016-2017		IEM	Read code	
XC90	2016-2017		IEM	Clear code	
XC90	2016-2017		TEM	Sys. Info.	
XC90	2016-2017		TEM	Read code	
XC90	2016-2017		TEM	Clear code	
XC90	2016-2017		TEM	Data stream	
XC90	2016-2017		TEM	Special functions	Reset the algorithm of the Telematic Module backup battery
XC90	2016-2017		SUM	Sys. Info.	
XC90	2016-2017		SUM	Read code	
XC90	2016-2017		SUM	Clear code	
XC90	2016-2017		IGM	Sys. Info.	
XC90	2016-2017		IGM	Read code	
XC90	2016-2017		IGM	Clear code	
XC90	2016-2017		PAM	Sys. Info.	
XC90	2016-2017		PAM	Read code	
XC90	2016-2017		PAM	Clear code	
XC90	2016-2017		PAM	Data stream	
XC90	2016-2017		EGSM	Sys. Info.	
XC90	2016-2017		EGSM	Read code	
XC90	2016-2017		EGSM	Clear code	
XC90	2016-2017		TRM	Sys. Info.	
XC90	2016-2017		TRM	Read code	
XC90	2016-2017		TRM	Clear code	
XC90	2016-2017		TRM	Actuation	
XC90	2016-2017		PSCM	Sys. Info.	
XC90	2016-2017		PSCM	Read code	
XC90	2016-2017		PSCM	Clear code	
XC90	2016-2017		PSCM	Data stream	
XC90	2016-2017		WAM	Sys. Info.	
XC90	2016-2017		WAM	Read code	
XC90	2016-2017		WAM	Clear code	
XC90	2016-2017		WAM	Data stream	
XC90	2016-2017		WAM	Special functions	Wide-angle vision module, camera learning
XC90	2016-2017		WAM	Special functions	Enable the Telematic Module (TEM)
XC90	2016-2017		IHU	Sys. Info.	
XC90	2016-2017		IHU	Read code	
XC90	2016-2017		IHU	Clear code	
XC90	2016-2017		IHU	Data stream	
XC90	2016-2017		IHU	Actuation	
XC90	2016-2017		IHU	Special functions	Infotainment Head Unit (IHU), engineering mode
XC90	2016-2017		IHU	Special functions	IHU pin reset
XC90	2016-2017		IHU	Special functions	Remove map, IHU
XC90	2016-2017		OBC	Sys. Info.	
XC90	2016-2017		OBC	Read code	
XC90	2016-2017		OBC	Clear code	
XC90	2016-2017		AUD	Sys. Info.	
XC90	2016-2017		AUD	Read code	
XC90	2016-2017		AUD	Clear code	
XC90	2016-2017		AUD	Data stream	
XC90	2016-2017		SODR	Sys. Info.	
XC90	2016-2017		SODR	Read code	

model	year	type	system	function	subfunction
XC90	2016-2017		SODR	Clear code	
XC90	2016-2017		SODR	Data stream	
XC90	2016-2017		SODL	Sys. Info.	
XC90	2016-2017		SODL	Read code	
XC90	2016-2017		SODL	Clear code	
XC90	2016-2017		SODL	Data stream	
XC90	2016-2017		OHC	Sys. Info.	
XC90	2016-2017		OHC	Read code	
XC90	2016-2017		OHC	Clear code	
XC90	2016-2017		OHC	Data stream	
XC90	2016-2017		VDDM	Sys. Info.	
XC90	2016-2017		VDDM	Read code	
XC90	2016-2017		VDDM	Clear code	
XC90	2016-2017		VDDM	Data stream	
XC90	2016-2017		VDDM	Actuation	
XC90	2016-2017		VDDM	Special functions	Calibrate the height sensor in the VDDM
XC90	2016-2017		TACM	Sys. Info.	
XC90	2016-2017		TACM	Read code	
XC90	2016-2017		TACM	Clear code	
XC90	2016-2017		VCM	Sys. Info.	
XC90	2016-2017		VCM	Read code	
XC90	2016-2017		VCM	Clear code	
XC90	2016-2017		VCM	Data stream	
XC90	2016-2017		VCM	Actuation	
XC90	2016-2017		VCM	Special functions	In-progress remote update reset in the Vehicle Communication Module (VCM)
XC90	2016-2017		VCM	Special functions	Change the WiFi detection and connection mode
XC90	2016-2017		PSMP	Sys. Info.	
XC90	2016-2017		PSMP	Read code	
XC90	2016-2017		PSMP	Clear code	
XC90	2016-2017		PSMP	Data stream	
XC90	2016-2017		PSMD	Sys. Info.	
XC90	2016-2017		PSMD	Read code	
XC90	2016-2017		PSMD	Clear code	
XC90	2016-2017		PSMD	Data stream	
XC90	2016-2017		RMR	Sys. Info.	
XC90	2016-2017		RMR	Read code	
XC90	2016-2017		RMR	Clear code	
XC90	2016-2017		RMR	Data stream	
XC90	2016-2017		RML	Sys. Info.	
XC90	2016-2017		RML	Read code	
XC90	2016-2017		RML	Clear code	
XC90	2016-2017		RML	Data stream	
XC90	2016-2017		POT	Sys. Info.	
XC90	2016-2017		POT	Read code	
XC90	2016-2017		POT	Clear code	
XC90	2016-2017		POT	Data stream	
XC90	2016-2017		POT	Special functions	Operation control of tailgate
XC90	2016-2017		ESM	Sys. Info.	
XC90	2016-2017		ESM	Read code	
XC90	2016-2017		ESM	Clear code	
XC90	2016-2017		SCL	Sys. Info.	
XC90	2016-2017		SCL	Read code	
XC90	2016-2017		SCL	Clear code	
XC90	2016-2017		HUD	Sys. Info.	
XC90	2016-2017		SWM	Sys. Info.	
XC90	2016-2017		SWM	Data stream	
XC90	2016-2017		CCD	Sys. Info.	
XC90	2016-2017		BMS	Sys. Info.	
XC90	2016-2017		BMS	Data stream	
XC90	2016-2017		GSM	Sys. Info.	
XC90	2016-2017		GSM	Data stream	
XC90	2016-2017		IMS	Sys. Info.	
XC90	2016-2017		IMS	Data stream	
XC90	2016-2017		BBS	Sys. Info.	
XC90	2016-2017		BBS	Data stream	
XC90	2016-2017		AEEM	Sys. Info.	
S90	2017		CEM	Sys. Info.	
S90	2017		CEM	Read code	
S90	2017		CEM	Clear code	
S90	2017		CEM	Data stream	
S90	2017		CEM	Actuation	
S90	2017		ECM	Sys. Info.	
S90	2017		ECM	Read code	
S90	2017		ECM	Clear code	
S90	2017		ECM	Data stream	
S90	2017		ECM	Actuation	

model	year	type	system	function	subfunction
S90	2017		ECM	Special functions	Reset the adaptation function of the fuel/air mixing (fuel trim)
S90	2017		ECM	Special functions	Read out the reason why the engine was blocked to stop automatically in the recent 10 times
S90	2017		ECM	Special functions	Readout frequency of engine being blocked to stop automatically
S90	2017		ECM	Special functions	Misfire counter
S90	2017		ECM	Special functions	Ignition failure counter, emission and catalyst related
S90	2017		ECM	Special functions	After maintenance, input the engine oil level
S90	2017		DIESEL ENG	Sys. Info.	
S90	2017		DIESEL ENG	Read code	
S90	2017		DIESEL ENG	Clear code	
S90	2017		DIESEL ENG	Data stream	
S90	2017		DIESEL ENG	Actuation	
S90	2017		DIESEL ENG	Special functions	Read out the reason why the engine was blocked to stop automatically in the recent 10 times
S90	2017		DIESEL ENG	Special functions	Readout frequency of engine being blocked to stop automatically
S90	2017		TCM	Sys. Info.	
S90	2017		TCM	Read code	
S90	2017		TCM	Clear code	
S90	2017		TCM	Data stream	
S90	2017		TCM	Special functions	Resetting the adaptation
S90	2017		TCM	Special functions	Gear position sensor calibration
S90	2017		TCM	Special functions	Activating gear indication
S90	2017		TCM	Special functions	Adjustment of the control module
S90	2017		TCM	Special functions	Read out the transmission oil temperature
S90	2017		BCM	Sys. Info.	
S90	2017		BCM	Read code	
S90	2017		BCM	Clear code	
S90	2017		BCM	Data stream	
S90	2017		BCM	Actuation	
S90	2017		BCM	Special functions	Calibrate the BCM (Brake Control Module) internal pressure sensor, steering angle sensor and the sensor in the inertia unit
S90	2017		BCM	Special functions	Handbrake maintenance position
S90	2017		BCM	Special functions	Calibration of Brake Control Module (BCM) internal hydraulic control unit
S90	2017		SRS	Sys. Info.	
S90	2017		SRS	Read code	
S90	2017		SRS	Clear code	
S90	2017		SRS	Data stream	
S90	2017		SRS	Special functions	Check security related assembly when crash occurs
S90	2017		SRS	Special functions	Calibrate the occupant weight sensor (OWS)
S90	2017		DIM	Sys. Info.	
S90	2017		DIM	Read code	
S90	2017		DIM	Clear code	
S90	2017		DIM	Data stream	
S90	2017		DIM	Actuation	
S90	2017		DIM	Special functions	Resetting the service reminder indicator (SRI)
S90	2017		ASDM	Sys. Info.	
S90	2017		ASDM	Read code	
S90	2017		ASDM	Clear code	
S90	2017		ASDM	Data stream	
S90	2017		CCM	Sys. Info.	
S90	2017		CCM	Read code	
S90	2017		CCM	Clear code	
S90	2017		CCM	Data stream	
S90	2017		CCM	Special functions	Maintenance position, damper motor
S90	2017		CCM	Special functions	Calibrate damper motor
S90	2017		CCM	Special functions	Identification of the control module
S90	2017		PDM	Sys. Info.	
S90	2017		PDM	Read code	
S90	2017		PDM	Clear code	
S90	2017		PDM	Data stream	
S90	2017		PDM	Actuation	
S90	2017		PDM	Special functions	Initial start the window of front door
S90	2017		DDM	Sys. Info.	
S90	2017		DDM	Read code	
S90	2017		DDM	Clear code	
S90	2017		DDM	Data stream	
S90	2017		DDM	Actuation	
S90	2017		DDM	Special functions	Initial start the window of front door
S90	2017		SAS	Sys. Info.	
S90	2017		SAS	Read code	
S90	2017		SAS	Clear code	
S90	2017		DEM	Sys. Info.	
S90	2017		DEM	Read code	

model	year	type	system	function	subfunction
S90	2017		DEM	Clear code	
S90	2017		DEM	Data stream	
S90	2017		TVM	Sys. Info.	
S90	2017		TVM	Read code	
S90	2017		TVM	Clear code	
S90	2017		AGU	Sys. Info.	
S90	2017		AGU	Read code	
S90	2017		AGU	Clear code	
S90	2017		SUM	Sys. Info.	
S90	2017		SUM	Read code	
S90	2017		SUM	Clear code	
S90	2017		PAM	Sys. Info.	
S90	2017		PAM	Read code	
S90	2017		PAM	Clear code	
S90	2017		PAM	Data stream	
S90	2017		TRM	Sys. Info.	
S90	2017		TRM	Read code	
S90	2017		TRM	Clear code	
S90	2017		TRM	Actuation	
S90	2017		PSCM	Sys. Info.	
S90	2017		PSCM	Read code	
S90	2017		PSCM	Clear code	
S90	2017		PSCM	Data stream	
S90	2017		WAM	Sys. Info.	
S90	2017		WAM	Read code	
S90	2017		WAM	Clear code	
S90	2017		WAM	Data stream	
S90	2017		WAM	Special functions	Wide-angle vision module, camera learning
S90	2017		WAM	Special functions	Enable the Telematic Module (TEM)
S90	2017		IHU	Sys. Info.	
S90	2017		IHU	Read code	
S90	2017		IHU	Clear code	
S90	2017		IHU	Data stream	
S90	2017		IHU	Actuation	
S90	2017		IHU	Special functions	Infotainment Head Unit (IHU), engineering mode
S90	2017		IHU	Special functions	IHU pin reset
S90	2017		IHU	Special functions	Remove map, IHU
S90	2017		AUD	Sys. Info.	
S90	2017		AUD	Read code	
S90	2017		AUD	Clear code	
S90	2017		AUD	Data stream	
S90	2017		SODR	Sys. Info.	
S90	2017		SODR	Read code	
S90	2017		SODR	Clear code	
S90	2017		SODR	Data stream	
S90	2017		SODL	Sys. Info.	
S90	2017		SODL	Read code	
S90	2017		SODL	Clear code	
S90	2017		SODL	Data stream	
S90	2017		OHC	Sys. Info.	
S90	2017		OHC	Read code	
S90	2017		OHC	Clear code	
S90	2017		OHC	Data stream	
S90	2017		VDDM	Sys. Info.	
S90	2017		VDDM	Read code	
S90	2017		VDDM	Clear code	
S90	2017		VDDM	Data stream	
S90	2017		VDDM	Actuation	
S90	2017		VDDM	Special functions	Calibrate the height sensor in the VDDM
S90	2017		VCM	Sys. Info.	
S90	2017		VCM	Read code	
S90	2017		VCM	Clear code	
S90	2017		VCM	Data stream	
S90	2017		VCM	Actuation	
S90	2017		VCM	Special functions	In-progress remote update reset in the Vehicle Communication Module (VCM)
S90	2017		VCM	Special functions	Change the WiFi detection and connection mode
S90	2017		PSMP	Sys. Info.	
S90	2017		PSMP	Read code	
S90	2017		PSMP	Clear code	
S90	2017		PSMP	Data stream	
S90	2017		PSMD	Sys. Info.	
S90	2017		PSMD	Read code	
S90	2017		PSMD	Clear code	
S90	2017		PSMD	Data stream	
S90	2017		RMR	Sys. Info.	
S90	2017		RMR	Read code	
S90	2017		RMR	Clear code	

model	year	type	system	function	subfunction
S90	2017		RMR	Data stream	
S90	2017		RML	Sys. Info.	
S90	2017		RML	Read code	
S90	2017		RML	Clear code	
S90	2017		RML	Data stream	
S90	2017		POT	Sys. Info.	
S90	2017		POT	Read code	
S90	2017		POT	Clear code	
S90	2017		POT	Data stream	
S90	2017		POT	Special functions	Operation control of tailgate
S90	2017		ESM	Sys. Info.	
S90	2017		ESM	Read code	
S90	2017		ESM	Clear code	
S90	2017		SCL	Sys. Info.	
S90	2017		SCL	Read code	
S90	2017		SCL	Clear code	
S90	2017		HUD	Sys. Info.	
S90	2017		SWM	Sys. Info.	
S90	2017		SWM	Data stream	
S90	2017		CCD	Sys. Info.	
S90	2017		BMS	Sys. Info.	
S90	2017		BMS	Data stream	
S90	2017		GSM	Sys. Info.	
S90	2017		GSM	Data stream	
S90	2017		IMS	Sys. Info.	
S90	2017		IMS	Data stream	
S90	2017		BBS	Sys. Info.	
S90	2017		BBS	Data stream	
S90	2017		AEEM	Sys. Info.	
V90	2017		CEM	Sys. Info.	
V90	2017		CEM	Read code	
V90	2017		CEM	Clear code	
V90	2017		CEM	Data stream	
V90	2017		CEM	Actuation	
V90	2017		ECM	Sys. Info.	
V90	2017		ECM	Read code	
V90	2017		ECM	Clear code	
V90	2017		ECM	Data stream	
V90	2017		ECM	Actuation	
V90	2017		ECM	Special functions	Reset the adaptation function of the fuel/air mixing (fuel trim)
V90	2017		ECM	Special functions	Read out the reason why the engine was blocked to stop automatically in the recent 10 times
V90	2017		ECM	Special functions	Readout frequency of engine being blocked to stop automatically
V90	2017		ECM	Special functions	Misfire counter
V90	2017		ECM	Special functions	Ignition failure counter, emission and catalyst related
V90	2017		ECM	Special functions	After maintenance, input the engine oil level
V90	2017		DIESEL ENG	Sys. Info.	
V90	2017		DIESEL ENG	Read code	
V90	2017		DIESEL ENG	Clear code	
V90	2017		DIESEL ENG	Data stream	
V90	2017		DIESEL ENG	Actuation	
V90	2017		DIESEL ENG	Special functions	Read out the reason why the engine was blocked to stop automatically in the recent 10 times
V90	2017		DIESEL ENG	Special functions	Readout frequency of engine being blocked to stop automatically
V90	2017		TCM	Sys. Info.	
V90	2017		TCM	Read code	
V90	2017		TCM	Clear code	
V90	2017		TCM	Data stream	
V90	2017		TCM	Special functions	Resetting the adaptation
V90	2017		TCM	Special functions	Gear position sensor calibration
V90	2017		TCM	Special functions	Activating gear indication
V90	2017		TCM	Special functions	Adjustment of the control module
V90	2017		TCM	Special functions	Read out the transmission oil temperature
V90	2017		BCM	Sys. Info.	
V90	2017		BCM	Read code	
V90	2017		BCM	Clear code	
V90	2017		BCM	Data stream	
V90	2017		BCM	Actuation	
V90	2017		BCM	Special functions	Calibrate the BCM (Brake Control Module) internal pressure sensor, steering angle sensor and the sensor in the inertia unit
V90	2017		BCM	Special functions	Handbrake maintenance position
V90	2017		BCM	Special functions	Calibration of Brake Control Module (BCM) internal hydraulic control unit
V90	2017		SRS	Sys. Info.	

model	year	type	system	function	subfunction
V90	2017		SRS	Read code	
V90	2017		SRS	Clear code	
V90	2017		SRS	Data stream	
V90	2017		SRS	Special functions	Check security related assembly when crash occurs
V90	2017		SRS	Special functions	Calibrate the occupant weight sensor (OWS)
V90	2017		DIM	Sys. Info.	
V90	2017		DIM	Read code	
V90	2017		DIM	Clear code	
V90	2017		DIM	Data stream	
V90	2017		DIM	Actuation	
V90	2017		DIM	Special functions	Resetting the service reminder indicator (SRI)
V90	2017		ASDM	Sys. Info.	
V90	2017		ASDM	Read code	
V90	2017		ASDM	Clear code	
V90	2017		ASDM	Data stream	
V90	2017		CCM	Sys. Info.	
V90	2017		CCM	Read code	
V90	2017		CCM	Clear code	
V90	2017		CCM	Data stream	
V90	2017		CCM	Special functions	Maintenance position, damper motor
V90	2017		CCM	Special functions	Calibrate damper motor
V90	2017		CCM	Special functions	Identification of the control module
V90	2017		PDM	Sys. Info.	
V90	2017		PDM	Read code	
V90	2017		PDM	Clear code	
V90	2017		PDM	Data stream	
V90	2017		PDM	Actuation	
V90	2017		PDM	Special functions	Initial start the window of front door
V90	2017		DDM	Sys. Info.	
V90	2017		DDM	Read code	
V90	2017		DDM	Clear code	
V90	2017		DDM	Data stream	
V90	2017		DDM	Actuation	
V90	2017		DDM	Special functions	Initial start the window of front door
V90	2017		SAS	Sys. Info.	
V90	2017		SAS	Read code	
V90	2017		SAS	Clear code	
V90	2017		DEM	Sys. Info.	
V90	2017		DEM	Read code	
V90	2017		DEM	Clear code	
V90	2017		DEM	Data stream	
V90	2017		TVM	Sys. Info.	
V90	2017		TVM	Read code	
V90	2017		TVM	Clear code	
V90	2017		AGU	Sys. Info.	
V90	2017		AGU	Read code	
V90	2017		AGU	Clear code	
V90	2017		SUM	Sys. Info.	
V90	2017		SUM	Read code	
V90	2017		SUM	Clear code	
V90	2017		PAM	Sys. Info.	
V90	2017		PAM	Read code	
V90	2017		PAM	Clear code	
V90	2017		PAM	Data stream	
V90	2017		TRM	Sys. Info.	
V90	2017		TRM	Read code	
V90	2017		TRM	Clear code	
V90	2017		TRM	Actuation	
V90	2017		PSCM	Sys. Info.	
V90	2017		PSCM	Read code	
V90	2017		PSCM	Clear code	
V90	2017		PSCM	Data stream	
V90	2017		WAM	Sys. Info.	
V90	2017		WAM	Read code	
V90	2017		WAM	Clear code	
V90	2017		WAM	Data stream	
V90	2017		WAM	Special functions	Wide-angle vision module, camera learning
V90	2017		WAM	Special functions	Enable the Telematic Module (TEM)
V90	2017		IHU	Sys. Info.	
V90	2017		IHU	Read code	
V90	2017		IHU	Clear code	
V90	2017		IHU	Data stream	
V90	2017		IHU	Actuation	
S90	2017		IHU	Special functions	Infotainment Head Unit (IHU), engineering mode
S90	2017		IHU	Special functions	IHU pin reset
S90	2017		IHU	Special functions	Remove map, IHU
V90	2017		AUD	Sys. Info.	
V90	2017		AUD	Read code	



model	year	type	system	function	subfunction
V90	2017		AUD	Clear code	
V90	2017		AUD	Data stream	
V90	2017		SODR	Sys. Info.	
V90	2017		SODR	Read code	
V90	2017		SODR	Clear code	
V90	2017		SODR	Data stream	
V90	2017		SODL	Sys. Info.	
V90	2017		SODL	Read code	
V90	2017		SODL	Clear code	
V90	2017		SODL	Data stream	
V90	2017		OHC	Sys. Info.	
V90	2017		OHC	Read code	
V90	2017		OHC	Clear code	
V90	2017		OHC	Data stream	
V90	2017		VDDM	Sys. Info.	
V90	2017		VDDM	Read code	
V90	2017		VDDM	Clear code	
V90	2017		VDDM	Data stream	
V90	2017		VDDM	Actuation	
V90	2017		VDDM	Special functions	Calibrate the height sensor in the VDDM
V90	2017		VCM	Sys. Info.	
V90	2017		VCM	Read code	
V90	2017		VCM	Clear code	
V90	2017		VCM	Data stream	
V90	2017		VCM	Actuation	
V90	2017		VCM	Special functions	In-progress remote update reset in the Vehicle Communication Module (VCM)
V90	2017		VCM	Special functions	Change the WiFi detection and connection mode
V90	2017		PSMP	Sys. Info.	
V90	2017		PSMP	Read code	
V90	2017		PSMP	Clear code	
V90	2017		PSMP	Data stream	
V90	2017		PSMD	Sys. Info.	
V90	2017		PSMD	Read code	
V90	2017		PSMD	Clear code	
V90	2017		PSMD	Data stream	
V90	2017		RMR	Sys. Info.	
V90	2017		RMR	Read code	
V90	2017		RMR	Clear code	
V90	2017		RMR	Data stream	
V90	2017		RML	Sys. Info.	
V90	2017		RML	Read code	
V90	2017		RML	Clear code	
V90	2017		RML	Data stream	
V90	2017		POT	Sys. Info.	
V90	2017		POT	Read code	
V90	2017		POT	Clear code	
V90	2017		POT	Data stream	
V90	2017		POT	Special functions	Operation control of tailgate
V90	2017		ESM	Sys. Info.	
V90	2017		ESM	Read code	
V90	2017		ESM	Clear code	
V90	2017		SCL	Sys. Info.	
V90	2017		SCL	Read code	
V90	2017		SCL	Clear code	
V90	2017		HUD	Sys. Info.	
V90	2017		SWM	Sys. Info.	
V90	2017		SWM	Data stream	
V90	2017		CCD	Sys. Info.	
V90	2017		BMS	Sys. Info.	
V90	2017		BMS	Data stream	
V90	2017		GSM	Sys. Info.	
V90	2017		GSM	Data stream	
V90	2017		IMS	Sys. Info.	
V90	2017		IMS	Data stream	
V90	2017		BBS	Sys. Info.	
V90	2017		BBS	Data stream	
V90	2017		AEEM	Sys. Info.	