



Function List

AutoMaker:Citroen

NOTES:

- ✓ This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	System	Eng Type	ECU Name	Ecu Info	Read Codes	Erase Codes	Live Data	Active Test
AX	Engine		Electric motor	✓	✓	✓	○	✓
BERLINGO	Engine management ECU	Petrol engine	1.1 L HDY/HDZ BOSCH MA3.1	✓	✓	✓	✓	✓
BERLINGO	Engine management ECU	Petrol engine	1.4 L KFX MM1AP	✓	✓	✓	✓	○
BERLINGO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	✓	✓	✓	✓	○
BERLINGO	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
BERLINGO	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
BERLINGO	Radio post-equipment			✓	✓	✓	✓	✓
BERLINGO	CD changer / external CD player			✓	✓	✓	✓	✓
BERLINGO	Instrument panel			✓	✓	✓	✓	✓
BERLINGO	Electrical vehicle		Electric motor	✓	✓	✓	○	✓
BERLINGO	Engine management ECU	Petrol engine	1.1 L HDY/HDZ BOSCH MA3.1	✓	✓	✓	✓	✓
BERLINGO	Engine management ECU	Petrol engine	1.1 L HFX BOSCH M7.4.4	✓	✓	✓	✓	✓
BERLINGO	Engine management ECU	Petrol engine	1.4 L KFW SAGEM S2000	✓	✓	✓	✓	✓
BERLINGO	Engine management ECU	Petrol engine	1.4L KFX SAGEM SL96	✓	✓	✓	✓	✓
BERLINGO	Engine management ECU	Petrol engine	1.4 L KFX BOSCH MP7.3	✓	✓	✓	✓	✓
BERLINGO	Engine management ECU	Petrol engine	1.6 L NPU BOSCH ME7.4.4	✓	✓	✓	✓	✓
BERLINGO	Engine management ECU	Petrol engine	1.8 L LFX MM1AP	✓	✓	✓	✓	○
BERLINGO	Engine management ECU	Diesel engine	2.0 L RHY BOSCH EDC15C2	✓	✓	✓	✓	✓
BERLINGO	Engine management ECU	Diesel engine	1.9 L VJY LUCAS DCN2	✓	✓	✓	✓	✓
BERLINGO	Engine management ECU	Diesel engine	RHY SIEMENS SID801	✓	✓	✓	✓	✓
BERLINGO	Additional heating			○	✓	✓	○	✓
BERLINGO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS electronic distribution	✓	✓	✓	✓	✓
BERLINGO	Air bags and pre-tensioners control unit		Airbag TRW	✓	✓	✓	○	○
BERLINGO	Air bags and pre-tensioners control unit		Airbag AUTOLIV	✓	✓	✓	○	○
BERLINGO 2	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
BERLINGO 2	Instrument panel			✓	✓	✓	✓	✓
BERLINGO 2	Radio post-equipment		Radio post-equipment	✓	✓	✓	✓	✓
BERLINGO 2	Radio post-equipment		Radio post-equipment RDE Wire	✓	✓	✓	✓	✓
BERLINGO 2	CD changer / external CD player			✓	✓	✓	✓	✓

BERLINGO 2	Parking assistance			✓	✓	✓	✓	✓
BERLINGO 2	Anti-theft alarm			✓	✓	✓	✓	✓
BERLINGO 2	Controls under the steering wheel		Top of column	✓	✓	✓	✓	○
BERLINGO 2	Rain sensor/ Brightness			✓	✓	✓	✓	○
BERLINGO 2	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
BERLINGO 2	Display or Telematics		Multifunction display SAGEM A	✓	✓	✓	✓	✓
BERLINGO 2	Display or Telematics		Multifunction display SAGEM B	✓	✓	✓	✓	✓
BERLINGO 2	Display or Telematics		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓
BERLINGO 2	Engine management ECU	J34P	TU3A J34P	✓	✓	✓	✓	✓
BERLINGO 2	Engine management ECU	MM48P	2.0L RFN MM48P	✓	✓	✓	✓	✓
BERLINGO 2	Engine management ECU	ME744	NFU BOSCH ME744	✓	✓	✓	✓	✓
BERLINGO 2	Engine management ECU	S2000PM1	KFV SAGEM S2000PM1	✓	✓	✓	✓	✓
BERLINGO 2	Engine management ECU	S2000PM2	KFV SAGEM S2000PM2	✓	✓	✓	✓	✓
BERLINGO 2	Engine management ECU	ME745	NFS BOSCH ME745	✓	✓	✓	✓	✓
BERLINGO 2	Engine management ECU	ME749	(N6A/N6B/NFU) BOSCH ME749	✓	✓	✓	✓	✓
BERLINGO 2	Engine management ECU	EDC16C34	9HX BOSCH EDC16C34 DV6ATED4	✓	✓	✓	✓	✓
BERLINGO 2	Engine management ECU	HD1_SID801	RHY SIEMENS SID801	✓	✓	✓	✓	✓
BERLINGO 2	Engine management ECU	DCN2	WJY DCN2	✓	✓	✓	✓	✓
BERLINGO 2	Gas injection		SAX500_GPL	✓	✓	✓	✓	✓
BERLINGO 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
BERLINGO 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_BOSCH	✓	✓	✓	✓	✓
BERLINGO 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS5.3	✓	✓	✓	✓	✓
BERLINGO 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓
BERLINGO 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP_BOSCH5.7	✓	✓	✓	✓	✓
BERLINGO 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_BOSCH	✓	✓	✓	✓	✓
BERLINGO 2	Additional heating			✓	✓	✓	✓	✓
BERLINGO 2	Service module / Independent telematic		Stolen vehicle location control unit	✓	✓	✓	✓	✓
BERLINGO 2	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
BERLINGO 2	Instrument panel			○	✓	✓	○	✓
BERLINGO 2	Radio post-equipment			○	✓	✓	○	✓
BERLINGO 2	CD changer / external CD player			○	✓	✓	○	✓
BERLINGO 2	Anti-theft alarm			○	✓	✓	○	✓
BERLINGO 2	Display		Multifunction display SAGEM B	○	✓	✓	○	✓

BERLINGO 2	Hybrid traction chain supervisor		PTMU	○	✓	✓	○	○
BERLINGO 2	Engine management ECU	Petrol engine	KFV SAGEM S2000PM1	○	✓	✓	○	✓
BERLINGO 2	Automatic gearbox or controlled manual gearbox		Gearbox BE Pilotee	○	✓	✓	○	○
BERLINGO (B9)	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
BERLINGO (B9)	Engine management ECU	ME745	NFU BOSCH ME745	✓	✓	✓	✓	✓
BERLINGO (B9)	Engine management ECU	MEV174	5FS MEV17.4	✓	✓	✓	✓	✓
BERLINGO (B9)	Engine management ECU	MEV17_4_2	EP6C 5FS MEV17.4.2 EURO5	✓	✓	✓	✓	✓
BERLINGO (B9)	Engine management ECU	Petrol engine	EDC17C60	✓	✓	✓	✓	✓
BERLINGO (B9)	Engine management ECU	Petrol engine	MEV17_4_EURO5	✓	✓	✓	✓	✓
BERLINGO (B9)	Engine management ECU	EDC16C34_DV6	9HT BOSCH EDC16C34 DV6BUTEDM-75CV	✓	✓	✓	✓	✓
BERLINGO (B9)	Engine management ECU	EDC17C10_BR2	9HP EDC 17 C10_BR2 - DV6DTEB - 92 CV	✓	✓	✓	✓	✓
BERLINGO (B9)	Engine management ECU	HD1_SID807	9HL HD1 SID807	✓	✓	✓	✓	✓
BERLINGO (B9)	Engine management ECU	HD1_SID807_BR2	HD1_SID807_BR2 9HL	✓	✓	✓	✓	✓
BERLINGO (B9)	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
BERLINGO (B9)	Automatic gearbox or controlled manual gearbox		BVMP_MCP_UDS	✓	✓	✓	✓	✓
BERLINGO (B9)	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓
BERLINGO (B9)	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
BERLINGO (B9)	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		ESP90	✓	✓	✓	○	✓
BERLINGO (B9)	Under-inflation detection		DSG	✓	✓	✓	✓	○
BERLINGO (B9)	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○
BERLINGO (B9)	CD changer / external CD player			✓	✓	✓	○	✓
BERLINGO (B9)	Air conditioning			✓	✓	✓	✓	✓
BERLINGO (B9)	Controls under the steering wheel			✓	✓	✓	✓	✓
BERLINGO (B9)	Anti-theft alarm			✓	✓	✓	✓	✓
BERLINGO (B9)	Trailer relay unit			✓	✓	✓	✓	✓
BERLINGO (B9)	Engine relay unit			✓	✓	✓	✓	✓
BERLINGO (B9)	Rain sensor/ Brightness			✓	✓	✓	○	○
BERLINGO (B9)	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
BERLINGO (B9)	Multifunction screen(EMF)		Type 'A' (segments)	✓	✓	✓	✓	✓
BERLINGO (B9)	Multifunction screen(EMF)		Type 'C' (dot matrix)	✓	✓	✓	✓	✓
BERLINGO (B9)	Telematic unit (RTx) or audio-navigation		RNEG navigation radio	✓	✓	✓	✓	✓
BERLINGO (B9)	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	✓
BERLINGO (B9)	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓

BERLINGO (B9)	Parking assistance			✓	✓	✓	✓	○
BERLINGO (B9)	Diesel additive pump		Diesel additive pump	✓	✓	✓	✓	✓
BERLINGO (B9)	Diesel additive pump		Pump Mux T1	✓	✓	✓	✓	✓
BERLINGO (B9)	Diesel additive pump		PADDGO_E5	✓	✓	✓	✓	✓
BERLINGO (B9)	Diesel additive pump		PADDGO_T1_E6	✓	✓	✓	✓	✓
BERLINGO (B9)	Power steering		Electric pump unit (GEP)	✓	✓	✓	✓	✓
BERLINGO (B9)	Hands-free Kit / Portable Unit	BOITIER_NOMADE	Mobile Housing	✓	✓	✓	✓	✓
BERLINGO (B9)	Bodywork Conversion Unit			✓	✓	✓	✓	✓
BERLINGO (B9)	Radio		Radio post-equipment	✓	✓	✓	✓	✓
BERLINGO (B9)	Radio		RD45	✓	✓	✓	✓	✓
BERLINGO (B9)	Anti-slip mode selector			✓	✓	○	✓	✓
BERLINGO (B9)	Battery charge status unit		BECEB	✓	✓	✓	✓	○
BERLINGO (B9)	Battery charge status unit		BECEB_GEN2	✓	✓	✓	✓	○
BERLINGO (B9)	Service module / Independent telematic			✓	✓	✓	✓	✓
BERLINGO (B9)	Instrument panel			✓	✓	✓	✓	✓
BERLINGO (B9)	Traction control mode selector			✓	✓	✓	✓	✓
BERLINGO (B9)	High frequency receiver			✓	✓	✓	✓	○
BERLINGO (B9)	Voltage retaining device		DMTR	✓	✓	✓	○	○
BERLINGO (B9)	Vehicle Distance Assistance			✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	ABS or ESP ECU		ESP81	✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Air bags and pre- tensioners control unit			✓	✓	✓	✓	○
BERLINGO ELECTRIC (B9E)	Parking assistance			✓	✓	✓	✓	○
BERLINGO ELECTRIC (B9E)	Onboard charger of the traction battery			✓	✓	✓	✓	○
BERLINGO ELECTRIC (B9E)	Traction battery ECU			○	✓	✓	✓	○
BERLINGO ELECTRIC (B9E)	Traction battery cell electronics 01			✓	○	○	✓	○
BERLINGO ELECTRIC (B9E)	Traction battery cell electronics 02			✓	○	○	✓	○
BERLINGO ELECTRIC (B9E)	Traction battery cell electronics 03			✓	○	○	✓	○
BERLINGO ELECTRIC (B9E)	Traction battery cell electronics 04			✓	○	○	✓	○
BERLINGO ELECTRIC (B9E)	Traction battery cell electronics 05			✓	○	○	✓	○
BERLINGO ELECTRIC (B9E)	Traction battery cell electronics 06			✓	○	○	✓	○
BERLINGO ELECTRIC (B9E)	Traction battery cell electronics 07			✓	○	○	✓	○
BERLINGO ELECTRIC (B9E)	Traction battery cell electronics 08			✓	○	○	✓	○
BERLINGO ELECTRIC (B9E)	Traction battery cell electronics 09			✓	○	○	✓	○
BERLINGO ELECTRIC (B9E)	Traction battery cell electronics 10			✓	○	○	✓	○
BERLINGO ELECTRIC (B9E)	Air conditioning		CLIM_REGULEE	✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Air conditioning		CLIM	✓	✓	✓	✓	✓

BERLINGO ELECTRIC (B9E)	Instrument panel			✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Passenger compartment air heating resistor			✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Air conditioning compressor			✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Electric vehicle management ECU			○	✓	✓	✓	○
BERLINGO ELECTRIC (B9E)	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Multifunction screen		EMF_A	✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Multifunction screen		EMF_C	✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Drive train interface ECU			✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Anti-theft alarm			✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Radio		AUTORADIO	✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Radio		RD45	✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Rain and light sensor			✓	✓	✓	○	○
BERLINGO ELECTRIC (B9E)	Power steering			✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG	✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Electric machine management ECU			✓	✓	✓	✓	○
BERLINGO ELECTRIC (B9E)	Battery charge status unit			✓	✓	✓	✓	○
BERLINGO ELECTRIC (B9E)	Engine relay unit			✓	✓	✓	✓	✓
BERLINGO ELECTRIC (B9E)	Controls under the steering wheel			✓	✓	✓	✓	✓
BERLINGO 2 (M69)	Built-in systems interface			✓	✓	✓	✓	✓
BERLINGO 2 (M69)	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	✓
BERLINGO 2 (M69)	Engine management ECU		ME749_EC5	✓	✓	✓	✓	○
BERLINGO 2 (M69)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
BERLINGO 2 (M69)	Airbags and pretensioners ECU			✓	✓	✓	✓	○
BERLINGO 2 (M69)	Instrument panel			✓	✓	✓	✓	○
BERLINGO 2 (M69)	Controls under the steering wheel			✓	✓	✓	✓	✓
BERLINGO 2 (M69)	Telematic unit (RTx) or audio-navigation			✓	✓	✓	✓	○
BERLINGO 2 (M69)	Radio			✓	✓	✓	✓	✓
BERLINGO (K9)	Built-in systems interface			✓	✓	✓	✓	✓
BERLINGO (K9)	Engine management ECU		EDC17C60	✓	✓	✓	✓	✓
BERLINGO (K9)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	✓
BERLINGO (K9)	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	✓
BERLINGO (K9)	Engine management ECU		V46_21	✓	✓	✓	✓	✓
BERLINGO (K9)	Engine management ECU		CMM_VD56	✓	✓	✓	✓	✓
BERLINGO (K9)	Diesel additive pump			✓	✓	✓	✓	✓
BERLINGO (K9)	Automatic or piloted manual gearbox			✓	✓	✓	✓	✓
BERLINGO (K9)	Power steering			✓	✓	✓	✓	○

BERLINGO (K9)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
BERLINGO (K9)	Overload indicator ECU			✓	✓	✓	✓	○
BERLINGO (K9)	Trailer relay unit			✓	✓	✓	✓	✓
BERLINGO (K9)	Bodywork conversion unit			✓	✓	✓	✓	○
BERLINGO (K9)	Battery charge status control unit			✓	✓	✓	✓	○
BERLINGO (K9)	Electric steering lock			✓	✓	✓	✓	✓
BERLINGO (K9)	Instrument panel			✓	✓	✓	✓	✓
BERLINGO (K9)	Head Up Display			✓	✓	✓	✓	✓
BERLINGO (K9)	Controls under the steering wheel			✓	✓	✓	✓	✓
BERLINGO (K9)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
BERLINGO (K9)	Traction control mode selector			✓	✓	○	✓	✓
BERLINGO (K9)	Multifunction control panel			✓	✓	✓	✓	✓
BERLINGO (K9)	Airbags and pretensioners ECU			✓	✓	✓	✓	○
BERLINGO (K9)	Seat belt not fastened warning lights unit			✓	○	○	○	✓
BERLINGO (K9)	Rain and brightness sensor			✓	✓	✓	✓	○
BERLINGO (K9)	Multifunction video camera (CMF)			✓	✓	✓	✓	✓
BERLINGO (K9)	Parking assistance			✓	✓	✓	✓	✓
BERLINGO (K9)	Multifunction screen			✓	✓	✓	✓	✓
BERLINGO (K9)	Touch screen			✓	✓	✓	✓	✓
BERLINGO (K9)	Audio-navigation/telematic unit/connected audio		NAC	✓	✓	✓	✓	✓
BERLINGO (K9)	Audio-navigation/telematic unit/connected audio		RCC	✓	✓	✓	✓	✓
BERLINGO (K9)	Radio			✓	✓	✓	✓	✓
BERLINGO (K9)	Control of the telematic unit			✓	✓	○	○	○
BERLINGO (K9)	Service module / Independent telematic			✓	✓	✓	✓	✓
BERLINGO (K9)	External CD player			✓	✓	✓	✓	✓
BERLINGO (K9)	Anti-theft alarm			✓	✓	✓	✓	○
BERLINGO (K9)	Intrusion alarm siren			✓	✓	✓	✓	✓
BERLINGO (K9)	Driver's door module			✓	✓	✓	✓	✓
BERLINGO (K9)	Air conditioning			✓	✓	✓	✓	✓
BERLINGO (K9)	Additional heating			✓	✓	○	✓	✓
C-ZERO	Built-in Systems Interface			✓	✓	✓	✓	✓
C-ZERO	Electric motor ECU			✓	✓	✓	✓	✓
C-ZERO	Traction battery ECU			✓	✓	✓	✓	✓
C-ZERO	Electric vehicle management ECU			✓	✓	✓	✓	✓
C-ZERO	Traction battery cells management ECU (Module 1)			✓	○	○	✓	○
C-ZERO	Traction battery cells management ECU (Module 2)			✓	○	○	✓	○

C-ZERO	Traction battery cells management ECU (Module 3)			✓	○	○	✓	○
C-ZERO	Traction battery cells management ECU (Module 4)			✓	○	○	✓	○
C-ZERO	Traction battery cells management ECU (Module 5)			✓	○	○	✓	○
C-ZERO	Traction battery cells management ECU (Module 6)			✓	○	○	✓	○
C-ZERO	Traction battery cells management ECU (Module 7)			✓	○	○	✓	○
C-ZERO	Traction battery cells management ECU (Module 8)			✓	○	○	✓	○
C-ZERO	Traction battery cells management ECU (Module 9)			✓	○	○	✓	○
C-ZERO	Traction battery cells management ECU (Module 10)			✓	○	○	✓	○
C-ZERO	Traction battery cells management ECU (Module 11)			✓	○	○	✓	○
C-ZERO	Traction battery cells management ECU (Module 12)			✓	○	○	✓	○
C-ZERO	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C-ZERO	Power steering			✓	✓	✓	✓	○
C-ZERO	Steering wheel angle sensor			✓	✓	✓	✓	○
C-ZERO	Air bags and pre-tensioners control unit			✓	✓	✓	✓	✓
C-ZERO	Gateway wiring housing			✓	✓	✓	✓	○
C-ZERO	Service module / Independent telematic			✓	✓	✓	✓	✓
C-ZERO	Instrument panel			✓	✓	✓	✓	✓
C-ZERO	Radio			✓	✓	✓	✓	✓
C-ZERO	Air conditioning			✓	✓	✓	✓	✓
C-ZERO	Control of the passenger compartment air conditioning and heating compressor			✓	✓	✓	✓	✓
C-ZERO	On-board charger / direct voltage transformer assembly			✓	✓	✓	✓	○
C-ZERO	Direct voltage (DC/DC) transformer			✓	✓	✓	✓	○
C1(B0)	Engine management ECU	ME795	384 F injection	○	✓	✓	✓	✓
C1(B0)	Engine management ECU	HDI_SID805	DV4 injection	✓	✓	✓	✓	✓
C1(B0)	Automatic gearbox or controlled manual gearbox		Sequential manual gearbox (MMT)	○	✓	✓	✓	✓
C1(B0)	ABS or ESP ECU		ABS anti-lock braking system	○	✓	✓	✓	✓
C1(B0)	ABS or ESP ECU		ESP S2000 ABS	○	✓	✓	✓	✓
C1(B0)	ABS or ESP ECU		ABS90_I	○	✓	✓	✓	✓
C1(B0)	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C1(B0)	Immobiliser control module(Immobiliser)			○	✓	✓	✓	○

C1(B0)	Power steering			✓	✓	✓	✓	○
C1(B0)	Radio		RDE	✓	✓	✓	○	✓
C1(B4)	Engine management ECU		V46	✓	✓	✓	✓	✓
C1(B4)	Engine management ECU (Engine\IKR)			✓	✓	✓	✓	✓
C1(B4)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	○	○
C1(B4)	Air conditioning			✓	✓	✓	✓	✓
C1(B4)	Power steering			✓	✓	✓	○	○
C1(B4)	Automatic gearbox or controlled manual gearbox			✓	✓	✓	✓	○
C1(B4)	Stop and Start ECU			✓	✓	✓	○	○
C1(B4)	Hands-free unit (Entry and start) : starting monitoring			○	✓	✓	✓	○
C1(B4)	Hands-free unit (Entry and start) : starting authorised			○	✓	✓	✓	○
C1(B4)	Instrument panel			✓	✓	✓	○	○
C1(B4)	Multifunction screen			○	✓	✓	✓	○
C1(B4)	Hands-free unit (Entry and start) : Access and starting			✓	✓	✓	○	○
C1(B4)	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
C1(B4)	Multifunction video camera and remote detection by laser			○	✓	✓	✓	○
C2	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C2	Instrument panel			✓	✓	✓	✓	✓
C2	Radio			✓	✓	✓	✓	✓
C2	CD changer / external CD player			✓	✓	✓	✓	✓
C2	Parking assistance			✓	✓	✓	✓	✓
C2	Air conditioning			✓	✓	✓	✓	✓
C2	Navigation			✓	✓	✓	✓	○
C2	Anti-theft alarm			✓	✓	✓	✓	✓
C2	Controls under the steering wheel		Top of column	✓	✓	✓	✓	○
C2	Rain sensor/ Brightness			✓	✓	✓	✓	○
C2	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C2	Display or Telematics		Multifunction display SAGEM A	✓	✓	✓	✓	✓
C2	Display or Telematics		Multifunction display SIEMENS B	✓	✓	✓	✓	✓
C2	Display or Telematics		Multifunction display SIEMENS C	✓	✓	✓	✓	✓
C2	Display or Telematics		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓
C2	Engine management ECU	EDC16C34_DV4	8HZ BOSCH EDC16C34 DV4TD	✓	✓	✓	✓	✓
C2	Engine management ECU	HD1_SID802	8HX SIEMENS SID802	✓	✓	✓	✓	✓
C2	Engine management ECU	HD1_SID804	8HX SIEMENS SID804	✓	✓	✓	✓	✓
C2	Engine management ECU	ME744	NFU BOSCH ME744	✓	✓	✓	✓	✓
C2	Engine management ECU	S2000PM2	KFV SAGEM S2000PM2	✓	✓	✓	✓	✓
C2	Engine management ECU	S2000PM1	KFV SAGEM S2000PM1	✓	✓	✓	✓	✓

C2	Engine management ECU	MM48P	HFX MM48P	✓	✓	✓	✓	✓
C2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	✓	✓	✓	✓	✓
C2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP	✓	✓	✓	✓	✓
C2	Automatic gearbox or controlled manual gearbox		Controlled manual gearbox ECU	✓	✓	✓	✓	✓
C2	Electric power steering ECU			✓	✓	✓	✓	○
C2	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C2	Instrument panel			✓	✓	✓	✓	✓
C2	Radio		Radio post-equipment	✓	✓	✓	✓	✓
C2	CD changer / external CD player			✓	✓	✓	✓	✓
C2	Parking assistance			✓	✓	✓	✓	✓
C2	Air conditioning			✓	✓	✓	✓	✓
C2	Anti-theft alarm			✓	✓	✓	✓	✓
C2	Controls under the steering wheel		Top of column	✓	✓	✓	✓	✓
C2	Rain sensor/ Brightness			✓	✓	✓	○	○
C2	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C2	Multifunction screen		Multifunction screen A	✓	✓	✓	✓	✓
C2	Multifunction screen		Multifunction screen C	✓	✓	✓	✓	✓
C2	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C2	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C2	Telematic unit (RTx) or audio-navigation		Telematic(RT5)	✓	✓	✓	✓	✓
C2	High frequency receiver			✓	✓	✓	✓	○
C2	Engine management ECU	MM6LPC	KFV MM6LPC	✓	✓	✓	✓	✓
C2	Engine management ECU	J34P	TU1A J34P	✓	✓	✓	✓	✓
C2	Engine management ECU	ME745	NFS BOSCH ME745	✓	✓	✓	✓	✓
C2	Engine management ECU	S2000PM2	KFV SAGEM S2000PM2	✓	✓	✓	✓	✓
C2	Engine management ECU	EDC16C34_DV6	9HZ (FAP) BOSCH EDC16C34 DV6TED4	✓	✓	✓	✓	✓
C2	Engine management ECU	EDC16C34_DV4	8HZ BOSCH EDC16C34 DV4TD	✓	✓	✓	✓	✓
C2	Engine management ECU	HD1_SID806	8HZ SIEMENS SID806	✓	✓	✓	✓	✓
C2	Trailer relay unit			✓	✓	✓	✓	✓
C2	Engine relay unit			✓	✓	✓	✓	✓
C2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS MK70	✓	✓	✓	✓	✓
C2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS MK70.1	✓	✓	✓	✓	✓
C2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP MK60	✓	✓	✓	✓	✓

C2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP MK60-0	✓	✓	✓	✓	✓
C2	Automatic gearbox or controlled manual gearbox			✓	✓	✓	✓	✓
C2	Electric power steering ECU			✓	✓	✓	✓	○
C2	Hands-free Kit / Portable Unit		Hands-free Kit / Portable Unit	✓	✓	✓	✓	✓
C2	Hands-free Kit / Portable Unit		Mobile Housing	✓	✓	✓	✓	✓
C2	ECU Reversible "Stop-Start" alternator			✓	✓	✓	✓	✓
C2 CHINE	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C2 CHINE	Instrument panel			✓	✓	✓	✓	✓
C2 CHINE	Air conditioning			✓	✓	✓	✓	✓
C2 CHINE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C2 CHINE	Controls under the steering wheel		Top of column	✓	✓	✓	✓	○
C2 CHINE	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
C2 CHINE	Engine management ECU	Petrol engine	1.6 L NPU BOSCH ME745	✓	✓	✓	✓	✓
C2 CHINE	Engine management ECU	Petrol engine	J34P	✓	✓	✓	✓	✓
C2 CHINE	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4 TA2000	✓	✓	✓	✓	✓
C3	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C3	Instrument panel			✓	✓	✓	✓	✓
C3	Radio		Radio post-equipment	✓	✓	✓	✓	✓
C3	Radio		Radio post-equipment RDE Wire	✓	✓	✓	✓	✓
C3	CD changer / external CD player			✓	✓	✓	✓	✓
C3	Parking assistance			✓	✓	✓	✓	✓
C3	Air conditioning			✓	✓	✓	✓	✓
C3	Navigation			✓	✓	✓	✓	○
C3	Anti-theft alarm			✓	✓	✓	✓	✓
C3	Controls under the steering wheel		Top of column	✓	✓	✓	✓	○
C3	Diesel additive function			✓	✓	✓	✓	✓
C3	Rain sensor/ Brightness			✓	✓	✓	✓	○
C3	Driving school mode			✓	○	○	✓	✓
C3	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C3	Multifunction screen		Multifunction display SAGEM A	✓	✓	✓	✓	✓
C3	Multifunction screen		Multifunction display SIEMENS B	✓	✓	✓	✓	✓
C3	Multifunction screen		Multifunction display SIEMENS C	✓	✓	✓	✓	✓
C3	Multifunction screen		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓
C3	Telematic unit (RTx) or audio-navigation		RASTREADOR	✓	✓	✓	✓	✓

C3	Engine management ECU	EDC16C34_DV6	9HZ (FAP) BOSCH EDC16C34 DV6TED4	✓	✓	✓	✓	✓
C3	Engine management ECU	EDC16C34_DV4	8HZ BOSCH EDC16C34 DV4TD	✓	✓	✓	✓	✓
C3	Engine management ECU	HD1_SID802	8HX SIEMENS SID802	✓	✓	✓	✓	✓
C3	Engine management ECU	HD1_SID804	8HX SIEMENS SID804	✓	✓	✓	✓	✓
C3	Engine management ECU	HD1_SID806	8HZ SIEMENS SID806	✓	✓	✓	✓	✓
C3	Engine management ECU	DELPHI_C6	8HY DELPHI C6	✓	✓	✓	✓	✓
C3	Engine management ECU	ME744	NFU BOSCH ME744	✓	✓	✓	✓	✓
C3	Engine management ECU	S2000PM2	KFV SAGEM S2000PM2	✓	✓	✓	✓	✓
C3	Engine management ECU	ME749	NFU BOSCH ME749	✓	✓	✓	✓	✓
C3	Engine management ECU	MM6LP	KFU MM6LP	✓	✓	✓	✓	✓
C3	Engine management ECU	S2000PM1	KFV SAGEM S2000PM1	✓	✓	✓	✓	✓
C3	Engine management ECU	MM48P	HFX MM48P	✓	✓	✓	✓	✓
C3	Gas injection		SAX500_GPL	✓	✓	✓	✓	✓
C3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS MK60	✓	✓	✓	✓	✓
C3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS MK70	✓	✓	✓	✓	✓
C3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP	✓	✓	✓	✓	✓
C3	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
C3	Automatic gearbox or controlled manual gearbox		Controlled manual gearbox ECU	✓	✓	✓	✓	✓
C3	Electric power steering ECU			✓	✓	✓	✓	○
C3	ECU Reversible "Stop- Start" alternator			✓	✓	✓	✓	✓
C3 R	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C3 R	Instrument panel			✓	✓	✓	✓	✓
C3 R	Radio			✓	✓	✓	✓	✓
C3 R	CD changer / external CD player			✓	✓	✓	✓	✓
C3 R	Parking assistance			✓	✓	✓	✓	✓
C3 R	Air conditioning			✓	✓	✓	✓	✓
C3 R	Anti-theft alarm			✓	✓	✓	✓	✓
C3 R	Controls under the steering wheel		Top of column	✓	✓	✓	✓	✓
C3 R	Rain sensor/ Brightness			✓	✓	✓	○	○
C3 R	Air bags and pre- tensioners control unit			✓	✓	✓	✓	○
C3 R	Driving school mode			✓	✓	✓	○	✓
C3 R	Multifunction screen		Multifunction screen A	✓	✓	✓	✓	✓
C3 R	Multifunction screen		Multifunction screen C	✓	✓	✓	✓	✓
C3 R	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C3 R	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C3 R	Telematic unit (RTx) or audio-navigation		Telematic(RT5)	✓	✓	✓	✓	✓

C3 R	High frequency receiver			✓	✓	✓	✓	○
C3 R	Engine management ECU	J34P	TU1A J34P	✓	✓	✓	✓	✓
C3 R	Engine management ECU	MM6LPC	KFU MM6LPC	✓	✓	✓	✓	✓
C3 R	Engine management ECU	ME745	NFS BOSCH ME745	✓	✓	✓	✓	✓
C3 R	Engine management ECU	S2000PM2	KFV SAGEM S2000PM2	✓	✓	✓	✓	✓
C3 R	Engine management ECU	EDC16C34_DV4	8HZ BOSCH EDC16C34 DV4TD	✓	✓	✓	✓	✓
C3 R	Engine management ECU	EDC16C34_DV6	9HZ (FAP) BOSCH EDC16C34 DV6TED4	✓	✓	✓	✓	✓
C3 R	Engine management ECU	HD1 SID806	8HZ SIEMENS SID806	✓	✓	✓	✓	✓
C3 R	Gas injection		SAX500_GPL	✓	✓	✓	✓	✓
C3 R	Diesel additive pump			✓	✓	✓	✓	✓
C3 R	Trailer relay unit			✓	✓	✓	✓	✓
C3 R	Engine relay unit			✓	✓	✓	✓	✓
C3 R	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS MK70	✓	✓	✓	✓	✓
C3 R	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS MK70.1	✓	✓	✓	✓	✓
C3 R	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP MK60	✓	✓	✓	✓	✓
C3 R	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP MK60-D	✓	✓	✓	✓	✓
C3 R	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
C3 R	Automatic gearbox or controlled manual gearbox		Controlled manual gearbox ECU	✓	✓	✓	✓	✓
C3 R	Electric power steering ECU			✓	✓	✓	✓	○
C3 R	Hands-free Kit / Portable Unit		Hands-free Kit / Portable Unit	✓	✓	✓	✓	✓
C3 R	Hands-free Kit / Portable Unit		Mobile Housing	✓	✓	✓	✓	✓
C3 R	ECU Reversible "Stop-Start" alternator			✓	✓	✓	✓	✓
C3 PLURIEL	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C3 PLURIEL	Instrument panel			✓	✓	✓	✓	✓
C3 PLURIEL	Radio		Radio post-equipment	✓	✓	✓	✓	✓
C3 PLURIEL	CD changer / external CD player			✓	✓	✓	✓	✓
C3 PLURIEL	Parking assistance			✓	✓	✓	✓	✓
C3 PLURIEL	Air conditioning			✓	✓	✓	✓	✓
C3 PLURIEL	Navigation			✓	✓	✓	✓	○
C3 PLURIEL	Anti-theft alarm			✓	✓	✓	✓	✓
C3 PLURIEL	Controls under the steering wheel			✓	✓	✓	✓	○
C3 PLURIEL	Rain sensor/ Brightness			✓	✓	✓	✓	○
C3 PLURIEL	Sun roof			✓	✓	✓	✓	✓
C3 PLURIEL	Driving school mode			✓	○	○	✓	✓
C3 PLURIEL	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○

C3 PLURIEL	Display or Telematics		Multifunction display SAGEM A	✓	✓	✓	✓	✓
C3 PLURIEL	Display or Telematics		Multifunction display SIEMENS B	✓	✓	✓	✓	✓
C3 PLURIEL	Display or Telematics		Multifunction display SIEMENS C	✓	✓	✓	✓	✓
C3 PLURIEL	Display or Telematics		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓
C3 PLURIEL	Engine management ECU	ME744	NFU BOSCH ME744	✓	✓	✓	✓	✓
C3 PLURIEL	Engine management ECU	S2000PM1	KFV SAGEM S2000PM1	✓	✓	✓	✓	✓
C3 PLURIEL	Engine management ECU	S2000PM2	KFV SAGEM S2000PM2	✓	✓	✓	✓	✓
C3 PLURIEL	Engine management ECU	EDC16C34_DV4	8HZ BOSCH EDC16C34 DV4TD	✓	✓	✓	✓	✓
C3 PLURIEL	Engine management ECU	HD1_SID802	8HX SIEMENS SID802	✓	✓	✓	✓	✓
C3 PLURIEL	Engine management ECU	HD1_SID804	8HX SIEMENS SID804	✓	✓	✓	✓	✓
C3 PLURIEL	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	✓	✓	✓	✓	✓
C3 PLURIEL	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP	✓	✓	✓	✓	✓
C3 PLURIEL	Automatic gearbox or controlled manual gearbox			✓	✓	✓	✓	✓
C3 PLURIEL	Electric power steering ECU			✓	✓	✓	✓	○
C3 PLURIEL	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C3 PLURIEL	Instrument panel			✓	✓	✓	✓	✓
C3 PLURIEL	Radio		Radio post-equipment	✓	✓	✓	✓	✓
C3 PLURIEL	CD changer / external CD player			✓	✓	✓	✓	✓
C3 PLURIEL	Parking assistance			✓	✓	✓	✓	✓
C3 PLURIEL	Air conditioning			✓	✓	✓	✓	✓
C3 PLURIEL	Anti-theft alarm			✓	✓	✓	✓	✓
C3 PLURIEL	Controls under the steering wheel		Top of column	✓	✓	✓	✓	✓
C3 PLURIEL	Rain sensor/ Brightness			✓	✓	✓	○	○
C3 PLURIEL	Sun roof			✓	✓	✓	✓	✓
C3 PLURIEL	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C3 PLURIEL	Multifunction screen		Multifunction screen A	✓	✓	✓	✓	✓
C3 PLURIEL	Multifunction screen		Multifunction screen C	✓	✓	✓	✓	✓
C3 PLURIEL	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C3 PLURIEL	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C3 PLURIEL	Telematic unit (RTx) or audio-navigation		Telematic(RT5)	✓	✓	✓	✓	✓
C3 PLURIEL	High frequency receiver			✓	✓	✓	✓	○
C3 PLURIEL	Engine management ECU	J34P	TU1A J34P	✓	✓	✓	✓	✓
C3 PLURIEL	Engine management ECU	ME745	NFS BOSCH ME745	✓	✓	✓	✓	✓
C3 PLURIEL	Engine management ECU	EDC16C34_DV4	8HZ BOSCH EDC16C34 DV4TD	✓	✓	✓	✓	✓
C3 PLURIEL	Engine management ECU	HD1_SID806	8HZ SIEMENS SID806	✓	✓	✓	✓	✓
C3 PLURIEL	Trailer relay unit			✓	✓	✓	✓	✓
C3 PLURIEL	Engine relay unit			✓	✓	✓	✓	✓

C3 PLURIEL	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS MK70	✓	✓	✓	✓	✓
C3 PLURIEL	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS MK70.1	✓	✓	✓	✓	✓
C3 PLURIEL	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP MK60	✓	✓	✓	✓	✓
C3 PLURIEL	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP MK60-0	✓	✓	✓	✓	✓
C3 PLURIEL	Automatic gearbox or controlled manual gearbox			✓	✓	✓	✓	✓
C3 PLURIEL	Electric power steering ECU			✓	✓	✓	✓	○
C3 PLURIEL	Hands-free Kit / Portable Unit			✓	✓	✓	✓	✓
C3 A51	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C3 A51	Engine management ECU	V34.1	HfV V34.1	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	MEV17_4_EURO5	8FR MEV17.4	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	MED17.4	5FR MED17.4	✓	✓	✓	○	✓
C3 A51	Engine management ECU	MEV17_4_2	EP6CM 5FS MEV17_4_2	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	J34P	TU1 A J34P	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	Petrol engine	V46	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	Petrol engine	VD46	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	EDC16C34_DV4	8HZ EDC16C34 DV4TD	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	EDC16C34_DV6	9HX BOSCH EDC16C34 DV6ATED4- 90CV	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	EDC17C10	9HP BOSCH EDC17C10 DV6DTE4- 90 CV	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	HD1_SID807	9HR HD1 SID807	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	EDC17C10_BR2	9HP EDC 17 C10_BR2 - DV6DTE4 - 92 CV	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	HD1_SID807_BR2	HD1 SID807_BR2 9HR	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	Diesel engine	EDC16C3	✓	✓	✓	✓	✓
C3 A51	Engine management ECU	Diesel engine	EDC17C60	✓	✓	✓	✓	✓
C3 A51	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK70_1	✓	✓	✓	✓	✓
C3 A51	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK60_0	✓	✓	✓	✓	✓
C3 A51	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK100	✓	✓	✓	✓	✓
C3 A51	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK100	✓	✓	✓	✓	✓
C3 A51	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
C3 A51	Automatic gearbox or controlled manual gearbox		Controlled manual gearbox ECU MA	✓	✓	✓	✓	✓

C3 A51	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
C3 A51	Automatic gearbox or controlled manual gearbox		MAPS_UDS	✓	✓	✓	✓	✓
C3 A51	Air conditioning			✓	✓	✓	✓	✓
C3 A51	Anti-theft alarm			✓	✓	✓	✓	✓
C3 A51	Controls under the steering wheel			✓	✓	✓	✓	✓
C3 A51	Driving school mode			✓	✓	✓	○	✓
C3 A51	Rain sensor/ Brightness			✓	✓	✓	○	○
C3 A51	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C3 A51	Multifunction screen(EMF)		Type 'A' (segments)	✓	✓	✓	✓	✓
C3 A51	Multifunction screen(EMF)		Type 'C' (dot matrix)	✓	✓	✓	✓	✓
C3 A51	Radio		Radio post-equipment	✓	✓	✓	✓	✓
C3 A51	Radio		RD45	✓	✓	✓	✓	✓
C3 A51	Parking assistance			✓	✓	✓	✓	○
C3 A51	Telematic unit (RTx) or audio-navigation		RNEG navigation radio	✓	✓	✓	✓	✓
C3 A51	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	✓
C3 A51	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓
C3 A51	Instrument panel			✓	✓	✓	✓	✓
C3 A51	Trailer relay unit			✓	✓	✓	✓	✓
C3 A51	Engine relay unit			✓	✓	✓	✓	✓
C3 A51	Power steering		Power steering	✓	✓	✓	✓	✓
C3 A51	Hands-free Kit / Portable Unit		Mobile Housing	✓	✓	✓	✓	✓
C3 A51	driver's door module			✓	✓	✓	✓	✓
C3 A51	Battery charge status unit		BECB	✓	✓	✓	✓	○
C3 A51	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○
C3 A51	High frequency receiver			✓	✓	✓	✓	○
C3 A51	Seat belt not fastened warning lights unit			✓	○	○	○	✓
C3 A51	Diesel additive pump		PADDO	✓	✓	✓	✓	✓
C3 A51	Diesel additive pump		PADDO_T1_E6	✓	✓	✓	✓	✓
C3 A51	Diesel additive pump		POMPE_MUX_MG1	✓	✓	✓	✓	✓
C3 A51	Service module / Independent telematic	BTA	Telematics unit independent	✓	✓	✓	✓	✓
C3 A51	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
C3 A51	Voltage retaining device		DMTR	✓	✓	✓	○	○
C3 A151	Built-in Systems Interface (BSI)			✓	✓	✓	✓	○
C3 A151	Engine management ECU	ME749_N6A	ME749_N6N B10 FLEX	✓	✓	✓	✓	✓
C3 A151	Engine management ECU	ME749_EC5	ME749_EC5 NFP	✓	✓	✓	✓	✓
C3 A151	Engine management ECU	V34.4	V34.4 ESSENCE	✓	✓	✓	✓	✓
C3 A151	Engine management ECU	V34.5	V34.5 ESSENCE	✓	✓	✓	✓	✓
C3 A151	Engine management ECU		V46	✓	✓	✓	✓	✓

C3 Ai51	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK70_1	✓	✓	✓	✓	✓
C3 Ai51	Automatic gearbox or controlled manual gearbox		BVA_AL4	✓	✓	✓	✓	✓
C3 Ai51	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓
C3 Ai51	Air bags and pre-tensioners control unit		SAC_AUTOLIV	✓	✓	✓	✓	○
C3 Ai51	Air bags and pre-tensioners control unit		Airbag	✓	✓	✓	✓	○
C3 Ai51	Service module / Independent telematic			✓	✓	✓	✓	✓
C3 Ai51	Instrument panel			✓	✓	✓	✓	✓
C3 Ai51	Radio		RDE	✓	✓	✓	✓	✓
C3 Ai51	Radio		RD6	✓	✓	✓	✓	✓
C3 Ai51	Radio		AUTORADIO	✓	✓	✓	✓	✓
C3 Ai51	Anti-theft alarm			✓	✓	✓	✓	✓
C3 Ai51	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG_ECO	✓	✓	✓	✓	✓
C3 Ai51	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓
C3 Ai51	Air conditioning			✓	✓	✓	✓	✓
C3 Ai51	Parking assistance		AAS	✓	✓	✓	✓	○
C3 Ai51	Parking assistance		AAS_UDS	✓	✓	✓	✓	✓
C3 Ai51	Controls under the steering wheel			✓	✓	✓	✓	✓
C3 Ai51	Rain and brightness sensor			✓	✓	✓	○	○
C3 Ai51	Trailer relay unit			✓	✓	✓	✓	✓
C3 Ai51	Power steering			✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Engine management ECU	ME749	N6A/N6B/NFU BOSCH ME749	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Engine management ECU	Petrol engine	V46	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓
C3 Aircross (Ai58)	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C3 Aircross (Ai58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS MK 70.2	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		BVA_AM6_AT6_UDS	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Telematic unit (RTx) or audio-navigation		Entry-level radio navigation (RNEG 2004 ECO)	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Rain sensor/ Brightness			✓	✓	✓	○	○
C3 Aircross (Ai58)	Parking assistance		AAS	✓	✓	✓	✓	○
C3 Aircross (Ai58)	Parking assistance		AAS_UDS	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Trailer relay unit			✓	✓	✓	✓	✓

C3 Aircross (Ai58)	Radio		RDE	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Radio		RD6	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Controls under the steering wheel			✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Instrument panel			✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Anti-theft alarm		Alarm LIN	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Air conditioning			✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Service module / Independent telematic		Stolen vehicle location control unit	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Engine management ECU	ME749	N6A/N6B/NFU BOSCH ME749	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Engine management ECU	Petrol engine	V46	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓
C3 Aircross (Ai58)	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C3 Aircross (Ai58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS MK 70.2	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		BVA_AM6_AT6_UDS	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Telematic unit (RTx) or audio-navigation		Entry-level radio navigation (RNEG 2004 ECO)	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Rain sensor/ Brightness			✓	✓	✓	○	○
C3 Aircross (Ai58)	Parking assistance		AAS	✓	✓	✓	✓	○
C3 Aircross (Ai58)	Parking assistance		AAS_UDS	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Trailer relay unit			✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Radio		RDE	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Radio		RD6	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Controls under the steering wheel			✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Instrument panel			✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Anti-theft alarm		Alarm LIN	✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Air conditioning			✓	✓	✓	✓	✓
C3 Aircross (Ai58)	Service module / Independent telematic		Stolen vehicle location control unit	✓	✓	✓	✓	✓
C3 Aircross(A88)	Built-in systems interface			✓	✓	✓	✓	✓
C3 Aircross(A88)	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	✓
C3 Aircross(A88)	Engine management ECU		V46	✓	✓	✓	✓	✓
C3 Aircross(A88)	Engine management ECU		EDC17C60	✓	✓	✓	✓	○
C3 Aircross(A88)	Engine management ECU		VD46	✓	✓	✓	✓	✓
C3 Aircross(A88)	Engine management ECU		CMD_V56	✓	✓	✓	✓	✓
C3 Aircross(A88)	Engine management ECU		CMD_MD1CS003	✓	✓	✓	✓	✓
C3 Aircross(A88)	Engine management ECU		CMD_VD56	✓	✓	✓	✓	✓
C3 Aircross(A88)	Automatic or piloted manual gearbox			✓	✓	✓	✓	✓

C3 Aircross(A88)	Traction control mode selector			✓	✓	○	✓	✓
C3 Aircross(A88)	Seat belt not fastened warning lights unit			✓	○	○	○	✓
C3 Aircross(A88)	Battery charge status control unit			✓	✓	✓	✓	○
C3 Aircross(A88)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
C3 Aircross(A88)	Voltage maintaining device			✓	✓	✓	○	○
C3 Aircross(A88)	Driver's door module			✓	✓	✓	✓	✓
C3 Aircross(A88)	Audio system control panel			✓	✓	✓	✓	✓
C3 Aircross(A88)	Controls under the steering wheel			✓	✓	✓	✓	✓
C3 Aircross(A88)	Electric steering lock			✓	✓	✓	✓	✓
C3 Aircross(A88)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	✓
C3 Aircross(A88)	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	✓
C3 Aircross(A88)	Instrument panel			✓	✓	✓	✓	✓
C3 Aircross(A88)	Air conditioning			✓	✓	✓	✓	✓
C3 Aircross(A88)	Trailer relay unit			✓	✓	✓	✓	✓
C3 Aircross(A88)	Rain and brightness sensor			✓	✓	✓	✓	○
C3 Aircross(A88)	Multifunction screen			✓	✓	✓	✓	✓
C3 Aircross(A88)	Touch screen			✓	✓	✓	✓	✓
C3 Aircross(A88)	Anti-theft alarm			✓	✓	✓	✓	○
C3 Aircross(A88)	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓
C3 Aircross(A88)	Diesel additive pump		PADDGO_T1_E6	✓	✓	✓	✓	✓
C3 Aircross(A88)	Intrusion alarm siren			✓	✓	✓	✓	✓
C3 Aircross(A88)	Parking assistance			✓	✓	✓	✓	✓
C3 Aircross(A88)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
C3 Aircross(A88)	Service module / Independent telematic		BTA_3R	✓	✓	✓	✓	✓
C3 Aircross(A88)	Service module / Independent telematic		BTA_3S	✓	✓	✓	✓	✓
C3 Aircross(A88)	Multifunction video camera (CMF)			✓	✓	✓	✓	✓
C3 Aircross(A88)	Power steering			✓	✓	✓	✓	✓
C3 Aircross(A88)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C3 Aircross(A88)	Airbags and pretensioners ECU			✓	✓	✓	✓	○
C3 Aircross(A88)	Head Up Display			✓	✓	✓	✓	✓
C3 Aircross(A88)	External CD player			✓	✓	✓	✓	✓
C3 Aircross(A88)	Multifunction control panel			✓	✓	✓	✓	✓
C3 Aircross(A88)	Radio			✓	✓	✓	✓	✓
C3(B618)	Built-in systems interface			✓	✓	✓	✓	✓
C3(B618)	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	✓
C3(B618)	Engine management ECU		V46	✓	✓	✓	✓	✓
C3(B618)	Engine management ECU		V46_21	✓	✓	✓	✓	✓
C3(B618)	Engine management ECU		EDC17C60	✓	✓	✓	✓	○
C3(B618)	Engine management ECU		VD46	✓	✓	✓	✓	✓

C3(B618)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	✓
C3(B618)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	✓
C3(B618)	Engine management ECU		CMM_V56	✓	✓	✓	✓	✓
C3(B618)	Engine management ECU		CMM_VD56	✓	✓	✓	✓	✓
C3(B618)	Diesel additive pump			✓	✓	✓	✓	✓
C3(B618)	Voltage maintaining device			✓	✓	✓	○	○
C3(B618)	Automatic or piloted manual gearbox			✓	✓	✓	✓	✓
C3(B618)	Power steering			✓	✓	✓	✓	✓
C3(B618)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C3(B618)	Trailer relay unit			✓	✓	✓	✓	✓
C3(B618)	Battery charge status control unit			✓	✓	✓	✓	○
C3(B618)	Electric steering lock			✓	✓	✓	✓	✓
C3(B618)	Instrument panel			✓	✓	✓	✓	✓
C3(B618)	Controls under the steering wheel			✓	✓	✓	✓	✓
C3(B618)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
C3(B618)	Multifunction control panel			✓	✓	✓	✓	○
C3(B618)	Airbags and pretensioners ECU			✓	✓	✓	✓	○
C3(B618)	Seat belt not fastened warning lights unit			✓	○	○	○	✓
C3(B618)	Rain and brightness sensor			✓	✓	✓	✓	○
C3(B618)	Multifunction video camera (CMF)			✓	✓	✓	✓	✓
C3(B618)	Parking assistance			✓	✓	✓	✓	✓
C3(B618)	Multifunction screen			✓	✓	✓	○	✓
C3(B618)	Touch screen			✓	✓	✓	✓	✓
C3(B618)	Audio-navigation/telematic unit/connected audio		NAC	✓	✓	✓	✓	✓
C3(B618)	Audio-navigation/telematic unit/connected audio		RCC	✓	✓	✓	✓	✓
C3(B618)	Radio			✓	✓	✓	✓	✓
C3(B618)	Audio system control panel			✓	✓	✓	✓	✓
C3(B618)	Service module / Independent telematic			✓	✓	✓	✓	✓
C3(B618)	External CD player			✓	✓	✓	✓	✓
C3(B618)	Intrusion alarm siren			✓	✓	✓	✓	✓
C3(B618)	Air conditioning		BCC	✓	✓	✓	✓	✓
C3(B618)	Air conditioning		TDC_CH_MUX	✓	✓	✓	✓	✓
C3(B618)	Air conditioning		TDC_RF_MUX	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	MEV17_4_EUR04	MEV17_4_EUR04_5FW	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	MEV174	8FP MEV17.4	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	MEV17_4_2	EP6C 5FS MEV17_4_2	✓	✓	✓	✓	✓

C3 PICASSO (A58)	Engine management ECU	MED17_4_EURO4	5FR MED17.4	○	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	Petrol engine	VD46	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	Petrol engine	MEV17.4_EURO5	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	EDC16C34_DV6	9HZ (FAP) BOSCH EDC16C34 DV6TED4-110CV	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	EDC17C10	9HP BOSCH EDC17C10 DV6DTED -90 CV	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	EDC17C10_BR2	9HP EDC17C10_BR2 - DV6DTED - 92 CV	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	HD1_SID807	9HR HD1 SID807	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	HD1_SID807_BR2	HD1_SID807_BR2 9HR	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	Diesel engine	EDC17C60	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine management ECU	Diesel engine	EDC16C3	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP_MK60	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK70_1	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK100	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK100	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Radio		Radio post-equipment	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Radio		RD45	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Parking assistance			✓	✓	✓	✓	○
C3 PICASSO (A58)	Air conditioning			✓	✓	✓	✓	✓
C3 PICASSO (A58)	Anti-theft alarm			✓	✓	✓	✓	✓
C3 PICASSO (A58)	Controls under the steering wheel			✓	✓	✓	✓	✓
C3 PICASSO (A58)	Rain sensor/ Brightness			✓	✓	✓	○	○
C3 PICASSO (A58)	Air bags and pre- tensioners control unit			✓	✓	✓	✓	○
C3 PICASSO (A58)	Multifunction screen(EMF)		Type 'A' (segments)	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Multifunction screen(EMF)		Type 'C' (dot matrix)	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Telematic unit (RTx) or audio-navigation		RNEG navigation radio	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Seat belt not fastened warning lights unit			✓	○	○	○	✓
C3 PICASSO (A58)	Diesel additive pump		PADDGO_T1_E6	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Diesel additive pump		PCOMPE_MUX_MG1	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Engine relay unit			✓	✓	✓	✓	✓
C3 PICASSO (A58)	Trailer relay unit			✓	✓	✓	✓	✓
C3 PICASSO (A58)	Power steering		Power steering	✓	✓	✓	✓	○
C3 PICASSO (A58)	Hands-free Kit / Portable Unit			✓	✓	✓	✓	✓

C3 PICASSO (A58)	driver's door module			✓	✓	✓	✓	✓
C3 PICASSO (A58)	Service module / Independent telematic	BTA	Telematics unit independent	✓	✓	✓	✓	✓
C3 PICASSO (A58)	Battery charge status unit		BECE	✓	✓	✓	✓	○
C3 PICASSO (A58)	Battery charge status unit		BECE_GEN2	✓	✓	✓	✓	○
C3 PICASSO (A58)	Instrument panel			✓	✓	✓	✓	✓
C3 PICASSO (A58)	High frequency receiver			✓	✓	✓	✓	○
C3 PICASSO (A58)	Voltage retaining device			✓	○	○	○	○
C3 PICASSO (Ai58)	Built-in Systems Interface (BSI)			✓	✓	✓	✓	○
C3 PICASSO (Ai58)	Engine management ECU	ME749 N6A	ME749 NON BIO FLEX	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Engine management ECU	ME749_EC5	ME749_EC5 NFP	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Engine management ECU	V34.4	V34.4 ESSENCE	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Engine management ECU	V34.5	V34.5 ESSENCE	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Engine management ECU		V46	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK70_1	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK60_0	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Automatic gearbox or controlled manual gearbox		BVA_AL4	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓
C3 PICASSO (Ai58)	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG_ECO	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Service module / Independent telematic			✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Instrument panel			✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Radio		RDE	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Radio		RD6	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Radio		AUTORADIO	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Anti-theft alarm			✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Air bags and pre- tensioners control unit		SAC_AUTOLIV	✓	✓	✓	✓	○
C3 PICASSO (Ai58)	Air bags and pre- tensioners control unit		Airbag	✓	✓	✓	✓	○
C3 PICASSO (Ai58)	Air conditioning			✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Parking assistance		AAS	✓	✓	✓	✓	○
C3 PICASSO (Ai58)	Parking assistance		AAS_UDS	✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Controls under the steering wheel			✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Rain and brightness sensor			✓	✓	✓	○	○
C3 PICASSO (Ai58)	Trailer relay unit			✓	✓	✓	✓	✓
C3 PICASSO (Ai58)	Power steering			✓	✓	✓	✓	✓
C3-XR	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C3-XR	Engine management ECU		ME745_EC5	✓	✓	✓	✓	✓
C3-XR	Engine management ECU		MED17_4_4	✓	✓	✓	✓	✓

C3-XR	Engine management ECU		EDC17C60	✓	✓	✓	✓	○
C3-XR	Engine management ECU		V46_52	✓	✓	✓	✓	✓
C3-XR	Engine management ECU		VD46	✓	✓	✓	✓	✓
C3-XR	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		ABSMK100	✓	✓	✓	✓	✓
C3-XR	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		ESPMK100	✓	✓	✓	✓	✓
C3-XR	Automatic gearbox or controlled manual gearbox		BVA_AT8	✓	✓	✓	✓	✓
C3-XR	Automatic gearbox or controlled manual gearbox		MAPS_UDS	✓	✓	✓	✓	✓
C3-XR	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓
C3-XR	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	✓
C3-XR	Parking assistance			✓	✓	✓	✓	✓
C3-XR	Multifunction screen		EMF_C	✓	✓	✓	○	✓
C3-XR	Radio		AUTORADIO	✓	✓	✓	✓	✓
C3-XR	Radio		RD45	✓	✓	✓	✓	✓
C3-XR	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C3-XR	Voltage retaining device		DMTR	✓	✓	✓	○	○
C3-XR	Electronic key reader			✓	✓	✓	✓	○
C3-XR	Electric steering lock			✓	✓	✓	✓	✓
C3-XR	Power steering		DAE	✓	✓	✓	✓	○
C3-XR	Power steering		DAE_A515	✓	✓	✓	✓	✓
C3-XR	Hands-free control unit			✓	✓	✓	✓	✓
C3-XR	Multiplexed control panel		MRN audio-navigation	✓	✓	✓	✓	✓
C3-XR	Telematic unit (RTx) or audio-navigation		MRN audio-navigation	✓	✓	✓	✓	✓
C3-XR	Controls under the steering wheel			✓	✓	✓	✓	✓
C3-XR	Service module / Independent telematic		BTA_CN	✓	✓	✓	✓	✓
C3-XR	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
C3-XR	Traction control mode selector			✓	✓	✓	✓	✓
C3-XR	Battery charge status unit			✓	✓	✓	✓	○
C4	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C4	Automatic gearbox electric control			✓	✓	✓	✓	✓
C4	Engine management ECU	MED17_4_EURO4	5FT MED17.4	✓	✓	✓	✓	✓
C4	Engine management ECU	MEV17_4_EURO4	5FW MEV17.4	✓	✓	✓	✓	✓
C4	Engine management ECU	MM6LP	RPN MM6LP	✓	✓	✓	✓	✓
C4	Engine management ECU	ME745	NFU BOSCH ME745	✓	✓	✓	✓	✓
C4	Engine management ECU	ME749	NFU BOSCH ME749	✓	✓	✓	✓	✓

C4	Engine management ECU	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓
C4	Engine management ECU	MM6KP	MM6KP Non Bio Flex	✓	✓	✓	✓	✓
C4	Engine management ECU	Petrol engine	MM6LPC	✓	✓	✓	✓	✓
C4	Engine management ECU	Petrol engine	MEV17_4_EUR05	✓	✓	✓	✓	○
C4	Engine management ECU	DELPHI_DCM3.4	RHR DELPHI DCM3.4	✓	✓	✓	✓	✓
C4	Engine management ECU	EDC16C34_DV6	9HV BOSCH EDC16C34 DV6TED4	✓	✓	✓	✓	✓
C4	Engine management ECU	HDI_SID803A	RHR SIEMENS SID803A	✓	✓	✓	✓	✓
C4	Engine management ECU	HDI_SID803	RHR SIEMENS SID803	✓	✓	✓	✓	✓
C4	Engine management ECU	HDI_SID807_BR2	9HL - DV6CTED - 111 CV HDI_SID807_BR2	✓	✓	✓	✓	✓
C4	Engine management ECU	Diesel engine	DCM3.5	✓	✓	✓	✓	✓
C4	Engine management ECU	Diesel engine	EDC16C3	✓	✓	✓	✓	✓
C4	Engine management ECU	Diesel engine	EDC15C2	✓	✓	✓	✓	✓
C4	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
C4	Automatic gearbox or controlled manual gearbox		Auto gearbox AM6	✓	✓	✓	✓	✓
C4	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
C4	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EUR05	✓	✓	✓	✓	✓
C4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_1_BOSCH	✓	✓	✓	✓	✓
C4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_BOSCH	✓	✓	✓	✓	✓
C4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_1_BOSCH	✓	✓	✓	✓	✓
C4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_BOSCH	✓	✓	✓	✓	✓
C4	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C4	Lane departure warning system			✓	✓	✓	✓	✓
C4	Anti-theft alarm			✓	✓	✓	✓	✓
C4	Controls under the steering wheel			✓	✓	✓	✓	✓
C4	Diesel additive function			✓	✓	✓	✓	✓
C4	Diesel additive pump		POMPE_MUX_MG1	✓	✓	✓	✓	✓
C4	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓
C4	Driver's door module		MDP_CONDUCT	✓	✓	✓	✓	✓
C4	Passenger's door module		MDP_PASSAG	✓	✓	✓	✓	✓
C4	Radio amplifier			✓	✓	✓	○	✓
C4	Rain sensor/ Brightness			✓	✓	✓	○	○
C4	Driving school mode			✓	✓	✓	○	✓

C4	Unit Rev counter		Rev counter	✓	✓	✓	✓	✓
C4	Seat driver position memory module.			✓	✓	✓	✓	✓
C4	Air conditioning		CLIM_REGULEE	✓	✓	✓	✓	✓
C4	Multifunction screen		Multifunction screen SAGEM A	✓	✓	✓	✓	✓
C4	Multifunction screen		Multifunction screen SAGEM C	✓	✓	✓	✓	✓
C4	Telematic unit (RTx) or audio-navigation		RNEG navigation radio	✓	✓	✓	✓	✓
C4	Telematic unit (RTx) or audio-navigation		BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓
C4	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C4	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C4	Telematic unit (RTx) or audio-navigation		Telematic(RT5)	✓	✓	✓	✓	✓
C4	Telematic unit (RTx) or audio-navigation		RASTREADOR	✓	✓	✓	✓	✓
C4	High frequency receiver			✓	✓	✓	✓	○
C4	Radio	RD4	Radio post-equipment	✓	✓	✓	✓	✓
C4	Trailer relay unit			✓	✓	✓	✓	✓
C4	Engine relay unit			✓	✓	✓	✓	✓
C4	CD changer / external CD player			✓	✓	✓	✓	✓
C4	Parking assistance			✓	✓	✓	✓	✓
C4	Power steering			✓	✓	✓	✓	○
C4	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
C4	Under-inflation detection			✓	✓	✓	✓	○
C4	Hands-free Kit / Portable Unit		KML	✓	✓	✓	✓	✓
C4	Hands-free Kit / Portable Unit	BOITIER_NOMADE	Mobile Housing	✓	✓	✓	✓	✓
C4	Electric secondary brake			✓	✓	✓	✓	✓
C4	Instrument panel			✓	✓	✓	✓	✓
C4	Pneumatic suspension			✓	✓	✓	✓	✓
C4	Battery charge status unit		BECE	✓	✓	✓	✓	○
C4	Battery charge status unit		BECE_GEN2	✓	✓	✓	✓	○
C4	Windscreen wiper			✓	✓	✓	○	✓
C4	Ambient interior lighting unit			✓	✓	✓	✓	✓
C4	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓
C4	Service module / Independent telematic		BLV	✓	✓	✓	✓	✓
C4 SEDAN	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	MM6KP	RFJ MM6KP Bio Flex (EW10A FF)	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	ME749	NFU BOSCH ME749	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	ME745	NFS BOSCH ME745	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	MED17_4_EURO4	MED17_4_EURO4 5FX	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	MEV17_4_EURO4	MEV17_4_EURO4 5FW	✓	✓	✓	✓	✓

C4 SEDAN	Engine management ECU	Petrol engine	MEV17_4_EUR05	✓	✓	✓	✓	○
C4 SEDAN	Engine management ECU	Petrol engine	MEV17_4_2	✓	✓	✓	✓	○
C4 SEDAN	Engine management ECU	Petrol engine	MED17_4_2	✓	✓	✓	✓	○
C4 SEDAN	Engine management ECU	Petrol engine	MM6LPC	✓	✓	✓	✓	○
C4 SEDAN	Engine management ECU	EDC15C2	RHM BOSCH EDC15C2 DW10A	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	EDC16C34_DV6	9HZ (FAP) BOSCH EDC16C34 DV6TED4-110CV	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	HD1_SID807_BR2	9HL - DV6CTED - 111 CV HD1 SID807 BR2	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	HD1_SID803A	HD1 SID803A RHJ	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	DCM3.4	DCM3.4 RHR	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	Diesel engine	DCM3.5	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	Diesel engine	HD1_SID803	✓	✓	✓	✓	✓
C4 SEDAN	Engine management ECU	Diesel engine	EDC16C3	✓	✓	✓	✓	✓
C4 SEDAN	Automatic gearbox or controlled manual gearbox	BVA_AL4	Auto gearbox AL4	✓	✓	✓	✓	✓
C4 SEDAN	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EUR05	✓	✓	✓	✓	✓
C4 SEDAN	Automatic gearbox or controlled manual gearbox		BVA_AM6	✓	✓	✓	✓	○
C4 SEDAN	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
C4 SEDAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓
C4 SEDAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_BOSCH	✓	✓	✓	✓	✓
C4 SEDAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
C4 SEDAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_BOSCH	✓	✓	✓	✓	✓
C4 SEDAN	Automatic gearbox electric control			✓	✓	✓	✓	✓
C4 SEDAN	Air bags and pre- tensioners control unit			✓	✓	✓	✓	○
C4 SEDAN	Controls under the steering wheel			✓	✓	✓	✓	✓
C4 SEDAN	Anti-theft alarm			✓	✓	✓	✓	✓
C4 SEDAN	Seat driver position memory module.		BDMC	✓	✓	✓	✓	✓
C4 SEDAN	Driver's door module			✓	✓	✓	✓	✓
C4 SEDAN	Passenger's door module			✓	✓	✓	✓	✓
C4 SEDAN	Unit Rev counter		Separate instrument panel	✓	✓	✓	✓	✓
C4 SEDAN	Rain sensor/ Brightness			✓	✓	✓	○	○
C4 SEDAN	Parking assistance			✓	✓	✓	✓	✓
C4 SEDAN	Multifunction screen		EMF_A	✓	✓	✓	✓	✓
C4 SEDAN	Multifunction screen		EMF_C	✓	✓	✓	✓	✓
C4 SEDAN	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG	✓	✓	✓	✓	○

C4 SEDAN	Telematic unit (RTx) or audio-navigation		BOITIER_TELEMATIQUE	✓	✓	✓	✓	○
C4 SEDAN	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG_ECO	✓	✓	✓	✓	○
C4 SEDAN	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C4 SEDAN	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C4 SEDAN	Telematic unit (RTx) or audio-navigation		Telematic(RT5)	✓	✓	✓	✓	✓
C4 SEDAN	Instrument panel			✓	✓	✓	✓	✓
C4 SEDAN	Radio	RD4	Radio post-equipment	✓	✓	✓	✓	✓
C4 SEDAN	Radio		RD45	✓	✓	✓	✓	○
C4 SEDAN	CD changer / external CD player			✓	✓	✓	✓	✓
C4 SEDAN	Trailer relay unit			✓	✓	✓	✓	✓
C4 SEDAN	Engine relay unit			✓	✓	✓	✓	✓
C4 SEDAN	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓
C4 SEDAN	Power steering			✓	✓	✓	✓	○
C4 SEDAN	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
C4 SEDAN	Hands-free Kit / Portable Unit		KML	✓	✓	✓	✓	✓
C4 SEDAN	Hands-free Kit / Portable Unit		BOITIER_NOMADE	✓	✓	✓	✓	○
C4 SEDAN	Air conditioning			✓	✓	✓	✓	✓
C4 SEDAN	Electric secondary brake			✓	✓	✓	✓	✓
C4 SEDAN	Pneumatic suspension			✓	✓	✓	✓	✓
C4 SEDAN	Under inflation detection			✓	✓	✓	✓	○
C4 SEDAN	Battery charge status unit		BECB	✓	✓	✓	✓	○
C4 SEDAN	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○
C4 SEDAN	Lane departure warning system			✓	✓	✓	✓	○
C4 SEDAN	Windscreen wiper			✓	✓	✓	○	○
C4 SEDAN	Radio amplifier			✓	✓	✓	○	○
C4 SEDAN	Ambient interior lighting unit			✓	✓	✓	✓	○
C4 SEDAN	High frequency receiver			✓	✓	✓	✓	○
C4 SEDAN	Diesel additive function			✓	✓	✓	✓	○
C4 SEDAN	Driving school module			✓	✓	✓	○	○
C4 SEDAN	Service module / Independent telematic		BTA	✓	✓	✓	✓	○
C4 SEDAN	Service module / Independent telematic		BLVV	✓	✓	✓	✓	○
C4(B7)	Built-in Systems Interface			✓	✓	✓	✓	○
C4(B7)	Air bags		RBG_UDS	✓	✓	✓	✓	○
C4(B7)	Engine management ECU	MEV17.4.2 EP6C	5FS MEV17.4.2 EURO 5	✓	✓	✓	✓	✓
C4(B7)	Engine management ECU	MED17.4.2	5FV MED17.4.2 EURO 5	✓	✓	✓	✓	✓
C4(B7)	Engine management ECU		HD1. SID807. BR2	✓	✓	✓	✓	✓
C4(B7)	Engine management ECU	EDC17C10. BR2	9HP-DV6DTEd	✓	✓	✓	✓	✓
C4(B7)	Engine management ECU	DCM35_BR2	RHE-DW10CTED4-163CV	✓	✓	✓	✓	✓

C4(B7)	Engine management ECU	MEVD17.4.2	MEVD17.4.2 5FU	✓	✓	✓	✓	✓
C4(B7)	Engine management ECU	ME745	ME745 NFU	✓	✓	✓	✓	✓
C4(B7)	Engine management ECU		ME745_ECS	✓	✓	✓	✓	✓
C4(B7)	Engine management ECU		V46_21	✓	✓	✓	✓	○
C4(B7)	Engine management ECU		V46_32	✓	✓	✓	✓	○
C4(B7)	Engine management ECU		MW6KP	✓	✓	✓	✓	○
C4(B7)	Engine management ECU		VD46	✓	✓	✓	✓	○
C4(B7)	Engine management ECU		EDC17C60	✓	✓	✓	✓	○
C4(B7)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○
C4(B7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS81	✓	✓	✓	✓	✓
C4(B7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		81 ESP	✓	✓	✓	✓	✓
C4(B7)	Automatic gearbox or controlled manual gearbox		BVA_AL4	✓	✓	✓	✓	✓
C4(B7)	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
C4(B7)	Automatic gearbox or controlled manual gearbox		BVA_AW6_AT6_EURO5	✓	✓	✓	✓	✓
C4(B7)	Automatic gearbox or controlled manual gearbox		BVA_AW6_AT6_UDS	✓	✓	✓	○	○
C4(B7)	Parking assistance			✓	✓	✓	✓	✓
C4(B7)	Radio amplifier		AMPLI_AUDIO	✓	✓	✓	○	✓
C4(B7)	Telematic unit (RTx) or audio-navigation		RNEG navigation radio	✓	✓	✓	✓	✓
C4(B7)	Telematic unit (RTx) or audio-navigation		RNEG_2010	✓	✓	✓	✓	✓
C4(B7)	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	○
C4(B7)	Control panel dot matrix display	Colour matrix screen	MATT_C_2010	✓	✓	✓	○	✓
C4(B7)	Control panel dot matrix display	Monochrome matrix screen	MATT_M_2010	✓	✓	✓	○	✓
C4(B7)	Driver's door module		PDPC	✓	✓	✓	✓	✓
C4(B7)	Controls under the steering wheel		HDC	✓	✓	✓	✓	✓
C4(B7)	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	✓
C4(B7)	Lane departure warning system		AFIL	✓	✓	✓	✓	✓
C4(B7)	Controls on the steering wheel / Integral controls		VC1	✓	✓	✓	✓	✓
C4(B7)	Electric secondary brake		FSE	✓	✓	✓	✓	✓
C4(B7)	Power steering		GEP	✓	✓	✓	✓	✓
C4(B7)	Anti-theft alarm		ALARME	✓	✓	✓	✓	✓
C4(B7)	Multiplexed control panel		Accessory audio system and manual air conditioning	✓	✓	✓	✓	✓
C4(B7)	Monitoring of the blind spot		SAM	✓	✓	✓	✓	✓
C4(B7)	Trailer relay unit		BSG_2010_RQ	✓	✓	✓	✓	✓
C4(B7)	Dynamic headlamp height adjuster		LADCT	✓	✓	✓	✓	✓

C4(B7)	Engine relay unit			✓	✓	✓	✓	✓
C4(B7)	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓
C4(B7)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	○
C4(B7)	Diesel additive pump		PADDGO_E5	✓	✓	✓	✓	✓
C4(B7)	Diesel additive pump		PADDGO_T1_E6	✓	✓	✓	✓	○
C4(B7)	Seat driver position memory module.		BDMC	✓	✓	✓	✓	✓
C4(B7)	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○
C4(B7)	Driving school module			✓	✓	✓	○	✓
C4(B7)	Supply protection and management unit			✓	✓	✓	✓	○
C4(B7)	Voltage retaining device		DMTC	✓	○	○	○	○
C4(B7)	Voltage retaining device		DMTR	✓	✓	✓	○	○
C4(B7)	Under-inflation detection		DSG	✓	✓	✓	✓	○
C4(B7)	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○
C4(B7)	Air conditioning	CLIM_REGULEE_UDS	RF	✓	✓	✓	✓	✓
C4(B7)	Rain and light sensor			✓	✓	✓	✓	○
C4(B7)	Radio		RD5	✓	✓	✓	✓	✓
C4(B7)	Radio		RD45	✓	✓	✓	✓	○
C4(B7)	Instrument panel			✓	✓	✓	✓	✓
C4(B7)	Multifunction screen	EMF_A_UDS	EMF_A_SANS BOUTONS	✓	✓	✓	✓	✓
C4(B7)	Multifunction screen		EMF_C_UDS	✓	✓	✓	○	✓
C4(B7)	Seat belt not fastened warning lights unit		TNB_2010	✓	○	○	○	✓
C4(B7)	Hands-free control unit			✓	✓	✓	✓	✓
C4(B7)	Electronic key reader			✓	✓	✓	✓	○
C4(B7)	Electric steering lock			✓	✓	✓	✓	✓
C4(B7)	External CD player			✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	Built-in systems interface			✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	Engine management ECU		MED17_4_2	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Engine management ECU		ME745_EC5	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Engine management ECU		V46_32	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Engine management ECU		VD46	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Voltage maintaining device		DMTR	✓	✓	✓	○	○
C4 L/C4 SEDAN(B7)	Voltage maintaining device		DMTR_DTC3B	✓	✓	✓	○	○
C4 L/C4 SEDAN(B7)	Automatic or piloted manual gearbox		BVA_AL4	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Automatic or piloted manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Power steering			✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP81	✓	✓	✓	✓	✓

C4 L/C4 SEDAN(B7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	UNDER-INFLATION DETECTION		DSG	✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	UNDER-INFLATION DETECTION		DSG_UDS	✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	Engine wiring housing			✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Battery charge status control unit			✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	Supplies protection and management unit			✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	Electric steering lock			✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Hands-free unit			✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Electronic key reader			✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	Instrument panel			✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Control panel dot matrix display		MATT_C_2010	✓	✓	✓	○	✓
C4 L/C4 SEDAN(B7)	Control panel dot matrix display		MATT_M_2010	✓	✓	✓	○	✓
C4 L/C4 SEDAN(B7)	Control panel dot matrix display		MATT_P_2010	✓	✓	✓	○	○
C4 L/C4 SEDAN(B7)	Controls under the steering wheel		HDC	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	Multifunction control panel			✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Airbags and pretensioners ECU			✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	Rain and brightness sensor			✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	Multifunction video recording camera			✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	Parking assistance			✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Multifunction screen		EMF_A_UDS	✓	✓	✓	○	✓
C4 L/C4 SEDAN(B7)	Multifunction screen		EMF_C_UDS	✓	✓	✓	○	✓
C4 L/C4 SEDAN(B7)	Telematic unit (RTx) or audio-navigation		MRN	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Radio		RD5	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Radio		RD6_CN	✓	✓	✓	✓	○
C4 L/C4 SEDAN(B7)	Service module / Independent telematic		BTA_CN	✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Anti-theft alarm			✓	✓	✓	✓	✓
C4 L/C4 SEDAN(B7)	Air conditioning		CLIM_REGULEE_UDS	✓	✓	✓	✓	✓
C4 Aircross	Built-in Systems Interface			✓	✓	✓	✓	✓
C4 Aircross	Engine management ECU	MIVEC	MIVEC_SFZ	✓	✓	✓	✓	✓
C4 Aircross	Engine management ECU		CM1_4A92	✓	✓	✓	✓	✓
C4 Aircross	Engine management ECU	HDI_4N13	HDI_4N13	✓	✓	✓	✓	✓
C4 Aircross	Engine management ECU		HDI_SID807_J3J4	✓	✓	✓	✓	✓
C4 Aircross	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS 4x4	✓	✓	✓	✓	✓

C4 Aircross	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP 4x4	✓	✓	✓	✓	✓
C4 Aircross	Automatic gearbox or controlled manual gearbox		BV_CVT	✓	✓	✓	✓	○
C4 Aircross	Air bags and pre-tensioners control unit			✓	✓	✓	✓	✓
C4 Aircross	Anti-theft alarm			✓	✓	✓	✓	✓
C4 Aircross	Power steering			✓	✓	✓	✓	○
C4 Aircross	Instrument panel		Control panel	✓	✓	✓	✓	✓
C4 Aircross	Starting authorisation ECU			✓	✓	✓	✓	✓
C4 Aircross	Radio or radiotelephone (radio part)			✓	✓	✓	✓	✓
C4 Aircross	Rain and brightness sensor			✓	✓	✓	✓	○
C4 Aircross	Rear final drive piloted clutch			✓	✓	✓	✓	✓
C4 Aircross	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
C4 Aircross	Engine immobiliser / Hands-free control unit		VCM	✓	✓	✓	✓	○
C4 Aircross	Engine immobiliser / Hands-free control unit		KOS	✓	✓	✓	✓	○
C4 Aircross	Calculateur stop and start			✓	✓	✓	✓	○
C4 Aircross	Steering wheel angle sensor			✓	✓	✓	○	○
C4 Aircross	Heating/ventilation			✓	✓	✓	✓	✓
C4 Aircross	Driver's door module			✓	✓	✓	✓	○
C4 Aircross	Parking assistance			✓	✓	✓	✓	○
C4 Aircross	Power steering (vehicule recent)			✓	✓	✓	✓	○
C4 Aircross	Navigation			✓	✓	✓	○	○
C4 Aircross (A88C)	Built-in systems interface			✓	✓	✓	✓	✓
C4 Aircross (A88C)	Engine management ECU		VD46	✓	✓	✓	✓	✓
C4 Aircross (A88C)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	✓
C4 Aircross (A88C)	Voltage maintaining device			✓	✓	✓	○	○
C4 Aircross (A88C)	Automatic or piloted manual gearbox			✓	✓	✓	✓	✓
C4 Aircross (A88C)	Power steering			✓	✓	✓	✓	✓
C4 Aircross (A88C)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C4 Aircross (A88C)	Battery charge status control unit			✓	✓	✓	✓	○
C4 Aircross (A88C)	Electric steering lock			✓	✓	✓	✓	✓
C4 Aircross (A88C)	Instrument panel			✓	✓	✓	✓	✓
C4 Aircross (A88C)	Head Up Display			✓	✓	✓	✓	✓
C4 Aircross (A88C)	Controls under the steering wheel			✓	✓	✓	✓	✓
C4 Aircross (A88C)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
C4 Aircross (A88C)	Multifunction control panel			✓	✓	✓	✓	○

C4 Aircross (A88C)	Airbags and pretensioners ECU			✓	✓	✓	✓	○
C4 Aircross (A88C)	Seat belt not fastened warning lights unit			✓	○	○	○	✓
C4 Aircross (A88C)	Rain and brightness sensor			✓	✓	✓	✓	○
C4 Aircross (A88C)	Multifunction video camera (CMF)			✓	✓	✓	✓	✓
C4 Aircross (A88C)	Parking assistance			✓	✓	✓	✓	✓
C4 Aircross (A88C)	Touch screen		EMF_DGT_UDS_GP	✓	✓	✓	✓	✓
C4 Aircross (A88C)	Touch screen		EMF_DGT_LVDS_BD	✓	✓	✓	✓	✓
C4 Aircross (A88C)	Telematic unit (RTx) or audio-navigation			✓	✓	✓	✓	✓
C4 Aircross (A88C)	Service module / Independent telematic			✓	✓	✓	✓	○
C4 Aircross (A88C)	Driver's door module			✓	✓	✓	✓	○
C4 Aircross (A88C)	Air conditioning			✓	✓	✓	✓	✓
C4 PICASSO	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	MED17.4	5FT MED17.4	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	MED17_4_EURO5	5FV MED17.4	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	MEV17.4	5FW MEV17.4	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	MEV174	5FS MEV17.4	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	MED17_4_2	5FV MED17.4.2	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	MEV17_4_2	EP6C 5FS MEV17_4_2	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	ME745	ME745 N6A	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	ME749 NFU	ME749 NON FLEX FUEL	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	Petrol engine	EDC15C2	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	MM6KP	MM6KP RFJ	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	Petrol engine	MM6LPC	✓	✓	✓	✓	○
C4 PICASSO	Engine management ECU	EDC16C34_DV6	9HZ (FAP) BOSCH EDC16C34 DV6TED4	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	HD1_SID803A	RHR SIEMENS SID803A	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	DCM3.5	RHE DCM3.5	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	HD1_SID807	9HR HD1 SID807	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	HD1_SID807_BR2	9HL - DV6CTED - 111 CV HD1_SID807_BR2	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	DCM35_BR2	RHR-DV10CTED4-163CV	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	Diesel engine	EDC16C3	✓	✓	✓	✓	✓
C4 PICASSO	Engine management ECU	DCM3.4	DCM3.4 RHR	✓	✓	✓	✓	✓
C4 PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_BOSCH	✓	✓	✓	✓	✓
C4 PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_BOSCH	✓	✓	✓	✓	✓
C4 PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
C4 PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓

C4 PICASSO	Automatic gearbox electric control			✓	✓	✓	✓	✓
C4 PICASSO	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C4 PICASSO	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
C4 PICASSO	Automatic gearbox or controlled manual gearbox		Auto gearbox AM6	✓	✓	✓	✓	✓
C4 PICASSO	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
C4 PICASSO	Automatic gearbox or controlled manual gearbox		BVA AM6 Euro5	✓	✓	✓	✓	✓
C4 PICASSO	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	○
C4 PICASSO	Lane departure warning system			✓	✓	✓	✓	✓
C4 PICASSO	Controls under the steering wheel			✓	✓	✓	✓	✓
C4 PICASSO	Anti-theft alarm			✓	✓	✓	✓	✓
C4 PICASSO	Windscreen wiper		ESSUIVIT	✓	✓	✓	✓	✓
C4 PICASSO	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓
C4 PICASSO	Diesel additive pump		PADDGO_E5	✓	✓	✓	✓	✓
C4 PICASSO	Driver's door module			✓	✓	✓	✓	✓
C4 PICASSO	Passenger's door module			✓	✓	✓	✓	✓
C4 PICASSO	Radio amplifier			✓	✓	✓	○	✓
C4 PICASSO	Rain sensor/ Brightness			✓	✓	✓	○	○
C4 PICASSO	Seat driver position memory module.		BOIT_MEMO_CONDUCT	✓	✓	✓	✓	✓
C4 PICASSO	Parking assistance		AIDE_STAT	✓	✓	✓	✓	✓
C4 PICASSO	Telematic unit (RTx) or audio-navigation		RNEG navigation radio	✓	✓	✓	✓	✓
C4 PICASSO	Telematic unit (RTx) or audio-navigation		BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓
C4 PICASSO	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	✓
C4 PICASSO	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C4 PICASSO	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C4 PICASSO	Telematic unit (RTx) or audio-navigation		Telematic(RT5)	✓	✓	✓	✓	✓
C4 PICASSO	High frequency receiver			✓	✓	✓	✓	○
C4 PICASSO	Instrument panel			✓	✓	✓	✓	✓
C4 PICASSO	Air conditioning			✓	✓	✓	✓	✓
C4 PICASSO	CD changer / external CD player			✓	✓	✓	✓	✓
C4 PICASSO	Radio		Radio post-equipment	✓	✓	✓	✓	✓
C4 PICASSO	Radio		RD45	✓	✓	✓	✓	✓
C4 PICASSO	Pneumatic suspension		Suspension	✓	✓	✓	✓	✓
C4 PICASSO	Power steering			✓	✓	✓	✓	✓
C4 PICASSO	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
C4 PICASSO	Trailer relay unit			✓	✓	✓	✓	✓
C4 PICASSO	Engine relay unit			✓	✓	✓	✓	✓

C4 PICASSO	Under-inflation detection		DSG	✓	✓	✓	✓	○
C4 PICASSO	Electric secondary brake			✓	✓	✓	✓	✓
C4 PICASSO	Hands-free Kit / Portable Unit	BOITIER_NOMADE	Mobile Housing	✓	✓	✓	✓	✓
C4 PICASSO	Hands-free Kit / Portable Unit		KML	✓	✓	✓	✓	✓
C4 PICASSO	Battery charge status unit		BECEB	✓	✓	✓	✓	○
C4 PICASSO	Battery charge status unit		BECEB_GEN2	✓	✓	✓	✓	○
C4 PICASSO	Ambient interior lighting unit			✓	✓	✓	✓	✓
C4 PICASSO	Separate instrument panel			✓	✓	✓	✓	○
C4 PICASSO	Voltage retaining device			✓	○	○	○	○
C4 PICASSO	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓
C4 PICASSO	Service module / Independent telematic		BLVV	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Engine management ECU		HD1_SID807_BR2	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Engine management ECU		MED17_4_2	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Engine management ECU		MEV17_4_2	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Engine management ECU		DCM62	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Engine management ECU		EDC17C60	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Engine management ECU		VD46	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Engine relay unit			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Trailer relay unit			✓	✓	✓	✓	✓
C4 PICASSO (B78)	CD changer / external CD player			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Radio amplifier			✓	✓	✓	○	✓
C4 PICASSO (B78)	Controls under the steering wheel			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Multifunction video camera (CMF)			✓	✓	✓	✓	○
C4 PICASSO (B78)	Anti-theft alarm			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Intrusion alarm siren			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Left hand front wiper motor			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Right hand front wiper motor			✓	○	○	✓	○
C4 PICASSO (B78)	Control panel		CIROCCO	✓	✓	✓	✓	✓

C4 PICASSO (B78)	Control panel		COMBINE_UDS	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Telematic unit (RTx) or audio-navigation		MRN	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Vehicle Distance Assistance			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Air conditioning			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Seat driver position memory module.			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Rain and light sensor		PLU1E_LUMINOSITE_UDS	✓	✓	✓	✓	○
C4 PICASSO (B78)	Rain and light sensor		CDPL_UDS_HELLA	✓	✓	✓	✓	○
C4 PICASSO (B78)	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C4 PICASSO (B78)	Right-hand reversible seat belt inertia reel			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Left-hand reversible seat belt inertia reel			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Battery charge status unit			✓	✓	✓	✓	○
C4 PICASSO (B78)	Multiplexed control panel			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Parking assistance		4 channels	✓	✓	✓	✓	○
C4 PICASSO (B78)	Electronic key reader			✓	✓	✓	✓	○
C4 PICASSO (B78)	Electric steering lock			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Signalling fuse box			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Driver's door module			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Automatic gearbox electric control			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Hands-free control unit			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
C4 PICASSO (B78)	Power steering			✓	✓	✓	✓	○
C4 PICASSO (B78)	Voltage retaining device		DMTR	✓	✓	✓	○	○
C4 PICASSO (B78)	Motorised Boot ECU			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Diesel additive pump			✓	✓	✓	✓	○
C4 PICASSO (B78)	Additional heating			✓	✓	✓	✓	✓
C4 PICASSO (B78)	Panoramic visual assistance front camera			✓	✓	✓	✓	✓
C4 CACTUS	Built-in Systems Interface			✓	✓	✓	○	○
C4 CACTUS	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	✓
C4 CACTUS	Engine management ECU		V46	✓	✓	✓	✓	✓
C4 CACTUS	Engine management ECU	VD46	Engine type 42 : EB2DTS engine with 5-speed manual gearbox	✓	✓	✓	✓	✓
C4 CACTUS	Engine management ECU		EDC17C60	✓	✓	✓	✓	✓
C4 CACTUS	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C4 CACTUS	Automatic gearbox or controlled manual gearbox		MAPS_UDS	✓	✓	✓	✓	○
C4 CACTUS	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	○

C4 CACTUS	Automatic gearbox or controlled manual gearbox		BVMP_MCP_UDS	✓	✓	✓	○	✓
C4 CACTUS	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C4 CACTUS	Air conditioning			✓	✓	✓	✓	✓
C4 CACTUS	Battery charge status unit			✓	✓	✓	✓	○
C4 CACTUS	power steering			✓	✓	✓	✓	○
C4 CACTUS	Trailer relay unit			✓	✓	✓	✓	✓
C4 CACTUS	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓
C4 CACTUS	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
C4 CACTUS	Seat belt not fastened warning lights unit			✓	○	○	○	✓
C4 CACTUS	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
C4 CACTUS	Voltage retaining device		DMTR	✓	✓	✓	○	○
C4 CACTUS	Parking assistance			✓	✓	✓	✓	○
C4 CACTUS	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓
C4 CACTUS	Diesel additive pump		PADDGO_T1_E6	✓	✓	✓	✓	✓
C4 CACTUS	Telematic unit (RTx) or audio-navigation			✓	✓	✓	✓	✓
C4 CACTUS	instrument panel			✓	✓	✓	✓	✓
C4 CACTUS	Touch screen			✓	✓	✓	✓	✓
C4 CACTUS	Multiplexed control panel			✓	✓	✓	✓	○
C4 CACTUS	Rain and light sensor			✓	✓	✓	✓	○
C4 CACTUS	Controls under the steering wheel			✓	✓	✓	✓	✓
C4 CACTUS	external CD player			✓	✓	✓	✓	✓
C4 CACTUS (F3)	Built-in systems interface		BSI2010	✓	✓	✓	✓	○
C4 CACTUS (F3)	Built-in systems interface		BSI2010_EV	✓	✓	✓	✓	✓
C4 CACTUS (F3)	Engine management ECU		VD46	✓	✓	✓	✓	✓
C4 CACTUS (F3)	Engine management ECU		EDC17C60	✓	✓	✓	✓	○
C4 CACTUS (F3)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	✓
C4 CACTUS (F3)	Engine management ECU		CMM_VD56	✓	✓	✓	✓	✓
C4 CACTUS (F3)	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓
C4 CACTUS (F3)	Diesel additive pump		PADDGO_T1_E6	✓	✓	✓	✓	✓
C4 CACTUS (F3)	Voltage maintaining device		DMTC	✓	✓	✓	○	○
C4 CACTUS (F3)	Voltage maintaining device		DMTR	✓	✓	✓	○	○
C4 CACTUS (F3)	Voltage maintaining device		DMTR_DTC3B	✓	✓	✓	○	○
C4 CACTUS (F3)	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	✓
C4 CACTUS (F3)	Power steering		DAE	✓	✓	✓	✓	○
C4 CACTUS (F3)	Power steering		DAE_UDS	✓	✓	✓	✓	○
C4 CACTUS (F3)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK100	✓	✓	✓	✓	○
C4 CACTUS (F3)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK100	✓	✓	✓	✓	○

C4 CACTUS(F3)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90	✓	✓	✓	✓	✓
C4 CACTUS(F3)	Trailer relay unit			✓	✓	✓	✓	✓
C4 CACTUS(F3)	Battery charge status control unit			✓	✓	✓	✓	○
C4 CACTUS(F3)	Electric steering lock			✓	✓	✓	✓	✓
C4 CACTUS(F3)	Instrument panel			✓	✓	✓	✓	○
C4 CACTUS(F3)	Controls under the steering wheel			✓	✓	✓	✓	✓
C4 CACTUS(F3)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
C4 CACTUS(F3)	Traction control mode selector			✓	✓	✓	✓	✓
C4 CACTUS(F3)	Multifunction control panel			✓	✓	✓	✓	✓
C4 CACTUS(F3)	Airbags and pretensioners ECU			✓	✓	✓	✓	○
C4 CACTUS(F3)	Seat belt not fastened warning lights unit			✓	○	○	○	✓
C4 CACTUS(F3)	Rain and brightness sensor			✓	✓	✓	✓	○
C4 CACTUS(F3)	Multifunction video camera (CMF)			✓	✓	✓	✓	✓
C4 CACTUS(F3)	Parking assistance		AAS_UDS	✓	✓	✓	✓	✓
C4 CACTUS(F3)	Parking assistance		AAS_UDS_G6	✓	✓	✓	✓	✓
C4 CACTUS(F3)	Touch screen		EMF_DGT_UDS	✓	✓	✓	✓	✓
C4 CACTUS(F3)	Touch screen		EMF_DGT_UDS_GP	✓	✓	✓	✓	✓
C4 CACTUS(F3)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	✓
C4 CACTUS(F3)	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	✓
C4 CACTUS(F3)	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓
C4 CACTUS(F3)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
C4 CACTUS(F3)	External CD player			✓	✓	✓	✓	✓
C4 CACTUS(F3)	Intrusion alarm siren			✓	✓	✓	✓	✓
C4 CACTUS(F3)	Air conditioning			✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Engine management ECU		V46_52	✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Engine management ECU		VD46	✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		ESP90	✓	✓	✓	○	✓
C4 Quatre(BZ3 CHINE)	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		ABSMK100	✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		ESPMK100	✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C4 Quatre(BZ3 CHINE)	Automatic gearbox or controlled manual gearbox		BVA_AT8	✓	✓	✓	✓	✓

C4 Quatre(BZ3 CHINE)	Automatic gearbox or controlled manual gearbox		MAPS_UDS	✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓
C4 Quatre(BZ3 CHINE)	Instrument panel			✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Parking assistance			✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○
C4 Quatre(BZ3 CHINE)	Electronic key reader			✓	✓	✓	✓	○
C4 Quatre(BZ3 CHINE)	Electric steering lock			✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Hands-free control unit			✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Telematic unit (RTx) or audio-navigation		MRN	✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Service module / Independent telematic		BTA_CN	✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
C4 Quatre(BZ3 CHINE)	Battery charge status unit			✓	✓	✓	✓	○
C4 Quatre(BZ3 CHINE)	Rain and light sensor			✓	✓	✓	✓	○
C4 Quatre(BZ3 CHINE)	Air conditioning			✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Multiplexed control panel		MRN audio-navigation	✓	✓	✓	✓	✓
C4 Quatre(BZ3 CHINE)	Power steering		GEP	✓	✓	✓	✓	✓
C5	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C5	Navigation		Navigation SIEMENS	✓	✓	✓	✓	○
C5	Navigation		Navigation VDO	✓	✓	○	✓	○
C5	Instrument panel			✓	✓	✓	✓	✓
C5	Air conditioning			✓	✓	✓	✓	✓
C5	Radio post-equipment			✓	✓	✓	✓	✓
C5	Car-phone			✓	✓	✓	✓	✓
C5	CD changer / external CD player			✓	✓	✓	✓	✓
C5	Parking assistance			✓	✓	✓	✓	✓
C5	Sun roof			✓	✓	✓	✓	✓
C5	Anti-theft alarm			✓	✓	✓	✓	✓
C5	Controls under the steering wheel		Top of column	✓	✓	✓	✓	○
C5	Driver's door module			✓	✓	✓	✓	○
C5	Passenger's door module			✓	✓	✓	✓	○
C5	Diesel additive function		ADDITIF_FAP	✓	✓	✓	✓	✓
C5	Diesel additive function		ADDG02	✓	✓	✓	✓	✓
C5	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
C5	Display or Autopc or Telematics		Multifunction display SAGEM A	✓	✓	✓	✓	✓
C5	Display or Autopc or Telematics		Multifunction display SAGEM B	✓	✓	✓	✓	✓
C5	Display or Autopc or Telematics		Multifunction display SIEMENS C	✓	✓	✓	✓	✓

C5	Display or Autopc or Telematics		Multifunction display VDO D	✓	✓	✓	✓	✓
C5	Display or Autopc or Telematics		Multifunction display AUTOPC	✓	✓	✓	✓	✓
C5	Display or Autopc or Telematics		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓
C5	Engine management ECU	EDC15C2	2.2 l. 4HX BOSCH EDC15C2	✓	✓	✓	✓	✓
C5	Engine management ECU	HDI_SID801	RHY SIEMENS SID801	✓	✓	✓	✓	✓
C5	Engine management ECU	HDI_SID801	RHY SIEMENS SID801	✓	✓	✓	✓	✓
C5	Engine management ECU	MM6LP	RFN MM6LP	✓	✓	✓	✓	✓
C5	Engine management ECU	ME746	3.0L XFX BOSCH ME746	✓	✓	✓	✓	✓
C5	Engine management ECU	S2000P	1.8L 6FZ SAGEM S2000P	✓	✓	✓	✓	✓
C5	Engine management ECU	S2000P	1.8L 6FZ SAGEM S2000P	✓	✓	✓	✓	✓
C5	Engine management ECU	S2000PM1	6FZ SAGEM S2000PM1	✓	✓	✓	✓	✓
C5	Engine management ECU	S2000PM1	6FZ SAGEM S2000PM1	✓	✓	✓	✓	✓
C5	Engine management ECU	IDE_SIRIUS81	2.0L RLZ SIEMENS Sirius81	○	✓	✓	✓	✓
C5	Engine management ECU	MM48P	2.0L RFN MM48P	✓	✓	✓	✓	✓
C5	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	✓	✓	✓	✓	✓
C5	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP	✓	✓	✓	✓	✓
C5	Suspension		Suspension	✓	✓	✓	✓	✓
C5	Suspension		ECOTECH SUSPENSION	✓	✓	✓	✓	✓
C5	Auto gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
C5	Auto gearbox		Auto gearbox 4HP20	✓	✓	✓	✓	✓
C5	Additional heating			✓	✓	✓	✓	✓
C5	Right-hand headlamp			✓	✓	✓	✓	✓
C5	Left-hand headlamp			✓	✓	✓	✓	✓
C5 R	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C5 R	Instrument panel			✓	✓	✓	✓	✓
C5 R	Radio		Radio post-equipement	✓	✓	✓	✓	✓
C5 R	CD changer / external CD player			✓	✓	✓	✓	✓
C5 R	Parking assistance			✓	✓	✓	✓	✓
C5 R	Air conditioning			✓	✓	✓	✓	✓
C5 R	Lane departure warning system			✓	✓	✓	✓	✓
C5 R	Anti-theft alarm			✓	✓	✓	✓	✓
C5 R	Controls under the steering wheel		Top of column	✓	✓	✓	✓	✓
C5 R	Diesel additive function			✓	✓	✓	✓	✓
C5 R	Driver's door module			✓	✓	✓	✓	✓
C5 R	Passenger's door module			✓	✓	✓	✓	✓
C5 R	Rain sensor/ Brightness			✓	✓	✓	○	○
C5 R	Sun roof			✓	✓	✓	✓	✓
C5 R	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C5 R	Multifunction screen		Multifunction screen SAGEM A	✓	✓	✓	✓	✓

C5 R	Multifunction screen		Multifunction screen SAGEM C	✓	✓	✓	✓	✓
C5 R	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C5 R	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C5 R	Telematic unit (RTx) or audio-navigation		Telematic(RT5)	✓	✓	✓	✓	✓
C5 R	Engine management ECU	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓
C5 R	Engine management ECU	ME747	XFU BOSCH ME747	✓	✓	✓	✓	✓
C5 R	Engine management ECU	S2000PM2	6FZ SAGEM S2000PM2	✓	✓	✓	✓	✓
C5 R	Engine management ECU	EDC16CP39	4HP BOSCH EDC16CP39 DW12BTED4	✓	✓	✓	✓	✓
C5 R	Engine management ECU	EDC15C2	2.2 l. 4HX BOSCH EDC15C2	✓	✓	✓	✓	✓
C5 R	Engine management ECU	EDC16C34_DV6	9HY BOSCH EDC16C34 DV6TED4	✓	✓	✓	✓	✓
C5 R	Engine management ECU	HDI_SID803A	RHR SIEMENS SID803A	✓	✓	✓	✓	✓
C5 R	Engine management ECU	HDI_SID803	RHR SIEMENS SID803	✓	✓	✓	✓	✓
C5 R	Trailer relay unit			✓	✓	✓	✓	✓
C5 R	Engine relay unit			✓	✓	✓	✓	✓
C5 R	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP	✓	✓	✓	✓	✓
C5 R	Suspension		ECOTECH SUSPENSION	✓	✓	✓	✓	✓
C5 R	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
C5 R	Automatic gearbox or controlled manual gearbox		Auto gearbox 4HP20	✓	✓	✓	✓	✓
C5 R	Automatic gearbox or controlled manual gearbox		Auto gearbox AM6	✓	✓	✓	✓	✓
C5 R	Additional heating			✓	✓	✓	✓	✓
C5 R	Power steering		Electric pump unit(GEP)	✓	✓	✓	✓	✓
C5 R	Dynamic headlamp height adjuster			✓	✓	✓	○	✓
C5 R	Under-inflation detection			✓	✓	✓	✓	○
C5 R	Hands-free Kit / Portable Unit			✓	✓	✓	✓	✓
C5 (X7)	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	MM6KP	MM6KP Non Bio Flex	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	ME747	XFU BOSCH ME747	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	MED17_4_EUR05	5FV MED17.4	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	MEV17_4_2	EP6C 5FS MEV17.4.2 EUR05	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	MED17_4_2	5FV MED17.4.2 EUR05	✓	✓	✓	✓	✓

C5 (X7)	Engine management ECU	Petrol engine	MED17_4_4	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	EDC16C34_DV6	9HZ (FAP) BOSCH EDC16C34 DV6TED4-110CV	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	EDC16CP39	AHP BOSCH EDC16CP39 DW12BTED4	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	HD1_SID201	9HZ SIEMENS SID201	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	DELPHI_DCM3.4	RHR DELPHI DCM3.4	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	DCM3.5	RHR DCM3.5	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	EDC17CP11	X8Z-DT20C EDC17CP11	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	HD1_SID807	9HL HD1 SID807	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	HD1_SID807_BR2	9HL - DV6CTED - 111 CV HD1_SID807_BR2	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	DCM35_BR2	RHR-DW10CTED4-163CV	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	DCM34_P	DCM3.4_P RHR	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	Diesel engine	EDC16C3	✓	✓	✓	✓	✓
C5 (X7)	Engine management ECU	Diesel engine	EDC17CP42	✓	✓	✓	✓	✓
C5 (X7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓
C5 (X7)	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓

C5 (X7)	Automatic gearbox or controlled manual gearbox		Auto gearbox AM6	✓	✓	✓	✓	✓
C5 (X7)	Automatic gearbox or controlled manual gearbox		Auto gearbox AM6 Euro5	✓	✓	✓	✓	✓
C5 (X7)	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓
C5 (X7)	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
C5 (X7)	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓
C5 (X7)	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C5 (X7)	Under-inflation detection		DSG	✓	✓	✓	✓	○
C5 (X7)	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○
C5 (X7)	Instrument panel			✓	✓	✓	✓	✓
C5 (X7)	Parking assistance		AIDE_STAT	✓	✓	✓	✓	✓
C5 (X7)	Air conditioning			✓	✓	✓	✓	✓
C5 (X7)	Anti-theft alarm			✓	✓	✓	✓	✓
C5 (X7)	Windscreen wiper		Wiper	✓	✓	✓	✓	✓
C5 (X7)	Seat driver position memory module.		BOITIER_MEMO_CONDUCT	✓	✓	✓	✓	✓
C5 (X7)	Lane departure warning system			✓	✓	✓	✓	✓
C5 (X7)	Controls under the steering wheel			✓	✓	✓	✓	✓
C5 (X7)	Radio amplifier			✓	✓	✓	○	✓
C5 (X7)	Rain sensor/ Brightness			✓	✓	✓	○	○
C5 (X7)	Radio	RD4	AUTORADIO	✓	✓	✓	✓	✓
C5 (X7)	Radio		Radio	✓	✓	✓	✓	✓
C5 (X7)	Radio		RD45	✓	✓	✓	✓	✓
C5 (X7)	Multifunction screen		TYPE 'A' (SEGMENTS) AVEC BUTTONS	✓	✓	✓	✓	✓
C5 (X7)	Multifunction screen		Type 'C' (dot matrix)	✓	✓	✓	✓	✓
C5 (X7)	Telematic unit (RTx) or audio-navigation		RNEG navigation radio	✓	✓	✓	✓	✓
C5 (X7)	Telematic unit (RTx) or audio-navigation		NG4 navigation radio	✓	✓	✓	✓	✓
C5 (X7)	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG	✓	✓	✓	✓	✓
C5 (X7)	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG	✓	✓	✓	✓	✓
C5 (X7)	Telematic unit (RTx) or audio-navigation		BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓
C5 (X7)	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	✓
C5 (X7)	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓
C5 (X7)	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C5 (X7)	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C5 (X7)	Telematic unit (RTx) or audio-navigation		Telematic(RT5)	✓	✓	✓	✓	✓
C5 (X7)	Seat belt not fastened warning lights unit			✓	○	○	○	✓
C5 (X7)	Suspension		ECOTECH SUSPENSION	✓	✓	✓	✓	✓

C5 (X7)	Suspension System Control ECU			✓	✓	✓	✓	✓
C5 (X7)	Additional heating			✓	✓	✓	✓	✓
C5 (X7)	Trailer relay unit			✓	✓	✓	✓	✓
C5 (X7)	Engine relay unit			✓	✓	✓	✓	✓
C5 (X7)	Power steering		Electric pump unit (GEP)	✓	✓	✓	✓	✓
C5 (X7)	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
C5 (X7)	Electric secondary brake			✓	✓	✓	✓	✓
C5 (X7)	Hands-free Kit / Portable Unit		KML	✓	✓	✓	✓	✓
C5 (X7)	Hands-free Kit / Portable Unit		BOITIER_NOMADE	✓	✓	✓	✓	✓
C5 (X7)	driver's door module			✓	✓	✓	✓	✓
C5 (X7)	Battery charge status unit		BECE	✓	✓	✓	✓	○
C5 (X7)	Battery charge status unit		BECE_GEN2	✓	✓	✓	✓	○
C5 (X7)	Battery charge status unit		Stop and Start battery charge status unit	✓	✓	✓	✓	○
C5 (X7)	CD changer / external CD player			✓	✓	✓	✓	✓
C5 (X7)	Motorised Boot ECU			✓	✓	✓	✓	✓
C5 (X7)	Service module / Independent telematic		MD_SERV	✓	✓	✓	✓	✓
C5 (X7)	Service module / Independent telematic	BTA	Telematics unit independent	✓	✓	✓	✓	✓
C5 (X7)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
C5 (X7)	Active damper electronic unit			✓	✓	✓	✓	✓
C5 (X7)	Voltage retaining device		DMTC	✓	○	○	○	○
C5 (X7)	Voltage retaining device		DMTR	✓	✓	✓	○	○
C5 (X7)	High frequency receiver			✓	✓	✓	✓	○
C5(new)	Built-in systems interface			✓	✓	✓	✓	✓
C5(new)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	✓
C5(new)	Engine management ECU		MED17_4_4_EPS	✓	✓	✓	✓	✓
C5(new)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C5(new)	UNDER-INFLATION DETECTION			✓	✓	✓	✓	○
C5(new)	Air conditioning			✓	✓	✓	✓	✓
C5(new)	Power steering			✓	✓	✓	✓	✓
C5(new)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
C5(new)	Airbags and pretensioners ECU			✓	✓	✓	✓	○
C5(new)	Service module / Independent telematic			✓	✓	✓	✓	✓
C5(new)	Parking assistance			✓	✓	✓	✓	✓
C5(new)	Multifunction video recording camera			✓	✓	✓	✓	○
C5(new)	Controls under the steering wheel			✓	✓	✓	✓	✓

C5(new)	Multifunction control panel			✓	✓	✓	✓	✓
C5(new)	Battery charge status control unit			✓	✓	✓	✓	○
C5(new)	Electric steering lock			✓	✓	✓	✓	✓
C5(new)	Voltage maintaining device			✓	✓	✓	○	○
C5(new)	Panoramic visual assistance ECU			✓	✓	✓	✓	✓
C5(new)	Touch screen			✓	✓	✓	✓	✓
C5(new)	Driver's door module			✓	✓	✓	✓	✓
C5(new)	Telematic unit (RTx) or audio-navigation			✓	✓	✓	✓	✓
C5(new)	Rain and brightness sensor			✓	✓	✓	✓	○
C5(new)	Audio amplifier			✓	✓	✓	○	✓
C5(new)	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
C5(new)	Front left seat heated pads and ventilation regulation ECU			✓	✓	○	✓	✓
C5(new)	Front right seat heated pads and ventilation regulation ECU			✓	✓	○	✓	✓
C5(new)	Automatic or piloted manual gearbox			✓	✓	✓	✓	✓
C5(new)	Control of the telematic unit			✓	✓	○	○	○
C5(new)	Seat driver position memory module.			✓	✓	✓	✓	✓
C5(new)	Instrument panel		CIROCCO	✓	✓	✓	✓	✓
C5(new)	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	✓
C5(new)	Left hand front wiper motor			✓	✓	✓	✓	✓
C5(new)	Right hand front wiper motor			✓	✓	✓	✓	✓
C5 Aircross	Built-in systems interface			✓	✓	✓	✓	✓
C5 Aircross	Engine management ECU		VD46	✓	✓	✓	✓	✓
C5 Aircross	Engine management ECU		MED17_4_4	✓	✓	✓	✓	✓
C5 Aircross	Engine management ECU		MED17_4_4_EP8	✓	✓	✓	✓	✓
C5 Aircross	Engine management ECU		MEVD17_4_4	✓	✓	✓	✓	✓
C5 Aircross	Engine management ECU		CMM_DCM71	✓	✓	✓	✓	○
C5 Aircross	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	✓
C5 Aircross	Engine management ECU		CMM_VD56	✓	✓	✓	✓	✓
C5 Aircross	Engine management ECU		CMM_MG1CS042	✓	✓	✓	✓	✓
C5 Aircross	Voltage maintaining device		DMTR_DTC3B	✓	✓	✓	○	○
C5 Aircross	Voltage maintaining device		DMTC	✓	○	○	○	○
C5 Aircross	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	✓
C5 Aircross	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	✓
C5 Aircross	Sequential gear lever			✓	✓	✓	✓	✓
C5 Aircross	Power steering			✓	✓	✓	✓	○
C5 Aircross	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C5 Aircross	Traction control mode selector			✓	✓	○	✓	✓

C5 Aircross	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
C5 Aircross	Battery charge status control unit			✓	✓	✓	✓	○
C5 Aircross	Electric steering lock			✓	✓	✓	✓	✓
C5 Aircross	Instrument panel		CIROCCO	✓	✓	✓	✓	✓
C5 Aircross	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	✓
C5 Aircross	Controls under the steering wheel			✓	✓	✓	✓	✓
C5 Aircross	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
C5 Aircross	Automatic gearbox electric control ECU			✓	✓	✓	✓	✓
C5 Aircross	Multifunction control panel			✓	✓	✓	✓	✓
C5 Aircross	Seat belt not fastened warning lights unit			✓	○	○	○	✓
C5 Aircross	Airbags and pretensioners ECU			✓	✓	✓	✓	○
C5 Aircross	Windscreen wiper			✓	✓	✓	✓	✓
C5 Aircross	Rain and brightness sensor			✓	✓	✓	✓	○
C5 Aircross	Panoramic visual assistance ECU			✓	✓	✓	✓	✓
C5 Aircross	Multifunction video camera (CMF)		CVM_2	✓	✓	✓	✓	✓
C5 Aircross	Multifunction video camera (CMF)		CVM_3	✓	✓	✓	✓	✓
C5 Aircross	Vehicle Distance Assistance		ARTIV_UDS	✓	✓	✓	✓	✓
C5 Aircross	Vehicle Distance Assistance		RADAR_AV_4	✓	✓	✓	✓	✓
C5 Aircross	Parking assistance			✓	✓	✓	✓	✓
C5 Aircross	Touch screen			✓	✓	✓	✓	✓
C5 Aircross	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	✓
C5 Aircross	Service module / Independent telematic		BTA_CN	✓	✓	✓	✓	✓
C5 Aircross	Control of the telematic unit			✓	✓	○	○	○
C5 Aircross	Driver's door module		PDPC	✓	✓	✓	✓	✓
C5 Aircross	Motorised Boot Unit			✓	✓	✓	✓	✓
C5 Aircross	Hands full access ECU, right-hand side or rear			✓	✓	○	○	○
C5 Aircross	Air conditioning			✓	✓	✓	✓	✓
C5 Aircross	Front left seat heated pads and ventilation regulation ECU			✓	✓	○	✓	✓
C5 Aircross	Front right seat heated pads and ventilation regulation ECU			✓	✓	○	✓	✓
C5 Aircross	Driver's seat pneumatic functions ECU			✓	✓	○	✓	✓
C5 Aircross	Passenger's seat pneumatic functions ECU			✓	✓	○	✓	✓
C5 Aircross	Driver's seat comfort ECU			✓	✓	✓	✓	✓
C6	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C6	Engine management ECU	ME747	XFU BOSCH ME747	✓	✓	✓	✓	✓

C6	Engine management ECU	EDC16CP39	4HP BOSCH EDC16CP39 DW12BTED4	✓	✓	✓	✓	✓
C6	Engine management ECU	HDI_SID201	UHZ SIEMENS SID201	✓	✓	✓	✓	✓
C6	Engine management ECU	EDC17CP11	X8Z-DT20C EDC17CP11	✓	✓	✓	✓	✓
C6	Automatic gearbox or controlled manual gearbox		Auto gearbox AM6	✓	✓	✓	✓	✓
C6	Automatic gearbox or controlled manual gearbox		BVA AM6 Euro5	✓	✓	✓	✓	✓
C6	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓
C6	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP_EBC_440_K	✓	✓	✓	✓	✓
C6	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP_EBC_440_CAN	✓	✓	✓	✓	✓
C6	Parking assistance		AIDE_STAT	✓	✓	✓	✓	✓
C6	Air bags and pre- tensioners control unit			✓	✓	✓	✓	○
C6	Rear air conditioning table			✓	✓	✓	✓	✓
C6	Lane departure warning system			✓	✓	✓	✓	✓
C6	Anti-theft alarm			✓	✓	✓	✓	✓
C6	Windscreen wiper		Wiper	✓	✓	✓	✓	✓
C6	Windscreen wiper		Windscreen wiper	✓	✓	✓	○	○
C6	Controls under the steering wheel		Top of column	✓	✓	✓	✓	✓
C6	Driver's seat panel			✓	✓	✓	✓	✓
C6	Passenger's seat panel			✓	✓	✓	✓	✓
C6	Driver's door module			✓	✓	✓	✓	✓
C6	Passenger's door module			✓	✓	✓	✓	✓
C6	Rain sensor/ Brightness			✓	✓	✓	○	○
C6	Seat driver position memory module.			✓	✓	✓	✓	✓
C6	Passenger's seat memorizing unit			✓	✓	✓	○	✓
C6	Rear seat memorising unit			✓	✓	✓	✓	✓
C6	Air conditioning		CLIMATISATION	✓	✓	✓	✓	✓
C6	Multifunction screen		TYPE 'A' (SEGMENTS) AVEC BUTTONS	✓	✓	✓	✓	✓
C6	Multifunction screen		Type 'C' (dot matrix)	✓	✓	✓	✓	✓
C6	Telematic unit (RTx) or audio-navigation		BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓
C6	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C6	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C6	Telematic unit (RTx) or audio-navigation		Telematic(RT5)	✓	✓	✓	✓	✓
C6	Instrument panel			✓	✓	✓	✓	✓
C6	CD changer / external CD player			✓	✓	✓	✓	✓

C6	Electronically managed suspension		ECOTECH SUSPENSION	✓	✓	✓	✓	✓
C6	Variable damping			✓	✓	✓	✓	✓
C6	Radio		Radio post-equipment	✓	✓	✓	✓	✓
C6	Pedestrian impact detection			✓	✓	✓	✓	○
C6	Trailer relay unit			✓	✓	✓	✓	✓
C6	Engine relay unit			✓	✓	✓	✓	✓
C6	Boost relay unit			✓	✓	✓	✓	✓
C6	Moving panel deflector			✓	✓	✓	✓	✓
C6	Additional heating			✓	✓	✓	✓	✓
C6	Power steering		Electric pump unit (GEP)	✓	✓	✓	✓	✓
C6	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
C6	Headlamp beam corrector		LH headlamp beam corrector	✓	✓	✓	✓	✓
C6	Headlamp beam corrector		RH headlamp beam corrector	✓	✓	✓	✓	○
C6	Under-inflation detection			✓	✓	✓	✓	○
C6	Electric secondary brake			✓	✓	✓	✓	✓
C6	Hands-free Kit / Portable Unit		KML	✓	✓	✓	✓	✓
C6	Hands-free Kit / Portable Unit	BOITIER_NOMADE	Mobile Housing	✓	✓	✓	✓	✓
C6	Battery charge status unit		Battery charge status unit	✓	✓	✓	✓	○
C6	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○
C6	Battery charge status unit		Stop and Start battery charge status unit	✓	✓	✓	✓	○
C6	High Head Vision			✓	✓	✓	✓	✓
C6	Right-hand dynamic headlamp height			✓	✓	✓	✓	○
C6	Left-hand dynamic headlamp height			✓	✓	✓	✓	○
C6	High frequency receiver			✓	✓	✓	✓	○
C6 CHINA	Built-in systems interface			✓	✓	✓	✓	✓
C6 CHINA	Engine management ECU		MED17_4_4	✓	✓	✓	✓	✓
C6 CHINA	Engine management ECU		MEVD17_4_4	✓	✓	✓	✓	✓
C6 CHINA	Engine management ECU		MED17_4_4_EP8	✓	✓	✓	✓	✓
C6 CHINA	Engine management ECU		CM1 MG1CS042	✓	✓	✓	✓	✓
C6 CHINA	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C6 CHINA	UNDER-INFLATION DETECTION			✓	✓	✓	✓	○
C6 CHINA	Automatic or piloted manual gearbox		BVA AM6 AT6 UDS	✓	✓	✓	✓	✓
C6 CHINA	Automatic or piloted manual gearbox		BVA AXN8	✓	✓	✓	✓	✓
C6 CHINA	Air conditioning			✓	✓	✓	✓	✓
C6 CHINA	Multifunction video camera (CMF)			✓	✓	✓	✓	✓
C6 CHINA	Driver's door module			✓	✓	✓	✓	✓
C6 CHINA	Instrument panel		CIROCCO	✓	✓	✓	✓	✓

C6 CHINA	Instrument panel		COMBINE_UDS	√	√	√	√	√
C6 CHINA	Panoramic visual assistance ECU			√	√	√	√	√
C6 CHINA	Controls under the steering wheel			√	√	√	√	√
C6 CHINA	Controls on the steering wheel / Integral controls			√	√	√	√	○
C6 CHINA	Vehicle Distance Assistance			√	√	√	√	√
C6 CHINA	Voltage maintaining device			√	√	√	○	○
C6 CHINA	Front left seat heated pads and ventilation regulation ECU			√	√	○	√	√
C6 CHINA	Front right seat heated pads and ventilation regulation ECU			√	√	○	√	√
C6 CHINA	Electric steering lock			√	√	√	√	√
C6 CHINA	Engine wiring housing			√	√	√	√	√
C6 CHINA	Service module / Independent telematic			√	√	√	√	√
C6 CHINA	Airbags and pretensioners ECU			√	√	√	√	○
C6 CHINA	Audio amplifier			√	√	√	○	√
C6 CHINA	Rain and brightness sensor			√	√	√	√	○
C6 CHINA	Multifunction control panel			√	√	√	√	√
C6 CHINA	Parking assistance			√	√	√	√	√
C6 CHINA	Audio-navigation/telematic unit/connected audio			√	√	√	√	√
C6 CHINA	Touch screen			√	√	√	√	√
C6 CHINA	Driver's seat comfort ECU			√	√	√	√	√
C6 CHINA	Power steering			√	√	√	√	√
C6 CHINA	Battery charge status control unit			√	√	√	√	○
C6 CHINA	Supplies protection and management unit			√	√	√	√	○
C6 CHINA	Left hand front wiper motor			√	√	√	√	√
C6 CHINA	Right hand front wiper motor			√	√	√	√	√
C6 CHINA	Control of the telematic unit			√	√	○	○	○
C8	Built-in Systems Interface (BSI)			√	√	√	√	√
C8	Instrument panel			√	√	√	√	√
C8	Radio or telematic receiver command		Radio post-equipment	√	√	√	√	√
C8	Radio or telematic receiver command		Telematic receiver command	√	√	○	√	○
C8	CD changer / external CD player			√	√	√	√	√
C8	Parking assistance			√	√	√	√	√
C8	Air conditioning			√	√	√	√	√
C8	LEDs and odometer ECU			√	√	√	√	√
C8	Memory unit			√	√	√	√	√
C8	Rear sunroof			√	√	√	√	√
C8	Front sunroof			√	√	√	√	√

C8	Middle sunroof			✓	✓	✓	✓	✓
C8	Anti-theft alarm			✓	✓	✓	✓	✓
C8	Controls under the steering wheel		Top of column	✓	✓	✓	✓	○
C8	Sliding side doors module			✓	✓	✓	✓	✓
C8	Driver's door module			✓	✓	✓	✓	○
C8	Passenger's door module			✓	✓	✓	✓	○
C8	Diesel additive function		ADDITIF_FAP	✓	✓	✓	✓	✓
C8	Diesel additive function		ADDGO2	✓	✓	✓	✓	✓
C8	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C8	Display or Telematics		Multifunction display SAGEM B	✓	✓	✓	✓	✓
C8	Display or Telematics		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓
C8	Engine management ECU	EDC15C2	2.2 l. 4HW BOSCH EDC15C2	✓	✓	✓	✓	✓
C8	Engine management ECU	MM6LP	RFN MM6LP	✓	✓	✓	✓	✓
C8	Engine management ECU	ME746	3.0L XFW BOSCH ME746	✓	✓	✓	✓	✓
C8	Engine management ECU	MM48P	2.0L RFN MM48P	✓	✓	✓	✓	✓
C8	Engine management ECU	MM4MP2	3FZ MM4MP2	✓	✓	✓	✓	✓
C8	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	✓	✓	✓	✓	○
C8	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP	✓	✓	✓	✓	✓
C8	Auto gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
C8	Auto gearbox		Auto gearbox 4HP20	✓	✓	✓	✓	✓
C8	Additional heating			✓	✓	✓	✓	✓
C8	Right-hand headlamp			✓	✓	✓	✓	✓
C8	Left-hand headlamp			✓	✓	✓	✓	✓
C8 CAN	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C8 CAN	Engine management ECU	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓
C8 CAN	Engine management ECU	EDC16CP39	4HP BOSCH EDC16CP39 DW12BTED4	✓	✓	✓	✓	✓
C8 CAN	Engine management ECU	EDC15C2	2.2 l. 4HW BOSCH EDC15C2	✓	✓	✓	✓	✓
C8 CAN	Engine management ECU	HDI_SID803A	RHR SIEMENS SID803A	✓	✓	✓	✓	✓
C8 CAN	Engine management ECU	DCM3.5	RHH DCM3.5	✓	✓	✓	✓	✓
C8 CAN	Engine management ECU	DCM35_BR2	RHD-DW10CB-136CV	✓	✓	✓	✓	✓
C8 CAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓
C8 CAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_BOSCH	✓	✓	✓	✓	✓
C8 CAN	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
C8 CAN	Automatic gearbox or controlled manual gearbox		Auto gearbox AM6	✓	✓	✓	✓	✓

C8 CAN	Automatic gearbox or controlled manual gearbox		BVA AM6 Euro5	✓	✓	✓	✓	✓
C8 CAN	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	○
C8 CAN	Automatic gearbox or controlled manual gearbox		BVA_AL4	✓	✓	✓	✓	○
C8 CAN	Air bags and pre-tensioners control unit		SAC_TENIC	✓	✓	✓	✓	○
C8 CAN	Air conditioning			✓	✓	✓	✓	✓
C8 CAN	LEDs and odometer ECU			✓	✓	✓	✓	✓
C8 CAN	Anti-theft alarm			✓	✓	✓	✓	✓
C8 CAN	Controls under the steering wheel		Top of column	✓	✓	✓	✓	✓
C8 CAN	Diesel additive function			✓	✓	✓	✓	✓
C8 CAN	Sliding side doors module			✓	✓	✓	✓	✓
C8 CAN	Driver's door module			✓	✓	✓	✓	✓
C8 CAN	Passenger's door module			✓	✓	✓	✓	✓
C8 CAN	Rain sensor/ Brightness			✓	✓	✓	○	○
C8 CAN	Front sunroof			✓	✓	✓	✓	✓
C8 CAN	Rear sunroof			✓	✓	✓	✓	✓
C8 CAN	Central sunroof			✓	✓	✓	✓	✓
C8 CAN	Seat driver position memory module.			✓	✓	✓	✓	✓
C8 CAN	Radio		Radio post-equipment	✓	✓	✓	✓	✓
C8 CAN	Radio		RD45	✓	✓	✓	✓	✓
C8 CAN	Control of the telematic unit			✓	○	○	✓	○
C8 CAN	Multifunction screen		Multifunction display SIEMENS C	✓	✓	✓	✓	✓
C8 CAN	Multifunction screen		TYPE 'A' (SEGMENTS) AVEC BUTTONS	✓	✓	✓	✓	✓
C8 CAN	Telematic unit (RTx) or audio-navigation		RNEG navigation radio	✓	✓	✓	✓	✓
C8 CAN	Telematic unit (RTx) or audio-navigation		BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓
C8 CAN	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	✓
C8 CAN	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C8 CAN	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C8 CAN	Telematic unit (RTx) or audio-navigation		Telematic(RT5)	✓	✓	✓	✓	✓
C8 CAN	Instrument panel			✓	✓	✓	✓	✓
C8 CAN	Trailer relay unit			✓	✓	✓	✓	✓
C8 CAN	Engine relay unit			✓	✓	✓	✓	✓
C8 CAN	CD changer / external CD player			✓	✓	✓	✓	✓
C8 CAN	Parking assistance			✓	✓	✓	✓	✓
C8 CAN	Additional heating			✓	✓	✓	✓	✓
C8 CAN	Passenger seat memorisation unit			✓	✓	✓	✓	○
C8 CAN	Right-hand dynamic headlamp height			✓	✓	✓	✓	✓

C8 CAN	Left-hand dynamic headlamp height			✓	✓	✓	✓	✓
C8 CAN	Under-inflation detection			✓	✓	✓	✓	○
C8 CAN	Hands-free Kit / Portable Unit		KML	✓	✓	✓	✓	✓
C8 CAN	Hands-free Kit / Portable Unit		BOITIER_NOMADE	✓	✓	✓	✓	✓
C8 CAN	Power steering			✓	✓	✓	✓	✓
C15	Engine	Diesel engine	1.9 L VJY LUCAS DCN2	✓	✓	✓	✓	✓
C-CROSSER	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C-CROSSER	Engine management ECU	MIVEC	SFZ MIVEC 2.4 L	✓	✓	✓	✓	✓
C-CROSSER	Engine management ECU	MIVEC	AFZ 4B11 MIVEC EURO4	✓	✓	✓	✓	✓
C-CROSSER	Engine management ECU	MIVEC	SFY 4B12 MIVEC EURO5	✓	✓	✓	✓	✓
C-CROSSER	Engine management ECU	EDC16CP39	AHN BOSCH EDC16CP39	✓	✓	✓	✓	✓
C-CROSSER	Engine management ECU	Diesel engine	AHK BOSCH EDC16CP39 EURO5	✓	✓	✓	✓	✓
C-CROSSER	Engine management ECU	Diesel engine	EDC16CP39_E5	✓	✓	✓	○	✓
C-CROSSER	Rear final drive piloted clutch			✓	✓	✓	✓	✓
C-CROSSER	Automatic gearbox or controlled manual gearbox		Gearbox CVT	✓	✓	✓	✓	○
C-CROSSER	Automatic gearbox or controlled manual gearbox		BOITE_GETRAG	✓	✓	✓	✓	✓
C-CROSSER	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS	✓	✓	✓	✓	✓
C-CROSSER	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP	✓	✓	✓	✓	✓
C-CROSSER	Steering wheel angle sensor			✓	✓	✓	○	○
C-CROSSER	Air bags and pre-tensioners control unit			✓	✓	✓	✓	✓
C-CROSSER	Engine immobiliser / Hands-free control unit			✓	✓	✓	✓	○
C-CROSSER	Instrument panel			✓	✓	✓	✓	✓
C-CROSSER	Air conditioning			✓	✓	✓	✓	✓
C-CROSSER	Radio		Radio post-equipment	✓	✓	✓	✓	✓
C-CROSSER	Hands-free Kit / Portable Unit			✓	✓	✓	✓	✓
C-CROSSER	Navigation			✓	✓	✓	○	○
C-CROSSER	driver's door module			✓	✓	✓	✓	○
C-CROSSER	Passenger's door switch panel			✓	✓	✓	✓	○
C-CROSSER	Rear LH door switch panel			✓	✓	✓	✓	○
C-CROSSER	Rear RH door switch panel			✓	✓	✓	✓	○
C-CROSSER	Headlamp beam corrector			✓	✓	✓	✓	✓
C-CROSSER	Sun roof			✓	✓	✓	✓	○
C-CROSSER	Gear lever		LEVIER_GETRAG	✓	✓	✓	✓	✓
C-CROSSER	Rain and light sensor			✓	✓	✓	✓	○
C-CROSSER	Parking assistance			✓	✓	✓	✓	○

C-ELYSEE 4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C-ELYSEE 4	Automatic gearbox or controlled manual gearbox			✓	✓	✓	✓	✓
C-ELYSEE 4	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C-ELYSEE 4	Engine management ECU		1.6 l. NFU BOSCH ME744	✓	✓	✓	✓	✓
C-ELYSEE 4	Engine management ECU		NFU J35	✓	✓	✓	✓	✓
C-ELYSEE 4	Transponder			✓	✓	✓	✓	○
C-ELYSEE 4	Central locking control unit			✓	✓	✓	✓	○
C-ELYSEE 5	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
C-ELYSEE 5	Automatic gearbox or controlled manual gearbox			✓	✓	✓	✓	✓
C-ELYSEE 5	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C-ELYSEE 5	Engine management ECU		1.6 l. NFU BOSCH ME744	✓	✓	✓	✓	✓
C-ELYSEE 5	Engine management ECU		NFU J35	✓	✓	✓	✓	✓
C-ELYSEE 5	Transponder			✓	✓	✓	✓	○
C-ELYSEE 5	Central locking control unit			✓	✓	✓	✓	○
C-TRIOMPHE	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C-TRIOMPHE	Instrument panel			✓	✓	✓	✓	✓
C-TRIOMPHE	Radio			✓	✓	✓	✓	✓
C-TRIOMPHE	CD changer / external CD player			✓	✓	✓	✓	✓
C-TRIOMPHE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓
C-TRIOMPHE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_BOSCH	✓	✓	✓	✓	✓
C-TRIOMPHE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
C-TRIOMPHE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_BOSCH	✓	✓	✓	✓	✓
C-TRIOMPHE	Parking assistance			✓	✓	✓	✓	✓
C-TRIOMPHE	Air conditioning			✓	✓	✓	✓	✓
C-TRIOMPHE	Anti-theft alarm			✓	✓	✓	✓	✓
C-TRIOMPHE	Controls under the steering wheel			✓	✓	✓	✓	✓
C-TRIOMPHE	Rain sensor/ Brightness			✓	✓	✓	○	○
C-TRIOMPHE	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C-TRIOMPHE	Multifunction screen			✓	✓	✓	✓	✓
C-TRIOMPHE	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C-TRIOMPHE	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C-TRIOMPHE	Engine management ECU	Petrol engine	RFJ M06LPB	✓	✓	✓	✓	✓

C-TRIOMPHE	Automatic gearbox or controlled manual gearbox			✓	✓	✓	✓	✓
C-TRIOMPHE	Trailer relay unit			✓	✓	✓	✓	✓
C-TRIOMPHE	Engine relay unit			✓	✓	✓	✓	✓
C-TRIOMPHE	Power steering			✓	✓	✓	✓	○
C-TRIOMPHE	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
C-TRIOMPHE	Hands-free Kit / Portable Unit			✓	✓	✓	✓	✓
C-TRIOMPHE	Driver's door module			✓	✓	✓	✓	✓
C-TRIOMPHE	Passenger's door module			✓	✓	✓	✓	✓
C-QUATRE 4	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C-QUATRE 4	Instrument panel			✓	✓	✓	✓	✓
C-QUATRE 4	Radio			✓	✓	✓	✓	✓
C-QUATRE 4	CD changer / external CD player			✓	✓	✓	✓	✓
C-QUATRE 4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓
C-QUATRE 4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
C-QUATRE 4	Parking assistance			✓	✓	✓	✓	✓
C-QUATRE 4	Air conditioning			✓	✓	✓	✓	✓
C-QUATRE 4	Anti-theft alarm			✓	✓	✓	✓	✓
C-QUATRE 4	Controls under the steering wheel			✓	✓	✓	✓	✓
C-QUATRE 4	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C-QUATRE 4	Multifunction screen			✓	✓	✓	✓	✓
C-QUATRE 4	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C-QUATRE 4	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C-QUATRE 4	Engine management ECU	Petrol engine	RFJ MM6LPB	✓	✓	✓	✓	✓
C-QUATRE 4	Engine management ECU	MM6KP	MM6KP Non Bio Flex	✓	✓	✓	✓	✓
C-QUATRE 4	Engine management ECU	Petrol engine	N6A BOSCH ME745	✓	✓	✓	✓	✓
C-QUATRE 4	Automatic gearbox or controlled manual gearbox			✓	✓	✓	✓	✓
C-QUATRE 4	Trailer relay unit			✓	✓	✓	✓	✓
C-QUATRE 4	Engine relay unit			✓	✓	✓	✓	✓
C-QUATRE 4	Power steering			✓	✓	✓	✓	○
C-QUATRE 4	Hands-free Kit / Portable Unit			✓	✓	✓	✓	✓
C-QUATRE 4	Driver's door module			✓	✓	✓	✓	✓
C-QUATRE 4	Passenger's door module			✓	✓	✓	✓	✓
C-QUATRE 5	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C-QUATRE 5	Instrument panel			✓	✓	✓	✓	✓
C-QUATRE 5	Radio			✓	✓	✓	✓	✓
C-QUATRE 5	CD changer / external CD player			✓	✓	✓	✓	✓

C-QUATRE 5	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓
C-QUATRE 5	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
C-QUATRE 5	Parking assistance			✓	✓	✓	✓	✓
C-QUATRE 5	Air conditioning			✓	✓	✓	✓	✓
C-QUATRE 5	Anti-theft alarm			✓	✓	✓	✓	✓
C-QUATRE 5	Controls under the steering wheel			✓	✓	✓	✓	✓
C-QUATRE 5	Rain sensor/ Brightness			✓	✓	✓	○	○
C-QUATRE 5	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C-QUATRE 5	Multifunction screen			✓	✓	✓	✓	✓
C-QUATRE 5	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
C-QUATRE 5	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
C-QUATRE 5	Engine management ECU	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓
C-QUATRE 5	Engine management ECU	ME745	N6A BOSCH ME745	✓	✓	✓	✓	✓
C-QUATRE 5	Automatic gearbox or controlled manual gearbox			✓	✓	✓	✓	✓
C-QUATRE 5	Trailer relay unit			✓	✓	✓	✓	✓
C-QUATRE 5	Engine relay unit			✓	✓	✓	✓	✓
C-QUATRE 5	Power steering			✓	✓	✓	✓	○
C-QUATRE 5	Hands-free Kit / Portable Unit			✓	✓	✓	✓	✓
C-QUATRE 5	Driver's door module			✓	✓	✓	✓	✓
C-QUATRE 5	Passenger's door module			✓	✓	✓	✓	✓
C-ELYSEE	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
C-ELYSEE	Engine management ECU	EDC17C10_BR2	9HP-DV6DTEd	✓	✓	✓	✓	✓
C-ELYSEE	Engine management ECU		V46_21	✓	✓	✓	✓	✓
C-ELYSEE	Engine management ECU		V46	✓	✓	✓	✓	✓
C-ELYSEE	Engine management ECU		ME745_EC5	✓	✓	✓	✓	✓
C-ELYSEE	Engine management ECU		MED17_4_4	✓	✓	✓	✓	✓
C-ELYSEE	Engine management ECU		EDC17C60	✓	✓	✓	✓	○
C-ELYSEE	Engine management ECU		V46_52	✓	✓	✓	✓	✓
C-ELYSEE	Engine management ECU		VD46	✓	✓	✓	✓	✓
C-ELYSEE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK100	✓	✓	✓	✓	✓
C-ELYSEE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK100	✓	✓	✓	✓	✓
C-ELYSEE	Automatic gearbox or controlled manual gearbox		BVA_AT8	✓	✓	✓	✓	✓

C-ELYSEE	Automatic gearbox or controlled manual gearbox		MAPS_UDS	✓	✓	✓	✓	✓
C-ELYSEE	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓
C-ELYSEE	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
C-ELYSEE	Multifunction screen		EMF_C	✓	✓	✓	○	✓
C-ELYSEE	Controls under the steering wheel		HDC	✓	✓	✓	✓	✓
C-ELYSEE	Power steering		DAE	✓	✓	✓	✓	○
C-ELYSEE	Power steering		DAE_A515	✓	✓	✓	✓	✓
C-ELYSEE	Radio		AUTORADIO	✓	✓	✓	✓	✓
C-ELYSEE	Radio		RD45	✓	✓	✓	✓	✓
C-ELYSEE	Parking assistance			✓	✓	✓	✓	✓
C-ELYSEE	Siren			✓	✓	✓	✓	✓
C-ELYSEE	Instrument panel			✓	✓	✓	✓	✓
C-ELYSEE	Trailer relay unit			✓	✓	✓	✓	✓
C-ELYSEE	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓
C-ELYSEE	Diesel additive pump		PADDGO_T1_E6	✓	✓	✓	✓	✓
C-ELYSEE	Electric steering lock			✓	✓	✓	✓	✓
C-ELYSEE	Electronic key reader			✓	✓	✓	✓	○
C-ELYSEE	Hands-free control unit			✓	✓	✓	✓	✓
C-ELYSEE	Multiplexed control panel		MRN audio-navigation	✓	✓	✓	✓	✓
C-ELYSEE	Telematic unit (RTx) or audio-navigation			✓	✓	✓	✓	✓
C-ELYSEE	Voltage retaining device		DMTR	✓	✓	✓	○	○
DS3	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
DS3	Engine management ECU	MEV17_4_EURO5	8FR MEV17.4	✓	✓	✓	✓	✓
DS3	Engine management ECU	MEV17_4_2	EP6C 5FS MEV17_4_2	✓	✓	✓	✓	✓
DS3	Engine management ECU	MED17.4	5FR MED17.4	✓	✓	✓	○	✓
DS3	Engine management ECU	MED17_4_2	5FV MED17.4.2 EURO5	✓	✓	✓	✓	✓
DS3	Engine management ECU	Petrol engine	V46	✓	✓	✓	✓	✓
DS3	Engine management ECU	Petrol engine	MED17_4_EURO4	✓	✓	✓	✓	✓
DS3	Engine management ECU	Petrol engine	MED17_4_EURO5	✓	✓	✓	✓	○
DS3	Engine management ECU	Petrol engine	VD46	✓	✓	✓	✓	○
DS3	Engine management ECU	Petrol engine	MED17_4_4	✓	✓	✓	✓	✓
DS3	Engine management ECU	EDC17C10	9HP BOSCH EDC17C10 DV6DTE4 -90 CV	✓	✓	✓	✓	✓
DS3	Engine management ECU	HD1_SID807	9HR HD1 SID807	✓	✓	✓	✓	✓
DS3	Engine management ECU	EDC17C10_BR2	9HP EDC 17 C10_BR2 - DV6DTE4 - 92 CV	✓	✓	✓	✓	✓
DS3	Engine management ECU	HD1_SID807_BR2	HD1 SID807_BR2 9HR	✓	✓	✓	✓	✓
DS3	Engine management ECU	Diesel engine	EDC17C60	✓	✓	✓	✓	✓
DS3	Engine management ECU	EDC16C3	9HX-DV6ATED4-90CV	✓	✓	✓	✓	✓
DS3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP MK60_0	✓	✓	✓	✓	✓

DS3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK70_1	✓	✓	✓	✓	✓
DS3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK100	✓	✓	✓	✓	✓
DS3	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
DS3	Automatic gearbox or controlled manual gearbox	BYMP	MAP sequential gearbox	✓	✓	✓	✓	✓
DS3	Automatic gearbox or controlled manual gearbox		MAPS_UDS	✓	✓	✓	✓	✓
DS3	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
DS3	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓
DS3	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	RNEG navigation radio	✓	✓	✓	✓	✓
DS3	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG_C	✓	✓	✓	✓	✓
DS3	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	✓
DS3	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓
DS3	Trailer relay unit			✓	✓	✓	✓	✓
DS3	DAE_A515			✓	✓	✓	✓	✓
DS3	Air conditioning			✓	✓	✓	✓	✓
DS3	Anti-theft alarm			✓	✓	✓	✓	✓
DS3	Hands-free Kit / Portable Unit		Mobile Housing	✓	✓	✓	✓	✓
DS3	Radio	RD4	Radio post-equipment	✓	✓	✓	✓	✓
DS3	Radio		RD45	✓	✓	✓	✓	○
DS3	Engine relay unit			✓	✓	✓	✓	✓
DS3	Air bags and pre-tensioners control unit		SAC_AUTOLIV	✓	✓	✓	✓	○
DS3	Rain sensor/ Brightness			✓	✓	✓	○	○
DS3	Controls under the steering wheel			✓	✓	✓	✓	✓
DS3	Parking assistance		AIDE_STAT	✓	✓	✓	✓	○
DS3	High frequency receiver			✓	✓	✓	✓	○
DS3	Seat belt not fastened warning lights unit			✓	○	○	○	✓
DS3	Multifunction screen(EMF)		Type 'A' (segments)	✓	✓	✓	✓	✓
DS3	Multifunction screen(EMF)		Type 'C' (dot matrix)	✓	✓	✓	✓	✓
DS3	Battery charge status unit		BECB(2)	✓	✓	✓	✓	○
DS3	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○
DS3	Battery charge status unit	BECB(1)	BECB(1)	✓	✓	✓	✓	○
DS3	Instrument panel			✓	✓	✓	✓	✓
DS3	Diesel additive pump	PADDGO	POMPE_MUX_MG1	✓	✓	✓	✓	✓
DS3	Diesel additive pump		PADDGO_T1_E6	✓	✓	✓	✓	○

DS3	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
DS3	Service module / Independent telematic	BTA	Telematics unit independent	✓	✓	✓	✓	✓
DS3	Voltage retaining device		DMTR	✓	✓	✓	○	○
DS3	Vehicle Distance Assistance			✓	✓	✓	✓	✓
DS3 (A55P)	Built-in systems interface			✓	✓	✓	✓	✓
DS3 (A55P)	Engine management ECU		VD46	✓	✓	✓	✓	✓
DS3 (A55P)	Engine management ECU		CMM_VD56	✓	✓	✓	✓	✓
DS3 (A55P)	Automatic or piloted manual gearbox			✓	✓	✓	✓	✓
DS3 (A55P)	Power steering			✓	✓	✓	✓	○
DS3 (A55P)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
DS3 (A55P)	Trailer relay unit			✓	✓	✓	✓	✓
DS3 (A55P)	Instrument panel			✓	✓	✓	✓	✓
DS3 (A55P)	Controls under the steering wheel			✓	✓	✓	✓	✓
DS3 (A55P)	Airbags and pretensioners ECU			✓	✓	✓	✓	○
DS3 (A55P)	Rain and brightness sensor			✓	✓	✓	✓	○
DS3 (A55P)	Vehicle Distance Assistance			✓	✓	✓	✓	○
DS3 (A55P)	Touch screen			✓	✓	✓	✓	✓
DS3 (A55P)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	✓
DS3 (A55P)	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	✓
DS3 (A55P)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
DS3 (A55P)	Service module / Independent telematic		BTA_3R	✓	✓	✓	✓	✓
DS3 (A55P)	Anti-theft alarm			✓	✓	✓	✓	✓
DS3 (A55P)	Intrusion alarm siren			✓	✓	✓	✓	✓
DS3 (A55P)	Air conditioning			✓	✓	✓	✓	○
DS3 (A55P)	Battery charge status control unit			✓	✓	✓	✓	○
DS4	Built-in Systems Interface			✓	✓	✓	✓	○
DS4	Engine management ECU	MEV17.4.2 EP6C	5FS MEV17.4.2 EURO 5	✓	✓	✓	✓	✓
DS4	Engine management ECU	MED17.4.2	5FV MED17.4.2 EURO 5	✓	✓	✓	✓	✓
DS4	Engine management ECU		HD1. SID807. BR2	✓	✓	✓	✓	✓
DS4	Engine management ECU	EDC17C10. BR2	9HP-DV6DTED	✓	✓	✓	✓	✓
DS4	Engine management ECU	DCM35_BR2	RHE-DW10CTED4-163CV	✓	✓	✓	✓	✓
DS4	Engine management ECU	MEVD17.4.2	MEVD17.4.2 5FU	✓	✓	✓	✓	✓
DS4	Engine management ECU	ME745	ME745 NFU	✓	✓	✓	✓	✓
DS4	Engine management ECU		ME745_EC5	✓	✓	✓	✓	✓
DS4	Air bags		RBG_UDS	✓	✓	✓	✓	○
DS4	Automatic gearbox or controlled manual gearbox		BVA_AL4	✓	✓	✓	✓	✓

DS4	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
DS4	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓
DS4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS81	✓	✓	✓	✓	✓
DS4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		81 ESP	✓	✓	✓	✓	✓
DS4	Parking assistance			✓	✓	✓	✓	✓
DS4	Radio amplifier		AMPLI_AUDIO	✓	✓	✓	○	✓
DS4	Telematic unit (RTx) or audio-navigation		RNEG navigation radio	✓	✓	✓	✓	✓
DS4	Telematic unit (RTx) or audio-navigation		RNEG_2010	✓	✓	✓	✓	✓
DS4	Control panel dot matrix display	Colour matrix screen	MATT_C_2010	✓	✓	✓	○	✓
DS4	Control panel dot matrix display	Monochrome matrix screen	MATT_M_2010	✓	✓	✓	○	✓
DS4	Driver's door module		PDPC	✓	✓	✓	✓	✓
DS4	Controls under the steering wheel		HDC	✓	✓	✓	✓	✓
DS4	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	✓
DS4	Lane departure warning system		AFIL	✓	✓	✓	✓	✓
DS4	Seat driver position memory module.		BDMC	✓	✓	✓	✓	✓
DS4	Electric secondary brake		FSE	✓	✓	✓	✓	✓
DS4	Power steering		GEP	✓	✓	✓	✓	✓
DS4	Anti-theft alarm		ALARME	✓	✓	✓	✓	✓
DS4	Multiplexed control panel		Accessory audio system and manual air conditioning	✓	✓	✓	✓	✓
DS4	Monitoring of the blind spot		SAM	✓	✓	✓	✓	✓
DS4	Display	EMF_A	EMF_A SANS BOUTONS	✓	✓	✓	✓	✓
DS4	Display		EMF_C	✓	✓	✓	○	✓
DS4	Dynamic headlamp height adjuster		LADCT	✓	✓	✓	✓	✓
DS4	Engine relay unit			✓	✓	✓	✓	✓
DS4	Service module / Independent telematic			✓	✓	✓	✓	✓
DS4	Multiplexed additive adding pump		PADDGO_E5	✓	✓	✓	✓	✓
DS4	Controls on the steering wheel / Integral controls		VCI	✓	✓	✓	✓	✓
DS4	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○
DS4	Driving school module			✓	✓	✓	○	✓
DS4	Supply protection and management unit			✓	✓	✓	✓	○
DS4	Voltage retaining device		DMTC	✓	○	○	○	○
DS4	Under inflation detection		DSG	✓	✓	✓	✓	○
DS4	Air conditioning	CLIM_REGULEE_UDS	RF	✓	✓	✓	✓	✓

DS4	Rain and light sensor			✓	✓	✓	✓	○
DS4	Radio		RD5	✓	✓	✓	✓	✓
DS4	Instrument panel			✓	✓	✓	✓	✓
DS4	Trailer relay unit		BSG_2010_RQ	✓	✓	✓	✓	✓
DS4	Seat belt not fastened warning lights unit		TNB_2010	✓	○	○	○	✓
DS4-DS4Crossback	Built-in Systems Interface			✓	✓	✓	✓	○
DS4-DS4Crossback	Engine management ECU	MEV17.4.2 EP6C	SFS MEV17.4.2 EURO 5	✓	✓	✓	✓	✓
DS4-DS4Crossback	Engine management ECU	MEV17.4.2	MEV17_4_2	✓	✓	✓	✓	○
DS4-DS4Crossback	Engine management ECU	MED17.4.2	SFV MED17.4.2 EURO 5	✓	✓	✓	✓	✓
DS4-DS4Crossback	Engine management ECU	MED17.4.2	MED17_4_2	✓	✓	✓	✓	○
DS4-DS4Crossback	Engine management ECU		HD1.SID807.BR2	✓	✓	✓	✓	✓
DS4-DS4Crossback	Engine management ECU	EDC17C10.BR2	9HP-DV6DTED	✓	✓	✓	✓	✓
DS4-DS4Crossback	Engine management ECU	DCM35_BR2	RHE-DW10CTED4-163CV	✓	✓	✓	✓	✓
DS4-DS4Crossback	Engine management ECU	MEVD17.4.2	MEVD17.4.2 5FU	✓	✓	✓	✓	✓
DS4-DS4Crossback	Engine management ECU	ME745	ME745 NFU	✓	✓	✓	✓	✓
DS4-DS4Crossback	Engine management ECU		ME745_EC5	✓	✓	✓	✓	✓
DS4-DS4Crossback	Engine management ECU		V46_21	✓	✓	✓	✓	○
DS4-DS4Crossback	Engine management ECU		V46_32	✓	✓	✓	✓	○
DS4-DS4Crossback	Engine management ECU		MW6KP	✓	✓	✓	✓	○
DS4-DS4Crossback	Engine management ECU		VM46	✓	✓	✓	✓	○
DS4-DS4Crossback	Engine management ECU		EDC17C60	✓	✓	✓	✓	○
DS4-DS4Crossback	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○
DS4-DS4Crossback	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS81	✓	✓	✓	✓	○
DS4-DS4Crossback	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP81	✓	✓	✓	✓	○
DS4-DS4Crossback	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90	✓	✓	✓	✓	○
DS4-DS4Crossback	Automatic gearbox or controlled manual gearbox		BVA_AL4	✓	✓	✓	✓	✓
DS4-DS4Crossback	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓
DS4-DS4Crossback	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓
DS4-DS4Crossback	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○
DS4-DS4Crossback	Power steering		GEP	✓	✓	✓	✓	✓
DS4-DS4Crossback	Diesel additive pump control test		PADDGO_E5	✓	✓	✓	✓	✓
DS4-DS4Crossback	Diesel additive pump control test		PADDGO_T1_E6	✓	✓	✓	✓	○
DS4-DS4Crossback	Under-inflation detection		DSG	✓	✓	✓	✓	○
DS4-DS4Crossback	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○
DS4-DS4Crossback	Dynamic headlamp height adjuster		LADCT	✓	✓	✓	✓	✓

DS4-DS4Crossback	Battery charge status unit		RECB_GEN2	✓	✓	✓	✓	○
DS4-DS4Crossback	Electric secondary brake		FSE	✓	✓	✓	✓	✓
DS4-DS4Crossback	Lane departure warning system		AFIL	✓	✓	✓	✓	✓
DS4-DS4Crossback	Trailer relay unit		BSG_2010_RQ	✓	✓	✓	✓	✓
DS4-DS4Crossback	Engine relay unit			✓	✓	✓	✓	✓
DS4-DS4Crossback	Air bags		RBG_UDS	✓	✓	✓	✓	○
DS4-DS4Crossback	Instrument panel			✓	✓	✓	✓	✓
DS4-DS4Crossback	Parking assistance			✓	✓	✓	✓	✓
DS4-DS4Crossback	Air conditioning		CLIM_REGULEE_UDS	✓	✓	✓	✓	✓
DS4-DS4Crossback	Controls under the steering wheel		HDC	✓	✓	✓	✓	✓
DS4-DS4Crossback	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	✓
DS4-DS4Crossback	Multifunction screen		EMF_A_UDS	✓	✓	✓	✓	✓
DS4-DS4Crossback	Multifunction screen		EMF_C_UDS	✓	✓	✓	○	✓
DS4-DS4Crossback	Radio		RD5	✓	✓	✓	✓	✓
DS4-DS4Crossback	Radio		RD45	✓	✓	✓	✓	○
DS4-DS4Crossback	Radio amplifier		AMPLI_AUDIO	✓	✓	✓	○	✓
DS4-DS4Crossback	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEGC	✓	✓	✓	✓	✓
DS4-DS4Crossback	Telematic unit (RTx) or audio-navigation		RNEG_2010	✓	✓	✓	✓	✓
DS4-DS4Crossback	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	○
DS4-DS4Crossback	Anti-theft alarm		ALARME	✓	✓	✓	✓	✓
DS4-DS4Crossback	Seat driver position memory module.		BDMC	✓	✓	✓	✓	✓
DS4-DS4Crossback	Driver's door module		PDPC	✓	✓	✓	✓	✓
DS4-DS4Crossback	Control panel dot matrix display	Colour matrix screen	MATT_C_2010	✓	✓	✓	○	✓
DS4-DS4Crossback	Control panel dot matrix display	Monochrome matrix screen	MATT_M_2010	✓	✓	✓	○	✓
DS4-DS4Crossback	Seat belt not fastened warning lights unit		TNB_2010	✓	○	○	○	✓
DS4-DS4Crossback	Rain and light sensor			✓	✓	✓	✓	○
DS4-DS4Crossback	Driving school module			✓	✓	✓	○	✓
DS4-DS4Crossback	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓
DS4-DS4Crossback	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	○
DS4-DS4Crossback	Multiplexed control panel		Accessory audio system and manual air conditioning	✓	✓	✓	✓	✓
DS4-DS4Crossback	Monitoring of the blind spot		SAM	✓	✓	✓	✓	✓
DS4-DS4Crossback	Controls on the steering wheel / Integral controls		VCI	✓	✓	✓	✓	✓
DS4-DS4Crossback	Supply protection and management unit			✓	✓	✓	✓	○
DS4-DS4Crossback	Hands-free control unit			✓	✓	✓	✓	✓
DS4-DS4Crossback	Electronic key reader			✓	✓	✓	✓	○
DS4-DS4Crossback	Electric steering lock			✓	✓	✓	✓	✓
DS4-DS4Crossback	Voltage retaining device		DMTC	✓	○	○	○	○
DS4-DS4Crossback	Voltage retaining device		DMTR	✓	✓	✓	○	○

DS4-DS4Crossback	External CD player			✓	✓	✓	✓	○
DS 4S	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
DS 4S	Engine management ECU	MED17_4_2	5FV MED17.4.2 EURO5	✓	✓	✓	✓	✓
DS 4S	Engine management ECU	MEVD17.4.2	MEVD17.4.2 EURO5 EPC6DTX	✓	✓	✓	✓	✓
DS 4S	Engine management ECU		V46_32	✓	✓	✓	✓	✓
DS 4S	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○
DS 4S	Engine management ECU		MED17_4_4_EP8	✓	✓	✓	✓	○
DS 4S	Engine management ECU		VD46	✓	✓	✓	✓	○
DS 4S	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		81 ESP	✓	✓	✓	✓	✓
DS 4S	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓
DS 4S	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○
DS 4S	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○
DS 4S	Multiplexed control panel		MRN audio/navigation and automatic air conditioning	✓	✓	✓	✓	✓
DS 4S	Supply protection and management unit			✓	✓	✓	✓	○
DS 4S	Electric steering lock			✓	✓	✓	✓	✓
DS 4S	Electronic key reader			✓	✓	✓	✓	○
DS 4S	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○
DS 4S	Hands-free control unit			✓	✓	✓	✓	✓
DS 4S	Electric secondary brake		FSE	✓	✓	✓	✓	✓
DS 4S	Radio		RD45	✓	✓	✓	✓	✓
DS 4S	Telematic unit (RTx) or audio-navigation			✓	✓	✓	✓	○
DS 4S	Under inflation detection		DSG_UDS	✓	✓	✓	✓	○
DS 4S	Service module / Independent telematic			✓	✓	✓	✓	○
DS 4S	Radio amplifier		AMPL1_AUD10	✓	✓	✓	○	✓
DS 4S	Multifunction screen			✓	✓	✓	○	✓
DS 4S	Control panel dot matrix display	Colour matrix screen	MATT_C_2010	✓	✓	✓	○	✓
DS 4S	Parking assistance		4 channels	✓	✓	✓	✓	✓
DS 4S	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	✓
DS 4S	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	✓
DS 4S	Air bags		RBG_UDS	✓	✓	✓	✓	○
DS 4S	Anti-theft alarm		ALARME	✓	✓	✓	✓	✓
DS 4S	Air conditioning		CLIM_REGULEE_UDS	✓	✓	✓	✓	✓
DS 4S	Rain and light sensor			✓	✓	✓	✓	○
DS 4S	Instrument panel			✓	✓	✓	✓	✓
DS 4S	Engine relay unit			✓	✓	✓	✓	✓
DS 4S	Power steering			✓	✓	✓	✓	✓
DS5	Built-in Systems Interface			✓	✓	✓	✓	○

DS5	Engine management ECU	HDI_SID807_BR2	9HL-DV6CTED	✓	✓	✓	✓	✓
DS5	Engine management ECU	DCM35_HY	RHC-DW10CTED4-163CV	✓	✓	✓	✓	✓
DS5	Engine management ECU	DCM35_BR2	RHE-DW10CTED4-163CV	✓	✓	✓	✓	✓
DS5	Engine management ECU	MED17.4.2	5FV MED 17.4.2 EURO 5	✓	✓	✓	✓	✓
DS5	Engine management ECU	MEVD17.4.2	5FU MEVD17.4.2 EURO 5	✓	✓	✓	✓	✓
DS5	Engine management ECU		EDC17C60	✓	✓	✓	✓	✓
DS5	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○
DS5	Engine management ECU		MED17_4_4_EP8	✓	✓	✓	✓	○
DS5	Automatic gearbox or controlled manual gearbox		CFC300P_HY	✓	✓	✓	✓	✓
DS5	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓
DS5	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○
DS5	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP81	✓	✓	✓	✓	✓
DS5	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90	✓	✓	✓	✓	○
DS5	Power steering			✓	✓	✓	✓	✓
DS5	Electric steering lock			✓	✓	✓	✓	✓
DS5	Diesel additive pump		PADDGO_E5	✓	✓	✓	✓	✓
DS5	Diesel additive pump		PADDGO_T1_E6	✓	✓	✓	✓	○
DS5	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓
DS5	Service module / Independent telematic		BLVV	✓	✓	✓	✓	✓
DS5	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
DS5	Supply protection and management unit			✓	✓	✓	✓	○
DS5	Under-inflation detection		DSG	✓	✓	✓	✓	○
DS5	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○
DS5	Telematic navigator			✓	○	○	✓	✓
DS5	Electric secondary brake			✓	✓	✓	✓	✓
DS5	Trailer relay unit			✓	✓	✓	✓	✓
DS5	Electronic key reader			✓	✓	✓	✓	○
DS5	Seat belts not fastened LED unit(TNB)			✓	○	○	○	✓
DS5	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	✓
DS5	Display		EMF_A	✓	✓	✓	○	✓
DS5	Display		EMF_C	✓	✓	✓	○	✓
DS5	Control panel dot matrix display		Colour matrix screen	✓	✓	✓	○	✓
DS5	Control panel dot matrix display		Monochrome matrix screen	✓	✓	✓	○	✓
DS5	Anti-theft alarm		Alarm with anti-lift module	✓	✓	✓	✓	✓
DS5	anti-theft alarm		ALARME	✓	✓	✓	✓	○
DS5	Vibrators control ECU			✓	✓	✓	✓	✓
DS5	Controls under the steering wheel			✓	✓	✓	✓	✓

DS5	Hands-free control unit			✓	✓	✓	✓	✓
DS5	Rain and light sensor			✓	✓	✓	✓	○
DS5	Hybrid mode selector			✓	✓	✓	✓	✓
DS5	Traction battery ECU			✓	✓	✓	✓	✓
DS5	Hybrid control ECU 1			✓	✓	✓	✓	✓
DS5	Hybrid control ECU 2			✓	✓	✓	✓	○
DS5	Under inflation detection (DSG)			✓	✓	✓	✓	○
DS5	Parking assistance			✓	✓	✓	✓	○
DS5	Seat driver position memory module.			✓	✓	✓	✓	✓
DS5	Voltage retaining device			✓	○	○	○	○
DS5	High Head Vision			✓	✓	✓	✓	✓
DS5	Multifunction video camera (CMF)			✓	✓	✓	✓	○
DS5	Air conditioning		RF	✓	✓	✓	✓	✓
DS5	Radio amplifier			✓	✓	✓	○	✓
DS5	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
DS5	Air-bag		RBG_UDS	✓	✓	✓	✓	○
DS5	Engine relay unit			✓	✓	✓	✓	✓
DS5	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEGC	✓	✓	✓	✓	✓
DS5	Telematic unit (RTx) or audio-navigation		RNEG_2010	✓	✓	✓	✓	✓
DS5	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓
DS5	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	✓
DS5	Radio			✓	✓	✓	✓	✓
DS5	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	✓
DS5	Multiplexed control panel		RD5 audio system and automatic air conditioning	✓	✓	✓	✓	✓
DS5	Clock			✓	✓	✓	✓	✓
DS5	Windscreen wiper			✓	✓	✓	✓	✓
DS5	Electric steering lock			✓	✓	✓	✓	○
DS5	external CD player			✓	✓	✓	✓	✓
DS5	touch screen			✓	✓	✓	✓	✓
DS 5LS	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
DS 5LS	Engine management ECU	MED17_4_2	5FV MED17.4.2 EURO5	✓	✓	✓	✓	✓
DS 5LS	Engine management ECU	MEVD17.4.2	MEVD17.4.2 EURO5 EPC60TX	✓	✓	✓	✓	✓
DS 5LS	Engine management ECU		V46_32	✓	✓	✓	✓	✓
DS 5LS	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○
DS 5LS	Engine management ECU		MED17_4_4_EP8	✓	✓	✓	✓	○
DS 5LS	Engine management ECU		VD46	✓	✓	✓	✓	○
DS 5LS	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
DS 5LS	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓

DS SLS	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○
DS SLS	Power steering			✓	✓	✓	✓	✓
DS SLS	Voltage retaining device		DMTR	✓	✓	✓	○	○
DS SLS	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○
DS SLS	Multiplexed control panel		MRN audio/navigation and automatic air conditioning	✓	✓	✓	✓	✓
DS SLS	Supply protection and management unit			✓	✓	✓	✓	○
DS SLS	Electric steering lock			✓	✓	✓	✓	✓
DS SLS	Electronic key reader			✓	✓	✓	✓	○
DS SLS	Battery charge status unit			✓	✓	✓	✓	○
DS SLS	Hands-free control unit			✓	✓	✓	✓	✓
DS SLS	Electric secondary brake			✓	✓	✓	✓	✓
DS SLS	Radio			✓	✓	✓	✓	✓
DS SLS	Telematic unit (RTx) or audio-navigation			✓	✓	✓	✓	○
DS SLS	Under inflation detection			✓	✓	✓	✓	○
DS SLS	Service module / Independent telematic			✓	✓	✓	✓	✓
DS SLS	Radio amplifier			✓	✓	✓	○	✓
DS SLS	Display			✓	✓	✓	○	✓
DS SLS	Control panel dot matrix display			✓	✓	✓	○	✓
DS SLS	Parking assistance		4 channels	✓	✓	✓	✓	✓
DS SLS	Controls under the steering wheel			✓	✓	✓	✓	✓
DS SLS	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	✓
DS SLS	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
DS SLS	Anti-theft alarm			✓	✓	✓	✓	✓
DS SLS	Air conditioning			✓	✓	✓	✓	✓
DS SLS	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
DS SLS	Rain and brightness sensor			✓	✓	✓	✓	○
DS SLS	Instrument panel			✓	✓	✓	✓	✓
DS SLS	Engine relay unit			✓	✓	✓	✓	✓
DS5 Hybrid4	Built-in Systems Interface			✓	✓	✓	✓	○
DS5 Hybrid4	Engine management ECU	HDI_S1D807_BR2	9HL-DV6CTED	✓	✓	✓	✓	✓
DS5 Hybrid4	Engine management ECU	DCM35_HY	RHC-DW10CTED4-163CV	✓	✓	✓	✓	✓
DS5 Hybrid4	Engine management ECU	DCM35_BR2	RHH-DW10CTED4-163CV	✓	✓	✓	✓	✓
DS5 Hybrid4	Engine management ECU	MED17_4_2	5FV MED 17.4.2 EURO 5	✓	✓	✓	✓	✓
DS5 Hybrid4	Engine management ECU	MEVD17.4.2	5FU MEVD17.4.2 EURO 5	✓	✓	✓	✓	✓
DS5 Hybrid4	Engine management ECU		EDC17C60	✓	✓	✓	✓	✓
DS5 Hybrid4	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○
DS5 Hybrid4	Engine management ECU		MED17_4_4_EP8	✓	✓	✓	✓	○

DS5 Hybrid4	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		81 ESP	✓	✓	✓	✓	✓
DS5 Hybrid4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90	✓	✓	✓	✓	○
DS5 Hybrid4	Automatic gearbox or controlled manual gearbox		CFC300P_HY	✓	✓	✓	✓	✓
DS5 Hybrid4	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓
DS5 Hybrid4	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○
DS5 Hybrid4	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	○
DS5 Hybrid4	Power steering		GEP	✓	✓	✓	✓	✓
DS5 Hybrid4	Battery charge status unit		BECE_GEN2	✓	✓	✓	✓	○
DS5 Hybrid4	Diesel additive pump		PADDGO_E5	✓	✓	✓	✓	✓
DS5 Hybrid4	Diesel additive pump		PADDGO_T1_E6	✓	✓	✓	✓	○
DS5 Hybrid4	Electric secondary brake		FSE	✓	✓	✓	✓	✓
DS5 Hybrid4	Vibrators control ECU			✓	✓	✓	✓	✓
DS5 Hybrid4	Under-inflation detection		DSG	✓	✓	✓	✓	○
DS5 Hybrid4	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○
DS5 Hybrid4	Dynamic headlamp height adjuster		LADCT	✓	✓	✓	✓	✓
DS5 Hybrid4	Engine relay unit			✓	✓	✓	✓	✓
DS5 Hybrid4	Trailer relay unit		BSG_2010_RQ	✓	✓	✓	✓	✓
DS5 Hybrid4	supply protection and management unit			✓	✓	✓	✓	○
DS5 Hybrid4	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓
DS5 Hybrid4	Service module / Independent telematic		BLVV	✓	✓	✓	✓	✓
DS5 Hybrid4	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
DS5 Hybrid4	Telematic navigator			✓	○	○	✓	✓
DS5 Hybrid4	instrument panel			✓	✓	✓	✓	○
DS5 Hybrid4	Control panel dot matrix display	Colour matrix screen	MATT_C_2010	✓	✓	✓	○	✓
DS5 Hybrid4	Anti-theft alarm		Alarm with anti-lift module	✓	✓	✓	✓	✓
DS5 Hybrid4	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	✓
DS5 Hybrid4	Hands-free control unit			✓	✓	✓	✓	✓
DS5 Hybrid4	Electronic key reader			✓	✓	✓	✓	○
DS5 Hybrid4	Seat belts not fastened LED unit(TNB)		TNB_2010	✓	○	○	○	✓
DS5 Hybrid4	multifunction screen		EMF_A_UDS	✓	✓	✓	○	○
DS5 Hybrid4	multifunction screen		EMF_C_UDS	✓	✓	✓	○	○
DS5 Hybrid4	Rain and light sensor			✓	✓	✓	✓	○
DS5 Hybrid4	Multifunction video camera (CMF)			✓	✓	✓	✓	○
DS5 Hybrid4	Seat driver position memory module.			✓	✓	✓	✓	✓

DS5 Hybrid4	High Head Vision			✓	✓	✓	✓	✓
DS5 Hybrid4	Air conditioning		CLIM_REGULEE_UDS	✓	✓	✓	✓	✓
DS5 Hybrid4	Radio amplifier			✓	✓	✓	○	✓
DS5 Hybrid4	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEGC	✓	✓	✓	✓	✓
DS5 Hybrid4	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓
DS5 Hybrid4	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	✓
DS5 Hybrid4	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	○
DS5 Hybrid4	air bags and pre-tensioners control unit			✓	✓	✓	✓	○
DS5 Hybrid4	Controls on the steering wheel / Integral controls		VC1	✓	✓	✓	✓	✓
DS5 Hybrid4	Multiplexed control panel		RD5 audio system and automatic air conditioning	✓	✓	✓	✓	✓
DS5 Hybrid4	Clock			✓	✓	✓	✓	✓
DS5 Hybrid4	Windscreen wiper			✓	✓	✓	✓	✓
DS5 Hybrid4	Electric steering lock			✓	✓	✓	✓	✓
DS5 Hybrid4	external CD player			✓	✓	✓	✓	✓
DS5 Hybrid4	touch screen			✓	✓	✓	✓	✓
DS5 Hybrid4	Hybrid mode selector			✓	✓	✓	✓	✓
DS5 Hybrid4	Traction battery ECU			✓	✓	✓	✓	✓
DS5 Hybrid4	Hybrid control ECU 1			✓	✓	✓	✓	✓
DS5 Hybrid4	Radio			✓	✓	✓	✓	✓
DS5 Hybrid4	hybrid control ECU 2			✓	✓	✓	✓	○
DS 6	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
DS 6	Engine management ECU	MED17.4.2	5FV MED17.4.2 EURO5	✓	✓	✓	✓	✓
DS 6	Engine management ECU	MEVD17.4.2	MEVD17.4.2 EURO5 EPC60TX	✓	✓	✓	✓	✓
DS 6	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○
DS 6	Engine management ECU		MED17_4_4_EP8	✓	✓	✓	✓	○
DS 6	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		81 ESP	✓	✓	✓	✓	✓
DS 6	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓
DS 6	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○
DS 6	Power steering			✓	✓	✓	✓	✓
DS 6	Multiplexed control panel		MRN audio/navigation and automatic air conditioning	✓	✓	✓	✓	✓
DS 6	Supply protection and management unit			✓	✓	✓	✓	○
DS 6	Electric steering lock			✓	✓	✓	✓	✓
DS 6	Electronic key reader			✓	✓	✓	✓	○
DS 6	Battery charge status unit		BECE_GEN2	✓	✓	✓	✓	○
DS 6	Hands-free control unit			✓	✓	✓	✓	✓
DS 6	Electric secondary brake		FSE	✓	✓	✓	✓	✓
DS 6	Telematic unit (RTx) or audio-navigation		MRN	✓	✓	✓	✓	○

DS 6	Under inflation detection		DSG_UDS	✓	✓	✓	✓	○
DS 6	Radio amplifier		AMPLI_AUDIO	✓	✓	✓	○	✓
DS 6	Control panel dot matrix display	Colour matrix screen	MATT_C_2010	✓	✓	✓	○	✓
DS 6	Parking assistance		4 channels	✓	✓	✓	✓	✓
DS 6	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	✓
DS 6	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	✓
DS 6	Air bags		RBG_UDS	✓	✓	✓	✓	○
DS 6	Anti-theft alarm		ALARME	✓	✓	✓	✓	✓
DS 6	Air conditioning		CLIM_REGULEE_UDS	✓	✓	✓	✓	✓
DS 6	Rain and light sensor			✓	✓	✓	✓	○
DS 6	Instrument panel			✓	✓	✓	✓	✓
DS 6	Engine relay unit			✓	✓	✓	✓	✓
DS 6	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○
DS 6	Service module / Independent telematic		BTA_CN	✓	✓	✓	✓	✓
DS 6	Signalling fuse box			✓	✓	✓	✓	○
DS 6	Traction control mode selector			✓	✓	○	✓	○
DS 6	Motorised Boot ECU			✓	✓	✓	✓	○
DS 6	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓
DS7 Crossback	Built-in systems interface			✓	✓	✓	✓	○
DS7 Crossback	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○
DS7 Crossback	Engine management ECU		CMM_DCM71	✓	✓	✓	✓	○
DS7 Crossback	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	○
DS7 Crossback	Engine management ECU		CMM_MG1CS042	✓	✓	✓	✓	○
DS7 Crossback	Engine management ECU		CMM_VD56	✓	✓	✓	✓	○
DS7 Crossback	Diesel additive pump			✓	✓	✓	✓	○
DS7 Crossback	Voltage maintaining device			✓	○	○	○	○
DS7 Crossback	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	○
DS7 Crossback	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	○
DS7 Crossback	Sequential gear lever			✓	✓	✓	✓	○
DS7 Crossback	Power steering			✓	✓	✓	✓	○
DS7 Crossback	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○
DS7 Crossback	Variable damping ECU			✓	✓	✓	✓	○
DS7 Crossback	Dynamic headlamp height adjuster			✓	✓	✓	✓	○
DS7 Crossback	Trailer relay unit			✓	✓	✓	✓	○
DS7 Crossback	Battery charge status control unit			✓	✓	✓	✓	○
DS7 Crossback	Electric steering lock			✓	✓	✓	✓	○
DS7 Crossback	Instrument panel		CIROCCO	✓	✓	✓	✓	○
DS7 Crossback	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	○
DS7 Crossback	Controls under the steering wheel			✓	✓	✓	✓	○

DS7 Crossback	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
DS7 Crossback	Automatic gearbox electric control ECU			✓	✓	✓	✓	○
DS7 Crossback	Multifunction control panel			✓	✓	✓	✓	○
DS7 Crossback	Airbags and pretensioners ECU			✓	✓	✓	✓	○
DS7 Crossback	Seat belt not fastened warning lights unit			✓	○	○	○	○
DS7 Crossback	Windscreen wiper			✓	✓	✓	✓	○
DS7 Crossback	Rain and brightness sensor			✓	✓	✓	✓	○
DS7 Crossback	Panoramic visual assistance ECU			✓	✓	✓	✓	○
DS7 Crossback	Multifunction video camera (CMF)			✓	✓	✓	✓	○
DS7 Crossback	Vehicle Distance Assistance			✓	✓	✓	✓	○
DS7 Crossback	Night vision ECU			✓	✓	✓	✓	○
DS7 Crossback	Driver monitoring camera			✓	✓	✓	○	○
DS7 Crossback	Parking assistance			✓	✓	✓	✓	○
DS7 Crossback	Signalling fuse box			✓	✓	✓	✓	○
DS7 Crossback	Touch screen			✓	✓	✓	✓	○
DS7 Crossback	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	○
DS7 Crossback	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	○
DS7 Crossback	Service module / Independent telematic		BTA_3R	✓	✓	✓	✓	○
DS7 Crossback	Service module / Independent telematic		BTA_3S	✓	✓	✓	✓	○
DS7 Crossback	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	○
DS7 Crossback	External CD player			✓	✓	✓	✓	○
DS7 Crossback	Audio amplifier			✓	✓	✓	○	○
DS7 Crossback	Clock			✓	✓	✓	✓	○
DS7 Crossback	Anti-theft alarm			✓	✓	✓	✓	○
DS7 Crossback	Intrusion alarm siren			✓	✓	✓	✓	○
DS7 Crossback	Electric windows and exterior mirrors control pad ECU			✓	✓	✓	✓	○
DS7 Crossback	Motorised Boot Unit			✓	✓	✓	✓	○
DS7 Crossback	Hands full access ECU, right-hand side or rear			✓	✓	○	○	○
DS7 Crossback	Air conditioning			✓	✓	✓	✓	○
DS7 Crossback	Rear air conditioning ECU			✓	✓	✓	✓	○
DS7 Crossback	Rear air conditioning control panel			✓	○	○	○	○
DS7 Crossback	Additional heating			✓	✓	○	✓	○
DS7 Crossback	Front left seat heated pads and ventilation regulation ECU			✓	✓	○	✓	○
DS7 Crossback	Front right seat heated pads and ventilation regulation ECU			✓	✓	○	✓	○
DS7 Crossback	Driver's seat comfort ECU			✓	✓	✓	✓	○

DS7 Crossback	Driver's seat pneumatic functions ECU			✓	✓	○	✓	○
DS7 Crossback	Passenger's seat pneumatic functions ECU			✓	✓	○	✓	○
DS7 Crossback	Passenger compartment LEDs management ECU			✓	✓	✓	○	○
EVASION / SYNERGIE	Engine management ECU	Petrol engine	2.0 l. RFX BOSCH MP3.2	✓	✓	✓	✓	✓
EVASION / SYNERGIE	Engine management ECU	Diesel engine	1.9 l. DHX BOSCH AS3-VP20	✓	✓	✓	✓	✓
EVASION / SYNERGIE	Engine management ECU	Diesel engine	2.1 l. P8C LUCAS EP1C	✓	✓	✓	✓	✓
EVASION / SYNERGIE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
EVASION / SYNERGIE	Air bags and pre-tensioners control unit		Air bags and pre-tensioners control unit	○	✓	✓	○	○
ELYSEE	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4 TA96	✓	✓	✓	✓	○
ELYSEE	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4 TA2000	✓	✓	✓	✓	✓
ELYSEE	Engine management ECU		1.6 l. NFU BOSCH ME744	✓	✓	✓	✓	✓
ELYSEE	Engine management ECU	MP5.2	1.6 l. NFZ BOSCH MP5.2	✓	✓	✓	✓	✓
ELYSEE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
ELYSEE	Air bags and pre-tensioners control unit		Air bags and pre-tensioners control unit	✓	✓	✓	○	○
ELYSEE	Air bags and pre-tensioners control unit		Sac SIEMENS	✓	✓	✓	✓	○
ELYSEE	Transponder			✓	✓	✓	✓	✓
FUKANG	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4 TA96	✓	✓	✓	✓	○
FUKANG	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4 TA2000	✓	✓	✓	✓	✓
FUKANG	Engine management ECU	MP5.2	1.4 l. KFX BOSCH MP5.2	✓	✓	✓	✓	✓
FUKANG	Engine management ECU	ME744	1.6 l. NFU BOSCH ME744	✓	✓	✓	✓	✓
FUKANG	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS Bosch 5.3	✓	✓	✓	✓	✓
FUKANG	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
FUKANG	Transponder			✓	✓	✓	✓	○
FUKANG 988	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4 TA96	✓	✓	✓	✓	○
FUKANG 988	Automatic gearbox or controlled manual gearbox		Auto gearbox AL4 TA2000	✓	✓	✓	✓	✓
FUKANG 988	Engine management ECU	MP5.2	1.4 l. KFX BOSCH MP5.2	✓	✓	✓	✓	✓
FUKANG 988	Engine management ECU	ME744	1.6 l. NFU BOSCH ME744	✓	✓	✓	✓	✓
FUKANG 988	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS Bosch 5.3	✓	✓	✓	✓	✓
FUKANG 988	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
FUKANG 988	Transponder			✓	✓	✓	✓	○

JUMPY / DISPATCH	Engine management ECU	MM48P	2.0 l. RFN MM48P	✓	✓	✓	✓	✓
JUMPY / DISPATCH	Engine management ECU	VP20	1.9 l. DHX BOSCH AS3-VP20	✓	✓	✓	✓	✓
JUMPY / DISPATCH	Engine management ECU	EDC15C2	2.0 l. RHW BOSCH EDC15C2	✓	✓	✓	✓	✓
JUMPY / DISPATCH	Engine management ECU	DCN2	1.9 l. VJY LUCAS DCN2	✓	✓	✓	✓	✓
JUMPY / DISPATCH	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	✓	✓	✓	✓	✓
JUMPY / DISPATCH	Auto gearbox			✓	✓	✓	✓	✓
JUMPY / DISPATCH	Air bags and pre-tensioners control unit			○	✓	✓	○	○
JUMPY / DISPATCH	Additional heating			✓	✓	✓	✓	✓
JUMPY / DISPATCH	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
JUMPY 2 / DISPATCH 2	Engine management ECU	EDC15C2	2.0 l. RHW BOSCH EDC15C2	✓	✓	✓	✓	✓
JUMPY 2 / DISPATCH 2	Engine management ECU	DCN2	1.9 l. VJY LUCAS DCN2	✓	✓	✓	✓	✓
JUMPY 2 / DISPATCH 2	Engine management ECU	MM48P	2.0 l. RFN MM48P	✓	✓	✓	✓	✓
JUMPY 2 / DISPATCH 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS electronic distribution	✓	✓	✓	✓	✓
JUMPY 2 / DISPATCH 2	Auto gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
JUMPY 2 / DISPATCH 2	Additional heating			✓	✓	✓	✓	✓
JUMPY 2 / DISPATCH 2	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
JUMPY 2 / DISPATCH 2	Built-in Systems Interface (BSI)		Passenger compartment protection ecu	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Engine management ECU	MM6KP	RFN MM6KP	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Engine management ECU	Petrol engine	EDC17C10_BR2	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Engine management ECU	EDC16C34_DV6	9HU BOSCH EDC16C34 DV6UTD4 - 90CV	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Engine management ECU	HD1_SID803A	RHR SIEMENS SID803A	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Engine management ECU	DCM3.5	RHM DCM3.5	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Engine management ECU	Diesel engine	DCM35_BR2	✓	✓	✓	✓	○
JUMPY 3 / DISPATCH 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_BOSCH	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_BOSCH	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Parking assistance			✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Air conditioning			✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Rear air conditioning table			✓	✓	✓	✓	✓

JUMPY 3 / DISPATCH 3	Controls under the steering wheel		Top of column	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Anti-theft alarm			✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Rain sensor/ Brightness			✓	✓	✓	○	○
JUMPY 3 / DISPATCH 3	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○
JUMPY 3 / DISPATCH 3	Multifunction screen		Multifunction screen A	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Multifunction screen		Multifunction screen C	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Telematic unit (RTx) or audio-navigation		RNEG navigation radio	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Telematic unit (RTx) or audio-navigation		BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Telematic unit (RTx) or audio-navigation		Telematic(RT3)	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Telematic unit (RTx) or audio-navigation		Telematic(RT4)	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Telematic unit (RTx) or audio-navigation		Telematic(RT5)	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Instrument panel			✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Radio		Radio post-equipment	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Radio		RD45	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Power steering		Electric power steering ECU	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Pneumatic suspension		Suspension	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Additional heating			✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Trailer relay unit			✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Engine relay unit			✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Hands-free Kit / Portable Unit		KML	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Hands-free Kit / Portable Unit	BOITIER_NOMADE	Mobile Housing	✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Bodywork Conversion Unit			✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	CD changer / external CD player			✓	✓	✓	✓	✓
JUMPY 3 / DISPATCH 3	Under-inflation detection		DSG	✓	✓	✓	✓	○
JUMPY 3 / DISPATCH 3	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○
JUMPY 3 / DISPATCH 3	Traction control mode selector			✓	✓	○	✓	○
JUMPY 3 / DISPATCH 3	High frequency receiver			✓	✓	✓	✓	○
JUMPY 3 / DISPATCH 3	Battery charge status unit			✓	✓	✓	✓	○
JUMPY (K0) / DISPATCH (K0)	Built-in systems interface			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Engine management ECU		DCM62	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Engine management ECU		EDC17C60	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Engine management ECU		CMM_DCM71	✓	✓	✓	✓	○
JUMPY (K0) / DISPATCH (K0)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Diesel additive pump			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Voltage maintaining device		DMTC	✓	○	○	○	○
JUMPY (K0) / DISPATCH (K0)	Voltage maintaining device		DMTR_DTC3B	✓	✓	✓	○	○

JUMPY (K0) / DISPATCH (K0)	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Automatic or piloted manual gearbox		BVMP_MCP_UDS	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Power steering			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Engine wiring housing			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Trailer relay unit			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Bodywork conversion unit			✓	✓	✓	✓	○
JUMPY (K0) / DISPATCH (K0)	Battery charge status control unit			✓	✓	✓	✓	○
JUMPY (K0) / DISPATCH (K0)	Supplies protection and management unit			✓	✓	✓	✓	○
JUMPY (K0) / DISPATCH (K0)	Electric steering lock			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Instrument panel			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Head Up Display			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Controls under the steering wheel			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
JUMPY (K0) / DISPATCH (K0)	Traction control mode selector			✓	✓	○	✓	✓
JUMPY (K0) / DISPATCH (K0)	Automatic gearbox electric control ECU			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Multifunction control panel			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Airbags and pretensioners ECU			✓	✓	✓	✓	○
JUMPY (K0) / DISPATCH (K0)	Seat belt not fastened warning lights unit			✓	○	○	○	✓
JUMPY (K0) / DISPATCH (K0)	Rain and brightness sensor			✓	✓	✓	✓	○
JUMPY (K0) / DISPATCH (K0)	Multifunction video camera (CMF)			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Vehicle Distance Assistance			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Parking assistance			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Multifunction screen		EMF_A_UDS	✓	✓	✓	○	✓
JUMPY (K0) / DISPATCH (K0)	Multifunction screen		EMF_C_UDS	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Touch screen			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Radio			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Control of the telematic unit			✓	✓	○	○	○
JUMPY (K0) / DISPATCH (K0)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Service module / Independent telematic		BTA_3R	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Service module / Independent telematic		BTA_3S	✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Anti-theft alarm			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Intrusion alarm siren			✓	✓	✓	✓	✓

JUMPY (K0) / DISPATCH (K0)	Left-hand sliding side door ECU			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Right-hand sliding side door ECU			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Hands full access ECU, left-hand side			✓	✓	○	○	○
JUMPY (K0) / DISPATCH (K0)	Hands full access ECU, right-hand side or rear			✓	✓	○	○	○
JUMPY (K0) / DISPATCH (K0)	Air conditioning			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Rear air conditioning ECU			✓	✓	✓	✓	✓
JUMPY (K0) / DISPATCH (K0)	Rear air conditioning control panel			✓	○	○	✓	✓
JUMPY (K0) / DISPATCH (K0)	Additional heating			✓	✓	✓	✓	✓
JUMPER / RELAY	Engine management ECU	MM48P	2.0L RFL MM48P	○	✓	✓	○	✓
JUMPER / RELAY	Engine management ECU	EDC15C7	2.8 L BOSCH EDC15C7	○	✓	✓	○	○
JUMPER / RELAY	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS BOSCH	✓	✓	✓	✓	○
JUMPER 2 / RELAY 2	Engine management ECU	EDC16C39	EDC16C39 SOFIM 2.3	✓	✓	✓	✓	✓
JUMPER 2 / RELAY 2	Engine management ECU	EDC15C7	2.8 L BOSCH EDC15C7	○	✓	✓	○	✓
JUMPER 2 / RELAY 2	Engine management ECU	MM48P	2.0L RFW MM48P	✓	✓	✓	✓	✓
JUMPER 2 / RELAY 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○
JUMPER 2 / RELAY 2	Service module / Independent telematic			✓	✓	✓	✓	○
JUMPER 3 / RELAY 3	Built-in Systems Interface (BSI)			✓	✓	✓	✓	○
JUMPER 3 / RELAY 3	Engine management ECU	EDC16C39	EDC16C39 SOFIM 3.0 145 CV	✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Engine management ECU	PUMA	DCU-102 4HU PUMA 120 CV	✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Engine management ECU	EDC17CP52	EDC17CP52 SOFIM EURO5	✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_BOSCH	✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_BOSCH	✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ASR8.0	✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Air bags and pre-tensioners control unit		SAC_TRW	✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Air bags and pre-tensioners control unit		SDM	✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Telematic unit (RTx) or audio-navigation		BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Chrono-tachograph			✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Instrument panel			✓	✓	✓	✓	○
JUMPER 3 / RELAY 3	Parking assistance			✓	✓	✓	✓	○
JUMPER 3 / RELAY 3	Air conditioning			✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Power steering			✓	✓	✓	✓	○
JUMPER 3 / RELAY 3	Electronically managed suspension		Suspension	✓	✓	✓	✓	✓
JUMPER 3 / RELAY 3	Additional heating			○	✓	✓	✓	✓

JUMPER 3 Minibus / RELAY 3 Minibus	Built-in Systems Interface (BSI)			✓	✓	✓	✓	○
JUMPER 3 Minibus / RELAY 3 Minibus	Engine management ECU	EDC16C39	EDC16C39 SOFIM 3.0 145 CV	✓	✓	✓	✓	✓
JUMPER 3 Minibus / RELAY 3 Minibus	Engine management ECU	PUMA	DCU-102 4HU PUMA 120 CV	✓	✓	✓	✓	✓
JUMPER 3 Minibus /	Engine management ECU	EDC17CP52	EDC17CP52 SOFIM EURO5	✓	✓	✓	✓	✓
JUMPER 3 Minibus / RELAY 3 Minibus	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_BOSCH	○	✓	✓	✓	✓
JUMPER 3 Minibus / RELAY 3 Minibus	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_BOSCH	○	✓	✓	✓	✓
JUMPER 3 Minibus / RELAY 3 Minibus	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ASR8.0	○	✓	✓	✓	✓
JUMPER 3 Minibus / RELAY 3 Minibus	Air bags and pre- tensioners control unit		SAC_TRW	✓	✓	✓	✓	✓
JUMPER 3 Minibus / RELAY 3 Minibus	Air bags and pre- tensioners control unit		SDM	✓	✓	✓	✓	✓
JUMPER 3 Minibus /	Instrument panel			✓	✓	✓	✓	○
JUMPER 3 Minibus /	Parking assistance			✓	✓	✓	✓	○
JUMPER 3 Minibus /	Air conditioning			✓	✓	✓	✓	✓
JUMPER 3 Minibus / RELAY 3 Minibus	Telematic unit (RTx) or audio-navigation		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓
JUMPER 3 Minibus /	Chrono-tachograph			✓	✓	✓	✓	✓
JUMPER 3 Minibus /	Power steering			✓	✓	✓	✓	○
JUMPER 3 Minibus /	Pneumatic suspension		Suspension	✓	✓	✓	✓	✓
JUMPER 3 Minibus /	Additional heating			○	✓	✓	✓	✓
JUMPER 3 Euro5 Euro6 / RELAY 3 Euro5 Euro6	Built-in Systems Interface			✓	✓	✓	○	○
JUMPER 3 Euro5 Euro6 /	Engine management ECU		EDC17CP52_UDS	✓	✓	✓	✓	○
JUMPER 3 Euro5 Euro6 /	Engine management ECU		SID208	✓	✓	✓	✓	○
JUMPER 3 Euro5 Euro6 /	Engine management ECU		DCM62_F	✓	✓	✓	✓	○
JUMPER 3 Euro5 Euro6 / RELAY 3 Euro5 Euro6	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS90_F	✓	✓	✓	○	✓
JUMPER 3 Euro5 Euro6 / RELAY 3 Euro5 Euro6	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90_F	✓	✓	✓	○	✓
JUMPER 3 Euro5 Euro6 / RELAY 3 Euro5 Euro6	Lane departure warning system			✓	✓	✓	✓	✓
JUMPER 3 Euro5 Euro6 /	Power steering		DAE	✓	✓	✓	✓	○
JUMPER 3 Euro5 Euro6 / RELAY 3 Euro5 Euro6	Telematic unit (RTx) or audio-navigation			✓	✓	✓	✓	✓
JUMPER 3 Euro5 Euro6 /	Audio/navigation LTM			✓	✓	✓	✓	✓
JUMPER 3 Euro5 Euro6 /	Air conditioning			✓	✓	✓	✓	✓
JUMPER 3 Euro5 Euro6 /	Instrument panel			✓	✓	✓	✓	✓
JUMPER 3 Euro5 Euro6 /	Parking assistance			✓	✓	✓	✓	○
JUMPER 3 Euro5 Euro6 / RELAY 3 Euro5 Euro6	Air bags and pre- tensioners control unit			✓	✓	✓	✓	✓
JUMPER 3 Euro5 Euro6 / RELAY 3 Euro5 Euro6	Electronically managed suspension			✓	✓	✓	✓	○
JUMPER 3 Euro5 Euro6 / RELAY 3 Euro5 Euro6	Under-inflation detection			✓	✓	✓	✓	○
JUMPER 3 Euro5 Euro6 /	Radio			✓	✓	✓	✓	✓
JUMPER 3 Euro5 Euro6 /	Tachograph			✓	✓	✓	✓	✓
JUMPER 3 Euro5 Euro6 /	Additional heating			✓	✓	✓	○	✓

SPACETOURER (KO)	Built-in systems interface			✓	✓	✓	✓	✓
SPACETOURER (KO)	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	✓
SPACETOURER (KO)	Engine management ECU		DCM62	✓	✓	✓	✓	✓
SPACETOURER (KO)	Engine management ECU		EDC17C60	✓	✓	✓	✓	✓
SPACETOURER (KO)	Engine management ECU		CVM_DCM71	✓	✓	✓	✓	○
SPACETOURER (KO)	Engine management ECU		CVM_MD1CS003	✓	✓	✓	✓	✓
SPACETOURER (KO)	Diesel additive pump			✓	✓	✓	✓	✓
SPACETOURER (KO)	Voltage maintaining device		DMTC	✓	○	○	○	○
SPACETOURER (KO)	Voltage maintaining device		DMTR_DTC3B	✓	✓	✓	○	○
SPACETOURER (KO)	Automatic or piloted manual gearbox		BVA_A06_AT6_UDS	✓	✓	✓	✓	✓
SPACETOURER (KO)	Automatic or piloted manual gearbox		BVMP_MCP_UDS	✓	✓	✓	✓	✓
SPACETOURER (KO)	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	✓
SPACETOURER (KO)	Power steering			✓	✓	✓	✓	✓
SPACETOURER (KO)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓
SPACETOURER (KO)	Engine wiring housing			✓	✓	✓	✓	✓
SPACETOURER (KO)	Trailer relay unit			✓	✓	✓	✓	✓
SPACETOURER (KO)	Bodywork conversion unit			✓	✓	✓	✓	○
SPACETOURER (KO)	Battery charge status control unit			✓	✓	✓	✓	○
SPACETOURER (KO)	Supplies protection and management unit			✓	✓	✓	✓	○
SPACETOURER (KO)	Electric steering lock			✓	✓	✓	✓	✓
SPACETOURER (KO)	Instrument panel			✓	✓	✓	✓	✓
SPACETOURER (KO)	Head Up Display			✓	✓	✓	✓	✓
SPACETOURER (KO)	Controls under the steering wheel			✓	✓	✓	✓	✓
SPACETOURER (KO)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○
SPACETOURER (KO)	Traction control mode selector			✓	✓	○	✓	✓
SPACETOURER (KO)	Automatic gearbox electric control ECU			✓	✓	✓	✓	✓
SPACETOURER (KO)	Multifunction control panel			✓	✓	✓	✓	✓
SPACETOURER (KO)	Airbags and pretensioners ECU			✓	✓	✓	✓	○
SPACETOURER (KO)	Seat belt not fastened warning lights unit			✓	○	○	○	✓
SPACETOURER (KO)	Rain and brightness sensor			✓	✓	✓	✓	○
SPACETOURER (KO)	Multifunction video camera (CMF)			✓	✓	✓	✓	✓
SPACETOURER (KO)	Vehicle Distance Assistance			✓	✓	✓	✓	✓
SPACETOURER (KO)	Parking assistance			✓	✓	✓	✓	✓
SPACETOURER (KO)	Multifunction screen		EMF_A_UDS	✓	✓	✓	○	✓
SPACETOURER (KO)	Multifunction screen		EMF_C_UDS	✓	✓	✓	✓	✓
SPACETOURER (KO)	Touch screen			✓	✓	✓	✓	✓
SPACETOURER (KO)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	✓

SPACETOURER (KO)	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	✓
SPACETOURER (KO)	Radio			✓	✓	✓	✓	✓
SPACETOURER (KO)	Control of the telematic unit			✓	✓	○	○	○
SPACETOURER (KO)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	✓
SPACETOURER (KO)	Service module / Independent telematic		BTA_3R	✓	✓	✓	✓	✓
SPACETOURER (KO)	Service module / Independent telematic		BTA_3S	✓	✓	✓	✓	✓
SPACETOURER (KO)	Anti-theft alarm			✓	✓	✓	✓	✓
SPACETOURER (KO)	Intrusion alarm siren			✓	✓	✓	✓	✓
SPACETOURER (KO)	Left-hand sliding side door ECU			✓	✓	✓	✓	✓
SPACETOURER (KO)	Right-hand sliding side door ECU			✓	✓	✓	✓	✓
SPACETOURER (KO)	Hands full access ECU, left-hand side			✓	✓	○	○	○
SPACETOURER (KO)	Hands full access ECU, right-hand side or rear			✓	✓	○	○	○
SPACETOURER (KO)	Air conditioning			✓	✓	✓	✓	✓
SPACETOURER (KO)	Rear air conditioning ECU			✓	✓	✓	✓	✓
SPACETOURER (KO)	Rear air conditioning control panel			✓	○	○	✓	✓
SPACETOURER (KO)	Additional heating			✓	✓	✓	✓	✓
NEMO	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
NEMO	Engine management ECU	Petrol engine	KFV V34P	✓	✓	✓	✓	✓
NEMO	Engine management ECU	Petrol engine	KFT V34.2	✓	✓	✓	✓	✓
NEMO	Engine management ECU	EDC16C34	8HS BOSCH EDC16C34	✓	✓	✓	✓	✓
NEMO	Engine management ECU	Diesel engine	HD1_8DF2	✓	✓	✓	✓	✓
NEMO	Engine management ECU	HD1_8DF3	HD1_8DF3	✓	✓	✓	✓	✓
NEMO	Automatic gearbox or controlled manual gearbox		Gearbox BVMP_MAP	✓	✓	✓	✓	✓
NEMO	Automatic gearbox or controlled manual gearbox		Controlled manual gearbox MTA	✓	✓	✓	✓	✓
NEMO	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		ABS81	✓	✓	✓	✓	✓
NEMO	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		ESP 8.1	✓	✓	✓	✓	✓
NEMO	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)		ESP90_F	✓	✓	✓	✓	○
NEMO	Air bags and pre-tensioners control unit			✓	✓	✓	✓	✓
NEMO	Instrument panel			✓	✓	✓	✓	✓
NEMO	Parking assistance			✓	✓	✓	✓	○
NEMO	Telematic unit (RTx) or audio-navigation			✓	✓	✓	✓	✓
SAXO	Electrical vehicle		Electric motor	✓	✓	✓	○	✓
SAXO	Engine management ECU	MA3.1	1.0 l. CDY/CDZ BOSCH MA3.1	✓	✓	✓	✓	✓
SAXO	Engine management ECU	M744	1.1 l. HFX BOSCH M7.4.4	✓	✓	✓	✓	✓

SAXO	Engine management ECU	S2000P	1.4 l. KFW SAGEM S2000	✓	✓	✓	✓	✓
SAXO	Engine management ECU	MM1AP	1.4 l. KFX MM1AP	✓	✓	✓	✓	○
SAXO	Engine management ECU	MP7.3	1.4 l. KFX BOSCH MP7.3	✓	✓	✓	✓	✓
SAXO	Engine management ECU	MM48P	1.6 l. NFX MM48P	✓	✓	✓	✓	✓
SAXO	Engine management ECU	MP5.2	1.6 l. NFZ BOSCH MP5.2	✓	✓	✓	✓	✓
SAXO	Engine management ECU	MP7.2	1.6 l. NFZ BOSCH MP7.2	✓	✓	✓	○	✓
SAXO	Engine management ECU	VP20	1.5L VJX/VJU BOSCH AS4-VP20	✓	✓	✓	✓	✓
SAXO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	✓	✓	✓	✓	○
SAXO	Additional heating			✓	✓	✓	✓	✓
SAXO	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
SAXO	Transponder		Transponder VALEO	✓	✓	✓	✓	○
XSARA	Engine management ECU	MM1AP	1.4 l. KFX MM1AP	✓	✓	✓	✓	○
XSARA	Engine management ECU	MP7.3	1.4 l. KFX BOSCH MP7.3	✓	✓	✓	✓	✓
XSARA	Engine management ECU	SL96	1.4L KFX SAGEM SL96	✓	✓	✓	✓	✓
XSARA	Engine management ECU	MP5.2	1.6 l. NFZ BOSCH MP5.2	✓	✓	✓	✓	✓
XSARA	Engine management ECU	MP7.2	1.6 l. NFZ BOSCH MP7.2	✓	✓	✓	✓	✓
XSARA	Engine management ECU	VP20	1.9 l. DHV BOSCH AS3-VP20	✓	✓	✓	✓	✓
XSARA	Engine management ECU	EDC15C2	2.0 l. RHY BOSCH EDC15C2	✓	✓	✓	✓	✓
XSARA	Engine management ECU	EDC15C2	2.0 l. RHY BOSCH EDC15C2	✓	✓	✓	✓	✓
XSARA	Air conditioning			✓	✓	✓	○	✓
XSARA	Additional heating			✓	✓	✓	✓	✓
XSARA	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS mechanical distribution	✓	✓	✓	✓	✓
XSARA	Built-in Systems Interface (BSI)		Passenger compartment protection ecu	✓	✓	✓	✓	✓
XSARA	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
XSARA	Left hand side airbag			✓	✓	✓	○	✓
XSARA	Right hand side airbag			✓	✓	✓	○	✓
XSARA	Auto gearbox		Auto gearbox AL4	✓	✓	✓	✓	○
XSARA	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
XSARA	Radio post-equipment			✓	✓	✓	✓	✓
XSARA	CD changer / external CD player			✓	✓	✓	✓	✓
XSARA	Instrument panel			✓	✓	✓	○	✓
XSARA	Air conditioning			✓	✓	✓	○	✓
XSARA	Additional heating			✓	✓	✓	✓	✓
XSARA	Engine management ECU	MP7.3	1.4 l. KFX BOSCH MP7.3	✓	✓	✓	✓	✓
XSARA	Engine management ECU	SL96	1.4L KFX SAGEM SL96	✓	✓	✓	✓	✓
XSARA	Engine management ECU	MP7.2	1.6 l. NFZ BOSCH MP7.2	✓	✓	✓	✓	✓
XSARA	Engine management ECU	MM1AP	1.8 l. LFX MM1AP	✓	✓	✓	✓	○
XSARA	Engine management ECU	MP5.2	2.0 l. RFV BOSCH MP5.2	✓	✓	✓	✓	✓
XSARA	Engine management ECU	VP20	1.9 l. DHV BOSCH AS3-VP20	✓	✓	✓	✓	✓
XSARA	Engine management ECU	EDC15C2	2.0 l. RHY BOSCH EDC15C2	✓	✓	✓	✓	✓

XSARA	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS mechanical distribution	✓	✓	✓	✓	✓
XSARA	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
XSARA	Left hand side airbag			✓	✓	✓	○	✓
XSARA	Right hand side airbag			✓	✓	✓	○	✓
XSARA	Auto gearbox		Auto gearbox AL4	✓	✓	✓	✓	○
XSARA 2	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
XSARA 2	Navigation			✓	✓	✓	✓	○
XSARA 2	Instrument panel			✓	✓	✓	✓	✓
XSARA 2	Air conditioning			✓	✓	✓	✓	✓
XSARA 2	Radio post-equipment			✓	✓	✓	✓	✓
XSARA 2	Car-phone			✓	✓	✓	✓	✓
XSARA 2	CD changer / external CD player			✓	✓	✓	✓	✓
XSARA 2	Parking assistance			✓	✓	✓	✓	✓
XSARA 2	Top of column			✓	✓	✓	✓	○
XSARA 2	Anti-theft alarm			✓	✓	✓	✓	✓
XSARA 2	Driving school mode			✓	○	○	✓	✓
XSARA 2	Display or Autopc		Multifunction display A	✓	✓	✓	✓	✓
XSARA 2	Display or Autopc		Multifunction display B	✓	✓	✓	✓	✓
XSARA 2	Display or Autopc		Multifunction display C	✓	✓	✓	✓	✓
XSARA 2	Display or Autopc		AUTOPC	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	EDC15C2	2.0 l. RHY BOSCH EDC15C2	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	DCN2	1.9L WJY LUCAS DCN2	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	HDI_SID801	RHY SIEMENS SID801	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	EDC16C3	8HZ BOSCH EDC16C3 (DV4)	✓	✓	✓	✓	○
XSARA 2	Engine management ECU	ME744	1.6L NFU BOSCH ME744	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	S2000P	1.4L KFW SAGEM S2000P	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	MM48P	2.0L RFN MM48P	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	MM4MP2	RFN MM4MP2	✓	✓	✓	✓	✓
XSARA 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS electronic distribution	✓	✓	✓	✓	✓
XSARA 2	Auto gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
XSARA 2	Additional heating			✓	✓	✓	✓	✓
XSARA 2	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
XSARA 2	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
XSARA 2	Navigation			✓	✓	✓	✓	○
XSARA 2	Instrument panel			✓	✓	✓	✓	✓
XSARA 2	Air conditioning			✓	✓	✓	✓	✓
XSARA 2	Radio post-equipment			✓	✓	✓	✓	✓
XSARA 2	Car-phone			✓	✓	✓	✓	✓
XSARA 2	CD changer / external CD player			✓	✓	✓	✓	✓
XSARA 2	Parking assistance			✓	✓	✓	✓	✓
XSARA 2	Controls under the steering wheel		Top of column	✓	✓	✓	✓	○

XSARA 2	Anti-theft alarm			○	✓	✓	○	✓
XSARA 2	Driving school mode			✓	○	○	✓	✓
XSARA 2	Rain sensor/ Brightness			✓	✓	✓	✓	○
XSARA 2	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
XSARA 2	Display or Autopc		Multifunction display A	✓	✓	✓	✓	✓
XSARA 2	Display or Autopc		Multifunction display B	✓	✓	✓	✓	✓
XSARA 2	Display or Autopc		Multifunction display C	✓	✓	✓	✓	✓
XSARA 2	Display or Autopc		AUTOPC	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	EDC15C2	2.0 l. RHY BOSCH EDC15C2	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	DCN2	1.9L WJY LUCAS DCN2	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	HDI_SID801	RHY SIEMENS SID801	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	EDC16C3	8HZ BOSCH EDC16C3 (DV4)	✓	✓	✓	✓	○
XSARA 2	Engine management ECU	MM6LP	RFN MM6LP	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	ME744	1.6L NFU BOSCH ME744	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	S2000P	1.4L KFW SAGEM S2000P	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	S2000P	1.4L KFW SAGEM S2000P	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	MM48P	2.0L RFN MM48P	✓	✓	✓	✓	✓
XSARA 2	Engine management ECU	MM4MP2	RFN MM4MP2	✓	✓	✓	✓	✓
XSARA 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS electronic distribution	✓	✓	✓	✓	✓
XSARA 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP	✓	✓	✓	✓	✓
XSARA 2	Auto gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
XSARA 2	Additional heating			✓	✓	✓	✓	✓
XSARA PICASSO	BSI ECU			✓	✓	✓	✓	✓
XSARA PICASSO	Navigation			✓	✓	✓	✓	○
XSARA PICASSO	Multifunction screen		Multifunction display VDO B	✓	✓	✓	✓	✓
XSARA PICASSO	Multifunction screen		Multifunction display VDO C	✓	✓	✓	✓	✓
XSARA PICASSO	Air conditioning			✓	✓	✓	✓	✓
XSARA PICASSO	Radio post-equipment			✓	✓	✓	✓	✓
XSARA PICASSO	CD changer / external CD player			✓	✓	✓	✓	✓
XSARA PICASSO	Instrument panel			✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	MP7.2	1.6L NFZ BOSCH MP7.2	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	M744	1.6L NFV BOSCH M744	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	MM48P	2.0L RFN MM48P	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	S2000P	1.8L 6FZ SAGEM S2000P	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	S2000PM1	6FZ SAGEM S2000PM1	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	S2000PM1	6FZ SAGEM S2000PM1	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	S2000PM2	6FZ SAGEM S2000PM2	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	ME745	NFS BOSCH ME745	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	EDC15C2	2.0 l. BOSCH EDC15C2	✓	✓	✓	✓	✓
XSARA PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS electronic distribution	✓	✓	✓	✓	✓

XSARA PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP	✓	✓	✓	✓	✓
XSARA PICASSO	Additional heating			✓	✓	✓	✓	✓
XSARA PICASSO	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
XSARA PICASSO	Diesel additive function			✓	✓	✓	✓	✓
XSARA PICASSO	Left hand side airbag			✓	✓	✓	○	✓
XSARA PICASSO	Right hand side airbag			✓	✓	✓	○	✓
XSARA PICASSO	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
XSARA PICASSO	Navigation			✓	✓	✓	✓	○
XSARA PICASSO	Air conditioning			✓	✓	✓	✓	✓
XSARA PICASSO	Instrument panel			✓	✓	✓	✓	✓
XSARA PICASSO	Radio post-equipment			✓	✓	✓	✓	✓
XSARA PICASSO	CD changer / external CD player			✓	✓	✓	✓	✓
XSARA PICASSO	Parking assistance			✓	✓	✓	✓	✓
XSARA PICASSO	Anti-theft alarm			○	✓	✓	○	✓
XSARA PICASSO	Controls under the steering wheel		Top of column	✓	✓	✓	✓	○
XSARA PICASSO	Rain sensor/ Brightness			✓	✓	✓	✓	○
XSARA PICASSO	Diesel additive function			✓	✓	✓	✓	✓
XSARA PICASSO	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
XSARA PICASSO	Multifunction screen		Multifunction display SAGEM B	✓	✓	✓	✓	✓
XSARA PICASSO	Multifunction screen		Multifunction display SIEMENS C	✓	✓	✓	✓	✓
XSARA PICASSO	Telematic unit (RTx) or audio-navigation		RASTREADOR	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	MM6LP	RFN MM6LP	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	S2000PM1	6FZ SAGEM S2000PM1	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	S2000PM2	6FZ SAGEM S2000PM2	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	M744	1.6L NFV BOSCH M744	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	ME745	NFS BOSCH ME745	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	ME745	NFS BOSCH ME749	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	EDC15C2	2.0 L BOSCH EDC15C2	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	EDC16C3	9HY BOSCH EDC16C3 DV6TED4	✓	✓	✓	✓	✓
XSARA PICASSO	Engine management ECU	EDC16C34	9HZ (FAP) BOSCH EDC16C34 DV6TED4	✓	✓	✓	✓	✓
XSARA PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
XSARA PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_BOSCH	✓	✓	✓	✓	✓
XSARA PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS5.3	✓	✓	✓	✓	✓
XSARA PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓

XSARA PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP_BOSCH5.7	✓	✓	✓	✓	✓
XSARA PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_BOSCH	✓	✓	✓	✓	✓
XSARA PICASSO	Auto gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
XSARA PICASSO	Additional heating			✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Navigation			✓	✓	✓	✓	○
XSARA PICASSO CHINE	Air conditioning			✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Instrument panel			✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Radio post-equipment			✓	✓	✓	✓	✓
XSARA PICASSO CHINE	CD changer / external CD player			✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Parking assistance			✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Anti-theft alarm			○	✓	✓	○	✓
XSARA PICASSO CHINE	Controls under the steering wheel		Top of column	✓	✓	✓	✓	○
XSARA PICASSO CHINE	Rain sensor/ Brightness			✓	✓	✓	✓	○
XSARA PICASSO CHINE	Diesel additive function			✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
XSARA PICASSO CHINE	Multifunction screen		Multifunction display SAGEM B	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Multifunction screen		Multifunction display SIEMENS C	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Telematic unit (RTx) or audio-navigation		RASTREADOR	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Engine management ECU	MM6LP	RPN MM6LP	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Engine management ECU	S2000PM1	6FZ SAGEM S2000PM1	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Engine management ECU	S2000PM2	6FZ SAGEM S2000PM2	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Engine management ECU	M744	1.6L NFV BOSCH M744	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Engine management ECU	ME745	NFS BOSCH ME745	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Engine management ECU	ME745	NFS BOSCH ME749	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Engine management ECU	EDC15C2	2.0 L BOSCH EDC15C2	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Engine management ECU	EDC16C3	9HY BOSCH EDC16C3 DV6TED4	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Engine management ECU	EDC16C34	9HZ (FAP) BOSCH EDC16C34 DV6TED4	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8.1_BOSCH	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_BOSCH	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS5.3	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8.1_BOSCH	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP_BOSCH5.7	✓	✓	✓	✓	✓

XSARA PICASSO CHINE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP8_BOSCH	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Auto gearbox		Auto gearbox AL4	✓	✓	✓	✓	✓
XSARA PICASSO CHINE	Additional heating			✓	✓	✓	✓	✓
XANTIA	Engine management ECU	Petrol engine	1.8L LFX MM1AP	✓	✓	✓	✓	○
XANTIA	Engine management ECU	MP5.1.1	1.8L LFX BOSCH MP5.1.1	✓	✓	✓	✓	✓
XANTIA	Engine management ECU	Petrol engine	1.8L LFX SAGEM SL96	✓	✓	✓	✓	✓
XANTIA	Engine management ECU	Petrol engine	1.8L LFX BOSCH MP5.1	✓	✓	✓	✓	✓
XANTIA	Engine management ECU	MP5.2	2.0L R6E BOSCH MP5.2	✓	✓	✓	✓	✓
XANTIA	Engine management ECU	MP3.2ACAV	2.0L RFT BOSCH MP3.2	✓	✓	✓	✓	○
XANTIA	Engine management ECU	Petrol engine	2.0L RGX BOSCH MP3.2	✓	✓	✓	✓	○
XANTIA	Engine management ECU	Petrol engine	3.0L XFZ BOSCH MP7.0	✓	✓	✓	✓	✓
XANTIA	Engine management ECU	Diesel engine	1.9L DMX BOSCH AS3-VP20	✓	✓	✓	✓	✓
XANTIA	Engine management ECU	Diesel engine	2.1L P8C LUCAS EP1C	✓	✓	✓	✓	✓
XANTIA	Air bags and pre-tensioners control unit			○	✓	✓	○	○
XANTIA 2	Engine management ECU	Petrol engine	1.8 L LFX MM1AP	○	✓	✓	✓	○
XANTIA 2	Engine management ECU	Petrol engine	1.8 L LFX SAGEM SL96	✓	✓	✓	✓	✓
XANTIA 2	Engine management ECU	MP5.2	1.8 L LFX BOSCH MP5.2	✓	✓	✓	✓	✓
XANTIA 2	Engine management ECU	Petrol engine	1.8 L LFX BOSCH MP7.3	✓	✓	✓	✓	✓
XANTIA 2	Engine management ECU	Petrol engine	2.0 L RGX BOSCH MP3.2	✓	✓	✓	✓	○
XANTIA 2	Engine management ECU	Petrol engine	3.0 L XFZ BOSCH MP7.0	✓	✓	✓	✓	✓
XANTIA 2	Engine management ECU	Diesel engine	1.9 L DMX BOSCH AS3-VP20	✓	✓	✓	✓	✓
XANTIA 2	Engine management ECU	Diesel engine	2.1 L P8C LUCAS EP1C	✓	✓	✓	✓	✓
XANTIA 2	Engine management ECU	EDC15C2	2.0 L RHZ BOSCH EDC15C2	✓	✓	✓	✓	✓
XANTIA 2	Air conditioning			✓	✓	✓	○	✓
XANTIA 2	Additional heating			✓	✓	✓	✓	✓
XANTIA 2	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○
XANTIA 2	Air bags and pre-tensioners control unit			✓	✓	✓	○	○
XANTIA 2	Right hand side airbag			✓	✓	✓	○	✓
XANTIA 2	Left hand side airbag			✓	✓	✓	○	✓
XANTIA 2	Auto gearbox		Auto gearbox ZF 4HP20	✓	✓	✓	✓	✓
XANTIA 2	Auto gearbox		Auto gearbox AL4	✓	✓	✓	✓	○
XANTIA 2	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓
XM	Engine	Petrol engine	2.0 L RFZ BOSCH MP5.1	✓	✓	✓	✓	✓
XM	Engine	Petrol engine	2.0 L RGY BOSCH MP3.2	✓	✓	✓	✓	○
XM	Multiplexing			○	✓	✓	✓	✓
XM	Engine management ECU	MP5.2	2.0 L R6E BOSCH MP5.2	✓	✓	✓	✓	✓
XM	Engine management ECU	Petrol engine	2.0 L RFV BOSCH MP5.1.1	✓	✓	✓	✓	✓
XM	Engine management ECU	Petrol engine	2.0 L RFZ BOSCH MP5.1	✓	✓	✓	✓	✓
XM	Engine management ECU	MP3.2	2.0 L RGX BOSCH MP3.2	✓	✓	✓	✓	○
XM	Engine management ECU	Petrol engine	3.0 L XFZ BOSCH MP7.0	✓	✓	✓	✓	✓
XM	Engine management ECU	Diesel engine	2.1 L P8C LUCAS EP1C	✓	✓	✓	✓	✓
XM	Engine management ECU	Diesel engine	2.5 L THY BOSCH MSA11 VP36	✓	✓	✓	✓	✓

XM	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS TEVES MK20E	✓	✓	✓	✓	○
XM	Air bags and pre-tensioners control unit			○	✓	✓	○	○
XM	Left hand side airbag			○	✓	✓	○	✓
XM	Right hand side airbag			○	✓	✓	○	✓
XM MULTIPLEXEE	Engine management ECU	MP5.2	2.0 l. R6E BOSCH MP5.2	✓	✓	✓	✓	✓
XM MULTIPLEXEE	Engine management ECU	Petrol engine	2.0 l. RFV BOSCH MP5.1.1	✓	✓	✓	✓	✓
XM MULTIPLEXEE	Engine management ECU	Petrol engine	2.0 l. RFZ BOSCH MP5.1	✓	✓	✓	✓	✓
XM MULTIPLEXEE	Engine management ECU	MP3.2	2.0 l. RGX BOSCH MP3.2	✓	✓	✓	✓	○
XM MULTIPLEXEE	Engine management ECU	Petrol engine	3.0 l. XFZ BOSCH MP7.0	✓	✓	✓	✓	✓
XM MULTIPLEXEE	Engine management ECU	Diesel engine	2.1 l. P8C LUCAS EP1C	✓	✓	✓	✓	✓
XM MULTIPLEXEE	Engine management ECU	Diesel engine	2.5 l. THY BOSCH MSA11 VP36	✓	✓	✓	✓	✓
XM MULTIPLEXEE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS TEVES MK20E	✓	✓	✓	✓	○
XM MULTIPLEXEE	Air bags and pre-tensioners control unit			○	✓	✓	○	○
XM MULTIPLEXEE	Left hand side airbag			○	✓	✓	○	✓
XM MULTIPLEXEE	Right hand side airbag			○	✓	✓	○	✓
ZX	Engine	Petrol engine	1.1 l. HDV/HDZ BOSCH MA3.1	✓	✓	✓	✓	✓
ZX	Engine	MM1AP	1.4 l. KFX MM1AP	✓	✓	✓	✓	○
ZX	Engine	MP5.2	1.6 l. NFZ BOSCH MP5.2	✓	✓	✓	✓	✓
ZX	Engine	Petrol engine	1.6 l. BFZ SAGEM CCM4GJ	✓	✓	✓	✓	✓
ZX	Engine	Petrol engine	1.8 l. LFZ BOSCH MP5.1	✓	✓	✓	✓	✓
ZX	Driving assistance		ABS BOSCH 5	✓	✓	✓	✓	○
ZX	Driving assistance		ABR5.3	✓	✓	✓	✓	✓
ZX	Protection	Pre-tensioners	Supply power to the portable through the cable AL04	✓	✓	✓	✓	○

Special Function						
0001 0002 0003						
0004 0005 0006 0007 0008						
0001 0002 0003 0009 0010						
0011 0012						

0013 0014 0015 0016 0017
0018
0019 0020
0021
0011 0012

0011 0022 0023
0024
0025 0026 0027 0028 0029 0030 0031
0032 0033
0032 0033
0032 0033
0034 0035 0036
0018 0019 0020
0018 0037
0020 0037 0038 0039
0040 0041 0042 0043 0044 0045 0046
0047 0048 0049
0050

[illegible]

[illegible]

[illegible]

0057
0057 0058
0059
0060
0061

[illegible]

[illegible]

0065 0066 0067 0069 0070 0071 0072 0073 0074 0075
0011
0011
0076 0077
0013 0014 0015 0016 0017

[illegible]

[illegible]

[illegible]

0063 0064
0065 0066 0067 0069 0070 0071 0072 0073 0074 0075
0011 0012
0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088 0089 0090
0032
0032
0032
0032
0024
0091 0092
0093
0065 0066 0067 0075

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

0011
0094
0094
0094
0057
0094
0095
0103
0078 0081 0094 0104 0105 0106 0107

0024
0104 0108 0109
0093 0104 0108 0110 0111
0094 0104 0112 0113
0114 0115 0116 0117 0118 0119 0120 0121 0122 0123 0124 0125 0126 0127 0128
0050 0129 0130
0023 0131 0132 0133 0134 0135 0136
0023 0133 0134
0137 0138
0139 0140 0141 0142 0143 0144 0145 0146
0011 0012
0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088 0089
0078 0079 0080 0081 0082 0088 0089 0096 0097 0098 0099 0100

[illegible]

0015
0014 0017 0068
0014 0017 0068
0014 0017 0068
0040 0041 0042 0043 0044 0045 0046
0171 0172 0173
0011 0012

[illegible]

0014 0017 0068
0014 0017 0068
0014 0017 0068
0171 0172 0173
0040 0175
0103
0137 0138
0176
0078 0079 0080 0081 0082 0083 0084 0085 0087 0088 0096 0176 0177 0178 0179 <u>0180</u> 0032 0033 0181
0032 0181
0033 0181 0182 0183 0184

0176
0078 0081 0094 0105 0106 0107
0024
0063
0018 0020 0037 0038 0039 0104
0094 0104 0112
0095 0104 0167 0185 0186 0187 0188 0189
0095
0104 0190
0104
0191
0191
0171 0172 0173

[illegible]

[illegible]

[illegible]

0011 0012
0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088 0089
0078 0079 0080 0081 0082 0088 0089 0096 0097 0098 0099 0100
0025 0026 0027 0028 0029 0030 0031
0032 0077 0148 0153 0156 0157 0158 0159 0160 0161 0162 0163
0031 0032 0153 0184 0205
0032
0032
0032 0153
0018 0019 0020 0038 0039

0164 0165 0166 0167
0034 0035 0036
0167
0168 0169 0170
0050
0014 0017 0068
0014 0017 0068
0014 0017 0068
0206 0207 0208 0209 0210 0211 0212
0213 0214 0215

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

0014 0017 0068
0014 0017 0068
0014 0017 0068
0220
0025 0077 0158 0161 0162 0221 0222 0223 0224 0225 0226 0227 0228 0229
0025 0026 0027 0028
0032 0077 0148 0153 0156 0157 0158 0159 0160 0161 0162 0163
0032 0148 0153 0158 0159 0160 0161 0162 0163
0063 0091 0092
0164 0165 0166 0167
0021
0040 0041 0042 0043 0044 0045 0046
0011 0012
0078 0080 0081 0101 0104 0147 0230 0231 0232 0233 0234 0235
0078 0080 0081 0094 0104 0233 0236 0237 0238
0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088 0090 0094 0101 0104 0239
0078 0079 0080 0081 0082 0088 0096 0098 0099 0100 0104 0177 0178 0179 0240
0078 0079 0080 0081 0082 0083 0084 0085 0087 0088 0094 0096 0104 0177 0178 0179 0180 0241 0242

0025	0026	0027	0028	0029
0030	0031			
0025	0032	0033	0104	0153
0183	0184	0221	0224	0225
0229	0243	0244	0245	0246
0247	0248	0249	0250	0251
0032	0033	0052	0104	0153
0184	0238	0250	0251	0252
0253	0254	0255		
0032	0033	0052	0104	0153
0183	0184	0247	0250	0251
0256	0257	0258	0259	0260
0261	0262	0263	0264	0265
0266	0267	0268	0269	0270
0271	0272	0273	0274	0275
0032	0033	0052	0104	0153
0181	0183	0184	0247	0250
0256	0257	0258	0259	0260
0262	0263	0264	0265	0266
0267	0268	0269	0270	0277
0278	0279	0280	0281	0282
0033	0104	0182	0183	0184
0246	0250	0251	0282	0284
0285	0286	0287	0288	0289
0290	0291	0292	0293	0294
0295	0296	0297		
0032	0033	0052	0104	0181
0183	0250	0256	0257	0258
0259	0260	0263	0264	0265
0266	0267	0278	0279	0280
0281	0282	0284	0298	0299
0299	0299	0299		
0032	0033	0104	0178	0181
0183	0250	0256	0257	0258
0259	0260	0263	0264	0265
0266	0267	0268	0278	0279
0280	0281	0282	0284	0299
0301	0302	0303	0304	0305
0306	0307	0308	0309	0310
0311	0312	0313	0314	
0033	0052	0104	0178	0181
0182	0183	0184	0205	0250
0256	0257	0258	0259	0260
0262	0263	0264	0265	0266
0267	0268	0269	0270	0277
0278	0279	0280	0281	0282
0284	0301	0302	0307	0311
0312	0313	0315	0316	
0032	0033	0052	0104	0153
0178	0181	0183	0184	0205
0235	0247	0250	0256	0257
0258	0259	0260	0262	0263
0264	0265	0266	0267	0268
0270	0301	0306	0316	0317
0032	0077	0153	0238	0252
0320	0321	0322	0323	0324
0325	0326	0327		
0077	0104	0148	0158	0178
0182	0183	0184	0256	0262
0282	0294	0302	0312	0313
0328	0329	0330	0331	0332
0333	0334	0335	0336	0337
0338	0339	0340	0341	0342
0343	0344	0345	0346	
0018	0019	0020	0038	0104
0347				
0104	0112	0113	0147	0348

0095 0104 0167 0185 0186 0187 0188 0189 0349
0095 0104 0167 0185 0186 0187 0188 0189
0095 0104 0167 0185 0186 0187 0188 0189
0034 0035 0036 0350 0351
0095
0137 0138 0352 0353 0354 0355
0040 0041 0042 0043 0044 0045 0046
0129 0356
0190
0104
0130 0357 0358
0102 0168 0169 0170 0359
0104
0023 0133 0134 0360 0361
0023 0133 0134
0050 0129 0130
0050 0129 0130
0015
0015
0014 0017 0068
0014 0017 0068
0014 0017 0068
0104 0214 0362

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

0077
0076 0077
0013 0014 0015 0016 0017
0024
0021
0011 0012
0025 0077 0158 0161 0162 0221 0222 0223 0224 0225 0226 0227 0228 0229
0024
0032 0148 0153 0156 0157
0031 0032 0153 0184 0205
0182
0018 0019 0020
0164 0165 0166 0167

0167
0076 0077
0050
0013 0014 0017 0068
0013 0014 0017 0068
0013 0014 0017 0068
0021

[illegible]

0018
0018
0011 0012
0018 0019
0018
0014 0017 0068
0014 0017 0068

0011 0012
0018 0019
0018
0014 0017 0068
0014 0017 0068
0147
0011 0012

0018 0019
0018
0014 0017 0068
0014 0017 0068
0103
0031 0032 0104 0178 0181 0250 0256 0262 0263 0264 0265 0266 0267 0277 0278 0279 0280 0281 0282 0301 0302 0303 0307 0312 0313 0315 0328 0329 0330 0331 0346 0395 0396 0397
0078 0081 0105 0178 0180 0234 0398 0399 0400
0094 0178 0401 0402 0403 0404 0405 0406 0407
0078 0081 0094 0104 0105 0106 0107
0024
0104 0108 0109
0093 0104 0108 0110 0111
0094 0104 0112 0113

0114 0115 0116 0117 0118 0119 0120 0121 0122 0123 0124 0125 0126 0127 0128
0137 0138
0050 0129 0130
0023 0131 0132 0133 0134 0135 0136
0023 0133 0134
0190 0408
0409
0104 0410
0139 0140 0141 0142 0143 0144 0145 0146
0011 0012
0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088 0089 0090
0032
0032
0032
0032
0024
0018 0093

[illegible]

[illegible]

0095 0104 0167 0185 0186 0187 0188 0189
0063
0018 0020 0037 0038 0039 0104
0104 0190
0104
0191
0191
0171 0172 0173
0050 0129 0130
0040 0041 0043 0044 0045 0046 0175 0192 0193 0194 0195 0196 0197
0198

0199
0023 0133 0134
0103
0176
0078 0079 0080 0081 0082 0083 0084 0085 0087 0088 0096 0176 0177 0178 0179 0180
0032 0033 0181
0032 0181
0033 0181 0182 0183 0184
0176
0078 0081 0094 0105 0106 0107
0024
0020 0037 0038 0039
0020 0037 0038 0039
0020 0037 0038 0039
0094 0104 0112
0095 0104 0167 0185 0186 0187 0188 0189
0095
0040 0041 0043 0044 0045 0046 0175 0192 0193 0194 0195 0196 0197

0171 0172 0173
0137 0138
0104 0190
0198
0191
0191
0050 0129 0130
0023 0133 0134
0104
0199
0139 0140 0142 0143 0144
0145 0146

[illegible]

[illegible]

0040 0041 0043 0044 0045
0046 0175 0192 0193 0194
0137 0138
0103
0020 0037
0174

[illegible]

[illegible]

0103
0020 0037
0174
0095
0171 0172 0173 0241 0408

[illegible]

[illegible]

0411 0412 0413 0414
0411 0412 0413 0414
0018
0411 0412 0413 0414
0018

0021
0021
0011 0012
0025 0026 0027 0028 0029 0030 0031
0032 0077 0148 0153 0156 0157 0158 0159 0160 0161 0162 0163
0031 0032 0153 0184 0205
0182
0018
0018 0019 0020
0095 0167
0047 0048 0049 0415 0416

[illegible]

[illegible]

0417
0418 0419 0420 0421 0422 0423 0424
0417
0417 0425 0426
0029 0417 0427
0020 0057 0428
0429
0430
0431 0432
0052 0433
0434

[illegible]

[illegible]

0078 0081 0089 0233 0437 0438
0439
0130 0440
0441
0065 0066 0075 0442
0130
0020 0037
0037 0435 0436
0431 0443

[illegible]

[illegible]

[illegible]

0021
0076 0077
0011 0012
0076 0077
0025 0026 0028 0444
0025 0026 0027 0028 0029 0030 0031
0018
0018 0019 0020

0021
0011 0012
0076 0077
0025 0026 0028 0444
0025 0026 0027 0028 0029
0030 0031
0018
0018 0019 0020

[illegible]

[illegible]



Function List

Index	Special Function	Index
0001	Clearing Water Required	0002
0003	10 A	0004
0005	Front right-hand wheel solenoid valve	0006
0007	Rear right hand wheel electrovalve	0008
0009	Charge cancellation	0010
0011	Reset maintenance indicator	0012
0013	Voice synthesiser test	0014
0015	Erase personal details	0016
0017	Status of emergency battery	0018
0019	Steering wheel angle sensor calibration	0020
0021	Read the CO2 value	0022
0023	VIN code	0024
0025	Initialisation of the EGR valve	0026
0027	Initialisation of the single mixer (EGR butterfly)	0028
0029	Forced regeneration of the Particulate Filter while stationary	0030
0031	Particulate filter replacement	0032
0033	Replacement of the particle emission filter	0034
0035	Pressurise the hydraulic circuit	0036
0037	Calibration of the steering wheel angle sensor	0038
0039	Deactivation of the automatic application of the electric parking brake function	0040
0041	Write wheel transmitter module identifiers by references	0042
0043	Front left hand wheel	0044
0045	Rear right hand wheel	0046
0047	Automatic Addressing and Learning of all engines	0048
0049	Air distribution motor	0050
0051	Test of the ultrasonic sensors	0052
0053	Step 1 : Discharging and charging of the traction battery	0054
0055	Traction battery replacement procedure	0056

0057	Calibration of the steering wheel angle sensor : C2, C3, C3 pluriel, New Look C5 with ESP MK60	0058
0059	VIN configuration	0060
0061	Pairing of the ESP ECU and engine management ECU	0062
0063	CALIBRATION OF THE STEERING WHEEL ANGLE SENSOR	0064
0065	Clutch counters.	0066
0067	Gear lever and steering wheel gear shift control counters	0068
0069	Programming sequence(gearbox and clutch actuators)	0070
0071	Gearbox actuator programming	0072
0073	Set gearbox actuator to removal position	0074
0075	Clutch cycle counters	0076
0077	Particle filter replacement	0078
0079	Upstream and downstream oxygen sensors	0080
0081	Injectors	0082
0083	Fuel pressure regulation electrovalve	0084
0085	Rail pressure sensor	0086
0087	Inlet camshaft dephasing electrovalve	0088
0089	Purge canister solenoid valve	0090
0091	Initialise lateral acceleration sensor	0092
0093	Calibration of the gyrometer/accelerometer sensor	0094
0095	Replacement of the automatic gearbox oil	0096
0097	Inlet and exhaust camshaft phase sensor	0098
0099	Variable valve lift motor	0100
0101	Canister purge electrovalve	0102
0103	Maintenance indicator reset	0104
0105	Accelerator pedal	0106
0107	Replacement of the vacuum pump	0108
0109	Bleeding of the hydraulic block ABS MK100	0110
0111	Bleeding of the hydraulic block ESP MK100	0112
0113	Accelerator pedal initialisation	0114
0115	Setting of the gearbox actuator to the fitting position	0116
0117	Clutch actuator programming operations	0118
0119	Initialisation of the gearbox actuator	0120

0121	Replacement of the clutch	0122
0123	Replacement of the gear lever	0124
0125	Replacement of the gearbox actuator	0126
0127	Replacement of the piloted manual gearbox and of the piloted manual gearbox ECU	0128
0129	Customer configuration	0130
0131	Configuration of the hands-free kit	0132
0133	Radio configuration	0134
0135	Illumination table/ Button lighting level	0136
0137	Locking	0138
0139	Check of the detection of a hands-free remote control by the front left door handle aerial	0140
0141	Check of the detection of a hands-free remote control by the boot external aerial	0142
0143	Check of the detection of a hands-free remote control inside the vehicle (central armrest)	0144
0145	Check of the detection of a hands-free remote control located outside the vehicle	0146
0147	Initialisation of auto-adaptation	0148
0149	Turbocharger programming	0150
0151	PF differential pressure sensor programming	0152
0153	Forced regeneration, vehicle moving	0154
0155	REPLACEMENT OF THE ADDITIVE PUMP	0156
0157	ECU replacement or downloading (counters)	0158
0159	Change of soft tank	0160
0161	Filling of the tank	0162
0163	INJECTOR REPLACEMENT (SID 803 A ECU)	0164
0165	Partial programming	0166
0167	Read oil wear counter value	0168
0169	Sensor programming check	0170
0171	Put in fitting / removal position	0172
0173	Electric parking brake calibration	0174
0175	Valve programming check	0176
0177	Check the timing adjustment	0178
0179	Canister discharge electrovalve	0180

0181	Programming of the total quantity of additive injected into the particulate emission filter	0182
0183	Filling of the diesel additive adding reservoir	0184
0185	Write oil wear counter value	0186
0187	Replacement of the automatic gearbox without its ECU	0188
0189	Replacement of the automatic gearbox and its ECU	0190
0191	Replacement parts	0192
0193	Initialisation of the wheel transmitter modules	0194
0195	Reading of the change of fit parameters	0196
0197	Return to the original fit	0198
0199	Initialisation of the rain and brightness sensor	0200
0201	Engine compartment 2	0202
0203	Steering wheel angle sensor programming	0204
0205	Filling of the diesel additive tank	0206
0207	Recycling motor	0208
0209	Front LH mixing motor	0210
0211	Rear LH mixing motor	0212
0213	Reference height programming	0214
0215	Pressurisation	0216
0217	Reset maintenance mileage	0218
0219	Reset break-in table	0220
0221	Initialisation of the turbocharger 2 turbine valve (VT2)	0222
0223	Initialisation of the air flowmeter	0224
0225	O2 sensor initialisation	0226
0227	Regeneration when stationary	0228
0229	Cylinder compression test	0230
0231	Writing of the ethanol content	0232
0233	Oxygen sensors	0234
0235	Replacement of the cooling fan	0236
0237	Control unit	0238
0239	Replacement control unit MED17.4	0240
0241	Downloading identification	0242

0243	Injectors classification	0244
0245	Initialisation of the air flow sensor	0246
0247	EGR electrovalve replacement	0248
0249	Replacement of the turbocharger turbine valve 2	0250
0251	Filling of the additive reservoir	0252
0253	Replacement of the Particle Emission Filter (PEF)	0254
0255	Configuration of the quantity of additive present in the particle emission filter	0256
0257	Injector 1 classification	0258
0259	Injector 3 classification	0260
0261	Programming of the total quantity of additive	0262
0263	Replacement of injector 1	0264
0265	Replacement of injector 3	0266
0267	Replacement of the turbo	0268
0269	Replacement of the differential pressure sensor	0270
0271	EGR electrovalve	0272
0273	Differential pressure sensor	0274
0275	Flowmeter	0276
0277	Initialisation of the 4 diesel injectors	0278
0279	Initialisation of diesel injector 2	0280
0281	Initialisation of diesel injector 4	0282
0283	Change of RAS (turbo air cooler) by-pass	0284
0285	Codes of the 6 injectors	0286
0287	Code of the injector 2	0288
0289	Code of the injector 4	0290
0291	Code of the injector 6	0292
0293	EGR valve programming2 (Close to the bumper)	0294
0295	Initialisation of the oxygen sensor	0296
0297	Change of EGR valve 2	0298
0299	Replacement of the EGR valve	0300
0301	Change of engine block without the flowmeter	0302
0303	Programming of the quantity of additive remaining in the reservoir	0304
0305	Replacement of diesel high pressure pump	0306
0307	Replacement of the EGR exchanger	0308
0309	96 763 081 80	0310

0311	Replacement of the ancillary drive belt	0312
0313	Replacement of the cylinder head	0314
0315	Change of EGR valve	0316
0317	Matching	0318
0319	Replacement of the particle emission filter differential pressure sensor	0320
0321	Injector characterisation IMA 4 pts	0322
0323	Replacement particle emission filter	0324
0325	Priming of the additive system if replacing parts (additive reservoir, pump or pipes)	0326
0327	Replacement of the EGR doser butterfly and replacement of the EGR doser by-pass butterfly	0328
0329	Classification of injector 2	0330
0331	Classification of injector 4	0332
0333	Injector 1 replacement	0334
0335	Injector 3 replacement	0336
0337	Replacement of the exhaust gas recycling valve	0338
0339	Replacement of the turbocharger	0340
0341	Replacement of the engine block without the flowmeter	0342
0343	Replacement of the cylinder block bearing	0344
0345	Replacement of the exchanger of the exhaust gas recycling solenoid valve	0346
0347	Clutch pedal position sensor calibration	0348
0349	Semi-automatic configuration	0350
0351	Gearbox programming	0352
0353	Pre-tensioners	0354
0355	Satellites	0356
0357	Thatcham mode configuration	0358
0359	Orientation of infrared sensors	0360
0361	Different configuration for the 16 levels	0362
0363	Vehicle height sensor programming	0364
0365	Audio parameter configuration	0366
0367	Reinitialisation of the motor's thermal protection	0368
0369	Programming of the motorised tailgate	0370
0371	Configuration of vehicle options	0372
0373	Interrogation of the status of the active damper function	0374

0375	Initialising of the active damper	0376
0377	Exhaust gas recycling electric throttle	0378
0379	Replacement of diesel additive tank or pipes between diesel additive tank and fuel tank	0380
0381	Slope sensor calibration	0382
0383	EGR electrovalve initialisation	0384
0385	Oxygen sensor initialisation	0386
0387	Additive circuit pipe and pump replacement	0388
0389	Longitudinal acceleration sensor programming	0390
0391	Programming of all sensors	0392
0393	EU11	0394
0395	Change to the air flowmeter	0396
0397	High pressure pump replacement	0398
0399	Inlet camshaft dephaser solenoid valve	0400
0401	Learning pairing	0402
0403	Replacement of the accelerator pedal	0404
0405	Engine	0406
0407	Engine speed sensor target	0408
0409	Configuration of the intrusion alarm siren	0410
0411	Without OBD output	0412
0413	Without shift lock	0414
0415	Driver's mixing motor	0416
0417	Read the recognition	0418
0419	ECUs with memorised faults	0420
0421	ECUs with communication faults	0422
0423	Vehicle definition- Equipment	0424
0425	Changing the engine ECU	0426
0427	Read injector codes (IMA)	0428
0429	Bleed ASR * hydraulic valve block8.0	0430
0431	Maintenance limit	0432
0433	Body height sensor replacement	0434
0435	Calibration of the longitudinal and lateral acceleration sensor	0436
0437	Engine speed sensor or engine speed sensor target	0438
0439	Reading the current configuration	0440
0441	Particulate filter forced regeneration	0442

0443	Reset Maintenance indicators	0444
------	------------------------------	------

Special Function
Equalisation charge
Front left-hand wheel solenoid valve
Rear left hand wheel electrovalve
Pump motor
Erasing the totals
Key programming
Telematic unit cooling fan test
Fibre optic test
Bleeding
Longitudinal acceleration sensor calibration
ECUs present
Particle filter regeneration
Initialisation of the double throttle metering valve (EGR throttle + inlet air heater throttle)
Initialisation of turbo limits
Forced regeneration of the Particulate Filter while driving
Forced regeneration, vehicle stationary
Depressurise the hydraulic circuit
Bleeding of the hydraulic circuit
Reactivation of automatic application of the electric parking brake
Read wheel transmitter module identifiers
Program wheel transmitter modules of main wheel set
Front right hand wheel
Rear left hand wheel
Air inlet and recycling motor
Personalisation menu configuration
ECU replacement
Step 2 : Traceability of the maintenance
Traction battery ECU replacement procedure

Reading of the calibration status of the steering wheel angle
Zeroing of the service indicator
Calibration of the yaw speed sensor
Initialise ESP sensors
Gearbox counters
Change battery
Programming of the clutch actuator
Gearbox actuator initialisation
Set gearbox actuator to refitting position
Additive tank top up or replacement (low additive level LED illuminated)
Motorised throttle unit
Accelerator pedal sensor
Catalytic converter
Fuel HP pump
Camshaft phase sensor
Inlet pressure sensor
Timing
Initialise pressure sensor
Initialising the autoadaptives
Fuel sender / pump module
Inlet and exhaust camshaft dephasing electrovalve
Variable valve lift system position sensor
Configuration
Manual configuration
Oxygen sensor
Tyre above specification
Replacement of the ESP ECU
Oil wear counter
Setting of the gearbox actuator to the removal position
Counters
Gearbox actuator programming operations
Sequence of programming operations

Replacement of the clutch actuator
Replacement of the gearbox
Replacement of the piloted manual gearbox and of the piloted manual gearbox actuators
Replacing the gearbox ECU
Vehicle configuration
Configuration of the screen
Antenna configuration
Illumination table/ Screen lighting level
Unlocking
Check of the detection of a hands-free remote control by the front right door handle aerial
Check of the detection of a hands-free remote control inside the vehicle (dashboard)
Check of the detection of a hands-free remote control inside the vehicle's boot
Check of the detection of a hands-free remote control inside the vehicle (inside front and boot)
EGR valve programming
Flowmeter programming
High pressure pump programming
Replacement of the additive tank
Programming of the exhaust gas recycling valve
Configuration of the amount of additive in the particle filter
Change of metering pump
Change of tank and pump
Programming of the neutral position of the selection lever position sensor
Full programming procedure
Sensor programming
Erasing sensor addresses
Cable tensioning
Reading of the oil wear counter
Initialisation of the autoadaptive values
Checking the immobiliser code in the engine management ECU
Inlet camshaft dephaser

Forced regeneration of the particle filter, vehicle stationary
Replacement of the diesel additive reservoir, of the pump or of the pipes
Programming of the neutral position
Replacement of the ECU without the automatic gearbox
Overall check of the sensors
Deactivation / Activation of the tyre under-inflation detection function
Erasing of the secondary wheels
Over specification tyre fit
Programming of the actuators
Engine compartment 1
Forced regeneration of the particle emission filter
Steering wheel angle calibration
Automatic addressing and motor programming
Distribution motor
Front RH mixing motor
Rear RH mixing motor
Depressurise
Reset maintenance mileage + maintenance number
Reset maintenance number done
Configuration identification
Initialisation of the EGR throttle
Initialisation of the engine ECU
ECU REPLACEMENT (COUNTERS)
Regeneration when driving
Write VIN
Replacement of the BioFlex engine management ECU
Cylinder reference sensor
Fuel pump
Programming / matching
Inlet and exhaust camshaft dephaser
Replacement control unit MED17.4.2

Initialisation of the EGR butterfly
Injector replacement
EGR butterfly replacement
Replacement of the additive reservoir, of the pump or of the pipes
Electric EGR valve replacement
Top up diesel additive tank
Classification of the 4 injectors
Injector 2 classification
Injector 4 classification
Replacement of the 4 injectors
Replacement of injector 2
Replacement of injector 4
Air flow sensor replacement
Replacement of the high pressure pump or the flow regulation valve
Turbo
High pressure pump
Pairing
Initialisation of diesel injector 1
Initialisation of diesel injector 3
Change of air mixer
Replacement of the oxygen sensor
Code of the injector 1
Code of the injector 3
Code of the injector 5
EGR valve programming1 (passenger compartment side)
Initialisation of the air mixer
Change of EGR valve 1
Change of high pressure pump with its fuel flow regulator
Replacement of the air flow sensor
Change of engine block with the flowmeter
Temporary reactivation of the Stop and Start function (for a maximum distance of 10 km)
Replacement of the fuel flow regulator
96 749 676 80
Other value

Replacement of the exhaust manifold
Replacement of the reversible alternator
Replacement of the diesel high pressure rail
Replacement of the engine block and cylinder head with the flowmeter
Configuration of ECU
Injector characterisation IMA 5 pts
Initialisation of the additive level when filling or replacing the additive reservoir
EGR mixer butterfly replacement
Classification of injector 1
Classification of injector 3
Replacement of the ECU
Injector 2 replacement
Injector 4 replacement
Replacement of the EGR exchanger bypass
Replacement of the flowmeter
Replacement of the impeller block
Replacement of the ancillaries drive belt
Oxygen sensor replacement
Identification of the configuration
Read / Write counters
Front airbags
Side airbags
Configuration of the instrument panel
Configuration of the detection peak
Identical configuration for the 16 levels
Vehicle reference height adjustment
Configuration of the Hands Free Kit
Configuration of the Nomad unit
Erasing of the customisable position programmed by the motorised tailgate
Erasing of the motorised tailgate programming
Configuration of client services
Reactivation of the function mass damper

Exhaust gas recycling electric valves
Diesel high pressure pump
Part removal / refitting
View and print all configuration parameters
Air flowmeter initialisation following engine ECU replacement
Replacement or filling of the diesel additive tank
Transverse acceleration sensor programming
Master cylinder pressure sensor programming
EU10
Option INT
Filling of the additive reservoir or pouch
All the engine management ECU programmed auto-adaptive values
Vacuum pump
Replacement of the motorised butterfly housing
Replacement of injectors
Engine speed sensor
Downloading
REPLACEMENT OF THE ADDITIVE BAG TANK
With OBD output
With shift lock
Passenger's mixing motor
ECUs woken up and communicating
ECUs with permanent faults
General information on configuration- Summary of ECUs present on the multiplex networks
Passive safety
Programming parameters
Bleed ESP * hydraulic valve block8.0
ECU internal fault
Reset maintenance information
Read CO2
Decalibration of the longitudinal and lateral acceleration sensor
Mechanical parts linked with the engine combustion (cylinder head, valve, ...)
Forced particle filter regeneration
Gear lever counter

Initialisation of the EGR throttle metering valve