

01CB	3-Time flasher setting
01A7	A/f SEN 1 learn CLR
01A8	A/f SEN 2 learn CLR
0111	A/f initial learning
01A9	A/f sen lean clr
0112	A/f sen1(b1) p1271/p1272
0113	A/f sen1(b1) p1273
0114	A/f sen1(b1) p1274
0115	A/f sen1(b1) p1275
0116	A/f sen1(b1) p1276
0117	A/f sen1(b1) p1278/p1279
0118	A/f sen1(b2) p1281/p1282
0119	A/f sen1(b2) p1283
011A	A/f sen1(b2) p1284
011B	A/f sen1(b2) p1285
011C	A/f sen1(b2) p1286
011D	A/f sen1(b2) p1288/p1289
011E	A/f sensor1(b1) p014c/p014d
011F	A/f sensor1(b1) p015a/p015b
0120	A/f sensor1(b2) p014e/p014f
0121	A/f sensor1(b2) p015c/p015d
02DC	AIR damper valve programming(r044)
016A	ANS back I-KEY lock
016B	ANS back I-KEY unlock
01CC	ANTI-lock OUT SET
019A	AUTO AIM
016C	AUTO lock SET
01CD	AUTO lock function
020D	AUTO relock timer
01CE	AUTO unlock TYPE
01CF	AUTO unlock function
01D0	Acc battery saver set
0167	Act or deAct roller bench test mode
01A6	Activate operation
0277	Activation of fuel pump
0122	Active control engine mounting a
0123	Active control engine mounting b
02DD	Adaptives after regenerating pf

02DE	Adaptives on air intake flap malfunction
0100	Adjust clutch a capacity
0101	Adjust clutch b capacity
023C	Adjust height ini
02C2	Adjustment OF headlamps VIA diagnosis
02DF	After DPF regeneration
02E0	After DPF replacement
02E1	After camshaft POS sensor replacement
02E2	After crankshaft POS sensor replacement
02E3	After fuel injector replacement
02E4	After fuel rail pressure sensor replacement
02E5	After high pressure fuel pump replacement
02D1	After pressure line replacement
02E6	After tc solenoid valve replacement
02E7	After turbocharger replacement
02E8	Aft electric thrttl cntrl actuator rplcmnt
019B	Aim check
02E9	Air flow meter programming
0258	Air flow reduction setting
02EA	Air fuel ratio sensor
0259	Air inlet change setting
023F	Ambience lamp fade-in/out
0293	Anc setting
01D1	Answer back
016D	Answer back function
01D2	Answer back i-key lock unlock
020E	Answer back with i-key lock
020F	Answer back with i-key unlock
01D3	Answerback I-KEY lock unlock
01D4	Answerback keyless lock unlock
016E	Anti key lock in functi
0210	Anti key lock in function
026D	Aroma diffuser setting
026E	Aroma setting
0294	Asc setting
01D5	Auto acc fnctn (audio/navi set after ign off)
01D6	Auto light logic set
01D7	Autofold function

016F	Automatic door lock select
0170	Automatic door unlock select
0171	Automatic lock/Unlock select
0172	Battery saver set
0278	Bleeding of high pressure fuel circuit
025A	Blow set
026F	Blower motor setting
01D8	Box i-key operation mode set
02B2	Breaking IN OF refrigerant compressor
02EB	CC/SL prgrm
0263	CVT inspection
0264	Calib data
021F	Calibrating camera image (dr-side camera)
0220	Calibrating camera image (front camera)
0221	Calibrating camera image (pass-side camera)
0222	Calibrating camera image (rear camera)
0223	Calibrating camera image 2 (dr-side camera)
0224	Calibrating camera image 2 (front camera)
0225	Calibrating camera image 2 (pass-side camera)
0226	Calibrating camera image 2 (rear camera)
0279	Camshaft reference adaptation
01D9	Cargo door set
0253	Cause OF AUTO-CANCEL 4
0254	Cause OF auto-cancel 2
0195	Cause of auto-cancel
0255	Cause of auto-cancel 1
029F	Cause of auto-cancel 2
0256	Cause of auto-cancel 3
029B	Cause of auto-cancel 4
029C	Cause of auto-cancel 5
029D	Cause of auto-cancel 6
0227	Cause of bsw cancel
0228	Cause of entry cancel
0229	Cause of ipa cancel
022A	Cause of ldw cancel
022B	Cause of psr cancel
019E	Center sen distance set
02D8	Charge current limitation history

02CE	Chassis control information clear
0295	Chassis dynamometer mode
02A5	Check component GLOW output stage
0124	Check fuel lines
02CC	CI1 break-in function
025B	Clean SW set
02BE	Clear alarm history
0272	Clear battery info
023D	Clear height ini
0125	Clsd thl POS learn
0207	Clutch touchpoint adjst
0271	Clutch 1 position learning
02CD	Clutch 1 zero position learning
0102	Clutch a touch point
0103	Clutch b touch point
0104	Clutch gear learning
02EC	Clutch pedal END stroke
0265	Clutch point
0126	Cml b/dchrg crnt clear
02ED	Commercial Vehicle idle speed mod
02C9	Comp oprr set at def mode (tim/rmt climt cont)
01AA	Config clr
0173	Confirm dongle ID
0174	Confirm key fob ID
01DA	Confirm tcu ID
0266	Conform cvtf deteriortn
027A	Control deviation charge air system
019F	Corner sen distance set
0127	Cumulative sub-battry dischg current clear
0175	Custom a/light setting
0176	D/lock Vehicle speed AJT
01AB	DPF data clear
02EE	DPF relative pressure sensor
01DB	Daytime running light setting
01DC	Daytime running lights
0168	Decel g sen calibration
01AC	Decrement IDLE speed
0105	Delete clutch a learning value

0106	Delete clutch b learning value
0107	Delete gear position learning value
01AD	Df exh pres SEN learn CLR
027B	Diesel particle filter regeneration
01AE	Dif ex pre lrn CLR
0108	Disengaging the gear
0177	Door lock-Unlock SET
02CA	Door motor starting position reset
01DD	Drop wipe func set
0240	E/g SW ill heart beat function
0241	E/g SW illumi fade-in/out
01AF	E/r air temp SEN learn CLR
01B0	EGR adaptives
02EF	EGR bypass programming
01B1	EGR control valve closed position learning
0128	EGR system p0400
0129	EGR system p1402
02F0	EGR valve programming
01B2	EGR/V learn CLR
0247	EGR/v learn clr
012A	EVAP sml leak p0440/p1440
01A2	EVAP system close
012B	EVAP v/s leak p1441
012C	Egre-bpt vlv p0402
01B3	Electric intake valve timing control learning
0267	Electric o.p. air bleeding
02B5	Electrical contact ACTUATORS/BRAKE clearance setting
02F1	Engine adaptives
0268	Engine brake adj.
012D	Engine coolant bypass valve
01DE	Engine speed
0211	Engine start BY I-KEY
0178	Engine start by i-key
01B4	Enter injectr calib data
02F2	Enter injector codes
0109	Erase cltch enggmnt prsr crctn
0296	Erase key allotement user
0297	Erase last driver information

0269	Erase learning value
0298	Erase personal settings
02A6	Ethanol reading frequency counter reset
021C	Ets air bleeding
012E	Evp sml leak p0442/p1442
012F	Evp v/s leak p0456/p1456
0248	Exh fuel inj data clear
01B5	Exh prsr SEN learn clear
02F3	Exhaust flap low setting
0197	Exit seat slide setting
0198	Exit tilt setting
0299	FEB operation mileage
0257	Feb default setting
029E	Feb operation mileage
022C	Fine tuning of birds-eye view
024D	Flipper door
01DF	Fog lamp override
0242	Foot lamp fade-in/out
01E0	Fr rr drip
0270	Fragrance setting
025C	Fre memory set
022D	Front wide-view fixed guide line correction
01B6	Fuel pressure release
02F4	Fuel pump programming
02F5	Fuel sply prev
02B9	Function test of solenoid valve while driving
026A	Fwd clutch point learning
0130	G sensor calibration
025D	Gas sensor adjustment
010A	Gear position test
027C	H/P fuel pump total starts counter clear
0179	HORN with keyless lock
02CF	Hands-free card reading
017A	Hazard answer back
017B	Hazard lamp set
01E1	Head light timer
01E2	Headlamp washer auto set
010B	High oil temp warning history

02F6	High pressure fuel circuit fault finding
0131	Ho2s1(b1) p0130
0132	Ho2s1(b1) p0131
0133	Ho2s1(b1) p0132
0134	Ho2s1(b1) p0133
0135	Ho2s1(b1) p0134
0136	Ho2s1(b1) p1143
0137	Ho2s1(b1) p1144
0138	Ho2s1(b2) p0150
0139	Ho2s1(b2) p0151
013A	Ho2s1(b2) p0152
013B	Ho2s1(b2) p0153
013C	Ho2s1(b2) p0154
013D	Ho2s1(b2) p1163
013E	Ho2s1(b2) p1164
013F	Ho2s2(b1) p0137
0140	Ho2s2(b1) p0138
0141	Ho2s2(b1) p0139
0142	Ho2s2(b1) p1146
0143	Ho2s2(b1) p1147
0144	Ho2s2(b2) p0157
0145	Ho2s2(b2) p0158
0146	Ho2s2(b2) p0159
0147	Ho2s2(b2) p1166
0148	Ho2s2(b2) p1167
0149	Ho2s3(b1) p0143
014A	Ho2s3(b1) p0144
014B	Ho2s3(b1) p0145
014C	Ho2s3(b1) p1169
014D	Ho2s3(b1) p1170
017C	Horn chirp set
0243	Hspl illumination fade-in/out
01E3	Hzrd rem set
0212	I-key function
017D	ID read
017E	Id regist
014E	Idle air vol learn
01E4	Ign battery saver set

01E5	Ign/acc battery saver
014F	Ignition timing ADJ
017F	Ill delay set
01B7	Increment IDLE speed
0208	Initialization
022E	Initialize camera image calibration
01B8	Inj ADJ val clr
0249	Inj ADJ val regist
02F7	Injection pump adaptatives
027D	Injector injection quantity adjustment
01B9	Injector learning value clear
0180	Inside ant diagnosis
01E6	Intelligent key link set
02F8	Interval of oil change (ocs) oxidation
0213	Keyless function
0196	Laser beam adjust
02A7	Learned values reset - fuel system high pressure pump
02A8	Learned values reset - o2 sensor upstream of cat
02A9	Learned values reset - rail pressure sensor
02AA	Learned values reset - turbocharger
02D9	Learning
019C	Levelizer adjustment
0273	Li-ion battery capacity balancing
0181	Lo-batt of key fob warn
0214	Low batt of key fob warn
02F9	Low pressure egr valve programming
0215	Lug room engine start
02BA	Manual initial startup
02BF	Manual transmission main shifter shaft position sensor
0244	Map&persnl lamp fade-in/out
0209	Max. cltch strk msrmnt
029A	Milliwave radar adjust
0150	Misfire count (past)
0151	Misfire count (real-time)
01BA	Mixture ratio learning value clear
022F	Mod function
0245	Mood lamp fade-in/out
01E7	Multi answer back SET

01E8	Multi answer back set
0230	NON-VIEWABLE AREA reminder
02FA	NOX trap
02B8	Normalization
02B3	Normalization OF actuator motors
02FB	Number of starting 1
02FC	Number of starting 2
02FD	Number of starting 3
02FE	Number of starting 4
01BB	OC data clear
02DB	Oc data clear
02FF	Oil change interval (ocs): dilution
010C	Oil temp history reset
027E	Ope time basic diag temp sen upstream scr cat
027F	Opr time basic diag of tm neutral POS sen
0280	Opr time basic diag scr catalytic convtr
0281	Oxidation catalytic converter
0300	P/flt diff prs sen
0216	P/w down delay
02DA	P062f exclusive function
0182	PW down SET
0183	Panic alarm SET
0217	Panic alarm delay
01E9	Panic alarm set
021D	Parking width level setting
0231	Parts with door mirror auto fold func
0152	Poor ENG pwr p1196
0218	Power slide door delay
0232	Predictive course line display
0301	Pressure regulation adaptives
01BC	Programmed values
02D0	Programming the hands-free card
0302	Prpr rich sen prog
01BD	Pto registration
0246	Puddle lamp fade-in/out
01BE	Pump leant clear
0153	Purg cn/v&S/V p1493
0154	Purg flow p0441

0155	Purg flow p1447
0156	Purg vol cn/v p1444
01EA	Pw down set
0282	Qk tch in of zero qunty calib val at idl
0283	Qk tch in zero qunty calib val while driving
0184	R lamp timer logic set
01EB	Rain SEN wip func set
01EC	Rain sensor
02B6	Re learning
010D	Read clutch gear learning data
026B	Read ip chara - replacement tcm
010E	Read ip chara written data
0233	Rear center line setting change
025E	Rear temp set correct
0234	Rear wide-view fixed guide line correction
01ED	Rear wiper link with reverse setting
025F	Rec memory set
020B	Register/switch ID
01EE	Remo CONT ID erasur
01EF	Remo CONT ID regist
01F0	Remo cont ID confir
01F1	Remo cont ID erasur
01F2	Remo cont ID regist
01F3	Remote climate cont answer back function
01F4	Remote engine starter
0284	Replace diesel particulate filter
02BB	Replacement of transfer unit
01BF	Reset injectr adaptative
0285	Reset learned values for adblue metering
0286	Reset of contamination level of air filter
0287	Reset of lambda values
0288	Reset of learned values of cmsft hall SEN
02C3	Reset of operating hours counter of l POS DTRL turn SIG
02C0	Reset of operating hours counter of r POS DTRL turn SIG
02C4	Reset operating hours counter of fl lamp fan motor l
02C1	Reset operating hours counter of fr lamp fan motor l
01C0	Reset pump forcefeeding
0185	Reset setting value

0289	Resetting of adaption values
02BC	Resetting of learned values of solenoid valve
02BD	Resetting oil service data
01F5	Retained pwr set
01F6	Retractable mirror set
024E	Roof latch
024F	Roof state learning
0250	Roof state reset
0251	Roof/trunk/parcel shelf
0186	Room lamp bat sav set
0187	Room lamp off time set
01F7	Room lamp on at lock
0188	Room lamp on time set
0189	Room lamp timer set
01F8	Rr wip rvrs set
0274	Save battery information data
02A0	Save computer data
02D2	Save data for replacing CPU
0157	Saving data for replc cpu
0158	Sc magnetic clutch engage count clear
01F9	Scenario lighting setting
02D3	Scr malfunction history reset
0199	Seat slide volume set
018A	Security alarm SET
01FA	Security alarm set
01FB	Security alarm set (siren)
01FC	Security door lock set
0235	Select language of warning message
0219	Selective unlock function
0159	Self-learning cont
023A	Sensor customize
023B	Sensor initialise
02C8	Sensor initialize
024A	Serve regeneration
01C1	Service regene
01C2	Service regeneration
018B	Set i/l d-Unlock intcon
01FD	Set r-def timer

018C	Short cranking output
010F	Show oil temp history
01FE	Signature light setting
01FF	Siren initialize
018D	Siren set
0236	Sonar off pop-up display setting change
0303	Sox mass operation
01C3	Speed limiter
019D	St ang sen adjuStment
0169	St angle sensor adjustment
023E	Standard height level
02A1	Start obd test: catalytic converter
02A2	Start obd test: o2 sensors
028A	Status of teach in processes
0237	Steering angle sensor adjustment
02C6	Stop/start system operation cond setting
0276	Stroke sensor 0 point learning
01CA	Stroke sensor calibration
015A	Strt oprtn cntr clear
015B	Sub-starter & generator oper count clear
0200	Switch monitor
0201	Switch tpms between on/off
020C	Switching the status of tpms between on and off
015C	TCC S/V fnctn p1776
01C4	TP POS learn CLR
01A3	TP SW/TP SEN idle posi ADJ
021A	TRUNK/GLASS hatch open
02AF	Table initialization assyst
021B	Take out from window warn
015D	Target IDLE RPM ADJ
0260	Target evaporator temp upper limit setting
015E	Target idle RPM ADJ
01C5	Target ign tim ADJ
0261	Target max rpm adj at idl
02CB	Target max rpm adj at pre-climate
01C6	Tc boost control actuator position learning
028B	Teach IN OF DPF after replace OF CDI C/U
02B4	Teach IN OF actuator motors

028C	Teach IN OF sensor rotor adaptation
028D	Teach in after replac adblue metering valve
028E	Teach in boost pressure positioner
02B0	Teach in combination meter
02AB	Teach in exhaust flap controller
02AC	Teach in high pressure EGR actuator
02AD	Teach in low pressure EGR actuator
028F	Teach in of camshaft position
0290	Teach in of intake port shutoff
0291	Teach in of throttle valve stop
02AE	Teach in the ethanol proportion in the fuel
0262	Temp set correct
018E	Theft alm trg
02C7	This function only solves HVAC abnormal sound problem!
020A	Tm actr self adjst
0202	Touch sensor unlock function setting
024B	Tp POS learn clr
021E	Trailer hitch detection range adjustment
01A0	Trailer hitch mode
02B1	Transfer of manufacturer default settings
0203	Trunk open SET
018F	Trunk open delay
0204	Trunk open set
0252	Trunk opener
0190	Trunk/glass hatch open
0304	Turbocharger programming
0238	Turning radius correction
0205	Twilight on
01A4	Unit characteristics data
01A5	Unit characteristics write
02D4	Urea injector learning value clear
02D5	Urea pump learning value clear
02D6	Urea tank unit assembly learning value clear
015F	V/t control learn
0160	Valve timing adjustment
0161	Valve timing offset data clear
0162	Valve timing offset data writing
0163	Vc cut/v bp/v p1491

0292	Vcr base position learning
01C7	Vehicle func prog
0164	Vin registration
0305	Volume control valve learning value clear
01A1	Volume setting
01C8	Wastegate actuator posi learn value clear
0191	Welcome light OP SET
0192	Welcome light select
0206	Wiper link
0193	Wiper speed setting
0275	Write battery information data
02D7	Write data after replacing CPU
02B7	Write identification numbers OF tire pressure sensors
026C	Write ip chara - replacement tcm
0110	Write previous clutch learning value
02A3	Write saved data
01C9	Write starter operation count
02A4	Write v.i.n.
0165	Writing data for replc cpu
0166	Wrt fuel learn value
02C5	Zero position adjustment
024C	Zfc value reset
0239	Zoom function
0194	lock/Unlock BY I-KEY