



AutoMaker:SAIC MG

NOTES:

√ This function is supported.

X This function is not supported.

Function List

vehicle	model	model	model	model	Information	Fault	Freeze	Erase	LiveData	ActiveTest	SpecilFunc
SAIC MG	China	New MG6	EMS (Engine Management System)	Engine control module	√	√	x	√	√	√	0001 0002
SAIC MG	China	New MG6	EMS (Engine Management System)	Engine control module	√	√	x	√	√	√	0001 0002
SAIC MG	China	New MG6	EMS (Engine Management System)	Engine control module	√	√	x	√	√	√	0001 0003 0004
SAIC MG	China	New MG6	TCM (Transmission Control Module)	Transmission control module	√	√	x	√	√	√	0005
SAIC MG	China	New MG6	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	0006 0007 0008 0009 000A 000B 000C 000D 000E 000F 0010
SAIC MG	China	New MG6	SDM (Airbag Control Module)	Airbag control module	√	√	x	√	√	x	
SAIC MG	China	New MG6	SDM (Airbag Control Module)	Airbag control module	√	√	x	√	√	x	
SAIC MG	China	New MG6	IPK (instrument module)	Instrument module	√	√	x	√	√	√	0011 0012
SAIC MG	China	New MG6	IPK (instrument module)	Instrument module	√	√	x	√	√	√	0012
SAIC MG	China	New MG6	ATC (Air Conditioning Control Module)	Air conditioning module	√	√	x	√	√	√	0013
SAIC MG	China	New MG6	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	0014
SAIC MG	China	New MG6	EPS (Electronic Power Steering System)	Electronic Power Steering System (EPS)	√	√	x	√	√	x	0015
SAIC MG	China	New MG6	FICM (Navigation Entertainment System)	Navigation entertainment system	√	√	x	√	√	√	
SAIC MG	China	New MG6	FICM (Navigation Entertainment System)	Navigation entertainment system	√	√	x	√	√	√	
SAIC MG	China	New MG6	PEPS (Keyless Entry and Start System)	Keyless entry and start system	√	√	x	√	√	x	0016
SAIC MG	China	New MG6	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	x	√	√	x	
SAIC MG	China	New MG6	FVCM (Front Camera Module)	Front camera module	√	√	x	√	√	x	
SAIC MG	China	New MG6	GW (Gateway)	Gateway	√	√	x	√	√	x	0017 0018
SAIC MG	China	New MG6	TBOX (communication module)	Communication module	√	√	x	√	√	x	0019
SAIC MG	China	New MG6	PMDC (DC converter with power management)	DC converter with power management	√	√	x	√	√	x	
SAIC MG	China	New MG6	PDC (Parking Assist Control Module)	Parking assistance control module	√	√	x	√	√	√	
SAIC MG	China	New MG6	DHL (Dynamic Headlight Level Adjustment)	Dynamic headlight level adjustment	√	√	x	√	√	√	001A
SAIC MG	China	MG ZS	EMS (Engine Management System)	Engine control module	√	√	x	√	√	√	001B 0003 0004
SAIC MG	China	MG ZS	EMS (Engine Management System)	Engine control module	√	√	x	√	√	√	001B 0003 0004
SAIC MG	China	MG ZS	TCM (Transmission Control Module)	Transmission control unit	√	√	x	√	√	x	001C 001D
SAIC MG	China	MG ZS	TCM (Transmission Control Module)	Transmission control unit	√	√	x	√	√	x	001C
SAIC MG	China	MG ZS	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	0006 0010
SAIC MG	China	MG ZS	SDM (Airbag Control Module)	Airbag module	√	√	x	√	√	x	
SAIC MG	China	MG ZS	SDM (Airbag Control Module)	Airbag module	√	√	x	√	√	x	
SAIC MG	China	MG ZS	IPK (instrument module)	Instrument module	√	√	x	√	√	√	0012
SAIC MG	China	MG ZS	EPS (Electronic Power Steering System)	Electric power steering	√	√	x	√	√	√	0015
SAIC MG	China	MG ZS	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	x	√	√	x	
SAIC MG	China	MG ZS	ATC (Air Conditioning Control Module)	Air conditioning control module	√	√	x	√	√	√	0013
SAIC MG	China	MG ZS	FICM (Navigation Entertainment System)	Navigation entertainment system	√	√	x	√	√	x	
SAIC MG	China	MG ZS	FICM (Navigation Entertainment System)	Navigation entertainment system	√	√	x	√	√	√	
SAIC MG	China	MG ZS	FICM (Navigation Entertainment System)	Navigation entertainment system	√	√	x	√	√	x	
SAIC MG	China	MG ZS	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	001E 0014
SAIC MG	China	MG ZS	TPMS (Tire Pressure Control System)	Tire pressure control module	√	√	x	√	√	√	001F
SAIC MG	China	MG ZS	TBOX (communication module)	Communication module	√	√	x	√	√	x	0020 0019
SAIC MG	China	MG3	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	0021 0022 001B 0023
SAIC MG	China	MG3	TCM (Transmission Control Module)	Transmission control module	x	√	x	√	√	x	
SAIC MG	China	MG3	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	
SAIC MG	China	MG3	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock brake system (old ABS)	√	√	x	√	√	√	0024 0025
SAIC MG	China	MG3	SDM (Airbag Control Module)	Airbag module	√	√	x	√	√	x	
SAIC MG	China	MG3	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	0026 0027 0028 0029
SAIC MG	China	MG3 Zero	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	0021 001B
SAIC MG	China	MG3 Zero	TCM (Transmission Control Module)	Transmission control module	√	√	x	√	√	x	002A
SAIC MG	China	MG3 Zero	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	002B

SAIC MG	China	MG3 Zero	SDM (Airbag Control Module)	Airbag control unit	√	√	x	√	√	x	002C
SAIC MG	China	MG3 Zero	IPK (instrument module)	Combination instrument	√	√	x	√	√	√	0012 0011
SAIC MG	China	MG3 Zero	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	002D 002E 002F 0030
SAIC MG	China	MG3 Zero	RS (rainfall sensor)	Rain sensor	√	√	x	√	√	√	
SAIC MG	China	MG3 Zero	PDC (Parking Assist Control Module)	Stop distance control	√	√	x	√	√	x	
SAIC MG	China	MG3 Zero (2013)	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	0021 001B
SAIC MG	China	MG3 Zero (2013)	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	0021 001B
SAIC MG	China	MG3 Zero (2013)	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001E 001B 0003
SAIC MG	China	MG3 Zero (2013)	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001B
SAIC MG	China	MG3 Zero (2013)	TCM (Transmission Control Module)	Automatic transmission control module	√	√	x	√	√	x	002A
SAIC MG	China	MG3 Zero (2013)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	002B
SAIC MG	China	MG3 Zero (2013)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	002B 0031
SAIC MG	China	MG3 Zero (2013)	SDM (Airbag Control Module)	Airbag control unit	√	√	x	√	√	x	002C
SAIC MG	China	MG3 Zero (2013)	IPK (instrument module)	Combination instrument	√	√	x	√	√	√	0012 0011
SAIC MG	China	MG3 Zero (2013)	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	002D 002E 002F 0030
SAIC MG	China	MG3 Zero (2013)	RS (rainfall sensor)	Rain sensor	√	√	x	√	√	√	
SAIC MG	China	MG3 Zero (2013)	SAS (steering wheel angle sensor)	Steering wheel angle sensor	√	√	x	√	√	x	0032 0033
SAIC MG	China	MG5	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001B
SAIC MG	China	MG5	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001E 0004 001B 0003
SAIC MG	China	MG5	TCM (Transmission Control Module)	Transmission control module	√	√	x	√	√	x	001D
SAIC MG	China	MG5	TCM (Transmission Control Module)	Transmission control module	√	√	x	√	√	x	001C 001D
SAIC MG	China	MG5	TCM (Transmission Control Module)	Transmission control module	√	√	x	√	√	x	001C
SAIC MG	China	MG5	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	002B
SAIC MG	China	MG5	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	002B 0031
SAIC MG	China	MG5	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	002B 0034
SAIC MG	China	MG5	SDM (Airbag Control Module)	Airbag module	√	√	x	√	√	x	002C
SAIC MG	China	MG5	IPK (instrument module)	Combination instrument	√	√	x	√	√	√	0011 0012
SAIC MG	China	MG5	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	002D 002E 002F 0030
SAIC MG	China	MG5	ATC (Air Conditioning Control Module)	Air conditioning control module	√	√	x	√	√	√	
SAIC MG	China	MG5	SAS (steering wheel angle sensor)	Steering wheel angle sensor	√	√	x	√	x	x	0035
SAIC MG	China	MG6	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001B
SAIC MG	China	MG6	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001B
SAIC MG	China	MG6	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001B
SAIC MG	China	MG6	TCM (Transmission Control Module)	Transmission control module	√	√	x	√	√	x	0036
SAIC MG	China	MG6	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	002B 000F
SAIC MG	China	MG6	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	002B 000F
SAIC MG	China	MG6	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	002B 000F
SAIC MG	China	MG6	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	002B 000F
SAIC MG	China	MG6	SDM (Airbag Control Module)	Airbag control unit	√	√	x	√	√	x	002C
SAIC MG	China	MG6	SDM (Airbag Control Module)	Airbag control unit	√	√	x	√	√	x	002C
SAIC MG	China	MG6	IPK (instrument module)	Combination instrument	√	√	x	√	√	√	0012 0011
SAIC MG	China	MG6	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	0037 002D 002E 002F
SAIC MG	China	MG6	ATC (Air Conditioning Control Module)	Automatic air conditioning	√	√	x	√	√	√	
SAIC MG	China	MG6	RS (rainfall sensor)	Rain sensor	√	√	x	√	√	x	
SAIC MG	China	MG6	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	x	√	√	x	
SAIC MG	China	MG6	PDC (Parking Assist Control Module)	Automatic parking system	√	√	x	√	√	x	
SAIC MG	China	MG6	FICM (Navigation Entertainment System)	Car entertainment system	√	√	x	√	√	√	0038
SAIC MG	China	MG6	ETC (Electronic Temperature Control Module)	Automatic air conditioning	√	√	x	√	√	√	
SAIC MG	China	MG6(2013)	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	0021 001E 001B
SAIC MG	China	MG6(2013)	TCM (Transmission Control Module)	Transmission control module	√	√	x	√	√	x	0039 003A 003B 003C
SAIC MG	China	MG6(2013)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	002B 003D 000F
SAIC MG	China	MG6(2013)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	002B 003D 000F
SAIC MG	China	MG6(2013)	SDM (Airbag Control Module)	Airbag control unit	√	√	x	√	√	x	002C
SAIC MG	China	MG6(2013)	IPK (instrument module)	Combination instrument	√	√	x	√	√	√	0012 0011

SAIC MG	China	MG6(2013)	EPB (Electronic Parking Brake Module)	Electronic parking brake module	√	√	×	√	√	√	003E 000E 003F 0040 0041 0042 0043 0044
SAIC MG	China	MG6(2013)	BCM (Body Control Module)	Body control module	√	√	×	√	√	√	002D 002E 002F 0030
SAIC MG	China	MG6(2013)	ATC (Air Conditioning Control Module)	Automatic air conditioning	√	√	×	√	√	√	
SAIC MG	China	MG6(2013)	RS (rainfall sensor)	Rain sensor	√	√	×	√	√	×	
SAIC MG	China	MG6(2013)	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	×	√	√	×	
SAIC MG	China	MG6(2013)	PDC (Parking Assist Control Module)	Automatic parking system	√	√	×	√	√	×	
SAIC MG	China	MG6(2013)	FICM (Navigation Entertainment System)	Car entertainment system	√	√	×	√	√	√	0038
SAIC MG	China	MG6(2013)	ETC (Electronic Temperature Control Module)	Automatic air conditioning	√	√	×	√	√	√	
SAIC MG	China	MG6(2013)	SCU (Shift Control Unit)	Shift control unit	√	√	×	√	√	√	
SAIC MG	China	MG6(2014)	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	0021 0045 0046 001E 001B 0003
SAIC MG	China	MG6(2014)	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	0021 0045 001B 0003
SAIC MG	China	MG6(2014)	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	0047 0048 0023
SAIC MG	China	MG6(2014)	TCM (Transmission Control Module)	Transmission control module	√	√	×	√	√	×	0039 003A 003B 0049
SAIC MG	China	MG6(2014)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Dynamic stability control	√	√	×	√	√	×	002B 004A 000F
SAIC MG	China	MG6(2014)	SDM (Airbag Control Module)	Airbag control unit	√	√	×	√	√	×	002C
SAIC MG	China	MG6(2014)	IPK (instrument module)	Combination instrument	√	√	×	√	√	√	0012 0011
SAIC MG	China	MG6(2014)	EPB (Electronic Parking Brake Module)	Electronic parking brake	√	√	×	√	√	√	003E 000E 003F 0040 0041 0042 0043 0044
SAIC MG	China	MG6(2014)	BCM (Body Control Module)	Body control module	√	√	×	√	√	√	002D 002E 002F 0030
SAIC MG	China	MG6(2014)	ATC (Air Conditioning Control Module)	Air conditioning module	√	√	×	√	√	√	
SAIC MG	China	MG6(2014)	EPS (Electronic Power Steering System)	EHPs	√	√	×	√	√	×	
SAIC MG	China	MG6(2014)	AFS (Adaptive Headlights)	Adaptive front light system	√	√	×	√	√	√	004B 001A
SAIC MG	China	MG6(2014)	SAS (steering wheel angle sensor)	Angle sensor	√	√	×	√	√	×	004C 004D
SAIC MG	China	MG6(2014)	RS (rainfall sensor)	Rain sensor	√	√	×	√	√	×	
SAIC MG	China	MG6(2014)	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	×	√	√	×	
SAIC MG	China	MG6(2014)	PDC (Parking Assist Control Module)	Stop distance control	√	√	×	√	√	×	
SAIC MG	China	MG6(2014)	FICM (Navigation Entertainment System)	Car entertainment system	√	√	×	√	√	√	004E
SAIC MG	China	MG6(2014)	FICM (Navigation Entertainment System)	Car entertainment system	√	√	×	√	√	√	
SAIC MG	China	MG6(2014)	ETC (Electronic Temperature Control Module)	Automatic air conditioning	√	√	×	√	√	√	
SAIC MG	China	MG6(2014)	SCU (Shift Control Unit)	Shift control unit	√	√	×	√	√	×	
SAIC MG	China	MG6(2014)	TBOX (communication module)	Communication module	√	√	×	√	√	√	004F 0050 0051
SAIC MG	China	MG7(2008)	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	001B 0023
SAIC MG	China	MG7(2008)	TCM (Transmission Control Module)	Automatic transmission system	√	√	×	√	√	×	001D 0052
SAIC MG	China	MG7(2008)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	×	√	√	×	0010
SAIC MG	China	MG7(2008)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	×	√	√	×	
SAIC MG	China	MG7(2008)	SDM (Airbag Control Module)	Airbag module	√	√	×	√	√	×	002C
SAIC MG	China	MG7(2008)	IPK (instrument module)	Instrument unit	√	√	×	√	√	√	0012
SAIC MG	China	MG7(2008)	BCM (Body Control Module)	Body control module	√	√	×	√	√	√	0029 0053 0054 0055
SAIC MG	China	MG7(2008)	ATC (Air Conditioning Control Module)	Automatic air conditioning	√	√	×	√	√	√	
SAIC MG	China	MG7(2008)	FFC (Skylight)	Skylight	√	√	×	√	√	√	
SAIC MG	China	MG7(2008)	GIM (Anti-Theft System)	Anti-theft system	√	√	×	√	√	√	002E 002F
SAIC MG	China	MG7(2008)	GW (Gateway)	Gateway	√	√	×	√	×	×	
SAIC MG	China	MG7(2008)	LSM (LSM)	Lighting module	√	√	×	√	√	√	0037
SAIC MG	China	MG7(2008)	RS (rainfall sensor)	Rain sensor	√	√	×	√	√	×	
SAIC MG	China	MG7(2008)	SM (seat module)	Seat module	√	√	×	√	√	√	
SAIC MG	China	MG7(2009)	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	001B 0023
SAIC MG	China	MG7(2009)	TCM (Transmission Control Module)	Automatic transmission system	√	√	×	√	√	×	0052
SAIC MG	China	MG7(2009)	TCM (Transmission Control Module)	Automatic transmission system	√	√	×	√	√	×	001D 0052
SAIC MG	China	MG7(2009)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	×	√	√	×	0010
SAIC MG	China	MG7(2009)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	×	√	√	×	0010
SAIC MG	China	MG7(2009)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	×	√	√	×	0010 0056
SAIC MG	China	MG7(2009)	SDM (Airbag Control Module)	Airbag module	√	√	×	√	√	×	002C
SAIC MG	China	MG7(2009)	IPK (instrument module)	Instrument unit	√	√	×	√	√	×	0012
SAIC MG	China	MG7(2009)	BCM (Body Control Module)	Body control module	√	√	×	√	×	√	
SAIC MG	China	MG7(2009)	ATC (Air Conditioning Control Module)	Automatic air conditioning	√	√	×	√	√	√	
SAIC MG	China	MG7(2009)	DDSP (Power Window)	Power windows	√	√	×	√	×	×	
SAIC MG	China	MG7(2009)	GIM (Anti-Theft System)	Anti-theft system	√	√	×	√	√	√	002E 002F
SAIC MG	China	MG7(2009)	GW (Gateway)	Gateway	√	√	×	√	×	×	
SAIC MG	China	MG7(2009)	FLSM (Left Front Smart Motor)	Lighting module	√	√	×	√	×	×	

SAIC MG	China	MG7(2009)	FRSM (Front Right Smart Motor)	Right front smart motor	√	√	x	√	x	x	
SAIC MG	China	MG7(2009)	RLSM (Left Rear Smart Motor)	Smart Motor, Rear Left	√	√	x	√	x	x	
SAIC MG	China	MG7(2009)	RRSM (right rear smart motor)	Right rear smart motor	√	√	x	√	x	x	
SAIC MG	China	MG7(2009)	RS (rainfall sensor)	Rain sensor	√	√	x	√	x	x	
SAIC MG	China	MG7(2009)	SM (seat module)	Seat module	√	√	x	√	x	x	
SAIC MG	China	MG7-L	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001B
SAIC MG	China	MG7-L	TCM (Transmission Control Module)	Automatic transmission system	√	√	x	√	√	x	0052
SAIC MG	China	MG7-L	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	0010
SAIC MG	China	MG7-L	SDM (Airbag Control Module)	Airbag module	√	√	x	√	√	x	002C
SAIC MG	China	MG7-L	IPK (instrument module)	Instrument unit	√	√	x	√	√	√	0012
SAIC MG	China	MG7-L	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	0029 0053 0054 0055
SAIC MG	China	MG7-L	ATC (Air Conditioning Control Module)	Automatic air conditioning	√	√	x	√	√	√	
SAIC MG	China	MG7-L	FFC (Skylight)	Skylight	√	√	x	√	√	√	
SAIC MG	China	MG7-L	GIM (Anti-Theft System)	Anti-theft system	√	√	x	√	√	√	002E 002F
SAIC MG	China	MG7-L	LSM (LSM)	Lighting module	√	√	x	√	√	√	0037
SAIC MG	China	MG7-L	RS (rainfall sensor)	Rain sensor	√	√	x	√	√	x	
SAIC MG	China	MG7-L	SM (seat module)	Seat module	√	√	x	√	√	√	
SAIC MG	China	GT Ruixing (1.4T)	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001E 0004 001B 0003
SAIC MG	China	GT Ruixing (1.4T)	TCM (Transmission Control Module)	Transmission control module	√	√	x	√	√	√	0005
SAIC MG	China	GT Ruixing (1.4T)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	002B 0031
SAIC MG	China	GT Ruixing (1.4T)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	002B 0034
SAIC MG	China	GT Ruixing (1.4T)	SDM (Airbag Control Module)	Airbag control module	√	√	x	√	√	√	
SAIC MG	China	GT Ruixing (1.4T)	IPK (instrument module)	Combination instrument	√	√	x	√	√	√	0012 0011
SAIC MG	China	GT Ruixing (1.4T)	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	002D 002E 002F 0030
SAIC MG	China	GT Ruixing (1.4T)	EPS (Electronic Power Steering System)	Electric power steering	√	√	x	√	√	√	0015
SAIC MG	China	GT Ruixing (1.4T)	ATC (Air Conditioning Control Module)	Automatic air conditioning	√	√	x	√	√	√	0013
SAIC MG	China	GT Ruixing (1.4T)	FICM (Navigation Entertainment System)	Entertainment system control module	√	√	x	√	√	√	
SAIC MG	China	GT Ruixing (1.4T)	GW (Gateway)	Gateway	√	√	x	√	√	√	0057 0058
SAIC MG	China	GT Ruixing (1.4T)	SAS (steering wheel angle sensor)	Angle sensor	√	√	x	√	√	x	0035
SAIC MG	China	GT Ruixing (1.4T)	TBOX (communication module)	Communication module	√	√	x	√	√	√	004F 0050
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001E 0004 001B 0003
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	TCM (Transmission Control Module)	Automatic transmission control module	√	√	x	√	√	x	001C 001D
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	TCM (Transmission Control Module)	Automatic transmission control module	√	√	x	√	√	x	001C
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	002B 0031
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	0034 002B
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	SDM (Airbag Control Module)	Airbag control module	√	√	x	√	√	√	
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	IPK (instrument module)	Combination instrument	√	√	x	√	√	√	0012 0011
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	002D 002E 002F 0030
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	EPS (Electronic Power Steering System)	Electric power steering	√	√	x	√	√	√	0015
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	FICM (Navigation Entertainment System)	Entertainment system control module	√	√	x	√	√	√	
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	SAS (steering wheel angle sensor)	Angle sensor	√	√	x	√	√	x	0035
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	TBOX (communication module)	Communication module	√	√	x	√	√	√	004F 0050
SAIC MG	China	GT Ruixing (1.5VCT/1.5T)	TBOX (communication module)	Communication module	√	√	x	√	√	x	004F 0050 0051
SAIC MG	China	GS Ruiteng	EMS (Engine Management System)	Engine control module	√	√	x	√	√	√	001B
SAIC MG	China	GS Ruiteng	EMS (Engine Management System)	Engine control module	√	√	x	√	√	√	001B
SAIC MG	China	GS Ruiteng	TCM (Transmission Control Module)	Transmission control module	√	√	x	√	√	x	0039 003B 003C 0059
SAIC MG	China	GS Ruiteng	TCM (Transmission Control Module)	Transmission control module	√	√	x	√	√	√	005A
SAIC MG	China	GS Ruiteng	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Dynamic stability control system	√	√	x	√	√	x	0010 0006 0007
SAIC MG	China	GS Ruiteng	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Dynamic stability control system	√	√	x	√	√	x	0010
SAIC MG	China	GS Ruiteng	SDM (Airbag Control Module)	Airbag control module	√	√	x	√	√	x	
SAIC MG	China	GS Ruiteng	IPK (instrument module)	Combination instrument	√	√	x	√	√	√	0012 0011
SAIC MG	China	GS Ruiteng	EPB (Electronic Parking Brake Module)	Electronic parking brake module	√	√	x	√	√	x	005B 005C 005D 005E
SAIC MG	China	GS Ruiteng	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	0014
SAIC MG	China	GS Ruiteng	PEPS (Keyless Entry and Start System)	Keyless entry and start system	√	√	x	√	√	x	0016
SAIC MG	China	GS Ruiteng	ATC (Air Conditioning Control Module)	Air Conditioning System	√	√	x	√	√	√	0013
SAIC MG	China	GS Ruiteng	DHL (Dynamic Headlight Level Adjustment)	Dynamic headlight level adjustment	√	√	x	√	√	√	001A
SAIC MG	China	GS Ruiteng	EPS (Electronic Power Steering System)	Electric power steering	√	√	x	√	√	x	0015
SAIC MG	China	GS Ruiteng	SCU (Shift Control Unit)	Shift control unit (SCU)	√	√	x	√	√	x	
SAIC MG	China	GS Ruiteng	FICM (Navigation Entertainment System)	Entertainment system control module	√	√	x	√	√	√	

SAIC MG	China	GS Ruiteng	GW (Gateway)	Gateway	√	√	x	√	√	x	0018 0017
SAIC MG	China	GS Ruiteng	PDC (Parking Assist Control Module)	Parking assistance control module	√	√	x	√	√	√	
SAIC MG	China	GS Ruiteng	PMDC (DC converter with power management)	DC converter with power management	√	√	x	√	√	x	
SAIC MG	China	GS Ruiteng	SAS (steering wheel angle sensor)	Angle sensor	√	√	x	√	√	x	004C 004D
SAIC MG	China	GS Ruiteng	TBOX (communication module)	Communication module	√	√	x	√	√	x	004F 0050
SAIC MG	China	GS Ruiteng	TBOX (communication module)	Communication module	√	√	x	√	√	x	004F 0050
SAIC MG	China	GS Ruiteng	TCCM (four-wheel drive control module)	Four-wheel drive control module	√	√	x	√	√	x	005F
SAIC MG	China	New GS Ruiteng	EMS (Engine Management System)	Engine control module	√	√	x	√	√	√	0018 0060
SAIC MG	China	New GS Ruiteng	EMS (Engine Management System)	Engine System (EMS)	√	√	x	√	√	√	0018 0060
SAIC MG	China	New GS Ruiteng	TCM (Transmission Control Module)	Transmission control unit	√	√	x	√	√	x	0039 003B 003C 0059
SAIC MG	China	New GS Ruiteng	TCM (Transmission Control Module)	Transmission control unit	√	√	x	√	√	√	0005
SAIC MG	China	New GS Ruiteng	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	0010 0006 0007
SAIC MG	China	New GS Ruiteng	SDM (Airbag Control Module)	Airbag control module	√	√	x	√	√	x	
SAIC MG	China	New GS Ruiteng	IPK (instrument module)	Combination instrument	√	√	x	√	√	√	0012 0011
SAIC MG	China	New GS Ruiteng	EPB (Electronic Parking Brake Module)	Electronic parking brake module	√	√	x	√	√	x	005B 005C 005D 005E
SAIC MG	China	New GS Ruiteng	EPS (Electronic Power Steering System)	Electric power steering	√	√	x	√	√	√	0015
SAIC MG	China	New GS Ruiteng	FICM (Navigation Entertainment System)	Entertainment system control module	√	√	x	√	√	√	
SAIC MG	China	New GS Ruiteng	FICM (Navigation Entertainment System)	Entertainment system control module	√	√	x	√	√	√	
SAIC MG	China	New GS Ruiteng	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	0014
SAIC MG	China	New GS Ruiteng	PEPS (Keyless Entry and Start System)	Keyless entry and start system	√	√	x	√	√	x	0016
SAIC MG	China	New GS Ruiteng	TCCM (four-wheel drive control module)	Four-wheel drive control module	√	√	x	√	√	x	005F
SAIC MG	China	New GS Ruiteng	TPMS (Tire Pressure Control System)	Tire pressure control module	√	√	x	√	√	√	001F
SAIC MG	China	New GS Ruiteng	GW (Gateway)	Gateway module	√	√	x	√	√	x	0018 0017
SAIC MG	China	New GS Ruiteng	TBOX (communication module)	Communication module	√	√	x	√	√	x	0020 0019
SAIC MG	China	New GS Ruiteng	ATC (Air Conditioning Control Module)	Hybrid control unit	√	√	x	√	√	√	0013
SAIC MG	China	New GS Ruiteng	PMDC (DC converter with power management)	DC converter with power management	√	√	x	√	√	x	
SAIC MG	China	New GS Ruiteng	PDC (Parking Assist Control Module)	Parking assistance control module	√	√	x	√	√	√	
SAIC MG	China	New GS Ruiteng	SCU (Shift Control Unit)	Gear detection module	√	√	x	√	√	x	
SAIC MG	China	750	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001B 0023
SAIC MG	China	750	TCM (Transmission Control Module)	Automatic transmission system	√	√	x	√	√	x	0052
SAIC MG	China	750	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	0010 0061 0062 0063 0064 0065 0066
SAIC MG	China	750	SDM (Airbag Control Module)	Airbag module	√	√	x	√	√	x	002C
SAIC MG	China	750	IPK (instrument module)	Instrument unit	√	√	x	√	√	√	0067 0012
SAIC MG	China	750	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	0029 0053 0054 0055
SAIC MG	China	750	ATC (Air Conditioning Control Module)	Automatic air conditioning	√	√	x	√	√	√	
SAIC MG	China	750	FFC (Skylight)	Skylight	√	√	x	√	√	√	
SAIC MG	China	750	GIM (Anti-Theft System)	Anti-theft system	√	√	x	√	√	√	002E 002F
SAIC MG	China	750	LSM (LSM)	Lighting module	√	√	x	√	√	√	0037
SAIC MG	China	750	RS (rainfall sensor)	Rain sensor	√	√	x	√	√	x	
SAIC MG	China	750	SM (seat module)	Seat module	√	√	x	√	√	√	
SAIC MG	China	MG7(2008)	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001B 0023
SAIC MG	China	MG7(2008)	TCM (Transmission Control Module)	Automatic transmission system	√	√	x	√	√	x	001D 0052
SAIC MG	China	MG7(2008)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	0010
SAIC MG	China	MG7(2008)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	
SAIC MG	China	MG7(2008)	SDM (Airbag Control Module)	Airbag module	√	√	x	√	√	x	002C
SAIC MG	China	MG7(2008)	IPK (instrument module)	Instrument unit	√	√	x	√	√	√	0012
SAIC MG	China	MG7(2008)	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	0029 0053 0054 0055
SAIC MG	China	MG7(2008)	ATC (Air Conditioning Control Module)	Automatic air conditioning	√	√	x	√	√	√	
SAIC MG	China	MG7(2008)	FFC (Skylight)	Skylight	√	√	x	√	√	√	
SAIC MG	China	MG7(2008)	GIM (Anti-Theft System)	Anti-theft system	√	√	x	√	√	√	002E 002F
SAIC MG	China	MG7(2008)	GW (Gateway)	Gateway	√	√	x	√	x	x	
SAIC MG	China	MG7(2008)	LSM (LSM)	Lighting module	√	√	x	√	√	√	0037
SAIC MG	China	MG7(2008)	RS (rainfall sensor)	Rain sensor	√	√	x	√	√	x	
SAIC MG	China	MG7(2008)	SM (seat module)	Seat module	√	√	x	√	√	√	
SAIC MG	China	MG HS	EMS (Engine Management System)	Engine System (EMS)	√	√	x	√	√	√	
SAIC MG	China	MG HS	EMS (Engine Management System)	Engine System (EMS)	√	√	x	√	√	√	
SAIC MG	China	MG HS	EMS (Engine Management System)	Engine System (EMS)	√	√	x	√	√	√	
SAIC MG	China	MG HS	TCM (Transmission Control Module)	Transmission control unit	√	√	x	√	√	x	
SAIC MG	China	MG HS	TCM (Transmission Control Module)	Transmission control unit	√	√	x	√	√	√	

SAIC MG	China	MG HS	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control (SCS/ABS)	√	√	×	√	√	×	
SAIC MG	China	MG HS	SDM (Airbag Control Module)	Airbag Control Module (SDM)	√	√	×	√	√	×	
SAIC MG	China	MG HS	IPK (instrument module)	Instrument Module (IPK)	√	√	×	√	√	√	
SAIC MG	China	MG HS	IPK (instrument module)	Instrument Module (IPK)	√	√	×	√	√	√	
SAIC MG	China	MG HS	IPK (instrument module)	Instrument Module (IPK)	√	√	×	√	√	×	
SAIC MG	China	MG HS	EPB (Electronic Parking Brake Module)	Electronic parking brake module (EPB)	√	√	×	√	√	×	005B 005C 005D 005E
SAIC MG	China	MG HS	TPMS (Tire Pressure Control System)	Tire Pressure Control System (TPMS)	√	√	×	√	√	×	
SAIC MG	China	MG HS	RDA (Backdoor Alert System)	Backdoor Alert System (RDA)	√	√	×	√	√	×	
SAIC MG	China	MG HS	AVM (Panoramic Video System)	Panoramic Video System (AVM)	√	√	×	√	√	×	
SAIC MG	China	MG HS	ALCM (ambient light control system)	Ambient Light Control System (ALCM)	√	√	×	√	√	√	
SAIC MG	China	MG HS	BCM (Body Control Module)	Body Control Module (BCM)	√	√	×	√	√	√	
SAIC MG	China	MG HS	PEPS (Keyless Entry and Start System)	Keyless Entry and Start System (PEPS)	√	√	×	√	√	×	
SAIC MG	China	MG HS	TCCM (four-wheel drive control module)	Four-wheel drive control system (TCCM)	√	√	×	√	√	×	
SAIC MG	China	MG HS	ESCL (Electronic Steering Column Lock)		√	√	×	√	√	×	
SAIC MG	China	MG HS	EPS (Electronic Power Steering System)	Electronic Power Steering System (EPS)	√	√	×	√	√	√	
SAIC MG	China	MG HS	FICM (Navigation Entertainment System)	Navigation Entertainment System (FICM)	√	√	×	√	√	×	
SAIC MG	China	MG HS	FICM (Navigation Entertainment System)	Navigation Entertainment System (FICM)	√	√	×	√	√	√	
SAIC MG	China	MG HS	GW (Gateway)	Gateway (GW)	√	√	×	√	√	×	0017
SAIC MG	China	MG HS	FVCM (Front Camera Module)	Front camera module (FVCM)	√	√	×	√	√	×	
SAIC MG	China	MG HS	SCU (Shift Control Unit)	Shift control unit (SCU)	√	√	×	√	√	×	
SAIC MG	China	MG HS	SCU (Shift Control Unit)	Shift control unit (SCU)	√	√	×	√	√	√	
SAIC MG	China	MG HS	ATC (Air Conditioning Control Module)	Automatic Air Conditioning System (AC)	√	√	×	√	√	√	
SAIC MG	China	MG HS	PLCM (electric tailgate control module)	Electric tailgate control module (PLCM)	√	√	×	√	√	×	
SAIC MG	China	MG HS	TBOX (communication module)	Communication module (TBOX)	√	√	×	√	√	×	
SAIC MG	China	EZS(ZS11E)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control (SCS/ABS)	√	√	×	√	√	×	
SAIC MG	China	EZS(ZS11E)	SDM (Airbag Control Module)	Airbag Control Module (SDM)	√	√	×	√	√	×	
SAIC MG	China	EZS(ZS11E)	IPK (instrument module)	Instrument Module (IPK)	√	√	×	√	√	×	0012
SAIC MG	China	EZS(ZS11E)	EPB (Electronic Parking Brake Module)	Electronic parking brake module (EPB)	√	√	×	√	√	√	0068 0008 0009 000A 000B 000C 000D
SAIC MG	China	EZS(ZS11E)	TPMS (Tire Pressure Control System)	Tire Pressure Control System (TPMS)	√	√	×	√	√	×	
SAIC MG	China	EZS(ZS11E)	TBOX (communication module)	Communication module (TBOX)	√	√	×	√	√	×	
SAIC MG	China	EZS(ZS11E)	GW (Gateway)	Gateway (GW)	√	√	×	√	√	×	0017
SAIC MG	China	EZS(ZS11E)	SCU (Shift Control Unit)	Shift control unit (SCU)	√	√	×	√	√	√	
SAIC MG	China	EZS(ZS11E)	VCU (Vehicle Control Module)	Vehicle Control Module (VCU)	√	√	×	√	√	√	
SAIC MG	China	EZS(ZS11E)	TC (Traction Motor Controller)	Traction Motor Controller (TC)	√	√	×	√	√	×	
SAIC MG	China	EZS(ZS11E)	DCDC (Direct Current Converter)	Direct Current Converter (DCDC)	√	√	×	√	√	×	
SAIC MG	China	EZS(ZS11E)	BMS (Battery Management Module)	Battery Management Module (BMS)	√	√	×	√	√	√	
SAIC MG	China	EZS(ZS11E)	OBC (on-board charging module)	On-board charging module (OBC)	√	√	×	√	√	×	
SAIC MG	China	EZS(ZS11E)	EPS (Electronic Power Steering System)	Electronic Power Steering System (EPS)	√	√	×	√	√	√	
SAIC MG	China	EZS(ZS11E)	BCM (Body Control Module)	Body Control Module (BCM)	√	√	×	√	√	√	
SAIC MG	China	EZS(ZS11E)	PEPS (Keyless Entry and Start System)	Keyless Entry and Start System (PEPS)	√	√	×	√	√	×	
SAIC MG	China	EZS(ZS11E)	ATC (Air Conditioning Control Module)	Automatic Air Conditioning System (AC)	√	√	×	√	√	√	
SAIC MG	China	EZS(ZS11E)	FICM (Navigation Entertainment System)	Navigation Entertainment System (FICM)	√	√	×	√	√	√	
SAIC MG	China	EZS(ZS11E)	FICM (Navigation Entertainment System)	Navigation Entertainment System (FICM)	√	√	×	√	√	×	
SAIC MG	European Union	MG ZS EU	EMS (Engine Management System)	Engine control module	√	√	×	√	√	√	001B 0003 0004
SAIC MG	European Union	MG ZS EU	EMS (Engine Management System)	Engine control module	√	√	×	√	√	√	001B 0003 0004
SAIC MG	European Union	MG ZS EU	TCM (Transmission Control Module)	Transmission control unit	√	√	×	√	√	×	001C 001D
SAIC MG	European Union	MG ZS EU	TCM (Transmission Control Module)	Transmission control unit	√	√	×	√	√	×	001C
SAIC MG	European Union	MG ZS EU	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	×	√	√	×	0006 0010
SAIC MG	European Union	MG ZS EU	SDM (Airbag Control Module)	Airbag module	√	√	×	√	√	×	
SAIC MG	European Union	MG ZS EU	SDM (Airbag Control Module)	Airbag module	√	√	×	√	√	×	
SAIC MG	European Union	MG ZS EU	IPK (instrument module)	Instrument module	√	√	×	√	√	√	0012
SAIC MG	European Union	MG ZS EU	EPS (Electronic Power Steering System)	Electric power steering	√	√	×	√	√	√	0015
SAIC MG	European Union	MG ZS EU	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	×	√	√	×	
SAIC MG	European Union	MG ZS EU	ATC (Air Conditioning Control Module)	Air conditioning control module	√	√	×	√	√	√	0013
SAIC MG	European Union	MG ZS EU	FICM (Navigation Entertainment System)	Navigation entertainment system	√	√	×	√	√	×	
SAIC MG	European Union	MG ZS EU	FICM (Navigation Entertainment System)	Navigation entertainment system	√	√	×	√	√	√	
SAIC MG	European Union	MG ZS EU	FICM (Navigation Entertainment System)	Navigation entertainment system	√	√	×	√	√	×	
SAIC MG	European Union	MG ZS EU	BCM (Body Control Module)	Body control module	√	√	×	√	√	√	001E 0014
SAIC MG	European Union	MG ZS EU	TPMS (Tire Pressure Control System)	Tire pressure control module	√	√	×	√	√	√	001F
SAIC MG	European Union	MG ZS EU	TBOX (communication module)	Communication module	√	√	×	√	√	×	0020 0019
SAIC MG	European Union	MG3 EU	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	0021 001B
SAIC MG	European Union	MG3 EU	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	001E 001B 0003

SAIC MG	European Union	MG3 EU	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Dynamic stability control	√	√	×	√	√	×	002B 0031
SAIC MG	European Union	MG3 EU	SDM (Airbag Control Module)	Airbag control unit	√	√	×	√	√	×	
SAIC MG	European Union	MG3 EU	IPK (instrument module)	Combination instrument	√	√	×	√	√	√	0012 0011
SAIC MG	European Union	MG3 EU	BCM (Body Control Module)	Body control module	√	√	×	√	√	√	002D 002E 002F 0030
SAIC MG	European Union	MG3 EU	RS (rainfall sensor)	Rain sensor	√	√	×	√	√	√	
SAIC MG	European Union	MG3 EU	SAS (steering wheel angle sensor)	Steering wheel angle sensor	√	√	×	√	√	×	0032 0033
SAIC MG	European Union	MG6 EU	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	001B
SAIC MG	European Union	MG6 EU	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	×	√	√	×	002B 003D 000F
SAIC MG	European Union	MG6 EU	SDM (Airbag Control Module)	Airbag control unit	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU	IPK (instrument module)	Combination instrument	√	√	×	√	√	√	0012 0011
SAIC MG	European Union	MG6 EU	BCM (Body Control Module)	Body control module	√	√	×	√	√	√	0037 002E 002F 0030 002D
SAIC MG	European Union	MG6 EU	ATC (Air Conditioning Control Module)	Automatic air conditioning	√	√	×	√	√	√	
SAIC MG	European Union	MG6 EU	RS (rainfall sensor)	Rain sensor	√	√	×	√	√	√	
SAIC MG	European Union	MG6 EU	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU	PDC (Parking Assist Control Module)	Stop distance control	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU	FICM (Navigation Entertainment System)	Car entertainment system	√	√	×	√	×	√	0038
SAIC MG	European Union	MG6 EU	ETC (Electronic Temperature Control Module)	Electronic air conditioner	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU DIESEL	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	0047 0048
SAIC MG	European Union	MG6 EU DIESEL	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	×	√	√	×	002B 003D 000F
SAIC MG	European Union	MG6 EU DIESEL	SDM (Airbag Control Module)	Airbag control unit	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU DIESEL	IPK (instrument module)	Combination instrument	√	√	×	√	√	√	0012 0011
SAIC MG	European Union	MG6 EU DIESEL	BCM (Body Control Module)	Body control module	√	√	×	√	√	√	0037 002E 002F 0030 002D
SAIC MG	European Union	MG6 EU DIESEL	ATC (Air Conditioning Control Module)	Automatic air conditioning	√	√	×	√	√	√	
SAIC MG	European Union	MG6 EU DIESEL	RS (rainfall sensor)	Rain sensor	√	√	×	√	√	√	
SAIC MG	European Union	MG6 EU DIESEL	EPS (Electronic Power Steering System)	EHPS	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU DIESEL	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU DIESEL	PDC (Parking Assist Control Module)	Stop distance control	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU DIESEL	FICM (Navigation Entertainment System)	Car entertainment system	√	√	×	√	×	√	0038
SAIC MG	European Union	MG6 EU(2014)	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	0021 0045 0046 001E 001B 0003
SAIC MG	European Union	MG6 EU(2014)	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	0021 0045 001B 0003
SAIC MG	European Union	MG6 EU(2014)	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	0047 0048 0023
SAIC MG	European Union	MG6 EU(2014)	TCM (Transmission Control Module)	Transmission control module	√	√	×	√	√	×	0039 003A 003B 0049
SAIC MG	European Union	MG6 EU(2014)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Dynamic stability control	√	√	×	√	√	×	002B 004A 000F
SAIC MG	European Union	MG6 EU(2014)	SDM (Airbag Control Module)	Airbag control unit	√	√	×	√	√	×	002C
SAIC MG	European Union	MG6 EU(2014)	IPK (instrument module)	Combination instrument	√	√	×	√	√	√	0012 0011
SAIC MG	European Union	MG6 EU(2014)	EPB (Electronic Parking Brake Module)	Electronic parking brake	√	√	×	√	√	√	003E 000E 003F 0040 0041 0042 0043 0044
SAIC MG	European Union	MG6 EU(2014)	BCM (Body Control Module)	Body control module	√	√	×	√	√	√	002D 002E 002F 0030
SAIC MG	European Union	MG6 EU(2014)	ATC (Air Conditioning Control Module)	Air conditioning module	√	√	×	√	√	√	
SAIC MG	European Union	MG6 EU(2014)	EPS (Electronic Power Steering System)	EHPS	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU(2014)	AFS (Adaptive Headlights)	Adaptive front light system	√	√	×	√	√	√	004B 001A
SAIC MG	European Union	MG6 EU(2014)	SAS (steering wheel angle sensor)	Angle sensor	√	√	×	√	√	×	004C 004D
SAIC MG	European Union	MG6 EU(2014)	RS (rainfall sensor)	Rain sensor	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU(2014)	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU(2014)	PDC (Parking Assist Control Module)	Stop distance control	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU(2014)	FICM (Navigation Entertainment System)	Car entertainment system	√	√	×	√	√	√	004E
SAIC MG	European Union	MG6 EU(2014)	FICM (Navigation Entertainment System)	Car entertainment system	√	√	×	√	√	√	
SAIC MG	European Union	MG6 EU(2014)	ETC (Electronic Temperature Control Module)	Automatic air conditioning	√	√	×	√	√	√	
SAIC MG	European Union	MG6 EU(2014)	SCU (Shift Control Unit)	Shift control unit	√	√	×	√	√	×	
SAIC MG	European Union	MG6 EU(2014)	TBOX (communication module)	Communication module	√	√	×	√	√	√	004F 0050 0051
SAIC MG	European Union	GS Ruiteng	EMS (Engine Management System)	Engine control module	√	√	×	√	√	√	001B
SAIC MG	European Union	GS Ruiteng	EMS (Engine Management System)	Engine control module	√	√	×	√	√	√	001B
SAIC MG	European Union	GS Ruiteng	TCM (Transmission Control Module)	Transmission control module	√	√	×	√	√	×	0039 003B 003C 0059
SAIC MG	European Union	GS Ruiteng	TCM (Transmission Control Module)	Transmission control module	√	√	×	√	√	√	005A
SAIC MG	European Union	GS Ruiteng	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Dynamic stability control system	√	√	×	√	√	×	0010 0006 0007
SAIC MG	European Union	GS Ruiteng	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Dynamic stability control system	√	√	×	√	√	×	0010
SAIC MG	European Union	GS Ruiteng	SDM (Airbag Control Module)	Airbag control module	√	√	×	√	√	×	
SAIC MG	European Union	GS Ruiteng	IPK (instrument module)	Combination instrument	√	√	×	√	√	√	0012 0011
SAIC MG	European Union	GS Ruiteng	EPB (Electronic Parking Brake Module)	Electronic parking brake module	√	√	×	√	√	×	005B 005C 005D 005E

SAIC MG	European Union	GS Ruiteng	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	0014
SAIC MG	European Union	GS Ruiteng	PEPS (Keyless Entry and Start System)	Keyless entry and start system	√	√	x	√	√	x	0016
SAIC MG	European Union	GS Ruiteng	ATC (Air Conditioning Control Module)	Air Conditioning System	√	√	x	√	√	√	0013
SAIC MG	European Union	GS Ruiteng	DHL (Dynamic Headlight Level Adjustment)	Dynamic headlight level adjustment	√	√	x	√	√	√	001A
SAIC MG	European Union	GS Ruiteng	EPS (Electronic Power Steering System)	Electric power steering	√	√	x	√	√	x	0015
SAIC MG	European Union	GS Ruiteng	SCU (Shift Control Unit)	Shift control unit (SCU)	√	√	x	√	√	x	
SAIC MG	European Union	GS Ruiteng	FICM (Navigation Entertainment System)	Entertainment system control module	√	√	x	√	√	√	
SAIC MG	European Union	GS Ruiteng	GW (Gateway)	Gateway	√	√	x	√	√	x	0018 0017
SAIC MG	European Union	GS Ruiteng	PDC (Parking Assist Control Module)	Parking assistance control module	√	√	x	√	√	√	
SAIC MG	European Union	GS Ruiteng	PMDC (DC converter with power management)	DC converter with power management	√	√	x	√	√	x	
SAIC MG	European Union	GS Ruiteng	SAS (steering wheel angle sensor)	Angle sensor	√	√	x	√	√	x	004C 004D
SAIC MG	European Union	GS Ruiteng	TBOX (communication module)	Communication module	√	√	x	√	√	x	004F 0050
SAIC MG	European Union	GS Ruiteng	TBOX (communication module)	Communication module	√	√	x	√	√	x	004F 0050
SAIC MG	European Union	GS Ruiteng	TCCM (four-wheel drive control module)	Four-wheel drive control module	√	√	x	√	√	x	005F
SAIC MG	Thailand	MG ZS TT	EMS (Engine Management System)	Engine control module	√	√	x	√	√	√	001B 0003 0004
SAIC MG	Thailand	MG ZS TT	EMS (Engine Management System)	Engine control module	√	√	x	√	√	√	001B 0003 0004
SAIC MG	Thailand	MG ZS TT	TCM (Transmission Control Module)	Transmission control unit	√	√	x	√	√	x	001C 001D
SAIC MG	Thailand	MG ZS TT	TCM (Transmission Control Module)	Transmission control unit	√	√	x	√	√	x	001C
SAIC MG	Thailand	MG ZS TT	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	0006 0010
SAIC MG	Thailand	MG ZS TT	SDM (Airbag Control Module)	Airbag module	√	√	x	√	√	x	
SAIC MG	Thailand	MG ZS TT	SDM (Airbag Control Module)	Airbag module	√	√	x	√	√	x	
SAIC MG	Thailand	MG ZS TT	IPK (instrument module)	Instrument module	√	√	x	√	√	√	0012
SAIC MG	Thailand	MG ZS TT	EPS (Electronic Power Steering System)	Electric power steering	√	√	x	√	√	√	0015
SAIC MG	Thailand	MG ZS TT	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	x	√	√	x	
SAIC MG	Thailand	MG ZS TT	ATC (Air Conditioning Control Module)	Air conditioning control module	√	√	x	√	√	√	0013
SAIC MG	Thailand	MG ZS TT	FICM (Navigation Entertainment System)	Navigation entertainment system	√	√	x	√	√	x	
SAIC MG	Thailand	MG ZS TT	FICM (Navigation Entertainment System)	Navigation entertainment system	√	√	x	√	√	√	
SAIC MG	Thailand	MG ZS TT	FICM (Navigation Entertainment System)	Navigation entertainment system	√	√	x	√	√	x	
SAIC MG	Thailand	MG ZS TT	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	001E 0014
SAIC MG	Thailand	MG ZS TT	TPMS (Tire Pressure Control System)	Tire pressure control module	√	√	x	√	√	√	001F
SAIC MG	Thailand	MG ZS TT	TBOX (communication module)	Communication module	√	√	x	√	√	x	0020 0019
SAIC MG	Thailand	MG3 TT	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	0021 001B
SAIC MG	Thailand	MG3 TT	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	0021 001B
SAIC MG	Thailand	MG3 TT	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001E 001B 0003
SAIC MG	Thailand	MG3 TT	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001B
SAIC MG	Thailand	MG3 TT	TCM (Transmission Control Module)	Automatic transmission control module	√	√	x	√	√	x	002A
SAIC MG	Thailand	MG3 TT	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	002B
SAIC MG	Thailand	MG3 TT	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system	√	√	x	√	√	x	002B 0031
SAIC MG	Thailand	MG3 TT	SDM (Airbag Control Module)	Airbag control unit	√	√	x	√	√	x	002C
SAIC MG	Thailand	MG3 TT	IPK (instrument module)	Combination instrument	√	√	x	√	√	√	0012 0011
SAIC MG	Thailand	MG3 TT	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	002D 002E 002F 0030
SAIC MG	Thailand	MG3 TT	RS (rainfall sensor)	Rain sensor	√	√	x	√	√	√	
SAIC MG	Thailand	MG3 TT	SAS (steering wheel angle sensor)	Steering wheel angle sensor	√	√	x	√	√	x	0032 0033
SAIC MG	Thailand	MG5	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	001E 0004 001B 0003
SAIC MG	Thailand	MG5	TCM (Transmission Control Module)	Automatic transmission control module	√	√	x	√	√	x	001C 001D
SAIC MG	Thailand	MG5	TCM (Transmission Control Module)	Automatic transmission control module	√	√	x	√	√	x	001C
SAIC MG	Thailand	MG5	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	002B 0031
SAIC MG	Thailand	MG5	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	0034 002B
SAIC MG	Thailand	MG5	SDM (Airbag Control Module)	Airbag control module	√	√	x	√	√	√	
SAIC MG	Thailand	MG5	IPK (instrument module)	Combination instrument	√	√	x	√	√	√	0012 0011
SAIC MG	Thailand	MG5	BCM (Body Control Module)	Body control module	√	√	x	√	√	√	002D 002E 002F 0030
SAIC MG	Thailand	MG5	EPS (Electronic Power Steering System)	Electric power steering	√	√	x	√	√	√	0015
SAIC MG	Thailand	MG5	FICM (Navigation Entertainment System)	Entertainment system control module	√	√	x	√	√	√	
SAIC MG	Thailand	MG5	SAS (steering wheel angle sensor)	Angle sensor	√	√	x	√	√	x	0035
SAIC MG	Thailand	MG5	TBOX (communication module)	Communication module	√	√	x	√	√	√	004F 0050
SAIC MG	Thailand	MG5	TBOX (communication module)	Communication module	√	√	x	√	√	x	004F 0050 0051
SAIC MG	Thailand	MG6 TT	EMS (Engine Management System)	Engine Management System	√	√	x	√	√	√	0021 001B
SAIC MG	Thailand	MG6 TT	TCM (Transmission Control Module)	Automatic transmission control module	√	√	x	√	√	x	0039 003A 003B 0049
SAIC MG	Thailand	MG6 TT	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	x	√	√	x	002B

SAIC MG	Thailand	MG6 TT	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Anti-lock braking system/dynamic stability control	√	√	×	√	√	×	002B 003D 000F
SAIC MG	Thailand	MG6 TT	SDM (Airbag Control Module)	Airbag control unit	√	√	×	√	√	×	
SAIC MG	Thailand	MG6 TT	IPK (instrument module)	Combination instrument	√	√	×	√	√	√	0012 0011
SAIC MG	Thailand	MG6 TT	EPB (Electronic Parking Brake Module)	Electronic parking brake	√	√	×	√	√	√	003E 000E 003F 0040 0041 0042 0043 0044
SAIC MG	Thailand	MG6 TT	BCM (Body Control Module)	Body control module	√	√	×	√	√	√	002D 002E 002F 0030
SAIC MG	Thailand	MG6 TT	ATC (Air Conditioning Control Module)	Automatic air conditioning	√	√	×	√	√	√	
SAIC MG	Thailand	MG6 TT	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	×	√	√	×	
SAIC MG	Thailand	MG6 TT	RS (rainfall sensor)	Rain sensor	√	√	×	√	√	×	
SAIC MG	Thailand	MG6 TT	PDC (Parking Assist Control Module)	Stop distance control	√	√	×	√	√	×	
SAIC MG	Thailand	MG6 TT	ETC (Electronic Temperature Control Module)	Electronic air conditioner	√	√	×	√	√	×	
SAIC MG	Thailand	MG6 TT	SCU (Shift Control Unit)	Shift control unit	√	√	×	√	√	√	
SAIC MG	Thailand	MG6 TT (2015)	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	0021 0045 0046 001E 001B 0003
SAIC MG	Thailand	MG6 TT (2015)	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	0021 0045 001B 0003
SAIC MG	Thailand	MG6 TT (2015)	EMS (Engine Management System)	Engine Management System	√	√	×	√	√	√	0047 0048 0023
SAIC MG	Thailand	MG6 TT (2015)	TCM (Transmission Control Module)	Transmission control module	√	√	×	√	√	×	0039 003A 003B 0049
SAIC MG	Thailand	MG6 TT (2015)	SCS/ABS (Anti-lock Braking System/Dynamic Stability Control)	Dynamic stability control	√	√	×	√	√	×	002B 004A 000F
SAIC MG	Thailand	MG6 TT (2015)	SDM (Airbag Control Module)	Airbag control unit	√	√	×	√	√	×	002C
SAIC MG	Thailand	MG6 TT (2015)	IPK (instrument module)	Combination instrument	√	√	×	√	√	√	0012 0011
SAIC MG	Thailand	MG6 TT (2015)	EPB (Electronic Parking Brake Module)	Electronic parking brake	√	√	×	√	√	√	003E 000E 003F 0040 0041 0042 0043 0044
SAIC MG	Thailand	MG6 TT (2015)	BCM (Body Control Module)	Body control module	√	√	×	√	√	√	002D 002E 002F 0030
SAIC MG	Thailand	MG6 TT (2015)	ATC (Air Conditioning Control Module)	Air conditioning module	√	√	×	√	√	√	
SAIC MG	Thailand	MG6 TT (2015)	EPS (Electronic Power Steering System)	EHP5	√	√	×	√	√	×	
SAIC MG	Thailand	MG6 TT (2015)	AFS (Adaptive Headlights)	Adaptive front light system	√	√	×	√	√	√	004B 001A
SAIC MG	Thailand	MG6 TT (2015)	SAS (steering wheel angle sensor)	Angle sensor	√	√	×	√	√	×	004C 004D
SAIC MG	Thailand	MG6 TT (2015)	RS (rainfall sensor)	Rain sensor	√	√	×	√	√	×	
SAIC MG	Thailand	MG6 TT (2015)	ESCL (Electronic Steering Column Lock)	Electronic steering column lock	√	√	×	√	√	×	
SAIC MG	Thailand	MG6 TT (2015)	PDC (Parking Assist Control Module)	Stop distance control	√	√	×	√	√	×	
SAIC MG	Thailand	MG6 TT (2015)	FICM (Navigation Entertainment System)	Car entertainment system	√	√	×	√	√	√	004E
SAIC MG	Thailand	MG6 TT (2015)	FICM (Navigation Entertainment System)	Car entertainment system	√	√	×	√	√	√	
SAIC MG	Thailand	MG6 TT (2015)	ETC (Electronic Temperature Control Module)	Automatic air conditioning	√	√	×	√	√	√	
SAIC MG	Thailand	MG6 TT (2015)	SCU (Shift Control Unit)	Shift control unit	√	√	×	√	√	×	
SAIC MG	Thailand	MG6 TT (2015)	TBOX (communication module)	Communication module	√	√	×	√	√	√	004F 0050 0051